

# CD/USB Receiver Firmware Update Guide

## Introduction

- This document describes the procedure and precautions for upgrading the CD/USB receiver firmware.
- If an error occurs while you are updating the firmware, the CD/USB receiver may become unusable. Be sure to read the following procedure and precautions carefully before updating the firmware.
- For basic operations of the CD/USB receiver, refer to the appropriate instruction manual for your model.

## Target Model and Firmware Version

The updater can be used for the firmware versions of the models shown below.

Target models	Target firmware versions → Updated versions	Updater file name (size)
KDC-1030U, KDC-120UB, KDC-120UG, KDC-120UR, KDC-152R, KDC-MP172U, RDT-201, U330L, U330W	Ver V105 or earlier → V106	te1713k.krm (1.90 MB)
KDC-120U, KDC-153UM, KDC-172Y, KDC-220UI	Ver V105 or earlier → V106	te1701k.krm (1.90 MB)
KMM-104, KMM-104AY, KMM-104GY, KMM-104RY, KMM-122, KMM-204, U330MS	Ver V105 or earlier → V106	ml1744k.krm (1.90 MB)
KMM-124	Ver V105 or earlier → V106	ml1749e.krm (1.90 MB)
KDC-BT22, KDC-BT272U, KDC-BT520U, KDC-MP372BT, KMM-BT204, KMM-BT222U, KMM-BT240U, U330BT	Ver V121 or earlier → V122	te1707k.krm (7.10 MB)
DPX-5100BT, DPX-M3100BT, DPX-U740BT, DPX303MBT, DPX503BT, DPX-523BT, DPX540BT, DPX593BT, KDC-320UI, KDC-320UIM, KDC-BT32, KDC-BT340U, KDC-BT372U, KDC-BT620U, KDC-X302, KMM-304Y, KMM-BT304, KMM-BT322, KMM-BT322U, KMR-D372BT, KMR-M322BT, KMR-U371BT, U370BT	Ver V127 or earlier → V128	te1706k.krm (7.10 MB)
DPX-7100DAB	Ver V113 or earlier → V114	te1720e.krm (6.90 MB)
KMM-BT504DAB	Ver V113 or earlier → V114	te1720e.krm (6.90 MB)
KDC-BT720DAB	Ver V113 or earlier → V114	te1720e.krm (6.90 MB)
DPX793BH	Ver V107 or earlier → V108	te1747k.krm (6.90 MB)
KMM-BT522HD	Ver V107 or earlier → V108	te1747k.krm (6.90 MB)
KDC-BT572U, KDC-X502, KDC-X5200BT, KDC-X5200BTM, KMR-D772BT	Ver V114 or earlier → V115	te1730.krm (6.90 MB)
KDC-X7200DAB	Ver V107 or earlier → V108	te1736e.krm (6.90 MB)
KDC-BT772HD, KDC-X702	Ver V108 or earlier → V109	te1734k.krm (6.90 MB)



- For how to check your firmware version, refer to "Checking the Firmware Version".

## Work Flow

- Step 1** Download the firmware files, and copy them to USB memory.
- Step 2** Update the firmware. (It takes about 3 minutes.)  
Reset the CD/USB receiver.
- Step 3** Check that the firmware has been updated.

## Creating the Update Media

Create the update media on your PC.

1. Download the appropriate updater for the model and firmware version to update.
2. Copy the updater to the top of hierarchy in USB memory.



- You can also copy the updater to a device containing audio files and update the firmware from it.
- Update cannot be performed if it is copied inside a folder.
- If the updater file name is changed, update cannot be performed.

## Checking the Firmware Version

1. Press the [SRC] button and select "STANDBY" (standby state).
2. Press the [VOL] knob to enter the function mode.  
"FUNCTION"/"DISPLAY" is displayed.
3. Turn the [VOL] knob to display "SYSTEM", and press the [VOL] knob.
4. Turn the [VOL] knob to display "F/W UPDATE", and press the [VOL] knob.
5. Turn the [VOL] knob to display "UPDATE SYSTEM", and press the [VOL] knob.  
Current firmware version is displayed.

## Firmware Update Procedure

1. Connect the updater media to the CD/USB receiver.
2. When an audio file is played or "NO MUSIC" is displayed, press the [SRC] button and select "STANDBY" (standby state).
3. Press the [VOL] knob to enter the function mode.  
"FUNCTION"/"DISPLAY" is displayed.
4. Turn the [VOL] knob to display "SYSTEM", and press the [VOL] knob.
5. Turn the [VOL] knob to display "F/W UPDATE", and press the [VOL] knob.
6. Turn the [VOL] knob to display "UPDATE SYSTEM", and press the [VOL] knob.
7. Press the [VOL] knob again.  
"FILE CHECK" is displayed.
8. Turn the [VOL] knob to display "YES", and press the [VOL] knob.  
Update starts with "UPDATING" displayed. Update should finish in **approximately 3 minutes** and "COMPLETED" is displayed upon completion.
9. The receiver reboots automatically.  
Update on the firmware takes effect.
10. Check that the firmware version is updated, by referring to "Checking the Firmware Version".



### • When "NO FILE" is displayed

- Check if the updater is on the top of hierarchy.
- Check if the updater file name is appropriate for the model to update.

### • If "WAIT" is displayed more than 5 minutes, you may fail the firmware update. In this case, check the following items

- Pull out the USB memory and insert it again.
- Check if your USB memory has security function. If so use the one without security function.
- Your USB memory may have problem. Update with another USB memory.
- The firmware is not downloaded and copied to the USB memory successfully.  
Download and copy it again.

## Precautions

- Be sure to park the vehicle in a safe place before updating. Keep the engine running in order to prevent battery from running out.
- **Do not turn off the engine or CD/USB receiver power while updating.**  
Update cannot be performed correctly and the CD/USB receiver may become unusable.