

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
71	SWING DOOR ELECTRIC LOCKING
101	CIGARETTE LIGHTER
103	ALTERNATOR
104	STARTING SWITCH
105	MAIN ELECTROMAGNETIC HORN
107	BATTERY
118	ANTI-LOCK BRAKING SYSTEM COMPUTER
120	INJECTION COMPUTER
123	CENTRAL DOOR LOCKING CONTROL
125	HAZARD WARNING LIGHT CONTROL
128	HEATED REAR WINDOW CONTROL
130	REAR RIGHT-HAND ELECTRIC WINDOW CONTROL
131	REAR LEFT-HAND ELECTRIC WINDOW CONTROL
132	DRIVER'S SIDE ELECTRIC WINDOW CONTROL
133	PASSENGER'S SIDE ELECTRIC WINDOW CONTROL
134	ELECTRIC REAR-VIEW MIRROR CONTROL
135	REAR WINDOW WINDER LOCKING SWITCH
138	REAR RIGHT DOOR ELECTRIC LOCKING
139	REAR LEFT DOOR ELECTRIC LOCKING
140	DRIVER'S DOOR ELECTRIC LOCKING
141	CENTRAL LOCKING FOR PASSENGER DOOR
142	BOOT LID ELECTRIC LOCKING
145	COMBINED WIPER-WASHER
146	PINKING SENSOR 1
147	ATMOSPHERIC PRESSURE SENSOR
149	TDC SENSOR
150	RIGHT REAR WHEEL SENSOR
151	LEFT REAR WHEEL SENSOR
152	RIGHT FRONT WHEEL SENSOR
153	LEFT FRONT WHEEL SENSOR
154	TAILGATE SWITCH
155	REVERSING LIGHTS SWITCH
156	HANDBRAKE SWITCH
160	BRAKE SWITCH
161	PASSENGER GLOVEBOX SWITCH
163	STARTER
164	COLD AIR BLOWER
165	LUGGAGE COMPARTMENT LIGHTING
168	GLOVE COMPARTMENT LIGHT
171	AIR CONDITIONING CLUTCH
172	RIGHT REAR LIGHT
173	LEFT REAR LIGHT
176	RIGHT FRONT FOGLIGHT
177	LEFT FRONT FOGLIGHT
178	RIGHT REAR RABBET SWITCH
179	LEFT REAR RABBET SWITCH
180	DRIVER'S RABBET SWITCH
181	PASSENGER'S RABBET SWITCH
184	RIGHT HEADLIGHT
185	LEFT HEADLIGHT
186	POWER ASSISTED STEERING ELECTRIC PUMP UNIT
188	COOLING FAN UNIT
189	RIGHT REAR SPEAKER

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
190	LEFT REAR SPEAKER
191	FRONT RIGHT DOOR SPEAKER
192	FRONT LEFT DOOR SPEAKER
193	INJECTOR 1
194	INJECTOR 2
195	INJECTOR 3
196	INJECTOR 4
199	FUEL GAUGE
200	REAR SCREEN DE-ICING
201	REAR RIGHT-HAND WINDOW MOTOR
202	REAR LEFT-HAND WINDOW MOTOR
203	DRIVER'S WINDOW MOTOR
204	PASSENGER ELECTRIC WINDOW MOTOR
205	PRESSURE SWITCH
207	BRAKE FLUID MIN LEVEL SENSOR
209	MONOLEVER
211	REAR SCREEN WIPER MOTOR
212	WINDSCREEN WIPER MOTOR
213	FRONT COURTESY LIGHT
219	HEADLIGHT WASHER PUMP
221	WINDSCREEN WASHER PUMP
222	THROTTLE POTENTIOMETER
224	POWER ASSISTED STEERING PRESSURE SWITCH
225	DIAGNOSTIC SOCKET
226	RIGHT-HAND HEADLIGHT
227	LEFT-HAND HEADLIGHT
233	COLD AIR BLOWER RELAY
235	HEATED REAR SCREEN RELAY
239	DRIVER'S ELECTRIC REAR-VIEW MIRROR
240	PASSENGER ELECTRIC REAR-VIEW MIRROR
242	DOWNSTREAM OXYGEN SENSOR
244	WATER INJECTION TEMPERATURE SENSOR
247	INSTRUMENT PANEL
250	VEHICLE SPEED SENSOR
255	RIGHT FRONT TURN SIGNAL LIGHT
256	LEFT FRONT TURN SIGNAL LIGHT
257	PREHEATING UNIT
261	RADIO
262	COOLING FAN AND AIR CONDITIONING
267	RIGHT REPEATER
268	LEFT REPEATER
272	INJECTION AIR TEMPERATURE SENSOR
299	RELAY CONTROL PLATE
319	AIR CONDITIONING CONTROL PANEL
321	AIR CONDITIONING FAN ASSEMBLY RESISTOR
322	AIR CONDITIONING AND POWER ASSISTED STEERING LED
336	FAN SPEED 2 RELAY
343	OIL TEMPERATURE SENSOR
371	PETROL VAPOUR ABSORBER
403	SECONDARY ELECTRO-MAGNETIC WARNING BUZZER
414	WATER IN DIESEL SENSOR
529	CENTRAL COURTESY LIGHT
597	ENGINE AND RELAY FUSE BOX

LIST OF COMPONENTS

COMPONENT CODES	COMPONENT TITLES
639	RAISED BRAKE LIGHT
645	PASSENGER COMPARTMENT COMPUTER
649	STEPPER MOTOR
677	FRONT AND REAR BI-DIRECTIONAL WASHER PUMP
680	PREHEATER PLUG 1
681	PREHEATER PLUG 2
682	PREHEATER PLUG 3
683	PREHEATER PLUG 4
689	CRUISE CONTROL AND AIR BAG SWITCH
746	CYLINDER SENSOR
756	AIR BAG/PRE-TENSIONER COMPUTER
778	QUADRUPLE IGNITION COIL MODULE
784	COMMAND RELAY BLOCK 2
799	INJECTION AIR FLOW METER
833	FUEL PUMP AND SENDER UNIT
861	PASSENGER AIR BAG
887	UPSTREAM OXYGEN SENSOR
921	ACCELERATOR POTENTIOMETER
957	TRANSPONDER UNIT
967	ELECTRO-MAGNETIC HORN
983	DIESEL INJECTION COMPUTER SUPPLY RELAY
1001	LPG TANK
1016	PASSENGER COMPARTMENT FUSE BOX
1028	DRIVER'S SIDE SATELLITE
1029	PASSENGER SIDE SATELLITE
1032	FUEL MANIFOLD PRESSURE SENSOR
1047	INJECTION RELAY
1066	FUEL TEMPERATURE SENSOR
1067	ADDITIONAL HEATING RELAY 1
1068	ADDITIONAL HEATING RELAY 2
1071	TURBOCHARGING PRESSURE SENSOR
1077	CYLINDER 1 PENCIL COIL
1078	CYLINDER 2 PENCIL COIL
1079	CYLINDER 3 PENCIL COIL
1080	CYLINDER 4 PENCIL COIL 4
1105	FUEL FLOW ACTUATOR
1113	ADDITIONAL PASSENGER COMPARTMENT HEATING
1202	COOLANT GAS PRESSURE SENSOR
1324	CENTRAL REGISTRATION PLATE LIGHTING
1425	3RD ROW COURTESY LIGHT
1441	PASSENGER AIR BAG DISABLING KEY
1456	ONE-TOUCH DE-ICING CONTROL
1460	MOTORISED EGR SOLENOID VALVE
1840	EVAPORATOR SAFETY MODULE