Emissions Control System

GENERAL

CRANKCASE EMISSION CONTROL SYSTEM

POSITIVE CRANKCASE VENTILATION (PCV) VALVE

EVAPORATIVE EMISSION CONTROL SYSTEM

EVAPORATIVE (EVAP) CANISTER EVAPORATIVE (EVAP) CANISTER PURGE SO-LENOID VALVE FUEL FILLER CAP FUEL TANK AIR FILTER

EXHAUST EMISSION CONTROL SYSTEM CONTINUOUS VARIABLE VALVE TIMING

EC -2

GENERAL

SPECIFICATIONS ED402E7A

Item	Specification	
Purge Control Solenoid Valve (PCSV)	Туре	Duty Control type
	Resistance (Ω)	19.0 ~ 22.0 at 20 °C (68 °F)

TIGHTENING TORQUE ECF7BAAF

Item	N-m	kgf∙m	lbf-ft
Positive Crankcase Ventilation(PCV) Valve	7.8 ~ 11.8	0.8 ~ 1.2	5.8 ~ 8.7

TROUBLESHOOTING EB33B976

Symptom	Suspect area	Remedy
Engine will not start or hard to start	Vacuum hose disconnected or damaged	Repair or replace
	Malfunction of the EVAP. Canister Purge Solenoid Valve	Repair or replace
Rough idle or engine stalls	Vacuum hose disconnected or damaged	Repair or replace
	Malfunction of the PCV valve	Replace
	Malfunction of the evaporative emission canister purge system	Check the system; if there is a problem, check related components parts
Excessive oil consumption	Positive crankcase ventilation line clogged	Check positive crankcase ventilation system


COMPONENTS EAEOCABO

Components	Function	Remarks
Crankcase Emission System Positive Crankcase Ventilation (PCV) valve	HC reduction	Variable flow rate type
Evaporative Emission System Evaporative emission canister Purge Control Solenoid Valve (PCSV)	HC reduction HC reduction	Duty control solenoid valve
Exhaust Emission System MFI system (air-fuel mixtrue control device) Three-way catalytic converter	CO, HC, NOx reduction CO, HC, NOx reduction	Heated oxygen sensor feedback type Monolithic type

MFI : Multiport Fuel Injection EVAP : Evaporative Emission

GENERAL EC -3

COMPONENTS LOCATION E02D123C

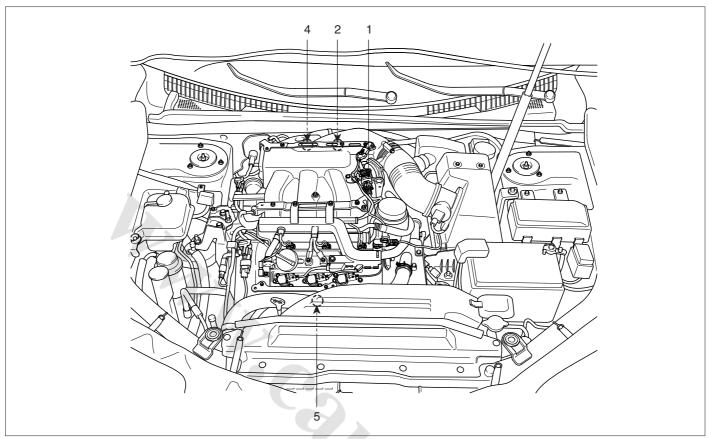


- 1. Purge Control Solenoid Valve (PCSV)
- 2. PCV Valve
- 3. Canister

- 4. Catalytic Converter (Bank 1)
- 5. Catalytic Converter (Bank 2)
- 6. Fuel Tank Air Filter


EEBF001A

EMISSIONS CONTROL SYSTEM

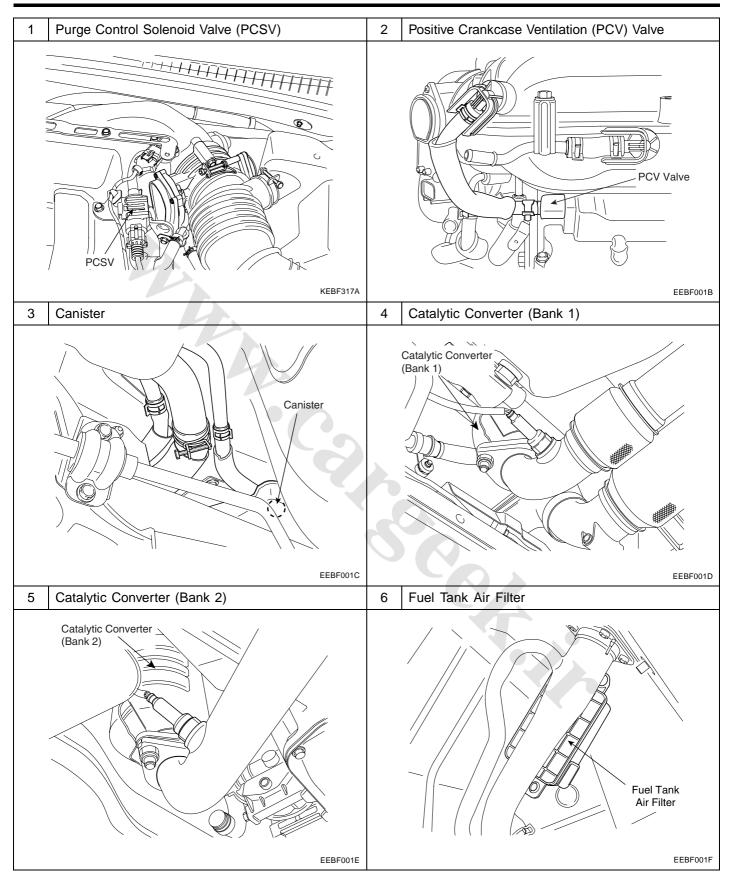

GENERAL EC -5


SCHEMATIC DIAGRAM E4C64F5

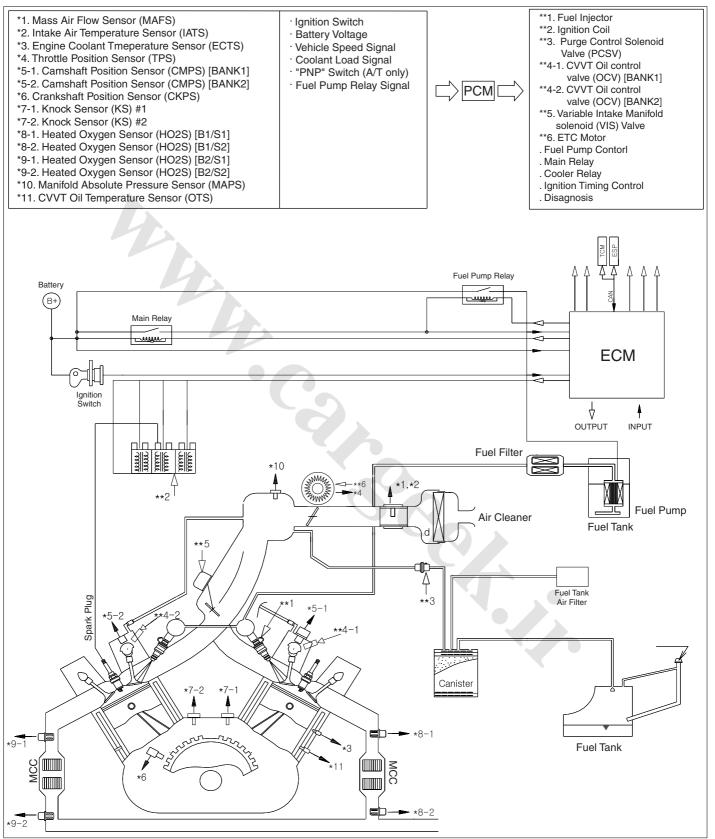

EERF600G

CRANKCASE EMISSION CONTROL SYSTEM

COMPONENTS EF74DF7D

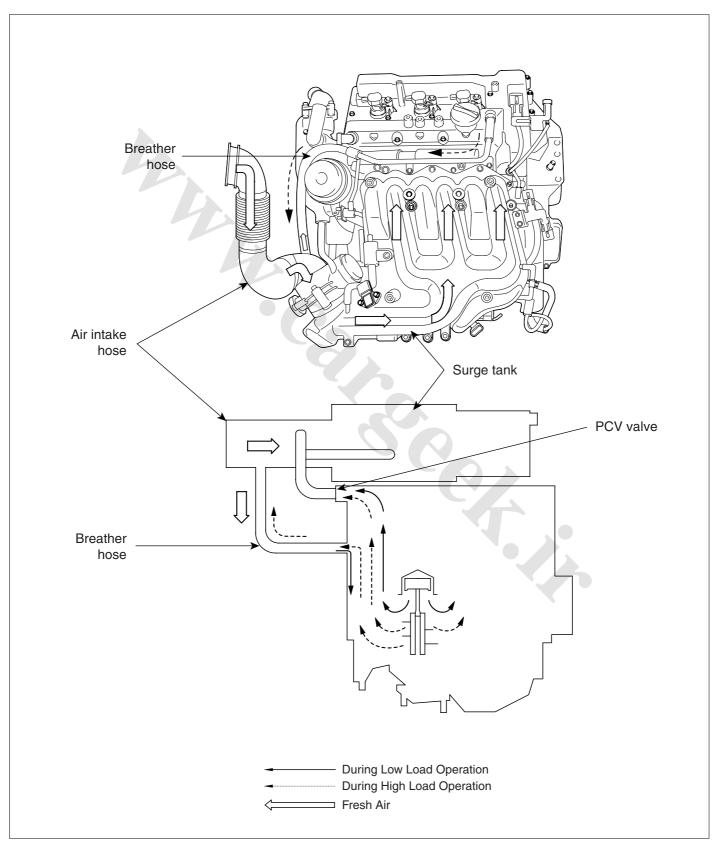


CRANKCASE EMISSION CONTROL SYSTEM

INSPECTION EC6645DB

- Disconnect the ventilation hose from the positive crankcase ventilation (PCV) valve. Remove the PCV valve from the rocker cover and reconnect it to the ventilation hose.
- Run the engine at idle and put a finger on the open end of the PCV valve and make sure that intake manifold vacuum can be felt.

NOTE


The plunger inside the PCV valve will move back and forth.

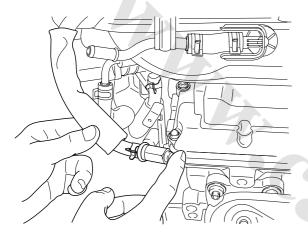

EERF600H


POSITIVE CRANKCASE VENTILATION (PCV) VALVE

OPERATION E7D5F25A

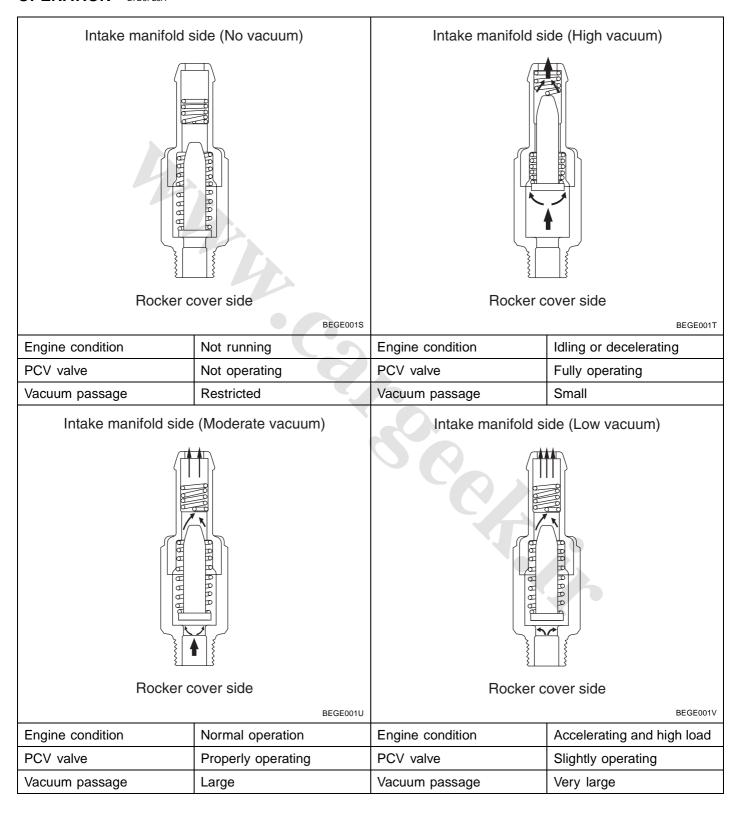

REMOVAL E83A78EE

1. Remove the valve pad (A) and disconnect the vacuum hose (B).

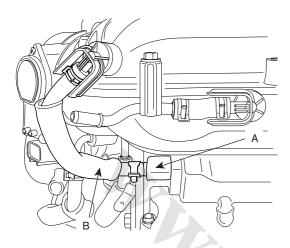


EERF600I

Remove the PCV Valve.

INSPECTION EB11F74D

- 1. Remove the PCV valve.
- 2. Insert a thin stick(A) into the PCV valve(B) from the threaded side to check that the plunger moves.
- 3. If the plunger does not move, the PCV valve is clogged. Clean it or replace.

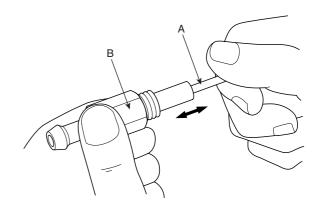

EERF600J


INSTALLATION EBF8AED6

Install the PCV valve and tighten to the specified torque.

PCV Valve installation: 7.8 ~ 11.8 N·m (0.8 ~ 1.2 kgf·m, 5.8 ~ 8.7lbf·ft)

EVAPORATIVE EMISSION CONTROL SYSTEM

COMPONENTS E5439233

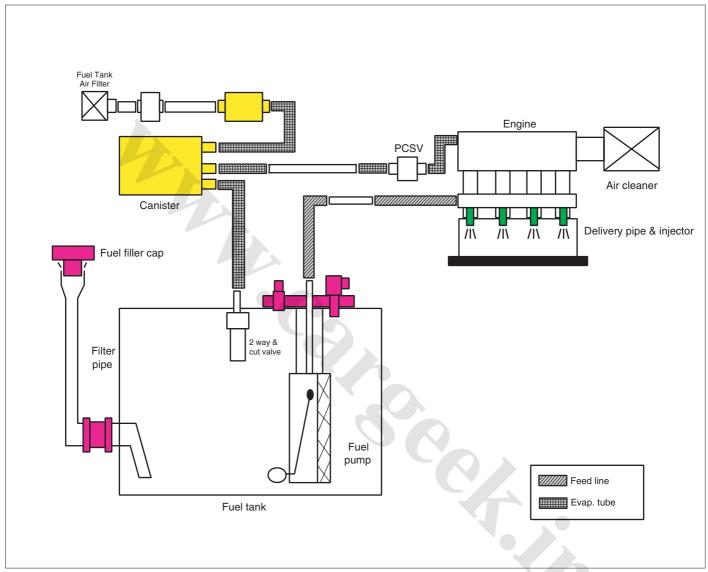

EERF600K

CANISTER

Canister accumulates vapor from fuel tank. PCM controls PCSV to send vapor to intake manifold.

PURGE CONTROL SOLENOID VALVE (PCSV)

PCSV is installed between intake manifold and canister. PCM controls PCSV, which is operated by vaccum, to send vapor in canister to intake manifold.

EVAPORATIVE EMISSION CONTROL SYSTEM

INSPECTION E549F2F0

- 1. Disconnect the vacuum hose from the throttle body, and connect a vacuum pump to the vacuum hose.
- Check the following points when the engine is cold [engine coolant temperature 60°C(140°F) or below] and when it is warm [engine coolant temperature 80°C(176°F) or higher].

WHEN ENGINE IS COLD

Engine operating condition	Applied vacuum	Result
Idling	50 kPa	Vacuum is held
3,000 rpm	(7.3 psi)	vacuum is neid


WHEN ENGINE IS WARM

Engine operating condition	Applied vacuum	Result
Idling	50 kPa (7.3 psi)	Vacuum is held
Within 3 minutes after engine start at 3,000 rpm	Try to apply vacuum	Vacuum is released
After 3 minutes have passed after engine start at 3,000 rpm	50 kPa (7.3 psi)	Vacuum will be held momentarily, after which, it will be released

EVAPORATIVE (EVAP) CANISTER

INSPECTION E2FDE11F

- 1. Lock for loose connections, sharp bends or damage to the fuel vapor lines.
- 2. Look for distortion, cracks or fuel damage.
- After removing the canister, inspect for cracks or damage.

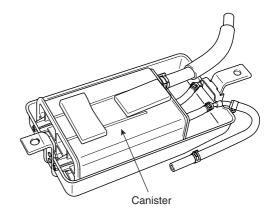

EEBF001G

solenoid valve.


Measure the resistance between the terminals of the

PCSV coil resistance(Ω): 19.0 ~ 22.0 Ω at 20 $^{\circ}$ C (68 $^{\circ}$ F)


EVAPORATIVE (EVAP) CANISTER

PURGE SOLENÒID VÁLVE

INSPECTION

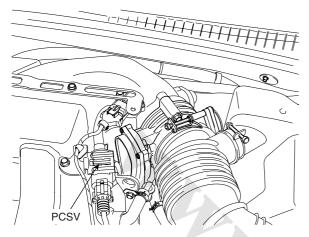

KEBF317A

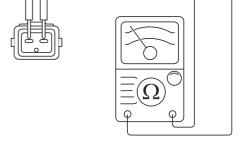


KERE001M



When disconnecting the vacuum hose, make an identification mark on it so that it can be reconnected to its original position.

- Disconnect the vacuum hose from the solenoid valve. 1.
- Detach the harness connector.
- Connect a vacuum pump to the nipple to which the red-striped vacuum hose was connected.
- Apply vacuum and check when voltage is applied to the PCSV and when the voltage is discontinued.

Battery voltage	Normal condition
When applied	Vacuum is released
When discontinued	Vacuum is maintained

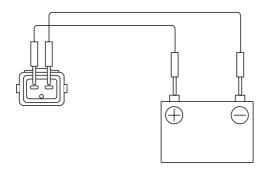


KERE001L

FUEL FILLER CAP

DESCRIPTION EA1B6D6E

A ratchet tightening device on the threaded fuel filler cap reduces the chances of incorrect installation, which would seal the fuel filler. After the gasket on the fuel filler cap and the filler neck flange contact each other, the retchet produces a loud clicking noise indicating the seal has been set

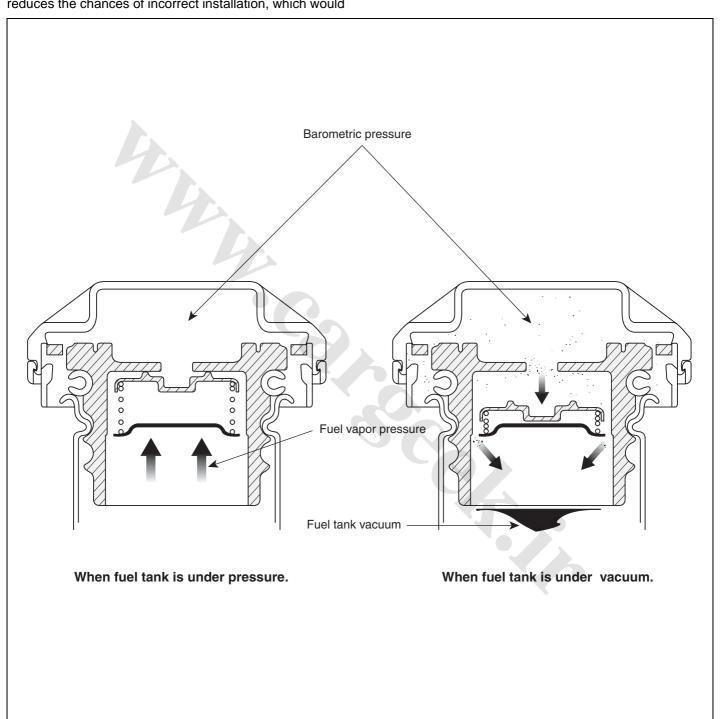


LEGE015A

FUEL TANK AIR FILTER

REPLACE E5EC131D

- Remove the rear left wheel house. (Refer to "BD" group)
- 2. Unfasten three mounting nuts.

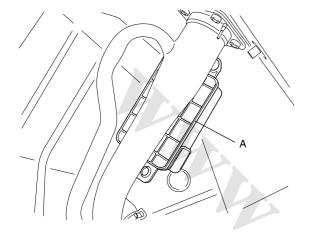

KEBF303A

- 3. Remove the canister air filter(A).
- 4. Install a new canister air filter.

EXHAUST EMISSION CONTROL SYSTEM

DESCRIPTION EF2A2767

Exhaust emissions (CO, HC, NOx) are controlled by a combination of engine modifications and the addition of special control components.

Modifications to the combustion chamber, intake manifold, camshaft and ignition system form the basic control system.

These items have been integrated into a highly effective system which controls exhaust emissions while maintaining good driveability and fuel economy.

AIR/FUEL MIXTURE CONTROL SYSTEM [MULTIPORT FUEL INJECTION (MFI) SYSTEM]

The MFI system is a system which uses the signals from the heated oxygen sensor to activate and control the injector installed in the manifold for each cylinder, thus precisely regulating the air/fuel mixture ratio and reducing emissions.

This in turn allows the engine to produce exhaust gases of the proper composition to permit the use of a three way catalyst. The three way catalyst is designed to convert the three pollutants (1) hydrocarbons (HC), (2) carbon monoxide (CO), and (3) oxides of nitrogen (NOx) into harmless substances. There are two operating modes in the MFI system.


- Open Loop air/fuel ratio is controlled by information programmed into the ECM.
- Closed Loop air/fuel ratio is adjusted by the ECM based on information supplied by the oxygen sensor.

500

CONTINUOUS VARIABLE VALVE TIMING

COMPONENTS

E955FB1D

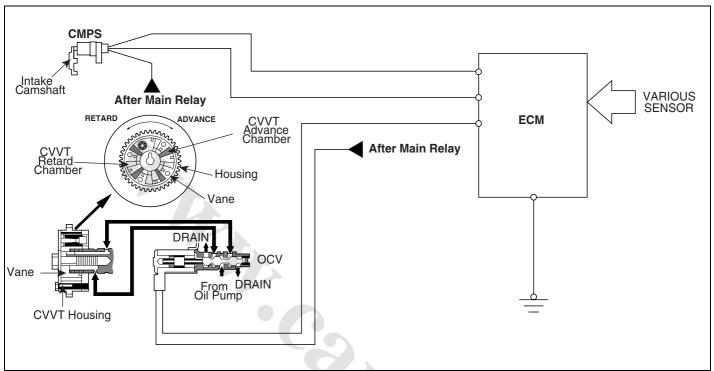

LEIF001P

DESCRIPTION E3F67DAD


The CVVT (Continuously Variable Valve Timing) which is installed on the exhaust camshaft controls intake valve open and close timing in order to improve engine performance.

The intake valve timing is optimized by CVVT system depending on engine rpm.

This CVVT system improves fuel efficiency and reduces NOx emissions at all levels of engine speed, vehicle speed, and engine load by EGR effect because of valve over-lap optimization.

The CVVT changes the phase of the intake camshaft via oil pressure.

It changes the intake valve timing continuously.

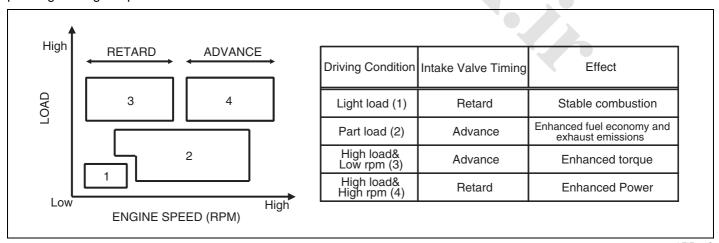

LEIF001Q

OPERATION E86FED23

The CVVT system makes continuous intake valve timing changes based on operating conditions.


Intake valve timing is optimized to allow the engine to produce maximum power.


Cam angle is advanced to obtain the EGR effect and reduce pumping loss. The intake valve is closed quickly to


reduce the entry of the air/fuel mixture into the intake port and improve the changing effect.

Reduces the cam advance at idle, stabilizes combustion, and reduces engine speed.

If a malfunction occurs, the CVVT system control is disabled and the valve timing is fixed at the fully retarded position.

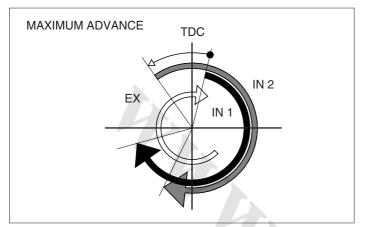

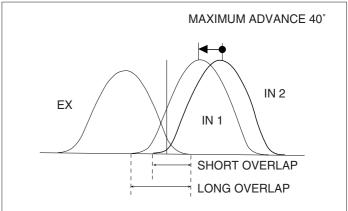

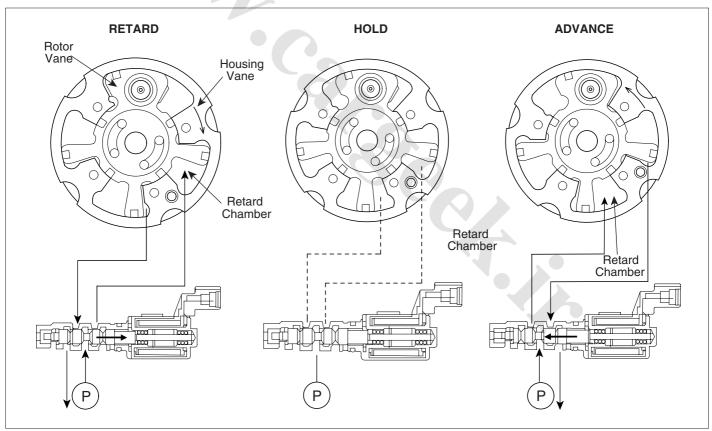

LEJF001R

- 1. The above figure shows the relative operation structures of the housing vane to the rotor vane.
- If the CVVT is held a certain control angle, to hold this state, oil is replenished as much as oil leaks from the oil pump.

The OCV (Oil-flow Control Valve) spool location at this time is as follows.

Oil pump \to Advance oil chamber (Little by little open the inflow side to the advance oil chamber) \to Almost close the drain side

Be sure there might be a difference in the position according to the engine running state (rpm, oil temperature, and oil pressure).

