



# *TIBA*

[www.cargeek.ir](http://www.cargeek.ir)

- **Option  
installation procedure**

TBARM2P/1/1

## Tiba installation procedure



1. Using a screwdriver gently pry up the Front panel .



2. Pull out the panel **top** first .




3. Pull out the panel slowly , Attention the buckle behind the panel .



4. Remove (2) screws from the original multimedia machine .



5. Pull out the original multimedia machine slowly , Be careful the cable behind the machine .

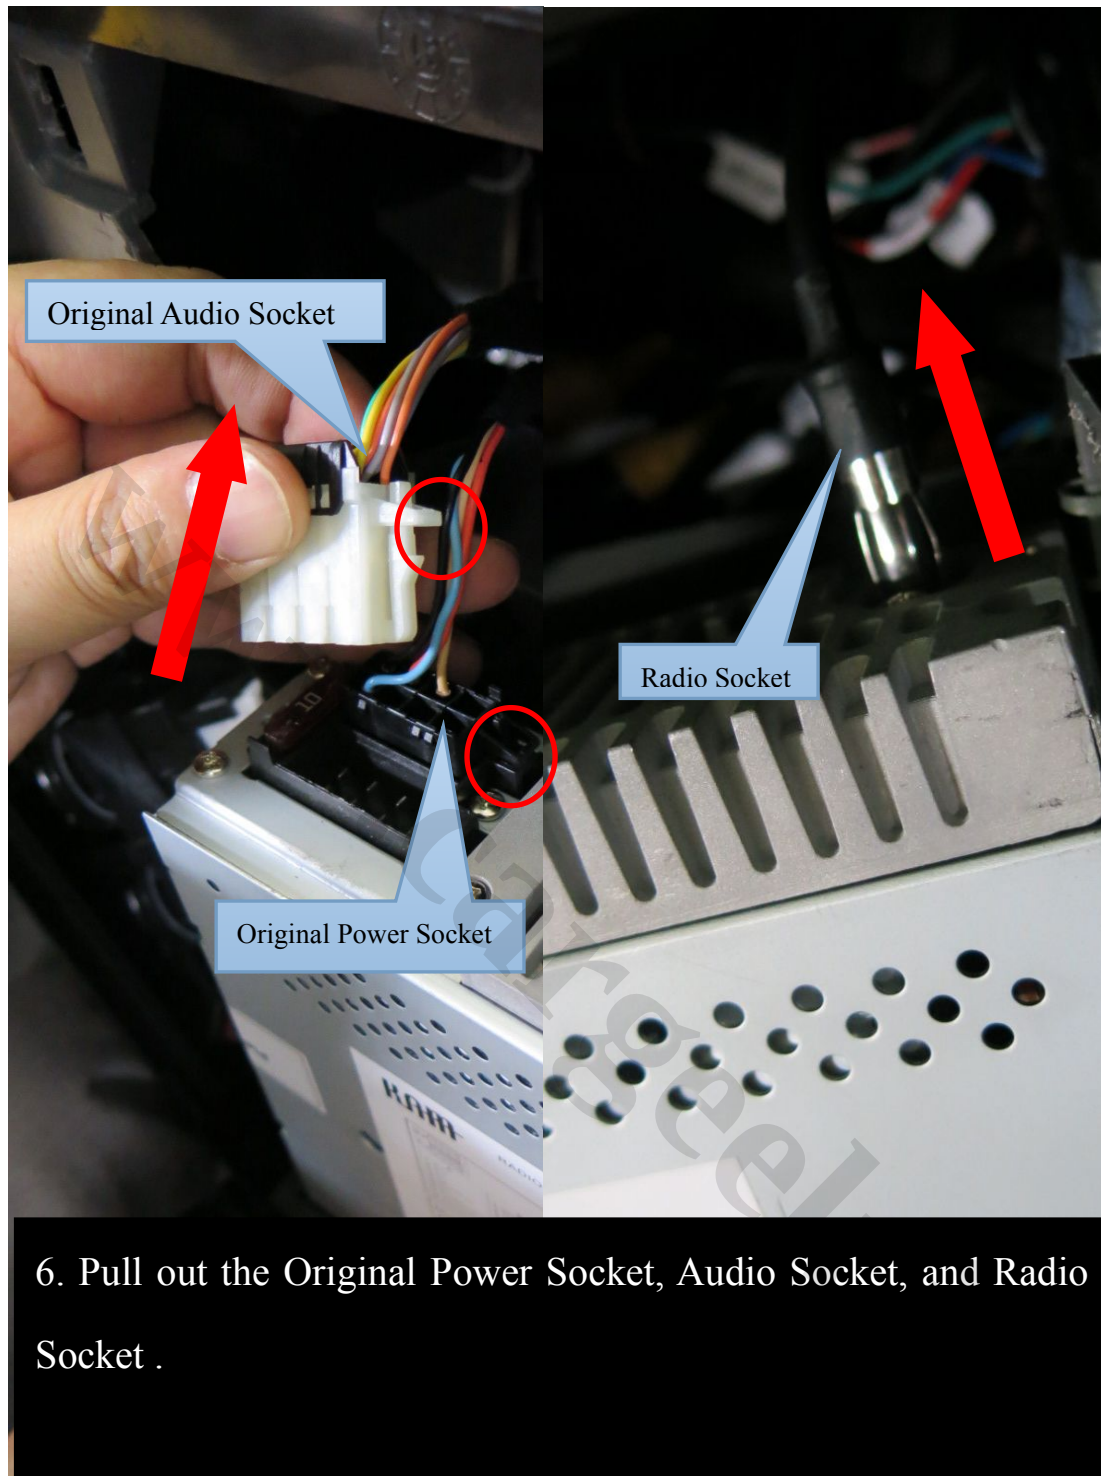




7. Remove (2) screws from the original Screen .




8. Please pull out screen When you remove the screws, and disassemble cable behind the screen .



9. Remove (5) screws from the original screen, Disassemble the Air-condition outlet .

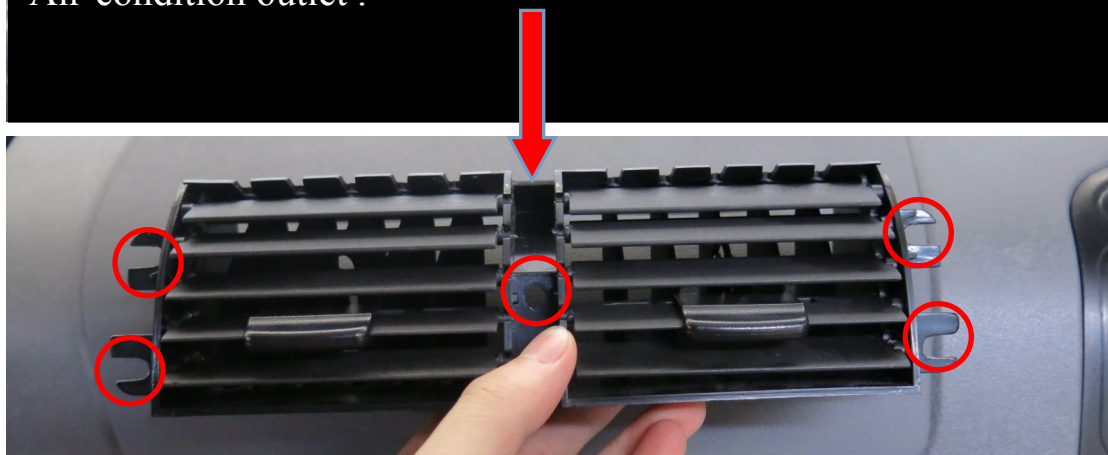

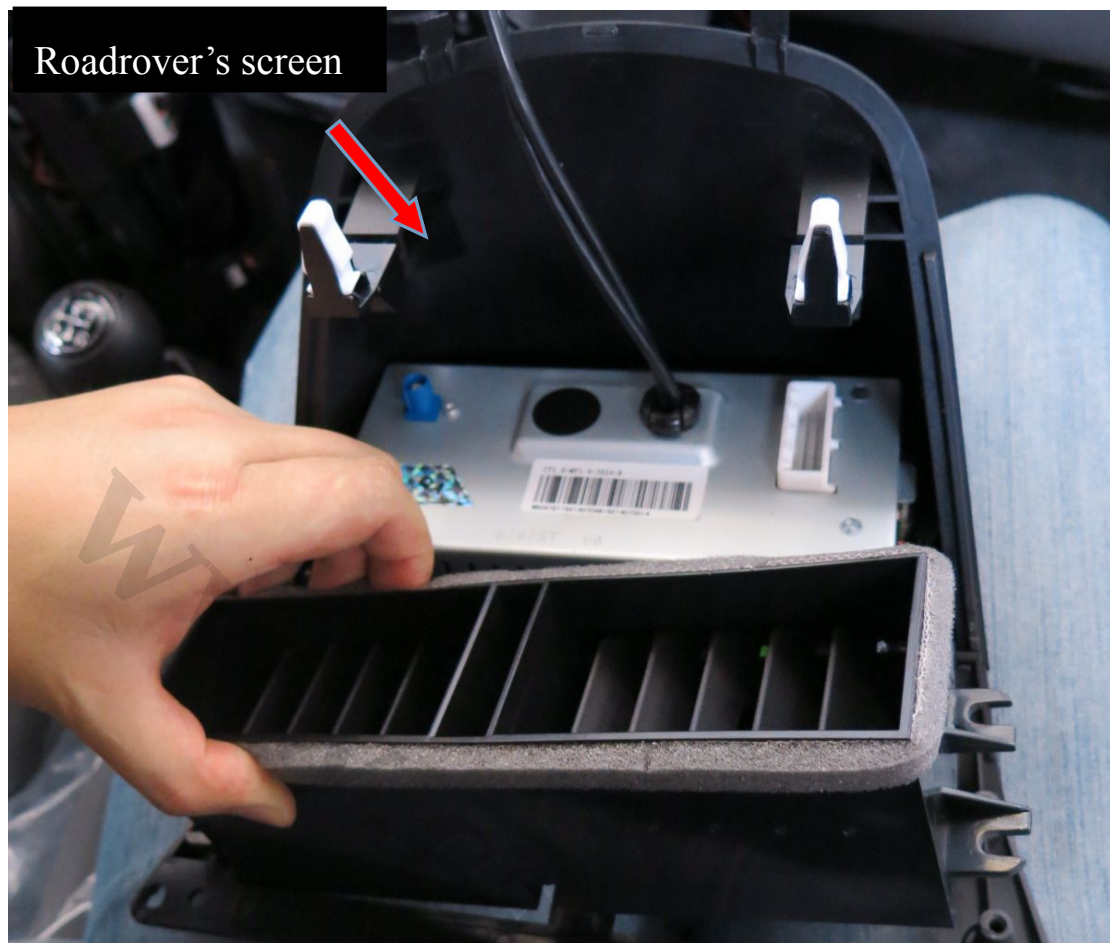

10. Assemble the original Air-condition outlet to the Roadrover's Multimedia screen, and screw down the (5) screws .







11. Let the connection cable through the Dash board .




12. GPS cable through the Dash board .

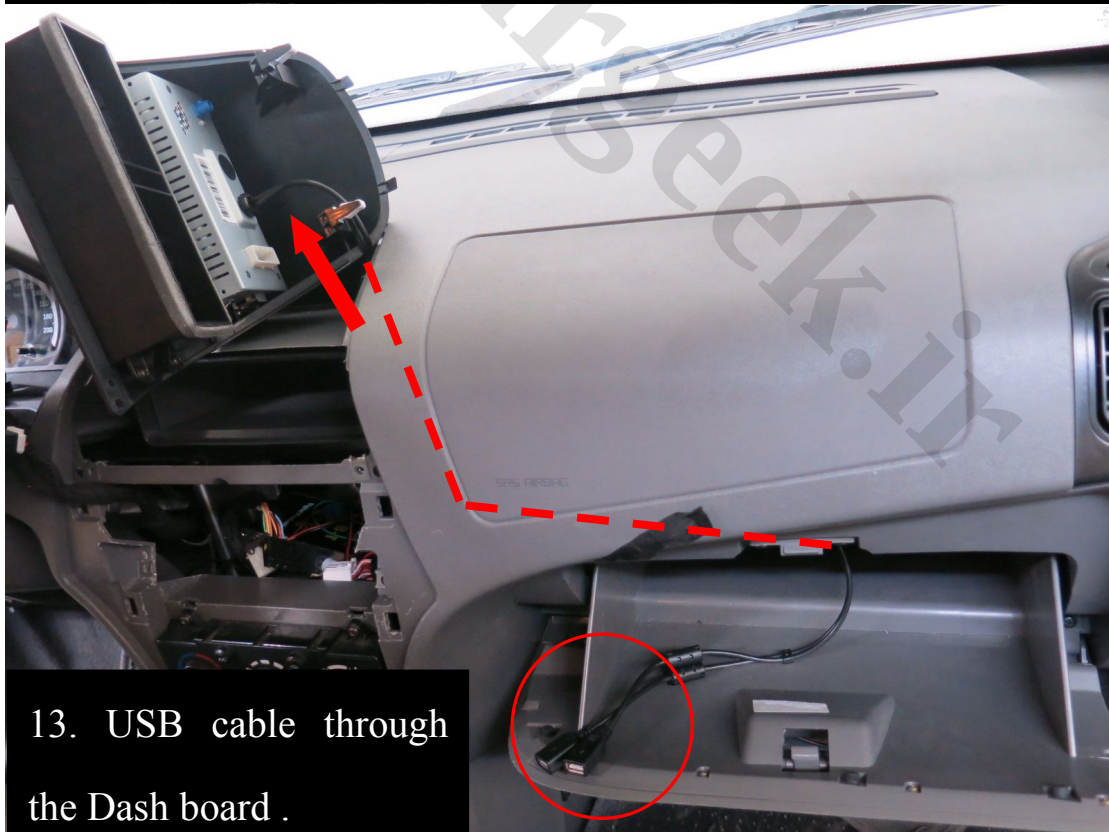


13. USB cable through the Dash board .

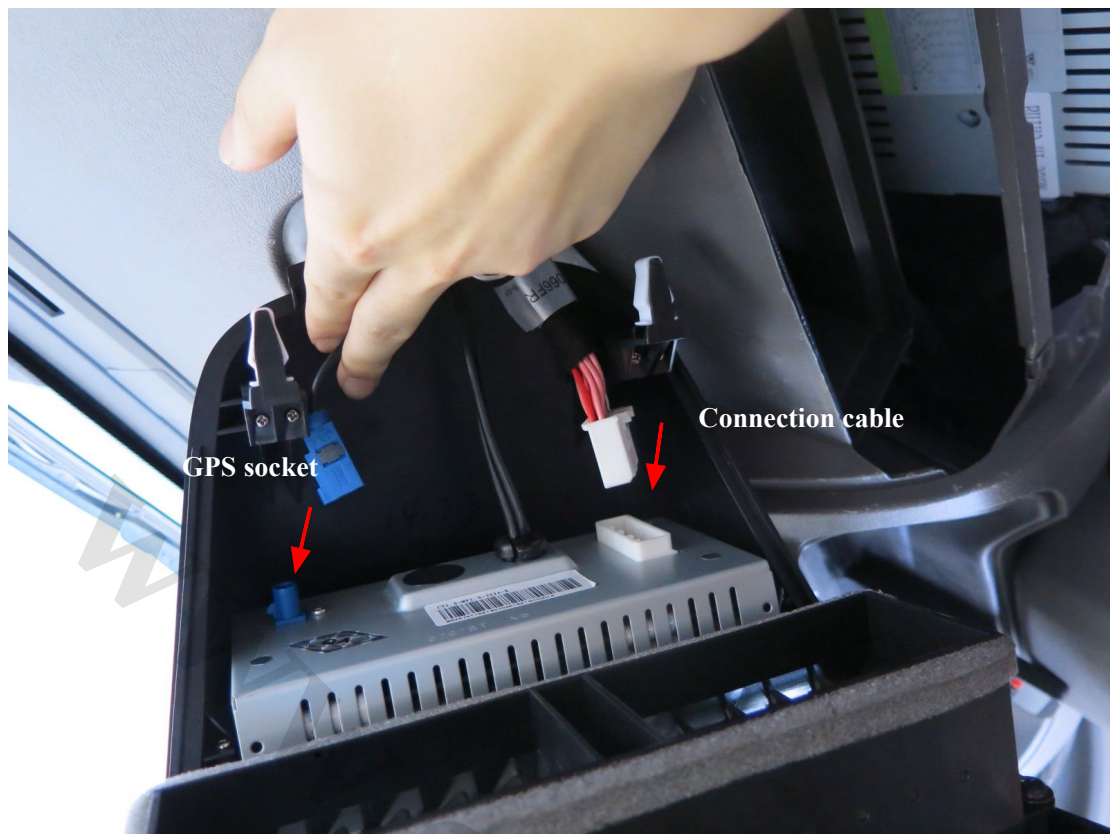

14. Push the Roadrover's screen into the car .

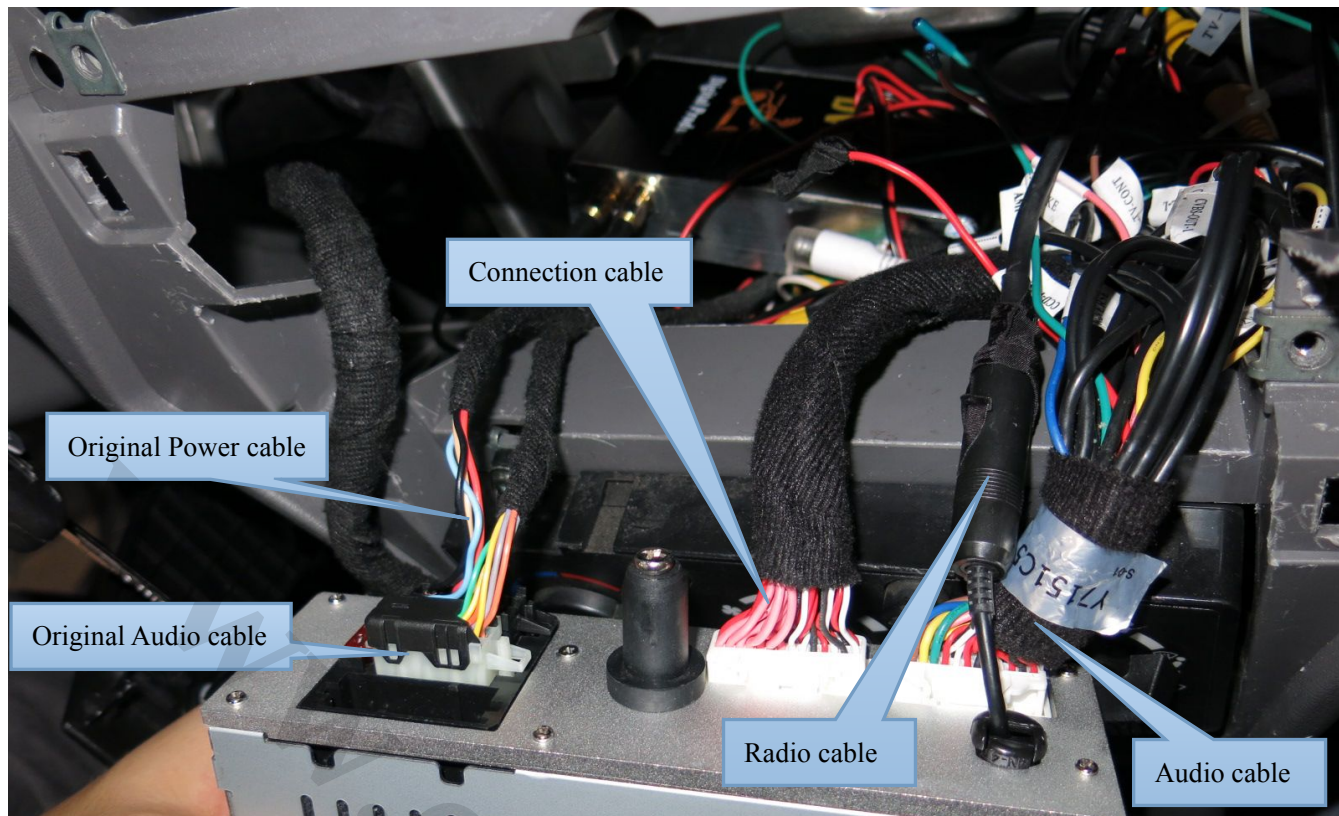

15. There are 5 cable socket behind main machine , Please connect all cable in right position.

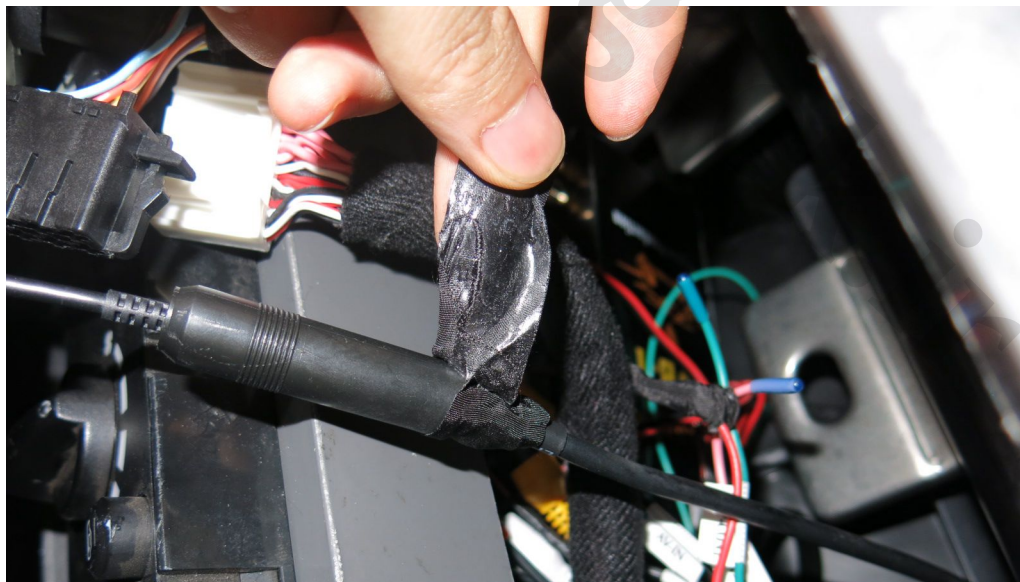

16. Please use electric tape to fasten the Radio cable. And push the main machine back to car.



17. There are (4) screws in Screen and main machine each side.  
Please resemble it .



18. Plug **bottom** in first , and Press the panel slowly .





20. Please start the car , and check all function .

www.cargeek.ir



**SAIPA YADAK**

DAROU PAKHSH St.-KM17 KARAJ MAKHSOOS ROAD-TEHRAN

[www.saipayadak.org](http://www.saipayadak.org)