

1991 Accord Manual

Supplements

1991 Accord

1991 Accord Aero Deck

1992 Accord & Accord Aero Deck

1992 Accord Coupe

1993 Accord & Accord Aero Deck

Honda Shop Manuals

Accord



Accord 90-93

Maintenance and Repair

Intro

General information

Special Tools

Specifications

Maintenance

Engine

Engine Tune-up

Timing Belt

Cylinder Head Removal/Installation

Engine Removal/Installation

Exhaust Pipe and Muffler

Radiator

Fuel and Emissions

Carburetor Engine

Fuel-Injected Engine

Transaxle

Clutch

Manual Transmission

Automatic Transmission

PX4B Carburetor Engine

PX4B Fuel-Injected Engine

Driveshafts

Steering

Suspension

Brake

Conventional Brakes

ALB

Body

Heater and Air Conditioner

Heater

Air Conditioner

Electrical

Home



How to Use This Manual

This manual contains service information for the ACCORD. Separate volumes are published regarding vehicle construction, engine, and transmission; the applicable reference manuals are listed below.

This manual is divided into sections. This first page of each section is marked with a black tab that lines up with one of the thumb index tabs on next page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Each section includes:

1. A table of contents, or an exploded view index showing:
 - Parts disassembly sequence.
 - Bolt torques and thread sizes:
 - Page references to descriptions in text.
2. Disassembly/assembly procedures and tools.
3. Inspection.
4. Testing/troubleshooting.
5. Repair.
6. Adjustments.

Reference Manuals

Description	Code No.	Remarks	Date Published
ACCORD Construction and Function F18A/F20A/F22A ENGINE Maintenance and Repair	62SM410	1.8 l Carbureted Engine 2.0 l Carbureted Engine 2.0 l Fuel-Injected Engine 2.2 l Fuel-Injected Engine	Sept. 1989
	62PT400		Sept. 1989
H2 MANUAL TRANSMISSION Maintenance and Repair	62PX500	5-speed	Sept. 1989
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400	4-speed with lock-up	Sept. 1989

Special Information

▲WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of *standard workshop procedures*, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda Motor, might be done, or of the possible hazardous consequences of each conceivable way, nor could Honda Motor investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda Motor, *must satisfy himself thoroughly* that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

Chassis and Engine Numbers
Identification Number Locations
Label Locations
Lift and Support Points
Towing
Preparation of Work
Symbol Marks
Abbreviation

www.cargeek.ir



Vehicle Identification Number (1.8 l Carbureted Engine)

JHM CB1 5 2 0 0 C 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB1: ACCORD 1.8 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual

Vehicle Grade
 2 : LX (KB)
 3 : EX (KB)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 0 : 1990

Serial Number

Vehicle Identification Number (2.0 l Fuel-Injected Engine)

JHM CB3 5 4 0 0 C 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB3: ACCORD 2.0 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual
 6 : 4-door, 4-speed Automatic

Vehicle Grade
 4 : 2.0i, F20A4 with CATA (KG, KS)
 F20A4 without CATA (KF, KE)
 F20A5 (KB, KW)
 2.0i with ALB,
 F20A4 with CATA (KG, KX, KS)
 F20A4 without CATA (KF, KE)
 F20A5 (KB, KW)
 EXi, F20A5 (KU)
 EXi with ALB, F20A5(KU)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 0 : 1990

Serial Number

Vehicle Identification Number (2.0 l Carbureted Engine)

JHM CB3 5 2 0 0 C 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB3: ACCORD 2.0 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual
 6 : 4-door, 4 speed Automatic

Vehicle Grade
 2 : DX, F20A2 (KG, KS)
 F20A3 (KW)
 : LX, F20A2 (KQ)
 F20A3 (KP, KT, KU, KY)
 3 : EX, F20A2 with CATA (KG, KX, KS)
 F20A2 without CATA (KF, KE)
 F20A3 (KB, KW, KP, KT, KU, KY)
 F20A6 (KG)
 : EX with ALB,
 F20A2 with CATA (KG, KS)
 F20A2 without CATA (KF)
 F20A3 (KB)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 0 : 1990

Serial Number

Vehicle Identification Number (2.2 l Fuel-Injected Engine)

JHM CB7 5 5 0 0 C 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB7: ACCORD 2.2 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual
 6 : 4-door, 4-speed Automatic

Vehicle Grade
 5 : 2.2i, F22A3 with CATA
 (KF, KG, KX, KS, KE)
 EXi, F22A2 (KY)
 F22A5 with CATA (KQ)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 0 : 1990

Serial Number



Engine Number
(DX: European, LX: General and EX: KG 90 ps)

F18A2 - 10 00001

Engine Type

- F18A2: 1.8 l SOHC Carbureted
 Leaded gasoline: KB
- F20A2: 2.0 l SOHC Carbureted
 Unleaded gasoline with CATA
 : KG/KS (DX), KQ (LX)
- F20A3: 2.0 l SOHC Carbureted
 Leaded gasoline: KW (DX),
 KP/KT/KU/KY (LX)
- F20A6: 2.0 l SOHC Carbureted (90ps)
 Unleaded gasoline with CATA
 : KG (EX 90ps)

Transmission Type

- 10: 5-speed manual
- 15: 4-speed automatic

Serial Number

Engine Number
(2.2i: European)

F22A3 - 10 00001

Engine Type

- F22A3: 2.2 l SOHC Fuel-Injected
 Unleaded gasoline with CATA

Transmission Type

- 10: 5-speed manual
- 15: 4-speed automatic

Serial Number

Engine Number
(EXi: KQ, KY)

F22A2 - 1000001

Engine Type

- F22A2: 2.2 l SOHC Fuel-Injected
 Leaded gasoline: KY
- F22A5: 2.2 l SOHC Fuel-Injected
 Unleaded gasoline with CATA
 : KQ

Serial Number

Engine Number
(EX except KG 90 ps)

F20A2 - 10 00001

Engine Type

- F20A2: 2.0 l SOHC Carbureted
 Unleaded gasoline with CATA
 : KG, KX, KS
- 2.0 l SOHC Carbureted
 Unleaded gasoline without CATA
 : KF, KE
- F20A3: 2.0 l SOHC Carbureted
 Leaded gasoline
 : KB, KW, KP, KT, KU, KY

Transmission Type

- 10: 5-speed manual
- 15: 4-speed automatic

Serial Number

Manual Transmission Number

H2A5 - 1000001

Transmission Type

- H2C4: 2.0 l Fuel-Injected and 2.2 l Fuel-Injected
 except KQ
- H2S8: 1.8 l and 2.0 l Carbureted
- H2U5: 2.2 l Fuel-Injected: KQ

Serial Number

Automatic Transmission Number

PX4B - 1000001

Transmission Type

Serial Number

Engine Number
(2.0i: European and EXi: KU)

F20A4 - 10 00001

Engine Type


- F20A4: 2.0 l SOHC Fuel-Injected
 Unleaded gasoline with CATA
 : KG, KX, KS
- 2.0 l SOHC Fuel-Injected
 Unleaded gasoline without
 CATA: KF, KE
- F20A5: 2.0 l SOHC Fuel-Injected
 Leaded gasoline: KB, KW, KU

Transmission Type

- 10: 5-speed manual
- 15: 4-speed automatic

Serial Number


Vehicle Identification Number

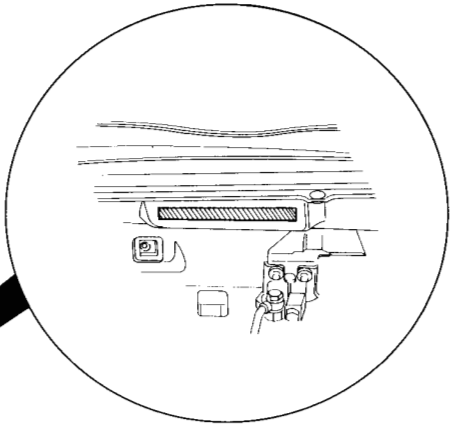



Transmission Number (Automatic)




Transmission Number (Manual)

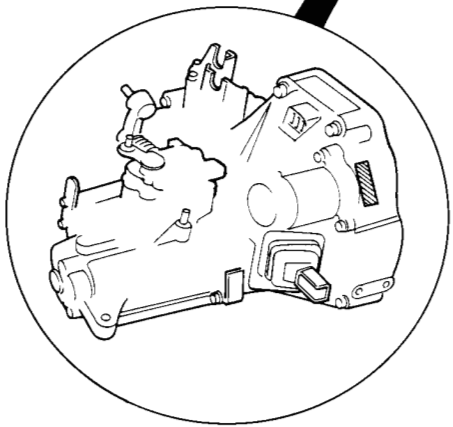

Engine Number

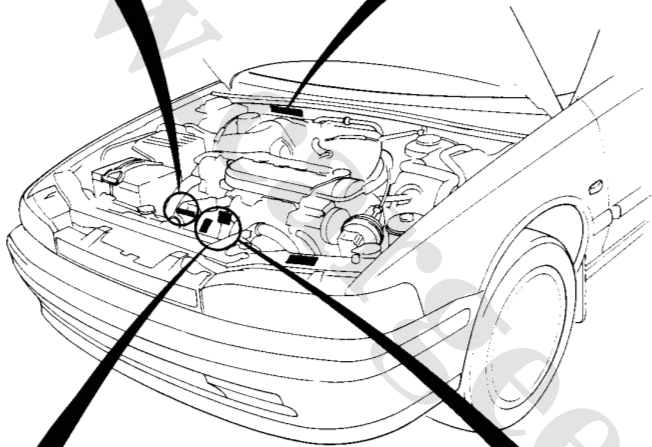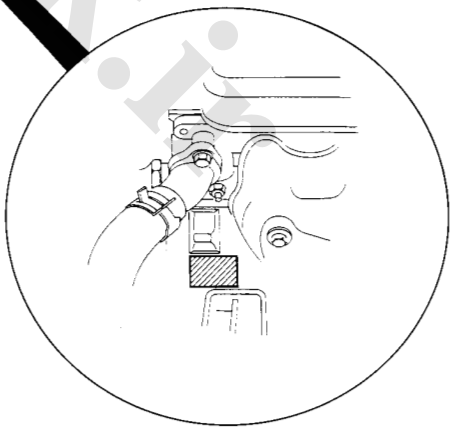


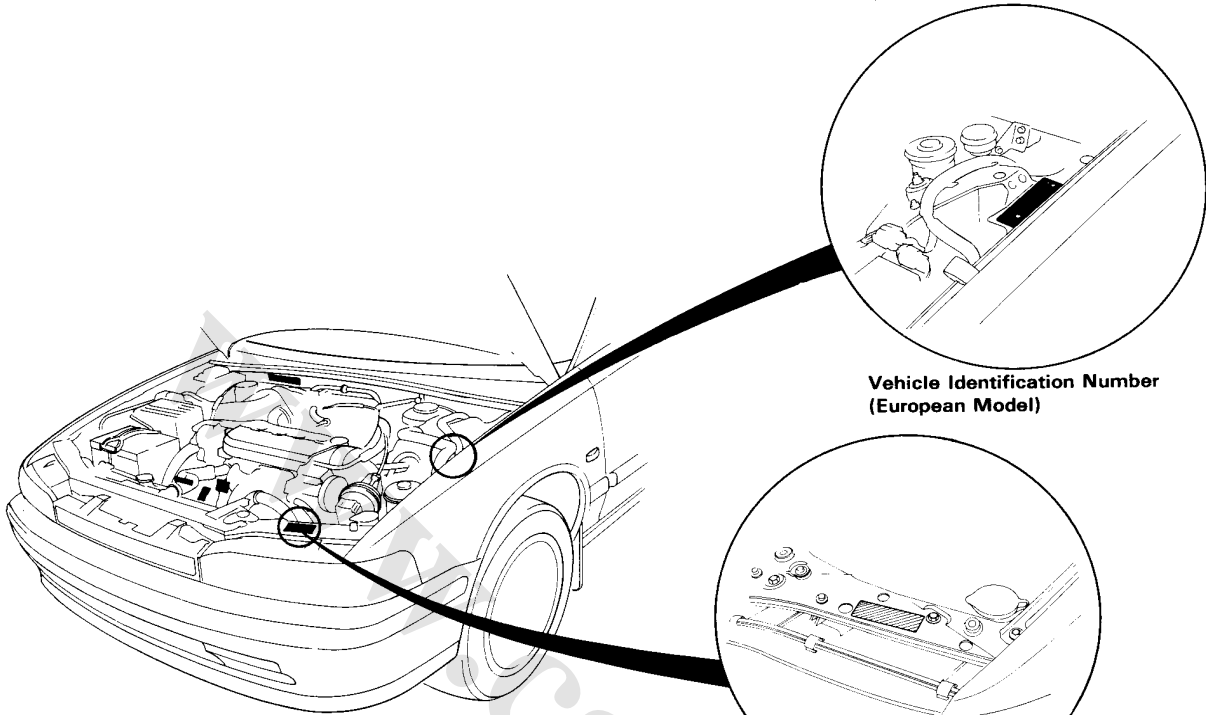



**Vehicle Identification Number
(European Model)**


**Vehicle Identification Number
(KQ, KT Model)**

**Vehicle Identification Number
(KS Model only)**

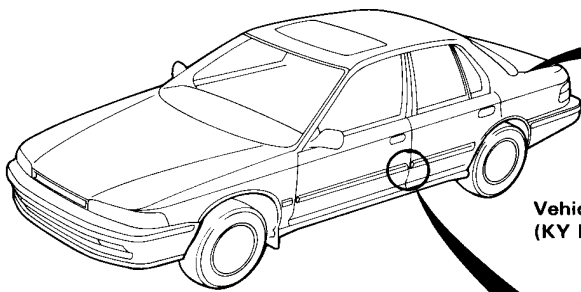




**Vehicle Identification Number
(KY Model only)**

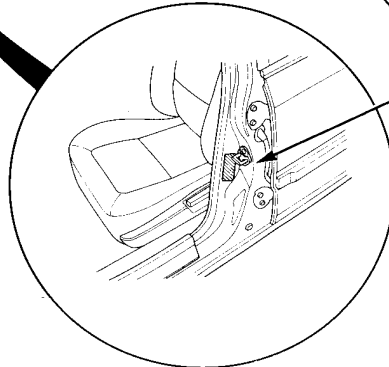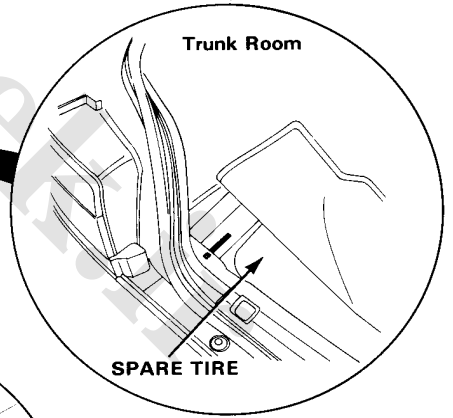

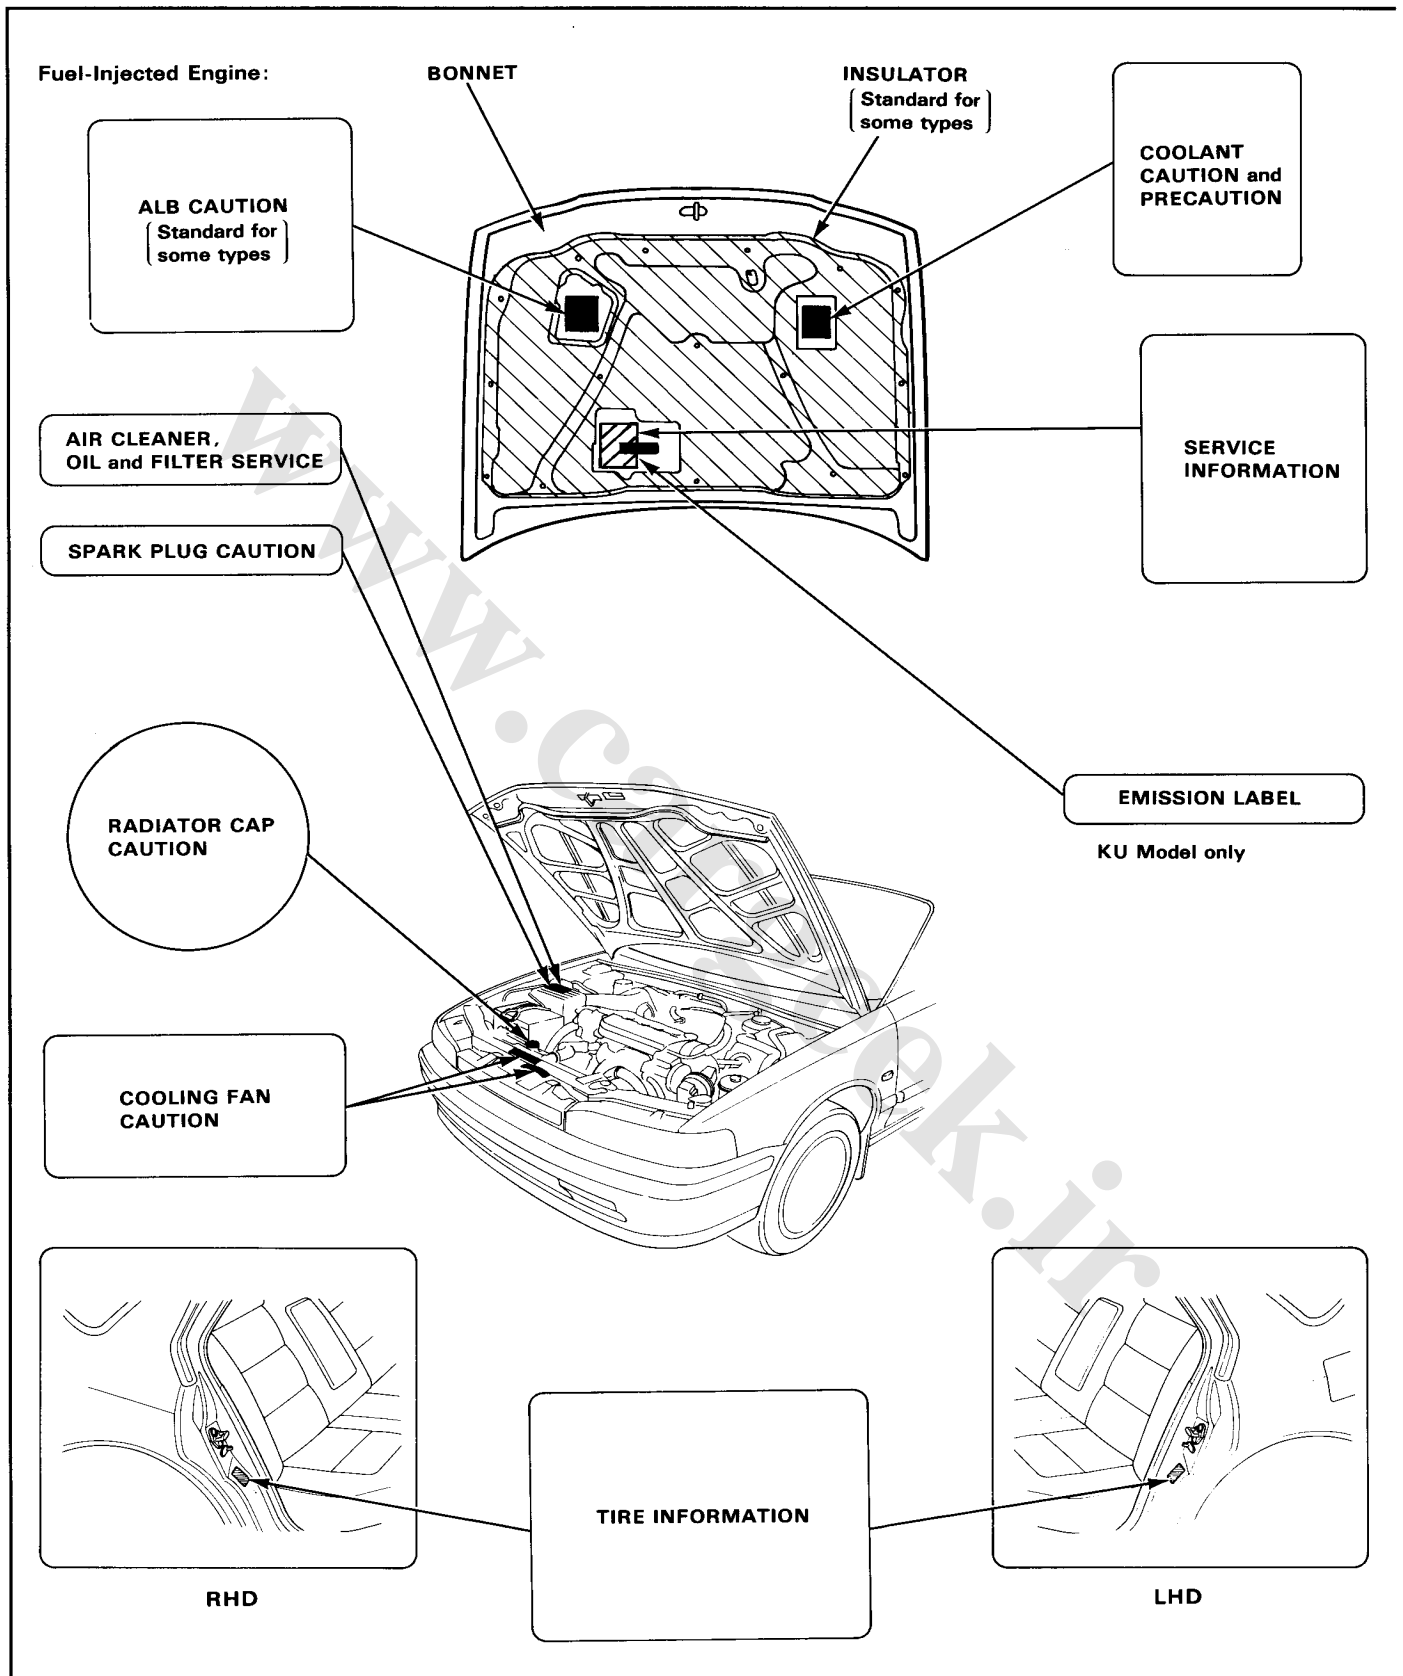



Carbureted Engine:

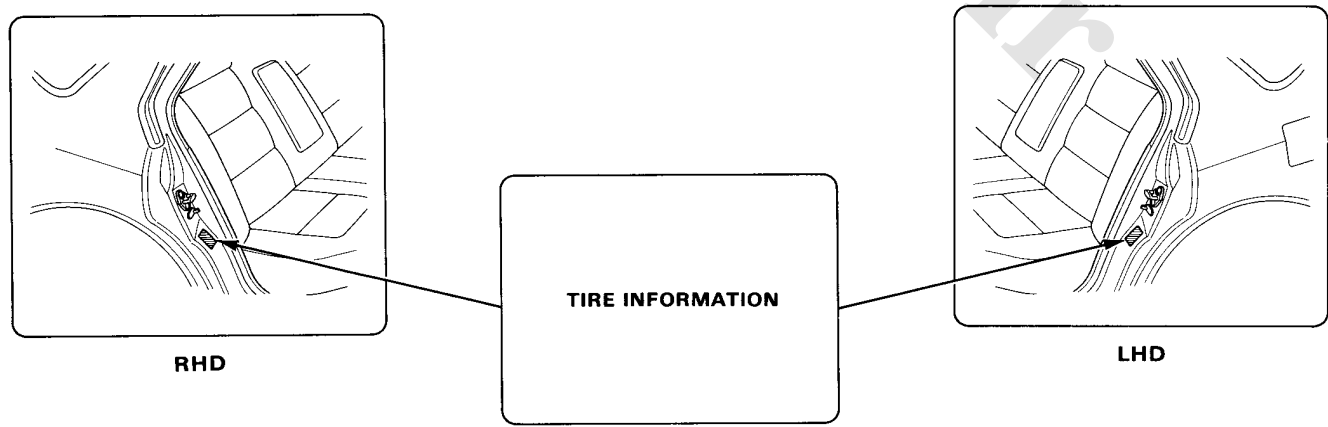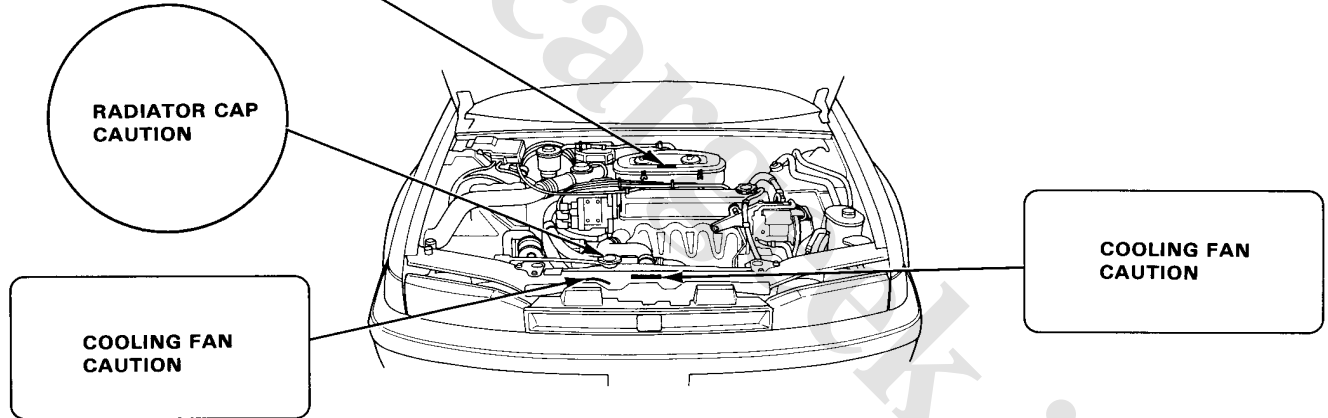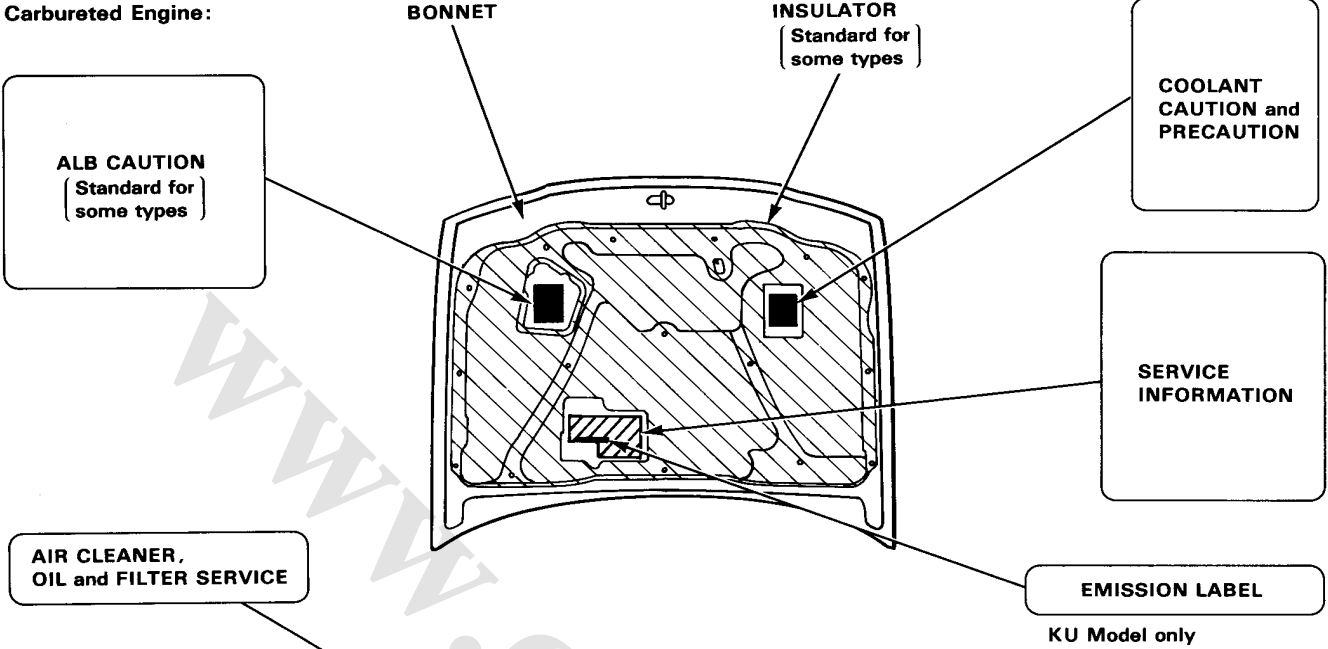


Hoist

1. Place the lift blocks as shown.
2. Raise the hoist a few inches and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

⚠ WARNING When heavy rear components such as suspension, fuel tank, spare tire and trunk lid are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight transfer.

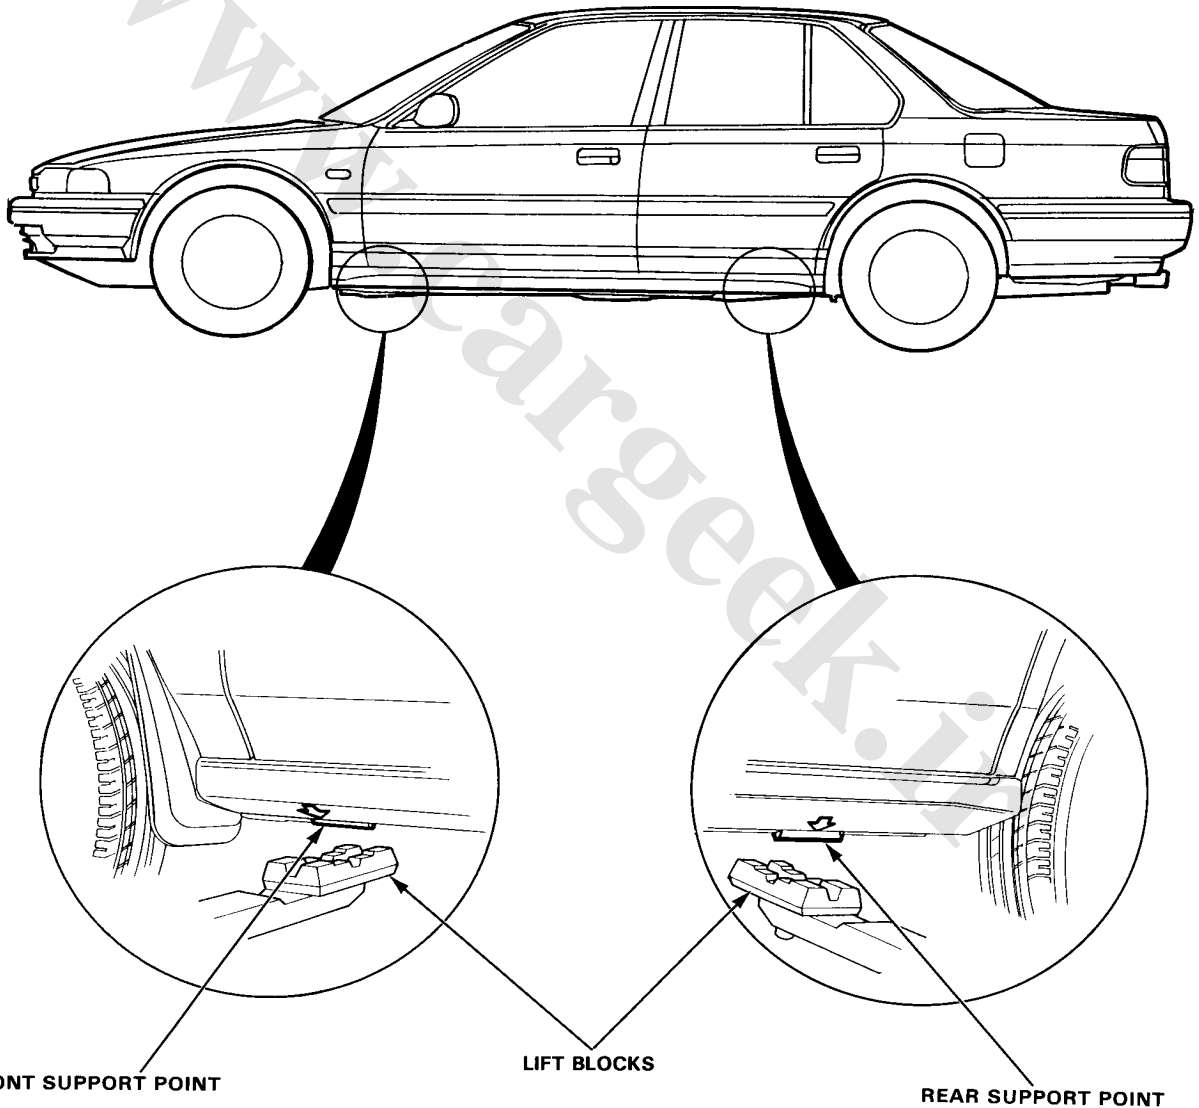




Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-8 so the car will be approximately level, then lower the car onto the stands.


⚠ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front



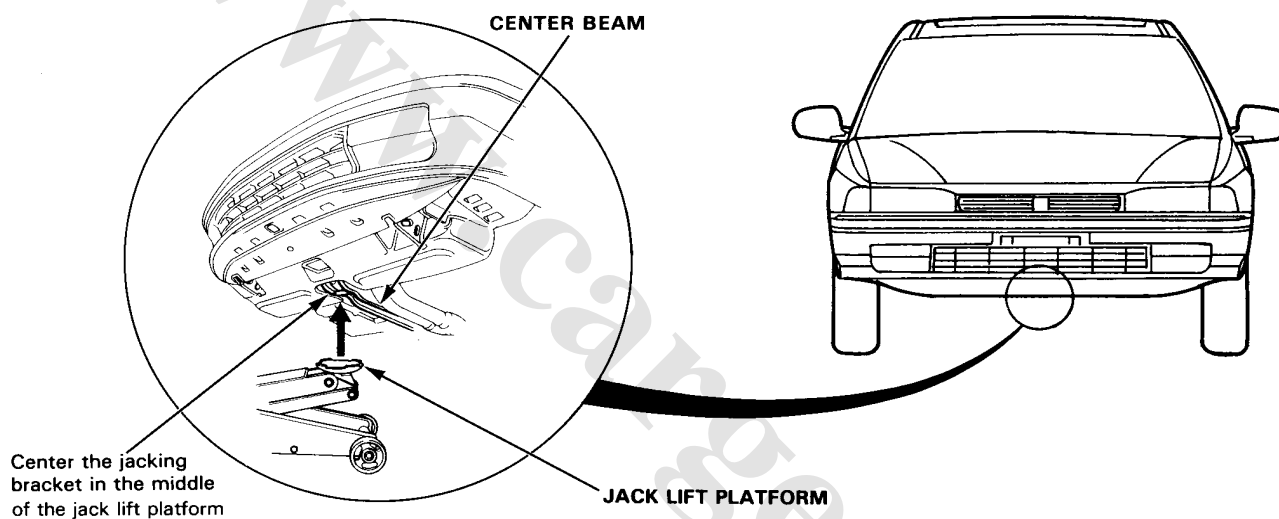


Rear

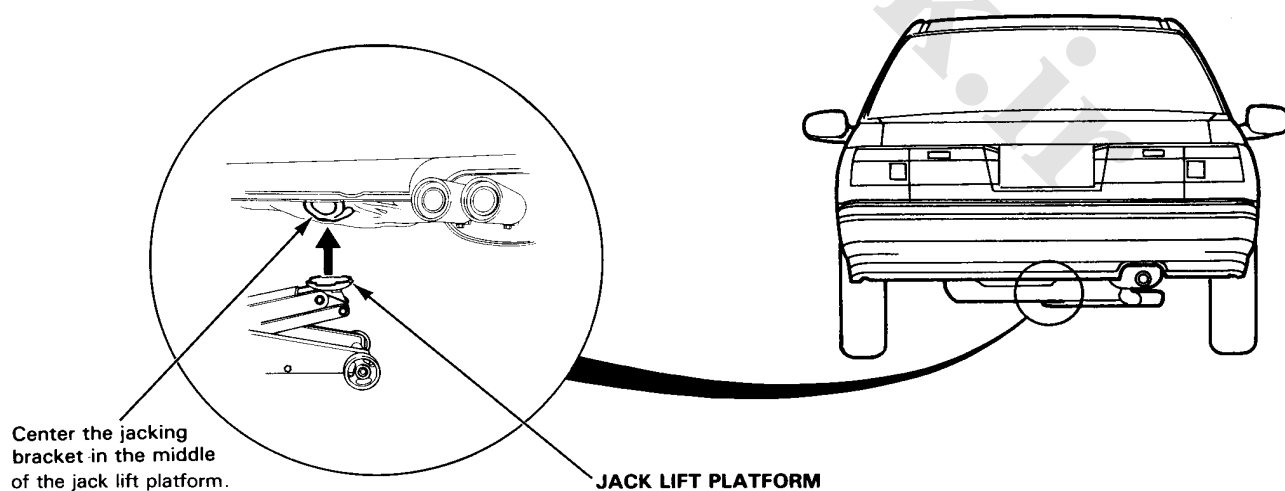

(cont'd)

Safety Stands

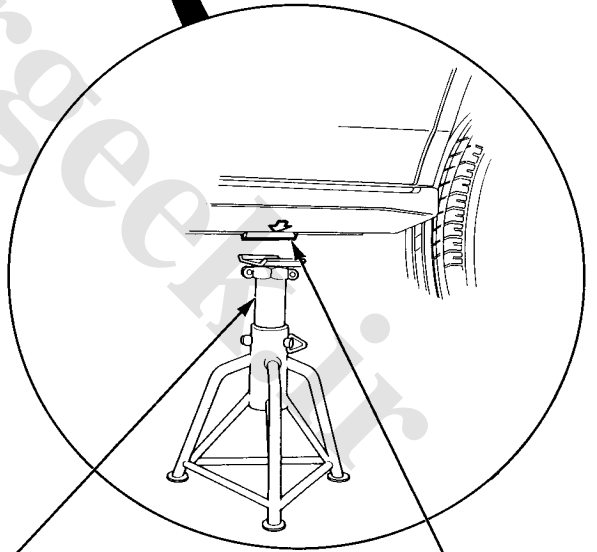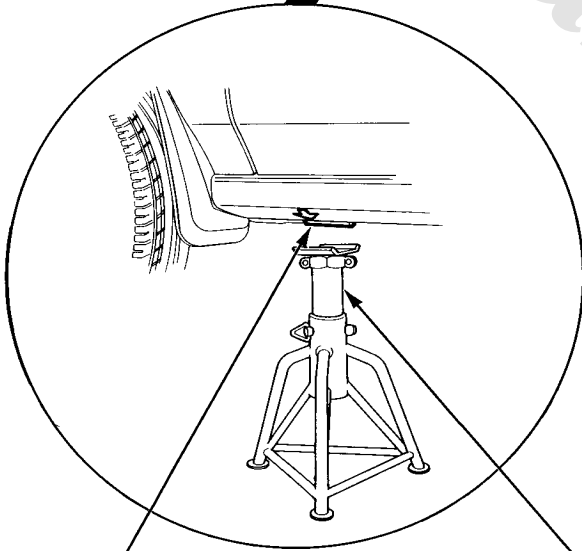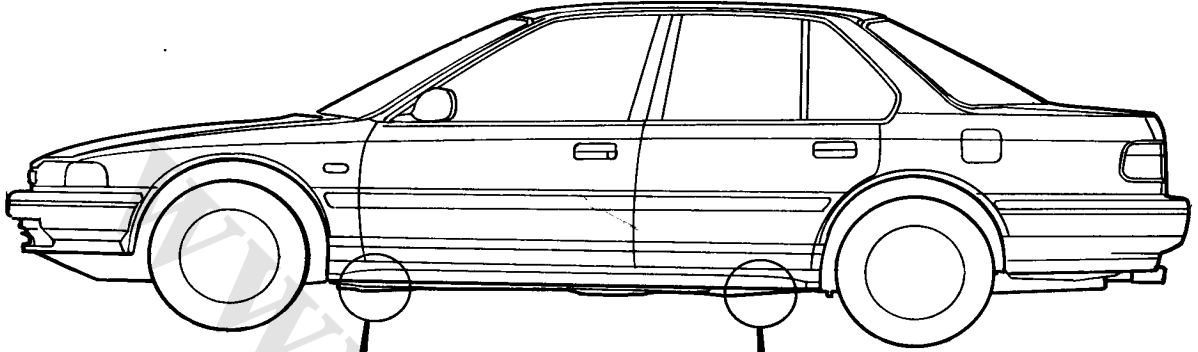

FRONT SUPPORT POINT

SAFETY STANDS

REAR SUPPORT POINT



⚠ WARNING Never use two chains or rope to tow a car; your ability to safety control the car may be adversely affected.

We recommend the following:

Flat Bed Equipment—Entire car is winched on a flat bed vehicle. This is the best way of transporting the car.

Wheel Lift Type—Tow with the front wheels off the ground.

If the car can only be towed with the front wheels on the ground: make sure the transmission is full of fluid (see Section 9) and tow with the transmission in neutral (N) and the ignition key in the I position.

CAUTION: To avoid serious damage on automatic transmission cars, first start the engine and shift to D4, then to N and shut the engine off. If the engine does not run or the transmission cannot be shifted while the engine is running, the car must be transported on flat bed equipment.


When towing the 2.2i (with 4WS) even with the front wheels off the ground, center the steering and tie the steering wheel in place.

Check local regulations for towing.

CAUTION:

- Do not exceed 35 mph (55 km/h) or tow for distances of more than 50 miles (80 km).
- If a sling type tow is used, the tow truck driver should position wood spacer blocks between the car's frame and the chains and lift straps to avoid damaging the bumper and the body.
- Do not use the bumpers to lift the car or to support the car's weight while towing.


TOWING HOOKS/
TIE DOWN BRACKETS

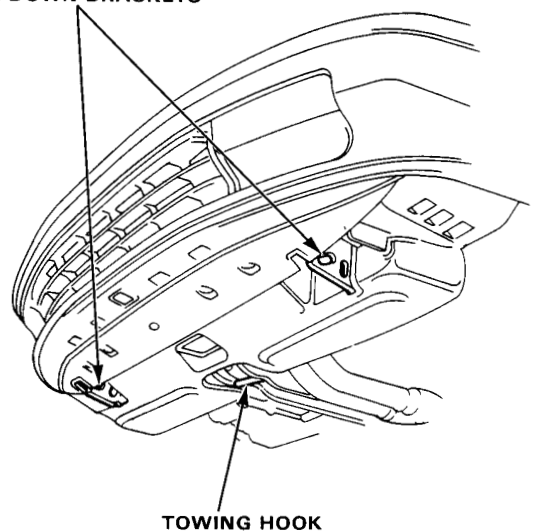


Preparation of Work

Special Caution Items For This Car

1. 4WS system servicing (with 4WS)
 - Do not disassemble the rear steering gear box.
 - When towing the car even with the front wheels off the ground, center the steering and tie the steering wheel in place.
 - When testing or adjusting the wheel alignment, attach the rear steering center lock pin to the rear steering gear box. Make sure that the rear steering gear box is located at the neutral position.

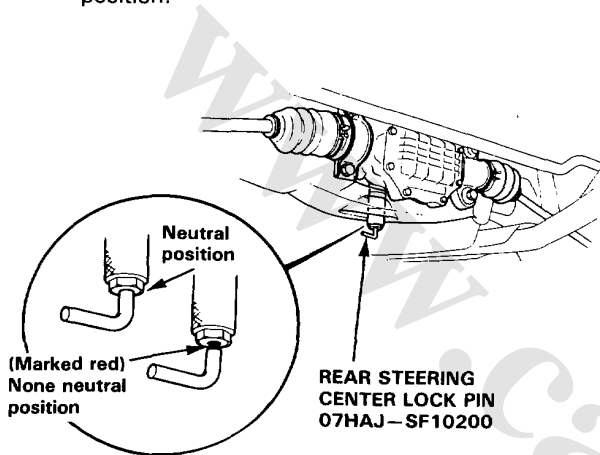


2. ALB piping system servicing
 - Disassemble the ALB piping system after relieve the high-pressured brake fluid.
 - Otherwise, the high-pressured brake fluid will burst out and it is very dangerous.
 - See section 13 how to relieve the high-pressured brake fluid.

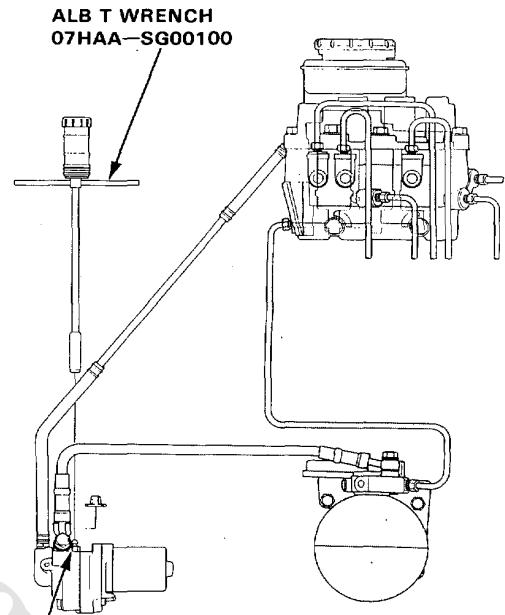

SERVICE BOLT
6 N·m (0.6 kg-m, 4 lb-ft)


3. Fuel Line Servicing
 - Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

SERVICE BOLT
12 N·m (1.2 kg-m, 9 lb-ft)

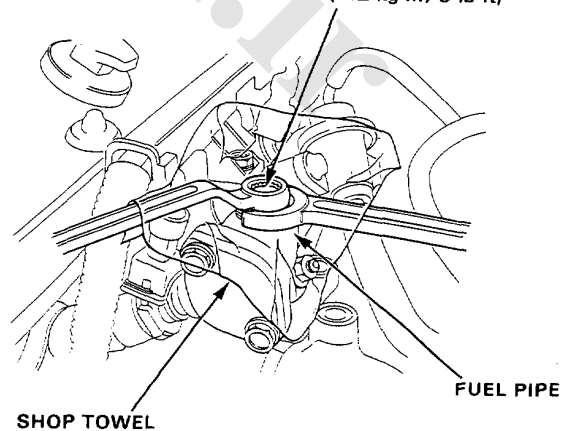




- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

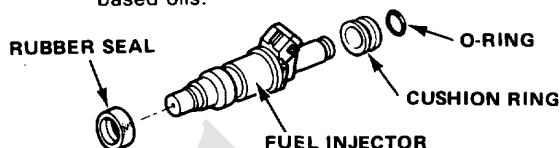

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

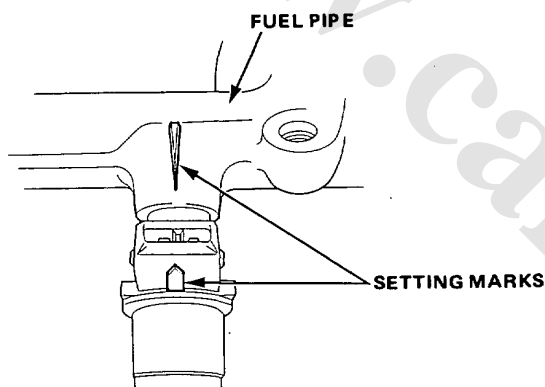

4. Inspection for fuel leakage
 - After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

5. Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, Carburetor, A/T, Cruise control and ALB control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the control units.

The control unit locations:

- Fuel-Injection, Carburetor, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- ALB: Right side panel of trunk room.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring. When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).


6. Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine Liquid gasket part No. 0Y740-99986.

- Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
- Apply liquid gasket evenly, being careful to cover all the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. In that case, reapply liquid gasket after removing the old residue.
- Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


Preparation of Work

CAUTION: Observe all safety precautions and notes while working.

1. Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

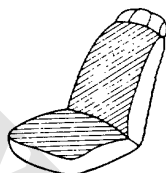


2. Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate as frequently as possible when a work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

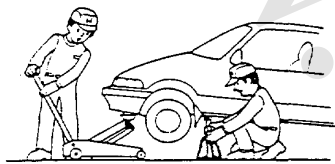


3. Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.




4. Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.




5. Use the special tools when use of such is specified.

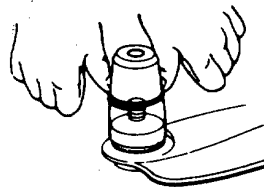


6. Parts must be assembled with the proper torque according to the maintenance standards established.
7. When tightening a series of bolts or nuts, begin with the center or larger diameter bolts and tighten them in crisscross pattern in two or more steps.

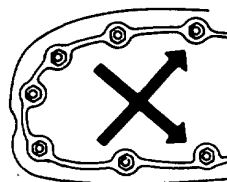

8. Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

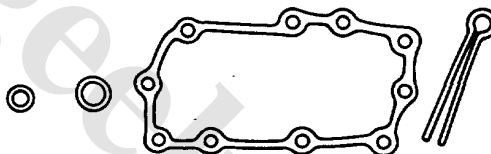


9. Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

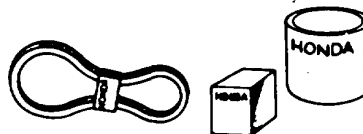



10. Coat or fill parts with specified grease as specified (Page 4-2). Clean all removed parts with solvent upon disassembly.

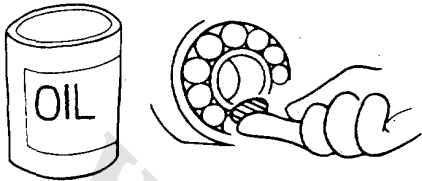


11. Brake fluid and hydraulic components

- When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
- Do not mix different brands of fluid as they may not be compatible.
- Do not reuse drained brake fluid.
- Brake fluid can cause damage to painted surfaces. Wipe up spilled fluid at once.
- After disconnecting brake hoses or pipes be sure to plug the openings to prevent loss of brake fluid.
- Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.




- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.

12. Avoid oil or grease getting on rubber parts and tubes, unless specified.
13. Upon assembling, check every part for proper installation and operation.

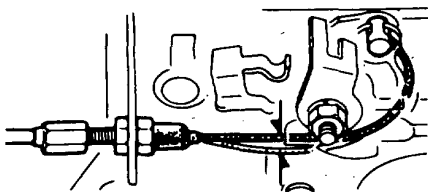


Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

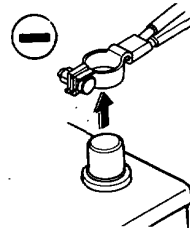


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

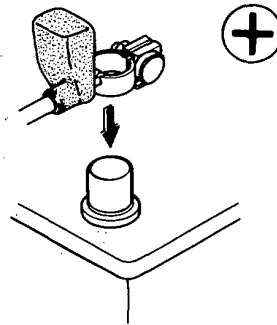

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

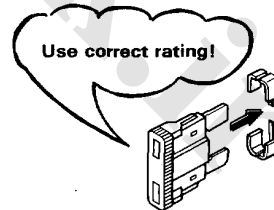

- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

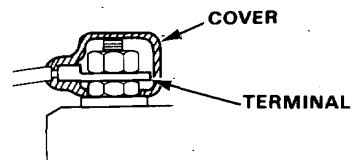


(cont'd)

Preparation of Work


Electrical (cont'd)

Since new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.


- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector. Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

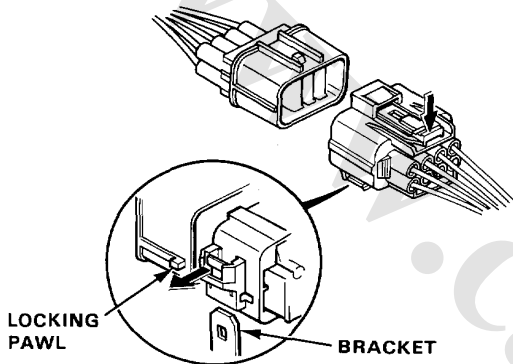


- Push the locking tab to disconnect.

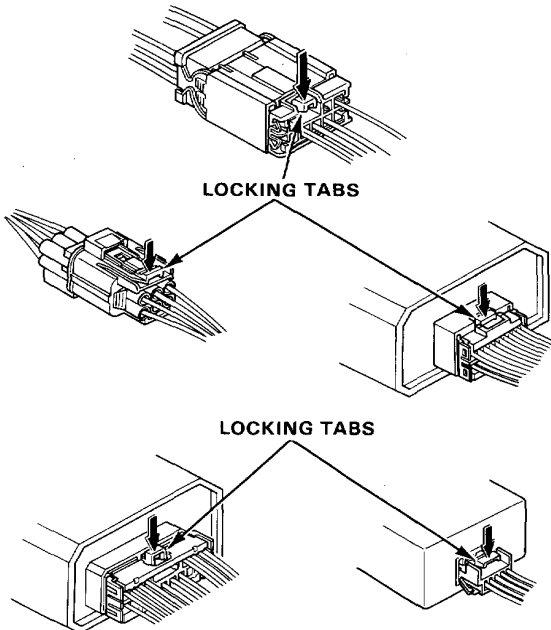


- Pull up the locking tab to remove the connector from the bracket.

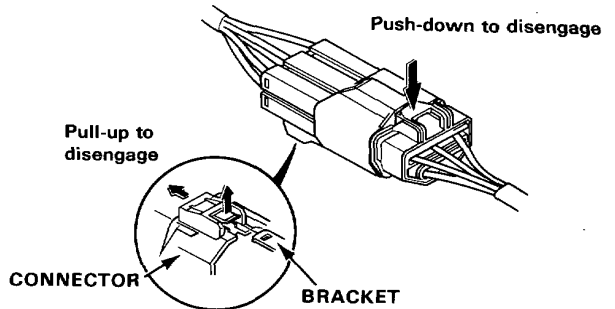

- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

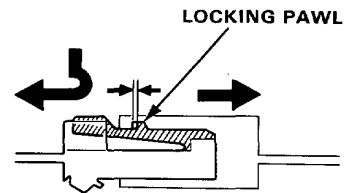


- When disconnecting a connector, pull it off from the mating coupler by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.

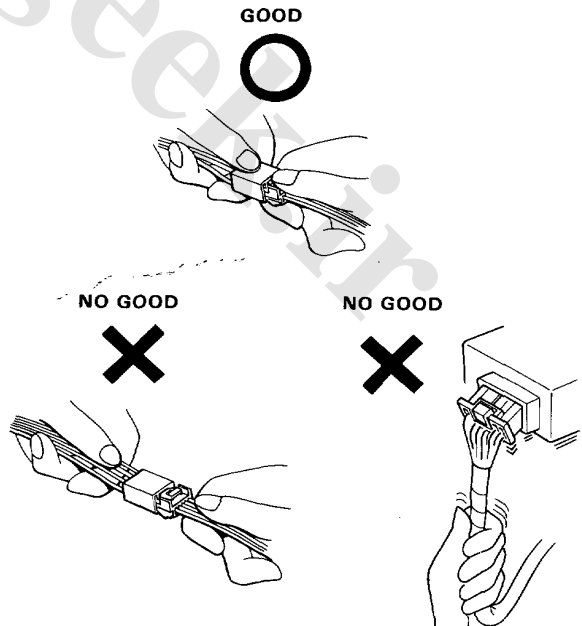





- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

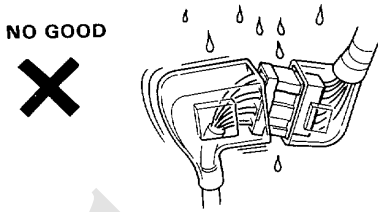


- Before connecting connectors, check to see that the terminals are in place and are not bent or distorted.

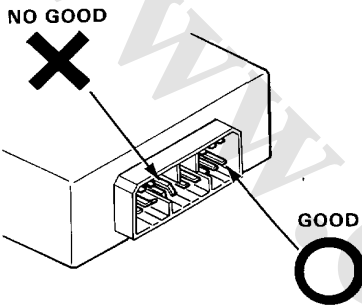


- Check for loose retainers and rubber seals. The illustration shows examples of terminal and seal abnormality.

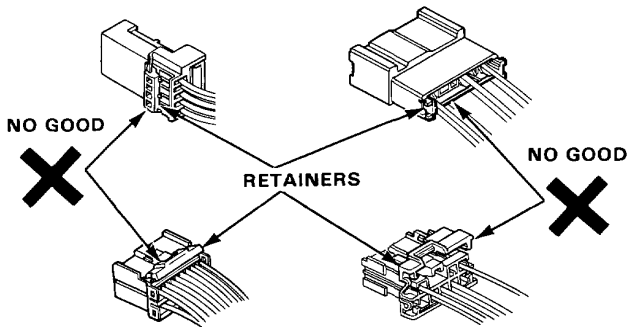

Example of waterproof connector:

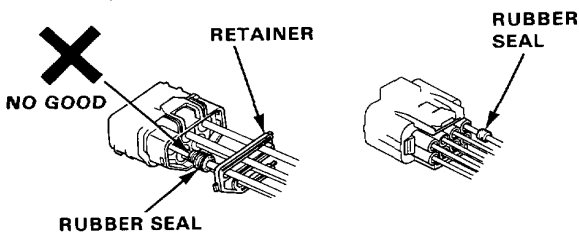

- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

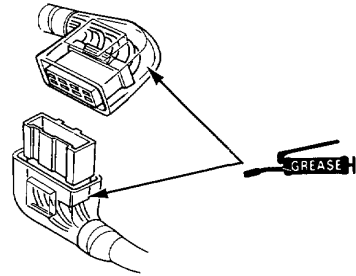


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.



- The locking tab with an angle end should be pushed when connecting.



- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Don't use wire harnesses with a loose wire or coupler.

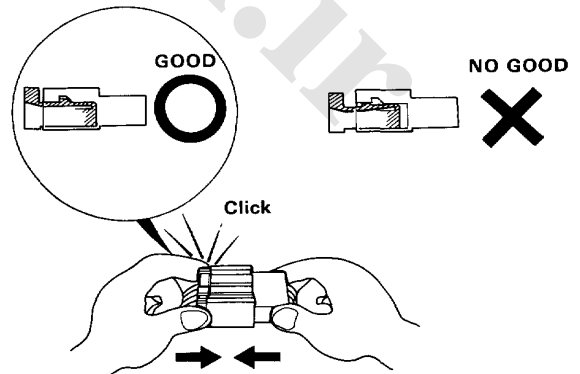


(cont'd)


Preparation of Work

Electrical (cont'd)



- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

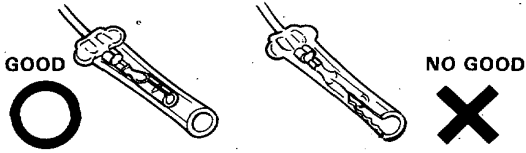


- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open of the cover is not facing upward.

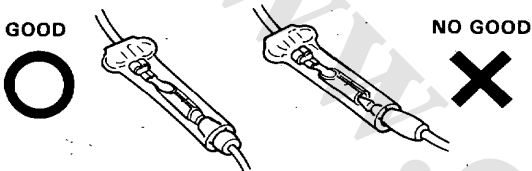


- Secure wires and wire harnesses to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or wire harnesses.
- Remove with care not to damage the lock.

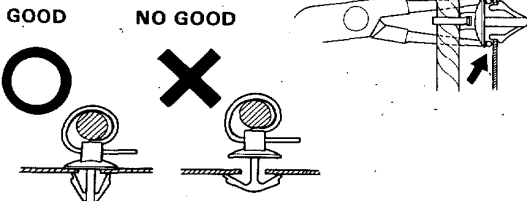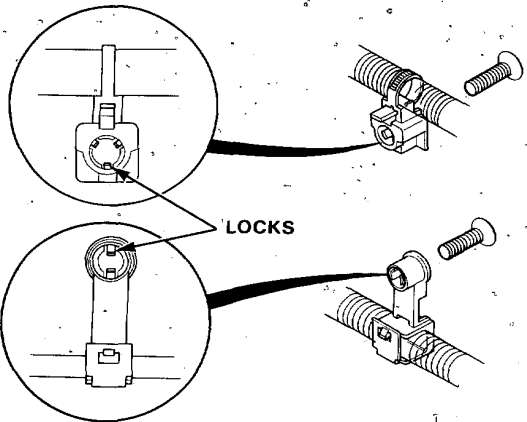


GOOD

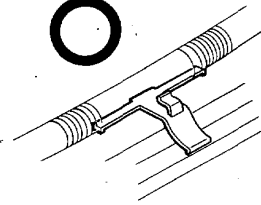


NO GOOD

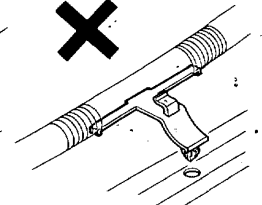


GOOD

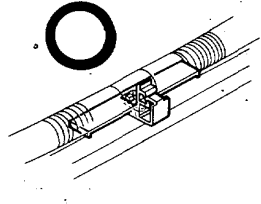


NO GOOD

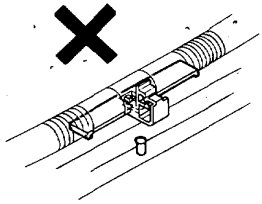

- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

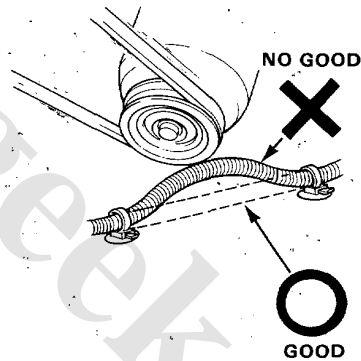


- Always keep a safe distance between wire harnesses and any heated parts.

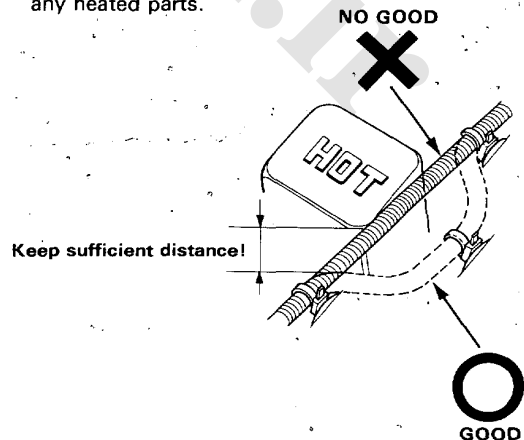





- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends or bolts, screws and other fasteners.

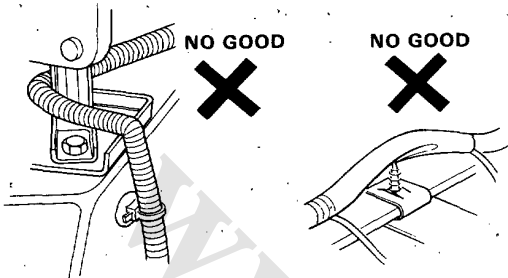


- Route harnesses so they are not pulled taut or slackened excessively.

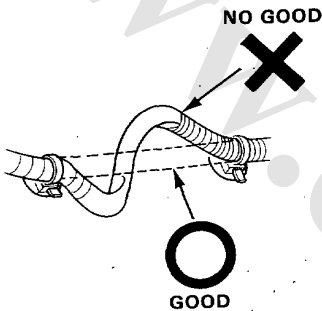


- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

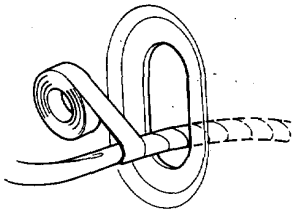


- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

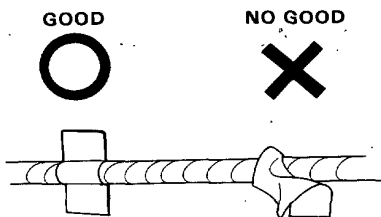


- Seat grommets in their grooves properly.

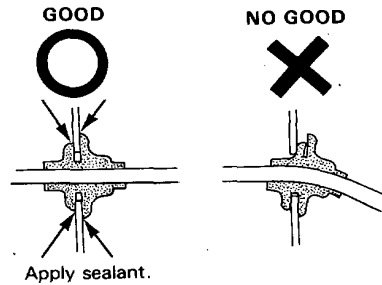

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

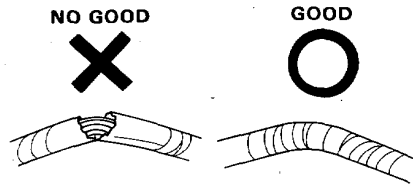

- After installing parts, make sure that wire harnesses are not pinched.

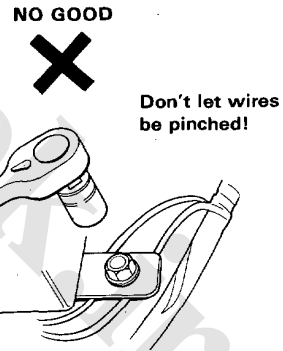

- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched or interfering with adjacent or surrounding parts in all steering positions.


(cont'd)

Preparation of Work


Symbol Marks

Electrical (cont'd)

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

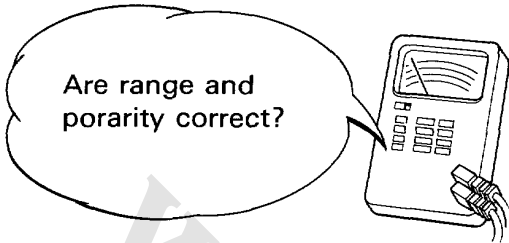


- Always insert the probe of the tester from the wire harness side (except waterproof connectors).

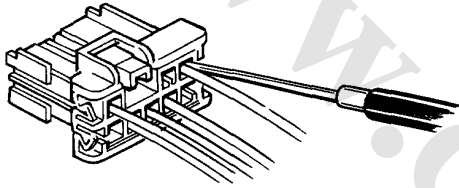


- Make sure to use the probe with a taper tip.

GOOD




NO GOOD



- Do not drop parts.

NO GOOD

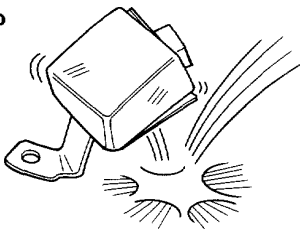

The following symbols stand for:



:Apply engine oil..



:Apply brake fluid.



:Apply grease.



:Apply DEXRON® II Automatic Transmission Fluid.



:Apply Power Steering Fluid.



:Apply or check vacuum.



:Sequence for removal or installation.



Abbreviation

2WS	Front Wheel Steering	P	Parking
4WS	Four Wheel Steering	R	Reverse
A/C	Air Conditioner	N	Neutral
ALB	Anti Lock Brake	D ₁	Drive Position (1st—4th)
A/T	Automatic Transmission	D ₃	Drive Position (1st—3rd)
ATF	Automatic Transmission Fluid	2	Fixed 2nd speed
B or BAT	Battery	1	Fixed 1st speed
CATA	Catalytic Converter	S	S Signal/S Switch
EACV	Electronic Air Control Valve		
ECU	Electronic Control Unit for Fuel-Injection System		
EGR	Exhaust Gas Recirculation		
EX	Exhaust		
GND	Ground		
IG	Ignition		
IN	Intake		
INT	Intermittent		
L.	Left		
LHD	Left Hand Drive		
M/T	Manual Transmission		
PCV	Positive Crankcase Ventilation		
PGM-FI	Programmed Fuel-Injection		
P/S	Power Steering		
R.	Right		
RHD	Right Hand Drive		
SW	Switch		
SOL.V	Solenoid Valve		
TDC	Top Dead Center		

New Tools
Tool List


www.cargeek.ir

Special Tools

New Tools


Only new tools are listed below. As to other tools, refer to each section.

Ref. No.	Tool Number	Description	Q'ty	Remarks	Sec.
①	07LAA-PT50100	O ₂ Sensor Socket Wrench	1		
②	07LAA-SM40100	Locknut Wrench 43 mm	1		11
③	07LAA-SM40200	Locknut Wrench 36 x 43 mm	1		11
④	07LAD-SM40100	Seal Driver Attachment	1		10
⑤	07LAE-PX40100	Clutch Spring Compressor Attachment	1		9
⑥	07LAF-PT00110	Clutch Alignment Shaft	1		7
⑦	07LAF-PT20100	Bearing Replacement Tool Set	1	Refer to F18A/F20A/ F22A ENGINE Maintenance and Repair	-
⑧	07LAF-SM40200	Brake Spring Installer	1		13
⑨	07LAF-SM40300	Support Base Attachment	1		10
⑩	07LAG-PT20100	Balancer Shaft Lock Pin	1		5

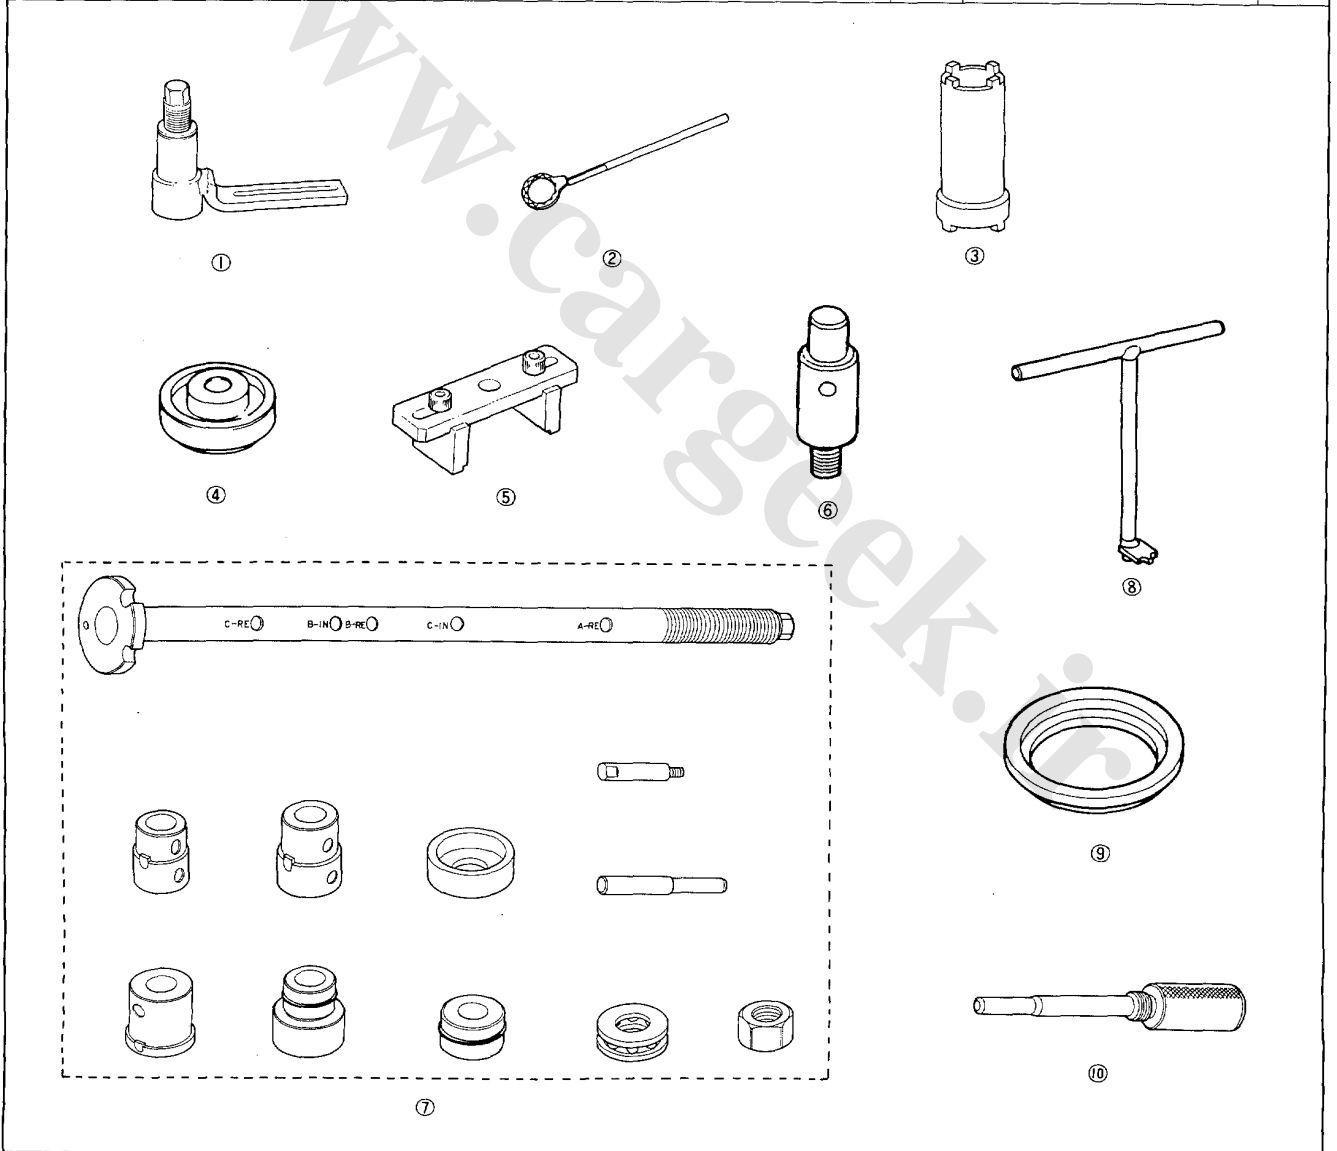



Ref. No.	Tool Number	Description	Q'ty	Remarks	Sec.
①	07LAG—SM40000	4WS Tool Kit	1		11
①-1	07LAG—SM40100	Piston Seal Ring Guide	1		11
①-2	07LAG—SM40200	Piston Seal Ring Sizing Tool	1		11
①-3	07LAG—SM40300	Cylinder End Seal Slider	1		11
①-4	07LAG—SM40400	Cylinder End Seal Guide	1		11
①-5	07LAG—SM40500	Tool Box	1		11
⑫	07LAJ—PT30100	ECU Test Harness	1		6,9,11
⑬	07LAJ—PT30200	Test harness	1		6
⑭	07LAK—SM40110	P/S Joint Adaptor (Pump)	1		11
⑮	07LAK—SM40100	P/S Joint Adaptor (Hose)	1		11
⑯	07LAZ—PT30100	R.P.M. Connecting Adaptor	1		5,6
⑰	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	1		5,6
⑱	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	1		5,6

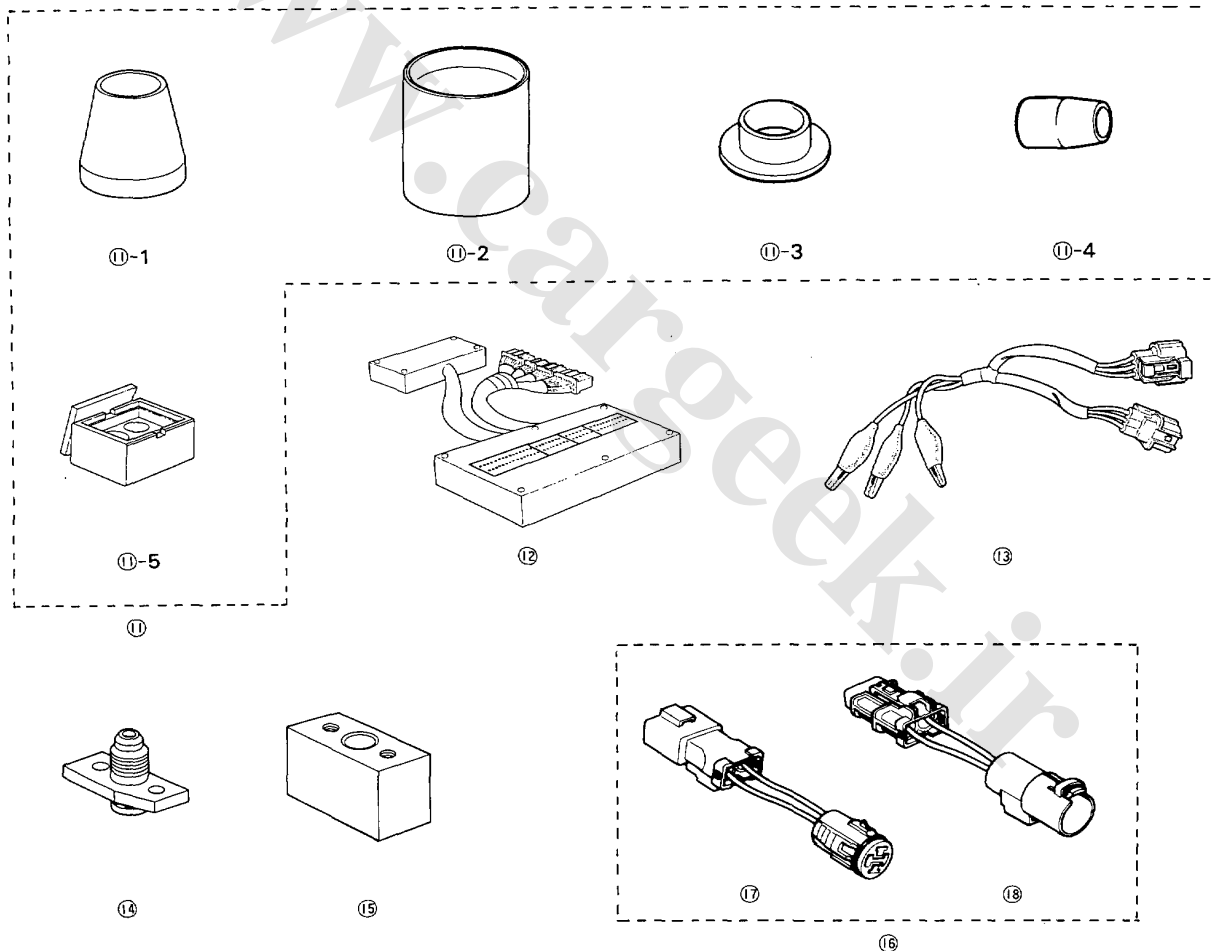

Special Tools

5. Engine

Number	Tool Number	Description	Q'ty	Remarks
①	07HAD—PJ70200	Valve Stem Seal Installer	1	
②	07HAF—PL20102	Piston Base Head	1	
③	07HAH—PJ70100	Valve Guide Reamer, 5.5 mm	1	
④	07JAB—0010000	Crank Pulley Holder Set	1	
④-1	07JAA—0010200	Socket Wrench 19 mm	(1)	
④-2	07JAB—0010200	Handle	(1)	
⑤	07JAB—0010400	Pulley Holder Attachment HEX 50 mm	1	
⑥	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
⑦	07JGG—0010100	Belt Tension Gauge	1	
⑧	07GAF—PH70100	Pilot Collar	1	
⑨	07LAF—PT20100	Bearing Replacement Tool Set	1	
⑩	07LAG—PT20100	Balancer Shaft Lock Pin	1	
⑪	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑫	07LAZ—PT30110	R.P.M. Connecting Adaptor A	1	
⑬	07LAZ—PT30120	R.P.M. Connecting Adaptor B	1	
⑭	07406—0030000	Oil Pressure Gauge Adaptor	1	
	07742—0010100	Valve Guide Remover, 5.5 mm		
⑮	07746—0010300	Driver Attachment	1	for Crankshaft
⑯	07746—0010400	Driver Attachment	1	for Balancer Shaft
⑰	07749—0010000	Driver	1	
⑱	07757—0010000	Valve Spring Compressor	1	
⑲	07912—6110001	Oil Filter Socket	1	
⑳	07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
㉑	07984—6570101	Valve Guide Reamer, 6.6 mm	1	
㉒	07942—8920000	Valve Guide Driver, 5.5 mm	1	
㉓	07948—SB00101	Driver Attachment	1	
㉔	07973—PE00310	Piston Pin Driver Shaft	1	
㉕	07973—PE00320	Piston Pin Driver Head	1	
㉖	07973—PE00400	Piston Pin Base Insert	1	
㉗	07973—6570500	Piston Base	1	
㉘	07973—6570600	Piston Base Spring	1	
㉙	07GAF—PH60300 or 07993—PE00400	Piston Pin Base Insert	1	



6. Fuel and Emissions

Number	Tool Number	Description	Q'ty	Remarks
①	07JAZ—SH20100	R.P.M. Connector	1	
②	07LAA—PT50100	O ₂ Sensor Socket Wrench	1	
③	07LAJ—PT30100	ECU Test Harness	1	
④	07LAJ—PT30200	Test Harness	1	
⑤	07LAZ—SH20100	R.P.M. Connecting Adaptor	1	
⑥	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑥-1	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑥-2	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑦	07406—0040001	Fuel Pressure Gauge Set	1	
⑦-1	07406—0040100	Pressure Gauge	(1)	Component Tools
⑦-2	07406—0040201	Hose Assembly	(1)	
⑧	07411—0020000	Digital Circuit Tester	1	
⑨	07614—0050100	Fuel Line Clamp	1	

7. Clutch

Number	Tool Number	Description	Q'ty	Remarks
①	07JAF—PM7011A	Clutch Alignment Disc	1	
②	07LAF—PT00110	Clutch Alignment Shaft	1	
③	07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
④	07936—3710100	Handle	1	

8. Manual Transmission

Number	Tool Number	Description	Q'ty	Remarks
①	07GAJ—PG20102	Mainshaft Inspection Tool Set	1	
①-1	07GAJ—PG20110	Mainshaft Holder	(1)	Component Tools
①-2	07GAJ—PG20130	Mainshaft Base	(1)	
②	07HAJ—PK40201	Preload Inspection Tool	1	
③	07JAC—PH80000	Adjusting Bearing Remover Set	1	
③-1	07JAC—PH80100	Bearing Remover Attachment	(1)	Component Tools
③-2	07JAC—PH80200	Bearing Remover Handle	(1)	
③-3	07741—0010201	Bearing Remover Weight	(1)	
④	07JAD—PH80400	Pilot Driver 28 mm	1	
⑤	07JAD—SH30100	Oil Seal Driver	1	
⑥	07744—0010400	Pin Driver 5.0 mm	1	07944—6110100 may also be used
⑦	07746—0010300	Attachment 42 x 47 mm	1	
⑧	07746—0010400	Attachment 52 x 55 mm	1	
⑨	07746—0010500	Attachment 62 x 68 mm	1	
⑩	07746—0010600	Attachment 72 x 75 mm	1	
⑪	07746—0030100	Driver	1	
⑫	07746—0030200	Inner Driver 25 mm	1	
⑬	07749—0010000	Driver	1	
⑭	07944—SA00000	Pin Driver 4.0 mm	1	
⑮	07947—6110501	Oil Seal Driver	1	
⑯	07979—PJ40001	Magnet Stand Base	1	

Standards and Services Limits
Design Specifications
Body Specifications

www.cargeek.ir

Standards and Service Limits

5. Engine/Cylinder Head, Valve Train

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT		
Compression	250 min ⁻¹ (rpm) and wide-open throttle		Nominal	1,177 kPa (12.0 kg/cm ² , 171 psi)		
		1.8 ℓ	Minimum	931 kPa (9.5 kg/cm ² , 135 psi)		
		2.0 ℓ	Maximum variation	196 kPa (2 kg/cm ² , 28 psi)		
Cylinder head	Warpage Height		Nominal	1226 kPa (12.5 kg/cm ² , 178 psi)		
		2.0 ℓ	Minimum	931 kPa (9.5 kg/cm ² , 135 psi)		
		2.2 ℓ	Maximum variation	196 kPa (2 kg/cm ² , 28 psi)		
Cylinder head	Warpage Height		99.95–100.05 (3.935–3.938)	0.05 (0.002)		
Camshaft	End play Oil clearance Runout Cam lobe height	IN	1. F18A2:	0.05–0.15 (0.002–0.006)	0.50 (0.020)	
			2. F20A2:	0.05–0.089 (0.002–0.0035)	0.150 (0.006)	
			3. F20A3:	0.015 (0.0006)	0.030 (0.001)	
			4. F20A4:	38.095 (1.4998)	—	
			5. F20A5:	38.526 (1.5167)	—	
			6. F20A6:	38.526 (1.5167)	—	
			7. F22A2:	38.741 (1.5252)	—	
			8. F22A3:	38.741 (1.5252)	—	
			9. F22A5:	38.741 (1.5252) MT	—	
				38.741 (1.5252) AT	—	
			EX	1. F18A2:	38.526 (1.5167)	—
			2. F20A2:	37.890 (1.4917)	—	
			3. F20A3:	38.778 (1.5266)	—	
			4. F20A4:	38.778 (1.5266)	—	
			5. F20A5:	38.972 (1.5343)	—	
			6. F20A6:	38.972 (1.5343)	—	
			7. F22A2:	38.778 (1.5266)	—	
			8. F22A3:	38.972 (1.5343)	—	
			9. F22A5:	39.356 (1.5494) MT	—	
	38.972 (1.5343) AT	—				
	38.778 (1.5266)	—				
Valve	Valve clearance	IN	EX	0.24–0.28 (0.0094–0.0110)	—	
			EX	0.28–0.32 (0.0110–0.1259)	—	
			IN CARB	5.485–5.495 (0.2159–0.2163)	5.455 (0.2147)	
			PGM-FI	5.480–5.490 (0.2157–0.2161)	5.450 (0.2145)	
			EX	5.450–5.460 (0.2145–0.2149)	5.420 (0.2133)	
			EX	0.020–0.045 (0.0007–0.0017)	0.075 (0.0029)	
Valve	Valve stem O.D.	IN	CARB	0.025–0.050 (0.0009–0.0019)	0.080 (0.0031)	
			PGM-FI	0.055–0.080 (0.0021–0.0031)	0.12 (0.0047)	
			EX	—	—	
			IN and EX	1.25–1.55 (0.049–0.0610)	2.00 (0.0787)	
			IN	48.245–48.715 (1.8994–1.9179)	—	
			EX	50.315–50.785 (1.9809–1.9994)	—	
Valve seat	Width	IN and EX	IN	—	—	
			EX	—	—	
Valve seat	Valve stem installed height	IN	IN	—	—	
			EX	—	—	
Valve spring	Free Length	IN (NH)	1. F18A2:	56.28 (2.2157)	—	
			2. F20A2:	54.82 (2.1582)	—	
			3. F20A3:	54.82 (2.1582)	—	
			4. F20A4:	53.15 (2.0925)	—	
			5. F20A5:	53.15 (2.0925)	—	
			6. F20A6:	54.82 (2.1582)	—	
			7. F22A2:	53.15 (2.0925)	—	
			8. F22A3:	53.15 (2.0925)	—	
			9. F22A5:	54.82 (2.1582)	—	
		(CH)	1. F18A2:	56.26 (2.2149)	—	
			2. F20A2:	54.81 (2.1578)	—	
			3. F20A3:	54.81 (2.1578)	—	
			4. F20A4:	53.16 (2.0929)	—	
			5. F20A5:	53.16 (2.0929)	—	
			6. F20A6:	54.81 (2.1578)	—	
			7. F22A2:	53.16 (2.0929)	—	
			8. F22A3:	53.16 (2.0929)	—	
			9. F22A5:	54.81 (2.1578)	—	

1. F18A2: 1.8 ℓ CARB
 2. F20A2: 2.0 ℓ CARB with CATA
 3. F20A3: 2.0 ℓ CARB
 4. F20A4: 2.0 ℓ PGM-FI with CATA
 5. F20A5: 2.0 ℓ PGM-FI
 6. F20A6: 2.0 ℓ CARB with CATA
 7. F22A2: 2.2 ℓ PGM-FI
 8. F22A3: 2.2 ℓ PGM-FI with CATA
 9. F22A5: 2.2 ℓ PGM-FI with CATA
 NH: NIHON HATSUJO
 CH: CHUO HATSUJO

5. Engine/Cylinder Head, Valve Train

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Valve spring	Free length	EX (NH)		
		1. F18A2:	59.89 (2.3578)	---
		2. F20A2:	59.89 (2.3578)	---
		3. F20A3:	59.89 (2.3578)	---
		4. F20A4:	55.78 (2.1960)	---
		5. F20A5:	55.78 (2.1960)	---
		6. F20A6:	59.89 (2.3578)	---
		7. F22A2:	55.78 (2.1960)	---
		8. F22A3:	55.78 (2.1960)	---
		9. F22A5:	56.28 (2.2157)	---
		(CH)		
		1. F18A2:	59.88 (2.3574)	---
		2. F20A2:	59.88 (2.3574)	---
		3. F20A3:	59.88 (2.3574)	---
		4. F20A4:	55.80 (2.1968)	---
		5. F20A5:	55.80 (2.1968)	---
		6. F20A6:	59.88 (2.3574)	---
		7. F22A2:	55.80 (2.1968)	---
8. F22A3:	55.80 (2.1968)	---		
9. F22A5:	55.80 (2.1968)	---		
Valve guide	I.D.	IN and EX	5.53 (0.2177)	
	Valve guide installed height	IN	23.75—24.25 (0.9148—0.9547)	
		EX	15.05—15.55 (0.5925—0.6122)	
Rocker arm	Arm-to shaft clearance	IN	0.017—0.050 (0.0007—0.0020)	
		EX	0.018—0.054 (0.0007—0.0021)	

5. Engine/Engine Block

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Cylinder block	Warpage of deck surface	0.07 (0.003) max.	0.10 (0.004)
	Bore diameter	85.00—85.02 (3.3464—3.3472)	85.07 (3.3492)
	Bore taper	---	0.05 (0.002)
	Reboring limit	---	0.5 (0.02)
Piston	Skirt O.D. (At 21 mm (0.83 in) from bottom of skirt)	A	84.98—84.99 (3.3456—3.4605)
		B	84.97—84.98 (3.3452—3.3456)
		Clearance in cylinder	0.02—0.04 (0.0008—0.0016)
Piston ring	Piston-to-ring clearance	Top	0.035—0.060 (0.0014—0.0024)
		Second	0.030—0.055 (0.0011—0.0022)
	Ring end gap	Top	0.20—0.35 (0.0079—0.0138)
		Second	0.40—0.55 (0.0157—0.0217)
		Oil	0.20—0.70 (0.0079—0.0276)
			0.130 (0.0051)
Connecting rod	Pin-to rod interference	0.013—0.032 (0.0005—0.0013)	---
	Small end bore diameter	21.968—21.981 (0.8649—0.8654)	---
	Large end bore diameter	Nominal 48 (1.890)	---
		Normal 51 (2.008)	---
	End play installed on crankshaft	0.15—0.30 (0.006—0.012)	0.40 (0.016)
Crankshaft	Main journal diameter	No. 1, 2 Journals	49.976—50.000 (1.9676—1.9685)
		No. 3 Journal	49.972—49.996 (1.9674—1.9683)
		No. 4, 5 Journals	49.948—50.008 (1.9665—1.9688)
	Taper/out-of-round, main journal	0.005 (0.0002) max.	0.010 (0.0004)
	Rod journal diameter	44.976—45.000 (1.7710—1.7717)	---
	Taper/out-of-round, rod journal	0.005 (0.0002) max.	0.010 (0.0004)
	End play	0.10—0.35 (0.004—0.014)	0.45 (0.018)
Runout	0.015 max (0.0006)	0.020 (0.0008)	
Bearings	Main bearing-to journal oil clearance	No. 1, 2 Journals	0.021—0.045 (0.0009—0.0018)
		No. 3 Journal	0.035—0.044 (0.0014—0.0017)
		No. 4, 5 Journals	0.013—0.037 (0.0005—0.0015)
	Rod bearing-to journal oil clearance	2.2 ℓ others	0.021—0.044 (0.0008—0.0017)
		0.015—0.044 (0.0006—0.0017)	0.05 (0.002)

1. F18A2: 1.8 ℓ CARB
2. F20A2: 2.0 ℓ CARB with CATA
3. F20A3: 2.0 ℓ CARB
4. F20A4: 2.0 ℓ PGM-FI with CATA
5. F20A5: 2.0 ℓ PGM-FI
6. F20A6: 2.0 ℓ CARB with CATA
7. F22A2: 2.2 ℓ PGM-FI
8. F22A3: 2.2 ℓ PGM-FI with CATA
9. F22A5: 2.2 ℓ PGM-FI with CATA

Standards and Service Limits

5. Engine/Engine Block

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Balancer Shaft	Journal diameter	No.1 journal (Front)	(Front)	42.722—42.734 (1.6820—1.6824)	—
		No.2 journal (Rear)	(Rear)	20.938—20.950 (0.8243—0.8248)	—
		No.3 journal		38.712—38.724 (1.5241—1.5246)	—
	Journal taper			34.722—34.734 (1.3670—1.3674)	—
	End play			0.005 (0.0002)	—
	Runout			0.100—0.350 (0.0040—0.0138)	—
	Oil Clearance			0.060—0.180 (0.0024—0.0070)	—
Balancer Shaft Bearing	I.D	No.1 journal (Front)	(Front)	42.800—42.820 (1.6850—1.6858)	—
		No.2 journal (Rear)	(Rear)	21.000—21.013 (0.8268—0.8273)	—
		No.1, 3 journal		38.800—38.820 (1.5276—1.5283)	—
		No.2, journal		34.800—34.820 (1.3701—1.3710)	—
		No.2, journal		0.076—0.128 (0.0030—0.0050)	—

5. Engine/Engine Lubrication

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity (US. qt., Imp. qt.)			4.9 (5.2, 4.3) After engine disassembly 3.8 (4.0, 3.3) After oil change, including oil filter 3.5 (3.7, 3.1) After oil change, without oil filter	
Oil pump	Displacement			43.9 ± (11.6 US. gal., 9.7 Imp. gal.)/6,000 min ⁻¹ (rpm)	
	Inner-to-outer rotor radial clearance			0.02—0.16 (0.0008—0.0063)	0.2 (0.008)
	Pump body-to-rotor radial clearance			0.10—0.19 (0.0040—0.0075)	0.21 (0.0083)
Relief valve	Pump body-to-rotor side clearance			0.02—0.07 (0.001—0.003)	0.12 (0.005)
	Pressure setting 80°C (176°F)	Idle		69 kPa (0.7 kg/cm ² , 10 psi) min.	
3,000 min ⁻¹ (rpm)		3431 kPa (3.5 kg/cm ² , 50 psi)			

Unit of length: mm (in.)

5. Engine/Cooling

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Thermostat	Starts to open Full open Valve lift at full open	78°C±2 (172°F±3) 90°C (194°F) 8 (0.31) max.	86—90°C (187—194°F)
Water Pump	Displacement	160 ℓ (42.2 US gal, 35.2 Imp gal)/6,000 min ⁻¹ (rpm)	
Radiator	Capacity (incl. heater) ℓ (US.qt., Imp. qt) (Includes reservoir tank 0.6 (0.63, 0.53) after overhaul	MT: 6.6 (6.97, 5.81) AT: 6.5 (6.87, 6.72)	
	at change	MT: 3.0 (3.17, 2.64) AT: 2.9 (3.06, 2.55)	
	pressure cap opening pressure	88.3—123 kpa (0.9—1.25 kg/cm ² , 12.8—17.8 psi)	
Cooling fan	"ON" temperature "OFF" temperature "ON" temperature (Fan timer) "OF" temperature (Fan timer)	87°—93°C (189°—199°F) 80°—91°C (176°—196°F) 105°—111°C (221°—231°F) 98°—109°C (208°—228°F)	

1. F18A2: 1.8 ℓ CARB
2. F20A2: 2.0 ℓ CARB with CATA
3. F20A3: 2.0 ℓ CARB
4. F20A4: 2.0 ℓ PGM-FI with CATA
5. F20A5: 2.0 ℓ PGM-FI
6. F20A6: 2.0 ℓ CARB with CATA
7. F22A2: 2.2 ℓ PGM-FI
8. F22A3: 2.2 ℓ PGM-FI with CATA
9. F22A5: 2.2 ℓ PGM-FI with CATA

Standards and Service Limits

6. Fuel and Emissions

MEASUREMENT		STANDARD (NEW)
Fuel Pump (Carburated engine)	Delivery pressure Displacement (minimum in 10 seconds) Relief valve opening pressure	250 kPa (2.55 kg/cm ² , 36 psi) 230 cc (7.8 US oz., 8.1 Imp oz.) 441–588 kPa (4.5–6.0 kg/cm ² , 64–85 psi)
Fuel Pump (PGM-FI)	Delivery pressure Displacement (minimum in minute at 12V)	9–14 kPa (0.09–0.14 kg/cm ² , 1.3–2.0 psi) 760 cc (25.7 US oz., 26.8 Imp oz.)
Pressure Regulator (PGM-FI)	Pressure	240–279 kPa (2.45–2.85 kg/cm ² , 35–41 psi)
Fuel Tank	Capacity 2WS: 4WS:	65 ℓ (17.2 US gal., 14.3 Imp gal.) 60 ℓ (15.9 US gal., 13.2 Imp gal.)
Engine	Fast idle	1,400 min ⁻¹ (rpm)
	Idle speed (with headlights and cooling fan OFF)	MT with carburated engine: 800±50 min ⁻¹ (rpm) MT with PGM-FI engine: 770±50 min ⁻¹ (rpm) AT with carburated engine: 750±50 min ⁻¹ (rpm) in <input type="checkbox"/> position AT with PGM-FI engine: 770±50 min ⁻¹ (rpm) in <input type="checkbox"/> or <input type="checkbox"/> positions
	Idle CO	With CATA: 0.1% maximum Without CATA: 1.0±1.0%

7. Clutch


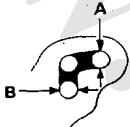
MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	210 (8.3) to floor	—
	Stroke	142.0 (5.6)	—
	Pedal play	9–15 (0.4–0.6)	—
	Disengagement height	90 (3.5) min. to floor 80 (3.1) min. to carpet	—
Flywheel	Clutch surface runout	0.05 (0.002) max.	0.15 (0.006)
Clutch disc	Rivet head depth	1.3 (0.05) min.	0.2 (0.008)
	Surface runout	0.8 (0.03) max.	1.0 (0.04)
	Thickness	8.5–9.2 (0.33–0.36)	6.1 (0.24)
Clutch cover	Unevenness of diaphragm spring	0.6 (0.02) max.	0.8 (0.03)

8. Manual Transmission

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	1.9 (2.0, 1.7) at assembly 2.0 (2.1, 1.8) at oil change	
Mainshaft	End play	0.10–0.16 (0.0039–0.0063)	Adjust with a shim.
	Diameter of ball bearing contact area	27.977–27.990 (1.1015–1.1020)	29.93 (1.1783)
	Diameter of third gear contact area	37.984–38.000 (1.4954–1.4961)	37.930 (1.4933)
	Diameter of ball bearing contact area Runout	27.987–28.000 (1.1018–1.1024) 0.02 (0.008) max.	27.940 (1.1000) 0.05 (0.002)
Mainshaft third and fourth gears	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness 3rd gear 4th gear	32.42–32.47 (1.276–1.278) 30.92–30.97 (1.217–1.219)	32.3 (1.27) 30.8 (1.21)
Mainshaft fifth gear	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness	30.42–30.47 (1.198–1.200)	30.3 (1.193)
Countershaft	End play	0.05–0.21 (0.0019–0.0083)	0.50 (0.02)
	Diameter of needle bearing contact area	33.000–33.015 (1.2992–1.2998)	32.95 (1.297)
	Diameter of ball bearing needle bearing contact area	24.987–25.000 (0.9837–0.9845)	24.94 (0.982)
	Diameter of low gear contact area	39.984–40.000 (1.5742–1.5748)	39.93 (1.572)
	Runout	0.02 (0.0008) max.	0.05 (0002)

Unit of length: mm (in.)

8. Manual Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Countershaft low gear	I.D. End play	46.009–46.025 (1.8114–1.8120) 0.04–0.10 (0.002–0.004)	46.08 (1.814) Adjust with a washer.
Countershaft second gear	I.D. End play Thickness	50.009–50.025 (1.9689–1.9695) 0.04–0.10 (0.002–0.004) 33.92–33.97 (1.335–1.337)	50.08 (1.972) Adjust with a collar. 32.8 (1.2913)
Spacer collar (Countershaft second gear)	I.D. O.D. Length	36.48–36.49 (1.4362–1.4366) 43.989–44.000 (1.7318–1.7323) 29.03–29.05 (1.1429–1.1437) 28.98–29.00 (1.1409–1.1417)	36.50 (1.437) 43.94 (1.730) — —
Spacer collar (Mainshaft fourth and fifth gears)	I.D. O.D. Length	31.002–31.012 (1.2205–1.2209) 37.989–38.000 (1.4956–1.4961) 56.45–56.55 (2.222–2.226) 26.03–26.08 (1.0248–1.0268)	31.06 (1.223) 37.94 (1.494) — 26.01 (1.024)
			
Reverse idler gear	I.D. Gear-to-reverse gear shaft clearance	20.016–20.043 (0.7880–0.7891) 0.036–0.084 (0.0014–0.0033)	20.09 (0.7909) 0.160 (0.006)
Synchronizer ring	Ring-to-gear clearance (ring pushed against gear)	0.85–1.10 (0.0335–0.0433)	0.40 (0.016)
Shift fork	Synchronizer sleeve groove width Fork-to-synchronizer sleeve clearance	6.75–6.85 (0.266–0.270) 0.35–0.65 (0.014–0.026)	— 1.0 (0.039)
Reverse shift fork	Pawl groove width Fork-to-reverse idle gear clearance Groove width Fork-to fifth/reverse shift Shaft clearance	13.0–13.3 (0.51–0.52) 0.5–1.1 (0.02–0.43) 7.05–7.25 (0.278–0.2854) 7.4–7.7 (0.29–0.30) 0.05–0.35 (0.002–0.014) 0.4–0.8 (0.02–0.03)	1.8 (0.07) — — 0.5 (0.02) 1.0 (0.04)
			
Shift arm	I.D. Shift arm-to-shaft clearance Shift fork diameter at contact area Shift-arm-to-shift fork shaft clearance	15.973–16.000 (0.6289–0.6299) 0.005–0.059 (0.0002–0.0023) 12.9–13.0 (0.508–0.512) 0.2–0.5 (0.01–0.02)	— — — 0.6 (0.02)
Select lever	Pin size of contact area Shaft outer diameter Shift arm cover clearance	7.9–8.0 (0.311–0.315) 15.41–15.68 (0.607–0.617) 0.032–0.102 (0.0013–0.0040)	— — —
Shift arm lever	O.D. Transmission housing clearance	15.941–15.968 (0.6276–0.6287) 0.027–0.139 (0.0011–0.0055)	— —
Inter lock	Bore diameter Shift arm lever clearance	16.00–16.05 (0.630–0.632) 0.032–0.109 (0.0013–0.0043)	— —
Ring gear	Backlash	0.085–0.142 (0.0033–0.0056)	0.200 (0.0079)
Differential carrier	Pinion shaft bore diameter Carrier-to-pinion shaft clearance Driveshaft bore diameter Carrier-to-driveshaft clearance	18.000–18.018 (0.7087–0.7094) 0.017–0.047 (0.0007–0.0019) 28.005–28.025 (1.1026–1.1033) 0.020–0.062 (0.0008–0.0024) 0.055–0.091 (0.0022–0.0036)	— 0.100 (0.0039) — 0.120 0.150
Differential pinion gear	Backlash Pinion gear bore diameter Pinion gear-to-pinion shaft clearance	0.05–0.15 (0.002–0.006) 18.042–18.066 (0.7103–0.7113) 0.059–0.095 (0.0023–0.0037)	Selection with 7 types of washers. — 0.150 (0.0059)
Differential taper roller bearing	Preload	1.4–2.6 N·m (14–26 kg-cm, 1.0–1.9 lb-ft)	Selection with 20 types of shims.

Standards and Service Limits

9. Automatic Transmission

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ? (U.S. qt., Imp. qt.)		2.4 (2.5, 2.1) at oil change 6.0 (6.4, 5.2) at assembly	
Hydraulic pressure	Line pressure at 2,000 min ⁻¹ (rpm)	Carburetor	760 kPa (7.75 kg/cm ² , 110 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle valve more than 2/8 open	710 kPa (7.25kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI	784 kPa (8.0 kg/cm ² , 113 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120psi) Throttle valve more than 2/8 open	735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	4th clutch pressure at 2,000 min ⁻¹ (rpm)	Carburetor	411 kPa (4.2 kg/cm ² , 59 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle Valve more than 2/8 open	352 kPa (3.6 kg/cm ² , 51 spi) Throttle valve full-closed 710 kPa (7.25 kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI	509 kPa (5.2 kg/cm ² , 74 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	460 kPa (4.7 kg/cm ² , 66 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	3rd clutch pressure at 2,000 min ⁻¹ (rpm)	Carburetor	392 kPa (4.0 kg/cm ² , 57 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle valve more than 2/8 open	352 kPa (3.6 kg/cm ² , 51 psi) Throttle valve full-closed 710 kPa (7.25 kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI	490 kPa (5.10 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	2nd clutch pressure at 2,000 min ⁻¹ (rpm)	Carburetor	392 kPa (4.0 kg/cm ² , 57 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle valve more than 2/8 open	352 kPa (3.6 kg/cm ² , 51 psi) Throttle valve full-closed 710 kPa (7.25 kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
	1st clutch pressure at 2,000 min ⁻¹ (rpm)	Carburetor	750-808 kPa (7.75-8.25 kg/cm ² , 110-117 psi)	710 kPa (7.25 kg/cm ² , 103 psi)
		PGM-FI	784-833 kPa (8.0-8.5 kg/cm ² , 113-120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)

Unit of length: mm (in.)

9. Automatic Transmission

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Hydraulic pressure	Governor pressure at (37.5 mph) 60 km/h	Carburetor with CATA	225–235 kPa (2.30–2.40 kg/cm ² , 32–34 psi)	220 kPa (2.25 kg/cm ² , 32 psi)
		Carburetor without CATA	166–176 kPa (1.70–1.80 kg/cm ² , 24–25 psi)	162 kPa (1.65 kg/cm ² , 23 psi)
	Throttle pressure A	Carburetor with CATA	closed 0 open 514–530 kPa (5.25–5.4 kg/cm ² , 74–76 psi)	509 kPa (5.2 kg/cm ² , 73 psi)
		Carburetor without CATA	closed 0 open 485–500 kPa (4.95–5.10 kg/cm ² , 70–72 psi)	480 kPa (4.9 kg/cm ² , 69 psi)
	Throttle pressure B	Carburetor	closed 0 open 760–808 kPa (7.75–8.25 kg/cm ² , 110–117 psi)	710 kPa (7.25 kg/cm ² , 103 psi)
		PGM-FI	closed 0 open 784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)
Stall speed	Check with car on level ground	Carburetor (1.8 l)	2.450–2.750 min ⁻¹ (rpm)	
		Others	2.350–2.650 min ⁻¹ (rpm)	
Clutch	Clutch initial clearance	1st hold	0.8–1.0 (0.031–0.039)	---
		1st, 2nd 3rd, 4th	0.65–0.85 (0.026–0.033) 0.4–0.6 (0.016–0.024)	---
	Clutch return spring free length	Carburetor	1st, 33.9 (1.334) 2nd, 30.3 (1.192) 3rd, 32.1 (1.263) 4th, 32.1 (1.263)	31.9 (1.255) 28.3 (1.114) 30.1 (1.185) 30.1 (1.185)
		PGM-FI	1st, 2nd, 3rd, 4th, 33.5 (1.318)	31.5 (1.240)
	Clutch disc thickness		1.88–2.0 (0.074–0.079)	Until grooves worn out
	Clutch plate thickness	Carburetor	1st, 3rd, 4th, 1.95–2.05 (0.0767–0.0807)	Discoloration
			2nd, 2.55–2.65 (0.1003–0.1043)	
		PGM-FI	1st, 1.95–2.05 (0.0767–0.0807)	
			2nd, 2.55–2.65 (0.1003–0.1043) 3rd, 4th, 2.25–2.35 (0.0885–0.0925)	
	Clutch end plate thickness	Mark 1	2.05–2.10 (0.081–0.83)	Discoloration
Mark 2		2.15–2.20 (0.085–0.087)		
Mark 3		2.25–2.30 (0.089–0.091)		
Mark 4		2.35–2.40 (0.093–0.094)		
Mark 5		2.45–2.50 (0.096–0.098)		
Mark 6		2.55–2.60 (0.100–0.102)		
Mark 7		2.65–2.70 (0.104–0.106)		
Mark 8		2.75–2.80 (0.108–0.110)		
Mark 9		2.85–2.90 (0.112–0.114)		
* Mark 10		2.95–3.00 (0.116–0.118)		

* Carbureted engine only.

Standards and Service Limits

9. Automatic Transmission (cont'd)

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Valve body	Stator camshaft needle bearing contact area I.D. (torque converter side)	27.000—27.021 (1.0630—1.0638)	Wear or damage
	Stator camshaft needle bearing contact area I.D. (oil pump side)	29.000—29.013 (1.417—1.1422)	—
	Oil pump driven gear I.D.	14.016—14.034 (0.5518—0.5525)	Wear or damage
	Oil pump shaft O.D.	13.980—13.990 (0.5504—0.5508)	Wear or damage
	Oil pump gear side clearance	0.03—0.05 (0.0012—0.0020)	0.07 (0.0028)
	Oil pump gear-to-body clearance	—	—
	Drive Driven	0.21—0.265 (0.0083—0.0104) 0.07—0.125 (0.0027—0.0049)	—
Regulator valve body	Sealing ring contact area diameter	35.000—35.025 (1.3780—1.3789)	35.050 (1.3799)
Accumulator body	Sealing ring contact area diameter	32.000—32.025 (1.2598—1.2608)	32.05 (1.2618)
Stator camshaft	Sealing ring contact area diameter	29.000—29.013 (1.1417—1.1422)	29.05 (1.1436)
Shifting device and parking brake control	Reverse shift fork thickness	5.90—6.00 (0.232—0.236)	5.40 (0.213)
	Parking brake ratchet pawl	—	Wear or other defect
	Parking gear	—	Wear or other defect
	Throttle cam stopper	—	—
	Carburetor PGM-FI	18.5—18.6 (0.7283—0.7322) 17.0—17.1 (0.6692—0.6732)	—
Servo body	Shift fork Shaft I.D.	A 14.000—14.005 (0.5512—0.5514)	—
		B 14.006—14.010 (0.5514—0.5516)	—
		C 14.011—14.015 (0.5516—0.5518)	—
	Shift fork shaft valve bore I.D.	37.000—37.039 (1.4567—1.4582)	37.045 (1.4585)
Transmission	Diameter of needle bearing contact area	22.980—23.000 (0.9047—0.9055)	Wear or damage
	On mainshaft and stator shaft	31.984—32.000 (1.2592—1.2598)	
	On mainshaft 4th gear collar	—	
	On mainshaft 3rd gear collar	—	
	Carburetor PGM-FI	41.984—42.000 (1.6529—1.6535)	
	On counter shaft 1st gear collar	45.984—46.000 (1.8103—1.8110)	
	On counter shaft 4th gear collar	40.984—42.000 (1.6135—1.6535)	
	On counter shaft reverse gear collar	35.980—35.996 (1.4165—1.4171)	
	On counter shaft parking gear	35.984—36.000 (1.4166—1.4173)	
	On counter shaft parking gear	39.984—40.000 (1.5741—1.5748)	
	On secondary shaft 1st gear	31.975—31.991 (1.2588—1.2594)	
	On secondary shaft 2nd gear	35.984—36.000 (1.4166—1.4173)	
	Reverse idle shaft holder I.D.	14.416—14.434 (0.5675—0.5682)	
	Mainshaft 3rd gear I.D.	52.000—52.019 (2.0472—2.0479)	
	4th gear I.D.	38.000—38.016 (1.4960—1.4966)	
	—	Wear or damage	

Unit of length: mm (in.)

9. Automatic Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission	Couter shaft 1st gear I.D.	47.000—47.016 (1.8504—1.8510)	Wear or damage
	4th gear I.D.	42.000—42.016 (1.6535—1.6541)	
	reverse gear I.D.	42.000—42.016 (1.6535—1.6541)	
	idle gear I.D.	48.000—48.016 (1.8897—1.8903)	
	Secondary shaft 1st gear I.D.	37.000—37.016 (1.4566—1.4573)	
	2nd gear I.D.	42.010—42.025 (1.6539—1.6545)	
	Mainshaft 3rd gear collar length	20.000—20.050 (0.7874—0.7893)	
	4th gear collar length	47.500—47.550 (1.8700—1.8720)	
	Counter shaft 1st gear collar length	27.500—27.550 (1.0826—1.0846)	
	4th gear collar length	20.04—20.08 (0.7889—0.7905)	
	reverse gear collar length	15.00—15.05 (0.5905—0.5925)	
	Secondary shaft distance collar length	4.95—5.00 (0.1948—0.1968)	
	Counter shaft 1st gear thickness	1.45—1.50 (0.0570—0.0590)	
	Counter shaft parking gear length	25.030—25.048 (0.9854—0.9861)	Wear or damage

www.cargeek.ir

Standards and Service Limits

Unit of length: mm (in.)

9. Automatic Transmission (cont'd)

	MEASUREMENT	STANDARD (NEW)				
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS	
Spring (Carburetor)	1st One way ball spring	0.29 (0.0114)	4.0 (0.01574)	14.0 (0.5511)	13.0	
	Regulator valve spring A	1.80 (0.0708)	14.7 (0.5787)	85.1 (3.3503)	16.5	
	Regulator valve spring B	1.80 (0.0708)	9.6 (0.3779)	44.0 (1.7328)	7.5	
	Stator reaction spring	5.50 (0.2165)	37.4 (1.4724)	30.3 (1.1929)	2.1	
	Throttle modulator spring	1.20 (0.0472)	9.4 (0.3700)	27.2 (1.0708)	8.0	
		with CATA	1.20 (0.0472)	9.4 (0.3700)	26.3 (1.0354)	8.0
		without CATA	1.10 (0.0433)	8.4 (0.3307)	36.8 (1.4488)	12.0
	Torque convertor check valve spring	1.00 (0.0393)	8.4 (0.3307)	39.1 (1.5393)	15.1	
	Relife valve spring	1.10 (0.0433)	8.4 (0.3307)	46.8 (1.8425)	17.0	
	Cooler check valve spring	1.0 (0.0393)	18.8 (0.7401)	44.3 (1.7440)	4.0	
	Governor spring A	1.0 (0.0393)	18.8 (0.7401)	25.8 (1.0157)	4.0	
		with CATA	0.9 (0.0354)	11.8 (0.4645)	18.4 (0.7244)	6.2
		without CATA	0.9 (0.0354)	11.8 (0.4645)	21.4 (0.8425)	6.2
	Governor spring B	0.7 (0.0275)	6.6 (0.2598)	53.3 (2.0984)	20.5	
	Second oilfice control spring	0.9 (0.0354)	7.1 (0.2795)	61.2 (2.4094)	28.2	
	Servo oilfice spring	1.0 (0.0393)	8.5 (0.3346)	21.0 (0.8267)	5.8	
	Throttle spring A	0.8 (0.0314)	6.2 (0.2440)	30.0 (1.1811)	8.0	
	Throttle adjust spring A	1.6 (0.0629)	8.5 (0.3346)	41.4 (1.6299)	11.7	
	Throttle spring B	0.5 (0.0196)	4.6 (0.1811)	42.3 (1.6653)	25.0	
	1-2 shift spring	0.6 (0.0236)	6.1 (0.2401)	42.3 (1.6653)	21.1	
		with CATA	0.4 (0.0157)	4.5 (0.1771)	13.0 (0.5118)	8.7
		without CATA	0.4 (0.0157)	4.5 (0.1771)	12.6 (0.4960)	8.7
	1-2 shiftball spring c	0.9 (0.0354)	7.6 (0.2992)	70.0 (2.7559)	28.2	
		with CATA	0.8 (0.0314)	7.6 (0.2992)	58.9 (2.3188)	16.8
		without CATA	0.5 (0.0196)	4.5 (0.1771)	11.7 (0.4606)	10.5
	2-3 shift spring	0.5 (0.0196)	4.5 (0.1771)	14.1 (0.5551)	10.5	
		with CATA	0.9 (0.0354)	9.6 (0.3779)	35.8 (1.4094)	10.3
		without CATA	0.9 (0.0354)	9.6 (0.3779)	27.7 (1.0905)	10.3
	2-3 shift ball spring	0.5 (0.0196)	4.5 (0.1771)	11.5 (0.4527)	7.4	
		with CATA	0.5 (0.0196)	4.5 (0.1771)	11.3 (0.4448)	7.4
		without CATA	4.0 (0.1574)	21.5 (0.8464)	71.7 (2.8228)	8.3
	3-4 shift spring	2.1 (0.0826)	16.3 (0.6417)	96.0 (3.7795)	17.1	
	3-4 shift ball spring	2.6 (0.1023)	16.0 (0.6292)	84.6 (3.3307)	14.3	
	1st hold accumulator spring	3.2 (0.1259)	20.7 (0.8149)	80.7 (3.1771)	10.8	
	1st accumulator spring	2.6 (0.1023)	17.5 (0.6889)	78.6 (3.0944)	11.0	
	4th accumulator spring	0.9 (0.0354)	7.6 (0.2992)	73.7 (2.9015)	32.0	
	2nd accumulator spring	1.0 (0.0393)	6.6 (0.2598)	84.0 (3.3070)	42.4	
	3rd accumulator spring	1.0 (0.0393)	6.6 (0.2598)	79.1 (3.1141)	42.4	
	L/C shift spring	0.9 (0.0354)	6.6 (0.2598)	56.9 (2.2007)	27.3	
	L/C timing spring B	0.9 (0.0354)	6.6 (0.2598)	50.0 (1.9685)	27.3	
	L/C timing spring A	0.8 (0.0314)	7.6 (0.2992)	44.5 (1.7519)	17.0	
	Governor cut spring	0.7 (0.0275)	6.6 (0.2598)	42.9 (1.6889)	14.1	
	L/C control spring	1.4 (0.0551)	9.4 (0.3700)	31.2 (1.2283)	10.9	
	CPC valve spring	0.9 (0.0354)	7.6 (0.2992)	62.7 (2.4684)	27.5	
	3rd kick dawn spring	0.7 (0.0275)	7.1 (0.2795)	40.0 (1.5748)	20.8	
	Reverse control spring	0.7 (0.0275)	7.6 (0.2992)	31.0 (1.2204)	12.7	
	L/C cut spring	1.2 (0.0472)	7.7 (0.3031)	45.6 (1.7952)	21.8	
	Accumulator control spring	1.2 (0.0472)	7.1 (0.2795)	46.9 (1.8464)	20.6	
	2nd kick down spring	0.9 (0.0354)	6.4 (0.2519)	32.5 (1.2795)	17.5	
	Servo control spring	0.7 (0.0275)	5.6 (0.2204)	33.0 (1.2992)	21.7	
2-1 timing spring	0.8 (0.0314)	6.1 (0.2401)	51.1 (2.0118)	26.6		
4th exhaust spring						

Unit of length: mm (in.)

9. Automatic Transmission

	MEASUREMENT	STANDARD (NEW)			
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS
Spring (PGM-FI)	Regulator valve Spring A	1.8 (0.0709)	14.7 (0.5887)	86.5 (3.4055)	16.5
	Regulator valve Spring B	1.8 (0.0709)	6.0 (0.2336)	44.0 (1.7323)	12.7
	Stator reaction spring	5.5 (0.2165)	37.4 (1.4724)	30.3 (1.1929)	2.1
	Torque converter check valve spring	1.1 (0.0433)	8.4 (0.3307)	33.8 (1.3307)	12.5
	Relief valve spring	1.0 (0.0394)	8.4 (0.3307)	39.1 (1.5393)	15.1
	Cooler check valve spring	1.1 (0.0433)	8.4 (0.3307)	46.8 (1.8425)	17.0
	2nd orifice spring	0.6 (0.0236)	6.6 (0.2598)	52.2 (2.0551)	21.0
	Servo orifice spring	0.8 (0.0315)	6.6 (0.2598)	52.2 (2.0551)	33.0
	4th exhaust spring	0.9 (0.0354)	7.1 (0.2795)	60.8 (2.3936)	28.9
	1-2 shift spring	1.0 (0.0393)	8.6 (0.3386)	41.3 (1.6259)	16.9
	2-3 shift spring	0.9 (0.0354)	7.6 (0.2992)	57.0 (2.2440)	26.8
	1st accumulator spring	2.1 (0.0826)	16.3 (0.6417)	96.0 (3.7795)	17.1
	4th accumulator spring	2.9 (0.1142)	22.0 (0.8661)	84.5 (3.3267)	10.9
	2nd accumulator spring	3.2 (0.1260)	20.7 (0.8149)	80.7 (3.1771)	10.8
	3rd accumulator spring	2.8 (0.1102)	17.5 (0.6889)	94.2 (3.7086)	16.1
	L/C shift spring	0.9 (0.0354)	7.6 (0.2992)	73.7 (2.9016)	32.0
	L/C timing spring	0.8 (0.0314)	6.6 (0.2598)	64.0 (2.5196)	40.1
	D-inhibitor spring	1.0 (0.0394)	8.1 (0.3188)	52.6 (2.0708)	22.4
	3rd kick-down spring	1.1 (0.0433)	7.6 (0.2992)	48.3 (1.9015)	23.3
	2nd kick-down spring	1.2 (0.0472)	7.1 (0.2795)	46.9 (1.8464)	20.6
	Throttle adjust spring	0.8 (0.0314)	6.2 (0.2440)	30.0 (1.1811)	8.0
	Throttle B spring	1.5 (0.0591)	8.5 (0.3346)	41.5 (1.6334)	11.2
	1st hold spring	4.0 (0.1574)	25.0 (0.9842)	64.7 (2.5472)	7.3
	L/C modulator valve spring	1.4 (0.0551)	9.4 (0.3700)	33.0 (1.2992)	10.5
	L/C control spring	0.8 (0.0314)	6.6 (0.2598)	41.0 (1.6141)	25.0

Standards and Service Limits

9. Automatic Transmission (cont'd)

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Rign gear	Backlash	0.085–0.142 (0.003–0.006)	0.200 (0.008)
Differential carrier	Pinion shaft bore diameter	18.000–18.018 (0.7087–0.7094)	—
	Carrier-to-pinion shaft clearance	0.017–0.047 (0.001–0.002)	0.100 (0.004)
	Driveshaft bore diameter	28.005–28.025 (1.1026–1.1033)	—
	Carrier-to driveshaft clearance	0.025–0.066 (0.001–0.003)	0.120 (0.005)
Differential pinion gear	Backlash	0.08–0.15 (0.03–0.006)	Adjust with a washer
	Pinion gear bore diameter	18.042–18.066 (0.710–0.711)	—
	Pinion gear-to pinion shaft clearance	0.059–0.095 (0.002–0.004)	0.150 (0.006)
Differential taper roller bearing preload	For used bearing	2.5–3.7 N·m (25–37 kg-cm, 1.8–2.7 lb-ft)	Adjust with a washer
	After replacement of bearing	2.8–4.0 N·m (28–48 kg-cm, 2.0–2.9 lb-ft)	Adjust with a washer

11. Steering

MEASUREMENT		STANDARD (NEW)
Steering wheel	Play	10 (0.39) maximum
Gearbox	Pinion starting torque	Below 1.0N-m (10 kg-cm, 0.72 lb-ft)
	Angle of rack guide screw loosend from locked position	35° $\pm \frac{8}{0}$
Pump	Pump pressure with valve closed (oil temperature: 40°C/104°F minimum) Do not run for more than 5 seconds	7,845–8,826 kPa (80–90 kg/cm ² , 1,138–1,280 psi) at idle
Power steering fluid	Capacity	0.5 ℓ (0.53 US qt., 0.44 Imp qt.)
	Reservoir At change (approx.)	1.8 ℓ 1.90 US qt. 1.58 Imp qt.)
Power steering belt	Deflection between pulleys with 98 N (10 kg, 22 lbs) force	For used belt: 12.5–16.0 (0.50–0.62) For new belt: 9.5–11.5 (0.37–0.45)
	Belt tension between pulleys (measured with tension gauge)	For used belt: 343–490 N (35–50 kg, 77–110 lb) For new belt: 686–882 N (70–90 kg, 154–198 lb)

12. Suspension

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Wheel alignment	Total toe	Front	0±2 (0±0.08)
		Rear	2WS: IN 2±2 (0.08±0.08) 4WS: IN 3±2 (0.12±0.08)
	Camber	Front	0° 00' ± 1'
		Rear	2WS: -0° 30' ± 1' 4WS: -0° 20' ± 1'
	Caster	Front	3° 00' ± 1'
		Front Wheel turning angle	Inward wheel
	Outward wheel (reference)		2.0/2.2 ℓ engine: 29° 30' 1.8 ℓ engine: 31° 10' 4WS: 29° 30'
	Rear Wheel turning angle (4WS only)	Inward wheel	5° 50' ± 1'
		Outward wheel (reference)	6° 10' ± 1'
	Wheel	Rim runout	Steel wheel
Aluminum wheel			Axial: Below 0.7 (0.03) Radial: Below 0.7 (0.03)
End play		Front	0–0.05 (0–0.002)
		Rear	0–0.05 (0–0.002)

Unit of length: mm (in.)

13. Brakes

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Parking brake lever	Play in stroke 200 N (20 kg, 44 lbs)	To be locked when pulled 4-8 notches		—
Foot brake pedal	Pedal height (from floor)	MT	190 (7.5)	—
		AT	195 (7.7)	—
Master cylinder	Piston-to-push rod clearance	0-0.4 (0-0.016)		—
Brake drum	I.D.	220 (8.66)		221 (8.70)
Lining	Thickness	4.5 (0.18)		2.0 (0.08)
Disc brake	Disc thickness	Front	23.0 (0.91)	21.0 (0.83)
		Rear	10.0 (0.39)	8.0 (0.32)
	Disc runout	Front	—	0.10 (0.004)
		Rear	—	0.15 (0.006)
	Disc parallelism	Front and rear	—	0.015 (0.0006)
Pad thickness		Front	12.5 (0.49)	1.6 (0.06)
Brake booster	Characteristics at 20 kg (44 lbs) pedal pressure	Line pressure Unit: kPa (kg/cm ² /psi)		
		Vacuum	Brakes	Conventional type with ALB system
	0 mm (0 in) Hg		922 (9.4/134) minimum	813 (8.3/118) minimum
	300 mm (11.8 in) Hg		5,494 (56/796) minimum	6,076 (62/882) minimum
	500 mm (19.7 in) Hg		8,535 (87/1,237) minimum	8,134 (83/1,180) minimum

15. Air Conditioner

MEASUREMENT		STANDARD (NEW)	
Air conditioner system	Lubricant capacity	Condenser	10 cc (0.3 US oz., 0.4 Imp oz.)
		Evaporator	25 cc (0.8 US oz., 0.9 Imp oz.)
		Line or hose	10 cc (0.3 US oz., 0.4 Imp oz.)
		Reservoir	10 cc (0.3 US oz., 0.4 Imp oz.)
Compressor	Lubricant capacity	900-950 g (31.7-33.5 oz)	
	Stator coil resistance at 20°C (68°F)	3.4-3.8 Ω	
Compressor belt	Deflection between pulleys with 98N (10 kg, 22 lbs) force	For used belt	10-12 (0.4-0.5)
		For new belt	8.5-11 (0.3-0.4)
Compressor belt	Belt tension between pulleys (measured with tension gauge)	For used belt	441-588 N (45-60 kg, 99-132 lbs)
		For new belt	931-1,127 N (95-115 kg, 209-254 lbs)

Standards and Service Limits

Unit of length: mm (in.)

16. Electrical

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Ignition coil	Rated voltage		12 Volts	
	Winding resistance	Primary	0.6—0.8 Ω <0.5—0.7 Ω>	
Secondary		< >: Carbureted engine	12.9—19.3 kΩ <14.4—21.6 kΩ>	
Ignition wire	Resistance		25 kΩ maximum	
Spark plug	Type (): Manufacturer	standard	ZFR6F-11 (NGK) or KJ20CR-L11 (ND) KP, KT: ZFR5F-11 (NGK) or KJ16CR-L11 (ND)	
		Option *: Except 2.2 ℓ engines other than KQ, KY types	*: ZFR5F-11 (NGK) or KJ16CR-L11 (ND) KP, KT only: UFR6F-11 (NGK) or KJ20CR-L11 (ND) Except KP, KT: ZFR7F-11 (NGK) or KJ22CR-L11 (ND)	
	Gap		1.0—1.1 (0.039—0.043)	
Ignition timing	At idling		15° ± 2° BTDC	
	KF, KB, KE, KW, KU, KT, KP (AT) KY (AT/MT)		10° ± 2° BTDC 10° ± 2° BTDC	
Battery	Lighting capacity (20-hours ratio) < >: KY, KQ, KP, KT		65Ah <47Ah>	
	Starting capacity (voltage after 5 sec.)		8.4 V minimum/300 ampere draw at -15°C (59°F)	
Alternator	Output < >: Carbureted engine (except KS, KW, KY)		80A <70A>	
	Rotor coil resistance		2.8—3.0 Ω	
	Slip ring O.D.		14.4 (0.57)	14.0 (0.55)
	Brush length		10.5 (0.41)	5.5 (0.22)
		Brush spring tension		300—360 g (10.6—12.7 oz)
Alternator belt	Deflection at midway between pulleys with 98 N (10 kg, 22 lbs) force		10—12 (0.39—0.47) for used belt 8.5—11.0 (0.33—0.43) after replacement of belt	
Starting motor	Output		MT: 1.4 kw (2.2 ℓ : 1.6 kw) MT: 1.4 kw	AT: 1.6 kw AT: 1.4 kw
	Manufacturer: Mitsuba	Mica depth	0.4—0.5 (0.016—0.02)	0.15 (0.006)
		Commutator runout	0—0.02 (0—0.001)	0.05 (0.002)
		Commutator O.D.	28.0—28.1 (1.10—1.11)	27.5 (1.08)
		Brush length	15.8—16.2 (0.62—0.64)	10.0 (0.39)
	Brush spring tension		16—18N (1.6—1.8 kg, 3.5—4.0 lbs)	
Manufacturer: ND	Mica depth	0.5—0.8 (0.02—0.03)	0.2 (0.01)	
	Commutator runout	0—0.02 (0—0.001)	0.05 (0.002)	
	Commutator O.D.	29.9—30.0 (1.18—1.18)	29.0 (1.14)	
	Brush length	15.0—15.5 (0.59—0.61)	10.0 (0.39)	
Brush spring tension		19—24N (1.9—2.4 kg, 4.2—5.31 lbs)		

	ITEMS		METRIC		ENGLISH		NOTES			
DIMENSIONS	Overall length		4,685 mm		184.4 in					
			4,680 mm		184.3 in		KY			
			4,695 mm		184.8 in		KW			
			4,700 mm		185.0 in		KQ			
	Overall width		1,695 mm		66.7 in					
			1,720 mm		67.7 in		KY			
			1,725 mm		67.9 in		KQ			
	Overall height		1,390 mm		54.7 in					
			1,400 mm		55.1 in		KY			
	Wheelbase		2,720 mm		107.1 in					
Track		1,475 mm		58.1 in						
		Front	1,480 mm		58.3 in					
		Rear	160 mm		6.3 in					
Ground clearance		170 mm		6.7 in		KY				
Seating capacity				Five						
Turning circle diameter (at tire center)		4.9 m		16.1 ft		4WS				
		5.4 m		17.7 ft		2WS				
WEIGHT	Curb weight		See page 3-19							
	Max permissible weight (for European)									
	1.8/2.0 ℓ without ALB		1,740 kg		3,836 lb					
	1.8/2.0 ℓ with ALB		1,760 kg		3,880 lb					
2.2 ℓ		1,840 kg		4,056 lb						
ENGINE	Type		Water-cooled, 4-stroke OHC							
	Cylinder arrangement		In-line, 4-cylinders							
	Bore and stroke		85×81.5 mm		3.35×3.21 in		1.8 ℓ			
			85×88 mm		3.35×3.46 in		2.0 ℓ			
			85×95 mm		3.35×3.74 in		2.2 ℓ			
	Displacement		1,849 cm ³		112.8 cu. in		1.8 ℓ			
			1,997 cm ³		121.8 cu. in		2.0 ℓ			
			2,156 cm ³		131.5 cu. in		2.2 ℓ			
	Compression ratio		Carbureted	9.0 : 1 < 8.9 : 1 >			< > : With catalytic converter			
			2.0 ℓ fuel-injected	9.6 : 1 < 9.5 : 1 >						
		2.2 ℓ European	9.8 : 1							
		2.2 ℓ KY	8.9 : 1							
		2.2 ℓ KQ	8.8 : 1							
Valve train		Belt driven, Single Overhead Camshaft								
Lubrication system		Forced and wet sump								
STARTER	Type		Gear reduction							
	Normal output		European	MT: 1.4 kw (2.2 ℓ : 1.6 kw)		AT: 1.6 kw				
			Except European	MT: 1.4 kw		AT: 1.4 kw				
	Nominal voltage		12 V							
	Hour rating		30 seconds							
	Direction of rotation		Clockwise as viewed from gear end							
	Weight		ND	4.75 kg		10.5 lb				
		Mitsuba 1.6 kw	3.7 kg		8.2 lb					
		Mitsuba 1.4 kw	3.5 kg		7.7 lb					
TRANSMISSION	Clutch		MT	Single plate dry, diaphragm spring						
			AT	Torque converter with lock-up clutch						
	Clutch lining area				217 cm ²		33.6 sq. in			
	Transmission		MT	Synchronized 5-speed forward, 1 reverse						
			AT	4-speed forward automatic, 1 reverse						
			or Electronically controlled dual range							
			4-speed forward automatic, 1 reverse							
	Primary reduction ratio		1 : 1 (Direct)							
	Gear ratio									
	①: Carbureted									
②: 2.0 ℓ PGM-FI										
③: 2.2 ℓ (except KQ)										
④: 2.2 ℓ KQ										
⑤: Carbureted										
2.0 ℓ PGM-FI (KT)										
2.2 ℓ KY										
⑥: 2.0 ℓ PGM-FI/2.2 ℓ (except KT, KQ, KY)										
⑦: 2.2 ℓ KQ										
			MT				AT			
		Gear	①	②	③	④	⑤	⑥	⑦	
		1st	3.307	3.307	3.307	3.307	2.705	2.705	2.705	
		2nd	1.857	1.809	1.809	1.809	1.464	1.366	1.464	
		3rd	1.269	1.230	1.230	1.230	1.028	1.028	1.028	
		4th	0.966	0.933	0.933	0.903	0.731	0.731	0.674	
		5th	0.787	0.757	0.757	0.705	---	---	---	
		Reverse	3.000	3.000	3.000	3.000	2.047	2.047	2.047	
		Final	4.266	4.266	4.266	4.062	4.285	4.285	4.285	

Design Specifications

	ITEMS		METRIC	ENGLISH	NOTES
AIR CONDITIONER	Cooling capacity		4,350 kcal/h	17,259 BTU/h	
	-Condition: Compressor speed		1,900 min ⁻¹ (rpm)		
	Outside air temperature		27°C	81°F	
	Outside air humidity		50 %		
	Condenser air temperature		35°C	95°F	
Condenser air velocity		4.5 m/sec.	14.8 ft/sec.		
Blower capacity		440 m ³	15,542 cu.ft/h		
Compressor Type		Swash-plate			
No. of cylinders		10			
Capacity		178 cc/rev.	10.9 cu.in/rev.		
Maximum speed		8,800 min ⁻¹ (rpm)			
Lubricant capacity		90-120 cc	3.0-4.0 US oz.	3.2-4.2 Imp oz.	
Condenser		Corrugated fin type			
Evaporator		Corrugated fin type			
Blower Type		Sirocco fan			
Motor input		210 W (12 V)			
Speed control		5-speed			
Maximum capacity		500 m ³ /h	17,662 cu.ft/h		
Temperature control		Air-mix type			
Clutch Type		Dry single-plate			
Power consumption		40W (12V) maximum			
Refrigerant Type		R-12			
Quantity		0.90-0.95 kg	2.0-2.1 lb		
STEERING SYSTEM	Type		Rack and pinion		
	Overall ratio		16.1 : 1 (13.0 : 1)		
	Turns, lock-to-lock		3.13 (2.5)		< >: 4WS
	Steering wheel diameter		375 mm	14.8 in	< >: 4WS
Power steering fluid capacity		1.8 ℓ	1.9 US qt.	1.6 Imp qt.	
Power steering fluid		Genuine Power Steering Fluid P/N: 08208-99961			
SUSPENSION	Type		Independent double wishbone, coil spring		
	Shock absorber		Independent double wishbone, coil spring Telescopic, hydraulic (nitrogen gas-filled)		() : except KP, KT
WHEEL ALIGNMENT	Total toe		0±3 mm	0±0.12 in	
	Front		IN 2±2 mm	0.08±0.08 in	
	Rear		IN 3±2 mm	0.12±0.08 in	
	Camber		0° 00' ± 1°		
Front		-0° 30' ± 1°			
Rear		-0° 20' ± 1°			
Caster		3° 00'			
BRAKE SYSTEM	Type		Front Rear		
	Pad and lining swept area (total)		2.2 ℓ (except KY) or ALB or 4WS: Solid disc		
	Front 15 in		415 cm ²	64 sq. in	
	14 in		311 cm ²	48 sq. in	
Rear Drum		242 cm ²	38 sq. in		
Disc		281 cm ²	44 sq. in		
TIRES	Size		185/70R14 88H 185/65R15 87H 195/60R15 87V 195/60R15 87H T105/70 D14 T135/90 D15		
	Spare tire				
ELECTRICAL	Fuses		In the ALB fuse box In the fuse box In the relay box		
	Headlights		High/Low		
	Turn signal lights		Front Rear		
	Position lights				
	License plate light				
	Buck-up lights				
	Stop lights				
	High mount brake light				
	Taillight				
	Rear fog light				
	Dome lights				
	Door courtesy lights				
	Vanity mirror light				
	Trunk light				
	Gauge lights				
	Indicator lights				
	Warning lights				
	Glove box light				
	Illumination and pilot lights				
	Heater illumination lights				


WEIGHT SPECIFICATIONS

ENGINE	TYPE	GRADE	Manual Transmission		Automatic Transmission	
			CARB WEIGHT	WEIGHT DISTRIBUTION (FR/RR)	CARB WEIGHT	WEIGHT DISTRIBUTION (FR/RR)
1.8 ℓ Carbureted	KB	LX	1,200 (2,646)	730/470 (1,609/1,036)	—	—
		EX	1,215 (2,679)	735/480 (1,620/1,058)	—	—
2.0 ℓ Carbureted	KG	DX, EX	1,220 (2,690)	740/480 (1,631/1,058)	1,245 (2,745)	765/480 (1,687/1,058)
		EX	1,220 (2,690)	740/480 (1,631/1,058)	1,245 (2,745)	765/480 (1,687/1,058)
	KS	DX	1,225 (2,701)	745/480 (1,642/1,058)	1,250 (2,756)	770/480 (1,698/1,058)
		EX	1,230 (2,712)	750/480 (1,653/1,058)	1,255 (2,767)	775/480 (1,709/1,058)
	KF	EX	1,220 (2,690)	740/480 (1,631/1,058)	1,245 (2,745)	765/480 (1,687/1,058)
		EX	1,215 (2,679)	740/475 (1,631/1,047)	1,240 (2,734)	765/475 (1,687/1,047)
	KB	EX	1,225 (2,701)	740/485 (1,631/1,069)	1,250 (2,756)	765/485 (1,687/1,069)
		EX	1,225 (2,701)	745/480 (1,642/1,058)	1,250 (2,756)	770/480 (1,698/1,058)
	KW	DX, EX	1,225 (2,701)	745/480 (1,642/1,058)	1,245 (2,745)	765/480 (1,687/1,058)
		LX	1,215 (2,679)	735/480 (1,620/1,058)	1,245 (2,745)	765/480 (1,687/1,058)
	KU, KP, KT	LX	1,220 (2,690)	735/485 (1,620/1,069)	1,250 (2,756)	765/485 (1,687/1,069)
		EX	1,220 (2,690)	735/485 (1,620/1,069)	1,250 (2,756)	765/485 (1,687/1,069)
	KQ	LX	1,210 (2,668)	730/480 (1,609/1,058)	1,240 (2,734)	760/480 (1,675/1,058)
		LX	1,245 (2,745)	760/485 (1,675/1,069)	1,275 (2,811)	790/485 (1,742/1,069)
KY	LX	1,250 (2,756)	765/485 (1,687/1,069)	1,280 (2,822)	795/485 (1,753/1,069)	
	EX	1,250 (2,756)	765/485 (1,687/1,069)	1,280 (2,822)	795/485 (1,753/1,069)	
2.0 ℓ PGM-FI	KG	2.0i	1,240 (2,734)	750/490 (1,653/1,080)	1,270 (2,800)	780/490 (1,720/1,080)
		2.0i	1,265 (2,789)	770/495 (1,698/1,091)	1,295 (2,855)	800/495 (1,764/1,091)
	KX	2.0i	1,250 (2,756)	760/490 (1,675/1,080)	1,280 (2,822)	790/490 (1,742/1,080)
		2.0i	1,245 (2,745)	755/490 (1,664/1,080)	1,275 (2,811)	785/490 (1,731/1,080)
	KF, KB, KW	2.0i	1,255 (2,767)	760/495 (1,675/1,091)	1,285 (2,833)	790/495 (1,742/1,091)
		EXi	1,240 (2,734)	750/490 (1,653/1,080)	1,275 (2,811)	785/490 (1,731/1,080)
2.2 ℓ PGM-FI	KG	2.2i-2WS	1,305 (2,877)	795/510 (1,753/1,124)	1,335 (2,943)	825/510 (1,819/1,124)
		2.2i-4WS	1,330 (2,932)	795/535 (1,753/1,179)	1,360 (2,998)	825/535 (1,819/1,179)
	KX, KS	2.2i-2WS	1,310 (2,888)	800/510 (1,764/1,124)	1,340 (2,954)	830/510 (1,830/1,124)
		2.2i-4WS	1,335 (2,943)	800/535 (1,764/1,179)	1,365 (3,009)	830/535 (1,830/1,179)
	KF	2.2i-2WS	1,290 (2,844)	785/505 (1,731/1,113)	1,320 (2,910)	815/505 (1,797/1,113)
		2.2i-4WS	1,315 (2,899)	785/530 (1,731/1,168)	1,345 (2,965)	815/530 (1,797/1,168)
	KE	2.2i-2WS	1,300 (2,866)	790/510 (1,742/1,124)	1,330 (2,932)	820/510 (1,808/1,124)
		2.2i-4WS	1,325 (2,921)	790/535 (1,742/1,179)	1,355 (2,987)	820/535 (1,808/1,179)
	KQ	EXi	1,240 (2,734)	745/495 (1,642/1,091)	1,270 (2,800)	775/495 (1,709/1,091)
		EXi	1,320 (2,910)	790/530 (1,742/1,168)	1,350 (2,976)	825/525 (1,819/1,157)

Body Specifications


2WS M/T Model

Unit: mm (in)

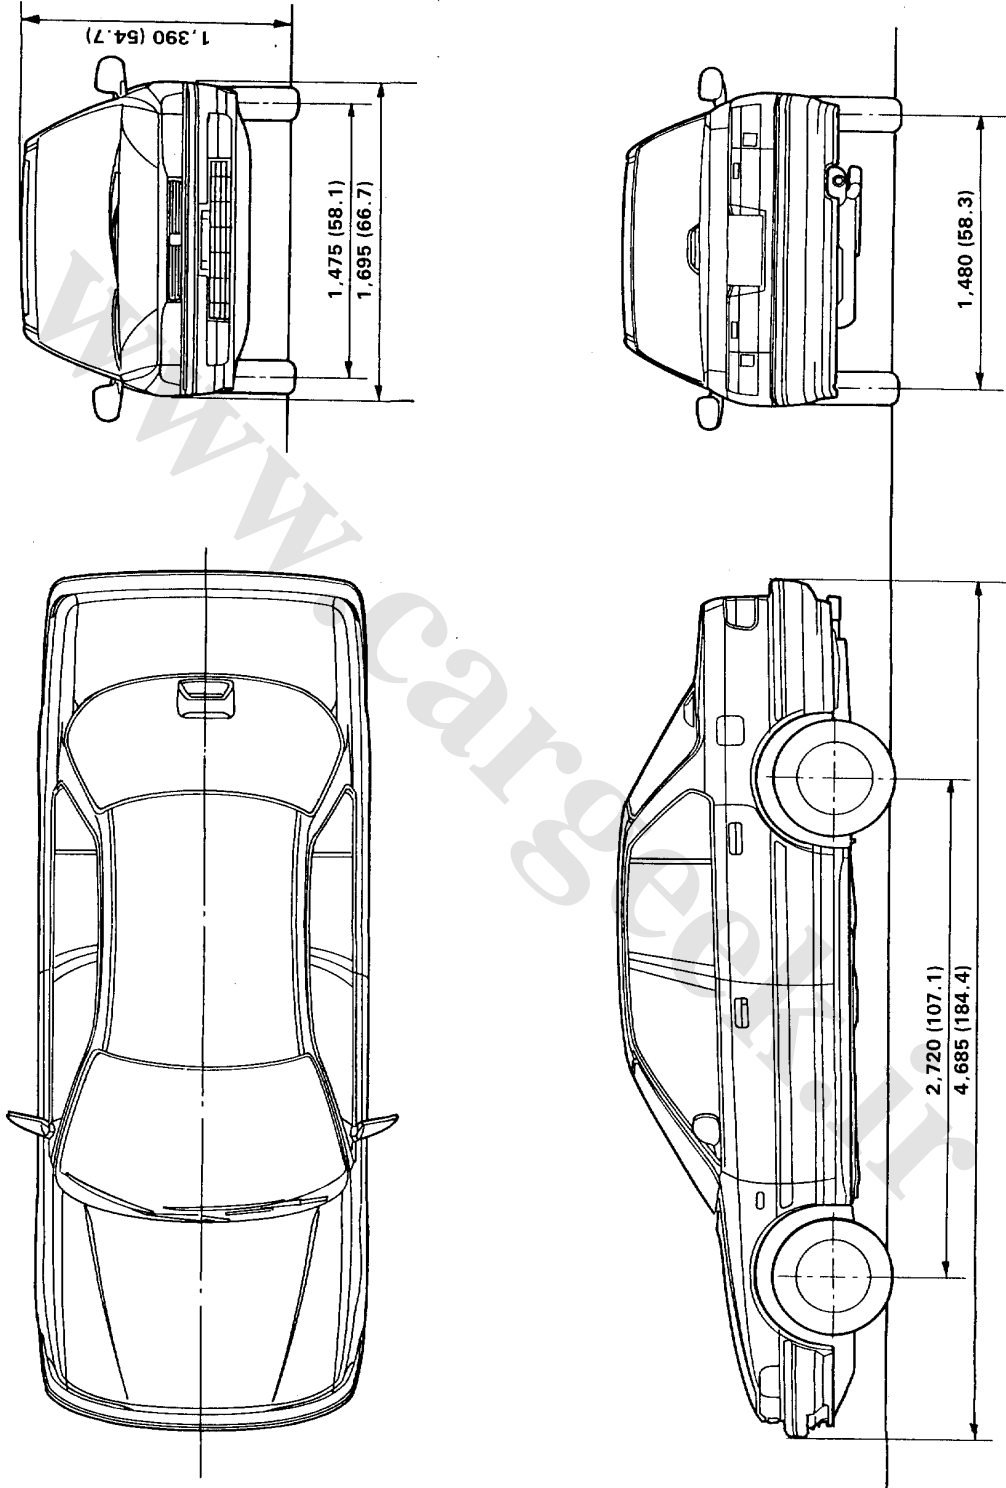


Frame Repair Chart

2WS M/T Model

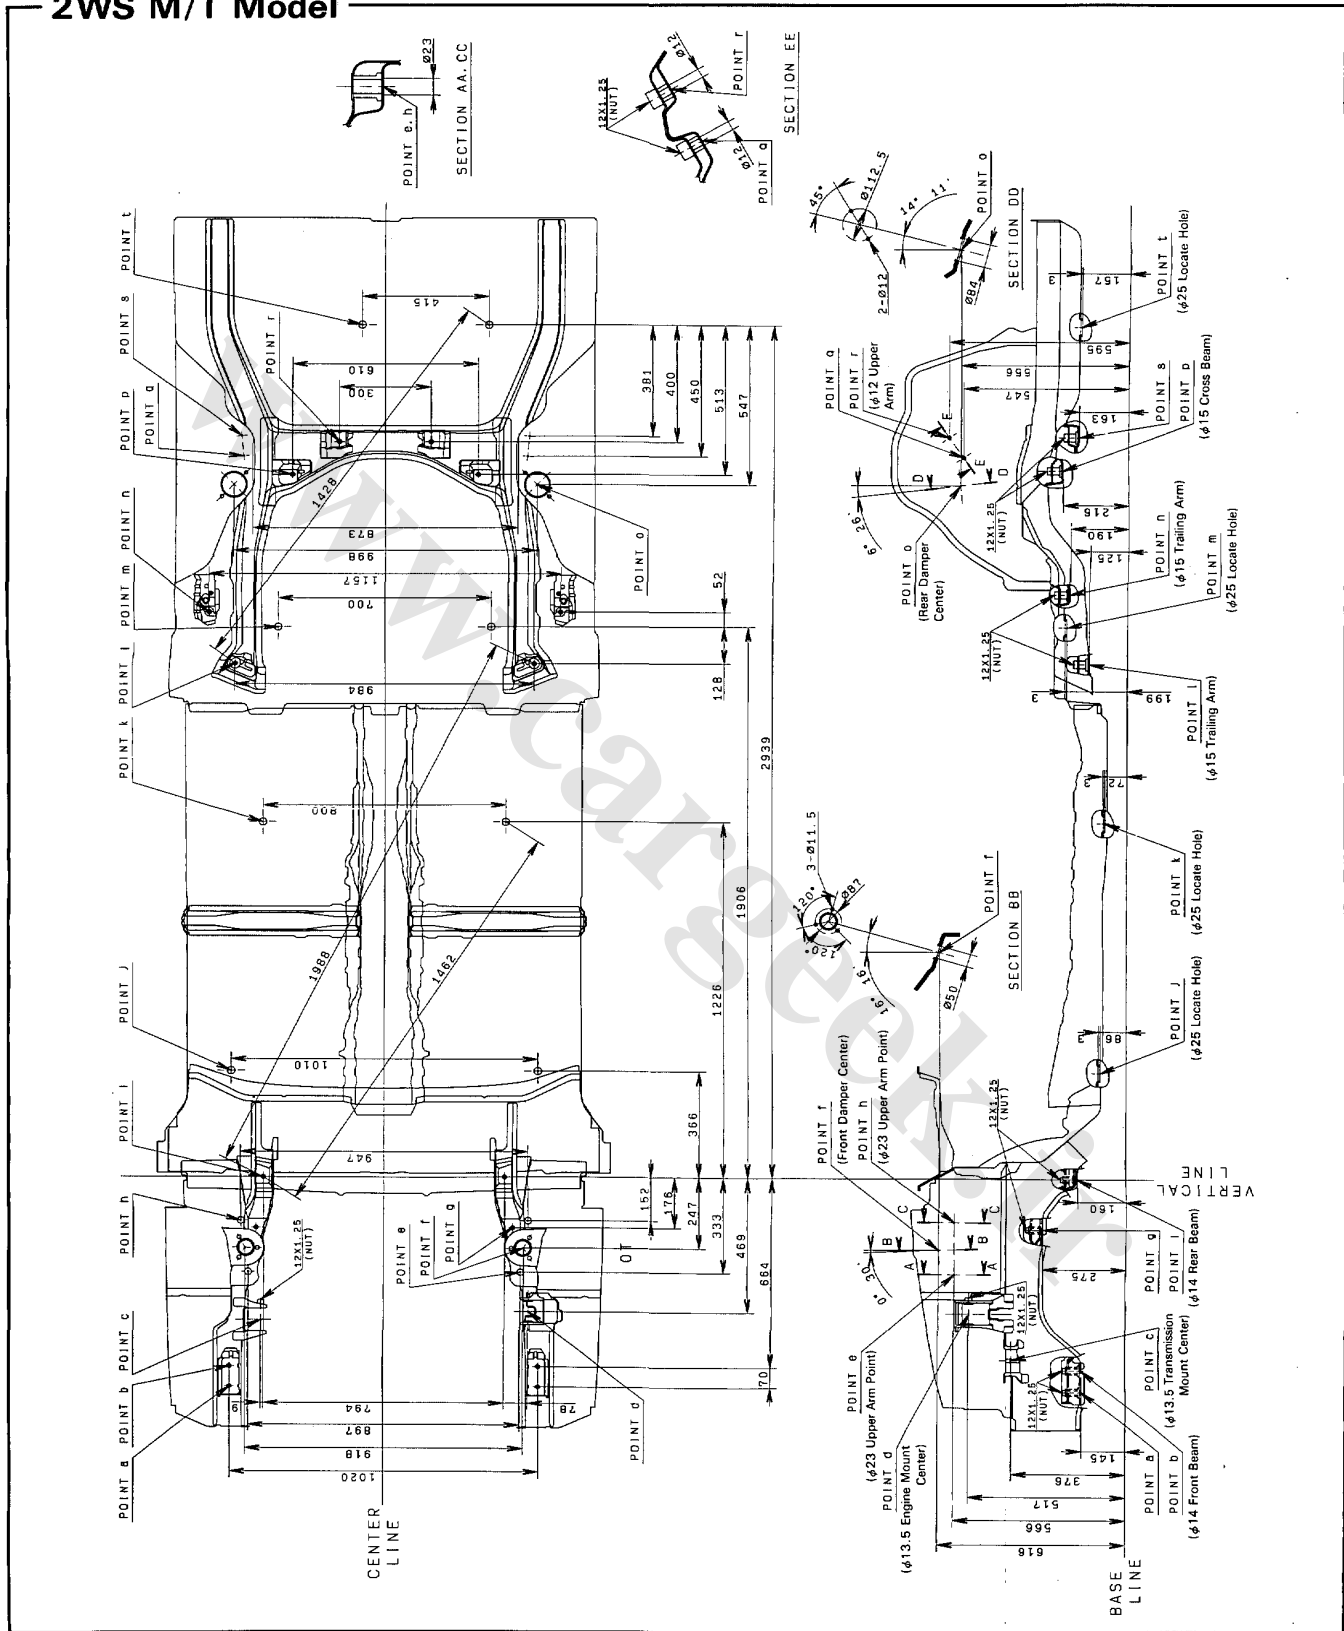


Frame Repair Chart

2WS A/T Model

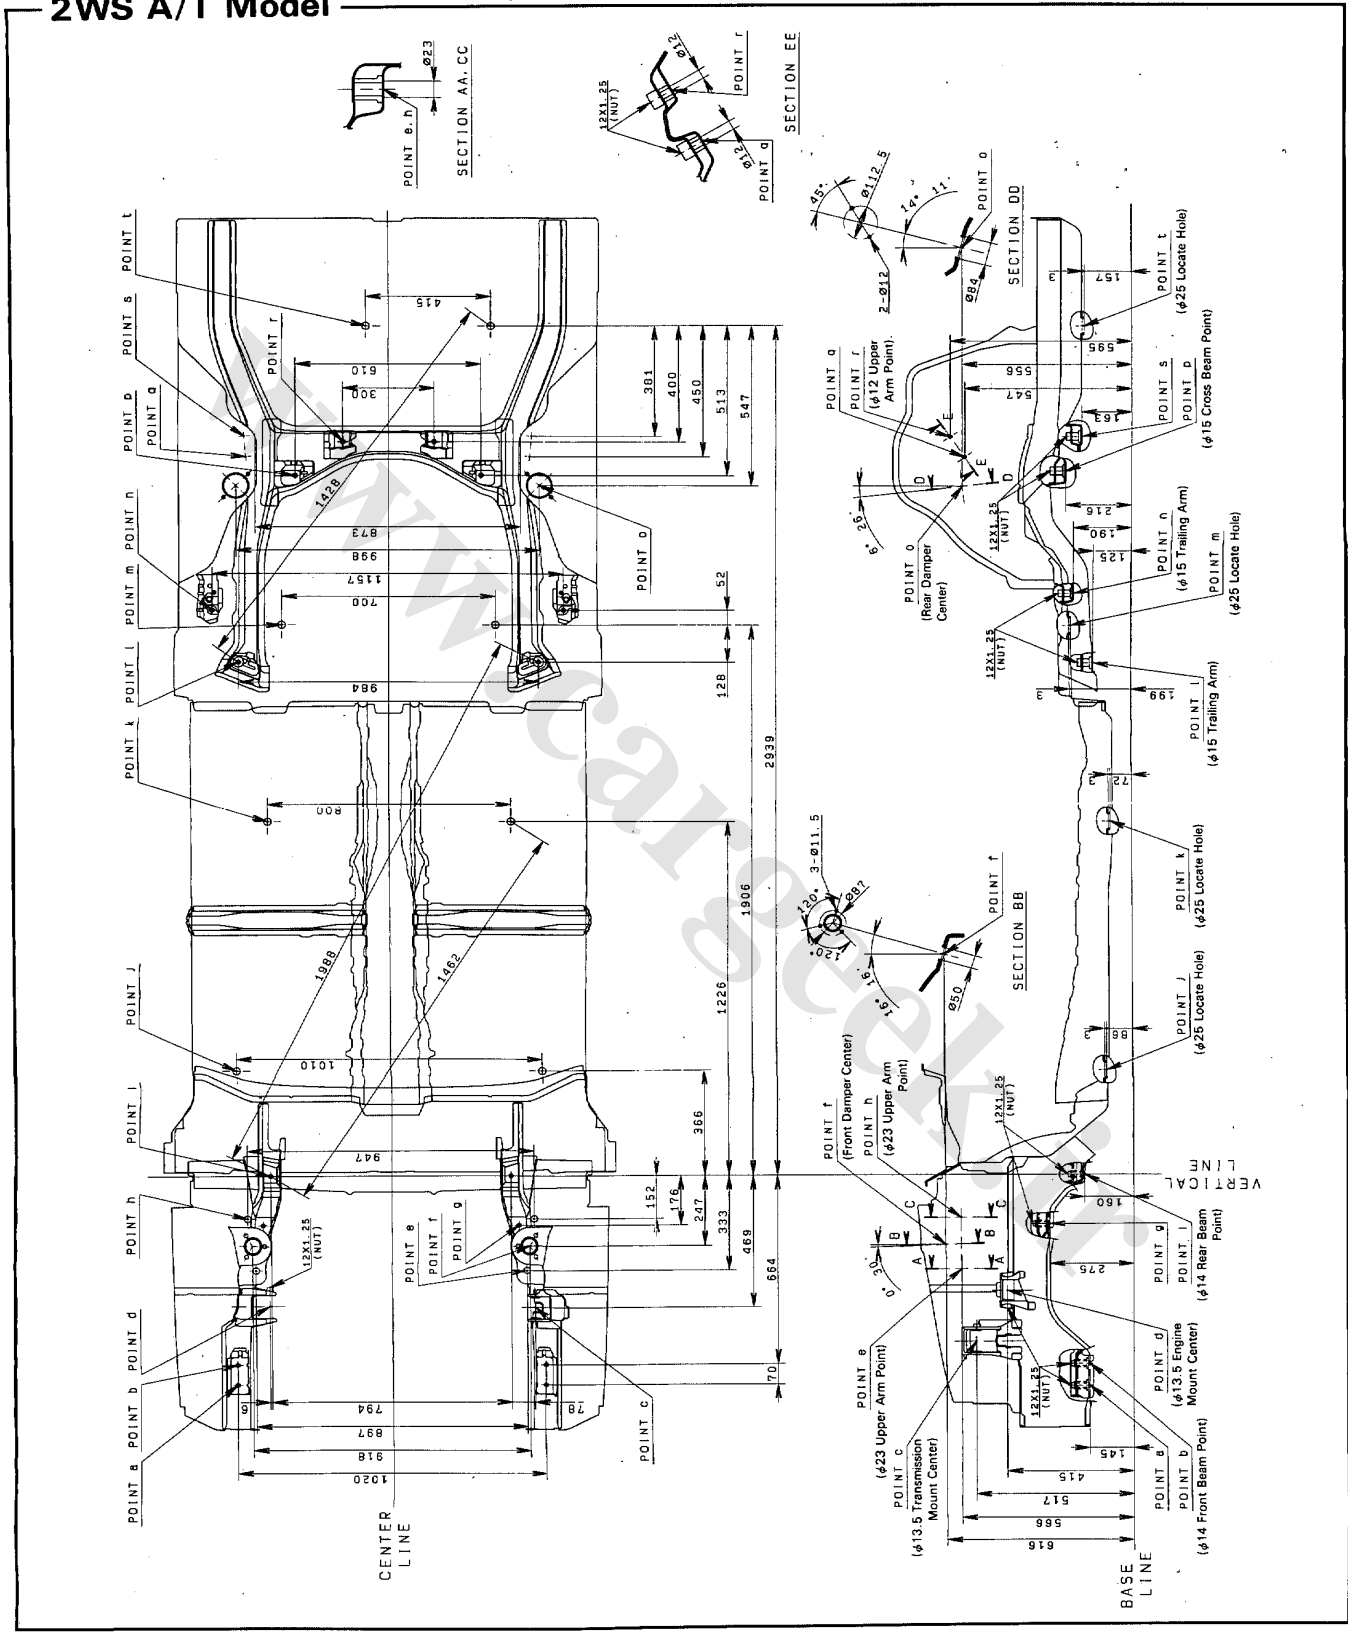

Frame Repair Chart

4WS A/T Model

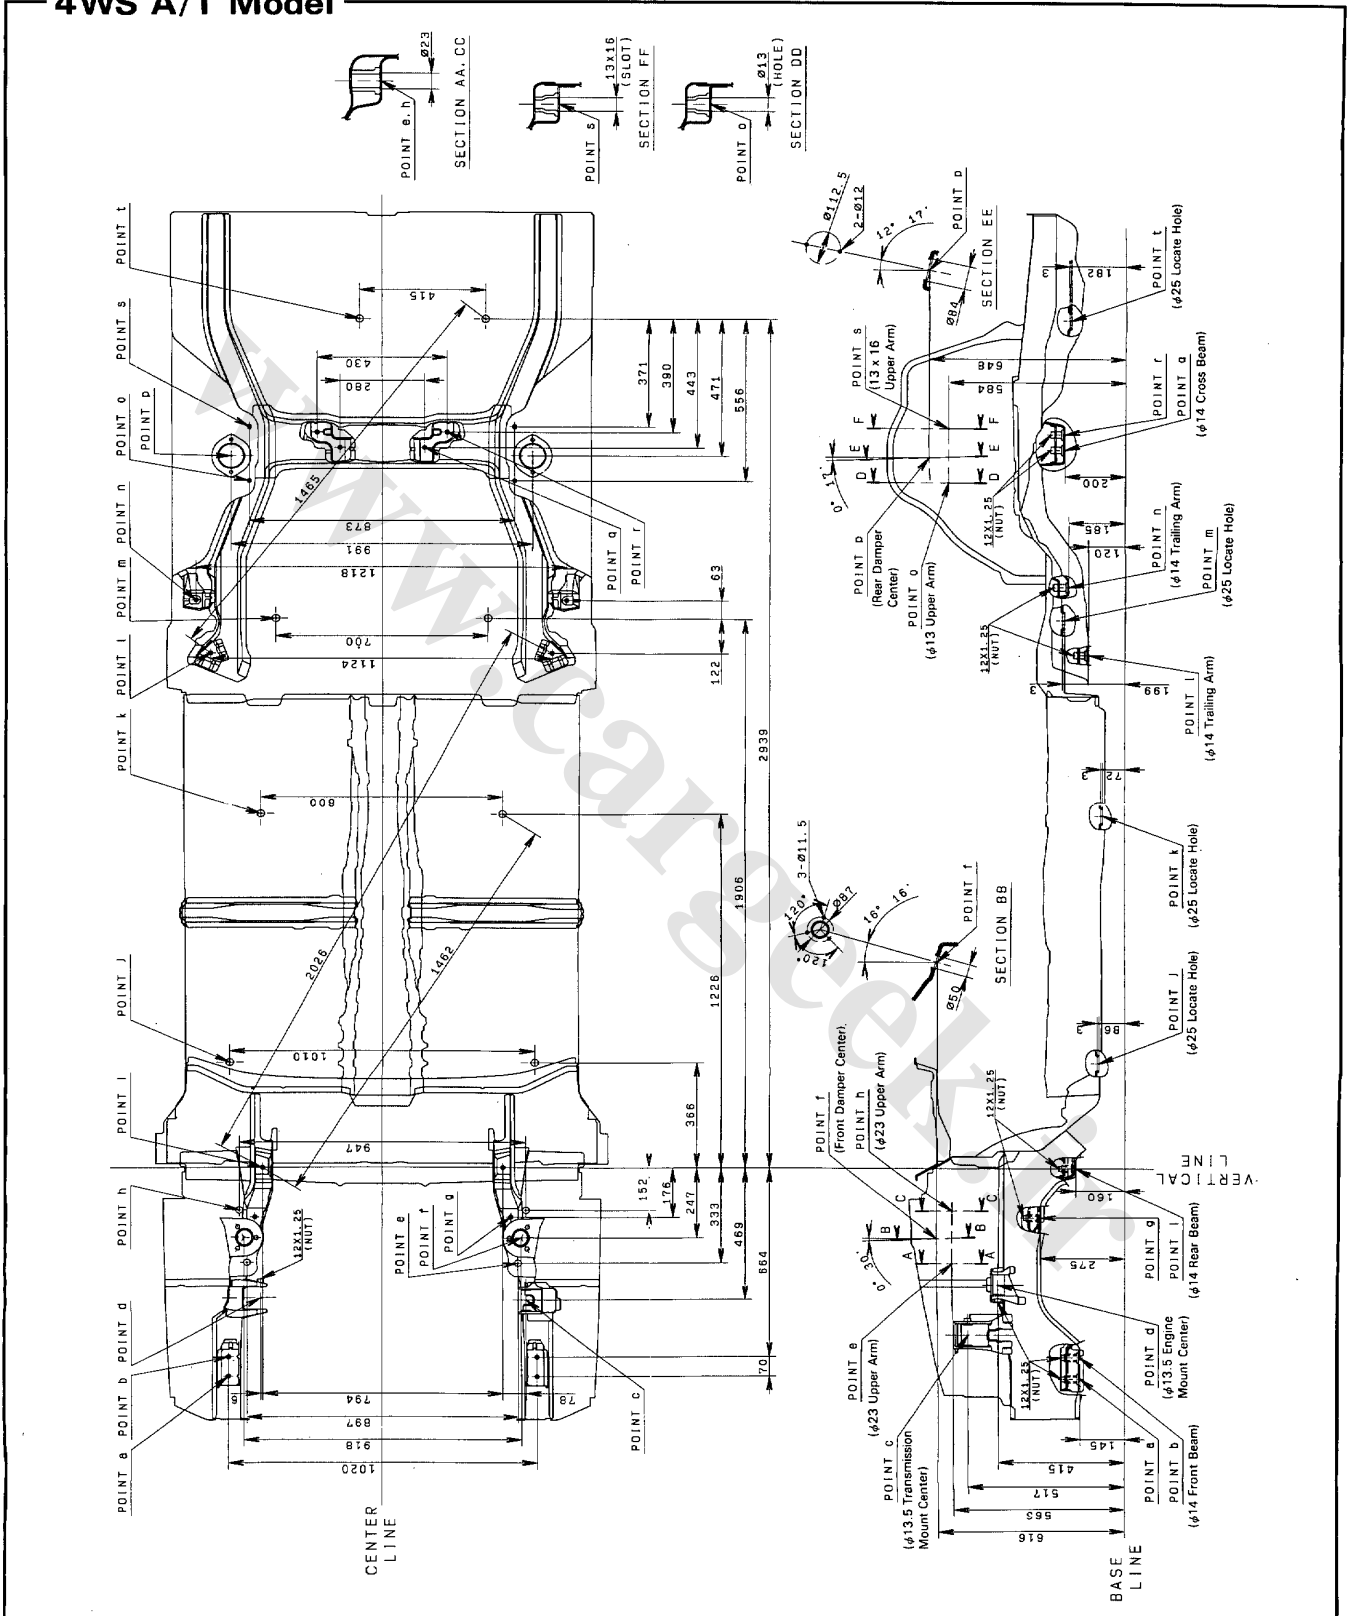


Lubrication Points
Maintenance Schedule

www.cargeek.ir


Lubrication Points

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SF or SG SAE Viscosity: See chart below
2	Transmission Manual Automatic	API Service Grade: SE or SF SAE Viscosity: See chart below DEXRON® or DEXRON® II Automatic transmission fluid
3	Brake line	Brake fluid DOT3 or DOT4
4	Clutch line	Brake fluid DOT3
5	Power steering gearbox	Steering grease P/N 08733-B070E
6	Shift lever pivots (Manual)	Silicone grease with molybdenum disulfide
7-22	Steering ball joints Suspension ball joints Steering boots Steering column bushings Select lever (Automatic) Pedal linkage Intermediate shaft Brake master cylinder pushrod Trunk hinges Door hinges upper and lower Door opening detents Fuel filler lid Engine hood hinges Engine hood latch Tilt lever Rear brake shoe linkage	Multi-purpose grease
23	Caliper Piston seal Dust seal Caliper pin Piston	Silicone grease
24	Power steering system	Power steering fluid P/N 08208-99961


Recommended Engine Oil
(SF or SG Grade Oil)

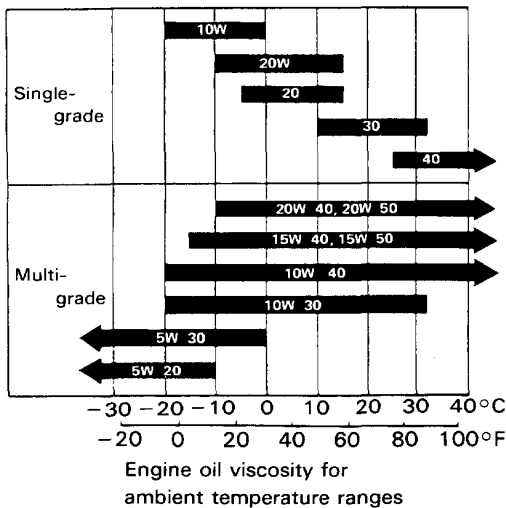

Recommended Manual Transmission Oil
(SE or SF Grade Oil)

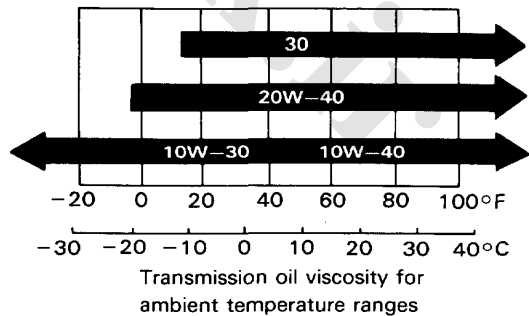

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

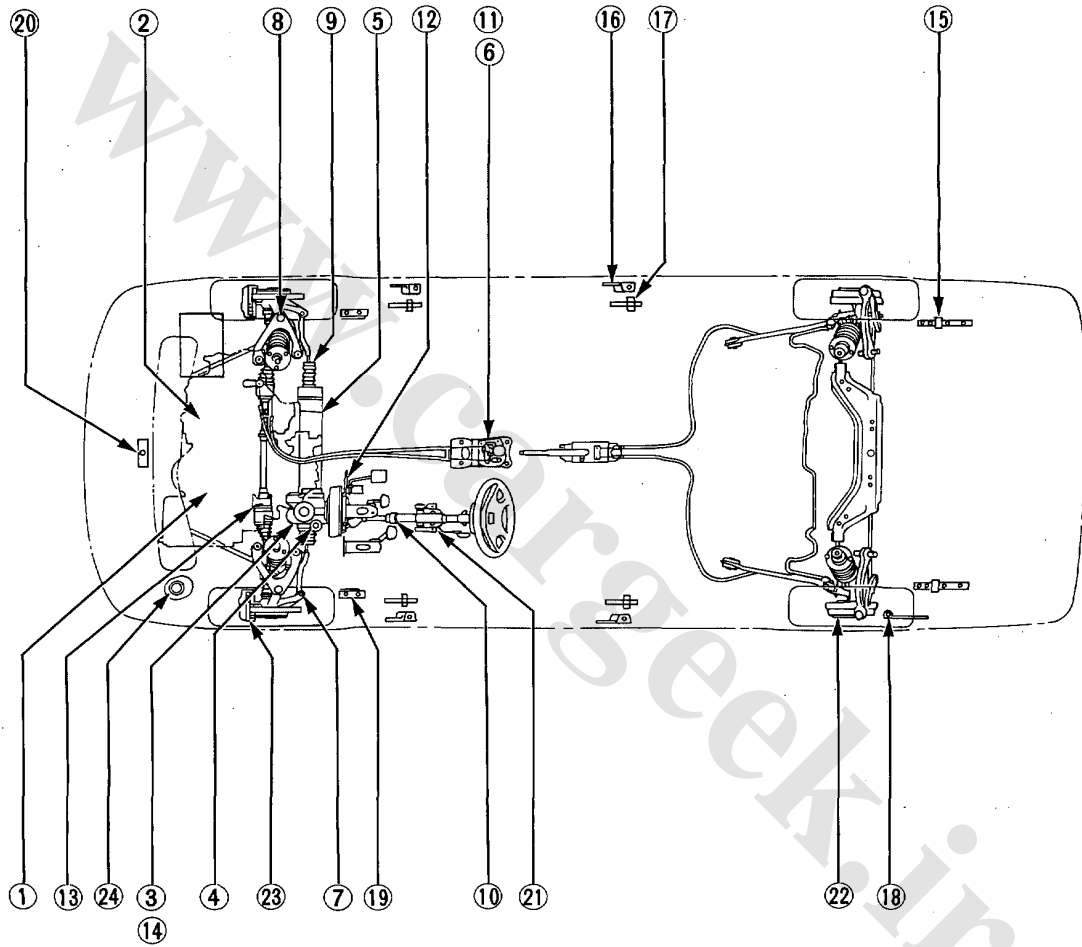

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace C—Clean		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	ITEM	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60
Idle speed and idle CO*3			I	I	I	I	I
Idle speed and idle CO*4							I
Valve clearance			I	I	I	I	I
Alternator drive belt				I		I	
Timing belt and timing balancer belt							R
Water pump							I
■ Engine oil and oil filter			Replace every 10,000 km (6,000 miles) or 6 months				
■ Transmission oil				R		R	
■ Radiator coolant						R*1	
Cooling system hoses and connections				I		I	
E.G.R. system (Standard for some types)							I
Secondary air supply system (Standard for some types)							I
Air cleaner element (Viscous type for European and KQ models)				R		R	
Air cleaner element (Dry type except European and KQ models)			R	R	R	R	R
Fuel filter (Including aux filter*5)				R		R	
Tank, fuel line and connections				I		I	
Intake air temp. control system*3. *5							I
Throttle control system*4. *5				I		I	
Choke mechanism*5				I		I	
Choke mechanism*7					C*8		I
Choke opener operation (only for carburetor automatic choke type)							I
Evaporative emission control system*6							I
Ignition timing and control system*3				I		I	
Ignition timing and control system*4							I
Spark plugs (for cars using unleaded gasoline)				R*2		R*2	
Spark plugs (for cars using leaded gasoline)			R	R	R	R	R
Distributor cap and rotor*3				I		I	
Distributor cap and rotor*4							I
Ignition wiring*3				I		I	
Ignition wiring*4							I
Positive crankcase ventilation valve*3				I		I	
Positive crankcase ventilation valve*4							I
Blow-by filter*5				I		I	

■: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

*1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.

*2 For KS type, replace every 2 years or 40,000 km (24,000 miles) whichever comes first after 30,000 km (18,000 miles).

*3 Except KS, KX models

*4 KS, KX models

*5 Only for carbureted type (except KS model)

*6 Except KP, KT and 2.0 i of KE, KF

*7 Only for carbureted type (KS model)

*8 Recommended by manufacturer only



Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
Brake hoses and lines (Including ALB hoses and pipes for ALB models)		I	I	I	I	I	
Brake fluid (Including ALB fluid for ALB models)			R		R		
Front brake discs and calipers		I	I	I	I	I	
Front brake pads	Inspect every 10,000 km (6,000 miles) or 6 months						
Rear brake discs, calipers and pads (for disk brake type)			I		I		
Rear brake drums, wheel cylinders and linings (for drum brake type)			I		I		
Parking brake		I	I		I		
Exhaust pipe and muffler		I	I	I	I	I	
Suspension mounting bolts		I	I	I	I	I	
Front wheel alignment (except 4WS models)		I	I	I	I	I	
Front and rear wheel alignment (4WS models)		I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots (Including center shaft for 4WS models)	Except 4WS models	I	I		I		
	4WS models	I	I	I	I	I	
ALB high pressure hose (for ALB models)					✓ R		
ALB operation (for ALB models)		I	I		I		
Power steering system		I	I	I	I	I	
Power steering pump belt			I		I		
Catalytic converter heat shield (Standard for some types)						I	

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe, cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I— Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
. B C . E .	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Special Tools

Radiator Cap Testing

Coolant Level Inspection

Engine Oil Level Inspection

Engine Oil Replacement

Oil Filter Replacement

Oil Pressure Test

Air Cleaner Inspection / Replacement

Compression Pressure Inspection

Spark Plug Inspection

Drive Belt Inspection

Alternator (A/C Compressor) Belt

Adjustment

P/S Pump Belt Adjustment

Valve Clearance Adjustment

Idle Speed Inspection/Adjustment


Tailpipe Emission Inspection

**Ignition Timing Inspection and
Setting**

Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07912-610001	Oil Filter Socket	1	
②	07406-0030000	Oil Pressure Gauge Adaptor	1	
③	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
④	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
⑤	07LAZ-PT30110	R.P.M. Connecting Adaptor A	1	
⑥	07LAZ-PT30120	R.P.M. Connecting Adaptor B	1	
⑦	07JGG-0010100	Belt Tension Gauge	1	





①




②

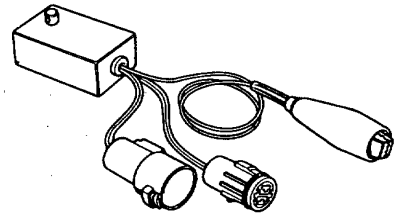

③

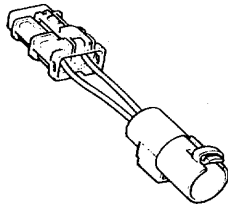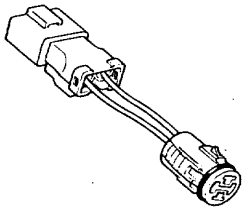

④

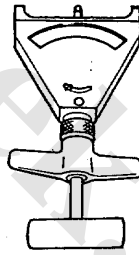

⑦




Engine Tune-up

Radiator Cap Testing

⚠ WARNING The system is under high pressure when the engine is hot. To avoid danger of releasing scalding coolant, remove the cap only when the engine is cool.


1. Remove the radiator cap, wet its seal with coolant, then install it on the pressure tester.
2. Apply pressure of 93–123 kPa (0.95–1.25 kg/cm², 14–18 psi).
3. Check for a drop in pressure.
4. If there is a drop in pressure, replace the cap.

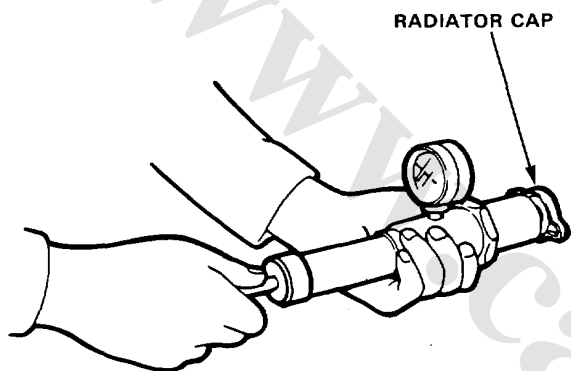

Coolant Level Inspection

CAUTION: When supplying coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the painted portion. If any coolant spills, rinse it off immediately.

1. Check whether the coolant level in the coolant reservoir is between "MAX" and "MIN"

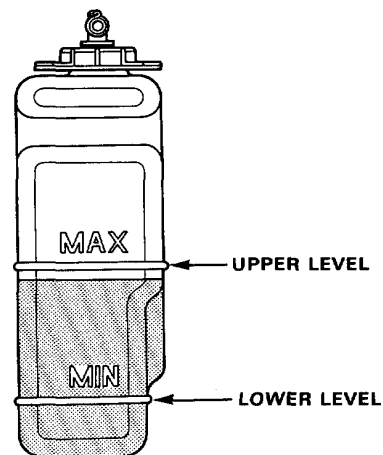

2. Supply the coolant reservoir with coolant to "MAX", if the coolant level is lower than "MIN" or near to "MIN"

NOTE :

- Use only HONDA-RECOMMENDED anti-freeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 50% MINIMUM. Coolant concentrations less than 50% may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60% will impair cooling efficiency and are not recommended.

CAUTION :

- Do not mix different brand anti-freeze/coolants.
- Do not use additional rust inhibitors or antirust products; they may not be compatible with the recommended coolant.

Radiator Coolant Refill Capacity: including reservoir (0.6ℓ(0.6 US qt, 0.5 Imp qt)) and heater.

1.8 ℓ

M/T: 6.6 ℓ (7.0 US qt, 5.8 Imp qt)

A/T: 6.5 ℓ (6.8 US qt, 5.7 Imp qt)

2.0 ℓ and 2.2 ℓ (except 2.2i)

M/T: 7.2 ℓ (7.6 US qt, 6.4 Imp qt)

A/T: 7.1 ℓ (7.5 US qt, 6.3 Imp qt)

2.2 ℓ (2.2i)

M/T: 6.6 ℓ (7.0 US qt, 5.8 Imp qt)

A/T: 7.1 ℓ (7.5 US qt, 6.3 Imp qt)



3. See page 5-69 for refilling.

Engine Tune-up

Oil Level Inspection

1. Check engine oil with the engine off and the car parked on level ground.
2. Make certain that the oil level indicated on the dipstick is between the upper and lower marks.
3. If the level has dropped close to the lower mark, add oil until it reaches the upper mark.

CAUTION: Insert the dipstick carefully to avoid bending it.

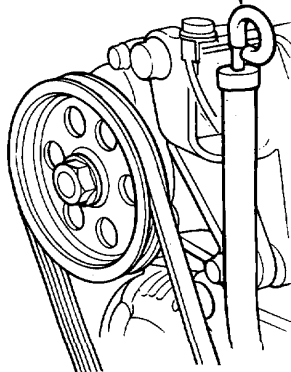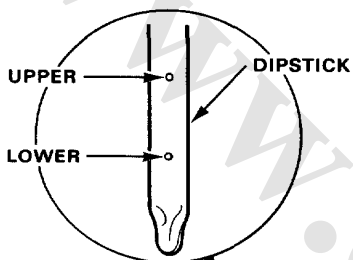


Engine Oil Replacement

1. Warm up the engine.
2. Drain the engine oil.

▲ WARNING Be careful when loosening the drain bolt while the engine is hot. Burns can result because the oil temperature is very high.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

NOTE: Remove the filler cap to speed draining.

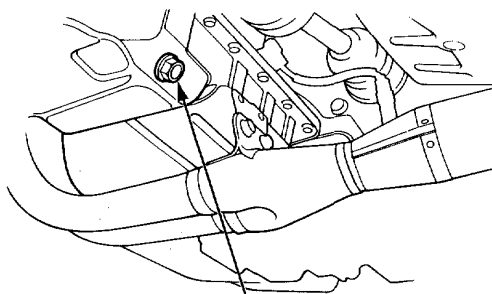


OIL PAN DRAIN PLUG
45 N·m (4.5 kg-m, 33 lb-ft)

3. Reinstall the drain plug with a new washer, and refill with the recommended oil.

Capacity	3.8 ℓ (4.0 US qt, 3.3 Imp qt) at change, including filter 4.9 ℓ (5.2 US qt, 4.3 Imp qt)
Change	Every 10,000 km (6,000 miles) or 6 months



Recommended Engine Oil (SF or SG Grade only)

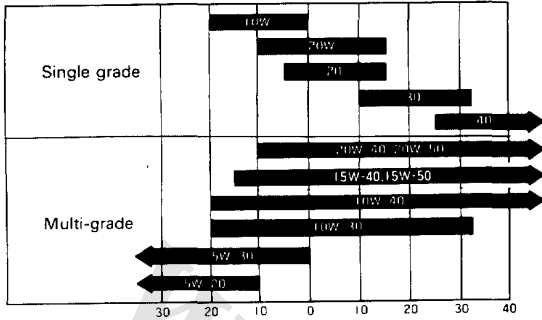

Engine oil viscosity for ambient temperature ranges.

NOTE :

- Oil filter should be replaced at each oil change.
- Because the oil will deteriorate rapidly under the following conditions, it should be changed sooner than usual.
 - Frequent traveling on unpaved roads.
 - Use in cold climates.
 - Frequent idling.
 - Repeated short distance travel.
 - Use as a tractor.


Oil Filter Replacement

⚠ WARNING After the engine has been run, the exhaust pipes will be hot; be careful when working around the exhaust manifold.

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

1. Remove the oil filter with the special oil filter socket.
2. Inspect the threads and rubber seal on the new filter. Wipe off seat on engine block, then apply a light coat of oil to the filter rubber seal.

NOTE: Use only filters with a built-in bypass system.

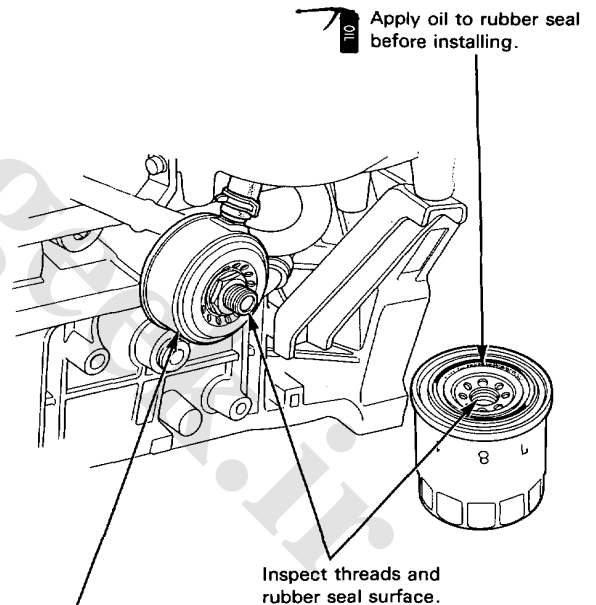

ENGINE OIL COOLER
(Standard for some types)

(cont'd)

Engine Tune-up


Oil Filter Replacement (cont'd)

3. Install the oil filter by hand.
4. After the rubber seal is seated, tighten the oil filter clockwise with the special tool.

Tighten: 7/8 turn clockwise.

Tightening torque: 22 N·m (2.2 kg-m, 16 lb-ft)

CAUTION: Installation other than the above procedure could result in serious engine defects due to oil leakage.

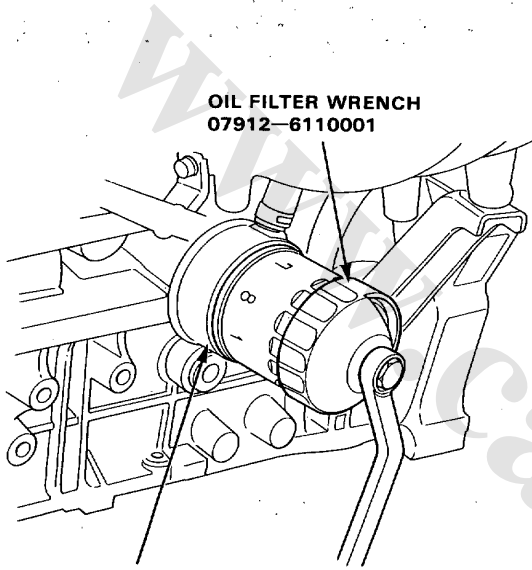


**OIL FILTER WRENCH
07912-6110001**

**ENGINE OIL COOLER
(Standard for some types)**


Eight numbers (1 to 8) are printed on the surface of the filter.

The following explains the procedure for tightening filters using these numbers.

- 1) Make a mark on the cylinder block under the number that shows at the bottom of the filter when the rubber seal is seated.
- 2) Tighten the filter by turning it clockwise seven numbers from the marked point. For example, if a mark is made under the number 2 when the rubber seal is seated, the filter should be tightened until the number 1 comes up to the marked point.

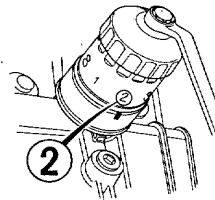

Number when rubber seal is seated.

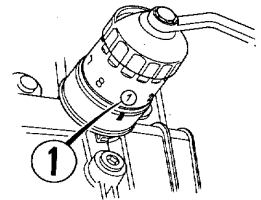

Number after tightening.

Number when rubber seal is seated	1	2	3	4	5	6	7	8
Number after tightening	8	1	2	3	4	5	6	7

5. After installation, fill the engine with oil up to the specified level, run the engine for more than 3 minutes, then check for oil leakage.



Oil Pressure Test

If the oil pressure warning light stays on with the engine running, check the engine oil level. If the oil level is correct:

1. Connect a tachometer.
2. Remove the oil pressure sender and install an oil pressure gauge.
3. Start the engine and allow it to reach operating temperature (the cooling fan comes on at least twice).
4. Pressure should be:

Engine Oil Pressure: 80°C (176°F)


At Idle: 69 kPa (0.7 kg/cm², 10 psi) minimum

At 3,000 min⁻¹ (rpm): 343 kPa (3.5 kg/cm², 50 psi) minimum

- If oil pressure is within specifications, replace the oil pressure sender and recheck.
- If oil pressure is NOT within specifications, inspect the oil pump.

**OIL PRESSURE
GAUGE
ADAPTOR
07406-0030000**

OIL PRESSURE GAUGE

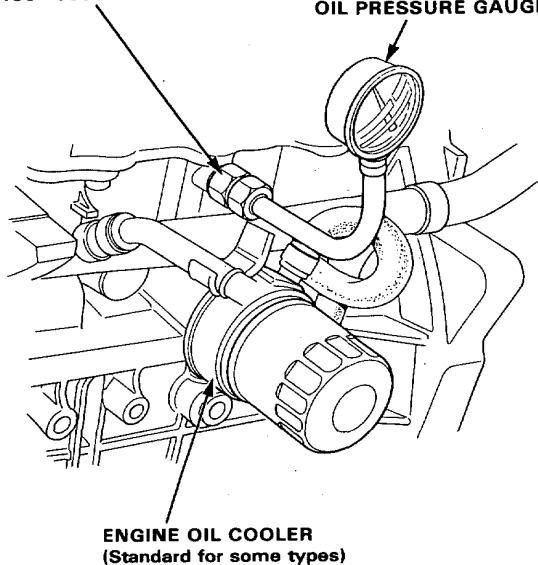

Air Cleaner Element Inspection/ Replacement

Inspection

1. Remove the air cleaner element.
2. Check the air cleaner element for fouling.


NOTE: No cleaning is necessary for the air cleaner element, because its filter takes in oil (: viscous type).

- The air cleaner element should be replaced more frequently on cars normally used under severe driving conditions.


Replacement

1. Remove the air cleaner cover.

Carbureted Engine:

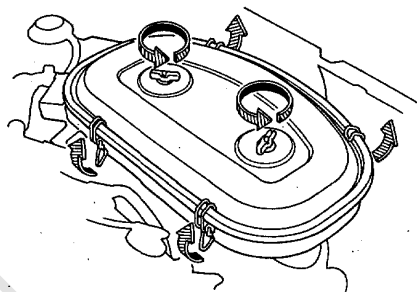

Fuel-Injected Engine:

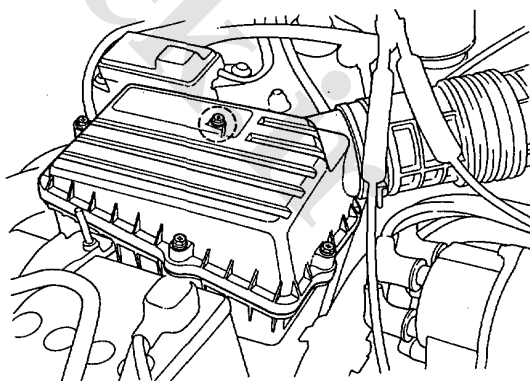

(cont'd)



Oil Pressure Test

If the oil pressure warning light stays on with the engine running, check the engine oil level. If the oil level is correct:

1. Connect a tachometer.
2. Remove the oil pressure sender and install an oil pressure gauge.
3. Start the engine and allow it to reach operating temperature (the cooling fan comes on at least twice).
4. Pressure should be:

Engine Oil Pressure: 80°C (176°F)


At Idle: 69 kPa (0.7 kg/cm², 10 psi) minimum

At 3,000 min⁻¹ (rpm): 343 kPa (3.5 kg/cm², 50 psi) minimum

- If oil pressure is within specifications, replace the oil pressure sender and recheck.
- If oil pressure is NOT within specifications, inspect the oil pump.

**OIL PRESSURE
GAUGE
ADAPTOR
07406-0030000**

OIL PRESSURE GAUGE

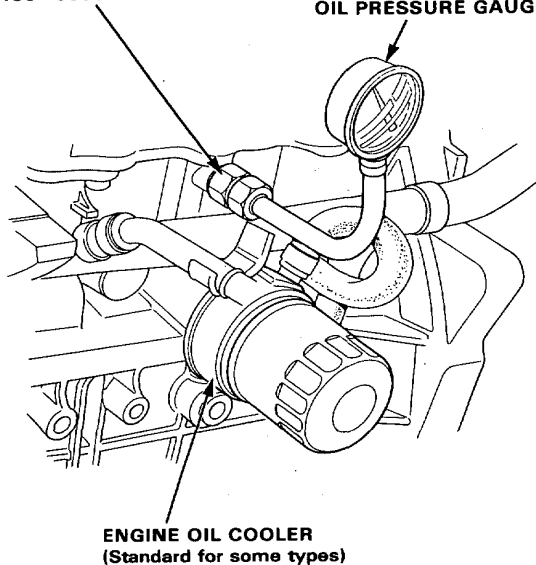

Air Cleaner Element Inspection/ Replacement

Inspection

1. Remove the air cleaner element.
2. Check the air cleaner element for fouling.


NOTE: No cleaning is necessary for the air cleaner element, because its filter takes in oil (: viscous type).

- The air cleaner element should be replaced more frequently on cars normally used under severe driving conditions.


Replacement

1. Remove the air cleaner cover.

Carbureted Engine:

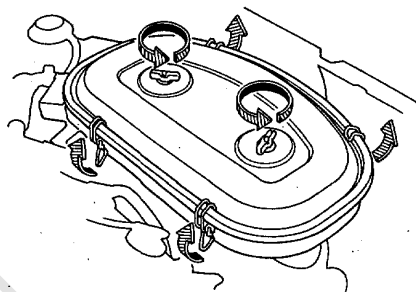

Fuel-Injected Engine:

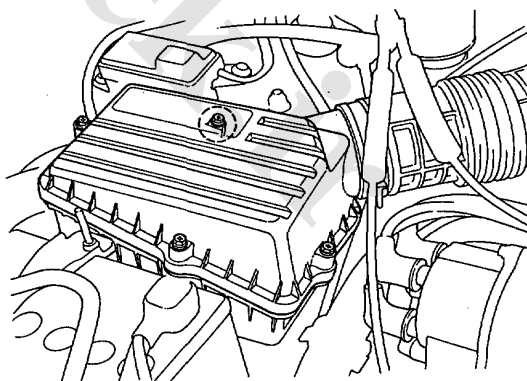


(cont'd)


Engine Tune-up

Air Cleaner Element Inspection/ Replacement (cont'd)

Carbureted Engine:

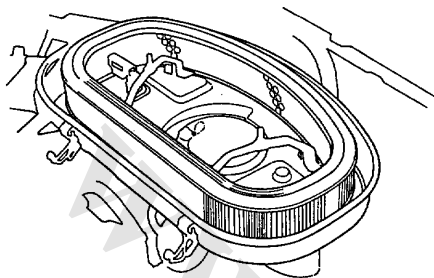


Fuel-Injected Engine:

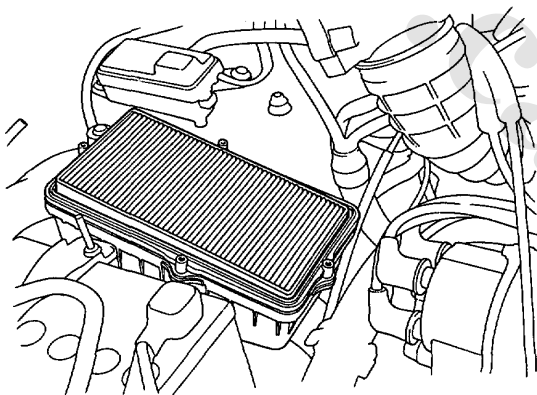


2. Replace the element, install the air cleaner cover and tighten the nuts or clips securely.

Compression Pressure Inspection

1. Before inspection, run the engine until it warms up (the cooling fan comes on at least twice).
2. Disconnect spark plugs (4).
3. Disconnect the 2-P connector (ignition coil primary lead) from the distributor.

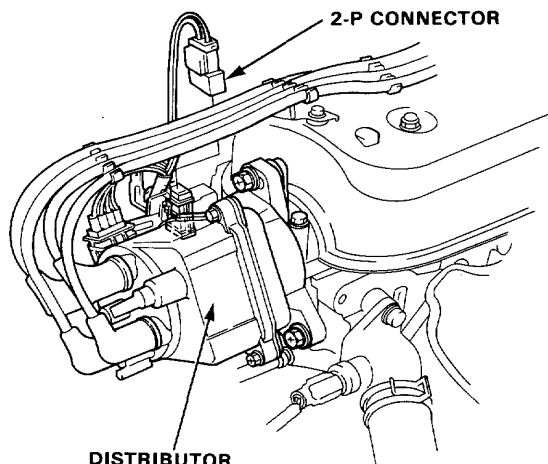

4. Fit the compression gauge adapter into a plug hole.
 - Measure compression pressure at each cylinder.

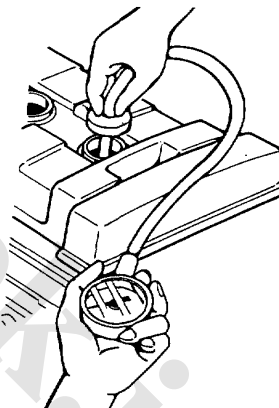

Compression pressure :

1.8 l : 1,177 kPa (12.0 kg/cm², 171 psi)
at 250 min⁻¹(rpm)

2.0 l , 2.2 l : 1,226 kPa (12.5 kg/cm², 178 psi)
at 250 min⁻¹(rpm)

Limit : 932 kPa (9.5 kg/cm², 135 psi)
at 250 min⁻¹(rpm)

Difference between cylinders :

196 kPa (2.0 kg/cm², 28 psi)


NOTE : Use a full charged battery.

5. If compression pressure is low, it is caused by wear or damage of piston rings or head gasket, and improper seated valves.
6. When the pressure is high, inspect the following item.
 - Accumulated carbon on the piston head and the cylinder head.


Engine Tune-up

Air Cleaner Element Inspection/ Replacement (cont'd)

Carbureted Engine:

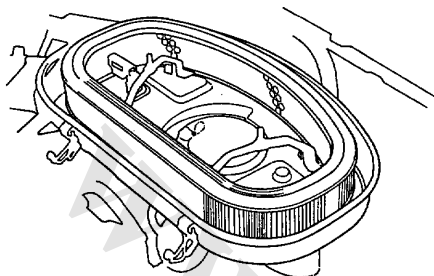


Fuel-Injected Engine:

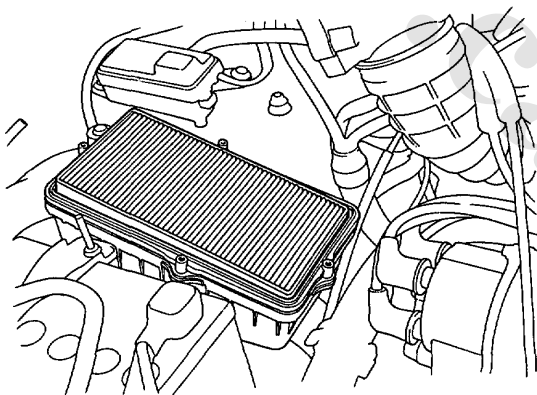


2. Replace the element, install the air cleaner cover and tighten the nuts or clips securely.

Compression Pressure Inspection

1. Before inspection, run the engine until it warms up (the cooling fan comes on at least twice).
2. Disconnect spark plugs (4).
3. Disconnect the 2-P connector (ignition coil primary lead) from the distributor.

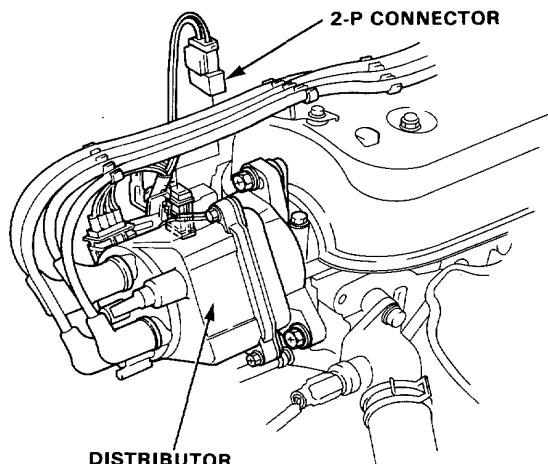

4. Fit the compression gauge adapter into a plug hole.
 - Measure compression pressure at each cylinder.

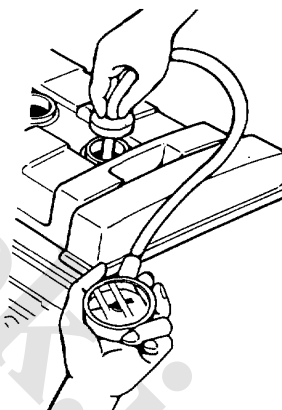

Compression pressure :

1.8 l : 1,177 kPa (12.0 kg/cm², 171 psi)
at 250 min⁻¹(rpm)

2.0 l , 2.2 l : 1,226 kPa (12.5 kg/cm², 178 psi)
at 250 min⁻¹(rpm)

Limit : 932 kPa (9.5 kg/cm², 135 psi)
at 250 min⁻¹(rpm)

Difference between cylinders :

196 kPa (2.0 kg/cm², 28 psi)


NOTE : Use a full charged battery.

5. If compression pressure is low, it is caused by wear or damage of piston rings or head gasket, and improper seated valves.
6. When the pressure is high, inspect the following item.
 - Accumulated carbon on the piston head and the cylinder head.



Spark Plug Inspection

1. Inspect the electrodes and ceramic insulator for:

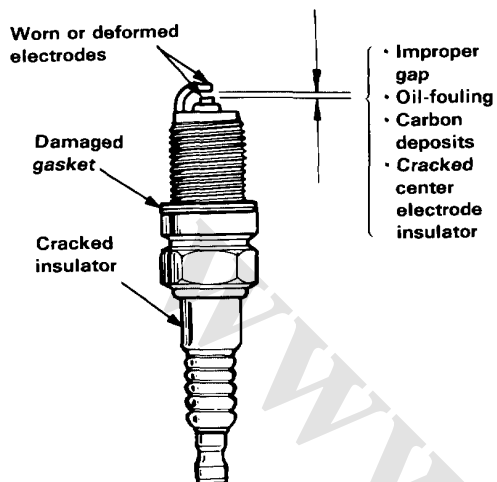

Burned or worn electrodes may be caused by:

- Advanced ignition timing
- Loose spark plug
- Plug heat range too low
- Insufficient cooling

Fouled plug may be caused by:

- Retarded ignition timing
- Oil in combustion chamber
- Incorrect spark plug gap
- Plug heat range too high
- Excessive idling/low speed running
- Clogged air cleaner element
- Deteriorated ignition coil or ignition wires

2. Replace the plug if the center electrode is rounded as shown below:

NOTE:

- Do not use spark plugs other than those listed below, because those plugs are a new type (ISO standard).
- These marks are sealed on the air cleaner cover.




Spark Plug:
Except KP and KT models

	Standard	Optional
NGK	ZFR6F-11	ZFR5F-11* ZFR7F-11
ND	KJ20CR-L11	KJ16CR-L11* KJ22CR-L11

*: Except KF, KG, KS, KW, KE and KX models

KP and KT models

	Standard	Optional
NGK	ZFR5F-11	ZFR6F-11
ND	KJ16CR-L11	KJ20CR-L11

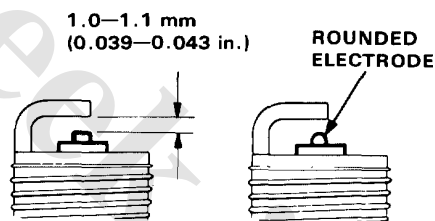

3. Adjust the gap with a suitable gapping tool.

Electrode Gap: 1.0—1.1 mm (0.039—0.043 in.)

4. Screw the plugs into the cylinder head finger tight, then torque them to 18 N·m (1.8 kg-m, 13 lb-ft).

NOTE: Apply a small quantity of anti-seize compound to the plug threads before installing.

Engine Tune-up

Drive Belts Inspection


Drive Belts Deflection:

(When applying a force of 98 N (10 kg, 22 lb))

	Used Belt	New Belt
① Alternator Belt	10.0–12.0 mm (0.39–0.47 in.)	8.5–11.0 mm (0.33–0.43 in.)
① Alternator Belt with A/C	10.0–12.0 mm (0.39–0.47 in.)	4.5–7.0 mm (0.18–0.28 in.)
② P/S Pump Belt	13.0–16.0 mm (0.51–0.63 in.)	9.5–11.5 mm (0.37–0.45 in.)

Measure with the belt tension gauge:

	Used Belt	New Belt
③ Alternator Belt	343–490 N { 35–50 kg } { 77–110 lb }	441–637 N { 45–65 kg } { 99–143 lb }
④ Alternator Belt with A/C	441–588 N { 45–60 kg } { 99–132 lb }	932–1,128 N { 95–115 kg } { 209–254 lb }
② P/S Pump Belt	343–490 N { 35–50 kg } { 77–110 lb }	686–883 N { 70–90 kg } { 154–198 lb }

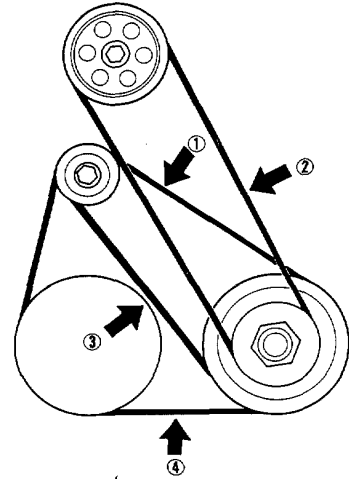




Alternator (A/C Compressor) Belt Adjustment

1. Apply a force of 98 N (10 kg, 22 lb) and measure the deflection between the alternator and crankshaft pulley.

Deflection: 10–12 mm (0.39–0.47 in.)

NOTE: On a brand-new belt, the deflection should be 8.5–11 mm (0.33–0.43 in.) when first measured.

UPPER THROUGH BOLT
45 N·m (4.5 kg·m, 33 lb-ft)

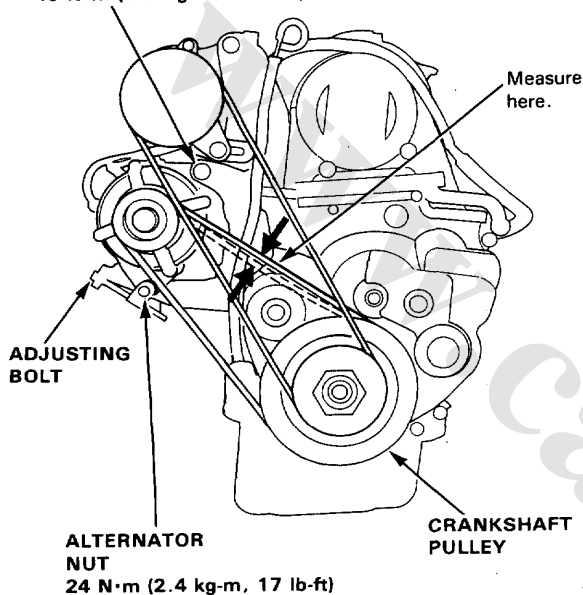


Measure with the belt tension gauge:
Attach the belt tension gauge to the belt and measure the tension of the belt.

Tension: 294–441 N (30–45 kg, 66–99 lb)

NOTE: On a brand-new belt, the tension should be 441–637 N (45–65 kg, 99–143 lb) when first measured.

UPPER THROUGH BOLT
45 N·m (4.5 kg·m, 33 lb-ft)

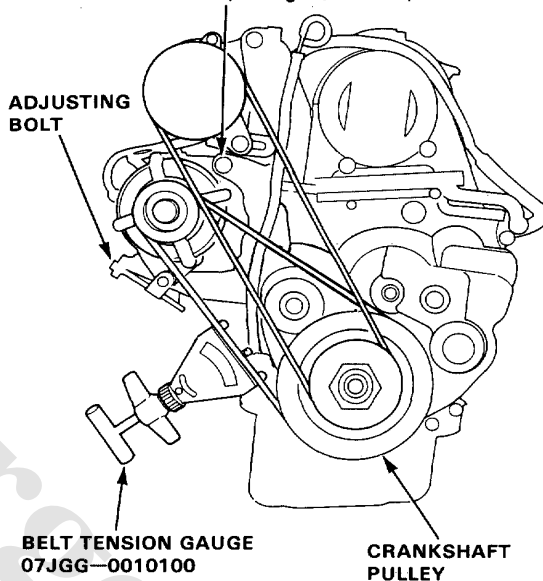

2. Loosen the upper through bolt and alternator nut.
3. Move the alternator to obtain the proper belt tension, then retighten the alternator nut and upper through bolt.
4. Recheck the deflection of the belt.
5. After adjusting, if necessary, adjust the P/S pump belt (see section 17).

Engine Tune-up

Alternator (A/C Compressor) Belt Adjustment

1. Apply a force of 98 N (10 kg, 22 lb) and measure the deflection between the alternator and crankshaft pulley.

Deflection: 10–12 mm (0.39–0.47 in.)

NOTE:

- On a brand-new belt, the deflection should be 4.5–7 mm (0.18–0.28 in.) when first measured.
- If there are cracks or any damage evident on the belt, replace it with a new one.



Measure with the belt tension gauge:

Attach the belt tension gauge to the belt and measure the tension of the belt.

Tension: 441–558 N (45–60 kg, 99–132 lb)

NOTE:

- On a brand-new belt, the tension should be 931–1127 N (95–115 kg, 209–253 lb) when first measured.
- See the instruction for the belt tension gauge.
- If there are cracks or any damage evident on the belt, replace it with a new one.

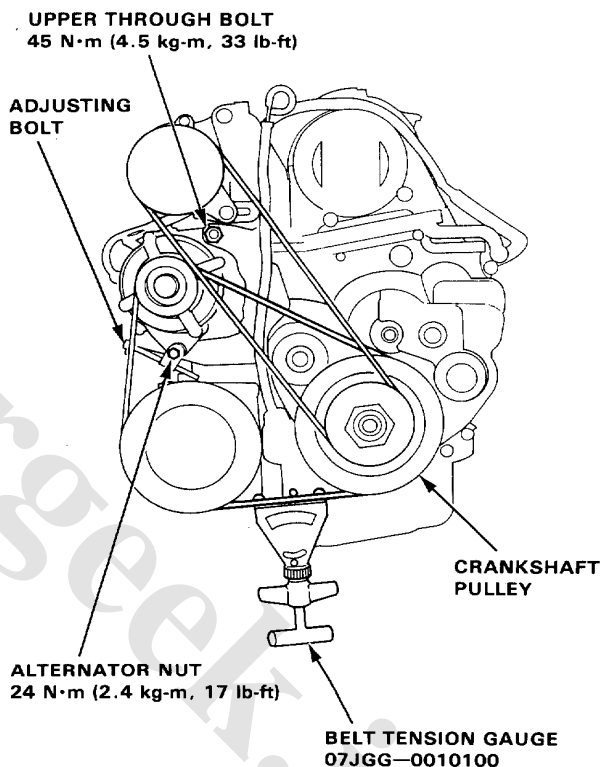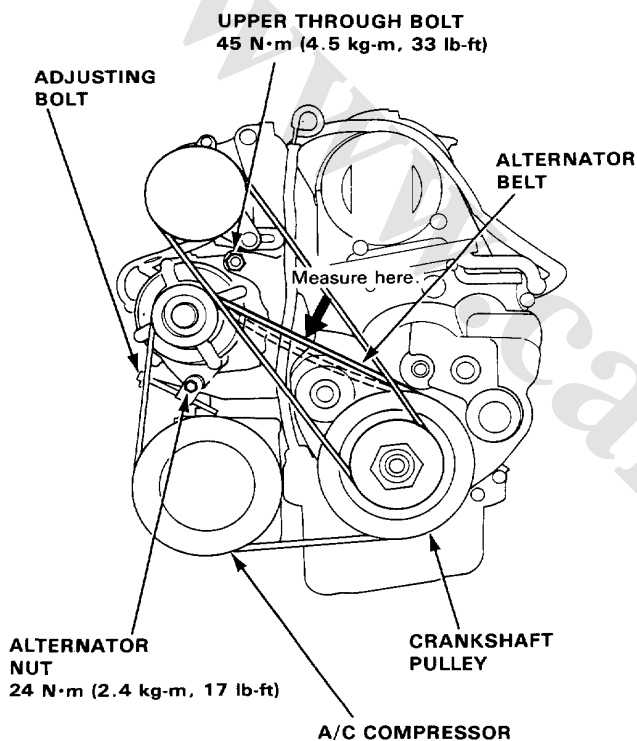


2. Loosen the upper through bolt and alternator nut.
3. Move the alternator to obtain the proper belt tension, then retighten the alternator nut and upper through bolt.
4. Recheck the deflection of the belt.
5. After adjusting, if necessary, adjust the P/S pump belt (see section 11)



P/S Pump Belt Adjustment

1. A properly adjusted belt should deflect about 12.5–16 mm (0.50–0.62 in) when you push on it the pulleys with a force of about 98 N (10 kg, 22 lbs).


NOTE: On a brand new belt, the deflection should be 9.5–11.5 mm (0.37–0.45 in) when first measured.

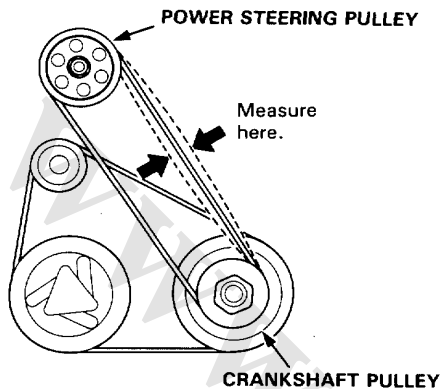


Test by the Belt Tension Gauge; 07JGG-0010100. Attach the tension gauge to the belt and measure the tension of the belt.

Tension: 35–50 kg (77–110 lbs)


- On a brand-new belt, the tension should be 70–90 kg (154–198 lbs) when first measured.
- See the instructions for the tension gauge.

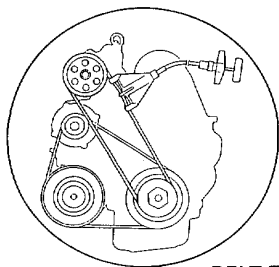

**BELT TENSION GAUGE
07JGG-0010100**

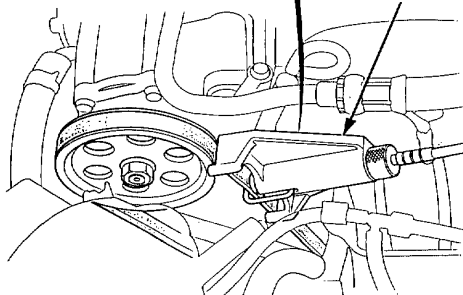

2. Loosen the special bolt and nut and turn the adjusting bolt to get proper tension, then retighten the special bolt and nut.

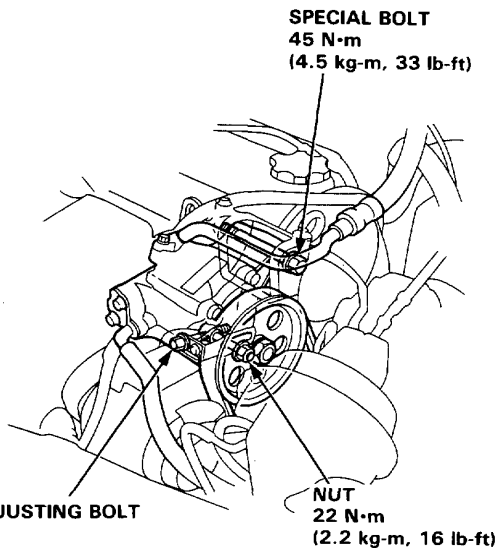

3. Start the engine and turn the steering wheel from lock-to-lock several times, then stop the engine and recheck the belt tension.


Engine Tune-up

Valve Clearance Adjustment

NOTE:


- Valves should be adjusted cold when the cylinder head temperature is less than 38 °C (100 °F). Adjustment is the same for intake and exhaust valves.
- If pulley bolt broke loose while turning crank, retorque it to 220 N·m (22.0 kg-m, 159 lb-ft).

1. Remove valve cover.

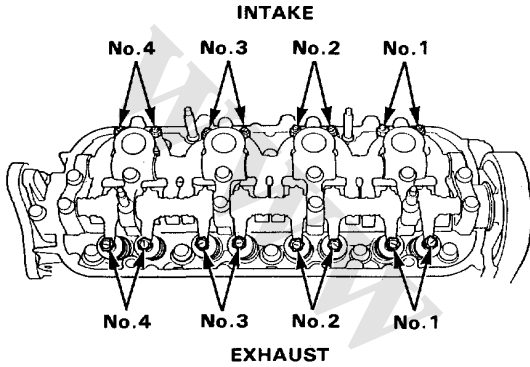

2. Set No.1 piston at TDC. "UP" mark on the pulley should be at top, and TDC grooves on the pulley should align with cylinder head surface. The distributor rotor must be pointing towards No.1 plug wire.


Number 1 piston at TDC

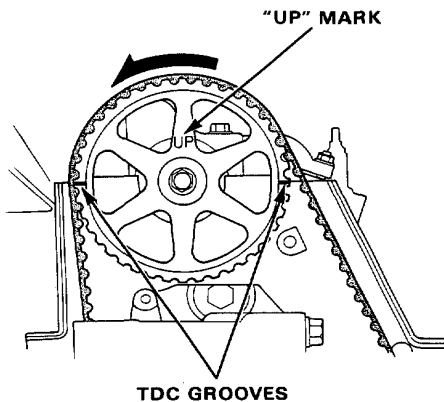


3. Adjust valves on No.1 cylinder.

Intake: 0.26 ± 0.02 mm (0.010 ± 0.01 in.)
Exhaust: 0.30 ± 0.02 mm (0.012 ± 0.01 in.)

4. Loosen locknut and turn adjustment screw until feeler gauge slides back and forth with slight amount of drag.

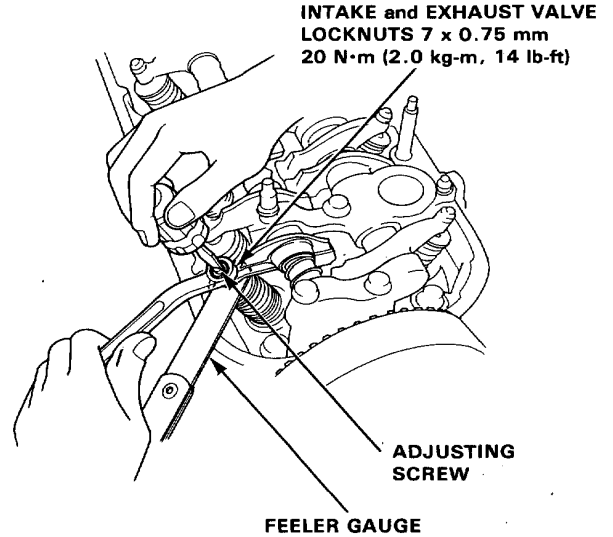


5. Tighten locknut and check clearance again. Repeat adjustment if necessary.

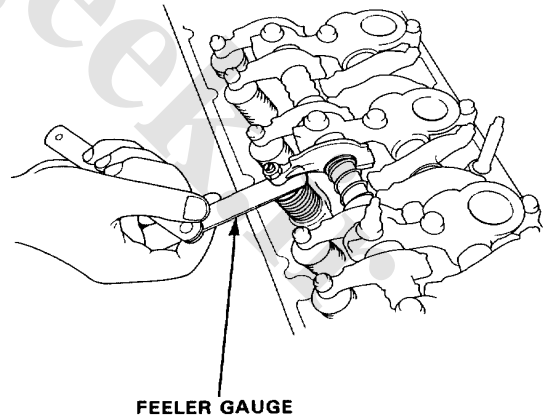




6. Rotate crankshaft 180° counterclockwise (cam pulley turns 90°). The "UP" mark should be at exhaust side. Distributor rotor should point to No.3 plug wire. Adjust valves on No.3 cylinder.

Number 3 piston at TDC

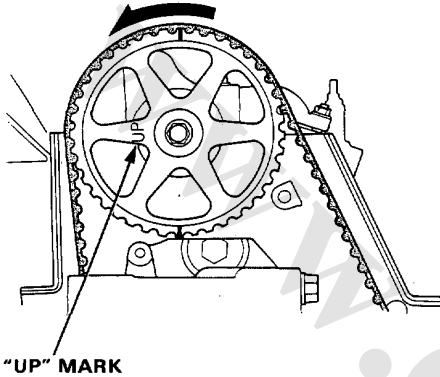


7. Rotate crankshaft 180° counterclockwise to bring No. 4 piston to TDC. Both TDC grooves are once again visible and distributor rotor points to No.4 plug wire. Adjust valves on No.4 cylinder.

Number 4 piston at TDC

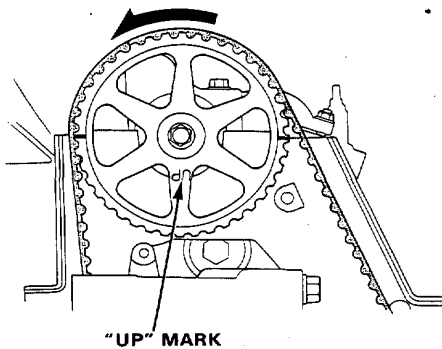

8. Rotate crankshaft 180° counterclockwise to bring No. 2 piston to TDC. The "UP" mark should be at intake side. Distributor rotor should point to No.2 plug wire. Adjust valves on No.2 cylinder.

Number 2 piston at TDC

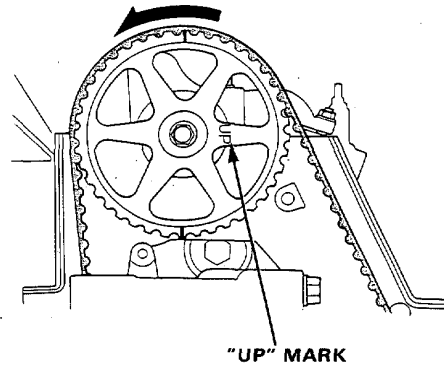

Engine Tune-up

Idle Speed Inspection/Adjustment

Carbureted Engine:

(KS KG, KQ)


Inspection/Adjustment

Propane Enrichment Method


⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

NOTE:

- This procedure requires a propane enrichment kit.
 - Check that the self diagnosis indicator before making idle speed and mixture inspections.
1. Start the engine and warm up to normal operating temperature (the cooling fan comes twice).
 2. Disconnect the #8 vacuum hose from the intake air control diaphragm and clamp the hose end.

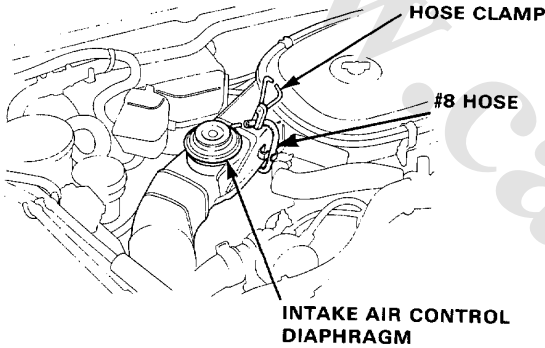


3. Connect a tachometer.

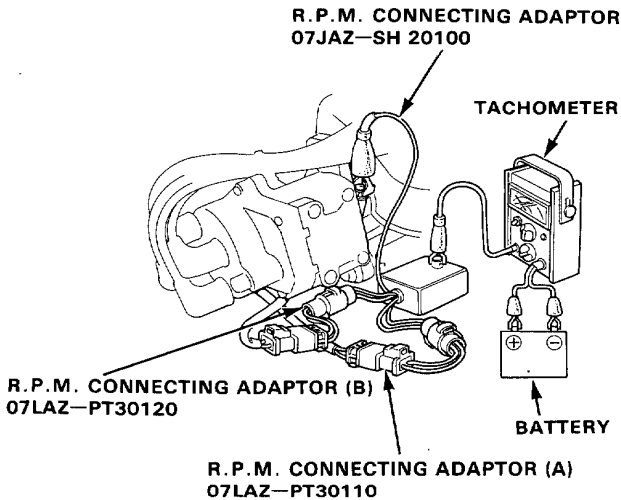

4. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500—3,000 min⁻¹ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off.

Idle speed should be:


Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

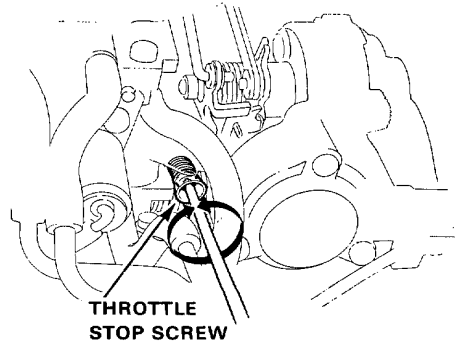

Adjust the idle speed, if necessary, by turning the throttle stop screw.


NOTE: If the idle speed is excessively high, check the throttle control system (page 6-112)

5. Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

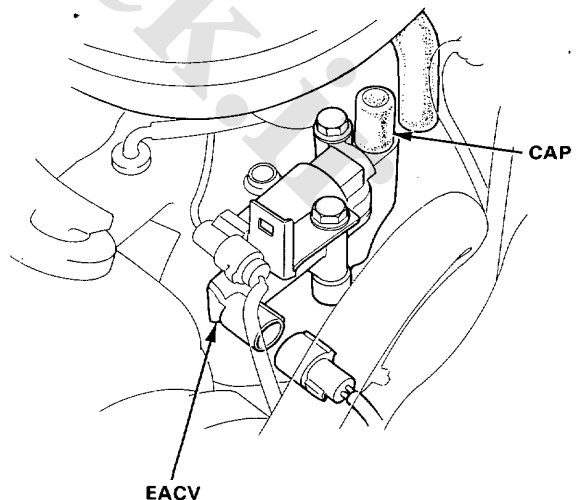




- Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

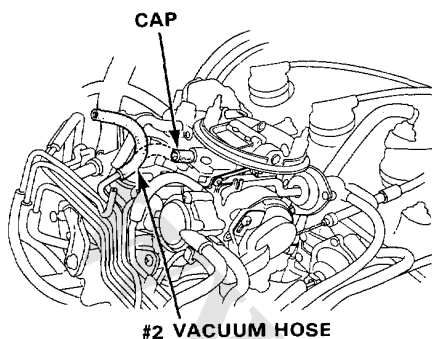


- Disconnect air cleaner intake tube from air intake duct.
- Insert the hose of the propane enrichment kit into the intake tube about 10 cm.
NOTE: Check that propane bottle has adequate gas before beginning test.

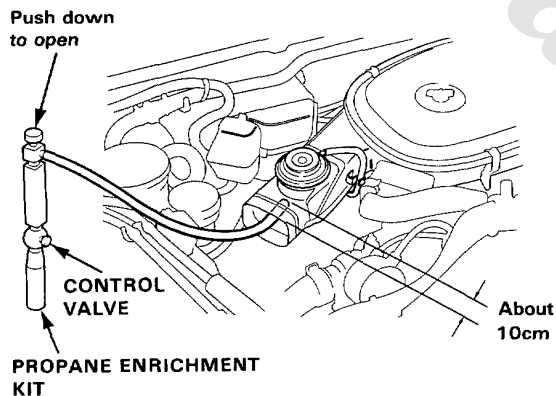

- With engine idling, depress push button on top of propane device, then slowly open the propane control valve to obtain maximum engine speed. Engine speed should increase as percentage of propane injected goes up.


NOTE: Open the propane control valve slowly; a sudden burst of propane may stall the engine.

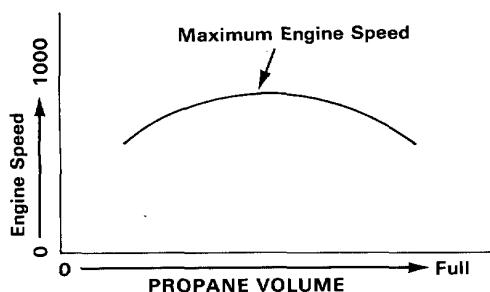

Engine speed increase should be:

Manual	$160 \pm 20 \text{ min}^{-1} \text{ (rpm)}$
Automatic	$50 \pm 10 \text{ min}^{-1} \text{ (rpm)}$ (in "D")

- If engine speed does not increase per specification, mixture is improperly adjusted. Go to step 10.
 - If engine speed increases per specification, go to step 14.
- Remove the air cleaner and close the propane control valve.
 - Remove the mixture adjusting screw hole cap.

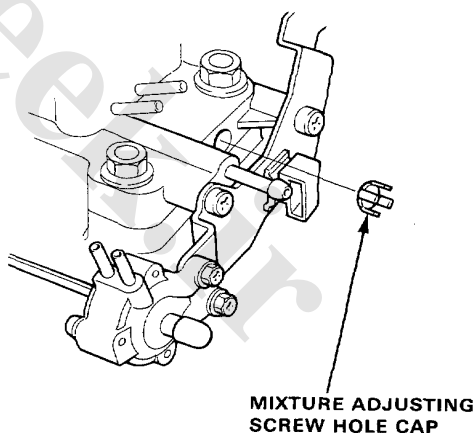

(cont'd)

Engine Tune-up

Idle Speed Inspection/Adjustment (cont'd)

12. Start engine and warm up to normal operating temperature ; the cooling fan will come on.
13. Reinstall the propane enrichment kit and recheck maximum propane enriched engine speed.
 - If the propane enriched speed is too low, mixture is too rich: turn the mixture screw 1/4-turn clockwise and recheck.
 - If the propane enriched speed is too high, mixture is to lean: turn the mixture screw 1/4-turn counter-clockwise and recheck.
14. Close the propane control valve speed and remove the BACK UP fuse for 10 seconds to reset control unit. Recheck idle speed.


Idle speed should be:

Manual	$800 \pm 50 \text{min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{min}^{-1}$ (rpm) (in "D")

- If idle speed is as specified (step 4), go to step 15.
 - If idle speed is not as specified, adjust by turning throttle stop screw, then repeat steps 13 and 14.
15. Remove propane enrichment kit and reconnect air cleaner intake tube on the air intake duct.
 16. Reinstall the mixture adjusting screw hole cap.
 17. Disconnect the connector on the P/S oil pressure switch, and check the idle speed.

Idle speed should be:

Manual	$950 \pm 50 \text{min}^{-1}$ (rpm)
Automatic	$820 \pm 50 \text{min}^{-1}$ (rpm) (in "D")

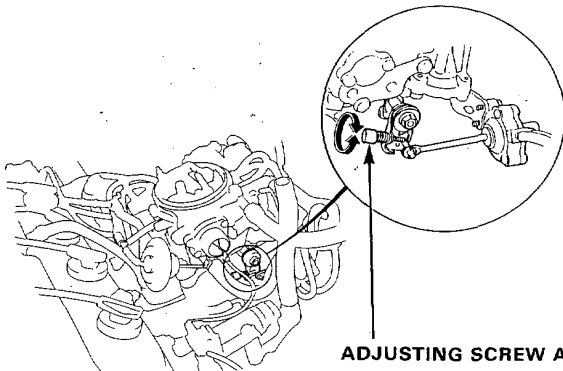


Adjust the idle speed, if necessary, by turning the adjusting screw A.

18. If equipped with air conditioner, check the idle speed with the A/C on.

Idle speed should be:

Manual	$800 \pm 50 \text{min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{min}^{-1}$ (rpm) (in "D")

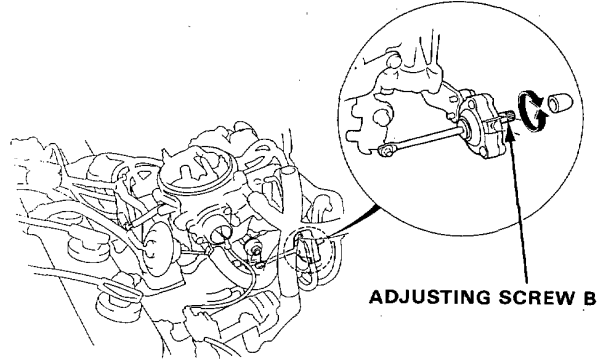

Adjust the idle speed, if necessary, by turning the adjusting screw B.




(Except KS, KG, KQ)

CO Meter Method

WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

NOTE: Check that the self-diagnosis indicator (KX) before making idle speed and mixture inspections.


1. Start the engine and warm it up to normal operating temperature (the cooling fan comes twice).
2. Connect a tachometer.

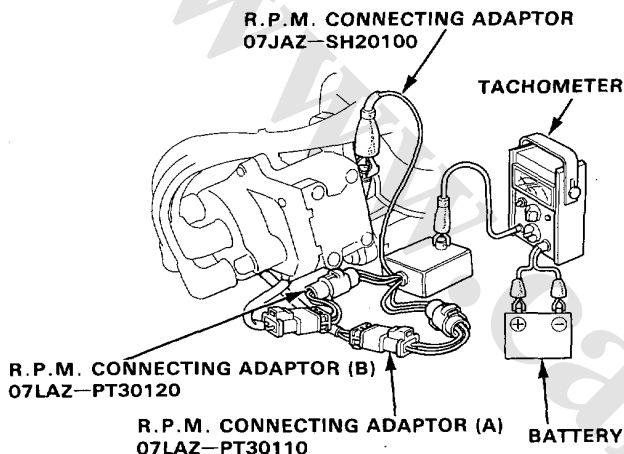

3. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000min⁻¹ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off.

Idle speed should be:

Manual	800 ± 50min ⁻¹ (rpm)
Automatic	750 ± 50min ⁻¹ (rpm)(in "D")

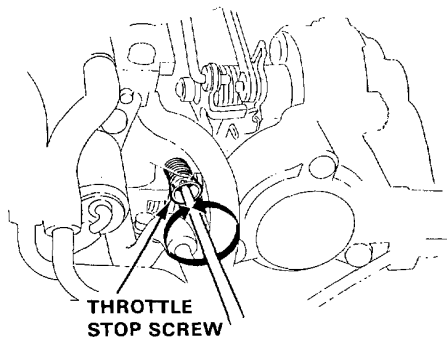

Adjust the idle speed, if necessary, by turning the throttle stop screw.

NOTE: If the idle speed is excessively high, check the throttle control system (page 6-112)

4. Calibrate the NDIR CO Meter in accordance with the manufacturer's recommended procedures. Insert exhaust gas sampling probe into the tailpipe at least 40 cm.
5. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO with cooling fan, air conditioner OFF and headlights OFF.


Specified CO%:

KX: 0.1% maximum


Except KX: 1 ± 1%

- If idle CO is as specified, go to step 14.
- If not, go to step 6 through 13.

6. KX ; Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

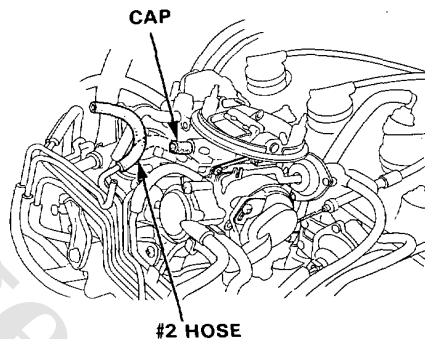

7. KX: Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

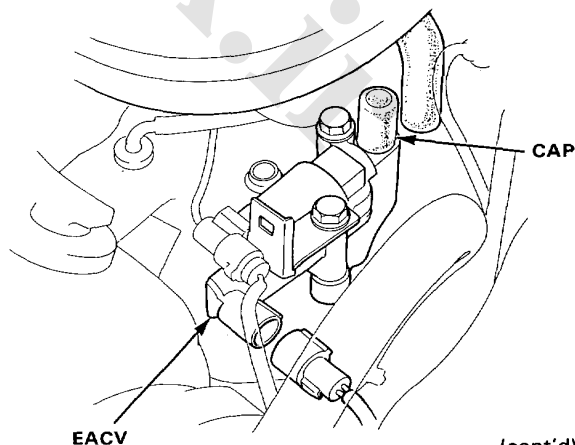


(cont'd)


Engine Tune-up

Idle Speed Inspection/Adjustment (cont'd)

8. KX:
Disconnect the wire harness from the O₂ sensor.

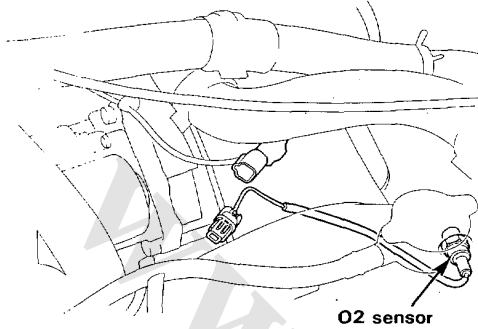

9. KX:
Remove the rubber cap from the gas pipe.

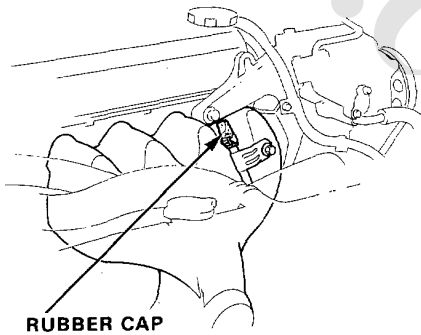


10. KX:
Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO.

Specified CO%: 2.3 ± 1.0%


- If not, specification, go to step 11.

11. Remove mixture adjusting screw hole plug and adjust by turning mixture adjusting screw to obtain proper CO reading.

(KX)

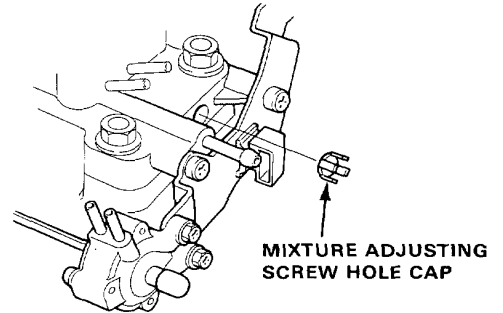

(Except KX)

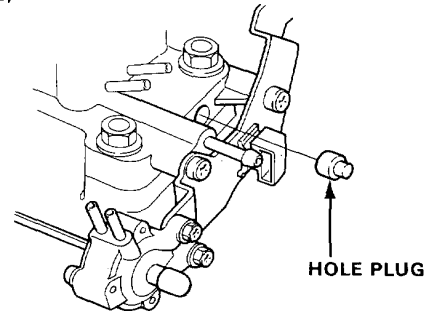

— Turning mixture adjusting screw

clockwise: CO reading decreases
counterclockwise: CO reading increases

Readjust idle speed if necessary, and recheck idle CO.

12. KX:
Reconnect the connector and hose. Remove BACK UP fuse for 10 seconds to reset control unit.

13. KX:
Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Recheck idle CO.

Specified CO%: 0.1%

- If idle CO is as specified, go to step 14.
- If not, check the self-diagnosis indicator (page 6-22). If not, inspect the EACV (page 6-104) and the catalytic converter (page 6-103), then repeat step 6.

14. Recheck idle speed.
Idle speed should be:


Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")



- If idle speed is as specified, go to step 15.
- If idle speed is not as specified, adjust by turning throttle stop screw, then repeat step 5.

- Reinstall the mixture adjusting screw hole cap.
- Disconnect the connector on the P/S oil pressure switch.
Except KX; Connect a jumper wire between the RED terminal and the BLK terminal.


P/S OIL PRESSURE SWITCH

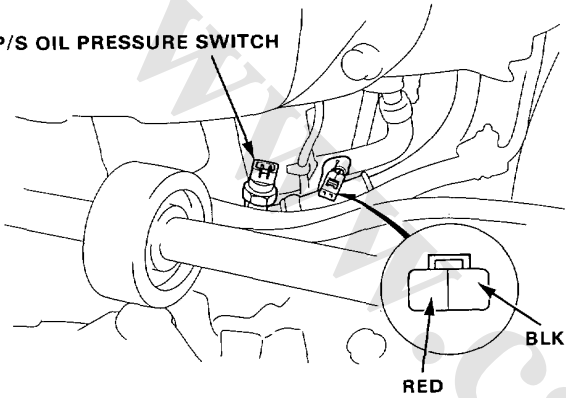

- Check the idle speed.

Idle speed should be :

Manual	950 ± 50 min ⁻¹ (rpm)
Automatic	820 ± 50 min ⁻¹ (rpm) (in "D")

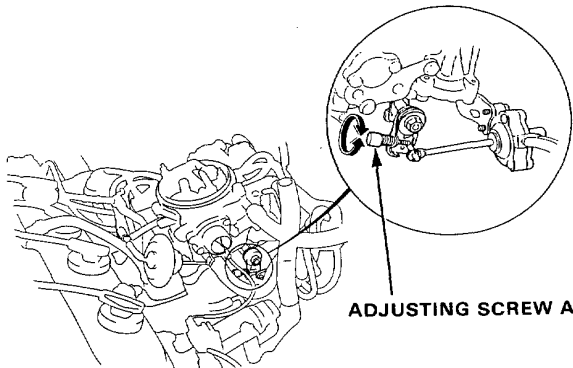


Adjust the idle speed, if necessary, by turning the adjusting screw A.

- If equipped with air conditioner, check the idle speed with the A/C on.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

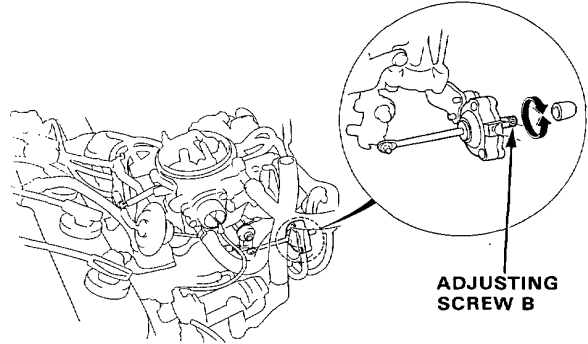

Adjust the idle speed, if necessary, by turning the adjusting screw B.

(cont'd)


Engine Tune-up

Idle Speed Inspection/Adjustment (cont'd)


Fuel-Injected Engine:

Inspection/Adjustment

1. Start the engine and warm it up to normal operating temperature (the cooling fan comes on).
2. Connect a tachometer.

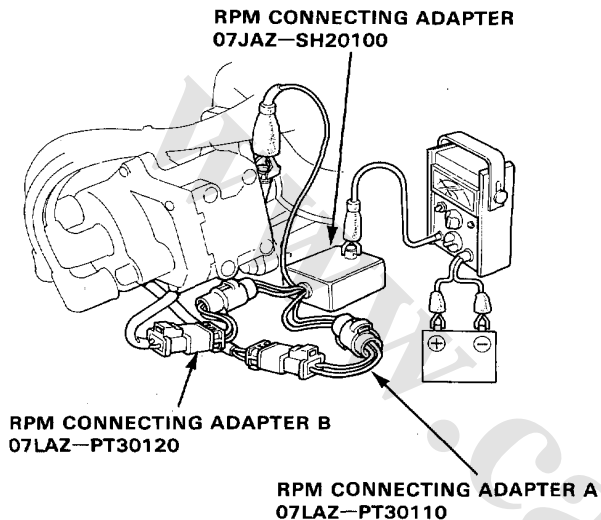

3. Disconnect the 2P connector from the EACV.

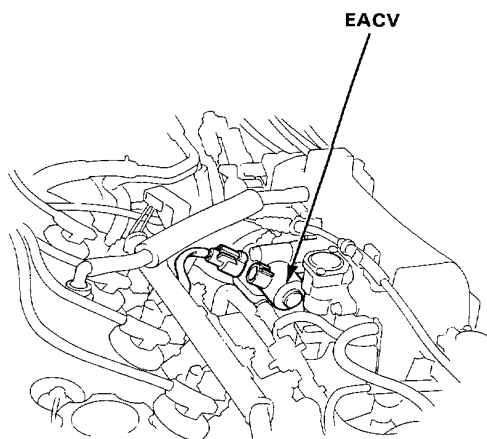

4. Check idling in no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating.

Idle speed should be:


(Except KS, KW)

Manual	600 ± 50 min ⁻¹ (rpm)
Automatic	600 ± 50 min ⁻¹ (rpm) (in or)

(KS, KW)

Manual	550 ± 50 min ⁻¹ (rpm)
Automatic	550 ± 50 min ⁻¹ (in or)

Adjust the idle speed, if necessary, by turning the idle adjusting screw.

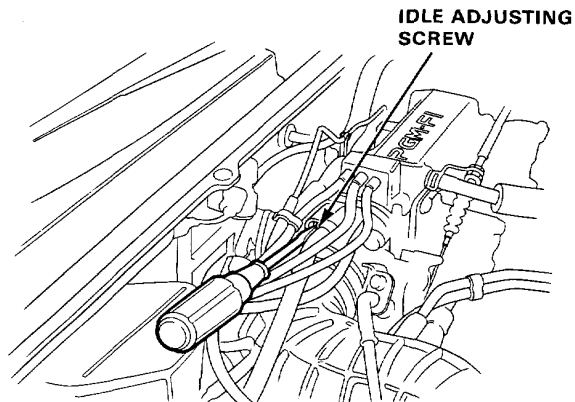

5. Turn the ignition switch OFF.
6. reconnect the 2P connector on the EACV, then remove BACK UP fuse in the underhood relay box for 10 seconds to reset ECU.
7. Restart an idle the engine with no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating for one minute, then check the idle speed.

Idle speed should be:

Manual	700 ± 50 min ⁻¹ (rpm)
Automatic	700 ± 50 min ⁻¹ (rpm)

8. Idle the engine for one minute with headlights (Hi) and rear defogger ON and check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm)

9. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm)

NOTE: If the idle speed is not within specifications, see System Troubleshooting Guide on page 6-192.



Tailpipe Emissions Inspection

Carbureted Engine:

Inspection

NOTE: It is not possible to use a CO meter to adjust the idle mixture; the effect of the catalytic converter prevents accurate tracking of such small changes in air-fuel ratio.

▲WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. KX, KS, KG, KQ:
Check the idle speed/mixture using the propane enrichment method.
2. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
3. Start the engine and warm it up to normal operating temperature (the cooling fan comes on twice).
4. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes.
And hold engine at $2,500-3,000 \text{ min}^{-1}$ (rpm) for 1 minute.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO %:

KX, KS, KG, KQ: 0.1% maximum

Except KX, KS, KG, KQ: $1.0 \pm 1.0\%$

Fuel-Injected Engine:

Inspection

▲WARNING Do not smoke during this procedure. Keep any open flame away from your work area.


1. Start the engine and warm up to normal operating temperature (cooling fan comes on).
2. Connect tachometer.
3. Check idle speed and adjust the idle speed, if necessary (page 6-207)
4. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO%:

With CATA: 0.1 % maximum

Without CATA: $1.0 \pm 1.0 \%$

- If unable to obtain this reading :
On With CATA, see ECU troubleshooting guide (page 6-144).
On other models, adjust by turning the adjusting screw of the IMA sensor.

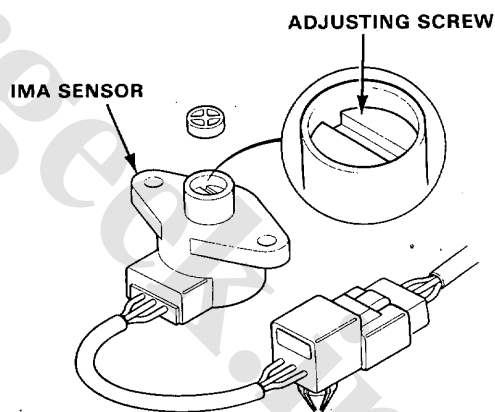

- If unable to obtain a CO reading of specified % by this procedure, check the engine tune-up condition.

Engine Tune-up


Ignition Timing Inspection and Setting

Fuel-Injected Engine:


<KG, KS, KX and KQ models>

NOTE: To be made at idle with the service check connector shorted, the blue service check connector is located in the far passenger corner under the dashboard.

1. Start the engine and allow it to warm up (cooling fan comes on).
2. Connect the ORN/RED and GRN/WHT terminals of the service check connector (BLU) with a jumper wire.

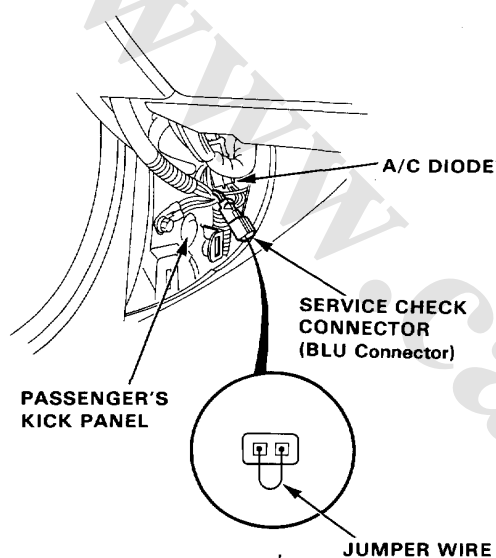

3. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

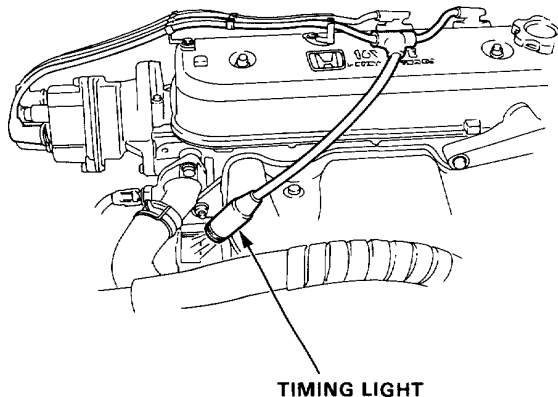


4. Adjust ignition timing, if necessary, to the following specifications:


Ignition Timing

- All models: $15 \pm 2^\circ$ BTDC (RED) at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral

NOTE: The illustration shows A/T.

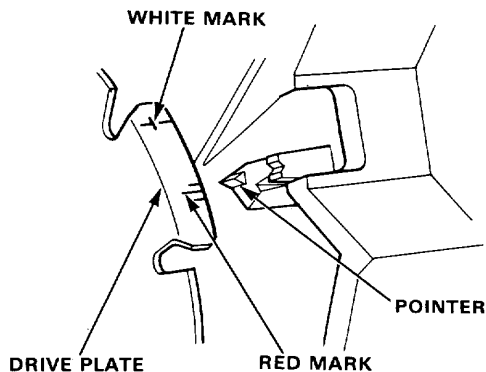

5. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing counter-clockwise to advance the timing, or clockwise to retard the timing.

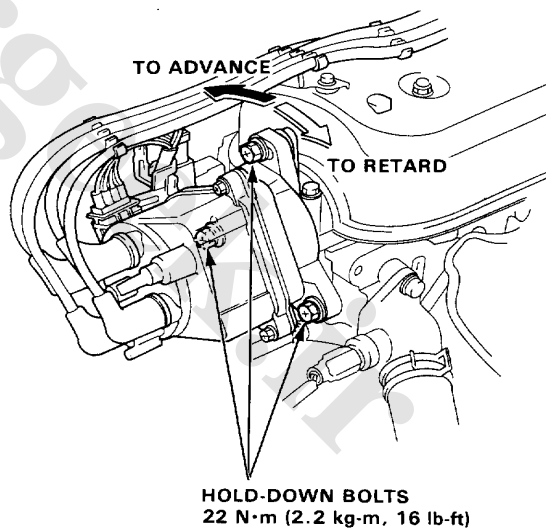


6. Tighten the adjusting bolts and recheck the timing.
7. Remove the jumper wire and install the rubber caps to the inspection window.



<Except KG, KS, KX and KQ models>

1. Start the engine and allow it to warm up (cooling fan comes on).
2. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

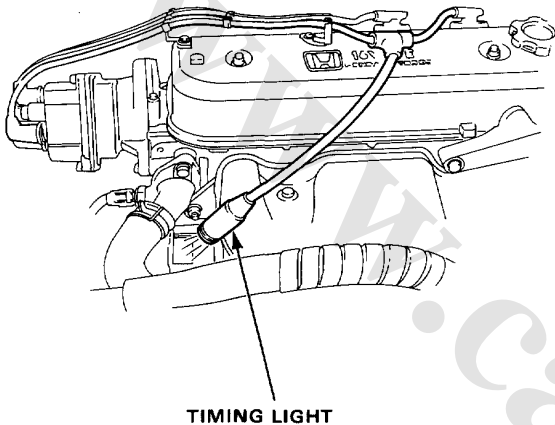


3. Inspection ignition timing at idle.

Ignition Timing:

$15 \pm 2^\circ$ BTDC (RED) at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral

NOTE: The illustration shows A/T.

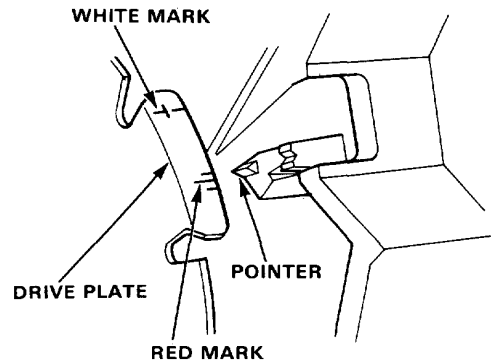


4. Adjust ignition timing, if necessary, by turning the adjusting screw on the ignition timing adjuster in the control box.

(cont'd)


Engine Tune-up

Ignition Timing Inspection and Setting (cont'd)

5. Remove the cap from the ignition timing adjuster.

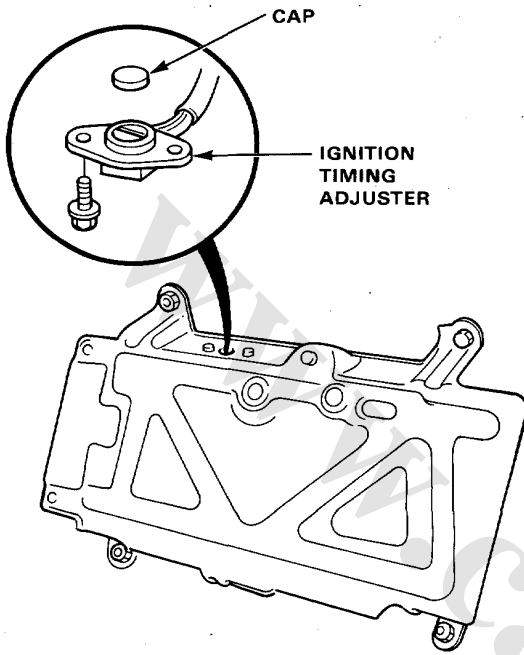

6. Adjust as necessary by turning the adjusting screw on the adjuster; turn the adjusting screw counterclockwise to retard the timing, or clockwise to advance the timing.

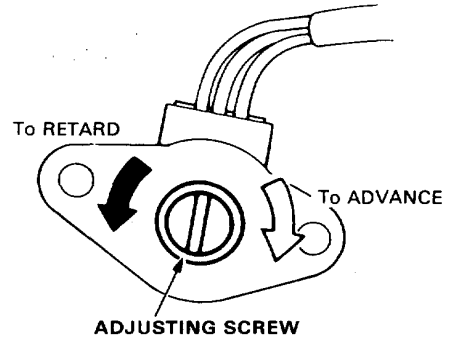


7. After adjusting, reinstall the cap to the ignition timing adjuster.



Carbureted Engine:

<KP, KT, KU and KY (A/T) models>

1. Disconnect the vacuum hose from the vacuum advance diaphragm, then connect the vacuum pump/gauge to the vacuum hose.

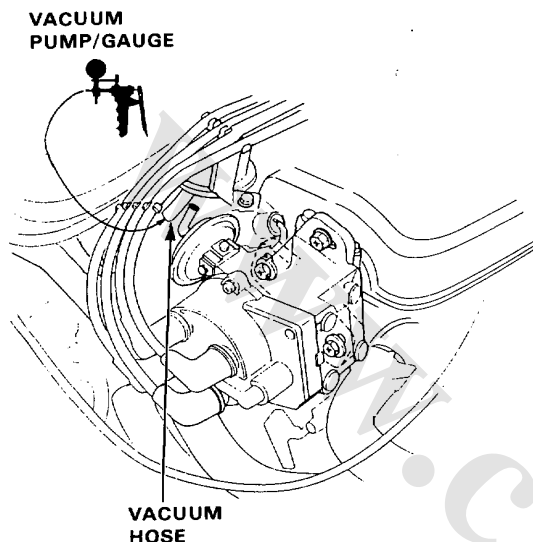


2. Start the engine.

KP and KT models: Let it idle.

KY (A/T) model: Hold the engine at 4,000 min^{-1} (rpm).

3. Check the vacuum hose for vacuum. The vacuum hose should have vacuum.
 - If the vacuum hose has no vacuum, check the vacuum hose of proper connection, cracks, blockage or disconnected hose.
4. Connect the vacuum hose to the vacuum advance diaphragm and allow the engine to warm up (cooling fan comes on).
5. Disconnect the vacuum hose from the vacuum advance diaphragm and plug them.

6. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

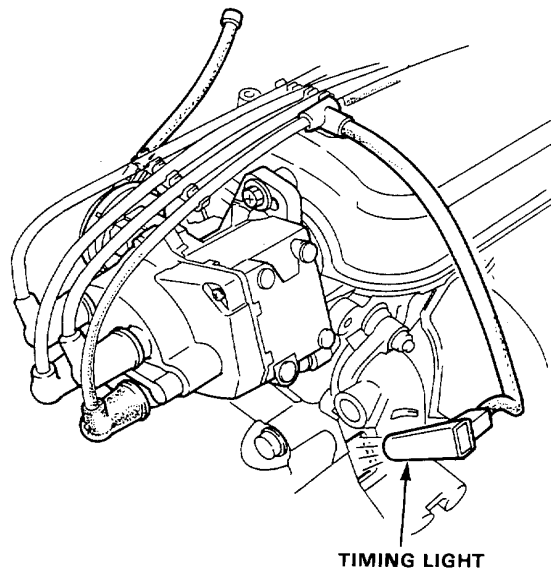


7. Read initial timing when timing mark (white) is aligned to the pointer.

Initial Timing: 0° TDC

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

NOTE: The illustration shows A/T.

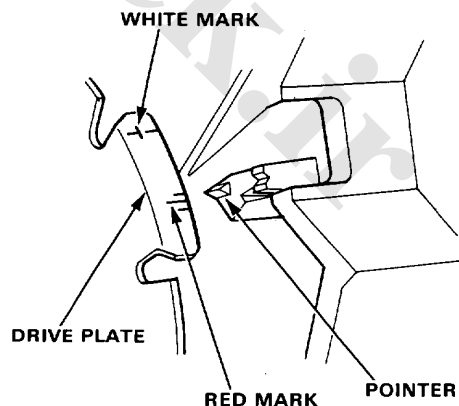


(cont'd)

Engine Tune-up

Ignition Timing Inspection and Setting (cont'd)

8. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing clockwise to retard the timing, or counterclockwise to advance the timing.

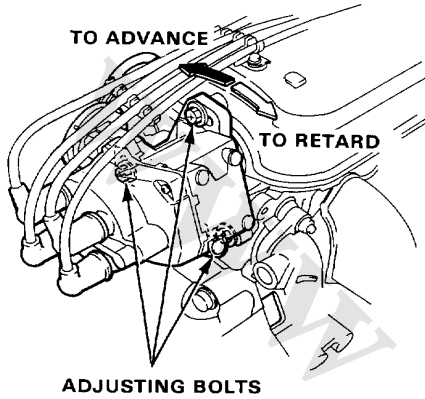

9. Tighten the distributor adjusting bolts, then recheck the timing.

10. Connect the vacuum hose to the vacuum advance diaphragm and inspect ignition timing at idle.

Ignition Timing

M/T: $15^{\circ} \pm 2^{\circ}$ BTDC (Red)

A/T: $10^{\circ} \pm 2^{\circ}$ BTDC (Red)


- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

If advance is not as specified, check the vacuum advance diaphragm and distributor advance mechanism.




<KP, KT and KY (A/T) models>

1. Disconnect the vacuum hoses from the vacuum advance diaphragm, then connect the vacuum pump/gauges to the vacuum hoses.

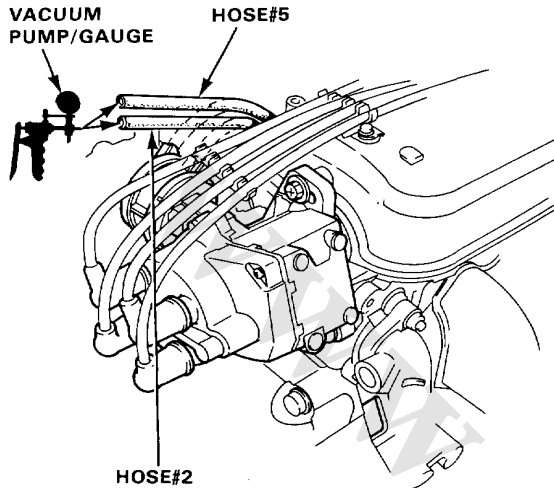

2. Start the engine and let it idle.
3. When the engine is cool, coolant temperature is below 55°C (131°F). Check each hose for vacuum. The #2 and #5 hoses should have vacuum.
 - If the #2 hose has no vacuum, check the #2 hose of proper connection, cracks, blockage or disconnected hose.
 - If the #5 hose has no vacuum, check the #5 and connected hoses for proper connections, cracks, blockage or disconnected hoses, and the check valve is not clogged. If the #5 and connected hoses, and the check valve have no problem, recheck the #5 hose for vacuum.

4. Connect the vacuum hoses to the vacuum advance diaphragm and allow the engine to warm up. (cooling fan comes on).
5. Disconnect the #5 hose from the vacuum advance diaphragm and connect the vacuum pump/gauge to the #5 hose.
6. Check the #5 hose for vacuum. The #5 hose should have no vacuum.
7. Disconnect the vacuum hoses from the vacuum advance diaphragm and plug them.
8. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

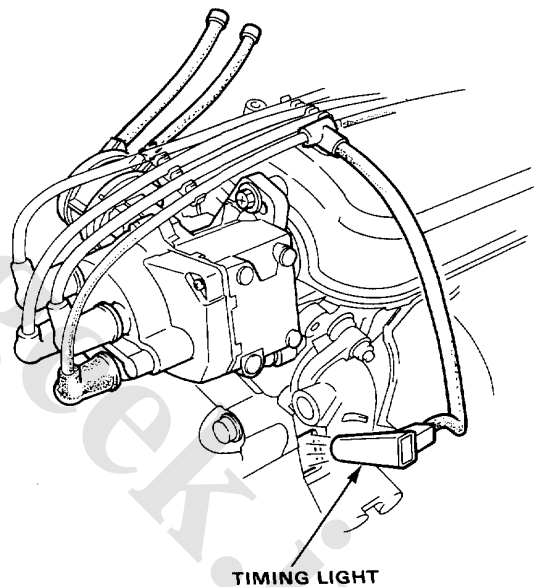

(cont'd)

Engine Tune-up

Ignition Timing Inspection and Setting (cont'd)


9. Read initial timing when timing mark (white) is aligned to the pointer.

Initial Timing


All models: 0° BTDC

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

NOTE: The illustration shows A/T.

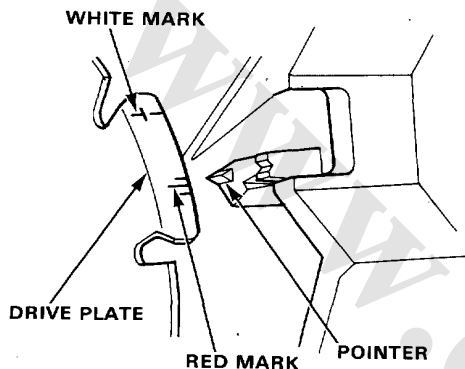

10. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing clockwise to retard the timing, or counterclockwise to advance the timing.

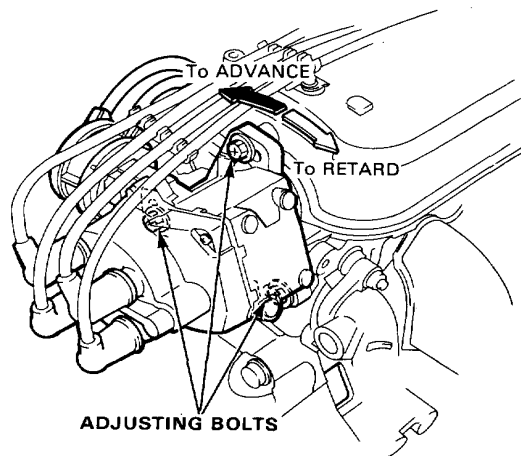

11. Tighten the distributor adjusting bolts, then recheck the timing.

Connect the vacuum hose to the vacuum advance diaphragm and inspect ignition timing at idle.

Ignition Timing

M/T: $15^\circ \pm 2^\circ$ BTDC

A/T: $10^\circ \pm 2^\circ$ BTDC (Except KQ, KX, KS and KG models)

$15^\circ \pm 2^\circ$ BTDC (KQ, KX, KS and KG models)

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

If advance is not as specified, check the vacuum advance diaphragm and distributor advance mechanism.

Special Tools
Illustrated Index
Timing Belt Inspection
Timing Belt Tension Adjustment
Timing Balancer Belt Inspection
Timing Balancer Belt Tension
Adjustment
Replacement
Positioning Timing Belt

www.cargeek.ir


Special Tools

Special Tools (Common with Other Models)

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07JAB-0010000	Crank Pulley Holder Set	1	for crankshaft pulley bolt
①-1	07JAA-0010200	Socket Wrench 19 mm	(1)	
①-2	07JAB-0010200	Handle	(1)	
②	07JAB-0010400	Pulley Holder Attachment HEX 50 mm	1	
③	07LAG-PT20100	Balancer Shaft Lock Pin	1	




①-1



①-2



②



③




Timing Belt

Illustrated Index

NOTE:

- Refer to page 5-39 for positioning crank and pulley before installing timing belt.
- Before removing, mark direction of rotation.

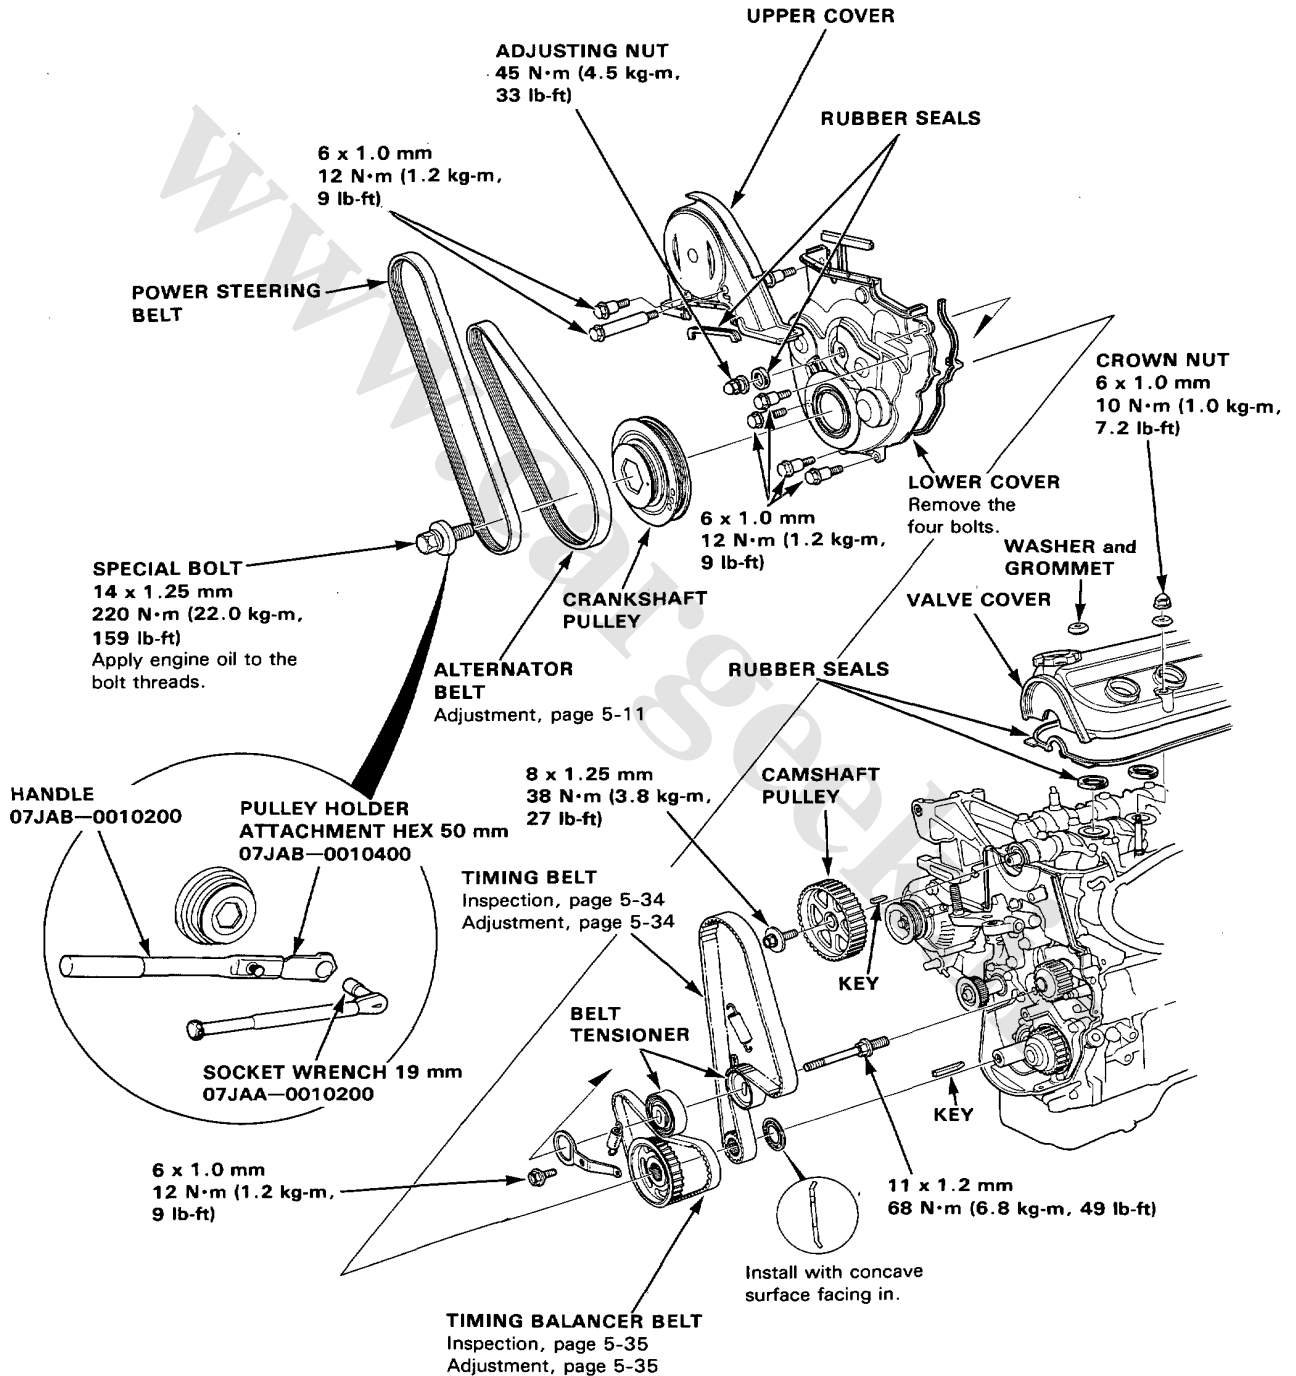


Timing Belt

Inspection

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the valve cover.
2. Remove the valve cover.
3. Remove the timing belt upper cover.
4. Inspect the timing belt for cracks and oil soaking.

NOTE:

 - Replace the belt if oil soaked.
 - Remove any oil or solvent that gets on the belt.

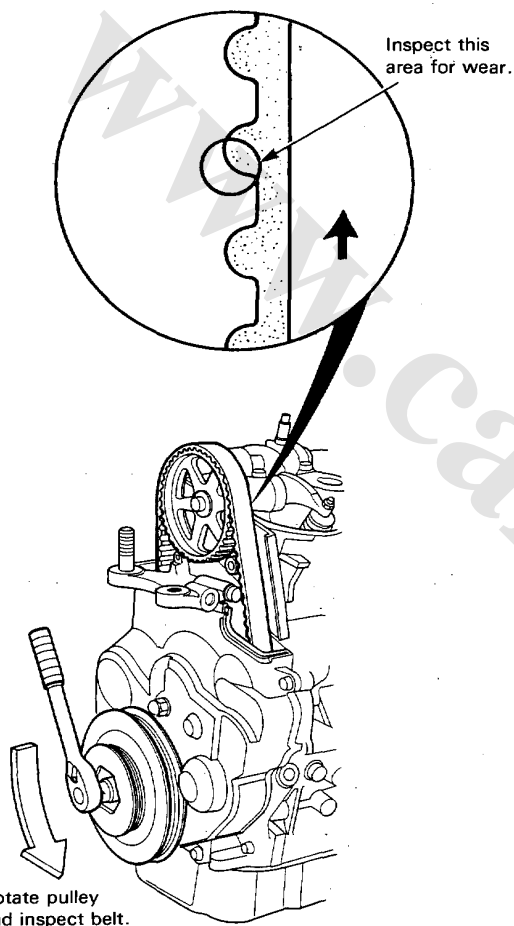

5. If the pulley bolt loosens while turning the crank, retorque it to 220 N·m (22.0 kg-m, 159 lb-ft).

Tension Adjustment


CAUTION: Always adjust timing belt tension with the engine cold.

NOTE:

- Tensioner is spring-loaded to apply proper tension to the belt automatically after making the following adjustment.
- Inspect the timing balancer belt before belt tension adjusting.
- Do not loosen the adjusting nut more than one full turn.

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the valve cover.
2. Remove the valve cover.
3. Set the No.1 piston at TDC (page 5-41).
4. Loosen the adjusting nut 2/3-1 turn, then tighten the adjusting nut.

ADJUSTING NUT
45 N·m
(4.5 kg-m, 33 lb-ft)

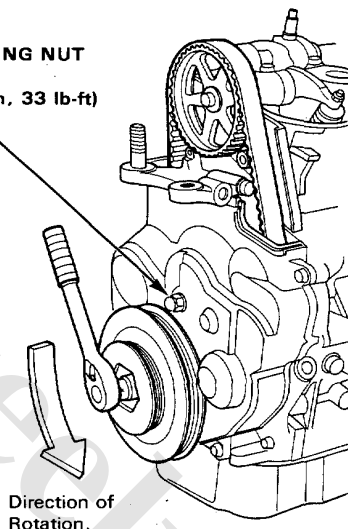

5. Rotate the crankshaft counterclockwise 3-teeth on the camshaft pulley, then loosen the adjusting nut to create tension on the timing belt.
6. Tighten the adjusting nut.
7. If the pulley bolt loosens while turning the crank, retorque it to 220 N·m (22.0 kg-m, 159 lb-ft).




Timing Balancer Belt

Inspection

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the valve cover.
2. Remove the valve cover.
3. Remove the timing belt upper cover.
4. Remove the crankshaft pulley.
5. Remove the timing belt lower cover.
6. Install the crankshaft pulley.
7. Inspect the timing balancer belt for cracks and oil soaking.

NOTE:

- Replace the belt if oil soaked.
- Remove any oil or solvent that gets on the belt.

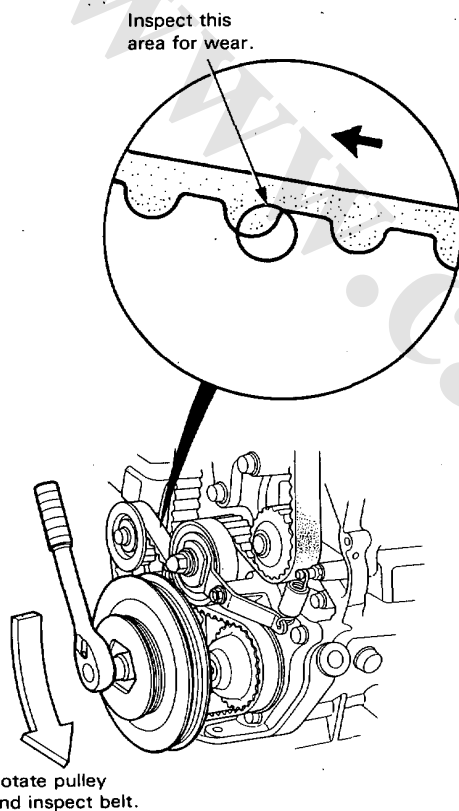

8. If the pulley bolt loosens while turning the crank, retorque it to 220 N·m (22.0 kg-m, 159 lb-ft).

Tension Adjustment


CAUTION: Always adjust timing belt tension with the engine cold.

NOTE:

- Tensioner is spring-loaded to apply proper tension to the belt automatically after making the following adjustment.
- Inspect the timing balancer belt before belt tension adjusting.
- Do not loosen the adjusting nut more than one full turn.

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the valve cover.
2. Remove the valve cover.
3. Set the No.1 piston at TDC (page 5-41).
4. Loosen the adjusting nut 2/3-1 turn, then tighten the adjusting nut.

ADJUSTING NUT
45 N·m
(4.5 kg-m, 33 lb-ft)

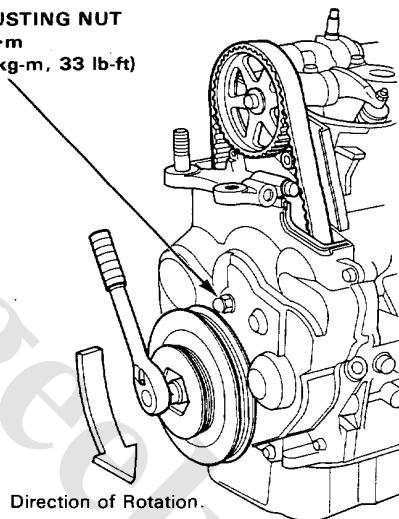


5. Rotate the crankshaft counterclockwise 3-teeth on the camshaft pulley, then reloosen the adjusting nut to create tension on the timing belt.
6. Tighten the adjusting nut.
7. If the pulley bolt loosens while turning the crank, retorque it to 220 N·m (22.0 kg-m, 159 lb-ft).

Timing Belt and Timing Balancer Belt

Replacement

NOTE:


- Turn the crankshaft so that the No. 1 cylinder is at TDC.
- Inspect the water pump after removing the timing belt.

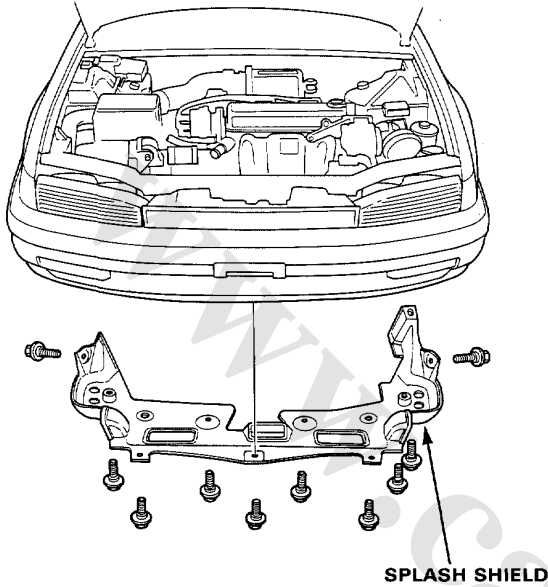


2. Disconnect the connector, then remove the cruise control actuator.

NOTE:


- Do not disconnect the control cable.
- Take care not to bend the cable when removing the actuator. Always replace a kinked cable with a new one.

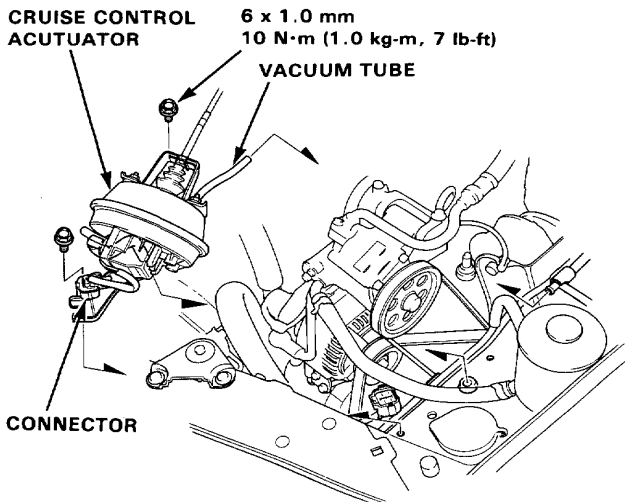

3. Remove the mounting bolt, nut and V-belt from the power steering pump, then without disconnecting the hoses, pull the pump away from the mounting bracket.

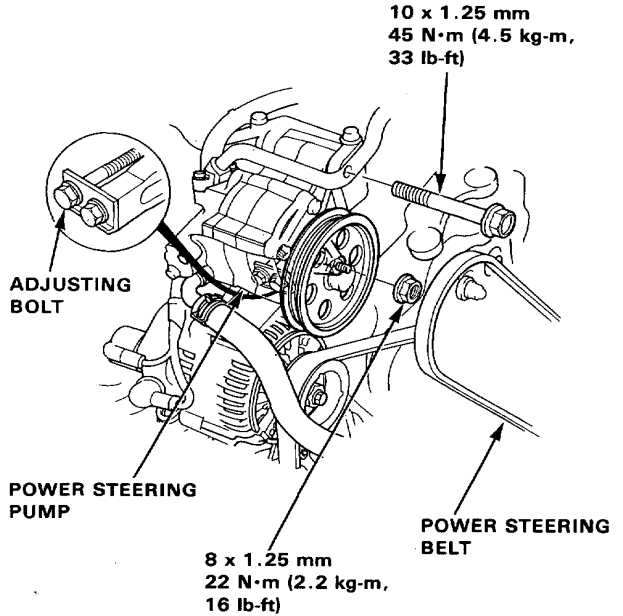


4. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the valve cover.
5. Loosen the alternator mounting bolts and the adjusting nut, then remove the alternator belt.

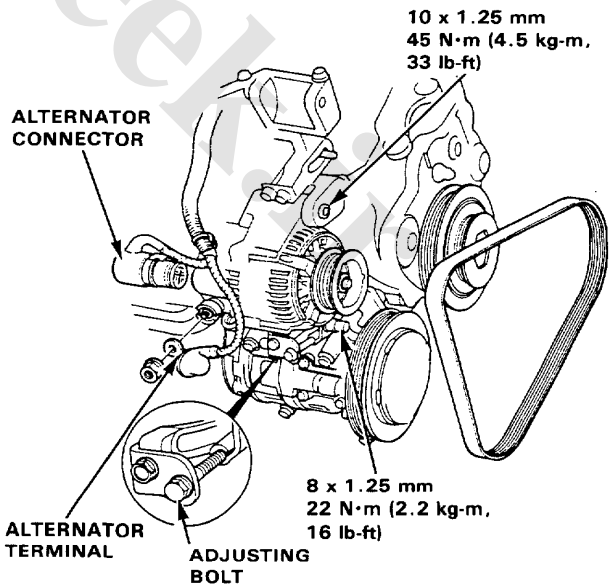



6. Remove the valve cover.
7. Remove the side engine mount bracket stay B (Standard for some types).
8. Remove the upper cover.
9. Remove the side engine mount.
10. Remove the dipstick and the pipe.
11. Remove the adjusting nut.
12. Remove the special bolt and the crankshaft pulley.
13. Remove the lower cover.
14. Push the timing balancer belt tensioner and the timing belt tensioner to remove tension of the belts, then tighten the adjusting nut.
15. Remove the timing balancer belt and the timing belt.

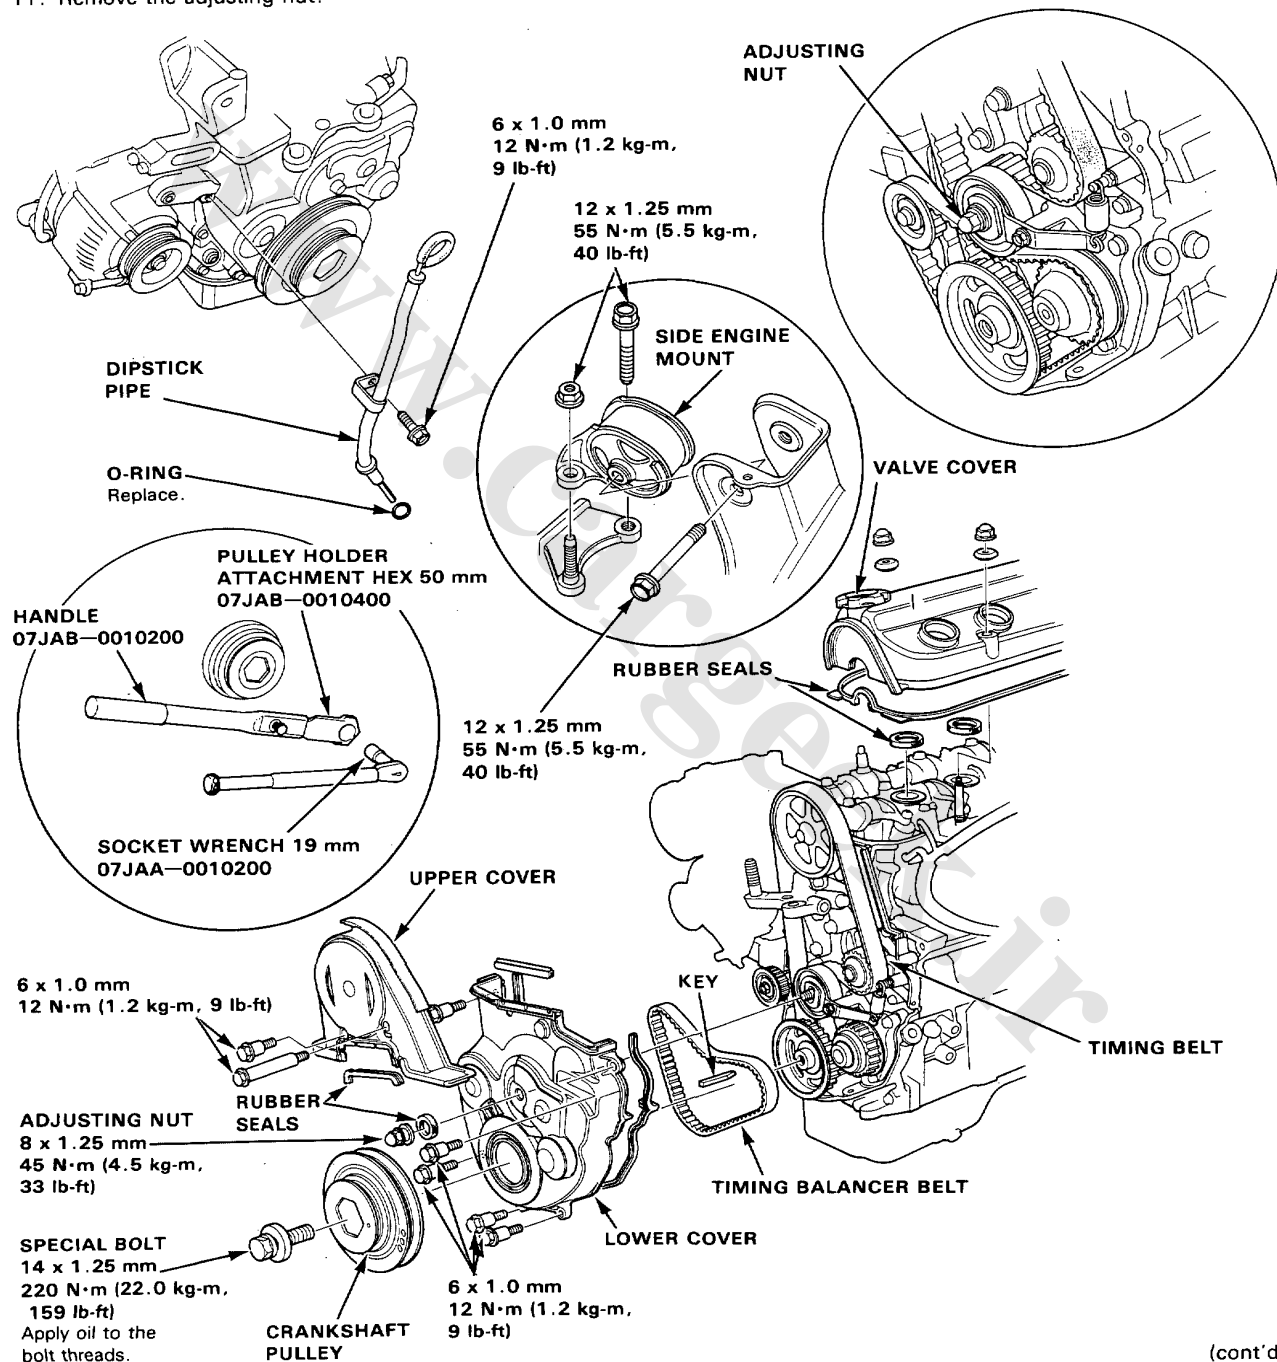


(cont'd)

Timing Belt and Timing Balancer Belt


Replacement (cont'd)

16. Install the timing belt in the reverse order of removal; adjust the valve clearances (page 5-14).
—Refer to page 5-41 for positioning the crankshaft and the camshaft pulley before installing the new timing belt.
17. Position the timing balancer belt driven pulleys before installing the new timing balancer belt as shown.
18. Install the new timing balancer belt if necessary, then remove the adjusting nut.
19. Perform the tension adjustment of the timing belt and the timing balancer belt (page 5-41).

NOTE: Align the bolt hole and the balancer shaft hole, then insert the special tool to fix the rear balancer shaft.

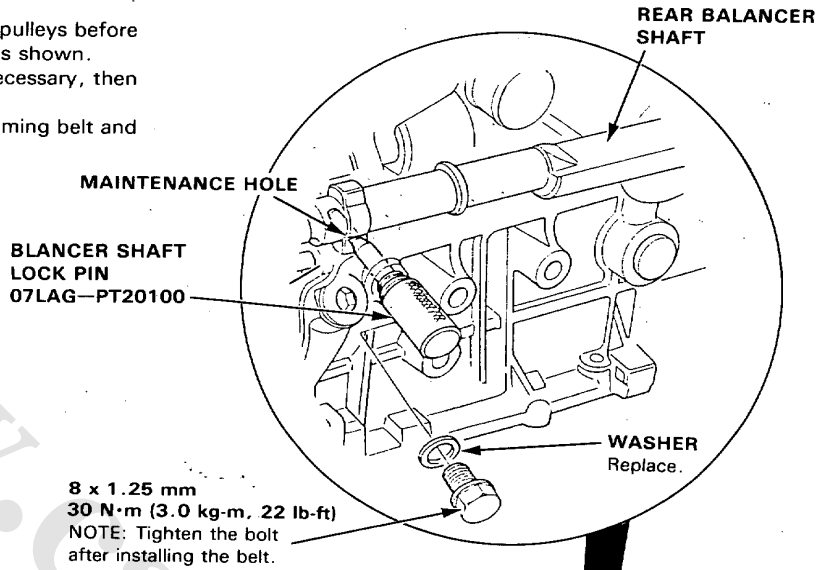

Align the groove of the front driven pulley and the pointer on the oil pump body.


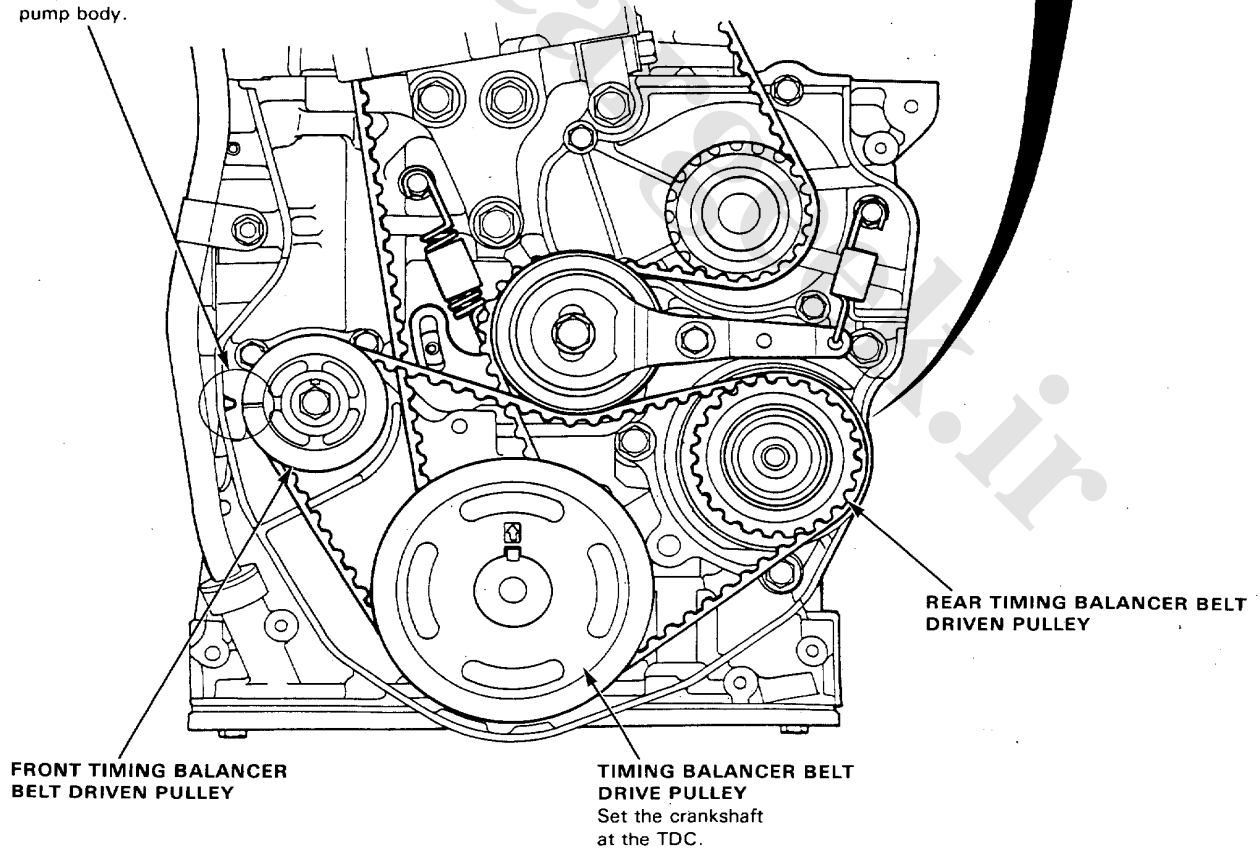


20. After adjusting the belt tension, lock the timing belt adjuster arm with the 6 x 10 mm bolt used to tighten timing belt lower cover.
21. Loosen the adjusting nut and check that the timing balancer belt adjuster moves freely.

22. Turn the crankshaft pulley about one turn; tighten the adjusting nut (adjustment is completed).

NOTE: Do not apply tension on the tensioner when tightening the adjusting nut as the tensioner is spring loaded.

CAUTION: Do not apply excessive tension to the timing balancer belt. It is designed to operate with smaller tension than those of other belts.

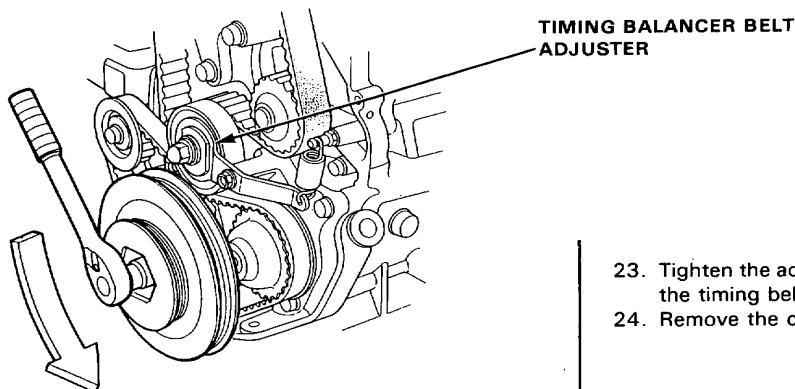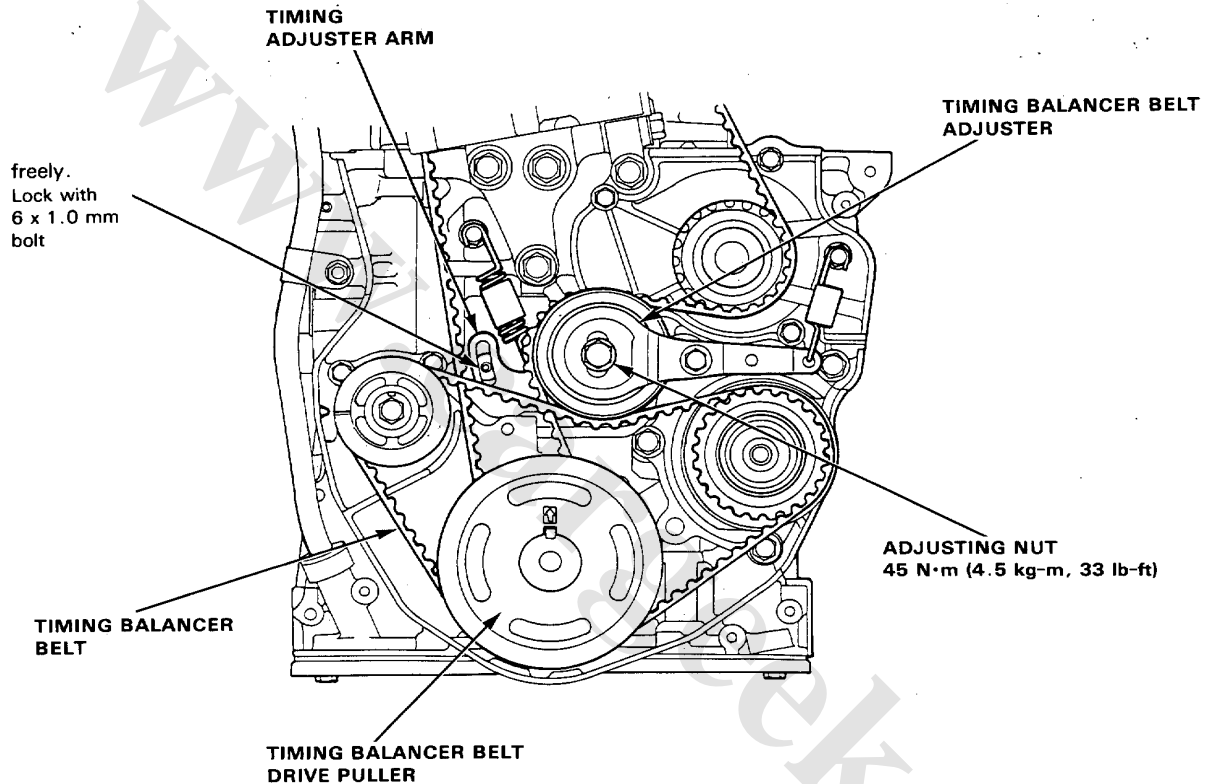

23. Tighten the adjusting nut and the 6 x 1.0 mm bolt from the timing belt adjuster arm.
24. Remove the crankshaft pulley.



(cont'd)

20. After adjusting the belt tension, lock the timing belt adjuster arm with the 6 x 10 mm bolt used to tighten timing belt lower cover.
21. Loosen the adjusting nut and check that the timing balancer belt adjuster moves freely.

22. Turn the crankshaft pulley about one turn; tighten the adjusting nut (adjustment is completed).

NOTE: Do not apply tension on the tensioner when tightening the adjusting nut as the tensioner is spring loaded.

CAUTION: Do not apply excessive tension to the timing balancer belt. It is designed to operate with smaller tension than those of other belts.

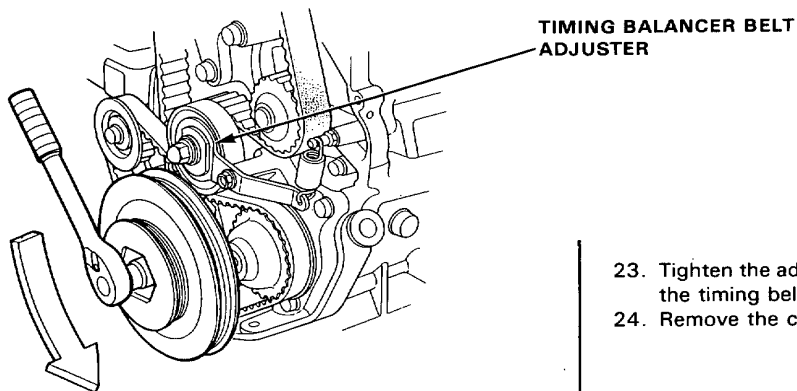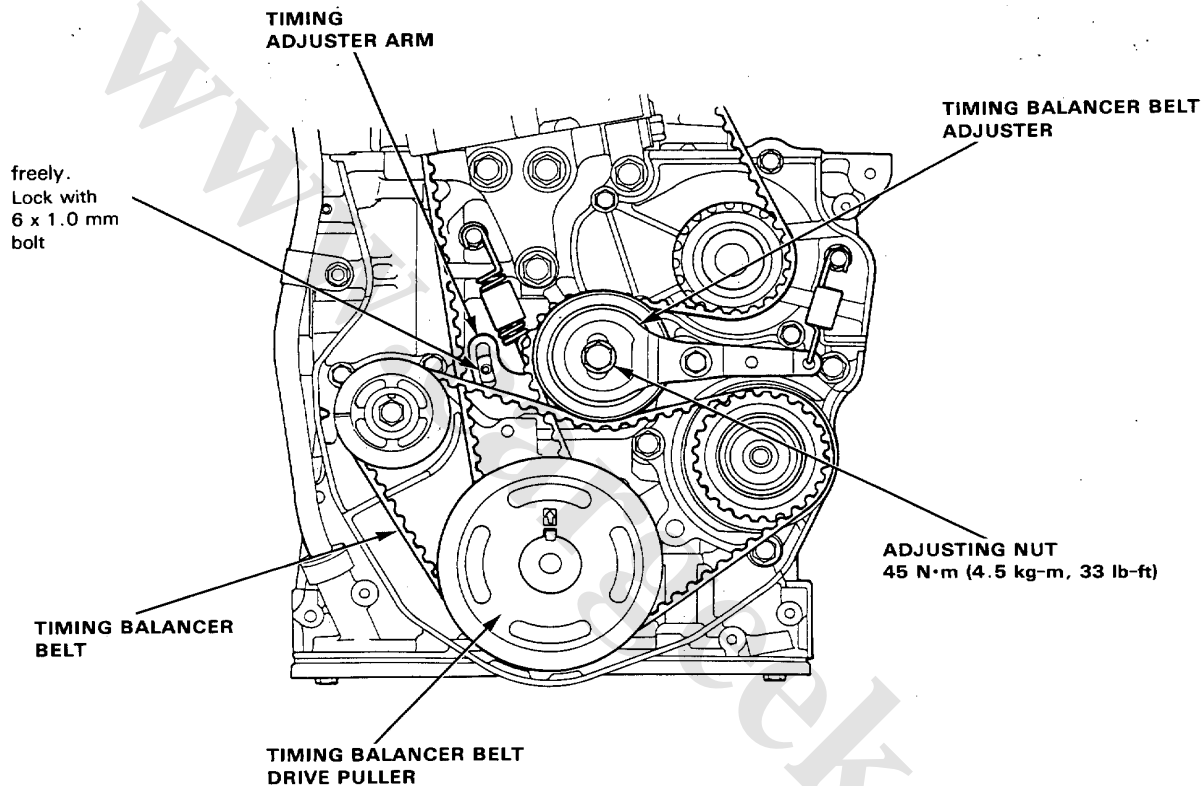

23. Tighten the adjusting nut and the 6 x 1.0 mm bolt from the timing belt adjuster arm.
24. Remove the crankshaft pulley.

(cont'd)

Removal
Installation

www.cargeek.ir


Cylinder Head

Removal

CAUTION:

- To avoid damaging the cylinder head, wait until the coolant temperature drops below 38 °C (100 °F) before removing it.
- In handling a metal gasket, care should be taken not to fold it or damage the contact surface of the gasket.

NOTE: Use new O-rings and gaskets when reassembling.

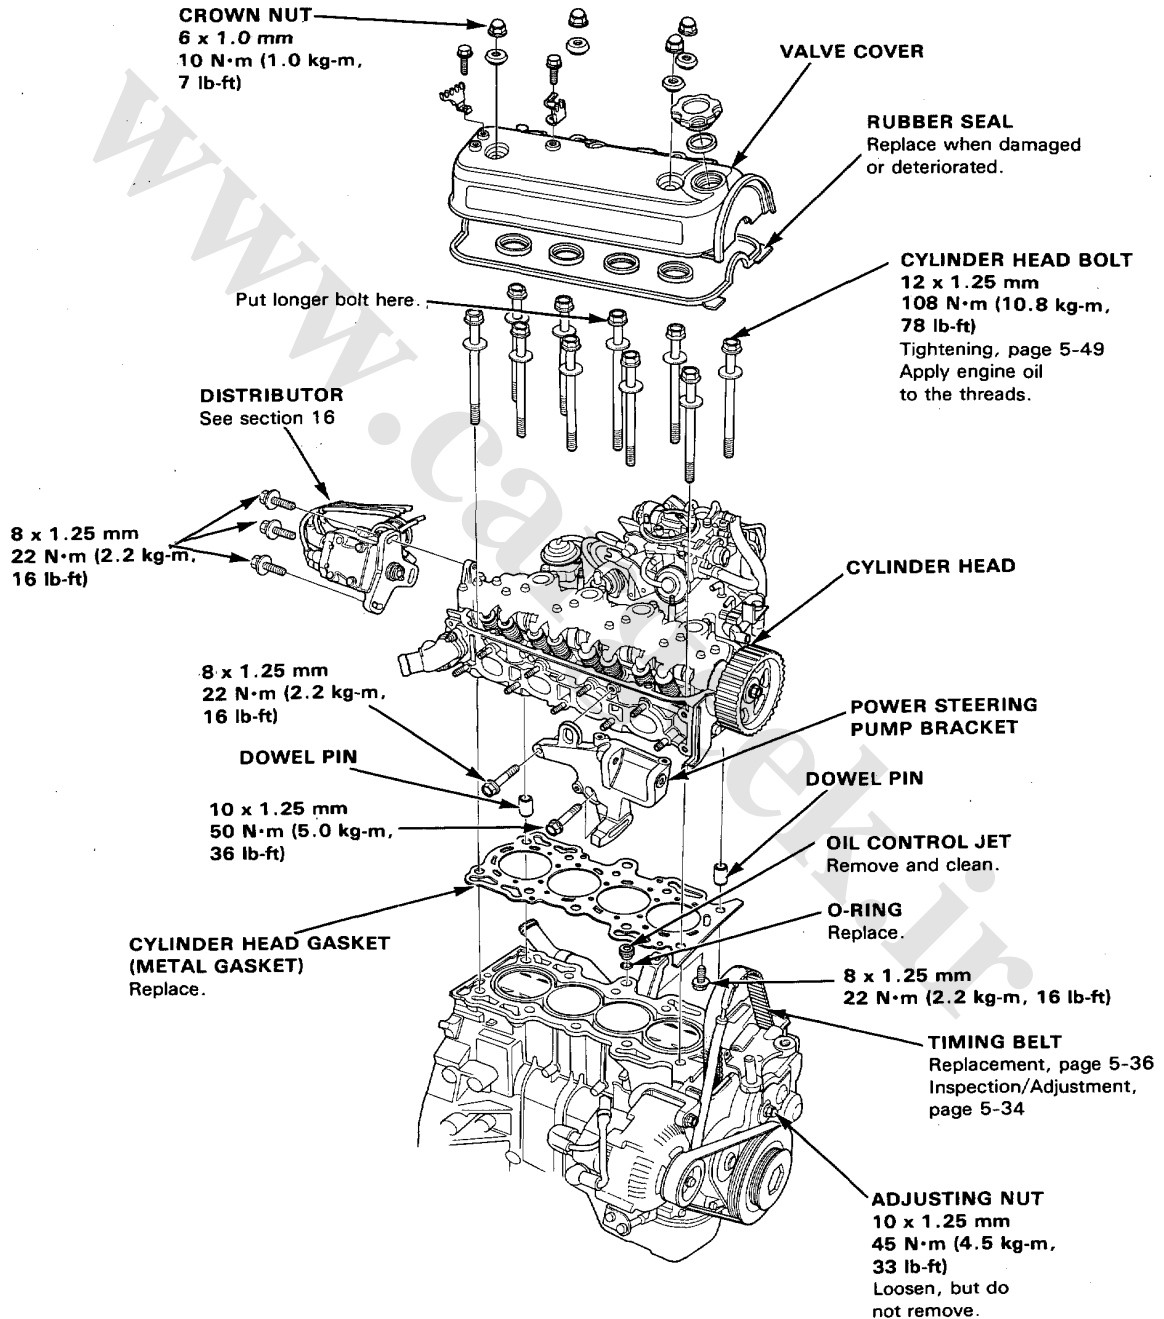



NOTE: Engine removal is not required in this procedure.
CAUTION: To avoid damaging the cylinder head, wait until the coolant temperature drops below 38 °C (100 ° F) before loosening the retaining bolts.


NOTE:

- Inspect the timing belt before removing the cylinder head.
 - Turn the crankshaft so that the No.1 cylinder is at top-dead-center (page 5-41).
 - Mark all emissions hoses before disconnecting them.
1. Disconnect the negative terminal from the battery.
 2. Drain the cooling system (page 5-69).
 3. Relieve fuel pressure (Fuel-Injected Engine).

▲WARNING Do not smoke while working on fuel system, keep open flame or spark away from work area. Drain fuel only into an approved container.

Fuel-Injected Engine:


SHOP TOWEL
 SERVICE BOLT
 15 N·m (1.5 kg·m, 11 lb-ft)

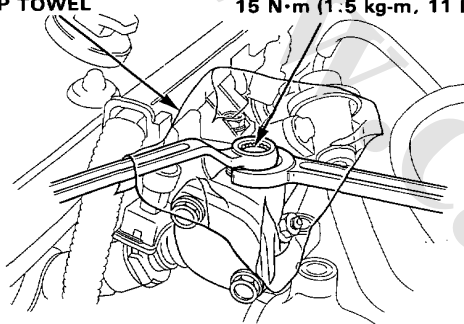

FUEL PIPE

4. Disconnect the fuel feed hose.
5. Remove the vacuum hose, breather hose and air intake duct.
6. Remove the water bypass hose from the cylinder head.
7. Remove the charcoal canister hose from the throttle body.

Fuel-Injected Engine:

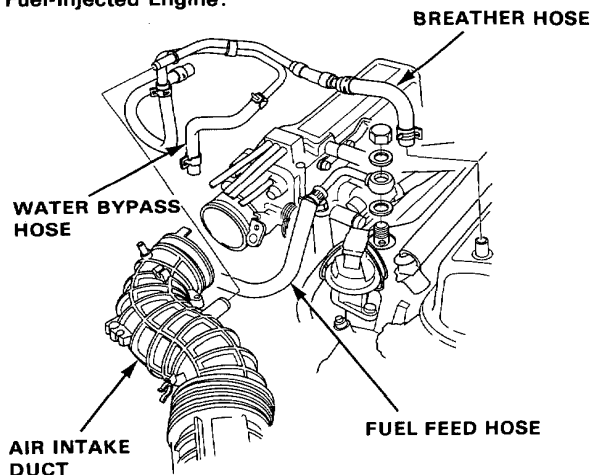

BREATHER HOSE


WATER BYPASS HOSE

AIR INTAKE DUCT

FUEL FEED HOSE

8. Remove the brake booster vacuum hose and mount vacuum tube (A/T only) from the intake manifold.
9. Remove the fuel return hose.
10. Remove the cruise control vacuum hose.

Fuel-Injected Engine:

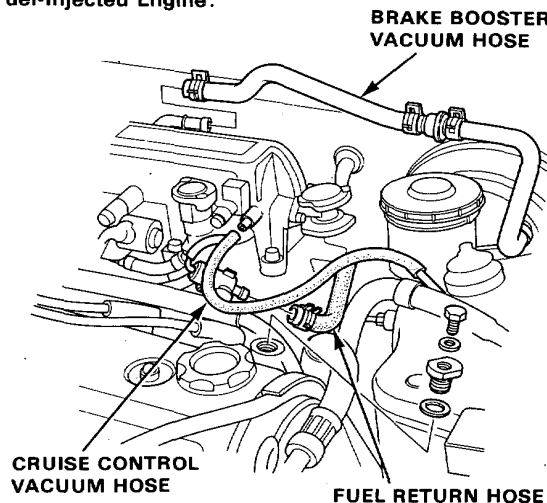

BRAKE BOOSTER VACUUM HOSE


CRUISE CONTROL VACUUM HOSE

FUEL RETURN HOSE

11. Remove the throttle cable from the throttle body (page 5-55).
12. Remove the throttle control cable at the throttle body (A/T only).

NOTE: Take care not to bend the cable when removing it. Do not use pliers to remove the cable from the linkage. Always replace a kinked cable with a new one.

Carbureted Engine:

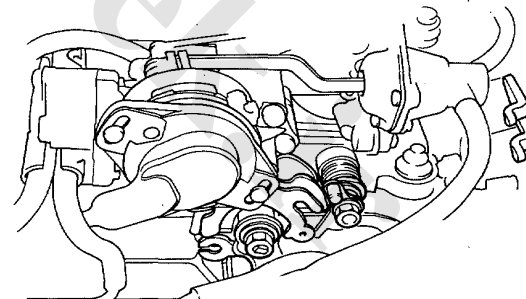

THROTTLE CONTROL CABLE (A/T only)


(cont'd)

Cylinder Head

Removal (cont'd)

Fuel-Injected Engine:


6 x 1.0 mm
12 N·m (1.2 kg-m, 9 lb-ft)

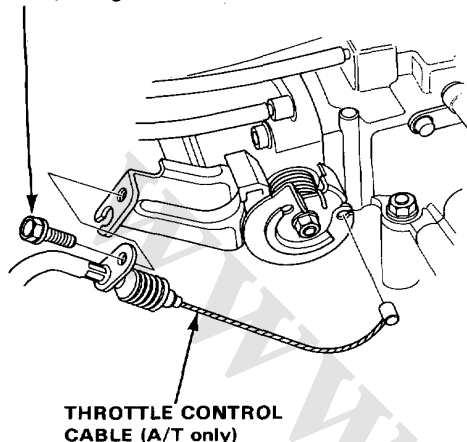


13. Disconnect the two connectors from the distributor.
 - Ignition coil connector
 - TDC/CRANK/CYL sensor connector
14. Remove the spark plug caps and distributor.
15. Remove the emission control box (page 5-55).
 - Do not disconnect emission hoses.
 - Disconnect the two connectors before removing it.
16. Remove the connector and the terminal from the alternator, then remove the engine wire harness from the valve cover.
17. Disconnect the engine wire harness connectors, then remove the harness clamps from the cylinder head and the intake manifold.
 - Four injector connectors (Fuel-Injected Engine)
 - EACV connector
 - TA sensor connector (Fuel-Injected Engine)
 - Thermostat (thermostat cover)
 - EGR valve lift sensor connector (Standard for some types)
 - Throttle angle sensor connector (Fuel-Injected Engine)
 - TW sensor connector
 - Coolant temperature gauge sending unit
 - Thermostat (water outlet cover) (Standard for some types)
 - Carburetor solenoid valve connectors (Carbureted Engine)
 - Air vent cut solenoid valve connector (Carbureted Engine except KP, KT models)

18. Remove the radiator hoses and heater hoses, then remove the heater outlet pipe bracket bolt from the intake manifold.

Carbureted Engine:

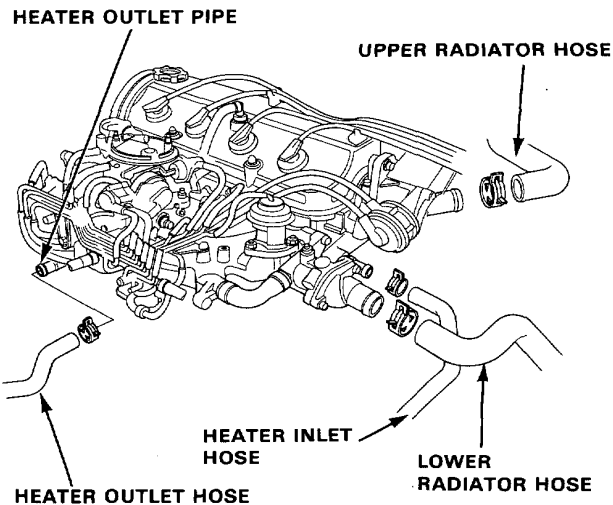


Fuel-Injected Engine:

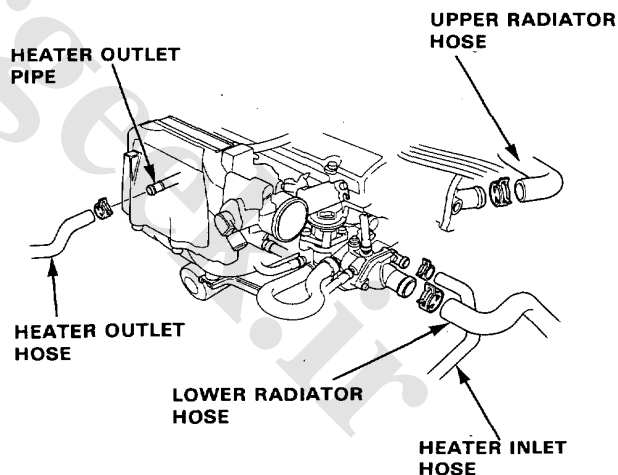




19. Remove the thermostat assembly from the intake manifold.

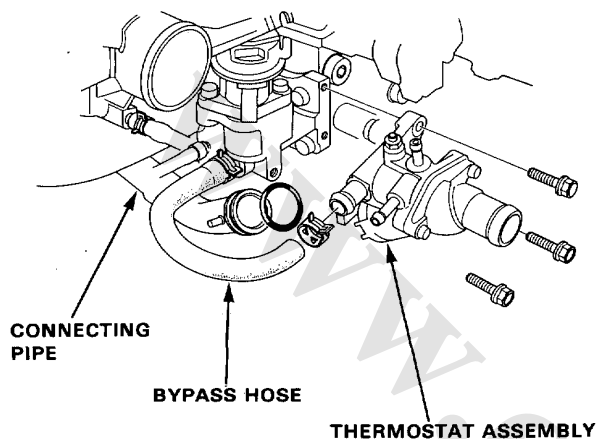


20. Disconnect the connector and the vacuum tube, then remove the cruise control actuator.

NOTE:

- Do not disconnect the control cable.
- Take care not to bend the cable when removing the actuator. Always replace a kinked cable with a new one.

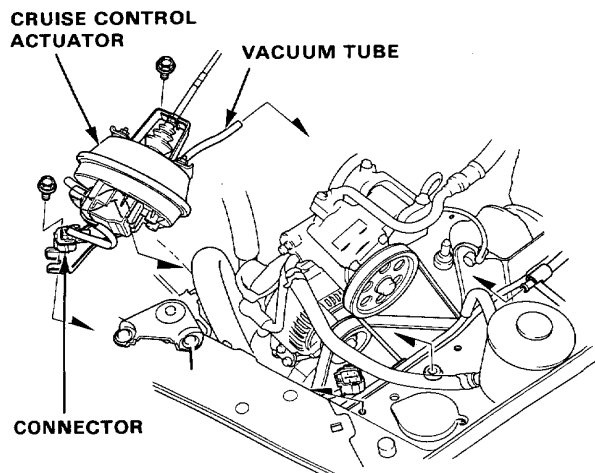

21. Remove the mounting bolts and the V-belt from the power steering pump, then without disconnecting the hoses, pull the pump away from the mounting bracket.

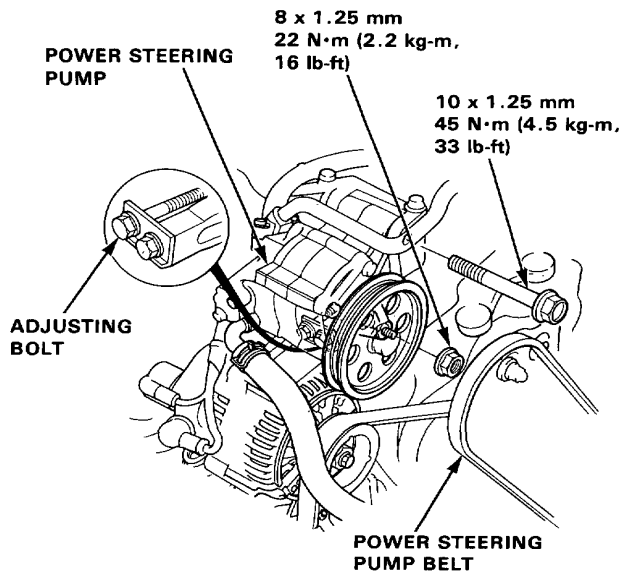

22. Lift the car up and support it on safety stands.

▲ WARNING

- Make sure jacks and safety stands are placed properly and hoist brackets are attached to correct positions on the engine (See section 1)
- Apply parking brake and block rear wheels, so the car will not roll off stands and fall while you are working under it.

23. Remove the left front wheel.
 24. Remove the splash shield (page 5-36).
 25. Remove the intake manifold bracket bolts.


(cont'd)

Cylinder Head


Removal (cont'd)

26. Remove the exhaust manifold upper shroud.
27. Remove the exhaust manifold bracket.
28. Disconnect the exhaust pipe A from the exhaust manifold.
29. Remove the exhaust manifold from the cylinder head.
30. Remove the exhaust manifold heat insulator.

except 2.2i:

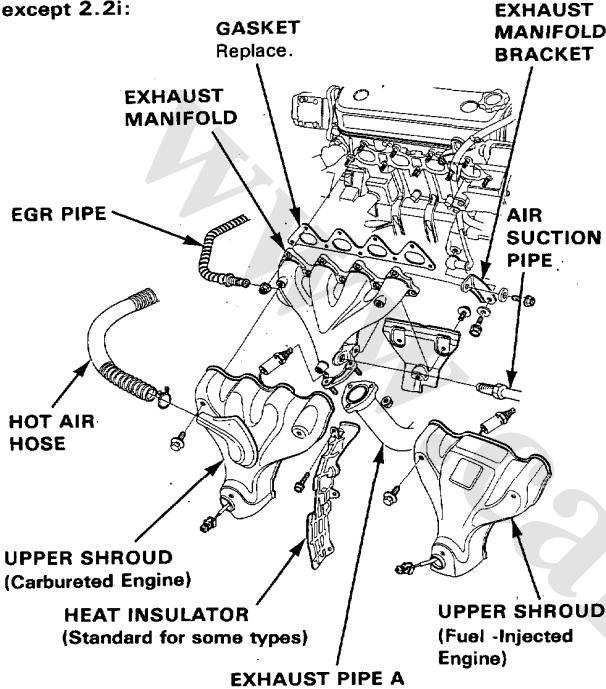


2.2i:

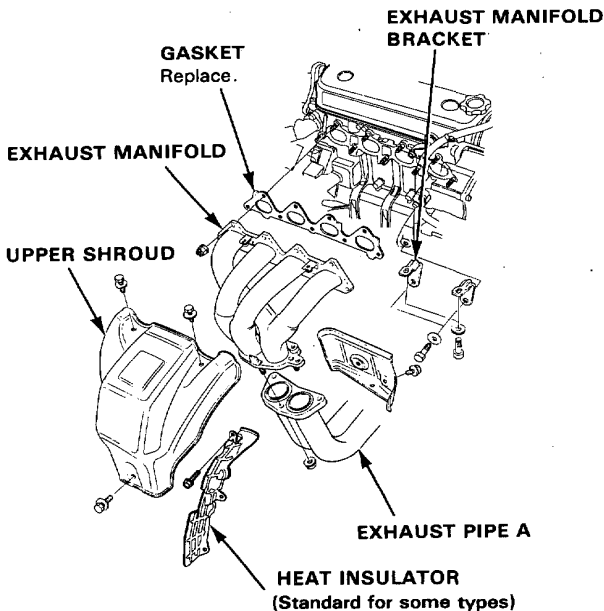


31. Remove the valve cover and engine ground wire.
32. Remove the side engine mount bracket stay, then remove the timing belt upper cover.
33. Loosen the timing belt adjusting bolt, and release the timing belt.
NOTE: Push the tensioner to release tension from the belt, then retighten the adjusting bolt.
34. Remove the timing belt from the driven pulley.

CAUTION: Do not crimp or bend the timing belt more than 90° or less than 25 mm (1 in.) in diameter.

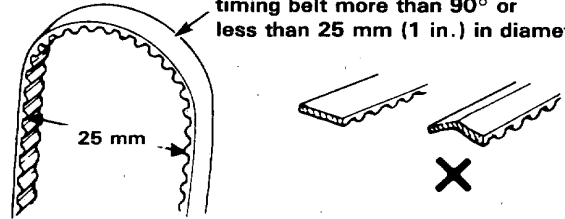


35. Remove the cylinder head bolts, then remove the cylinder head.
CAUTION: To prevent warpage, unscrew the bolts in sequence 1/3 turn at a time; repeat the sequence until all bolts are loosened.

CYLINDER HEAD BOLTS LOOSENING SEQUENCE

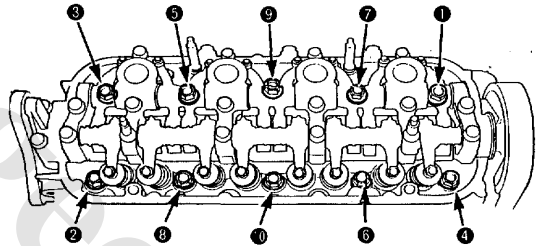


NOTE: Separate the cylinder head from the block with a flat brade screwdriver as shown.

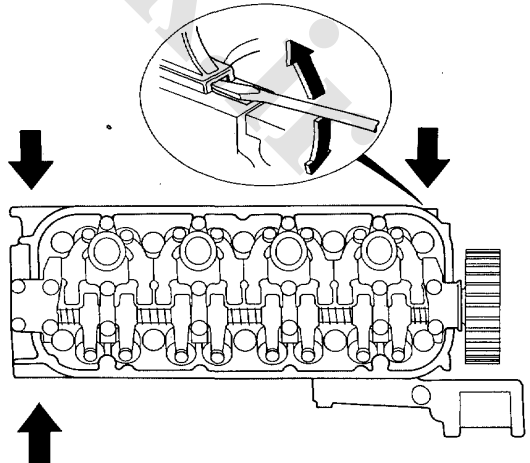




36. Remove the intake manifold.

Carbureted Engine:

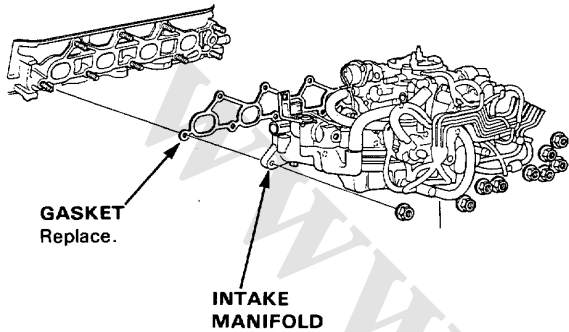

Fuel-Injected Engine:

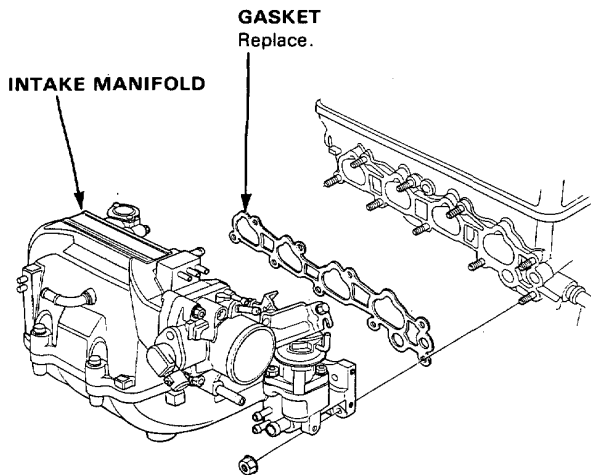


Installation


Install the cylinder head in the reverse order of removal:

- Always use a new head gasket.
 - Cylinder head and engine block surface must be clean.
 - "UP" mark on camshaft pulley should be at the top.
 - Turn the crankshaft so the No.1 cylinder is at TDC (top dead center) (page 5-41).
1. Install the intake manifold and tighten the nuts in a criss-cross pattern in 2 or 3 steps, beginning with the inner nuts.
 - Always use a new intake manifold gasket.

Carbureted Engine:

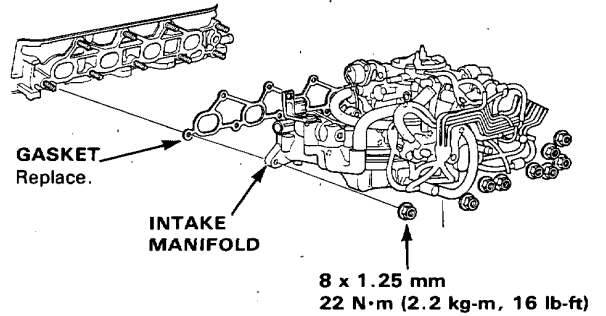

Fuel-Injected Engine:

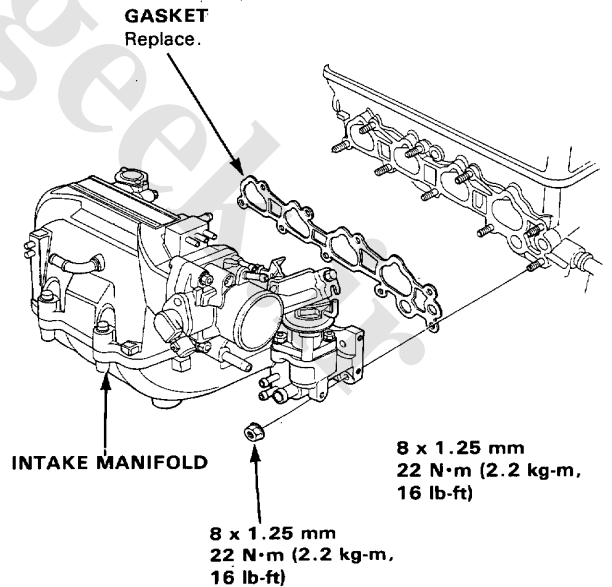


(cont'd)

Cylinder Head

Installation (cont'd)

2. Cylinder head dowel pins and oil control jet must be aligned.

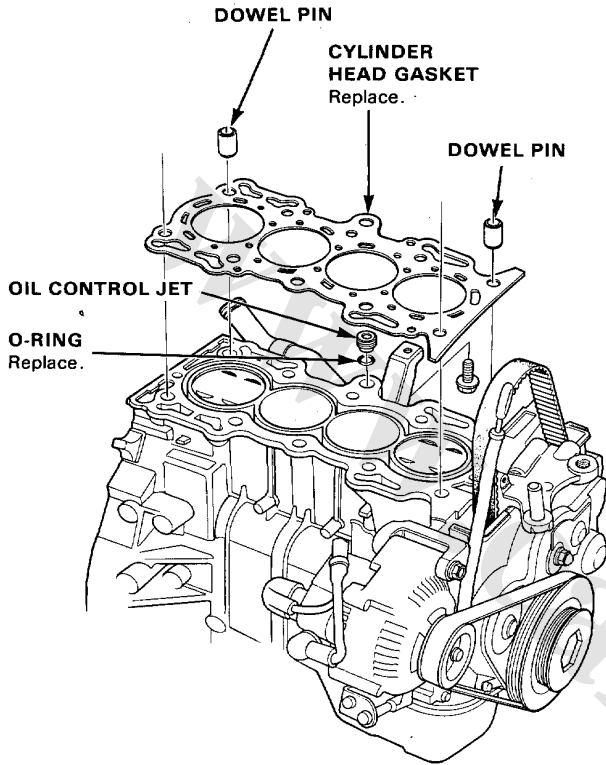

3. Install the bolts that secure the intake manifold to its bracket but do not tighten them yet.
4. Position the cam correctly (page 5-41).
5. Tighten the cylinder head bolts sequentially in three steps.

1st step torque: 40 N·m (4.0 kg-m, 29 lb-ft)


2nd step torque: 70 N·m (7.0 kg-m, 51 lb-ft)

3rd step torque: 108 N·m (10.8 kg-m, 78 lb-ft)

NOTE:

- We recommend to use a plate-type torque wrench. When using a preset-type torque wrench, be sure to tighten slowly and not to overtighten.
- If the bolt sounds, retighten the bolt from 1st step.

CYLINDER HEAD BOLT TORQUE SEQUENCE

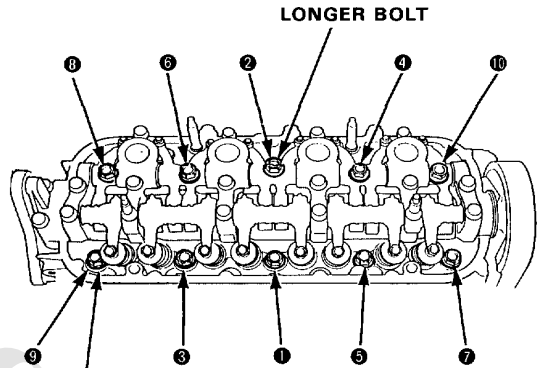

CYLINDER HEAD BOLT

12 x 1.25 mm


108 N·m (10.8 kg-m, 78 lb-ft)

Apply clean engine oil to bolt thread and under bolt heads.




6. Install the heat insulator to the cylinder head and the cylinder block.
7. Install the exhaust manifold and tighten the nuts in a criss-cross pattern in 2 or 3 steps, beginning with the inner nut.
 - Always use a new exhaust manifold gasket.
8. Install the exhaust manifold bracket, then install the exhaust pipe A and the bracket, and then install the upper cover.

except 2.2i:

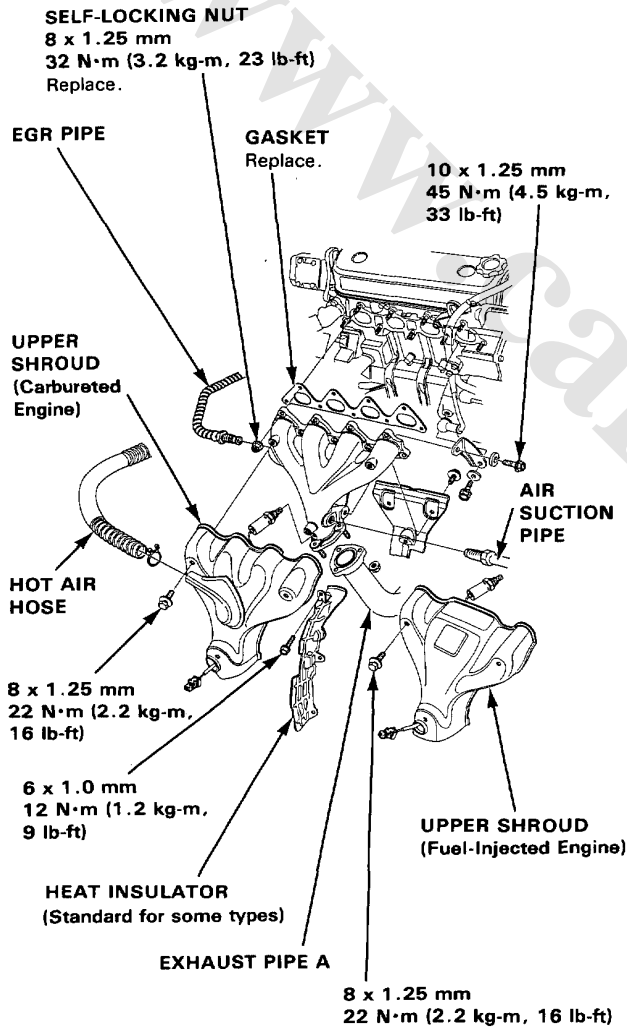


2.2i:

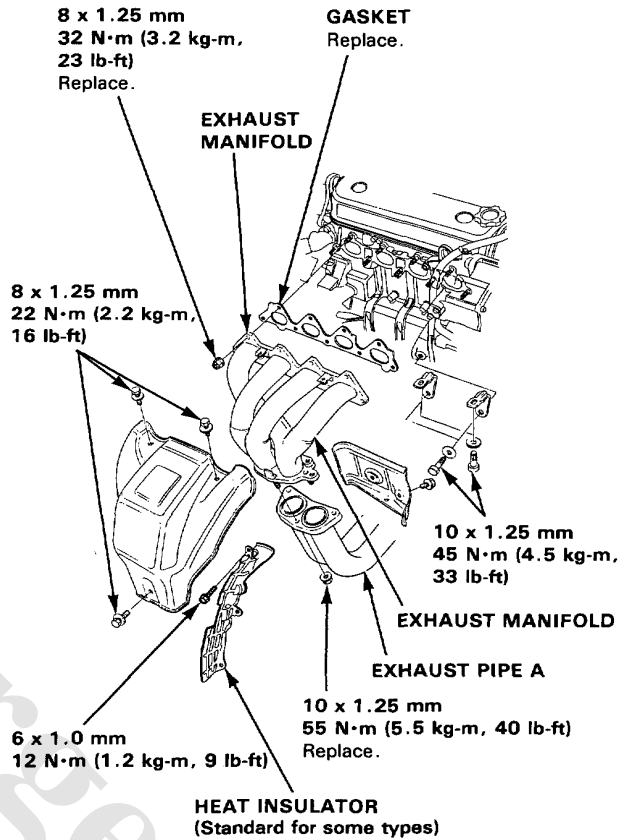

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07KAK-SJ40100	Engine Tilt Hanger Set	1	

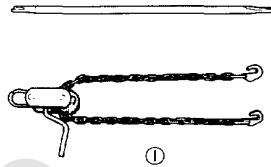




Engine Removal/Installation

▲ WARNING


- Make sure jacks and safety stands are placed properly and hoist brackets are attached to correct positions on the engine. (See section 1).
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

CAUTION:

- Use fender covers to avoid damaging painted surfaces.
 - Unspecified items are common for the carburetor cars, PGM-FI cars, M/T cars, A/T cars, and the A/C equipped cars.
 - Remove the wiring slowly while holding the coupler and the connector portion to avoid disconnecting.
 - Mount the wiring or tubes to avoid mis-connection. Also, be sure that they do not contact other cords or tubes or interference with other parts.
1. Fix the engine hood in a vertical position.
 - Do not remove the hood.
 2. Remove the engine splash shield.

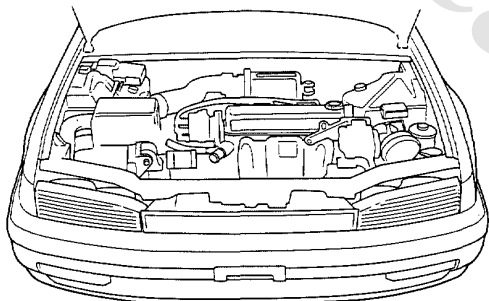


ENGINE SPLASH SHIELD

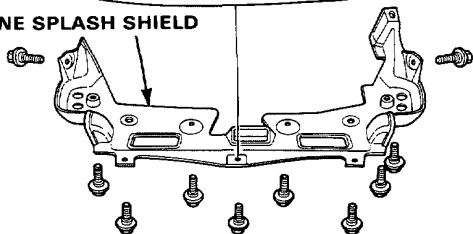

3. Disconnect the battery negative terminal first, then the positive terminal. Remove the battery.

CAUTION: Clean battery posts and cable terminals with sandpaper, assemble, then apply grease to prevent corrosion.

4. Remove the battery base.

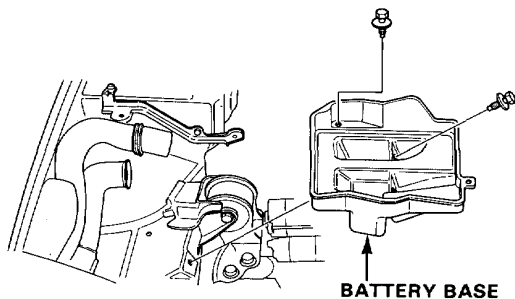

BATTERY BASE

5. Drain the engine oil. Remove the oil filler cap to speed draining. Reinstall the drain plug using a new washer.


CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

6. Drain the coolant from the radiator into a clean pan so it may be reused. Remove the radiator cap to speed draining.

▲ WARNING Use care when removing the radiator cap to avoid scalding by hot coolant or steam.

7. Drain transmission oil/fluid. Use a 3/8" drive socket wrench to remove the drain plug. Remove the oil filler plug or gauge to speed draining. Reinstall the drain plug using a new washer.
8. Remove the air intake duct and the air cleaner.
9. Disconnect the connector and the vacuum tube, then remove the cruise control actuator.

6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)

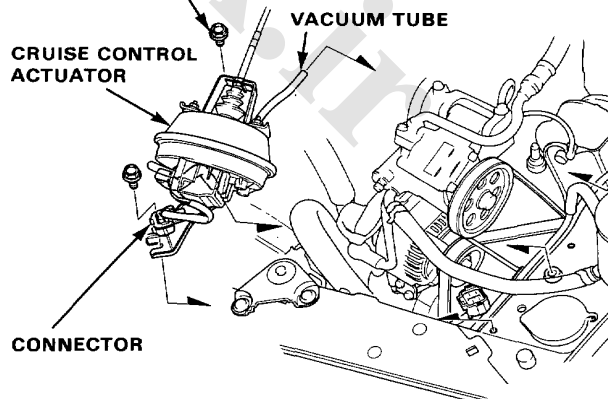

CONNECTOR

(cont'd)

Engine Removal/Installation

(cont'd)

- Relieve fuel pressure by slowly loosening the service bolt on the fuel pipe about one turn (Fuel-Injected Engine) (See section 11).


WARNING Do not smoke while working on the fuel system. Keep open flame away from work area. Drain fuel only into an approved container.

CAUTION:


- Before disconnecting any fuel line, the fuel pressure should be relieved as described above.
- Place a shop towel over the fuel filter to prevent pressurized fuel from spraying over the engine.

- Remove the fuel feed hose.
- Remove the fuel return hose from the PCV valve.
- Disconnect the vacuum tube from the charcoal canister.
- Disconnect the charcoal canister hose from throttle body.
- Remove the brake booster vacuum hose and mount vacuum tube from the intake manifold.
- Remove the ground cable from transmission.



Fuel-Injected Engine:

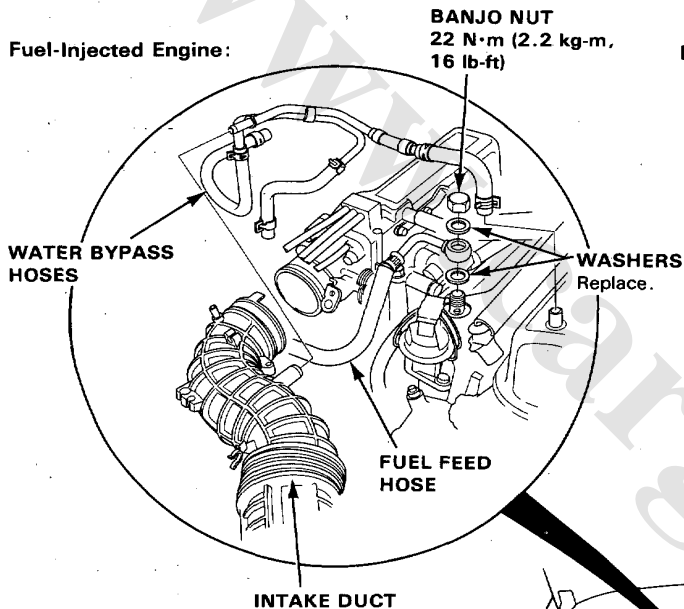

Fuel-Injected Engine:

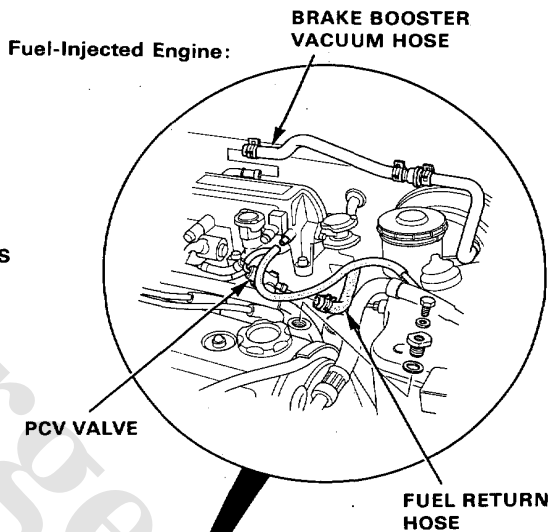

THROTTLE CONTROL CABLE BRACKET

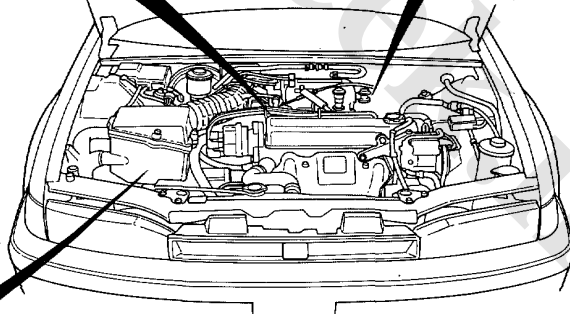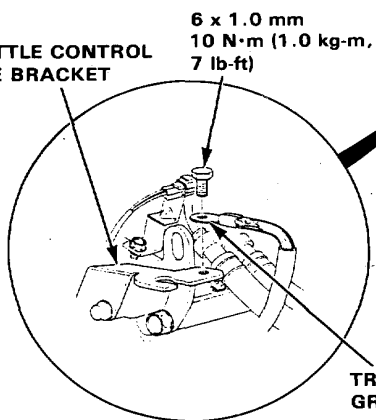



17. Disconnect two connectors and remove the control box from the fire wall.

NOTE: Do not disconnect the vacuum hoses,


18. Disconnect three engine wire harness connectors from the main wire harness at right side of engine room, and remove the engine wire harness terminal and the starter cable terminal from under hood relay box and clamps. Then remove the transmission ground terminal.

19. Disconnect two engine wire harness connectors from main wire harness and resistor at left side of engine room.

20. Remove the engine ground wire from cylinder head cover and power steering pump bracket.

21. Remove the throttle cable by loosening the locknut, then slip the cable end out of the throttle bracket and accelerator linkage.

NOTE: Take care not to bend the cable when removing it. Do not use pliers to remove the cable from the linkage. Always replace a kinked cable with a new one.

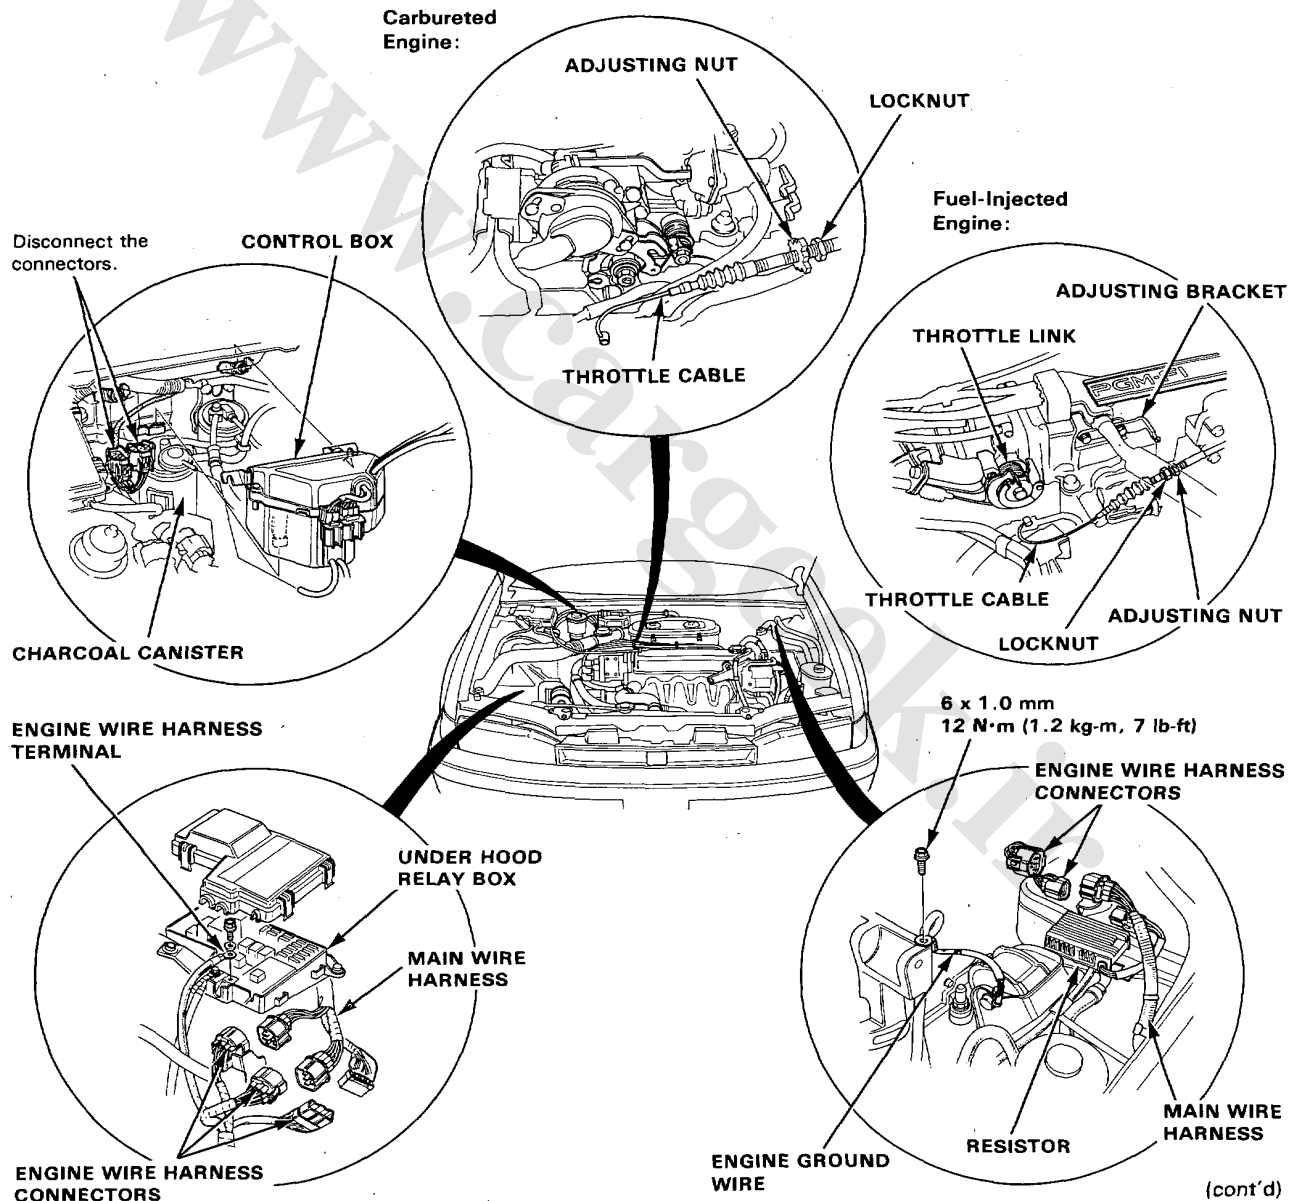


(cont'd)


Engine Removal/Installation

(cont'd)


22. Remove the mounting bolts and V-belt from the power steering pump, then without disconnecting the hoses, pull the pump away from the mounting bracket.

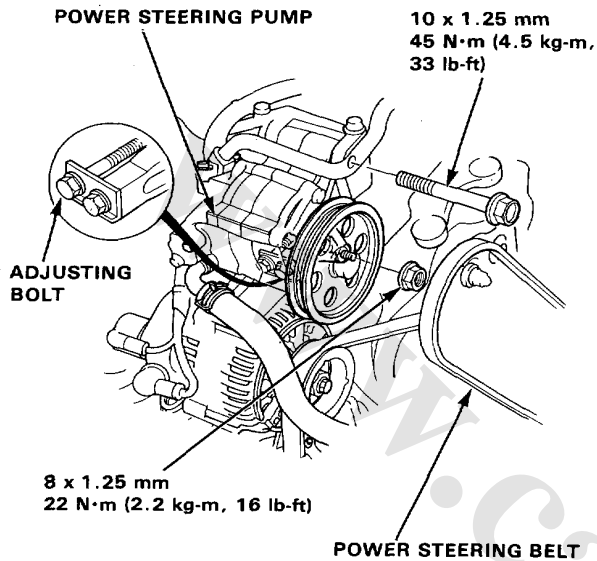

23. Remove the mounting bolts and V-belt from the air conditioning compressor, then without disconnecting the hoses, pull the compressor away from the mounting bracket.

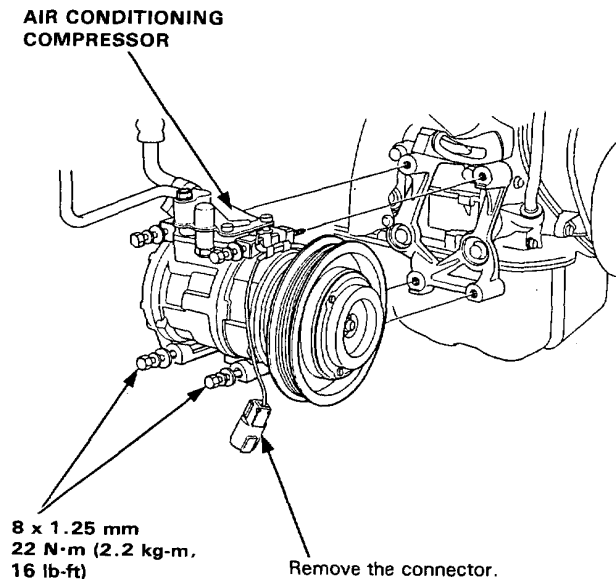


24. Disconnect the heater inlet hose from the cylinder head and the heater outlet hose from the connecting pipe.

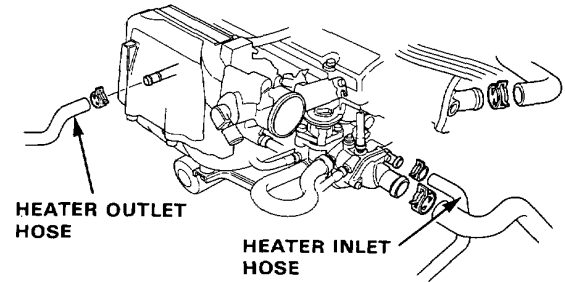


25. Disconnect the hoses and connectors to remove the radiator assembly.

- Upper and lower radiator hoses
- A/T cooler hoses
- Cooling fan motor connectors

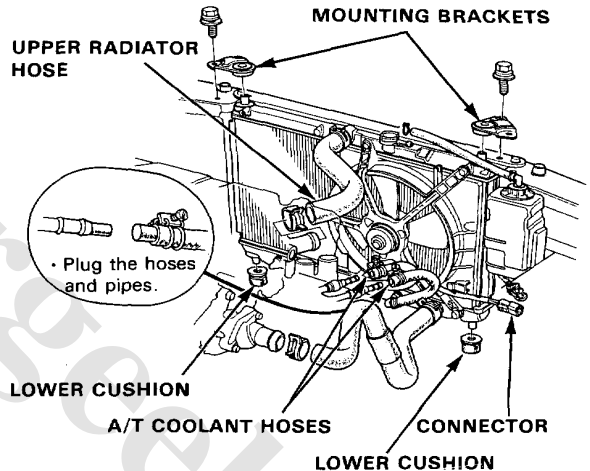

26. Remove the speed sensor.

NOTE: Do not disconnect the hoses and the connector.

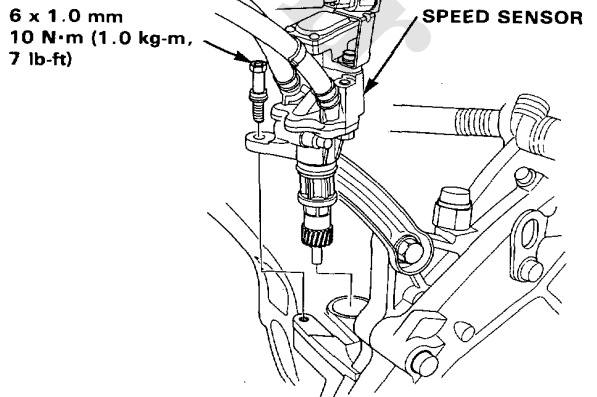




27. Remove the center beam.
28. Remove the exhaust pipe A self-locknut and bracket mounting bolts.
29. Remove the balljoints of the tierod ends and suspension lower arms (See section 12).
30. Remove the driveshafts (See section 10).

NOTE: Coat all precision finished surfaces with clean engine oil or grease.
Tie plastic bags over the driveshaft ends.

Manual transmission equipped cars:

31. Remove the clutch release hose from the clutch damper on the transmission housing.
32. Remove the shift cable and the select cable with the cable bracket from the transmission.

NOTE: Take care not to bend the cable when removing it. Do not use pliers to remove the cable. Always replace a kinked cable with a new one.

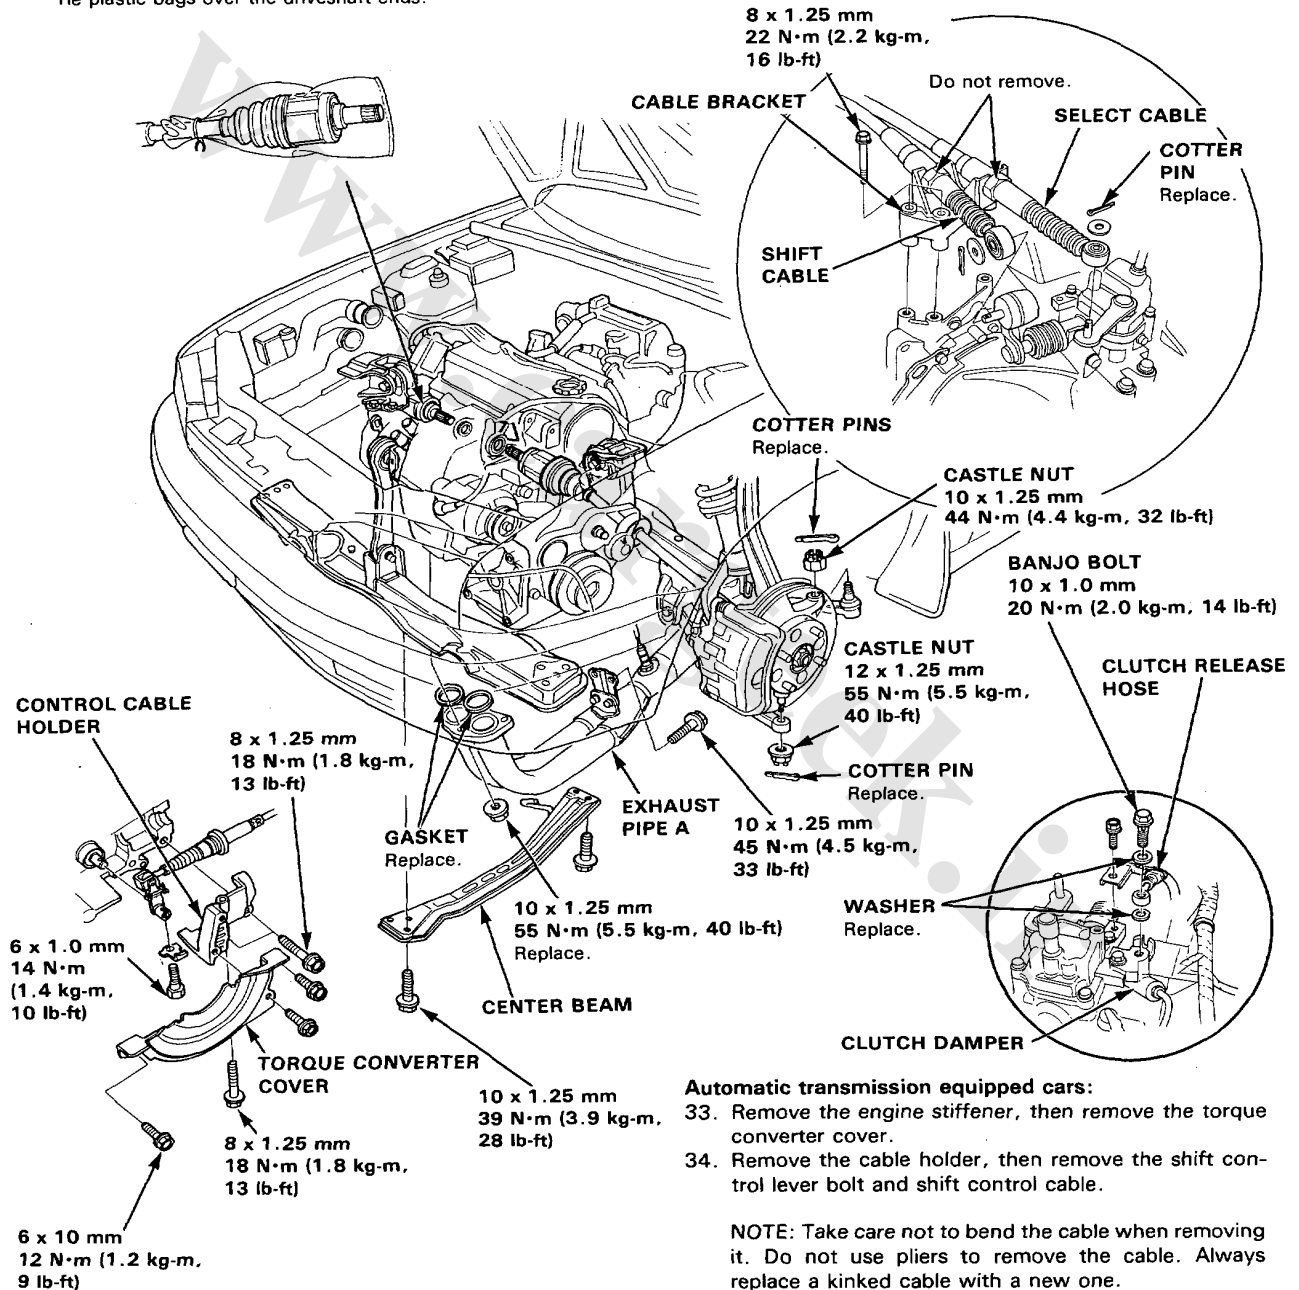

Engine Removal/Installation


(cont'd)

35. Attach a chain hoist to the engine. Raise the hoist to remove all slack from the chain.
36. Remove the rear engine mounting bolt.
37. Remove the front engine mounting bolt.
38. Remove the side transmission mount and mounting bolt.
39. Remove the side engine mount and mounting bolt.
40. Check that the engine/transaxle is completely free of vacuum tubes, fuel and coolant hoses, and electric wires.

41. Slowly raise the engine approximately 6". Check once again that all tubes, hoses and wires have been disconnected from the engine/transaxle.
42. Raise the engine/transaxle all the way and remove it from the car.
43. Remove the rolling insulator from the rear beam.


AUTOMATIC TRANSMISSION:

REAR ENGINE MOUNT

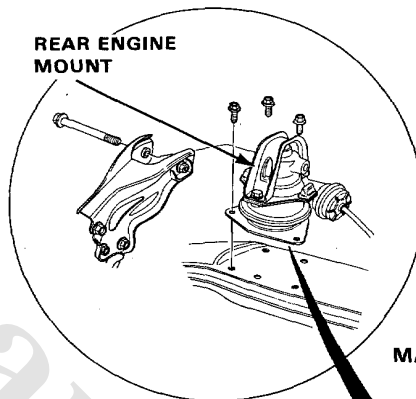


MANUAL TRANSMISSION:


SIDE TRANSMISSION MOUNT

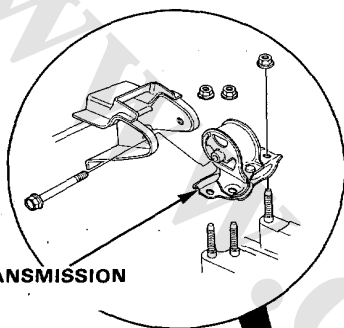


TORQUE ROD

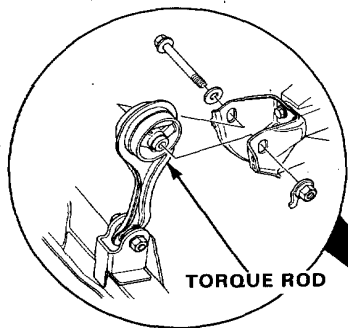

Carbureted Engine with MANUAL TRANSMISSION

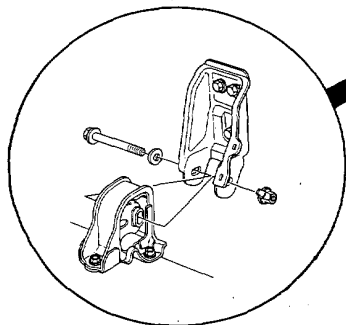

SIDE ENGINE MOUNT

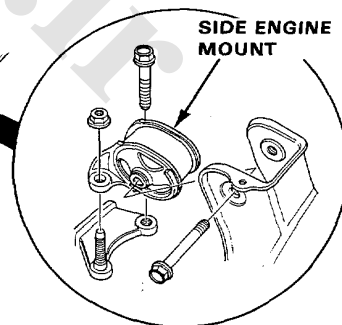



44. Install the engine in the reverse order of removal.
After the engine is in place:
- Torque the engine mounting bolts in sequence shown below.

CAUTION: Failure to tighten the bolts in the proper sequence can cause excessive noise and vibration, and reduce bushing life: check that the bushings are not twisted or offset.

- Check that the spring clip on the end of each driveshaft clicks into place.


CAUTION: Use new spring clips on installation.

- Bleed air from the cooling system at the bleed bolt with the heater valve open.
- Adjust the throttle cable.

- Check the clutch pedal free play.
- Check that the transmission shifts into gear smoothly.
- Adjust the tension of the following drive belts: Alternator (Air Conditioner) belt (page 5-11). Power steering belt (page 5-13).
- Clean battery posts and cable terminals with sandpaper, assemble, then apply grease to prevent corrosion.
- Inspection for fuel leakage.
 - After assembling fuel line parts, turn on the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred at any point in the fuel line.

Engine Mounting Torque Sequence:

CAUTION: After loosening the special bolts, be sure to replace them with new ones.

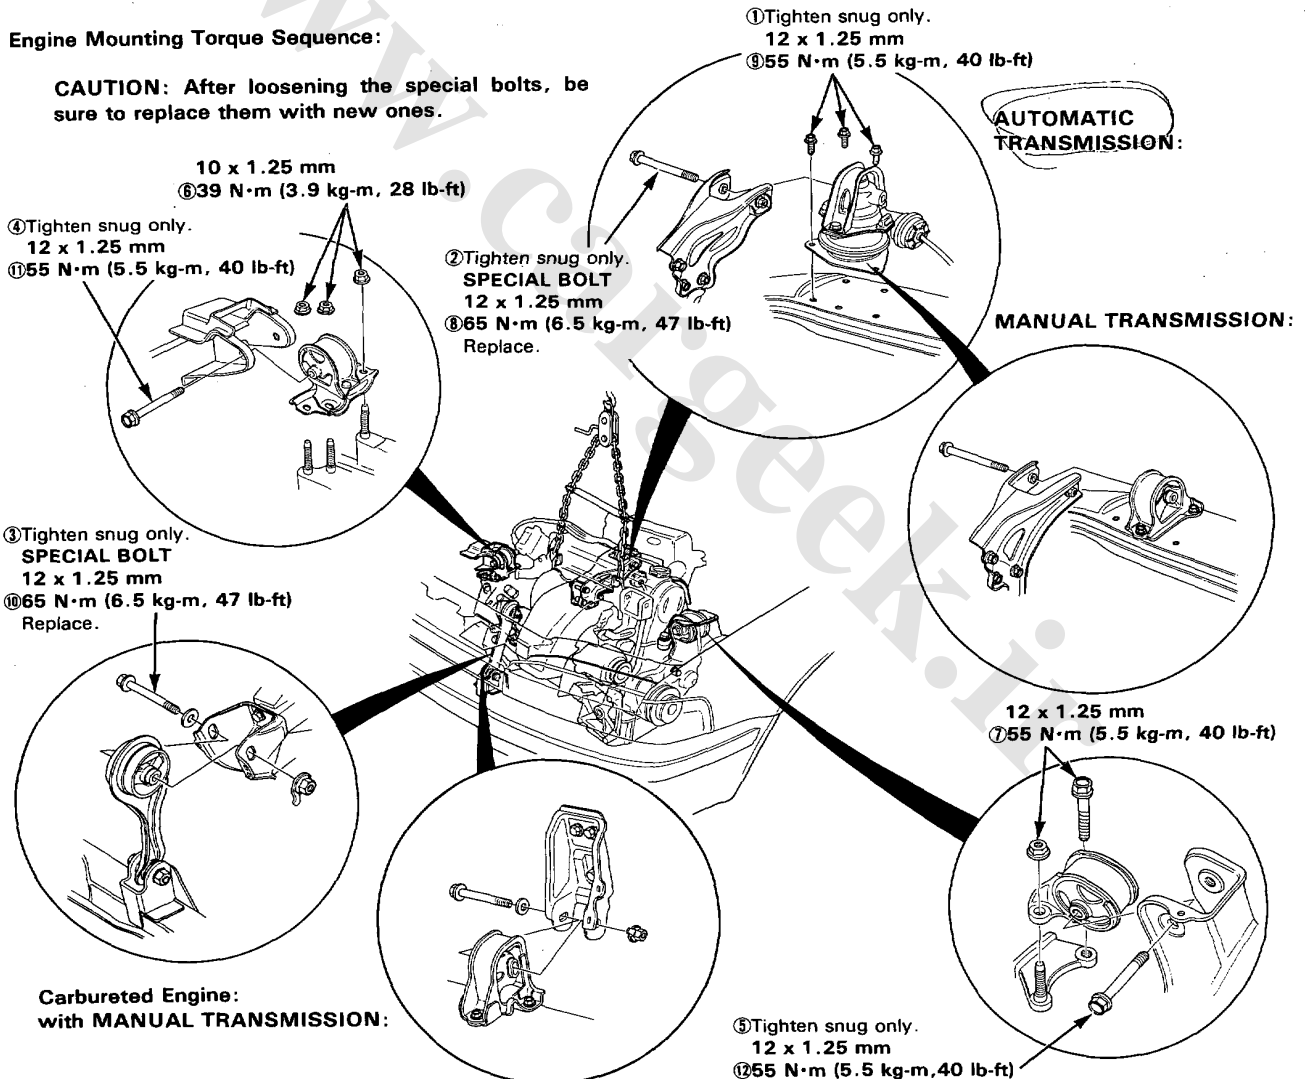


Engine Removal/Installation

(cont'd)

Additional Torque Valve Specifications:

NOTE:


- For manual transmission removal/installation, refer to Section 8.
- For automatic transmission removal/installation, refer to Section 9.

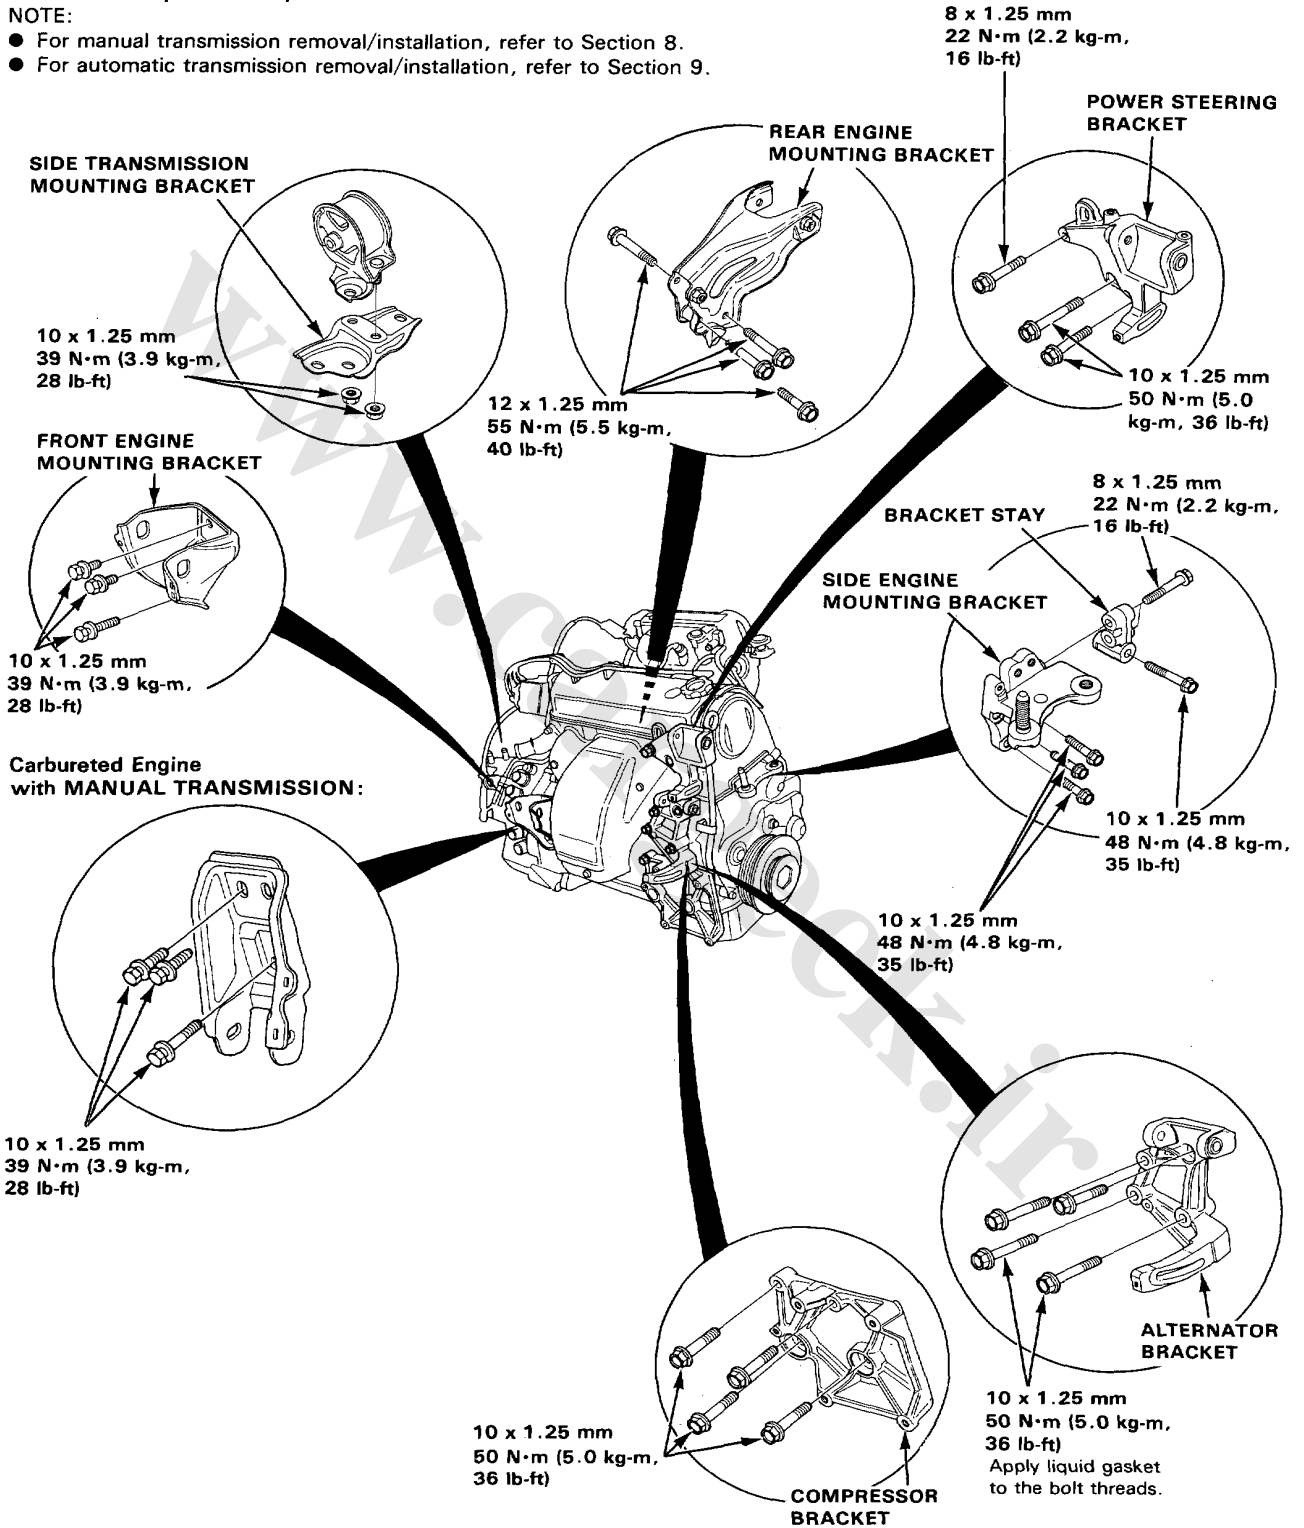



Subframe Torque Value Specifications:


CAUTION: After loosening the special bolts, be sure to replace them with new ones.

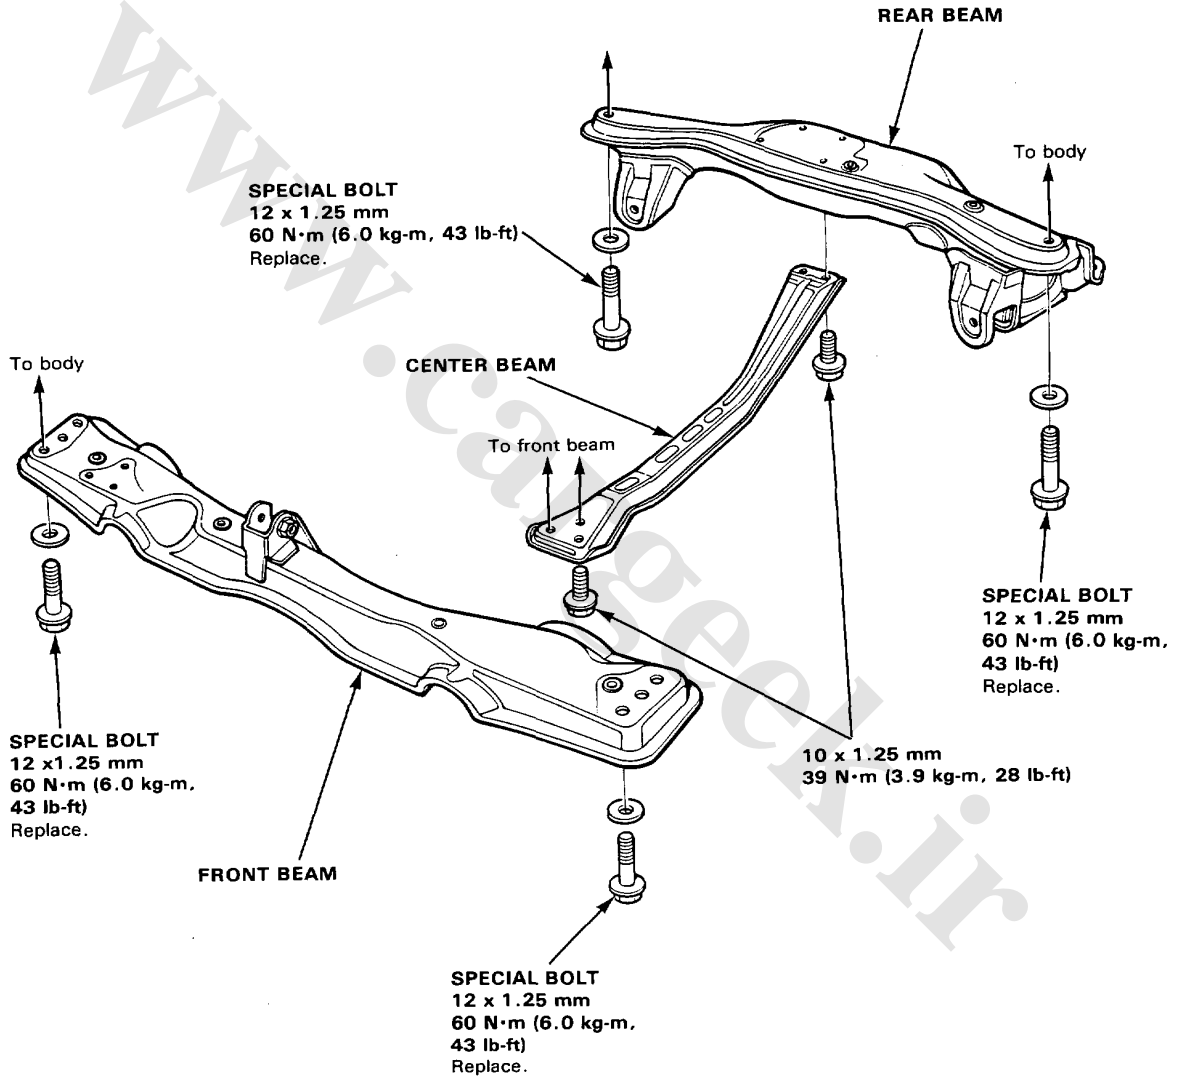

Exhaust Pipe and Muffler

Replacement

NOTE: Use new gaskets and self-locking nuts when reassembling.

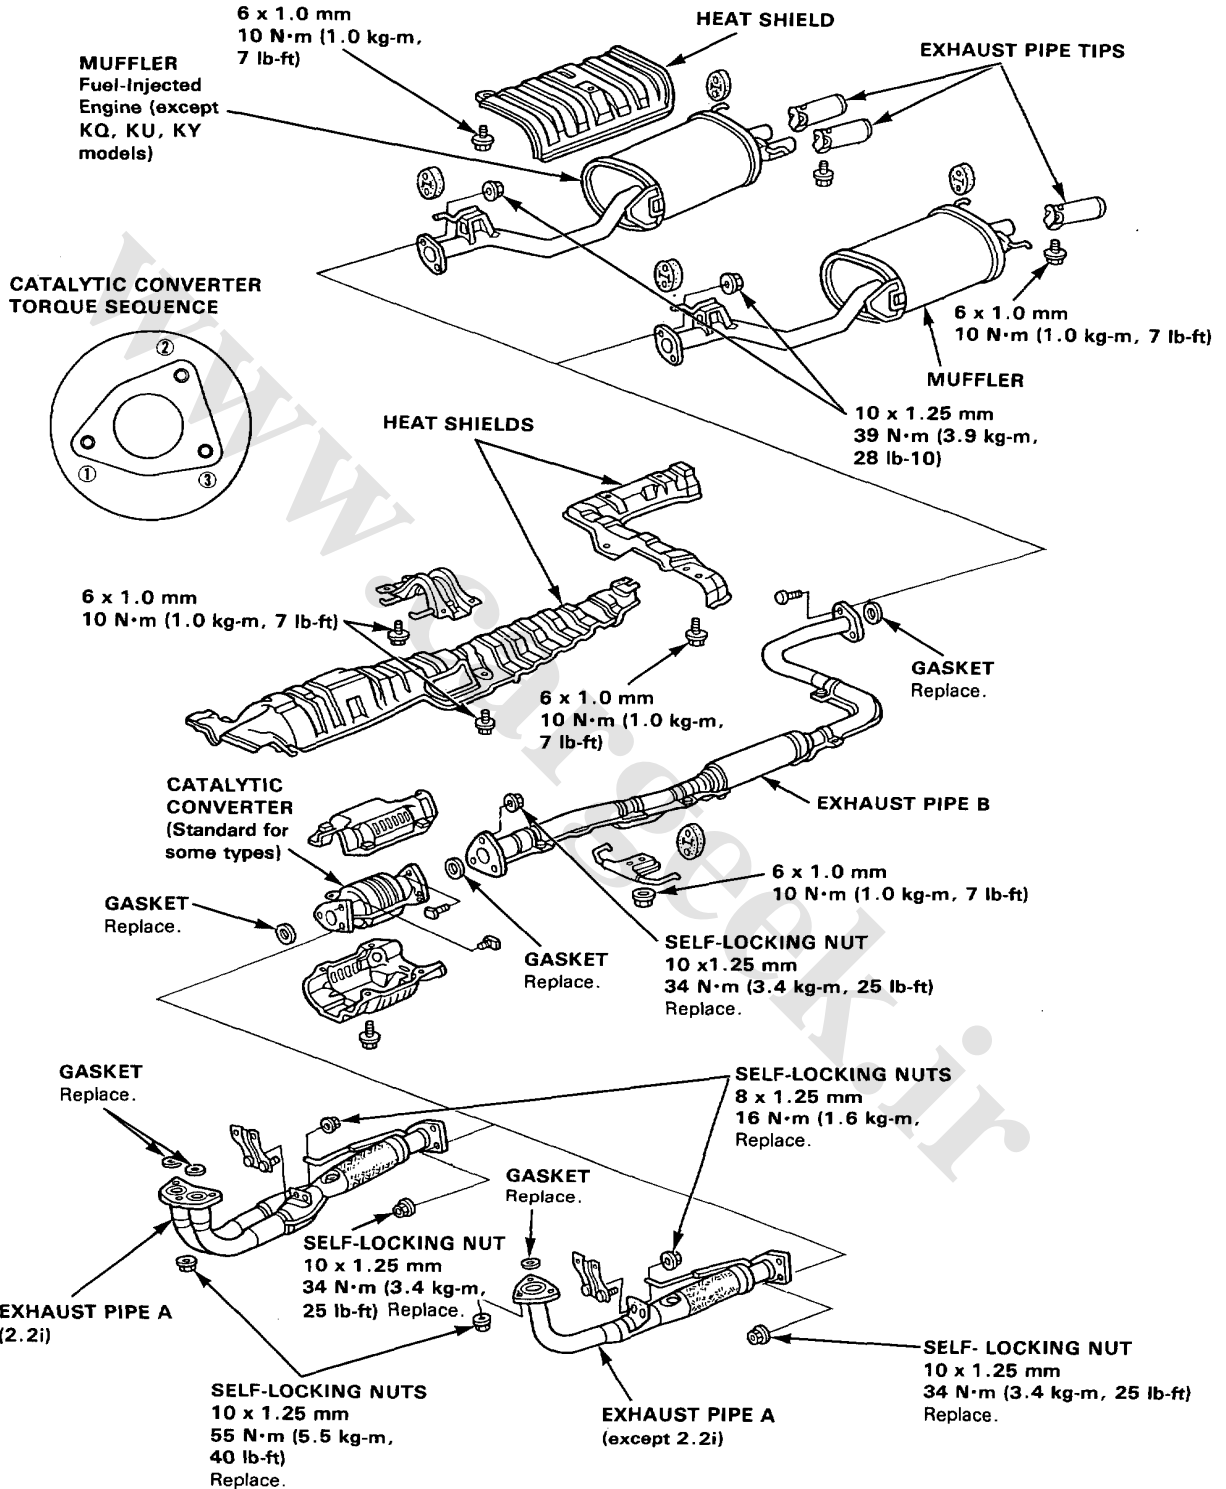

Illustrated Index
Replacement
Refilling and Bleeding
Cap Testing
Radiator Testing
Thermostat Replacement
Water Pump Replacement

www.cargeek.ir

Radiator

Illustrated Index

Carbureted Engine:

▲WARNING System is under high pressure when engine is hot. To avoid danger of releasing scalding coolant, remove cap only when engine is cool.

Total Cooling System Capacity (Including heater and reservoir)

1.8 ℓ

M/T: 6.6 ℓ (7.0 US qt, 5.8 Imp qt)

A/T: 6.5 ℓ (6.8 US qt, 5.7 Imp qt)

2.0 ℓ

M/T: 7.2 ℓ (7.6 US qt, 6.4 Imp qt)

A/T: 7.1 ℓ (7.5 US qt, 6.3 Imp qt)

CAUTION: When supplying coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the painted portion. If any coolant spills, rinse it off immediately.

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings when reassembling.


RADIATOR

Refilling and bleeding, page 5-69

Leak test, page 5-70

Inspect soldered joints and seams for leaks.

Blow out dirt from between core fins with compressed air. If insects, etc., are clogging radiator, wash them off with low pressure water.

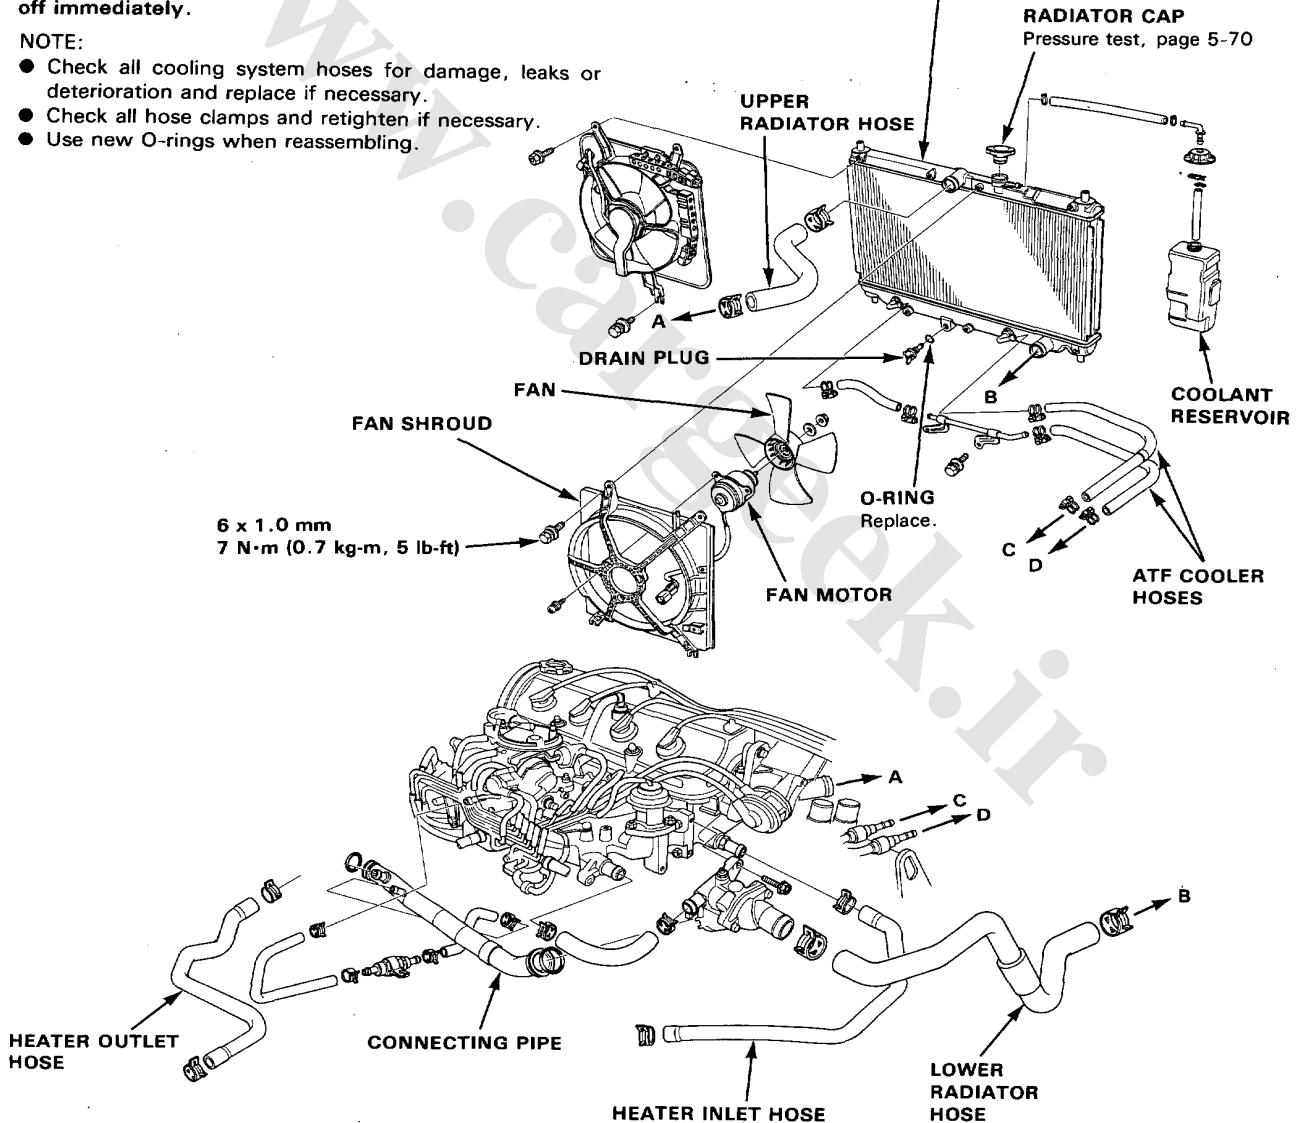



Fuel-Injected Engine:

▲WARNING System is under high pressure when engine is hot. To avoid danger of releasing scalding coolant, remove cap only when engine is cool.

Total Cooling System Capacity (Including heater and reservoir)

- 2.0 l and 2.2 l (except 2.2i)
- M/T: 7.2 l (7.6 US qt, 6.4 Imp qt)
- A/T: 7.1 l (7.5 US qt, 6.3 Imp qt)
- 2.2 l (2.2i)
- M/T: 6.6 l (7.0 US qt, 5.8 Imp qt)
- A/T: 7.1 l (7.5 US qt, 6.3 Imp qt)

CAUTION: When supplying coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the painted portion. If any coolant spills, rinse it off immediately.

NOTE:

- Check all cooling system hoses for damage, leaks or deterioration and replace if necessary.
- Check all hose clamps and retighten if necessary.
- Use new O-rings when reassembling.

RADIATOR


Refilling and bleeding, page 5-69
Leak test, page 5-70

Inspect soldered joints and seams for leaks.


Blow out dirt from between core fins with compressed air. If insects, etc., are clogging radiator, wash them off with low pressure water.

RADIATOR CAP

Pressure test, page 5-70

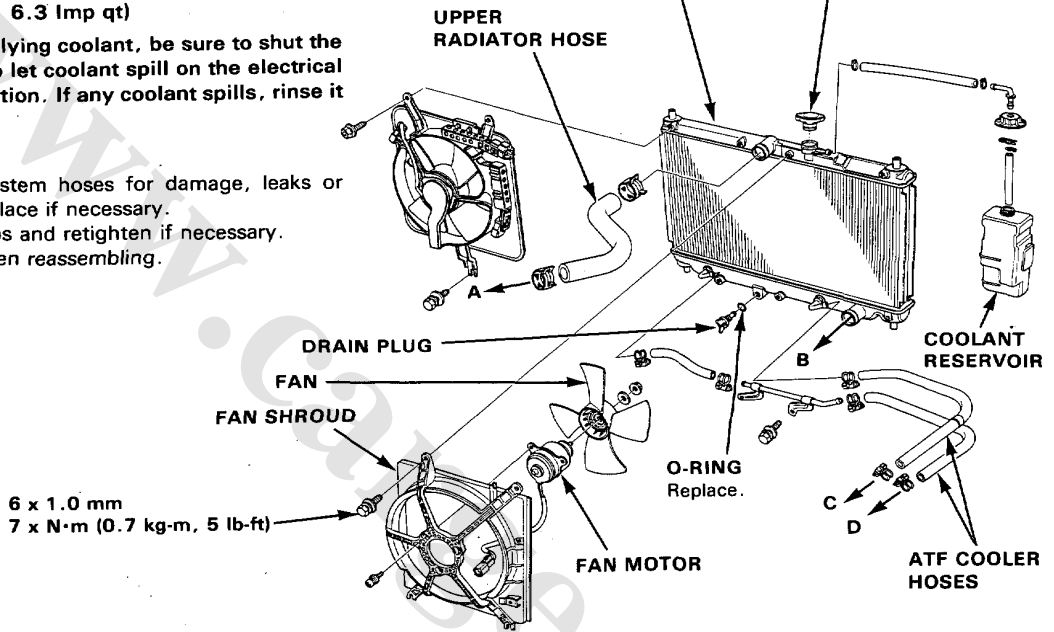

ENGINE OIL COOLER
(Standard for some types)

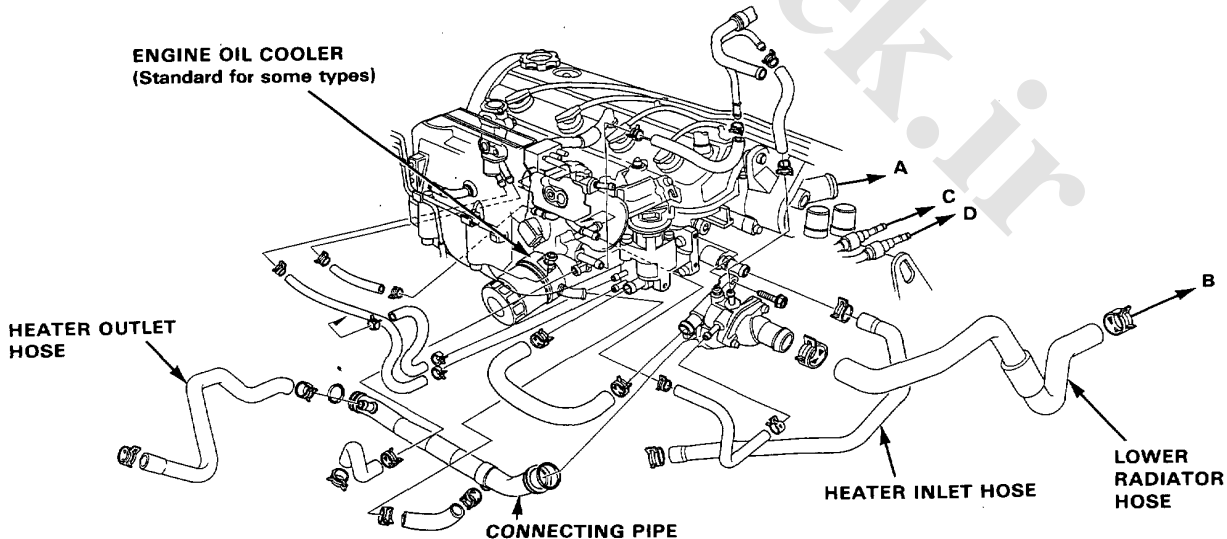


Radiator

Replacement

1. Drain the coolant from the radiator.
 - Remove the radiator cap to speed draining.
 2. Remove the connectors from the cooling fan motor and thermostitch.
 3. Disconnect the upper and lower radiator hoses from cylinder head.
 4. Disconnect the ATF cooler hose (A/T).
- NOTE:** Plug the hoses and pipes.
5. Remove the radiator bracket and radiator.

WARNING Use care when removing radiator to avoid scalding by hot coolant or steam.

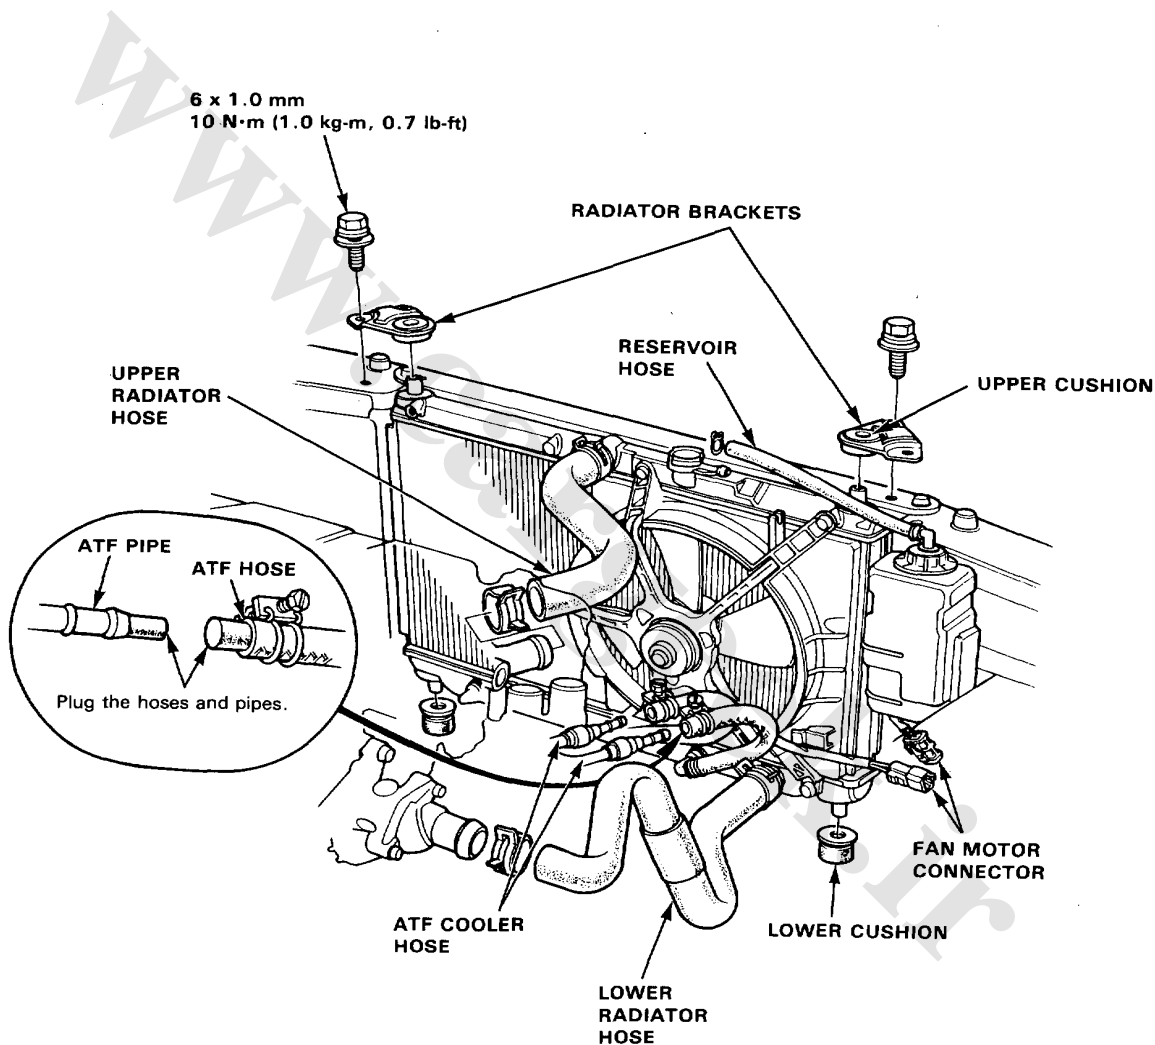

NOTE :

- Install the radiator in the reverse order of removal.
- Before installing the radiator, set the radiator lower cushion securely under it.



Refilling and Bleeding

CAUTION: When supplying coolant, be sure to shut the relay box lid and not to let coolant spill on the electrical parts or the painted portion. If any coolant spills, rinse it off immediately.

1. Set the heater temperature dial to maximum heat.
2. Remove the engine splash shield under the engine.
3. When the radiator is cool, remove the radiator cap. Loosen the drain plug, and drain the radiator.
4. Remove the drain bolt from the rear side of the cylinder block to drain the block and heater.
5. Apply liquid gasket to the drain bolt threads, then reinstall the bolt with a new washer and tighten it securely.
6. Tighten the radiator drain plug securely.
7. Remove, drain and reinstall the reservoir. Fill the tank halfway to the MAX mark with water, then up to the MAX mark with coolant.
8. Mix the recommended anti-freeze with an equal amount of water in a clean container.

NOTE:

- Use only HONDA-RECOMMENDED anti-freeze/coolant.
- For best corrosion protection, the coolant concentration must be maintained year-round at 50 % MINIMUM. Coolant concentrations less than 50 % may not provide sufficient protection against corrosion or freezing.
- Coolant concentrations greater than 60 % will impair cooling efficiency and are not recommended.

CAUTION:

- Do not mix different brands of anti-freeze/coolants.
- Do not use additional rust inhibitors or anti-rust products; they may not be compatible with the recommended coolant.

Radiator Coolant Refill Capacity: including reservoir (0.6 ℓ (0.6 US qt, 0.5 Imp qt)) and heater.

1.8 ℓ

M/T: 6.6 ℓ (7.0 US qt, 5.8 Imp qt)

A/T: 6.5 ℓ (6.8 US qt, 5.7 Imp qt)

2.0 ℓ and 2.2 ℓ (except 2.2i)

M/T: 7.2 ℓ (7.6 US qt, 6.4 Imp qt)

A/T: 7.1 ℓ (7.5 US qt, 6.3 Imp qt)


2.2 ℓ (2.2i)

M/T: 6.6 ℓ (7.0 US qt, 5.8 Imp qt)


A/T: 7.1 ℓ (7.5 US qt, 6.3 Imp qt)

9. Loosen the air bleed bolt in the water inlet, then fill the radiator to the bottom of the filler neck with the coolant mixture. Tighten the bleed bolt as soon as coolant starts to run out in a steady stream without bubbles.

BLEED BOLT
10 N·m (1.0 kg-m, 7 lb-ft)

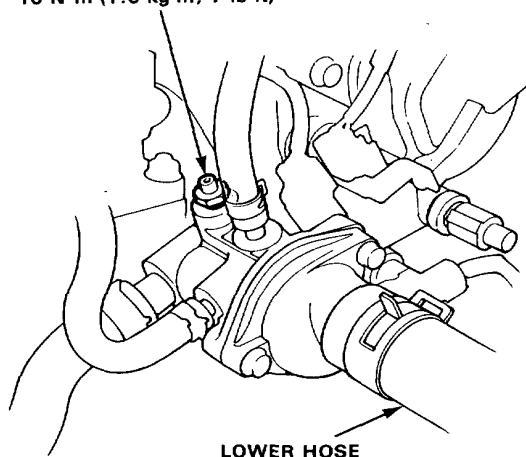

ENGINE OIL COOLER
(Standard for some types)

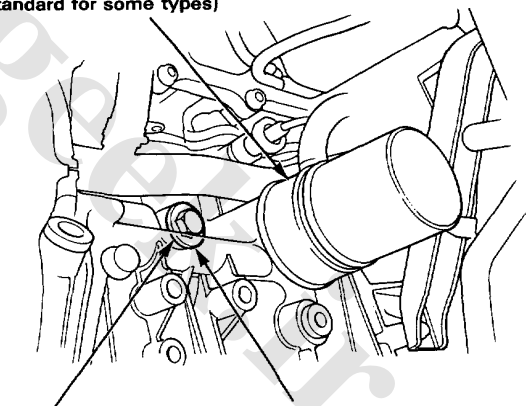

WASHER
Replace.


DRAIN BOLT
50 N·m 5.0 kg-m, 36 lb-ft)
Apply liquid gasket to bolt threads when installing.

10. With the radiator cap off, start the engine and let it run until warmed up (the cooling fan comes on at least twice). Then, if necessary, add more coolant mix to bring the level back up to the bottom of the filler neck.
11. Put the radiator cap on, then run the engine again and check for leaks.

Radiator

Cap Testing


1. Remove the radiator cap, wet its seal with coolant, then install it on the pressure tester.
2. Apply a pressure of 93–123 kPa (0.95–1.25 kg/cm², 14–18 psi).
3. Check for a drop in pressure.
4. If the pressure drops, replace the cap.

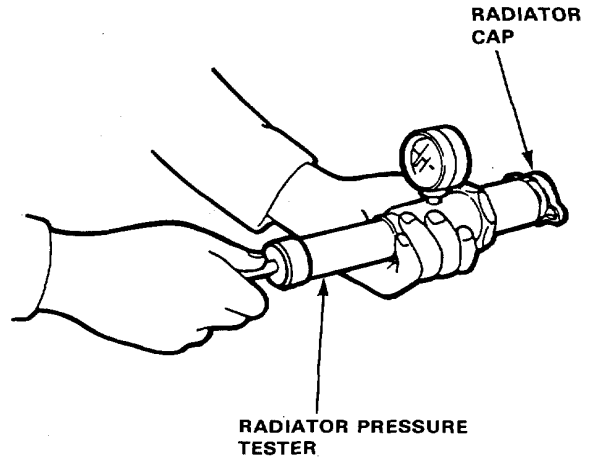

Testing

1. Wait until the engine is cool, then carefully remove the radiator cap and fill the radiator with coolant to the top of the filler neck.
2. Attach the pressure tester to the radiator and apply a pressure of 93–123 kPa (0.95–1.25 kg/cm², 14–18 psi).
3. Inspect for coolant leaks and a drop in pressure.
4. Remove the tester and reinstall the radiator cap.

NOTE: Check for engine oil in the coolant and/or coolant in engine oil.

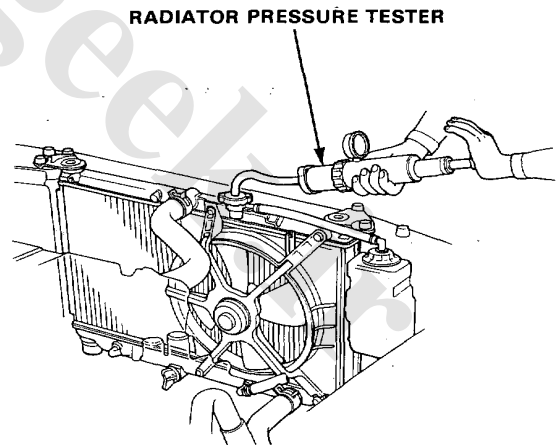




Thermostat

Replacement

NOTE: Use new O-rings when reassembling.

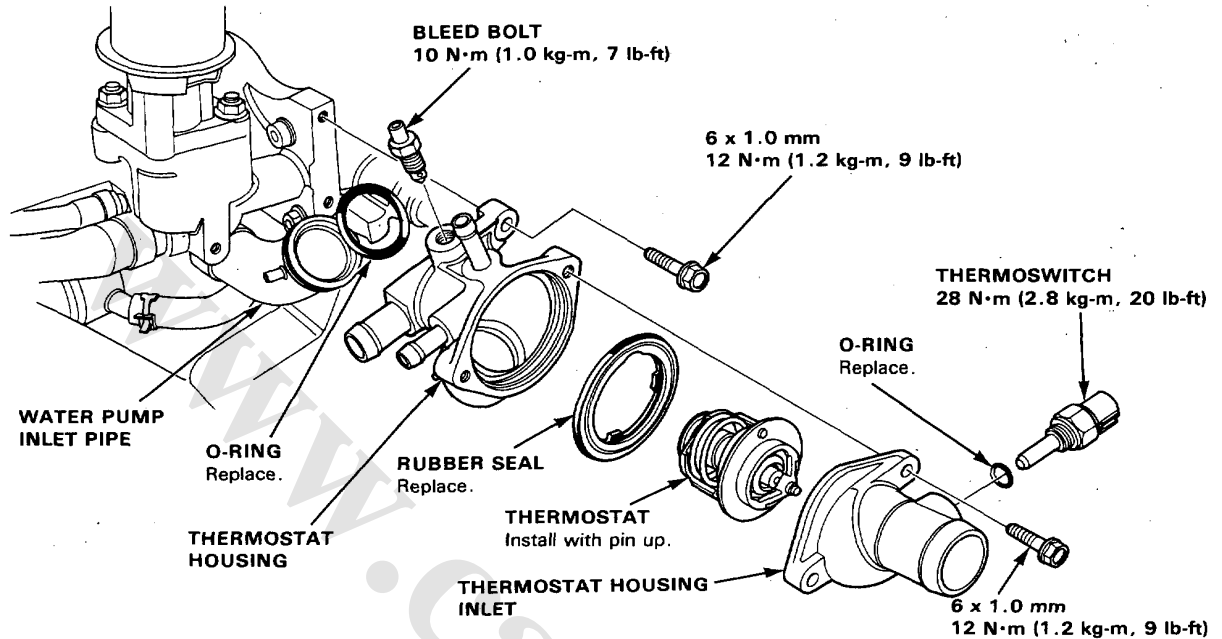

Testing

Replace the thermostat if it is open at room temperature.

To test a closed thermostat:

1. Suspend the thermostat in a container of water as shown.
2. Heat the water and check the temperature with a thermometer. Check the temperature at which the thermostat first opens, and at which it is fully open.

CAUTION: Do not let the thermometer touch the bottom of container.


3. Measure lift height of the thermostat when fully open.

STANDARD THERMOSTAT

Lift height: above 8.0 mm (0.31 in.)

Starts opening: 76–80 °C (169–176 °F)


Fully open: 90 °C (194 °F)

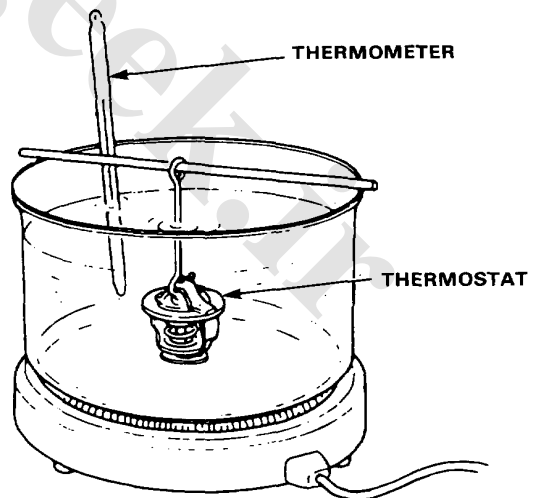

Water Pump


Inspection

1. Remove the timing belt (page 5-36).
2. Check the water pump pulley turns freely.
NOTE: Small amount of "weeping" from the bleed hole is normal.

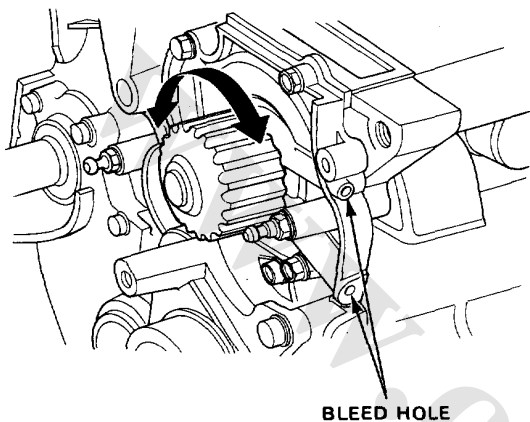

Replacement

1. Remove the timing belt (page 5-36).
2. On screw the bolt, then remove the water pump.

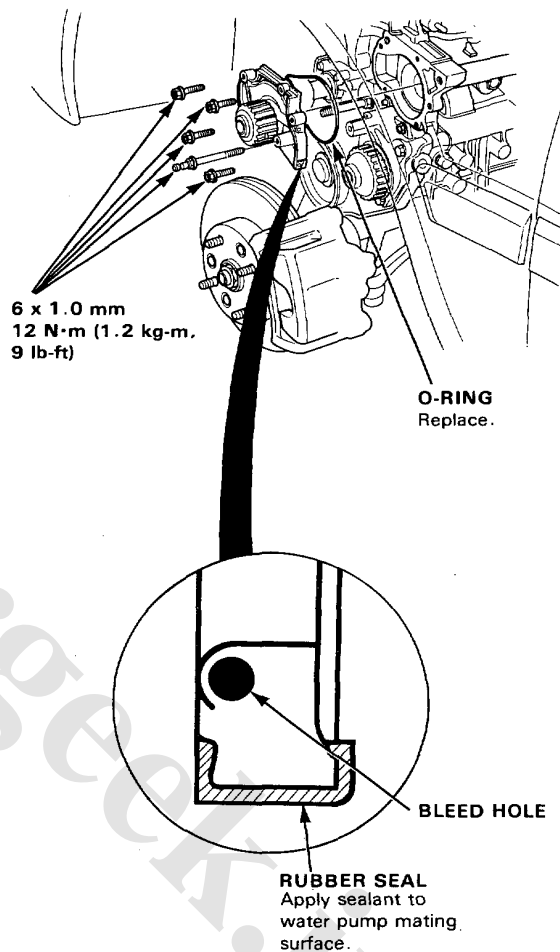

3. Install the water pump in the reverse order of removal.

[Special Tools](#)

[Component Locations](#)

[Index](#)

System Description

[Vacuum Connections](#)

[Electrical Connections](#)

Troubleshooting

[Self-Diagnostic Procedure](#)

[How to Read Flow Charts](#)

PGM-CARB Control System
(KX, KS, KG,KQ)

[Symptom-to System Chart](#)

Troubleshooting Flowcharts

[Oxygen Sensor](#)

[Vehical Speed Sensor](#)

[Manifold Absolute](#)

[Pressure Sensor](#)

[Vacuum Switch](#)

[Coolant Temperature](#)

[Sensor](#)

[Ignition Coil Signal](#)

[Intake Air Temperature](#)

[Sensor](#)

Input Troubleshooting Flow

[Control Unit](#)

[A/T Shift Position Signal](#)

[P/SOil Pressure Switch](#)

[Signal](#)

[Air Conditioning Signal](#)

Carburetor

[Symptom-to-Sub System](#)

[Chart \(KX, KS, KG,KQ\)](#)

[Symptom-to System Chart](#)

[\(Except KX, KS, KG,KQ\)](#)

[Accelelator Pump](#)

[Float Level](#)

Automatic Choke and Fast
Idle

[Choke Opener](#)

[Choke Coil Tension and](#)

[Linkage](#)

[Choke Coil Heater](#)

[Choke Linkage](#)

[Fast Idle](#)

[Removal](#)

[Replacement](#)

Fuel Supply System

[Symtom-to-Sub-System](#)

[Charts](#)

[Fuel Filters](#)

[Fuel Pump](#)

[Fuel Cut-Off Relay](#)

[Fuel Tank](#)

Air Intake System

[Symptom-to-Sub-System](#)

[Chart](#)

[Throttle Cable](#)

[Intake Air Control System](#)

Emission Control System

[Symptom-to-Sub-System](#)

[Chart](#)

[Tailpipe Emissions](#)

[Catalytic Converter](#)

[Feedback Control System](#)

[Air Injection Control](#)

[EGR System](#)

[Throttle Control](#)

[Positive Crankcase](#)

[Ventilation](#)

[Evaporation Emission](#)

[Controls](#)

Ideal Control System

[Vacuum Controlled](#)

[Secondary](#)

[Slow Air Jet Control](#)

[System](#)

[Power Valve](#)

[Primary Slow Mixture Cut-](#)

[Off Solenoid Valve](#)

[Idle Speed/Mixture](#)


www.cargeek.ir

Special Tools


Special Tools				
Ref. No.	Tool Number	Description	Q'ty	Remark
①	07411-002000	Digital Circuit Tester	1	
②	07614-0050100	Fuel Line Clamp	1	
③	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
④	07LAJ-PT30100	ECU Test Harness	1	
⑤	07LAJ-PT30200	Test Harness	1	
⑥	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
⑥-1	07LAZ-PT30110	R.P.M. Connecting Adaptor (A)	(1)	☐ Component Tools
⑥-2	07LAZ-PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑦	07LAA-PT50100	O ₂ Sensor Socket Wrench	1	




①

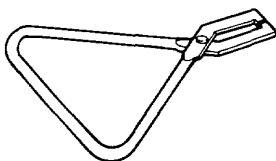


②

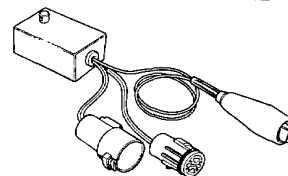


③

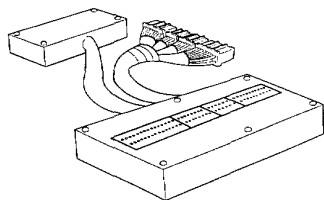


④

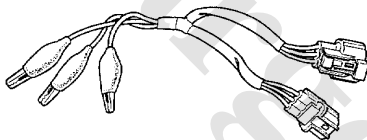

⑤

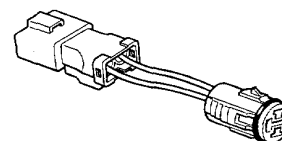

⑥(⑥-1)

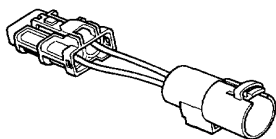

⑥(⑥-2)




⑦




Component Locations

Index

2.0 l with CATA:

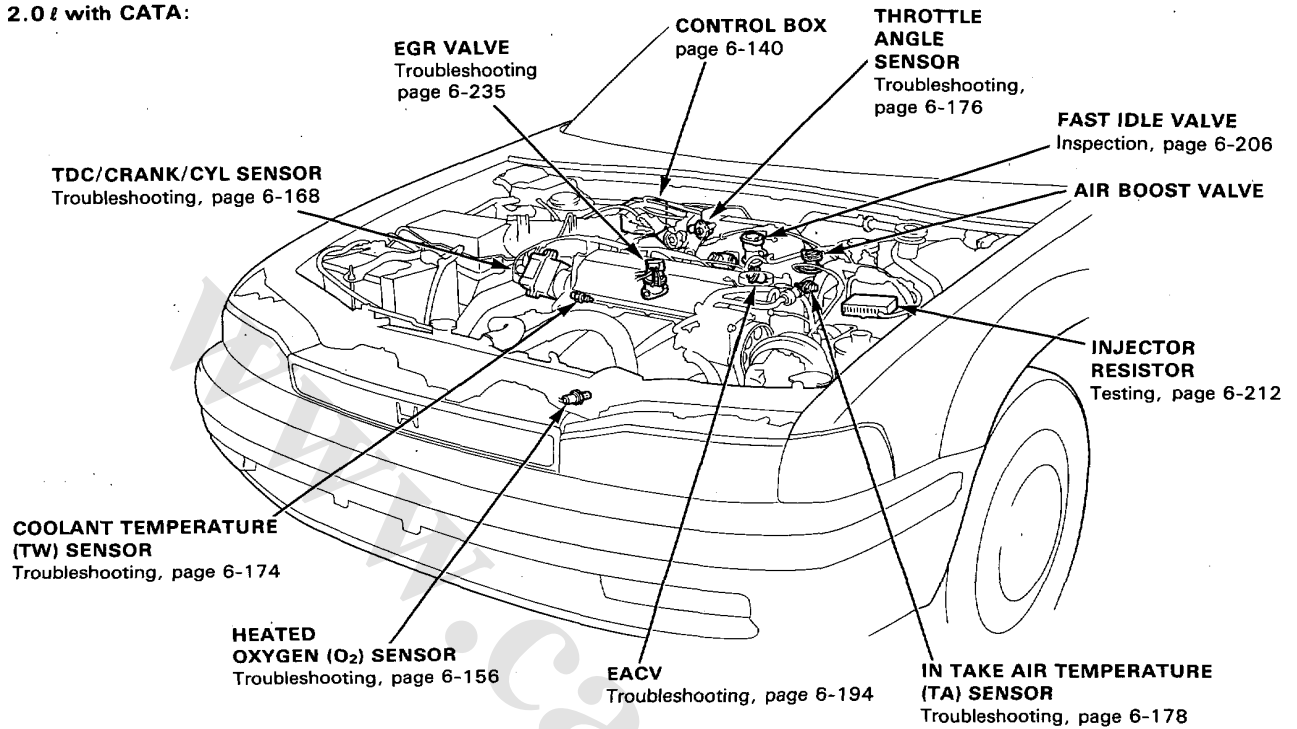


2.0 l without CATA:

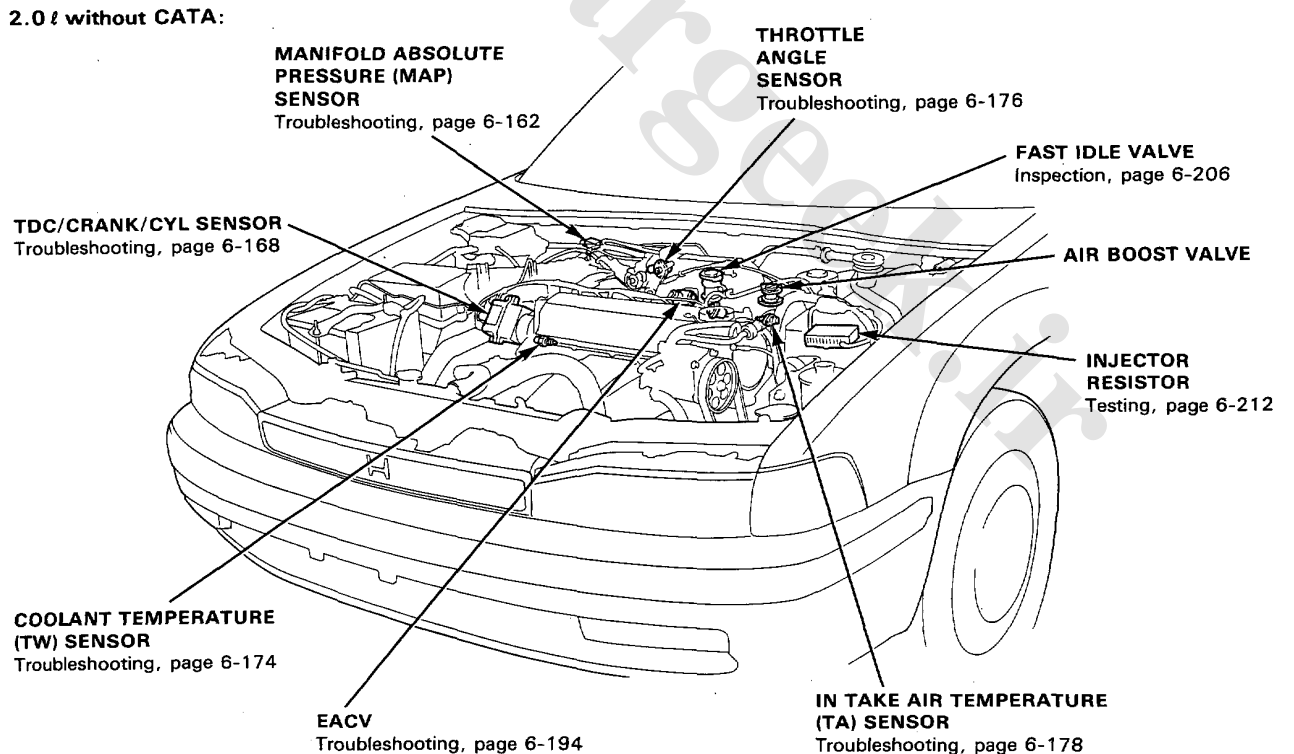


Component Locations

Index

2.2 l except KQ, KY:

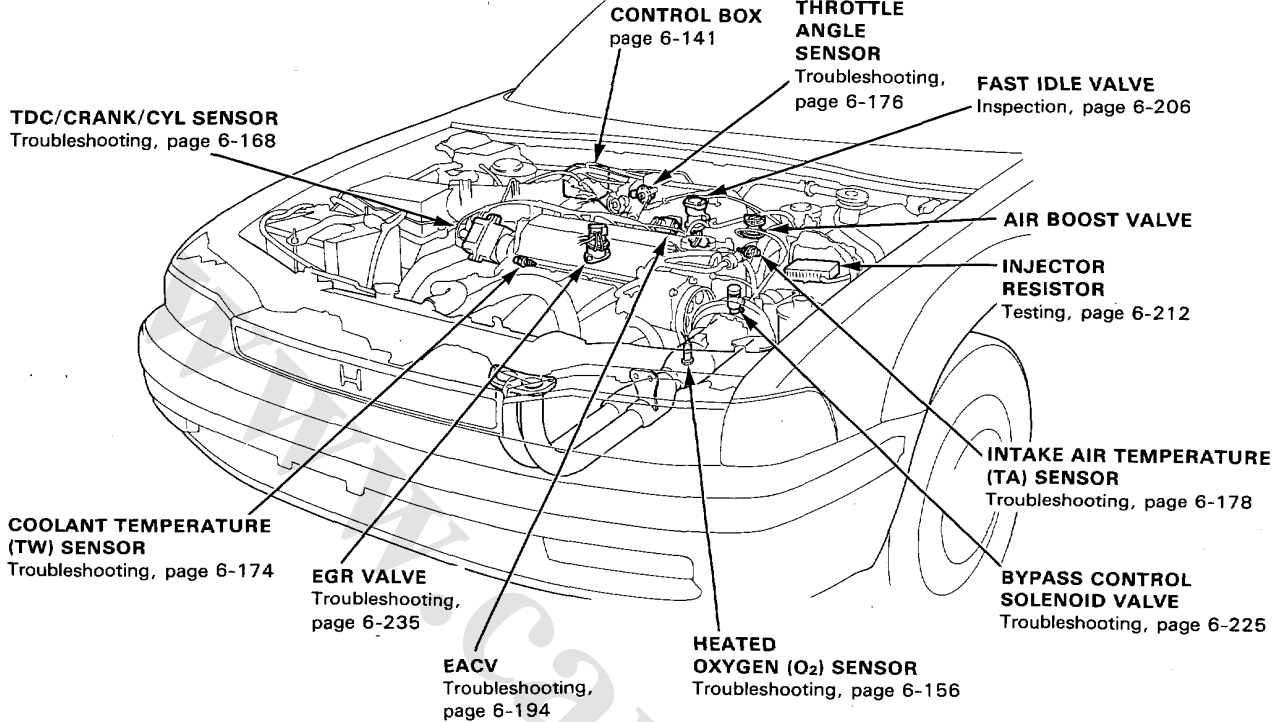


2.2 l KQ, KY:

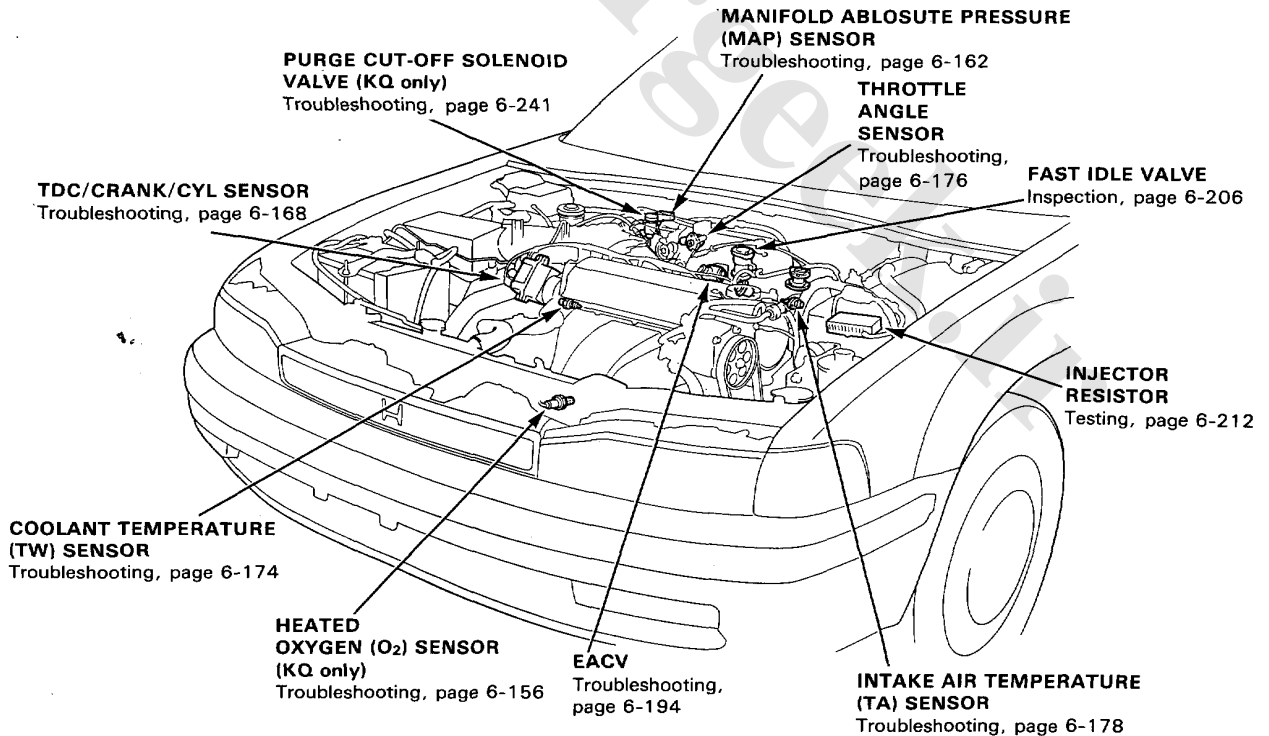




LH:

IMA SENSOR
Troubleshooting
page 6-180

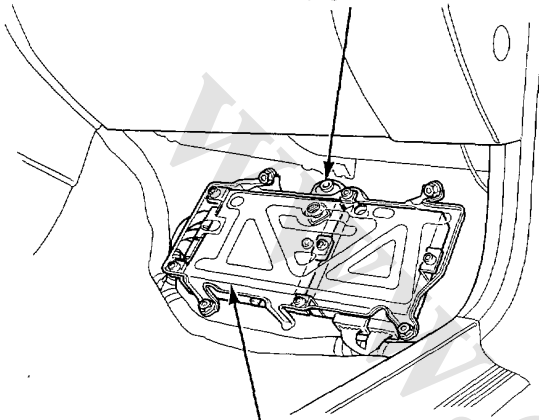


ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-152

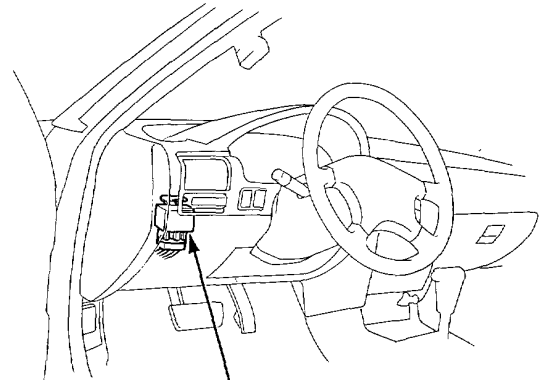


MAIN RELAY
Relay Testing, page 6-216
Harness Testing, page 6-216

RH:

IMA SENSOR
Troubleshooting
page 6-180

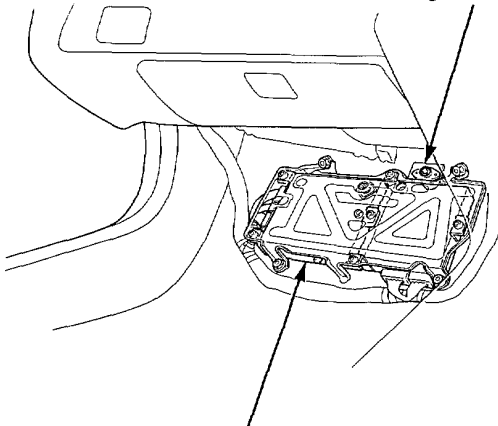

ELECTRONIC CONTROL UNIT (ECU)
Troubleshooting, page 6-152

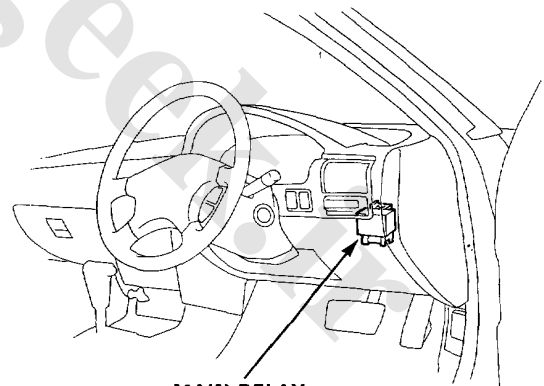

MAIN RELAY
Relay Testing, page 6-216
Harness Testing, page 6-216

Component Locations

Index

AIR CLEANER ELEMENT

- EC: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.
- Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

THROTTLE BODY

- Inspection, page 6-223
- Disassembly, page 6-224


THROTTLE CABLE

- Inspection/Adjustment, page 6-222
- Installation, page 6-222

INTAKE CONTROL SOLENOID VALVE


- Troubleshooting page 6-229

AIR IN TAKE TUBE

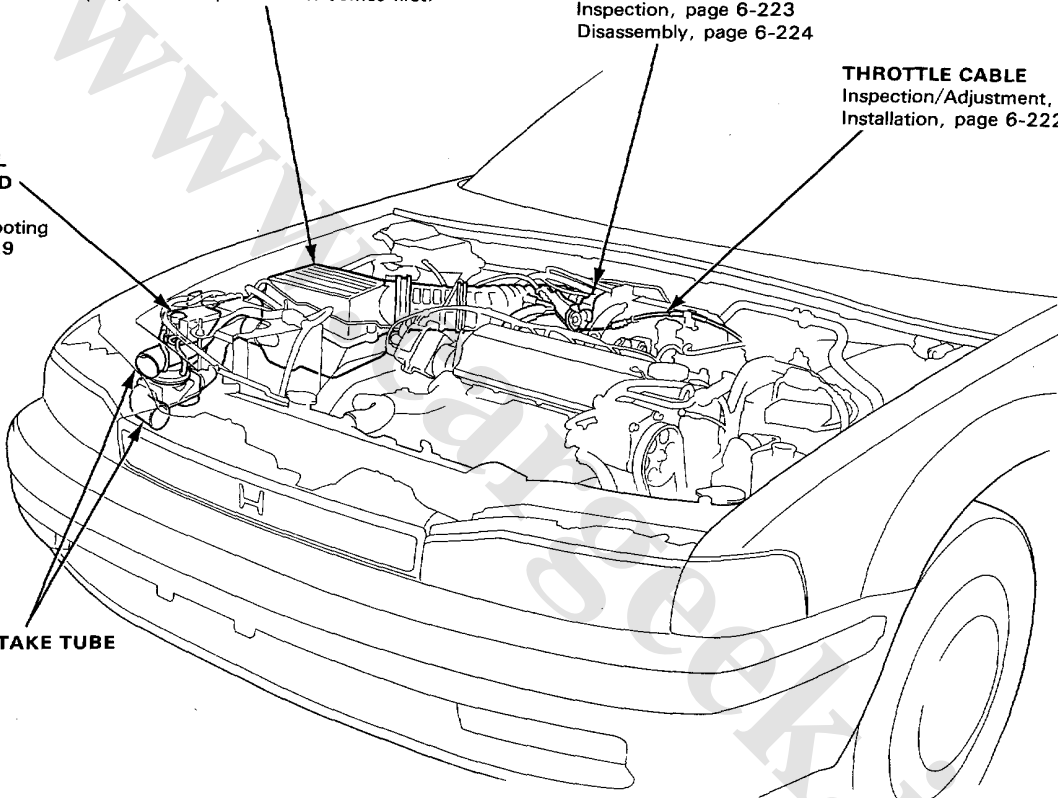




LH

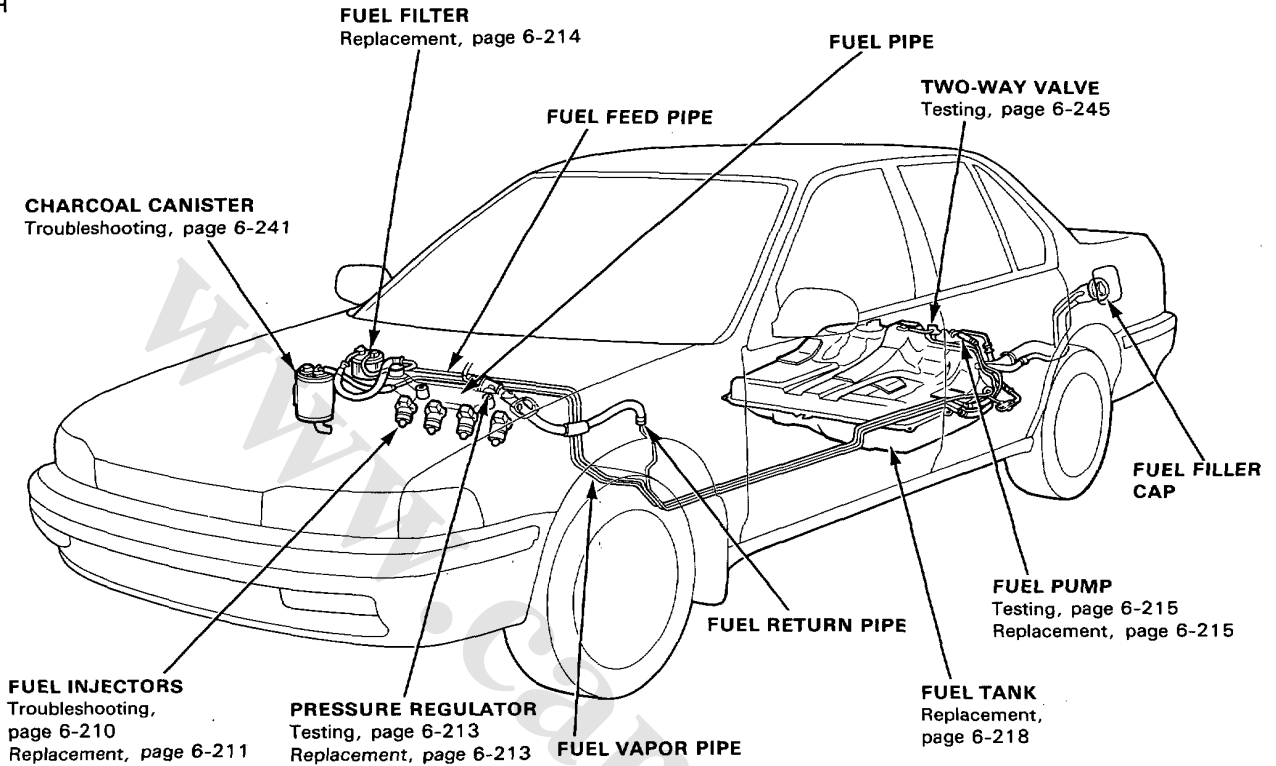

RH

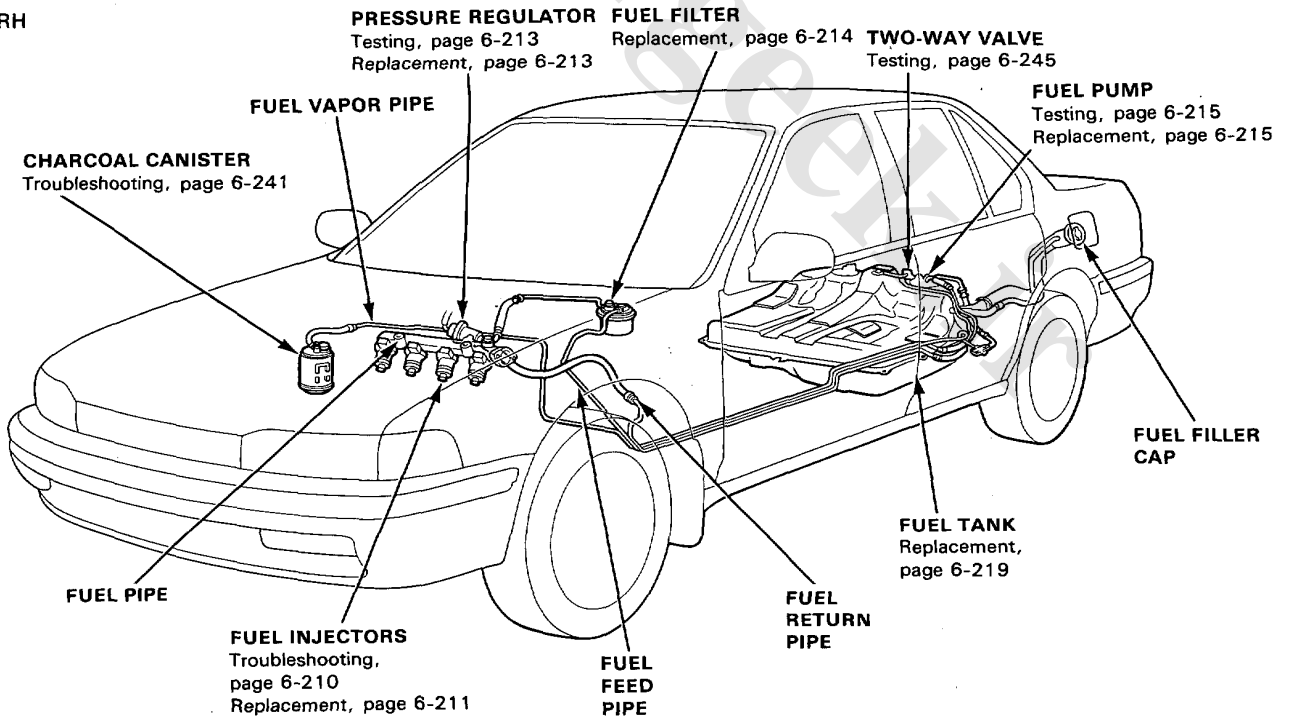




Component Locations

Index


(KX, KS, KG)

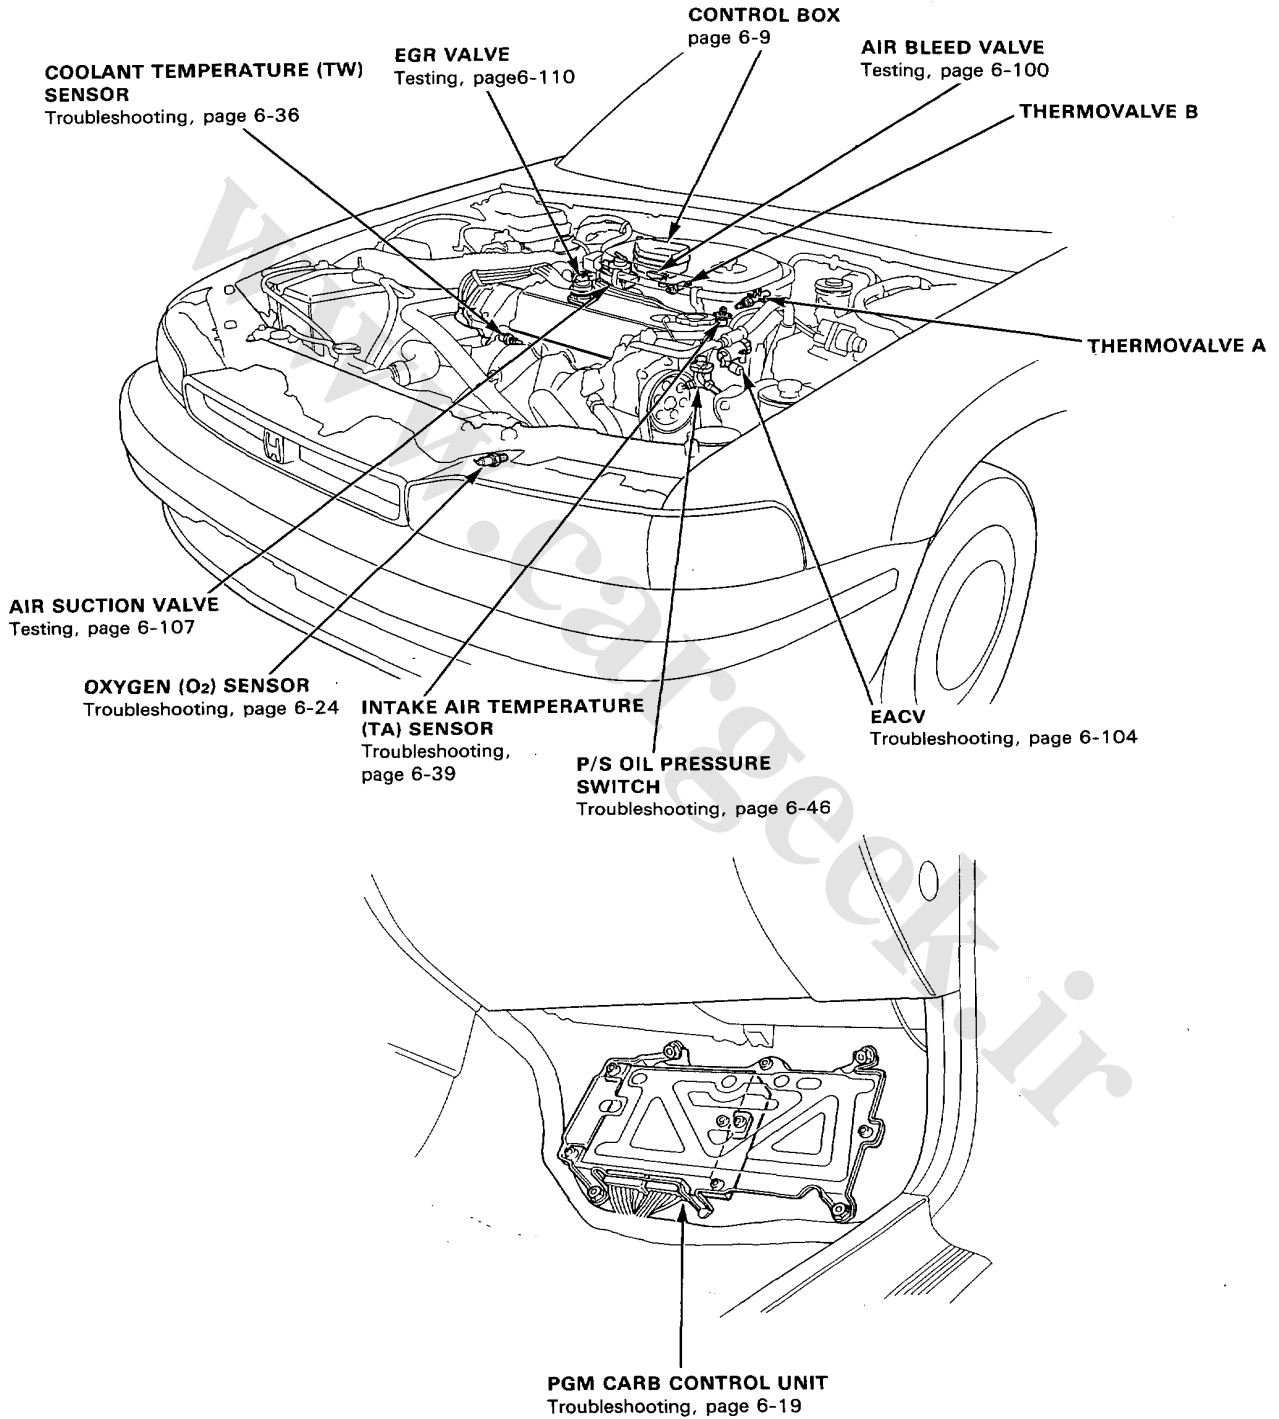

Component Locations


Index

(KQ)

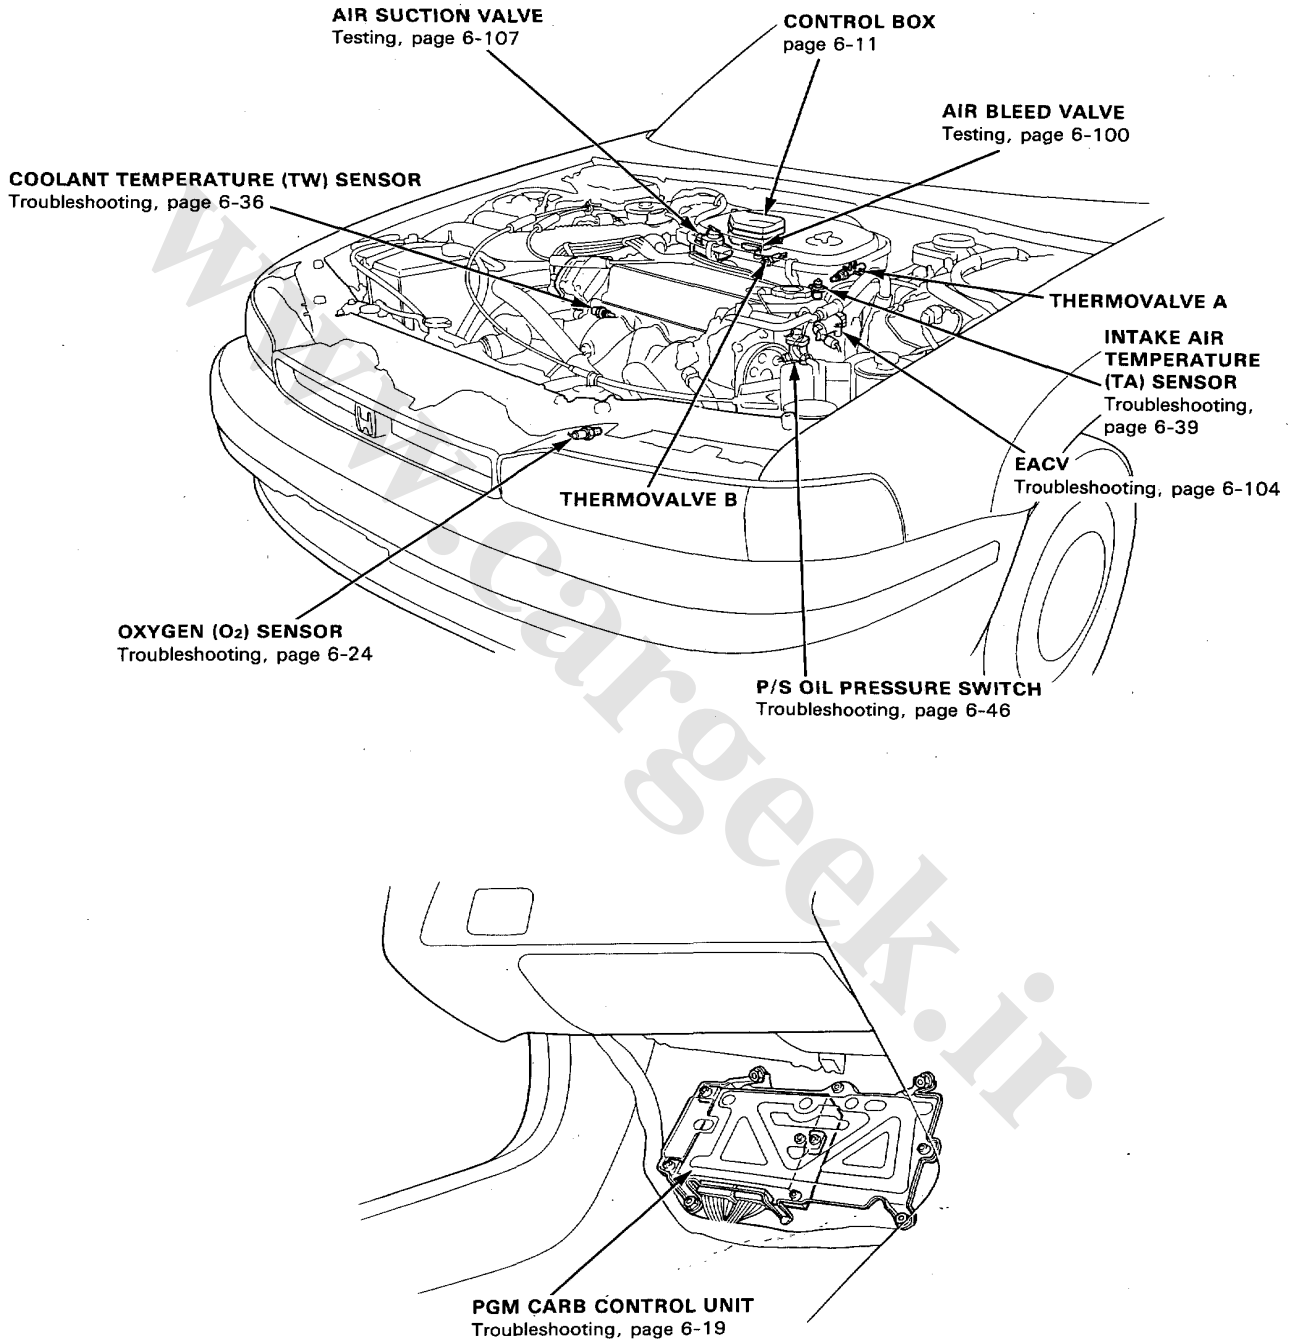




(KB, KF, KW, KY, KP)

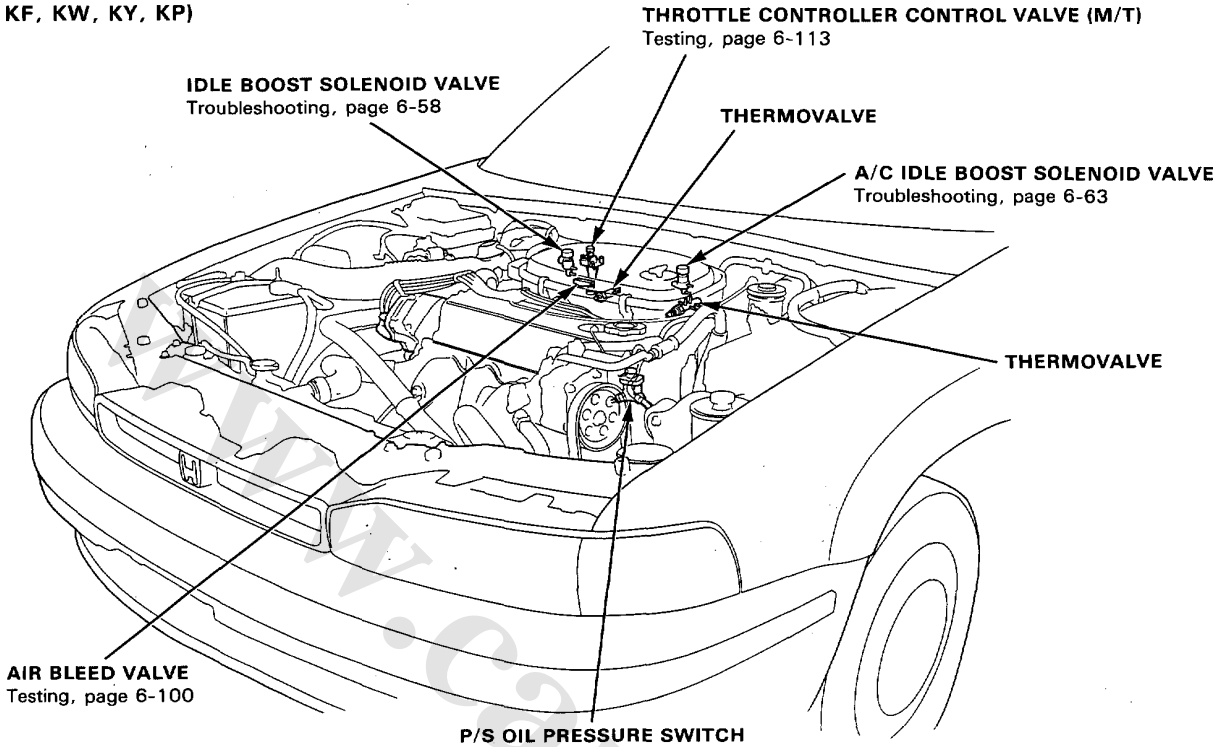

(KE, KT)

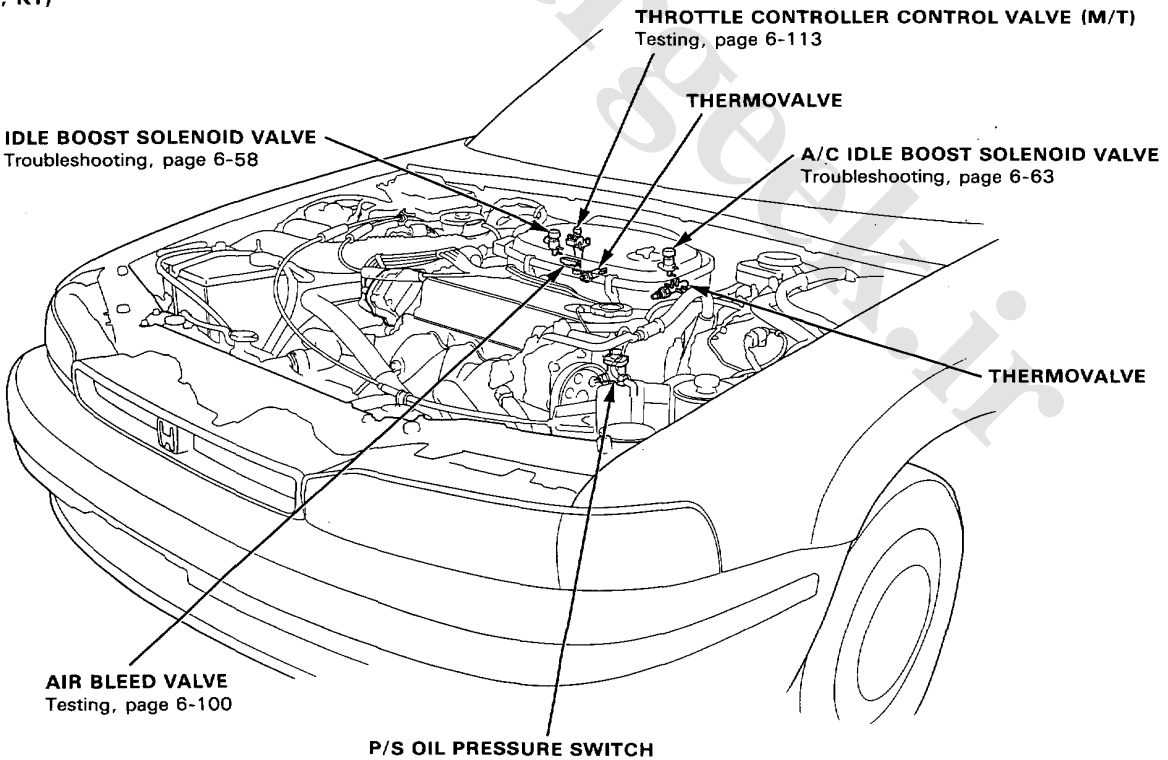


Component Locations

Index


AIR CLEANER ELEMENT

- EC, KQ: Replace every 2 years or 40,000 km (24,000 miles) whichever comes first.
- Others: Replace every 1 year or 20,000 km (12,000 miles) whichever comes first.

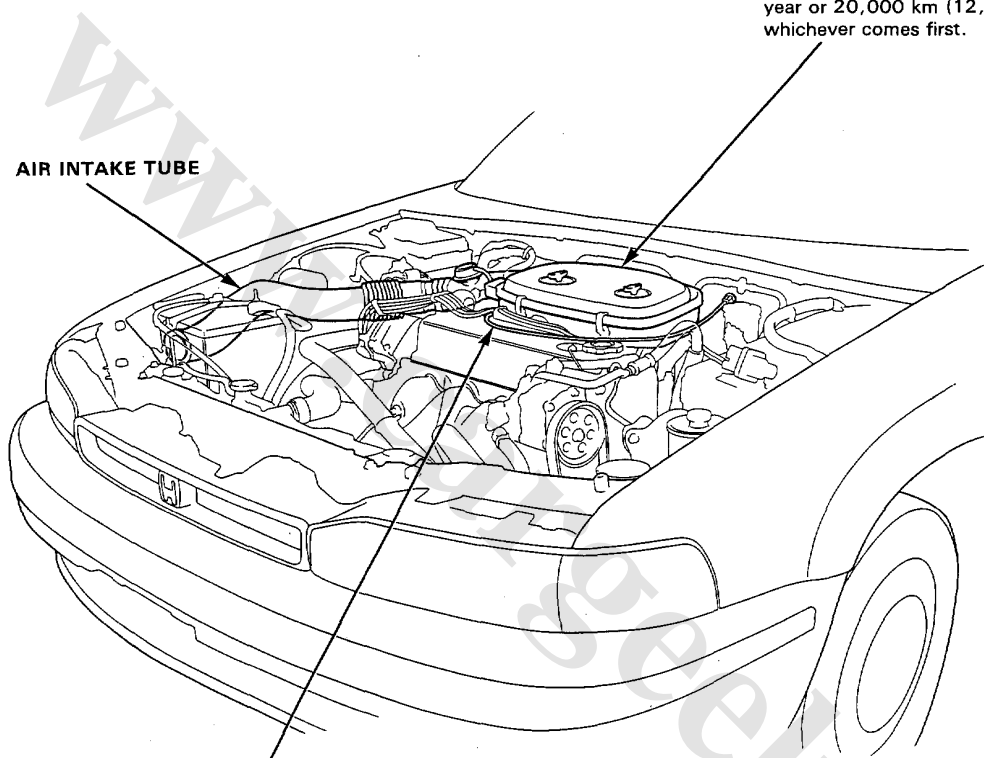


AIR INTAKE TUBE

THROTTLE CABLE
Inspection/Adjustment, page 6-99
Installation, page 6-99

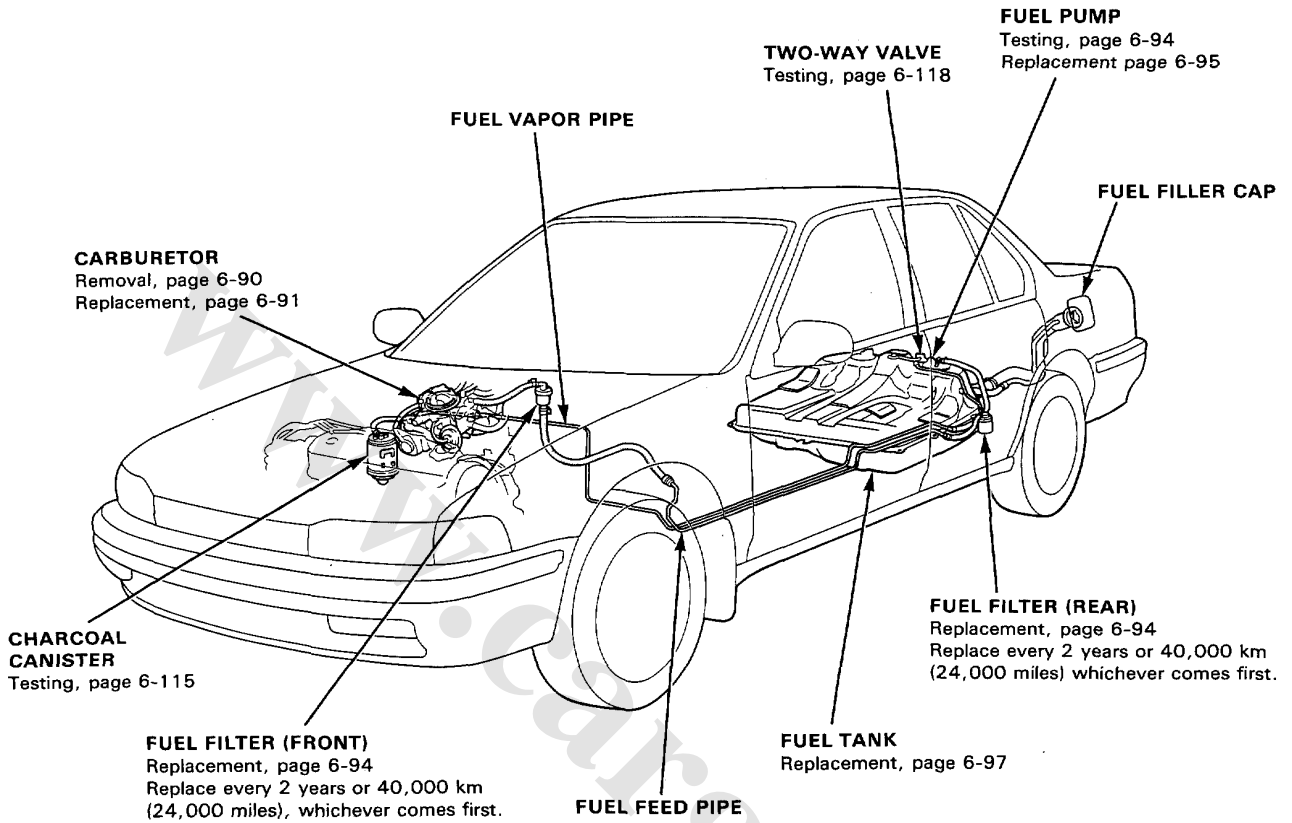

(LH)

(RH)

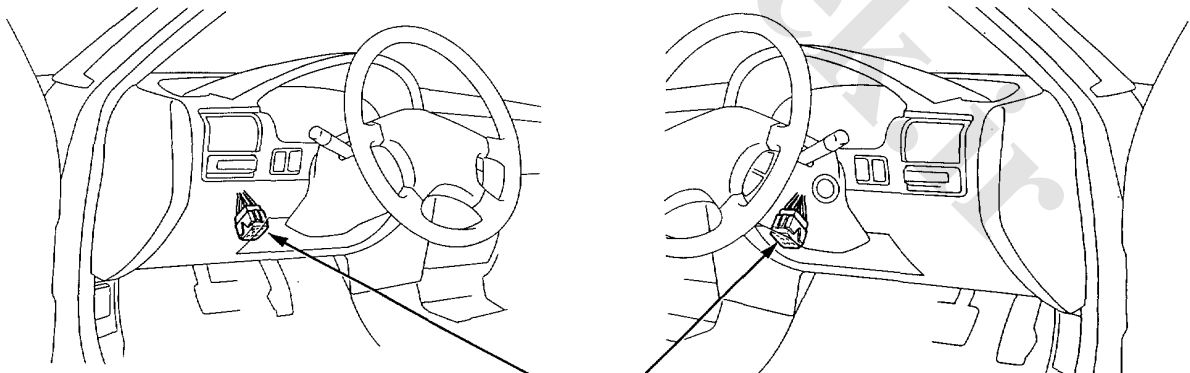


FUEL CUT-OFF RELAY
Testing, page 6-96

System Description


Vacuum Connections

(KX, KS, KG)

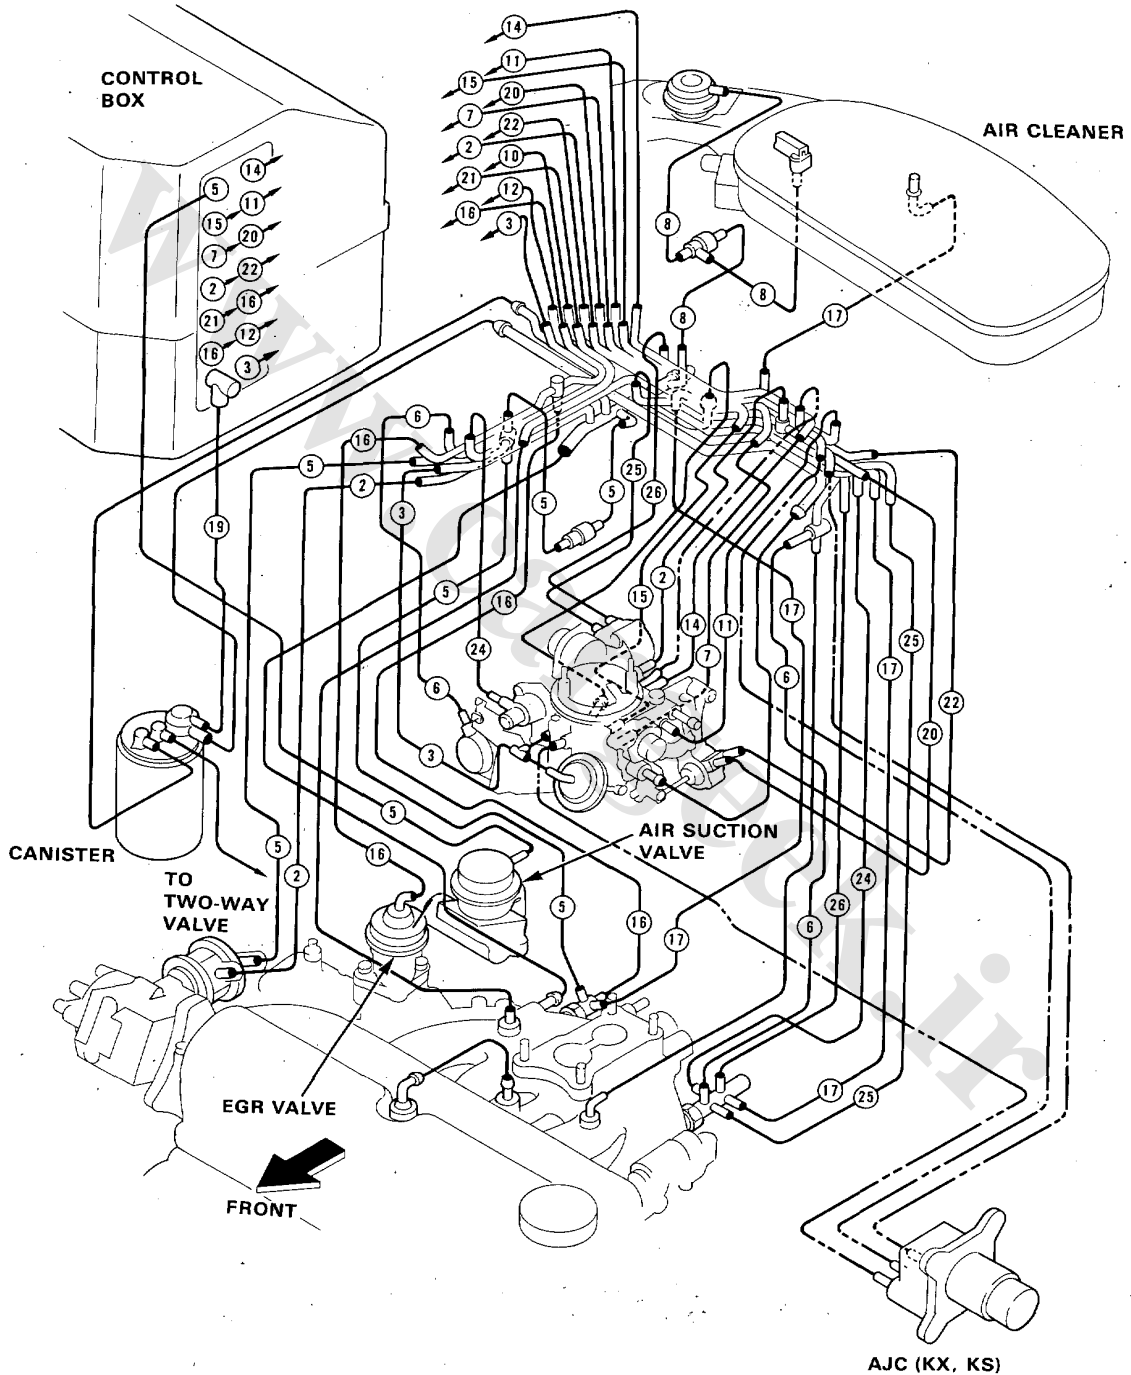




**Control Box
(KX, KS, KG)**

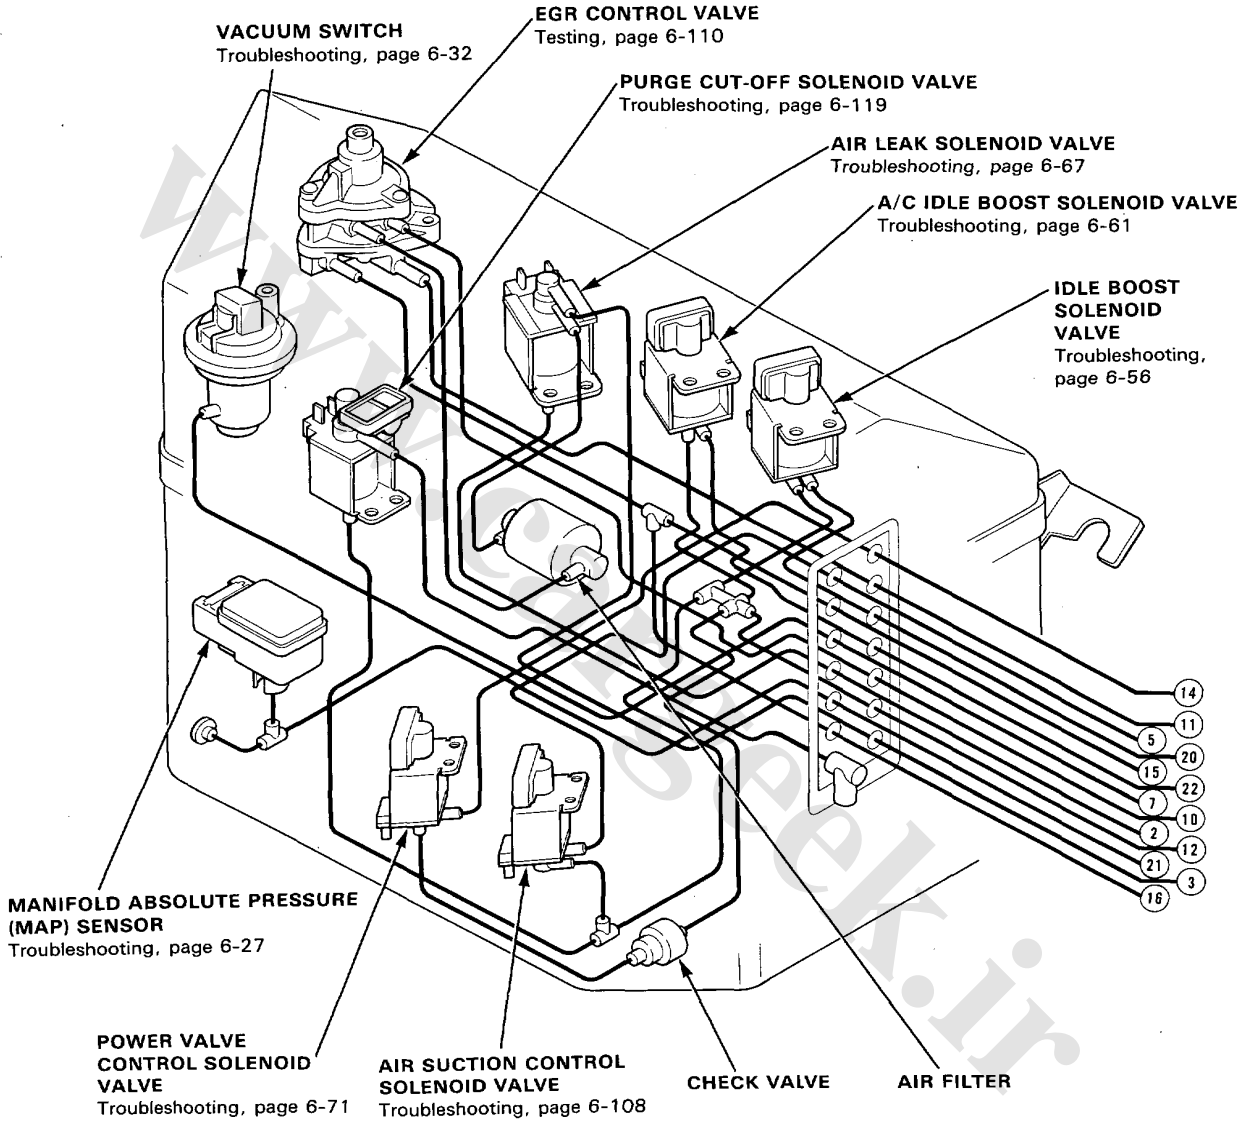

System Description


Vacuum Connections

(KO)

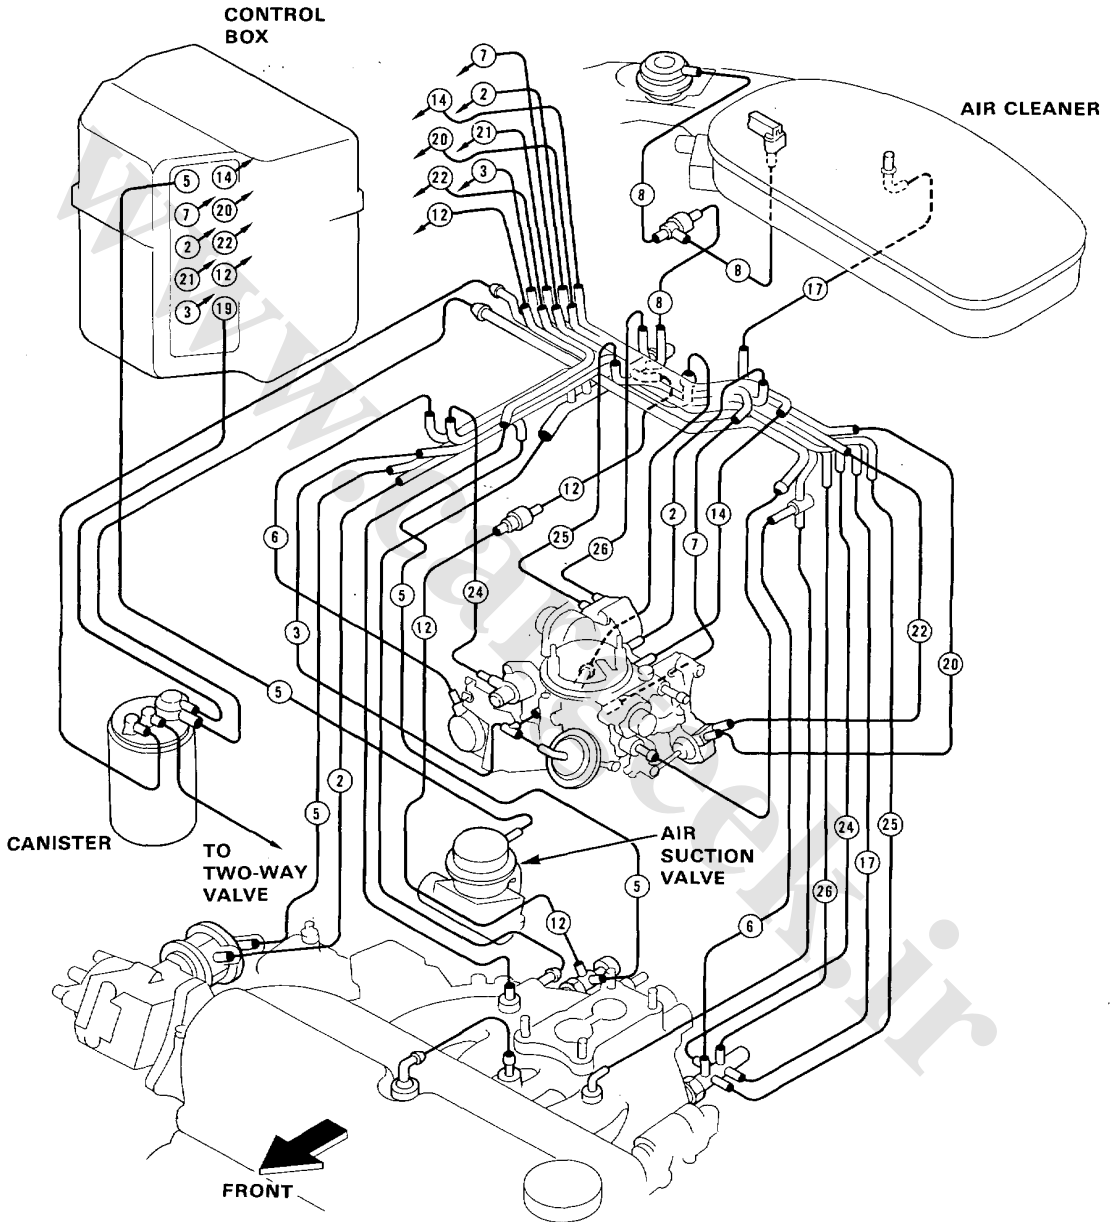




**Control Box
(KQ)**

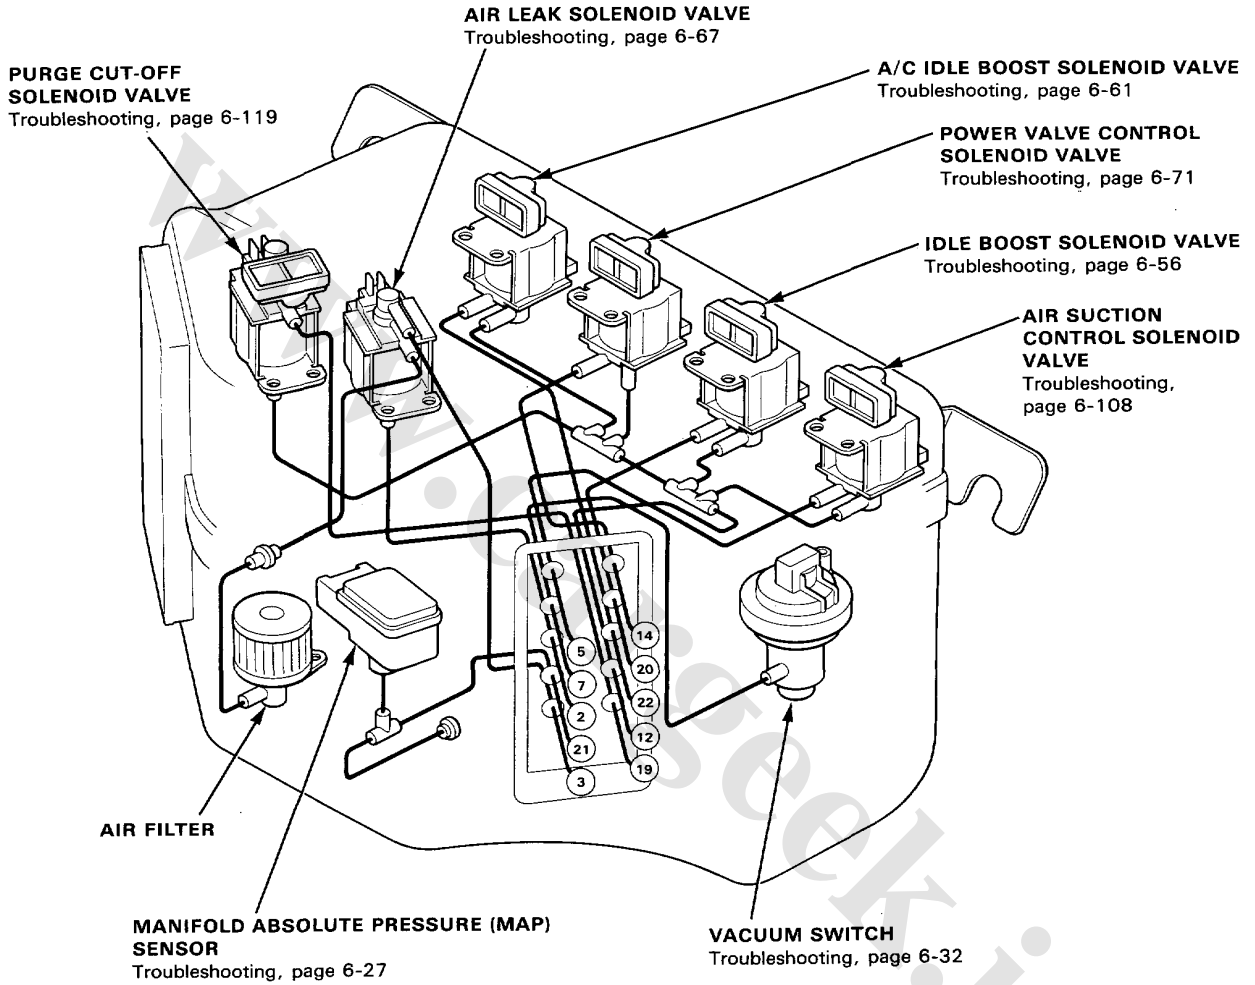

System Description


Vacuum Connection

(KT, KP)

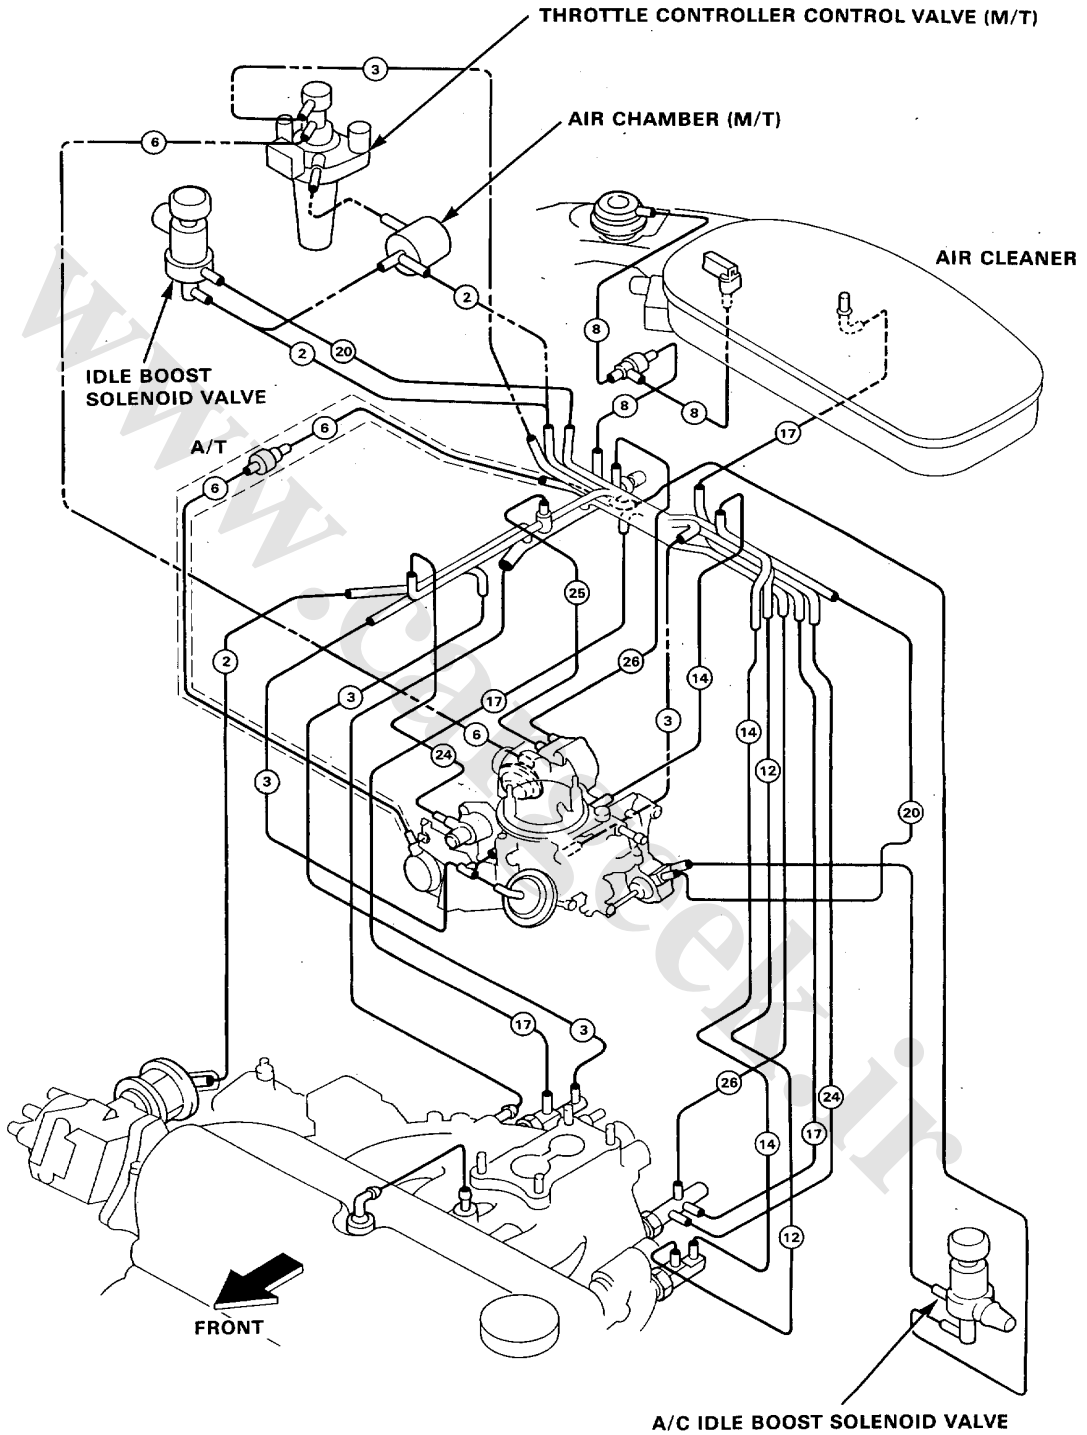




(KY, KF, KB, KE, KW)

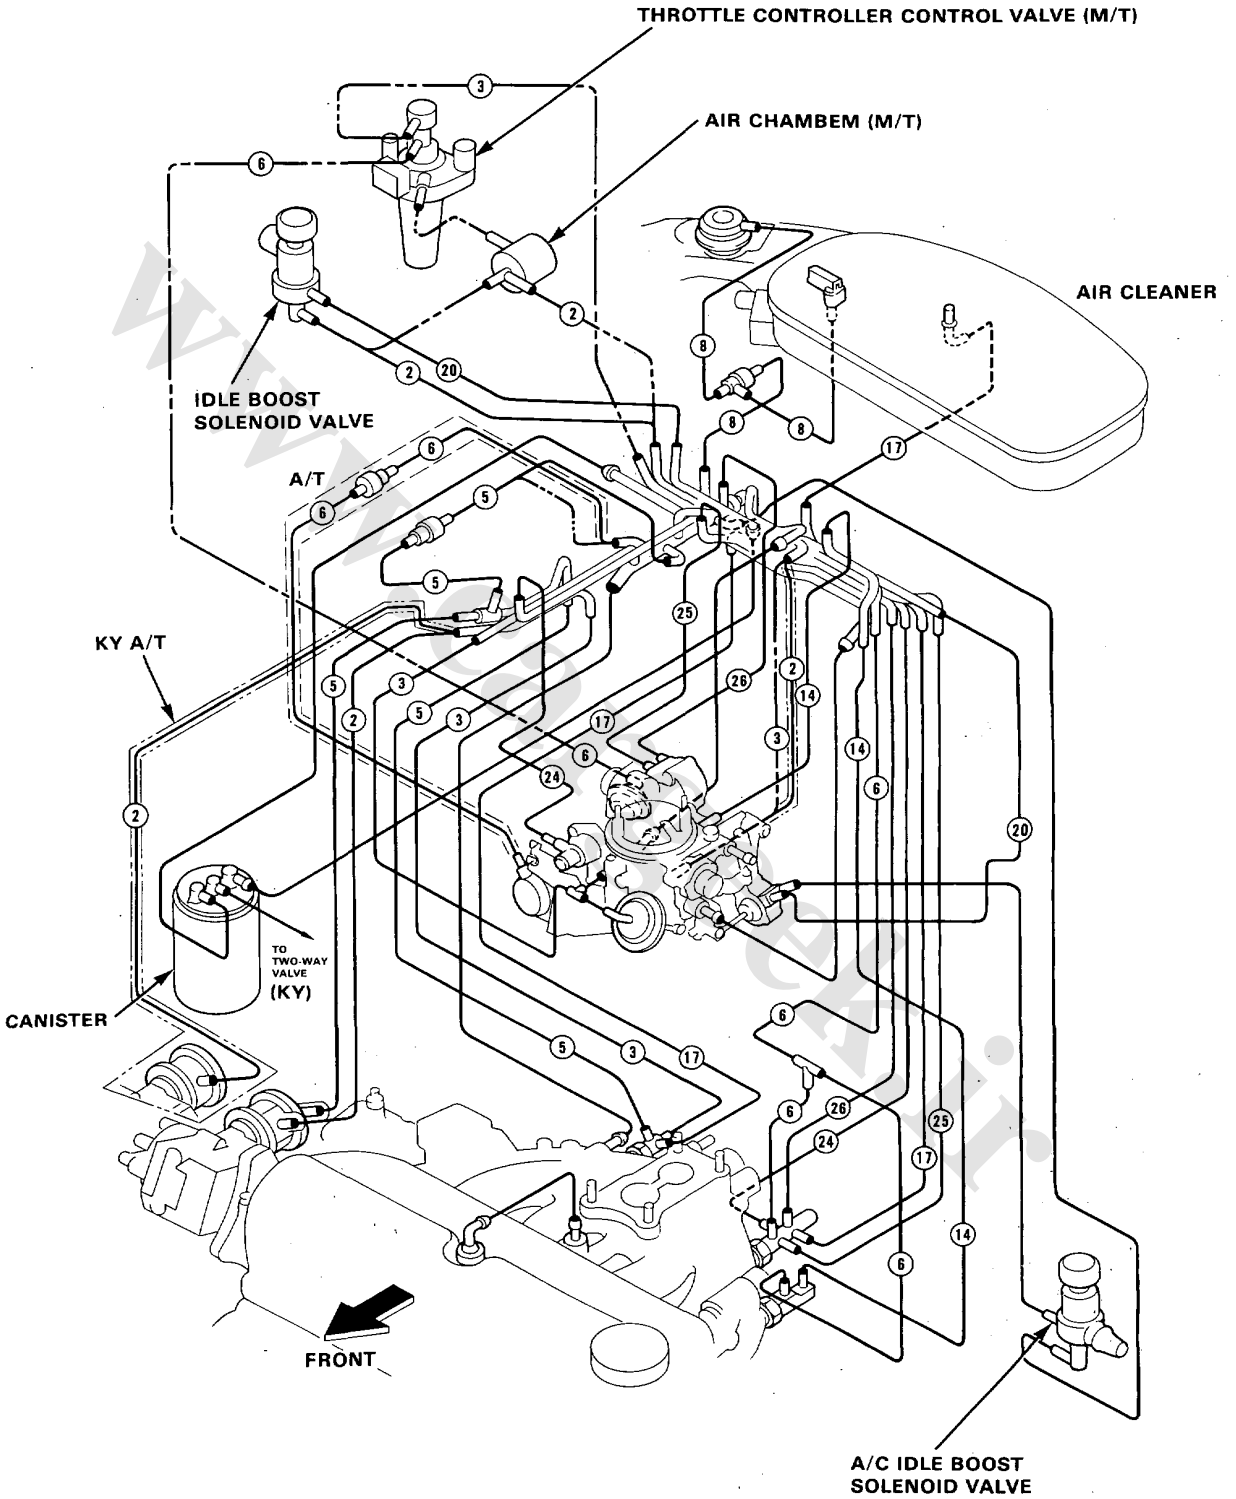

System Description

Vacuum Connections

(KX, KS, KG, KQ)

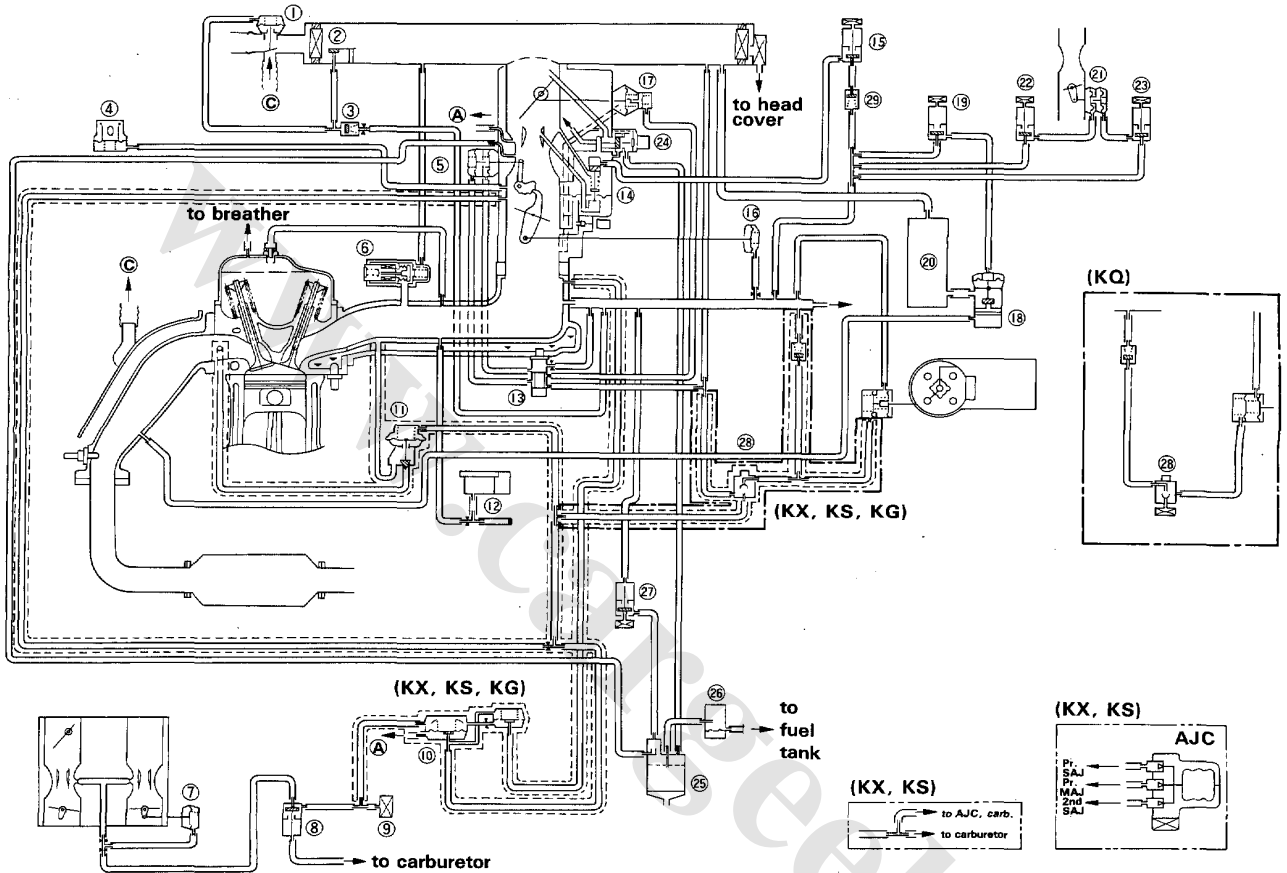


- ① AIR CONTROL DIAPHRAGM
- ② AIR BLEED VALVE
- ③ CHECK VALVE
- ④ VACUUM SWITCH
- ⑤ FAST IDLE UNLOADER
- ⑥ EACV
- ⑦ SECONDARY DIAPHRAGM
- ⑧ AIR LEAK SOLENOID VALVE
- ⑨ AIR FILTER
- ⑩ EGR CONTROL VALVE
- ⑪ EGR VALVE
- ⑫ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ⑬ THERMOVALVE A
- ⑭ POWER VALVE

- ⑮ POWER VALVE CONTROL SOLENOID VALVE
- ⑯ THROTTLE CONTROLLER
- ⑰ CHOKE OPENER
- ⑱ AIR SUCTION VALVE
- ⑲ AIR SUCTION CONTROL SOLENOID VALVE
- ⑳ AIR CHAMBER
- ㉑ IDLE BOOST THROTTLE CONTROLLER
- ㉒ IDLE BOOST SOLENOID VALVE
- ㉓ A/C IDLE BOOST SOLENOID VALVE
- ㉔ AIR VENT CUT-OFF SOLENOID VALVE
- ㉕ CANISTER
- ㉖ TWO-WAY VALVE
- ㉗ PURGE CUT-OFF SOLENOID VALVE
- ㉘ THERMOVALVE B
- ㉙ CHECK VALVE



(KF, KB, KE, KY, KW)

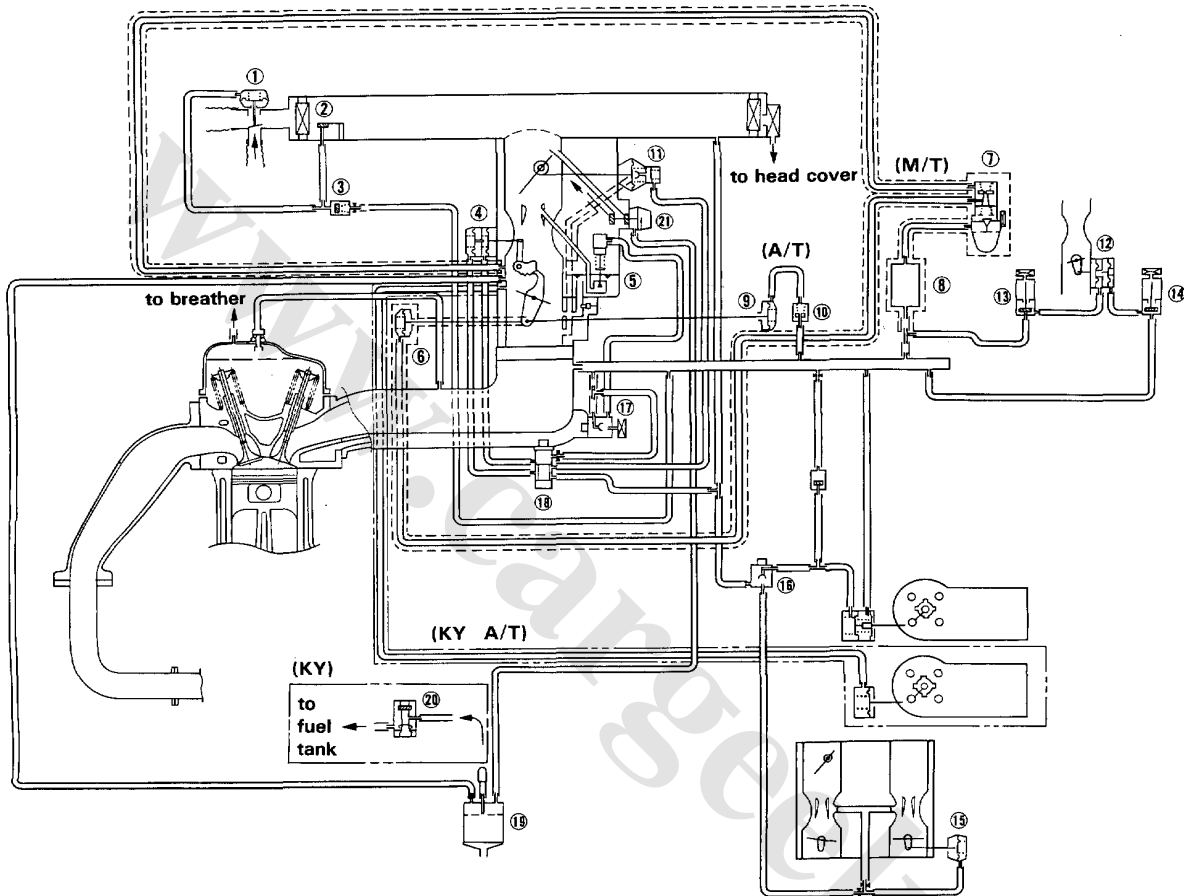

- ①AIR CONTROL DIAPHRAGM
- ②AIR BLEED VALVE
- ③CHECK VALVE
- ④FAST IDLE UNLOADER
- ⑤POWER VALVE
- ⑥THROTTLE CONTROLLER (M/T)
- ⑦THROTTLE CONTROLLER CONTROL VALVE (M/T)
- ⑧AIR CHAMBER (M/T)
- ⑨THROTTLE CONTROLLER (A/T)
- ⑩CHECK VALVE (A/T)


- ⑪CHOKE OPENER
- ⑫IDLE BOOST THROTTLE CONTROLLER
- ⑬IDLE BOOST SOLENOID VALVE
- ⑭A/C IDLE BOOST SOLENOID VALVE
- ⑮SECONDARY DIAPHRAGM
- ⑯THERMOVALVE D
- ⑰THERMOVALVE C
- ⑱THERMOVALVE A
- ⑲CANISTER
- ⑳TWO-WAY VALVE
- ㉑AIR VENT CUT-OFF SOLENOID VALVE

4.2

System Description

Vacuum Connections

(KP, KT)

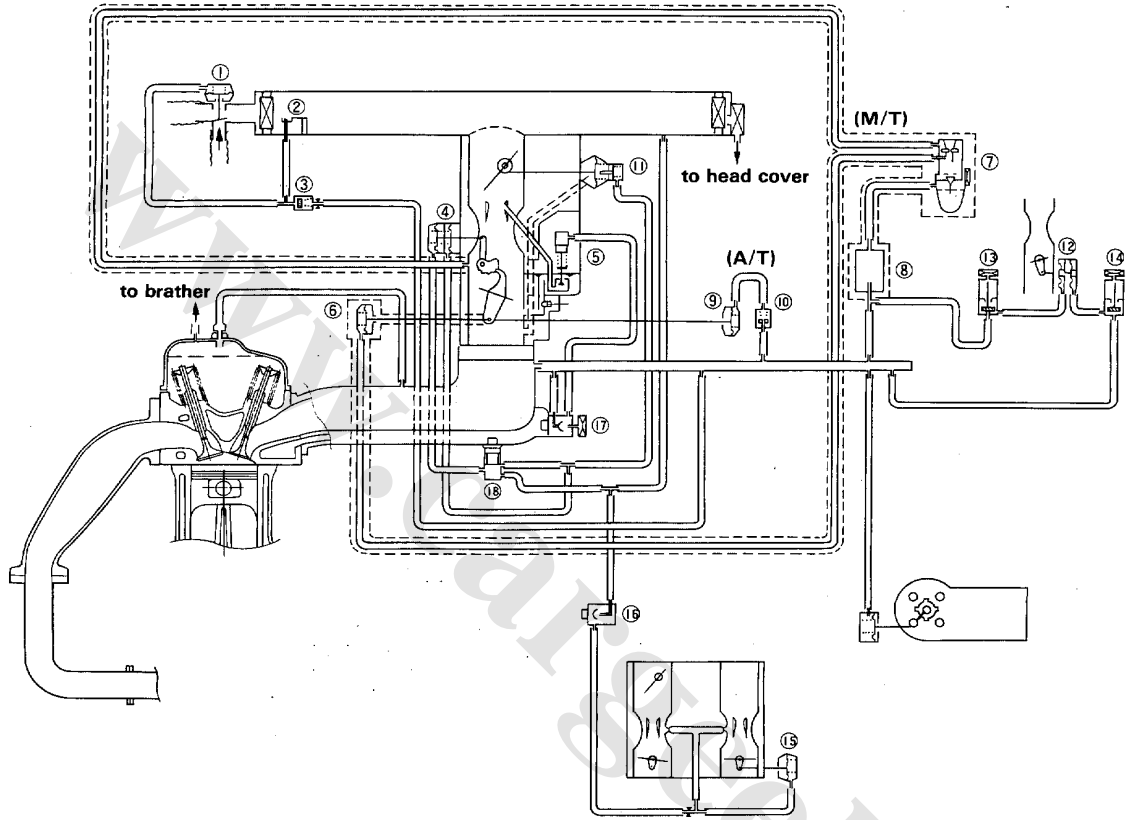

①AIR CONTROL DIAPHRAGM

②AIR BLEED VALVE

③CHECK VALVE

④FAST IDLE UNLOADER

⑤POWER VALVE

⑥THROTTLE CONTROLLER (M/T)

⑦THROTTLE CONTROLLER CONTROL VALVE (M/T)

⑧AIR CHAMBER (M/T)

⑨THROTTLE CONTROLLER (A/T)

⑩CHECK VALVE (A/T)

⑪CHOKE OPENER

⑫IDLE BOOST THROTTLE CONTROLLER

⑬IDLE BOOST SOLENOID VALVE

⑭A/C IDLE BOOST SOLENOID VALVE

⑮SECONDARY DIAPHRAGM

⑯THERMOVALVE D


⑰THERMOVALVE C

⑱THERMOVALVE A




Electrical Connections

(KX, KS, KG, KQ)

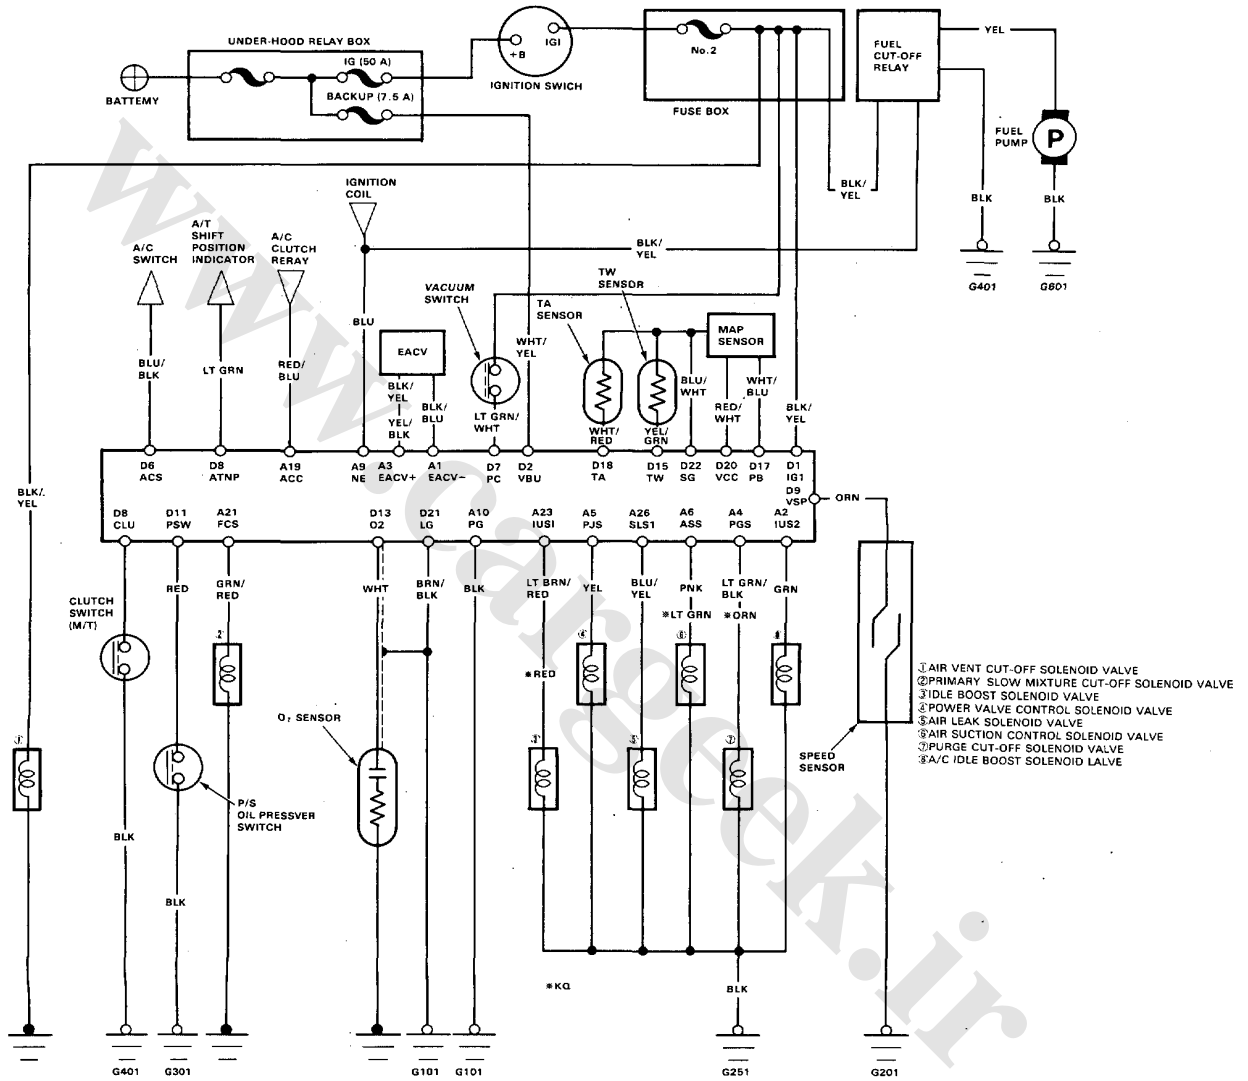

- ① AIR VENT CUT-OFF SOLENOID VALVE
- ② PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE
- ③ IDLE BOOST SOLENOID VALVE
- ④ POWER VALVE CONTROL SOLENOID VALVE
- ⑤ AIR LEAK SOLENOID VALVE
- ⑥ AIR SUCTION CONTROL SOLENOID VALVE
- ⑦ PURGE CUT-OFF SOLENOID VALVE
- ⑧ A/C IDLE BOOST SOLENOID VALVE

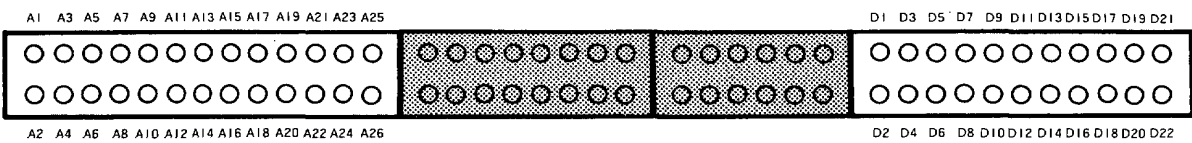


TERMINAL LOCATION

System Description

Electrical Connections

(Except KX, KS, KG, KQ)

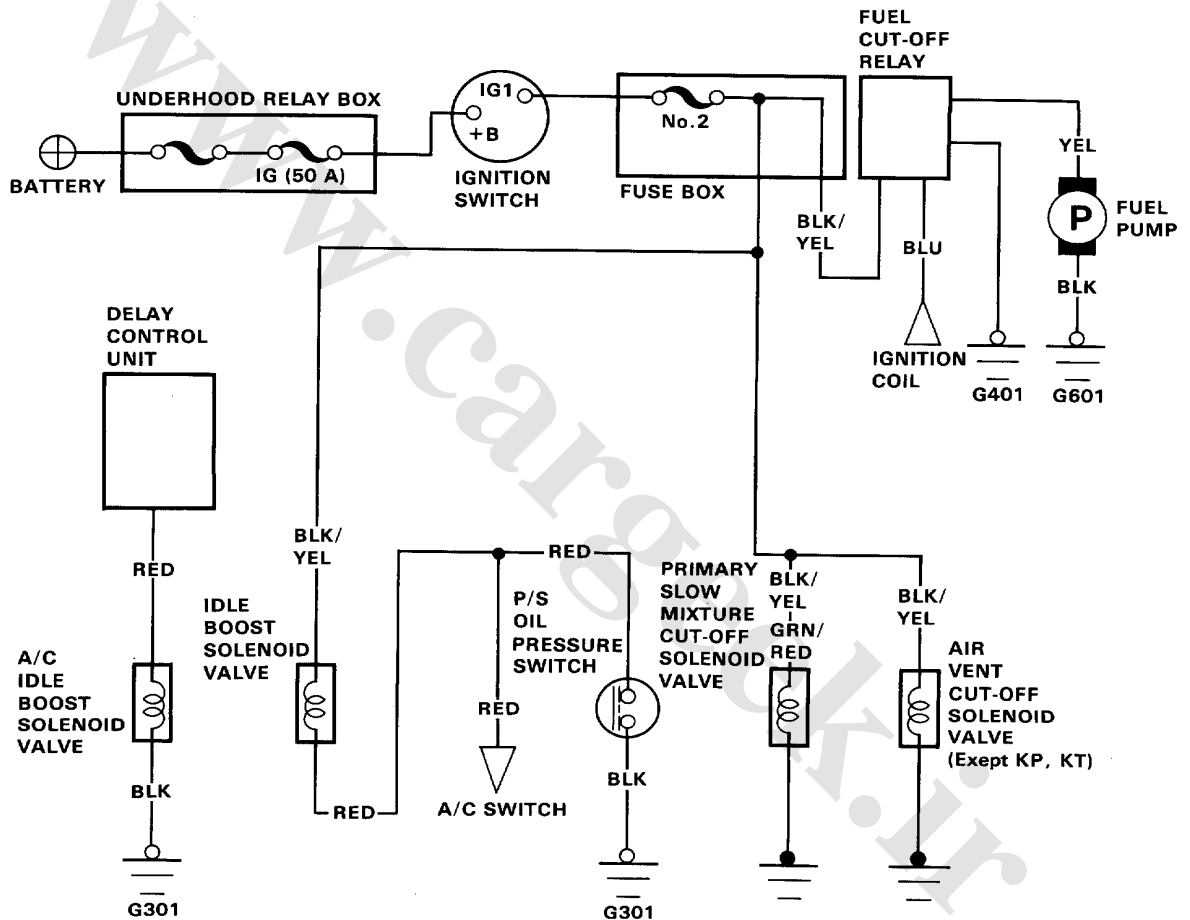




Troubleshooting

Self-Diagnostic Procedure

Turn the ignition on, pull down the passenger's side carpet from under the dashboard and observe the LED on the top of the control unit. The LED indicates a system failure code by its blinking frequency. The control unit LED can indicate any number of simultaneous component problems by blinking separate codes, one after another.

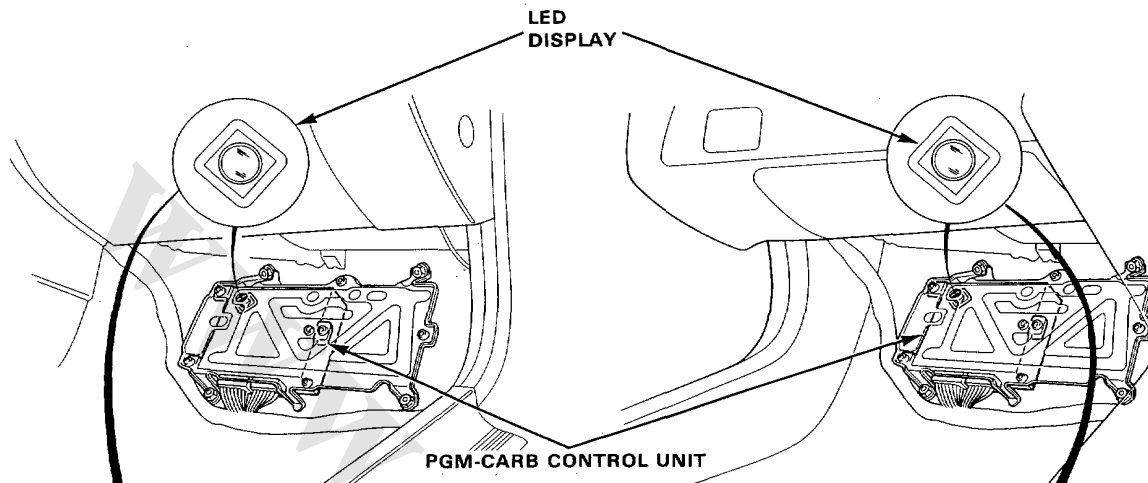

Separate Problems:

= See Problem CODE 1
 = See Problem CODE 2
 = See Problem CODE 3

Simultaneous Problems:

= See Problem CODE 1 and 2
 = See Problem CODE 2 and 4
 = See Problem CODE 1,2 and 3

SELF-DIAGNOSIS INDICATOR BLINKS	SYSTEM INDICATED	PAGE
1	OXYGEN CONTENT	6-24
2	VEHICLE SPEED PULSER	6-26
3	MANIFOLD ABSOLUTE PRESSURE	6-27
4	VACUUM SWITCH SIGNAL	6-32
5	MANIFOLD ABSOLUTE PRESSURE	6-29
6	COOLANT TEMPERATURE	6-36
8	IGNITION COIL SIGNAL	6-38
10	INTAKE AIR TEMPERATURE	6-39
14	ELECTRONIC AIR CONTROL	6-105



If CODE 7, 9, 11, 12, 13 (or more than 14), count the number of blinks again; if the indicator is in fact blinking these codes, substitute a known-good control unit and recheck. If the indication goes away, replace the original control unit. The control unit LED may come on, indicating a system problem, when, in fact, there is a poor or intermittent electrical connection. First, check the electrical connections, clean or repair connections if necessary.

(cont'd)

Troubleshooting

Self-Diagnostic Procedure (cont'd)


If the inspection for a particular code requires the ECU test harness, remove the door sill molding, the small cover on the kick panel, and pull the carpet back to expose the control unit. Unbolt the control unit bracket. Remove the control unit from the bracket. Connect the ECU test harness. Then check the system according to the procedure described for the appropriate code (s) listed on the following pages.

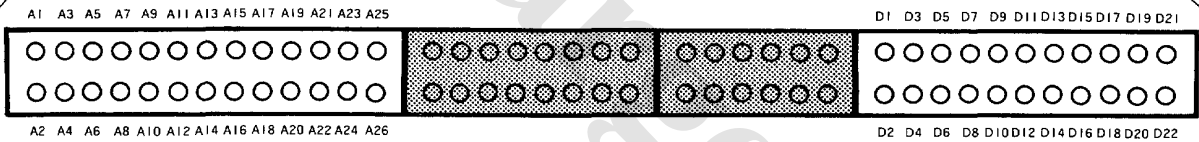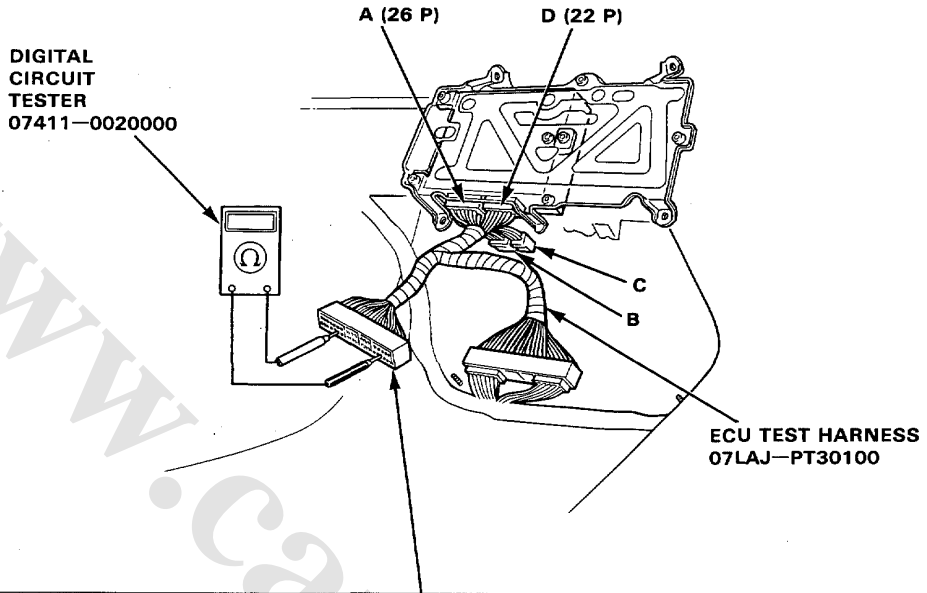

TERMINAL LOCATION

CAUTION:

- Puncturing the insulation on a wire can cause poor or intermittent electrical connections.
- For testing at connectors other than the ECU test harness, bring the tester probe into contact with the terminal from the connector side of wire harness connectors in the engine compartment. For female connectors, just touch lightly with the tester probe and do not insert the probe.

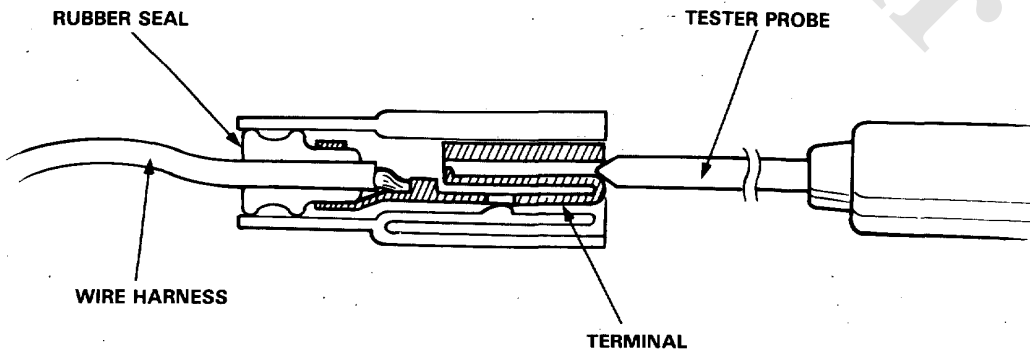



How to Read Flow Charts

A flow chart is designed to be used from start to final repair. It's like a map showing you the shortest distance. But beware; if you go off the "map" anywhere but a "stop" symbol, you can easily get lost.

START
(bold type) Describes the conditions or situation to start a troubleshooting flow chart.

ACTION Asks you to do something; perform a test, set up a condition, etc.

DECISION Asks you about the result of an action by giving an "answer" and asking did you get the same answer: Yes or No.

STOP
(bold type) The end of a series of actions and decisions, describes a final repair action and sometimes directs you to an earlier part of the flow to confirm your repair.

NOTE:

- The term "Intermittent Failure" is used several times in these charts. It simply means a system may have had a failure, but it checks out OK through all your tests. You may need to road test the car to reproduce the failure or if the problem was a loose connection, you may have unknowingly solved it while doing the tests.
- "Open" and "Short" are common electrical terms. An open is a break in a wire or at a connection. A short is an accidental connection of a wire to ground. In simple electronics, this usually means something won't work at all. In complex electronics (like electronic control units), this can sometimes mean something works, but not the way it's supposed to.
- If the electrical readings are not as specified when using the ECU test harness, check the test harness connections before proceeding.

Symptom-to System Chart

(KX, KS, KG, KQ)

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-CARB CONTROL SYSTEM						
		PGM-CARB CONTROL UNIT	OXYGEN SENSOR	VEHICLE SPEED PULSER	MANIFOLD ABSOLUTE PRESSURE SENSOR	VACUUM SWITCH	COOLANT TEMPERATURE SENSOR	IGNITION COIL SIGNAL
SYMPTOM		41	24	26	27, 29	32	36	38
	SELF-DIAGNOSIS INDICATOR (LED) BLINKS	① or *	①	②	③ or ⑤	④	⑥	⑧
	ENGINE WON'T START							
	DIFFICULT TO START ENGINE WHEN COLD	(BU)						
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFIC	(BU)						
	ROUGH IDLE	(BU)	③		②			
	WHEN WARM ENGINE SPEED TOO HIGH	(BU)						
	WHEN WARM ENGINE SPEED TOO LOW	(BU)						
FREQUENT STALLING	WHILE WARMING UP	(BU)			②		③	
	AFTER WARMING UP	(BU)			②			
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)	③	③	②			
	FAILS EMISSION TEST	(BU)	②		①			
	LOSS OF POWER	(BU)			③			

* CODE 7, 9, 11, 12, 13, or exceeds 14: count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good control unit and recheck. If the indication goes away, replace the original ECU.

(BU): When the self-diagnosis indicator is on, the back-up system is in operation.

Substitute a known-good control unit and recheck. If the indication goes away, replace the original ECU.



PGM-CARB CONTROL SYSTEM					EMISSION CONTROL				
INTAKE AIR TEMPERATURE SENSOR	A/T SHIFT POSITION SIGNAL	CLUTCH SWITCH SIGNAL	P/S OIL PRESSURE SWITCH	A/C SIGNAL	CARBURETOR	FUEL SUPPLY	AIR INTAKE	ELECTRONIC AIR CONTROL VALVE	OTHER EMISSION CONTROL
39	42	44	46	48	50	93	98	105	101
⑩								⑭	
					②	①			
					①				
③					①				③
③					①			③	③
			③	③	①				
					①				
					①			③	
					①			①	
					①	②			
					②		③	③	③
					③	②	①		②

PGM-CARB Control System

Troubleshooting Flow Chart — Oxygen Sensor

① Self-diagnosis LED blinks once: A problem in the Oxygen (O₂) Sensor circuit.

LED indicates CODE 1.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Warm up engine to normal operating temperature (the cooling fan comes on).

Does LED indicate CODE 1 ?

NO → Intermittent failure (test drive may be necessary).

YES

Inspect fuel pressure at the fuel filter.

Is pressure as specified ?

NO → Repair fuel supply system (page 6-93).

YES

Disconnect wire harness from indicated O₂ sensor.

Warm up engine to normal operating temperature again, then open the throttle wide open then close it.


Measure voltage between the connector terminal and body ground.

Is voltage above 0.6 V at wide open throttle and below 0.4 V when the throttle is quickly released ?

NO → Replace O₂ sensor.

YES

(To page 6-25)

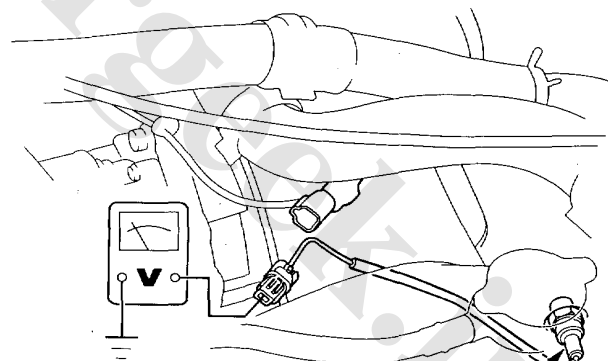

DIGITAL CIRCUIT TESTER
07411-002000

O₂ SENSOR
45 N·m (4.5 kg-m, 33 lb-ft)



(From page 6-24)

Stop engine.

Reconnect O₂ sensor.

Connect the ECU test harness between the control unit and connector (page 6-20).

Restart and warm up engine to normal operating temperature, then open the throttle wide open then close it.

Measure voltage between D13 (+) terminal and D21 (-) terminal.

Is voltage above 0.6 V at wide open throttle and below 0.4 V when the throttle is quickly released ?



NO

Repair open or short in WHT wire between control unit (D13) and the O₂ sensor.

YES

Substitute a known-good control unit and recheck. If symptom/indication goes away, replace the original control unit.

0.4-0.6 V ?
D13 (+) D21 (-)

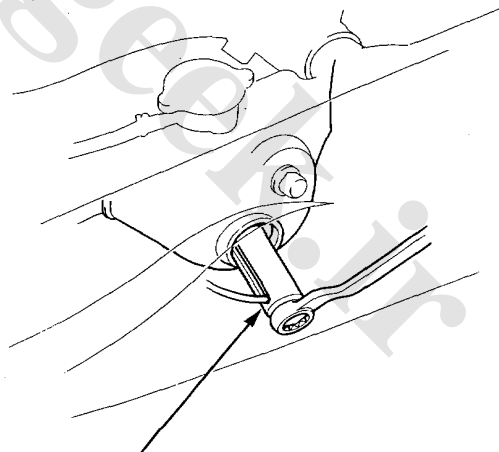

O₂ SENSOR SOCKET WRENCH
07LAA-PT50100
45 N·m (4.5 kg·m, 33 lb-ft)

PGM-CARB Control System

Troubleshooting Flow Chart — Vehicle Speed Sensor

② Self-diagnosis LED indicator blinks two times: A problem in the Vehicle Speed circuit.

LED indicates CODE 2.


Connect the ECU test harness between the control unit and connector (page 6-20).

Block rear wheels and set the parking brake. Jack up the front of the car and support with safety stands.

⚠ WARNING Block rear wheels before jacking up front of car.

Turn the ignition switch ON.

Slowly rotate front wheel and measure voltage between D9 (+) terminal and D21 (-) terminal.

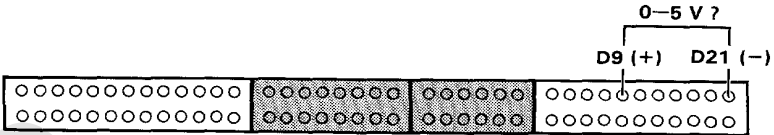

Does voltage pulse 0 V and 5 V ?

NO

YES

Substitute a known-good control unit and recheck. If prescribed voltage is now available replace the original control unit.

Turn the ignition switch OFF.

Disconnect D connector from the control unit only, not the wire harness.

Turn the ignition switch ON.

Slowly rotate front wheel and measure voltage between D1 (-) terminal and D9 (+) terminal.


Does voltage pulse 0 V and 12 V ?

NO

YES

Substitute a known-good control unit and recheck. If prescribed voltage is now available replace the original control unit.

—Repair open or short in ORN wire between control unit (D9) and the speed sensor.
—Faulty speed sensor.

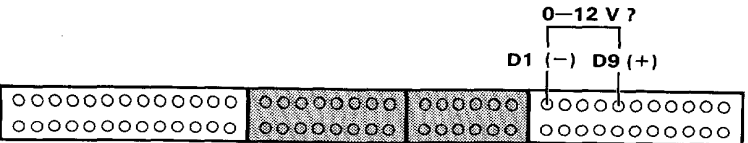




Troubleshooting Flow Chart — MAP Sensor

- ③ Self-diagnosis LED indicator blinks three times: Most likely an electrical problem in the Manifold Absolute Pressure (MAP) Sensor system.
- ⑤ Self-diagnosis LED indicator blinks five times: Most likely a mechanical problem (broken hose) in the Manifold Absolute Pressure (MAP) Sensor system.

③

(KX, KS, KG)

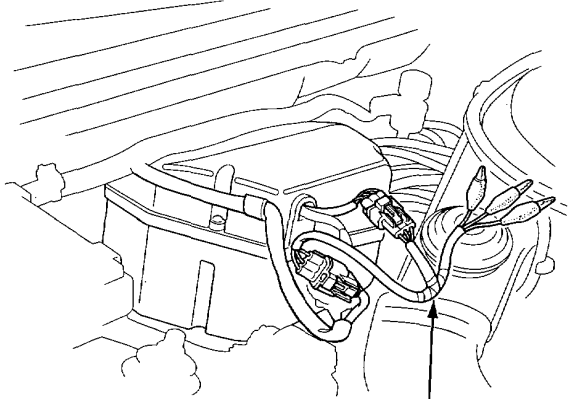

— Engine is warm and running.
— LED indicates CODE 3.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Start the engine and allow to idle.

Does LED indicate CODE 3 ?

NO

Intermittent failure (test drive may be necessary).

YES

Turn the ignition switch OFF.

Connect the test harness between the MAP sensor and wire harness.

Turn the ignition switch ON.

Measure voltage between RED (+) terminal and GRN (-) terminal.

Is there approx. 5 V ?

NO


Measure voltage between RED (+) terminal and body ground.

YES

Measure voltage between WHT (+) terminal and GRN (-) terminal.

(To page 6-28)

(KQ)

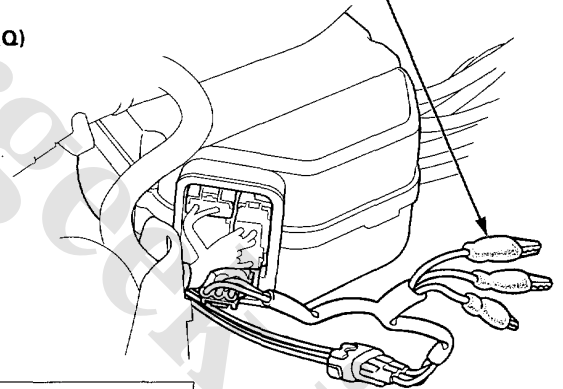

TEST HARNESS
07LAJ-PT3020

Is there approx. 5 V ?

YES

Repair open in BLU/WHT wire between control unit (D22) and MAP sensor.

NO


Turn the ignition switch OFF.

(To page 6-28)

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — MAP Sensor (cont'd)

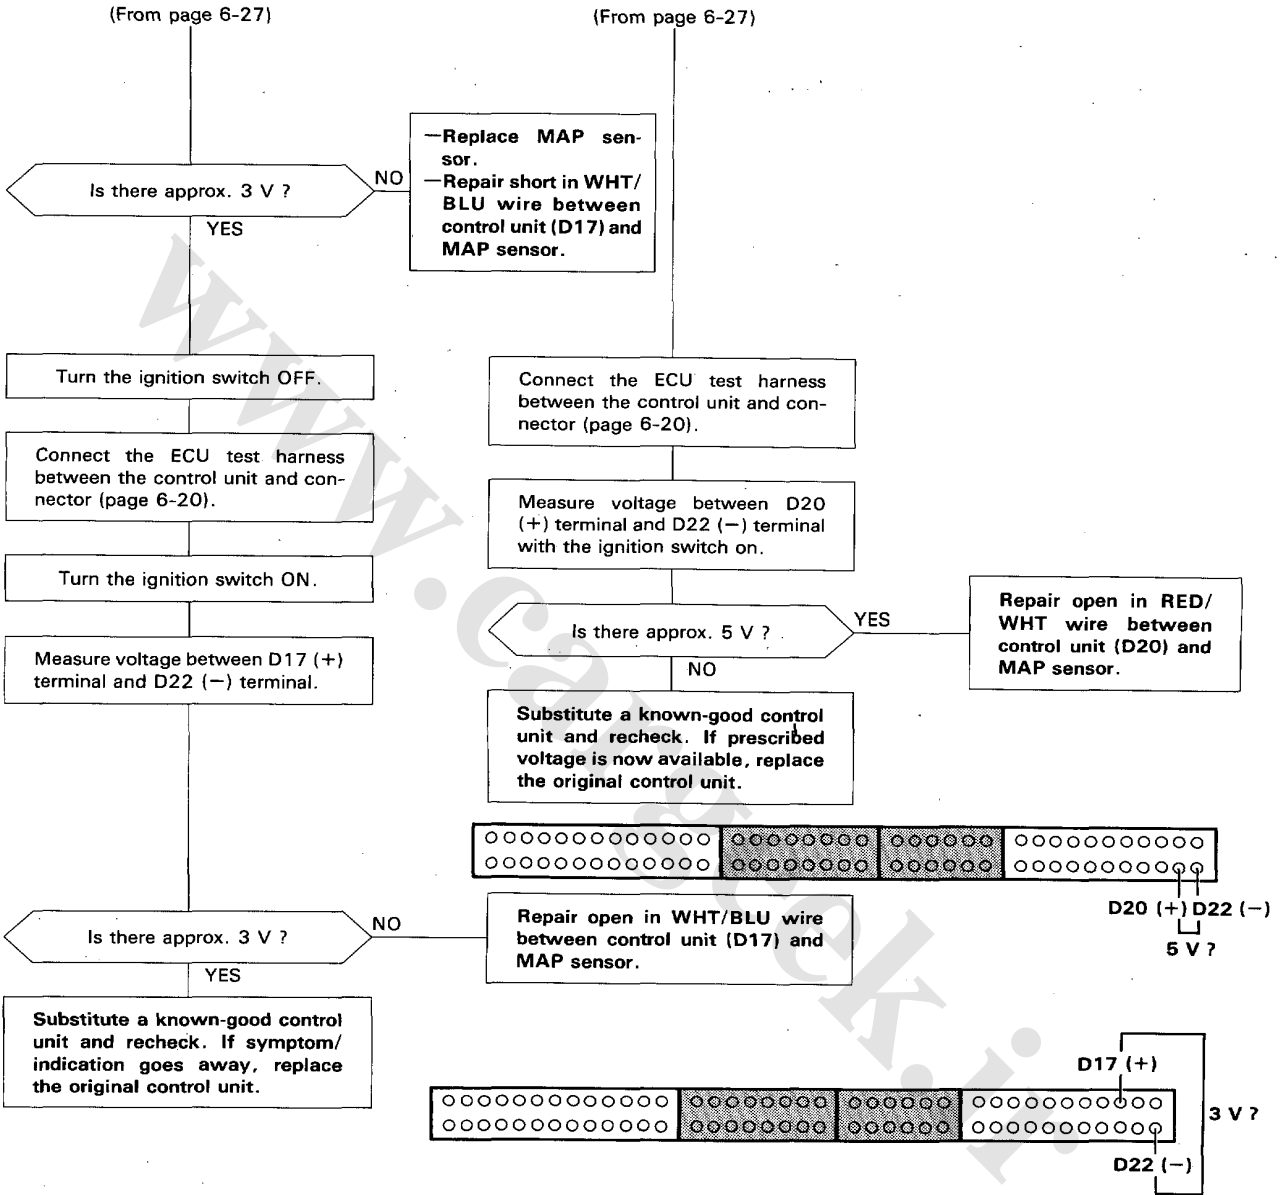



5

LED indicates CODE 5.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Start engine and keep engine speed at idle.

Does LED indicate CODE 5 ?

NO Intermittent failure (test drive may be necessary).

YES Stop engine.

Remove #21 hose from the vacuum hose manifold and connect a T-fitting from a vacuum gauge between the vacuum hose manifold and the MAP sensor.

Start engine.

Is there vacuum ?

NO Repair as necessary.

YES


Connect a vacuum pump to #21 hose and apply vacuum.

Does it hold vacuum ?


NO Replace #21 hose.

YES (To page 6-30)


(KX, KS, KG)

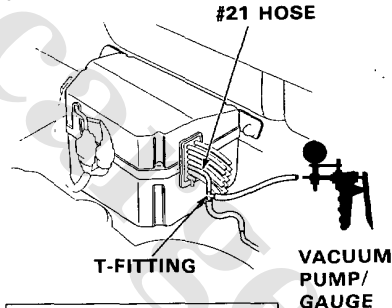


(KQ)

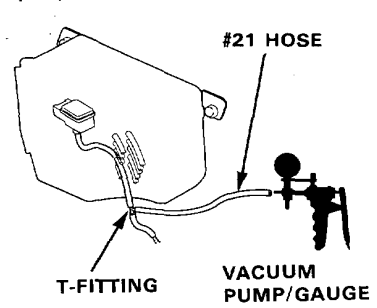

(KX, KS, KG)

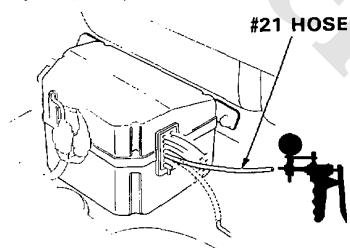

(KQ)

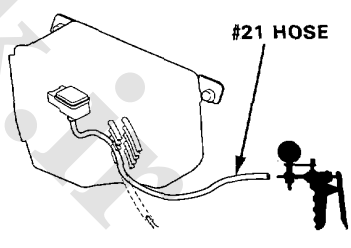

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — MAP Sensor (cont'd)

(From page 6-29)

Stop engine.

Connect the test harness between the MAP sensor and wire harness.

Turn the ignition switch ON.

Measure voltage between WHT (+) terminal and GRN (-) terminal.

Is there approx. 3 V ?


NO

Replace MAP sensor.

YES


Substitute a known-good control unit and recheck. If symptom/indication goes away, replace the original control unit.

(KX, KS, KG)

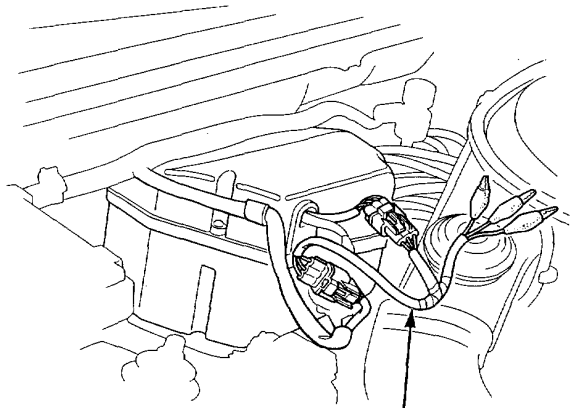

TEST HARNESS
07LAJ-PT30200

(KQ)

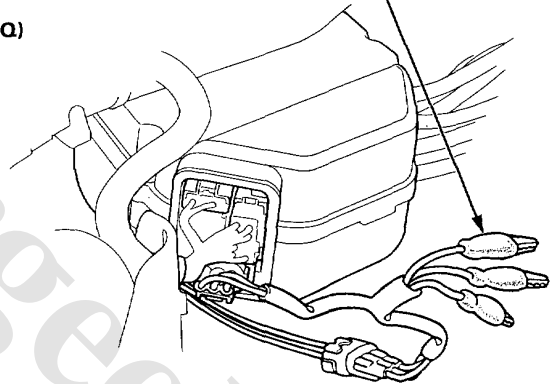

PGM-CARB Control System

Troubleshooting Flow Chart — Vacuum Switch

④ Self-diagnosis LED indicator blinks four times: A problem in the vacuum switch.
(KX, KS, KG)


—Engine is warm running.
—LED indicates CODE 4.

Turn the ignition switch OFF.


Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

KX, KS, KG:
Disconnect the 10P connector on the control box.
KQ:
Disconnect the 2P connector on the control box.


KX, KS, KG:
Measure resistance between No.8 terminal and No.9 terminal on the control box.
KQ:
Measure resistance between No.1 terminal and No.2 terminal on the control box.

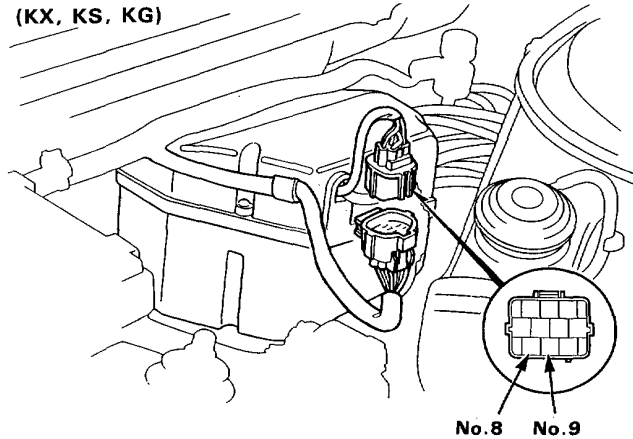

(KQ)

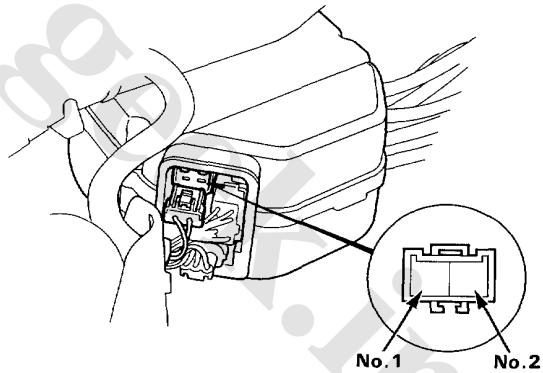

(To page 6-33)

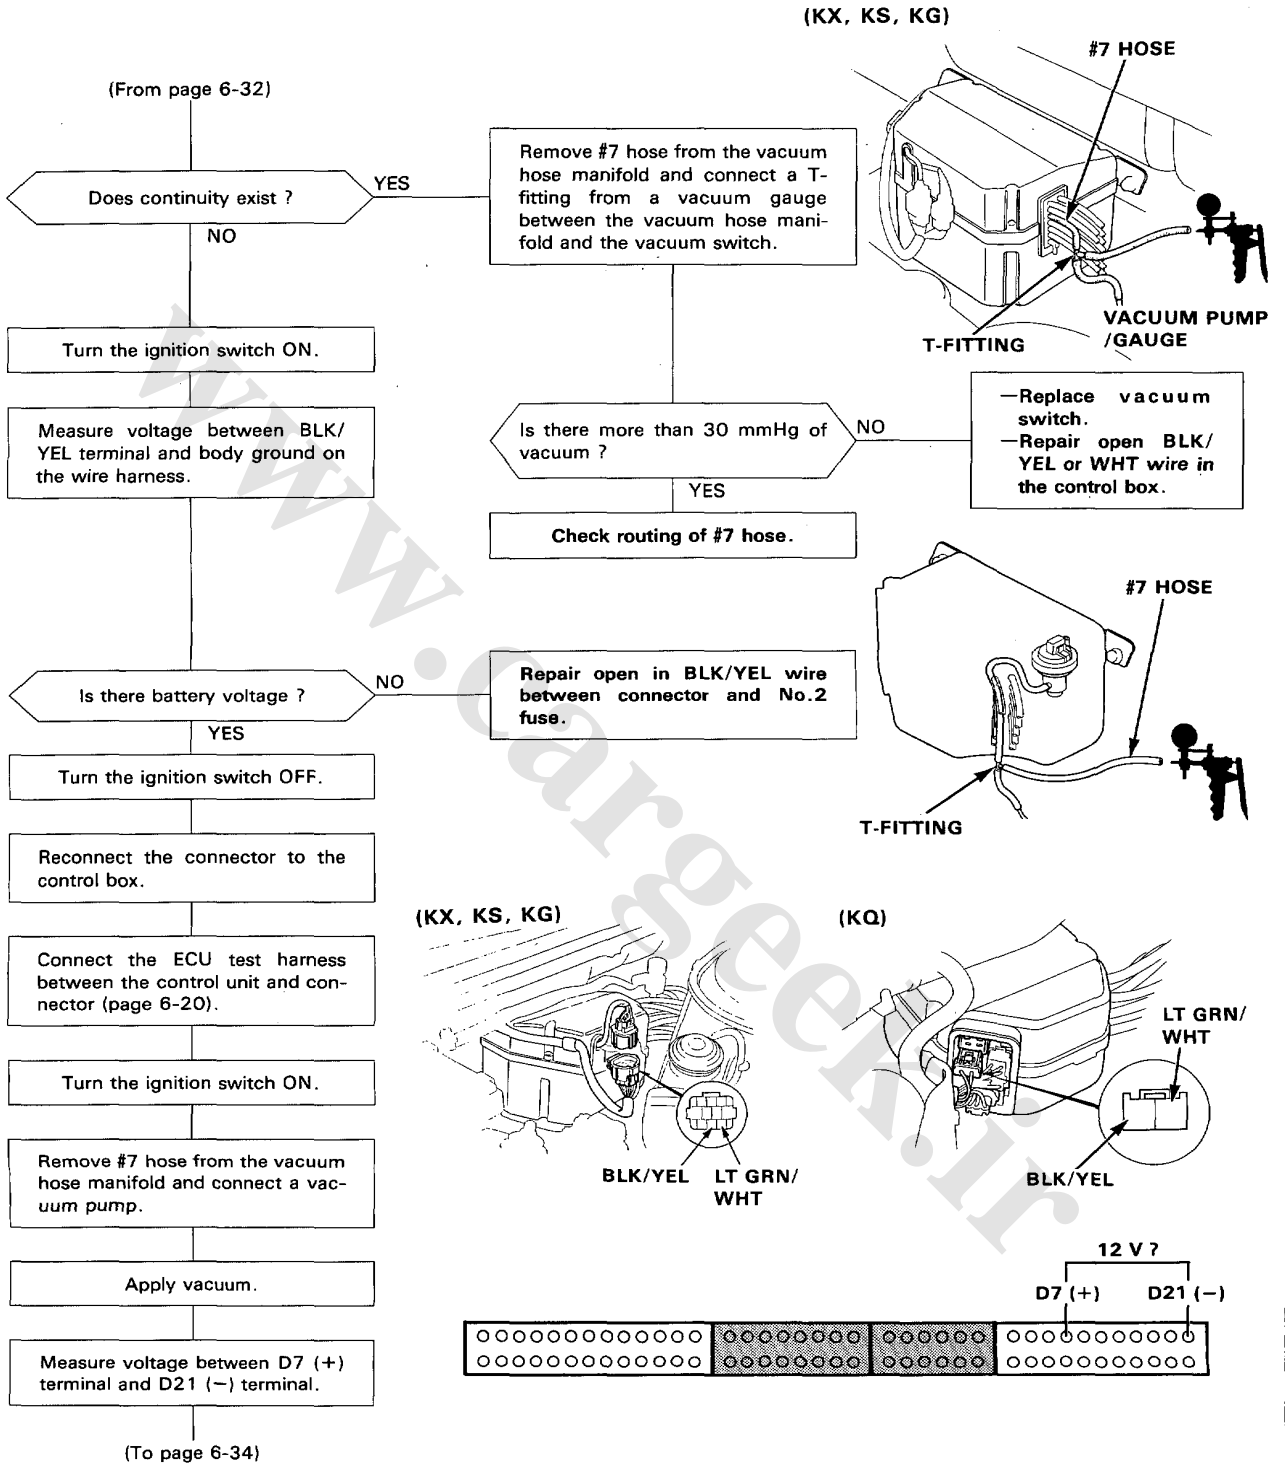

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — Vacuum Switch (cont'd)

(From page 6-33)

Is there battery voltage ?

NO

Repair open in LT GRN/WHT wire between control unit (D7) and vacuum switch.

YES

Substitute a known-good control unit and recheck. If symptom/indication goes away, replace the original control unit.

PGM-CARB Control System

Troubleshooting Flow Chart — TW Sensor

⚙️ Self-diagnosis LED indicator blinks six times: Most likely a problem in the Coolant Temperature (TW) Sensor circuit.

LED indicates CODE 6.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Turn the ignition switch ON.

Does LED indicates CODE 6 ?

NO — Intermittent failure (test drive may be necessary).

YES — Warm up engine to normal operating temperature (the cooling fan comes on).

Disconnect the 2P connector on the TW sensor.

Measure resistance between the 2 terminals on the TW sensor.

Is there 200–400 Ω ?

NO — Replace TW sensor.


YES — Measure voltage between YEL/GRN (+) terminal and body ground.



Is there approx. 5 V ?

NO — Turn the ignition switch OFF.

YES — (To page 6-37)

Connect the ECU test harness between the control unit and connector (page 6-20). (To page 6-37)

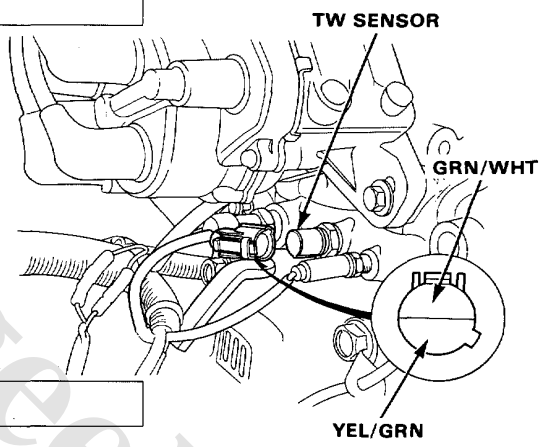

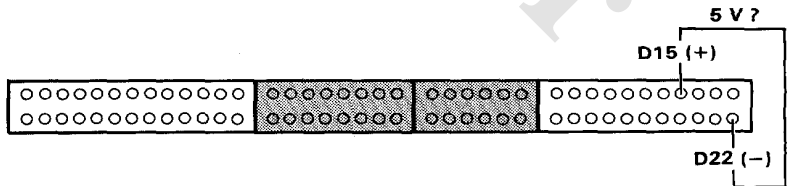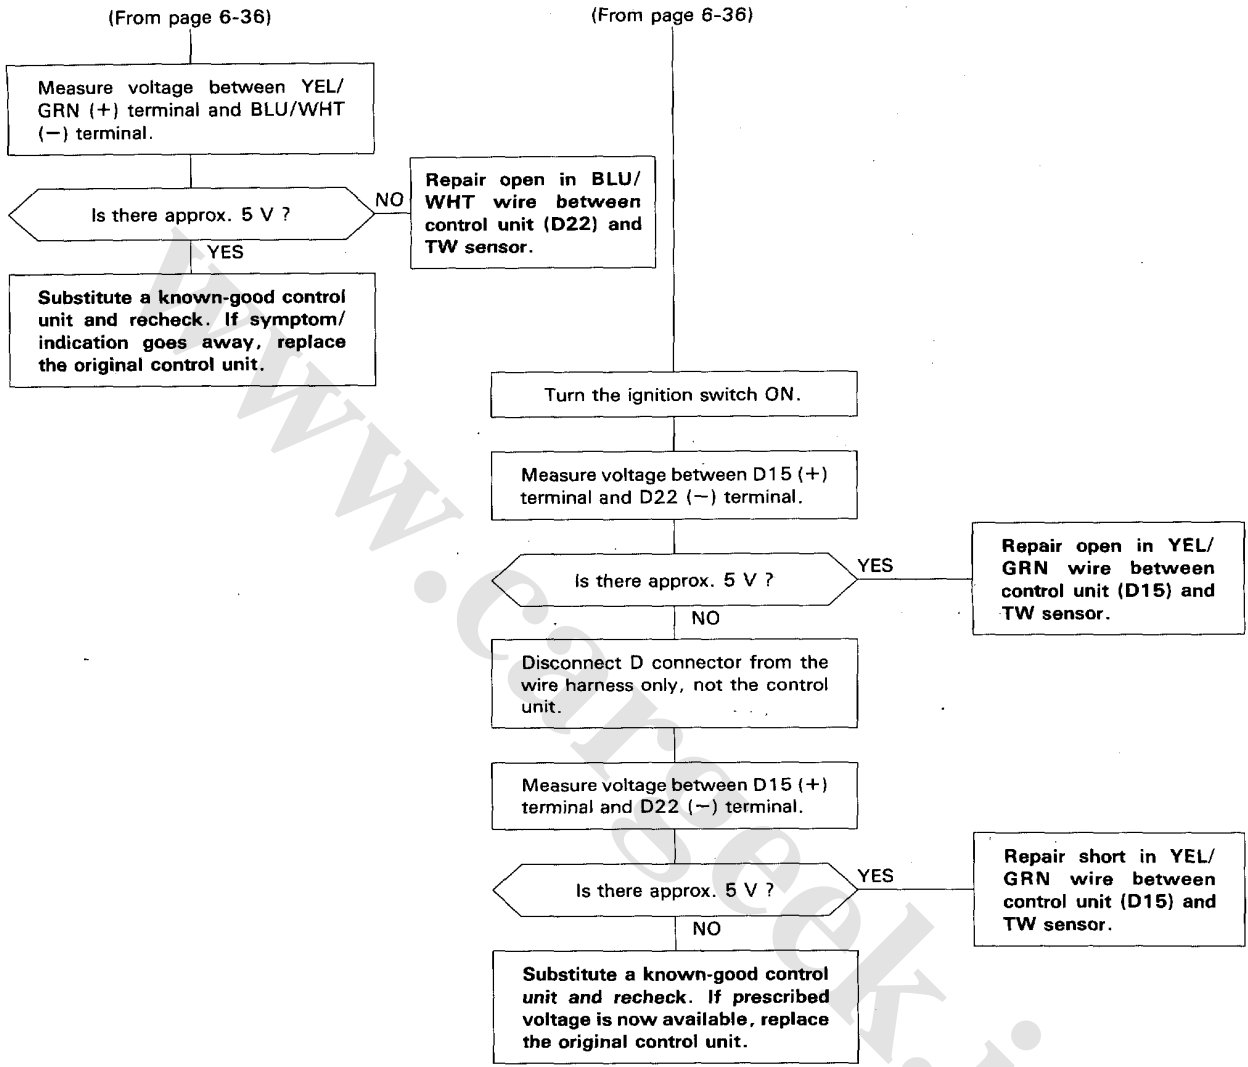

PGM-CARB Control System

Troubleshooting Flow Chart — Ignition Coil Signal

8 Self-diagnosis LED indicator blinks eight times: A problem in the ignition coil signal circuit.

LED indicates CODE 8.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Turn the ignition switch ON.

Does LED indicates CODE 8 ?

NO Intermittent failure (test drive may be necessary).

YES

Start the engine.

Connect the ECU test harness between the control unit and connector (page 6-20).


Measure voltage between A9 (+) terminal and D21 (-) terminal.

Is voltage above approx. 8 V ?

NO Repair short or open BLU wire between control unit (A9) and ignition coil.

YES

Substitute a known-good control unit and recheck. If symptom/indication goes away, replace the original control unit.

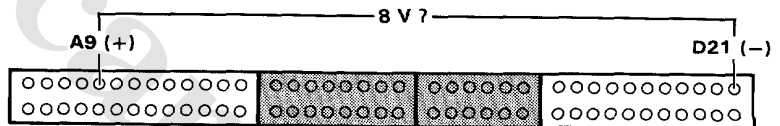



Troubleshooting Flow Chart — TA Sensor

10 Self-diagnosis LED indicator blinks ten times: Most likely a problem in the Intake Air Temperature (TA) Sensor circuit.

LED indicates CODE 10.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Turn the ignition switch ON.

Does LED indicates CODE 10 ?

NO → Intermittent failure (test drive may be necessary).

YES → Disconnect the 2P connector on the TA sensor.

Measure resistance between the 2 terminals on the TA sensor.

Is there 1–4 kΩ ?

NO → Replace TA sensor.


YES → Measure voltage between WHT/RED (+) terminal and body ground.

Is there approx. 5 V ?

NO → Turn the ignition switch OFF.

YES → Measure voltage between WHT/RED (+) terminal and BLU/WHT (-) terminal.

Connect the ECU test harness between the control unit and connector (page 6-20).

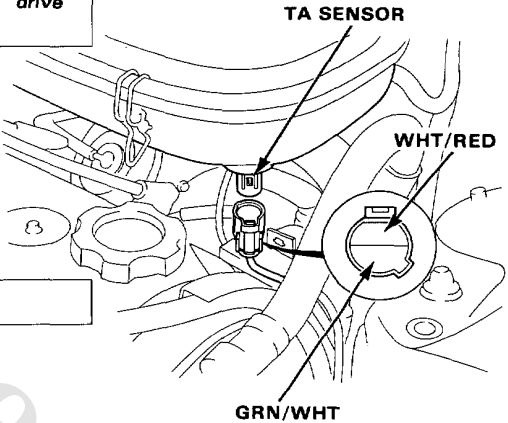



(To page 6-40)

(To page 6-40)

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — TA Sensor (cont'd)

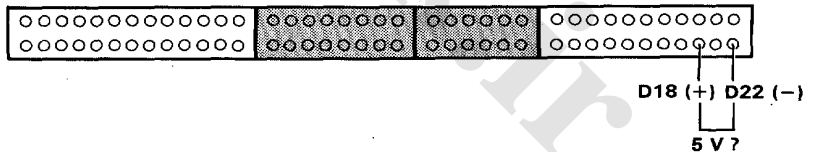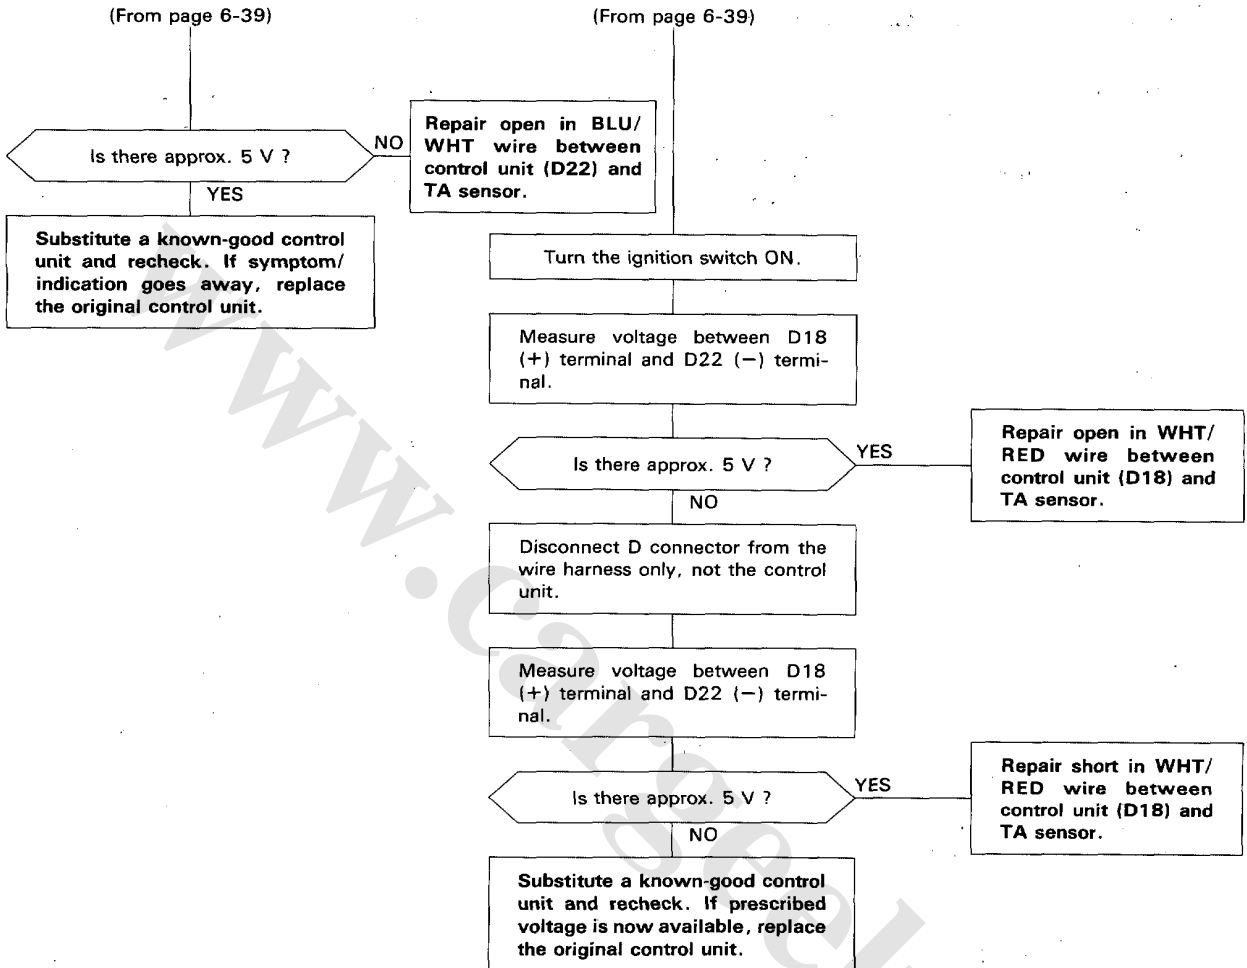




Input Troubleshooting Flow Chart — Power Source (IG1, Bat) and Ground

Inspection of Power Source (IG1, Bat) and Ground.

Connect the ECU test harness between the control unit and connector (page 6-20).


Check for continuity between the body ground and the following terminals individually: ●A10, ●D21.

Does continuity exist ?

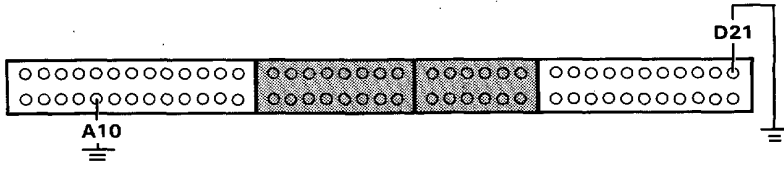

—Repair open in BRN/BLK wire between control unit (D21) and G101.
—Repair open in BLK wire between control unit (A10) and G101.

Measure voltage between D2 (+) terminal and A10 (-) terminal.

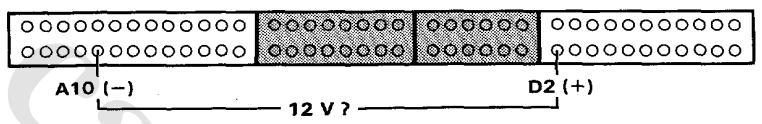

Is there battery voltage ?

Inspect BACK UP fuse.


Turn the ignition switch ON.

Is BACK UP fuse OK ?

Replace fuse.

Repair open in WHT/YEL wire between BACK UP fuse and control unit (D2).

Measure voltage between D1 (+) terminal and A10 (-) terminal.

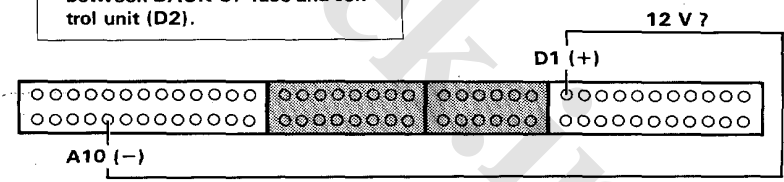

Is there battery voltage ?

Turn the ignition switch OFF.

Power Source (IG1, Bat) and Ground are OK.

Inspect No.2 fuse.

Is No.2 fuse OK ?

Replace fuse.

Repair open in BLK/YEL wire between No.2 fuse and control unit (D1).

PGM-CARB Control System

Input Troubleshooting Flow Chart — A/T Shift Position Signal (A/T only) —

Inspection of A/T Shift Position Signal.

Turn the ignition switch ON.

Observe the A/T shift indicator and select each position separately.

Does the indicator light properly ?

NO — See A/T shift position indicator inspection (section 16).


YES

Turn the ignition switch OFF.

Connect the ECU test harness between the control unit and connector. But disconnect D connector from the wire harness only, not the control unit (page 6-20).

Turn the ignition switch ON.

Measure voltage between D8 (+) terminal and A10 (-) terminal.

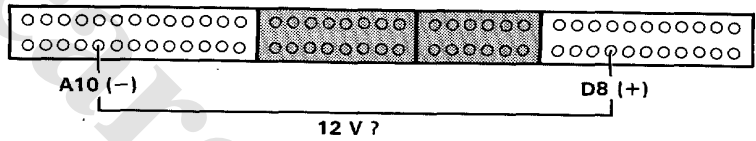


Is there battery voltage ?

NO — Substitute known-good control unit and recheck. If prescribed voltage is now available, replace the original control unit.


YES

Reconnect D connector to the wire harness.

Measure voltage between D8 (+) terminal and D21 (-) terminal in Neutral position.

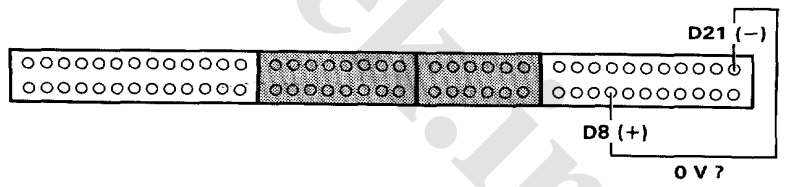

(To page 6-43)

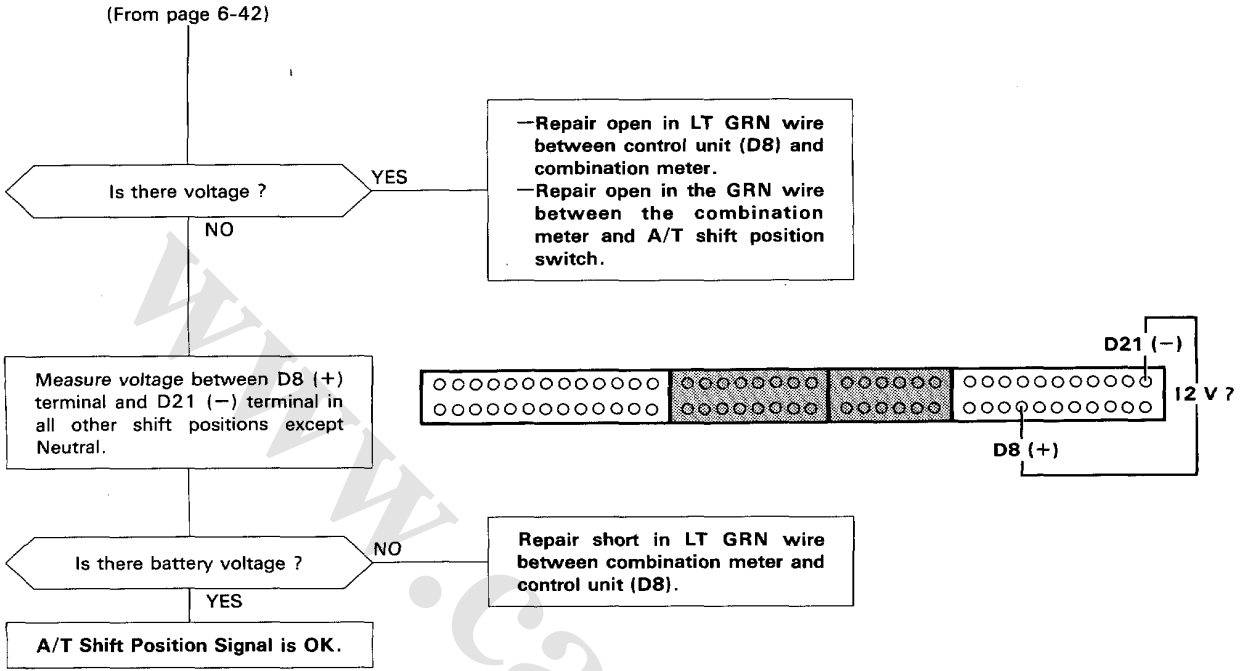

PGM-CARB Control System


Input Troubleshooting Flow Chart — P/S Oil Pressure Switch Signal —

Inspection of P/S Oil Pressure Switch Signal.

Connect the ECU test harness between the control unit and connector (page 6-20).

Turn the ignition switch ON.

Measure voltage between D11 (+) terminal and D21 (-) terminal.

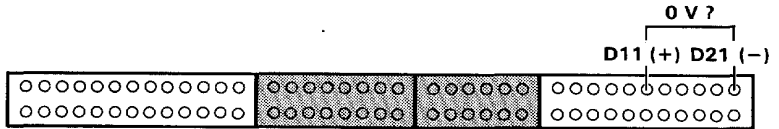

Is there voltage ?

YES

Turn the ignition switch OFF.

Disconnect the 2P connector on the P/S oil pressure switch.

Connect RED terminal to BLK terminal.

Turn the ignition switch ON.

Is there voltage ?

NO

Replace the P/S oil pressure switch.


YES


- Repair open in RED wire between control unit (D11) and P/S oil pressure switch.
- Repair open in BLK wire between P/S oil pressure switch and G301.

Turn steering wheel slowly.

(To page 6-47)

P/S OIL PRESSURE SWITCH

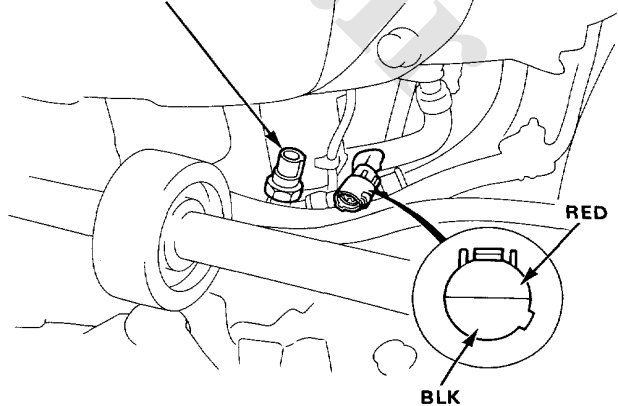

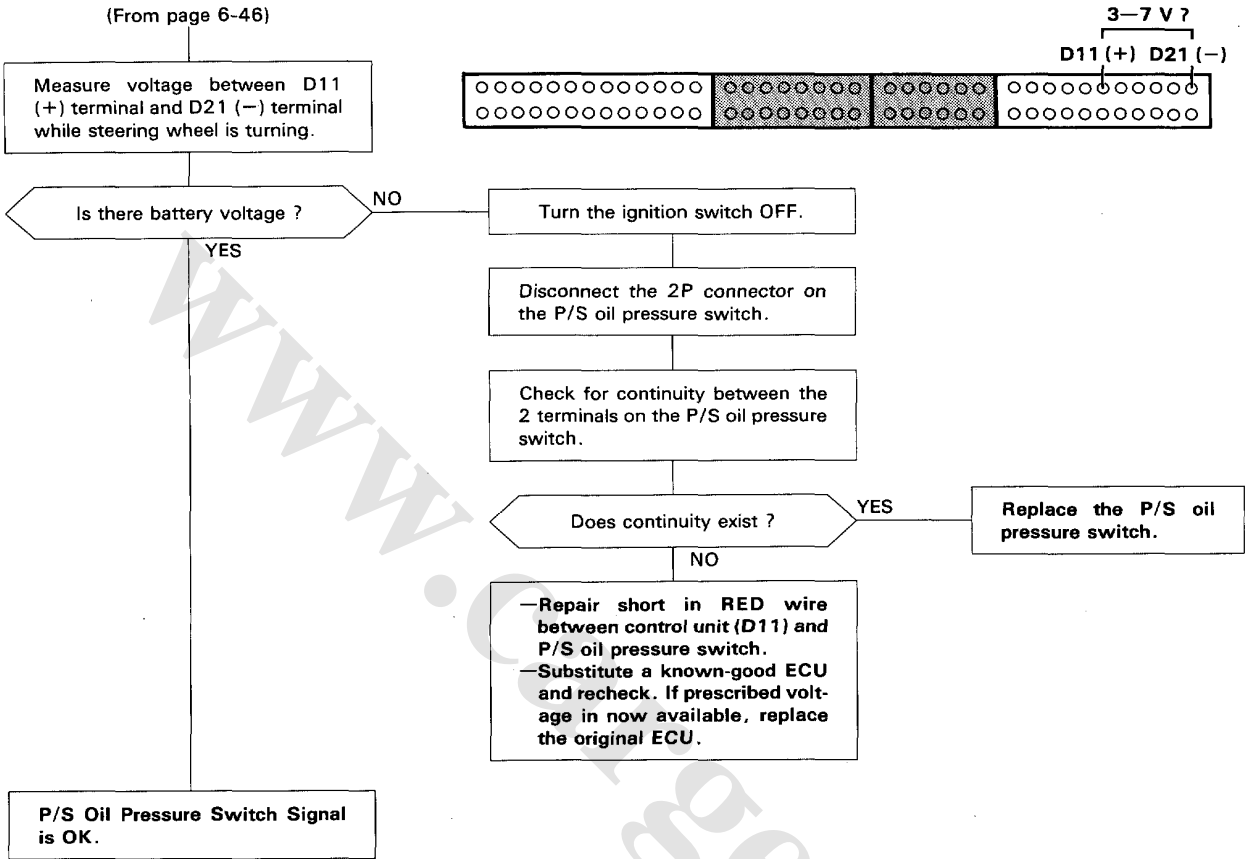

PGM-CARB Control System


Input Troubleshooting Flow Chart — Air Conditioning Signal

Inspection of Air Conditioning Signal.

Connect the ECU test harness between the control unit and connector (page 6-20). Disconnect "D" connector from the main wire harness only, not the control unit.

Turn the ignition switch ON.

Measure voltage between D6 (+) terminal and A10 (-) terminal.




Is there battery voltage ?

Substitute a known-good control unit and recheck. If prescribed voltage is now available, replace the original control unit.


Reconnect "D" connector to the main wire harness.

Connect A19 terminal to A10 terminal.

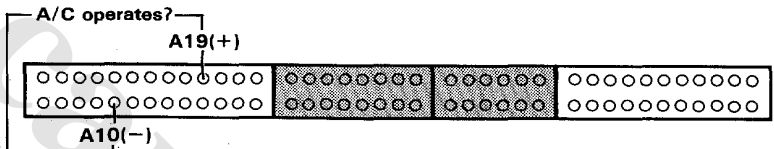

Does A/C operate ?

Connect the RED/BLU terminal of the 4P connector on the A/C clutch relay to body ground.

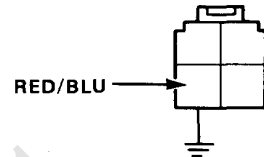


Start engine.

Blower switch ON.

Does A/C operate ?

Repair open in RED/BLU wire between ECU (A19) and A/C clutch relay.

(To page 6-49)

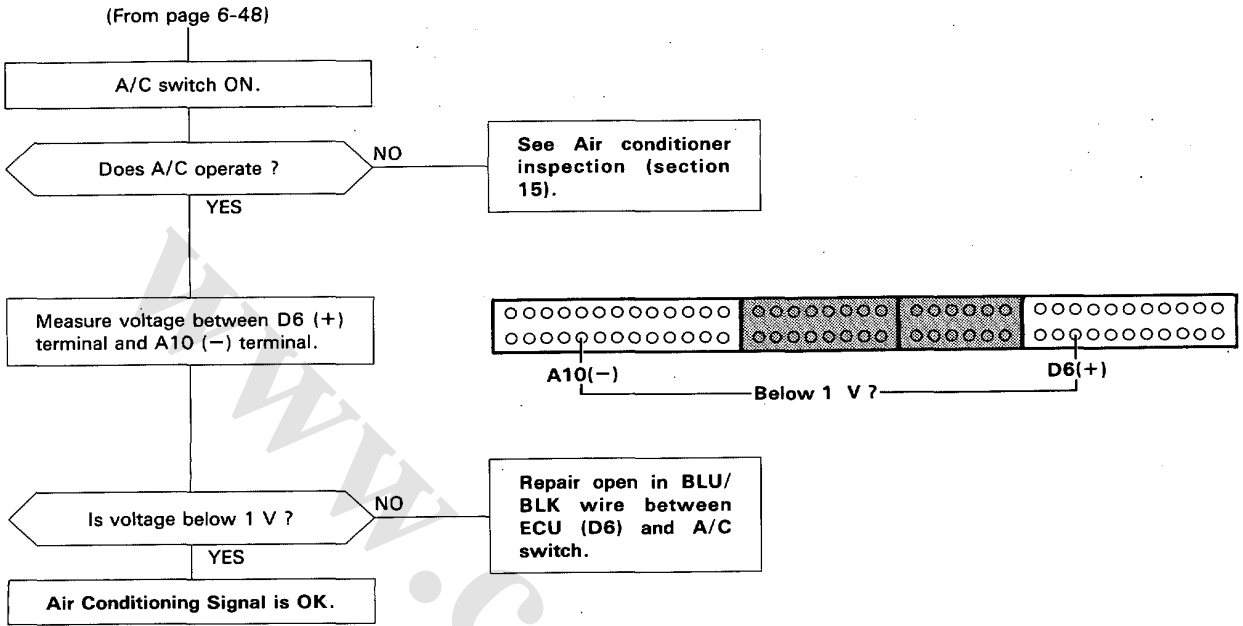

Carburetor

Symptom-to-Sub System Chart

(KX, KS, KG, KQ)

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in pages 6-50 and 6-51.

PAGE		SYSTEM	IDLE SPEED/ MIXTURE	IDLE BOOST	AUTOMATIC CHOKE/ FAST IDLE SYSTEM	AIR VENT CUT-OFF SOLENOID VALVE FLOAT LEVEL
SYMPTOM			80	54	84	83, 121
ENGINE WON'T START						①
DIFFICULT TO START ENGINE	WHEN COLD				①	②
	WHEN WARM					②
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFICATION			②	①	
	WHEN WARM ENGINE SPEED TOO HIGH	①		②	③	
	WHEN WARM ENGINE SPEED TOO LOW	①		①		
	ROUGH IDLE/ FLUCTUATION	①		③		②
FREQUENT STALLING	WHILE WARMING UP			②	①	
	AFTER WARMING UP	①		②		②
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING				①	①
	LOSS OFF POWER					②
	AFTERBURN	①				
	HESITATION/SURGE					



POWER VALVE	PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE	SLOW AIR JET CONTROL	VACUUM CONTROLLED SECONDARY	ACCELERATOR PUMP
69	73	67	65	26
	②	②		
	①			②
	①	②		
②	②			
		②		
		②		
		③	②	
②	①			
	①	①		
			②	
③			①	③
②				①

Carburetor

Symptom-to System Chart

(Except KS, KX, KG, KQ)

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in pages 6-52 and 6-53.

PAGE	SYSTEM	CARBURETOR			
		IDLE SPEED/ MIXTURE	IDLE BOOST	AUTOMATIC CHOKE/ FAST IDLE SYSTEM	AIR VENT CUT-OFF SOLENOID VALVE FLOAT LEVEL
		80	55	84	83, 121
	ENGINE WON'T START				①
DIFFICULT TO START ENGINE	WHEN COLD			①	②
	WHEN WARM				②
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFICATION		②	①	
	WHEN WARM ENGINE SPEED TOO HIGH	①	②	③	
	WHEN WARM ENGINE SPEED TOO LOW	①	①		
	ROUGH IDLE/ FLUCTUATION	①	③		②
FREQUENT STALLING	WHILE WARMING UP		②	①	
	AFTER WARMING UP	①	②		②
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING			①	①
	LOSS OFF POWER				②
	AFTERBURN	①			
	HESITATION/SURGE				



CARBURETOR				FUEL SUPPLY	AIR INTAKE	EMISSION CONTROLS
POWER VALVE	PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE	VACUUM CONTROLLED SECONDARY	ACCELERATOR PUMP			
70	75	66	83	93	98	102
	②			①		③
	①		②			③
	①					③
②	②					③
						③
						②
		②				②
②	①					③
	①					③
		②		③		③
③		①	③	②	①	①
					②	①
②			③	②	①	①

Carburetor

Idle Control System

Testing

(KX, KS, KG, KQ)


1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Check the idle speed with headlights, heater blower, rear window defogger, cooling fan and air conditioner off.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

- If OK, go to step 4.
 - If not, go to step 3.
3. Disconnect the two vacuum hoses at idle boost throttle controller and check each for vacuum.

There should be no vacuum in both hoses.

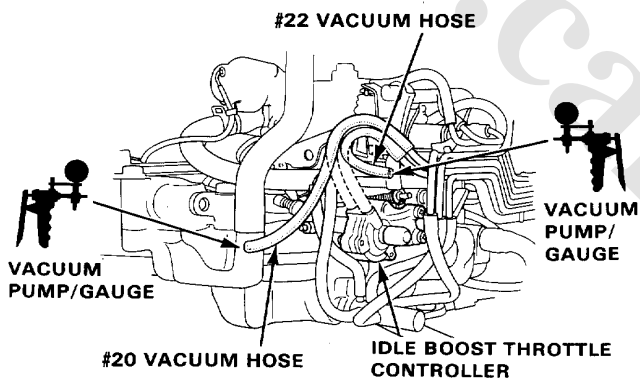

- If there is no vacuum, check the throttle valve shaft for binding or sticking and replace the idle boost throttle controller.
- If there is vacuum at the #20 vacuum hose, go to idle boost solenoid valve troubleshooting (page 6-56).
- If there is vacuum at the #22 vacuum hose, go to A/C idle boost solenoid valve troubleshooting (page 6-61).


4. Disconnect the connector on the P/S oil pressure switch, and check the idle speed.

Idle speed should be:

Manual	950 ± 50 min ⁻¹ (rpm)
Automatic	820 ± 50 min ⁻¹ (rpm) (in "D")

- If OK, go to step 6.
- If not, go to step 5.

5. Disconnect the #20 vacuum hose at idle boost throttle controller and check vacuum wheel is turning. There should be vacuum.

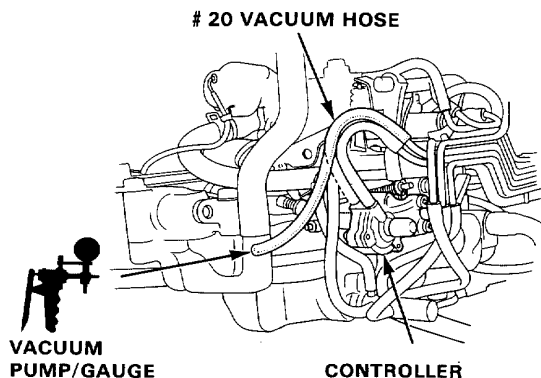

- If there is vacuum, check the throttle valve shaft for binding or sticking and replace the idle boost throttle controller.
- If there is no vacuum, check the #20 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the idle boost solenoid valve troubleshooting (page 6-56).

6. Check the idle speed with the A/C on.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

- If not, disconnect the two vacuum hoses at idle boost throttle controller and check each for vacuum.
 - If there is no vacuum at the #20 vacuum hose, check the #20 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the idle boost solenoid valve troubleshooting (page 6-56).
 - If there is no vacuum at the #22 vacuum hose, check the #22 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the A/C idle boost solenoid valve troubleshooting (page 6-61).



Idle Control System

Testing

(Except KX, KS, KG, KQ)


1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Check the idle speed with headlights, heater blower, rear window defogger, cooling fan and air conditioner off.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

- If OK, go to step4.
 - If not, go to step3.
3. Disconnect the vacuum hoses at idle boost throttle controller and check each for vacuum.

There should be no vacuum in both hoses.

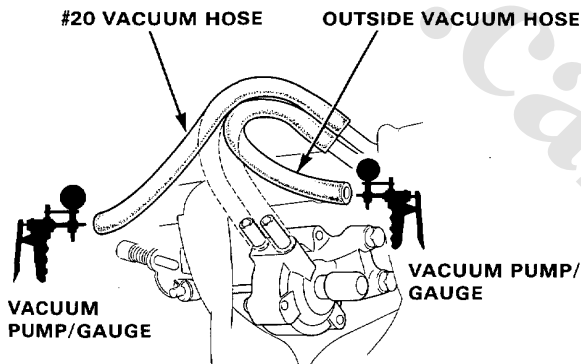

- If there is no vacuum, check the throttle valve shaft for binding or sticking and replace the idle boost throttle controller.
 - If there is vacuum at the #20 vacuum hose, go to idle boost solenoid valve troubleshooting (page 6-58).
 - If there is vacuum at the outside vacuum hose, go to A/C idle boost solenoid valve troubleshooting (page 6-63).
4. Disconnect the connector on the P/S oil pressure switch. Connect a jumper wire between the RED terminal and the BLK terminal. Check the idle speed.


Idle speed should be:

Manual	950 ± 50 min ⁻¹ (rpm)
Automatic	820 ± 50 min ⁻¹ (rpm) (in "D")

- If ok, go to step 6.
- If not, go to step 5.

5. Disconnect the #20 vacuum hose at idle boost throttle controller and check vacuum.

There should be vacuum.

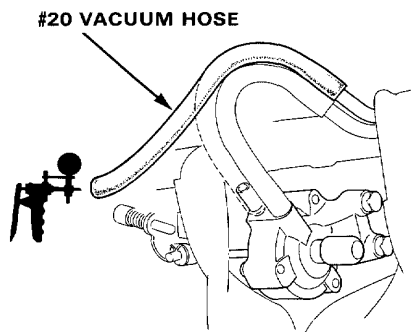

- If there is vacuum, check the throttle valve shaft for binding or sticking and replace the idle boost throttle controller.
- If there is no vacuum, check the #20 and # 2 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the idle boost solenoid valve troubleshooting (page 6-58).

6. Check the idle speed with the A/C on.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

- If not, disconnect the two vacuum hoses at idle boost throttle controller and check each for vacuum.

There should be vacuum in both hoses.

- If there is vacuum in both hoses, replace the idle boost throttle controller.
- If there is no vacuum at the # 20 vacuum hose, check the #20 and #2 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the idle boost solenoid valve troubleshooting (page6-58).
- If there is no vacuum at the outside vacuum hose, check the vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the A/C idle boost solenoid valve trouble shooting (page 6-63).

(cont'd)

Carburetor

Idle Control System (cont'd)

Troubleshooting Flowchart Idle Boost Solenoid Valve (KX, KS, KG, KQ)

Inspection of Idle Boost Solenoid Valve.

Open the control box.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect #20 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.

Apply vacuum.

Is vacuum indicated on the gauge?

NO

Turn steering wheel slowly.

Apply vacuum.

(To page 6-57)

(KX, KS, KG)

VACUUM PUMP/GAUGE

IDLE BOOST SOLENOID VALVE


#20 HOSE



JOINT

VACUUM PUMP/GAUGE


(KQ)

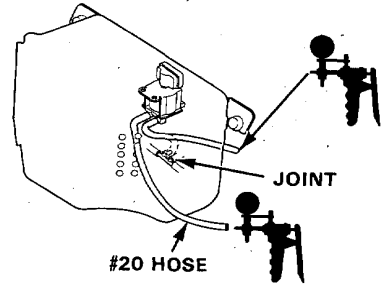

JOINT

#20 HOSE

(KX, KS, KG)

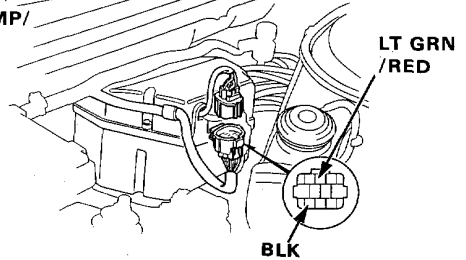

LT GRN / RED

BLK

YES

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.


Measure voltage between;
KX, KS, KG: LT GRN (+) and BLK (-) terminals
KQ: RED (+) and BLK (-) terminals

Is there voltage?

NO

Replace the solenoid valve.

(KQ)

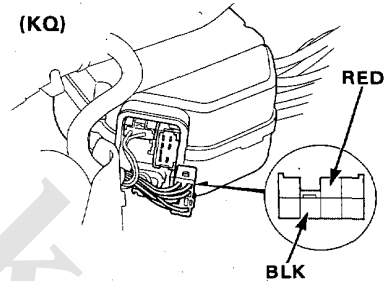


RED

BLK

Check the self-diagnosis indicator (page 6-22).
If OK, check the input troubleshooting (page 6-22).

YES

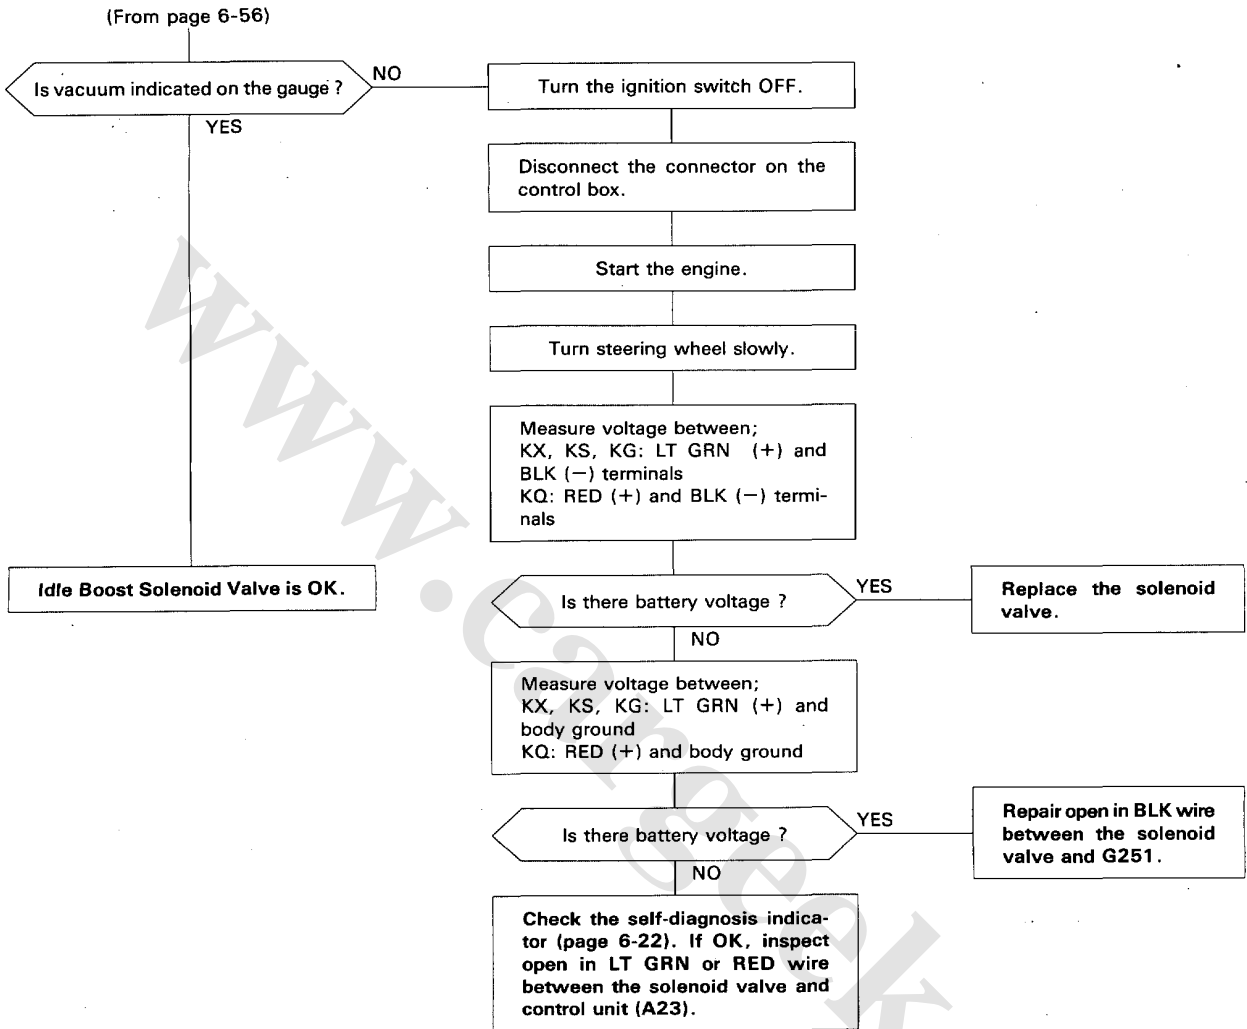

(cont'd)

Carburetor

Idle Control System (cont'd)

Troubleshooting Flowchart (Except KX, KS, KG, KQ)

Idle Boost Solenoid Valve

Inspection of Idle Boost Solenoid Valve.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect #20 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.

Apply vacuum.

Is vacuum indicated on the gauge?

YES

Turn the ignition switch OFF.

Disconnect the connector on the solenoid valve.

Turn the ignition switch ON.

Measure voltage between BLK/YEL (+) terminal and RED (-) terminal on the solenoid valve.



Is there voltage?

NO

Replace the solenoid valve.


YES

Disconnect the connector on the P/S oil pressure switch.

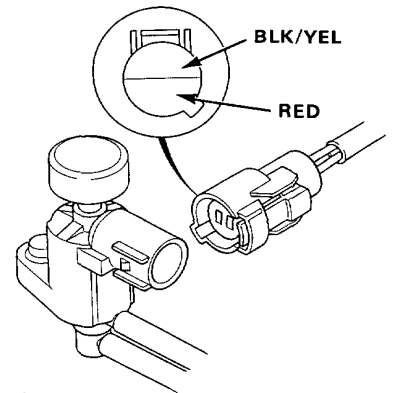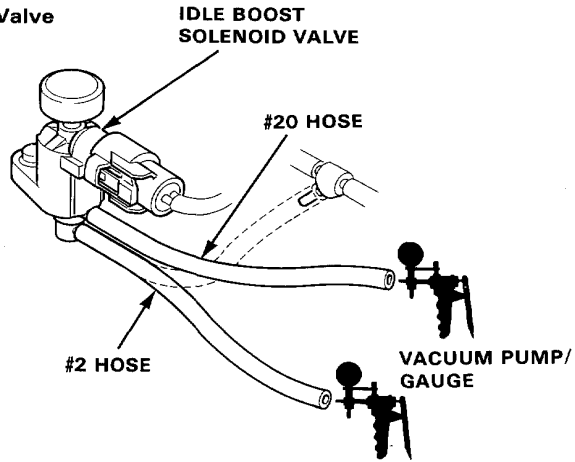


(To page 6-59)

(To page 6-59)

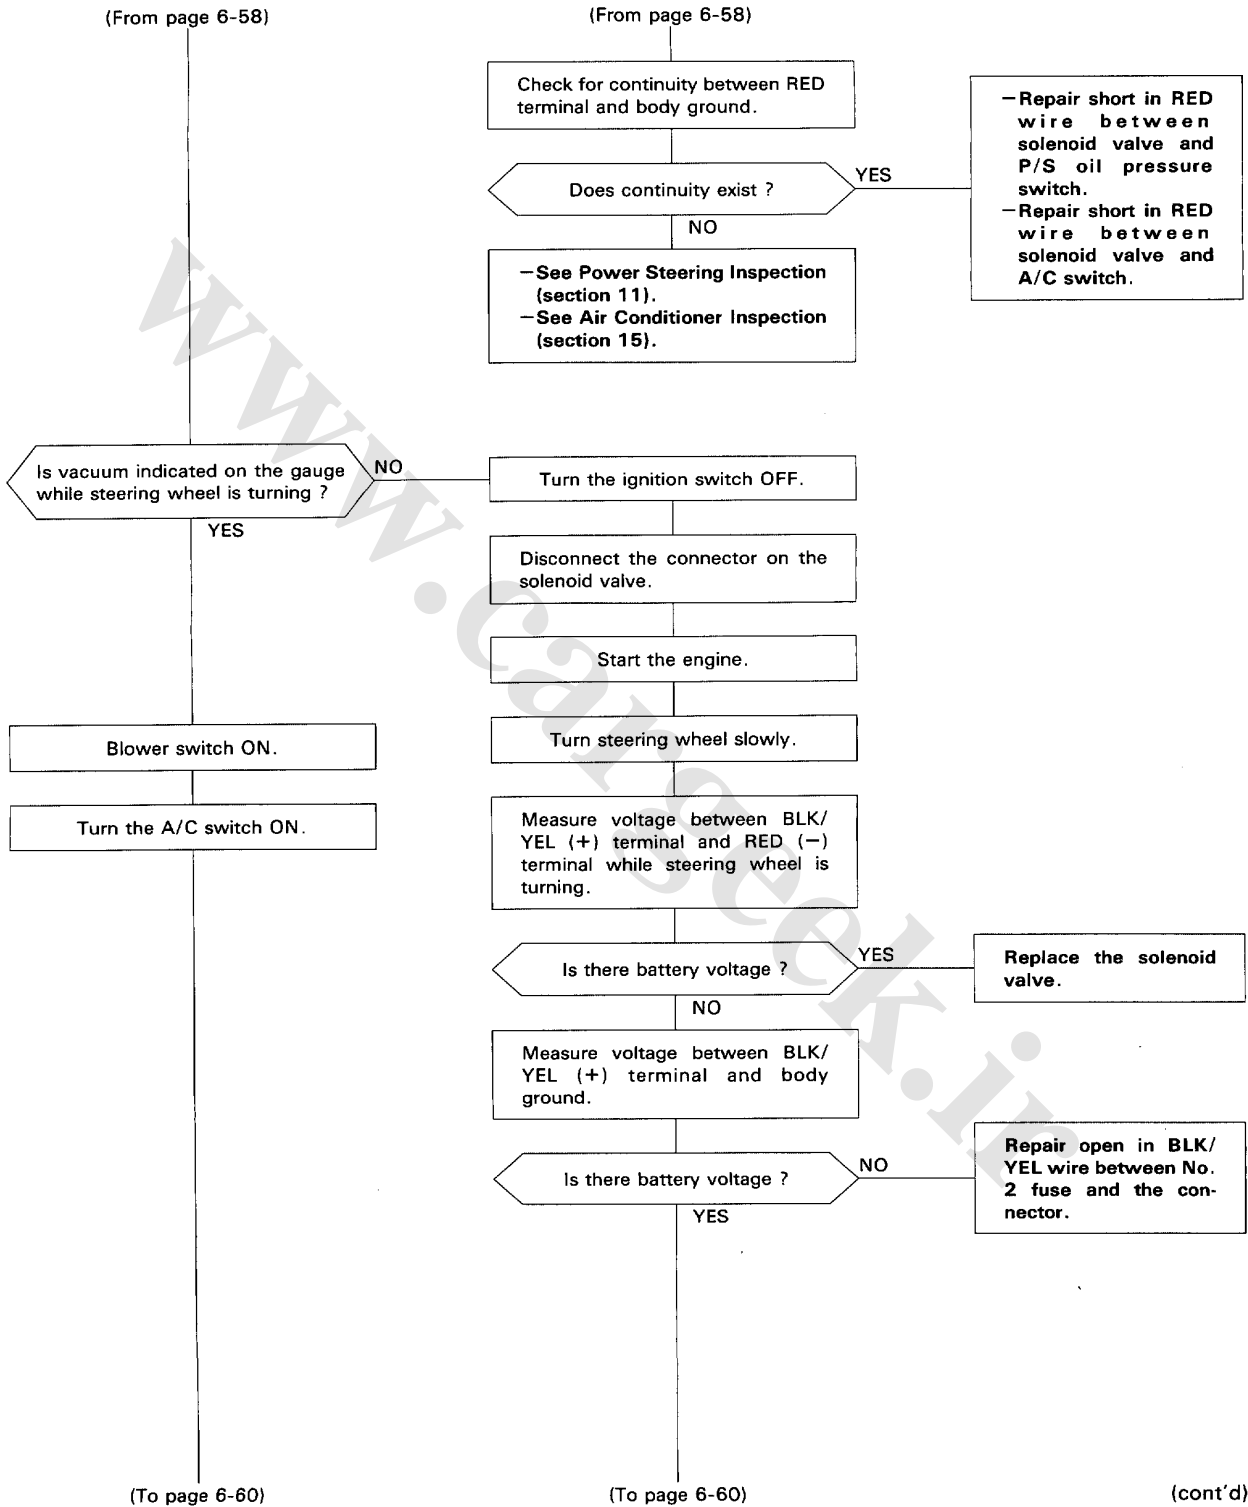

Carburetor

Idle Control System (cont'd)

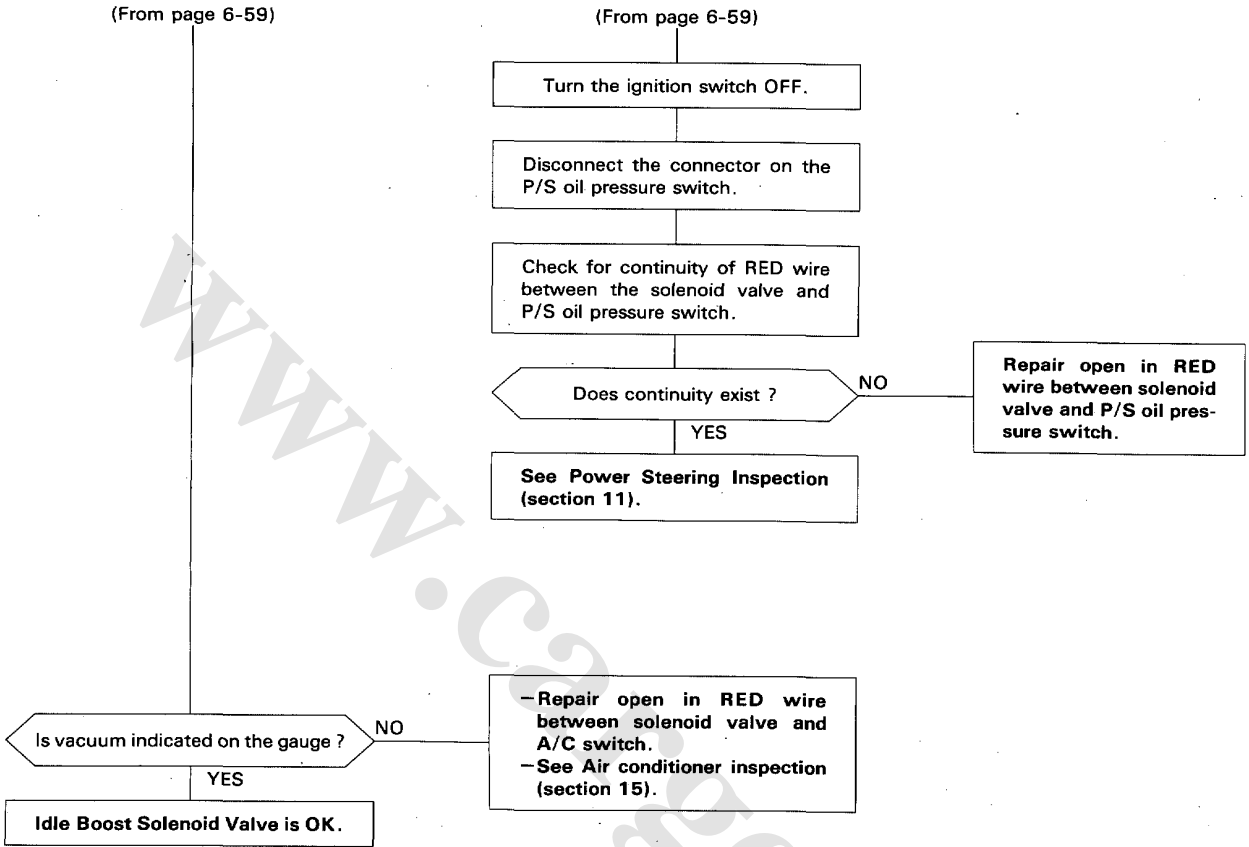



Troubleshooting Flowchart A/C Idle Boost Solenoid Valve (KX, KS, KG, KQ)

Inspection of A/C Idle Boost Solenoid Valve

Open the control box.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect #22 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.



Apply vacuum.

Is vacuum indicated on the gauge?


Blower switch ON.

Turn the A/C switch ON.


(KX, KS, KG)

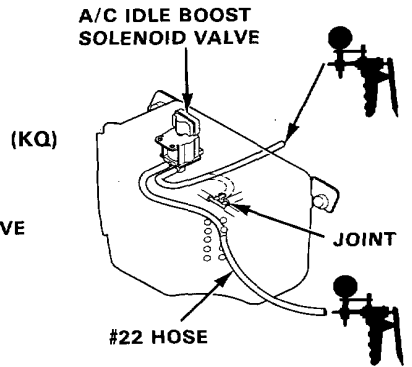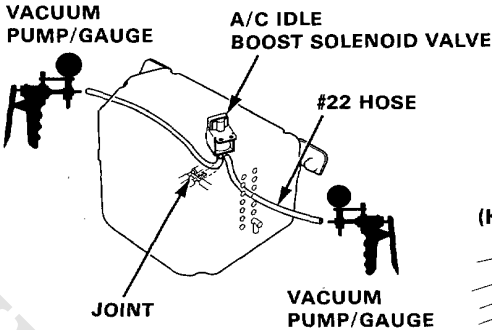

(KX, KS, KG)

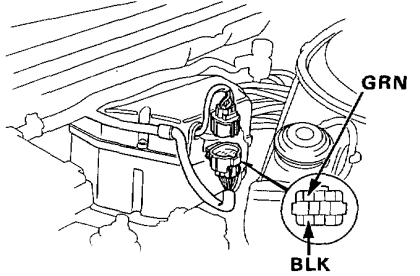

(KQ)

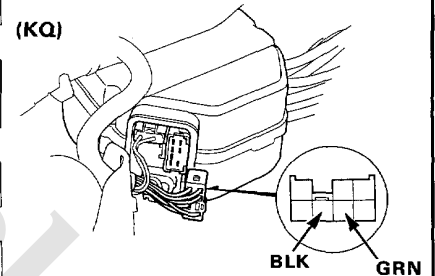

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Measure voltage between GRN (+) terminal and BLK (-) terminal.

Is there voltage?

Replace the solenoid valve.


Check the self-diagnosis indicator (page 6-22). If OK, check the input troubleshooting (page 6-22).

(To page 6-62)

(cont'd)

Carburetor

Idle Control System (cont'd)

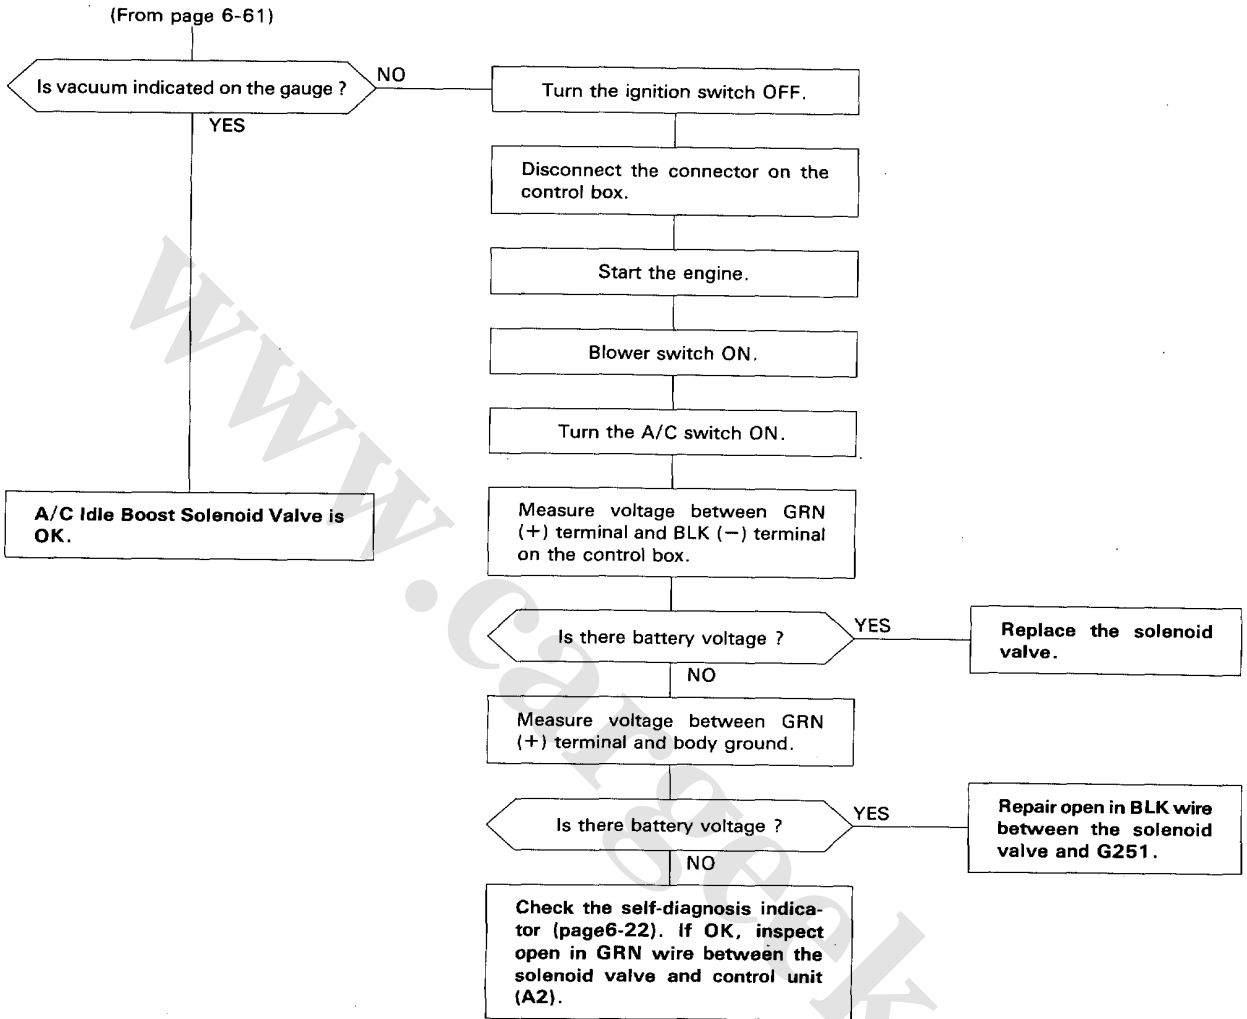



Troubleshooting Flowchart A/C Idle Boost Solenoid Valve
(Except KX, KS, KG, KQ)

Inspection of A/C Idle Boost Solenoid Valve

Disconnect the lower vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum pump.

Disconnect upper vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.



Start the engine.

Apply vacuum.

Is vacuum indicated on the gauge ?

Blower switch ON.

Turn A/C switch ON.

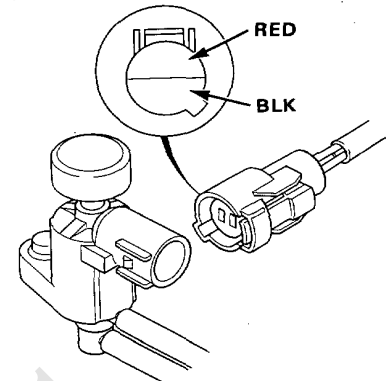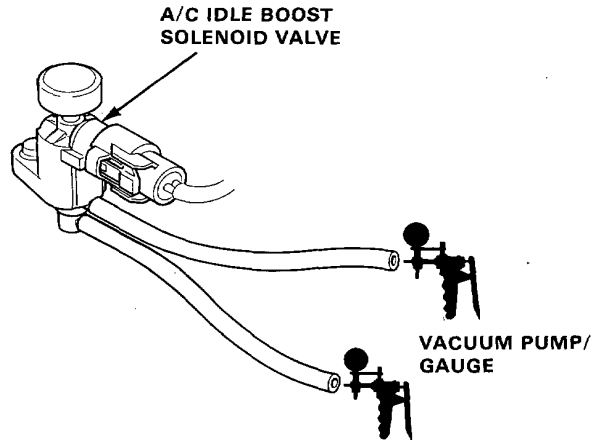

Turn the ignition switch OFF.

Disconnect the connector on the solenoid valve.

Start the engine.

Measure voltage between RED (+) terminal and BLK (-) terminal.

Is there voltage ?

Replace the solenoid valve.

See Air Conditioner inspection (section 15).


(To page 6-64)

(cont'd)

Carburetor

Idle Control System (cont'd)

(From page 6-63)

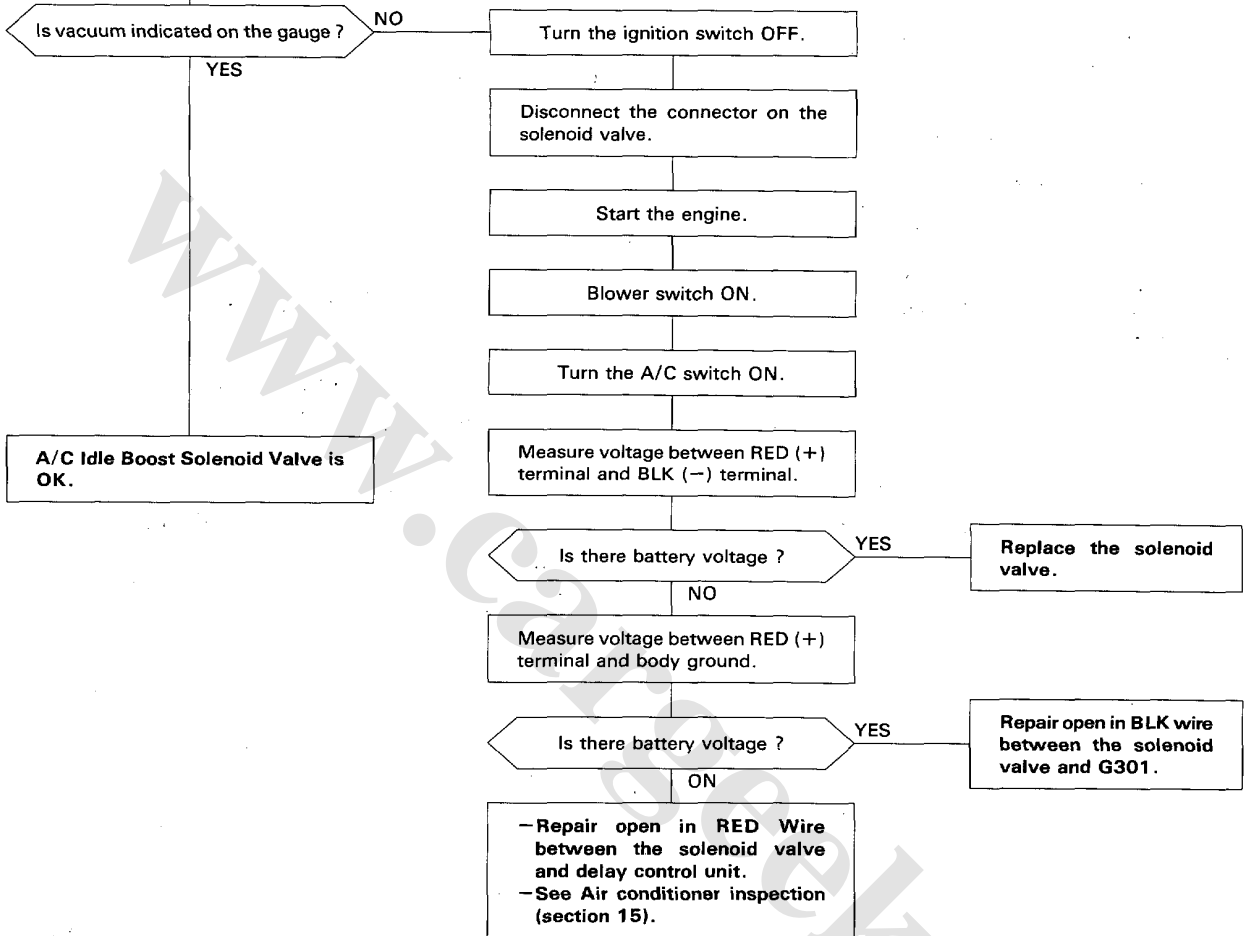




Accelerator Pump

Inspection

1. Before measuring the accelerator pump linkage travel, make sure the pump shaft travels freely throughout the pump stroke. Make sure the pump lever is in contact with the pump shaft.

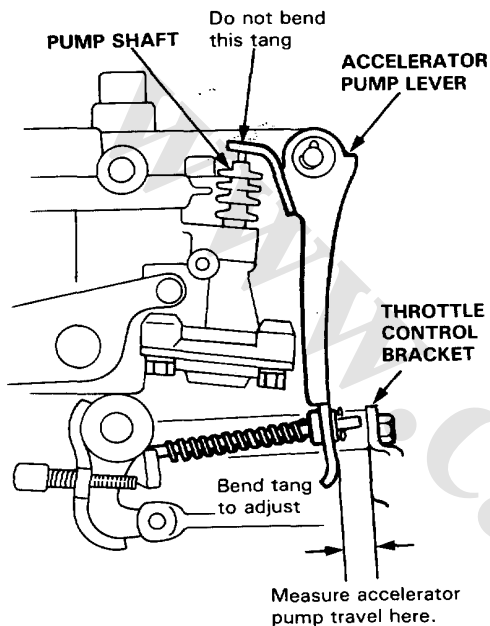


2. To check linkage travel, measure gap between bottom end of pump lever (tang) and stop as shown.
Limits: 11.5 to 12.0 mm (29/64" to 31/64")

Float Level


Adjustment

WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Place the car on level ground.
2. Start and warm up the engine, snap the throttle between idle and 3,000 min^{-1} (rpm) several times then allow it to idle.
3. When the fuel level stabilizes, check that it is centered in the inspection window.

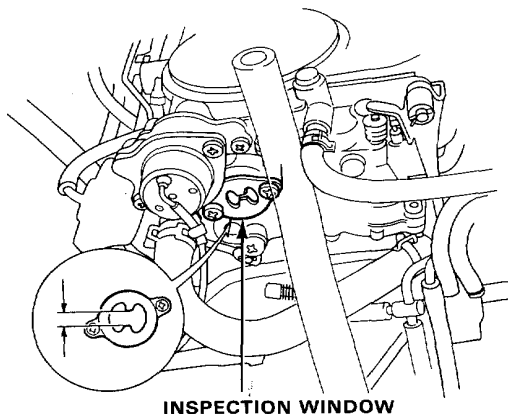

4. If the fuel level is not centered, adjust it by slowly turning the adjusting screw.
5. Paint the adjustment screw with white paint after adjustment.
NOTE: Do not turn the adjusting screw more than 1/8-turn every 15-seconds.

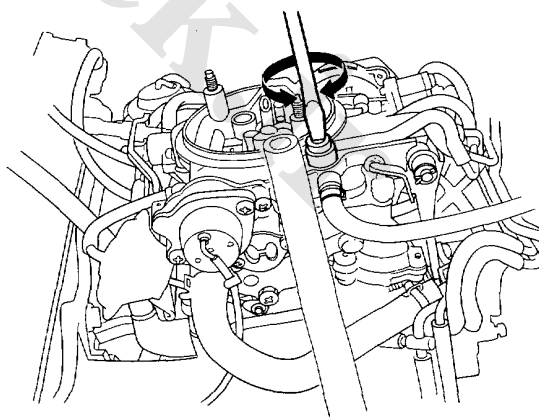

Carburetor


Choke Opener

Testing

1. Disconnect the 2P connector of the choke coil heater.
2. Open and close the throttle fully to let the choke close.
3. Start the engine.

The choke valve should partially open.


- If the choke partially opens, go on to step 4 or step 5, depending on coolant temperature.
- If the choke does not open partially, check the linkage for free movement, repair as necessary, and retest.
- If the choke valve still does not open partially, check the choke opener diaphragm: Remove the choke opener, and connect a vacuum pump. Block the orifice in the opener while you apply enough vacuum to pull the opener rod all the way in, then stop.

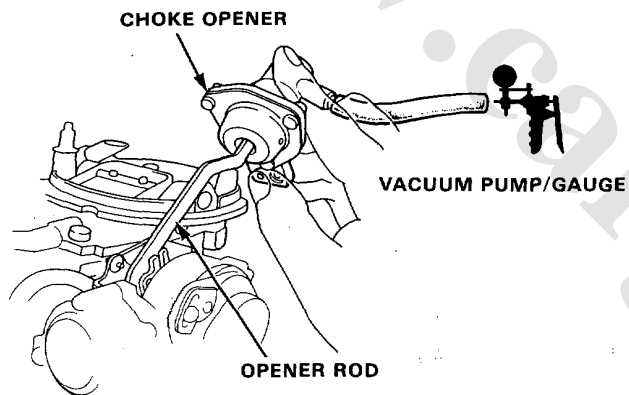


- If the rod will not stay in, replace the opener.
- If the rod stays in, check the vacuum port in the carburetor for blockage.

NOTE: After replacing or reinstalling the choke opener, retest it, then adjust it if necessary (page 6-88).

4. If coolant temperature is below about 14°C (57.2°F), Tab A on the choke opener lever should not be seated against the carburetor.

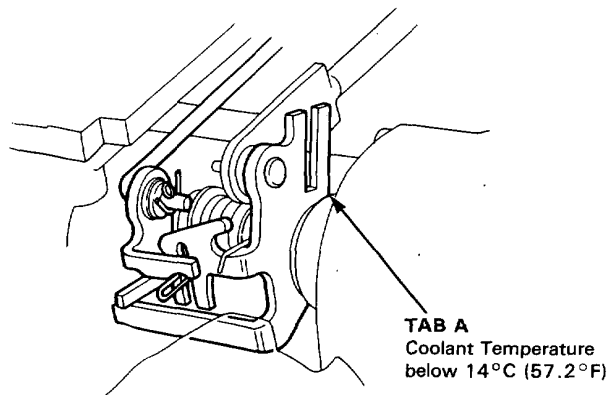


- If Tab A is not seated, go on to step 5.
- If Tab A is seated, disconnect the #24 vacuum hose from the choke opener.

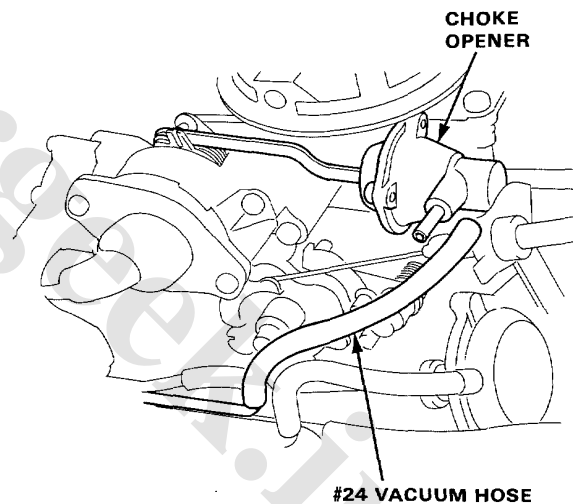

- If Tab A comes off its seat, check the #24 vacuum line for proper connection or disconnected hose. If OK, replace the thermostatic valve A.



5. If coolant temperature is above about 25°C (77°F), Tab A on the choke opener lever should be seated against the carburetor.

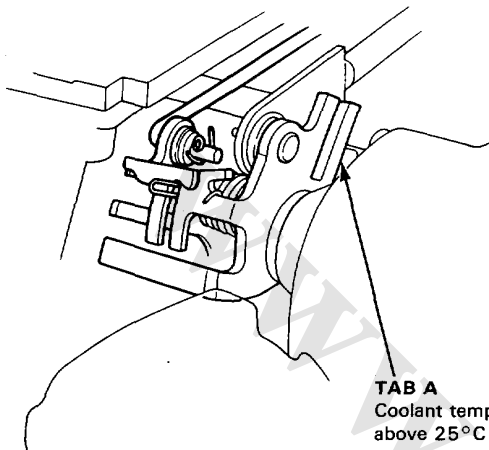

TAB A
Coolant temperature
above 25°C (77°F)

- If Tab A is not seated, check the #24 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, replace the thermostatic valve A.

Choke Coil Tension and linkage

Inspection (COLD ENGINE)

1. Remove the air cleaner.
2. Open and close the throttle fully to let the choke close.


The choke valve should close completely.

NOTE; Above about 28°C (82°F) the choke will not close completely, but should still close to less than 3 mm (1/8 in.).

- If the choke closes properly, go on on to the fast idle unloader test on page 6-89.
- If the choke does not close properly, spray its linkage with carburetor cleaner, and check the linkage for signs of mechanical binding (use a spray can with an extension on the nozzle to reach the linkage).


CAUTION: Carburetor cleaner is very caustic; always wear safety goggles or a face shield when spraying.

INDEX MARKS

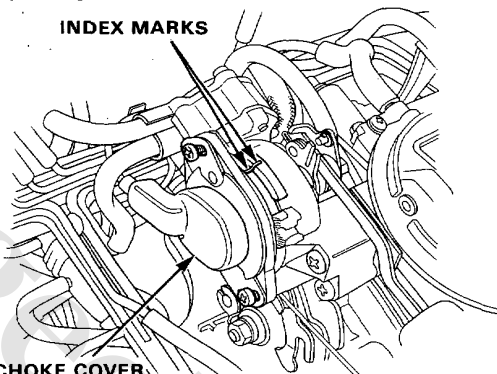

CHOKE COVER

- If the choke still does not close properly, remove the choke cover (page 6-86) and inspect the linkage for free movement. Repair or replace parts as necessary. Then reinstall the cover and adjust it so the index marks line up, and retest.
- If the choke still does not close properly, replace the cover (page 6-86).

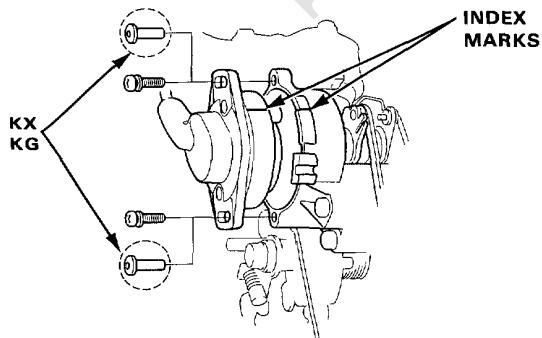

Carburetor


Choke Coil Heater

Testing

Start the engine and let it run. As the engine reaches normal operating temperature, the choke valve should fully open:

- If it does, go on to the fast idle unloader test on page 6-89.
- If it doesn't inspect the linkage, and clean or repair it as necessary (page 6-85).
- If the choke still does not open all the way, disconnect the connector, and measure voltage between WHT/BLU (+) terminal and body ground.

There should be battery voltage with the engine running.

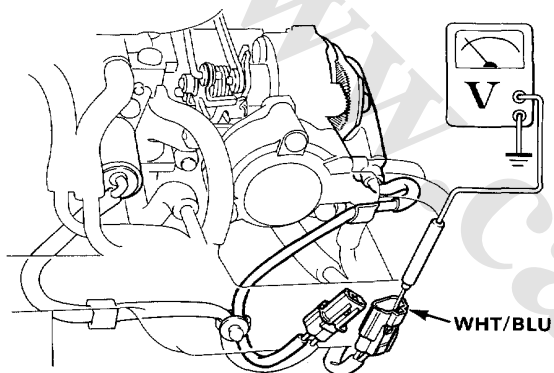


- If there is no voltage, inspect open in WHT/BLU wire between the connector and the alternator. If OK, inspect the alternator (section 16).


Replacement

1. Remove the air cleaner.
2. Remove the 2P connector, cut the harness band and disconnect the choke cap harness from clamp.

CAUTION: Take care not to apply excessive force on the clamp as it is broken easily.

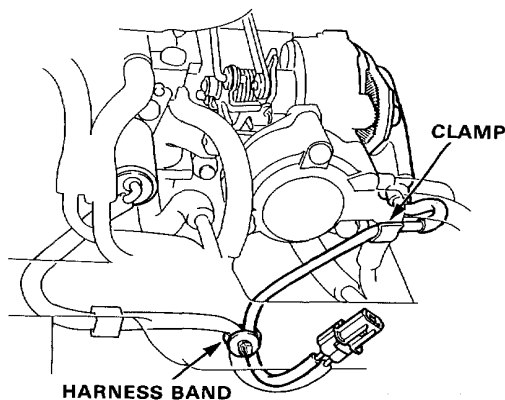

3. Disconnect the terminal retainer from the connector and remove the two terminals.

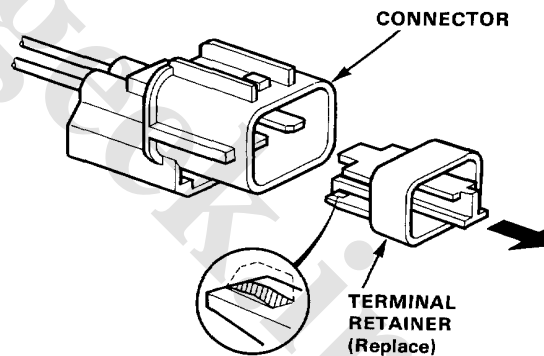




4. KX, KG:
Using a 5/32" or 4.1 mm diameter drill, drill out the rivets and remove the choke cover.

CAUTION: Cover the carburetor with a clean shop rag to prevent chips from falling into the carburetor throat.

Except KX, KG:
Remove the screws and remove the choke cover.


5. Reinstall the cover and adjust it so that index marks align (KX, KG), then secure it with rivets).

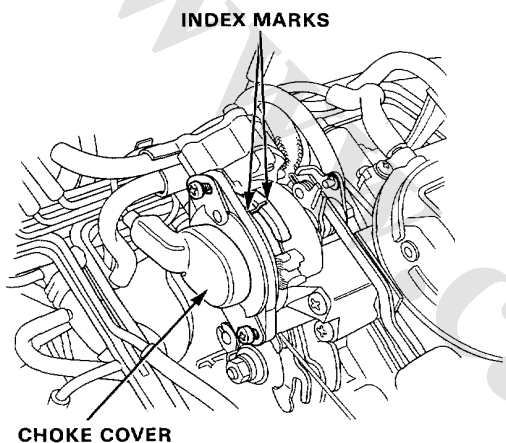

6. Connect the respective terminals to a new connector and install a new terminal retainer.


NOTE:

- Be sure to connect the terminal before installing the terminal retainer.
- Replace the connector and terminal retainer with the new ones.
- Note the location of the terminal.

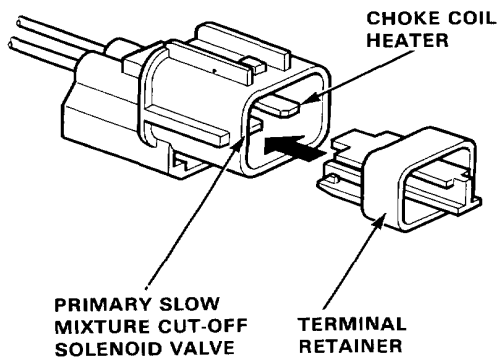

7. Secure the harness with the clamp as shown in the drawing and use the harness band to hold the two harnesses together 180 mm from the tip of the connector.

CAUTION: Cut off the excess of the harness band and set it on the harnesses so that the tip of the band points to the vacuum hose manifold.

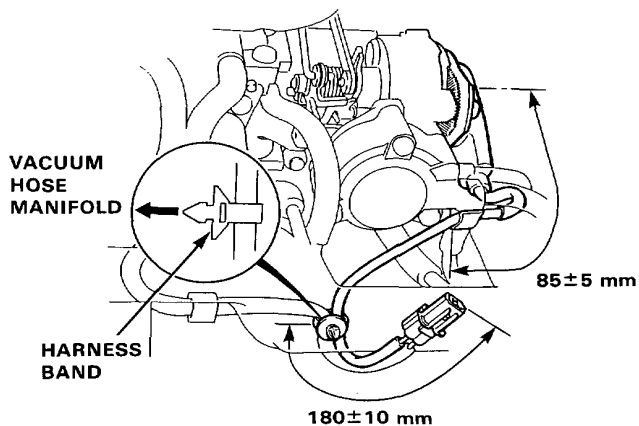

8. Reconnect the connector and reinstall the air cleaner.

Carburetor


Choke Linkage

Adjustment

NOTE:

- This check is not necessary unless the linkage has been bent, choke opener has been replaced, or the car has poor cold starting.
- This check can be made with the engine HOT or COLD.

1. Remove the choke cover (page 6-87)
2. While holding the choke valve closed, open and close the throttle fully to engage the choke and fast idle linkage.
3. Disconnect the choke opener hose from the vacuum hose manifold, and attach a check valve to it as shown. Then pressurize the choke opener with low pressure compressed air, 103–586 kPa (15–85 psi) is OK, to hold the bleed valve in it closed.

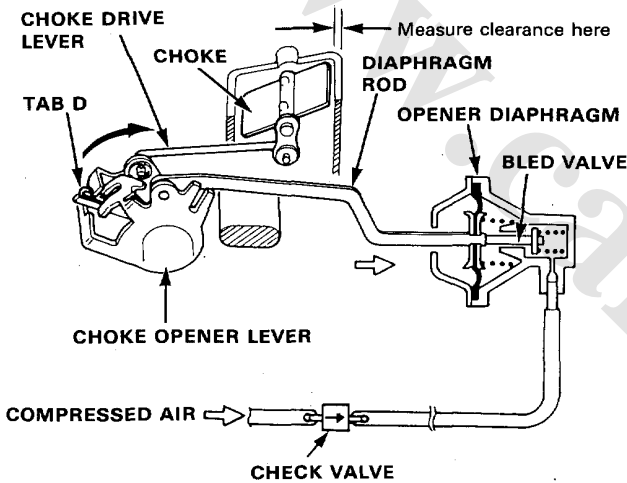


4. Gently push the choke opener lever towards the opener until it stops (until you feel the opener rod seat against the pressurized bleed valve), then pull the choke drive lever down against the opener lever (to take all free play out of the linkage), and measure the clearance between the choke blade and casting:

1st Stage Clearance

$0.88 \pm 0.07 \text{ mm}$ ($0.035 \pm 0.003 \text{ in.}$)
Adjust clearance by bending Tab D.


5. Remove the check valve, and reconnect the choke opener hose.
6. Hold both levers together, then push them toward the diaphragm again until they stop (Tab A on the opener lever seats against the carburetor), and measure the clearance at the choke valve.

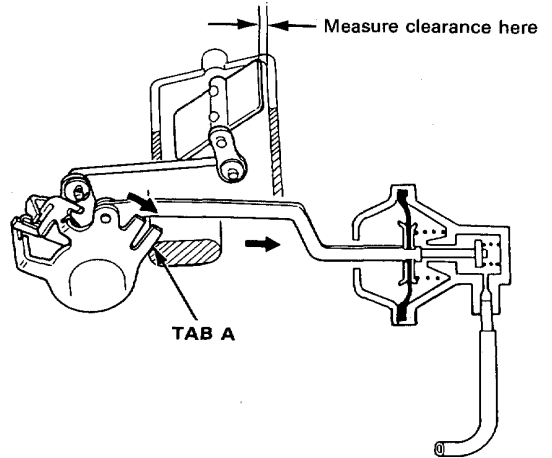

2nd Stage clearance:

$3.1 \pm 0.11 \text{ mm}$ ($0.122 \pm 0.004 \text{ in.}$)
Adjust clearance by bending Tab A.

7. While still holding opener lever Tab A against its seat, release the choke drive lever, and measure the clearance at the choke valve (Tab C on the drive lever should stay seated against the spring loop; if not, repeat step 2 and recheck):

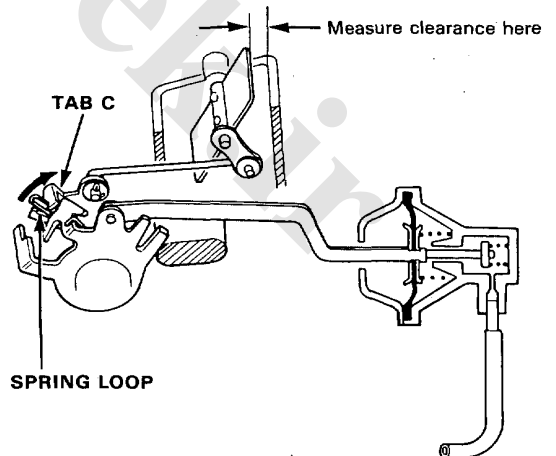

3rd Stage Clearance:


$5.2 \pm 0.28 \text{ mm}$ ($0.205 \pm 0.011 \text{ in.}$)




Fast Idle

Testing

1. Disconnect the two hoses from the fast idle unloader.

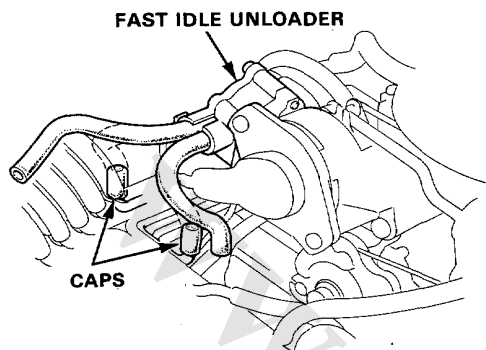


2. Open and close the throttle fully to engage the fast idle cam.

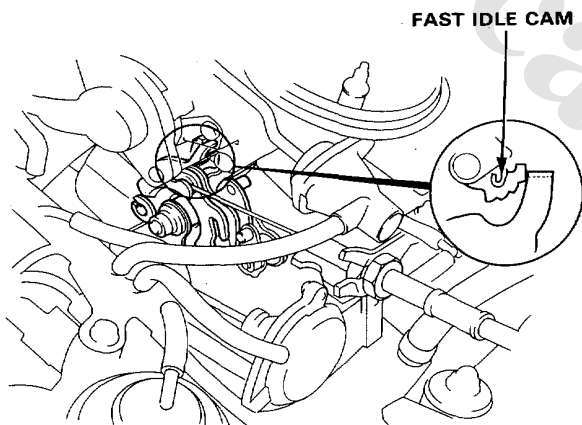

3. Start the engine.

Fast idle should be $3,400 \pm 500 \text{ min}^{-1}$ (rpm)


Adjust the fast idle speed, if necessary, by turning the fast idle adjusting screw.

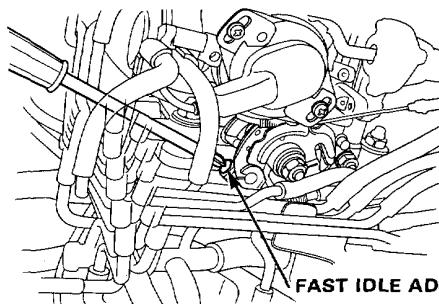

5. Reconnect the hoses.
6. Warm up to normal operating temperature (the cooling fan comes on).

When the engine warms up, its speed should drop below $1,400 \text{ min}^{-1}$ (rpm) as the unloader pulls the internal choke linkage off the fast idle cam.


- If fast idle does not drop below $1,400 \text{ min}^{-1}$ (rpm), disconnect the two unloader hoses, and check the vacuum.

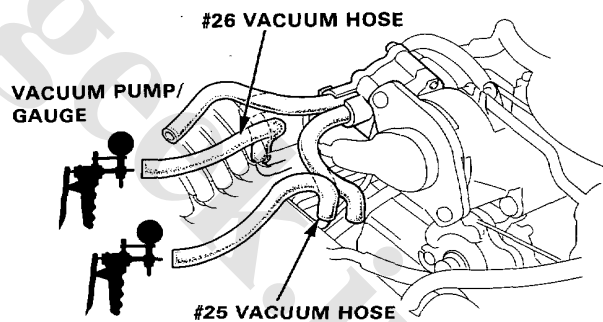

- If there is no vacuum, check the #25 and #26 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, replace the thermostatic valve A.
- If there is vacuum, replace the fast idle unloader, and then inspect the choke coil tension and linkage (page 6-85).

Carburetor


Remova

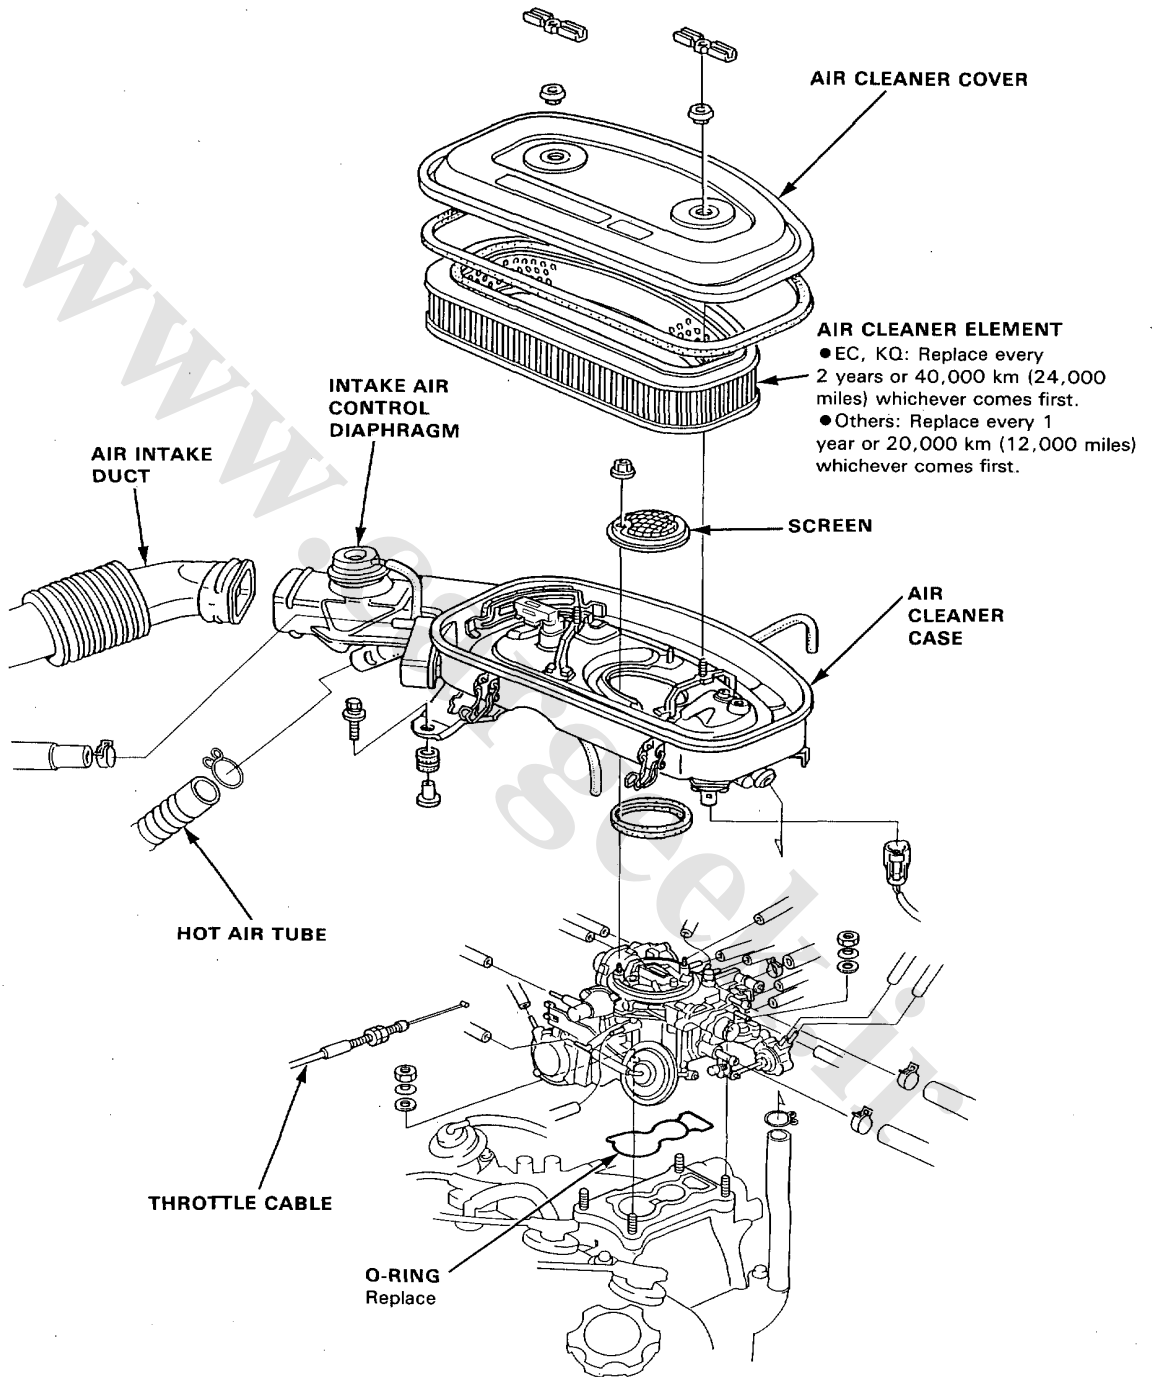



Replacement


(KX, KS, KG, KQ)

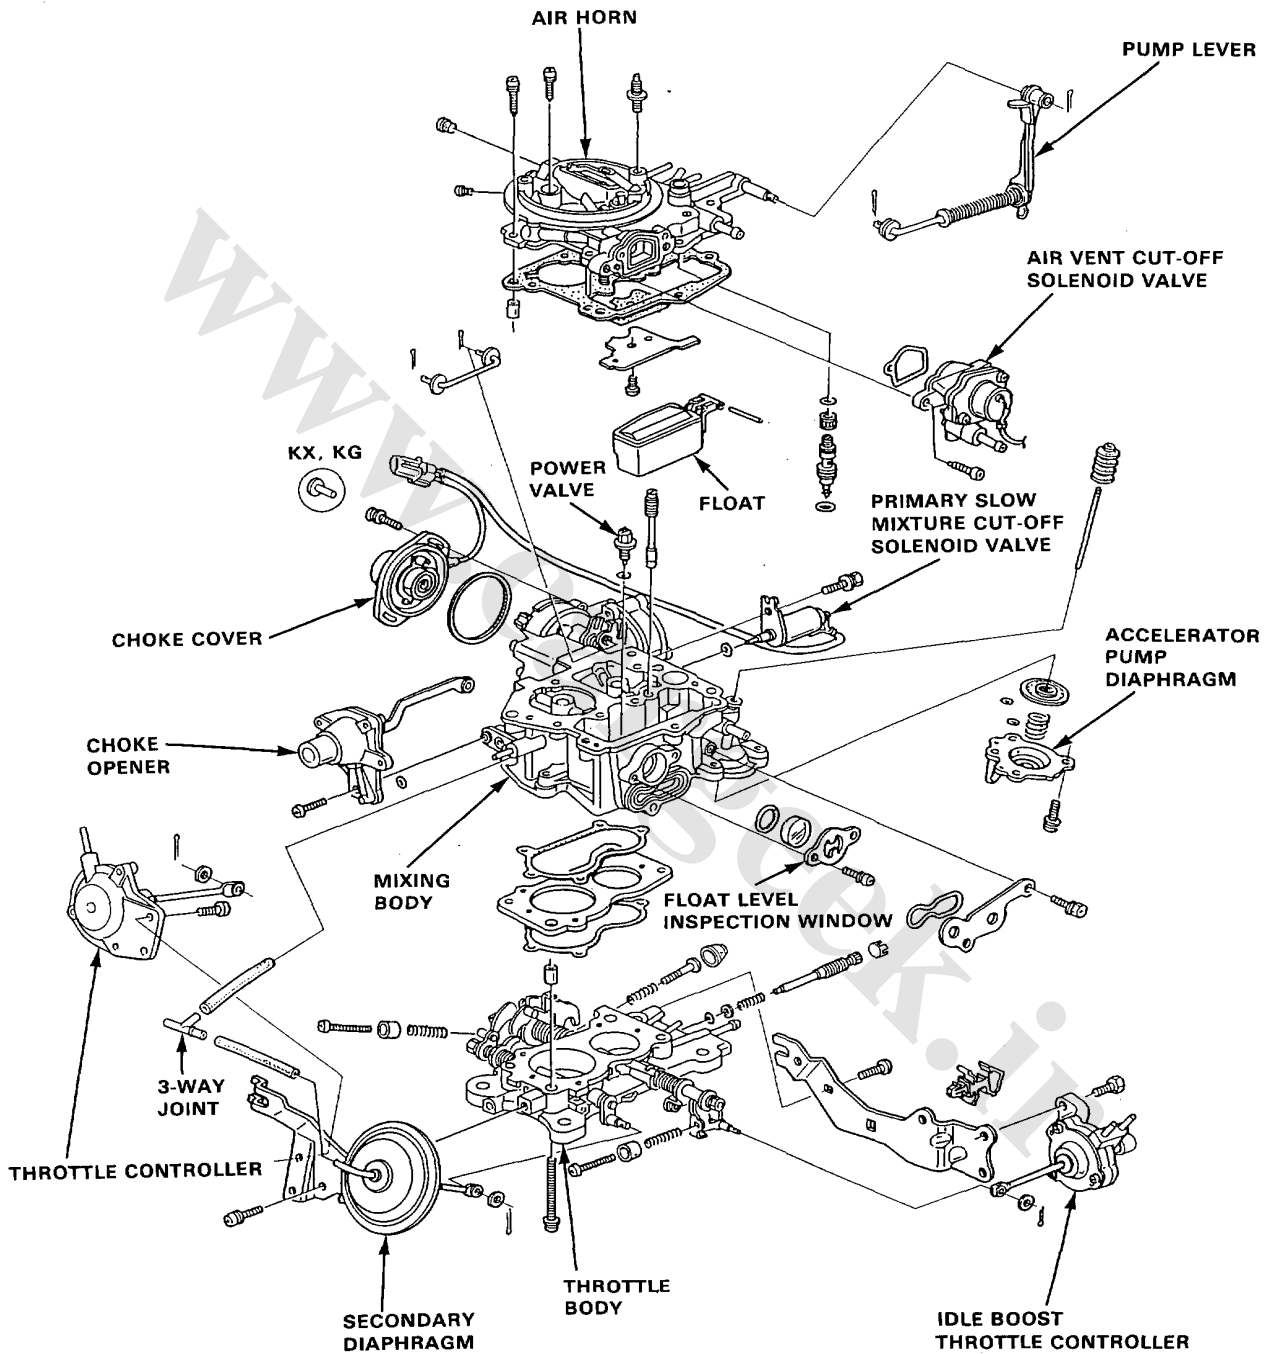

Carburetor

Replacement


(Except KX, KS, KG, KQ)

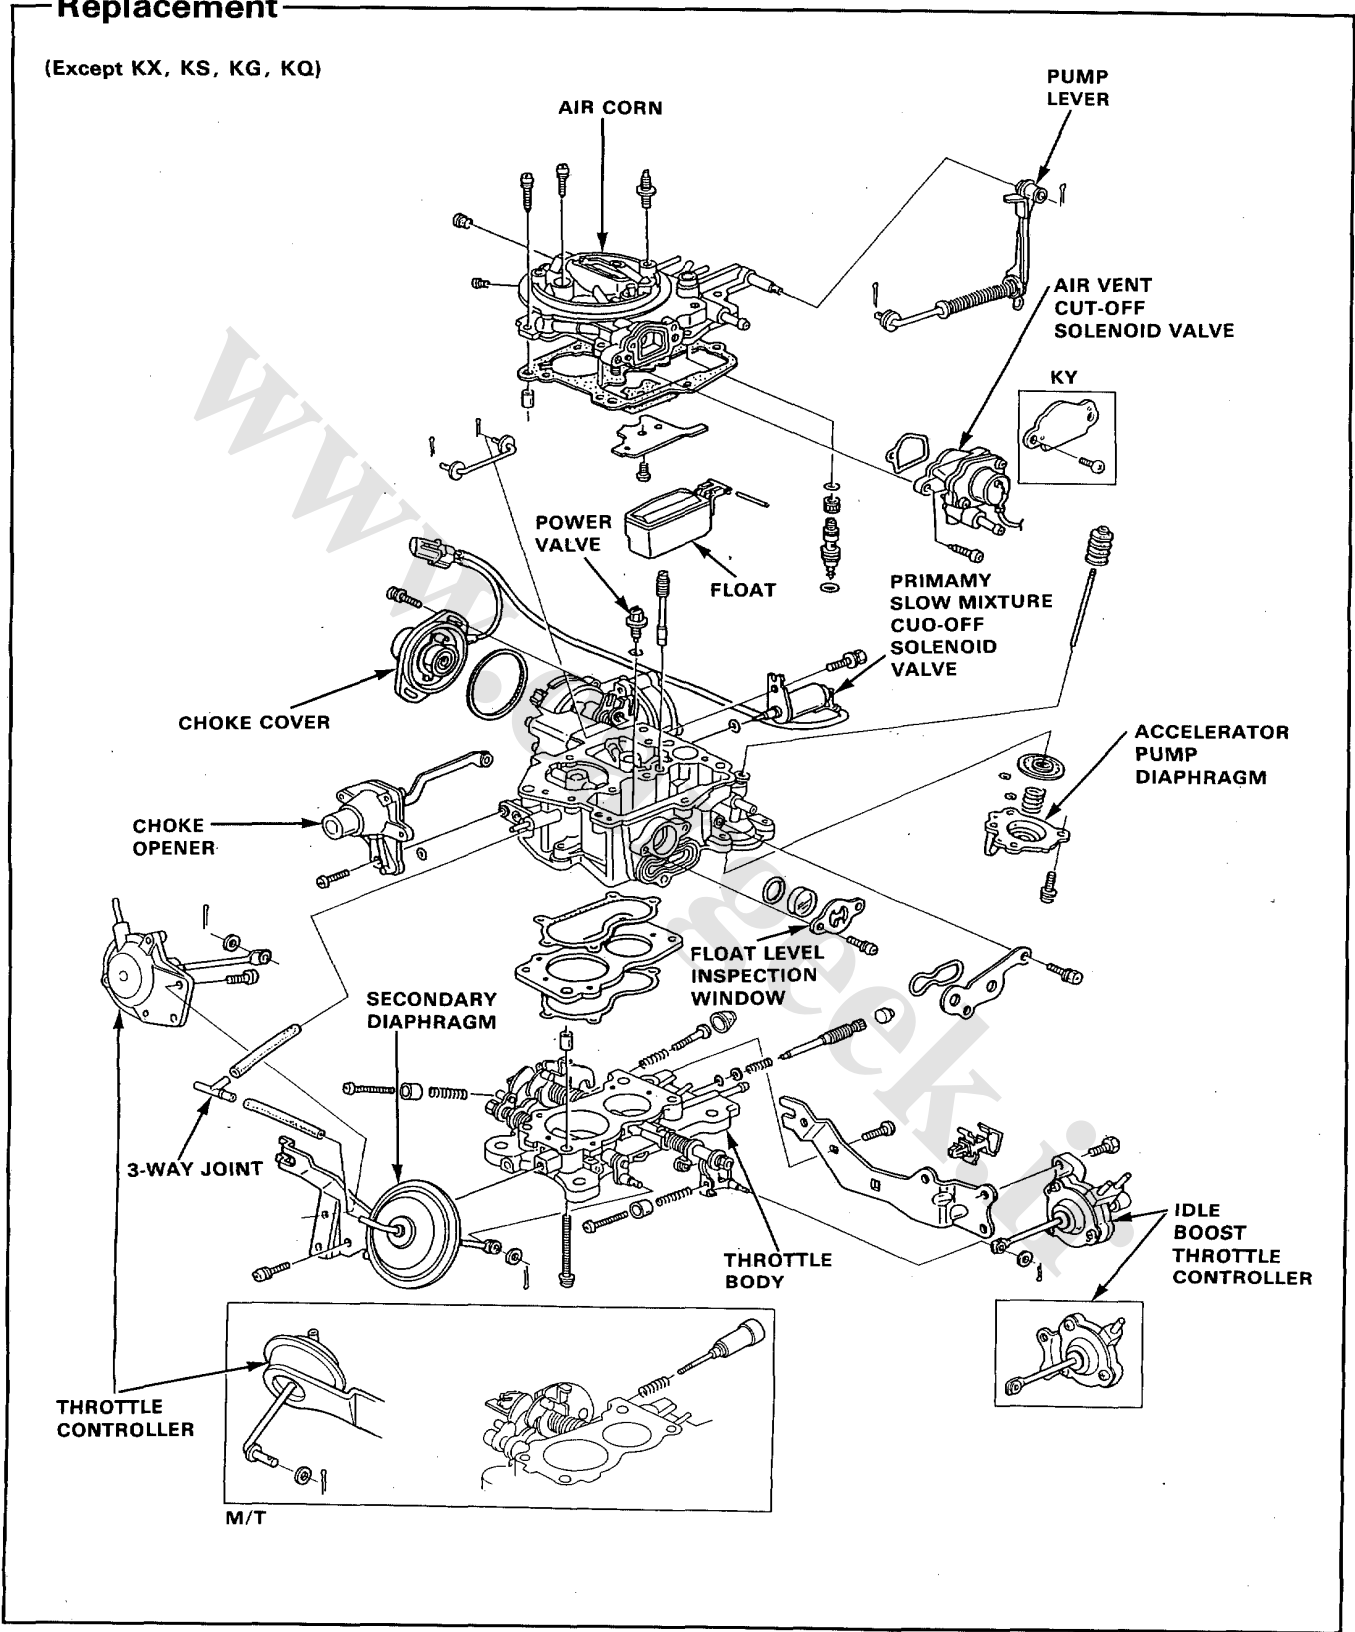

Carburetor

Replacement

(Except KX, KS, KG, KQ)

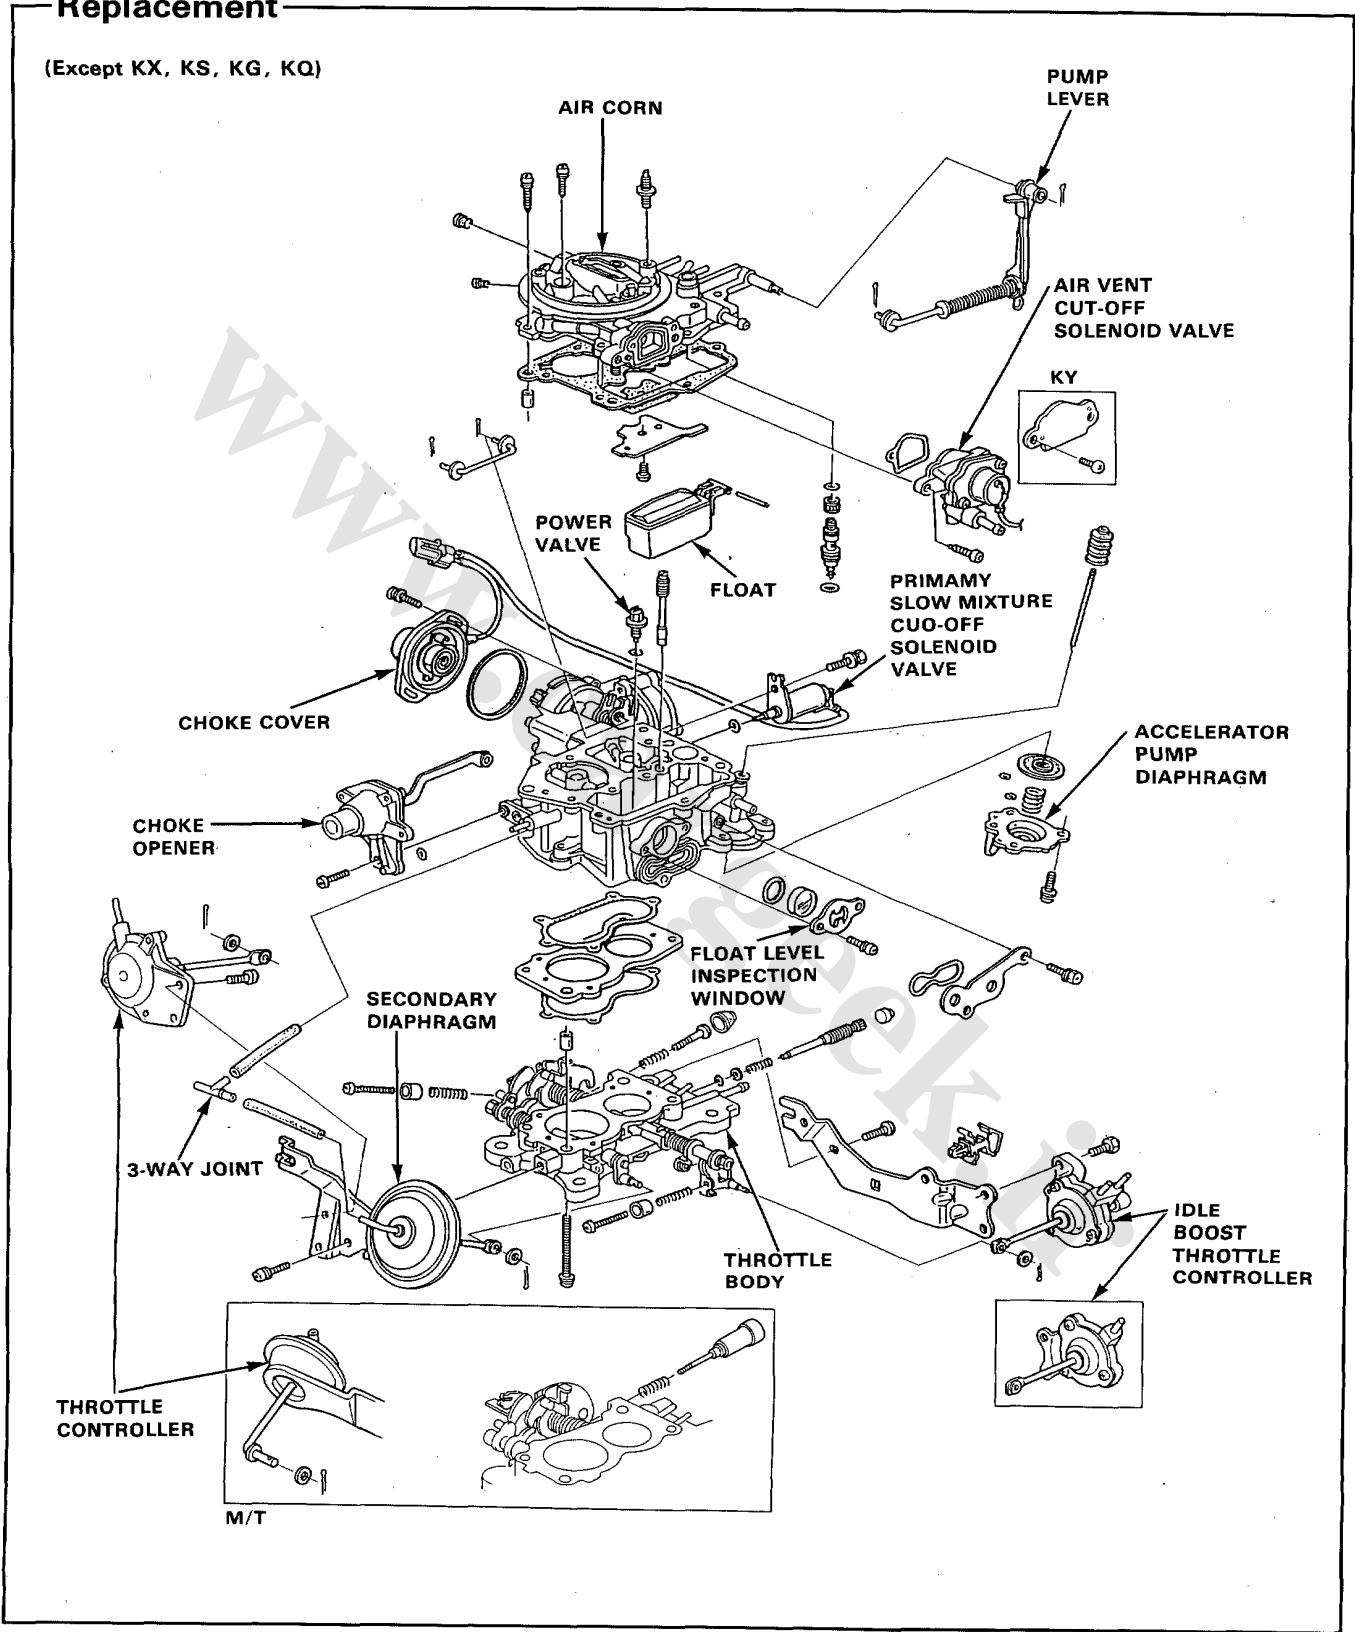



Fuel Supply System

Symptom-to-sub System Chart

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in this page.

PAGE		SYSTEM	FUEL FILTERS	FUEL PUMP	FUEL CUT-OFF RELAY	FUEL TANK	CONTAMINATED FUEL
SYMPTOM			94	94	96	97	*
ENGINE WON'T START			③	①	②		②
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING		①				①
	LOSS OF POWER		①				①

* Fuel with dirt, water or a high percentage of alcohol is considered contaminated.

Fuel Supply System

Fuel Filters

Replacement

Replace both front and rear filters every 2 years or 40,000 km (24,000 miles) whichever comes first.


⚠ WARNING Do not smoke while working on the fuel system. Keep open flame away from work area.

Front

1. Use fuel line clamps to pinch off the fuel lines.
2. Disconnect the fuel lines and remove the fuel filter.

CAUTION: When disconnecting the fuel lines, slide back the clamps then twist the lines as you pull, to avoid damaging them.

3. Install the new fuel filter.
4. Remove the fuel line clamps.

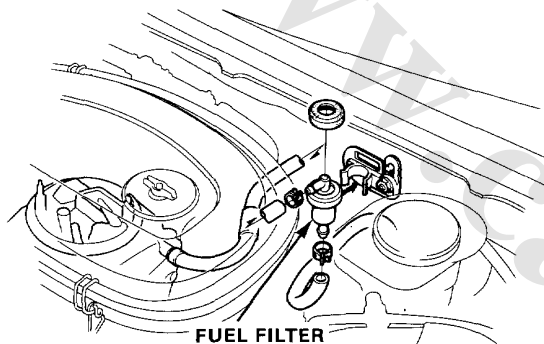


Rear

1. Block front wheels. Jack up the rear of the car and support with jackstands.
2. Push in the tab of the fuel filter to release the holder, then remove the filter from its bracket.
3. Attach fuel line clamps to the fuel lines and disconnect the lines from the filter.

CAUTION: To avoid damaging the fuel lines when disconnecting, slide back the clamps then twist the lines as you pull.

4. Install in the reverse order of removal.

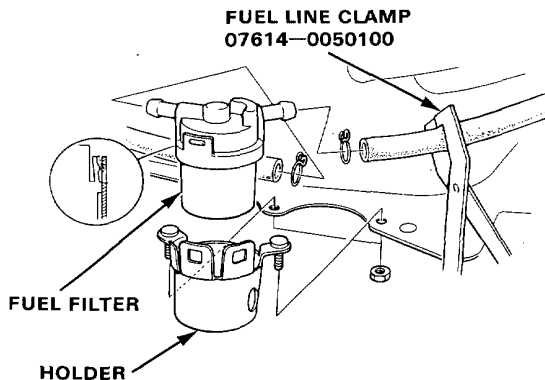


Fuel Pump

Testing


⚠ WARNING Do not smoke during the test. Keep any open flame away from your work area.

NOTE: Check for a clogged fuel filter and or fuel line before checking fuel pressure.

1. Remove the dashboard under cover and the fuel cut-off relay.
2. Connect a jumper wire between the No.1 terminal and the No.2 terminal.

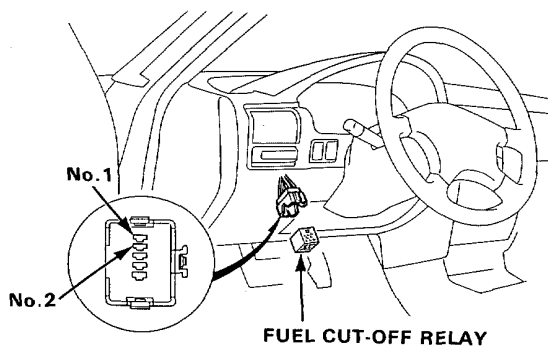

3. Disconnect the fuel line at the fuel filter in the engine compartment, and connect a pressure gauge to it as shown.

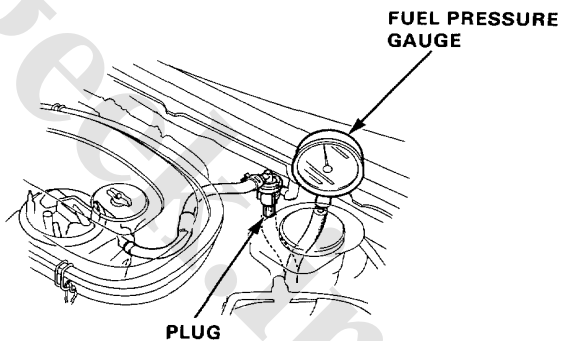

4. Turn ignition ON until pressure stabilizes, then turn key off.

Pressure should be 8.8–13.7 kPa (1.3–2.0 psi).

- If gauge shows at least 8.8 kPa (1.3 psi), go on to step 5.
- If gauge shows less than 8.8 kPa (1.3 psi), replace the pump and retest.

Fuel Supply System

Fuel Cut-off Relay

Testing


1. With the ignition switch off, remove the dashboard under cover.
2. Remove the fuel cut-off relay.
3. Check for continuity between the No.3 terminal and body ground.

Continuity should exist.

- If there is no continuity, check the BLK wire between the fuel cut-off relay and G401.

4. Attach the positive probe of the voltmeter to the No.2 terminal and the negative probe to the No.3 terminal. Then turn the ignition switch ON.


Battery voltage should be available.

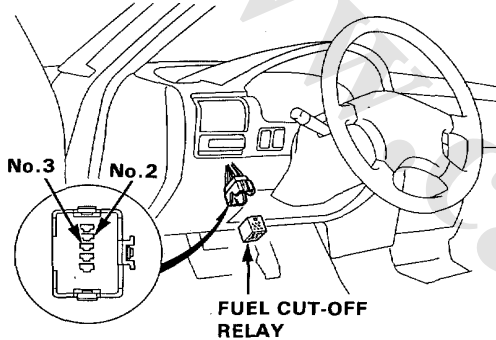

- If there is no voltage, check the BLK/YEL wire from the ignition switch and fuel cut-off relay as well as No.2 fuse.


5. Turn the ignition switch OFF. Attach the positive probe of the voltmeter to the No.4 terminal and the negative probe to the No.3 terminal. Then turn the ignition switch ON.

Battery voltage should be available.

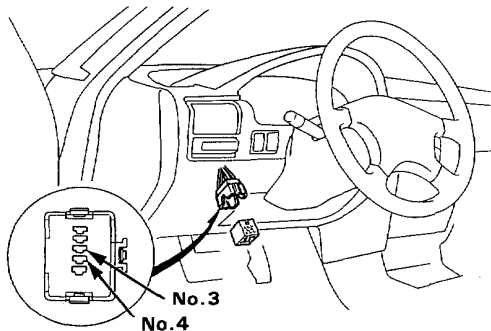

- If there is no voltage, check the BLU wire from the ignition coil and fuel cut-off relay.

6. Turn the ignition switch OFF. Connect a jumper wire between the No. 1 terminal and the No.2 terminal.

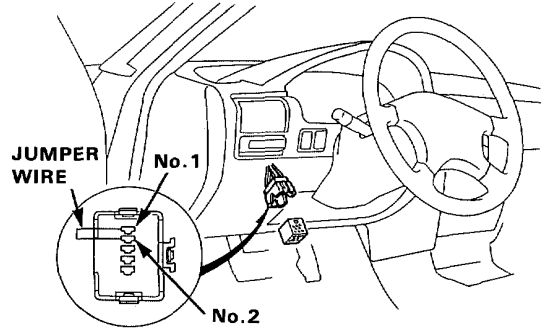


7. Turn the ignition switch ON.

The fuel pump should run.

- If the fuel pump does not run, and disconnect the 3P connector in the luggage area. Attach the positive probe of the voltmeter to YEL terminal and negative probe to body ground.

Battery should be available.

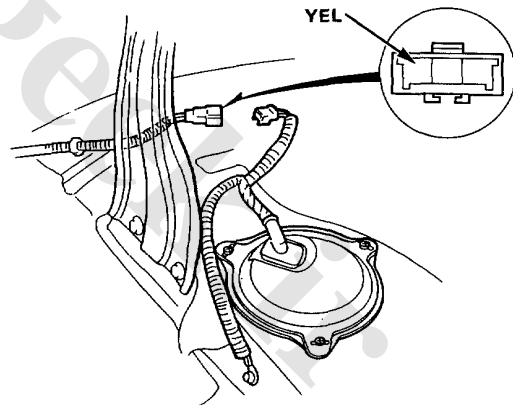

- If OK, check BLK wire between the fuel pump and G601, and YEL wire between the fuel pump and 3P connector. If OK, replace the fuel pump.
- If not, check YEL wire between the fuel cut-off relay and fuel pump.

If the wires are OK, replace the fuel cut-off relay and retest.



Fuel Tank

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from your work area.


1. Block front wheels. Jack up the rear of the car and support with jackstands.
2. Remove the drain bolt and drain the fuel into an approved container.
3. Disconnect the fuel gauge sending unit and fuel pump connectors.
4. Disconnect the hoses.

CAUTION: When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.

5. Place a jack, or other support, under the tank.
6. Remove the strap nuts and let the straps fall free.
7. Remove the fuel tank.

NOTE: The tank may stick on the undercoat applied to its mount. To remove, carefully pry it off the mount.

8. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

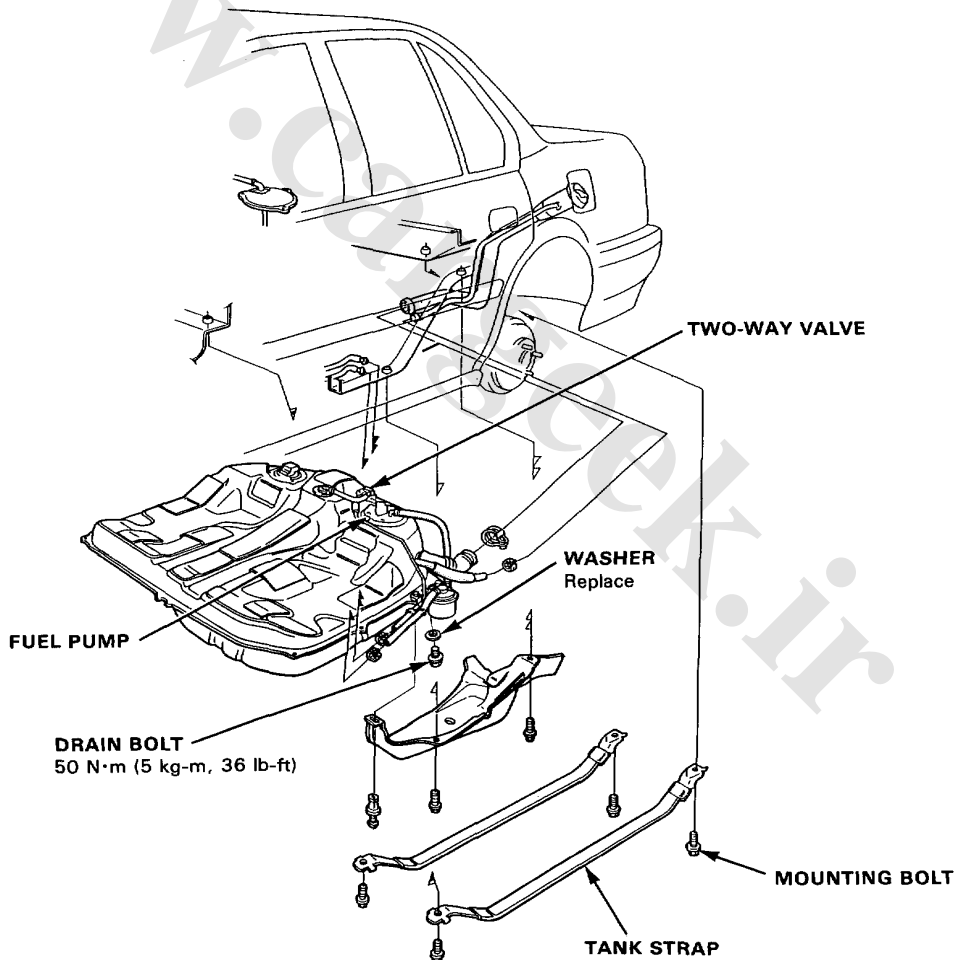

Air Intake System

Symptom-to-Sub System Chart

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in this page.


PAGE	SYSTEM	THROTTLE CABLE	AIR INTAKE CONTROL
SYMPTOM		99	100
LOSS OF POWER			①
AFTERBURN			①
HESITATION/SURGE			①



Throttle Cable

Inspection/Adjustment

1. Warm up the engine to normal operating temperature (the cooling fan comes on).
2. Check that throttle cable operates smoothly with no binding or sticking. Repair as necessary.
3. Start the engine and check cable free-play at throttle linkage at idle. Cable deflection should be 4-10 mm (3/16–3/8 in.).

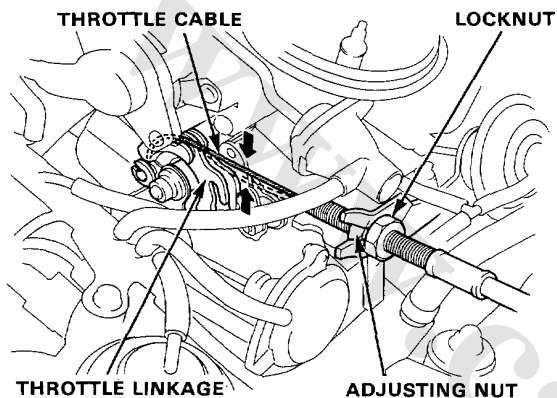


4. If deflection is not within specs, loosen locknut and turn adjusting nut until you can deflect cable as specified. Then tighten locknut.
5. With cable properly adjusted, check throttle valve to be sure it opens fully when you push accelerator pedal to the floor.


CAUTION: Check throttle valve to be sure it returns to idle position whenever you release accelerator.

Installation

1. KX, KS, KG, KQ and KF, KB, KE, KY, KW, KP, KT (M/T):
Disconnect the hose from the throttle controller and connect a vacuum pump to the controller, then apply vacuum.

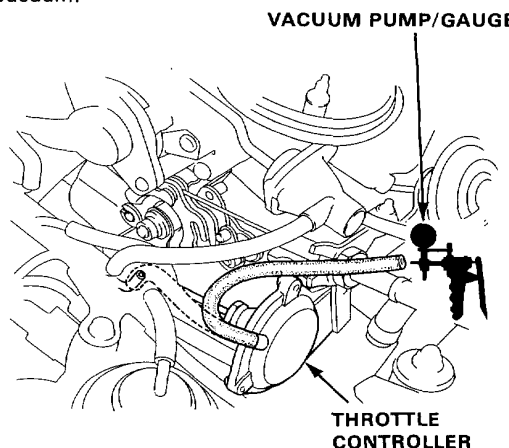

2. Fully open the throttle and choke valves, then close the throttle valve. Now, release the choke valve; the throttle linkage will be off the fast idle cam.
3. Install the throttle cable in the throttle linkage.
4. Remove the cable housing from the throttle bracket, set the adjusting nut on throttle bracket. Adjust the adjusting nut so that its free play is 0 mm.
5. Remove the cable housing from the throttle bracket, reset the adjusting nut and tighten the locknut.

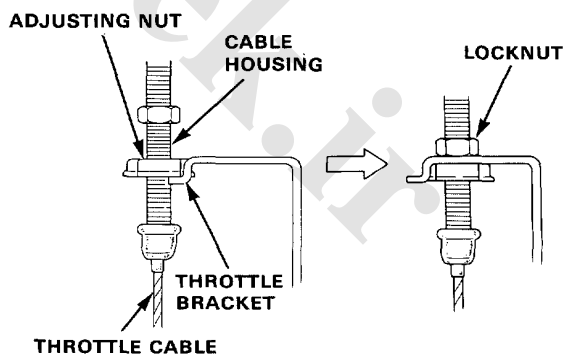

6. KX, KS, KG, KQ and KF, KB, KE, KY, KW, KP, KT (M/T):
Disconnect the vacuum pump and reconnect the throttle controller hose.
7. On models with automatic transmission, adjust the throttle control cable. See section 9.

Air Intake System


Intake Air Control System

Testing (COLD ENGINE)

NOTE: Intake air temperature must be below 25°C (77°F)


1. Disconnect the air intake duct and start the engine.

The air control door should rise.

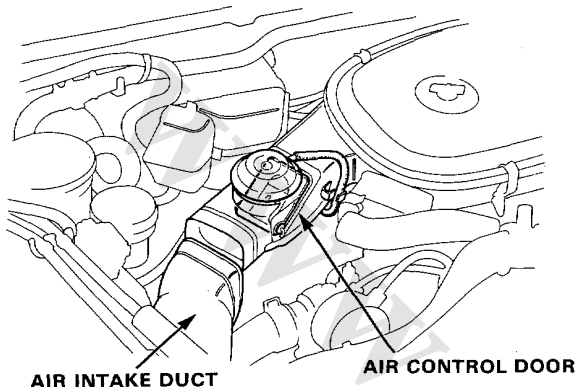

- If not, disconnect the #8 vacuum hose from the air control diaphragm, and connect a vacuum pump.

There should be vacuum.

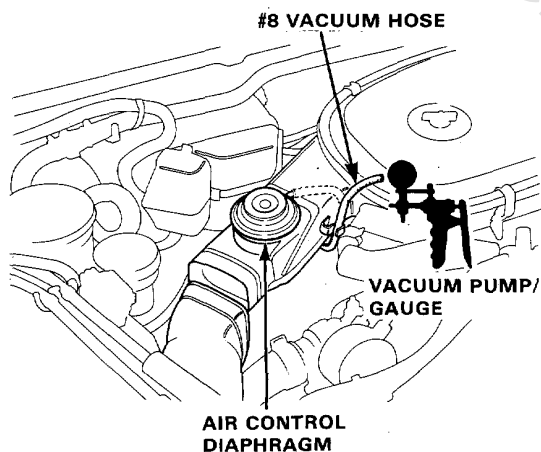


- If there is vacuum, replace the air control diaphragm and retest.
- If there is no vacuum, check the #8 vacuum hose for proper connection, cracks, blockage or disconnected hose, and replace the air bleed valve.

Testing (HOT ENGINE)

1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).

The air control door should be down.

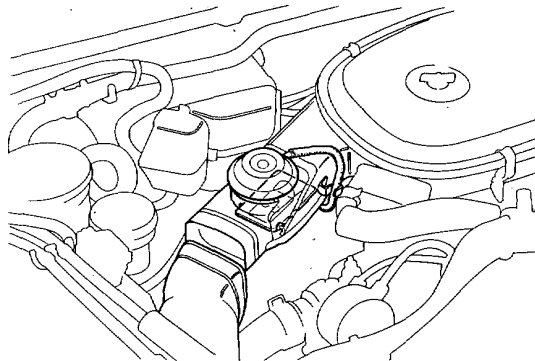

- If not, disconnect the #8 vacuum hose from the air control diaphragm, and connect a vacuum pump.

There should be no vacuum.

- If there is no vacuum, replace the air control diaphragm and retest.
- If there is vacuum, replace the air bleed valve and retest.



Emission Control System

Symptom-to-sub System Chart

(KX, KS, KG, KQ)

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in this page.

PAGE	SYSTEM	FEEDBACK CONTROL	THROTTLE CONTROL	EGR	EVAPORATIVE CONTROL	AIR INJECTION
	SYMPTOM	104	112	110	115	107
	ENGINE WON'T START			②	①	
DIFFICULT TO START ENGINE	WHEN COLD	①	②	②	①	
	WHEN WARM	①	②	③	①	
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFICATION	①	②	②		
	WHEN WARM ENGINE SPEED TOO HIGH		①			
	WHEN WARM ENGINE SPEED TOO LOW	①		②		
	ROUGH IDLE/ FLUCTUATION	①		②		
FREQUENT STALLING	WHILE WARMING UP	①		②		
	AFTER WARMING UP	①		②		
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	②		①		
	LOSS OFF POWER	①			①	
	AFTERBURN	①	②			②
	HESITATION/SURGE	①		②		

Emission Control System

Symptom-to-sub System Chart

(Except KX, KS, KG, KQ)

PAGE	SYSTEM	THROTTLE CONTROL	EVAPORATIVE CONTROL
SYMPTOM		113	117
ENGINE WON'T START		②	①
DIFFICULT TO START ENGINE	WHEN COLD	②	①
	WHEN WARM	②	①
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFICATION	①	
	WHEN WARM ENGINE SPEED TOO HIGH	②	①
	WHEN WARM ENGINE SPEED TOO LOW	②	①
	ROUGH IDLE/ FLUCTUATION	②	①
FREQUENT STALLING	WHILE WARMING UP	②	①
	AFTER WARMING UP	②	①
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING		①
	LOSS OFF POWER		①
	AFTERBURN	①	②
	HESITATION/SURGE		①



Tailpipe Emissions

Inspection

NOTE: It is not possible to use a CO meter to adjust the idle mixture; the effect of the catalytic converter prevents accurate tracking of such small changes in air-fuel ratio.

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. KX, KS, KG, KQ:
Check the idle speed/mixture using the propane enrichment method.
2. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
3. Start the engine and warm it up to normal operating temperature (the cooling fan comes on twice).
4. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO %:

KX, KS, KG, KQ: 0.1% maximum


Except KX, KS, KG, KQ: 1.0 ± 1.0%

Catalytic Converter

(KX, KS, KG, KQ)

Inspection

If excessive exhaust system back-pressure is suspected, remove the catalytic converter from the car and make a visual check for plugging, melting or cracking of the catalyst. Replace the catalytic converter if any of the visible area is damaged or plugged.

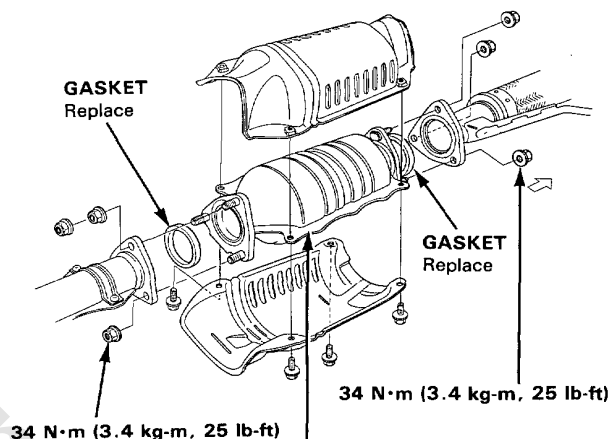

CATALYTIC CONVERTER

Removal Installation, section 5
Inspect housing for cracks or other damage.
Inspect element for clogging by looking through the inside.

Emission Control System

Feedback Control

Troubleshooting Flow Chart EACV


(KX, KS, KG, KQ)

Inspection of EACV.

Start the engine and warm up to normal operating temperature (the cooling fan comes on).

Remove the air cleaner cover.

Raise the engine speed to 5,000 min^{-1} (rpm).

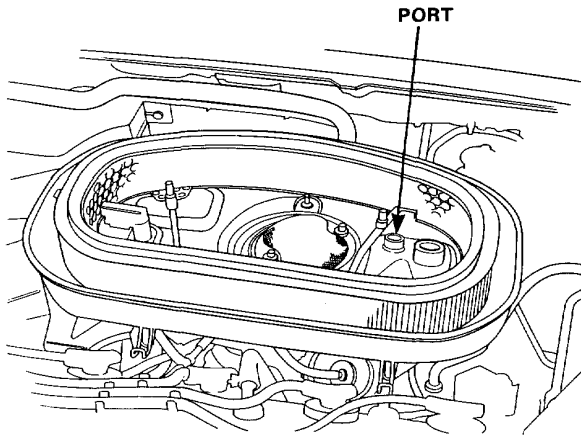

Is there vacuum ?

YES

Check the self-diagnosis indicator (page 6-22). If OK, replace the EACV and retest.

NO

Raise the engine speed to 5,000 min^{-1} (rpm), then close the throttle suddenly.

Is there vacuum ?

NO

Check the self-diagnosis indicator (page 6-22).

YES

Does LED indicate code 14 ?

YES

Go to EACV troubleshooting flowchart (page 6-105).

NO

Check the hose for proper connection, cracks, brockage or disconnected hose. If OK, replace the EACV and retest.

EACV is OK.



14 Self-diagnosis LED indicator blinks fourteen times: A problem in the Electronic Air Control Valve (EACV) circuit.

- Engine is running.
- LED indicates CODE 14.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Start engine.

Does LED indicates CODE 14 ?

NO → Intermittent failure (test driving may be necessary).

YES
Stop engine.

Disconnect the 2P connector on the EACV.

Measure resistance between the 2 terminals on the EACV.

Is there 10—15 Ω ?


NO → Replace EACV.

YES
Check for continuity to body ground on each terminal on the EACV.

Does continuity exist ?

YES → Replace EACV.

NO

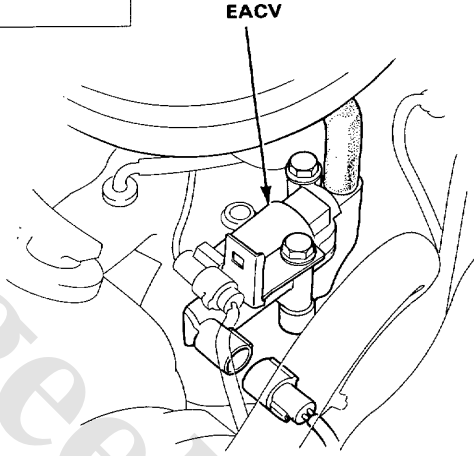

(To page 6-106)

(cont'd)


Emission Control System

Feedback Control (cont'd)

(From page 6-105)

Reconnect the 2P connector to EACV.

Connect the ECU test harness between the control unit and connector (page 6-20). Disconnect "A" connector from the main wire harness only, not the control unit.



Check for continuity between A10 terminal and the body ground.

Does continuity exist ?

NO

Repair open in BLK wire between control unit (A10) and G101.


YES

Measure resistance between A1 (+) terminal and A3 (-) terminal.

10-15 Ω

A1

A3



Is there 10-15 Ω ?

NO

Repair open in BLK/BLU wire between control unit (A1) and EACV or YEL/BLK wire between control unit (A3) and EACV.

YES

Substitute a known-good control unit and recheck. If prescribed voltage is now available replace the original control unit.



Air Injection Control


(KX, KS, KG, KQ)

Testing


1. Start the engine.
2. Remove the air cleaner cover and filter.
3. Start the engine and check for a bubbling noise from the air suction port idle.

A bubbling noise should not be heard.

NOTE: Engine coolant temperature must be below 30°C (86°F)

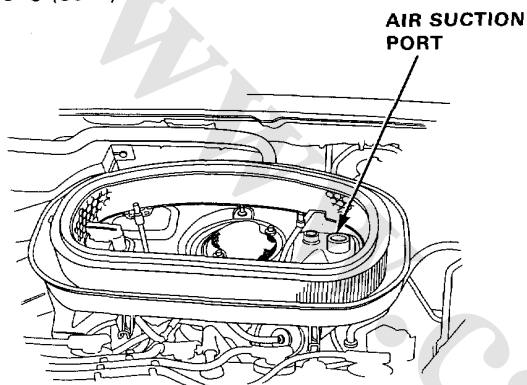

- If a bubbling noise is heard, disconnect the #5 vacuum hose from the air suction valve and connect a vacuum pump.
- There should be no vacuum.

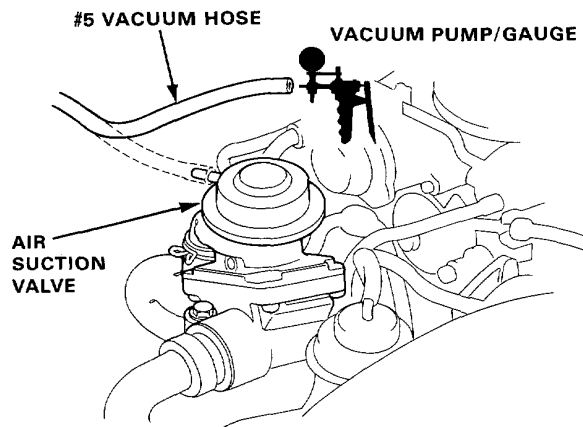

- If there is no vacuum, replace air suction valve and retest.
- If there is vacuum, go to troubleshooting (page 6-108).

4. Warm up to normal operating temperature.
NOTE: Engine coolant temperature must be below 70°C (158°F).

A bubbling noise should be heard.

- If bubbling noise is not heard, disconnect the #5 vacuum hose from the air suction valve and connect a vacuum pump.

There should be vacuum.

- If there is vacuum, replace the air suction valve and retest.
- If there is no vacuum, check the #5 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to troubleshooting (page 6-108).

(cont'd)

Emission Control System

Air Injection Control (cont'd)

Troubleshooting Flow Chart Air Suction Control Solenoid Valve

Inspection of Air Suction Control Solenoid Valve.

(KX. KS. KG)

(KQ)


Open the control box lid.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect the #5 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.

Apply vacuum.

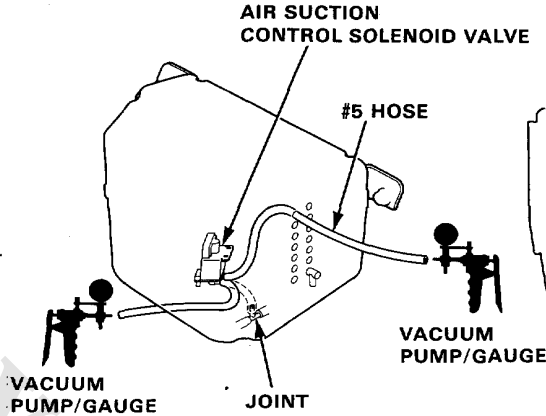

NOTE: Engine coolant temperature must be below 30 °C (86 °F)


Does solenoid valve hold vacuum ?

NO

Turn the ignition switch OFF.

Disconnect the connector on the control box.

(KX. KS. KG)

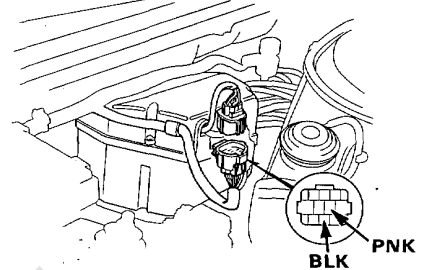

YES


Warm up normal operating temperature.

NOTE: Engine coolant temperature must be below 70 °C (158 °F)

Start the engine.

Measure voltage between;
KX, KS, KG: PNK (+) and BLK (-) terminals
KQ: LT GRN (+) and BLK (-) terminals

(KQ)

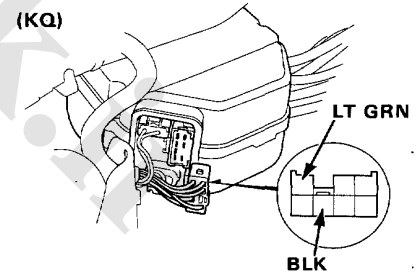

Is there voltage ?


YES

NO

Replace the solenoid valve.

Check the self-diagnosis indicator (page 6-22). If OK, substitute a known-good control unit and retest. If symptom goes away, replace the original control unit.

(page 6-109)

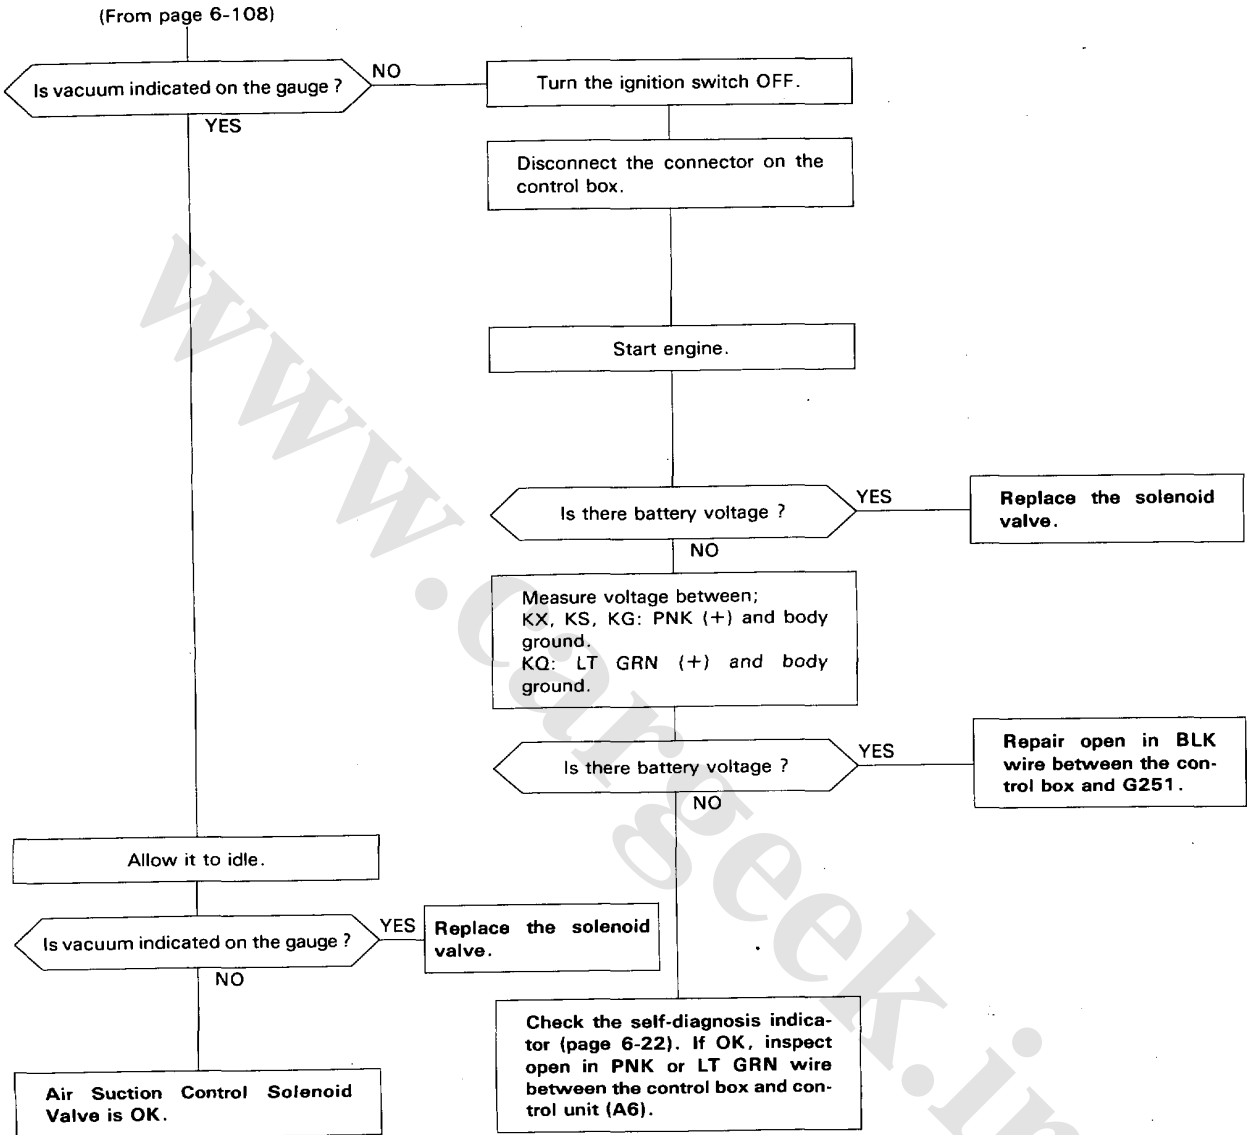


Emission Control System

EGR System

Testing (COLD ENGINE)

NOTE: The engine coolant temperature must be below the thermostatic valve B set temperature (55°C, 131°F).

1. Disconnect the vacuum hose from the EGR valve and connect a vacuum gauge to the hose.

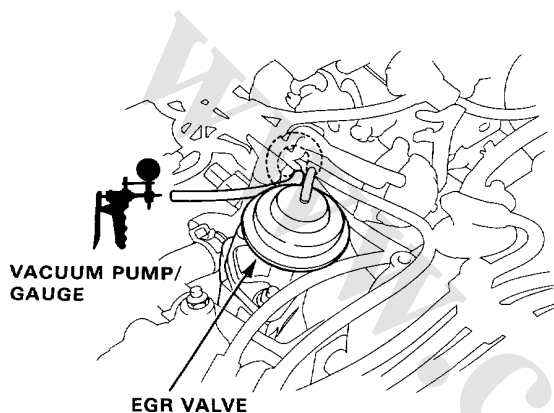


2. Start the engine and raise the engine speed to 3,000 min^{-1} (rpm)

Vacuum should not be available.

- If vacuum is not available, go on to the hot engine inspection (right column).
- If vacuum is available, replace thermostatic valve B and retest.

Testing (HOT ENGINE)


1. Disconnect the vacuum hose from the EGR valve and connect a vacuum gauge to the hose.

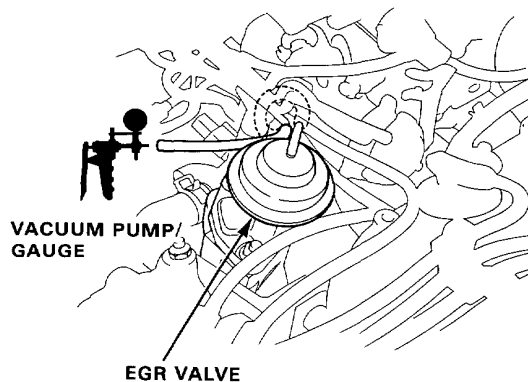

2. Start the engine and wait for the cooling fan to come on.
3. Remove the control box and remove the control box cover.

Vacuum should be as shown below:


Condition		Vacuum at EGR hose
1	Idle	No
2	3,000 min^{-1} (rpm)	Yes, 50–152 mm
3	3,000 min^{-1} (rpm) with blocked vacuum bleed (shown next column)	Less than 50 mm Hg
4	Rapid acceleration	Yes, 50–152 mm Hg
5	Deceleration	No

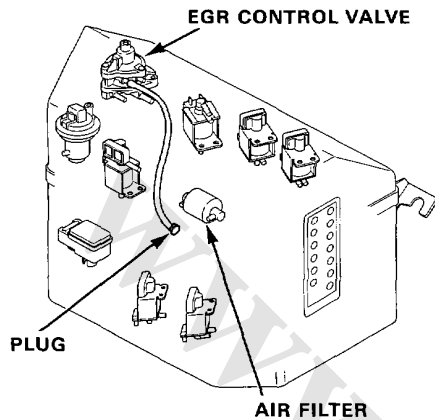

- If vacuum is available at idle (condition 1) check the vacuum hoses for proper routing and connections, then check for correct idle speed and idle mixture, and make adjustment as necessary.
- If there is no vacuum in conditions 2 and 4, check the #10, #11, #15, #16 and #17 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, replace the thermostatic valve B and retest.
- If vacuum is more than 50 mm Hg in condition 3, replace the EGR control valve and check the vacuum hoses for proper routing and connections.

EGR Valve

1. Start engine and allow to idle.
2. Disconnect vacuum hose from EGR Valve and connect a vacuum pump to EGR Valve

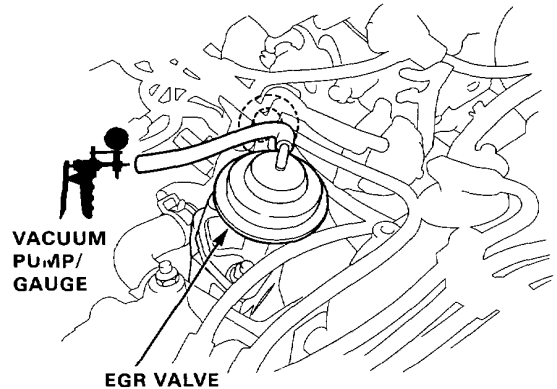

3. Apply 150 mm Hg (6 in. Hg) vacuum to EGR Valve. Vacuum should remain steady and engine should die.
 - If vacuum remains steady and engine dies, EGR valve is working properly, remove the vacuum pump and reconnect EGR vacuum hose ; test is complete.
 - If vacuum does not remain steady and engine does not die, replace EGR valve and retest.
 - If vacuum remains steady but engine does not die : Remove EGR valve ; check EGR valve and manifold for blockage, clean or replace as necessary and retest.

Emission Control System


Throttle Control System

Testing (HOT ENGINE)


(KX, KS, KG, KQ AND KF, KB, KE, KY, KW, KP, KT (A/T))

1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Disconnect the #6 vacuum hose from the throttle controller and check the engine speed.

Engine speed should be: $1,800 \pm 300 \text{ min}^{-1}$ (rpm)

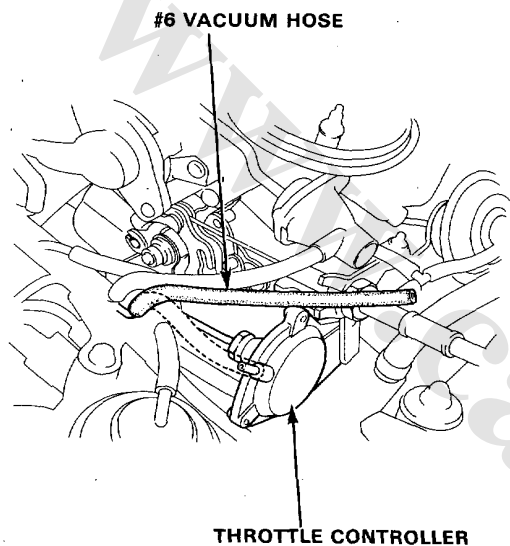


- If the engine speed is excessively high, adjust by turning the adjusting screw.

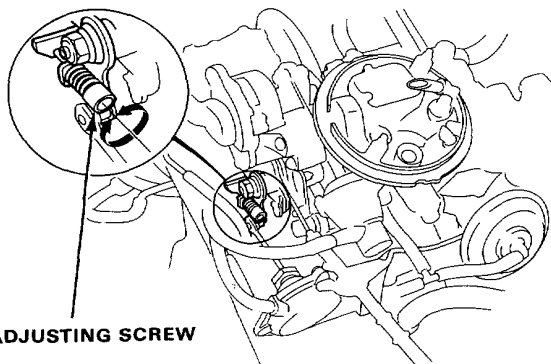

- If the engine speed does not change, connect a vacuum pump to the #6 vacuum hose and check vacuum.

There should be vacuum.

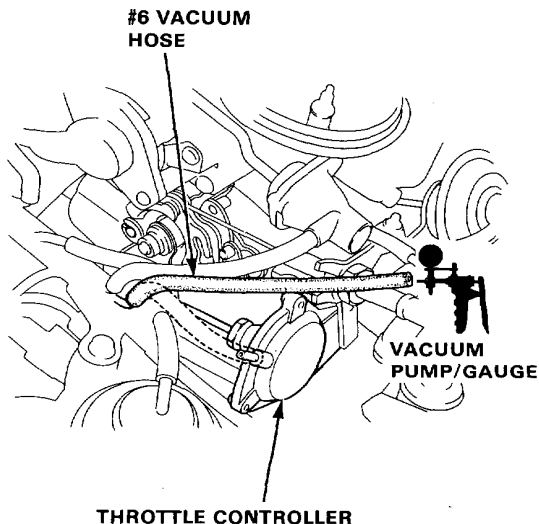

- If there is no vacuum, check the #6 vacuum hose for proper connection, cracks, brockage or disconnected hose.
- If there is vacuum, replace the throttle controller and retest.

3. Reconnect the #6 vacuum hose and check the idle speed. Idle speed should be within specification (page 6-77).




Testing


(Except KX, KS, KG, KQ and KF, KB, KE, KY, KW, KP, KT (A/T))

1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Disconnect #6 vacuum hose from the throttle controller, connect a vacuum pump to the controller and apply 400 mmHg (16 in. Hg) vacuum.

Engine speed should rise to 1,300–2,300 min^{-1} (rpm) with in 1 minute.

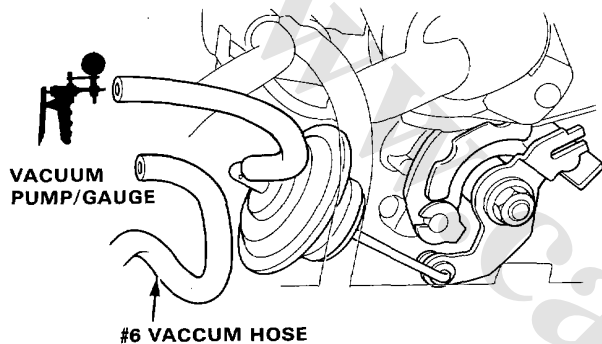

- If the engine speed is excessively high, adjust the engine speed by bending TAB.

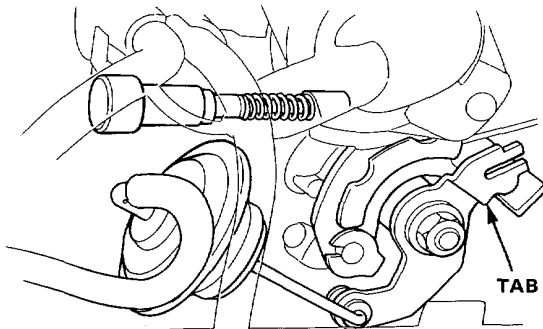

- If the engine speed does not change, replace the throttle controller and retest.


Throttle Controller Control Valve Testing

(Except KX, KS, KG, KQ AND KF, KB, KE, KY, KW, KP, KT (A/T))

1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Connect a vacuum pump to the #6 vacuum hose.

Raise the engine speed to 3,500 min^{-1} (rpm) and close the throttle suddenly, then check vacuum.


There should be vacuum.

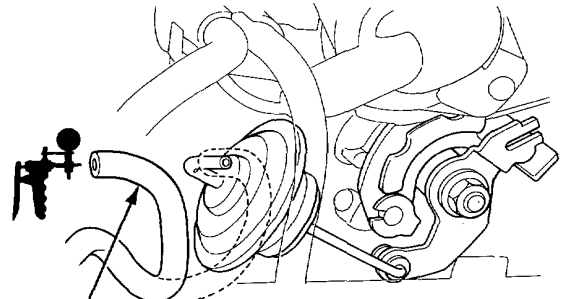

#6 VACUUM HOSE

- If there is vacuum, replace the throttle controller and retest.
- If there is no vacuum, check the #6 vacuum hose for proper connection, cracks, blockage or disconnected hose, and disconnected the lower vacuum hose from the throttle controller control valve. Check the vacuum.

There should be vacuum.

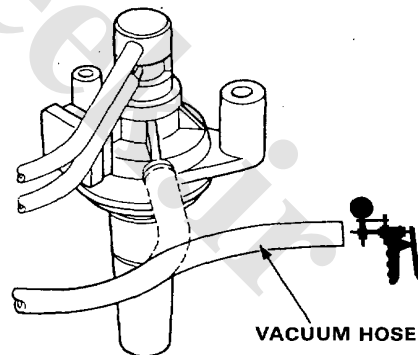

- If there is no vacuum, check the lower and #3 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, replace the throttle controller control valve.


3. Reconnect the #6 vacuum hose and check the idle speed. Idle speed should be within specification (page 6-77).

Emission Control System


Positive Crankcase Ventilation System

PCV Valve Testing

1. Check the crankcase ventilation hoses and connections for leaks, cracks or clogging.

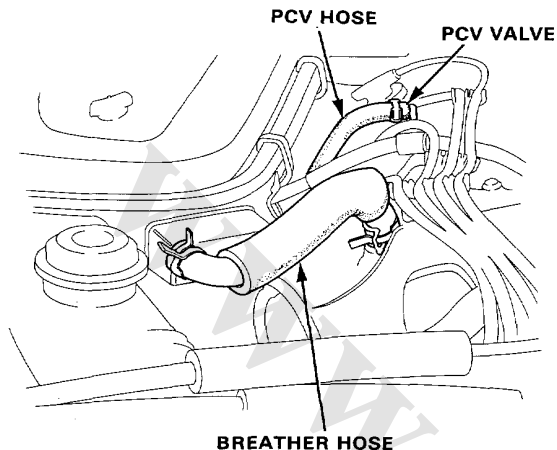

2. At idling, make sure there is a clicking sound from the PCV valve when the hose between PCV valve and intake manifold is lightly pinched with your fingers or pliers.

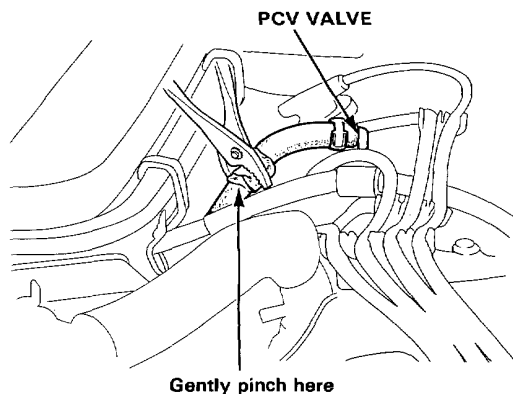


- If there is no clicking sound, check the PCV valve grommet for cracks or damage. If the grommet is OK, replace the PCV valve and recheck.

Blow-by Filter Testing

Inspect the condition of the blow-by filter.

- Replace the filter in the following instances;
 - When the filter is stuck fast and oil is dripping or seeping through.
 - When the filter is covered with dust and dirt so that clogging is evident.

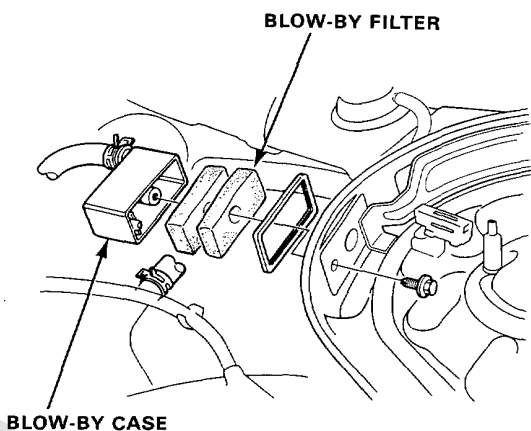




Evaporative Emission Controls

(KX, KS, KG, KQ)

Testing (COLD ENGINE)

NOTE: Engine coolant temperature must be below 63 °C (145°F)

1. Disconnect the vacuum hose (KQ: #19) at purge control diaphragm valve and connect vacuum pump/gauge to the hose.

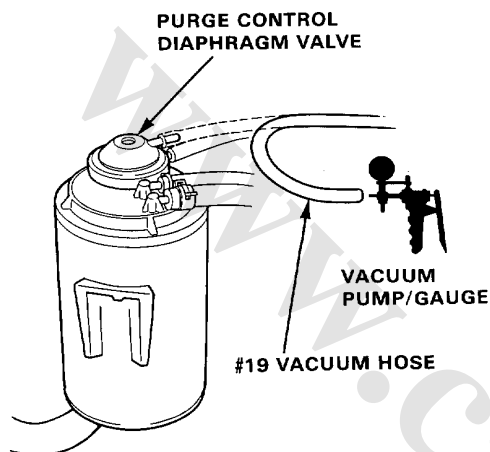


2. Start the engine and allow to idle.

There should be no vacuum.

- If there is no vacuum, go to hot engine test (next column).
- If there is vacuum, go to troubleshooting (page 6-119).

Testing (HOT ENGINE)

1. Disconnect the vacuum hose (KQ: #19) at the purge control diaphragm valve and connect a vacuum pump/gauge to the hose.

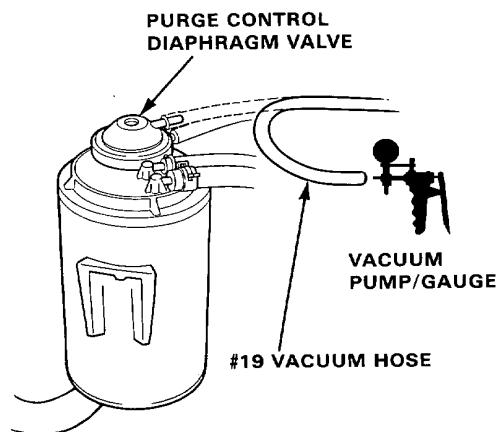

2. Start the engine and warm up to normal operating temperature (the cooling fan comes on). Block rear wheels and set the parking brake. Jack up the front of the car and support with safety stands.

⚠ WARNING Block rear wheels before jacking up front of car.

Place the shift or selector lever in 2nd gear or "2" range and accelerate above 5 km/h, 2,000 min⁻¹ (rpm).

There should be vacuum.


- If there is vacuum, go to step 3.
 - If there is no vacuum, check the #19 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to troubleshooting (page 6-119).
3. Disconnect a vacuum pump/gauge and reconnect hose.
 4. Remove fuel filler cap.

(cont'd)

Emission Control System

Evaporative Emission Controls (cont'd)

5. Remove the canister purge air hose from frame and connect hose to a vacuum gauge as shown.

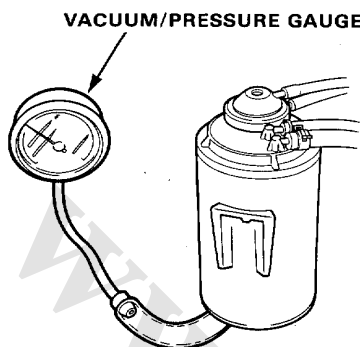

6. Place the shift or selector lever in 2nd gear or "2" range and raise the engine speed to 3,500 min⁻¹ (rpm). Vacuum should appear on the gauge within 1 minute.


- If vacuum appears on the gauge in 1 minute, remove the gauge and go on to step 8.
- If no vacuum, disconnect the vacuum gauge and reinstall the fuel filler cap.

7. Remove the charcoal canister and check for signs of damage.

- If damaged, replace the canister.
- If OK, go on to step 8.

8. Stop the engine. Disconnect the hose from the canister PCV fitting. Connect a vacuum pump to the canister PURGE fitting as shown, and apply vacuum.

Vacuum should remain steady.

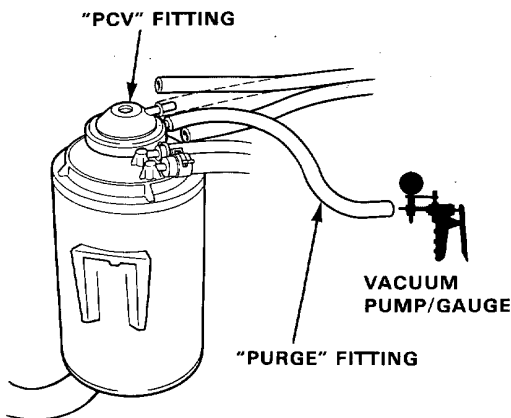

- If vacuum remains steady, go on to step 9.

- If vacuum drops, replace the canister and retest.


9. Restart the engine. Reconnect the hose to the canister PCV fitting, and raise engine to 3,500 min⁻¹ (rpm) (in 2nd gear or "2" range).

PURGE side vacuum should drop to zero.

- If PURGE side vacuum does not drop to zero, replace the canister and retest.

10. Connect a vacuum pump to TANK fitting as shown, and apply vacuum.

If should not hold vacuum.

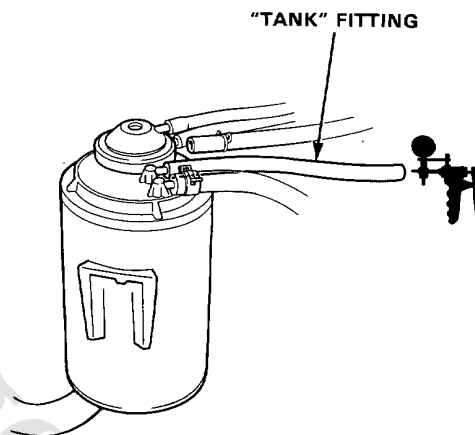


- If it does not hold vacuum, reinstall fuel filler cap and canister; test is complete.

- If it holds vacuum, replace canister and retest.



(Except KX, KS, KG, KQ)
Testing


1. Disconnect vacuum hose at the charcoal canister, connect a vacuum pump/gauge to hose.

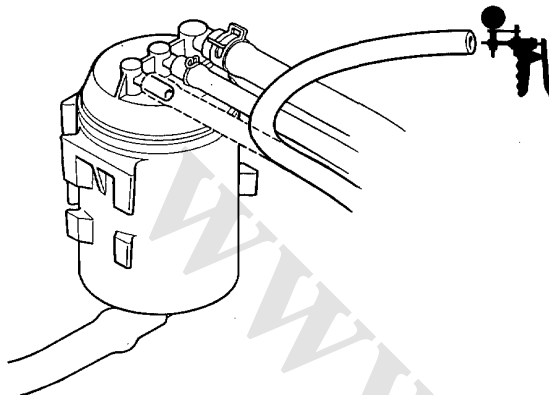

2. Start the engine and raise speed to 3,500 min⁻¹ (rpm).

There should be vacuum.

- If vacuum is available, go on to step 3.
 - If vacuum is not available, check the vacuum line.
3. Disconnect a vacuum pump/gauge and reconnect hose. Remove fuel filler cap.
 4. Remove canister purge air hose from frame and connect hose to a vacuum gauge as shown.

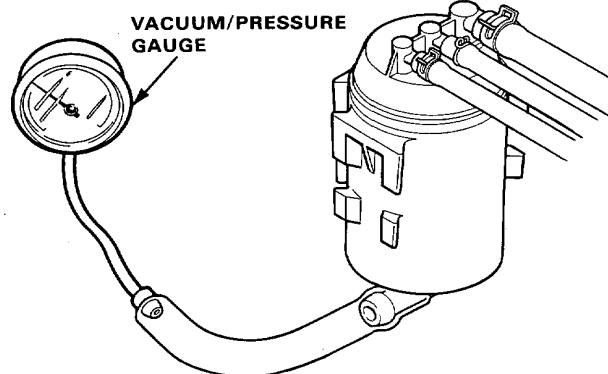


5. Raise engine speed to 3,500 min⁻¹ (rpm). Vacuum should appear on gauge within 1 minute.

- If vacuum appears on gauge in 1 minute, remove gauge and go on to step 7.
- If no vacuum, disconnect a vacuum pump/gauge and go on to step 6.

6. Remove charcoal canister and check for signs of damage or defects.

- If defective, replace the charcoal canister.
- If OK, except KY: test is complete (KY: go on to step 7).

7. KY:
Connect vacuum pump/gauge to TANK fitting as shown, and apply vacuum.

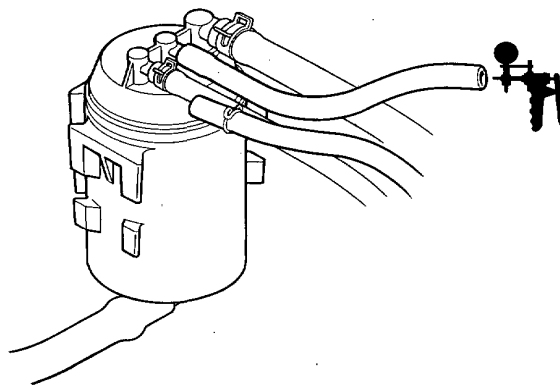

- If vacuum does not remain steady, test is complete.
- If vacuum remains steady, replace the charcoal canister.

(cont'd)


Emission Control System

Evaporative Emission Controls (cont'd)

(KX, KS, KG, KO, KY)

Two-Way Valve

1. Remove the filler cap.
2. Remove vapor line from the fuel tank and connect a T-fitting from a vacuum gauge and vacuum pump as shown.

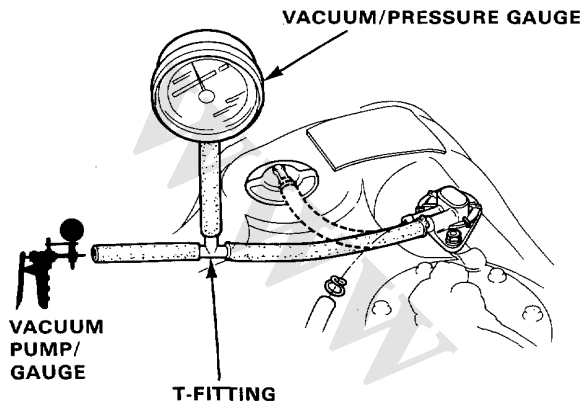


3. Slowly draw a vacuum while watching the gauge.

Vacuum should stabilize at 5 to 15 mmHg (0.2 to 0.6 in. Hg).

- If vacuum stabilizes momentarily (two-way valve opens) between 5 and 15 mmHg (0.2 and 0.6 in. Hg), go on to Step 4.
- If vacuum stabilizes (valve opens) below 5 mmHg (0.2 in. Hg) or above 15 mmHg (0.6 in. Hg), install new valve and retest.

4. Move hand pump hose from vacuum to pressure fitting, and move vacuum gauge hose from vacuum to pressure side as shown.

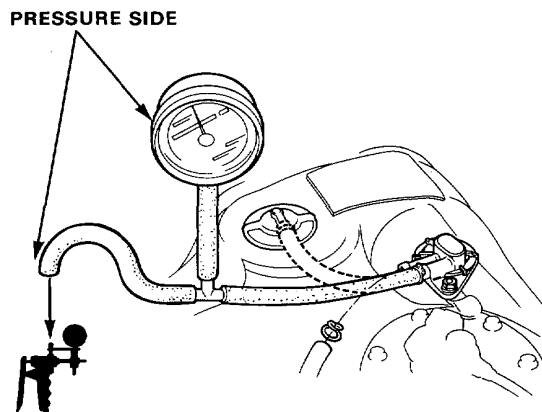


5. Slowly pressurize the vapor line-while watching the gauge.

Pressure should stabilize at 10 to 35 mmHg (0.4 to 1.4 in. Hg).

- If pressure momentarily stabilizes (valve opens) at 10 to 35 mmHg (0.4 to 1.4 in. Hg), the valve is OK.
- If pressure stabilizes below 10 mmHg (0.4 in. Hg) or above 35 mmHg (1.4 in. Hg), install a new valve and retest.



Troubleshooting Flowchart Purge Cut-off Solenoid Valve
(KX, KS, KG, KQ)

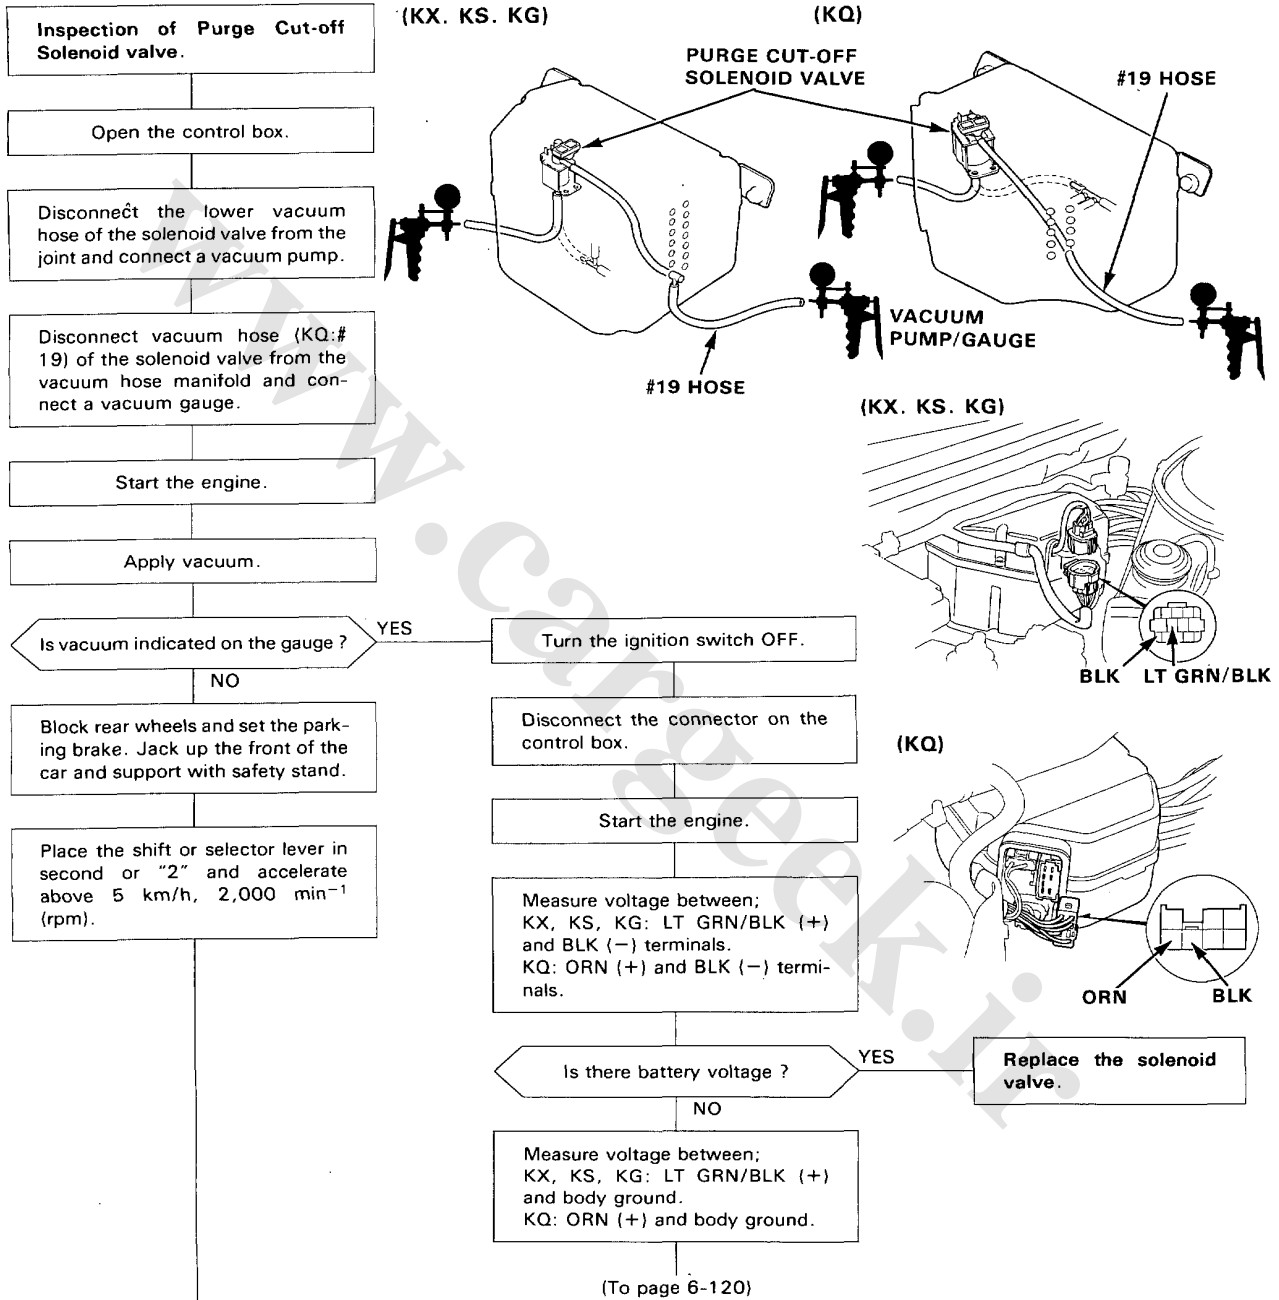


(To page 6-120)

WARNING Block rear wheels before jacking up front of car.

(cont'd)

Emission Control System

Evaporative Emission Controls (cont'd)

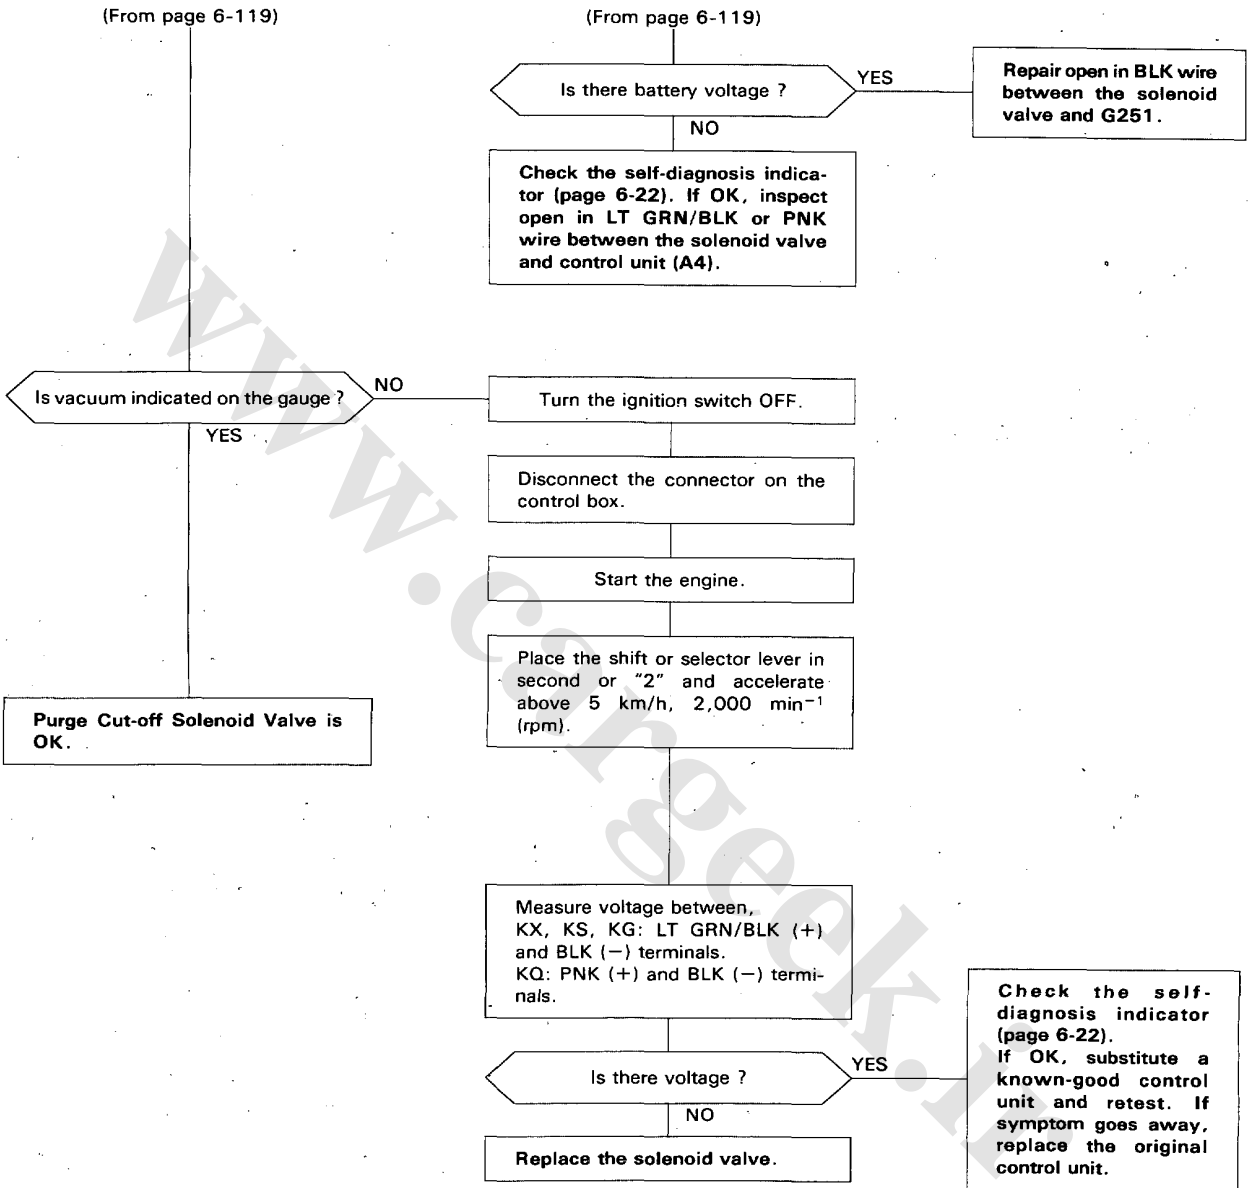



Troubleshooting Flowchart Air Vent Cut-off Solenoid Valve (Except KT, KP)

Inspection of Air Vent Cut-off Solenoid Valve.

Disconnect the vacuum hose from the vacuum hose manifold.

Apply 100 mmHg (4 in.Hg) vacuum to the hose.

Does solenoid valve hold vacuum ?

YES — Replace the solenoid valve.

NO

Turn the ignition switch ON.

Apply 100 mmHg (4 in.Hg) vacuum to the hose.

Does solenoid valve hold vacuum ?

NO — Turn the ignition switch OFF.

YES

Air Vent Cut-off Solenoid Valve is OK.



Disconnect the connector of the solenoid valve.

Turn the ignition switch ON.

Measure voltage between BLK/YEL (+) terminal and body ground.

Is there battery voltage ?

NO — Repair open in BLK/YEL wire between the ignition switch and the connector as well as No.2 fuse.

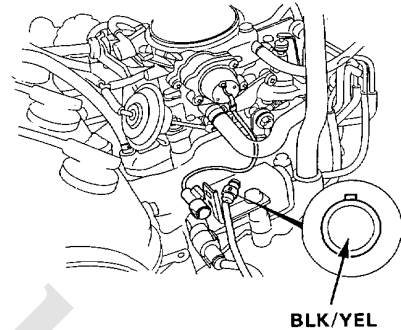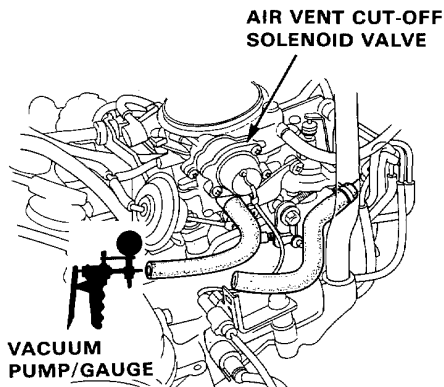

YES — Replace the solenoid valve.




Vacuum Controlled Secondary

Testing


(KX, KS, KG, KQ)

1. Disconnect the secondary diaphragm vacuum hose and attach a spare piece of hose between the diaphragm and a vacuum pump.
2. Open the throttle valve fully and apply a vacuum. Check the diaphragm rod moves as vacuum is applied and that the vacuum then remains steady.

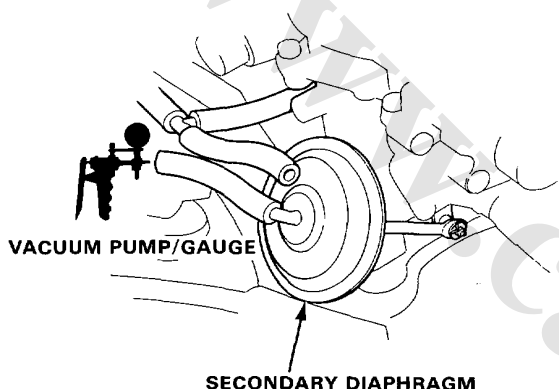

- If the vacuum does not hold or the rod does not move, first check the hose for proper connection and condition, then replace the diaphragm and recheck.


3. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
4. Disconnect the vacuum hose from the 3-way joint connect a vacuum pump and apply vacuum. It should not hold vacuum.

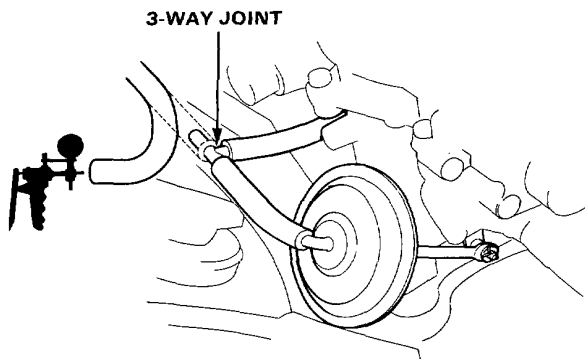

- If it holds vacuum, check the vacuum line for proper connection or cracks. If OK, go to the air leak solenoid valve troubleshooting (page 6-67).
5. Raise the engine speed to 5,000 min⁻¹ (rpm), then close the throttle suddenly. And then apply vacuum.

It should hold vacuum.

- If it does not hold vacuum, check the vacuum line for proper connection, blockage or disconnected hose. If OK, go to the air leak solenoid valve troubleshooting (page 6-67).
6. Disconnect the vacuum hose from the 3-way joint and connect to a vacuum pump/gauge. Apply a vacuum. It should not hold vacuum.

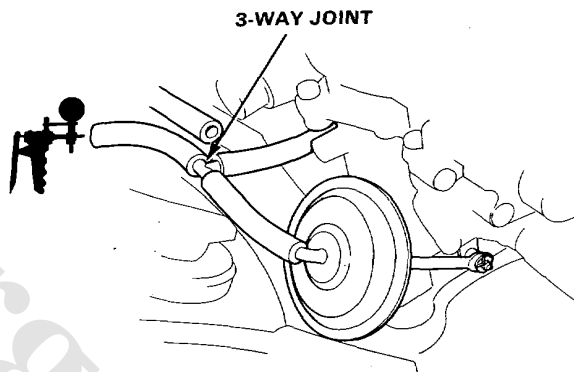

- If vacuum does not hold, test is complete.
- If vacuum is held, check the hose, the 3-way joint and clean the vacuum port.


(cont'd)

Carburetor

Vacuum Controlled Secondary (cont'd)

(Except KX, KS, KG, KQ)


1. Disconnect the secondary diaphragm vacuum hose and attach a spare piece of hose between the diaphragm and a vacuum pump.
2. Open the throttle valve fully and apply a vacuum. Check the diaphragm rod moves as vacuum is applied and that the vacuum then remains steady.

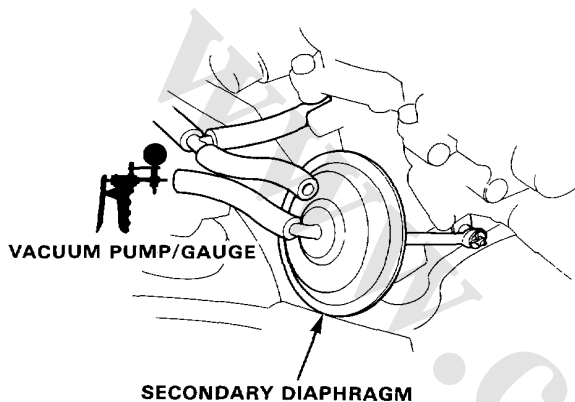


- If the vacuum does not hold or the rod does not move, first check the hose for proper connection and condition, then replace the diaphragm and recheck.

3. Disconnect the vacuum hose from the 3-way joint, connect a vacuum pump and apply vacuum.
NOTE: KP, KT ; The engine coolant temperature must be below 60°C (140°F).
Except KP, KT ; The engine coolant temperature must be below 55°C (131°F).

It should not hold vacuum.

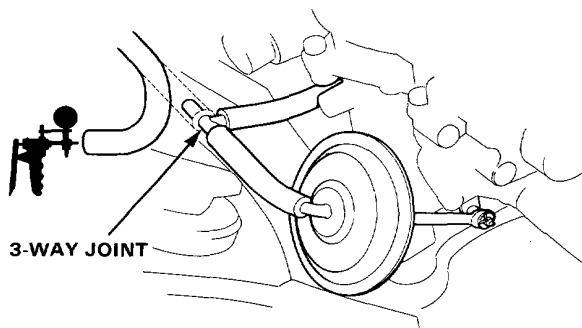

- If it holds vacuum, check the vacuum line for proper connection or cracks. If OK, replace the ther-mo-valve D.
4. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
 5. Apply vacuum. It should hold vacuum.
 - If it does not hold vacuum, check the vacuum line for proper connection, blockage or disconnected hose. If OK, replace the ther-mo-valve D.
 6. Disconnect the vacuum hose from the 3-way joint and connect to a vacuum pump/gauge. Apply a vacuum. It should not hold vacuum.

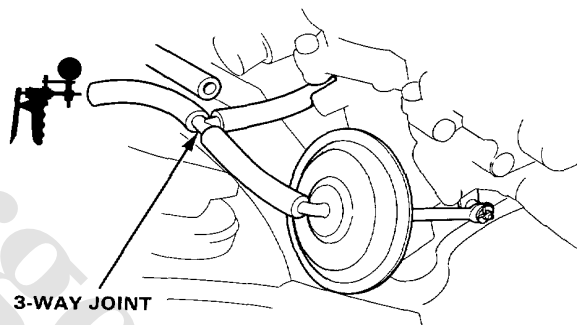

- If vacuum does not hold, test is complete.
- If vacuum is held, check the hose, the 3-way joint and clean the vacuum port.



Slow Air Jet Control System


Troubleshooting Flowchart Air Leak Solenoid Valve (KX, KS, KG, KQ)

Inspection of Air Leak Solenoid Valve.

Disconnect the #2 vacuum hose from the carburetor and connect a vacuum pump, then cap the carburetor.

Start the engine.

VACUUM PUMP/ GAUGE CAP

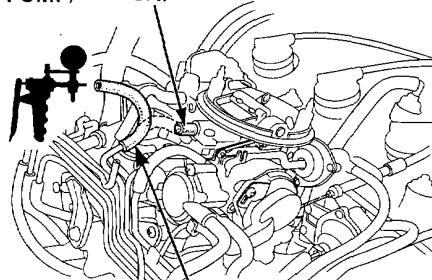

#2 VACUUM HOSE

Apply 100 mmHg (4 in. Hg) vacuum to the hose.

Does solenoid valve hold vacuum ?

NO

NOTE: Engine coolant temperature must be below 63°C (145°F).

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Measure voltage between BLU/ YEL (+) terminal and BLK (-) terminal.

Is there battery voltage ?

YES

Replace the solenoid valve.

NO

Measure voltage between BLU/ YEL (+) terminal and body ground.

Is there battery voltage ?


YES

Repair open in BLK wire between the solenoid valve and G251.


NO

Check the self-diagnosis indicator (page 6-22). If OK, inspect open in wire between the solenoid valve and control unit (A26).

(KX. KS. KG)

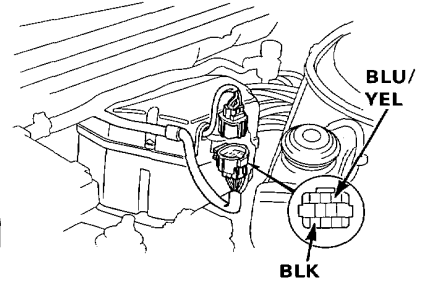

(KQ)

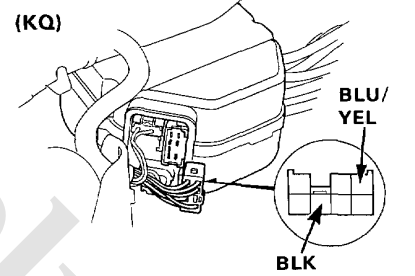

Raise the engine speed to 5,000 min⁻¹ (rpm), then close the throttle suddenly.

YES

(To page 6-68)

(cont'd)

Carburetor

Slow Air Jet Control System (cont'd)

(From page 6-67)

Apply 100 mmHg (4 in. Hg) vacuum to the hose.

Does solenoid valve hold vacuum ?

YES

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Raise the engine speed to 5,000 min⁻¹ (rpm), then close the throttle suddenly.

Measure voltage between BLU/ YEL (+) terminal and BLK (-) terminal.

Is there voltage ?

YES

Check the self-diagnosis indicator (page 6-22).
If OK, check the input troubleshooting (page 6-22).

NO

Replace the solenoid valve.

NO

Air Leak Solenoid Valve is OK.




Power Valve

Testing (KX, KS, KG, KQ)

1. Disconnect the #14 vacuum hose from the vacuum hose manifold and connect a vacuum pump. Apply vacuum and listen for a clicking noise from the power valve.

VACUUM PUMP/GAUGE

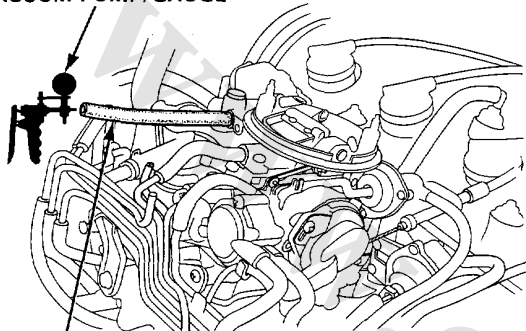


#14 VACUUM HOSE

- If a clicking sound is heard, go on to step 2.
- If no sound is heard, replace the power valve and retest.

2. Disconnect the #14 vacuum hose from the carburetor and connect a vacuum gauge to the hose.

#14 VACUUM HOSE

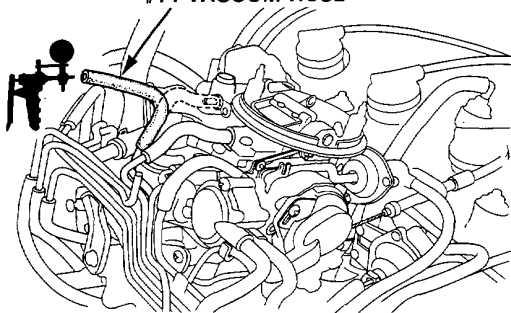

3. Start the engine and check the vacuum. There should be no vacuum for about 3 seconds after the engine is started. And there should be vacuum within 15 seconds after the engine is started.
NOTE: The engine coolant temperature must be below 30°C (86°F).

- If not, check the #14 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the power valve control solenoid valve troubleshooting (page 6-71).
4. Warm up to normal operating temperature (the cooling fan comes on).
 5. Check the vacuum.

There should be vacuum.

- If not, check the #14 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the power valve control solenoid valve troubleshooting (page 6-71).

(cont'd)


Carburetor

Power Valve (cont'd)

Testing

(Except KX, KS, KG, KO)


1. Disconnect the #14 vacuum hose from the vacuum hose manifold and connect a vacuum pump. Apply vacuum and listen for a clicking noise from the power valve.

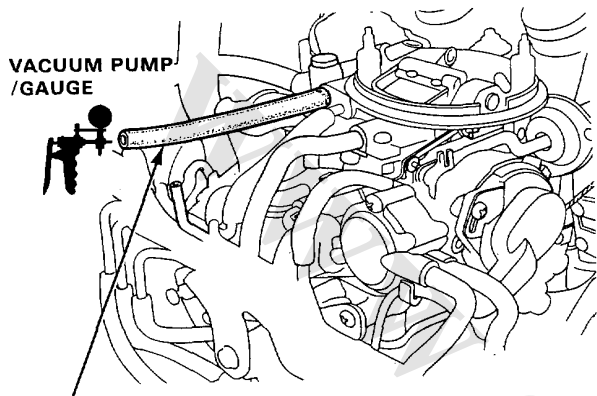

#14 VACUUM HOSE

- If a clicking sound is heard, go on to step 2.
- If no sound is heard, replace the power valve and retest.

2. Disconnect the #14 vacuum hose from the carburetor and connect a vacuum gauge to the hose.

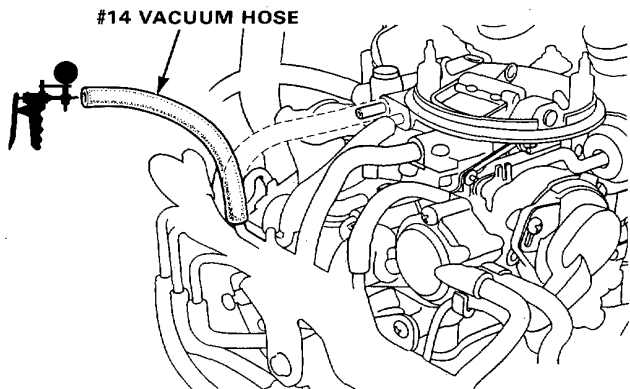

#14 VACUUM HOSE

3. Start the engine and check the vacuum.
NOTE: The engine coolant temperature must be below 35°C (95°F).
There should be no vacuum.

- If there is vacuum, check the #14 and #6 (KT, KP: #12) vacuum line for proper connection.

- If there is vacuum, check the vacuum hose for proper connection. If OK, replace the thermostatic valve C.

4. Warm up to normal operating temperature (the cooling fan comes on).

5. Check the vacuum.

There should be vacuum.

- If there is no vacuum, check the #14 and #6 (KT, KP: #12) vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, replace the thermostatic valve C.



Troubleshooting Flowchart
(KX, KS, KG, KQ)

Power Valve Control Solenoid Valve

Inspection of Power Valve control Solenoid Valve.

Open the control box.



Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect #14 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.



Start engine.

Apply vacuum for about 3 seconds after the engine is started.

Is vacuum indicated on the gauge?

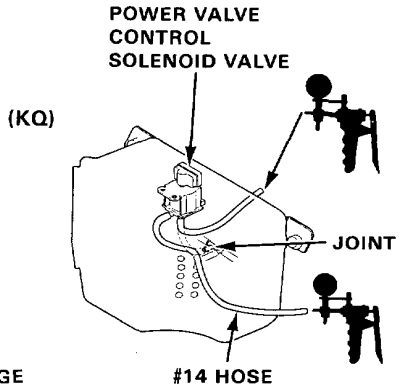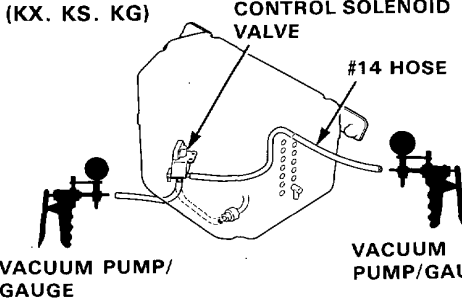

NOTE: The engine coolant temperature must be below 30°C (86°F).

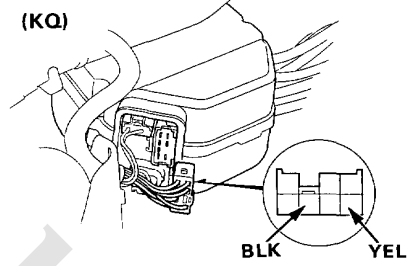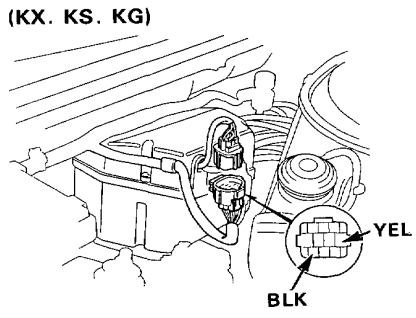

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Measure voltage between YEL (+) terminal and BLK (-) terminal.

Is there voltage?

Replace the solenoid valve.

Check the self-diagnosis indicator (page 6-22). If OK, substitute a known-good control unit and retest. If symptom goes away, replace the original control unit.


Warm up engine to normal operating temperature (cooling fan comes on).

(To page 6-72)

(cont'd)

Carburetor

Power Valve (cont'd)

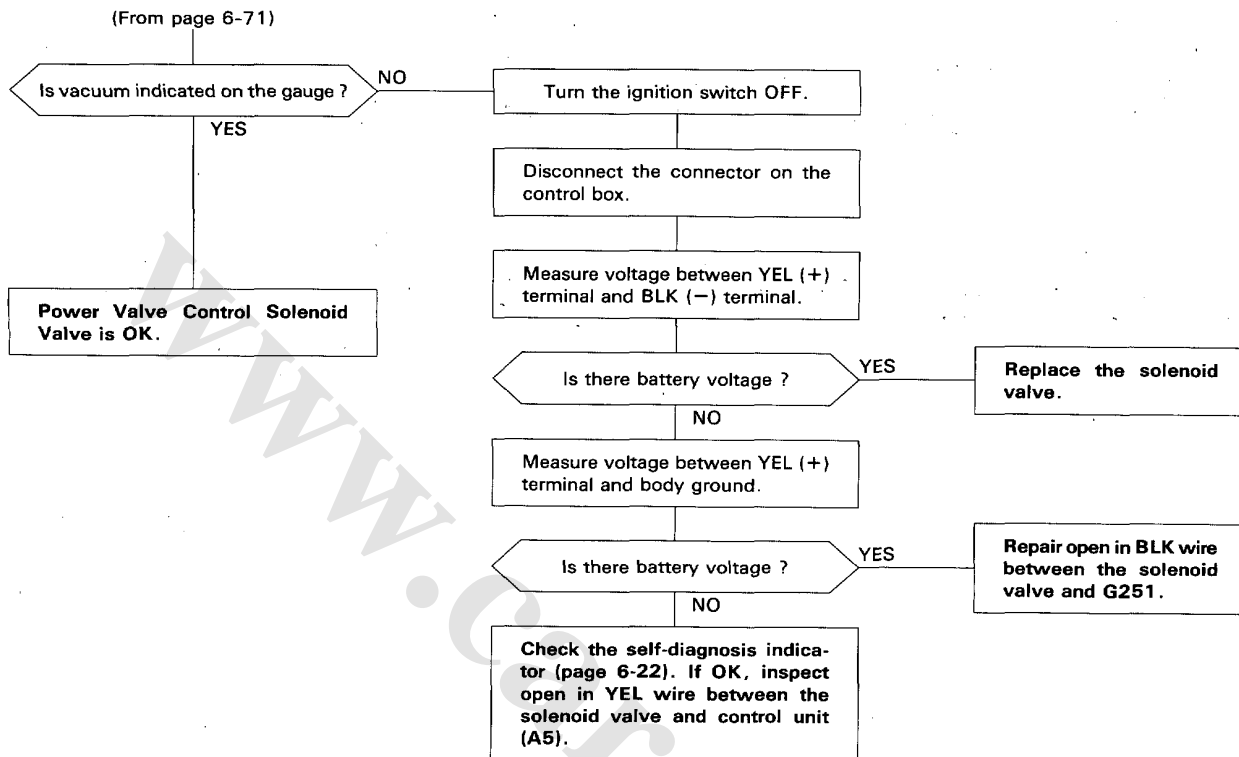



Primary Slow Mixture Cut-off Solenoid Valve

Troubleshooting Flowchart Primary Slow Mixture Cut-off Solenoid Valve (KX, KS, KG, KQ)

Inspection of Primary Slow Mixture Cut-off Solenoid Valve.

Turn the ignition switch ON.

Check the clicking sound of solenoid valve.

Does the solenoid valve click ?

NO

YES

Turn the ignition switch OFF.

Disconnect the 2P connector.


Turn the ignition switch ON.

Measure voltage between GRN/RED (+) terminal and body ground.


Is there battery voltage ?

YES

Replace the solenoid valve.

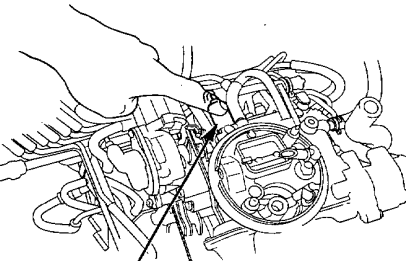

PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE

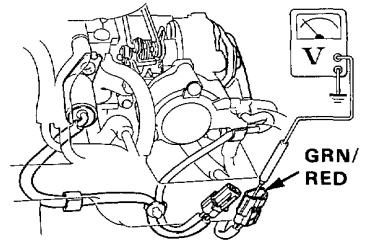

GRN/RED

Start the engine and warm up to normal operating temperature (the cooling fan comes on).

- Repair open in GRN/RED wire between the solenoid valve and control unit (A21).
- Check the self-diagnosis indicator (page 6-22). If OK, check the input troubleshooting (page 6-22).


NO

(To page 6-74)

(cont'd)

Carburetor

Primary Slow Mixture Cut-off Solenoid Valve (cont'd)

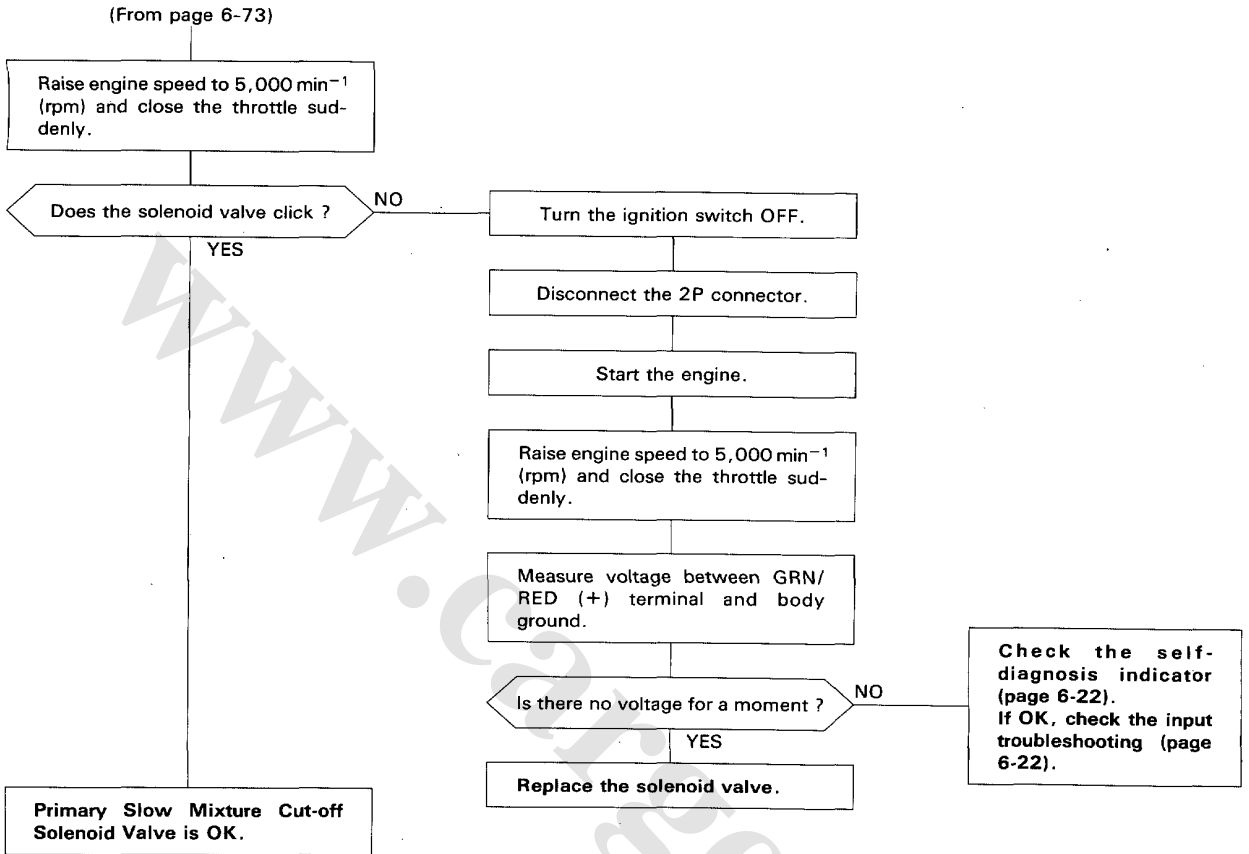



**Troubleshooting Flowchart
(Except KX, KS, KG, KQ)**


Primary Slow Mixture Cut-off Solenoid Valve

**PRIMARY SLOW MIXTURE
CUT-OFF SOLENOID VALVE**

Inspection of Primary Slow Mixture Cut-off Solenoid Valve.

Turn the ignition switch ON.

Check the clicking sound of solenoid valve.

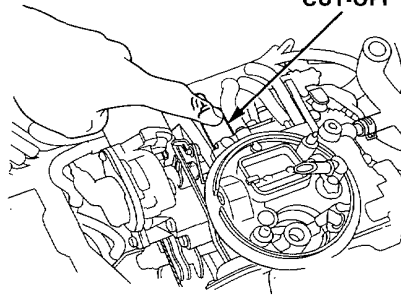

Does the solenoid valve click ?

NO

Turn the ignition switch OFF.


YES

Primary Slow Mixture Cut-off Solenoid Valve is OK.

Disconnect the 2P connector.

Turn the ignition switch ON.

Measure voltage between GRN/RED (+) terminal and body ground.

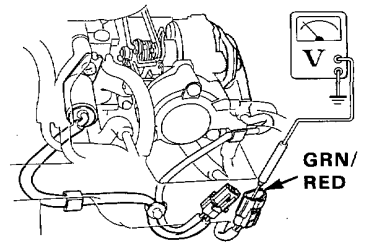

Is there battery voltage ?

YES

Replace the solenoid valve.

NO

Repair open or short in BLK/YEL, GRN/RED wire between the 2P connector and the ignition switch as well as No.2 fuse.


(cont'd)

Carburetor


Primary Slow Mixture Cut-off Solenoid Value (cont'd)

1. Remove the 2P connector, cut the harness band, and open the harness clamp on the idle controller bracket. Disconnect the fuel cut-off solenoid valve harness from the clamp.

CAUTION: Take care not to apply excessive force on the clamp as it is broken easily.

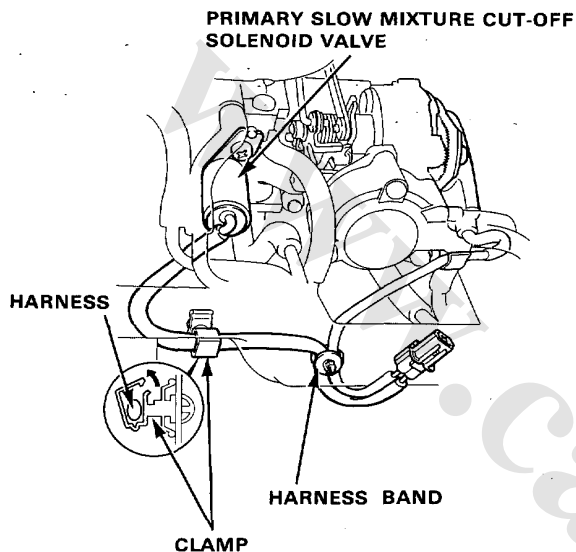

2. Disconnect the terminal retainer from the connector and remove the two terminals.

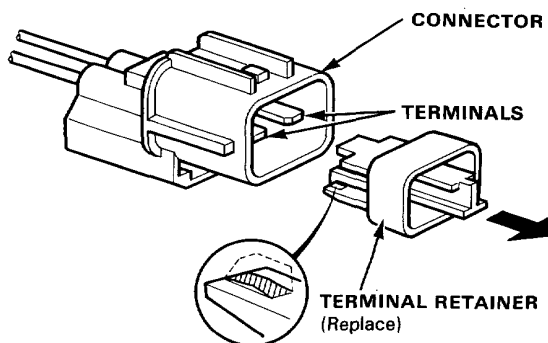


3. Replace the solenoid valve.

4. Connect the respective terminals to a new connector and install a new terminal retainer.


NOTE:

- Be sure to connect the terminal before installing the terminal retainer.
- Replace the connector and terminal retainer with the new ones.
- Note the location of the terminal.

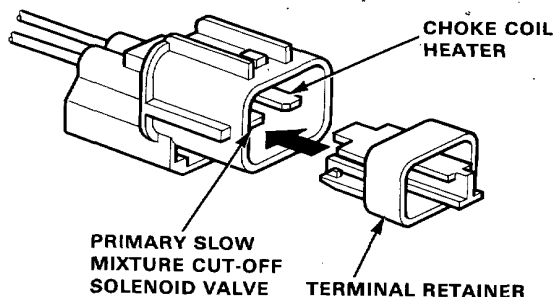

5. Secure the harness with the clamp as shown in the drawing and use the harness band to hold the two harnesses together 180mm from the tip of the connector.

CAUTION: Cut off the excess of the harness band and set it on the harnesses so that the tip of the band points to the vacuum hose manifold.

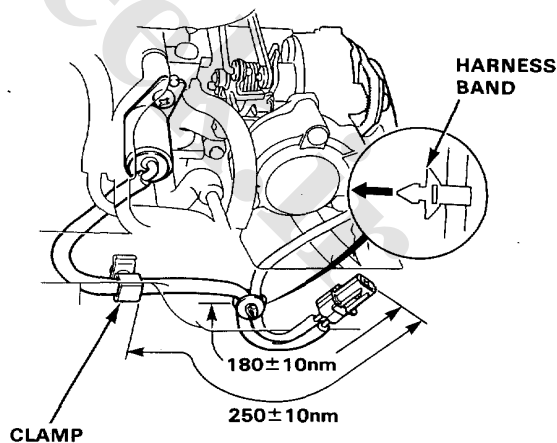



Idle Speed/Mixture

(KS KG, KQ)

Inspection/Adjustment


Propane Enrichment Method

WARNING Do not smoke during this procedure. Keep any open flame away from your work area.


NOTE:

- This procedure requires a propane enrichment kit.
- Check that the self diagnosis indicator before making idle speed and mixture inspections.

1. Start the engine and warm up to normal operating temperature (the cooling fan comes twice).
2. Disconnect the #8 vacuum hose from the intake air control diaphragm and clamp the hose end.

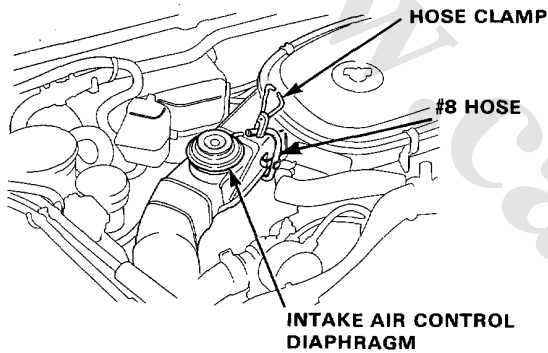


3. Connect a tachometer.

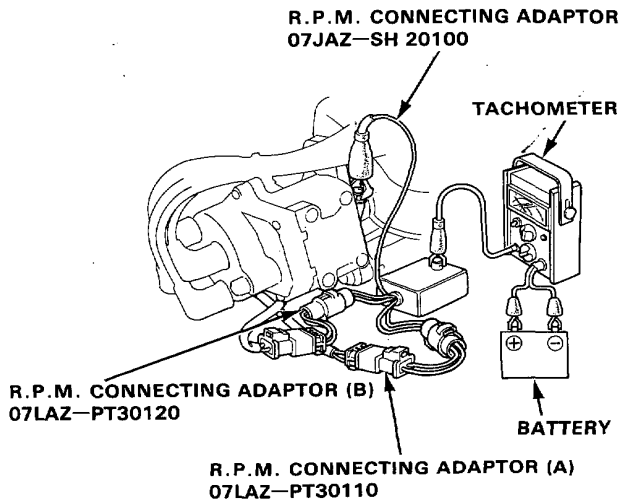

4. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500—3,000 min⁻¹ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off...

Idle speed should be:


Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

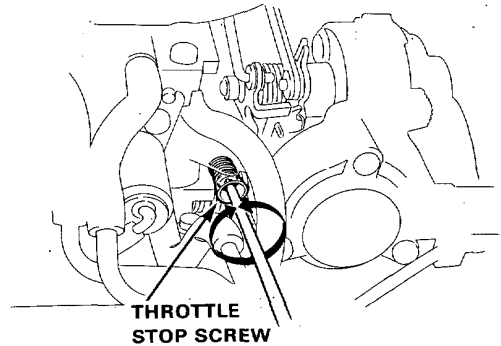

Adjust the idle speed, if necessary, by turning the throttle stop screw.

NOTE: If the idle speed is excessively high, check the throttle control system (page 6-112)

5. Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

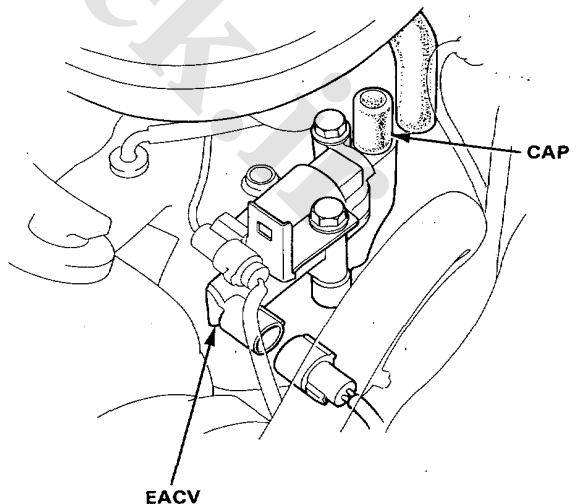


(cont'd)


Carburetor

Idle Speed/Mixture (cont'd)

- Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

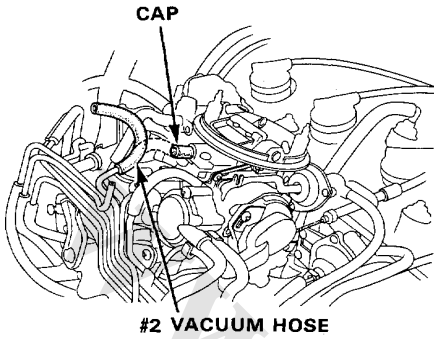


- Disconnect air cleaner intake tube from air intake duct.
- Insert the hose of the propane enrichment kit into the intake tube about 10 cm.
NOTE: Check that propane bottle has adequate gas before beginning test.

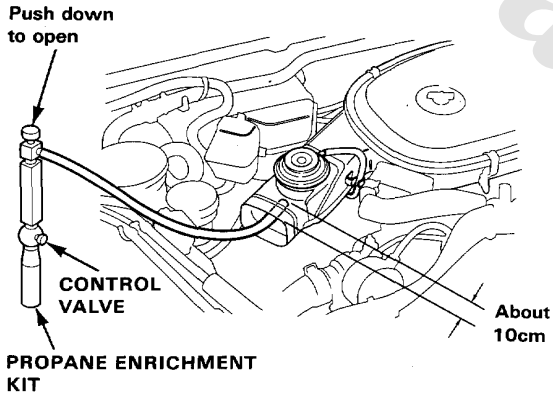

- With engine idling, depress push button on top of propane device, then slowly open the propane control valve to obtain maximum engine speed. Engine speed should increase as percentage of propane injected goes up.


NOTE: Open the propane control valve slowly; a sudden burst of propane may stall the engine.

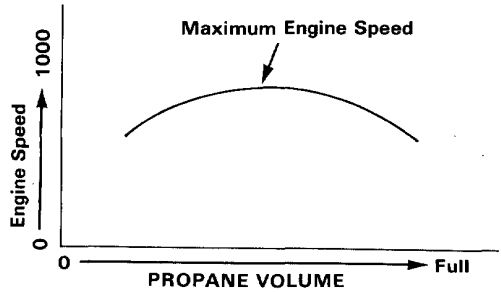

Engine speed increase should be:

Manual	$160 \pm 20 \text{ min}^{-1} \text{ (rpm)}$
Automatic	$50 \pm 10 \text{ min}^{-1} \text{ (rpm)}$ (in "D")

- If engine speed does not increase per specification, mixture is improperly adjusted. Go to step 10.
 - If engine speed increases per specification, go to step 14.
- Remove the air cleaner and close the propane control valve.
 - Remove the mixture adjusting screw hole cap.

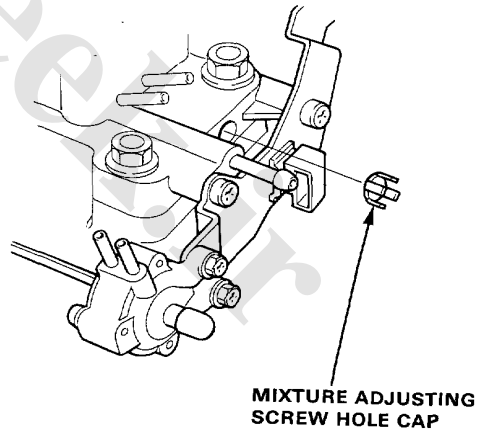



12. Start engine and warm up to normal operating temperature ; the cooling fan will come on.
13. Reinstall the propane enrichment kit and recheck maximum propane enriched engine speed.

- If the propane enriched speed is too low, mixture is too rich: turn the mixture screw 1/4-turn clockwise and recheck.
- If the propane enriched speed is too high, mixture is too lean: turn the mixture screw 1/4-turn counter-clockwise and recheck.

14. Close the propane control valve speed and remove the BACK UP fuse for 10 seconds to reset control unit. Recheck idle speed.

Idle speed should be:

Manual	$800 \pm 50 \text{ min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{ min}^{-1}$ (rpm) (in "D")

- If idle speed is as specified (step 4), go to step 15.
- If idle speed is not as specified, adjust by turning throttle stop screw, then repeat steps 13 and 14.


15. Remove propane enrichment kit and reconnect air cleaner intake tube on the air intake duct.

16. Reinstall the mixture adjusting screw hole cap.

17. Disconnect the connector on the P/S oil pressure switch, and check the idle speed.

Idle speed should be:

Manual	$950 \pm 50 \text{ min}^{-1}$ (rpm)
Automatic	$820 \pm 50 \text{ min}^{-1}$ (rpm) (in "D")

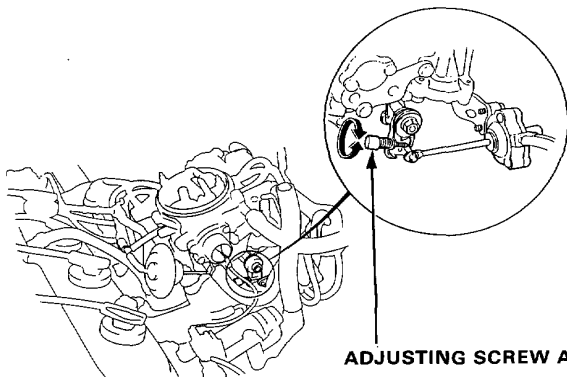


Adjust the idle speed, if necessary, by turning the adjusting screw A.

18. If equipped with air conditioner, check the idle speed with the A/C on.

Idle speed should be:

Manual	$800 \pm 50 \text{ min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{ min}^{-1}$ (rpm) (in "D")

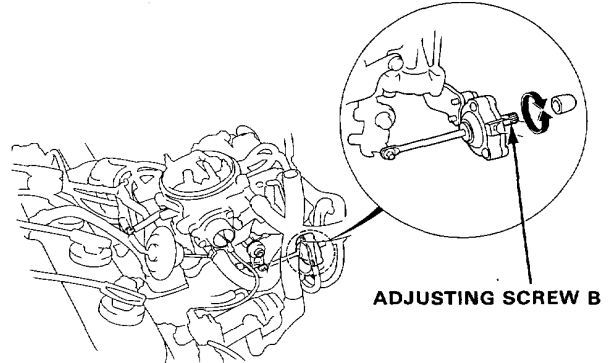

Adjust the idle speed, if necessary, by turning the adjusting screw B.

(cont'd)

Carburetor

Idle Speed / Mixture (cont'd)


(Except KS, KG, KQ)

CO Meter Method

WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

NOTE: Check that the self-diagnosis indicator (KX) before making idle speed and mixture inspections.


1. Start the engine and warm it up to normal operating temperature (the cooling fan comes twice).
2. Connect a tachometer.

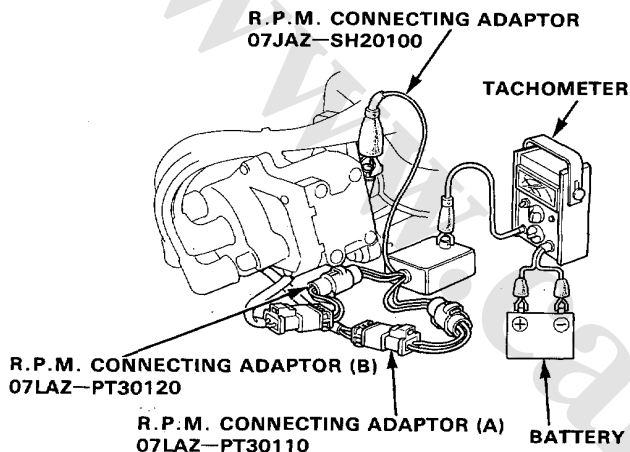

3. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000min⁻¹ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off.

Idle speed should be:

Manual	800 ± 50min ⁻¹ (rpm)
Automatic	750 ± 50min ⁻¹ (rpm) (in "D")

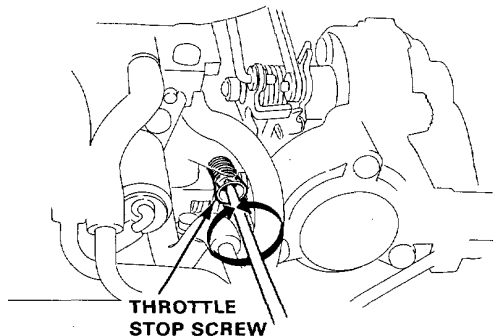

Adjust the idle speed, if necessary, by turning the throttle stop screw.

NOTE: If the idle speed is excessively high, check the throttle control system (page 6-112)

4. Calibrate the NDIR CO Meter in accordance with the manufacturer's recommended procedures. Insert exhaust gas sampling probe into the tailpipe at least 40 cm.
5. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO with cooling fan, air conditioner OFF and headlights OFF.


Specified CO%:

KX: 0.1% maximum


Except KX: 1 ± 1%

- If idle CO is as specified, go to step 14.
- If not, go to step 6 through 13.

6. KX ; Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

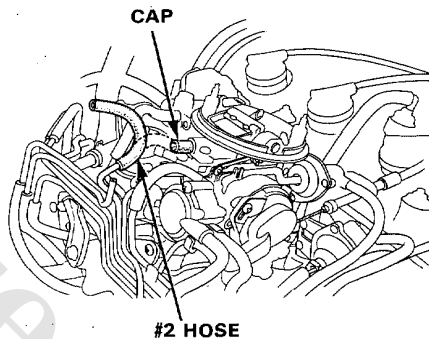


7. KX: Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

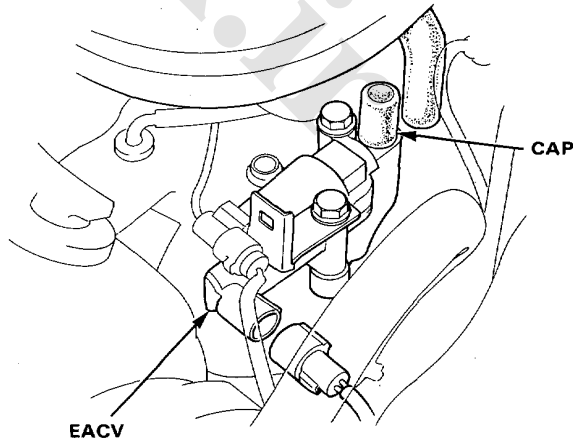




8. KX:
Disconnect the wire harness from the O² sensor.

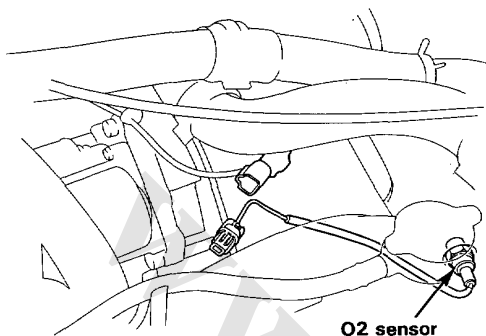

9. KX:
Remove the rubber cap from the gas pipe.

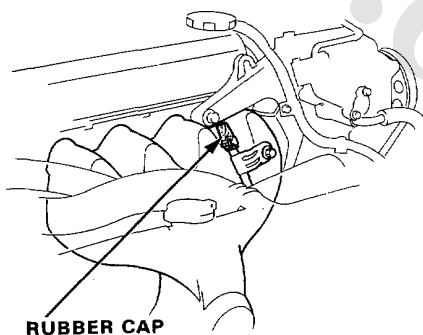


10. KX:
Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO.

Specified CO%: 2.3 ± 1.0%


- If not, specification, go to step 11.

11. Remove mixture adjusting screw hole plug and adjust by turning mixture adjusting screw to obtain proper CO reading.

(KX)

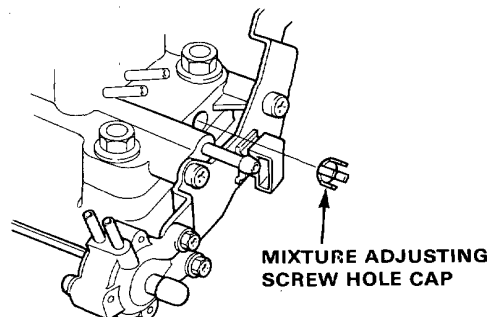

(Except KX)

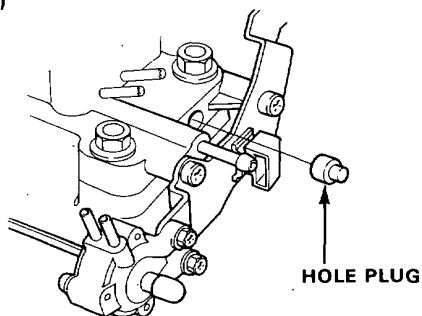

— Turning mixture adjusting screw

clockwise: CO reading decreases
counterclockwise: CO reading increases

Readjust idle speed if necessary, and recheck idle CO.

12. KX:
Reconnect the connector and hose.
Remove BACK UP fuse for 10 seconds to reset control unit.

13. KX:
Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Recheck idle CO.

Specified CO%: 0.1% maximum

- If idle CO is as specified, go to step 14.
- If not, check the self-diagnosis indicator (page 6-22). If not, inspect the EACV (page 6-104) and the catalytic converter (page 6-103), then repeat step 6.

14. Recheck idle speed.
Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

(cont'd)

[Special Tools](#)

[Component Locations](#)

[Index](#)

System Description

[Vacuum Connections](#)

[Electrical Connections](#)

Troubleshooting

[Troubleshooting Guide](#)

[Self-diagnostic Procedure](#)

[How to Read Flowcharts](#)

PGM-FI Control System

Troubleshooting Flowcharts

[Election Control Until](#)

[Oxygen Sensor](#)

[Oxygen Sensor Heater](#)

[Fuel Supply System](#)

[Manifold Absolute Pressure](#)

[Sensor](#)

[TDC/CRANK/CYL Sensor](#)

[Coolant Temperature Sensor](#)

[Throttle Angle Sensor](#)

[Intake Air Temperature](#)

[Sensor](#)

[IMA Sensor](#)

[Atmospheric Pressure Sensor](#)

[Ignition Output Signal](#)

[Vehicle Speed Sensor](#)

[A/T FI Signal A](#)

[A/T FI Signal B](#)

Idle Control System

[System Troubleshooting Guide](#)

Fuel Supply System

[System Troubleshooting Guide](#)

[Fuel Pressure](#)

[Fuel Injectors](#)

[Injector Resistor](#)

[Pressure Regulator](#)

[Fuel Filter](#)

[Fuel Pump](#)

[Main Relay](#)

[Fuel Tank](#)

Air Intake System

[System Troubleshooting Guide](#)

[Throttle Cable](#)

[Throttle Body](#)

[Bypass Control System](#)

[Intake Control System](#)

Emission Control System

[System Troubleshooting Guide](#)

[Tailpipe Emission](#)

[Catalytic Converter](#)

[Exhaust Gas Recirculation](#)

[System](#)

[Positive Crankcase](#)

[Ventilation System](#)

[Evaporative Emission](#)

[Controls](#)

Troubleshooting Flowcharts

[Electronic Air Control Valve](#)

[Air Conditioning Signal](#)

[Altenator FR Signal](#)

[A/T Shift Position Signal](#)

[Starter Switch Signal](#)

[P/S Oil Pressure Signal](#)

[Fast Idle Valve](#)

[Idle Speed Setting](#)

www.cargeek.ir


Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07LAA-PT50100	O ₂ Sensor Socket Wrench	1	
②	07LAJ-PT30100	ECU Test Harness	1	
③	07LAJ-PT30200	Test Harness	1	
④	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
⑤	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
⑤-1	07LAZ-PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑤-2	07LAZ-PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑥	07406-0040001	Fuel Pressure Gauge Set	1	
⑥-1	07406-0040100	Pressure Gauge	(1)	Component Tools
⑥-2	07406-0040201	Hose Assembly	(1)	
⑦	07411-0020000	Digital Circuit Tester	1	




①

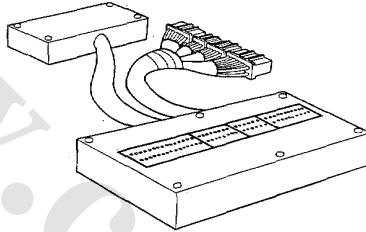


②

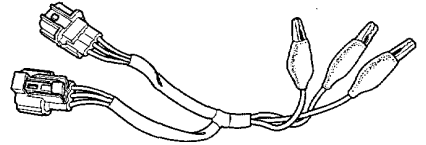


③

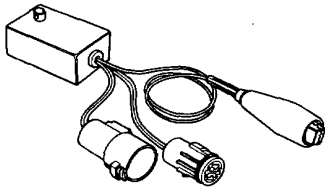


④

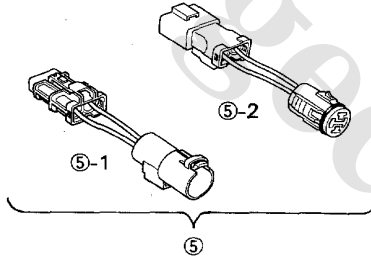

⑤

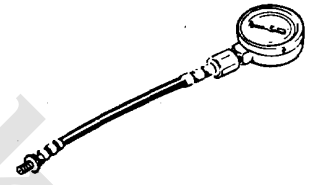


⑥



⑥-1



⑥-2

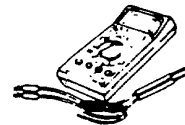


⑦

System Description


Vacuum Connections

2.0 l without CATA:

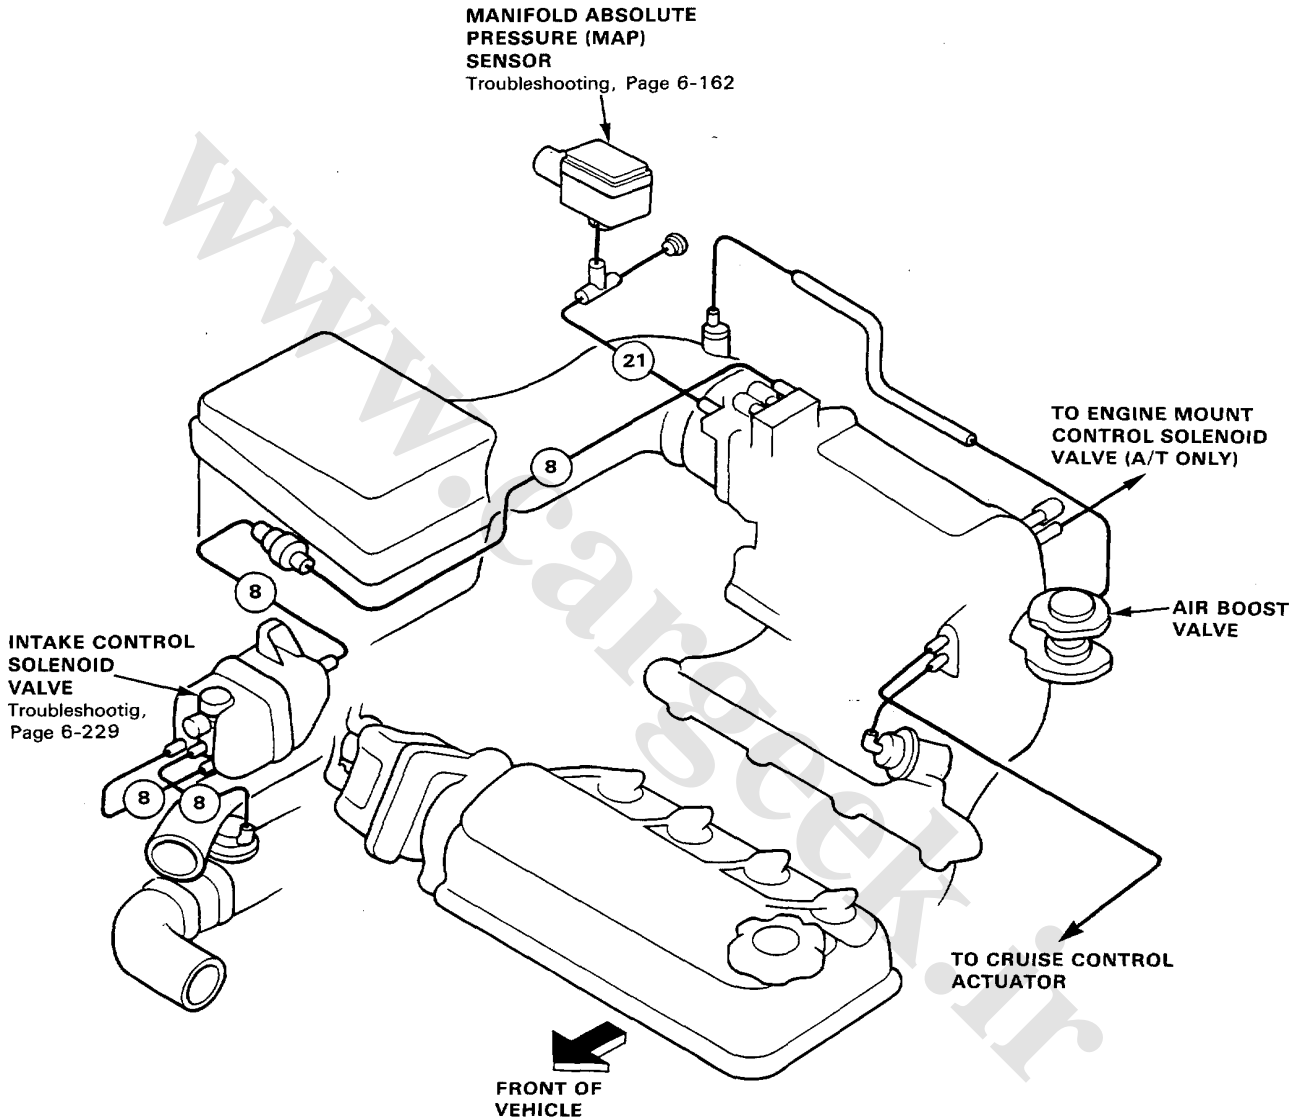



2.0 l without CATA:

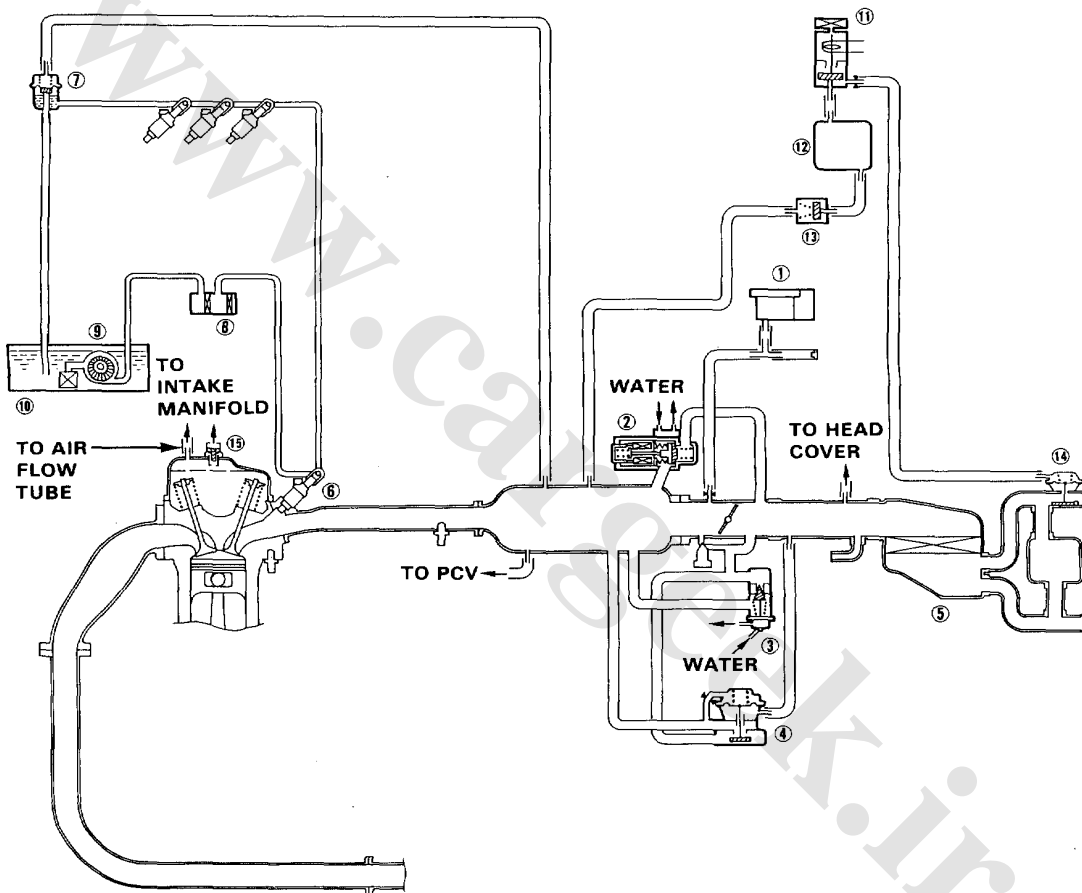


- ① MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ② ELECTRONIC AIR CONTROL VALVE (EACV)
- ③ FAST IDLE VALVE
- ④ AIR BOOST VALVE
- ⑤ AIR CLEANER
- ⑥ FUEL INJECTOR
- ⑦ PRESSURE REGULATOR
- ⑧ FUEL FILTER

- ⑨ FUEL PUMP
- ⑩ FUEL TANK
- ⑪ INTAKE CONTROL SOLENOID VALVE
- ⑫ AIR CHAMBER
- ⑬ CHECK VALVE
- ⑭ INTAKE CONTROL DIAPHRAGM
- ⑮ PCV VALVE

System Description


Vacuum Connections

2.0 l with CATA:

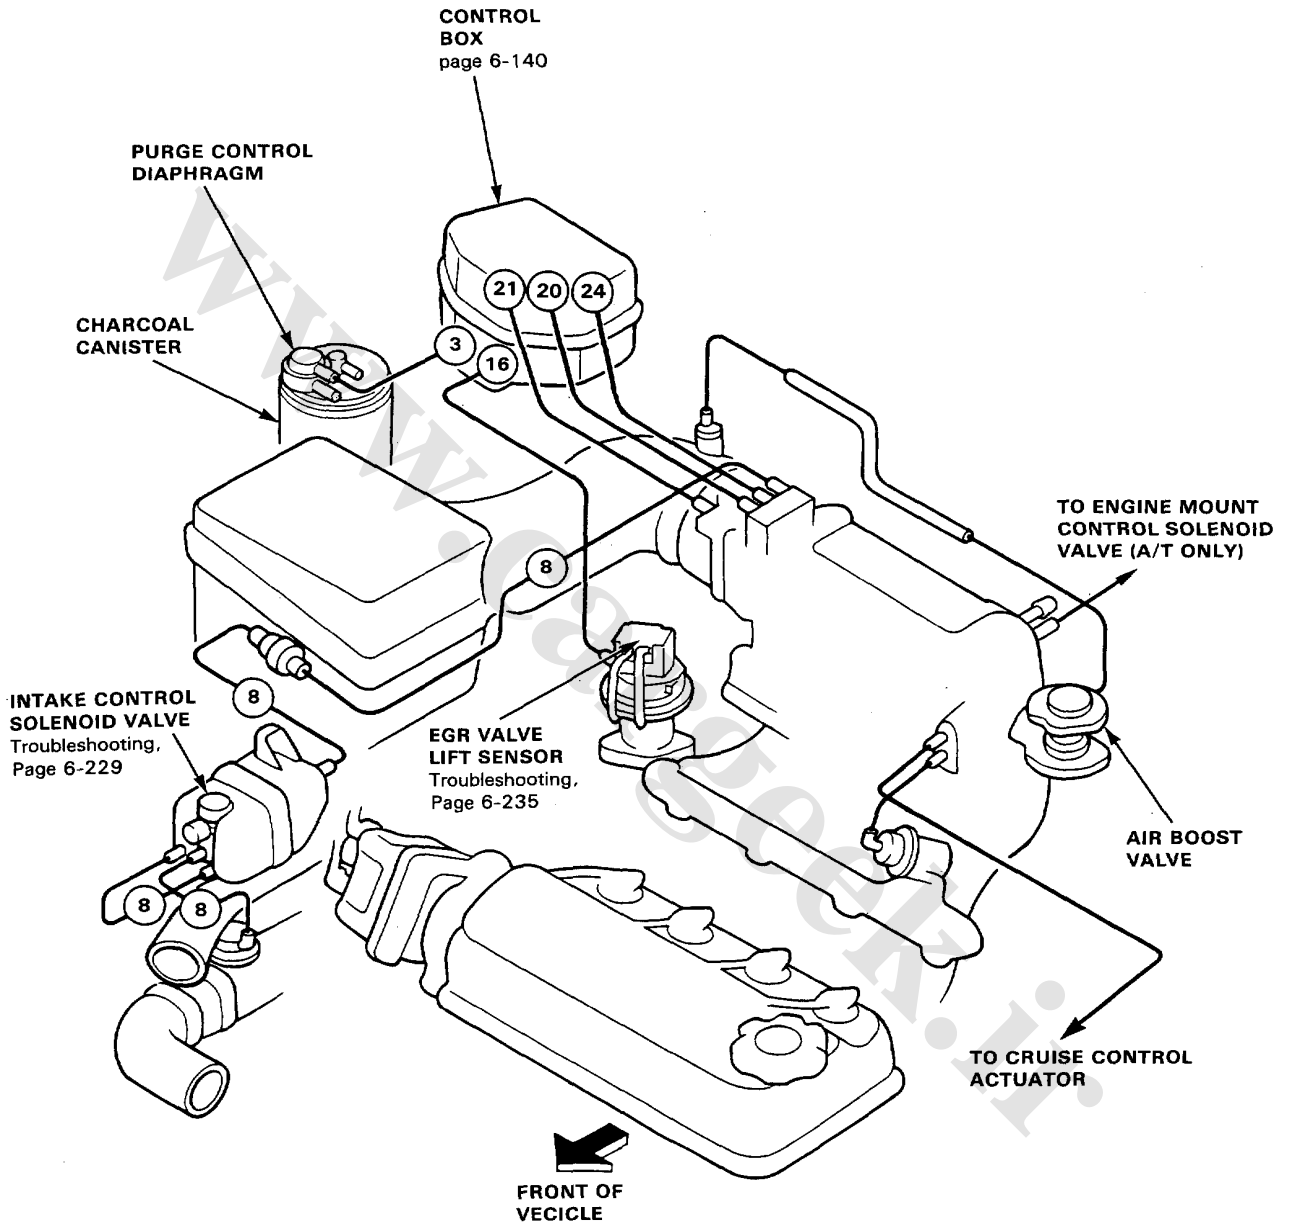



2.0 l with CATA:

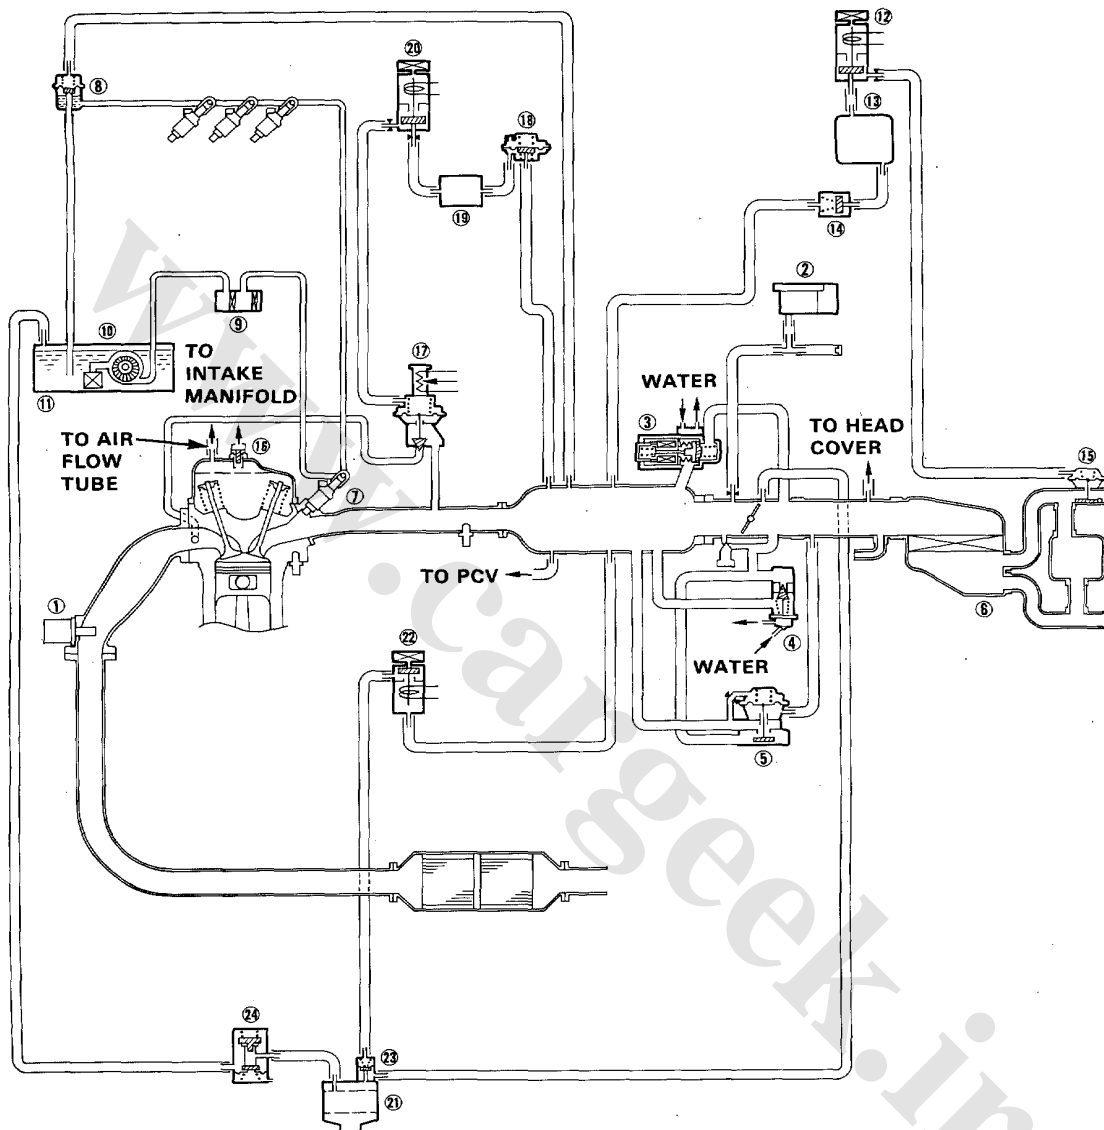


- ① OXYGEN (O₂) SENSOR
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR BOOST VALVE
- ⑥ AIR CLEANER
- ⑦ FUEL INJECTOR
- ⑧ PRESSURE REGULATOR
- ⑨ FUEL FILTER
- ⑩ FUEL PUMP
- ⑪ FUEL TANK
- ⑫ INTAKE CONTROL SOLENOID VALVE

- ⑬ AIR CHAMBER
- ⑭ CHECK VALVE
- ⑮ INTAKE CONTROL DIAPHRAGM
- ⑯ PCV VALVE
- ⑰ EGR VALVE
- ⑱ CONSTANT VACUUM CONTROL (CVC) VALVE
- ⑲ AIR CHAMBER
- ⑳ EGR CONTROL SOLENOID VALVE
- ㉑ CHARCOAL CANISTER
- ㉒ PURGE CUT-OFF SOLENOID VALVE
- ㉓ PURGE CONTROL DIAPHRAGM VALVE
- ㉔ TWO-WAY VALVE

System Description


Vacuum Connections

2.2 † Except KE, KQ, KY:

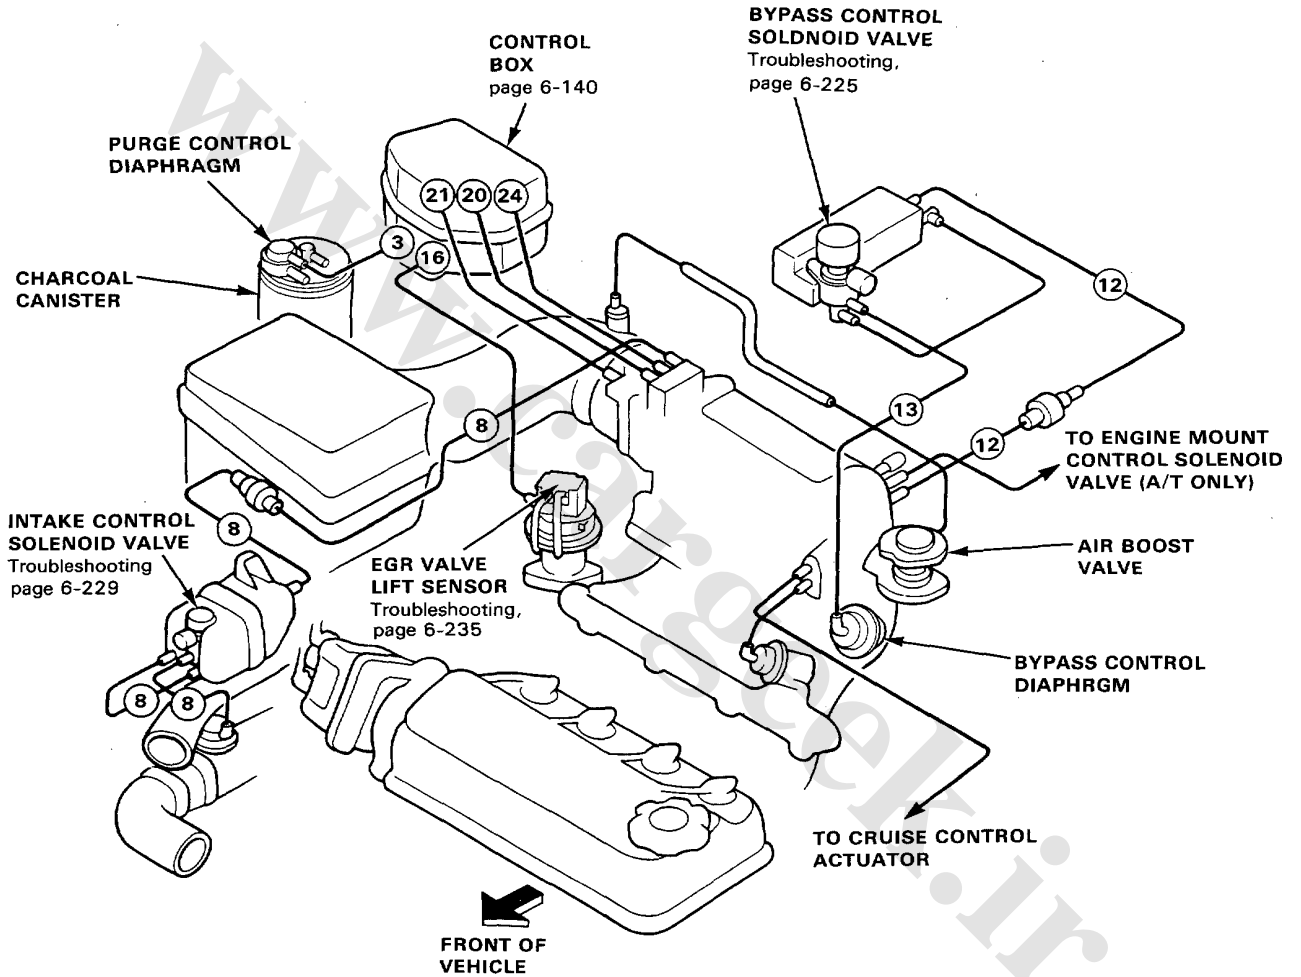




2.2 & KE:

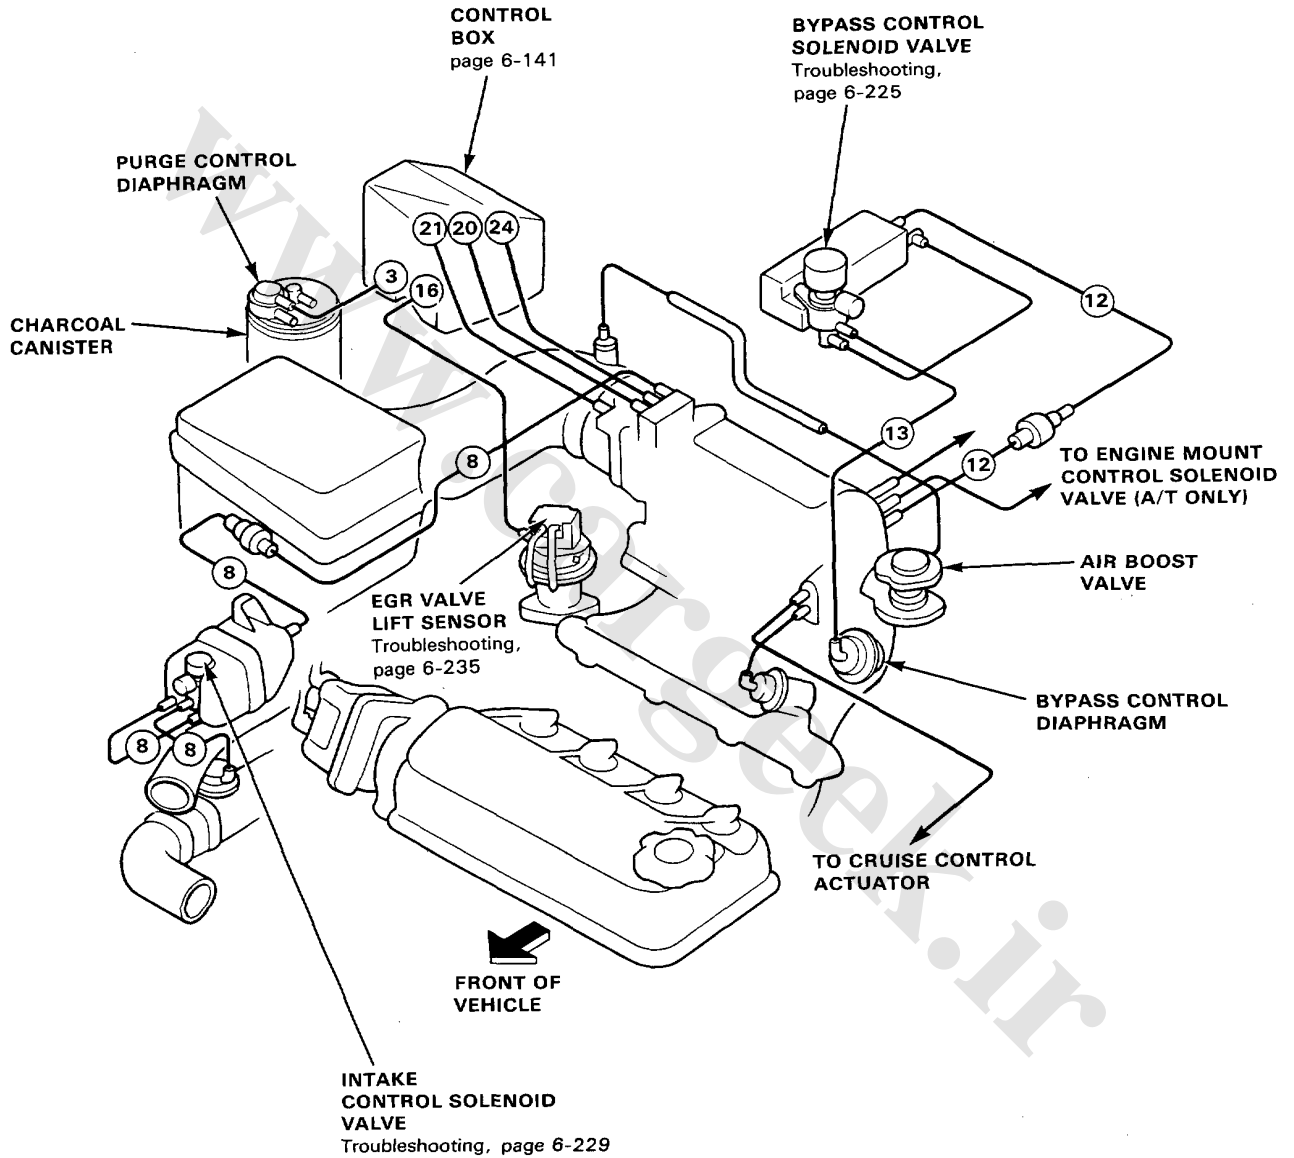

System Description

Vacuum Connections

2.2 l Except KQ, KY:

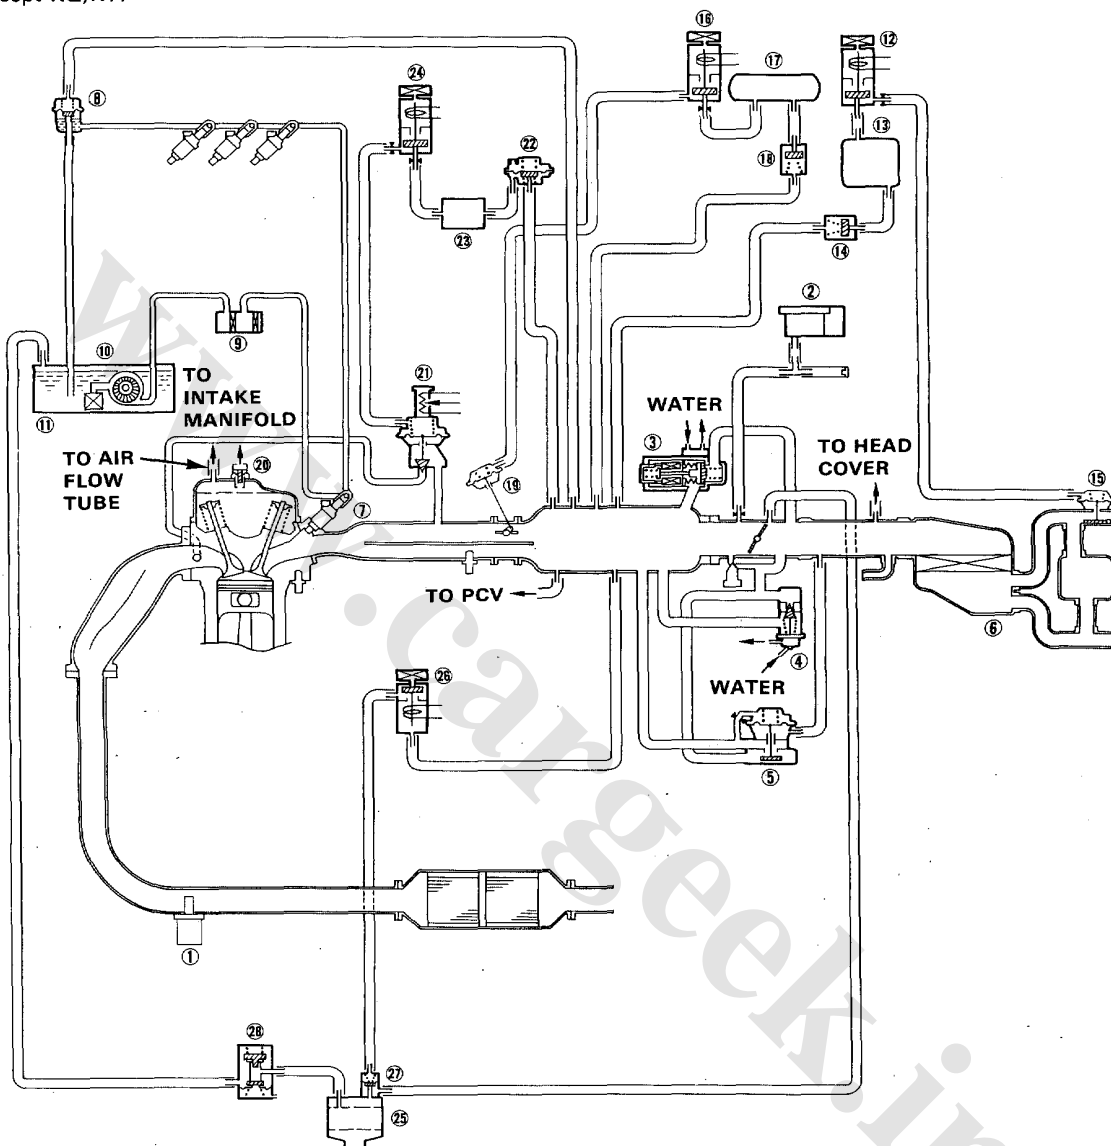


- ① OXYGEN (O₂) SENSOR
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR BOOST VALVE
- ⑥ AIR CLEANER
- ⑦ FUEL INJECTOR
- ⑧ PRESSURE REGULATOR
- ⑨ FUEL FILTER
- ⑩ FUEL PUMP
- ⑪ FUEL TANK
- ⑫ INTAKE CONTROL SOLENOID VALVE
- ⑬ AIR CHAMBER
- ⑭ CHECK VALVE

- ⑮ INTAKE CONTROL DIAPHRAGM
- ⑯ BYPASS CONTROL SOLENOID VALVE
- ⑰ AIR CHAMBER
- ⑱ CHECK VALVE
- ⑲ BYPASS CONTROL DIAPHRAGM
- ⑳ PCV VALVE
- ㉑ EGR VALVE
- ㉒ CONSTANT VACUUM CONTROL (CVC) VALVE
- ㉓ AIR CHAMBER
- ㉔ EGR CONTROL SOLENOID VALVE
- ㉕ CHARCOAL CANISTER
- ㉖ PURGE CUT OFF SOLENOID VALVE
- ㉗ PURGE CONTROL DIAPHRAGM VALVE
- ㉘ TWO-WAY VALVE




2.2 & KQ:

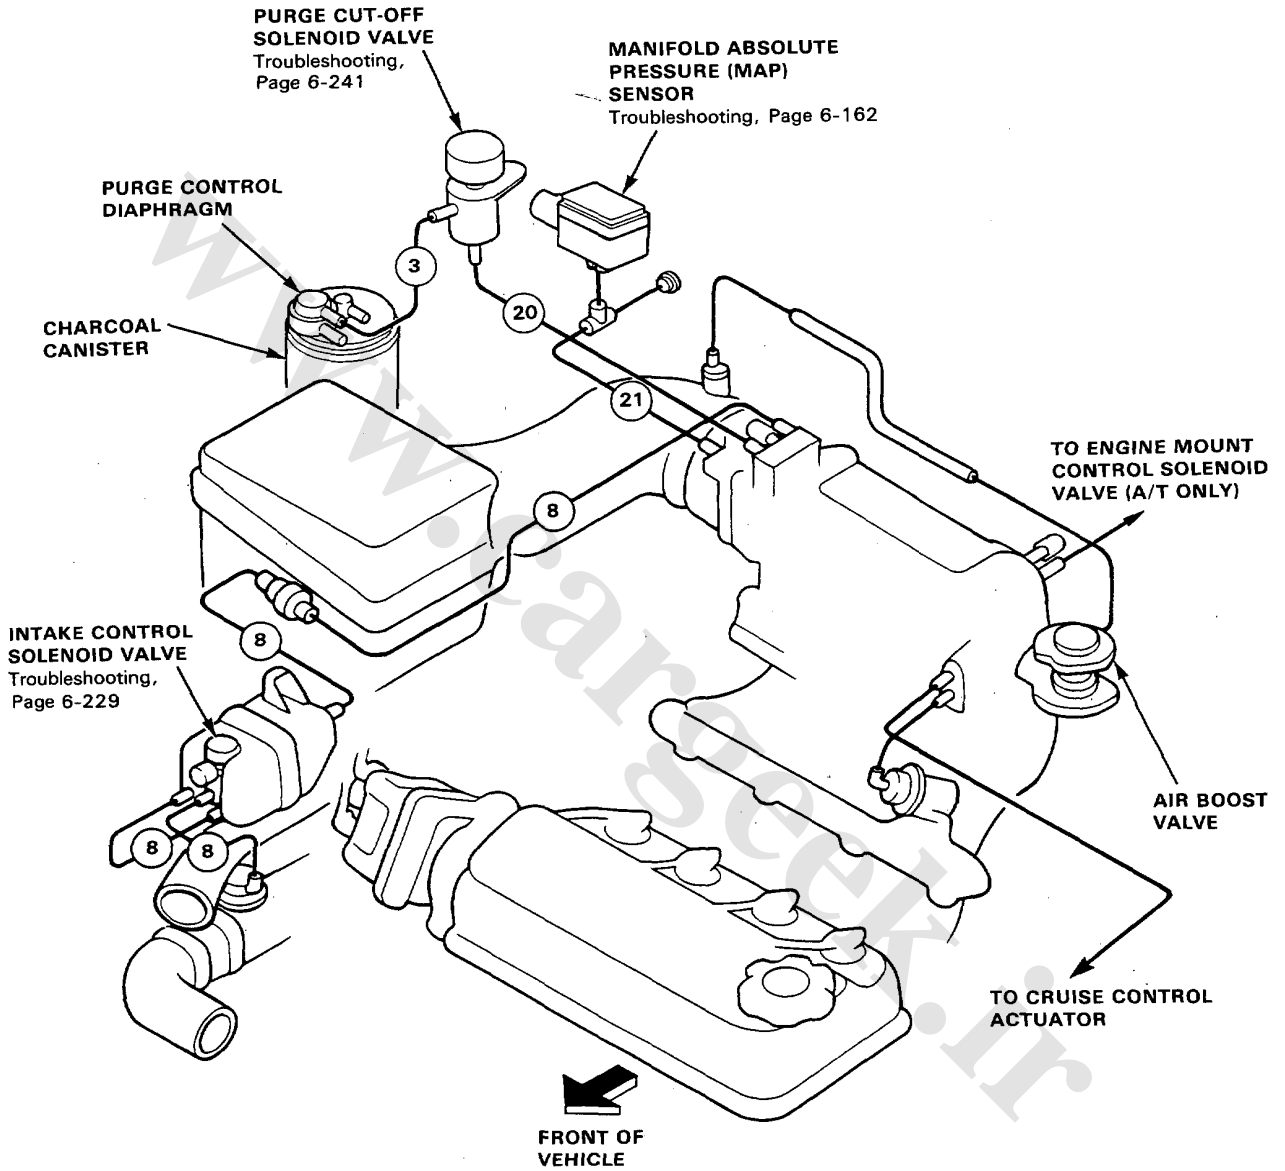

System Description


Vacuum Connections

2.2 LKY:

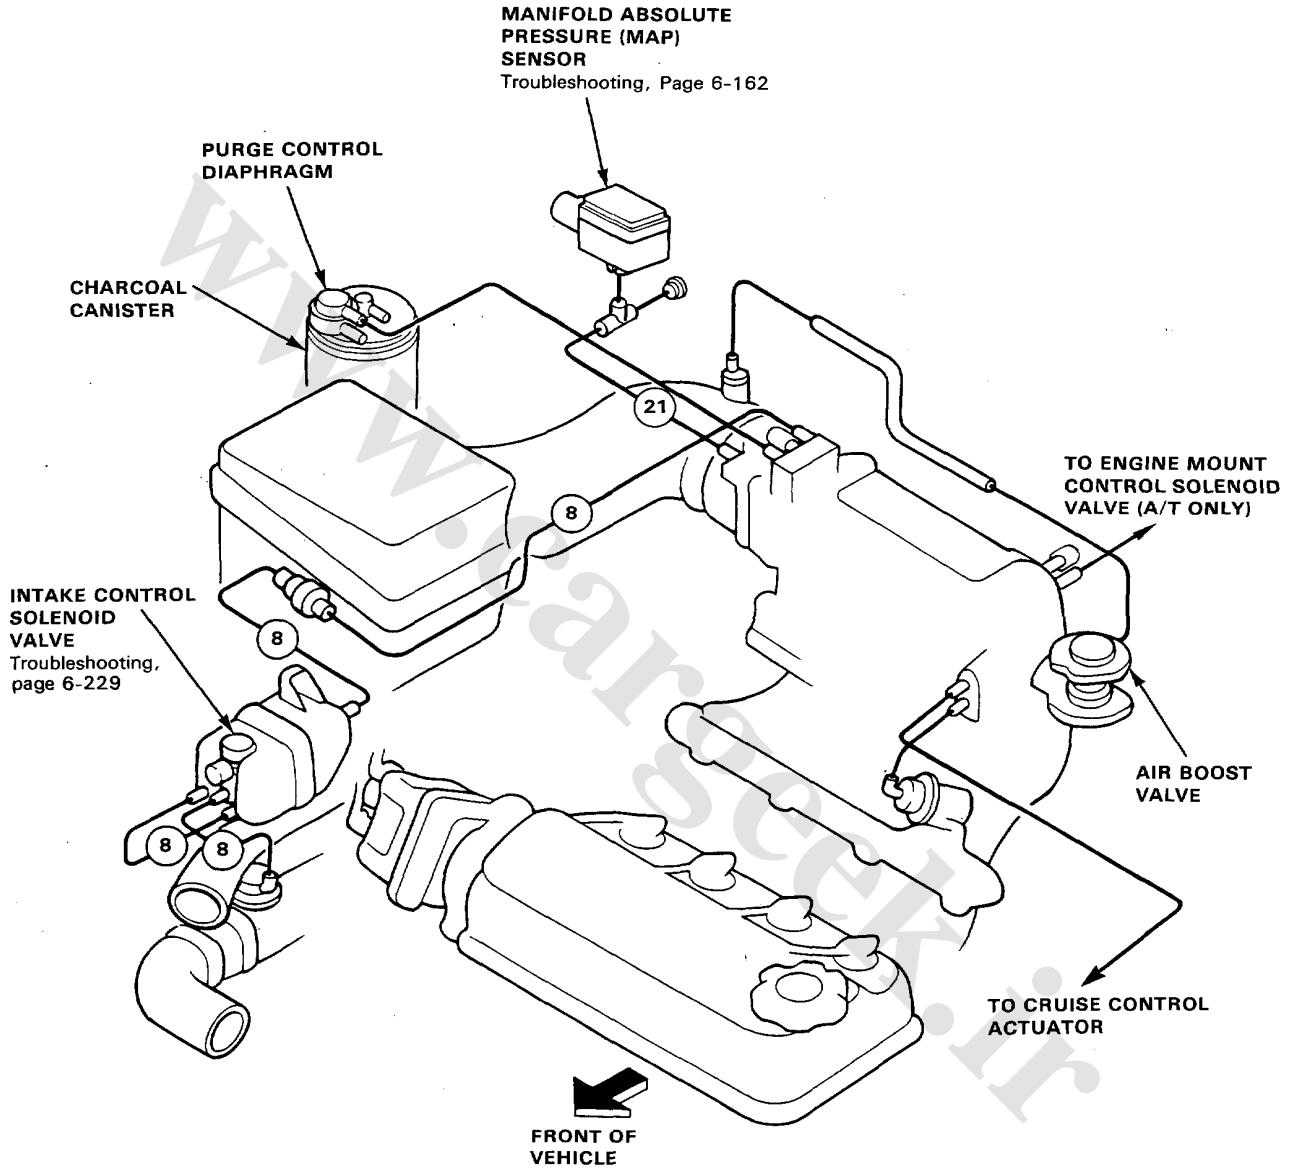



2.2 & KQ, KY:

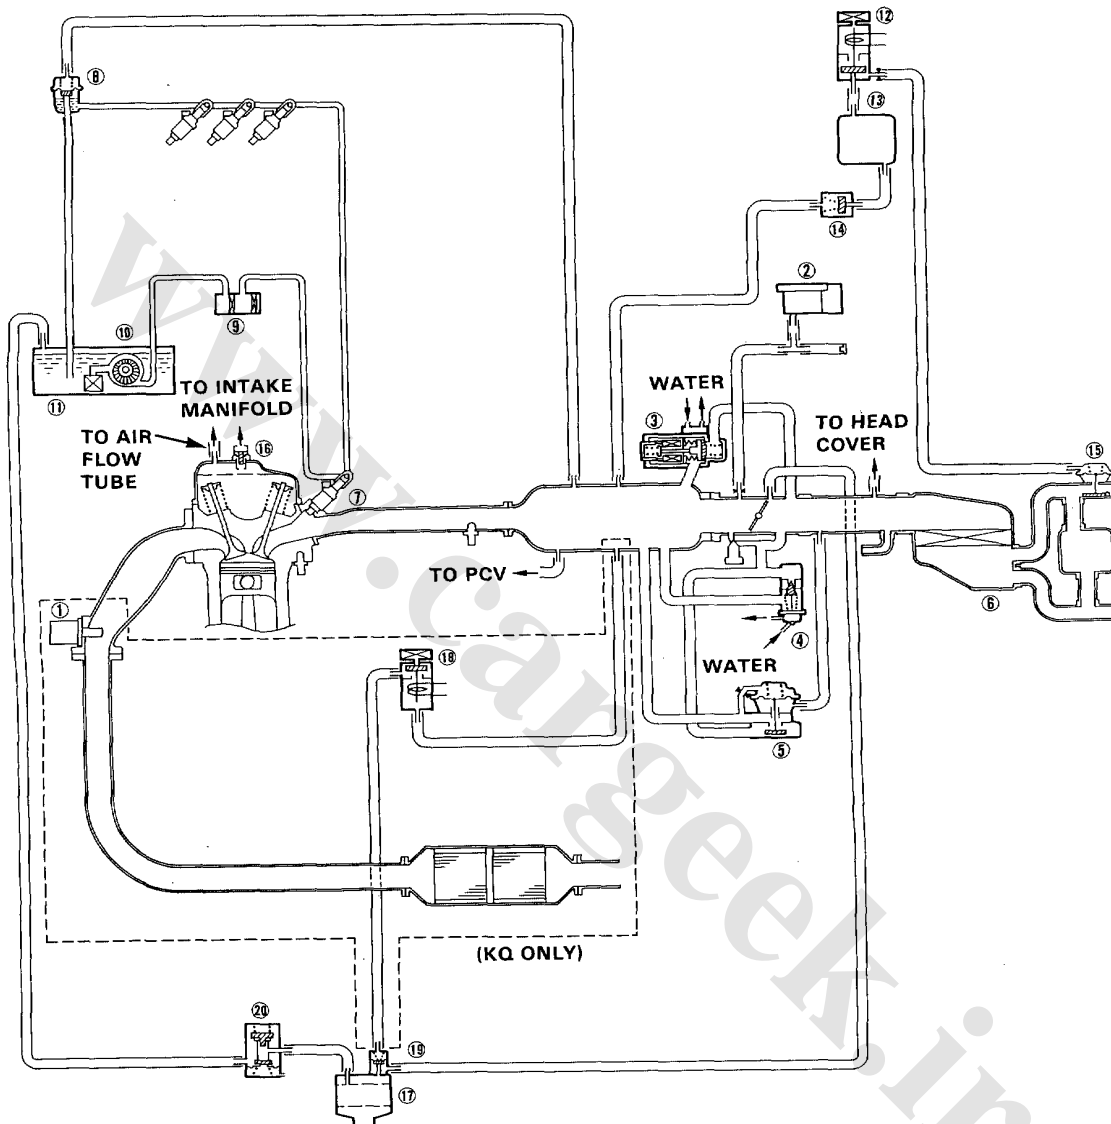


- ① OXYGEN (O₂) SENSOR (KQ only)
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR BOOST VALVE
- ⑥ AIR CLEANER
- ⑦ FUEL INJECTOR
- ⑧ PRESSURE REGULATOR
- ⑨ FUEL FILTER
- ⑩ FUEL PUMP
- ⑪ FUEL TANK

- ⑫ INTAKE CONTROL SOLENOID VALVE
- ⑬ AIR CHAMBER
- ⑭ CHECK VALVE
- ⑮ INTAKE CONTROL DIAPHRAGM
- ⑯ PCV VALVE
- ⑰ CHARCOAL CANISTER
- ⑱ PURGE CUT-OFF SOLENOID VALVE
- ⑲ PURGE CONTROL DIAPHRAGM VALVE (KQ only)
- ⑳ TWO-WAY VALVE

System Description

Control Box (Except 2.2 l KE):

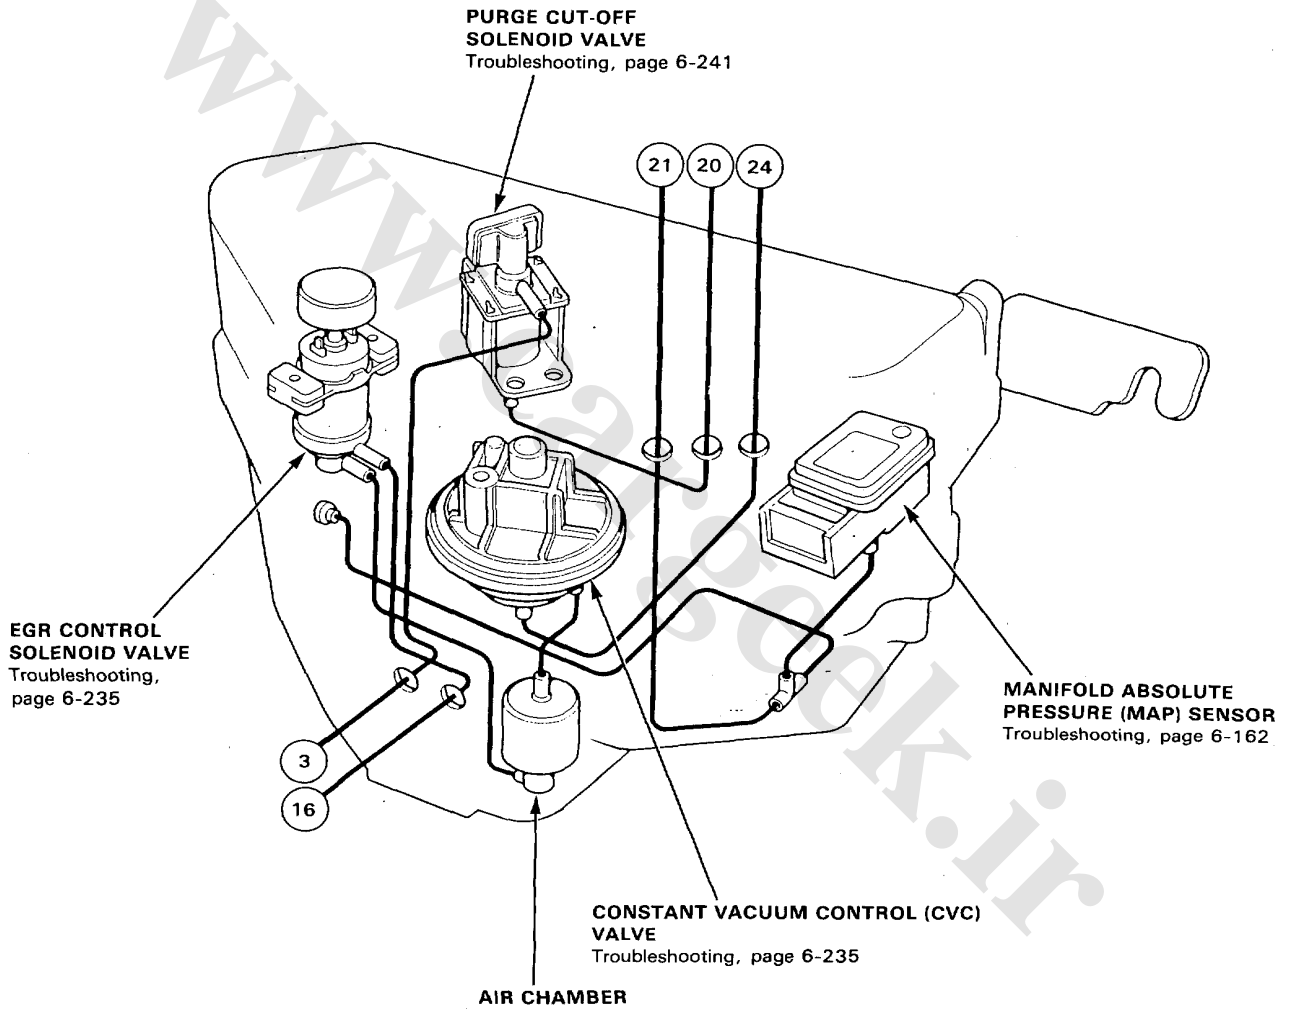



Control Box (2.2 l KE):

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR

Troubleshooting, Page 6-162

CONSTANT VACUUM CONTROL (CVC) VALVE

Troubleshooting, Page 6-235


PURGE COU-OFF SOLENOID VALVE

Troubleshooting, page 6-241

AIR CHAMBER

EGR CONTROL SOLENOID VALVE


Troubleshooting, page 6-235

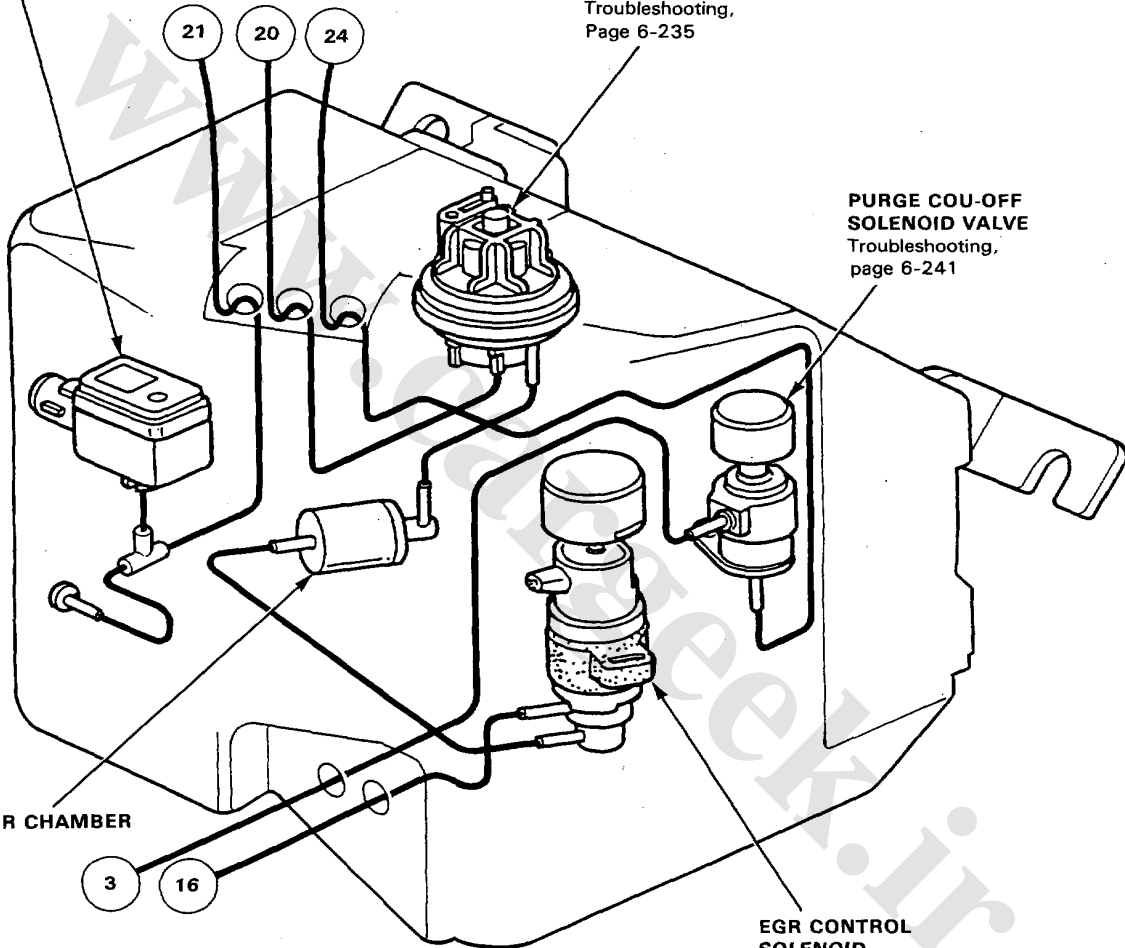

Systems Description


Electrical Connections [With CATA]

- FUSES
 ① ECU (10 A)*
 ② No. 2 (15 A)
 ③ No. 9 (7.5 A)
 ④ No. 7 (7.5 A)
 ⑤ No. 1 (10 A)
 ⑥ BACK UP (7.5 A)*
 ⑦ IG (50 A)*
 ⑧ BATTERY (80 A)*
 * In the main fuse box

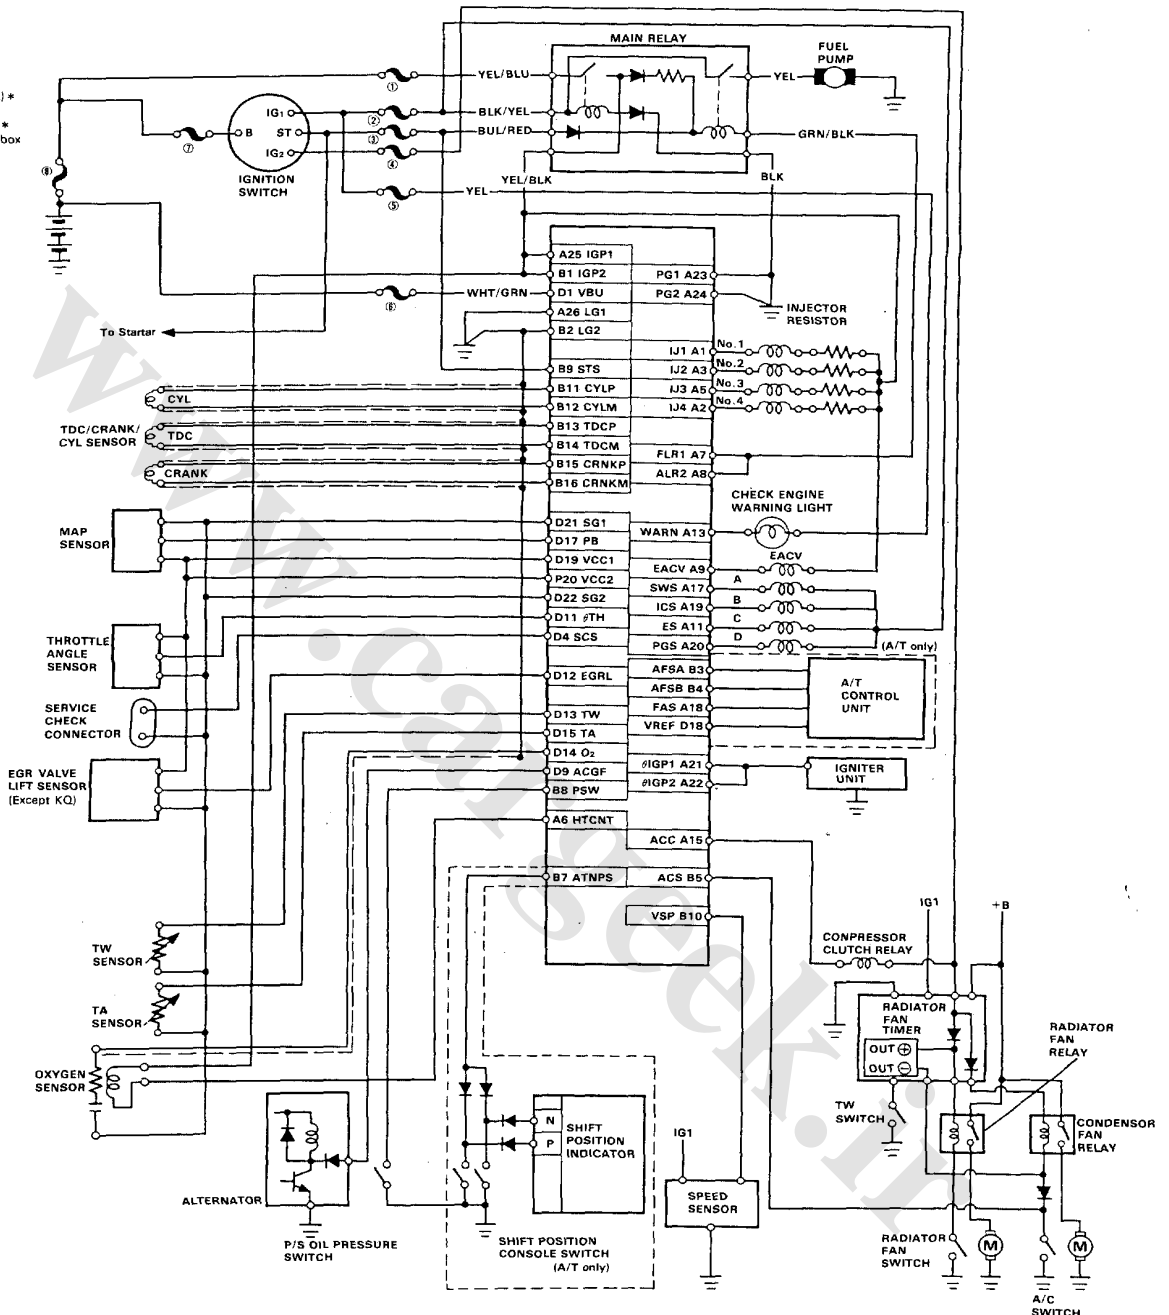

- A: BYPASS CONTROL SOLENOID VALVE (2.2 ℓ)
 B: INTAKE CONTROL SOLENOID VALVE
 C: EGR CONTROL SOLENOID VALVE
 D: PURGE CUT-OFF SOLENOID VALVE


NOT USED




TERMINAL LOCATION



Electrical Connections [Without CATA]

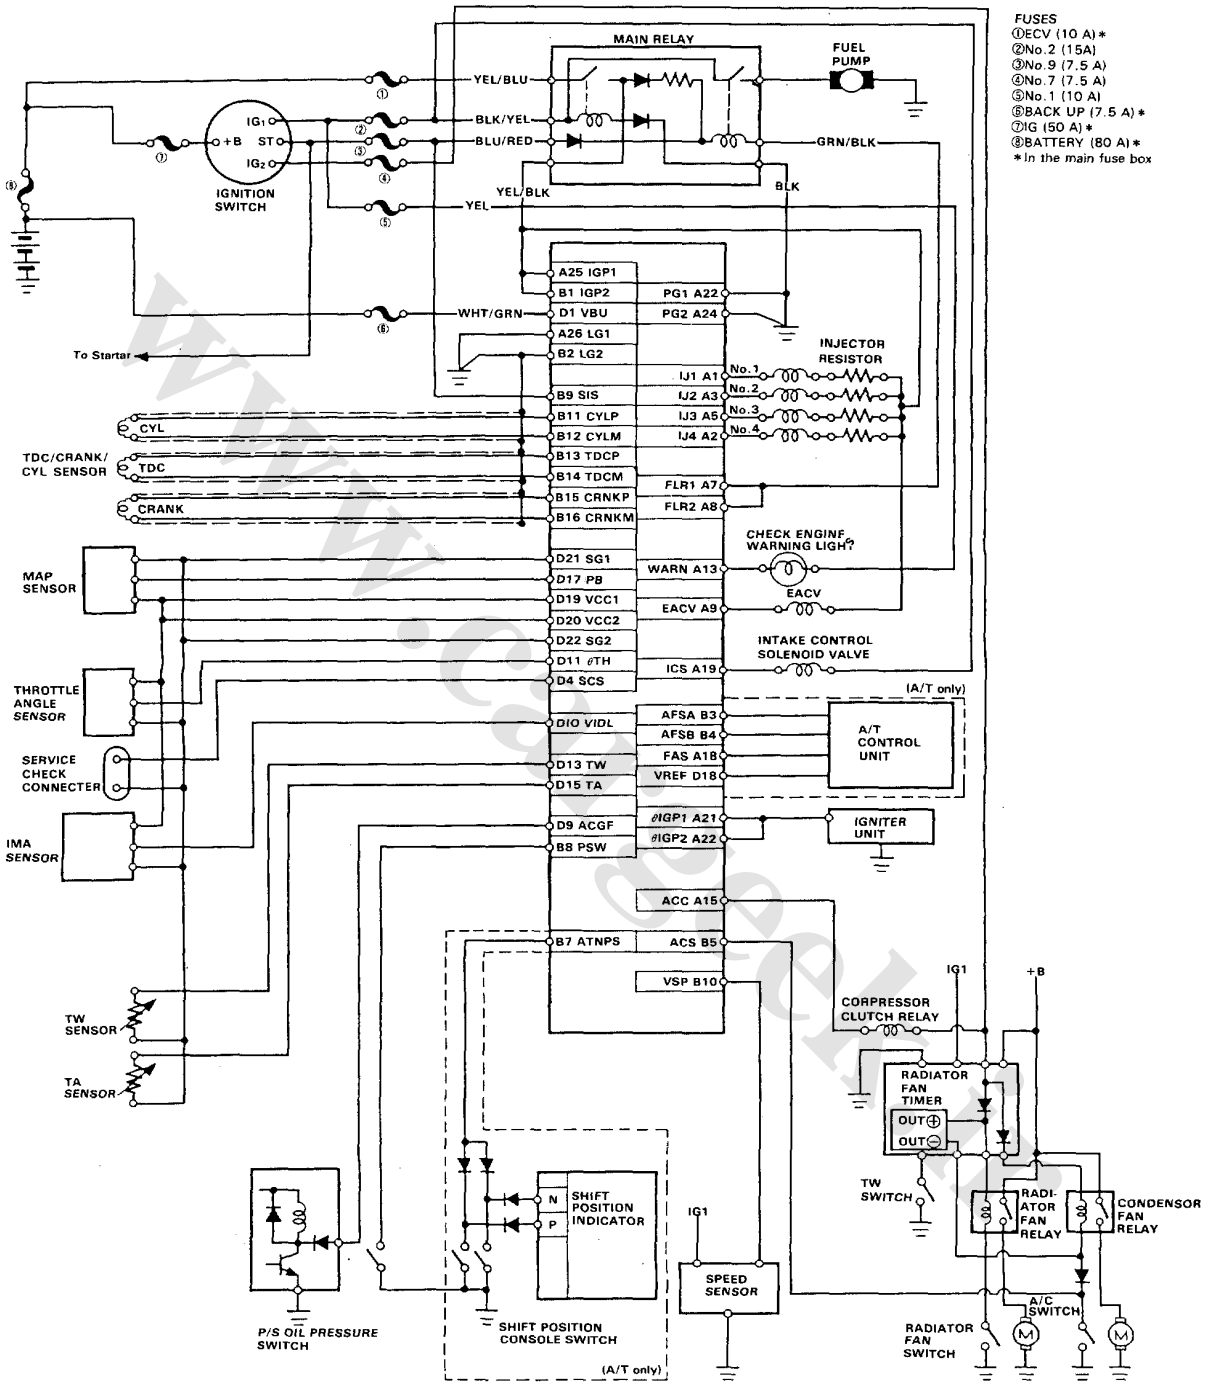

- FUSES**
- ① DEC V (10 A) *
 - ② No. 2 (15A)
 - ③ No. 9 (7.5 A)
 - ④ No. 7 (7.5 A)
 - ⑤ No. 1 (10 A)
 - ⑥ BACK UP (7.5 A) *
 - ⑦ IG (50 A) *
 - ⑧ BATTERY (80 A) *
- * In the main fuse box


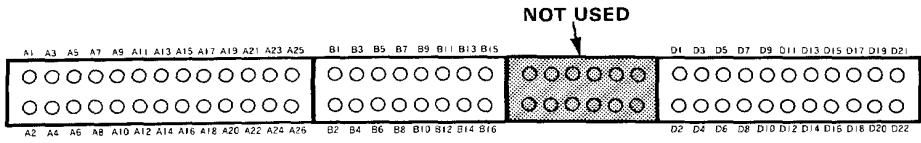



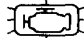
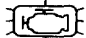

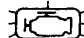


TERMINAL LOCATION

Troubleshooting

Troubleshooting Guide [With CATA]

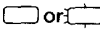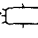NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-FI							
		ECU	OXYGEN SENSOR	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	ATMOSPHERIC PRESSURE SENSOR
	SYMPTOM	152	156,158	162	168	174	176	178	182
	CHECK ENGINE WARNING LIGHT TURNS ON	 or 							
	SELF-DIAGNOSIS INDICATOR (LED) BLINKS	① or *	① or ④	③ or ⑤	④ or ⑧ or ⑨	⑥	⑦	⑩	⑬
	ENGINE WON'T START	③			③				
	DIFFICULT TO START ENGINE WHEN COLD	(BU)		③	③	①			③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	(BU)				③			
	ROUGH IDLE	(BU)		③					
	WHEN WARM IDLE SPEED TOO HIGH	(BU)							
	WHEN WARM IDLE SPEED TOO LOW	(BU)							
FREQUENT STALLING	WHILE WARMING UP	(BU)				③			
	AFTER WARMING UP	(BU)							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)			③				
	FAILS EMISSION TEST	(BU)	③	②					
	LOSS OF POWER	(BU)		③			②		

* if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.

(BU): When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.












PGM-FI		A/T FI Signal A	A/T FI Signal B	IDLE CONTROL		FUEL SUPPLY		AIR INTAKE	EMISSION CONTROL	
IGNITION OUTPUT SIGNAL	VEHICLE SPEED SENSOR			ELEC- TRONIC AIR CONTROL VALVE	OTHER IDLE CONTROLS	FUEL INJECTOR	OTHER FUEL SUPPLY		EGR CONTROL SYSTEM	OTHER EMISSION CONTROLS
184	186	188	190	194	192	210	208	221	235	232
15	17	30	31	14		16			12	
1						2	3			
					2					
				1	2					
				1		2			3	
				1	2					
				1		2				
				1	2		3			
				3	1		2		3	
				3		1			3	
						2	3			1
						3	1	3		3

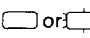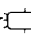Troubleshooting

Troubleshooting Guide [Without CATA]

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-FI							
		ECU	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	IMA SENSOR	ATMOSPHERIC PRESSURE SENSOR
SYMPTOM		152	162	168	174	176	178	180	182
	CHECK ENGINE WARNING LIGHT TURNS ON	 or 							
	SELF-DIAGNOSIS INDICATOR (LED) BLINKS	① or *	③ or ⑤	④ or ⑧ or ⑨	⑥	⑦	⑩	⑪	⑬
	ENGINE WON'T START	③		③					
	DIFFICULT TO START ENGINE WHEN COLD	(BU)	③	③	①				③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	(BU)			③				
	ROUGH IDLE	(BU)	③						
	WHEN WARM IDLE SPEED TOO HIGH	(BU)							
	WHEN WARM IDLE SPEED TOO LOW	(BU)							
FREQUENT STALLING	WHILE WARMING UP	(BU)			③				
	AFTER WARMING UP	(BU)							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)		③					
	FAILS EMISSION TEST	(BU)	②						
	LOSS OF POWER	(BU)	③			②			

* if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.

(BU): When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.



PGM-FI		IDLE CONTROL				FUEL SUPPLY		AIR INTAKE	EMISSION CONTROL
IGNITION OUTPUT SIGNAL	VEHICLE SPEED SENSOR	A/T FI Signal A	A/T FI Signal B	ELECTRONIC AIR CONTROL VALVE	OTHER IDLE CONTROLS	FUEL INJECTOR	OTHER FUEL SUPPLY		
184	186	188	190	194	192	210	208	221	232
15	17	30	31	14		16			
1						2	3		
					2				
				1	2				
				1		2			
				1	2				
				1		2			
				1	2		3		
				3	1		2		
				3		1			
						2	3		1
						3	1	3	3












PGM-FI		A/T FI Signal A	A/T FI Signal B	IDLE CONTROL		FUEL SUPPLY		AIR INTAKE	EMISSION CONTROL	
IGNITION OUTPUT SIGNAL	VEHICLE SPEED SENSOR			ELEC- TRONIC AIR CONTROL VALVE	OTHER IDLE CONTROLS	FUEL INJECTOR	OTHER FUEL SUPPLY		EGR CONTROL SYSTEM	OTHER EMISSION CONTROLS
184	186	188	190	194	192	210	208	221	235	232
15	17	30	31	14		16			12	
1						2	3			
					2					
				1	2					
				1		2			3	
				1	2					
				1		2				
				1	2		3			
				3	1		2		3	
				3		1			3	
						2	3			1
						3	1	3		3

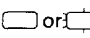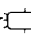Troubleshooting

Troubleshooting Guide [Without CATA]

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-FI							
		ECU	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	IMA SENSOR	ATMOSPHERIC PRESSURE SENSOR
SYMPTOM		152	162	168	174	176	178	180	182
	CHECK ENGINE WARNING LIGHT TURNS ON	 or 							
	SELF-DIAGNOSIS INDICATOR (LED) BLINKS	① or *	③ or ⑤	④ or ⑧ or ⑨	⑥	⑦	⑩	⑪	⑬
	ENGINE WON'T START	③		③					
	DIFFICULT TO START ENGINE WHEN COLD	(BU)	③	③	①				③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	(BU)			③				
	ROUGH IDLE	(BU)	③						
	WHEN WARM IDLE SPEED TOO HIGH	(BU)							
	WHEN WARM IDLE SPEED TOO LOW	(BU)							
FREQUENT STALLING	WHILE WARMING UP	(BU)			③				
	AFTER WARMING UP	(BU)							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)		③					
	FAILS EMISSION TEST	(BU)	②						
	LOSS OF POWER	(BU)	③			②			

* if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.

(BU): When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.





PGM-FI		IDLE CONTROL				FUEL SUPPLY		AIR INTAKE	EMISSION CONTROL
IGNITION OUTPUT SIGNAL	VEHICLE SPEED SENSOR	A/T FI Signal A	A/T FI Signal B	ELECTRONIC AIR CONTROL VALVE	OTHER IDLE CONTROLS	FUEL INJECTOR	OTHER FUEL SUPPLY		
184	186	188	190	194	192	210	208	221	232
15	17	30	31	14		16			
1						2	3		
					2				
				1	2				
				1		2			
				1	2				
				1		2			
				1	2		3		
				3	1		2		
				3		1			
						2	3		1
						3	1	3	3

Troubleshooting


Self-diagnostic Procedure

When the Check Engine warning light has been reported on, turn the ignition on, pull down the passenger's side carpet from under the dashboard and observe the LED on the top of the ECU. The LED indicates a system failure code by blinking frequency. The ECU LED can indicate any number of simultaneous component problems by blinking separate codes, one after another. Problem codes 1 through 9 are indicated by individual short blinks. Problem codes 10 through 41 are indicated by a series of long and short blinks. One long blink equals 10 short blinks. Add the long and short blinks together to determine the problem code.

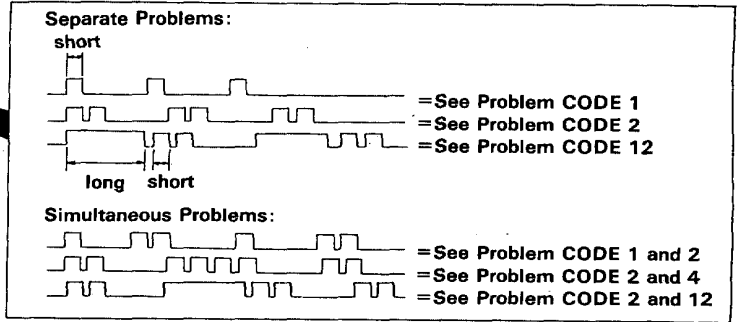
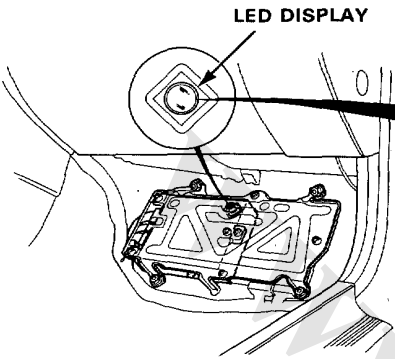


When the two terminals of the service check connector are connected with a jumper wire the LED on the ECU, the check engine warning light will indicate the same code.

LH:

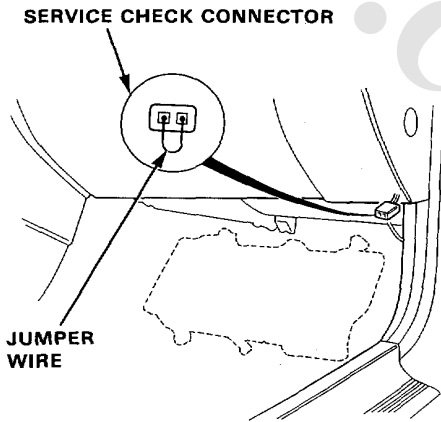

RH:

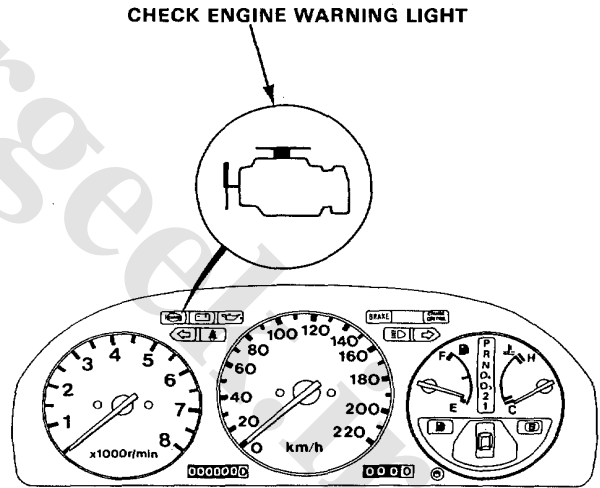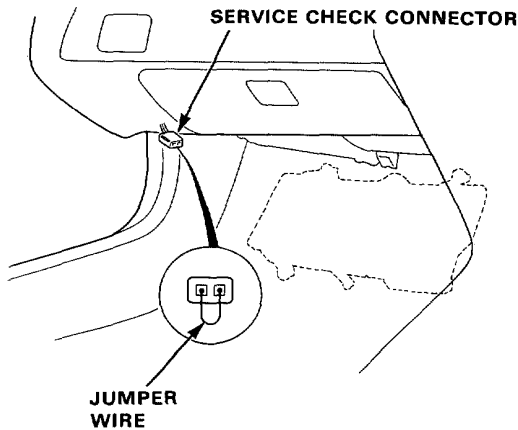



SELF-DIAGNOSIS INDICATOR BLINKS	SYSTEM INDICATED	PAGE
0	ECU	6-152
1	OXYGEN CONTENT (With CATA)	6-156
3	MANIFOLD ABSOLUTE PRESSURE	6-162
5		6-166
4	CRANK ANGLE	6-168
6	COOLANT TEMPERATURE	6-174
7	THROTTLE ANGLE	6-176
8	TDC POSITION	6-170
9	NO.1 CYLINDER POSITION	6-172
10	INTAKE AIR TEMPERATURE	6-178
11	IMA (Without CATA)	6-180
12	EXHAUST GAS RECIRCULATION SYSTEM	6-235
13	ATMOSPHERIC PRESSURE	6-182
14	ELECTRONIC AIR CONTROL	6-194
15	IGNITION OUTPUT SIGNAL	6-184
17	VEHICLE SPEED SENSOR	6-186
30	A/T FI SIGNAL A	6-188
31	A/T FI SIGNAL B	6-190
41	OXYGEN SENSOR HEATER (With CATA)	6-158


- If codes other than those listed above are indicated, verify the code. If the code indicated is not listed above, replace the ECU.
- The Check Engine warning light may come on, indicating a system problem, when, in fact, there is a poor or intermittent electrical connection. First, check the electrical connections, clean or repair connections if necessary.
- The Check Engine warning light and S₄ warning light may light simultaneously when the self-diagnosis indicator blinks 6, 7 and 17. Check the PGM-FI system according to the PGM-FI control system troubleshooting, then recheck the S₄ warning light. If it lights, see page 9-28, 29.
- The Check Engine warning light does not come on when there is a malfunction in the A/T FI signal. However the ECU LED will indicate the codes.

(cont'd)

Troubleshooting

Self-diagnostic Procedure (cont'd)


If the inspection for a particular failure code requires the ECU test harness, remove the right door sill molding, the small cover on the right kick panel, and pull the carpet back to expose the ECU. Unbolt the ECU bracket. Connect the ECU test harness. Then check the system according to the procedure described for the appropriate code(s) listed on the following pages.

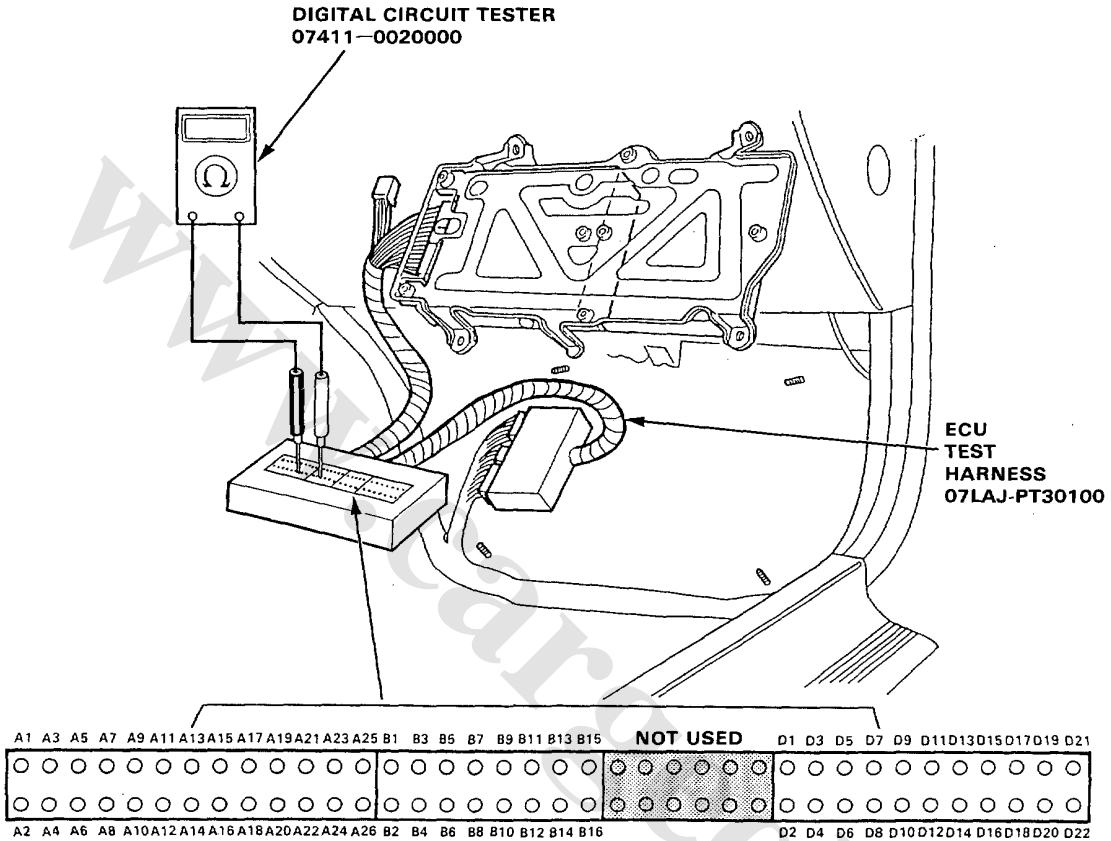

TERMINAL LOCATION

CAUTION:

- Puncturing the insulation on a wire can cause poor or intermittent electrical connections.
- For testing at connectors other than the ECU test harness, bring the tester probe into contact with the terminal from the connector side of wire harness connectors in the engine compartment. For female connectors, just touch lightly with the tester probe and do not insert the probe.

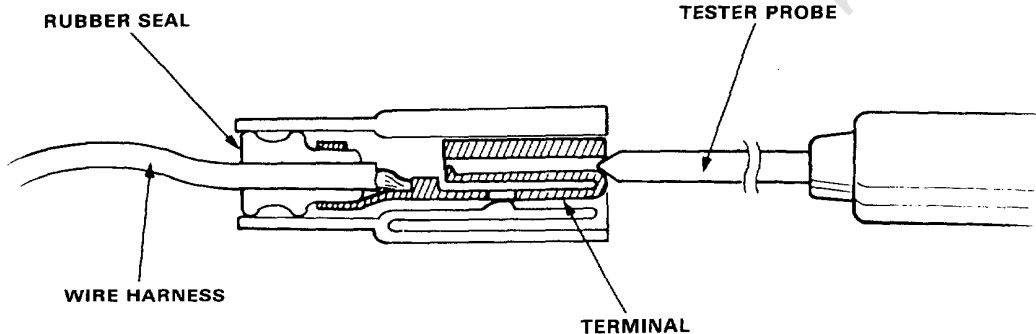



How to Read Flowcharts

A flowchart is designed to be used from start to final repair. It's like a map showing you the shortest distance. But beware: if you go off the "map" anywhere but a "stop" symbol, you can easily get lost.

START

(bold type)

Describes the conditions or situation to start a troubleshooting flowchart.

ACTION

Asks you to do something; perform a test, set up a condition, etc.

DECISION

Asks you about the result of an action, then sends you in the appropriate troubleshooting direction.

STOP

(bold type)

The end of a series of actions and decisions, describes a final repair action and sometimes directs you to an earlier part of the flow to confirm your repair.

NOTE:

- The term "Intermittent Failure" is used in these charts. It simply means a system may have had a failure, but it checks out OK through all your tests. You may need to road test the car to reproduce the failure or if the problem was a loose connection, you may have unknowingly solved it while doing the tests. In any event, if the warning light on the dash does not come on, check for poor connections or loose wires at all connectors related to the circuit that you are troubleshooting.
- Most of the troubleshooting flowcharts have you reset the ECU and try to duplicate the problem code. If the problem is intermittent and you can't duplicate the code, do not continue through the flowchart. To do so will only result in confusion and, possibly a needlessly replaced ECU.
- "Open" and "Short" are common electrical terms. An open is a break in a wire or at a connection. A short is an accidental connection of a wire to ground or to another wire. In simple electronics, this usually means something won't work at all. In complex electronics (like ECUs), this can sometimes mean something works, but not the way it's supposed to.
- If the electrical readings are not as specified when using the ECU harness, check the test harness connections before proceeding.

PGM-FI Control System

Troubleshooting Flowchart — ECU

Check Engine warning light isn't on for two seconds after ignition is first turned on.

Is oil pressure warning light on ?

YES

Turn the ignition switch OFF.

Connect the ECU test harness between the control unit and connector (page 6-150).

Connect A13 terminal to body ground.

Turn the ignition switch ON.

Is Check Engine warning light on ?

YES

Measure voltage between body ground and the following terminals individually to: ● A23, ● A24, ● A26, ● B2

Is there less than 1 V ?

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.


Inspect No.1 fuse.

Is No.1 fuse OK ?


YES

Repair open in YEL wire between No.1 fuse and combination meter.

Replace fuse.

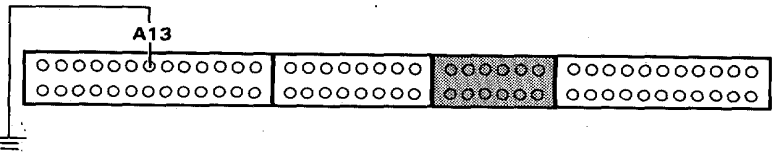

— Replace warning light bulb.
— Repair open in GRN/RED wire between ECU (A13) and combination meter.

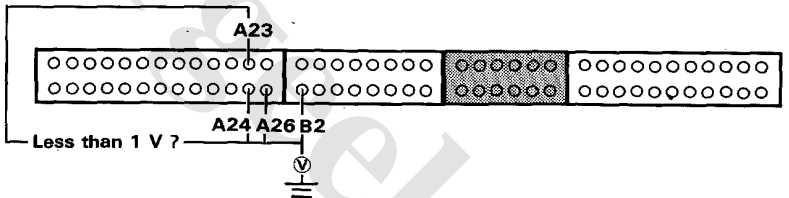


Less than 1 V ?

Repair open in wire between ECU and thermostat housing (G101) that had more than 1 V.



NOTE: If the Service Check Connector is jumped. The Check Engine warning light will stay on.

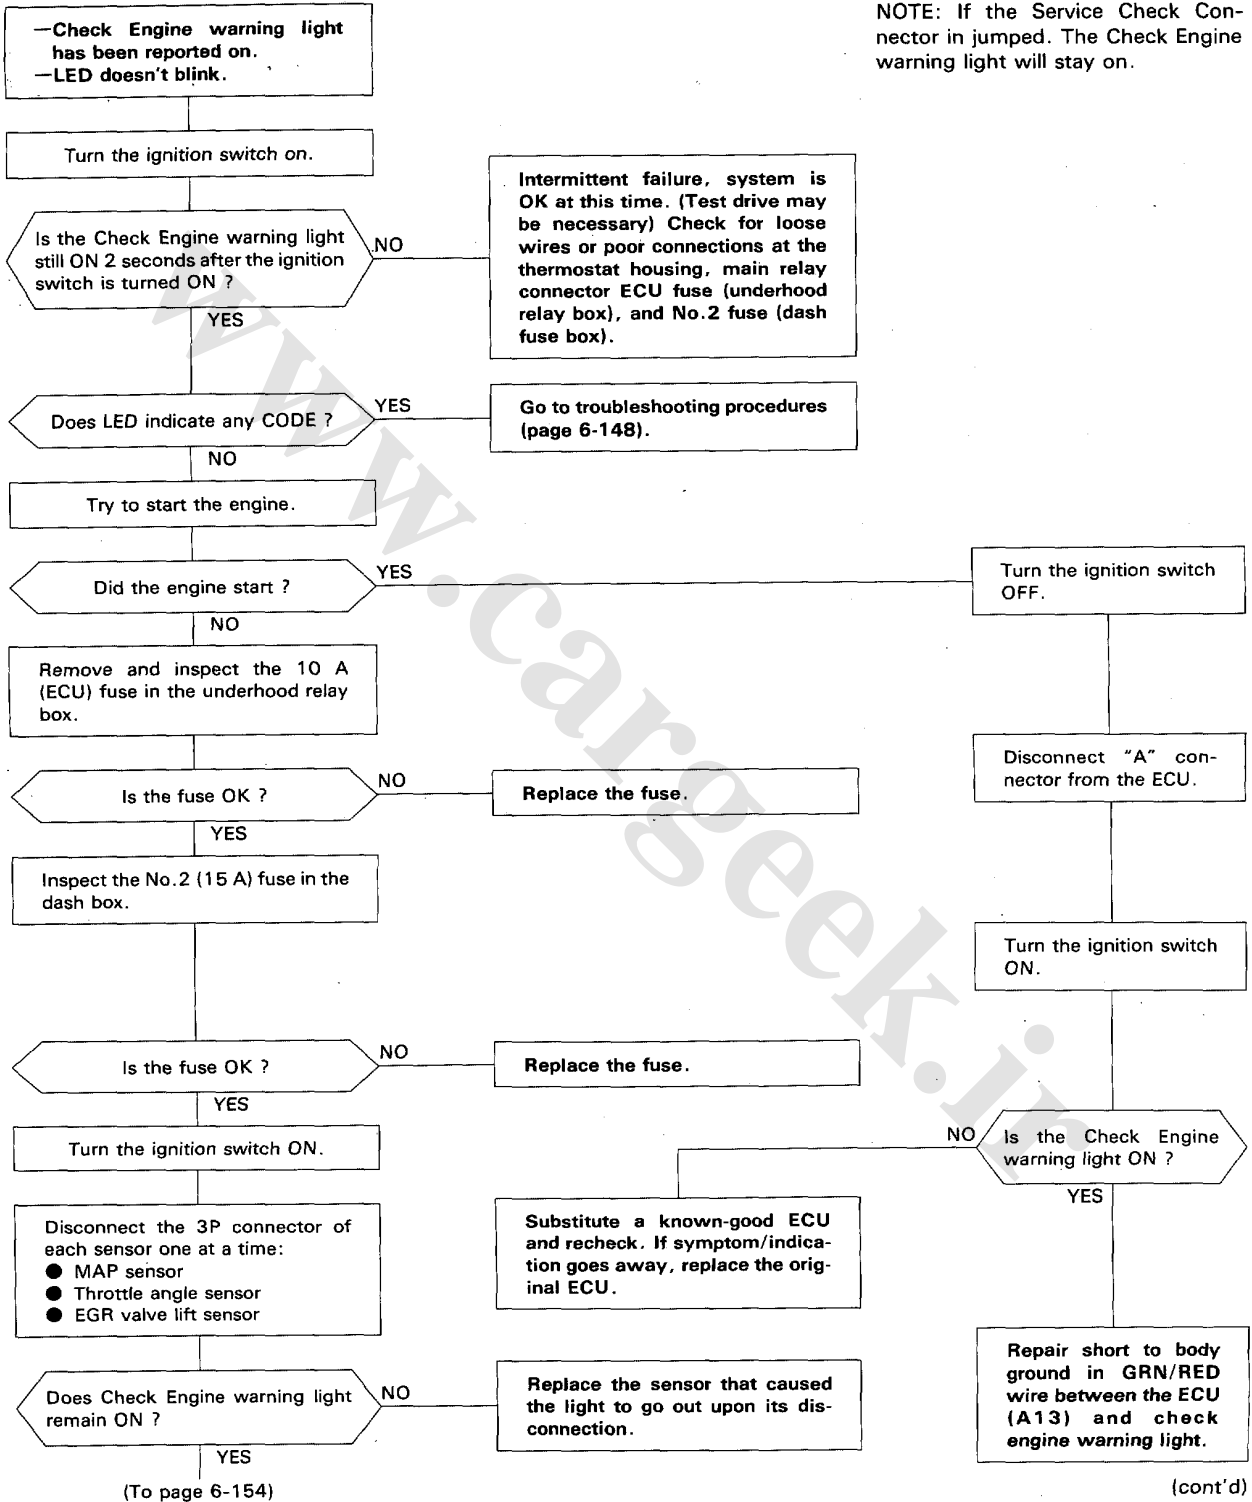

PGM-FI Control System


Troubleshooting Flowchart — ECU (cont'd)

(From page 6-153)

Turn the ignition switch OFF.

Connect the ECU test harness (page 6-150). But disconnect the "D" connector from the ECU only, not the main wire harness.

Check for continuity between body ground and the following terminals: D19, D20.

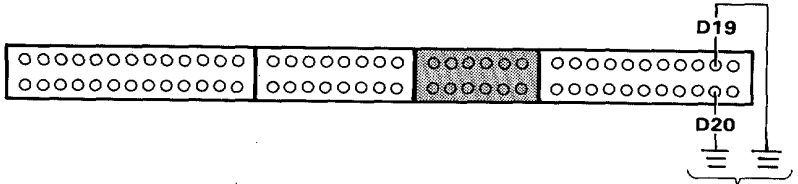

Does continuity exist ?

YES

Repair short to body ground in RED/WHT wire between ECU (D19), YEL/WHT wire between ECU (D20) and throttle angle sensor, EGR valve lift sensor and MAP sensor.

NO

Reconnect all the connectors. Reconnect the "D" connector to the ECU.

Turn the ignition switch ON.

Individually connect the following terminal to Body Ground. B2 • A26

Is the Check Engine warning light still ON after 2 seconds ?

NO

—Repair open in BLK/RED wire between ECU (A26) and G101.
—Repair open in BRN/BLK wire between ECU (B2) and G101.

YES

Measure voltage between A26 (-) and the following: B1 (+) and A25 (+).

Is there battery voltage ?

NO

—Repair open in YEL/BLK wire between ECU (A25, B1) and main relay.
—Check main relay and wiring connectors at main relay (page 6-216).

YES


substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.




www.cargeek.ir

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor



Self-diagnosis LED indicates code 1: A problem in the Heated Oxygen (O₂) Sensor circuit.



—Check Engine warning light has been reported on.
—LED indicates CODE 1.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Inspect fuel pressure (page 6-213).

Is it normal ?

NO — Go to page 6-208 Fuel Supply System.

YES

Warm up engine to normal operating temperature (cooling fan comes on).

Run engine for 10 seconds.

Road test with the Transmission in 2nd gear, accelerate using wide open throttle for at least 5 seconds. Then decelerate for at least 5 seconds with the throttle completely closed.

Is Check Engine warning light on and does LED indicate CODE 1 ?

NO — Intermittent failure, system is OK at this time. Check for poor connections or loose wires.

YES

(To page 6-157)



(From page 6-156)

Turn the ignition switch OFF.

Disconnect the O₂ sensor connector and connect A (-) terminal to B (+) terminal with a battery.

After two minutes, measure voltage between C (-) terminal and D (+) terminal.

Start the engine.

Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and below 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Replace O₂ sensor.

YES


Stop engine.

Connect the O₂ sensor connector to engine wire harness.

Connect the ECU test harness between the ECU and connector (page 6-150).

(To page 6-158)


2.2 l except KQ:

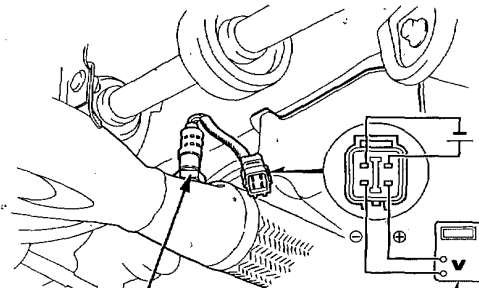

O₂ SENSOR
45 N·m (4.5 kg-m, 33 lb-ft)

DIGITAL MULTIMETER
07411-0020000


2.0 l and KQ:

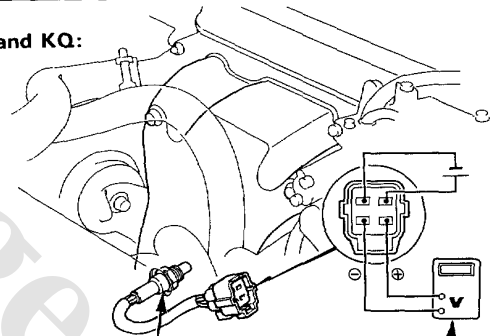

O₂ SENSOR

DIGITAL MULTIMETER

2.0 l and KQ:

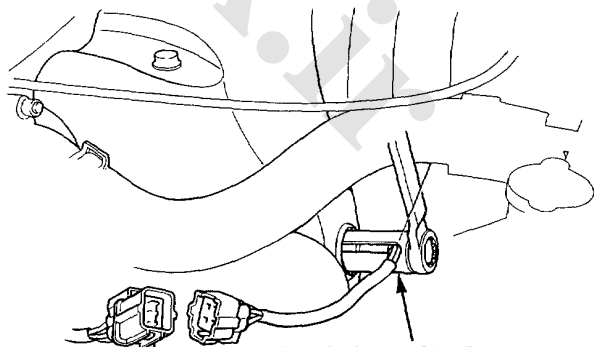

O₂ SENSOR SOCKET
WRENCH
07LAA-PT50100
45 N·m (4.5 kg-m, 33 lb-ft)

(cont'd)

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor (cont'd)

(From page 6-157)

Restart and warm up engine to normal operating temperature (cooling fan comes on).

Measure voltage between D14 (+) and A26 (-) terminal.


Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Repair short or open in WHT wire between ECU (D14) and O₂ sensor.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.






www.cargeek.ir

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor Heater



41

Self-diagnosis LED indicates code 41: A problem in the Oxygen (O₂) Sensor Heater circuit.

— Engine is running.
— Check Engine warning light has been reported on.
— LED indicates CODE 41.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does LED indicate CODE 41 ?

NO

Intermittent failure, system is OK at this time (test driving may be necessary).
Check for poor connections or loose wires at O₂ sensor connector.

YES

Stop engine.

Disconnect the 4P connector from the O₂ sensor.

Measure resistance between terminals A and B on the O₂ sensor.

Is there 15–20 Ω ?

NO

Replace O₂ sensor.

YES

Check for continuity to body ground on each terminal on the O₂ sensor.

Does continuity exist ?

YES

Replace O₂ sensor.

NO

Check for continuity between terminal A and terminals C and D individually.

Does continuity exist ?

YES

Replace O₂ sensor.


NO

(To page 6-161)

2.2 l except KQ :

O₂ SENSOR
45N·m(45kg·m, 33ft·lb)


DIGITAL MULTIMETER
07411-0020000

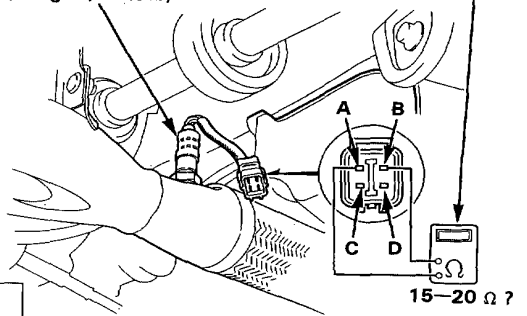


2.0 l and KQ :

O₂ SENSOR
45N·m(45kg·m, 33ft·lb)

DIGITAL MULTIMETER
07411-0020000

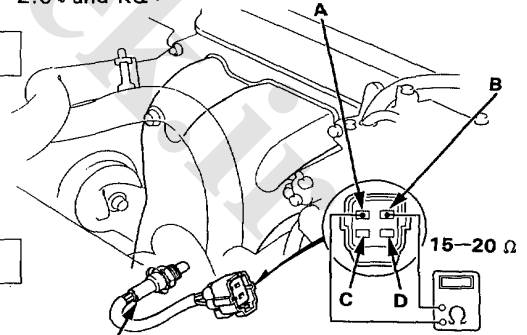

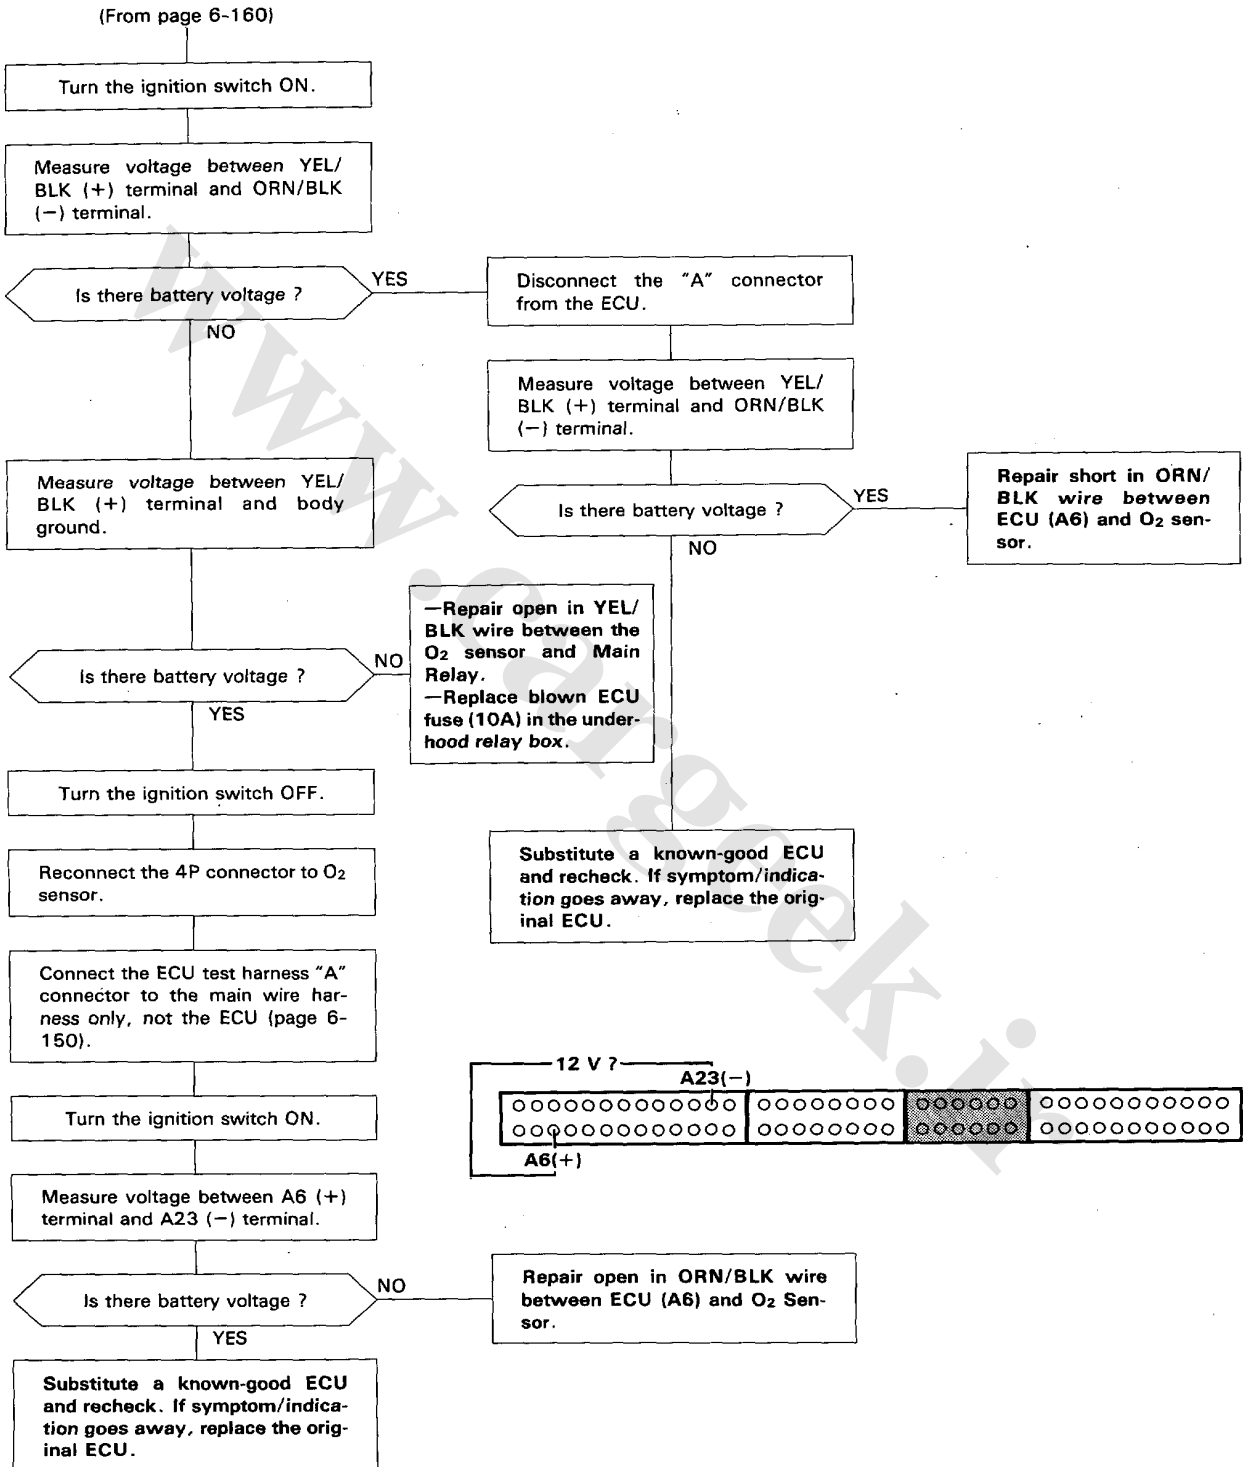


PGM-FI Control System

Troubleshooting Flowchart — MAP Sensor



3

Self-diagnosis LED indicates code 3: Most likely an electrical problem in the Manifold Absolute Pressure (MAP) Sensor system.



5

Self-diagnosis LED indicates code 5: Most likely a mechanical problem (broken hose) in the Manifold Absolute Pressure (MAP) Sensor system.



3


- Engine is warm and running.
- Check Engine warning light has been reported on.
- LED indicates CODE 3.

Except 2.2 l KE :

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Warm up engine to normal operating temperature (cooling fan comes on).

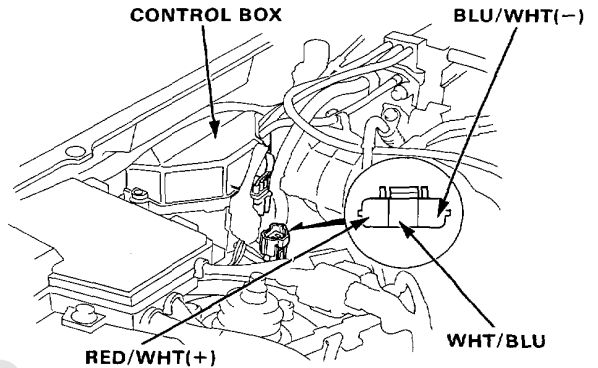

Is Check Engine warning light on and does LED indicate CODE 3 ?

NO


Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connection or loose wires at MAP sensor connector and ECU.

YES

Turn the ignition switch OFF.

Disconnect the 3P connector from the MAP sensor.


Turn the ignition switch ON.

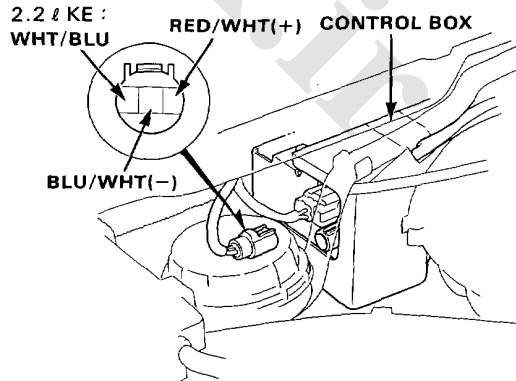

(To page 6-163)



(From page 6-162)

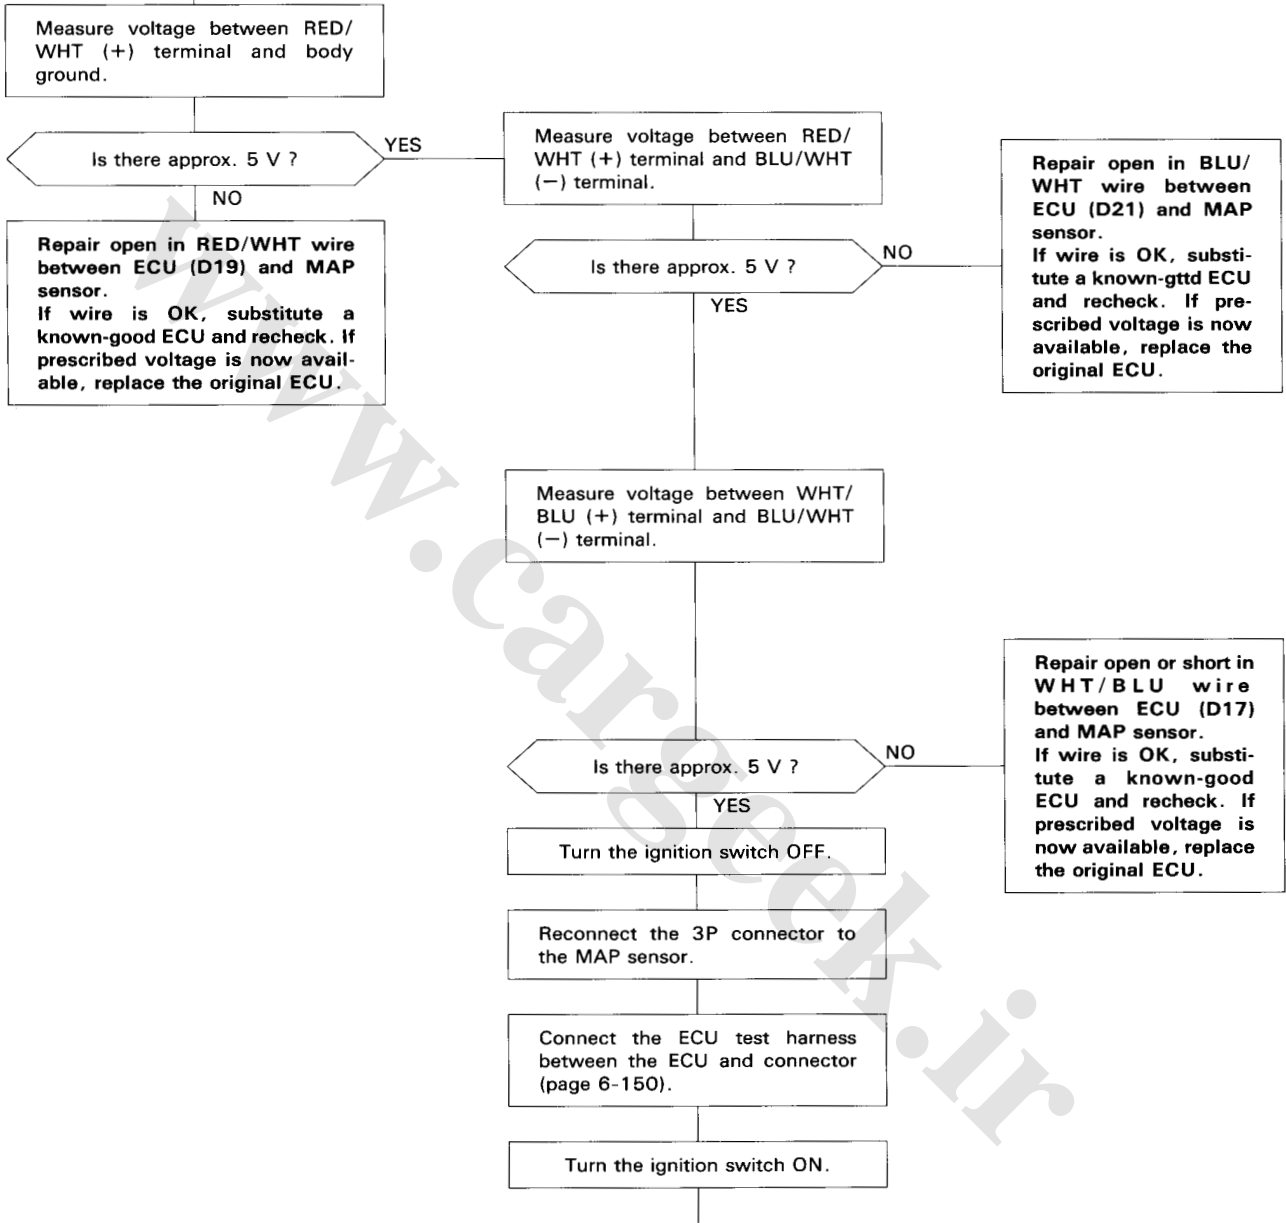

(To page 6-164)


(cont'd)

PGM-FI Control System

Troubleshooting Flowchart — MAP Sensor (cont'd)

(From page 6-163)

Measure voltage between D17 (+) terminal and D21 (-) terminal.

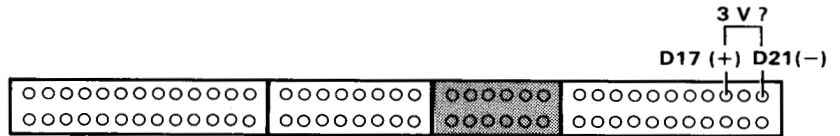

Is there approx. 3 V ?

NO

Replace MAP sensor.

YES


Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.



www.cargeek.ir

PGM-FI Control System

Troubleshooting Flowchart — MAP Sensor (cont'd)



5

- Check Engine warning light has been reported on.
- LED indicates CODE 5.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start the engine.

Is Check Engine warning light on and does LED indicate CODE 5 ?


NO

- Intermittent failure, system is OK at this time (test drive may be necessary).
- Check vacuum hoses, pipes and connections.
- Make sure all connectors are secure.

YES

Stop engine.

Disconnect #21 hose from the throttle body, connect vacuum pump to the hose and apply vacuum.

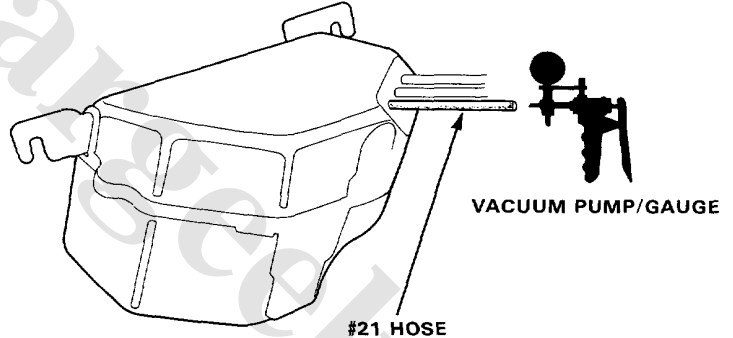

Does it hold vacuum ?

NO

Connect a vacuum pump to the MAP sensor and apply vacuum.

YES

Does it hold vacuum ?

NO

Replace MAP sensor.

YES

Replace #21 hose.

Connect a T-fitting from a vacuum gauge between the throttle body and MAP sensor.

(To page 6-167)



(From page 6-166)

Start engine.

Is there manifold vacuum ?

NO

— Remove restriction from throttle body.
— Replace throttle body.


YES

Stop engine.

Connect the ECU test harness between the ECU and connector (page 6-150).

Turn the ignition switch ON.

Measure voltage between D17 (+) terminal and D21 (-) terminal.

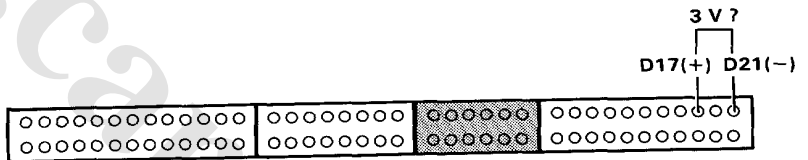

Is there approx. 3V ?

NO

Replace the MAP sensor.

YES

Start the engine and allow it to idle.

Is there approx. 1V ?

NO

Replace MAP sensor.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.


PGM-FI Control System

Troubleshooting Flowchart — TDC/CRANK/CYL Sensors




4

Self-diagnosis LED indicates code 4: A problem in the circuit of the CRANK Sensor.




8

Self-diagnosis LED indicates code 8: A problem in the circuit of the TDC Sensor.



9

Self-diagnosis LED indicates code 9: A problem in the circuit of the CYL Sensor.



4

—Check Engine warning light has been reported on.
—LED indicates CODE 4.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does LED indicate CODE 4 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires at distributor connector.

YES

Stop engine.

Disconnect the 8P connector from the TDC/CRANK/CYL sensor.

Measure resistance between B terminal and F terminal.


Is there 350—700 Ω ?


NO

Replace the distributor assembly (section 16).

YES


(To page 6-169)

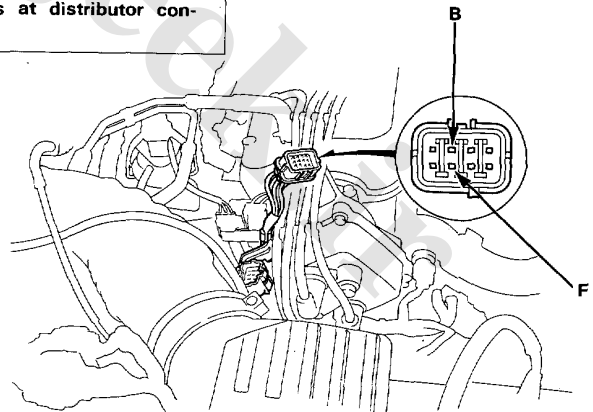

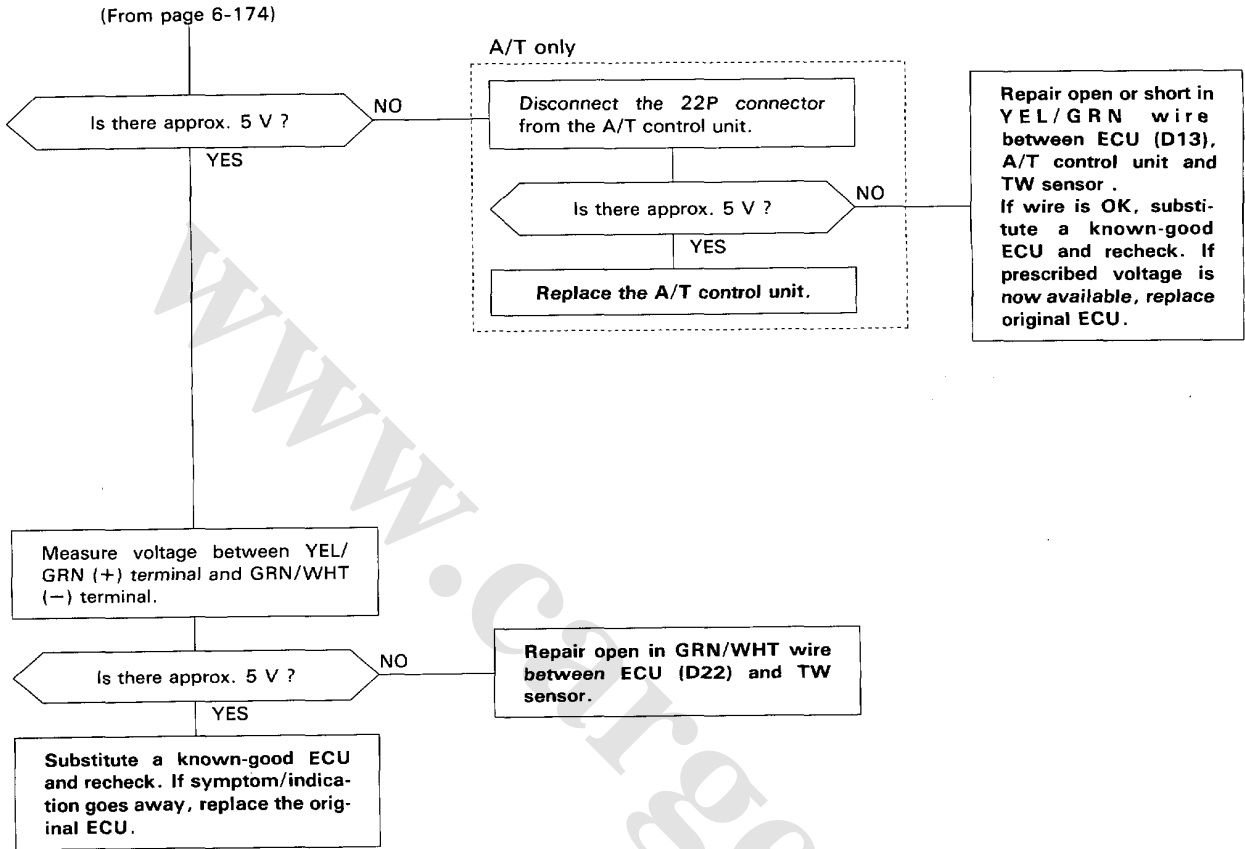


PGM-FI Control System

Troubleshooting Flowchart — Throttle Angle Sensor



Self-diagnosis LED indicates code 7: Most likely a problem in the Throttle Angle Sensor circuit.



- Engine is running.
- Check Engine warning light has been reported on.
- LED indicates CODE 7.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does LED indicate CODE 7 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at throttle angle sensor connector.

YES

Turn the ignition switch OFF.

Disconnect the 3P connector from the throttle angle sensor.

Turn the ignition switch ON.

Measure voltage between YEL/WHT (+) terminal and GRN/WHT (-) terminal.

Is there approx. 5 V ?

NO

YES

Turn the ignition switch OFF.

Reconnect the 3P connector.

Connect the ECU test harness between the ECU and connector (page 6-150).

(To page 6-177)

GRN/WHT

YEL/WHT

Measure voltage between YEL/WHT (+) terminal and body ground.

Is there approx. 5V ?

YES


Repair open in GRN/WHT wire between ECU (D22) and throttle angle sensor.

NO

Turn the ignition switch OFF.


Connect the ECU test harness between the ECU and connector (page 6-150).

(To page 6-177)


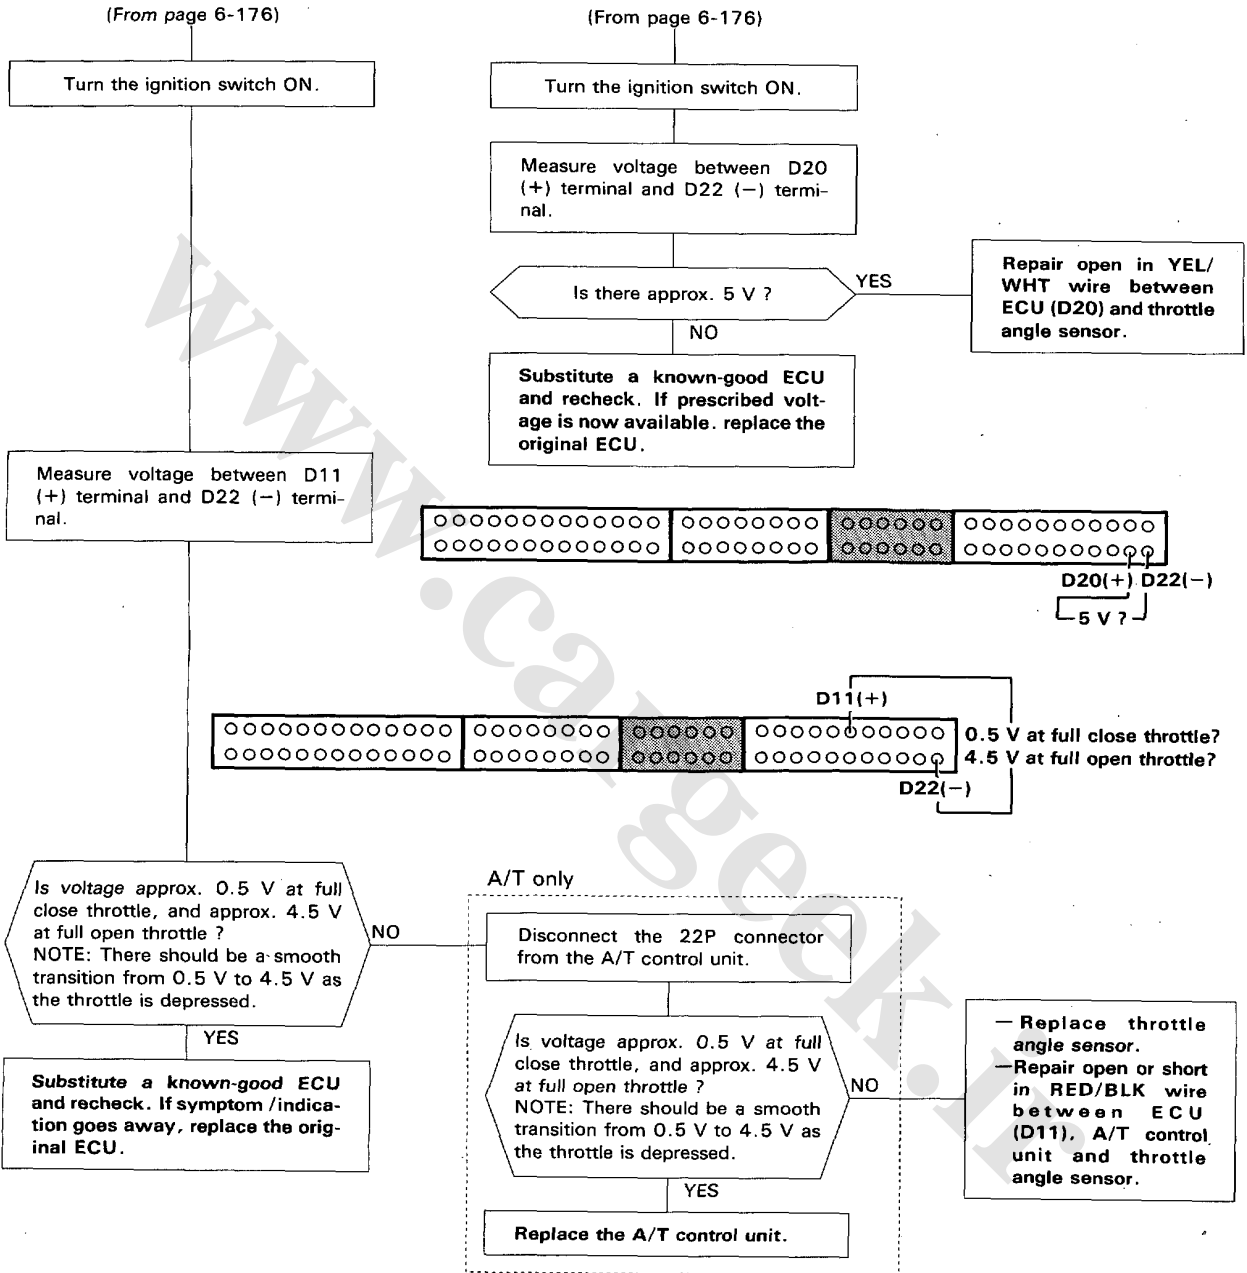


PGM-FI Control System

Troubleshooting Flowchart — TA Sensor



Self-diagnosis LED indicates code 10: Most likely a problem in the Intake Air Temperature (TA) Sensor circuit.

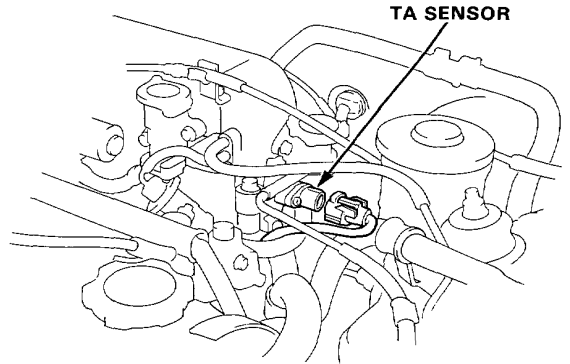

—Check Engine warning light has been reported on
—LED indicates CODE 10.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Turn the ignition switch ON.

Is Check Engine Warning light on and does LED indicate CODE 10 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at TA sensor connector.

YES

Turn the ignition switch OFF.

Disconnect the 2P connector from the TA sensor.

Measure resistance between the 2 terminals on the TA sensor.

Is there 1—4 kΩ ?

NO

Replace TA sensor.

YES

Turn the ignition switch ON.

Measure voltage between RED/YEL (+) terminal and body ground.

Is there approx. 5 V ?

NO


Repair open or short in RED/YEL wire between ECU (D15) and TA sensor.
If wire is OK, substitute a known-good ECU and recheck. If prescribed voltage is now available, replace original ECU.

YES

(To page 6-178)



(From page 6-178)

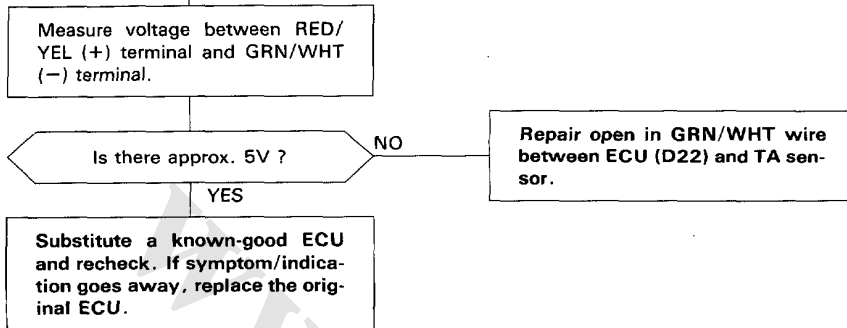

www.Cargeek.ir

PGM-FI Control System

Troubleshooting Flow Chart — IMA Sensor (Without CATA)



Self-diagnosis LED indicates code 11: Most likely a problem in the IMA Sensor circuit.

— Check Engine warning light has been reported on.
— LED indicates CODE 11

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Turn the ignition switch ON.

Is check Engine warning light on ? and does LED indicate CODE 11 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections of loose wires at the IMA sensor connector.

YES

Turn the ignition switch OFF.

Disconnect the 3P connector from the IMA sensor.

Measure resistance between A terminal and C terminal on IMA sensor harness.

Is there 4—6 kΩ ?

NO

Replace IMA sensor.

YES

Measure resistance between A and B terminals and between C and B terminals.

Does the sum of the two resistance checks equal 4—6 kΩ ?

NO


Replace IMA sensor.

YES


Turn the ignition switch ON.


Measure voltage between YEL/WHT (+) terminal and GRN/WHT (—) terminal on the wire harness.

(To page 6-181)

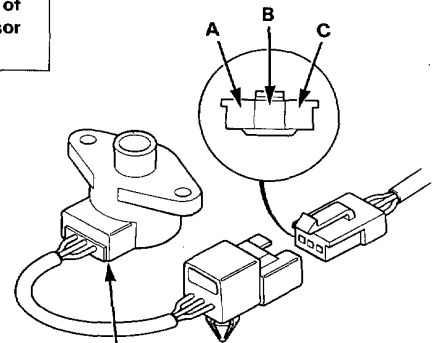


IMA SENSOR

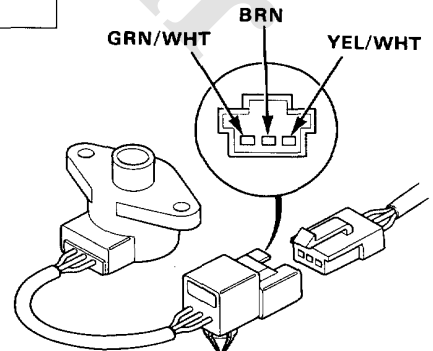

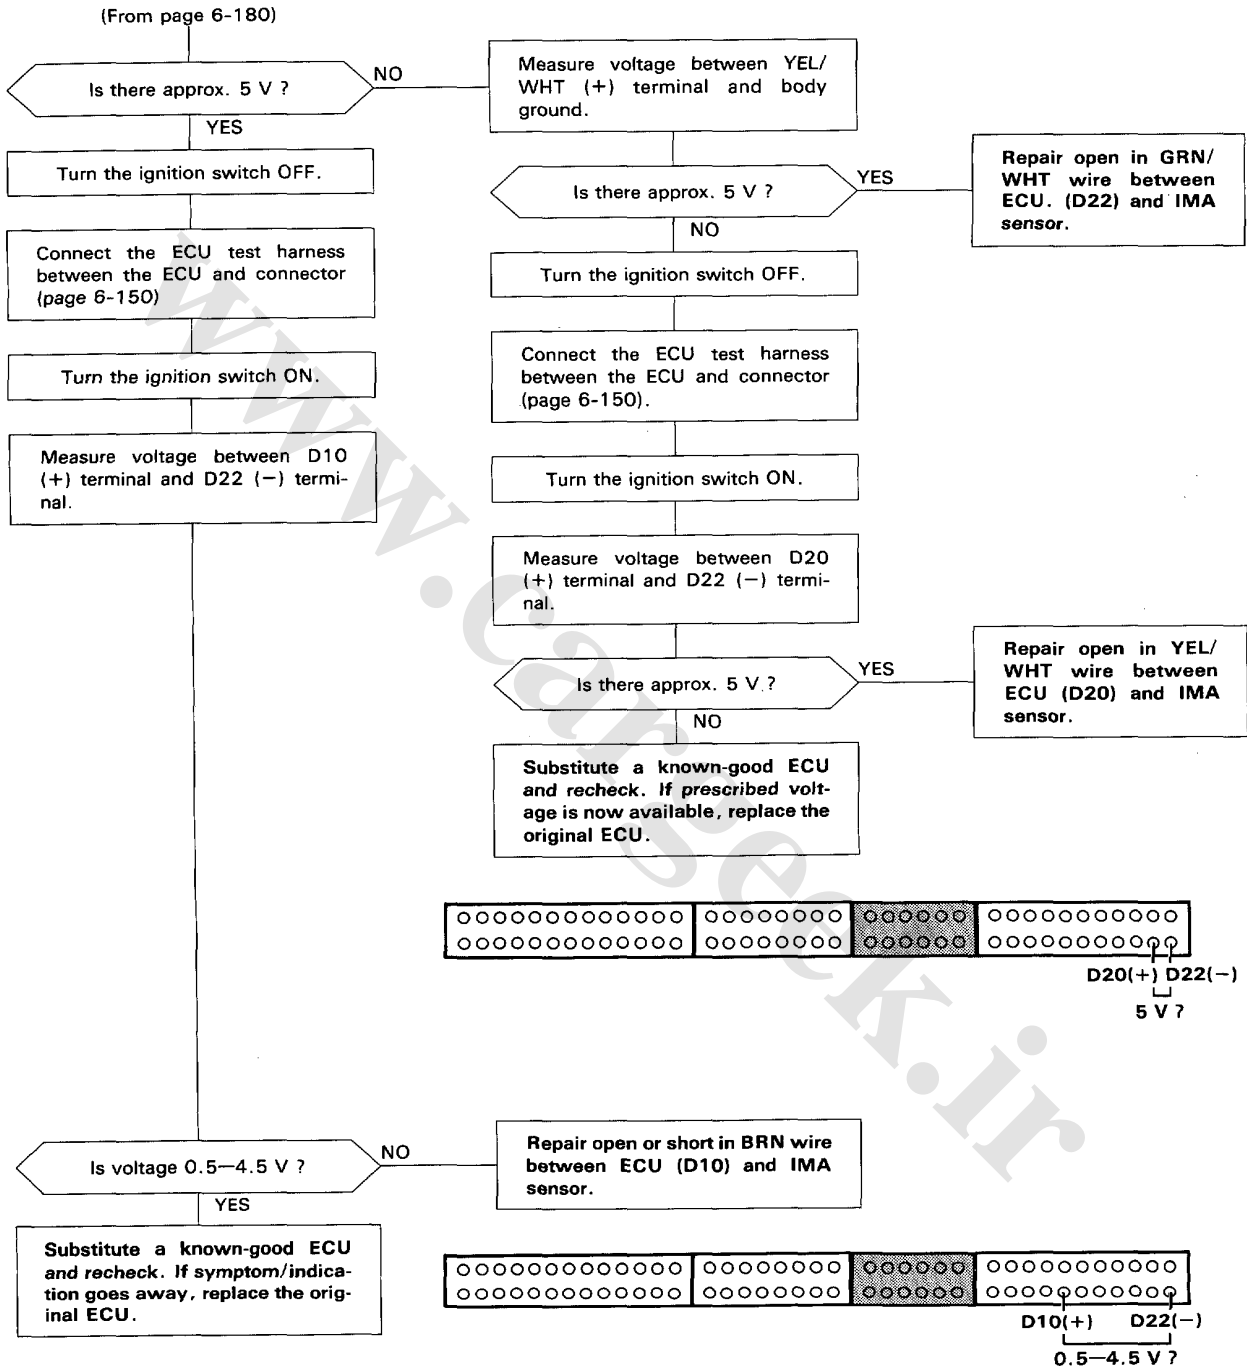


PGM-FI Control System

Troubleshooting Flowchart — PA Sensor



Self-diagnosis LED indicates code 13: A problem in the Atmospheric Pressure (PA) Sensor.



- Check Engine warning light has been reported on.
- LED indicates CODE 13.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Turn the ignition switch ON.

Is Check Engine warning light on and does LED indicate CODE 13 ?

NO


Intermittent failure, system is OK at this time (test drive may be necessary).

YES

Substitute a known-good ECU and recheck. If symptom/Indication goes away, replace the original ECU.

PGM-FI Control System

Troubleshooting Flowchart — Ignition Output Signal



15 Self-diagnosis LED indicates code 15: A problem in the Ignition Output Signal circuit.

– Check Engine warning light has been reported.
– LED indicates CODE 15.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does LED indicate CODE 15 ?

NO
Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at the distributor connector.

Turn the ignition switch OFF.

Disconnect the 2P connector from the distributor.

Turn the ignition switch ON.


Measure voltage between BLK/YEL (+) terminal and body ground.

Is there battery voltage ?

NO
Repair open in BLK/YEL wire between the 2P connector and ignition switch.

Turn the ignition switch OFF.

Reconnect the 2P connector.

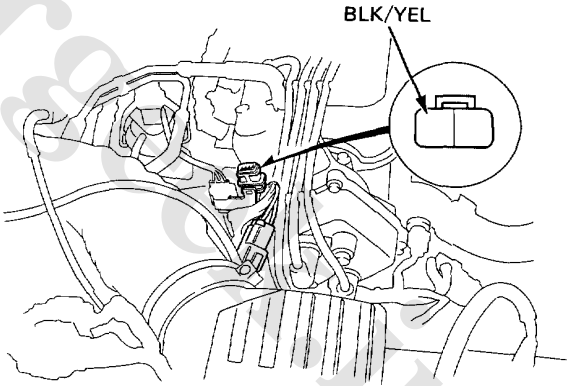

(To page 6-185)



(From page 6-184)

Connect the PGM-FI test harness between the ECU and connector (page 6-150).

Turn the ignition switch ON.


Measure voltage individually between A21 (+), A22 (+) terminals and A26 (-) terminal.

Is there approx. 10 V ?

NO

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

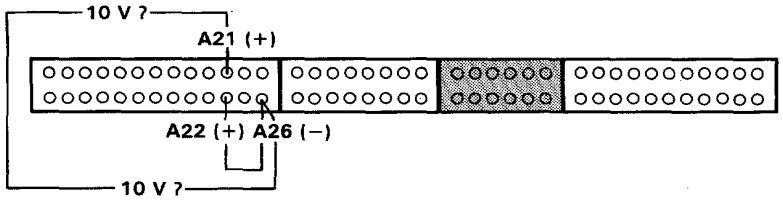


- Replace the igniter unit.
- Repair open or short YEL/GRN wires between distributor and ECU (A21 or A22).

NOTE: If the YEL/GRN wire was shorted, the igniter may be damaged.

www.CarGeek.ir

PGM-FI Control System

Troubleshooting Flowchart — Vehicle speed Sensor



Self-diagnosis LED indicates code 17: A problem in the Vehicle Speed Sensor circuit.

— Check Engine warning light has been reported on.
— LED indicates CODE 17.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Road test necessary.
In 2nd gear accelerate to 3,500 min⁻¹ (rpm), then decelerate to 1,500 min⁻¹ (rpm) with throttle fully closed.

Is Check Engine warning light on and does LED indicate CODE 17 ?

NO

Intermittent failure, system is OK at this time.
Check for poor connections or loose wires.

YES


Block rear wheels and set the parking brake. Jack up the front of the car and support with safety stands.

▲ WARNING Block rear wheels before jacking up front of car.

Connect the ECU test harness between the ECU and connector (page 6-150).

Turn the ignition switch ON.

Slowly rotate left front wheel and measure voltage between B10 (+) terminal and A26 (-) terminal.



A26(-) B10(+)
0-5 V ?

Does voltage pulse 0 V and 5 V ?

NO

— Repair open or short in ORN wire between ECU (B10) and the speed sensor.
— Faulty speed sensor.
— Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

PGM-FI Control System

Troubleshooting Flowchart — A/T FI Signal A



Self-diagnosis LED indicates code 30: A problem in the line (B3) of between A/T control unit and PGM-FI ECU.



Self-diagnosis LED indicates code 31: A problem in the (B4) of between A/T control unit and PGM-FI ECU.



LED indicates CODE 30.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Test drive necessary.
Drive the car for several miles so that the transmission upshifts and downshifts several times.

Does LED indicate CODE 30 ?

NO

Intermittent failure, system is OK at this time.

YES

Turn the ignition switch OFF.

Connect the ECU test harness between the ECU and connector not to the ECU (page 6-150).

Disconnect the 22P connector from the A/T control unit.

Check for continuity between B3 terminal and body ground.


Does continuity exist ?

YES

Repair short in WHT/RED wire between ECU (B3) and the A/T control unit.

NO


(To page 6-189)

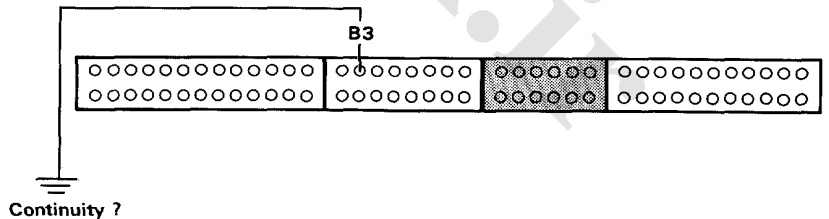



(From page 6-188)

Check for Continuity WHT/RED wire between B3 and 22P connector of the A/T control unit.



Does continuity exist ?

NO

Repair open in WHT/RED wire between ECU (B3) and the A/T control unit.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

www.cargeek.ir

PGM-FI Control System

Troubleshooting Flowchart — A/T FI Signal B



31

LED indicates CODE 31.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Test drive necessary.
Drive the car for several miles so that the transmission upshifts and downshifts several times.

Does LED indicate CODE 31 ?

NO


Intermittent failure, system is OK at this time (test drive may be necessary).

YES

Turn the ignition switch OFF.

Connect the ECU test harness between the ECU and connector not to the ECU (page 6-150)

Disconnect the 22P connector from the A/T control unit.



B4
Continuity ?

Check for continuity between B4 terminal and body ground.

Does continuity exist ?

YES

Repair short in GRN wire ECU (B4) and the A/T control unit.


NO

(To page 6-191)



(From page 6-190)

Check for Continuity GRN wire between B4 and 22P connector of the A/T control unit.



Does continuity exist ?

NO

Repair open in GRN wire between ECU (B4) and the A/T control unit.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

www.cargeek.ir

Idle Control System

Symptom Troubleshooting Guide

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- If the idle speed is out of specification and LED does not blink CODE 14, go to inspection described on page 6-193.

PAGE	SUB SYSTEM	IDLE ADJUSTING SCREW	EACV	AIR CONDITIONING SIGNAL	ALTERATOR FR SIGNAL	A/T SHIFT POSITION SIGNAL (A/T ONLY)	STARTER SWITCH SIGNAL	P/S OIL PRESSURE SWITCH SIGNAL	FAST IDLE VALVE	AIR BOOST VALVE	HOSES AND CONNECTIONS
	SYMPTOM	207	194	198	200	202	204	205	206	—	*
	DIFFICULT TO START ENGINE WHEN COLD								①		
	WHEN COLD FAST IDLE OUT OF SPEC [1,000–2,000min ⁻¹ (rpm)]	③	②						①		
	ROUGH IDLE		②								①
	WHEN WARM RPM TOO HIGH	③	①					③	②		③
WHEN WARM RPM TOO LOW	Idle speed is below specified engine speed (no load)	②	①								
	Idle speed does not increase after initial start up.		①								
	On models with automatic transmission, the idle speed drops in gear		②			①					
	Idle speeds drops when air conditioner in ON		②	①							
	Idle speed drops when steering wheel is turning		②					①			
	Idle speed fluctuates with electrical local		②								①
FREQUENT STALLING	WHILE WARMING UP		①								
	AFTER WARMING UP	①									
	FAILS EMISSION TEST										①

Fuel Supply System

Symptom Troubleshooting Guide

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE		SUB SYSTEM	FUEL INJECTOR	INJECTOR RESISTOR	PRESSURE REGULATOR	FUEL FILTER	FUEL PUMP	MAIN RELAY	CONTAMINATED FUEL
SYMPTOM			210	212	213	214	215	216	*
ENGINE WON'T START			③	③		③	①	②	③
DIFFICULT TO START ENGINE WHEN COLD OR HOT									①
ROUGH IDLE			①	②					③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING		①	②	③				③
	FAILS EMISSION TEST		②	③	①				
	LOSS OF POWER		③	③		①	③		②

* Fuel with dirt, water or a high percentage of alcohol is considered contaminated.



Fuel Pressure


Relieving

▲ WARNING

- Do not smoke while working on the fuel system. Keep open flames or sparks away from the work area.
- Be sure to relieve fuel pressure while the engine is off.

NOTE: Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the 6 mm service bolt at the fuel pipe.

1. Remove fuel filter cap.
2. Disconnect the battery negative cable from the battery negative terminal.
3. Use a box end wrench on the 6 mm service bolt at the fuel pipe, while holding the special banjo bolt with another wrench.
4. Place a rag or shop towel over the 6 mm service bolt.
5. Slowly loosen the 6 mm service bolt one complete turn.

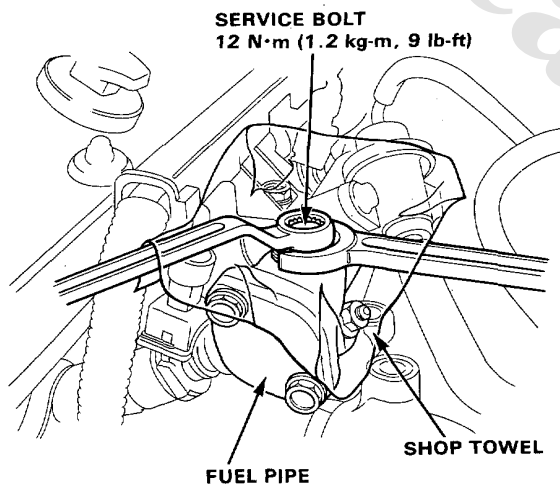

NOTE:

- A fuel pressure gauge can be attached at the 6 mm service bolt hole.
- Always replace the washer between the service bolt and the special banjo bolt, whenever the service bolt is loosened to relieve fuel pressure.
- Replace all washers whenever the bolts are removed to disassemble parts.

Inspection

Inspection

1. Relieve fuel pressure.
2. Remove the service bolt on the fuel pipe while holding the banjo bolt with another wench and attach the fuel pressure gauge.
3. Start the engine. Measure the fuel pressure with the engine idling and vacuum hose of the pressure regulator disconnected.

Pressure should be:


240–279 kPa (2.45–2.85 kg/cm², 35-41 psi)

4. Reconnect vacuum hose to the pressure regulator.

Pressure should be:

200–240 kPa (2.04–2.45 kg/cm², 29-35 psi)

FUEL PRESSURE GAUGE 07406-0040001

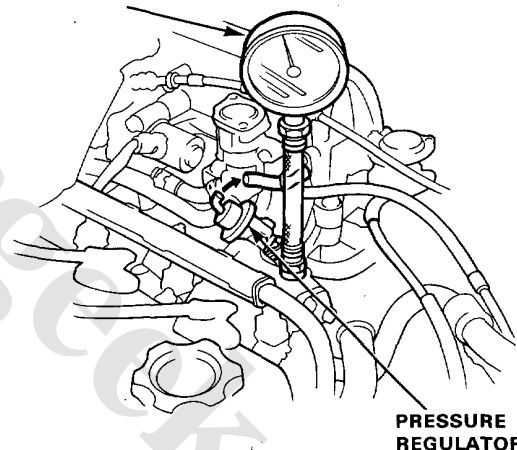

- If the fuel pressure is not as specified, first check the fuel pump (page 6-215). If the pump is OK, check the following:
 - If the pressure is higher than specified, inspect for:
 - Pinched or clogged fuel return hose or piping.
 - Faulty pressure regulator (page 6-213).
 - If the pressure is lower than specified, inspect for:
 - Clogged fuel filter.
 - Pressure regulator failure (page 6-213).
 - Leakage in the fuel line.

Fuel Supply System


Fuel Injectors

Testing

NOTE: Check the following items before testing: idle speed, ignition timing and idle CO %

If the engine will run:

1. With the engine idling, disconnect each injector connector individually and inspect the change in the idling speed.
 - If the idle speed drop is almost the same for each cylinder, the injectors are normal.
 - If the idle speed or quality remains the same when you disconnect a particular injector, replace the injector and re-test.
2. Check the clicking sound of each injector by means of a stethoscope when the engine is idling.

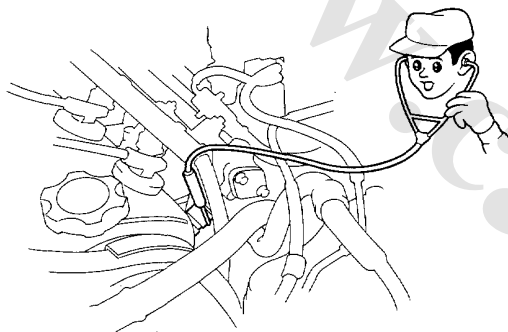


- If any injector fails to make the typical clicking sound, check the sound again after replacing the injector.
- If clicking sound is still absent, check the following.
 - Whether there is any short-circuiting, wire breakage or poor connection in the YEL/BLK wire between the main relay and the resistor.
 - Whether the resistor is open or corroded (page 6-212).
 - Whether there is any short-circuiting, wire breakage or poor connection in the RED/BLK wire between the resistor and the injector.
 - Whether there is any short-circuiting, wire breakage or poor connection in the wire between the injector and the ECU.

If all is OK, check the ECU (page 6-144).

If the engine cannot be started:

1. Remove the connector of the injector, and measure the resistance between the 2 terminals of the injector.

Resistance should be: 1.5–2.5 Ω

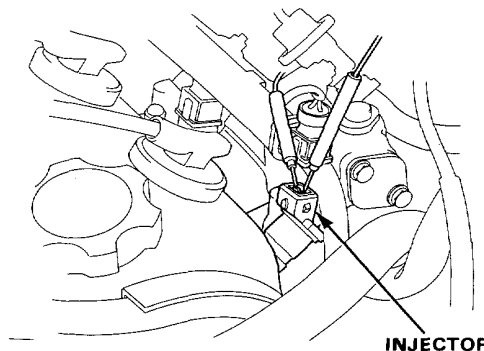

- If the resistance is not as specified, replace the injector.
- If the resistance is as specified, check the fuel pressure (page 6-209).
 - If the fuel pressure is as specified, check the following:
 - Whether there is any short-circuiting, wire breakage or poor connection in the YEL/BLK wire between the main relay and the resistor.
 - Whether the resistor is open or corroded (page 6-212).
 - Whether there is any short-circuiting, wire breakage, or poor connection in the RED/BLK wire between the resistor and the injector
 - Whether there is any short-circuiting, wire breakage or poor connection in the wire between the injector and the ECU.

If all is OK, check the ECU (page 6-144).



Pressure Regulator


Testing

⚠ WARNING Do not smoke during the test. Keep open flames away from your work area.

1. Attach a pressure gauge to the service port of the fuel pipe (page 6-209)

Pressure should be:
 240–279 kpa (2.45–2.85 kg/cm², 35–41 psi)
 (with the regulator vacuum hose disconnected)


FUEL PRESSURE GAUGE
 07406–0040001

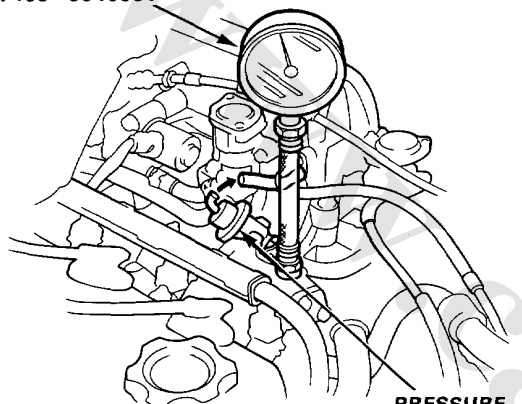

**PRESSURE
 REGULATOR**

2. Reconnect the vacuum hose to the pressure regulator.
3. Check that the fuel pressure rises when the vacuum hose from the regulator is disconnected again.
 - If the fuel pressure did not rise, replace the regulator and retest.
 - Check vacuum hose and port for kinks or blockage.

PRESSURE REGULATOR

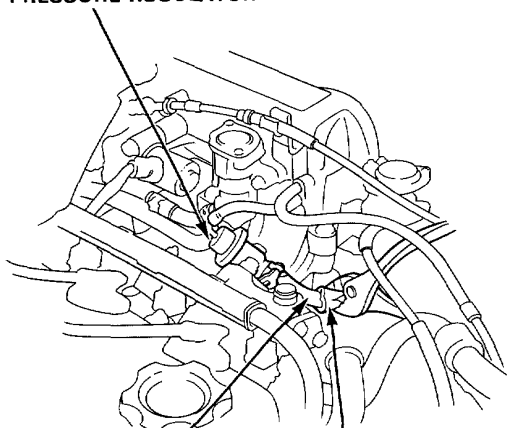


RETURN HOSE

SHOP TOWEL

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame way from work area.

1. Place a shop towel under pressure regulator, then relieve fuel pressure (page 6-209).
2. Disconnect the vacuum hose and fuel return hose.
3. Remove the two 6 mm retainer bolts.

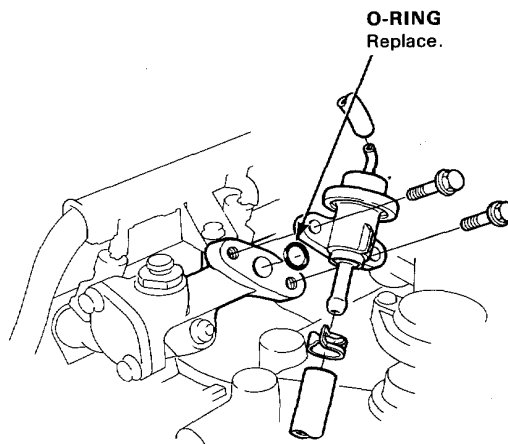

NOTE:

- Replace the O-ring.
- When assembling the regulator, apply clean engine oil to the O-ring and assemble it into its proper position, taking care not to damage the O-ring.

Fuel Supply System

Fuel Filter

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

The filter should be replaced : every 2 years or 40,000 km, (24,000 miles), whichever comes first or whenever the fuel pressure drops below the specified value (240—279) kPa, 2.45—2.85 kg—cm², 35—41 psi with the pressure regulator vacuum hose disconnected after making sure that the fuel pump and the pressure regulator are OK.


1. Place a shop towel under and around the fuel filter.
2. Relieve fuel pressure (page 6-209)
3. Remove the 12 mm banjo bolt and the fuel feed pipe from the filter.
4. Remove the fuel filter clamp and fuel filter.
5. When assembling, use new washers, as shown.

BANJO BOLT
22N·m (2.2 kg·m, 16 lb·ft)

WASHER
Replace.

10N·m (1.0 kg·m, 7 lb·ft)

38N·m (3.8 kg·m, 27 lb·ft)

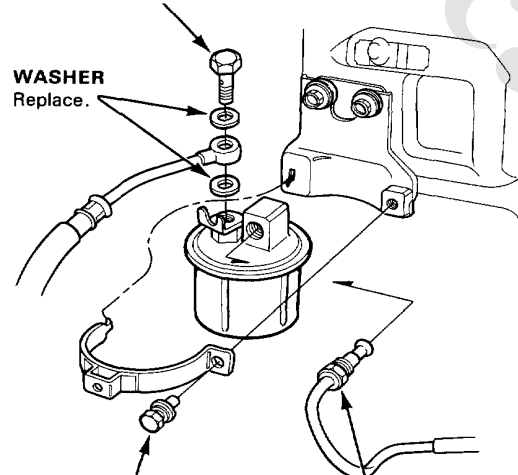

CAUTION: Clean the flared joint of high pressure hoses thoroughly before reconnecting them.



Fuel Pump

Testing


▲ WARNING Do not smoke during the test. Keep open flame away from your work area.

If you suspect a problem with the fuel pump, check that the fuel pump actually runs; when it is ON, you will hear some noise if you hold your ear to the fuel filler port with the fuel filler cap removed. The fuel pump should run for two seconds, when ignition switch is first turned on. If the pump does not make noise, check as follows:


1. Disconnect the 3P or 4P connector in the trunk.

CAUTION: Be sure to turn the ignition switch OFF before disconnecting the wires.

2. Disconnect the main relay connector and connect the BLK/YEL ⑤ wire and YEL ⑦ wire with a jumper wire.

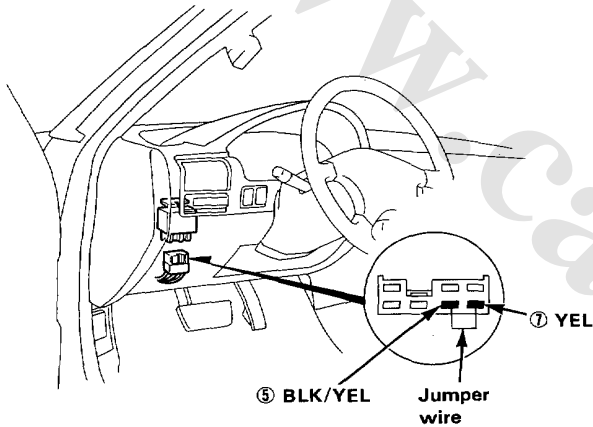

3. Check that battery voltage is available at the fuel pump connector when the ignition switch is turned ON (positive probe to the YEL wire, negative probe to the body ground).

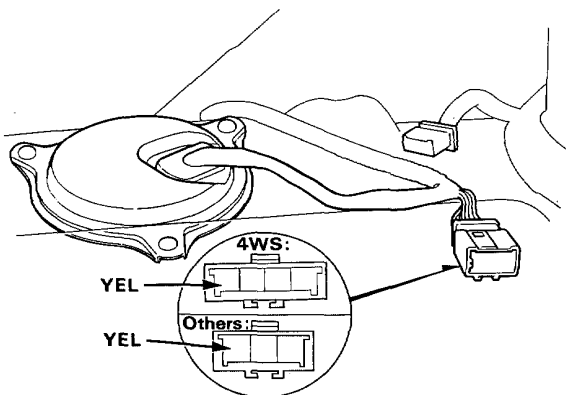


- If battery voltage is available, replace the fuel pump.
- If there is no voltage, check the main relay and wire harness (page 6-216).

Replacement


▲ WARNING Do not smoke while working on fuel system. Keep open flames away from your work area.

1. Remove the fuel tank (page 6-218).
2. Remove the fuel pump mounting nuts.
3. Remove the fuel pump from the fuel tank.

2WS:

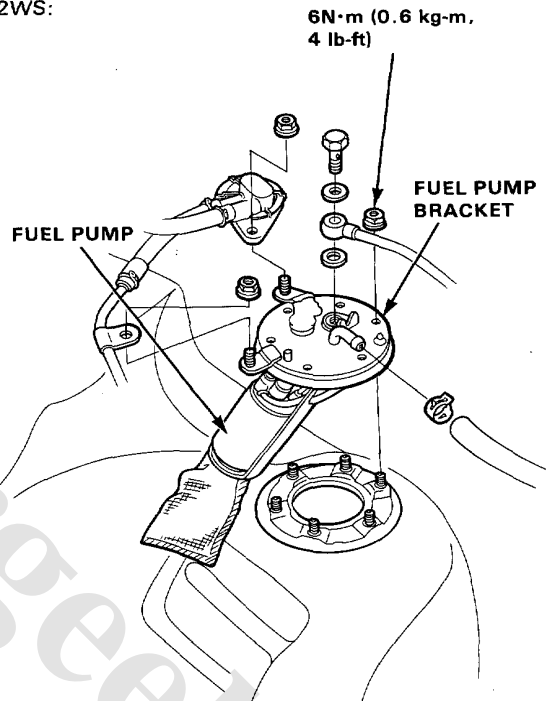

4WS:

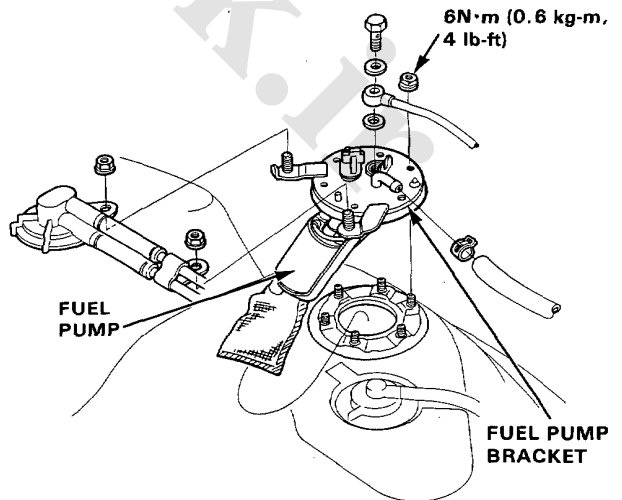



Fuel Supply System

Main Relay

Relay Testing

NOTE: If the car starts and continues to run, the main relay is OK.


1. Remove the main relay.
2. Attach the battery positive terminal to the No.6 terminal and the battery negative terminal to the No.8 terminal of the main relay. Then check for continuity between the No. 5 terminal and No.7 terminal of the main relay.
 - If there is continuity, go on to step 3.
 - If there is no continuity, replace the relay and retest.

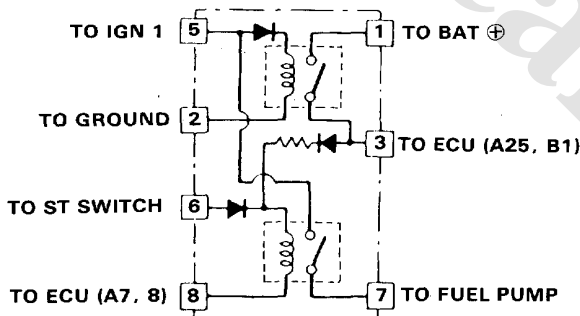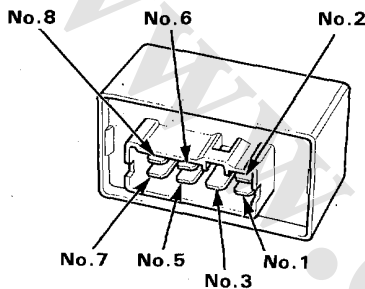

3. Attach the battery positive terminal to the No.5 terminal and the battery negative terminal to the No.2 terminal of the main relay. Then check that there is continuity between the No.1 terminal and No.3 terminal of the main relay.
 - If there is continuity, go on to step 4.
 - If there is no continuity, replace and retest.
4. Attach the battery positive terminal to the No.3 terminal and battery negative terminal to the No.8 terminal of the main relay. Then check that there is continuity between the No.5 terminal and No.7 terminal of the main relay.
 - If there is continuity, the relay is Ok; If the fuel pump still does not work, go to harness Testing in the next column.
 - If there is no continuity, replace the relay and retest.


Harness Testing

1. Keep the ignition switch in the OFF position.
2. Disconnect the main relay connector.
3. Check for continuity between the BLK wire ① in the connector and body ground.
 - If there is continuity, go to step 4.
 - If there is no continuity, repair open in BLK wire.
4. Attach the positive probe of voltmeter to the YEL/BLU wire ① and the negative probe to the BLK wire ②.

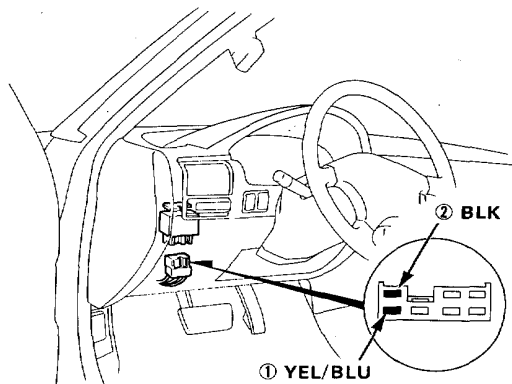

Battery voltage should be available.

- If there is no voltage, check the ECU fuse (main fuse box) and the wiring between the main relay and the ECU fuse (10 A).
5. Attach the positive probe of voltmeter to the BLK/YEL wire ⑤ and the negative probe to the BLK wire ②.

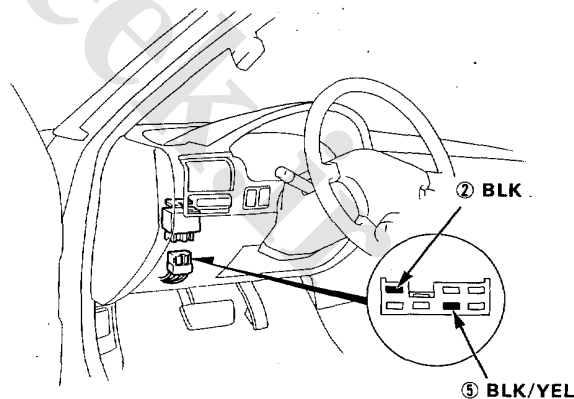

6. Turn the ignition switch ON.

Battery voltage should be available.

- If there is no voltage, check No.2 fuse and the wiring from the ignition switch to the fuse box and the wiring from the fuse box to the main relay.

Fuel Supply System

Fuel Tank (2WS)

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Block front wheels. Jack up the rear of the car and support with jackstands.
2. Remove the drain bolt and drain the fuel into an approved container.
3. Disconnect the 3P connector in the trunk.
4. Remove the two-way valve cover and fuel hose protector.
5. Disconnect the hoses.


CAUTION:

- When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.
- Clean the flared joint of high pressure hoses thoroughly before reconnecting them.

6. Place a jack, or other support, under the tank.
7. Remove the strap and let the straps fall free.
8. Remove the fuel tank.

NOTE: The tank may stick on the undercoat applied to its mount. To remove, carefully pry it off the mount.

9. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

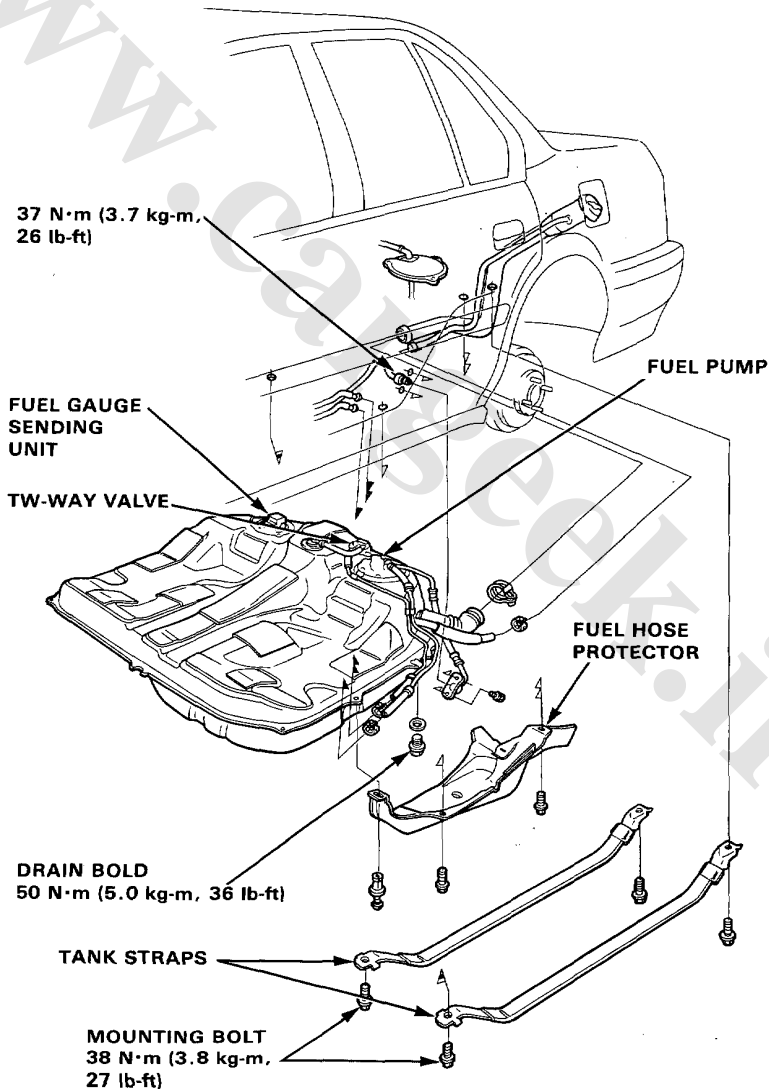



Fuel Tank (4WS)


Replacement

WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Block front wheels. Jack up the rear of the car and support with jackstands.
2. Remove the drain bolt and drain the fuel into an approved container.
3. Disconnect the 4P in the trunk.
4. Remove fuel hose protector.
5. Disconnect the hoses.

CAUTION:

- When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.
 - Clean the flared joint of high pressure hoses thoroughly before reconnecting them.
6. Place a jack, or other support, under the tank.
 7. Remove the strap bolts and let the straps fall free.
 8. Remove the fuel tank.
 9. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

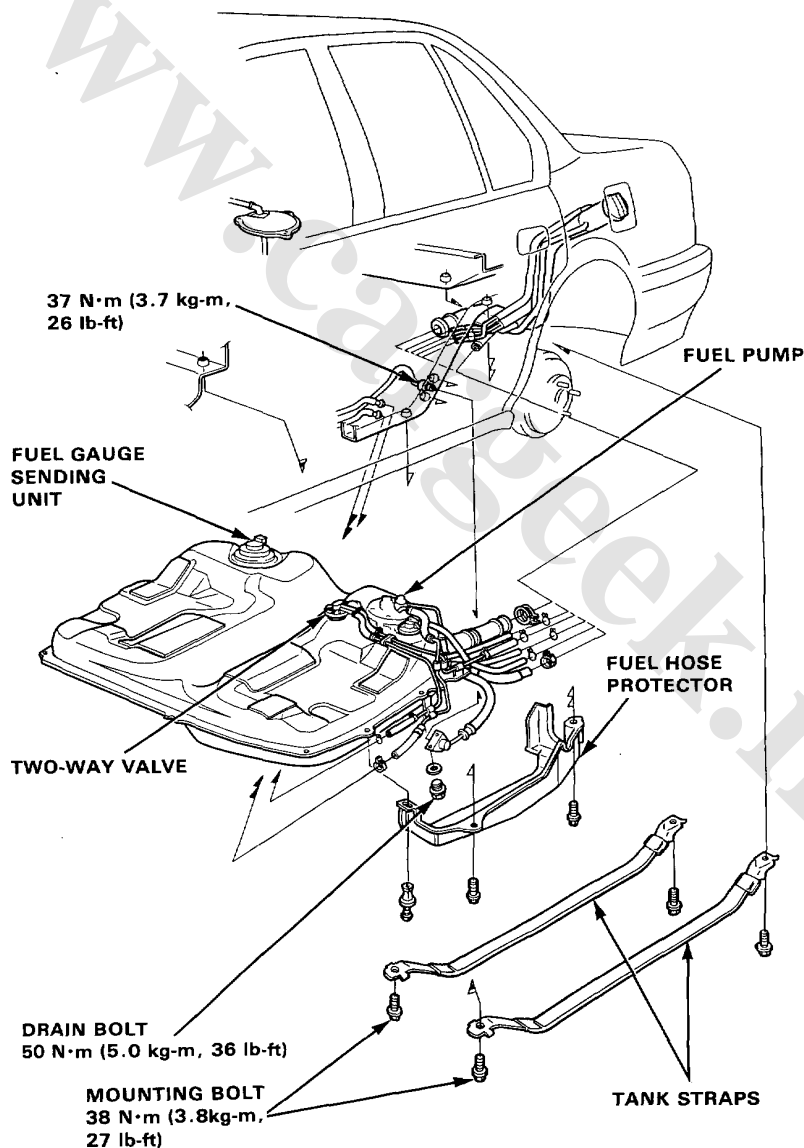



Air Intake System

System Troubleshooting Guide

NOTE: Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.

2.0 l and KQ, KY:

PAGE	SUB SYSTEM	THROTTLE CABLE	THROTTLE BODY	INTAKE CONTROL SYSTEM
		222	223	229
		②	①	
			①	②

2.2 l except KQ, KY:


PAGE	SUB SYSTEM	THROTTLE CABLE	THROTTLE BODY	INTAKE CONTROL SYSTEM	BYPASS CONTROL
		222	223	229	225
		②	①		
			①	③	②

Air Intake System

Throttle Cable

Inspection/Adjustment


1. Warm up the engine to normal operating temperature (cooling fan comes on).
2. Check that the throttle cable operates smoothly with no binding or sticking. Repair as necessary.
3. Check cable free play at the throttle linkage. Cable deflection should be 10–12 mm (0.39–0.47 in.).

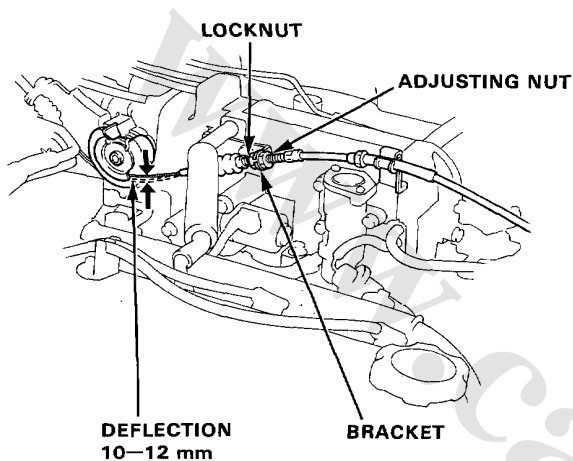


4. If deflection is not within specs, loosen the locknut and turn the adjusting nut until the deflection is as specified.
5. With the cable properly adjusted, check the throttle valve to be sure it opens fully when you push the accelerator pedal to the floor. Also check the throttle valve to be sure it returns to the idle position whenever you release the accelerator.

Installation

1. Fully open the throttle valve, then install the throttle cable in the throttle linkage and install the cable housing in the cable bracket.
2. Warm up the engine to normal operating temperature (the cooling fan comes on).

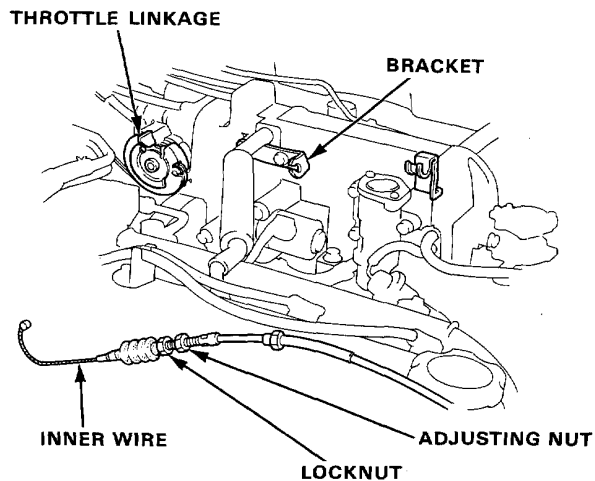

3. Hold the cable sheath, removing all slack from the cable.
4. Turn the adjusting nut until it is 3 mm away from the cable bracket.
5. Tighten the locknut. The cable deflection should now be 10–12 mm. If not, see inspection/Adjustment.

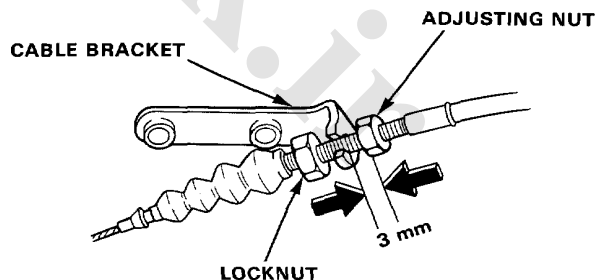




Throttle Body

Inspection


CAUTION: Do not adjust the throttle stop screw since it can not be reset except at the factory.

1. Start the engine and allow to reach normal operating temperature (cooling fan comes on).
2. Disconnect the vacuum hose (to the canister) from the top of the throttle body ; connect a vacuum gauge to the throttle body.

VACUUM PUMP/GAUGE

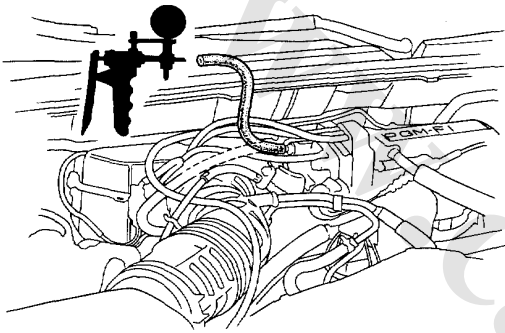

THROTTLE LEVER

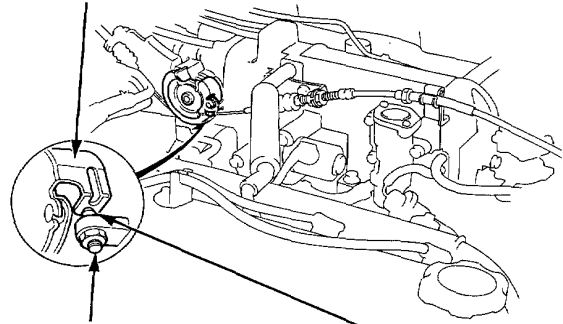

THROTTLE STOP SCREW.
(Non-adjustable)

There should be no clearance.


Replace the throttle body if there is excessive play in the throttle valve shaft or if the shaft is binding or sticking.

3. Allow the engine to idel and check that the gauge indicates no vacuum.
 - If there is vcuum, check the throttle cable (page 6-222).
4. Check that vacuum is indicated on the gauge when the throttle is opened slightly from idle.
 - If the gauge indicates no vacuum, check the throttle body port is clogged, clean it with carburetor cleaner.
5. Stop the engine and check that the throtole cable operates smoothly without binding or sticking.
 - If there are any abnormalities in the above steps, check for:
 - Excessive wear or play in the throttle valve shaft.
 - Sticky or binding throttle lever at full close position.
 - Clearance between throttle stop screw and throttle lever at full close position.

Air Intake System


Throttle Body

Disassembly

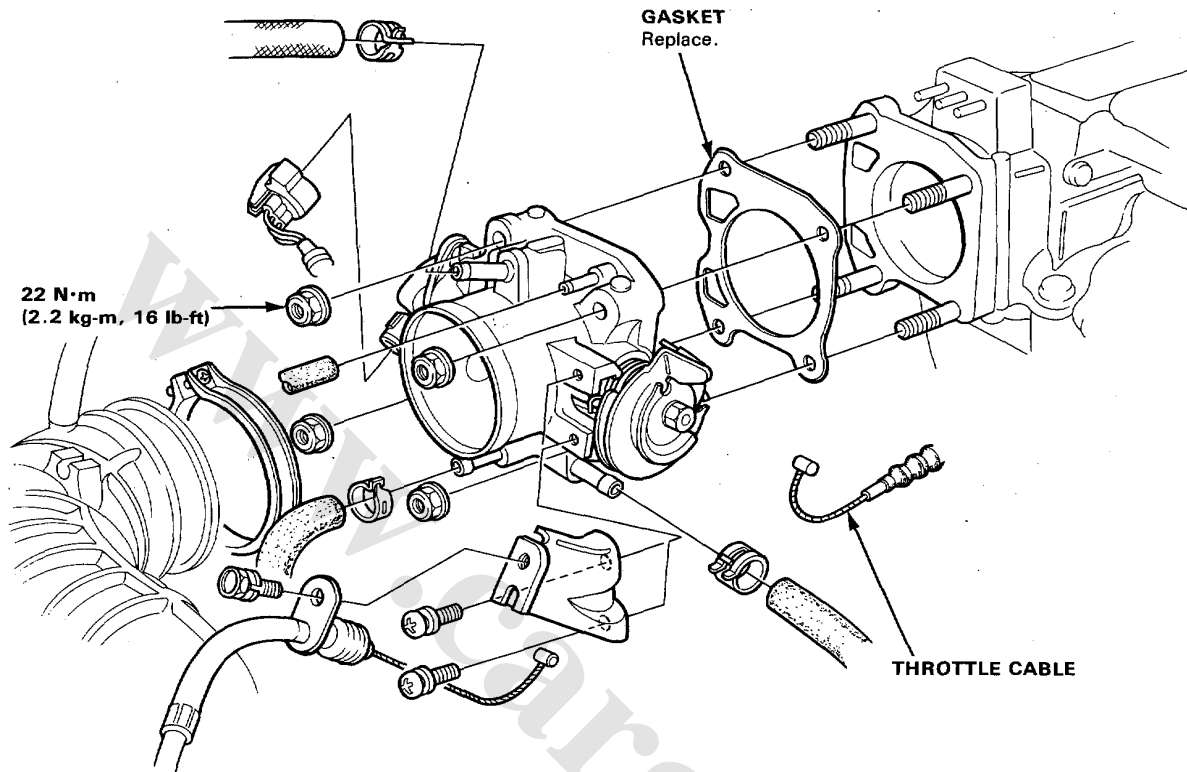

CAUTION:

- The throttle stop screw is non-adjustable.
- After reassembly, adjust the throttle cable (page 6-222).

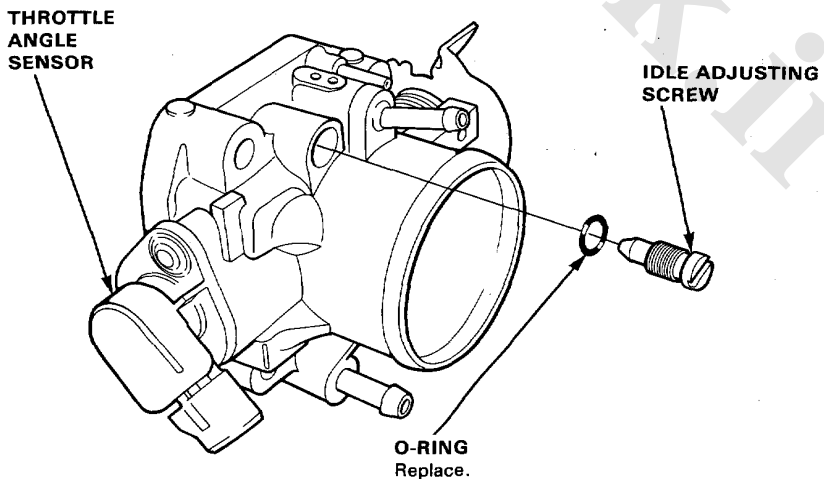




Bypass Control System (2.2 l Except KQ, KY)

Troubleshooting Flowchart

Inspection of Bypass Control System

Start engine and allow to idle.

Remove #13 vacuum hose from the bypass control diaphragm and connect vacuum gauge to the hose.

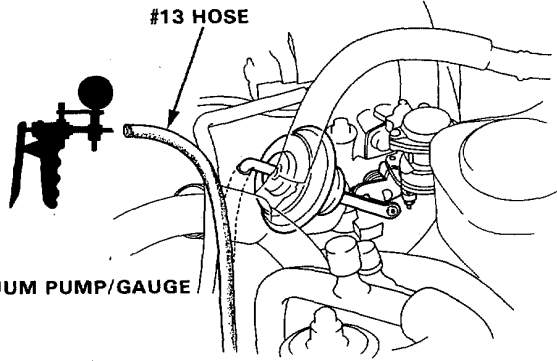

Is there vacuum ?


NO
Remove #12 vacuum hose from the vacuum tank, then check for vacuum at the tank.

Is there vacuum ?

NO
Repair the blockage or vacuum leak between the vacuum tank and the intake manifold.

YES
Disconnect the 2P connector from the Bypass Control Solenoid Valve.

Measure voltage between BLK/YEL (+) terminal and PNK/BLU (-) terminal.

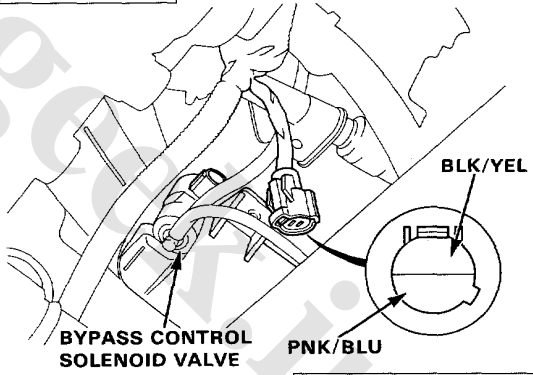

Is there battery voltage ?

YES
Replace the bypass control solenoid valve.

NO
Measure voltage between BLK/YEL (+) terminal and body ground.

(To page 6-226)


(To page 6-226)

(cont'd)

Emission Control System

Exhaust Gas Recirculation System (cont'd)

(From page 6-235)

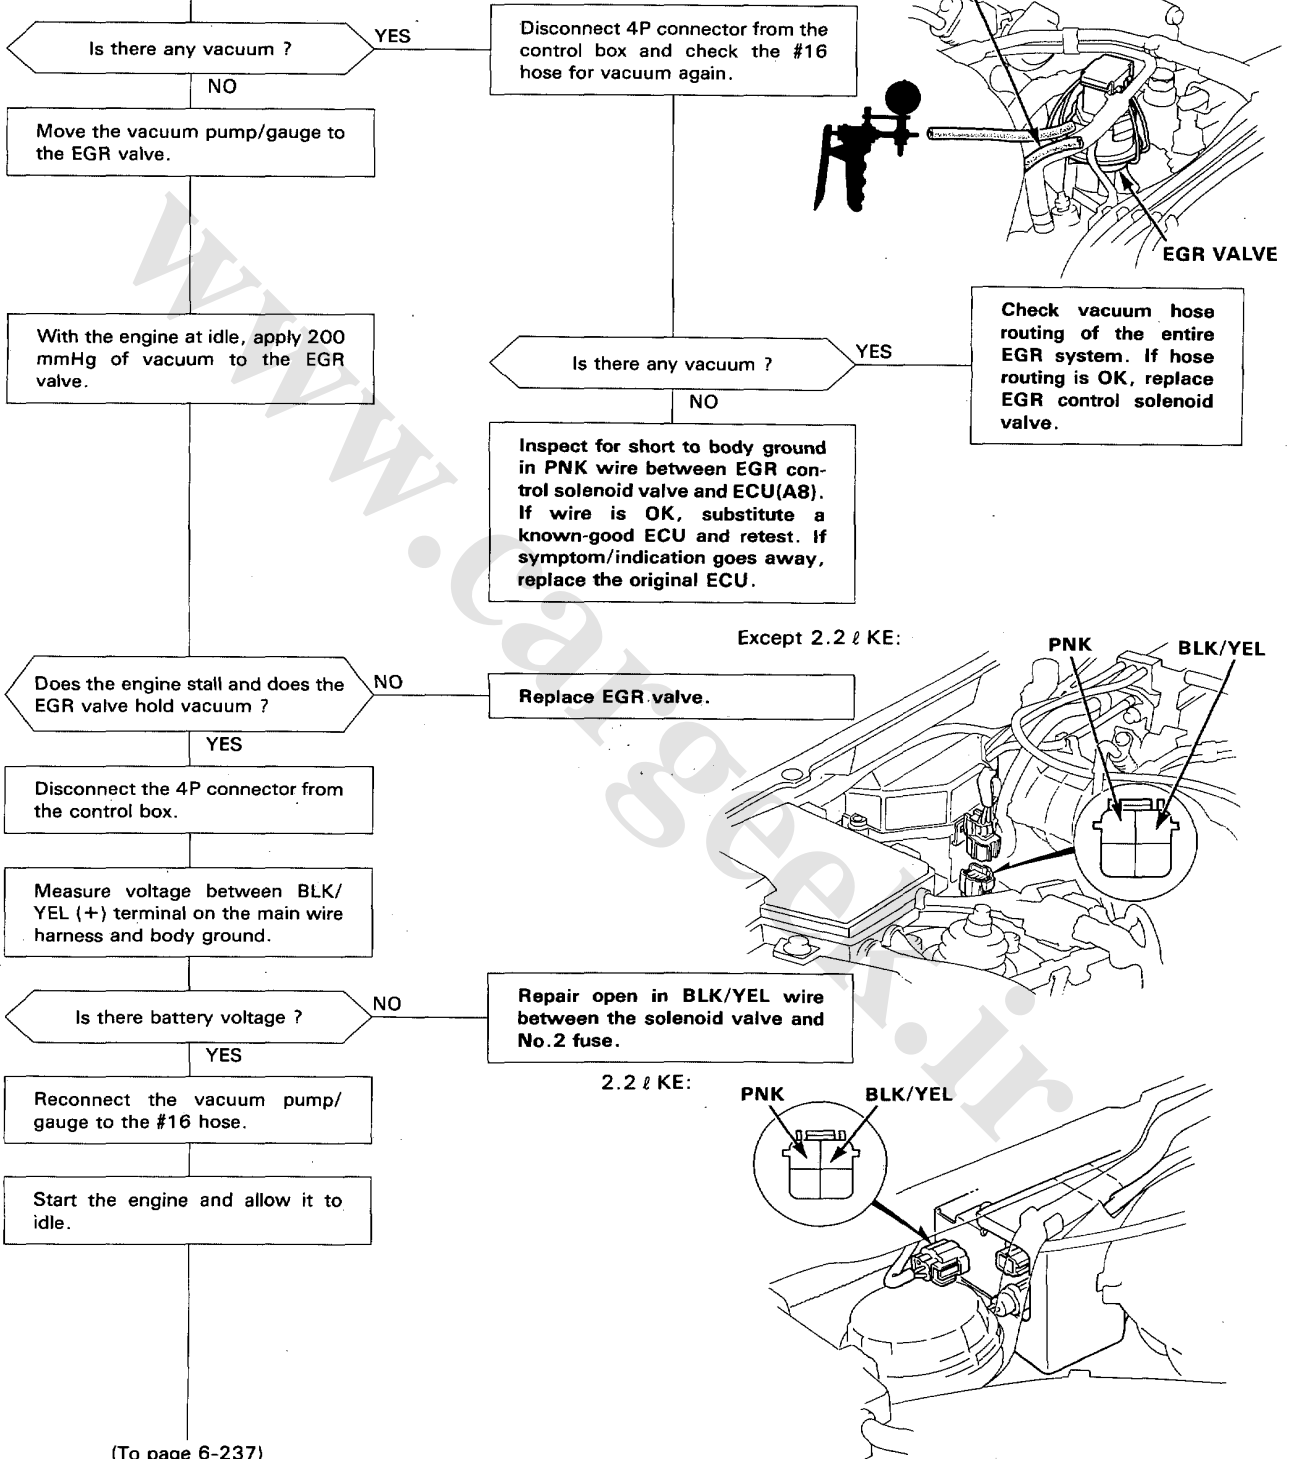


(To page 6-237)




(From page 6-236)

Connect the battery positive terminal to the B terminal of the 4P connector. While watching the vacuum gauge, connect the battery negative terminal to the D terminal.

Except 2.2 l KE:

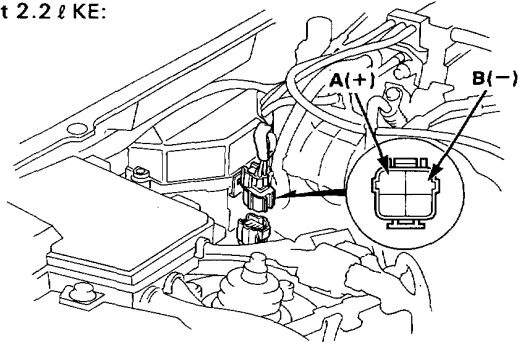

2.2 l KE:

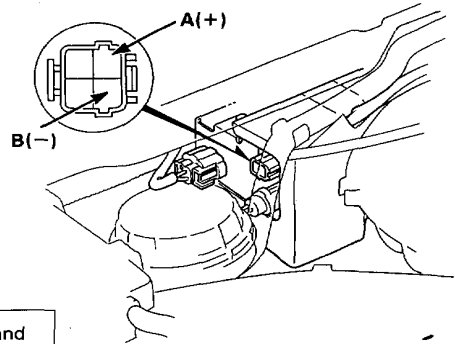

Is there approx. 200 mmHg within 1 second?

NO

Turn the ignition switch OFF and inspect the #16 and #24 hoses for leaks, restrictions, or mis-routing.

Turn the ignition switch OFF and reconnect the 4P connector.

YES

Are the hose OK?

NO

Connect as necessary.

YES

Disconnect the lower hose on EGR control solenoid valve and connect a vacuum gauge to the hose.

Start the engine and allow it to idle.


Is there 150-250mmHg of vacuum?

NO

Replace CVC valve.

YES

Replace the EGR control solenoid valve.

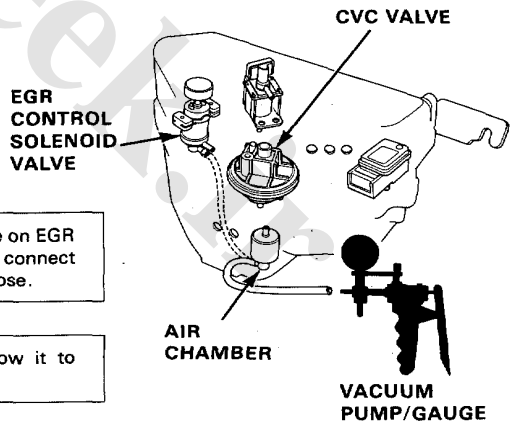

(To page 6-238)

(cont'd)

Emission Control System

Exhaust Gas Recirculation System (cont'd)

(From page 6-237)

Connect the test harness between the EGR valve lift sensor and engine wire harness.

Turn the ignition switch ON.

Measure voltage between RED (+) terminal and GRN (-) terminal.

Is there approx. 5 V ?

NO

—Repair open in YEL/WHT wire between EGR valve and ECU (D20).
—Repair open in GRN/WHT wire between EGR valve and ECU (D22).

YES

Measure voltage between WHT (+) terminal and GRN (-) terminal.

Is there approx. 1.2V ?

NO

—Replace EGR valve.
—Repair short in WHT/BLK wire between ECU (D12) and EGR valve lift sensor.
—Substitute a known-good ECU and recheck. If prescribed voltage is now available, replace the original ECU.

YES

While watching the voltmeter, slowly apply a continuous 200 mmHg of vacuum to the EGR valve. Repeat several times, completely releasing vacuum between.

Is the maximum voltage approx. 4 V ?

NO

Replace EGR valve.

YES

Does the voltage consistently increase/decrease as the vacuum increases/decreases ?

NO


Replace EGR valve.

YES

Reconnect the #16 hose to the EGR valve.

(To page 6-239)

TEST HARNESS
07LAJ—
PT30200

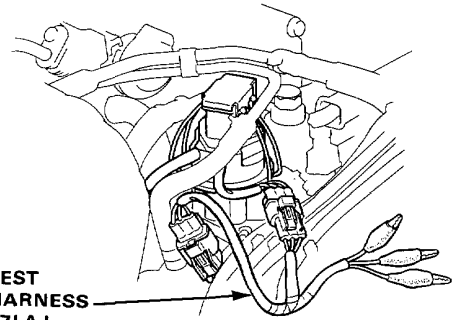




(From page 6-238)

Turn the ignition switch OFF.

Connect the ECU test harness between the ECU and connector (page 6-150).

Start the engine and allow it to idle.

Measure voltage between D12 (+) terminal and D22 (-) terminal.



Is there approx. 1.2 V ?

NO → Repair open in WHT/BLK wire between ECU (D12) and the sensor.

YES →

Connect A11 terminal to A26 terminal with a jumper wire.

Did the engine stall ?


NO → Repair open in PNK wire between ECU (A11) and EGR control solenoid valve.

YES →

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

Air Intake System

Intake Control System (cont'd)

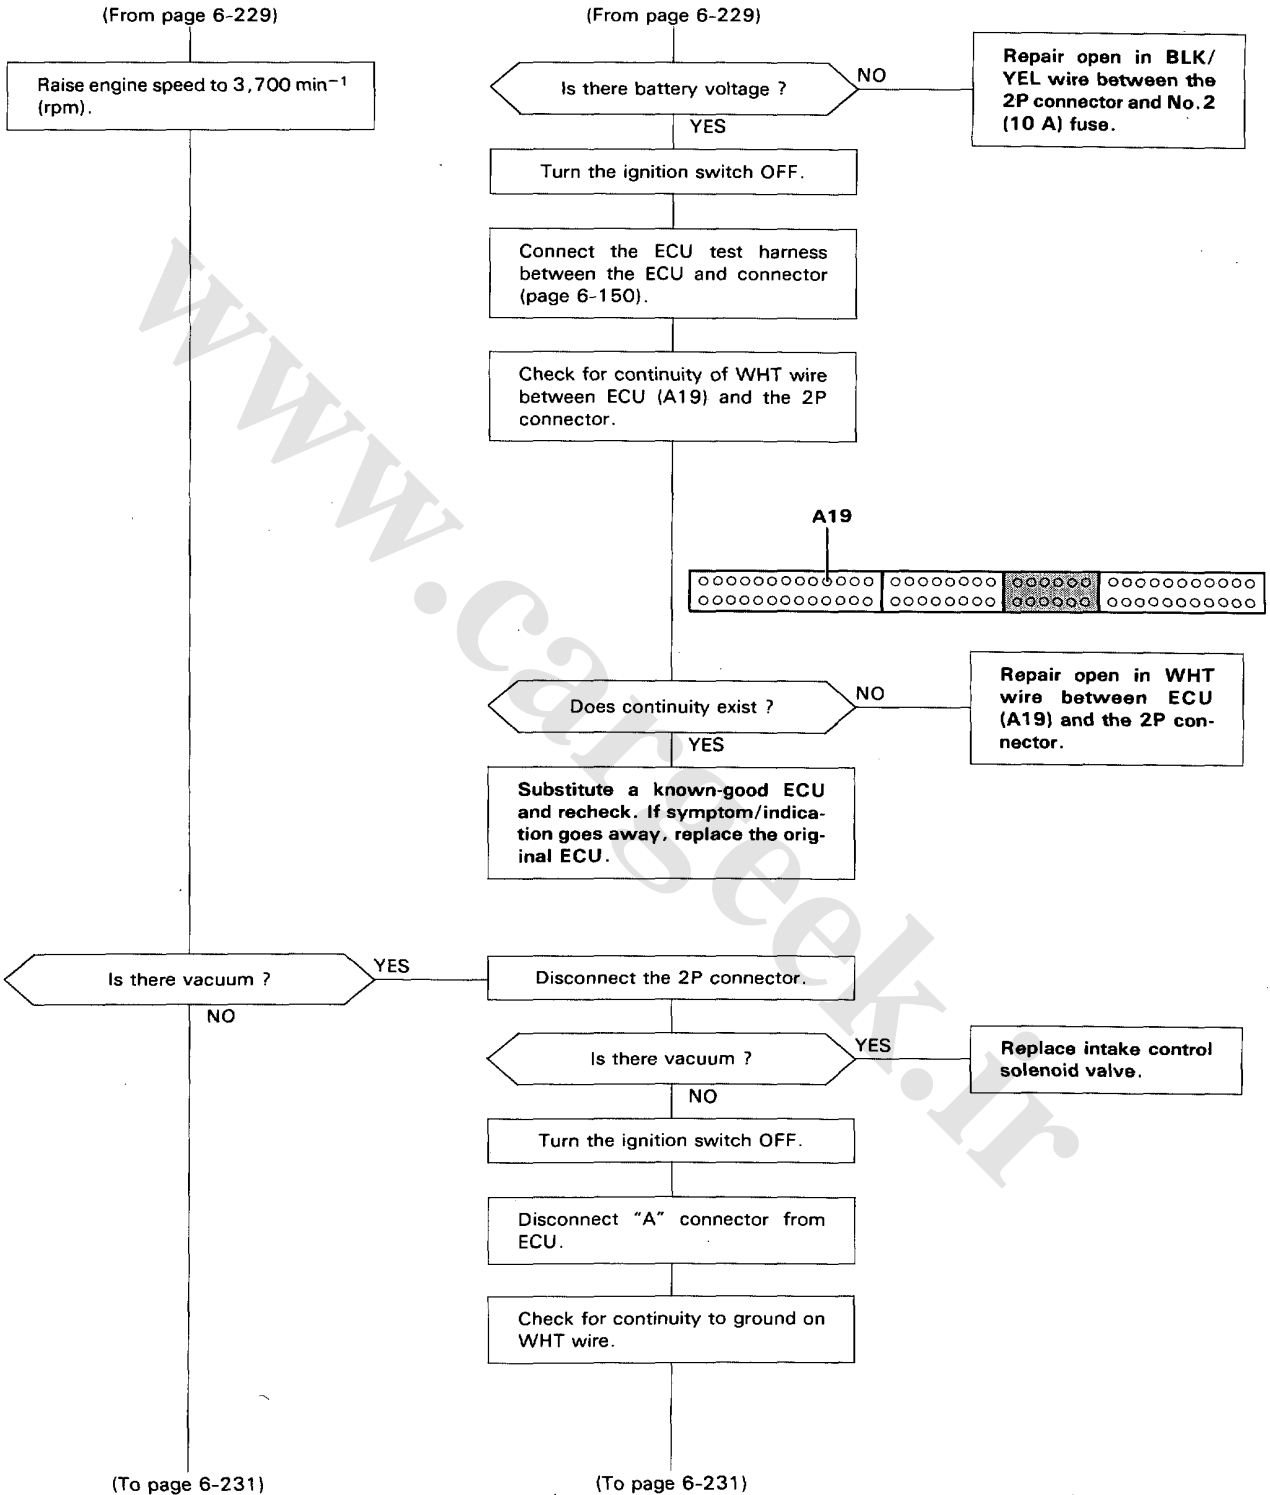



(From page 6-230)

(From page 6-230)

Is there continuity to ground ?


YES

Repair short to ground in WHT wire between ECU (A19) and the 6P connector.

NO

Substitute a known good ECU and recheck. If symptom goes away, replace the original ECU.

Connect a vacuum pump to the #8 vacuum hose.

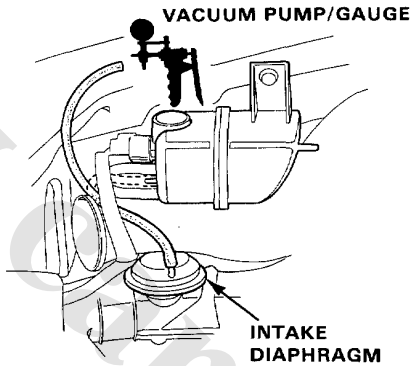

Apply vacuum.

Does it hold vacuum ?

NO

Check the vacuum line for proper connection or disconnected hose. If OK, replace the intake diaphragm.

YES

Intake control system is OK.

Emission Control System

System Troubleshooting Guide

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

With CATA:

PAGE	SUB SYSTEM	CATALYTIC CONVERTER	EGR SYSTEM (except KQ)	POSITIVE CRANKCASE VENTILATION SYSTEM	EVAPORATIVE EMISSION CONTROLS
SYMPTOM		234	235	240	241
ROUGH IDLE			①	②	
FREQUENT (AFTER STALLING (WARMING UP)			①		
POOR PERFORMANCE	FAILS EMISSION TEST	①			②
	LOSS OF POWER	①			

KY:

PAGE	SUB SYSTEM	POSITIVE CRANKCASE VENTILATION SYSTEM	EVAPORATIVE EMISSION CONTROLS
SYMPTOM		240	241
ROUGH IDLE		①	
POOR PERFORMANCE (FAILS EMISSION TEST)			①



Tailpipe Emission

Inspection

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. Start the engine and warm up to normal operating temperature (cooling fan comes on).
2. Connect tachometer.
3. Check idle speed and adjust the idle speed, if necessary (page 6-207)
4. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO%:


With CATA: 0.1 % maximum

Without CATA: 1.0 ± 1.0 %

● If unable to obtain this reading :

On With CATA, see ECU troubleshooting guide (page 6-144).

On other models, adjust by turning the adjusting screw of the IMA sensor.

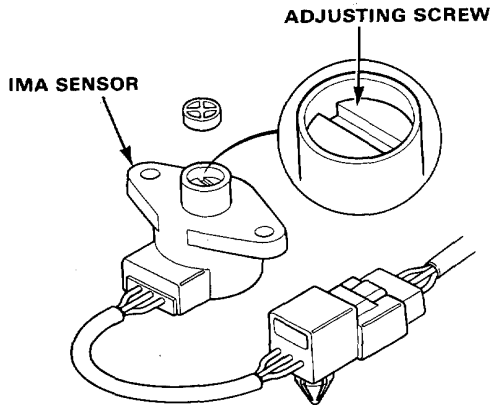


— If unable to obtain a CO reading of specified % by this procedure, check the engine tune-up condition.

Emission Control System

Catalytic Converter

Inspection


If excessive exhaust system back-pressure is suspected, remove the catalytic converter from the car and make a visual check for plugging, melting or cracking of the catalyst. Replace the catalytic converter if any of the visible area is damaged or plugged.

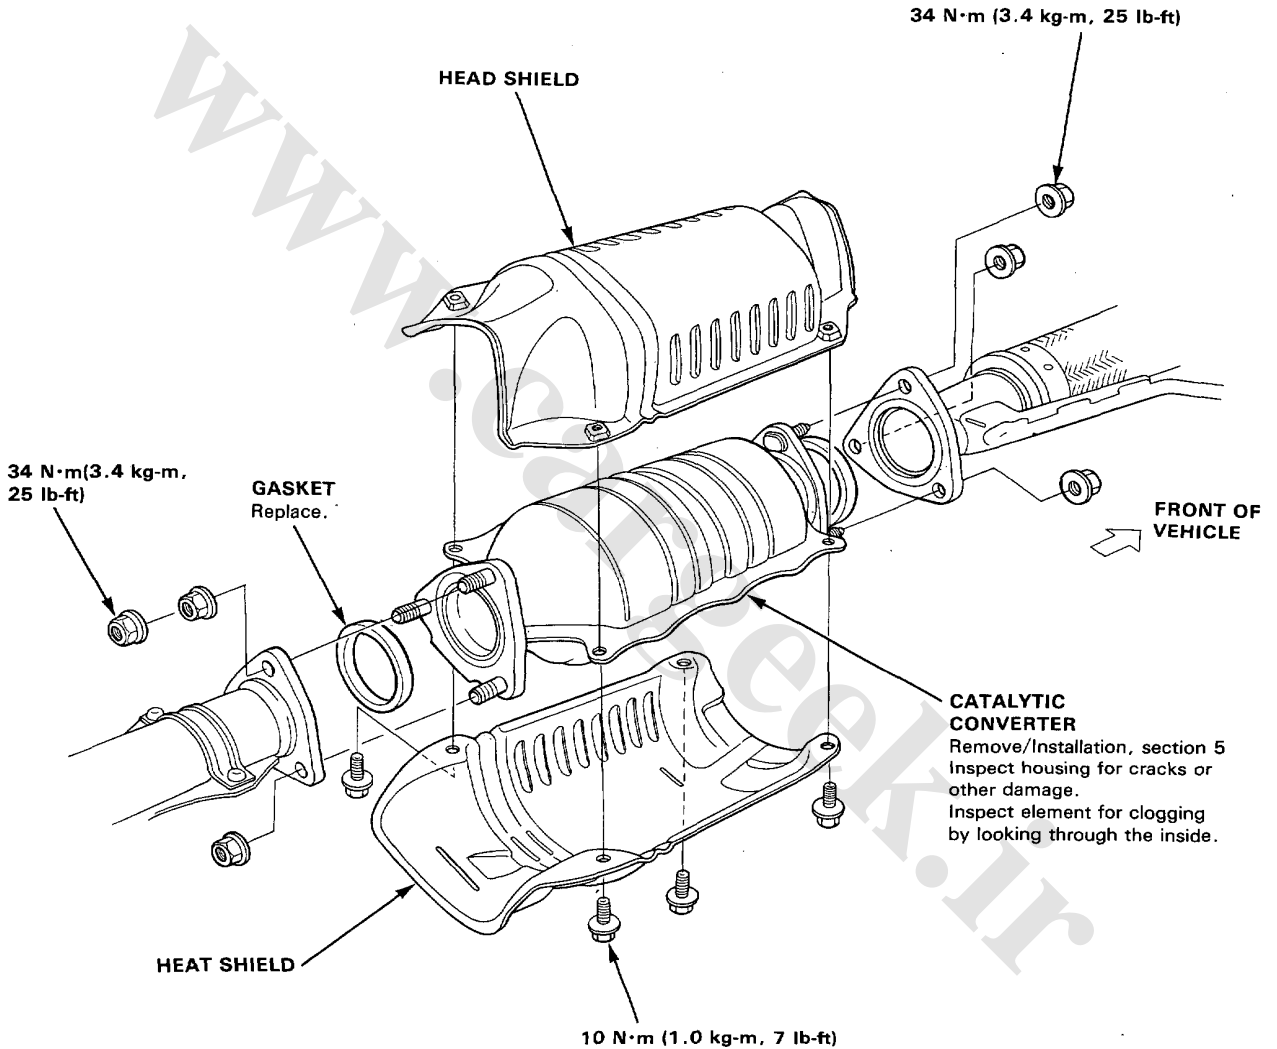




Exhaust Gas Recirculation System

Troubleshooting Flowchart



Self diagnosis indicates code 12: Most likely a problem in the Exhaust Gas Recirculation (EGR) system.



—Check Engine warning light has been reported on.
—LED indicates CODE 12.

Turn the ignition switch OFF.

Remove the BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Road test necessary: Warm up the engine to normal operating temperature (cooling fan comes on). Drive the car on the road for approx. 10 minutes. Try to keep the engine speed in the 1700—2500 range.


Is Check Engine warning light on and does LED indicated CODE 12 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires at EGR and ECU.

YES

With the engine at idle, disconnect the #16 hose from the EGR valve and connect a vacuum pump/gauge to the hose.

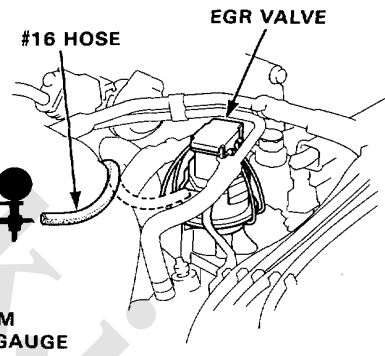

(To page 6-236)

(cont'd)




Evaporative Emission Controls

Troubleshooting Flowchart

Inspection of Evaporative Emission Controls.

Disconnect #3 vacuum hose from the purge control diaphragm valve (on the charcoal canister) and connect a vacuum gauge to the hose.

Start the engine and allow to idle. NOTE: Engine coolant temperature must be below 75°C (167° F).

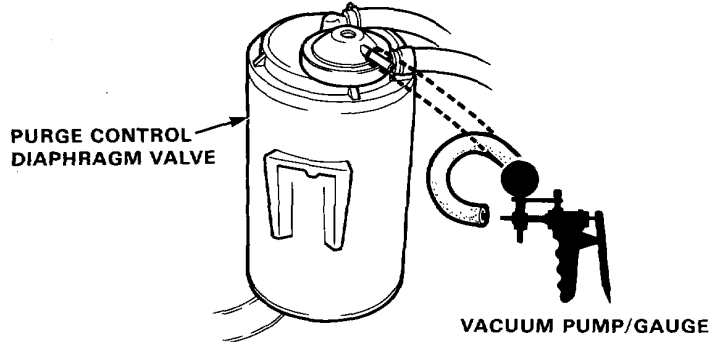


Is there vacuum ?

YES - Disconnect the 4P (KQ: 2P) connector.

NO

Except KQ:

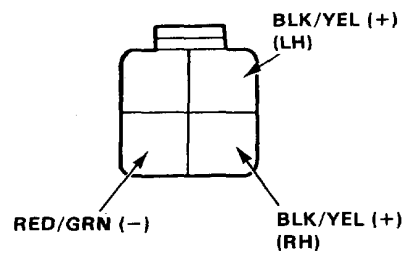

Measure voltage between BLK/YEL (+) terminal and RED/GRN (-) terminal.


Is there battery voltage ?

YES - Inspect vacuum hose routing. If OK, replace purge cut-off solenoid valve.

NO

Measure voltage between BLK/YEL (+) terminal and body ground.

KQ:

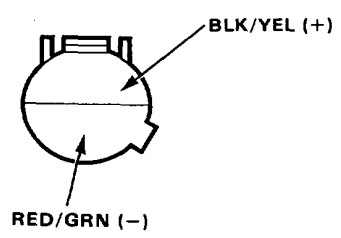

(To page 6-242)

(To page 6-242)


(cont'd)




1. When the idle speed is out of specification and LED does not blink CODE 14, check the following items:
 - Adjust the idle speed (page 6-207)
 - Air conditioning signal (page 6-198)
 - Alternator FR signal (page 6-200)
 - A/T shift position signal (page 6-202)
 - Starter switch signal (page 6-204)
 - P/S oil pressure signal (page 6-205)
 - Fast idle valve (page 6-206)
 - Air boost valve
 - Hoses and connections
 - EACV and its mounting O-rings
2. If the above items are normal, substitute a known-good EACV and readjust the idle speed (page 6-194)
 - If the idle speed still cannot be adjusted to specification (and LED does not blink CODE 14) after EACV replacement, substitute a known-good ECU and recheck. If symptom goes away, replace the original ECU.

Idle Control System

Troubleshooting Flowchart — EACV



Self-diagnosis LED indicates code 14: A problem in the Electronic Air Control Valve (EACV) circuit.



- Engine is running.
- Check Engine warning light has been reported on.
- LED indicates CODE 14.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does LED indicate CODE 14 ?

NO

Intermittent failure, system is OK at this time (test driving may be necessary).
Check for poor connections or loose wires at EACV connector.

YES

Stop engine.

Disconnect the 2P connector from the EACV.

Measure resistance between the 2 terminals on the EACV.

Is there 8—15Ω ?

NO

Replace EACV.

YES

Check for continuity to body ground on each terminal on the EACV.

Does continuity exist ?


YES

Replace EACV.

NO


Turn the ignition switch ON.

(To page 6-195)

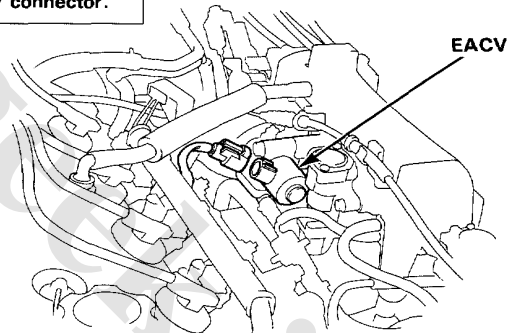



(From page 6-194)

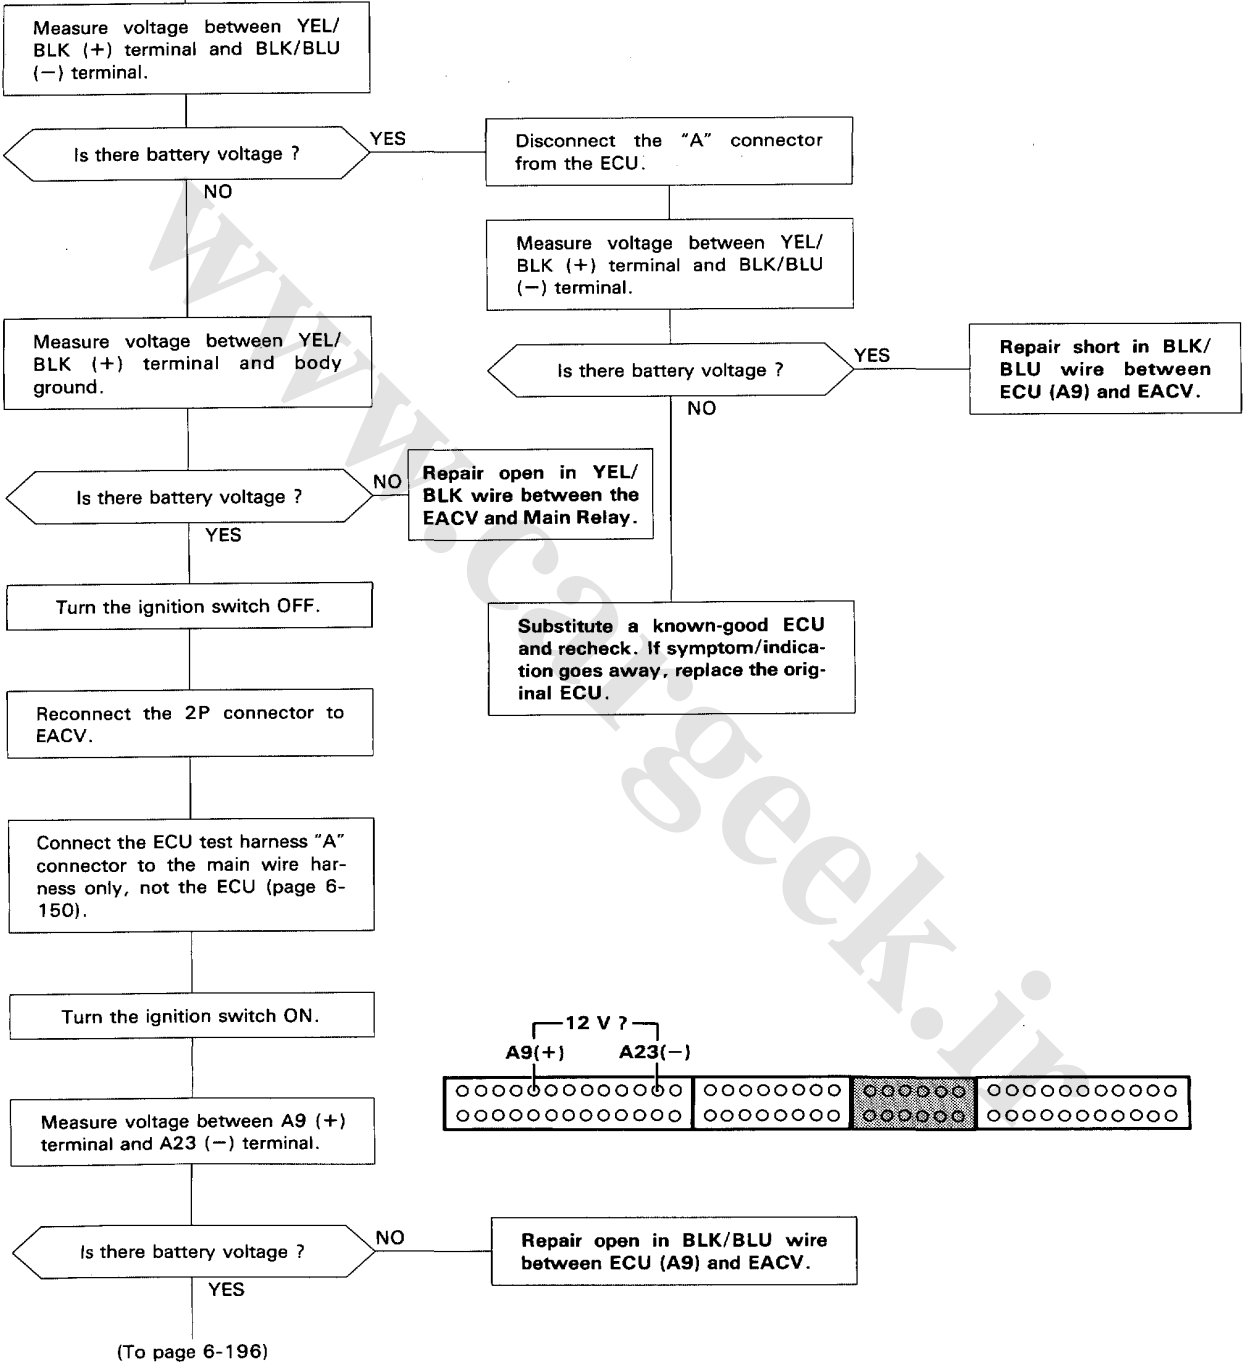


(cont'd)

Idle Control System

Troubleshooting Flowchart — EACV (cont'd)

(From page 6-195)

Connect and disconnect A9 terminal to A23 terminal.

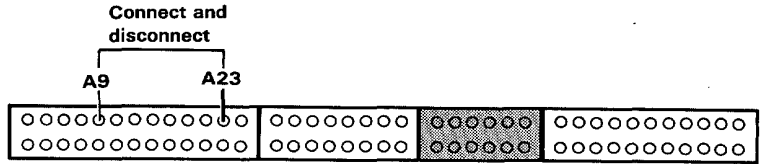

Does EACV click when the connector is connected and disconnected?

NO

Replace EACV.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.



www.cargeek.ir

Idle Control System

Troubleshooting Flowchart — Air Conditioning Signal

Inspection of Air Conditioning Signal.

Connect the ECU test harness between the ECU and connector (page 6-150). Disconnect "B" connector from the main wire harness only, not the ECU.

Turn the ignition switch ON.

Measure voltage between B5 (+) terminal and A26 (-) terminal.

Is there approx. 5 V ?

NO

Substitute a known-good ECU and recheck. If prescribed voltage is now available, replace the original ECU.

YES

Reconnect "B" connector to the main wire harness.

Momentarily connect A15 terminal to A26 terminal several times.

Is there a clicking noise from the A/C compressor clutch ?

NO


Connect the RED/BLU terminal of the 4P connector on the A/C clutch relay to body ground.

YES

Start engine.

Blower switch ON.

Is there a clicking noise from the A/C compressor clutch ?


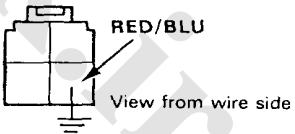


NO


See Air conditioner inspection (section 15).

YES

Repair open in RED/BLU wire between ECU (A15) and A/C clutch relay.

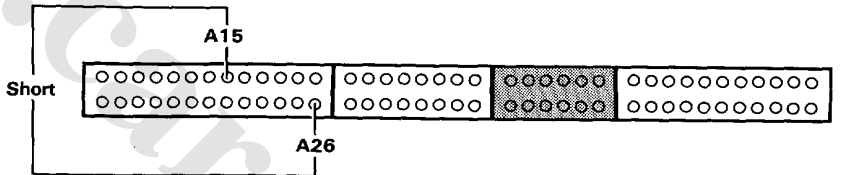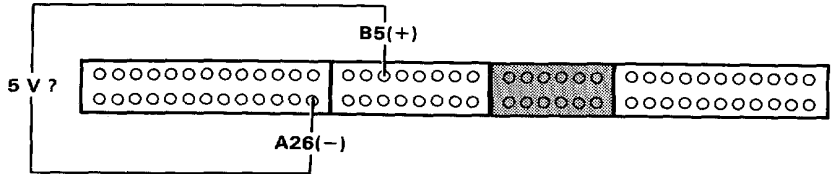

(To page 6-199)

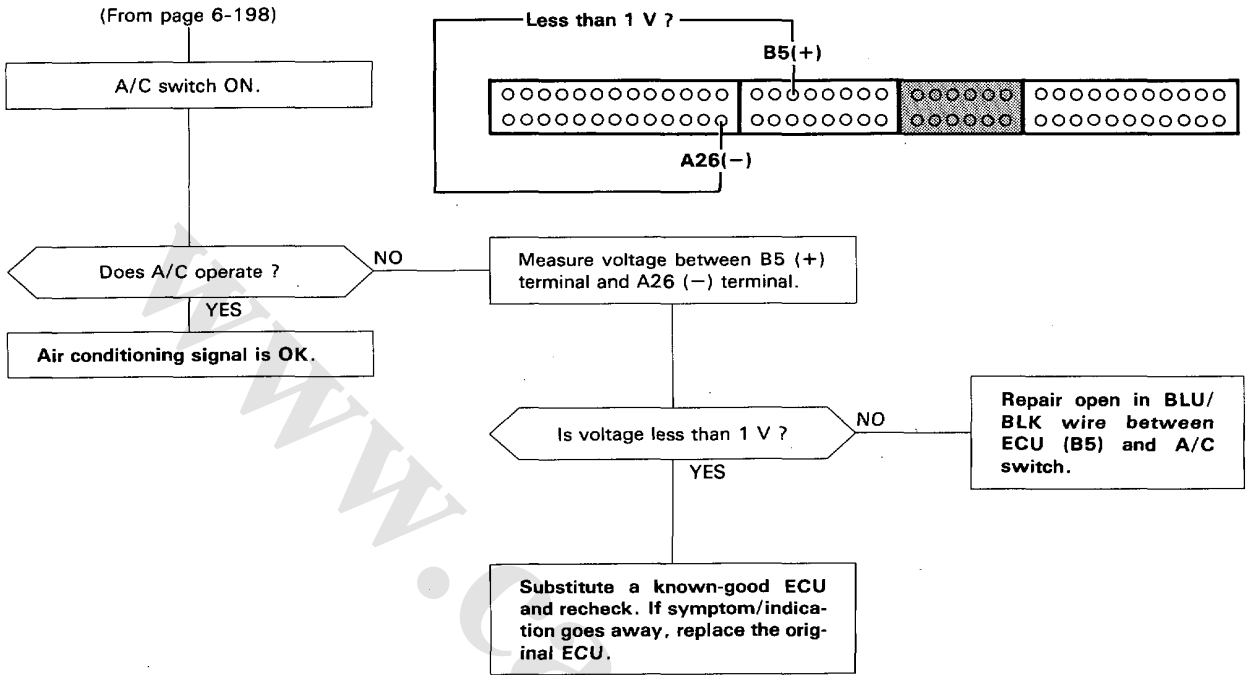

Idle Control System

Troubleshooting Flowchart — Alternator FR Signal

Inspection of Alternator FR signal.

Connect the ECU test harness between the ECU and connector (page 6-150).
Disconnect "D" connector from the main wire harness only, not the ECU.

Turn the ignition switch ON.

Measure voltage between D9 (+) terminal and A26 (-) terminal.

In there approx. 5V ?

YES

Turn the ignition switch OFF.

Reconnect "D" connector to the main wire harness.

Warm up engine to normal operating temperature (cooling fan comes on).


Measure voltage between D9 (+) terminal and A26 (-) terminal.

Does the voltage decrease when headlights and rear defogger are turned on ?


YES

Alternator FR signal is OK.

(To page 6-201)

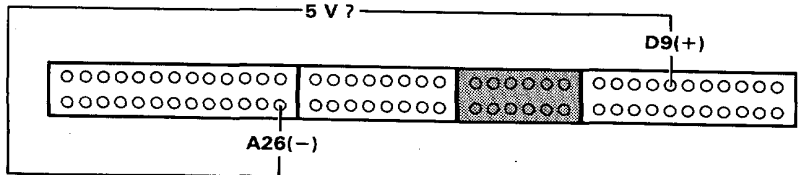

Substitute a known-good ECU and recheck. If prescribed voltage is now available, replace the original ECU.

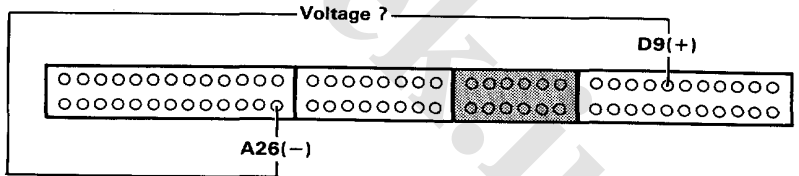

Stop engine.



(From page 6-200)

Disconnect "D" connector from ECU only, not the main wire harness.

Disconnect the negative battery cable from the battery.

Check for continuity between D9 terminal and body ground.

Does continuity exist ?

YES

Disconnect GRN connector from the alternator.

NO

Disconnect GRN connector from the alternator.

Connect WHT/RED wire to body ground.

Check for continuity between D9 terminal and body ground.

Does continuity exist ?

YES

Repair short in WHT/RED wire between ECU (D9) and alternator.

NO

Repair open in WHT/RED wire between ECU (D9) and alternator.



NO

Check for continuity between D9 terminal and body ground.

Does continuity exist ?

YES

See Alternator Inspection (section 16).

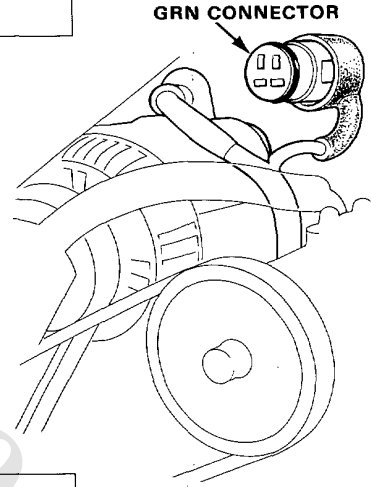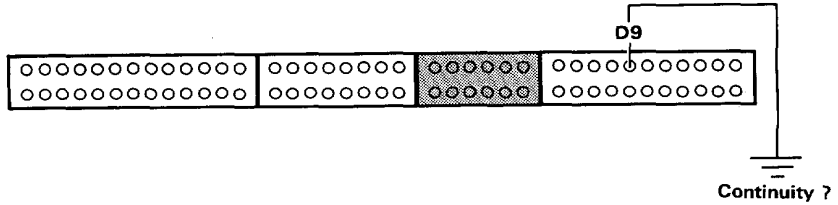

Idle Control System

Troubleshooting Flowchart — A/T Shift Position Signal

Inspection of A/T Shift Position Signal.

Turn the ignition switch ON.

Observe the A/T shift indicator and select each position separately.

Does the indicator light properly ?


NO

See A/T shift position Indicator Inspection (section 16).

YES

Turn the ignition switch OFF.

Connect the ECU test harness between the ECU and connector (page 6-150). Disconnect "B" connector from the main wire harness only, not the ECU.

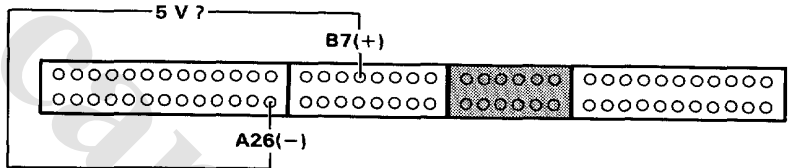

Turn the ignition switch ON.

Measure voltage individually between B7 (+) terminal and A26 (-) terminal.

Is there approx. 5 V ?

NO

Substitute a known-good ECU and recheck. If prescribed voltage is now available, replace the original ECU.

YES

Turn the ignition switch OFF.


Reconnect "B" connector to the main wire harness.

Turn the ignition switch On.

(To page 6-203)



(From page 6-202)

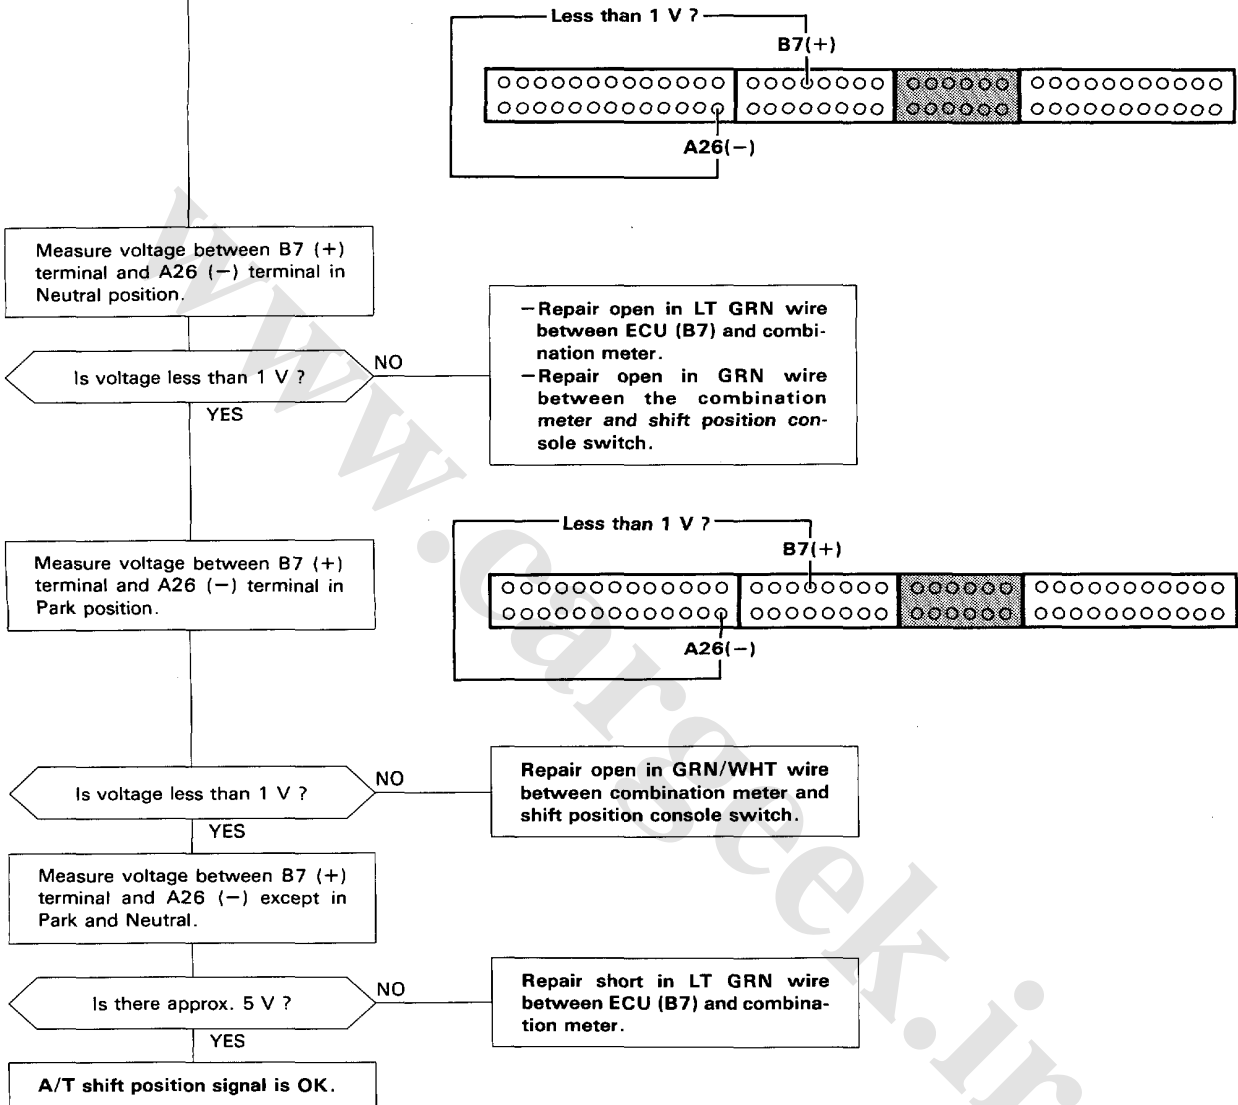


Idle Control System

Troubleshooting Flowchart — Starter Switch Signal


Inspection of Starter Switch Signal.

Connect the ECU test harness between the ECU and connector (page 6-150).

Measure voltage between B9 (+) terminal and A26 (-) terminal with ignition switch in the start position.

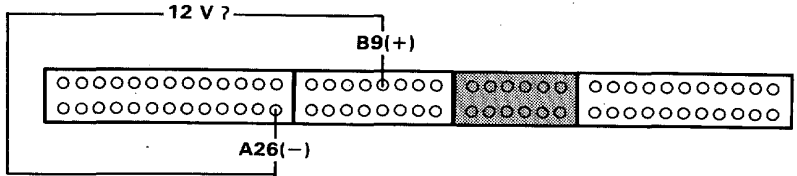


NOTE: Clutch pedal must be depressed on M/T models.

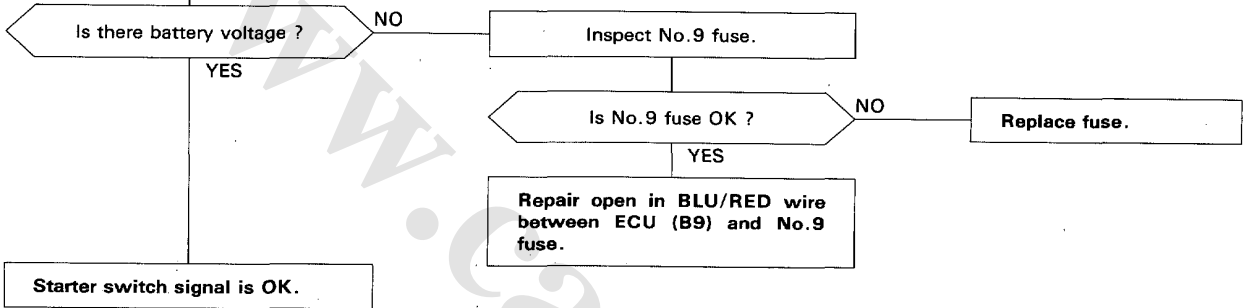



Troubleshooting Flowchart — P/S Oil Pressure Signal

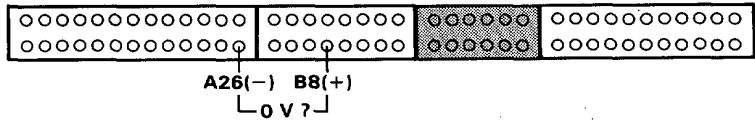

Inspection of P/S Oil Pressure Signal

Connect the ECU test harness between the ECU and connector (page 6-150).

Turn the ignition switch ON.

Measure voltage between B8 (+) terminal and A26 (-) terminal.

Is there voltage ?

NO

Start engine.

Turn steering wheel slowly.

Measure voltage between B8 (+) terminal and A26 (-) terminal while steering wheel is turning.

Is there battery voltage ?

YES

P/S oil pressure signal is OK.

Disconnect the 2P connector on the P/S oil pressure switch.

Connect RED terminal to BLK terminal.

Is there voltage ?

NO

Replace P/S oil pressure switch.

YES

Repair open in RED wire between ECU (B8) and P/S oil pressure switch or BLK wire between P/S oil pressure switch and G301.

Turn the ignition switch OFF.

Disconnect "B" connector from main wire harness only, not the ECU.

Turn the ignition switch ON.

Is there battery voltage ?

NO

Substitute a known-good ECU and recheck. If prescribed voltage is now available, replace the original ECU.

YES

Reconnect "B" connector to main wire harness and disconnect 2P connector on the P/S oil pressure switch.

Is there battery voltage ?

YES

Replace P/S oil pressure switch.

NO

Repair short in RED wire between ECU (B8) and the P/S oil pressure switch.


Idle Control System

Fast Idle Valve


Inspection

NOTE: The fast idle valve is factory adjusted, it should not be disassembled.

1. Start the engine.
2. Remove the cover of the fast idle valve.
3. Put your finger on the valve seat area and make sure that there is air flow with the engine cold (coolant temperature below 30°C, 86°F) and idling.

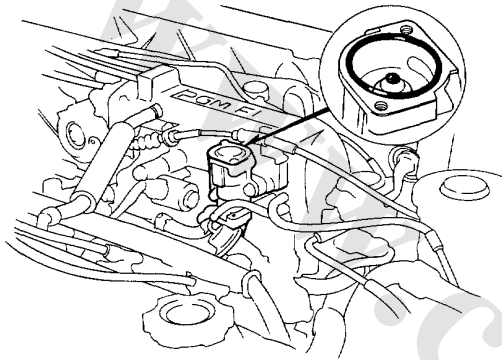

- If not, replace the fast idle valve and retest.

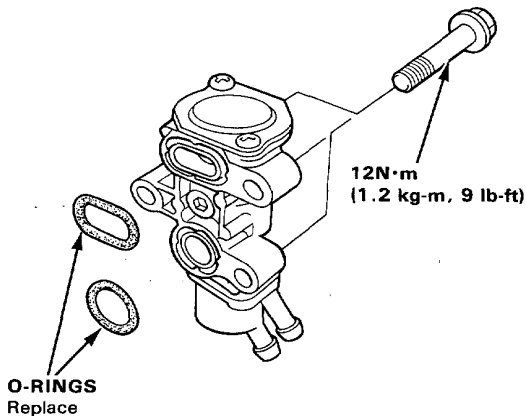


4. Warm up the engine (cooling fan comes on).
5. Check that the valve is completely closed. If not, air suction can be felt in the valve seat area.
 - If any suction is, felt the valve is leaking. Replace the fast idle valve and recheck.




Idle Speed Setting

Inspection/Adjustment

1. Start the engine and warm it up to normal operating temperature (the cooling fan comes on).
2. Connect a tachometer.

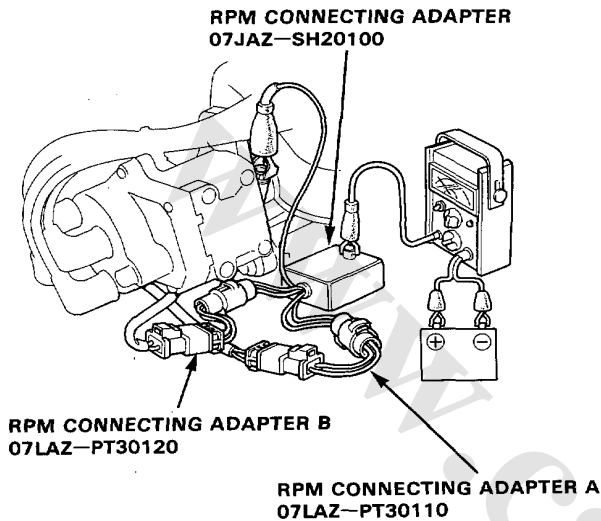

3. Disconnect the 2P connector from the EACV.

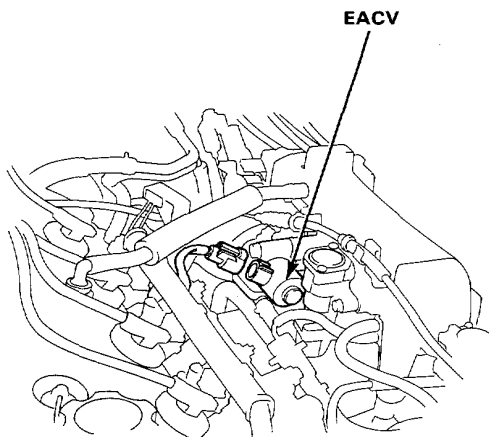

4. Check idling in no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating.

Idle speed should be:


(Except KS, KW)

Manual	600 ± 50 min ⁻¹ (rpm)
Automatic	600 ± 50 min ⁻¹ (rpm) (in N or P)

(KS, KW)

Manual	550 ± 50 min ⁻¹ (rpm)
Automatic	550 ± 50 min ⁻¹ (in N or P)

Adjust the idle speed, if necessary, by turning the idle adjusting screw.

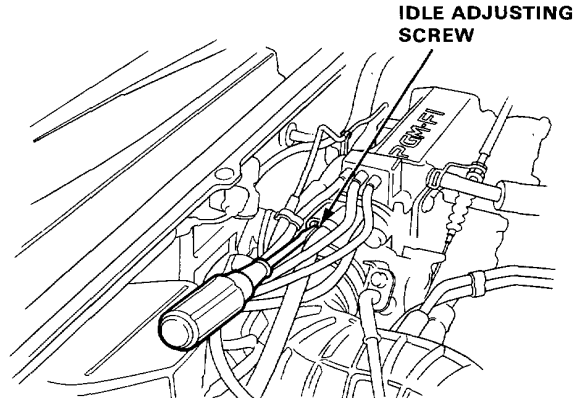

5. Turn the ignition switch OFF.
6. reconnect the 2P connector on the EACV, then remove BACK UP fuse in the underhood relay box for 10 seconds to reset ECU.
7. Restart an idle the engine with no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating for one minute, then check the idle speed.

Idle speed should be:

Manual	700 ± 50 min ⁻¹ (rpm)
Automatic	700 ± 50 min ⁻¹ (rpm)

8. Idle the engine for one minute with headlights (Hi) and rear defogger ON and check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm)

9. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm)

NOTE: If the idle speed is not within specifications, see System Troubleshooting Guide on page 6-192.

Special Tools
Illustrated Index
Pedal Free Play
Clutch Master Cylinder
Slave Cylinder
Release Bearing and Release Fork
Pressure Plate
Clutch Disc
Flywheel
Flywheel and Clutch Disc

www.cargeek.ir


Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07JAF-PM7011A	Clutch Alignment Disc	1	12-8
②	07LAF-PT00110	Clutch Alignment Shaft	1	12-8, 11
③	07924-PD20003 or 07924-PD20002	Ring Gear Holder	1	12-8, 9, 10
④	07936-3710100	Handle	1	12-8, 11




①



②

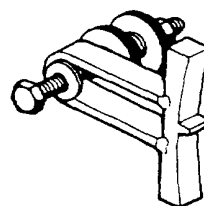

③




④




Illustrated Index

NOTE:

- Whenever the transmission is removed, release bearing sliding surface should be cleaned and greased.
- If the * mark parts were removed, the clutch hydraulic system must be bled.

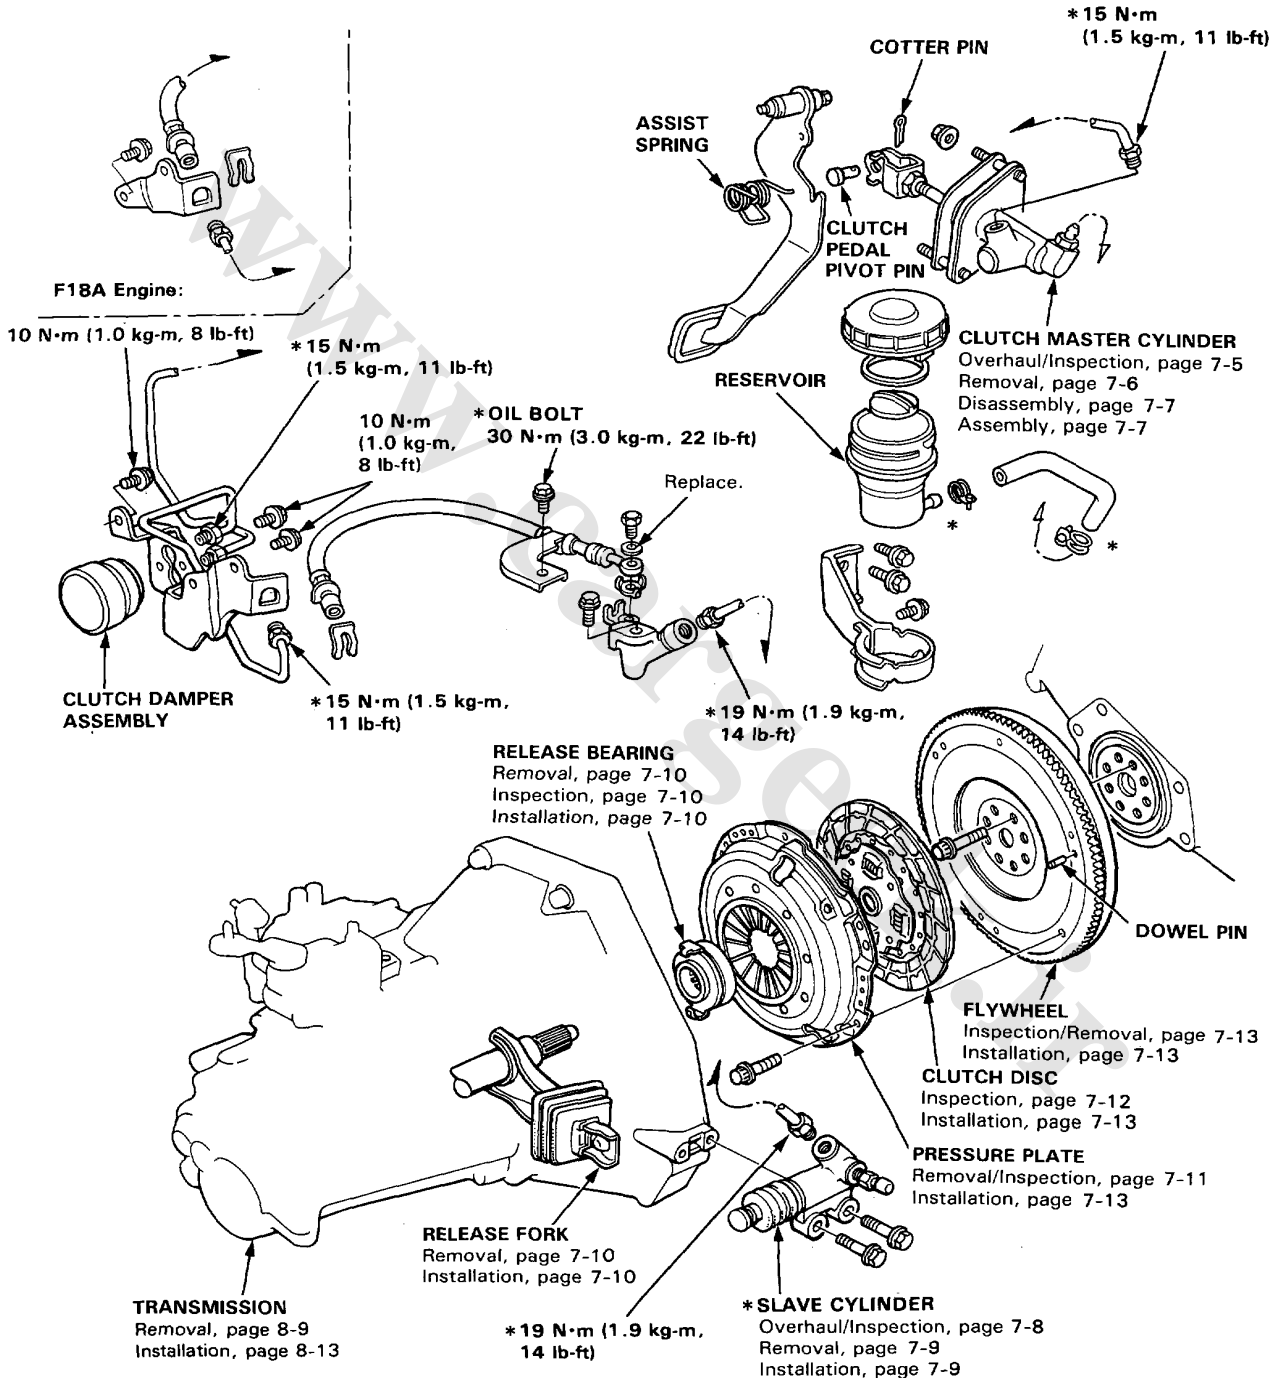

Pedal Free Play

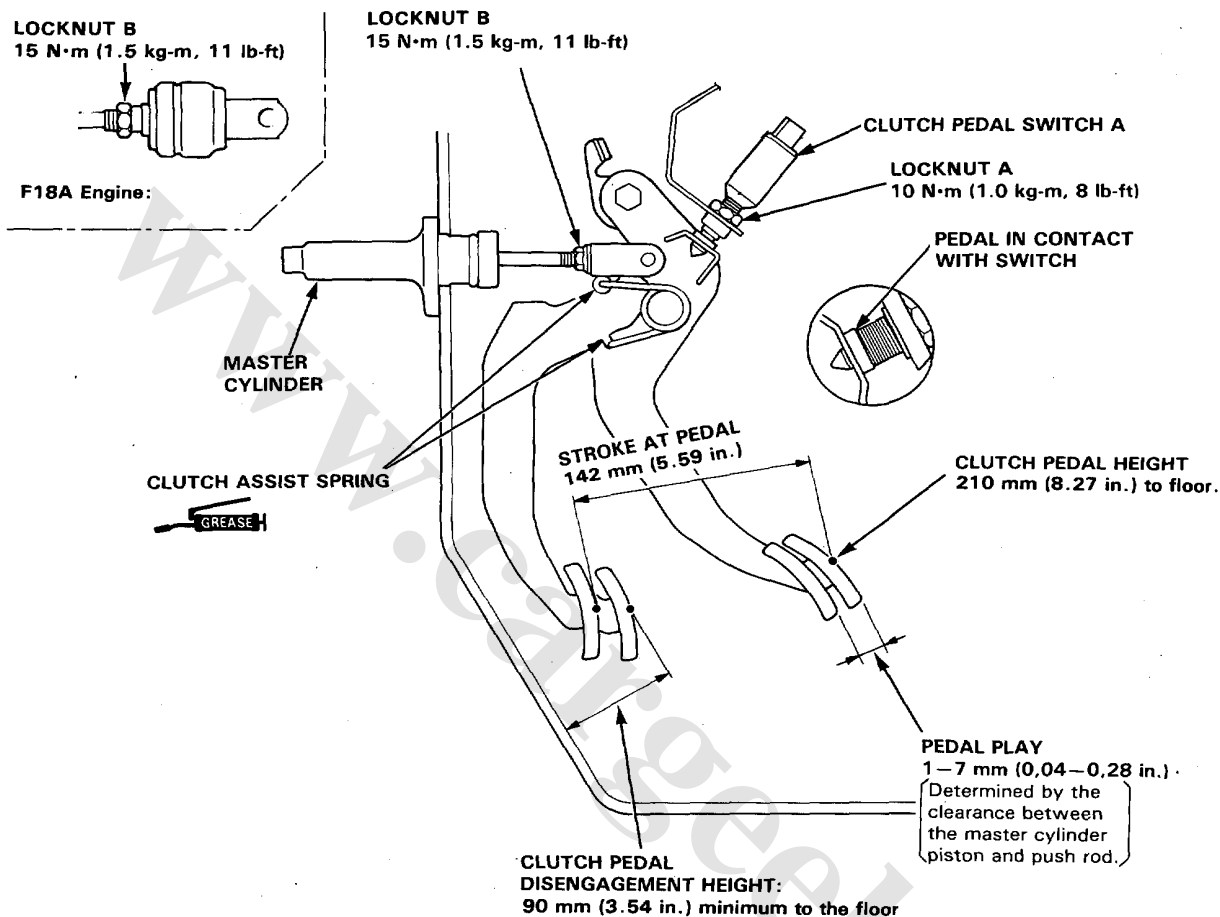

NOTE:

- The clutch is self-adjusting to compensate for wear.
- Total clutch pedal free play is 9–15 mm (0.35–0.59 in).

CAUTION: If there is no clearance between the master cylinder piston and push rod, the release bearing is held against the diaphragm spring, resulting in slipping clutch or other faulty clutch operation.




1. Loosen locknut A, and back off the pedal switch until it no longer touches the clutch pedal.
2. Loosen locknut B, and turn the push rod in or out to get the specified stroke and height at the clutch pedal.

3. Tighten locknut B.
4. Screw in the clutch pedal switch until it contacts the clutch pedal.
5. Turn the switch in further 1/4–1/2 turn.
6. Tighten the locknut A.



Clutch Master Cylinder

Overhaul/Inspection

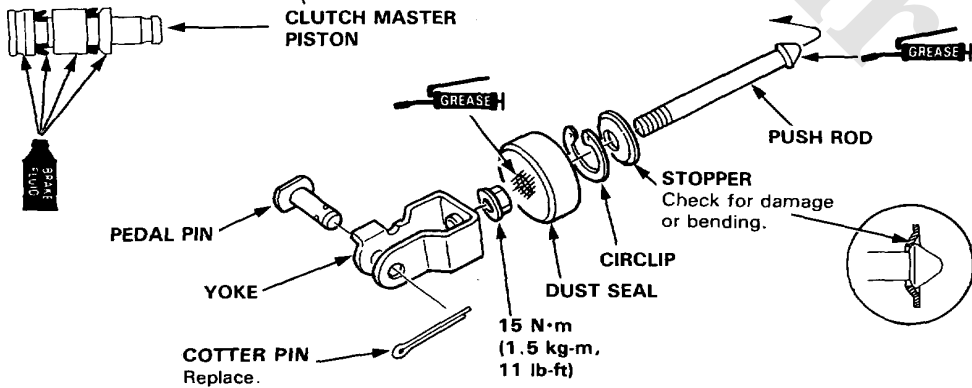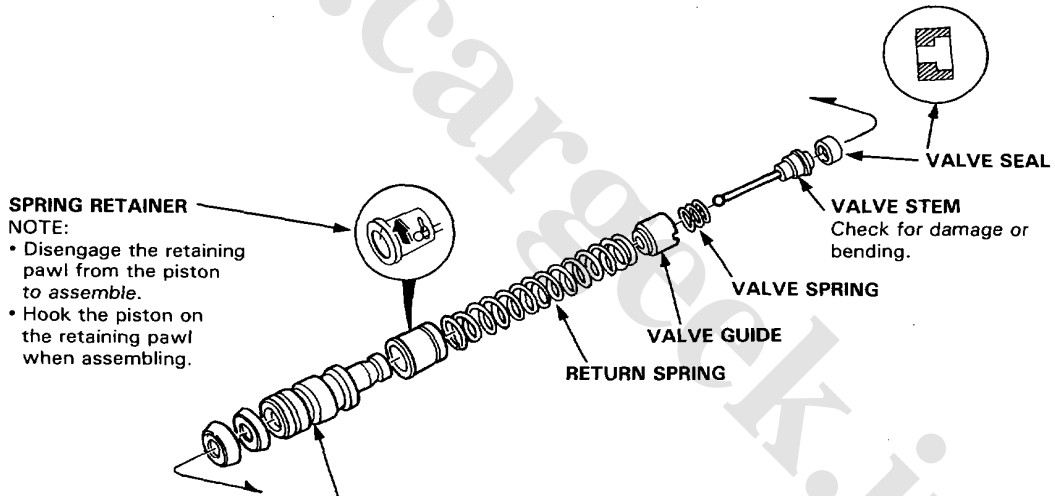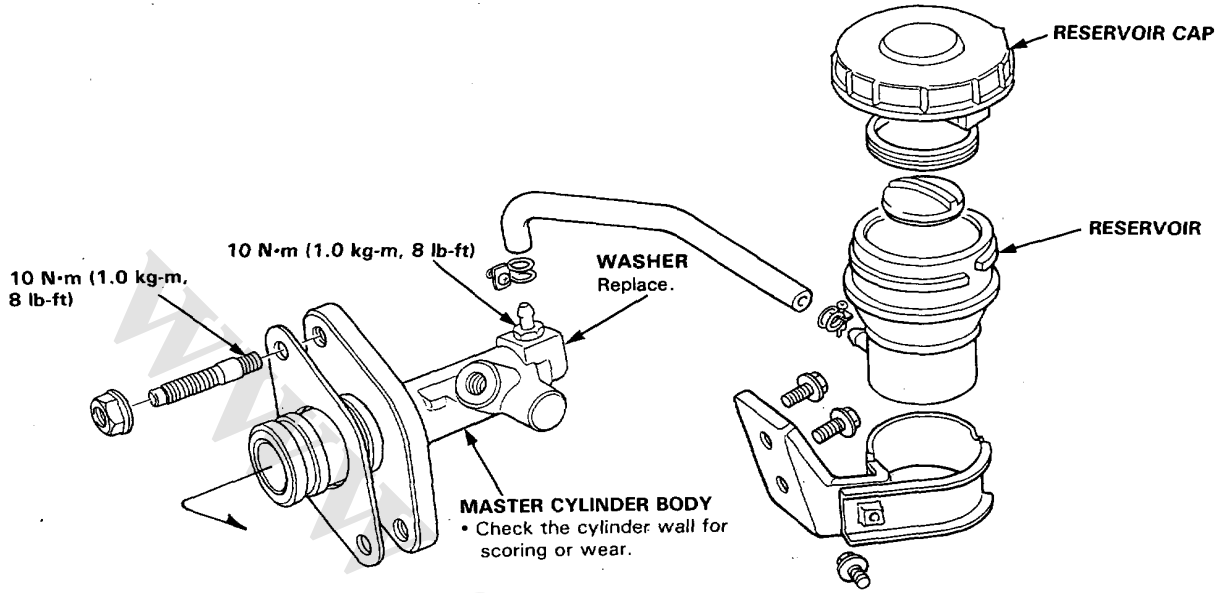


Clutch Master Cylinder

Removal

1. Pry out the cotter pin, and pull the pedal pin out of the yoke.


COTTER PIN
Replace.

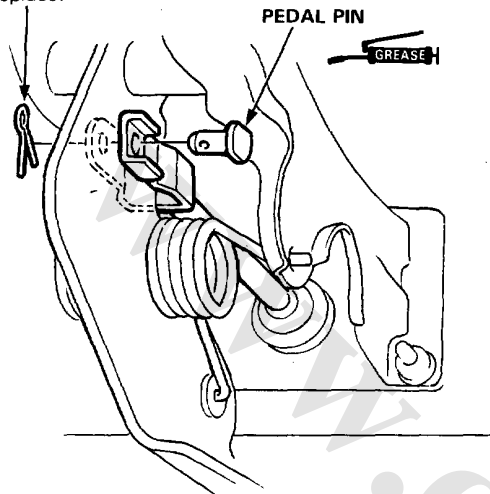

2. Remove the nuts and bolts attaching the master cylinder and remove the cylinder from the engine compartment.
3. Remove the clutch pipe and reserve hose from the master cylinder.

CAUTION:

- Avoid spilling brake fluid on paint as it may damage the finish.
- Plug the end of the clutch pipe and reserve hose with a shop towel prevent fluid from flowing out of the clutch pipe and reserve hose after disconnecting.

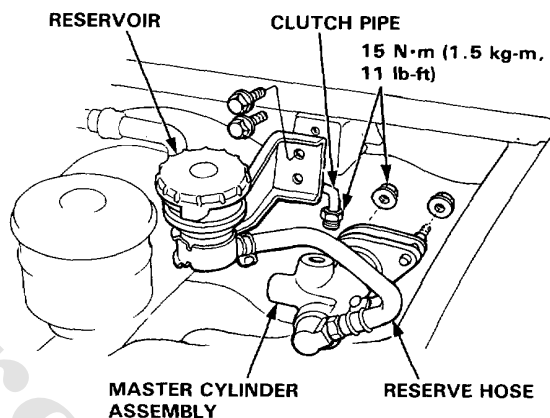




Disassembly

CAUTION: Avoid spilling brake fluid on paint as it may damage the finish.


1. Remove the dust seal from the master cylinder.

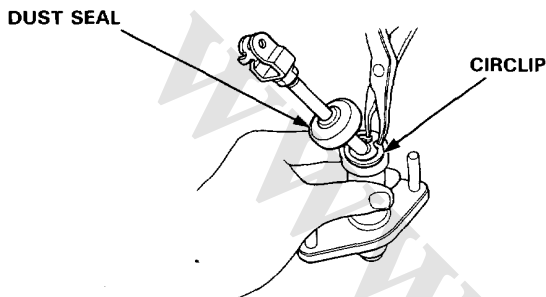

2. Pry the circlip off the master cylinder.
3. Carefully remove the piston by applying air pressure through the clutch line hole.

CAUTION:

- Hold a shop towel over the master cylinder, to stop the piston in case it comes out suddenly.
- Plug the end of the clutch hose port with a shop towel to prevent fluid from coming out.
- Clean all disassembled parts in solvent and blow through all ports and passages with compressed air.

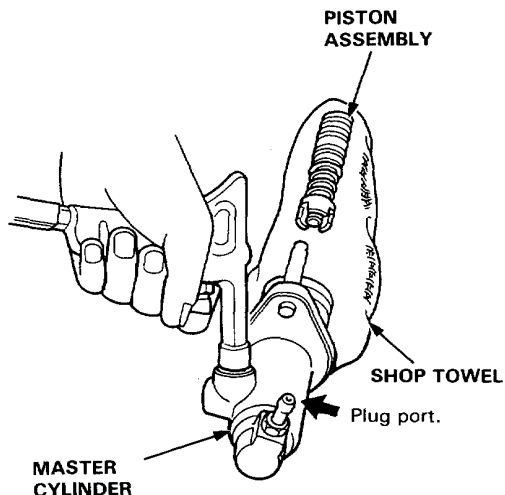


Assembly


CAUTION:

- Before assembling, make sure all parts are completely clean.
- Replace parts with new ones whenever specified to do so.
- Do not allow dust or water to enter the system.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the brake fluid which was drained out.
- Avoid spilling the brake fluid on painted surfaces, as it may damage the finish.

1. Assemble the piston noting the proper direction of the parts (page 7-5).

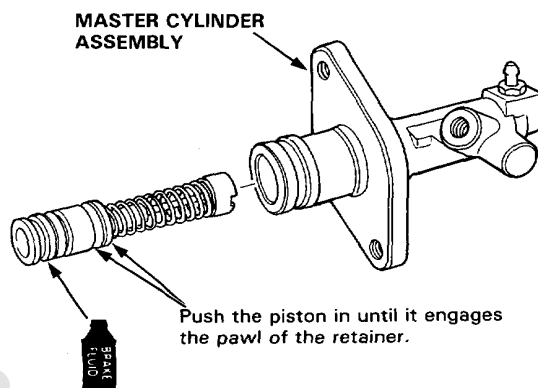


2. Slide the piston assembly into the master cylinder.
3. Install the circlip in the groove of the master cylinder.

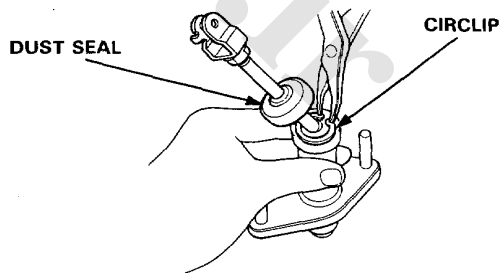

4. Install the dust seal.

Slave Cylinder

Overhaul/Inspection

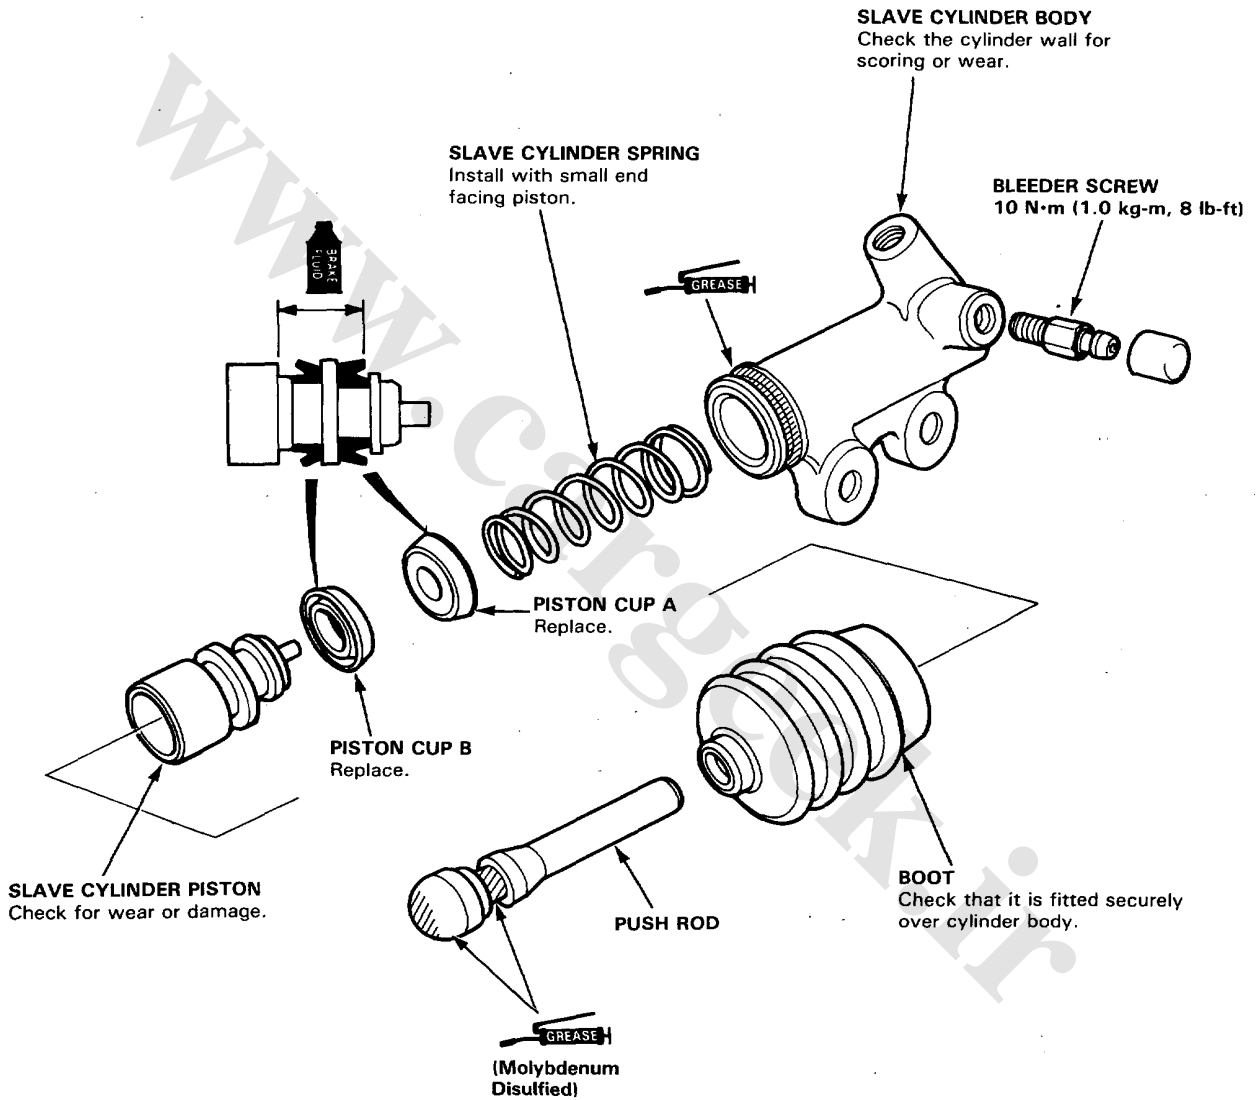




Removal

1. Disconnect the clutch pipe from the slave cylinder.

CAUTION:

 - Avoid spilling brake fluid on the painted surfaces, as it may damage the finish.
 - Plug the end of the clutch pipe with a shop towel to prevent brake fluid from coming out.
2. Remove the slave cylinder from the clutch housing.

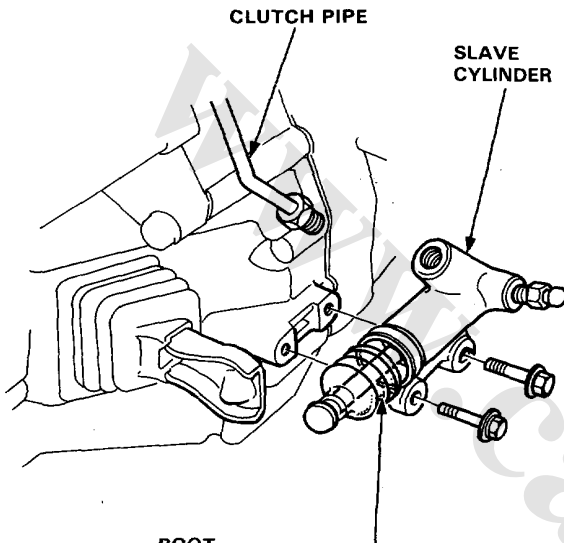


BOOT

Remove and check for signs of leaking or deterioration.

Installation

1. Install the slave cylinder assembly on the clutch housing.

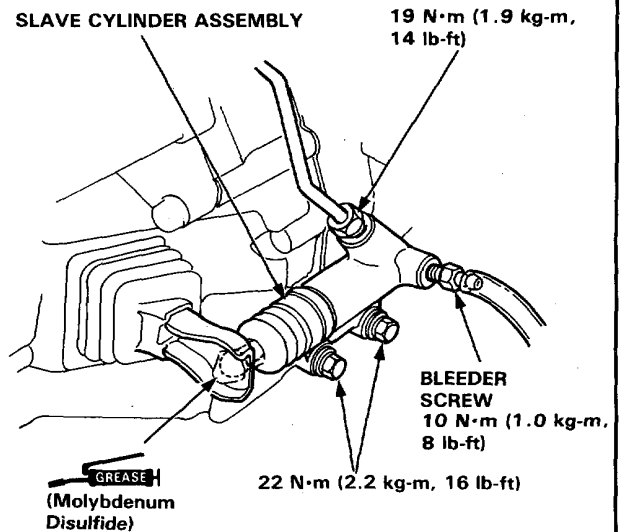


2. Bleed the clutch hydraulic system:
 - Attach a hose to the bleeder fitting and suspend the hose in a container of brake fluid.
 - Make sure there is an adequate supply of fluid at the master cylinder, then slowly pump the clutch pedal until no more bubbles appear at the bleeder hose.
 - Re-fill the master cylinder fluid when done.
 - Use only DOT 3 brake fluid.

Release Bearing and Release Fork


Disassembly/Inspection

1. Remove the boot from the clutch housing.
2. Remove the release fork from the clutch housing by squeezing the release fork set spring with pliers. Remove the release bearing.

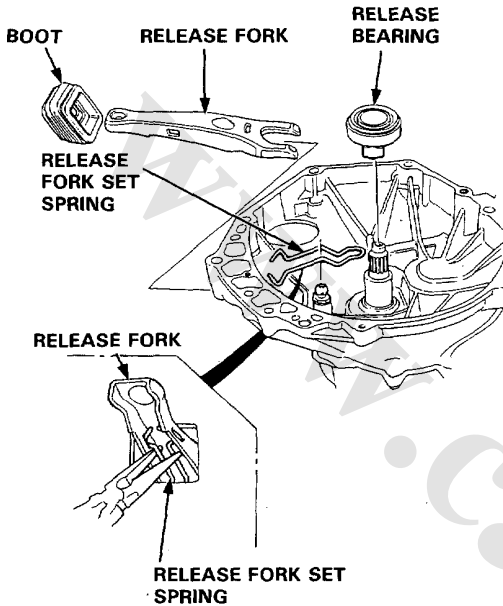

3. Check the release bearing for play by spinning it by hand.


CAUTION: The bearing is packed with grease. Do not wash it in solvent.

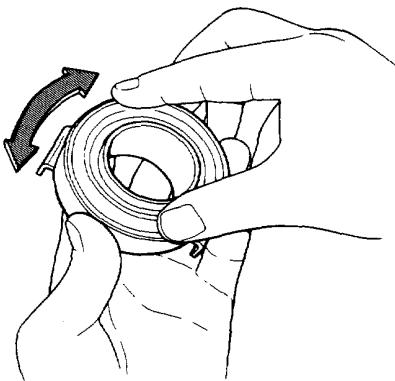

4. Replace the bearing with a new one if there is excessive play.


Installation

1. Install the release fork set spring on the release fork.

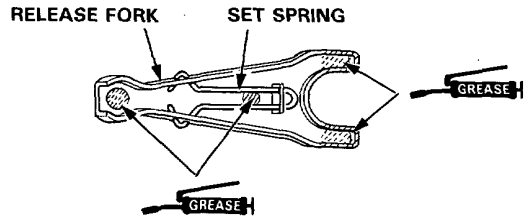

CAUTION: Use only molybdenum disulfide grease in this step.


2. With the release fork slid between the release bearing pawls, install the bearing on the mainshaft while inserting the release fork through the hole in clutch housing.
3. Align the detent of the release fork with the release fork bolt and press down on the fork on the release fork bolt squarely.

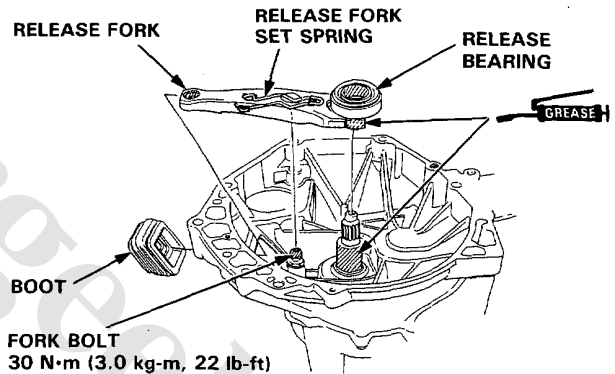

FORK BOLT
30 N·m (3.0 kg·m, 22 lb·ft)

CAUTION: Use only molybdenum disulfide grease in this step.

4. Install the boot, being sure that there is no clearance: release fork-to-boot, and boot-to-clutch housing.
5. Move the release fork right and left to make sure that the fork fits properly against the bearing, and that the bearing slides smoothly.

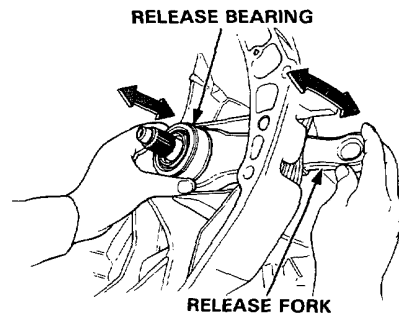




Pressure Plate


Removal/Inspection

1. Inspect the fingers of the diaphragm spring for wear at the release bearing contact area.
2. Assemble the special tools as shown.
NOTE: Assemble the Clutch Alignment Disc with side "A" facing the diaphragm as shown.
3. Check the diaphragm spring fingers for height using the special tools and feeler gauge.

Standard (New): 0.6 mm (0.02 in.) Min.
Service Limit: 0.8 mm (0.03 in.) Max.

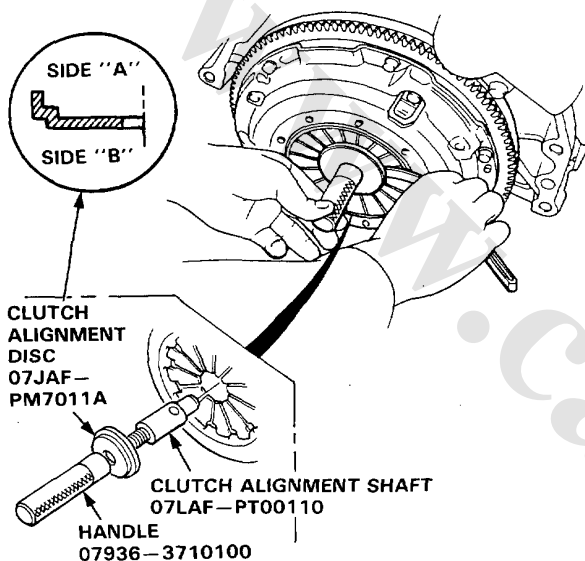


4. Install the Ring Gear Holder.

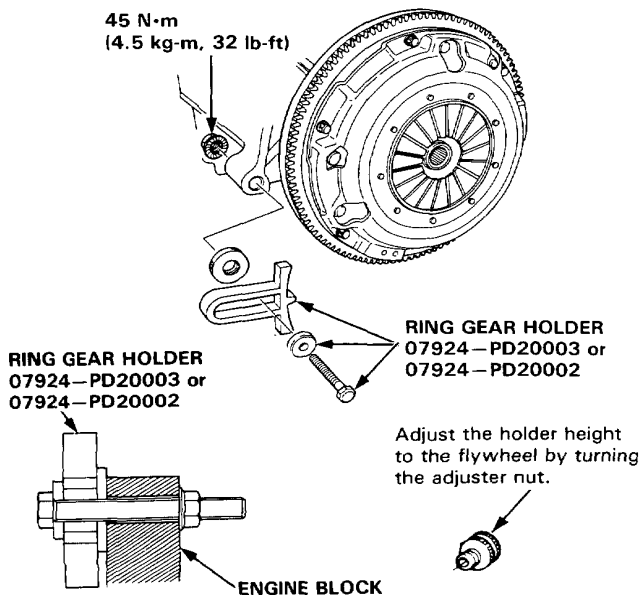

5. To prevent warping, unscrew the pressure plate mounting bolts two turns at a time in a crisscross pattern using a 10 mm T-wrench, then remove the pressure plate and clutch disc.


RING GEAR HOLDER
07924-PD20003 or
07924-PD20002

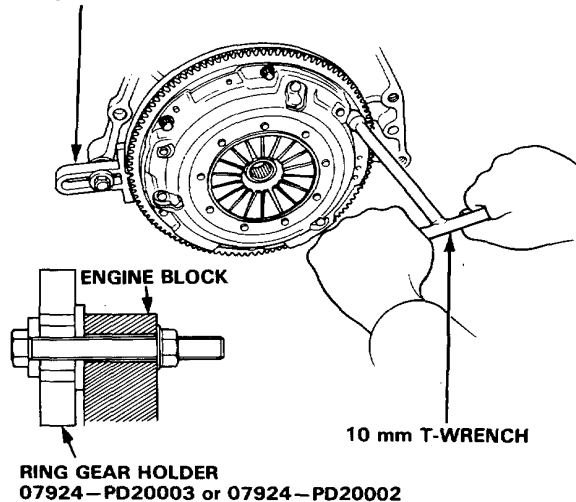

6. Inspect the pressure plate surface for wear, cracks, or burning.
7. Inspect for warpage using a straight edge and feeler gauge.

Standard (New): 0.03 mm (0.001 in.) Min.
Service Limit: 0.15 mm (0.006 in.) Max.


Measure across pressure plate.

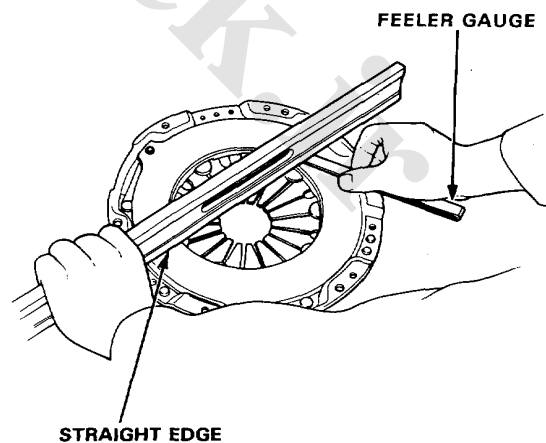

Clutch Disc


Inspection

1. Remove the clutch disc.
2. Inspect lining of the clutch disc for signs of slipping or oil. Replace it if it is burned black or oil soaked.

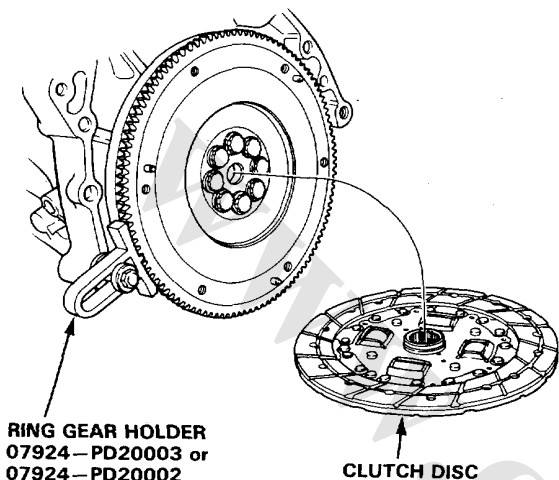


3. Measure the clutch disc thickness.

Clutch Disc Thickness:
Standard (New): 8.5–9.2 mm (0.33–0.36 in.)
Service Limit: 6.1 mm (0.24 in.)

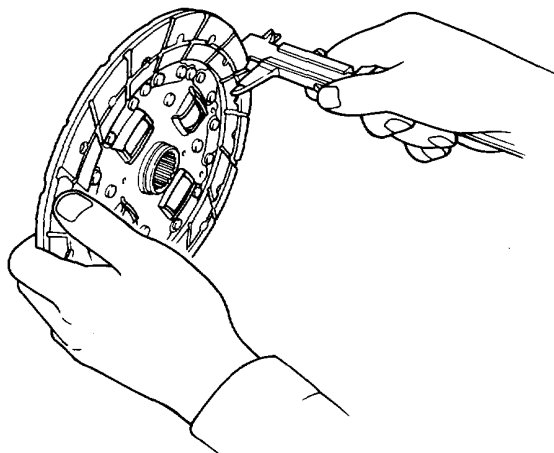

4. Check for loose rubber torsion dampers. Replace the clutch disc if any are loose.
5. Measure the depth from the lining surface to the rivets, on both sides.

Rivet Depth:
Standard (New): 1.3 mm (0.051 in.) min.
Service Limit: 0.2 mm (0.008 in.)

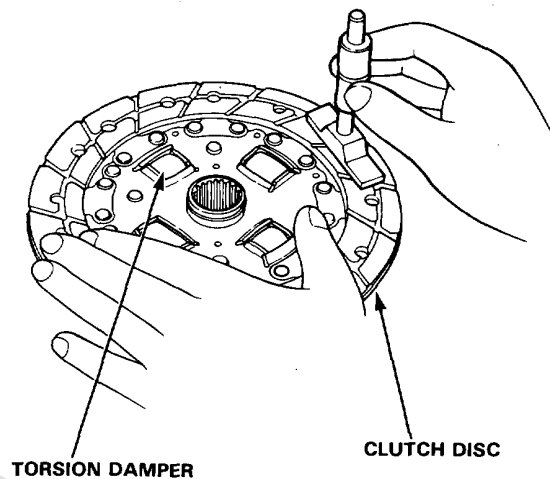



Flywheel


Flywheel and Clutch Disc

Inspection/Removal

1. Inspect the ring gear teeth for wear or damage.
2. Inspect the clutch disc mating surface on the flywheel for wear, cracks or burning.
3. Measure the flywheel runout using a dial indicator through at least two full turns. Push flywheel toward engine to take up the crankshaft thrust washer clearance.


NOTE: The runout can be measured with engine installed.

Standard (New): 0.05 mm (0.002 in.) max.
Service Limit: 0.15 mm (0.006 in.)

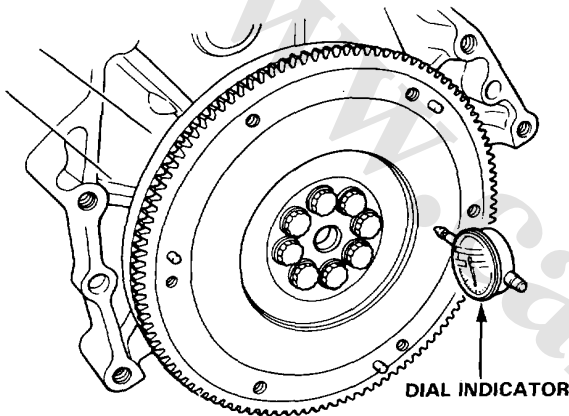


4. Remove the eight flywheel mounting bolts and flywheel.

RING GEAR HOLDER
07924-PD20003 or
07924-PD20002

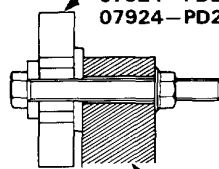

FLYWHEEL

ENGINE BLOCK

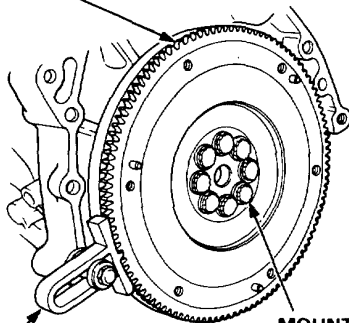


MOUNTING BOLT

RING GEAR HOLDER
07924-PD20003 or
07924-PD20002


Installation

1. Align the hole in flywheel with the crankshaft dowel pin and assemble. Install the bolts only finger tight.
2. Install the Ring Gear Holder, then torque the flywheel bolts in a crisscross pattern, as shown.

RING GEAR HOLDER
07924-PD20003 or 07924-PD20002

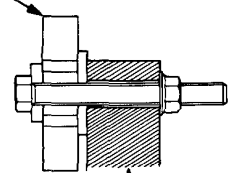


ENGINE BLOCK

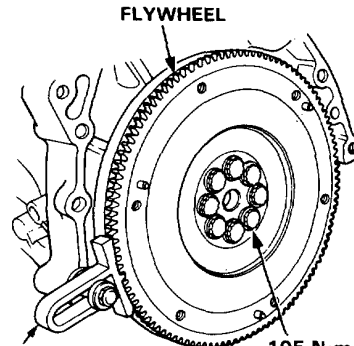

RING GEAR HOLDER
07924-PD20003 or
07924-PD20002

105 N·m (10.5 kg-m,
76 lb-ft)

3. Install the clutch disc and pressure plate by aligning the flywheel dowels with dowel holes in the pressure plate.

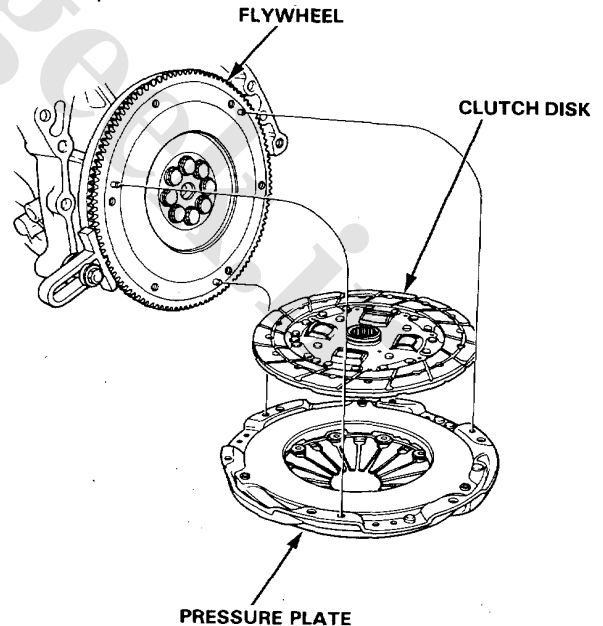

PRESSURE PLATE

4. Install the attaching bolts finger tight.

(cont'd)

Transmission Oil
Back-up Light Switch
Gearshift Mechanism
Shift Arm Assembly
Transmission Assembly
Removal
Installation


www.cargeek.ir

Maintenance

Transmission oil

Oil Level Inspection

1. Check with oil at operating temperature, engine OFF, and car on level ground.
2. Remove oil filler plug and check level with finger.
3. Oil level must be up to fill hole. If it is below hole, add oil until it runs out, then reinstall plug.

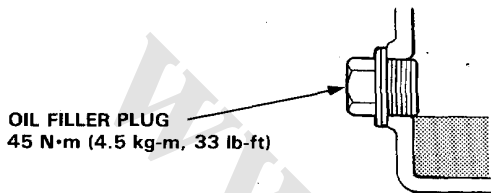

Oil Change


Use only SAE 10W-30 or 10W-40 oil rated SF grade

1. With transmission oil at operating temperature, engine OFF, and car on level ground, remove drain plug and drain transmission.
2. Reinstall drain plug with new washer, and refill to proper level.

NOTE: Drain plug washer should be replaced at every oil change.

Oil Capacity

- 1.9 ℓ (2.0 U.S. qt.) after drain.
- 2.0 ℓ (2.1 U.S. qt.) after overhaul.

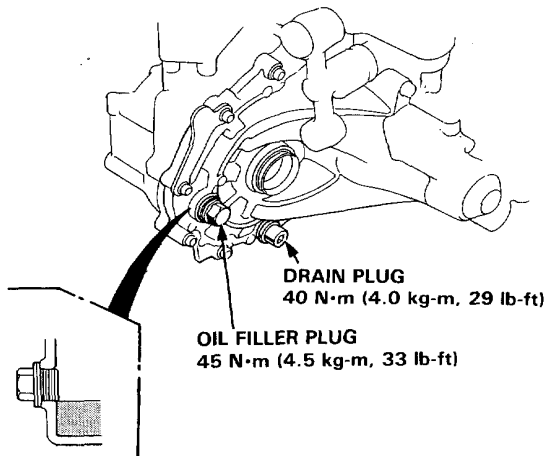


Back-up Light Switch

Replacement

NOTE: Check the switch see Section 16.

1. Disconnect the back-up light switch wire connectors.
2. Remove the back-up light switch.

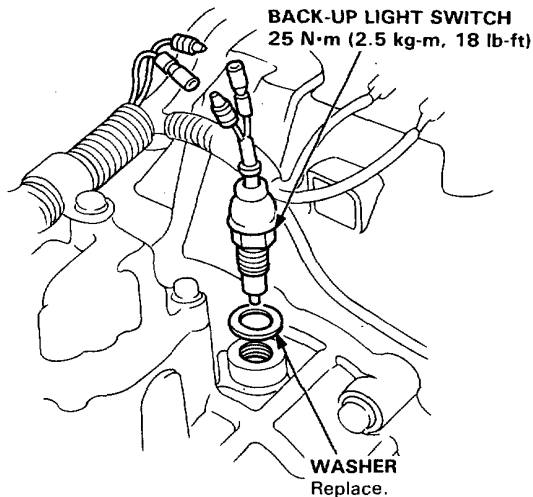

3. Install the new washer and back-up light switch.




Gearshift Mechanism

Overhaul

NOTE:

- Inspect rubber parts for wear or damage when disassembling.
- Check that new cotter pin is seated firmly.

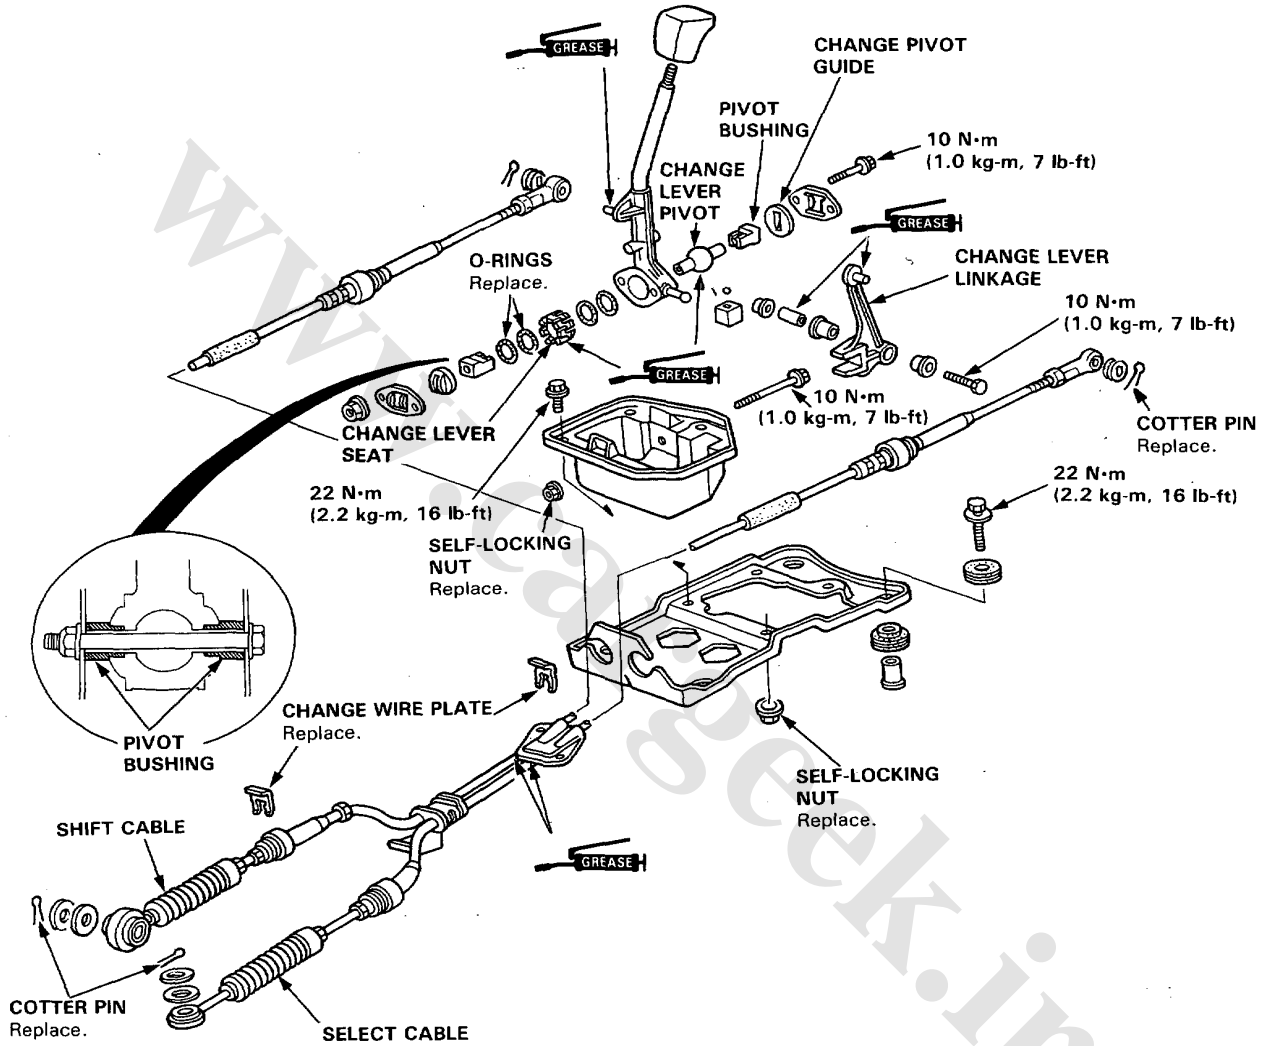


Gearshift Mechanism


Cable Adjustment

Select Cable:

1. With the transmission in neutral, measure the clearance between (A) and (B).

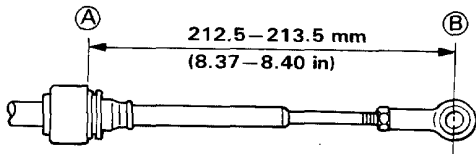


2. If there is no clearance between (A) and (B), loosen the locknut and turn the adjuster as necessary.

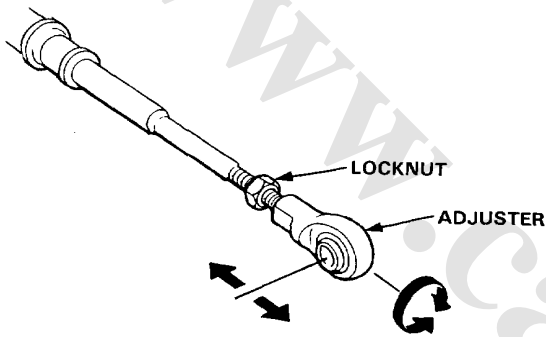

3. Tighten the locknut and install the select cable to the linkage.

NOTE:


- Check that new cotter pin is seated firmly.
- After adjustment, check operation of the gear-shift lever.

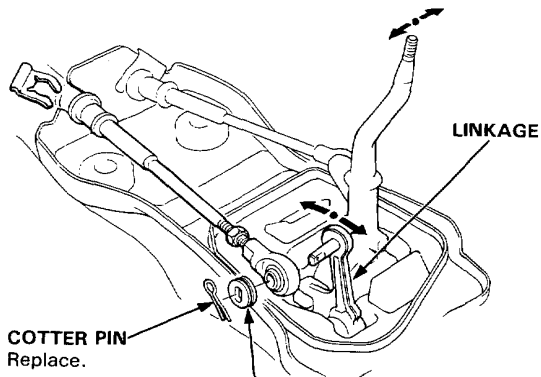


WASHER ASSEMBLY
• Plastic washer is the cotter pin side.

Shift Cable:

1. With the transmission in neutral, measure the clearance between (A) and (B).

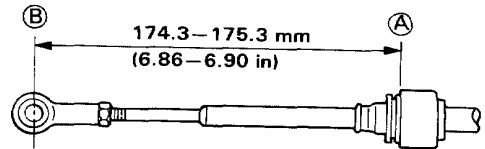


2. If there is no clearance between (A) and (B), loosen the locknut and turn the adjuster as necessary.

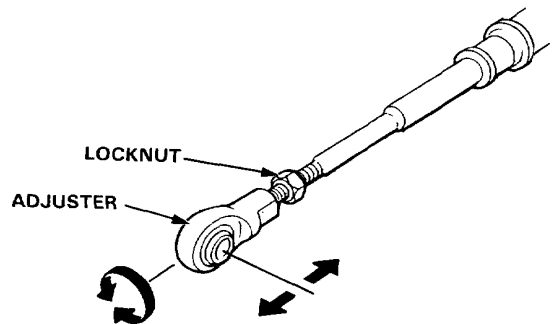

3. Tighten the locknut and install the shift cable to the change lever.

NOTE:

- Check that new cotter pin is seated firmly.
- After adjustment, check operation of the gear-shift lever.

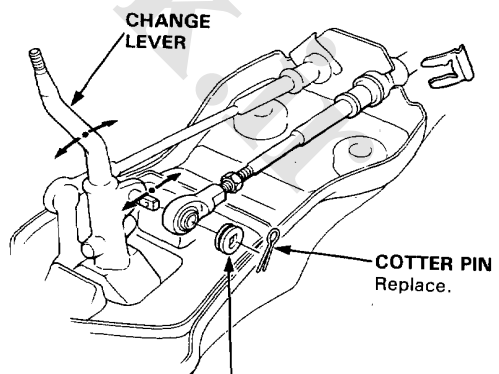

WASHER ASSEMBLY
• Plastic washer is the cotter pin side.



Transmission Assembly


Removal

⚠ WARNING

- Make sure jacks and safety stands are placed properly, and hoist brackets are attached to correct positions on the engine.
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

CAUTION: Use fender covers to avoid damaging painted surfaces.


1. Disconnect the battery negative (-) and positive (+) cables from the battery, and remove the battery.
2. Remove the air intake hose and battery base.
3. Disconnect the starter motor cables, remove the starter mounting bolts, then remove the starter motor.
4. Disconnect the transmission ground cable.
5. Disconnect the back-up light switch wire.

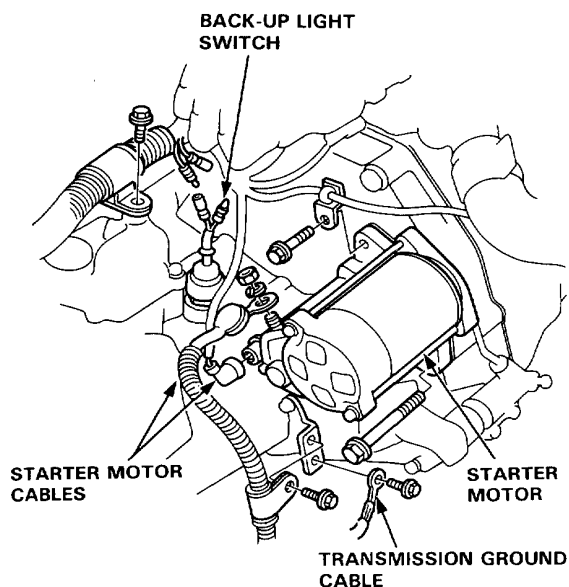


6. First remove the cable stay and disconnect the cables from the top housing of the transmission.

NOTE: Remove both cables and the stay together.

CAUTION: Take care not to bend the cables.

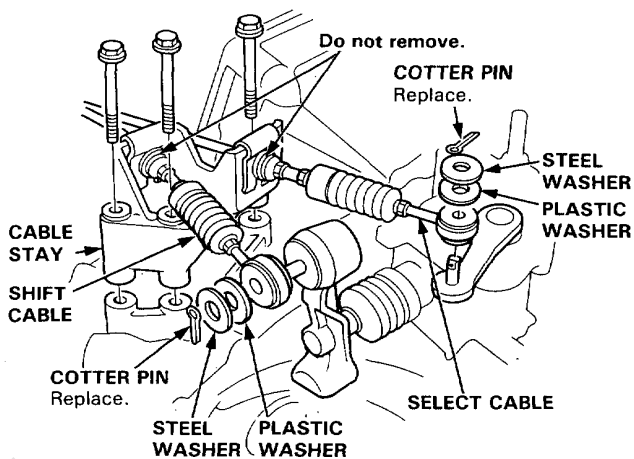

7. Disconnect the connector and remove the speed sensor, but leave its hoses connected.

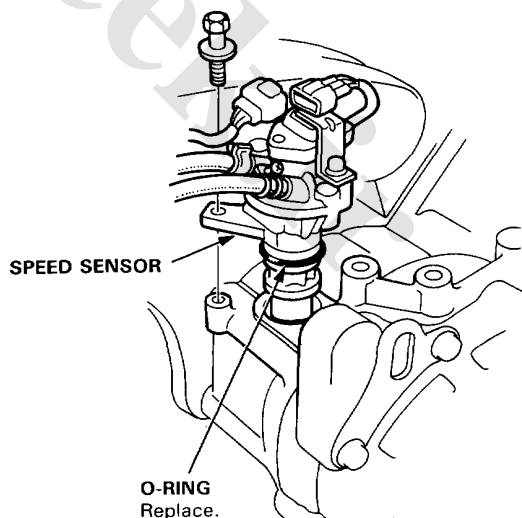

(cont'd)


Transmission Assembly

Removal (cont'd)


8. Remove both front wheels.
9. Remove the undercarriage splash shield.
10. Drain transmission oil.
11. Remove the mounting bolts and clutch slave cylinder with the clutch pipe and push rod.
12. Remove the mounting bolt and clutch hose joint with the clutch pipe and clutch hose.

NOTE:


- Do not operate the clutch pedal once the slave cylinder has been removed.
- Take care not to bend the pipe.

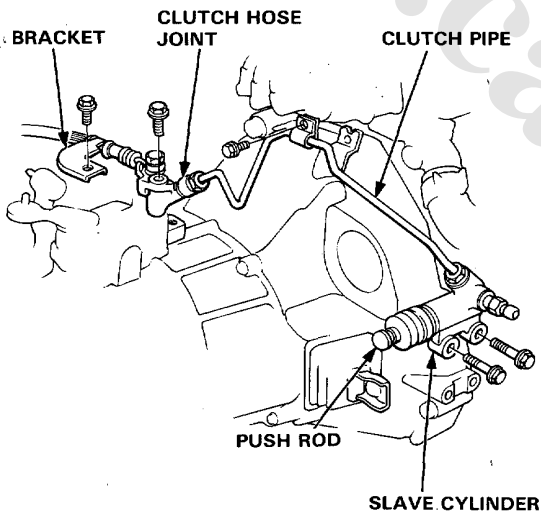

13. Remove the center beam.
14. Remove the header pipe.

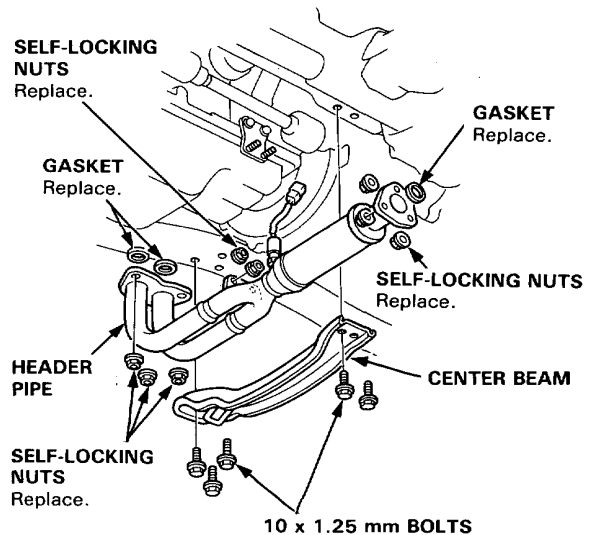


15. Remove the cotter pin and lower arm ball joint nuts, then separate the ball joints and lower arms (See Section 12).
16. Remove the damper fork bolt.

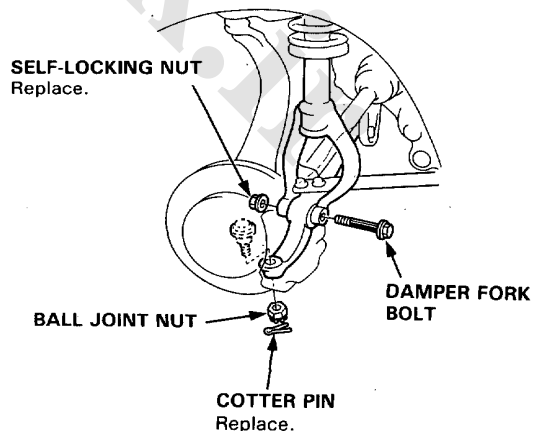




17. Pry the right and left driveshafts out of the differential and the intermediate shaft.
18. Pull on the inboard joint and remove the right and left driveshafts (See section 10).
19. Remove the 3 mounting bolts and lower the bearing support.
20. Remove the intermediate shaft from the differential (See section 10).

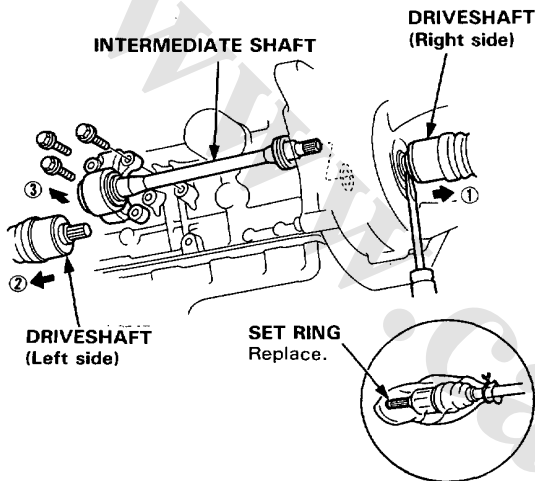


NOTE: Coat all precision finished surfaces with clean engine oil or grease.
Tie plastic bags over the driveshaft ends.


21. Remove the right damper pinch bolt, then separate the damper fork and damper.
22. Remove the bolts and nut, then remove the right radius rod.

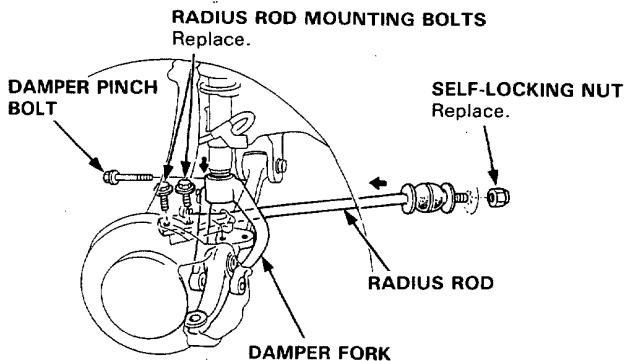

23. Remove the engine stiffener.
24. Remove the clutch cover.

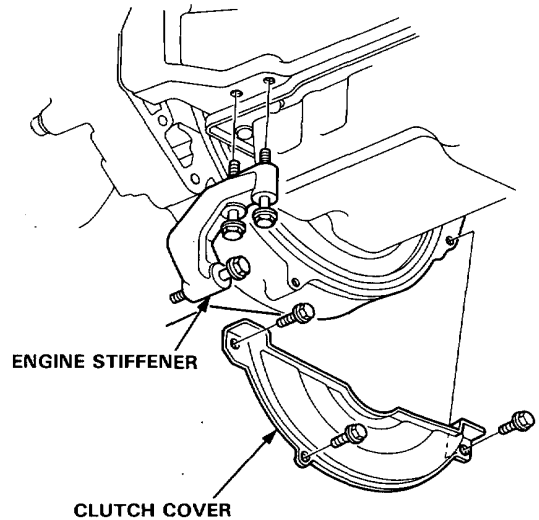

25. Remove the intake manifold bracket.

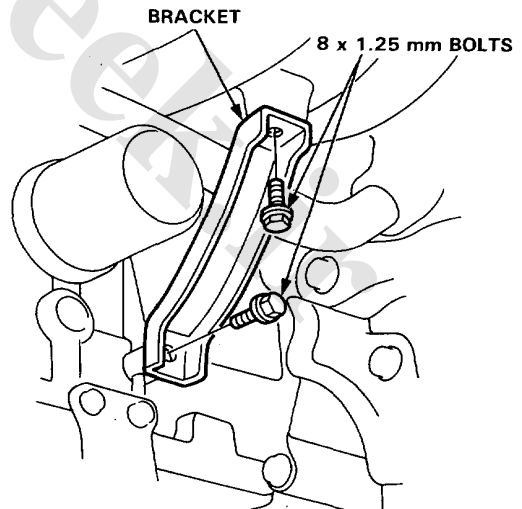


(cont'd)


Transmission Assembly

Removal (cont'd)


- 26. Remove the rear engine mount bracket stay.
- 27. Remove the 3 rear engine mount bracket mounting bolts.
- 28. Remove the transmission housing mounting bolt (Engine side).

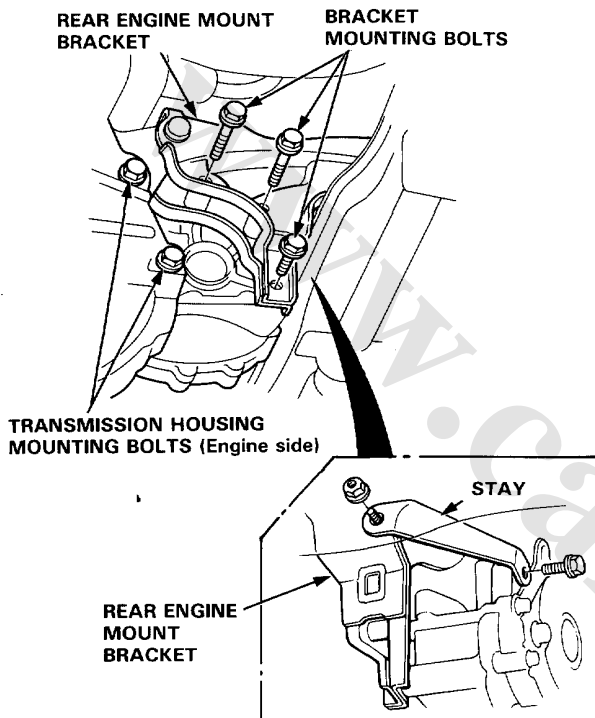

- 29. Swing the right driveshaft to the inner fender.

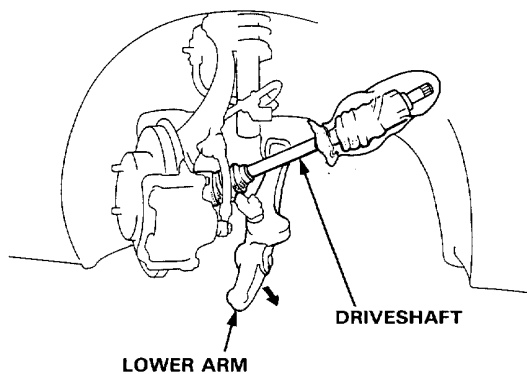


- 30. Place a floor jack under the transmission and raise transmission just enough to take weight off mounts.
- 31. Remove the transmission mount mounting bolt and loosen the mount bracket mounting nuts.
- 32. Remove the 3 transmission housing mounting bolts.

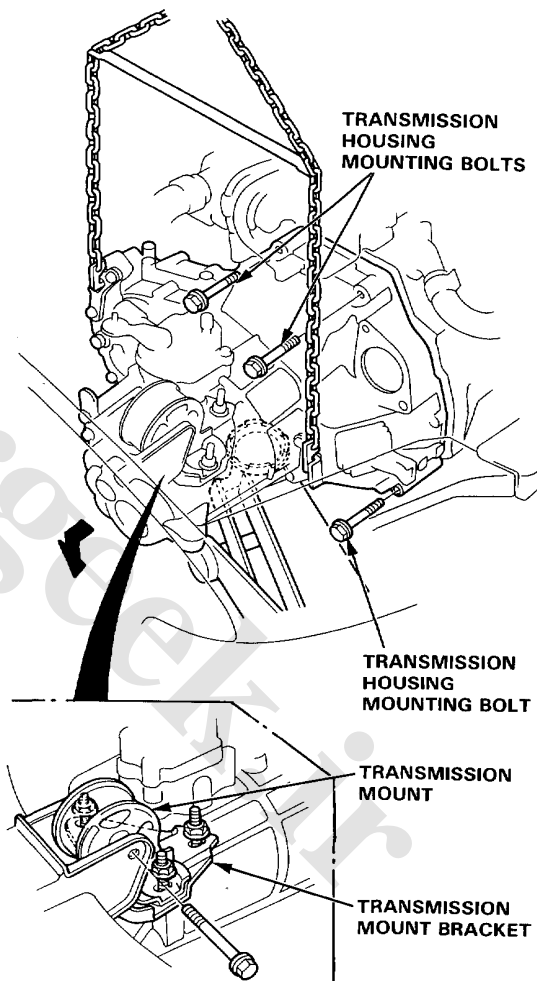



Installation


1. Place the transmission on the transmission jack, and raise to the engine level.
2. Check that the 4 dowel pins are installed.
3. Install the 3 transmission housing mounting bolts.

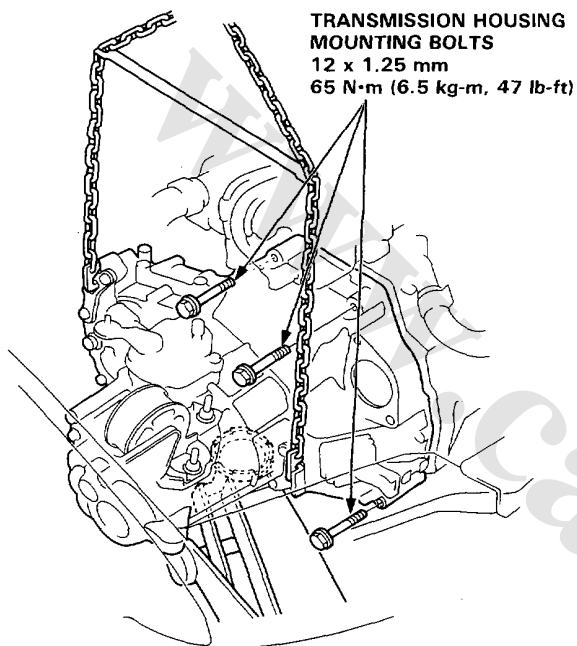

4. Install the transmission mount and mount bracket.

NOTE: Torque mounting bolt and nuts in sequence shown.



CAUTION: Check that the bushings are not twisted or offset.

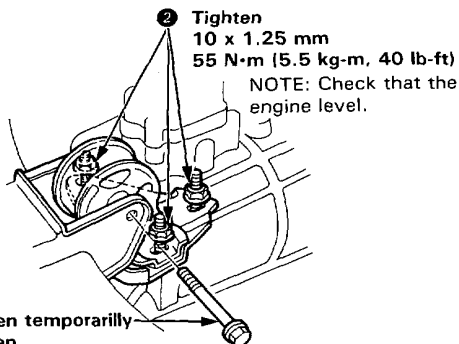


- ① Tighten temporarily
- ③ Tighten
12 x 1.25 mm
65 N·m (6.5 kg-m, 47 lb-ft)

5. Install the transmission housing mounting bolts (Engine side).
6. Install the 3 rear engine bracket mounting bolts.
7. Install the rear engine mount bracket stay.

NOTE: Loosely install the stay mounting bolt and nut, then torque in the sequence shown.

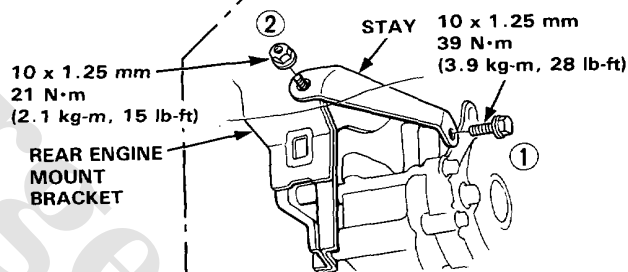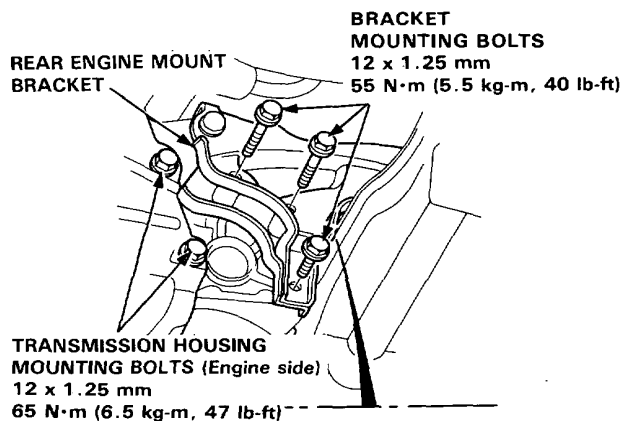

8. Install the intake manifold bracket.

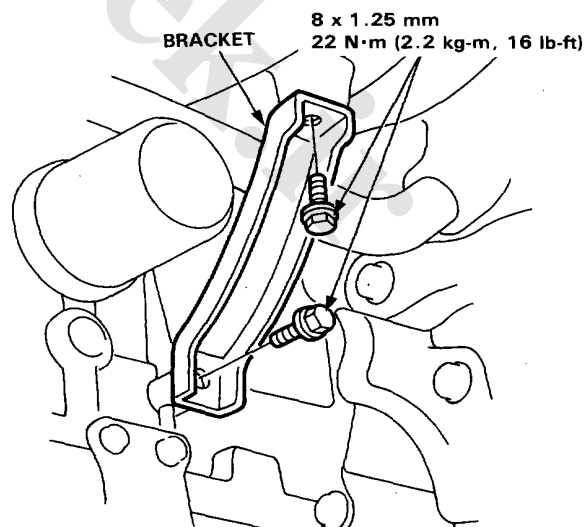

(cont'd)



Special Tools
Symptom-to-Component Chart
Road Test
Pressure
Stall Speed
Fluid Level

www.cargeek.ir

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07406-0020003	Oil Pressure Gauge Set	1	Component Tool
①-1	07406-0020201	Oil Pressure Gauge Hose	1	
②	07406-0070000	Low Pressure Gauge	1	

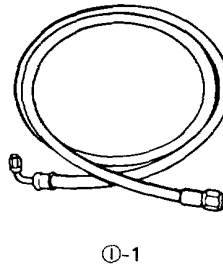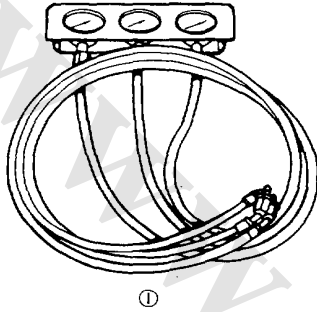

Symptom-to-Component Chart

Hydraulic System

SYMPTOM	Check these items on the PROBABLE CAUSE LIST	Check these items on the NOTES CHART
Engine runs, but car does not move in any gear.	1, 6, 7, 16	K, L, R, S
Car moves in R and 2, but not in D ₃ , D ₄ or 1.	8, 29, 44, 48	C, M, O
Car moves in D ₃ , D ₄ , 1, R, but not in 2.	9, 30, 49	C, L
Car moves in D ₃ , D ₄ , 2, 1, but not in R.	1, 11, 34, 38, 39, 40	C, L, Q
Car moves in N.	1, 8, 9, 10, 11, 46, 47	C, D
Excessive idle vibration.	5, 17	B, K, L
Slips in all gears.	6, 7, 16	C, L, U
No engine braking in <input type="checkbox"/> position.	12	C, D, L
Slips in low gear.	8, 29, 44, 48	C, N, O, U
Slips in 2nd gear.	9, 20, 23, 30, 49	C, L, U
Slips in 3rd gear.	10, 21, 23, 31, 44	C, L, U
Slips in 4th gear.	11, 23, 32	C, L, U
Slips in reverse gear.	11, 32, 34	C
Flares on 1–2 upshift.	3, 15	E, L, V
Flares on 2–3 upshift.	3, 15, 24, 44	E, L, V
Flares on 3–4 upshift.	3, 15, 25, 44	E, L, V
No upshift, trans stays in low gear.	14, 19, 23	G, L
No downshift to low gear.	12, 19	G, L
Late upshift.	14	L, V
Erratic shifting.	2, 14, 26	V
Harsh shift (up and down shifting).	2, 4, 15, 23, 24, 27, 47	A, E, H, I, L, V
Harsh shift (1–2).	2, 9	C, D, V
Harsh shift (2–3).	2, 10, 23, 24	C, D, H, L, V
Harsh shift (3–4).	2, 11, 23, 25	C, D, I, L, V
Harsh kickdown shifts.	2, 23, 27, 28	L, V, Q
Harsh kickdown shift (2–1).	48	O
Harsh downshift at closed throttle.	15	E, T
Harsh shift when manually shifting to <input type="checkbox"/> .	33	L
Axle(s) slips out of trans on turns.	43, 50	L, P, Q
Axle(s) stuck in trans.	43	L, Q
Ratcheting noise when shifting into R.	6, 7, 38, 39, 40	K, L, Q
Loud popping noise when taking off in R.	38, 39, 40	L, Q
Ratcheting noise when shifting from R to P or from R to N.	38, 39, 40, 45	L, Q
Noise from trans in all selector lever positions.	6, 17	K, L, Q
Noise from trans only when wheels are rolling.	39, 42	L, Q
Gear whine, rpm related (pitch changes with shifts).	8, 13, 41	K, L, Q
Gear whine, speed related (pitch changes with speed).	38, 42	L, Q
Trans will not shift into 4th gear in D ₄ .	1, 21, 28, 32	L
Lock-up clutch does not lock up smoothly.	17, 36, 37	L
Lock-up clutch does not operate properly.	2, 3, 15, 18, 35, 36, 37	E, L, V
Transmission has multitude of problems shifting. At disassembly, large particles of metal are found on magnet.	43	L, Q



PROBABLE CAUSE	
1.	Shift cable broken/out of adjustment.
2.	Throttle cable too short.
3.	Throttle cable too long.
4.	Wrong type ATF.
5.	Idle rpm too low/high.
6.	Oil pump worn or binding.
7.	Pressure regulator stuck.
8.	1st clutch defective.
9.	2nd clutch defective.
10.	3rd clutch defective.
11.	4th clutch defective.
12.	1st hold clutch defective.
13.	Mainshaft, countershaft, and secondary shaft idler gears worn/damage.
14.	Modulator valve stuck.
15.	Throttle B valve stuck.
16.	ATF strainer clogged.
17.	Torque convertor defective.
18.	Torque convertor check valve stuck.
19.	1-2 shift valve stuck.
20.	2-3 shift valve stuck.
21.	3-4 shift valve stuck.
22.	EAT D inhibitor valve stuck.
23.	Clutch pressure control valve stuck.
24.	2nd orifice control valve stuck.
25.	Orifice control valve stuck.
26.	3-2 kickdown valve stuck.
27.	3rd kickdown valve stuck.
28.	4th exhaust valve stuck.
29.	1st accumulator defective.
30.	2nd clutch accumulator defective.
31.	3rd clutch accumulator defective.
32.	4th/reverse accumulator defective.
33.	1st hold clutch accumulator defective.
34.	Servo valve stuck.
35.	Lock-up clutch timing valve stuck.
36.	Lock-up clutch shift valve stuck.
37.	Lock-up clutch control valve stuck.
38.	Shift fork bent.
39.	Reverse gears worn/damaged (3 gears).
40.	Reverse selector worn.
41.	3rd gears worn/damaged (2 gears).
42.	Final gears worn/damaged (2 gears).
43.	Differential pinion shaft worn.
44.	Feedpipe O-ring broken.
45.	4th gears worn/damaged (2 gears).
46.	Gear clearance incorrect.
47.	Clutch clearance incorrect.
48.	Sprag clutch defective.
49.	Sealing rings/guide worn.
50.	Axle-inboard joint clip missing.

Symptom-to-Component Chart

Hydraulic System (cont'd)

The following symptoms can be caused by improper repair or assembly.	Check these items on the PROBABLE CAUSE DUE TO IMPROPER REPAIR	Items on the NOTES CHART
Car creeps in N.	R1, R2	
Car does not move in D ₃ or D ₄ .	R4	
Trans locks up in R.	R3, R12	
Excessive drag in trans.	R6	R, K
Excessive vibration, rpm related.	R7	
Noise with wheels moving only.	R5	
Main seal pops out.	R8	S
Various shifting problems.	R9, R10	
Harsh upshifts.	R11	

PROBABLE CAUSE DUE TO IMPROPER REPAIR	
R1.	Improper clutch clearance.
R2.	Improper gear clearance.
R3.	Parking brake lever installed upside down.
R4.	Sprag clutch installed upside down.
R5.	Reverse hub installed upside down.
R6.	Oil pump binding.
R7.	Torque converter not fully seated in oil pump.
R8.	Main seal improperly installed.
R9.	Springs improperly installed.
R10.	Valves improperly installed.
R11.	Ball check valves not installed.
R12.	Shift fork bolt not installed.



NOTES	
A.	Flush ATF in the ATF cooler.
B.	Set idle rpm in gear to specified idle speed. If still no good, adjust motor mounts as outlined in engine section of service manual.
C.	If the large clutch piston O-ring is broken, inspect the piston groove for rough machining.
D.	If the clutch pack is seized or is excessively worn, inspect the other clutches for wear and check the orifice control valves and throttle valves for free movement.
E.	If throttle valve B is stuck, inspect the clutches for wear.
G.	If the 1-2 valve is stuck closed, the transmission will not upshift. If stuck open the transmission has no 1st gear.
H.	If the 2nd orifice control valve is stuck, inspect the 2nd and 3rd clutch packs for wear.
I.	If the orifice control valve is stuck, inspect the 3rd and 4th clutch packs for wear.
J.	If the clutch pressure control valve is stuck closed, the transmission will not shift out of 1st gear.
K.	Improper alignment of main valve body and torque converter case may cause oil pump seizure. The symptoms are mostly an rpm-related ticking noise or a high pitched squeek.
L.	If the oil screen is clogged with particles of steel or aluminum, inspect the oil pump and differential pinion shaft. If both are OK and no cause for the contamination is found, replace the torque converter.
M.	If the 1st clutch feedpipe guide in the end cover is scored by the mainshaft, inspect the ball bearing for excessive movement in the transmission housing. If OK, replace the end cover as it is dented. The O-ring under the guide is probably worn.
N.	Replace the mainshaft if the bushings for the 1st and 4th feedpipe are loose or damaged. If the 1st feedpipe is damaged or out of round, replace it. If the 4th feedpipe is damaged or out of round, replace the end cover.
O.	A worn or damaged sprag clutch is mostly a result of shifting the trans in D ₃ or D ₄ while the wheels rotate in reverse, such as rocking the car in snow.
P.	Inspect the frame for collision damage.
Q.	Inspect for damage or wear: <ol style="list-style-type: none"> 1. Reverse selector gear teeth chamfers. 2. Engagement teeth chamfers of countershaft 4th and reverse gear. 3. Shift fork for scuff marks in center.. 4. Differential pinion shaft for wear under pinion gears. 5. Bottom of 3rd clutch for swirl marks. Replace items 1, 2, 3 and 4 if worn or damaged. If trans makes clicking, grinding or whirring noise, also replace mainshaft 4th gear and reverse idler gear and countershaft 4th gear in addition to 1, 2, 3 or 4. If differential pinion shaft is worn, overhaul differential assembly and replace oil screen and thoroughly clean trans, flush torque converter, cooler and lines. If bottom of 3rd clutch is swirled and trans makes gear noise, replace the countershaft and ring gear.
R.	Be very careful not to damage the torque converter case when replacing the main ball bearing. You may also damage the oil pump when you torque down the main valve body. This will result in oil pump seizure if not detected. Use proper tools.
S.	Install the main seal flush with the torque converter case. If you push it into the torque converter case until it bottoms out, it will block the oil return passage and result in damage.
T.	Harsh downshifts when coasting to a stop with zero throttle may be caused by a bent-in throttle valve retainer/cam stopper. Throttle cable adjustment may clear this problem.
U.	Check if servo valve stopper cap is installed. If it was not installed, the check valve may have been pushed out by hydraulic pressure causing a leak (internal) affecting all forward gears.
V.	Throttle cable adjustment is essential for proper operation of the transmission. Not only does it affect the shift points if misadjusted, but also the shift quality and lock-up clutch operation. A too long adjusted cable will result in throttle pressure being too low for the amount of engine torque input into the transmission and may cause clutch slippage. A too short adjusted cable will result in too high throttle pressures which may cause harsh shifts, erratic shifts and torque converter hunting.

Road Test

NOTE: After transmission is installed:

- Make sure the floor mat does not interfere with accelerator pedal travel. Fully depress accelerator pedal and check to make sure the throttle lever is fully opened.
- Release the accelerator pedal and check both inner control cables to be sure they have slight play.

Warm up the engine to operating temperature.

D₄ and D₃ Range

1. Apply parking brake and block the wheels. Start the engine, then move the selector to D₄ while depressing the brake pedal. Depress the accelerator pedal, and release it suddenly. Engine should not stall.
2. Check that shift points occur at approximate speeds shown. Also check for abnormal noise and clutch slippage.
3. Apply parking brake and block the wheels. Start the engine, then move the selector to D₃ while depressing the brake pedal. Depress the accelerator pedal, and release it suddenly. Engine should not stall.

KF, KW, KB, KE, KY, KP, KT and KU Models

● Upshift

D ₄ (and D ₃)		1st—2nd	2nd—3rd	3rd—4th	Lock up Clutch ON	Full Lock up ON
1/8 throttle Coasting down-hill from a stop	km/h	15—19	33—37	42—48	49—53	68—74
	mph	9—12	21—23	26—30	30—33	42—46
1/2 throttle Acceleration from a stop	km/h	26—32	66—72	96—104	92—99	96—103
	mph	16—20	41—45	60—65	57—62	60—64
Full-throttle Acceleration from a stop	km/h	48—55	100—108	146—155	—	135—143
	mph	30—34	62—67	91—96	—	84—89

● Downshift

D ₄ (and D ₃)		Lock up Clutch OFF	4th—3rd	3rd—2nd	2nd—1st
1/8 throttle Coasting or braking to a stop	km/h	49—53	—	(4th—2nd) 13—19	7—13
	mph	30—33	—	(4th—2nd) 8—12	4—8
1/2 throttle When car is slowed by increased grade, wind, etc.	km/h	92—99	—	—	—
	mph	57—62	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	—	129—138	85—94	41—48
	mph	—	80—86	53—58	25—30



KS, KX, KQ and KG Models

● Upshift

		1st-2nd		2nd-3rd		3rd-4th		Lock up Clutch ON		Full Lock up ON	
		km/h	mph	km/h	mph	km/h	mph	km/h	mph	km/h	mph
1/8 throttle Coasting down-hill from a stop	km/h	16-19		33-37		42-48		49-53		66-72	
	mph	10-12		21-23		26-30		30-33		41-45	
1/2 throttle Acceleration from a stop	km/h	26-32		66-72		95-104		92-99		96-104	
	mph	16-20		41-45		59-65		57-62		60-65	
Full-throttle Acceleration from a stop	km/h	48-56		100-108		146-156		—		135-143	
	mph	30-35		62-67		91-97		—		84-89	

● Downshift

		Lock up Clutch OFF		4th-3rd		3rd-2nd		2nd-1st	
		km/h	mph	km/h	mph	km/h	mph	km/h	mph
1/8 throttle Coasting or braking to a stop	km/h	49-53		—		(4th-2nd) 13-19		7-13	
	mph	30-33		—		(4th-2nd) 8-12		4-8	
1/2 throttle When car is slowed by increased grade, wind, etc.	km/h	92-99		—		—		—	
	mph	57-62		—		—		—	
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	—		146-156		85-95		39-47	
	mph	—		91-97		53-59		24-29	

CAUTION: Do not shift from **D** or **S** to **2** at speeds over 100 km/h (62.5 mph); you may damage the transmission.

1 (1st Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this range.

2 (2nd Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this range.

R (Reverse)

Accelerate from a stop at full throttle, and check for abnormal noise and clutch slippage.

P (Park)

Park car on a slope (approx. 16°), apply the parking brake, and shift into Park. Release the brake; the car should not move.

Pressure

Testing


CAUTION:

- Before testing, be sure the transmission is filled to the proper level.
- Connect an oil pressure gauge securely, being sure not to allow dust and other foreign particles to enter the inspection hole.
- Warm up the engine before testing.
- Set the parking brake securely, and block both rear wheels.
- Raise the front of the car and support with safety stands.

NOTE: Do not reuse old aluminum washers. Install the sealing bolt in the inspection hole and tighten to the specified torque 18 N·m (1.8 kg-m, 12 lb-ft).

1. Stop the engine and connect a tachometer.
2. Connect an oil pressure gauge to each inspection hole.


GAUGE SET 07406-0020003 (Includes Pressure Hoses)
A/T OIL PRESSURE GAUGE HOSE 07406-0020201

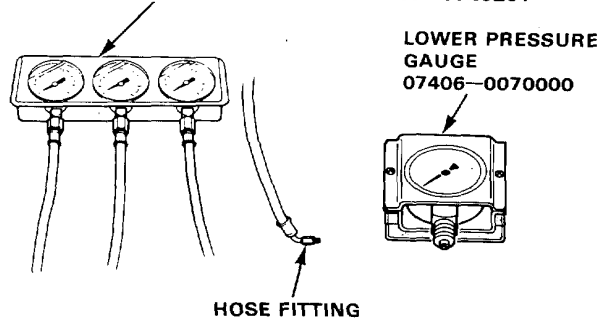

3. Start the engine and measure respective pressures as follows.

Line Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 2,000 min⁻¹ (rpm).
3. Measure the line pressure.

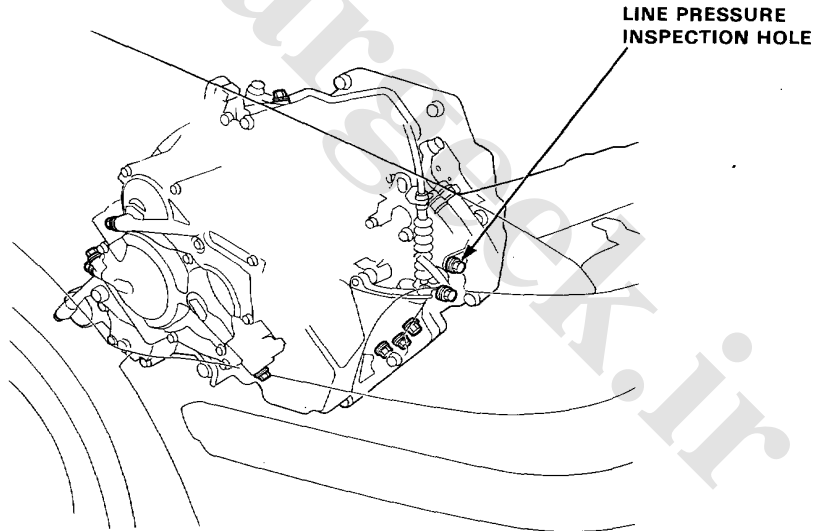


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Line	N or P	No (or low) Line pressure	Torque converter, oil pump pressure regulator, torque converter check valve, oil pump	760-809 kPa (7.75-8.25 kg/cm ² , 110-117 psi)	711 kPa (7.25 kg/cm ² , 103 psi)

NOTE: Higher pressures may be indicated if measurements are made in selector positions other than **N** or **P**.



Clutch Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Raise the front of the car and support with safety stands.
3. Allow the front wheels to rotate freely.
4. Run the engine at 2,000 min⁻¹ (rpm).
5. Measure the clutch pressure.

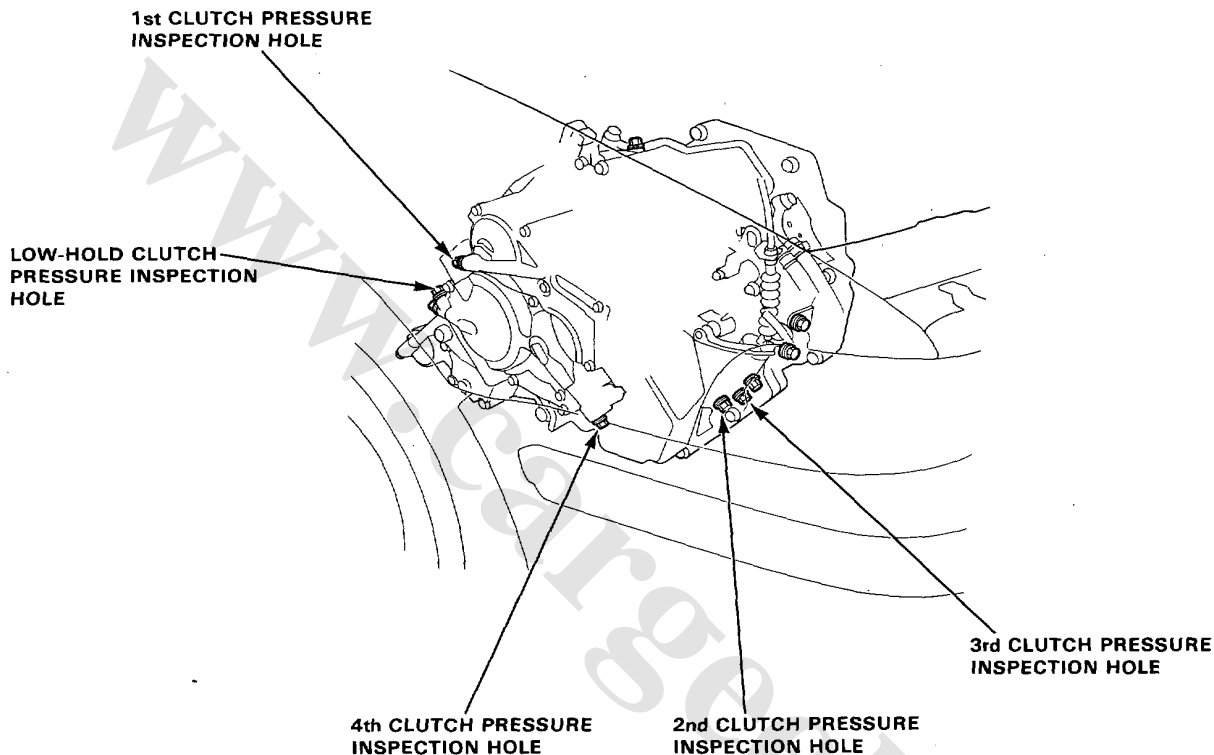


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Low-Hold Clutch	1	No or low low-hold pressure	Low-Hold Clutch	765–814 kPa (7.8–8.3 kg-m/cm ² , 111–118 psi)	716 kPa (7.3 kg-m/cm ² , 104 psi)
1st Clutch	1	No or low 1st pressure	1st Clutch		
2nd Clutch	2	No or low 2nd pressure	2nd Clutch		
3rd Clutch	D or D ₁	No or low 3rd pressure	3rd Clutch		
4th Clutch	D ₁	No or low 4th pressure	4th Clutch		
4th Clutch	R	No or low 4th pressure	Servo Valve 4th Clutch		

Testing (cont'd)


Clutch Low/High Pressure Test

1. Raise the car and support with safety stands.
2. Attach the gauge set to the appropriate pressure test port.
3. Remove the cable end of the throttle control lever.



NOTE: Do not loosen the locknuts, simply unhook the cable end.

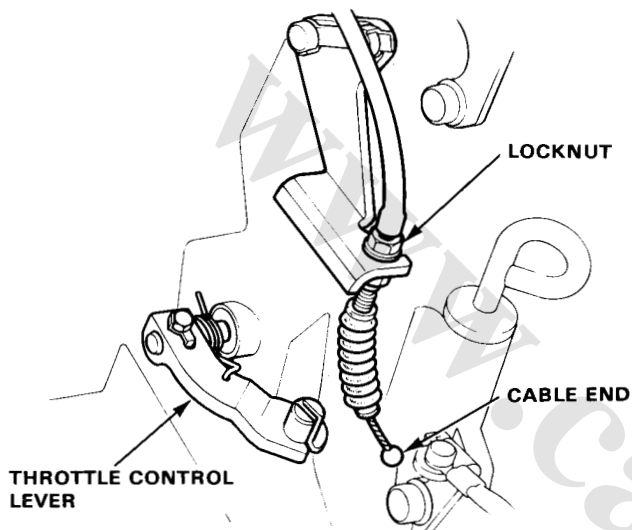




8. With the engine idling, lift the throttle control lever up approximately 1/2 of its possible travel and increase the engine rpm until pressure is indicated on the appropriate gauge. Record the highest pressure reading obtained.

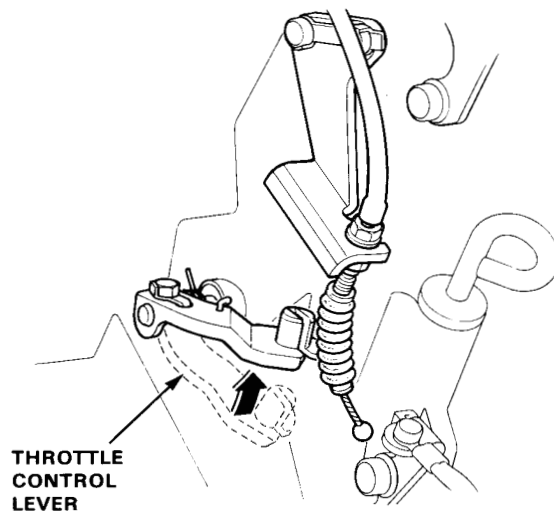

9. Repeat step 8 for each clutch pressure being inspected.

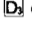4. Warm up the engine to normal operating temperature (cooling fan comes on).
5. With the engine idling, move the selector lever to  or .
6. Slowly move the throttle linkage to increase engine rpm until pressure is indicated on the appropriate gauge. Then release the throttle linkage, allowing the engine to return to an idle, and record the pressure reading.
7. Repeat step 6 for each clutch pressure being inspected.

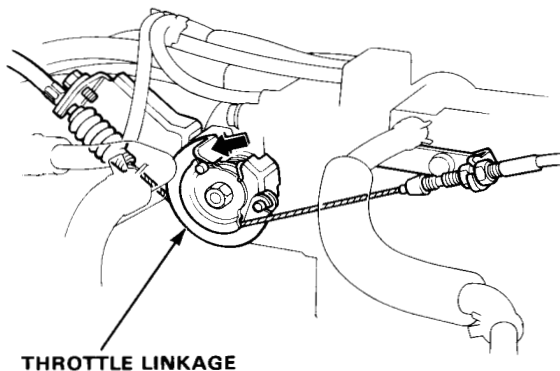

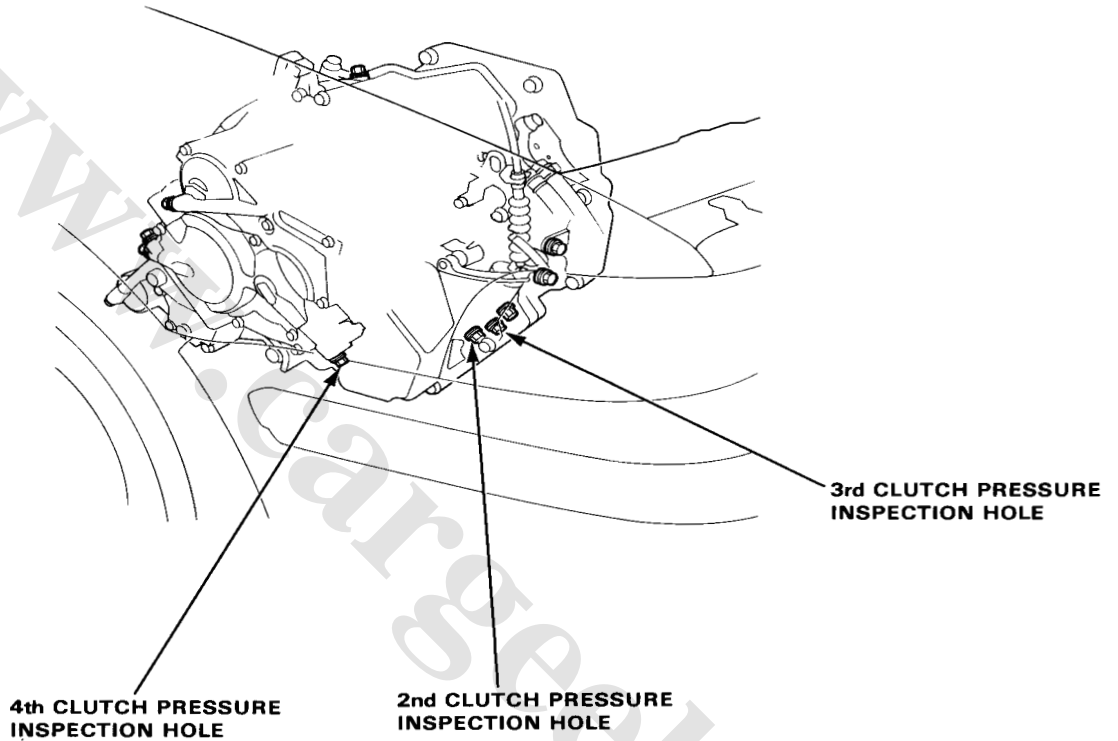


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
2nd Clutch	D ₂ or D ₄	No or low 2nd pressure	2nd Clutch	392—814 kPa (4.0—8.3 kg/cm ² , 57—118 psi)	343 kPa (3.5 kg/cm ² , 50 psi) with lever released. 735 kPa (7.3 kg/cm ² , 104 psi) with lever in half or more throttle position.
3rd Clutch	D ₃ or D ₅	No or low 3rd pressure	3rd Clutch		
4th Clutch	D ₄	No or low 4th pressure	4th Clutch	422—814 kPa (4.3—8.3 kg/cm ² , 61—118 psi)	373 kPa (3.8 kg/cm ² , 54 psi) with lever released. 735 kPa (7.3 kg/cm ² , 104 psi) with lever in half or more throttle position.

Pressure

Testing (cont'd)

Throttle Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 1,000 min⁻¹ (rpm).
3. Disconnect the throttle control cable from the throttle lever and set the control lever in full throttle position.

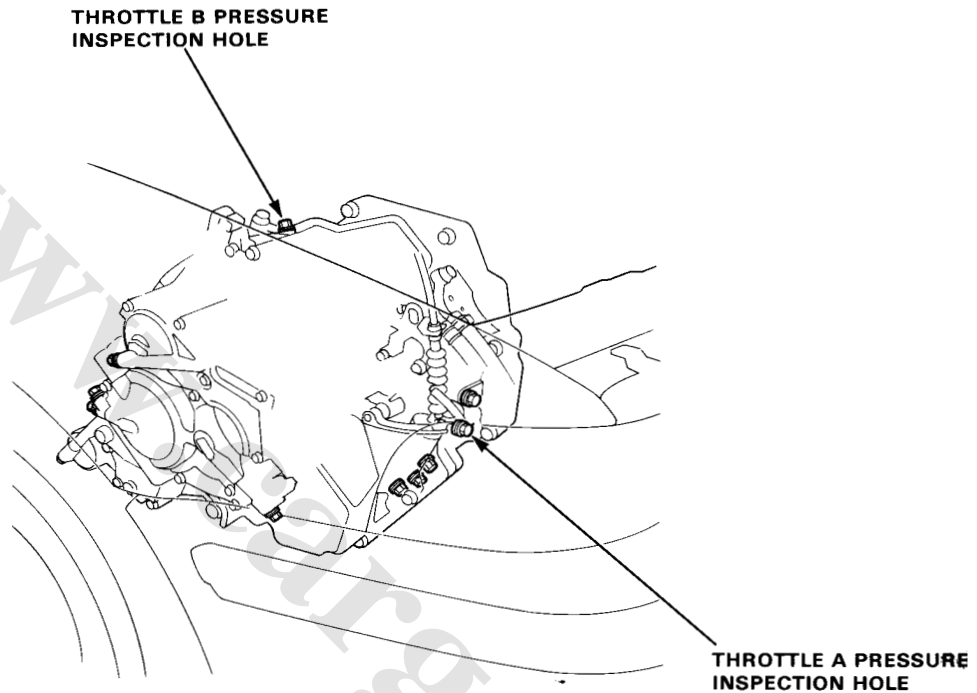


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE		
				Standard	Service Limit	
Throttle A	D ₁ or D ₂	No or low Throttle A pressure	Throttle valve A	with CATA	514–530 kPa (5.25–5.4 kg/cm ² , 74–76 psi)	509 kPa (5.2 kg/cm ² , 73 psi)
				without CATA	485–500 kPa (4.95–5.1 kg/cm ² , 70–72 psi)	480 kPa (4.9 kg/cm ² , 69 psi)
Throttle B	D ₁ or D ₂	No or low Throttle B pressure	Throttle valve B	760–808 kPa (7.75–8.25 kg/cm ² , 110–117 psi)	710 kPa (7.25 kg/cm ² , 103 psi)	



Governor Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Raise the front of the car and support with safety stands.
3. Run the vehicle at 60 km/h (38 mph).

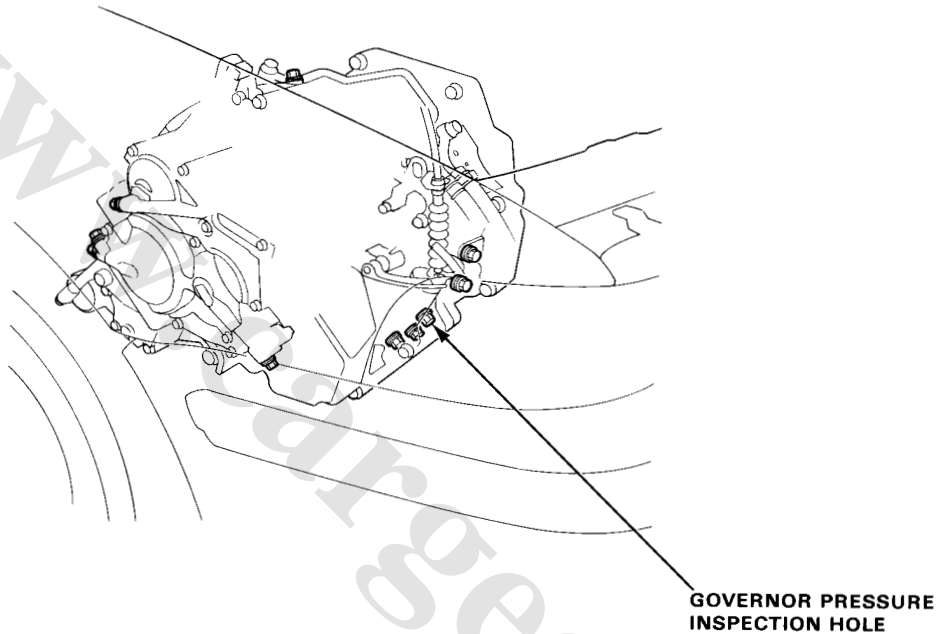

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE		
				Standard	Service Limit	
Governor	D ₂ or D ₁	No or low governor pressure	Governor valve	with CATA	225–235 kPa (2.3–2.4 kg/cm ² , 32–34 psi)	220 kPa (2.25 kg/cm ² , 32 psi)
				without CATA	166–176 kPa (1.7–1.8 kg/cm ² , 24–25 psi)	

Stall Speed

Test

CAUTION:

- To prevent transmission damage, do not test stall speed for more than 10 seconds at a time.
- Do not shift the lever while raising the engine speed.
- Be sure to remove the pressure gauge before testing stall speed.

1. Engage parking brake and block the front wheels.
2. Connect safety chains to both front two hooks and attach, with minimum slack, to some strong stationary object.
3. Connect tachometer, and start the engine.
4. After the engine has warmed up to normal operating temperature, shift into **D₄**.
5. Fully depress the brake pedal and accelerator for 6 to 8 seconds, and note engine speed.
6. Allow 2 minutes for cooling, then repeat same test in **1** and **R**.

Stall speed in **D₄**, **1** and **R** must be the same, and must also be within limits:

NOTE:


Stall speed test must be made only for checking the cause of trouble.

Stall Speed RPM:

Specification: 2,500 min⁻¹ (rpm)

Service Limit: 2,350—2,650 min⁻¹ (rpm)

TROUBLE	PROBABLE CAUSE
Stall rpm high in D₄ , 1 & R	<ul style="list-style-type: none"> • Low fluid level or oil pump output. • Clogged oil strainer. • Pressure regulator valve stuck closed. • Slipping clutch.
Stall rpm high in R	<ul style="list-style-type: none"> • Slippage of 4th clutch
Stall rpm high in D₄ & 1	<ul style="list-style-type: none"> • Slippage of 1st clutch or 1st gear one-way clutch
Stall rpm low in D₄ , 1 & R	<ul style="list-style-type: none"> • Engine output low • Torque converter one-way clutch slipping

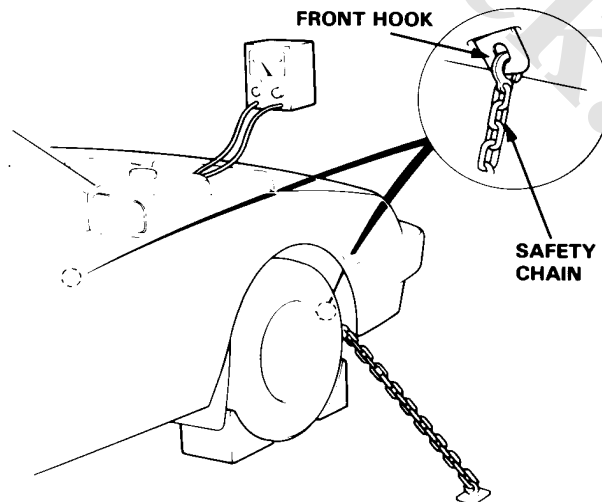




Fluid Level

Checking/Changing

Checking

With the car on level ground, pull the transmission dipstick and check the level of fluid immediately after the engine is shut off (within one minute). The fluid level should be between the full and low marks. Push the dipstick all the way in to check the fluid level. If the level is at, or below, the low mark, add DEXRON-II type automatic transmission fluid.

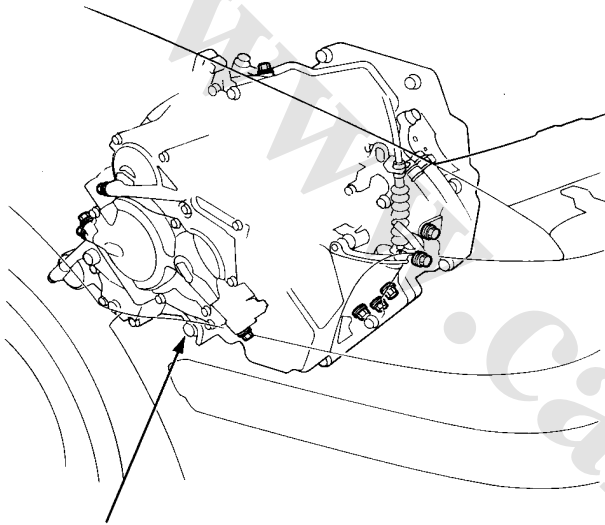

DRAIN PLUG
40 N·m (4.0 kg-m, 29 lb-ft)


Changing

1. Bring the transmission up to operating temperature by driving the car. Park the car on level ground, turn the engine off, then remove drain plug.
2. Reinstall the drain plug with a new washer, then refill the transmission to the full mark on the dipstick.

Automatic transmission Capacity:

2.4 l (2.5 us qts, 2.1 Imp qts) at change

6.0 l (6.3 us qts, 5.3 Imp qts) after overhaul

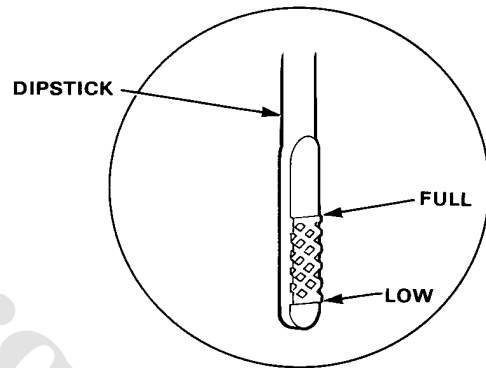




Special Tools
Component Location
Circuit Diagram
Troubleshooting Procedures
Symptom-to-Component Chart
 Electrical System
Electrical Troubleshooting
Lock-Up control Solenoid Valve A/B
Shift control Solenoid Valve A/B
S Switch
A/T Speed Sensor
Symptom-to-Component Chart
 Hydraulic System
Road Test
Stall Speed
Pressure
Fluid Level
Transmission
 Removal
 Installation
Gear shift Selector
Shift Cable
 Adjustment
 Removal/Installation
Throttle Control Cable


www.CarGeek.ir

Special Tool

Special Tool

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07406-0020003	Oil Pressure Gauge Set	1	Component Tool
①-1	07406-0020201	Oil Pressure Gauge Hose	1	
②	07LAJ-PT30100	ECU Test Harness	1	

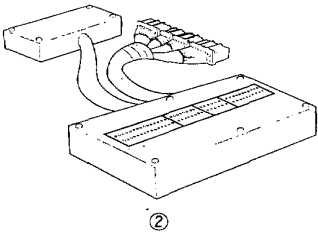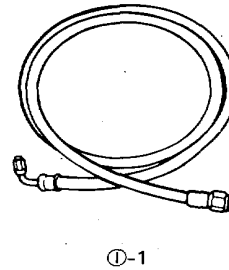
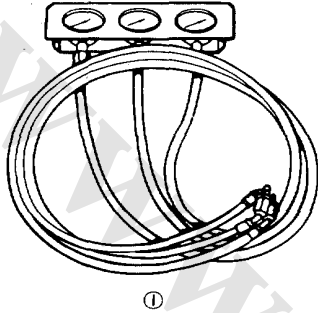




www.cargeek.ir



Component Location

LHD:

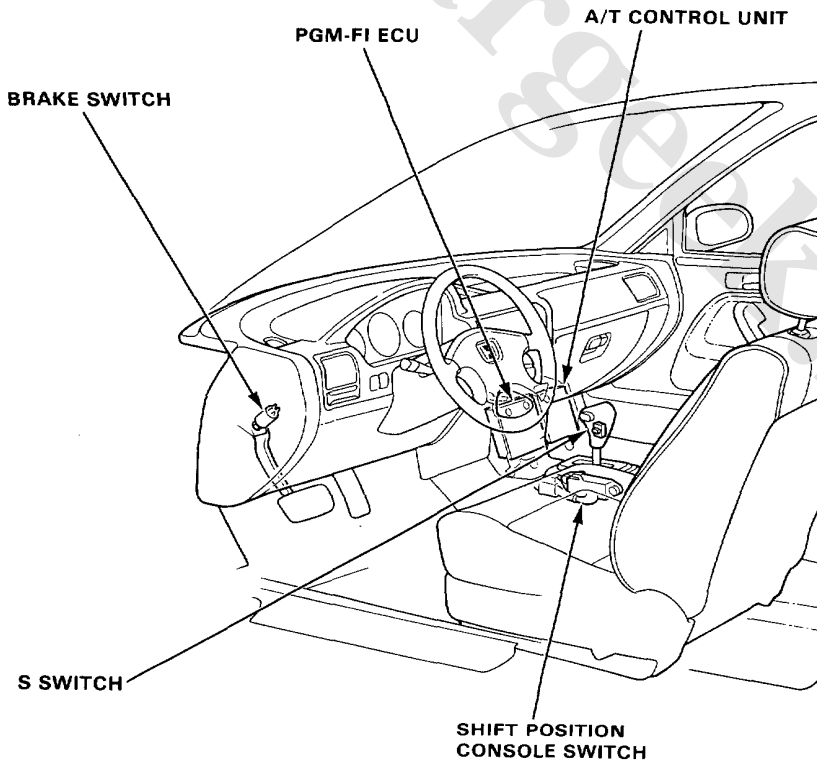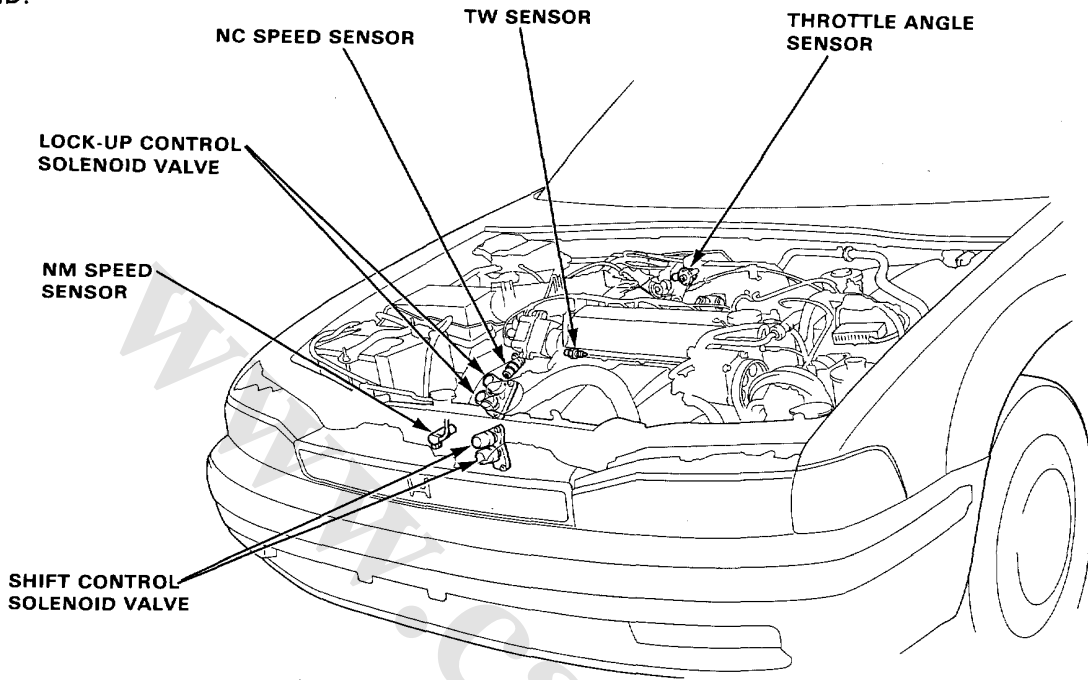




RHD:

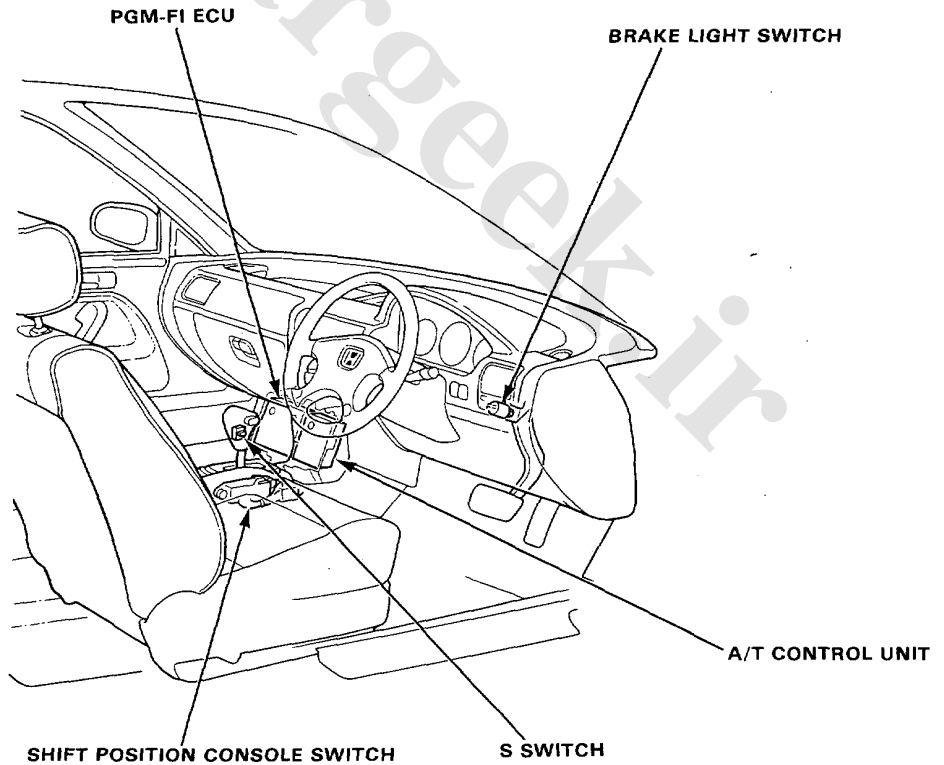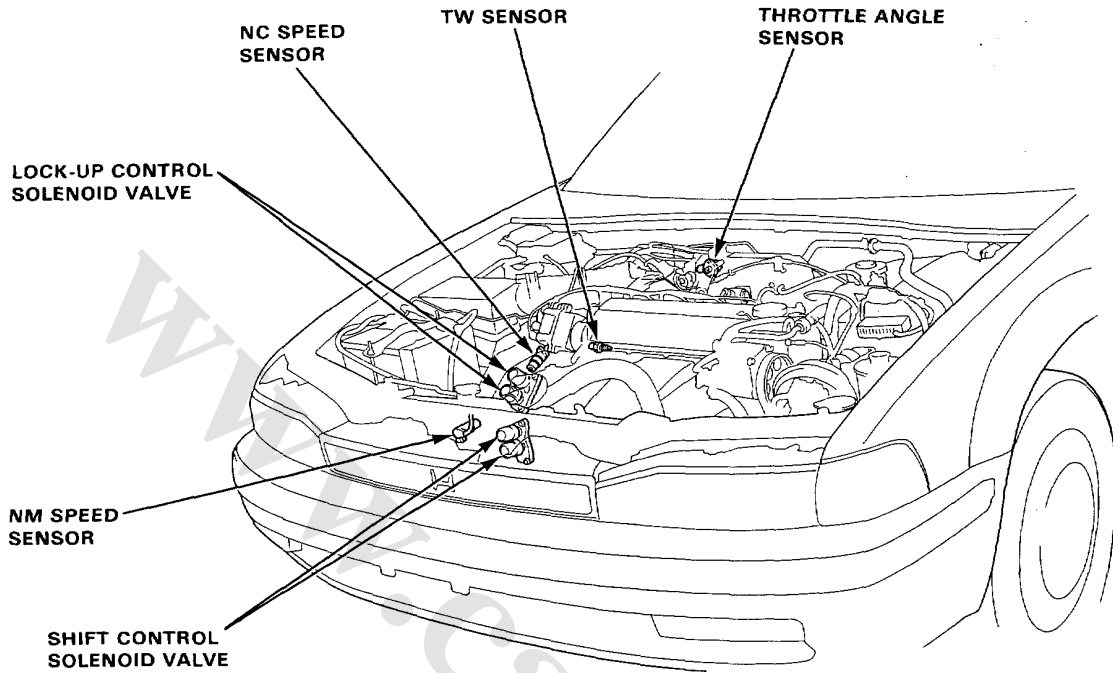


Circuit Diagram

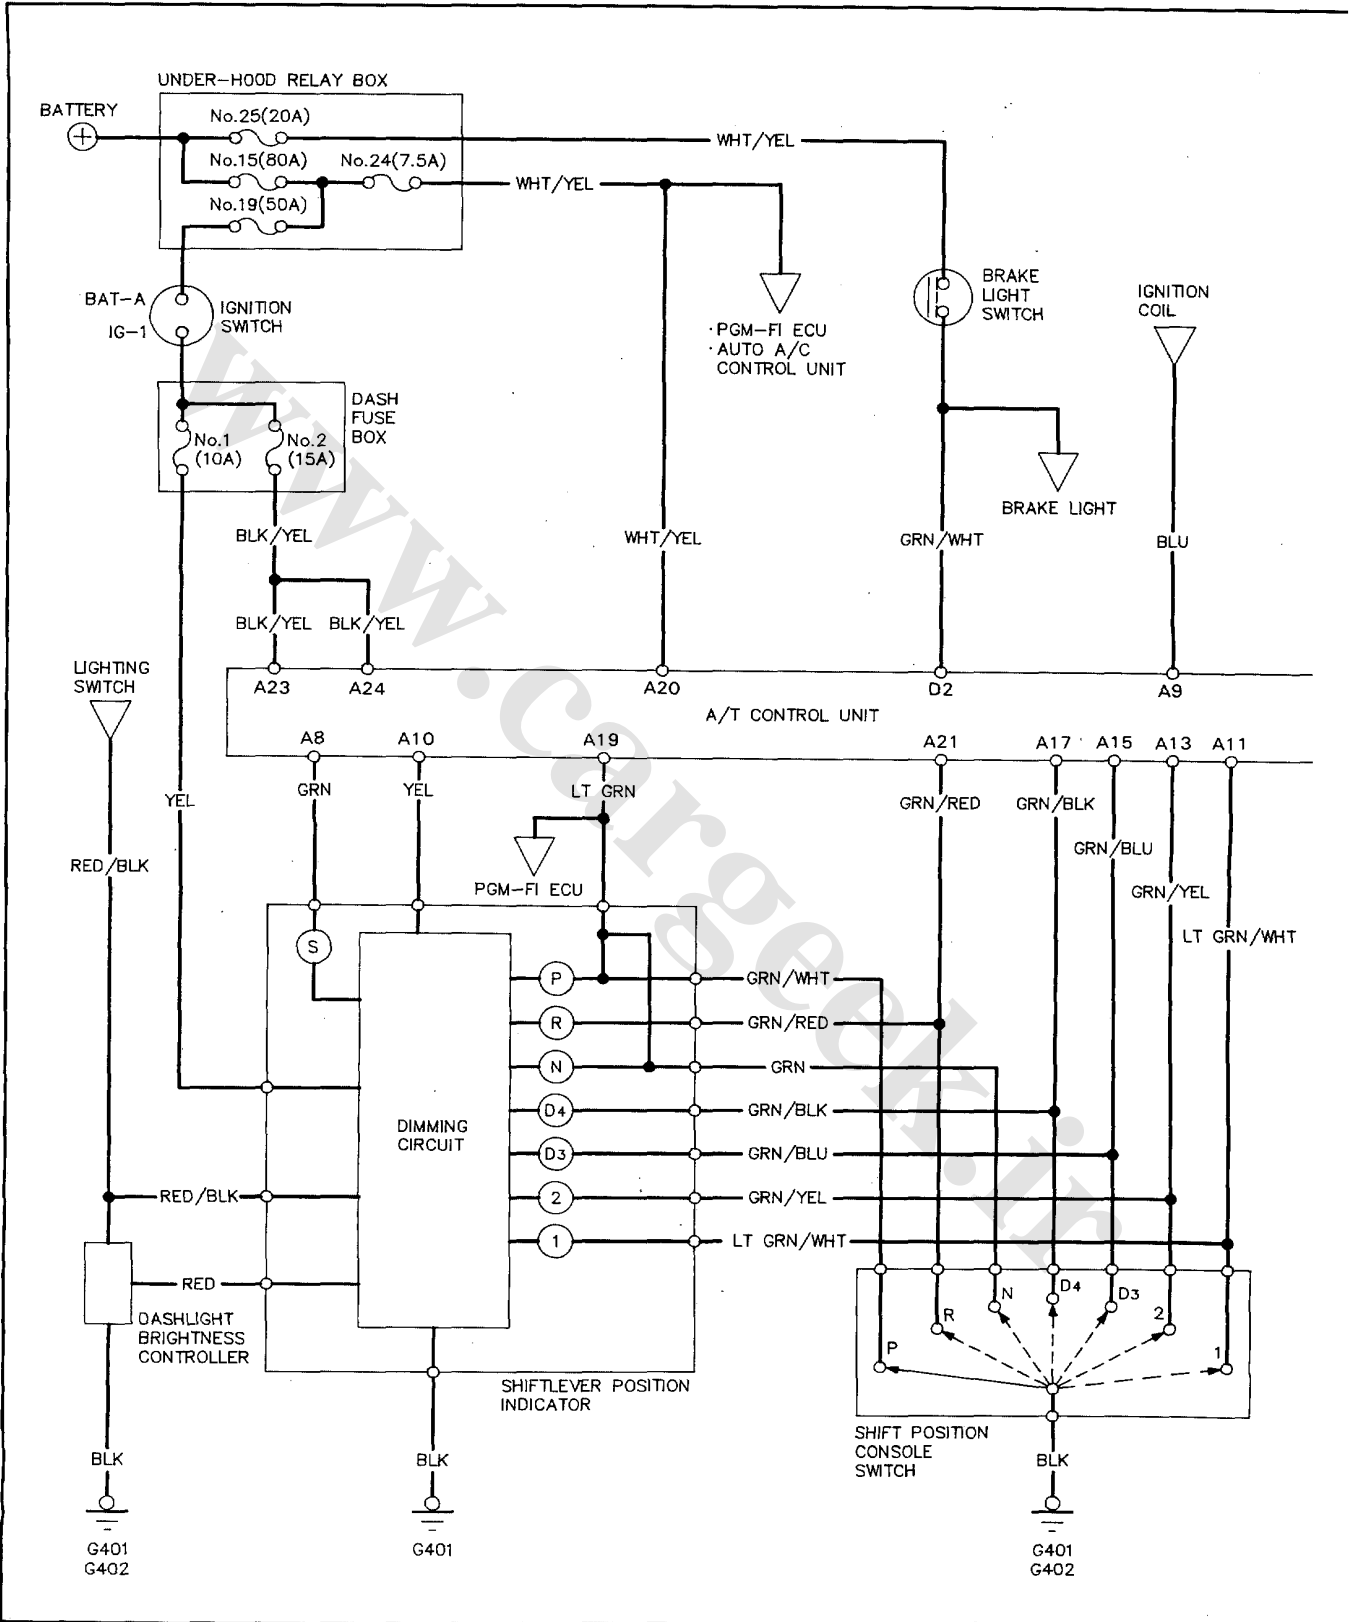





Problem codes 1 through 9 are indicated by individual short blinks, Problem codes 10 through 15 are indicated by a series of long and short blinks. One long blink equals 10 short blinks. Add the long and short blinks together to determine the problem code. After determining the problem code, refer to the electrical system Symptom-to-Component Chart on page 9-28.

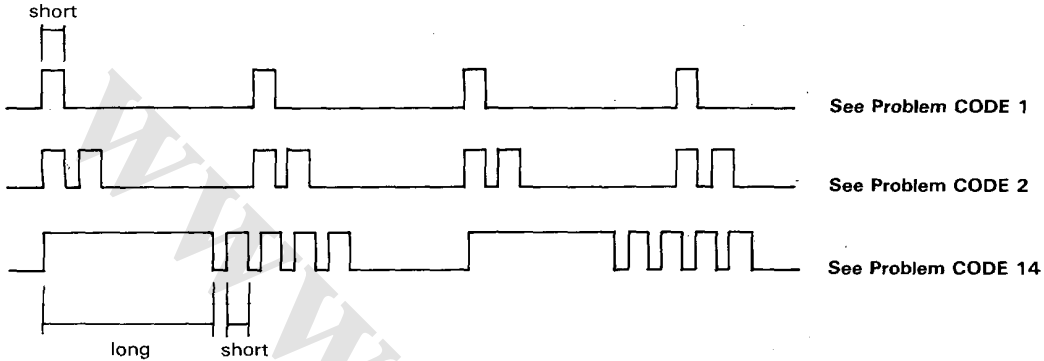

Some PGM-FI problems will also make the S indicator light come on. After repairing the PGM-FI system, disconnect the Back Up fuse (7.5 A) in the under-hood relay box for more than 10 seconds to reset the A/T control unit memory.

NOTE: Disconnecting the Back up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

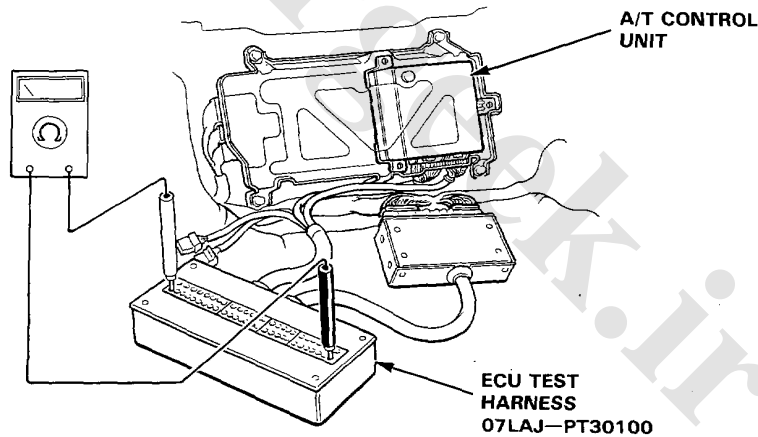

Terminal Locations

NOTE:

- Only the A and D sections of the ECU test harness are used for A/T troubleshooting.
- Unless otherwise noted, use only the Digital Multimeter for testing.

Symptom-to-Component Chart

Electrical System

Number of LED display blinks	S indicator light	Possible Cause	Symptom	Refer to page
1	Blinks	<ul style="list-style-type: none"> • Disconnected lock-up control solenoid valve A coupler • Short or open in lock-up control solenoid valve A wire • Faulty lock-up control solenoid valve A 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. • Lock-up clutch does not disengage. • Frequent engine stalling. 	9-30
2	Blinks	<ul style="list-style-type: none"> • Disconnected lock-up control solenoid valve B coupler • Short or open in lock-up control solenoid valve B wire • Faulty lock-up control solenoid valve B 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-31
3	Blinks or OFF	<ul style="list-style-type: none"> • Disconnected throttle angle sensor coupler • Short or open in throttle angle sensor wire • Faulty throttle angle sensor 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-32
4	Blinks	<ul style="list-style-type: none"> • Disconnected sensor coupler • Short or open in speed sensor wire • Faulty speed sensor 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-33
5	Blinks	<ul style="list-style-type: none"> • Short in shift position console switch wire • Faulty shift position console switch 	<ul style="list-style-type: none"> • Fails to shift other than 2nd ↔ 4th gears. • Lock-up clutch does not engage. 	9-34
6	OFF	<ul style="list-style-type: none"> • Disconnected shift position console switch coupler • Open in shift position console switch wire • Faulty shift position console switch 	<ul style="list-style-type: none"> • Fails to shift other than 2nd ↔ 4th gears. • Lock-up clutch does not engage. • Lock-up clutch engages and disengages alternately. 	9-36
7	Blinks	<ul style="list-style-type: none"> • Disconnected shift control solenoid valve A coupler • Short or open in shift control solenoid valve A wire • Faulty shift control solenoid valve A 	<ul style="list-style-type: none"> • Fails to shift (between 1st ↔ 4th, 2nd ↔ 4th or 2nd ↔ 3rd gears only). • Fails to shift (stuck in 4th gear) 	9-38
8	Blinks	<ul style="list-style-type: none"> • Disconnected shift control solenoid valve B coupler • Short or open in shift control solenoid valve B wire • Faulty shift control solenoid valve B 	<ul style="list-style-type: none"> • Fails to shift (stuck in 1st or 4th gears). 	9-39



Number of LED display blinks	S indicator light	Possible Cause	Symptom	Refer to page
9	Blinks	<ul style="list-style-type: none"> • Disconnected NC speed sensor coupler • Short or open in the NC speed sensor wire • Faulty NC speed sensor 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-40
10	Blinks	<ul style="list-style-type: none"> • Disconnected water temperature sensor coupler • Short or open in the water temperature sensor wire • Faulty water temperature sensor 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-42
11	OFF	<ul style="list-style-type: none"> • Disconnected ignition coil coupler • Short or open in ignition coil wire • Faulty ignition coil 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-44
14	OFF	<ul style="list-style-type: none"> • Short or open in FAS wire • Trouble in PGM-FI unit 	<ul style="list-style-type: none"> • Transmission jerks hard when shifting. 	9-46
15	OFF	<ul style="list-style-type: none"> • Disconnected NM speed sensor coupler • Short of open in NM speed sensor wire • Faulty NM speed sensor 	<ul style="list-style-type: none"> • Transmission jerks hard when shifting. 	9-50

- If a customer describes the symptoms for codes 3, 6, or 11, yet the LED is not blinking, it will be necessary to recreate the symptom by test driving, and then checking the LED with the ignition still ON.
- If the LED displays codes other than those listed above or stays lit continuously, the control unit is faulty.
- Sometimes the S indicator light and the Check Engine warning light may come on simultaneously. If so, check the PGM-FI system according to the number of blinks on the PGM-FI ECU self-diagnosing indicator, then reset the memory by removing the Back Up fuse in the under hood relay box for more than 10 seconds. Drive the vehicle for several minutes at speed over 50 km/h (30 mph), then recheck the lights.

NOTE: Disconnecting the Back up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

Electrical Troubleshooting

Troubleshooting Flowchart

Self-diagnosis LED indicator blinks once.


Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A6 (YEL) and A25 (BLK/RED) terminals.

Is there voltage?

Repair short to power source in YEL wire between the A6 terminal and the lock-up control solenoid valve A.

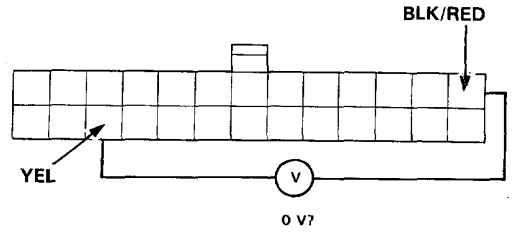


Turn the ignition switch OFF.

Disconnect the 2P connector from the lock-up control solenoid valve assembly.

Check for continuity between the A6 (YEL) and A25 (BLK/RED) terminals.

Is there continuity?

Repair short to ground in YEL wire between the A6 terminal and the lock-up control solenoid valve A.

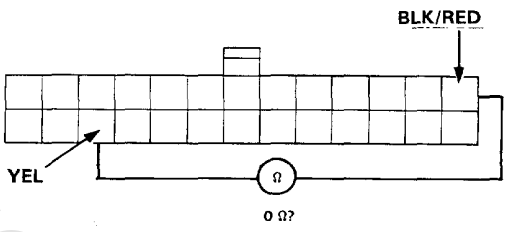


Connect the 2P connector to the lock-up control solenoid valve assembly.


Measure the resistance between the A6 (YEL) and A25 (BLK/RED) terminals.

Is the resistance 12–24 Ω?

Check for open in YEL wire between the A6 terminal and the lock-up control solenoid valve A. If wire is OK, check the Lock-up Control Solenoid Valve A.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

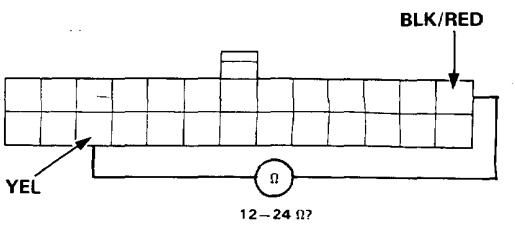



Self-diagnosis LED indicator blinks twice.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A4 (GRN/BLK) and A25 (BLK/RED) terminals.

Is there voltage? YES

Repair short to power source in GRN/BLK wire between the A4 terminal and the lock-up control solenoid valve B.

NO

Turn the ignition switch OFF.

Measure the resistance between the A4 (GRN/BLK) and A25 (BLK/RED) terminals.

Is the resistance 12–24 Ω? NO

Check for open in GRN/BLK wire between the A4 terminal and the lock-up control solenoid valve B. If wire is OK, check the Lock-Up Control Solenoid Valve B.

YES

Disconnect the 2P connector from the lock-up control solenoid valve assembly.

Check for continuity between the A4 (GRN/BLK) and A25 (BLK/RED) terminals.




Is there continuity? YES

Repair short to ground in GRN/BLK wire between the A4 terminal and the lock-up control solenoid valve B.

NO

Connect the 2P connector to the lock-up control solenoid valve assembly.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

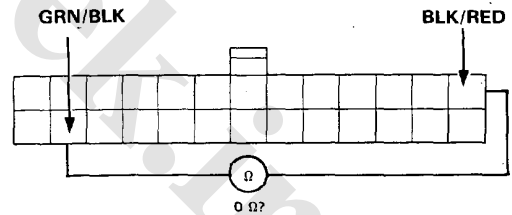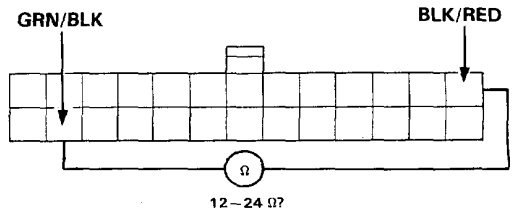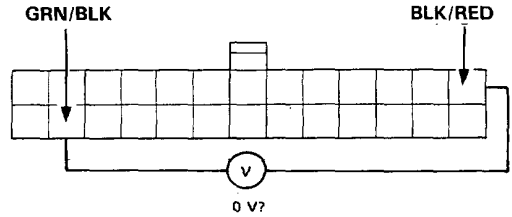

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis LED indicator blinks three times.

Turn the ignition switch ON.

Check whether the PGM-FI LED display blinks (Section 6).

Does the LED blink?

YES
Repair the PGM-FI System.

NO
Turn the ignition switch OFF.

Disconnect the 26P and 22P connectors from the control unit.

Turn the ignition switch ON.

Measure the voltage between the D18 (LT GRN/BLK) and A25 (BLK/RED) terminals.

Is the voltage 4.75–5.25 V?

NO
Repair open or short in LT GRN/BLK wire between the D18 terminal and the D14 terminal of the PGM-FI ECU.

YES
Turn the ignition switch OFF.

Connect the ECU test harness between the connectors and the control unit.



Turn the ignition switch ON.

Measure the voltage between the D7 and A25 terminals.

Is the voltage 0.44–0.56 V?*

NO
Repair open or short in RED/BLK wire between the D7 terminal and the throttle angle sensor.

YES * ± 10%
Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

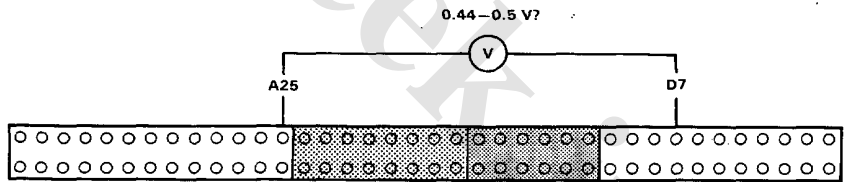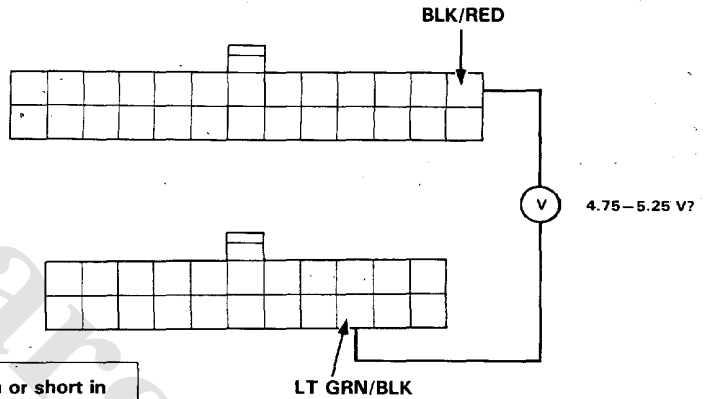



Self-diagnosis LED indicator blinks four times.

Jack up the front of the car and block one wheel.

Shift transmission to **N**.

Disconnect the 26P and 22P connectors from the control unit.

Turn the ignition switch ON.

Rotate the front wheel and check for voltage between the A25 (BLK/RED) and D9 (ORN) terminals.


Does the voltage 0–5 V appear alternately?

YES

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

⚠ WARNING

- Set the parking brake securely and block the rear wheels.
- Jack up the front of the car and support with a rigid rack.

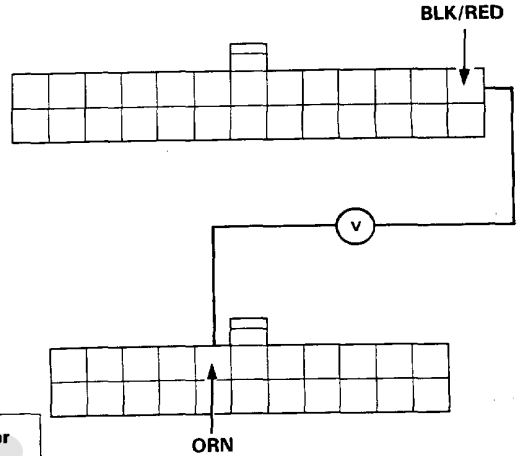

Check for short or open in ORN wire between the D9 terminal and the Speed Sensor. If wire is OK, check the Speed Sensor.

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis LED indicator blinks five times.

Turn the ignition switch ON.

Observe the A/T shift indicator and select each position separately.

Does the indicator light properly?

NO See A/T shift position indicator inspection (Section 16).

YES

Turn the ignition switch OFF.

Connect the ECU test harness between the control unit and connectors.

Turn the ignition switch ON.

Shift to other than **R** position.

Measure the voltage between the A21 (GRN/RED) and A25 (BLK/RED) terminals.

Is there battery voltage?

NO Check for short in GRN/RED wire between the A21 terminal and the shift position console switch. If wire is OK, check for loose connectors. If necessary, substitute a known-good control unit and recheck.

YES

Shift to other than **N** and **P** position.



Measure the voltage between the A19 (LT GRN) and A25 (BLK/RED) terminals.

Is there battery voltage?

NO Check for short in LT GRN wire between the A19 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

YES

To page 9-35

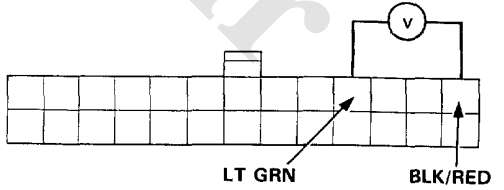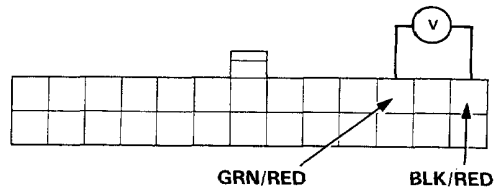



From page 9-34

Shift to other than **D4** position.

Measure the voltage between the A17 (GRN/BLK) and A25 (BLK/RED) terminals.

Is there battery voltage? **NO**

YES

Shift to other than **D3** position.

Measure the voltage between the A15 (GRN/BLU) and A25 (BLK/RED) terminals.

Is there battery voltage? **NO**

YES

Shift to other than **2** position.

Measure the voltage between the A13 (GRN/YEL) and A25 (BLK/RED) terminals.

Is there battery voltage? **NO**

YES

Shift to other than **1** position.

Measure the voltage between the A11 (LT GRN/WHT) and A25 (BLK/RED) terminals.

Is there battery voltage? **NO**

YES





Substitute a known-good control unit and recheck.

Check for short in GRN/BLK wire between the A17 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

Check for short in GRN/BLU wire between the A15 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

Check for short in GRN/YEL wire between the A13 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.




Check for short in LT GRN/WHT wire between the A11 terminal and shift position console switch or shift position indicator. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

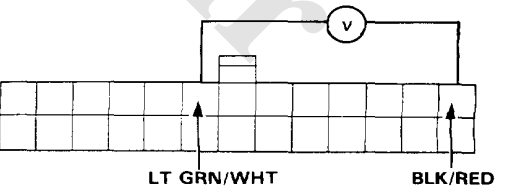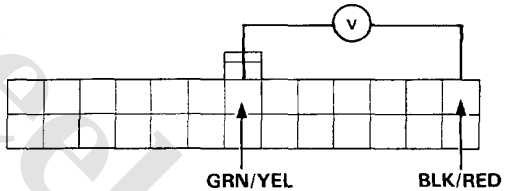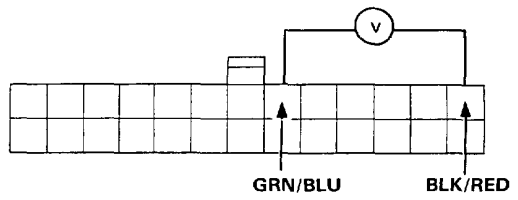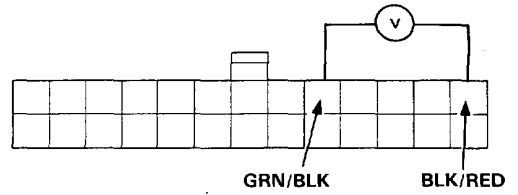

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

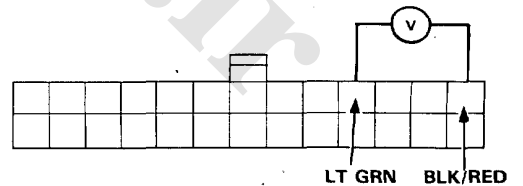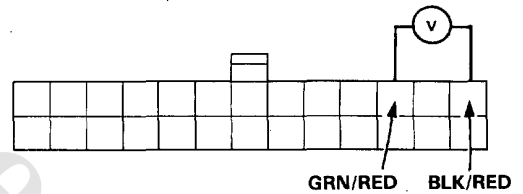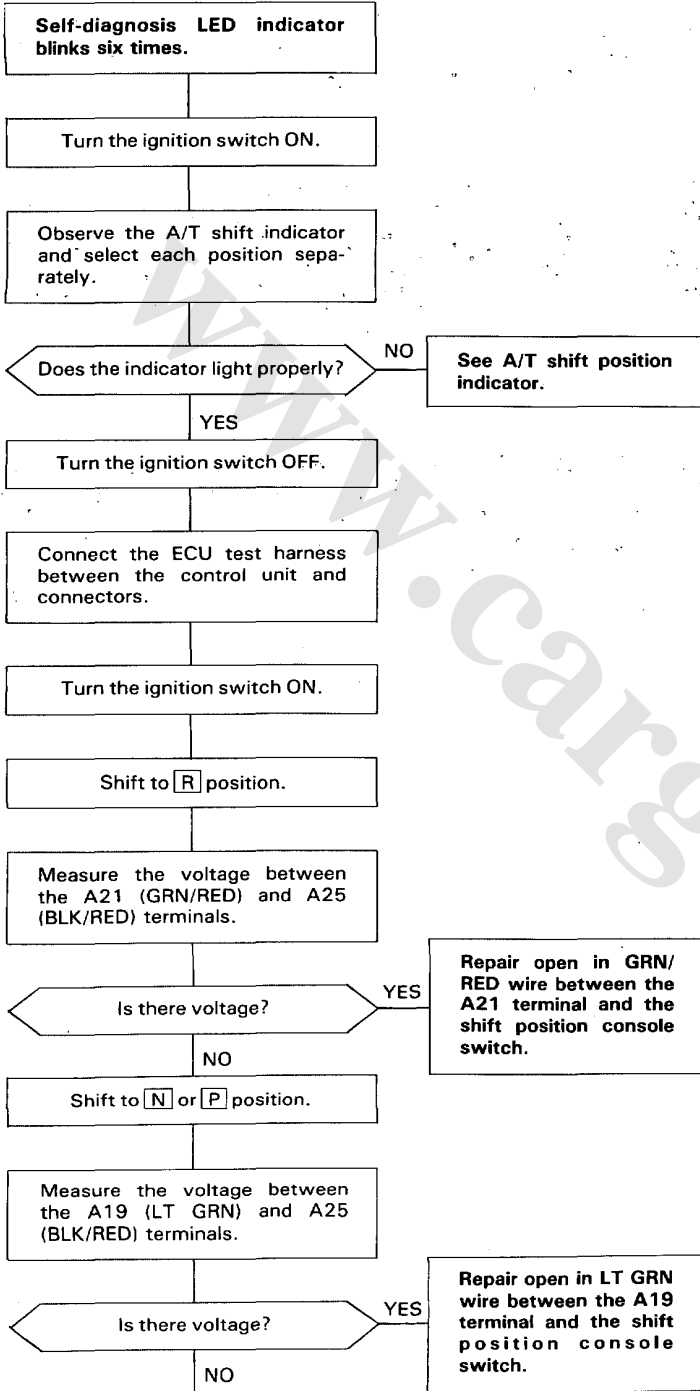



From page 9-36

Shift to **D4** position.

Measure the voltage between the A17 (GRN/BLK) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair open in GRN/BLK wire between the A17 terminal and the shift position console switch.

NO

Shift to **D3** position.

Measure the voltage between the A15 (GRN/BLU) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair open in GRN/BLU wire between the A15 terminal and the shift position console switch.

NO

Shift to **2** position.

Measure the voltage between the A13 (GRN/YEL) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair open in GRN/YEL wire between the A13 terminal and the shift position console switch.

NO

Shift to **1** position.





Measure the voltage between the A11 (LT GRN/WHT) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair open in LT GRN/WHT wire between the A11 terminal and the shift position console switch.

NO

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

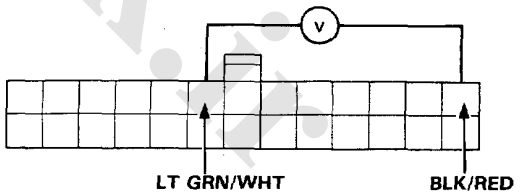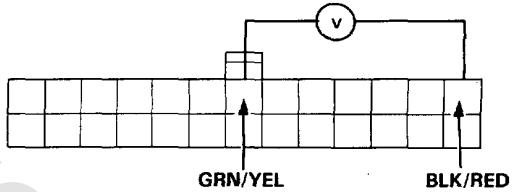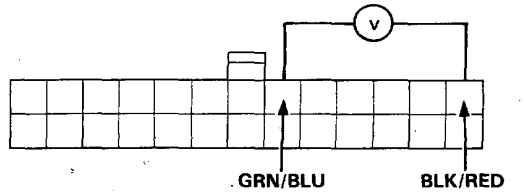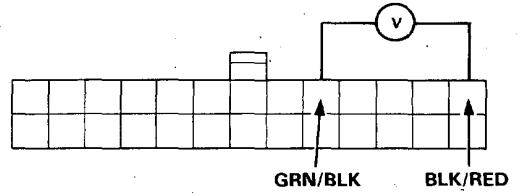

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis LED indicator blinks seven times.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A5 (BLU/YEL) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair short to power source in BLU/YEL wire between the A5 terminal and the shift control solenoid valve A.

Turn the ignition switch OFF.

Measure the resistance between the A5 (BLU/YEL) and A25 (BLK/RED) terminals.

Is the resistance 12–24 Ω?

NO
Check for open in BLU/YEL wire between the A5 terminal and the shift control solenoid valve A. If wire is OK, check the Shift Control Solenoid Valve A.

Disconnect the 2P connector from the shift control solenoid valve assembly.




Check for continuity between the A5 (BLU/YEL) and A25 (BLK/RED) terminals.

Is there continuity?

YES
Repair short to ground in BLU/YEL wire between the A5 terminal and the shift control solenoid valve A.

Connect the 2P connector to the shift control solenoid valve assembly.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

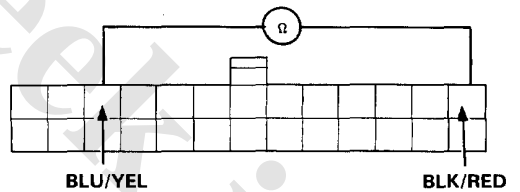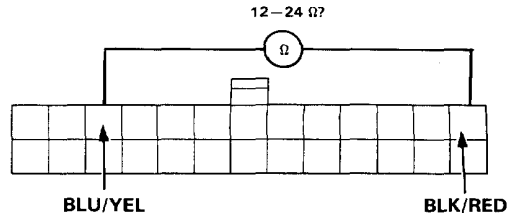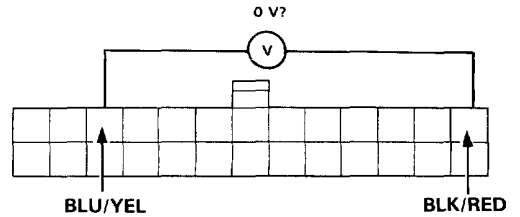



Self-diagnosis LED indicator blinks eight times.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A3 (GRN/WHT) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair short to power source in GRN/WHT wire between the A3 terminal and shift control solenoid valve B.

Turn the ignition switch OFF.

Measure the resistance between the A3 (GRN/WHT) and A25 (BLK/RED) terminals.

Is the resistance 12–24 Ω?

NO
Check for open in GRN/WHT wire between the A3 terminal and the shift control solenoid valve B. If wire is OK, check the Shift Control Solenoid Valve B.

Disconnect the 2P connector from the shift control solenoid valve assembly.




Check for continuity between the A3 (GRN/WHT) and A25 (BLK/RED) terminals.

Is there continuity?

YES
Repair short to ground in GRN/WHT wire between the A3 terminal and the shift control solenoid valve B.

Connect the 2P connector to the shift control solenoid valve assembly.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

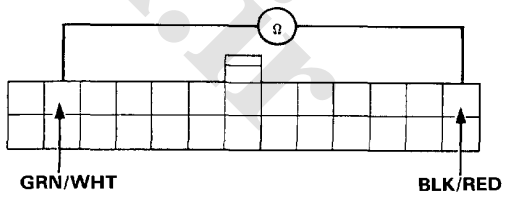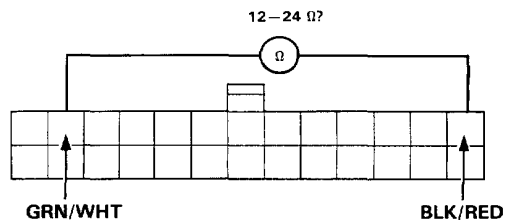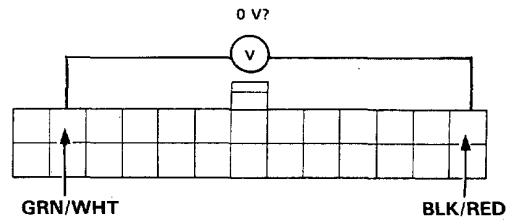

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis LED indicator blinks nine times.

Check the state of installation of the NC SPEED SENSOR.

OK?

NO

Reinstall and recheck.

YES

Disconnect the 2P connector from the NC speed sensor coupler.

Measure the resistance of the NC speed sensor.

Is the resistance 400–600 ohms? (20°C)

NO

Replace the NC speed sensor.

YES

Reconnect the NC speed sensor.

Disconnect the 22P coupler from the control unit.

Measure the resistance between D17 (LT GRN/GRN) and D15 (BLU/YEL).


Is the resistance 400–600 ohms? (20°C)


NO

To page 9-41

YES

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

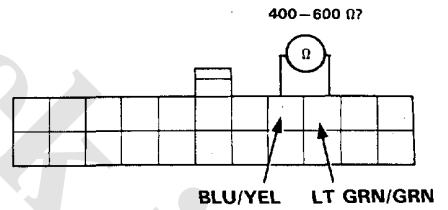



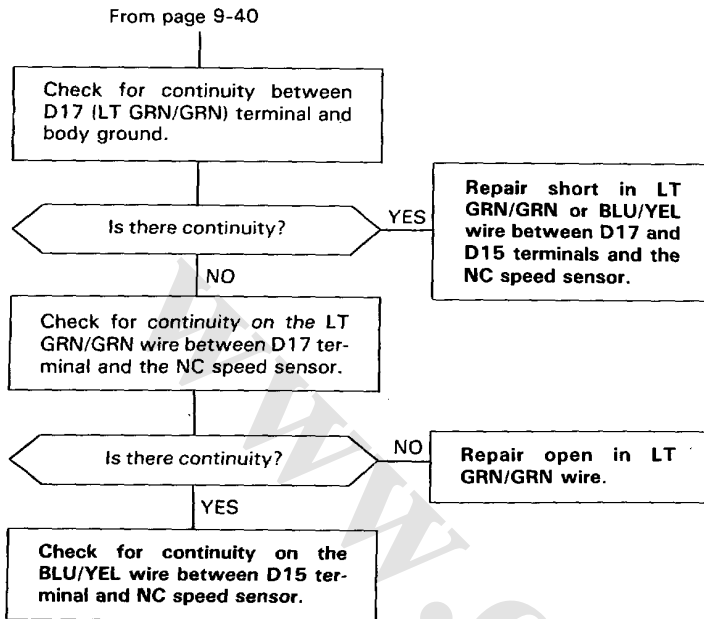


(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

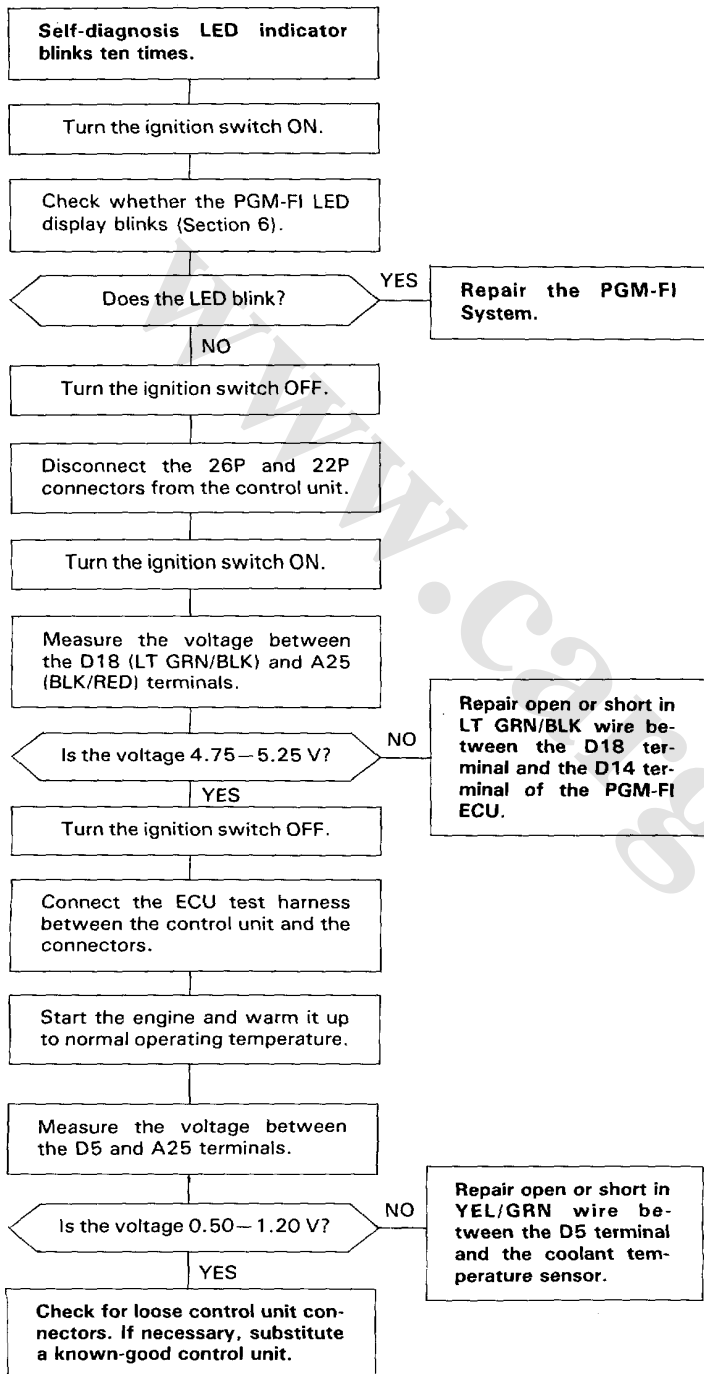


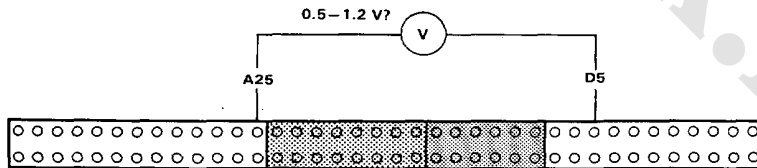
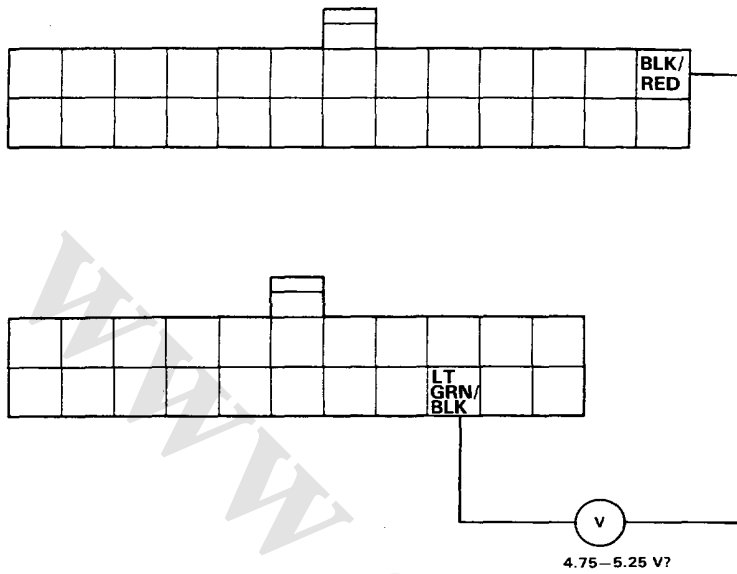


(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

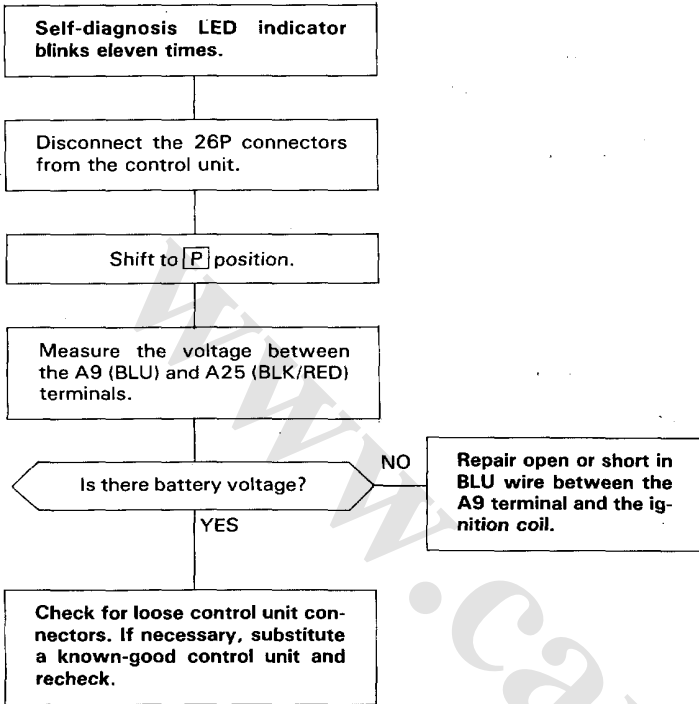

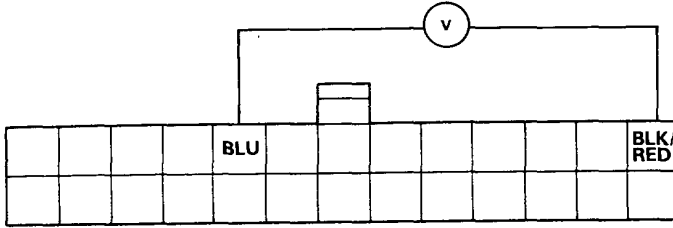

www.cargeek.ir

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis LED indicator blinks fourteen times.

Start the engine and warm it up to normal operating temperature.



Shift to **P** position.

Turn the ignition switch OFF.

Connect the ECU test harness between the control unit and connectors.


Turn the ignition switch ON and wait for at least two seconds.

Using an analog voltmeter, measure the voltage between the D16 (+) and A25 (-) terminals.

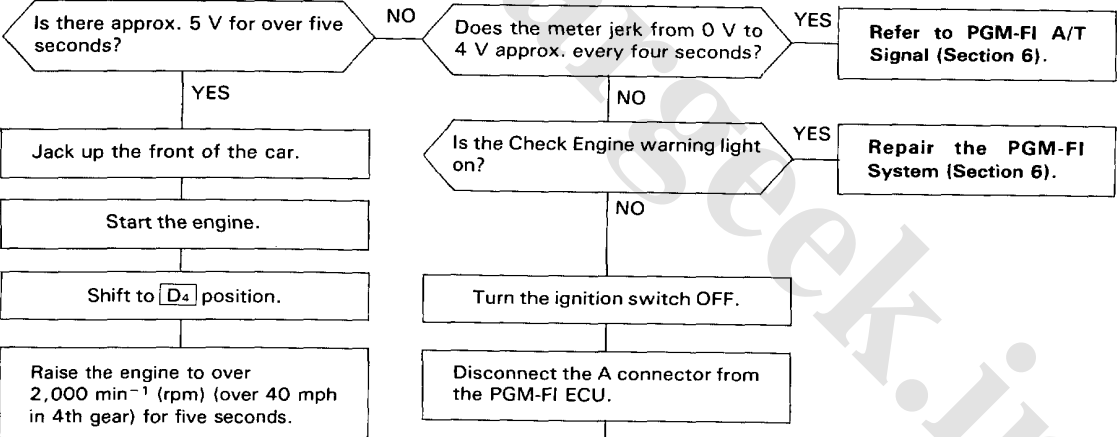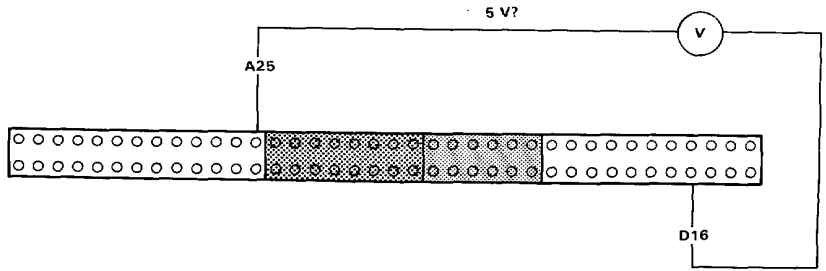

To page 9-47

To page 9-47

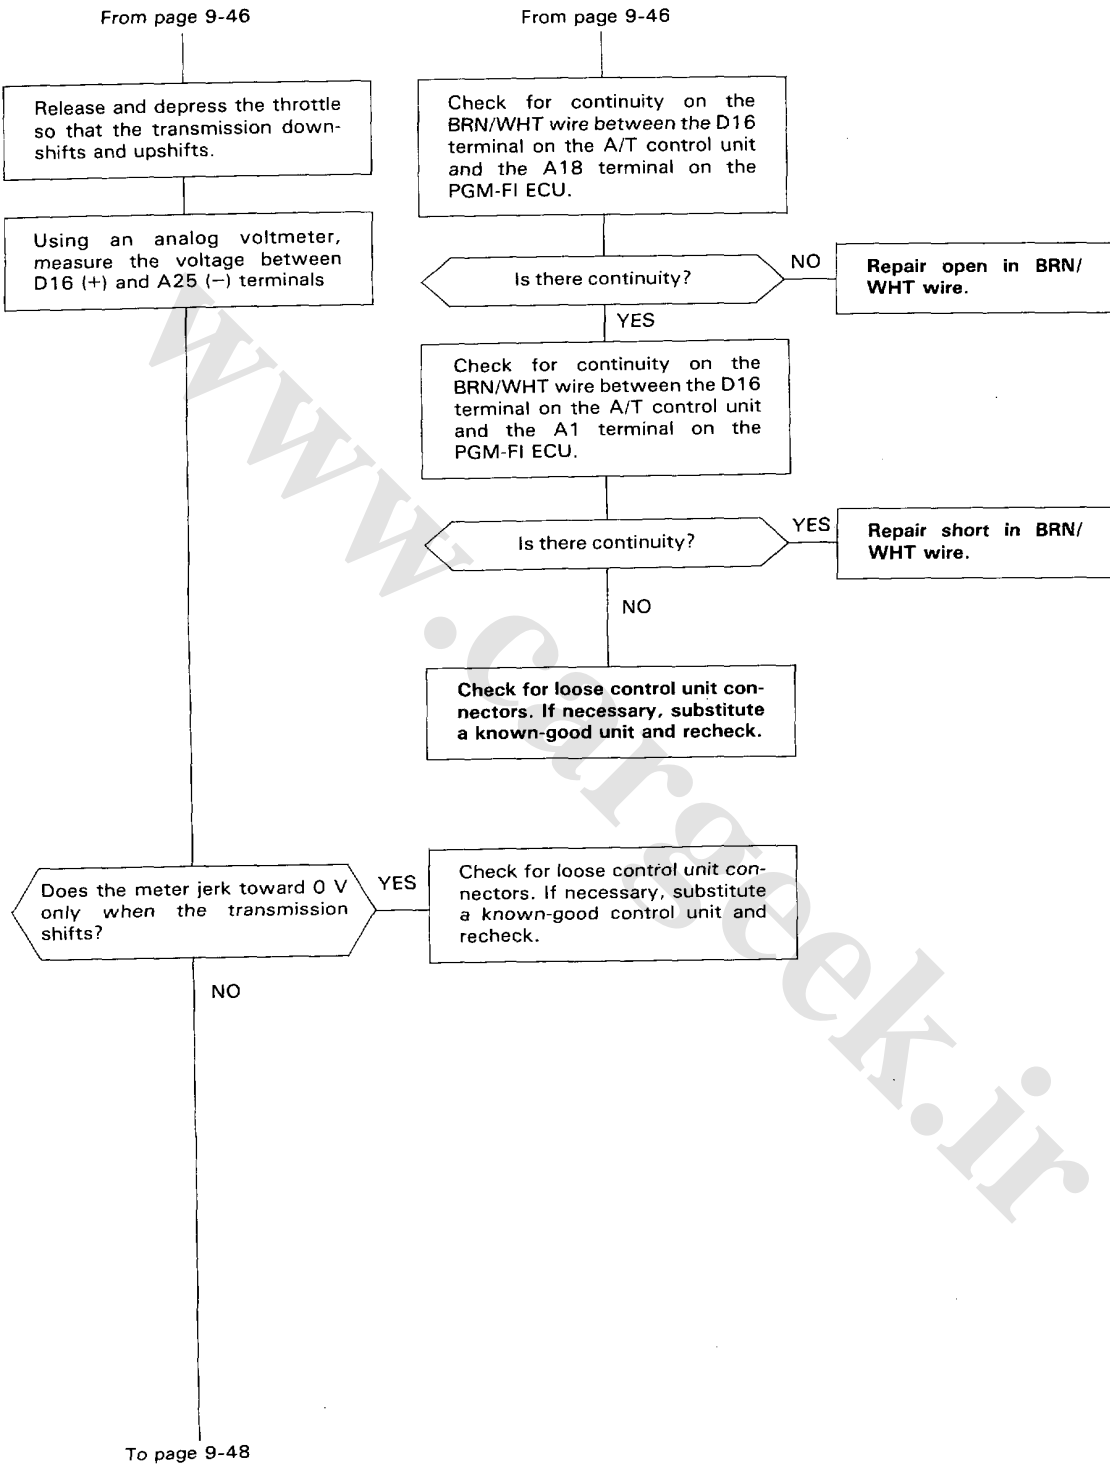

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

From page 9-47

Apply the brake and shift to **P** position.

Turn the ignition switch OFF.

Disconnect the A connector from the PGM-FI ECU.

Check for continuity on the BRN/WHT wire between the D16 terminal on the A/T control unit and the A18 terminal on the PGM-FI ECU.

Is there continuity?

NO


Repair open in BRN/WHT wire.

YES

To page 9-49



From page 9-48

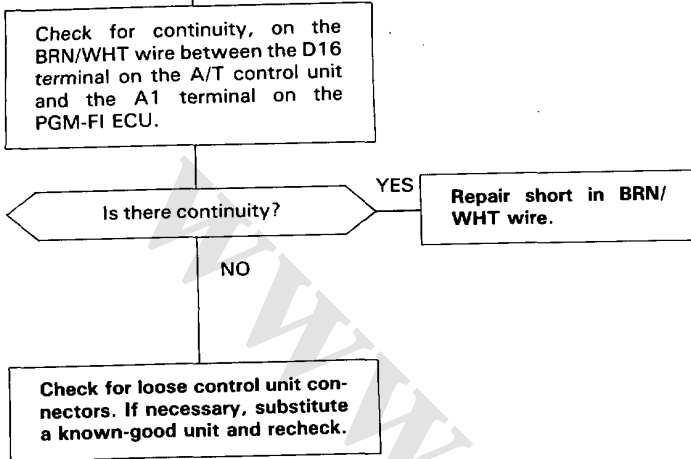

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

Self-diagnosis LED indicator blinks fifteen times.

Check the state of installation of NM (NC) speed sensor.

OK?

NO

Reinstall and recheck.

YES

Disconnect the 2P connector from the NM speed sensor.

Measure the resistance of the NM speed sensor.

Is the resistance 400–600 ohms?

NO

Replace the NM speed sensor.

YES

Reconnect the 2P connector to the NM speed sensor.

Disconnect the 22P connector from the control unit.

Measure the resistance between D19 (ORN/BLU) and D12 (WHT/BLU) terminals.

Is the resistance 400–600 ohms? (20°C)

NO

Check for continuity between D19 (ORN/BLU) terminal and body ground.

YES

Disconnect the 2P connector from the NC speed sensor.

Measure the resistance of the NC speed sensor.

To page 9-51

To page 9-51


Is there continuity?

YES

Repair short in ORN/BLU or WHT/BLU wires between D19 and D12 terminals and the NM speed sensor.

NO


Check for continuity between D19 (ORN/BLU) terminal and the NM speed sensor.

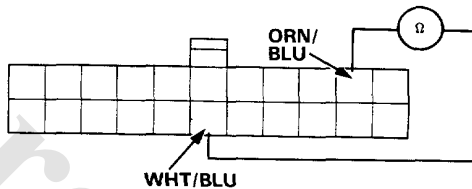



From page 9-50

From page 9-50

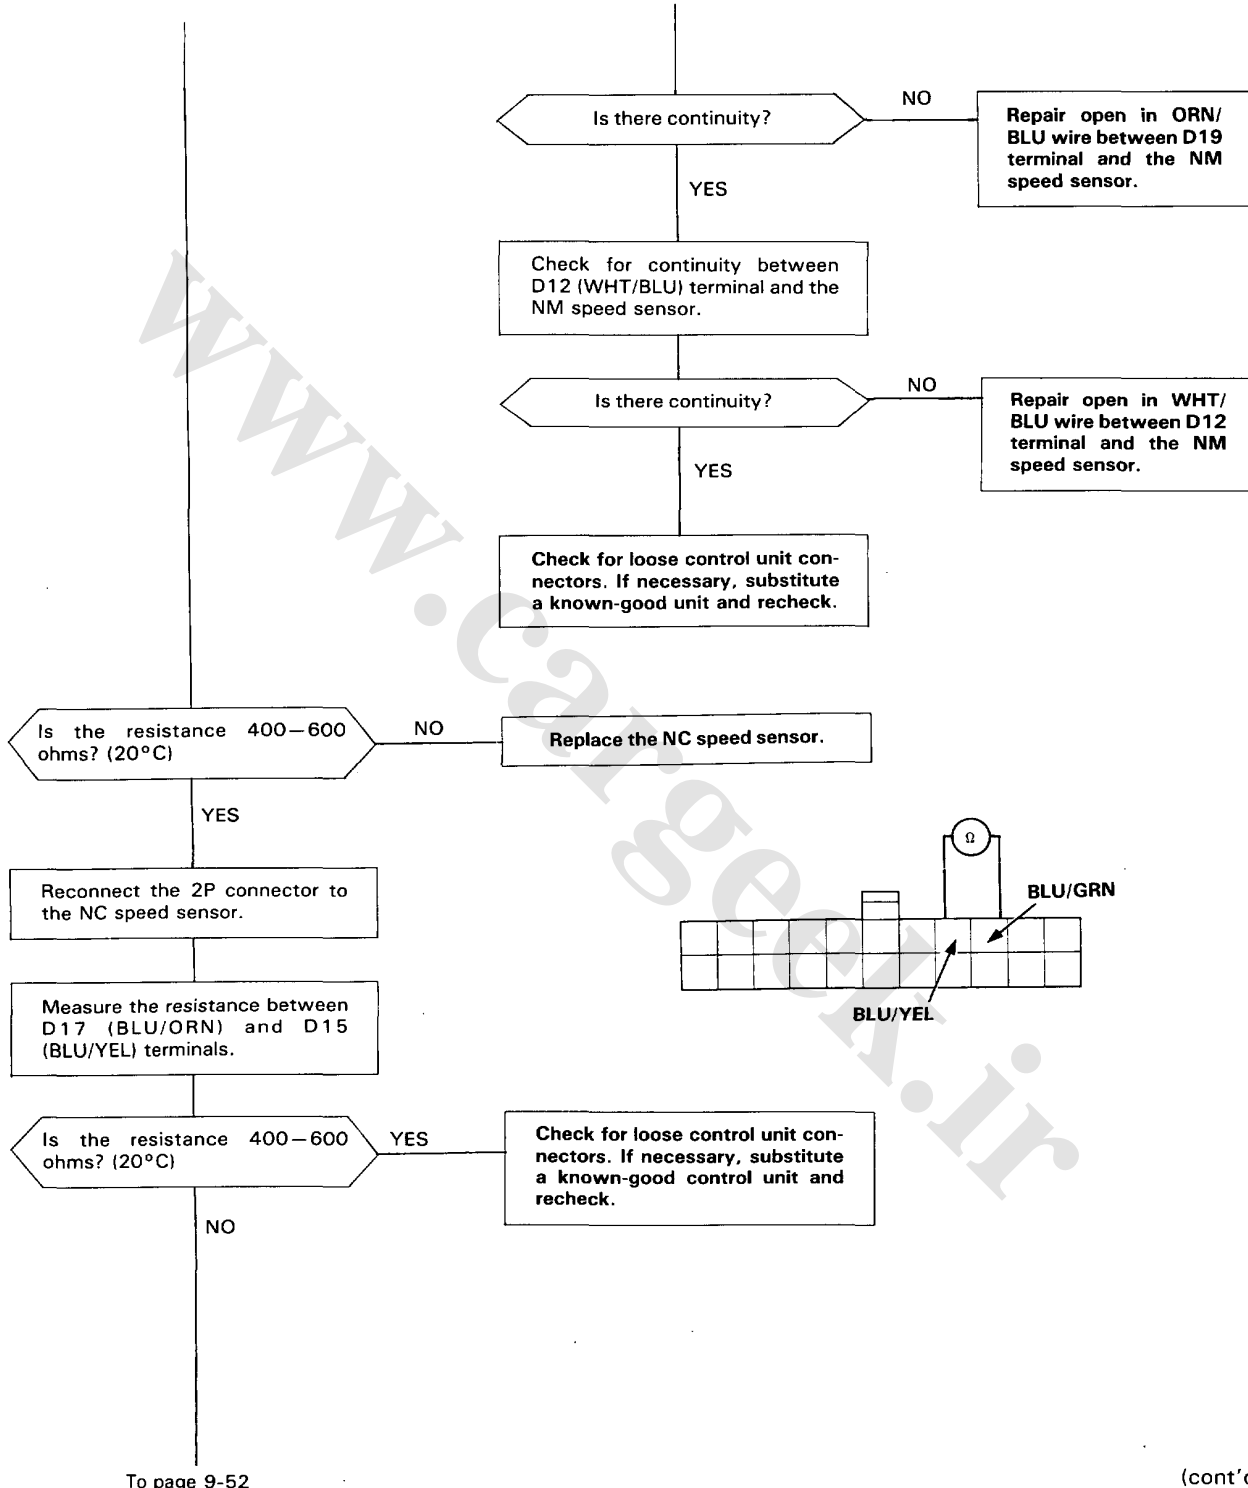



To page 9-52

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

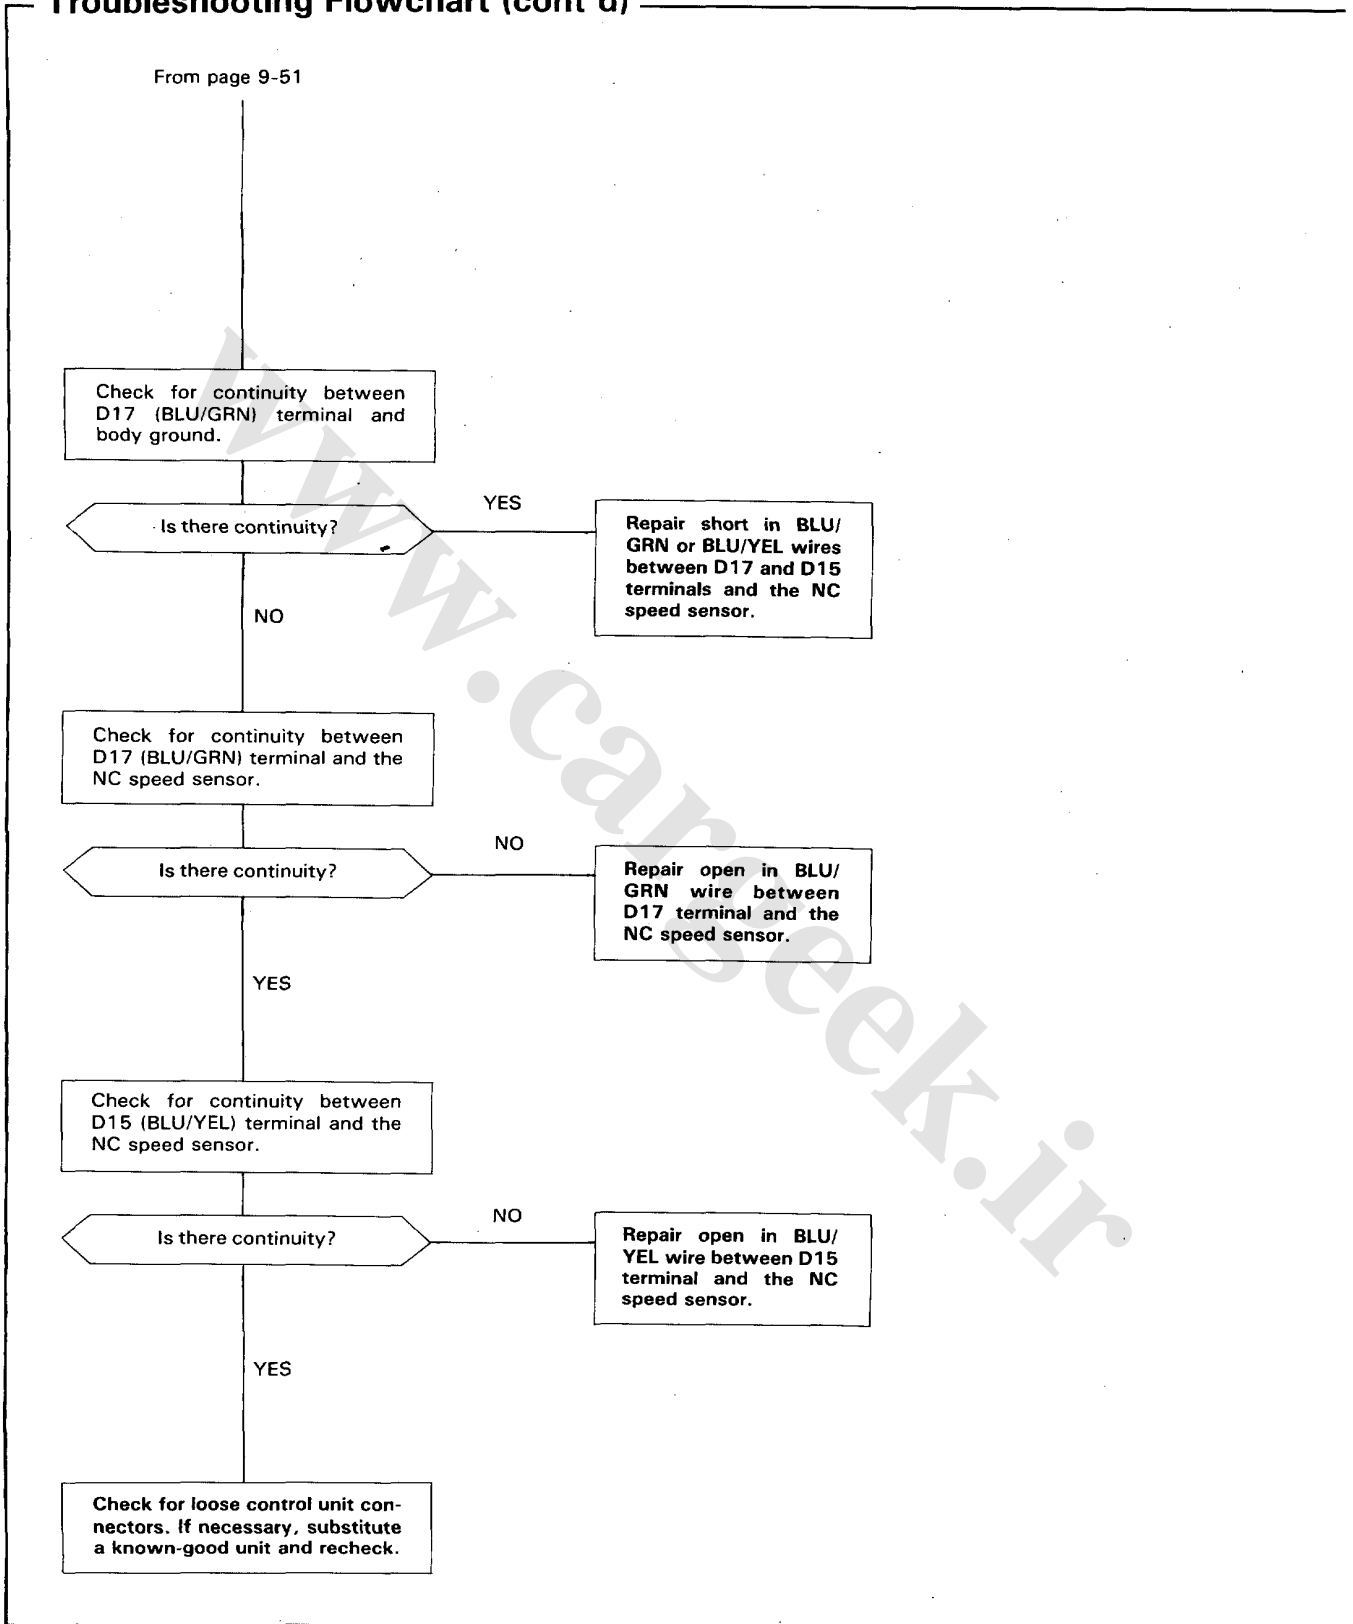


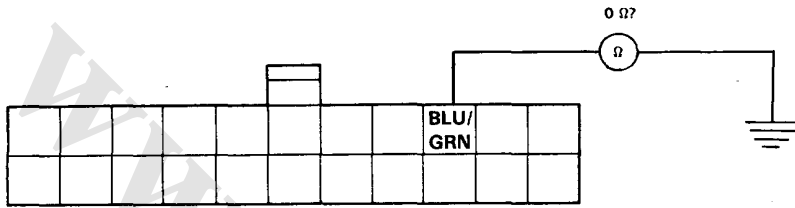




www.cargeek.ir

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

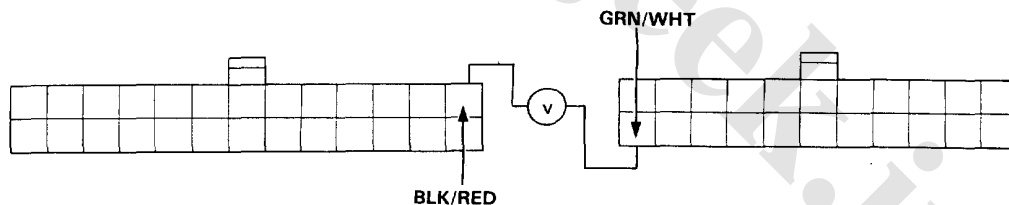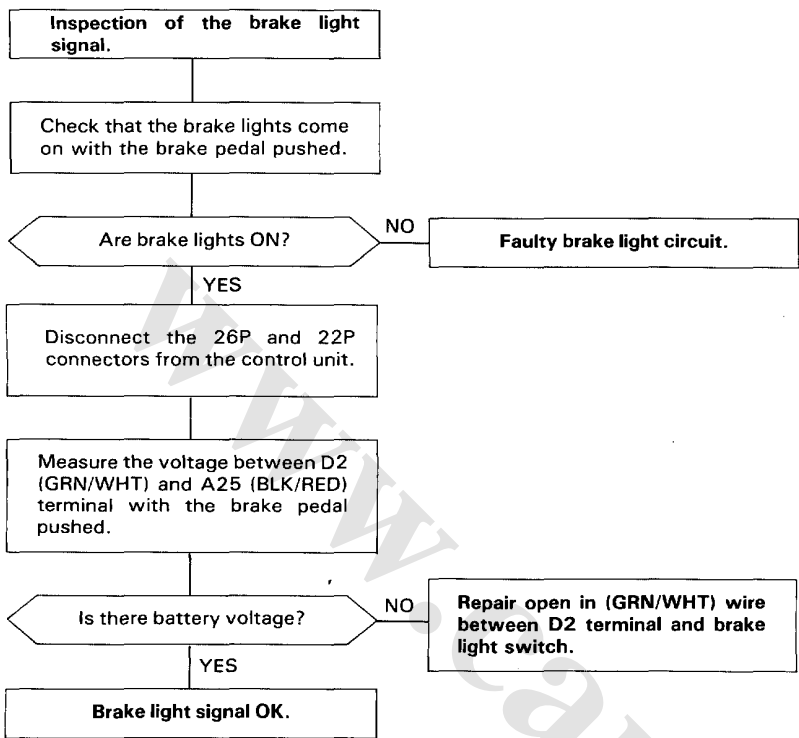


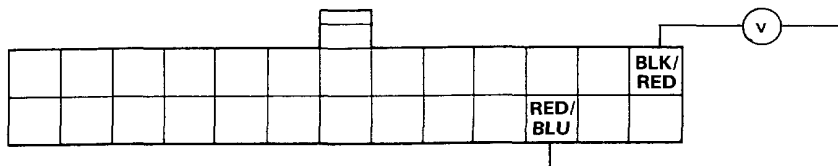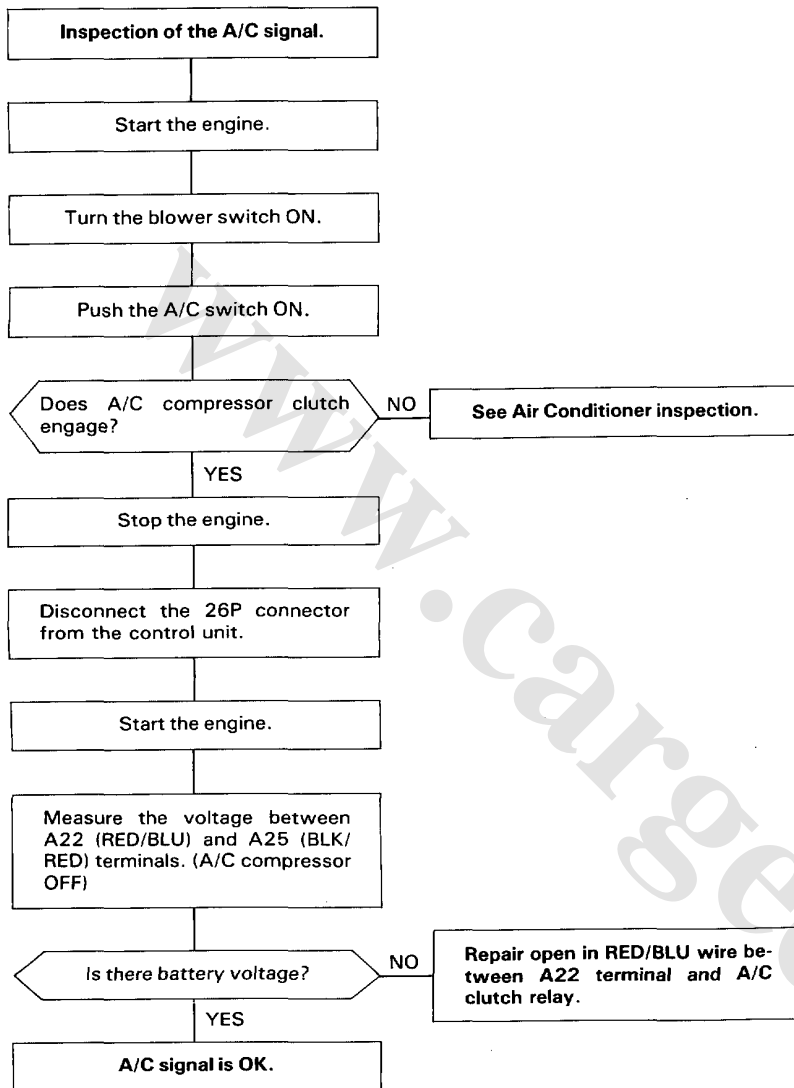

(cont'd)


Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

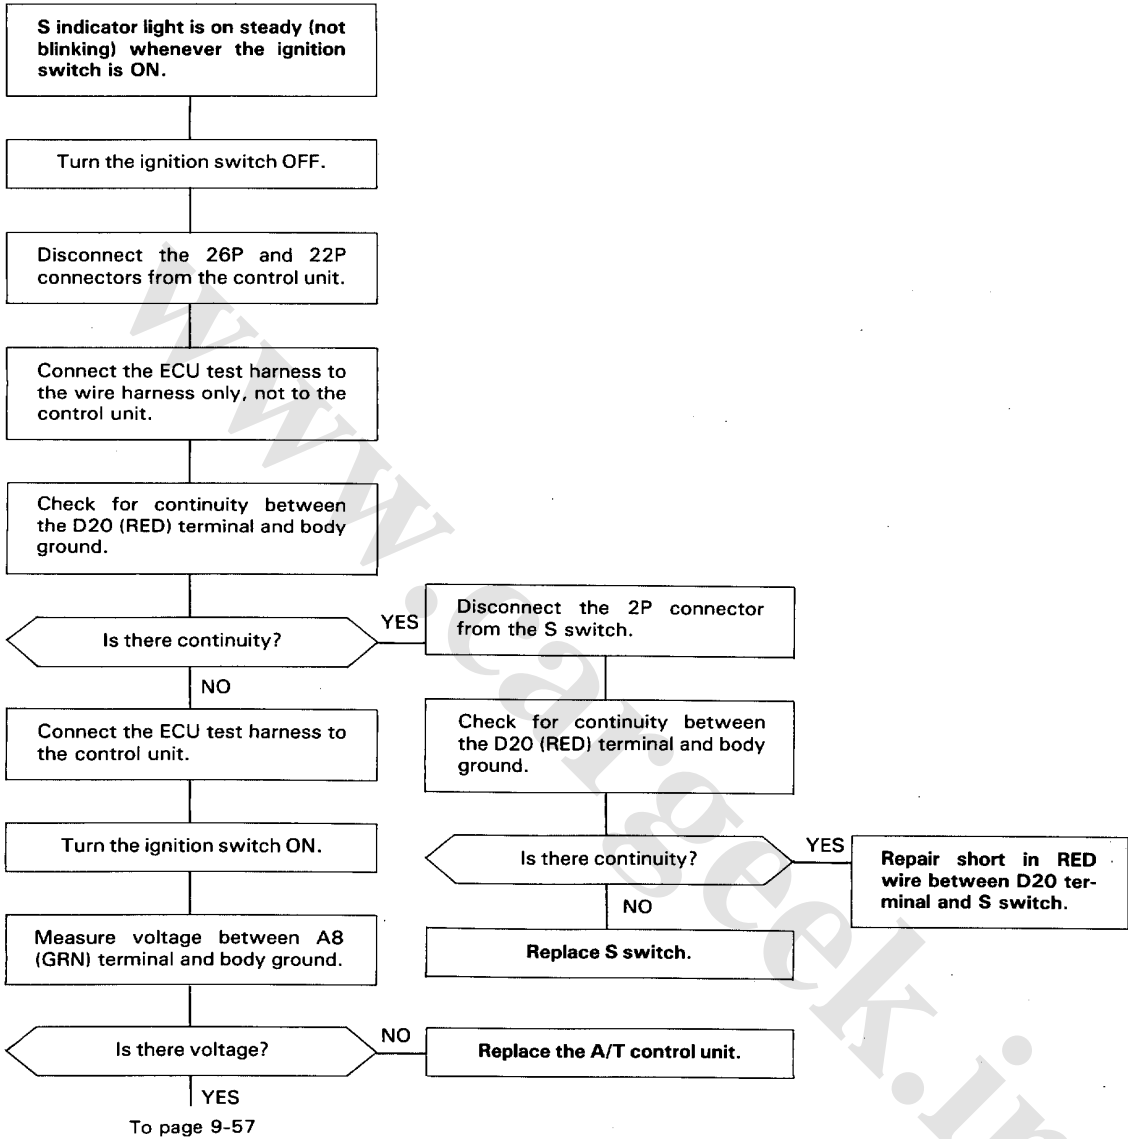



From page 9-56

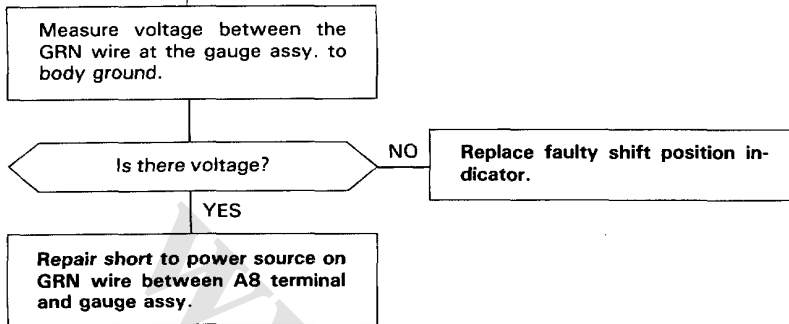


www.cargeek.ir


(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

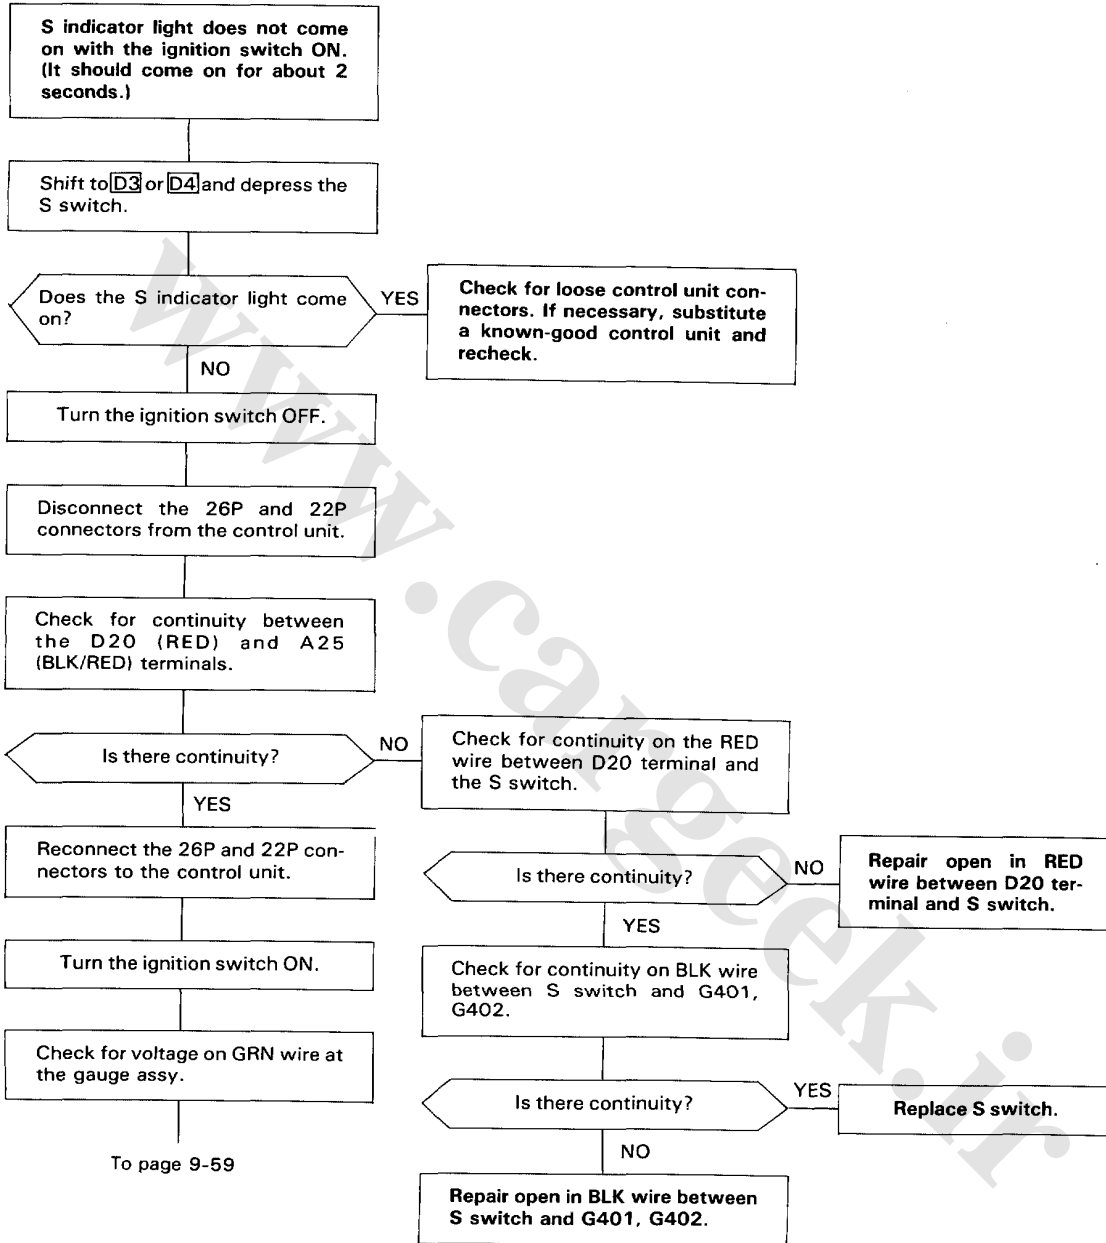

To page 9-59

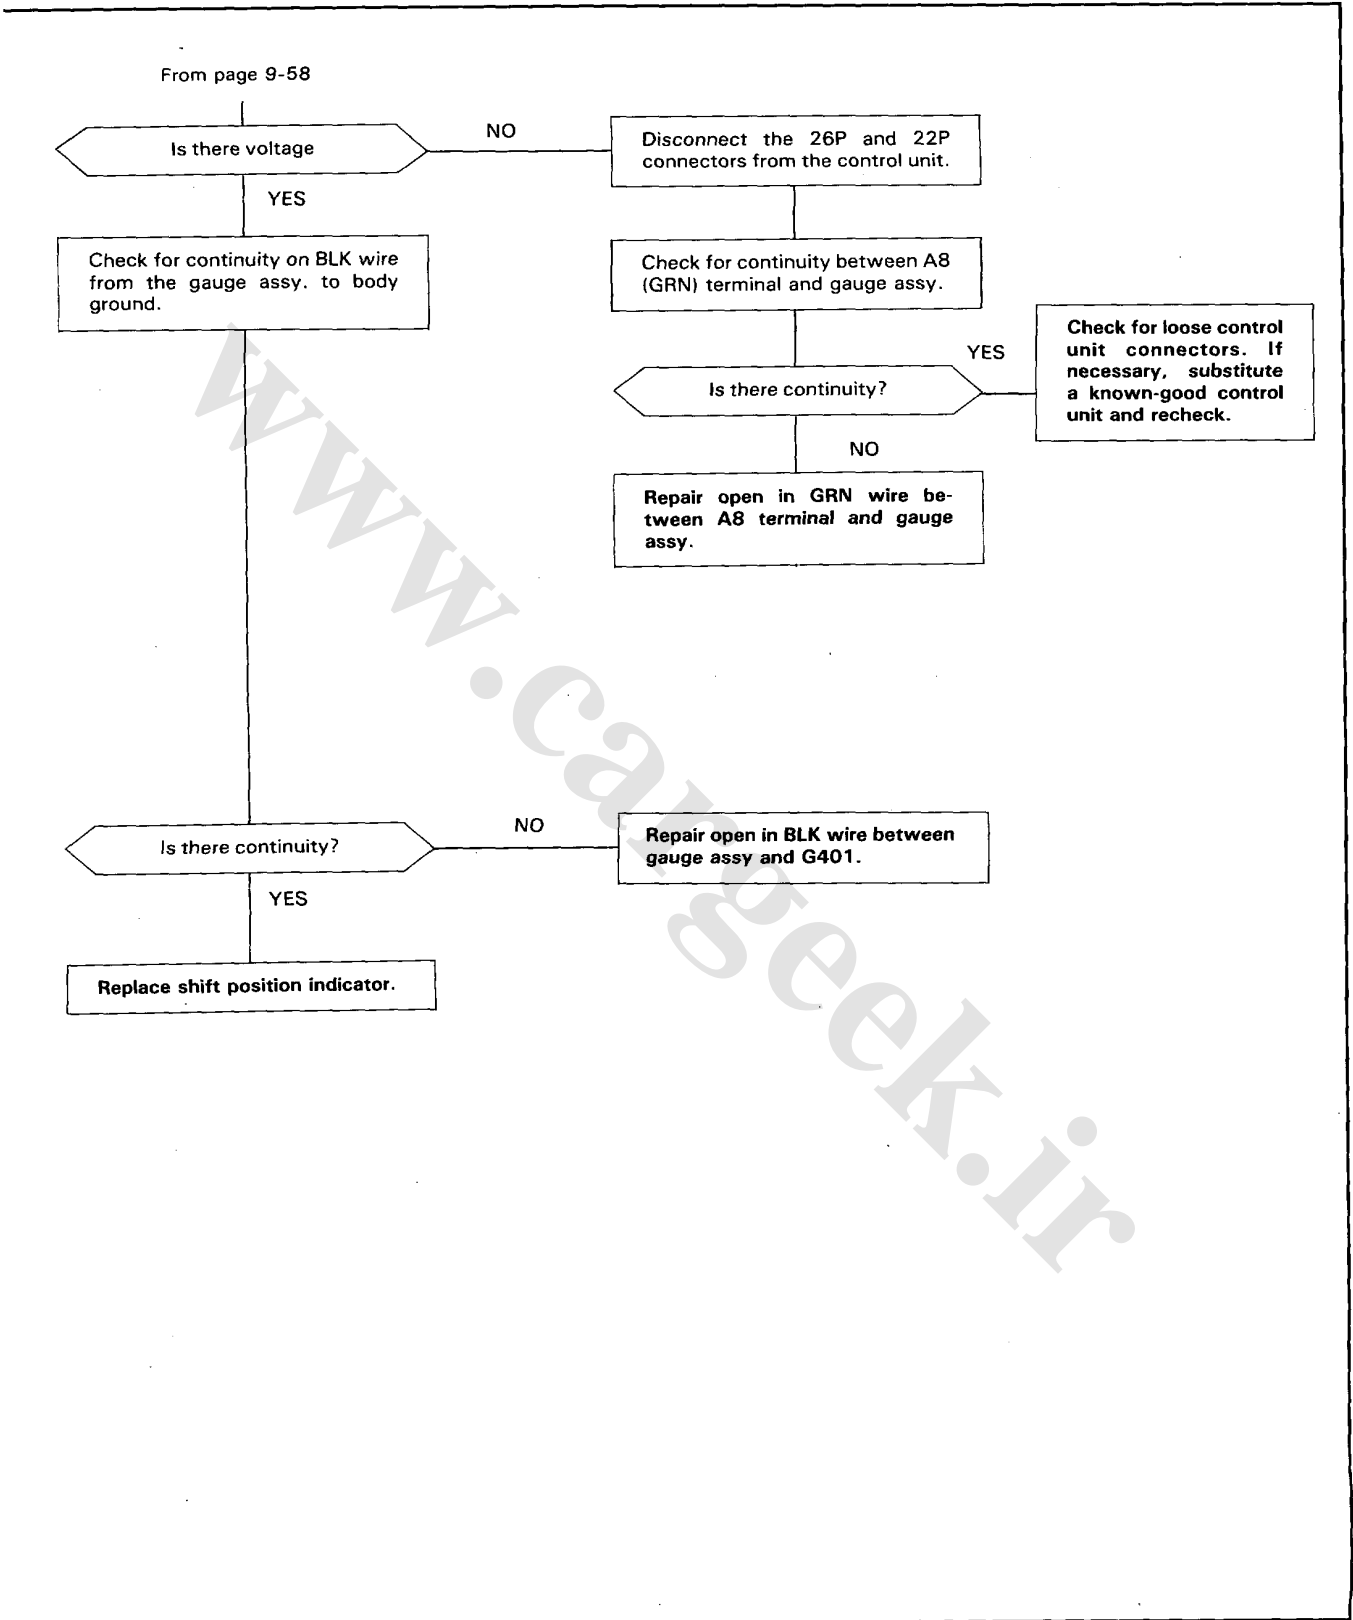

Lock-up Control Solenoid Valve A/B

Test


NOTE: Lock-up control solenoid valves A and B must be removed/replaced as an assembly.

1. Disconnect the connector from the lock-up control solenoid valve A/B.

NOTE: Do not remove the lock-up control solenoid valve A/B stay.

2. Measure the resistance between the No.1 terminal (SOL. V A) of the lock-up control solenoid valve connector and body ground and between the No. 2 terminal (SOL. V B) and body ground.

STANDARD: 14–16 Ω (25°C)

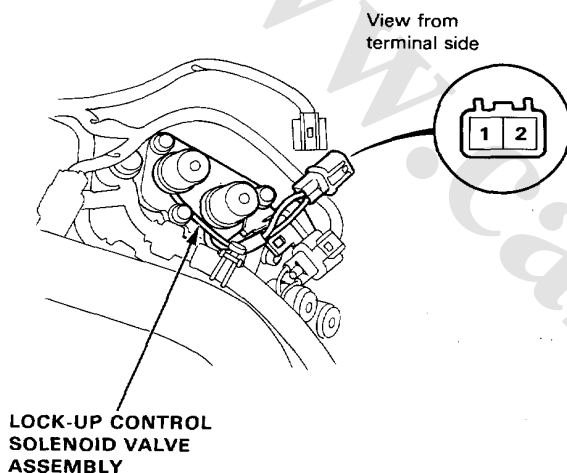


3. Replace the lock-up control solenoid valve assembly if the resistance is out of specification.
4. Connect the No.1 terminal of the lock-up control solenoid valve connector to the battery positive terminal. Connect the No.2 terminal to the battery positive terminal.
A clicking sound should be heard each time the connection is made.
5. If not, check for continuity between the A/T control unit A24 or A25 harness and body ground. (page 9-30, 31).
6. Replace the lock-up control solenoid valve assembly if there is continuity between the A/T control unit A 24 or A 25 harness and body ground. (page 9-30, 31)

Replacement

1. Remove the mounting bolts and lock-up control solenoid valve assembly.

NOTE: Be sure to remove or replace the lock-up control solenoid valves A and B as an assembly.

2. Check the lock-up control solenoid valve oil passages for dust or dirt and replace as an assembly, if necessary.

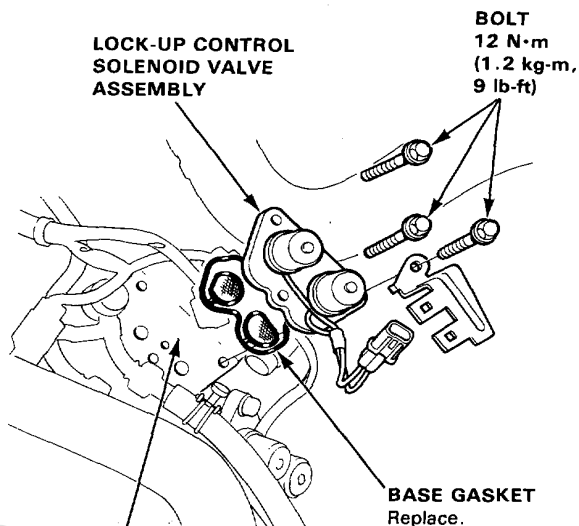

Clean the mounting surface and oil passages.

3. Clean the mounting surface and oil passages of the lock-up control solenoid valve assembly and install a new base gasket.
4. Check the connector for rust, dirt or oil and reconnect it securely.



Shift Control Solenoid Valve A/B

Test


NOTE: Shift control solenoid valves A and B must be removed/replaced as an assembly.

1. Disconnect the connector from the shift control solenoid valve A/B.

NOTE: Do not remove the shift control solenoid valve A/B stay.

2. Measure the resistance between the No.1 terminal (SOL. V A) of the shift control solenoid valve connector and body ground and between the No.2 terminal (SOL. V B) and body ground.

STANDARD: 14–16 Ω (25°C)

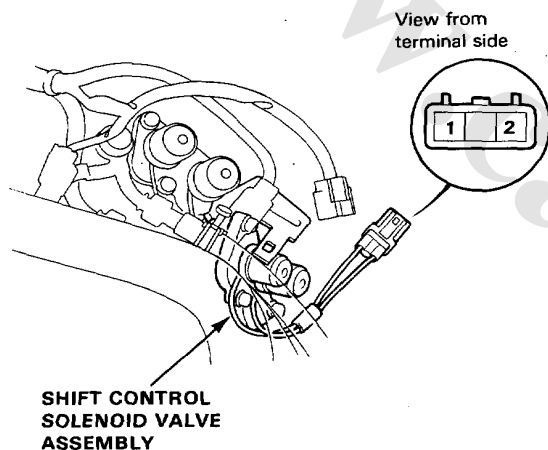


3. Replace the shift control solenoid valve assembly if the resistance is out of specification.
4. Connect the No.1 terminal of the shift control solenoid valve connector to the battery positive terminal. Connect the No.2 terminal to the battery positive terminal. A clicking sound should be heard each time the connection is made.
5. If not, check for continuity between the A/T control unit A11 or A12 harness and body ground. (page 9-38, 39).
6. Replace the shift control solenoid valve assembly if there is continuity between the A/T control unit A11 or A12 harness and body ground. (page 9-38, 39)

Replacement

1. Remove the mounting bolts and shift control solenoid valve assembly.

NOTE: Be sure to remove or replace the shift control solenoid valves A and B as an assembly.

2. Check the shift control solenoid valve oil passages for dust or dirt and replace as an assembly, if necessary.

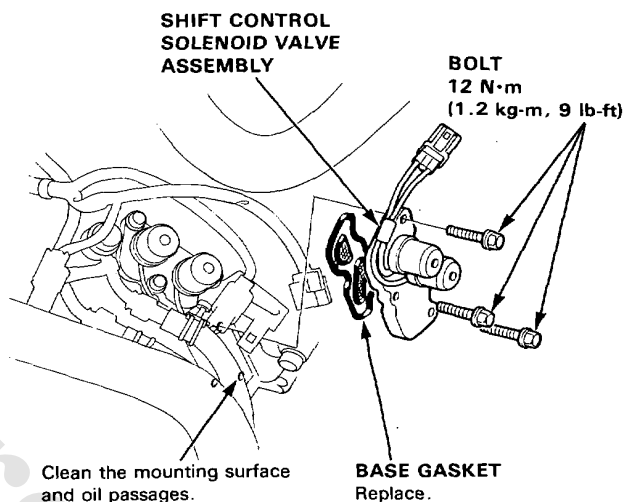


3. Clean the mounting surface and oil passages of the shift control solenoid valve assembly and install a new base gasket.
4. Check the connector for rust, dirt or oil and reconnect it securely.

S Switch

Test


1. Remove the center console.
2. Disconnect the switch connector.
3. Check for continuity between A and B terminals. There should be continuity when the switch is pressed.

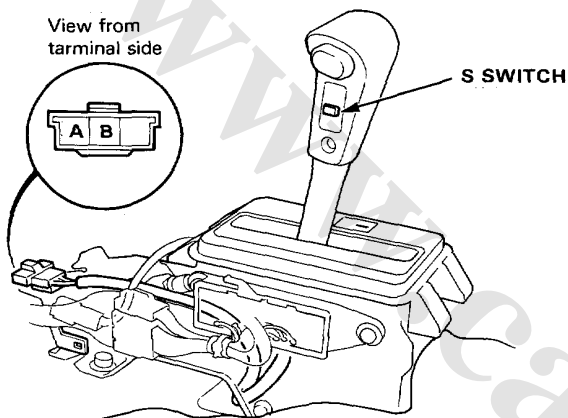

A/T Speed Sensor

Replacement

1. Remove the 6 mm bolt from the transmission housing and remove the A/T speed sensor assembly.

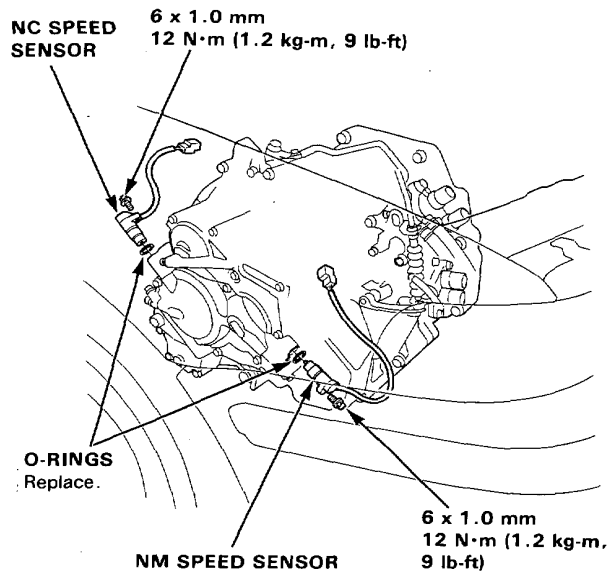


2. Replace the O-ring with a new one before reassembling the A/T speed sensor.

CAUTION: Carefully inspect the A/T speed sensor before installing. Do not install if it shows signs of being dropped or improperly handled.

Symptom-to-Component Chart

Hydraulic System

SYMPTOM	Check these items on the PROBABLE CAUSE LIST	Check these items on the NOTES CHART
Engine runs, but car does not move in any gear.	1, 6, 7, 16	K, L, R, S
Car moves in R and 2, but not in D ₃ , D ₄ or 1.	8, 29, 44, 48	C, M, O
Car moves in D ₃ , D ₄ , 1, R, but not in 2.	9, 30, 49	C, L
Car moves in D ₃ , D ₄ , 2, 1, but not in R.	1, 11, 22, 34, 38, 39, 40	C, L, Q
Car moves in N.	1, 8, 9, 10, 11, 46, 47	C, D
Excessive idle vibration.	5, 17	B, K, L
Slips in all gears.	6, 7, 16	C, L, U
No engine braking in <input type="checkbox"/> position.	12	C, D, L
Slips in low gear.	8, 29, 44, 48	C, N, O, U
Slips in 2nd gear.	9, 20, 23, 30, 49	C, L, U
Slips in 3rd gear.	10, 21, 23, 31, 44	C, L, U
Slips in 4th gear.	11, 23, 32	C, L, U
Slips in reverse gear.	11, 32, 34	C
Flares on 1-2 upshift.	3, 15	E, L, V
Flares on 2-3 upshift.	3, 15, 24, 44	E, L, V
Flares on 3-4 upshift.	3, 15, 25, 44	E, L, V
No upshift, trans stays in low gear.	14, 19, 23	G, L
No downshift to low gear.	12, 19	G, L
Late upshift.	14	L, V
Erratic shifting.	2, 14, 26	V
Harsh shift (up and down shifting).	2, 4, 15, 23, 24, 27, 47	A, E, H, I, L, V
Harsh shift (1-2).	2, 9	C, D, V
Harsh shift (2-3).	2, 10, 23, 24	C, D, H, L, V
Harsh shift (3-4).	2, 11, 23, 25	C, D, I, L, V
Harsh kickdown shifts.	2, 23, 27, 28	L, V, Q
Harsh kickdown shift (2-1).	48	O
Harsh downshift at closed throttle.	15	E, T
Harsh shift when manually shifting to <input type="checkbox"/> .	33	L
Axle(s) slips out of trans on turns.	43, 50	L, P, Q
Axle(s) stuck in trans.	43	L, Q
Ratcheting noise when shifting into R.	6, 7, 38, 39, 40	K, L, Q
Loud popping noise when taking off in R.	38, 39, 40	L, Q
Ratcheting noise when shifting from R to P or from R to N.	38, 39, 40, 45	L, Q
Noise from trans in all selector lever positions.	6, 17	K, L, Q
Noise from trans only when wheels are rolling.	39, 42	L, Q
Gear whine, rpm related (pitch changes with shifts).	8, 13, 41	K, L, Q
Gear whine, speed related (pitch changes with speed).	38, 42	L, Q
Trans will not shift into 4th gear in D ₄ .	1, 21, 28, 32	L
Lock-up clutch does not lock up smoothly.	17, 36, 37	L
Lock-up clutch does not operate properly.	2, 3, 15, 18, 35, 36, 37	E, L, V
Transmission has multitude of problems shifting. At disassembly, large particles of metal are found on magnet.	43	L, Q




PROBABLE CAUSE	
1.	Shift cable broken/out of adjustment.
2.	Throttle cable too short.
3.	Throttle cable too long.
4.	Wrong type ATF.
5.	Idle rpm too low/high.
6.	Oil pump worn or binding.
7.	Pressure regulator stuck.
8.	1st clutch defective.
9.	2nd clutch defective.
10.	3rd clutch defective.
11.	4th clutch defective.
12.	1st hold clutch defective.
13.	Mainshaft, countershaft, and secondary shaft idler gears worn/damage.
14.	Modulator valve stuck.
15.	Throttle B valve stuck.
16.	ATF strainer clogged.
17.	Torque convertor defective.
18.	Torque convertor check valve stuck.
19.	1-2 shift valve stuck.
20.	2-3 shift valve stuck.
21.	3-4 shift valve stuck.
22.	EAT D inhibitor valve stuck.
23.	Clutch pressure control valve stuck.
24.	2nd orifice control valve stuck.
25.	Orifice control valve stuck.
26.	3-2 kickdown valve stuck.
27.	3rd kickdown valve stuck.
28.	4th exhaust valve stuck.
29.	1st accumulator defective.
30.	2nd clutch accumulator defective.
31.	3rd clutch accumulator defective.
32.	4th/reverse accumulator defective.
33.	1st hold clutch accumulator defective.
34.	Servo valve stuck.
35.	Lock-up clutch timing valve stuck.
36.	Lock-up clutch shift valve stuck.
37.	Lock-up clutch control valve stuck.
38.	Shift fork bent.
39.	Reverse gears worn/damaged (3 gears).
40.	Reverse selector worn.
41.	3rd gears worn/damaged (2 gears).
42.	Final gears worn/damaged (2 gears).
43.	Differential pinion shaft worn.
44.	Feedpipe O-ring broken.
45.	4th gears worn/damaged (2 gears).
46.	Gear clearance incorrect.
47.	Clutch clearance incorrect.
48.	Sprag clutch defective.
49.	Sealing rings/guide worn.
50.	Axle-inboard joint clip missing.

Symptom-to-Component Chart

Hydraulic System (cont'd)

The following symptoms can be caused by improper repair or assembly.	Check these items on the PROBABLE CAUSE DUE TO IMPROPER REPAIR	Items on the NOTES CHART
Car creeps in N.	R1, R2	
Car does not move in D ₃ or D ₄ .	R4	
Trans locks up in R.	R3, R12	
Excessive drag in trans.	R6	R, K
Excessive vibration, rpm related.	R7	
Noise with wheels moving only.	R5	
Main seal pops out.	R8	S
Various shifting problems.	R9, R10	
Harsh upshifts.	R11	

PROBABLE CAUSE DUE TO IMPROPER REPAIR	
R1.	Improper clutch clearance.
R2.	Improper gear clearance.
R3.	Parking brake lever installed upside down.
R4.	Sprag clutch installed upside down.
R5.	Reverse hub installed upside down.
R6.	Oil pump binding.
R7.	Torque converter not fully seated in oil pump.
R8.	Main seal improperly installed.
R9.	Springs improperly installed.
R10.	Valves improperly installed.
R11.	Ball check valves not installed.
R12.	Shift fork bolt not installed.



NOTES	
A.	Flush ATF in the ATF cooler.
B.	Set idle rpm in gear to specified idle speed. If still no good, adjust motor mounts as outlined in engine section of service manual.
C.	If the large clutch piston O-ring is broken, inspect the piston groove for rough machining.
D.	If the clutch pack is seized or is excessively worn, inspect the other clutches for wear and check the orifice control valves and throttle valves for free movement.
E.	If throttle valve B is stuck, inspect the clutches for wear.
G.	If the 1–2 valve is stuck closed, the transmission will not upshift. If stuck open the transmission has no 1st gear.
H.	If the 2nd orifice control valve is stuck, inspect the 2nd and 3rd clutch packs for wear.
I.	If the orifice control valve is stuck, inspect the 3rd and 4th clutch packs for wear.
J.	If the clutch pressure control valve is stuck closed, the transmission will not shift out of 1st gear.
K.	Improper alignment of main valve body and torque converter case may cause oil pump seizure. The symptoms are mostly an rpm-related ticking noise or a high pitched squeek.
L.	If the oil screen is clogged with particles of steel or aluminum, inspect the oil pump and differential pinion shaft. If both are OK and no cause for the contamination is found, replace the torque converter.
M.	If the 1st clutch feedpipe guide in the end cover is scored by the mainshaft, inspect the ball bearing for excessive movement in the transmission housing. If OK, replace the end cover as it is dented. The O-ring under the guide is probably worn.
N.	Replace the mainshaft if the bushings for the 1st and 4th feedpipe are loose or damaged. If the 1st feedpipe is damaged or out of round, replace it. If the 4th feedpipe is damaged or out of round, replace the end cover.
O.	A worn or damaged sprag clutch is mostly a result of shifting the trans in D ₃ or D ₄ while the wheels rotate in reverse, such as rocking the car in snow.
P.	Inspect the frame for collision damage.
Q.	Inspect for damage or wear: 1. Reverse selector gear teeth chamfers. 2. Engagement teeth chamfers of countershaft 4th and reverse gear. 3. Shift fork for scuff marks in center. 4. Differential pinion shaft for wear under pinion gears. 5. Bottom of 3rd clutch for swirl marks. Replace items 1, 2, 3 and 4 if worn or damaged. If trans makes clicking, grinding or whirring noise, also replace mainshaft 4th gear and reverse idler gear and countershaft 4th gear in addition to 1, 2, 3 or 4. If differential pinion shaft is worn, overhaul differential assembly and replace oil screen and thoroughly clean trans, flush torque converter, cooler and lines. If bottom of 3rd clutch is swirled and trans makes gear noise, replace the countershaft and ring gear.
R.	Be very careful not to damage the torque converter case when replacing the main ball bearing. You may also damage the oil pump when you torque down the main valve body. This will result in oil pump seizure if not detected. Use proper tools.
S.	Install the main seal flush with the torque converter case. If you push it into the torque converter case until it bottoms out, it will block the oil return passage and result in damage.
T.	Harsh downshifts when coasting to a stop with zero throttle may be caused by a bent-in throttle valve retainer/cam stopper. Throttle cable adjustment may clear this problem.
U.	Check if servo valve stopper cap is installed. If it was not installed, the check valve may have been pushed out by hydraulic pressure causing a leak (internal) affecting all forward gears.
V.	Throttle cable adjustment is essential for proper operation of the transmission. Not only does it affect the shift points if misadjusted, but also the shift quality and lock-up clutch operation. A too long adjusted cable will result in throttle pressure being too low for the amount of engine torque input into the transmission and may cause clutch slippage. A too short adjusted cable will result in too high throttle pressures which may cause harsh shifts, erratic shifts and torque converter hunting.

Road Test

NOTE: After transmission is installed:

- Make sure the floor mat does not interfere with accelerator pedal travel. Fully depress accelerator pedal and check to make sure the throttle lever is fully opened.
- Release the accelerator pedal and check both inner control cables to be sure they have slight play.

D₄ and D₃ Range

1. Apply parking brake and block the wheels. Start the engine, then move the selector to D₄ while depressing the brake pedal. Depress the accelerator pedal, and release it suddenly. Engine should not stall.
3. Apply parking brake and block the wheels. Start the engine, then move the selector to D₃ while depressing the brake pedal. Depress the accelerator pedal, and release it suddenly. Engine should not stall.

KF, KB, KE, KW, KY, KT and KU Models

● Upshift

D ₄ (and D ₃)		1st-2nd	2nd-3rd	3rd-4th	Lock up Clutch ON
1/8 throttle Coasting down-hill from a stop	km/h	14-18	27-31	40-46	17-21
	mph	9-11	17-19	25-29	11-13
1/2 throttle Acceleration from a stop	km/h	27-33	52-58	74-82	97-104
	mph	17-21	32-36	46-51	60-65
Full-throttle Acceleration from a stop	km/h	42-49	102-110	149-158	129-137
	mph	26-30	63-68	93-98	80-85

● Downshift

D ₄ (and D ₃)		Lock up Clutch OFF	4th-3rd	3rd-2nd	2nd-1st
1/8 throttle Coasting or braking to a stop	km/h	15-21	26-32	—	(3rd-1st) 8-14
	mph	9-13	16-20	—	(3rd-1st) 5-9
1/2 throttle When car is slowed by increased grade, wind, etc.	km/h	87-94	—	—	—
	mph	54-58	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	126-134	124-133	85-94	39-46
	mph	78-83	77-83	53-58	24-29

● Upshift

D ₄ (and D ₃) with S switch in operation)		1st-2nd	2nd-3rd	3rd-4th	Lock up clutch ON
1/8 throttle Coasting down-hill from a stop	km/h	17-21	27-31	46-52	24-28
	mph	11-13	17-19	29-32	15-17
1/2 throttle Acceleration from a stop	km/h	37-43	72-78	106-114	118-125
	mph	23-27	45-48	66-71	73-78
Full-throttle Acceleration from a stop	km/h	43-50	102-110	149-158	130-138
	mph	27-31	63-68	93-98	81-86

● Downshift

D ₄ (and D ₃) with S switch in operation)		Lock up Clutch OFF	4th-3rd	3rd-2nd	2nd-1st
1/8 throttle Coasting or braking to a stop	km/h	23-28	31-37	—	(3rd-1st) 11-17
	mph	14-17	19-23	—	(3rd-1st) 7-11
1/2 throttle When car is slowed by increased grade, wind, etc.	km/h	98-105	—	—	—
	mph	61-65	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	126-134	124-133	85-94	39-46
	mph	78-83	77-83	53-58	24-29



KS, KX, KG and KQ Models

● Upshift

<input type="checkbox"/> (and <input type="checkbox"/>)		1st—2nd	2nd—3rd	3rd—4th	Lock up Clutch ON
1/8 throttle Coasting down-hill from a stop	km/h	21—25	41—45	58—64	23—27
	mph	13—16	25—28	36—40	14—17
1/2 throttle Acceleration from a stop	km/h	28—34	57—63	88—96	96—103
	mph	17—21	35—39	55—60	60—64
Full-throttle Acceleration from a stop	km/h	48—55	106—114	154—163	131—139
	mph	30—34	66—71	96—101	81—86

● Downshift

<input type="checkbox"/> (and <input type="checkbox"/>)		Lock up Clutch	4th—3rd	3rd—2nd	2nd—1st
1/8 throttle Coasting or braking to a stop	km/h	21—27	29—35	—	(3rd—1st) 10—16
	mph	13—17	18—22	—	(3rd—1st) 6—10
1/2 throttle When car is slowed by increased grade, wind, etc.	km/h	77—84	—	—	—
	mph	48—52	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	127—135	125—134	86—95	40—47
	mph	79—84	78—83	53—59	25—29

● Upshift

<input type="checkbox"/> (and <input type="checkbox"/> with S switch in operation)		1st—2nd	2nd—3rd	3rd—4th	Lock up Clutch ON
1/8 throttle Coasting down-hill from a stop	km/h	17—21	38—42	61—67	38—42
	mph	11—13	24—26	38—42	24—26
1/2 throttle Acceleration from a stop	km/h	28—34	66—72	100—108	111—118
	mph	17—21	41—45	62—67	69—73
Full-throttle Acceleration from a stop	km/h	48—55	106—114	154—163	131—139
	mph	30—34	66—71	96—101	81—86

● Downshift

<input type="checkbox"/> (and <input type="checkbox"/> with S switch in operation)		Lock up Clutch OFF	4th—3rd	3rd—2nd	2nd—1st
1/8 throttle Coasting or braking to a stop	km/h	35—41	29—35	—	(3rd—1st) 10—16
	mph	22—25	18—22	—	(3rd—1st) 6—10
1/2 throttle When car is slowed by increased grade, wind, etc.	km/h	84—91	—	—	—
	mph	52—57	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	127—135	125—134	89—98	40—47
	mph	79—84	78—83	55—61	25—29

CAUTION: Do not shift from or to at speeds over 100 km/h (62.5 mph); you may damage the transmission.

(1st Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this range.

(2nd Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this range.

(Reverse)

Accelerate from a stop at full throttle, and check for abnormal noise and clutch slippage.

(Park)

Park car on a slope (approx. 16°), apply the parking brake, and shift into Park. Release the brake; the car should not move.

Pressure

Testing


CAUTION:

- Before testing, be sure the transmission is filled to the proper level.
- Connect an oil pressure gauge securely, being sure not to allow dust and other foreign particles to enter the inspection hole.
- Warm up the engine before testing.
- Set the parking brake securely, and block both rear wheels.
- Raise the front of the car and support with safety stands.

NOTE: Do not reuse old aluminum washers. Install the sealing bolt in the inspection hole and tighten to the specified torque 18 N·m (1.8 kg-m, 12 lb-ft).

1. Stop the engine and connect a tachometer.
2. Connect an oil pressure gauge to each inspection hole.


**GAUGE SET 07406-002003 (Includes Pressure Hoses)
A/T OIL PRESSURE GAUGE HOSE 07406-002021**

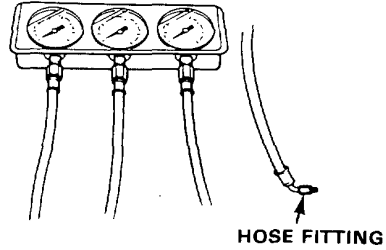

3. Start the engine and measure respective pressures as follows.

Line Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 2,000 min⁻¹ (rpm).
3. Measure the line pressure.

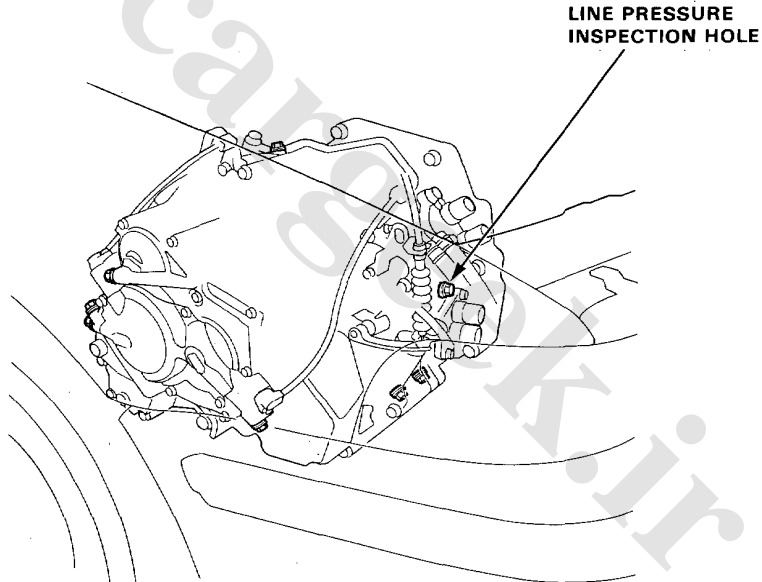


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Line	N or P	No (or low) Line pressure	Torque converter, oil pump pressure regulator, torque converter check valve, oil pump	785-834 kPa (8.0-8.5 kg/cm ² , 114-121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)

NOTE: Higher pressures may be indicated if measurements are made in selector positions other than N or P.



Clutch Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Raise the front of the car and support with safety stands.
3. Allow the front wheels to rotate freely.
4. Run the engine at 2,000 min⁻¹ (rpm).
5. Measure the clutch pressure.

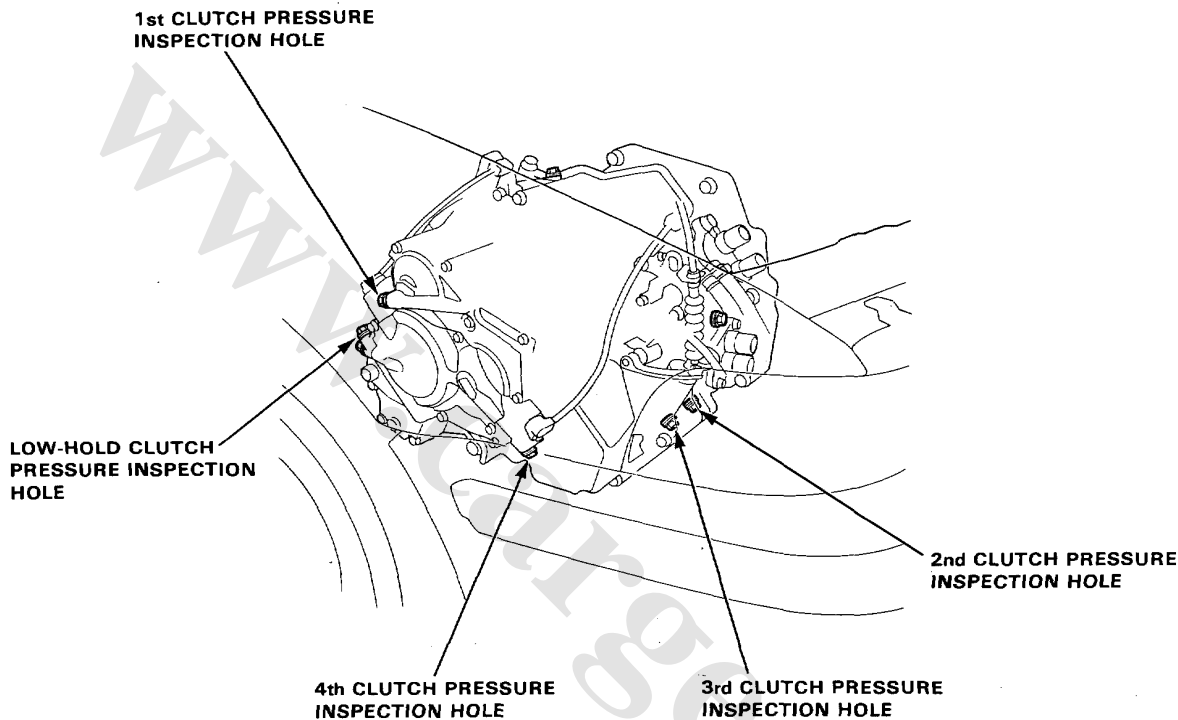

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Low-Hold Clutch	1	No or low low-hold pressure	Low-Hold Clutch	784–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)
1st Clutch	1	No or low 1st pressure	1st Clutch		
2nd Clutch	2	No or low 2nd pressure	2nd Clutch		
3rd Clutch	D	No or low 3rd pressure	3rd Clutch	490 kPa (5.0 kg/cm ² , 71 psi) (throttle fully closed)	441 kPa (4.5 kg/cm ² , 64 psi) (throttle fully closed)
4th Clutch	D	No or low 4th pressure	4th Clutch	785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi) (throttle more than 2/8 open)	735 kPa (7.5 kg/cm ² , 107 psi) (throttle more than 2/8 open)
4th Clutch	R	No or low 4th pressure	Servo Valve 4th Clutch	785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)

(cont'd)


Pressure

Testing (cont'd)


Clutch Low/High Pressure Test

1. Raise the car and support with safety stands.
2. Attach the gauge set to the appropriate pressure test port.
3. Remove the cable end of the throttle control lever.


NOTE: Do not loosen the locknuts, simply unhook the cable end.

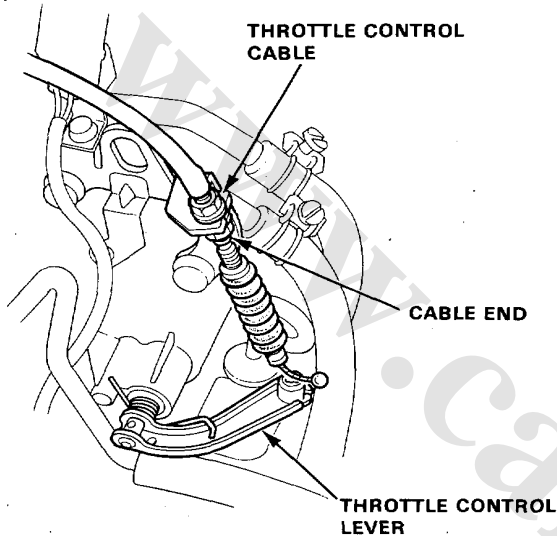


4. Warm up the engine to normal operating temperature (cooling fan comes on).
5. With the engine idling, move the selector lever to D₃ or D₄.
6. Slowly move the throttle linkage to increase engine rpm until pressure is indicated on the appropriate gauge. Then release the throttle linkage, allowing the engine to return to an idle, and record the pressure reading.
7. Repeat step 6 for each clutch pressure being inspected.

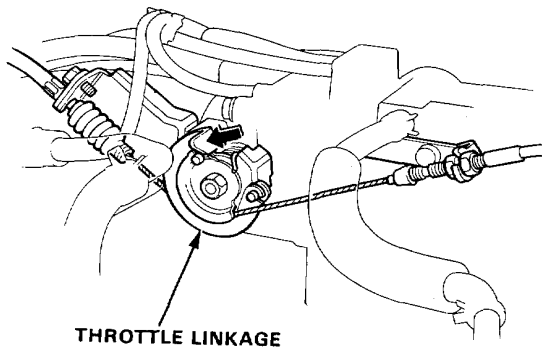

8. With the engine idling, lift the throttle control lever up approximately 1/2 of its possible travel and increase the engine rpm until pressure is indicated on the appropriate gauge. Record the highest pressure reading obtained.

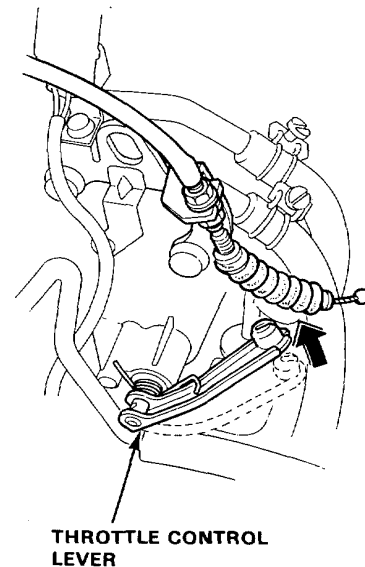

9. Repeat step 8 for each clutch pressure being inspected.

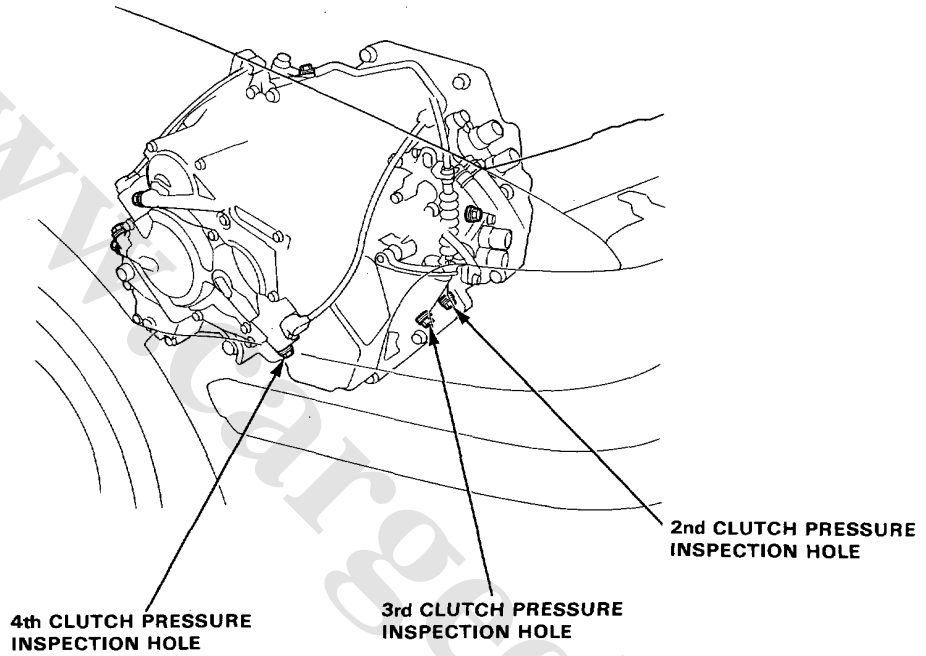

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
2nd Clutch	D ₂ or D ₃	No or low 2nd pressure	2nd Clutch	471—834 kPa (4.8—8.5 kg/cm ² , 68—121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)
3rd Clutch	D ₃ or D ₄	No or low 3rd pressure	3rd Clutch		
4th Clutch	D ₄	No or low 4th pressure	4th Clutch		


(cont'd)

Pressure

Testing (cont'd)

Throttle B Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 1,000 min⁻¹ (rpm).
3. Disconnect the throttle control cable from the throttle lever and set the control lever in full throttle position.

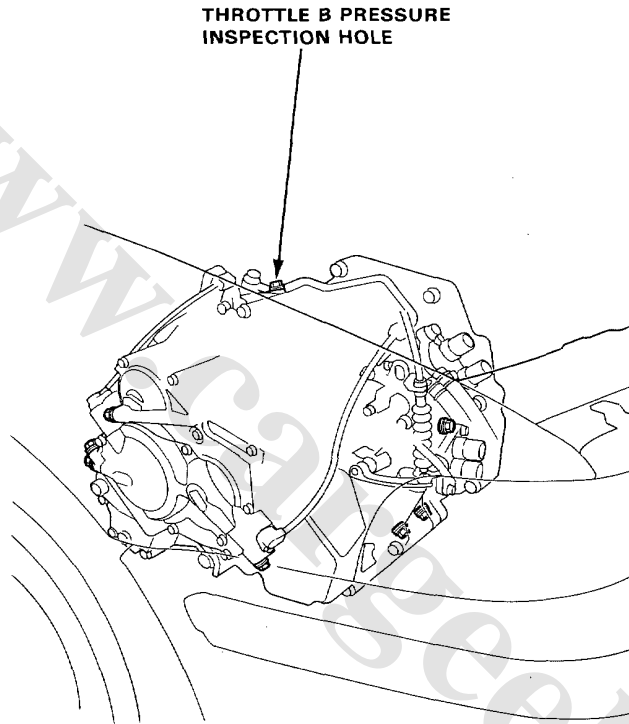

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Throttle B	D ₂ or D ₄	No (or low) Throttle B pressure	Throttle valve B	784–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)



Stall Speed

Test

CAUTION:

- To prevent transmission damage, do not test stall speed for more than 10 seconds at a time.
- Do not shift the lever while raising the engine speed.
- Be sure to remove the pressure gauge before testing stall speed.

1. Engage parking brake and block the front wheels.
2. Connect safety chains to both front two hooks and attach, with minimum slack, to some strong stationary object.
3. Connect tachometer, and start the engine.
4. After the engine has warmed up to normal operating temperature, shift into **D₄**.
5. Fully depress the brake pedal and accelerator for 6 to 8 seconds, and note engine speed.
6. Allow 2 minutes for cooling, then repeat same test in **T** and **R**.

Stall speed in **D₄**, **T** and **R** must be the same, and must also be within limits:

NOTE:


Stall speed test must be made only for checking the cause of trouble.

Stall Speed RPM:

Specification: 2,500 min⁻¹ (rpm)

Service Limit: 2,350—2,650 min⁻¹ (rpm)

TROUBLE	PROBABLE CAUSE
Stall rpm high in D₄ , T & R	<ul style="list-style-type: none"> • Low fluid level or oil pump output. • Clogged oil strainer. • Pressure regulator valve stuck closed. • Slipping clutch.
Stall rpm high in R	<ul style="list-style-type: none"> • Slippage of 4th clutch
Stall rpm high in D₄ & T	<ul style="list-style-type: none"> • Slippage of 1st clutch or 1st gear one-way clutch
Stall rpm low in D₄ , T & R	<ul style="list-style-type: none"> • Engine output low • Torque converter one-way clutch slipping

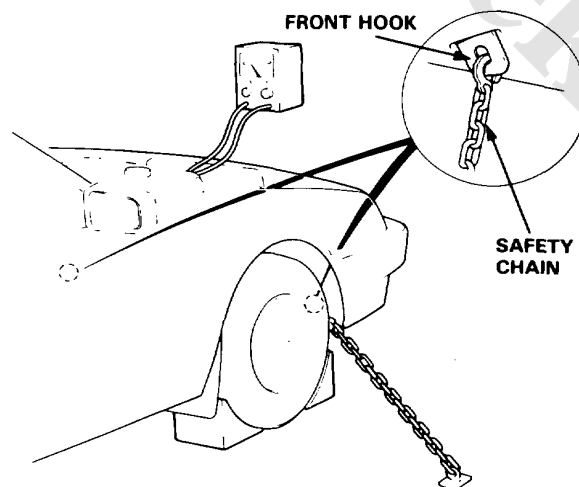

Pressure

Testing


CAUTION:

- Before testing, be sure the transmission is filled to the proper level.
- Connect an oil pressure gauge securely, being sure not to allow dust and other foreign particles to enter the inspection hole.
- Warm up the engine before testing.
- Set the parking brake securely, and block both rear wheels.
- Raise the front of the car and support with safety stands.

NOTE: Do not reuse old aluminum washers. Install the sealing bolt in the inspection hole and tighten to the specified torque 18 N·m (1.8 kg-m, 12 lb-ft).

1. Stop the engine and connect a tachometer.
2. Connect an oil pressure gauge to each inspection hole.


**GAUGE SET 07406-0020003 (Includes Pressure Hoses)
A/T OIL PRESSURE GAUGE HOSE 07406-0020201**

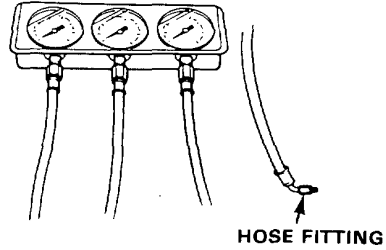

3. Start the engine and measure respective pressures as follows.

Line Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 2,000 min⁻¹ (rpm).
3. Measure the line pressure.

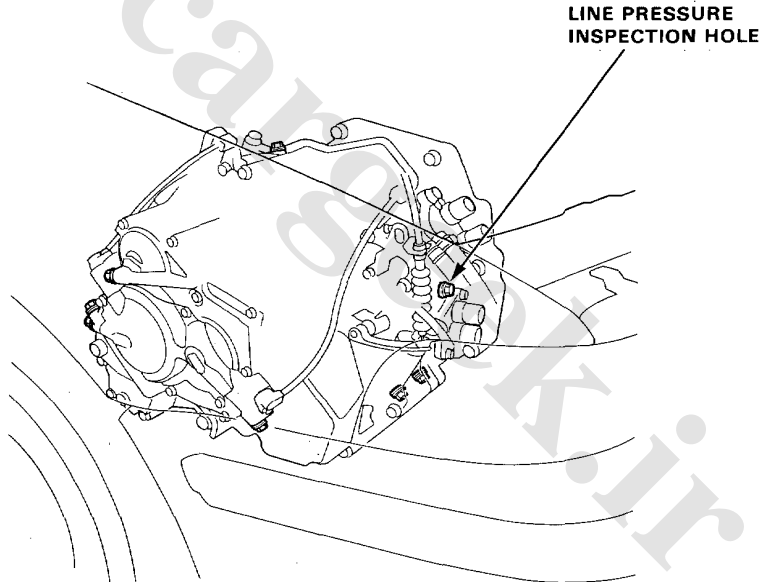

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Line	N or P	No (or low) Line pressure	Torque converter, oil pump pressure regulator, torque converter check valve, oil pump	785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)

NOTE: Higher pressures may be indicated if measurements are made in selector positions other than **N** or **P**.

Fluid Level

Checking/Changing

Checking

With the car on level ground, pull the transmission dipstick and check the level of fluid immediately after the engine is shut off (within one minute). The fluid level should be between the full and low marks. Push the dipstick all the way in to check the fluid level. If the level is at, or below, the low mark, add DEXRON-II type automatic transmission fluid.


Changing

1. Bring the transmission up to operating temperature by driving the car. Park the car on level ground, turn the engine off, then remove drain plug.
2. Reinstall the drain plug with a new washer, then refill the transmission to the full mark on the dipstick.


Automatic transmission Capacity:

2.4 l (2.5 us qts, 2.1 Imp qts) at change

6.0 l (6.3 us qts, 5.3 Imp qts) after overhaul

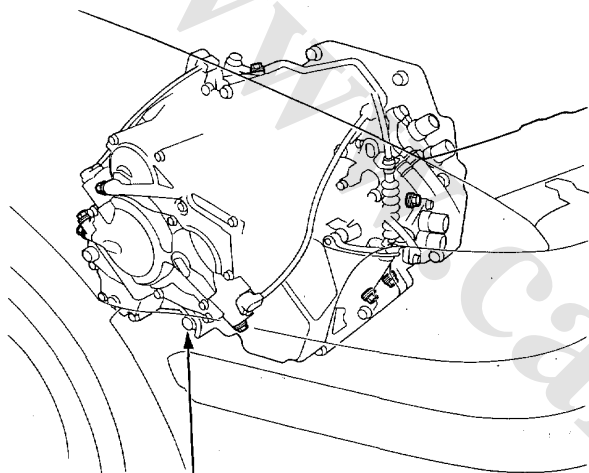

DRAIN PLUG
40 N·m (4.0 kg·m, 29 lb-ft)

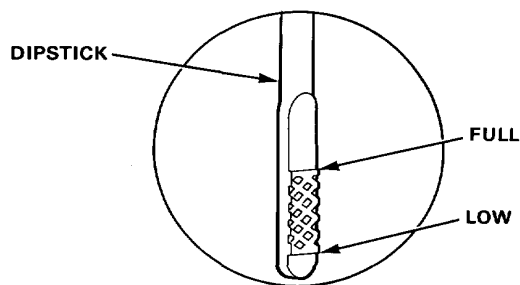



Transmission

Removal

▲ WARNING


- Make sure jacks and safety stands are placed properly, and hoist brackets are attached to correct positions on the engine.
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

CAUTION: Use fender covers to avoid damaging painted surfaces.

1. Disconnect the battery negative (-) and positive (+) cable from the battery, and remove the battery.
2. Remove the air intake hose, air cleaner case and battery base (See section 5).
3. Disconnect the throttle cable from the throttle control lever.
4. Disconnect the transmission ground cable.
5. Disconnect the speed pulser connectors.
6. Disconnect the starter motor cables, remove the starter mounting bolts, then remove the starter motor.

7. Remove the rear mount bracket stay nut first. Remove the bolt, then remove the rear mount bracket stay.
8. Remove the speed sensor, but leave its hoses connected.
9. Disconnect the lock-up control solenoid valve and shift control solenoid valve wire connectors.
10. Drain transmission fluid. Use a socket wrench to remove the drain plug. Remove the oil filter plug to speed draining. Reinstall the drain plug with a new washer.
11. Disconnect the cooler hoses at joint pipes. Turn the ends up to prevent ATF from flowing out.

NOTE: Check for any signs of leakage at the hose joints.

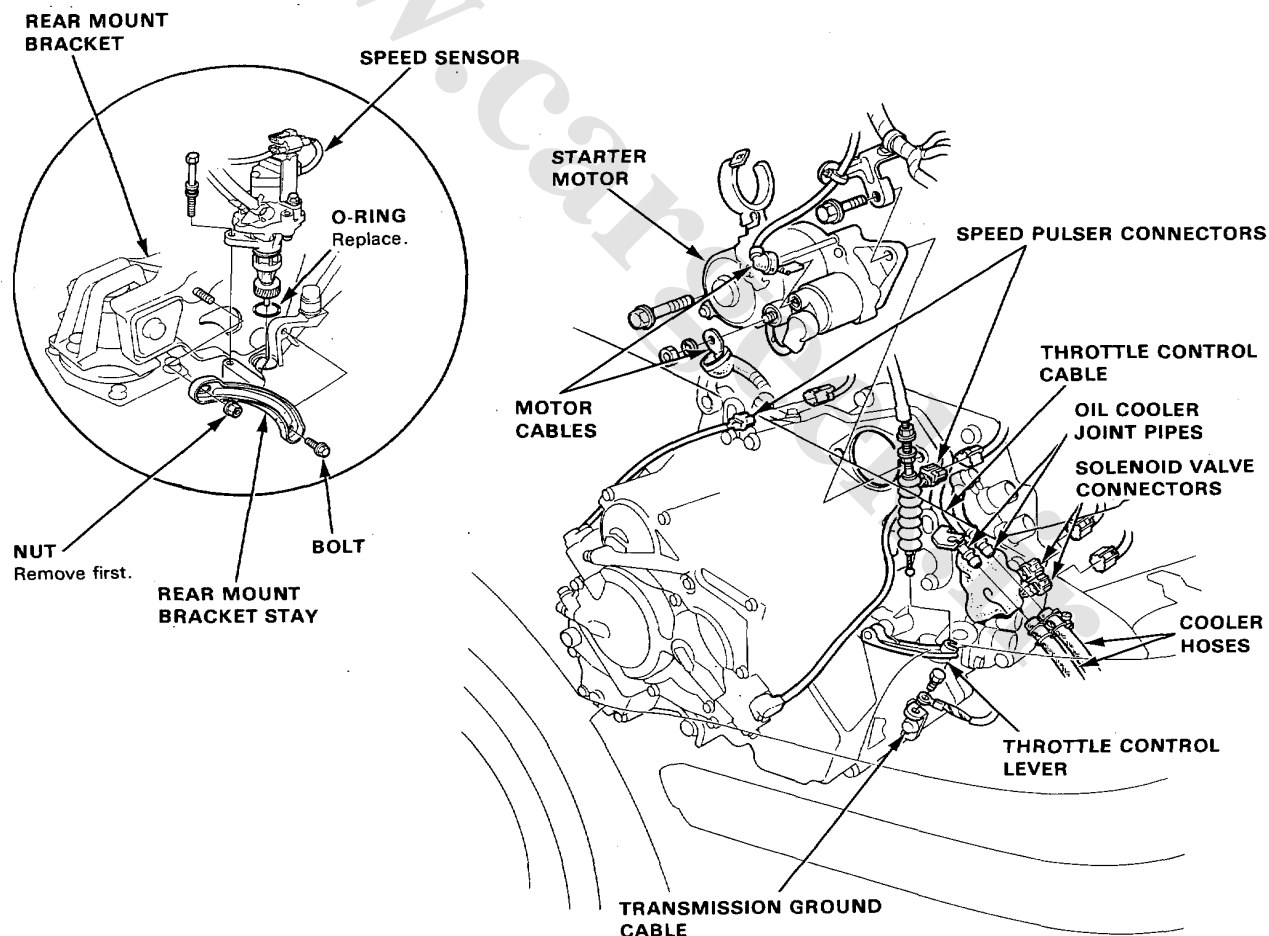


(cont'd)


Transmission

Removal (cont'd)

12. Remove the center beam.
13. Remove the oxygen sensor connector.
NOTE: The oxygen sensor is equipped on the exhaust pipe A for some types.
14. Remove the exhaust pipe A.

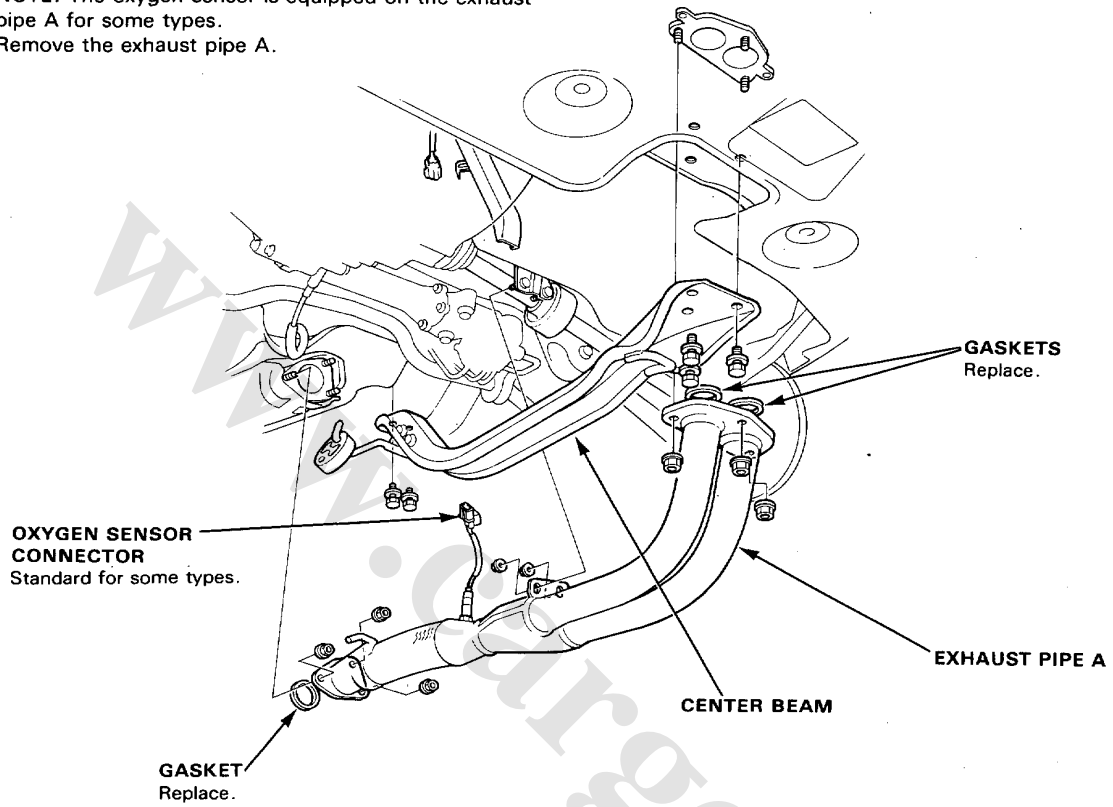


15. Remove the splash shield.

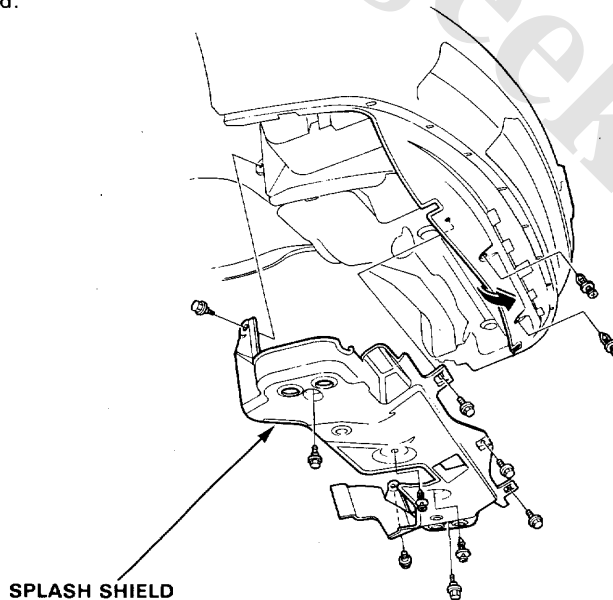





16. Remove the cotter pins and lower arm ball joint nuts, then separate the ball joints and lower arms (See section 12).

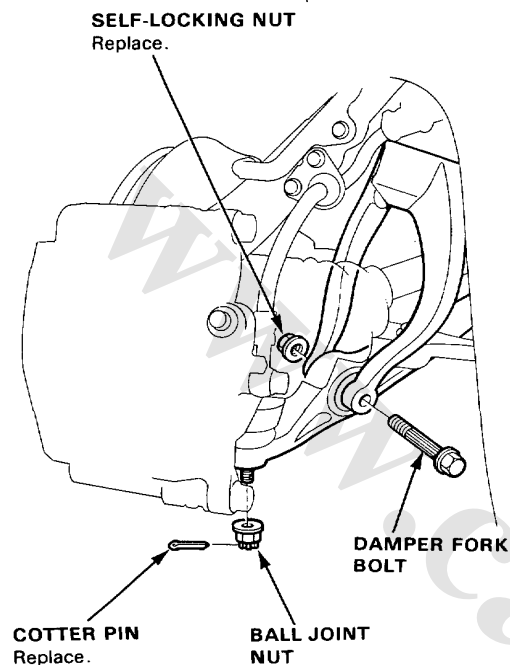


17. Pry the right and left driveshafts out of the differential.
18. Pull on the inboard joint and remove the right and left driveshafts (See section 10).

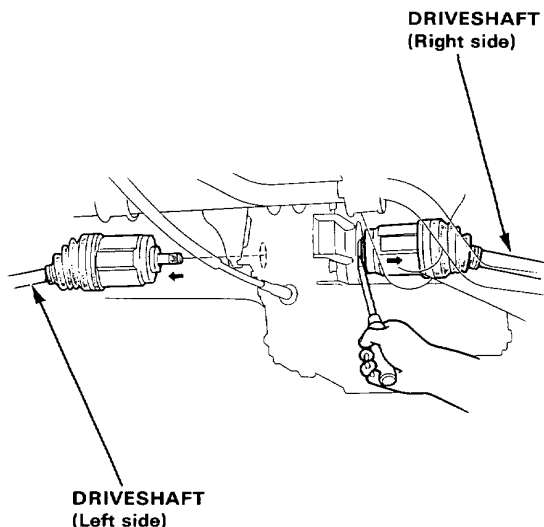

19. Remove the right damper pinch bolt, then separate the damper fork and damper.
20. Remove the bolts and nut, then remove the right radius rod.

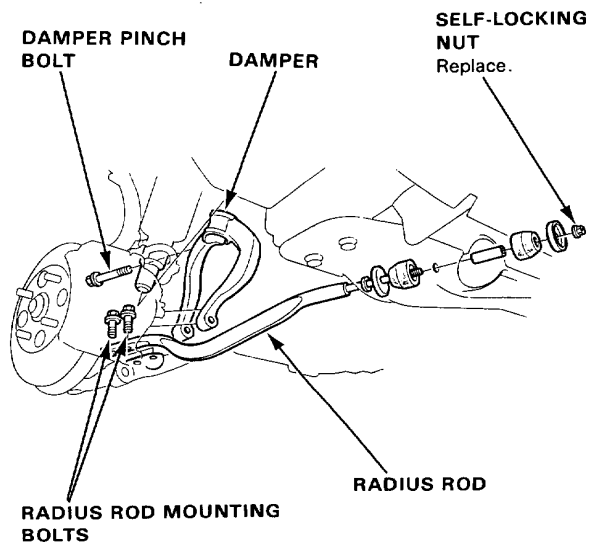

22. Tie plastic bags over the driveshaft ends.
NOTE: Coat all precision finished surfaces with clean engine oil or grease.

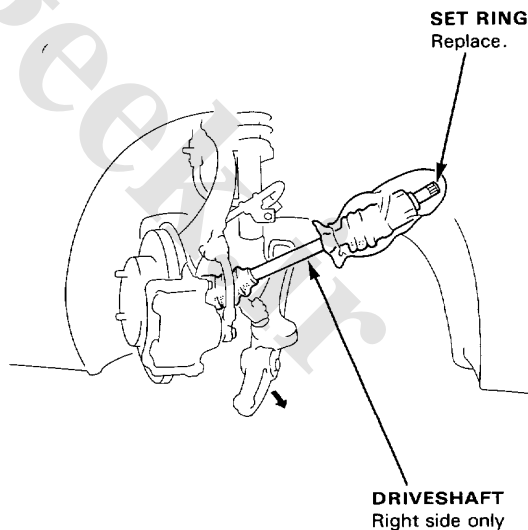

(cont'd)


Transmission

Removal (cont'd)

- 23. Remove the torque converter cover and control cable holder.
- 24. Remove the shift control cable by removing the cotter pin, control pin and control lever roller from the control lever.


- 25. Remove the plug, then remove the drive plate bolts one at a time while rotating the crankshaft pulley.
- 26. Remove the rear transmission housing mounting bolts (Engine side).
- 27. Remove the mounting bolts from the rear engine mount bracket.

CAUTION: Take care not to bend the control cable.

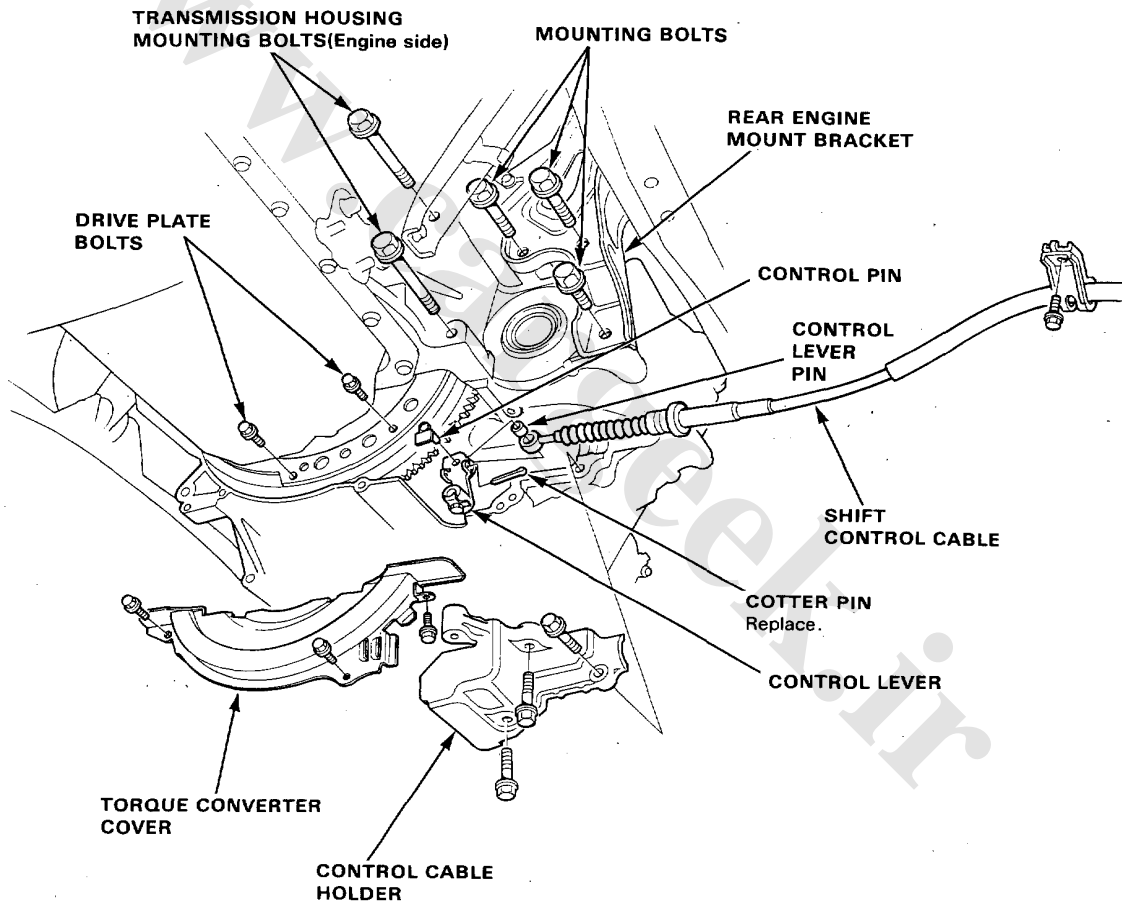




28. Attach a chain hoist to the transmission housing hoisting brackets, then lift the engine slightly.
29. Place a jack under the transmission and raise transmission just enough to take weight off mounts.
30. Remove the 4 transmission housing mounting bolts and 3 mount bracket nuts.
31. Pull the transmission away from the engine until it clears the 14 mm dowel pins, then lower it on the transmission jack.

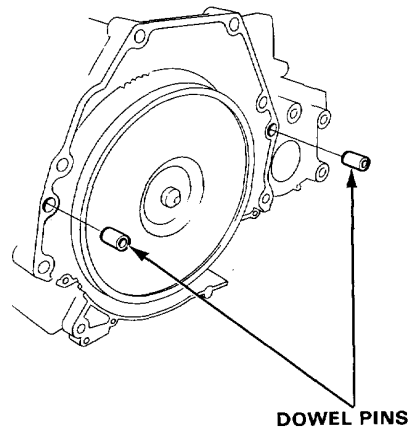

TRANSMISSION HOUSING MOUNTING BOLTS

TRANSMISSION MOUNT BRACKET

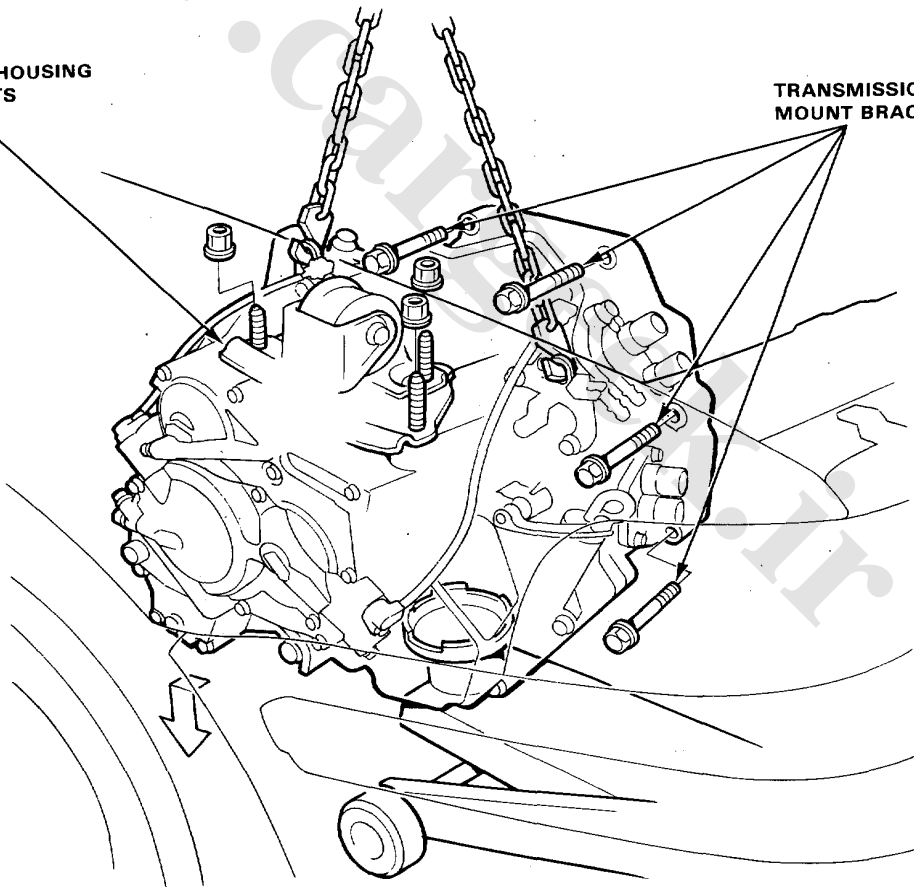


Transmission

Installation


1. Place the transmission on the transmission jack, and raise to the engine level.
2. Check that the two 14 mm dowel pins are installed in the torque converter housing.

3. Install the 4 transmission housing mounting bolts, then install the transmission on the engine block.
4. Install the transmission to transmission mount bracket.
5. Remove the transmission jack.

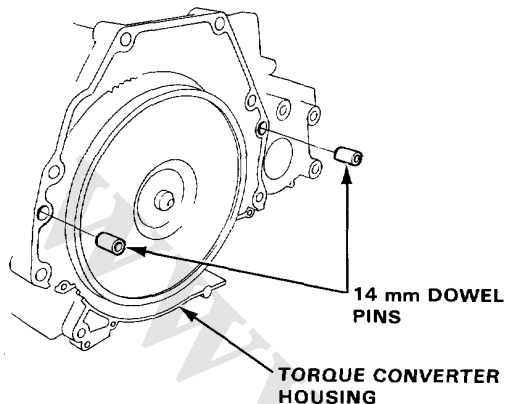


**TRANSMISSION MOUNT
BRACKET NUTS**
10 x 1.25 mm
39 N·m
(3.9 kg·m, 28 lb-ft)

**TRANSMISSION HOUSING
MOUNTING BOLTS**
12 x 1.25 mm
65 N·m (6.5 kg·m, 47 lb-ft)

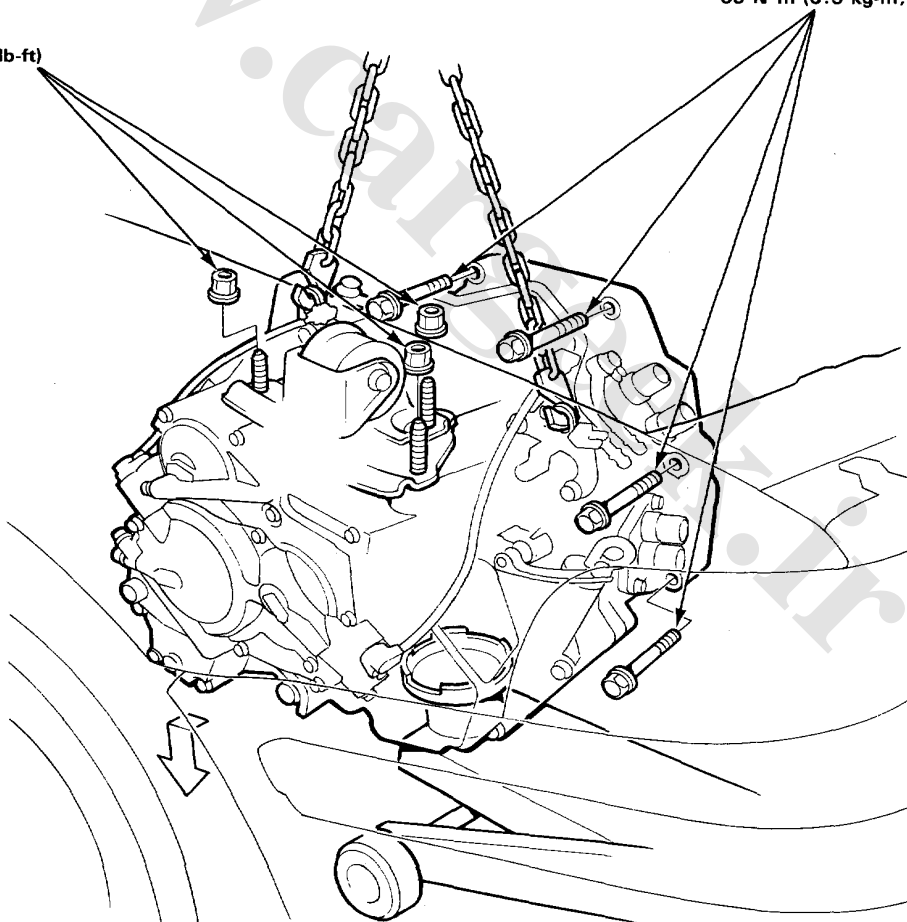



6. Install the 2 transmission housing mounting bolts (Engine side) and rear engine mount bracket bolts.
 7. Attach the torque converter to the drive plate with eight bolts, and torque to 12 N·m (1.2 kg-m, 9 lb-ft), Rotate the crankshaft as necessary to tighten bolts to 1/2 torque, then final torque, in a criss-cross pattern. Check for free rotation after tightening the last bolt.
 8. Install the shift control cable and control cable holder. **CAUTION: Take care not to bend the shift control cable.**
9. Install the torque converter cover.
 10. Remove the chain hoist by removing the hanger plates.

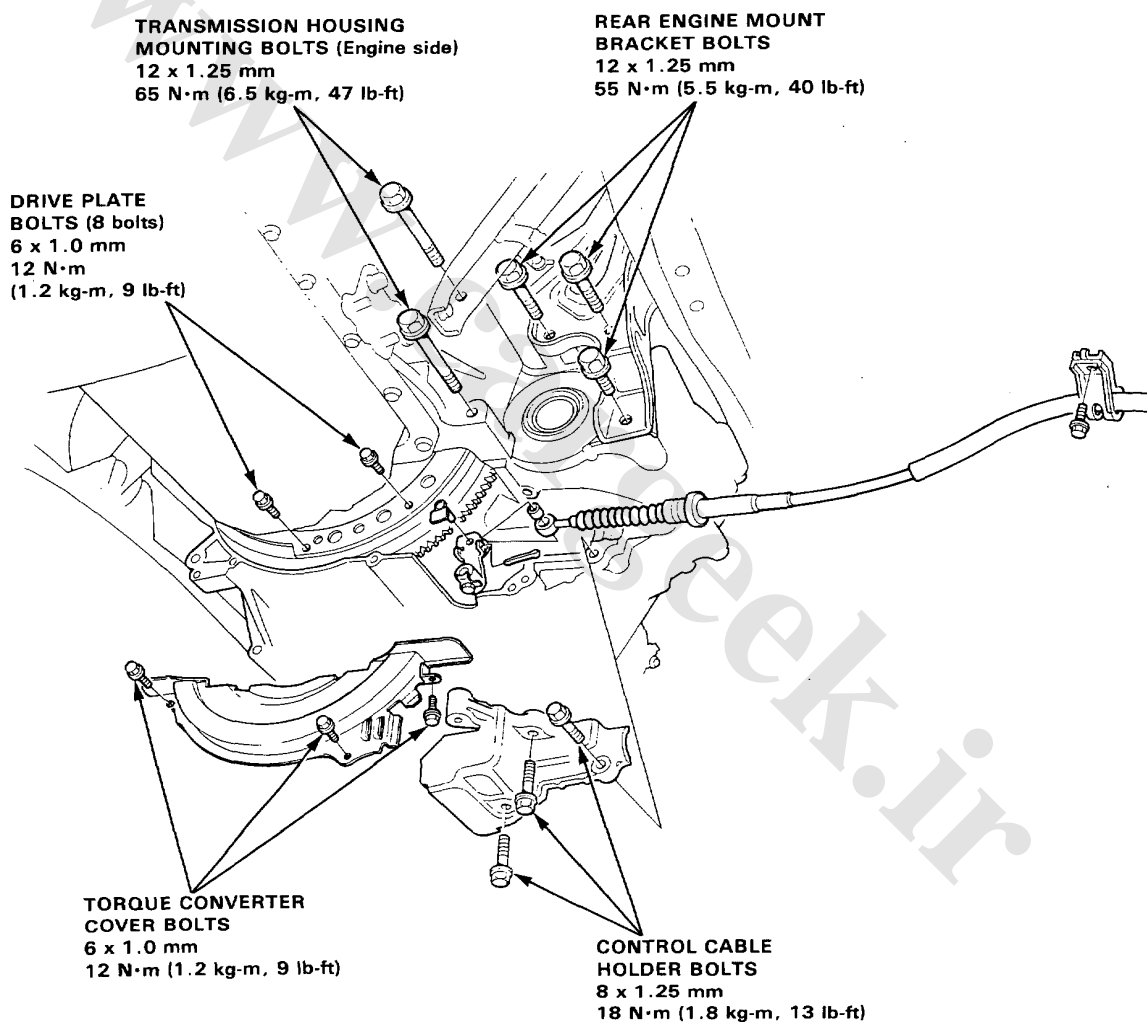

(cont'd)

Transmission

Installation (cont'd)

11. Install the radius rod.
NOTE: Check for deterioration or damage of the radius rod rubber bushings.
12. Install the damper fork.

DAMPER PINCH BOLT
10 x 1.25 mm
44 N·m (4.4 kg-m, 32 lb-ft)

SELF-LOCKING NUT
Replace.
12 x 1.25 mm
44 N·m (4.4 kg-m, 32 lb-ft)

DAMPER FORK

RADIUS ROD

RUBBER BUSHINGS

RADIUS ROD MOUNTING BOLTS
12 x 1.25 mm
105 N·m (10.5 kg-m, 76 lb-ft)

13. Install a new set ring on the end of each driveshaft.
14. Install the right and left driveshafts (See section 10).
NOTE: Turn the right and left steering knuckle fully outward, and slide axle into the differential until you feel its spring clip engage the side gear.

DRIVESHAFT (Right side)

DRIVESHAFT (Left side)

15. Install the damper fork bolts and ball joint nuts to the lower arms.

SELF-LOCKING NUT
Replace.
12 x 1.25 mm
55 N·m (5.5 kg-m, 40 lb-ft)

COTTER PIN
Replace.

BALL JOINT NUT
12 x 1.25 mm
55 N·m (5.5 kg-m, 40 lb-ft)


DAMPER FORK BOLT

16. Install the splash shield.

SPLASH SHIELD



- 17. Install the center beam and exhaust pipe A.
 - 18. Connect the oxygen sensor connector.
- NOTE: The oxygen sensor is equipped on the exhaust pipe A for some types.

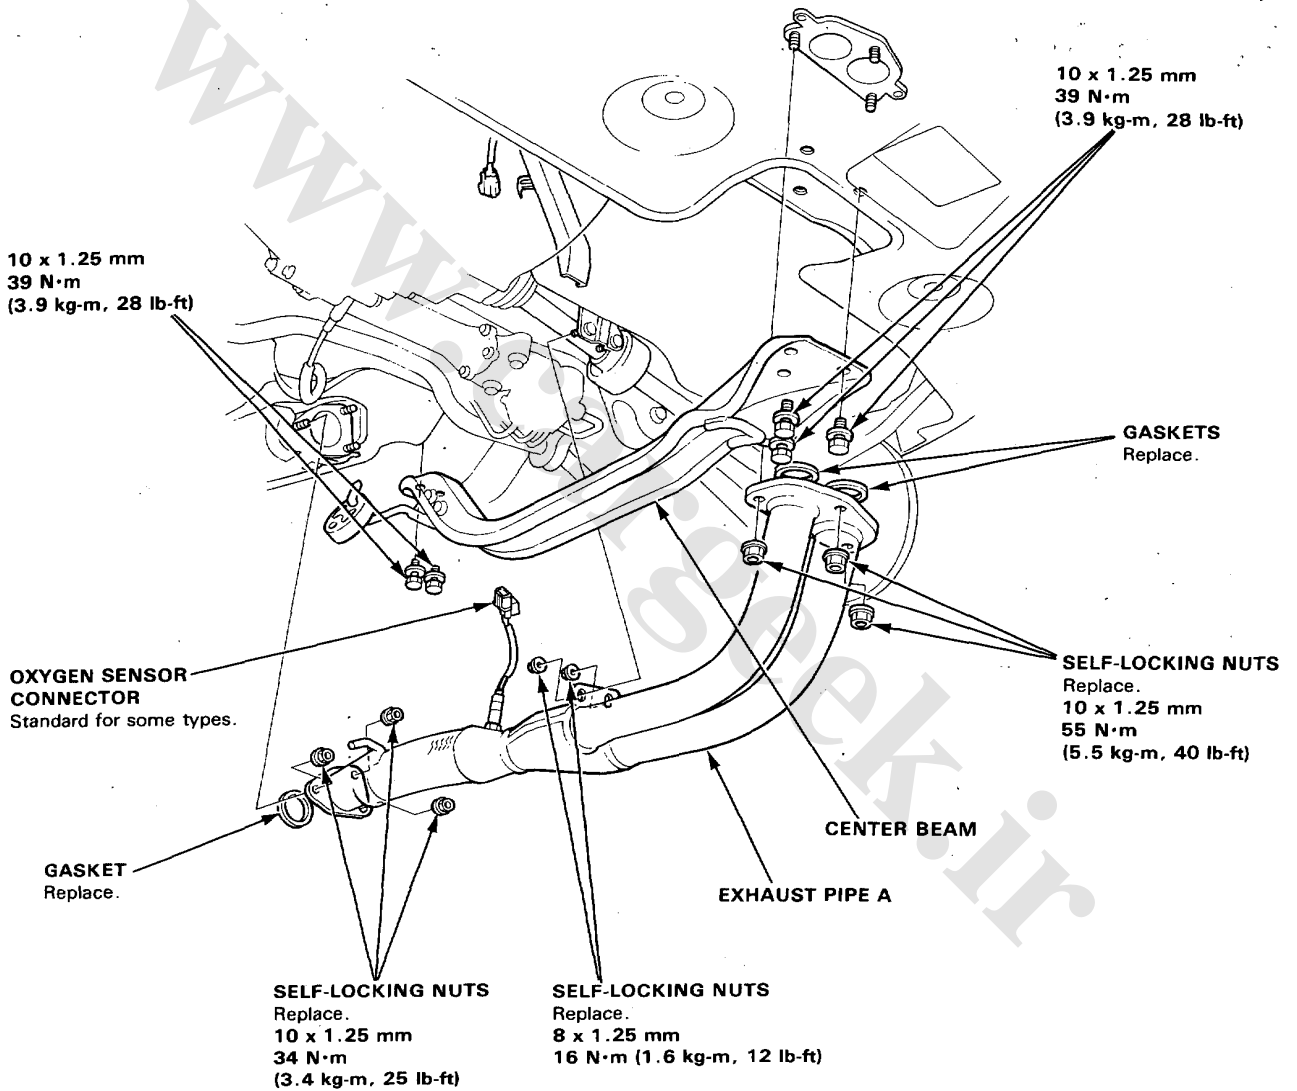


(cont'd)

Transmission

Installation (cont'd)


19. Install the speed sensor.
20. Install the rear mount bracket stay.
NOTE: Tighten the bolt first and then tighten the nut.
21. Install the starter motor and connect the starter motor cable.
22. Connect the lock-up control solenoid valve and shift control solenoid valve connectors.
23. Connect the speed sensor connectors.
24. Connect the transmission ground cable.
25. Connect the throttle control cable.
26. Install the battery base, air cleaner case and air intake hose.
27. Install the battery.
28. Connect the battery positive (+) and negative (-) cables to the battery.
29. Start the engine. Set the parking brake, and shift the transmission through all gears three times. Check for proper control cable adjustment.
30. Check the ignition timing (See section 16).
31. Let the engine reach operating temperature with the transmission in Neutral or Park, then turn it off and check the fluid level.
32. Road test as described on page 9-68.

8 x 1.25 mm
18 N·m (1.8 kg-m, 13 lb-ft)

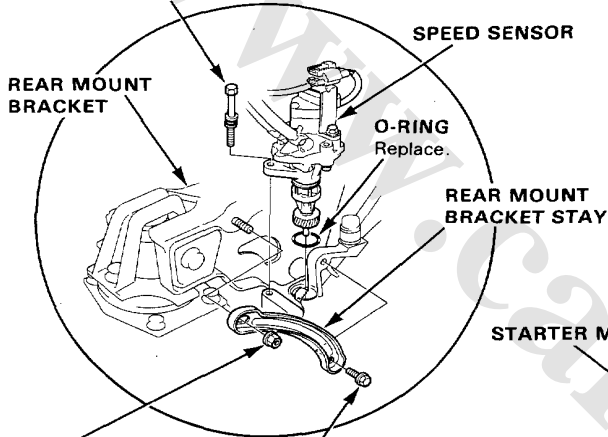

NUT
10 x 1.25 mm
21 N·m
(2.1 kg-m, 15 lb-ft)


BOLT
10 x 1.25 mm
39 N·m (3.9 kg-m,
28 lb-ft)

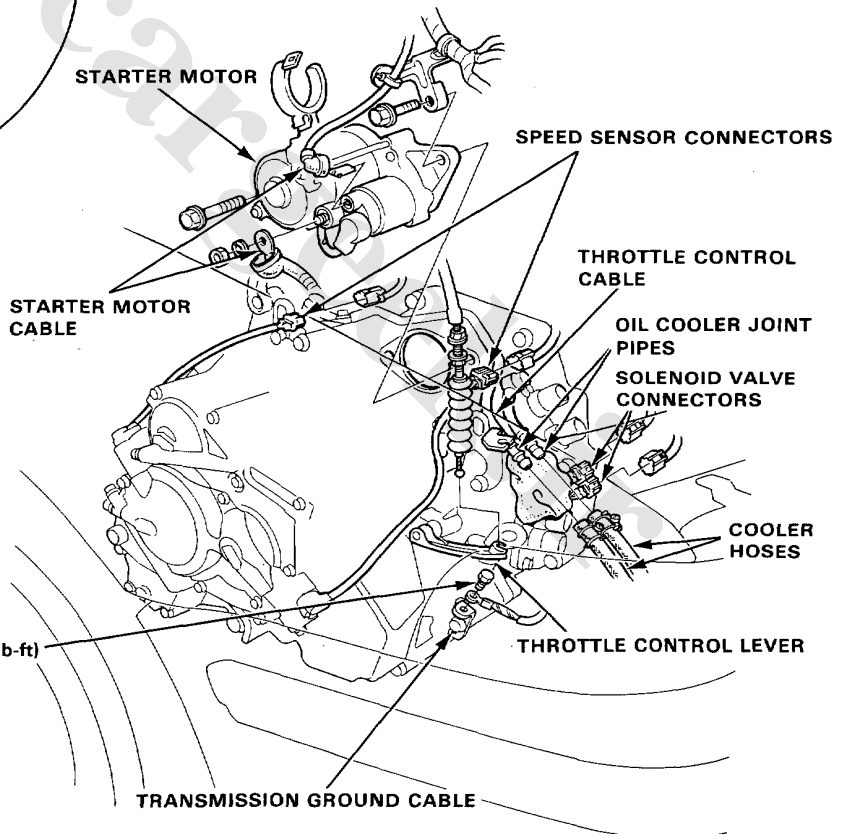

6 x 1.0 mm
12 N·m (1.2 kg-m, 9 lb-ft)






Gear Shift Selector

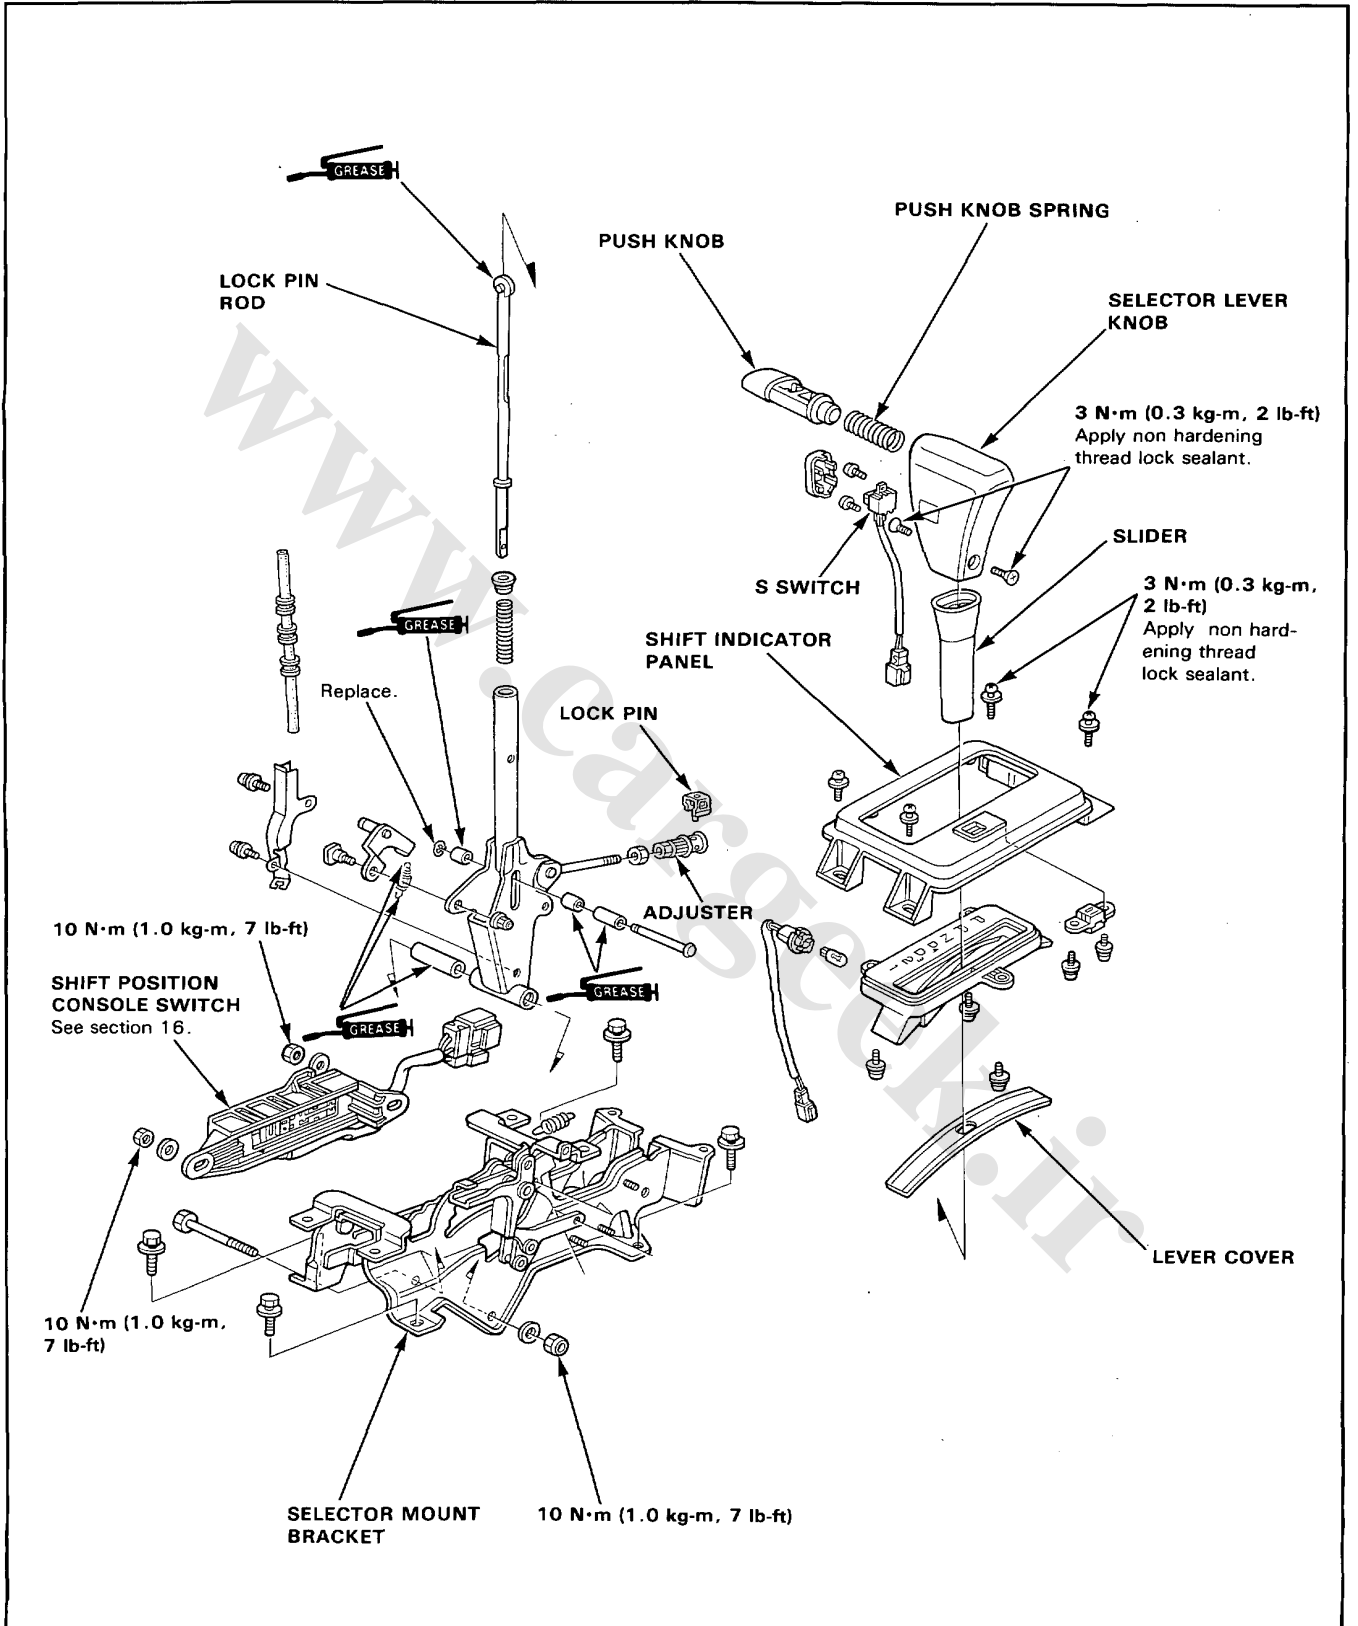


Shift Cable

Adjustment


1. Start the engine. Shift to reverse to see if the reverse gear engages. If not, refer to Troubleshooting.
2. With the engine off, remove the console.
3. Shift to **N** position, then remove the lock pin from the cable adjuster.

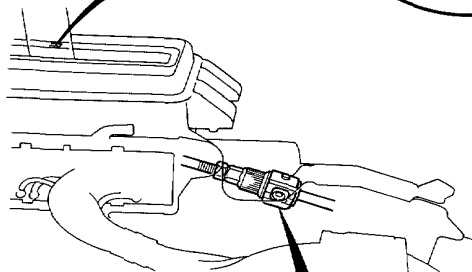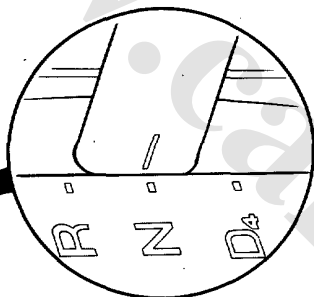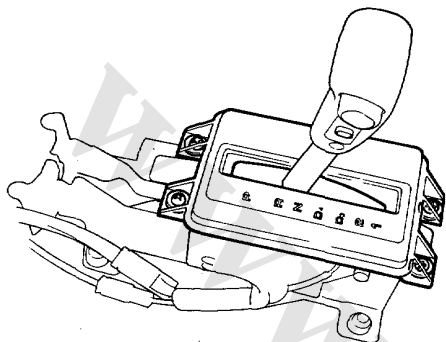

LOCK NUT
7 N·m
(0.7 kg-m, 5 lb-ft)

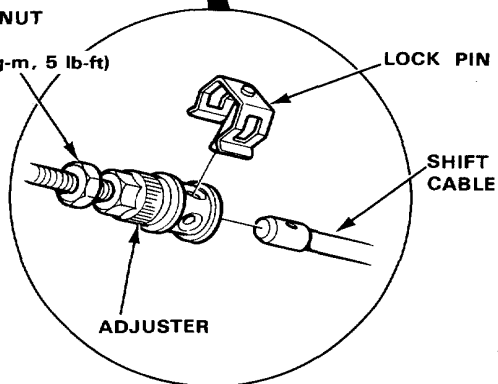

4. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable.

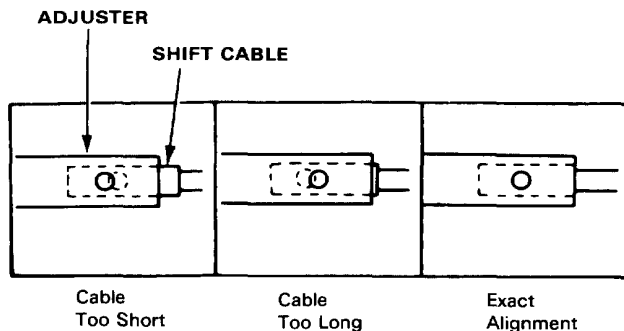

NOTE: There are two holes in the end of the shift cable. They are positioned 90° apart to allow cable adjustments in 1/4 turn increments.

5. If not perfectly aligned, loosen the lock nut on shift cable and adjust as required.
6. Tighten the lock nut.
7. Install the lock pin on the adjuster.

NOTE: If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted.

8. Start the engine and check the shift lever in all gears. If any gear does not work properly, refer to troubleshooting on page 9-64 thru 67.



Removal/Installation

⚠ WARNING


- Make sure jacks and safety stands are placed properly and hoist brackets are attached to correct positions on the engine.
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

1. Remove the front console.
2. Remove the lock pin from the cable adjuster.
3. Remove the bolts, then remove the cable bracket and cable guide.
4. Remove the exhaust pipe A and center beam.

5. Remove the torque converter cover and cable holder.
6. Remove the shift cable by removing the cotter pin, control lever pin and control lever roller from the control lever.

CAUTION: Take care not to bend the cable when removing it.

7. Install the shift cable in the reverse order of removal.
NOTE: On reassembly, check the cable adjustment.

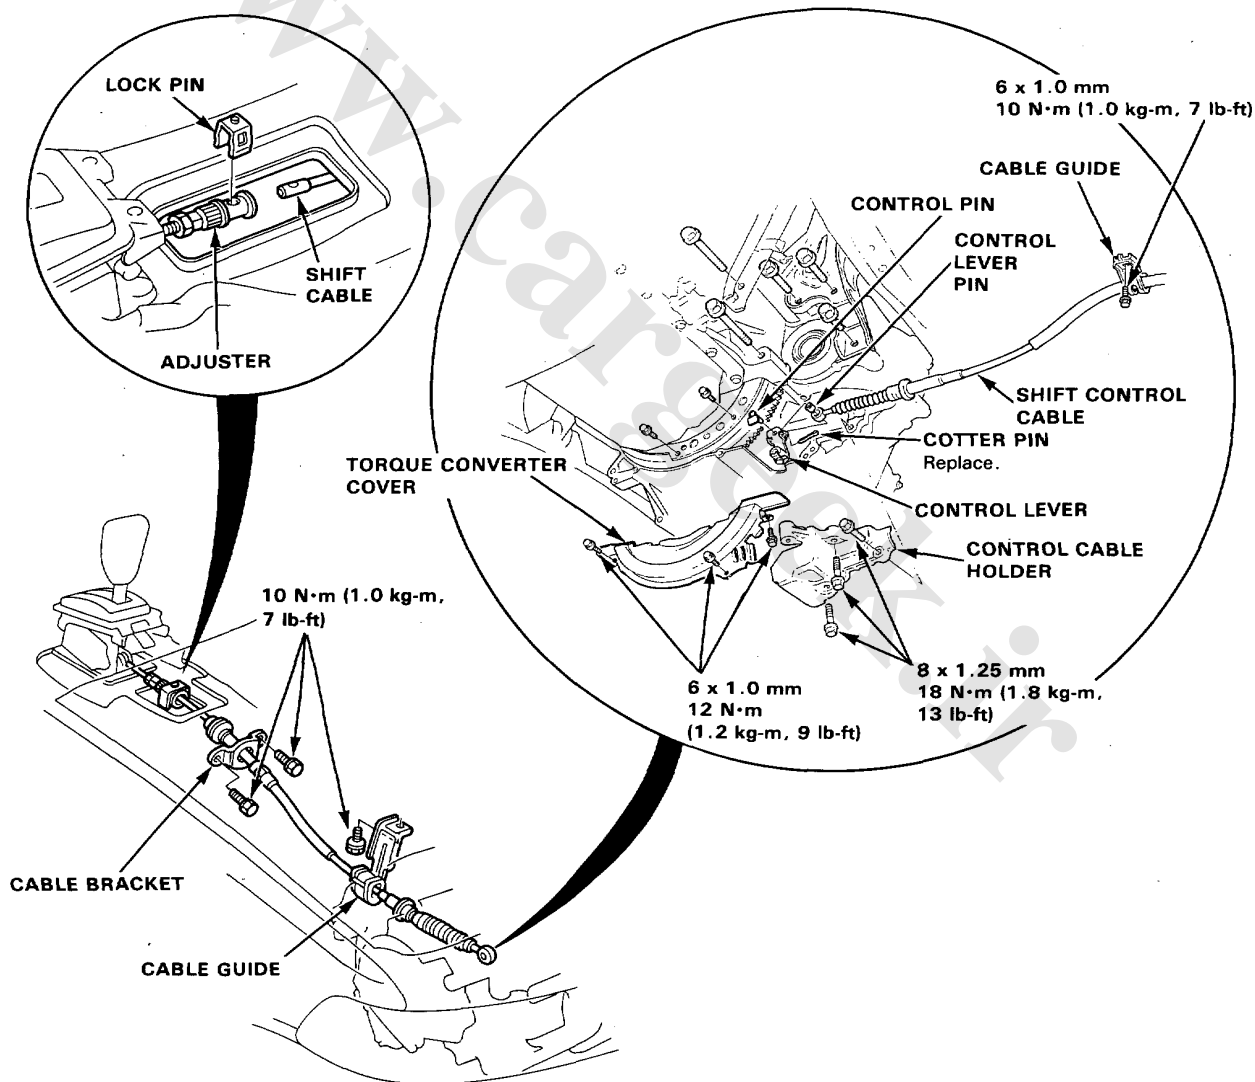

Throttle Control Cable

Adjustment/Inspection


NOTE: Before adjusting the throttle control cable, make sure:

- The throttle cable free play is correct. (See section 6)
- The engine is at normal operating temperature (cooling fan comes on).
- The idle speed is correct. (See section 6)

Inspection:

NOTE: You can work the throttle linkage body with your hand.


1. Remove the throttle cable free play.
2. Apply light thumb pressure to the throttle control lever, then work the accelerator or throttle linkage. The lever should move just as the engine speed increases above idle. If not, proceed to Adjustment.

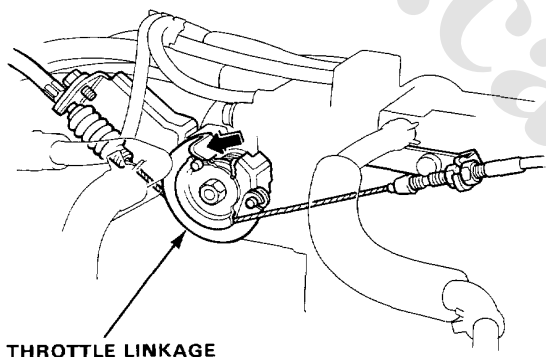

Adjustment:

1. Loosen the nuts on the control cable at the transmission end and synchronize the control lever to the throttle.

NOTE: To tailor the shift/lock-up characteristics to a particular customer's driving expectations, you can adjust the control cable up to 3 mm shorter than the "synchronized" point.

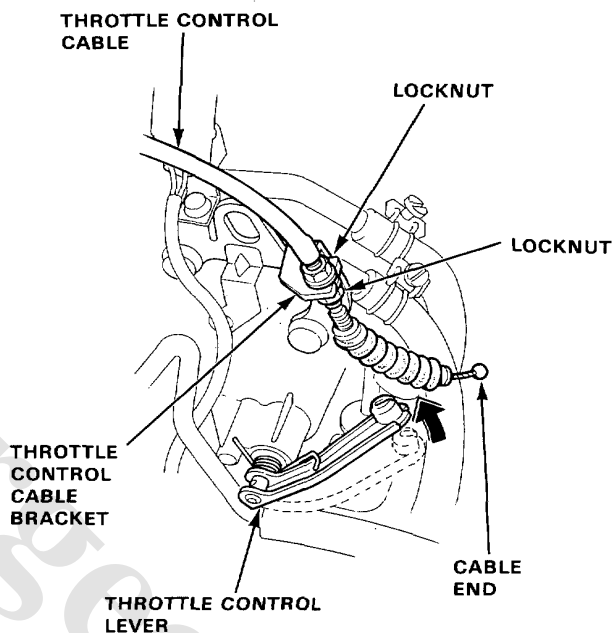

Special Tools

Driveshafts

Removal

Disassembly/Inspection

Reassembly

Intermediate Shaft

Replacement

Disassembly

Index/Inspection


Reassembly

www.cargeek.ir


Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07GAD—PG40100	Seal Driver Attachment	1	
②	07GAF—SD40700	Hub Dis/Assembly Base	2	
③	07LAD—SM40100	Seal Driver Attachment	1	
④	07746—0010200	Attachment, 37 x 40 mm	1	
⑤	07746—0010300	Attachment, 42 x 47 mm	1	
⑥	07746—0030100	Driver, 40 mm I.D.	1	
⑦	07749—0010000	Driver	1	
⑧	07947—SD90101	Seal Driver Attachment	1	
⑨	07965—SD90100	Support Base	1	
⑩	07LAF—SM40300	Support Base Attachment	1	




①



②

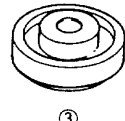

③



④




⑤




⑥




⑦

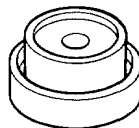

⑧

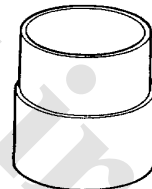

⑨

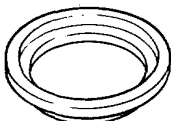


⑩


Driveshafts

Removal (cont'd)


10. Pry the driveshaft assembly with a screwdriver as shown to force the set ring at the driveshaft end past the groove.

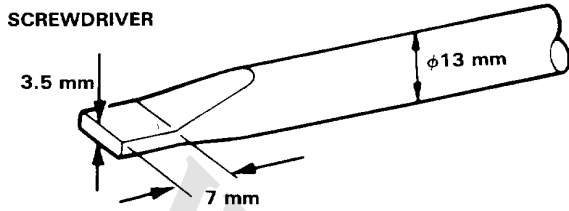

11. Pull the inboard joint and remove the driveshaft and CV joint out of the differential case or intermediate shaft as an assembly.

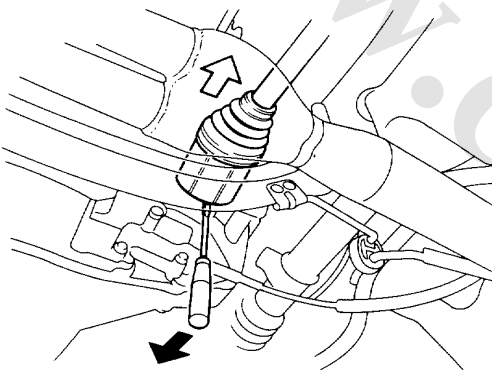

with intermediate shaft:

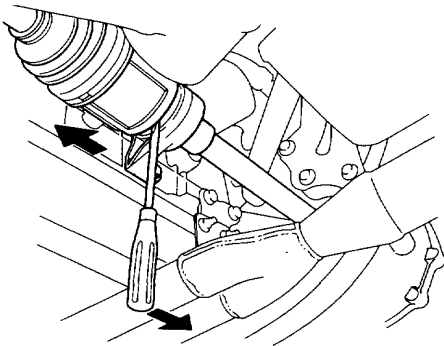

CAUTION:

- Do not pull on the driveshaft, as the CV joint may come apart.
- Use care when prying out the assembly and pull it straight to avoid damaging the differential oil seal or intermediate shaft dust seal.



Disassembly/Inspection

NOTE:



- Mark the rollers and roller grooves during disassembly to ensure proper positioning during reassembly.
- Before disassembly, mark the spider and driveshaft so they can be reinstalled in their original positions.
- The inboard joint must be removed to replace the boots.
- If the boot band is the welded type, cut off as shown.

CAUTION: Take care not to damage the boots.

GREASE Thoroughly pack the inboard joint and both joint boots with high quality molybdenum disulfide grease when reassembling.

Grease Quantity:

Inboard Joint	120~130 g
Outboard Joint	130~140 g

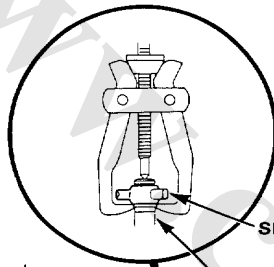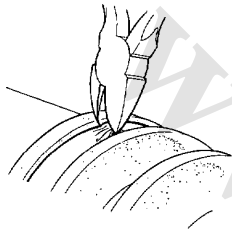

INBOARD JOINT

Check splines for wear or damage.
Check inside bore for wear.
Inspect for cracks.

SET RING
Replace.

GREASE
Pack cavity with grease.

CIRCLIP

STOPPER RING

GREASE
Pack cavity with grease.

INBOARD JOINT BOOT
Inspect for cracking, splitting and wear.

BOOT BAND
Replace.

BOOT BAND
Replace.

BAND
Replace.

GREASE
Pack cavity with grease.

DYNAMIC DAMPER
Automatic Transmission left driveshaft only.

BOOT BAND
Replace.

OUTBOARD JOINT BOOT
Inspect for cracking, splitting and wear.


BOOT BAND
Replace.

DRIVESHAFT


OUTBOARD JOINT
Inspect for faulty movement and wear.
Inspect ball bearings while rotating.
Do not try to disassemble.

OUTBOARD RING
Check for damage.


Automatic Transmission

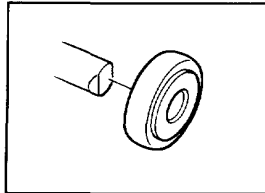

Manual Transmission

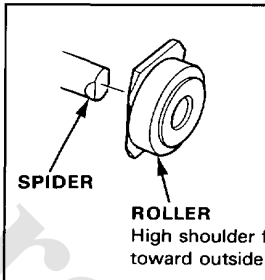


Install the holder or roller toward the slot of the inboard joint as shown below.

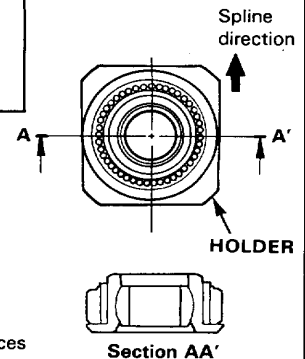


Driveshafts

Reassembly

1. Wrap the splines with vinyl tape to prevent damage to the boots and dynamic damper.
2. Install the outboard boot, dynamic damper and inboard boot to the driveshaft, then remove the vinyl tape.

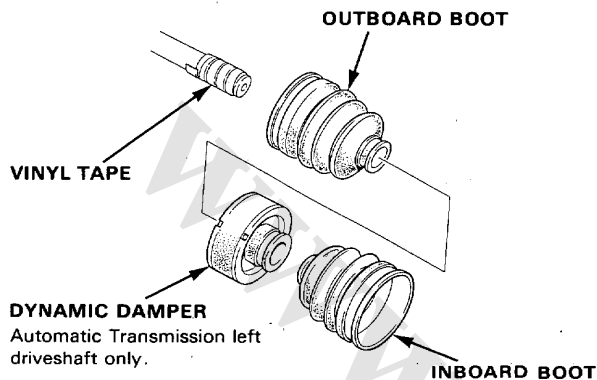


3. Install the stopper ring onto the driveshaft groove.
4. Install the spider on the driveshaft by aligning the marks on the spider and end of the driveshaft.
5. Fit the circlip onto the driveshaft groove.

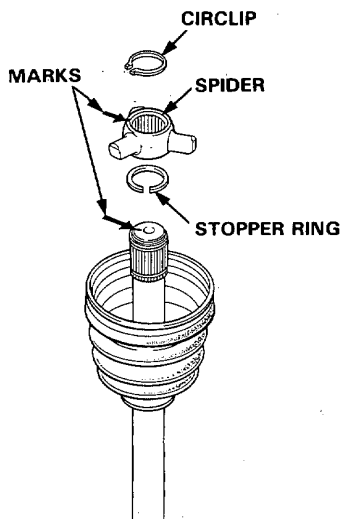

6. Pack the outboard joint boot with molybdenum disulfide grease.


Grease Quantity: 130~140 g

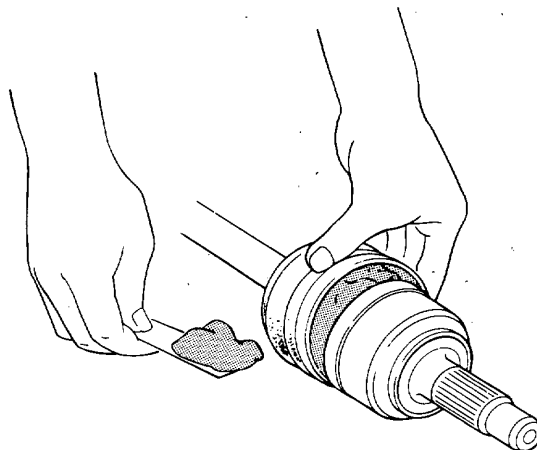

7. Fit the rollers to the spider with their high shoulders facing outward.

CAUTION:

- Reinstall the rollers to their original positions on the spider.
- Hold the driveshaft assembly so the spider and roller points up, to prevent it from falling off.

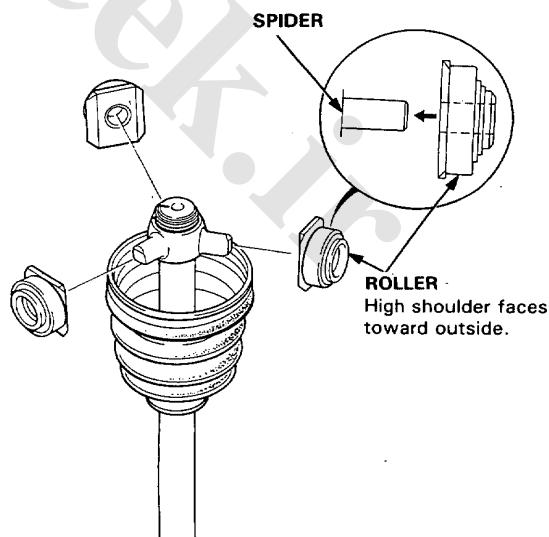




- Pack the inboard joint with molybdenum disulfide grease.

Grease Quantity: 120~130g


- Fit the inboard joint onto the driveshaft.

CAUTION: Hold the driveshaft assembly so the inboard joint points up, to prevent it from falling off.

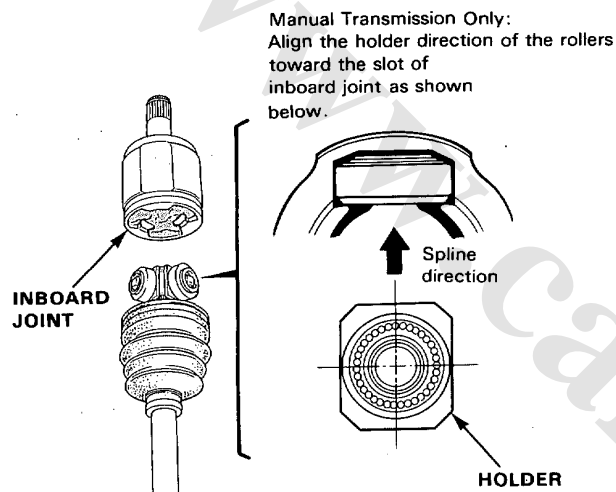


- Adjust the length of the driveshafts to the figure below, then adjust the boots to halfway between full compression and extension.

NOTE: The ends of boots seat in the groove of the driveshaft and joint.

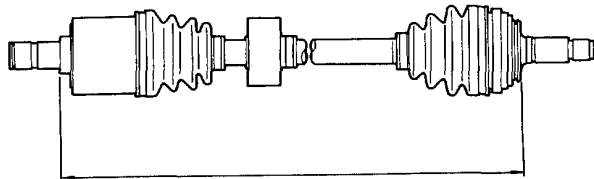


Manual Transmission:
L. R. 478.7–483.7 mm (18.85–19.04 in)
Automatic Transmission:
L. 836.7–841.7 mm (32.94–33.14 in)
R. 478.7–483.7 mm (18.85–19.04 in)

- Install new boot bands on the boot and bend both sets of locking tabs.
- Lightly tap on the doubled-over portions to reduce their height.

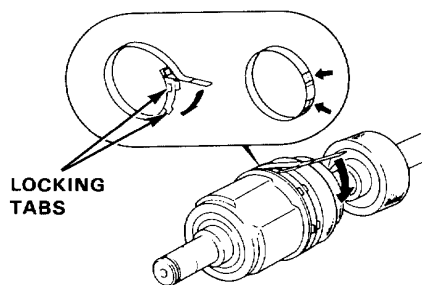

- Position the dynamic damper as shown below.

DYNAMIC DAMPER
Automatic Transmission left driveshaft only.

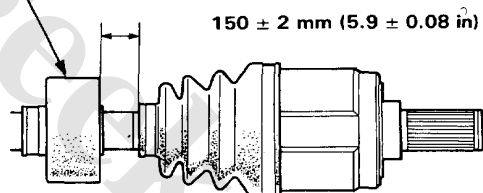

- Lightly tap on the doubled-over portion to reduce its height.
- Install a new dynamic damper band and bend down both sets of locking tabs.

(cont'd)

Driveshafts


Intermediate Shaft

Reassembly (cont'd)

16. Install a new set ring in the driveshaft groove.
17. Install the inboard end of the driveshaft into differential or intermediate shaft.

CAUTION:

- Always use a new set ring whenever the driveshaft is being installed.
- Make sure the driveshaft locks in the differential side gear groove, and the CV joint subaxle bottoms in the differential or intermediate shaft.

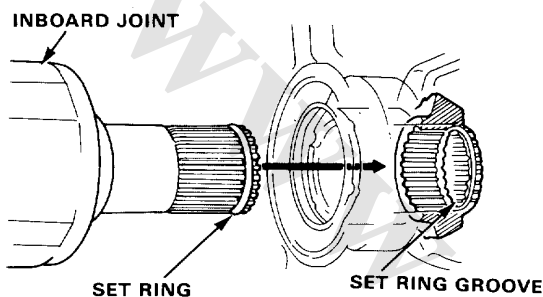


18. Refill the transmission.

Replacement


1. Drain oil from the transmission.
2. Remove the three 10 mm flange bolts.

FLANGE BOLT
10 x 1.25 mm
39 N·m (3.9 kg-m, 28 lb-ft)

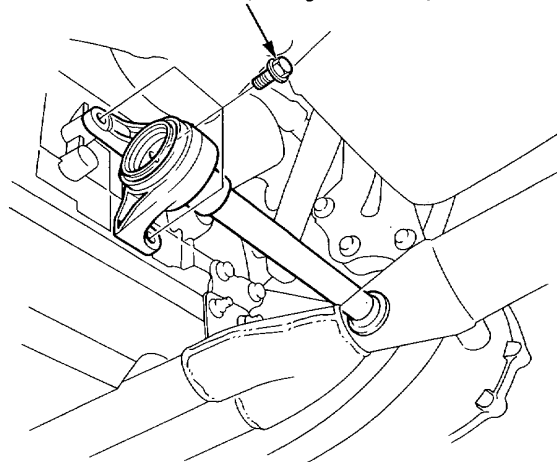


3. Lower the bearing support close to the steering gear box and remove the intermediate shaft from the differential.

CAUTION: To prevent damage to the differential oil seal, hold the intermediate shaft horizontal until it is clear of the differential.

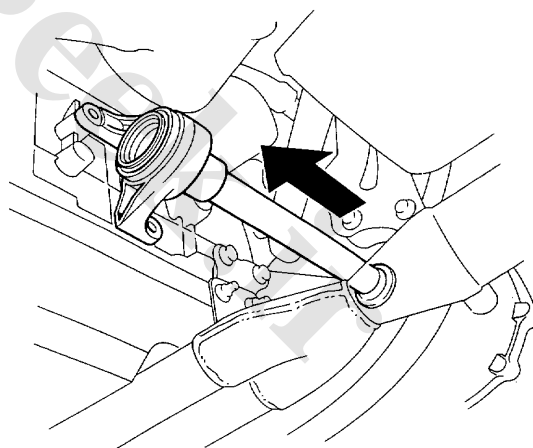


Installation is the reverse order of removal.




Disassembly


1. Remove the intermediate shaft outer seal.
2. Remove the external circlip.

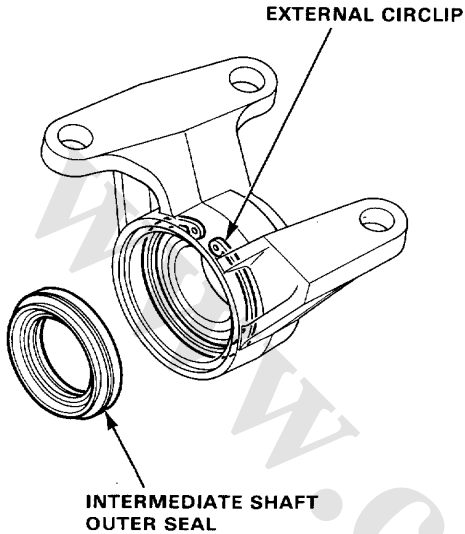


3. Press the intermediate shaft out of the shaft bearing using the special tool.

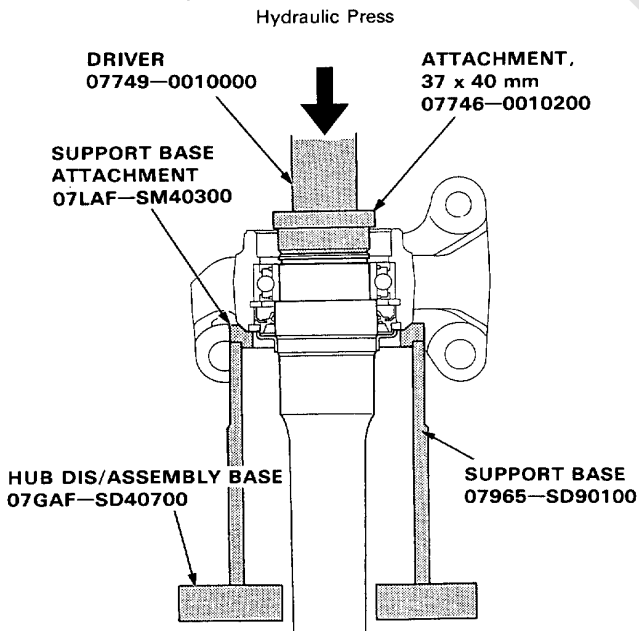

4. Remove the intermediate shaft inner seal.
5. Remove the internal circlip.

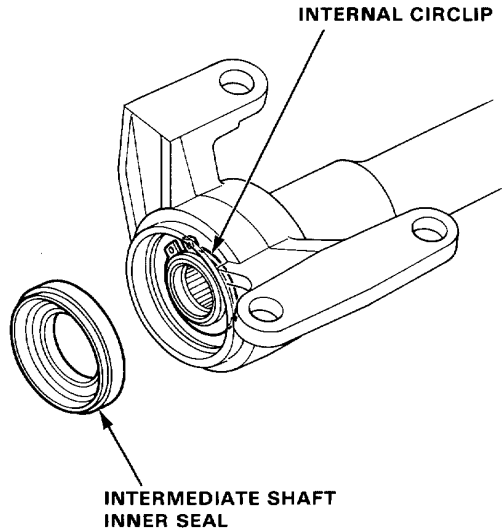


6. Press the intermediate shaft bearing out of the bearing support.

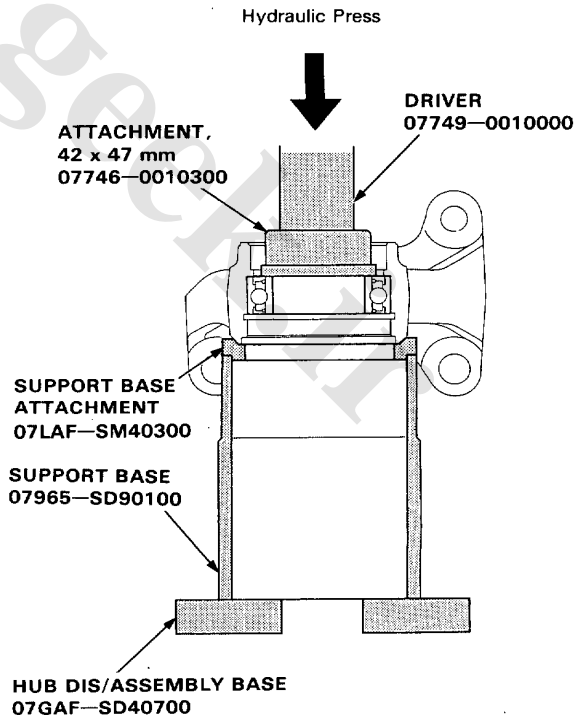

Intermediate Shaft


Index/Inspection

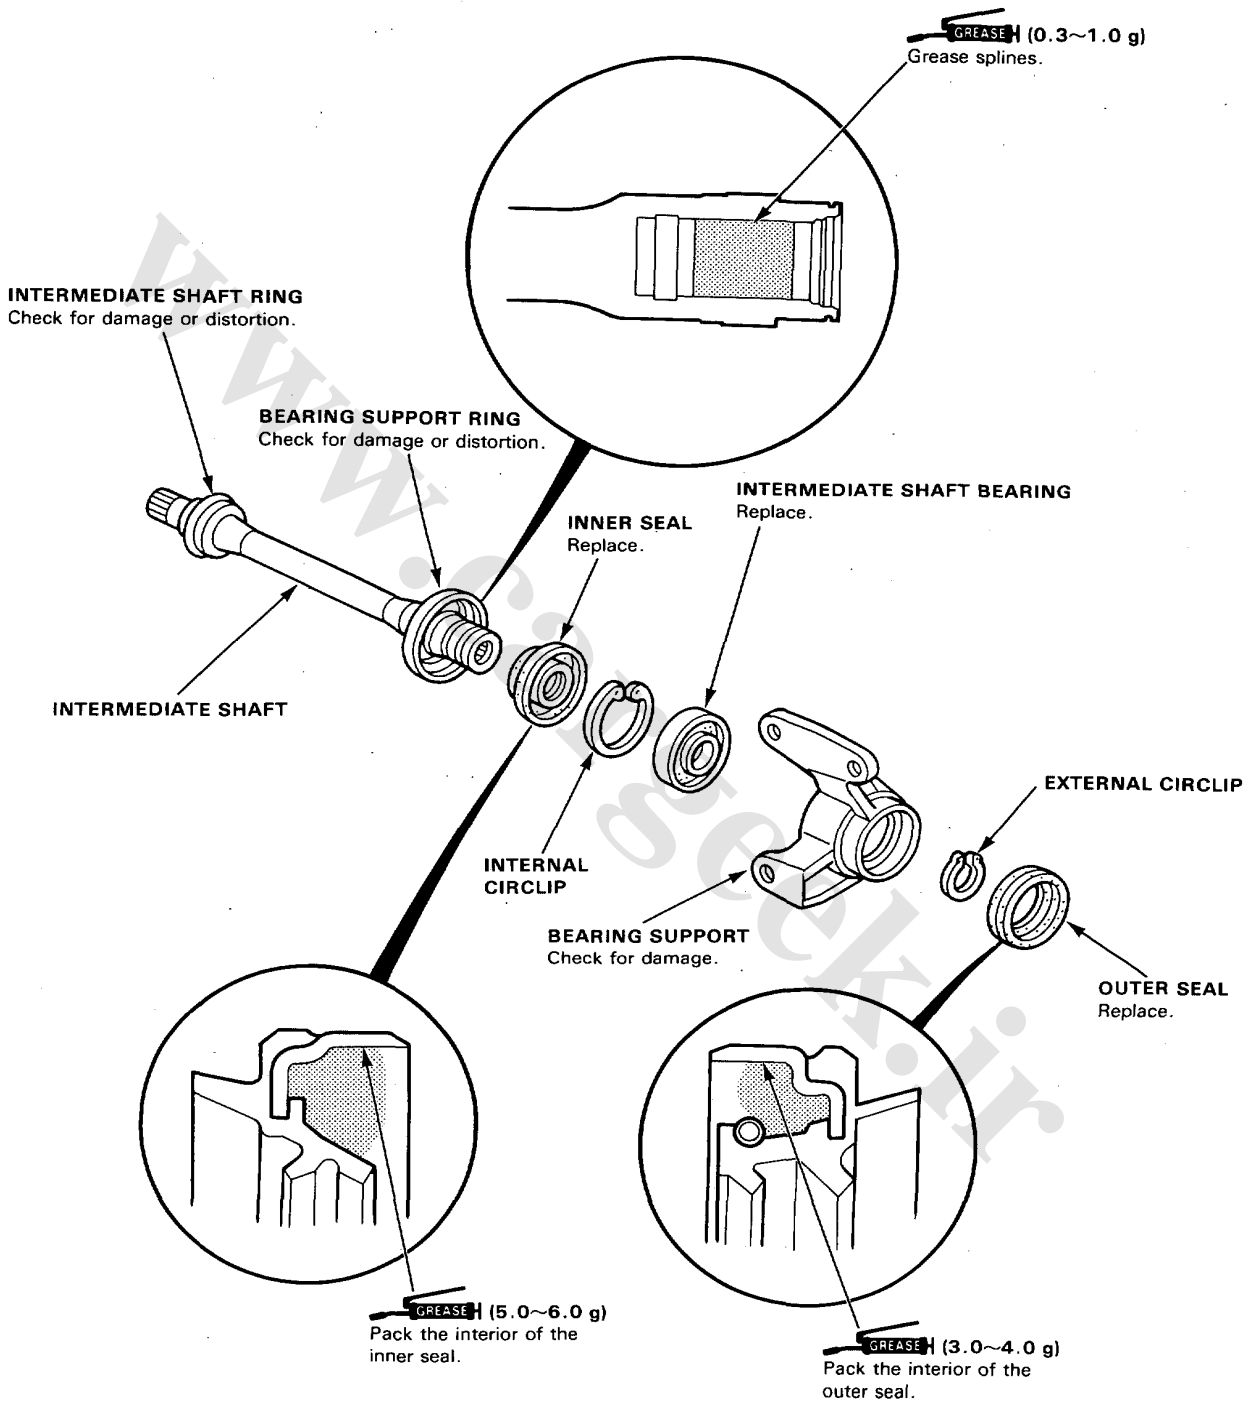



Reassembly


1. Press the intermediate shaft bearing into the bearing support using the special tool.

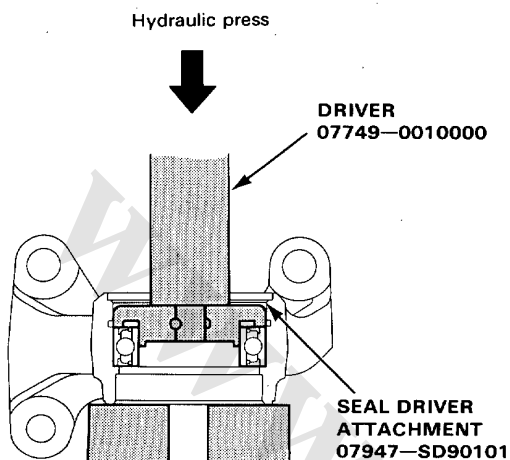


2. Seat the 58 mm internal circlip in the groove of the bearing support.

CAUTION: Install the circlip with the tapered end facing out.

3. Press the intermediate shaft inner seal into the bearing support using the special tool.

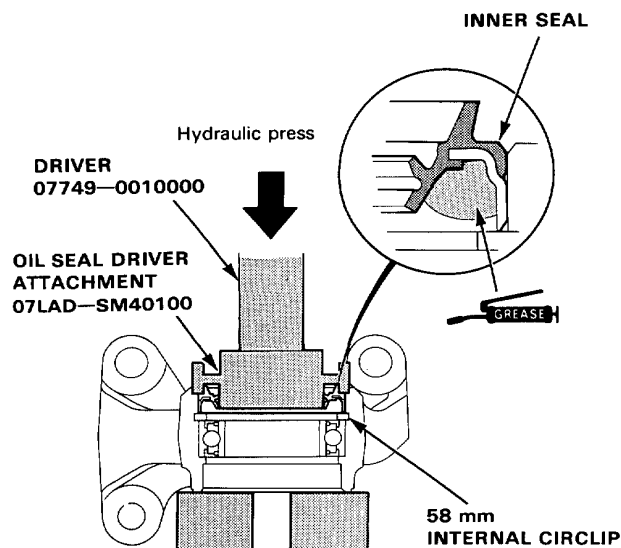


4. Press the intermediate shaft into the shaft bearing.

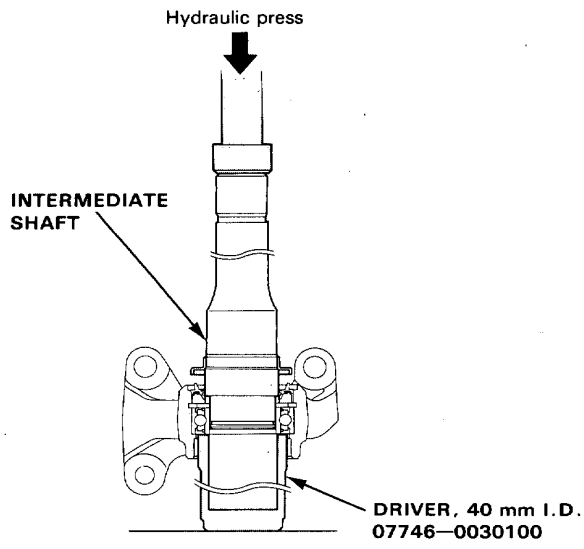

5. Seat the 38 mm external circlip in the groove of the intermediate shaft.

CAUTION: Install the circlip with the tapered end facing out.

6. Press the outer seal into the bearing support using the special tool.

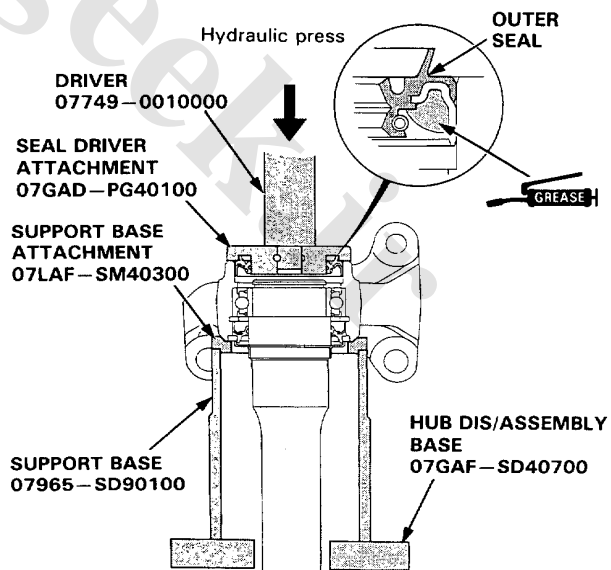

[Special Tools \(2WS/4WS\)](#)

[Special Tools \(4WS\)](#)

Component Location

[Index \(2WS\)](#)

[Index \(4WS\)](#)

Troubleshooting (2WS)

[General Troubleshooting](#)

[Noise and Vibration](#)

[Fluid Leaks](#)

Troubleshooting (4WS)

[General Troubleshooting](#)

[Noise and Vibration](#)

[Fluid Leaks](#)

Maintenance

[Pump Belt Adjustment](#)

On-Car Check

[Rack Guide Adjustment](#)

[Fluid Replacement](#)

[Pump Pressure Check](#)

[Steering Wheel Rotational](#)

[Play](#)

[Power Assist Check](#)

[Speed Sensor Replacement](#)

[4WS Steering Gearbox](#)

[Centering](#)

[Rear Wheel Turning Angle](#)

[Inspection \(4WS\)](#)

Steering Wheel

[Disassembly/Reassembly](#)

Steering Colume

[Removal](#)

[Inspection](#)

[Installation](#)

Steering Pump

[Illustrated Index](#)

[Replacement](#)

[Preload Inspection](#)

[Pulley Replacement](#)

[Control Valve Inspection and](#)

[Replacement](#)

[Housing Disassembly](#)

[Housing Reassembly](#)

Steering Gearbox

[Valve Body Unit Overhaul](#)

[Steering Gearbox Removal](#)

[Illustrated Index \(2WS\)](#)

[Illustrated Index \(4WS\)](#)

[Steering Gearbox Overhaul](#)

[\(2WS\)](#)

[Steering Gearbox Overhaul](#)

[\(4WS\)](#)

[Steering Gearbox Installation](#)

Rear Steering Gearbox (4WS)

[Illustrated Index](#)

[Replacement](#)

[Neutral Positioning Off-car](#)

[Stroke Rod Holders](#)

[Function Inspection](#)

[Tie-rod Replacement](#)


[Offset Shaft Dust Cover](#)

[Replacement](#)

Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07GAG—SD40300	Cylinder End Seal Slider	1	
②	07HAG—SF10100	Piston Seal Ring Guide	1	
③	07HAG—SF10200	Piston Seal Ring Sizing Tool	1	
④	07HAG—SD40400	Pinion Seal Ring Guide	1	
⑤-1	07LAK—SM40110	P/S Joint Adapter (Pump)	1	
⑤-2	07LAK—SM40120	P/S Joint Adapter (Hose)	1	
⑥	07406—0010001	P/S Pressure Gauge Set	1	
⑥-1	07406—0010300	Pressure Control Valve	1	
⑥-2	07406—0010400	Pressure Gauge	1	
⑦	07406—0010101	Bypass Tube Joint (included with 07406—0010001)	1	
⑧	07725—0030000	Universal Holder	1	
⑨	07746—0010300	Attachment 42 x 47 mm	1	
⑩	07749—0010000	Driver	1	
⑪	07916—SA50001	Locknut Wrench 40 mm	1	
⑫	07941—6920003	Ball Joint Remover	1	
⑬	07947—6340300	Driver Attachment	1	
⑭	07JGG—0010100	Belt Tension Gauge	1	
⑮	07974—SA50600	Pinion Seal Guide	1	

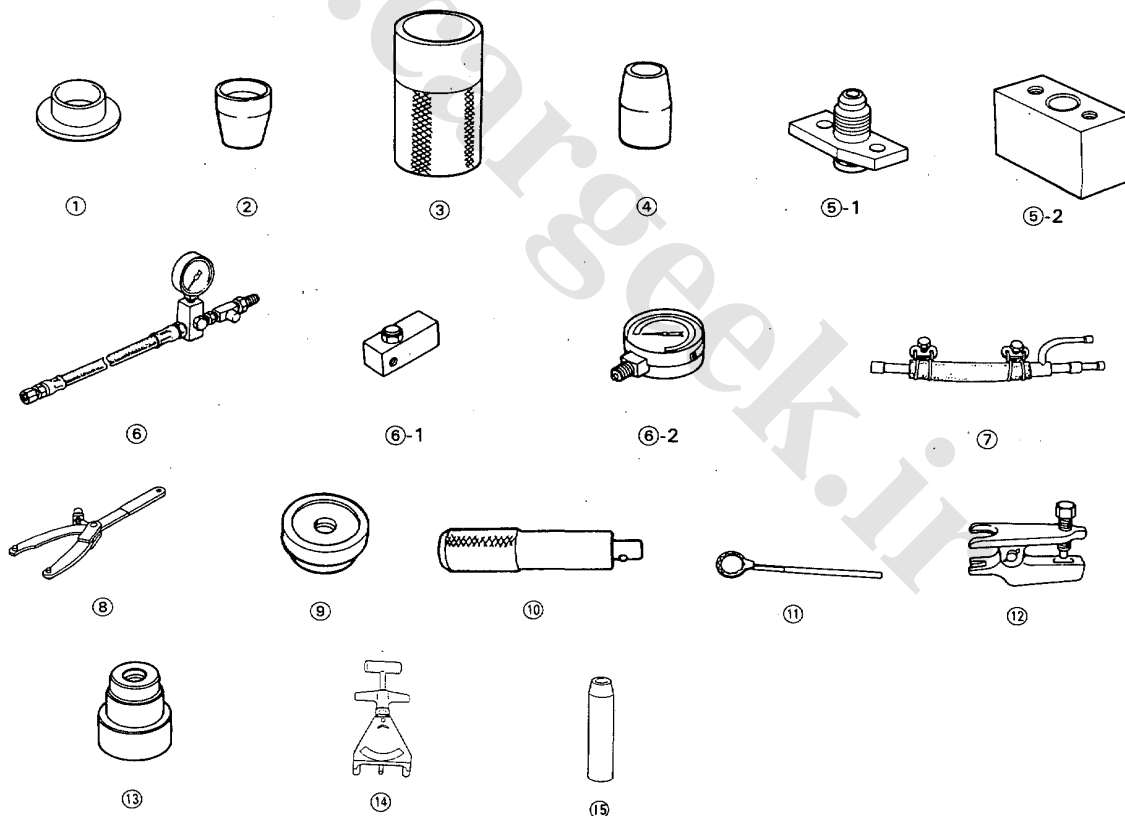




Special Tools (4WS only)

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07703-0010101	Torx Bit Driver T40	1	
②	07LAG-SM40000	4WS Tool Kit	1	
②-1	07LAG-SM40100	Piston Seal Ring Guide	1	
②-2	07LAG-SM40200	Piston Seal Ring Sizing Tool	1	
②-3	07LAG-SM40300	Cylinder End Seal Slider	1	
②-4	07LAG-SM40400	Cylinder End Seal Guide	1	
②-5	07LAG-SM40500	Tool Box	1	
③	07HAG-SF10000	4WS Tool Kit	1	
③-1	07HAG-SF10400	Pinion Seal Ring Sizing Tool	1	
③-2	07HAG-SF10500	Driven Seal Ring Guide	1	
④	07HAJ-SF10100	Rack Adjuster Gauge Holder Set	1	
⑤	07HAJ-SF10201	Rear Steering Center Lock Pin	1	
⑥	07HAJ-SF10300	Stroke Rod Holder Set	1	
⑦	07HAJ-SF10400	Inspection Adapter	1	
⑧	07LAA-SM40100	Lock Nut Wrench 43 mm	1	
⑨	07LAA-SM40200	Lock Nut Socket 36 x 43 mm	1	

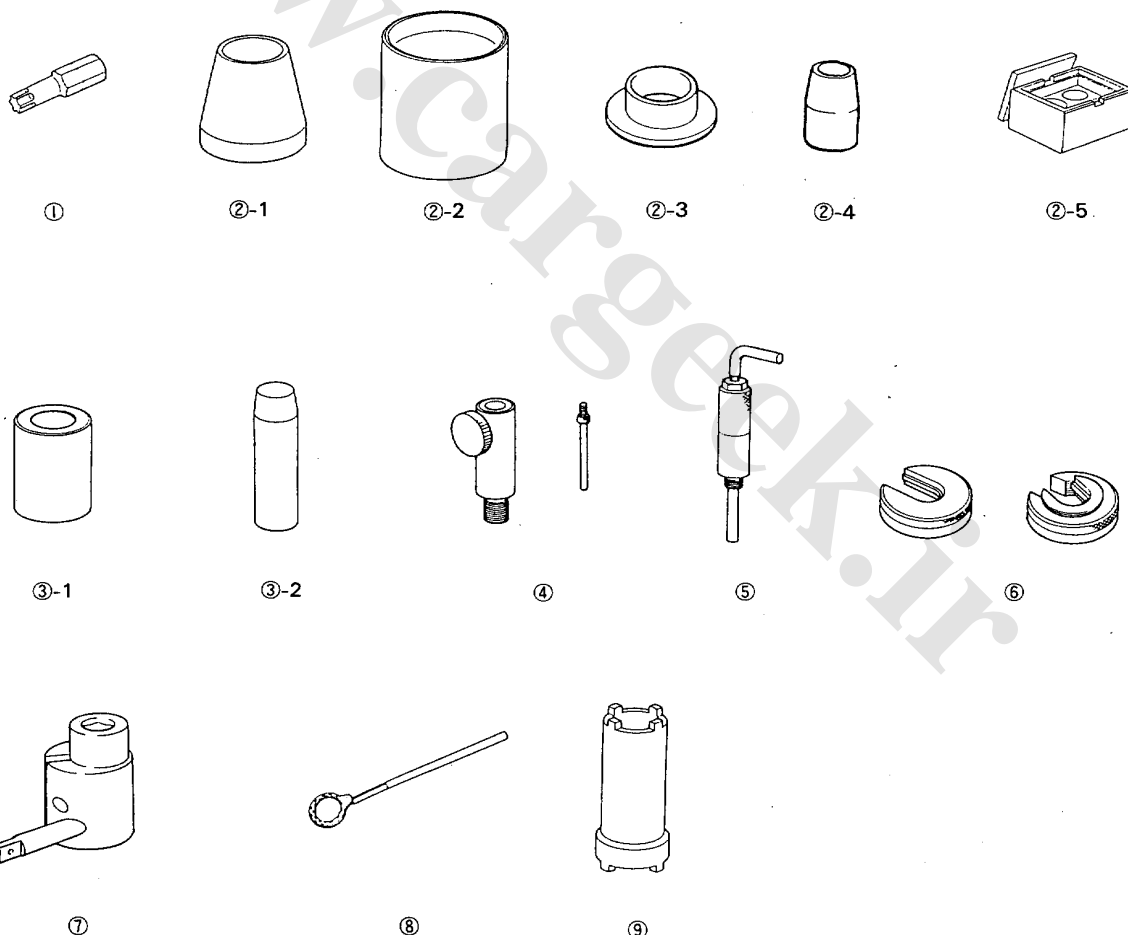


Component Location

Index

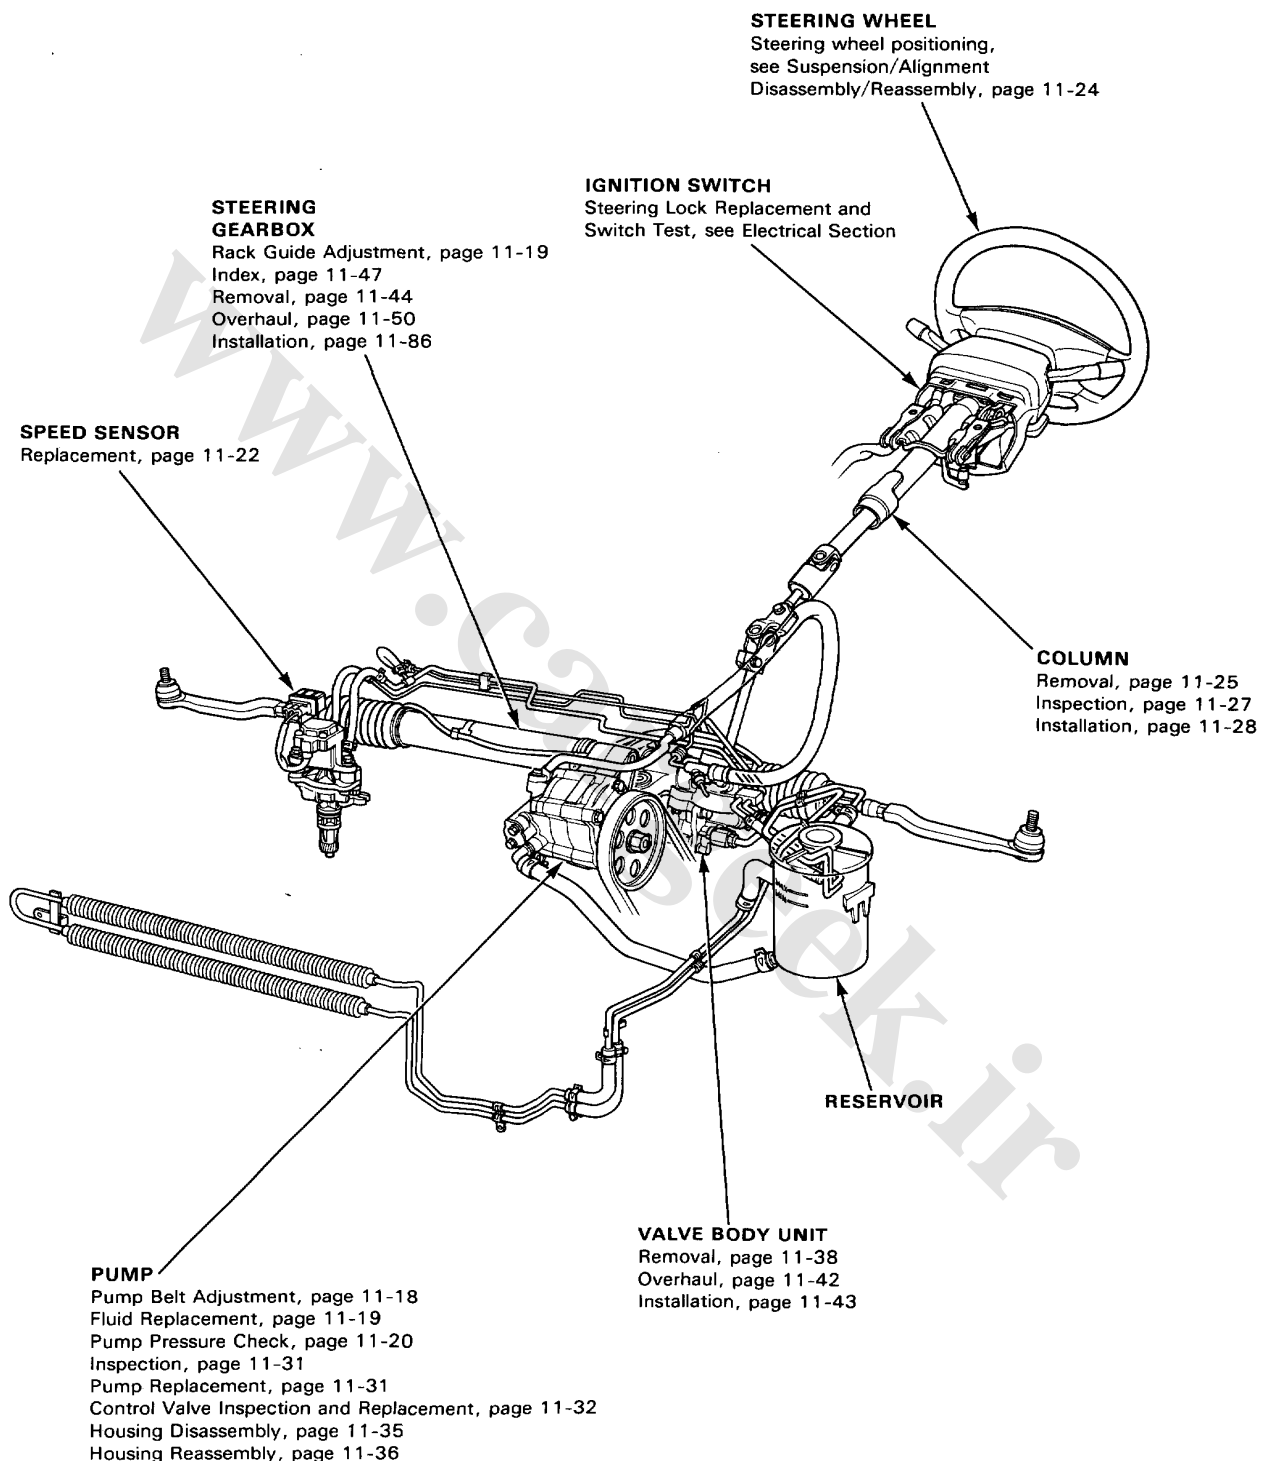



Index (4WS)

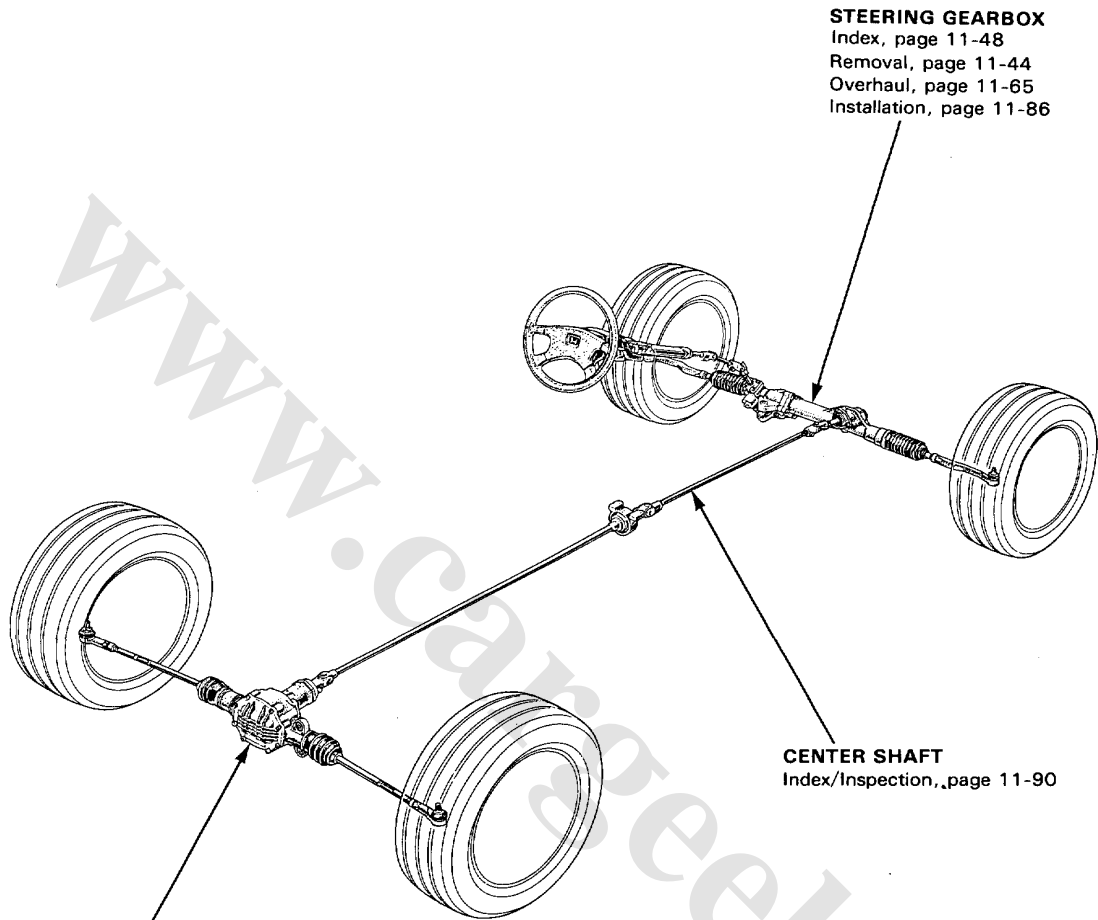

STEERING GEARBOX
Index, page 11-48
Removal, page 11-44
Overhaul, page 11-65
Installation, page 11-86

CENTER SHAFT
Index/Inspection, page 11-90


REAR GEARBOX
Replacement, page 11-91
Neutral Positioning, page 11-92
Stroke Rod Holders, page 11-93
Functional Inspection, page 11-94
Tie-rod Replacement, page 11-95
Off-set Shaft Cover Replacement, page 11-96

Troubleshooting (2WS)

General Troubleshooting


Check the following before you begin:

- Has the suspension been modified in a way that would affect steering?
- Are tire sizes and air pressure correct?
- Is the steering wheel original equipment or equivalent?
- Is the power steering pump belt properly adjusted?
- Is steering fluid reservoir filled to proper level?
- Is the engine idle speed correct and steady?

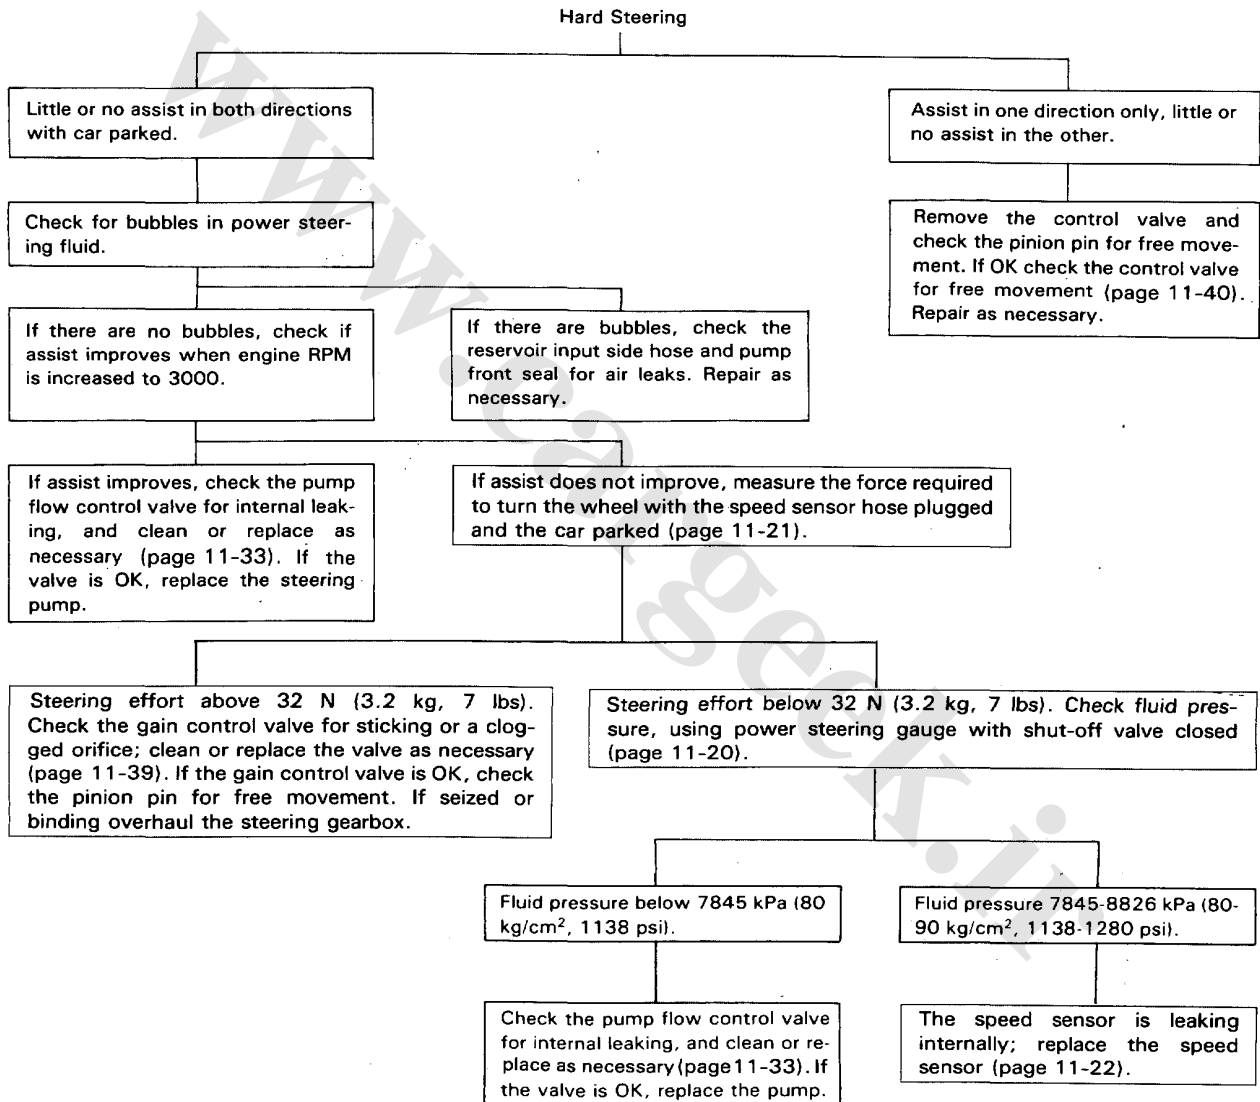




Uneven or rough steering.

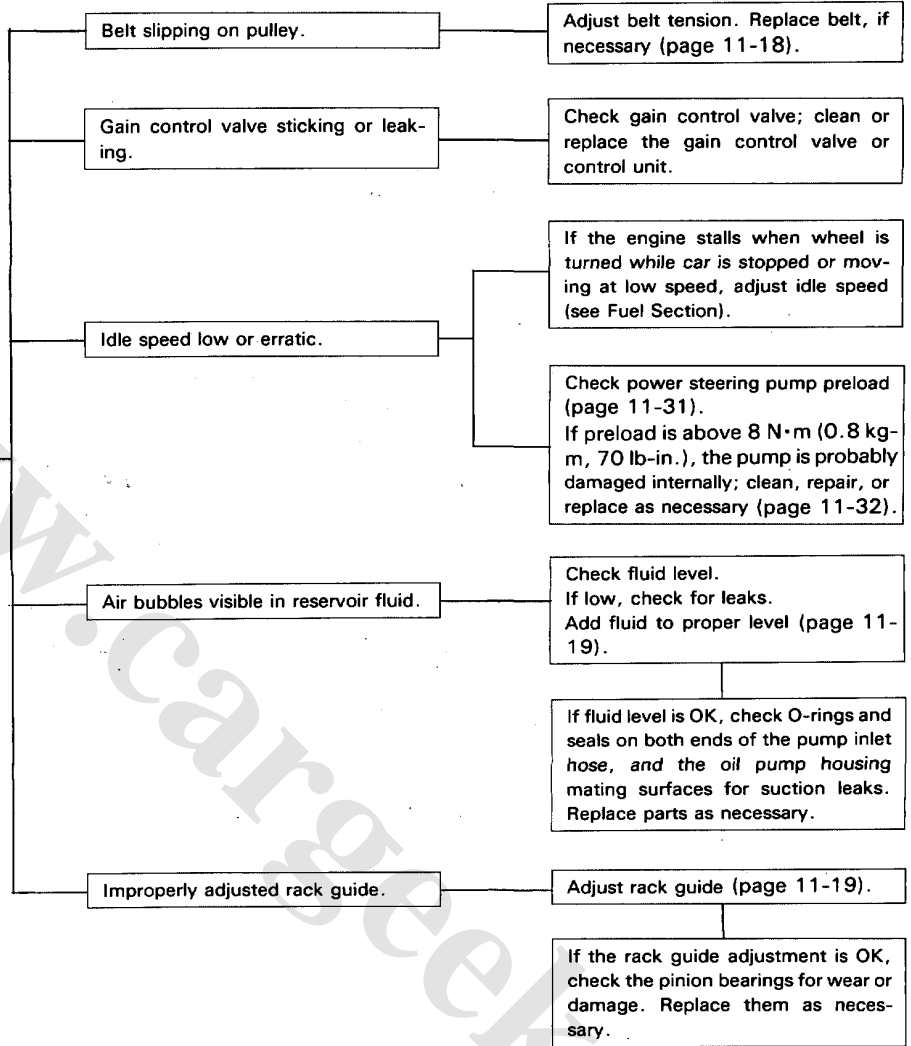

(cont'd)

Troubleshooting (2WS)


General Troubleshooting (cont'd)

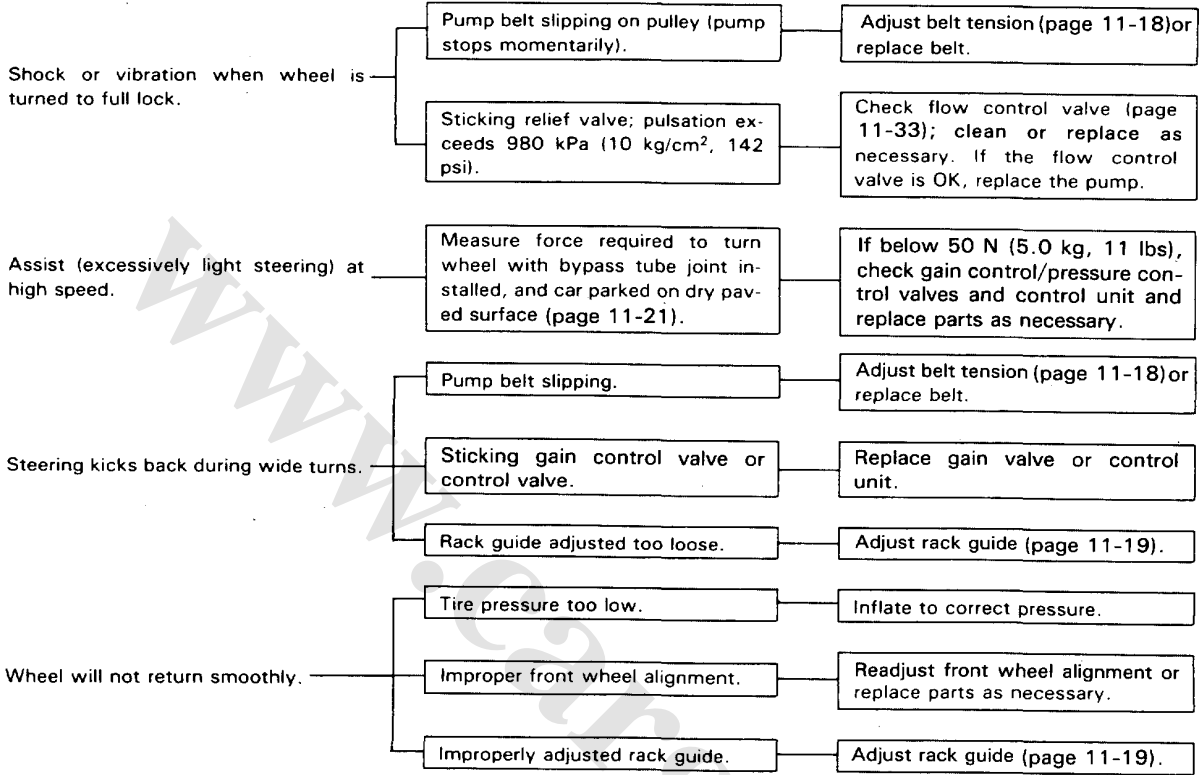




Noise and Vibration

NOTE: Pump noise in first 2–3 minutes after starting in cold weather (– 20°C, – 4°F or colder) is normal.

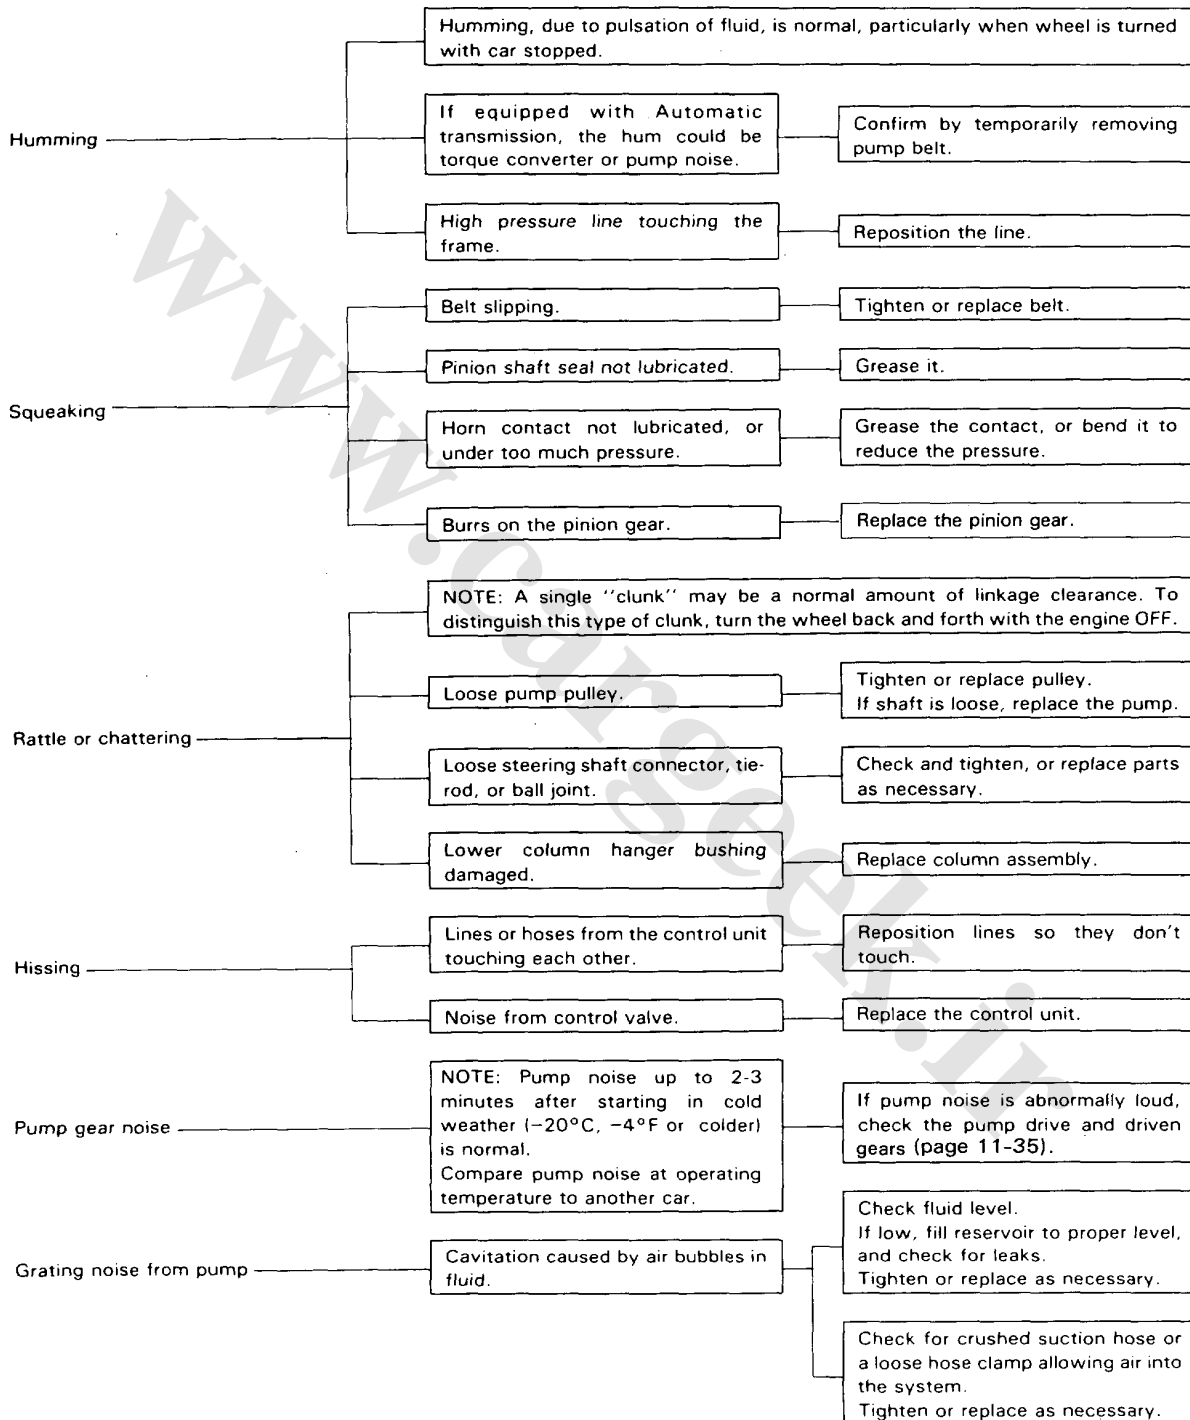

Troubleshooting (2WS)

Fluid Leaks

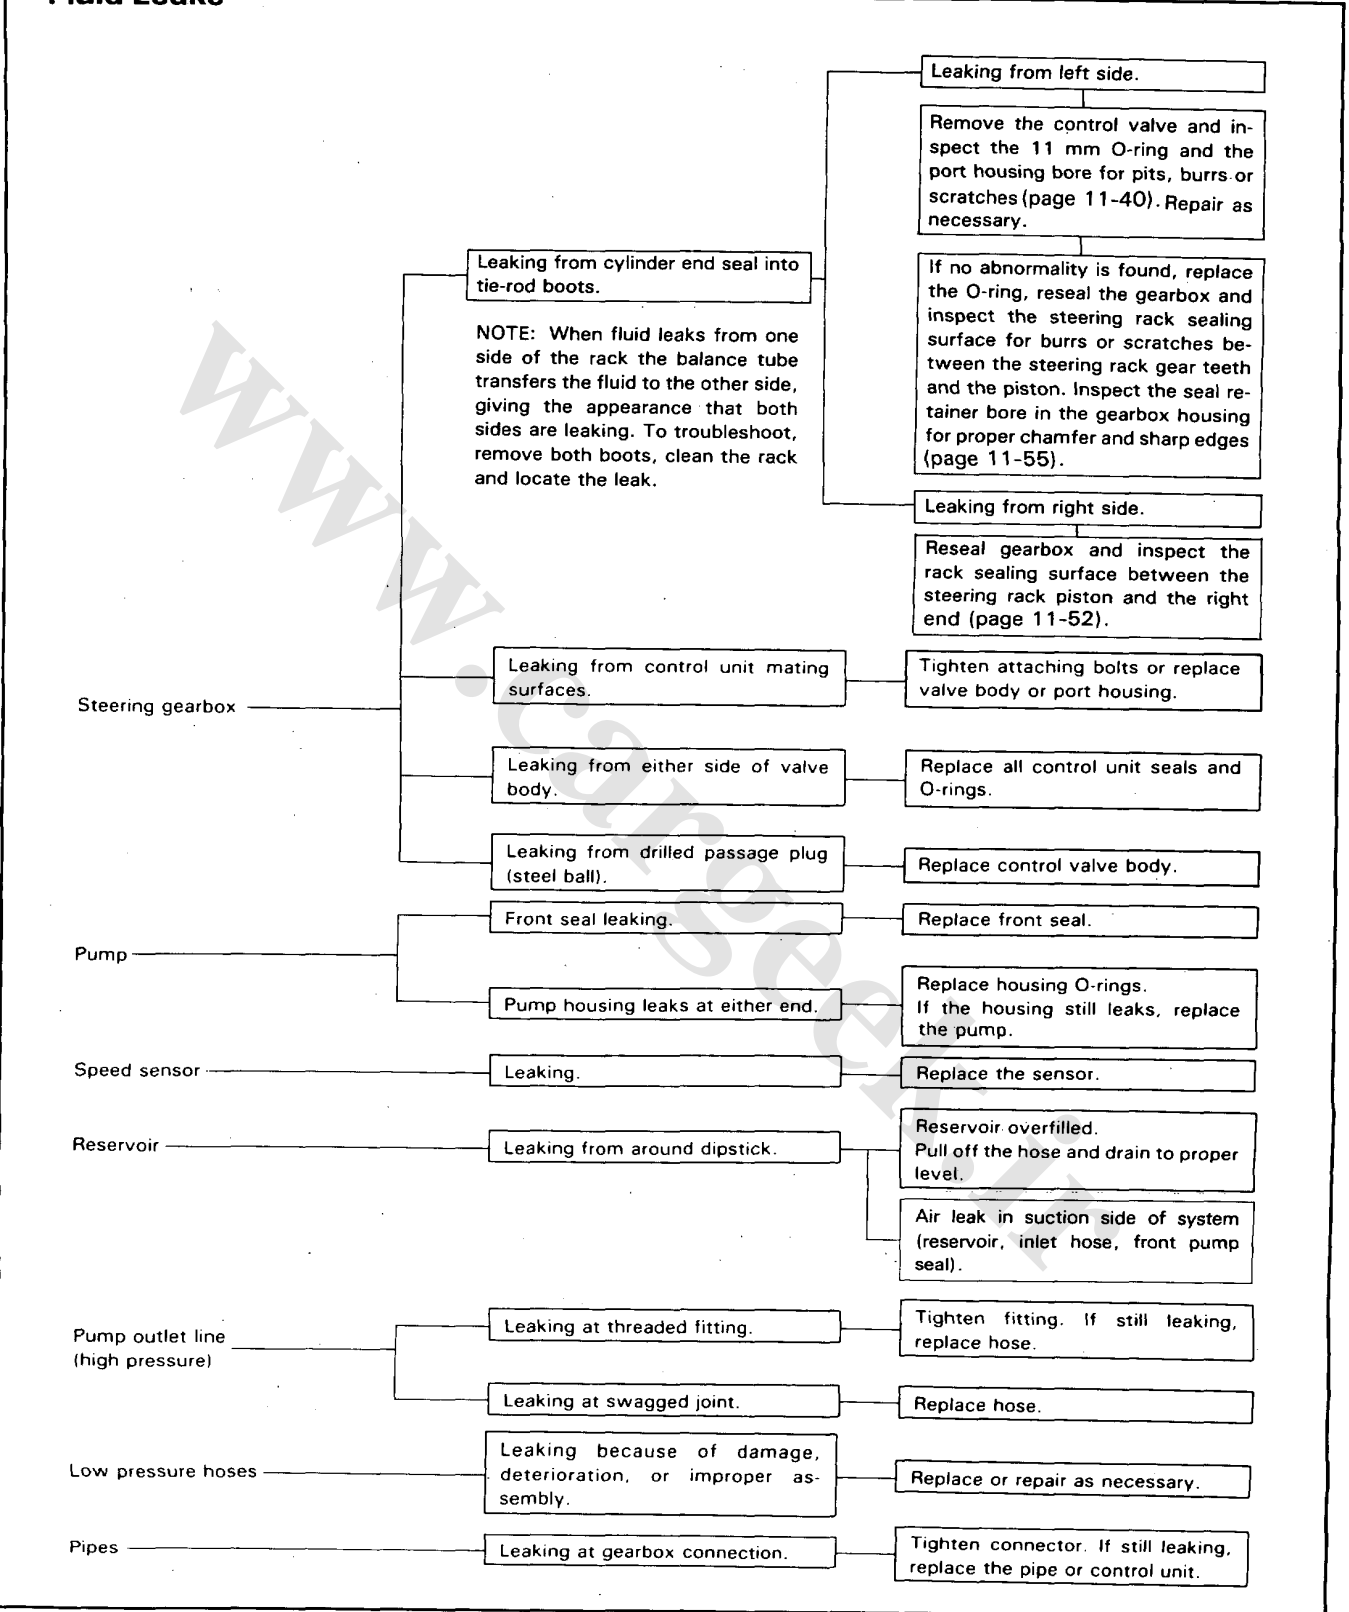




Troubleshooting (4WS)

General Troubleshooting

Check the following before you begin:

- Has the suspension been modified in a way that would affect steering?
- Are tire sizes and air pressure correct?
- Is the steering wheel original equipment or equivalent?
- Is the power steering pump belt properly adjusted?
- Is steering fluid reservoir filled to proper level?
- Is the engine idle speed correct and steady?

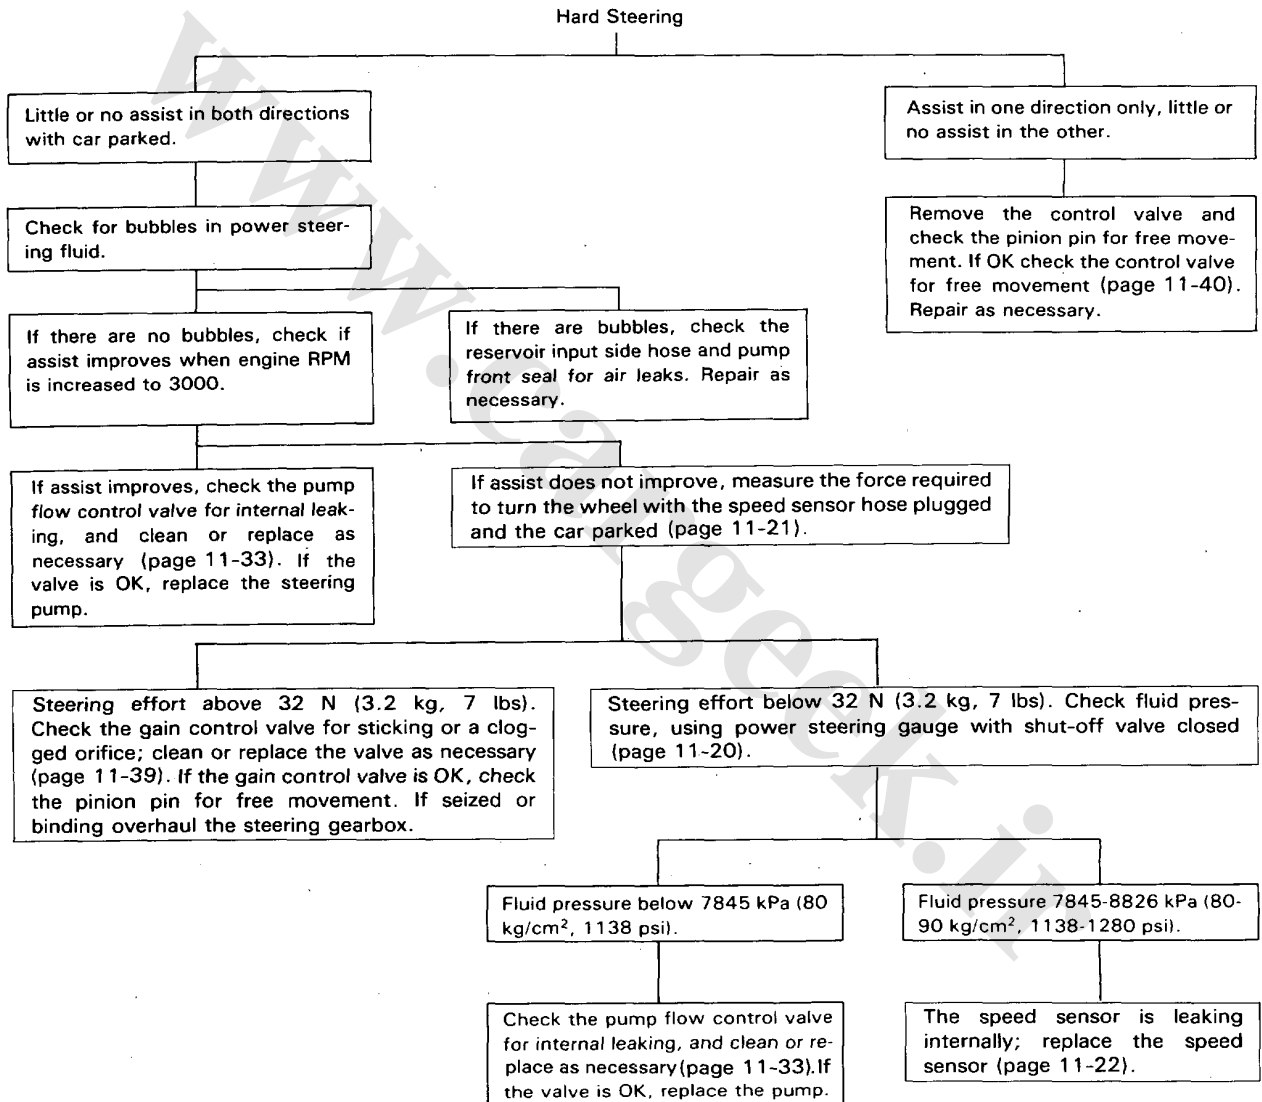



(cont'd)

Troubleshooting (4WS)

General Troubleshooting (cont'd)

Uneven or rough steering.

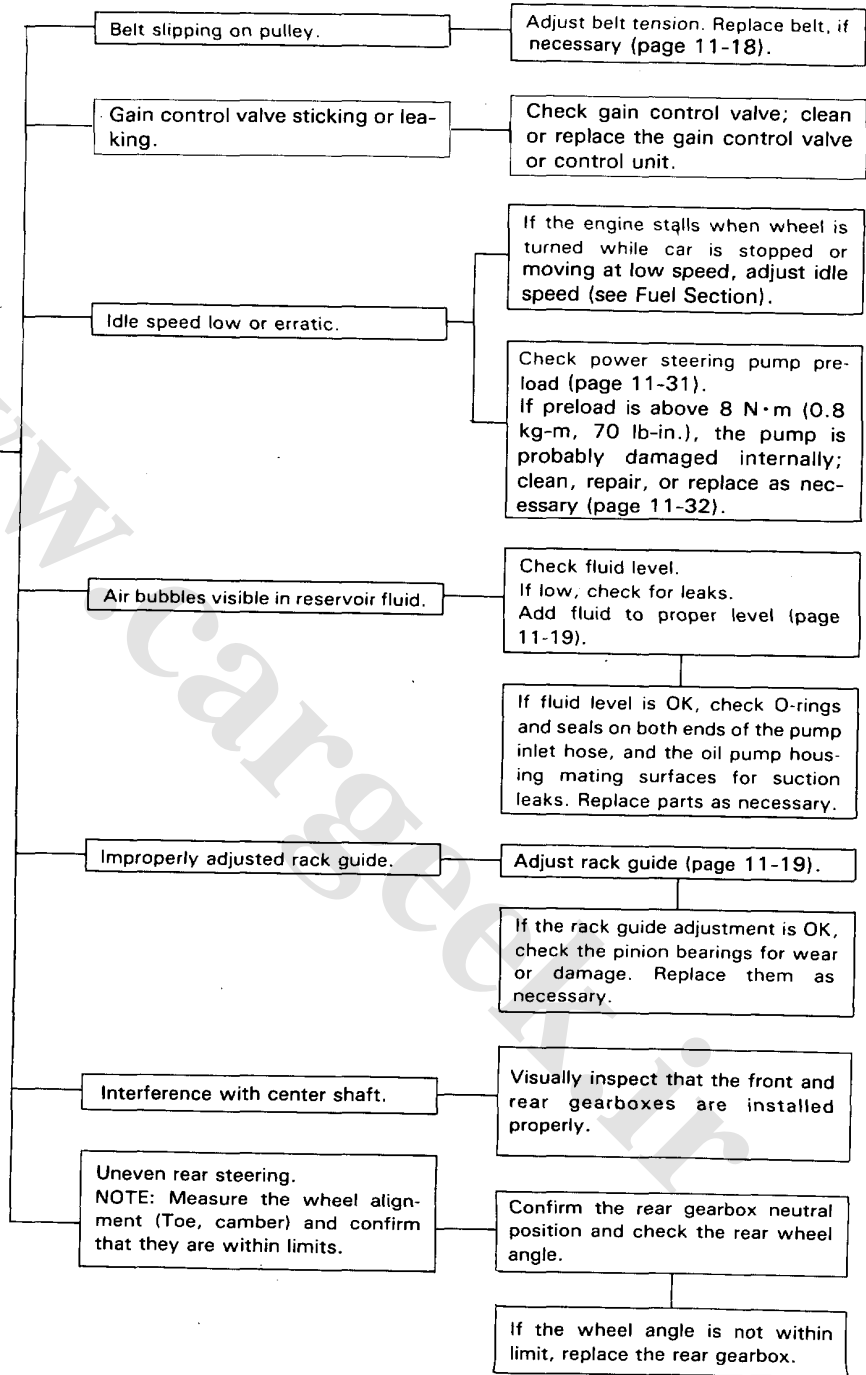


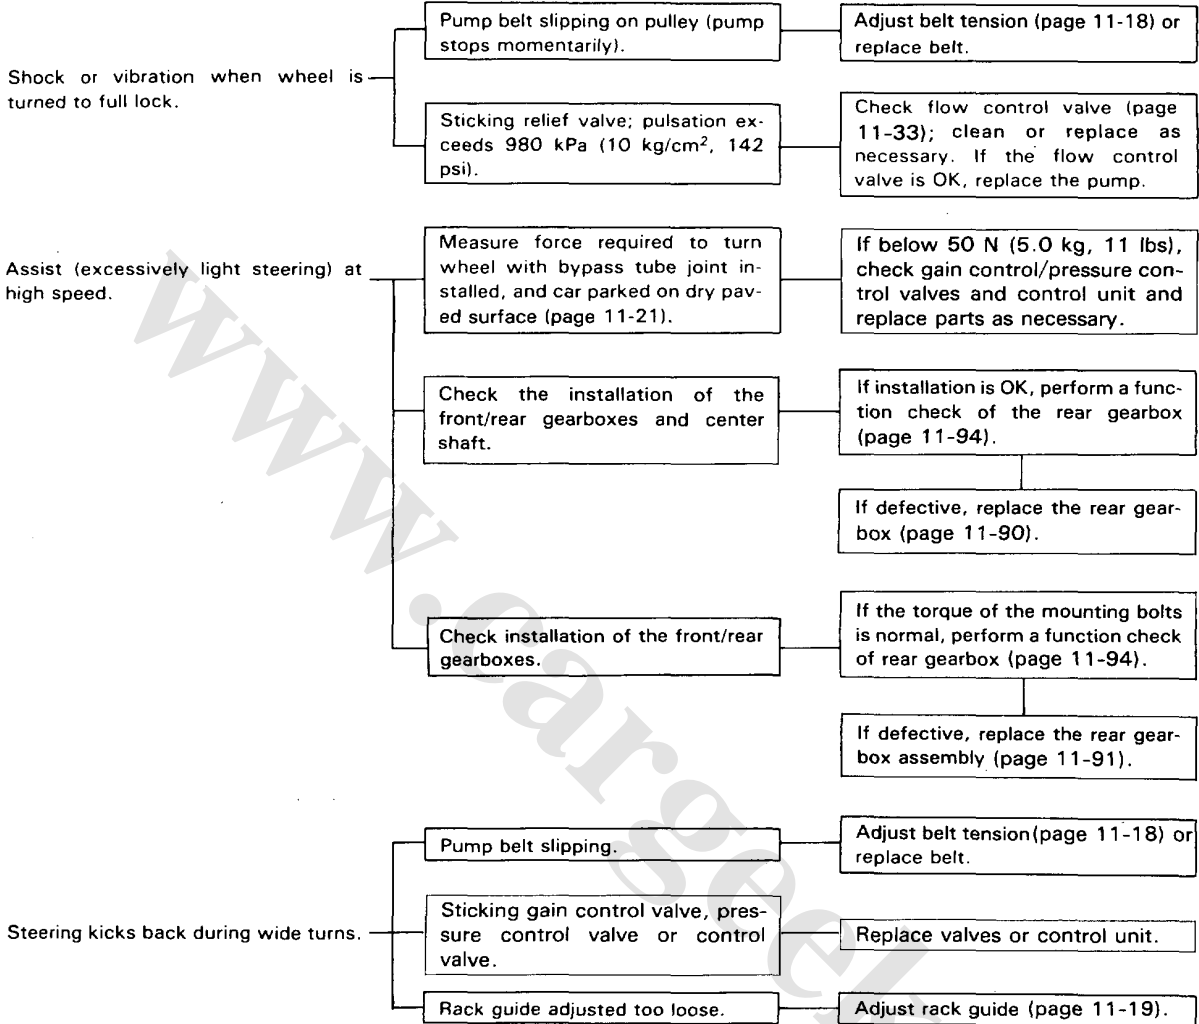

(cont'd)

Troubleshooting (4WS)


General Troubleshooting (cont'd)

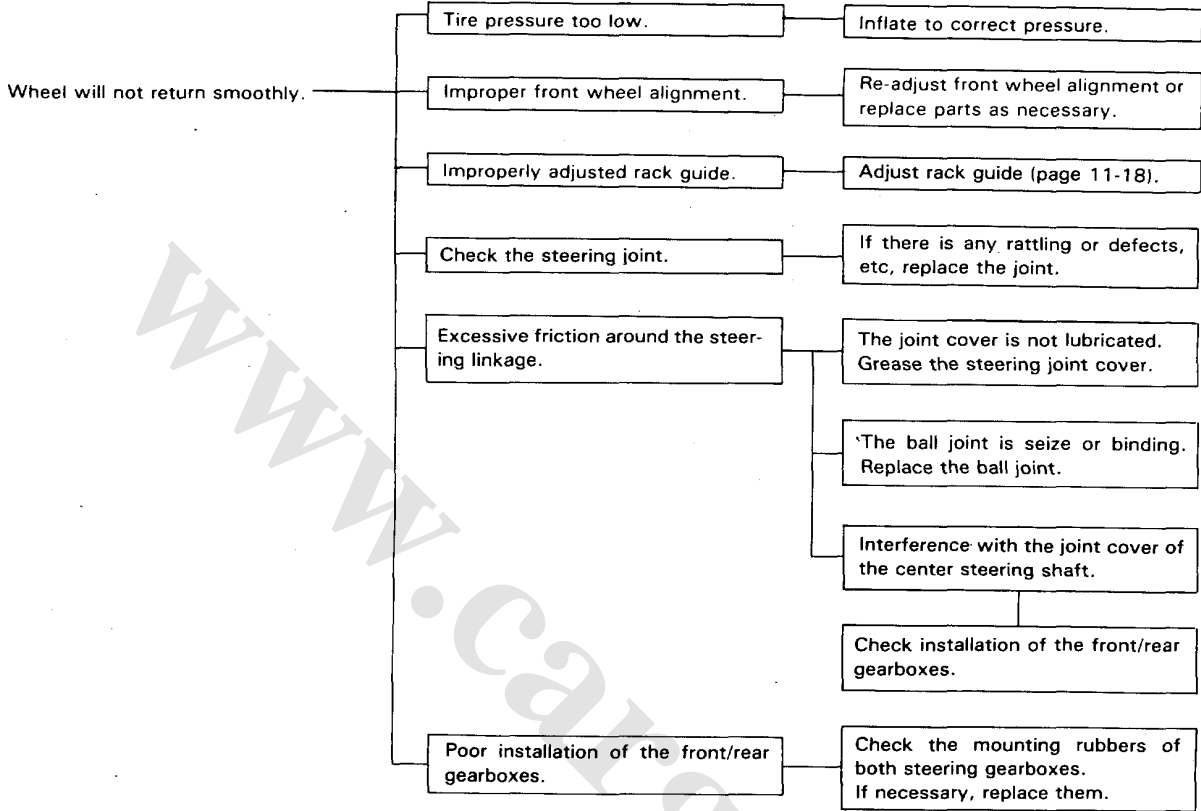



Noise and Vibration


NOTE: Pump noise in first 2–3 minutes after starting in cold weather (– 20°C, – 4°F or colder) is normal.

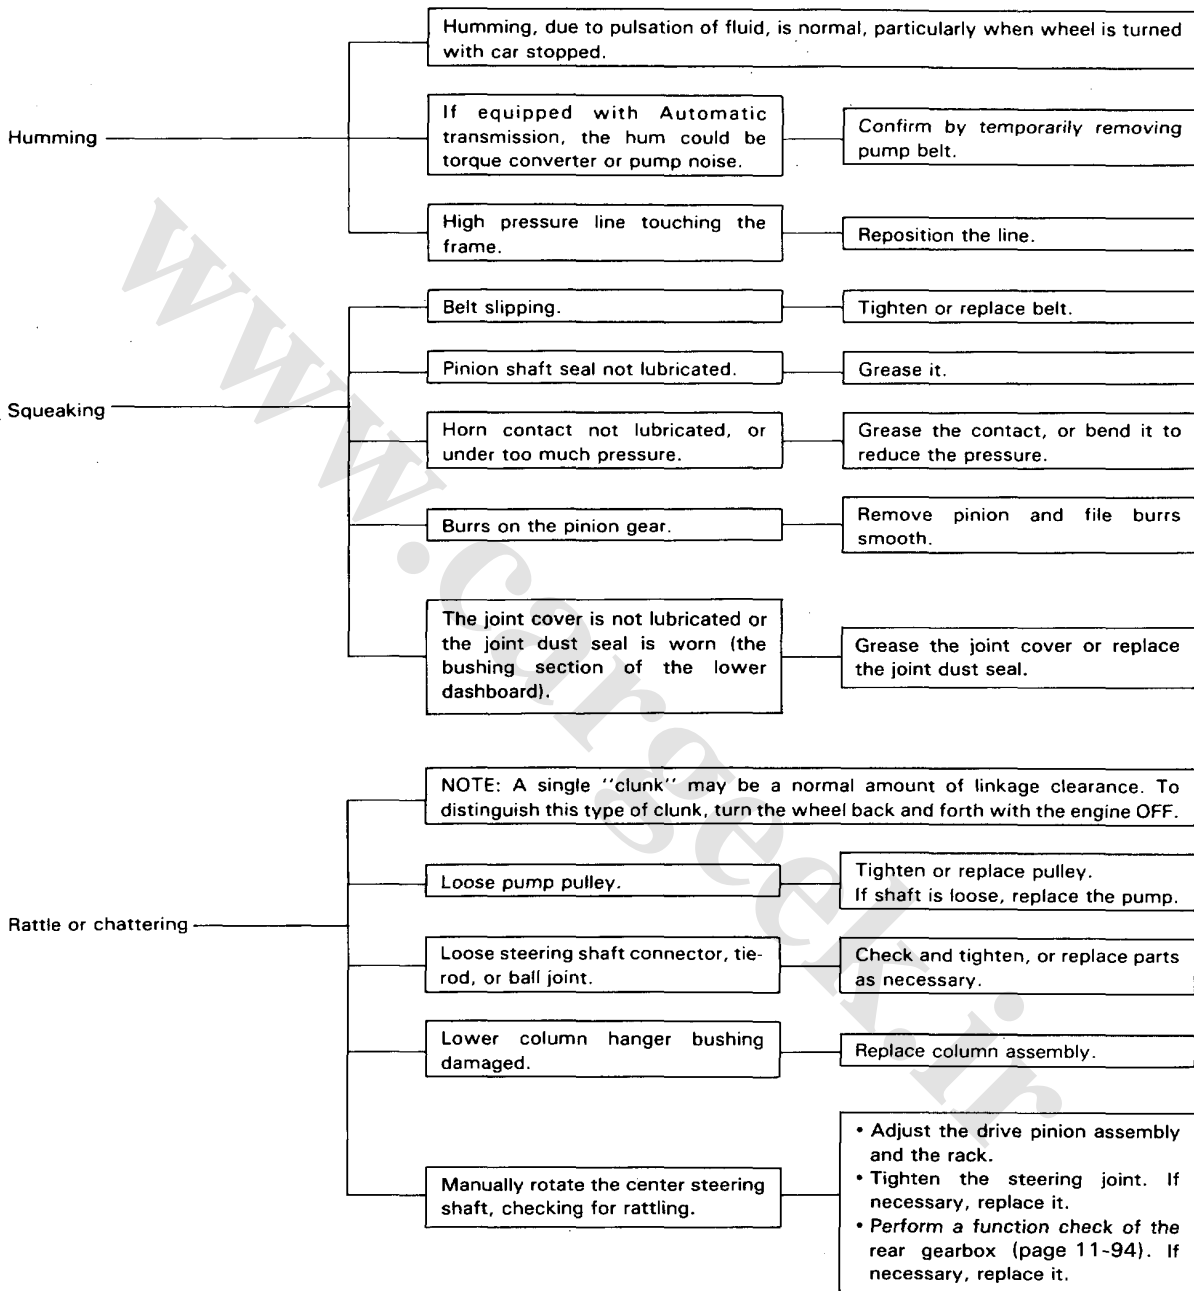

(cont'd)


Troubleshooting (4WS)

Noise and Vibration (cont'd)

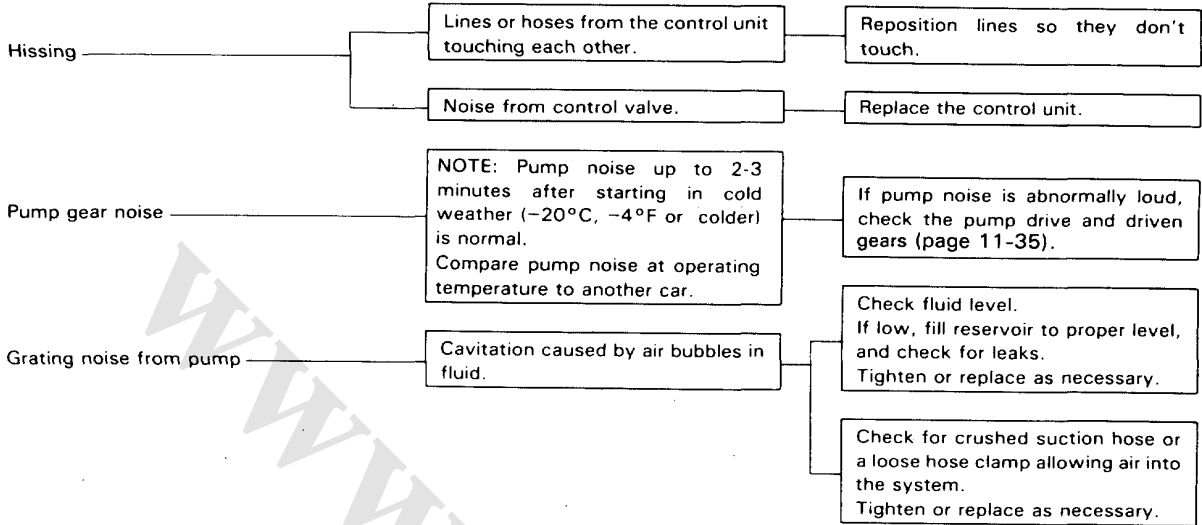



Fluid Leaks

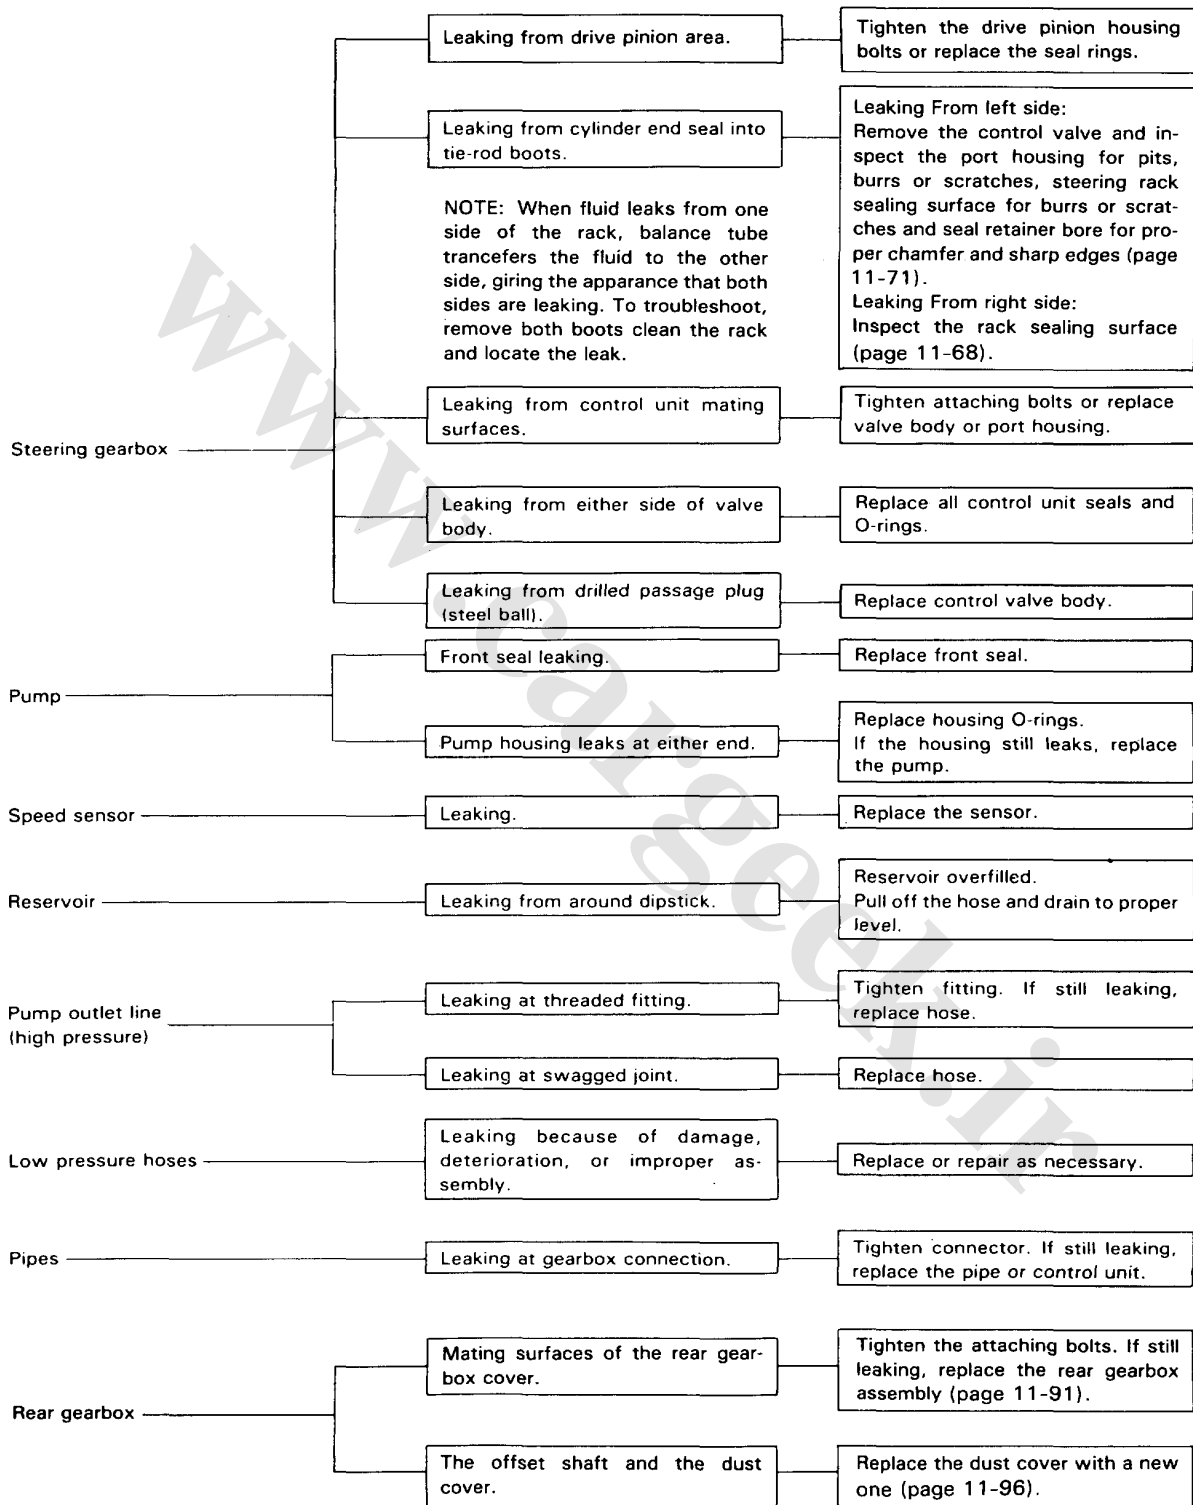


Maintenance

Pump Belt Adjustment

1. A properly adjusted belt should deflect about 12.5–16 mm (0.50–0.62 in) when you push on it the pulleys with a force of about 98 N (10 kg, 22 lbs).


NOTE: On a brand new belt, the deflection should be 9.5–11.5 mm (0.37–0.45 in) when first measured.

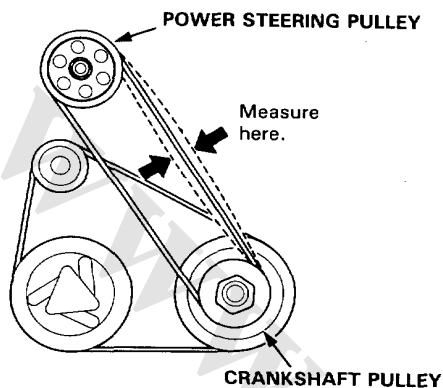


Test by the Belt Tension Gauge; 07JGG-0010100. Attach the tension gauge to the belt and measure the tension of the belt.

Tension: 35–50 kg (77–110 lbs)

- On a brand-new belt, the tension should be 70–90 kg (154–198 lbs) when first measured.
- See the instructions for the tension gauge.

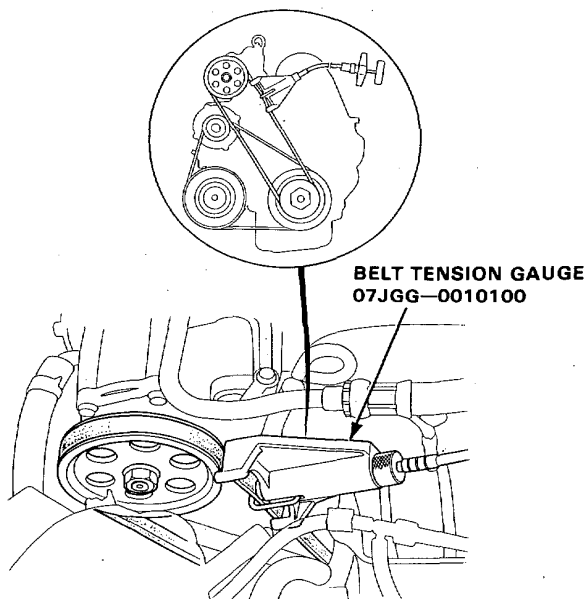

2. Loosen the special bolt and nut and turn the adjusting bolt to get proper tension, then retighten the special bolt and nut.

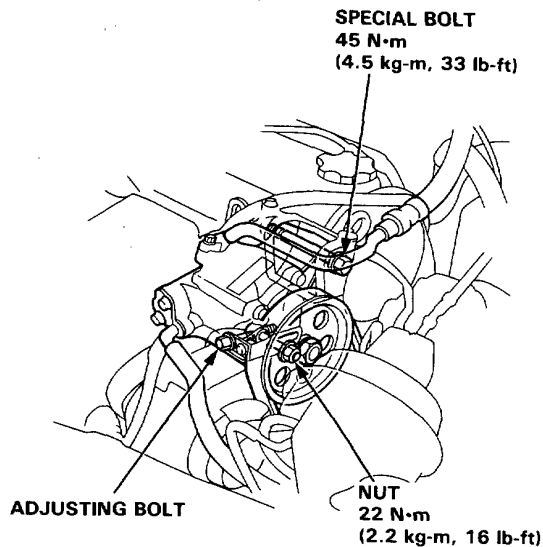


3. Start the engine and turn the steering wheel from lock-to-lock several times, then stop the engine and recheck the belt tension.



On-Car Checks

Rack Guide Adjustment


1. Remove the gearbox shield.

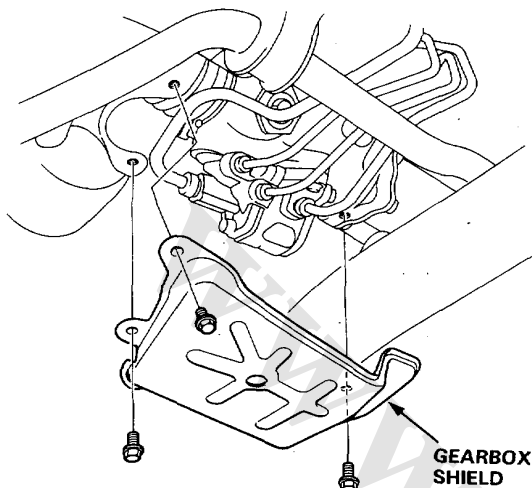

2. Loosen the locknut on the rack guide screw with the special tool as shown.

2WS: LOCKNUT WRENCH 40 mm
07916-SA50001

4WS: LOCKNUT WRENCH 43 mm
07LAA-SM40100

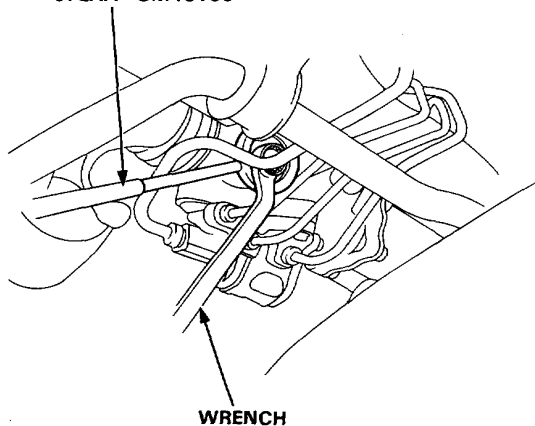

3. Tighten the guide screw until it compresses the spring and seats against the guide, then loosen it.

Retighten it to about: 4 N·m (0.4 kg-m, 3 lb-ft)

Then back it off about: $35^\circ \pm \frac{5}{8}$

Tighten the locknut to about 25 N·m (2.5 kg-m, 18 lb-ft) while preventing the guide screw from turning.

4. Check the steering effort as described.


Fluid Replacement

Check the reservoir at regular intervals, and add fluid as necessary.


CAUTION: Use only **GENUINE HONDA Power Steering Fluid**. Using other fluids such as ATF or other manufacturer's power steering fluid will damage the system.

Fluid Replacement

CAPACITY: 1.8 liter (1.9 US qt, 1.58 Imp qt) at change

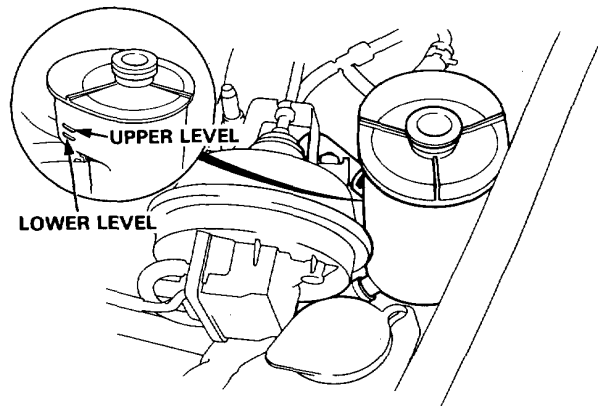

1. Disconnect the return hose from the gearbox at the reservoir, and put the end in a suitable container.
2. Start the engine, let it run at idle, and turn the steering wheel from lock-to-lock several times. When fluid stops running out of the hose, shut off the engine. Discard the fluid.

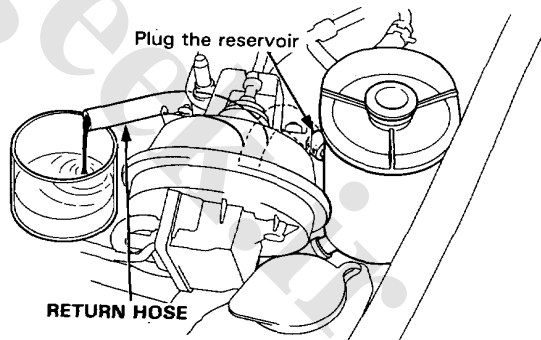

3. Refit the return hose on the reservoir.
4. Fill the reservoir to the upper level mark.
5. Start the engine and run it at fast idle, then turn the steering from lock-to-lock several times to bleed air from the system.
6. Recheck the fluid level and add some if necessary.

CAUTION: Do not fill the reservoir beyond the upper level mark.


On-Car Checks

Pump Pressure Check

Check the fluid pressure as follows to determine whether the trouble is in the pump or gearbox.

NOTE: First check the power steering fluid level and pump belt tension.

1. Disconnect the outlet hose from the pump outlet fitting, and install the pump joint adaptor on the pump outlet.
2. Connect the hose joint adaptor to the power steering pressure gauge, then connect the outlet hose to the adaptor.
3. Install the power steering pressure gauge to the pump joint adaptor as shown.

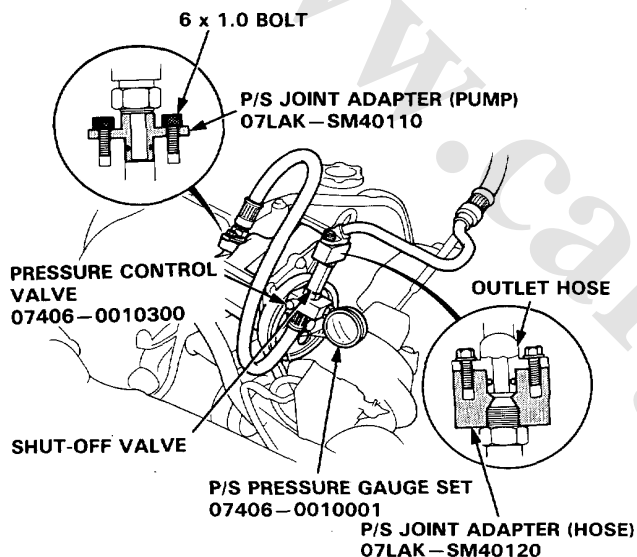


4. Open the shut-off valve fully.
5. Open the pressure control valve fully.

6. Start the engine and let it idle.
7. Turn the steering wheel from lock-to-lock several times to warm the fluid to operating temperature.
8. Close the shut-off valve, then close the pressure control valve gradually until the pressure gauge needle is stable. Read the pressure.
9. Immediately open the shut-off valve fully.

CAUTION: Do not keep the shut-off valve closed more than 5 seconds or the pump could be damaged by over-heating.

If the pump is in good condition, the gauge should read at least 7845–8826 kPa (80–90 kg/cm², 1138–1280 psi). A low reading means pump output is too low for full assist. Repair or replace the pump.

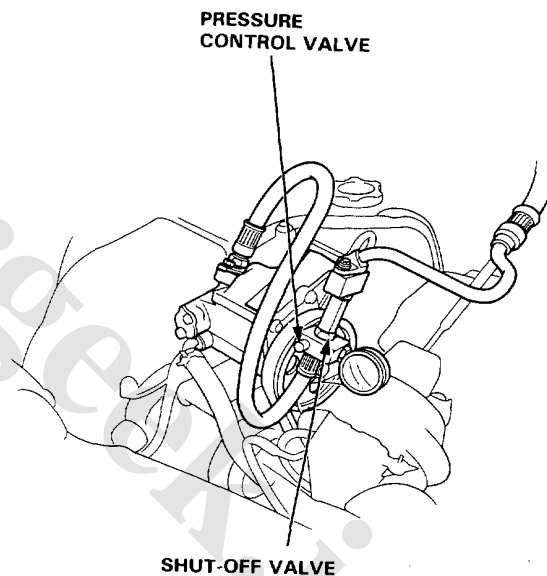




Steering Wheel Rotational Play


1. Place the front wheels in a straight ahead position and measure the distance the steering wheel can be turned without moving the front wheels.
2. If the play exceeds the service limit, check all steering components.

0–10 mm (0–0.4 in) max.

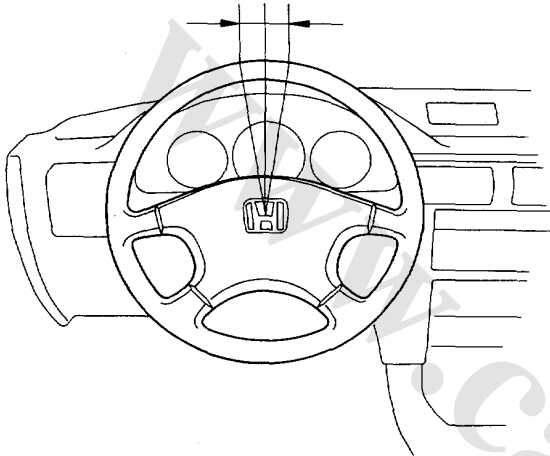


Power Assist Check with Car Parked

1. Check the power steering fluid level and pump belt tension.
2. Start the engine, allow it to idle, and turn the steering wheel from lock-to-lock several times to warm up the fluid.
3. Attach a spring scale to the steering wheel. With the engine idling and the car on a clean, dry floor, pull the scale as shown and read it as soon as the tires begin to turn.

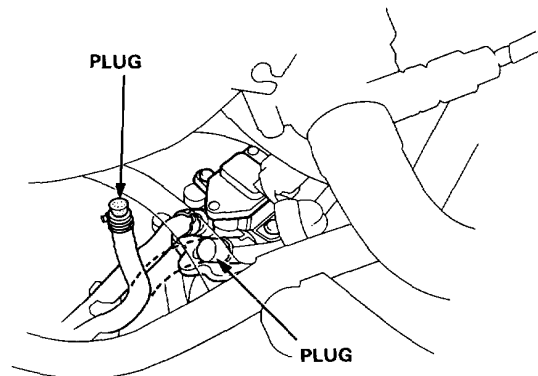

4. The scale should read no more than 32 N (3.2 kg, 7 lbs). If it reads more or less, go on step 5.
5. Stop the engine. Disconnect the hose from the speed sensor and plug the hose and the sensor fitting as shown.

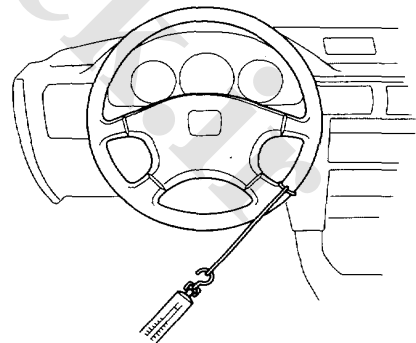


6. Start the engine and let it idle.
 - If the reading is now 32 N (3.2 kg, 7 lbs) or less, replace the speed sensor, see page 11-22.
 - If the reading is still more than 32 N (3.2 kg, 7 lbs), check the gearbox and pump.

On Car Checks


Assist Check

1. Check the power steering fluid level and pump belt tension.
2. Start the engine, let it warm up to normal temperature, and turn the steering wheel lock-to-lock a few times to warm up the fluid.
3. Stop the engine. To simulate speeds above 50 km/h (30 mph), disconnect the hoses from the speed sensor and connect them to the Bypass Tube Joint. Plug the end of the bypass tube joint.

BYPASS TUBE JOINT
07406-0010101
(Included with
07406-0010001)

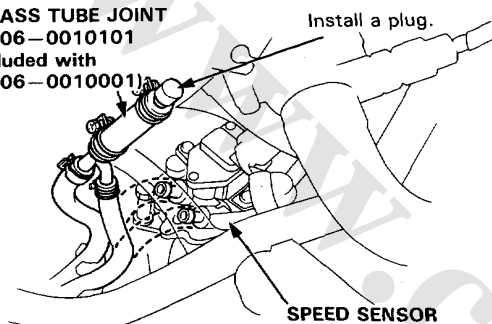


4. Attach the spring scale to the steering wheel. With the engine idling and the car on a clean, dry floor, pull the scale as shown and read it as soon as the tires begin to turn.

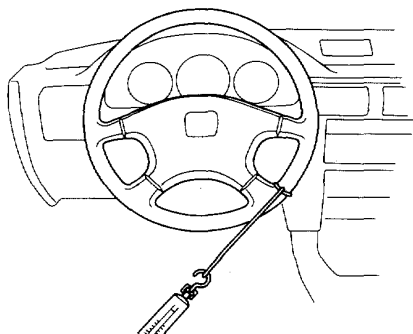


- If the scale reads a normal 50 N (5.0 kg, 11 lbs), or more, the assist problem at high speeds is being caused by reduced speed sensor output. Replace the sensor.
- If the scale reads less than 50 N (5.0 kg, 11 lbs), the sensor is OK, and the problem is in the sensor feed line, the pump, or the control unit. See if the feed line is pinched or bent then check pump.
- See General Troubleshooting (2WS: page 11-6, 4WS page 11-11).

Speed Sensor Replacement

1. Remove the rear mount bracket stay.
2. Disconnect the speed sensor wire coupler from the speed sensor.
3. Remove the speed sensor mounting bolt and pull the speed sensor from the transmission housing.
4. Disconnect the speed sensor hoses and plug the fittings.

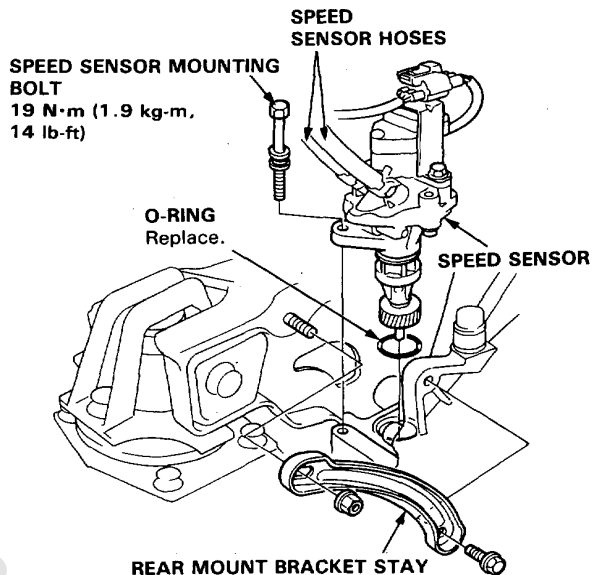

5. Remove the speed pulser from the speed sensor.

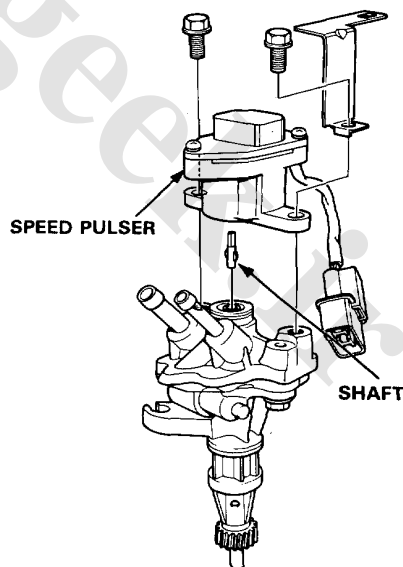


6. After installing a new sensor, turn the steering wheel lock-to-lock with the engine idling to bleed air from the system.
7. Check the reservoir and add fluid if necessary.




4WS Steering Gearbox Centering

NOTE: Use the following procedure after reassembling/replacing the steering gearbox components, or in preparing to solve customer complaints of mis-adjusted steering wheel angle.

1. Center the steering and steering wheel "by sight."
2. Install the Center Lock Pin in the rear steering gearbox.
 - Raise the rear of the car and support on safety stands in proper locations.
 - Remove the gearbox cap bolt using a Special Tool.

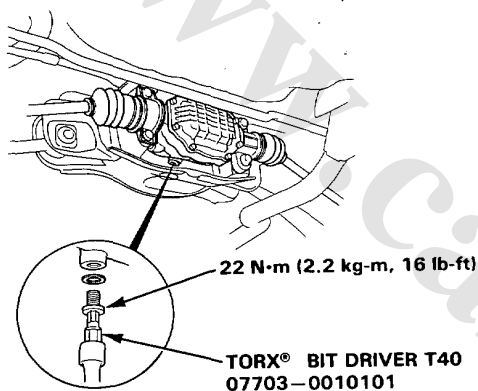


3. Turn the steering wheel right or left slightly until the Center Lock Pin seats fully.
 - The red mark on the pin should not be visible.
 - Do not turn the steering wheel quickly when the Center Lock Pin is seated and do not force past the locking point after the Pin is seated, or the Pin may be damaged.

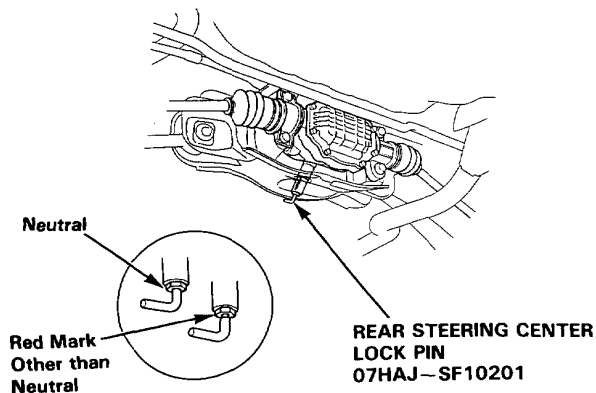

Rear Wheel Turning Angle Inspection (4WS)

1. Set the turning radius gauges at the rear wheels.
2. Apply the brake turn the steering wheel 127° to right and check the rear wheel
Turning angle: 1° 05' ± 30'
3. Turn the steering back to center, apply the brake and turn the steering wheel 127° to the left. Check the rear wheel turning angle again: 1° 05' ± 30'
4. Apply the brake and turn the steering wheel right and left to full lock.
5. At both left and right full lock, the rear wheel max turning angle should be:
Wheel pointing inward : 5° 50' ± 1°
Wheel pointing outward : 6° 10' ± 1° (Reference)

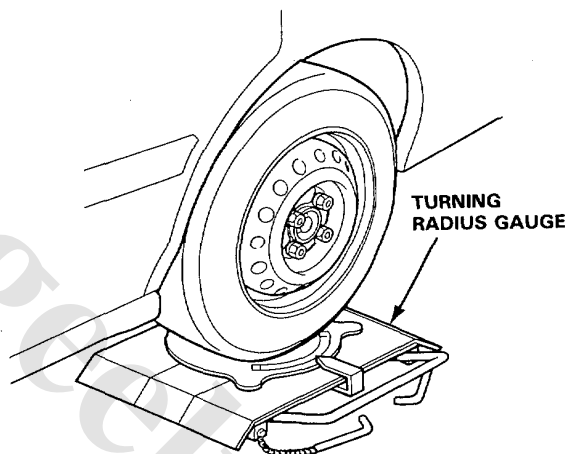


6. If not as specified, see Alignment, see Suspension Section. If not correctable by re-alignment, the rear steering gearbox may need to be replaced.

Steering Wheel

Disassembly/Reassembly

STEERING SHAFT NUT

Replace.
50 N·m
(5.0 kg-m, 36 lb-ft)

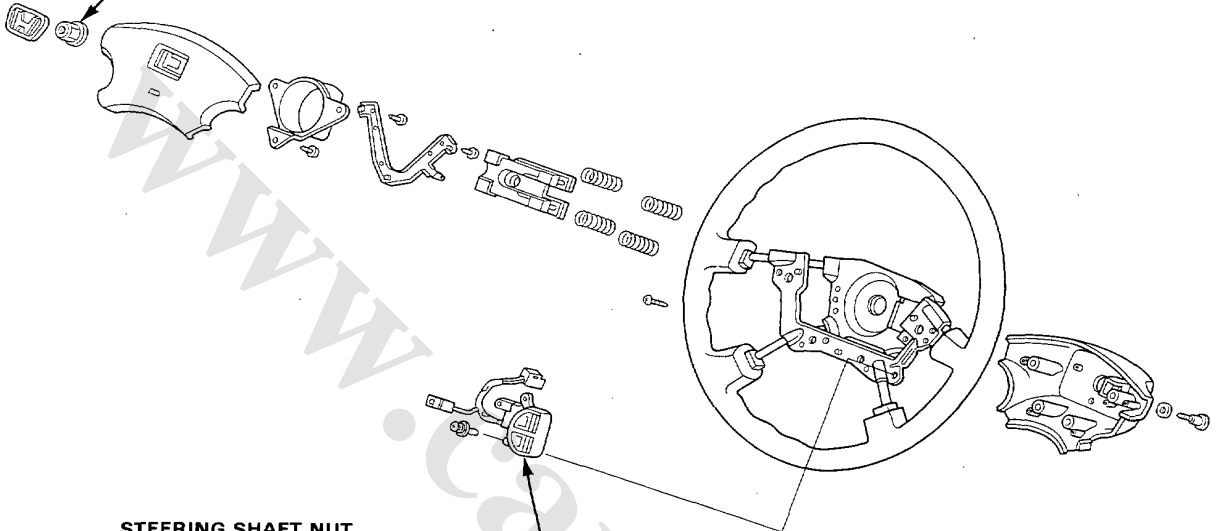


STEERING SHAFT NUT

Replace.
50 N·m
(5.0 kg-m, 36 lb-ft)

CRUISE CONTROL SWITCH

See Electrical section

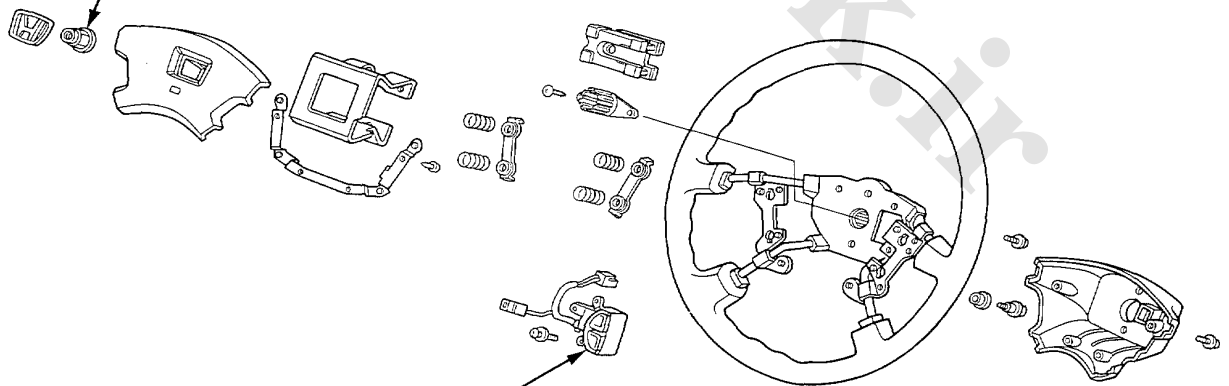

CRUISE CONTROL SWITCH


See Electrical section




Column

Removal


1. Remove the center pad.
2. Remove the steering shaft nut.
3. Remove the steering wheel by rocking it slightly from side-to-side as you pull steadily with both hands.

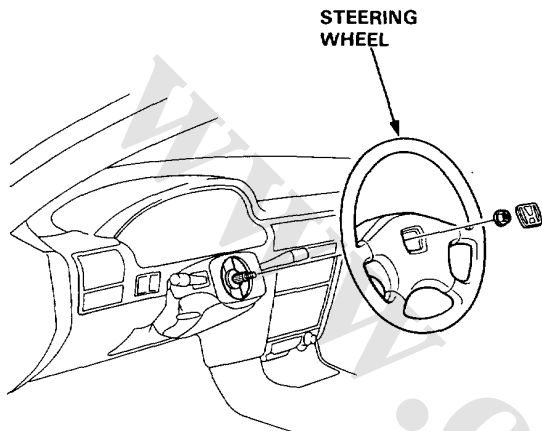


4. Remove the lower cover and driver's knee bolster.

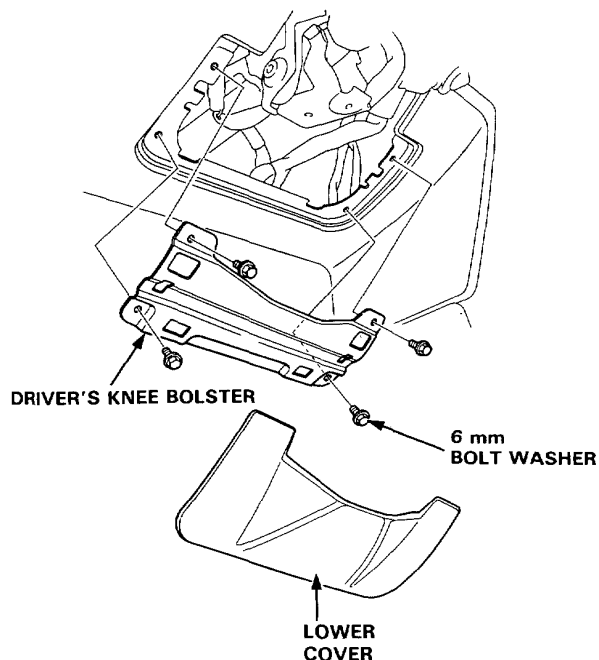

5. Remove the upper and lower column covers.

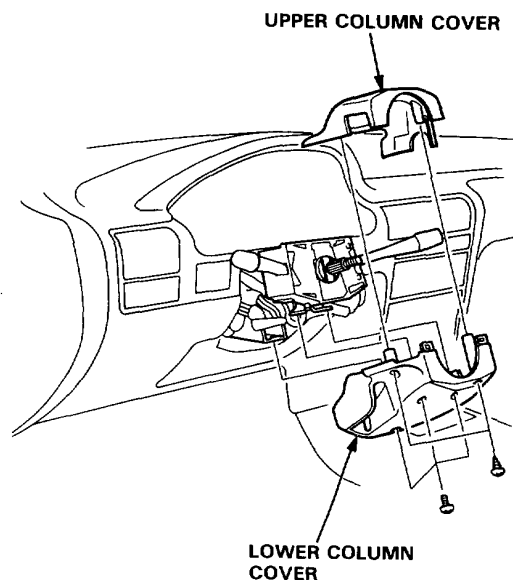

6. Disconnect each wire coupler from the combination switch.
7. Remove the turn signal canceling sleeve and combination switch assembly.

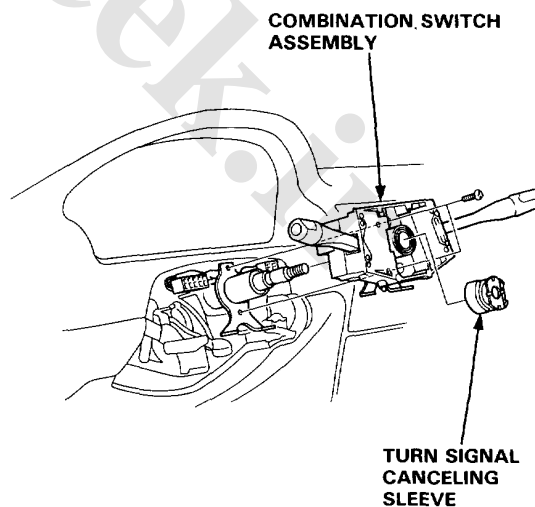

(cont'd)

Wiring Diagrams


Index

Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		


Column

Removal (cont'd)


8. Disconnect each wire coupler from the fuse box under the left side of the dash.

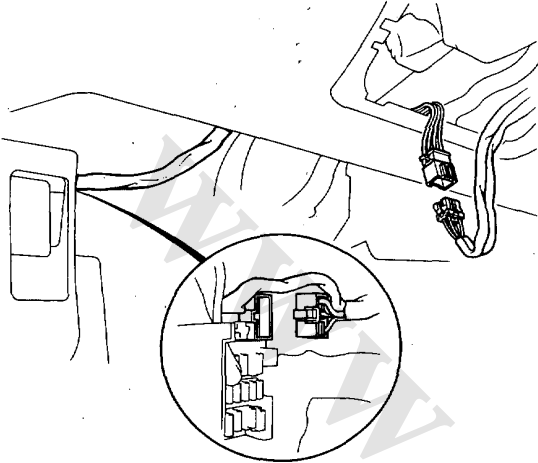


9. Remove the steering joint cover.

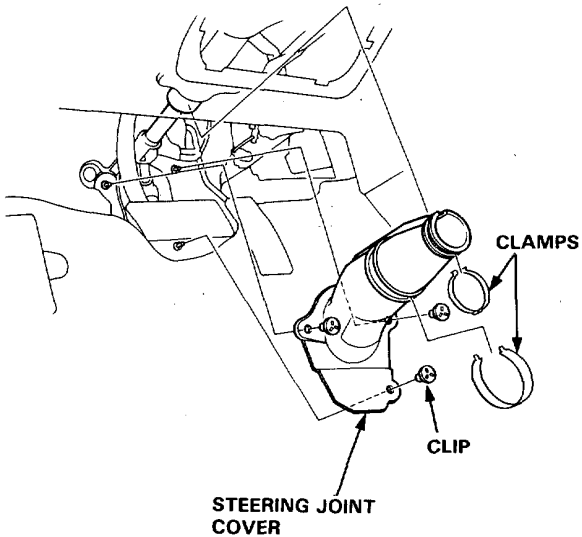

10. Remove the steering joint bolts and move the joint toward the column.

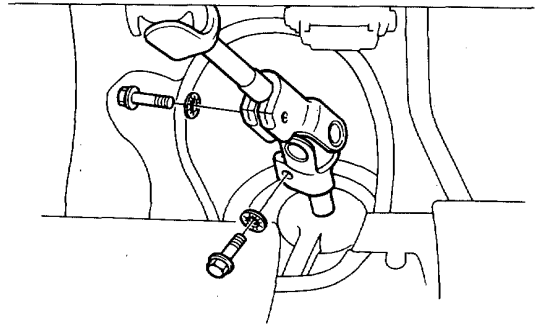

11. Remove the column holder.
12. Remove the attaching nuts, then remove the steering column assembly.

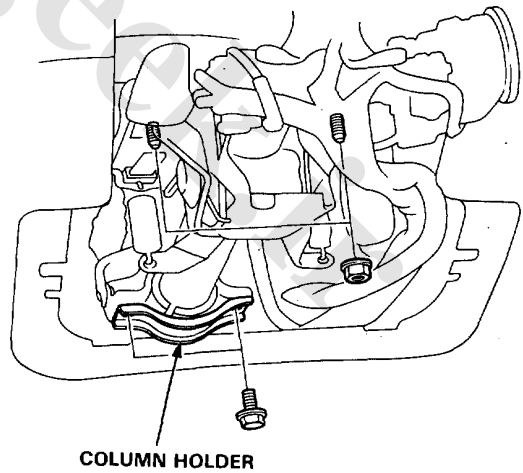






Inspection

Tilt lever adjustment:

Attach a spring scale 10 mm (0.39 in) from the end of knob. Measure the force required to move the lever.

If the force measured is not within the specification, remove the spin stopper then adjust the tilt lock bolt (tighten or loosen) until the correct force can be obtained.


Preload: 75 N (7.5 kg, 17 lbs)

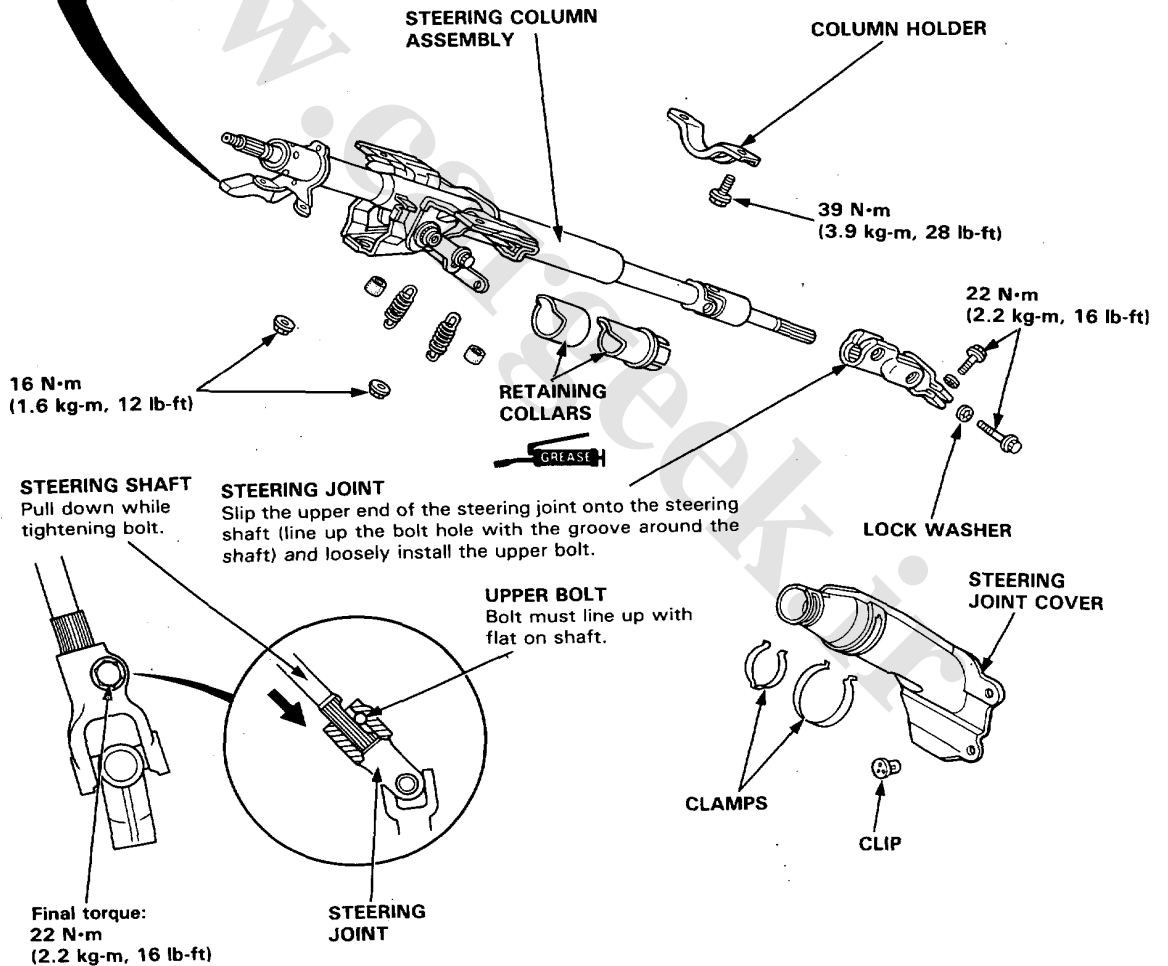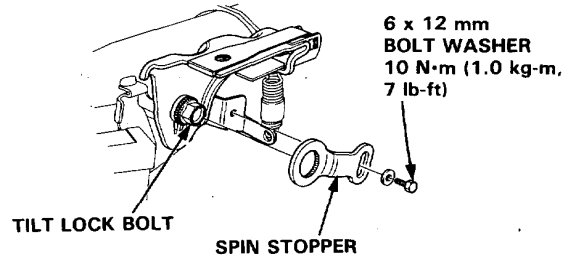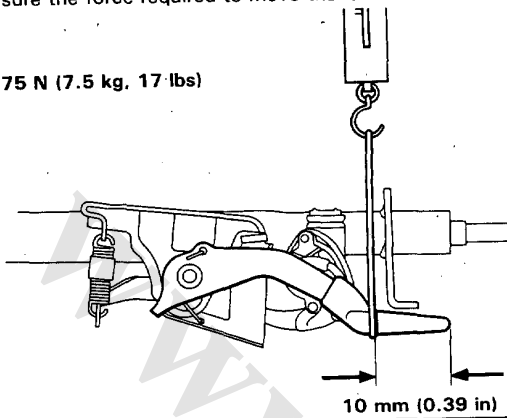

Column

Installation


1. Slip the lower end of the steering joint onto the pinion shaft.
2. Install the steering column assembly with the nuts and column holder.

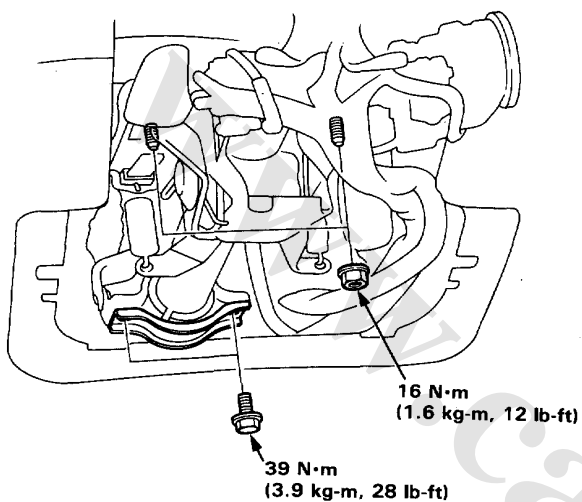


3. Loosely install the steering joint on the steering gearbox pinion.

NOTE:


- Be sure that the lower bolt is securely in the groove in the steering gearbox pinion.
- Be sure the pinion shaft and the steering column shaft are aligned; the joint should slip on freely. If not, reposition the steering rack to correct the misalignment.

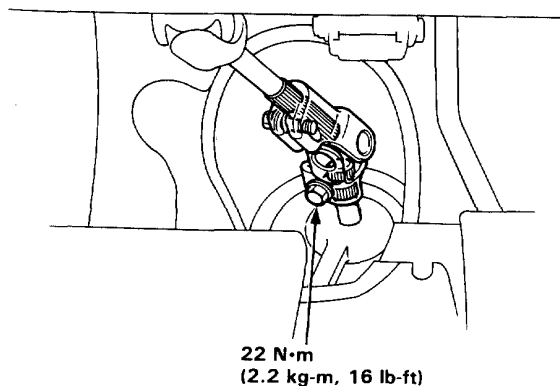

4. Install the steering joint cover with the clamps and clip.

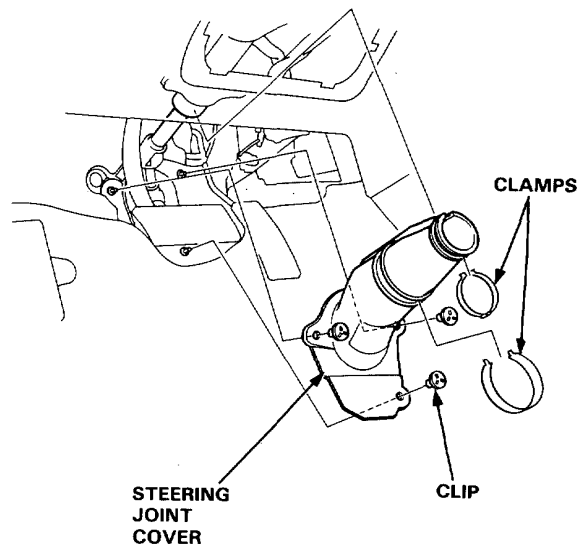


5. Connect each wire coupler to the fuse box under the left side of the dash.

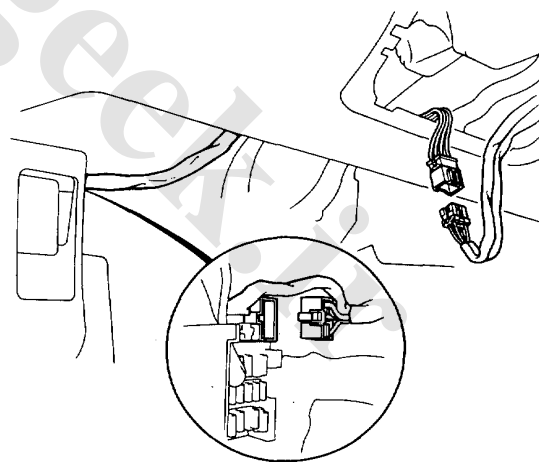





6. Install the combination switch assembly and turn signal canceling sleeve.
7. Connect each wire coupler to the combination switch.

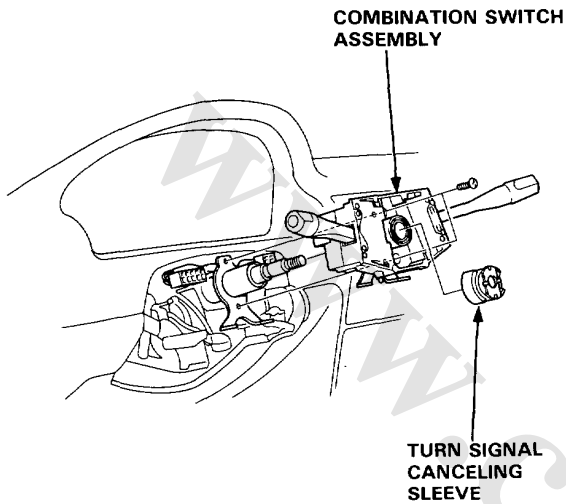

8. Install the upper column cover and lower column cover.

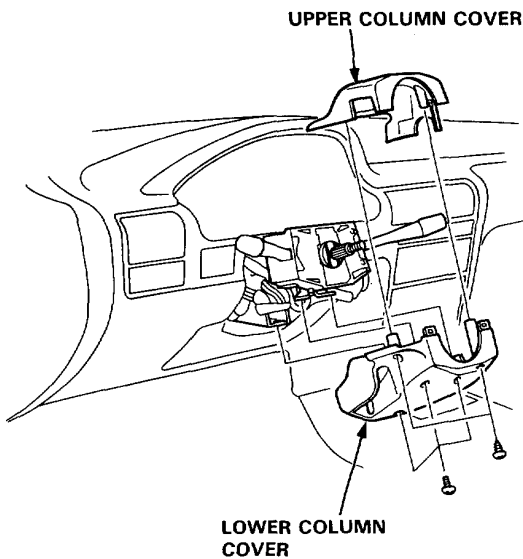


9. Install the driver's knee bolster and lower cover.

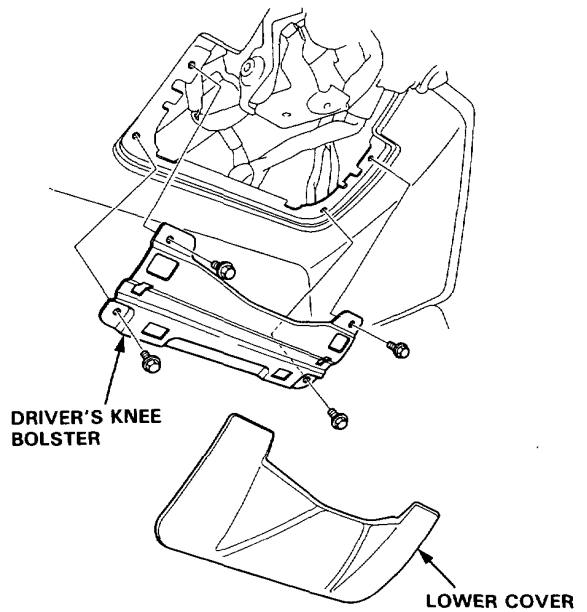

10. Install the steering wheel in a straight ahead position.
11. Tighten the steering shaft nut and torque to 50 N·m (5.0 kg-m, 36 lb-ft).
12. Check that the horn works properly, then install the center pad.

NOTE: Be sure the steering wheel engages the canceling sleeve.

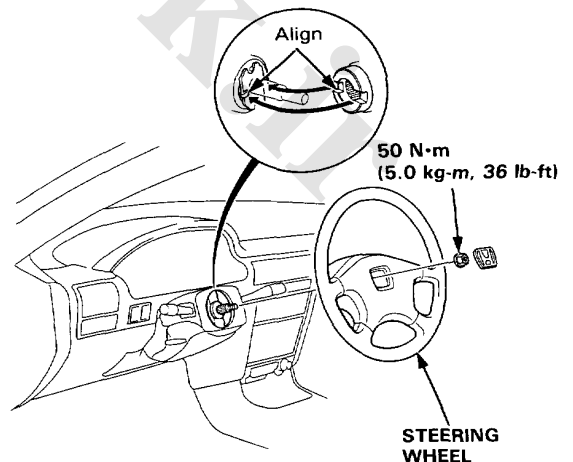


Steering Pump

Illustrated Index

CAUTION: Pump components are made of aluminum. Be careful not to damage them when servicing.

- Clean all of the disassembled parts thoroughly.
- Replace all O-rings and seals. Do not dip new O-rings and seals in solvent; coat O-rings with steering grease before installation, and make sure they stay in place during reassembly.
- The shaded parts are selectively fitted, and should not be disassembled except to replace seals. If any one of them is faulty, replace the whole pump as an assembly.

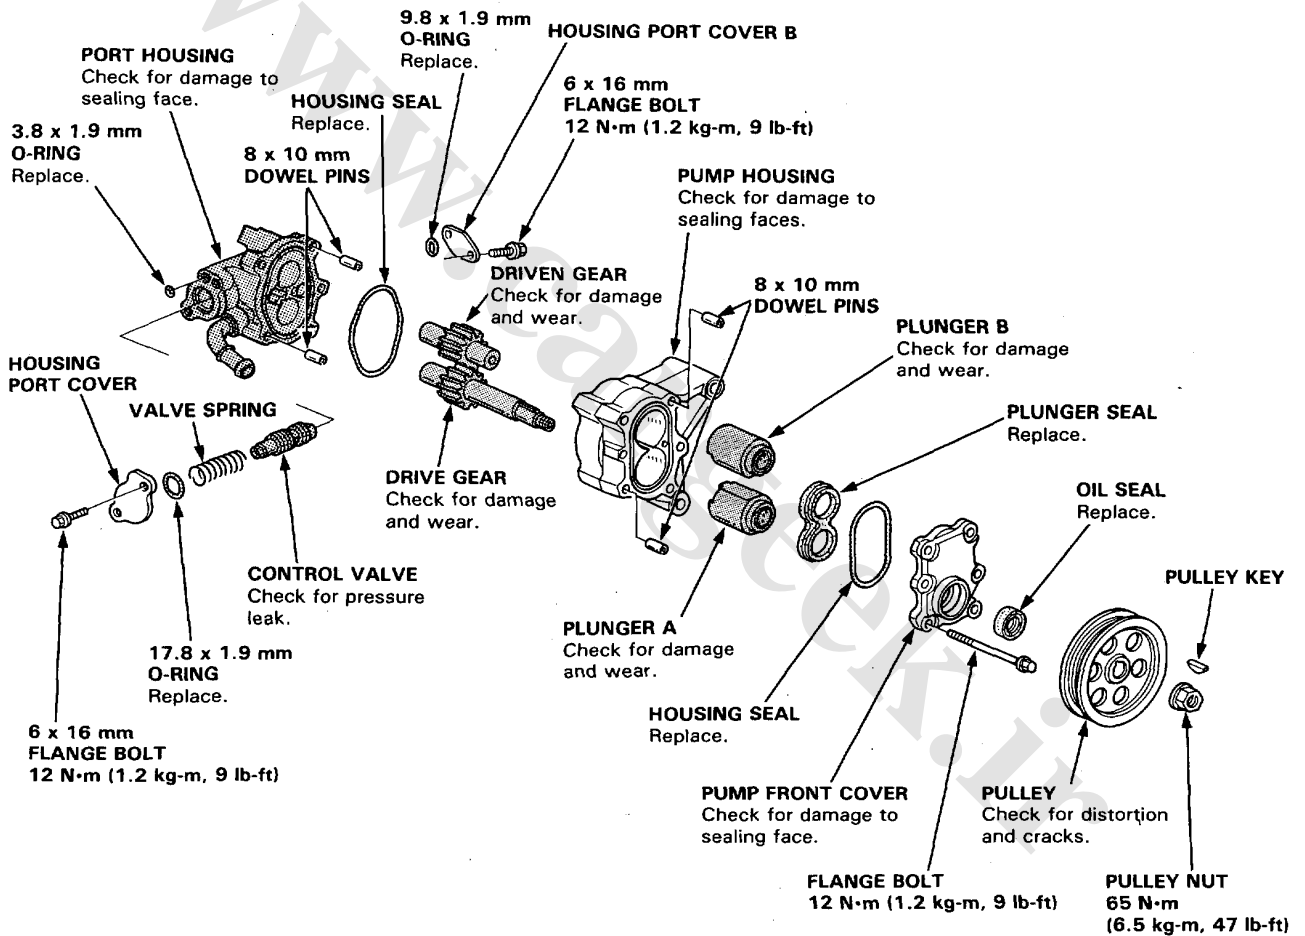


Steering Pump

Illustrated Index

CAUTION: Pump components are made of aluminum. Be careful not to damage them when servicing.


- Clean all of the disassembled parts thoroughly.
- Replace all O-rings and seals. Do not dip new O-rings and seals in solvent; coat O-rings with steering grease before installation, and make sure they stay in place during reassembly.
- The shaded parts are selectively fitted, and should not be disassembled except to replace seals. If any one of them is faulty, replace the whole pump as an assembly.

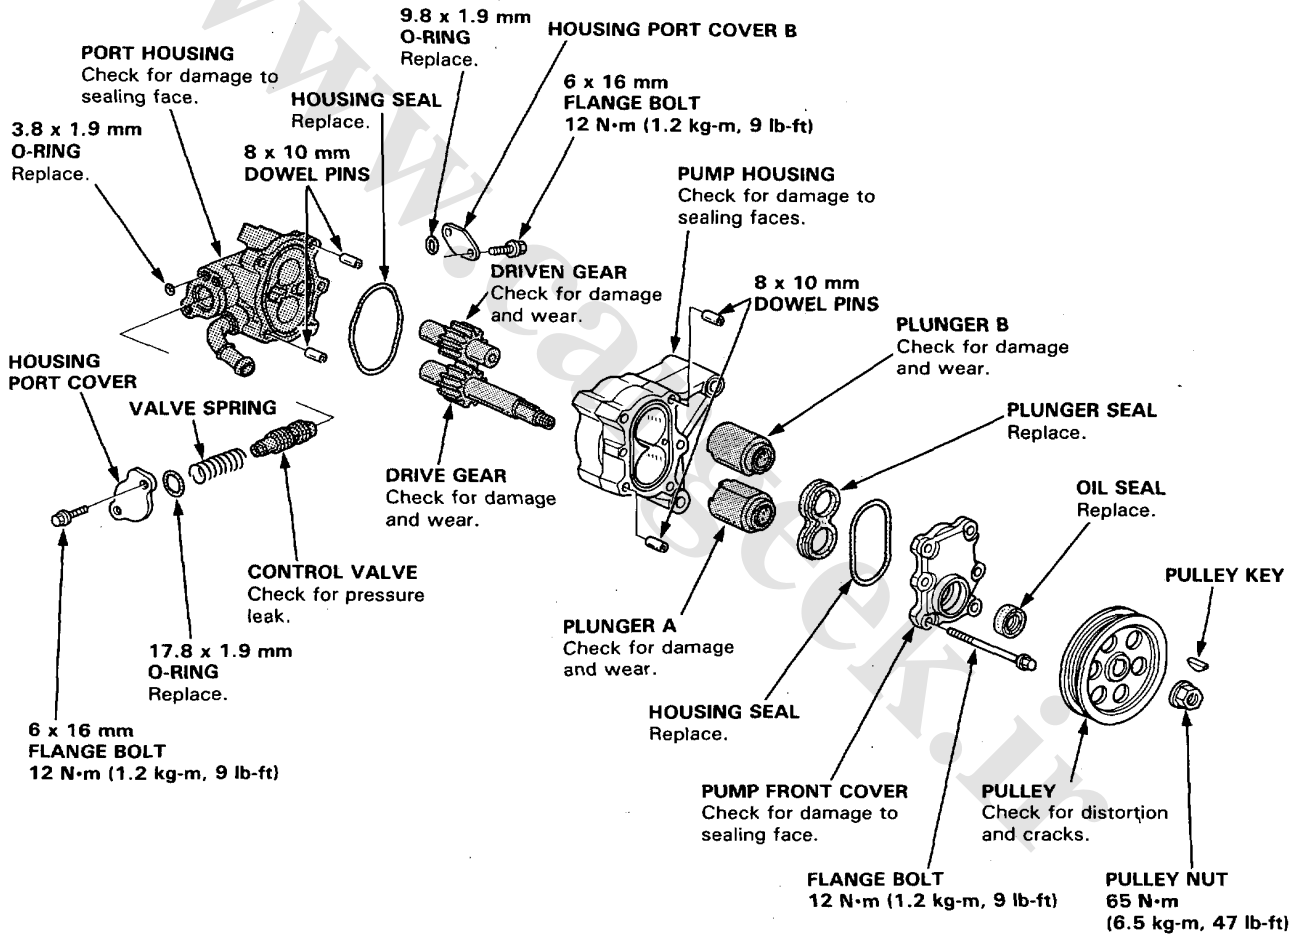



Replacement

1. Drain the fluid from the system (page 11-19).
2. Disconnect the inlet and outlet hoses from the pump and plug them.
3. Remove the belt by loosening the special bolt, nut and adjusting bolt.
4. Remove the special bolt and nut, then remove the pump.

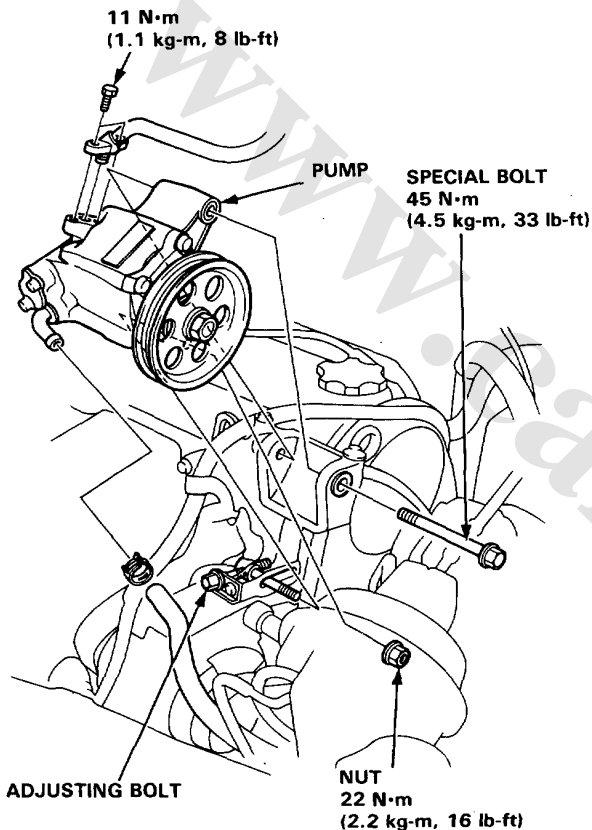


5. Loosely install a new pump on the bracket.
6. Connect the inlet and outlet hoses to the pump.
7. Install and adjust the belt (page 11-18).
8. Fill the reservoir with new fluid to the UPPER LEVEL on the reservoir.
9. Start the engine and let it run at fast idle while turning the steering wheel lock-to-lock several times to bleed air from the system.
10. Check the reservoir and add fluid if necessary.

Preload Inspection

Check the pump preload with a torque wrench after overhauling a pump or installing a replacement pump.

Preload: 8 N·m (0.8 kg-m, 70 lb-in.) max.

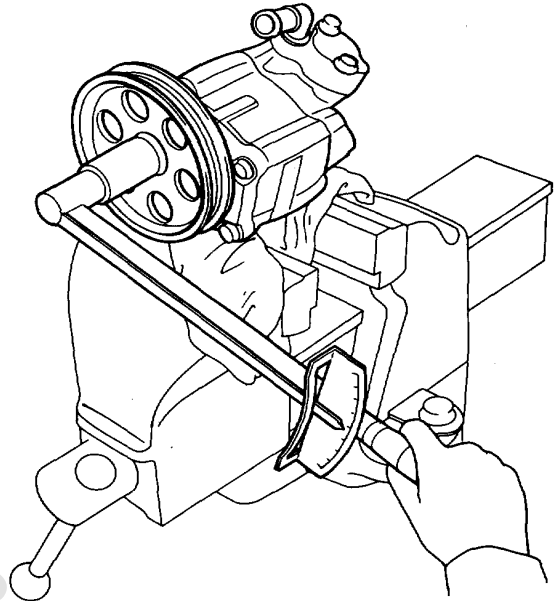

Steering Pump


Pulley Replacement

Removal:

Hold the steering pump in a vise with soft jaws, and hold the pulley with the special tool and remove the pulley nut and pulley.

NOTE: Pulley nut has left-hand threads.

UNIVERSAL HOLDER
07725-0030000

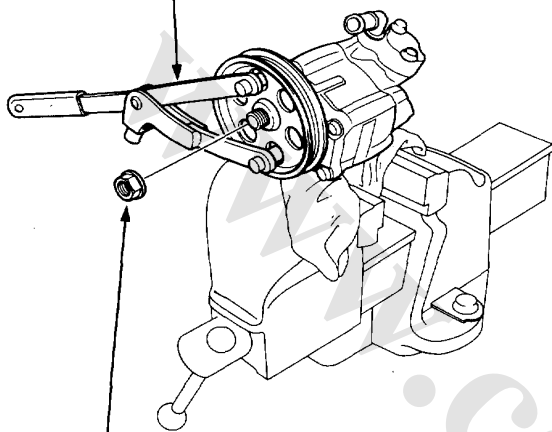


PULLEY NUT
65 N·m (6.5 kg-m, 47 lb-ft)

Installation:

Installation:


1. Install the pulley key in the groove of the pump shaft.
2. Slide the pulley onto the pump shaft by aligning the groove of the pulley and pulley key.

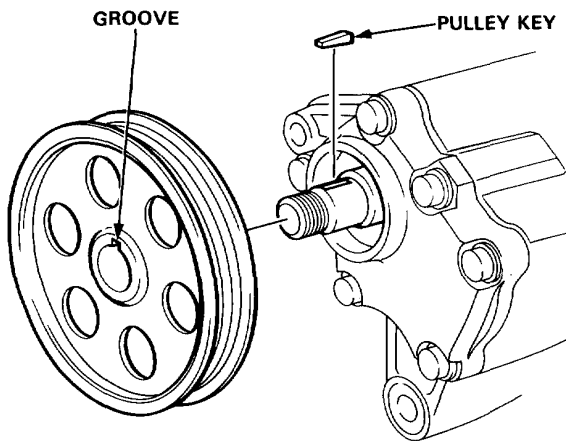


3. Hold the pulley with the special tool and tighten the pulley nut.

Control Valve Inspection and Replacement

1. Remove the two 6 x 16 mm flange bolts, then remove the housing port cover, valve spring and O-rings.

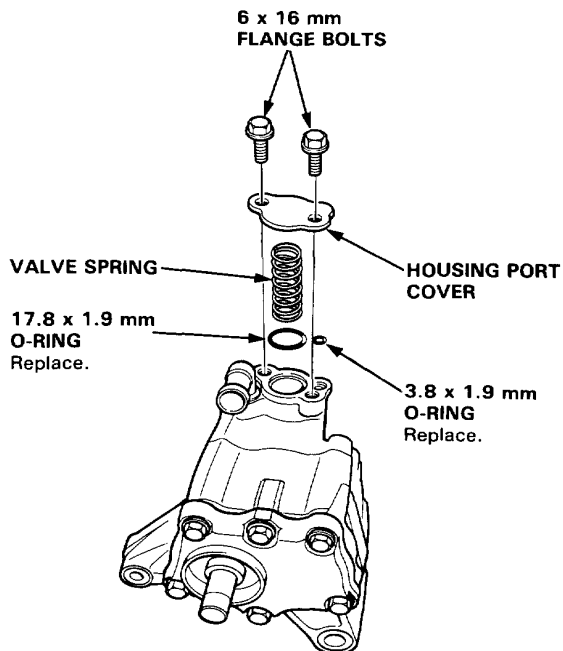


2. Remove the control valve from the port housing.

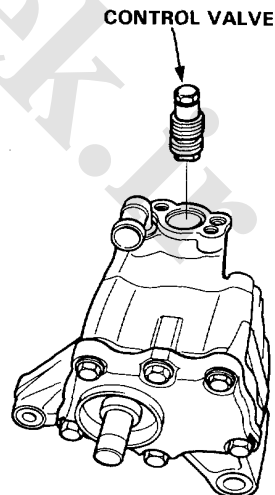




3. Check for wear, burrs, and other damage to the edges of the grooves in the valve.

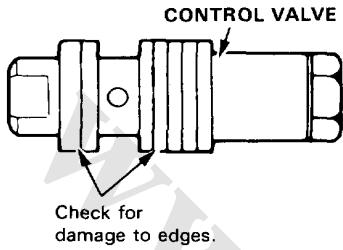


4. Slip the valve back in the pump and check that it moves in and out smoothly.

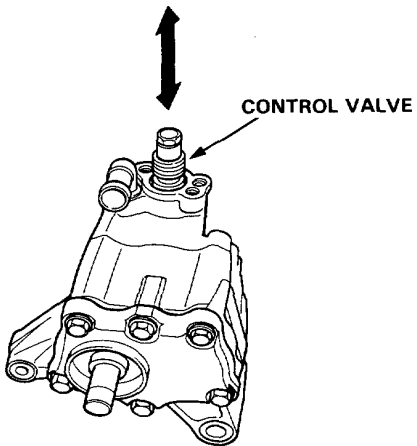

If OK, go on to step 5, if not, replace the valve:


- The original valve was selected for a precise fit in the pump housing bore, so make sure the new one has the same identification mark.

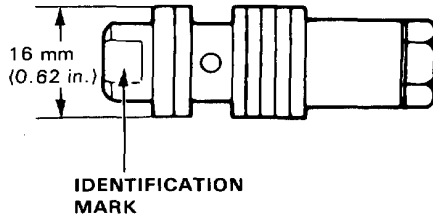

Mark	Part Number	Part Name	Size mm(in)
A	56350—PC1—000	CONTROL VALVE A	15.995—16.000 (0.6297—0.6299)
Without mark	56360—PC1—000	CONTROL VALVE B	16.000—16.006 (0.6299—0.6302)

5. Attach a hose to the end of the valve as shown.

HOSE
9.5 mm ID (0.374 in)
(The power steering return hose is recommended)

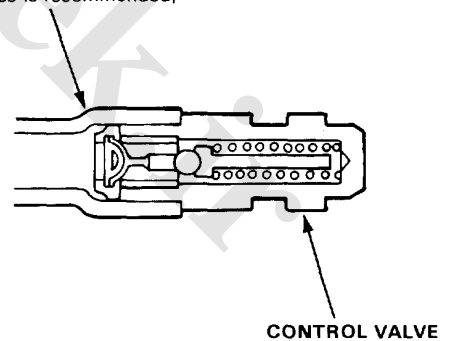


(cont'd)


Steering Pump

Control Valve Inspection and Replacement (cont'd)

- Then submerge the valve in a container of power steering fluid or solvent, and blow on the hose. If air bubbles leak through the valve, replace or repair it as follows.

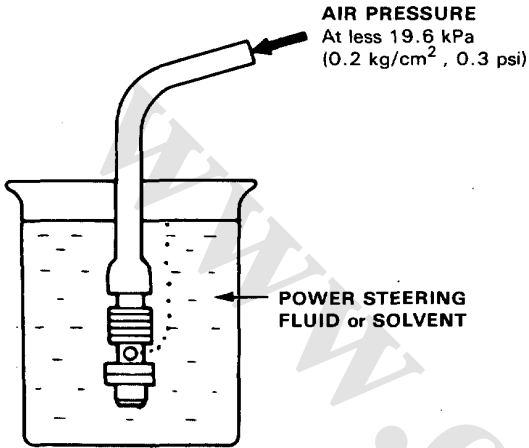

- Clamp the bottom end of the valve in a vise with soft jaws.
- Unscrew the seat in the top end of the valve, and remove any shims, the relief check ball, relief valve and relief valve spring.

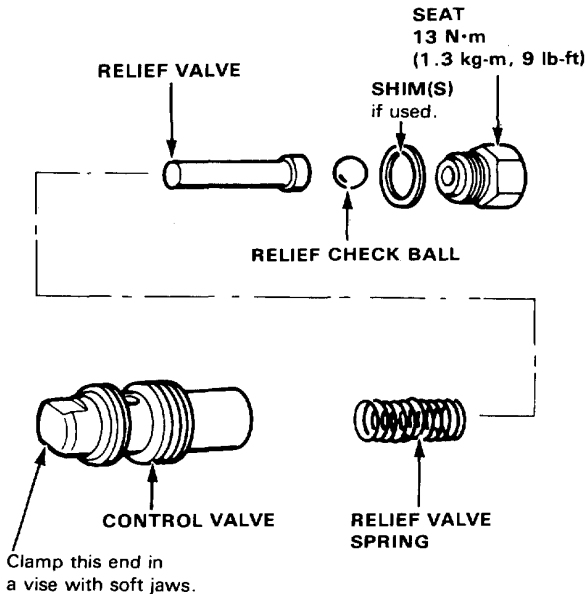


- Clean all the parts in solvent, dry them off, then reassemble and retest the valve.

NOTE: If necessary, relief pressure is adjusted at the factory by adding shims under the check ball seat. If you found shims in your valve, be sure you reinstall as many as you took out.

- Install the control valve in the reverse order of removal.

- Apply steering grease (Honda P/N 08733-B070E) to new O-rings.
- Coat the control valve with power steering fluid then install it and valve spring.

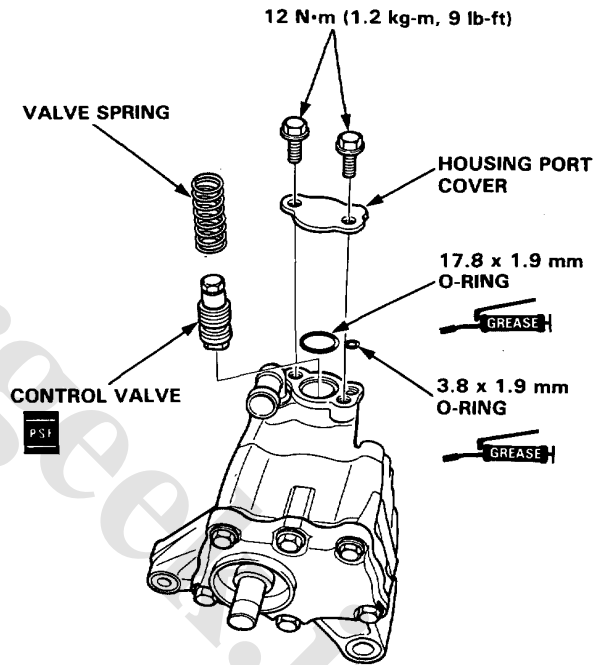





Housing Disassembly

CAUTION: The pump components are made of aluminum. Be careful not to damage them when servicing.


1. Remove the pump from car (page 11-31).
2. Remove the pulley (page 11-32).
3. Remove the control valve (11-34).
4. Remove the five bolts then remove the pump front cover, housing seal, plunger seal and dowel pins.

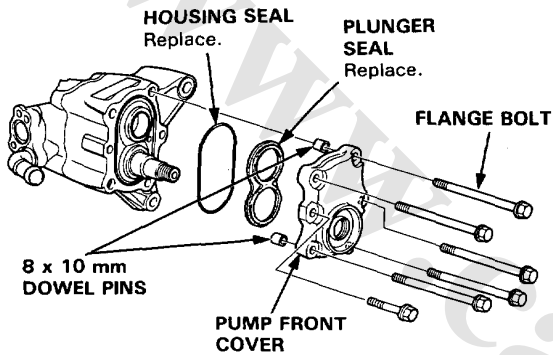

5. Remove the dowel pins and housing seal from the port housing.
6. Separate the port housing from the pump housing.

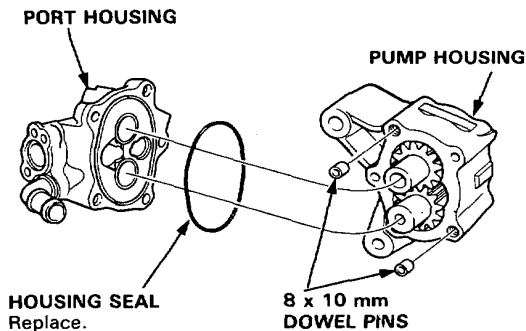

7. Remove the pump drive and driven gears from the pump housing.
8. Remove the plungers from the pump housing.

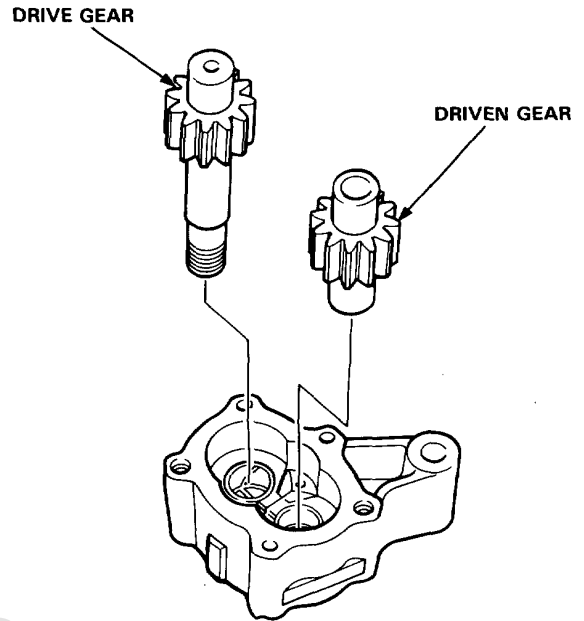

9. Pry the oil seal out from the pump front cover.




Steering Pump


Housing Reassembly

1. Coat the outer surfaces of the plungers with power steering fluid, then install them in the pump housing. Make sure the plunger holes are positioned as shown.


NOTE: Install the plungers so the cutouts are aligned as shown.

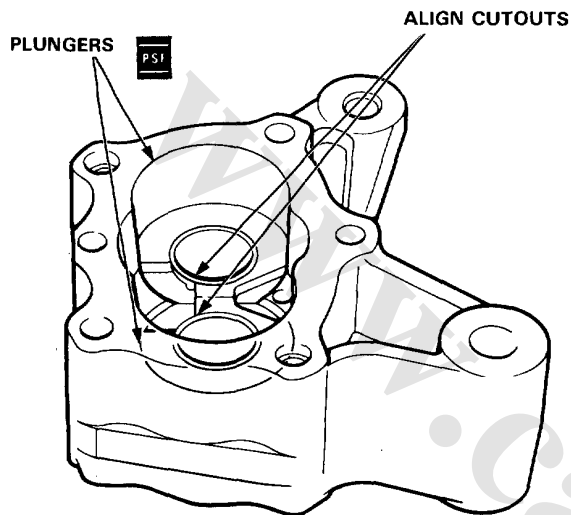


2. Coat the inside of the plungers with power steering fluid.
3. Install the pump drive and driven gears in the pump housing.

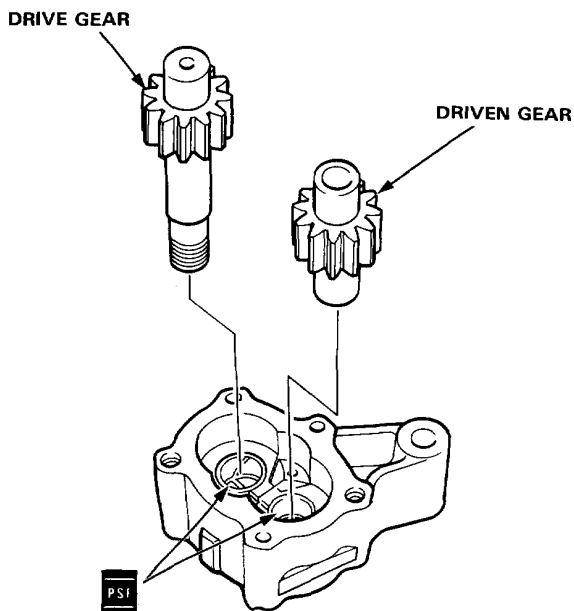

4. Coat the port housing groove with power steering fluid first, then position a new housing seal on the port housing.
5. Coat the bushings on the port housing with power steering fluid.
6. Install the dowel pins in the pump housing.
7. Install the port housing on the pump housing.

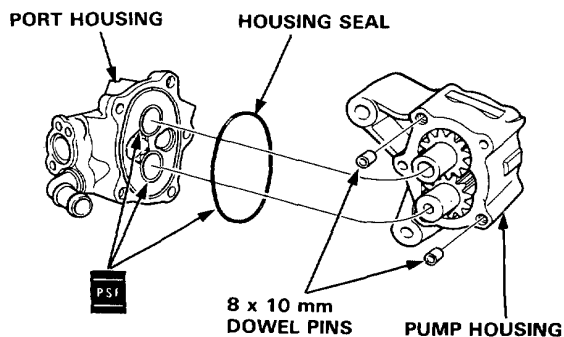


8. Coat the port housing groove with power steering fluid, then position a new housing seal on the pump housing.
9. Coat the new plunger seal with the power steering fluid and install it over the plungers.
10. Install the dowel pins in the pump housing.

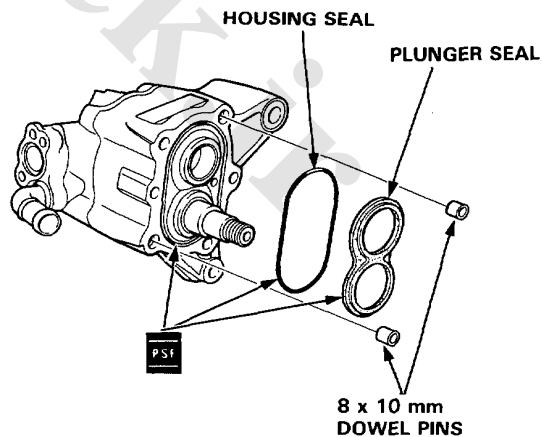





11. Install the new oil seal in the pump front cover; get it started by hand, then use a socket to push it in the rest of the way.
12. Coat the lip of the seal with steering grease (Honda P/N 08733-B070E).

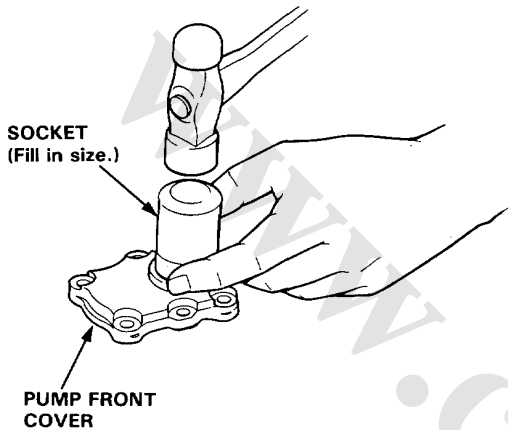

13. Wrap the splined area of the drive gear with vinyl tape and grease the surface of the tape.

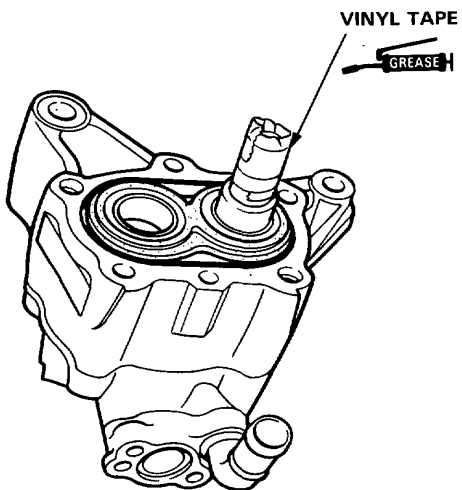


14. Slide the pump front cover over the drive gear, being careful not to damage the sealing lip or dislodge the spring of the oil seal, then remove the vinyl tape.

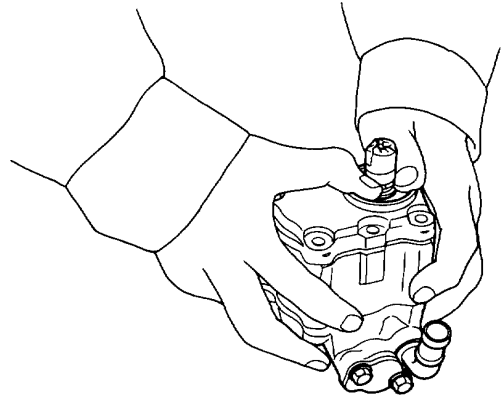

15. Install the five bolts. Torque them to the specified torque in the order shown.

FLANGE BOLT
12 N·m (1.2 kg-m, 9 lb-ft)

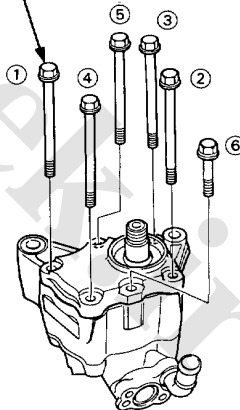


16. Install the control valve (page 11-34).
17. Install the pulley (page 11-32) and check the pump preload with a torque wrench (page 11-31).

Steering Gearbox

Valve Body Unit Overhaul


Removal:

1. Drain the power steering fluid (page 11-19).
2. Remove the gear box shield.

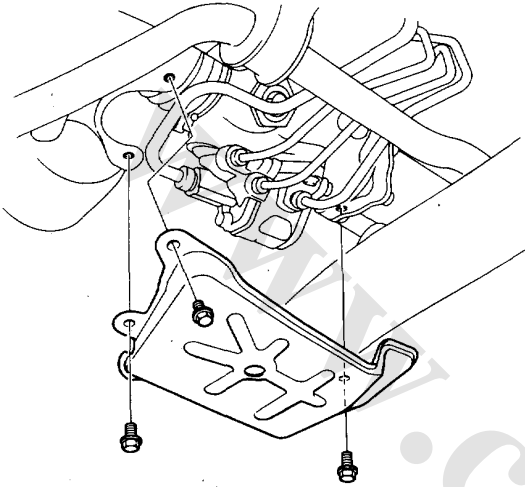


3. Using solvent and a brush, wash any oil and dirt off the control unit, its lines, and that end of the gearbox. Blow dry with compressed air.
4. Using flare nut wrenches, disconnect the four lines from the control unit.

- A: From pump: 14 mm wrench
- B: To oil cooler: 12 mm wrench
- C: To reservoir: 17 mm wrench
- D: To speed sensor: 12 mm wrench

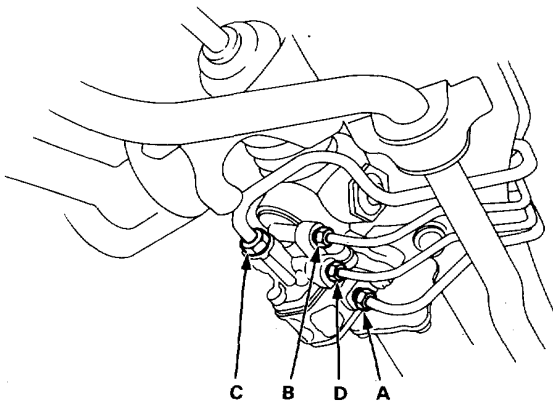


5. Remove the two 8 mm flange bolts and remove the control unit from the gearbox.
6. Remove the O-rings and port orifices from the gearbox.

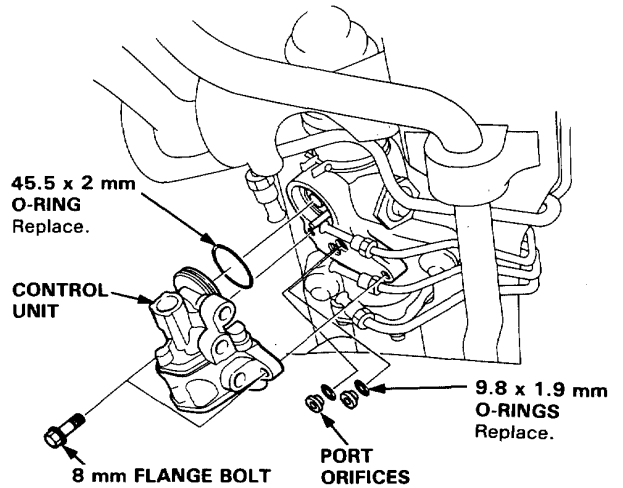


Disassembly:

1. Remove the O-ring from the control unit.
2. Remove the three 6 mm flange bolts, and remove the cap from the valve body.
3. Remove the cap seal from the cap.

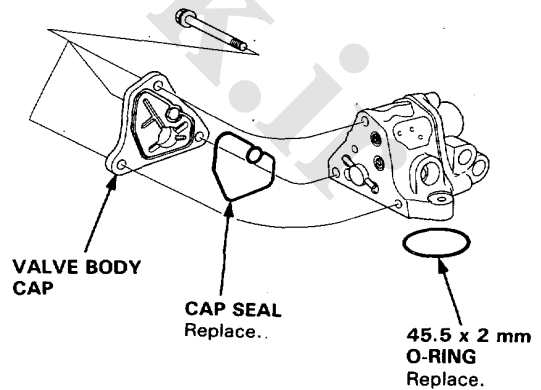




4. Remove the pressure control valve and spring from the valve body.

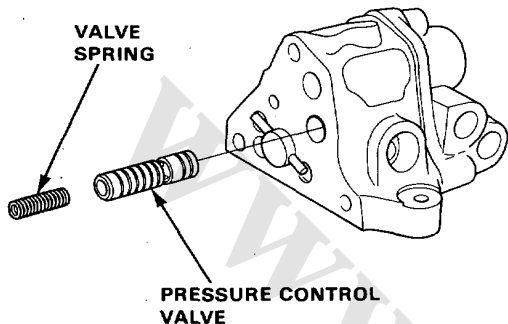

5. Check the pressure control valve:


- Inspect its surface for scoring or scratches.
- Slip it back into the valve body, and make sure it slides smoothly without drag and without side play.

PRESSURE CONTROL VALVE
Check for scoring or scratches, and rough operation.

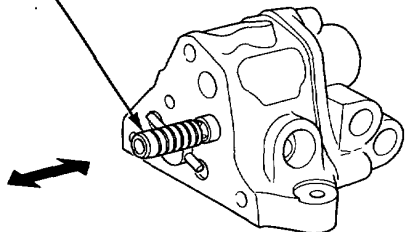

NOTE: If the valve body is damaged, replace the valve body unit (valve body, pressure control valve, gain control valve, control valve) as an assembly.


6. Remove the gain control valve and spring from the valve body.

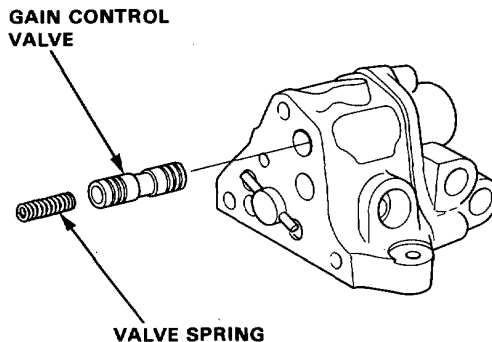

7. Check the gain control valve:

- Inspect its surface for scoring or scratches.
- Slip it back into the valve body and make sure it slides smoothly without drag and without side play.

GAIN CONTROL VALVE
Check for scoring, scratches, or rough operation.

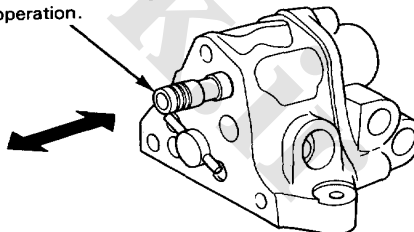


NOTE: If the valve body is damaged, replace the valve body unit (valve body, pressure control valve, gain control valve, control valve) as an assembly.

(cont'd)

Steering Gearbox


Valve Body Unit Overhaul (cont'd)

8. Separate the valve body and port housing.
9. Remove the seal and dowel pins from the port housing.

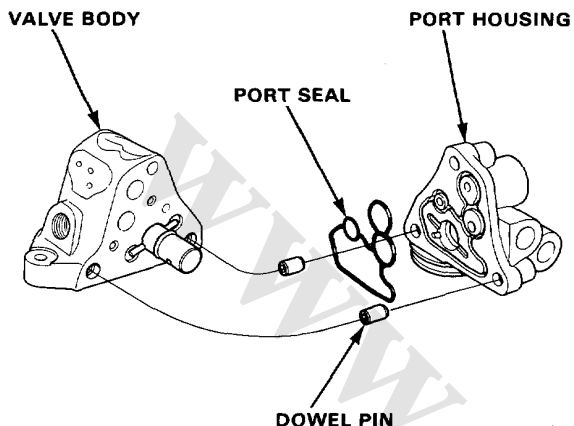

10. Remove the rollers from the control valve by pushing the valve out one side of the valve body, and then the other.

NOTE: When removing the rollers, hold the plungers with your fingers to keep them from popping out.

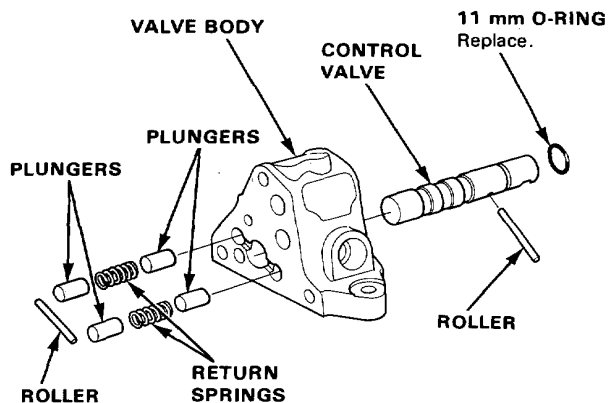


11. Remove the plungers, return springs and control valve from the valve body.
12. Remove the 11 mm O-ring from the control valve.

13. Check the plungers.


- Inspect their surface for scoring or scratches.
- Slip each plunger into the valve body, and make sure it slides smoothly, without drag or side play. If any plunger is damaged, replace it.

NOTE: If the valve body is damaged, replace all three parts (valve body, cut-off valve and control valve) as a set.

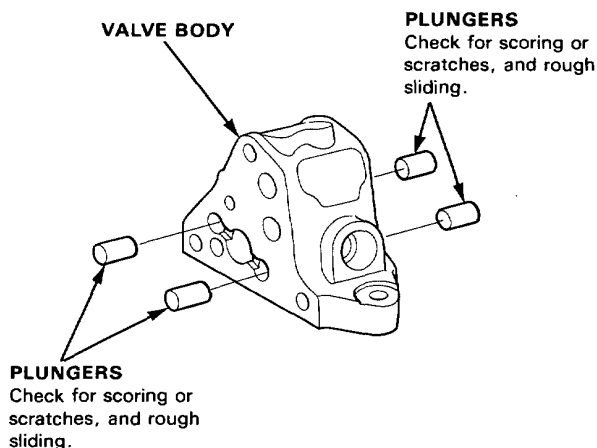

14. Check the control valve.


- Inspect its surface for scoring or scratches.
- Slip it into the valve body, and make sure it slides smoothly, without drag or side play.

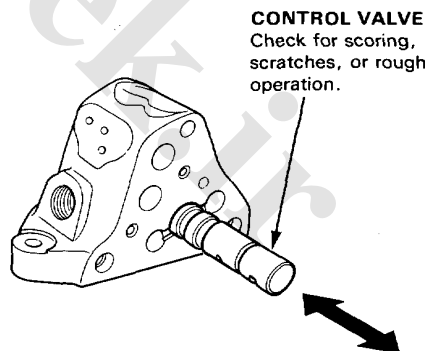

NOTE: If the valve body is damaged, replace the valve body unit (valve body, pressure control valve, gain control valve, control valve) as an assembly.



15. Using a 3 mm (1/64") drill bit, remove the sensor orifice and 3.4 m O-ring.

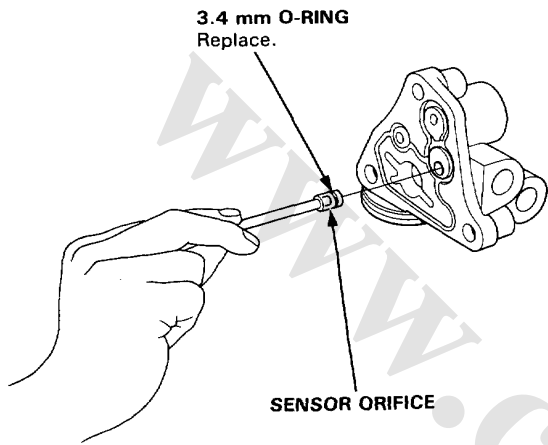

Steering Gearbox

Valve Body Unit Overhaul


Assembly:

1. Thoroughly clean the disassembled parts shown below.
2. Coat the plungers, pressure control valve, gain control valve and control valve surfaces with power steering fluid.
3. Reassemble the parts in the reverse order of disassembly.

CAUTION:

- Replace the O-rings and seals with new ones.
- Do not dip the O-rings and seals in solvent.
- Apply grease in the seal grooves to keep the seals in place.
- Apply grease to new O-rings to keep them in place.


-  STEERING GREASE Part Number 08733-B070E

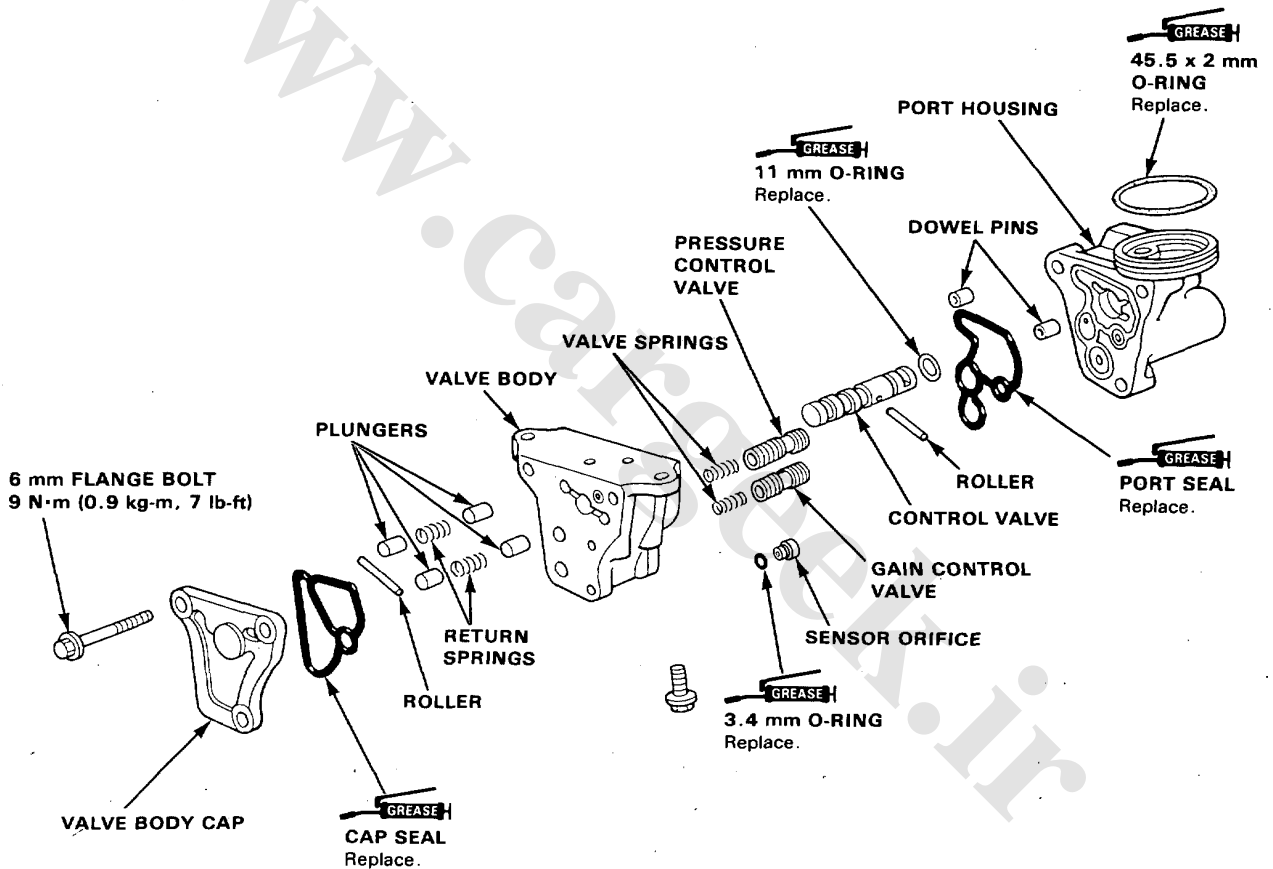

NOTE: If the valve body is damaged, replace the valve body unit (valve body, pressure control valve, gain control valve, control valve) as an assembly.



4. Make sure the control valve moves smoothly, and returns to neutral position.

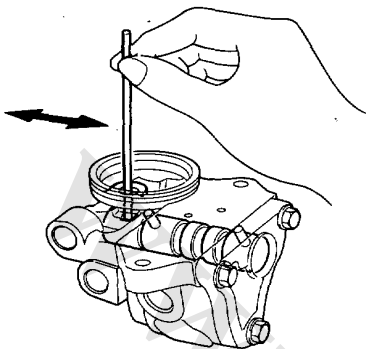


Installation:

1. Coat the 9.8 x 1.9 mm O-rings with grease, and install them together with the orifices.
2. Install the valve body unit on the gear housing with the two 8 mm bolts.


CAUTION:

- When installing, be careful not to hit the pinion holder pin.
- Make sure the O-rings are in place and not pinched.

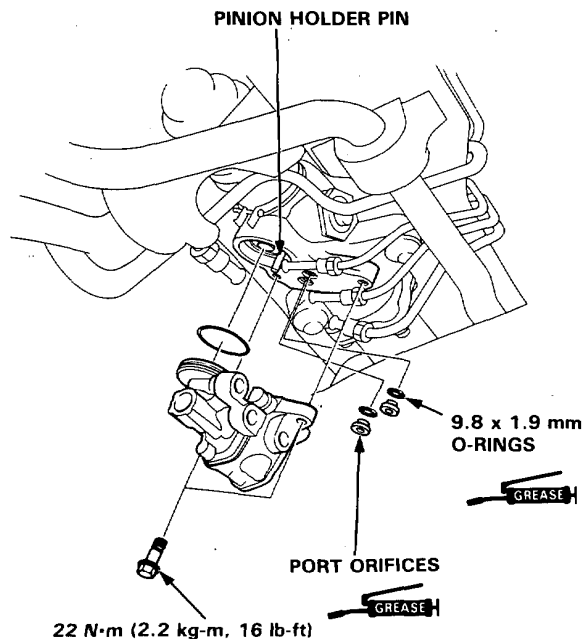


3. Connect the four lines to the control unit, using flare nut wrenches.

- A: From pump: 14 mm wrench
38 N·m (3.8 kg-m, 28 lb-ft)
- B: To oil cooler: 12 mm wrench
13 N·m (1.3 kg-m, 9 lb-ft)
- C: To reservoir: 17 mm wrench
29 N·m (2.9 kg-m, 21 lb-ft)
- D: To speed sensor: 12 mm wrench
13 N·m (1.3 kg-m, 9 lb-ft)

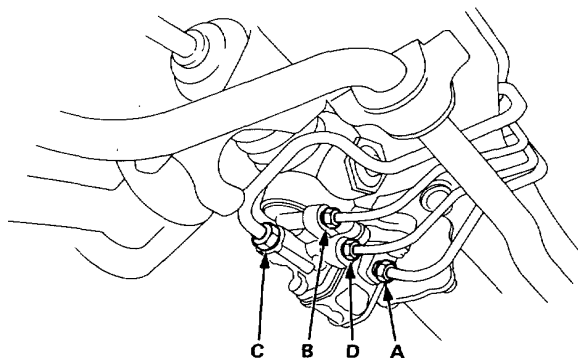


4. Fill the reservoir with power steering fluid and bleed air from the system by turning the steering wheel from lock to lock several times with the engine warm.
5. Make sure there are no fluid leaks, then install the shield.
6. Recheck the fluid level in the reservoir.

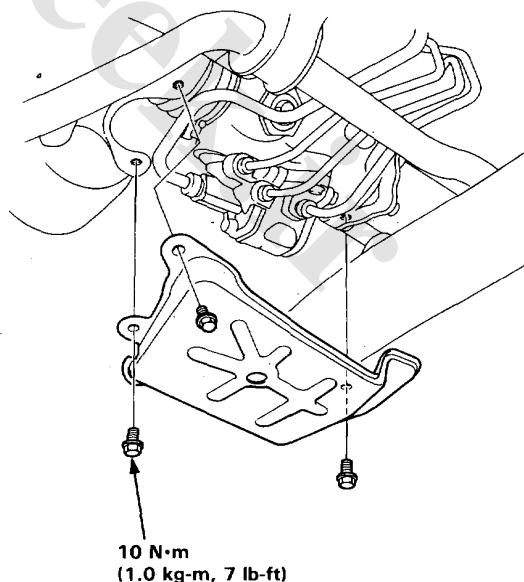


Steering Gearbox

Removal

1. Drain the power steering fluid as described on page 11-19.
2. Raise the front of car and support on safety stands in the proper locations.
3. Remove the front wheels.
4. Remove the steering joint cover.

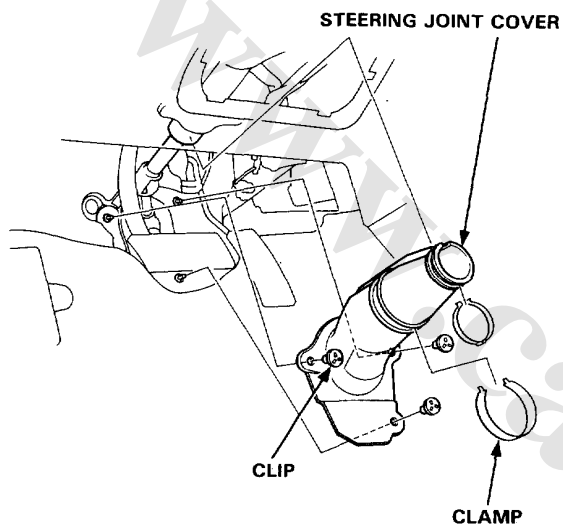


5. Remove the steering joint bolts, and move the joint toward the column.

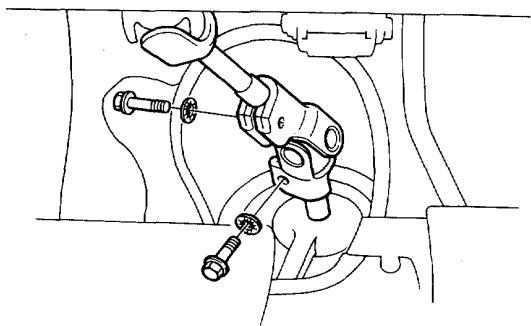


6. Disconnect the tie rods from the steering knuckles using the special tool shown.

CAUTION: Avoid damaging the ball joint boot.

NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.

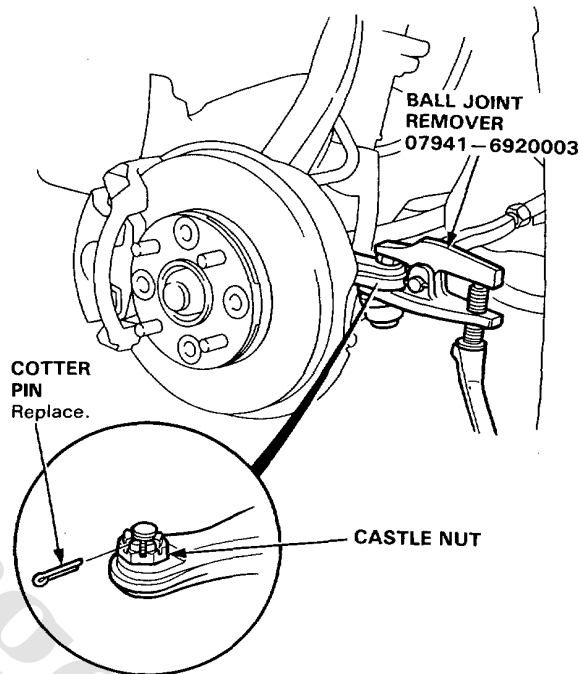


7. Remove the gear box shield.

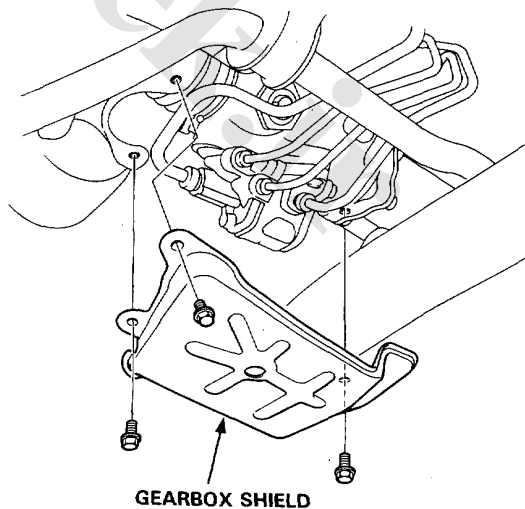




8. Using solvent and a brush, wash any oil and dirt off the control unit, its lines, and that end of the gearbox. Blow dry with compressed air.
9. Using flare nut wrenches, disconnect the four lines from the control unit.

- A: From pump: 14 mm wrench
- B: To oil cooler: 12 mm wrench
- C: To reservoir: 17 mm wrench
- D: To speed sensor: 12 mm wrench

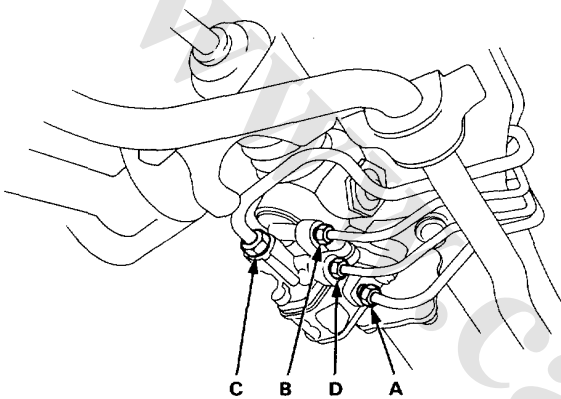


10. Disconnect the 4P connector from the oxygen sensor.
11. Remove the header pipe bracket nuts.

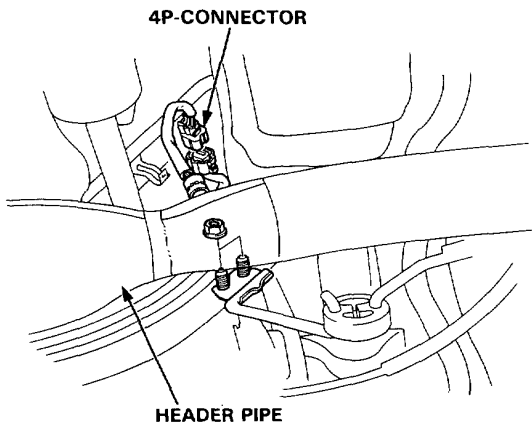


12. Remove the self-locking nuts that connect the header pipe to the catalytic converter, and the header pipe to the exhaust manifold.
13. Remove the header pipe.

CAUTION: Replace the exhaust gasket and self-locking nuts when you reinstall the pipe.

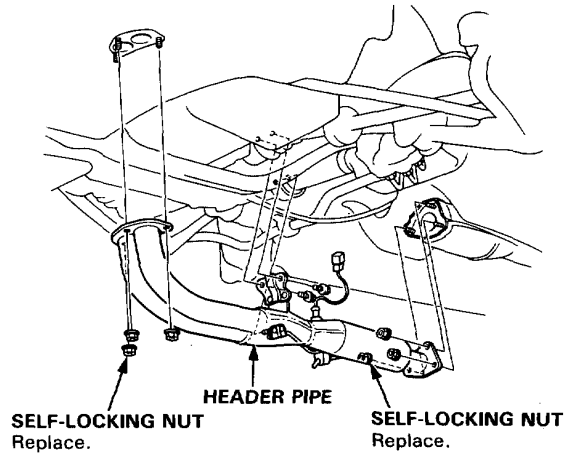

Automatic transmission:

14. Remove the control cable from the clamp by removing the cable holder.

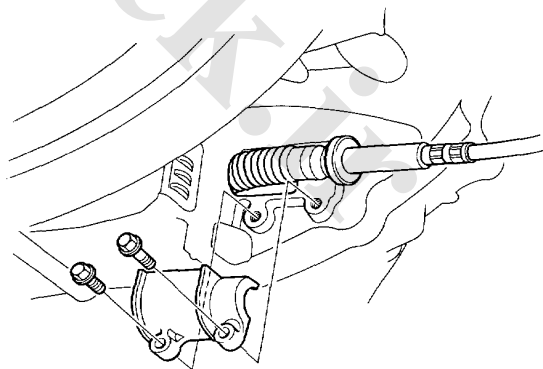


(cont'd)

Steering Gearbox

Removal (cont'd)


4WS Only.

- Separate the joint guard cap and the joint guard.
- Remove the joint bolt from the driven pinion side.

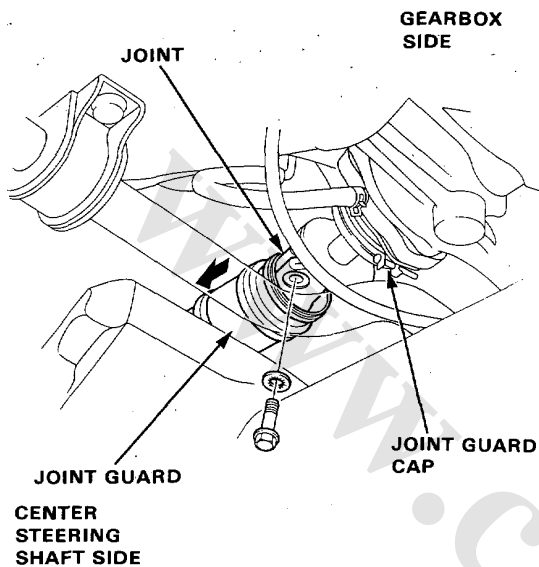


- Remove the joint bolt from the center steering shaft side, then slide the joint back to disconnect it from the driven pinion.

15. Remove the bolts, and lower the stabilizer.

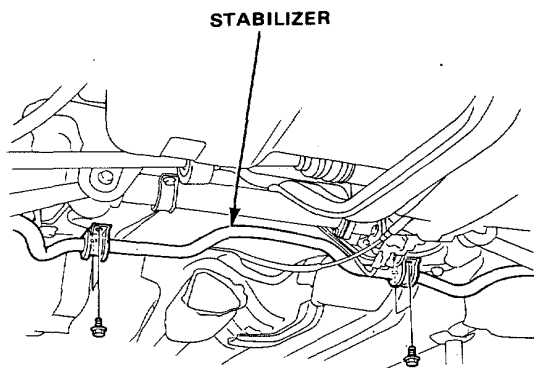


16. Remove the steering gearbox mounting bolts.

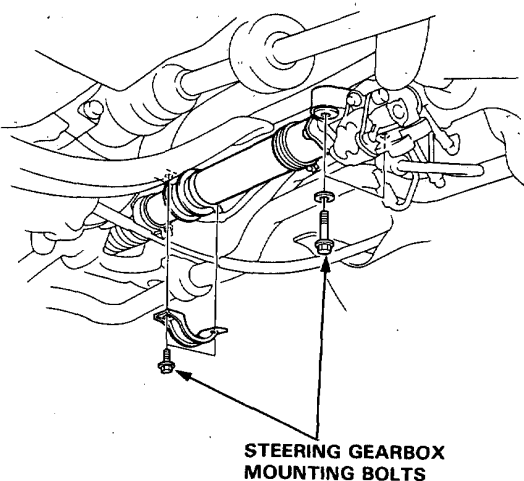

17. Slide the tie rod all the way to the right side.

18. Slide the gearbox right so that the left tie rod clears the bottom of the rear beam, then remove the gearbox.

CAUTION: Be careful not to bend or damage the four power steering lines when removing the gearbox assembly.

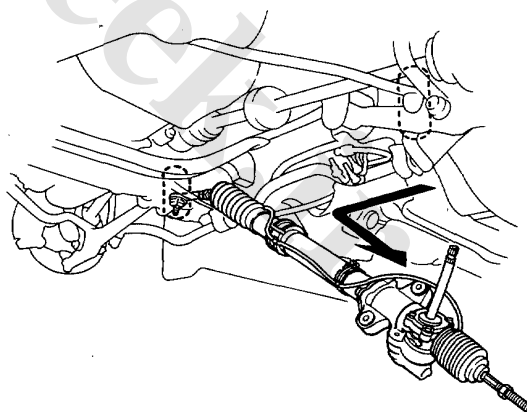



Steering Gearbox

Illustrated Index (2WS)


NOTE:


- LH Drive shown, RH Drive is similar.
- The valve body unit removal see pages 11-38.

CAUTION:

- Before disassembling the gearbox, wash it off with solvent and a brush.
- Thoroughly clean all disassembled parts.
- Always replace O-rings and seals.
- Replace parts with damaged sliding surfaces.
- Do not dip seals and O-rings in solvent; coat O-rings with grease, make sure they stay in position during reassembly, and use the appropriate special tools to install them where necessary.

- **GREASE** STEERING GREASE Part Number 08733-B070E

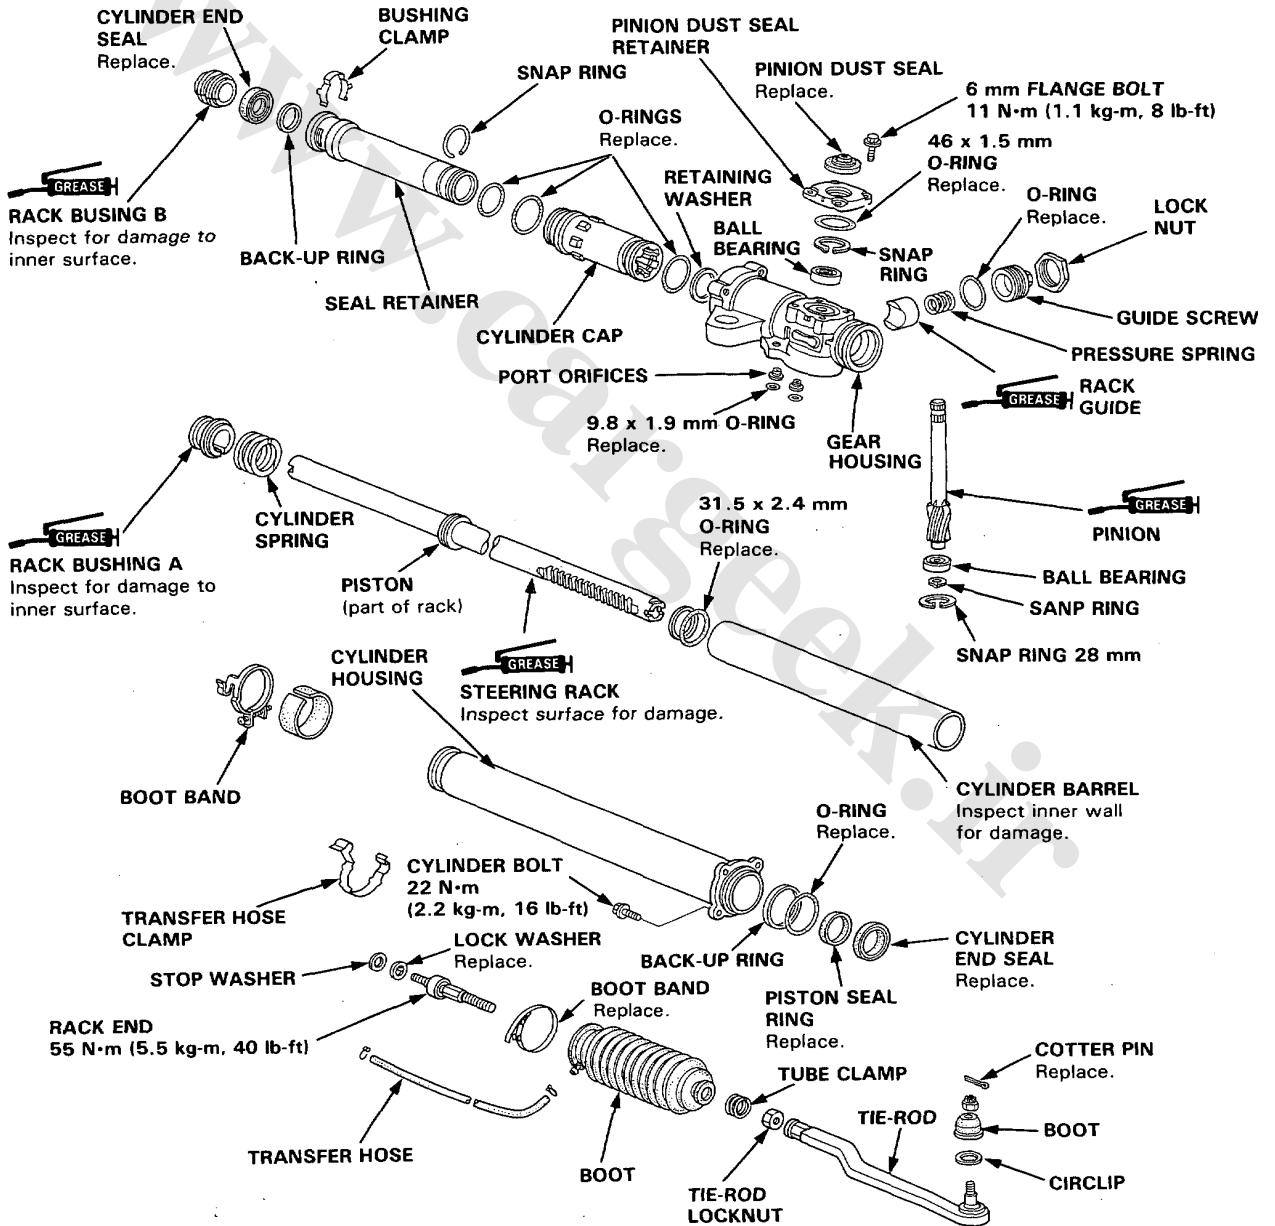


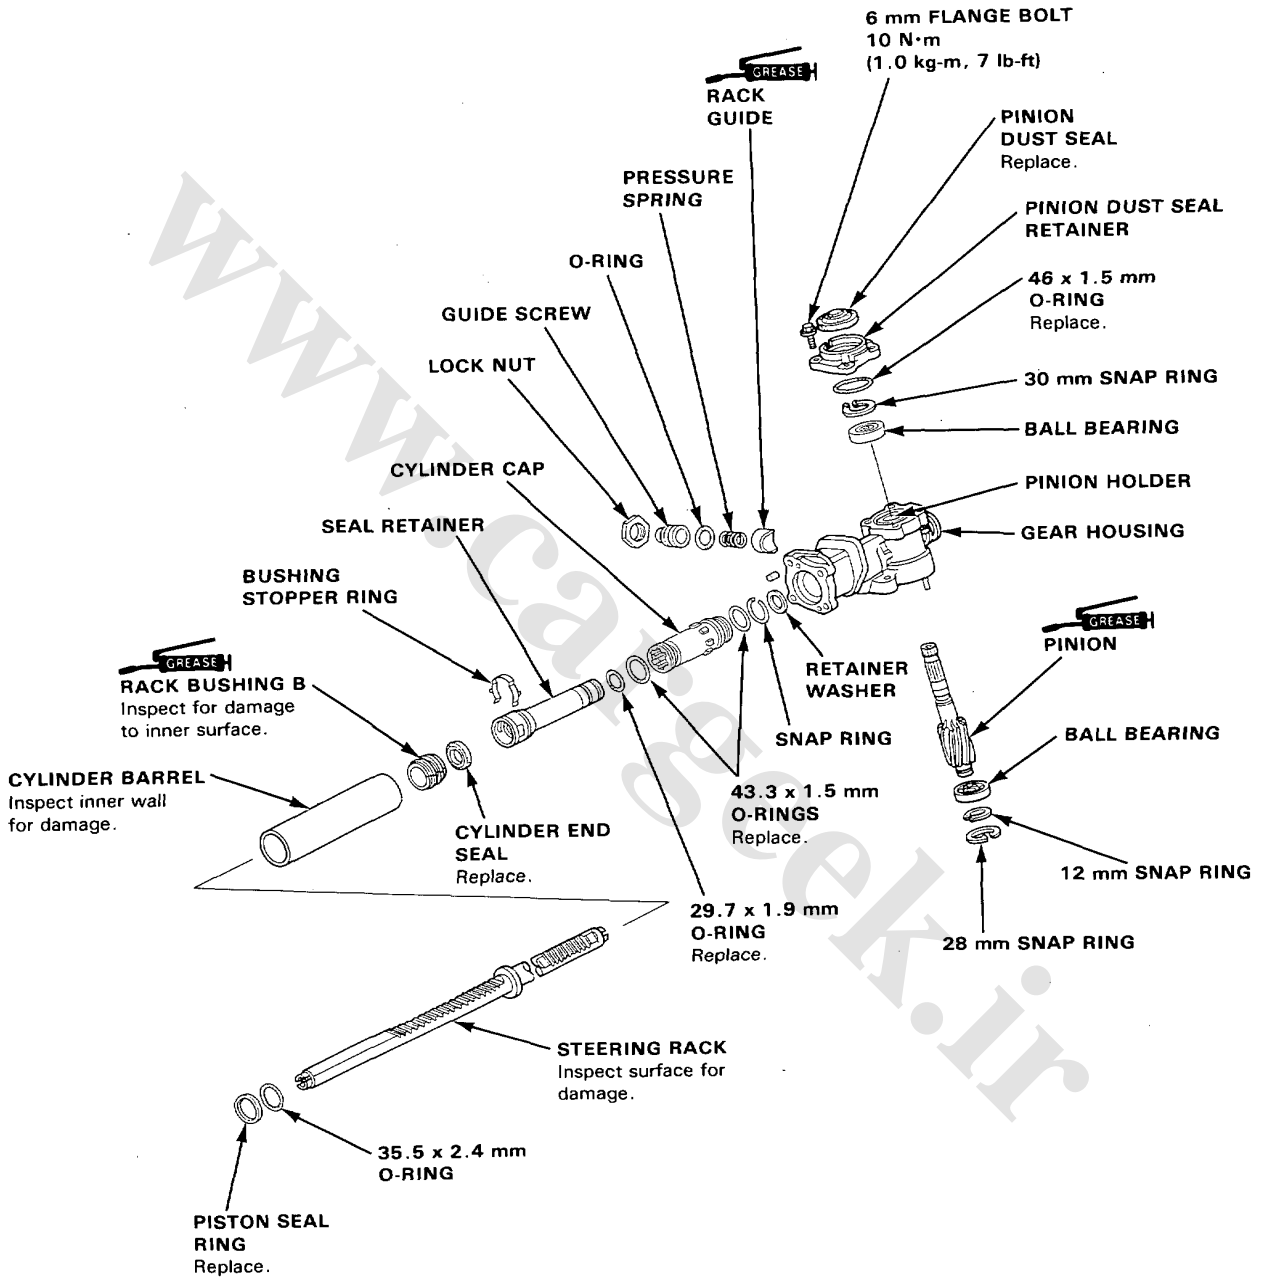


Steering Gearbox

Overhaul (2WS)


1. Remove the control unit as described on page 11-38.
2. Carefully clamp the gearbox in a vise with soft jaws.
3. Loosen the bands, pull the boots away from the ends of the gearbox, and unbend the tie-rod lock washers.
4. Hold the rack with a 22 mm wrench, and unscrew the tie-rods with a 17 mm wrench.

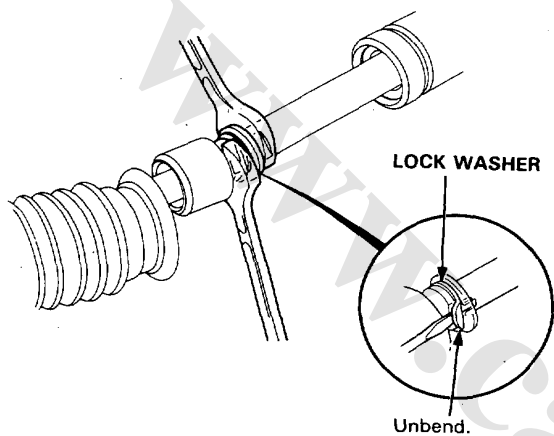


5. Push the right end of the rack back into the cylinder housing so the smooth surface that rides against the seal won't be damaged.

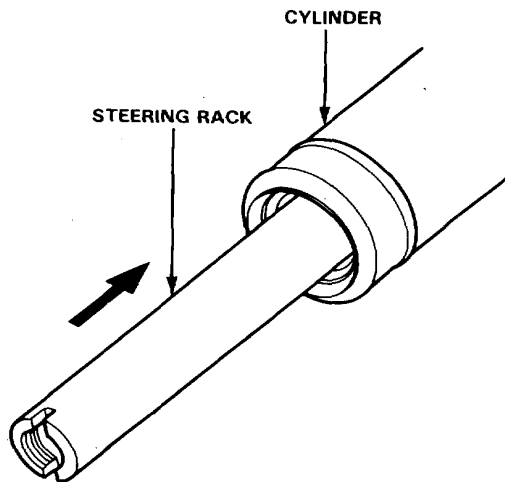

6. Loosen the rack screw locknut, and remove the rack guide screw.

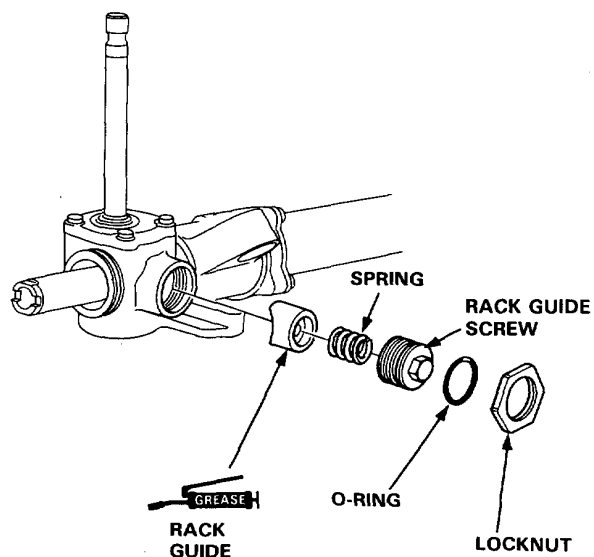


7. Remove the 28 mm snap ring from the bottom of the gear housing.

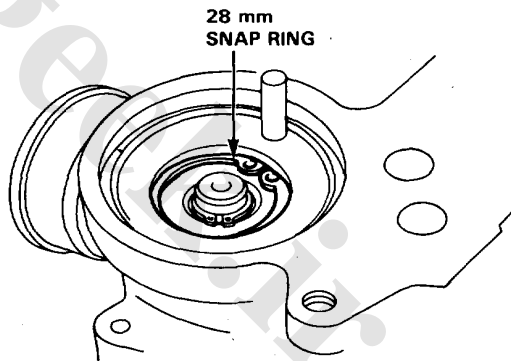




8. Remove the pinion from the gear housing by tapping it lightly.

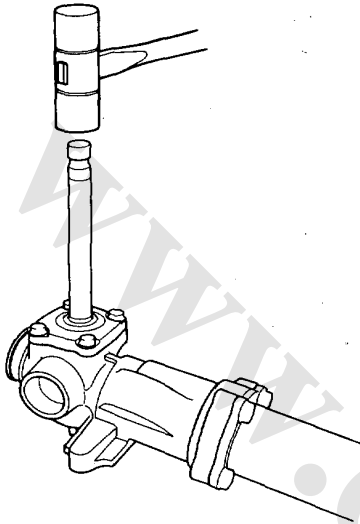


9. Check the pinion lower ball bearing for play; if it is good and the grease in it is clean, go on step 10. If the bearing is noisy or has excessive play, replace the bearing.


- Remove the 12 mm snap ring.

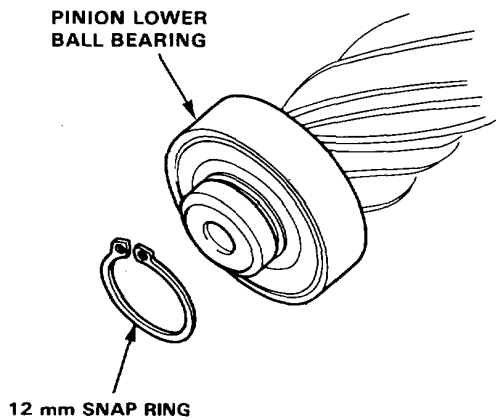

- Remove the bearing using a commercially available bearing pulley.

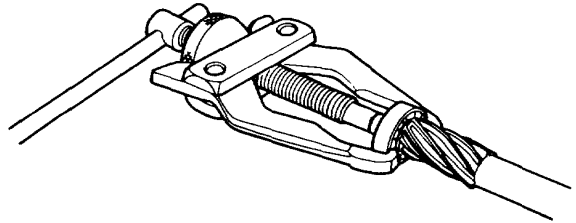

- Using a press, install the lower bearing on the pinion, with its shielded side facing down.

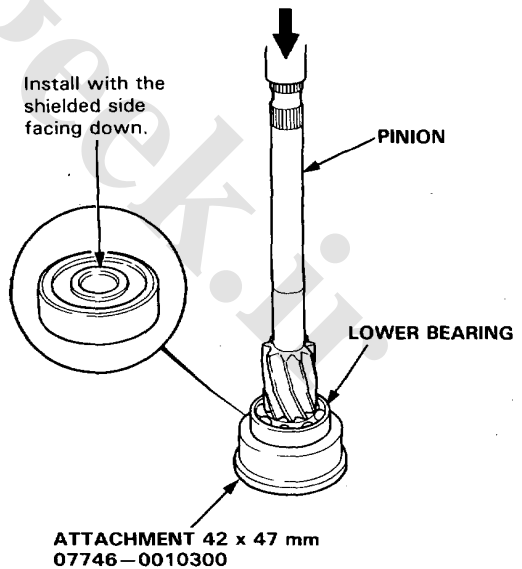


(cont'd)

Steering Gearbox


Overhaul (2WS) (cont'd)

- Apply grease to the lower ball bearing and check for smooth operation. Install the 12 mm snap ring.

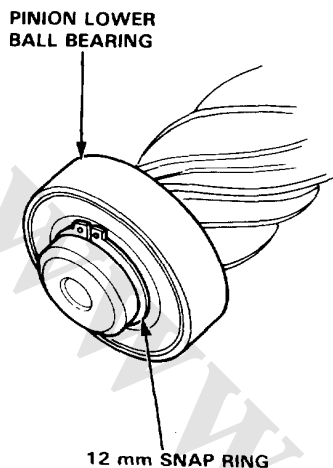

10. Remove the four bolts from the end of the cylinder housing, then slide the housing off the rack.


11. Remove the cylinder housing.

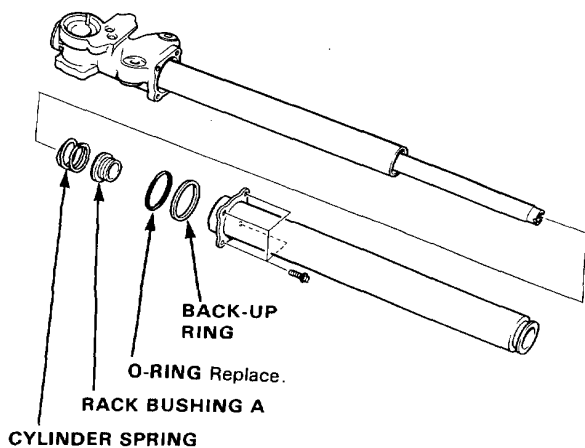


12. Remove the O-ring, back-up ring, steering rack bushing A and cylinder spring.

13. Remove the cylinder end seal from the cylinder housing.

14. Use your fingers or a wooden stick to avoid damaging the housing.

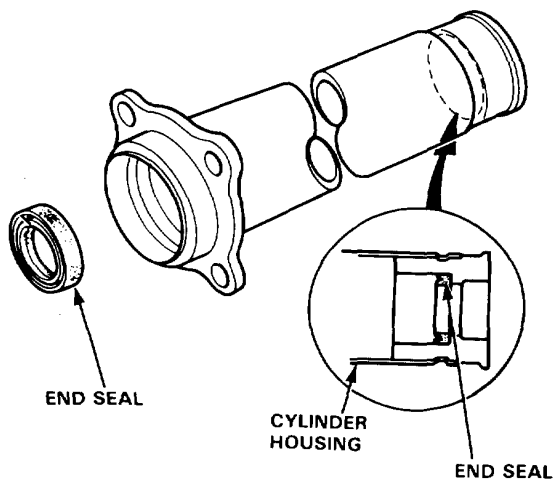


15. Remove the cylinder, cylinder seal retainer, cylinder cap and steering rack from the gear housing.

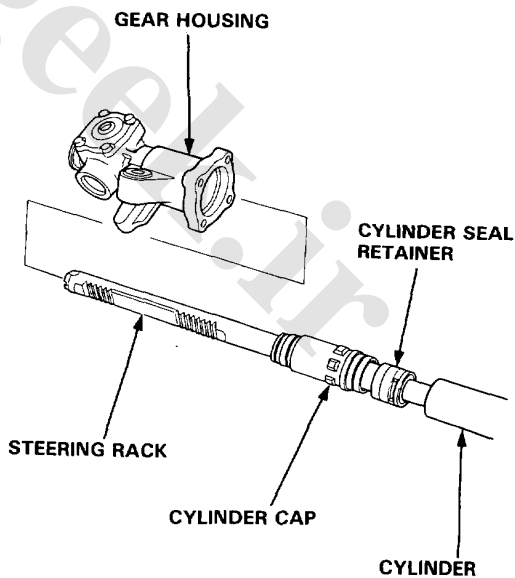




16. Remove the retainer washer from the gear housing.

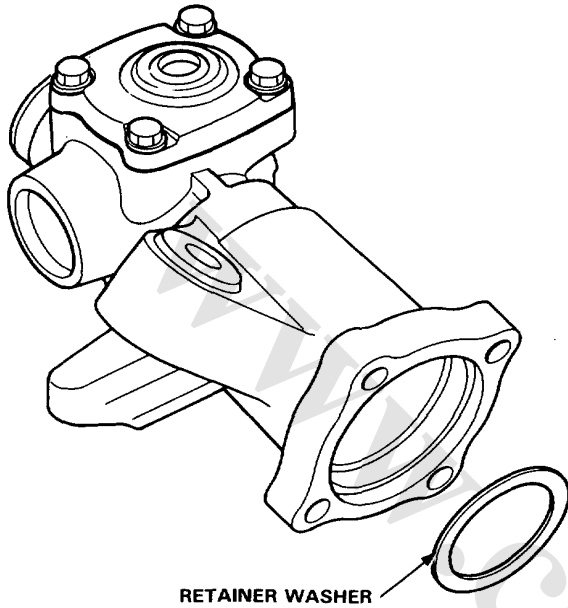

17. Remove the gear housing cap from the gear housing by removing the four 6 mm flange bolts.

18. Remove the steering pinion seal from the gear housing cap.

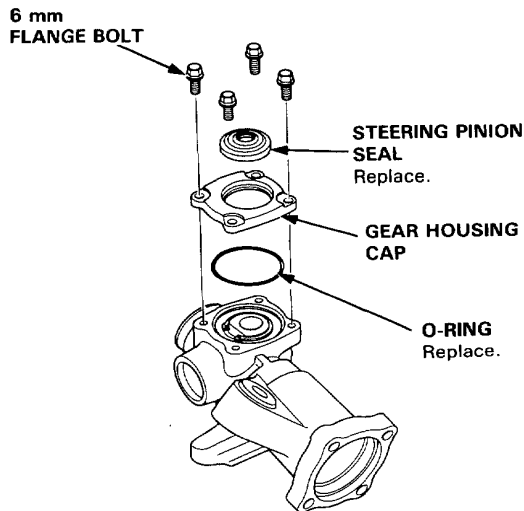


19. Remove the O-ring from the gear housing.


20. Check the upper bearing for free movement and excessive play; if it is good and the grease in it is clean, go on step 21.

If it is damaged, or if dirt has gone past the seal into the grease, replace the bearing.

- Remove the 30 mm snap ring from the pinion holder.

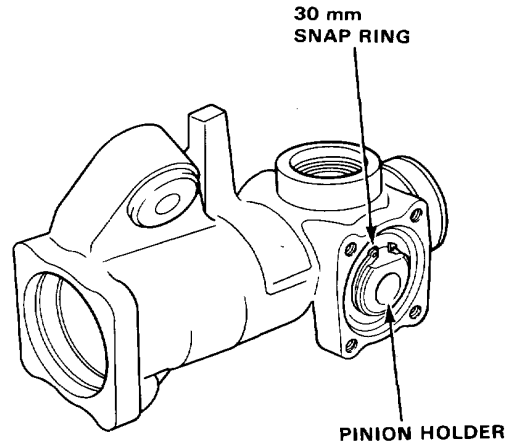

- Remove the pinion holder from the gear housing.

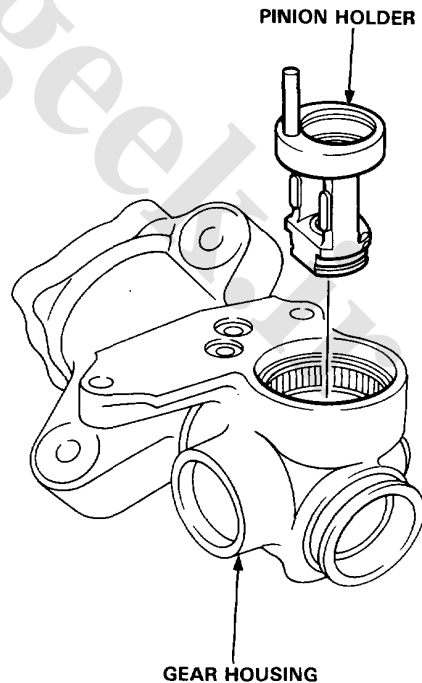


(cont'd)


Steering Gearbox

Overhaul (2WS) (cont'd)


- Remove the pinion upper ball bearing from the gear housing.

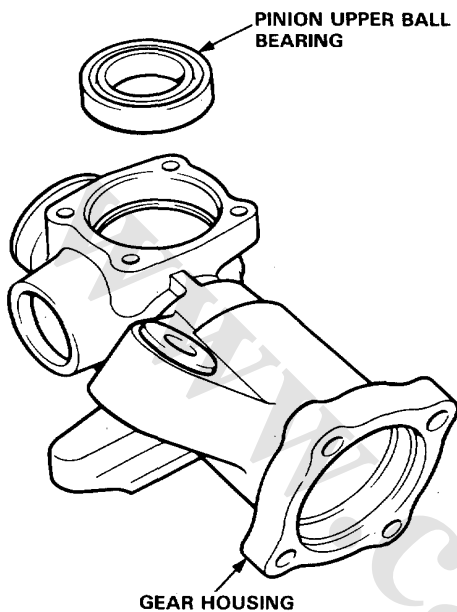


- Check the needle roller bearing in the pinion holder and in the gear housing for damage; if they are OK, pack them with grease. If the bearings are damaged, replace them as a set.

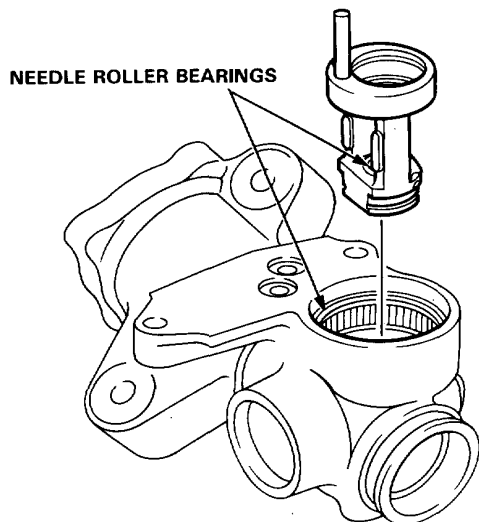

- Pack a new upper bearing with grease, then drive the bearing into the gear housing with its sealed side facing out.

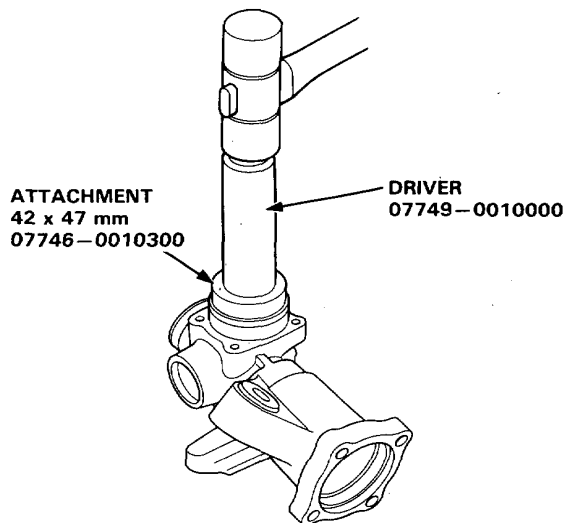


- Install the pinion holder in the gear housing.

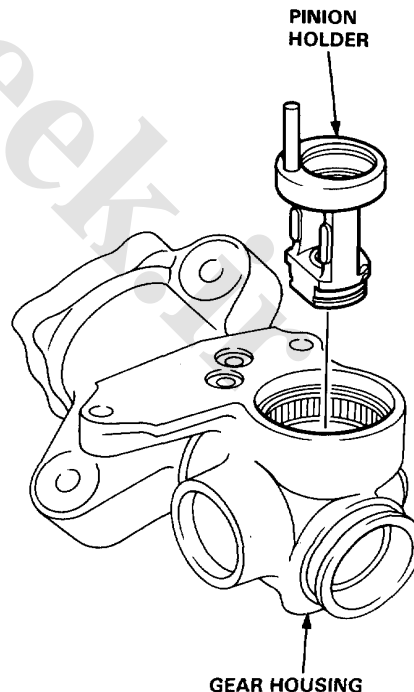




- Reinstall the 30 mm snap ring with its tapered side facing out.


NOTE: Snap ring ends must be aligned with the flat area.

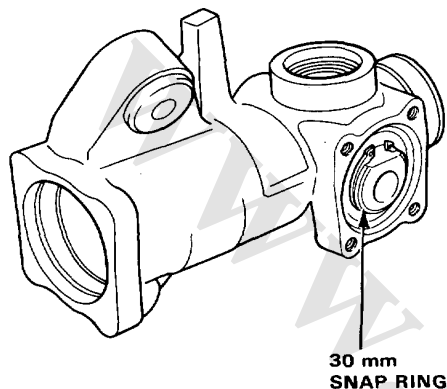


21. Remove the cylinder and seal retainer from the steering rack.

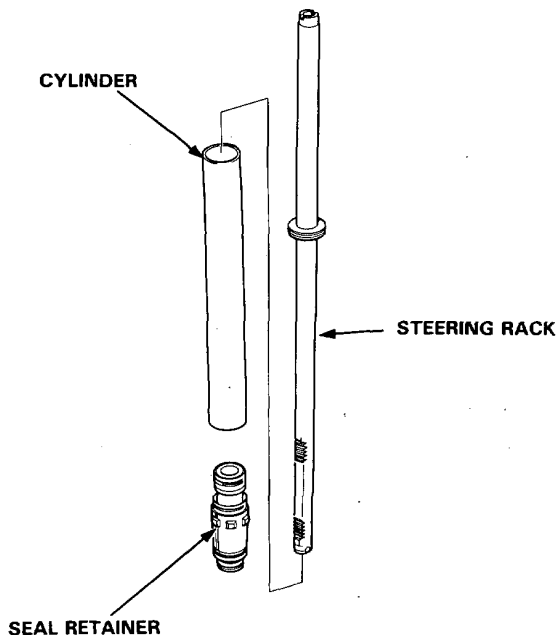

22. Remove the O-ring and snap ring from the seal retainer, then remove the cylinder cap from the seal retainer.
23. Remove the O-rings from the cylinder cap.

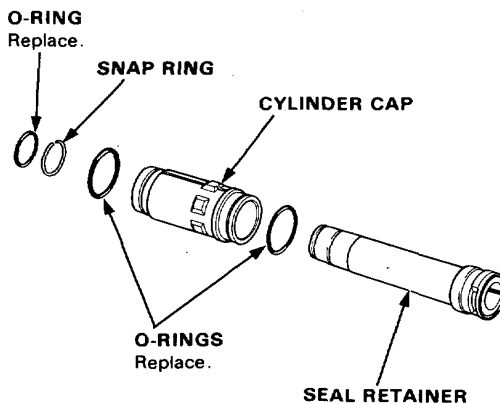

24. Remove the bushing stopper ring from the seal retainer.
25. Remove the cylinder end seal and rack bushing B.

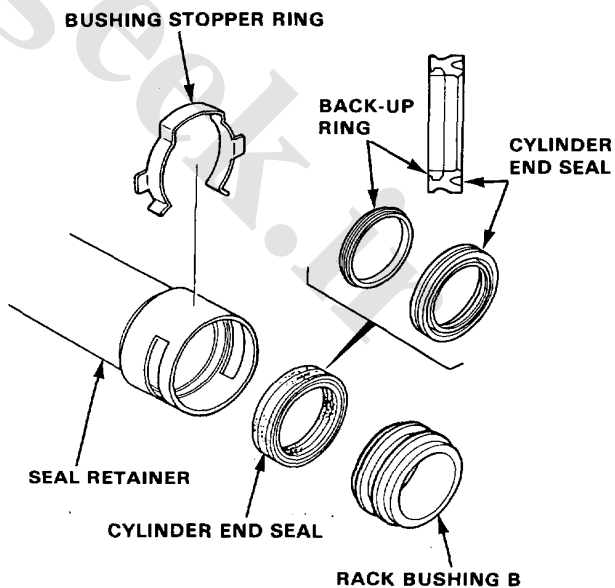


(cont'd)

Steering Gearbox


Overhaul (2WS) (cont'd)

26. Carefully pry the piston seal ring and O-ring off the rack.

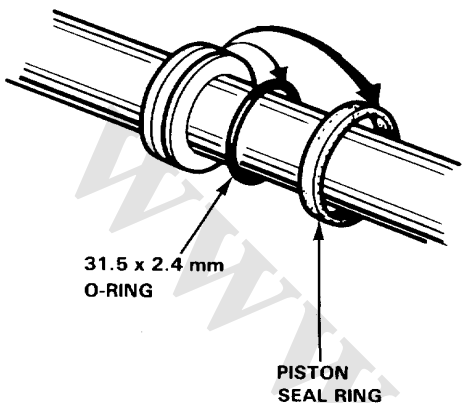


NOTE: Before reassembling any parts, inspect them as described on page 11-48 and make sure they are clean. Replace worn or damaged parts.


27. Install a new O-ring on the rack with its narrow edge facing out.

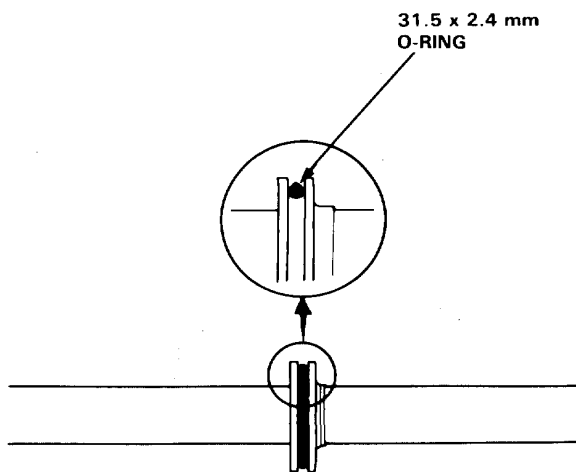

28. Coat the pinion seal ring guide with power steering fluid, then slide it onto the rack, big end first.
29. Position the new piston seal ring on the special tool, slide it down onto the big end of the tool, then pull it off into the piston groove on top the O-ring.

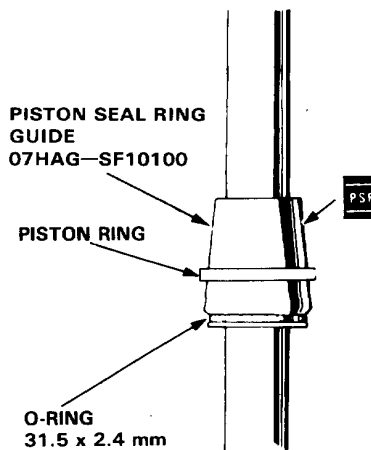


30. Coat the piston seal ring and inside of the special tool with power steering fluid. Carefully slide the tool onto the rack and over the piston ring, then rotate the tool as you move it up and down to seat the piston ring.

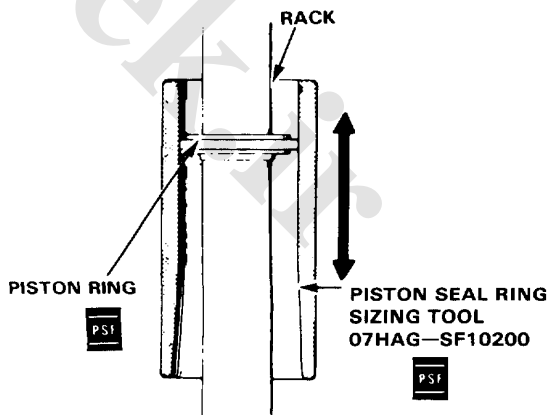




31. Coat new O-rings with grease and install them on the cylinder cap.

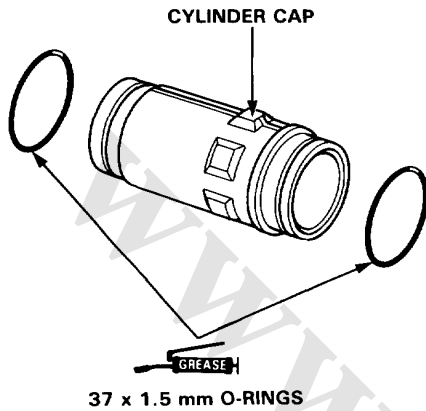


32. Slide the cylinder cap onto the seal retainer.


33. Install the snap ring and O-ring on the seal retainer.

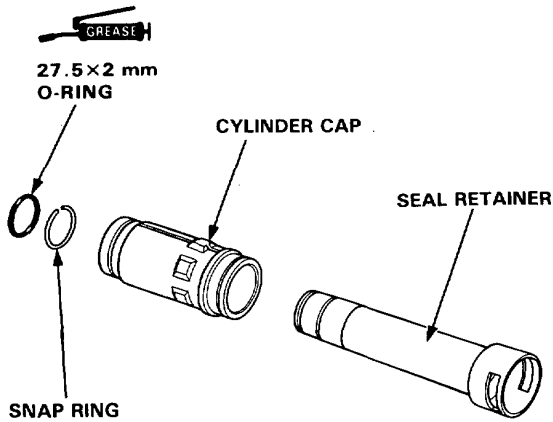

34. Grease the sliding surface of the steering rack bushing B, and install the bushing on the steering rack with the groove of the bushing facing the steering rack piston.

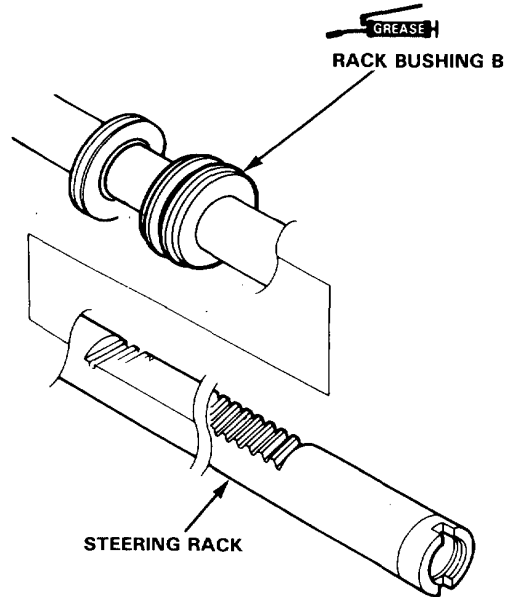

35. Grease the sliding surfaces of the new cylinder end seal and the special tool, then place the seal on the special tool with its grooved side facing opposite the slider.

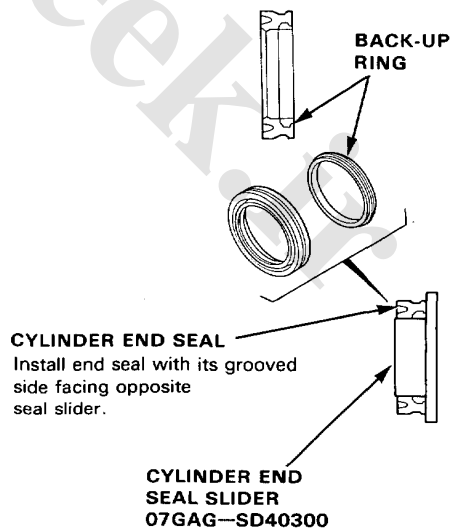


(cont'd)


Steering Gearbox

Overhaul (2WS) (cont'd)


36. Grease the steering rack, and install the special tool.
CAUTION: Make sure the rack teeth do not face the slot in the special tool.

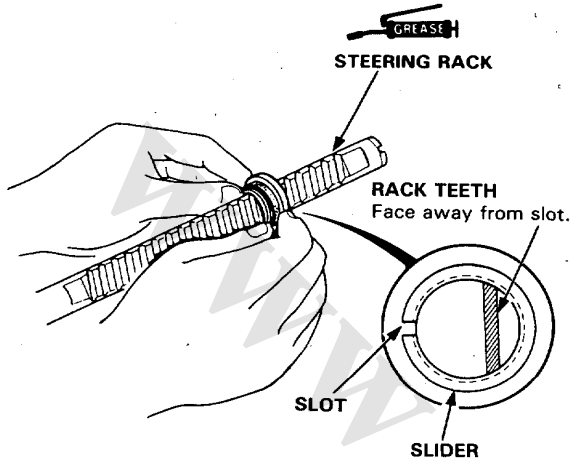


37. Remove the special tool from the cylinder end seal, then separate the ends of the tool and remove it from the rack.

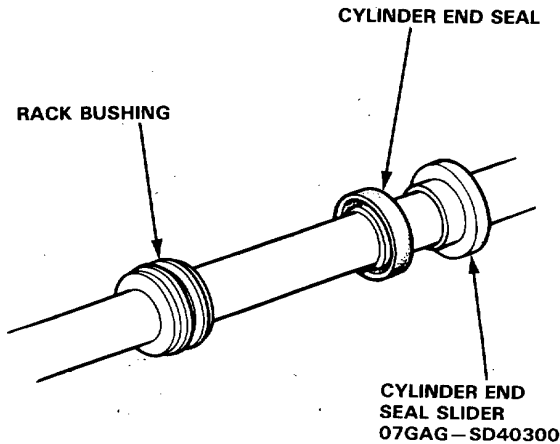

38. Fit the seal retainer on the steering rack.

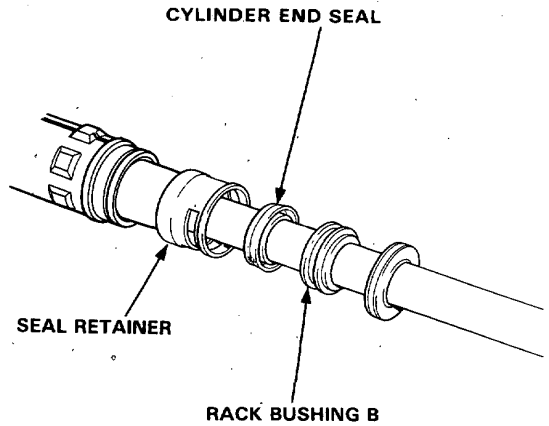


39. Push the rack bushing B toward the seal retainer by hand until the cylinder end seal is seated in the retainer. Fit the seal stopper ring in the groove of the seal retainer securely.

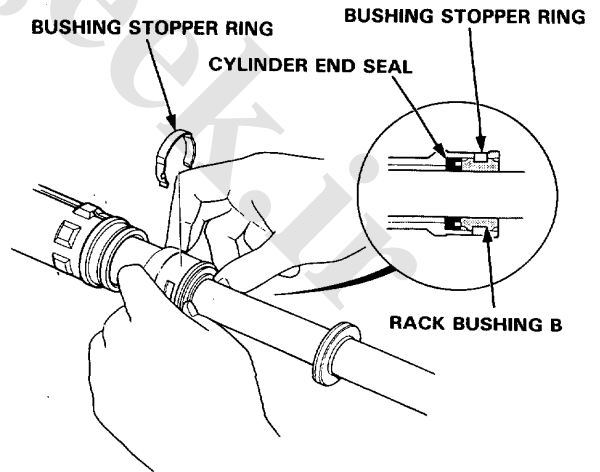




40. Install the retainer washer on the gear housing.

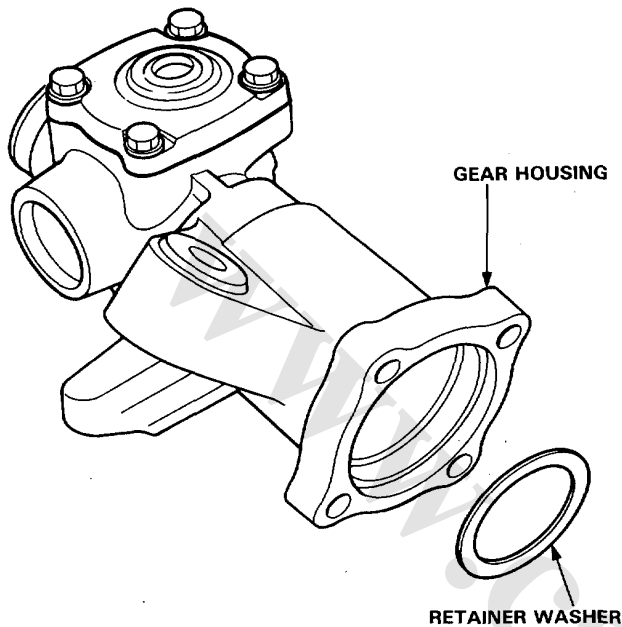


41. Place the gear housing on the work bench and insert the seal retainer and steering rack into the gear housing.

42. Coat the inside surface of the cylinder with power steering fluid, slide it over the rack and into the gear housing; press it into to housing until it seats.

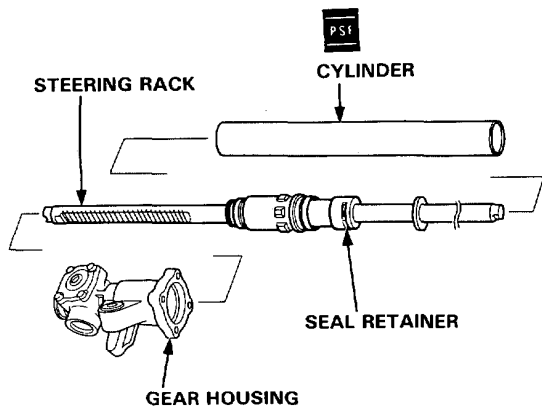


43. Install the cylinder spring over the rack, then coat the rack bushing A with power steering fluid and install it on the spring.

44. Wrap the end of the steering rack with vinyl tape or use the special tool. Coat the tape or tool with grease.

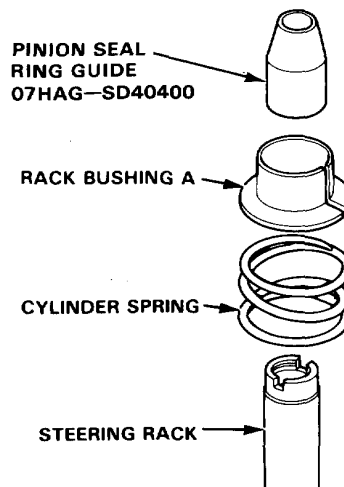

45. Coat the inside surface of the cylinder with power steering fluid and install the cylinder end seal with its grooved side facing out.

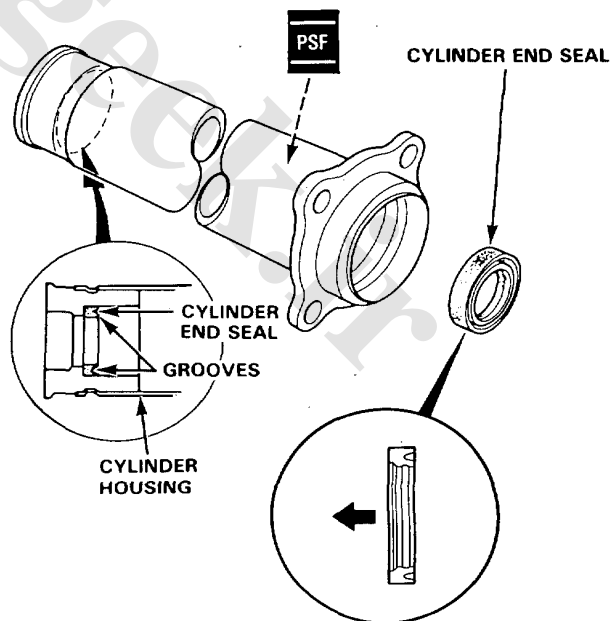

(cont'd)

Steering Gearbox


Overhaul (2WS) (cont'd)

46. Install the O-ring and back-up ring on the gear housing.


47. Carefully position the cylinder on the gear housing and loosely install with four bolts.

CAUTION: Be careful not to damage the end seal in the cylinder housing.

48. Remove the special tool from the steering rack.

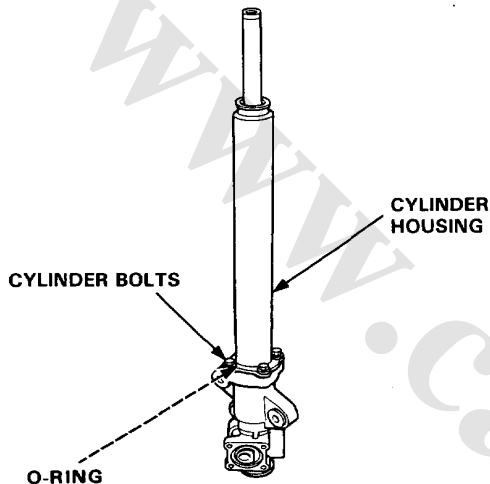


49. Insert the steering rack into the cylinder housing, being careful not to damage the steering rack sliding surface.

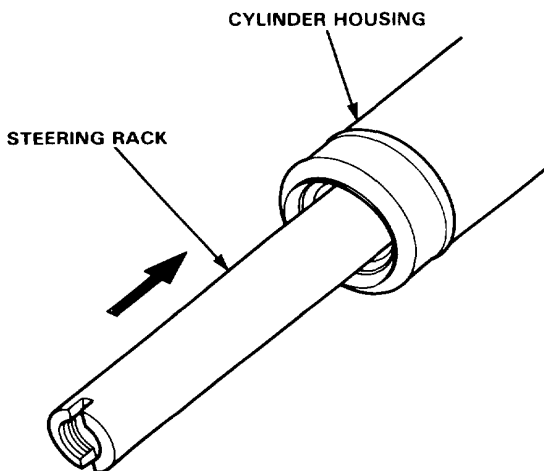


50. Tighten the cylinder housing to the gear housing.

NOTE: Before tightening the bolts, make sure the mating surfaces of the cylinder and gear housings fit properly by pushing them together; hold them together while tightening the bolts.

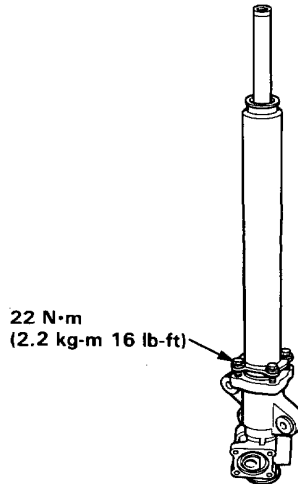


51. Install the steering pinion in the pinion holder.

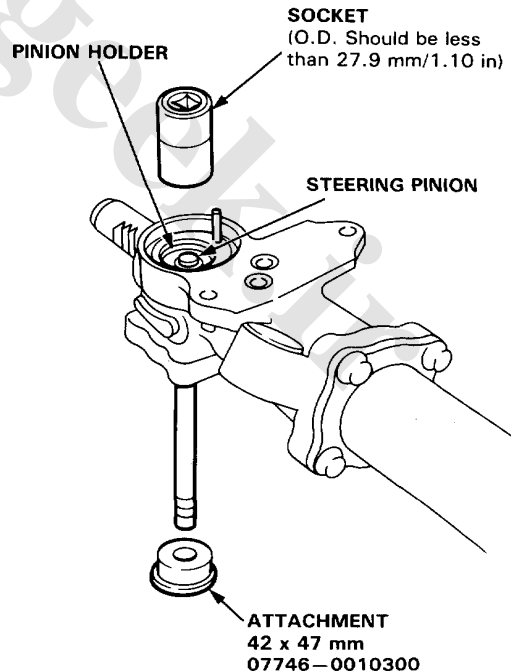




52. Install the 28 mm snap ring securely in the pinion holder groove.


NOTE: Install the snap ring with its tapered side facing out.

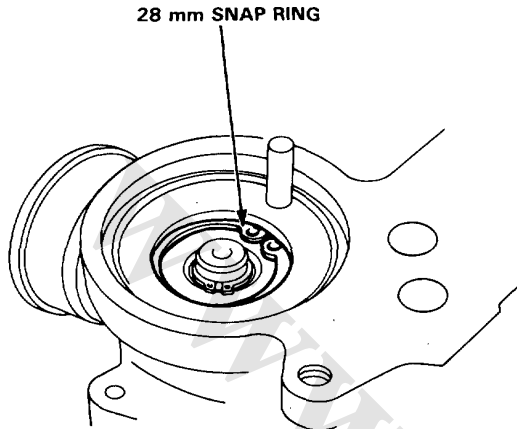

53. Grease the steering pinion seal, and install it on the gear housing using the special tools.

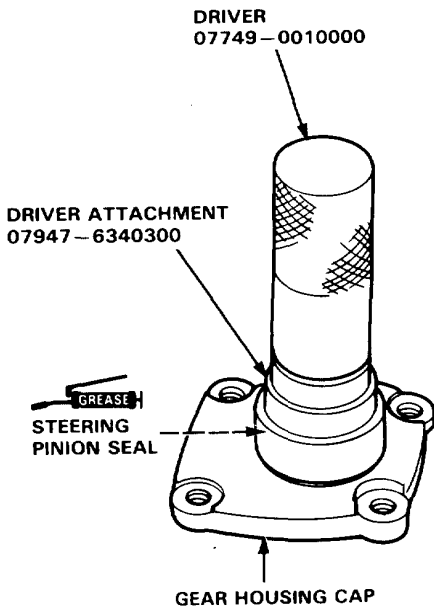

55. Grease the special tool and fit it over the steering pinion.

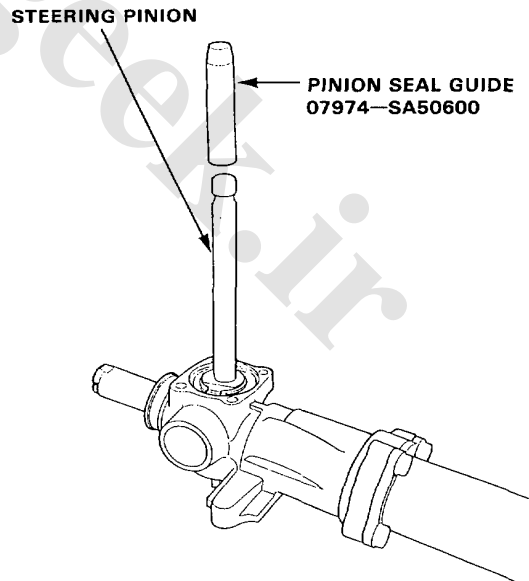


(cont'd)


Steering Gearbox

Overhaul (cont'd)


56. Slide the gear housing cap over the steering pinion, being careful not to damage the sealing lip of the pinion seal.

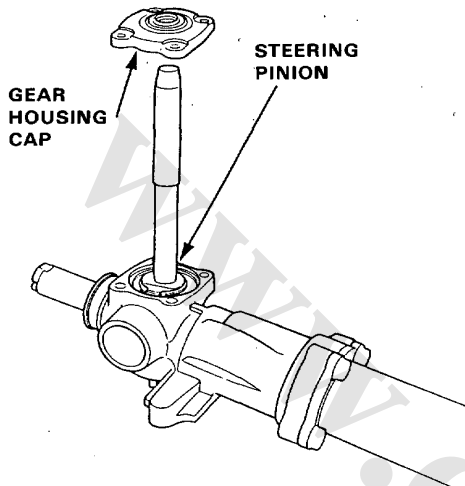


57. Remove the special tool.
58. Tighten the four flange bolts.

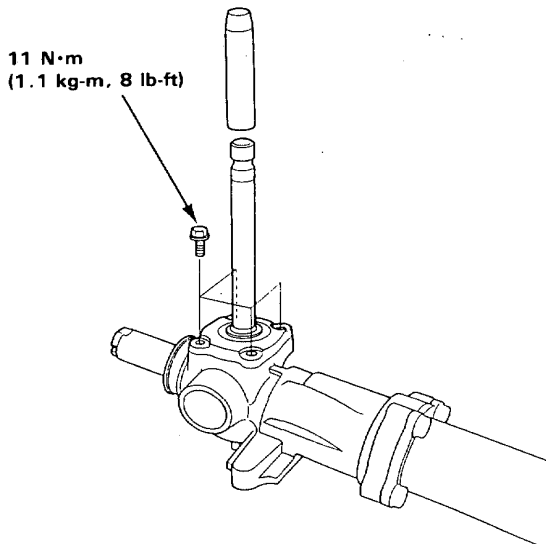

59. Install the O-ring on the rack guide screw.
60. Coat the rack guide with grease.
61. Install the rack guide, spring and rack guide screw on the gear housing.
62. Install the control valve unit (page 11-43).

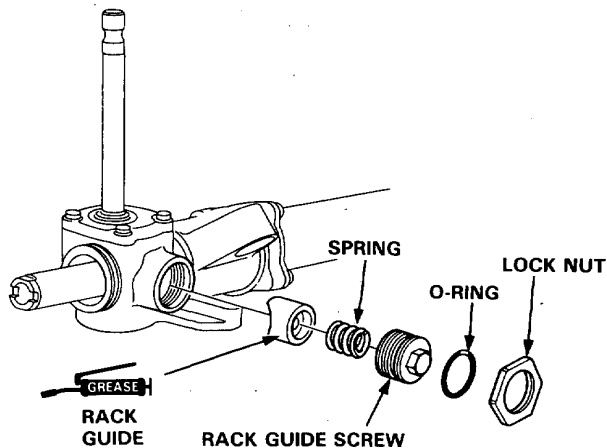


63. Tighten the rack guide screw until it compresses the spring and seats against the rack guide, then loosen it.
64. Retighten it to 4 N·m (0.4 kg-m, 2.9 lb-ft), back off about $35^\circ \pm \frac{1}{8}$ and install the locknut on the rack guide screw.
65. Tighten the locknut while holding the rack guide screw with the special tool.

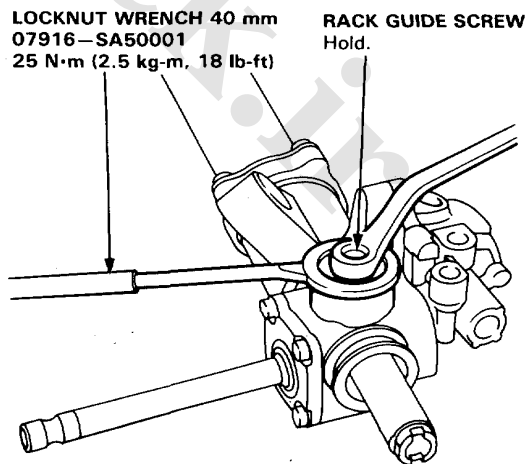




66. Install the transfer tube clip as shown.

NOTE: LH Drive shown, RH Drive is similar.

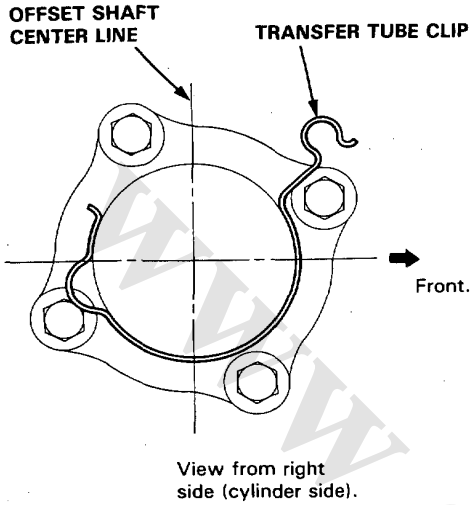


67. Install the band rubber and band; position the band as shown and tighten it.

NOTE: LH Drive shown, RH Drive is similar.

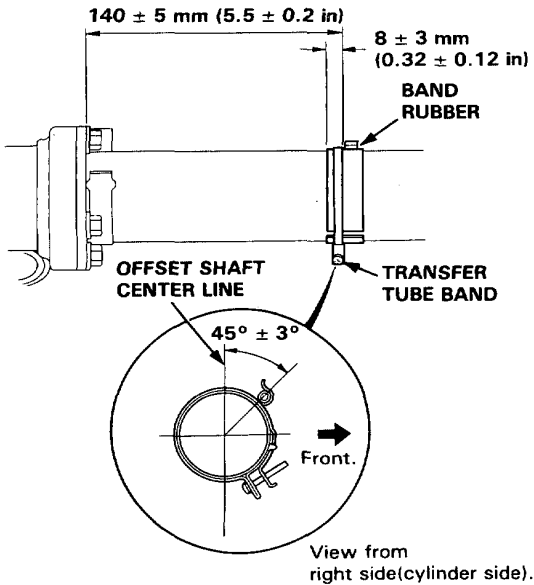

68. Install the new boot band on the boot.


NOTE: Coat the rack end and inside of the boot with the grease.

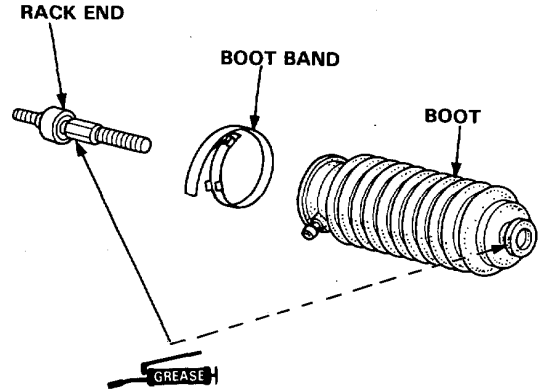

69. Screw each tie-rod into the rack while holding the lock washer so its tabs are in the slots in the rack end.

NOTE: Install the stopper washer with the chamfered side facing out.

70. Tighten the tie-rod securely, then bend the lock washer back against the flat on the flange as shown.

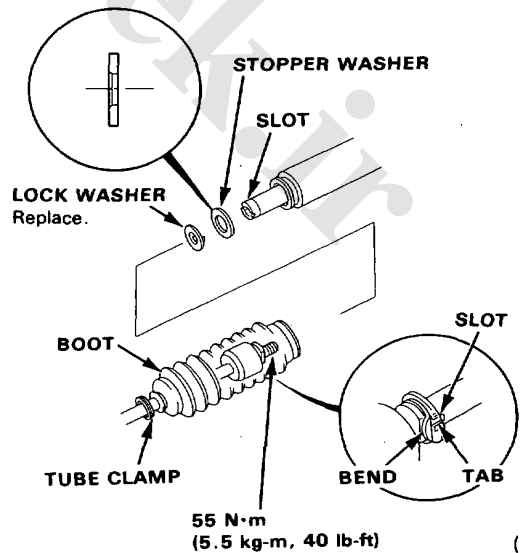

(cont'd)


Steering Gearbox

Overhaul (2WS) (cont'd)


71. Install the boots so that the angle of the offset shaft center line is as shown.

NOTE: LH Drive shown, RH Drive is similar.

<CYLINDER SIDE>

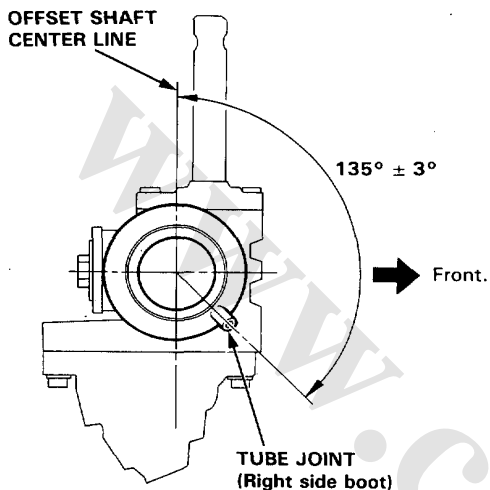


<GEAR HOUSING SIDE>

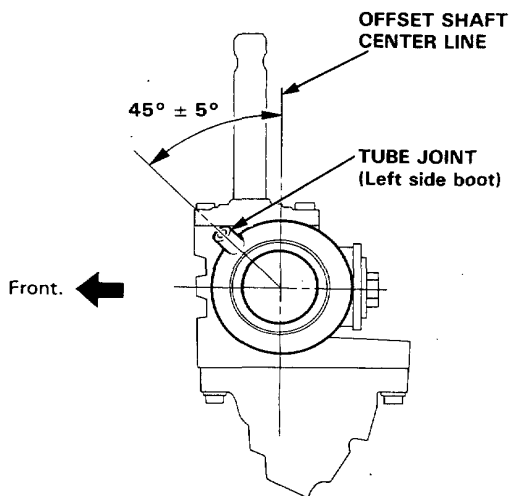


72. Install new boot bands on the boot and bend both sets of locking tabs.

73. Lightly tap on the doubled-over portions to reduce their height.

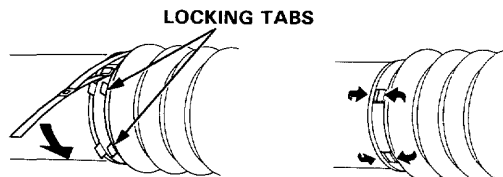


<CYLINDER SIDE>

NOTE: LH Drive shown, RH Drive is similar.

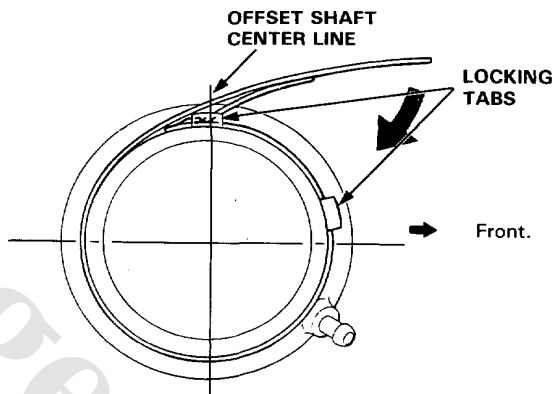

<GEAR HOUSING SIDE>

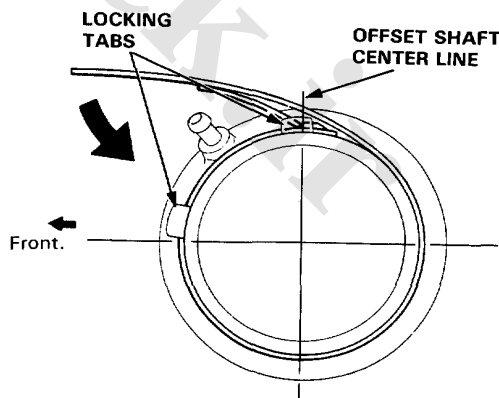


74. Install the air transfer tube.

75. After assembling, slide the rack right and left to be certain that the boots are not deformed or twisted.




Overhaul (4WS)


1. Remove the steering gearbox assembly (page 11-44).
2. Remove the control valve assembly (page 11-38).
3. Straighten the tab of the lock washer.
4. While holding the steering rack with a 22 mm wrench, remove the tie-rod with a 17 mm wrench.

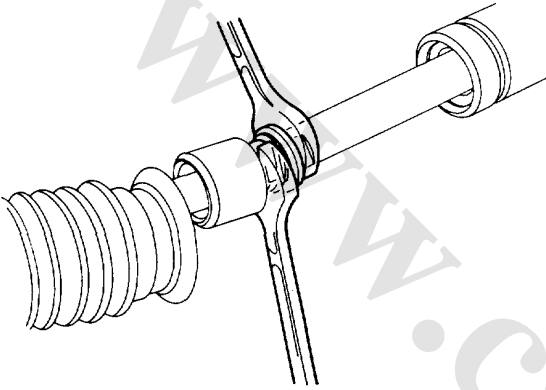


5. Slide the steering rack into the cylinder housing until the end is projected 62.2 mm (2.4 in.) from the rack bushing retainer.

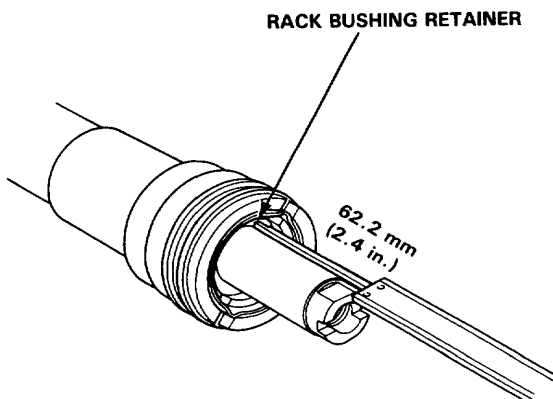

6. Loosen the rack screw lock nut, and turn off the guide screw.

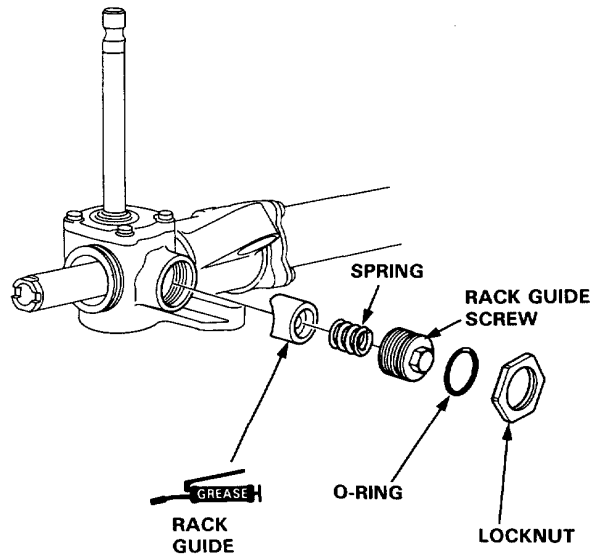

7. Remove the 28 mm internal snap ring from the bottom of the gear housing.

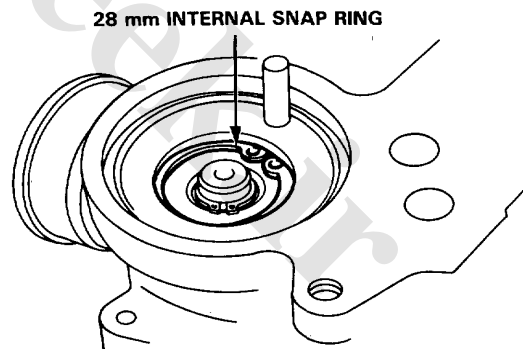


(cont'd)

Steering Gearbox

Overhaul (4WS) (cont'd)

123. Install the transfer tube clips as shown.
NOTE: LH Drive shown, RH Drive is similar.

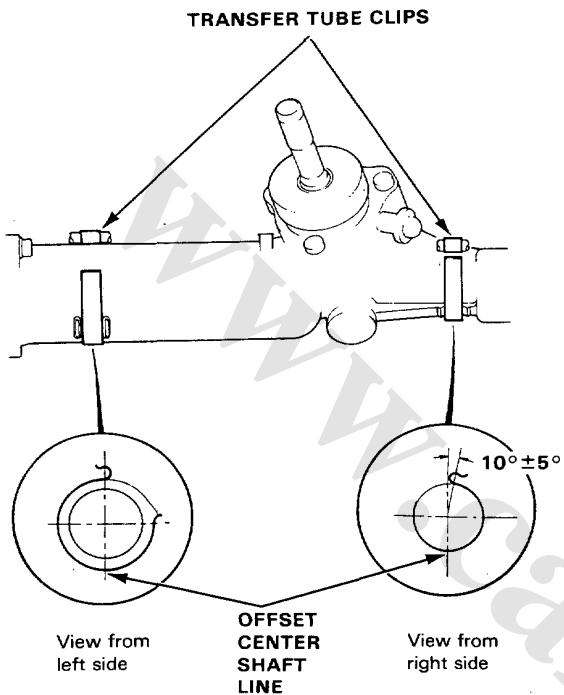


124. Install the air transfer tube.
125. After assembling, slide the rack right and left to be certain that the boots are not deformed or twisted.

Installation


CAUTION: If the rear steering gearbox and center shaft are removed, care must be taken to reinstall them correctly. Be sure to refer to page 11-90 and install properly.

1. Reinstall the gearbox in the reverse order of removal.

CAUTION: Be careful not to bend or damage the four power steering lines when installing the gearbox assembly.

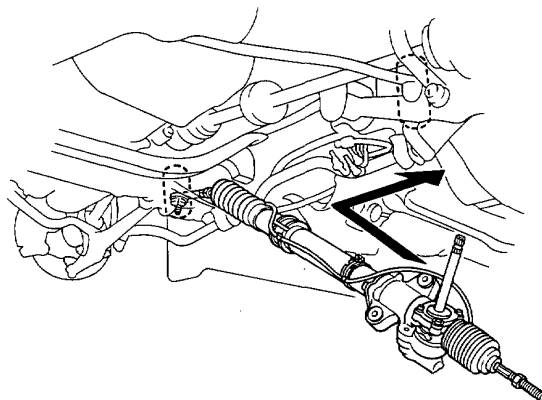


2. Tighten the stabilizer mounting bolts.

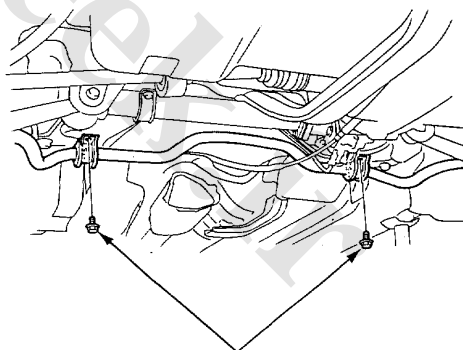

22 N·m
(2.2 kg·m, 16 lb-ft)



3. Tighten the gearbox mounting bolts.

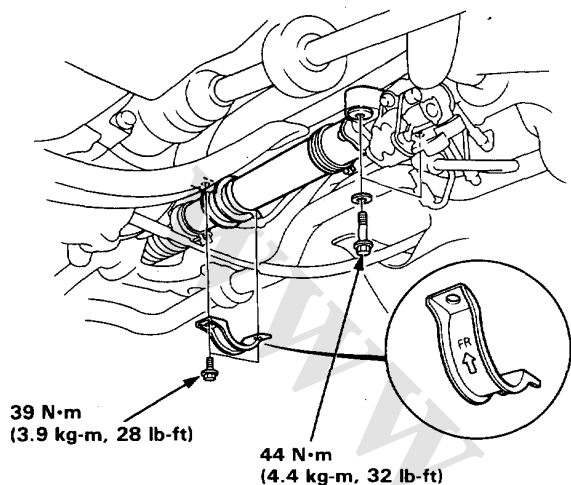


39 N·m
(3.9 kg·m, 28 lb-ft)

44 N·m
(4.4 kg·m, 32 lb-ft)

4. Install the steering joint on the steering gearbox pinion.

NOTE:


- Be sure that the lower bolt is securely in the groove in the steering gearbox pinion.
- Be sure the pinion shaft and the steering column shaft are aligned; the joint should slip on freely. If not, reposition the steering rack to correct the misalignment.

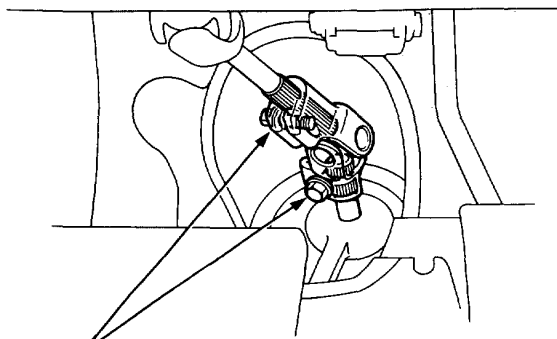

22 N·m
(2.2 kg·m, 16 lb-ft)

5. 4WS only

- Connect the joint and the driven pinion.

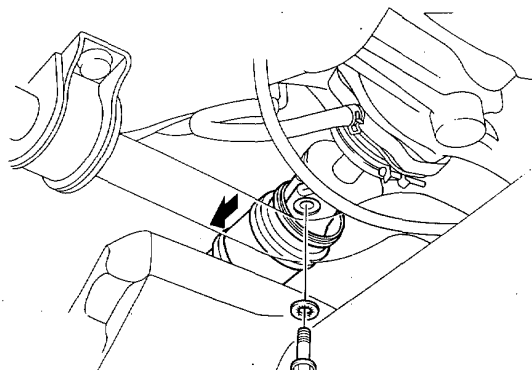


22 N·m
(2.2 kg·m, 16 lb-ft)

- Tighten the bolt at the driven pinion.
- Connect the joint guard and the joint guard cap.

6. Automatic transmission only

- Install the control cable to the clamp.

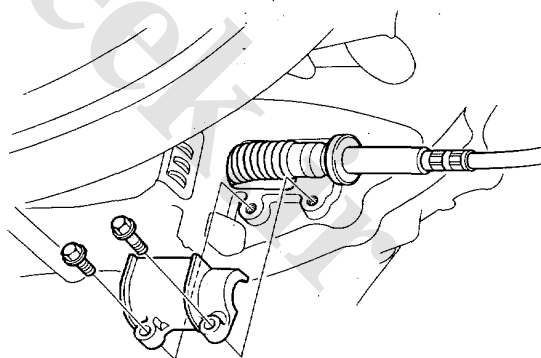


(cont'd)

Steering Gearbox

Installation (cont'd)


7. Connect the fluid lines to the control unit.

- A: From pump: 14 mm wrench
38 N·m (3.8 kg-m, 28 lb-ft)
- B: To oil cooler: 12 mm wrench
13 N·m (1.3 kg-m, 9 lb-ft)
- C: To reservoir: 17 mm wrench
29 N·m (2.9 kg-m, 20 lb-ft)
- D: To speed sensor: 12 mm wrench
13 N·m (1.3 kg-m, 9 lb-ft)

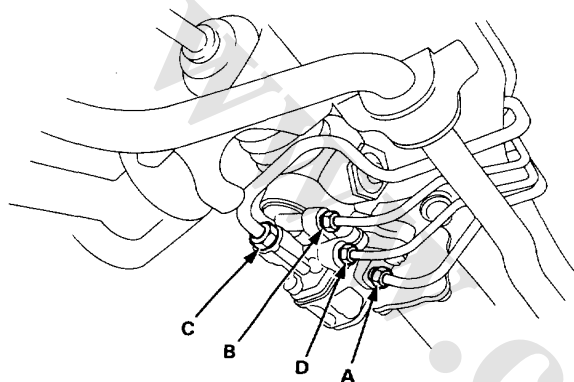


NOTE: Check the gearbox for leaks.

8. Install the splash guard.

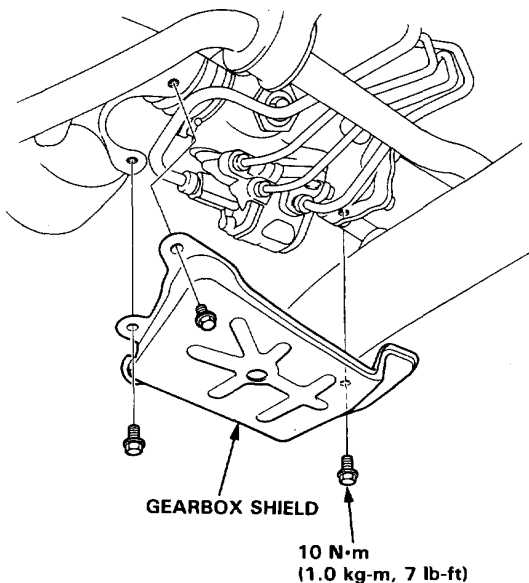


9. Install the header pipe with a new gasket, then tighten the new self-locking nuts and bolts.

CAUTION: Replace the exhaust gasket and self-locking nuts when you reinstall the pipe.

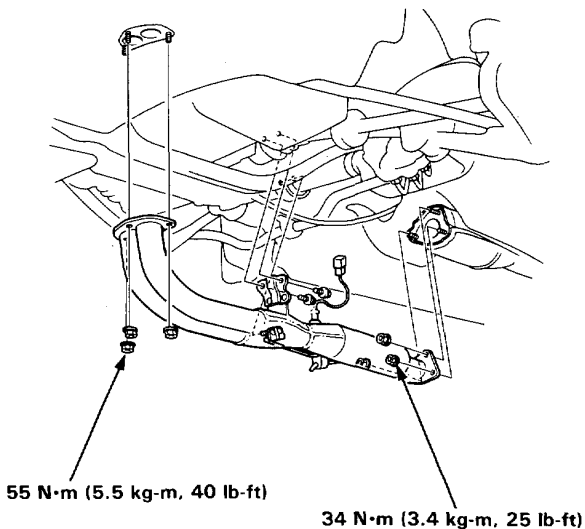


10. Install the header pipe bracket. Connect the 4P connector to the oxygen sensor.

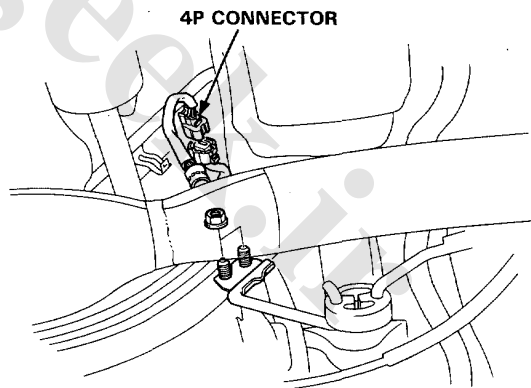



11. Reconnect the tie-rods to the steering knuckles, tighten the ball joint nut to the specified torque, and install new cotter pins.

FRONT TIE-ROD

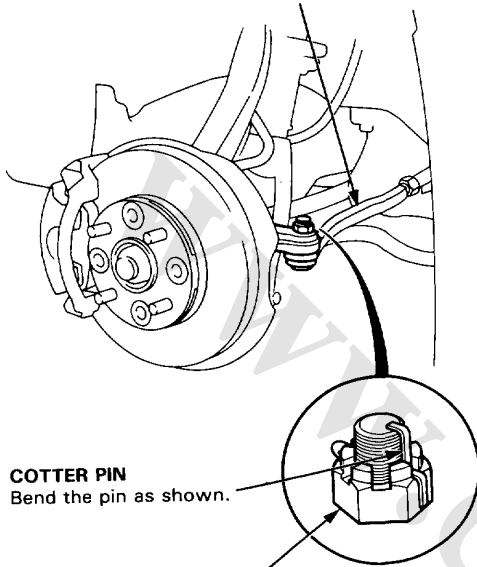

COTTER PIN

Bend the pin as shown.

44 N·m (4.4 kg-m, 32 lb-ft)


12. Fill the system:
- Fill the reservoir with new Honda Power Steering Fluid.
 - Start the engine and let it run at fast idle, then turn the steering wheel from lock-to-lock several times to bleed air from the system.
 - Check the fluid again, and add more if necessary.

Rear Steering Gearbox

Illustrated Index

CAUTION:


- Do not apply torque of more than 0.1 kg-m (0.72 lb-ft) to the offset shaft.
- Do not strike the stroke rod.
- Never loosen the offset shaft screw and lock nut screw.
- Do not remove the gearbox cover.
- Use the special tool "Rear Steering Gearbox Center Lock Pin" when removing the rear steering gearbox, and leave it intact except when the gearbox is inspected for function, etc.
- Also use the special tool "Rear Steering Gearbox Center Lock Pin" when removing the front or rear of the center shaft.
- If the rear steering gearbox and center shaft are removed, care must be taken to reinstall them correctly.
- When installing the rear steering gearbox and center shaft, take care not to apply directional strain and twisting force to the rubber section of the center bearing holder. Tighten the bolts in the following order.
 1. Loosely tighten the flange bolt ①.
 2. Tighten the washer bolts ② to the specified torque.
 3. Tighten the bolts ③ to the specified torque.
 4. Tighten the flange bolt ① to the specified torque. (Tighten from the right side of the car by using a box-wrench)
 5. Tighten the flange bolts ④ to the specified torque.

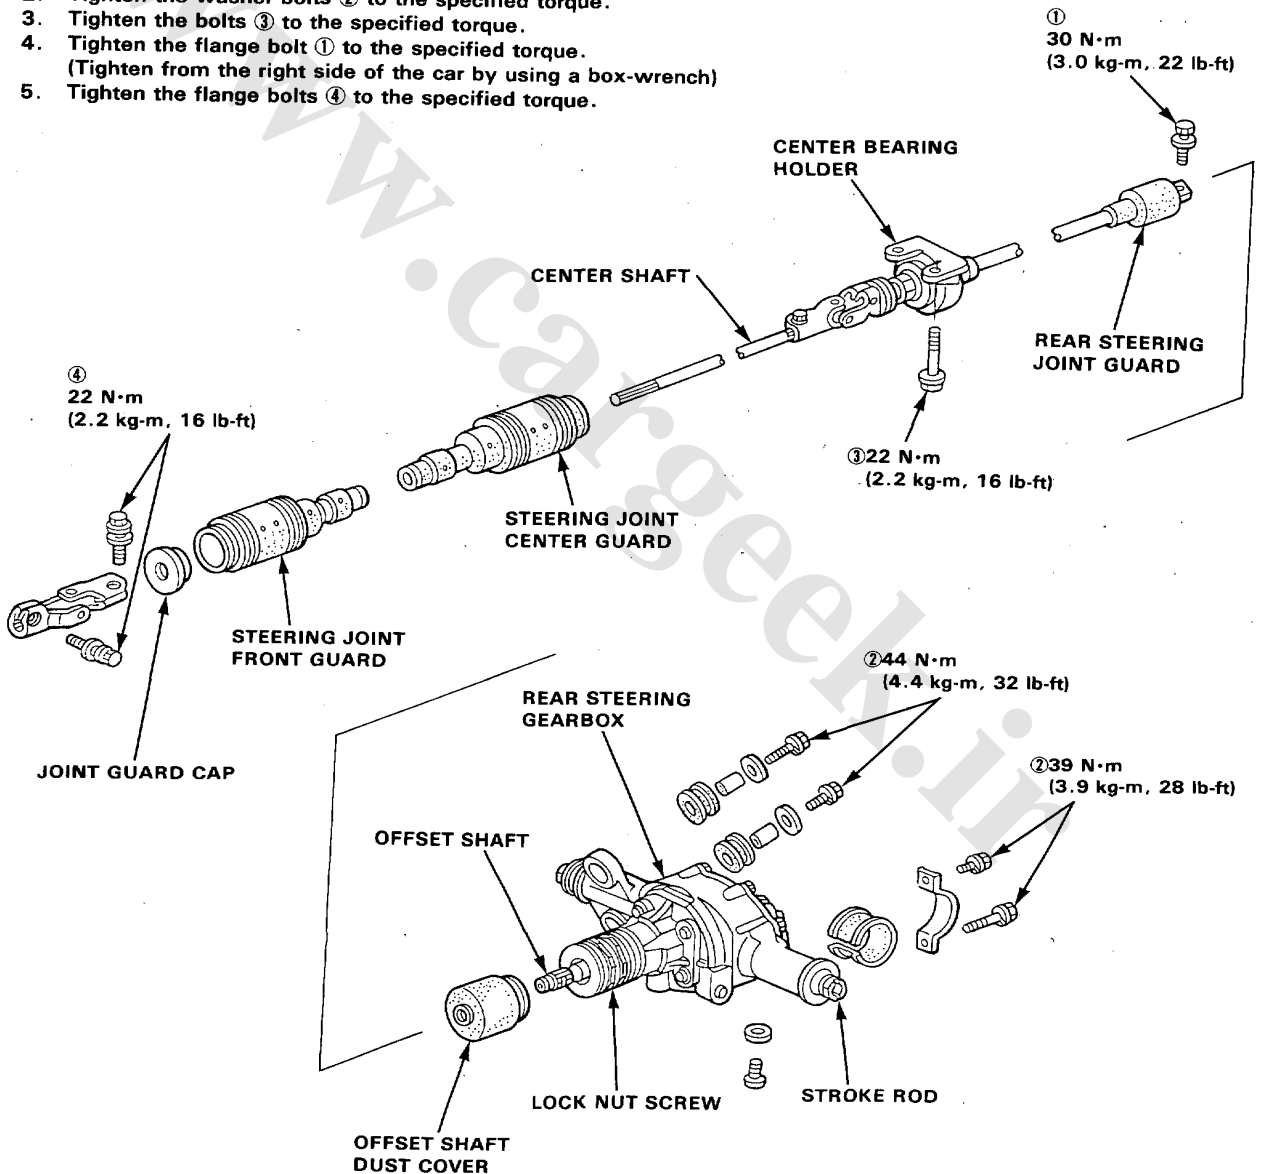


Rear Steering Gearbox

Neutral Positioning Off-car

1. Remove the cap bolt from the gearbox using a "TORX® BIT" T40.

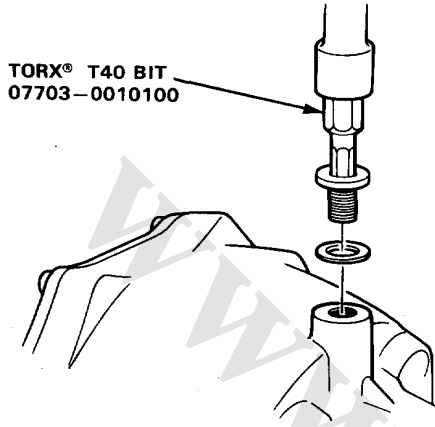

2. Position the offset shaft so the cutout faces the underside of the gearbox and the flat area faces the top.
3. Install the special tool in the gearbox.

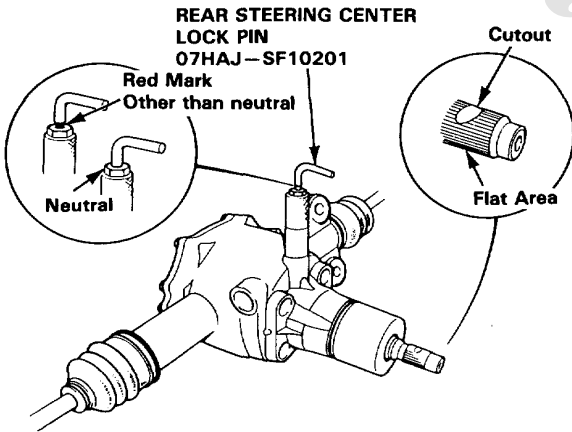

4. Turn the offset shaft by hand to be certain that the steering gear box is in the neutral position.

	Red Mark	Offset Shaft
Other than Neutral	Visible	Movable
Neutral	Not visible	Locked


5. Slide the tie-rod boots away from the housing to make sure the stroke rod is centered in the gearbox housing.




Stroke Rod Holders

NOTE: The stroke rod holders are used for the function inspection and rear tie-rod replacement.

1. Set the gearbox in the neutral position (page 11-92).
2. Loosen the tie-rod boot band, and slide the boot away from the gearbox housing.

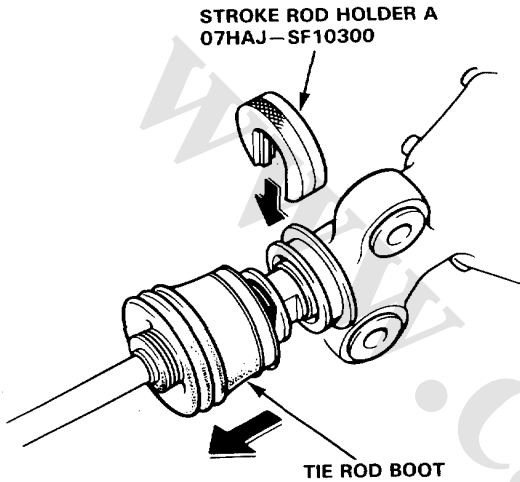


3. Slide the special tool between the tie-rod stopper washer and gearbox.
4. Screw the outer piece of the special tool onto the inner piece; align the cutouts.

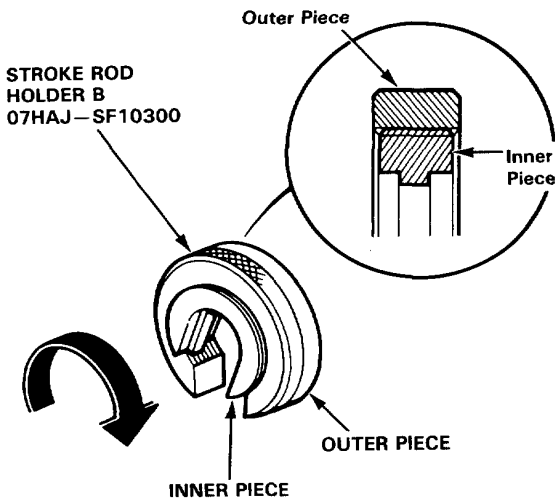

5. Insert the tool between the tie-rod stopper washer and gearbox.
6. Remove the rear steering center lock pin from the gearbox housing.
7. Tighten stroke rod holder B (Turn counterclockwise to tighten).

NOTE: There should be no play between the stroke rod holders and the gearbox housing.

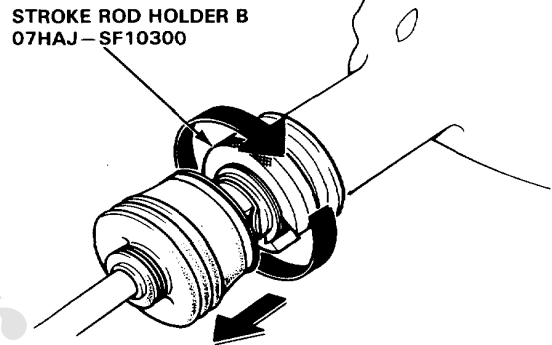


Rear Steering Gearbox

Function Inspection

Preload Inspection

1. Set the rear steering gearbox to neutral (page 11-92).
2. Remove the rear steering gearbox center lock pin.
3. Install the special tool in the offset shaft.

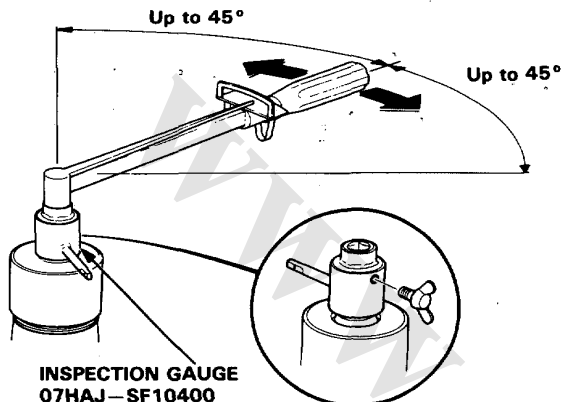

**INSPECTION GAUGE
07HAJ-SF10400**

4. Install a torque wrench in the special tool, and check the starting torque when rotating the wrench in the clockwise and counterclockwise directions.


Starting Torque: 1 N·m (0.1 kg·m, 0.7 lb-ft) or less

NOTE:

- Check the torque after several rotations.
- Do not apply a torque of 5 N·m (0.5 kg·m, 4 lb-ft) or more to the offset shaft.

Free-play Inspection

1. Set the rear steering gearbox to neutral (page 11-92).
2. Remove the rear steering gearbox center lockpin and install the stroke rod holders (page 11-93).
3. Install the special tool in the offset shaft.

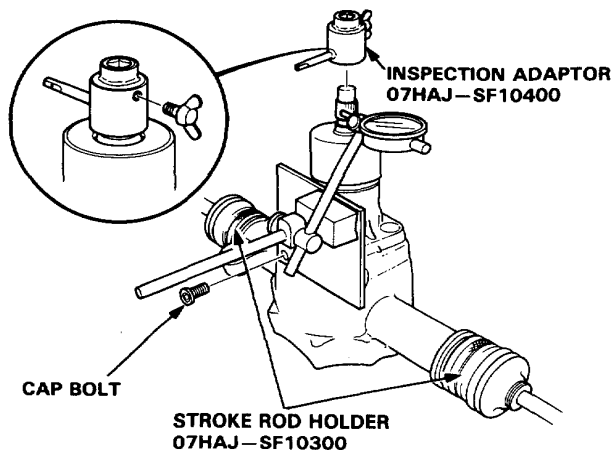

**INSPECTION ADAPTOR
07HAJ-SF10400**

CAP BOLT


**STROKE ROD HOLDER
07HAJ-SF10300**

3. Install the dial indicator using a cap bolt.

NOTE: Set the dial indicator on the flat end of the special tool:

4. Install the torque wrench in the special tool, then read the dial gauge when applying a torque of 10 N·m (1.0 kg·m, 7 lb-ft) in the clockwise and counterclockwise directions, respectively.

The total deflection range when applying a torque of 10 N·m (1.0 kg·m, 7 lb-ft) in both directions should be 5.0 mm (0.20 in) or less.

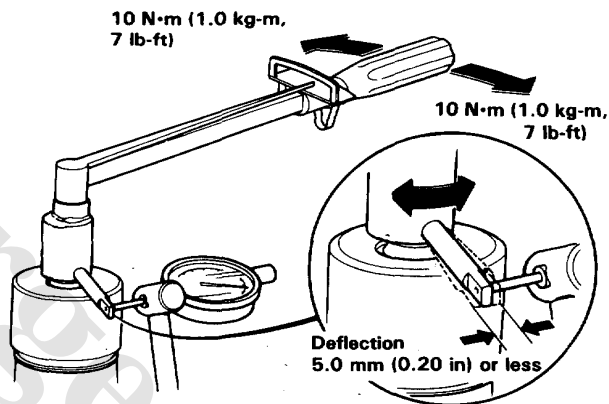

Example: With a deflection of 2.50 mm (0.10 in) in the clockwise direction and 2.40 mm (0.09 in) in the counterclockwise direction, the gearbox is OK.

NOTE: If the total deflection is more than 5.0 mm (0.20 in) replace the rear steering gearbox assembly.

5. Remove the special tools, then screw in the cap bolt and sealing washer into place.

Tightening Torque: 22 N·m (2.2 kg·m, 16 lb-ft)




Tie-Rod Replacement

CAUTION: Never strike the stroke rod.

1. Set the gearbox in Neutral (page 11-92).
2. Loosen the tie-rod boot band, and remove the dust seal.
3. Install the stroke rod holders (page 11-93).


NOTE: Be sure to use the stroke rod holders so as not to rotate or move the stroke rod in an axial direction.

4. Straighten the tab of the lock washer.

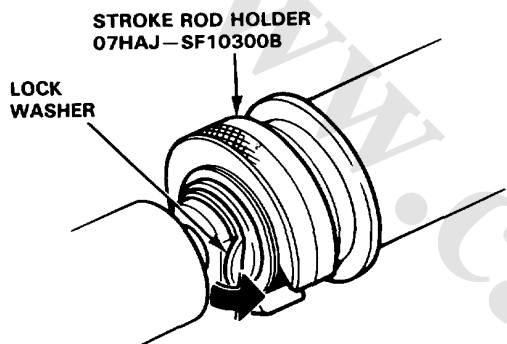


5. Remove the holder.
6. While holding the stroke rod with a 21 mm wrench, remove the tie-rod with a 17 mm wrench.

CAUTION: Be sure to hold the stroke rod securely to prevent it from being turned with the tie-rod. Never turn the stroke rod.

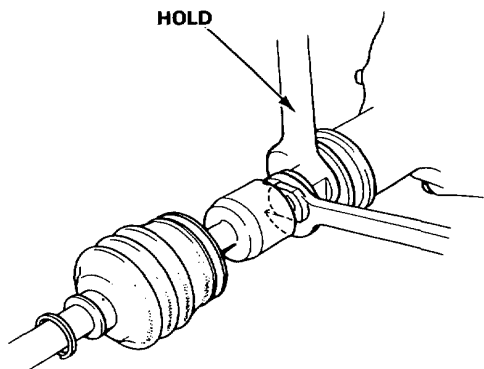


7. Install the tie-rod stopper washer, tie-rod lock washer and rack end on the stroke rod.

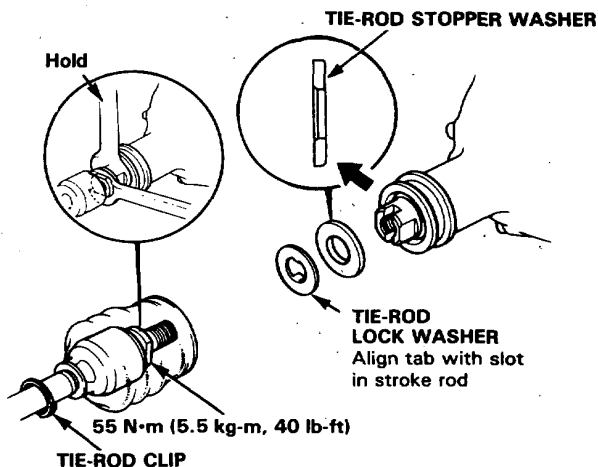

8. Hold the stroke rod with the special tool (page 11-93).
9. Bend the lock washer against the flat on the flange.
10. Remove the stroke rod holder.
11. Reinstall the tie rod dust seal.
12. Install the boot bands.


NOTE: After tightening the boot bands, check that the boots are not twisted or distorted.

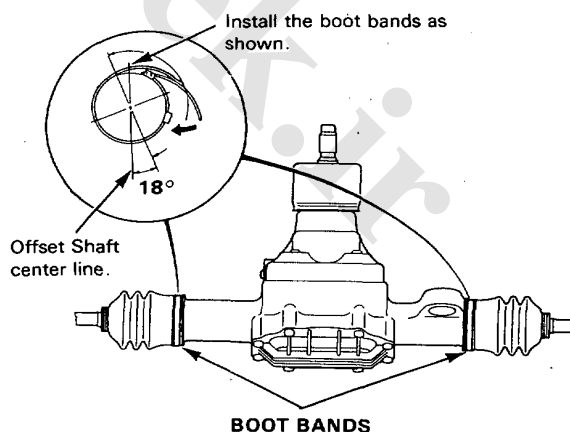


Rear Steering Gearbox

Off-set Shaft Dust Cover Replacement

1. Remove the off-set shaft dust cover.

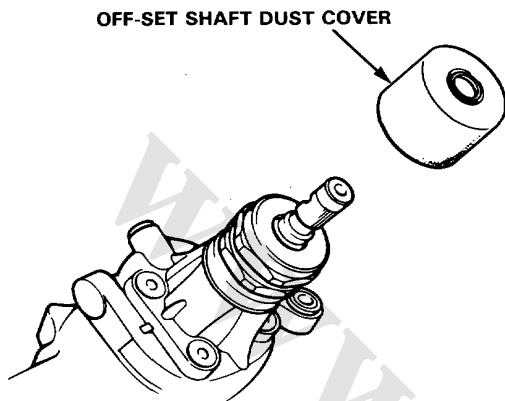

2. Grease the special tool and fit it over the off-set shaft.
3. Pack the sealing lip of the dust cover with grease.

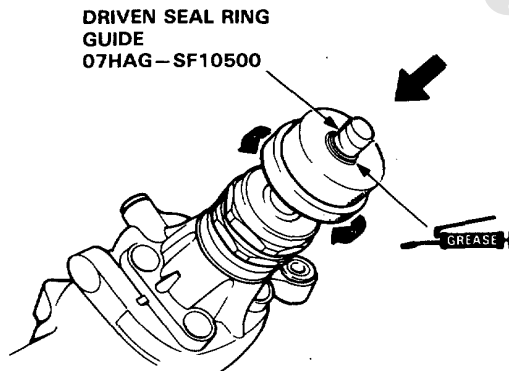

4. Invert the inner end of the dust seal, then place the end over the lock nut.
5. Remove the special tool.

Special Tools

Index

Wheel Alignment

Two Wheel Steering-2WS

Four Wheel Steering-4WS

On-Car Checks

Bearing End Play

Run out

Front Suspension

Torque specification

Knuckle/Hub

Index

Removal

Bearing Removal

Lower Ball Joint

Replacement

Ball Joint Boot

Replacement

Upper Arm/Stabiliser/Radius/

Rod /Lower Arm

Index/Inspection

Upper Arm Ball Joint

Inspection

Front Damper

Removal

Disassembly/Inspection

Reassembly

Installation

Rear Suspension

Torque specification

Knuckle/Hub

Index

Removal

Bearing Removal

Lower Ball Joint

Replacement -4WS

Ball Joint Boot

Replacement -4WS

Upper Arm/Stabiliser/

Trailing Arm/Lower Arm

Index/Inspection

4WS

2WS

Brushing Replacement

Rear Damper

Removal


Disassembly/Inspection

Reassembly

Installation

Special Tools

Special Tools				
Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07HGK-0010200	Wheel Alignment Gauge Attachment	1	} 4WS Only
②	07703-0010100	TORX® T40 BIT	1	
③	07HAJ-SF10201	Rear Steering Center Lock Pin	1	
④	07HGJ-0010000	Toe Inspection Gauge Set	1	
⑤	07941-6920003	Ball Joint Remover	1	
⑥	07GAF-SD40100	Hub Assembly Pin	1	
⑦	07965-6340301	Hub Dis/assembly Base	2	
⑧	07749-0010000	Driver	1	
⑨	07965-6920201	Hub Dis/Assembly Base	1	
⑩-1	07HAF-SF10110	Ball Joint Remover Base	1	
⑩-2	07HAF-SF10120	Ball Joint Installer Base	1	
⑩-3	07HAF-SF10130	Ball Joint Remover/Installer	1	
⑪	07GAG-SD40700	Ball Joint Boot Clip Installation Guide	1	
⑫	07GAE-SE00101	Spring Compressor	1	
⑬	07GAF-SD40330	Ball Joint Remover/Installer	1	
⑭	07947-SB00100	Oil Seal Driver	1	
⑮	07GAF-SE00200	Hub Assembly Guide Attachment	1	

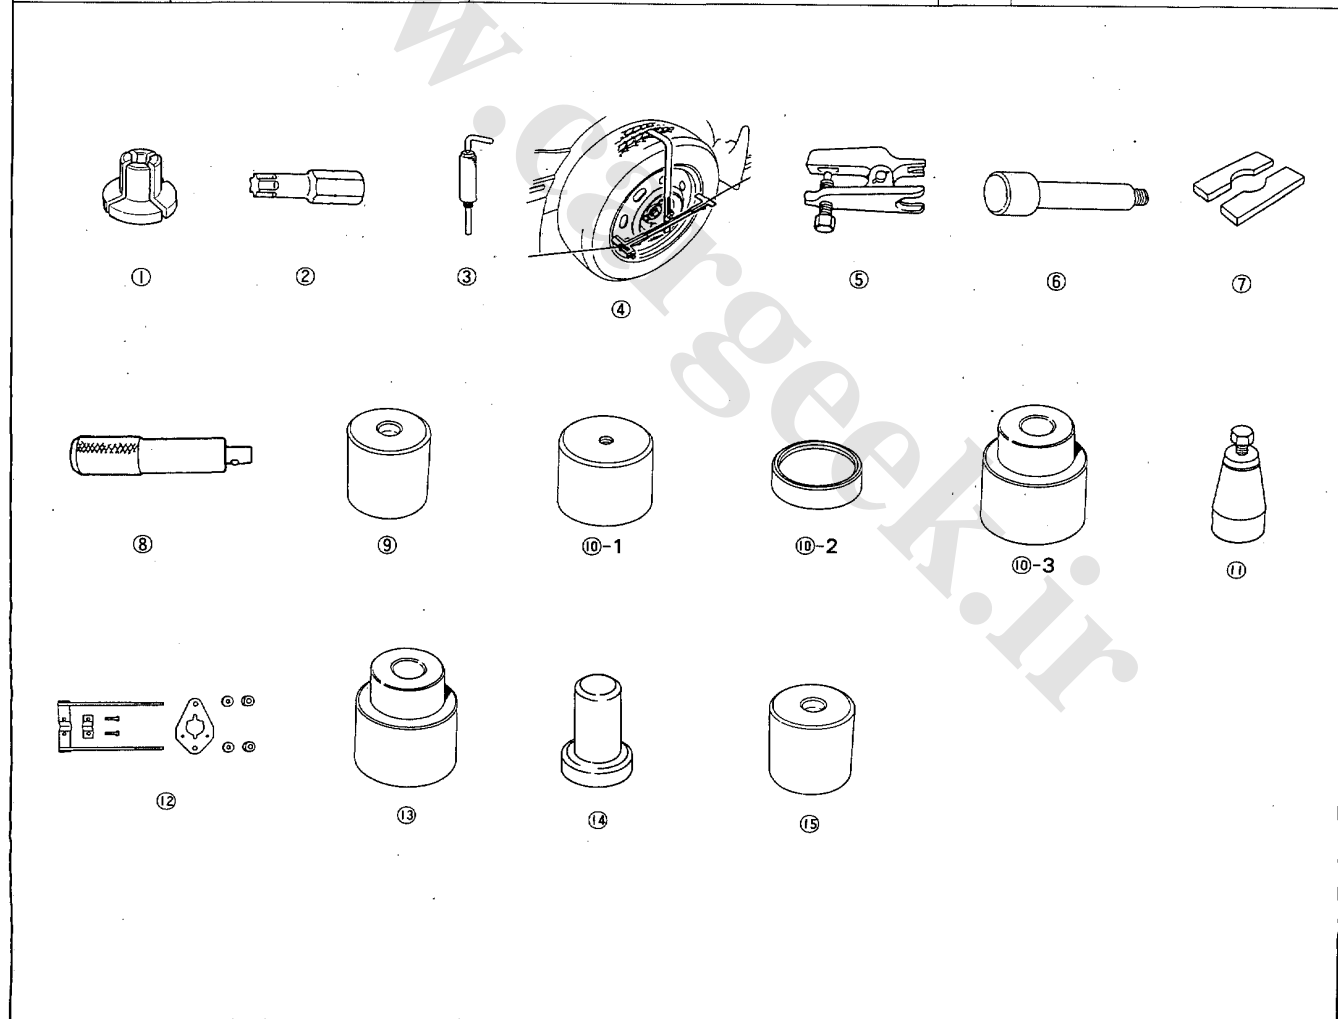




Component Location


Index

WARNING The front and rear dampers contain nitrogen gas and oil under pressure. The pressure must be relieved before disposal to prevent explosion and possible injury when scrapping.

Front Suspension:

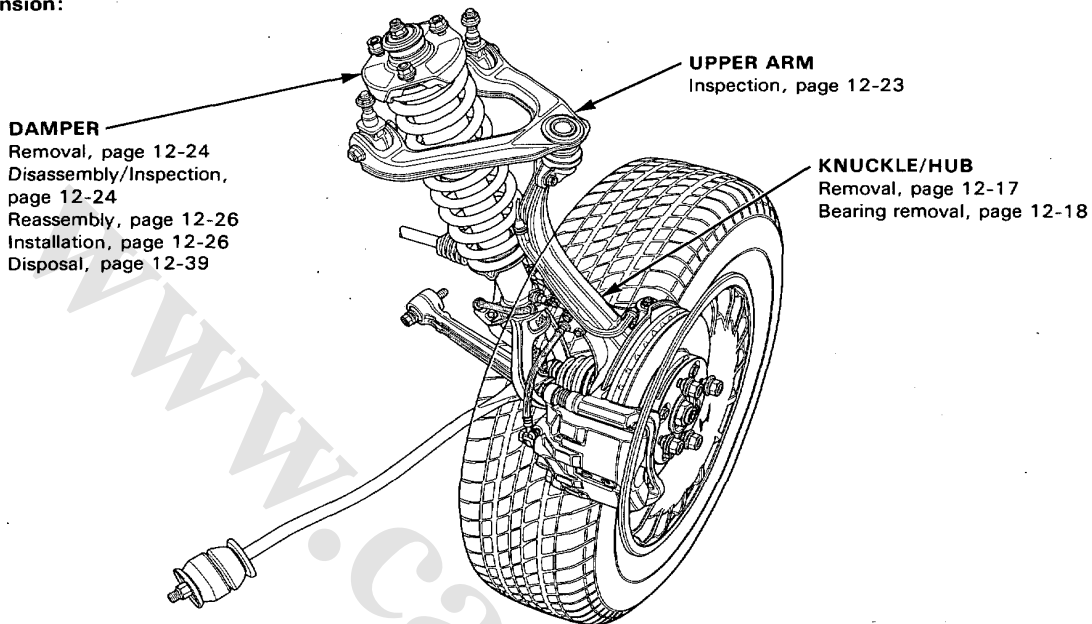

Rear Suspension:

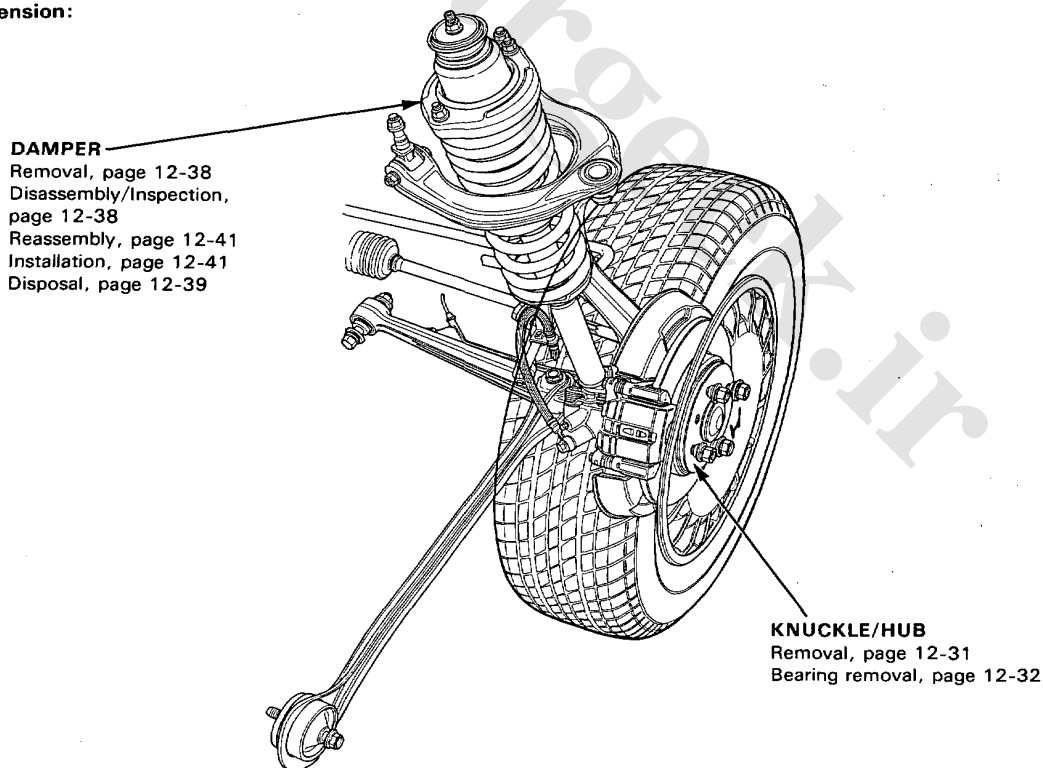

Wheel Alignment

Two Wheel Steering-2WS

Preparation

1. Check the tire pressure.
2. Check the steering wheel angle. If significantly off center, it may be necessary to remove the steering wheel and reposition it on the splines. Turn the steering wheel to the straight-ahead position.
3. Alignment should be checked/adjusted in one continuous procedure: caster, front camber, rear camber, rear toe, front toe and re-check.

Front Caster:


1. Remove the center cap or wheel cap. Install the Wheel Alignment Gauge Attachments on the wheels.

NOTE: Make sure the wheel hubs are clean and rust-free before installing the wheel alignment attachments.

2. Install a camber/caster gauge on the Wheel Alignment Gauge Attachment and apply the front brake. Turn the wheel 20° inward.
3. Turn the adjust screw so that the bubble in the caster gauge is at 0°.
4. Turn the wheel 20° outward and read the caster on the gauge with the bubble at the center of the gauge.

Caster Angle: 3°00' ± 1°


WHEEL ALIGNMENT
GAUGE ATTACHMENT
07HGK-0010200

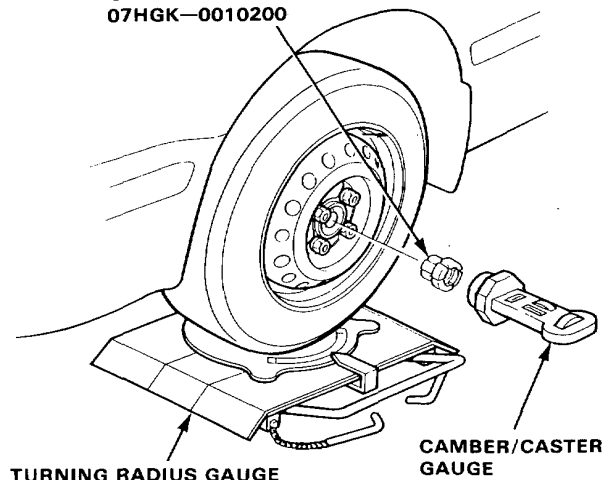

5. If adjustment is required, record the caster reading, then go to step 6. If adjustment is not required, proceed to step 11.

NOTE: Caster angle can be adjusted by increasing/decreasing the number of the adjusting shims. Remove and install the radius rod each time the caster angle is adjusted.

6. Raise the front end of the car and place safety stands in the proper locations.
7. Remove the self-locking nut on the end of the radius rod.
8. Remove the radius rod attaching bolts at the lower arm, and radius rod.
9. Adjust the caster angle by increasing/decreasing the adjusting shims.
 - One adjusting shim changes the caster angle by 25' and the caster angle can be adjusted by 50' maximum.
 - One adjusting shim is 3.2 mm (0.126 in) in thickness.

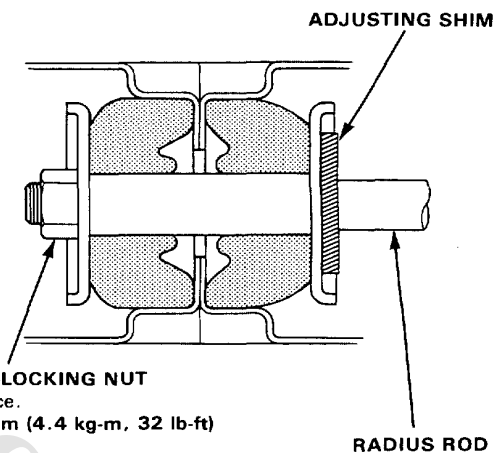

SELF-LOCKING NUT
Replace.
44 N·m (4.4 kg-m, 32 lb-ft)

NOTE:

- Do not use more than two adjusting shims.
- After the adjustment, tighten the self-locking nut to the specified torque.

10. Recheck the caster angle.




Front Camber:

11. Return the steering wheel to the straight-ahead position.
12. Read the front camber on the gauge with the bubble at the center of the gauge.

Front Camber Angle: $0^{\circ}00' \pm 1^{\circ}$

13. If out of specification, check for bent or damaged suspension components.

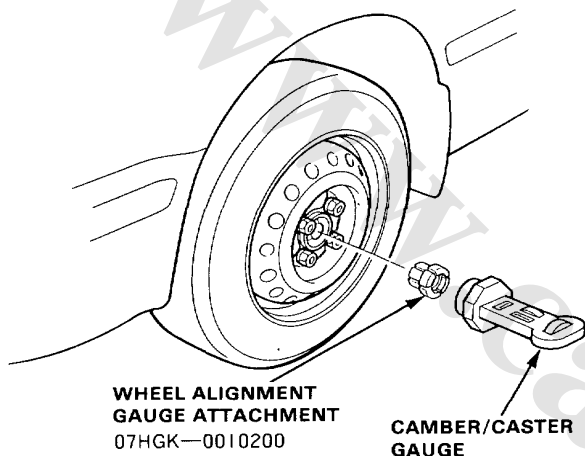


Rear Camber:

14. Read the rear camber on the gauge with the bubble at the center of the gauge.

Rear Camber: $-0^{\circ}30' \pm 1^{\circ}$

15. If out of specification, check for bent or damaged suspension components.

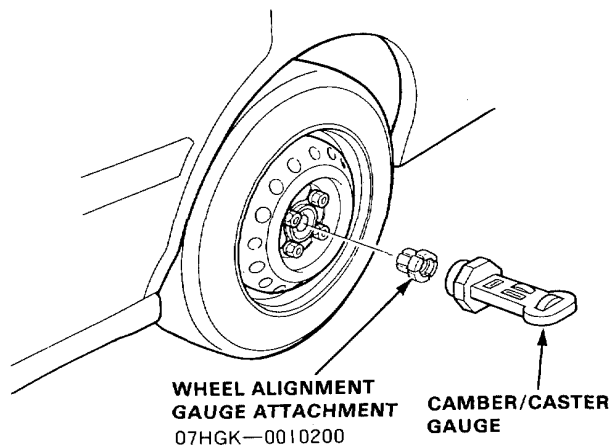

Toe:

16. Check the rear toe-in.

Right Rear: 1 mm

Left Rear: 1 mm


Total: $2 \pm 2 \text{ mm } (0.08 \pm 0.08 \text{ in})$

NOTE: Left and right toe should be the same.

— If adjustment is required, go to step 17.

— If no adjustment is required, proceed to step 20.

17. Hold the adjusting bolt on the rear lower arm A and loosen the locknut.
18. Adjust the rear toe by turning the adjusting bolt until toe is correct.
19. Install a new locknut and tighten while holding the adjusting bolt.

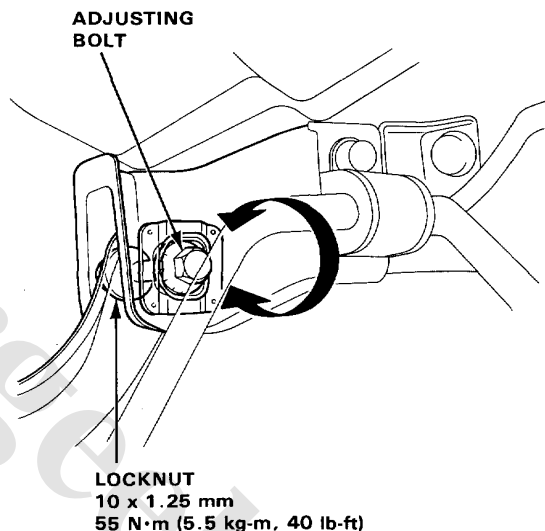

(cont'd)

Wheel Alignment

Two Wheel Steering-2WS (cont'd)

20. Check the front toe-in:

Right Front: 0 mm

Left Front: 0 mm


Total: 0 ± 2 mm (0 ± 0.08 in)

- If adjustment is required, go to step 21.
- If no adjustment is required, proceed to step 23.

21. Loosen the tie-rod locknut and turn the tie-rod until toe-in is correct.

22. After adjusting, tighten the tie-rod locknuts.

NOTE: Reposition the tie-rod boots if twisted or displaced after adjustment has been made.

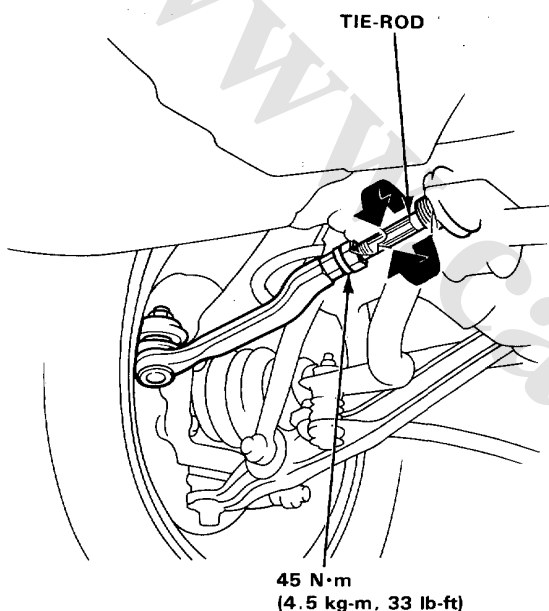

23. Recheck the camber. If camber still as specified alignment is finished.

Front Camber Angle: $0^{\circ}00' \pm 1^{\circ}$


Rear Camber Angle: $-0^{\circ}30' \pm 1^{\circ}$

Four Wheel Steering-4WS

Using Toe Inspection Gauge:


Preparation

1. Check the tire pressure.
2. Remove the cap bolt from the rear steering gearbox, install the center lock pin in the rear steering gearbox and determine the neutral position.

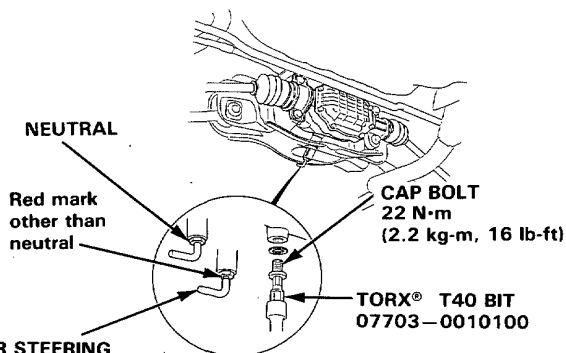

REAR STEERING CENTER LOCK PIN 07HAJ-SF10201

3. Check the steering wheel angle.
 - If it is more than 13 mm (0.512 in) (4°) off center, adjust it as follows:

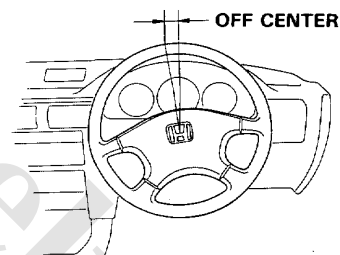

OFF CENTER

- 1) Remove the center lock pin from the rear steering gearbox.
- 2) Loosen the steering wheel nut. (Do not remove the steering wheel this time.)
- 3) Install the center lock pin in the rear steering gearbox. Turn the steering wheel right or left slightly until the center lock pin seats fully. The red mark on the pin should not be visible. Do not turn the steering wheel quickly when the center lock pin is seated and do not force past the locking point after the pin is set, or the gearbox may be damaged.
- 4) Remove the steering wheel and reset it in the position as close as to center.
- 5) Remove the center lock pin from the rear steering gearbox.



- 6) Tighten the steering wheel with a new steering wheel nut.

TORQUE: 50 N·m (5.0 kg-m, 36 lb-ft)

NOTE: On steering wheel nut removal/installation, be sure to remove the center lock pin from the rear steering gearbox to prevent damage to the gearbox.


4. Place the car on level surface.
5. Release the parking brake.
6. Move the car 1 m (3.28 ft.) forward and take off the slack in the bushing.
7. Turn the steering wheel to the straight-ahead position and hold it.
8. Alignment should be checked/adjusted in one continuous procedure: caster, front camber, rear camber, rear toe, front toe and re-check.

Front Caster:

1. Remove the center cap or wheel cap. Install the Wheel Alignment Gauge Attachments on the wheels.
NOTE: Make sure the wheel hubs are clean and rust-free before installing the wheel alignment attachments.
2. Install a camber/caster gauge on the Wheel Alignment Gauge Attachment and apply the front brake. Turn the wheel 20° inward.
3. Turn the adjust screw so that the bubble in the caster gauge is at 0°
4. Turn the wheel 20° outward and read the caster on the gauge with the bubble at the center of the gauge.

Caster Angle: 3°00' ± 1°

**WHEEL ALIGNMENT
GAUGE ATTACHMENT
07HGK-0010200**

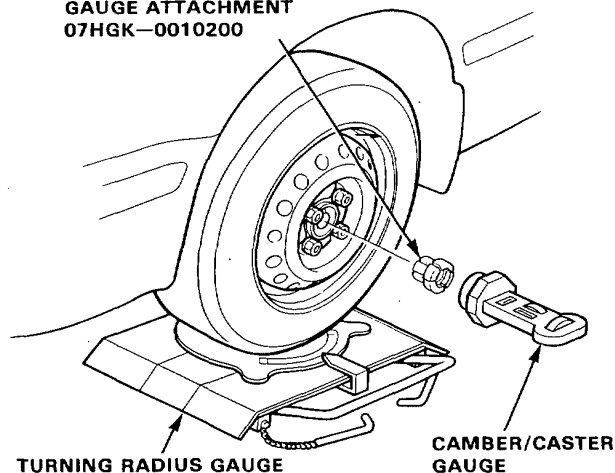


5. If adjustment is required, record the caster reading, then go to step 6. If adjustment is not required, proceed to step 11.

NOTE: Caster angle can be adjusted by increasing/decreasing the number of the adjusting shims. Remove and install the radius rod each time the caster angle is adjusted.

6. Raise the front end of the car and place safety stands in the proper locations.
7. Remove the self-locking nut on the end of the radius rod.
8. Remove the radius rod attaching bolts at the lower arm, and radius rod.
9. Adjust the caster angle by increasing/decreasing the adjusting shims.
 - One adjusting shim changes the caster angle by 25' and the caster angle can be adjusted by 50' maximum.
 - One adjusting shim is 3.2 mm (0.126 in) in thickness.

NOTE:

- Do not use more than two adjusting shims.
- After the adjustment, tighten the self-locking nut to the specified torque.

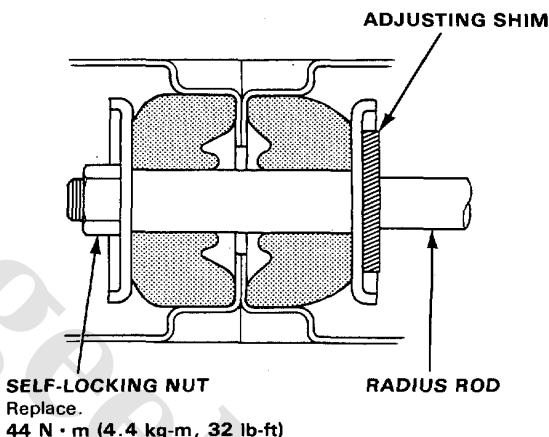

10. Recheck the caster angle.

(cont'd)

Wheel Alignment


Four Wheel Steering-4WS (cont'd)

Front Camber:

11. Return the steering wheel to the straight-ahead position.
12. Read the front camber on the gauge with the bubble at the center of the gauge.

Front Camber Angle: $0^{\circ}00' \pm 1^{\circ}$

13. If out of specification, check for bent or damaged suspension components.

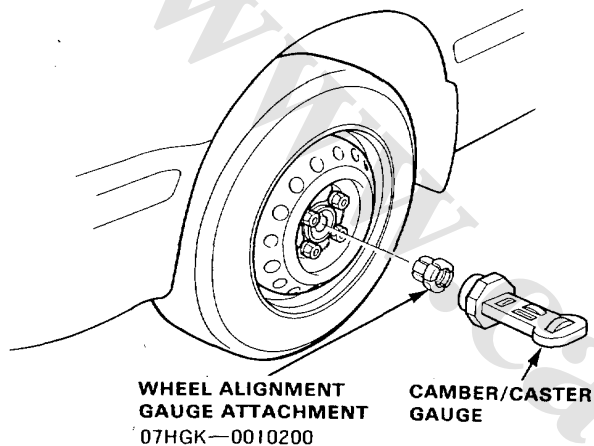


Rear Camber:

14. Read the rear camber on the gauge with the bubble at the center of the gauge.

Rear Camber: $-0^{\circ}20' \pm 1^{\circ}$


15. If out of specification, check for bent or damaged suspension components.

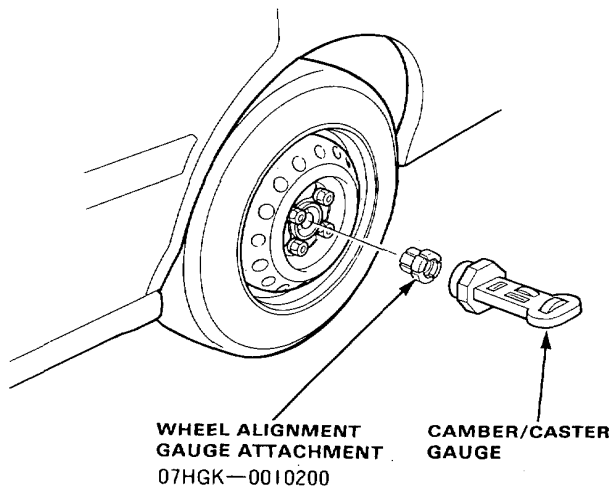


Toe:

16. Install the toe inspection gauge set attachment on each wheel and turn the wheel diameter adjusting screws and tire diameter adjusting screw right or left so that the attachment fits on the wheel disc securely.

- Be sure that the tread compensation screw is on the front of the front wheel disc and on the rear of the rear wheel disc.

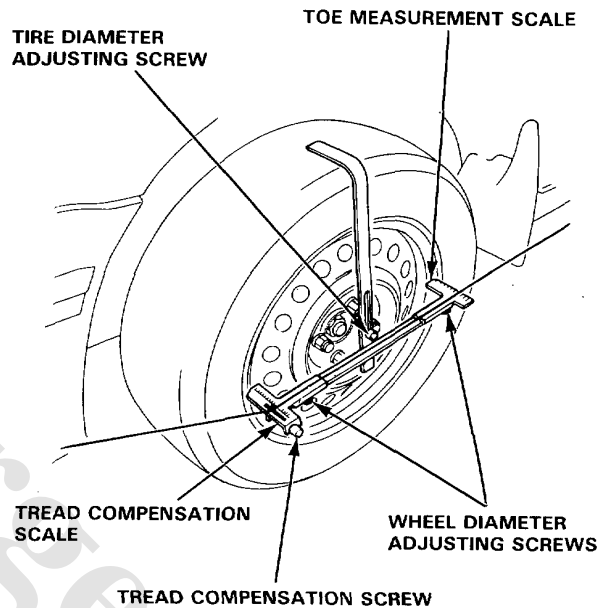


- Align the center of the gauge with the center of the wheel.

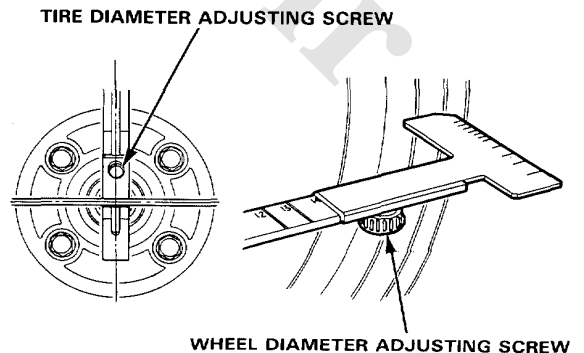




- Set the toe inspection gauge on each wheel so that it makes right angle to the wheel.

NOTE: Be sure that the toe gauge does not interfere with the balance weight of the wheel.

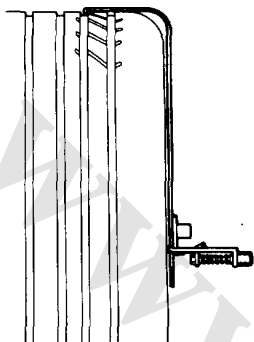



17. Set the tread compensation scale on the front wheel at 52.5 and on the rear wheel at 50.

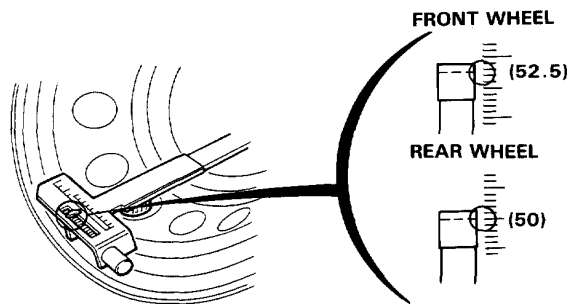

18. Attach the string to the bumper and secure with the hook A.


19. Route the string around the car and secure with the hook B. Be sure that there is no slack in the string.

NOTE: Be sure that the string does not contact the exhaust pipe.

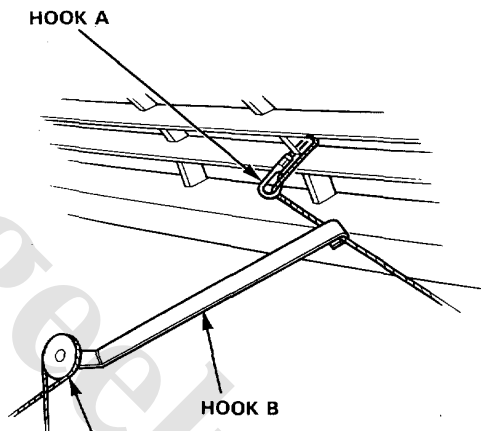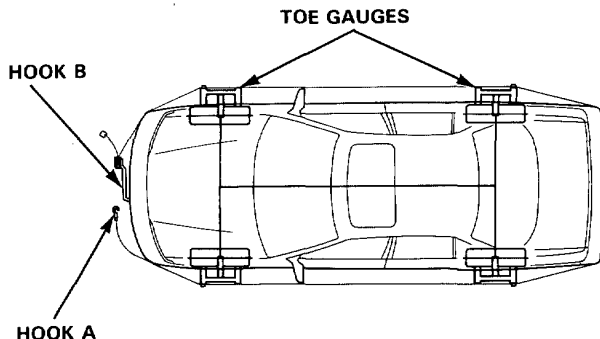

20. Hook the string on each tread compensation scale.

- Keep a slight clearance between the string and toe gauge.
- Be sure that the toe gauge is parallel with the ground.

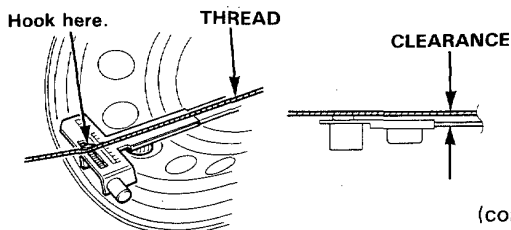


(cont'd)

Wheel Alignment

Four Wheel Steering (4WS) (cont'd)

21. Read the tread compensation scale and measurement scale and calculate their difference.

- Measurement varies according to the angle you are looking.
Read all the measurements at the same height.
- Check the side of the string that is closer to a division of the tread compensation scale, and read the measurement scale at the same side of the string.
- Toe of all wheels is zero if the measurements of the tread compensation scale and measurement scale on each wheel are the same.

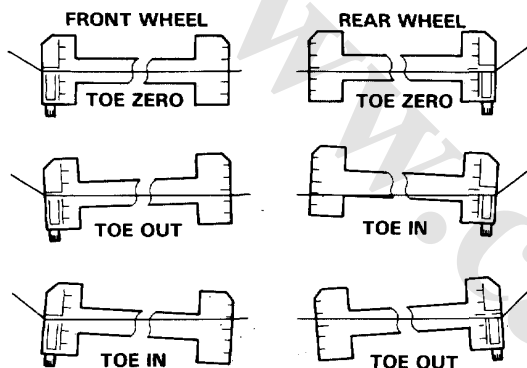


22. Adjust so that the front toe and rear toe are 0 when the front camber is 0° and rear camber $-0^\circ 20'$.

23. After the front and rear toe are adjusted to zero, loosen the right and left rear wheel tie-rods 60° and set the rear toe-in to 2 mm (0.079 in).

24. After adjusting, tighten the tie-rod locknuts.

NOTE: Reposition the tie-rod boots if twisted or displaced after adjustment has been made.

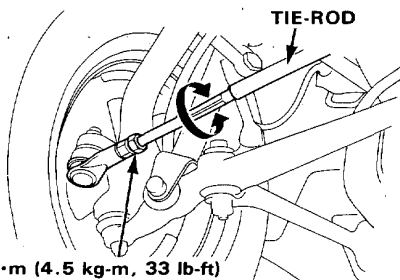

25. Recheck the camber. If camber still as specified alignment is finished.

Front Camber Angle: $0^\circ 00' \pm 1^\circ$
Rear Camber Angle: $-0^\circ 20' \pm 1^\circ$

Using Full-floating Turn Table:

Preparation

NOTE: Alignment equipment must be capable of 4 wheel alignment and must use full-floating turntables at all four wheels.

1. Check the tire pressure.
2. Jack up the car and temporarily place on safety stands.
3. Install the 4WS Center Lock Pin (see page 12-6). Install lock pins in the full floating turntables.
4. Lower the car onto the turntables. Remove the turntable lock pins and "settle" the suspension by pushing the car up and down several times. Remove the 4WS Center Lock Pin.
5. Check the steering wheel angle. If significantly off center, it may be necessary to remove the steering wheel and reposition it on the splines (page 12-6). Turn the steering wheel to the straight-ahead position.

NOTE: If the wheel removal is necessary, loosen the nut, then temporarily reinstall the 4WS Center Lock Pin before repositioning the wheel.

6. Alignment should be checked/adjusted in one continuous procedure: caster, front camber, rear camber, rear toe, front toe and re-check.

Front Caster:


1. Remove the center cap or wheel cap. Install the Wheel Alignment Gauge Attachments on the Wheels.

NOTE: Make sure the wheel hubs are clean and rust-free before installing the wheel alignment attachment.

2. Install a camber/caster gauge on the Wheel Alignment Gauge Attachment and apply the front brake. Turn the wheel 20° inward.
3. Turn the adjust screw so that the bubble in the caster gauge is at 0° .
4. Turn the wheel 20° outward and read the caster on the gauge with the bubble at the center of the gauge.

Caster Angle: $3^\circ 00' \pm 1^\circ$

WHEEL ALIGNMENT
GAUGE ATTACHMENT
07HGK-0010200

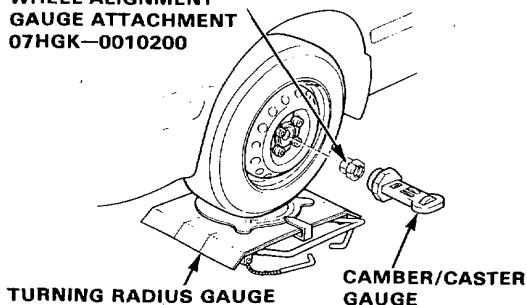




- If adjustment is required, record the caster reading, then go to step 6. If adjustment is not required, proceed to step 10.

NOTE: Caster angle can be adjusted by increasing/decreasing the number of the adjusting shims. Remove and install the radius rod each time the caster angle is adjusted.

- Raise the front end of the car and place safety stands in the proper locations.
- Remove the self-locking nut on the end of the radius rod.
- Remove the radius rod attaching bolts at the lower arm, and radius rod.
- Adjust the caster angle by increasing/decreasing the adjusting shims.
 - One adjusting shim changes the caster angle by 25' and the caster angle can be adjusted by 50' maximum.
 - One adjusting shim is 3.2 mm (0.126 in) in thickness.

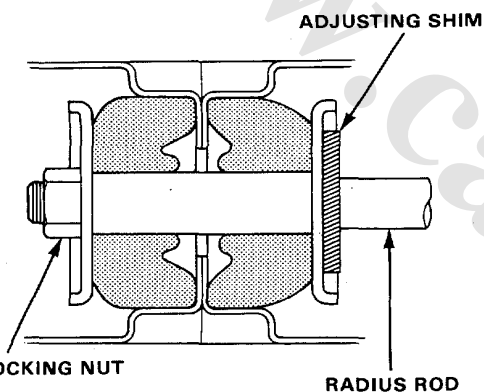

SELF-LOCKING NUT
Replace.
44 N·m (4.4 kg-m, 32 lb-ft)

NOTE:

- Do not use more than two adjusting shims.
- After the adjustment, tighten the self-locking nut to the specified torque.


- Recheck the caster angle.

Front Camber:

- Return the steering wheel to the straight-ahead position.
- Read the front camber on the gauge with the bubble at the center of the gauge.

Front Camber Angle: 0°00' ± 1°

- If out of specification, check for bent or damaged suspension components.

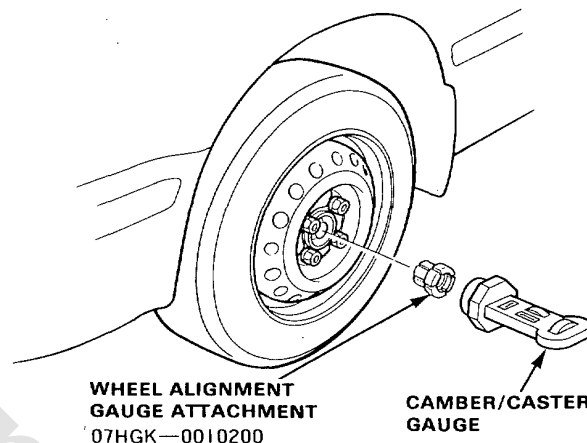


Rear Camber:

- Read the rear camber on the gauge with the bubble at the center of the gauge.

Rear Camber: -0°20' ± 1°

- If out of specification, check for bent or damaged suspension components.

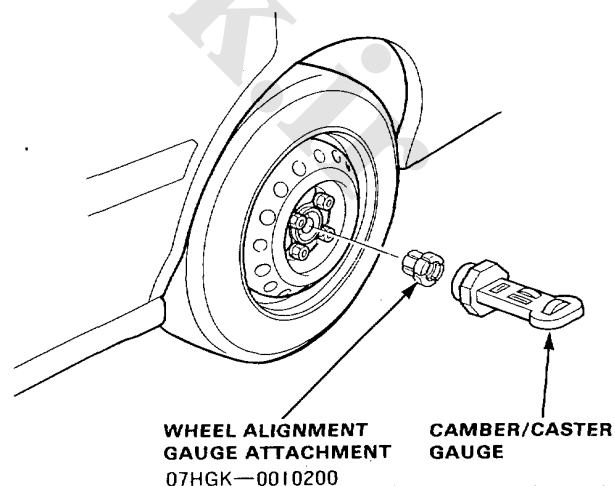

(cont'd)

Wheel Alignment

Four Wheel Steering-4WS (cont'd)

Toe:

16. Check the rear toe-in.

Right Rear : 1.5 mm

Left Rear : 1.5 mm

Total : 3 ± 2 mm (0.12 ± 0.08 in)


NOTE: Left and right toe should be the same.

- If adjustment is required, go to step 17.
- If no adjustment is required, proceed to step 19.

17. Loosen the tie-rod locknuts.

18. After adjusting, tighten the tie-rod locknuts.

NOTE: Reposition the tie-rod boots if twisted or displaced after adjustment has been made.

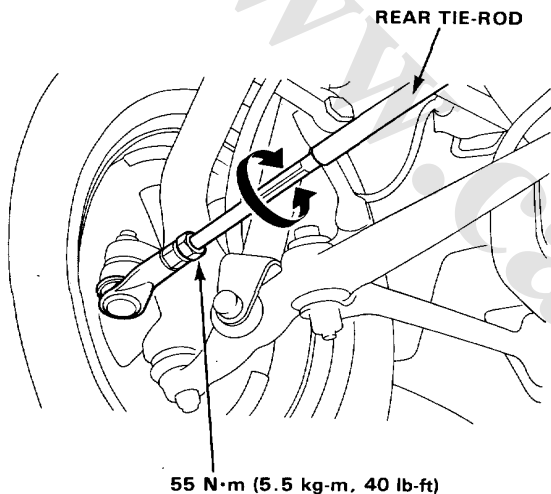

19. Check the front toe-in:

Right Front : 0 mm

Left Front : 0 mm

Total : 0 ± 2 mm (0 ± 0.08 in)


NOTE: Left and right toe should be the same.

- If adjustment is required, go to step 20.
- If no adjustment is required, proceed to step 21.

20. Loosen the tie-rod locknut and turn the tie-rod until toe-in is correct.

21. After adjusting, tighten the tie-rod locknuts.

NOTE: Reposition the tie-rod boots if twisted or displaced after adjustment has been made.

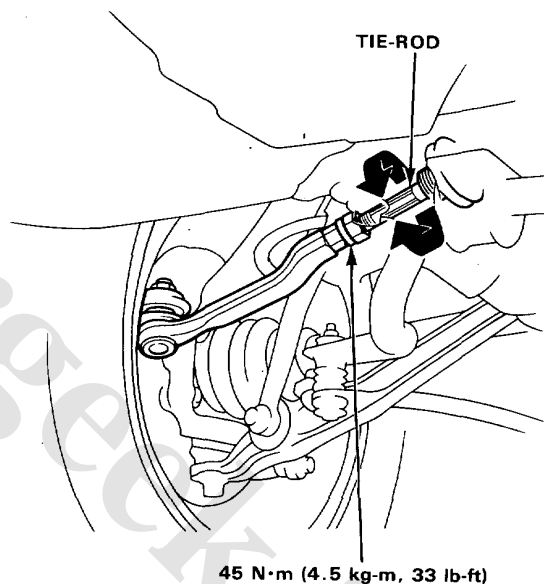

22. Recheck the camber. If camber still as specified alignment is finished.


Front Camber Angle: $0^{\circ}00' \pm 1^{\circ}$

Rear Camber Angle: $-0^{\circ}20' \pm 1^{\circ}$




Bearing End Play

Front Wheel End Play
Standard: 0—0.05 mm

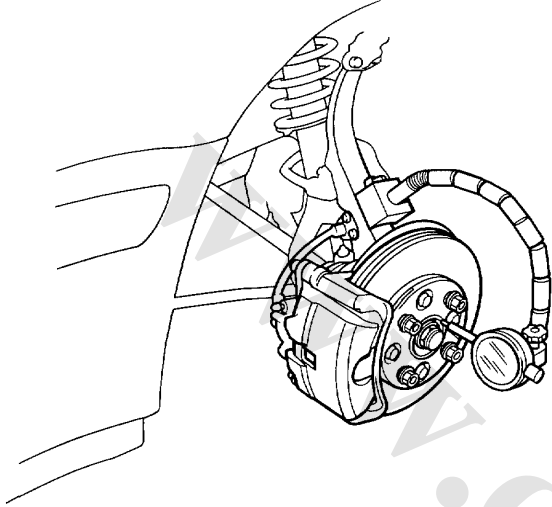

Rear Wheel End Play
Standard: 0—0.05 mm

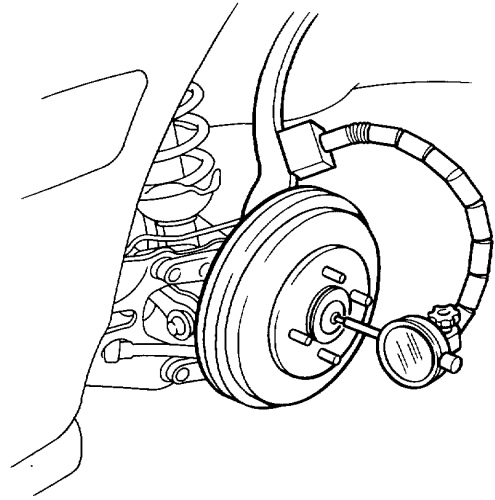


Wheel Measurements

Run out

Front and Rear Wheel Axial Run out

Standard:


- Steel Wheel: 0—1.0 mm
- Aluminum Wheel: 0—0.7 mm

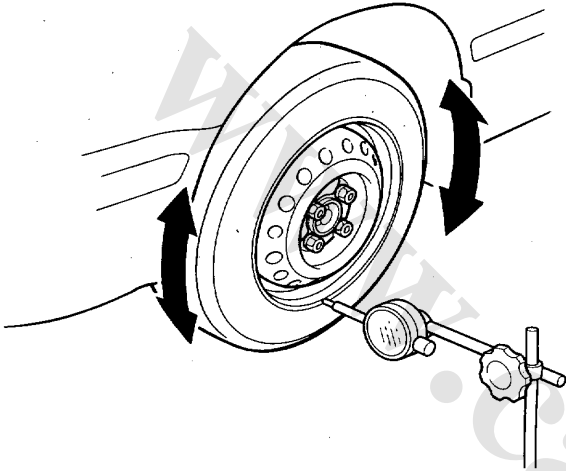

Front and Rear Wheel Axial Run out

Standard:

- Steel Wheel: 0—1.0 mm
- Aluminum Wheel: 0—0.7 mm

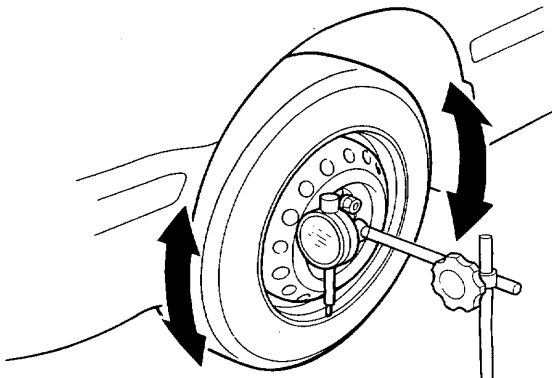




Front Suspension

Torque Specifications

CAUTION:

- Replace the self-locking nuts after removal.
 - Replace the self-locking bolts if you can easily thread a non-self-locking nut past their nylon locking inserts.
(If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).
- The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

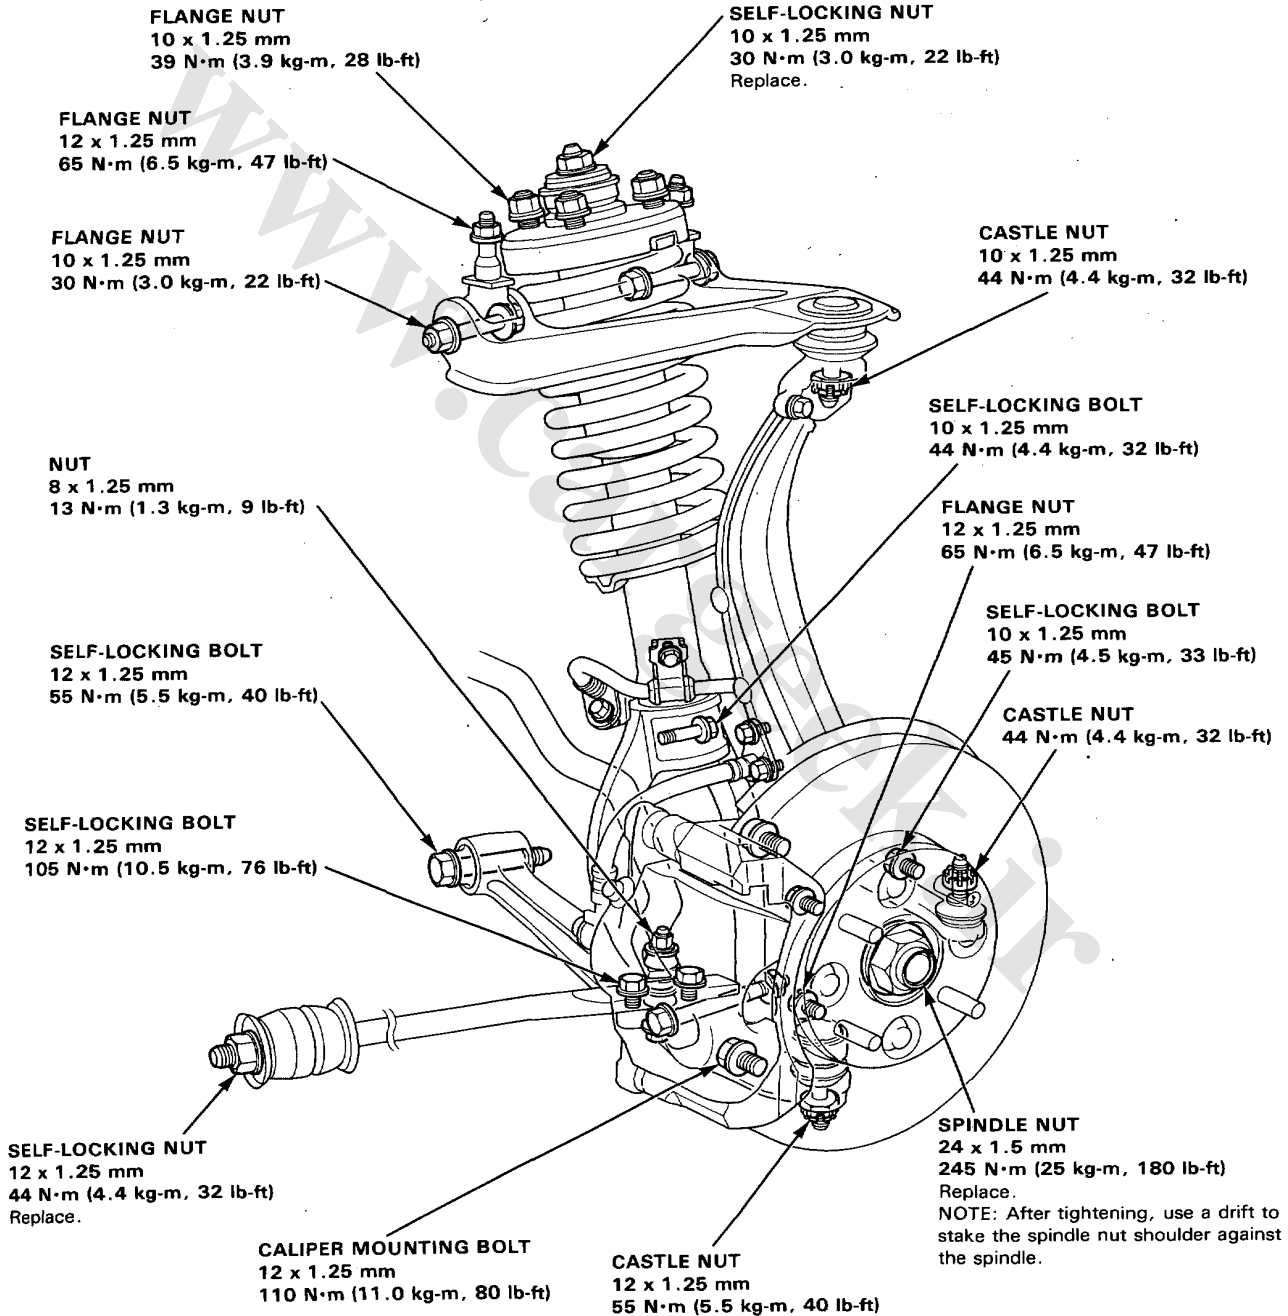


Front Suspension

Knuckle/Hub

NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheel.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal. Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.

CAUTION: Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.

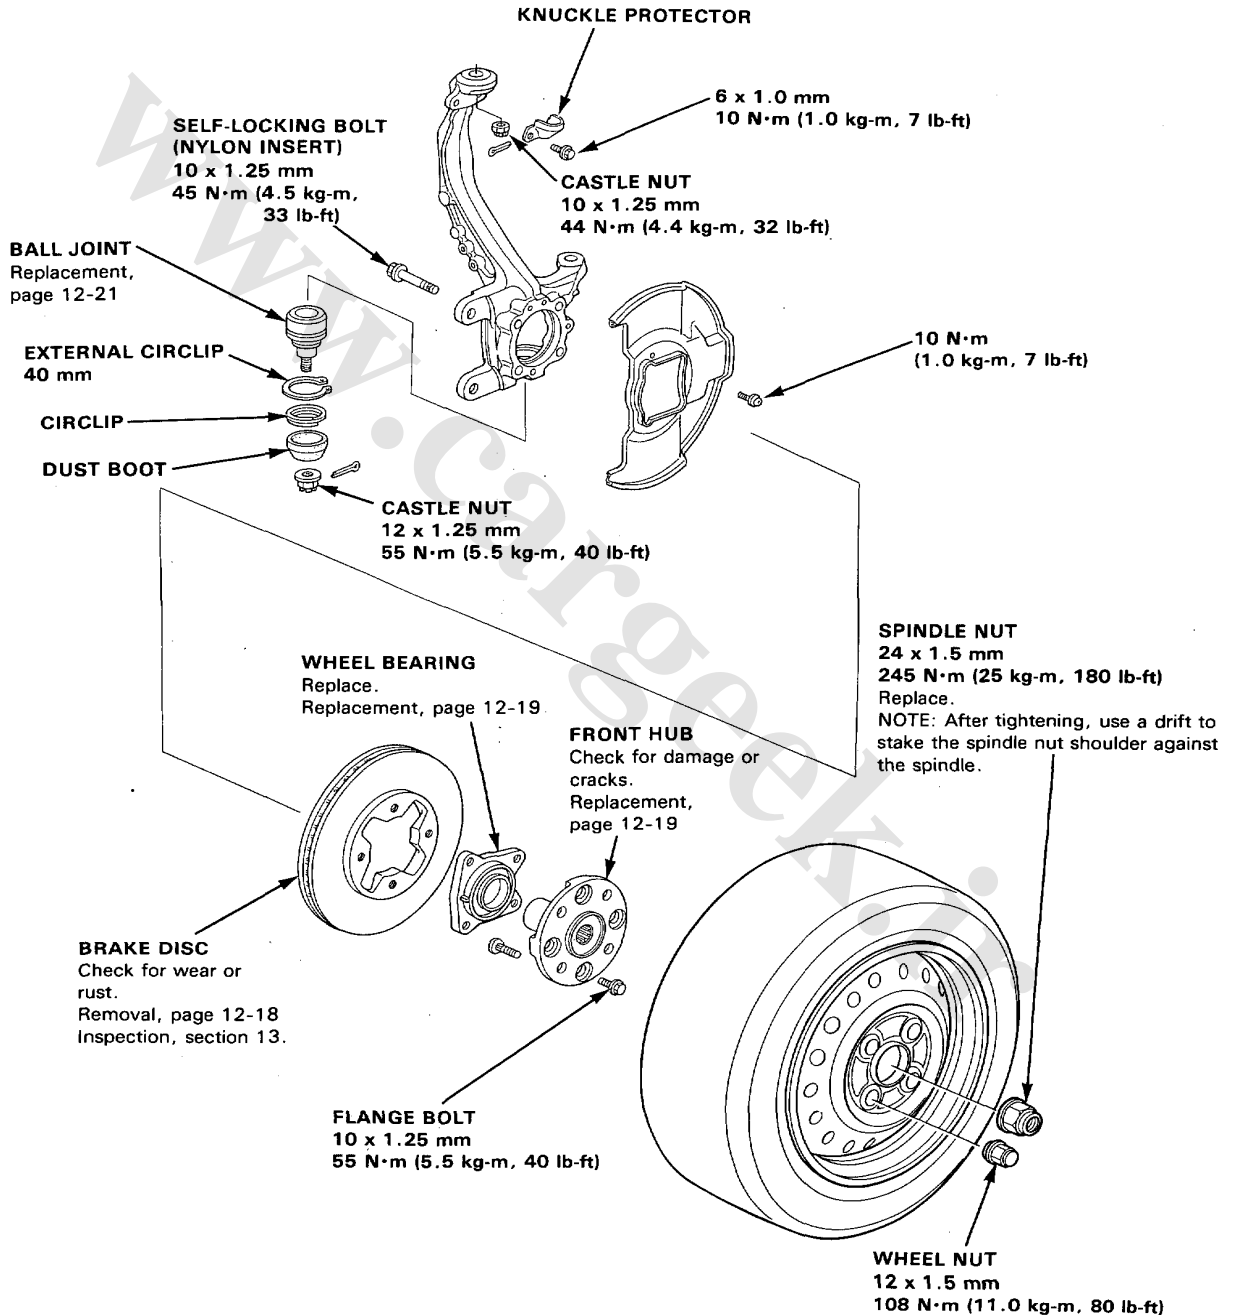




Knuckle/Hub Replacement

1. Pry the spindle nut stake away from the spindle, then loosen the nut.


After tightening, use a drift to stake spindle nut shoulder against the driveshaft.

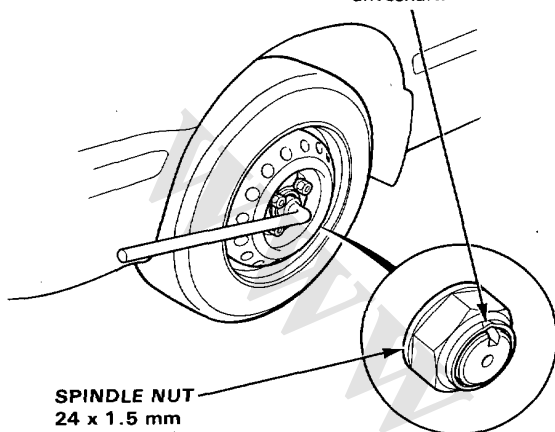

SPINDLE NUT
24 x 1.5 mm
245 N·m (25 kg-m, 180 lb-ft)
Replace.

2. Loosen the wheel nuts slightly.
3. Raise the front of car and support on safety stands in proper locations.
4. Remove the wheel nuts, wheel, and spindle nut.
5. Remove the caliper mounting bolts and hang the caliper assembly to one side.

CAUTION: To prevent accidental damage to the caliper assembly or brake hose, use a short piece of wire to hang the caliper assembly from the under-carriage.

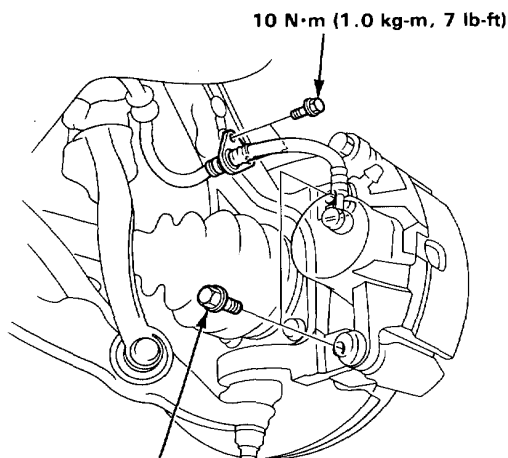


CALIPER MOUNTING BOLT
110 N·m (11.0 kg-m, 80 lb-ft)

6. Remove the cotter pin and the tie-rod ball joint nut.
7. Break loose the tie-rod ball joint using the special tool, then lift the tie-rod out of the knuckle.

CAUTION: Avoid damaging the ball joint boot.

NOTE: If necessary, apply penetrating type lubricant to loose the ball joint.

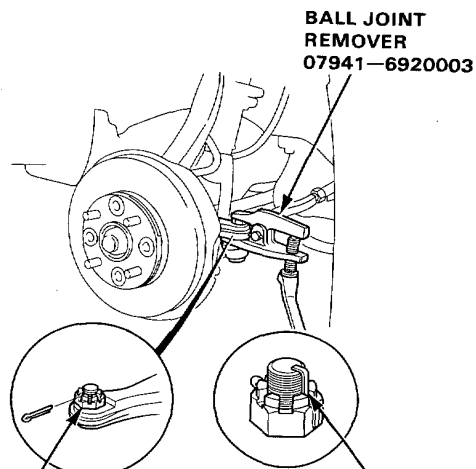


BALL JOINT REMOVER
07941-6920003

BALL JOINT NUT (CASTLE NUT)
44 N·m (4.4 kg-m, 32 lb-ft)

On reassembly, bend the pin as shown.

8. Remove the cotter pin and loosen the lower arm ball joint nut half the length of the joint threads.
9. Separate the ball joint and lower arm using a puller with the pawls applied to the lower arm.

CAUTION: Avoid damaging the ball joint boot.

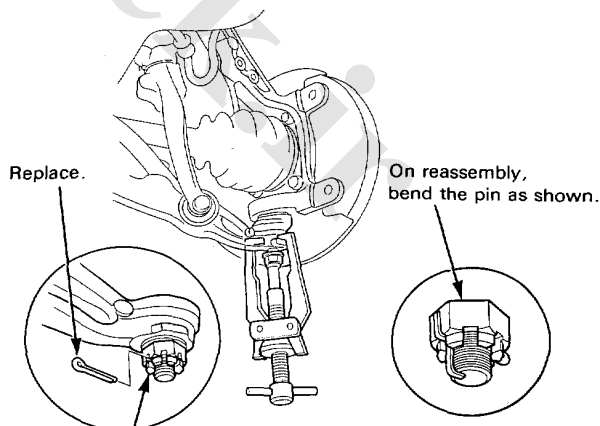

BALL JOINT NUT (CASTLE NUT) 12 x 1.25 mm
55 N·m (5.5 kg-m, 40 lb-ft)


On reassembly, bend the pin as shown.

(cont'd)

Front Suspension

Knuckle/Hub Replacement (cont'd)


10. Pull the knuckle outward and remove the driveshaft outboard joint from the knuckle using a plastic hammer.

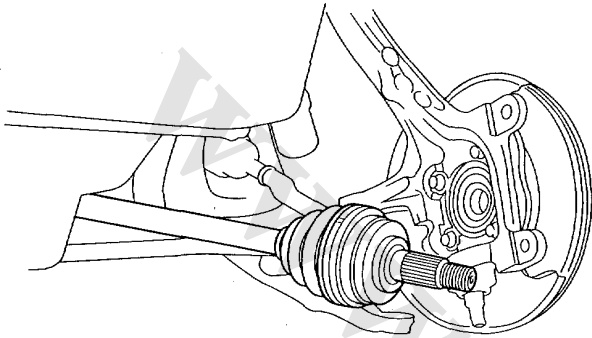

- 11. Remove the cotter pin and the upper ball joint nut.
- 12. Break loose the upper ball joint using special tool.


CAUTION: Avoid damaging the ball joint boot.

NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.

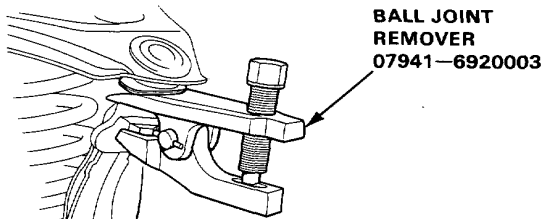


KNUCKLE PROTECTOR

6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)

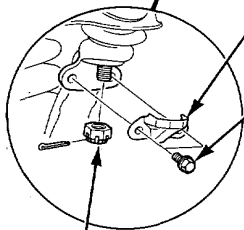


BALL JOINT NUT (CASTLE NUT) 10 x 1.25 mm
44 N·m (4.4 kg-m, 32 lb-ft)

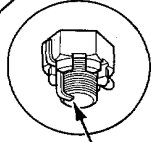


On reassembly, bend the pin as shown.

Hub unit and Wheel bearing Removal

13. Remove the knuckle from the hub unit.

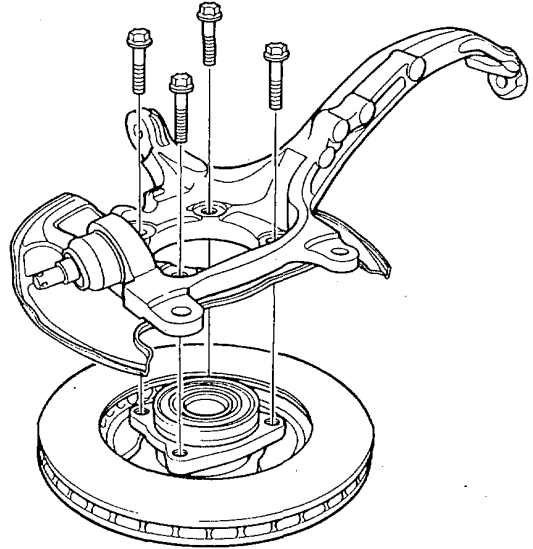


14. Remove the splash guard screws from the knuckle.

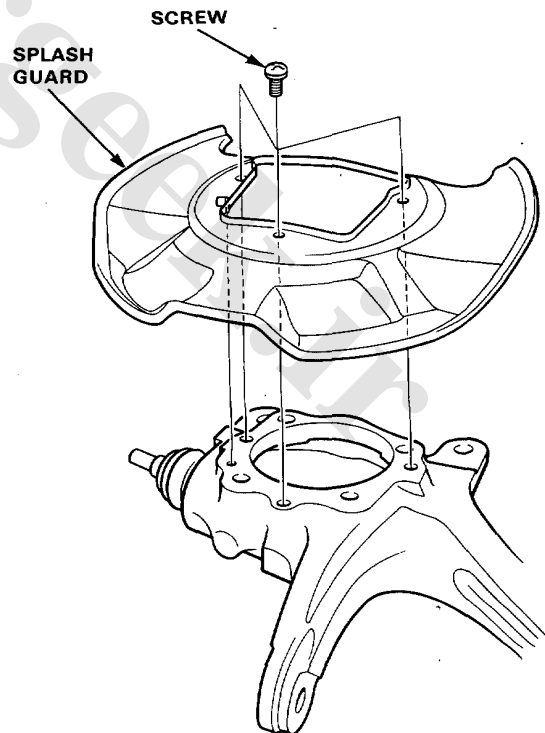




15. Remove the four bolts, then separate the hub unit from the brake disc.

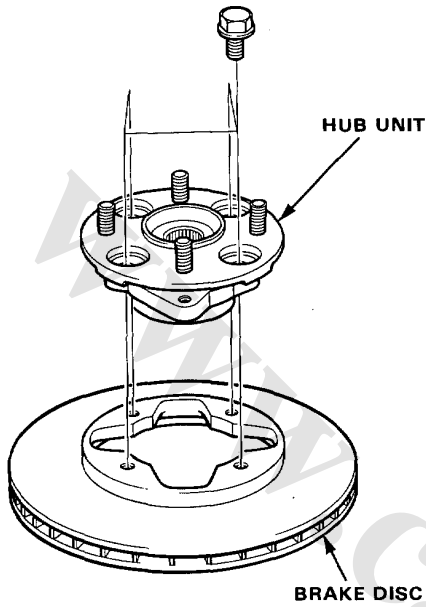

16. Separate the wheel bearing from the hub using the special tools and a hydraulic press.


CAUTION:

- Hold onto the hub to keep it from falling when pressed clear.
- To prevent damage to the tool make sure the threads are fully engaged before pressing.

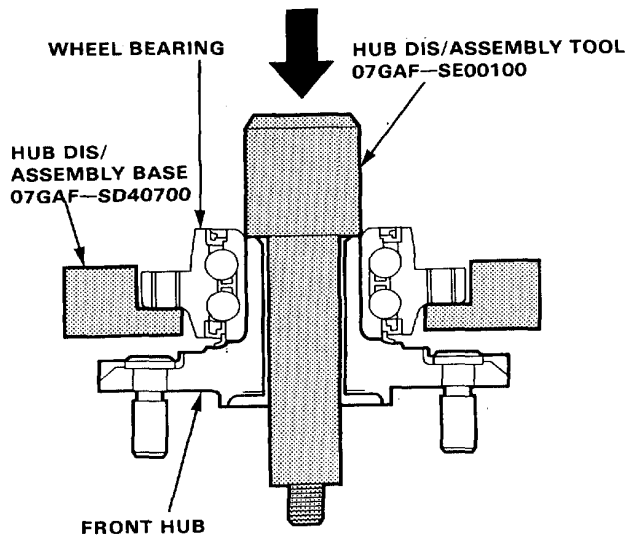

17. Remove the outboard bearing inner race from the hub using the special tools shown and a bearing puller.

CAUTION: To prevent damage to the tool make sure the threads are fully engaged before pressing.

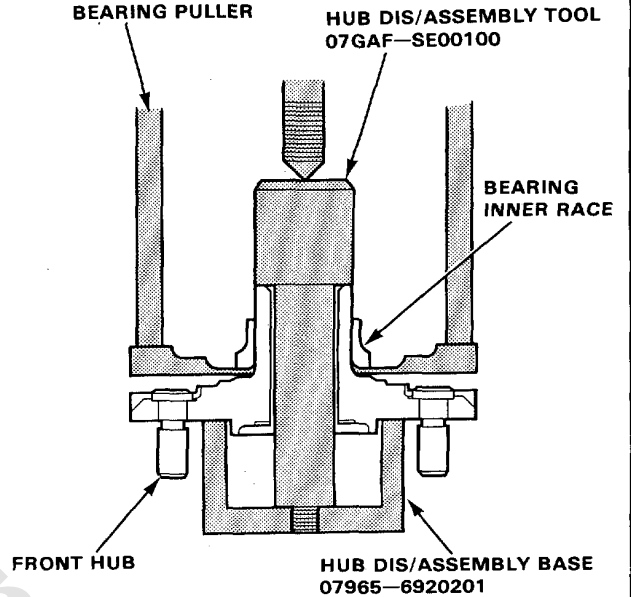

NOTE: Wash the knuckle and hub thoroughly in high flash point solvent before reassembly.

(cont'd)

Front Suspension


Knuckle/Hub Replacement (cont'd)

Wheel bearing and Hub unit Installation.


NOTE: Replace the bearing with a new one after removal.

- 18. Press a new wheel bearing into the hub using the special tools shown and a hydraulic press.


CAUTION: To prevent damage to the tool make sure the threads are fully engaged before pressing.

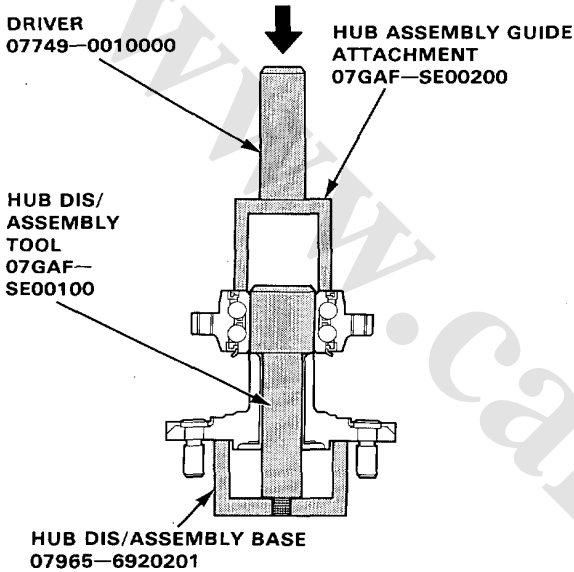


- 19. Install the hub unit on the brake disc and tighten the bolts.

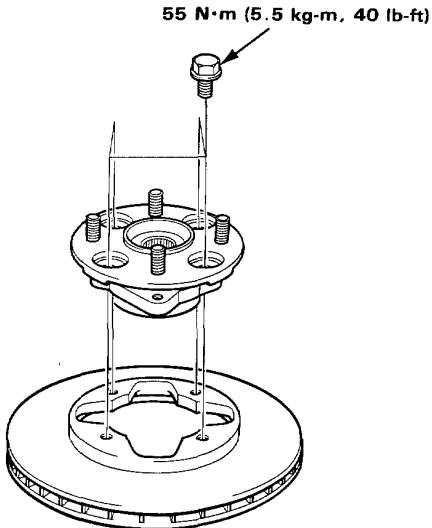

- 20. Install the splash guard and tighten the screws.

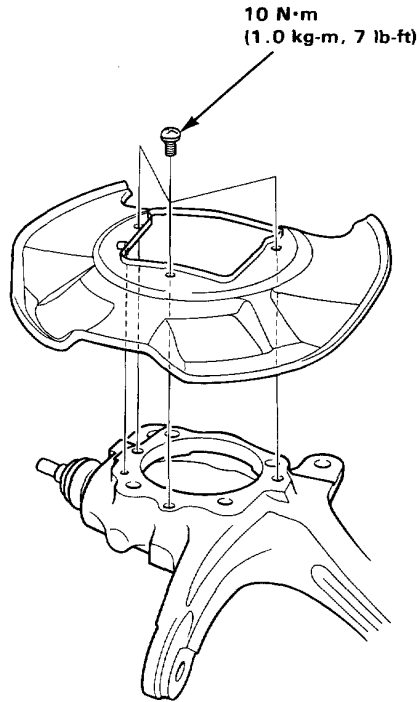

- 21. Install the knuckle on the hub unit and tighten the bolts.

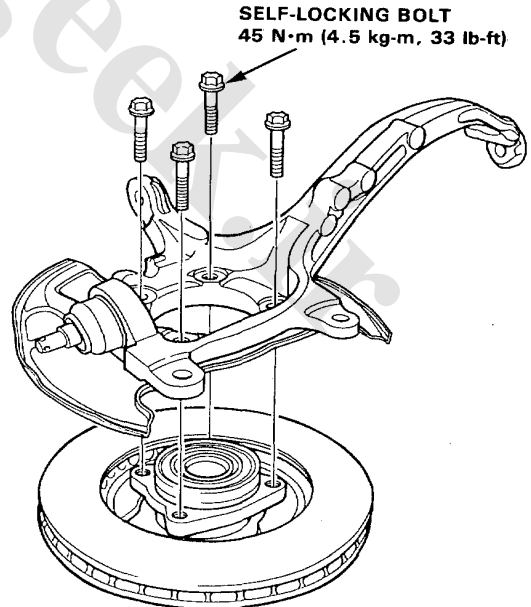




Lower Ball Joint Replacement

1. Remove the knuckle (page 12-17).
2. Remove the boot by prying the circlip off.
3. Remove the 40 mm circlip.
4. Install the special tool on the ball joint and tighten the ball joint nut.
5. Position the special tool over the ball joint as shown then set the assembly in a vise. Press the ball joint out of the knuckle.

BALL JOINT REMOVER/INSTALLER
07HAF-SF10110

BALL JOINT NUT

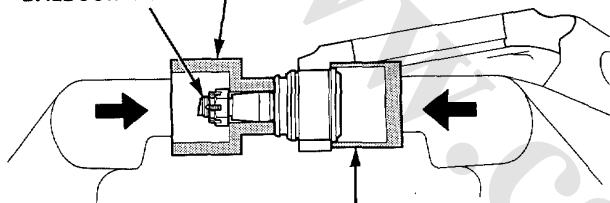


BALL JOINT REMOVER BASE
07HAF-SF10130

6. Place the ball joint in position by hand.
7. Install the special tools over the ball joint as shown, then press the ball joint in.

BALL JOINT REMOVER/INSTALLER
07HAF-SF10110

BALL JOINT INSTALLER BASE
07HAF-SF10120

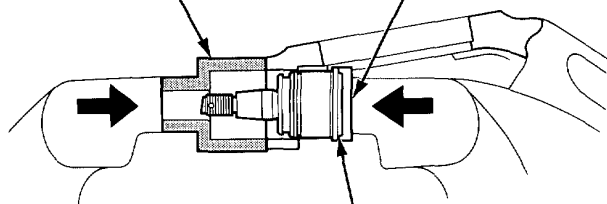


Ball joint housing surface.

8. Install the 40 mm circlip.

Ball Joint Boot Replacement

Jolt the ball pin and back and forth check the ball joint for wear. Replace the ball pin if it worn excessively.

1. Remove the circlip and the boot.
CAUTION: Do not contaminate the boot installation section with grease.
2. Pack the interior of the boot and lip with grease.

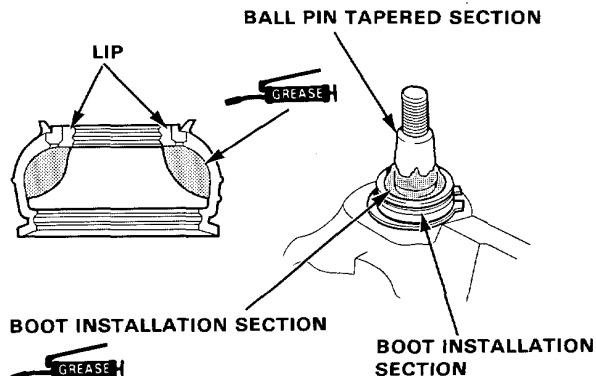

3. Wipe the grease off the sliding surface of the ball pin and pack with fresh grease.

CAUTION:

- Keep grease off the boot installation section and the tapered section of the ball pin.
- Do not allow dust, dirt, or other foreign materials to enter the boot.

4. Install the boot in the groove of the boot installation section securely, then bleed air.
5. Adjust the special tool with the adjusting bolt until the end of the tool aligns with the groove on the boot.
6. Slide the clip over the tool and into position.


BALL JOINT BOOT CLIP GUIDE
07GAG-SD40700

ADJUSTING BOLT
Adjust the depth by turning the bolt.

CIRCLIP

BOOT

40 mm CIRCLIP

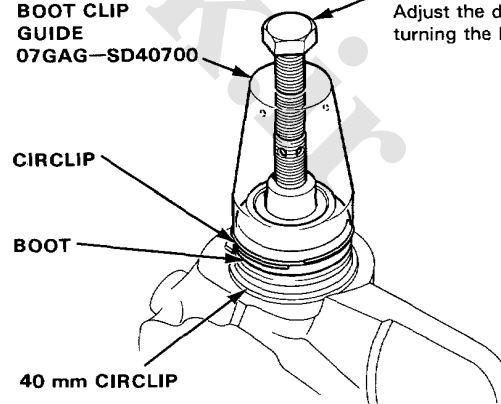

CAUTION: After installing the boot, check the ball pin tapered section for grease contamination and wipe it if necessary.

Front Suspension

Illustrated Index


Overall Suspension

CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a non-self locking nut past their nylon locking inserts. (If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).

NOTE:


- Wipe off the grease before tightening the nut at the ball joint.
- Torque specifications, see page 12-15.

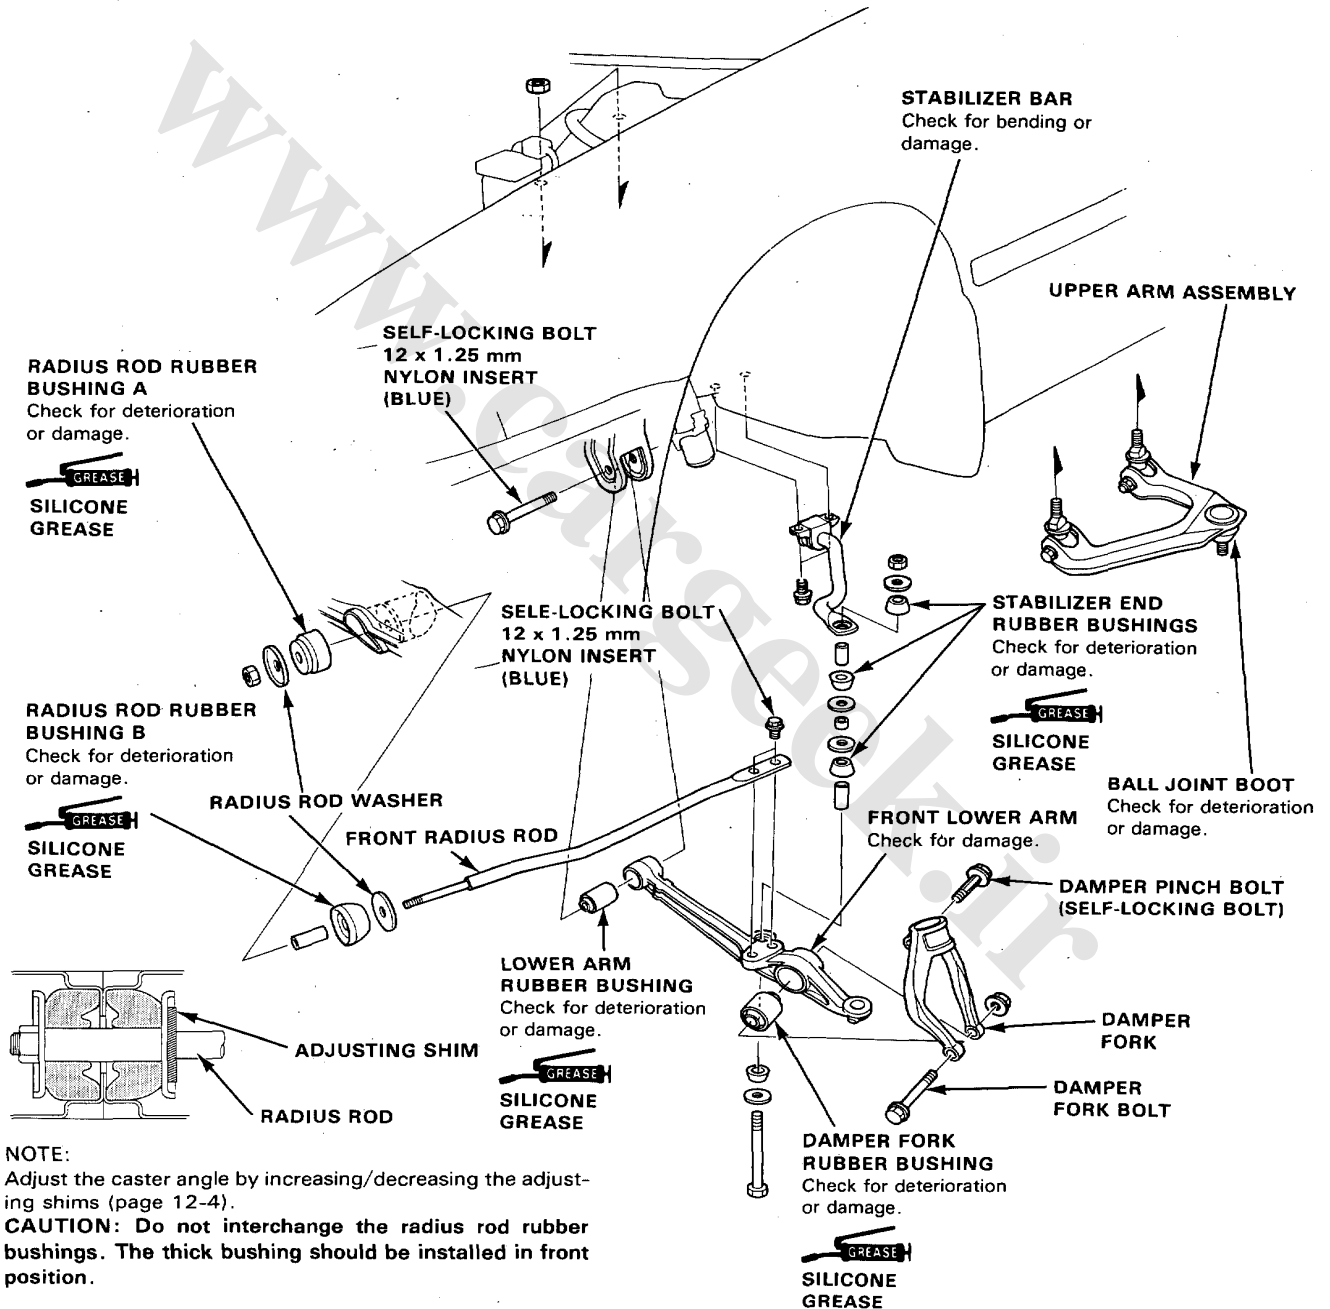



Upper Arm Ball Joint Inspection


1. Loosen the front wheel lug nuts.
2. Raise the front end of the car and place safety stands in the proper locations.
3. Remove the front wheels.
4. Rock the upper ball joint front-to-back.
5. Replace the upper arm assembly as follows if there is any play.

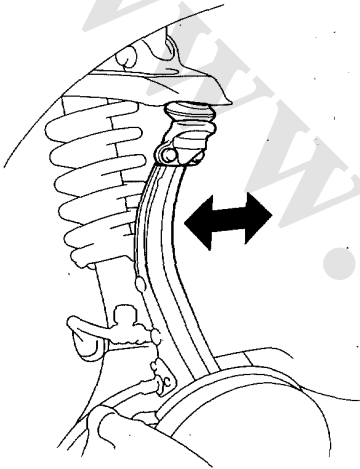


Front Suspension

Damper Removal

1. Remove the brake hose clamps from the damper.
2. Remove the damper pinch bolt.
3. Remove the damper fork bolt and remove the damper fork.

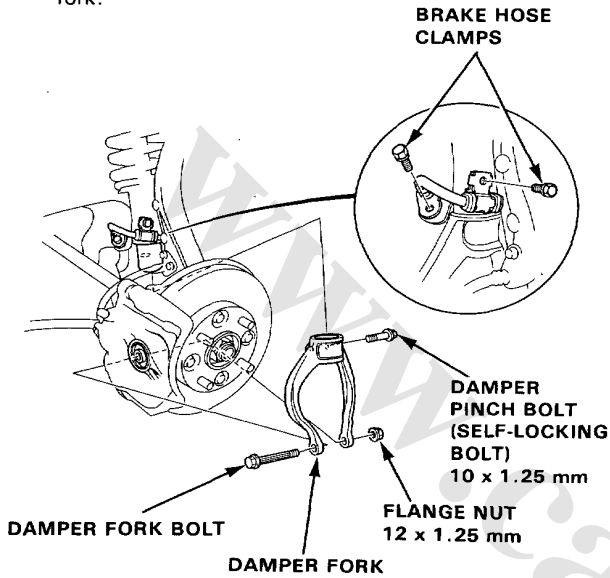


4. Remove the damper by removing the three flange nuts.

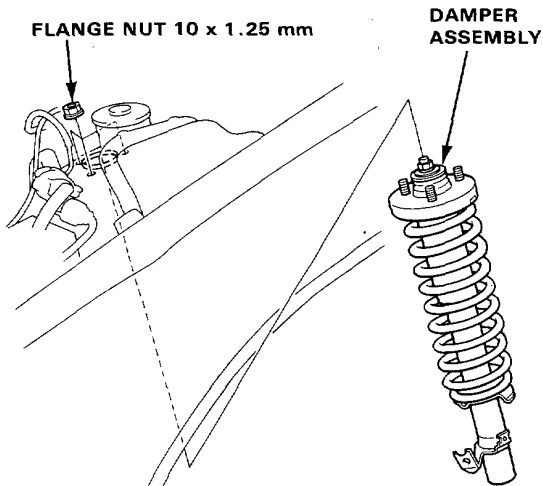

Damper Disassembly/Inspection

1. Compress the damper spring with the spring compressor according to the manufacturer's instructions, then remove the self-locking nut.

CAUTION: Do not compress the spring more than necessary to remove the nut.

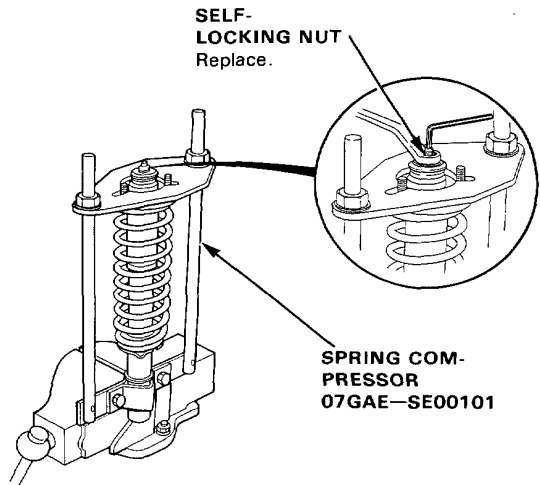


2. Remove the spring compressor then disassemble the damper as shown on the next page.


Inspection:

1. Reassemble all parts, except the spring.
2. Push on the damper assembly as shown.
3. Check for smooth operation through a full stroke, both compression and extension.


NOTE: The damper should move smoothly. If it does not (no compression or no extension), then gas is leaking, and the damper should be replaced.

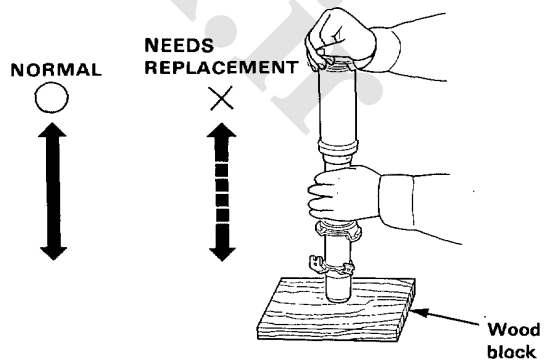

4. Check for oil leaks, abnormal noises or binding during these tests.




Inspection

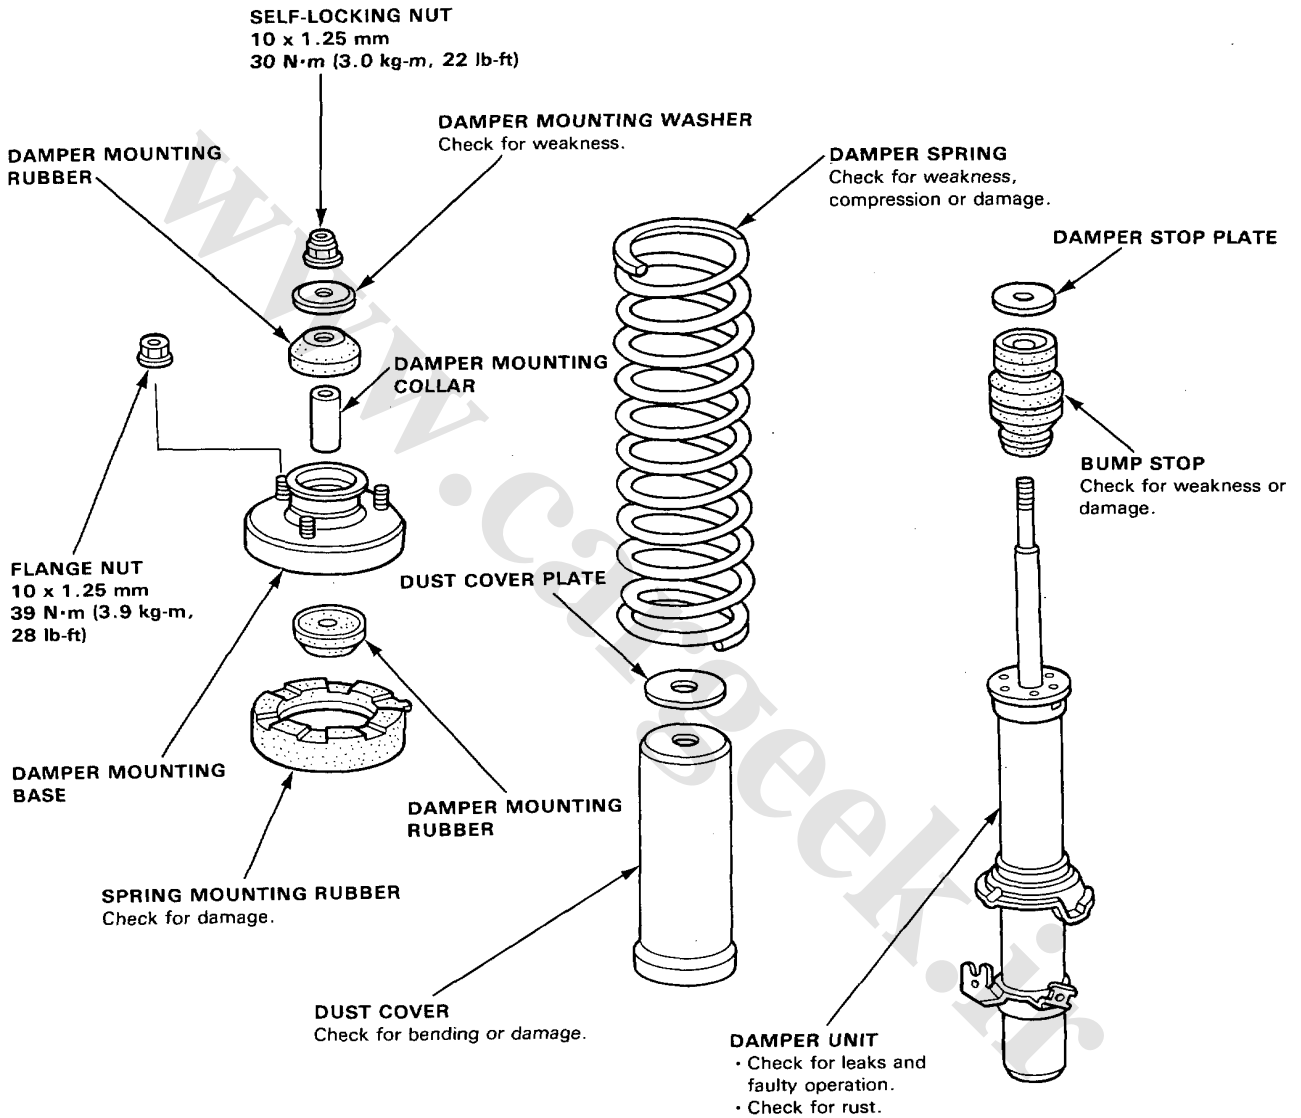

Front Suspension

Damper Reassembly


1. Install the damper unit, damper spring, bump stop, boot, upper spring seat, damper bushings, and collar on the spring compressor.

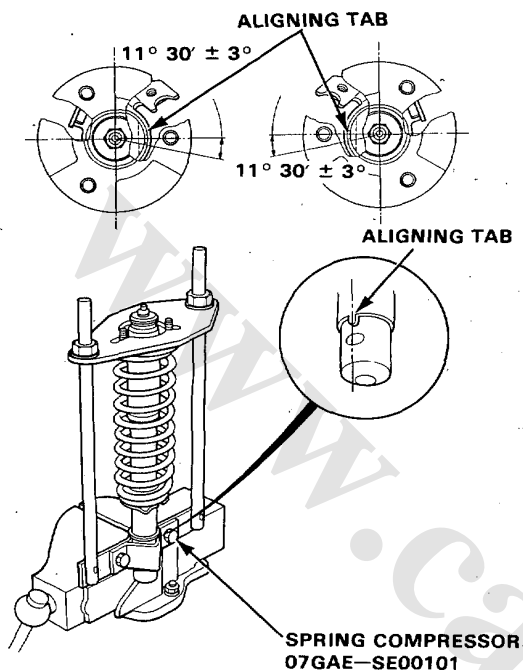

NOTE: Left side shown, right side is opposite.


3. Compress the damper spring.
4. Install the damper mount washer and a new self-locking nut 10 mm.
5. Hold the damper shaft and tighten the 10 mm self-locking nut.

30 N·m (3.0 kg-m, 22 lb-ft)

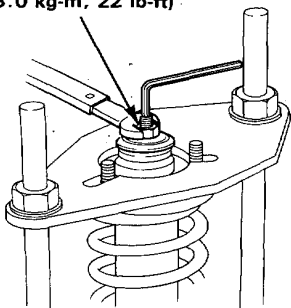


Damper Installation

1. Loosely install the damper on the frame with the aligning tab facing inside.

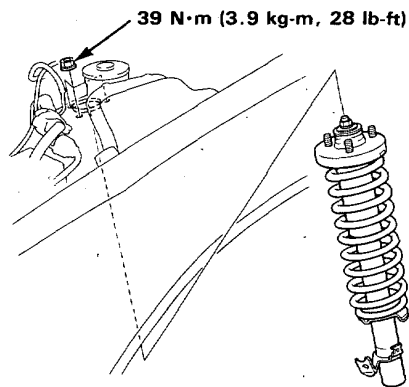

2. Install the damper fork on the driveshaft and lower arm. Install the damper in the damper fork so the aligning tab is aligned with the slot in the damper fork.
3. Hand tighten the bolts and nuts.
4. Raise the knuckle with a floor jack until the car just lifts off the safety stand.

NOTE: The bolts and nuts should be tightened with the vehicle's weight on the damper.

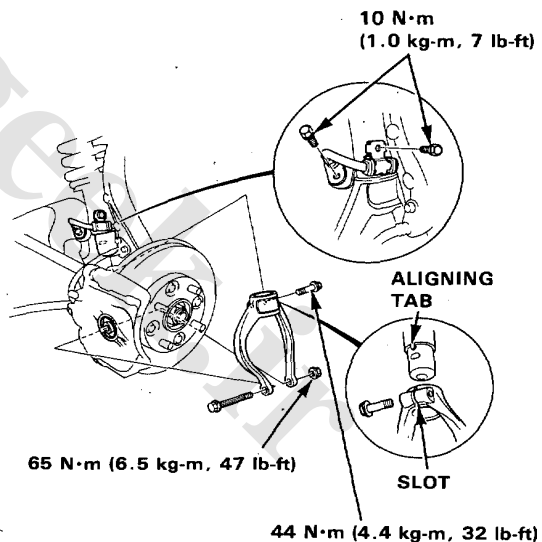

5. Tighten the damper pinch bolt.
6. Secure the damper fork bolt with a new 12 mm nut.
7. Secure the damper assembly to the frame with the flange nuts.
8. Install the brake hose clamps with the two bolts.



Rear Suspension


Torque Specifications-4WS

CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a non-self-locking nut past nylon locking inserts. (If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).

The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

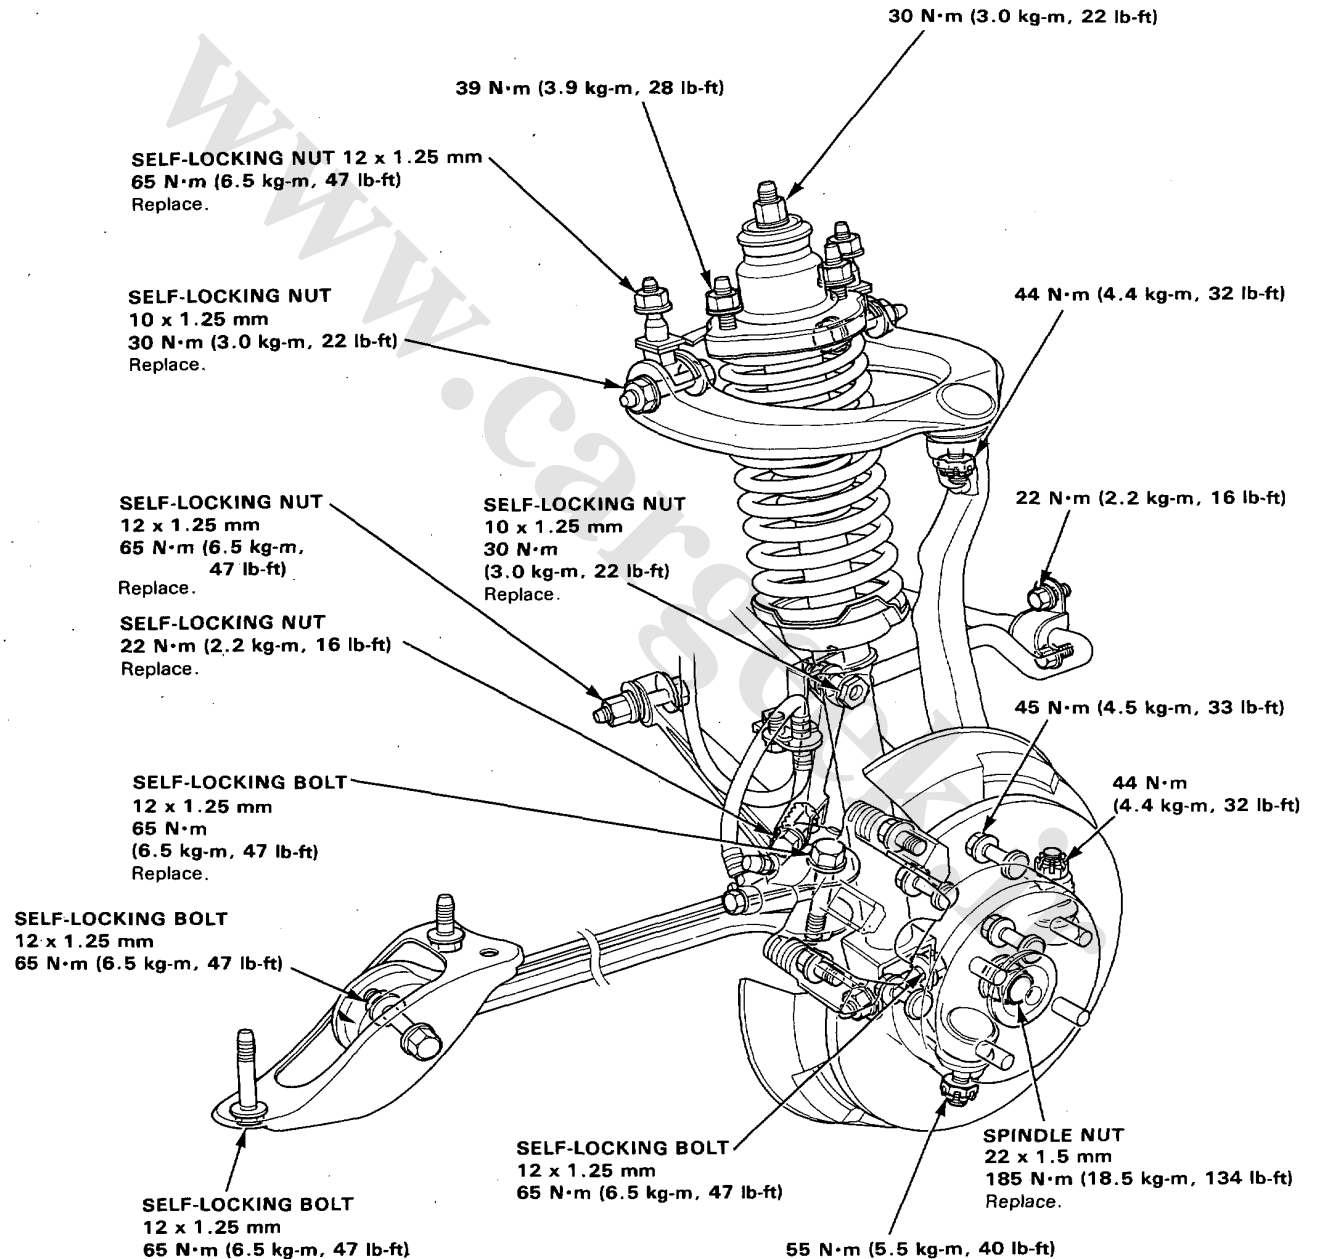

Rear Suspension


Torque Specifications-2WS

CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a non-self-locking nut past their nylon locking inserts. (If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).


The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

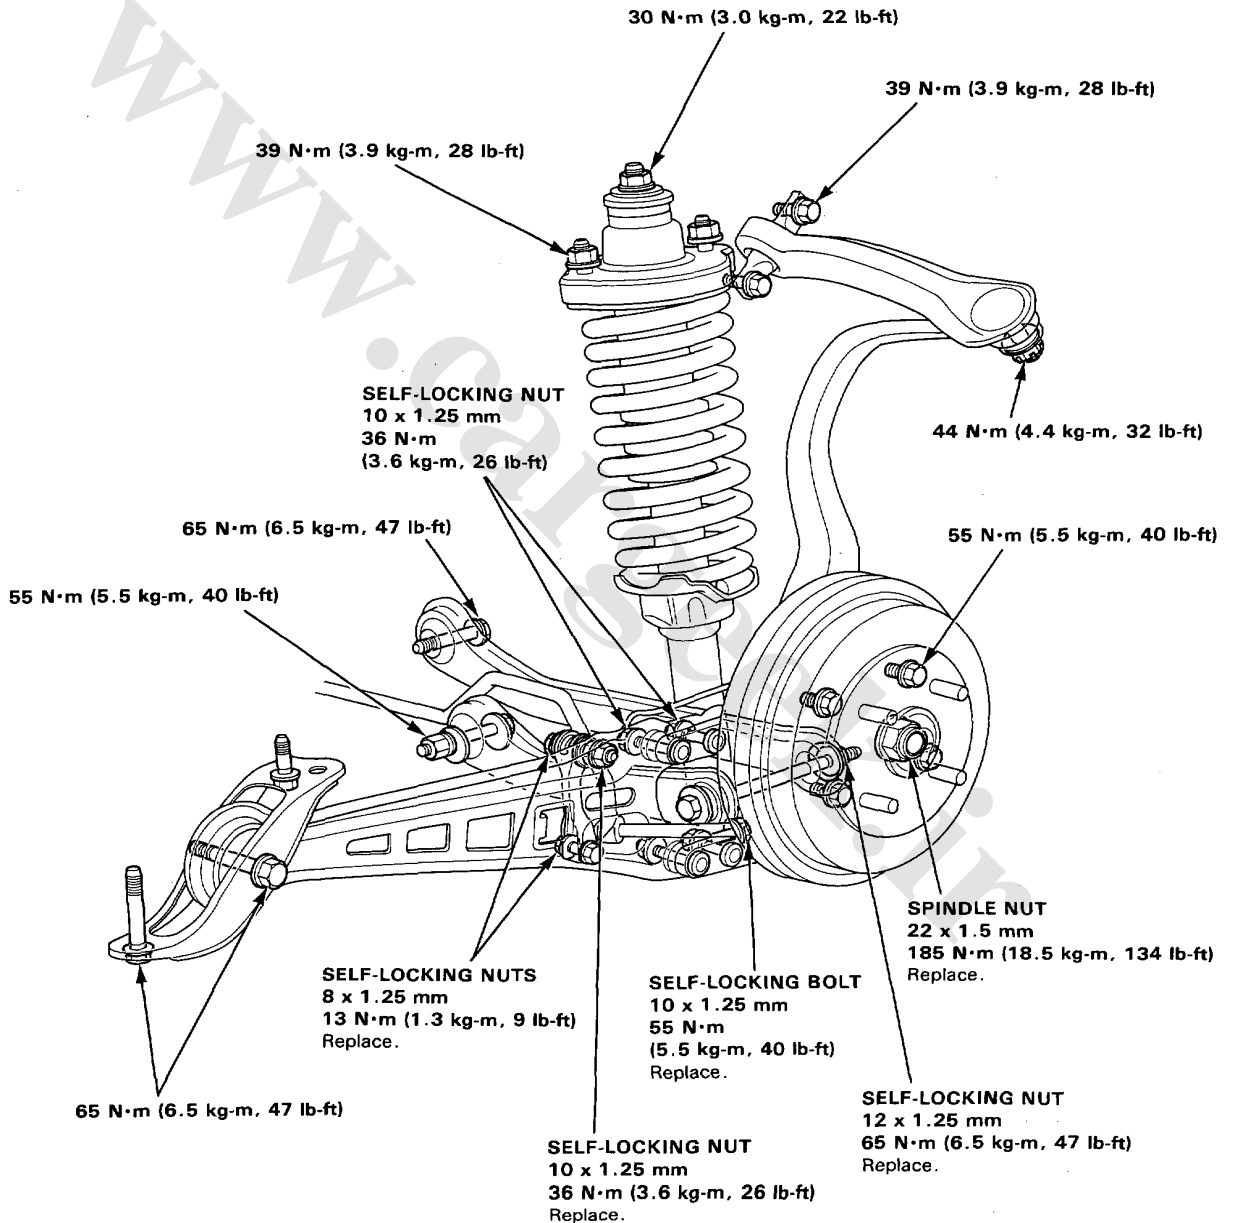





Index-4WS

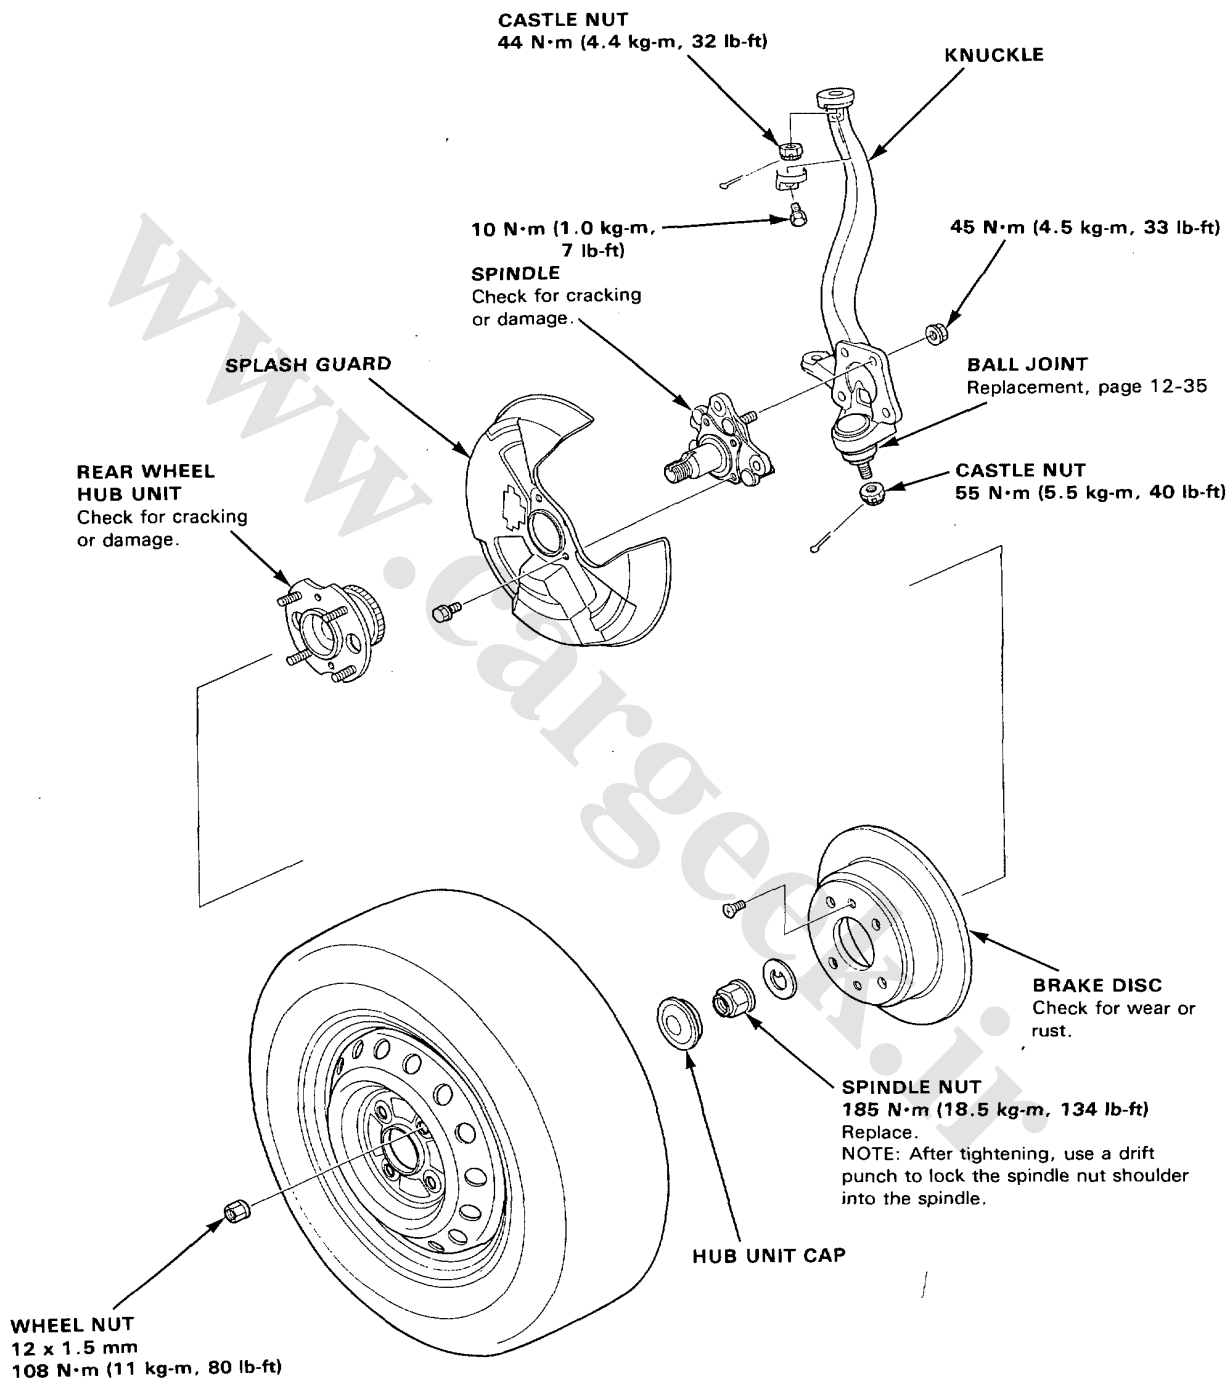

Rear Suspension

Index-2WS

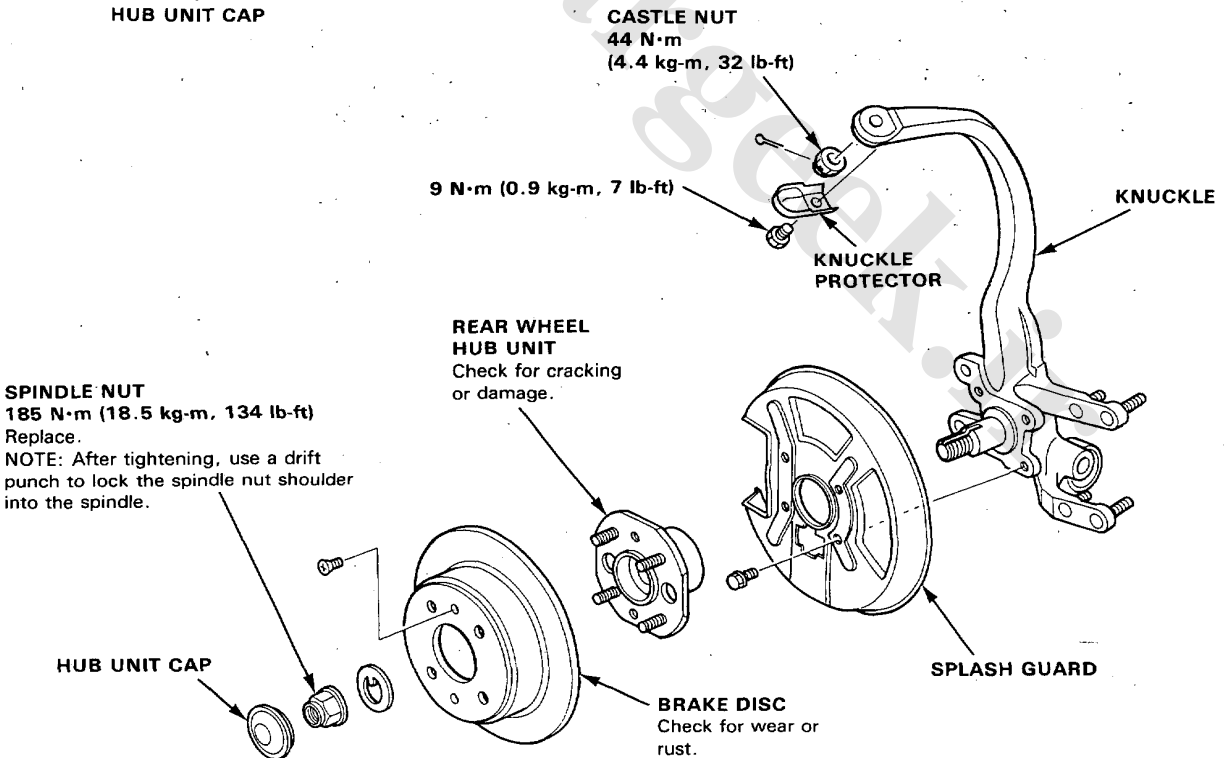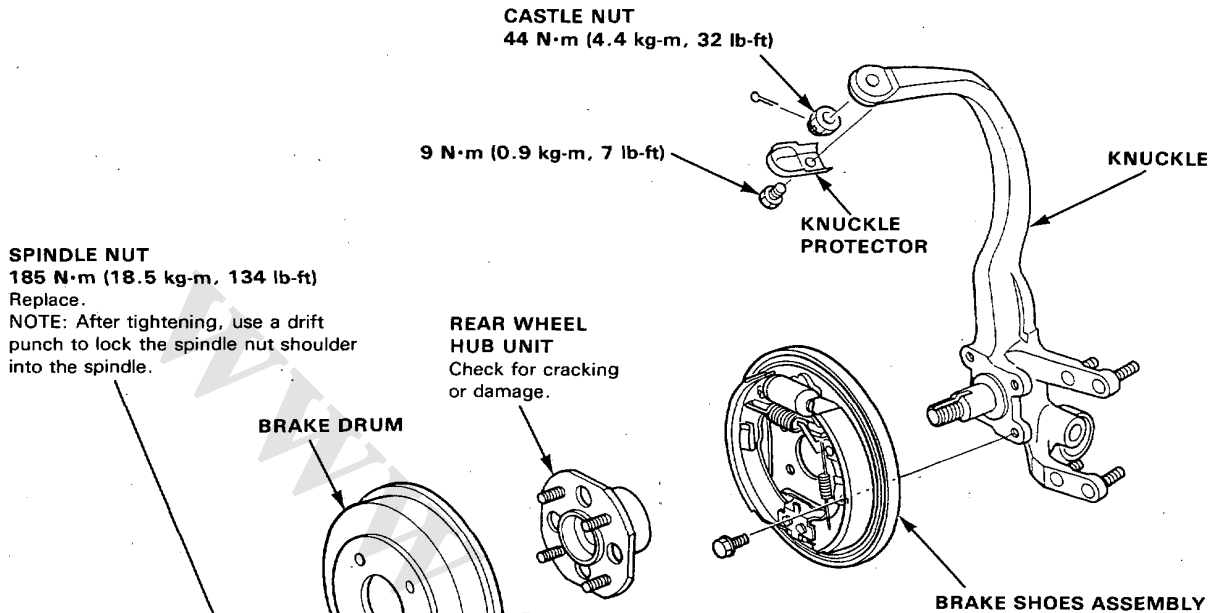




Knuckle/Hub Replacement-4WS

1. Pry the spindle nut stake away from the spindle, then loosen the nut.

SPINDLE NUT
22 x 1.5 mm
185 N·m (18.5 kg-m, 134 lb-ft)
Replace.


NOTE: After tightening, use a drift punch to stake the spindle nut shoulder onto the spindle.

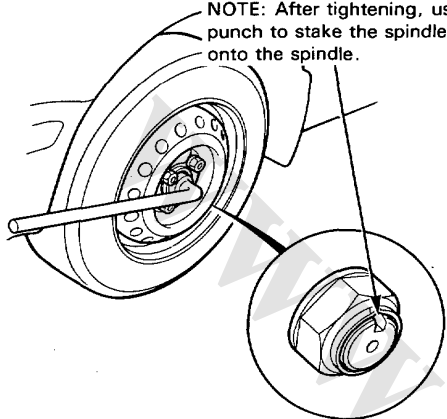

2. Loosen the wheel nuts slightly.
3. Raise the front of car and support on safety stands in proper locations.
4. Remove the wheel nuts, wheel, and spindle nut.
5. Remove the caliper bolts and hang the caliper assembly to one side.


CAUTION: To prevent accidental damage to the caliper assembly or brake hose, use a short piece of wire to hang the caliper assembly from the under-carriage.

6. Remove the caliper mounting bracket.

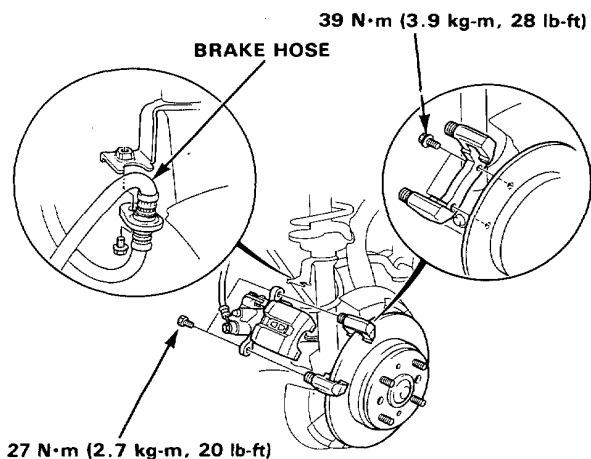


7. Remove the 6 mm brake disc retaining screws.
8. Screw two 8 x 1.0 mm bolts into the disc to push it away from the hub.

NOTE: Turn each bolt two turns at a time to prevent cocking disc excessively.

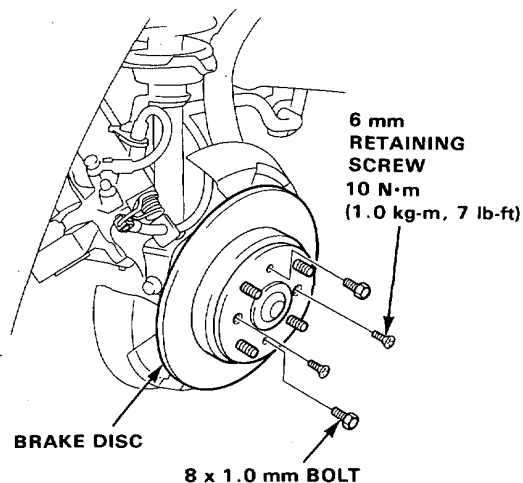

9. Remove the hub bearing unit.
10. Remove the splash guard screws from the knuckle.

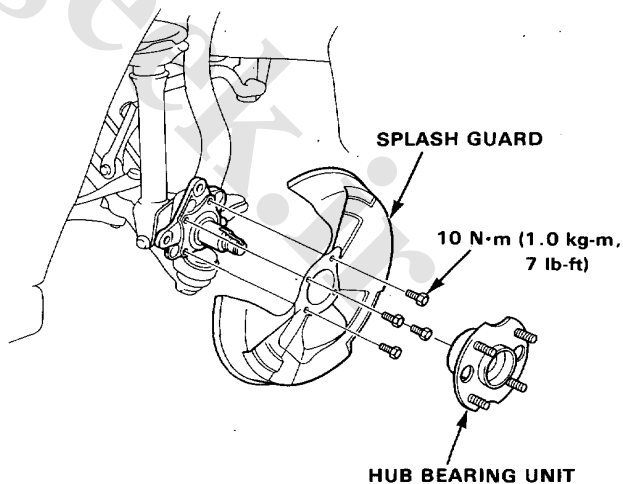

(cont'd)




Rear Suspension

Knuckle/Hub Replacement-4WS (cont'd)

11. Remove the cotter pin from the tie-rod end and remove the castle nut.
12. Break loose the tie-rod ball joint using the special tool, then lift the tie-rod out of the knuckle.

CAUTION: Avoid damaging the ball joint boot.

BALL JOINT REMOVER
07941-6920003

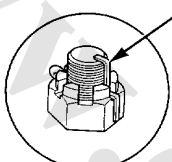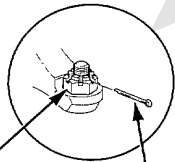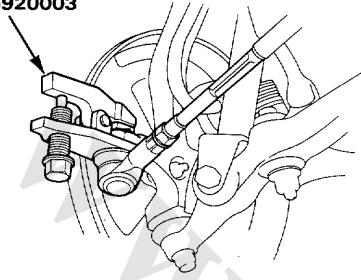

BALL JOINT NUT (CASTLE NUT)
44 N·m
(4.4 kg-m, 32 lb-ft)

PIN
Replace.


On reassembly, bend the pin as shown.

13. Pry the cotter pin off and loosen the lower arm ball joint nut half the length of the joint threads.



14. Separate the ball joint and lower arm using a puller with the pawls applied to the lower arm.

CAUTION: Avoid damaging the ball joint boot.

Hang puller pawls on lugs on lower arm.

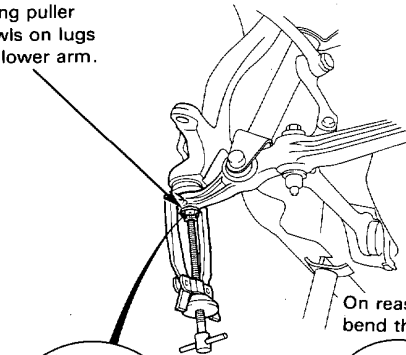

On reassembly, bend the pin as shown.

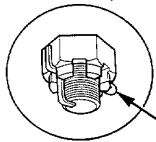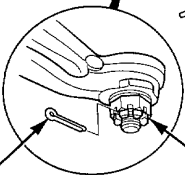

PIN
Replace.


BALL JOINT NUT (CASTLE NUT)
55 N·m (5.5 kg-m, 40 lb-ft)

15. Remove the cotter pin and the upper ball joint nut.
16. Break loose the upper ball joint using the special tool, then remove the knuckle.


NOTE: If necessary, apply penetrating type lubricant to loosen the ball joint.

CAUTION: Avoid damaging the ball joint boot.

BALL JOINT REMOVER
07941-6920003

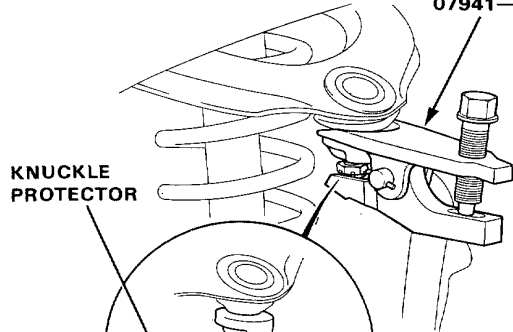


KNUCKLE PROTECTOR

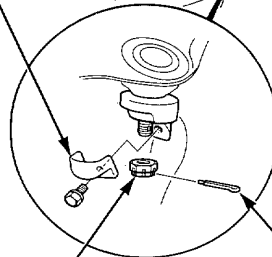

BALL JOINT NUT (CASTLE NUT)
44 N·m (4.4 kg-m, 32 lb-ft)

PIN
Replace.

17. Remove the spindle from the knuckle.

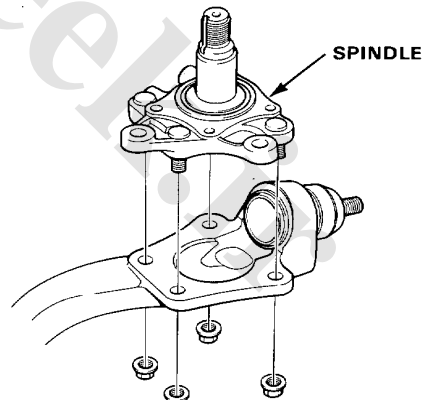

45 N·m (4.5 kg-m, 33 lb-ft)

18. Install in the reverse order of removal. Tighten the new spindle nut to specified torque, then stake the nut.




Hub Bearing Unit Replacement -2WS

1. Raise the rear of car and support it with safety stands in proper locations.
2. Remove the rear wheel.
3. Remove the brake drum.

Rear Disc Brake:

- Remove the rear brake caliper and brake disc.
4. Remove the hub unit cap, then pry the spindle nut lock tab away from the spindle and loosen the nut.
 5. Remove the hub bearing unit.

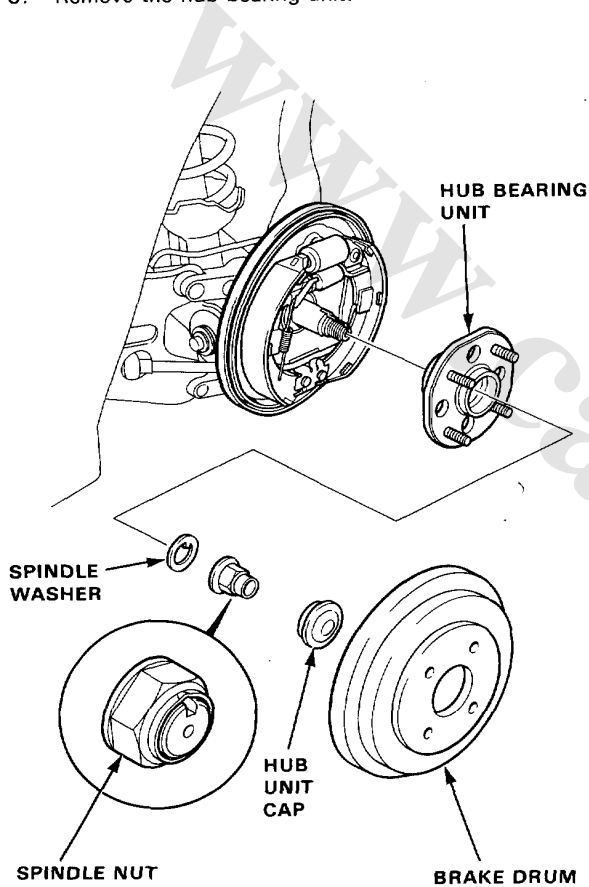

SPINDLE NUT
22 x 1.5 mm
185 N·m (18.5 kg-m, 134 lb-ft)
Replace.


NOTE: After tightening, use a drift to stake the spindle nut shoulder against the spindle.

6. Install in the reverse order of removal. Tighten the new spindle nut to specified torque, then stake the nut.

Upper Arm Ball Joint Removal -2WS

1. Remove the cotter pin and loosen the upper ball joint nut half the length of the joint threads.
2. Position the special tool between the knuckle and upper arm as shown, and remove the knuckle from the upper arm.

CAUTION: Avoid damaging the ball joint boot.

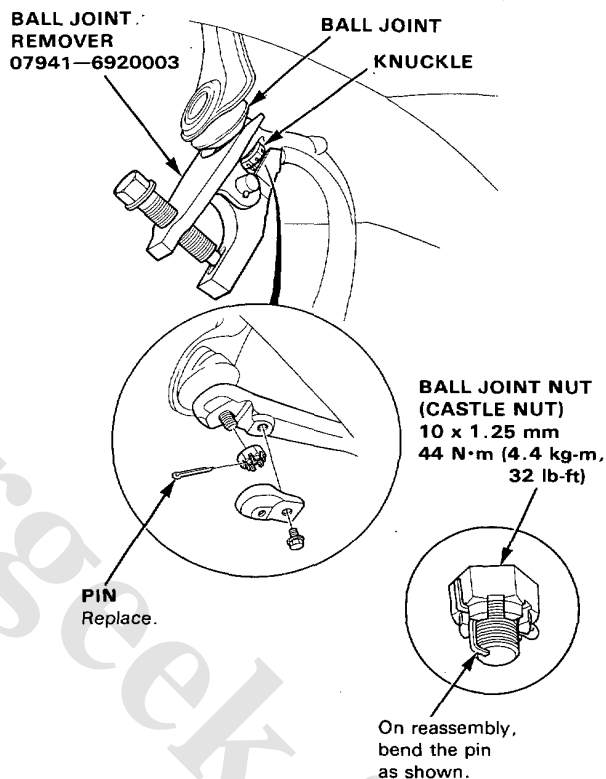

BALL JOINT NUT (CASTLE NUT)
10 x 1.25 mm
44 N·m (4.4 kg-m, 32 lb-ft)


On reassembly, bend the pin as shown.

Rear Suspension

Lower Ball Joint Replacement -4WS

1. Remove the knuckle (page 12-31).
2. Remove the boot by prying the snap ring off.
3. Remove the 40 mm circlip.
4. Install the Ball Joint Remover/Installer on the ball joint and tighten the ball joint nut.
5. Position the Ball Joint Remover Base over the ball joint as shown below, then place the assembly in a vise. Press the ball joint out of the knuckle.


BALL JOINT REMOVER/INSTALLER
07HAF-SF10110

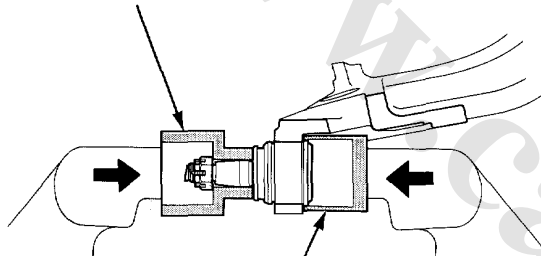

BALL JOINT REMOVER BASE
07HAF-SF10130

6. Place the new ball joint in position by hand.
7. Install the Ball Joint Installer Base over the ball joint as shown below, then press in the ball joint.


BALL JOINT REMOVER/INSTALLER
07965-SB00100

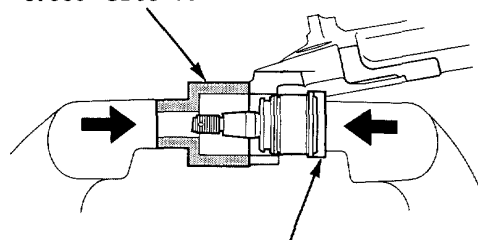

BALL JOINT INSTALLER BASE
07HAF-SF10120

Lower Ball Joint Boot Replacement-4WS

1. Remove the circlip and the boot.
CAUTION: Do not contaminate the boot installation section with grease.
2. Pack the interior of the boot and lip with grease.

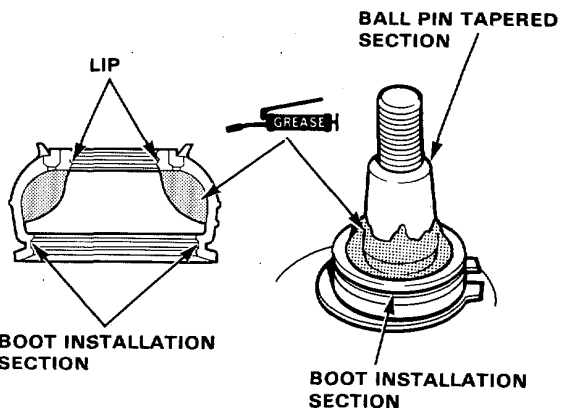


3. Wipe the grease off the sliding surface of the ball pin and pack with fresh grease.

CAUTION:

- Keep grease off the boot installation section and the tapered section of the ball pin.
- Do not allow dust, dirt, or other foreign materials to enter the boot.

4. Install the boot in the groove of the boot installation section securely, then bleed air.
5. Adjust the special tool with the adjusting bolt until the end of the tool aligns with the groove on the boot. Slide the clip over the tool and into position.

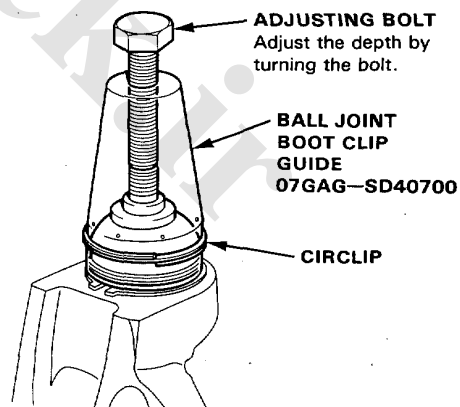

CAUTION: After installing the boot, check the ball pin tapered section for grease contamination and wipe it if necessary.




Upper Arm/Stabilizer/Trailing Arm/Lower Arm

Index/Inspection-4WS

Overall Suspension

NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheel.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal.
- Torque specifications, see page 12-27.

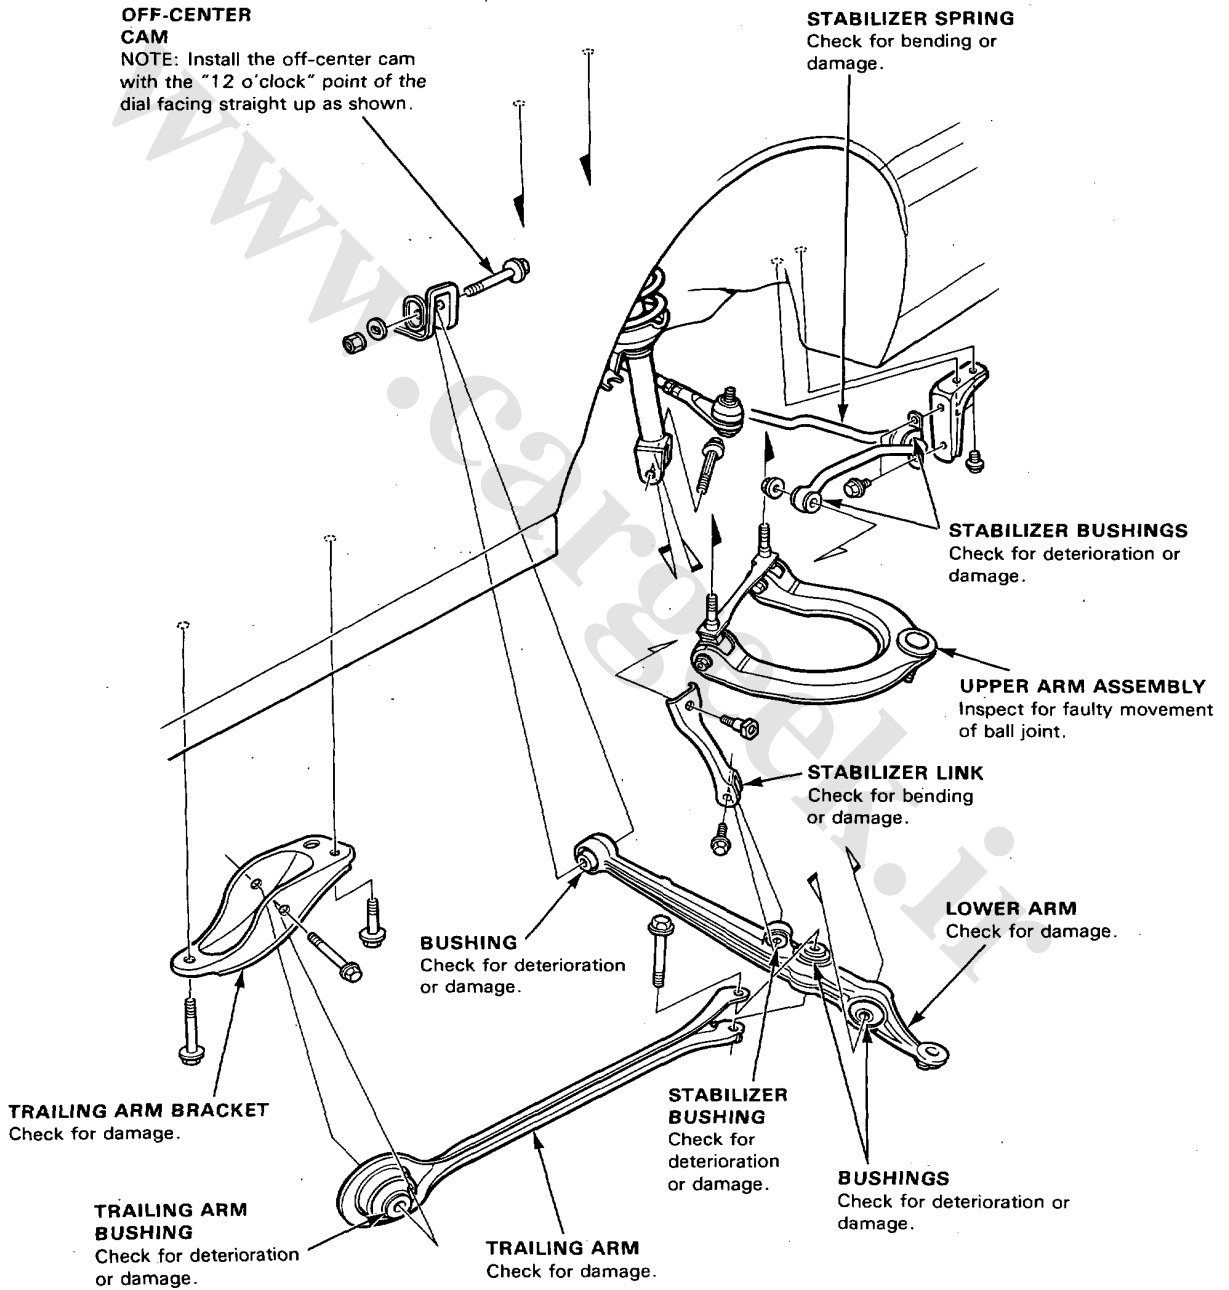

Upper Arm/Stabilizer/Trailing Arm/Lower Arm

Index/Inspection-2WS


Overall Suspension

NOTE:

- Use only genuine Honda aluminum wheel weights. Non-genuine aluminum wheel weights may corrode and damage aluminum wheel.
- Remove the center cap by prying it out with a flat screwdriver. Avoid damage to the cap by not allowing it to fall during removal.
- Torque specifications, see page 12-28.

CAUTION:


- Use a rag at the point you are going to pry, because aluminum alloy wheels can be easily damaged.
- Lower arms A and B are interchangeable from side to side. Make sure their left and right side marks (L. UP, R. UP) are facing up for assembly.

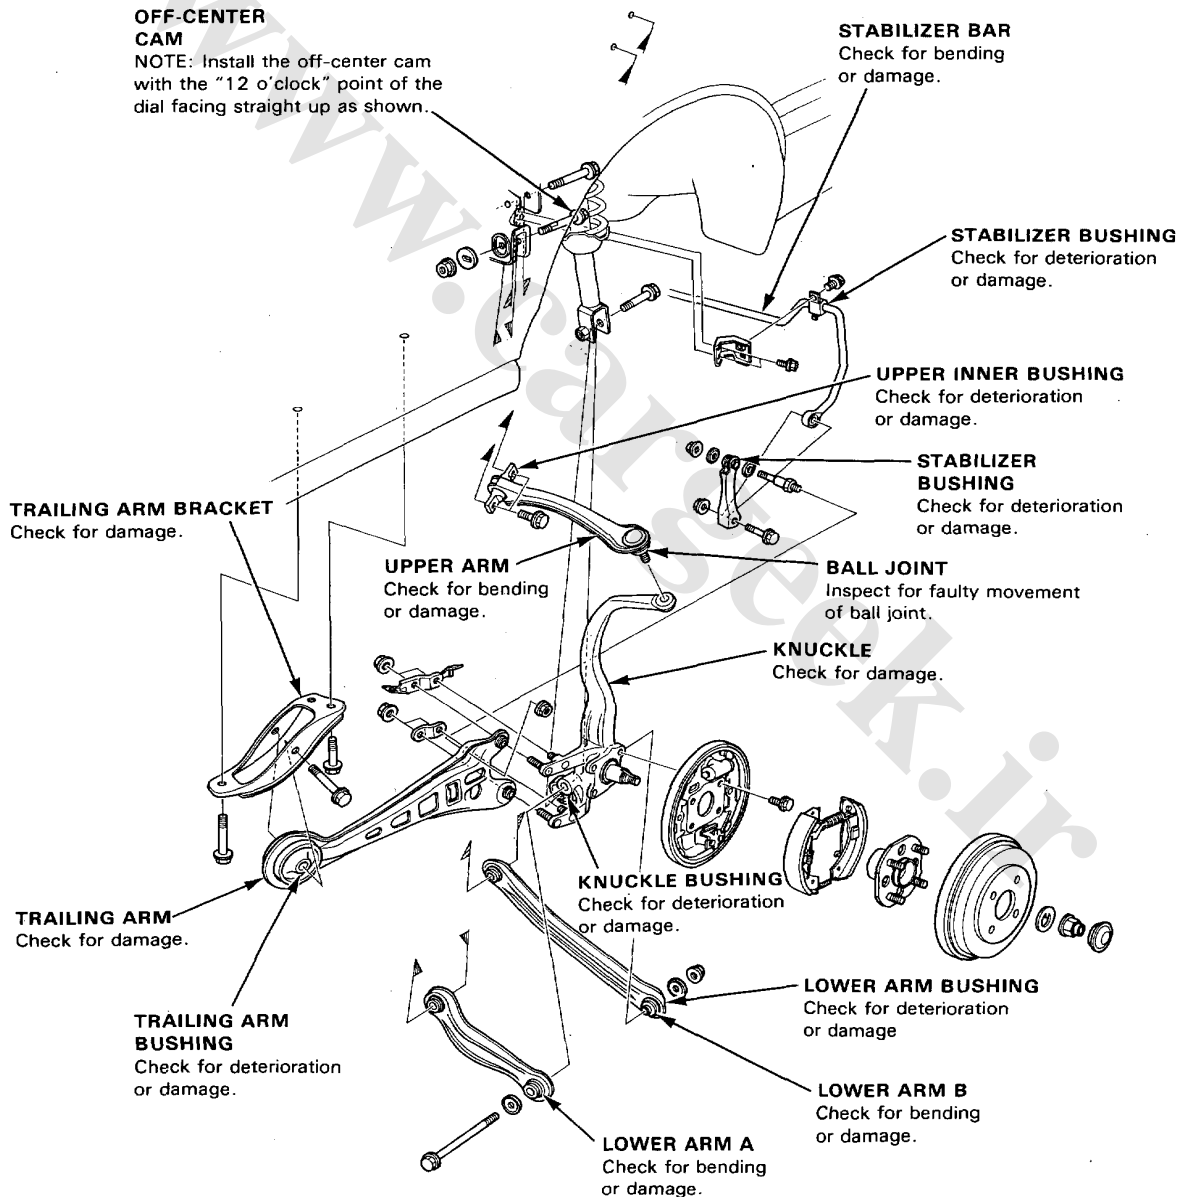




Bushing Replacement

Knuckle Bushing Removal:

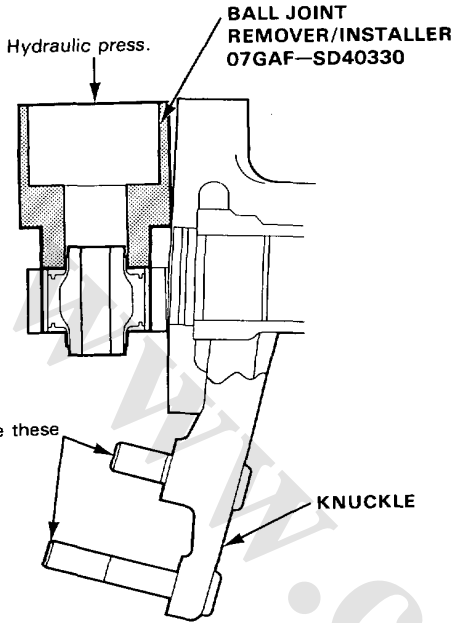

Installation:

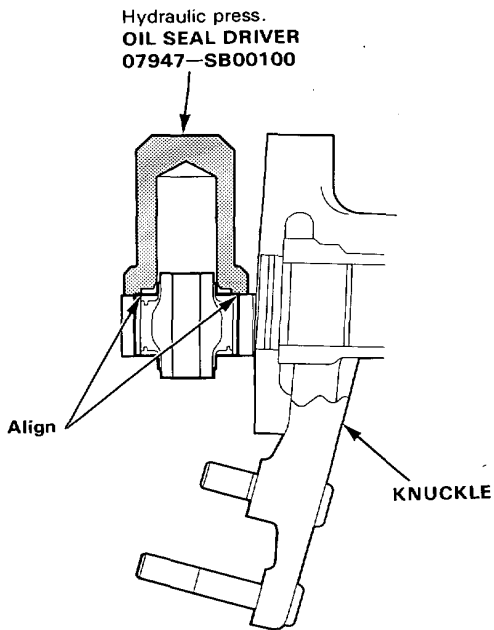


Lower Arm Bushings


(Lower Arm A/Lower Arm B)

Install the bushings so that 8.5 ± 0.5 mm (0.34 ± 0.02 in) protrudes from the lower arm A or B as shown.

Removal:

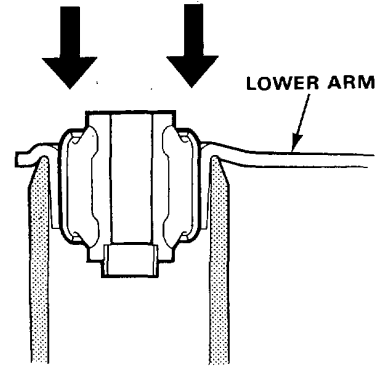


Installation:

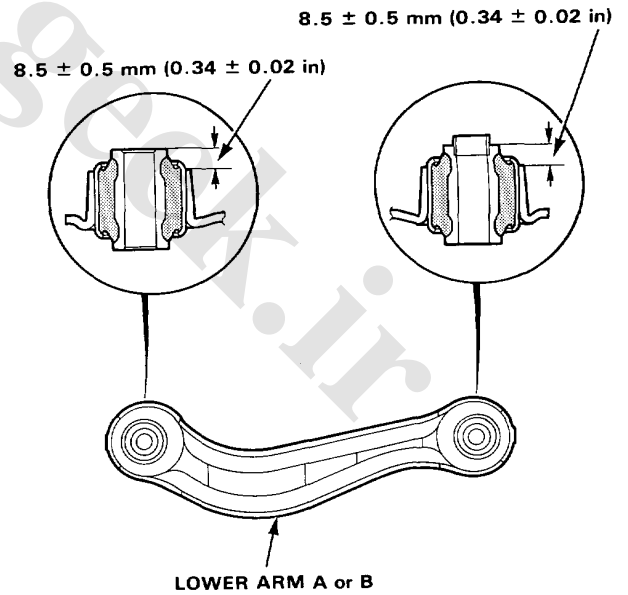


Rear Suspension

Damper Removal

1. Jack up the rear of car and support on safety stands in proper locations.
2. Remove the rear wheel.
3. Remove the trunk side garnish.
4. Remove the damper mounting nuts.

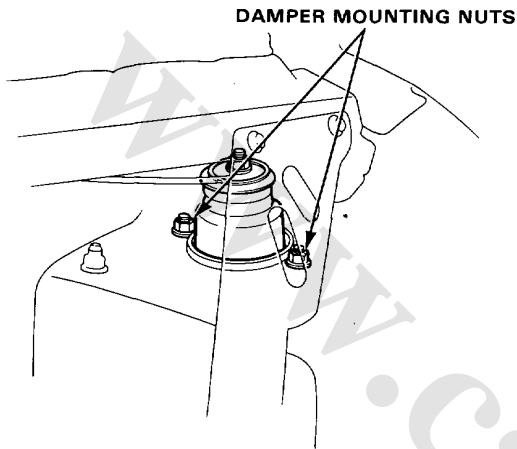


5. Break loose the upper ball joint (4WS: page 12-32, 2WS: page 12-33).
6. Remove the bolt fixing the brake hose to the damper assembly.
7. Remove the damper mounting bolt.
8. Depress the entire suspension, then remove the damper assembly.

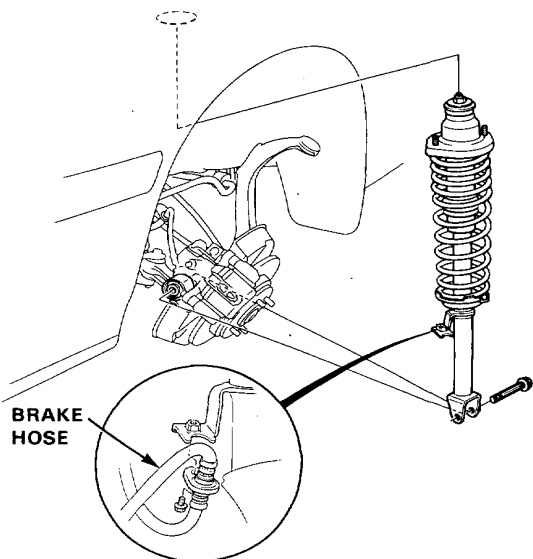

Damper Disassembly/Inspection

Disassembly:

1. Compress the damper spring with the spring compressor according to the manufacturer's instructions.
- CAUTION:** Do not compress the spring more than necessary to remove the 10 mm flange nut.
2. Remove the 10 mm flange nut from the damper assembly.

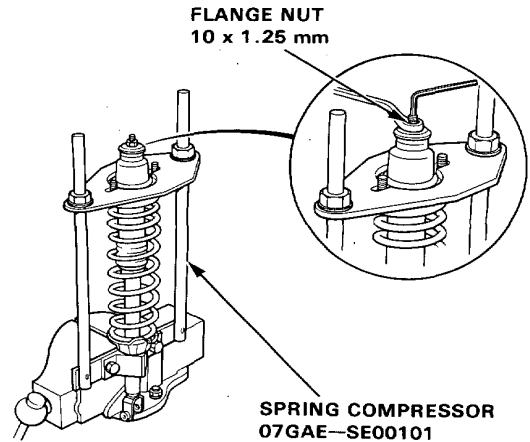


3. Remove the spring compressor and disassemble the damper as shown on page 12-40.

Inspection:

1. Reassemble all parts, except the spring.
2. Push on the damper assembly as shown.
3. Check for smooth operation through a full stroke, both compression and extension.


NOTE: The damper should move smoothly. If it does not (no compression or no extension), then gas is leaking, and the damper should be replaced.

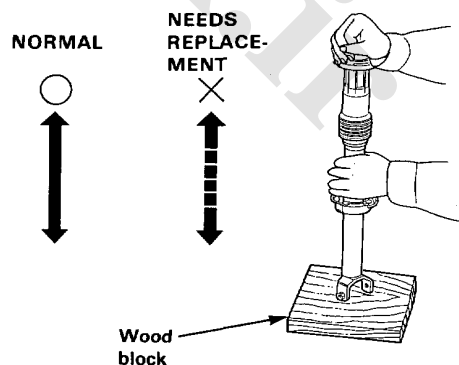

4. Check for oil leaks, abnormal noises or binding during these tests.

Rear Suspension


Inspection

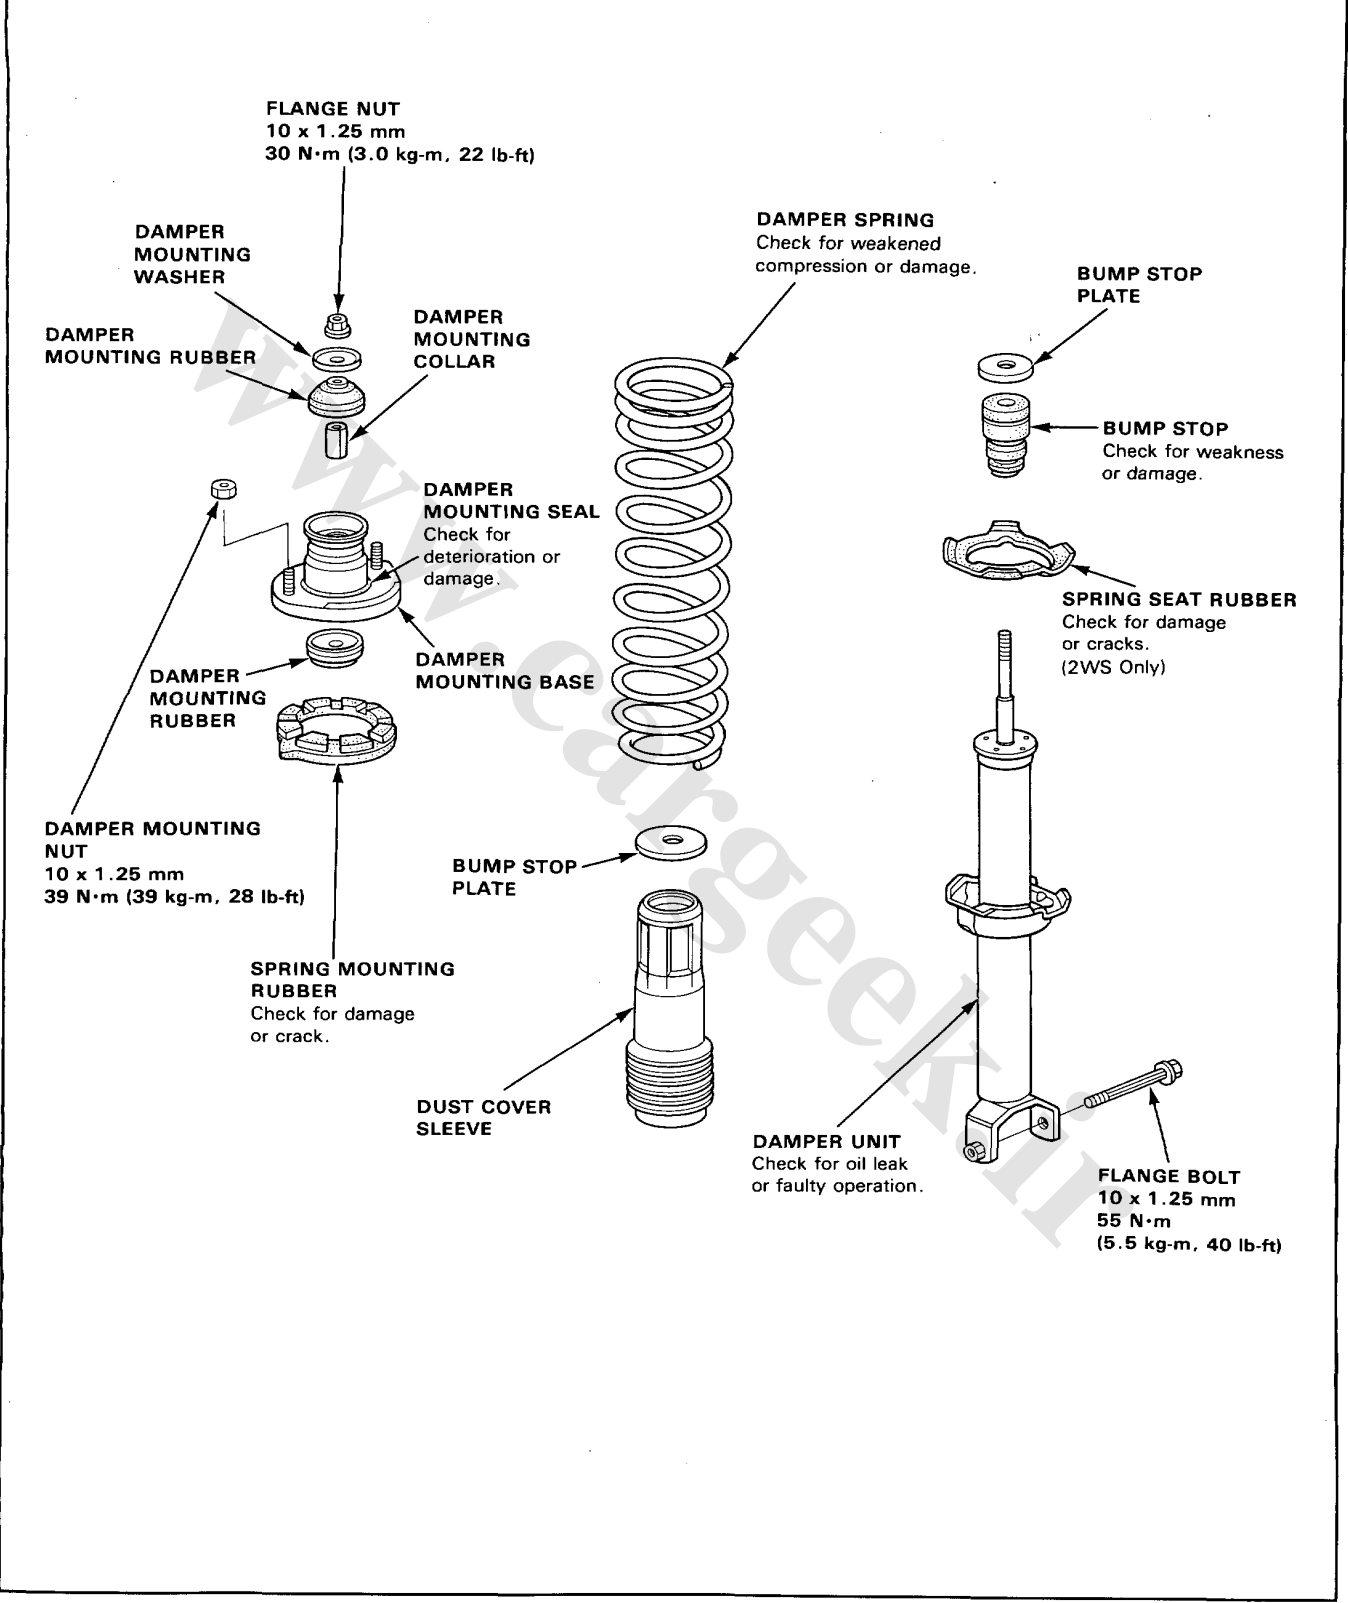



Reassembly


1. Install the damper unit on a spring compressor.
2. Install the spring seat rubber, bump stop, bump stop plate, dust cover sleeve, damper spring, damper spring bump stop plate, damper mounting collar, damper mounting rubber, spring mounting rubber and damper mounting base on the damper unit.
3. Compress the damper spring.

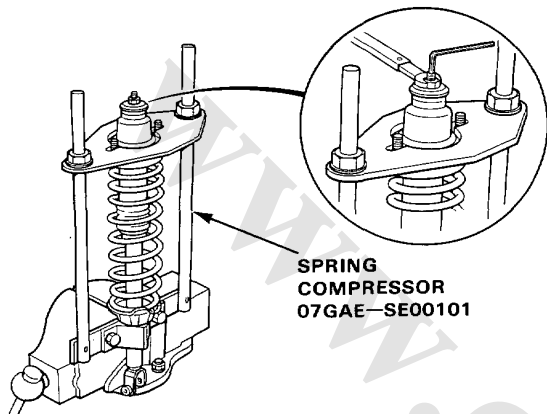

SPRING
COMPRESSOR
07GAE-SE00101


CAUTION: Install the damper mounting base so that the angle of the stud bolts is as shown.

Left side

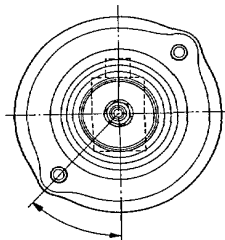

2WS: $44^{\circ}10' \pm 3^{\circ}$
4WS: $17^{\circ}00' \pm 3^{\circ}$


Right side

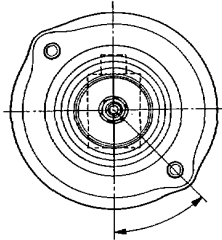

2WS: $44^{\circ}10' \pm 3^{\circ}$
4WS: $17^{\circ}00' \pm 3^{\circ}$


4. Install the damper mounting rubber and damper mounting washer, and loosely install a new 10 mm self-locking nut.
5. Hold the damper shaft and tighten the 10 mm flange nut.

30 N·m (3.0 kg-m, 22 lb-ft)

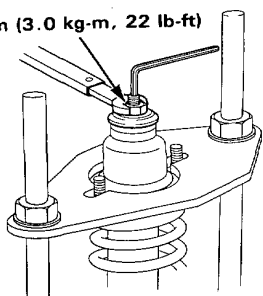

Installation


1. Lower the rear suspension and set the damper assembly in its original position.

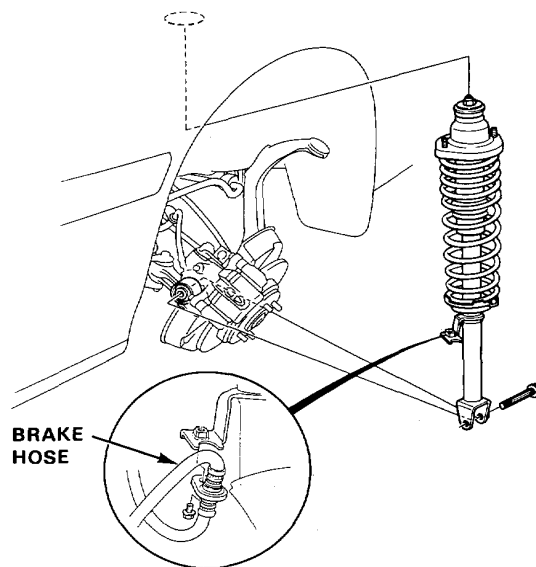

BRAKE
HOSE

2. Loosely install the damper mounting bolts.
3. Raise the rear suspension with a floor jack until the weight of the car is on the damper.
4. Reconnect the upper arm to the knuckle, tighten the ball joint nut to the specified torque, and install the new cotter pin.
5. Loosely install the damper mounting nuts.
NOTE: The bolts and nuts should be tightened with the damper under vehicle load.

39 N·m (3.9 kg-m, 28 lb-ft)

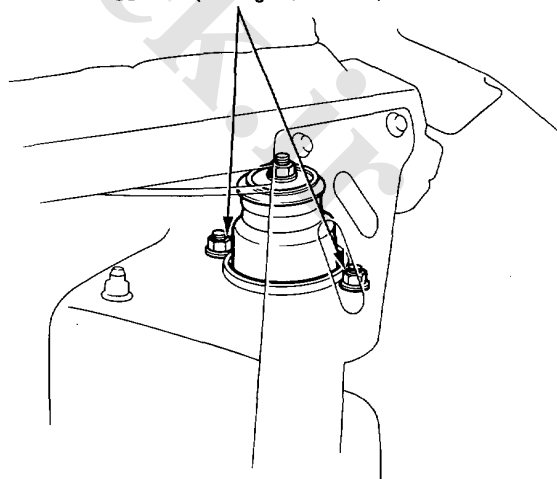

(cont'd)

[Special Tools](#)

[Illustrated Index](#)

[Pedal Height Adjustment](#)

[Parking Brake Adjustment](#)

Front Brakes

[Inspection](#)

[Brake Pad Inspection/
Replacement](#)

[Replacement](#)

Brake Calder

[Disassembly/Reassembly](#)

[Brake Disc Inspection](#)

[Bleeding](#)

Master Cylinder, Booster

[Index](#)

[Master Cylinder](#)

[Overhaul/Inspection](#)

[Disassembly](#)

[Reassembly](#)

Brake Booster

[Testing](#)

[Pushrod Adjustment](#)

[Pushrod Clearance](#)

[Adjustment](#)

Rear Disc Brakes

[Inspection](#)

[Brake Pad/Disc Inspection
and Replacement](#)

Rear Caliper

[Disassembly](#)

[Reassembly](#)

Brake shoes

[Index and Inspection](#)

[Disassembly](#)

[Reassembly](#)

Wheel Cylinder

[Disassembly and Inspection](#)

Brake Hoses/Pipe

[Inspection](#)

[Brake Hoses Replacement](#)












Parking Brake

[Disassembly and Reassembly](#)

Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Page Reference
①	07HAE—SG00100	Brake Spring Compressor	1	13-25, 13-26, 13-27, 13-28, 13-29
②	07GAG—SE00100	Push rod Adjustment Gauge	1	13-17, 13-18
③	07914—SA50000	Snap Ring Pliers	1	13-26, 13-29
④	07973—SA50000	Rear Caliper Guide	1	13-25, 13-28
⑤	07921—0010001	Flare nut wrench	1	13-38
⑥	07LAF—SM40200	Brake spring installer	1	13-33, 13-35
⑦	07410—5790100	Pressure Gauge Attachment	2	13-16
⑧	07510—6340100	Pressure Gauge Joint Pipe	1	13-16
⑨	07HAK—SG00110	Pressure Gauge Joint Pipe	1	13-16
⑩	07510—6340300	Vacuum Joint Tube A	1	13-16
⑪	07404—5790300	Pressure Gauge Attachment	2	13-16
⑫	07410—5790500	Tube Joint Adaptor	1	13-16
⑬	07406—5790200	Pressure Gauges	2	13-16

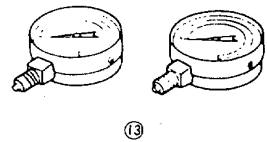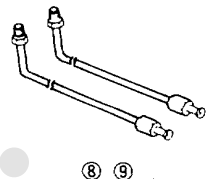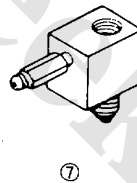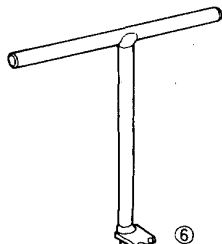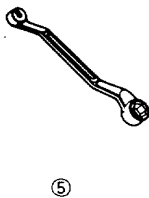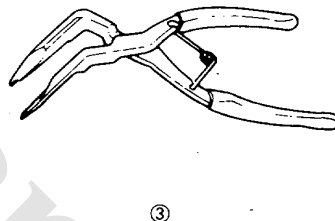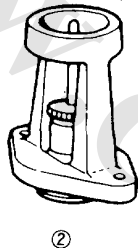



Brake


Illustrated Index

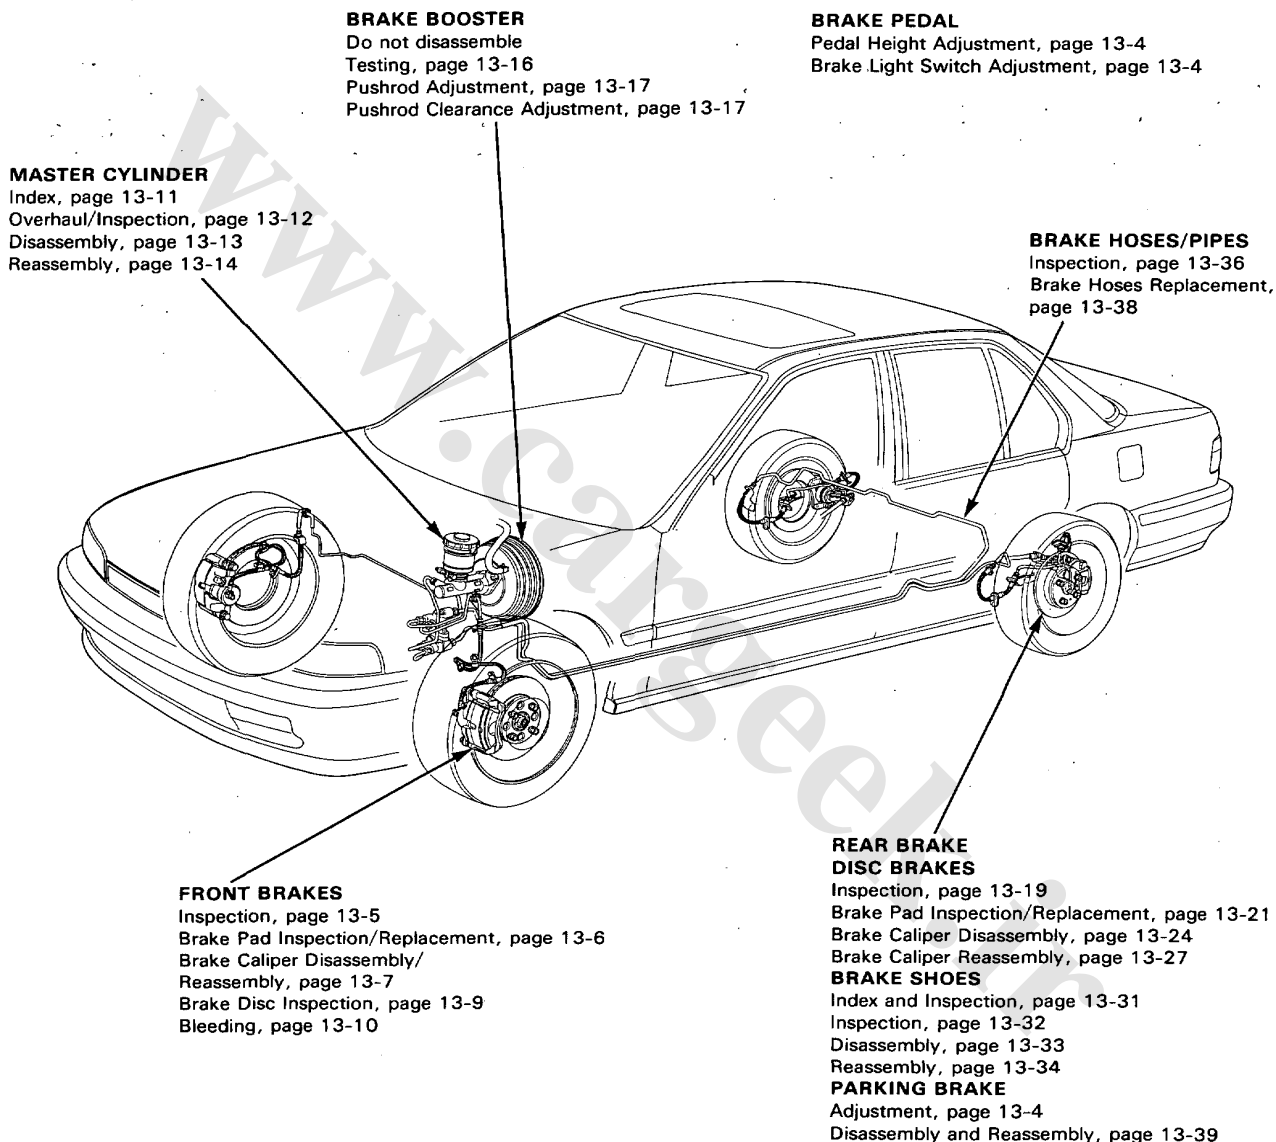

Pedal Height

Adjustment


1. Loosen the brake light switch locknut and back off the brake light switch until it is no longer touching the brake pedal.

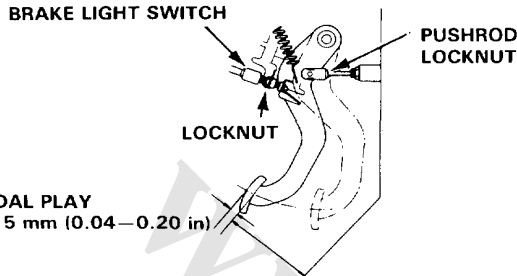

PEDAL PLAY
1–5 mm (0.04–0.20 in)

PEDAL HEIGHT:
MANUAL TRANSMISSION: 190 mm (7.5 in.)
AUTOMATIC TRANSMISSION: 195 mm (7.7 in.)
Measure without floor mat.


2. Loosen the pushrod locknut and screw the pushrod in or out with pliers until the pedal height from the floor is properly adjusted. After adjustment, tighten the locknut firmly.

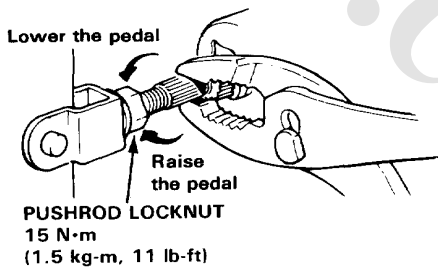

PUSHROD LOCKNUT
15 N·m
(1.5 kg-m, 11 lb-ft)

3. Screw in the brake light switch until its plunger is fully depressed (threaded end touching pad on pedal arm). Then back off switch 1/2 turn and tighten locknut firmly.

CAUTION: Check that the brake lights go off when the pedal is released.

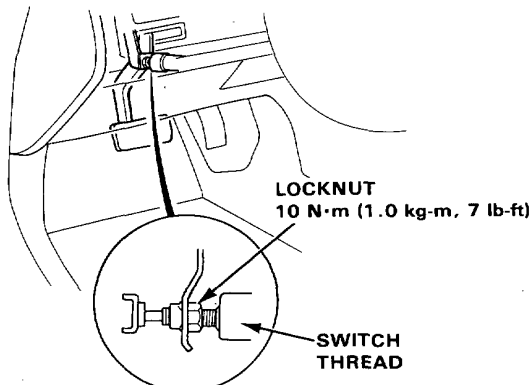

LOCKNUT
10 N·m (1.0 kg-m, 7 lb-ft)

**SWITCH
THREAD**

NOTE: After adjusting the pedal height, check for cruise control operation.


Parking Brake

Adjustment


NOTE: After rear brake caliper servicing, loosen the parking brake adjusting nut, start the engine and depress the brake pedal several times to set the self-adjusting brakes before adjusting the brake pedal.

⚠ WARNING Block the front wheels before jacking up the rear of the car.

1. Raise the rear wheels off the ground.
2. Make sure the lever of the rear brake caliper contacts the brake caliper pin.

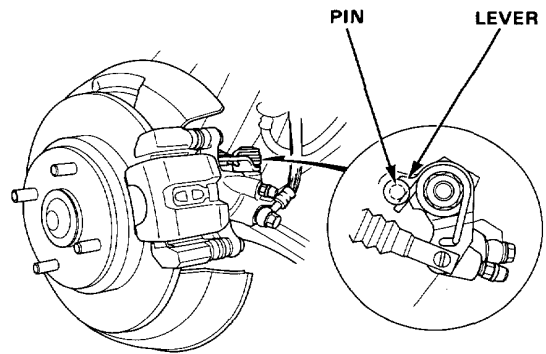

3. Pull the parking brake lever up one notch.
4. Tighten the adjusting nut until the rear wheels drag slightly when turned.
5. Release the parking brake lever and check that the rear wheels do not drag when turned. Readjust if necessary.
6. With the equalizer properly adjusted, the rear brakes should be fully applied when the parking brake lever is pulled up 4 to 8 clicks.

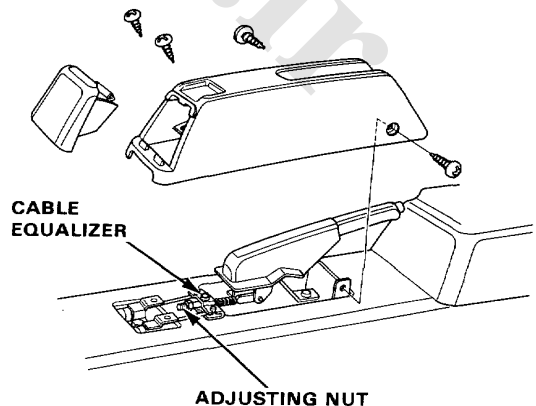



Front Brakes

Inspection

⚠ WARNING Do not use an air hose to blow the brake assembly clean. Use an OSHA-approved vacuum cleaner, to avoid breathing brake dust.


CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.

- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid.

NOTE:

- Coat piston, piston seal and caliper bore with clean brake fluid.
- Use only DOT 3 or DOT 4 brake fluid.

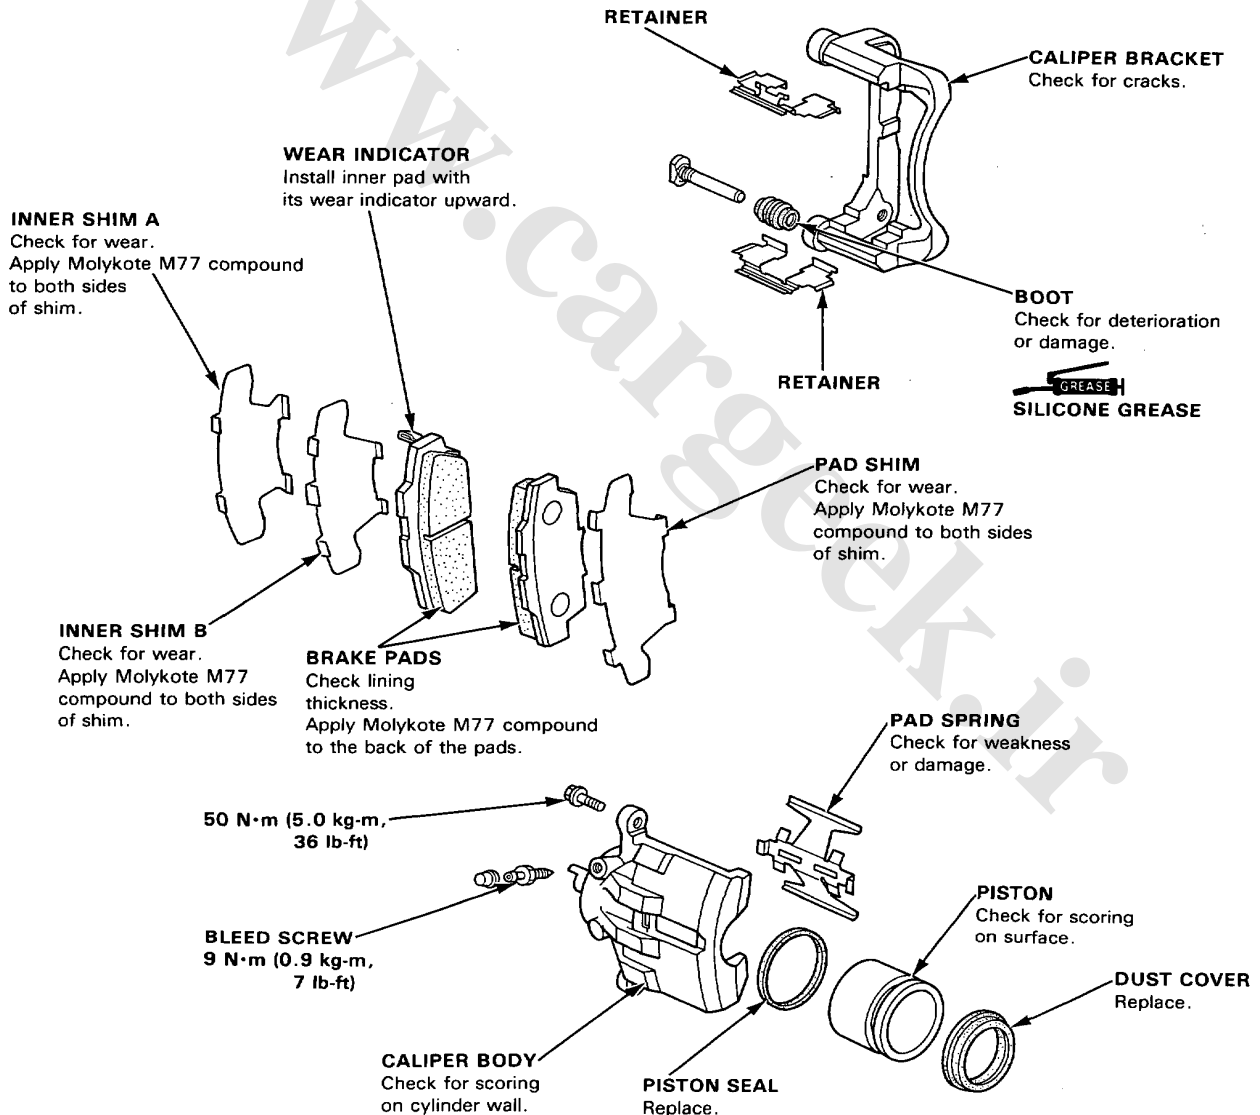


Brake Pad

Inspection/Replacement

▲ WARNING

- Do not use an air hose to blow the brake assembly clean. Use an OSHA-approved vacuum cleaner, to avoid breathing brake dust.
- Contaminated brake pads or disc reduce stopping power. Keep grease or oil off the brake pads or disc. Wipe any excess grease off the parts.

1. Remove the front wheels and support the front of the car on safety stands.
2. Remove the caliper bolt (flange bolt) and pivot caliper up out of the way.

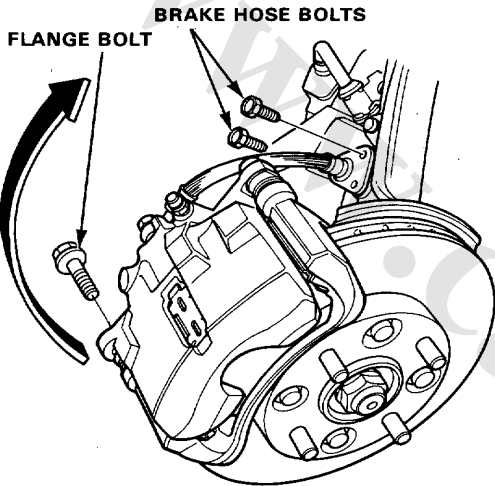


3. Remove the pad shims, pad retainers and pads.
4. Using vernier caliper, measure the thickness of each brake pad lining.

Brake Pad Thickness:

Standard: 12.5 mm (0.49 in.)
Service Limit: 1.6 mm (0.06 in.)

PGM-FI:


Standard: 12.0 mm (5.67 in.)
Service Limit: 1.6 mm (0.06 in.)

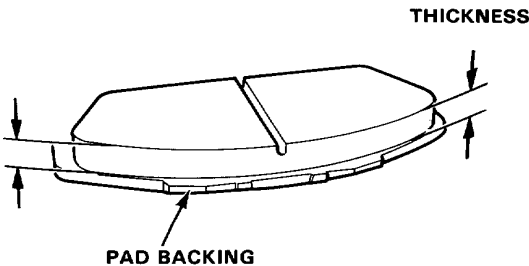


NOTE: Measurement does not include pad backing thickness.

5. If lining thickness is less than service limit, replace both pads as a set.

NOTE: Engagement of the brake may require a greater pedal stroke immediately after the brake pads have been replaced as a set. Several applications of the brake pedal will restore the normal pedal stroke.

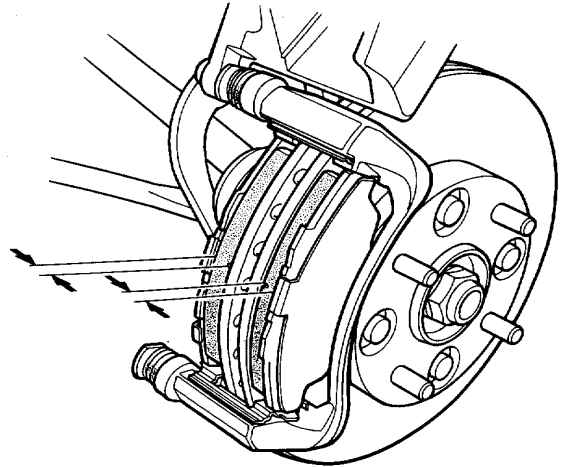

6. Clean the caliper thoroughly; remove any rust, and check for grooves or cracks.
7. Install the pad retainers.

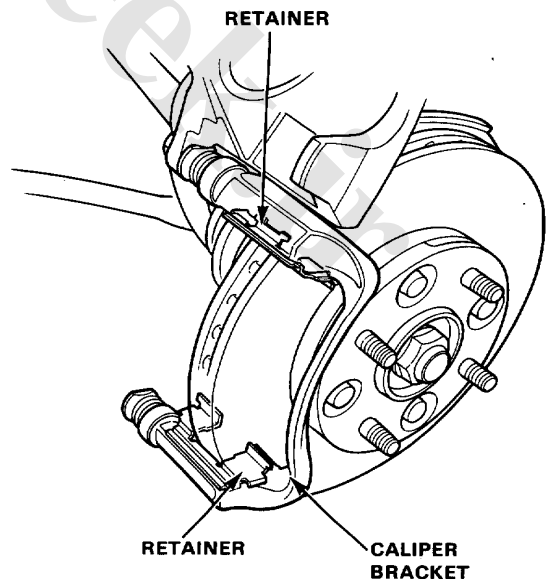




Brake Caliper

Disassembly/Reassembly


8. Apply Molykote M77 compound to both sides of the pad shims and the back of the pads.
9. Install the brake pads and pad shims correctly.

NOTE: Install the pad with the wear indicator on the inside.

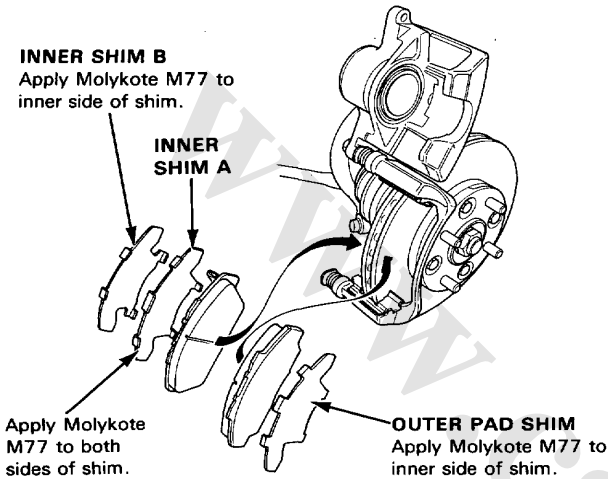

10. Push in the piston so that the caliper will fit over the pads. Keep the boot in position to prevent damaging the boot when pivoting the caliper down.

11. Pivot the caliper down into position, then install the caliper bolt (flange bolt) and tighten to the specified torque.

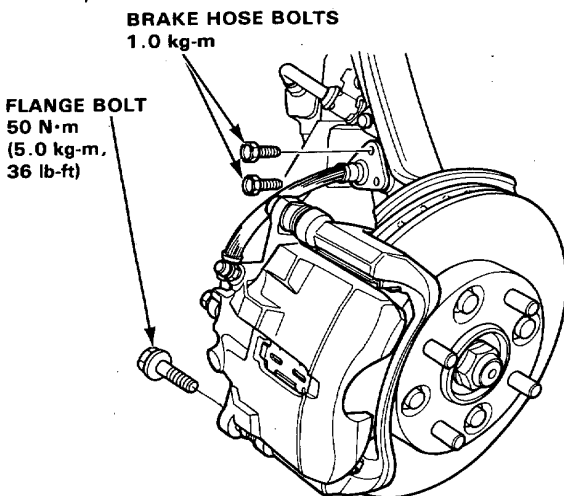

NOTE: Make sure the pin is clean before installation, then apply a clean silicone grease to the inside boot and pin.

12. Depress the brake pedal several times to make sure the brakes work, then roadtest.


CAUTION:

- Make sure all parts are clean before reassembly.
- Use only new replacement parts.
- Use only clean DOT 3 or DOT 4 brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted, plastic or rubber surfaces as it can damage the finish; Wash spilled brake fluid off immediately with clean water.

1. Remove the banjo bolt and disconnect the brake hose from the caliper.
2. Remove the caliper bolts, then remove the caliper.

BANJO BOLT
10 x 1.0 mm
35 N·m (3.5 kg-m, 25 lb-ft)

FLANGE BOLT
50 N·m (5.0 kg-m, 36 lb-ft)

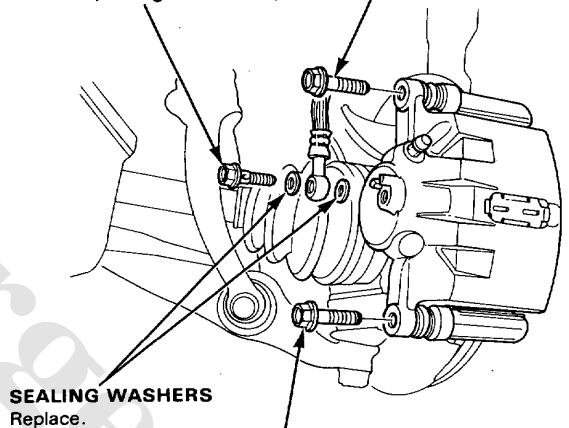

FLANGE BOLT
50 N·m (5.0 kg-m, 36 lb-ft)

(cont'd)


Brake Caliper

Disassembly/Reassembly (cont'd)

- Remove the pad spring.
Place a wooden block or shop rag in the caliper opposite the piston, then carefully remove the piston from the caliper by applying air pressure through the brake line hole.


⚠ WARNING

- Do not place your fingers in front of the piston.
- Do not use high air pressure; use an OSHA approved 30 PSI nozzle.

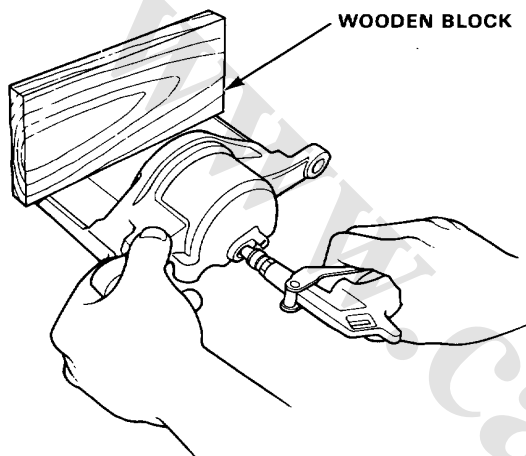


- Remove the piston boot and piston seal.

CAUTION: Take care not to damage the cylinder.

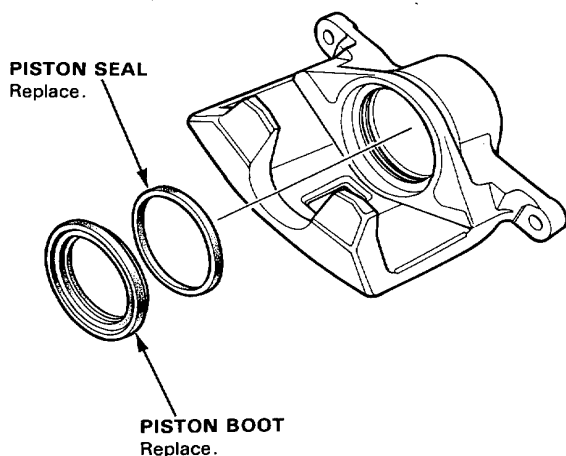


CAUTION:

- Make sure all parts are clean before reassembly.
- Use only new replacement parts.
- Use only clean DOT 3 or DOT 4 brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted, plastic or rubber surfaces as it can damage the finish.
- Wash spilled brake fluid off immediately with clean water.

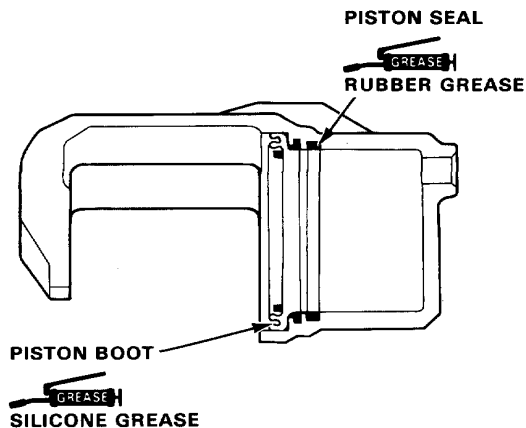

- Clean the piston and caliper bore with brake fluid and inspect for wear or damage.
- Apply rubber grease to a new piston seal, then install the piston seal in the cylinder groove.
- Apply silicone grease to a new piston boot, then install the piston boot.
- Lubricate the caliper cylinder and piston with brake fluid, then install the piston in the cylinder with the dished end facing in.

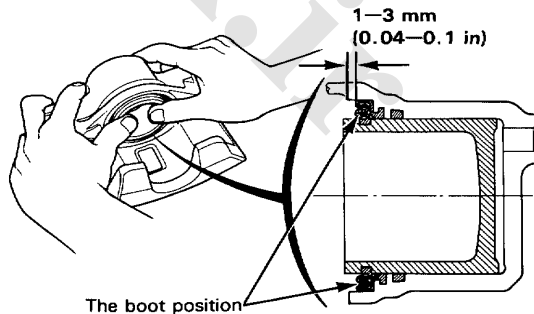

- Reinstall the caliper in the reverse order of removal.
- Fill the brake reservoir up and bleed the brake system (page 19-10).



Brake Disc

Run-Out Inspection

1. Remove the front wheels, and support the front of the car on safety stands. Install the flat washer and wheel nut.


CAUTION: Use wheel nuts and 3 mm thick flat washers to hold the disc securely.

2. Remove the caliper bolt, pivot the caliper up out of the way on the caliper bolt, then remove the pads and pad retainers.
3. Inspect the disc surface for grooves, cracks, and rust. Clean the disc thoroughly and remove all rust.
4. Mount a dial indicator as shown and measure the runout at 10 mm (0.390 in.) in from the outer edge of the disc.

Brake Disc Runout:

Service Limit: 0.1 mm (0.004 in.)


5. If the disc is beyond the service limit, refinish the rotor with an on-car brake lathe. The Kwik-Lathe produced by Kwik-Way Manufacturing Co. is approved for this operation.

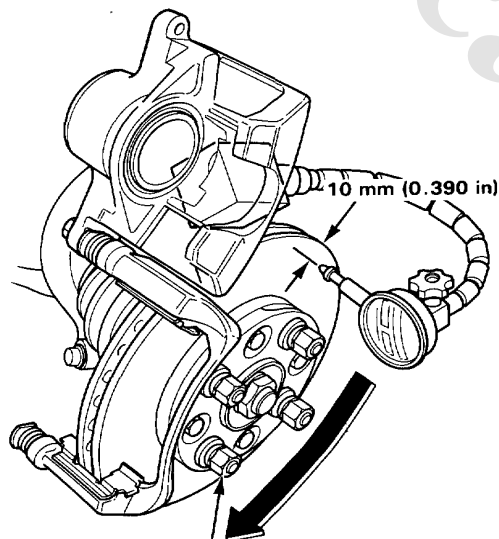

**WHEEL NUT
AND
THICK FLAT
WASHER
110 N·m
(11 kg-m, 80 lb-ft)**

Thickness and Parallelism Inspection

1. Remove the front wheels, and support the front of the car on safety stands.
2. Move the caliper and pads out of the way as described in the preceding column.
3. Using a micrometer, measure disc thickness at eight points, approximately 45° apart and 10 mm (0.390 in.) in from the outer edge of the disc.

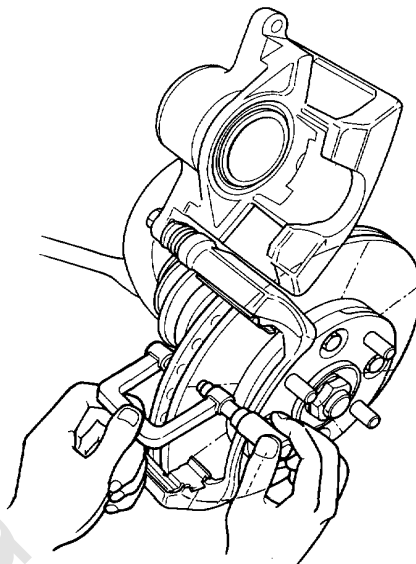

Brake Disc Thickness:

Standard: 23 mm (0.906 in.)

Max: Refinishing Limit: 21 mm (0.827 in.)

Brake Disc Parallelism:

The difference between any thickness measurements should not be more than 0.015 mm (0.0006 in.)

4. If the disc is beyond the limits for thickness or parallelism, refinish the rotor with an on-car brake lathe. The Kwik-Lathe produced by Kwik-Way Manufacturing Co. is approved for this operation.

NOTE: A new disc should be ground if its run-out is greater than 0.10 mm (0.004 in.).


Bleeding

CAUTION

- Make sure all parts are clean before reassembly.
- Use only clean DOT 3 or DOT 4 brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted, plastic or rubber surfaces as it can damage the finish; Wash spilled brake fluid off immediately with clean water.

NOTE: The reservoir on the master cylinder must be full at the start of bleeding procedure, and checked after bleeding each wheel cylinder. Add fluid as required. Use only DOT 3 or 4 brake fluid.


Bleeding Sequence

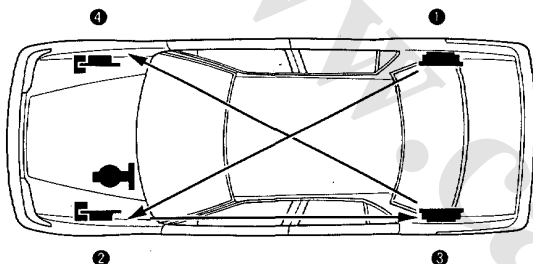

1. Have someone slowly pump the brake pedal several times, then apply steady pressure.
2. Loosen the brake bleed screw to allow air to escape from the system. Then tighten the bleed screw securely.
3. Repeat the procedure for each wheel in the sequence shown above, until air bubbles no longer appear in the fluid.
4. Check brake performance by road testing.


FRONT

9 N·m (0.9 kg-m, 7 lb-ft)

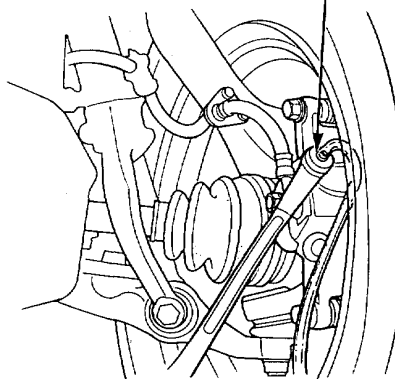


REAR Drum brake

7 N·m (0.7 kg-m, 5 lb-ft)

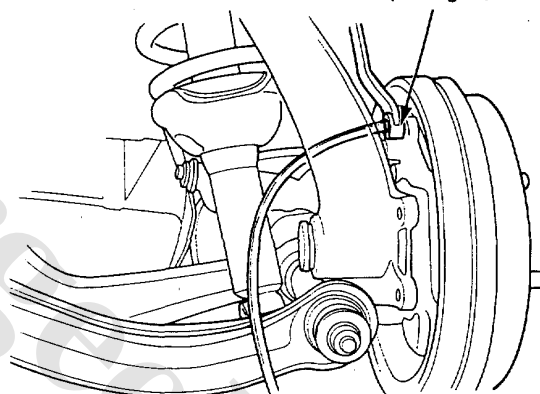

Disc brake

9 N·m (0.9 kg-m, 7 lb-ft)

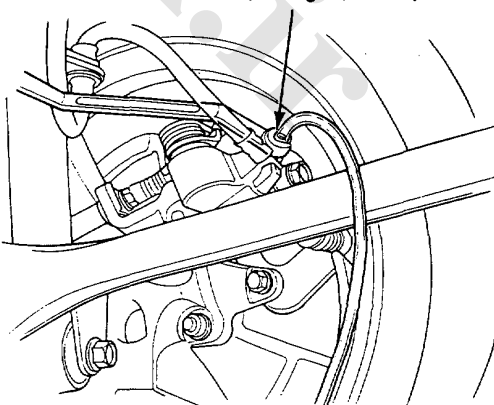




Master Cylinder, Booster

Index

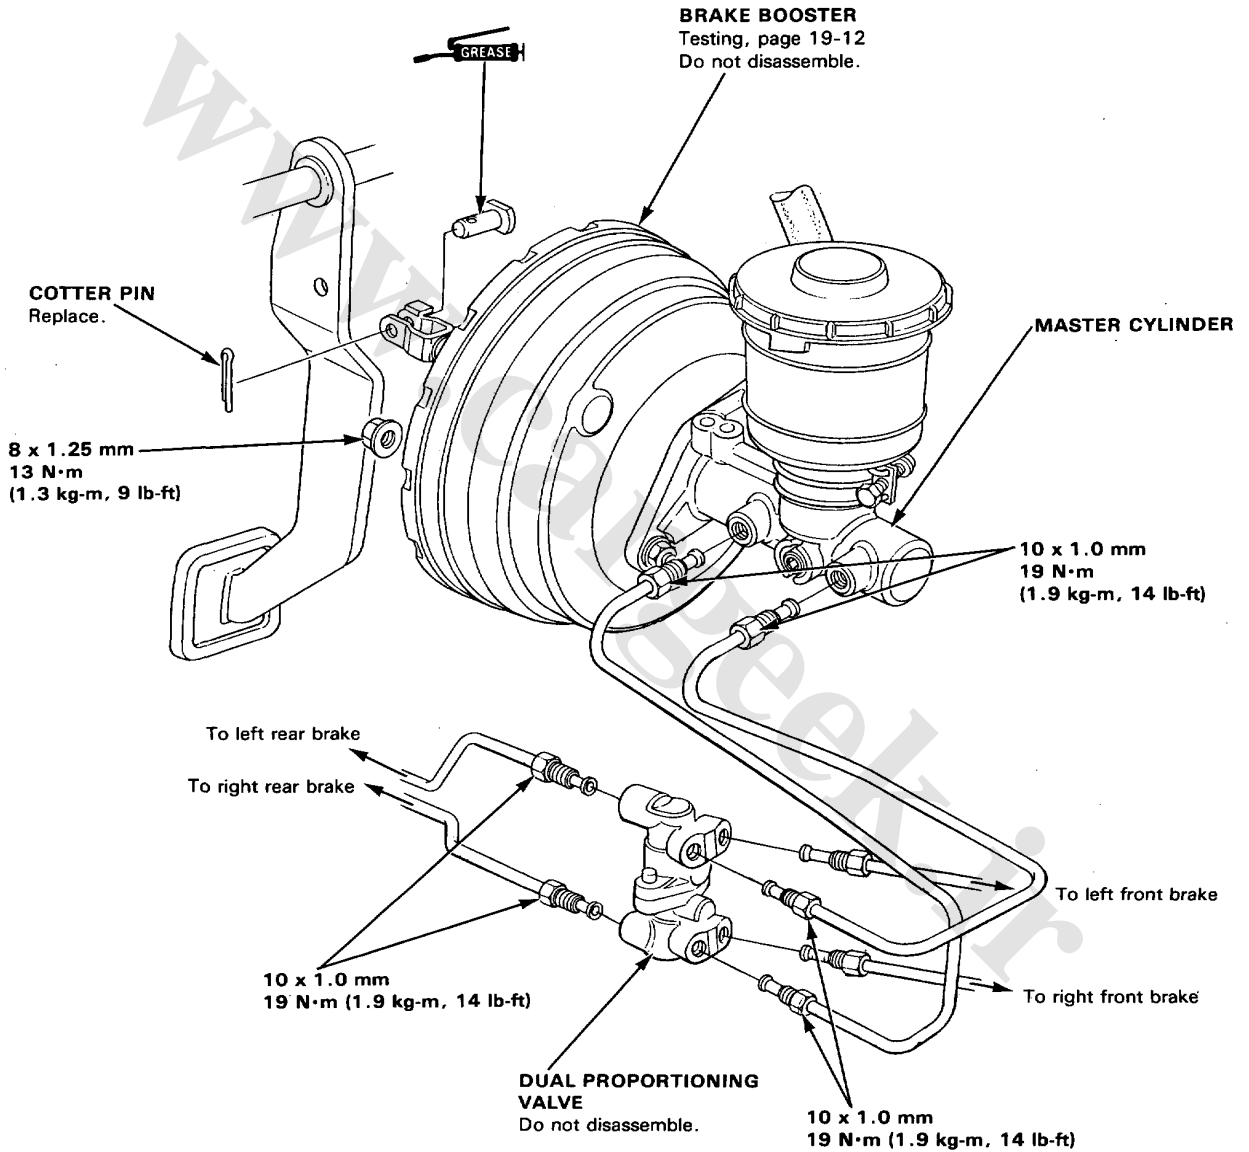

CAUTION:
Master cylinder and booster does not disassembly.
Replace them with a component assembly.



Master Cylinder

Overhaul/Inspection


CAUTION:

- Avoid spilling brake fluid on painted surfaces as severe damage can result. Wipe up spilled fluid at once and rinse well clean water.
-  This symbol represents brake fluid. Use only DOT 3 or 4 brake fluid.
-  Use only HONDA Brake Cylinder Grease (P/N 08733-B020E) or equivalent.
- Carefully inspect the bore of the master cylinder for pits, scratches or scoring.

- Replace the master cylinder if the bore is damaged or worn. Do not hone or attempt to refinish the bore.

NOTE:

- Wash all removed parts in brake fluid and blow dry with compressed air. Blow open all passages and fluid ports.
- To prevent damage, liberally apply clean brake fluid to the piston cups before installation.
- Do not attempt to refinish master cylinder bore. Replace if pitted or worn.
- Use only DOT 3 or DOT 4 brake fluid.

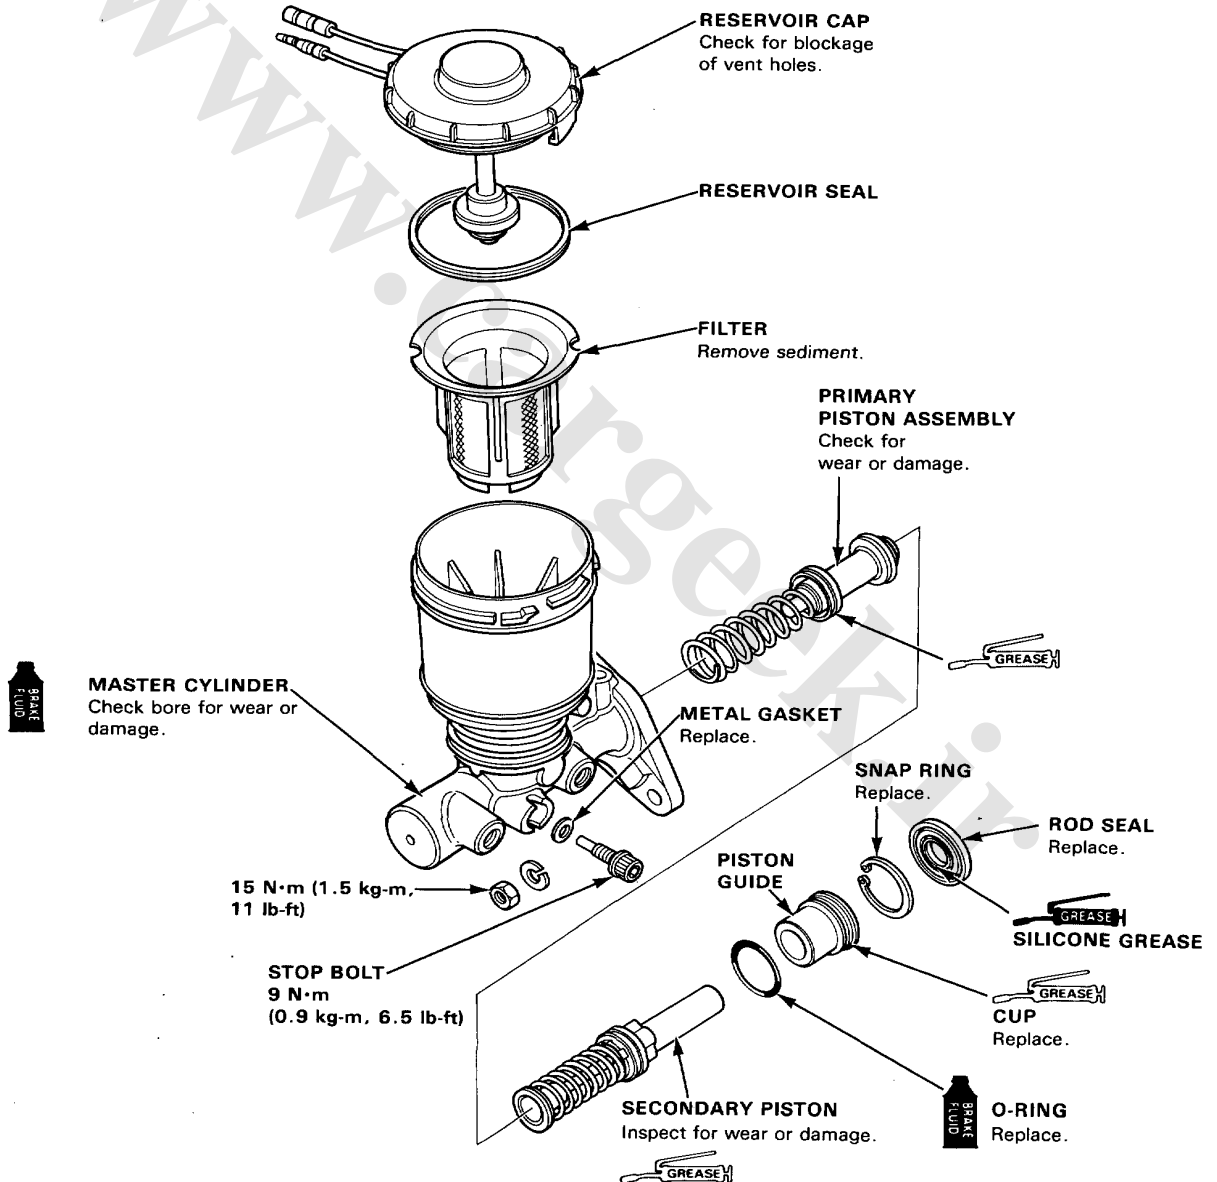




Disassembly

CAUTION:


- Avoid spilling fluid on painted, plastic or rubber parts as it may damage the finish.
- Plug the end of the brake hose with a shop rag to prevent brake fluid from flowing out of the brake hose after disconnecting.
- Use only new clean DOT 3 or DOT 4 brake fluid.
- Clean all parts thoroughly with brake fluid. Blow out all passages with compressed air.
- Do not allow foreign matter to enter the system.
- Be careful not to bend or damage the brake pipe when removing the master cylinder.

1. Remove the rod seal.

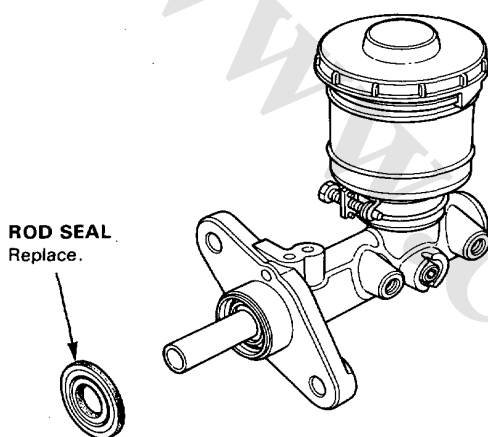


2. Push the secondary piston assembly, then remove the snap ring.

CAUTION: Avoid damaging the master cylinder wall.

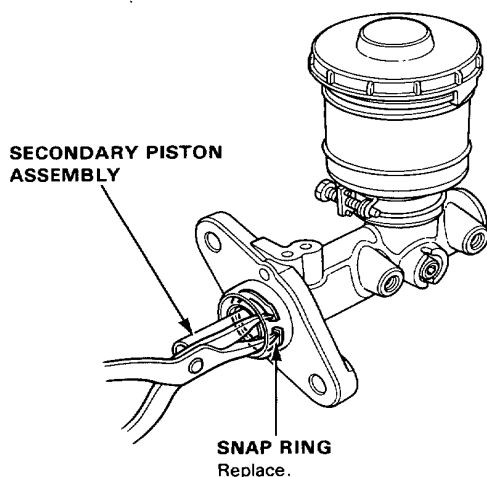

3. Remove the stop bolt while pushing in the secondary piston assembly.

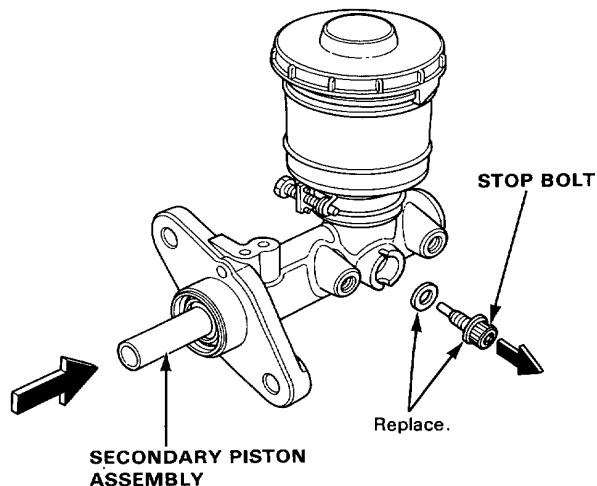

4. Remove the piston guide, secondary piston assembly and primary piston assembly.

NOTE: If the primary piston assembly is difficult to remove, apply compressed air from the primary piston side outlet.

CAUTION:

- Do not use high pressure air or bring the nozzle too close to the inlet.
- Place a shop rag over the master cylinder to prevent the primary piston from becoming a projectile.

5. Clean all parts with brake fluid.

Master Cylinder


Reassembly

CAUTION:

- Make sure all parts are clean before reassembly.
- Use only new replacement parts.
- Use only clean DOT 3 or DOT 4 brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted, plastic or rubber surfaces as it can damage the finish.
- Wash spilled brake fluid off immediately with clean water.


1. Lubricate the new piston assemblies with brake fluid.
2. Install the new O-ring and secondary cup onto the piston guide.

PISTON GUIDE ASSEMBLY

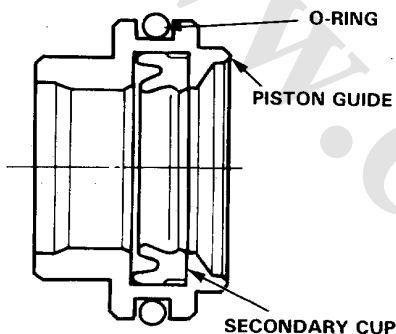


NOTE: Replace the secondary cup and piston guide as a set if necessary.

3. Make sure that the primary piston assembly and secondary piston assembly are in good condition.

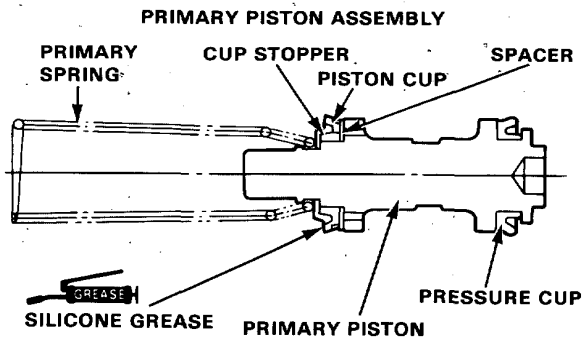

SECONDARY PISTON ASSEMBLY

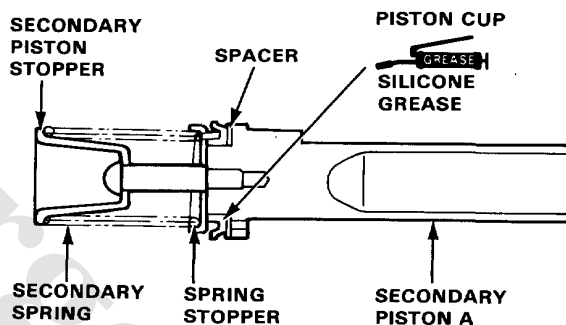





4. Install the piston assemblies in the master cylinder.

NOTE: To ease assembly, rotate the pistons while inserting.


5. Install the stop bolt and new sealing washer while pushing in the secondary piston assembly, then tighten the stop bolt.

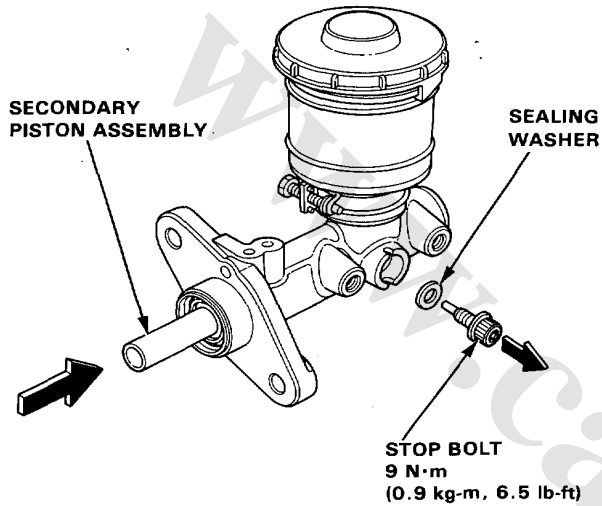

6. Install the snap ring while pushing in the secondary piston assembly.

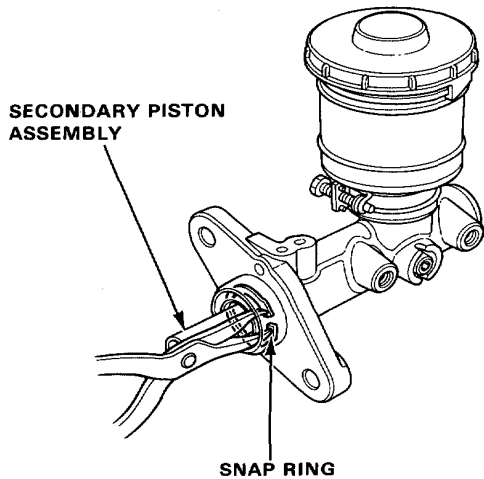

7. Install a new rod seal.

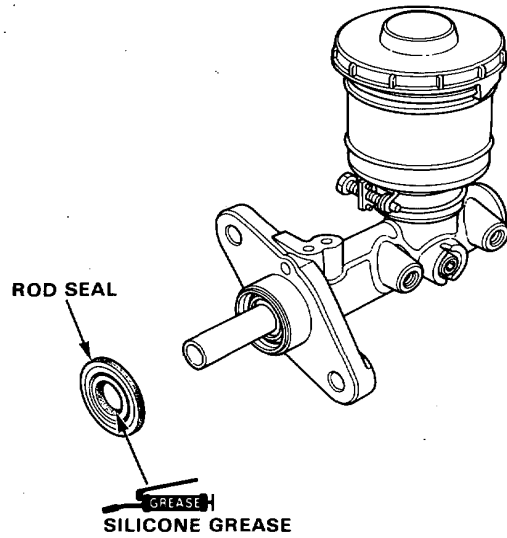

CAUTION: When connecting the brake pipes, make sure that there is no interference between the brake pipes and other parts

Brake Booster

Test

Leak Test


1. Install the Brake Power Kit (07504-6340100) as shown.
2. Start the engine, adjust the engine speed with the accelerator pedal so that the vacuum gauge readings show 300-500 mmHg (11.8-19.7 inHg), then stop the engine.
3. Read the vacuum gauge.

If the vacuum readings decreases 20 mmHg (0.8 inHg) or more after 30 seconds, check following parts for leaks.

- Check valve
- Vacuum hose
- Seals
- Diaphragm
- Master cylinder O-ring and cup

VACUUM JOINT TUBE A
07510-6340300 or
6340400

VACUUM GAUGE
07404-5790300

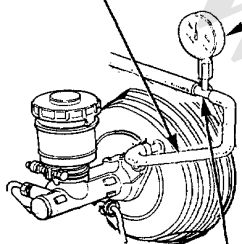

TUBE JOINT ADAPTOR
07410-5790500

Function Test

1. Install the vacuum gauge as same the leak test.
2. Connect the oil pressure gauges to the master cylinder using the attachments as shown.
3. Bleed air through the valves.

CAUTION: Avoid spilling brake fluid on painted, plastic or rubber parts as it may damage the finish.


PRESSURE GAUGE
07406-5790200

BLEED VALVE


ATTACHMENT C
07410-5790100

PRESSURE GAUGE
JOINT PIPE
07510-6340100

PRESSURE GAUGE JOINT PIPE (Use ALB Booster only)
07HAK-SG00110

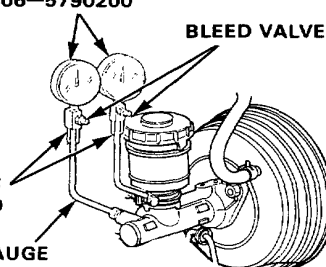

4. Start the engine.
5. Depress the brake pedal with a 200 N (20 kg, 44 lbs) of pressure. The following pressures should be observed at the pressure gauges in each vacuum.

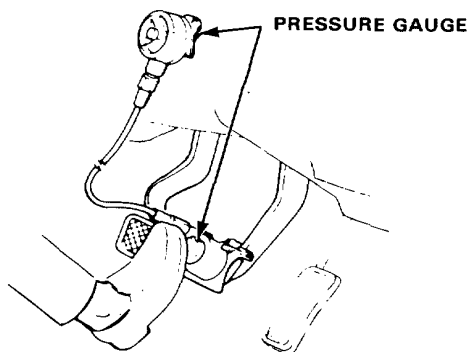


Vacuum mmHg	Line pressure kPa (kg/cm ² , psi)	
	Without ALB	ALB
0	921 (9.4, 134)	814 (8.3, 118)
300	5491 (56.0, 797)	6080 (62.0, 882)
500	8532 (87.0, 1238)	8159 (83.2, 1183)

6. Inspect the master cylinder pistons and cups in the readings do not fall within the limits shown above.

Check Valve Test


1. Remove the check valve, blow on one end of the hose and then the other; if you can blow through the booster end, but not through the manifold end, the check valve is OK.

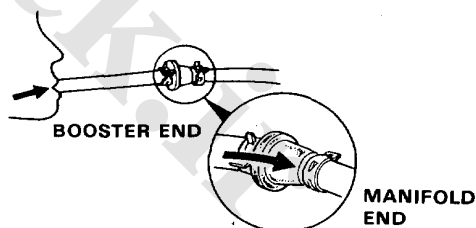



Pushrod Adjustment


Install the locknut and pushrod yoke on the pushrod, and adjust the pushrod length as shown.

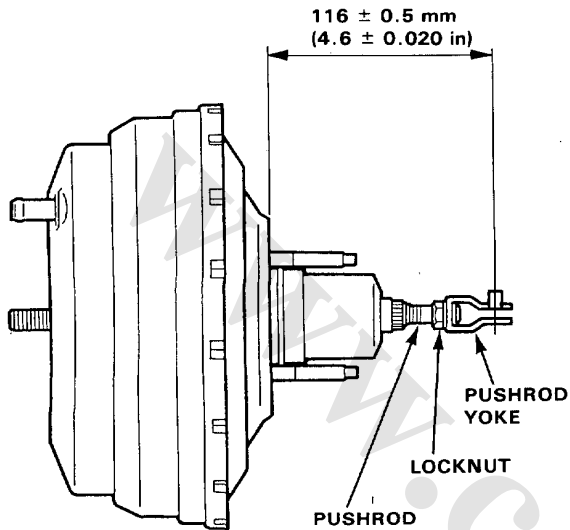

Pushrod Clearance Adjustment

NOTE: Master cylinder pushrod-to-piston clearance must be checked and adjustments made, if necessary, before installing or when replacing master cylinder or booster.


- Using the special tool, adjust bolt so the top of it is flush with end of master cylinder piston.

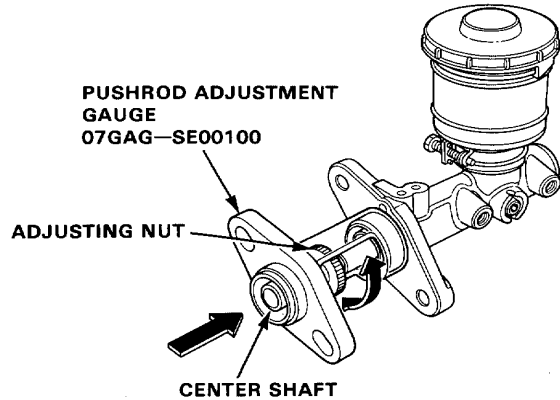

- Without disturbing the adjusting bolt's position, install the master cylinder rod seal on the special tool and put the special tool upside down on the booster.
- Install the master cylinder nuts and tighten to the specified torque.
- Connect the booster in-line with a vacuum gauge (0–30 in Hg) to the booster's engine vacuum supply, and maintain an engine speed that will deliver 500 mm Hg (20 in Hg) vacuum.
- With a feeler gauge, measure the clearance between the gauge body and the adjusting nut as shown.

CLEARANCE: 0–0.4 mm (0–0.016 in.)

- Inspection with the booster off the car.

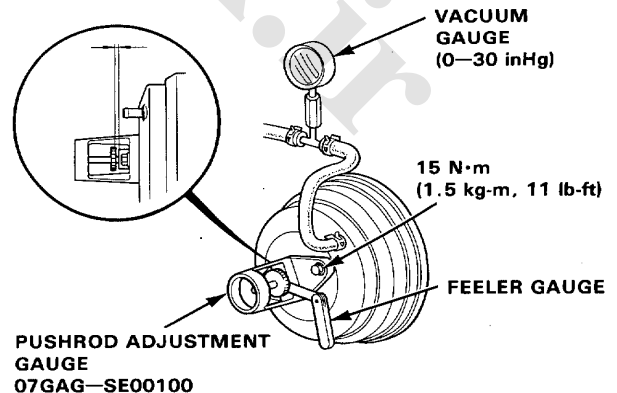


(cont'd)


Brake Booster

Pushrod Clearance Adjustment (cont'd)

- Inspection with the booster on the car.

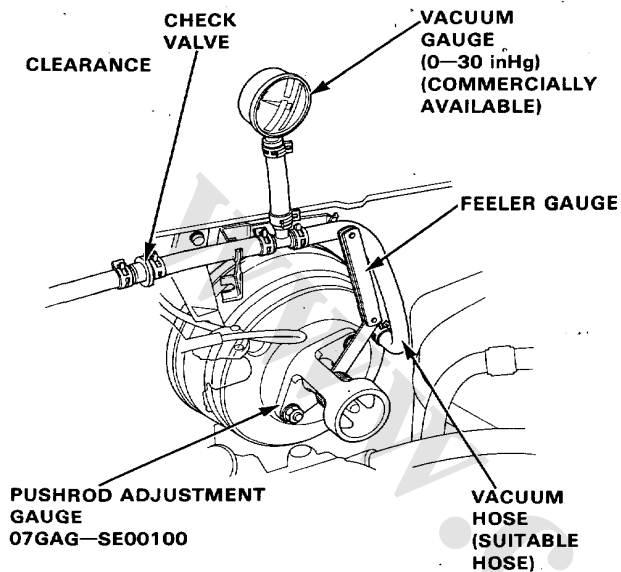

6. If clearance is incorrect, loosen the star locknut and turn the adjuster in or out to adjust. Hold the clevis while adjusting.
7. Tighten the star locknut securely.

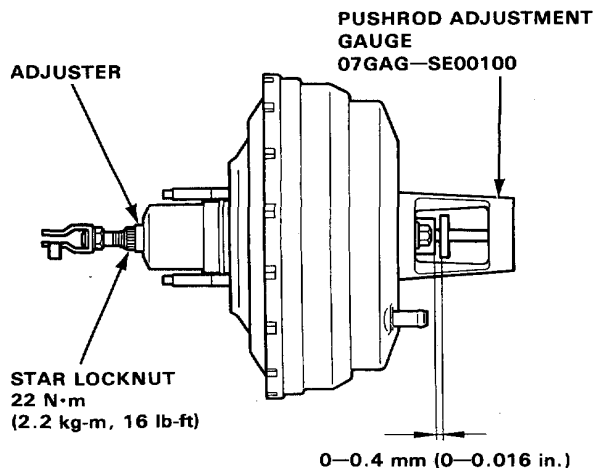

NOTE: If the clearance between the gauge body and adjusting nut is 0 mm, the pushrod-to-piston clearance is 0.4 mm. If the clearance between the gauge body and adjusting nut is 0.4 mm, the pushrod-to-piston clearance is 0 mm.

8. After adjustment, loosen the clevis end pushrod locknut and turn the pushrod to obtain the correct pedal height.

PEDAL HEIGHT FROM FLOOR:

MANUAL TRANSMISSION: 190 mm (7.5 in.)

AUTOMATIC TRANSMISSION: 195 mm (7.7 in.)
(with floor mat removed)

The pedal should have

1-5 mm free play.

9. Adjust the brake light switch (page 19-4).



Rear Disc Brakes

Inspection

WARNING Do not use an air hose to blow the brake assembly clean. Use an OSHA-approved vacuum cleaner, to avoid breathing brake dust.

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.

- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid.

NOTE:

- Coat piston, piston seal and caliper bore with clean brake fluid.
- Use only DOT 3 or DOT 4 brake fluid.

- : BRAKE CYLINDER GREASE (P/N 08733-B020E) OR EQUIVALENT RUBBER GREASE
- : SILICONE GREASE

(4 Wheel Steering)

PARKING NUT
10 x 1.25 mm
28 N·m (2.8 kg-m,
20 lb-ft)

SPRING WASHER

RETURN SPRING

CAM BOOT
Replace.

LEVER

CAM
Check for damage.

INNER PAD SHIM
Check for wear.
Apply Molykote M77 to both sides of shim.

BRAKE PADS
Check lining thickness.

ARM

PIN BOOT
Check for deterioration or damage.

CALIPER BRACKET
Check for cracks.

RETAINER
Check for weakness or damage.

PAD SPRING
Check for wear or damage.

OUTER PAD SHIM
Check for wear.
Apply Molykote M77 to both sides of shim.

BLEED SCREW
9 N·m (0.9 kg-m,
7 lb-ft)

CALIPER BODY
Check for scoring on cylinder wall.

SLEEVE PISTON
Check for wear or damage.

SPACER **ADJUSTING SPRING B**
Check for weakness.

SPRING COVER
Check for damage.

ROD

O-RING
Replace.

CUP
Replace.

ADJUSTING BOLT
Check for wear or damage.

BEARING A
Check for damage.

RETAINING RING


PISTON BOOT
Replace.

PISTON ASSEMBLY
Check for scoring on the surface.

PISTON SEAL
Replace.


23 N·m (2.3 kg-m,
17 lb-ft)

PIN

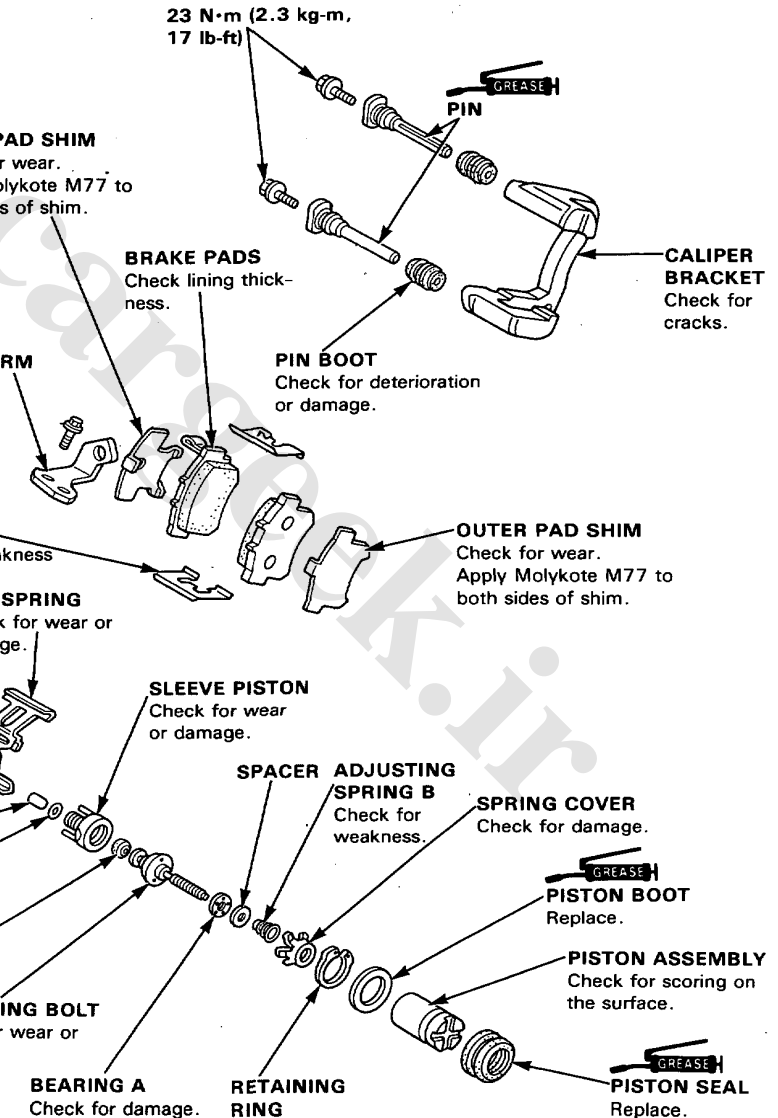

Inspection (cont'd)

(2 Wheel Steering)

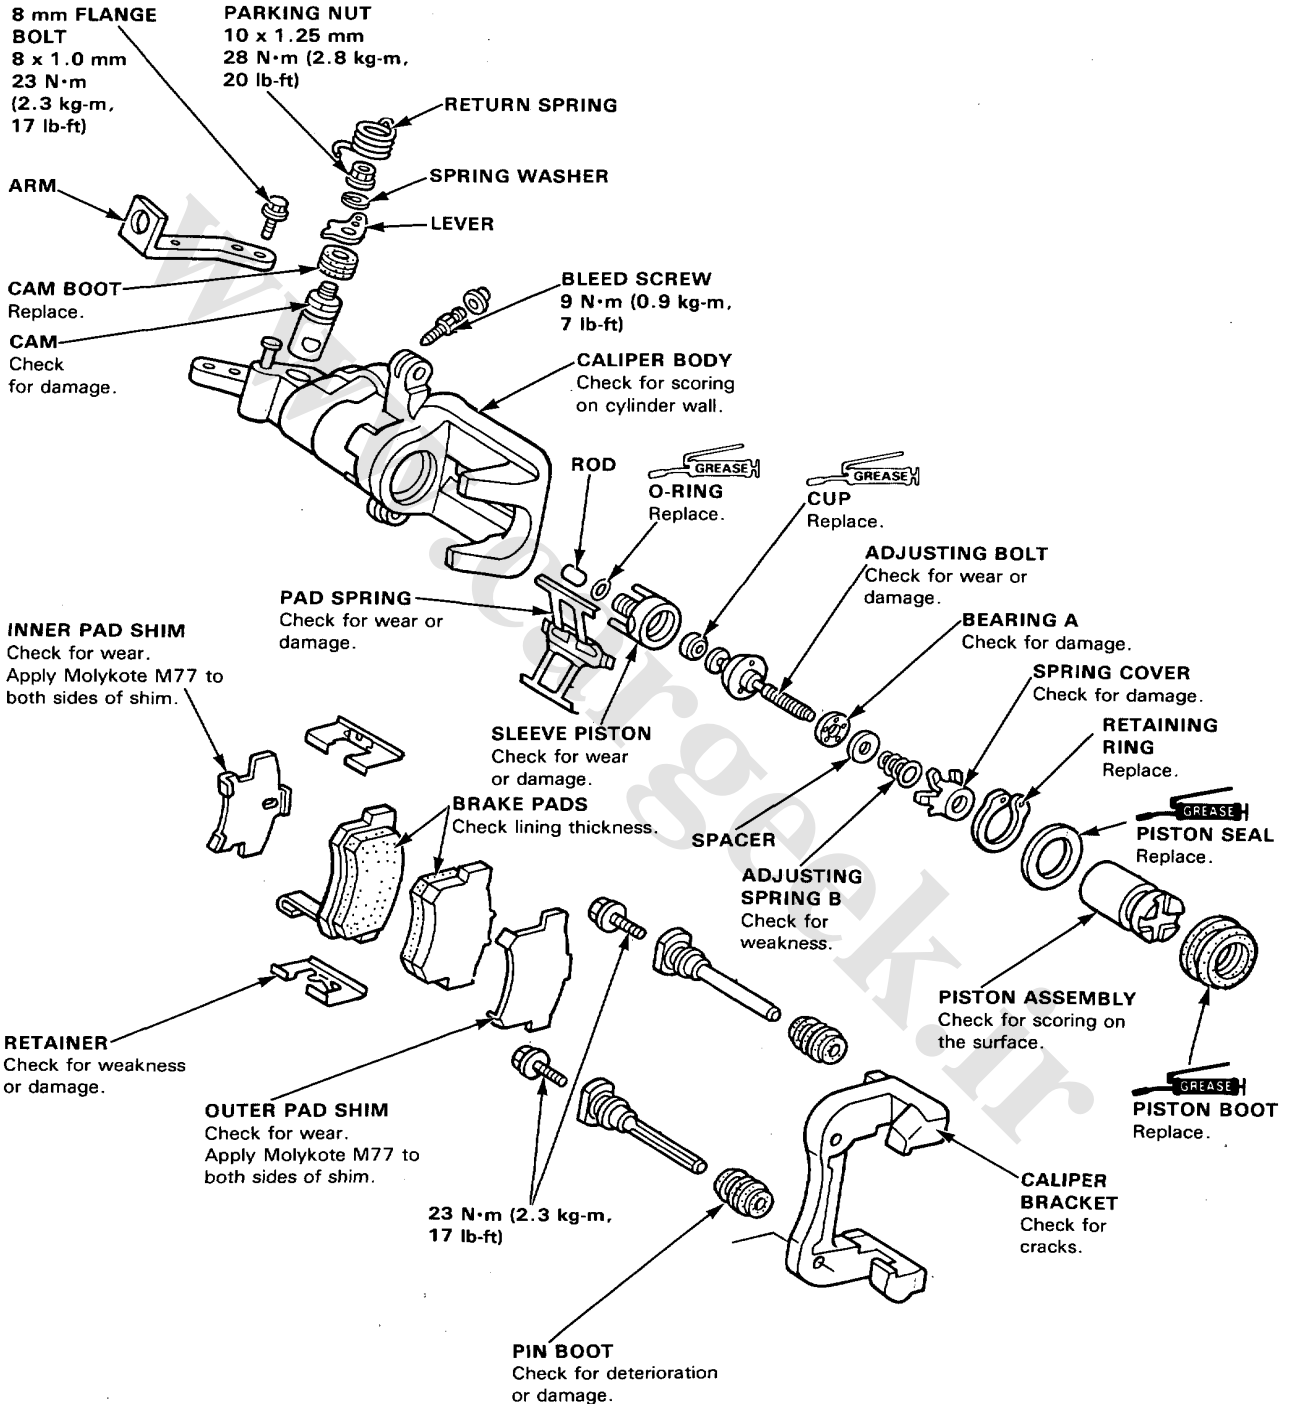




Brake Pad/Disc

Inspection and Replacement


1. Block the front wheels, support the rear of the car on safety stands, then remove the rear wheels.
2. Remove the caliper shield.
3. Remove the two caliper bolts.

(4WS)

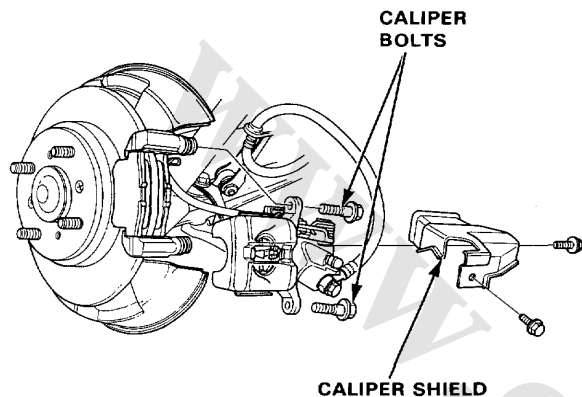

5. Remove the pads and measure the thickness of each brake pad lining using a vernier caliper.


Brake Pad Thickness:
Standard: 9.0 mm (0.35 in.)
Service Limit: 1.6 mm (0.06 in.)

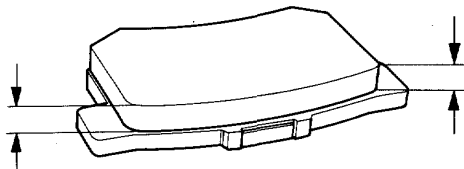

NOTE: Measurement does not include pad backing thickness.

6. If the lining thickness is less than service limit, replace the brake pads as a set.


(4WS) as shown:

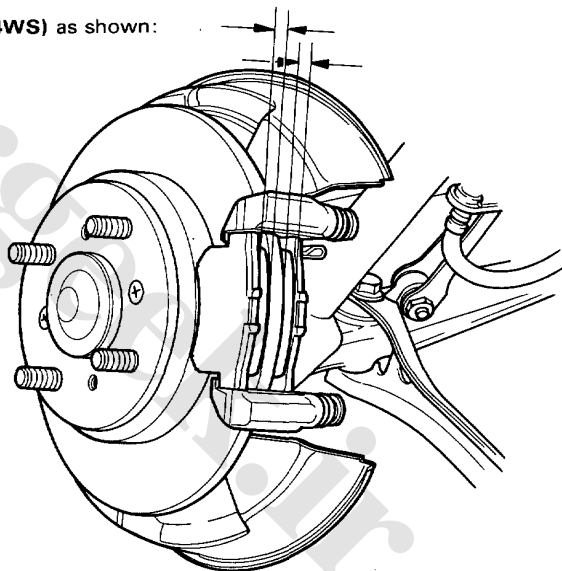

(2WS)

8 mm FLANGE BOLTS

CALIPER SHIELD

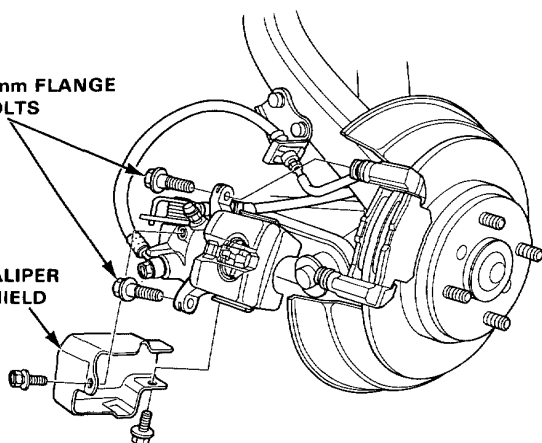

4. Remove the pad shims, pad retainers and pads.

Brake Pad/Disc


Inspection and Replacement (cont'd)

7. Inspect the disc surface for grooves, cracks, and rust. Clean the disc thoroughly and remove all rust.
8. Mount a dial indicator as shown and measure the runout at 10 mm (0.390 in.) in from the outer edge of the disc.


CAUTION: Use wheel nuts and 3 mm thick flat washers to hold the disc securely.

Brake Disc Run-out;
Service Limit: 0.15 mm (0.006 in.)

9. Resurface or replace the brake disc if beyond the service limit.

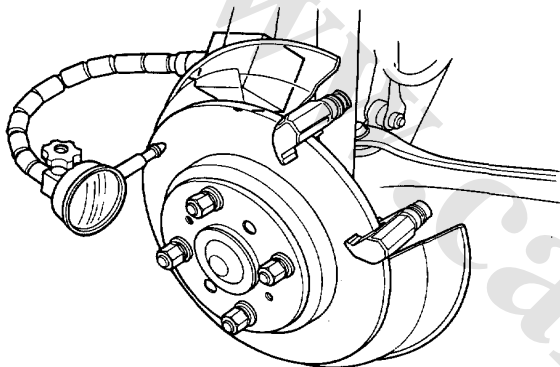

10. Using a micrometer, measure the rear brake disc thickness at eight points, approximately 45° apart and 10 mm (0.390 in.) in from the outer edge of the disc.

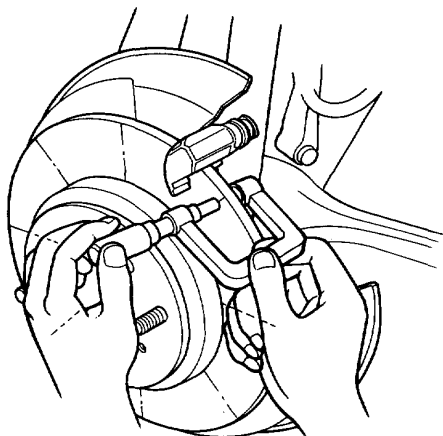


11. Replace the disc if it exceeds the following service limits.

Brake Disc Thickness:
Standard: 23.0 mm (0.91 in.)
Service Limit: 21.0 mm (0.83 in.)


Brake Disc Parallelism:
The difference between any thickness measurements should not be more than 0.015 mm (0.0006 in.).

12. Resurface or replace the brake disc if beyond the limits.
NOTE: A new disc should be resurfaced if its run-out is greater than 0.15 mm (0.006 in.).
13. Remove the two caliper bracket bolts and caliper bracket.

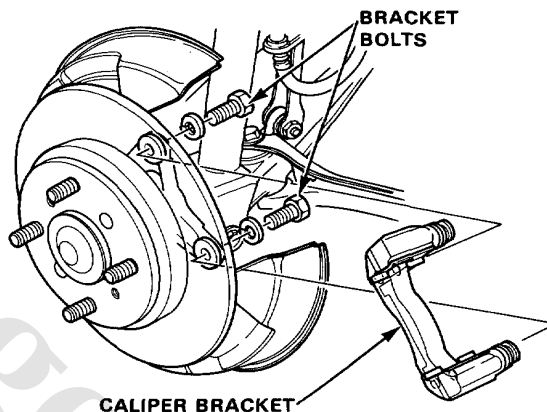

14. Remove the two 6 mm screws and brake disc.


NOTE: (Without 4WS) If the brake disc is difficult to remove, install 8 mm bolts into the threaded holes and tighten them.

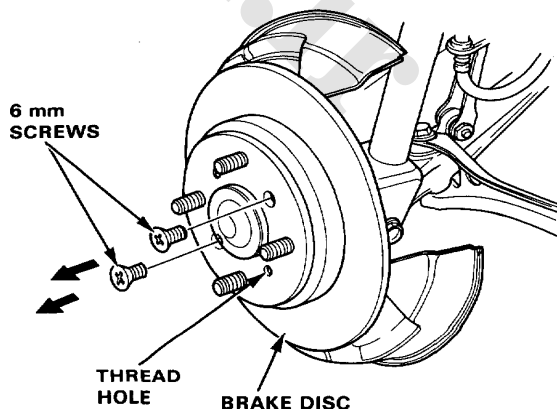




15. Install the new or resurfaced brake disc.
16. Clean the caliper bracket and retainers, then install the caliper bracket with two bolts and retainers.

Install the new brake pads and pad shims onto the caliper bracket.

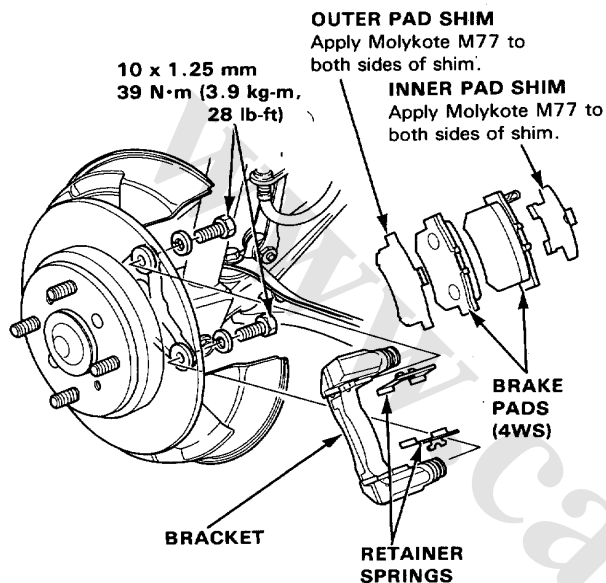


17. Rotate the caliper piston clockwise into place in the cylinder, then align the cutout in the piston with the tab on the inner pad by turning the piston back.

CAUTION: Lubricate the boot with silicone grease to avoid twisting the piston boot. If the piston boot is twisted, back it out so it sits properly.

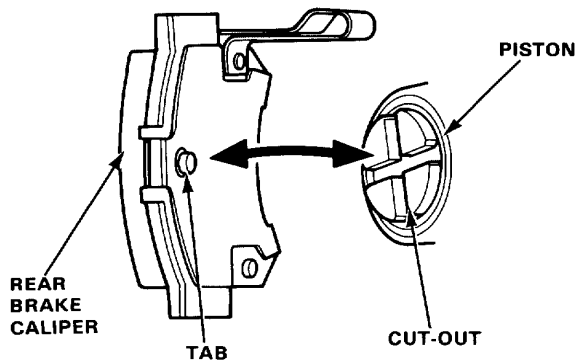


18. Install the brake caliper and caliper shield.

(4WS)

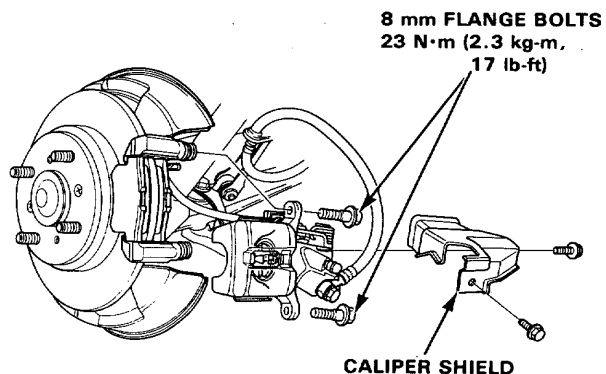

(2WS)

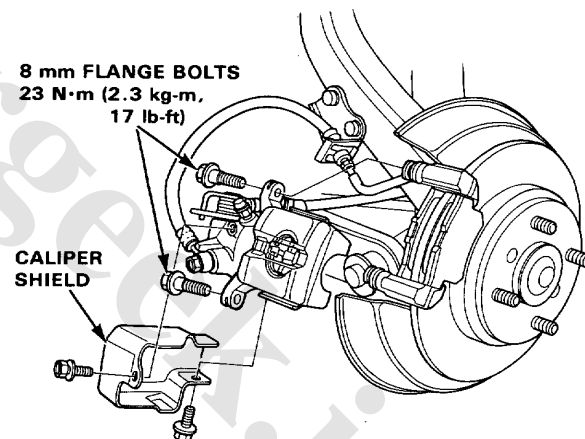


Rear Caliper

Disassembly

CAUTION:

- Make sure all parts are clean before reassembly.
- Use only new replacement parts.
- Use only new clean DOT 3 or DOT 4 brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted, plastic or rubber surfaces as it can damage to finish. Wash spilled brake fluid off immediately with clean water.


1. Remove the caliper shield (page 19-21).
2. Disconnect the parking brake cable from the lever on the caliper by removing the lock pin.

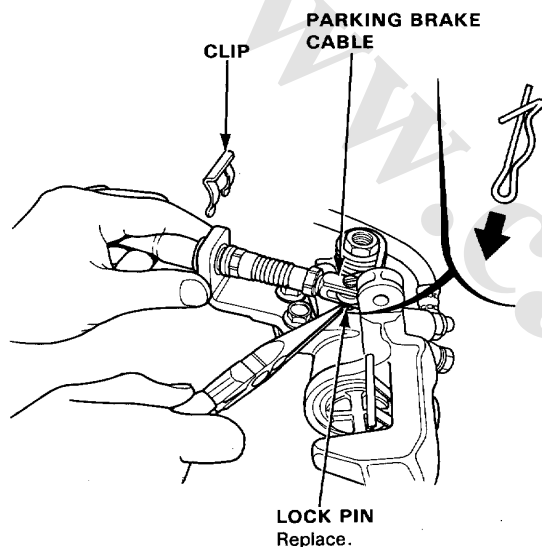

3. Remove the banjo bolt and disconnect the brake hose from the caliper.
4. Remove the two caliper mounting bolts and the caliper from the bracket.

CAUTION:


- Thoroughly clean the outside of the caliper to prevent dust and dirt from entering inside.
- Plug the end of the brake hose to prevent brake fluid from flowing out.

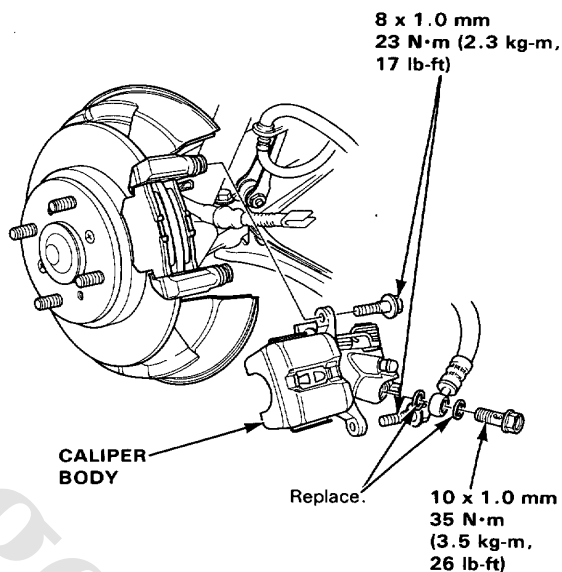




- 5. Remove the pad spring from the caliper.
- 6. Remove the piston and piston boot while rotating the piston.

CAUTION: Avoid damaging the piston and piston boot.

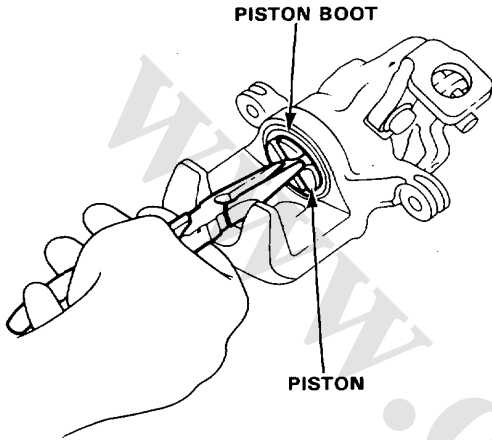


- 7. Remove the circlip, then washer, adjusting spring A, and the adjusting nut from the piston.

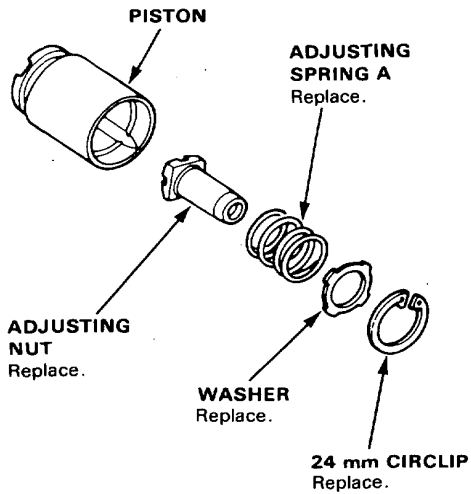


- 8. Remove the piston seal.

CAUTION: Take care not to damage the cylinder bore.

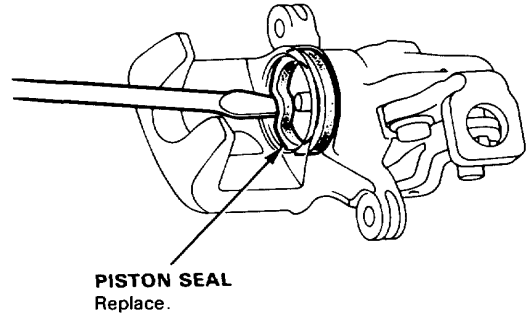

- 9. Install the special tool in the cylinder, aligning the cutout on the tool with the tab on the spring cover.

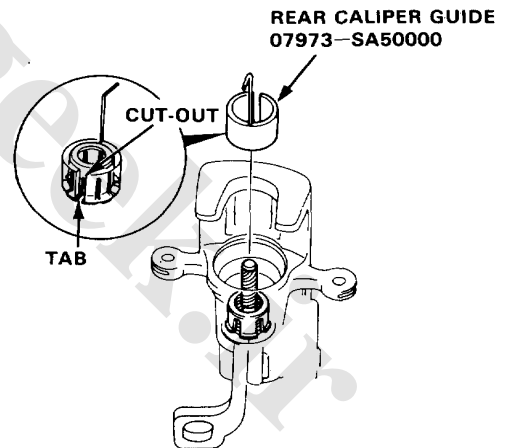


(cont'd)


Rear Caliper

Disassembly (cont'd)


10. Install the special tool between the caliper body and rear caliper guide as shown.
11. Compress the adjusting spring B by turning the shaft of the special tool, then remove the circlip with snap ring pliers.

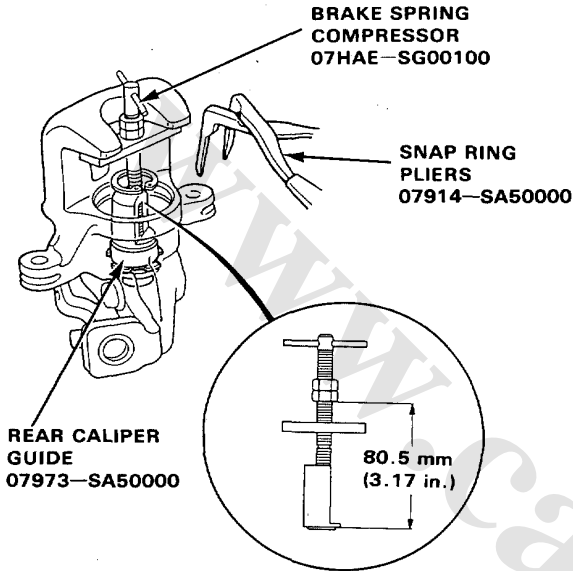


12. Remove the brake spring compressor from caliper body.
13. Remove the spring cover, adjusting spring B, spacer, bearing A, adjusting bolt and cup.

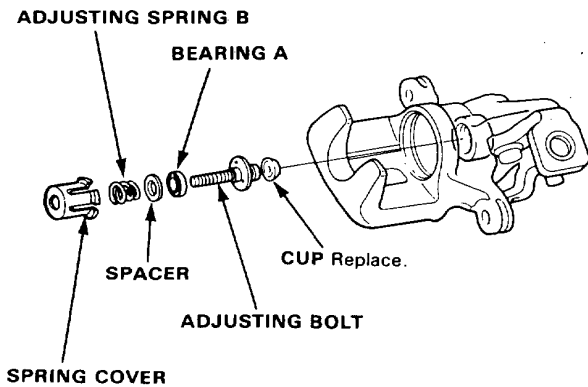

14. Remove the sleeve piston, then remove the rod from the cam.

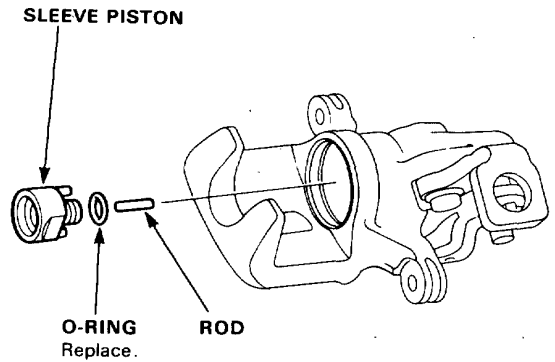

15. Remove the return spring, parking nut, spring washer, lever, cam and cam boot.

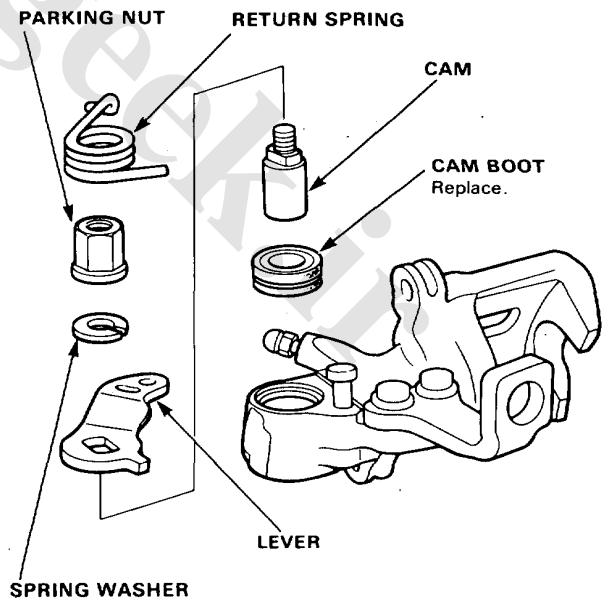




Reassembly

CAUTION:

- Make sure all parts are clean before reassembly.
- Use only new replacement parts.
- Use only new clean DOT 3 or DOT 4 brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different brands of brake fluid.
- Avoid spilling brake fluid on painted, plastic or rubber surfaces as it can damage the finish. Wash spilled brake fluid off immediately with clean water.


1. Adjust the special tool as shown.

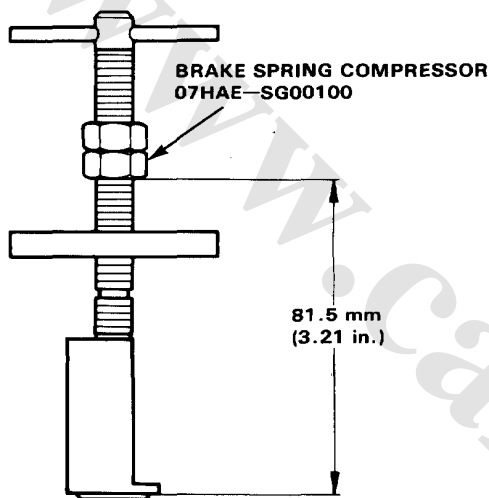


2. Pack all cavities of the needle bearing with Brake Cylinder Grease (P/N: 08733-B020E), or equivalent rubber grease.
3. Coat the new cam boot with Brake Cylinder Grease (P/N: 08733-B020E), or equivalent rubber grease and install in the caliper.

4. Install the cam with threaded end facing up.

CAUTION: Avoid damaging the cam boot since it must be installed before the cam.

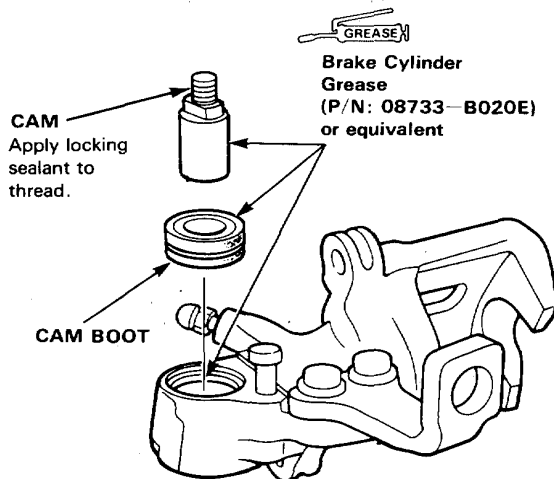

5. Install the lever and spring washer. Tighten the parking nut after applying locking sealant to thread.
6. Install the return spring.

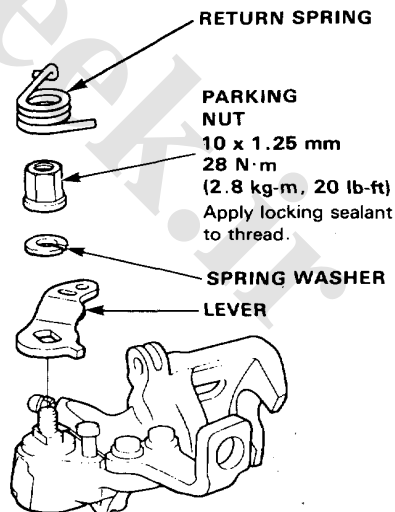


(cont'd)


Rear Caliper

Reassembly (cont'd)


7. Install the rod in the cam.
8. Install a new O-ring on the sleeve piston.
9. Install the sleeve piston so the hole in the bottom of the piston is aligned with the rod in the cam, and the two pins on the piston are aligned with the holes in the caliper.

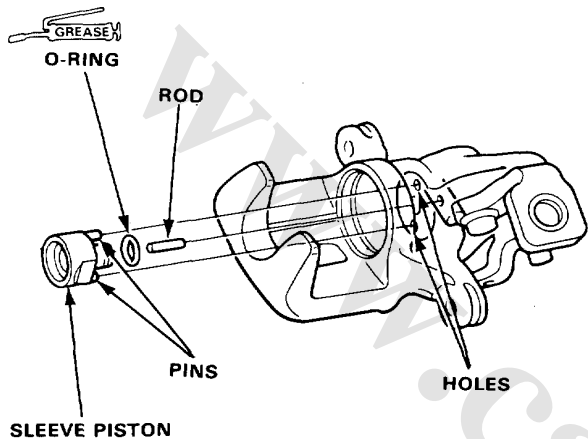


10. Install a new cup with its groove facing the bearing A side of the adjusting bolt.
11. Fit the bearing A, spacer, adjusting spring B and spring cover on the adjusting bolt, then install it in the caliper cylinder.

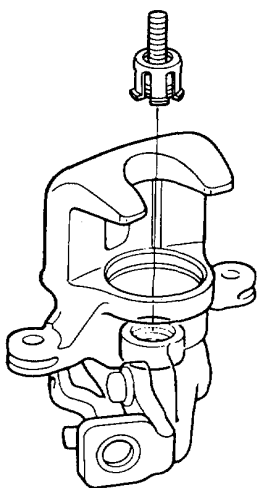

12. Install the special tool in the cylinder, aligning the cutout on the tool with the tab on the spring cover.

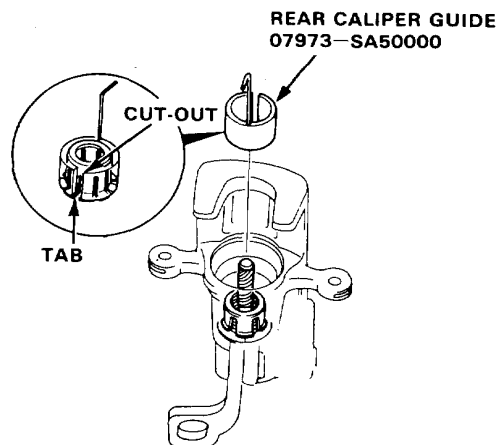


13. Adjust the special tool as shown.

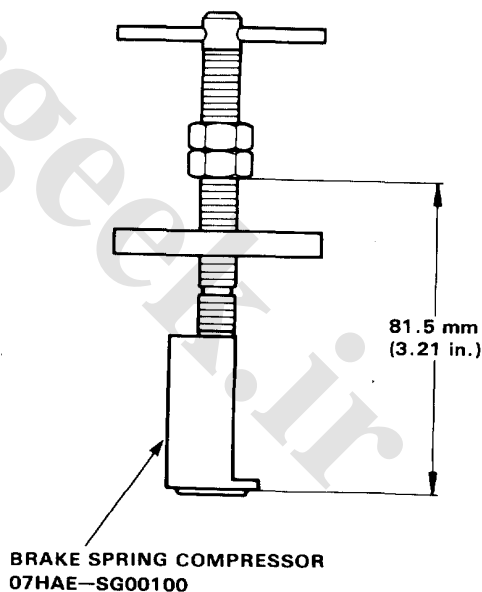




14. Install the special tool as shown.

BRAKE SPRING COMPRESSOR
07HAE-SG00100

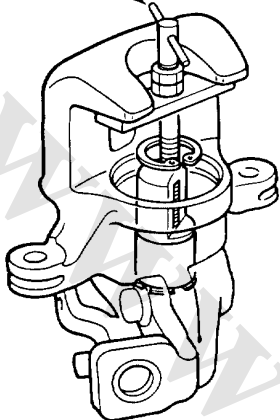


- 15. Compress the spring until it bottoms out.
- 16. Check that the flared end of the spring cover is below the circlip groove.
- 17. Install the circlip, then remove the special tool.


NOTE: Check that the circlip is seated in the groove properly.

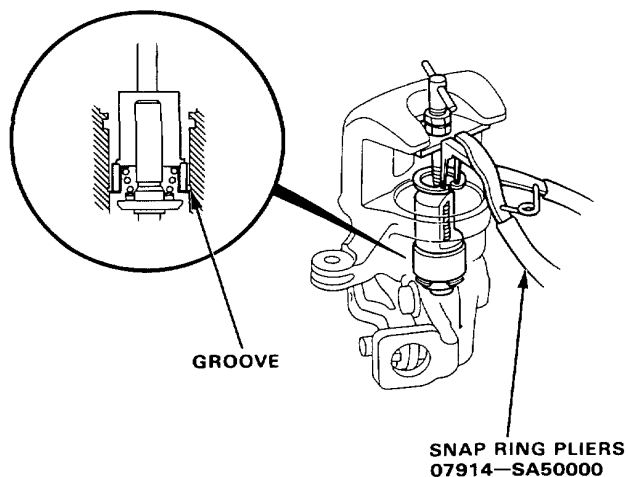

18. Install the adjusting nut, adjusting spring A, and washer, then secure with the circlip.

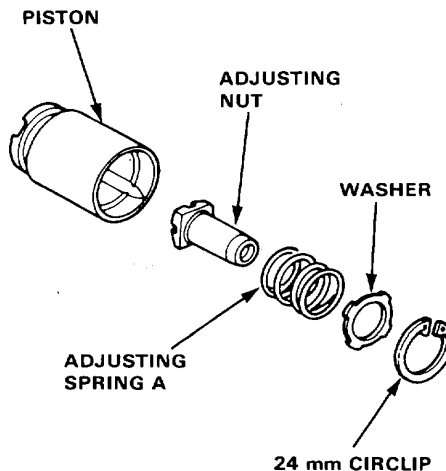

19. Coat the new piston seal and piston boot with silicone grease and install them in the caliper.

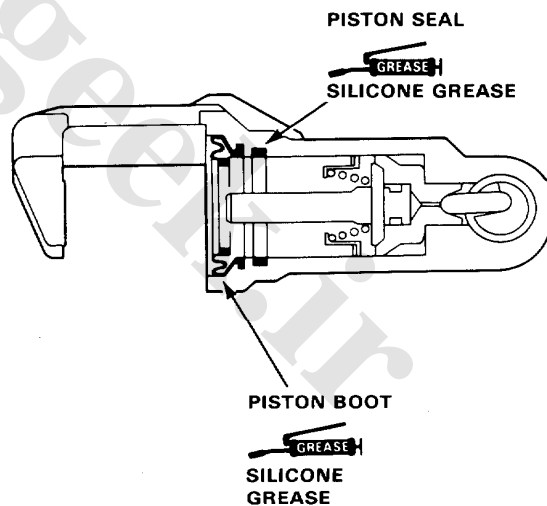


(cont'd)

Rear Caliper

Reassembly (cont'd)

20. Coat the outside of the piston with silicone grease, and install it on the adjusting bolt while rotating it clockwise.

CAUTION: Avoid damaging the piston boot.

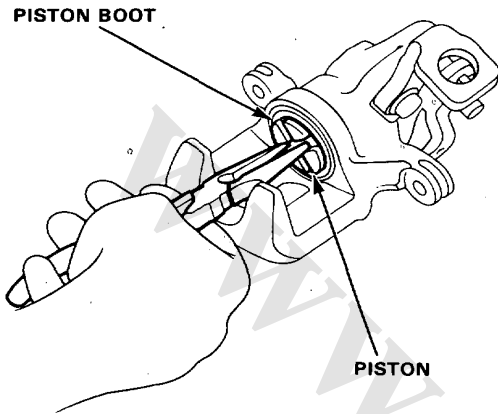

21. Install the brake pad retainers and brake pads.
22. Install the pad spring on the caliper.
23. Install the caliper on the caliper bracket and tighten the caliper bolts.
24. Connect the brake hose to the caliper with new sealing washers and tighten the banjo bolt.
25. Connect the parking brake cable to the arm on the caliper.
26. Fill the brake reservoir up and bleed the brake system (page 19-10).
27. Operate the brake pedal several times, then adjust the parking brake lever.

NOTE: Before adjustments, make sure the parking brake arm on the caliper touches the pin.

28. Install the caliper shield and tighten the bolts.



Brake Shoes

Index and Inspection

▲ WARNING Block the front wheels before jacking up the rear of the car.


1. Raise the rear of the car and support with safety stands in proper locations.
2. Loosen the parking brake.
3. Remove the rear wheels and rear brake drum.

▲ WARNING Do not use an air hose to blow the brake assembly clean. Use an OSHA-approved vacuum cleaner, to avoid breathing brake lining dust.

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.

- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Use only DOT 3 or DOT 4 brake fluid.
- Use only a genuine Honda wheel cylinder special bolt.
- Do not reuse the drained fluid.

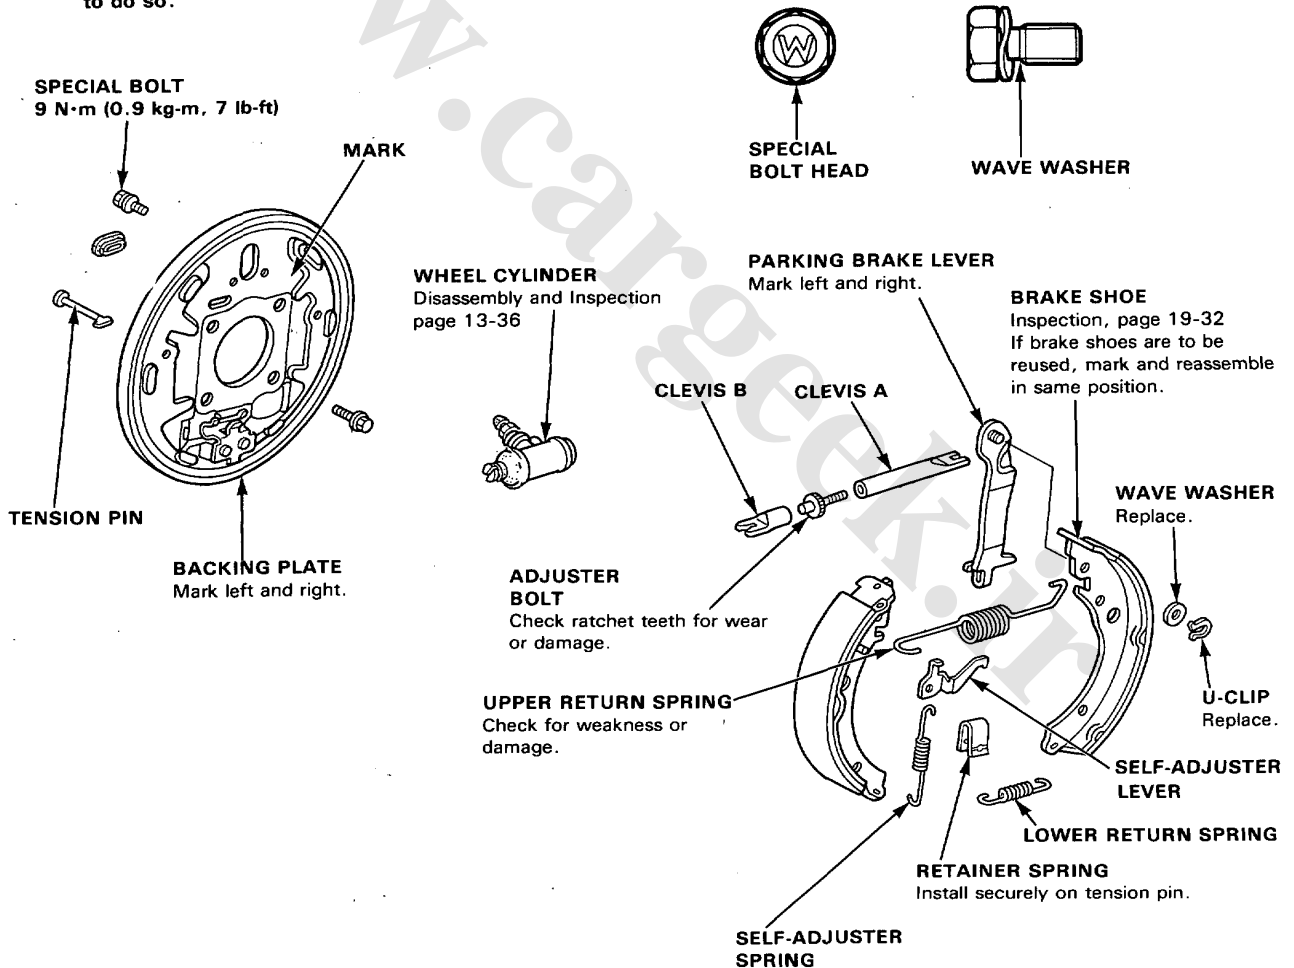

Brake Shoes

Inspection


1. Inspect the wheel cylinders for leakage.
2. Inspect the brake linings for cracking, glazing, wear or contamination.
3. Measure the brake lining thickness.

Lining Thickness

(Does not include brake shoe thickness)

Standard: 4.5 mm (0.177 in.)

Service Limit: 2.0 mm (0.079 in.)

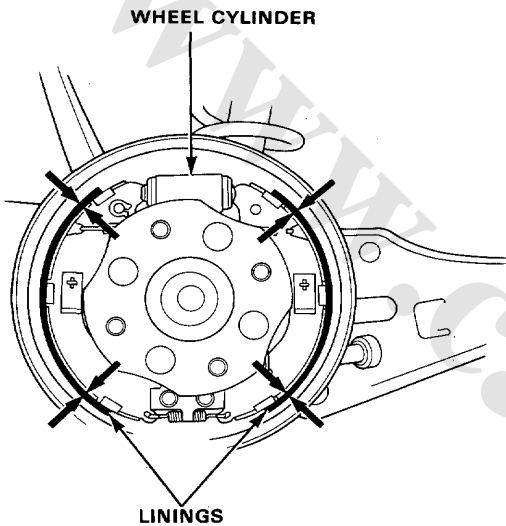


4. Inspect bearings in hub unit for smooth operation. If defective, refer to Section 12.
5. Measure inside diameter of the brake drum.

Drum Inside Diameter:

Standard: 220 mm (8.661 in.)

Service Limit: 221 mm (8.701 in.)

NOTE: If the refinishing limit stamped on the drum does not match the one listed above, use the one on the drum.

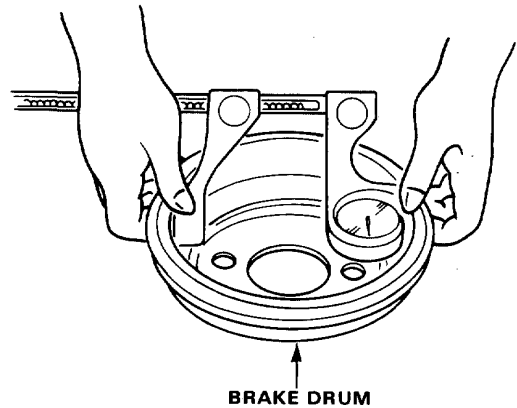

6. Inspect the brake drum for scoring, grooving, cracks.




Disassembly

1. Remove the upper return spring from the brake shoe as shown.

▲ WARNING


Wear eye protection when using the brake spring tool.

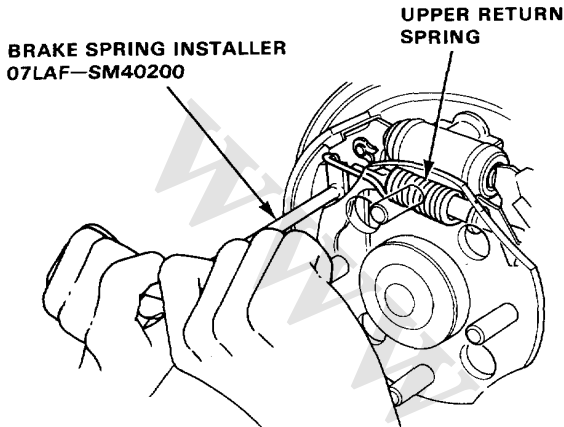


2. Remove the tension pins by pushing the retainer spring and turning them.
3. Lower the brake shoe assembly and remove the lower return spring.

NOTE: Make sure not to damage the dust cover on the wheel cylinder.


4. Remove the brake shoe assembly.

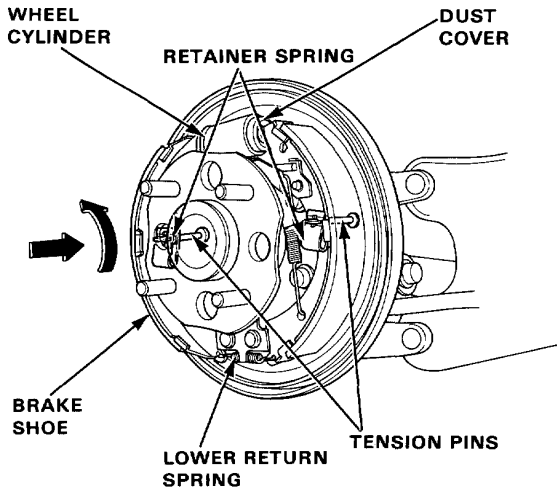


5. Disconnect the parking brake cable from the parking brake lever.

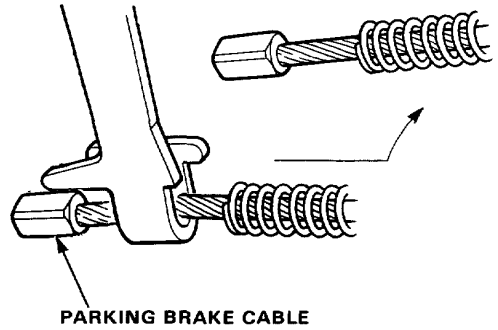

6. Remove the upper return spring, self-adjuster lever and self-adjuster spring, and separate the brake shoes.

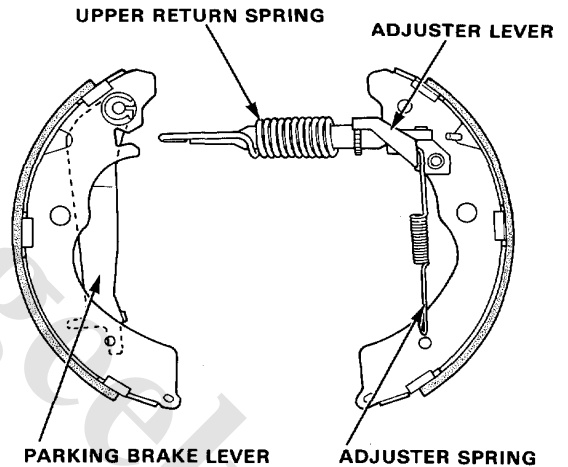

7. Remove the wave washer, parking brake lever and pivot pin from the brake shoe by removing the U-clip.

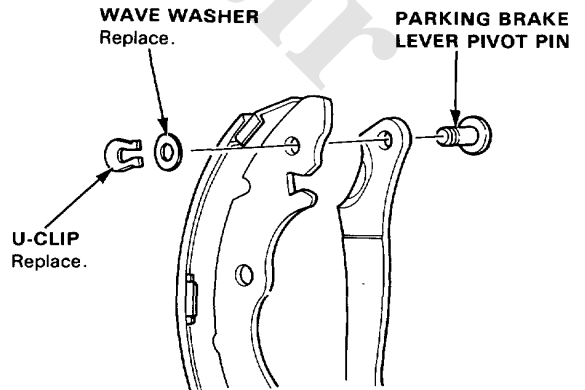


Brake Shoes

Reassembly


1. Apply brake cylinder grease to the sliding surface of the pivot pin, and insert the pin into the brake shoe.
2. Install the parking brake lever and wave washer on the pivot pin and secure with U-clip.

NOTE: Pinch the U-clip securely to prevent the pivot pin from coming out of the brake shoe.

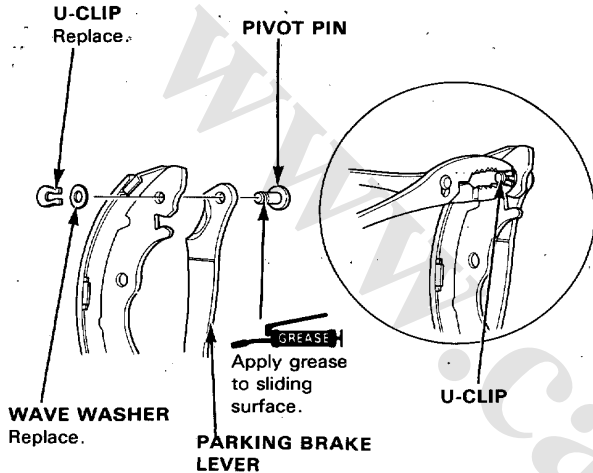


3. Connect the parking brake cable to the parking brake lever.
4. Apply grease on each sliding surface.

CAUTION: Contaminated brake linings reduce stopping power. Keep grease or oil off the brake linings. Wipe any excess grease off the parts.

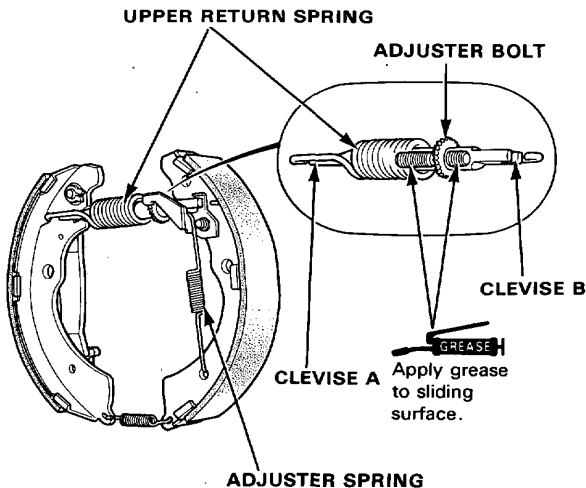


Apply grease on each sliding surface.

CAUTION: Contaminated brake linings reduce stopping power. Keep grease or oil off the brake linings. Wipe any excess grease off the parts.

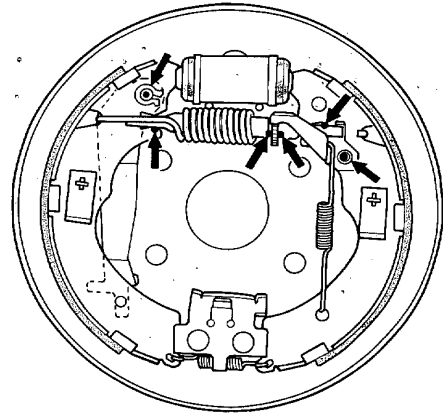

Greasing symbols: rubber grease (made by COSMO)
→ ● Moving portion

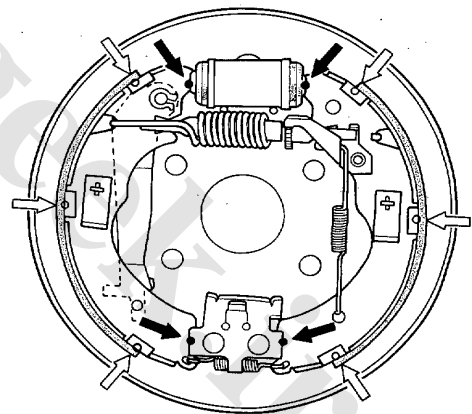


Grease symbols: MOLYKOTE 44MA
(Made by Dow Corning Co., Ltd.)

→ ● Brake shoe ends
⇨ ○ Opposite the edge of the shoe


5. Clean the threaded portions of clevises A and B. Coat the threads of the clevises with grease. To shorten the clevises, turn the adjuster bolt.
6. Hook the adjuster spring to the adjuster lever first, then to the brake shoe.



7. Install the brake shoes onto the brake panel.
NOTE: Make sure not to damage the wheel cylinder dust covers.
8. Install the tension pins and the return springs.

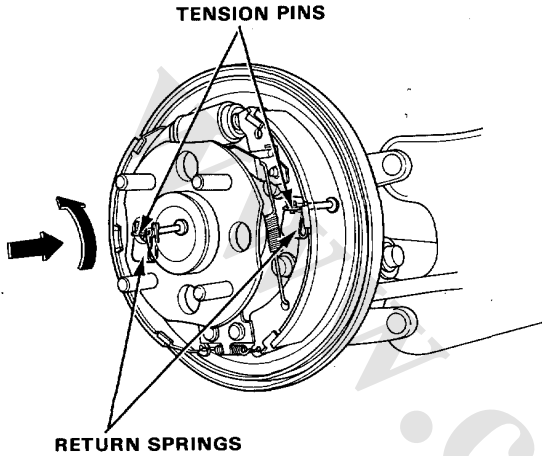

9. Install the upper spring with the special tool.

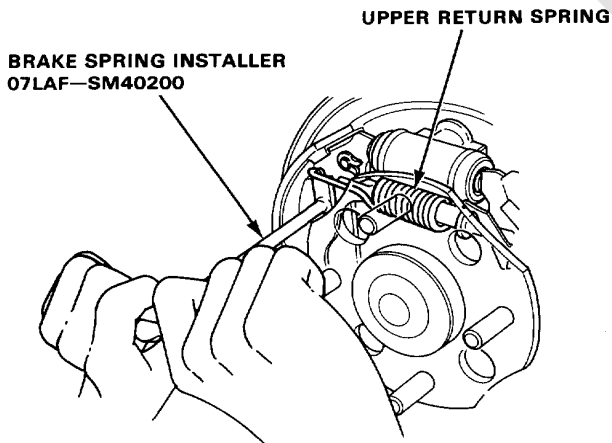


10. Install the brake drum.
11. If the wheel cylinder has been removed, bleed the brake system (page 19-10).
12. Depress the brake pedal several times to set the self adjusting brake.
13. Adjust the parking brake (page 19-4).

Wheel Cylinder

Disassembly and Inspection

CAUTION:

- Use only clean DOT 3 or DOT 4 brake fluid.
- Use only new replacement parts.
- Brake fluid will damage the painted, plastic and rubber parts. Whenever handling brake fluid, protect the painted, plastic or rubber parts by covering with a rag. If fluid does get on these parts, wipe it off with a clean cloth.
- Blow all passages with compressed air before reassembling.
- Clean all parts thoroughly with the clean brake fluid.
- Do not allow dirt or other foreign matter to contaminate the brake fluid.
- Do not mix different types of fluid. They are not compatible.
- Never reuse the brake fluid once it has been drained.
- Lubricate all parts with clean brake fluid during reassembly.
- Apply sealant between the wheel cylinder and backing plate whenever the wheel cylinder has been removed.

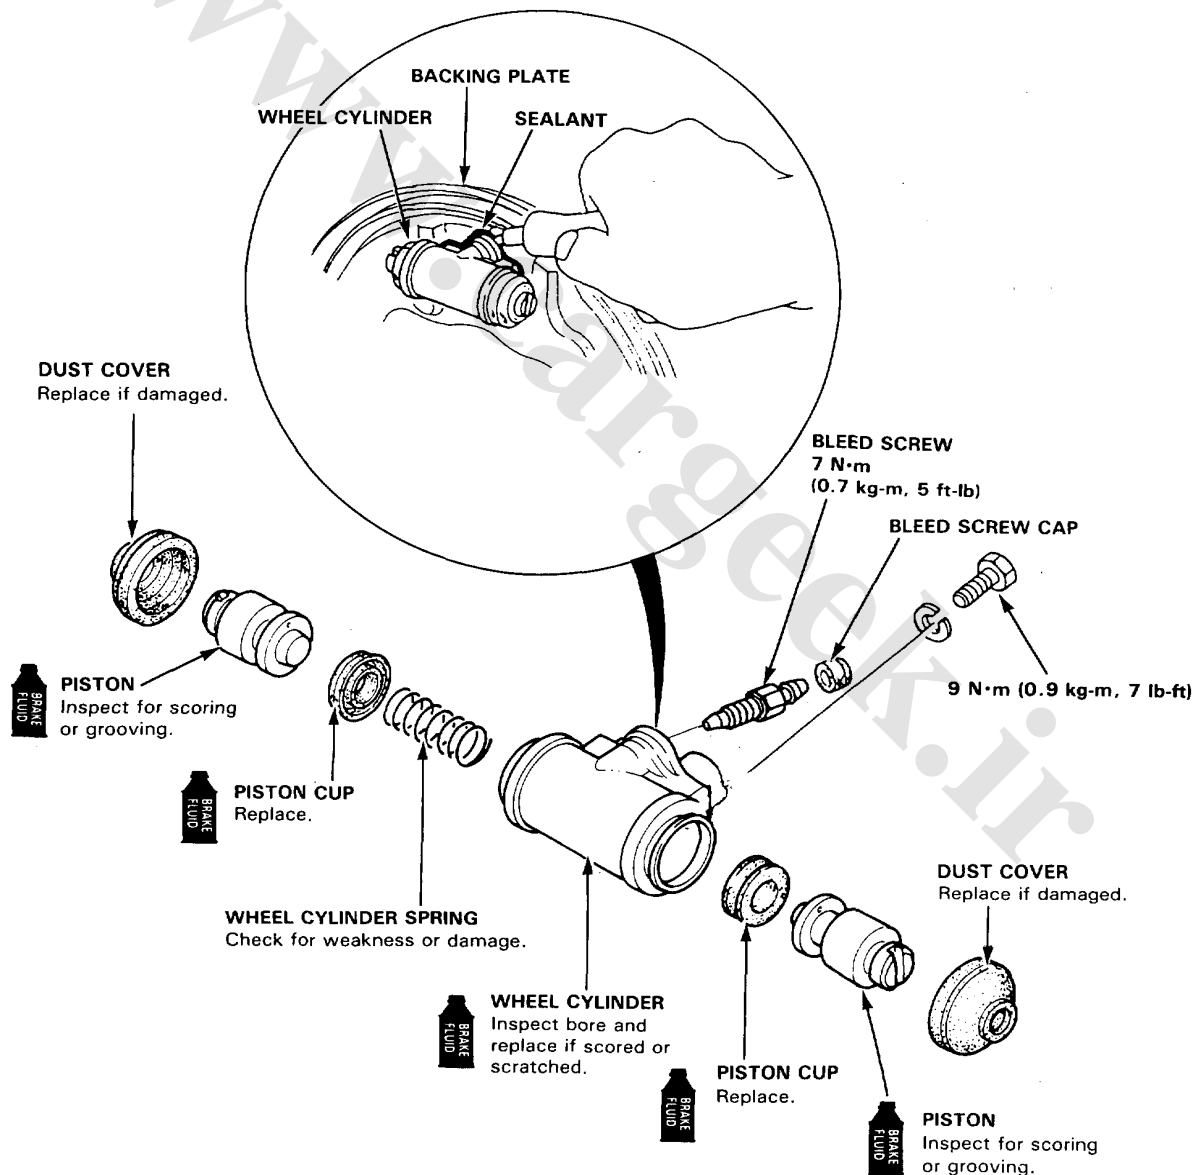




Brake Hoses/Pipes

Inspection

1. Inspect the brake hoses for damage, leaks, interference or twisting.
2. Check the brake lines for damage, rusting or leakage. Also check for bent brake lines.
3. Check for leaks at hose and line joints or connections, and retighten if necessary.

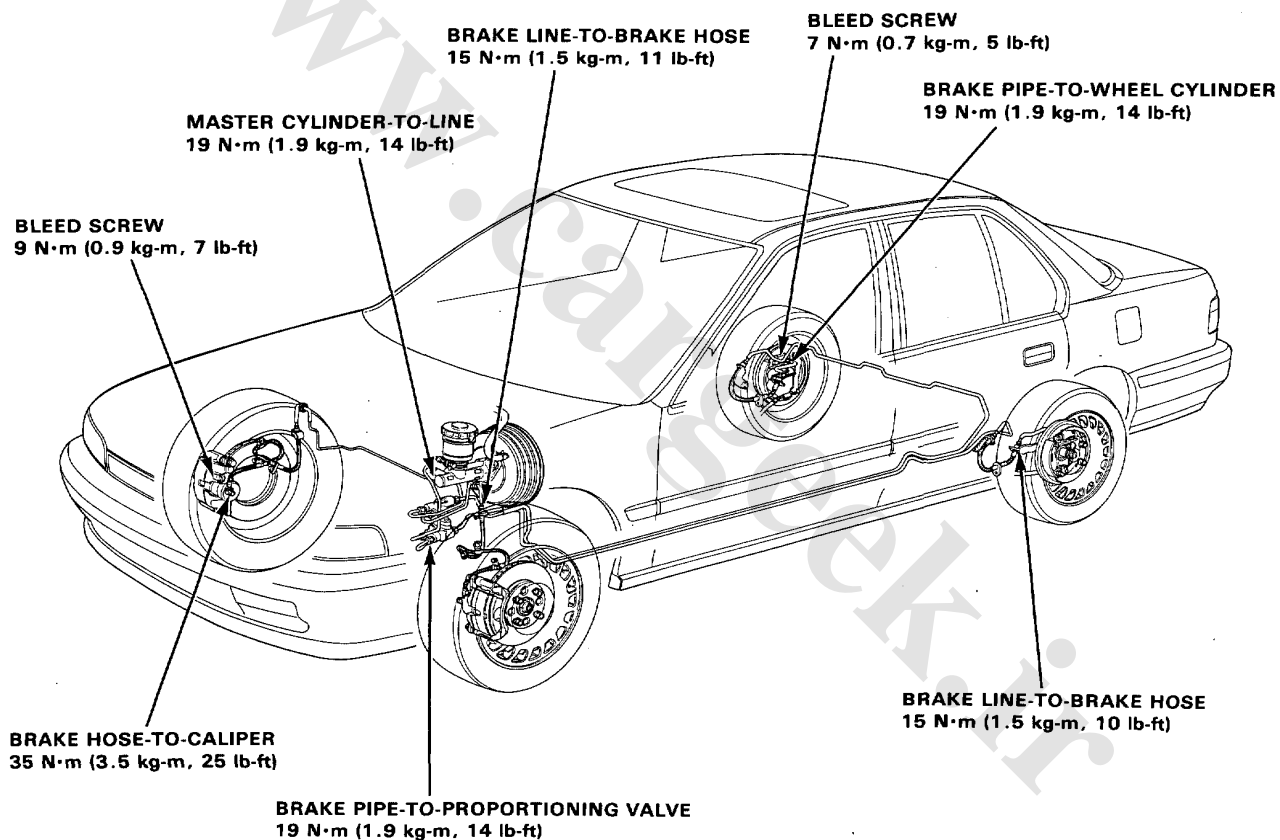


Brake Hose/Pipes

Brake Hose Replacement

CAUTION:


- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Use only clean DOT 3 or DOT 4 brake fluid.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not spill brake fluid on the car, it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.

1. Replace the brake hose if the hose is twisted, cracked or if it leaks.
2. Disconnect the brake hose from the brake pipe using a 10 mm flare nut wrench.

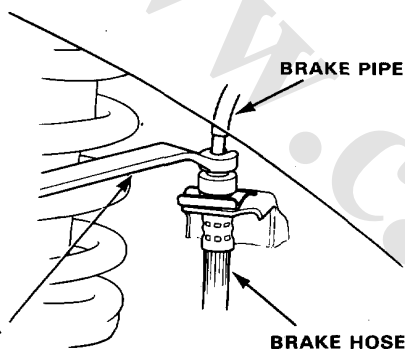


FLARE NUT WRENCH
07921-0010001

3. Remove and discard the brake hose clip from the brake hose.
4. Remove the banjo bolt and disconnect the brake hose from the caliper.

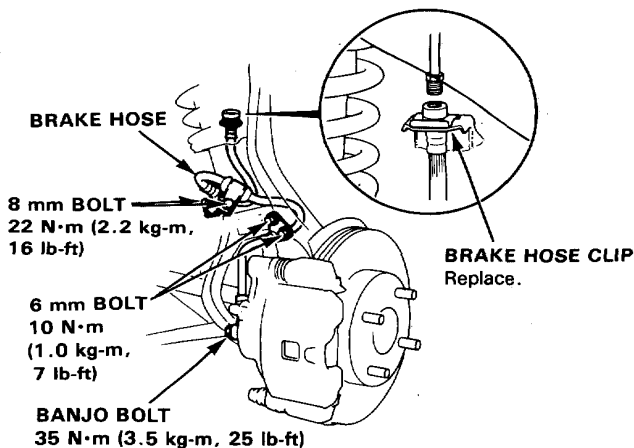

5. Install a new brake hose clip to the brake hose.
6. Connect the brake pipe to the brake hose.

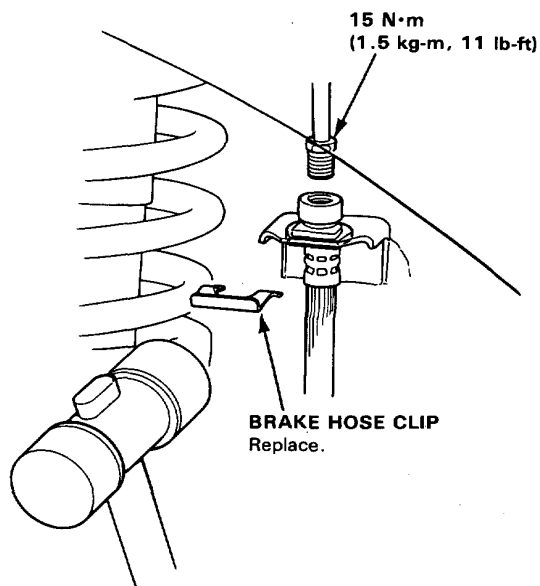

7. Connect the brake hose to the caliper.
8. Install the brake hose on the knuckle and damper mounting clamp.
9. After installing the brake hose, check the hose and line joints for leaks, and tighten if necessary.



Parking Brake

Disassembly and Reassembly

(4WS DISC BRAKE)

PARKING BRAKE LEVER
Check for smooth operation.

RELEASE BUTTON

PARKING BRAKE CABLE
Check for smooth operation.

SPRING

PARKING BRAKE SWITCH

CABLE EQUALIZER

CABLE ADJUSTING NUT

Check for faulty movement.

8 mm BOLT
22 N·m (2.2 kg-m,
16 lb-ft)

(2WS DISC BRAKE)

(DRUM BRAKE)

Disconnect the parking brake cable from the lever on the caliper by removing the lock pin.

BACKING PLATE

PARKING BRAKE CABLE

CLIP

LEVER

PARKING BRAKE CABLE

12 mm OFFSET WRENCH

LOCK PIN

[Special Tools](#)

[Illustrated Index](#)

[Circuit Diagram](#)

ALB Checker

[Function Test](#)

[Wheel Sensor Signal](#)

[Confirmation](#)

Troubleshooting

[Dash Warning Light](#)

[Symptom-to-System Chart](#)

[Flowcharts](#)

Hydraulic System

[Hydraulic Connections](#)

[Relieving Accumulator/Line](#)

[Pressure](#)

Modulator

[Index/Inspection](#)

Solenoid

[Solenoid Leak Test](#)

[Removal](#)

[Inspection](#)

[Installation](#)

Piston

[Removal](#)

[Installation](#)

Power Unit

[Index/Inspection](#)

[Disassembly/Reassembly](#)

Accumulator Unit

[Index](#)

[Accumulator/Pressure](#)

[Switch](#)

[Accumulator Disposal](#)

Master Cylinder

[Overhaul/Inspection](#)

[Disassembly](#)

[Reassembly](#)

[Bleeding](#)

Electronic Components

[Control Unit Replacement](#)

[Relays Inspection](#)

[Pulsars/Sensors](#)

ALB



Special Tools	13-42	Installation.....	13-68
Illustrated Index	13-43	Piston	
Circuit Diagram	13-44	Removal.....	13-69
ALB Checker		Installation.....	13-70
Function Test	13-45	Power Unit	
Wheel Sensor Signal		Index/Inspection	13-71
Confirmation.....	13-47	Disassembly/Reassembly	13-72
Troubleshooting		Accumulator Unit	
Dash Warning Light	13-48	Index	13-73
Symptom-to-System Chart.....	13-50	Accumulator/Pressure Switch ...	13-74
Flowcharts.....	13-51	Accumulator Disposal	13-74
Hydraulic System		Master Cylinder	
Hydraulic Connections	13-63	Overhaul/Inspection	13-75
Relieving Accumulator/		Disassembly	13-76
Line Pressure	13-64	Reassembly	13-77
Modulator		Bleeding	13-79
Index/Inspection	13-65	Electronic Components	
Solenoid		Control Unit Replacement	13-80
Solenoid Leak Test.....	13-66	Relays Inspection	13-81
Removal.....	13-67	Pulsers/Sensors	13-81
Inspection	13-68		



Special Tools


Special Tools

Ref. No.	Tool Number	Description	Q'ty	Page Reference
①	07HAA—SG00100	Bleeder T-Wrench	1	13-53, 13-64, 13-79
②	07HAJ—SG00601 or 07508—SB00000 —07HAJ—SG00400	ALB Checker ALB Checker Adaptor	1 1 1	13-45, 13-47 13-45, 13-47 13-45, 13-47

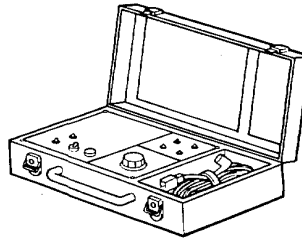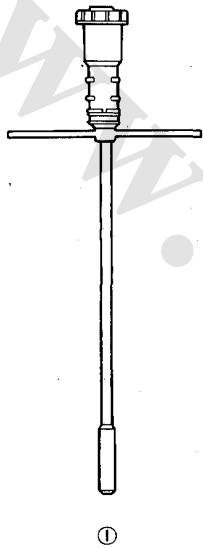


Illustrated Index

⚠ WARNING The accumulator contains high pressure nitrogen gas, do not puncture expose to flame or attempt to disassemble the accumulator or it may explode; severe personal injury may result.

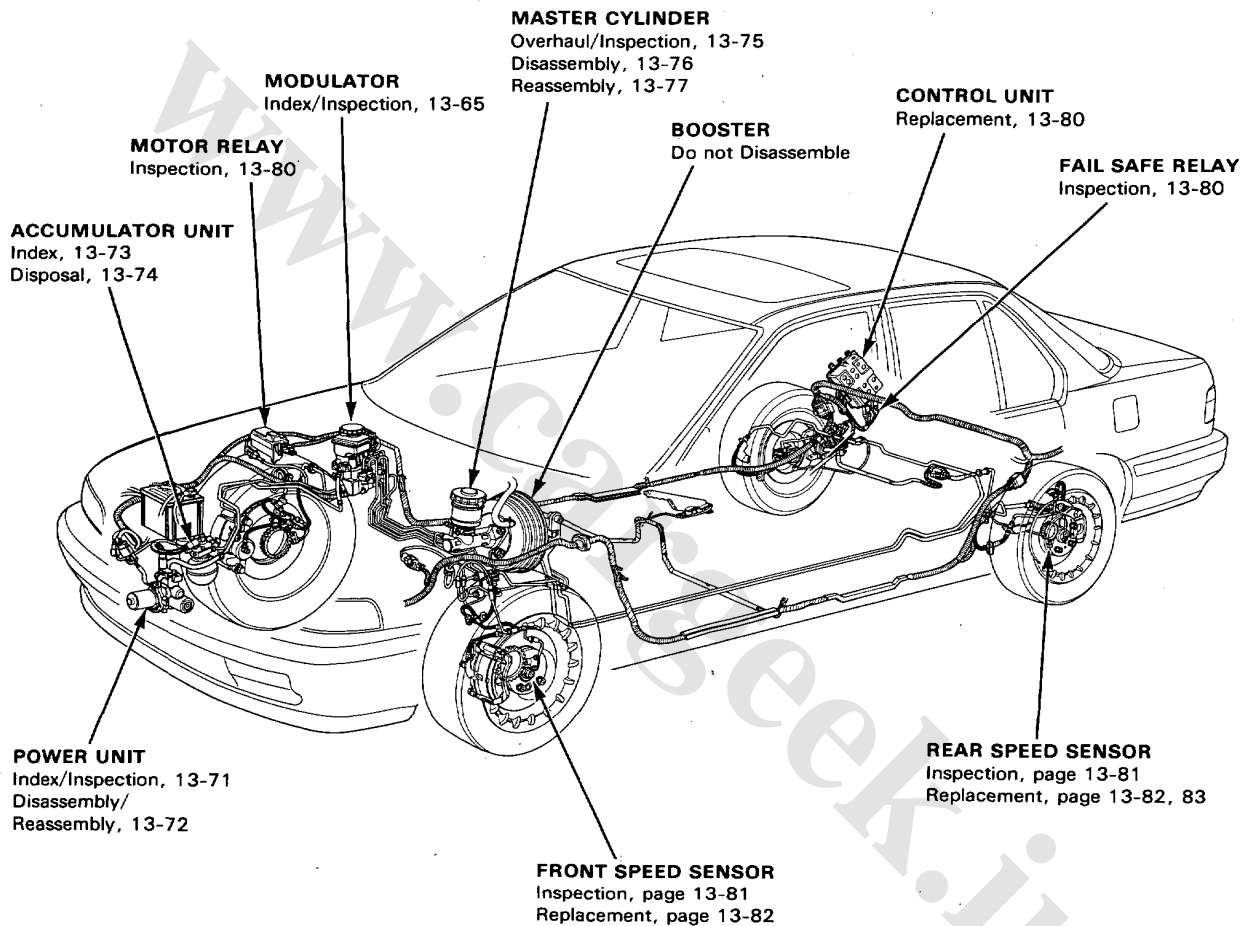

Circuit Diagram

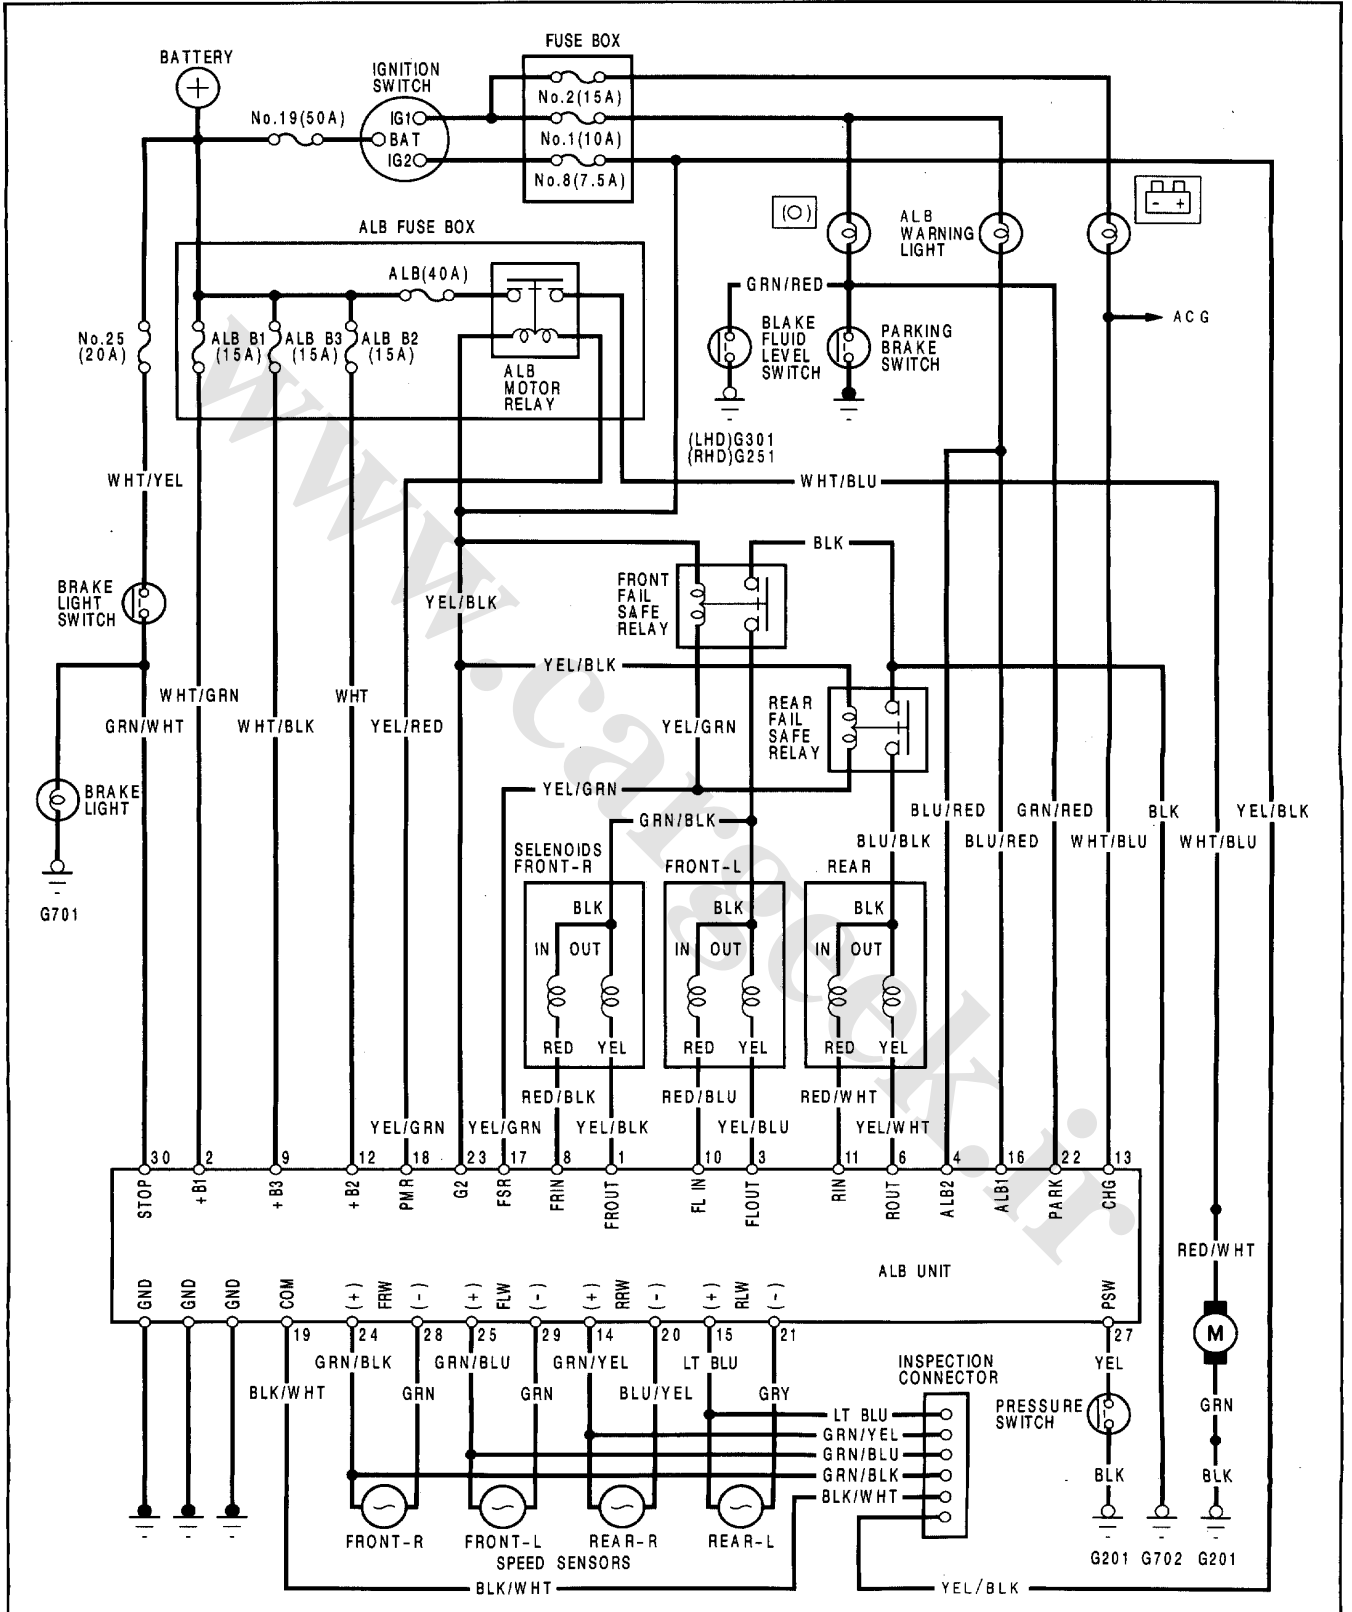

ALB Checker

Function Test


NOTE:

- The ALB checker is designed to confirm proper operation of the ALB system by simulating each system function and operating condition. Before using the checker, confirm that the dash ALB warning light is not indicating some other problem with the system. The light should go on when the ignition is first turned on and then go off and stay off two seconds after the engine is started.
- The checker should be used through all modes, 0-6, to confirm proper operation of the system, in any one of the following situations:
 - After replacing any ALB system component.
 - After replacing or bleeding the system fluid (0 mode not necessary).
 - After any body or suspension repair that may have affected the sensors or their wiring.
 - As part of P.D.I.

⚠ WARNING Disconnect the ALB checker before driving the car. A collision can result from a reduction, or complete loss, of braking ability causing severe personal injury or death.


NOTE: Set the Pulse Selector switch to 50 when using ALB checker 07HAJ—SG00601.

1. With the ignition switch off, disconnect the 6-P inspection connector from the connector cover under the passenger seat and connect the 6-P inspection connector to the ALB checker.

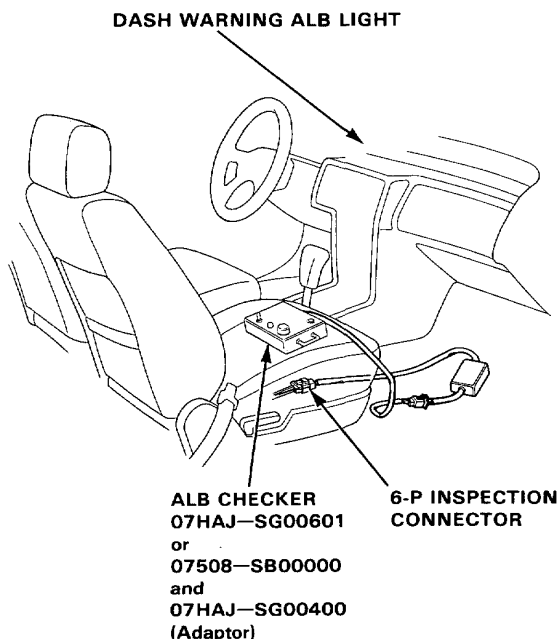

NOTE: Place the vehicle on level ground with the wheels blocked, put the transmission in neutral for manual transmission models, and in P for automatic transmission models.

2. Start the engine and release the parking brake,
3. Operate the ALB checker as follows,
 - (1) Turn the Mode Selector switch to "1."
 - (2) Push the Start Test switch:
 - The test in progress light should come ON.
 - In one or two more seconds, all four monitor lights should come on (If not the checker is faulty).
 - The dash warning ALB light should not come ON (If it comes on the checker harness to the 6-P connector connection is faulty).

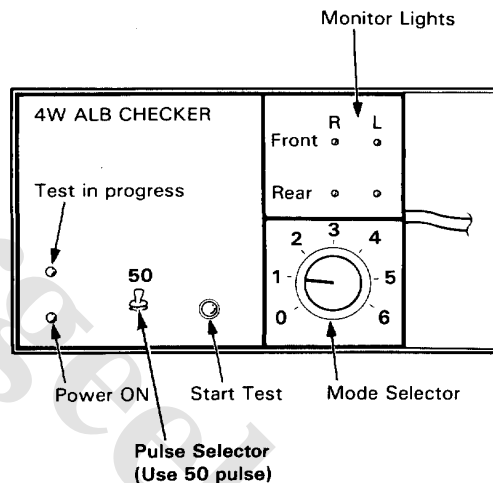


(cont'd)

ALB Checker

Function Test (cont'd)

4. Turn the Mode Selector switch further to "2."
5. Depress the brake pedal and push the Start Test switch.
The dash warning ALB light should not go on while the Test in Progress light is ON. There should be kickback on the brake pedal. If not as described, go to troubleshooting, page 13-50.

NOTE: The operation sequence simulated by Modes 2, 3, 4, 5 and 6:

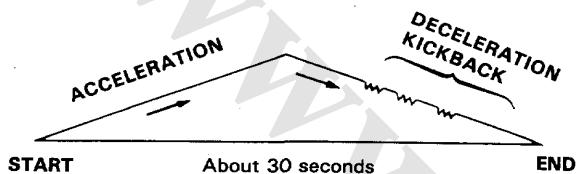

6. Turn the Mode Selector switch to 3, 4, 5.
Perform step 5 for each of the test mode positions.

Mode 1:

Sends the simulated driving signal 0 km/h (0 mph) → 180 km/h (112.5 mph) → 0 km/h (0 mph) of each wheel to the control unit to check the control unit self diagnosis circuit. There should be NO kickback.

Mode 2:

Sends the driving signal of each wheel, then sends the lock signal of the rear left wheel to the control unit. There should be kickback.

Mode 3:

Sends the driving signal of each wheel, then sends the lock signal of the rear right wheel to the control unit. There should be kickback.

Mode 4:

Sends the driving signal of each wheel, then sends the lock signal of the front left wheel to the control unit. There should be kickback.

Mode 5:

Sends the driving signal of each wheel, then sends the lock signal of the front right wheel to the control unit. There should be kickback.

Sends the driving signal of each wheel, then sends the lock signal of both front wheels to the control unit. There should be strong kickback.


NOTE: If little or no kickback is felt from the brake pedal in modes 2-5, repeat the function test of modes 1-5 several times before beginning to troubleshoot other parts of the system.

Wheel Sensor Signal Confirmation


NOTE:

- Use the ALB checker (mode 0) to confirm proper wheel sensor operation.
- Set the Pulse Selector switch to 50 when using ALB checker 07HAJ—SG00601.

1. Disconnect the 6-P inspection connector from the connector cover under the passenger seat and connect the 6-P inspection connector to the ALB checker.

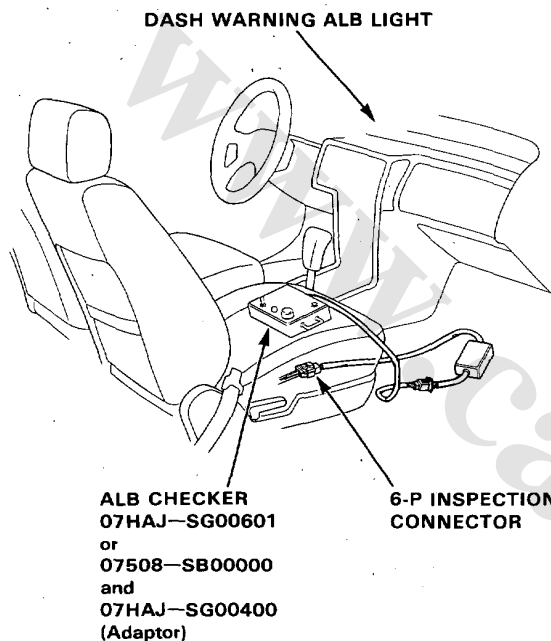

2. Raise the car so that all four wheels are off the ground and support on safety stands.
3. Turn the ignition switch ON.
4. Turn the Mode Selector switch to "0."

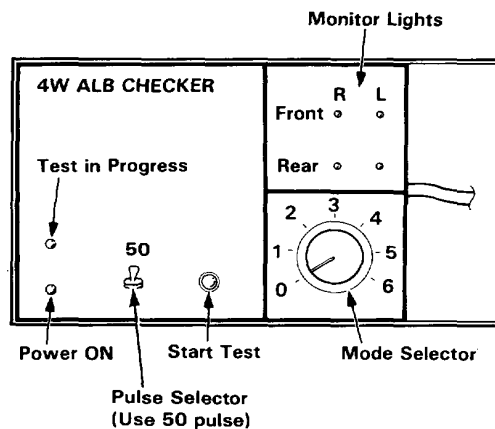

5. With the transmission in neutral, rotate each wheel briskly (one revolution per second) by hand, and confirm that its respective monitor light on the checker blinks as the wheel rotates.

NOTE:

- Rotating a wheel too slowly will produce only a weak blink of its monitor light that may be difficult to see.
- In bright sunlight, the monitor light may be difficult to see. Perform tests in a shaded area.
- In some instances, it may not be possible to spin the front wheels fast enough to get a monitor indication, if necessary, start the engine and slowly accelerate and decelerate the front wheels. The monitor lights should blink indicating a good wheel sensor signal.

If any monitor light fails to blink, check the suspected sensor, its air gap and its wiring/connectors.

Troubleshooting

Dash Warning Light


Temporary Driving Conditions:

1. The dash warning light will come on and the control unit memorizes the problem under certain conditions.

NOTE: Problem codes explained on pages 13-50.

- The tire(s) adhesion is lost due to excessive cornering speed.
Problem codes: 5, 5-4, 5-8.
- The vehicle loses traction when starting from a stuck condition on a muddy, snowy, or sandy road.
Problem code: 4.
- When the parking brake is applied for more than 30 seconds while the vehicle is being driven.
Problem code: 2.
- The vehicle is driven on extremely rough road.

The ALB system is OK, if the dash warning light goes off after the engine is restarted.

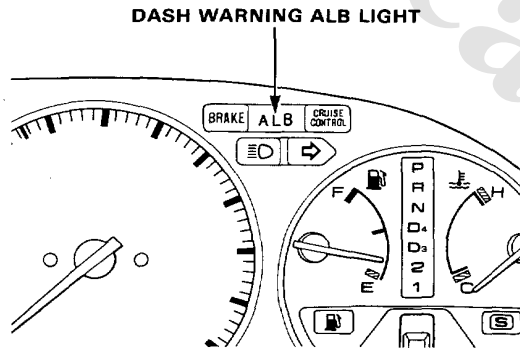

2. If you receive a customer's report that the dash warning light, sometimes comes on, check the system using the ALB checker to confirm whether there is any trouble in the system.
See page 13-45.
3. The dash warning light will come on and the LED (see page 13-49) will display a problem code when there is insufficient battery voltage to the control unit. An example would be when the battery is so weak that the car must be jump-started.
After the battery is sufficiently recharged, the dash warning light will work normally after the engine is stopped and restarted.

However, after recharging the battery, the LED problem code must be cleared from the control unit's memory by disconnecting the ALB B2 fuse for at least 3 seconds.

Warning Light Circuit:

1. The dash warning light, does not go on when the ignition switch is turned on.
Check the following items. If they are OK, check the control unit connectors.
If not loose or disconnected, install a new control unit and recheck:
 - Blown dash warning light bulb.
 - Open circuit in YEL lead between No.1 fuse and combination meter.
 - Open circuit in BLU/RED lead between combination meter and control unit.
 - Loose component grounding of the control unit to the body.
 2. The dash warning light remains ON or after the engine is started, however the LED on the control unit does not blink any code, check for the following:
 - Loose or poor connection of the wire harness at the control unit.
 - Faulty ALB B2 (15 A) fuse.
 - Open circuit in WHT lead between ALB B2 (15 A) fuse and control unit.
 - Open circuit in YEL/BLK lead between fuse No.8 (7.5 A) and fail safe relay(s).
 - Open or short circuit in the YEL/GRN lead between control units.
 - Short circuit in BLU/RED lead between combination meter and control unit.
 - Open circuit in WHT/BLU lead between alternator and control unit.
- If the problem is not found substitute a known-good control unit and recheck whether the warning light remains ON.

Troubleshooting

Symptom-to-System Chart

PROBLEM CODE		PROBLEMATIC COMPONENT/ SYSTEM	AFFECTED				See page	OTHER COMPONENT	See page
MAIN CODE	SUB CODE		FRONT RIGHT	FRONT LEFT	REAR RIGHT	REAR LEFT			
1	-	Hydraulic Controlled Components	-	-	-	-	13-51	-ALB fuse -Motor relay -Pressure Switch -Accumulator -Modulator	13-80
2	-	Parking brake switch-related problem	-	-	-	-	13-54	Brake fluid level switch BRAKE light	
3	1	Pulser(s)	○				13-81		
	2			○					
	4				○	○			
4	1	Speed sensor	○				13-55		
	2			○					
	4				○				
	8					○			
5	-	Speed sensor (s)			○	○	13-56	-Modulator	
5	4				○				
	8					○			
6	-	Fail safe relay	-	-	-	-	13-57 (Function Test)	Front or rear fail safe relay	
6	1		-	-	-	-		Front fail safe relay	
	4		-	-	-	-		Rear fail safe relay	
7	1	Solenoid related problem (Open or short)	○				13-61	ALB 3 fuse	
	2			○				ALB 1 fuse	
	4				○	○		-Rear fail safe relay -Pressure Switch -Motor relay	

NOTE: In the event of simultaneous speed sensor or solenoid problems (codes 4 or 7), the control unit will only indicate the higher number sub-code.



Troubleshooting

Flowchart


Problem Code 1: Hydraulic Controlled Components.

NOTE: The LED does not blink when the following failures occur.

- The contact points of the motor relay remain closed (the motor runs continuously even after the ignition key is removed).
- YEL/RED lead is shorted or the control unit is internally shorted (the motor stops when the ignition switch is turned lock).

Pre-test steps:

- Check ALB 40A Fuse.
- Check all brake system hoses and pipes (low and high pressure) for signs of leaking, bending or kinking.
- Check reservoir fluid level, and if necessary, fill to the MAX level.

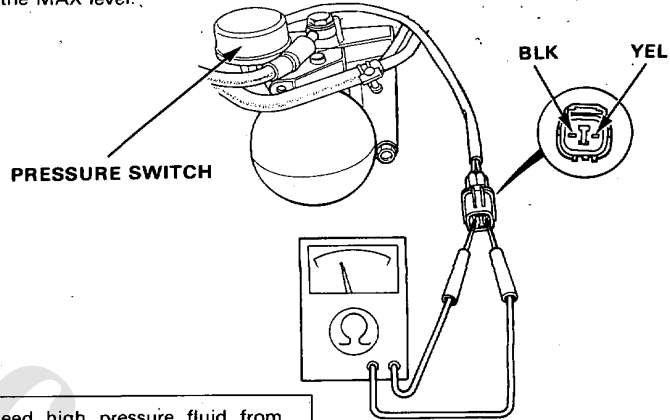

Disconnect the pressure switch connector and check the continuity between BLK and YEL terminals.

Is there continuity?

YES
Bleed high pressure fluid from the maintenance bleeder with the ALB T-wrench. (see page 13-79).

NO

Check the continuity of pressure switch between BLK and YEL terminals.

Is there continuity?

YES
Replace the pressure switch (closed).

NO

Reconnect the pressure switch connector.

Bleed high pressure fluid from the maintenance bleeder with the ALB T-wrench. (see page 13-79). Jack up the front of car and support with safety stands, then run the engine in gear above 6 mph (10 km/h).

⚠ WARNING Block rear wheels before jacking up front of car.

(To page 13-52).

(cont'd)

Troubleshooting

Flowchart (cont'd)

(From page 13-51)

Does the pump motor run? YES (To page 13-53)

NO

Disconnect the 18P connector from the control unit.

Check for continuity between the YEL terminal and body ground.

Is there continuity? YES Repair short in YEL wire between the control unit and pressure switch.

NO

Connect the YEL/RED terminal to body ground using a jumper wire. Turn the ignition switch ON.

Does the pump motor run? YES Faulty control unit.

NO

Remove the pump motor relay and check the pump motor relay (page 13-80).

Connect the motor side ⊕ terminal of the pump motor relay and its output terminal with jumper wire.

Does the pump motor run? NO (To page 19-54)



YES

Check voltage between the pump motor relay motor side ⊕ terminal and body ground (-).



Is there battery voltage? NO Repair open in YEL/BLK wire between the No.8 (7.5 A) fuse and pump motor relay.

YES

Repair open in YEL/RED wire between the control unit and pump motor relay.

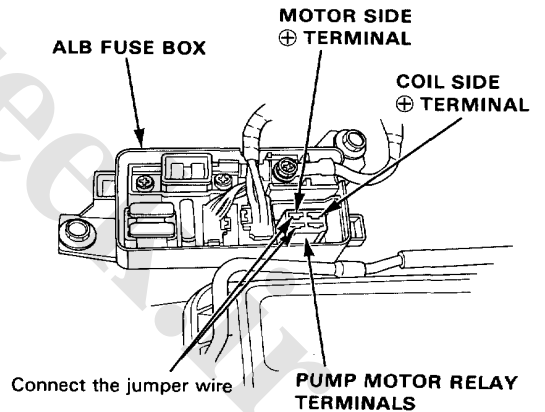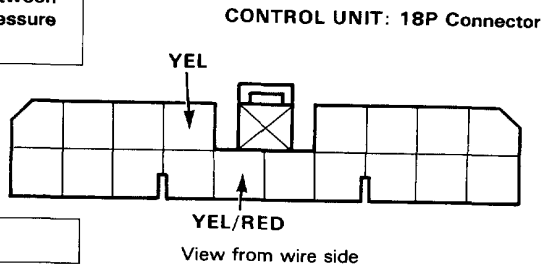

(From page 13-52)

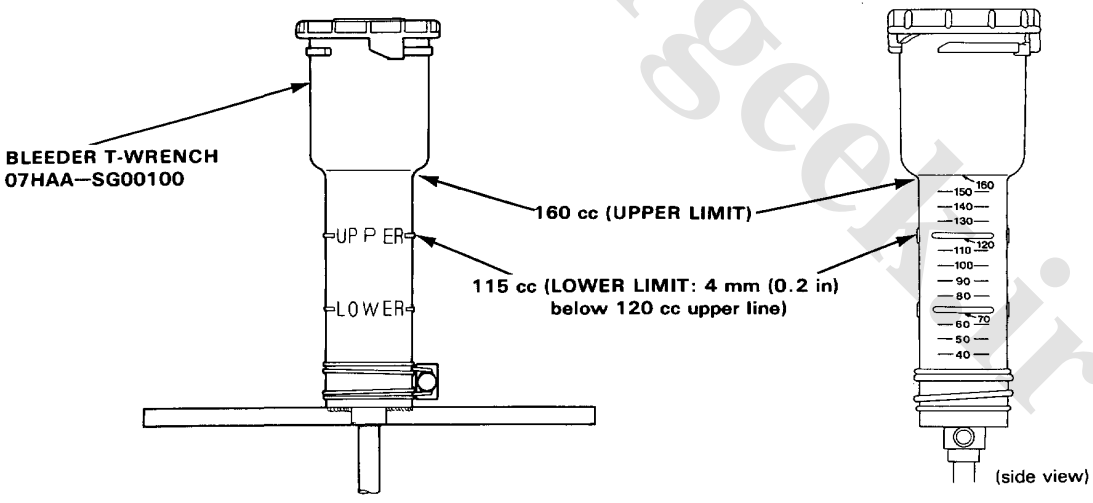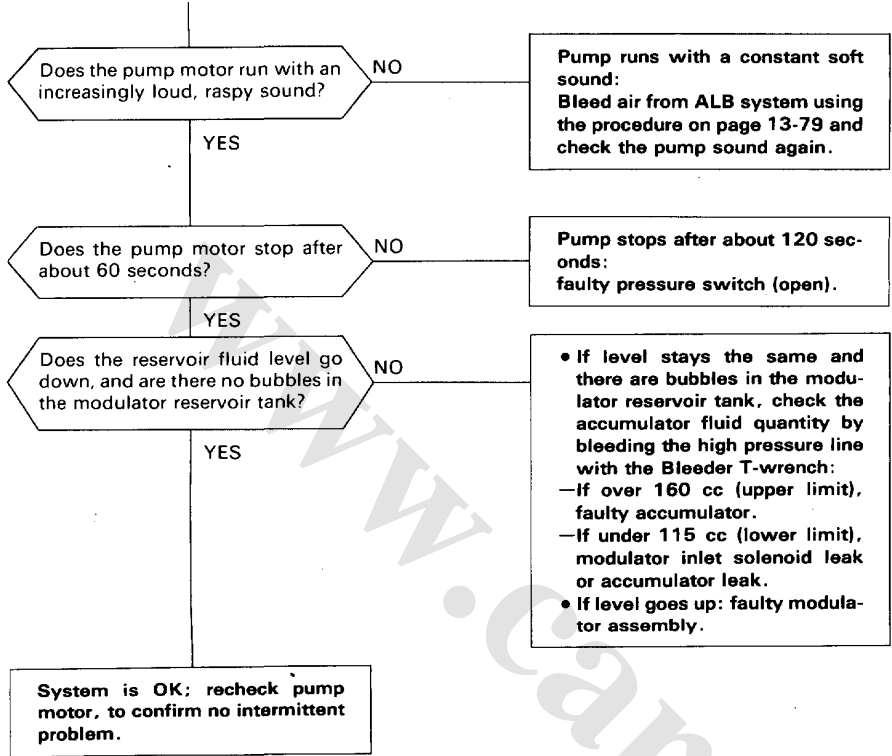


NOTE: The fluid enters the reservoir under pressure; wait 1 or 2 minutes for air bubbles to disappear and level to stabilize.

(cont'd)

Troubleshooting

Flowchart (cont'd)

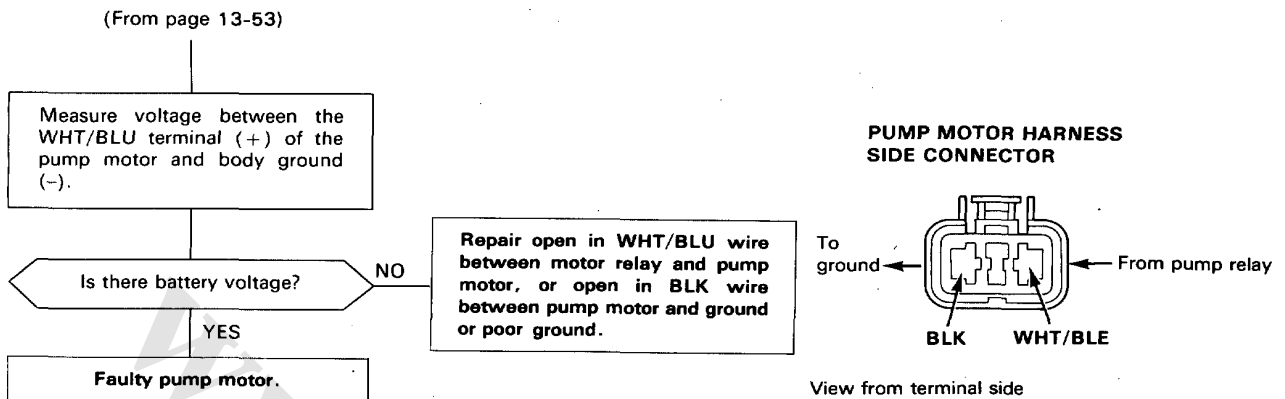

Problem code 2: Parking Brake Switch Related Problem

If the parking brake has been released, the following items are possible causes. If they are OK, check the control unit connectors for good connection. If not loose or disconnected, substitute a known-good control unit and recheck.

NOTE: Before Troubleshooting Problem Code 2, remove the ALB 2 fuse for three seconds to clear the control unit's memory, then test drive the car.

If the dash warning light and LED stay off, the probability is that the car was driven with the parking brake applied.

- The parking brake is applied for more than 30 seconds while driving.
- The brake fluid level in the master cylinder is too low.
- GRN/RED lead is shorted between the **BRAKE** warning light and parking brake switch.
- GRN/RED lead is shorted between the **BRAKE** warning light and brake fluid level switch.
- The **BRAKE** warning light is blown.
- GRN/RED has an open between the **BRAKE** warning light and parking brake.
- GRN/RED has an open between the parking brake switch and control unit.

Problem Code 4-1 to 4-8: Speed Sensor

NOTE: Control unit will only indicate the higher number sub-code.

Ignition switch: OFF

Disconnect wire harness from speed sensor.

Check for resistance between sensor terminals.

Is there 500–1,000 Ω?

NO

Faulty speed sensor.

YES

Disconnect the 18P connector from the control unit.

Check each wire for continuity between the sensor and control unit:

- GRN/BLK: Front Right Positive
- GRN/BLU: Front Left Positive
- GRN/YEL: Rear Right Positive
- LT BLU: Rear Left Positive
- GRN: Front Right Negative
- BRN: Front Left Negative
- BLU/YEL: Rear Right Negative
- GRY: Rear Left Negative

Is there continuity?

NO

Repair open in sensor wire:


- GRN/BLK: Front Right Positive
- GRN/BLU: Front Left Positive
- GRN/YEL: Rear Right Positive
- LT BLU: Rear Left Positive
- GRN: Front Right Negative
- BRN: Front Left Negative
- BLU/YEL: Rear Right Negative
- GRY: Rear Left Negative

Faulty control unit


SENSOR SIDE CONNECTOR

FRONT RIGHT

FRONT LEFT

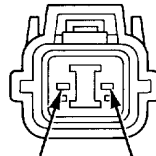

GRN GRN/BLK

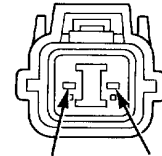

BRN GRN/BLU

View from terminal side

4WS: SENSOR SIDE CONNECTOR


2WS: SENSOR SIDE CONNECTOR

REAR RIGHT


REAR LEFT

REAR RIGHT


REAR LEFT

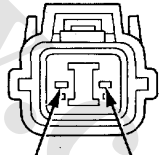


GRY[⊖] LT BLU[⊕]

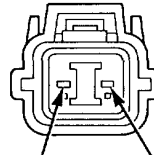

BLE/YEL[⊖] GRN/YEL[⊕]

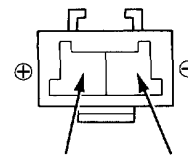

GRN/YEL[⊕] BLE/YEL[⊖]

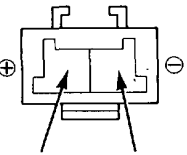


GRY[⊕] LT BLU[⊖]

View from terminal side

CONTROL UNIT 18P CONNECTOR

BRN: FL[⊖] GRN: FR[⊖] GRN/BLU: FL[⊕] GRN/BLK: FR[⊕]

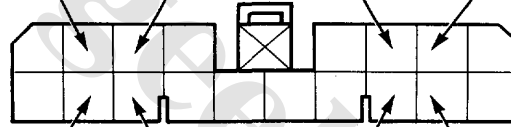

GRY: RL[⊖] BLU/YEL: RR[⊖] LT BLU: RL[⊕] GRN/YEL: RR[⊕]

View from wire side

(cont'd)

Troubleshooting

Flowchart (cont'd)

Problem Code 5 to 5-4, 5-8: Speed Sensor(s)

Disconnect wire harness from speed sensor.

Check for resistance between sensor terminals.

Is there 500–1,000 Ω?

NO

Faulty speed sensor.

YES

Disconnect the 18P connector from the control unit.

Check each wire for continuity between the sensor and control unit:
 GRN/BLK: Front Right Positive
 GRN/BLU: Front Left Positive
 GRN/YEL: Rear Right Positive
 LT BLU: Rear Left Positive
 GRN: Front Right Negative
 BRN: Front Left Negative
 BLU/YEL: Rear Right Negative
 GRY: Rear Left Negative

Is there continuity?

NO

Repair open in sensor wire:
 GRN/BLK: Front Right Positive
 GRN/BLU: Front Left Positive
 GRN/YEL: Rear Right Positive
 LT BLU: Rear Left Positive
 GRN: Front Right Negative
 BRN: Front Left Negative
 BLU/YEL: Rear Right Negative
 GRY: Rear Left Negative

YES

Reconnect the 18P connector to the control unit and connectors to the speed sensors.

Connect ALB checker to inspection connector.

Check ALB function in MODE 2 and 3.

Does it work properly?

NO

Faulty modulator.



YES

- Incorrect the air gap (page 13-81)
- Faulty control unit.

SENSOR SIDE CONNECTOR

FRONT RIGHT

FRONT LEFT

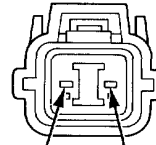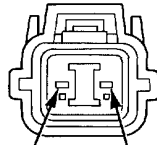

GRN GRN/BLK



BRN GRN/BLU

View from terminal side

4WS: SENSOR SIDE CONNECTOR

REAR RIGHT

REAR LEFT

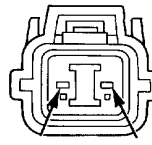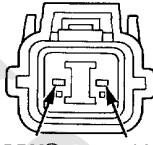



GRY LT BLU

BLE/YEL GRN/YEL

2WS: SENSOR SIDE CONNECTOR

REAR RIGHT


REAR LEFT

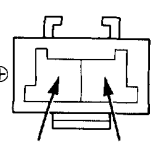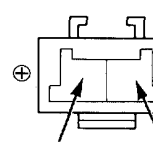

View from terminal side

CONTROL UNIT 18P CONNECTOR

BRN: FL GRN: FR GRN/BLU: FL GRN/BLK: FR

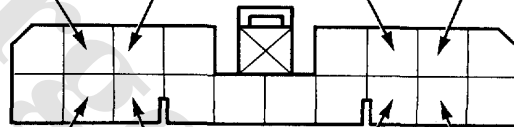

GRY: RL BLU/YEL: RR LT BLU: RL GRN/YEL: RR

View from wire side.

Problem Code 6-1: Front Fail Safe Relay Circuit

Remove front fail safe relay.

Check relay function (page 13-80).

Does it work properly?

NO **Faulty the front fail safe relay.**

YES

Check for continuity between BLK lead and body ground.

Is there continuity?

NO **Repair open in BLK wire between the fail safe relay and ground or poor ground.**

YES

Turn ignition switch ON.

Check for voltage between YEL/BLK lead (+) and body ground (-).

Is battery voltage available?

NO **Repair open in YEL/BLK wire between the fail safe relay and No. 8 fuse (7.5 A).**

YES

Turn ignition switch OFF.

Disconnect the 3P connectors from the front solenoids.

Check for continuity in BRN/BLK lead between fail safe relay and solenoids.


Is there continuity?

NO **Repair open in BRN/BLK wire between the solenoids and fail safe relay.**


YES

(To page 13-58)

FRONT FAIL SAFE RELAY CONNECTOR HARNESS SIDE

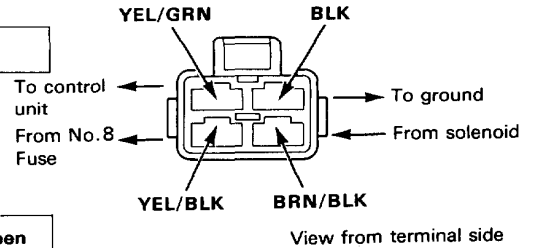

FRONT SOLENOIDS CONNECTOR HARNESS SIDE

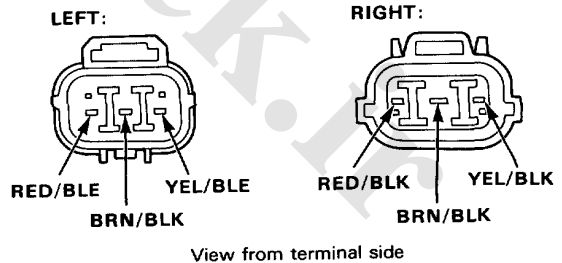

(cont'd)

Troubleshooting

Flowchart (cont'd)

(From page 13-57)

Check for resistance between RED and BLK terminals of front solenoid.

Is there 1-3 Ω?

NO

Faulty solenoid.

YES

Check for resistance between YEL and BLK terminals of front solenoid.

Is there 1-3 Ω?

NO

Faulty solenoid.

YES

Disconnect the 12P connector from the control unit.

Check for continuity between control unit and front solenoid:
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet.

Is there continuity?


NO

Repair open in wire:
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet

YES


• Faulty control unit.
 • Incorrect air gap (page 13-81).

FRONT SOLENOID CONNECTOR

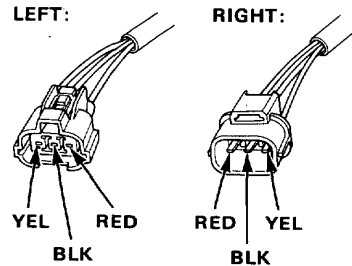


View from terminal side

FRONT SOLENOIDS CONNECTOR HARNESS SIDE

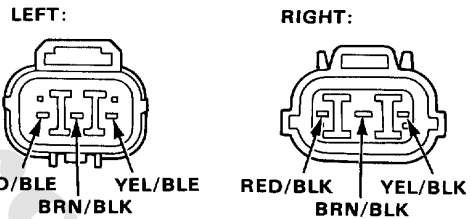

View from terminal side

CONTROL UNIT 12P CONNECTOR

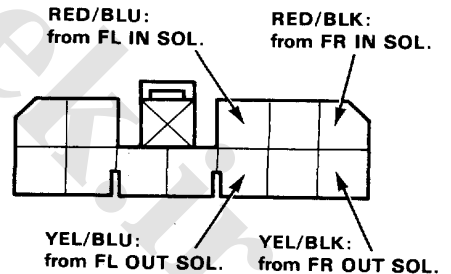

View from wire side.

Problem Code 6-4: Rear Fail Safe Relay Circuit

Remove rear fail safe relay.

Check relay function (page 13-80).

Does it work properly?

NO **Faulty relay.**

YES

Check for continuity between BLK lead of wire harness and body ground.

Is there continuity?

NO **Repair open in BLK wire between the relay and ground or poor ground.**

YES

Turn ignition switch ON.

Check for voltage between YEL/BLK lead (+) of wire harness and body ground (-).

Is battery voltage available?

NO **Repair open in YEL/BLK wire between the relay and No.8 fuse.**

YES

Turn ignition switch off.

Disconnect the 3P connector from the rear solenoid.

Check for continuity in BLU/BLK lead between fail safe relay and solenoid.


Is there continuity?

NO **Repair open in BLU/BLK wire between the relay and solenoid.**


YES

(To page 13-60)

REAR FAIL SAFE RELAY CONNECTOR HARNESS SIDE

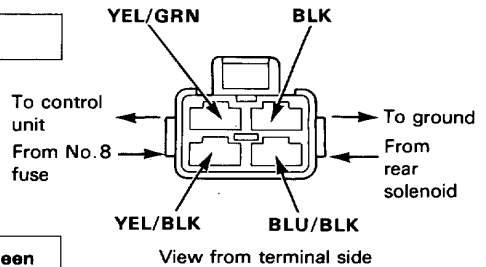

REAR SOLENOID CONNECTOR HARNESS SIDE

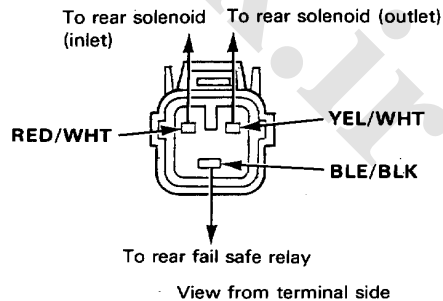

(cont'd)

Troubleshooting

Flowchart (cont'd)

(From page 13-59)

Disconnect the 18P and 12P connectors from the control unit.

Check for continuity in YEL/GRN lead between fail safe relay and control unit.

Is there continuity?

NO
Repair open in YEL/GRN wire between the relay and control unit.

YES

Check for continuity between control unit and rear solenoid.
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet


Is there continuity?

NO
Repair open in wire between the solenoid and control unit:
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet.

YES


Faulty control unit.

REAR FAIL SAFE RELAY CONNECTOR
HARNESS SIDE

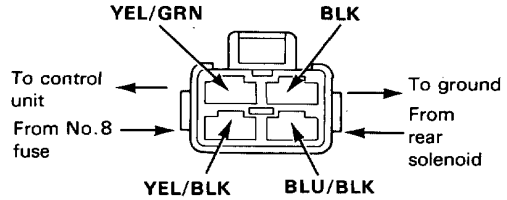

View from terminal side


REAR SOLENOID CONNECTOR
HARNESS SIDE

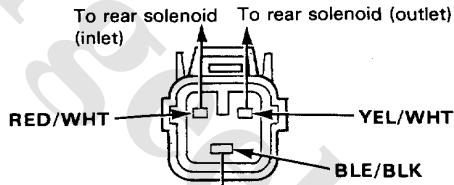

View from terminal side


CONTROL UNIT 18P CONNECTOR

GRN: from FAIL SAFE RELAY

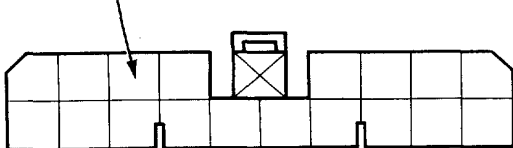

12P CONNECTOR

RED/WHT: from REAR IN SOL.

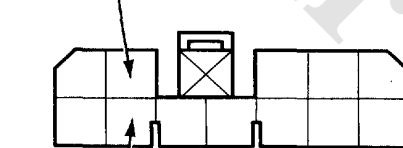

YEL/WHT: from REAR OUT SOL.

View from wire side

Problem Code 7-1 and 7-2 Front Solenoid Related Problem

Disconnect wire harness from front solenoids.

Check for resistance between RED and BLK terminals of front solenoid.

Is there 1-3 Ω ?

NO **Faulty solenoid.**

YES

Check for resistance between YEL and BLK terminals of front solenoid.

Is there 1-3 Ω ?

NO **Faulty solenoid.**

YES

Disconnect the 12P connector from the control unit.

Check for continuity between control unit and front solenoid:
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet.

Is there continuity ?

NO **Repair open in wire:**
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet

YES

Check for continuity between control unit and body ground.
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet

Is there continuity?

YES **Repair short in wire:**
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet


NO

Faulty control unit.
Incorrect air gap (page 13-81).

FRONT SOLENOID CONNECTOR

LEFT:

RIGHT:

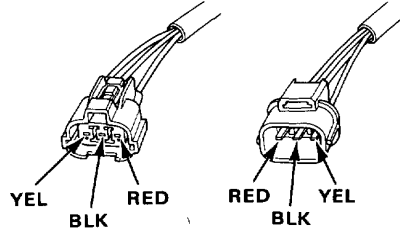


View from terminal side

FRONT SOLENOIDS CONNECTOR HARNESS SIDE

LEFT:


RIGHT:

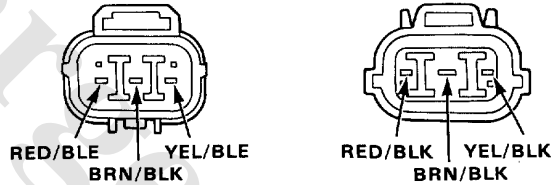

View from terminal side

CONTROL UNIT 12P CONNECTOR

RED/BLU: from FL IN SOL. RED/BLK: from FR IN SOL.

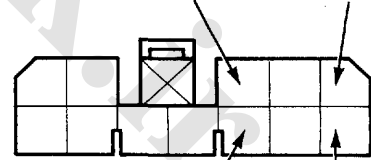

YEL/BLU: from FL OUT SOL. YEL/BLK: from FR OUT SOL.

View from wire side

(cont'd)

Troubleshooting

Flowchart (cont'd)

Problem Code 7-4: Rear Solenoid Related Problem

Disconnect wire harness from rear solenoid.

Check for resistance between RED and BLK terminals of rear solenoid.

Is there 1-3 Ω ?

NO

Faulty solenoid.

YES

Check for resistance between YEL and BLK terminals of rear solenoid.

Is there 1-3 Ω ?

NO

Faulty solenoid.

YES

Disconnect the 12P connector from the control unit.

Check for continuity between control unit and rear solenoid:
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet

Is there continuity?

NO

Repair open in wire between the rear solenoid and control unit:
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet

YES

Check for continuity between control unit and body ground.
RED/BLK: Front Right Inlet
YEL/BLK: Front Right Outlet
RED/BLU: Front Left Inlet
YEL/BLU: Front Left Outlet

Is there continuity?


YES

Repair short in wire:
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet


NO

Faulty control unit.


REAR SOLENOID CONNECTOR

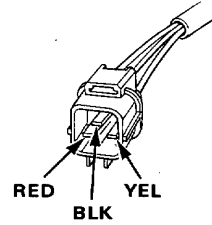

REAR SOLENOID CONNECTOR HARNESS SIDE

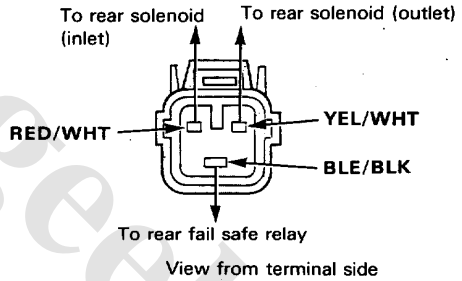

RED/WHT: from REAR IN SOL.

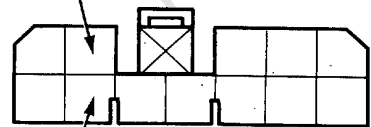

YEL/WHT: from REAR OUT SOL.

View from wire side.




Hydraulic System

Hydraulic Connections

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- The brake pipes and modulator pipe fittings are color coded.

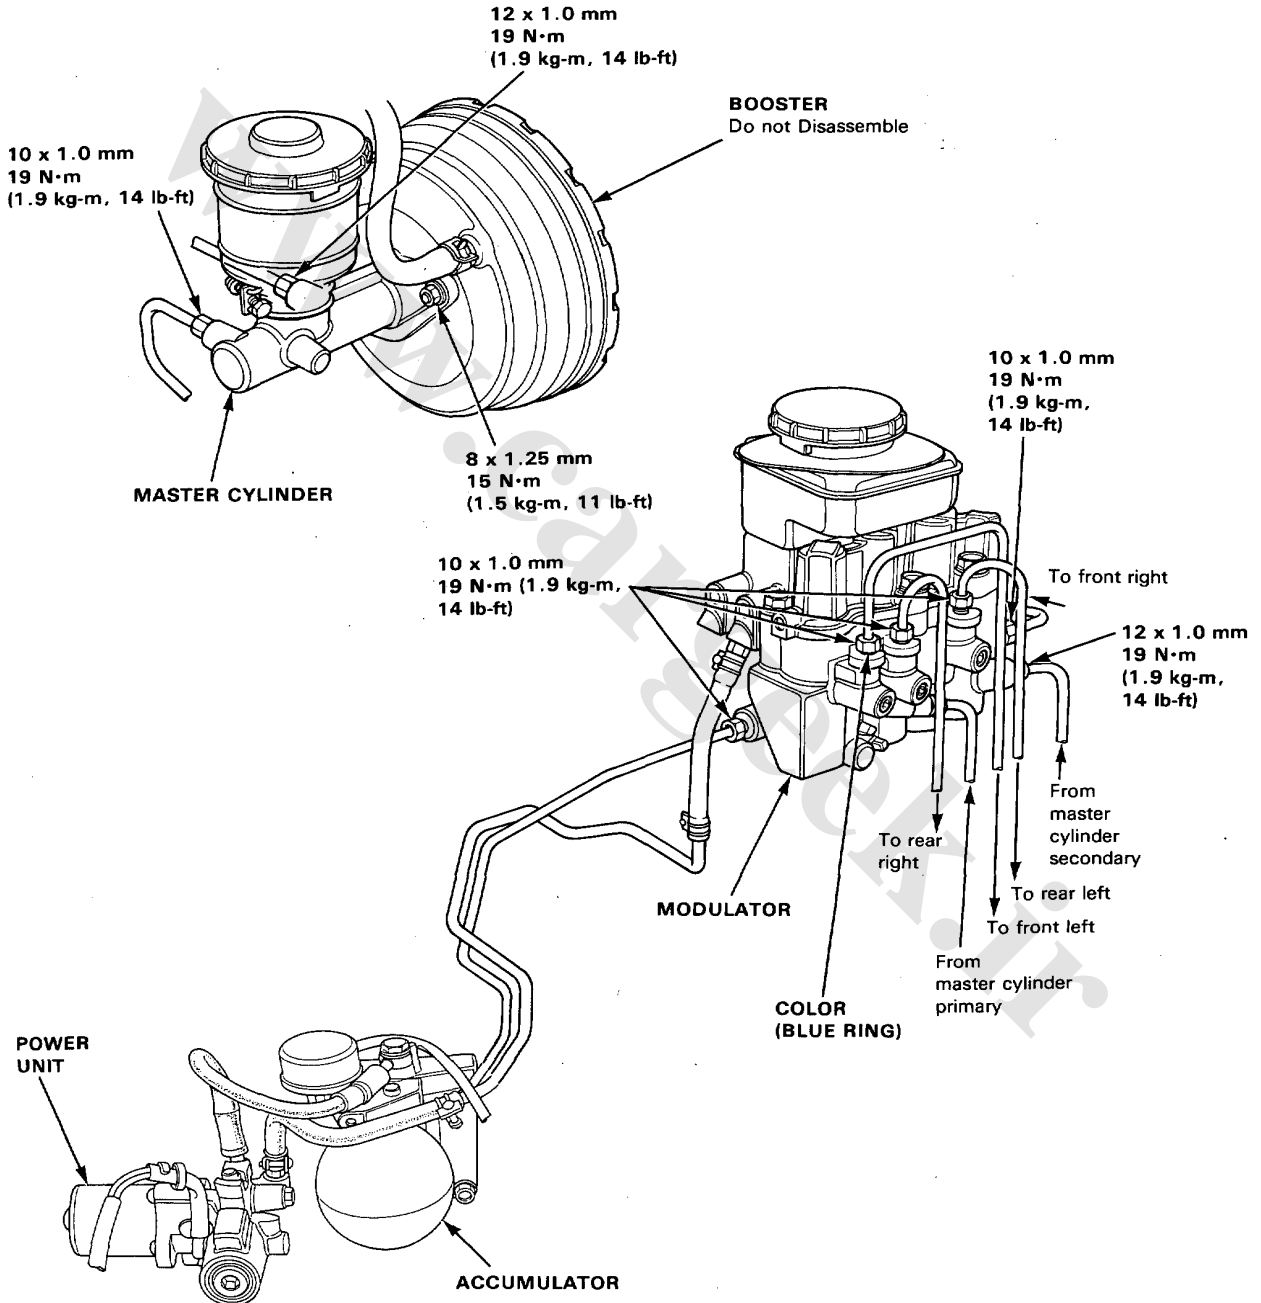


Modulator

Index/Inspection

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.
- Use only new DOT 3 or DOT 4 clean brake fluid.


- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid.
- Replace all rubber parts with new ones whenever the modulator is disassembled.

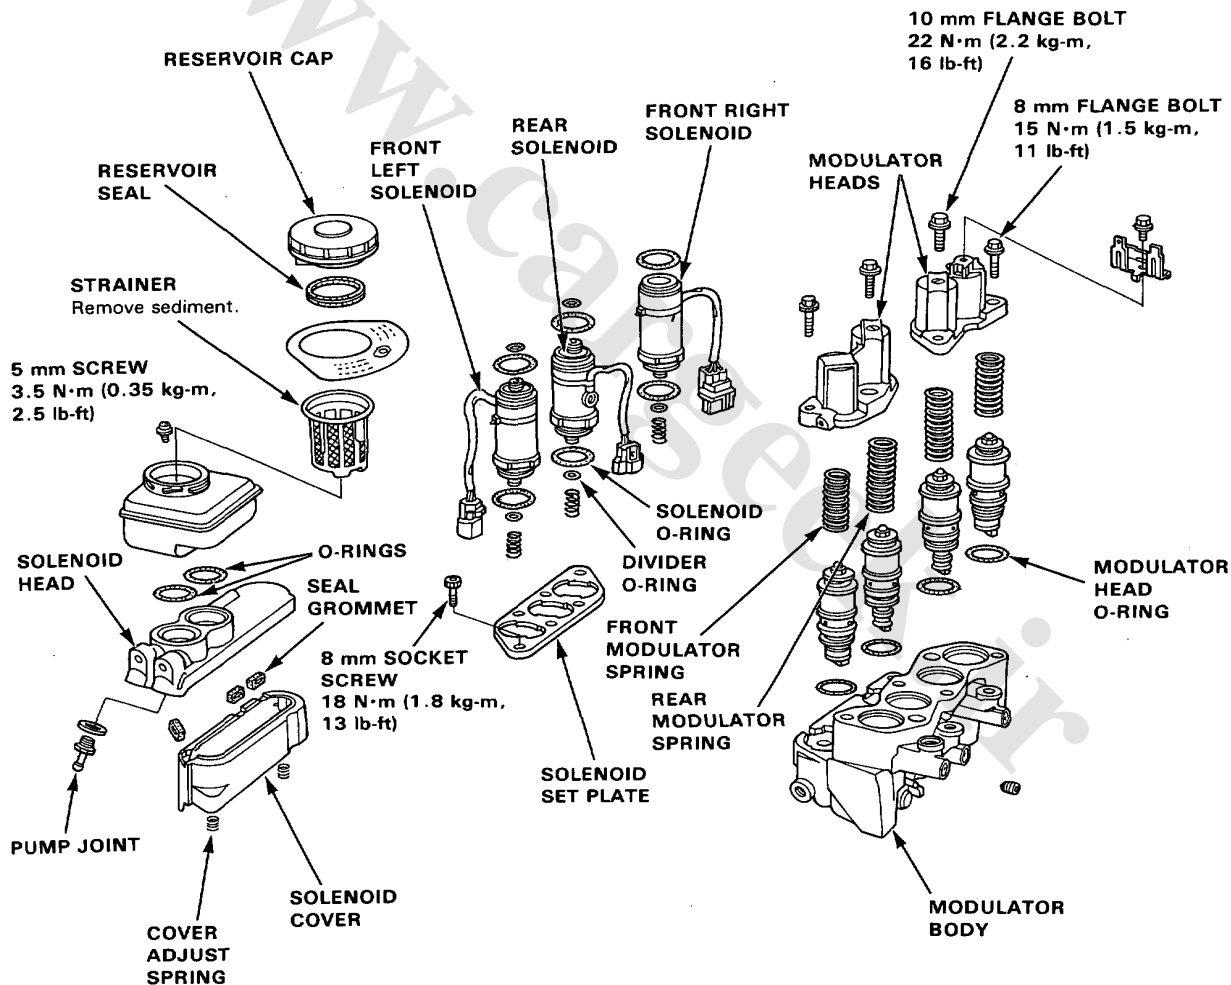

Solenoid

Solenoid Leak Test

1. Connect circuit tester (Ω range) between the BLK and YEL terminals of the accumulator pressure switch connector.
2. Attach the positive (+) lead of a fully charged 12V battery to the RED/WHT terminal of the power unit motor connector and negative (-) lead to the GRN terminal, and install a switch between as shown.
3. Turn the switch on to allow sufficient pressure to build up within the accumulator and check for continuity with the circuit tester. If the circuit tester shows continuity (pressure switch turned on), run the power unit for 4 seconds more, then turn the switch off.

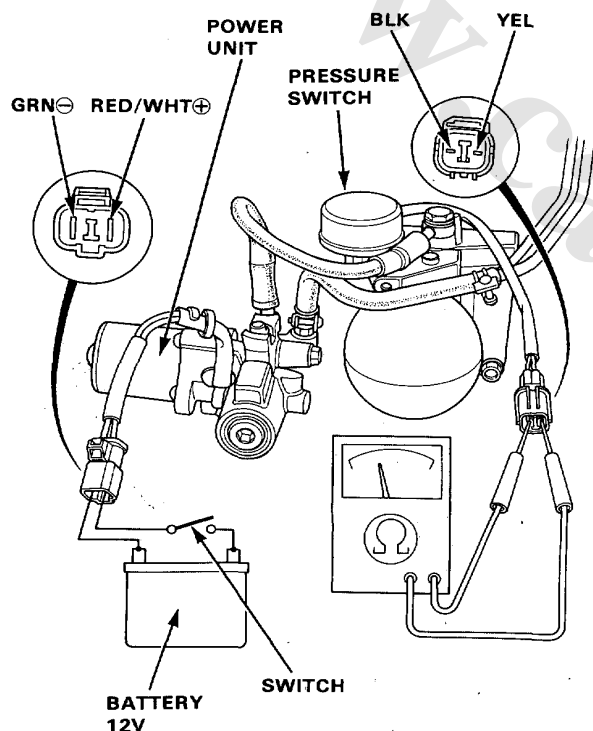


Check for continuity 1 minute after switch was turned off.

No continuity: Leaky solenoid (if the pipe joint is tight) or faulty divider O-ring.

4. Apply 12 V across the BLK and RED terminals of the solenoid connector momentarily.


NOTE: Modulator reservoir may overflow.

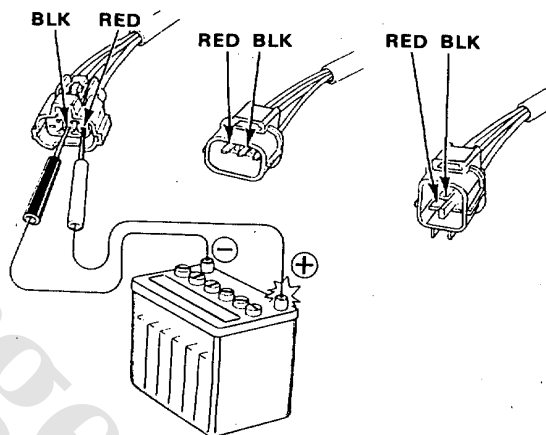

- Check if the solenoid hisses or squeaks. Replace the modulator if the solenoid hisses or squeaks.
- Make sure that the solenoid does not hiss or squeak after it has clicked into position. Replace the modulator if the solenoid hisses or squeaks.
- Check the pressure switch for continuity within one minute. It is normal if there is continuity. If there is no continuity, solenoid is faulty and must be replaced.


Removal

1. Drain the brake fluid from the modulator tank.
2. Drain the high pressure brake hose (page 13-64).
3. Disconnect the inlet hose.
4. Remove the reservoir strainer.
5. Remove the 5 mm screws and remove the reservoir.
6. Screw the 6 mm bolt into the threaded hole in the center of the solenoid head, raise the solenoid head parallel to the ground and remove it.
7. Remove the solenoid cover.

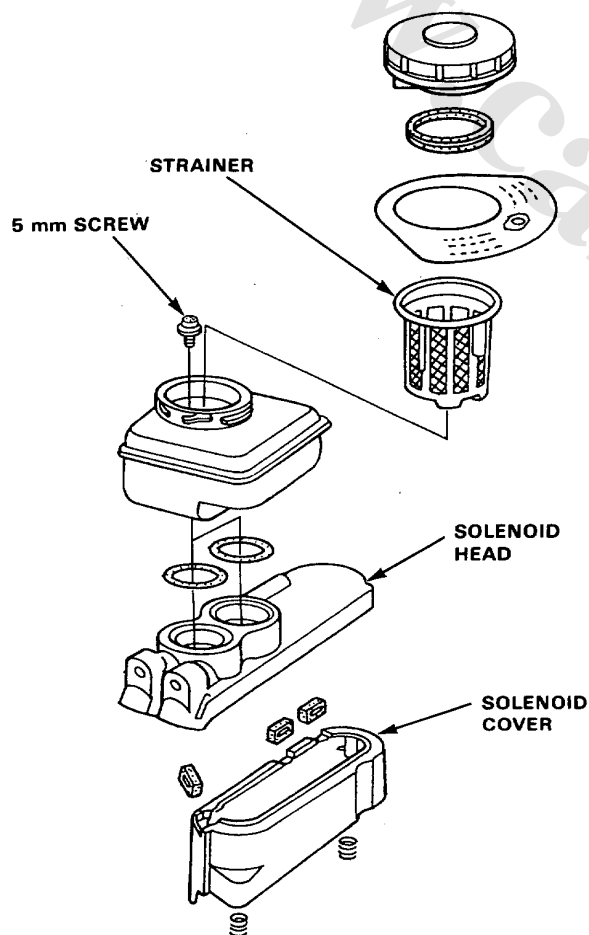

8. Remove the hexagonal socket screws and loosen the solenoid set plate.
9. Turn the solenoid valves several times until they move freely and turn the solenoid valves 1/2 turn to align their projection with the cutout in the set plate. Remove the solenoid valves together with the set plate.

CAUTION: The solenoid valves are delicate parts. Be careful not to drop them.

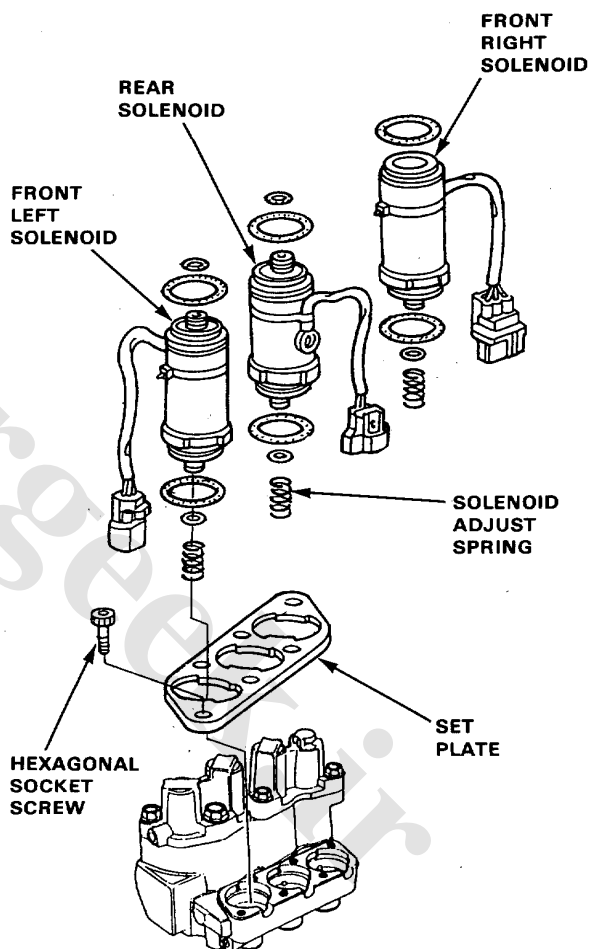

Solenoid

Inspection


1. Connect a tube to the inlet of the solenoid valve. Apply compressed air to the solenoid valve through the tube.
2. Check the solenoid valve for proper operation by connecting a 12 V fully charged battery to the 3-P coupler terminals:

Voltage not applied: There should be no air flow.

Black – Red: There should be air flow through IN and OUT.

Black – Yellow: There should be air flow through IN.


FOR EXAMPLE:
FRONT SOLENOID 3-P COUPLER

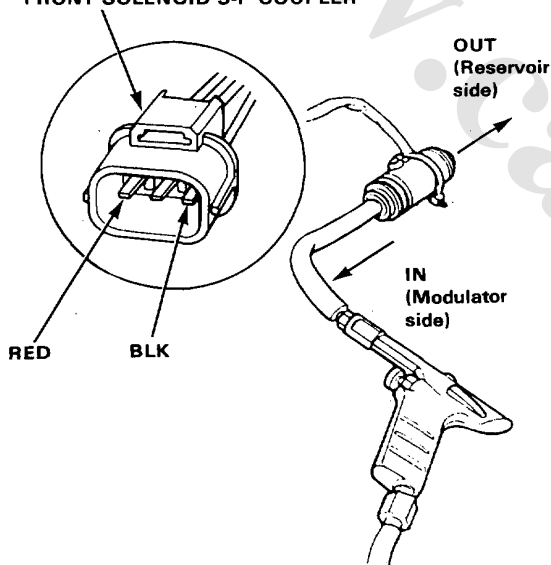

Installation

1. Fill the modulator body with brake fluid up to the step in the solenoid mounting hole.


NOTE: On solenoid valve assembly, place shop rags over the solenoid valve and under the modulator valve to prevent the brake fluid from spilling on the valve.

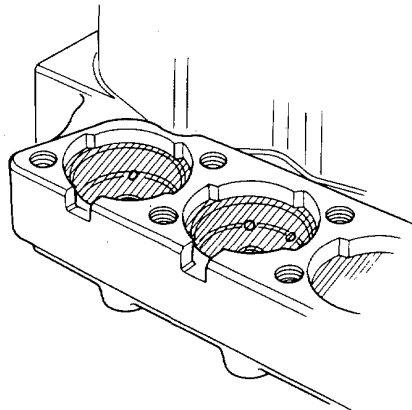

2. Coat the O-ring with the clean brake fluid and install the O-ring onto the solenoid valve.
3. Install the solenoid valves on the set plate.


WARNING Each solenoid valve and set plate are marked for correct installation. If the solenoid valves are interchanged, the system will not work properly. Refer to the marks and be sure to install them in correct positions.

- Align the projection on the solenoid valve with the cutout in the set plate and turn the valve 1/2 turn. The solenoid wire should face rearward.

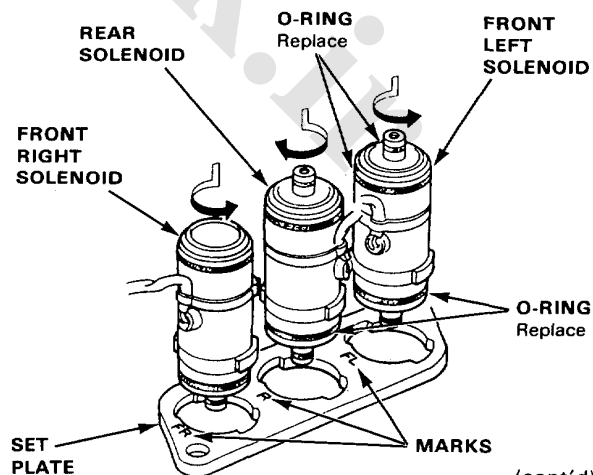


(cont'd)

4. Install the solenoid adjust springs on the modulator body.
5. Install the solenoid valves and set plate and secure with the hexagonal socket screws.
6. Install the solenoid cover and solenoid head.
7. Install the reservoir tank.
8. Install the tank filter.
9. Connect the low pressure hose.

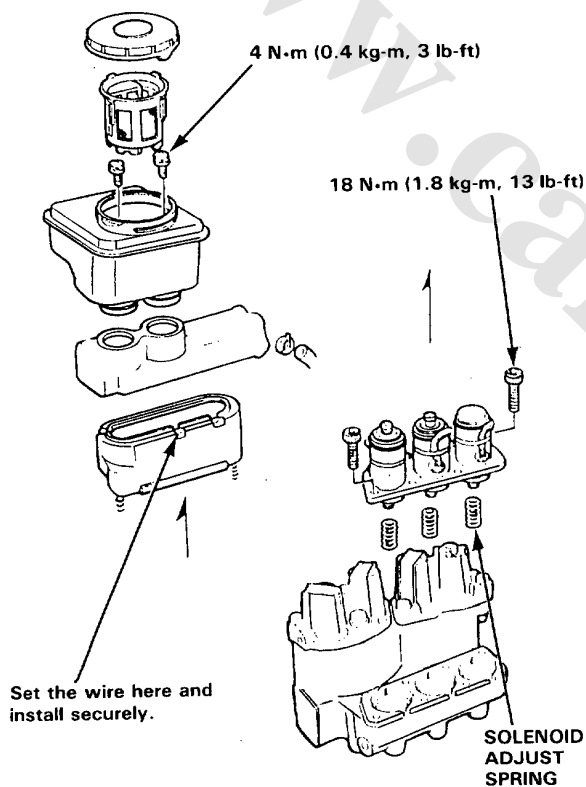

Removal


1. Remove the modulator heads.

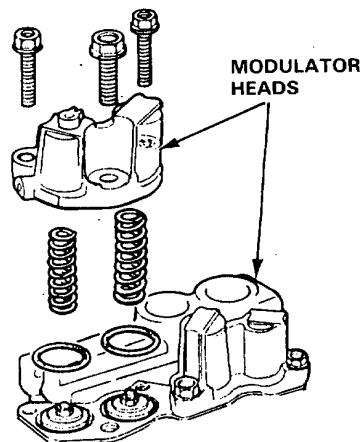

2. Insert the driver into the spring, pry off the piston assembly until it lifts up slightly and pull out the lock nut with a pair of pliers.

CAUTION:


- Set the washer between the driver and modulator body to prevent damage to the body.
- Be careful not to damage the piston sleeve.

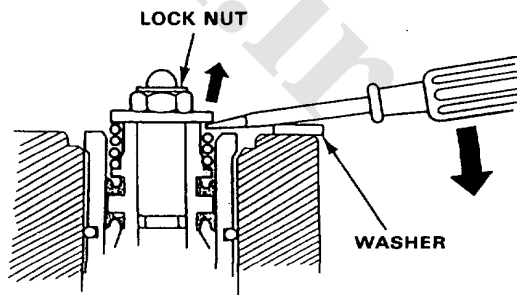


Piston

Installation


1. Apply rubber grease to the shaded sections of the piston assembly, shown in the drawing below.

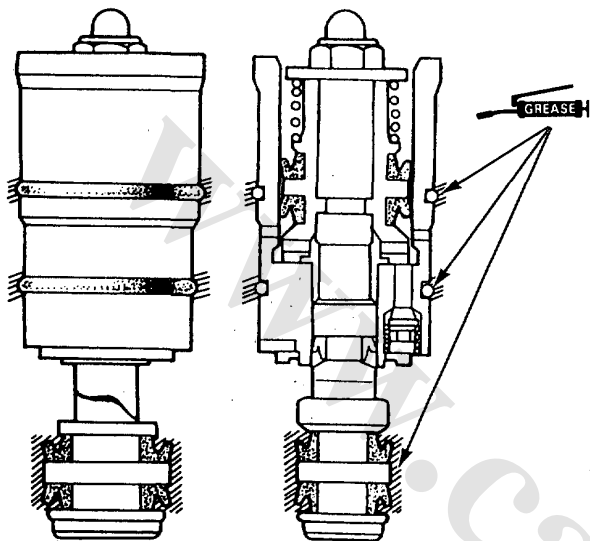


2. Adjust so that the brake fluid flows into the piston mounting hole in the modulator body.

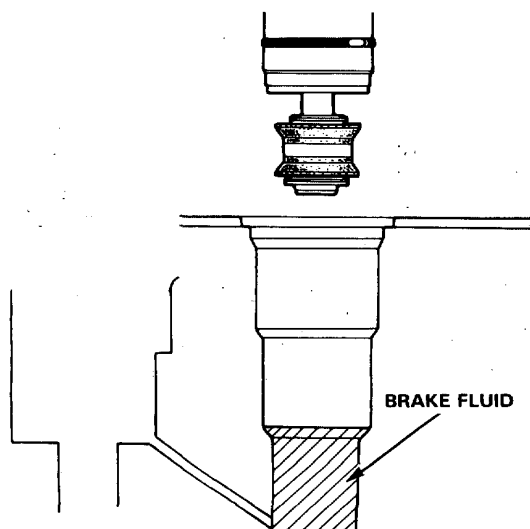

3. Set the piston assembly in the piston mounting hole in the modulator body and push down on the piston.
4. Push on the piston about 5 times until no bubbles come out of the solenoid side.

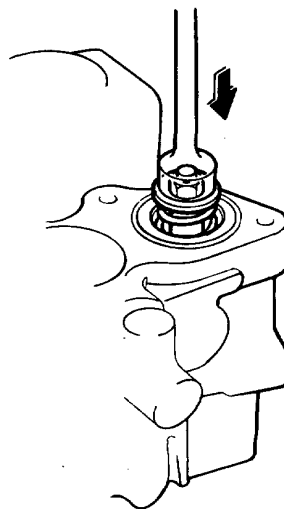

5. Install the modulator springs.
6. Install the solenoid heads with care not to pinch the O-rings.

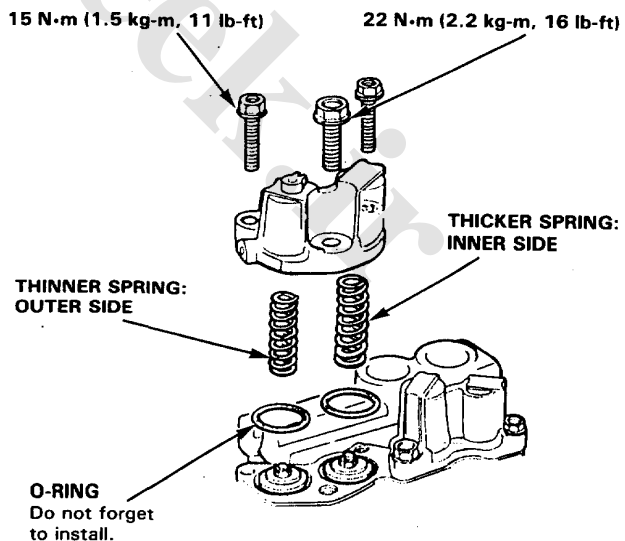


Power Unit

Index/Inspection

CAUTION:

- Do not attempt to disassemble the power unit parts except for those shown exploded in this illustration.
- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.


- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid.

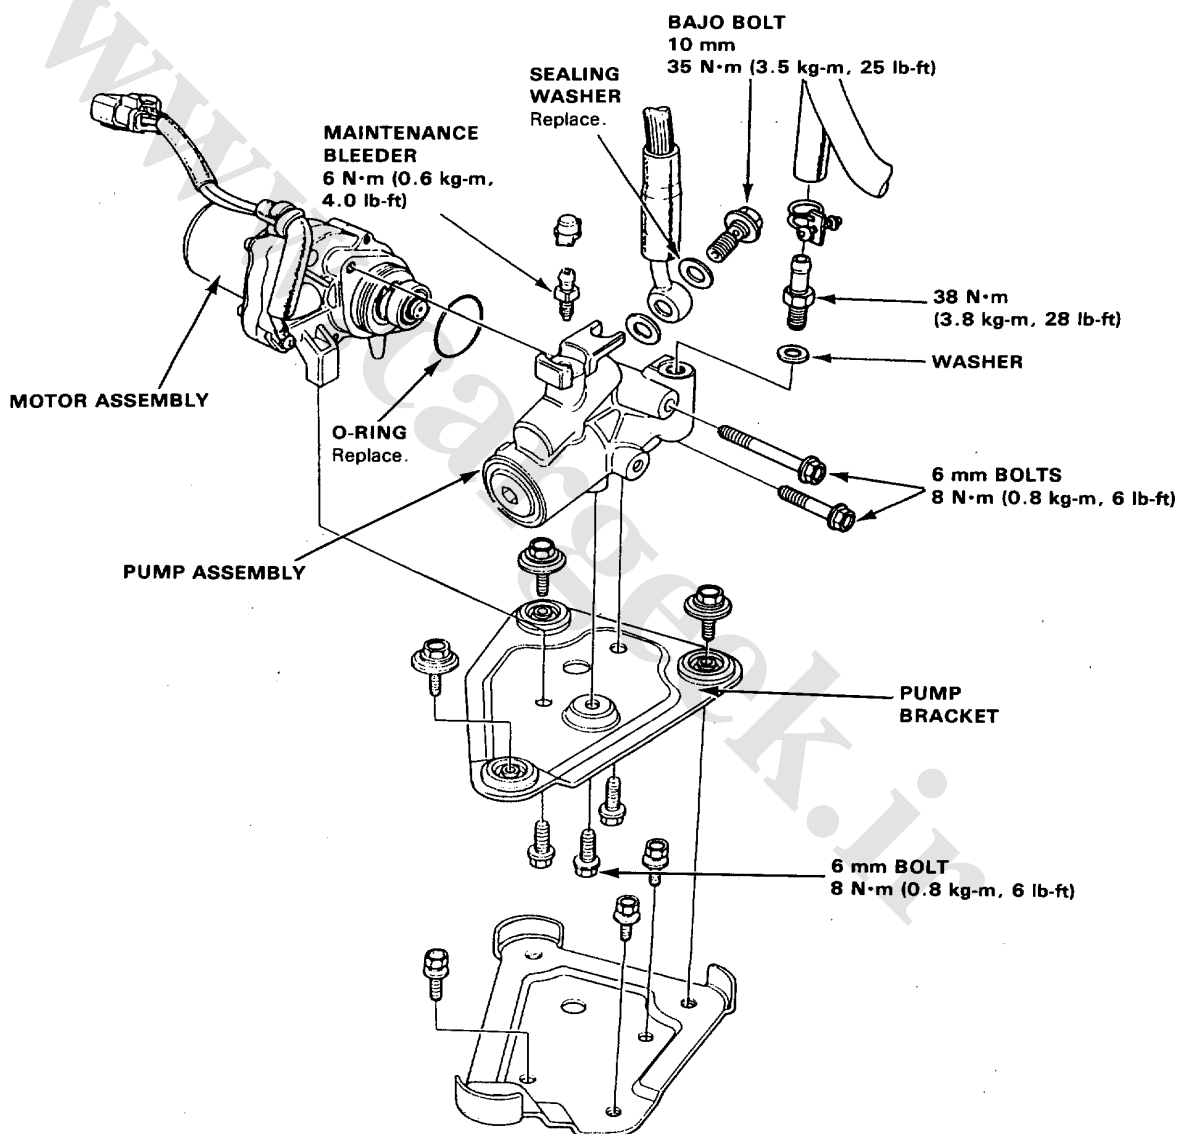


Power Unit

Disassembly/Reassembly

1. Remove the pump bracket.
2. Remove the 6 mm bolts attaching the pump to the pump motor.

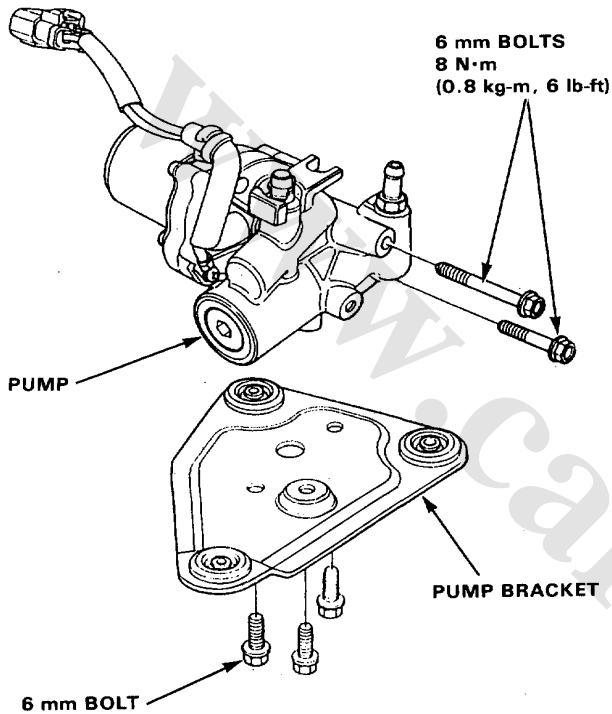


3. Separate the motor from the pump while rotating the pump right and left.

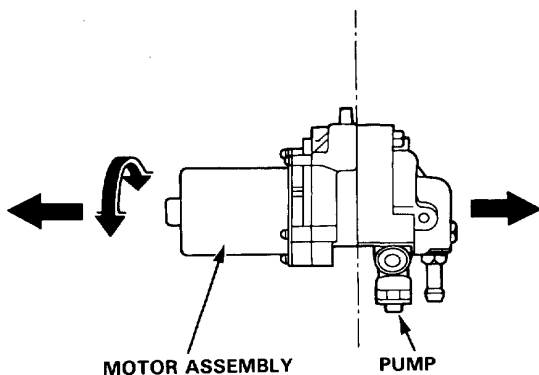


NOTE: About 10 cc (0.6 cu-in) of brake fluid will flow out when the motor is removed from the pump.

4. Wash the motor with clean brake fluid only on the exposed end and blow dry with compressed air.

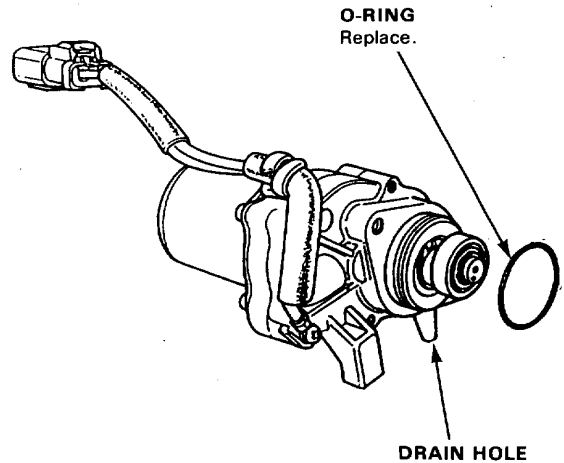

NOTE: Do not wash or dip the motor in brake fluid. Also be careful not to allow oil or water to enter the inside through the water drain hole.

5. Install a new O-ring on the pump motor.
6. Coat the O-ring with clean brake fluid and install the pump on the motor while rotating it right and left by hand.

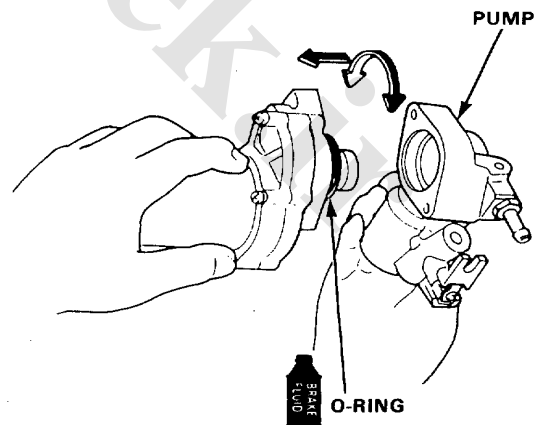


7. Install and tighten the 6 mm bolts.
8. Install the removed parts in the reverse order of removal.

Accumulator Unit

Accumulator/Pressure Switch


1. Drain the high pressure brake fluid from the power unit (see page 13-64).
2. Remove three 6 mm flange bolts, then remove the accumulator from the accumulator bracket.
3. Remove the pressure switch bolt and oil bolt then remove the pressure switch from the bracket.

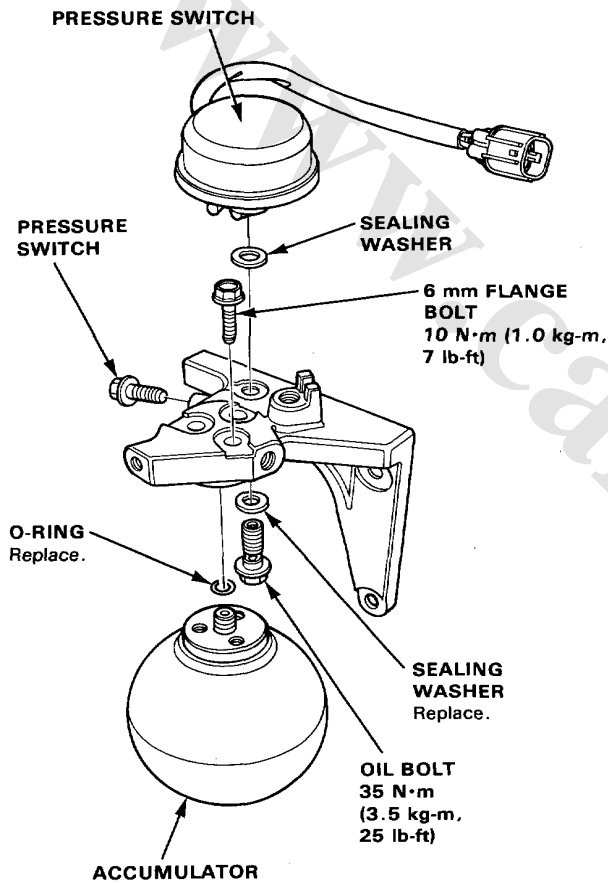

Accumulator Disposal

⚠ WARNING The accumulator contains high pressure nitrogen gas, do not puncture expose to flame or attempt to disassemble the accumulator or it may explode; severe personal injury may result.

1. Secure the accumulator in a vice so that the relief plug points straight up.
2. Slowly turn the plug 3-1/2 turns and then wait 3 minutes for all pressure to escape.
3. Remove the plug completely and dispose of the accumulator unit.

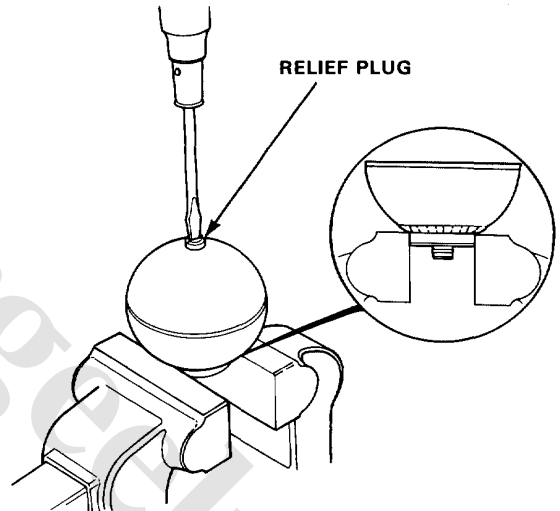

Master Cylinder

Overhaul/Inspection

CAUTION:


- Avoid spilling brake fluid on painted surfaces as severe damage can result. Wipe up spilled fluid at once and rinse well with clean water.

- This symbol represents brake fluid. Use only DOT 3 or 4 brake fluid.
- Use only HONDA Brake Cylinder Grease (P/N 08733-B020E) or equivalent.

- Carefully inspect the bore of the master cylinder for pits, scratches or scoring.
- Replace the master cylinder if the bore is damaged or worn. Do not hone or attempt to refinish the bore.

NOTE:

- Wash all removed parts in brake fluid and blow dry with compressed air. Blow open all passages and fluid ports.
- Replace all rubber parts with new ones whenever the cylinder is disassembled.
- To prevent damage, liberally apply clean brake fluid to the piston cups before installation.
- Do not attempt to refinish master cylinder bore. Replace if pitted or worn.

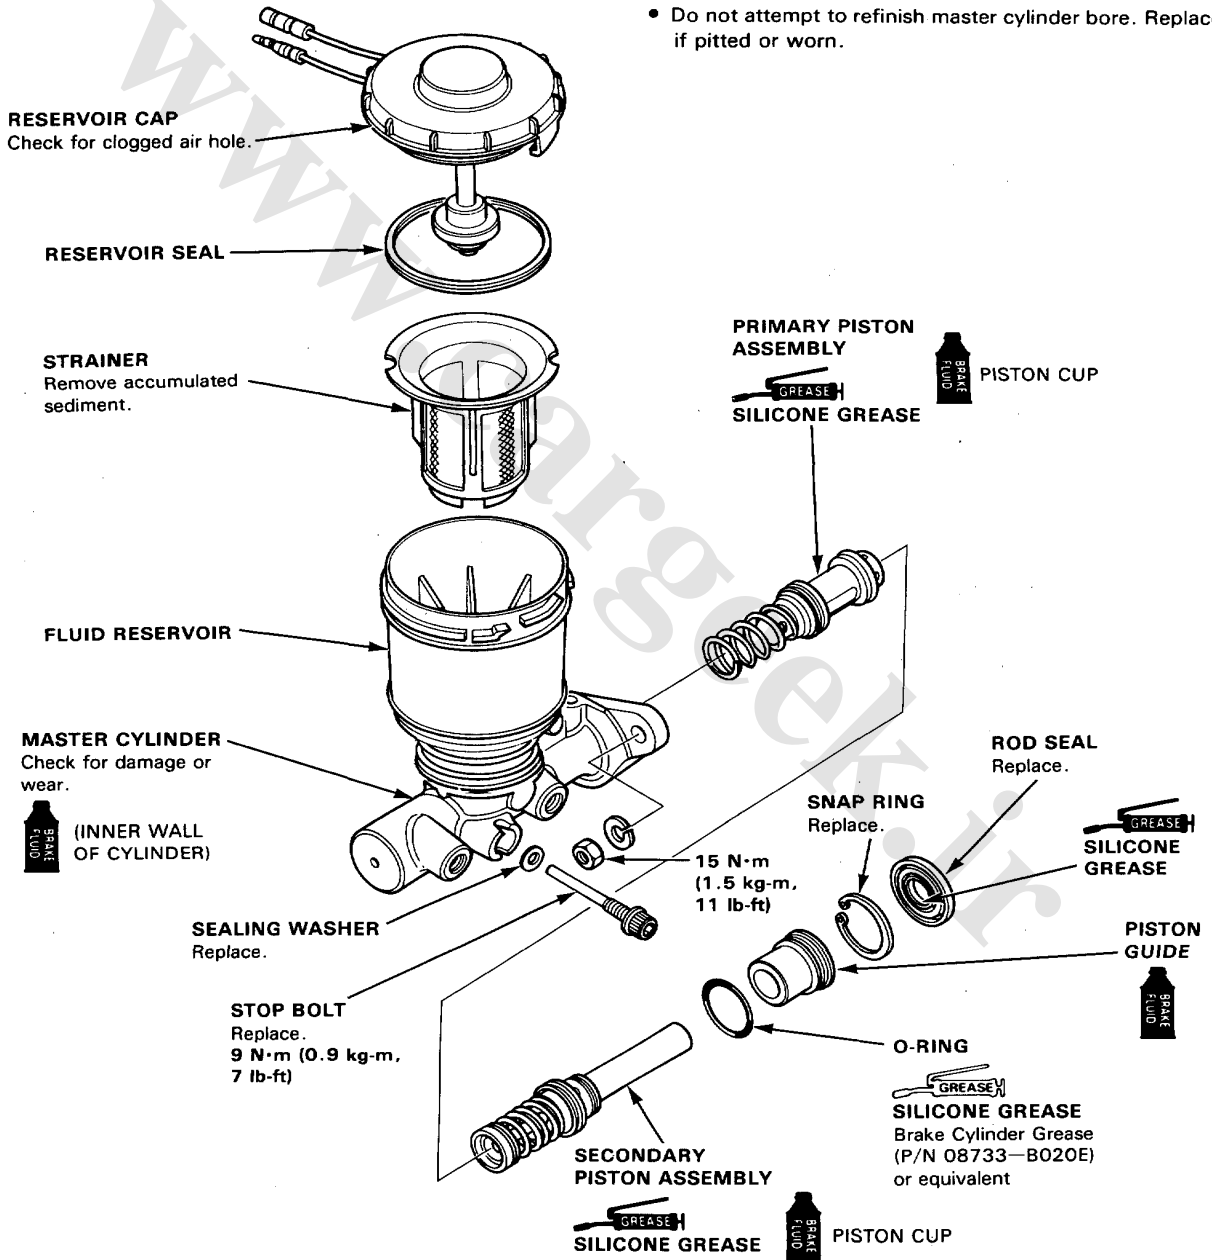


Master Cylinder

Disassembly

CAUTION:


- Avoid spilling fluid on painted, plastic or rubber parts as it may damage the finish.
- Plug the end of the brake hose with a shop rag to prevent brake fluid from flowing out of the brake hose after disconnecting.
- Use only new clean DOT 3 or DOT 4 brake fluid.
- Clean all parts thoroughly with brake fluid. Blow out all passages with compressed air.
- Do not allow foreign matter to enter the system.
- Be careful not to bend or damage the brake pipe when removing the master cylinder.

1. Remove the rod seal.

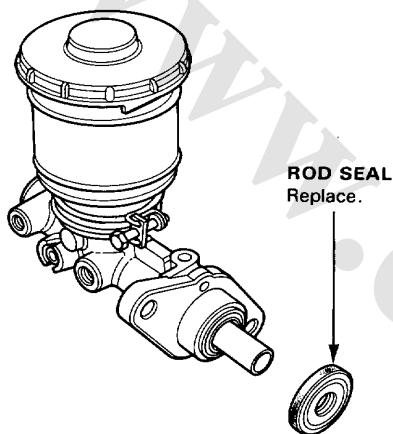


2. Push the secondary piston assembly, then remove the snap ring.

CAUTION: Avoid damaging the master cylinder wall.

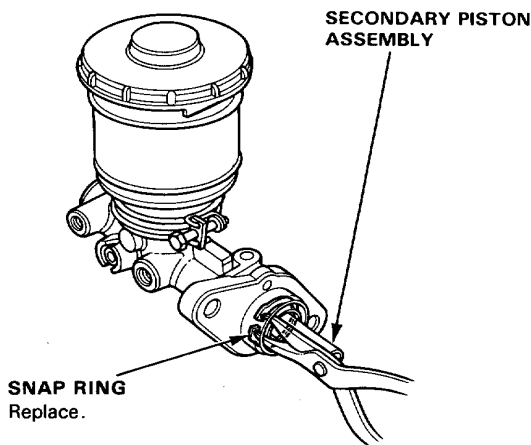

3. Remove the stop bolt while pushing in the secondary piston assembly.

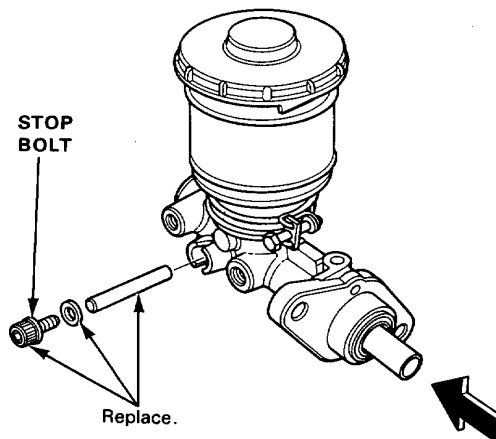

4. Remove the piston guide, secondary piston assembly and primary piston assembly.

NOTE: If the primary piston assembly is difficult to remove, apply compressed air from the primary piston side outlet.

CAUTION:

- Do not use high pressure air or bring the nozzle too close to the inlet.
- Place a shop rag over the master cylinder to prevent the primary piston from becoming a projectile.


Reassembly

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Clean all parts in brake fluid and air dry; blow out all passages with compressed air.
- Use only new clean DOT3 or DOT4 brake fluid.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid.

1. Lubricate the new piston parts with brake fluid.
2. Install the new O-ring and secondary cup onto the piston guide.


PISTON GUIDE ASSEMBLY

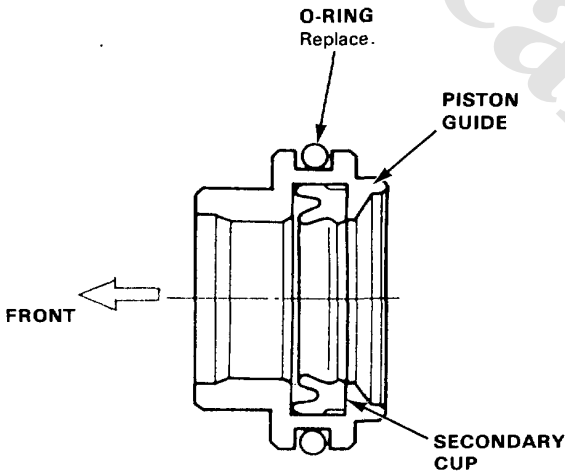

NOTE: Replace the secondary cup and piston guide as a set if necessary.

3. Make sure that the primary piston assembly and secondary piston assembly are in good condition.


PRIMARY PISTON ASSEMBLY

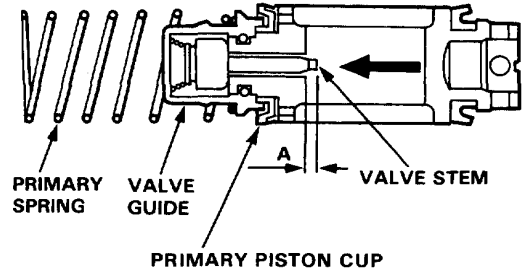

NOTE:

- Reaching through the primary piston stop bolt hole, lightly press on the valve stem to see if it moves smoothly.
- Make sure that the dimension A is 1.85–2.45 mm.

SECONDARY PISTON ASSEMBLY

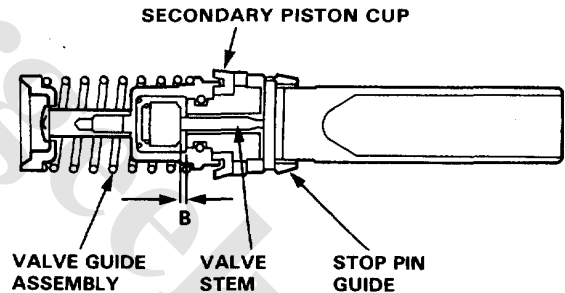

NOTE:

- Confirm that the dimension B is 0.9–1.5 mm while pushing the stop pin guide forward on the piston sub-assembly.
- Lightly press the stop pin guide to see if the valve stem moves smoothly.

(cont'd)

Master Cylinder

Reassembly (cont'd)


4. Assemble the primary piston assembly, secondary piston assembly and piston guide assembly in the master cylinder body.

NOTE: Install the primary piston with the slot on the cylinder facing the stop bolt hole side.


5. Push the secondary piston in until slot aligns with the stop bolt hole, then install and tighten the stop bolt.

CAUTION:

- Replace the stop bolt seal with a new one whenever disassembled.
- Apply brake fluid to the inner wall of the cylinder and piston cups, being careful that they are not turned inside out during installation.

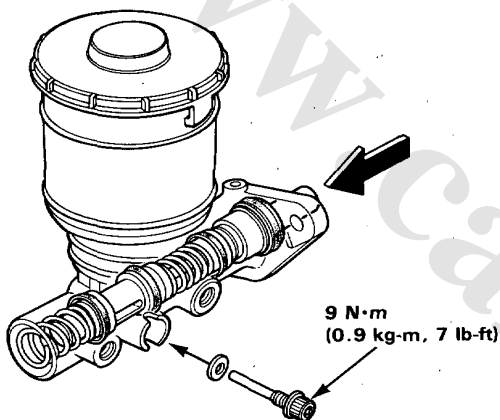


6. Press the secondary piston in and install the snap ring.

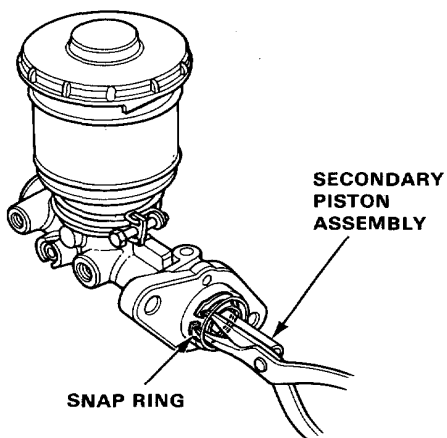

CAUTION: Avoid damaging the sliding surface of the secondary piston when installing the snap ring.

7. Install the rod seal.

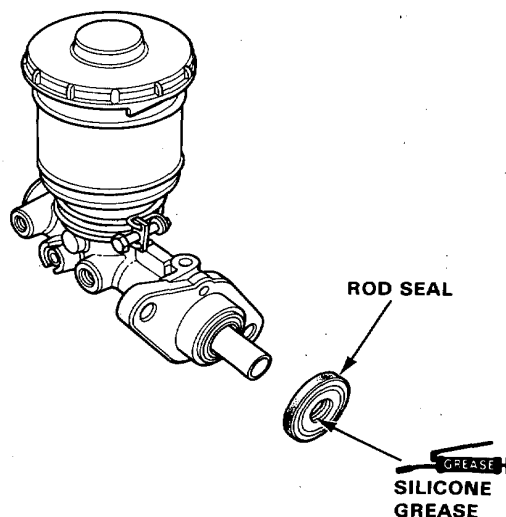

CAUTION:

- Make sure that there is no interference between the brake pipes and other parts when installing.
- Adjust the pushrod length and clearance (page 13-17 and 18).


Bleeding

Air Bleeding With ALB Checker

NOTE:


- Set the Pulse Selector switch to 50 when using ALB checker 07HAJ—SG00601.
- Do not depress the brake pedal during air bleeding. Or the air bleeding may be affected.

1. Fill the modulator reservoir with brake fluid up to the MAX level.
2. Disconnect the 6P coupler (PNK) from the cover mounted in front of the console and connect it to the ALB checker.

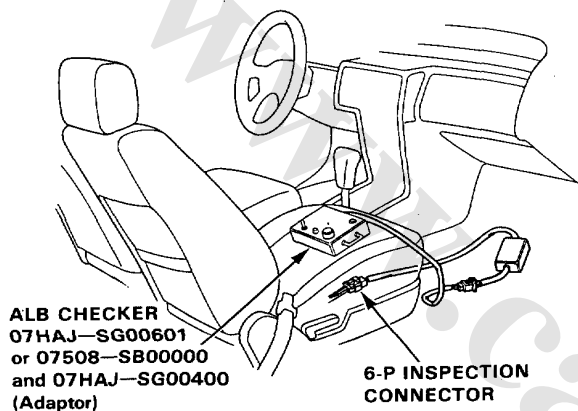


CAUTION: Place the car on level ground with the wheels blocked. Shift the transmission to P or Neutral.

3. Start the engine.
4. Release the parking brake.
5. Turn the power switch of ALB checker ON.

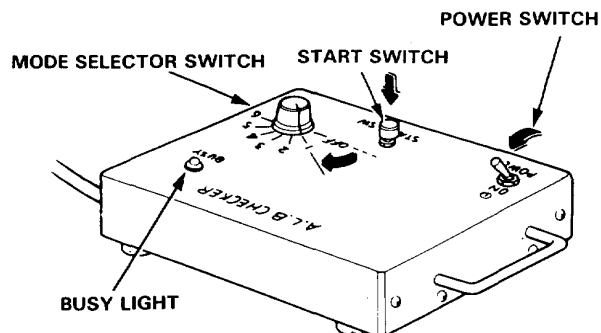


6. Turn the mode selector switch to 1.
7. Press the start switch.
8. Make sure that the motor runs.
9. Wait for the motor to stop.

10. Turn the mode switch to 2.

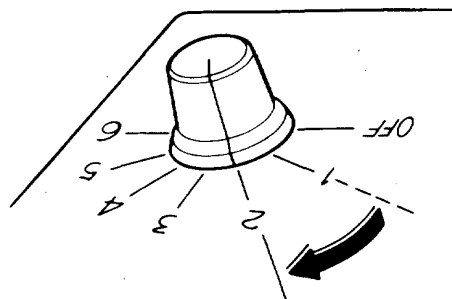

11. Press the start switch.
12. Brake fluid in the reservoir will bubble briskly for 20 seconds after the switch is pressed. Wait for 4 to 5 minutes until the brake fluid stops bubbling.
13. Turn the mode switch to 6.
14. Repeat steps 11 and 12.
15. Repeat steps 10 through 14 two or three times.
16. Fill the reservoir with brake fluid up to the MAX level.

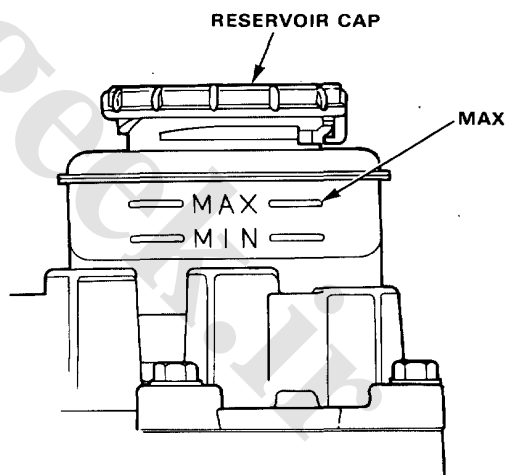

17. Install the cap.
18. Check the ALB function in all modes (page 13-45). There should be kickback in modes 2 through 5.

CAUTION: If the kickback is weak, re-bleed air from the system.


Electronic Components

Control Unit Replacement

Remove the control unit attaching bolts, then remove the control unit.

CAUTION:

- If the control unit attaching bolts are removed, the control unit's memory is cleared.
- Handle the control unit with care.

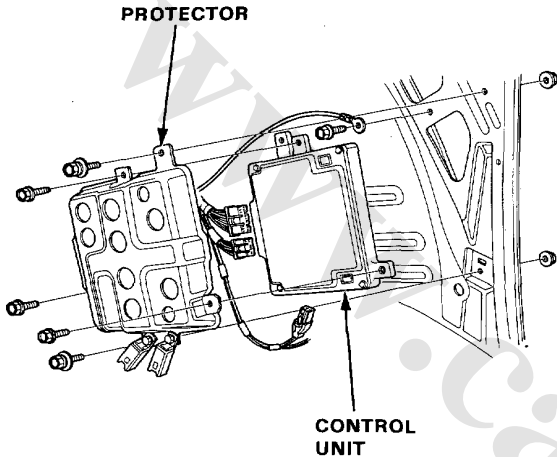

Installation is the reverse order of removal.

NOTE: Check the dash warning light function by turning the ignition switch ON.

Fail Safe Relays/Motor Relay Inspection


1. Check for continuity between terminals ③ and ④.

There should be no continuity.


2. Connect a 12V battery across terminals ① and ②.

There should be continuity between terminals ③ and ④.

Fail Safe Relays

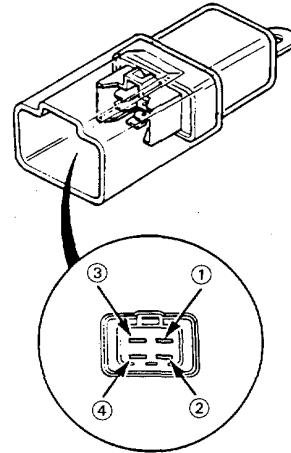

Motor Relay

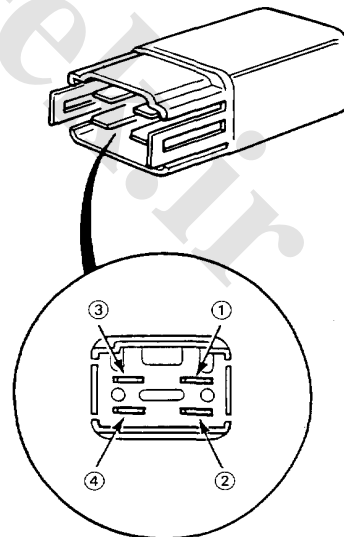

Wiring Diagrams

Index


Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		

Pulsers/Sensors

Inspection

Front

1. Check the pulser for chipped or damaged teeth.

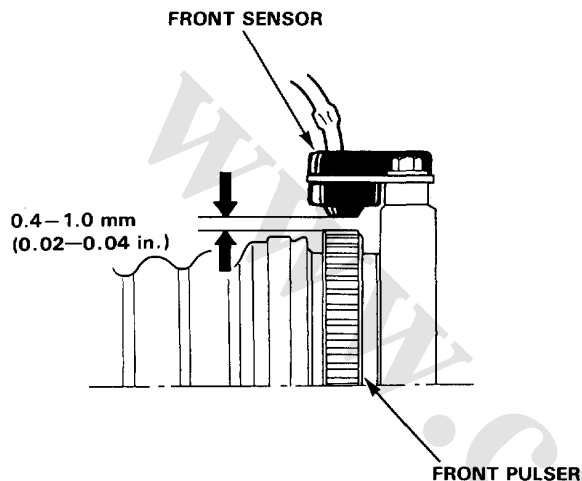


2. Measure air gap between the sensor and pulser all the way around while rotating the driveshaft by hand.

STANDARD: 0.4–1.0 mm (0.02–0.04 in.)

NOTE: If the gap exceeds 1.0 mm (0.04 in.), the probability is a distorted knuckle which should be replaced.

Rear

1. Check the rear pulser for chipped or damaged teeth.

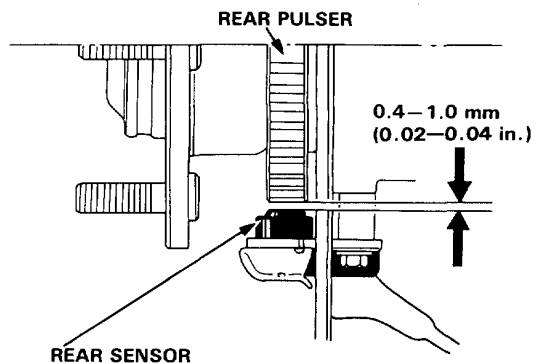

2. Measure the air gap between the sensor and pulser all the way around while rotating the hub bearing unit by hand.

Standard: 0.4–1.0 mm (0.02–0.04 in.)

NOTE: If the gap exceeds 1.0 mm (0.04 in.), the probability is a distorted knuckle which should be replaced.

Bumper

[Front](#)

[Rear](#)

[Carpet](#)

[Console](#)

Dashboard

[Components](#)

[Replacements](#)

Doors

[Index](#)

[Disassembly](#)

[Assembly](#)

[Glass Adjustment](#)

[Position](#)

[Striker Adjustment](#)

[Front Grille](#)

[Fuel Filler Cable](#)

[Headliner](#)

Hood

[Replacement/Adjustment](#)

[Opener/Latch Replacement](#)

[Interior Trim](#)

Mirrors

[Door Mirror \(Manual\)](#)

[Mirror Glass Replacement](#)

[\(Manual\)](#)

[Door Mirror \(Power\)](#)

[Mirror Glass Replacement](#)

[\(Power\)](#)

[Rear view Mirror](#)

Mouldings

[Roof](#)

[Side](#)

[Side Sill](#)

Seats

[Front Replacement](#)

[Seat Device Disassembly](#)

[Front Cover Replacement](#)

[Rear Seat Replacement](#)

Seat Belt

[Front Replacement](#)

[Rear Replacement](#)

[Inspection](#)

Sunroof

[Index](#)

[Troubleshooting/Rear Edge](#)

[Closing](#)

[Height Adjustment](#)

[Wind Deflector Adjustment](#)

[Glass/Sunshade](#)

[Motor/Drain Tube/Frame](#)

[Guide Rail/Cable](#)

[Replacement](#)

[Lift-up Link Disassembly](#)

[Lift-up Guide/Wind](#)

[Deflector Installation](#)

[Drag Check](#)

[Closing Force Check](#)

Trunk

[Lid Replacement/Adjustment](#)

[Opener Replacement](#)

Windshield, Rear Window

Glass

[Index](#)

[Windshield](#)

[Rear Window](#)




Front Bumper

Replacement

1. Open the hood, then remove the bumper mounting nuts.
2. Remove the front turn signal lights.
3. Remove the 2 bumper mounting screws on each side at the corner edge of the bumper.
4. Remove the 2 lower bumper mounting clips and the 4 bumper mounting bolts.
5. Disconnect the headlight washer hose.
6. Remove the bumper by sliding it forward.

NOTE: Take care not to scratch the bumper face.

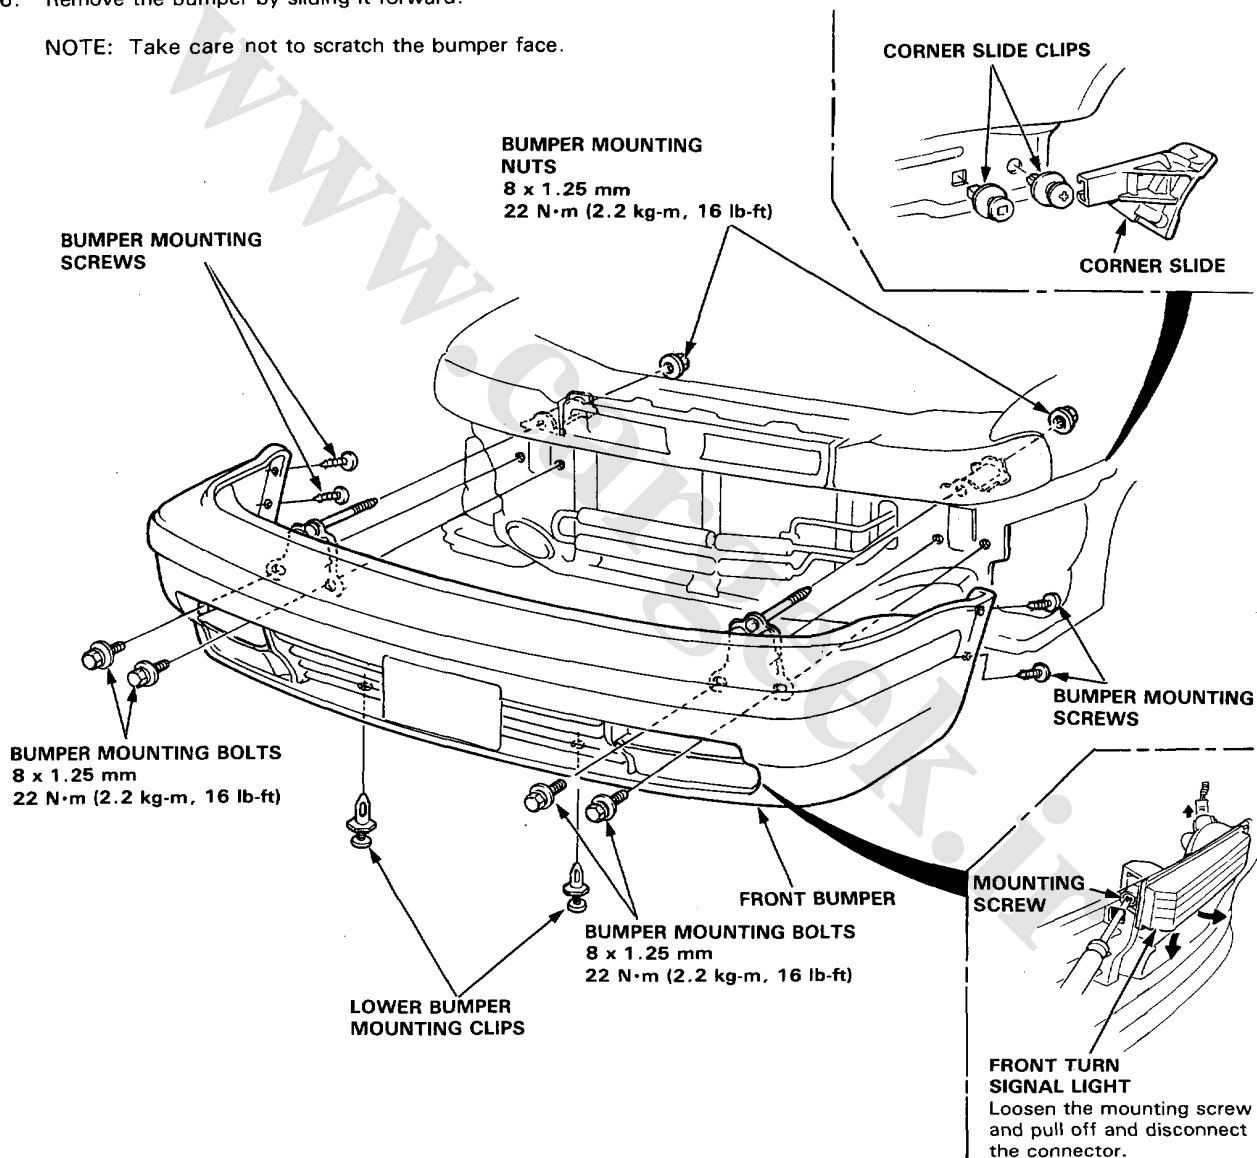

7. Install parts in the reverse order of removal.


Rear Bumper

Replacement

1. Open the trunk lid and pry off the maintenance caps, then remove the 2 upper bumper mounting nuts from the trunk area.
2. Remove the 2 mud guard screws and 2 bumper mounting screws on each side at the corner edge of the bumper.
3. Remove the clips, then remove the under protectors on each side from under the trunk floor.
4. Remove the 2 lower bumper mounting nuts and center clip from under the trunk floor.
5. Remove the bumper by sliding it to the rear.

NOTE:

- Do not damage the threads of the bumper bolts.
- Take care not to scratch the bumper face.

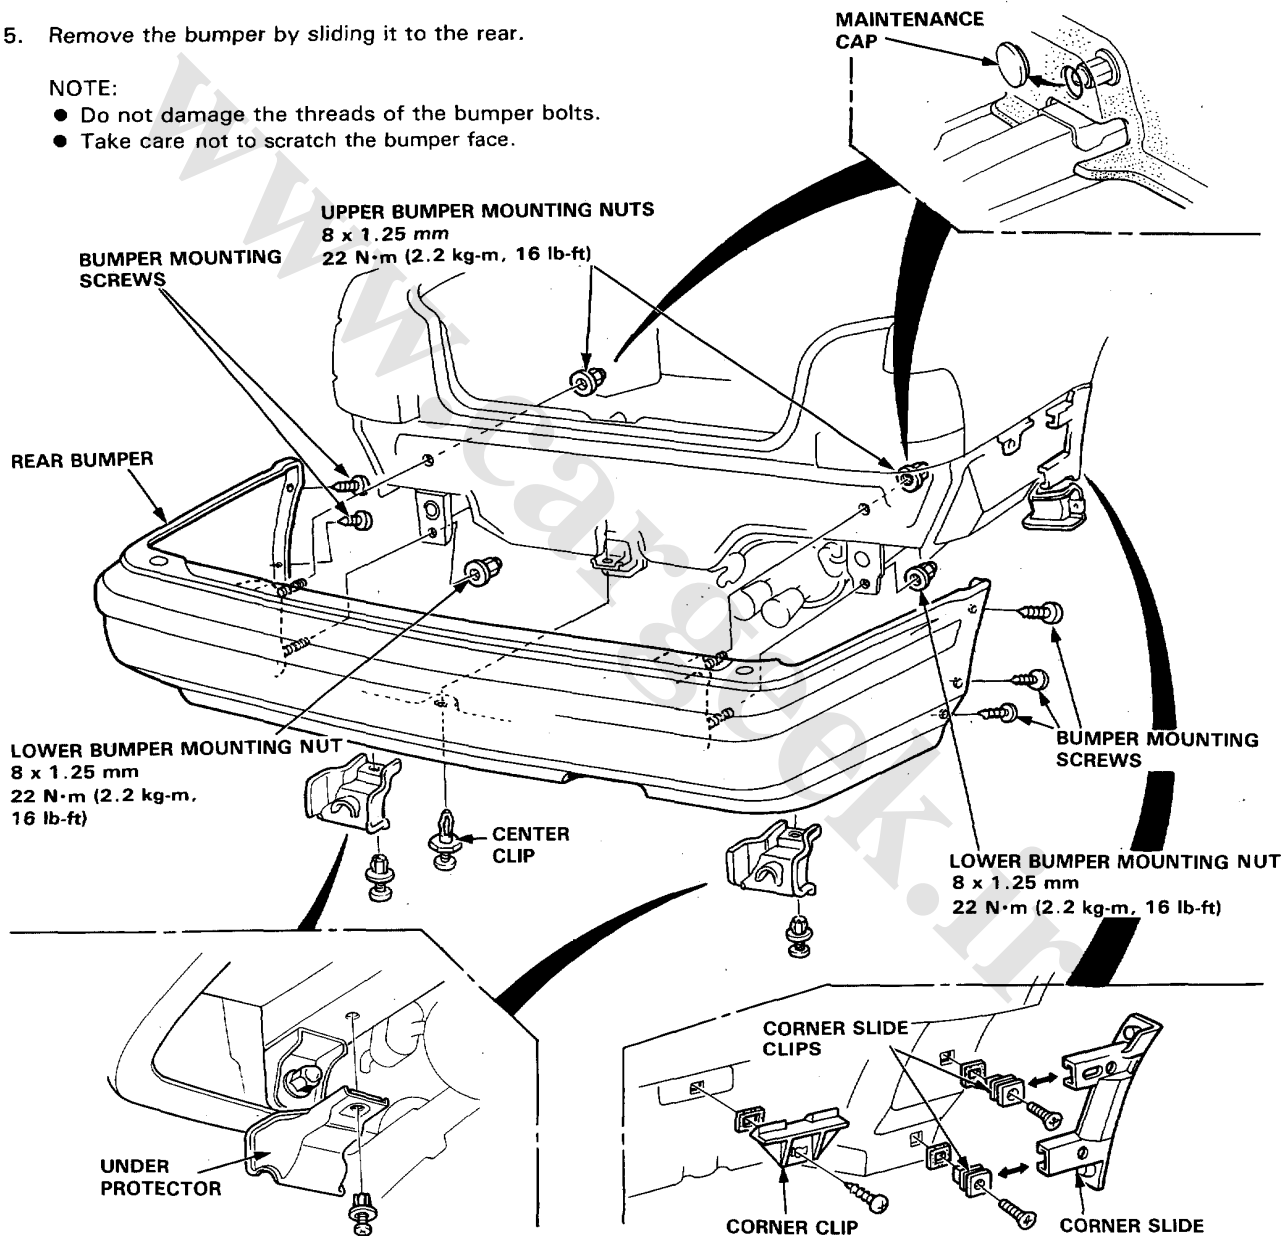


6. Install parts in the reverse order of removal. se order of removal.

Carpet/Door Sill Moldings

Replacement

1. Remove:
 - Front seats and rear seat cushion.
 - Front seat belt lower anchor bolts (page 14-46).
 - Center console.
 - Right and left kick panels.
 - Door sill moldings.
 - Opener cover.
 - Footrest.
2. Pry out the clips at the rear edge and under the dashboard, peel off the tape.
3. Cut the ④ area first, then pull back the carpet as shown.
4. Remove the carpet by sliding it rearward.

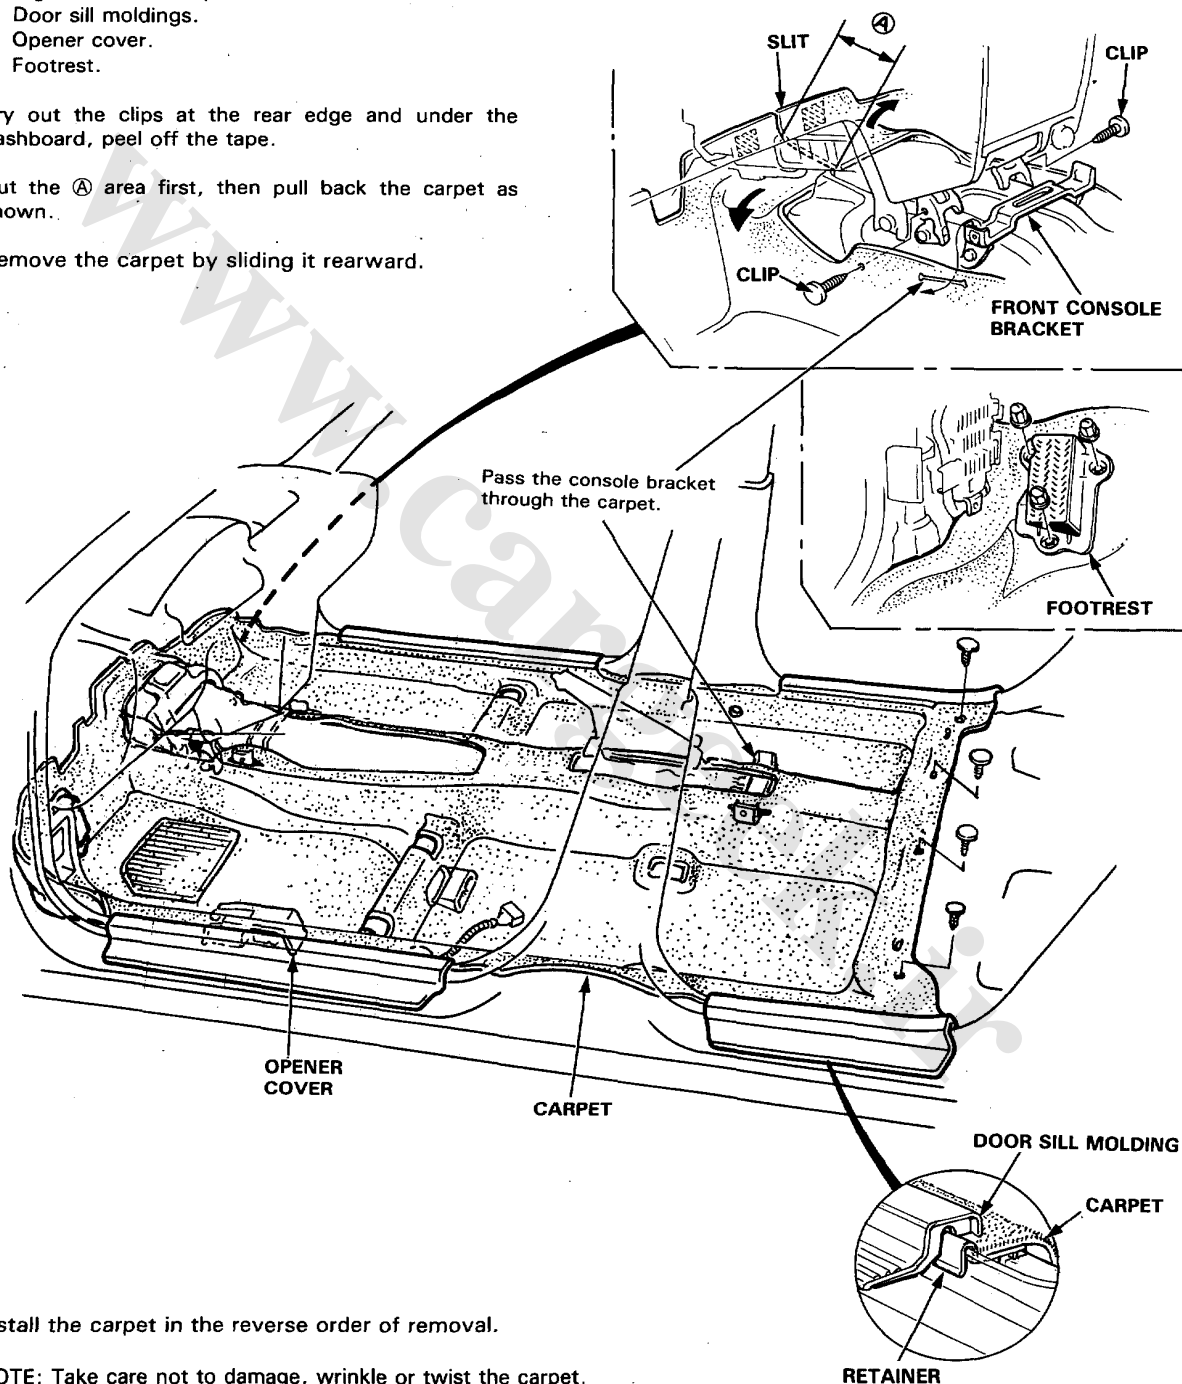

5. Install the carpet in the reverse order of removal.


NOTE: Take care not to damage, wrinkle or twist the carpet.



Rearview Mirror / Console

Rearview Mirror Replacement

1. Remove the rubber damper.
2. Pry the cover off using the end of a flat tip screwdriver.
3. Remove the 3 mounting screws from the mirror base, then remove the mirror assembly.
4. Remove the base from the bracket by removing the screw.

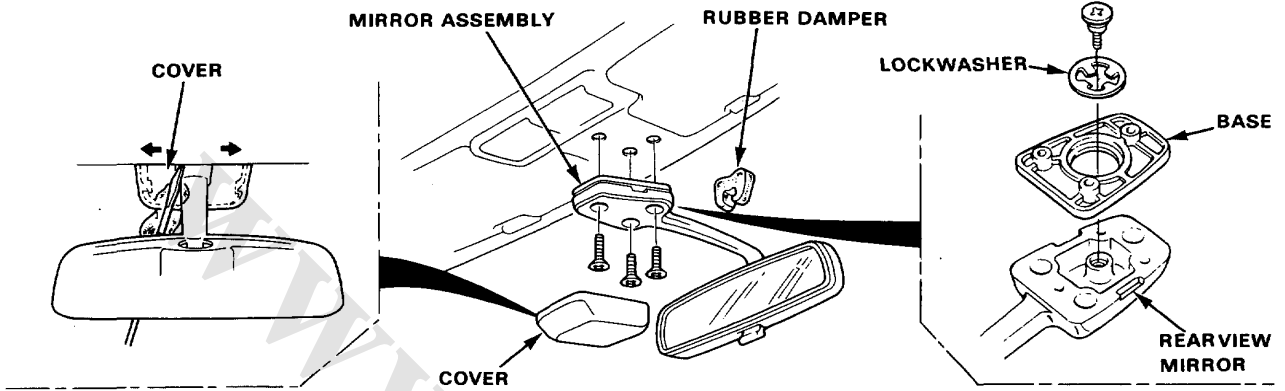


Console Replacement

Disassemble in numbered sequence.

4WS:

2WS:

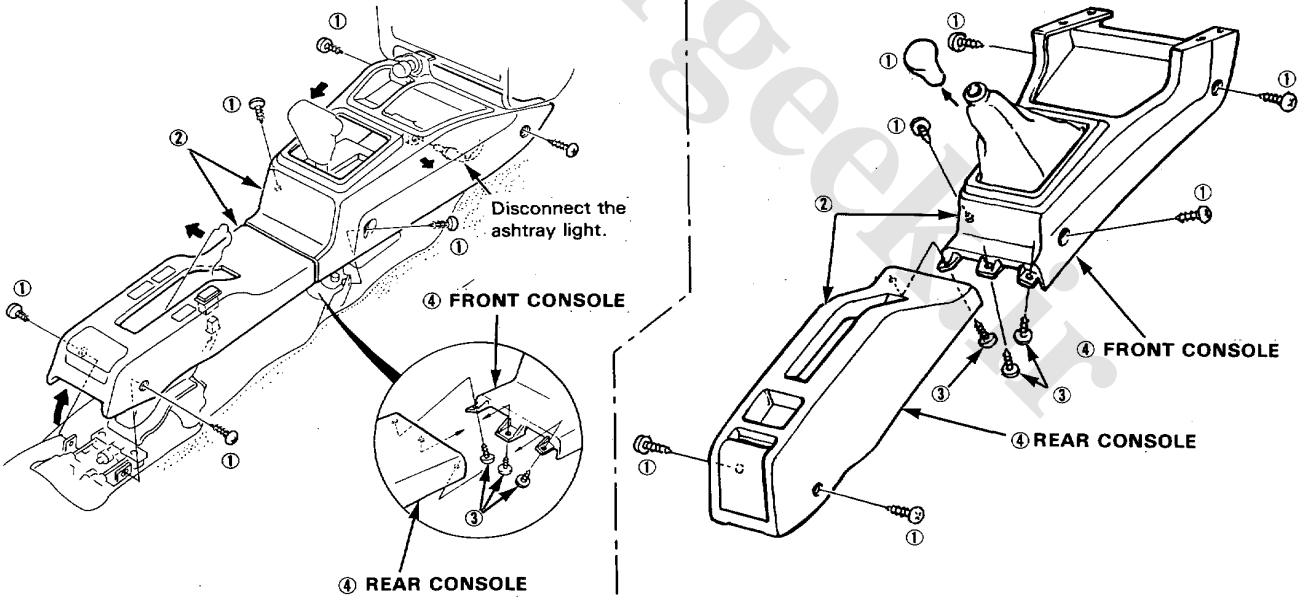

NOTE:

- Remove the front and rear consoles as an assembly.
- Lift up the parking brake lever.
- For manual transmission models, remove the shift lever knob.



Dashboard

Component Removal/Installation

NOTE: Take care not to scratch or score the dashboard and instrument panel.

CLOCK
Remove the clock from left side.

GLOVE BOX
GLOVE BOX DAMPER
NOTE: First remove the damper mounting screw.

INSTRUMENT PANEL
COOL VENT CABLE

STEREO CASSETTE/RADIO
Remove the console, ashtray and ashtray holder. Loosen the 2 screws from underneath and disconnect the wire harness (antenna lead), then pull the stereo cassette/radio out half-way and separate the pocket.

ASHTRAY LIGHT
ASHTRAY HOLDER (2WS)
POCKET

1. Remove:

- Console (page 14-49).
- Ashtray and ashtray holder
- Stereo cassette/radio
- Coin box, cruise control master switch · sunroof switch and panel brightness controller.
- Side and Center air vents.
- Disconnect the cool vent cable (See section 15).

2. Remove the 12 mounting screws and disconnect the connectors.

3. Carefully pull out the instrument panel from the dashboard.

Pry here.

Pry out the air vent.

Close the air damper.






NOTE: Take care not to drop the screw in to the air duct.

Dashboard

Replacement

NOTE: Take care not to scratch or score the dashboard and use protective tape on the bottom of the front pillar trim.

1. To remove the dashboard, first slide the seats back fully.
2. Remove the console (page 14-49).
3. Remove the steering column (See section 11).
4. Disconnect the dashboard wire harness from the connectors and fuse box.
5. Remove the carpet clips and disconnect the antenna lead.
6. Disconnect the heater control cable and function control cable or cool vent cable (See section 15).
7. Remove the caps on both side and clock.
8. Remove the 7 dashboard mounting bolts.
9. Lift and remove the dashboard.

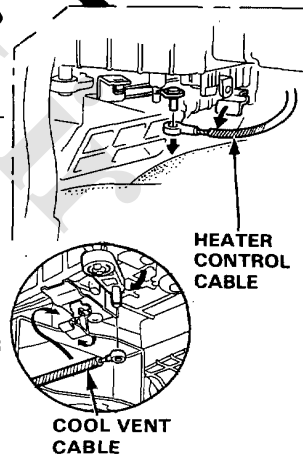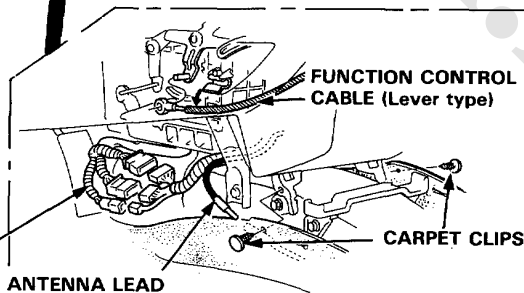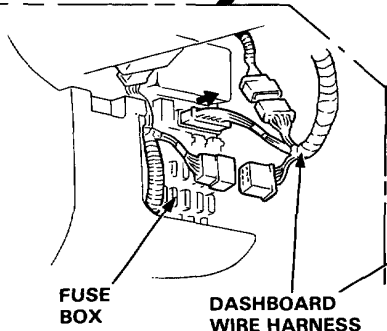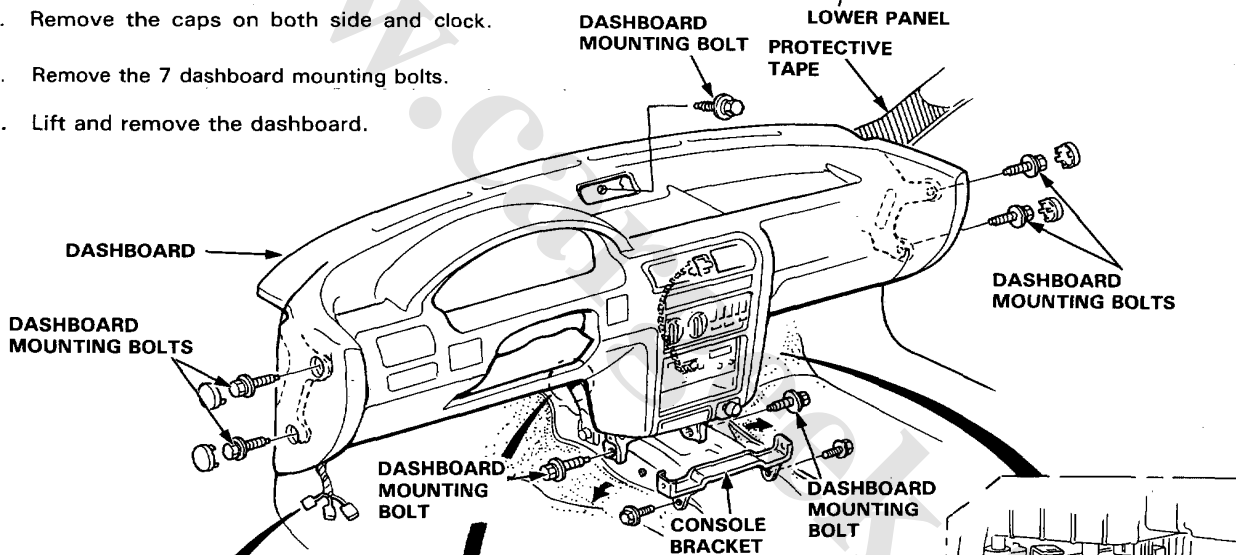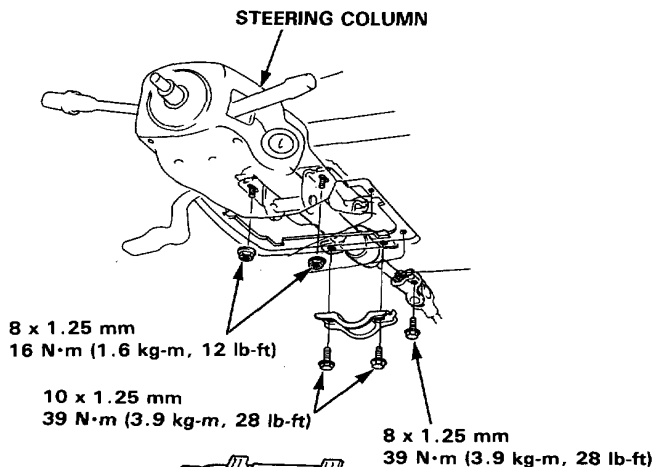

Reassembly NOTE:


- Make sure the dashboard fits onto the body correctly.
- Before tightening the dashboard bolts, make sure the dashboard wires are not pinched, and that the dashboard is not interfering with the heater control and function cables.



Doors

Index

Front:

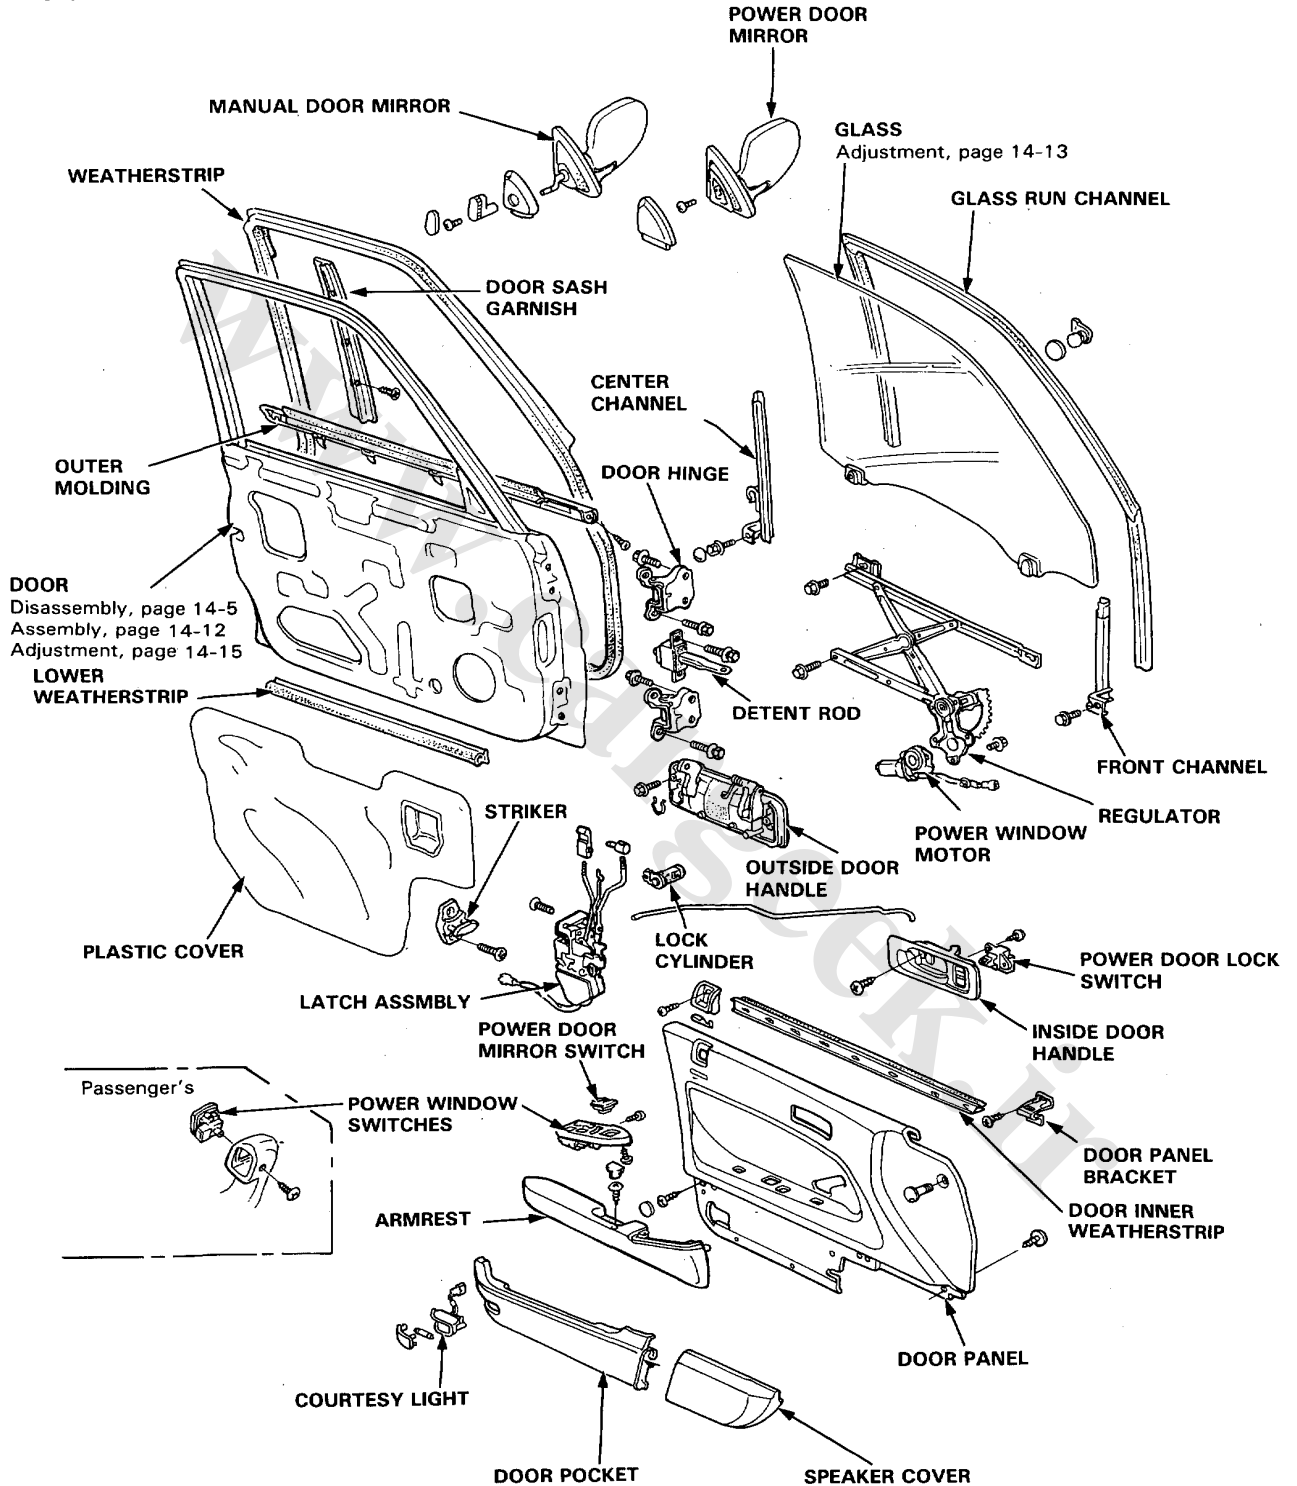


(cont'd)

Doors

Index (cont'd)

Rear:

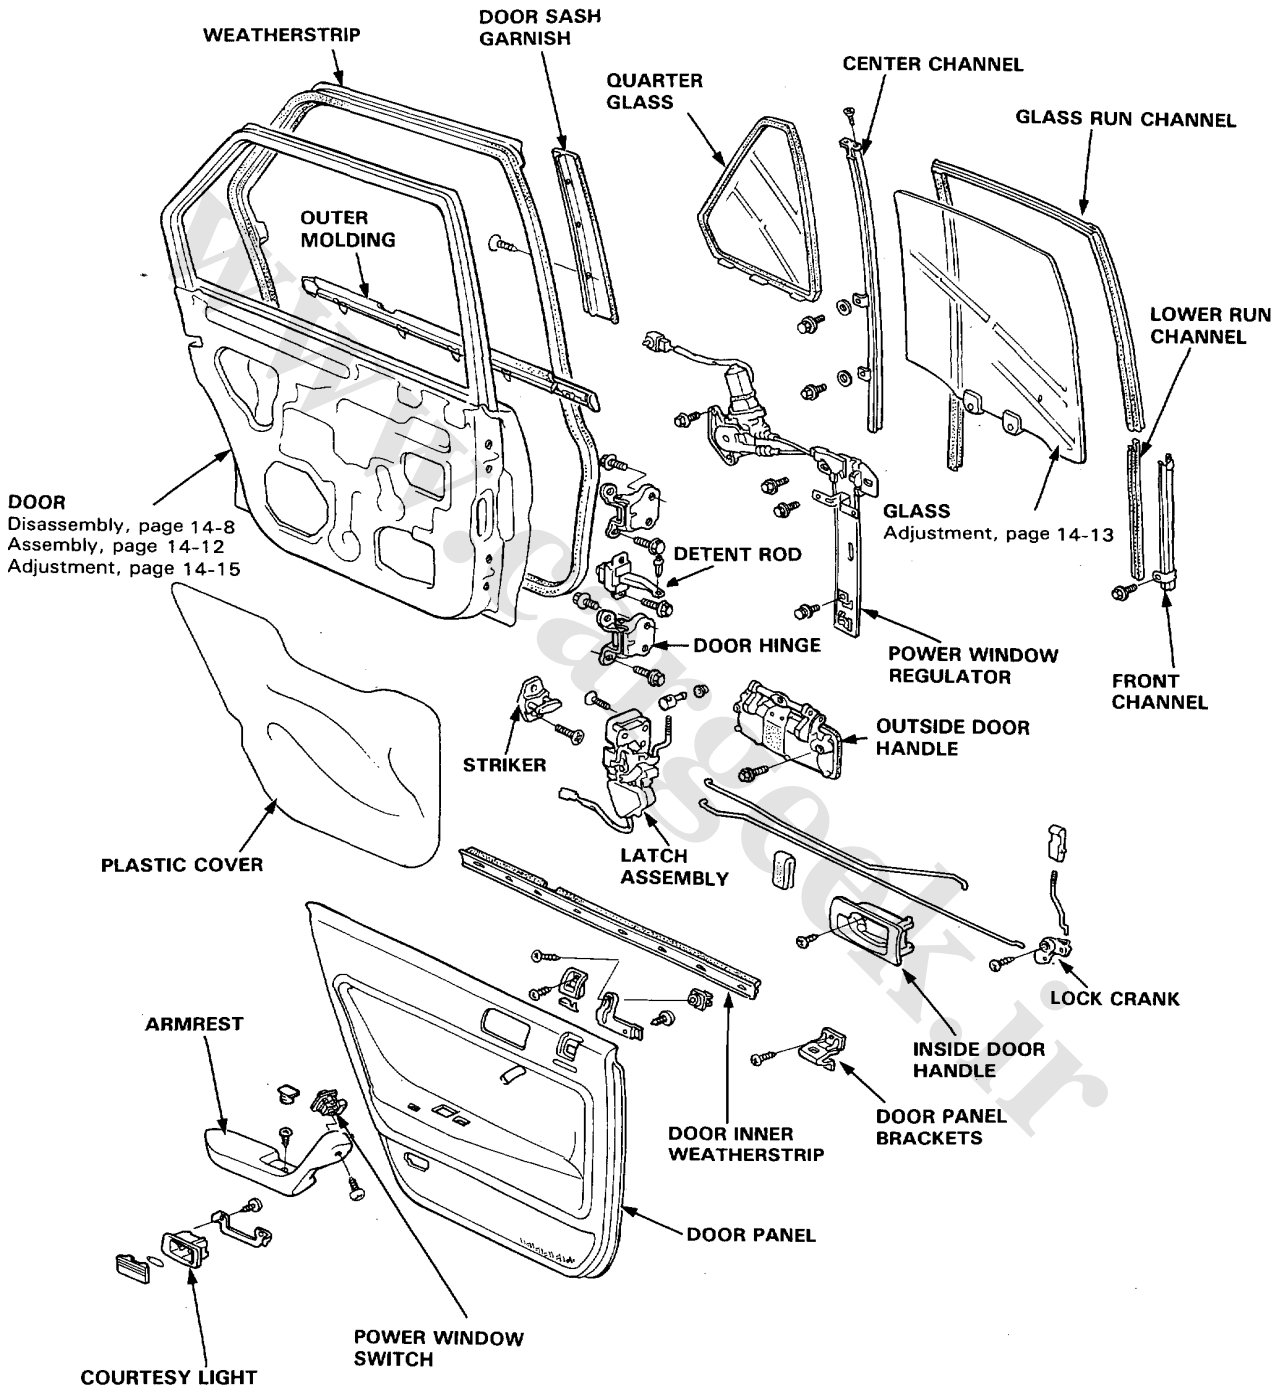





Disassembly

Front:


1. If applicable, remove the regulator handle by pulling the clip out with a wire hook.

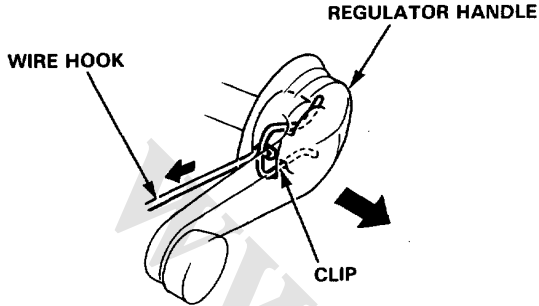


2. Remove the mounting screw, then pull the inside door handle out half-way and disconnect the latch rod and power door lock connector.

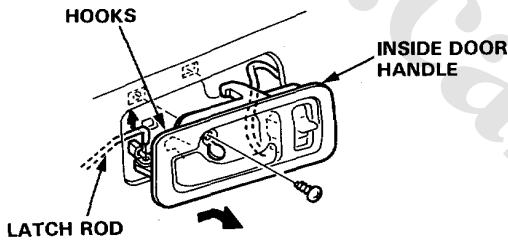


3. Remove the power door mirror switch and disconnect the connector.

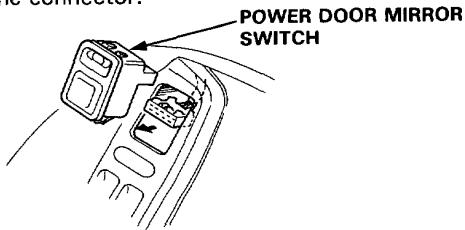


NOTE: Remove the panel with as little bending as possible to avoid creasing or breaking it.

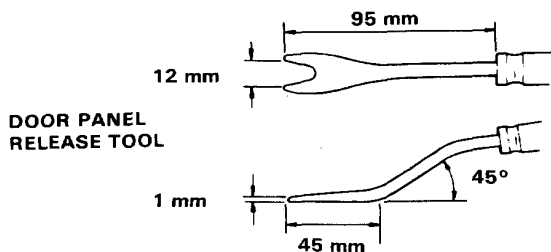

4. Remove the 2 door panel screws, then pry apart the door panel clips. Lift the door panel straight up off the sill, and disconnect the power window and courtesy light wires.

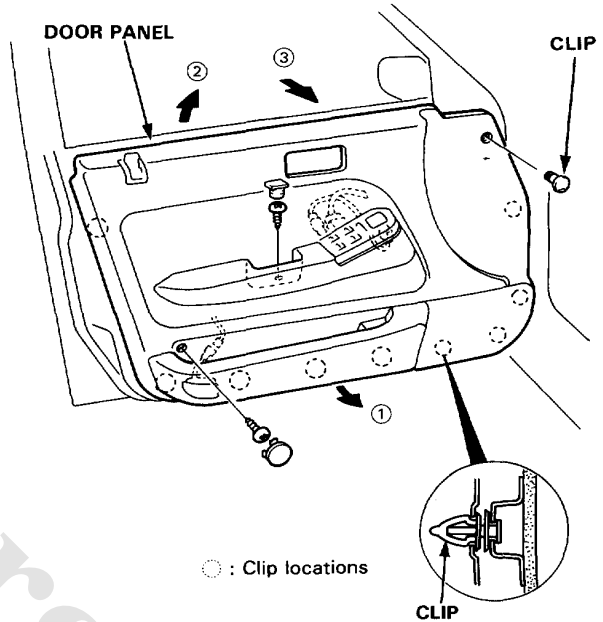

5. Remove the power window control unit, door panel bracket, speaker and cover panel.
6. Carefully remove the plastic cover.

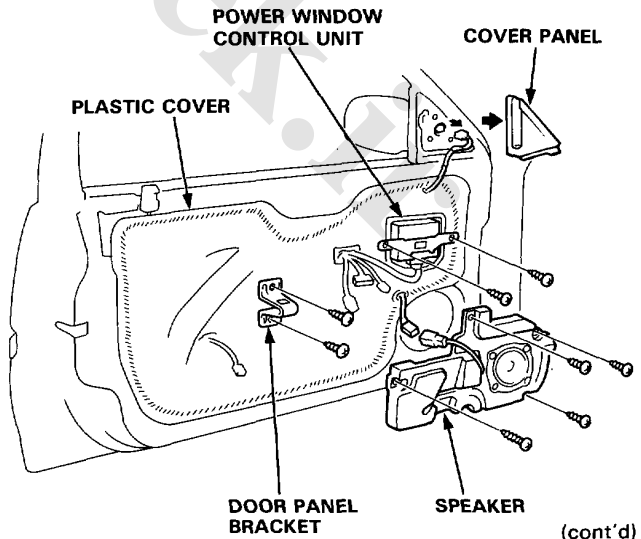


(cont'd)




15. Remove the 4 mounting bolts and loosen the 2 motor bolts, then take out the regulator assembly through the center hole in the door.


NOTE: Scribe a line around the roller guide mounting bolt to show the original adjustment.

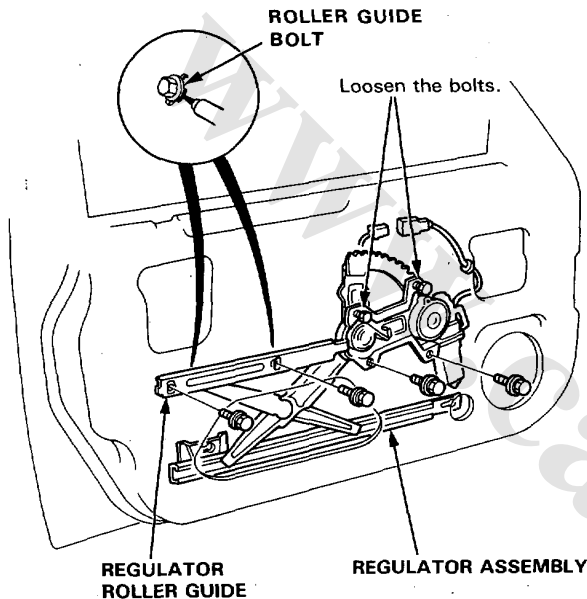


16. Remove the screw and, starting at the rear, pry the molding up, detach the clips, then remove the outer molding.

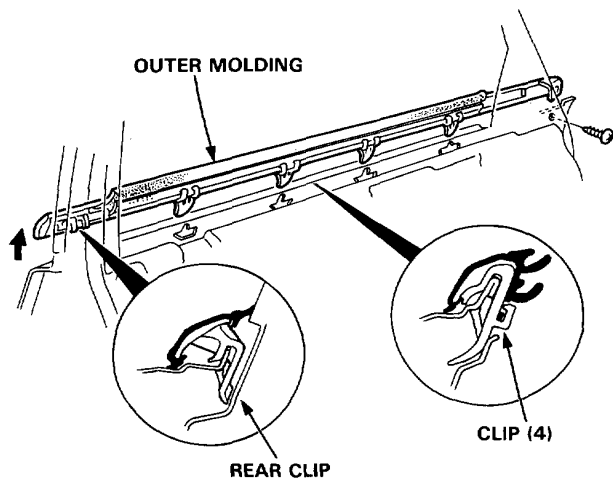

17. Remove the mounting bolts, then remove the front and center channels.

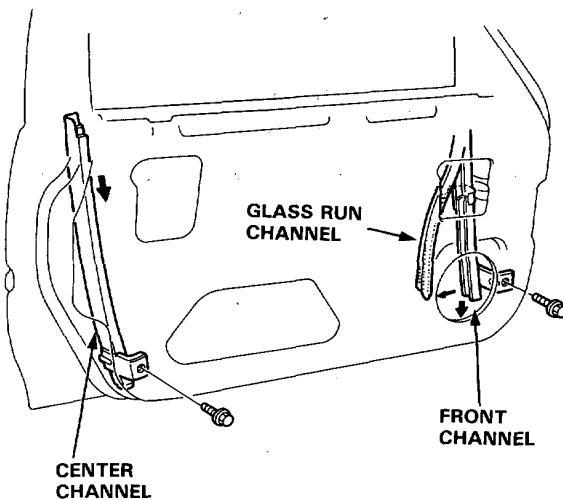

18. Peel off the glass run channel and remove the mounting screws, then remove the door sash garnish by hand.


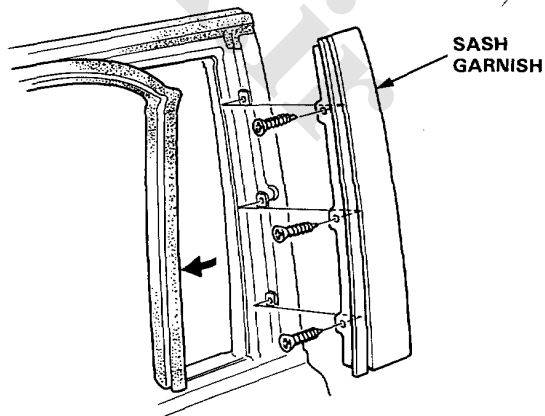


Door


Disassembly

Rear:


1. If applicable, remove the regulator handle by pulling the clip out with a wire hook (page 14-5).
2. Remove the inside door handle and disconnect the latch rod.
3. Remove the screws and detach the clips attaching the door panel. (See door panel release tool, page 14-5).
4. Disconnect the power window and courtesy light harnesses.

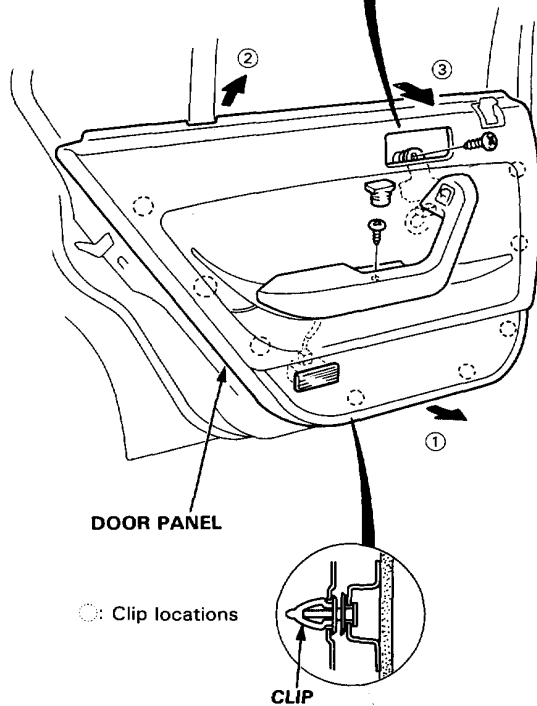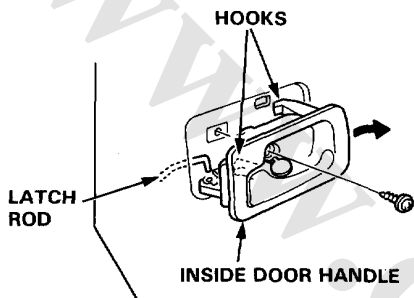

5. Remove the door panel bracket and carefully remove the plastic cover.

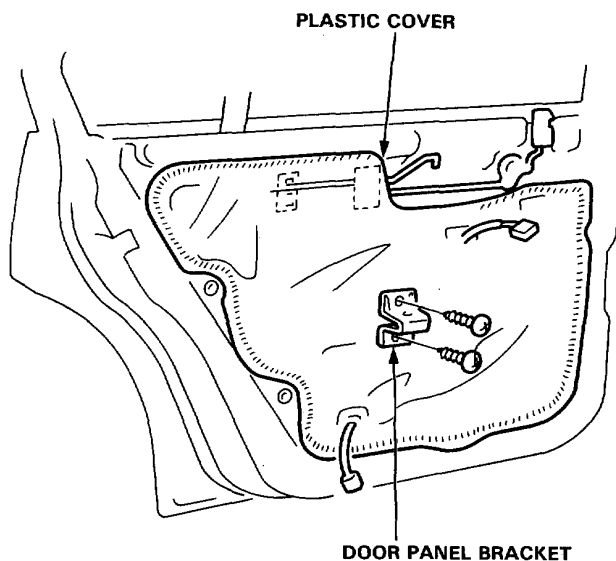


6. Remove the screw attaching the door lock crank. Disconnect the latch rod from the latch side.

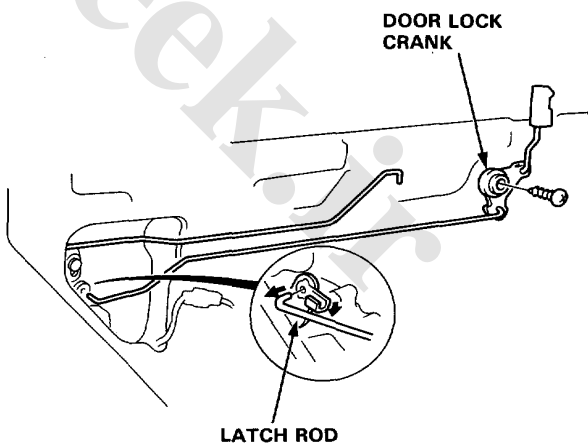




7. Reconnect the window switch or use a 12V battery to operate the window regulator.
8. Roll up the window fully.
9. Use protective tape around the edge of the door handle to prevent scratching the paint. Remove the 3 mounting screws, then slide the latch assembly down.
10. Remove the outside door handle mounting bolts.

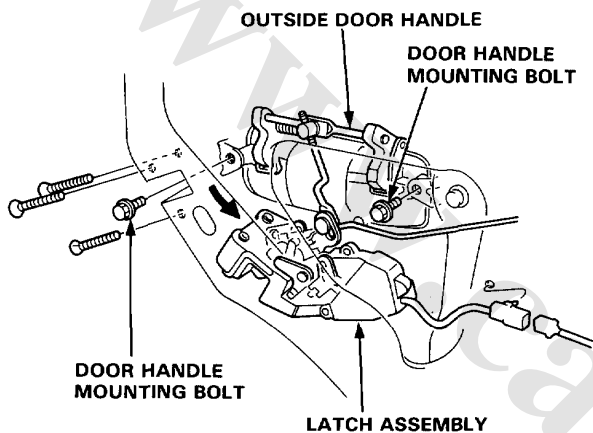

NOTE: Take care not to bend the latch rods.


11. Pull the outside door handle out, and pry the joint off the handle with a flat tip screwdriver. Remove the handle from the rod.

NOTE: To ease reassembly, note the location **A** of the rod on the joint before disconnecting it.

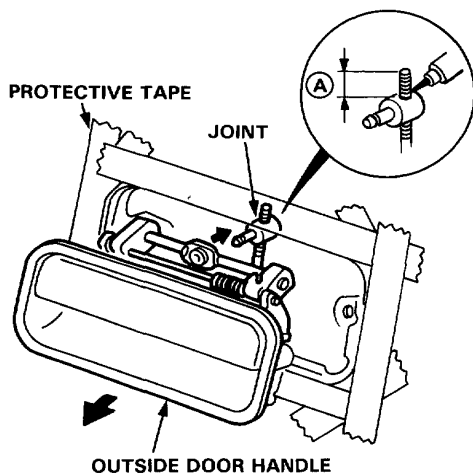


12. Pull the latch assembly out through the hole in the door panel.

13. Carefully lower the window until you can see its mounting bolts. Use protective tape on the lower door sash garnish and center channel as shown. Remove the lower bolt from the front channel and slide the channel forward.

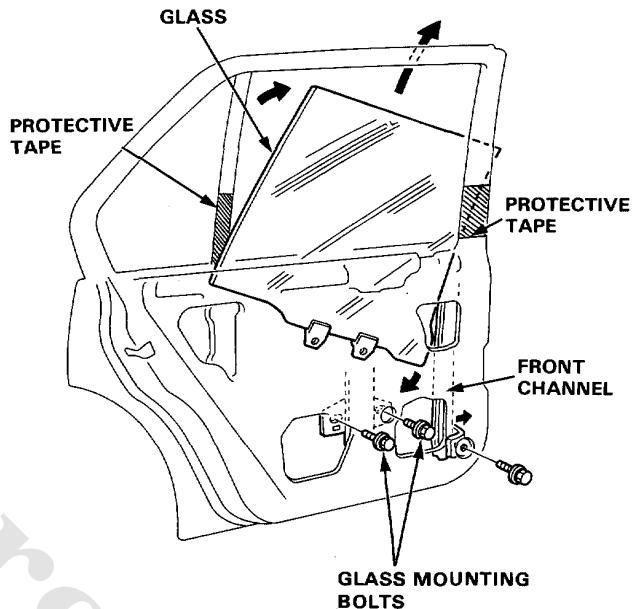

14. Remove the mounting bolts and pull the glass out through the window slot.

15. Remove the 5 regulator mounting bolts and loosen the upper bolt, then take out the regulator assembly through the hole in the door.

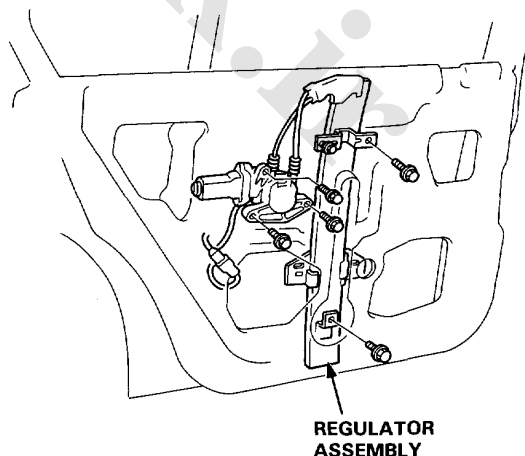


(cont'd)


Doors

Disassembly (cont'd)

16. Starting at the rear, pry the molding up and detach the clips, then remove the outer molding.

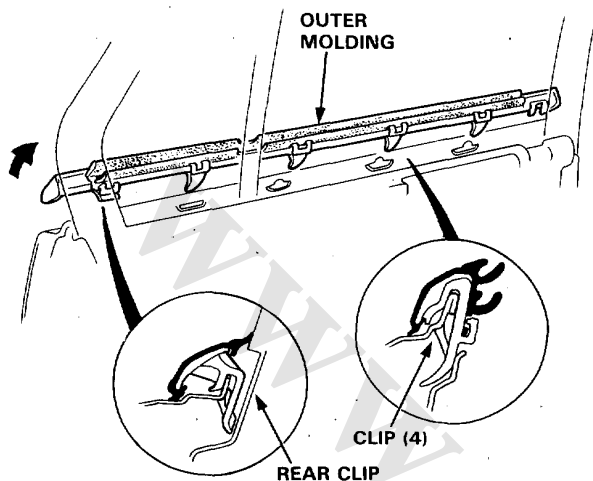

17. Peel off the door weatherstrip and remove the center channel upper mounting screws.
18. Remove the lower mounting bolts and glass run channel, then remove the center channel.
19. Remove the front channel.

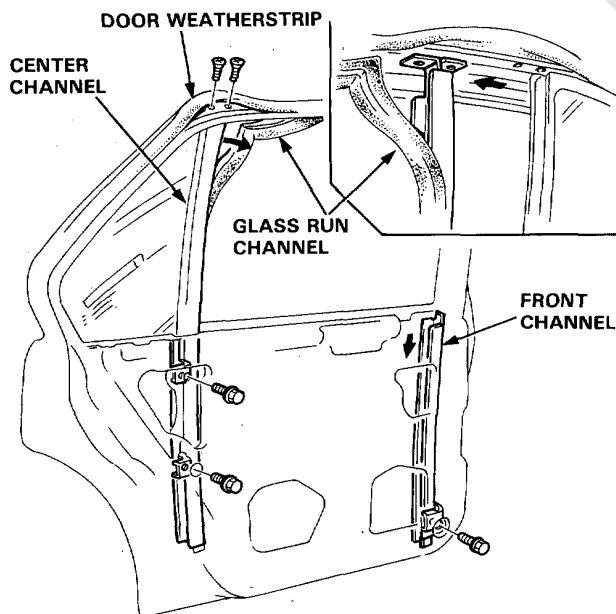


NOTE: When installing the center channel, make sure there is no gap between center channel and quarter glass.

20. Peel off the door weatherstrip.

21. Remove the quarter glass from the door sash.

NOTE: Take care not to scratch or score the glass and molding.

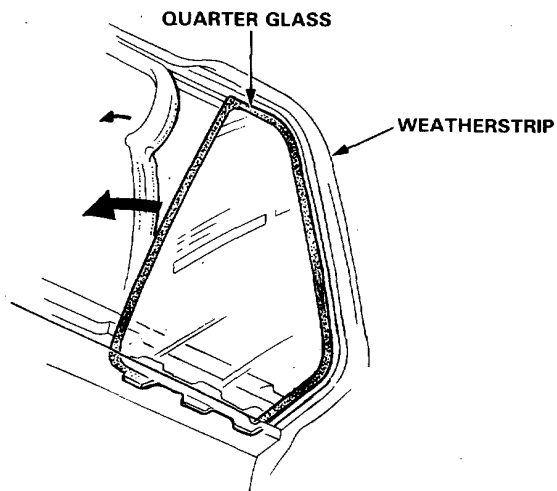

22. Remove the rear door sash garnish in the same way as the front door sash garnish (page 14-7).




Weatherstrip Replacement

NOTE: Before installing the weatherstrip, apply clear sealant to the shadowed areas of the door as shown.

*: 40 mm (1.6 in)

Sealant: cemedine #8500

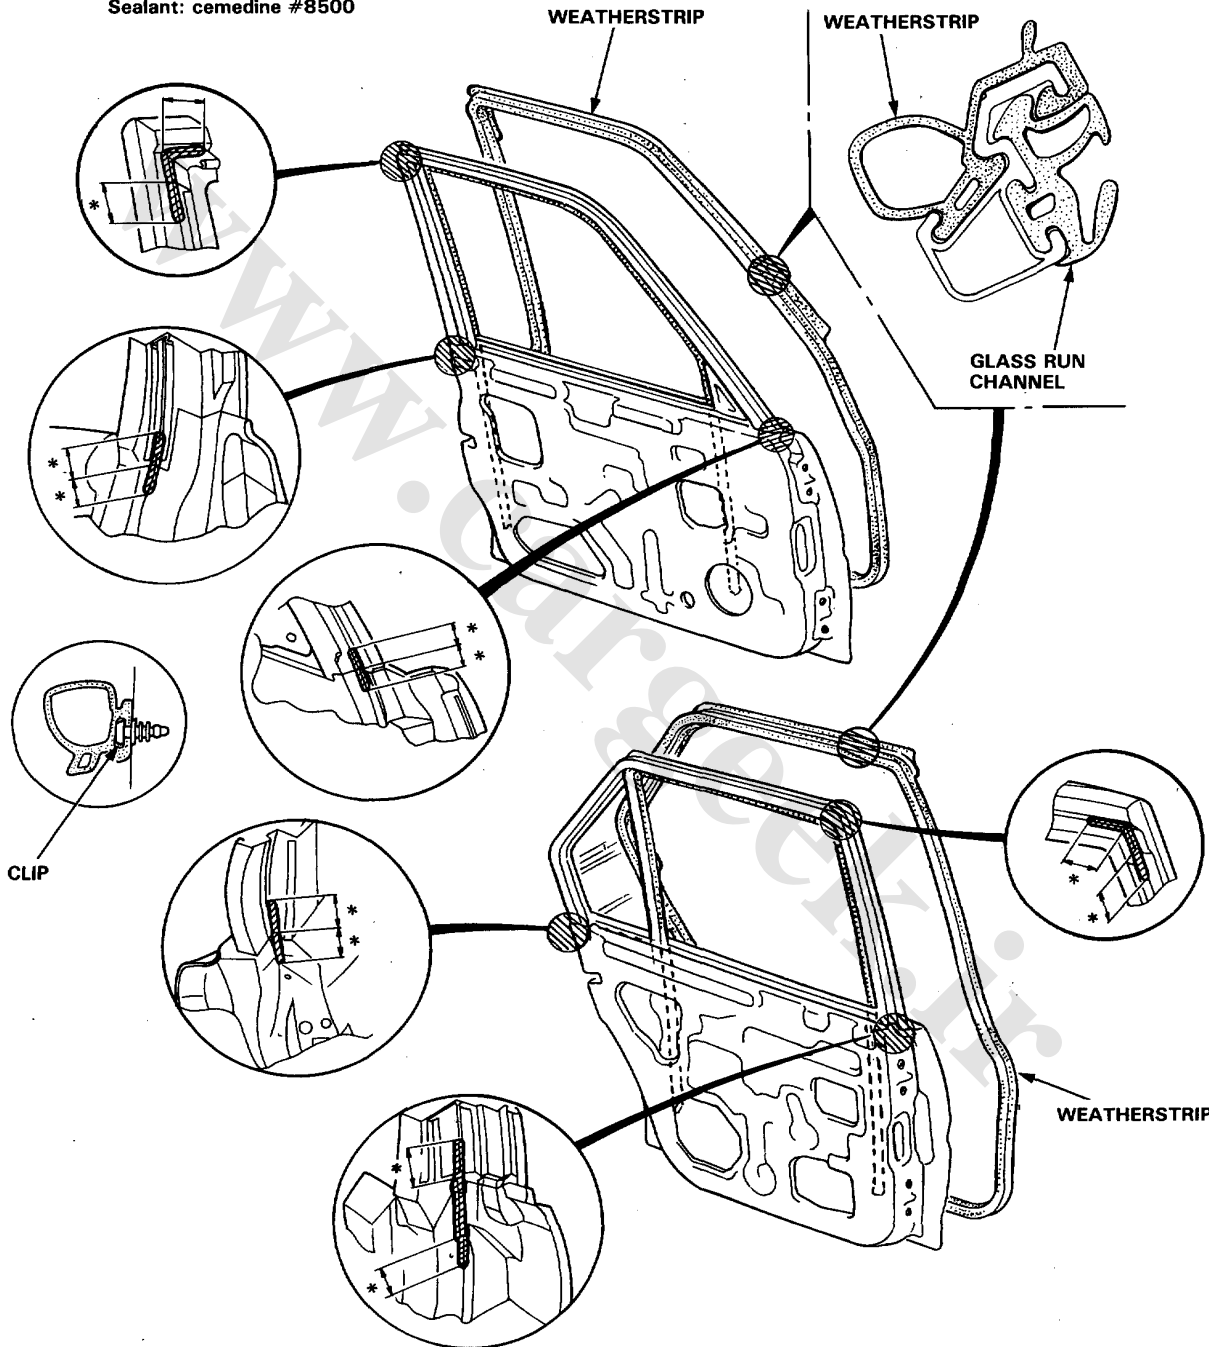


Doors

Assembly


Assemble the door in the reverse order of disassembly, and also:

1. Grease all the sliding surfaces of the window regulator where shown.
2. Before removing the motor, make the location by marking line across the sector gear and regulator, and install using the three mounting bolts. Move the window regulator to the original position by connecting a 12V battery to the motor (See section 16).

Front:

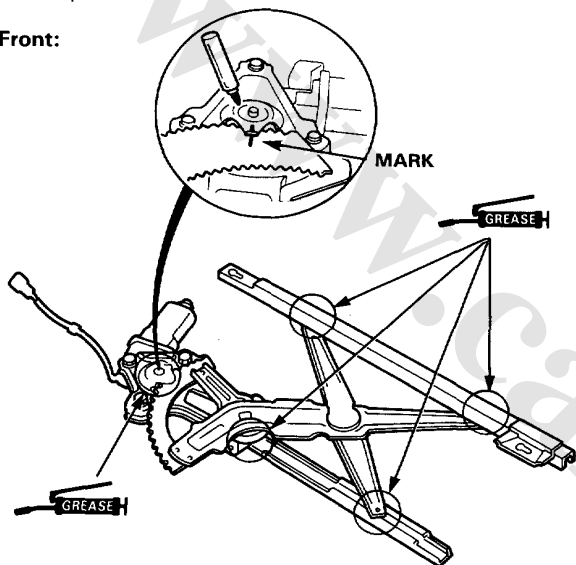

Rear:

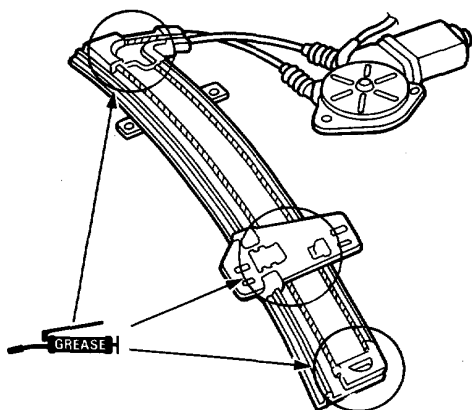


3. Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed. Adjust the position of the door glass as necessary (page 14-13).


4. Fix the wire harness correctly on the door.

5. When reinstalling the plastic cover, apply adhesive along the edge where necessary to maintain a continuous seal and prevent air/water leaks.


Front:

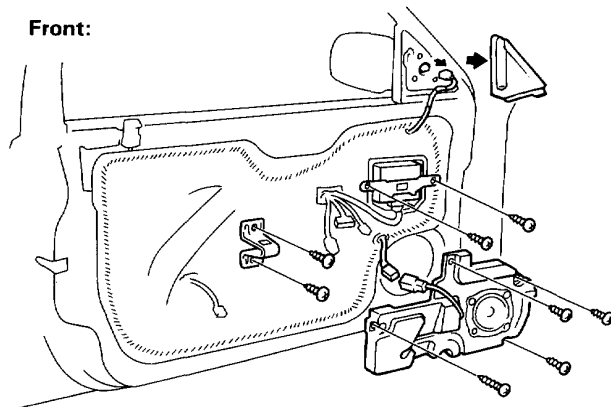

Rear:

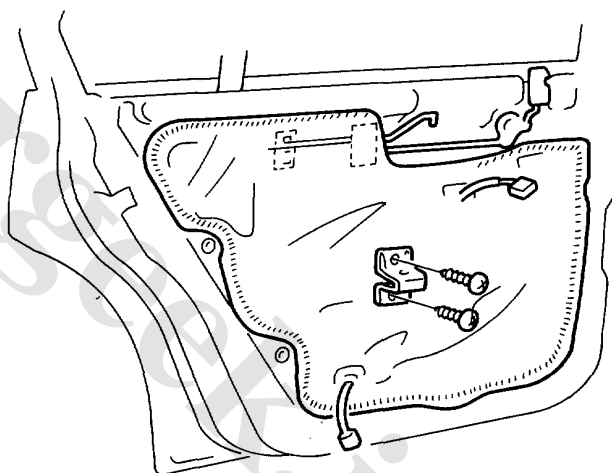

6. Install the regulator handle so it points forward and up at a 45 degree angle with the window closed.

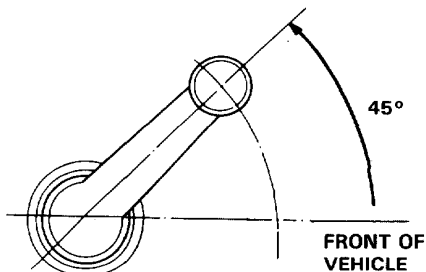



Glass Adjustment

NOTE:

- Place the vehicle on a firm, level surface when adjusting door fit.
- Check the weatherstrip and glass run channel for damage or deterioration and replace if necessary.


1. Remove the door panel and peel off the plastic cover (pages 14-5, 8).

2. Install the regulator handle on the door regulator.

(Power Window Model)


Driver's:

Remove the power window switch from the armrest.

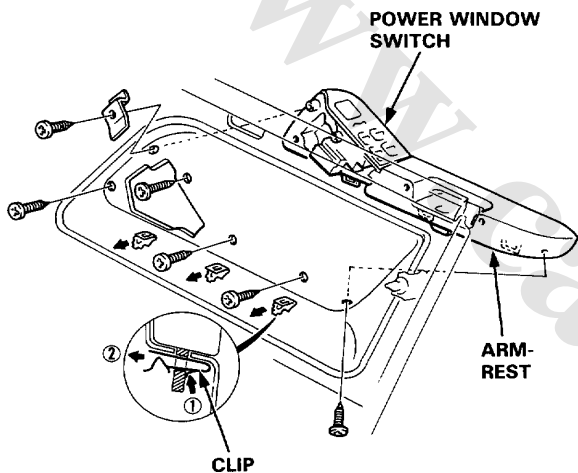

Passenger's/Rear door:


Remove the power window switch from the armrest.

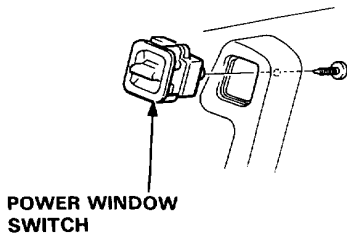


3. Connect the power window switch to the door harness.

4. To adjust glass fit in the door, raise the glass as far up as possible and hold it against the door sash. Then tighten the roller guide bolts or motor mounting bolts. Check the smooth movement of door glass.

Front:

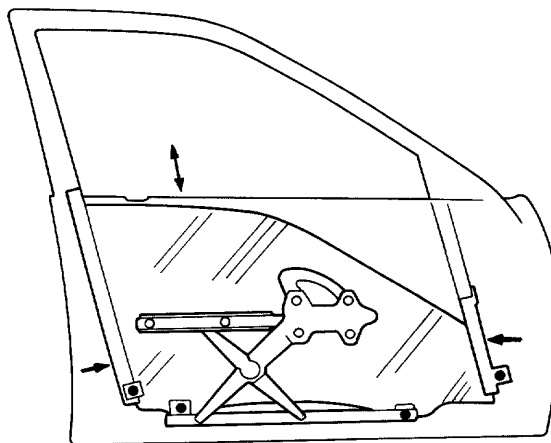

Rear:

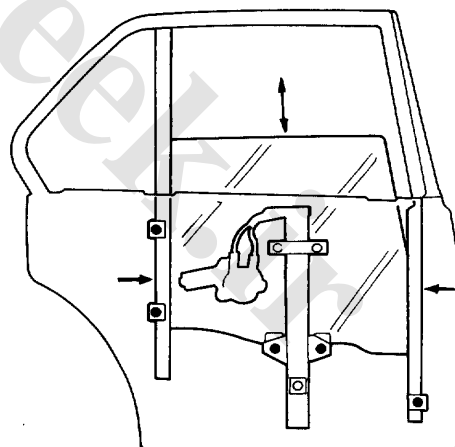


(cont'd)

Doors

Glass Adjustment (cont'd)


5. Lower the window until there is a small gap between the door glass and the glass run channel.
6. Loosen the roller guide bolts and adjust the window glass so it is parallel with the glass run channel.

Front:

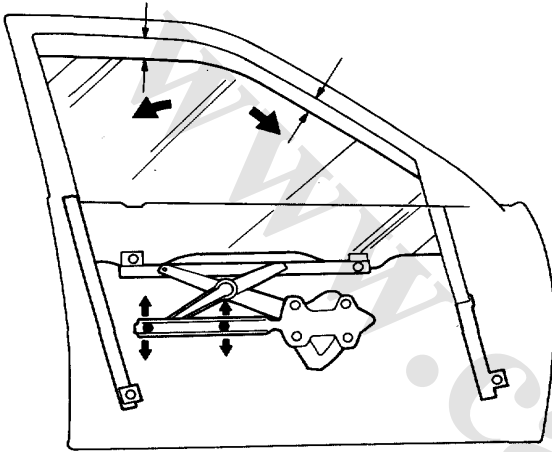


Rear:

NOTE: Loosen the upper regulator mounting bolts and adjust the window glass.

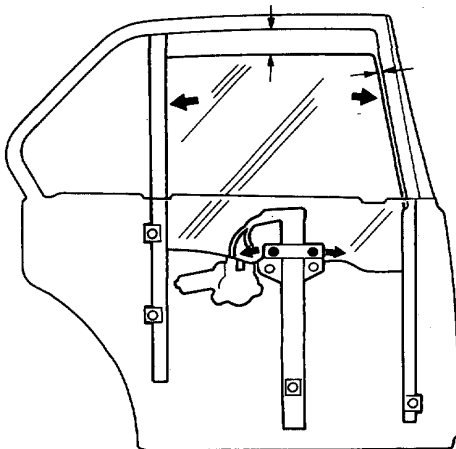


7. Raise the window glass fully and check gap.
8. Perform the operation test.

NOTE: Check that the glass run channel is not pinched by the glass.

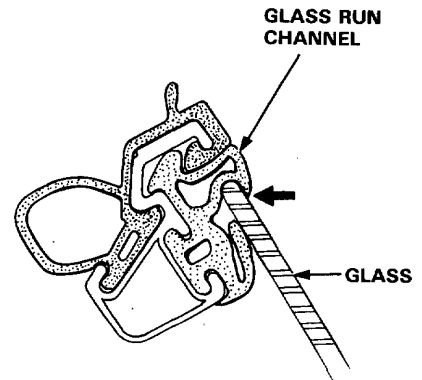

9. With the door and glass closed fully, check for water leaks.

NOTE: Do not use high pressure water.

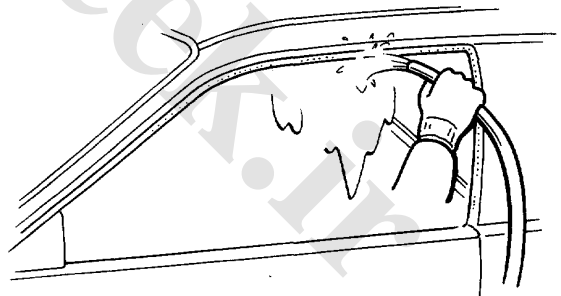

10. Install the door harness.
11. Attach the plastic cover, and install the door panel.
12. Check for air leaks.




Door Position Adjustment

After installing the door, check for a flush fit with the body, then check for equal gap between the front and rear, and top and bottom door edges and the body. The door and body edges should also be parallel. Adjust at the hinges as shown.

CAUTION: Place a shop towel on the jack to prevent damage to the door when the hinge bolts are loosened for adjustment.


HINGE MOUNTING BOLTS

Loosen the bolts, and move the door BACKWARD or FORWARD, UP or DOWN as necessary to equalize the gaps.

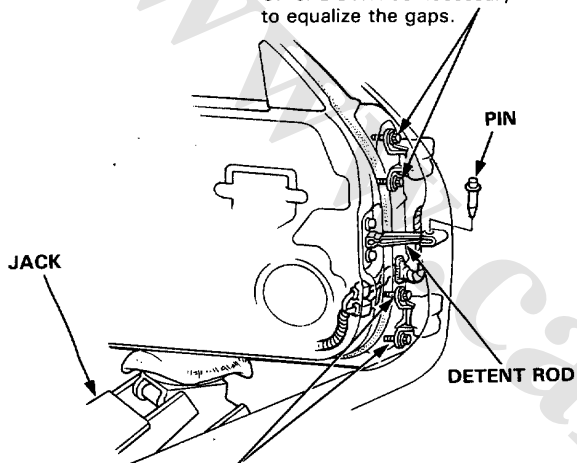

DOOR MOUNTING BOLTS

Loosen the bolts slightly to move the door IN or OUT until it's flush with the body. If necessary, you can install a shim behind one hinge to make the door edges PARALLEL with the body.

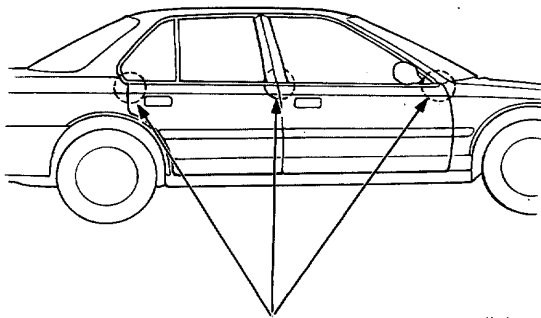

The door and body edges should be parallel.


NOTE: Check that the water and air leaks.

Door Striker Adjustment

Make sure the door latches securely without slamming. If it needs adjustment:

1. Draw a line around the striker plate for reference.
2. Loosen the striker screws and move the striker IN or OUT to make the latch fit tighter or looser. Move the striker UP or DOWN to align it with the latch opening. Then lightly tighten the screws and recheck.

NOTE: Do not tap the striker with an iron hammer to adjust the position.

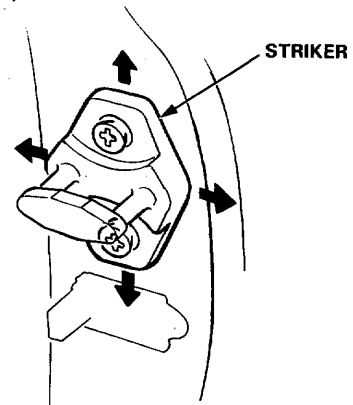

NOTE: Hold the outside handle out and push the door against the body to be sure the striker allows a flush fit.


3. If the door latches properly, tighten the screws and recheck.

NOTE: Replace the striker if a crack is seen on any parts of the resin.

Front Grille/Side Sill Panel


Front Grille Replacement

1. Remove the 5 screws.
2. Push the clips on each side with a flat tip screwdriver as shown, then remove the front grille.
3. Set the clips on to the front grille, then install the front grille in the reverse order removal.

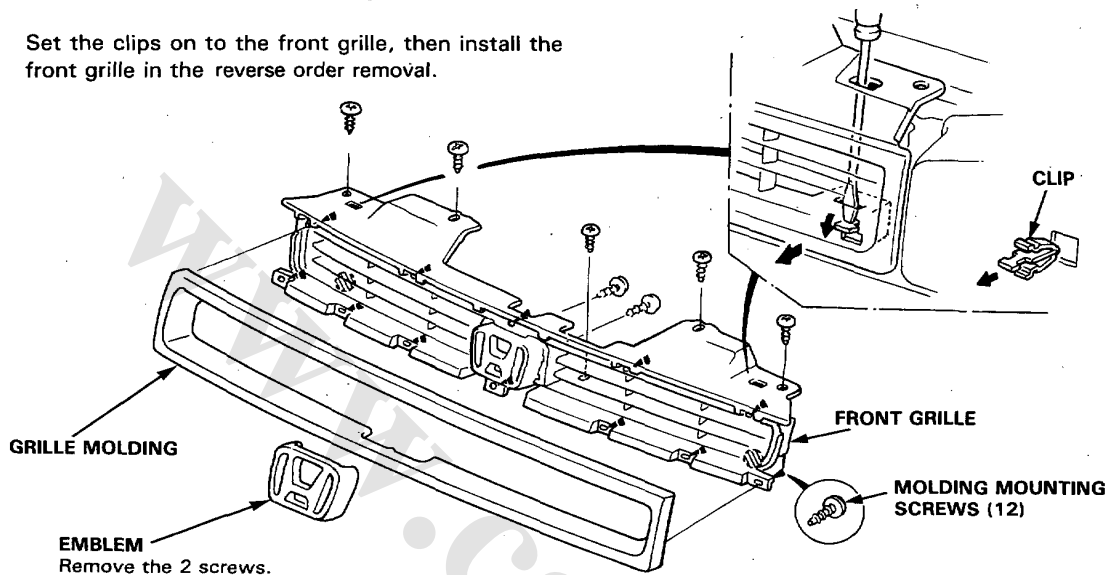

Side Sill Panel Replacement

1. Remove the mud guard.
2. Detach the all lower screws and clips.
3. Pull the side sill panel out and remove the side clips, then remove the side sill panel.

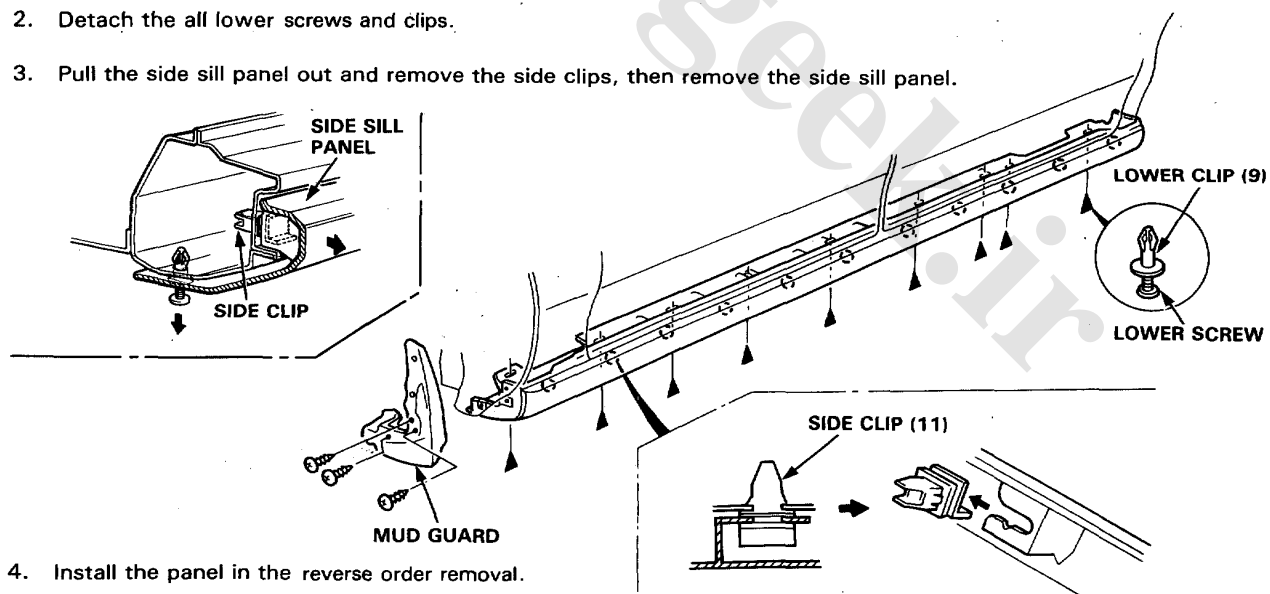

4. Install the panel in the reverse order removal.



NOTE: If necessary, replace any damaged clips.



Opener/Latch


Replacement

Openers:

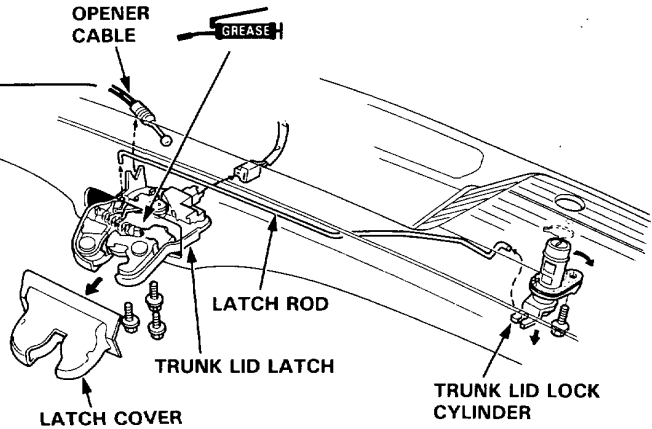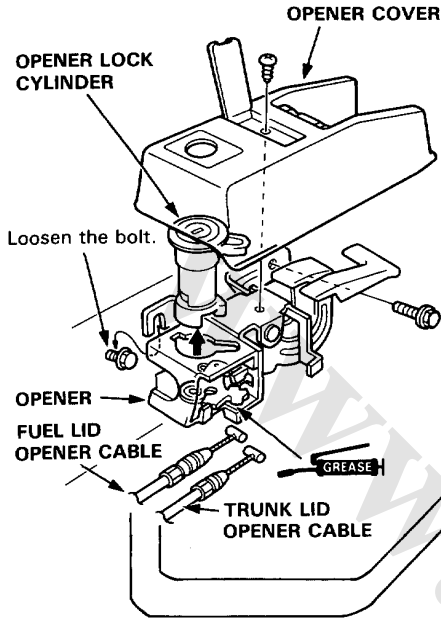


FUEL LID LATCH
Remove the left trunk side panel and fuel lid latch by turning it 90°.

FUEL LID
After installing, check for a flush fit with the body.

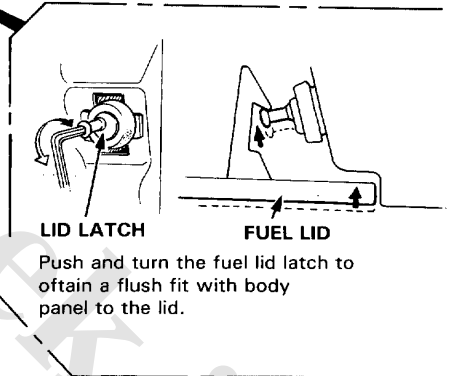


Opener Cables:

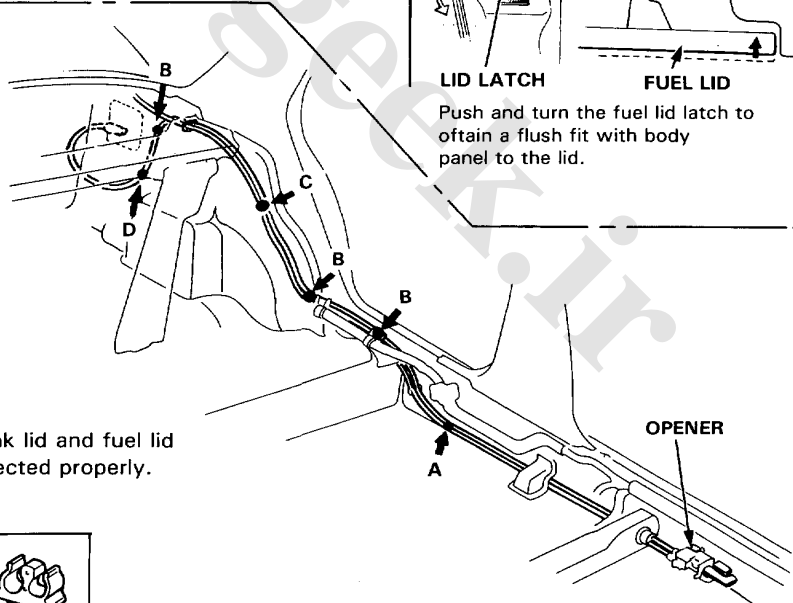

NOTE:

- Take care not to bend the cable.
- After installing, check that the trunk lid and fuel lid opener cables are routed and connected properly.

➔ : Clip locations.

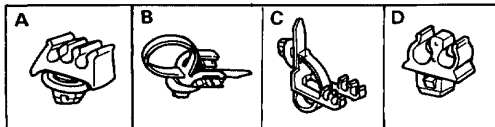

Wiring Diagrams

Index


Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		

Interior Trim

Replacement

Disassemble in numbered sequence.

☉: Clip locations

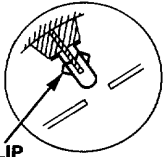

④ FRONT PILLAR TRIM

To remove the trim, first remove the upper anchor bolt from the front seat belt.

④ REAR ROOF SIDE TRIM

④ REAR PILLAR TRIM PANEL

To remove the panel, first remove the lower anchor bolt from the rear seat belts (page 14-47).

③ REAR DOOR TRIM

② SIDE SEAT TRIM

③ FRONT DOOR TRIM

① REAR DOOR SILL MOLDING

KICK PANEL


① FRONT DOOR SILL MOLDING

① JACK COVER

PUSH NUT Replace.

⑤ TRUNK SIDE PANEL

To remove the panel, first remove the rear side seat back (page 14-44).

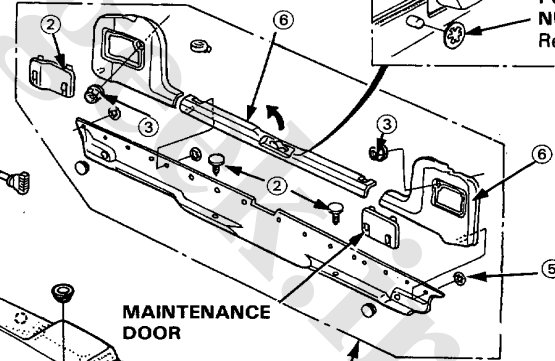

① TRUNK FRONT SIDE PANEL

MAINTENANCE DOOR

⑤ PUSH NUT (16)

② TRUNK UPPER TRIM

③ TRUNK FRONT UPPER PANEL

④ REAR TRIM PANEL ASSEMBLY

④ REAR SHELF

To remove the shelf, first remove the high mount brake light mounting nuts and disconnect the connector. Remove the rear speakers and rear seat lock cylinder escutcheon.




Headliner

Replacement

- Remove:
 - Sun visors and holders.
 - Dome light.
 - Rearview mirror assembly (page 14-49).
 - Front pillar trims (page 14-38).
 - Rear pillar trim panels (page 14-38).
 - Roof trim (Sunroof model).
 - Grab handles.
 - Rear roof side trim (page 14-38).
 - Rear seat (pages 14-44, 45)
 - Front seat (Passenger's).
 - Recline down the front seat back rearward (Driver's).

- Remove the 2 mounting screws.

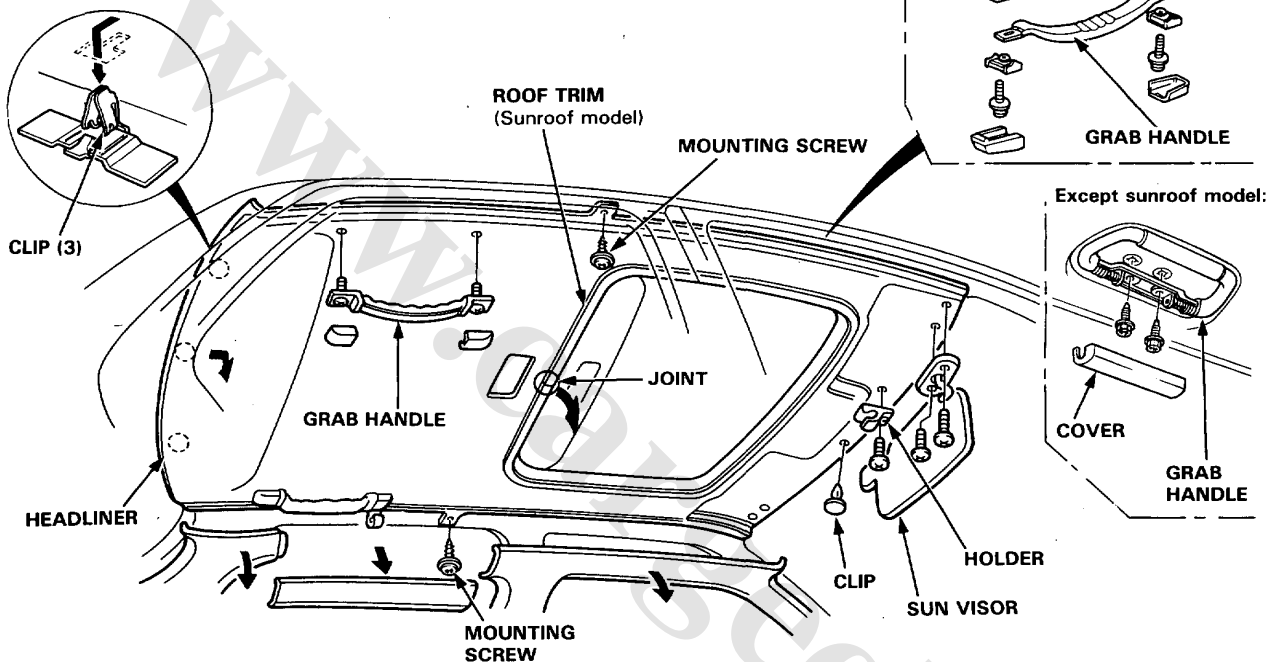

- Remove the front and rear clips, then remove the headliner.

- Remove the headliner from behind the front passenger's seat door opening.


NOTE:

- Take care not to bend the headliner.
- Keep water away from the headliner.
- Be careful not to damage the seats, dashboard and other interior trim.

- Install the headliner in the reverse order of removal.

NOTE:

- When installing the headliner inside the passenger cabin, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the two sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint towards the rear (Sunroof model).

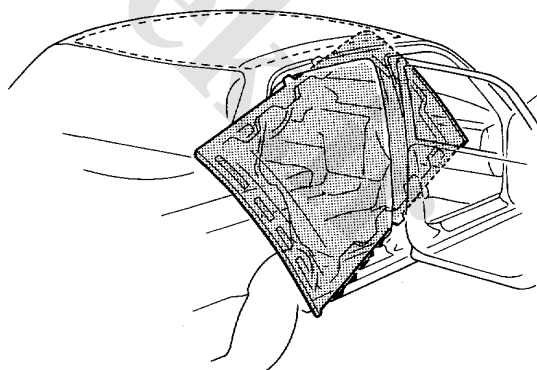




Hood

Replacement/Adjustment

1. Disconnect the windshield washer hose at the Y-joint, then pull it out of the hood.
2. Remove the hood by removing the 2 hood mounting bolts on each side.
3. To remove the hood hinges, remove the front windshield wipers and air scoop.
4. Install the new hood. After installing, adjust the hood fit to the opening.

HOOD HINGE MOUNTING BOLTS
6 x 1.0 mm
10 N·m (1.0 kg-m, 7 lb-ft)


HOOD HINGE

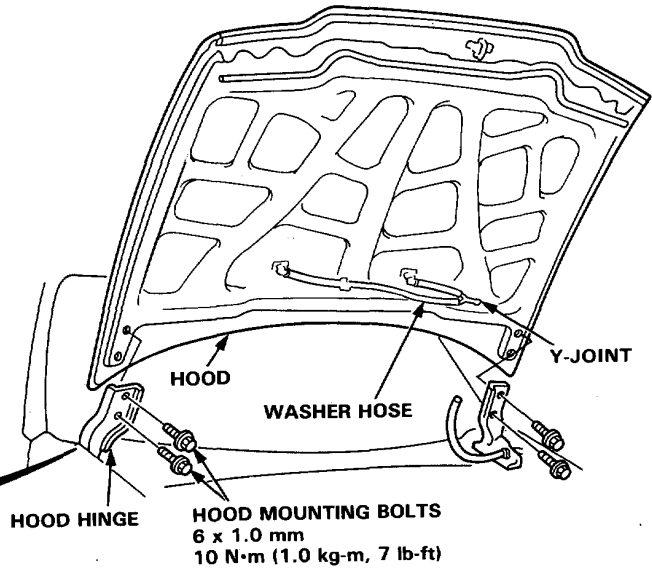

NOTE: Before pulling out the opener cable, tie a string to the cable so you can pull it back in later.

ALIGNMENT


- The hinges can be adjusted right and left as well as fore and aft by using the elongated holes.
- The hinges should be shimmed to adjust the height of the hood at the rear edge.
- Adjust the hood latch to obtain the proper height at the forward edge.

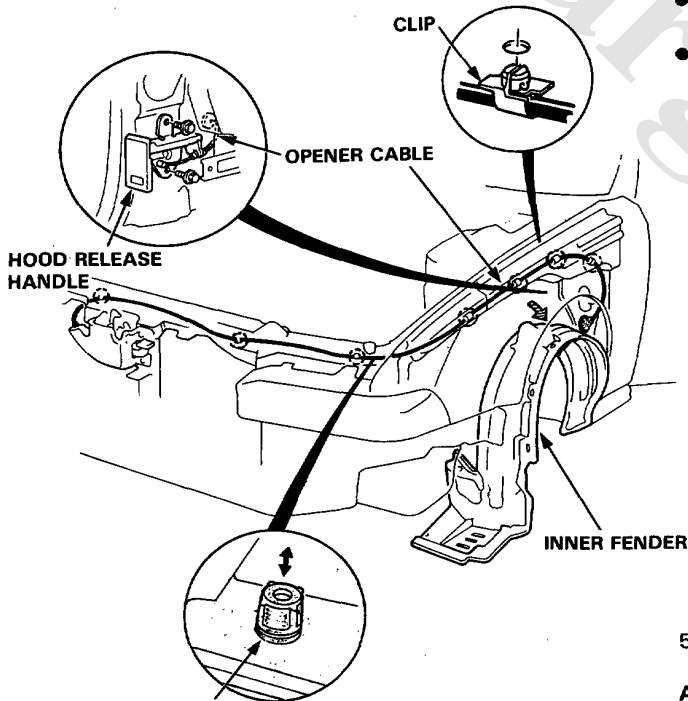

HOOD EDGE CUSHION

Turn as necessary, to make the hood fit flush with the body at front and side edges.

6 x 1.0 mm
10 N·m
(1.0 kg-m, 7 lb-ft)

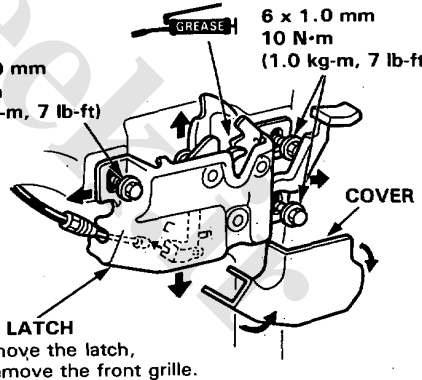

5. After installing, adjust the hood fit to the opening.

ALIGNMENT:


- Move the latch up or down or right or left as necessary to equalize the gap between the hood and the body.

Interior Trim

Replacement

Disassemble in numbered sequence.

☉: Clip locations

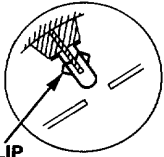

④ FRONT PILLAR TRIM

To remove the trim, first remove the upper anchor bolt from the front seat belt.

④ REAR ROOF SIDE TRIM

④ REAR PILLAR TRIM PANEL

To remove the panel, first remove the lower anchor bolt from the rear seat belts (page 14-47).

③ REAR DOOR TRIM

② SIDE SEAT TRIM

③ FRONT DOOR TRIM

① REAR DOOR SILL MOLDING

KICK PANEL


① FRONT DOOR SILL MOLDING

① JACK COVER

PUSH NUT Replace.

⑤ TRUNK SIDE PANEL

To remove the panel, first remove the rear side seat back (page 14-44).

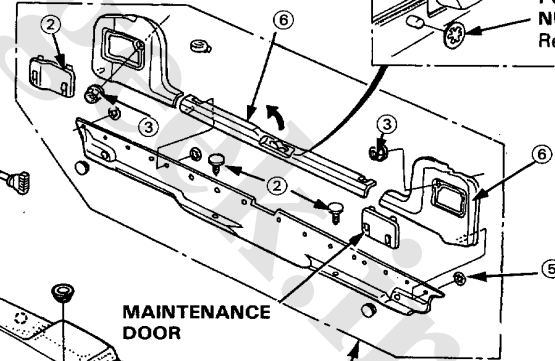

⑤ PUSH NUT (16)

① TRUNK FRONT SIDE PANEL

MAINTENANCE DOOR

④ REAR TRIM PANEL ASSEMBLY

② TRUNK UPPER TRIM

③ TRUNK FRONT UPPER PANEL

④ REAR SHELF

To remove the shelf, first remove the high mount brake light mounting nuts and disconnect the connector. Remove the rear speakers and rear seat lock cylinder escutcheon.




Headliner

Replacement

- Remove:
 - Sun visors and holders.
 - Dome light.
 - Rearview mirror assembly (page 14-49).
 - Front pillar trims (page 14-38).
 - Rear pillar trim panels (page 14-38).
 - Roof trim (Sunroof model).
 - Grab handles.
 - Rear roof side trim (page 14-38).
 - Rear seat (pages 14-44, 45)
 - Front seat (Passenger's).
 - Recline down the front seat back rearward (Driver's).

- Remove the 2 mounting screws.

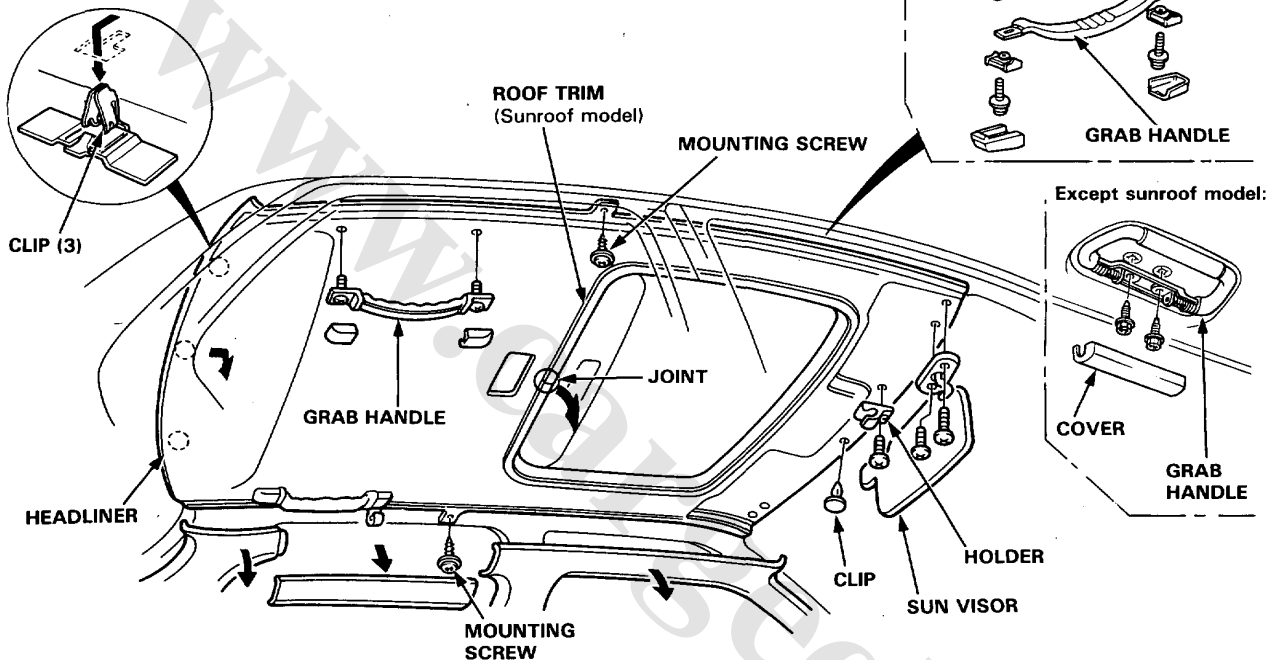

- Remove the front and rear clips, then remove the headliner.
- Remove the headliner from behind the front passenger's seat door opening.


NOTE:

- Take care not to bend the headliner.
- Keep water away from the headliner.
- Be careful not to damage the seats, dashboard and other interior trim.

- Install the headliner in the reverse order of removal.

NOTE:

- When installing the headliner inside the passenger cabin, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the two sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint towards the rear (Sunroof model).

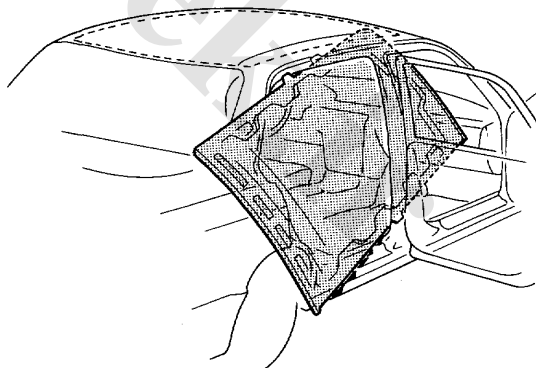


Front Seat


Replacement

NOTE: Take care not to scratch or score the seat covers and body.


1. Remove the seat track end covers as shown.
2. Remove the mounting bolts and disconnect the connectors, then remove the seat assembly.

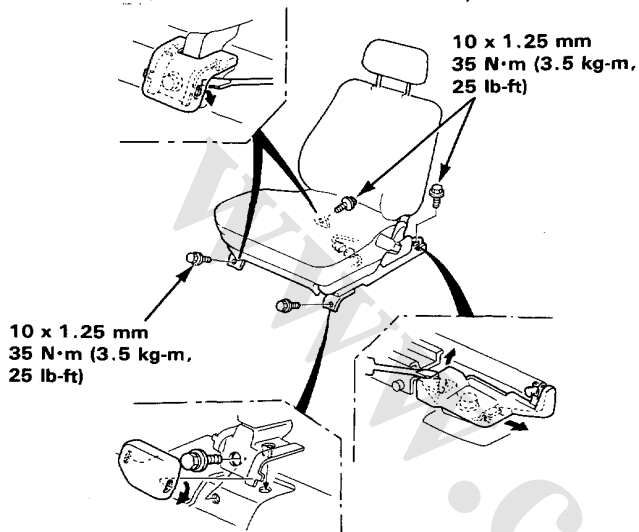


3. Remove the bracket cover and center cover.

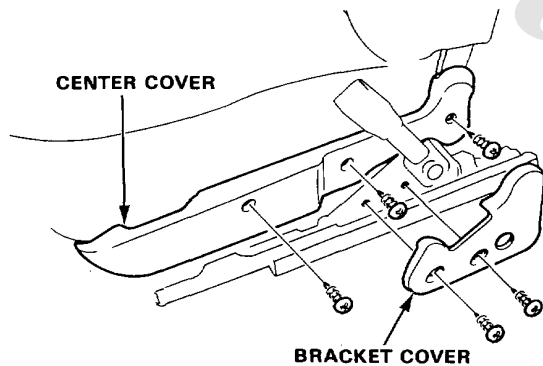

4. Remove the reclining adjuster cover and power seat switch.

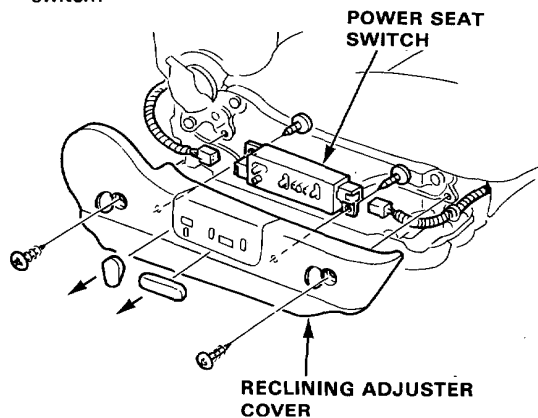


5. Remove the mounting bolts, then remove the seat cushion.

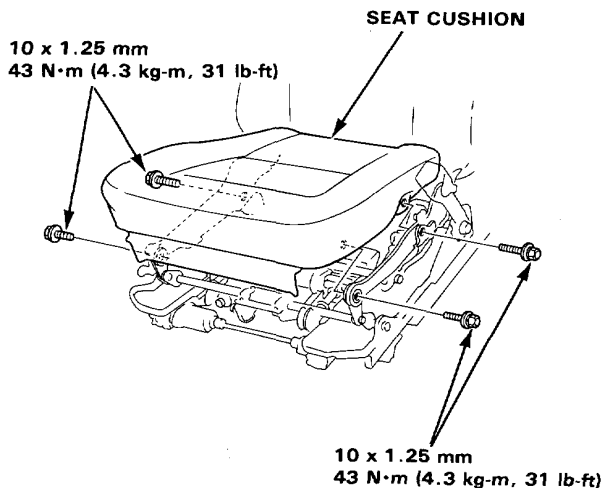

6. Remove the seat back cover.
7. Turn over the seat cover and remove the 2 mounting bolts.
8. Remove the pivot nut, then remove the seat back.

PIVOT NUT
8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

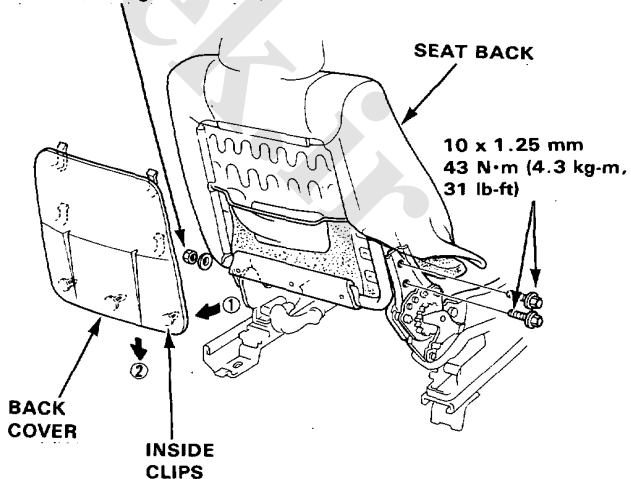




Manual Door Mirror

Removal

1. Remove the cap and the screw, then remove the control knob.
2. Remove the cover panel.
3. Remove the mirror mounting screws while holding the mirror.

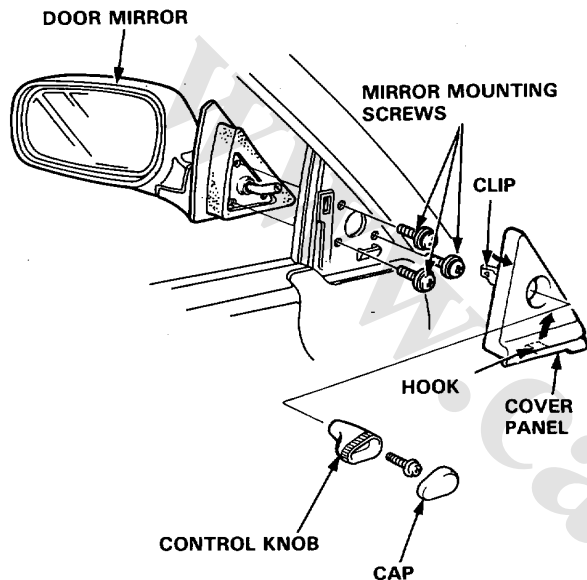


4. Install the door mirror in the reverse order of removal.
5. With the door and door glass closed fully, check for water and air leaks.

NOTE: Do not use high pressure water.


Mirror Glass Replacement

1. Insert a screwdriver in the mirror through the service hole and loosen the glass retaining screw.

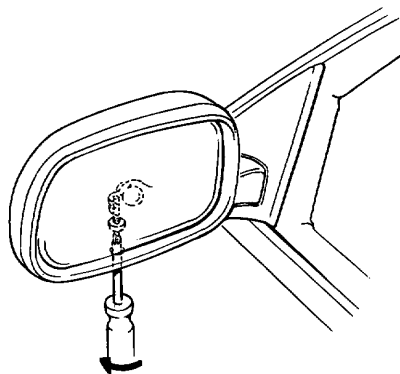


2. Carefully pry out the mirror with a flat tip screwdriver as shown.

CAUTION: To prevent damage to the mirror, wrap the end of the screwdriver with a shop towel.

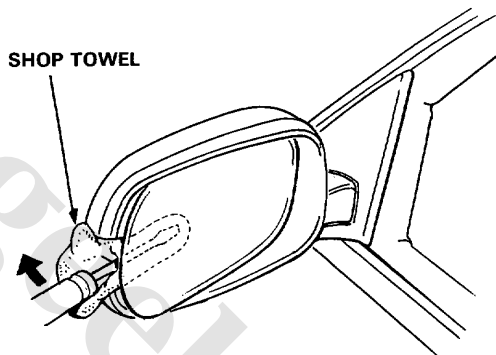


3. Install the mirror in the reverse order of removal and also apply grease to the location indicated by the arrow.

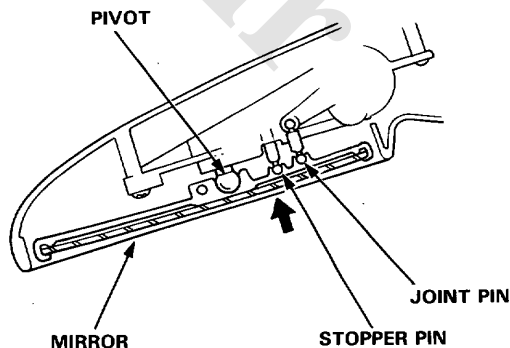



Control Unit Input Test

NOTE: Check the No.2 (15 A) fuse before input test.
 Disconnect the 5-P connector from the control unit.
 Make the following input test at the harness pins.

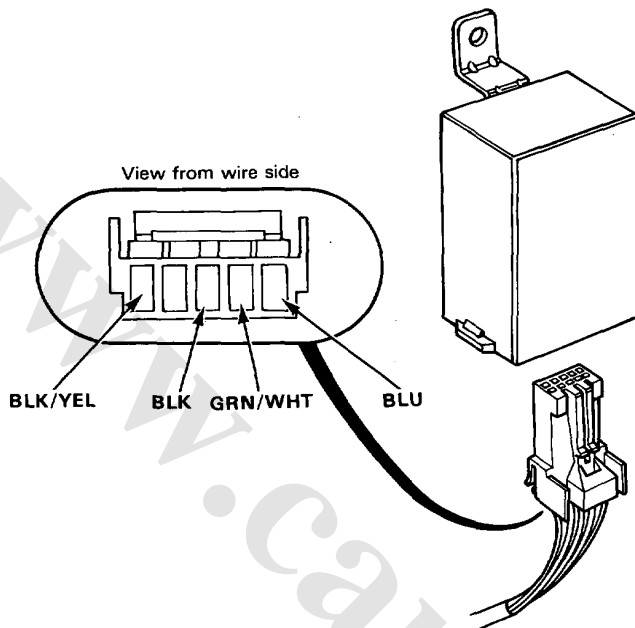

No.	Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> · Poor ground (G401, G402). · An open in the wire.
2	BLK/YEL	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · An open in the wire.
3	GRN/WHT	Ignition switch ON.	Check for voltage ground: should be battery voltage.	<ul style="list-style-type: none"> · Faulty solenoid valve. · An open in the wire.
4	BLU	Start the engine.	Check for voltage ground: should be battery voltage.	<ul style="list-style-type: none"> · Faulty ignition system. · An open in the wire.

- Replace the control unit if the mount is not defective and no defects are found in the above input tests.

Wiring Diagrams


Index

Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		

Power Door Mirror

Removal

1. Pry out the cover panel with a flat tip screwdriver, then remove the cover panel. Disconnect the power mirror connector.
2. Remove the mirror mounting screws while holding the mirror.

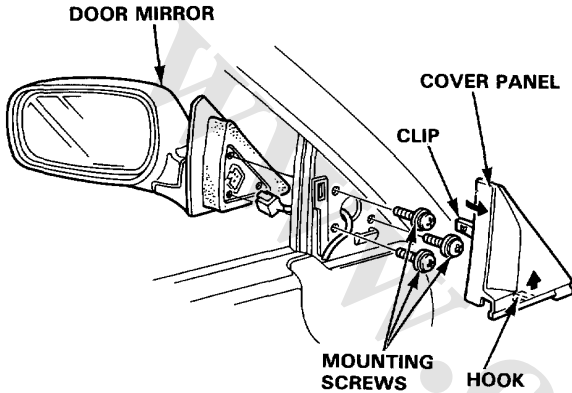


3. Install the door mirror in the reverse order of removal.
4. With the door and door glass closed fully, check for water and air leaks.


NOTE: Do not use high pressure water.

Mirror Glass Replacement


1. Insert a screwdriver in the mirror through the service hole, and loosen the actuator retaining screw.

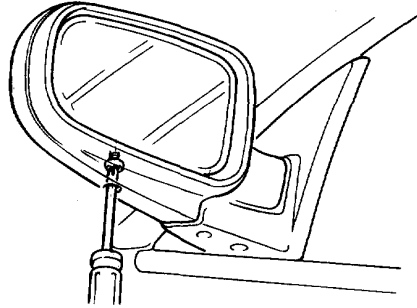

2. Pull the actuator out from the mirror housing.
3. Pull the lock cap stopper and remove the stopper pin, then separate the actuator and mirror holder.

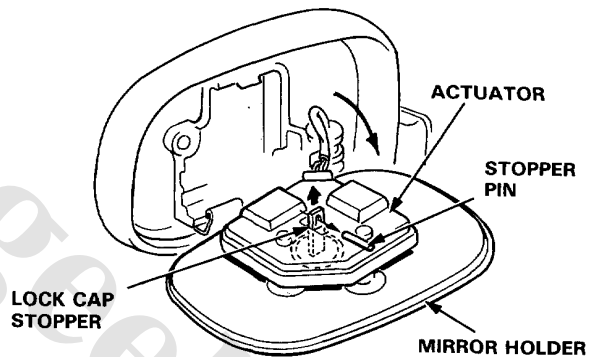


4. Heat the edge of the glass with a low powered heat gun for several minutes, then remove the glass.
5. Install the glass in the mirror case, narrow end first.

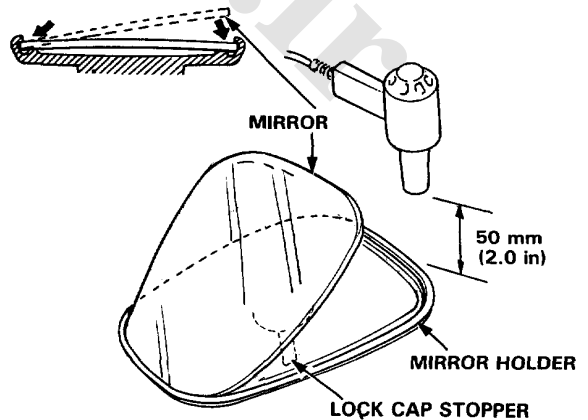



Roof Molding/Side Moldings


Roof Molding/Side Window Moldings Replacement

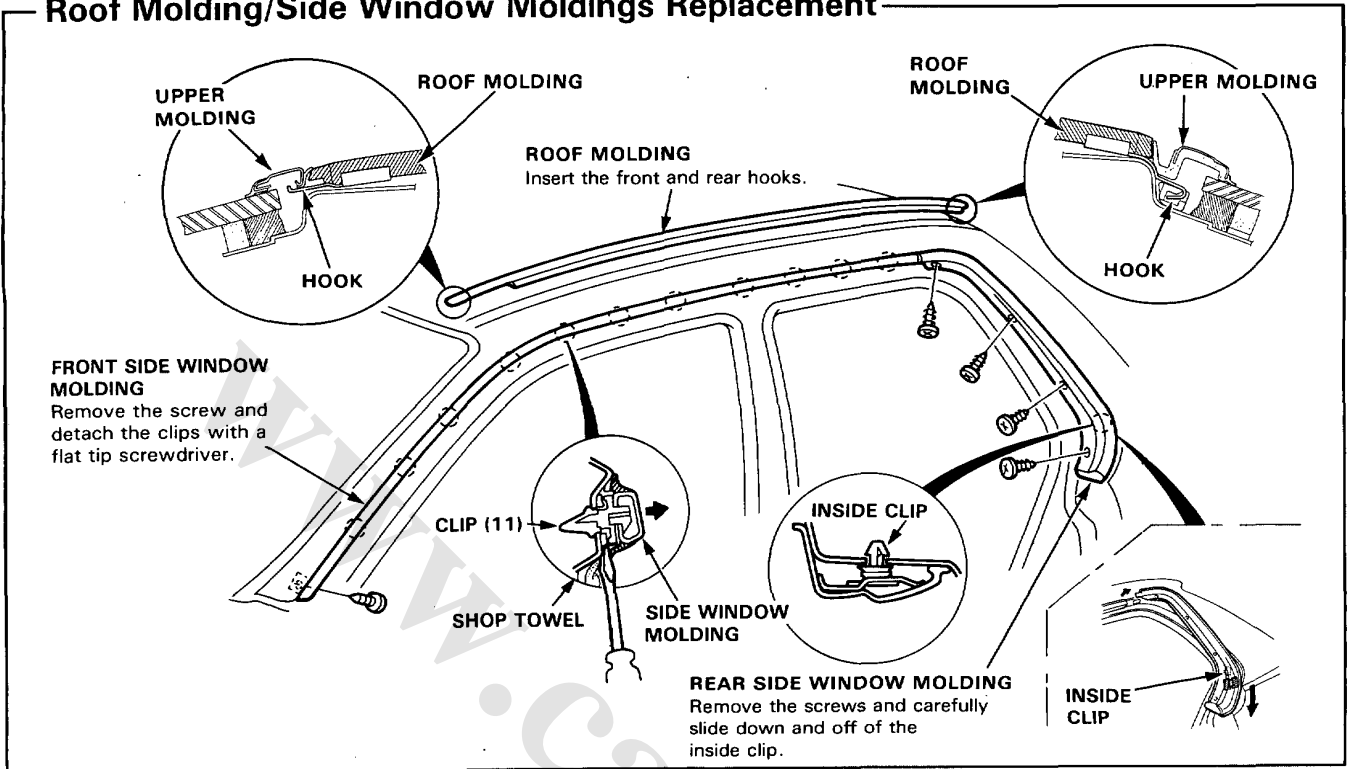



Side Moldings Replacement

1. Remove the door panel and turn over the plastic cover.
2. Remove the plastic nut and detach the center clips from inside of the door.
3. Peel off the molding and detach the side clips, then remove the door moldings.

NOTE: Before reassembling, clean the body bonding surface with a sponge dampened in alcohol.

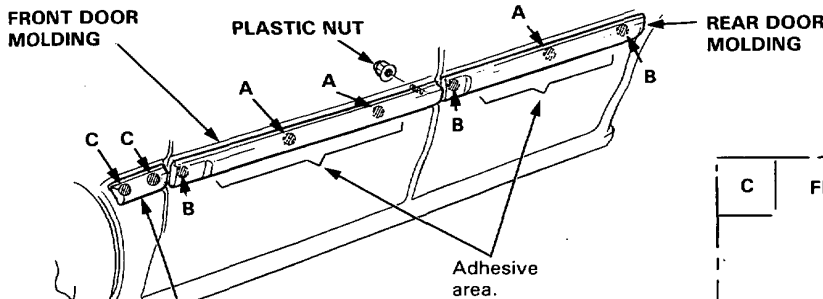

FRONT SIDE MOLDING
To remove the molding, first remove the mud guard, front of side sill panel and rear of inner fender.

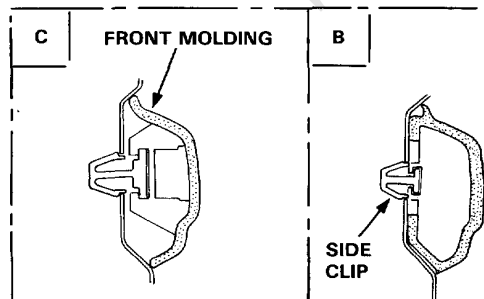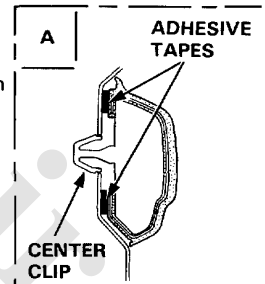


Front Seat


Replacement

NOTE: Take care not to scratch or score the seat covers and body.


1. Remove the seat track end covers as shown.
2. Remove the mounting bolts and disconnect the connectors, then remove the seat assembly.

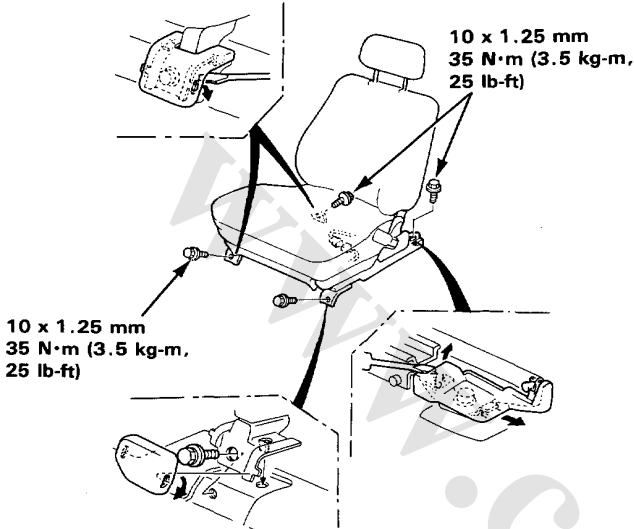


3. Remove the bracket cover and center cover.

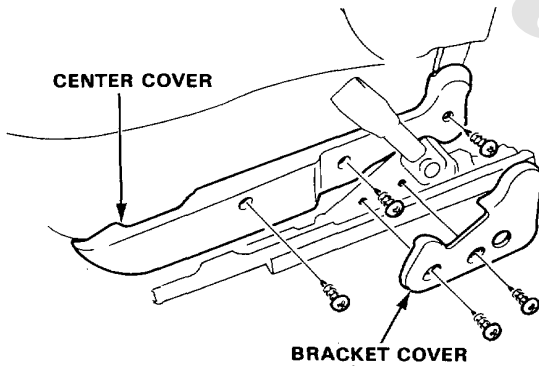

4. Remove the reclining adjuster cover and power seat switch.

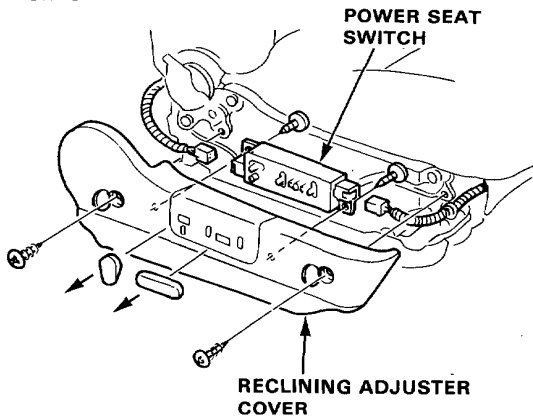


5. Remove the mounting bolts, then remove the seat cushion.

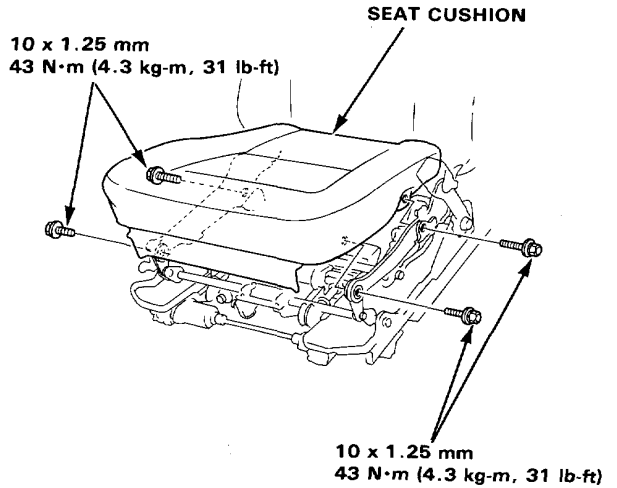

6. Remove the seat back cover.
7. Turn over the seat cover and remove the 2 mounting bolts.
8. Remove the pivot nut, then remove the seat back.

PIVOT NUT
8 x 1.25 mm
22 N·m (2.2 kg-m, 16 lb-ft)

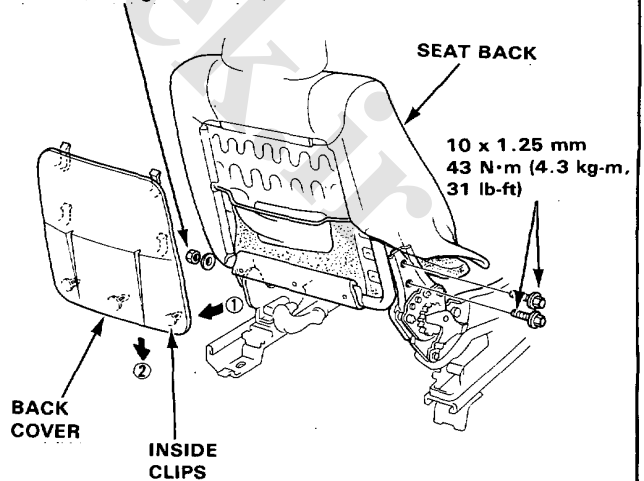



Seat Device Disassembly

Full power adjusted type:



NOTE:

- Before installing the seat, make sure there are no twists or pinch in the seat wires.
- Grease the moving surface.

Bolts torque:

- ① 20 N·m (2.0 kg-m, 14 lb-ft)
- ② 5 N·m (0.5 kg-m, 3.6 lb-ft)
- ③ 9 N·m (0.9 kg-m, 6.5 lb-ft)

NOTE: *On reassembly, use liquid thread lock.

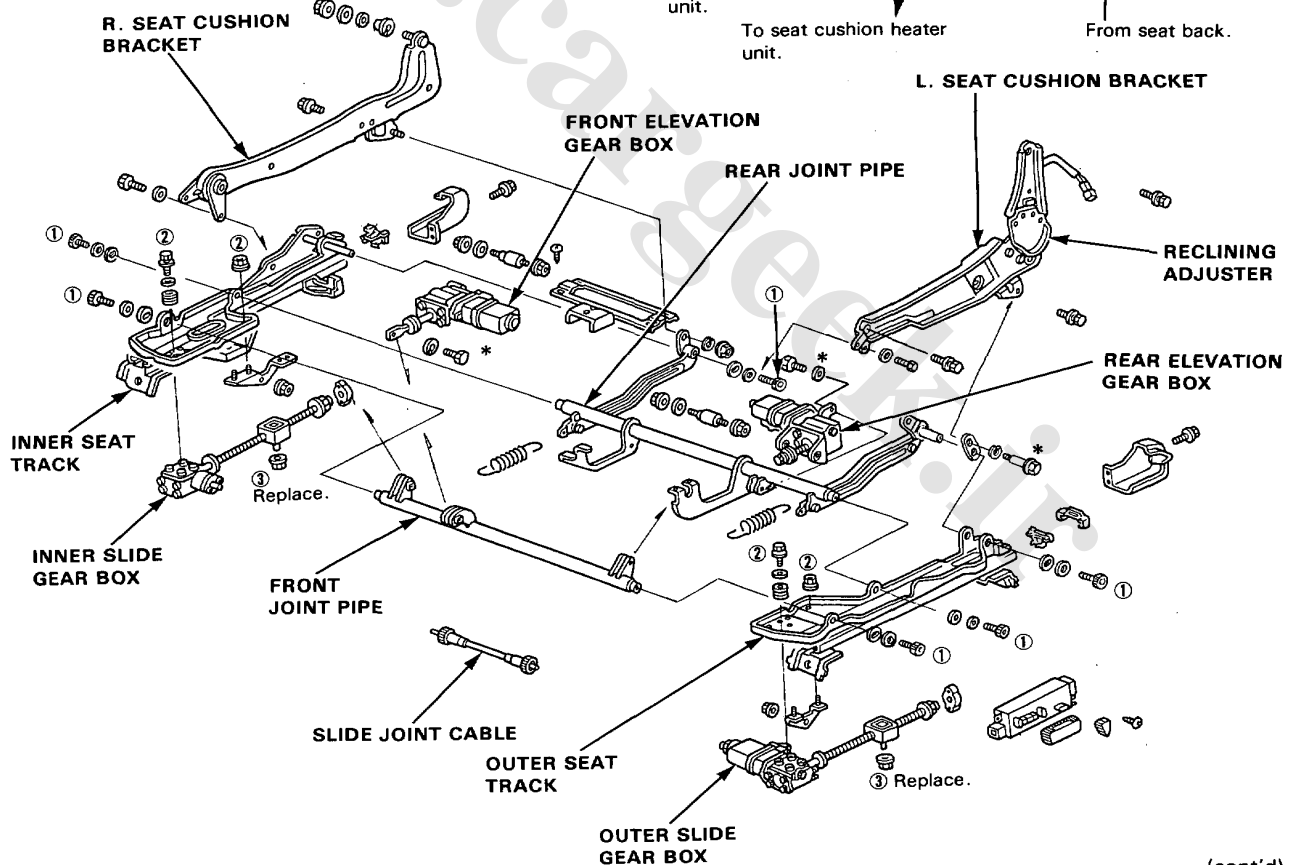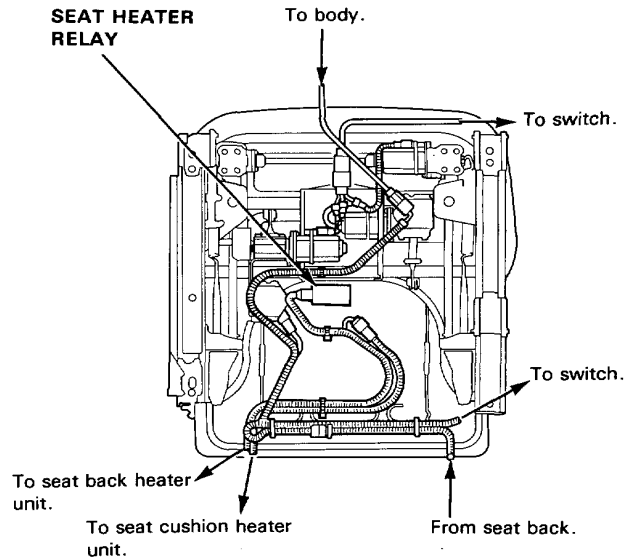

(cont'd)

Front Seat

Seat Device Disassembly (cont'd)

Height power adjusted type:

NOTE:

- Before installing the seat, make sure there are no twists or pinch in the seat wires.
- Grease the moving surfaces.

Bolts torque:

① 5.0 N·m (0.5 kg-m, 3.6 lb-ft)

② 12 N·m (1.2 kg-m, 9 lb-ft)

NOTE: *On reassembly, use liquid thread lock.

R. SEAT CUSHION BRACKET

INNER SEAT TRACK

L. SEAT CUSHION BRACKET

ELEVATION GEAR BOX

RECLINING ADJUSTER

OUTER SEAT TRACK

SEAT HEATER RELAY

JOINT PIPE

SPRINGS


Manual adjusted type:

INNER SEAT TRACK

OUTER SEAT TRACK

To seat back heater unit.

To seat cushion heater unit.

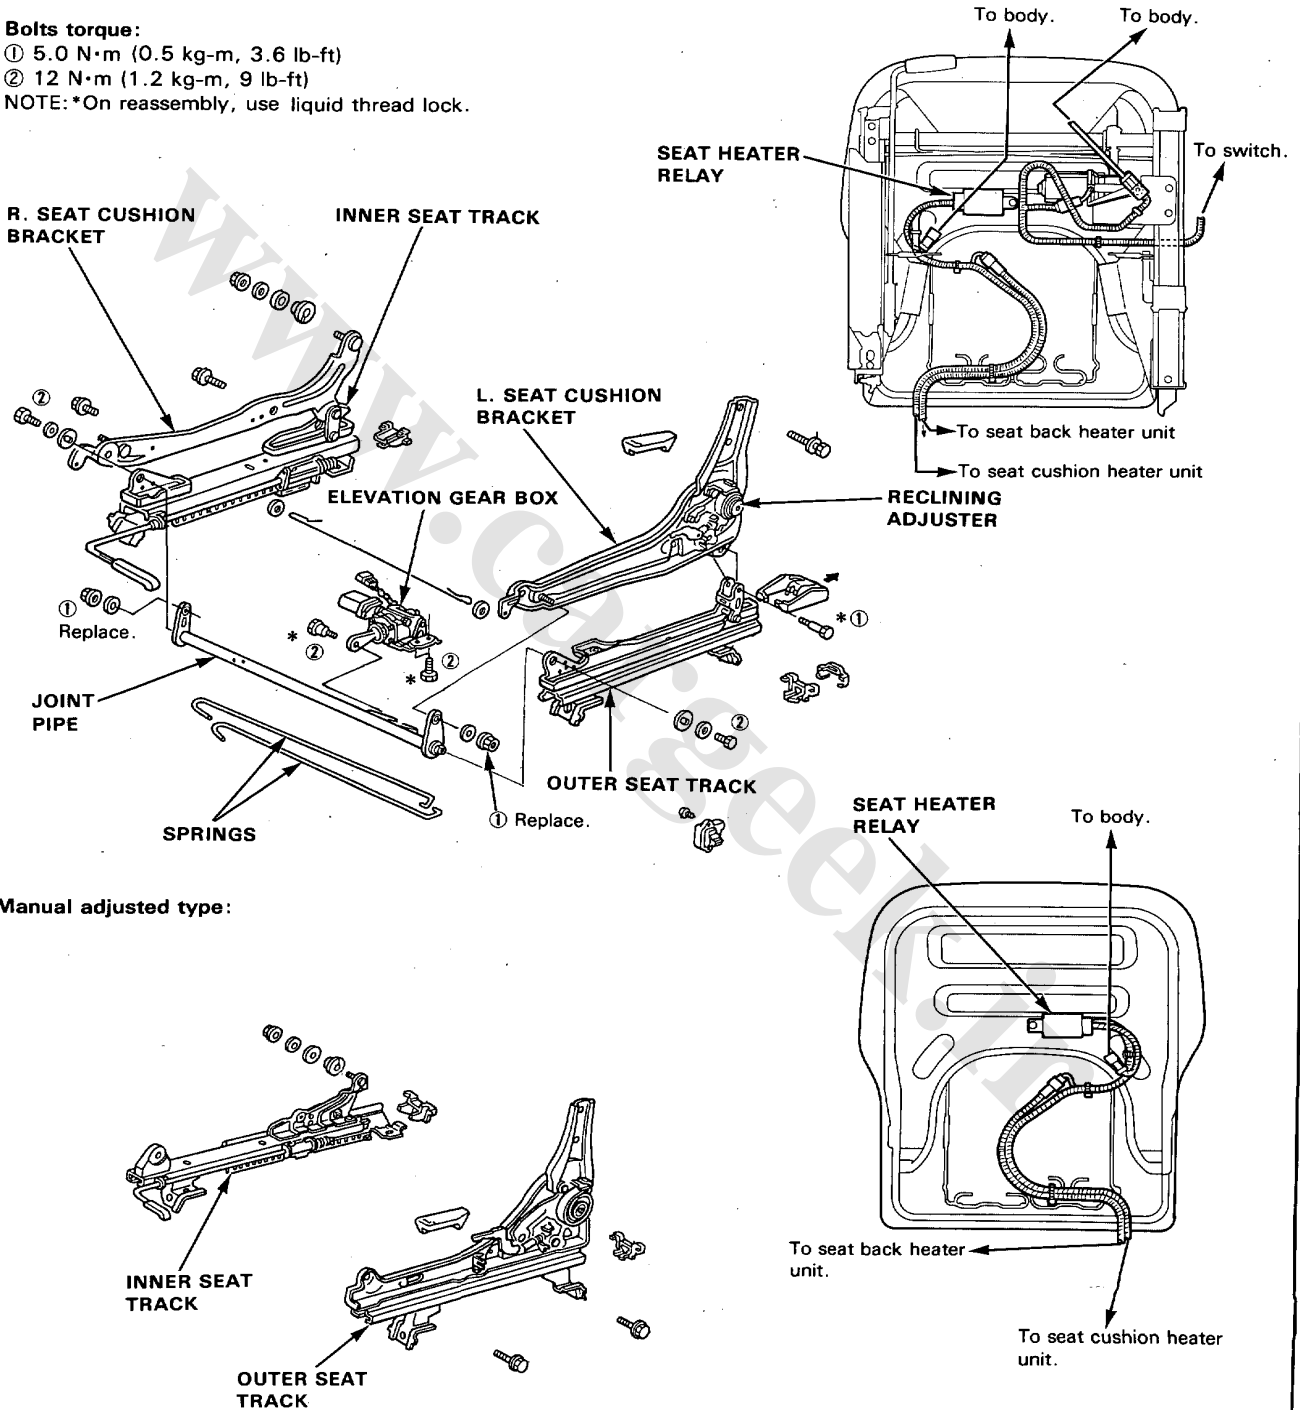




Cover Replacement

CAUTION: Wear gloves to remove and install the seat cover.


NOTE: Take care not to open the seams or damage the cover.

Seat back cover removal.

1. Remove the seat back from the seat track and reclining adjuster (page 14-40).
2. Remove the lumbar support knob.
3. Turn over the seat cover by releasing all the hooks and inside springs.
4. Remove the headrest guides, then remove the seat cover.

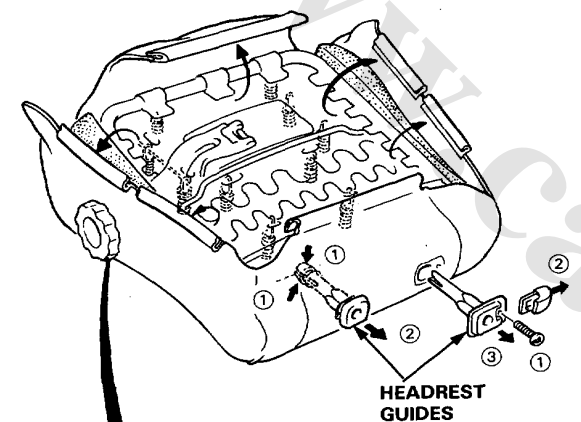


HEADREST GUIDES

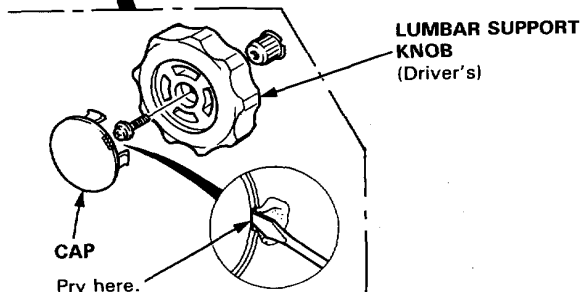

LUMBAR SUPPORT KNOB (Driver's)

CAP
Pry here.


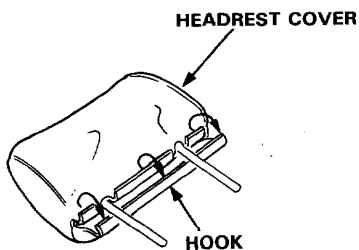


HEADREST COVER

HOOK

Seat cushion cover removal.

1. Remove the seat cushion from the seat tracks (page 14-40).
2. Remove all hooks, clips and inside springs from under the seat cushion, then turn over the seat cover.
3. Turn up the edge of the trim cover all the way around, then release the clips of the cushion.

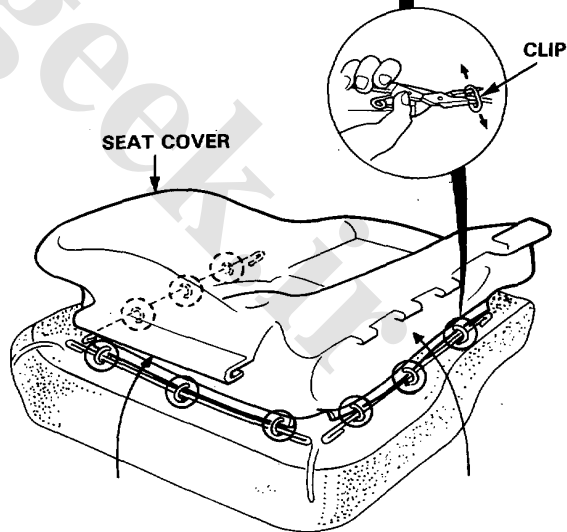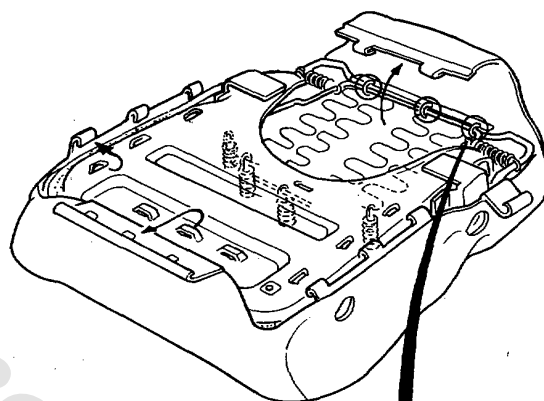

NOTE: To prevent wrinkles when installing a seat cover, make sure the material is stretched evenly over the frame before securing all the clips.


Rear Seats

Replacement



Disassemble in numbered sequence.

Folded down type:

NOTE: Before tightening the seat back mounting bolts, adjust the seat back fit and latch.

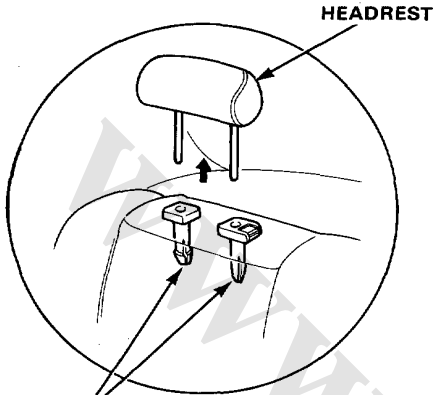


HEADREST GUIDES (See page 14-43)

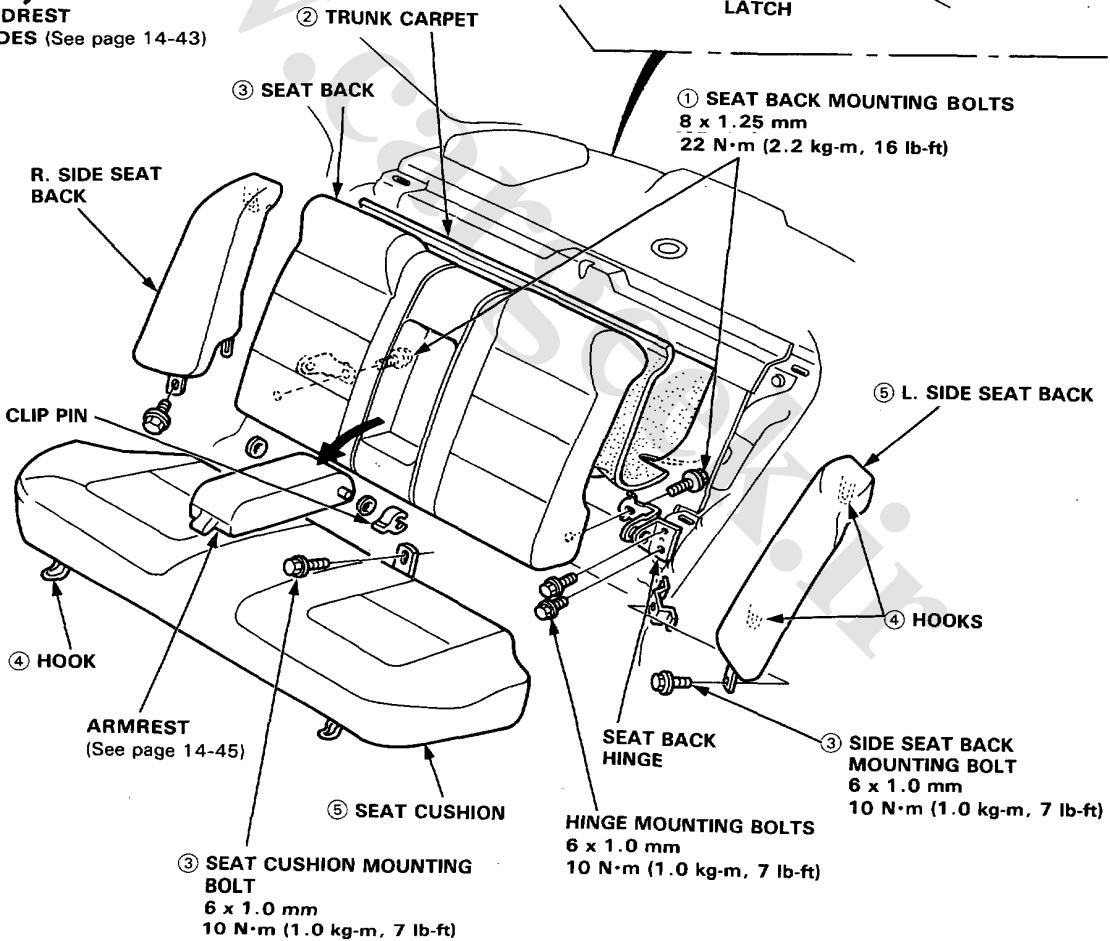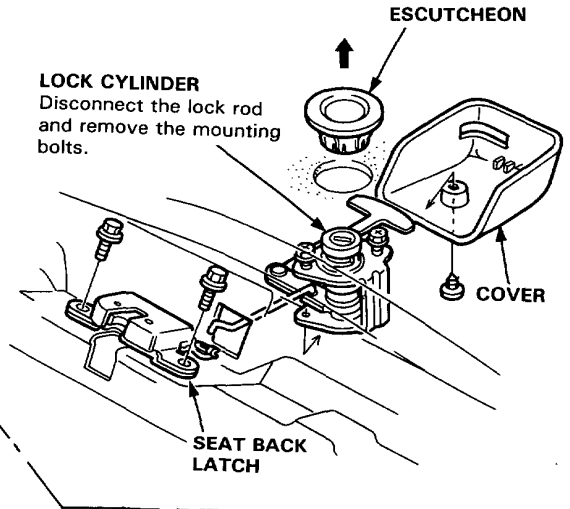



Disassemble in numbered sequence.
Standard/Armrest through type:



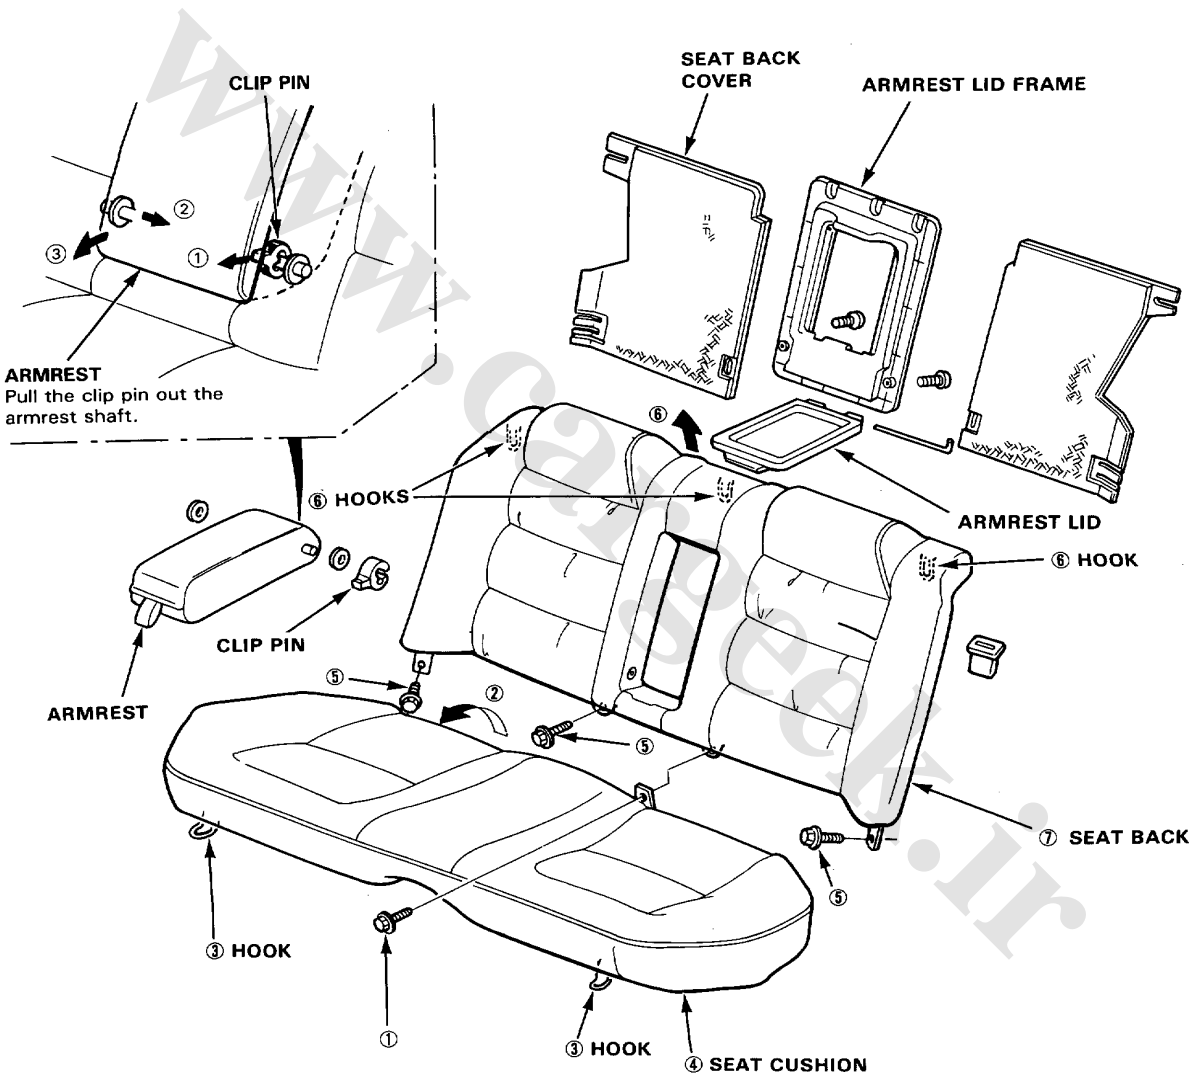


Front Seat Belts

Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.


1. Remove the center pillar lower trim.
2. Remove the upper anchor bolt, lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.
3. Remove the front seat, then remove the bolt and the center anchor.

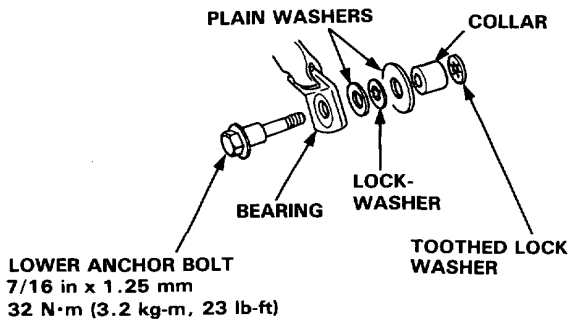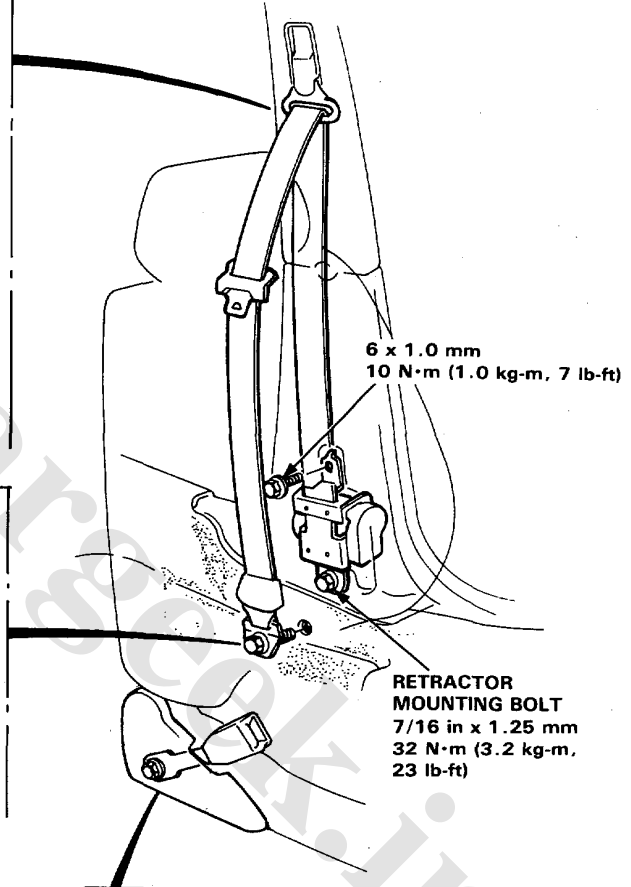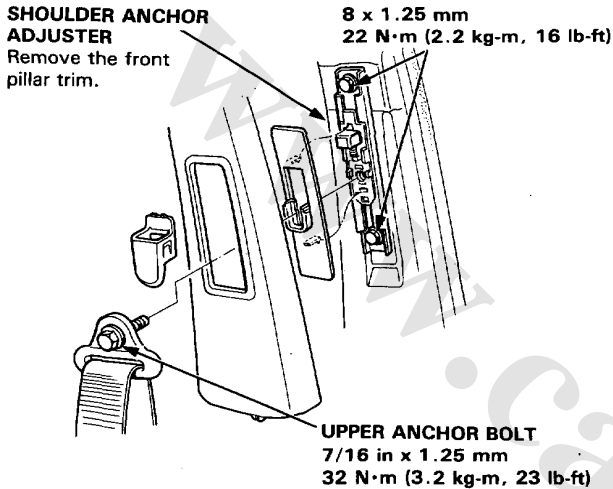

4. Check that the retractor locking mechanism functions as described on page 14-48.
5. Install the front seat belts in the reverse order of removal.

NOTE:

- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- Before attaching the center pillar lower trim, make sure there are no twists or kinks in the belts.

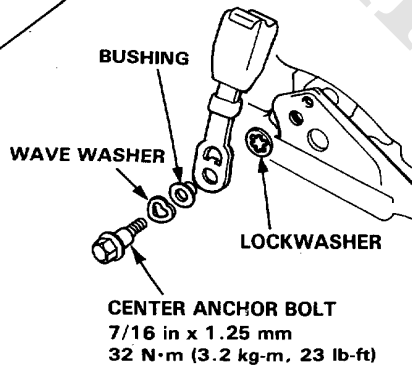




Rear Seat Belts

Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the rear seat (pages 14-44, 45).
2. Remove the rear pillar trim panel.
3. Remove the upper anchor bolt, the lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

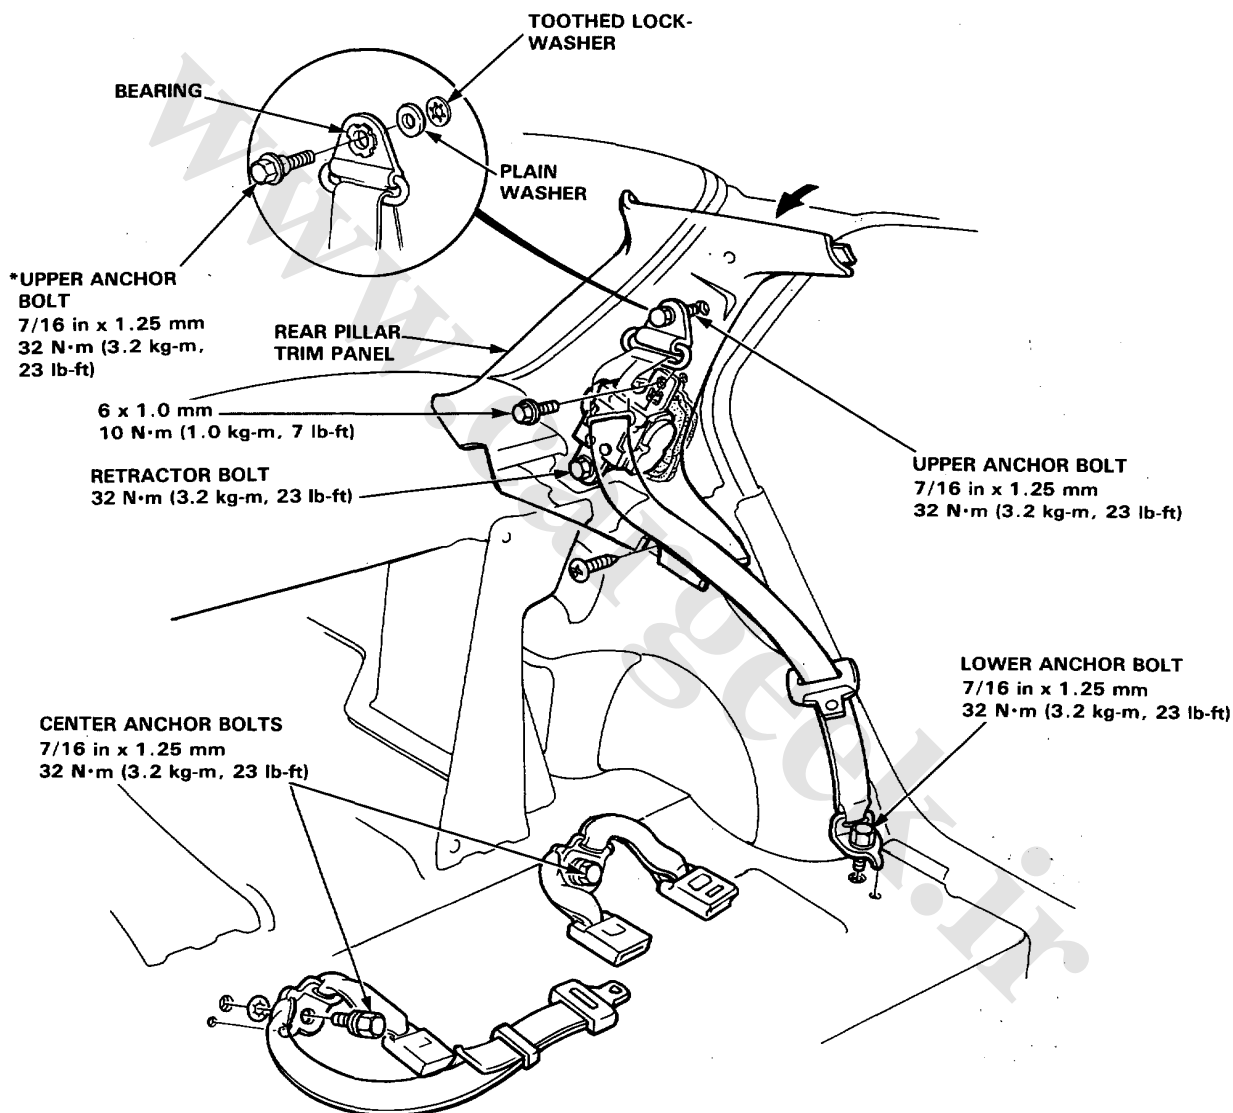

4. Check that the retractor locking mechanism functions as described on page 14-48.
5. Install the seat belt in the reverse order of removal.

NOTE:

- Before attaching the rear pillar trim panel and rear seat, make sure there are no twists in the belt.
- * On reassembly, replace the upper anchor bolt and use liquid thread lock.

Seat Belts


Inspection

Retractor Inspection


1. With the retractor installed, check that the belt can be pulled out freely.
2. Make sure that the belt does not lock when the retractor is leaned slowly up to 15° from the mounted position. The belt should lock when the retractor is leaned over 40° .

CAUTION: Do not attempt to disassemble the retractor. *: Mounted Position.

Front:

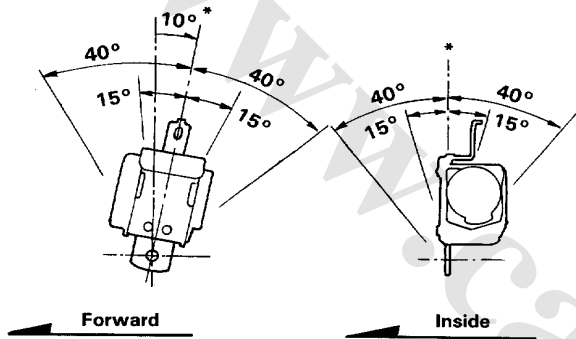

Rear:

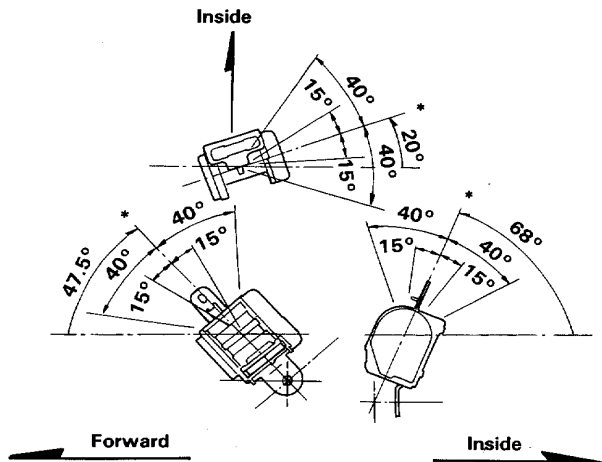

3. Replace the belt with a new one if there is any abnormality.


On-the-Car Belt Inspection

1. Check that the belt is not twisted or caught on anything.
2. After installing the anchors, check for free movement on its retaining bolt. If necessary, remove the bolt and check that the washers and other parts are not damaged or improperly installed.
3. Check the belts for damage or discoloration. Clean with a shop towel if necessary.
CAUTION: Use only soap and water to clean.
4. Check that the belt does not lock when pulled out slowly. The belt is designed to lock only during a sudden stop or impact.
5. Make sure that the belt will retract automatically when released.
6. Replace the belt with a new one if there is any abnormality.



8. Using an awl, make a hole through the glass adhesive from inside the car. Push piano wire through the hole and wrap each end around a piece of wood.
9. With a helper on the outside, pull the wire back and forth in a sawing motion and carefully cut through the adhesive around the entire glass.

CAUTION: Hold the piano wire as close to the glass as possible to prevent damage to the body.

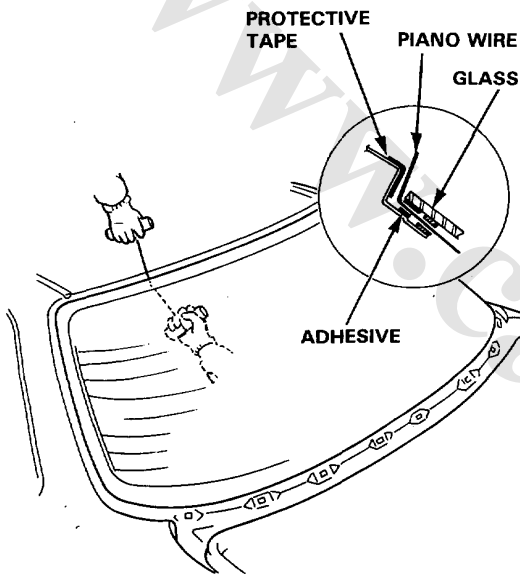

10. Cut the rubber spacers away from the body with a knife: they are cemented in place.

NOTE: Replace the rubber spacers with new ones whenever the windshield has been removed.

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire glass flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove all traces of the rubber spacer material from the body.
- Mask off surrounding surfaces before applying primer.


2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. If the old glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the glass on its edges; small chips may later develop into cracks.

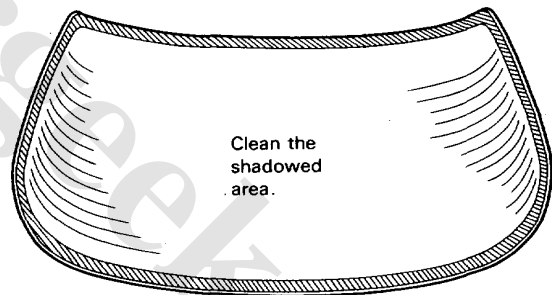


(cont'd)


Rear Window

Installation (cont'd)

4. Install the molding clips and retainers as shown.
5. Peel the backing off each spacer, then install the spacers by pressing them firmly into place at the locations shown.

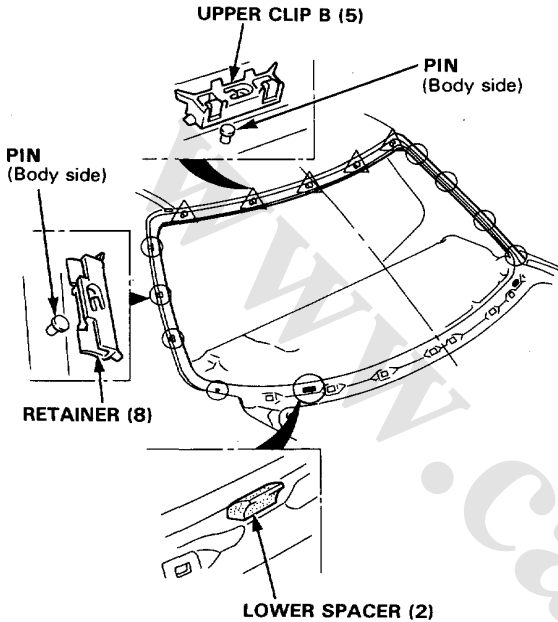


6. Set the glass upright on the lower spacers, then center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.

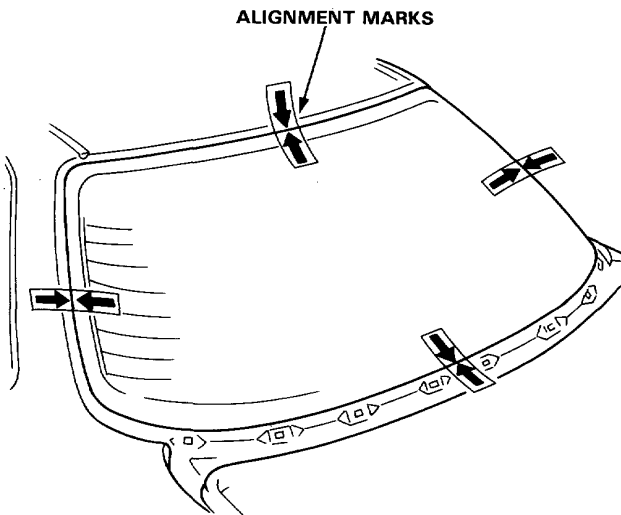

7. Glue the rubber dams to the inside face of the glass as shown to contain the adhesive during installation.

NOTE: Be careful not to touch the glass where adhesive will be applied.

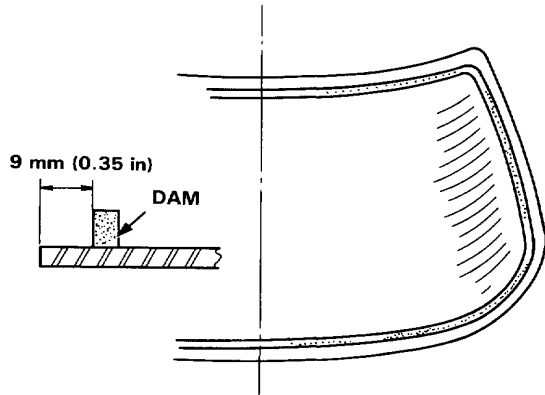


8. With a sponge, apply a light coat of glass primer around the edge of the glass as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

▨ : Apply glass primer here.

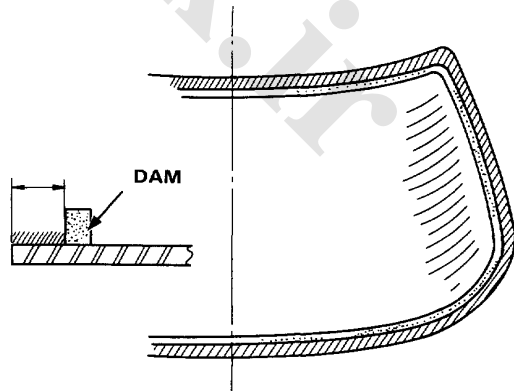




9. With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

 : Apply body primer here.

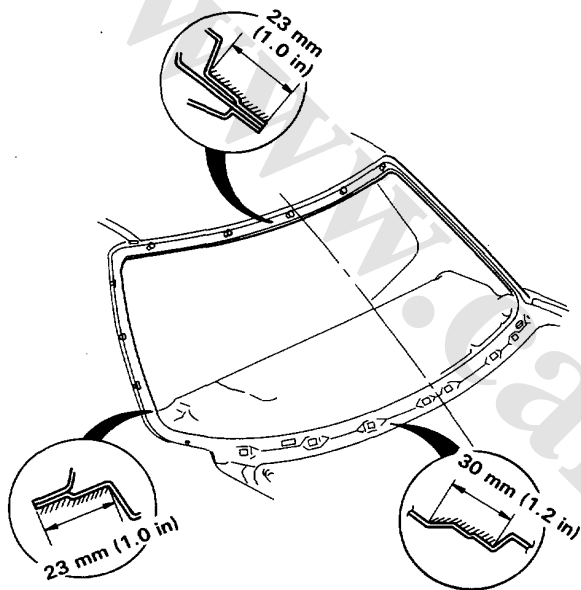


10. Thoroughly mix the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE: Clean the plate with a sponge and alcohol before mixing.

11. Follow the instructions that came with the adhesive.



12. Before filling a cartridge, cut off the end of the nozzle at the angle shown.

Cut off nozzle end as shown.

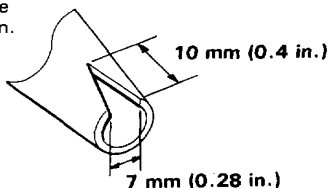


13. Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun and run a bead of adhesive around the edge of the glass as shown.

NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

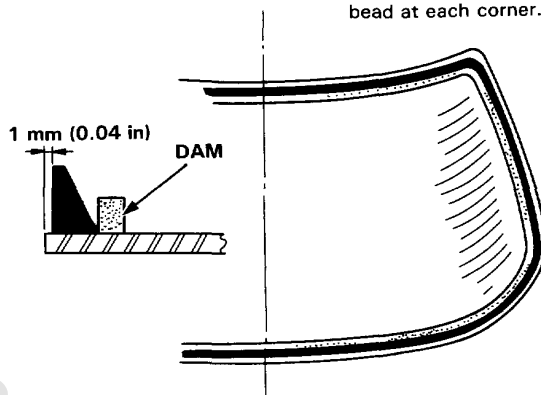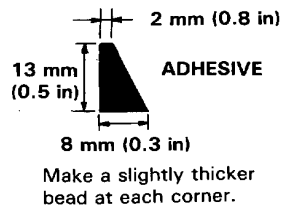

14. Use suction cups to hold the glass over the opening, align it with the marks made in step 6 and set it down on the adhesive. Lightly push on the glass until its edges are fully seated on the adhesive all the way around.

NOTE: Do not close or open the doors until adhesive is dry.

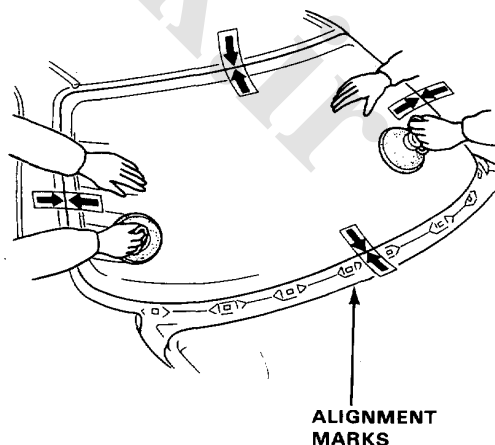

(cont'd)


Rear Window

Installation (cont'd)


15. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Use a soft shop towel dampened with alcohol or unleaded gasoline to remove adhesive from a painted surface or glass.


16. Install the clips on the upper molding and side molding.

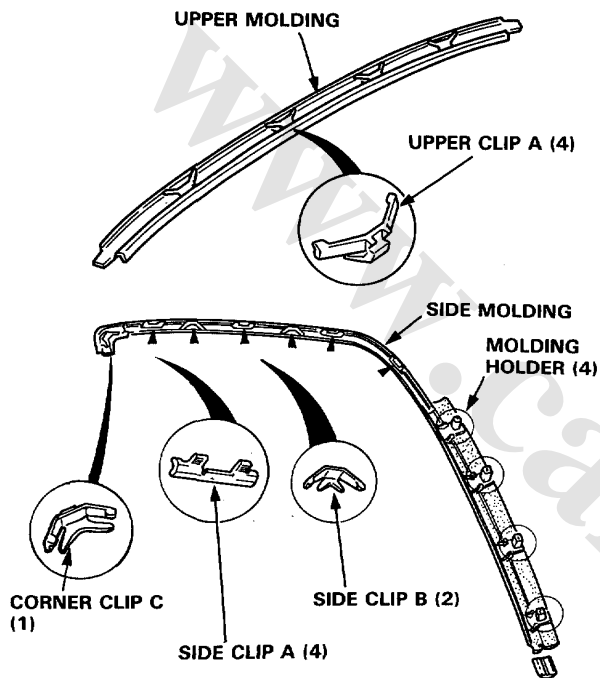

17. Install the upper molding.

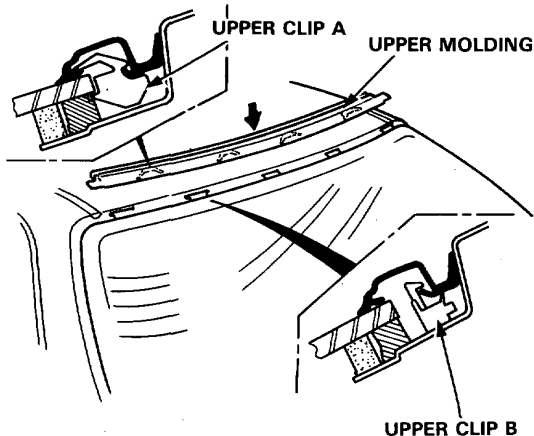

18. Install the side moldings.

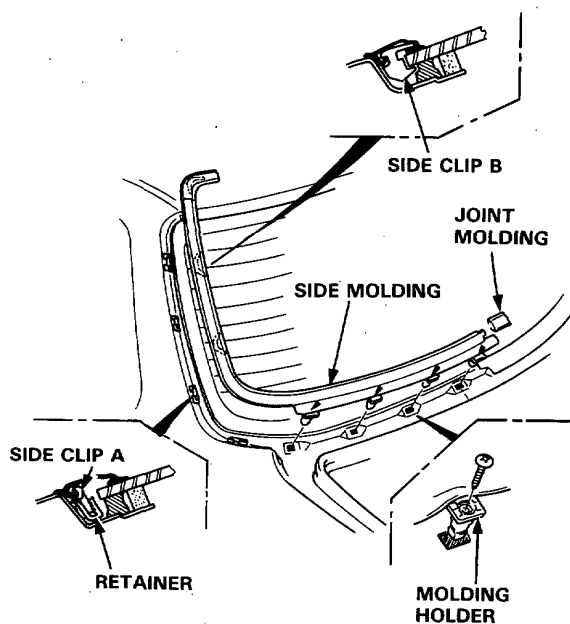

19. After the adhesive is dry, spray water over the glass and check for leaks. Mark leaking areas and let the glass dry, then seal with sealant.


NOTE: Let the car stand for at least 4 hours after glass installation. If the car has to be used within the first 4 hours, it must be driven slowly.

20. Fix the headliner back into position then install:

- Rear pillar trim panel.
- Rear shelf.



Sunroof Index

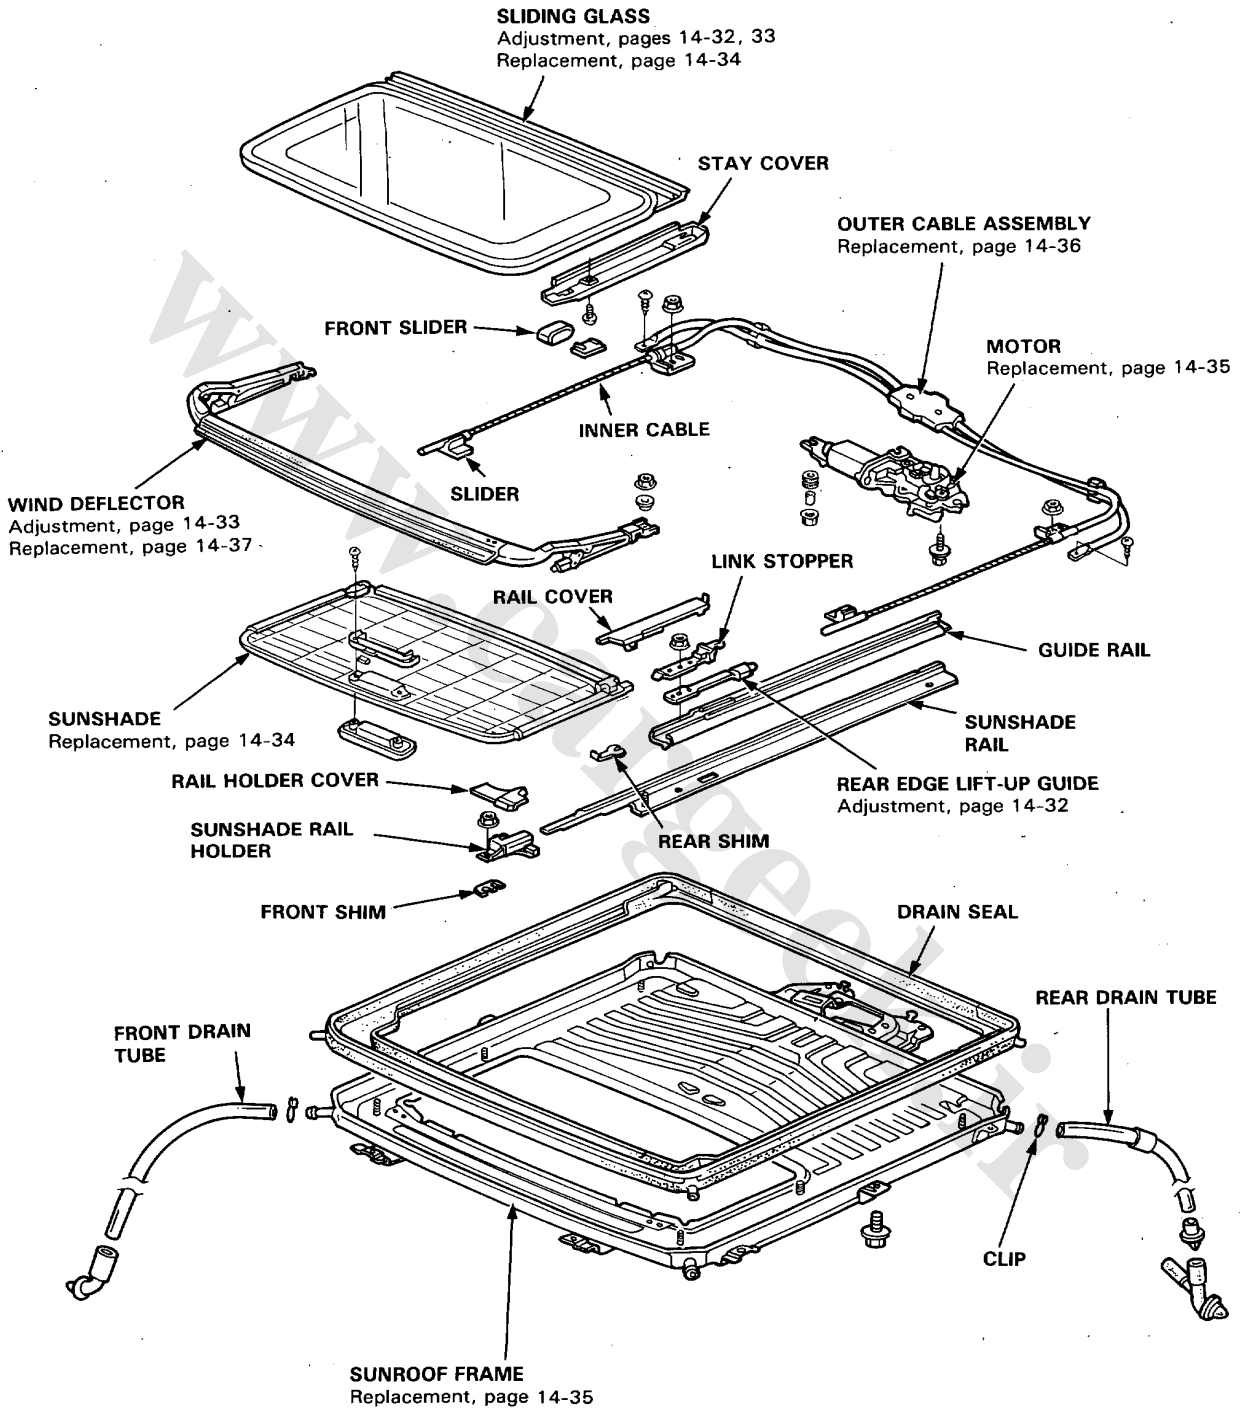

Sunroof

Troubleshooting

Symptom	Probable Cause
Water leak	<ol style="list-style-type: none"> 1. Clogged drain tube. 2. Gap between glass weatherstrip and roof panel. 3. Defective or improperly installed glass weatherstrip. 4. Gap between drain seal and roof panel.
Wind leak, noise	<ol style="list-style-type: none"> 1. Excessive clearance between glass weatherstrip and roof panel.
Deflector noise	<ol style="list-style-type: none"> 1. Improper clearance between deflector seal and frame seal. 2. Insufficient deflector extension. 3. Deformed deflector.
Motor noise	<ol style="list-style-type: none"> 1. Loose motor. 2. Worn gear or bearing. 3. Outer cable deformed.
Sliding glass does not move, but motor turns	<ol style="list-style-type: none"> 1. Clutch out of adjustment. 2. Foreign matter stuck between guide rail and slider. 3. Inner cable loose. 4. Outer cable not attached properly.
Sliding glass does not move and motor does not turn (Sliding glass can be moved with sunroof wrench)	<ol style="list-style-type: none"> 1. Blown fuse. 2. Faulty switch. 3. Battery run down. 4. Defective motor. 5. Wrong operation of relay.


Rear Edge Closing Adjustment

Open the glass about a foot, then close it to check where rear edge begins to rise. If it rises too soon and seats too tightly against the roof panel, or too late and does not seat tightly enough, adjust it.

1. Open the glass fully.
2. Remove the rail covers from both sides, and loosen the lift-up guide nuts.
3. Move the lift-up guides and link stopper forward or backward, then tighten nuts and recheck roof closing.

The guides have pitches of 1.5 mm (0.06 in) each and can be adjusted 2 pitches forward or backward.

4. If necessary, lower the rear of the headliner and remove the motor, then adjust the inner cables (location of sliders) until they are parallel.

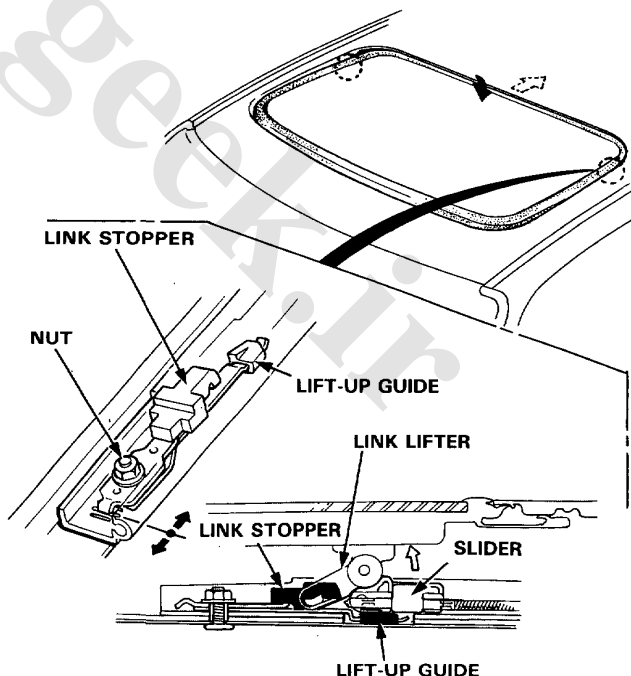




Glass Height Adjustment

Roof panel should be even with the glass weatherstrip, to within 1 ± 0.5 mm (0.04 ± 0.02 in) all the way around.


If not, open the glass fully, and:

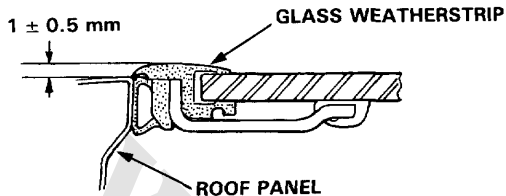

Front:

1. Pry out the rail holder cover and loosen the mounting nut.
2. Install shims between sunroof frame and sunshade rail holder.


FRONT: Shim thickness Max. 2 mm (0.08 in)

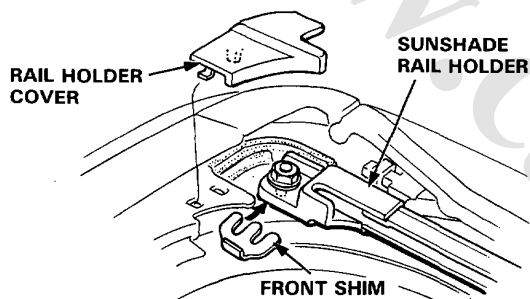

Rear:

1. Remove the rail cover and loosen the lift-up guide mounting nut.
2. Install shims between guide rail and sunshade rail.

REAR: Shim thickness Max. 2 mm (0.08 in)

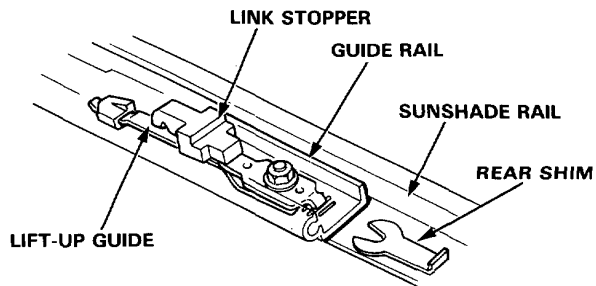


3. Repeat on opposite side if necessary.
4. Side-to-side fit of glass weatherstrip can be adjusted by loosening the sunroof frame mounting bolts and moving the frame (page 14-35).

Wind Deflector Adjustment

NOTE: A gap between deflector seal and roof panel will cause wind noise when driving at high speed with the sunroof open.



1. Open the sunroof and pry the rail covers off both sides.
2. Loosen the deflector mounting nuts.

NOTE: Wind deflector can be adjusted 2 mm (0.08 in) forward or backward.

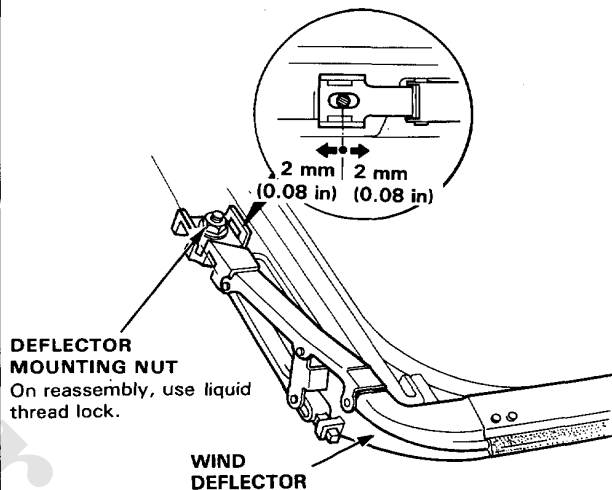

DEFLECTOR MOUNTING NUT
On reassembly, use liquid thread lock.

3. Adjust the deflector forward or backward so the edge of its seal touches the roof panel evenly. The deflector seal should touch the roof panel across entire front edge.

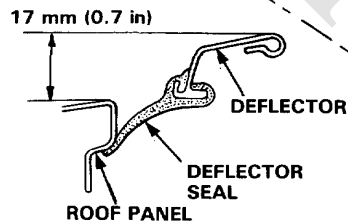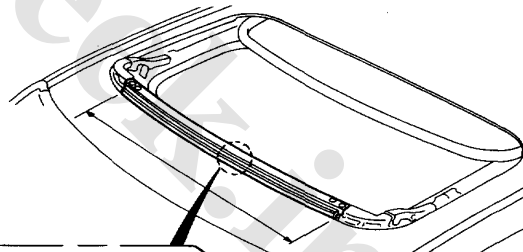

NOTE: The height of the deflector arm when open cannot be adjusted. If damaged or deformed, replace it (page 14-37).


Sunroof

Glass and Sunshade Replacement

1. Open the glass fully.
2. To remove the glass, first remove:

- Rail holder cover
- Rail cover
- Sunshade rail holder
- Wind deflector
- Link stopper
- Lift-up guide


3. Lift the sunshade rail with guide rail and insert a spacer such as a wooden block in order to avoid interference between the sunshade rail and bolt when removing the sunshade.

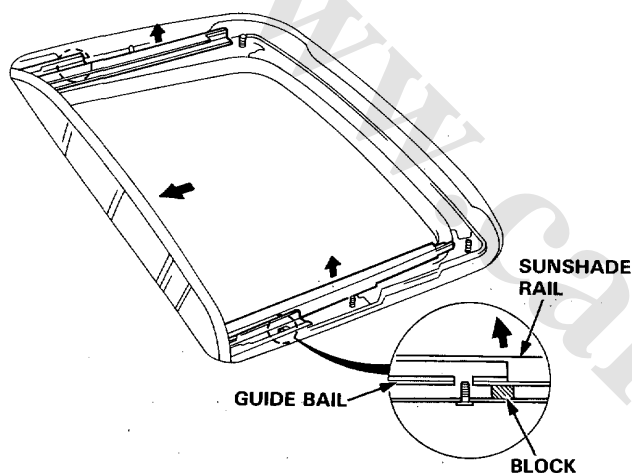


NOTE: The block must be taller than the bolt.

4. Slide the glass forward by sunroof wrench, then remove the front sliders from sunshade rails.


NOTE: Do not scratch the roof panel with the front sliders.

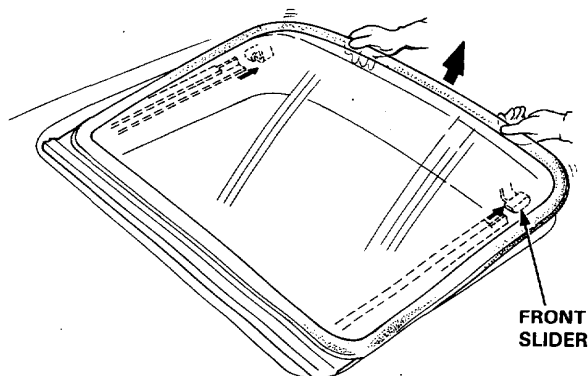

5. Remove the link slider from the inner cable slider by lifting the glass, then remove the glass.

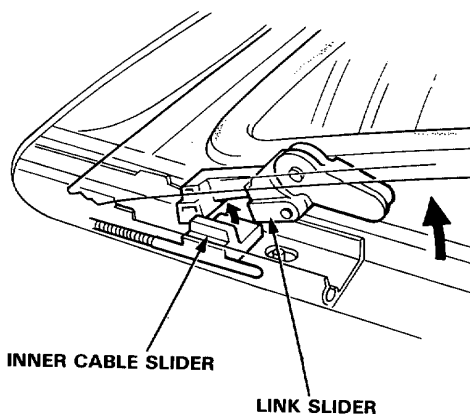

6. Slide the sunshade forward, then remove the sunshade.

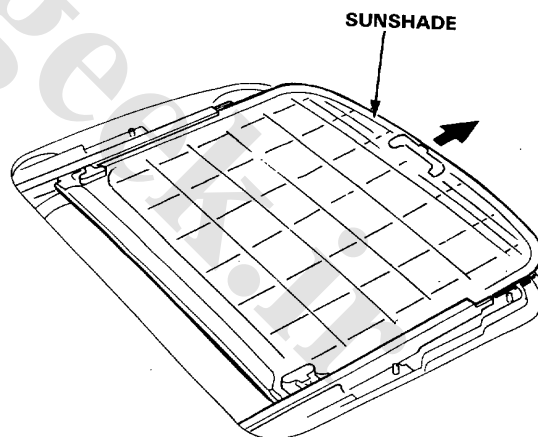

7. Install the glass and sunshade in the reverse order of removal

NOTE:

- Take care not pinch the drain seal in the sunshade rail.
- Check for water and air leaks.




Motor, Drain Tube and Frame Replacement

CAUTION: Be careful not to damage the seats, dashboard and other interior trim.


1. Remove the glass (page 14-34) and the headliner (page 14-39).
2. Disconnect the motor wire harness. Remove the clips securing the dome light wire harness.
3. Remove the sunroof motor by removing the two bolts and three nuts.
4. Disconnect the drain tubes.
5. Remove the ten mounting bolts from the frame, and remove the frame from the car.

NOTE: You may require assistance when removing the frame.

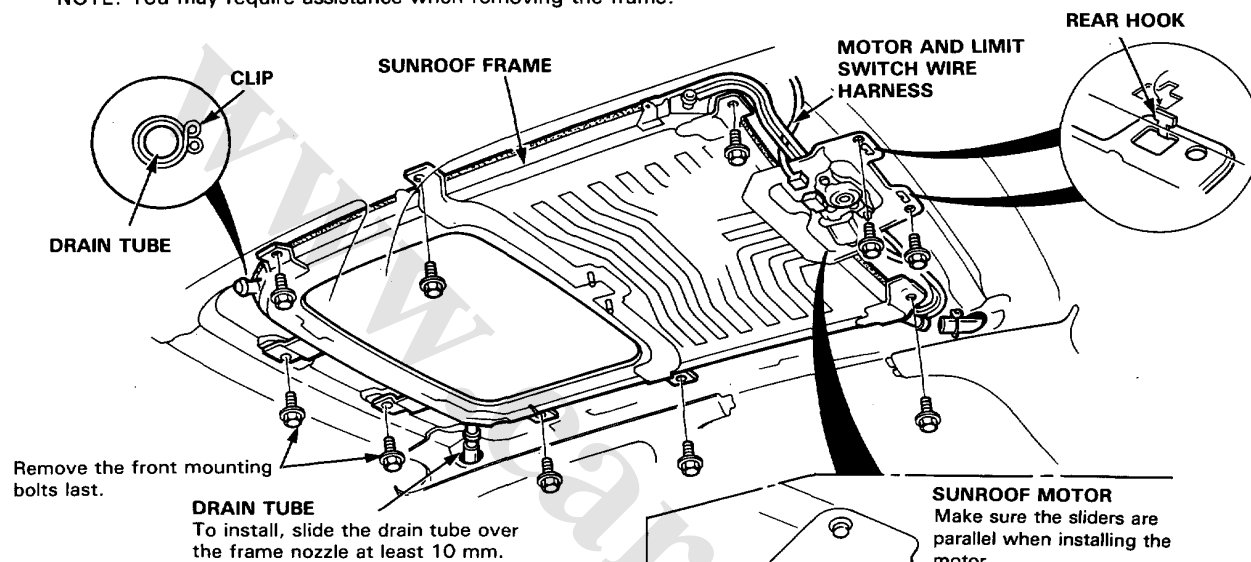

6. Pull the drain tubes out the front and rear pillars.

NOTE: Before pulling out the drain tube, tie a string to the end of it so it can be reinstalled.

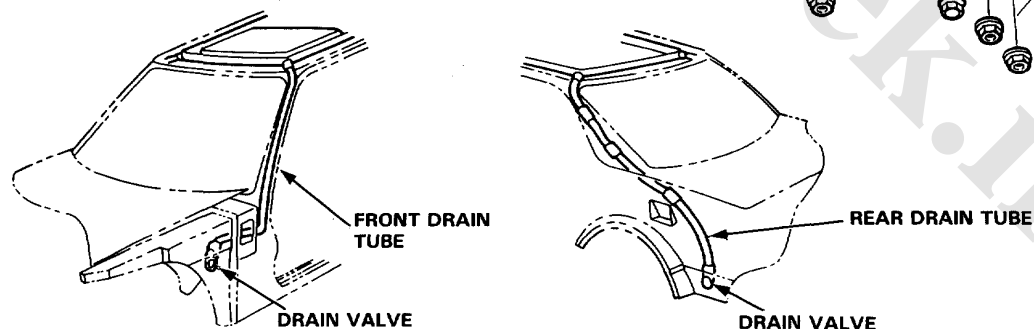

7. To install, insert the frame's rear hooks into the body holes, then install parts in the reverse order of removal.

NOTE:


- Insert over 10 mm of the drain tube onto the nozzle.
- Install the tube clips with the ends facing the side to ease installation of the headliner.
- Check the drain seal assembly.
- Check for water and air leaks.

Sunroof

Guide Rails/Cable Replacement

1. With sunroof out of the car, remove the sunroof motor from the frame (page 14-35).
2. Remove the guide rail mounting nuts and lift off the guide rails, then remove the cables with sliders attached.
3. If necessary, remove the sunshade rail and frame seal from the sunroof frame.

NOTE: Take care not to bend the cable pipes and guide rails.

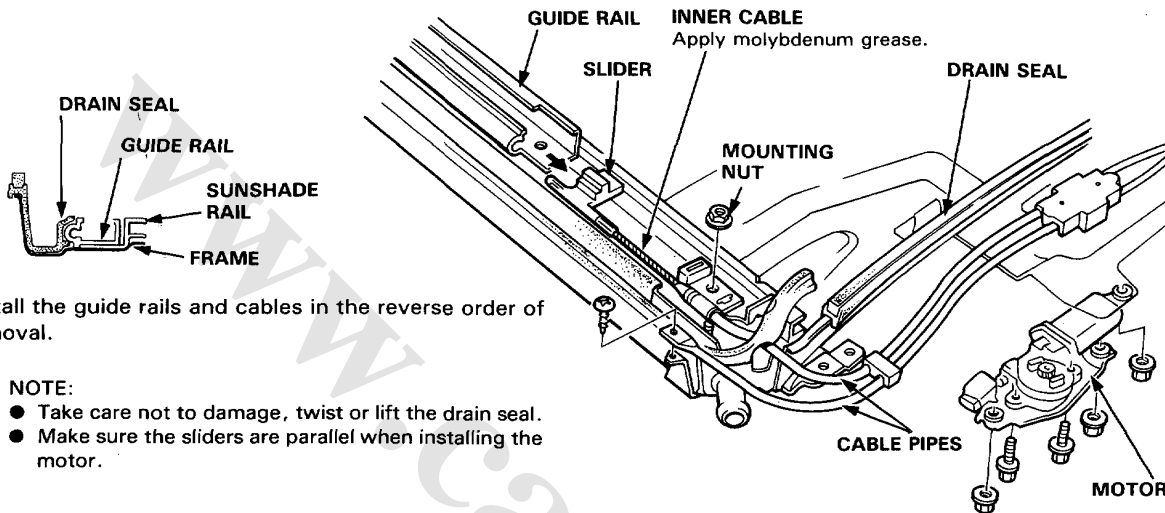



Install the guide rails and cables in the reverse order of removal.

NOTE:

- Take care not to damage, twist or lift the drain seal.
- Make sure the sliders are parallel when installing the motor.

Link Slider/Lift-up Link Disassembly

1. Remove the sliding glass (page 14-34).
2. Pull the front slider from the front stay.
3. Remove the link lifter, then remove the E-clip.
4. Remove the lift-up link from the rear stay. Strike the link shaft out, then separate the lift-up link and link slider.

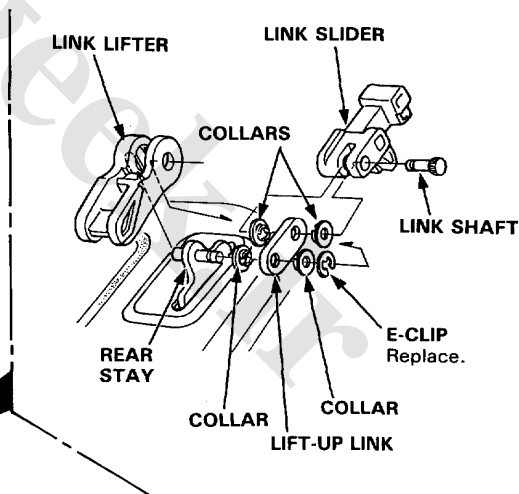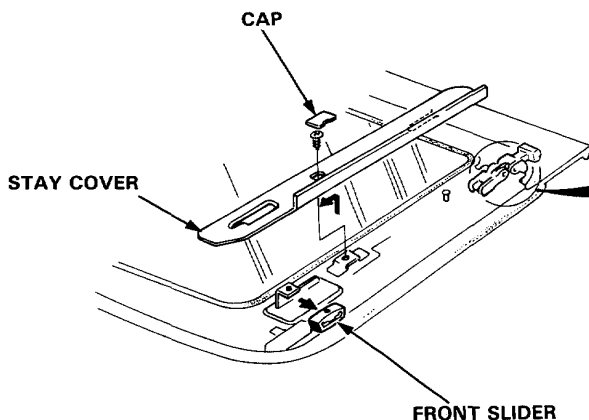

5. Assemble the slider and lift-up link in the reverse order of removal.

NOTE:

- Damaged parts should be replaced.
- Apply the grease to the sliding portion.




Closing Drag Check (Motor Removed)

Before installing the sunroof motor, measure effort required to open sliding glass using a spring scale as shown.

CAUTION: When using the spring scale, protect the leading edge of the sunroof with a shop towel.

If load is over 98 N (10 kg, 22 lb), check side clearance and glass height adjustment (page 14-33).

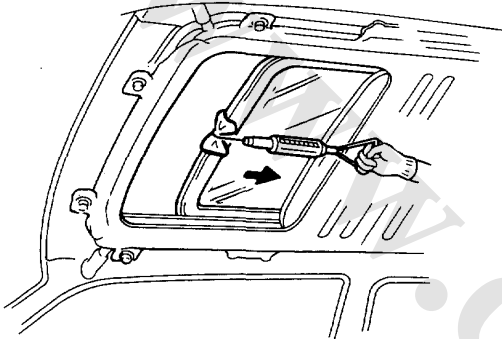


Closing Force Check (Motor Installed)

1. After installing all removed parts, have a helper hold the switch to close the sliding glass while you measure force required to stop it. Attach spring scale as shown. Read force as soon as glass stops moving, then immediately release the switch and spring scale.

CAUTION: When using the spring scale, protect the leading edge of the sunroof with a shop towel.

Closing Force: 196–245 N
(20–30 kg, 44–55 lb)

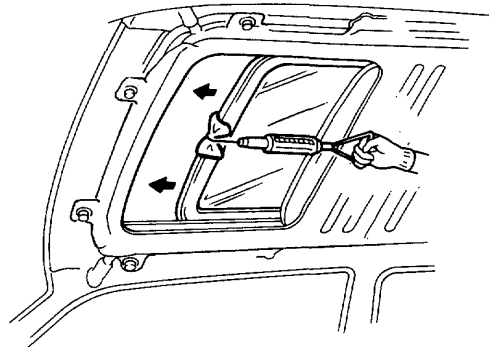

Lift-Up Guide/Wind Deflector Replacement

Mounting nuts torque: 9 N·m (0.9 kg·m, 6.5 lb-ft)

WIND DEFLECTOR

Check that the deflector seal touches the roof panel.

RAIL COVER

RAIL HOLDER COVER


DEFLECTOR WASHER

SUNSHADE RAIL HOLDER

LINK STOPPER

LIFT-UP GUIDE


Check the side-to-side location.

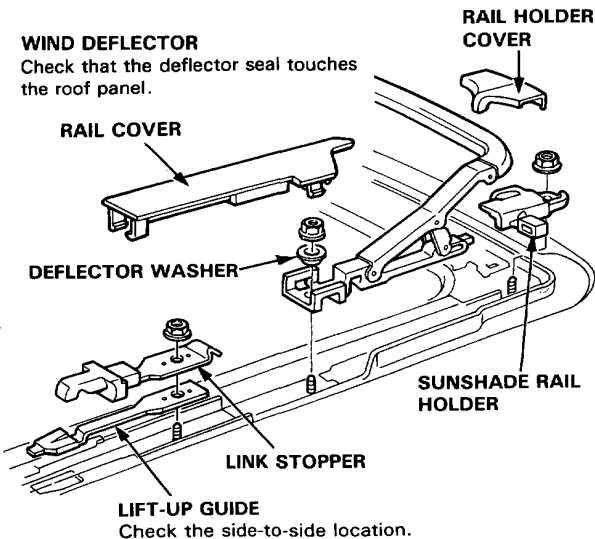

2. If force is not within specification, install a new lockwasher, adjust the tension by turning the sunroof motor clutch adjusting nut, and bend the lockwasher against the adjusting nut.

LOCK-WASHER
Replace.

ADJUSTING NUT

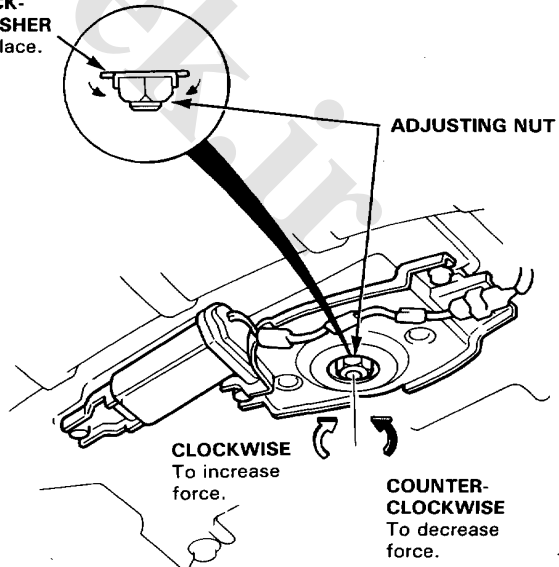

CLOCKWISE
To increase force.

COUNTER-CLOCKWISE
To decrease force.

Trunk Lid

Replacement/Adjustment

1. Pull the harness and trunk lid opener cable out of the trunk lid.


NOTE: Before pulling out the wire harness, tie a string to the end of it so you can pull it back in when the trunk lid is reinstalled.

2. Remove the trunk lid hinge bolts, then lift off the lid.
3. Remove the torsion bar using an assembly tool.
4. Remove the rear shelf.
5. Remove the hinge bracket mounting bolts, then remove the hinges from the trunk.
6. Assemble in the reverse order.

TRUNK LID EDGE CUSHION

Turn as necessary, to make the trunk lid fit flush with the body at front and side edges.

NOTE: Before tightening the hinge bolts, check the adjustments shown below:

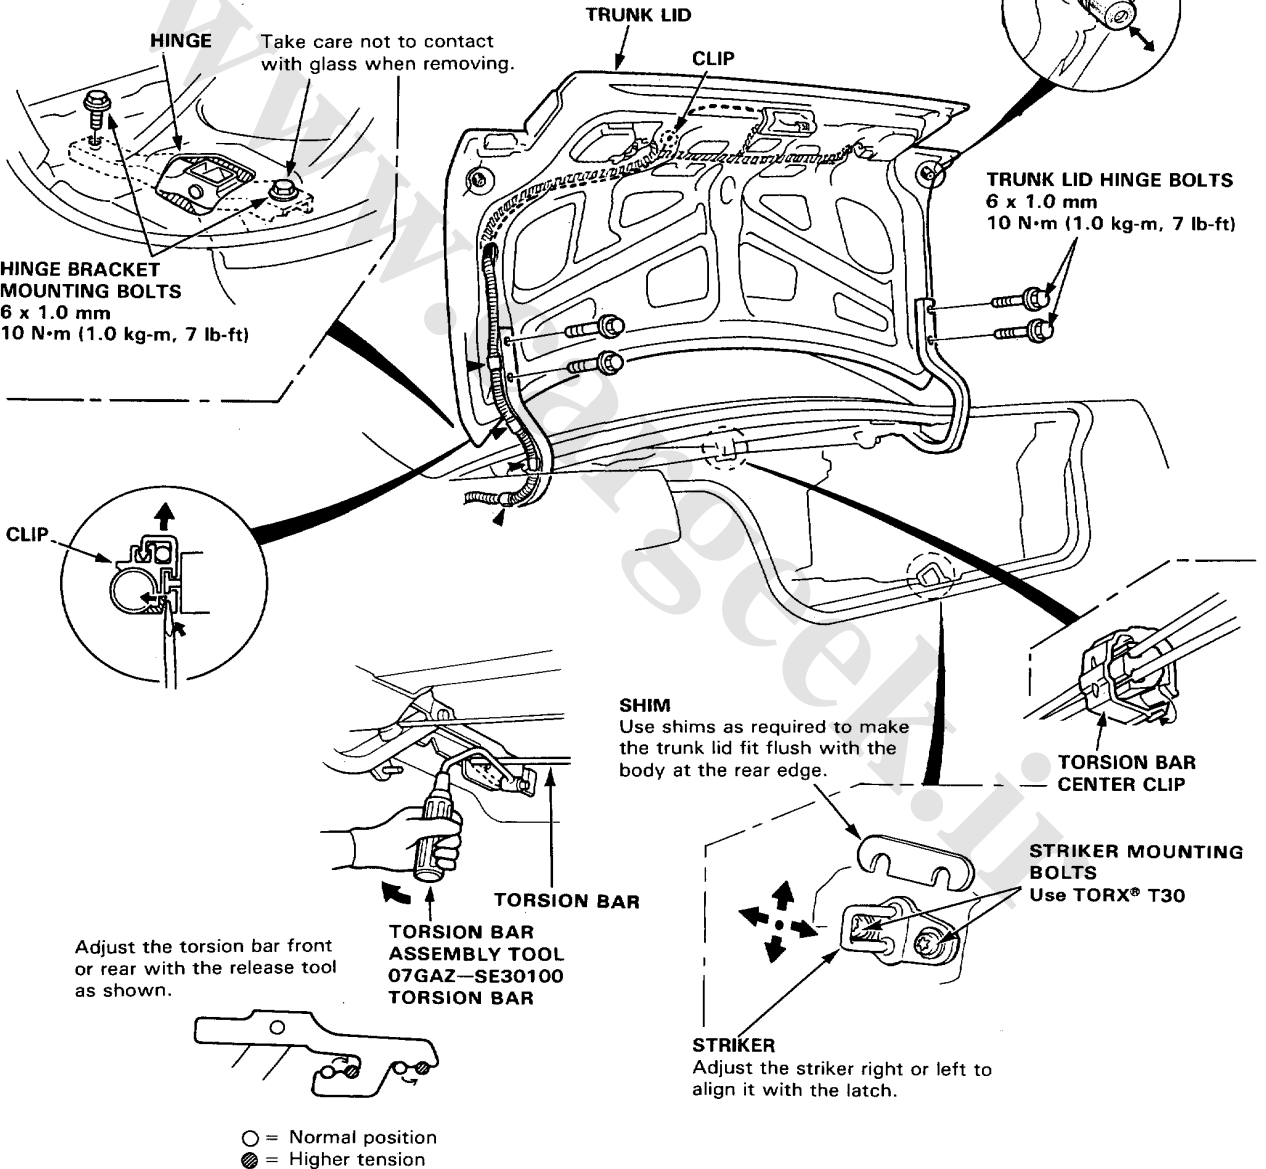

Wiring Diagrams

Index

Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		



Windshield, Rear Window

Index

(): Quantity of part used.


* SIDE CLIP Color:

- C: Gray
- D: White
- E: Red

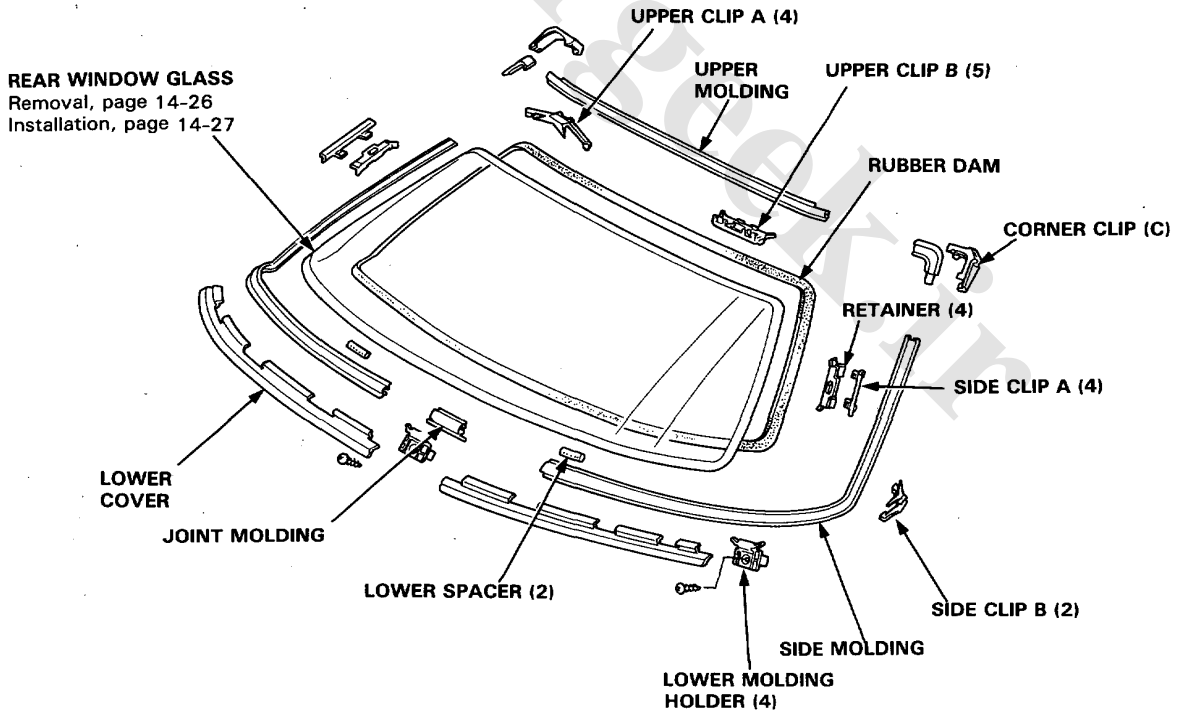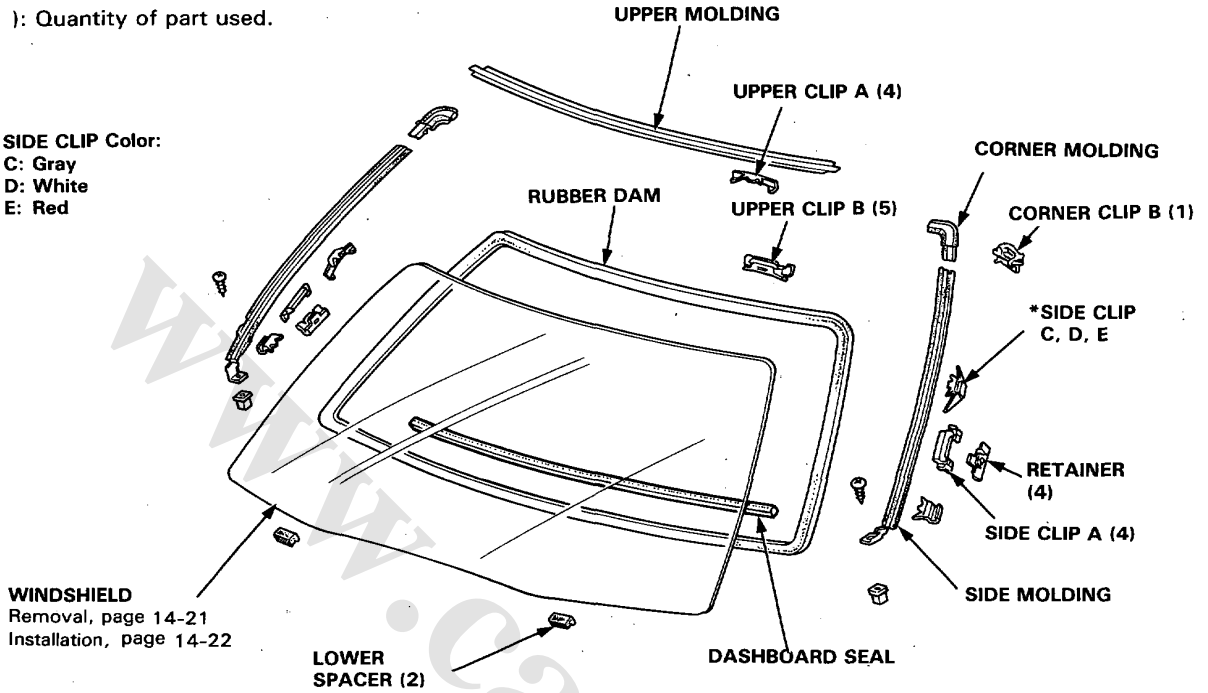



Installation

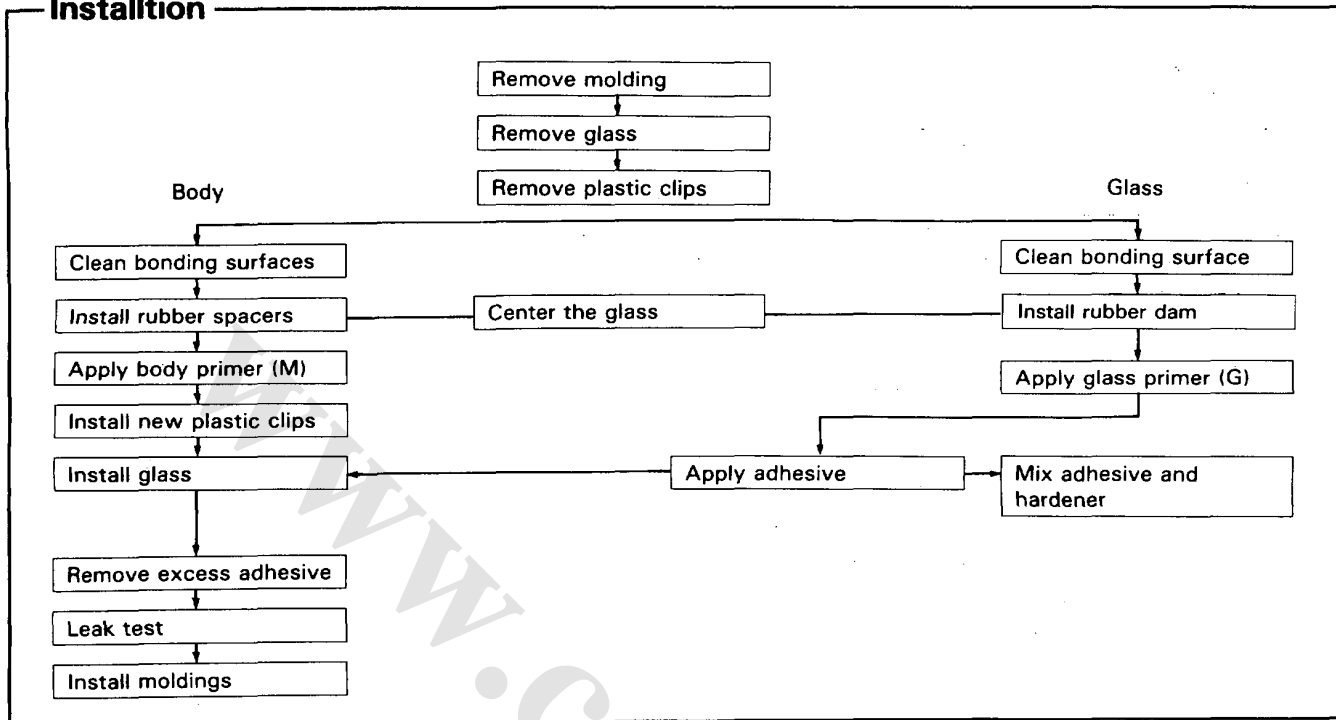

Parts

Part Number	Contents	Comment
Adhesive kit – Low temperature 08718–99960 High temperature 08718–99961	Adhesive sealant (500 g) Hardener (75 g) Glass primer G (20 g) Body primer M (20 g) Piano wire (0.6φ x 1 m (3f)) Gauze Cartridge Sponge	For glass primer (G) For applying primers

Tools


Tool/Material	Remarks
Glass or steel plate Putty knife Caulking gun Suction cups	To mix adhesive and hardener on To mix adhesive and remove excess To apply bead of adhesive to windshield To install windshield
Knife Awl Two wood sticks Toluene or alcohol	To scrape bonding surface around window opening To make hole through existing adhesive for piano wire To hold piano wire To clean bonding surfaces

Windshield, Rear Window

Workable Time

Adhesive workable time varies widely according to temperature, so choose the correct adhesive kit for the temperature range you will be working in. After mixing and applying adhesive, you should install the windshield within the time shown on the chart.

For example, when the ambient temperature is 25°C (77°F), the glass should be installed within 45 minutes using the high temperature type adhesive. Kit part numbers and contents are listed on the page before.

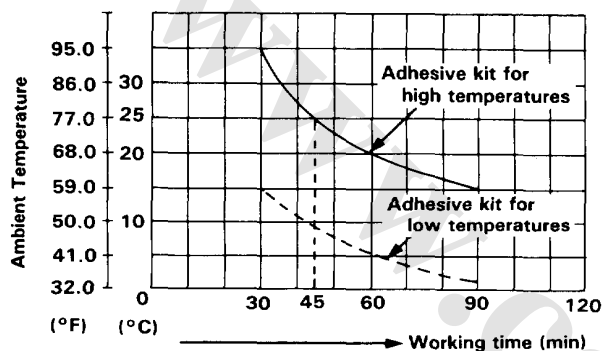


Notes

- Both kits have two types of adhesive primer: one for the body (metal), and one for glass.
- Always use new genuine Honda adhesive, or equivalent.
- Do not use the adhesive if 6 months have elapsed since date of manufacture.
- Store adhesive in a cool, dry place.
- Open only immediately before you are going to use it.

Hardening Time

Hardening time can be shortened by heating with infrared light.

For example, the adhesive will start to harden within 270 minutes mixing at 20°C (63°F). If however, it is heated to 35°C (95°F), it will start to harden within 90 minutes.

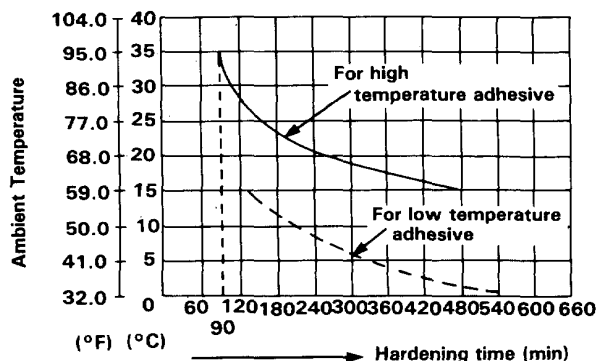

Broken Glass Removal

Remove as much broken glass as possible with a vacuum cleaner. Blow out the glass in the heater and behind the dashboard with low pressure compressed air:

WARNING Wear eye protection while using the air gun.

1. Set the temperature control lever to COLD.
2. Push the HEAT button on the function panel.
3. Make sure the recirculation button is out (OFF).
4. Blow compressed air through the defroster center vent outlet.
5. Remove the blower duct, and remove any glass from the air mix chamber.
6. Remove the any glass from the top of the vent/defrost door.
7. Remove any glass from top and bottom of carpet and seats with a vacuum cleaner.

NOTE: It is recommended to remove the seats to shake off any glass (page 14-40).




Windshield

Removal

CAUTION:

- Wear gloves to remove and install the glass.
- Use seat covers to avoid damaging surface.


1. To remove the windshield, first remove the:
 - Rearview mirror (page 14-49).
 - Sun visors and holders.
 - Front pillar trim (page 14-38).
 - Front wiper and air scoop.
2. Detach the clip A from the retainer, then remove the side molding with corner molding as shown.

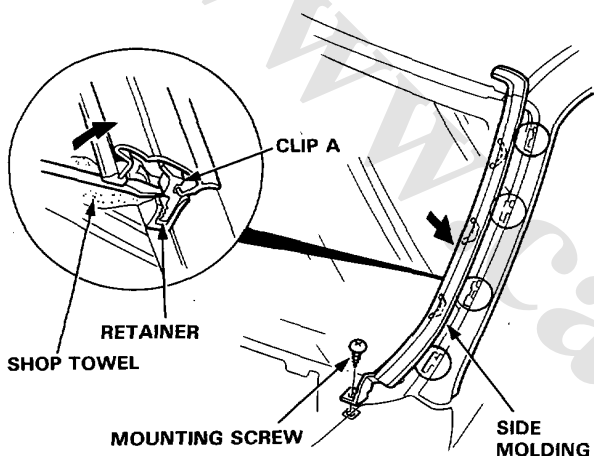


NOTE: You will need a molding clip release tool to remove some moldings. If necessary, make one that has the dimensions shown.

Molding Clip Release Tool

Thickness: 2 mm (0.08 in.), pointed at the end.

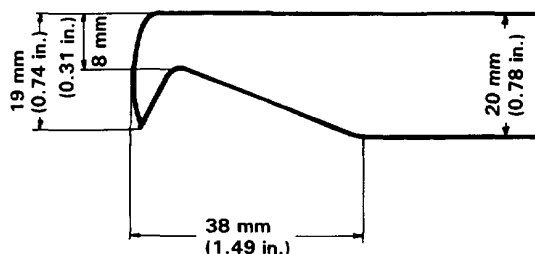


3. Raise the upper molding slightly away from the windshield at the locations where the molding clips are used, then fit the end of the molding clip release tool at each clip, and pull it toward you until the clip is clear of the molding.

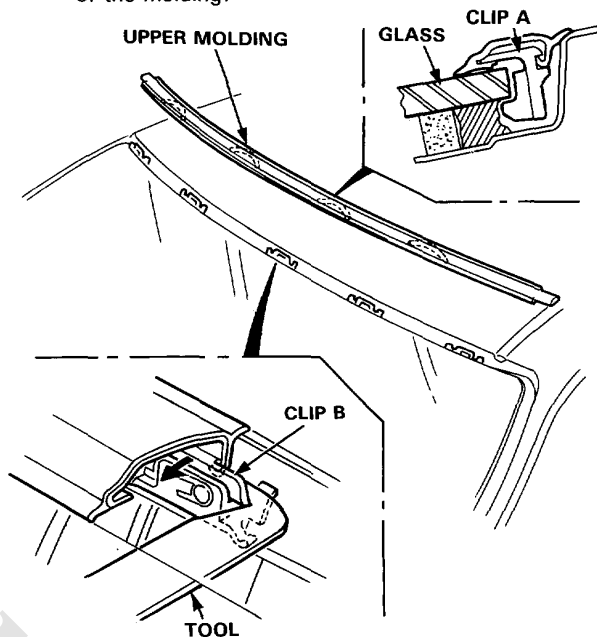

4. Remove the other clips and retainers from the body.
5. Lower the front of the headliner.

CAUTION: Take care not to bend the headliner excessively.

6. Apply protective tape along the edge of the dashboard and body next to the glass as shown.

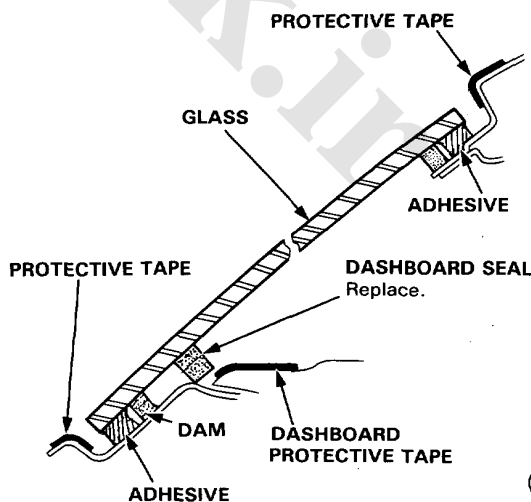


(cont'd)

Windshield


Removal (cont'd)

7. Using an awl, make a hole through the windshield adhesive from inside the car. Push piano wire through the hole and wrap each end around a piece of wood.

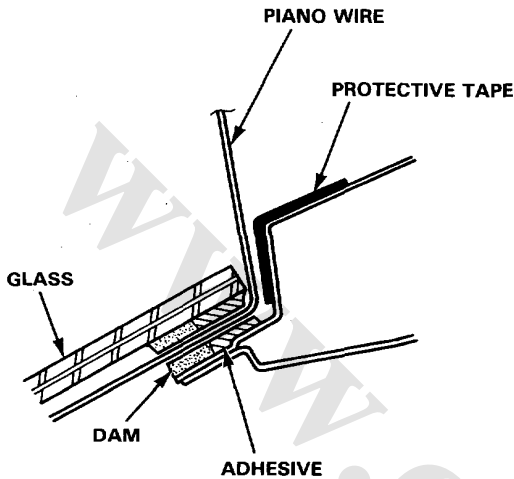

8. With a helper on the outside, pull the wire back and forth in a sawing motion and carefully cut through the adhesive around the entire windshield.

CAUTION: Hold the piano wire as close to the glass as possible to prevent damage to the body and dashboard.

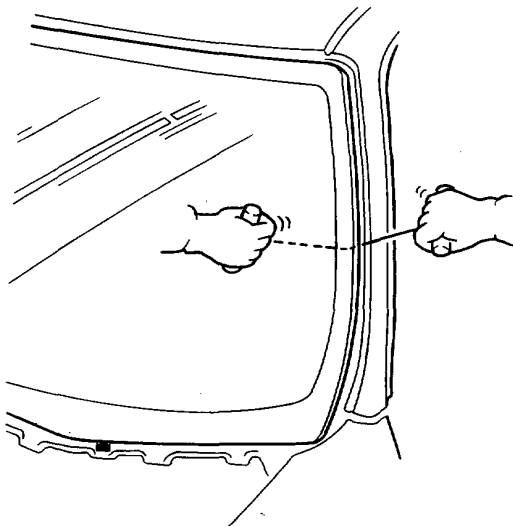

9. Cut the rubber spacers away from the body with a knife; they are cemented in place.

NOTE: Replace the rubber spacers with new ones whenever the windshield has been removed.

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire windshield flange.

NOTE:

- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove all traces of the rubber spacer material from the body.
- Mask off surrounding surfaces before painting.


2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. If the old glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.


NOTE: Make sure the bonding surface is kept free of water, oil and grease.

CAUTION: Avoid setting the glass on its edges; small chips may later develop into cracks.

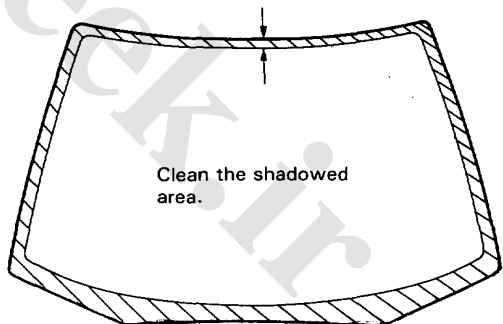




4. Install the molding clips and retainers as shown.
5. Peel the backing off each spacer, then install the spacers by pressing them firmly into place at the locations shown.

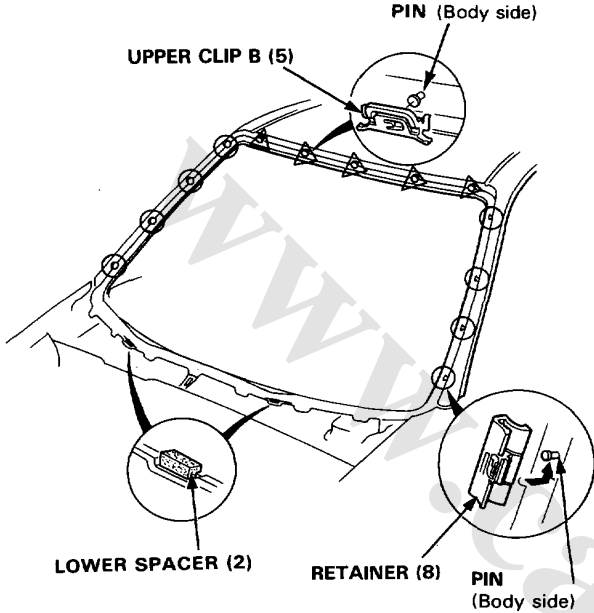


6. Set the windshield upright on the lower spacers, then center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.

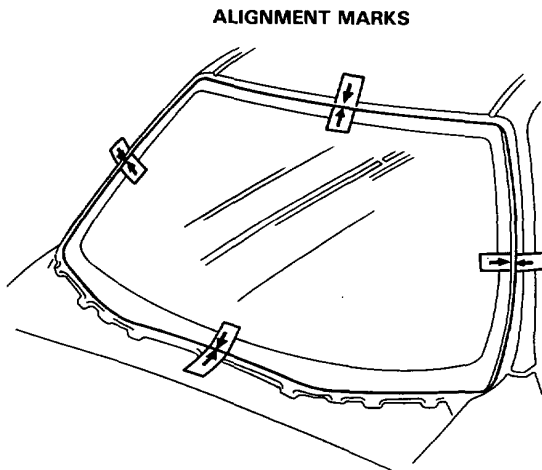

7. Glue the dashboard seal and rubber dam to the inside face of the windshield as shown to contain the adhesive during installation.

NOTE: Be careful not to touch the glass where adhesive will be applied.

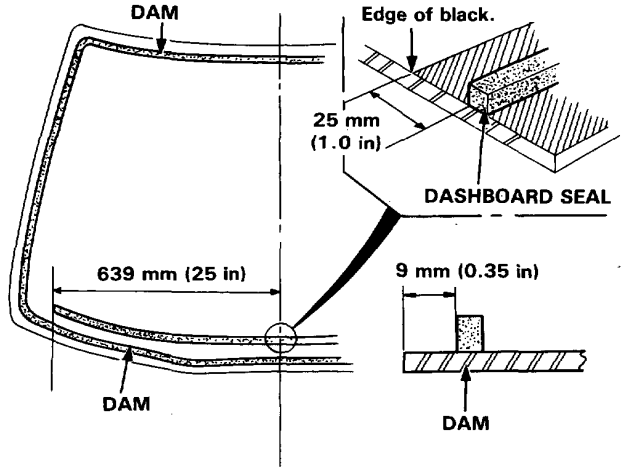


8. With a sponge, apply a light coat of glass primer around the edge of the glass as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:

- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the windshield is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

▨ : Apply glass primer here.

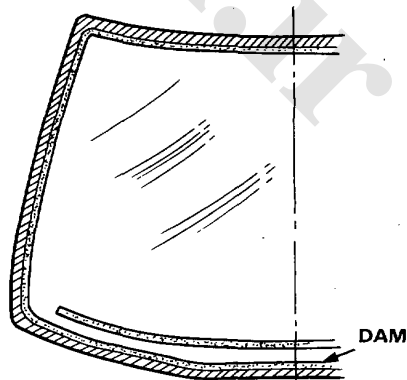

(cont'd)

Windshield


Installation (cont'd)

- With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange. The glass should be installed 10 minutes after you apply the primer.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.
- Mask off the dashboard before painting the flange.

 : Apply body primer here

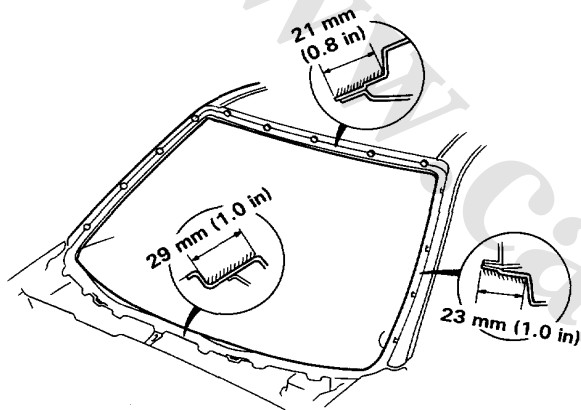


- Thoroughly mix all the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:

- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.


- Before filling a cartridge, cut off the end of the nozzle at the angle shown.

Cut off nozzle end as shown.

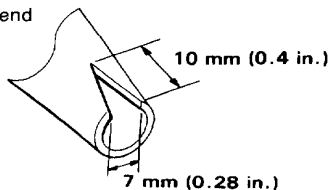

- Pack adhesive into the cartridge without air pockets to ensure continuous delivery. Put the cartridge in a caulking gun and run a bead of adhesive around the edge of the glass as shown.


NOTE: Apply the adhesive within 30 minutes after applying the glass primer.

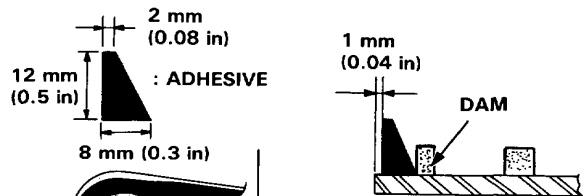

Make a slightly thicker bead at each corner.

- Use suction cups to hold the glass over the opening, align it with the marks made in step 6 and set it down on the adhesive. Lightly push on the glass until its edge is fully seated on the adhesive all the way around.

NOTE: Do not close or open the doors until adhesive is dry.

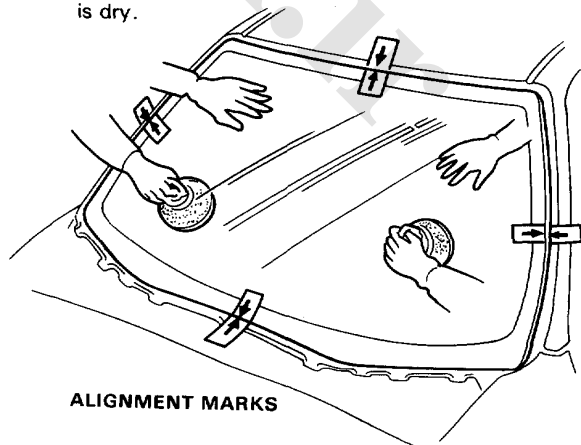





14. Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Wipe with a soft shop towel dampened with alcohol to remove adhesive from a painted surface or glass.


15. Install the clips on the side molding and upper molding.

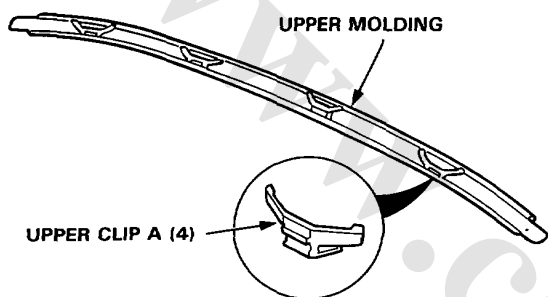


NOTE: Check the proper application of side clips C, D, E.

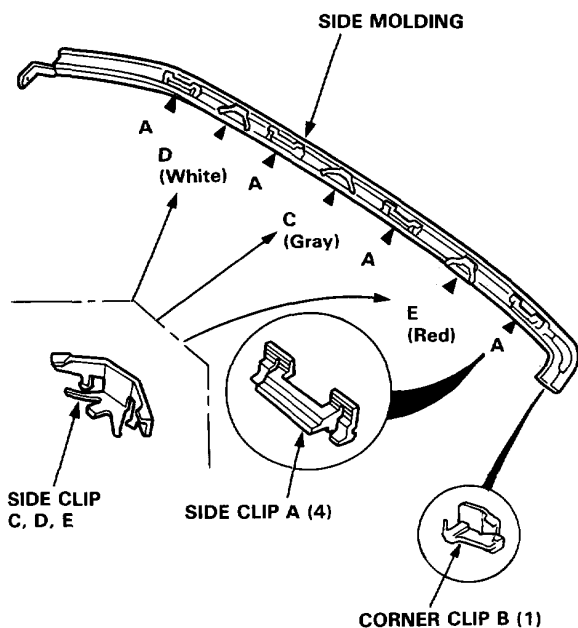

16. Install the upper molding.

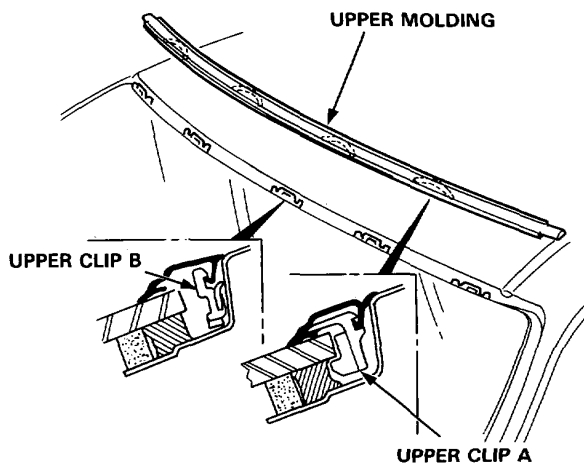

17. Install the front side molding.

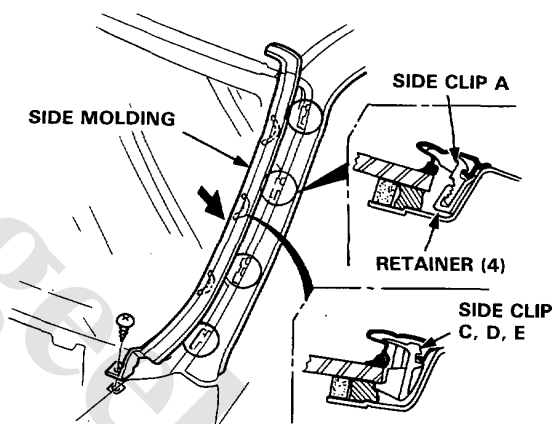

18. After the adhesive is dry, spray water over the glass and check for leaks. Mark leaking areas and let the glass dry, then seal with sealant.

NOTE: Let the car stand for at least 4 hours after glass installation. If the car has to be used within the first 4 hours, it must be driven slowly.

19. Reassemble all removed parts.

NOTE: Install the rearview mirror rubber damper after the adhesive has dried thoroughly.

Rear Window

Removal


CAUTION:

- Wear gloves to remove and install the glass.
- Do not damage the defroster grid lines.

1. To remove the rear glass, first remove:
 - Rear shelf (page 14-38).
 - Rear pillar trim panel (page 14-38).
2. Disconnect the defroster leads, and remove their holders.

NOTE: Avoid scratching or scoring the glass with the cutter blade.


3. Remove the screws and detach the clips, then remove the side molding.

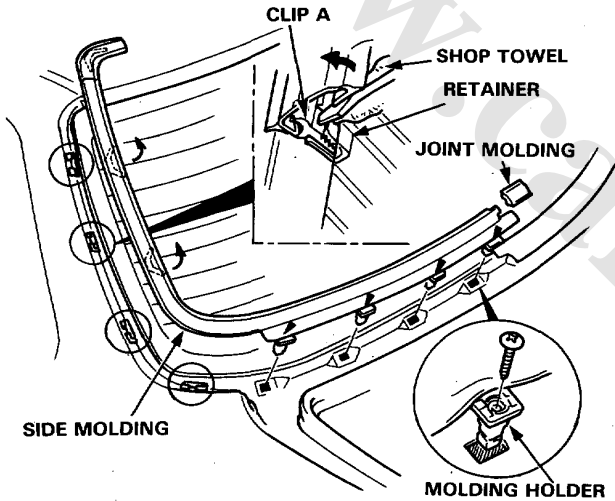


NOTE: You will need a molding clip release tool to remove some moldings. If necessary, make one that has the dimensions shown:

Molding Clip Release Tool

Thickness: 2 mm (0.08 in), pointed at the end.

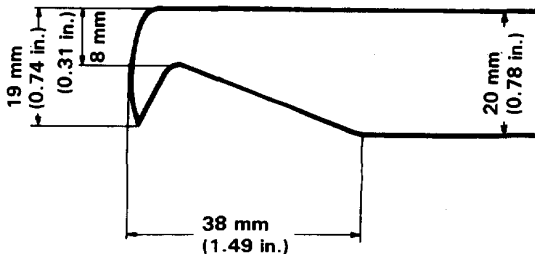


4. Detach the clips and remove the upper molding with a molding clip release tool.

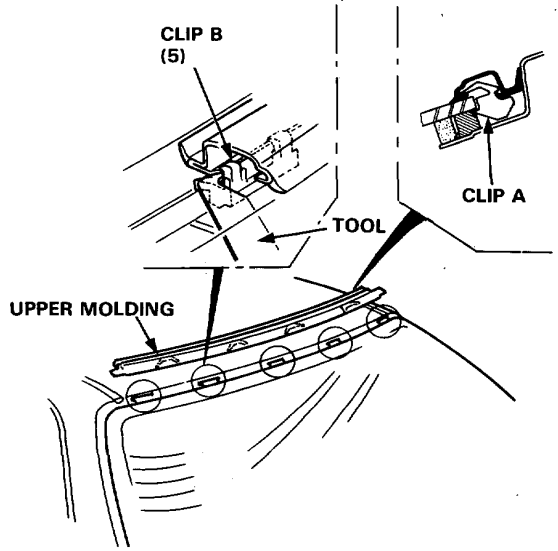

5. Remove the other clips and retainers from the body.
6. Lower the rear of the headliner.

CAUTION: Take care not to bend the headliner excessively.

7. Apply protective tape along the edge of the body next to the glass as shown.

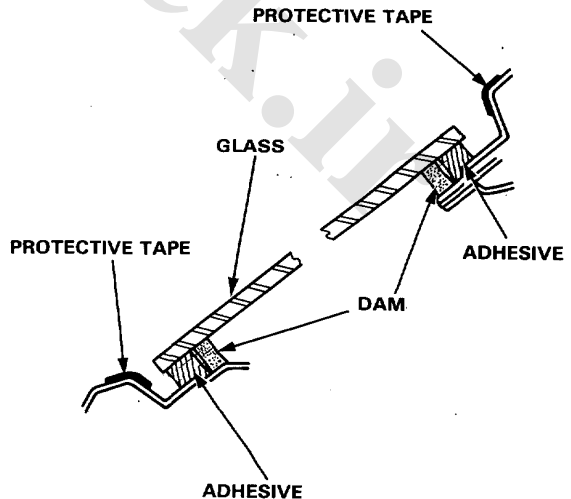

[Illustrated Index](#)

[Circuit Diagram](#)

[Heater Door Position](#)

[Troubleshooting Symptom
Chart](#)

[**Troubleshooting Flow Chart**](#)

Blower Replacement

[Replacement](#)

[Overhaul](#)

Heater Assembly

[Replacement](#)

[Overhaul](#)

[Heater Linkage Adjustment](#)

Heater Control Panel

[Replacement](#)

[Overhaul](#)

Heater Control Cables

[Heater Valve Cable](#)

[Adjustment](#)

[Air Mix Rod](#)

[Air Mix Cable Adjustment](#)

[Function Control Cable](#)

[Adjustment](#)

[Cool Vent Cable Adjustment](#)

[Adjustment](#)

[Cable Replacement](#)

Test

[Fan Switch](#)

[Relay](#)

[Recirculation Control Switch](#)

[Function Control Switch](#)

[A/C Switch](#)


[Recirculation Control Motor](#)

[Function Control Motor](#)

Heater

Illustrated Index


(Button type)

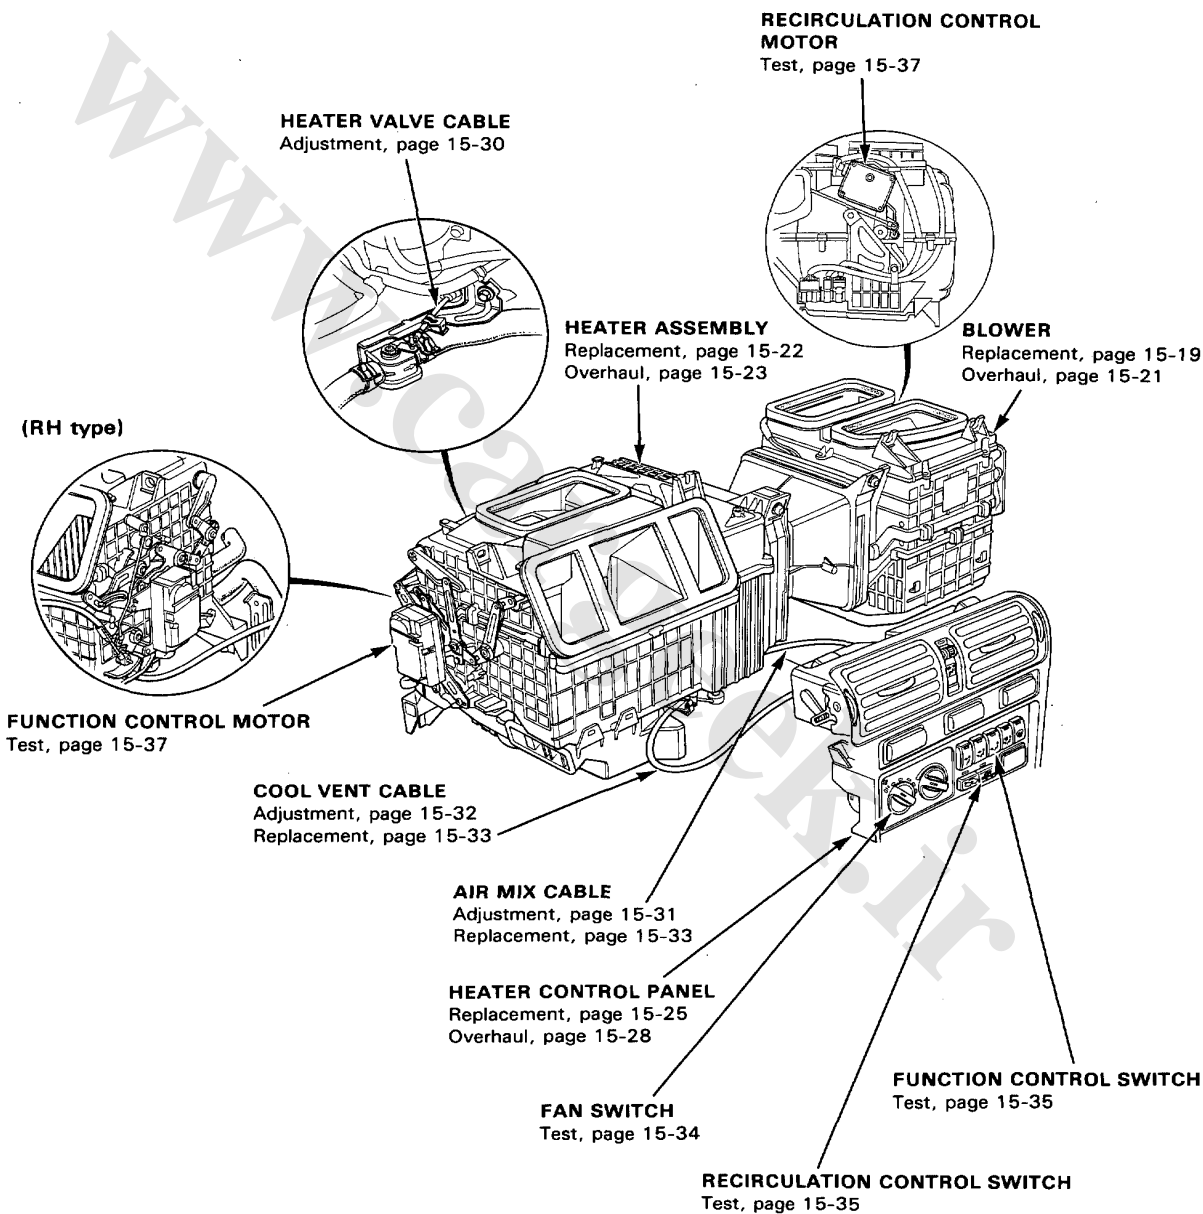

NOTE: LH Drive shown, RH Drive is similar.




(Lever type)

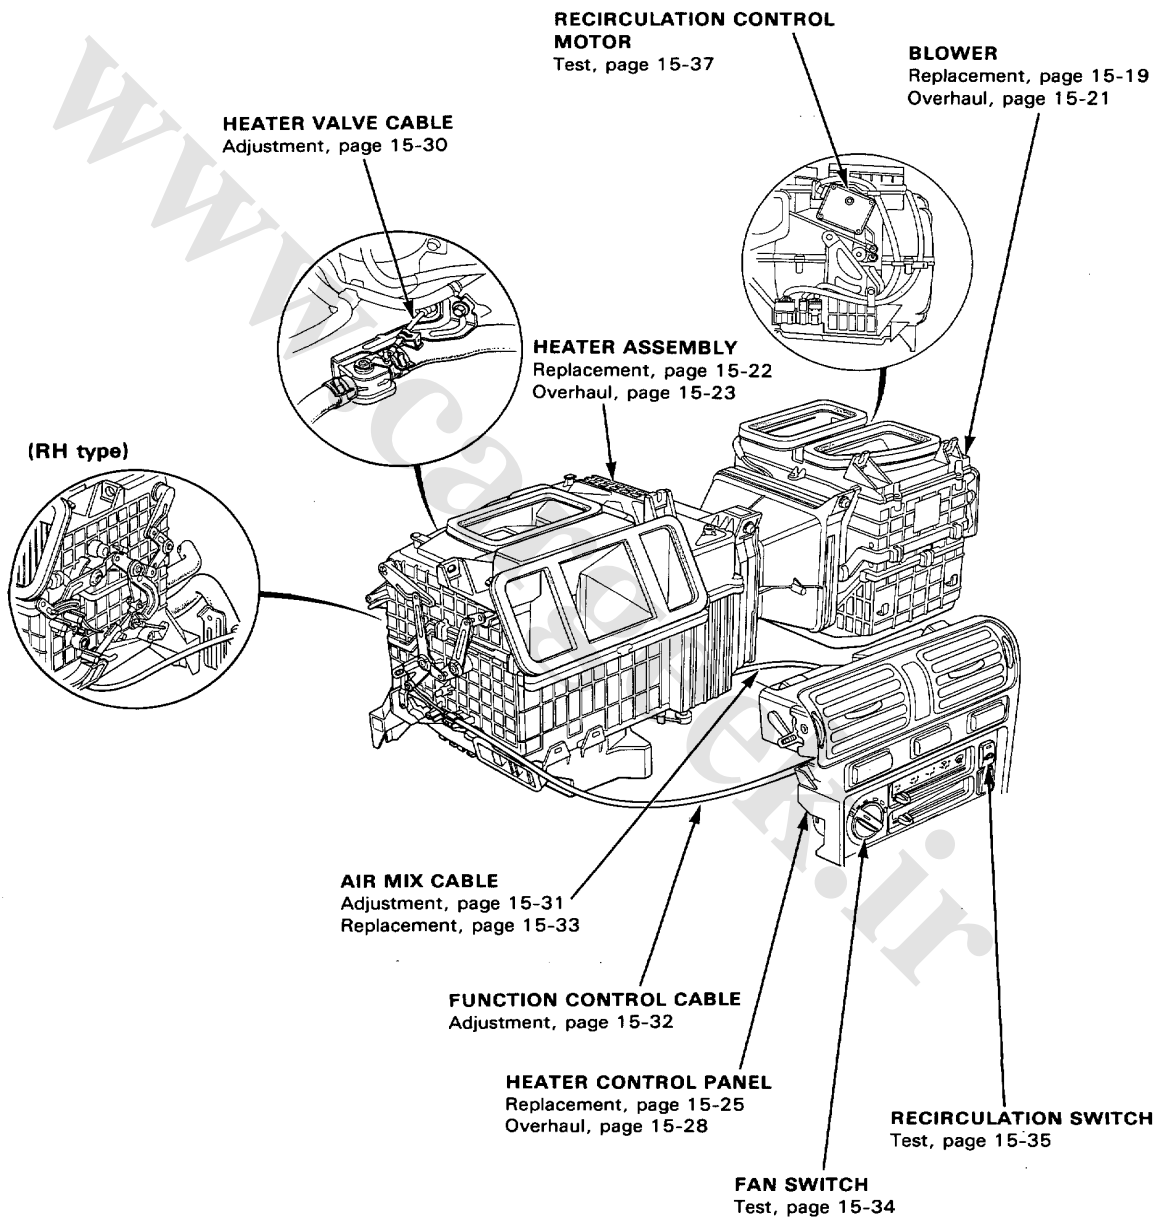


NOTE: LH Drive shown, RH Drive is similar.


Heater

Circuit Diagram

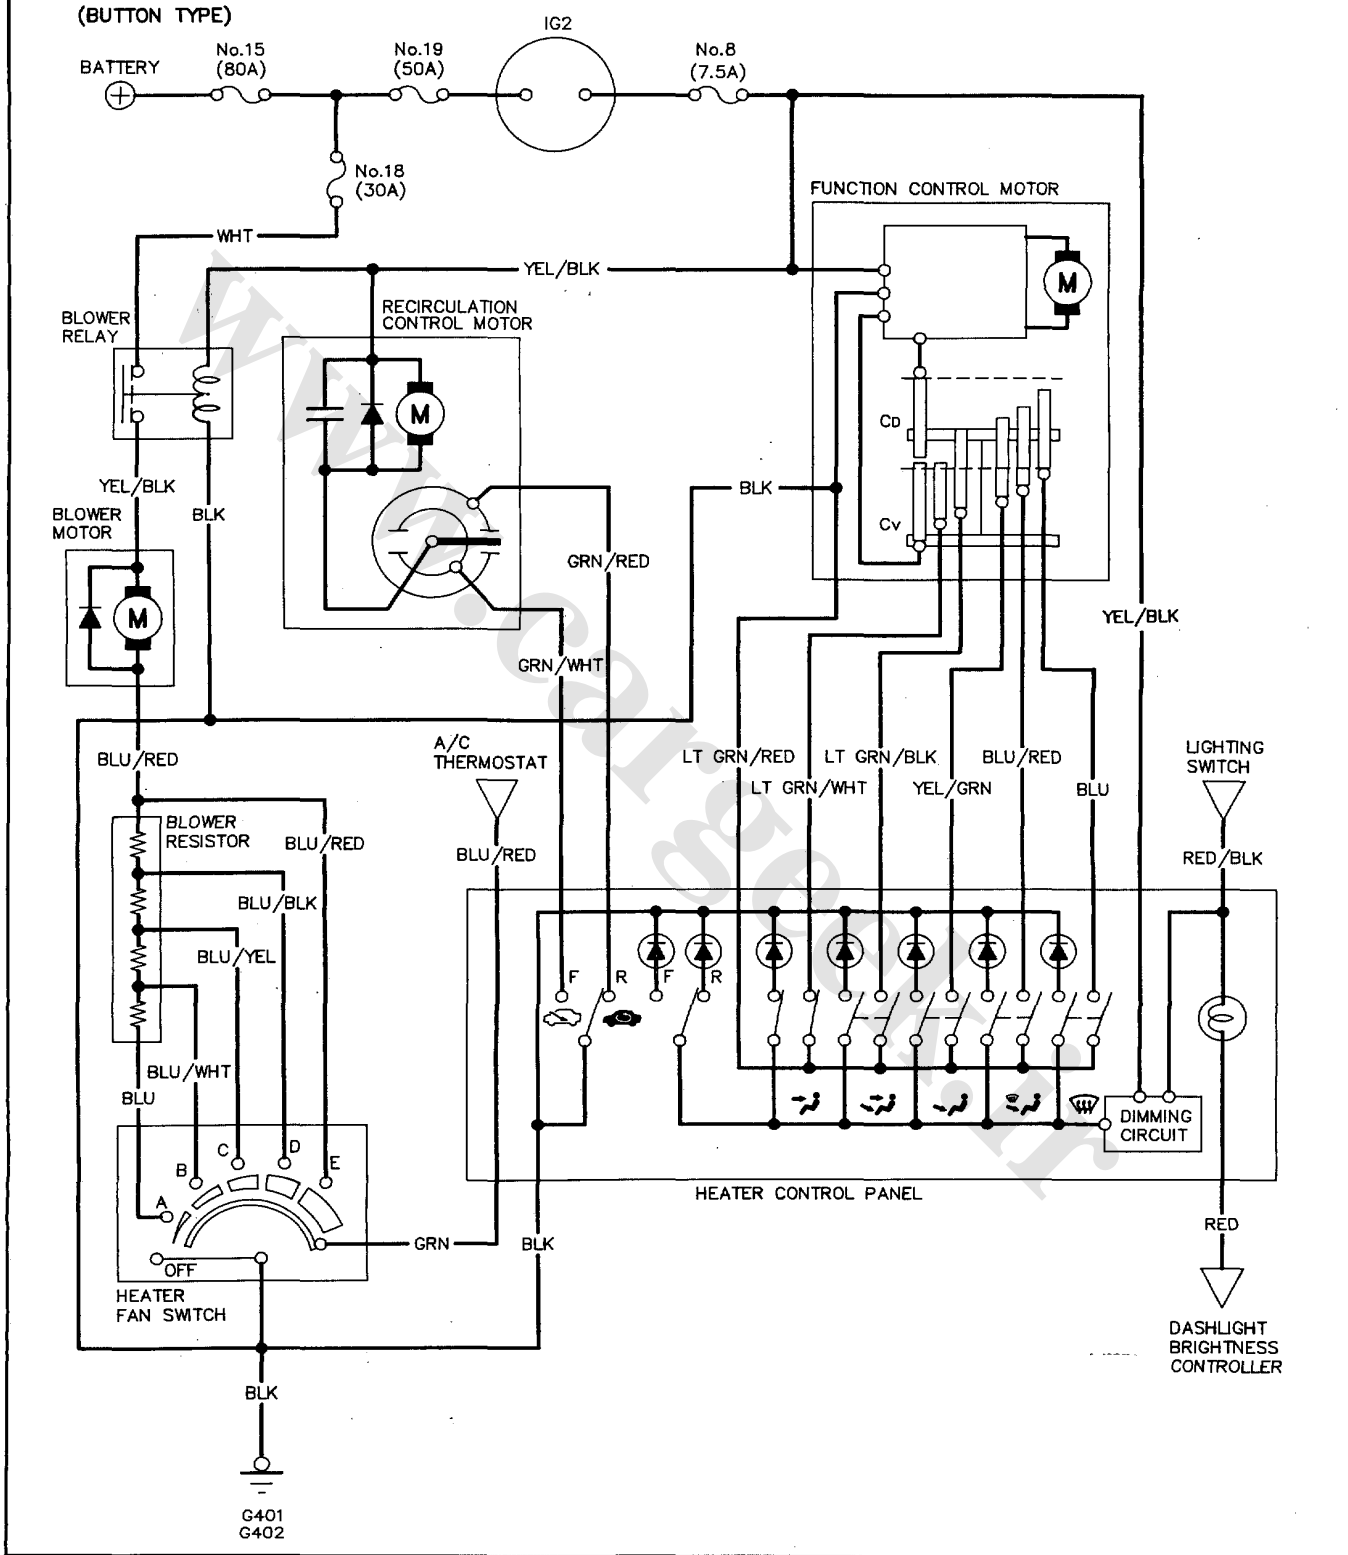



(LEVER TYPE)

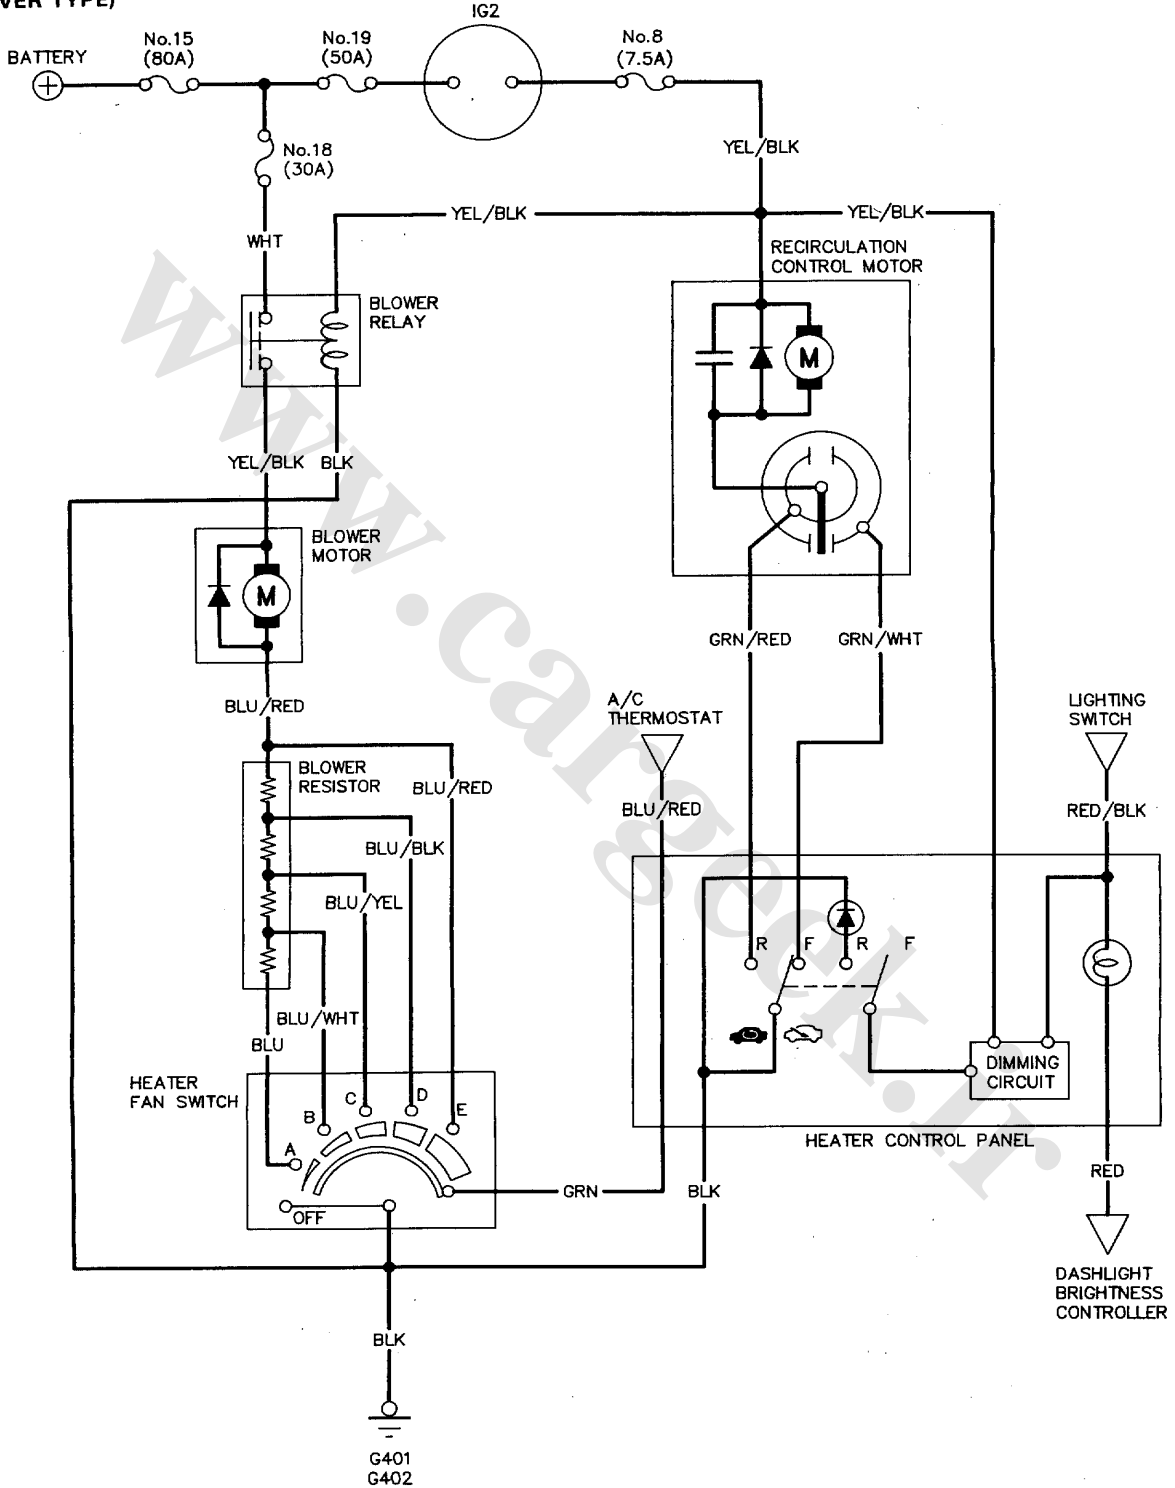



Heater Door Position

(LH Type)








- Always blowing air in every mode.








← HOT

← COLD

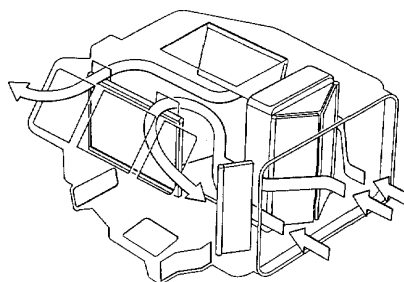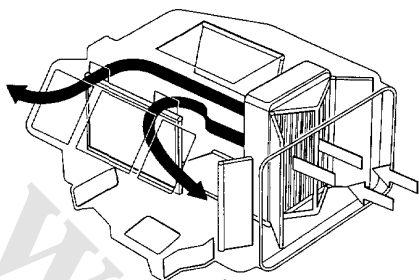

(COOL VENT)

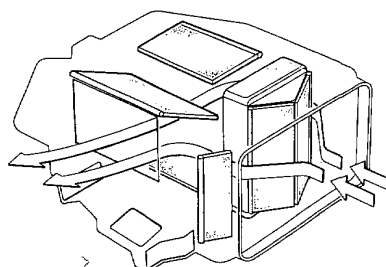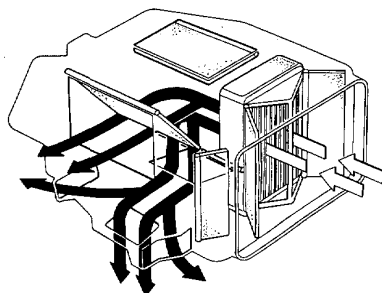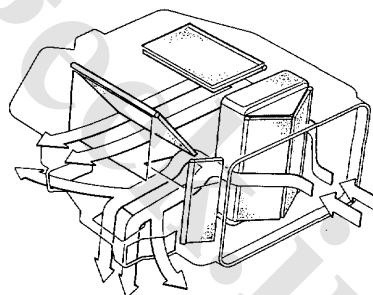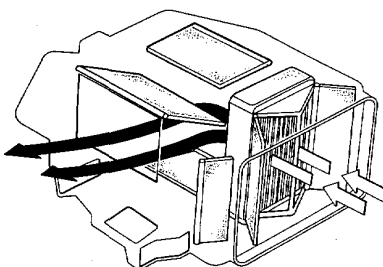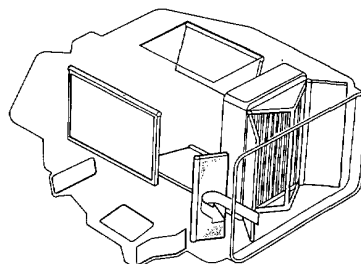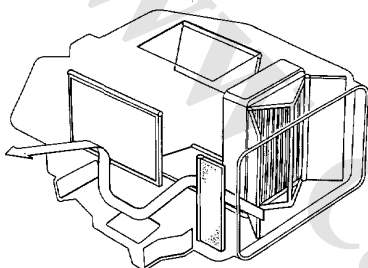

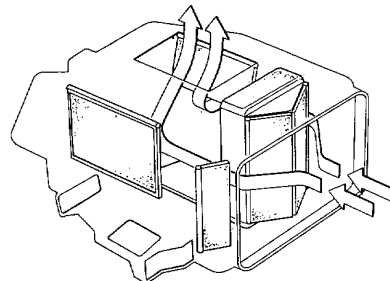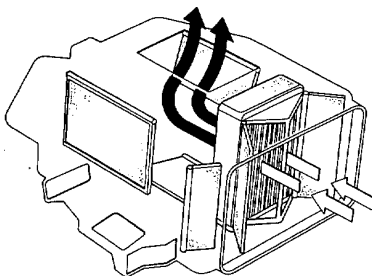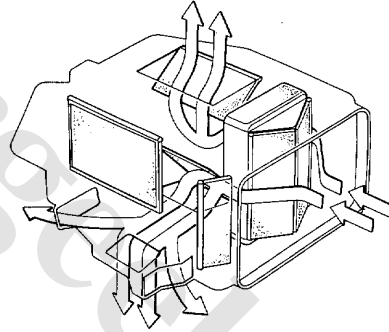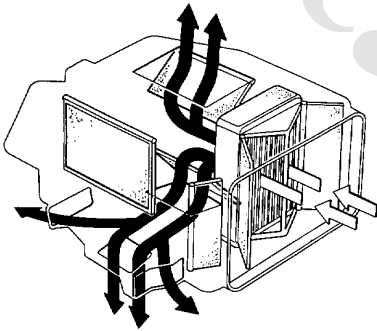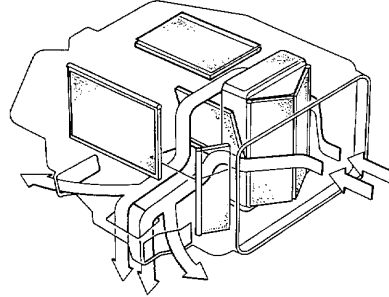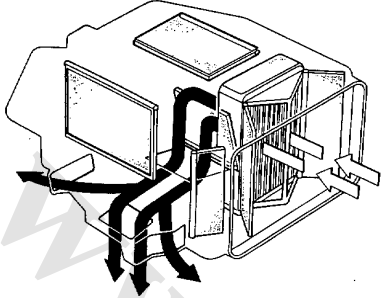

(cont'd)



Heater Door Position (cont'd)

(RH type)



- Always blowing air in every mode.

← HOT



← COLD

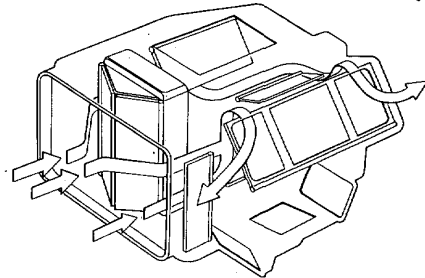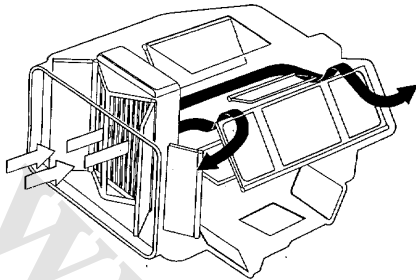



→ (COOL VENT)





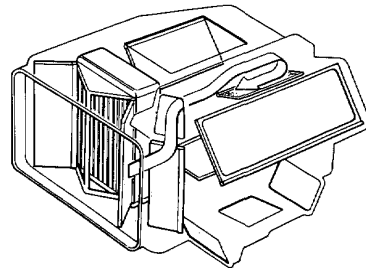
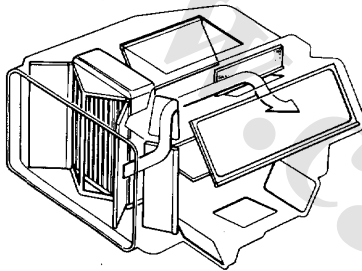


↘

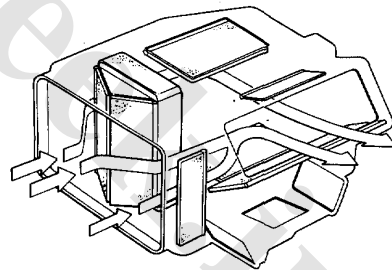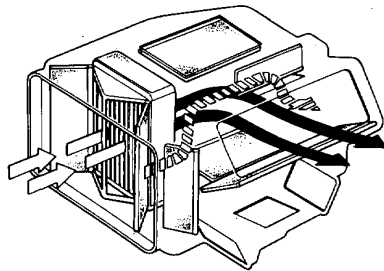

↙

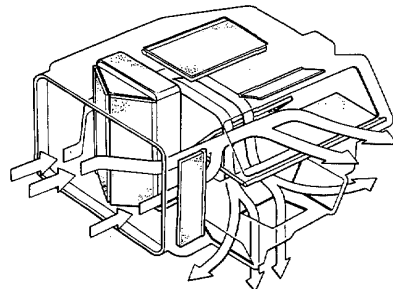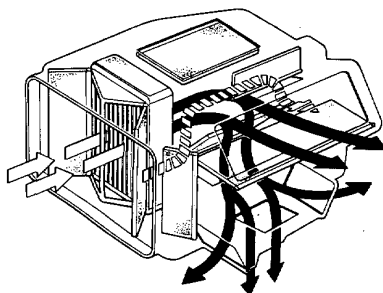

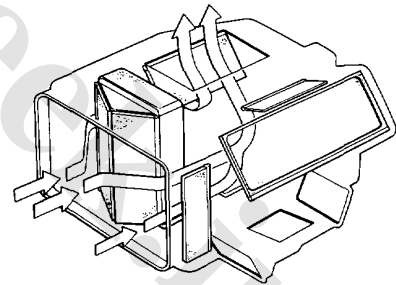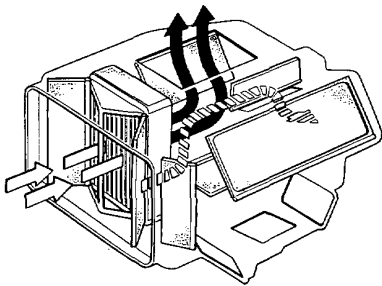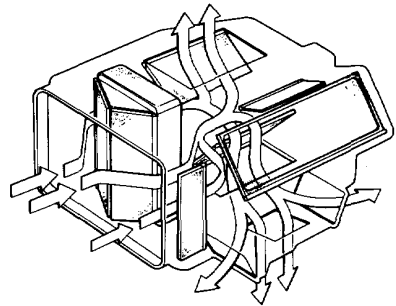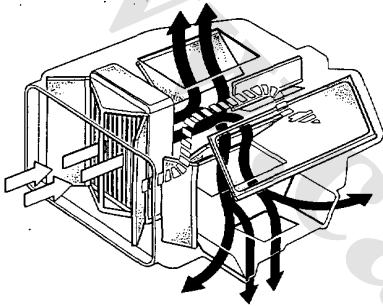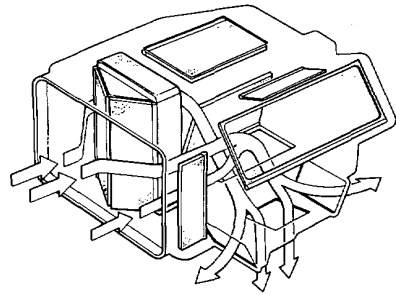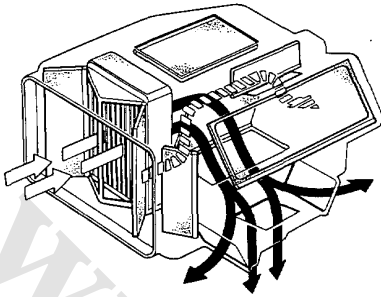

Troubleshooting

Symptom Chart

SYMPTOM		REMEDY
No hot air flow	Blower motor does not run	Perform the flowchart (page 15-12)
	Blower motor runs	Check following: <ul style="list-style-type: none"> · Clogged heater duct · Clogged blower outlet · Clogged heater valve · Faulty air mix door · Air mix cable adjustment · Faulty thermostat
Hot air flow is low	Blower speed does not change	Perform flowchart (page 15-11)
	Blower runs properly	Check following: <ul style="list-style-type: none"> · Clogged heater duct · Clogged blower outlet · Incorrect door position
Function does not change	Button Type	Function control motor does not run
	Lever Type	Function control motor runs
		Perform flowchart (page 15-15)
		Check the heater door linkage and the heater assembly. <ul style="list-style-type: none"> · Check the heater door linkage and the heater assembly. · Check the function cable adjustment.
Recirculation door does not change	Recirculation motor does not run	Perform flowchart (page 15-17)
	Recirculation motor runs	Check the door linkage and the blower.



Troubleshooting Flowchart-Blower

Blower motor runs, but one or more speeds are inoperative.

Disconnect the 5-P connector from the blower resistor.

Check the resistance between the No.1 and No.5 terminals of the resistor.

Is there about 2.7 Ω ?

NO

Replace the resistor

YES

Reconnect the 5-P connector to the resistor.

Disconnect the 8-P connector from the fan switch.

Turn the ignition switch on.

Measure the voltage between:

- BLU terminal and body ground.
- BLU/WHT terminal and body ground.
- BLU/YEL terminal and body ground.
- BLU/BLK terminal and body ground.
- BLU/RED terminal and body ground.



Is there battery voltage ?

NO

Repair open in BLU, BLU/WHT, BLU/YEL, BLU/BLK or BLU/RED wire (s) between the fan switch and resistor.

YES

Replace the fan switch.

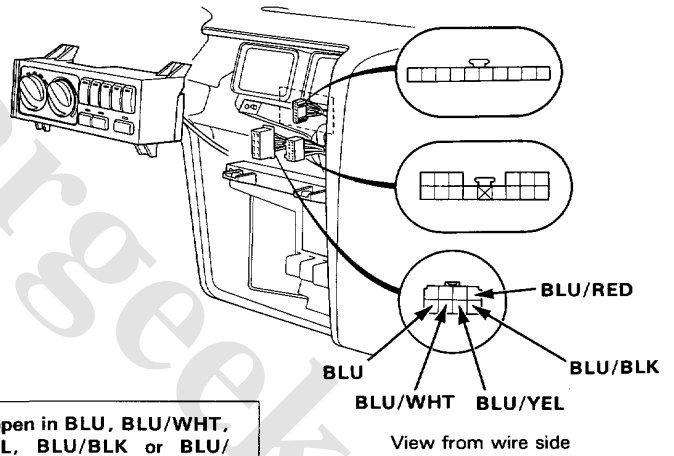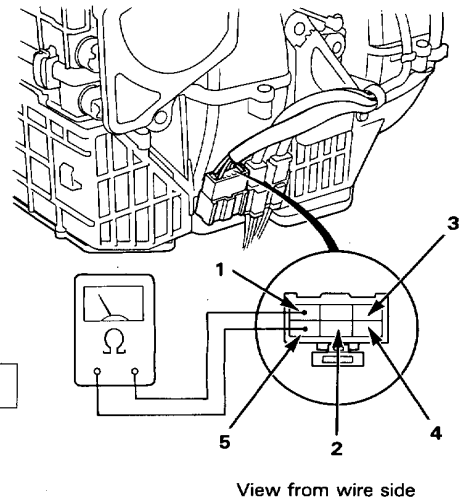

Troubleshooting

Troubleshooting Flowchart- Blower

NOTE: Check for a blown No.18 (30 A), No.8 (7.5 A) fuse.

Blower motor does not run at all.

Disconnect the 2-P connector from the blower motor.

Turn the ignition switch ON.

Measure the voltage between YEL/BLK terminal (+) and body ground (-).

Is there battery voltage ?

NO -> To page 15-13B

YES

Inspect the blower motor.

Is the blower motor OK ?

NO -> Replace the blower motor


YES

Turn the ignition switch OFF.


Reconnect the 2-P connector to the blower motor.

Disconnect the 8-P connector from the heater fan switch.





Measure the voltage between BLU/RED terminal (+) and body ground (-).

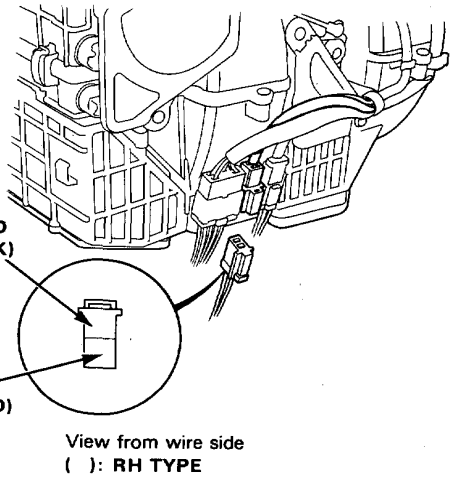

NOTE: Connect the battery positive to the YEL/BLK terminal and negative to the BLU/RED terminal and check that the blower motor runs.

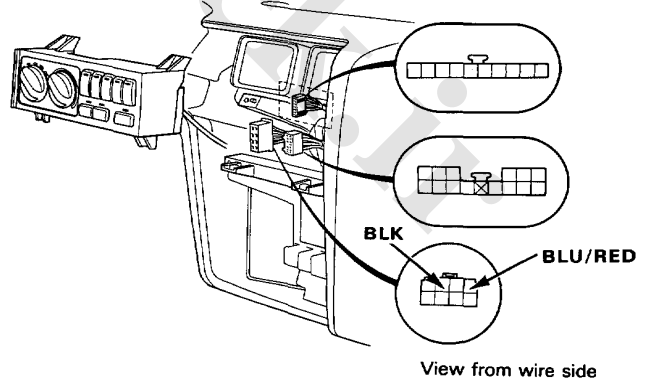


To page 15-13 A

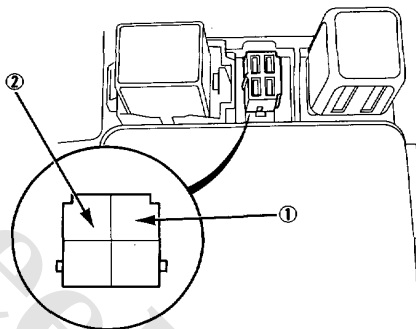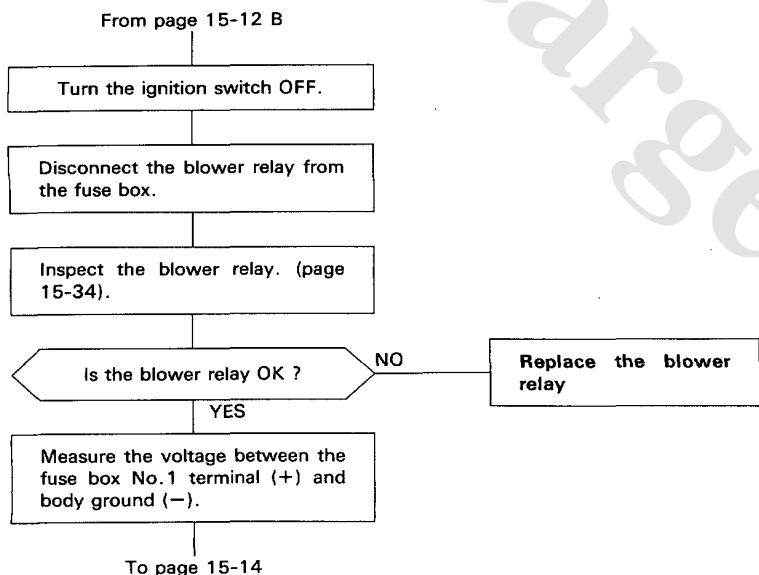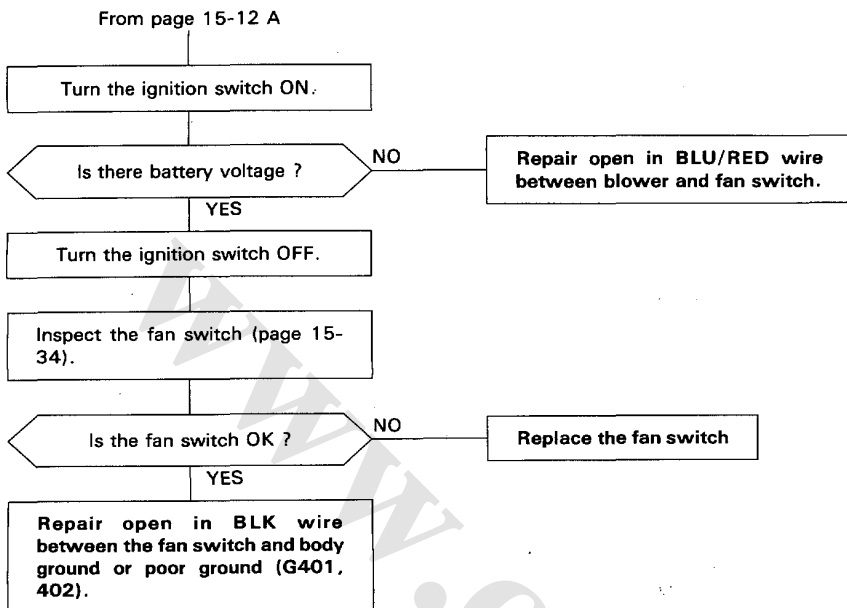


(cont'd)

Troubleshooting

Troubleshooting Flowchart-Blower (cont'd)

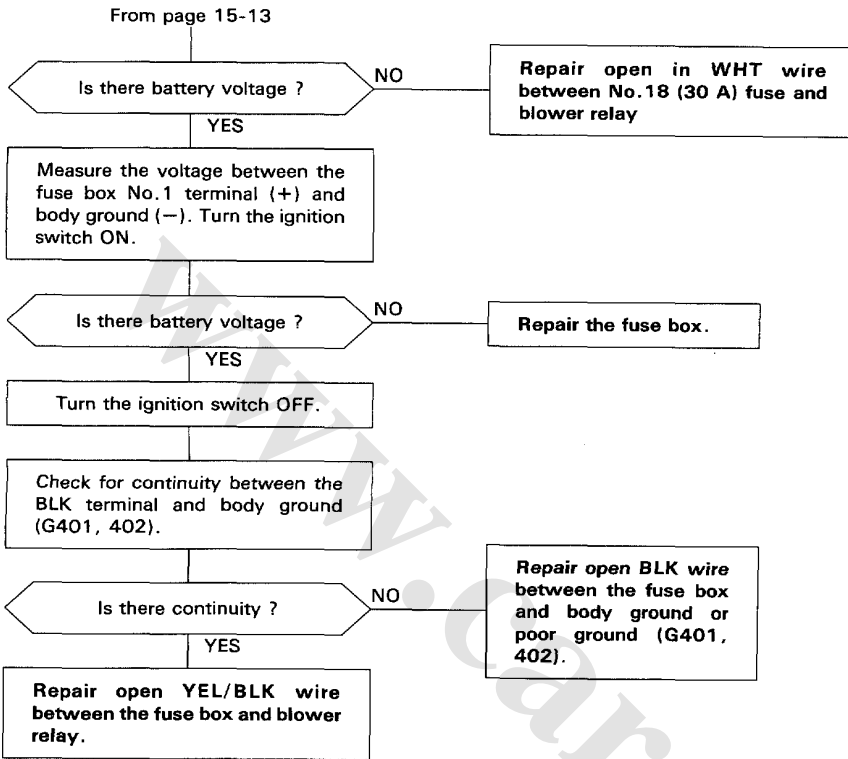



Troubleshooting Flowchart — Function Control

NOTE: Check the following

- blown No.8 (7.5 A) fuse
- sticking function link and function doors

Function control motor does not run.

Disconnect the 8-P connector from the function control motor.

Turn the ignition switch ON.

Measure the voltage between YEL/BLK terminal (+) and body ground (-).

Is there battery voltage ?

NO

Repair open in YEL/BLK wire between the function control motor and fuse box.

YES

Check for continuity from BLK terminal to body ground.

Is there continuity ?

NO

Repair open in BLK wire between the function control motor and body ground or poor ground (G401, 402)

YES

Turn the ignition switch OFF.

Inspect the function control motor (page 15-37).


Is the function control motor OK ?

NO

Replace the function control motor.

YES

To page 15-16


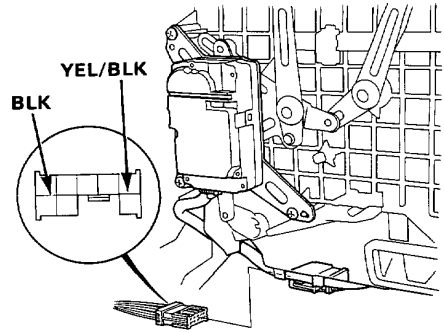


View from wire side

(cont'd)

Troubleshooting

Troubleshooting Flowchart — Function Control (cont'd)

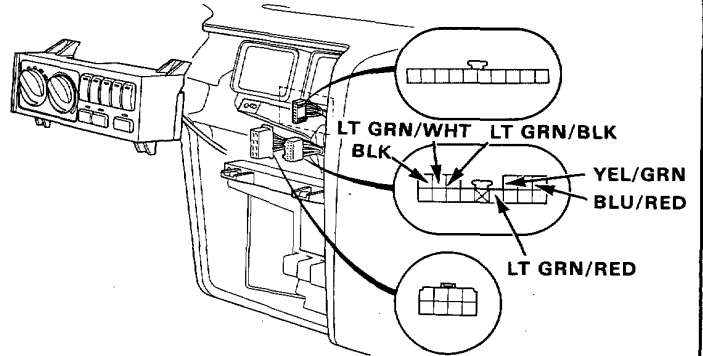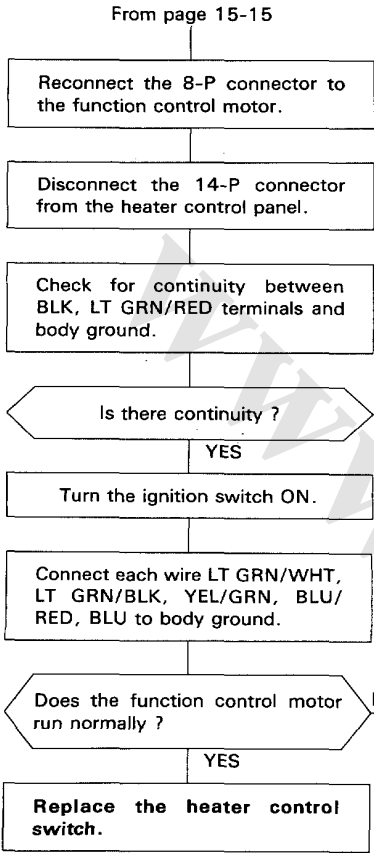

View from wire side

Repair open in BLK, LT GRN/RED wire or poor ground (G401, 402).


NOTE: If the function control motor is in the vent position, it will not run when the LT GRN/WHT wire is grounded. In this case, ground the LT GRN/WHT wire again after grounding the other wires.

Repair open in wire (LT GRN/WHT, LT GRN/BLK, YEL/GRN, BLU/RED, BLU) between the function control motor and heater control panel.




Troubleshooting Flowchart — Recirculation Control

NOTE : Check following; • Sticking blower side link and recirc door
• Blown No.8 (7.5 A) fuse

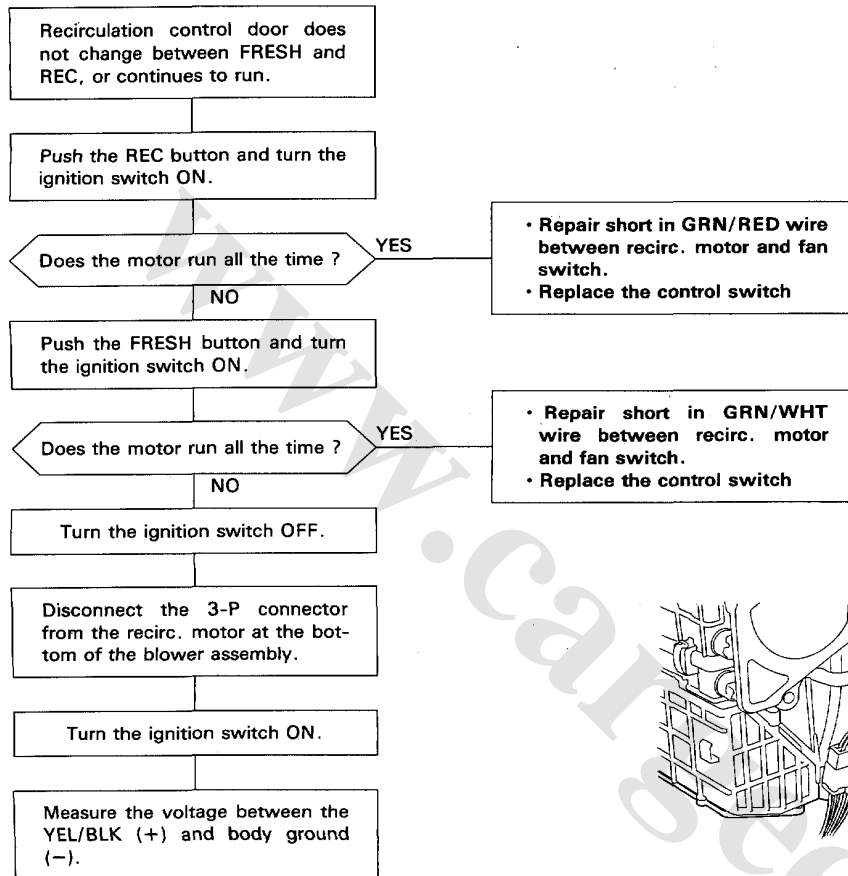


To page 15-18

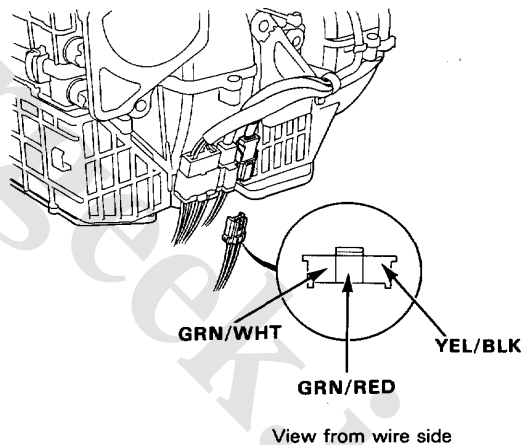

(cont'd)

Troubleshooting

Troubleshooting Flowchart — Recirculation Control (cont'd)

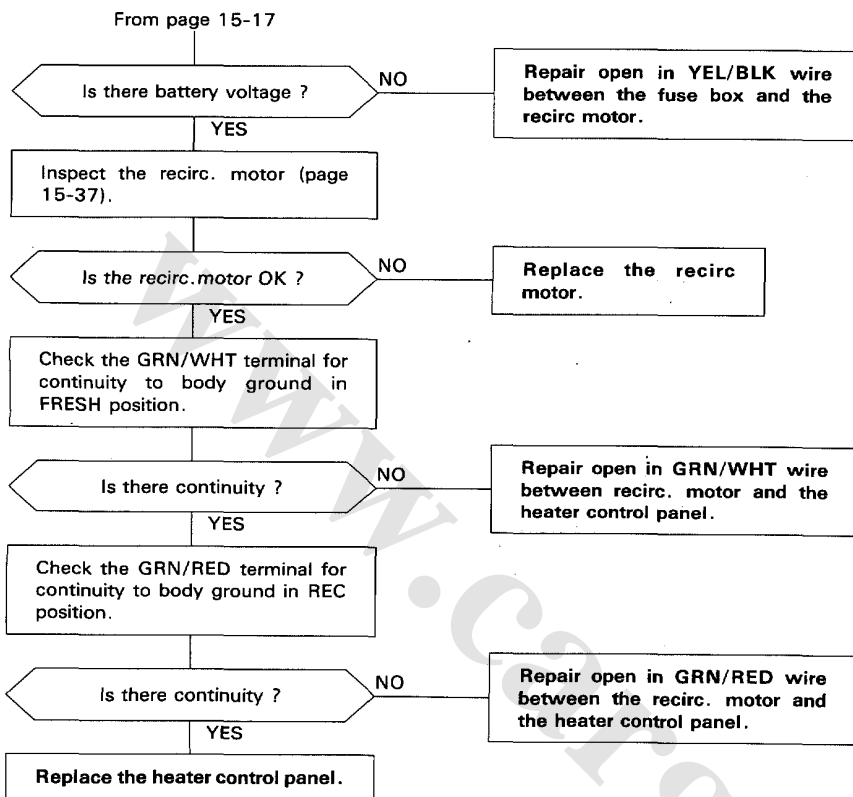





Blower

Replacement


1. Remove the glove box.
2. Remove the glove box frame.

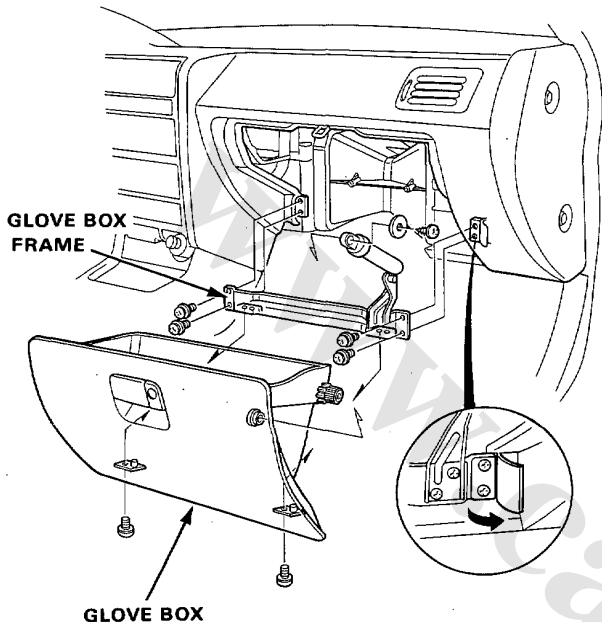


3. (Without A/C)
Remove the self-tapping screws (2) and remove the heater duct.

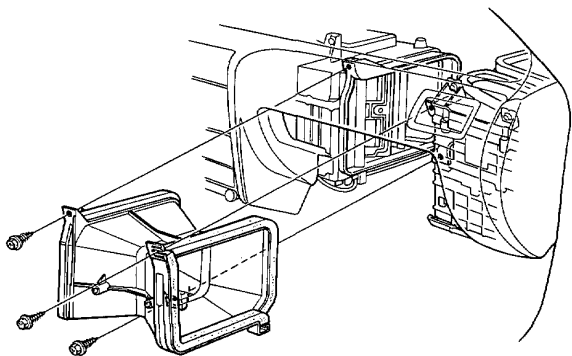

4. (Without A/C)
Remove the blower mounting nuts (3). Disconnect the connectors from the blower motor, resistor and recirculation control motor, then remove the blower.

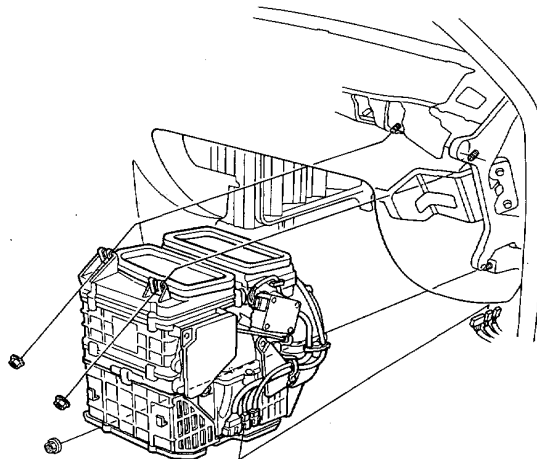

5. (With A/C)
Turn over the carpet and remove the side cover. Remove the control unit bracket mounting nuts (4). Disconnect the connectors (5) and remove the control unit bracket.

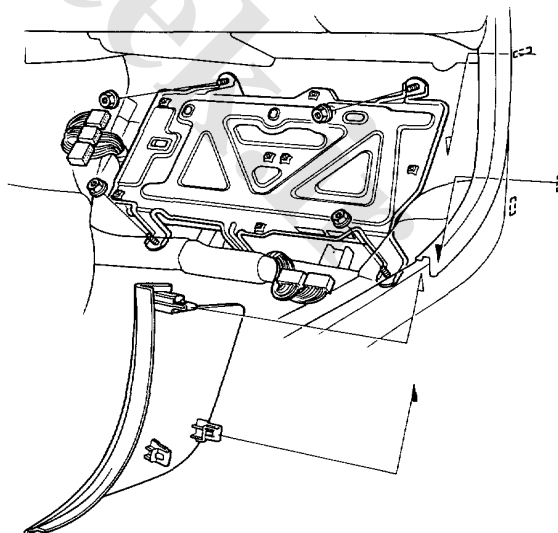


(cont'd)


Blower

Replacement (cont'd)

6. (With A/C)
Remove the A/C bands (2) and remove the blower under cover.
NOTE: Be careful not to break the tabs while removing the blower under cover.
Remove the blower as in step 4.

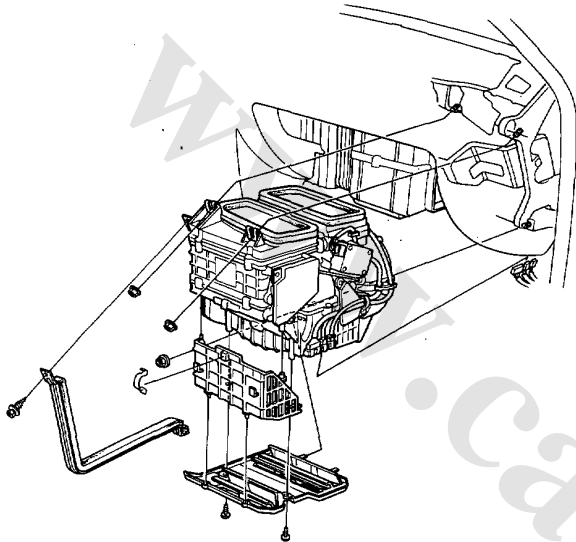

7. Install the blower in the reverse order of removal and make sure there is no air leakage.
NOTE: When installing the glove box frame, the face which covers the dashboard is installed with double-sided adhesive tape.

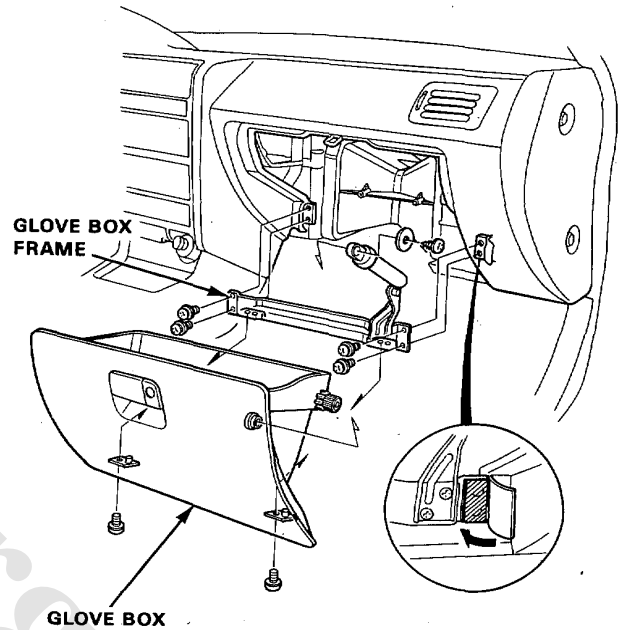




Overhaul


NOTE:

- Before reassembly, make sure that the air door and linkage moves smoothly without binding.
- When reattaching the actuator, make sure its positioning will not allow the air door to be pulled too far. Attach the actuator and all linkage, then apply battery voltage and watch the door movement. If necessary, loosen the holding screw and move the actuator up or down.

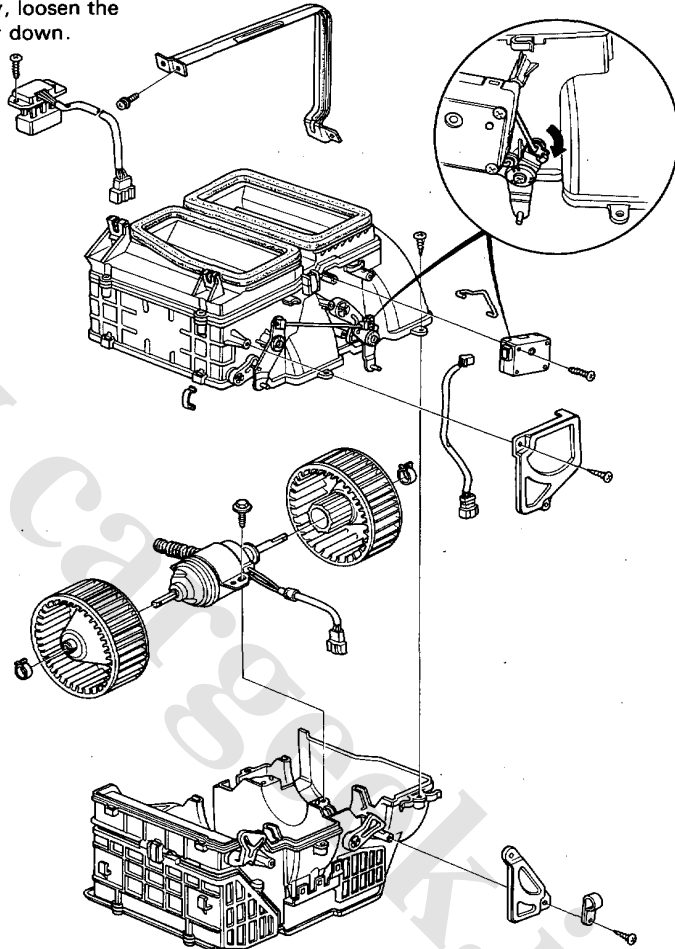

To adjust the control rod:

Connect the recirc. control motor connector to the cabin wire harness and turn the FRE/REC switch to "REC". Hold the air door closed, then connect the control rod to the clip on the arm.

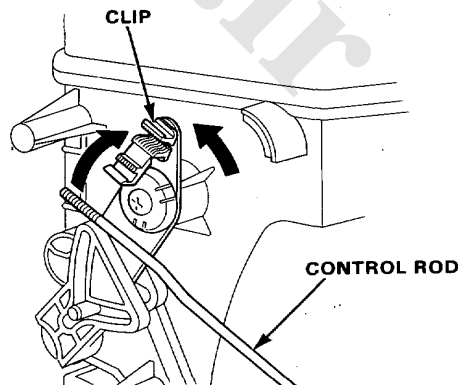

Heater Assembly

Replacement

1. When the engine is cool, drain the coolant from the radiator (Section 5).

▲ WARNING


- Do not remove the radiator cap when the engine is hot; the coolant is under pressure and could severely scald you.
- Keep hands away from the radiator fan. The fan may start automatically without warning and run for up to 30 minutes, even after the engine is turned off.

CAUTION: Radiator coolant will damage paint. Quickly rinse any spilled coolant from painted surfaces.


2. Disconnect the heater hoses at the heater.

NOTE: Coolant will run out when the hoses are disconnected, drain it into a clean drip pan.

3. Disconnect the heater valve cable from the heater valve.

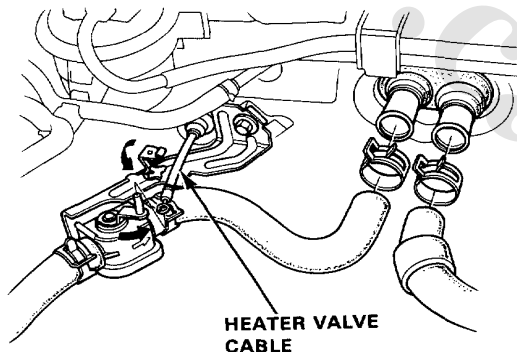


4. Remove the duct cover.

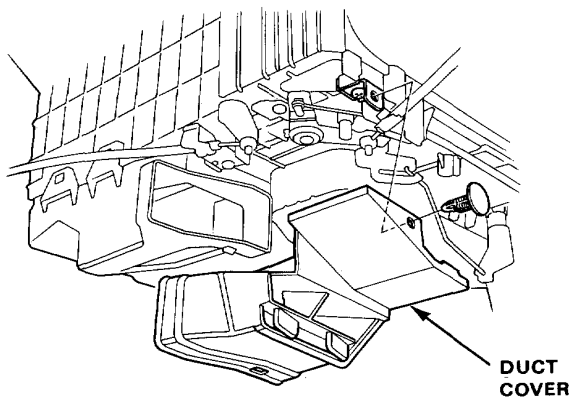

5. Remove the dashboard (Section 14).
6. Remove the heater duct.

7. Remove the heater mounting nuts (4), then remove the heater assembly.

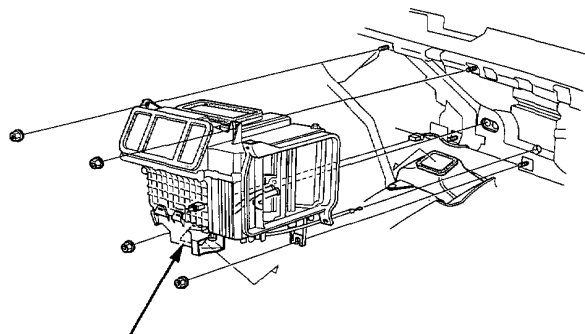

8. Install in the reverse order of removal and:
 - Apply sealant to the grommets.
 - Do not interchange the inlet and outlet hoses. Make sure that the hose clamps are secure.
 - Loosen the bleed bolt on the engine and refill the radiator and reservoir tank with the proper coolant mixture. Tighten the bleed bolt when all the trapped air has escaped and coolant begins to flow from it.
 - Connect all cables and make sure they are properly adjusted (page 15-30).




Overhaul

1. Remove the heater assembly.
2. Remove the air mix rod from the clip.
3. Remove the self-tapping screws (2) and heater core cover.
4. Remove the self-tapping screw and clamp.
5. Pull out the heater core from the heater housing.
6. Install the heater in the reverse order of removal.

FUNCTION CONTROL MOTOR (Button type only)

- When installing the function control motor, be careful when connecting the link.
- Try the function control motor in every mode for two minutes, and make sure the motor operates correctly in each mode.

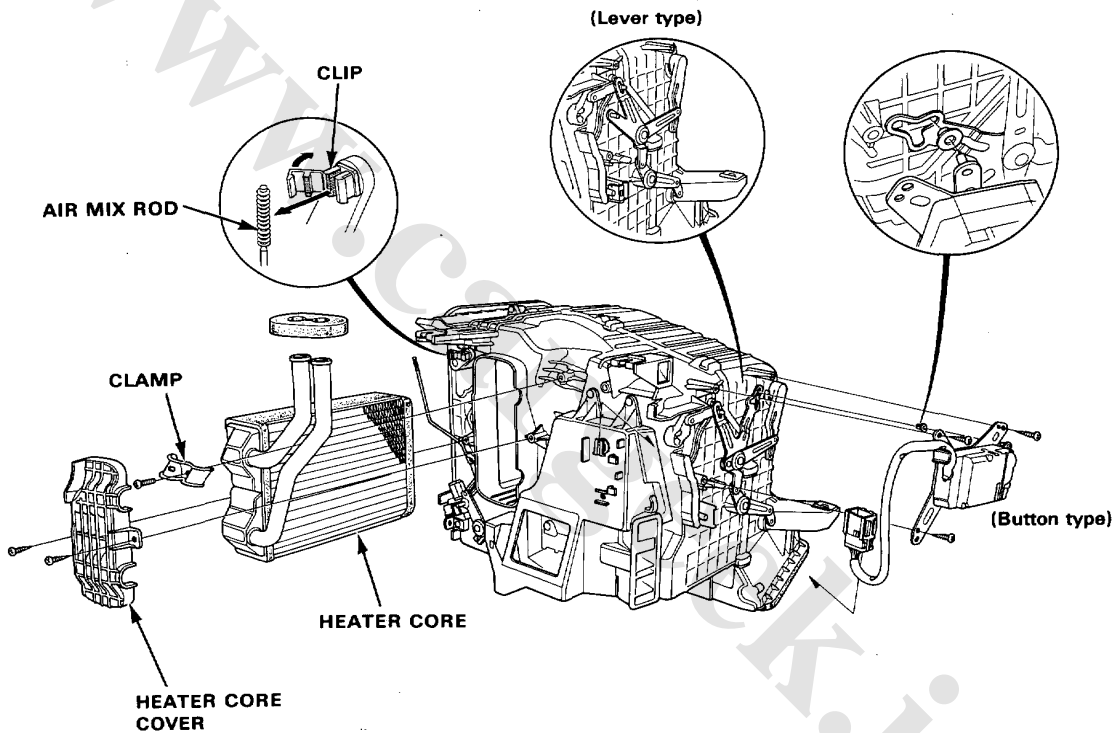

Adjustment

1. Heater linkage: page 15-24
2. Air mix rod: page 15-31
3. Function control cable (lever type only): page 15-32

Heater Assembly

Heater Linkage Adjustment


(LH)

(Button Type)

(DEF door adjustment)

Set the heater control switch on HEAT, to adjust for DEF leak (shut~20 %).

1. Loosen the adjusting screw.
2. Adjust the heater linkage as shown.
3. Tighten the adjusting screw.

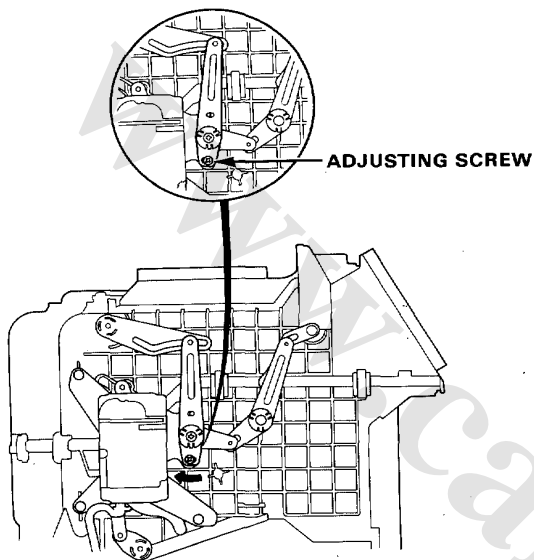


(RH)

(Lever Type)

(HEAT door adjustment)

When HEAT door is closed, air should not leak from the HEAT door.

1. Loosen the adjusting screw.
2. Adjust the heater linkage.
3. Tighten the adjusting screw.

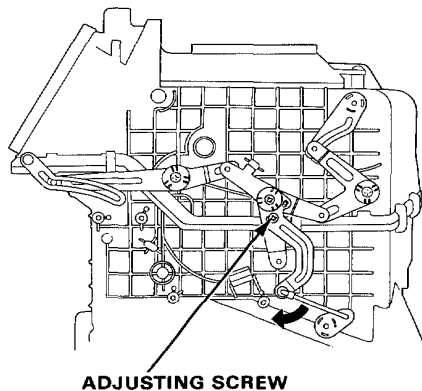

(RH)

(Button Type)

(DEF door adjustment)


Set the heater control switch on HEAT, to adjust for DEF leak (shut~20 %).

1. Loosen the adjusting screw.
2. Adjust the heater linkage as shown.
3. Tighten the adjusting screw.

(HEAT door adjustment)

When HEAT door is closed, air should not leak from the HEAT door.

1. Loosen the adjusting screw.
2. Adjusting the heater linkage.
3. Tighten the adjusting screw.

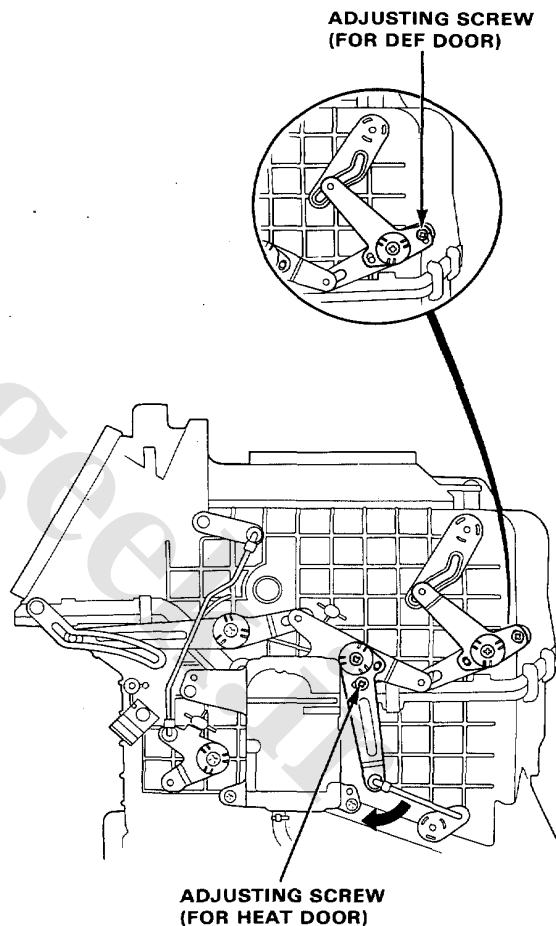





Heater Control Panel

Replacement

1. Remove the ashtray.
Remove the console.

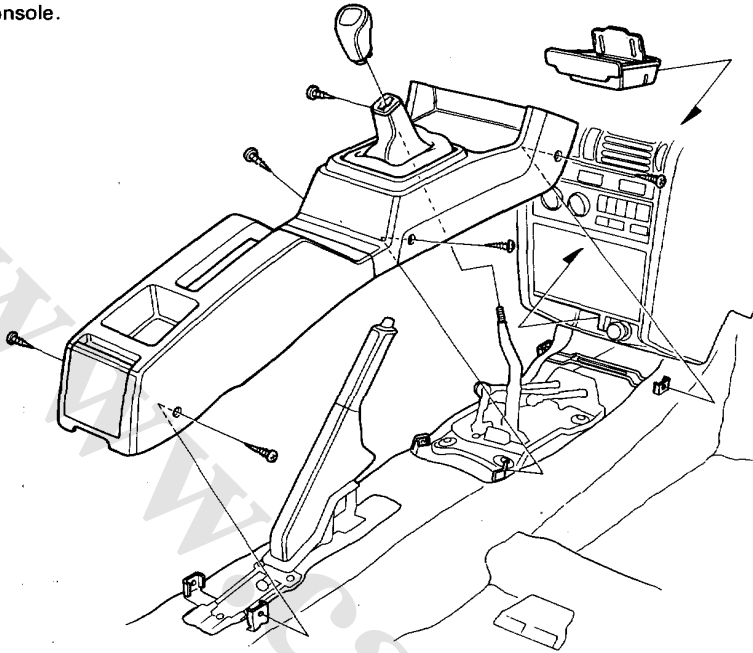

2. Remove the switches, coin box, air vent, and ashtray lighting bracket.

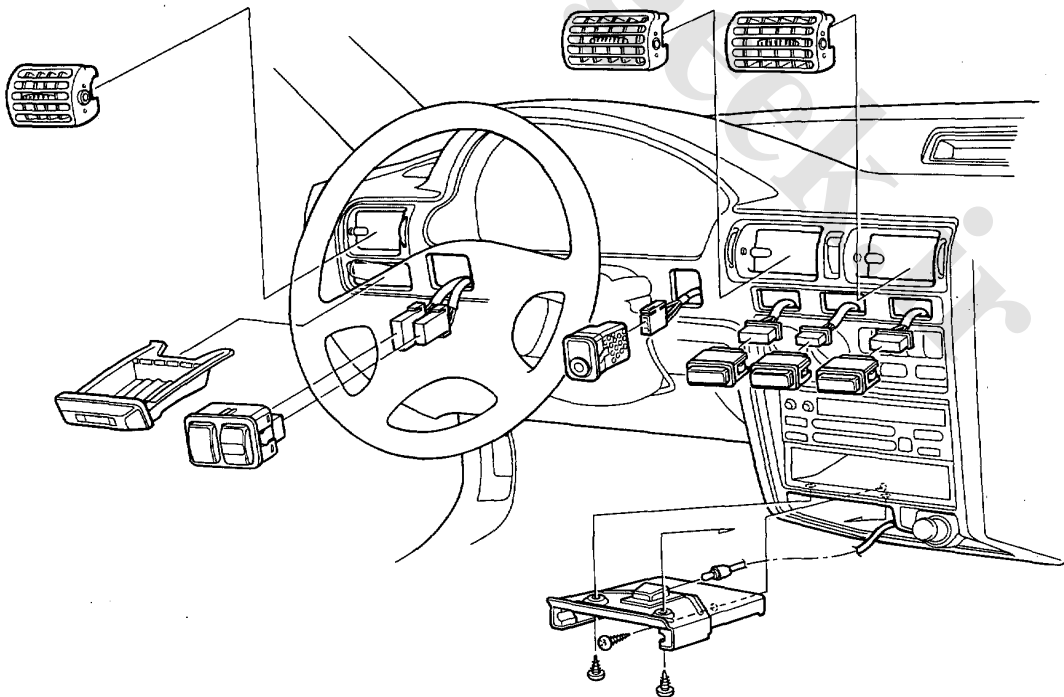


(cont'd)

Heater Control Panel

Replacement (cont'd)

3. Remove the radio/cassette player and the meter visor. If a heater control panel is button type, release the cool vent cable from heater unit side.


NOTE: ● Loosen the self-tapping screws under the radio, and remove the radio/cassette player.
● Tilt the steering column down, then remove the meter visor.

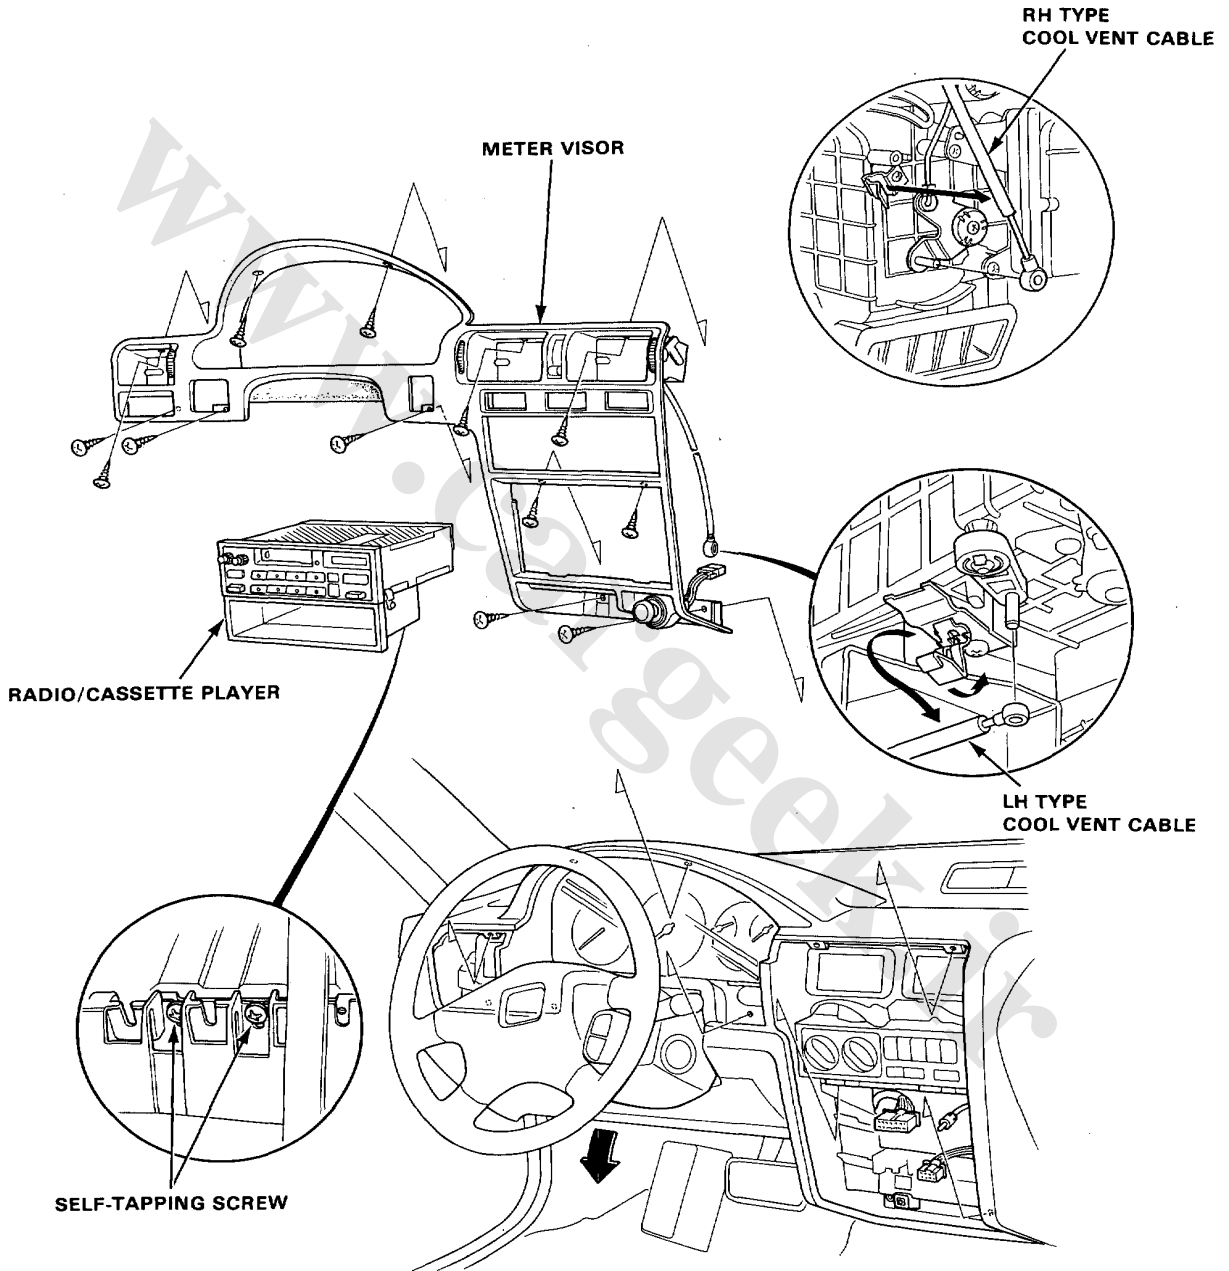




4. Disconnect the cables at the heater assembly.
5. Remove the self-tapping screws(4), pull out the heater control panel, disconnect the wire harness connectors, then remove the heater control panel.

(Button type)

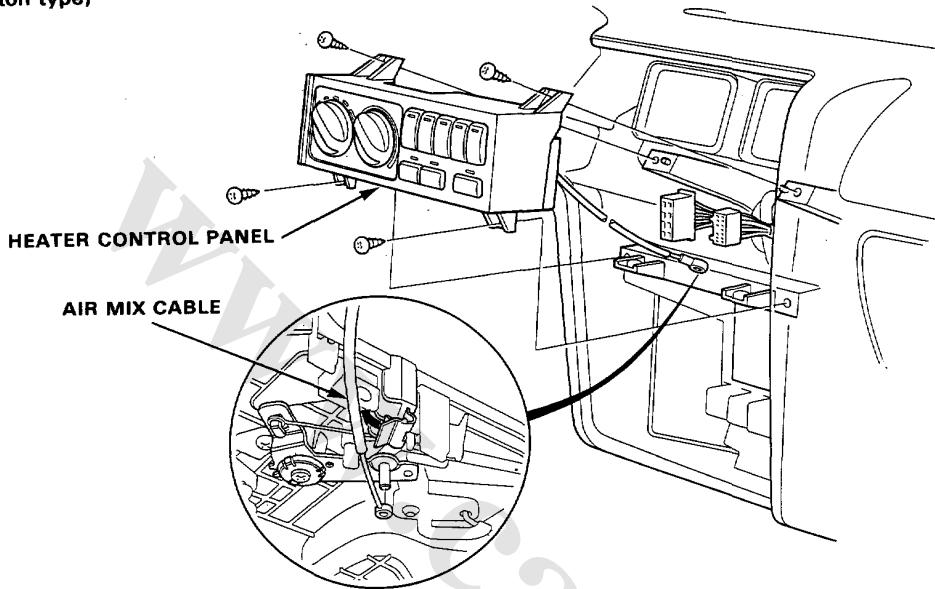

(Lever type)

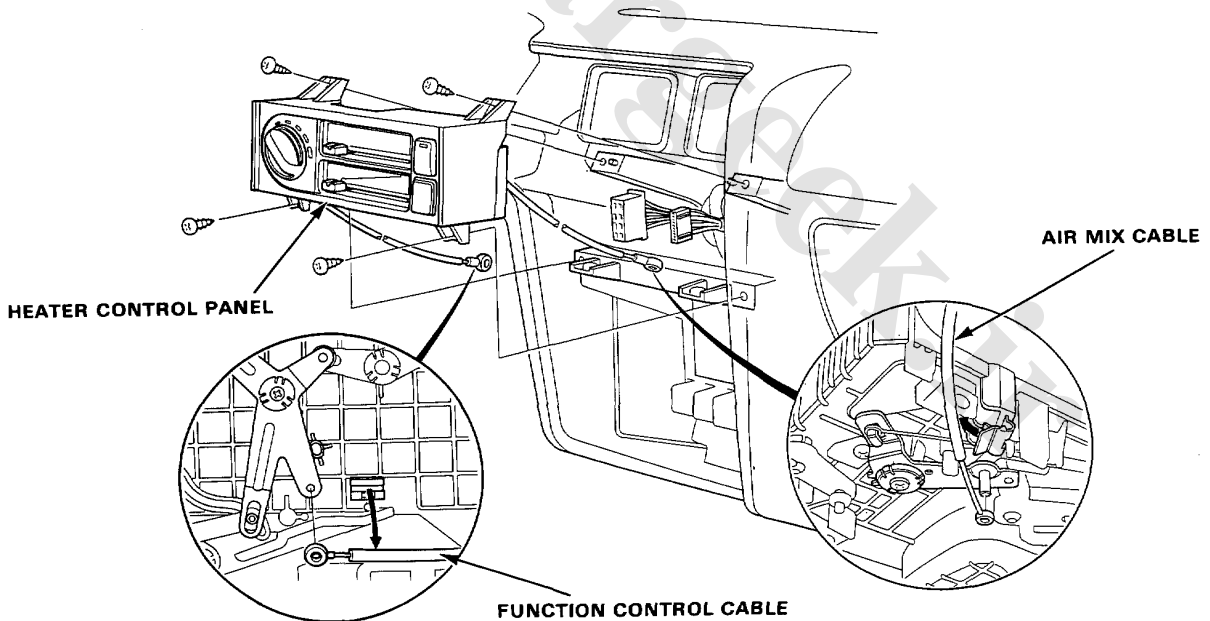


6. Install in the reverse order of removal, reconnect the cables, making sure they are properly adjusted (page 15-31, 32).


Heater Control Panel

Overhaul


(Button type)

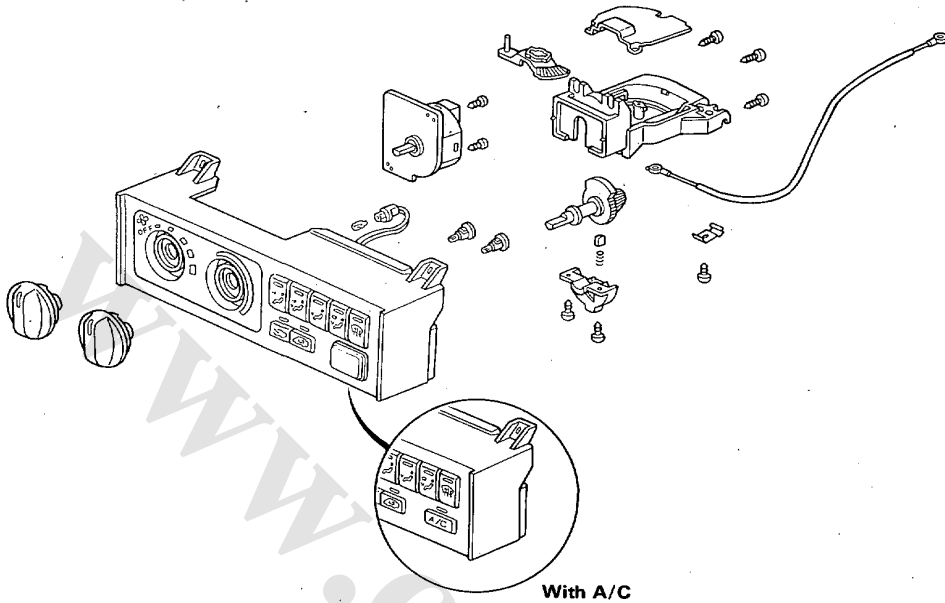

(Lever type)

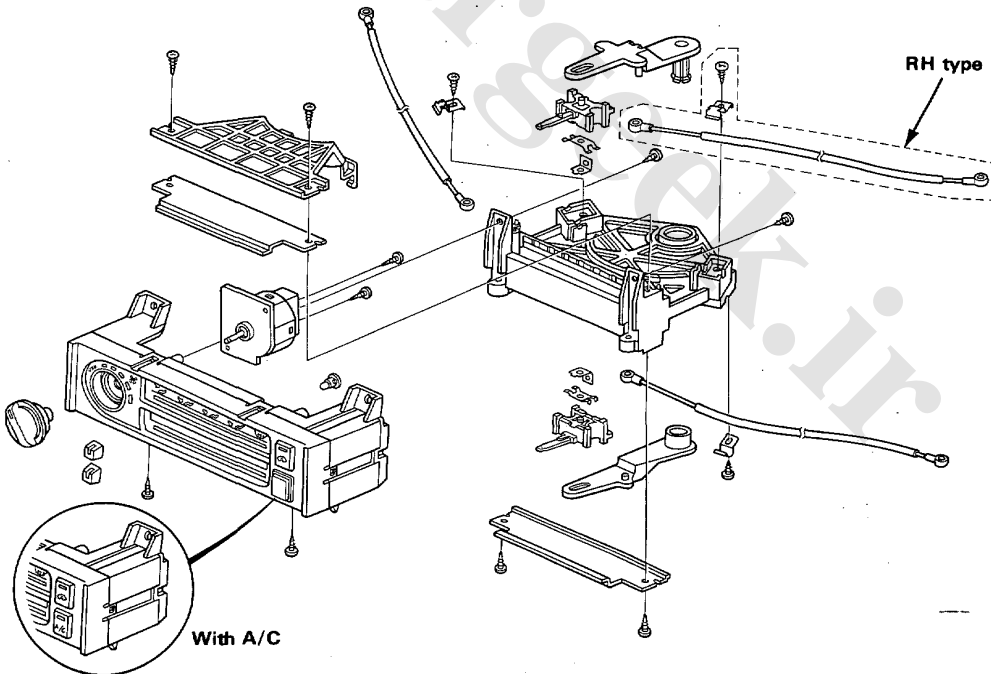

● Cable replacement (page 15-33)




www.Cargeek.ir

Heater Control Cables


Heater Valve Cable Adjustment

(LH)

1. Remove the air mix cable.
2. Turn the cable arm to the stopper A and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.
 - Hold the end of the cable housing to the cable stopper B.

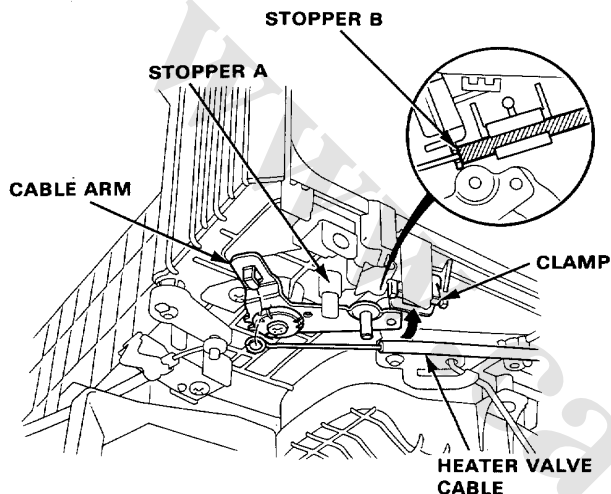


4. Turn the water valve arm to SHUT and connect the end of the cable to the arm.
5. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

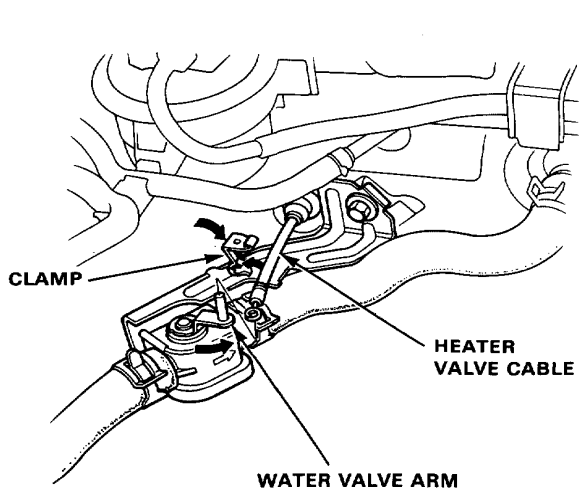


(RH)

NOTE: Before adjusting the heater valve cable, air mix cable should be adjusted.

1. Set the temperature control dial (lever) on COOL.
2. Turn the cable arm to the stopper and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

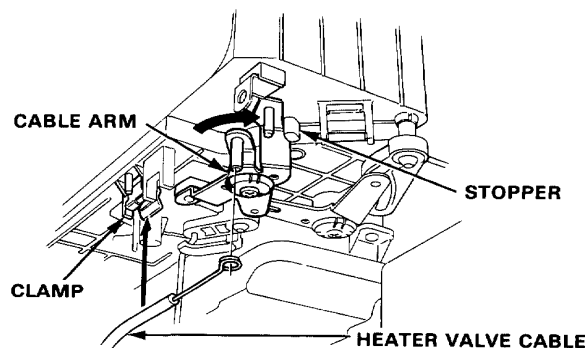

4. Turn the water valve arm to SHUT and connect the end of the cable to the arm.
5. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

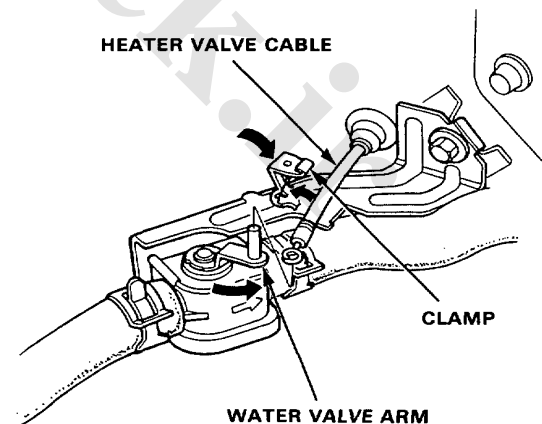





Air Mix Rod, Air Mix Cable Adjustment

(LH)

1. Set the temperature control dial (lever) on COOL.
2. Turn the rod arm to the engine compartment side, then connect the rod to clip.

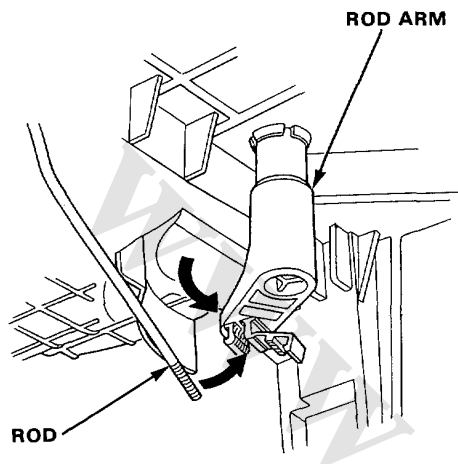

3. Turn the cable arm to the stopper A and connect the end of the cable to the arm.
4. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

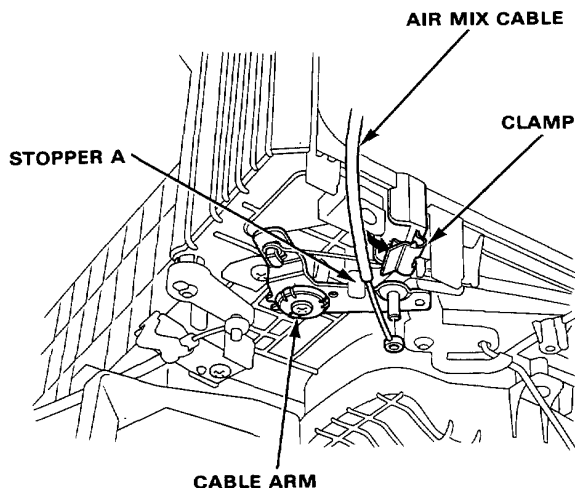


5. After adjusting of air mix rod and cable, set the temperature control dial (lever) on HOT, blow warm air from the heater unit, then set it on COOL and blow cool air from it.


NOTE: Air mix cable should be adjusted if the heater valve cable has been disconnected.

(RH)

1. Set the temperature control dial (lever) on COOL.
2. Remove the heater control cable.
3. Turn the rod arm to the engine compartment side, then connect the rod to clip.

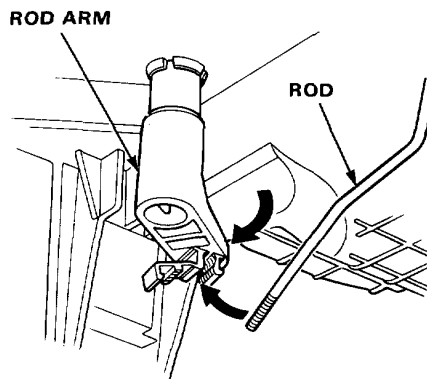

4. Turn the cable arm to the stopper and connect the end of the cable to the arm.
5. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control dial (lever) move, then snap the cable housing into the clamp.

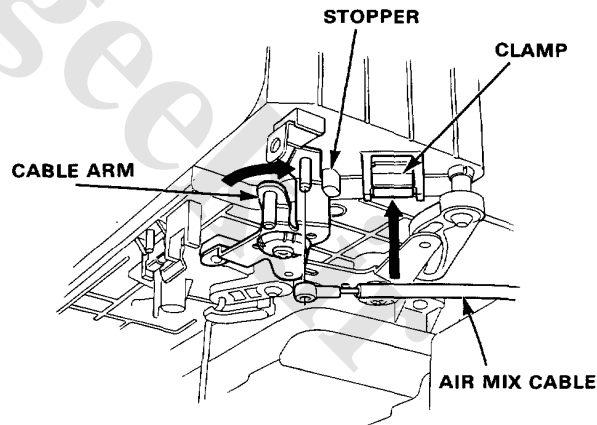


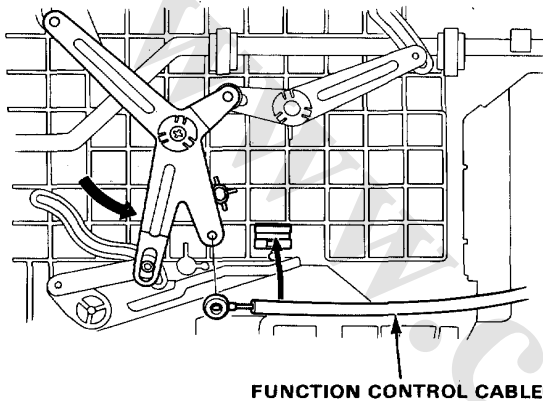
6. Install the heater control cable and adjust it.

Heater Control Cables

Function Control Cable Adjustment

(Lever type only)


1. Slide the function control lever to .
2. Turn the function control arm to the front and connect the end of the cable to the arm.
3. Gently slide the cable housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control lever move, then hold the cable housing and snap it in the clamp.




Cool Vent Adjustment

1. Set the cool vent lever on SHUT.
2. Turn the cable arm to the stopper and connect the end of the cable to the arm.
3. Gently slide the cable outer housing back from the end enough to take up any slack in the cable, but not enough to make the temperature control lever move, then snap the cable housing into the clamp.

(LH)

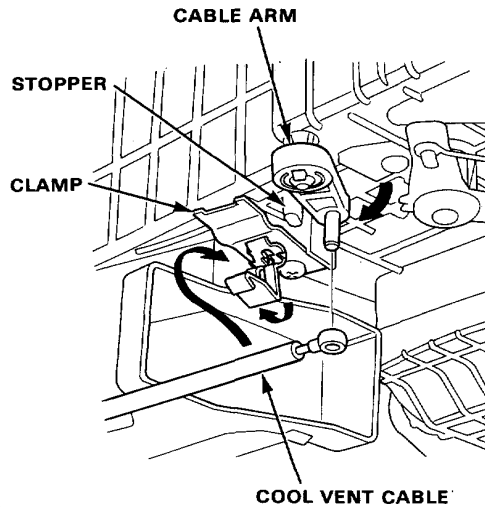

(RH)

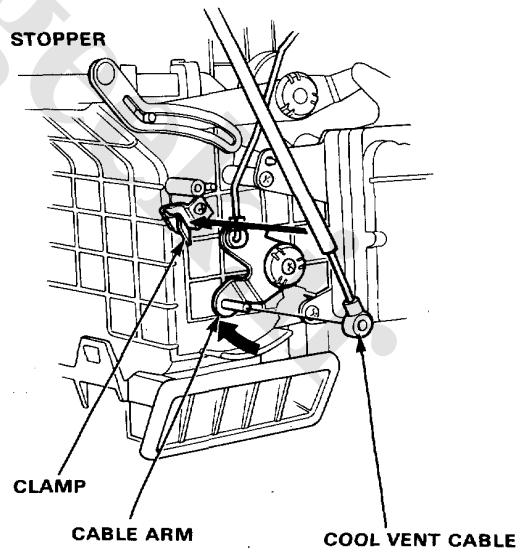



Cable Replacement


1. Remove the self-tapping screw.
2. Remove the cable.
3. Install the new cable.

NOTE:


- Hold the end of the cable to the stopper.
- After installing and adjusting the cable, make sure that the dial or lever move smoothly without binding.

(AIR MIX CABLE, FUNCTION CONTROL CABLE)


(Button type)

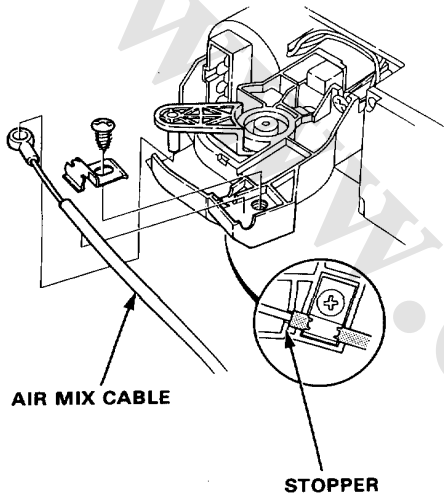

(Lever type)

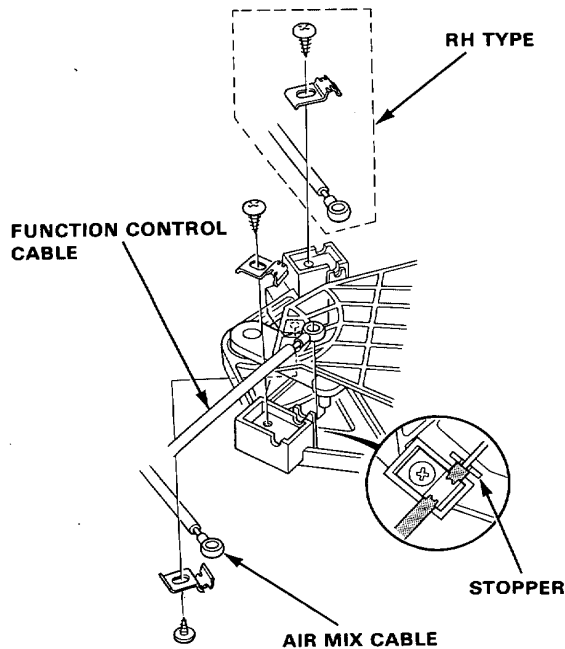

(COOL VENT CABLE)

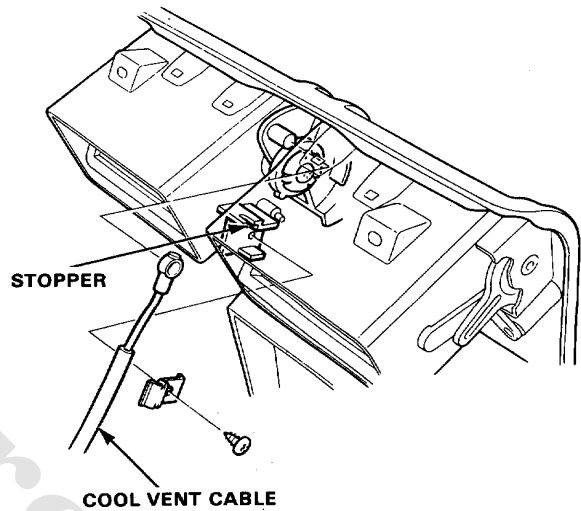


Test

Fan Switch

1. Disconnect the 8-P connector from the fan switch.
2. Check for continuity between the terminals of the fan switch according to the table below.




SWITCH CONNECTION

Terminal Position	①	②	③	④	⑤	⑥	⑦
OFF							
A	○	○	○				
B	○	○		○			
C	○	○			○		
D	○	○				○	
E	○	○					○

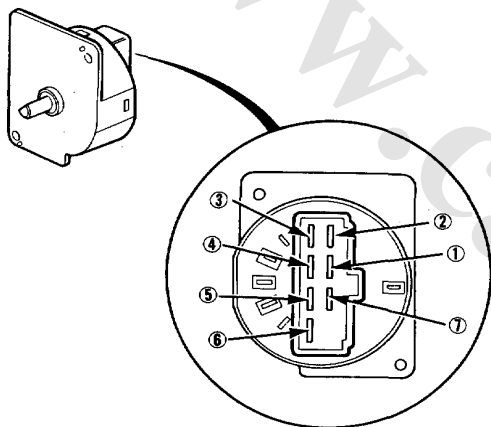

Relay

1. Remove the relay from the dash fuse box.
2. There should be continuity between the A and B terminals when the battery is connected to the C and D terminals.
There should be no continuity when the battery is disconnected.

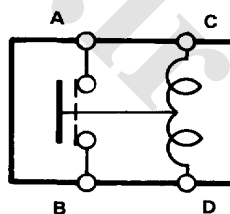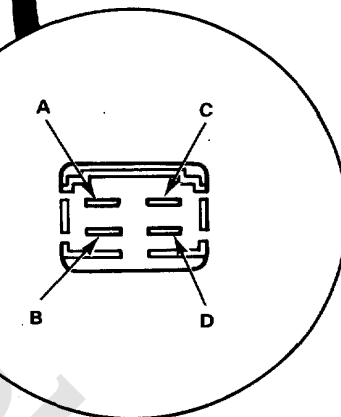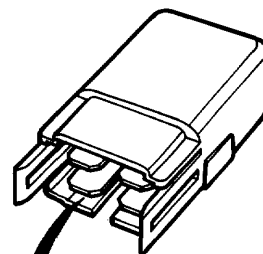




Recirculation Control Switch

1. Disconnect the (button type: 14-P, lever type: 10-P) connector from the heater control switch.
2. Check for continuity between the terminals of the heater control switch according to the table below.


(Button type)

Terminal	C	B	A
Position			
		○—○	
	○—○		

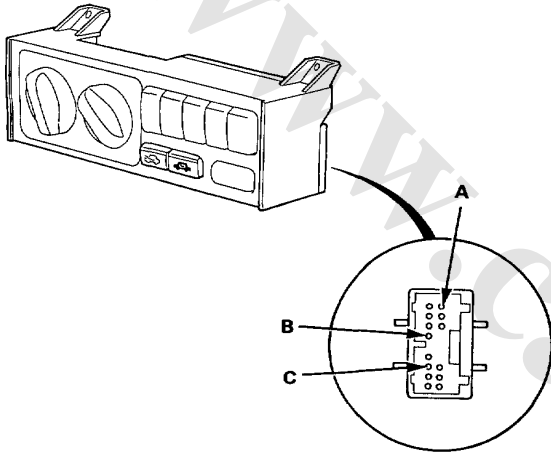

(Lever type)

Terminal	C	B	A
Position			
		○—○	
	○—○		

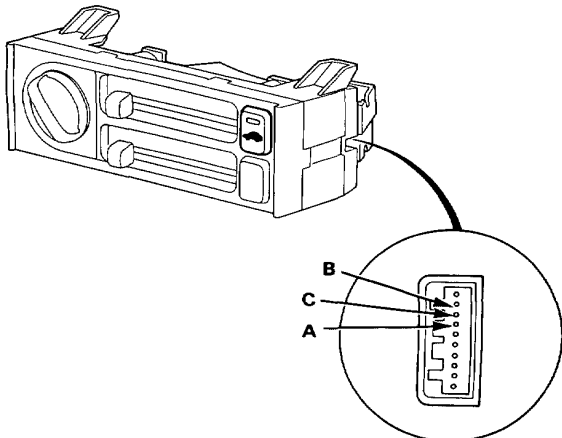


Function Control Switch

(Button type only)

1. Disconnect the 14-P connector from the heater control switch.
2. Check for continuity between the terminals of the heater control switch according to the table below.

Terminal	5	4	3	2	1	6
Position						
					○—○	
				○—○		
			○—○			
		○—○				
	○—○					

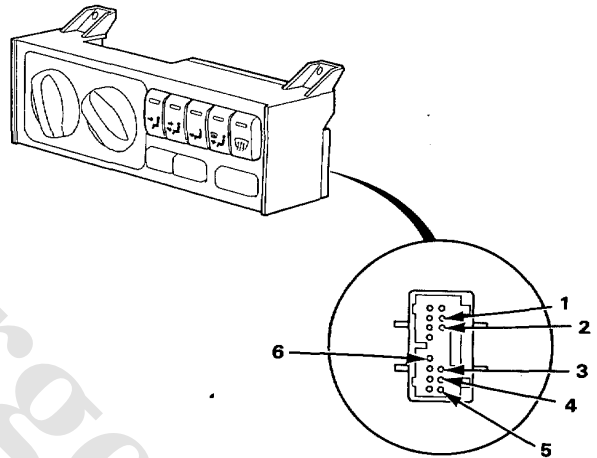

Test


A/C Switch

(Type for with A/C only)

1. Disconnect the (button type: 14-P, lever type: 10-P) connector from the heater control switch.
2. Check for continuity between the terminals of the heater control switch according to the table below.


(Button type)

Terminal Position	①	②	③	④
OFF			○—○	
ON	○—○		○—○	

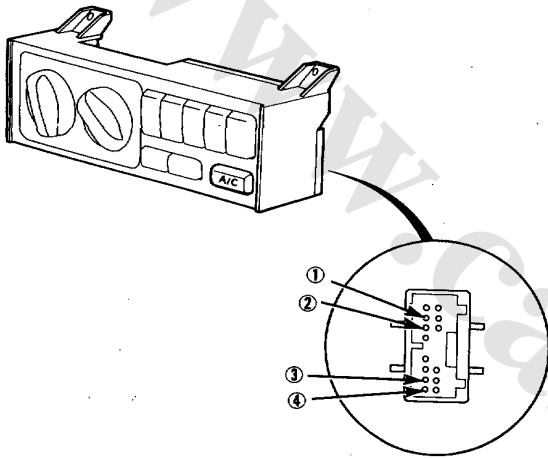

(Lever type)

Terminal Position	①	②	③	④
OFF	○—○	○—○		
ON	○—○	○—○	○—○	○—○

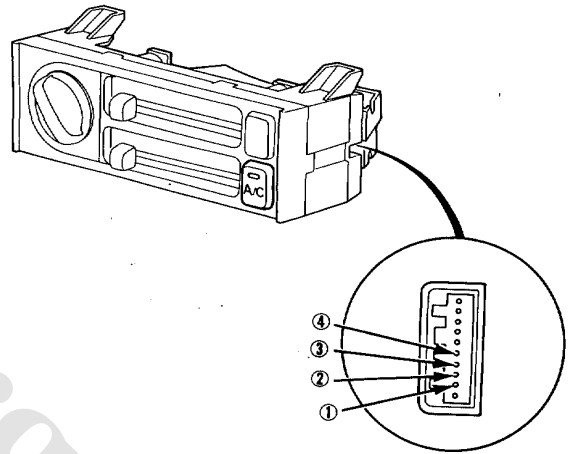




Recirculation Control Motor

1. Connect the battery positive to the ① terminal of the recirculation control motor connector and negative to ② and ③ terminals; the recirc. motor move smoothly.
2. Disconnect the battery negative from 2 or 3; the recirc. motor should stop at FRESH or REC.

CAUTION: Never connect the battery in the opposite direction.

NOTE:

- Don't cycle the recirc. motor for a long time.
- After adjusting the recirc. control rod, check the recirc. motor on FRESH or REC for two minutes to make sure it operates properly.

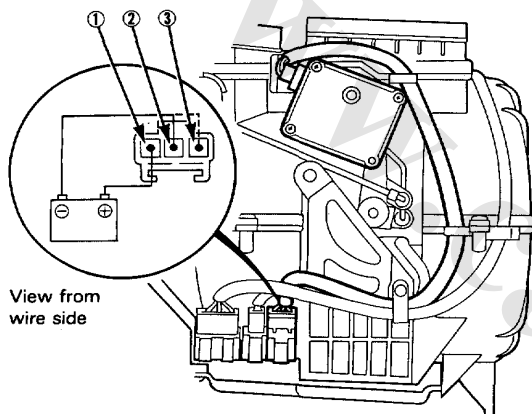


View from wire side

Function Control Motor

(Button type only)

1. Connect the battery positive terminal to the ① terminal of the function control motor and negative to the ② terminal.
2. Using jumper wire short the ② terminal individually to the ③, ④, ⑤, ⑥ and ⑦ terminals to follow the order.
 - The motor should run each time the short circuit is made.

NOTE: If the function control motor does not run when you short the first terminal, short that terminal again after shorting the other terminals.

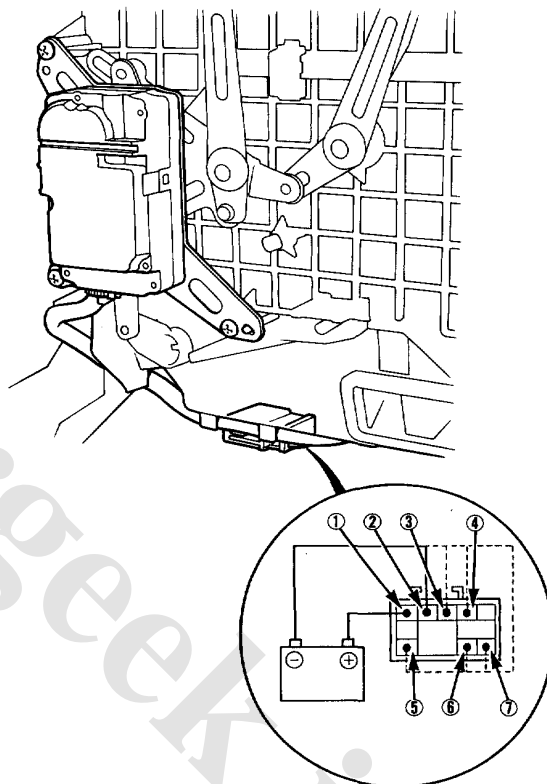

View from wire side

[Special Tools](#)

[Illustrated Index](#)

[Circuit Diagram](#)

[Wire Harness Routing](#)

[Troubleshooting](#)

Troubleshooting Flowcharts

[Cooling Fan](#)

[Condenser Fan](#)

[A/C System](#)

[Compressor](#)

[Service Tips](#)

[Belt Tension](#)

[Performance Test](#)

Evaporator

[Replacement](#)

[Overhaul](#)

Condenser

[Replacement](#)

Compressor (Nippondenso)

[Description](#)

[Replacement](#)

[Clutch Inspection](#)

[Clutch Overhaul](#)

Test

[A/C Thermostat](#)

[Relay](#)

[Diode](#)

[Refrigerant Can Attachment](#)

[Discharge Procedure](#)

System Charging

[System Evacuation](#)

[Leak Test](#)

[Charging Procedure](#)


[Supplement](#)

[Pressure Test](#)


Special Tools

Special Tools


Ref. No.	Tool Number	Description	Q'ty	Page Reference
①	07LAB-SK70100	A/C Clutch Holder	1	15-76
②		ND Tension Gauge	1	15-64, 65
③	07LAJ-PT30100	ECU Test Harness	1	15-58

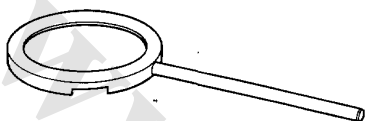


①

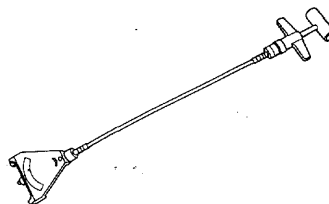

②

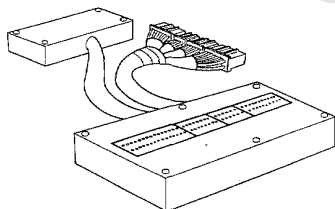

③



Air Conditioner


Illustrated Index

EVAPORATOR


As refrigerant circulates, heat is absorbed from the surrounding passenger compartment air.
Replacement, page 15-67
Overhaul, page 15-68

IDLE-UP DIAPHRAGM (Carburated Engine only)

SIGHT GLASS

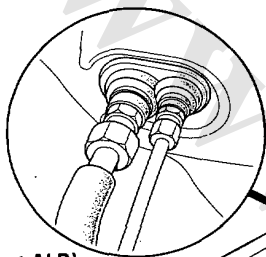

(Without ALB)

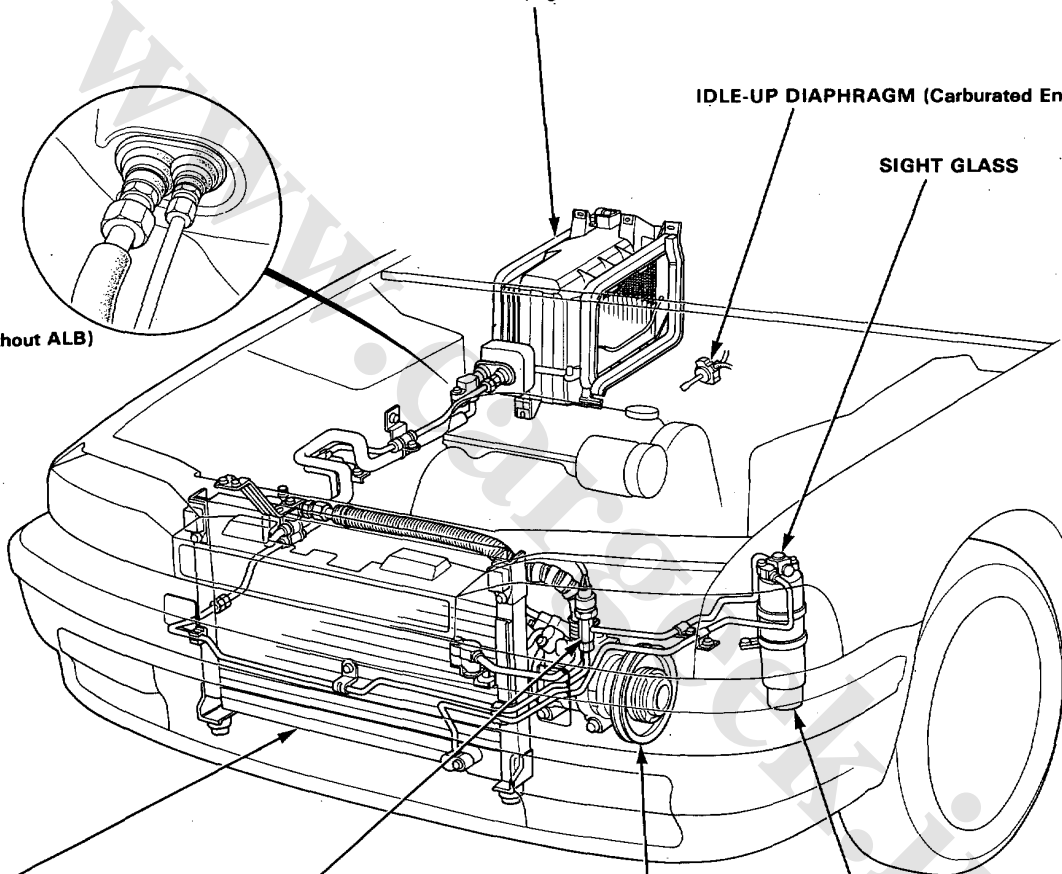

CONDENSER

Dissipates the heat which was absorbed by the refrigerant.
Replacement, page 15-69

DUAL PRESSURE SWITCH

When the refrigerant pressure is below 265 kPa (38 psi) due to refrigerant leakage or above 1667 kPa (242psi) due to coolant blockage the dual pressure switch opens the circuit to the A/C control unit and stops the air conditioner to protect the compressor.


RECEIVER AND FILTER/DRYER

Serves as a reservoir which filters and removes moisture from the refrigerant.

COMPRESSOR (NIPPONDENSO)


Compresses the refrigerant and then forces it through the condenser.

Circuit Diagram

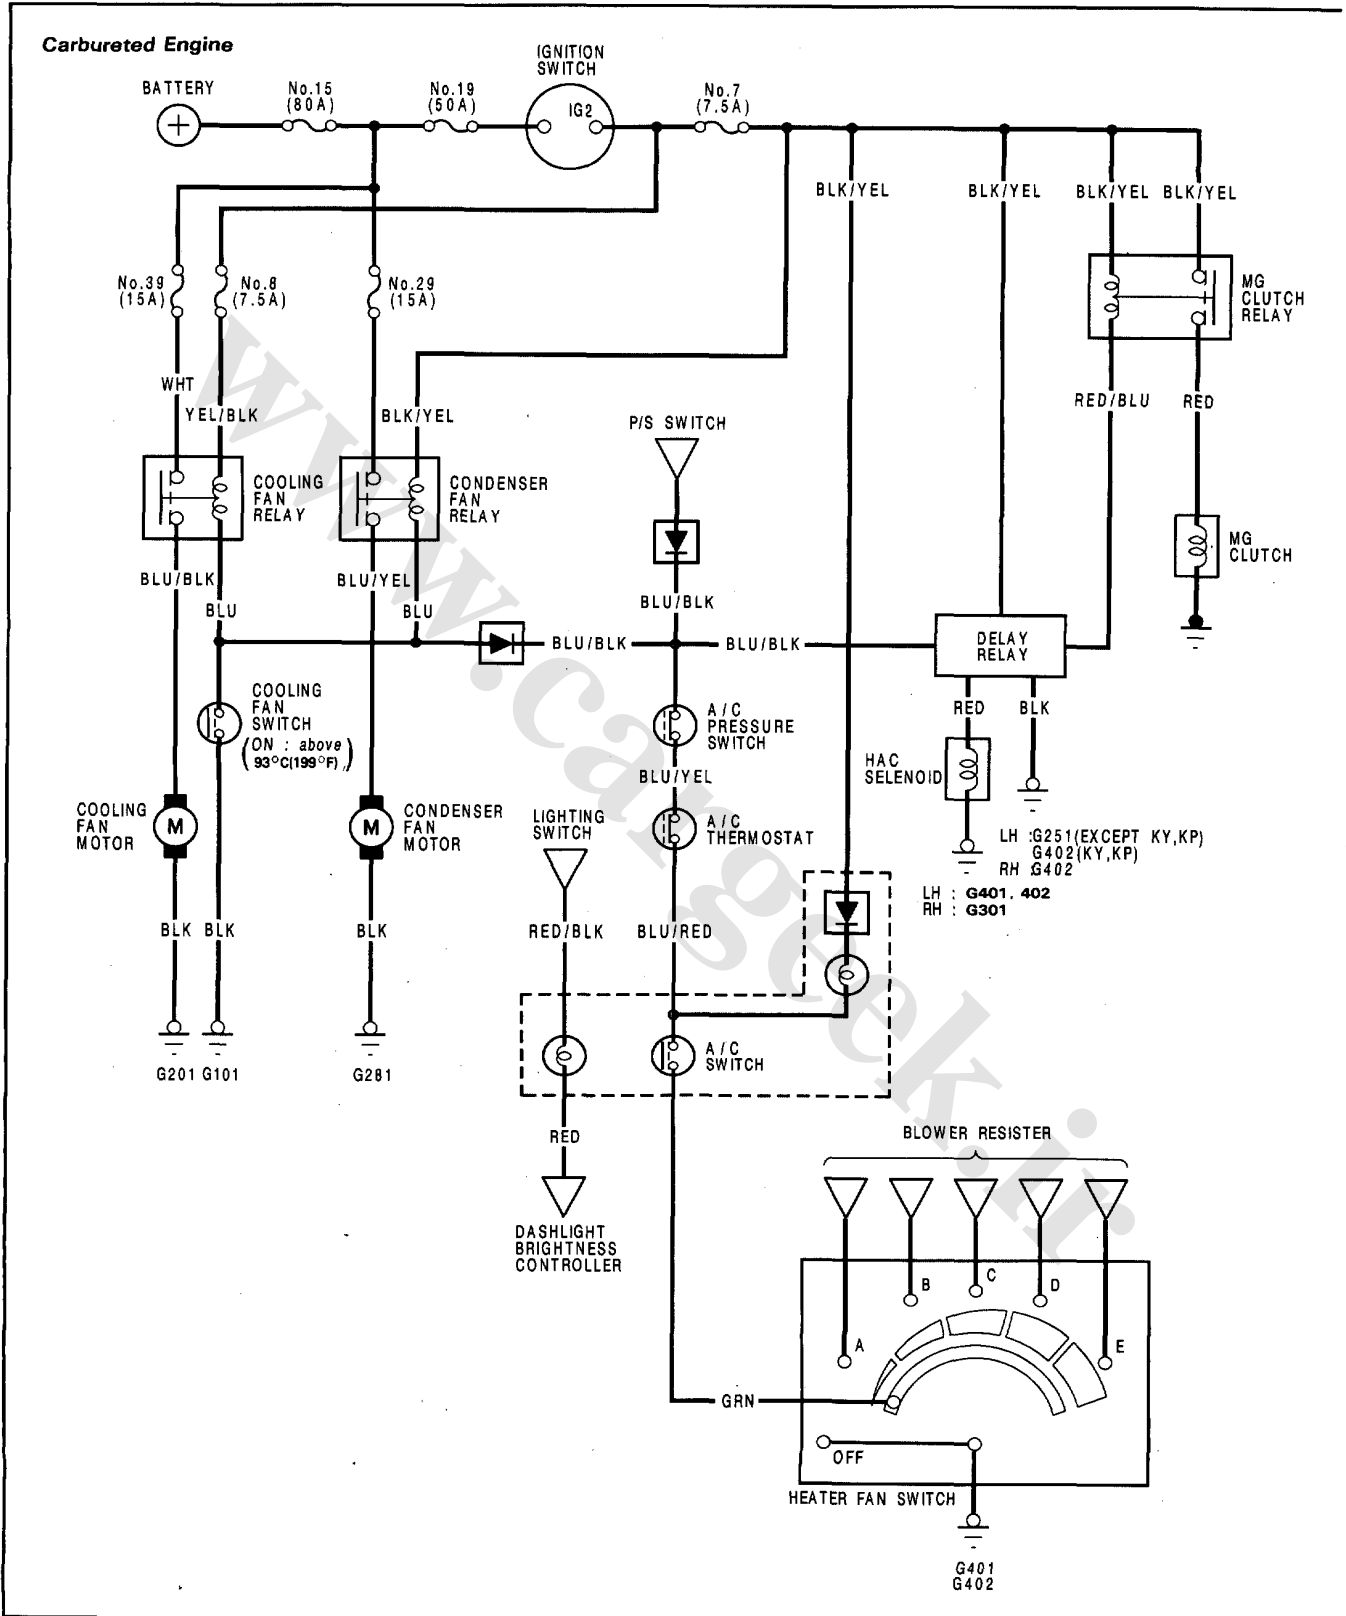




PGM-CARB Engine

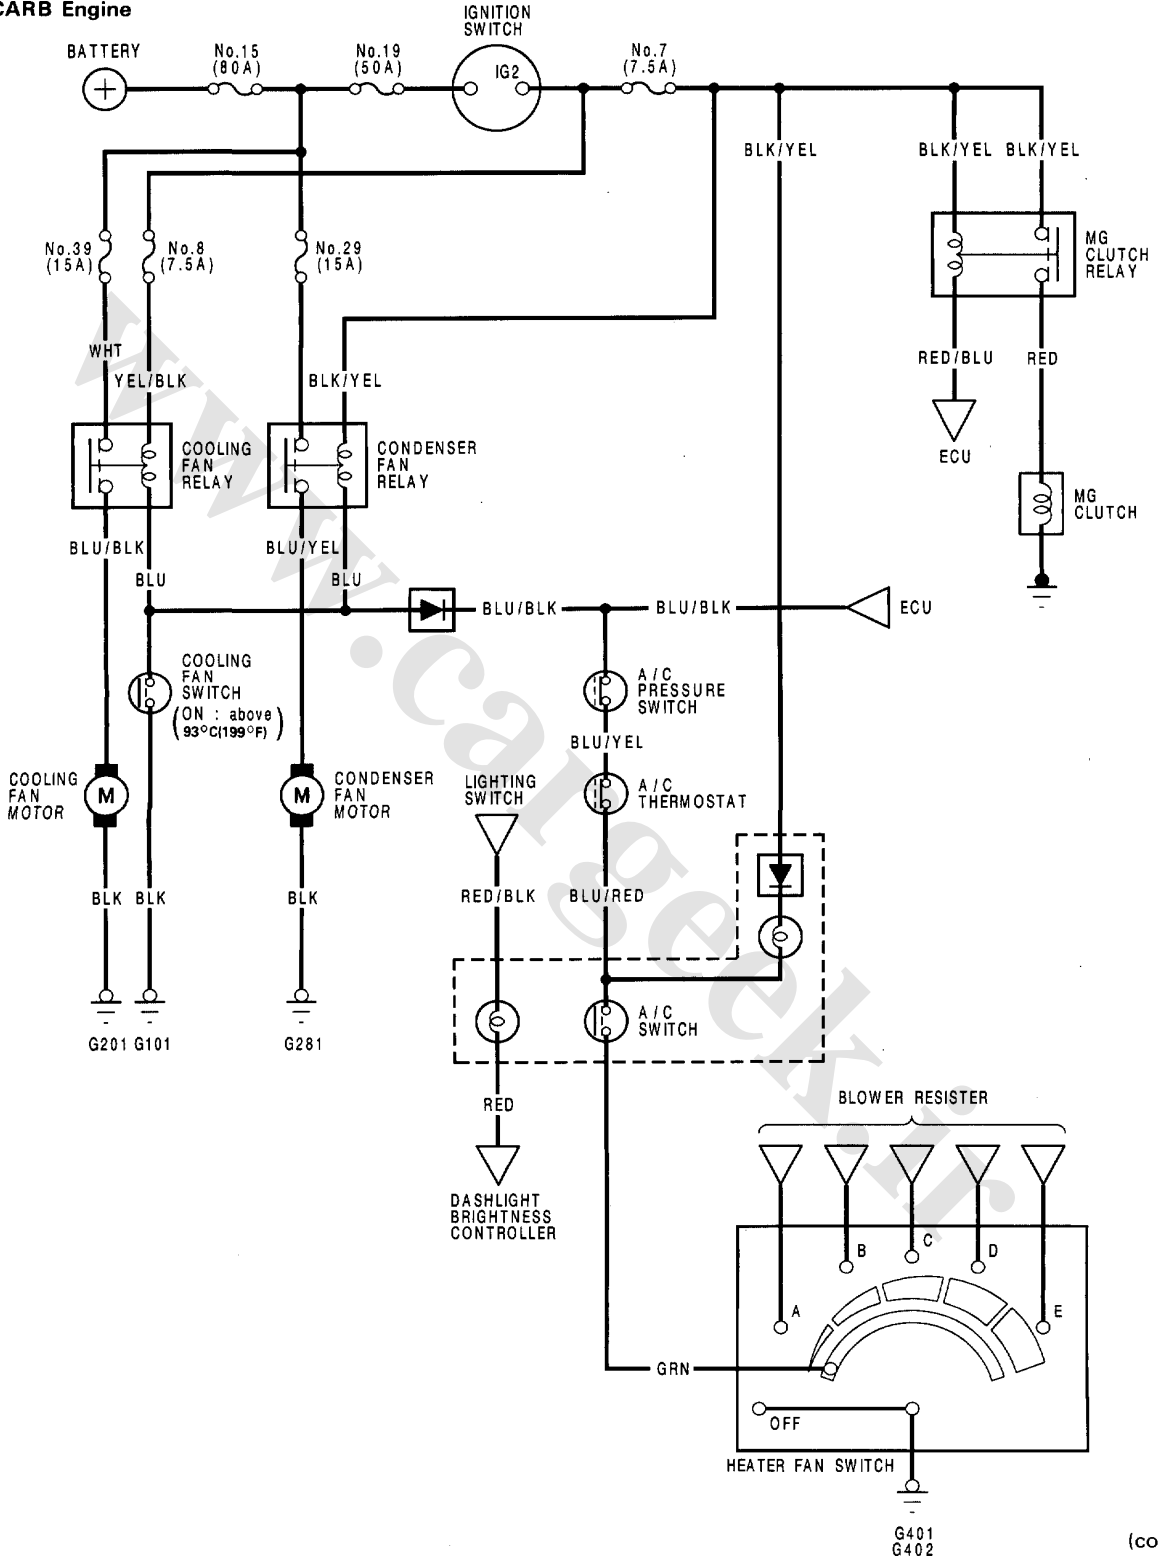


(cont'd)

Circuit Diagram (cont'd)

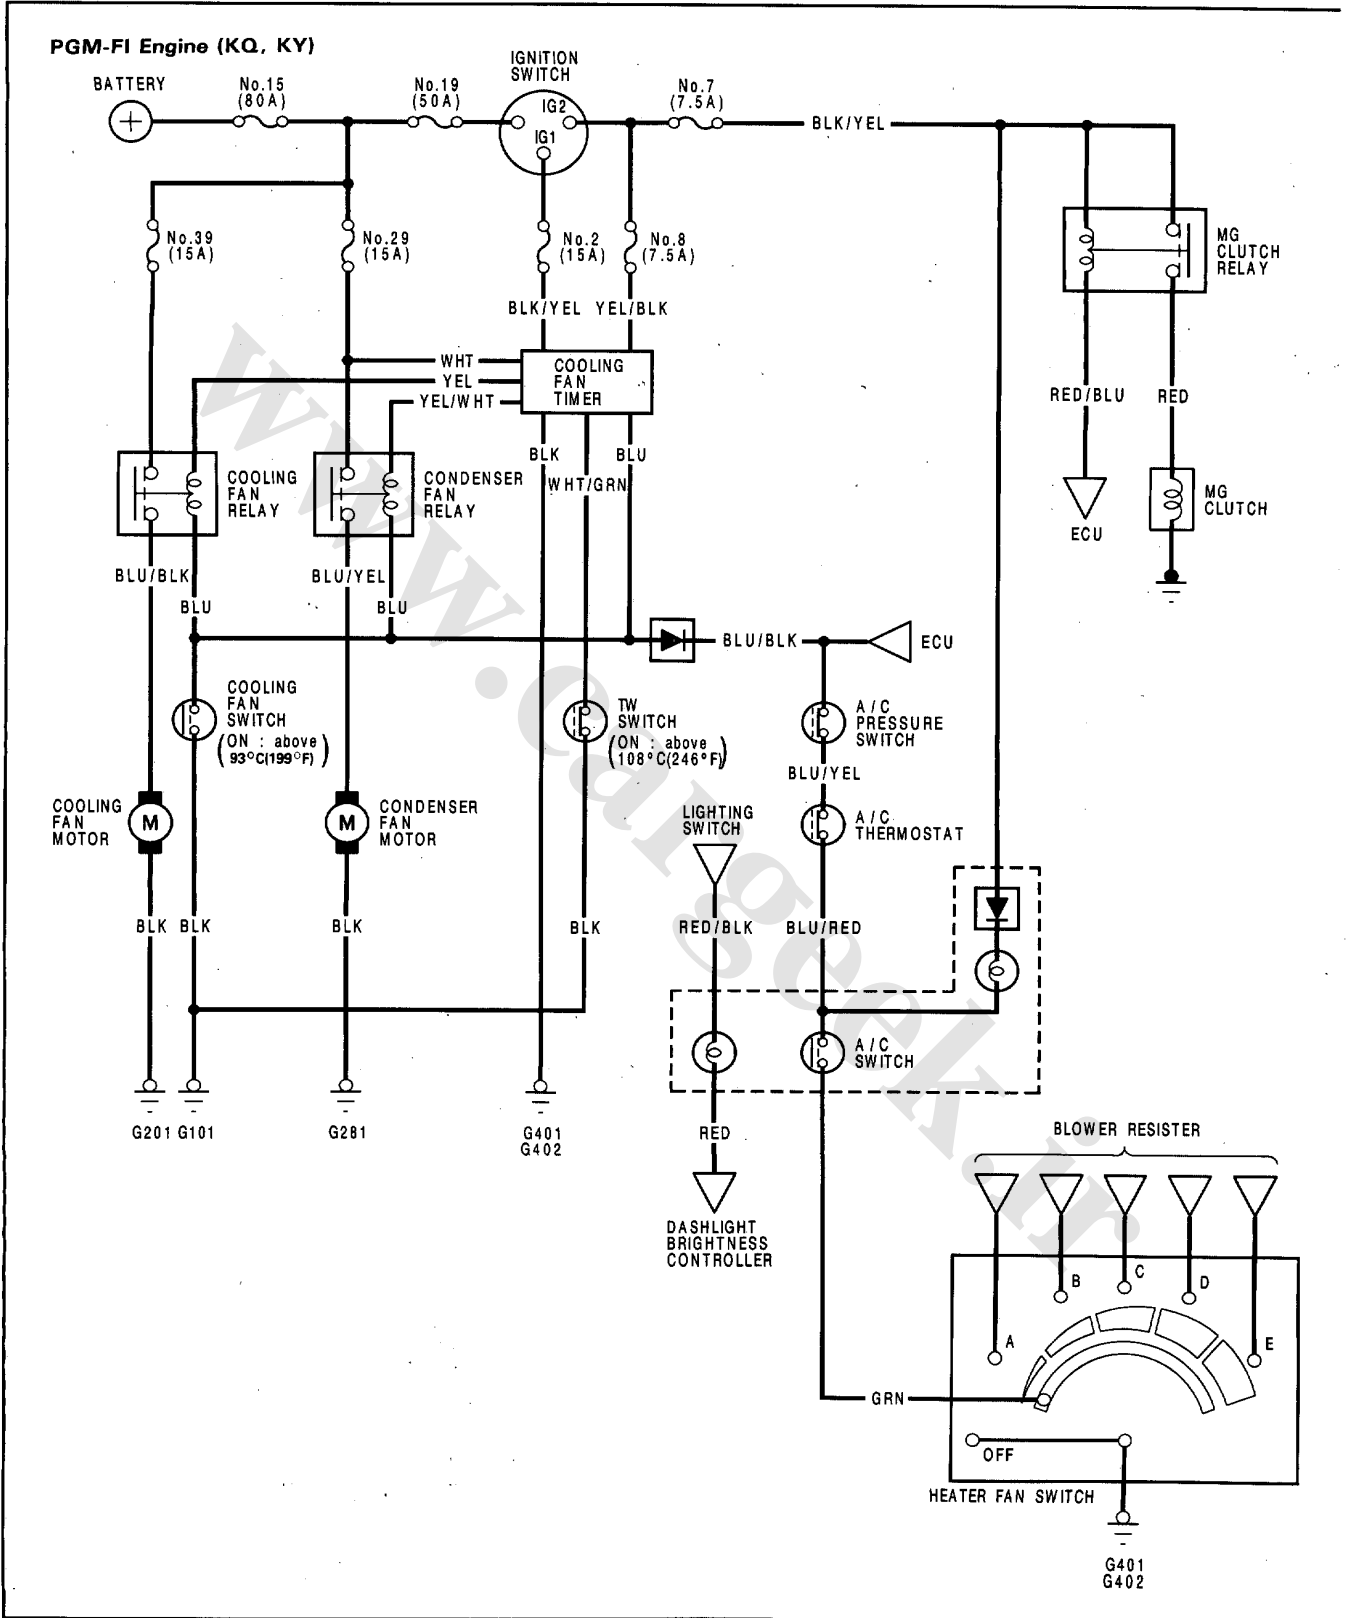





PGM-FI Engine (except: KQ, KY)

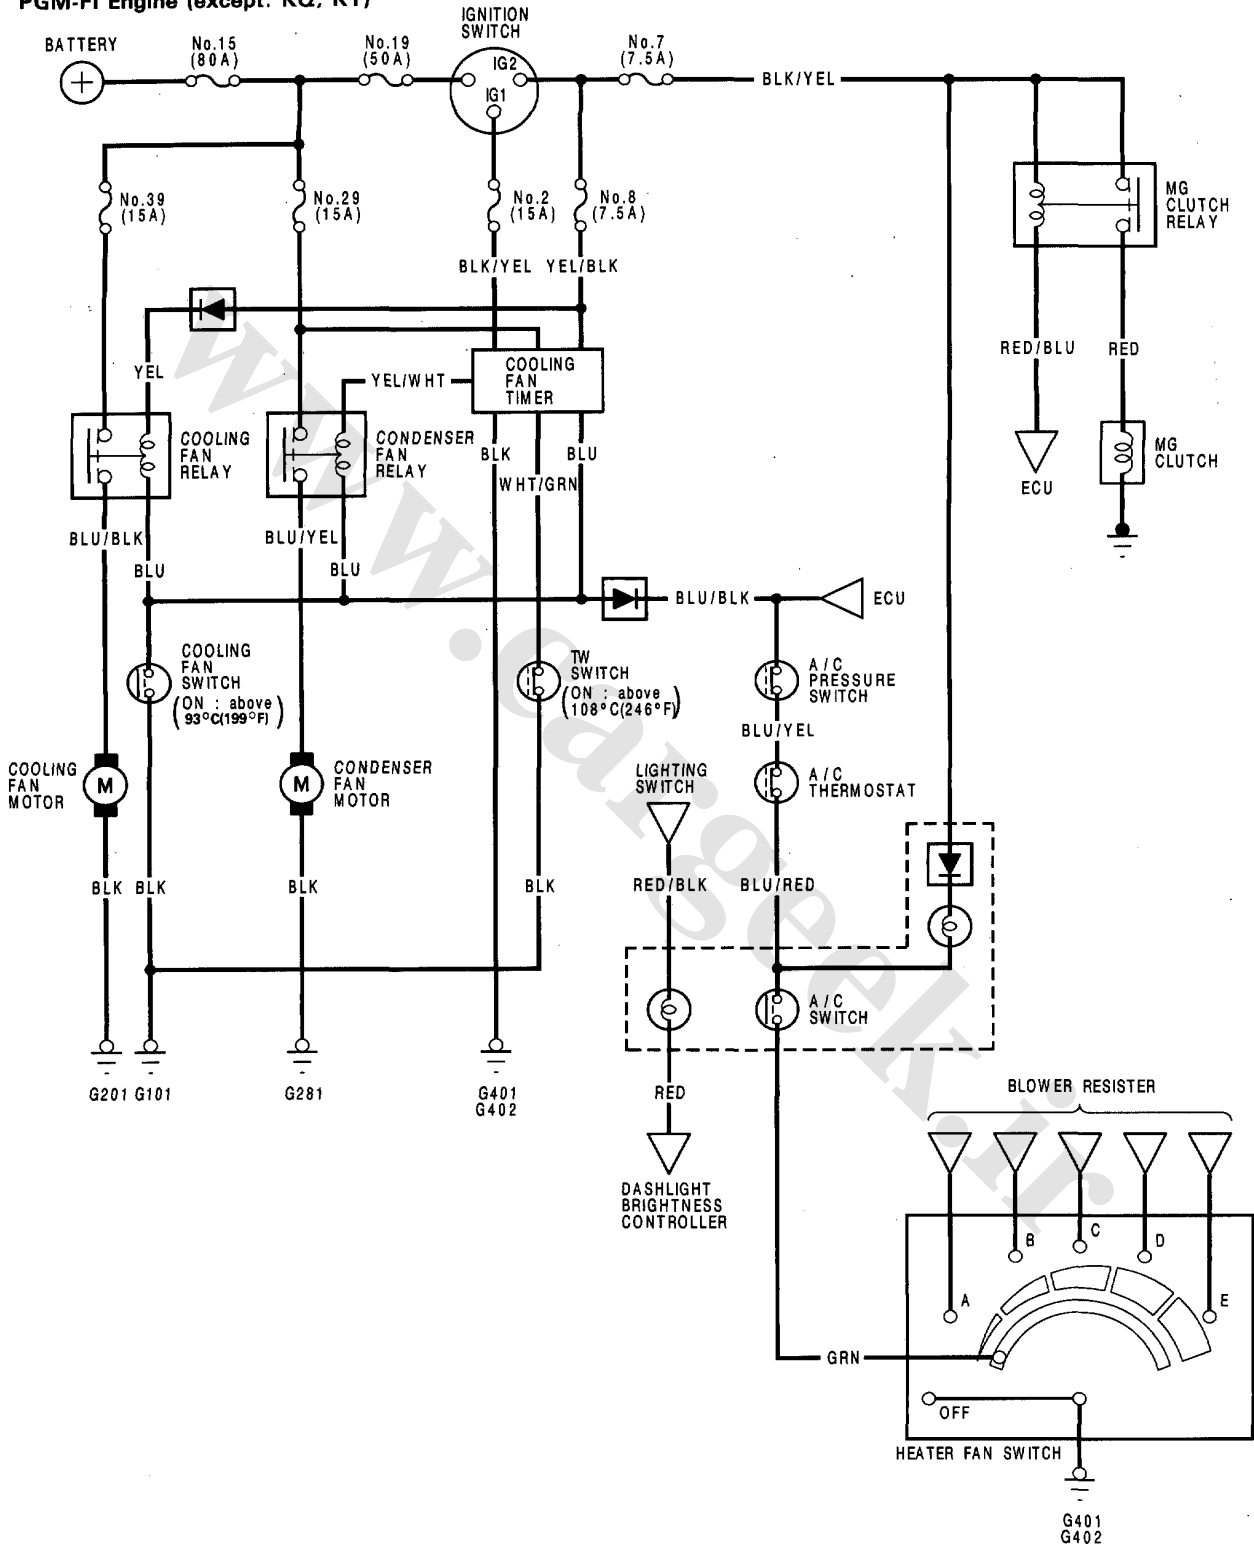

Wire Harness Routing

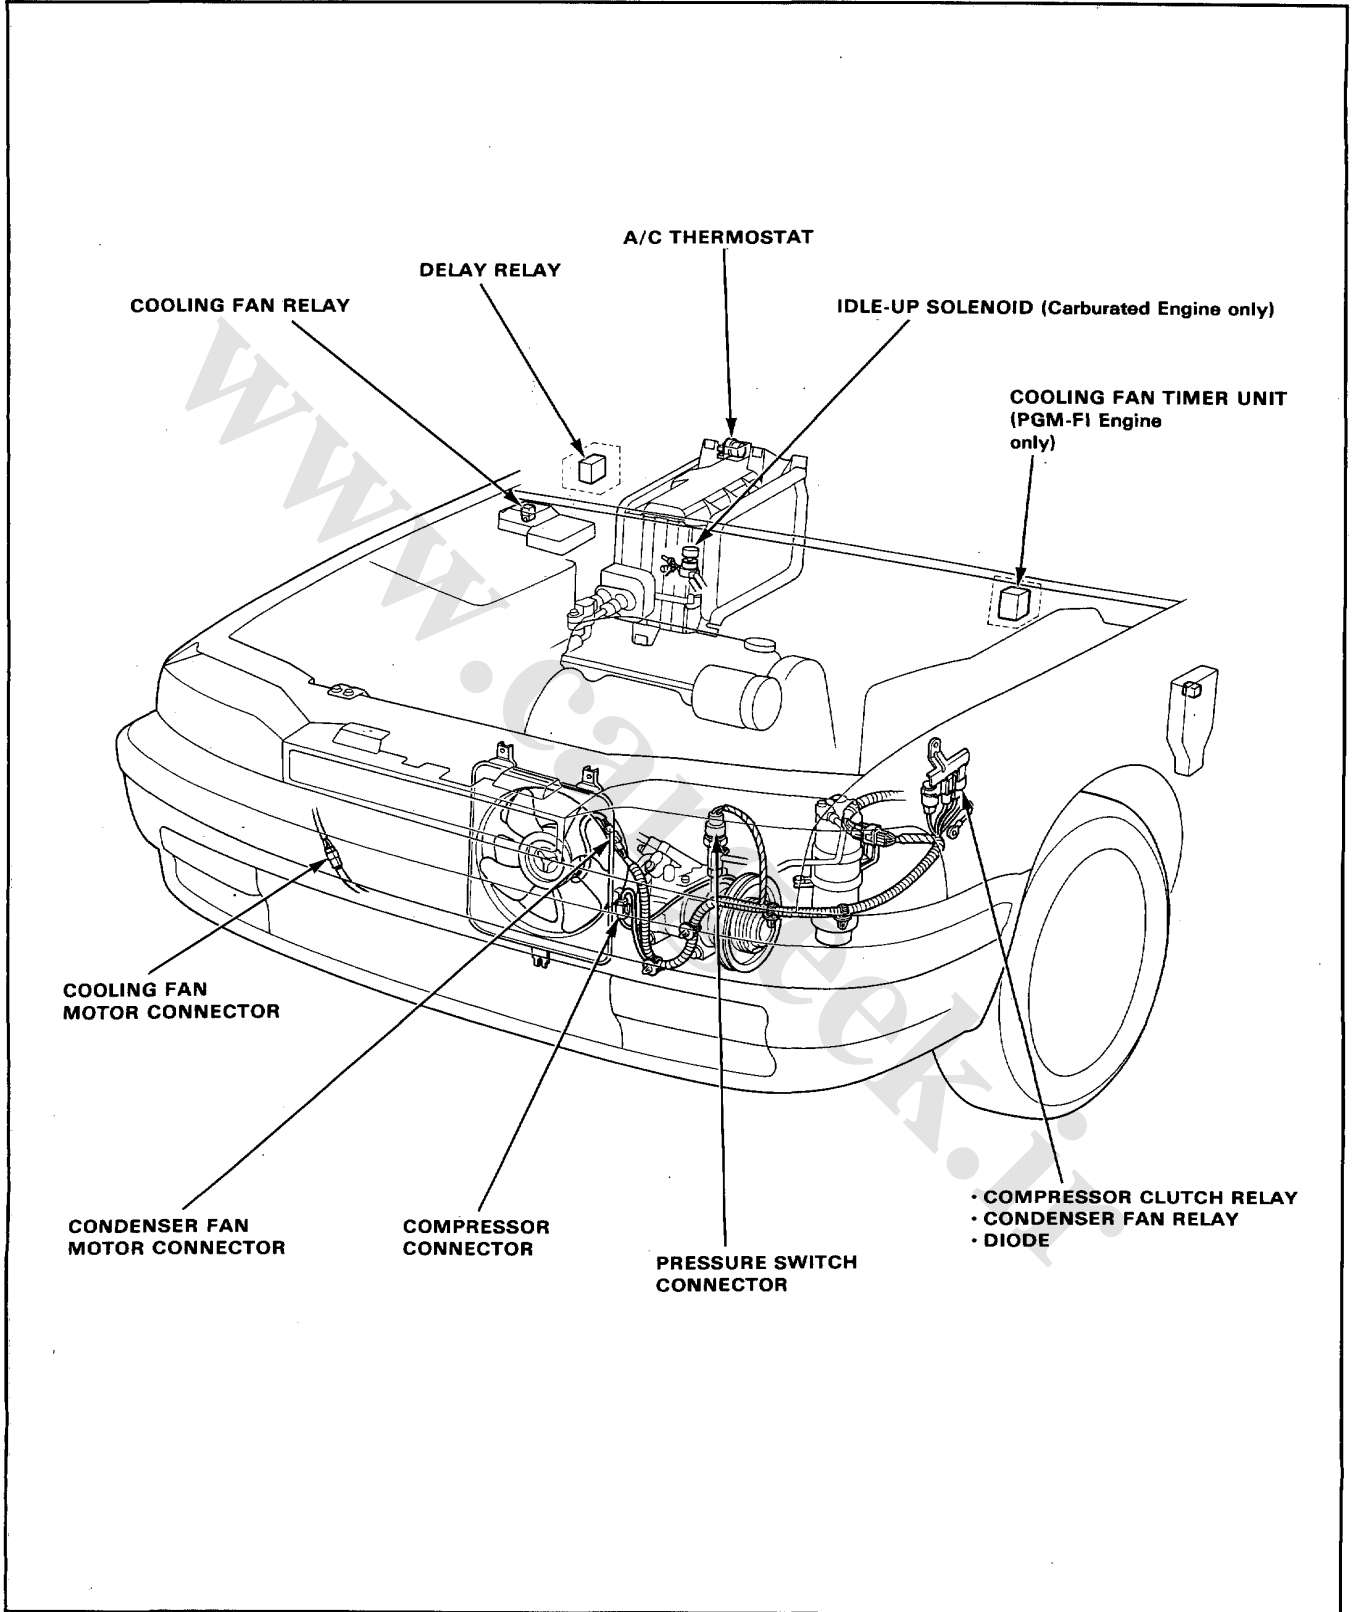



Troubleshooting

Symptom Chart

NOTE:

- Any abnormality must be corrected before continuing the test.
- Because of the precise measurements needed, use a voltmeter and ammeter when testing.

SYMPTOM	REMEDY
Cooling fan does not operate at all.	See flowchart (page 15-48)
Water temperature is too high when A/C system is not in use.	Check following: Faulty radiator fan switch Open BLK wire from the radiator fan switch to body ground or poor ground (G101)
Condenser fan does not operate at all.	See flowchart (page 15-51)
Both fans do not operate at all.	Check following: Faulty diode Open BLU/BLK wire from the diode to pressure switch
A/C system does not come on. Compressor and both cooling fans do not come on.	See flowchart (page 15-53)
Compressor does not come on. Both fans operate normally.	See flowchart (page 15-57)

COOLING FAN TIMER UNIT INPUTS TEST →15-61
PRESSURE TEST →15-85

Troubleshooting

Troubleshooting Flowchart — Cooling Fan

NOTE: Check for blown No.2 (15 A), No.39 (15 A), No.8 (7.5 A) fuse

Cooling fan does not operate at all.

Disconnect the cooling fan relay from the relay box.

Connect a fused jumper from ② terminal to ④ terminal.

Does cooling fan operate ?

YES — To page 15-49

NO

Connect voltmeter between ② terminal (+) and body ground (-).

Is battery voltage present ?

NO — Repair open WHT wire between No.39 (15 A) fuse and cooling fan relay.

YES

Disconnect the cooling fan motor connector.



Connect the voltmeter between BLU/BLK wire (+) BLK wire (-).


Is battery voltage present ?

NO — Replace the cooling fan motor.


YES

Repair open BLK wire between cooling fan motor and body ground or poor ground (G201).

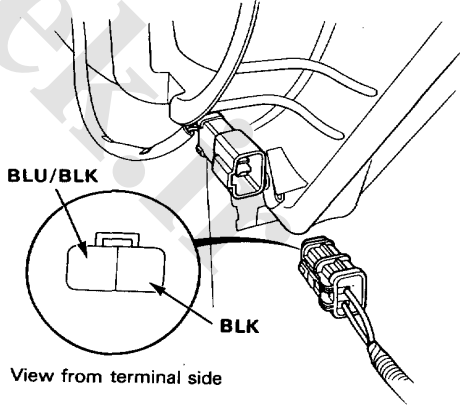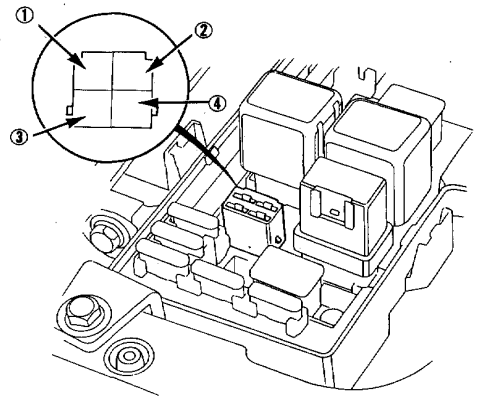



From page 15-49

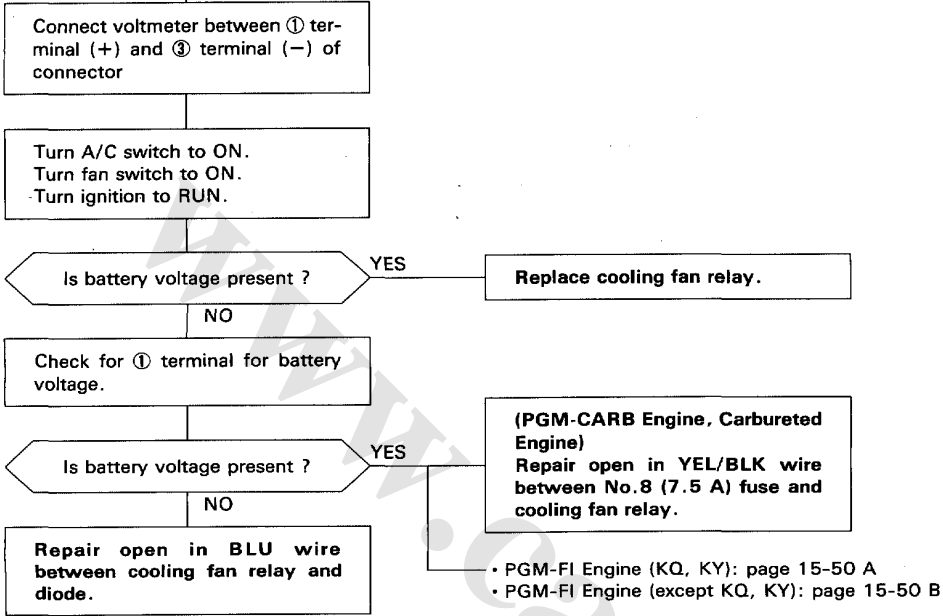

(cont'd)

Troubleshooting

Troubleshooting Flowchart — Cooling Fan (cont'd)

PGM-FI Engine (KQ, KY)
From page 15-49 A

Check for voltage on YEL wire at cooling fan timer unit.

Is battery voltage present ?

NO

See timer input test.
(page 15-61)

YES

Repair open YEL wire between cooling fan timer unit and cooling fan relay.

PGM-FI Engine (except KQ, KY)
From page 15-49 B

Disconnect 2-P connector from diode.

Measure voltage between YEL/BLK terminal (+) and body ground (-).

Is there battery voltage ?

NO

Repair open in YEL/BLK wire between No.8 (7.5 A) fuse and diode.

YES

Check for continuity between YEL/terminal and body ground.

Is there continuity ?

NO

Repair open YEL wire between diode and cooling fan relay.

YES

Replace diode.



Troubleshooting Flowchart — Condenser Fan

NOTE: Check for blown No.2 (15 A), No.29 (15 A), No.7 (7.5 A), No.8 (7.5 A) fuse

Condenser fan does not operate at all.

Disconnect the condenser fan relay connector.

Connect a fused jumper from WHT wire to BLU/GRN wire.

Does condenser fan operate ?

NO — To page 15-52 A

YES

Connect voltmeter between wire (PGM-FI Engine: YEL/WHT, PGM-CARB Engine, Carbureted Engine: BLK/YEL) (+) and BLU wire (-).

Turn A/C switch to ON.
Turn fan switch to ON.
Turn ignition to RUN.

Is battery to voltage present ?

YES — Replace condenser fan Relay.

NO

Connect voltmeter between PGM-FI Engine: YEL/WHT, PGM-CARB, Carbureted Engine: BLK/YEL wire (+) and body ground (-).

Is battery voltage present ?


NO — (PGM-CARB Engine, Carbureted Engine) Repair BLK/YEL wire

YES

Check BLU wire, or A/C diode for an open.

• PGM-FI Engine: page 15-52 B

PGM-FI Engine: YEL/WHT
PGM-CARB Engine,
Carbureted Engine: BLK/YEL

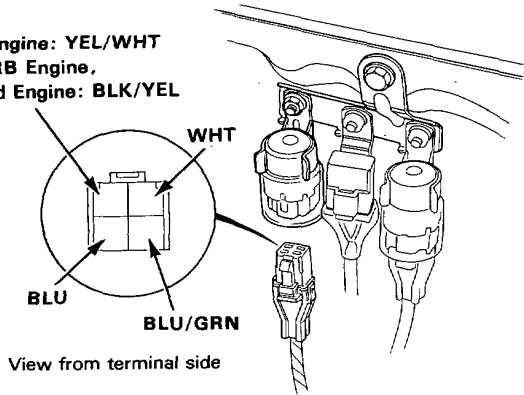

(cont'd)



Troubleshooting Flowchart — A/C System

NOTE: A/C compressor clutch will not come on without the engine running.

A/C System does not come on.

Turn ignition OFF.

Disconnect the 2-P connector from the pressure switch.

Turn the heater fan, A/C switch ON and start the engine.

Connect a jumper wire between the BLU/BLK terminal and body ground.

Do both fans and the compressor run ?

NO

Repair open in BLU/BLK wire between pressure switch and diodes.

YES


Connect a jumper wire between the BLU/BLK and BLU/YEL terminals.

Do both fans and the compressor run ?

YES

Check refrigerant pressure. If pressure good, replace A/C pressure switch.

NO

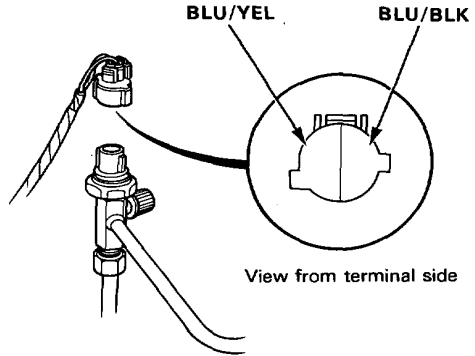

To page 15-54

(cont'd)

Troubleshooting

Troubleshooting Flowchart — A/C System (cont'd)

(From page 15-53)

Reconnect the 2-P connector to the pressure switch.

Disconnect the 2-P connector from the thermostat switch.

Connect a jumper wire between the BLU/YEL terminal and body ground.

Do both fans and the compressor run ?

NO

Repair open in BLU/YEL wire between pressure and thermostat switches.

YES

Connect a jumper wire between the BLU/YEL and BLU/RED terminals.

Do both fans and the compressor run ?

YES

Check evaporator temperature. If temperature is above 41 °F, replace A/C thermostat.


NO


Turn the ignition switch OFF.

Reconnect the 2-P connector to the thermostat switch.

Disconnect the connector (Button type: 14-P, lever type: 10-P) from the heater control panel.

(To page 15-55)

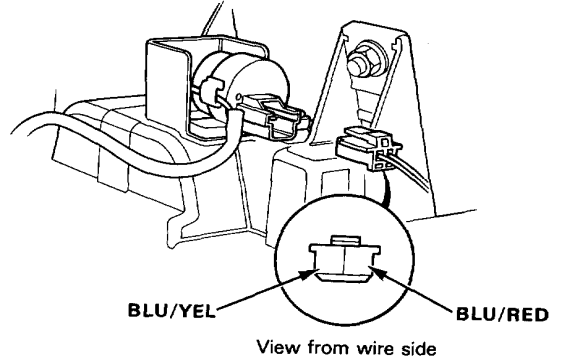



(From page 15-54)

Connect a jumper wire between the BLU/RED terminal and body ground.

Start the engine.

Do both fans and the compressor run ?

NO

Repair open in BLU/RED wire between the thermostat and A/C switch.

YES

Connect a jumper wire between the BLU/RED and GRN terminals.

Do both fans and the compressor run ?

YES

Inspect the A/C switch. (page 15-36)


NO

Reconnect the connector (button type: 14-P, lever type 10-P) to the heater control panel and turn A/C switch ON.

Disconnect the 8-P connector from the fan switch.

Connect a jumper wire between the GRN terminal and body ground.

(To page 15-56)

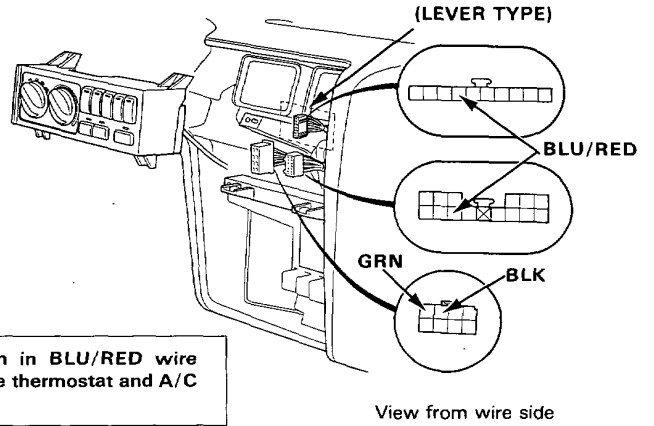


www.CarGeek.ir

(cont'd)

Troubleshooting

Troubleshooting Flowchart — A/C System (cont'd)

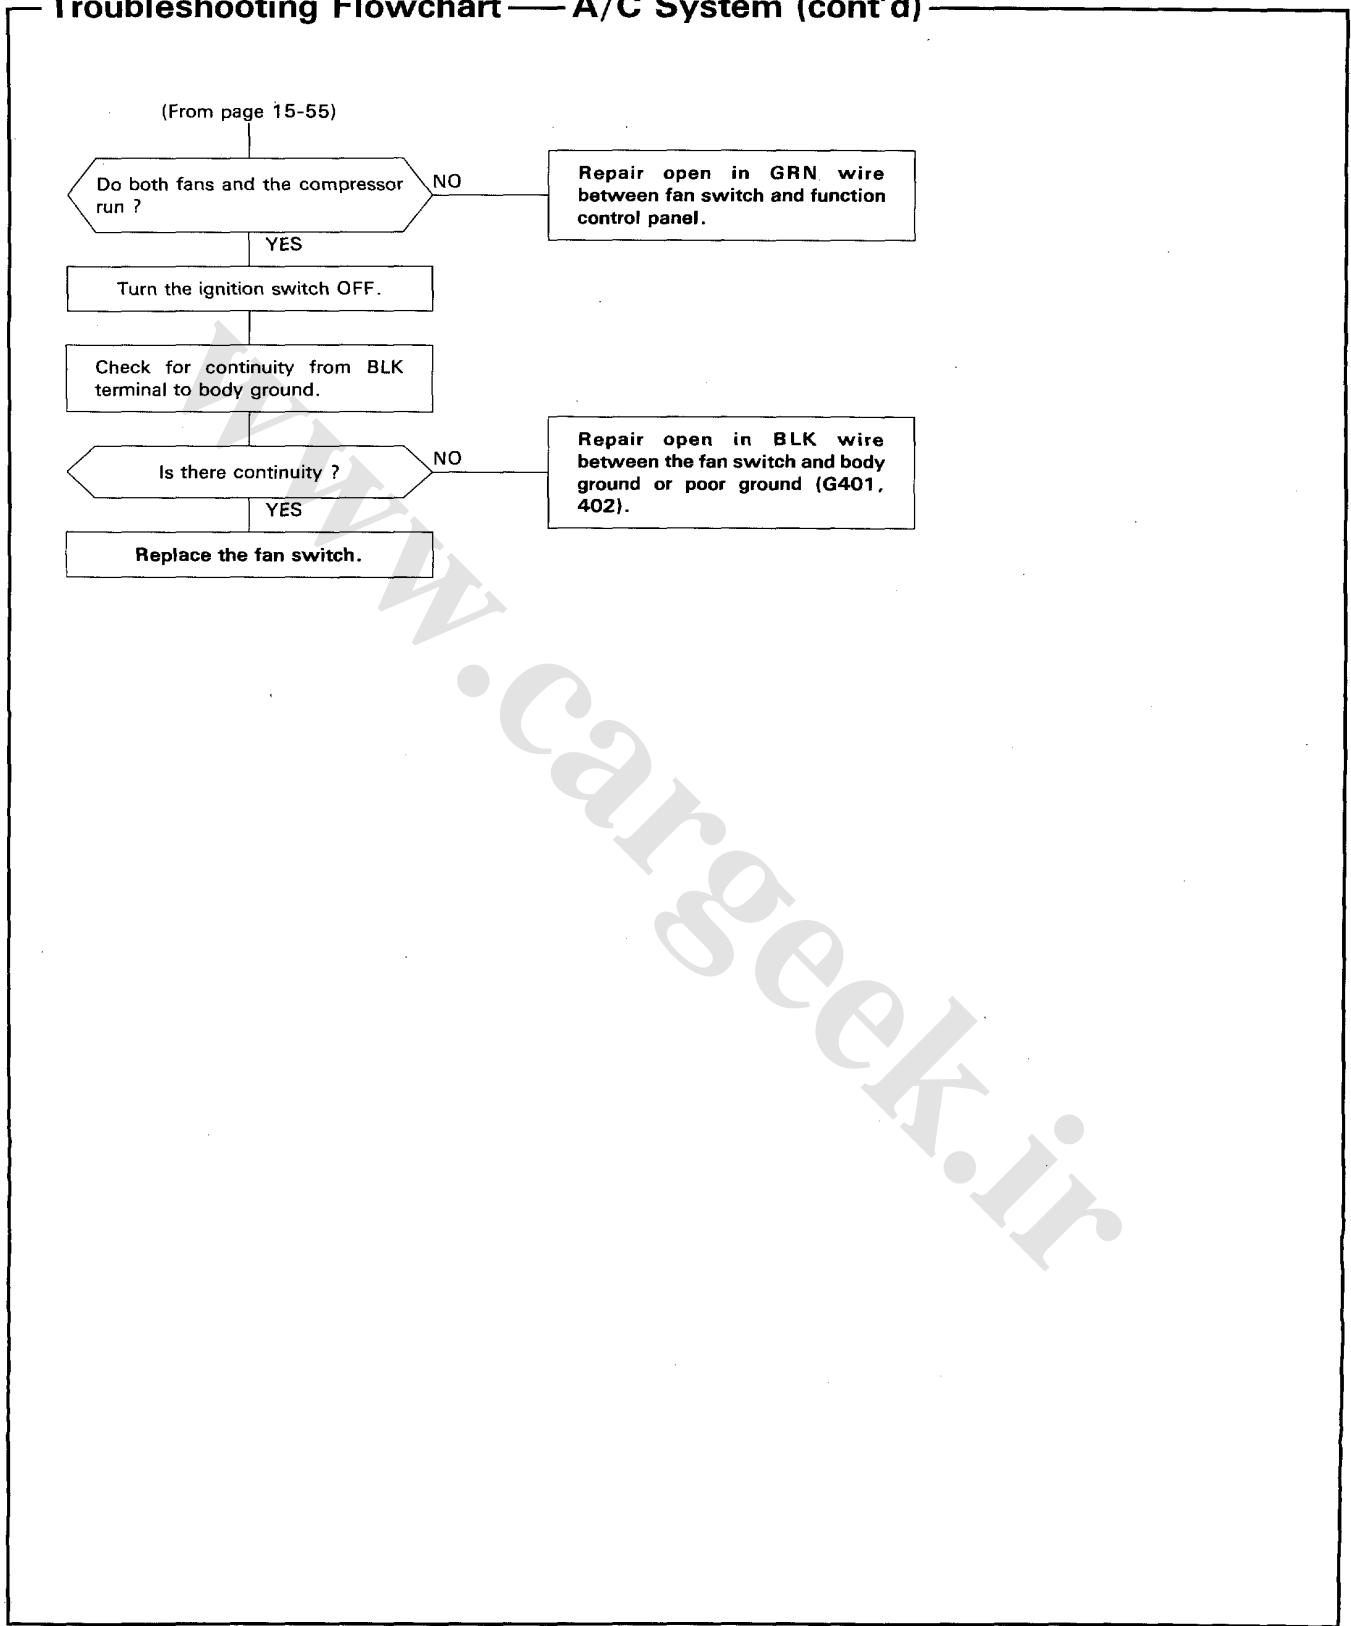



Troubleshooting Flowchart — Compressor

NOTE: Check for blown No.7 (7.5 A) fuse

Compressor does not come on.

Disconnect the 4-P connector from the compressor clutch relay.

Measure voltage between the BLK/YEL 1 terminal (+) and body ground.

Turn the ignition switch on.

Is there battery voltage ?

NO

Repair open in BLK/YEL wire between the No.7 (7.5 A) and compressor clutch relay.

YES

Measure voltage between the BLK/YEL 2 terminal (+) and body ground.

Is there battery voltage ?

NO

Repair open in BLK/YEL wire between the No.7 (7.5 A) and compressor clutch relay.

YES

Connect the jumper wire between the BLK/YEL 1 terminal and RED terminal.

Does the compressor clutch engage ?


NO

Turn the ignition OFF and Reconnect the 4-P connector to the compressor clutch relay.

YES

PGM-FI, PGM-CARB Engine: To page 15-58
Carbureted Engine: To page 15-59

(To page 15-60)

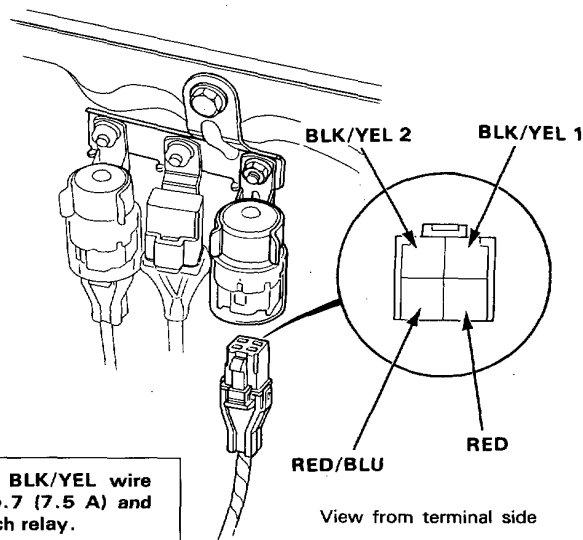

(cont'd)

Troubleshooting

Troubleshooting Flowchart — Compressor (cont'd)

<PGM-FI, PGM-CARB Engine>

(From page 15-57)

Turn the ignition switch OFF and reconnect 4-P connector to the compressor clutch relay.

Turn the ignition switch ON, and connect a jumper wire between RED/BLU terminal and body ground.


Does the compressor clutch engage?

NO — Replace the compressor clutch relay.

YES

Turn the ignition switch OFF and disconnect PGM-FI, PGM-CARB ECU connector and connect the PGM-FI ECU test harness.

Turn the ignition switch ON and connect a jumper wire between A15 (PGM-FI) or A19 (PGM-CARB) terminal and body ground.

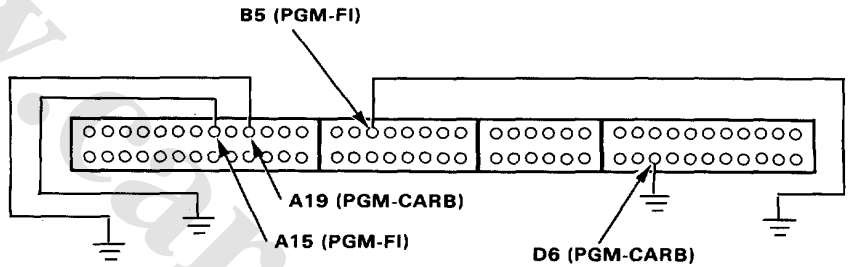

Does the compressor clutch engage?

NO — Repair open in RED/BLU wire between the compressor clutch relay and ECU.

YES

Disconnect a jumper wire and connect a jumper wire between B5 (PGM-FI) or D6 (PGM-CARB) terminal and body ground.

Does the compressor clutch engage?

NO — Repair open in BLU/BLK wire between A/C pressure switch and ECU.

YES

Substitute a Known- good ECU and recheck. If prescribed voltage is now available, replace the original ECU.



<Carbureted Engine>

(From page 15-57)

Turn the ignition switch OFF and reconnect 4-P connector to the compressor clutch relay.

Turn the ignition switch ON, and connect a jumper wire between RED/BLU terminal and body ground.

Does the compressor clutch engage?

NO
Replace the compressor clutch relay.

YES

Disconnect 6-P connector from the delay control unit.

Connect a jumper wire between RED/BLU terminal and body ground.

Does the compressor clutch engage?

NO
Repair open in RED/BLU wire between compressor relay and delay control unit.

YES

Measure voltage between the BLK/YEL terminal (+) and body ground (-).

Is there battery voltage?

NO
Repair open in BLK/YEL wire between the No.7 (7.5 A) fuse and delay control unit.

YES

Check the continuity between BLK terminal and body ground.

Is there continuity?

NO
Repair open in BLK wire between delay control unit and body ground or poor ground.

YES


Check the continuity BLU/BLK terminal between delay control unit and body ground. Then A/C, heater fan switches ON.

Is there continuity?

NO
Repair open in BLU/BLK wire between delay control unit and body ground.

YES

Faulty delay control unit.

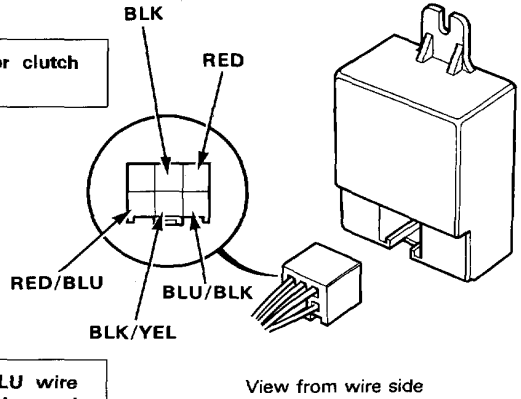

(cont'd)

Troubleshooting

Troubleshooting Flowchart — Compressor (cont'd)

(From page 15-57)

Disconnect the RED terminal from compressor and turn the ignition switch on.

Measure voltage between the RED terminal (+) and body ground.


Is there battery voltage ?

NO

YES

Replace the compressor clutch.

Repair open in RED wire between the compressor clutch relay and compressor clutch connector.

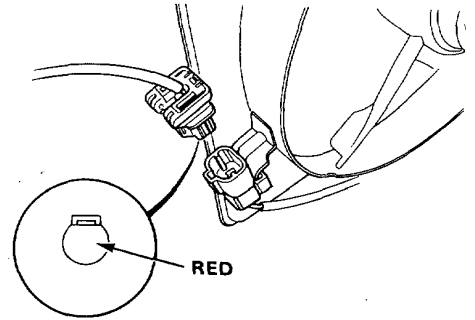


View from terminal side



Cooling Fan Timer Unit Input Tests

NOTE:

Perform the following tests with the cooling fan timer connected and the ignition switch ON. Correct any abnormality before continuing.

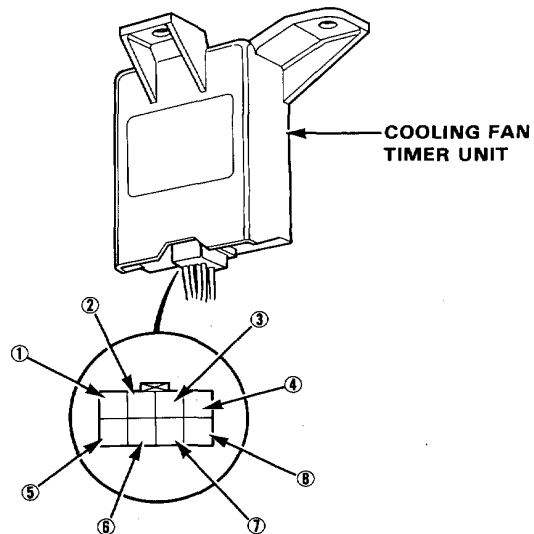

WIRE POSITION	TEST CONDITION	DESIRED RESULTS	CORRECTIVE ACTION IF DESIRED RESULTS ARE NOT OBTAINED
④BLK	Check for continuity to body ground.	Should have continuity.	Repair open to body ground.
⑥WHT	Check for battery voltage	Should have battery voltage.	Check No.29 fuse, if OK repair open in WHT wire.
⑦BLK/YEL	Check for battery voltage (Ignition switch-ON)		Check No.2 fuse, if OK repair open in BLK/YEL wire.
②YEL/BLK	Check for battery voltage (Ignition switch-ON)		Check No.8 fuse, if OK repair open in YEL/BLK wire.
①YEL/WHT	Check for battery voltage.		Replace cooling fan timer unit.
③YEL	Check for battery voltage.		Replace cooling fan timer unit.
⑧BLU	Connect to body ground.	Condenser fan and cooling fan should come on.	Check for open in BLU between cooling fan timer and condenser fan relay or cooling fan relay. If OK, check for open YEL/WHT between cooling fan timer and condenser fan relay or YEL between cooling fan timer and cooling fan relay. If OK, test condenser fan relay or cooling fan relay.
⑤WHT/GRN	Check for voltage.	Approx 11V (water-temperature below 108 °C)	Faulty water temp switch, short to body ground or faulty cooling fan timer unit.

Service Tips

▲WARNING When handling refrigerant (R-12):

- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes; if it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (cans of R-12) stored below 40 °C (100 °F).
- Do not handle or discharge refrigerant in an enclosed area near an open flame; it may ignite and produce a poisonous gas.

CAUTION:

1. Always disconnect the negative cable from the battery whenever replacing air conditioner parts.
2. Keep moisture and dust out of the system. When disconnecting any lines, plug or cap the fittings immediately; don't remove the caps or plugs until just before the lines are reconnected.
3. Before connecting any hose or line, apply a few drops of refrigerant oil to the seat of the O-ring or flare nut.
4. When tightening or loosening a fitting, use a second wrench to support the matching fitting.
5. When discharging the system, don't let refrigerant escape too fast; it will draw the compressor oil out of the system.

6. Add refrigerant oil after replacing the following parts;

Condenser10 cc (1/3 fl oz)


Evaporator25 cc (5/6 fl oz)

Line or hose.....10 cc (1/3 fl oz)

Receiver10 cc (1/3 fl oz)

CompressorOn compressor replacement, subtract the volume of oil drained from the removed compressor from 100 cc (3 1/3 fl oz), and drain the calculated volume of oil from the new compressor:


100 cc (3 1/3 fl oz) - Volume of removed compressor = Draining volume.

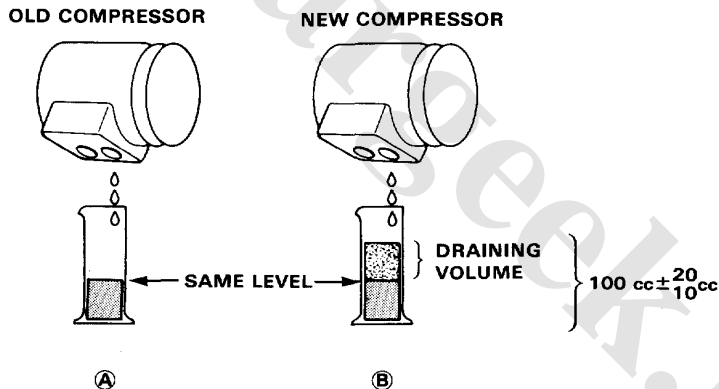

7. Before charging the system, it is necessary to evacuate the system.
8. Charge the system with the correct quantity of refrigerant exactly.
 - Avoid discharging with the refrigerant unnecessarily.
 - When using an auto gas charger, operate it according to the manufacturer's instructions.
9. Check that the cooling fan motor runs when turning the A/C switch and fan switch ON.



10. Torque Specifications.

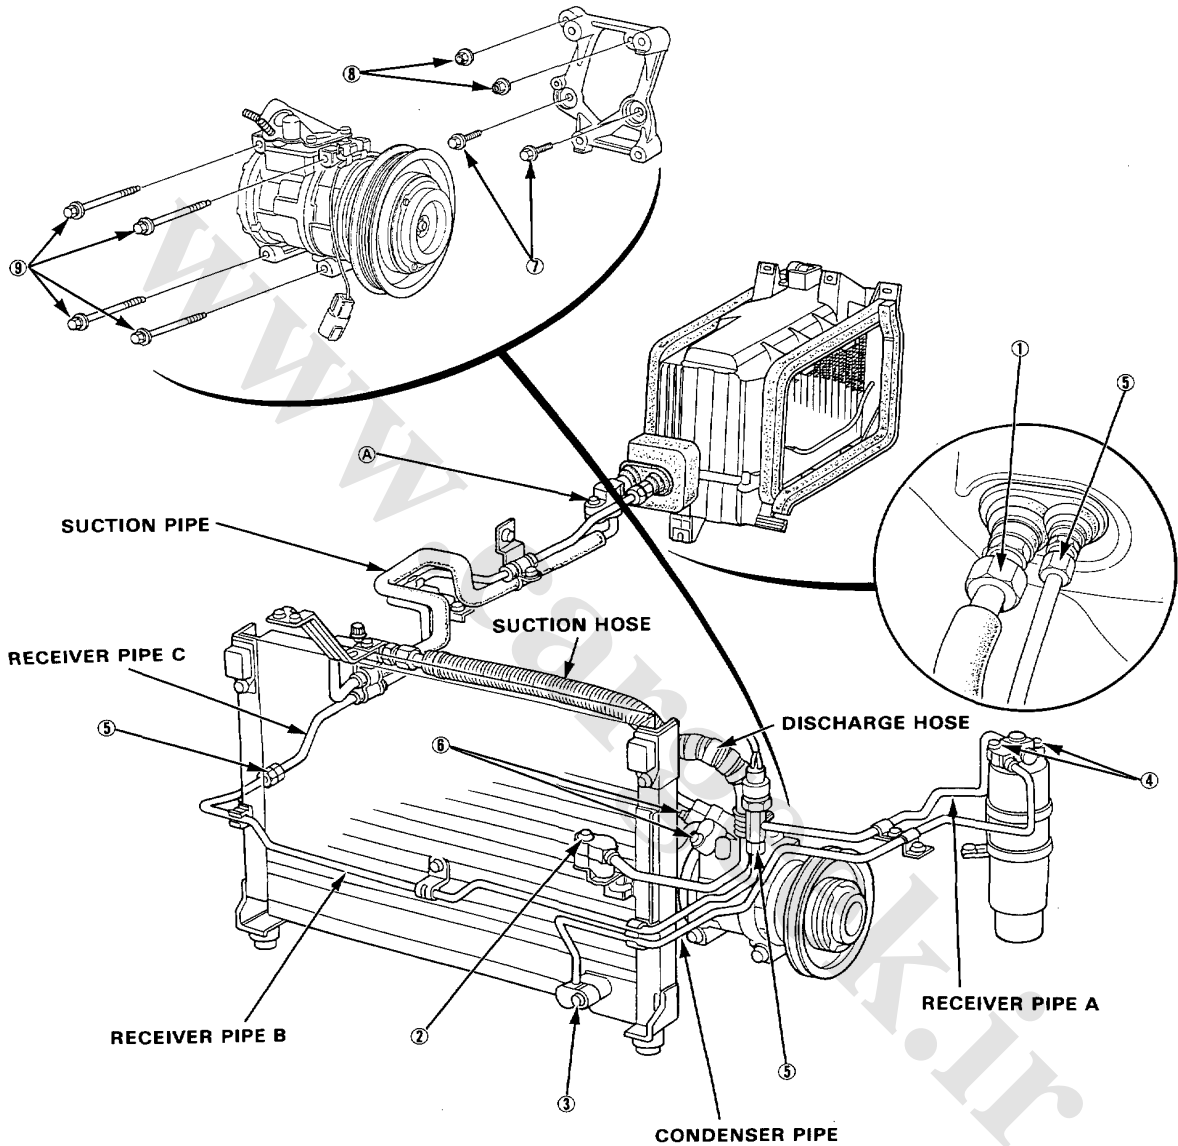

- ① Suction hose (evaporator side)32 N·m (3.2 kg-m, 23 lb-ft) [(A) with ALB 30 N·m (3.0 kg-m, 22 lb-ft)]
- ② Discharge hose to condenser22 N·m (2.3 kg-m, 16 lb-ft)
- ③ Condenser pipe to condenser22 N·m (2.3 kg-m, 16 lb-ft)
- ④ Receiver tank17 N·m (1.7 kg-m, 12 lb-ft)
- ⑤ Receiver pipe A, B, C (both side)17 N·m (1.7 kg-m, 12 lb-ft)
- ⑥ Compressor hose mounting bolts30 N·m (3.0 kg-m, 22 lb-ft)
- ⑦ Compressor bracket mounting bolts (10 x 35)50 N·m (5.0 kg-m, 36 lb-ft)
- ⑧ Compressor bracket mounting nut (8 mm)50 N·m (5.0 kg-m, 36 lb-ft)
- ⑨ Compressor mounting bolts (8 x 94)25 N·m (2.5 kg-m, 18 lb-ft)

Belt Tension

Compressor Belt



- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.

NOTE: Check for belt damage. if necessary, replace the belt.

Belt tension [mm/10 kg]	
New belt	Used belt
8.5~11	10~12

Using ND tension gauge:

Belt tension [kg]	
New belt	Used belt
95~115	45~60

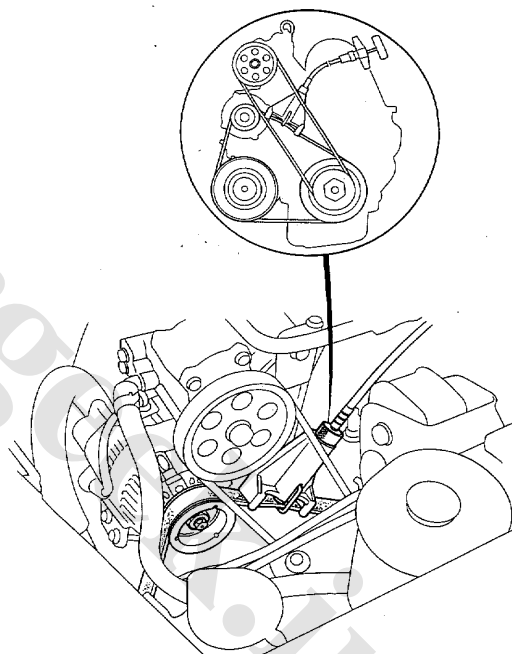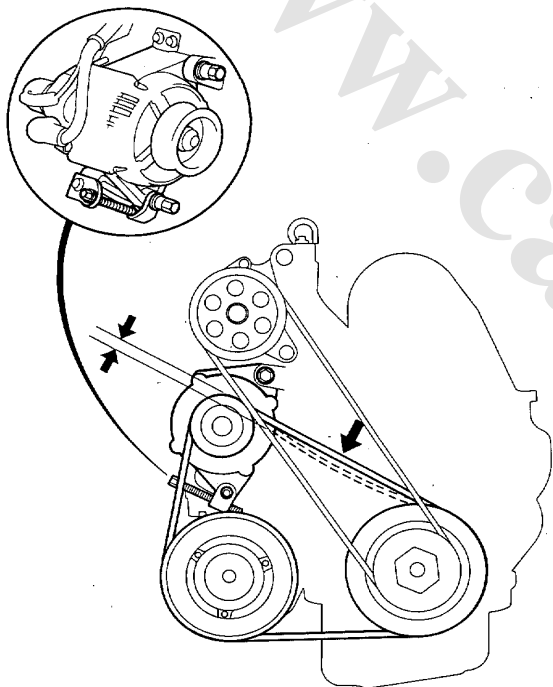



Power Steering Belt



- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.

NOTE: Check for belt damage. if necessary, replace the belt.

Belt tension [mm/10 kg]	
New belt	Used belt
9.5~11.5	12.5~16



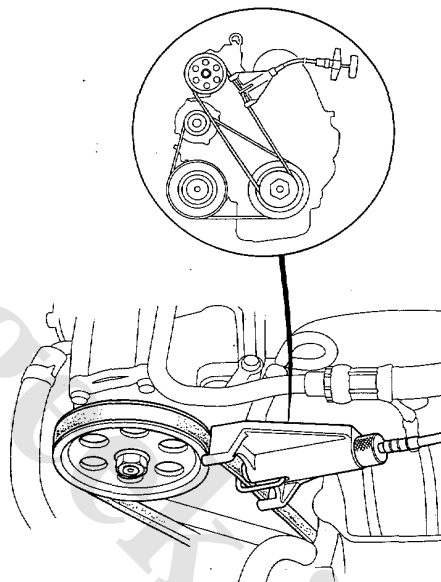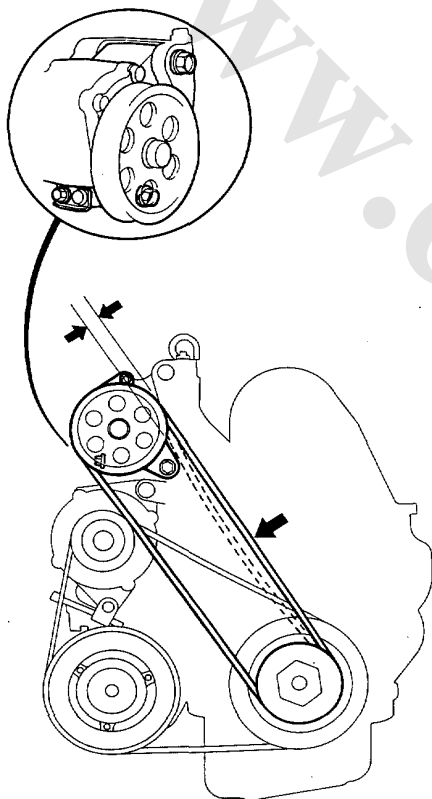

Using ND tension gauge:




Belt tension [kg]	
New belt	Used belt
70~90	35~50



Performance Test

The performance test will help determine if the air conditioning system is operating within specifications.

1. Attach the gauge and pump as shown, connecting the center charging hose to the pump inlet. To purge air from the hose loosen both charging hoses fitting at the stop valves, until they hiss for a few seconds, then tighten them again.
2. Start the pump, then open both gauge valves and the evacuate valve (2 valve gauge: evacuate stop valve). The low gauge should indicate above 700 mmHg (27in-Hg), then run the pump about 1 minute.
3. Close both valves and the evacuate valve (2 valve gauge: evacuate stop valve) and stop the pump. Open both stop valves.
4. Insert a thermometer in the vent outlet. Determine the relative humidity and ambient air temperature by a portable weather station or calling the local weather station.
5. Test conditions:
 - Avoid direct sunlight.
 - Open engine hood.
 - Open front doors.
 - (button type)
Set the temperature control dial to COLD and push  and  buttons.
(lever type)
Slide the temperature control lever to COLD and the function control lever to  and push  buttons.
 - Turn the fan switch to MAX.
 - Turn the A/C switch ON.
 - Run the engine at 1,500 RPM.
 - No driver or passengers in vehicle.
6. After running the air conditioning for 10 minutes under the above test conditions, read the delivery temperature from the thermometer in the dash vent and the high and low system pressure from the A/C gauges.
7. To complete the charts:
 - Mark the delivery temperature along the vertical line.
 - Mark the intake temperature (ambient air temperature) along the bottom line.
 - Draw a line straight up from the air temperature to the humidity.
 - Mark a point one line above and one line below the humidity level. (10 % above and 10 % below the humidity level)
 - From each point, draw a horizontal line across to the delivery temperature.
 - The delivery temperature should fall between the two lines.
 - Complete the low side pressure test and high side pressure test in the same way.
 - Any measurements outside the line may indicate the need for further inspection.

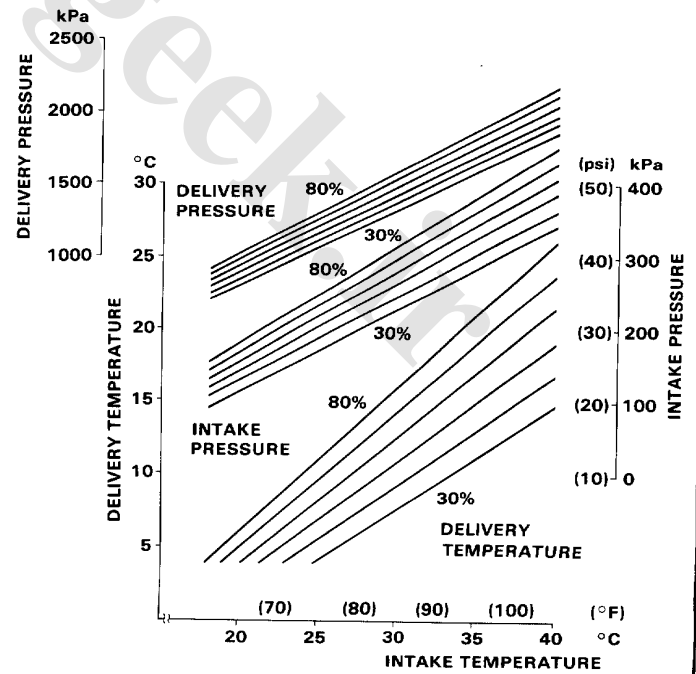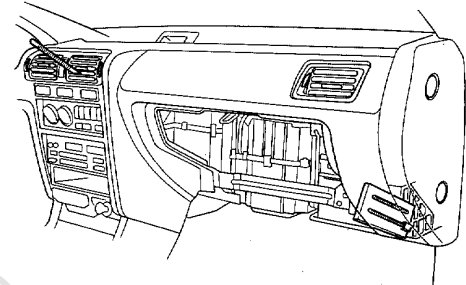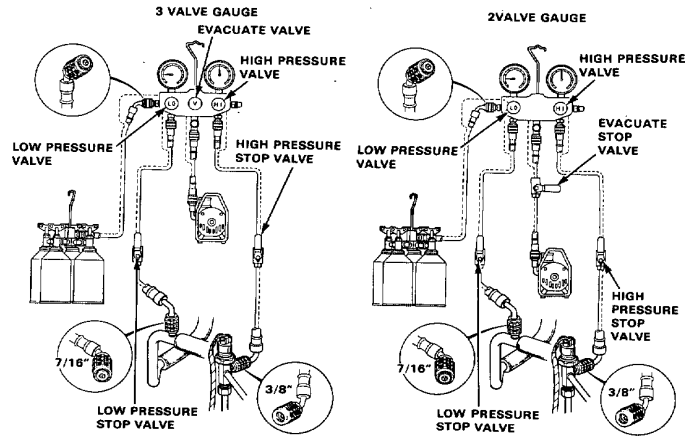




Evaporator


Replacement

1. Disconnect the battery negative terminal.
2. Discharge the refrigerant (page 15-80).
3. Disconnect the receiver line and suction hose from the evaporator.


CAUTION: Cap the open fittings immediately to keep moisture out of the system.

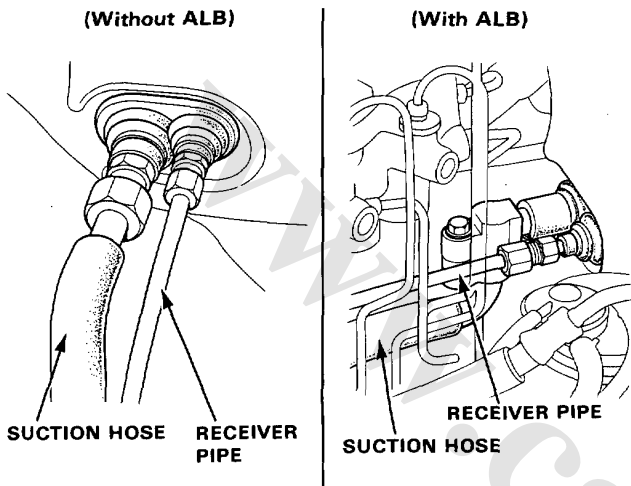

4. Remove the glove box and the glove box frame. (page 15-19)
5. Remove the self-tapping screw (3) and A/C band, then disconnect the connector from the thermostat.

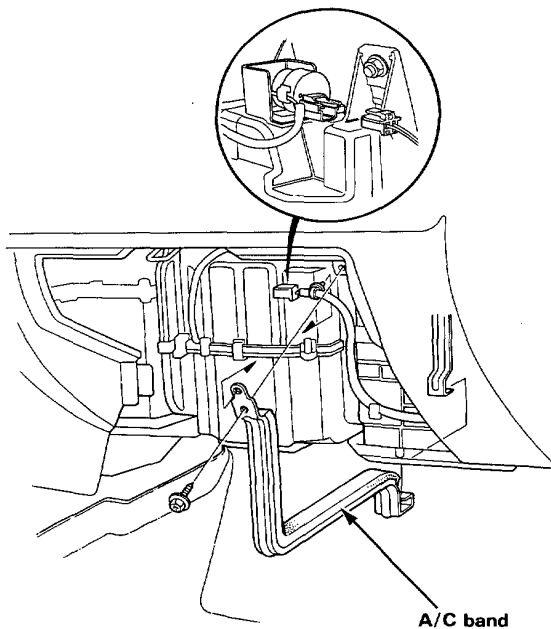

6. Remove the nuts, then remove the evaporator.

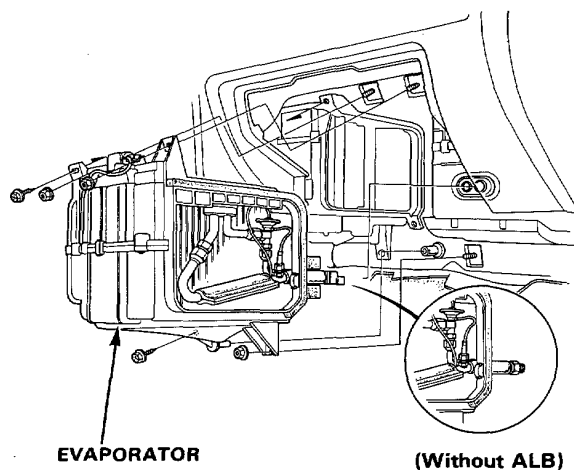

7. Install in the reverse order of remove, and:
 - Apply a sealant to the grommets.
 - Make sure that there is no air leakage.
 - Charge the system (page 15-81) and test performance (page 15-66).


Evaporator

Overhaul

1. Pull out the evaporator sensor from the evaporator fins.
2. Remove the self-tapping screws and clips from the housing.
3. Carefully separate the housings and remove the evaporator covers.
4. Remove the expansion valve if necessary.

Assemble the evaporator in the reverse order of disassembly, and:

- Install the expansion valve capillary tube against the suction line, and wrap it with tape.
- Reinstall the evaporator sensor in its original location.

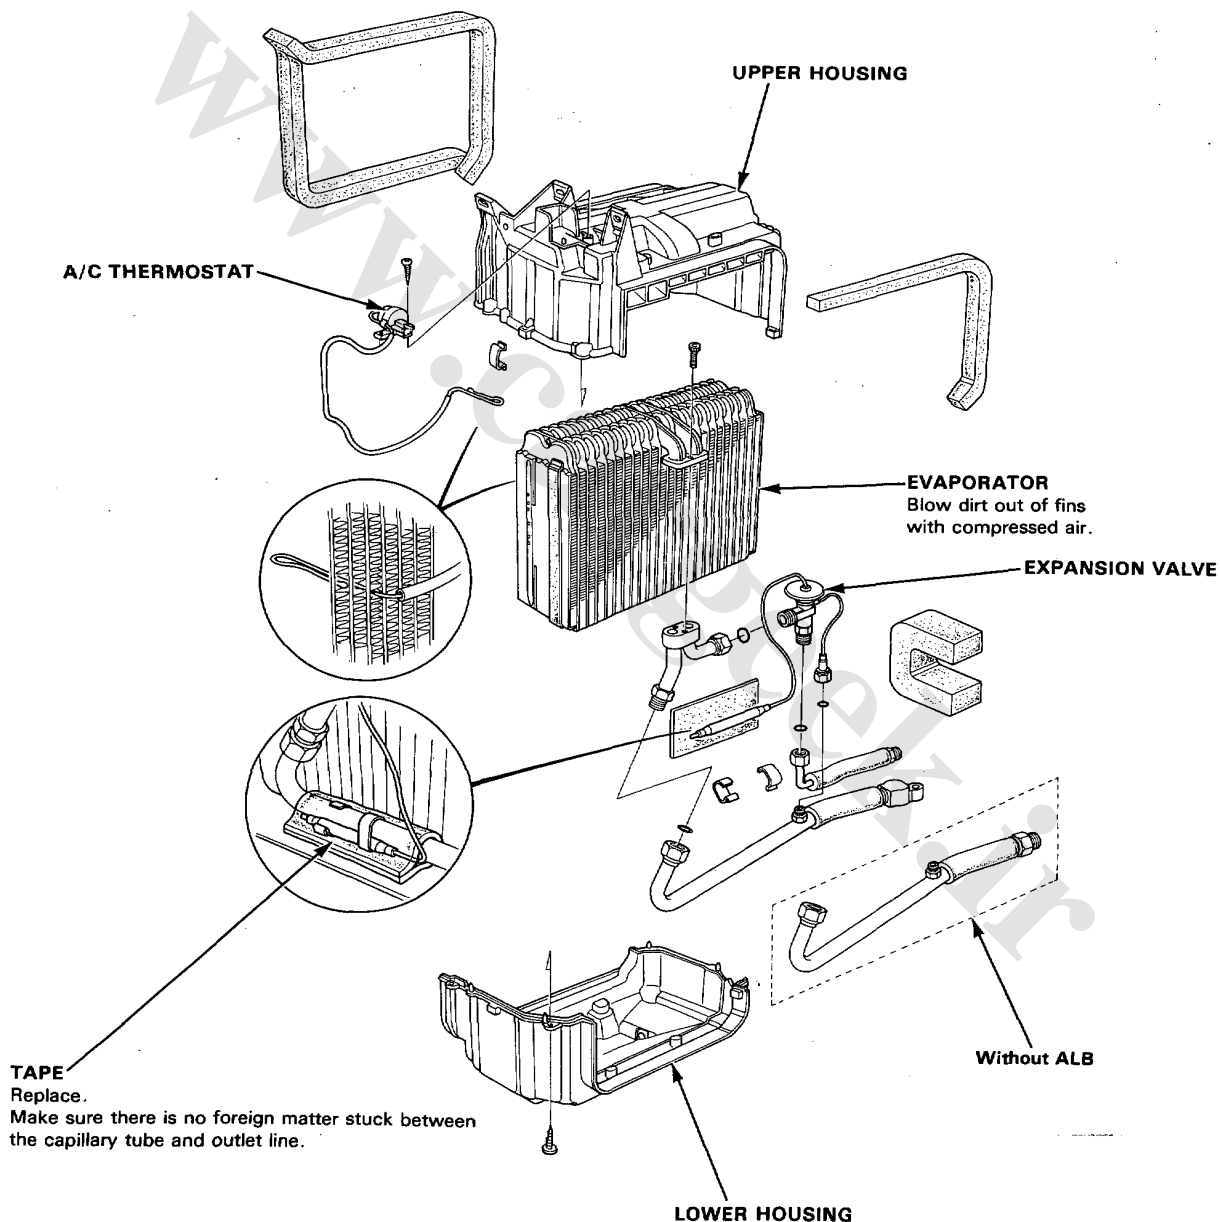





Condenser

Replacement

1. Discharge the refrigerant (page 15-80).
2. Temporarily remove the radiator reservoir tank and intake tube, then remove the suction pipe bracket.

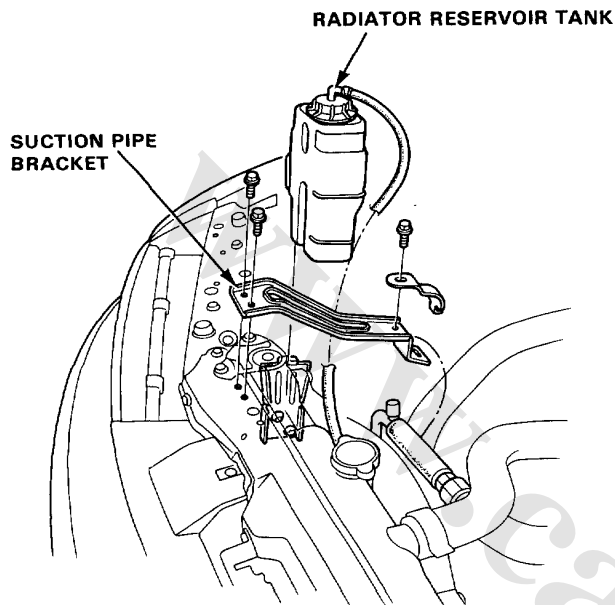


3. Remove the front grille.
NOTE: Remove the boss as shown.

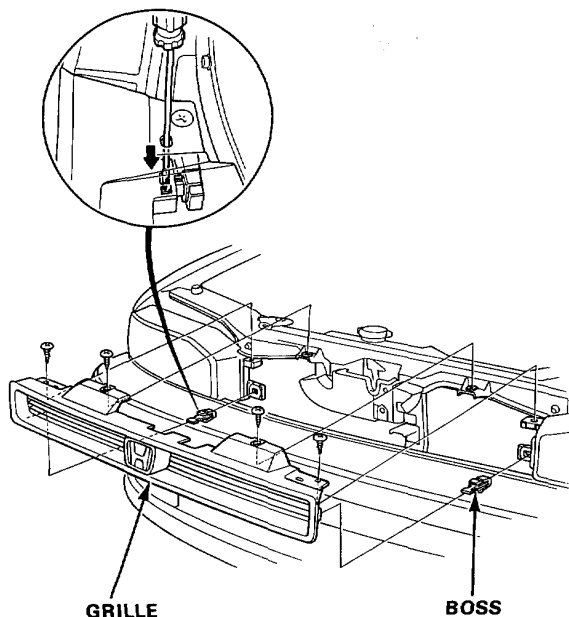


4. Disconnect the connector from the radiator fan motor, remove the mounting bolts (4) and remove the radiator fan shroud.

CAUTION: Do not damage the radiator fins when removing the fan shroud.

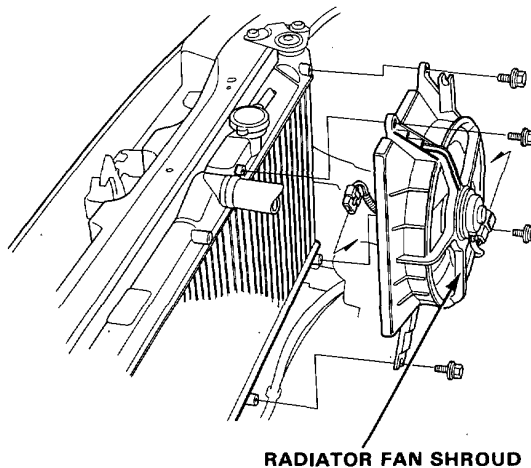

5. Disconnect the connector from the condenser fan motor and remove the connector from the compressor. Remove the mounting bolts (3) and remove the condenser fan shroud.

CAUTION: Do not damage the radiator fins when removing the fan shroud.

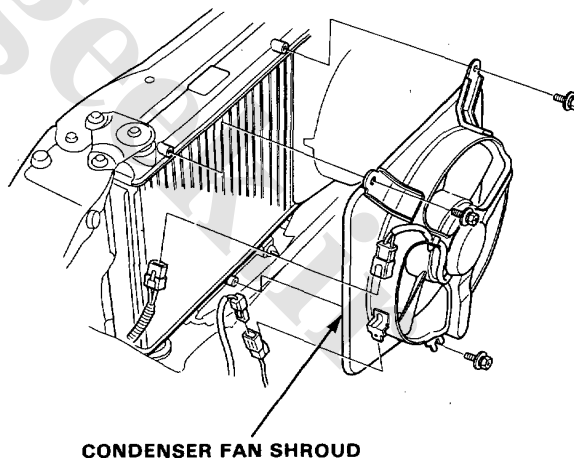



(cont'd)



Compressor (Nippondenso)

Description


This compressor is a piston type. A revolving inclined disc drives the surrounding 10 reciprocating pistons. As the inclined disc revolves, it pushes the pistons, protected by a ceramic shoe, thus compressing the refrigerant.

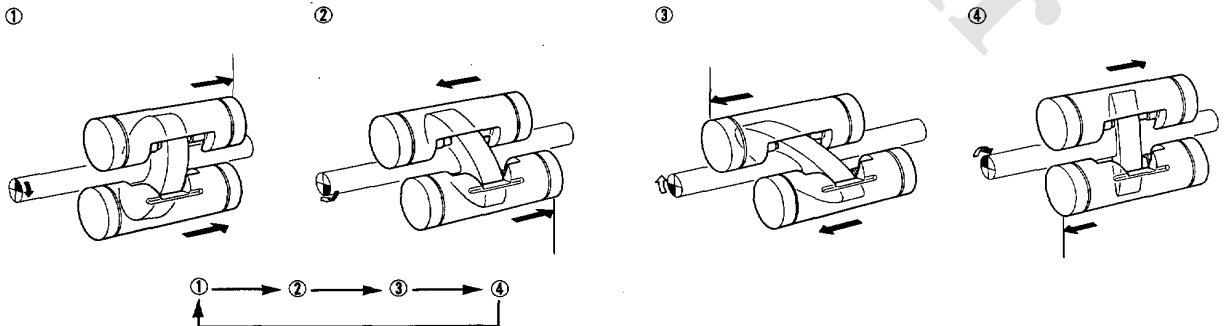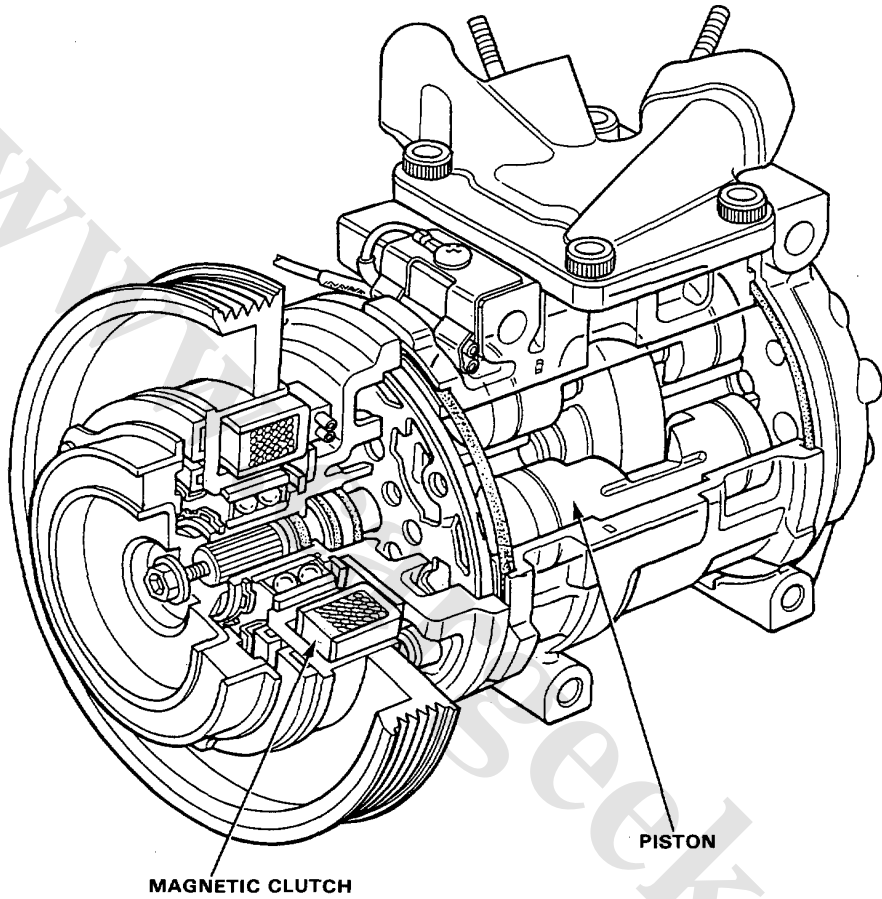

Compressor


Replacement

1. If the compressor is marginally operable, run the engine at idle speed and turn on the air conditioner fan a few minutes, then shut the engine off and disconnect the battery negative terminal.
2. Discharge the refrigerant very slowly from the system (page 15-80).
3. Remove:
 - power steering mounting bolt and nut
 - adjusting bolt
 - adjusting bolt bracket
 - power steering belt
 - power steering pump

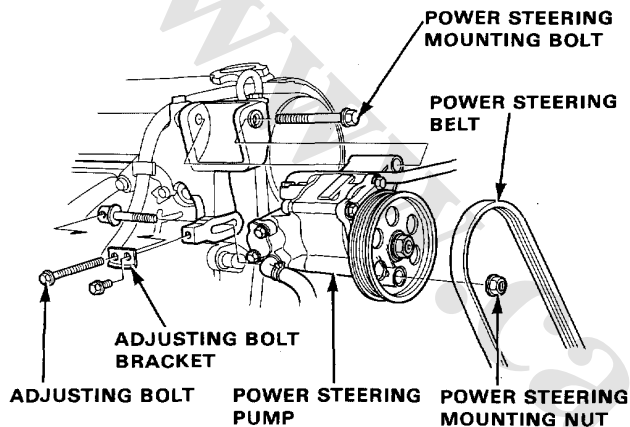


(With cruise control)


4. Remove the auto cruise actuator mounting bolts (2), disconnect the connector (1) and remove the auto cruise actuator.

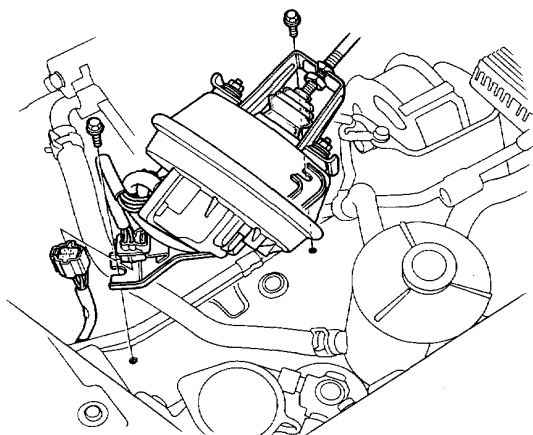

5. Remove the alternator harness clamp and disconnect the alternator harness.

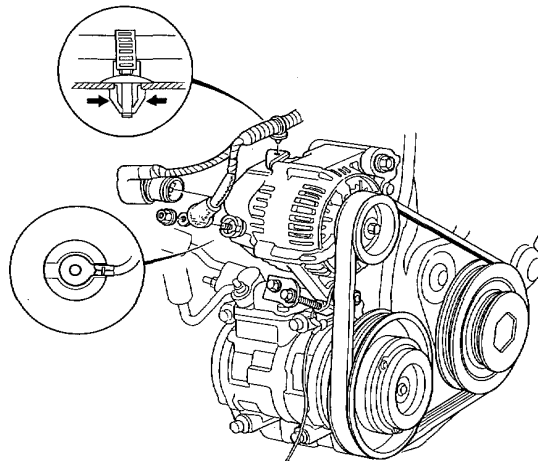

6. Remove:
 - alternator mounting bolt and nut
 - adjusting bolt
 - adjusting bolt bracket
 - compressor belt
 - alternator

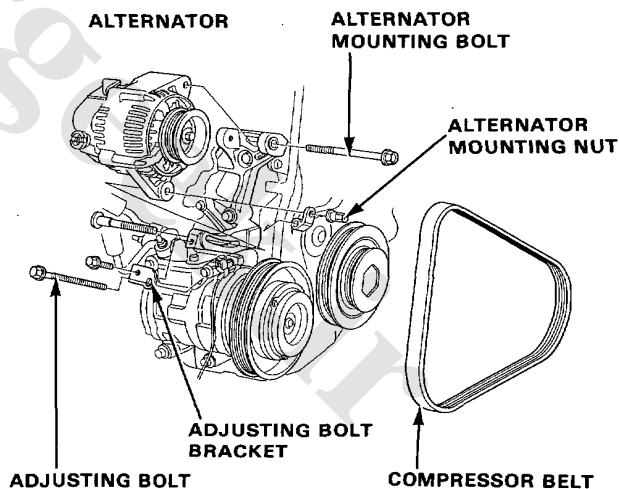


Compressor

Replacement (cont'd)

11. Install in the reverse order of removal and:

- If a new compressor is installed, calculate the refrigerant oil as below and drain through the suction fitting on the compressor:
100 cc(3 1/3 fl oz) minus contents of old compressor, equals amount to drain from new compressor.
- Do not damage the radiator fins when install the compressor.
- Be careful to connect the alternator harness as shown.

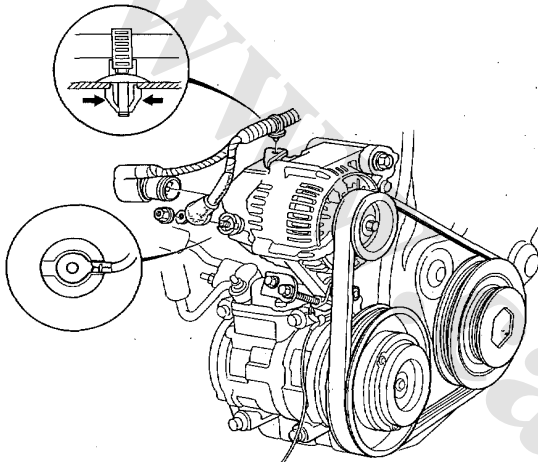


- Adjust the belt (page 15-64)
- Charge the system (page 15-81)
- Test the performance (page 15-66)




Clutch Inspection

- Check pulley bearing play and drag by rotating the pulley by hand. Replace the pulley with a new one if it is noisy or has excessive play/drag.

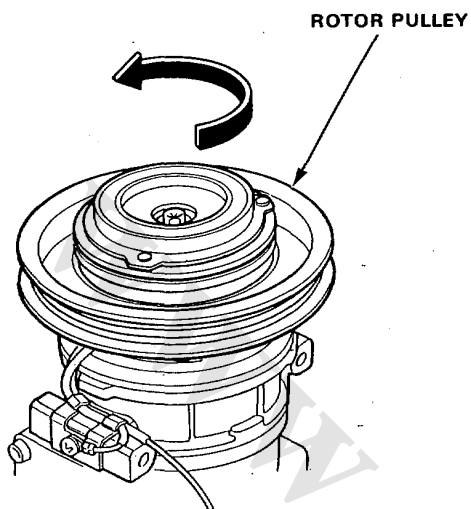


- Check resistance of the field coil:
Field Coil Resistance: 3.6 ± 0.2 ohm at
20 °C (68 °F)
If resistance is not within specifications, replace the coil.

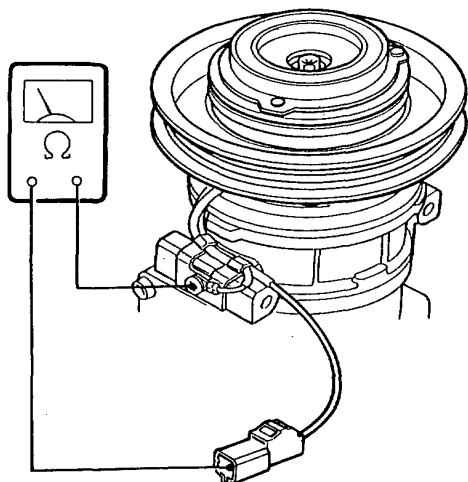


- Measure the clearance between the pulley and pressure plate all the way around. If the clearance is not within specified limits, the pressure plate must be removed and shims added or removed as required.

CLEARANCE: 0.5 ± 0.15 (0.020 \pm 0.006 in.)

NOTE: The shims are available in three sizes: 0.1 mm, 0.2 mm and 0.5 mm of thickness.

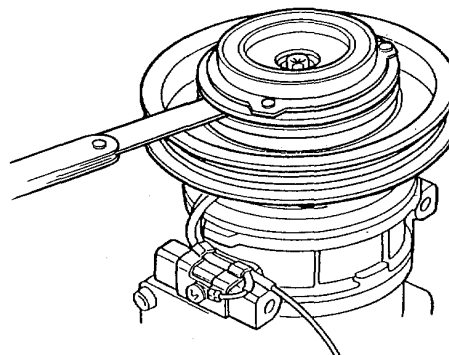

CENTER BOLT
14 N·m (1.4 kg-m, 10 lb-ft)

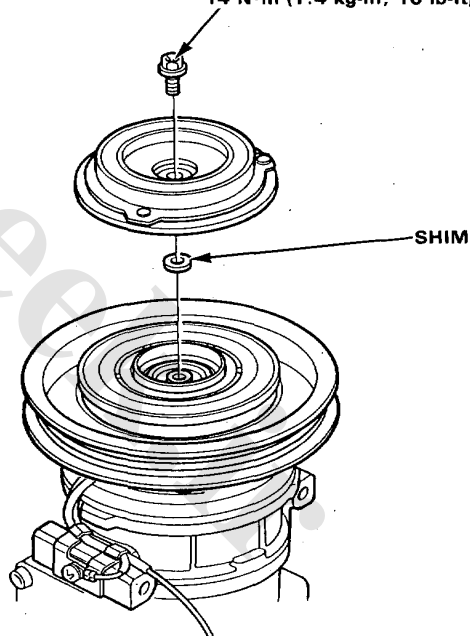


Compressor


Clutch Overhaul

1. Remove the center bolt.

SPECIAL TOOL
07LAB-SK70100

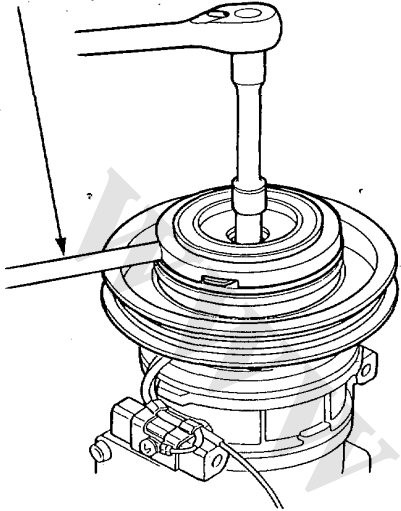


2. Remove the pressure plate and shim(s) taking care not to lose the shims.

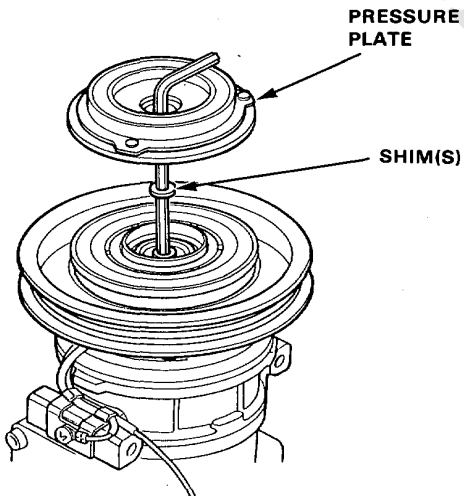


3. Use circlip pliers to remove the snap ring B, then remove the pulley.

SNAP RING B

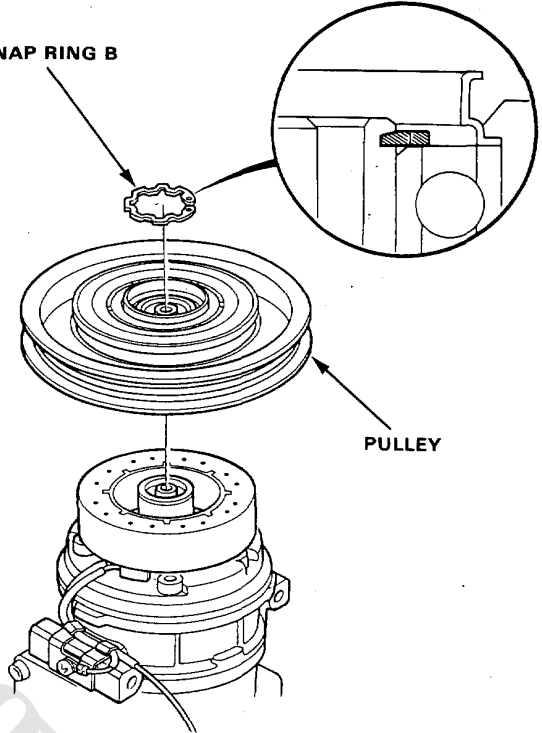



4. Remove the snap ring A and the field coil.

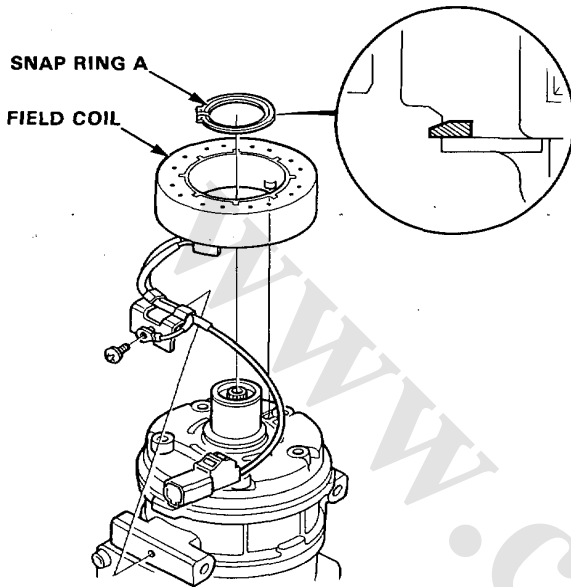

5. Install in the reverse order of removal and:

- Install the field coil with the wire side facing up (see above).
- Clean the pulley and compressor sliding surfaces with non-petroleum solvent.
- Check the pulley bearings for excessive play.
- Make sure the circlip is fitted to the groove properly.
- Apply locking agent to the thread of the center bolt and tighten it securely.
- Make sure that the pulley turns smoothly.

Test


A/C Thermostat

Dip the evaporator sensor into a pan filled with ice water, and check for continuity between the terminals.

Cut off 1.5--0.5 °C (35--33 °F)

Cut in 2.5--5 °C (36--41 °F)


If cut off or cut in temperature is too low or too high, replace the A/C thermostat.

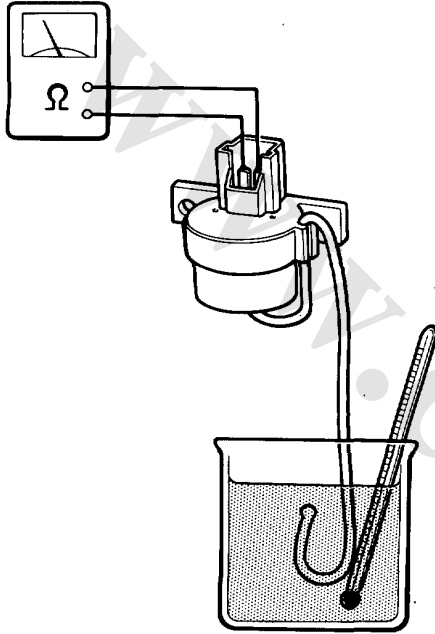

Relay

There should be continuity between the A and B terminals when the battery is connected to the C and D terminals.

There should be no continuity when the battery is disconnected.

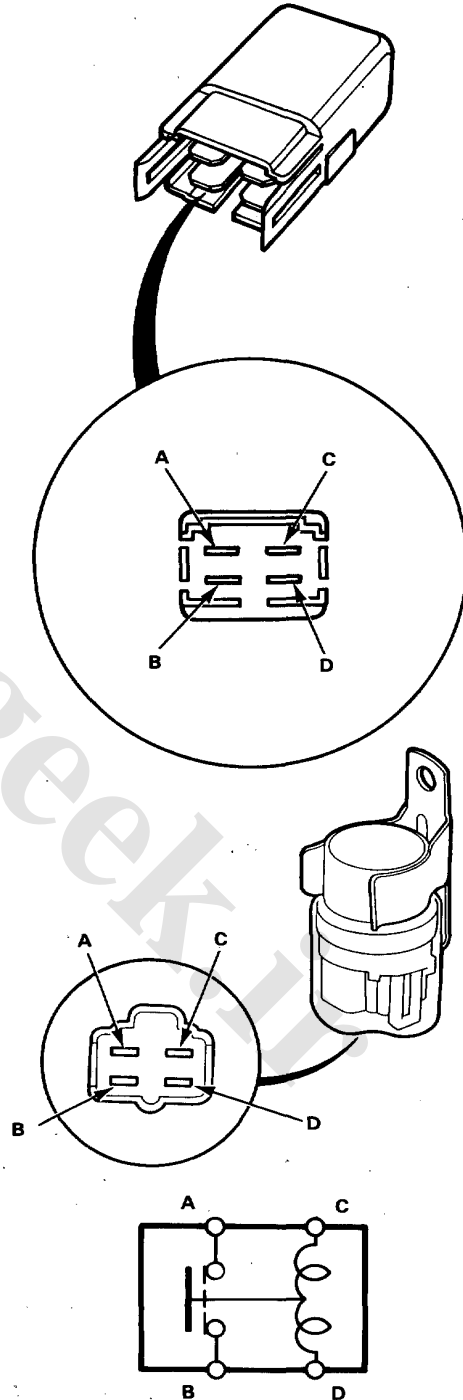




Test


Diode

NOTE: The diodes are designed to pass current in one direction and block current in opposite direction. Most ohmmeters, unless equipped with a diode tester, should not be used to test diodes.


Check for continuity in both directions between A and B terminals. There should be continuity in only one direction.

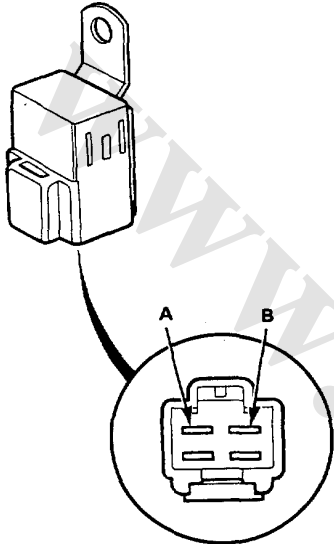

1. Loosen the opener.
NOTE: Check for a rubber packing on the can-joint.

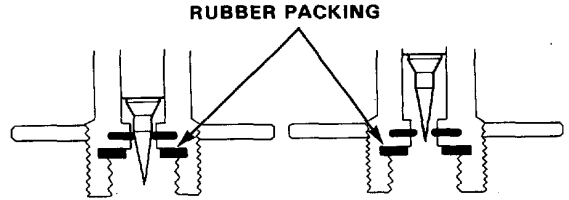

2. Attach a refrigerant can to a can-joint.
NOTE: If attaching three cans to a four can, can-joint, attach an empty can to the fourth joint.


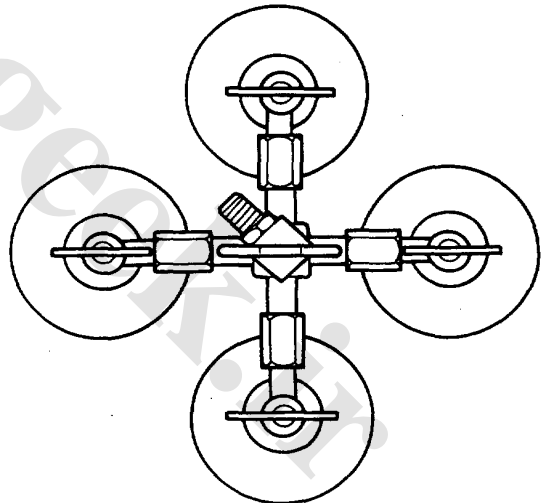


Discharge Procedure

▲ WARNING

- Keep away from open flames. The refrigerant, although nonflammable, will produce a poisonous gas if burned.
 - Work in a well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small enclosed area.
1. Connect the gauges as shown.
 2. Disconnect the center hose of the gauge set and place the free end in a shop towel.
 3. Open the both stop valves and the evacuation valve (2 valve gauge: evacuate stop valve).

4. Slowly open the high side manifold valve slightly to let refrigerant flow from the center hose only. Do not open the valve too wide. Check the shop towel to make sure no oil is being discharged with the refrigerant.
CAUTION: If refrigerant is allowed to escape too fast, compressor oil will be drawn out of the system.
5. After the high pressure gauge reading has dropped below 1000 kPa (142 psi), open the low side valve to discharge both high and low sides of the system.
6. Note the gauge reading and, as system pressure drops, gradually open both high and low side valves fully until both gauges indicate 0 kPa (0 psi).

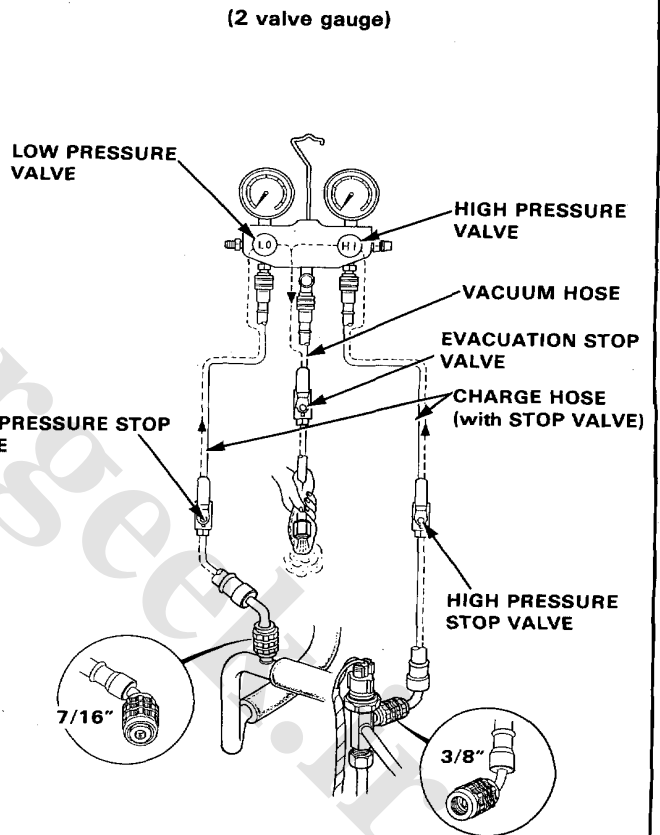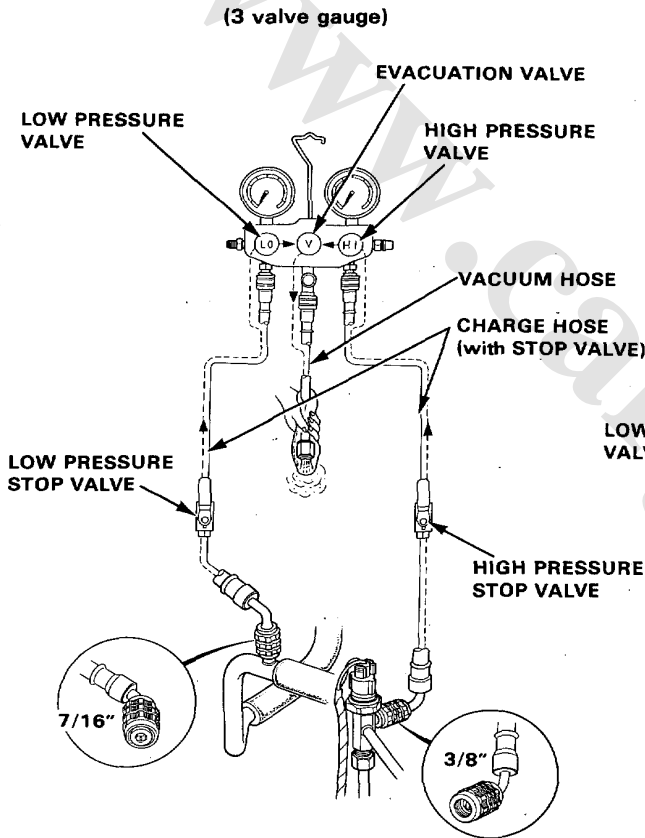



System Charging

System Evacuation


The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of Fron R-12 into the atmosphere.

1. When an A/C System has been opened to the atmosphere, such as during installation or repair, it must be evacuated using a vacuum pump. (If the system has been open for several days, the receiver/dryer should be replaced).
2. Connect a gauge, pump and refrigerant containers (cans of R-12) as shown.
NOTE: Do not open the cans.
3. Start the pump, then open the both pressure valves, both pressure stop valves and evacuation valve (2 valve gauge: evacuation stop valve). Run the pump for about 15 minutes. Close the both pressure valves and

evacuation valve (2 valve gauge: evacuation stop valve) and stop the pump. The low gauge should indicate above 700mmHg (27 in-Hg) and remain steady with the valves closed.

NOTE: If low pressure does not reach more than 700 mmHg (27 in-Hg) in 15 minutes, there is probably a leak in the system. Check for leaks, and repair (see Leak Test).

4. If there are no leaks open the valves and continue pumping for at least another 15 minutes, then close both valves, stop the pump.

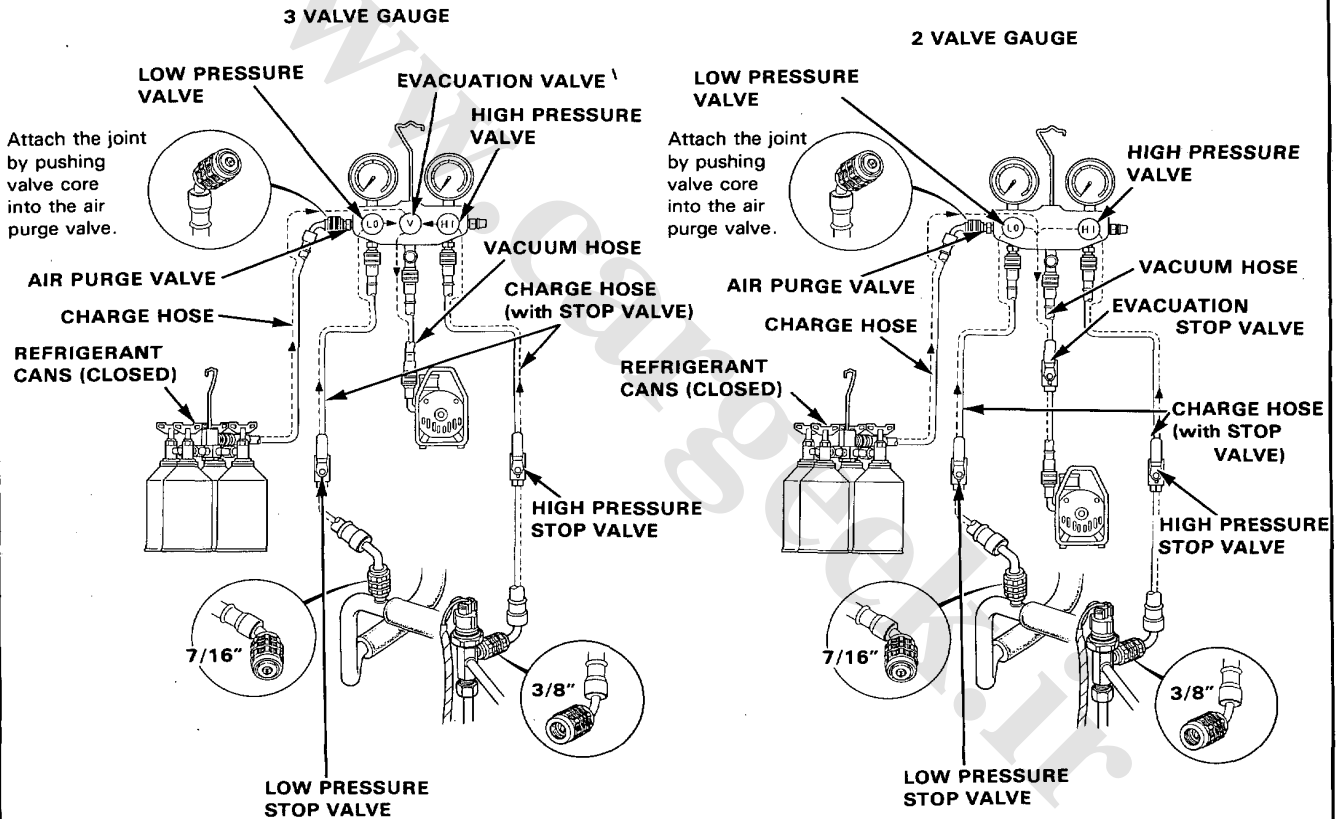

System Charging

Leak Test

The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of Freon R-12 into the atmosphere.


⚠ WARNING When handling refrigerant (R-12):

- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (cans of R-12) stored below 40 °C (100°F).
- Keep away from open flame. Refrigerant, although non-flammable, will produce poisonous gas if burned.
- Work in well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small, enclosed area.

NOTE: Check for leaks after evacuation.

1. Close the evacuation valve (2 valve gauge; evacuation stop valve).

2. Open the cans.
3. Open high pressure valve to charge the system to about 100 kPa (14 psi), then close the supply valve. NOTE: Close the low pressure valve.
4. Check the system for leaks using a leak detector. NOTE: Particularly check for leaks around the compressor, condenser, and receiver-dryer.
5. If you find any leaks, tighten the joint nuts and bolts to the specified torque.
6. Recheck the system for leaks using a leak detector.
7. If you find leaks that require the system to be opened (to repair or replace hoses, fittings, etc.), release any charge in the system according to the Discharge Procedure on page 15-80.
8. After checking and repairing leaks, the system must be evacuated (see System Evacuation on page 15-81).

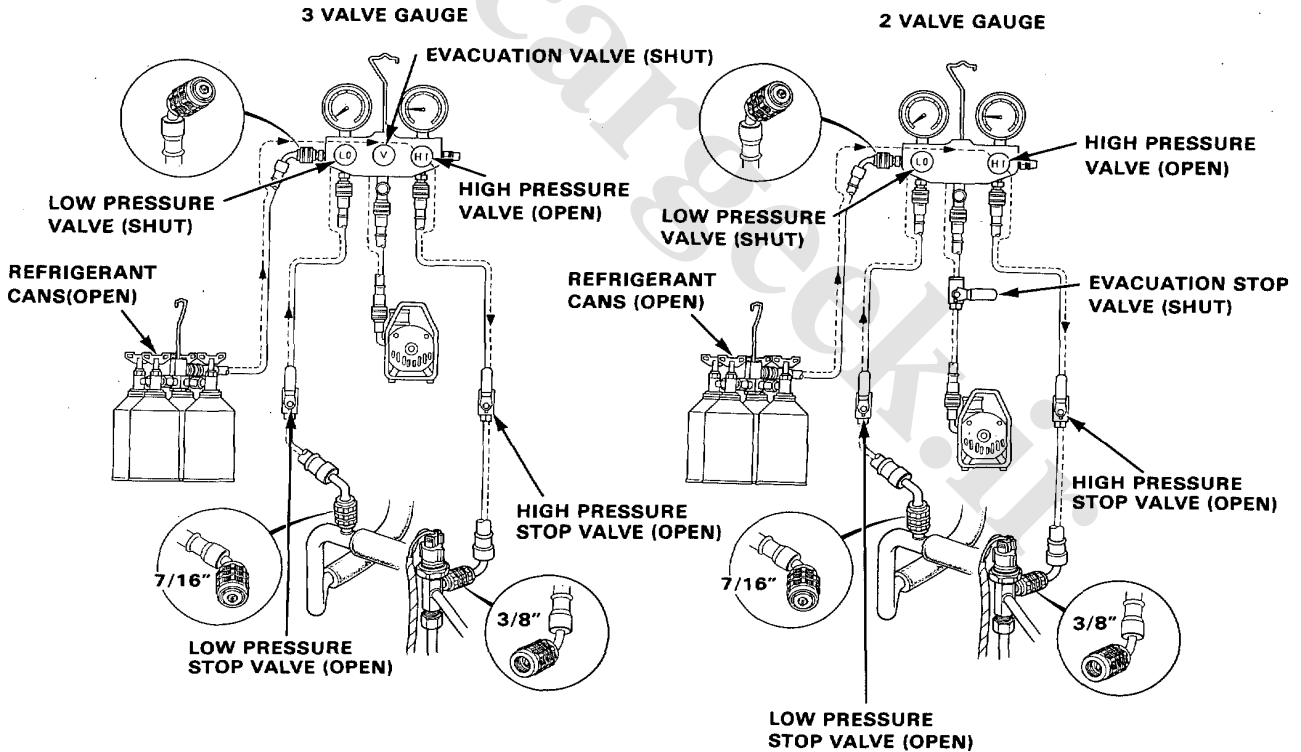



Charging Procedures

The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of R-12 into the atmosphere.

⚠ WARNING When handling refrigerant (R-12):

- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (cans of R-12) stored below 40 °C (100 °F).
- Keep away from open flame. Refrigerant, although non-flammable, will produce poisonous gas if burned.
- Work in well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small, enclosed area.


CAUTION: Do not overcharge the system; the compressor will be damaged.

1. After leak test, check that the high pressure valve is closed and start the engine.
NOTE: Run the engine below 1500 rpm.

2. Open the front door. Turn the A/C switch on. Turn the air mix dial (lever) to COOL. Turn function control switch (lever) on. Turn the heater fan switch on "E" (MAX).
3. Open the low pressure valve and charge with refrigerant.

⚠ WARNING

- Do not open the high gauge valve.
 - Do not turn the cans upside down.
4. Charge the system with refrigerant capacity. Refrigerant capacity: 900–950 g (32–34 oz)
 5. When fully charged, close the low pressure valve and the refrigerant cans. Check the system.
 6. Close the high pressure stop valve.
 7. Open the low pressure valve and gradually open the high pressure valve. When both pressure gauge are the same, close the low pressure stop valve and stop the engine.
 8. Disconnect the charge hose quickly.
 9. Check the system for leaks using a leak detector.
NOTE: Particularly check for leaks around the compressor, condenser, and receiver-dryer.

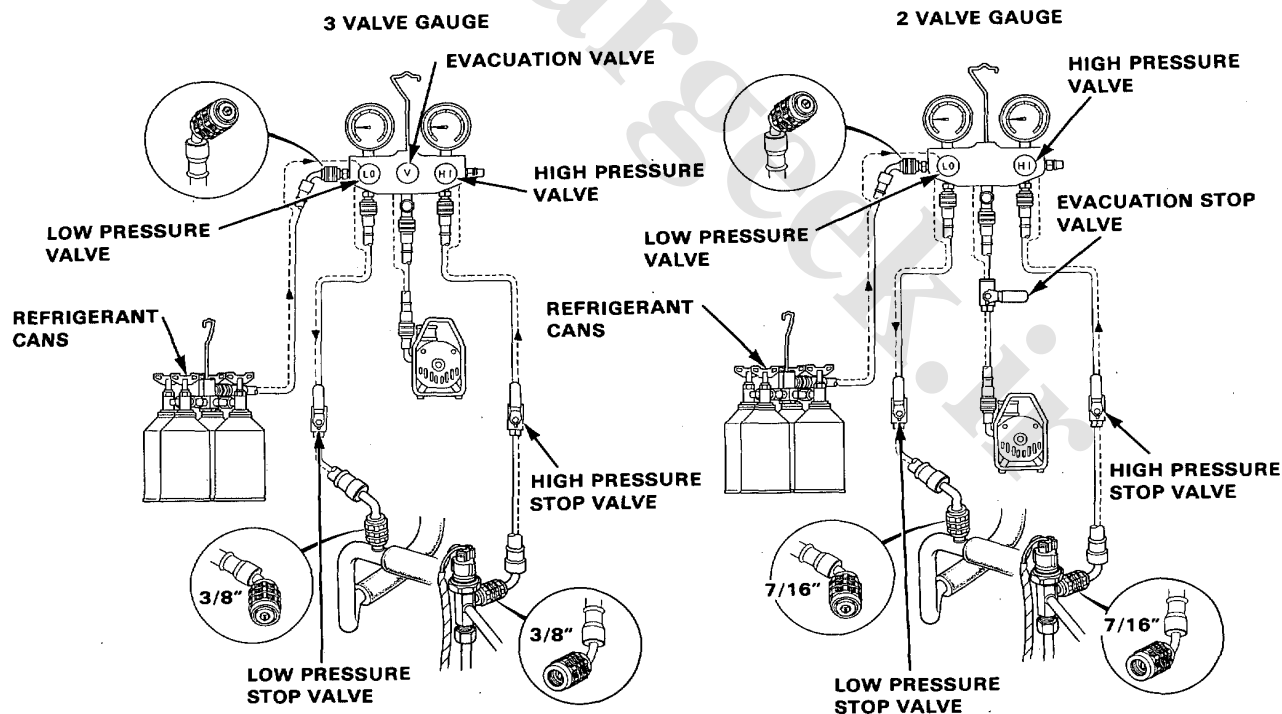



Pressure Test

NOTE: Performance Test on page 15-66.

TEST RESULTS	RELATED SYMPTOMS	PROBABLE CAUSE	REMEDY
Discharge (high) pressure abnormally high	After stopping compressor, pressure drops to about 196 kPa (28 psi) quickly, and then falls gradually.	Air in system	Evacuate system; then recharge Evacuation: page 15-81 Recharging: 15-83
	No bubbles in sight glass when condenser is cooled by water.	Excessive refrigerant in system	Discharge refrigerant as necessary
	Reduced or no air flow through condenser.	<ul style="list-style-type: none"> · Clogged condenser or radiator fins · Condenser or radiator fan not working properly 	<ul style="list-style-type: none"> · Clean · Check voltage and fan rpm
	Line to condenser is excessively hot.	Restricted flow of refrigerant in system	Expansion valve
Discharge pressure abnormally low	Excessive bubbles in sight glass: condenser is not hot	Insufficient refrigerant in system	<ul style="list-style-type: none"> · Check for leak · Charge system
	High and low pressures are balanced soon after stopping compressor	<ul style="list-style-type: none"> · Faulty compressor discharge or inlet valve · Faulty compressor seal 	Replace compressor
	Outlet of expansion valve is not frosted. low pressure gauge indicates vacuum	<ul style="list-style-type: none"> · Faulty expansion valve 	Replace
Suction (low) pressure abnormally low	Excessive bubbles in sight glass: condenser is not hot	Insufficient refrigerant	Check for leaks. Charge as required.
	Expansion valve is not frosted and low pressure line is not cold. Low pressure gauge indicates vacuum.	<ul style="list-style-type: none"> · Frozen expansion valve · Faulty expansion valve 	Replace expansion valve
	Discharge temperature is low and the air flow from vents is restricted	Frozen evaporator	Run the fan with compressor off then check the thermostat and capillary tube.
	Expansion valve frosted	Clogged expansion valve	Clean or Replace
	Receiver dryer is cool (should be warm during operation)	Clogged receiver dryer	Replace
Suction pressure abnormally high	Low pressure hose and check joint are cooler than around evaporator.	<ul style="list-style-type: none"> · Expansion valve open too long · Loose expansion valve 	Repair or Replace
	Suction pressure is lowered when condenser is cooled by water	Excessive refrigerant in system	Discharge refrigerant as necessary
	High and low pressure are equalized as soon as the compressor is stopped	<ul style="list-style-type: none"> · Faulty gasket · Faulty high pressure valve · Foreign particle stuck in high pressure valve 	Replace compressor
Suction and discharge pressure abnormally high	Reduced air flow through condenser	<ul style="list-style-type: none"> · Clogged condenser or radiator fins · Condenser or radiator fan not working properly 	<ul style="list-style-type: none"> · Clean condenser and radiator · Check voltage and fan rpm
	No bubbles in sight glass when condenser is cooled by water	Excessive refrigerant in system	Discharge refrigerant as necessary
Suction and discharge pressure abnormally low	Low pressure hose and metal end areas are cooler than evaporator	Clogged or kinked low pressure hose parts	Repair or Replace
	Temperature around expansion valve is too low compared with that around receiver-dryer	Clogged high pressure line	Repair or Replace
Refrigerant leaks	Compressor clutch is dirty	Compressor shaft seal leaking	Replace compressor
	Compressor bolt(s) are dirty	Leaking around bolt(s)	Tighten bolt(s) or replace compressor
	Compressor gasket is wet with oil	Gasket leaking	Replace compressor

How to Use This Section

[Special Tools](#)

[Troubleshooting Precautions](#)

[Five-step Troubleshooting](#)

[What the Symbols Mean](#)

[Wire Colour Codes](#)

[Relays and Control Unit](#)

[Locations](#)

Index to Circuits and Systems

[Air Conditioner](#)

[Alternator](#)

[Antenna, Power](#)

[Anti Lock Brake System
\(ALB\)](#)

[Automatic Transmission](#)

[Control System](#)

[Battery](#)

[Blower Controls](#)

[Charging System](#)

[Cigarette Lighter](#)

[Clock](#)

[Cooling Fan Control](#)

[Cruise Control](#)

[Defogger, Rear Window](#)

[Daytime Running Light
System](#)

[Dim-Dip Light System](#)

[Distributor](#)

[Fuel Injected System](#)

[Fuel Pump](#)

[Fuse Box](#)

Lights, Exterior

[Back-up Lights](#)

[Fog Lights, Rear](#)

[Front Position Lights](#)

[Hazard Lights](#)

[Headlights](#)

[License Plate Lights](#)

[Taillights](#)

[Turn Signal Lights](#)

Lights, Interior

[Courtesy Lights](#)

[Dashlight Brightness](#)

[Control](#)

[Dome Light](#)

[Entry Light Timer](#)

[Glove Box Light](#)

[Trunk Light](#)

[Lighting System](#)

[Locks, Power](#)

[Mirrors, Power](#)

[Relay Box](#)

[Relay Locations](#)

[Seat Heaters](#)

[Seat, Power](#)

[Spark Plugs](#)

[Starting System](#)

[Stereo Sound System](#)

[Sunroof](#)

[Turn Signal/Hazard Flasher
System](#)

Gauges

[Circuit Diagram](#)

[Coolant Temperature](#)

[Gauge](#)

[Fuel Gauge](#)

[Speedometer](#)

[Tachometer](#)

Grounds

[Distribution](#)

[Location](#)

[Heater Controls](#)

[Horns](#)

[Ignition Switch](#)

[Ignition System](#)

[Ignition Timing Control](#)

Indicators

[High Beam Indicator](#)

[Safety Indicator](#)

[Shift Lever Position](#)

[Indicator](#)

[Turn Signal Indicator](#)

[Integrated Control Unit](#)

Warning System

[ALB War Lightning](#)

[Brake Bulb Failure](#)

[Brake Circuit Failure](#)

[Brake Warning Failure](#)

[Charge Warning Light](#)

[Check Engine Warning](#)

[Light](#)

[Hazard Warning Light](#)

[Light-on Warning](#)

[Low Fuel Warning Light](#)

[Oil Pressure Warning Light](#)

[Seat Belt Reminder](#)

Washer

[Headlights](#)

[Windshield](#)

[Windows, Power](#)

[Wipers, Windshield](#)

Wires and Harnesses

[Wire Colour Codes](#)


[Wire Harness Routing](#)

[Wiring Diagrams](#)


Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Page Reference
①	07GAC-SE00200	Fuel Sender Wrench	1	16-127
②	07JGG-0010100	Belt Tension Gauge	1	16-101, 102

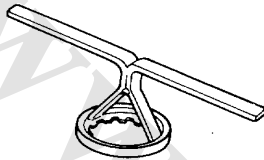

①

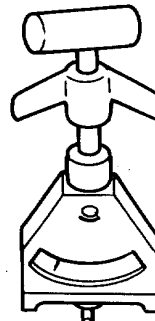

②



Troubleshooting

Troubleshooting Precautions

Before Troubleshooting

- Check the main fuse and the fuse box.
- Check the battery for damage, state of charge, and clean and tight connections.
- Check the alternator belt tension.

CAUTION:


- Do not quick-charge a battery unless the battery ground cable has been disconnected, or you will damage the alternator diodes.
- Do not attempt to crank the engine with the battery ground cable connected incompletely or you will severely damage the wiring.

While You're Working


- Make sure connectors are clean, and have no loose pins or receptacles.
- Make sure multiple pin connectors are packed with grease (except watertight connectors).

Since new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.

- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector. Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

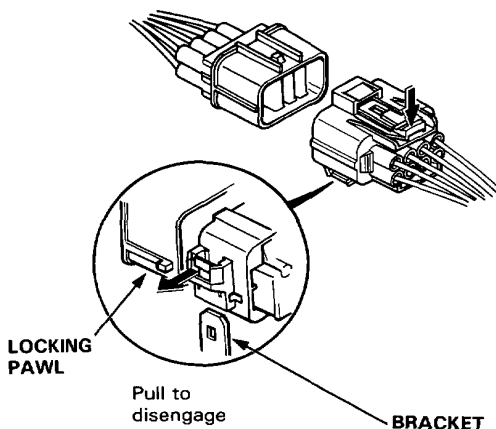

- Push the locking tab to disconnect.

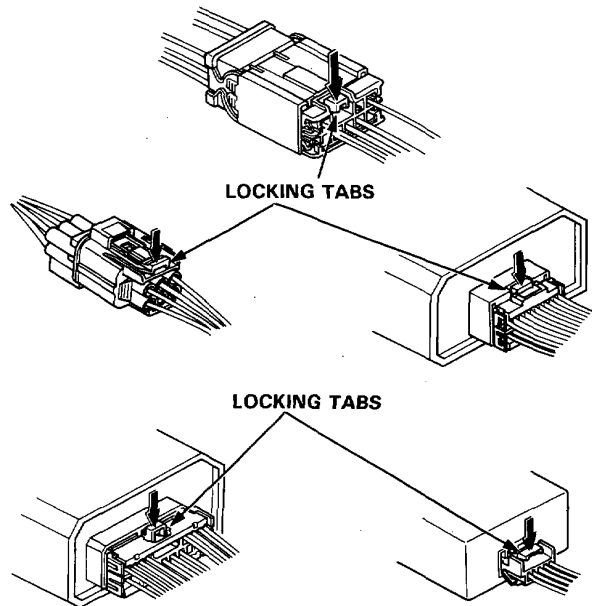


(cont'd)


Troubleshooting

Troubleshooting Precautions (cont'd)


- Pull the locking tab to remove the connector from the bracket.

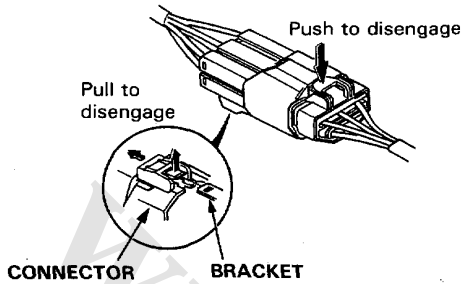


- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

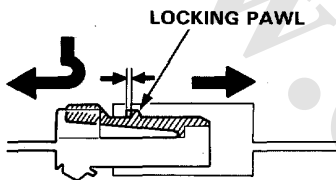


- When disconnecting a connector, pull it off from the mating connector by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.

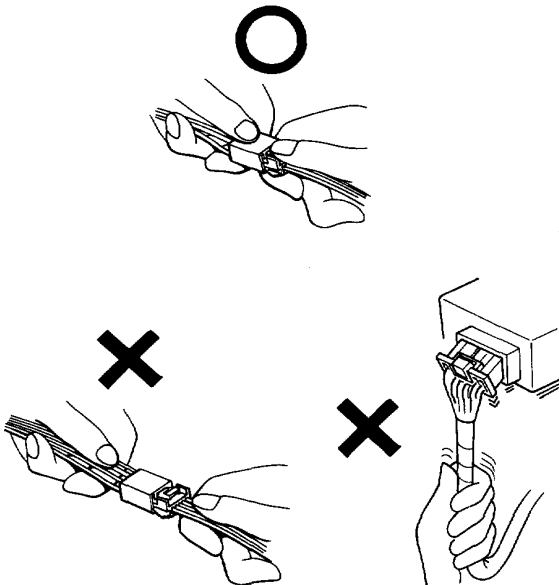


- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

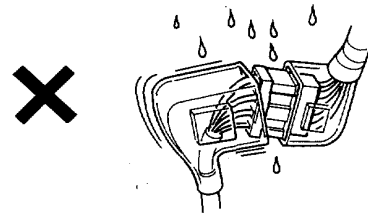


- Before connecting connectors, check to see that the terminals are in place and not bent or distorted.

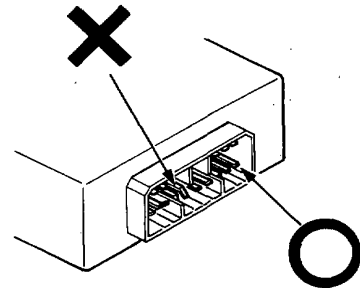

- Check for loose retainer and rubber seals. The illustration shows examples of terminal and seal abnormality.

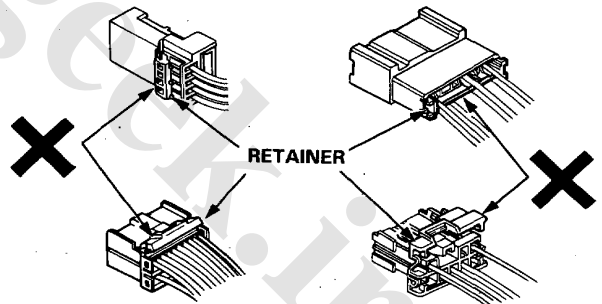


- Example of waterproof connector:

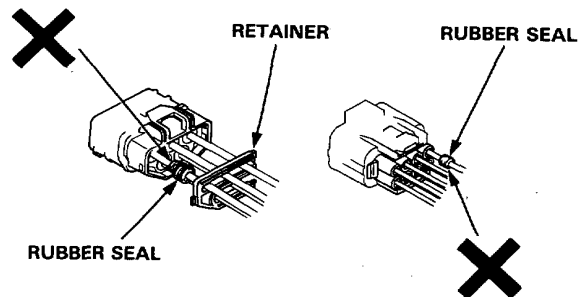



- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

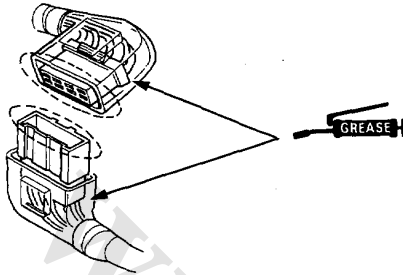


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.




- The locking tab with an angle end should be pushed when connecting.




- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Do not use wire harnesses with a loose wire or connector.

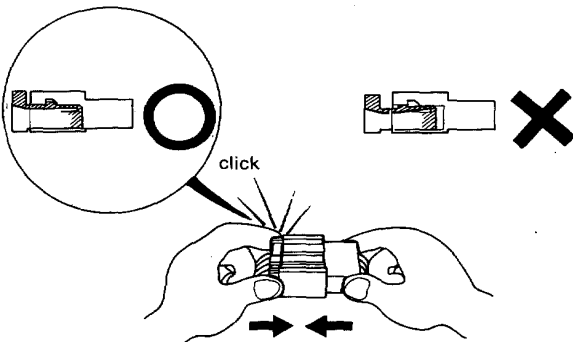



- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

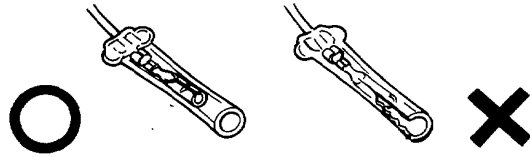

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open end of the cover faces down.

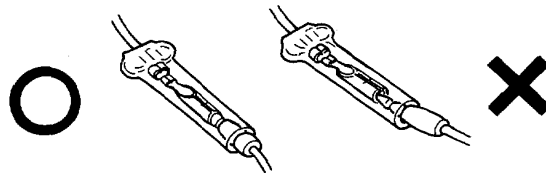


- Secure wires and wire harness to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or harnesses.
- Remove with care not to damage the lock.

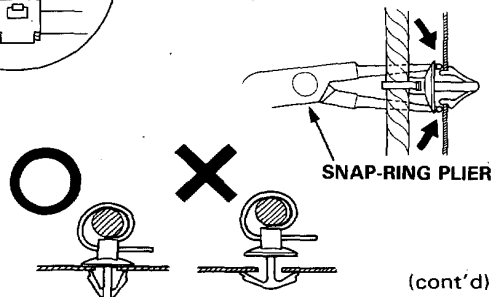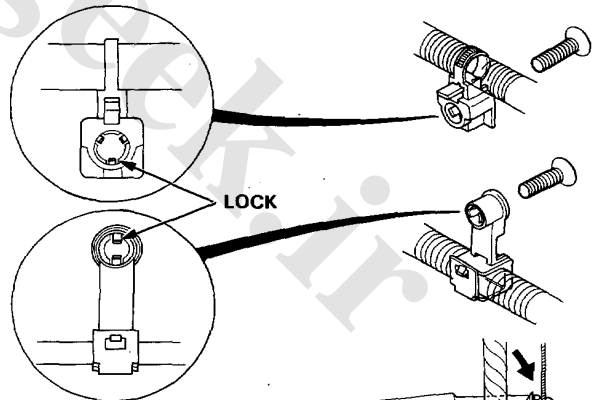


(cont'd)

Troubleshooting


Troubleshooting Precautions (cont'd)

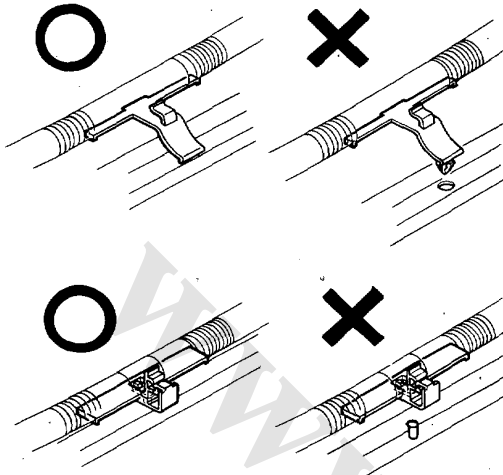


- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

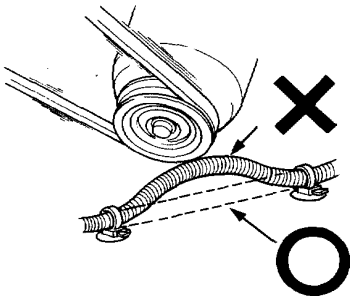


- Always keep a safe distance between wire harnesses and any heated parts.

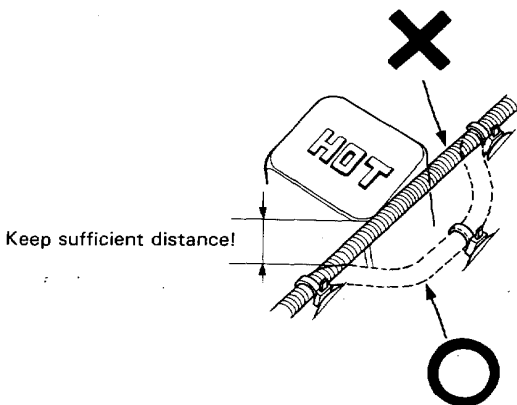


- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

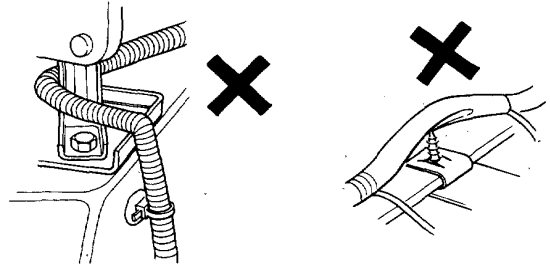


- Route harnesses so they are not pulled taut or slackened excessively.

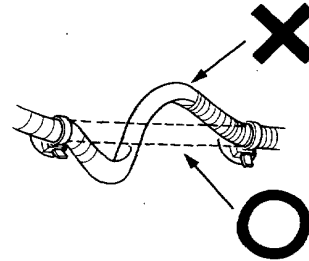

- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

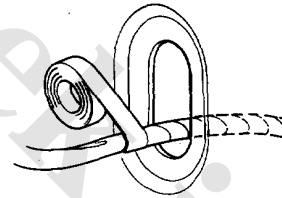


- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

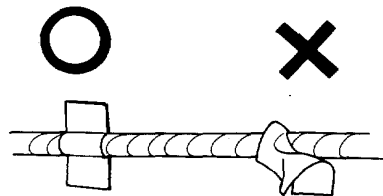





- Seat grommets in their grooves properly.

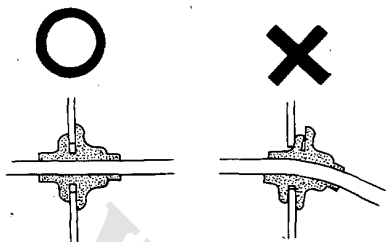

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

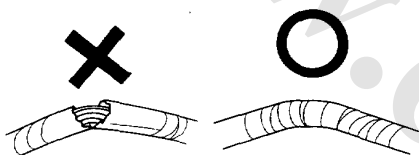


- After installing parts, make sure that wire harnesses are not pinched.

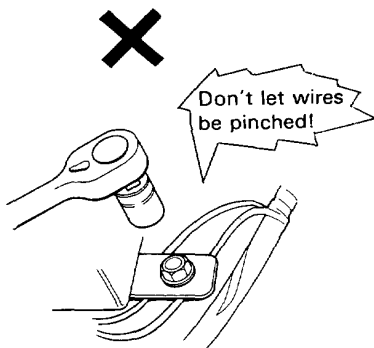


- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfering with adjacent or surrounding parts in all steering positions.


- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

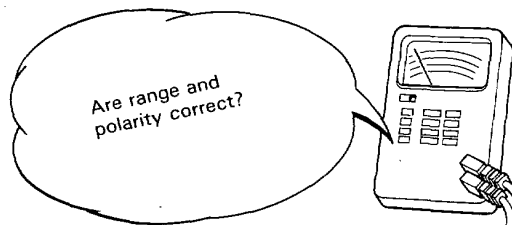


- Always insert the probe of the tester from the wire harness side (except waterproof connector).

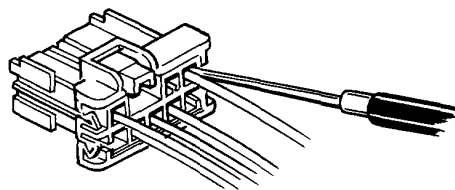

- Make sure to use the probe with a tapered tip.

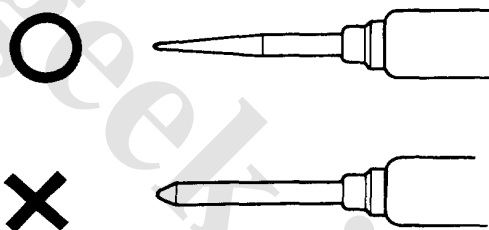

- Do not drop parts.

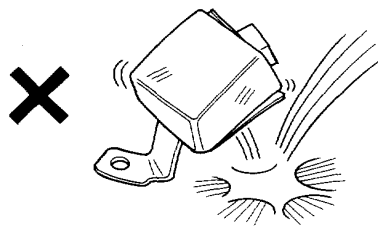

Troubleshooting

Five-Step Troubleshooting

1. Verify The Complaint

Turn on all the components in the problem circuit to check the accuracy of the customer complaint. Note the symptoms. Do not begin disassembly or testing until you have narrowed down the problem area.

2. Analyze The Schematic

Look up the schematic for the problem circuit. Determine how the circuit is supposed to work by tracing the current paths from the power feed through the circuit components to ground. If several circuits fail at the same time, the fuse or ground is a likely cause.

Based on the symptoms and your understanding of the circuit operation, identify one or more possible causes of the problem.

3. Isolate The Problem By Testing The Circuit

Make circuit tests to check the diagnosis you made in step 2. Keep in mind that a logical, simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points that are easily accessible.

4. Fix The Problem

Once the specific problem is identified, make the repair. Be sure to use proper tools and safe procedures.

5. Make Sure The Circuit Works

Turn on all components in the repaired circuit in all modes to make sure you've fixed the entire problem. If the problem was a blown fuse, be sure to test all of the circuits on that fuse. Make sure no new problems turn up and the original problem does not recur.




Schematic Symbols

BATTERY		GROUND		FUSE	COIL, SOLENOID	CIGARETTE LIGHTER
 or 		Ground terminal 	Component ground 			
RESISTOR	VARIABLE RESISTOR	THERMISTOR	IGNITION SWITCH	BULB	HEATER	
MOTOR	PUMP	CIRCUIT BREAKER	HORN	DIODE	SPEAKER, BUZZER	
ANTENNA		TRANSISTOR (Tr)		Wire Color Codes The following abbreviations are used to identify wire colors in the circuit schematics. WHTWhite YELYellow BLKBlack BLUBlue GRNGreen REDRed ORNOrange PNKPink BRNBrown GRYGray LT BLU ...Light Blue LT GRN ...Light Green Wire insulator has one color or one color with another color stripe. The second color is the stripe. 		
Mast 	Window 					
RELAY (In normal condition)		CONDENSER				
Normal open relay 	Normal closed relay 					
SWITCH (In normal condition)		LUMINOUS DIODE (LED)				
Normal open switch 	Normal closed switch 					
CONNECTION		CONNECTOR	REED SWITCH			
Input 	Output 	Male 	Female 			


Relays and Control Unit Locations

Engine Compartment

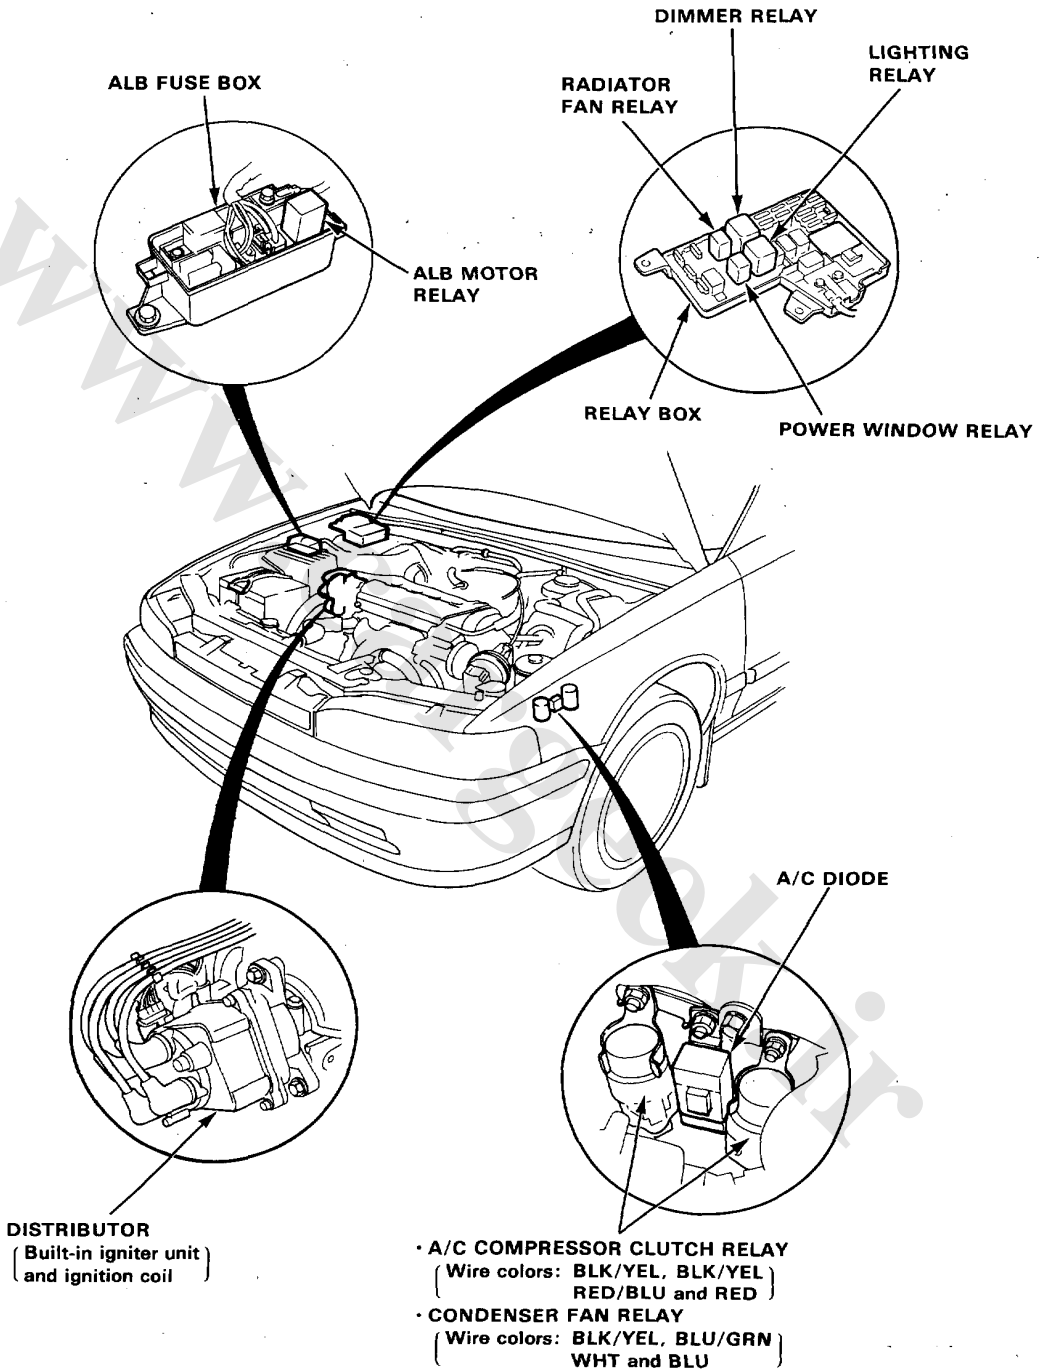



Circuit Diagram

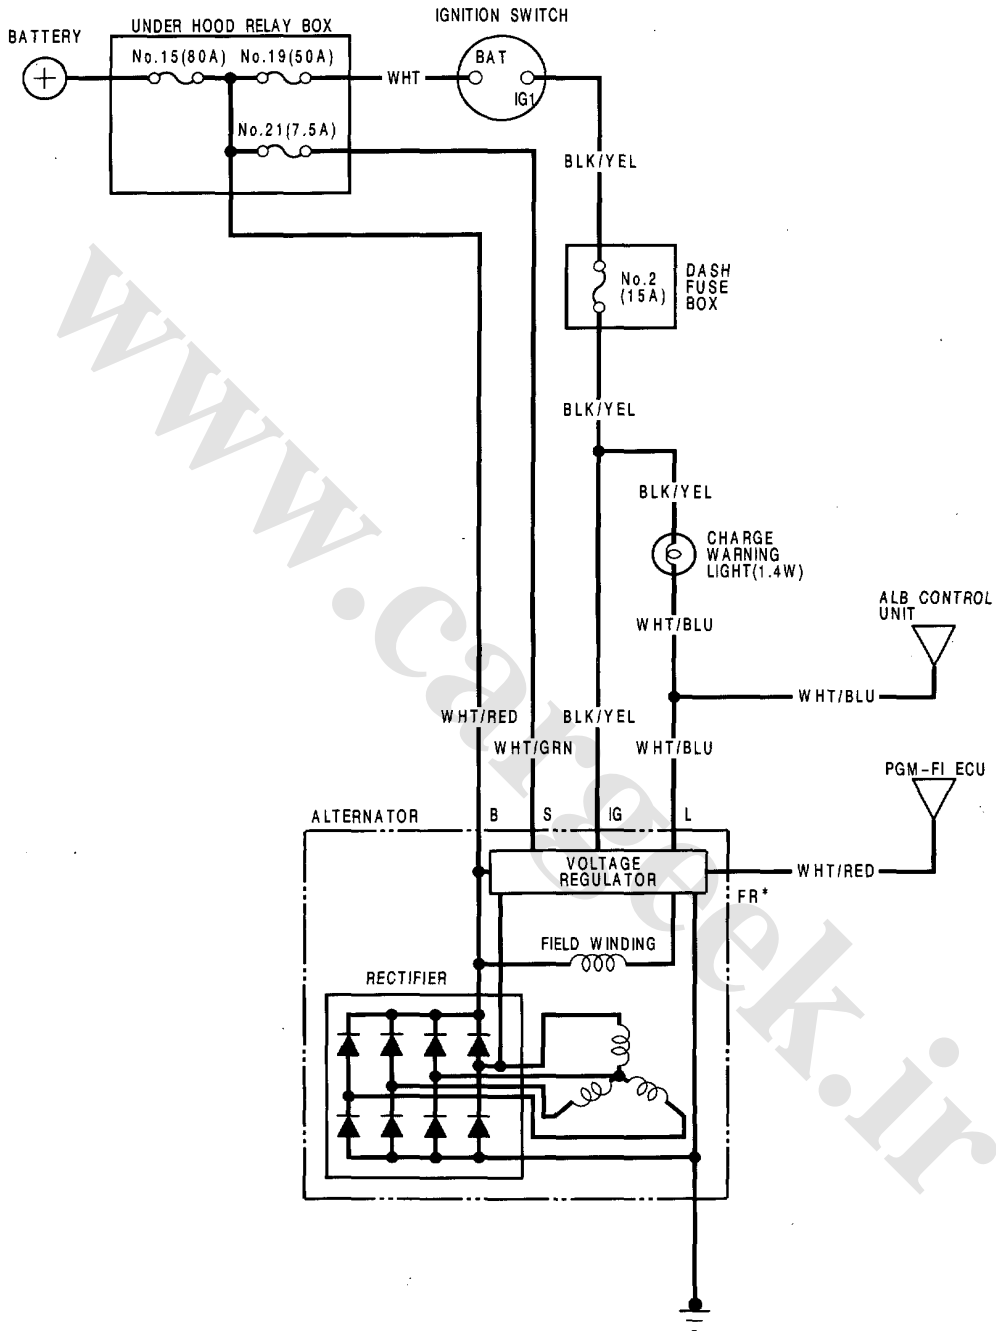


FR* : PGM-FI only

Charging System


Alternator and Regulator Test

1. First make sure you have a good battery, and that the alternator belt, and connections at the alternator and main fuses are good. Next, check the No.2 (15 A) fuse in the dash fuse box. (If blown, the charge warning light will come on even if the system is working properly)
2. Disconnect the alternator connector from the alternator. With the ignition switch on, there should be battery voltage between the IG (BLK/YEL) terminal and body ground.

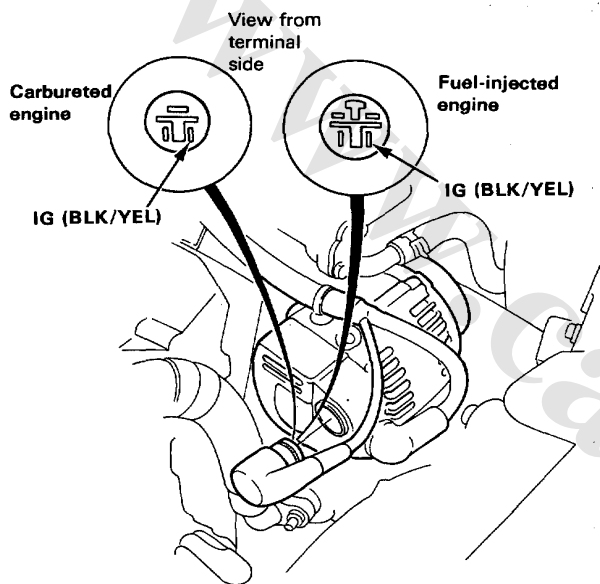

- If there is no voltage, check for an open in the BLK/YEL wire between the dash fuse box and voltage regulator.
- If there is battery voltage, go to step 3.

3. If these check OK, connect a voltmeter between the alternator terminal B and body ground, and an ammeter (100 amp capacity or higher) between the alternator terminal B and the WHT/RED wire as shown. (An inductive pick up can be used instead of disconnecting the WHT/RED wire.)

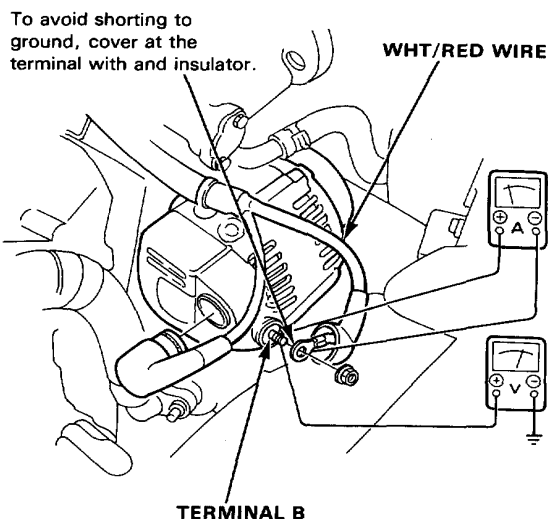

4. Start the engine, and turn on the headlights, blower motor, rear window defogger, etc.

NOTE: If voltage stays above 13.5 V, apply electrical load more to lower the voltage to less than 13.5 V. If the voltage exceeds 16 V, stop the engine and replace the voltage regulator.




Power Antenna Motor Test

1. Remove the trunk side trim panel.
2. Disconnect the 6-P connector from the motor and remove the connector from its clamp.
3. First check power to the motor at the harness pins: There should be battery voltage between the WHT/BLU (+) and BLK (-) terminals all the time. There should be battery voltage between the YEL/WHT (+) and BLK (-) terminals only with the ignition and radio switched ON.
4. Test motor operation:

FULL EXTEND: Connect battery positive to the No.3 and No.4 terminals and negative to the No.1 terminal.


RETRACTED: **Except KE model:** Then disconnect battery positive from the No.3 terminal.

KE model only: Short the No.2 terminal to the No.1 terminal, then connect battery positive to the No.6 terminal and negative to the No.1 terminal.

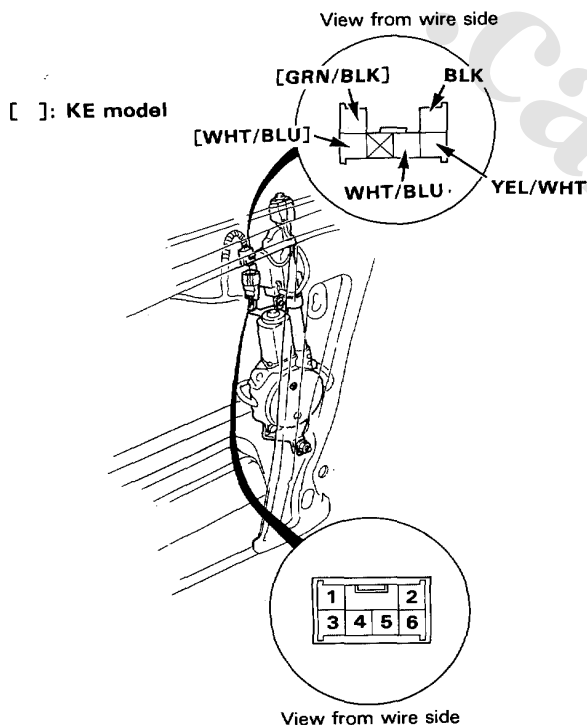


5. If the motor fails to operate properly, replace it.

Except KE model:

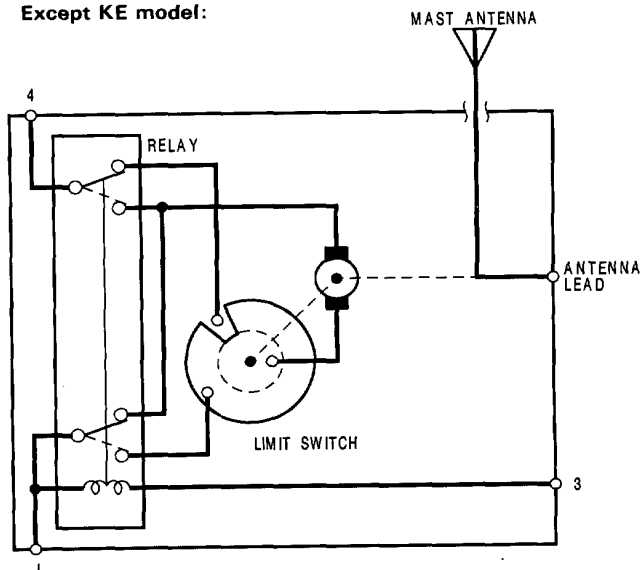

KE model:

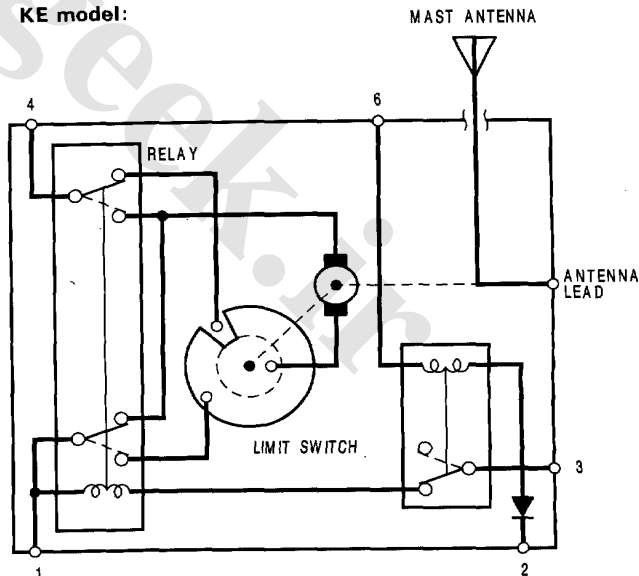

Conventional Brakes
ALB

www.cargeek.ir


Carbureted engine

Fuel- Injected engine

www.cargeek.ir



Fuel-Injected Engine:

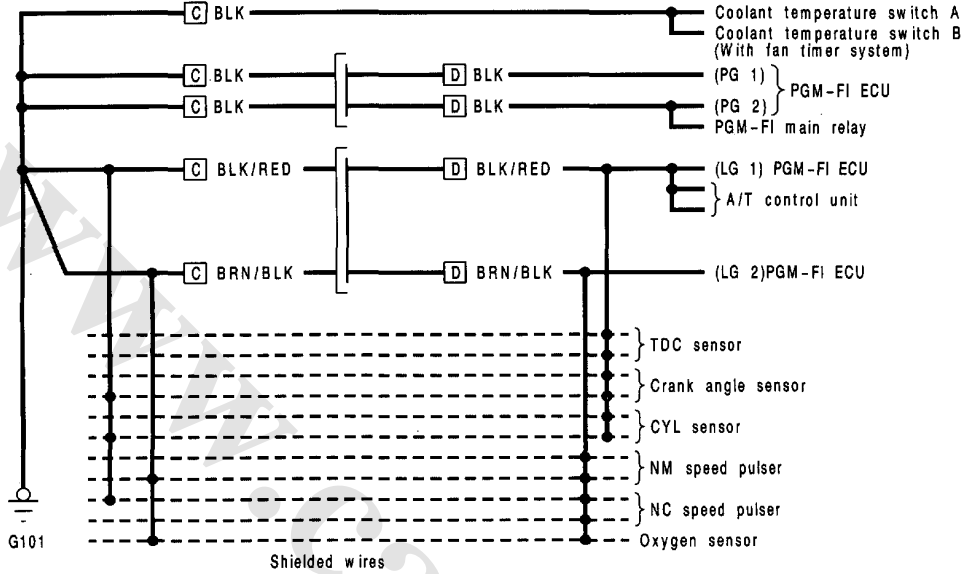


C : Engine wire harness
D : Main wire harness

(cont'd)

Ground Distribution

Circuit Identification (LHD)




NOTE: See page 16-19 for illustrated ground locations.

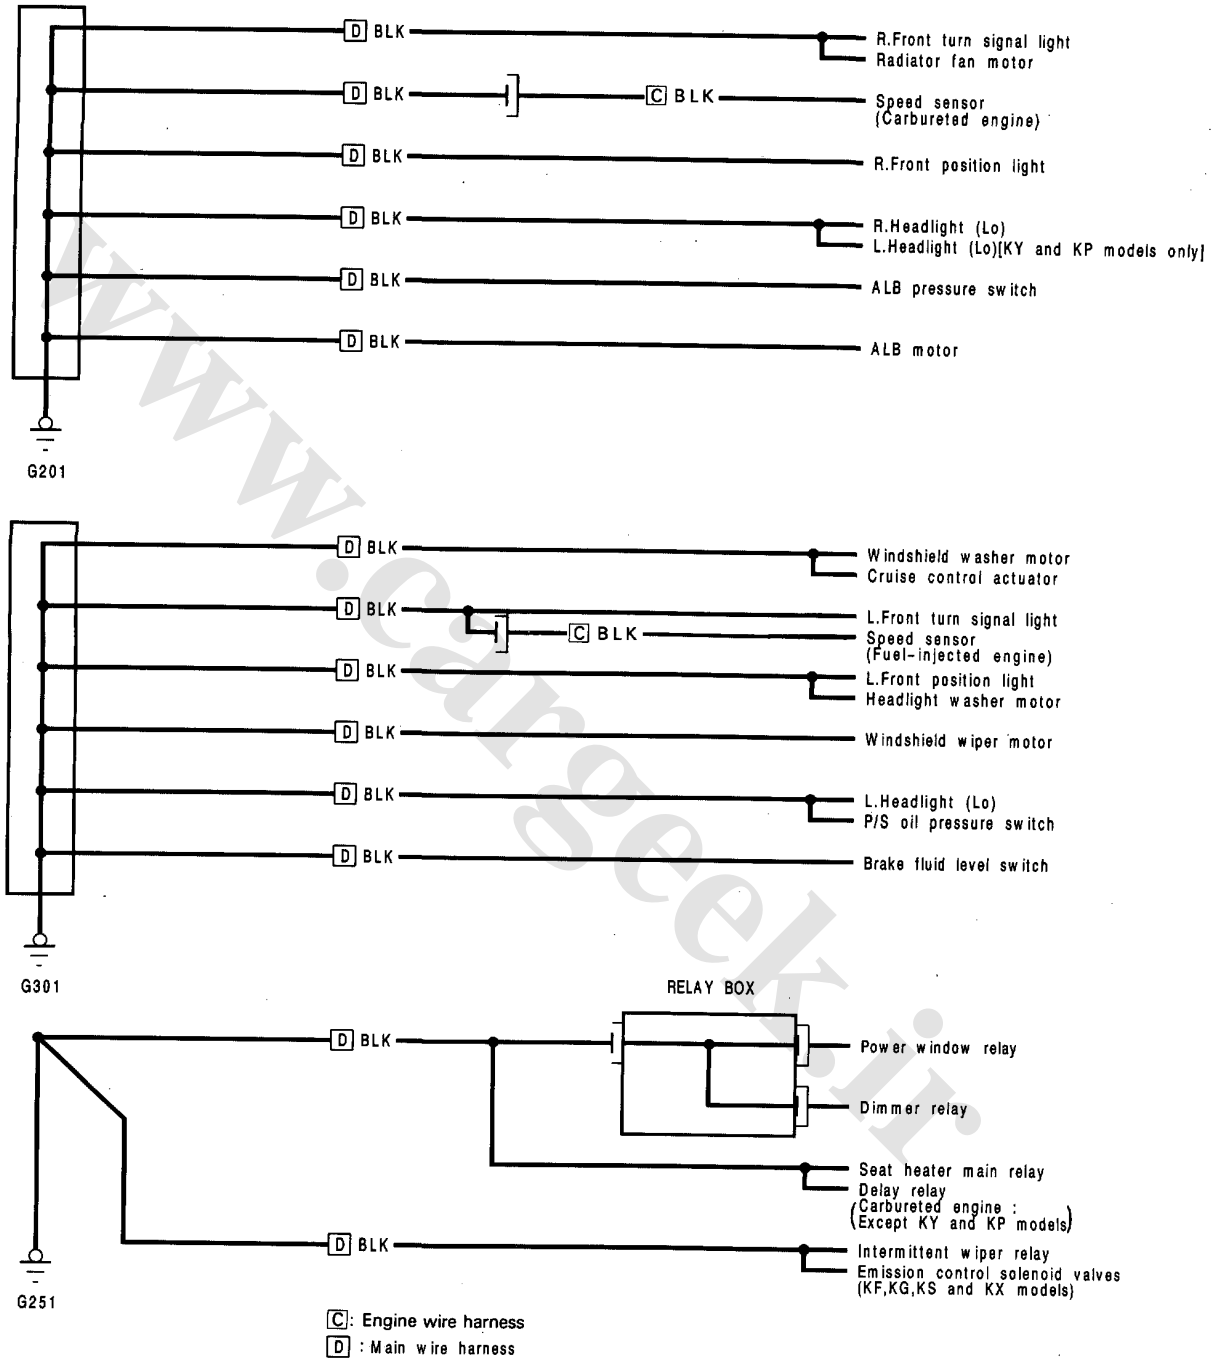



(RHD)

NOTE: See page 16-19 for illustrated ground locations.

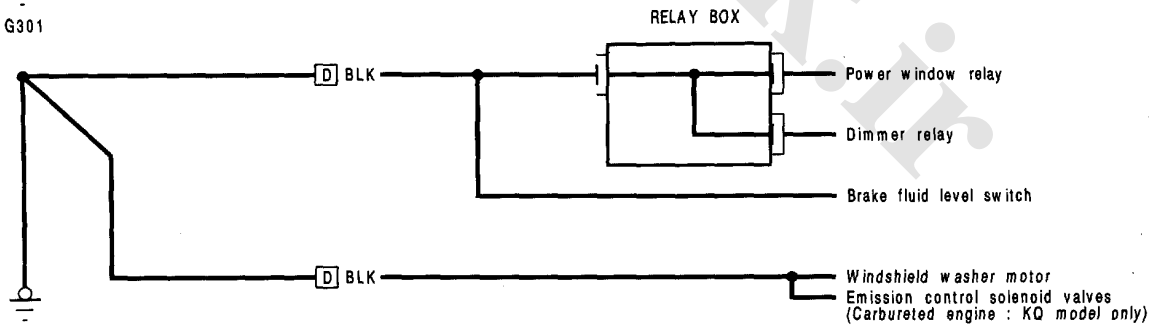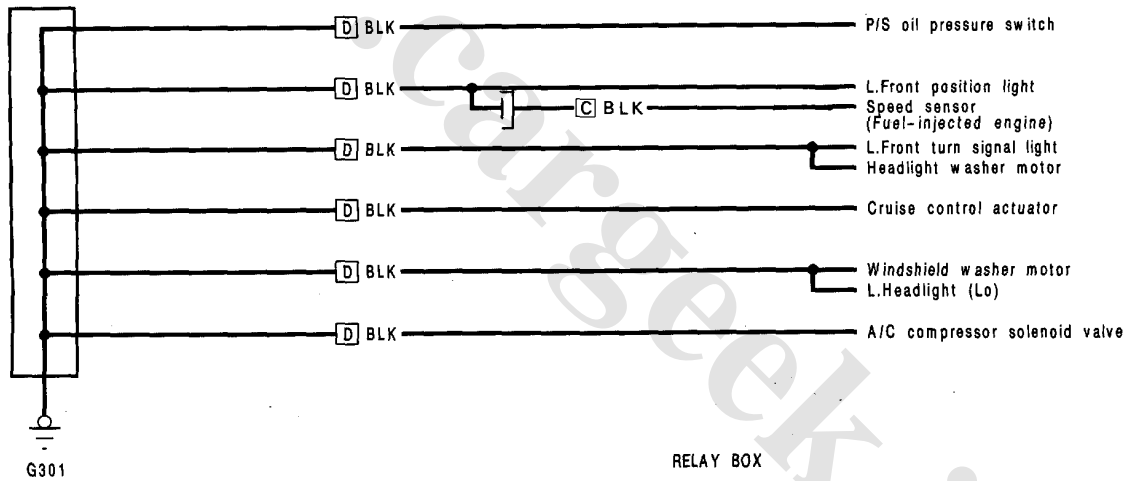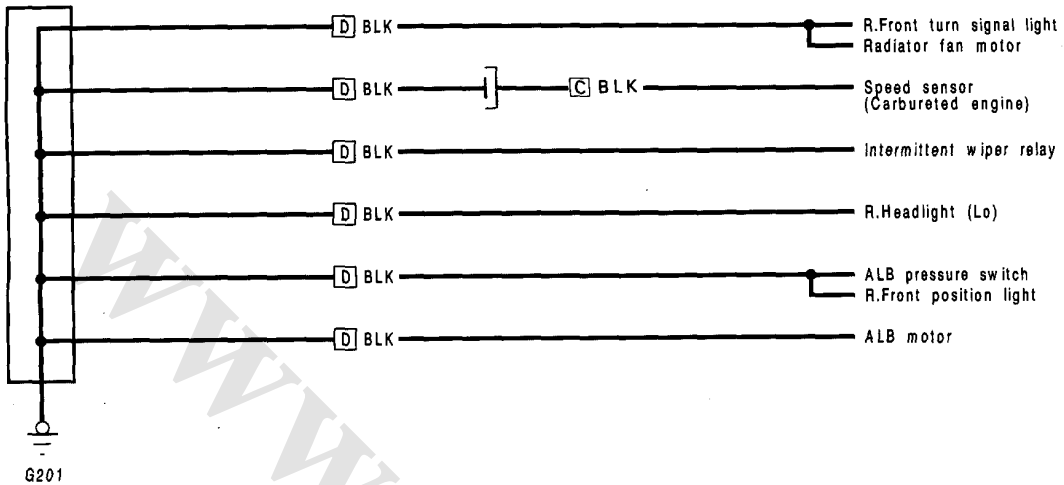


[C]: Engine wire harness
 [D]: Main wire harness

(cont'd)

Ground Distribution

Circuit Identification (LHD)


NOTE: See page 16-20 for illustrated ground locations.

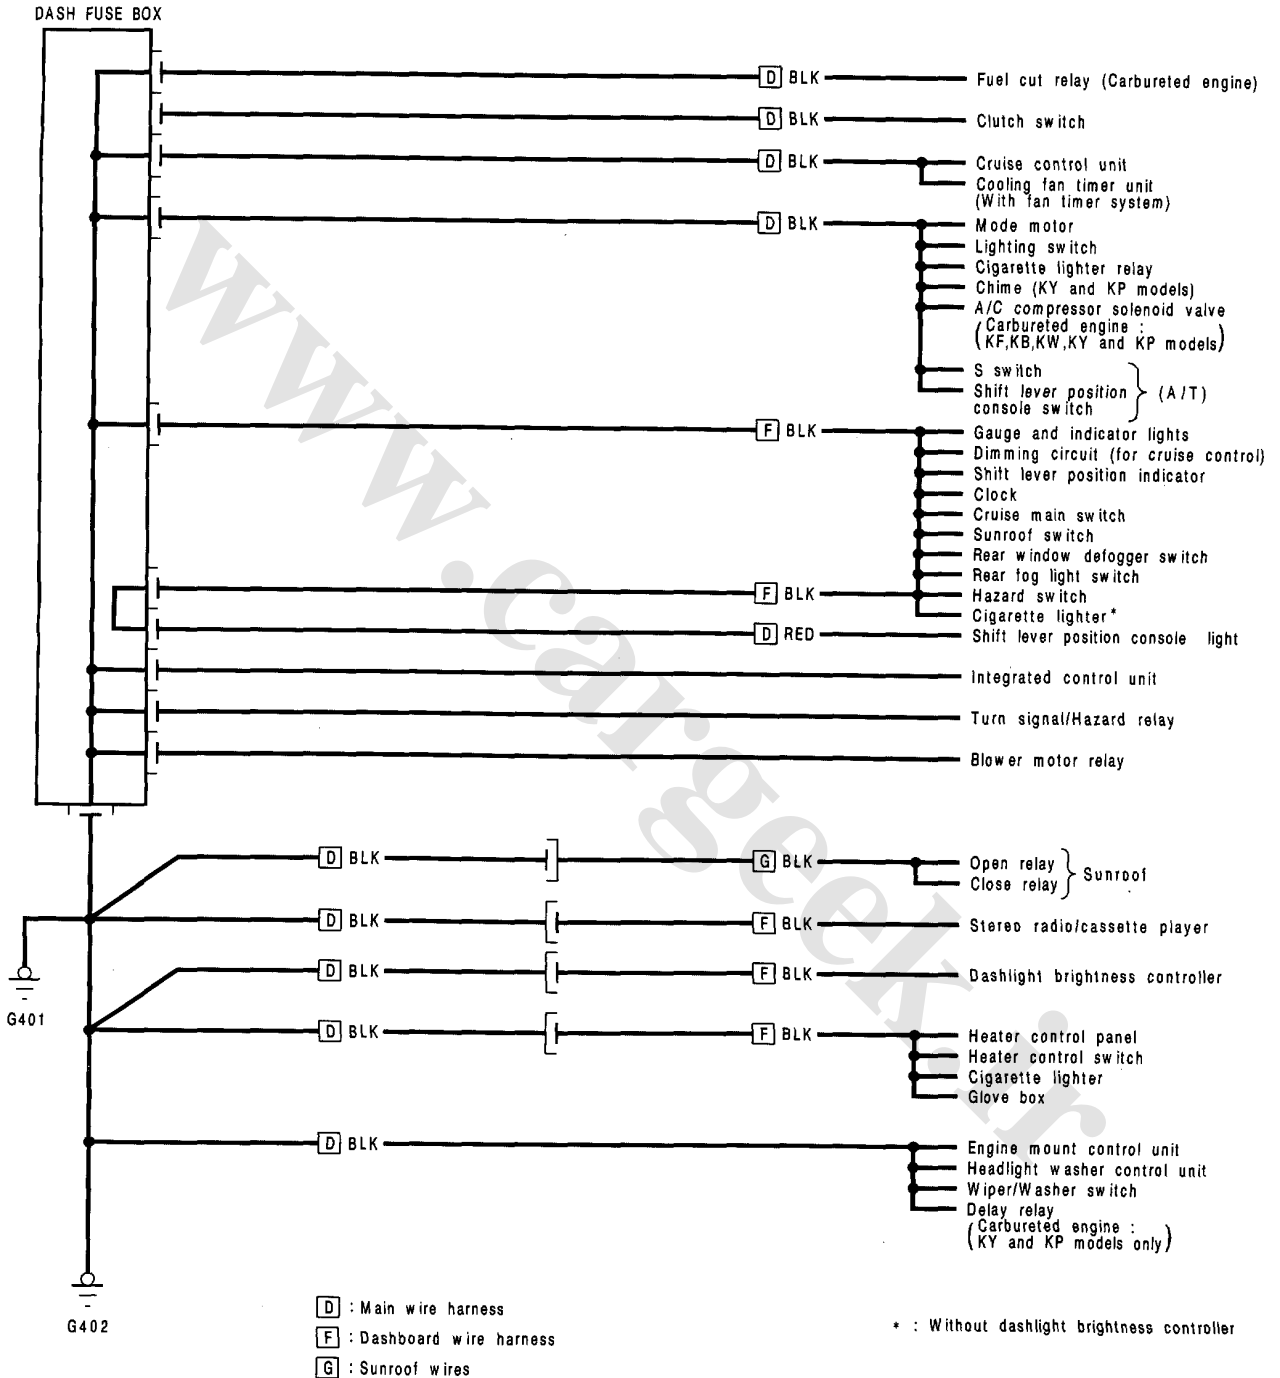



(RHD)

NOTE: See page 16-21 for illustrated ground locations.

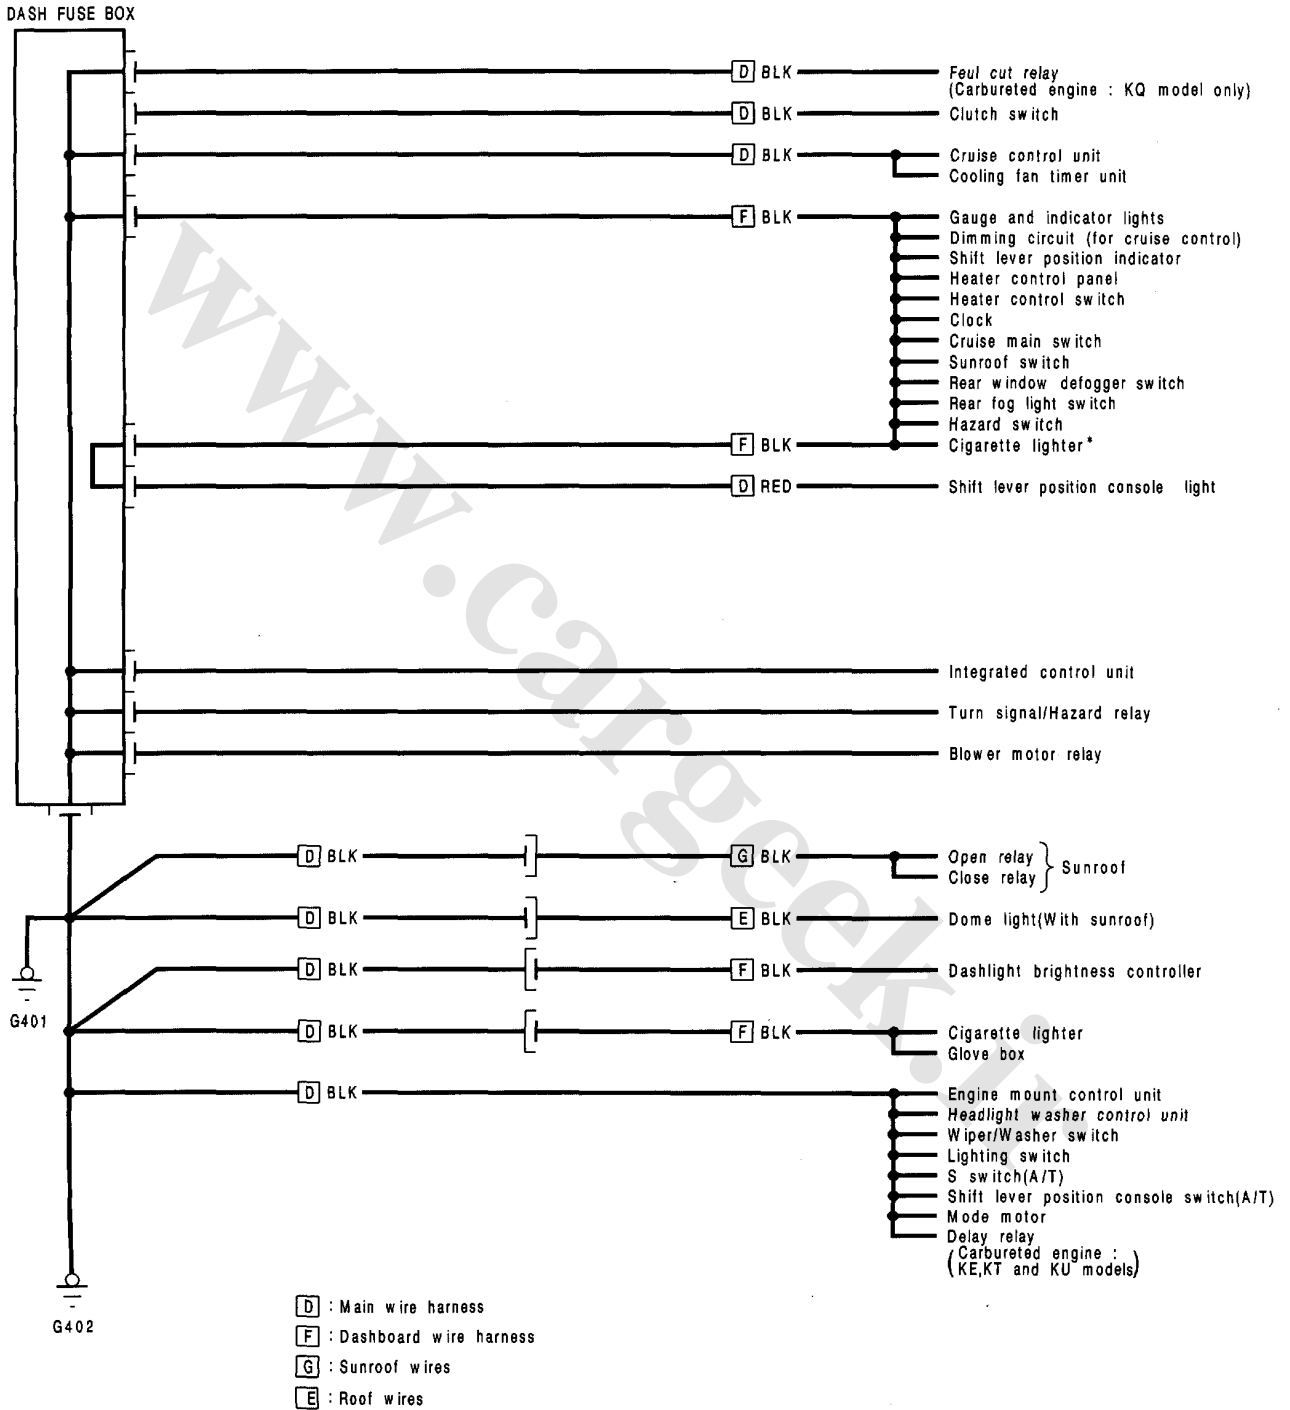


* : Without Dashlight brightness controller

(cont'd)

Ground Distribution

Circuit Identification (LHD)


NOTE: See page 16-22 for illustrated ground locations.

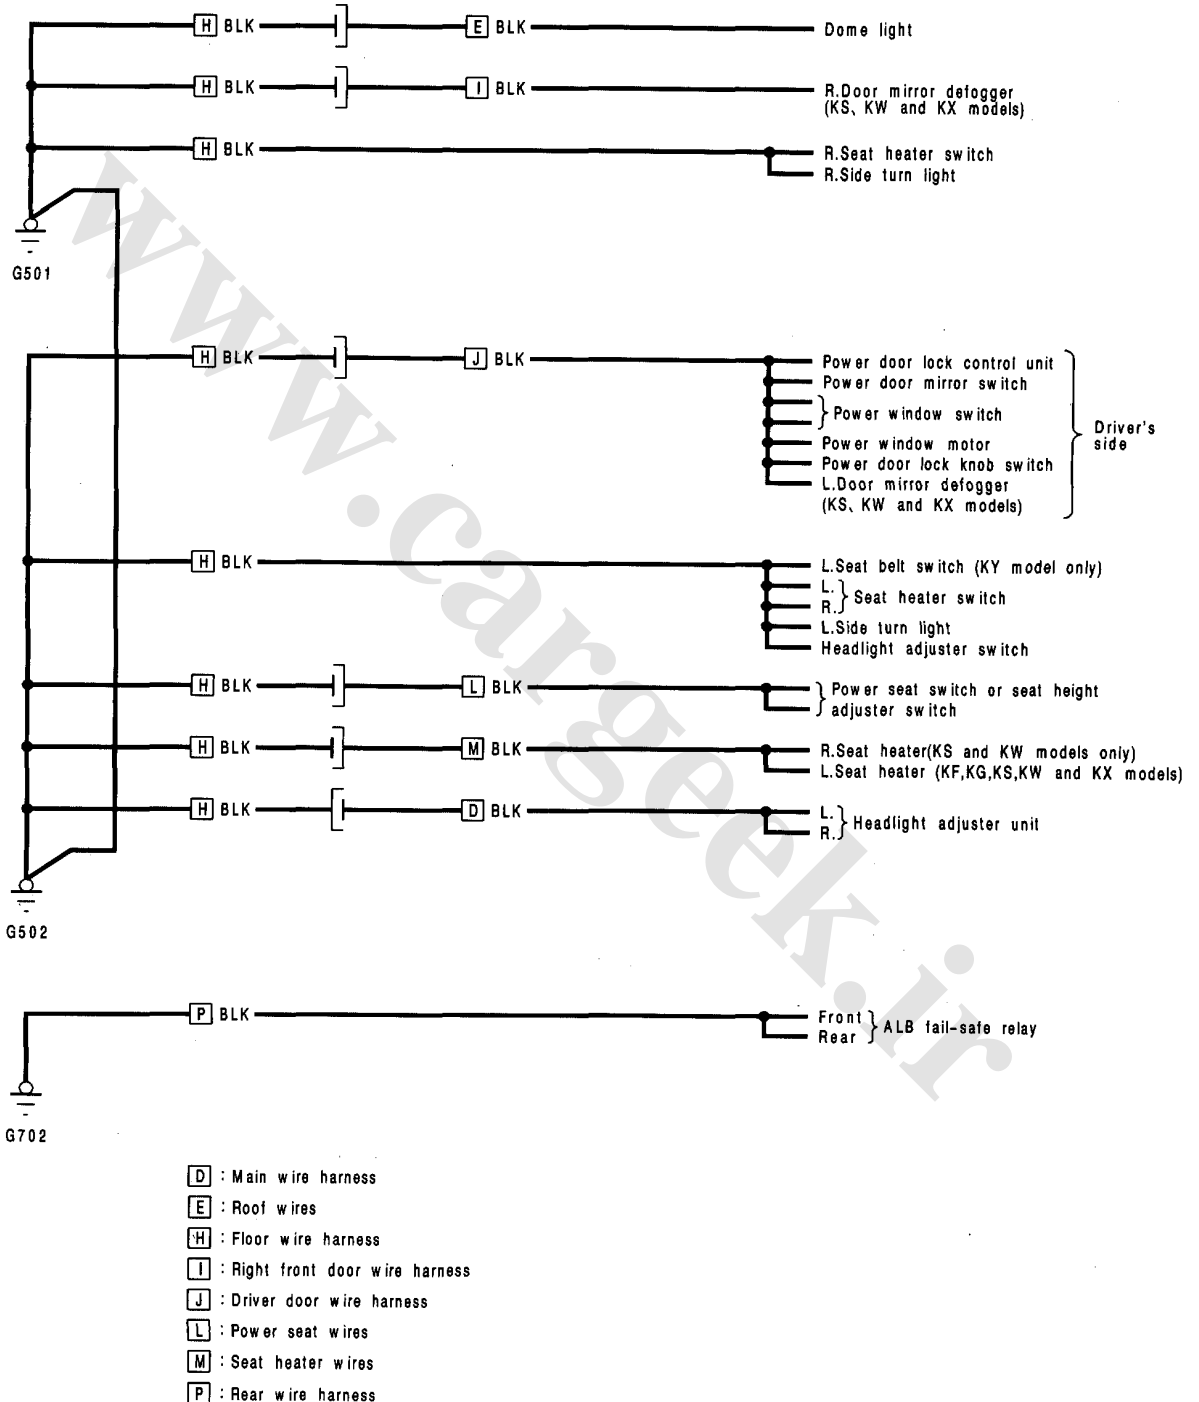



(RHD)

NOTE: See page 16-23 for illustrated ground locations.

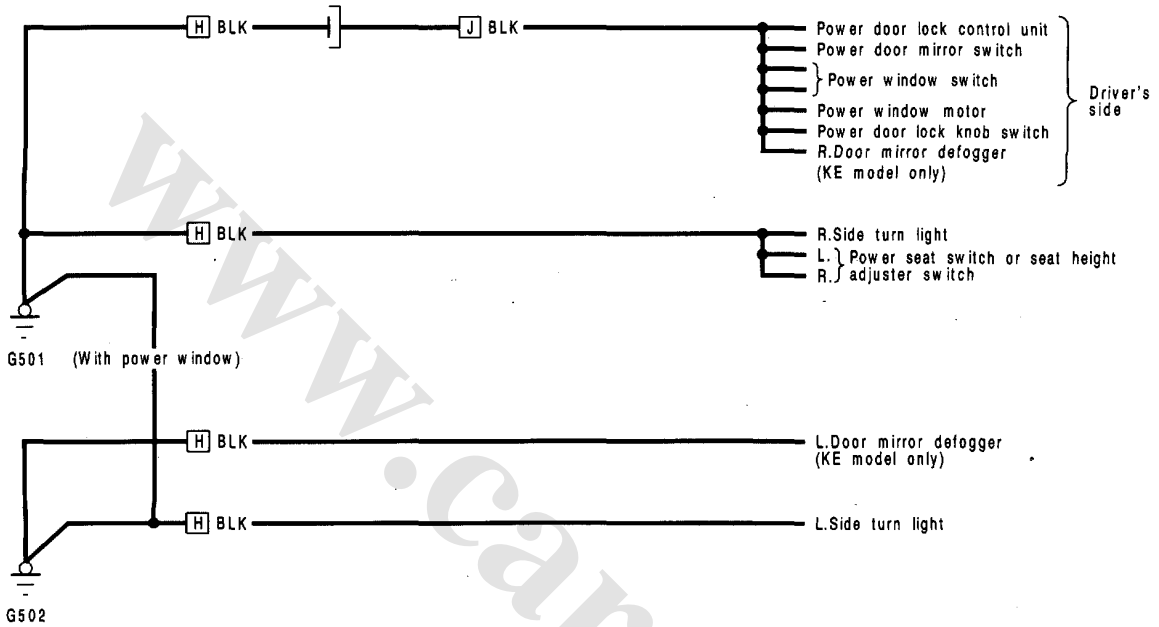


H : Floor wire harness
J : Driver door wire harness

Ground Distribution

Circuit Identification (LHD)

NOTE: See pages 16-17, 26 and 30 for illustrated ground locations.

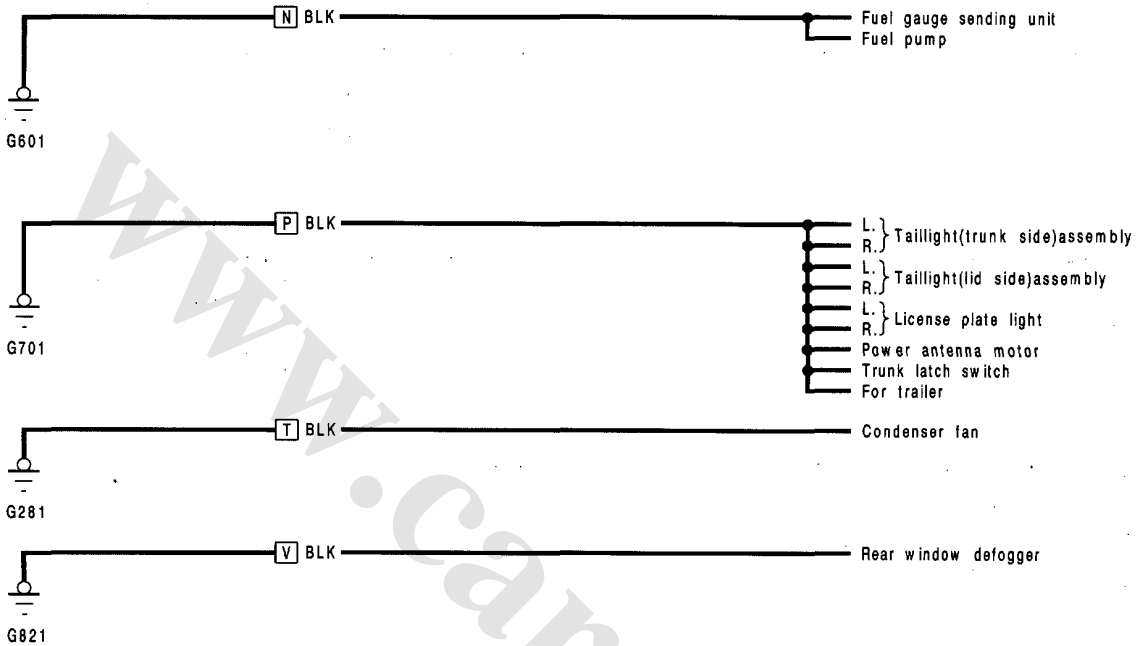


- N** : Fuel tank wires
- P** : Rear wire harness
- T** : A/C wire harness
- V** : Defogger ground wire



(RHD)

NOTE: See pages 16-17, 27 and 30 for illustrated ground locations.

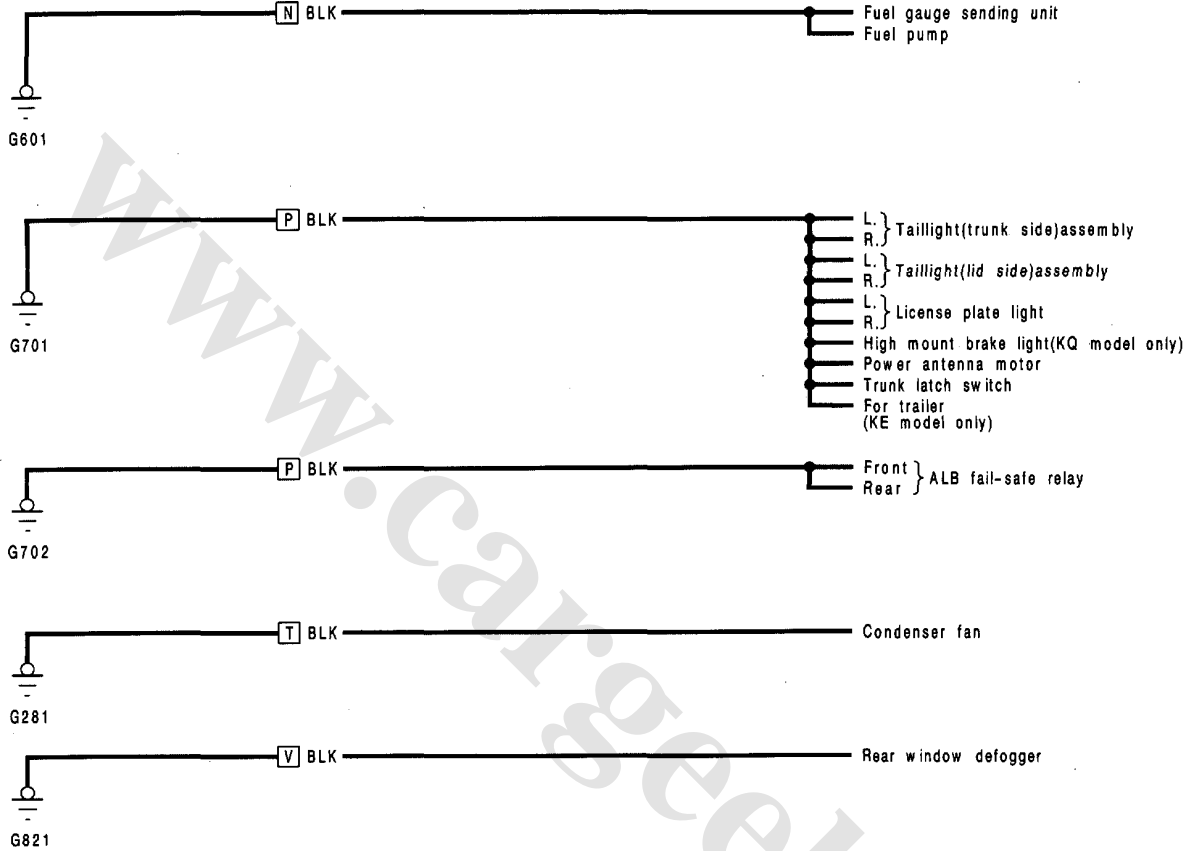

- N** : Fuel tank wires
- P** : Rear wire harness
- T** : A/C wire harness
- V** : Defogger ground wire

Battery

Test

NOTE: To get accurate results, the temperature of the electrolyte must be between 15 and 38°C (59 and 100°F) before testing.

Test Equipment Required:


- Battery tester with:
Voltmeter with 0–18 V scale, Ammeter with 0–100 A and 0–500 A scales, and a carbon pile with 0–300 W.
- 12 V Battery Charger:
Fast charge capability of 50 A and slow charge capability of 5 A.

Test Procedure:

⚠ WARNING Keep sparks, flames and cigarettes away while charging battery.

CAUTION: Battery electrolyte is a sulfuric acid solution.

- If it spills on painted surfaces, clothing, or skin, rinse it off with water immediately to minimize the damage.
 - Always wear safety goggles or a face shield when servicing a battery.
1. Check for damage: If the case is cracked or the posts are loose, replace the battery.
 2. Check the battery electrolyte level:
Check the electrolyte level in each cell.
If it's low, add distilled water until the electrolyte rises to the UPPER mark.

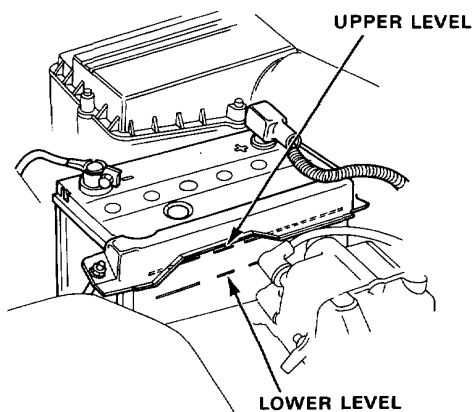

3. Test battery load capacity by connecting a battery tester, and applying a load of 3 times the battery ampere hour rating.
When the load has been applied for exactly 15 seconds, the battery voltage reading should stay above 9.6 V.

- If the reading stays above 9.6 V, the battery is OK; clean its terminals and case, and reinstall it.
- If the reading is between 6.5 and 9.6 V, fast charge the battery by connecting a battery charger, for 3 minutes at an initial rate of 40 amps.

CAUTION: Amperage will drop as voltage increases; do not increase the amperage to compensate or you may damage the battery.

Watch the battery voltage during the entire 3 minutes; the highest reading should stay below 15.5 V.


- If the reading stays below 15.5 V, the battery is OK; clean its terminals and case, and reinstall it.
- If the reading exceeds 15.5 V any time during the 3 minutes of fast charge, the battery is no good; replace it.
- If the reading drops below 6.5 V, slow charge the battery by connecting a battery and charge, at 5 amps for no more than 24 hours, (or until the indicator shows full charge, or the specific gravity of the electrolyte is at least 1.250). Then test load capacity again.
 - If the voltage stays above 9.6 V, the battery is OK; clean its terminals and case, and reinstall it.
 - If the voltage still drops below 6.5 V, the battery is no good; replace it.



Ignition Wire Inspection and Test


CAUTION: Carefully remove the ignition wires by pulling on the rubber boots. Do not bend the wire or the conductor may be broken.

1. Check the condition of the wire terminals. If any terminal is corroded, clean it, and if it is broken or distorted, replace the wire.

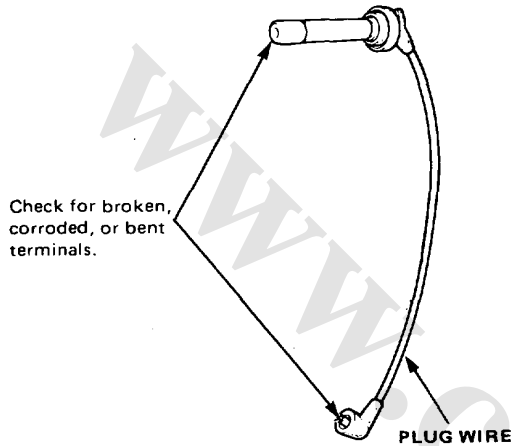

2. Connect ohmmeter probes and measure resistance.


Ignition Wire Resistance:
25,000 ohms max. at 20°C (70°F)

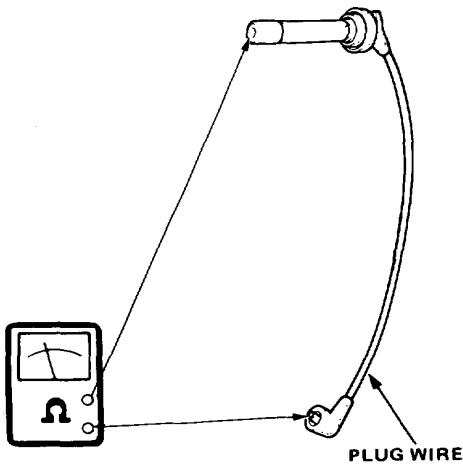

3. If resistance exceeds 25,000 ohms, replace the ignition wire.


Charging System

Component Location Index

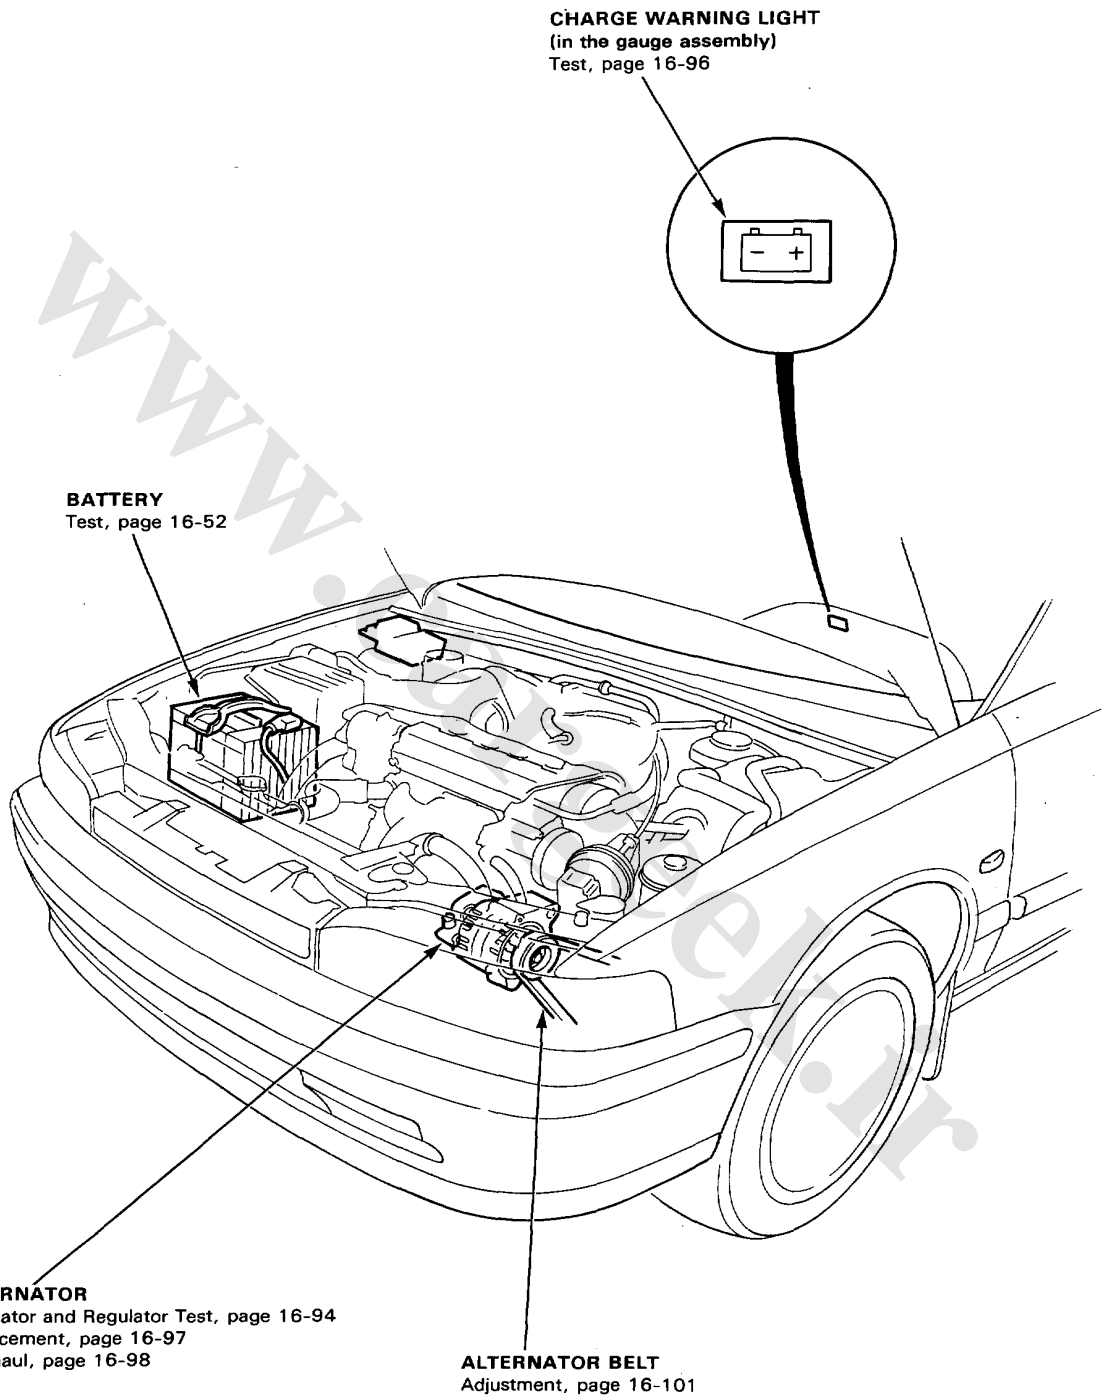


Cigarette Lighter

Component Location Index

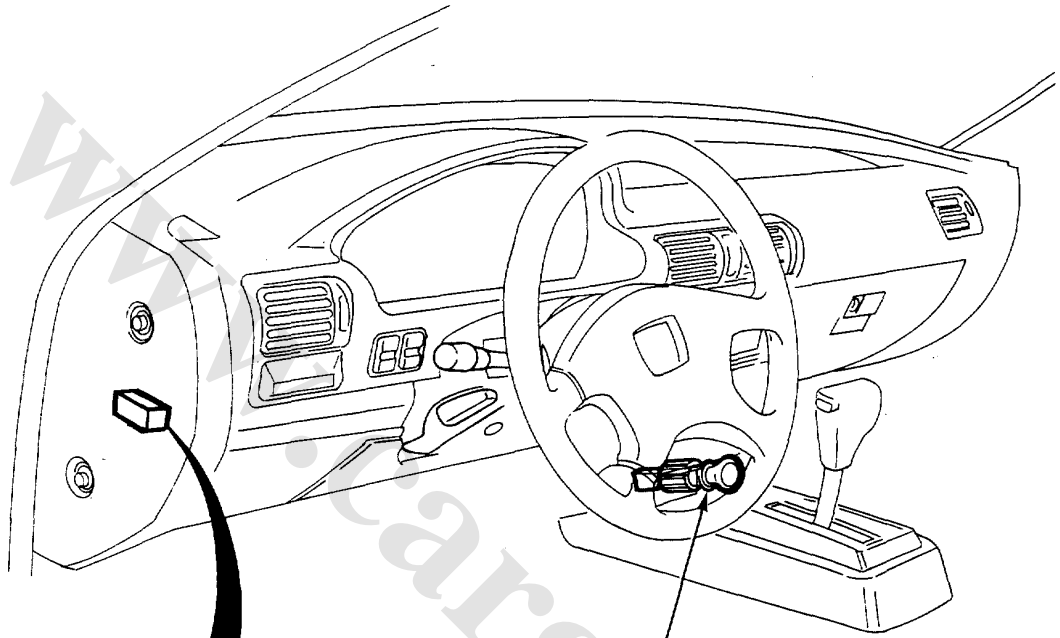

CIGARETTE LIGHTER
Replacement, page 16-200

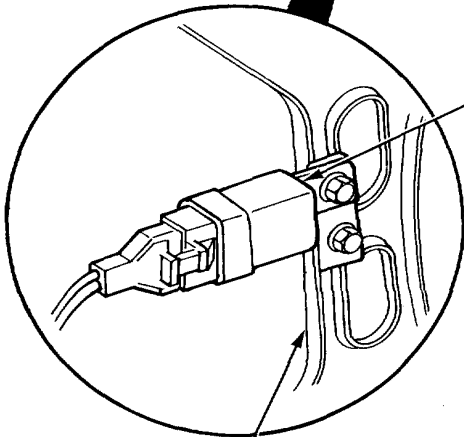

**CIGARETTE LIGHTER
RELAY**
Test, page 16-200

L. KICK PANEL




Clock


Removal

1. Pry out the clock from the dashboard, then disconnect the 4-P connector.

NOTE: Be careful not to damage the clock or the dashboard when prying out the clock.

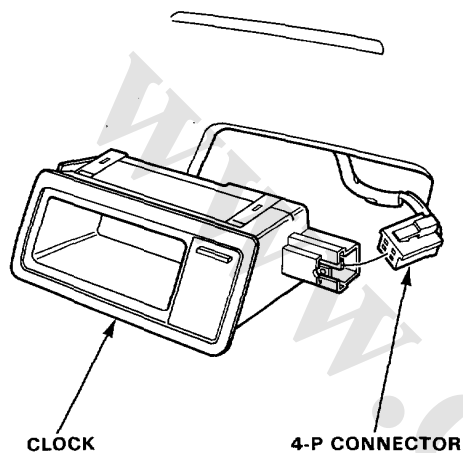

Terminals:

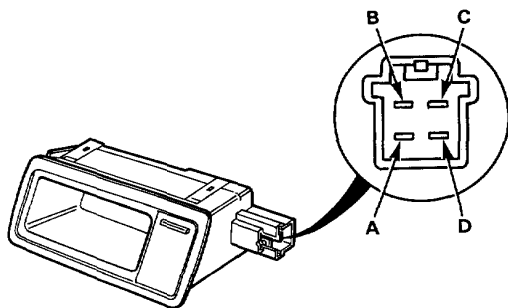


Terminal	Wire	Destination
A	RED/BLK	Light-on signal
B	BLK	Ground
C	YEL	IG1 (Main clock power supply)
D	WHT/YEL	Constant power (Time memory)




Cooling Fan Control

Component Location Index

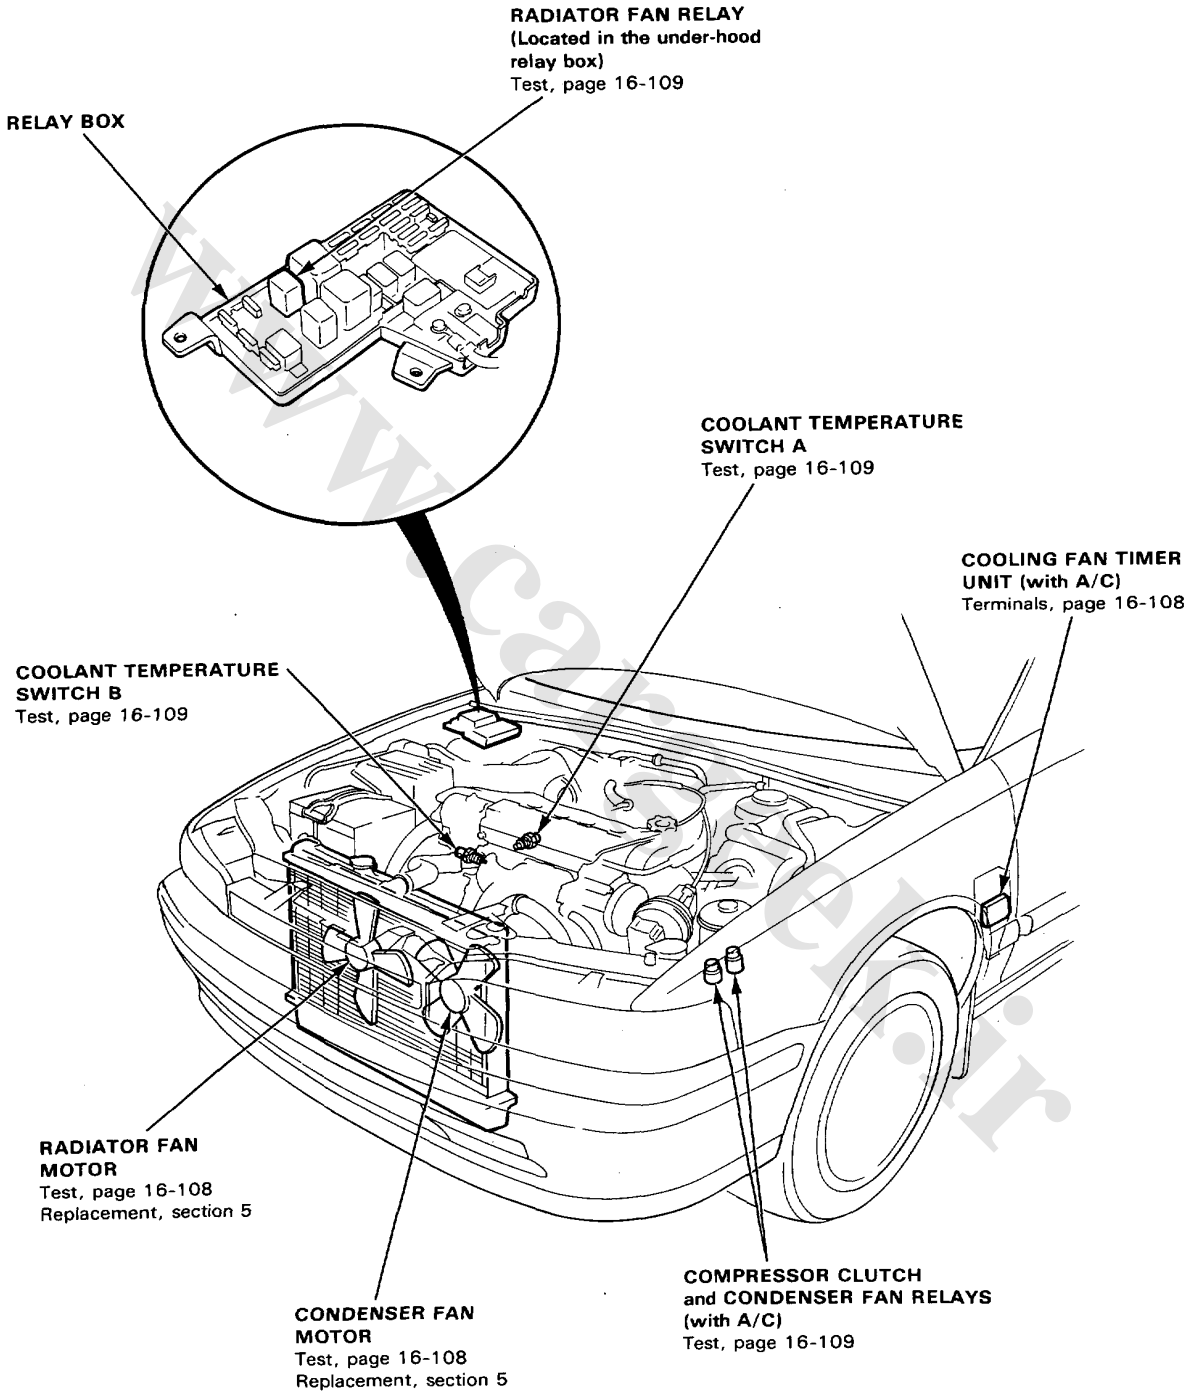


Cooling Fan Control

Circuit Diagram (KY and KQ models)

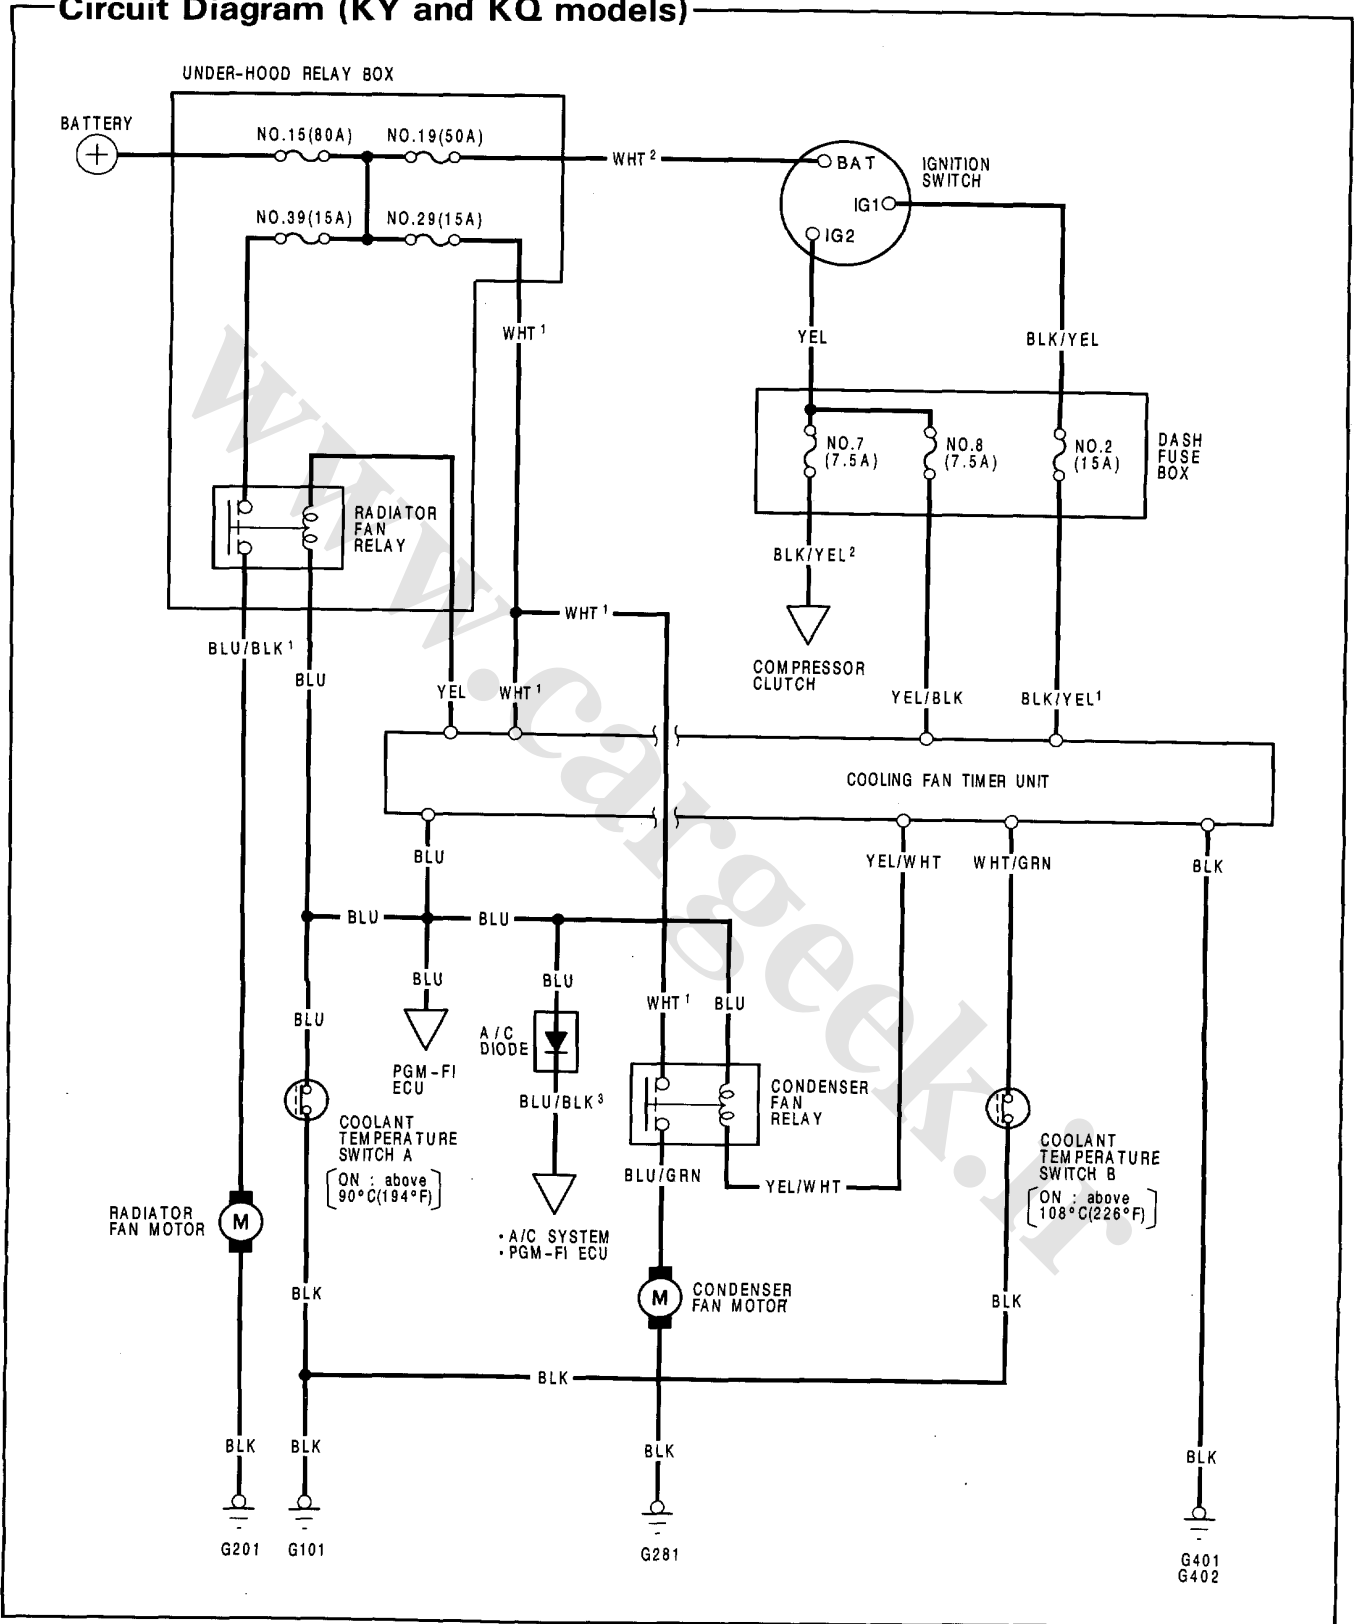




Circuit Diagram (Except KY and KQ models: With Fan Timer System)

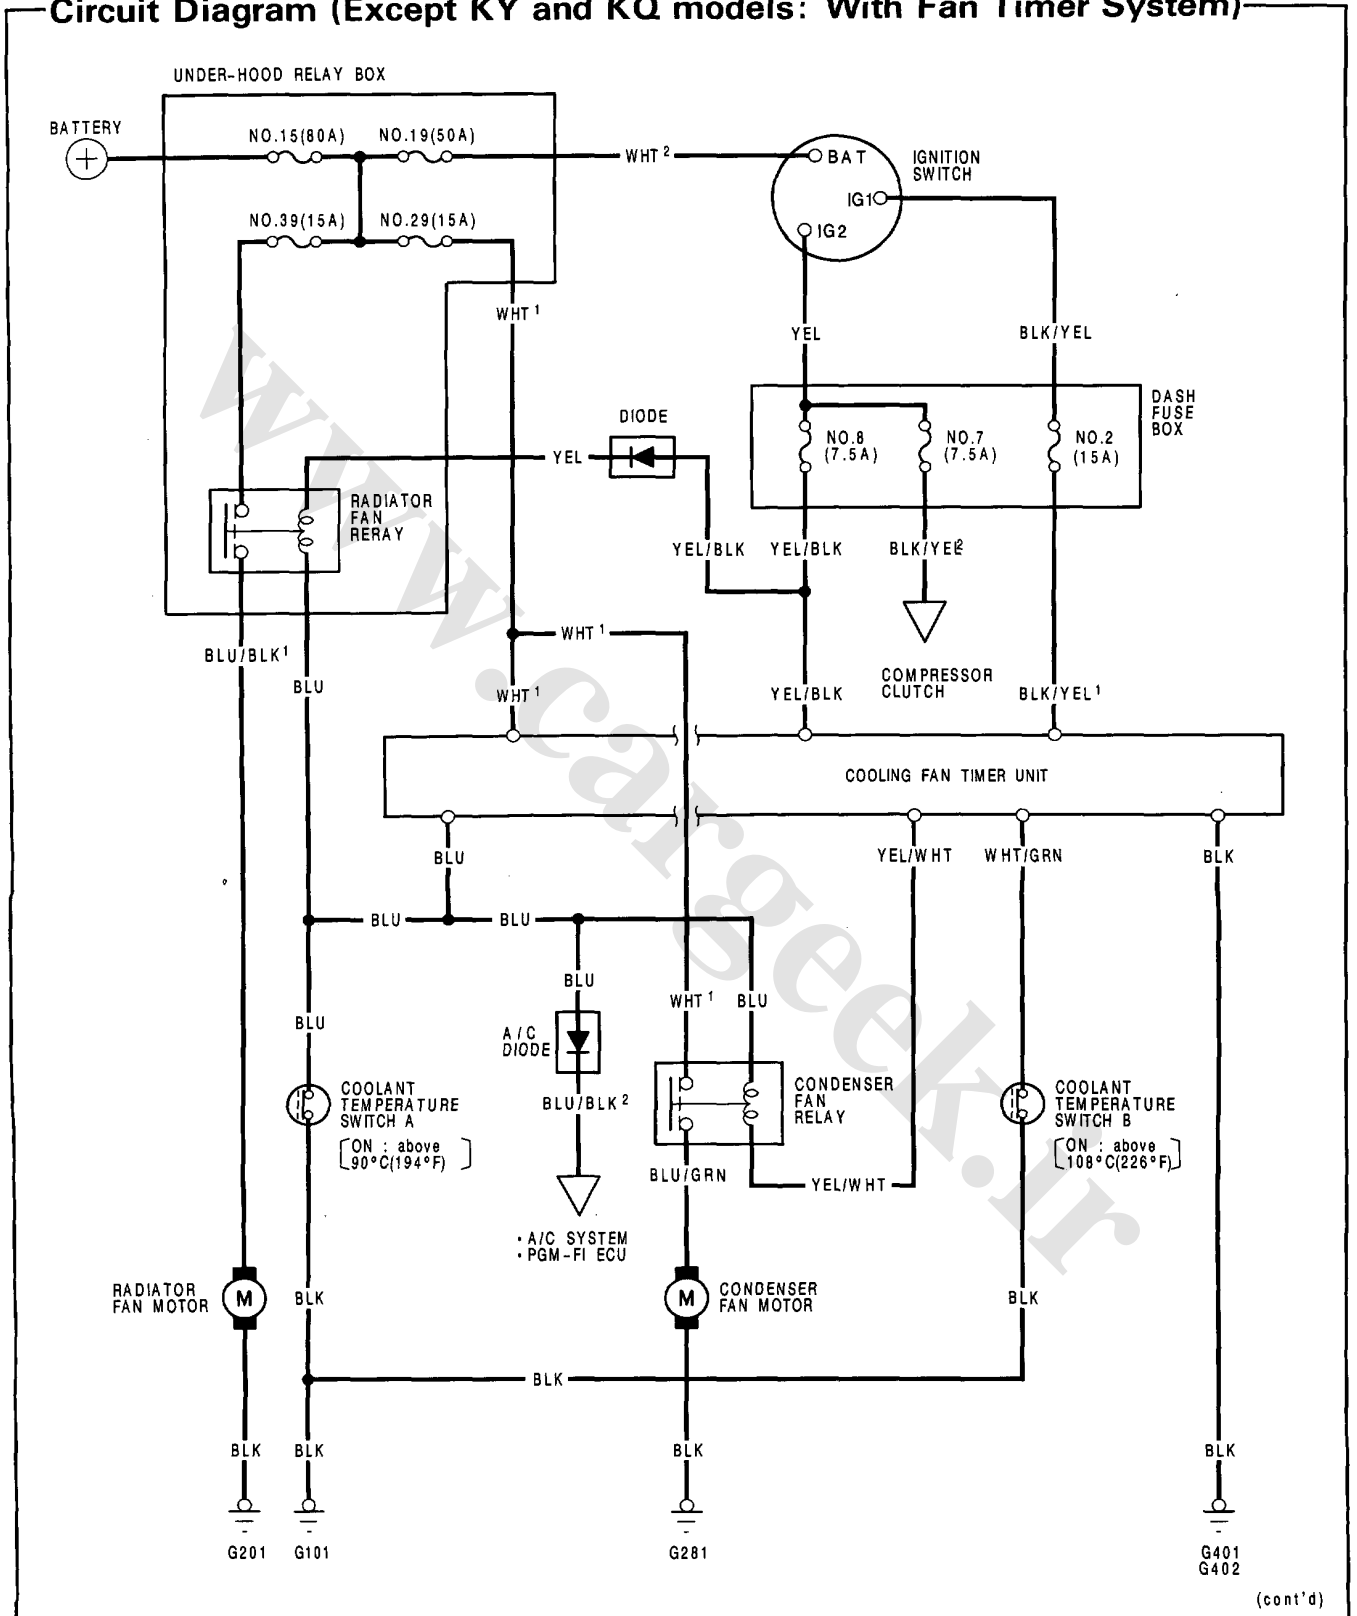

(cont'd)


Cooling Fan Control

Circuit Diagram (Except KY and KQ models: Without Fan Timer System)

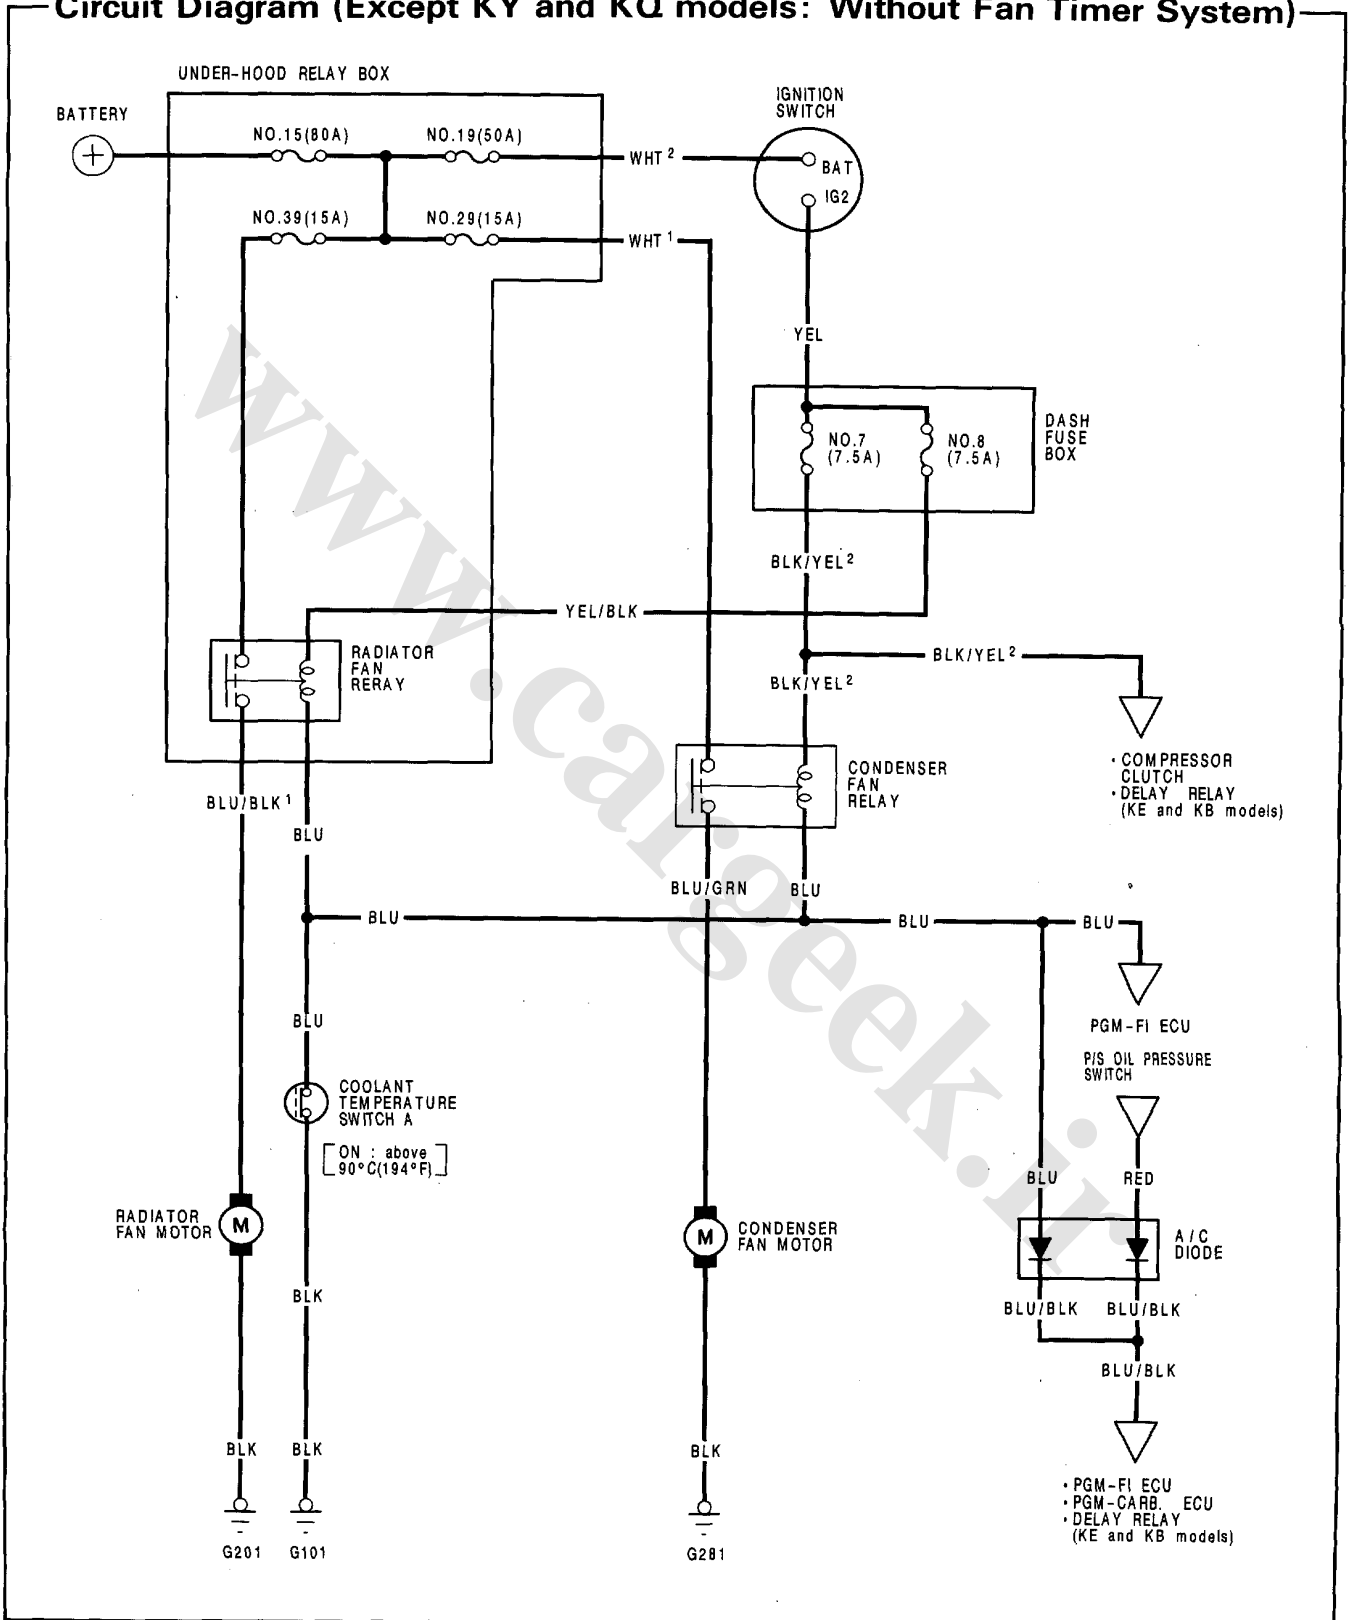



Circuit Diagram (Without A/C)

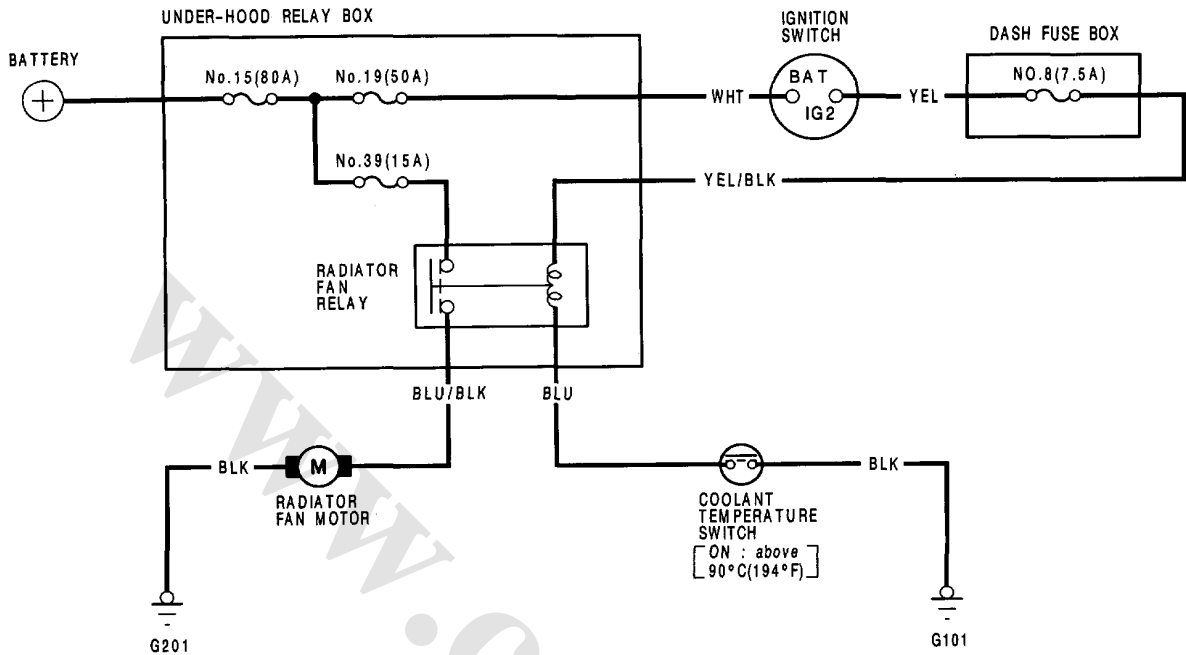


Troubleshooting (With A/C)

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 29 (15 A) or No. 39 (15 A) fuse (in the under-hood relay box)	Radiator fan or condenser fan relay	Radiator fan or condenser fan motor	A/C diode	Blown No. 2 (15 A) fuse (in the dash fuse box)	Coolant temperature switch A	Faulty cooling fan timer unit	Coolant temperature switch B	A/C system	Poor ground	Open circuit in wires or loose or disconnected terminals
Symptom		1	2	3	4						G401 G402	BLU, BLU/BLK ¹ , BLU/BLK ² BLU/BLK ³ , BLU/YEL, YEL/BLK, YEL/WHT, BLU/GRN, YEL or WHT ¹
Fans do not rotate.	Under all conditions.					1	2	3			G101	YEL/BLK, YEL or BLU
	A/C ON									1		
Fan timer unit fails to function properly.								2	1		G401 G402	WHT ¹ , WHT/GRN or YEL/WHT

Cooling Fan Control

Timer Unit Terminals (With fan timer system)

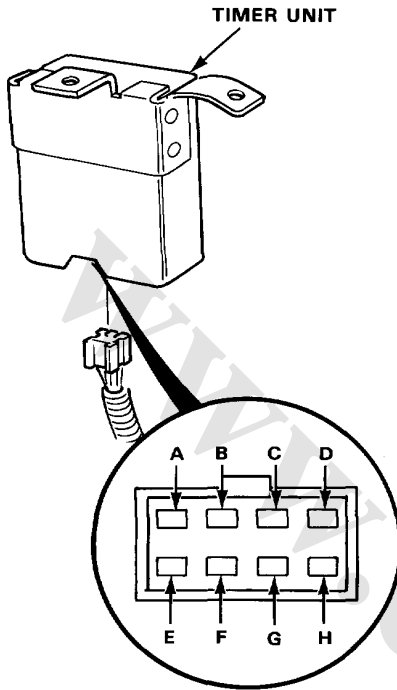

Terminal	Wire	Destination
A	YEL*1	Radiator fan relay ⊕
	YEL/WHT*2	Condenser fan relay ⊖
B	YEL/BLK	Power supply (For condenser fan relay by way of timer unit with ignition switch ON)
C	WHT/YEL*1	Condenser fan relay ⊖
	*2	(Not used)
D	BLK	Ground
E	WHT/GRN	Coolant temperature switch B
F	WHT	Constant power (For condenser fan relay by way of timer unit)
G	BLK/YEL	IG1 (Timer reset signal)
H	BLU	Condenser fan relay ⊕


* 1: KY and KQ models

* 2: Except KY and KQ models


Fan Motor Test

1. Disconnect the 2-P connector from the fan motor.
2. Test motor operation by connecting battery positive to the A terminal, and negative to the B terminal.
3. If the motor fails to run smoothly, replace it.

Radiator Fan Motor:

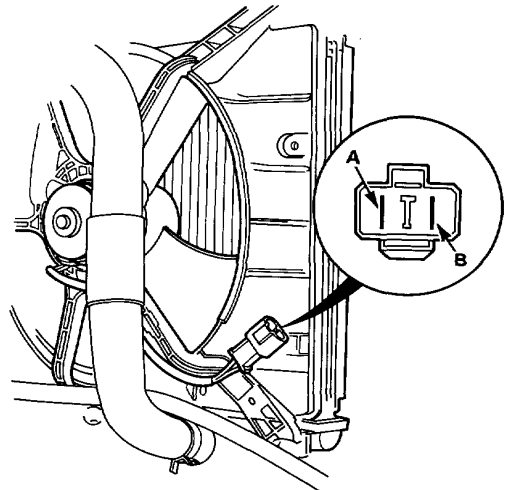

Condenser Fan Motor:

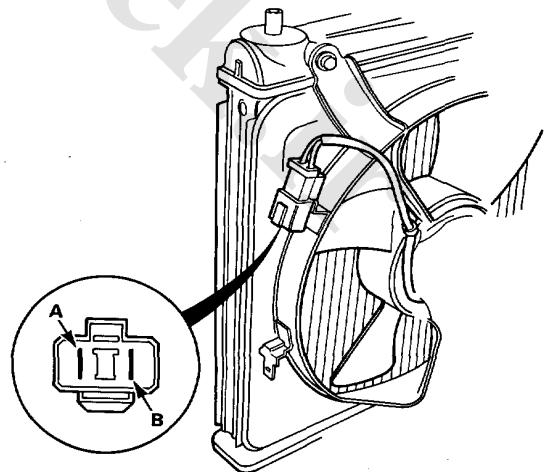




Relay Test


There should be continuity between the A and B terminals when the battery is connected to the C and D terminals. There should be no continuity when the battery is disconnected.

NOTE: Test procedures are same for all relays.

RADIATOR FAN RELAY (in the relay box)

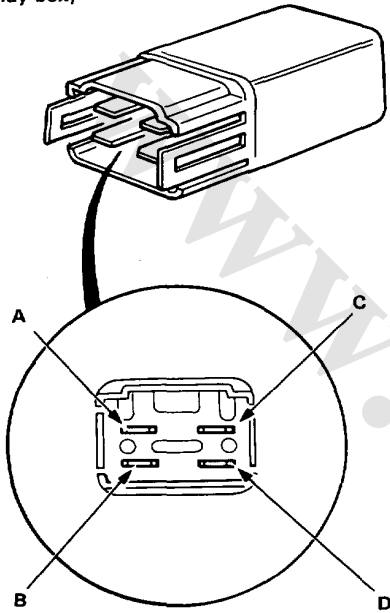


CONDENSER FAN RELAY (With A/C)

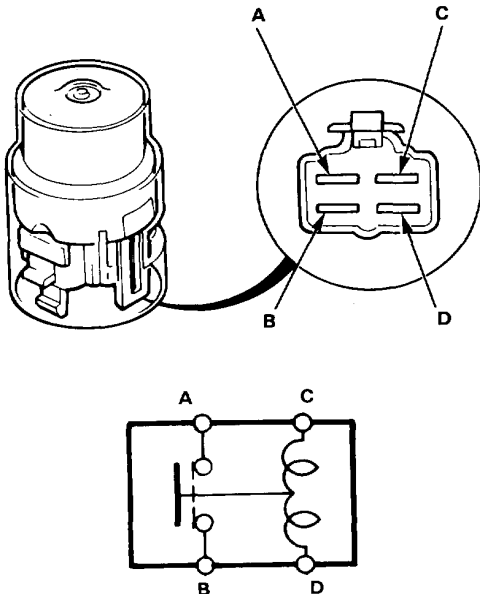

Coolant Temperature Switch Test

1. Remove the coolant temperature switch A from the thermostat housing or the switch B from the water outlet cover.
2. Suspend the coolant temperature switch in a container of coolant as shown.

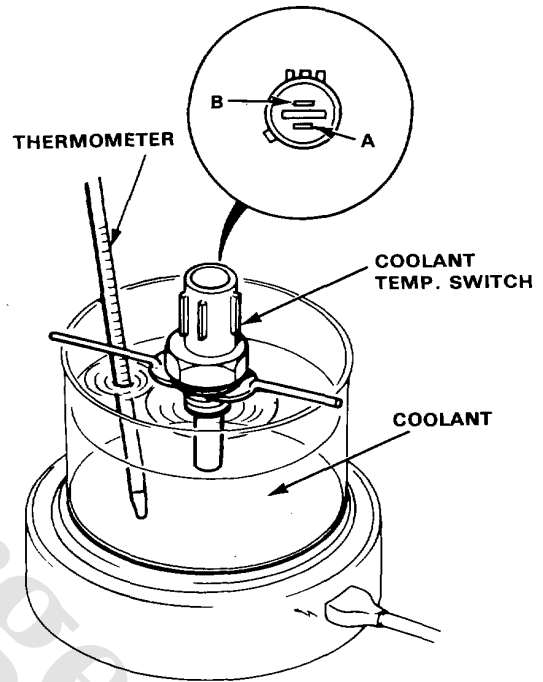


3. Heat the coolant and check coolant temperature with a thermometer.
4. Measure the resistance between the A and B terminals according to the table.

		Terminal	
Temperature		A	B
Switch A	Above	87–93°C (189–199°F)	○—○
	Below	80–91°C (176–196°F)	
Switch B	Above	105–111°C (221–232°F)	○—○
	Below	98–109°C (208–228°F)	




Cruise Control

Component Location Index

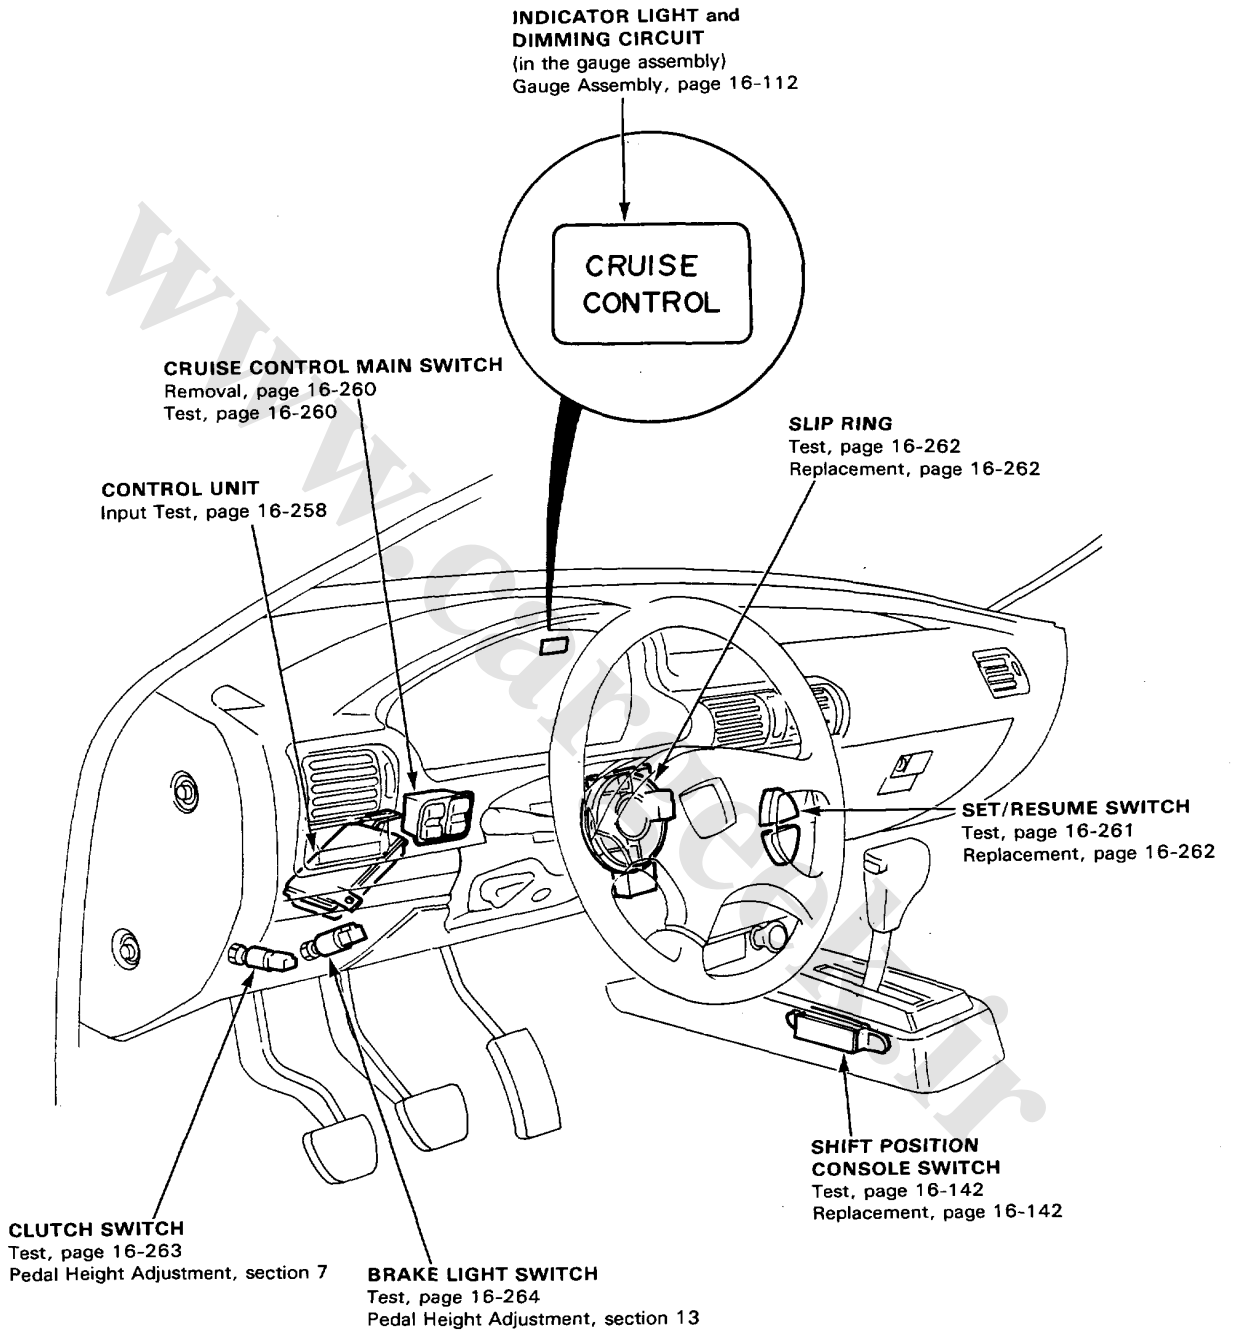

Cruise Control

Component Location Index

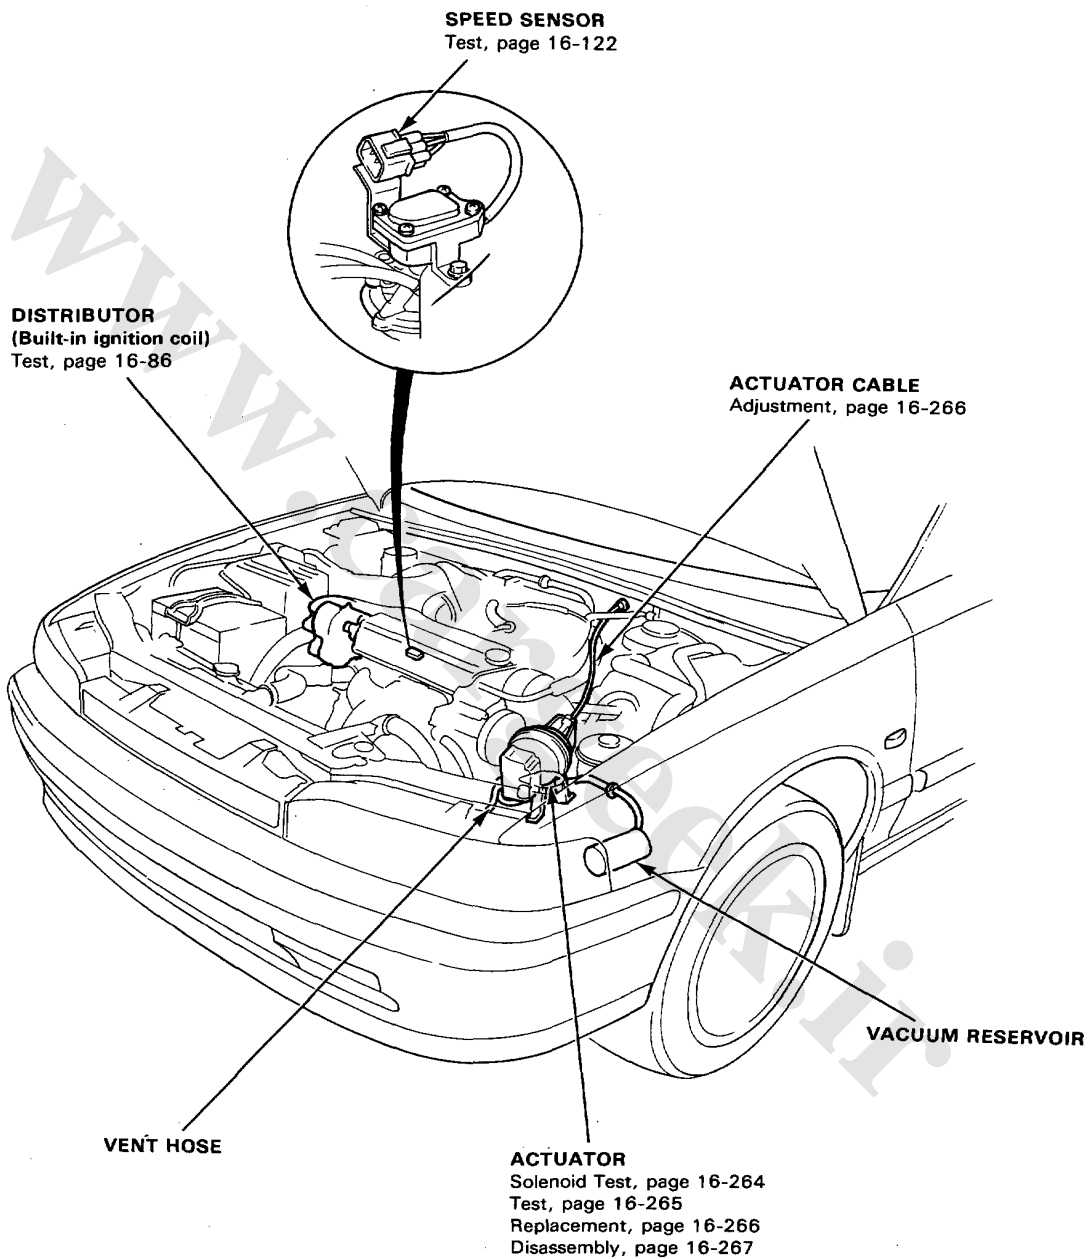



Description

The cruise control system uses mechanical, electrical and vacuum operated devices to maintain vehicle speed at a setting selected by the driver.

System Description:

The cruise control unit receives command signals from the cruise control main switch and the cruise control SET/RESUME switch. It receives information about operating conditions from the brake switch, the ignition coil, the speed sensor, the clutch switch (with manual transmission), or the shift position switch (with automatic transmission). The cruise control unit sends operational signals to the devices that regulate the throttle position. The throttle position maintains the selected vehicle speed. Essentially, the control unit compares the actual speed of the vehicle to the selected speed.

Then, the control unit uses the result of that comparison to open or close the throttle.

The brake switch releases the system's control of the throttle at the instant the driver depresses the brake pedal. The switch sends an electronic signal to the control unit when the brake pedal is depressed; the control unit responds by allowing the throttle to close. The clutch switch (manual transmission) or the shift position switch (automatic transmission), sends a disengage signal input to the control unit that also allows the throttle to close.

System Operation:

The cruise control system will set and automatically maintain any speed above 40 kph (25 mph). To set, make sure that the main switch is in the "On" position. After reaching the desired speed, press the SET switch. The cruise control unit will receive a set signal input and, in turn, will actuate the cruise control actuator.


When the SET switch is depressed and the cruise control system is on, the "cruise control" indicator on the warning display will light up.

You can cancel the cruise control system by pushing the main switch to "Off". This removes power to the control unit and erases the set speed from memory. If the system is disengaged temporarily by the brake switch, clutch switch, or shift position switch, press the RESUME switch. With the RESUME switch depressed and the set memory retained, the vehicle automatically returns to the previous set speed.

For gradual acceleration without depressing the accelerator pedal, push the RESUME switch and hold it there until the desired speed is reached. This will send an acceleration signal input to the control unit. When the switch is released, the system will be reprogrammed for the new speed. For gradual deceleration without depressing the brake pedal, push the SET switch and hold it there until the desired speed is reached. This will send a deceleration signal input to the control unit causing the vehicle to coast until the desired speed is reached. When the desired speed is reached, release the SET switch. This will reprogram the system for the new speed.

Cruise Control

Circuit Diagram

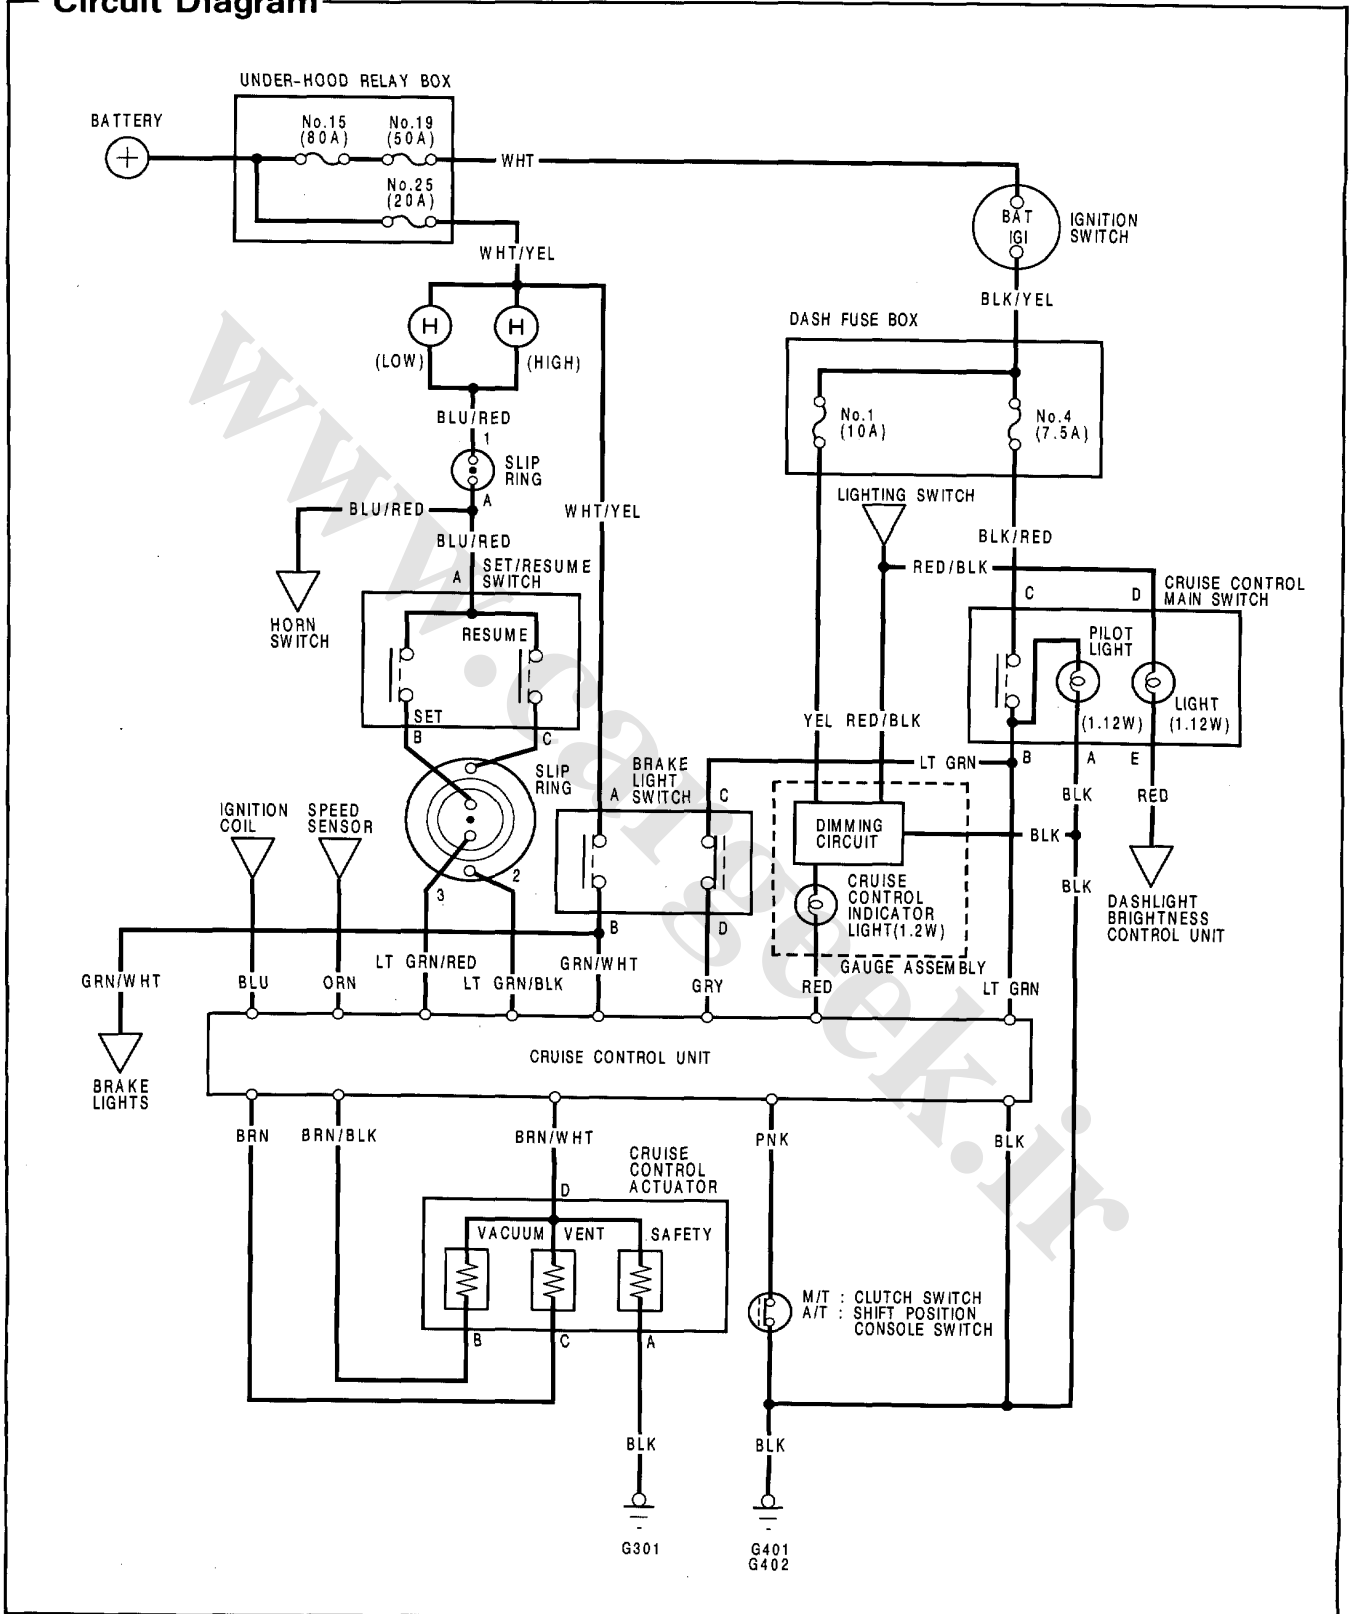



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.


Item to be inspected Symptom	Blown No.4 (7.5 A) fuse (in the dash fuse box)	Main switch	Indicator light and its dimming circuit (in the gauge assembly)	SET/RESUME switch	Actuator cable free play	Actuator	Disconnected, clogged or restricted vacuum lines/stuck check valve/ leaky vacuum reservoir	Clutch switch and mounting (M/T)	Shift position console switch (A/T)	Blown No.25 (20 A) fuse (in the under-hood relay box)	Brake light switch	Control unit input	Poor ground	Open circuit in wires or loose or disconnected terminals
Cruise control can't be set.	1	2										3	G301,G401 G402	LT GRN or BLK/RED
Cruise control can be set, but indicator light does not go on.			1											RED or YEL
Cruise speed noticeably higher or lower than what was set.												1		
Excessive overshooting and/or undershooting when trying to set speed.					1	2						3		
Steady speed not held even on a flat road with cruise control set.					1	3	2					4		
Car does not decelerate or ac- celerate accordingly when SET or RESUME button is pushed.				1								2		
Set speed not cancelled when clutch pedal is pushed. (M/T)								1				2		
Set speed not cancelled when shift lever is moved to N. (A/T)									1			2		
Set speed not cancelled when brake pedal is pushed.										1	2	3		
Set speed not resumed when RESUME button is pushed (with main switch on, but set speed temporarily cancelled).				1								2		

Cruise Control

Control Unit Input Test

Disconnect the 14-P connector from the control unit, located under instrument panel.
Make the following input test at the harness pins.

NOTE: Recheck the connections between the 14-P connector and the control unit, then replace the control unit if all input tests prove OK.

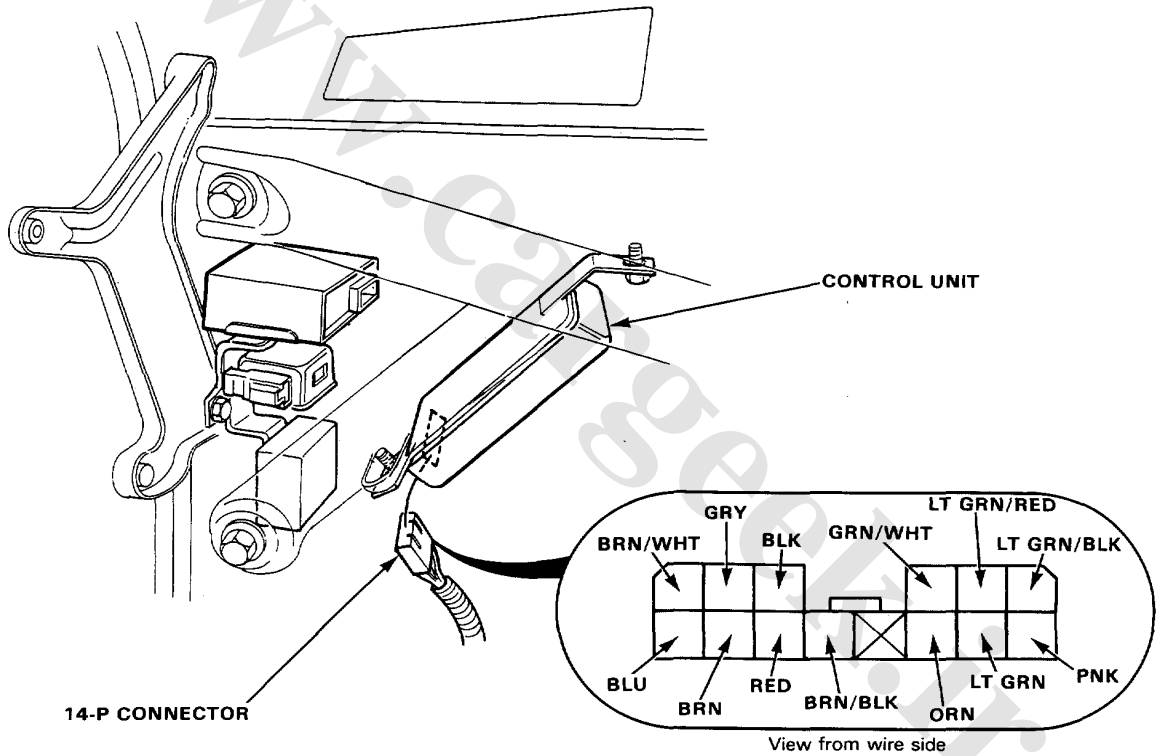




No.	Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> · Poor ground (G401, G402). · An open in the wire.
2	LT GRN	Ignition switch ON and main switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Blown No.4 (7.5 A) fuse. · Faulty main switch. · An open in the LT GRN or BLK/RED wire.
3	LT GRN/BLK	RESUME button pushed.	Ground each terminal: Horns should sound as the switch is pushed.	<ul style="list-style-type: none"> · Blown No.25 (20 A) fuse. · Faulty SET/RESUME switch. · Faulty slip ring. · An open in the WHT/YEL, BLU/RED, LT GRN/BLK or LT GRN/RED wire.
4	LT GRN/RED	SET button pushed.		
5	PNK	M/T: Clutch pedal pushed. A/T: Shift lever in 2, D ₃ or D ₄	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> · Faulty or misadjusted clutch switch (M/T). · Faulty shift position console switch (A/T). · Poor ground (G401, G402) · An open in the wire.
6	BLU	Start the engine.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Faulty ignition system. · An open in the wire.
7	ORN	Ignition switch ON and main switch ON. Raise the front of the car and rotate one wheel slowly.	Check for voltage between the LT GRN ⊕ and ORN ⊖ terminals: should be 0—5—0—5 V repeatedly.	<ul style="list-style-type: none"> · Faulty speed sensor. · An open in the wire.
8	GRY	Ignition switch ON, main switch ON and brake pedal pushed, then released.	Check for voltage to ground: should be 0 V with the pedal pushed and battery voltage with the pedal released.	<ul style="list-style-type: none"> · Faulty brake light switch · An open in the GRY or LT GRN wire.
9	GRN/WHT	Brake pedal pushed, then released.	Check for voltage to ground: should be battery voltage with the pedal pushed, and 0 V with the pedal released.	<ul style="list-style-type: none"> · Faulty brake light switch. · An open in the wire.
10	RED	Ignition switch ON.	Attach to ground: Indicator light in the gauge assembly comes on.	<ul style="list-style-type: none"> · Blown bulb. · Blown No.1 (10 A) fuse. · Faulty dimming circuit in the gauge assembly. · An open in the wire.
11	BRN	Under all conditions.	Check for resistance to ground: should be 80—120 Ω.	<ul style="list-style-type: none"> · Faulty actuator solenoid. · Open or short in the wire.
12	BRN/BLK	Under all conditions.	Check for resistance to ground: should be 70—110 Ω.	
13	BRN/WHT	Under all conditions.	Check for resistance to ground: should be 40—60 Ω.	

Cruise Control

Cruise Control Main/Sunroof Switch Removal

1. Pry out the switch from the instrument panel.
2. Disconnect the 6-P and the 5-P connectors from the switch.



NOTE: Be careful not to damage the switch or the instrument panel when prying out the switch.

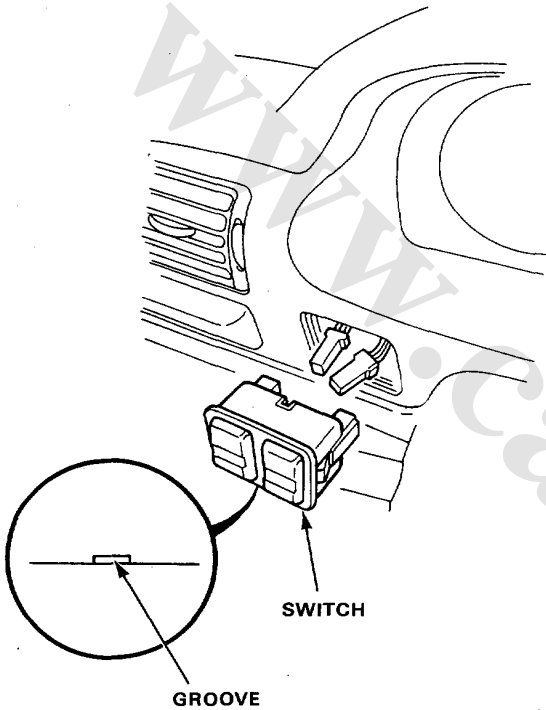

Cruise Control Main Switch Test

1. Remove the switch from the instrument panel.
2. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	A	B	C	D	E
OFF	○	○		○	○
ON	○	○	○	○	○

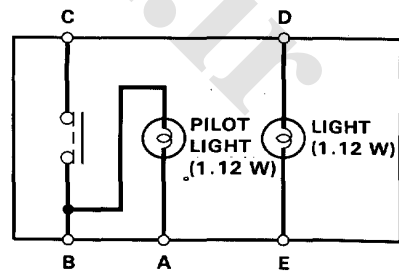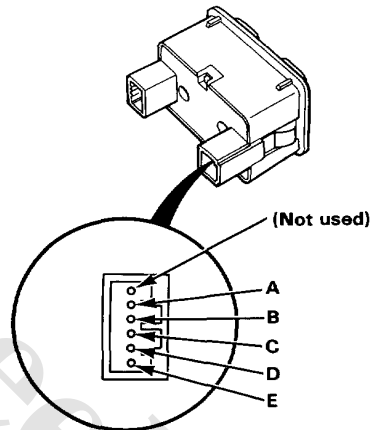



SET/RESUME Switch Test

1. Remove the dashboard lower panel.
2. Disconnect the 20-P connector from the main wire harness.

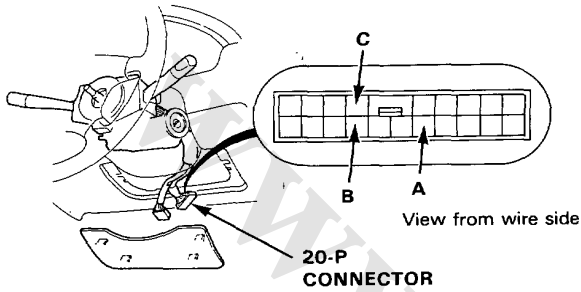


3. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A	B	C
OFF			
SET (ON)	○	○	
RESUME (ON)	○		○

- If all of the continuity check is OK, the SET/RESUME switch is OK.
- If there is no continuity in one or some switch positions, go to step 4.

4. Remove the steering wheel and repeat step 3, but this time test at the 4-P connector of the steering wheel.

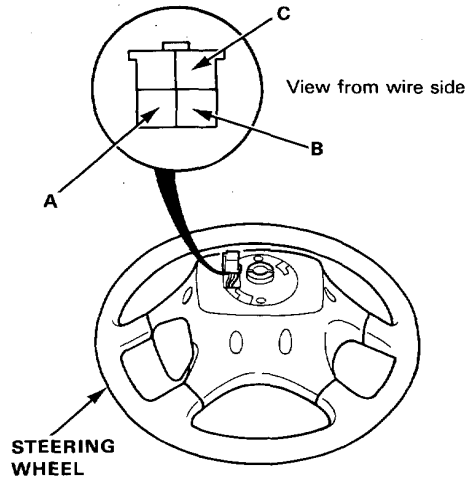


- If there is no continuity in one or some switch positions, repair the SET/RESUME switch.
- If all of the continuity check is OK, check the slip ring (page 16-262).

Cruise Control


SET/RESUME Switch Replacement

1. Remove the steering wheel.
2. Remove the body covers.
3. Remove the 3 screws and the SET/RESUME switch from the steering wheel.

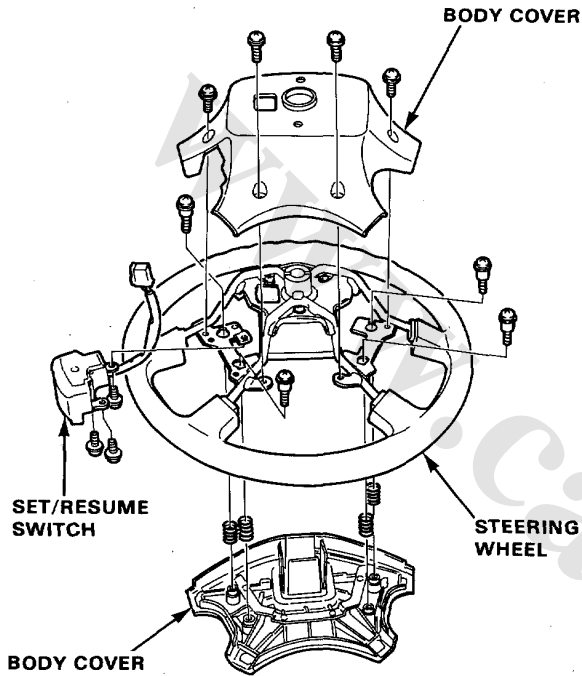


Slip Ring Test/Replacement

1. Remove the steering column lower cover.
2. There should be continuity between the No.3 and A terminals, the No.2 and B terminals, and the No.1 and C terminals, as you turn the slip ring.

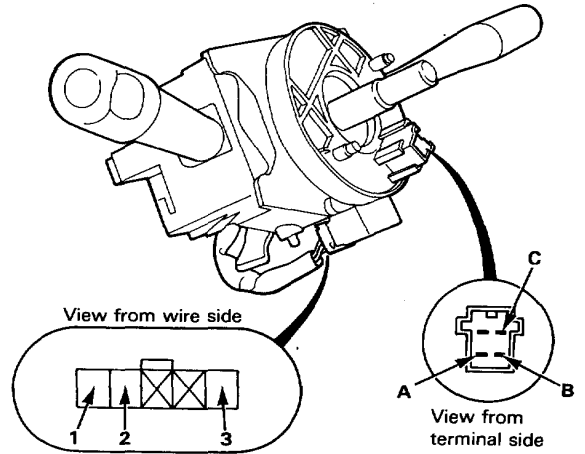

3. If necessary, remove the steering column upper cover and the 4 screws to replace the slip ring.

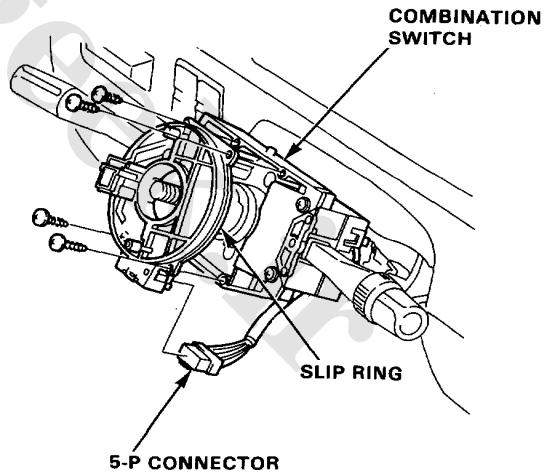




Clutch Switch Test

1. Disconnect the 3-P connector from the switch.
2. Check for continuity between the terminals according to the table.

Terminal	A	B
Clutch Pedal		
RELEASED	○	○
PUSHED		

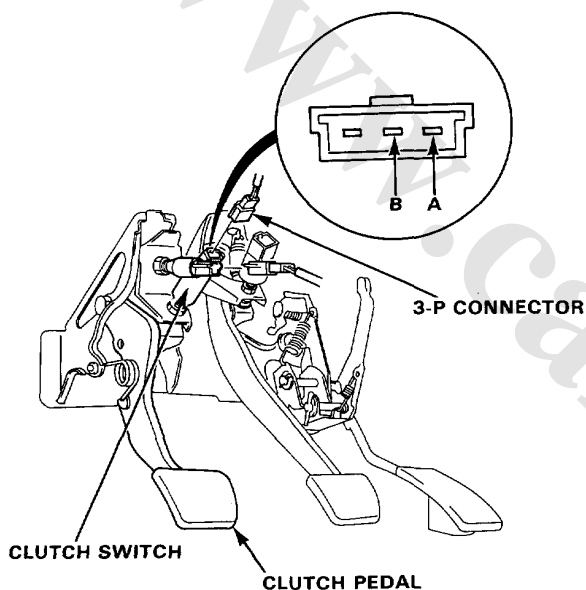


3. If necessary, replace the switch or adjust pedal height (see section 7).

Shift Position Console Switch Test

1. Remove the front console, then disconnect the 12-P connector from the console switch.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal	5	8
Position		
1		
2	○	○
D ₃	○	○
D ₄	○	○
N		
R		
P		

View from wire side

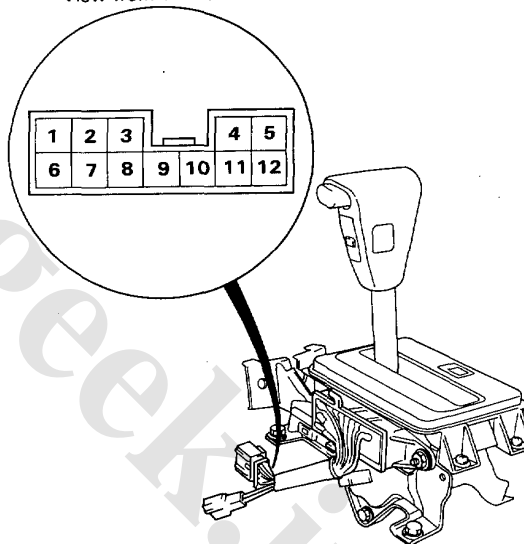


3. If necessary, replace the switch (see page 16-142).

Cruise Control

Brake Light Switch Test

1. Disconnect the 4-P connector from the switch.
2. Check for continuity between the terminals according to the table.

Terminal	A	B	C	D
Brake Pedal				
PUSHED	○	○		
RELEASED			○	○

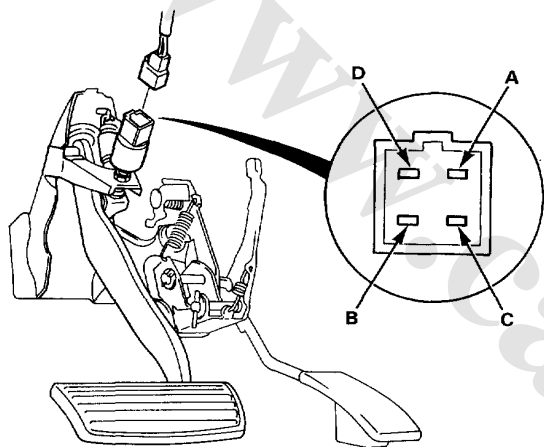

3. If necessary, replace the switch or adjust pedal height (see section 13).

Actuator Solenoid Test

1. Disconnect the 4-P connector from the actuator.
2. Measure resistance between the terminals.

Resistance

VACUUM SOLENOID (between B and D):

30–50Ω


VENT SOLENOID (between C and D):

40–60Ω


SAFETY SOLENOID (between A and D):

40–60Ω

NOTE: Resistance will vary slightly with temperature; specified resistance is at 20°C (70°F).

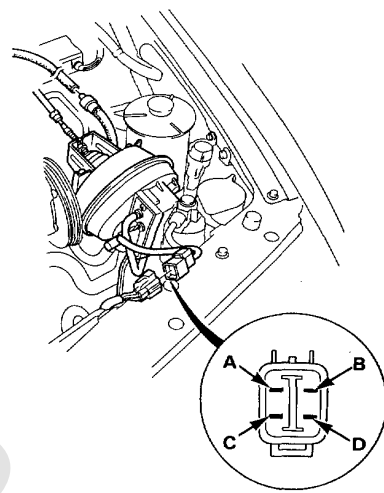


View from terminal side

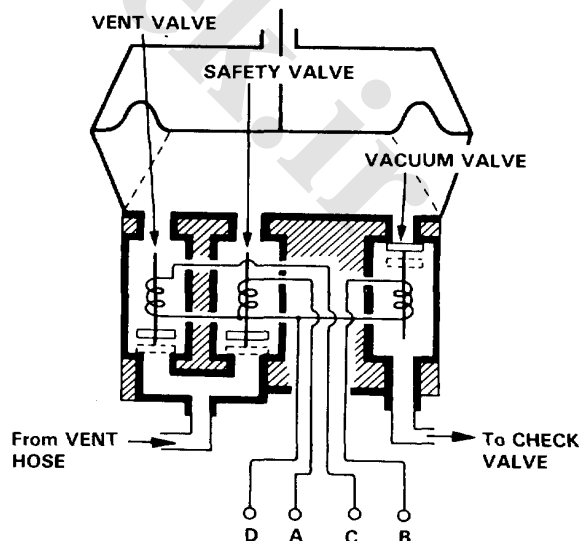




Actuator Test


1. Disconnect the actuator cable from the actuator rod and the 4-P connector.
2. Connect battery positive to the D terminal and negative to the A, B and C terminals.
3. Connect a vacuum pump to the check valve. Then apply vacuum to the actuator.

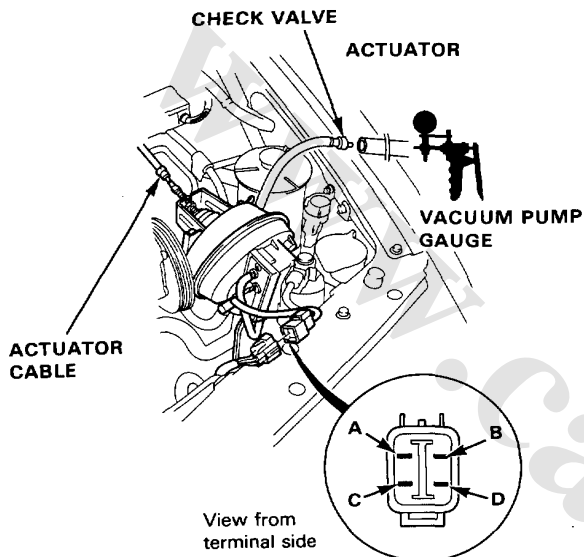

4. The actuator rod should pull in completely. If the rod pulls in only part-way or not at all, check for a leaking vacuum line or defective solenoid.

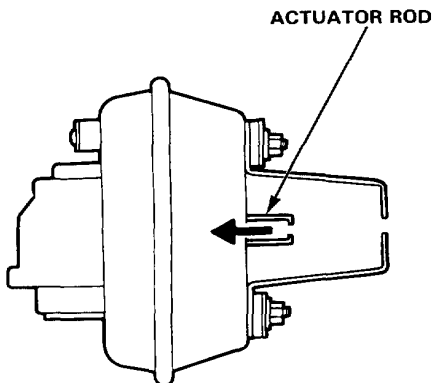

5. With voltage and vacuum still applied, try to pull the actuator rod out by hand. You should not be able to pull it. If you can, it is defective.

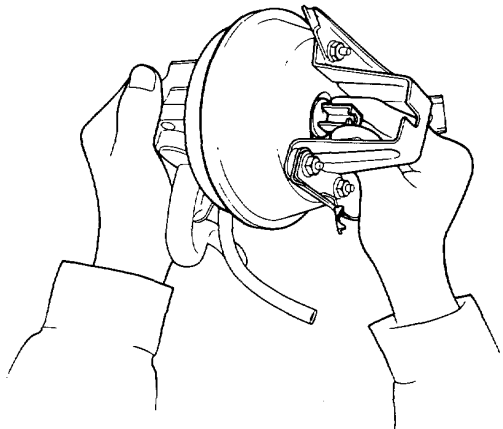


6. Disconnect battery negative from the C terminal. The actuator rod should return. If the actuator rod does not return, and the vent hose and filter are free, the solenoid valve assembly is defective.
7. Repeat steps 2-6, but this time disconnect battery negative from the A terminal. The actuator rod should return. If it does not return, and the vent hose and filter are free, the solenoid valve assembly is defective.
8. If the solenoid valve assembly is replaced, be sure to use new O-rings at each solenoid.


Cruise Control

Actuator/Cable Replacement

1. Pull back the boot and loosen the locknut, then disconnect the cable from the bracket.
2. Disconnect the cable end from the actuator rod.

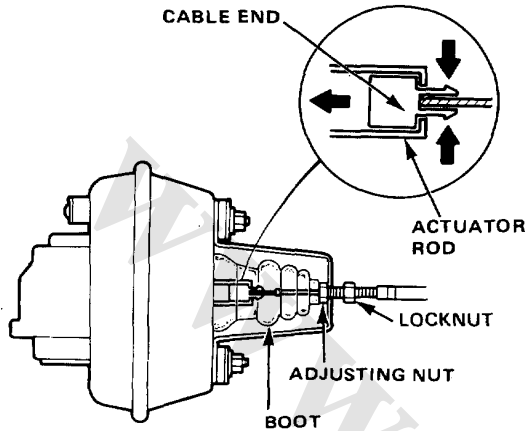


3. Disconnect the 4-P connector from the actuator.
4. Pull the vent hose from the grommet.
5. Disconnect the vacuum hose from the check valve.
6. Remove the 2 mount bolts and the actuator with the bracket and reservoir.

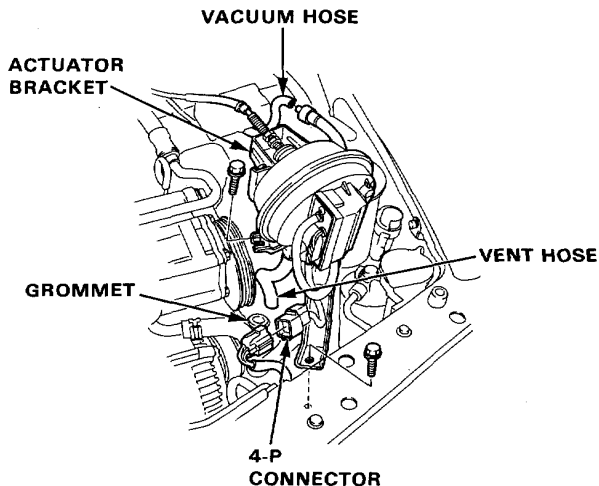

7. If necessary, disconnect the cable end from the linkage over the accelerator pedal, then turn the grommet 90° in the firewall and remove the cable.
8. Install in the reverse order of removal, and adjust free-play at actuator rod after connecting the cable (see next column).

Actuator Cable Adjustment

1. Check that the actuator cable operates smoothly with no binding or sticking.
2. Start the engine.
3. Measure the amount of movement of the actuator rod until the cable pulls on the accelerator lever (engine speed starts to increase). Free play should be 11 ± 1.5 mm (0.43 ± 0.06 in).

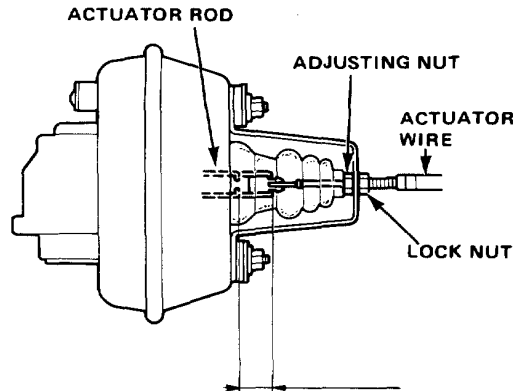


LOCKNUT FREE PLAY: 11 ± 1.5 mm (0.43 ± 0.06 in)

4. If free play is not within specs, loosen the locknut and turn the adjusting nut as required.
- NOTE:** If necessary, check the throttle cable free Play (see section 6), then recheck the actuator rod free play.
5. Retighten the locknut and recheck the free play.



Actuator Disassembly

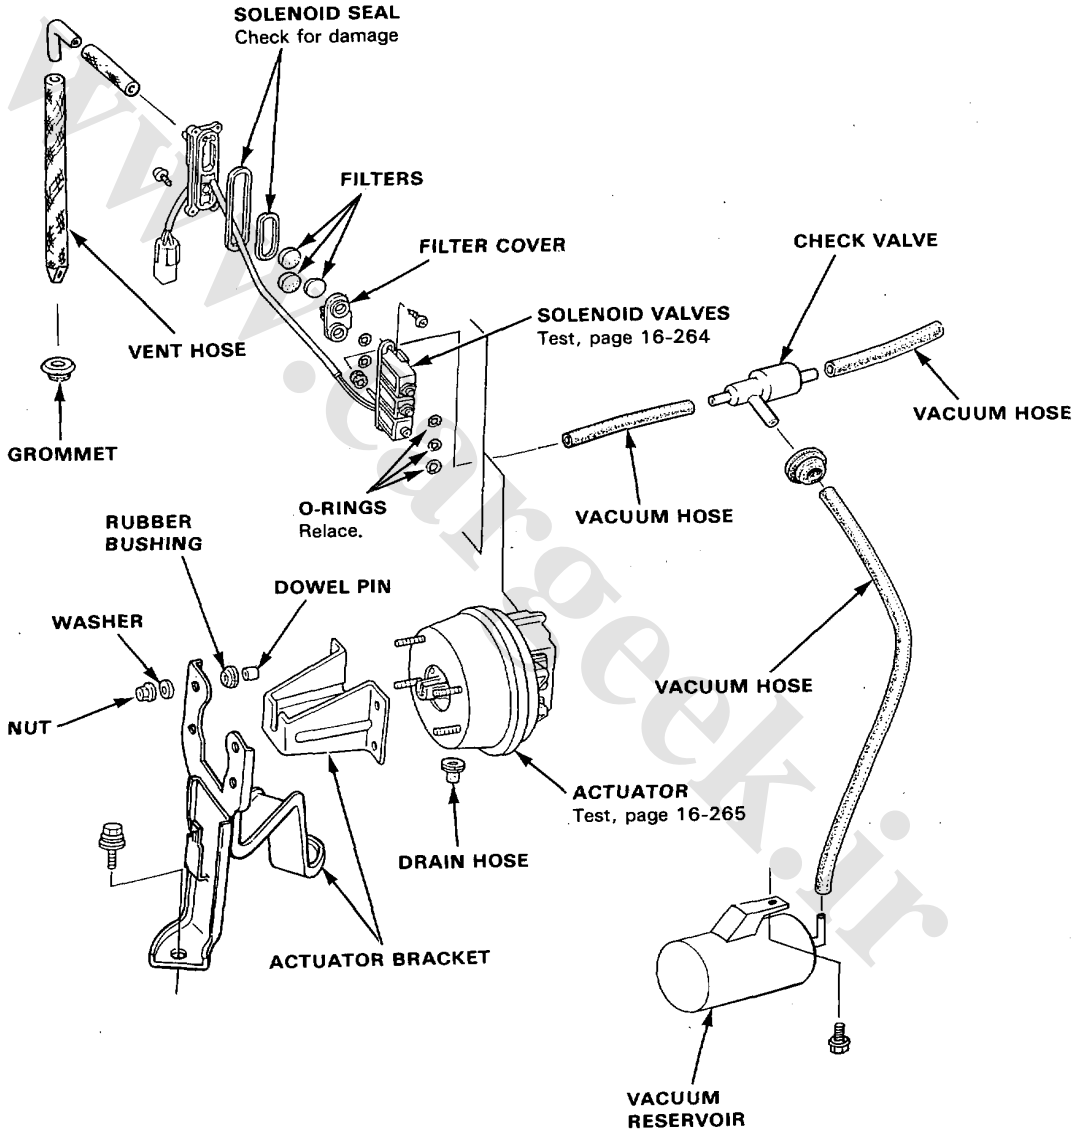


Rear Window Defogger

Component Location Index

**REAR WINDOW
DEFOGGER SWITCH**
Test, page 16-222


REAR WINDOW DEFOGGER
Function Test, page 16-221
Defogger Wires Repair, page 16-221

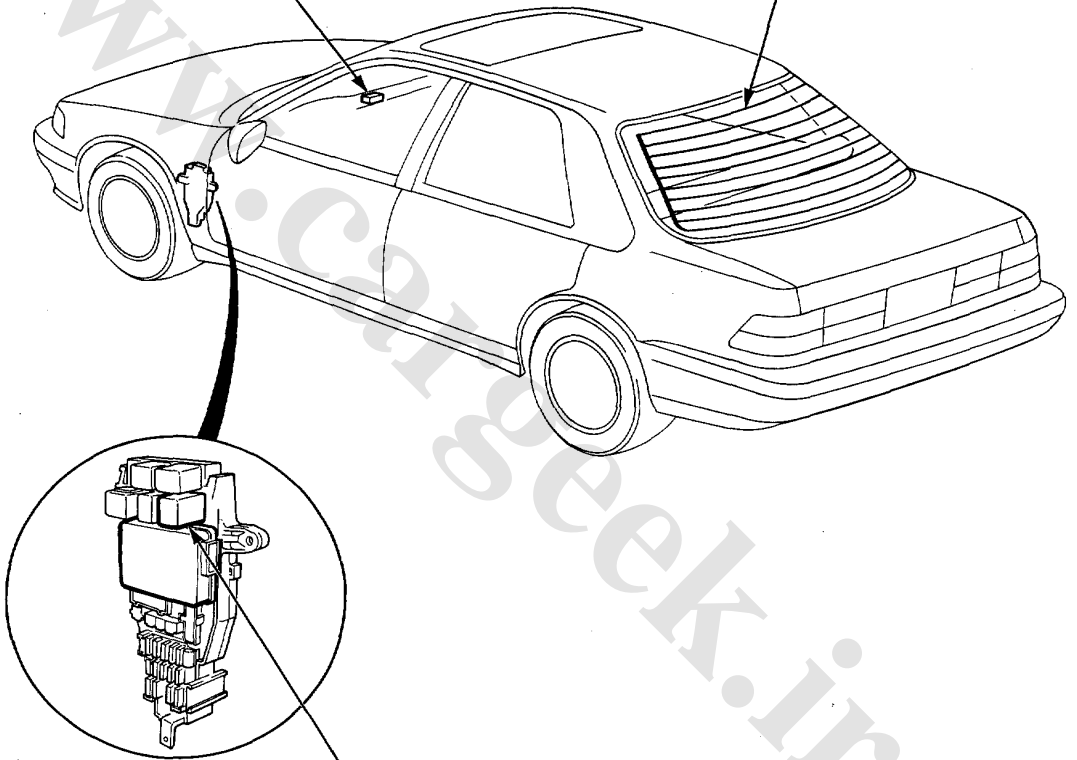

DEFOGGER RELAY
Test, page 16-220



Circuit Diagram

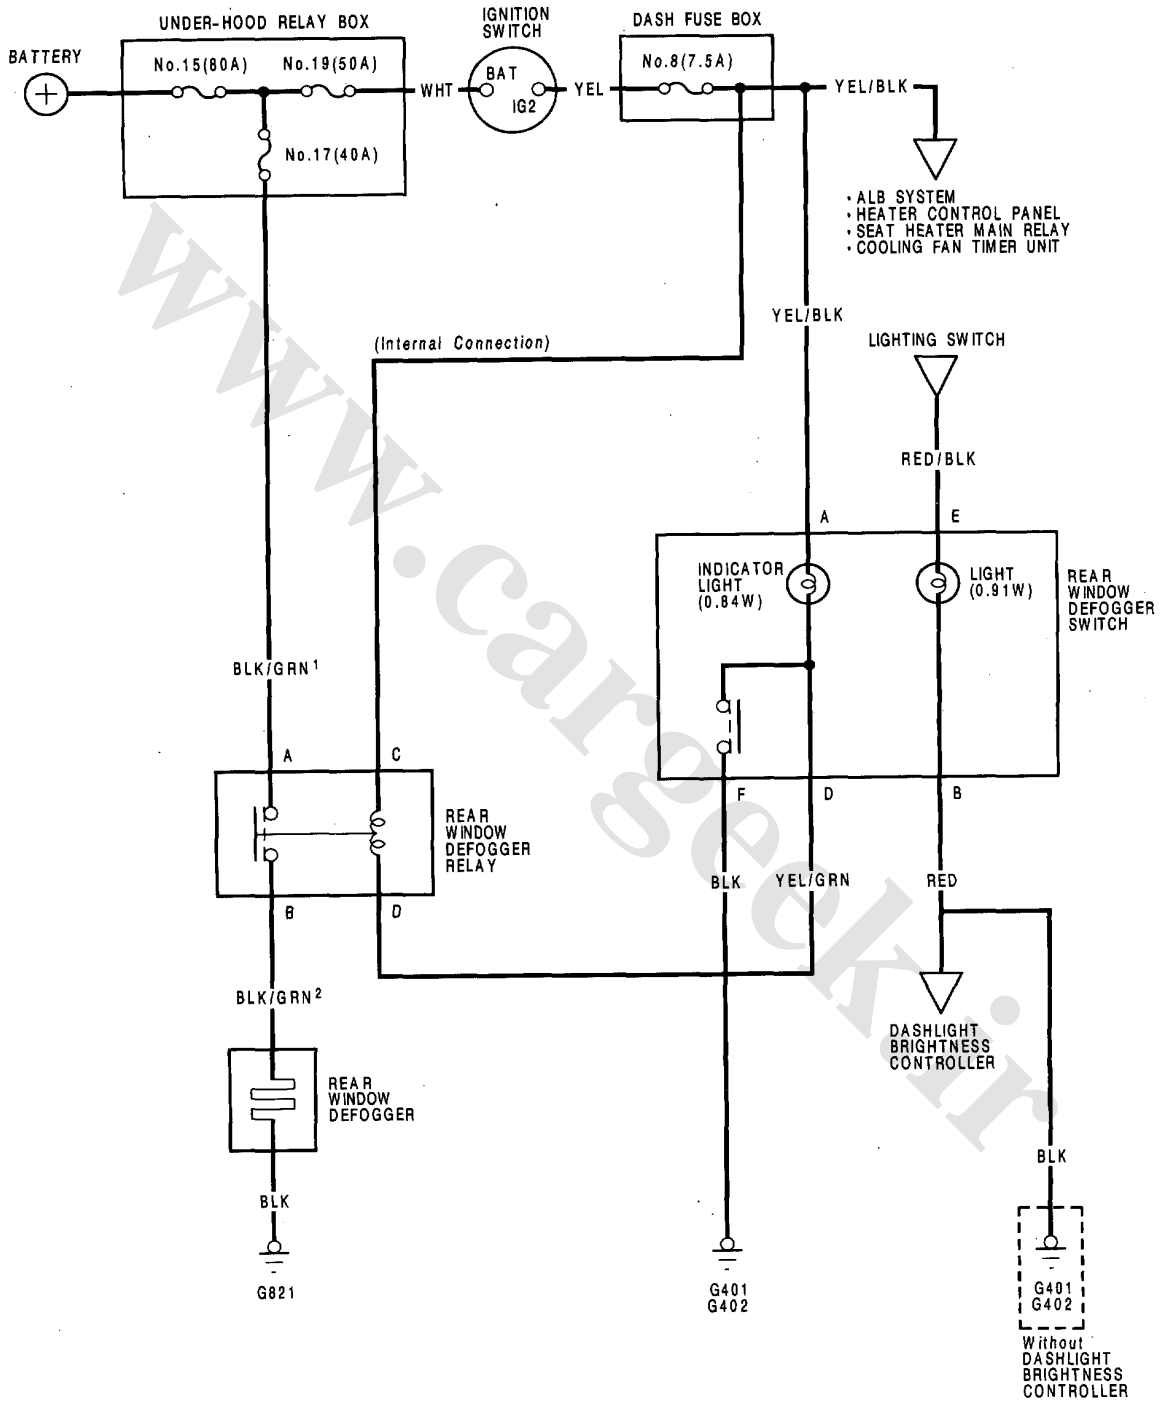

Rear Window Defogger



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected	Blown indicator light bulb	Blown No. 8 (7.5 A) fuse (in the dash fuse box)	Blown No. 17 (40 A) fuse (in the under-hood box)	Defogger switch	Function test	Defogger relay	Broken defogger wire	Poor ground	Open circuit in wires or loose or disconnected terminals
Defogger operates, but indicator light does not go on.	1								
Defogger does not operate and indicator light does not go on.		1		2				G401 G402	YEL/BLK or BLK
Defogger does not operate, but indicator light goes on.			1	2	3	4		G821	BLK/GRN ¹

Relay Test

1. Remove the relay from the dash fuse box.
2. There should be continuity between the A and B terminals when the battery is connected to the C and D terminals. There should be no continuity when the battery is disconnected.

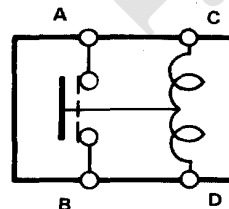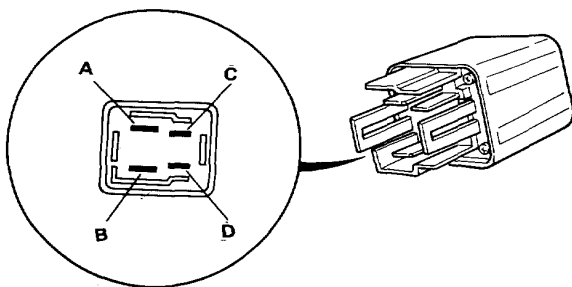




Function Test

CAUTION: Be careful not to scratch or damage the defogger wires with the tester probe end.

1. Check for voltage between the positive terminal and body ground with the ignition switch and the defogger switch ON. There should be battery voltage.
 - If there is no voltage, check for:
 - Faulty defogger relay.
 - An open in the BLK/GRN¹ or BLK/GRN² wire.
 - If there is battery voltage, go to step 2.

NEGATIVE TERMINAL [POSITIVE TERMINAL] POSITIVE TERMINAL [NEGATIVE TERMINAL]

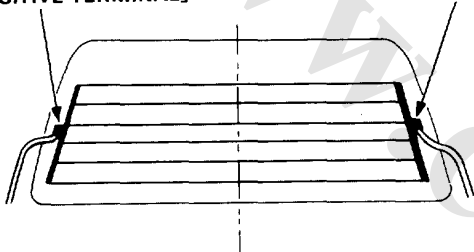


[]: RHD

2. Check for continuity between the negative terminal and body ground. If no continuity, check for open in the defogger ground wire.
3. Connect the voltmeter positive probe to the center of each defogger wire, and the negative probe to the negative terminal. There should be approximately 6 V with the ignition switch and the defogger switch ON.
 - If the voltage is as specified, the defogger wire is OK.
 - If there is battery voltage, the defogger wire is broken in the negative side of the center.
 - If there is no voltage the defogger wire is broken in the positive side of the center.

Defogger Wire Repair


NOTE: Repair section must be no longer than one inch.

1. Lightly scour area around the break with the fine steel wool, then clean with alcohol.
2. Carefully mask broken portion of the defogger wire with cellophane tape.

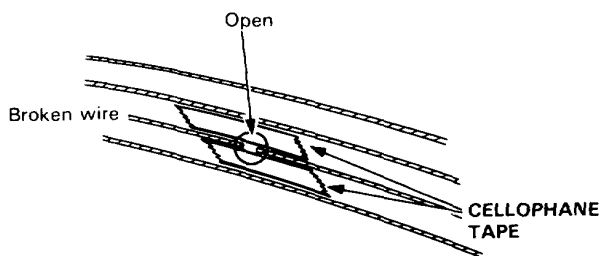

3. Using a small brush, apply heavy coat of silver conductive paint extending about 1/8 in. on both sides of the break. Allow 30 minutes to dry.

NOTE: Thoroughly mix paint before use.

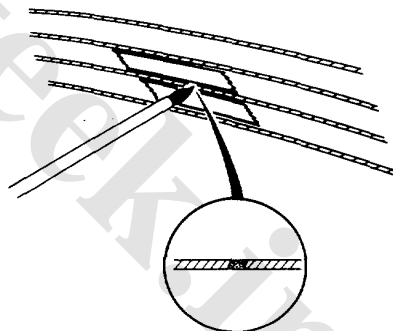


4. Check for proper operation with a voltmeter (approximately 6 V at the mid-point).
5. Apply a second coat of paint in the same manner. Dry 3 hours before removing tape.

Rear Window Defogger

Rear Window Defogger Switch Removal



- Carefully pry out the rear window defogger switch from the instrument panel.
NOTE: Be careful not to damage the switch or the instrument panel when prying out the switch.
- Disconnect the 6-P connector from the switch.

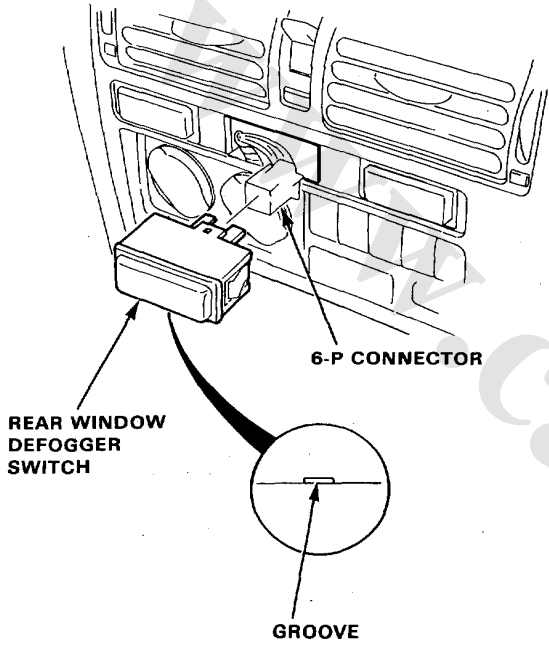

Switch Test


- Pry the switch from the instrument panel.
- Check for continuity between the terminals according to the table.

Terminal	A	D	F	B	E
Position					
PUSHED	○	⊕	○		
RELEASED				○	⊕

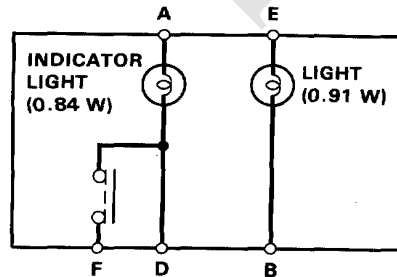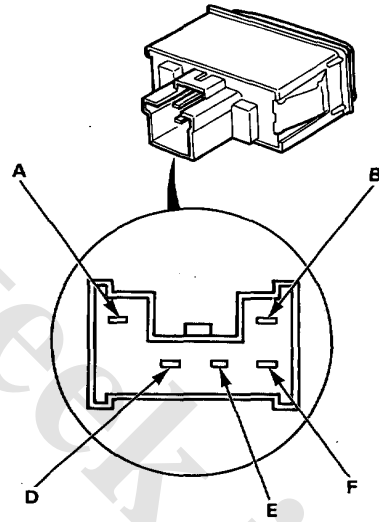




Circuit Diagram (With Daytime Light)

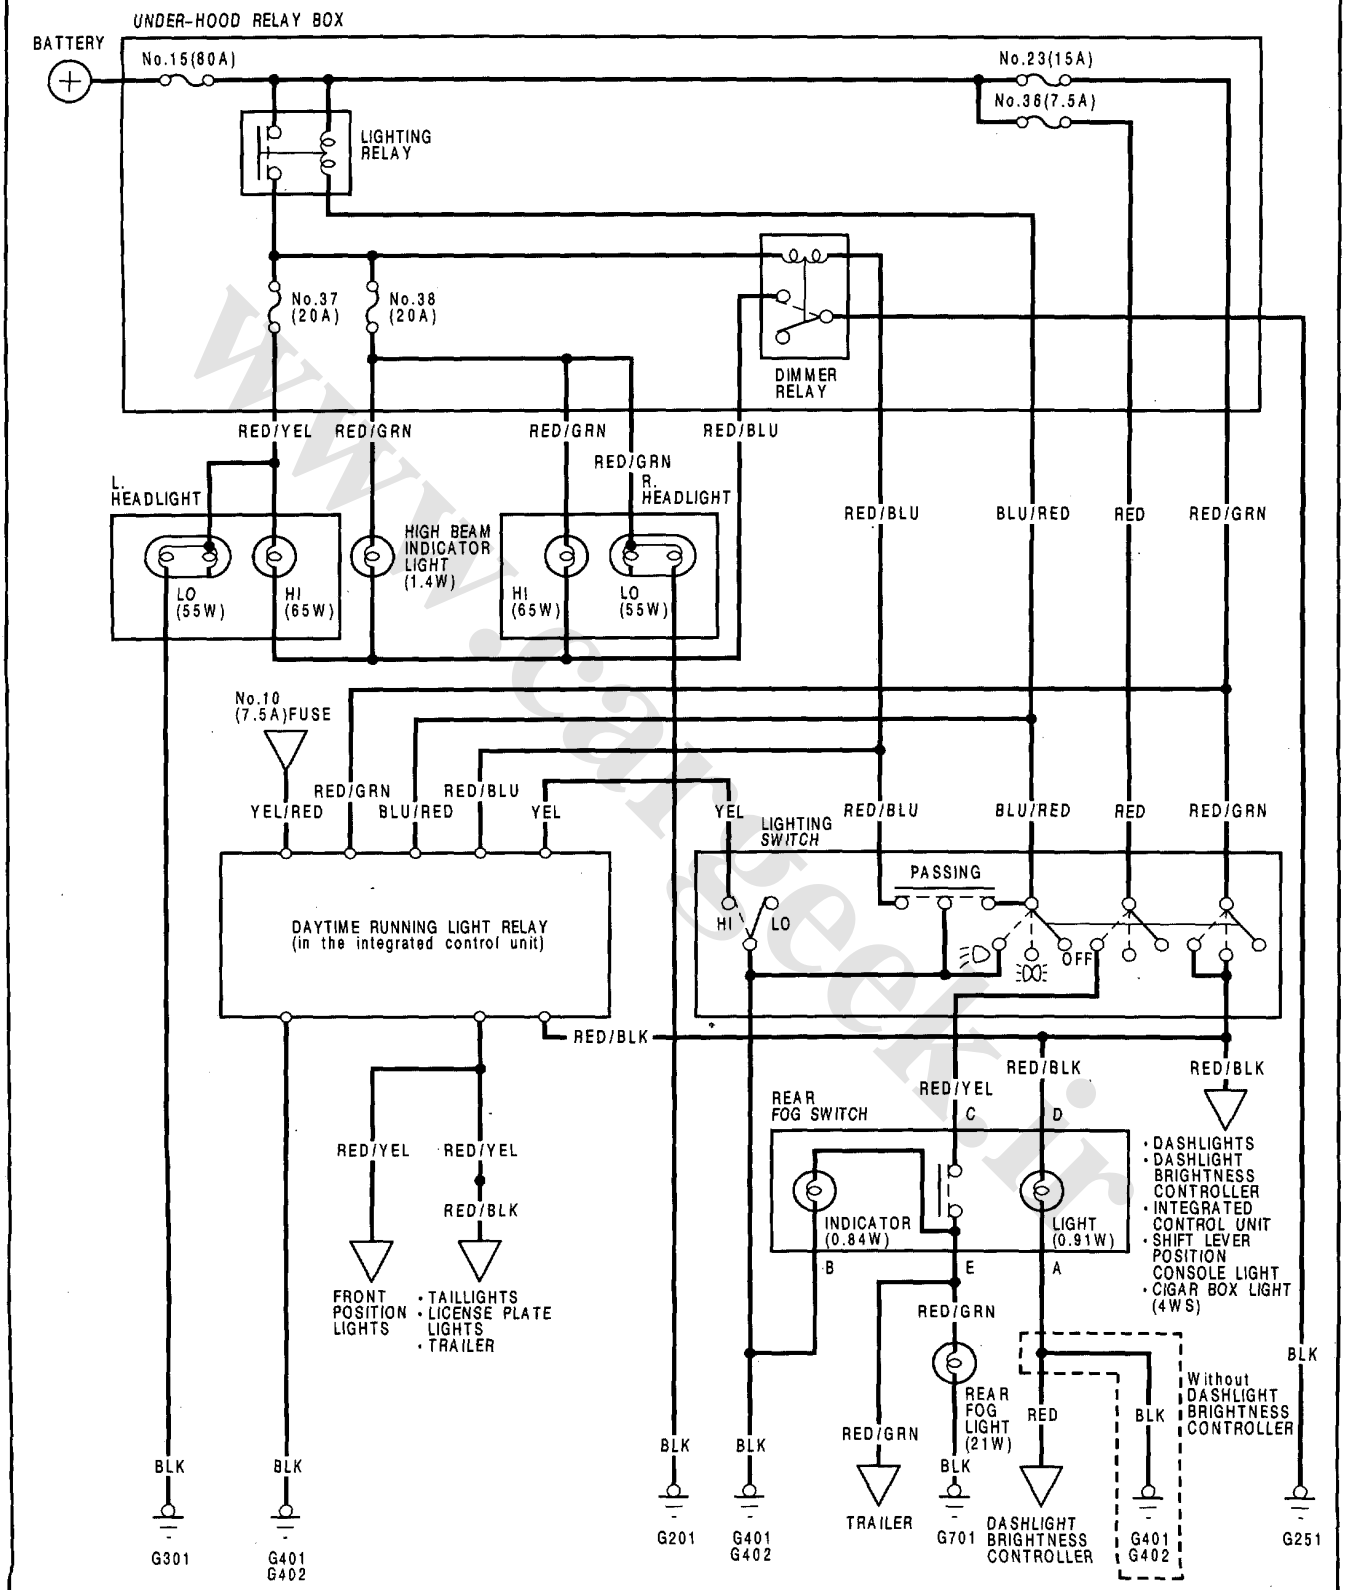

Lighting System


Circuit Diagram (With Dim-Dip Headlight)

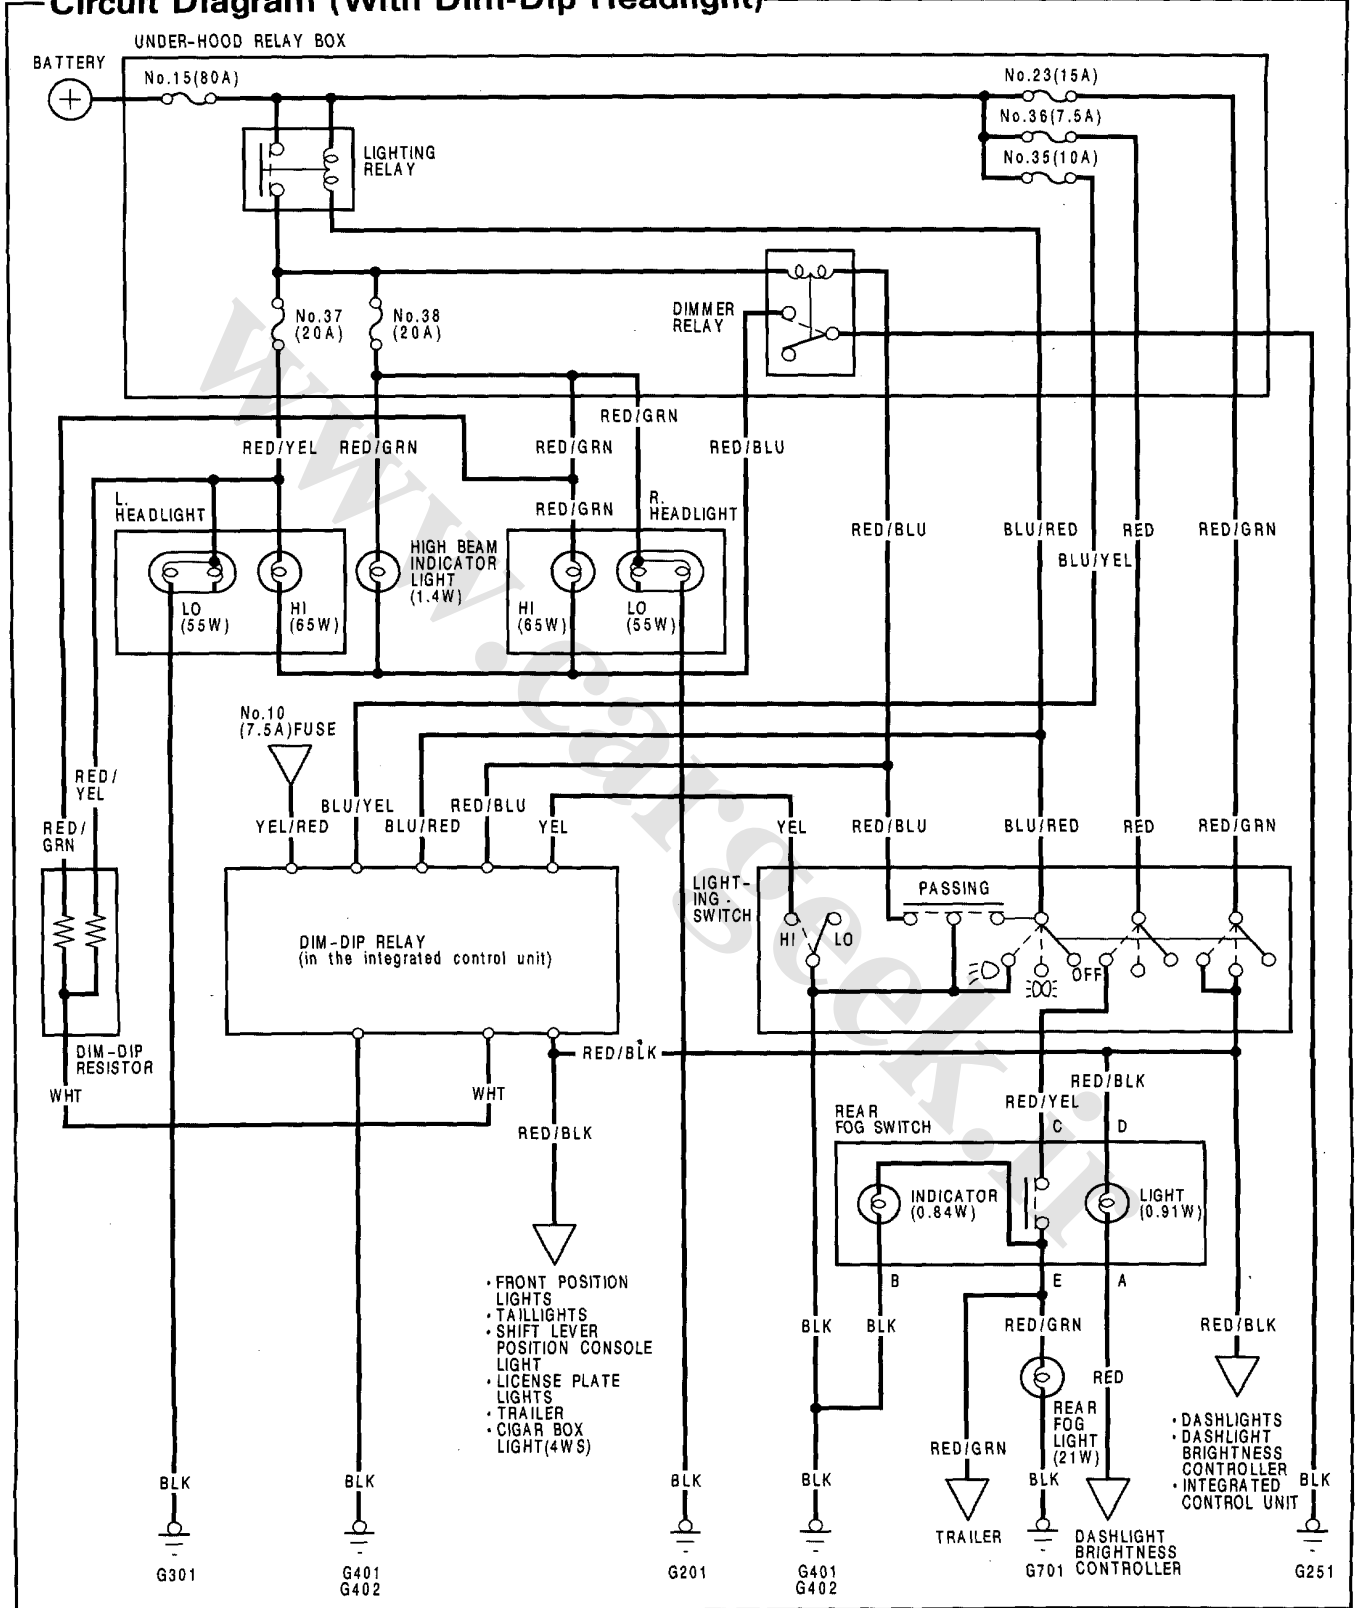



Circuit Diagram (KG model only)


Headlight Adjuster :

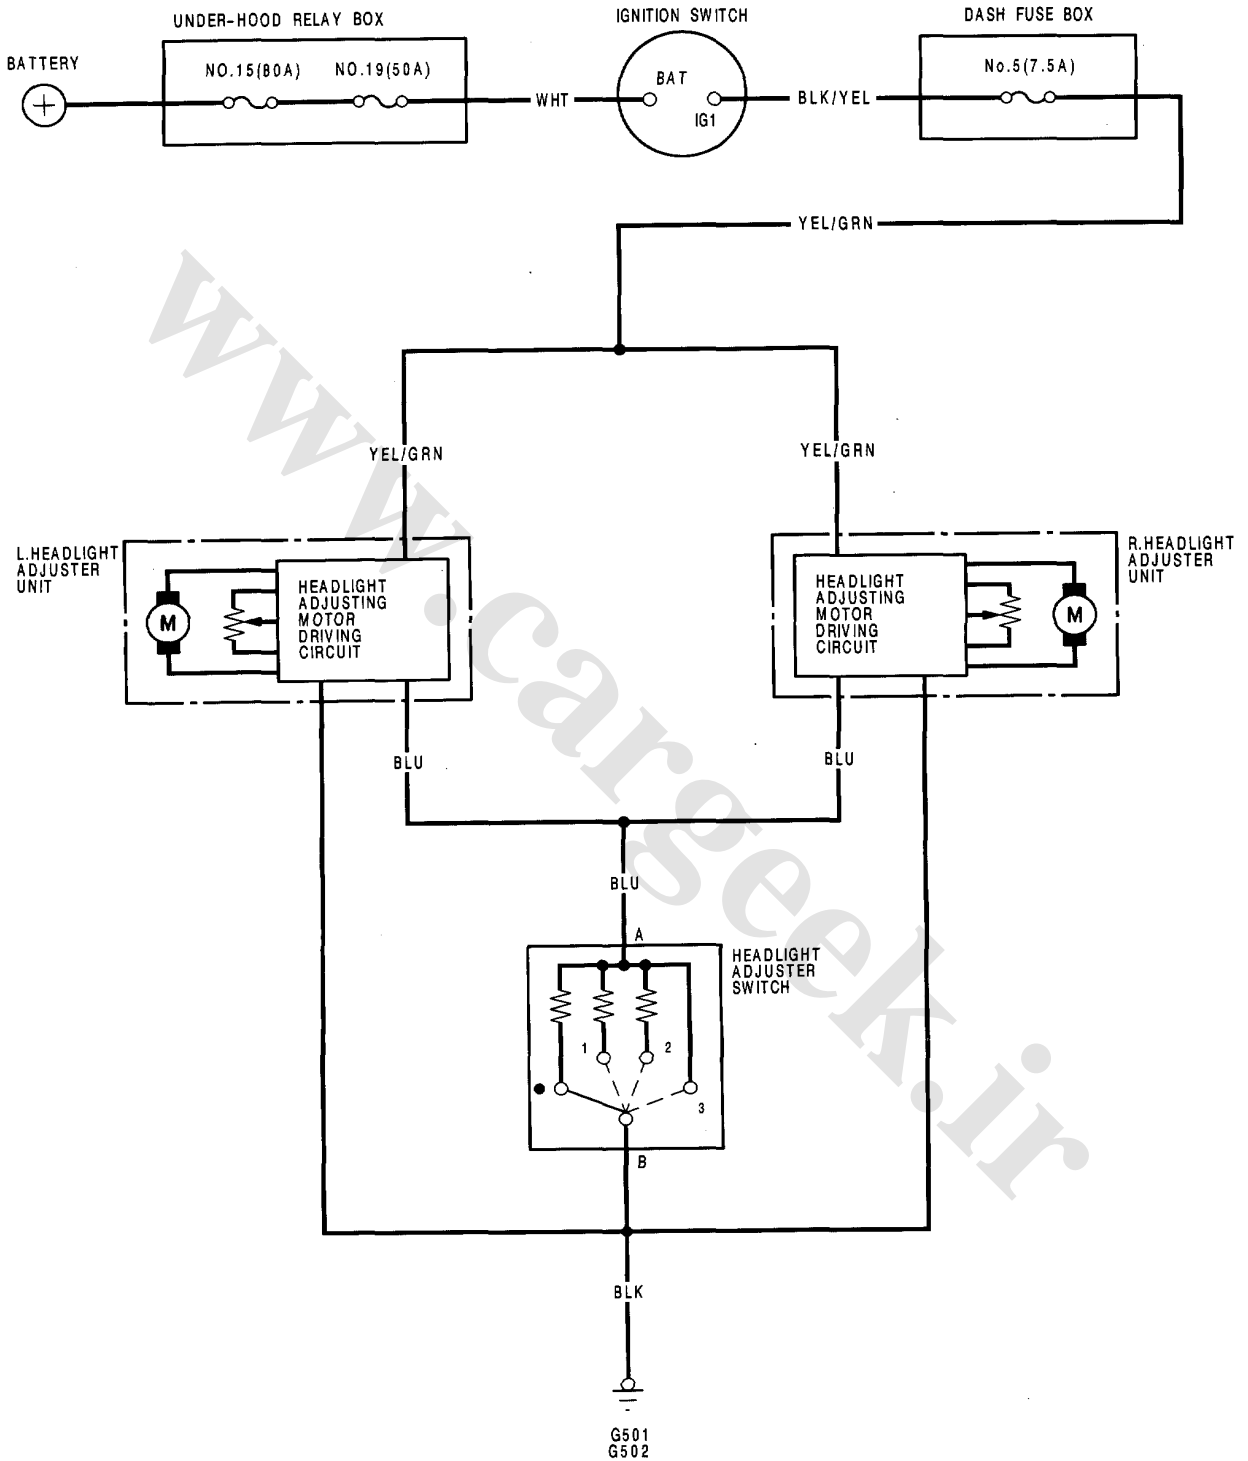

Lighting System

Lighting/Turn Signal Switch Test

1. Remove the instrument lower panel.
2. Disconnect the 20-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the tables.

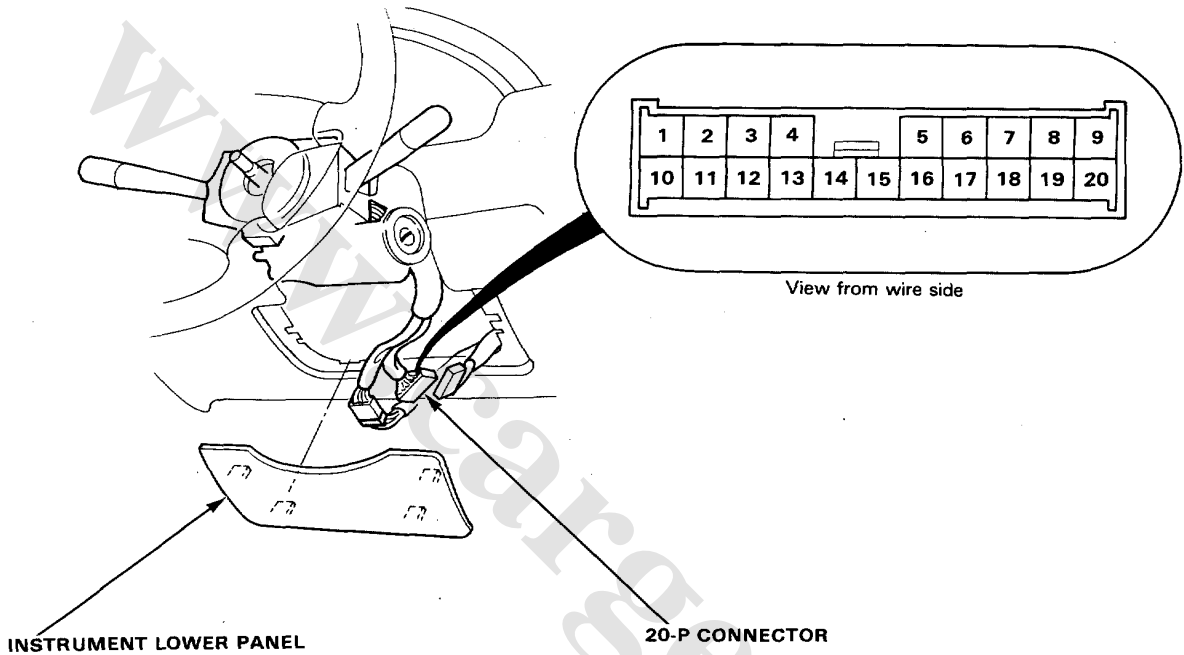

Lighting/Dimmer/Passing Switch (Except KS, KW and KE models)

Terminal		5	6	17	18	20
Lighting switch	Position OFF					
	(•) or ⦿		○			○
	(●) or ⊙	○			○	
Passing switch	LOW	○			○	
	HIGH	○		○	○	
Passing switch	OFF					
	ON	○		○	○	

Turn Signal Switch

Terminal		7	8	9
Position				
R		○		○
NEUTRAL				
L			○	○



Lighting/Dimmer/Passing Switch (KS, KW and KE models only)

Terminal		5	6	17	18	19	20
Position							
Lighting switch	OFF						
			○				○
		LOW	○			○	
HIGH		○			○	○	
Passing switch	OFF						
	ON	○		○	○		

Turn Signal Switch


Terminal		7	8	9
Position				
R		○		○
NEUTRAL				
L			○	○

Lighting System

Lighting Switch Replacement


1. Remove the steering wheel and the steering column cover.
2. Disconnect the 12-P connector.
3. Remove the 2 screws and slide the lighting switch out of the housing as shown.

NOTE: Be careful not to damage the steering wheel cover. On cars with cruise control, remove the lighting switch after removing the slip ring (see page 16-262).

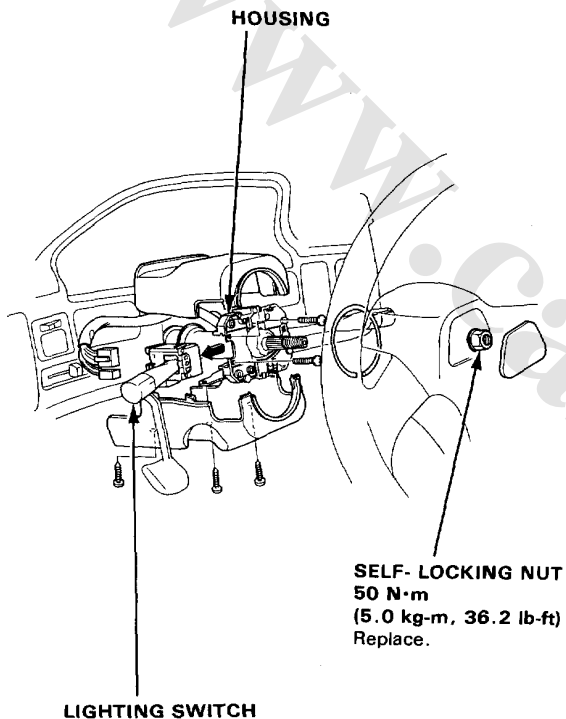

Rear Fog Light Switch Removal

1. Carefully pry out the rear fog light switch from the instrument panel.
- NOTE: Be careful not to damage the switch or instrument panel when prying out the switch.
2. Disconnect the 8-P connector from the switch.


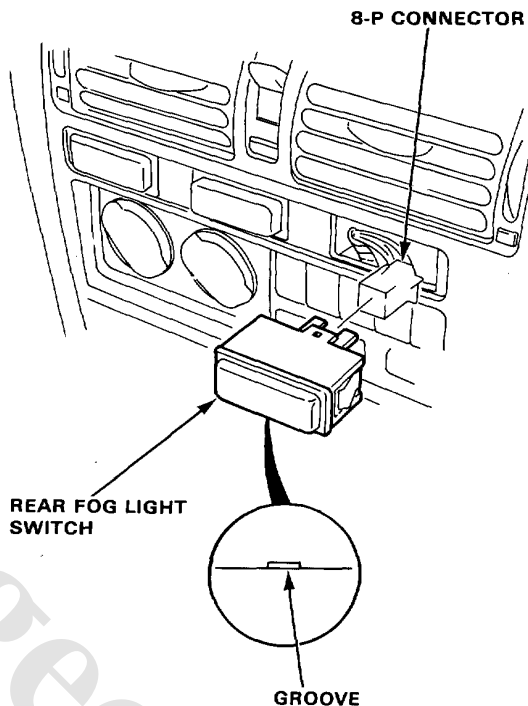




Rear Fog Light Switch Test

1. Remove the instrument panel (See page 16-120).
2. Remove the fog light switch.
3. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	A	B	C	D	E
OFF	○	○	○	○	○
ON	○	○	○	○	○

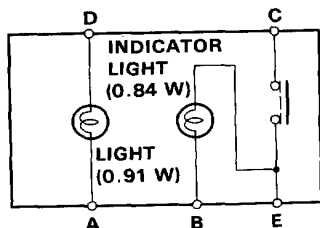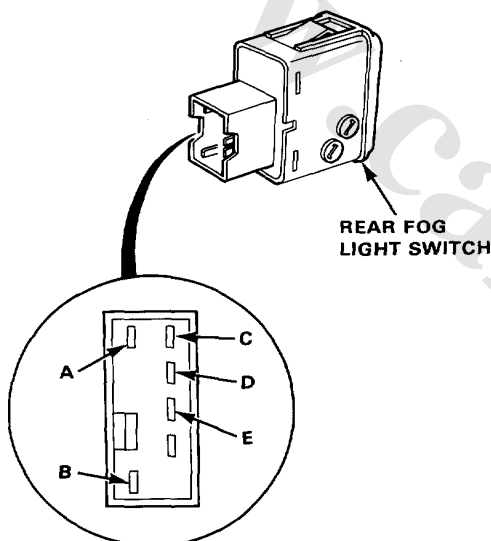

Headlight Adjuster Unit Input Test (KG model only)

NOTE: Check for blown No.5 (7.5 A) fuse in the dash fuse box before input test.

1. Disconnect the 3-P connectors for the R and L headlight adjuster units.

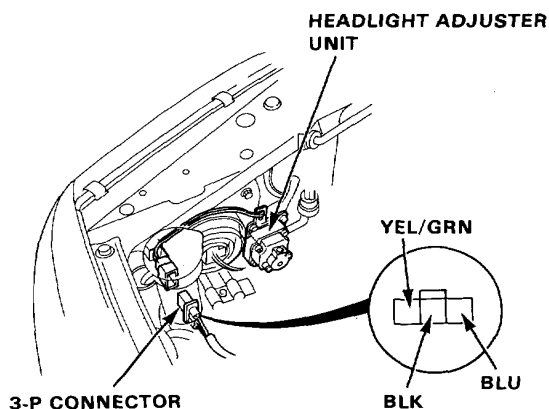

2. Check for continuity between the BLK terminal and body ground. There should be continuity.
 - If there is no continuity, check for
 - An open in the BLK wire.
 - Poor ground (G 502).
 - If there is continuity, go to step 3.
3. Check for voltage between the YEL/GRN terminal and body ground with the ignition switch ON. There should be battery voltage.
 - If there is no voltage, check for an open in the YEL/GRN wire.
 - If there is battery voltage, go to step 4.
4. Using an ohmmeter, measure resistance between the BLU terminal and body ground in "0" position of headlight adjuster switch. There should be approximately 715Ω.
 - If resistance is not within specification, check for
 - An open in the BLU wire.
 - Faulty headlight adjuster switch.
 - If resistance is within specification, go to step 5.
5. If all tests are normal, but the headlight adjuster unit does not operate. Check for frozen, stuck or improperly installed the headlight adjuster unit. If mechanical check is OK, replace the headlight adjuster unit.

NOTE: Check for connection of 3-P connectors after test. For example, malfunction of headlight adjuster is occurred by improper connection of one side.


Lighting System

Headlight Adjuster Switch Removal (KG model only)

1. Carefully pry out the headlight adjuster switch from the floor console.


NOTE: Be careful not to damage the switch or floor console when prying out the switch.

2. Disconnect the 5-P connector from the switch.

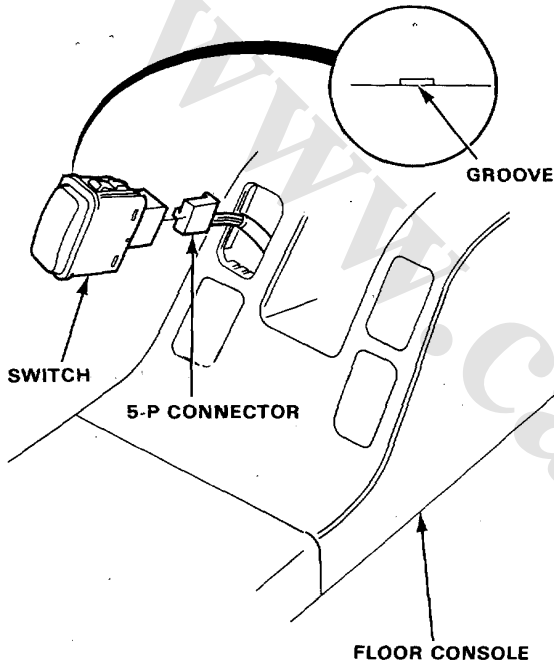

Headlight Adjuster Switch Test (KG model only)

1. Remove the switch from the floor console.
2. Measure the resistance between the A and B terminals at ●, 1, 2 and 3 positions by moving the knob. Replace the switch if the resistance is not within specifications.

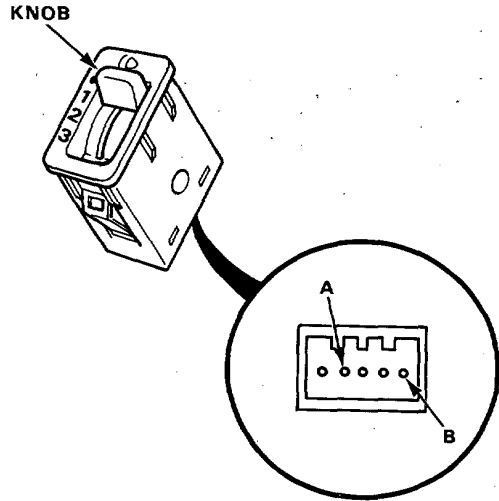

Knob Position	●	1	2	3
Resistance (Ω)	715	310	160	0



Dim-Dip Resistor Test



CAUTION: Dim-Dip resistor becomes very hot in use of Dim-Dip headlights; do not touch it or the attaching hardware immediately after they have been turned off.

1. Disconnect the 3-P connector from the resistor.
2. Using an ohmmeter, measure resistance between the terminals. Replace the resistor if the resistance is not within specifications.

NOTE: Resistance will vary with the resistor temperature; specifications are at 20°C (70°F).

L. Headlight Resistance
(between the 1 and 3 terminals):
1.9—2.1 ohms



R. Headlight Resistance
(between the 2 and 3 terminals):
1.9—2.1 ohms

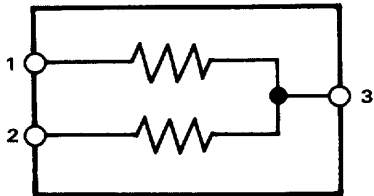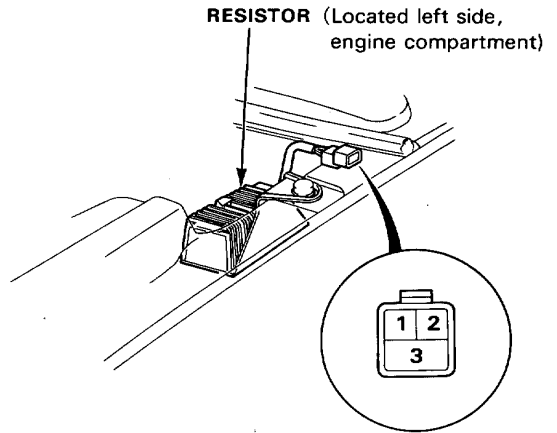

Lighting System



Lighting Relay Test

1. Remove the lighting relay in the under-hood relay box.
2. There should be continuity between the A and B terminals when the battery is connected to the C and D terminals. There should be no continuity when the battery is disconnected.

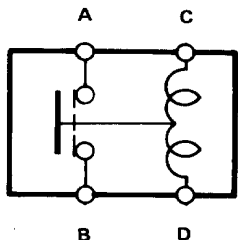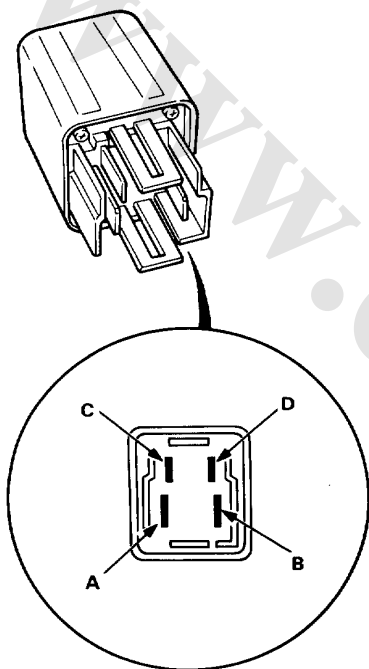

Dimmer Relay Test

1. Remove the dimmer relay in the under-hood relay box.
2. There should be continuity between the A and C terminals when the battery is connected to the E and F terminals. There should be no continuity when the battery is disconnected.

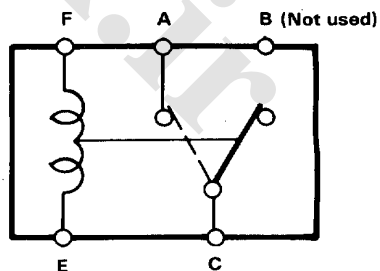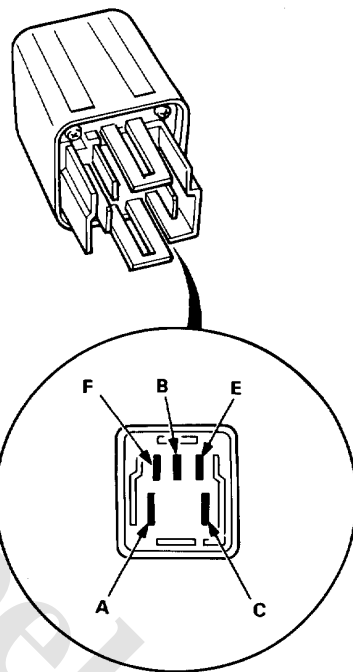


Ignition System

Ignition Timing Inspection and Setting (Fuel-Injected Engine, cont'd)

<Except KG, KS, KX and KQ models>

1. Start the engine and allow it to warm up (cooling fan comes on).
2. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

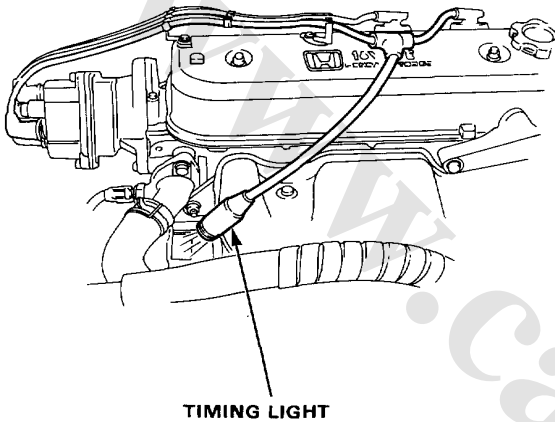


3. Inspection ignition timing at idle.

Ignition Timing:

$15 \pm 2^\circ$ BTDC (RED) at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral


NOTE: The illustration shows A/T.

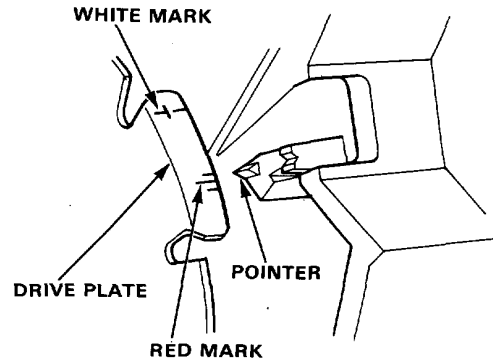


4. Adjust ignition timing, if necessary, by turning the adjusting screw on the ignition timing adjuster in the control box.



5. Remove the cap from the ignition timing adjuster.

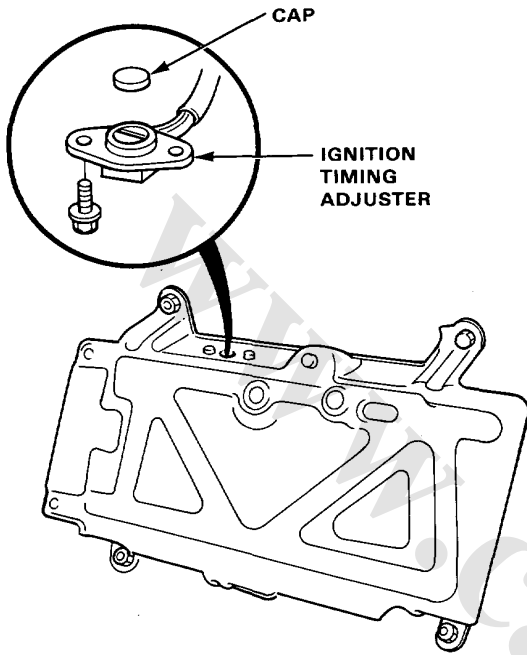

6. Adjust as necessary by turning the adjusting screw on the adjuster; turn the adjusting screw counterclockwise to retard the timing, or clockwise to advance the timing.

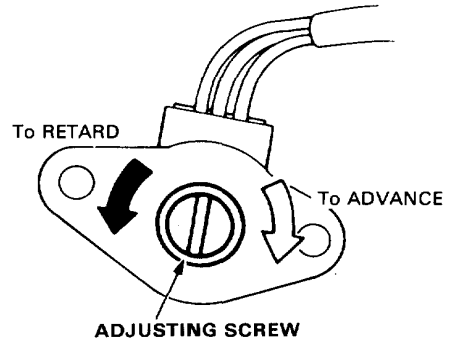

7. After adjusting, reinstall the cap to the ignition timing adjuster.


Ignition System

Ignition Timing Inspection and Setting (Carbureted Engine)

<KP, KT, KU and KY (A/T) models>

1. Disconnect the vacuum hose from the vacuum advance diaphragm, then connect the vacuum pump/gauge to the vacuum hose.

VACUUM PUMP/GAUGE

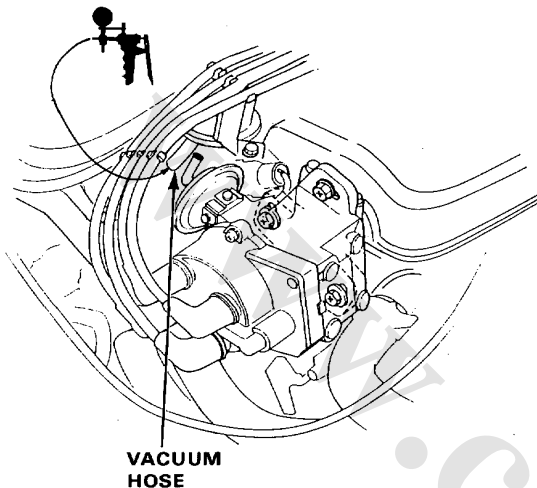


2. Start the engine.

KP and KT models: Let it idle.

KY (A/T) model: Hold the engine at 4,000 min⁻¹ (rpm).

3. Check the vacuum hose for vacuum. The vacuum hose should have vacuum.
 - If the vacuum hose has no vacuum, check the vacuum hose of proper connection, cracks, blockage or disconnected hose.
4. Connect the vacuum hose to the vacuum advance diaphragm and allow the engine to warm up (cooling fan comes on).
5. Disconnect the vacuum hose from the vacuum advance diaphragm and plug them.

6. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

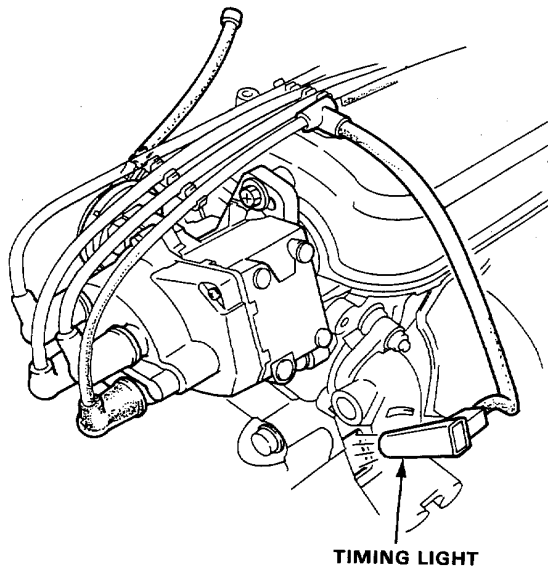


7. Read initial timing when timing mark (white) is aligned to the pointer.

Initial Timing: 0° TDC


- Manual Transmission [at 800 ± 50 min⁻¹ (rpm) in neutral]
- Automatic Transmission [at 750 ± 50 min⁻¹ (rpm) in gear]

NOTE: The illustration shows A/T.

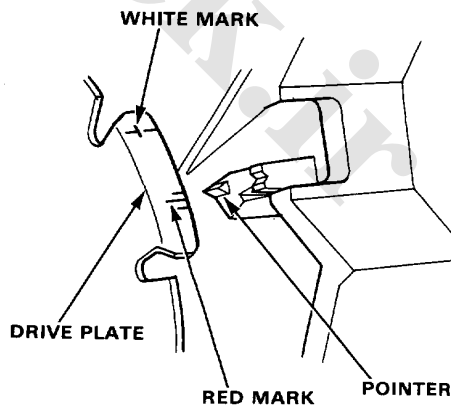



8. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing clockwise to retard the timing, or counterclockwise to advance the timing.

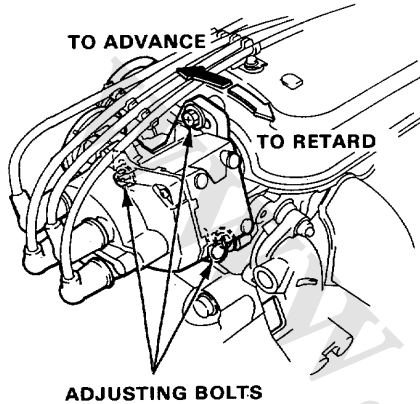

9. Tighten the distributor adjusting bolts, then recheck the timing.

10. Connect the vacuum hose to the vacuum advance diaphragm and inspect ignition timing at idle.

Ignition Timing

M/T: $15^{\circ} \pm 2^{\circ}$ BTDC (Red)

A/T: $10^{\circ} \pm 2^{\circ}$ BTDC (Red)

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

If advance is not as specified, check the vacuum advance diaphragm and distributor advance mechanism.


(cont'd)

Ignition System

Ignition Timing Inspection and Setting (Carbureted Engine)


<Except KP, KT and KY (A/T) models>

1. Disconnect the vacuum hoses from the vacuum advance diaphragm, then connect the vacuum pump/gauges to the vacuum hoses.

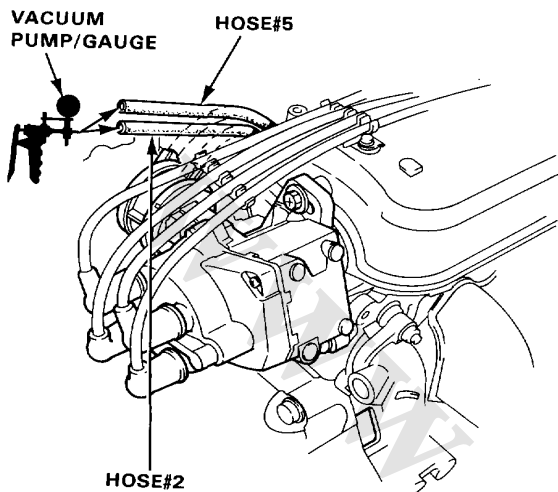

2. Start the engine and let it idle.
3. When the engine is cool, coolant temperature is below 55°C (131°F). Check each hose for vacuum. The #2 and #5 hoses should have vacuum.
 - If the #2 hose has no vacuum, check the #2 hose of proper connection, cracks, blockage or disconnected hose.
 - If the #5 hose has no vacuum, check the #5 and connected hoses for proper connections, cracks, blockage or disconnected hoses, and the check valve is not clogged. If the #5 and connected hoses, and the check valve have no problem, recheck the #5 hose for vacuum.

4. Connect the vacuum hoses to the vacuum advance diaphragm and allow the engine to warm up. (cooling fan comes on).
5. Disconnect the #5 hose from the vacuum advance diaphragm and connect the vacuum pump/gauge to the #5 hose.
6. Check the #5 hose for vacuum. The #5 hose should have no vacuum.
7. Disconnect the vacuum hoses from the vacuum advance diaphragm and plug them.
8. Connect a timing light to the engine; while the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

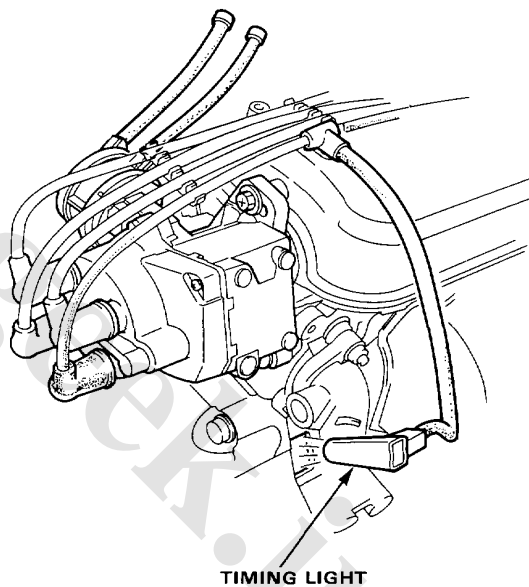




9. Read initial timing when timing mark (white) is aligned to the pointer.

Initial Timing


All models: 0° BTDC

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

NOTE: The illustration shows A/T.

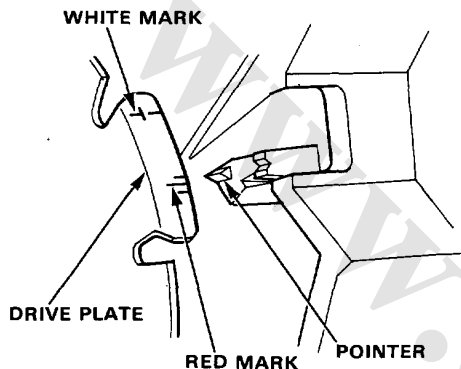

10. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing clockwise to retard the timing, or counterclockwise to advance the timing.

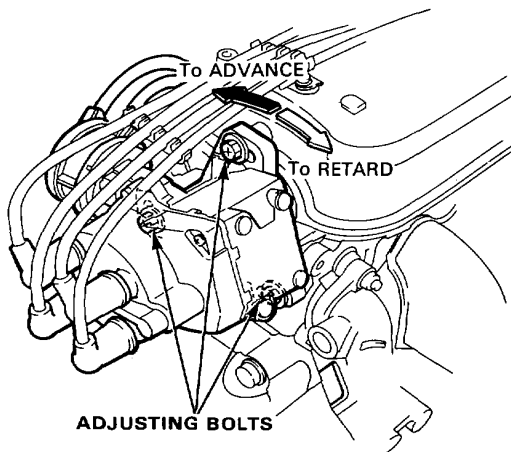

11. Tighten the distributor adjusting bolts, then recheck the timing.

Connect the vacuum hose to the vacuum advance diaphragm and inspect ignition timing at idle.

Ignition Timing

M/T: $15^\circ \pm 2^\circ$ BTDC

A/T: $10^\circ \pm 2^\circ$ BTDC (Except KQ, KX, KS
and KG models)

$15^\circ \pm 2^\circ$ BTDC (KQ, KX, KS
and KG models)


- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

If advance is not as specified, check the vacuum advance diaphragm and distributor advance mechanism.

Ignition System

Advance Diaphragm Inspection

1. Remove the distributor cap and vacuum hoses from the advance diaphragm.
2. Connect a vacuum pump/gauge to the advance diaphragm A (inside port).

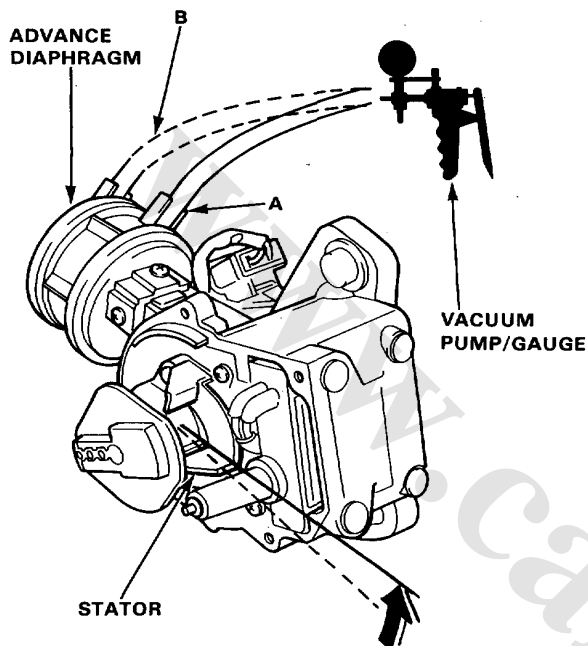


3. When vacuum (more than 500 mm Hg, 20 in. Hg) is applied to the diaphragm, the stator should turn counterclockwise and stay. If the stator does not turn or stay, replace the diaphragm.

When vacuum is released, the stator should return. If the stator does not return, repair or replace as necessary.


4. Repeat the step 2–3 for the advance diaphragm B (outside port).

Top End Inspection

1. Check to be sure that the air gaps are equal (carbureted engine only).
2. If necessary, back off the screws and move the stator as required to adjust.

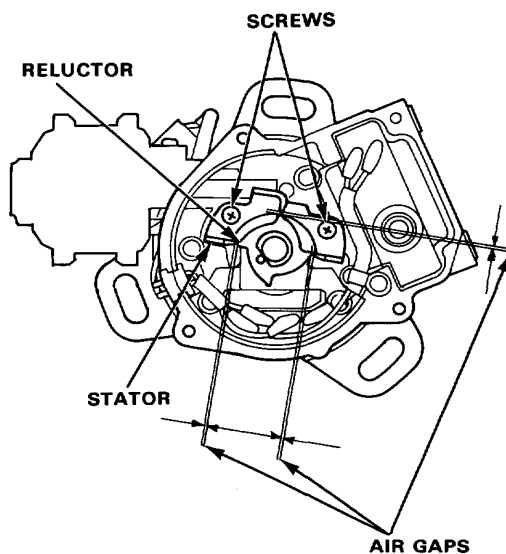


3. Check for rough or pitted rotor and cap terminals.
4. Scrape or file off the carbon deposits. Smooth the rotor terminal with an oil stone or #600 sandpaper if rough.
5. Check the distributor cap for cracks, wear and damages. If necessary, clean or replace it.

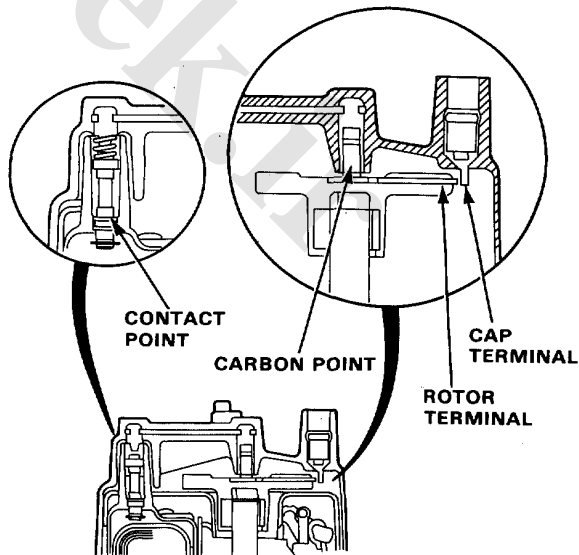



Reluctor Replacement (Carbureted Engine)

1. Carefully pry up the reluctor by using two screwdrivers as shown. Do not damage the reluctor and stator.

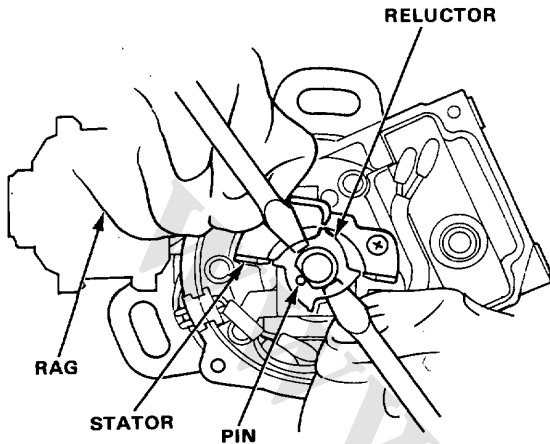


2. When installing the reluctor, be sure to drive in the pin with its gap away from the shaft.

NOTE: The number or letter manufacturing code on the reluctor must always face up.

Distributor Removal (Fuel-Injected Engine)

1. Disconnect the 2-P and 8-P connectors from the distributor.
2. Disconnect the spark plug wires from the distributor cap.

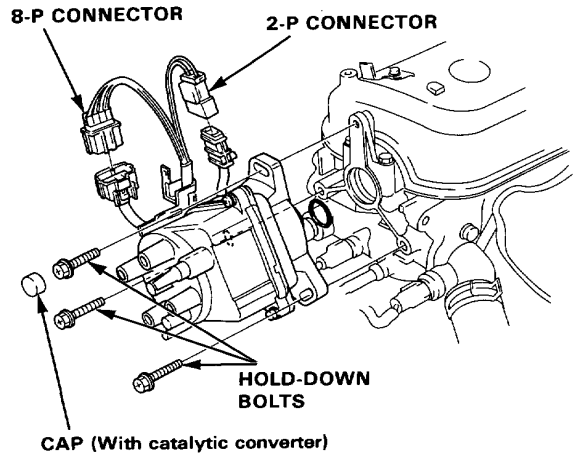


3. Remove the distributor hold-down bolts, then remove the distributor from the cylinder head.

Ignition System

Distributor Installation (Fuel-Injected Engine)


1. Coat a new O-ring with engine oil then install it.
2. Slip the distributor into position.

NOTE: The lugs on the end of the distributor and its mating grooves in the camshaft end are both offset to eliminate the possibility of installing the distributor 180° out of time.

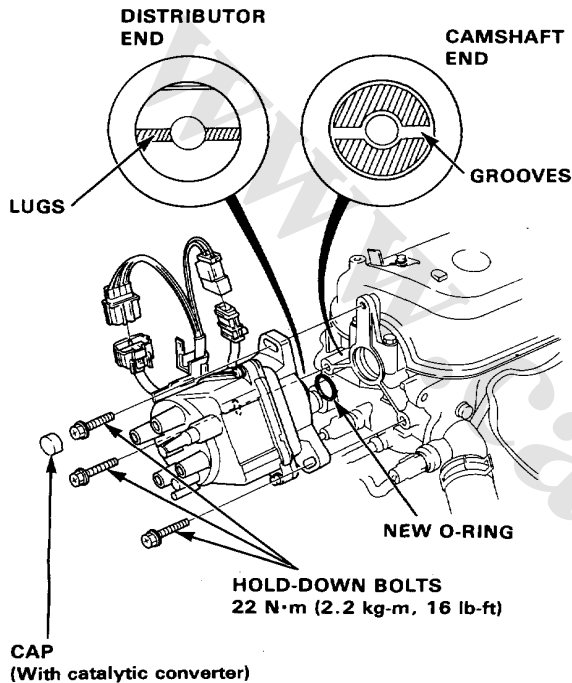

3. Install the hold-down bolts and tighten temporarily.
4. Connect the 2-P and 8-P connectors to the distributor.

5. Connect the spark plug wires as shown.

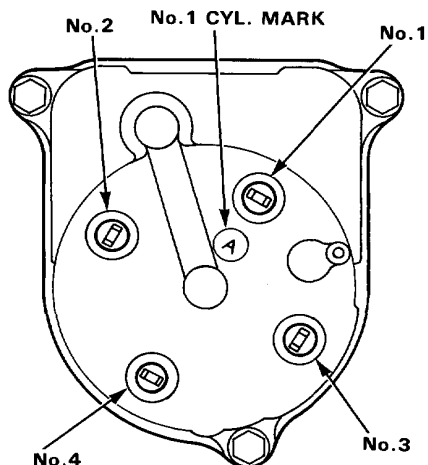


6. Set the timing with a timing light as shown on page 16-71.
7. After adjusting, tighten the hold-down bolts, then install the cap (with catalytic converter) on the bolt.



Distributor Removal/Installation (Carbureted Engine)

Removal:

1. Disconnect the 2-P connector from the distributor.
2. Disconnect the spark plug wires from the distributor cap.
3. Disconnect the vacuum hoses from the advance diaphragm.

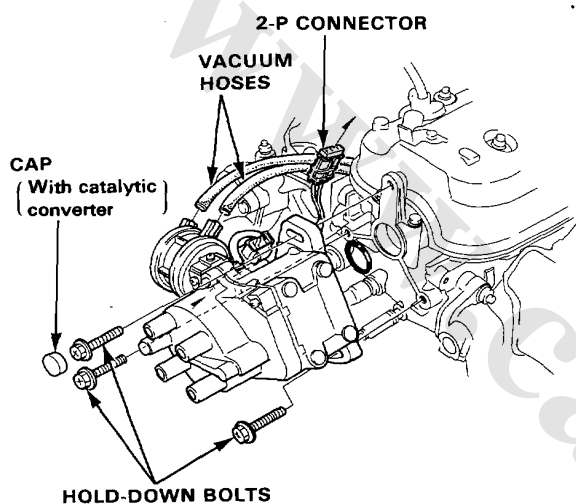


4. Remove the distributor hold-down bolts, then remove the distributor from the cylinder head.


Installation:

1. Coat a new O-ring with engine oil then install it.
2. Slip the distributor into position.

NOTE: The lugs on the end of the distributor and its mating grooves in the camshaft end are both offset to eliminate the possibility of installing the distributor 180° out of time.

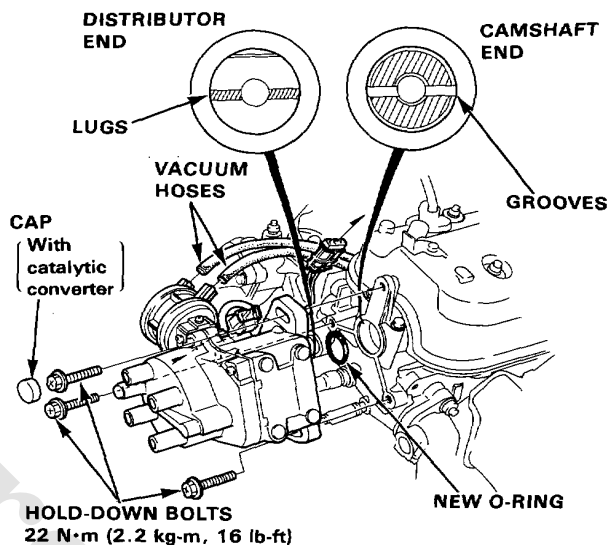

3. Install the hold-down bolts and tighten temporarily.
4. Connect the 2-P connector to the distributor and the vacuum hoses to the advance diaphragm.
5. Connect the spark plug wires as shown.

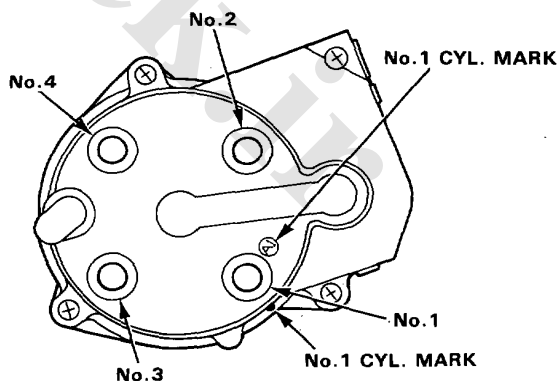

6. Set the timing with a timing light as shown on page 16-74.
7. After adjusting, tighten the hold-down bolts, then install the cap (with catalytic converter) on the bolt.

Carbureted engine


Fuel- Injected engine

www.cargeek.ir

Fuses

Dash Fuse Box


NOTE: Dash fuse box is located behind left kick panel (LHD) or right kick panel (RHD).

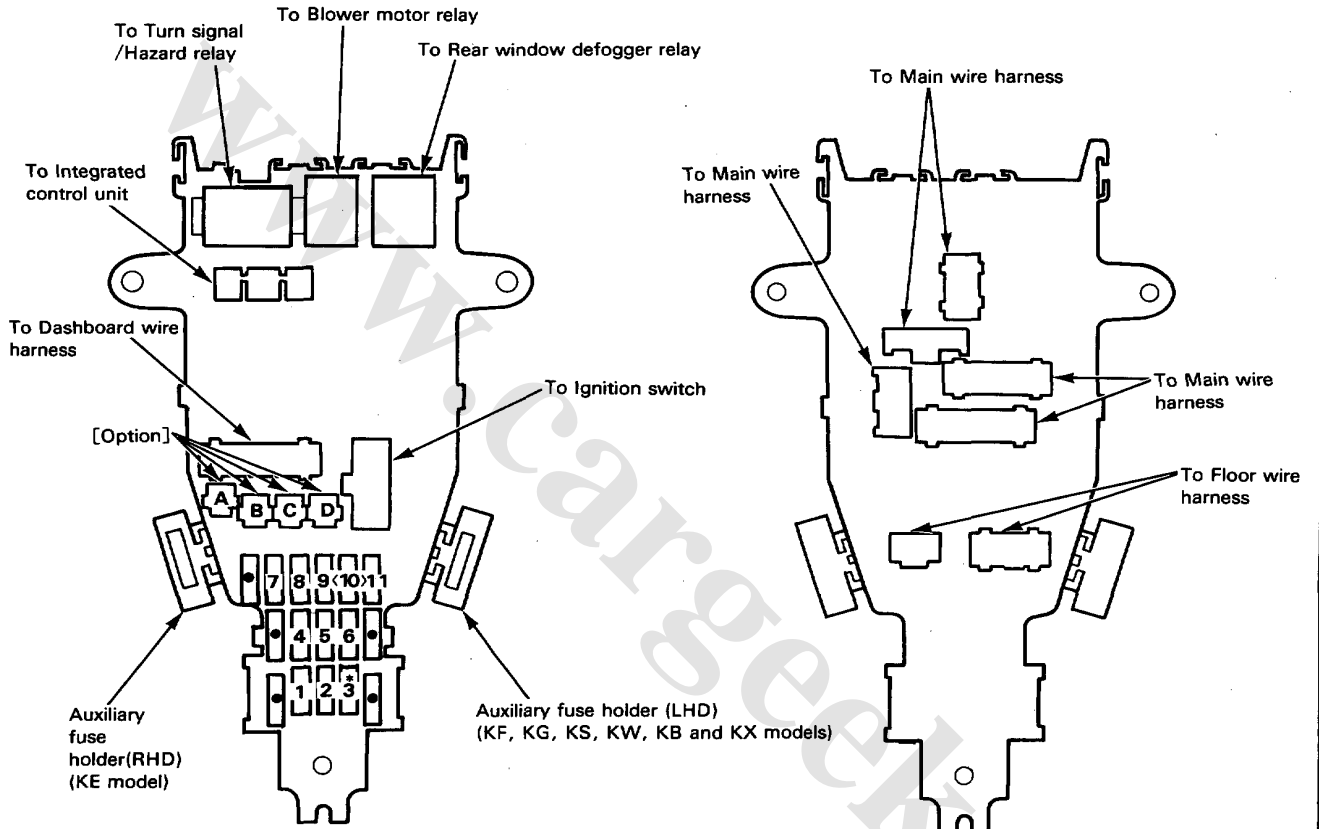

- :Spare fuse
- * :Not used
- <> :KS, KW and KE models only

Back-up Lights

Circuit Diagram

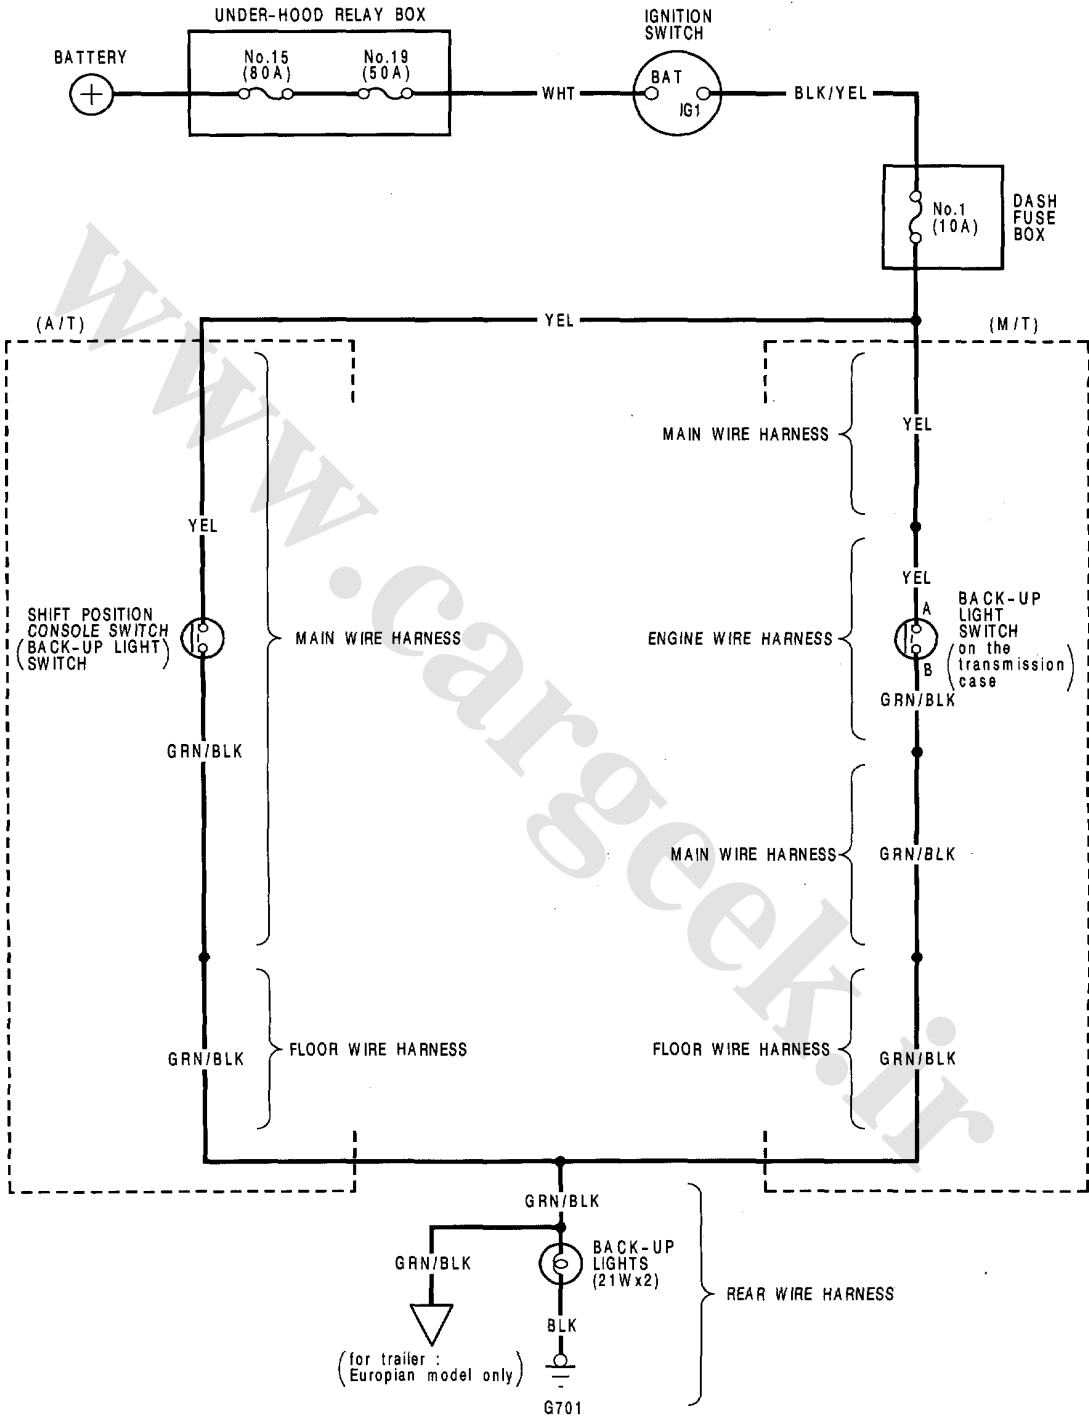




Test

Manual Transmission:

NOTE: Check the No.1 (10 A) fuse in the dash fuse box before testing.

1. Test back-up light switch by placing the select lever in reverse and turning the ignition switch to ON.
2. If the back-up lights do not go on, check the back-up light bulbs in the taillight assembly.
3. If the fuse and bulbs are OK, disconnect the connectors from the back-up light switch.

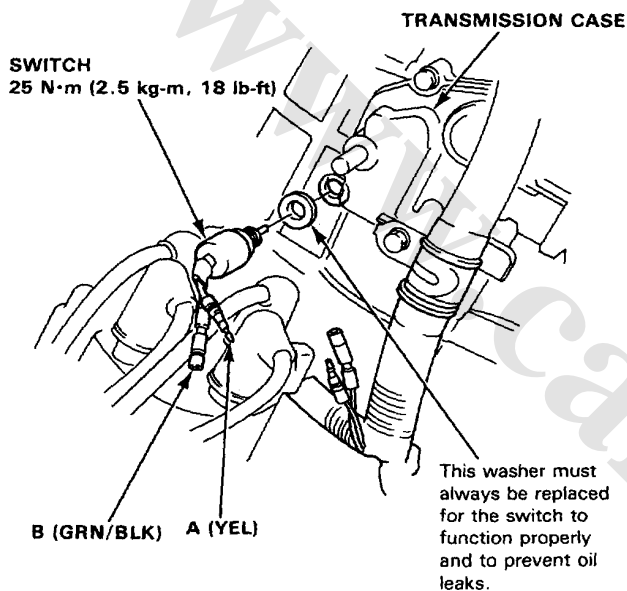


4. Check for continuity between the A and B wires with the switch installed to the transmission case. There should be continuity as the select lever engages "R".
 - If no continuity, replace the switch.
 - If there is continuity, but the back-up lights do not go on:
 - Poor ground (G701)
 - An open in the YEL or GRN/BLK wire.

Automatic Transmission:

NOTE: Check the No.1 (10 A) fuse in the dash fuse box before testing.

1. Test back-up light switch by shifting the select lever to "R" and turning the ignition switch ON.
2. If the back-up lights do not go on, check the back-up light bulbs in the taillight assembly.
3. If the fuse and bulbs are OK, remove the center console, then disconnect the 12-P connector from the shift position console switch (back-up light switch).

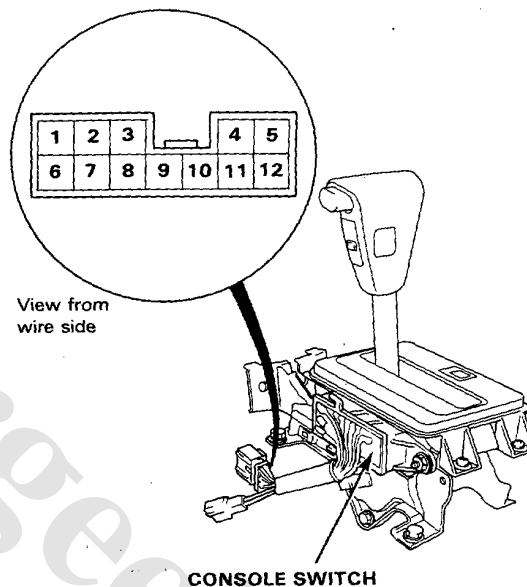

4. Check for continuity between No.2 and No.3 terminals. Move the lever back and forth without touching the push button at the "R" position, and check for continuity within a range of free play of the shift lever.
 - If there is no continuity within the range of free play, adjust the installation position of console switch (see page 16-142).
 - If there is continuity, but the back-up lights do not go on:
 - Poor ground (G701)
 - An open in the YEL or GRN/BLK wire.




Taillights

Replacement

Trunk side:


1. Open the trunk lid and remove the trunk panel.
2. Disconnect the 8-P connector from the trunkside taillight.
3. Remove the 4 mount nuts and the taillight.

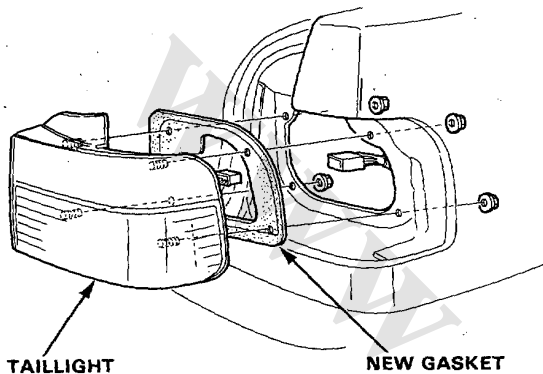

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.

Lid side:

1. Open the trunk lid and remove the trunk panel.
2. Disconnect the 4-P connector from the lidside taillight [Built in the rear fog light (Driver's side)].
3. Remove the 4 mount nuts and the lidside taillight.

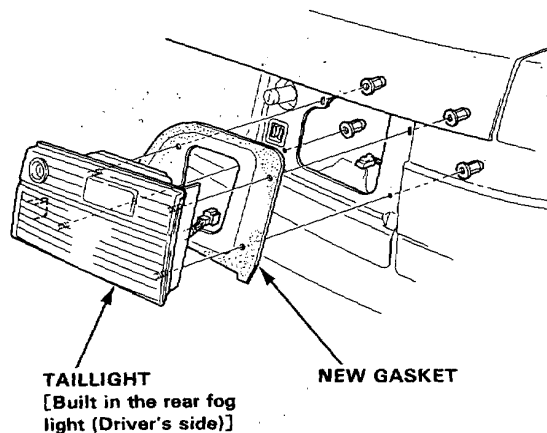


4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.

Front Turn Signal Lights

Replacement

1. Remove the screw and the front turn signal light, then disconnect the 2-P connector.

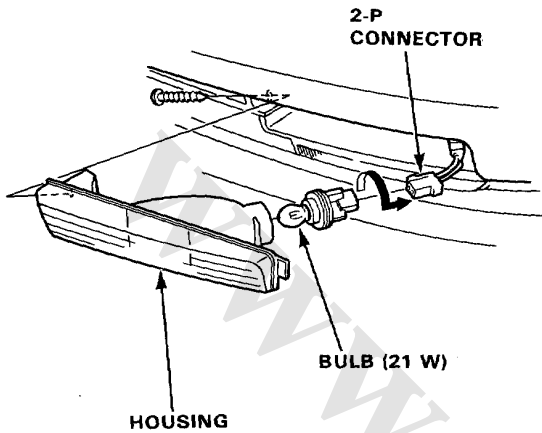


2. Turn the bulb 45° counterclockwise to remove it from the housing.

Front Position Lights

Replacement

1. Remove the screw and pull out the front position light from the stay, then disconnect the 2-P connector.

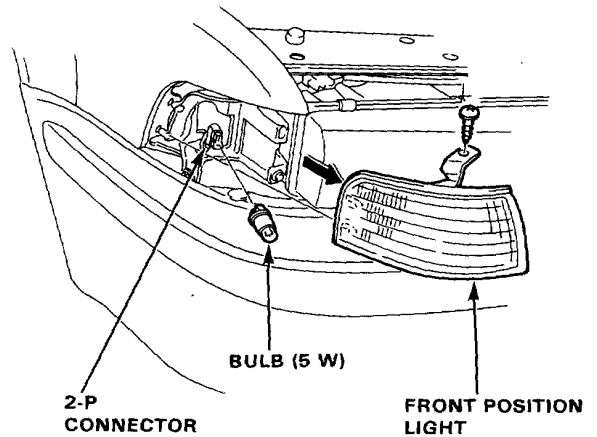


2. Turn the bulb 45° counterclockwise to remove it from the front position light.




Turn Signal/Hazard Flasher System

Component Location Index

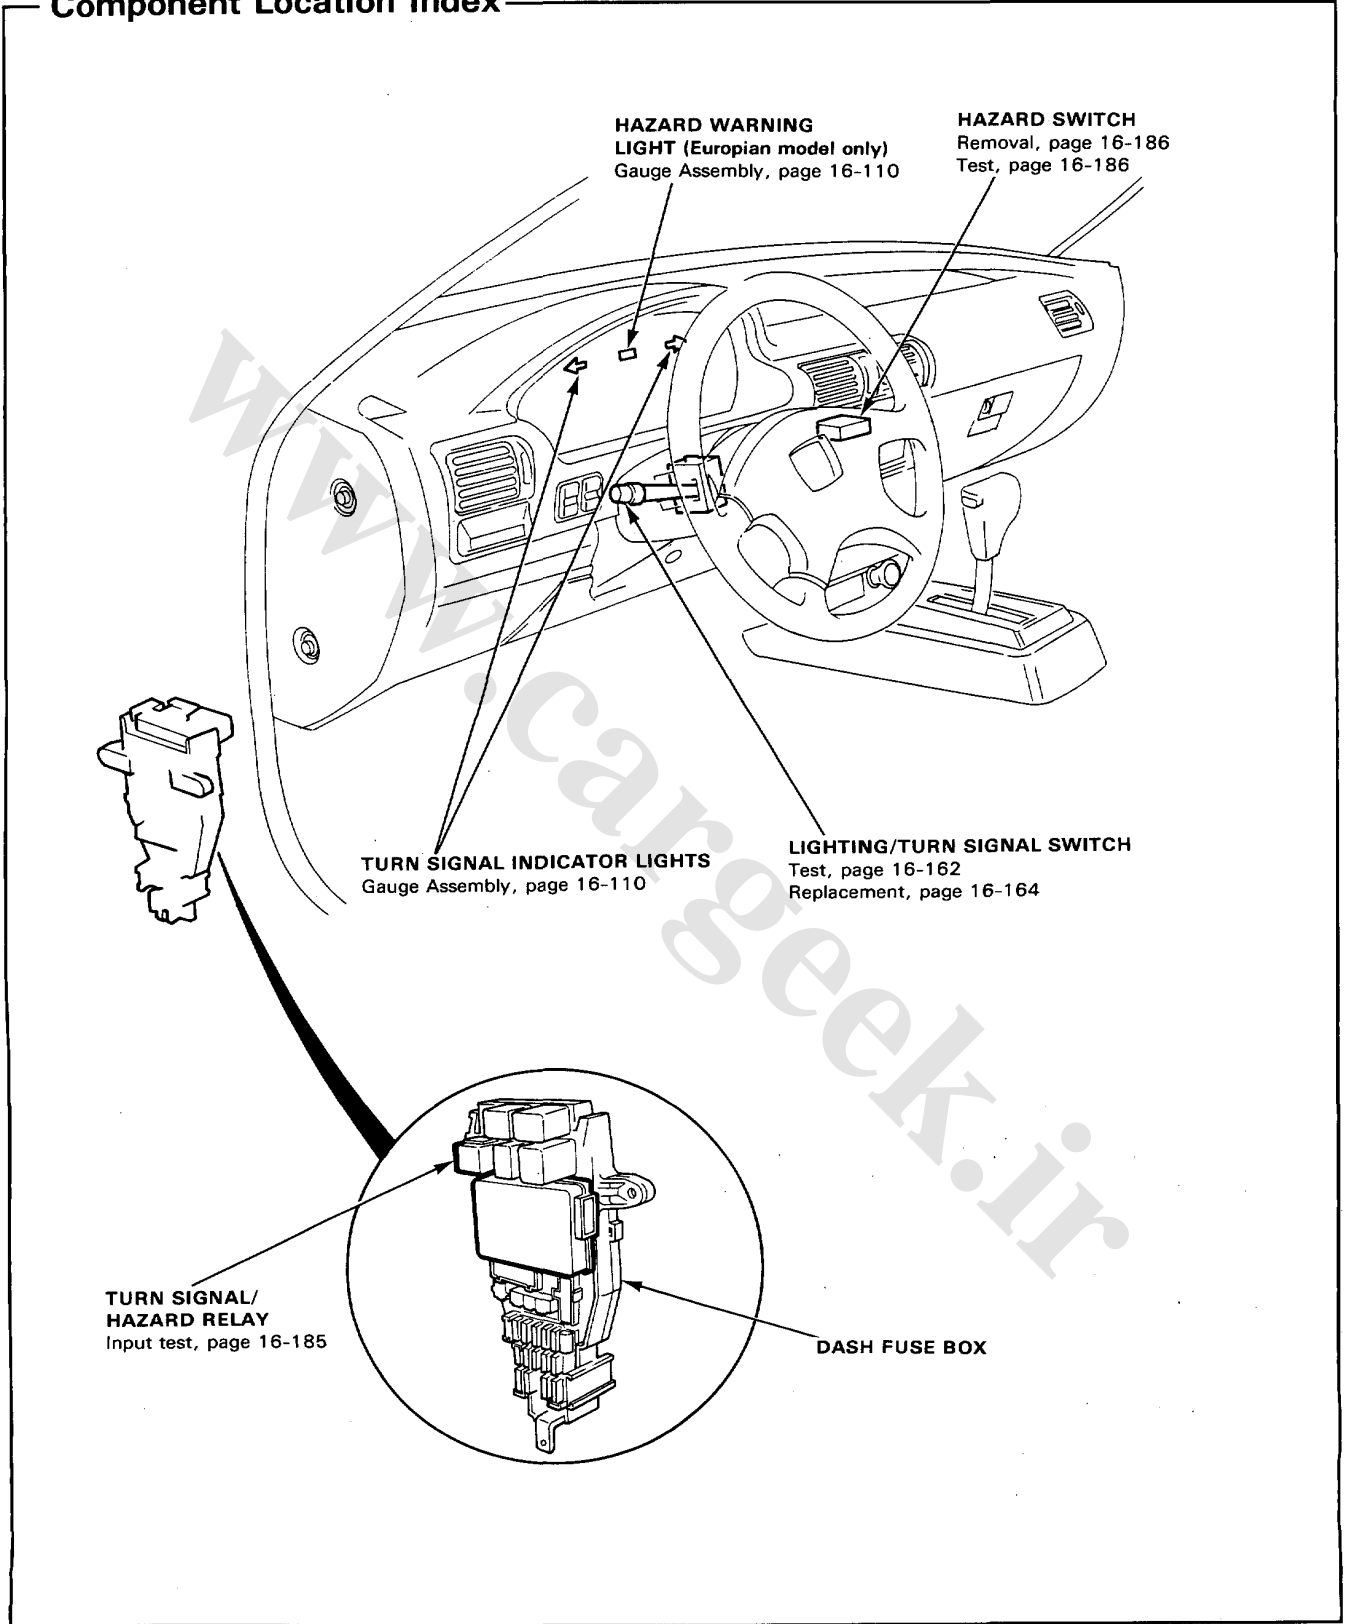

Turn Signal/Hazard Flasher System


Circuit Diagram

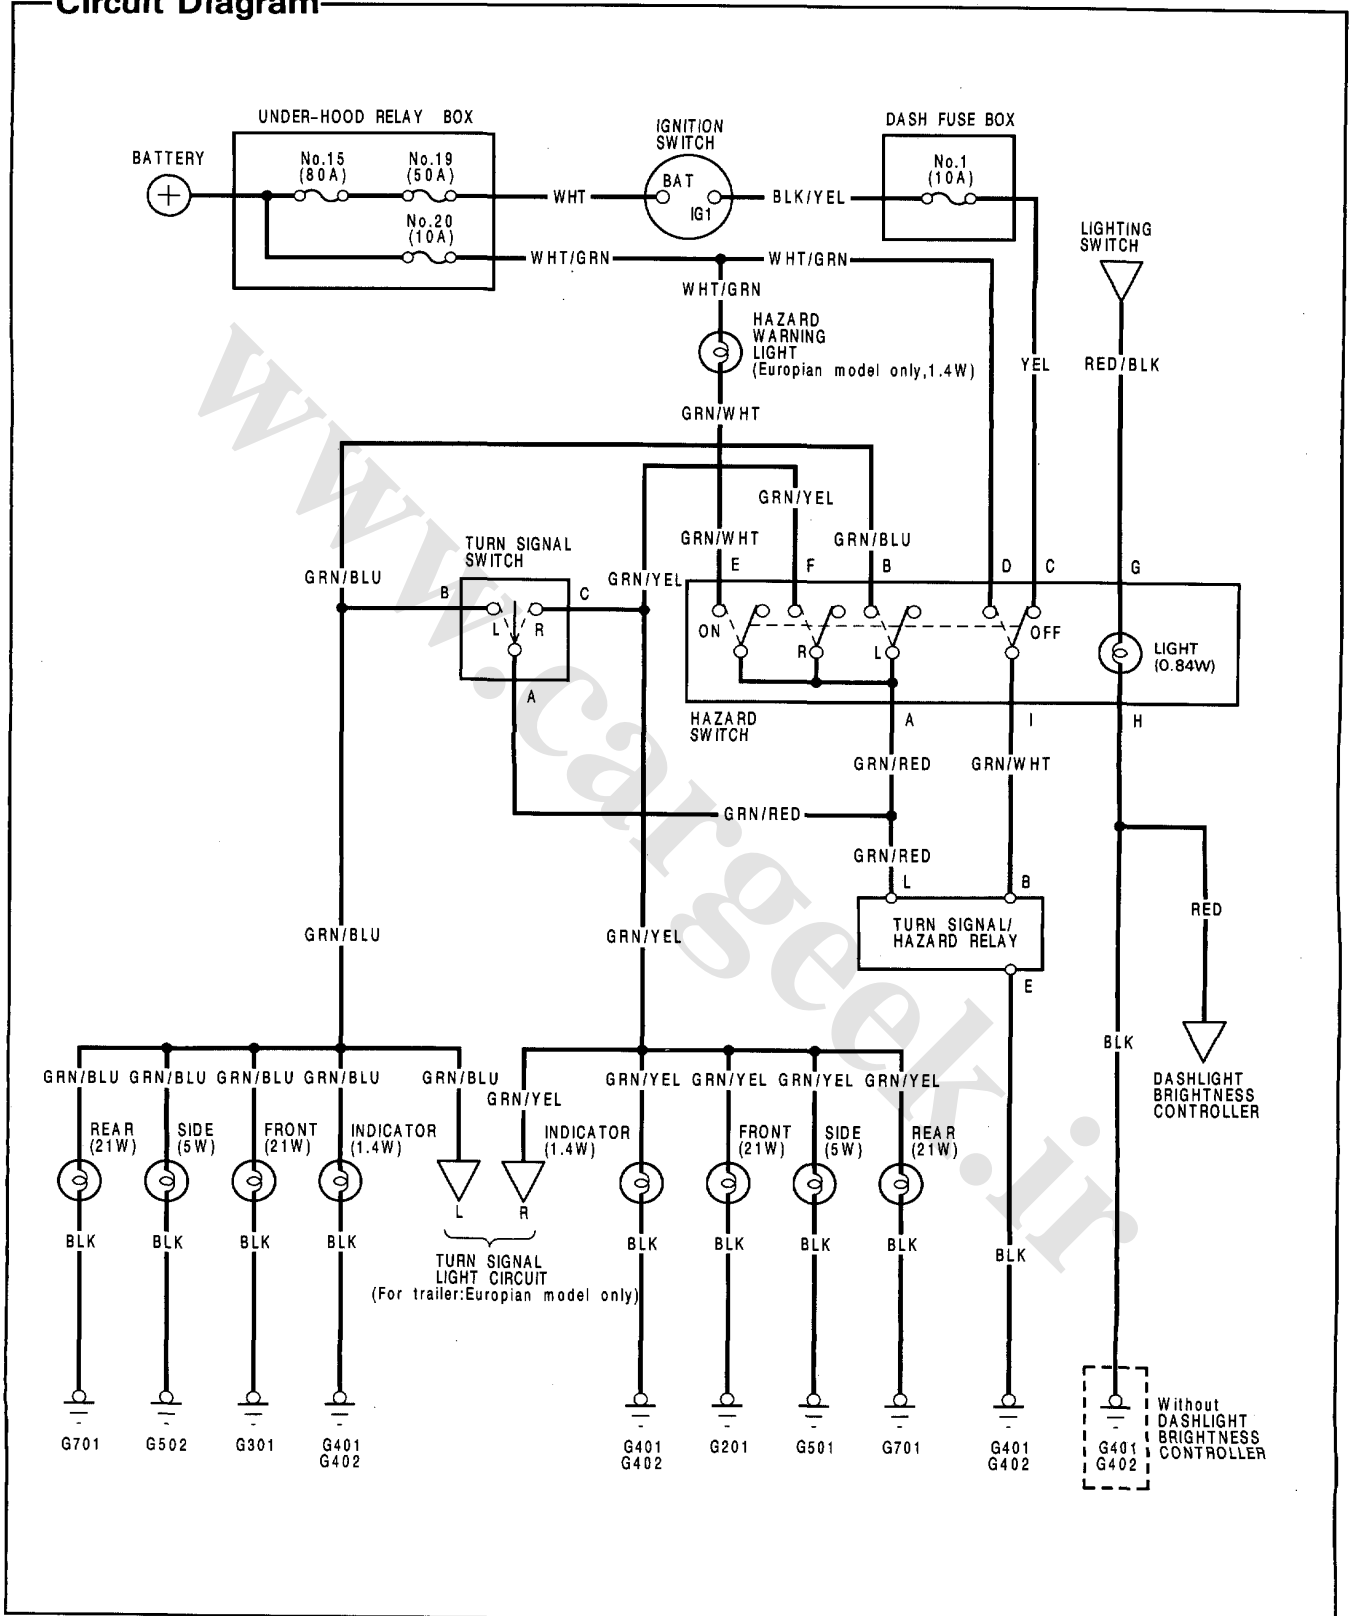



Turn Signal/Hazard Relay Input Test

Remove the turn signal/hazard relay from the dash fuse box.
 Make the following input tests at the relay holder pins.
 If all tests prove OK, but the relay fails to work, replace the turn signal/hazard relay.

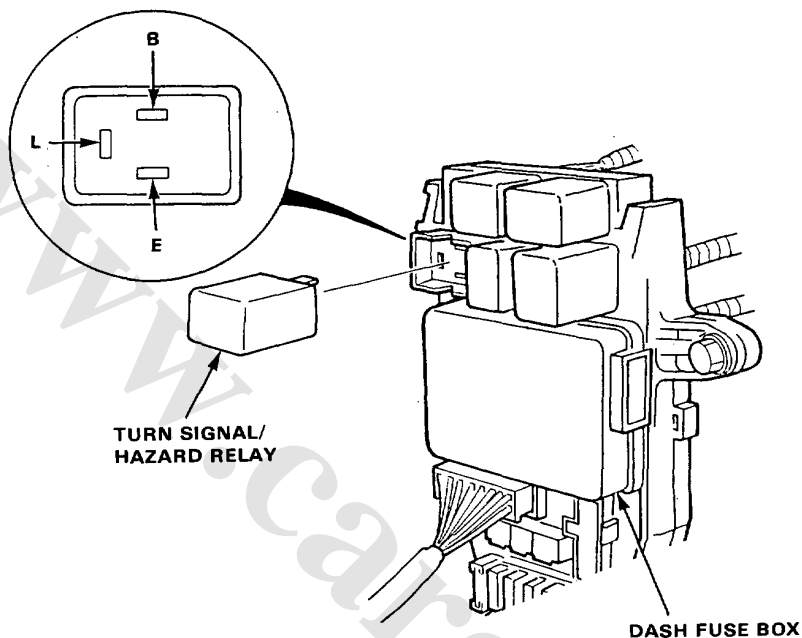


No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	E	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> · Poor ground (G401, G402) · An open in the BLK wire.
2	B	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Blown No.1 (10 A) fuse. · An open in the YEL or GRN/WHT wire. · Faulty hazard switch.
3	B and L	Hazard switch ON and connect the B terminal to the L terminal.	Hazard lights should come on.	<ul style="list-style-type: none"> · Blown No.20 (10 A) fuse. · Blown bulb. · Poor ground (G201, G301, G401, G402, G501, G502, G701) · Faulty hazard switch. · An open in the WHT/GRN, GRN/RED, GRN/YEL or GRN/BLU wire.
		Ignition switch ON and turn signal switch in R or L and connect the B terminal to the L terminal.	R or L side turn lights should come on.	<ul style="list-style-type: none"> · Faulty turn signal switch.

Turn Signal/Hazard Flasher System

Hazard Switch Removal




- Carefully pry out the hazard switch from the instrument panel.
NOTE: Be careful not to damage the switch or the instrument panel when prying out the switch.
- Disconnect the 10-P connector from the switch.

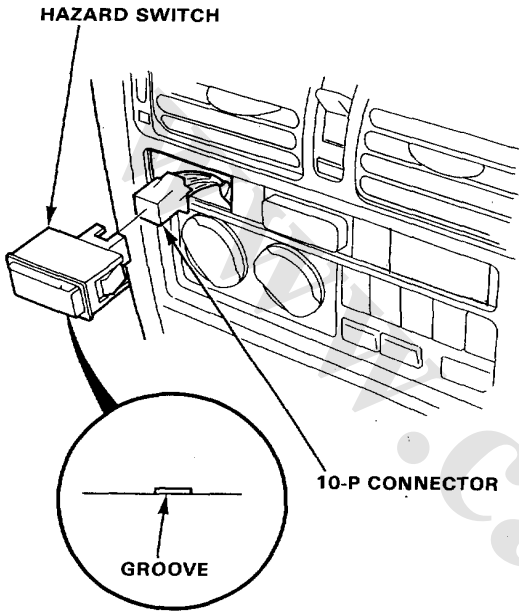

Hazard Switch Test

- Pry out the hazard switch from the instrument panel.
- Check for continuity between the terminals in each switch position according to the table.

Terminal	A	B	C	D	E	F	G	H	I
Position									
OFF			○	○			○	○	○
ON	○	○		○	○		○		○

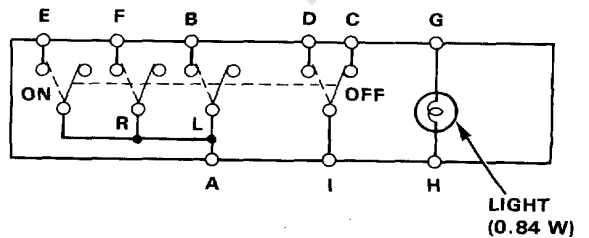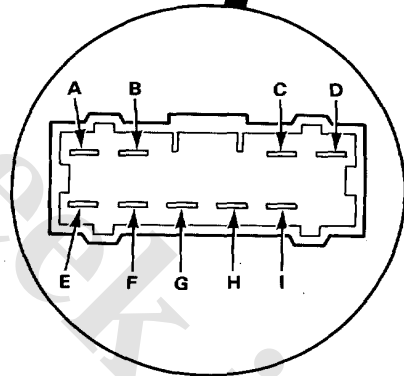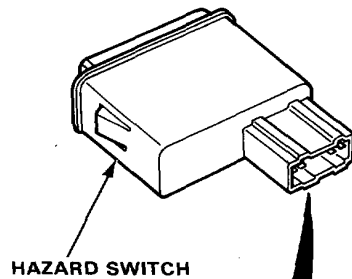



Headlights

Adjustment

Outside Headlight Adjustment:

Adjust the points A and B.


KG model only:

1. Adjust the outside headlight with "O" position of headlight adjuster switch.
2. Check the dip of beam in each position of the headlight adjuster switch, after outside headlight adjustment.

Inside Headlight Adjustment:


Adjust the points C and D.

NOTE: Adjust the headlights to local requirements.

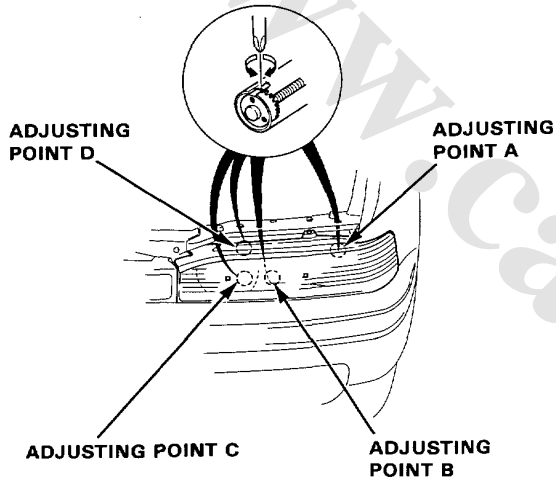


Outside headlight:


(Except KG model)

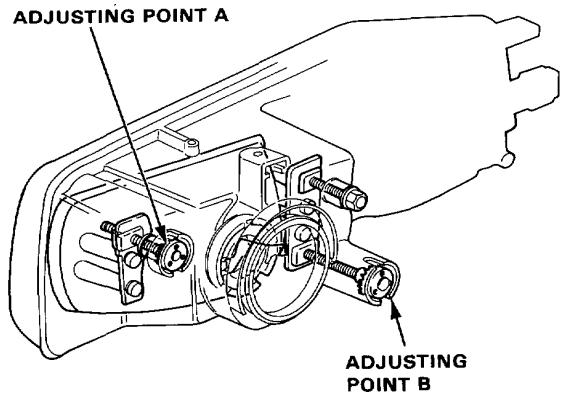

(KG model only)

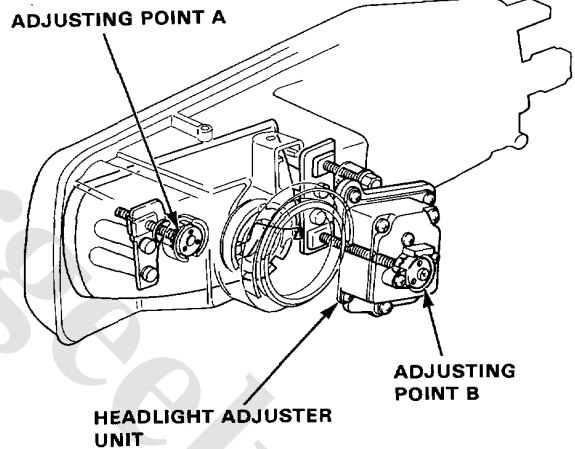

Inside headlight:

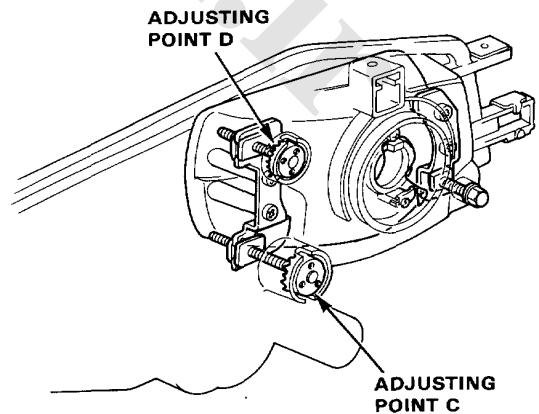

Headlights


Replacement

CAUTION:

● Halogen headlights can become very hot in use; do not touch them or the attaching hardware immediately after they have been turned off.

● Do not try to replace or clean the headlights with the lights on.

1. Disconnect the 3-P connectors from behind the unit. Before disconnecting right side connector, remove the battery and coolant reservoir.
2. Remove the rubber boot from behind the light by pulling the tab.
3. Unhook the retaining spring and remove the bulb.
4. Remove the screw and front position light, then disconnect the 2-P connector.
5. Remove the front grille and front bumper.
6. Remove the 5 mount bolts, then remove the unit.
7. After installing the unit, adjust the headlights to local requirements.

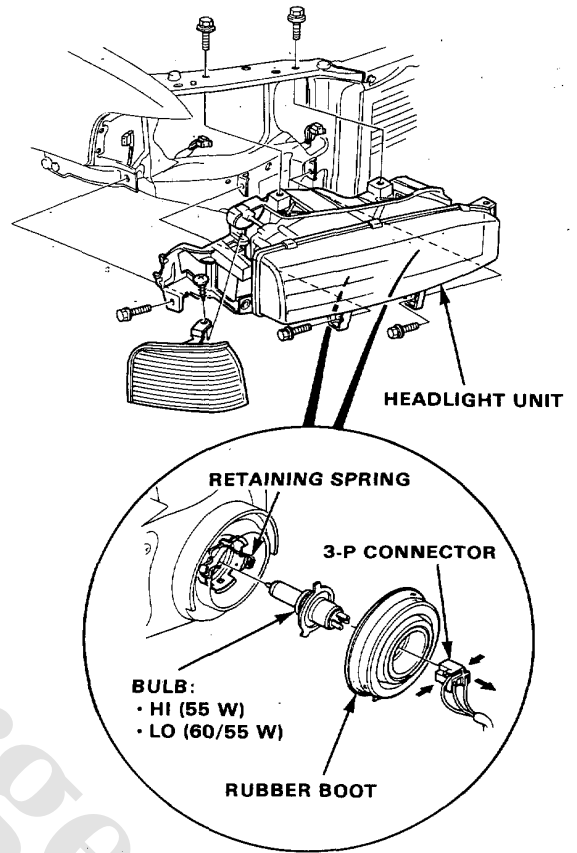




License Plate Lights

Replacement



1. Remove the 2 screws from the trunk lid and disconnect the 2-P connector, then remove the license plate light.
2. Remove the cover from the license plate light, then remove it from the housing.

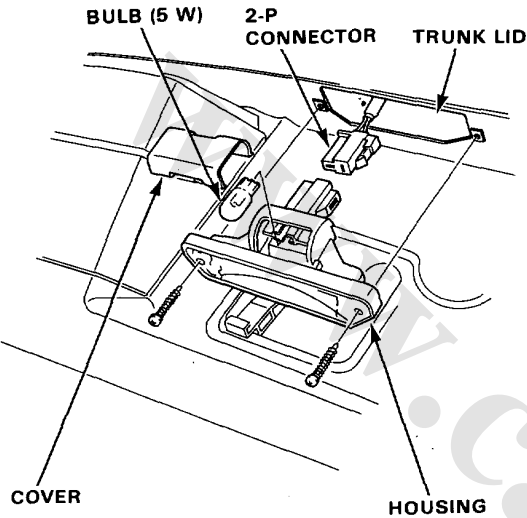

Glove Box Light

Test

1. Open the glove box.
2. Disconnect the 2-P connector from the light.
3. There should be continuity between the A and B terminals with a bulb installed.

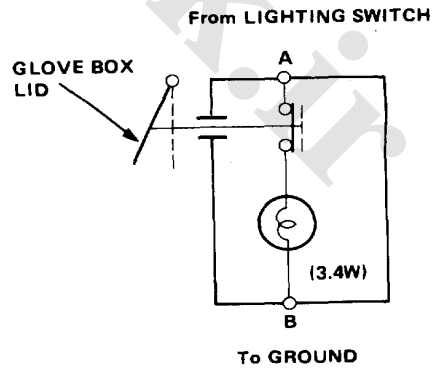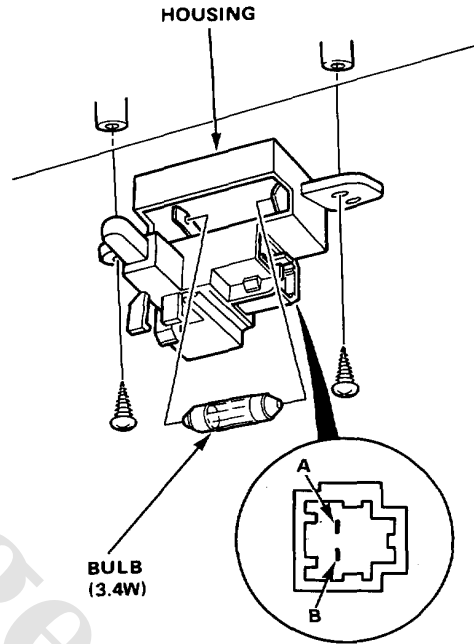




Courtesy Lights and Door Switches


Courtesy Light Replacement

NOTE: The bulb or lens alone can be replaced without having to remove the door trim panel.

1. Remove the door trim panel.
2. Remove the 2 screws and the retainer plate to remove the light from the door trim panel.

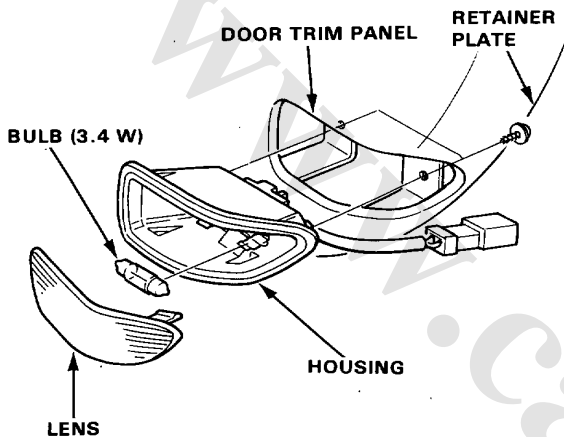


From No.22 (15 A) FUSE

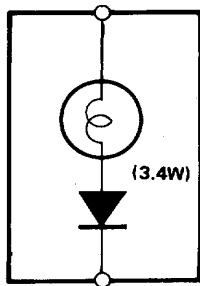

To DOOR SWITCH

Door Switch Test

1. Open the door.
2. Remove the screw and pull out the door switch.
3. Disconnect the 1-P CONNECTOR from the switch.

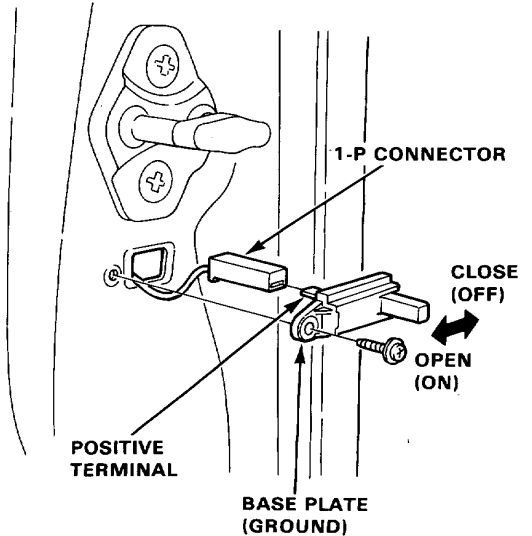


4. There should be continuity between the positive terminal and base plate (ground) with the switch released (door opened). There should be no continuity with the switch pushed (door closed).




Dashlight Brightness Control

Component Location Index

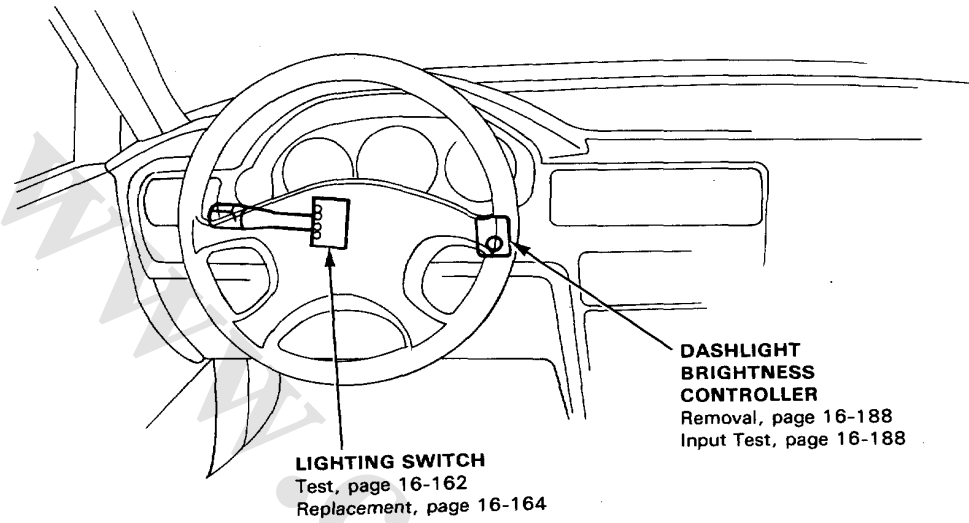

Circuit Diagram

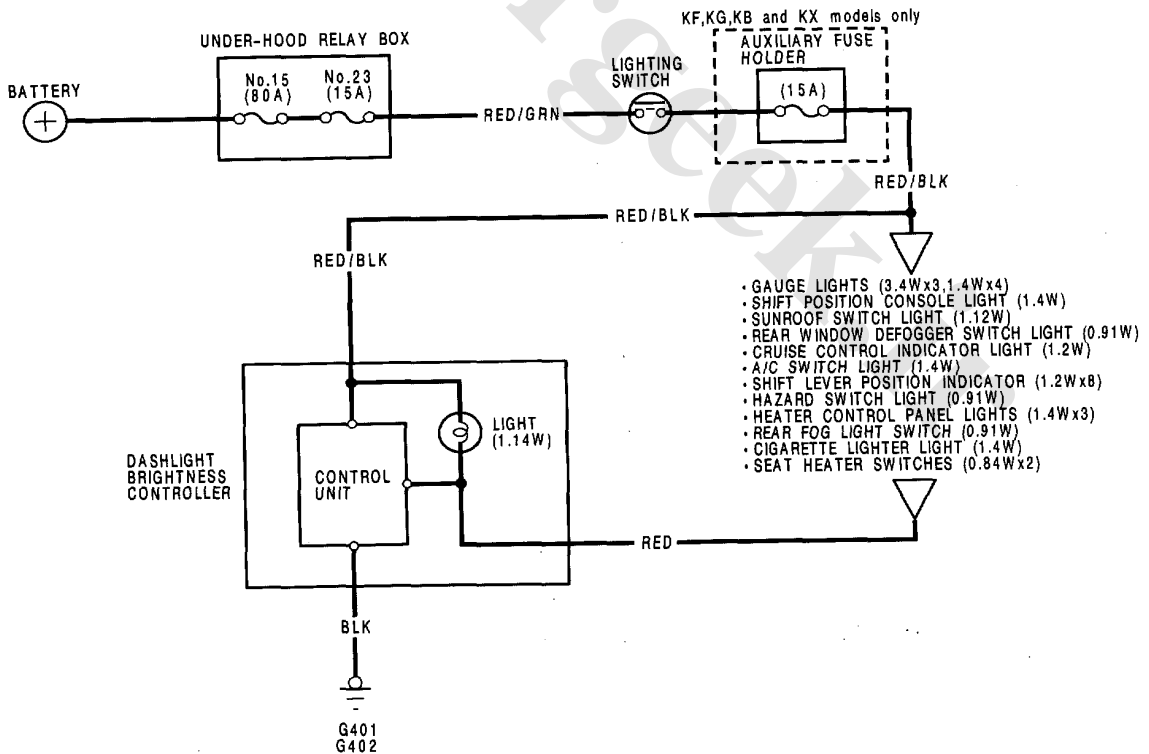

Dashlight Brightness Control


Controller Input Test

NOTE: The control unit is built in the dashlight brightness controller.

Pry out the switch from the instrument panel, then disconnect the 3-P connector from the controller.

Make the following input tests at the harness pins. If all tests prove OK, yet the dashlights still cannot be controlled, check the connector for good connection. If OK, then replace the controller.

NOTE: Be careful not to damage the switch or the instrument panel when prying out the switch.

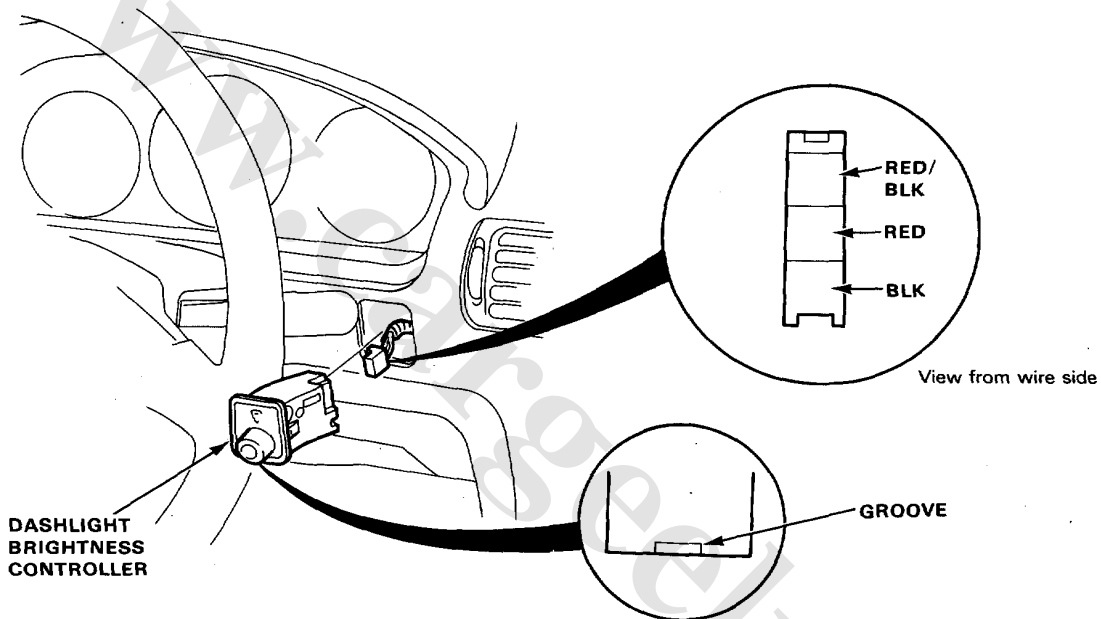

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	RED/BLK	Lighting switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.23 (15 A) fuse. • Blown auxiliary fuse (15 A)*. • Faulty lighting switch. • An open in the wire.
3	RED	Lighting switch ON.	Attach to ground: Dashlights should come on full bright.	<ul style="list-style-type: none"> • An open in the RED/BLK or RED wire.


NOTE: If the fuse blows, the BLK and the RED/BLK wires are connected.

* : KF, KG, KB and KX models only

Dome Light

Test


1. Turn the light switch OFF.
2. Pry off the lens.
3. Remove the nuts or screws and the housing.
4. Disconnect the 3-P connector from the housing.

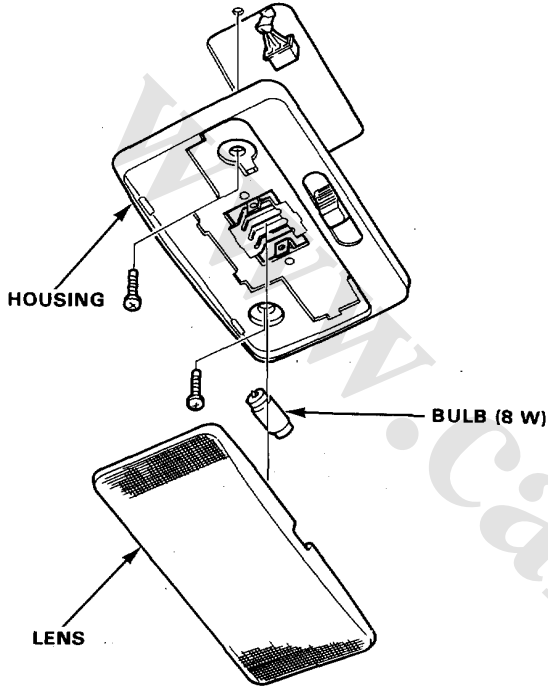


5. Remove the dome light.
6. Check for continuity between the terminals in each switch position according to the table.

Terminal	A	B or B'	C		D
Position					
OFF			○	⊗	○
MIDDLE		○		⊗	○
ON	○			⊗	○


With Sunroof:

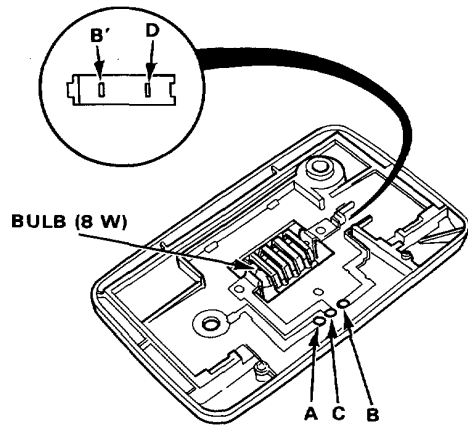


Without Sunroof:

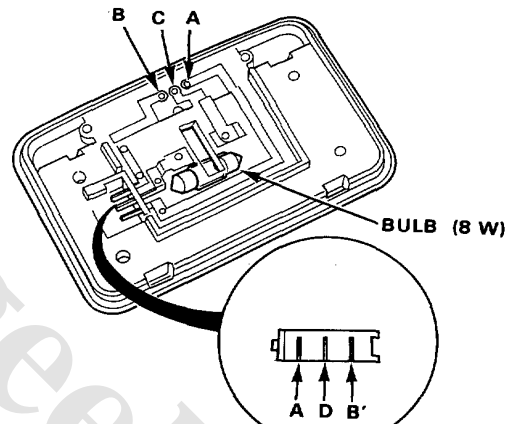


From No.22 (15 A) FUSE

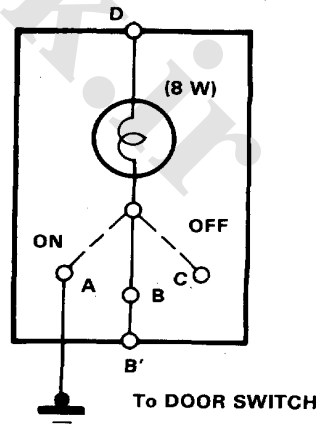


with Sunroof: RHD: G401, G402
LHD: G501, G502
without Sunroof: At MOUNTING NUT

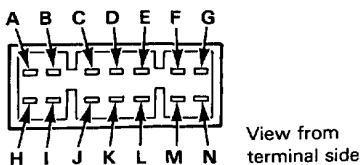

KQ and KY models:

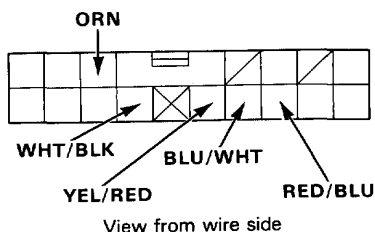

Except KQ and KY models:

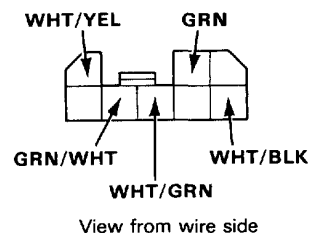

Wiper System:

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	• Poor ground (G401, G402)
2	C	Ignition switch ON and wiper switch INT.	Check for voltage to ground: should be battery voltage.	• Blown No.6 (30 A) fuse. • Faulty wiper switch. • An open in the wire.
3	D	Ignition switch ON and washer switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.6 (30 A) fuse. • Faulty washer switch. • An open in the wire.
4	I	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.6 (30 A) fuse. • An open in the wire.
5	J	Wiper switch LO.	Check for continuity to ground: should be continuity.	• Faulty wiper switch. • An open in the wire. • Poor ground (G401, G402).


Light-on Warning System:

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	• Poor ground (G401, G402)
2	M	Lighting switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.23 (15 A) fuse. • Faulty lighting switch. • An open in the wire.
3	B	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.1 (10 A) fuse. • Faulty dash fuse box.
4	A	Driver's door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove No.1 (10 A) fuse.	• Faulty driver's door switch. • An open in the wire.


(cont'd)

Integrated Control Unit


Input Test (Without Daytime and Dim-Dip Light, cont'd)

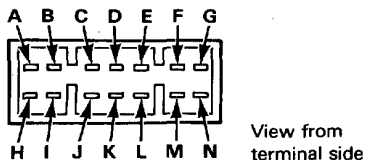

KQ and KY models:

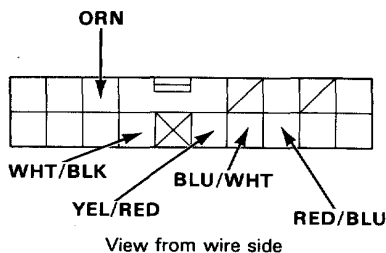

Except KQ and KY models:

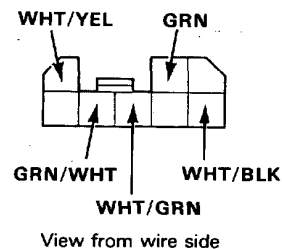


Entry Light Timer System:


No.	Terminal or Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	L	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.22 (15 A) fuse. • An open in the wire.
3	WHT/BLK	Under all conditions.	Check ignition key light operation: connect the WHT/BLK terminal to the H terminal.	<ul style="list-style-type: none"> • Blown bulb • An open in the wire.
4	A	Driver's door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove No.1 (10 A) fuse.	<ul style="list-style-type: none"> • Faulty driver's door switch. • An open in the wire.

Seat Belt Reminder System (KY model only):


No.	Terminal or Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	YEL/RED	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.1 (10 A) fuse. • An open in the wire.
3	BLU/WHT	Ignition switch turned form "II" to "O" position.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Faulty ignition key switch. • An open in the wire.
4	RED/BLU	Driver's seat belt is not buckled.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Faulty seat belt switch. • Poor ground (G502). • An open in the wire.
5	ORN	Ignition switch ON and connect the B terminal to the ORN terminal.	Check chime operation: Chime should activate each time the battery is connected.	<ul style="list-style-type: none"> • Faulty chime. • An open in the wire.

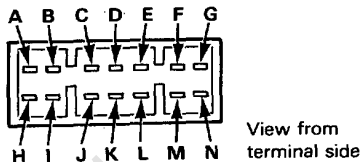

KQ and KY models:

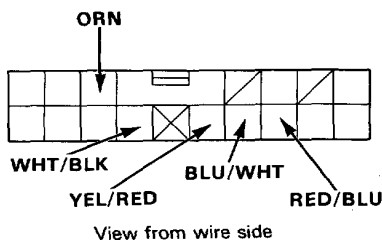

Except KQ and KY models:

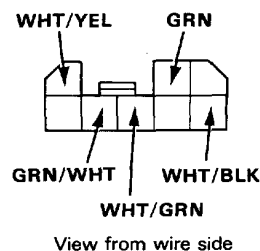

Brake Light System (KG model only):

No.	Terminal or Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	WHT/YEL	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.25 (20 A) fuse. • An open in the wire.
3	WHT/GRN	Brake pedal pushed.	Check for continuity to ground: should be continuity	<ul style="list-style-type: none"> • Faulty failure sensor. • An open in the wire. • Poor ground (G701)
4	GRN	Ignition switch ON.	Attach to ground: Brake indicator light in the safety indicator should come on.	<ul style="list-style-type: none"> • Faulty safety indicator (in the gauge assembly). • An open in the wire.
5	GRN/WHT	Brake pedal pushed.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Faulty brake light switch. • An open in the wire.
		Brake pedal released.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G701) • An open in the wire.


Integrated Control Unit

Circuit Diagram (With Daytime Light)

Description:

A multi-function control unit located on the left side kick panel, integrates the functions of the combined operation with wiper/washer circuit, light-on warning circuit, entry light timer circuit and daytime running light relay onto one circuit board, sharing common circuit functions.

NOTE: Several different wires have the same color. They have been given a number suffix to distinguish them (for example RED/BLK¹ and RED/BLK² are not the same).

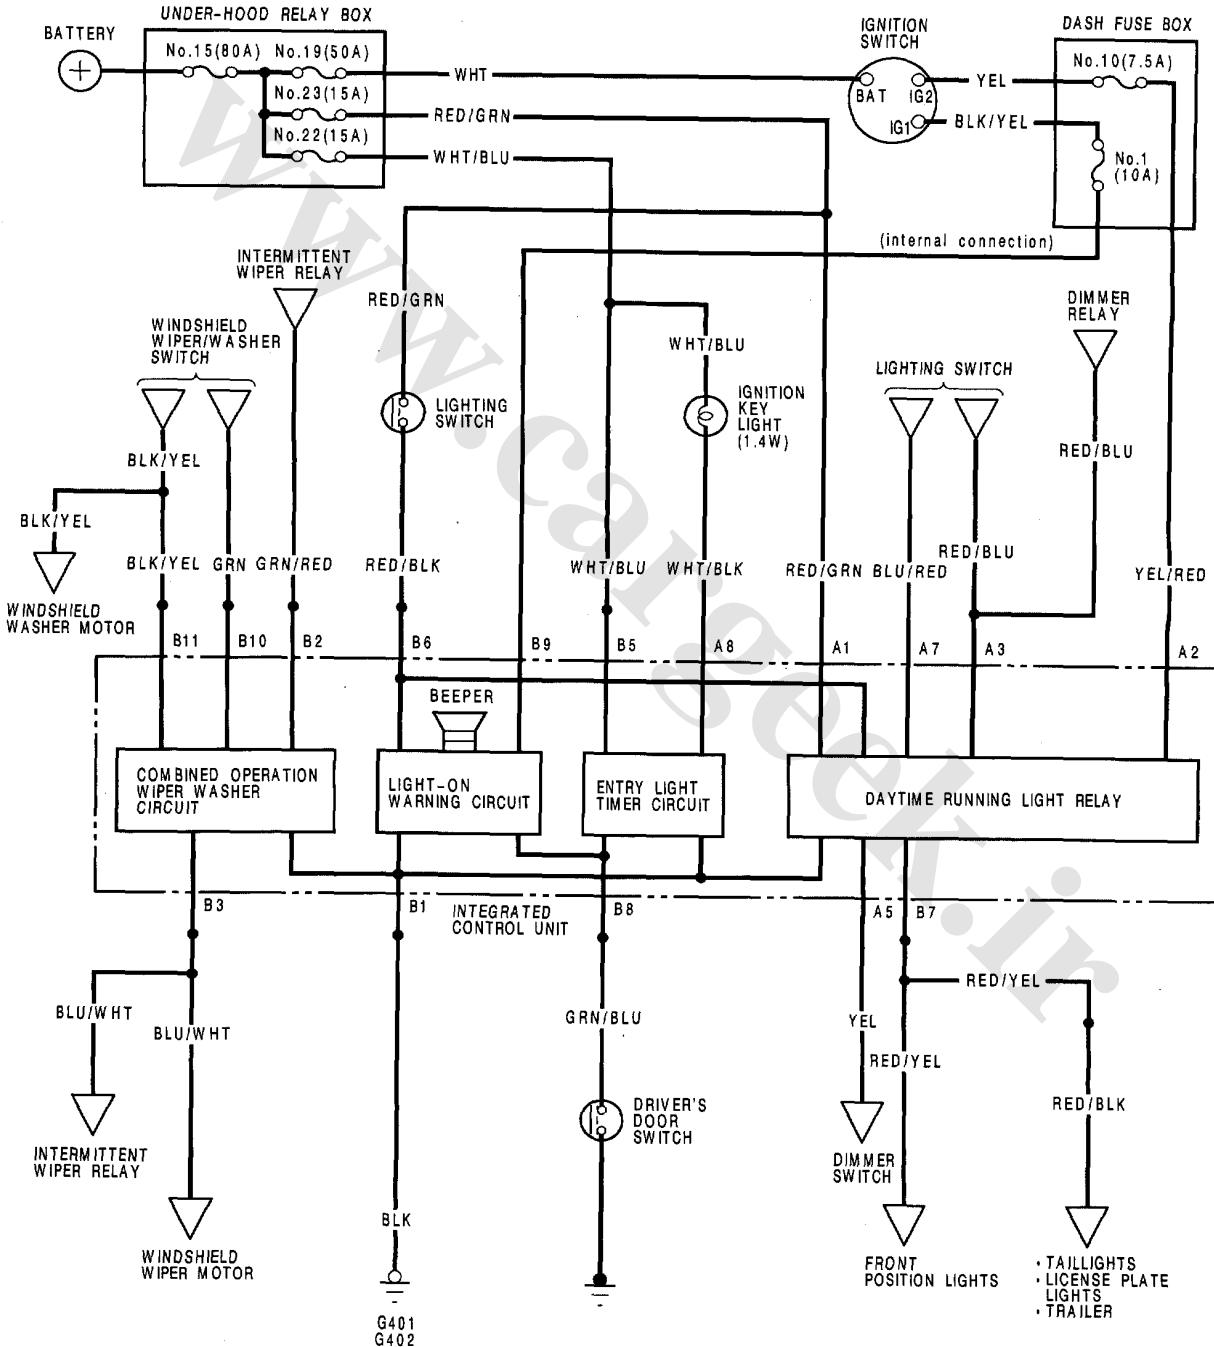




(With Dim-Dip Light)

Description:

A multi-function control unit located on the right side kick panel, integrates the functions of the combined operation with wiper/washer circuit, light-on warning circuit, entry light timer circuit and dim-dip relay circuit onto one circuit board, sharing common circuit functions.

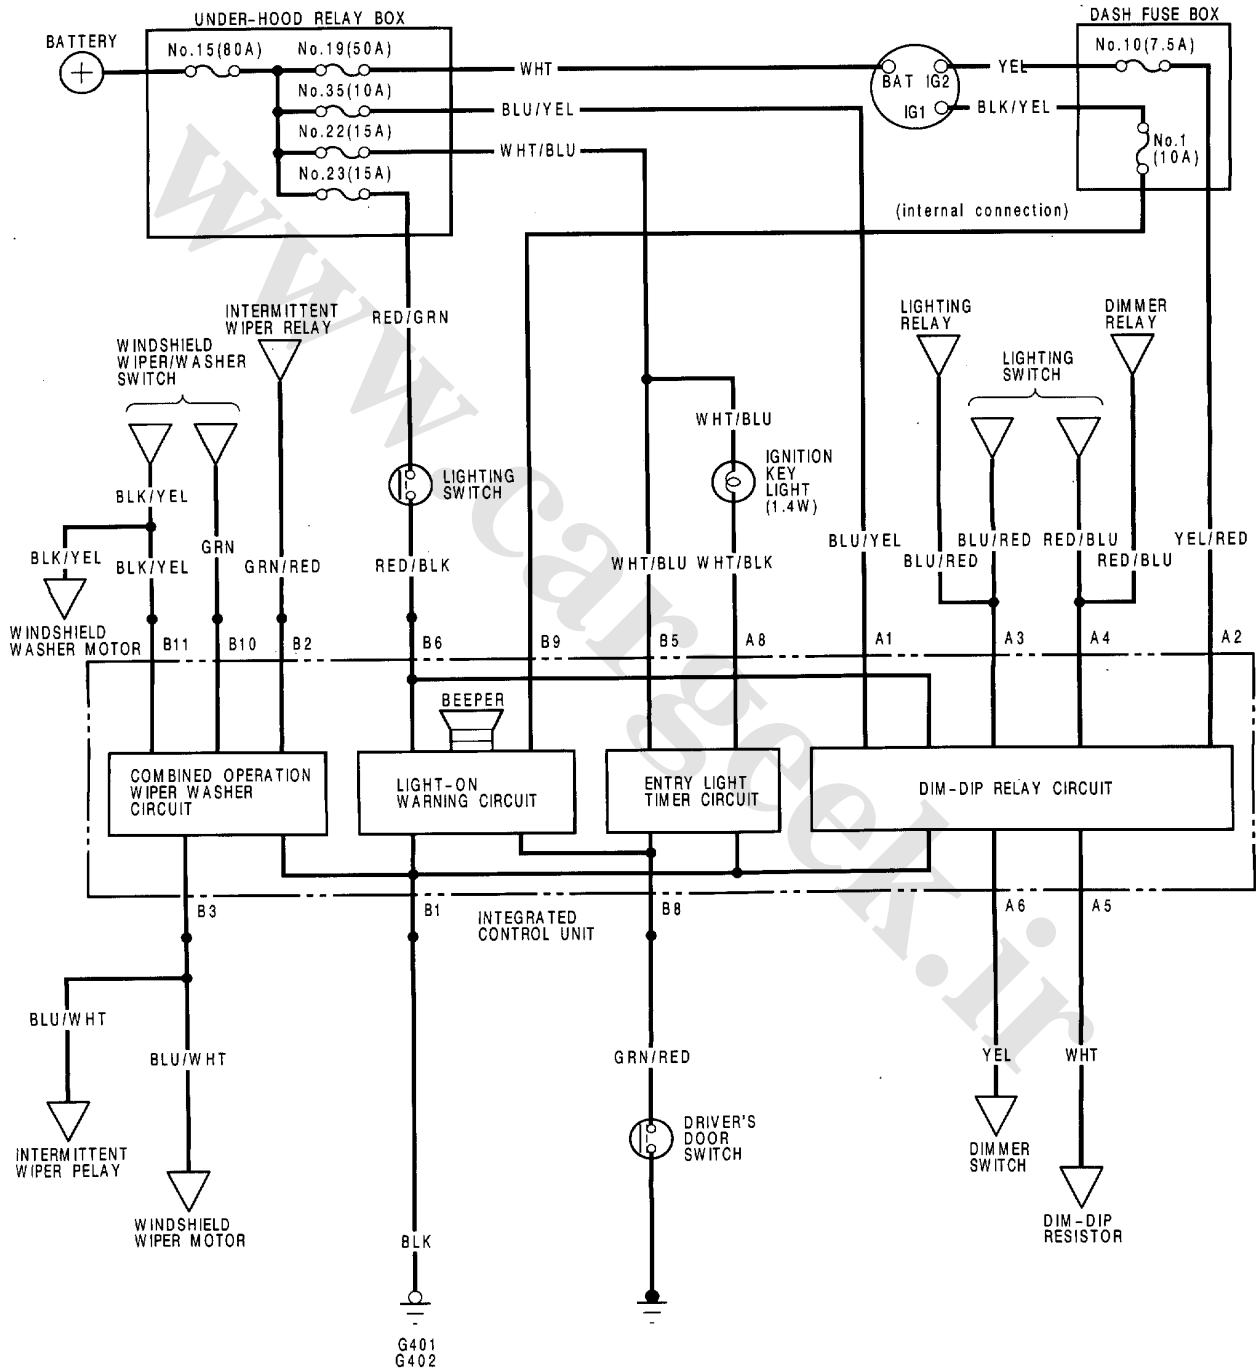


Integrated Control Unit


Input Test (With Daytime and Dim-Dip Light)

Remove the driver's side kick panel cover then disconnect the 8-P connector from the integrated control unit. Remove the integrated control unit from the dash fuse box.

Make the following input tests at the harness pins. If all tests prove OK, yet the system still fails to work, replace the control unit.

NOTE: Do not disconnect all of the connectors on the dash fuse box except the integrated control unit.

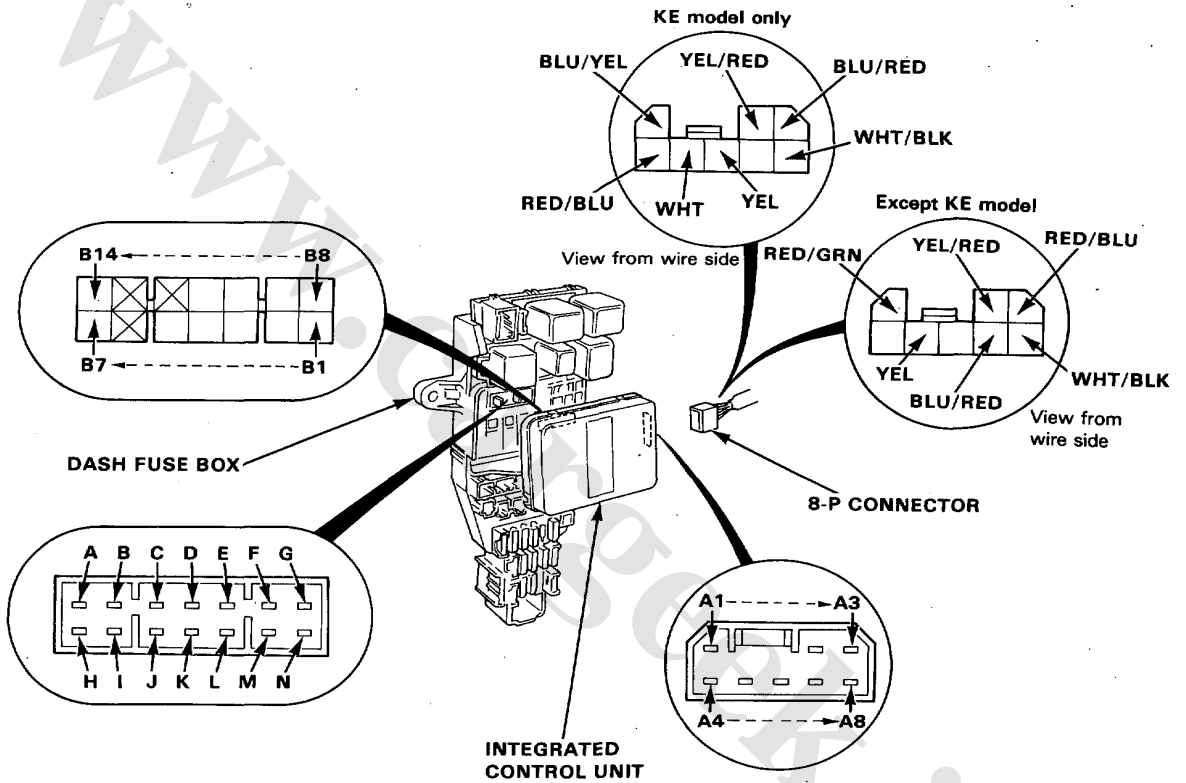

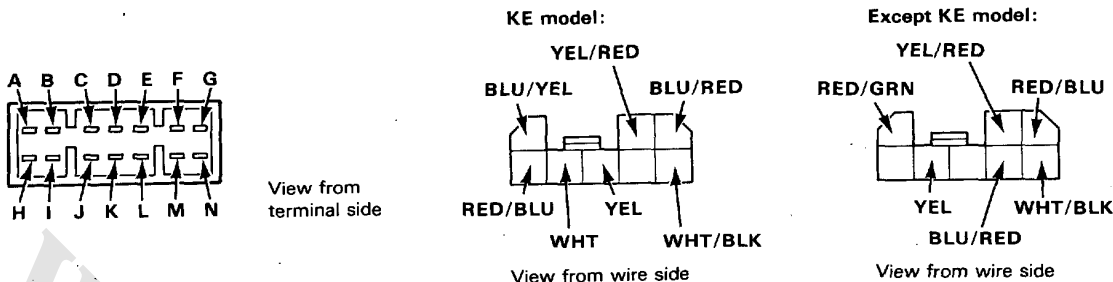

Wiper System:

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	• Poor ground (G401, G402)
2	C	Ignition switch ON and wiper switch INT.	Check for voltage to ground: should be battery voltage.	• Blown No.6 (30 A) fuse. • Faulty wiper switch. • An open in the wire.
3	D	Ignition switch ON and washer switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.6 (30 A) fuse. • Faulty washer switch. • An open in the wire.
4	I	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.6 (30 A) fuse. • An open in the wire.
5	J	Wiper switch LO.	Check for continuity to ground: should be continuity.	• Faulty wiper switch. • An open in the wire. • Poor ground (G401, G402).


Light-on Warning System:

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	• Poor ground (G401, G402)
2	M	Lighting switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.23 (15 A) fuse. • Faulty lighting switch. • An open in the wire.
3	B	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	• Blown No.1 (10 A) fuse. • Faulty dash fuse box.
4	A	Driver's door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove No.1 (10 A) fuse.	• Faulty driver's door switch. • An open in the wire.

(cont'd)


Integrated Control Unit

Input Test (With Daytime and Dim-Dip Light, cont'd)

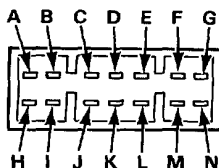


View from terminal side

KE model:

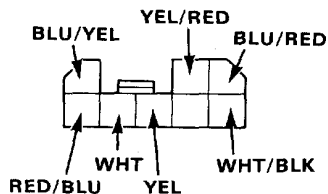

View from wire side

Except KE model:

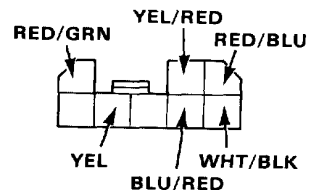


View from wire side

Entry Light Timer System:


No.	Terminal or Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	L	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.22 (15 A) fuse. • An open in the wire.
3	WHT/BLK	Under all conditions	Check ignition key light operation: connect the WHT/BLK terminal to the H terminal.	<ul style="list-style-type: none"> • Blown bulb. • An open in the wire.
4	A	Driver's door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove No.1 (10 A) fuse.	<ul style="list-style-type: none"> • Faulty driver's door switch. • An open in the wire.

Daytime Running Light System (Except KE model):


No.	Terminal or Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, 402) • An open in the wire.
2	RED/GRN	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.23 (15 A) fuse. • An open in the wire.
3	BLU/RED and M	Lighting switch	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Faulty lighting switch. • Faulty lighting relay. • Faulty dimmer relay. • An open in the wire.
4	RED/BLU	Passing switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Faulty lighting switch. • Faulty lighting relay. • An open in the wire.
5	YEL/RED	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.10 (7.5 A) fuse. • Fault dash fuse box. • An open in the wire.
6	N	Connect the RED/GRN terminal to the N terminal.	Front position lights, taillights and license plate lights should come on.	<ul style="list-style-type: none"> • Blown bulbs. • An open in the wire.
7	YEL	Dimmer switch HI.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Faulty lighting switch. • Poor ground (G251).

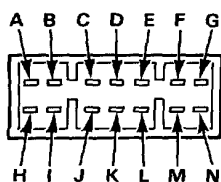

View from terminal side

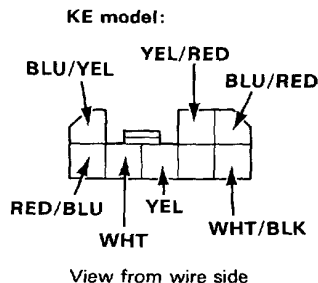

View from wire side

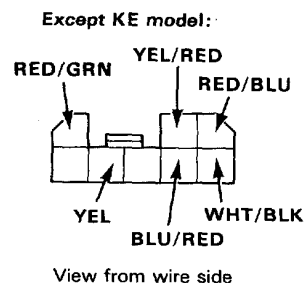

View from wire side

Dim-Dip Headlight System (KE model):

No.	Terminal or Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	H	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> · Poor ground (G401, G402) · An open in the wire.
2	BLU/YEL	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Blown No.35 (10 A) fuse. · An open in the wire.
3	YEL/RED	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Blown No.10 (7.5 A) fuse. · Faulty dash fuse box. · An open in the wire.
4	BLU/RED and M	Lighting switch	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Faulty lighting switch. · Faulty lighting relay. · Faulty dimmer relay. · An open in the wire.
5	WHT	Lighting switch	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Faulty Dim-Dip resistor. · Blown No.37 (20 A) fuse. · Blown No.38 (20 A) fuse. · Faulty lighting relay. · An open in the wire.
6	RED/BLU	Passing switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> · Faulty lighting switch. · Faulty lighting relay. · An open in the wire.
7	YEL	Dimmer switch HI.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> · Faulty lighting switch. · Poor ground (G251)

Light-on Warning System

Description

NOTE: Refer to page 16-143, 16-148 or 16-149 for wiring description of the light-on warning circuit, and page 16-145 or 16-151 for the input test of the warning circuit.

When the light on, voltage is applied to the warning circuit on the integrated control unit.

When you open the driver's door, the warning circuit senses ground through closed door switch.

With voltage at the "B6" terminal, ground at the "B8" terminal, the beeper is activated to remind the driver to turn off the lights.

Entry Light Timer System


Description

NOTE: Refer to page 16-143, 16-148 or 16-149 for wiring description of the entry light timer circuit, and page 16-146 or 16-152 for the input test of the timer circuit.

If the driver's door has been opened, the ignition key light goes on and stays on for about 8 seconds after the driver's door is closed.

Ignition Key Light Replacement

1. Remove the steering wheel and the steering column covers.
2. Remove the bulb/socket from the key light case by turning the socket 45°.

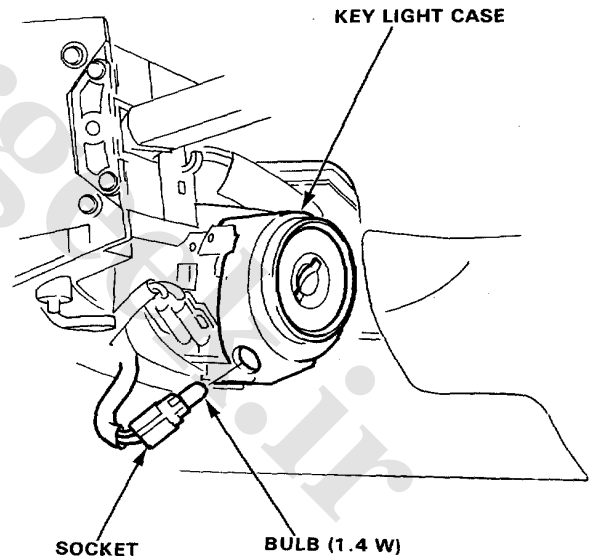


- Door switch test: See page 16-175.

Trunk Light and Latch Switch



Trunk Light Replacement/Test

1. Pry off the trunk light lens from the housing.
2. Pry off the light assembly.
3. Disconnect the 3-P connector from the housing.

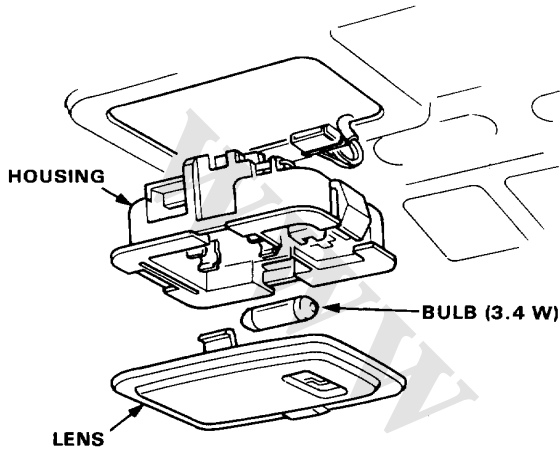


4. Make sure that the bulb is in good condition. Check for continuity between the A(+) and B(-) terminals.

NOTE: Do not connect the tester probes in the wrong polarity because there is a diode inside the trunk light.

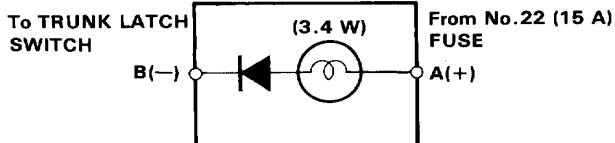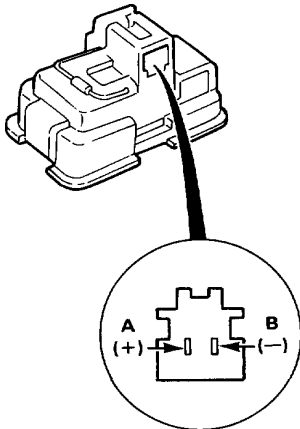


Latch Switch Test/Replacement

1. Open the trunk lid and disconnect the 2-P connector from the trunk latch.
2. There should be continuity between the A and B terminals.

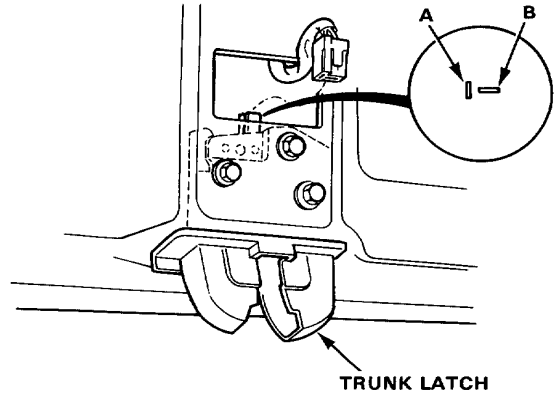

3. If necessary, remove the 3 bolts to pull out the latch from the trunk lid, then disconnect the lock rod from the latch.
4. Disconnect the trunk opener cable from the latch.

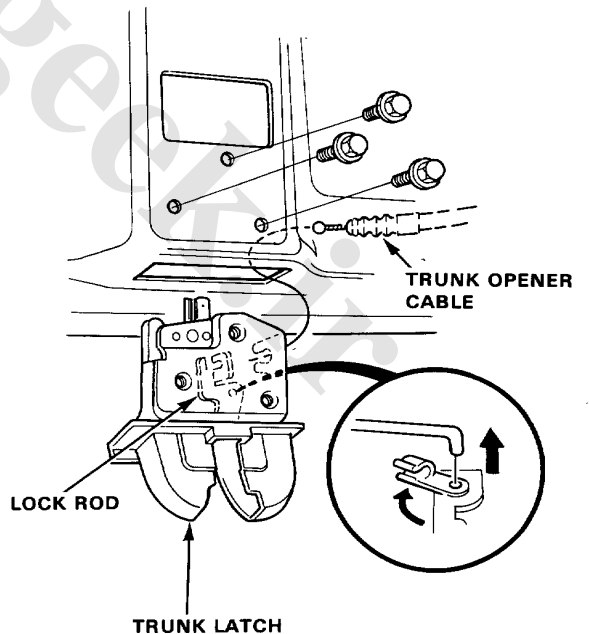

Lighting System

Component Location Index

● CIRCUIT DIAGRAM

- KF, KG, KB and KX models, page 16-157
- KY, KQ, KP and KT models, page 16-158
- With DAYTIME LIGHT, page 16-159
- With DIM-DIP LIGHT, page 16-160
- Headlight adjuster, page 16-161

INTEGRATED CONTROL UNIT

- DAYTIME RUNNING LIGHT RELAY (KS and KW models)
Input Test, page 16-152
- DIM-DIP RELAY (KE model)
Input Test, page 16-153

HIGH BEAM INDICATOR LIGHT
(in the gauge assembly)
Gauge Assembly, page 16-112

LIGHTING SWITCH
Test, page 16-162
Replacement, page 16-164

DIM-DIP RESISTOR
Test, page 16-167

HEADLIGHT ADJUSTER SWITCH
Test, page 16-166
Removal, page 16-166

HEADLIGHT ADJUSTER UNIT (KG model)
Input Test, page 16-165

REAR FOG LIGHT SWITCH
Test, page 16-165
Removal, page 16-164

HEADLIGHTS
Adjustment, page 16-169
Replacement, page 16-170


DIMMER RELAY
Test, page 16-168

LIGHTING RELAY
Test, page 16-168

UNDER-HOOD RELAY BOX
(Located in the engine room, right side)


Power Door Locks

Component Location Index

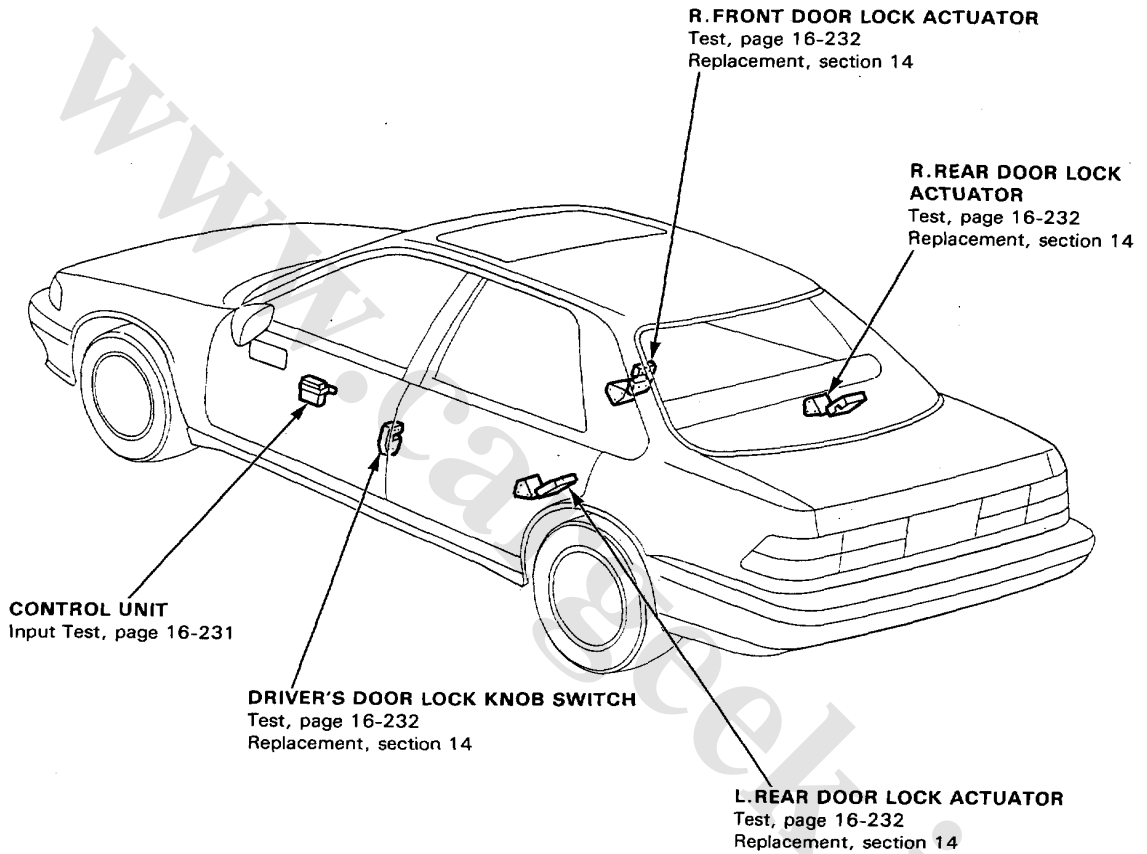



Circuit Diagram

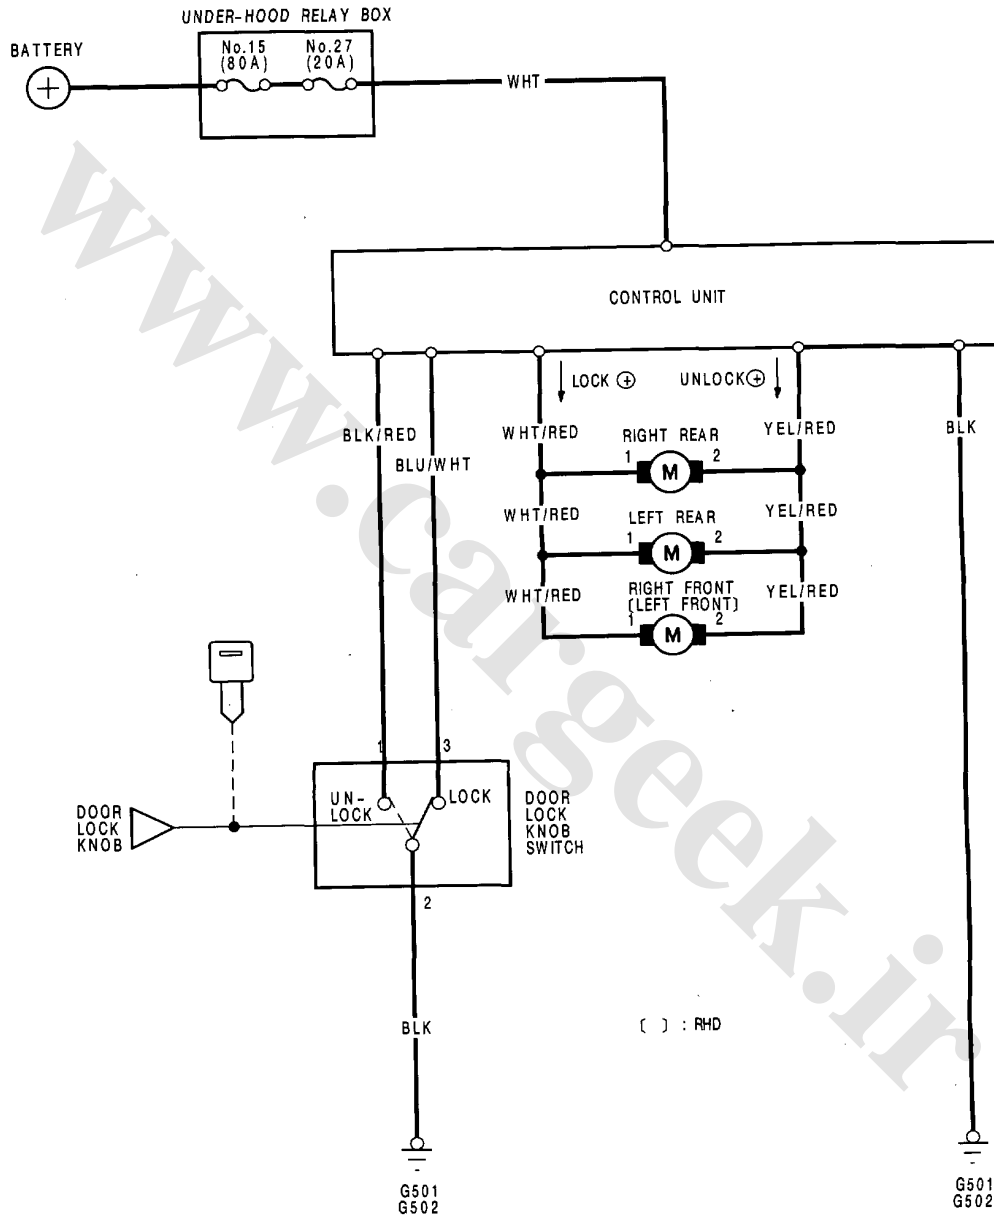

Power Door Locks

Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom		Item to be inspected						
		Blown No.27 (20 A) fuse (in the under-hood relay box)	Door lock knob switch	Control unit input	Passenger door actuators	Disconnected or obstructed door lock rod/linkage	Poor ground	Open circuit in wires or loose or disconnected terminals
Power door lock system does not operate at all.		1		2			G501 G502	WHT
Doors do not lock or unlock with driver's door lock knob switch.	All passenger doors.	1	2	3		4	G501 G502	BLU/WHT, YEL/RED, WHT/RED or BLK/RED
	One or more passenger door.				1			YEL/RED or WHT/RED


CAUTION: To prevent damage to the motor, apply battery voltage momentarily.



Control Unit Input Test

Remove L.door trim panel, then disconnect the 12-P connector from the control unit.
Make the following input test at the harness pins.

NOTE: Recheck the connections between the 12-P connector and the control unit, then replace the control unit if all input tests prove OK.

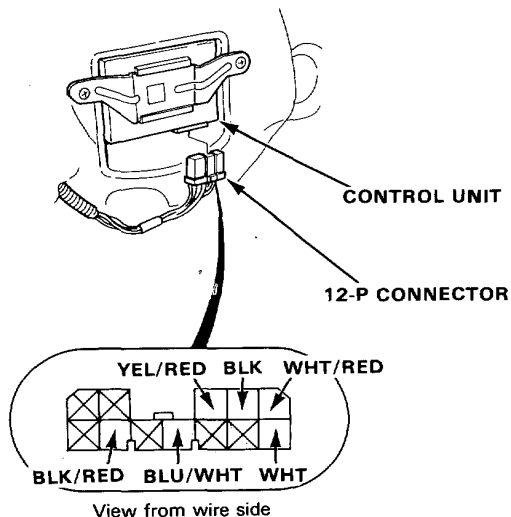

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground G501, G502 • An open in the wire.
2	WHT	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.27 (20 A) fuse. • An open in the wire.
3	BLU/WHT	Driver's door lock knob in LOCK.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Faulty door lock knob switch. • Poor ground (G501, G502). • An open in the wire.
4	BLK/RED	Driver's door lock knob in UNLOCK.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Faulty door lock knob switch. • Poor ground (G501, G502). • An open in the wire.
5	YEL/RED and WHT/RED	Connect the WHT terminal to the WHT/RED terminal, and the YEL/RED terminal to the BLK terminal momentarily.	Check door lock operation: Passenger doors should lock as the battery is connected momentarily.	<ul style="list-style-type: none"> • Faulty actuators.
		Connect the WHT terminal to the YEL/RED terminal, and the WHT/RED terminal to the BLK terminal momentarily.	Check door lock operation: Passenger doors should unlock as the battery is connected momentarily.	<ul style="list-style-type: none"> • An open in the wire.


CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

Power Door Locks

Passenger's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the 2-P connector from the actuator.
3. Test actuator operation by connecting battery voltage to the WHT/RED and YEL/RED terminals. Test the actuator in each direction by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

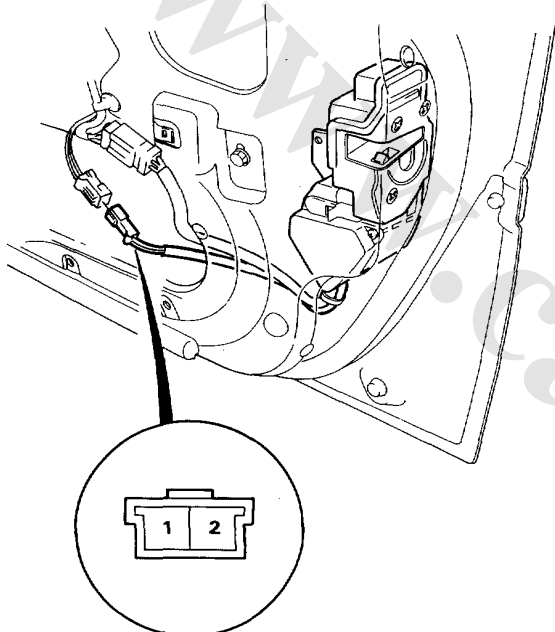


View from wire side

4. If the actuator fails to operate properly, replace it.

Door Lock Knob Switch Test

1. Remove the driver's door trim panel.
2. Disconnect the 3-P connector from the switch.
3. Check for continuity between the terminals in each switch position according to the table.


Terminal	1	2	3
Position			
UNLOCK	○	○	
LOCK		○	○

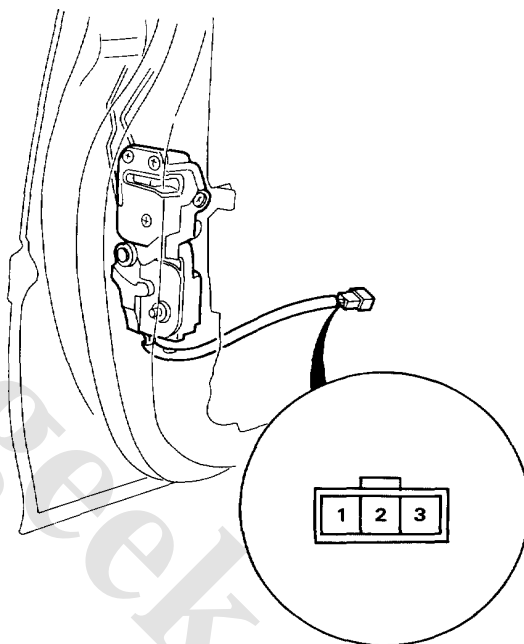

View from wire side


Power Door Mirrors

Component Location Index

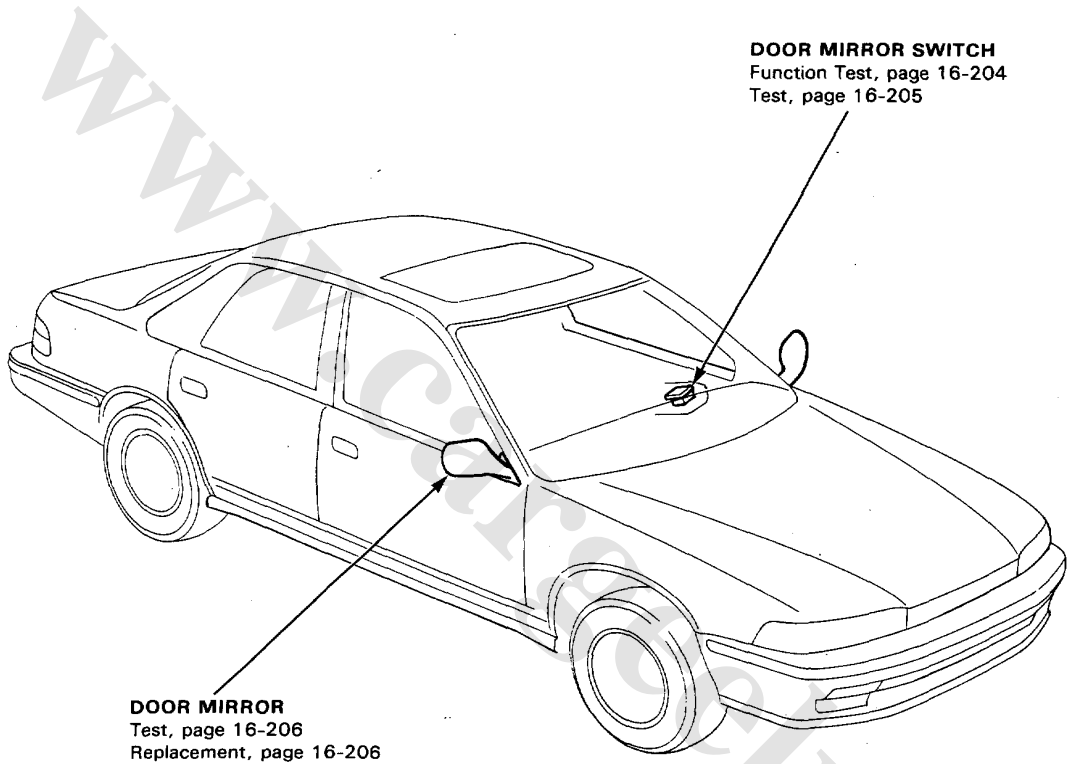



Circuit Diagram

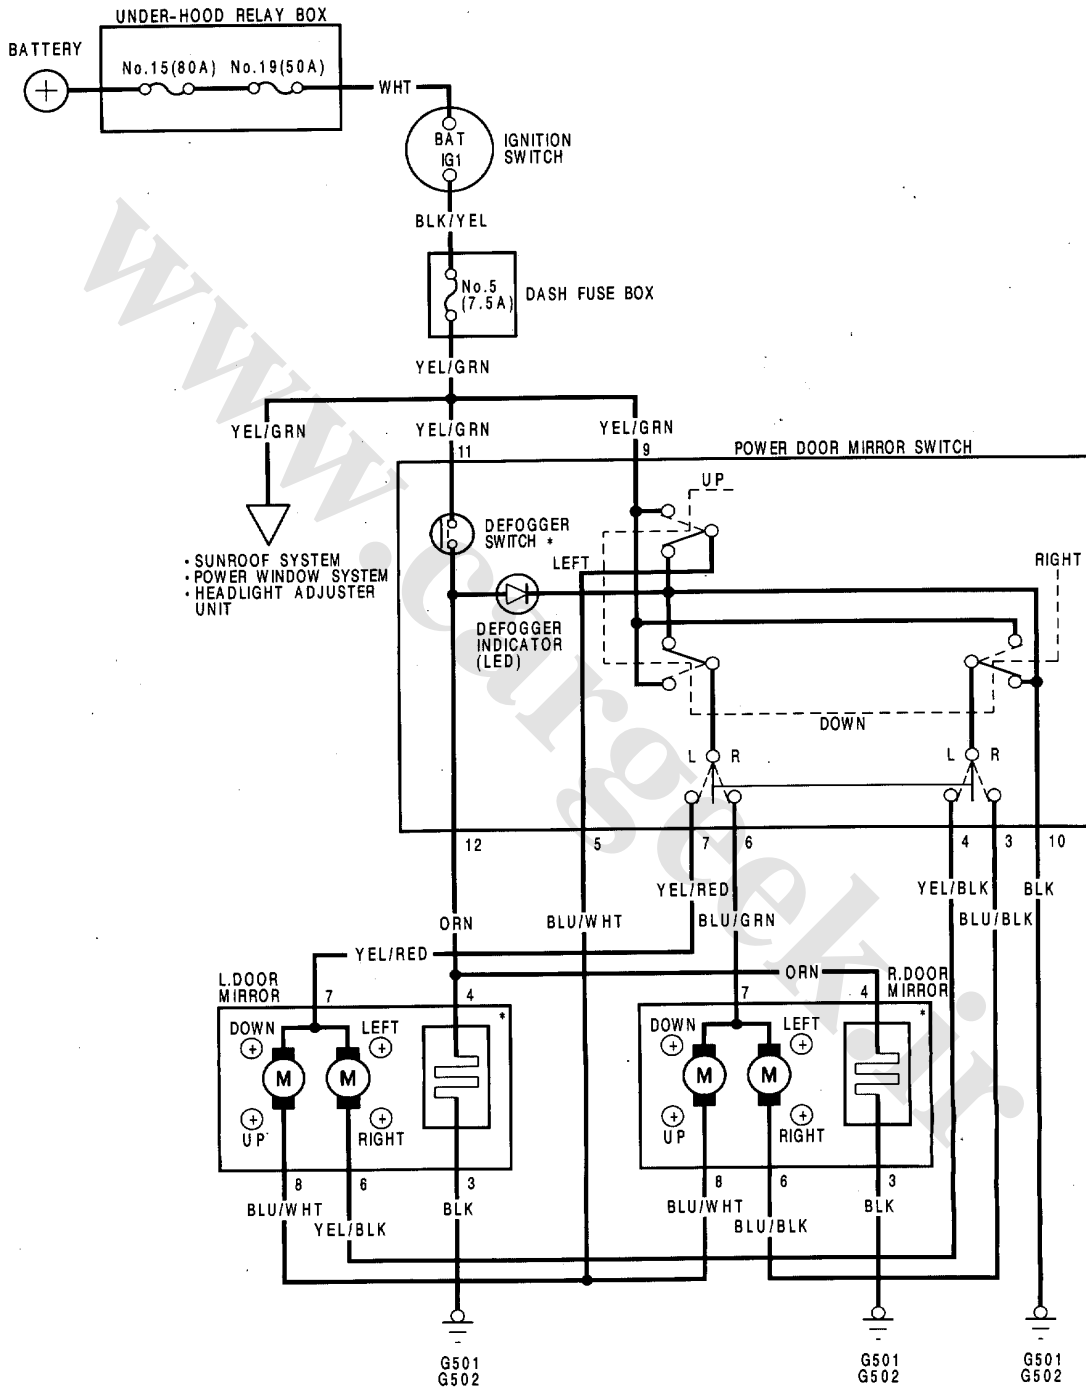


Power Door Mirrors

Function Test

NOTE: Before testing, remove the driver's door trim panel, then disconnect all of the connectors from the door trim panel.

KS, KW, KE and KX models:

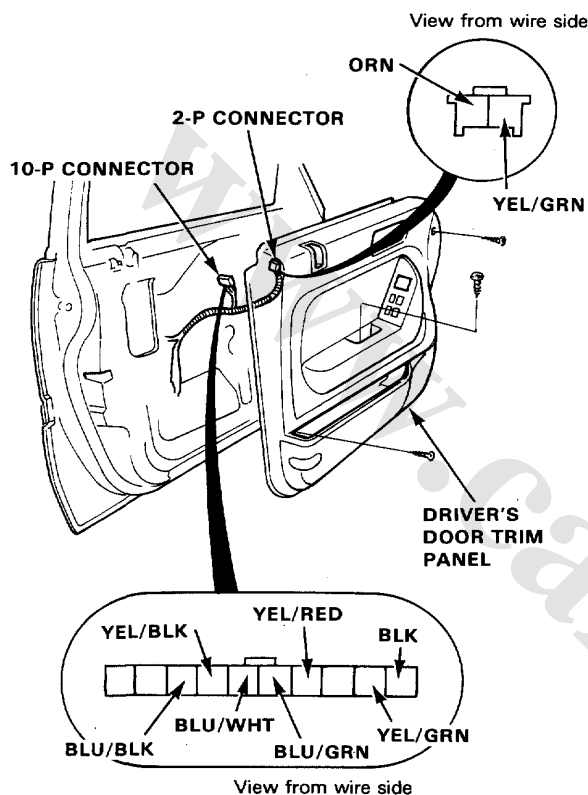

Mirror Test

NOTE: Check the No.5 (7.5 A) fuse in the dash fuse box before testing.

One or both inoperative:

1. Check for voltage between the YEL/GRN terminal and body ground with the ignition switch ON. There should be battery voltage.
 - If there is no voltage, check for an open in the YEL/GRN wire.
 - If there is battery voltage, go to step 2.

2. Check for continuity between the BLK terminal and body ground.

There should be continuity.

- If there is no continuity, check for
 - An open in the BLK wire.
 - Poor ground (G501, G502).

Left inoperative:

Connect the YEL/GRN terminal to the YEL/RED terminal and the BLU/WHT (or YEL/BLK) terminal to the body ground with jumper wires.

The left mirror should tilt down (or swing left) when the ignition switch is turned ON.

- If the mirror does not tilt down (or does not swing left), remove the left door trim panel and check for open in the BLU/WHT (or YEL/BLK) wire between the left door mirror and switch. If the wire is OK, check the left door mirror.
- If the mirror neither tilts down nor swings left, repair the YEL/RED wire.
- If the mirror operates properly, check the mirror switch.

Right inoperative:

Connect the YEL/GRN terminal to the BLU/GRN terminal and the BLU/WHT (or BLU/BLK) terminal to the body ground with jumper wires.

The right mirror should tilt down (or swing left) when the ignition switch is turned ON.

- If the mirror does not tilt down (or does not swing left), remove the right door trim panel and check for open in the BLU/WHT (or BLU/BLK) wire between the right door mirror and the switch. If the wire is OK, check the right door mirror.
- If the mirror neither tilts down nor swings left, repair the BLU/GRN wire.
- If the mirror operates properly, check the mirror switch.

Defogger Test

(KS, KW, KE and KX models)

1. Check for voltage between the YEL/GRN terminal of the 2-P connector and body ground with the ignition switch ON.

There should be battery voltage.

- If there is no voltage, check for open in the YEL/GRN wire between the dash fuse box and the defogger switch.
- If there is battery voltage, go to step 2.


2. Connect the YEL/GRN terminal of the 2-P connector to the ORN terminal with a jumper wire. Both the right and left mirrors should gradually warm up when the ignition switch is turned ON.

- If neither warm up, repair the ORN wire.
- If only one fails to warm up, check its mirror defogger element (see page 16-205).
- If both warm up, check the switch.




Switch Removal

1. Remove the driver's door trim panel, then disconnect all of the connectors from the door trim panel.
2. Remove the arm rest from the door trim panel by removing the retainer and the screws.

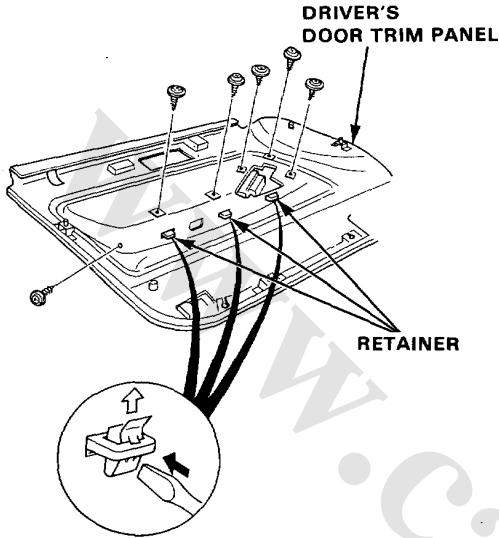

3. Remove the power window master switch from the arm rest by removing three screws.
4. Push out the switch from the reverse side of the power window master switch.

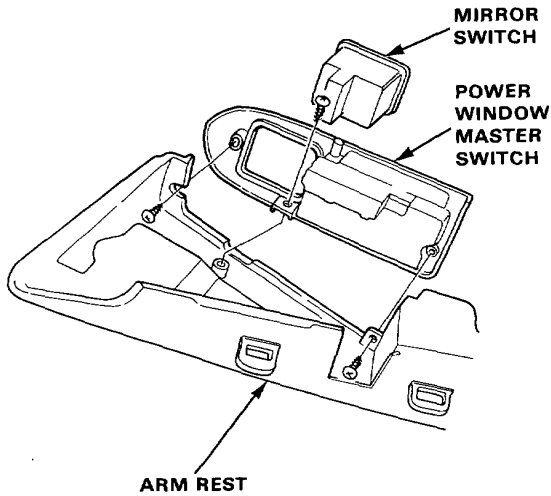

Switch Test

1. Remove the power door mirror switch from the power window master switch.
2. Check for continuity between the terminals in each switch position according to the table.


Mirror Switch

		Terminal							
Position		3	4	5	6	7	9	10	
R	OFF								
	UP								
	DOWN								
	LEFT								
L	RIGHT								
	OFF								
	UP								
	DOWN								
	LEFT								
	RIGHT								

Defogger Switch (KS, KW, KE and KX models)

		Terminal		
Position		11	12	10
OFF				
ON				


(Internal connection)

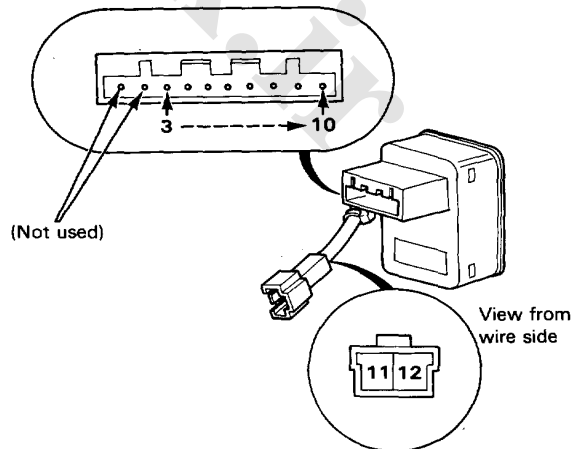

Power Door Mirrors


Door Mirror Test

1. Carefully pry out the cover panel lid, then disconnect the 8-P connector from the mirror.
2. Test actuator operation:
TILT UP: Connect battery positive to the No.8 terminal and negative to the No.7 terminal.
TILT DOWN: Connect battery positive to the No.7 terminal and negative to the No.8 terminal.
SWING LEFT: Connect battery positive to the No.7 terminal and negative to the No.6 terminal.
SWING RIGHT: Connect battery positive to the No.6 terminal and negative to the No.7 terminal.
3. If the mirror fails to operate properly, replace it.

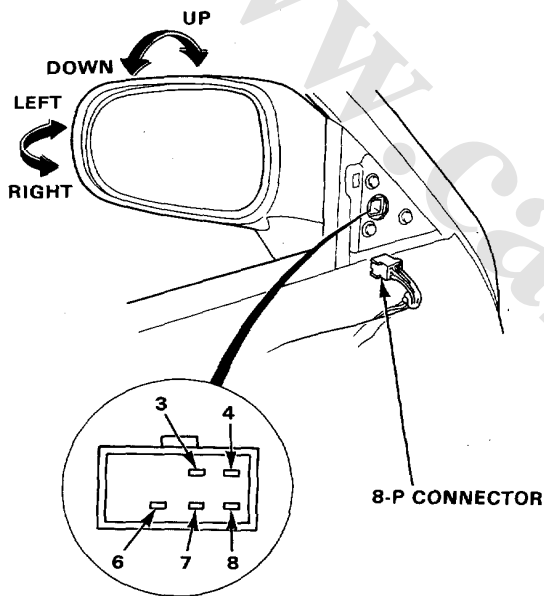

Door Mirror Replacement

1. Carefully pry out the cover panel lid.
2. Disconnect the 8-P connector from the mirror.
3. While holding the mirror with one hand, remove its mount screws with the other.

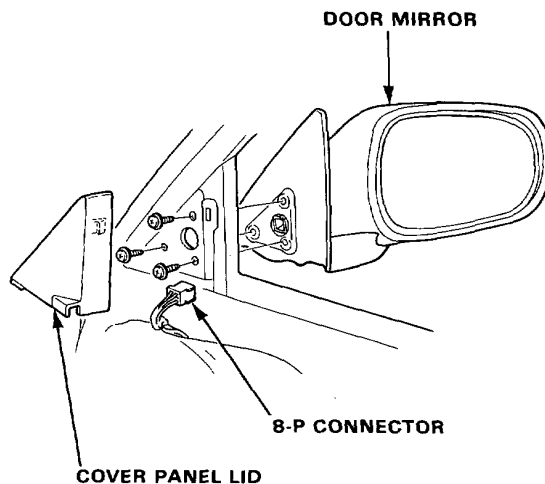




Fuses

Relay box


NOTE: Relay box is located right side, engine compartment.

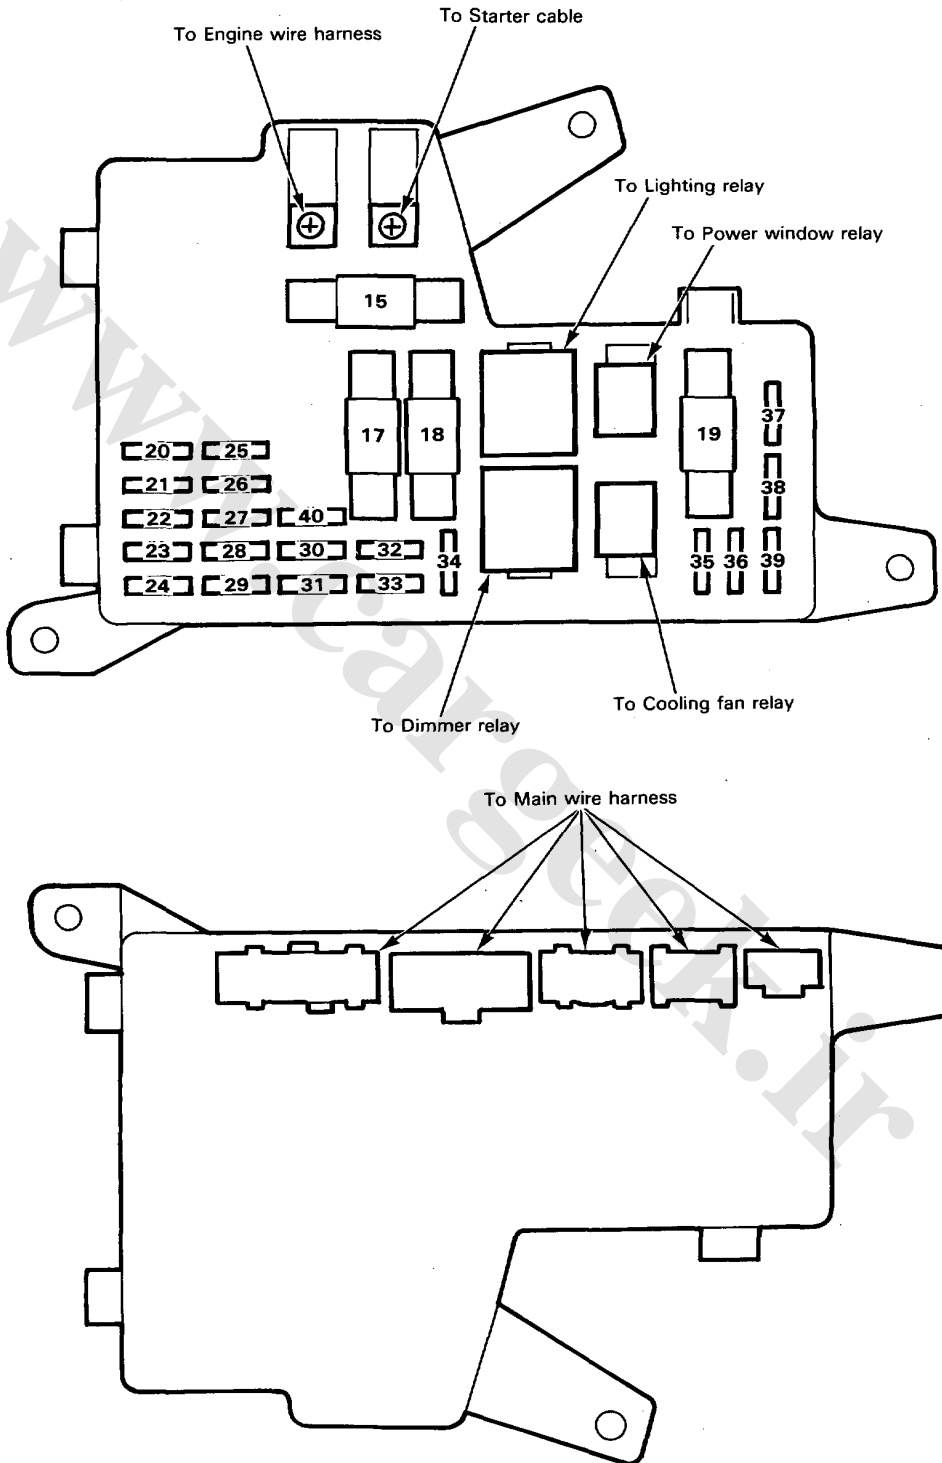

Fuses

Dash Fuse Box

NOTE: Dash fuse box is located behind left kick panel (LHD) or right kick panel (RHD).

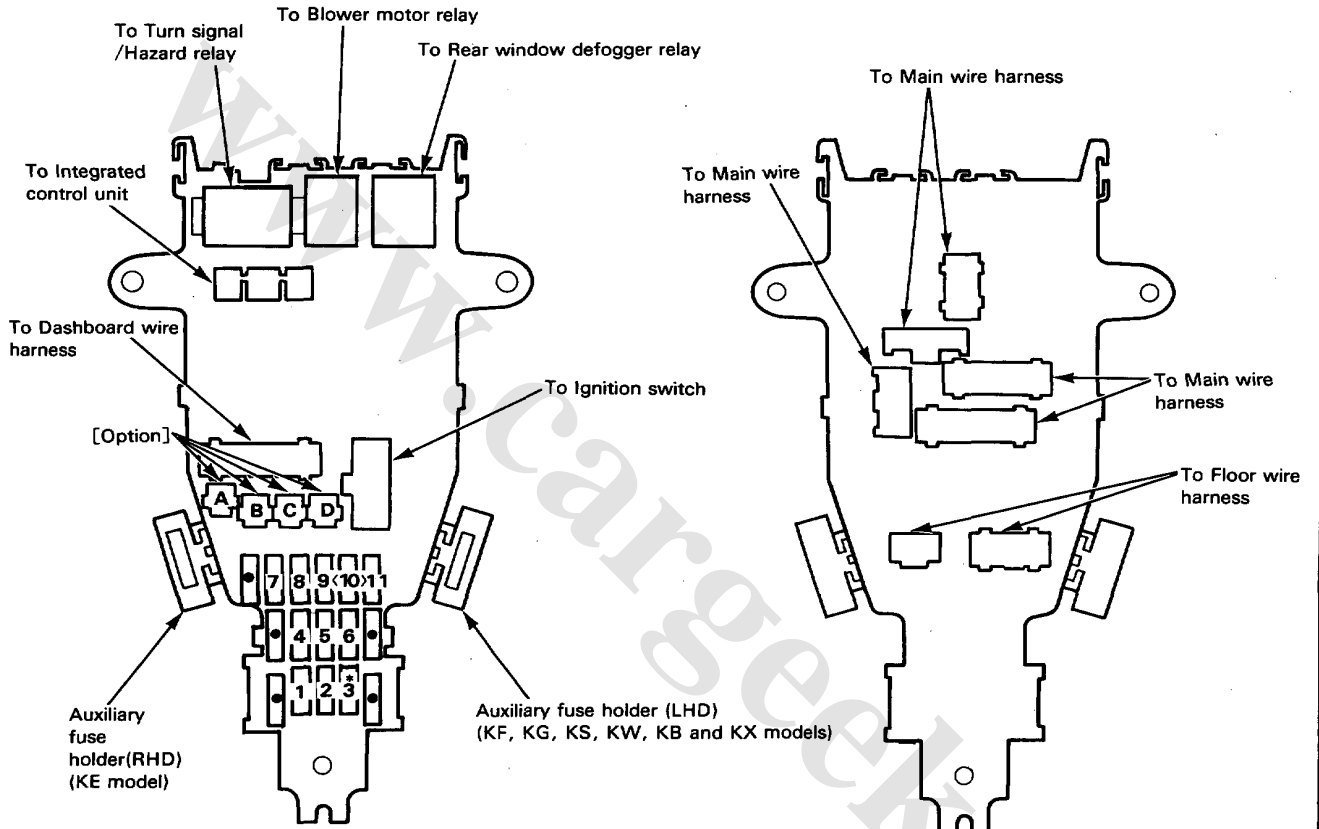


- :Spare fuse
- * :Not used
- <> :KS, KW and KE models only



ALB Fuse Box


NOTE: ALB fuse box is located right side, engine compartment.

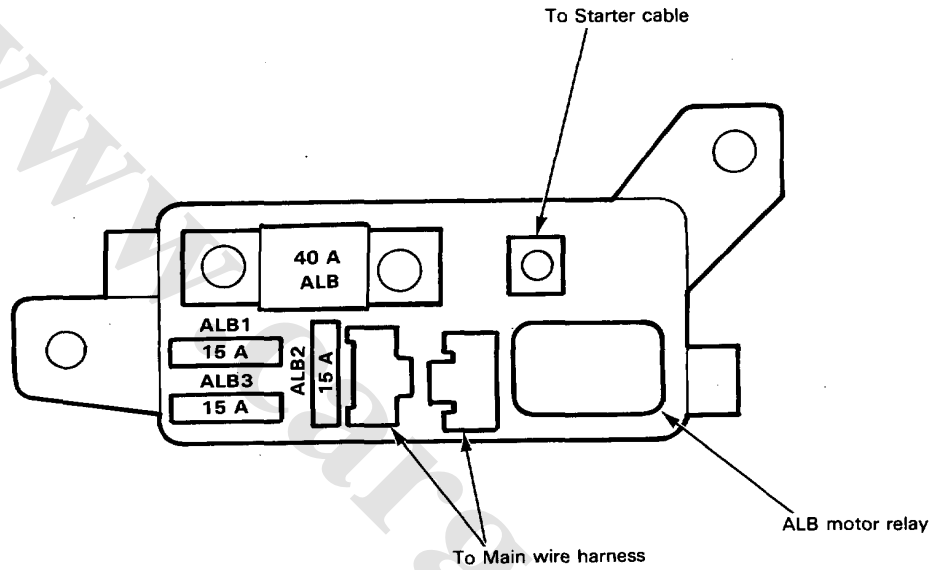



Seat Heaters

Component Location Index

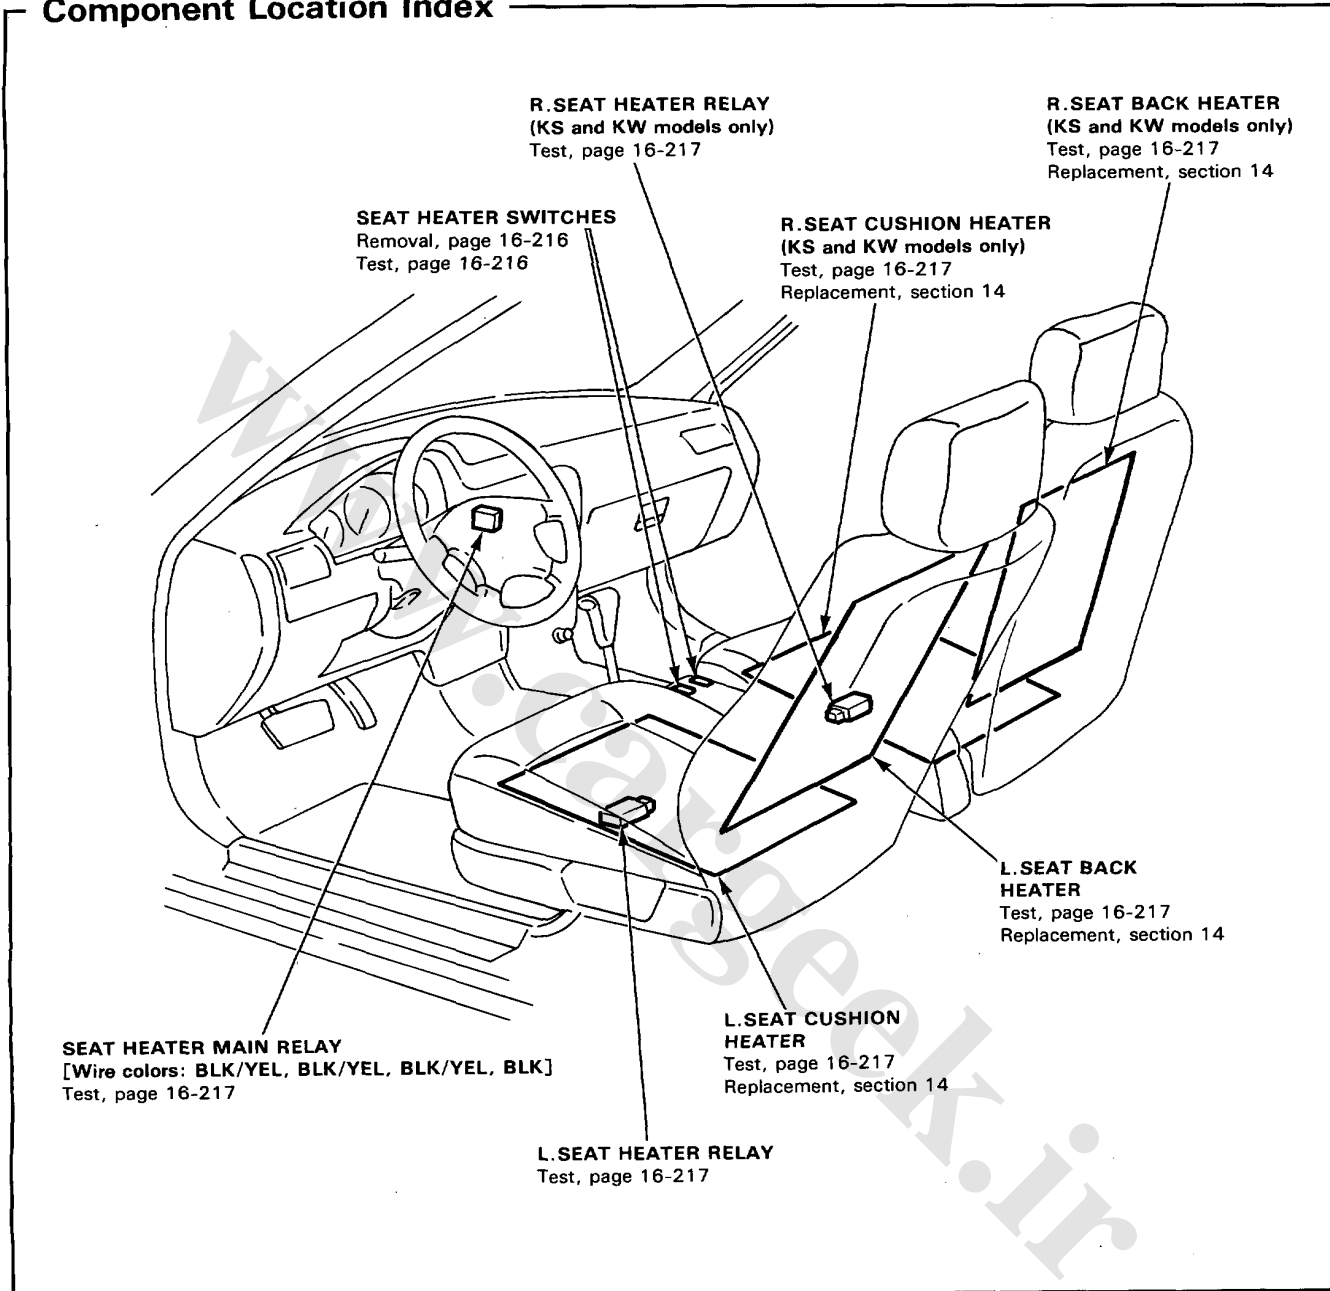


Description

Two heaters are provided in each front seat; one in the seat cushion and one in the seat back. In normal use, temperature is automatically controlled by the thermostat [OFF above 40°C (104°F)] built in each seat cushion heater. In emergency case, the breaker 1 [OFF above 50°C (122°F)] and the breaker 2 [OFF above 70°C (158°F)] cut off the circuit to prevent abnormal temperature rise.

Seat Heaters

Circuit Diagram

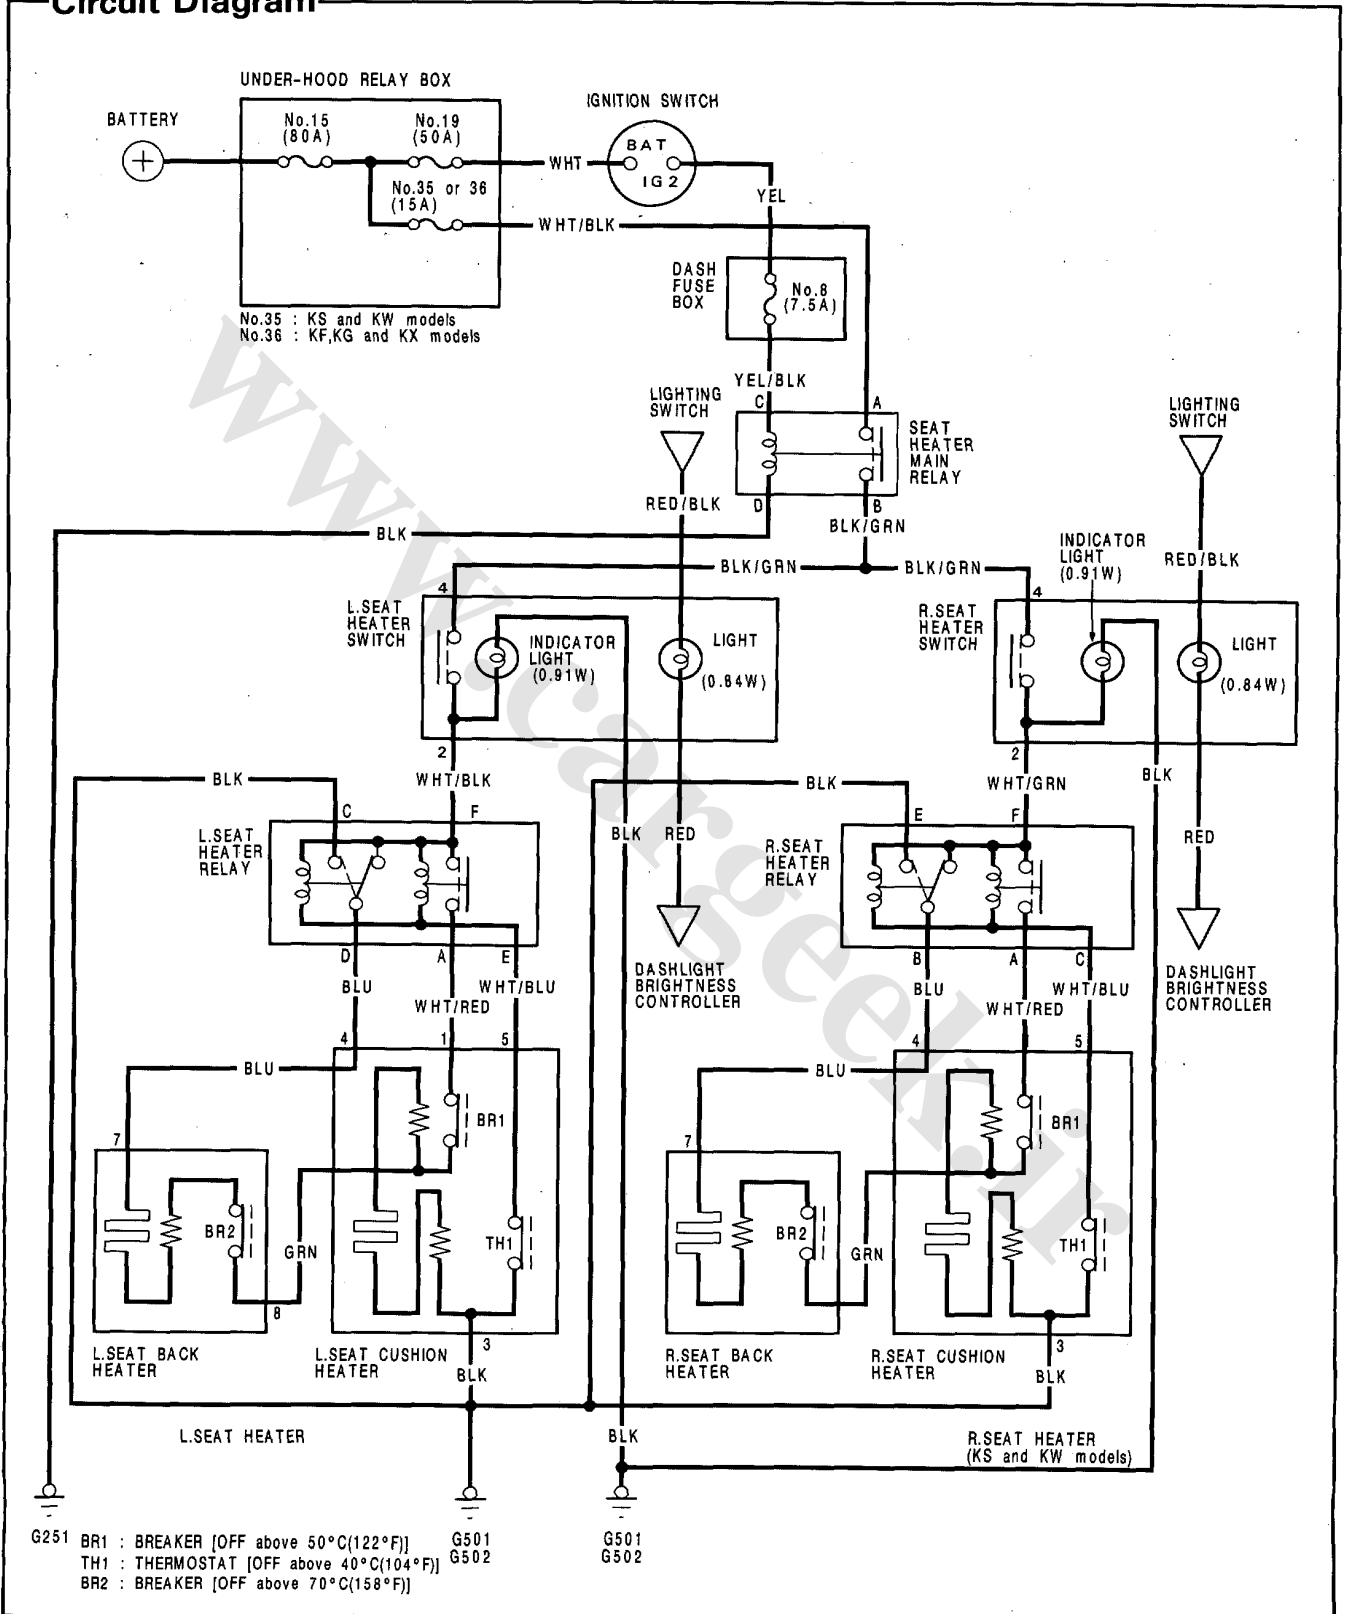



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.


Symptom	Item to be inspected		Blown No.35 (15 A) or No.36 (15 A) fuses (in the under-hood relay box)	Blown No.8 (7.5 A) fuse (in the dash fuse box)	Blown indicator light bulb	Seat heater switch	Seat heater	Seat heater relay input	Poor ground	Open circuit in wires or loose or disconnected terminals
Seat heaters operate, but indicator light does not go on.					1				G501 G502	
Seat heaters do not operate and indicator light does not go on.			1			2			G251 G501 G502	YEL/BLK, WHT/BLK
Seat heaters do not operate, but indicator light goes on.	Left and Right seat							1	G501 G502	WHT/BLK, WHT/GRN, BLU, WHT/RED, WHT/BLU
Seat cushion heater or seat back heater does not operate, but indicator light goes on.							1			

No.35 (15 A): KS and KW models
 No.36 (15 A): KF, KG and KX models

Seat Heaters

Switch Removal



1. Pry out the switch from the floor console.
2. Disconnect the 6-P connector to remove the switch.

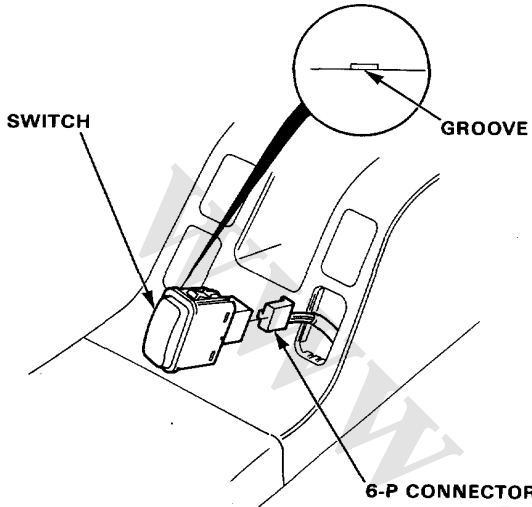

Switch Test

1. Pry out the seat heater switch from the floor console.
2. Check for continuity between the terminals according to the table.

Terminal Position	C		D	E	B		F
ON	○	⊕	○	○	○	⊕	○
OFF	○	⊕	○		○	⊕	○

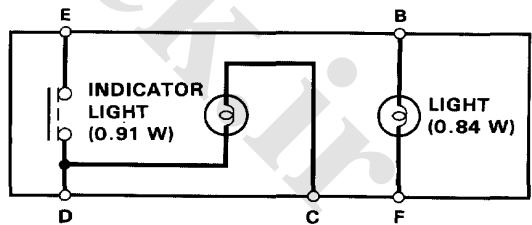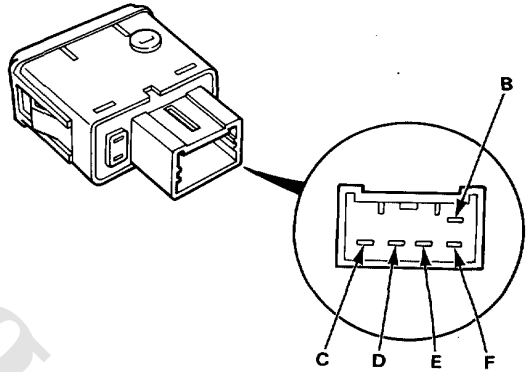




Heater Test

1. Disconnect the 6-P connector and 2-P connector as shown below.

NOTE: Left front seat is shown. Right front seat is similar.


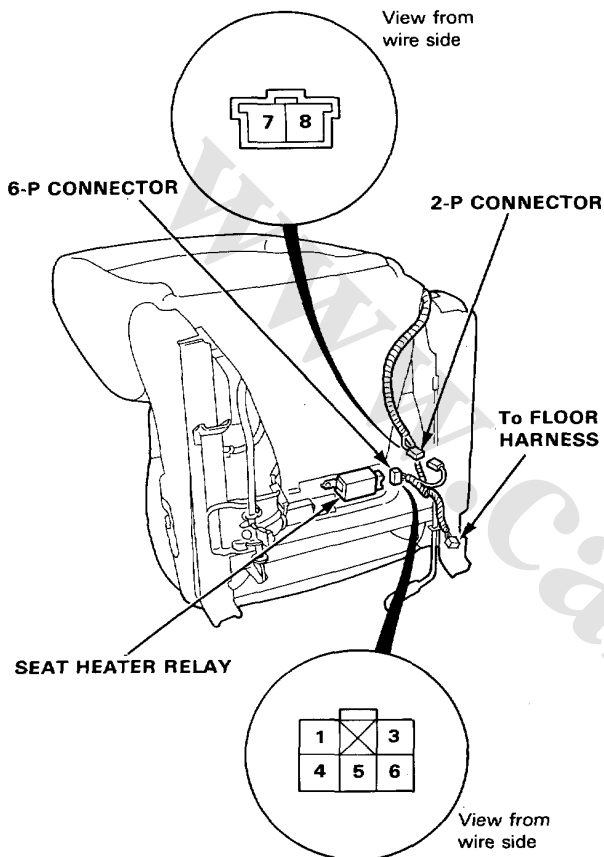


2. Check for continuity between the No.1 and No.5 terminals; between the No.7 and No.8 terminals (R x 10³ scale)
There should be continuity.

Relay Test



Heater relay:

1. Remove the driver's seat, then remove the relay from the bottom of the seat.
2. There should be continuity between the F and A; between C and D terminals when the battery is connected across the F and E terminals.
There should be continuity between the F and D terminals when the battery is disconnected.

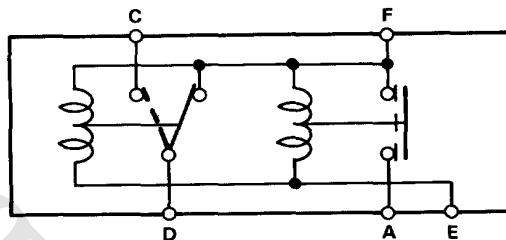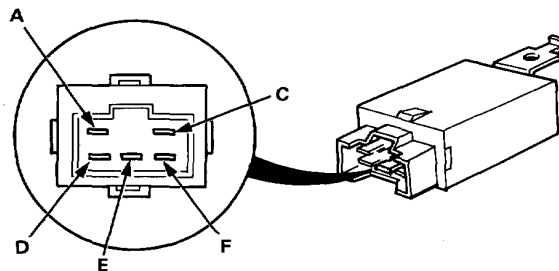

Main relay:


There should be continuity between the A and B terminals when the battery is connected across the C and D terminals.
There should be no continuity when the battery is disconnected.

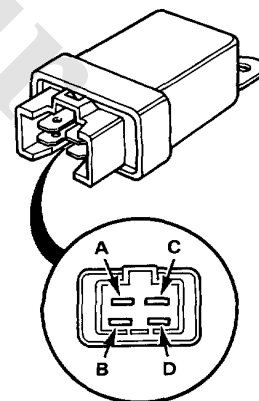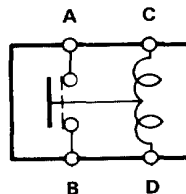




Power Seat

Component Location Index

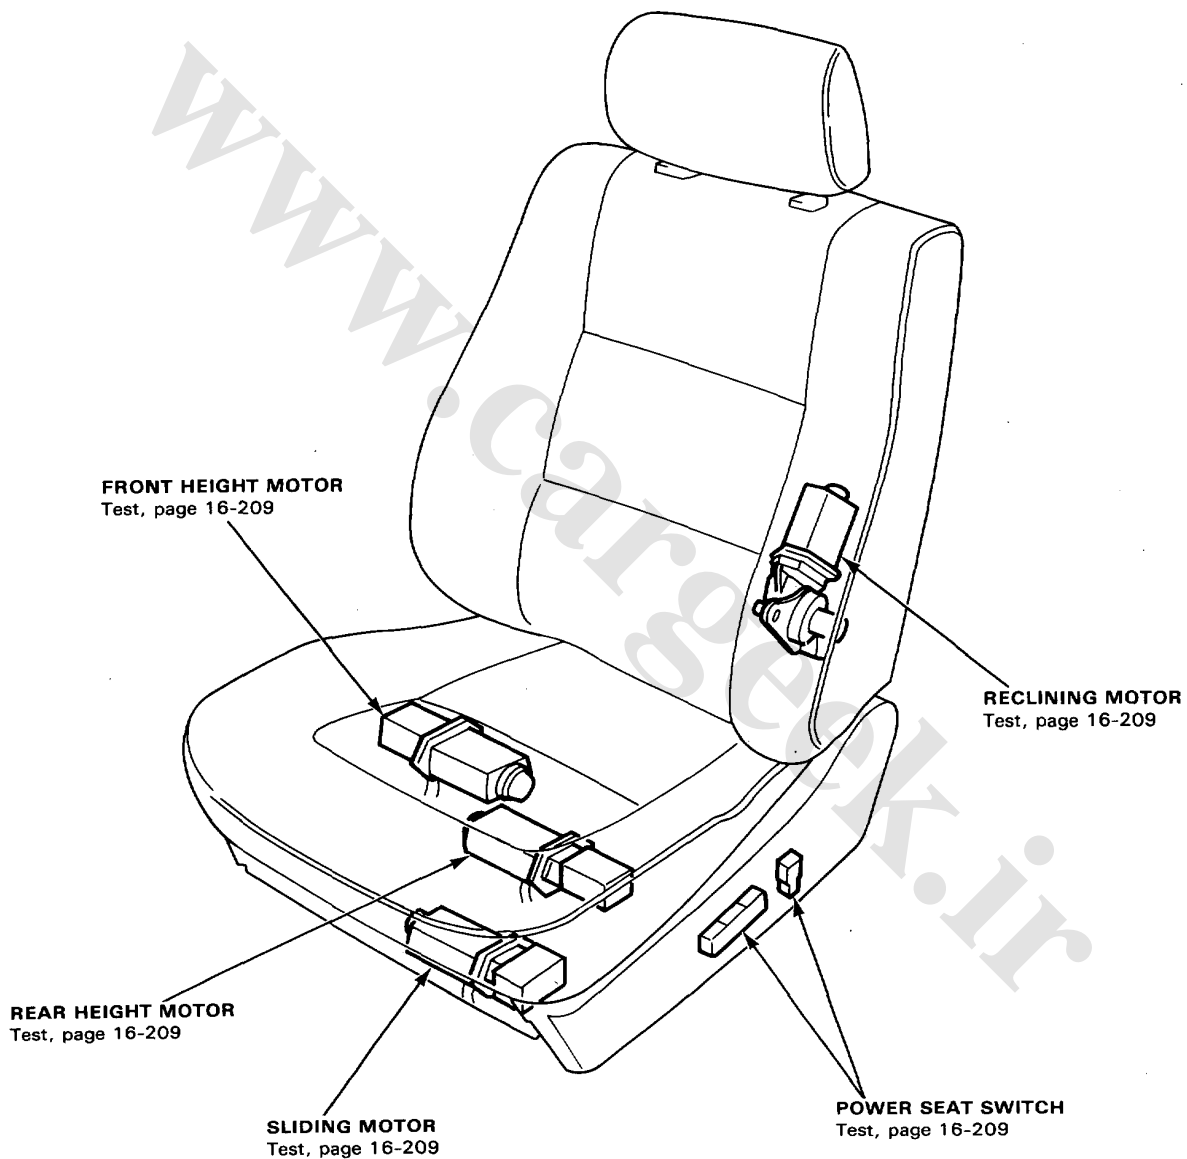

Power Seat

Circuit Diagram

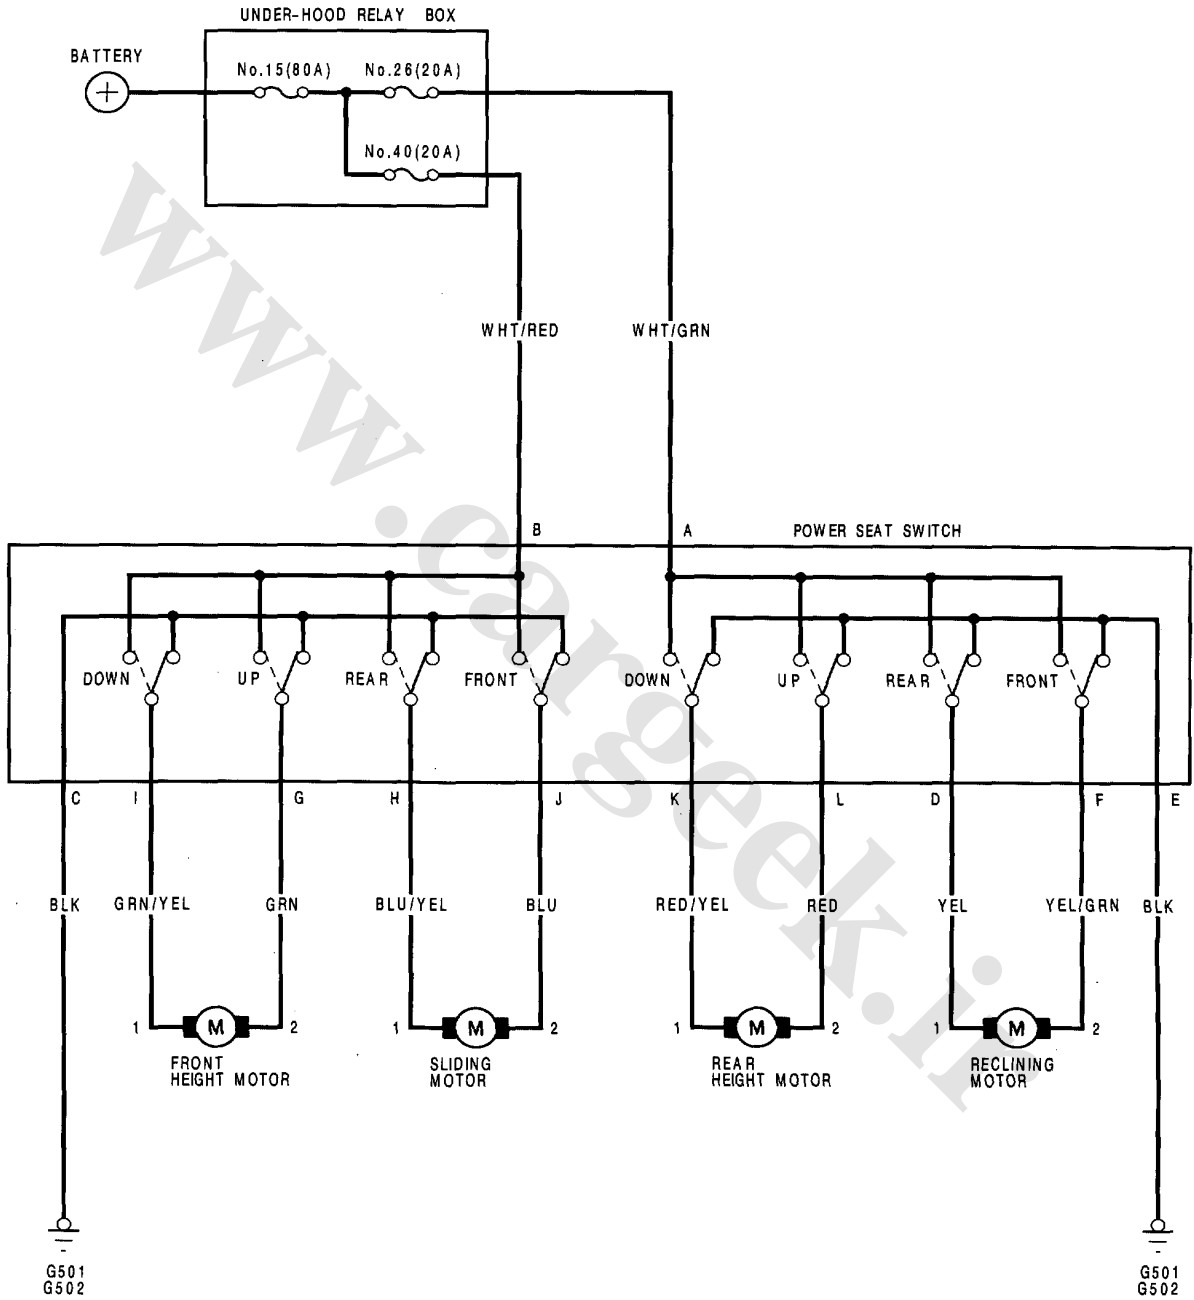




Switch Test

CAUTION: Be careful not to damage the seats, the interior trims or the body.

1. Remove the driver's seat, then disconnect the 6-P connectors.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal		A	B	C	D	E	F	G	H	I	J	K	L
Position													
SLIDING SWITCH	FORWARD		○									○	
	BACKWARD		○						○				
RECLINING SWITCH	FORWARD	○					○						
	BACKWARD	○			○								
FRONT HEIGHT SWITCH	UP	○						○					
	DOWN	○									○		
REAR HEIGHT SWITCH	UP	○											○
	DOWN	○											○

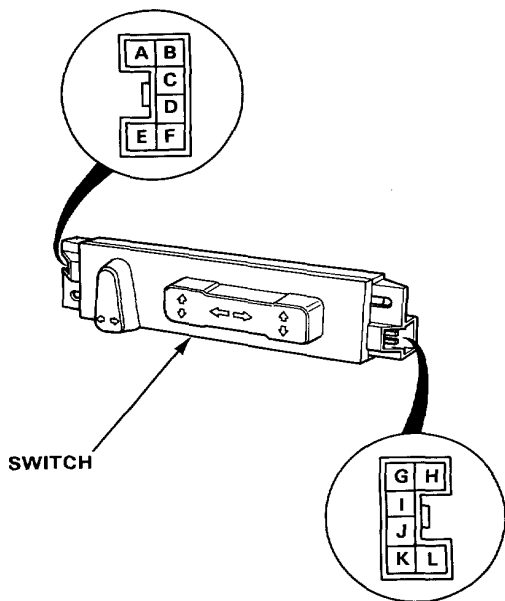


Motor Test

CAUTION: Be careful not to damage the seats, the interior trims or the body.


1. Remove the driver's seat, then disconnect the 2-P connector from the motor.
2. Test motor operation by connecting battery voltage to the No.1 and No.2 terminals. Test the motor in each direction by switching the leads from the battery.

CAUTION: When a motor stops running, disconnect a battery terminal immediately.

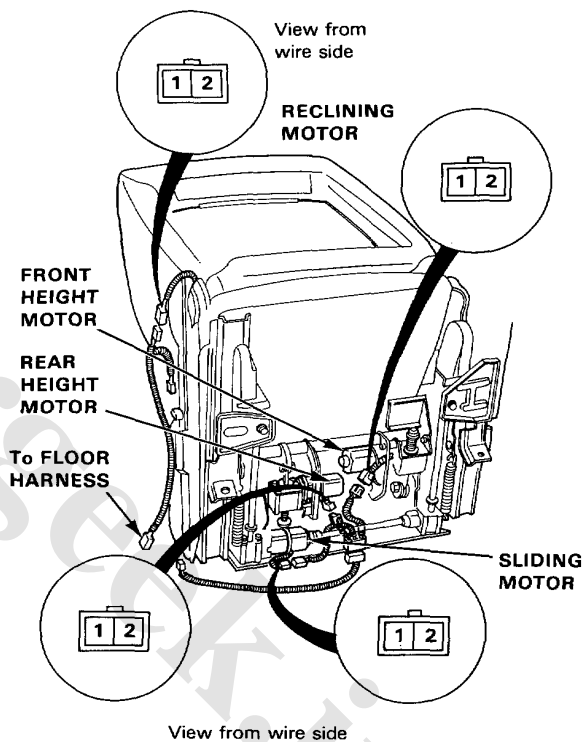


Power Seat (Height Adjuster)

Component Location Index

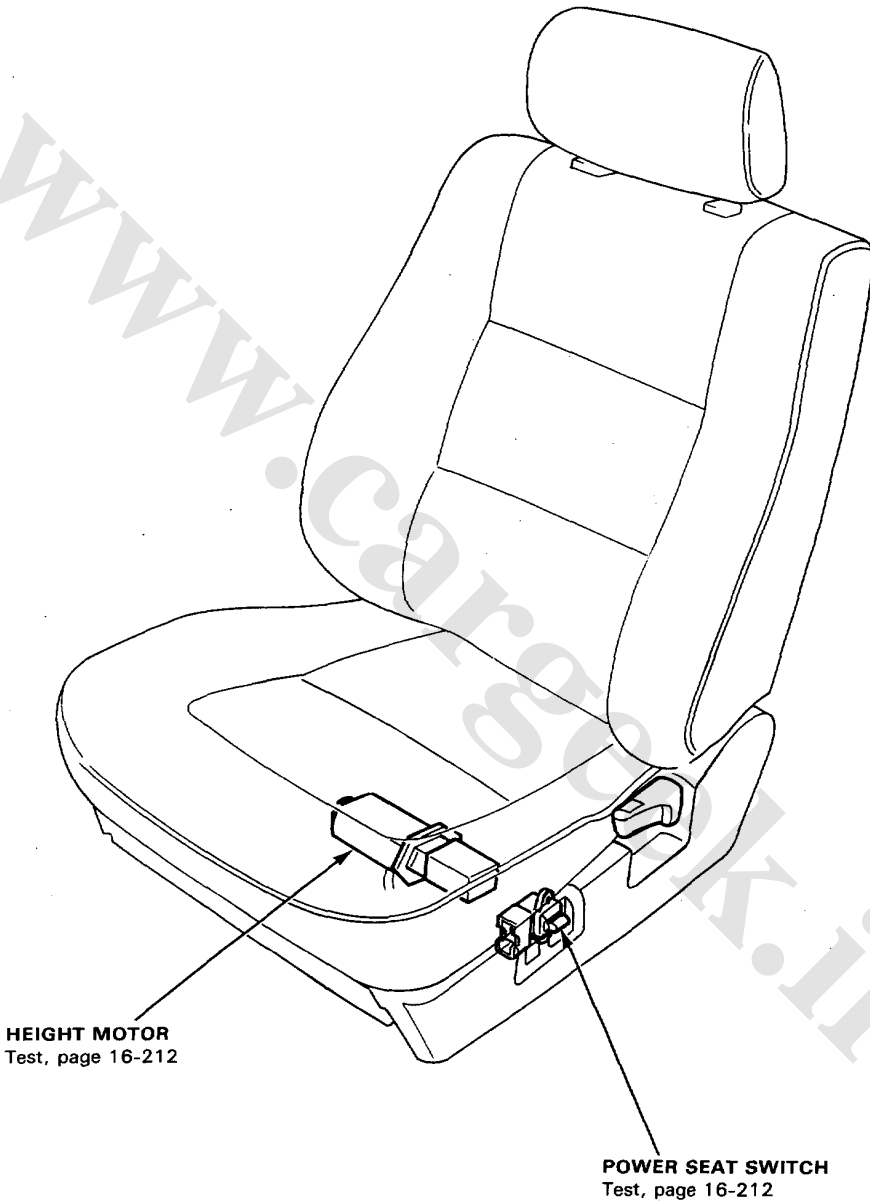



Circuit Diagram

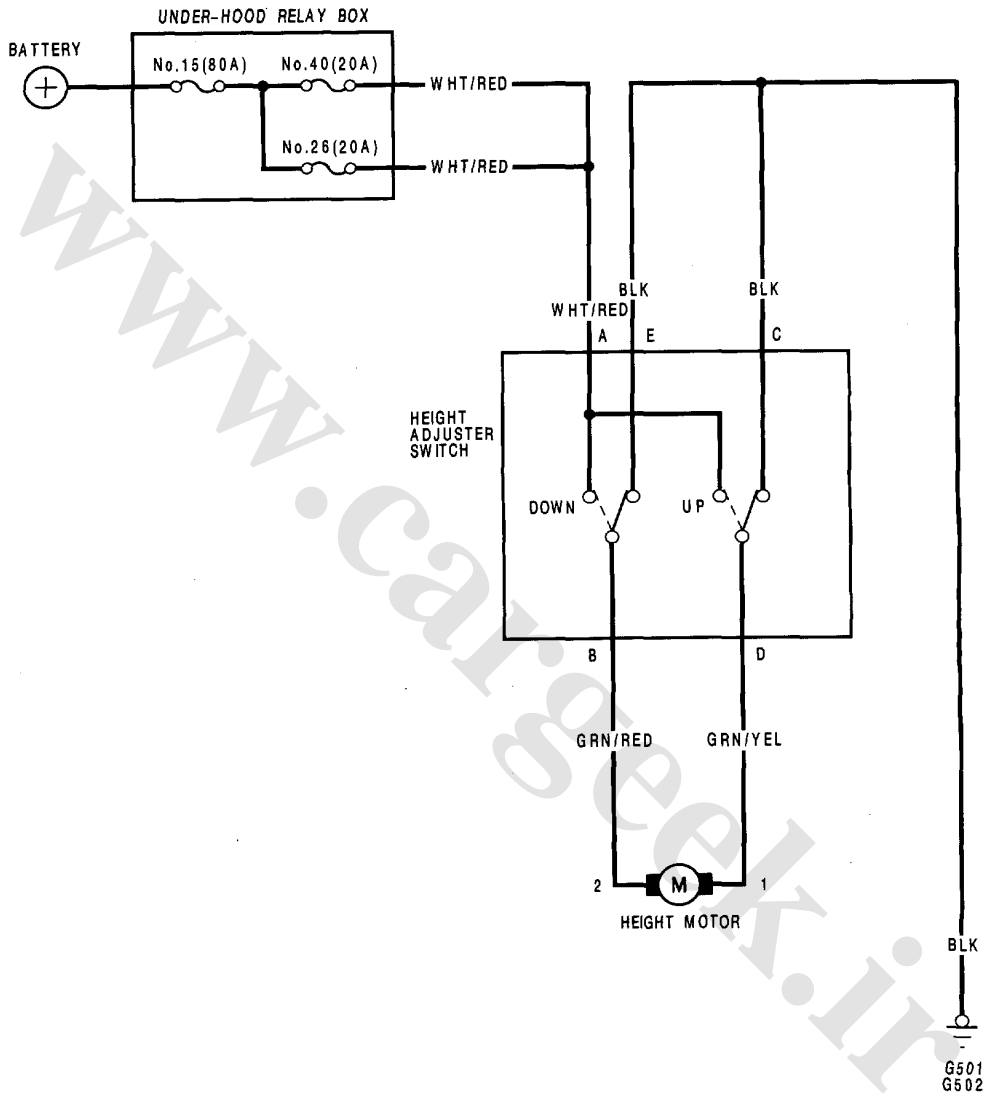


Power Seat (Height Adjuster)

Switch Test

CAUTION: Be careful not to damage the seats, the interior trims or the body.

1. Remove the driver's seat, then disconnect the 5-P connector from the switch.
2. Check for continuity between the terminals in each switch position according to the table.

		Terminal				
Position		A	B	C	D	E
SWITCH	UP	○			○	
	DOWN	○	○			

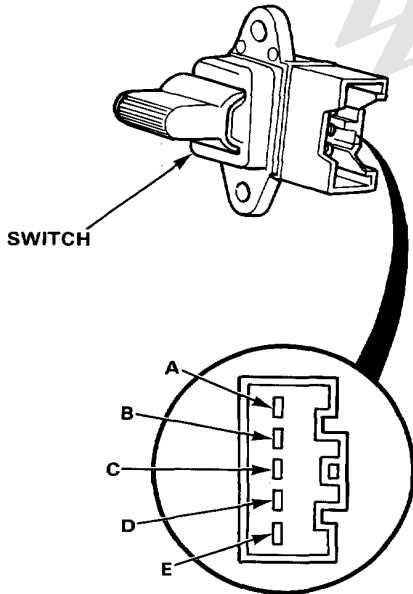


Motor Test

CAUTION: Be careful not to damage the seats, the interior trims or the body.


1. Remove the driver's seat, then disconnect the 2-P connector from the motor.
2. Test motor operation by connecting battery voltage to the No.1 and No.2 terminals. Test the motor in each direction by switching the leads from the battery.

CAUTION: When a motor stops running, disconnect a battery terminal immediately.

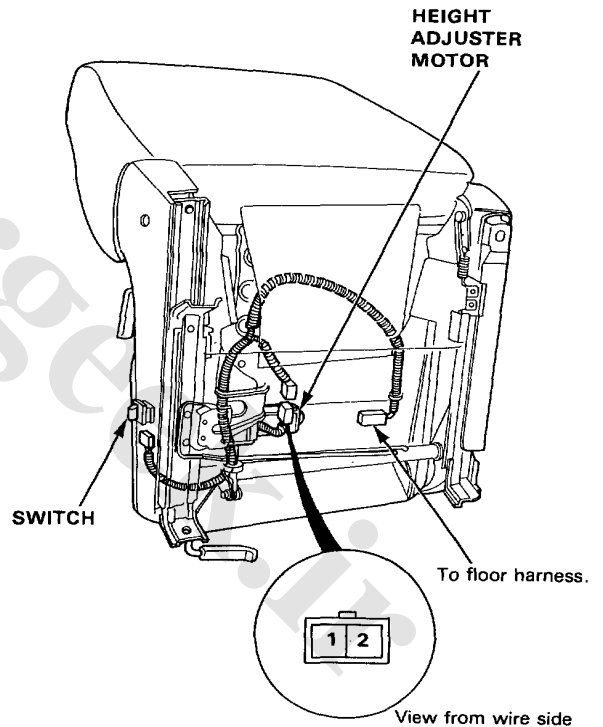

Ignition System


Distributor Overhaul (Fuel-Injected Engine)

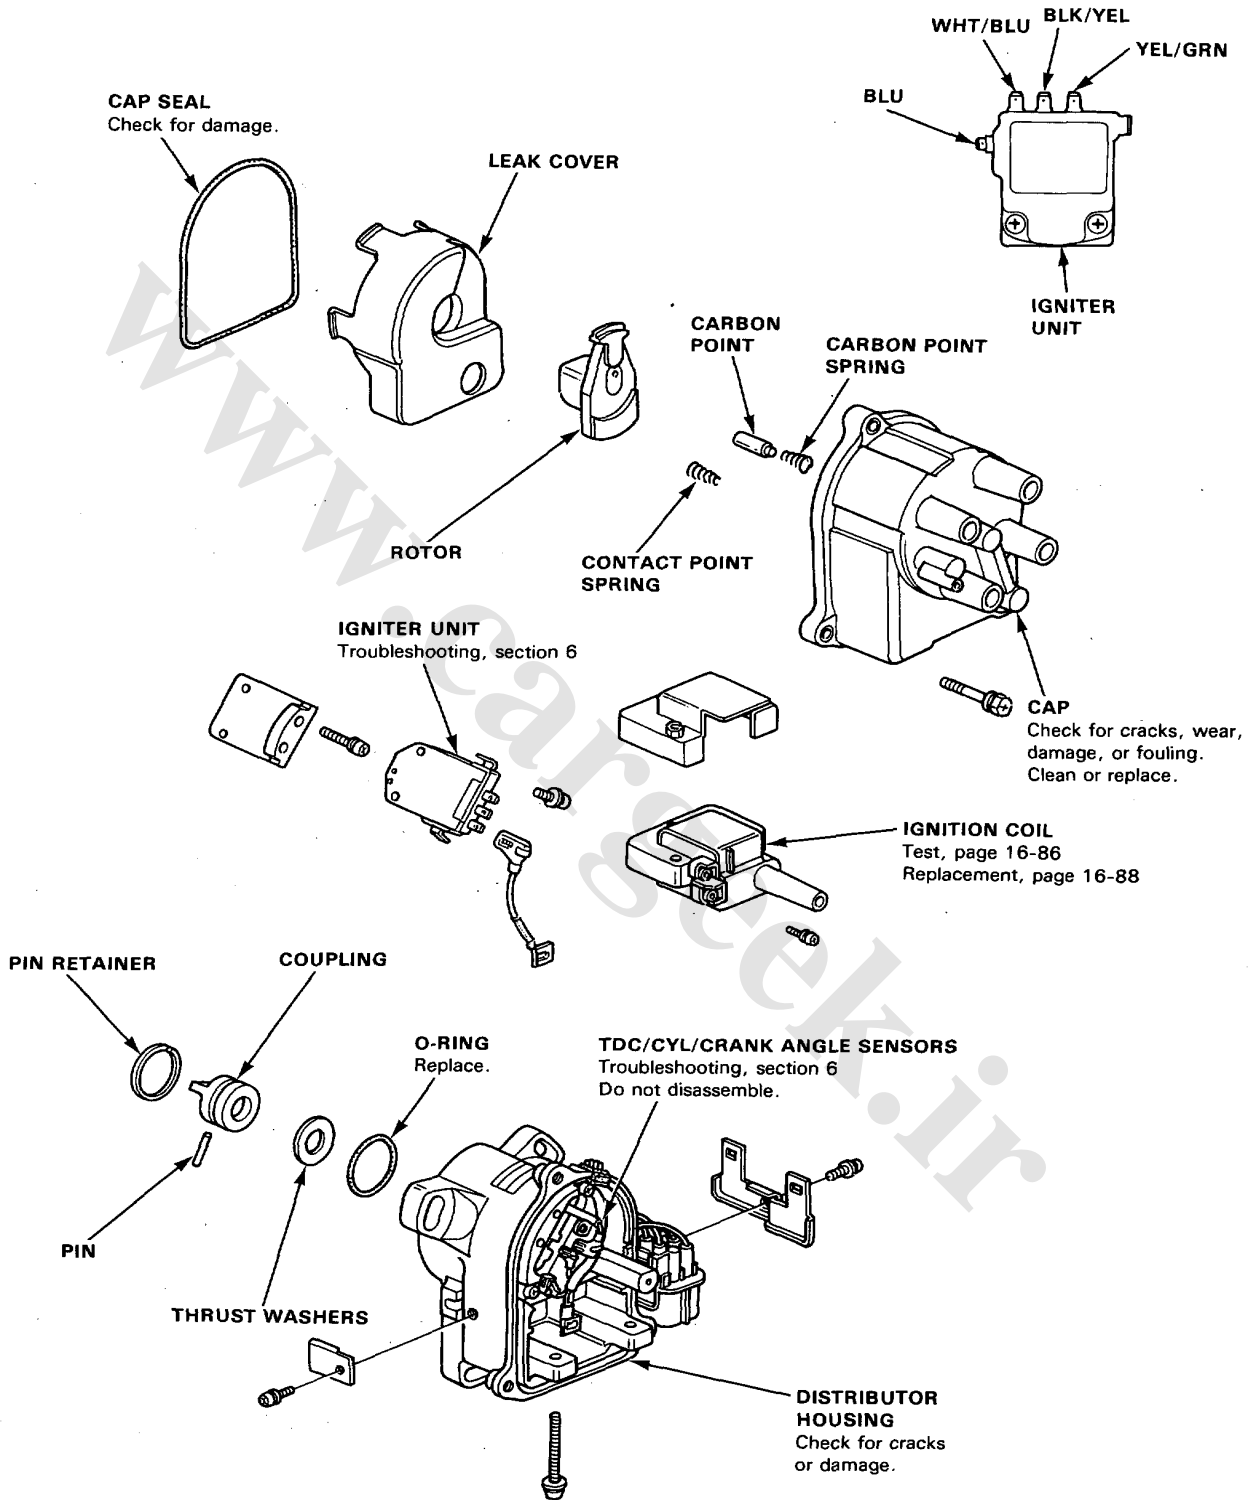



(Carbureted Engine)

NOTE: After installing the reluctor, adjust the air gaps between the stator and reluctor (see page 16-79).

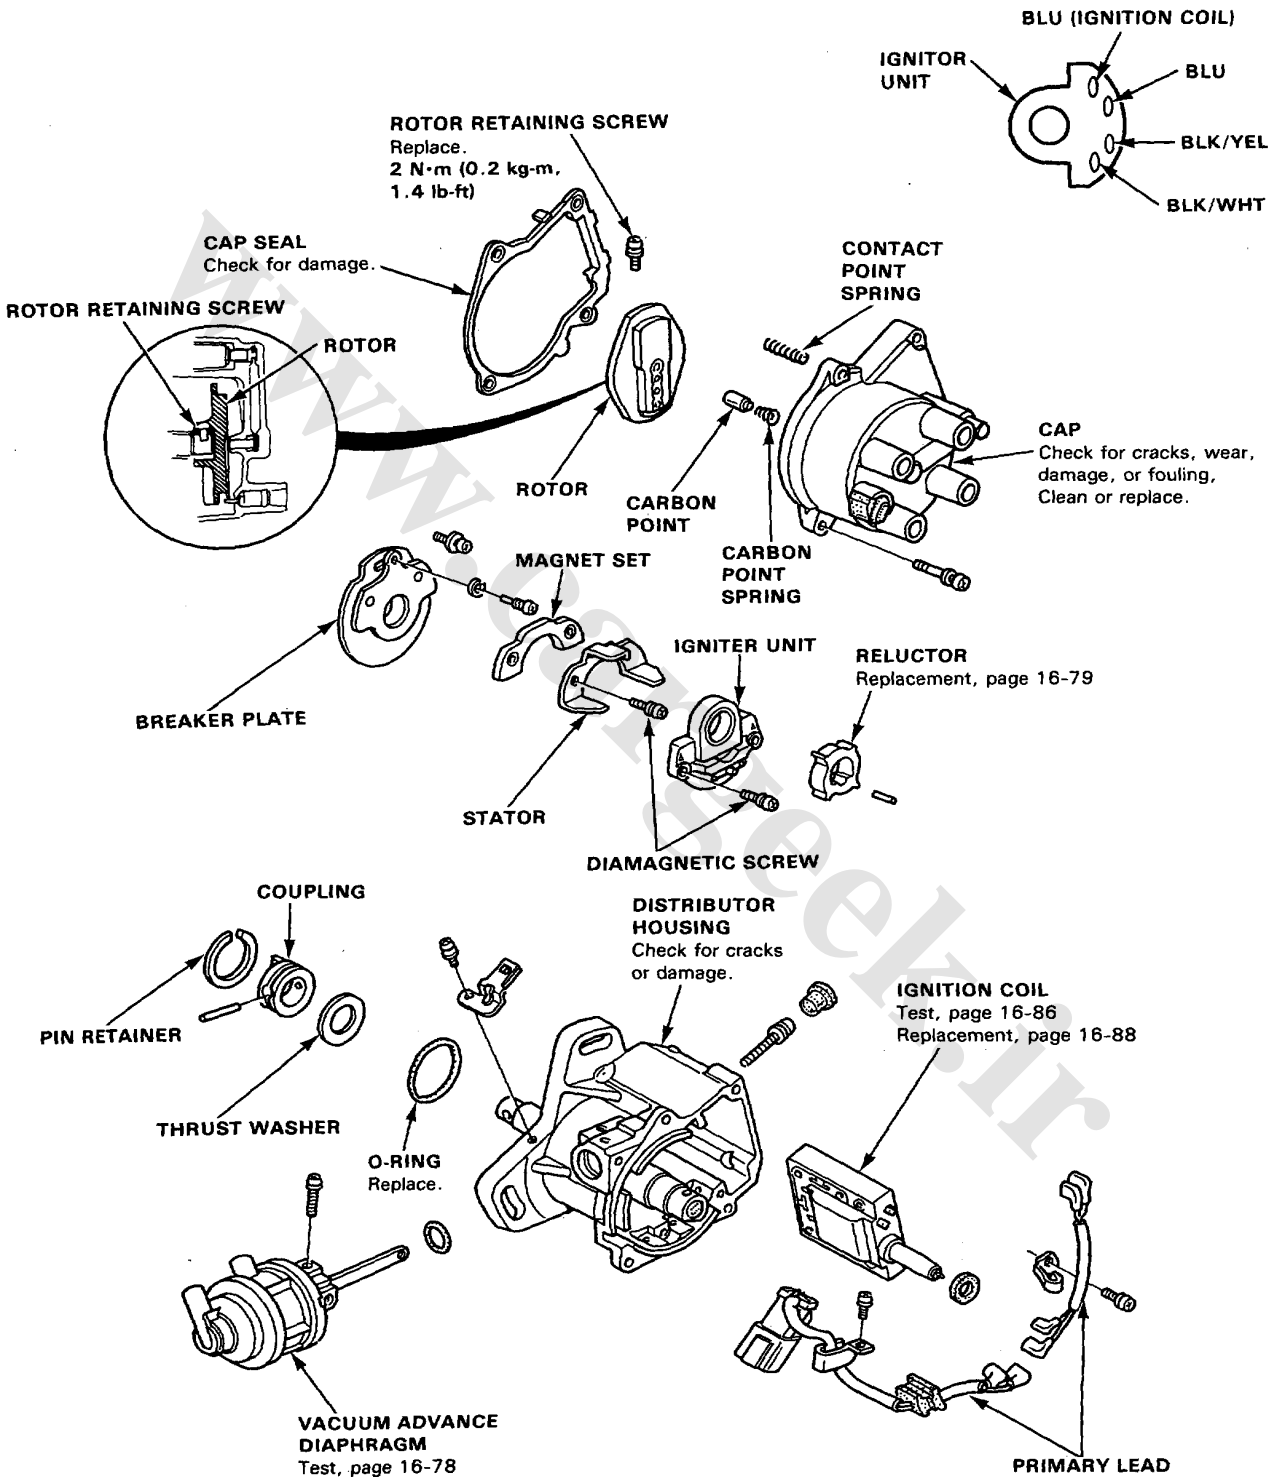


Ignition System

Distributor Reassembly


Reassemble the distributor in the reverse order of disassembly.

1. Install the rotor, then turn it so that it faces in the direction shown (toward the No.1 cylinder).

Fuel-injected engine:

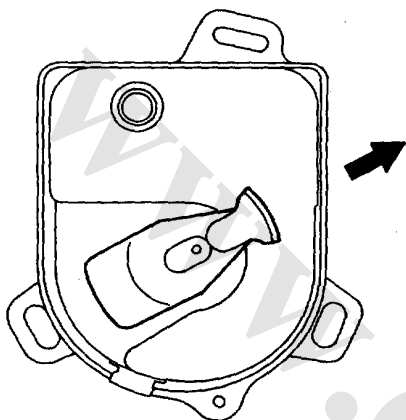


Carbureted engine:

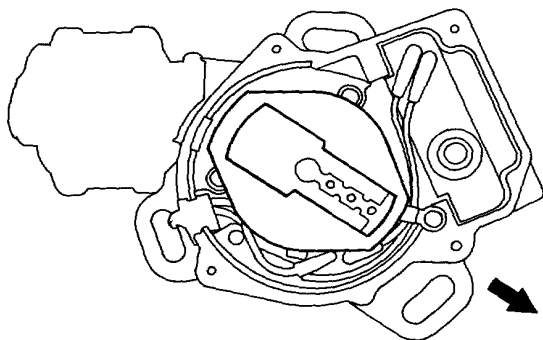


2. Set the thrust washer and coupling on the shaft.
3. Check that the rotor is still pointing toward the No.1 cylinder, then align the index mark on the housing with the index mark on the coupling.

Fuel-injected engine:

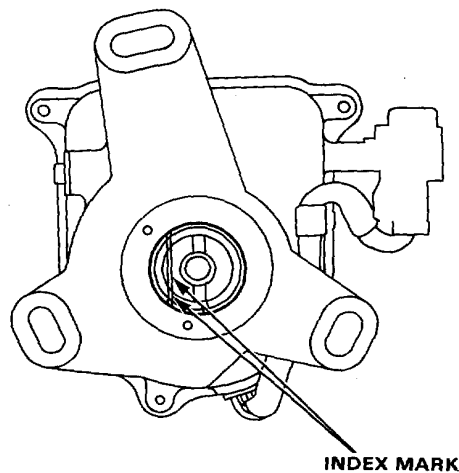

Carbureted engine:

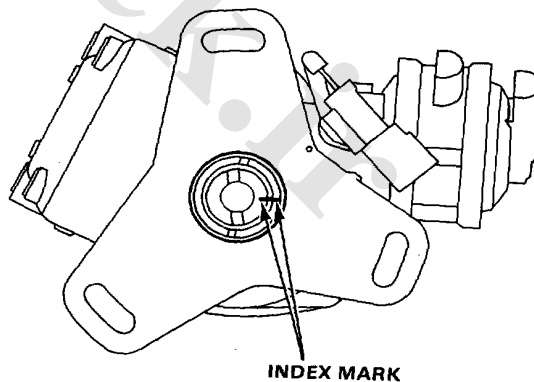




Igniter Unit Input Test

Fuel-injected engine:

NOTE:

- See section 6 when the self-diagnostic indicator blinks.
- Perform an input test for the igniter unit after finishing the fundamental tests for the ignition system and fuel emission system.
- The tachometer should operate normally.

1. Remove the distributor cap, the rotor and the leak cover.
2. Disconnect the BLK/YEL, WHT/BLU, YEL/GRN and BLU wires from the igniter unit.

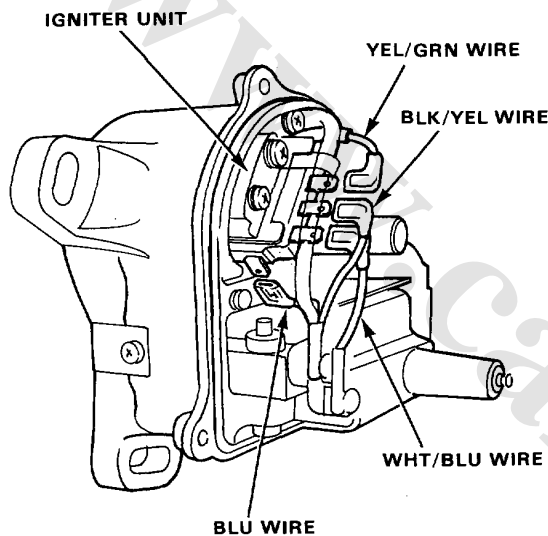


3. Turn the ignition switch ON. Check the voltage between the BLK/YEL wire and the body ground. There should be battery voltage.
 - If there is no battery voltage, check the BLK/YEL wire across the ignition switch and the igniter unit.
 - If there is battery voltage, go to step 4.
4. Turn the ignition switch ON. Check the voltage between the WHT/BLU wire and the body ground. There should be battery voltage.
 - If there is no battery voltage, check the following.
 - Ignition coil.
 - WHT/BLU wire between the ignition coil and the igniter unit.
 - If there is battery voltage, go to step 5.

5. Check the YEL/WHT wire between the PGM-FI ECU and the igniter unit.
6. Check the BLU wire between the tachometer and the igniter unit.
7. If all tests are normal, replace the igniter unit.

Carbureted engine:

NOTE: The tachometer should operate normally.

1. Remove the distributor cap and the rotor.
2. Disconnect the BLK/YEL, BLK/WHT, BLU and BLU (ignition coil) wires from the igniter unit.

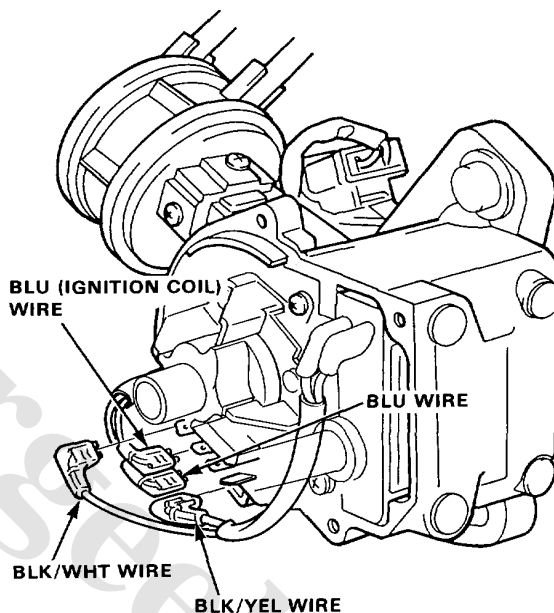


3. Turn the ignition switch ON. Check the voltage between the BLK/YEL wire and the body ground. There should be battery voltage.
 - If there is no battery voltage, check the BLK/YEL wire across the ignition switch and the igniter unit.
 - If there is battery voltage, go to step 4.
4. Check the BLK/WHT and the BLU wires between the ignition coil and the igniter unit.
5. Check the BLU wire between the tachometer and the igniter unit.
6. If all tests are normal, replace the igniter unit.

Ignition System

Ignition Coil Test (Fuel-Injected Engine)


1. With the ignition switch OFF, remove the distributor cap.
2. Remove the 2 screws to disconnect the BLK/YEL and WHT/BLU wires from the terminals A and B respectively.

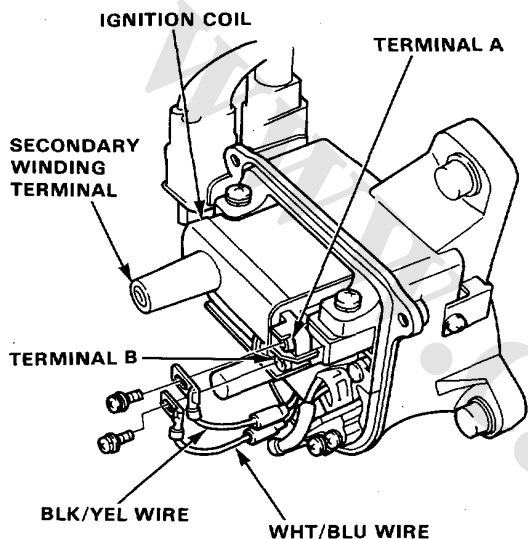

3. Using an ohmmeter, measure resistance between the terminals. Replace the coil if the resistance is not within specifications.
NOTE: Resistance will vary with the coil temperature; specifications are at 20°C (70°F)

Primary Winding Resistance
(between the A and B terminals):
0.6–0.8 ohms


Secondary Winding Resistance
(between the A and secondary winding terminals):
12,880–19,320 ohms

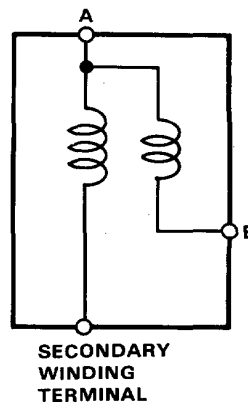



(Carbureted Engine)

1. With the ignition switch OFF, remove the distributor cap.
2. Disconnect the BLK/WHT and BLU wires from the terminals A and B respectively.

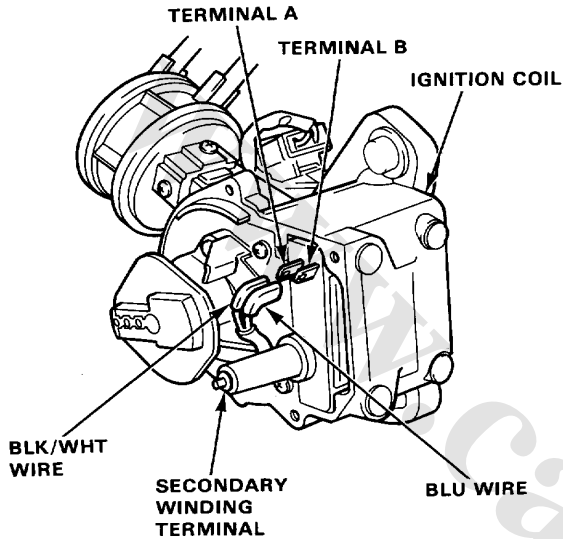

3. Using an ohmmeter, measure resistance between the terminals. Replace the coil if the resistance is not within specifications.


NOTE: Resistance will vary with the coil temperature; specifications are at 20°C (70°F)

Primary Winding Resistance
(between the A and B terminals):

0.5–0.7 ohms

Secondary Winding Resistance
(between the A and secondary winding terminals):


14,400–21,600 ohms

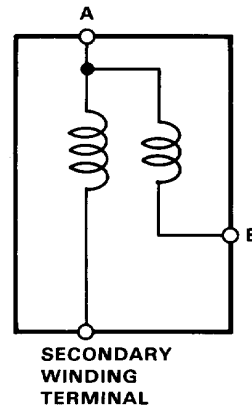


Ignition System

Ignition Coil Replacement (Fuel-Injected Engine)

1. With ignition switch OFF, remove the distributor cap, rotor, and cap seal, then remove the leak cover.
2. Remove the 2 screws to disconnect the BLK/YEL and WHT/BLU wires from the terminals A and B respectively.

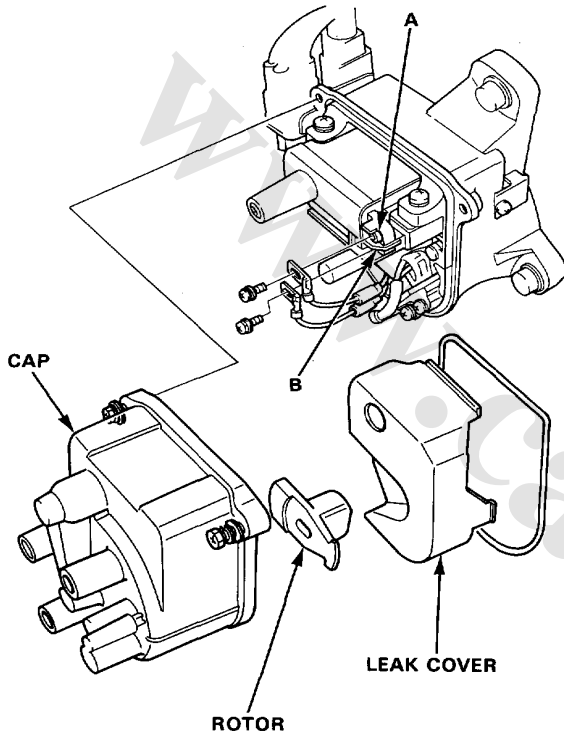


3. Remove the 2 screws and slide the ignition coil out of the distributor housing.

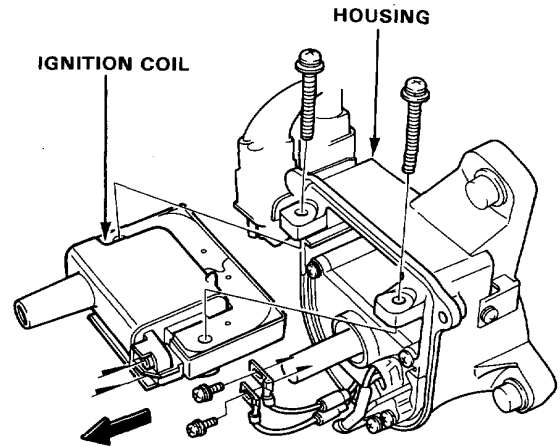



(Carbureted Engine)


1. With ignition switch OFF, remove the distributor cap and cap seal.
2. Disconnect the BLK/WHT and BLU wires from the terminals A and B respectively.

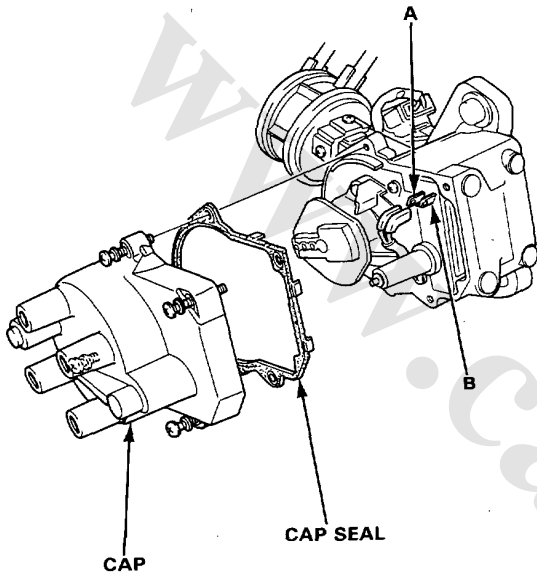

3. Remove the rubber caps from the distributor housing.
4. Remove the 4 screws and slide the ignition coil out of the distributor housing.

NOTE:


- Replace the rubber caps if they are worn out.
- Installing the rubber caps, apply silicon grease to them.
- Make sure that the wires are clamped and apart from a stator, etc.

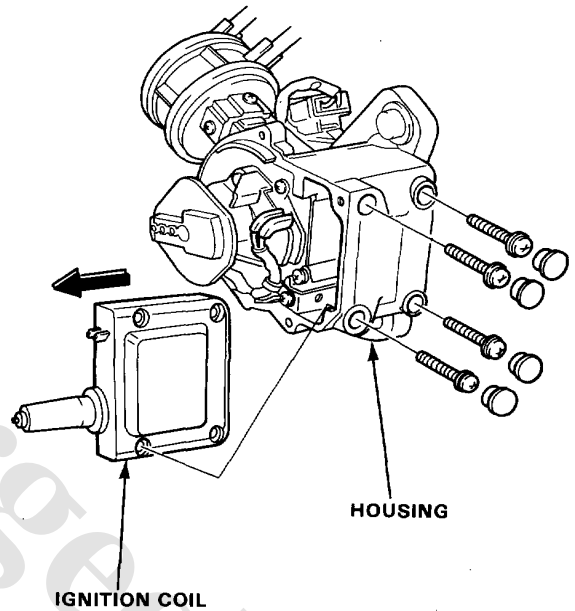

Ignition System

Spark Plug Inspection

1. Inspect the electrodes and ceramic insulator for:

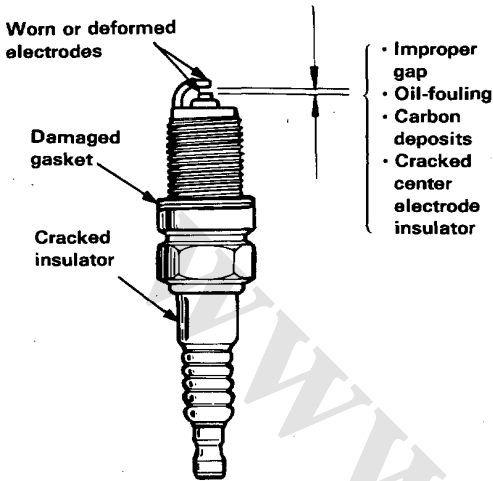

Burned or worn electrodes may be caused by:

- Advanced ignition timing
- Loose spark plug
- Plug heat range too low
- Insufficient cooling

Fouled plug may be caused by:

- Retarded ignition timing
- Oil in combustion chamber
- Incorrect spark plug gap
- Plug heat range too high
- Excessive idling/low speed running
- Clogged air cleaner element
- Deteriorated ignition coil or ignition wires

2. Replace the plug if the center electrode is rounded as shown below:

NOTE:

- Do not use spark plugs other than those listed below, because those plugs are a new type (ISO standard).
- These marks are sealed on the air cleaner cover.




Spark Plug:
Except KP and KT models

	Standard	Optional
NGK	ZFR6F-11	ZFR5F-11* ZFR7F-11
ND	KJ20CR-L11	KJ16CR-L11* KJ22CR-L11

*: Except KF, KG, KS, KW, KE and KX models

KP and KT models

	Standard	Optional
NGK	ZFR5F-11	ZFR6F-11
ND	KJ16CR-L11	KJ20CR-L11

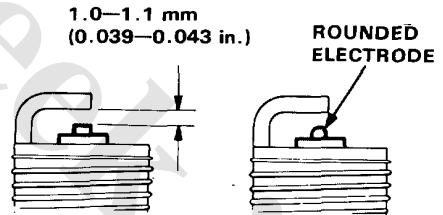

3. Adjust the gap with a suitable gapping tool.

Electrode Gap: 1.0—1.1 mm (0.039—0.043 in.)


4. Screw the plugs into the cylinder head finger tight, then torque them to 18 N·m (1.8 kg-m, 13 lb-ft).

NOTE: Apply a small quantity of anti-seize compound to the plug threads before installing.


Ignition Switch

Lock Cylinder Replacement

1. Remove the steering wheel, then remove the steering column covers.
2. Remove the bulb/socket from the key light case by turning the socket 45°, then remove the screw and the key light case from the lock body.
3. Turn the ignition key to "1."
4. Push the pin in and remove the lock cylinder from the lock body.

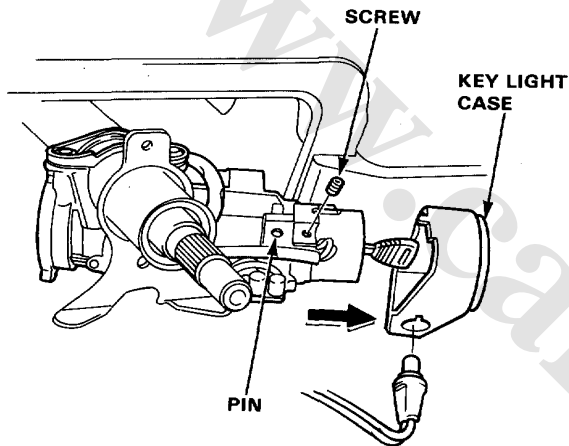


5. Turn the key to "0" and align the lock cylinder with the lock body.
6. Turn the key almost to "1" and insert the lock cylinder until the pin touches the body.
7. Turn the key to the "1", push the pin and insert the lock cylinder into the lock body until the pin clicks into place.

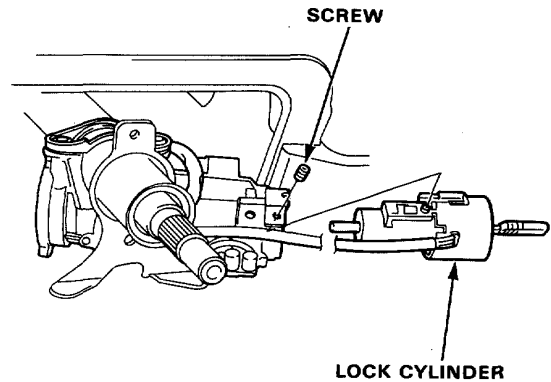




Steering Lock Replacement

1. Remove the steering wheel, then remove the steering column covers.
 2. Remove the instrument panel and the gauge assembly (see page 16-120).
 3. Center punch each of the 2 shear bolts and drill their heads off with a 3/16 in. drill bit.
- CAUTION** Do not damage the switch body when removing the shear heads.
4. Remove the shear bolts from the switch body.

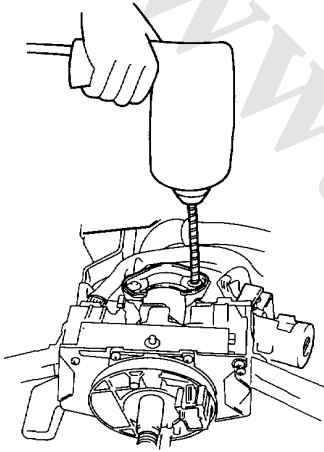

5. Install the new ignition switch without the key inserted.
 6. Loosely tighten the new shear bolts.
- NOTE:** Make sure the projection on the ignition switch is aligned with the hole in the steering column.
7. Insert the ignition key and check for proper operation of the steering wheel lock and that ignition key turns freely.
 8. Tighten the shear bolts until the hex heads twist off.

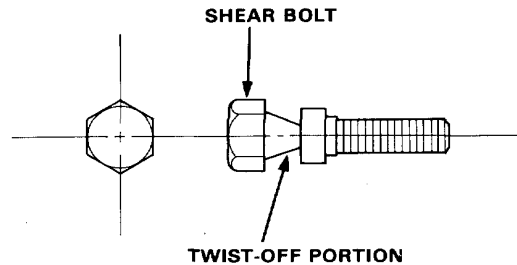


Starting System

Component Location Index

BATTERY
Test, page 16-52

**SHIFT POSITION
CONSOLE SWITCH
(NEUTRAL SAFETY SWITCH)
(A/T only)**
Test, page 16-142
Replacement, page 16-142

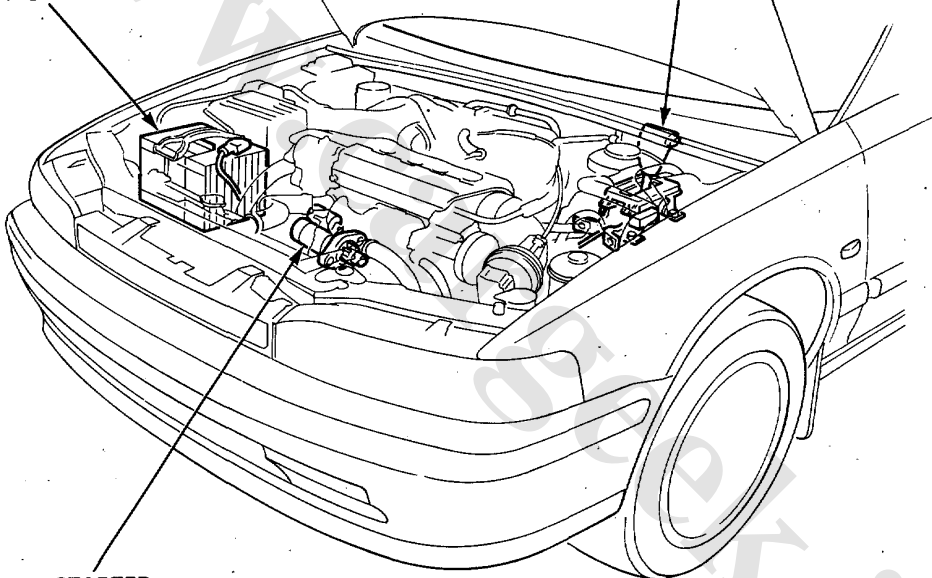


STARTER
Test, page 16-58
Solenoid Test, page 16-60
Replacement, page 16-60
Overhaul, page 16-61, 62
Reassembly, page 16-67




Stereo Sound System

Component Location Index

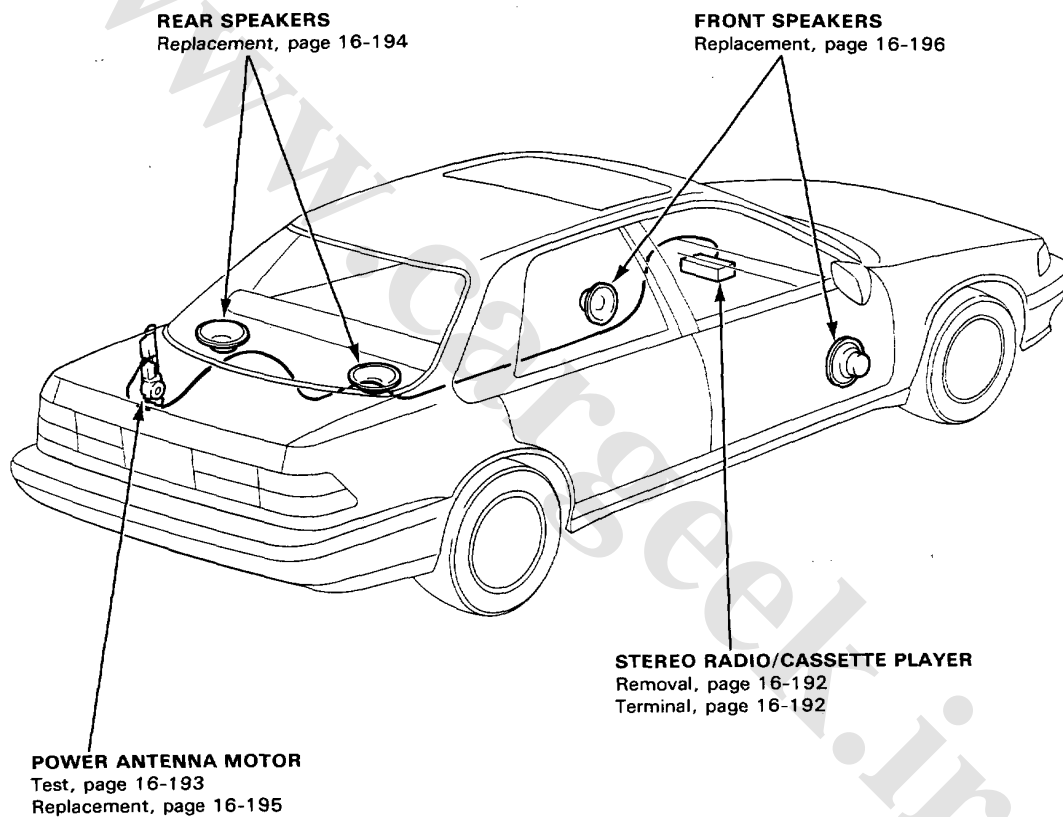


Stereo Sound System

Circuit Diagram (Except KE model)

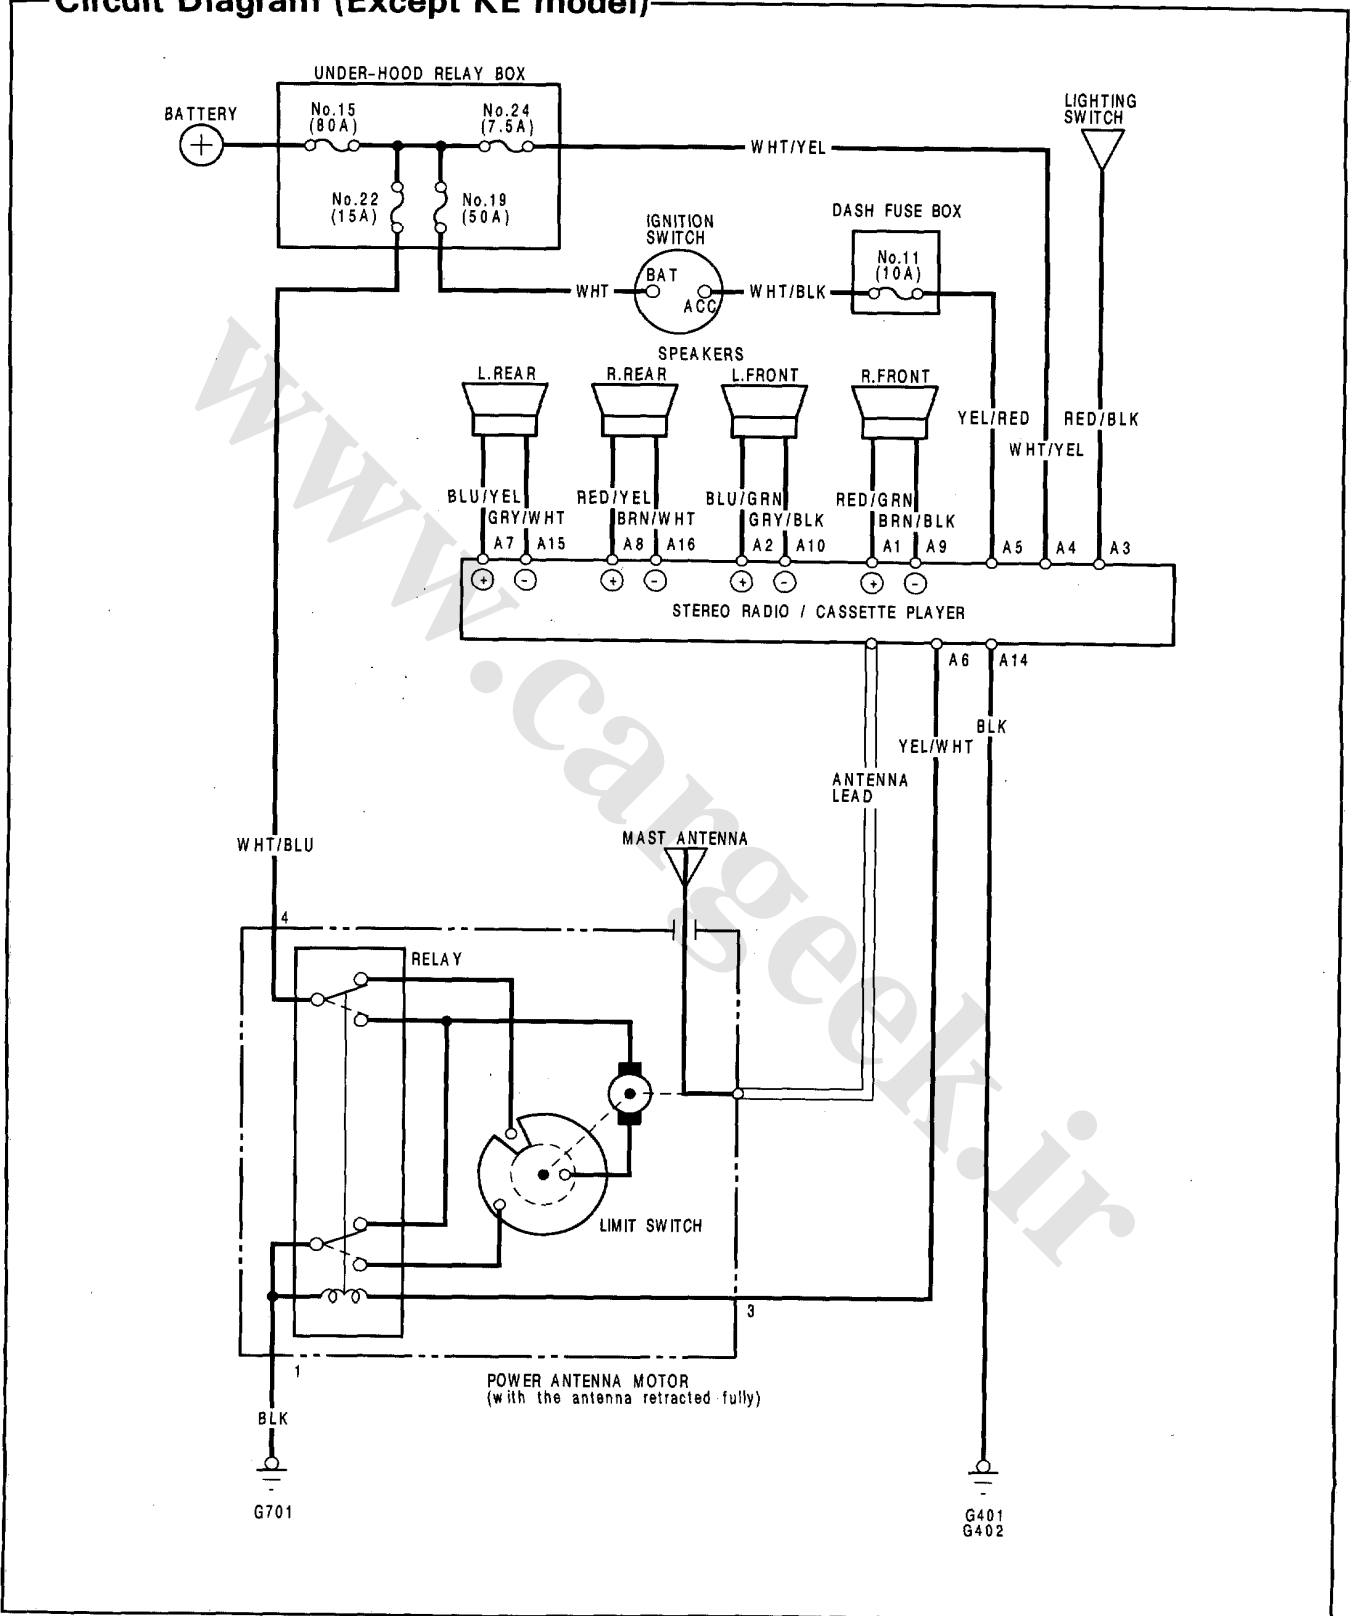



Circuit Diagram (KE model only)

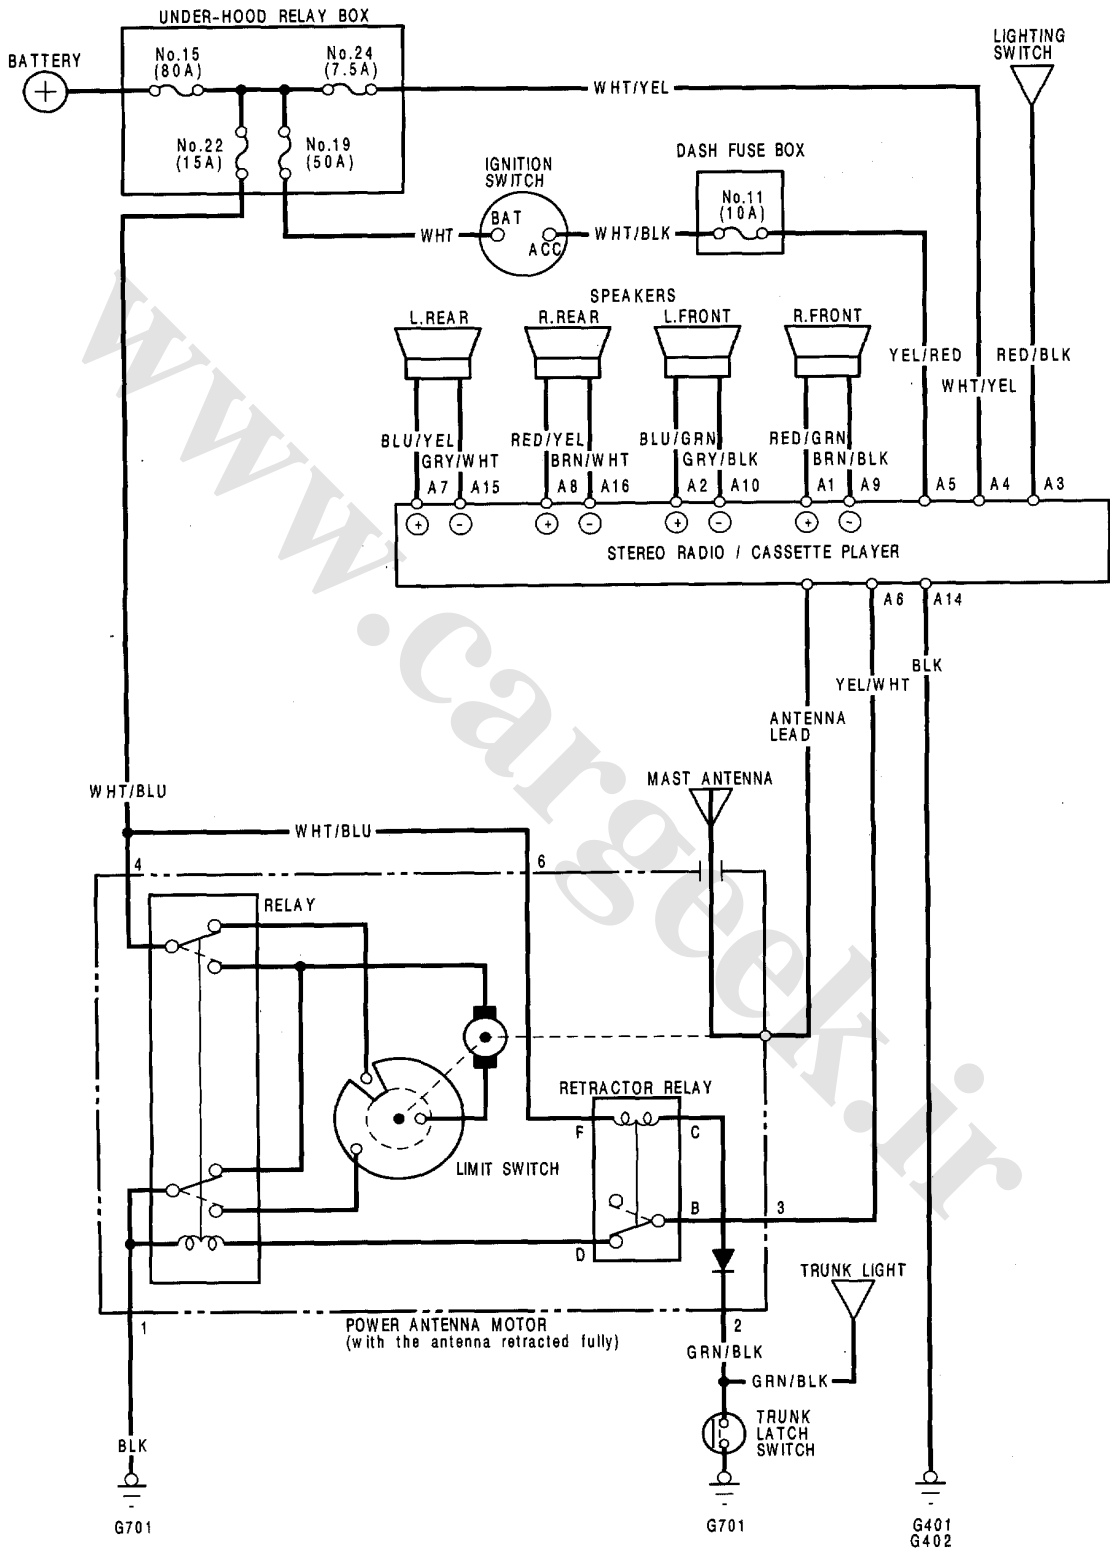


Stereo Sound System

Unit Removal


A-Type:

Remove the needle remover to pull out the unit.

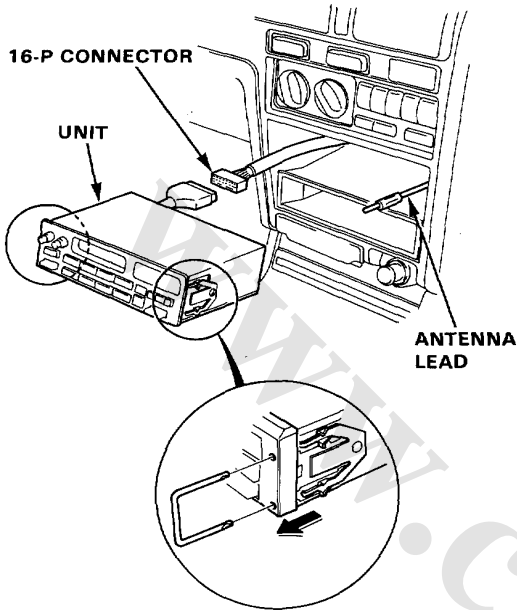


B-Type:

1. Remove the floor console.
2. Remove the 3 screws and ashtray.
3. Loosen the 3 screws and pull out the unit.
4. Disconnect the 16-P connector and antenna lead, then remove the unit.

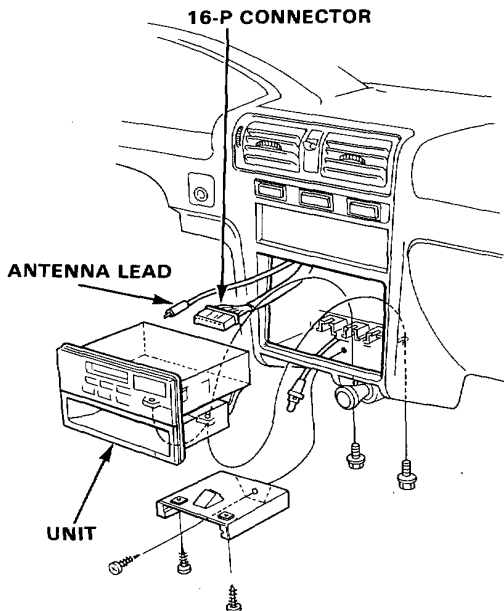

Unit Terminals

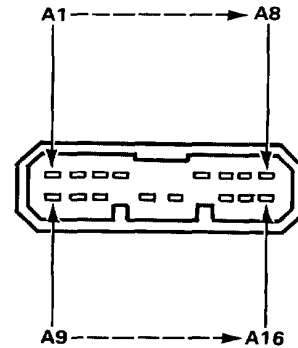

Terminal (Wire color)	Destination
A1 (RED/GRN)	Right front speaker ⊕
A2 (BLU/GRN)	Left front speaker ⊕
A3 (RED/BLK)	Light-on signal
A4 (WHT/YEL)	Constant power (Tuning memory)
A5 (YEL/RED)	ACC (Main stereo power supply)
A6 (YEL/WHT)	Radio switched power (To antenna)
A7 (BLU/YEL)	Left rear speaker ⊕
A8 (RED/YEL)	Right rear speaker ⊕
A9 (BRN/BLK)	Right front speaker ⊖
A10 (GRY/BLK)	Left front speaker ⊖
A11 (—)	(Not used)
A12 (—)	(Not used)
A13 (—)	(Not used)
A14 (BLK)	Ground (G401, G402)
A15 (GRY/WHT)	Left rear speaker ⊖
A16 (BRN/WHT)	Right rear speaker ⊖




Power Antenna Motor Test

1. Remove the trunk side trim panel.
2. Disconnect the 6-P connector from the motor and remove the connector from its clamp.
3. First check power to the motor at the harness pins: There should be battery voltage between the WHT/BLU (+) and BLK (-) terminals all the time. There should be battery voltage between the YEL/WHT (+) and BLK (-) terminals only with the ignition and radio switched ON.
4. Test motor operation:


FULL EXTEND: Connect battery positive to the No.3 and No.4 terminals and negative to the No.1 terminal.

RETRACTED: **Except KE model:** Then disconnect battery positive from the No.3 terminal.
KE model only: Short the No.2 terminal to the No.1 terminal, then connect battery positive to the No.6 terminal and negative to the No.1 terminal.

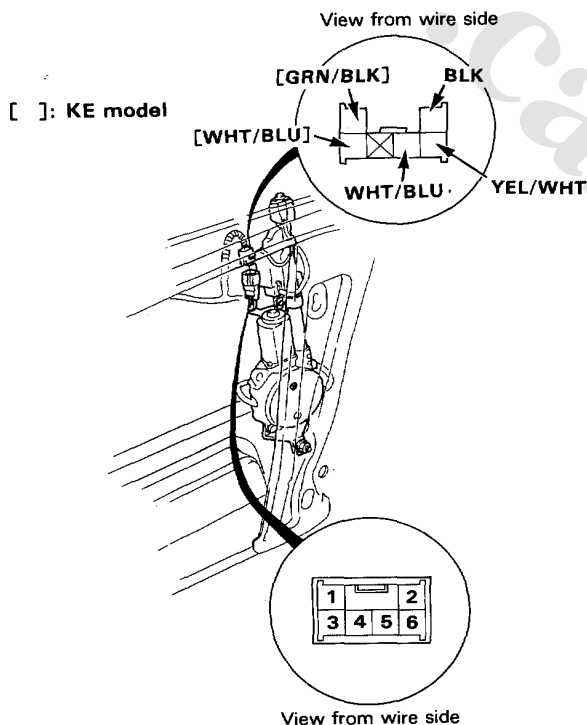


5. If the motor fails to operate properly, replace it.

Except KE model:

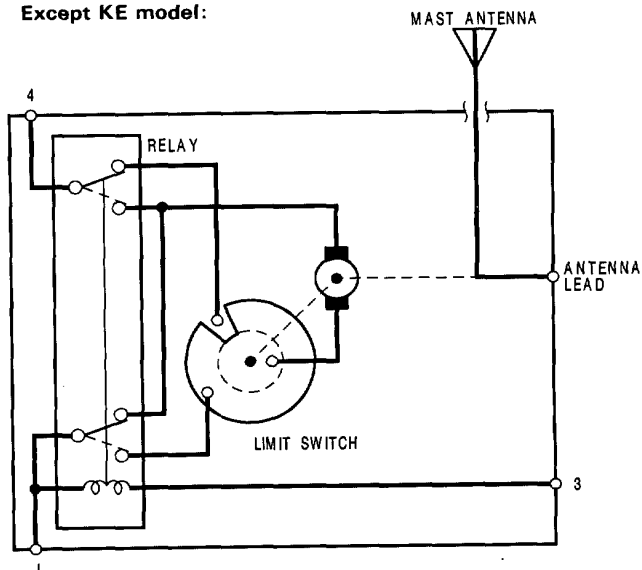


KE model:

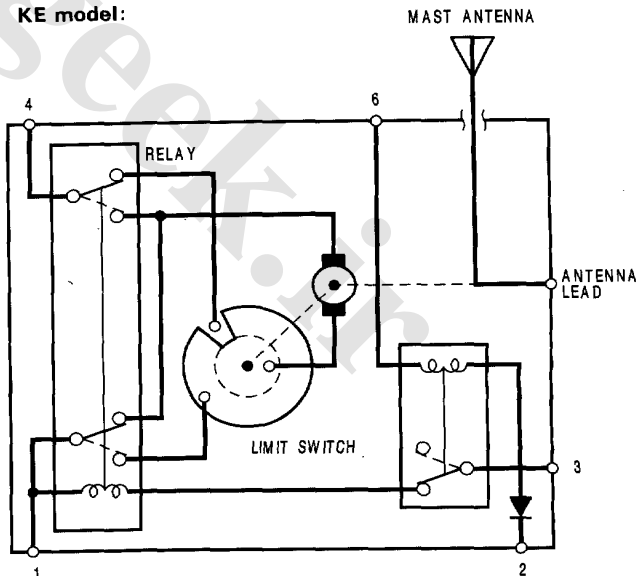

Stereo Sound System


Front Speaker Replacement

1. Remove the speaker grille from the door trim panel.
2. Remove the screws, then disconnect the wires or 2-P connector from the speaker.

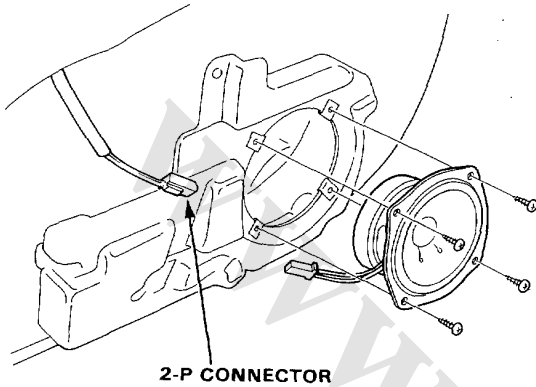

Rear Speaker Replacement

1. Open the trunk lid, then remove the 3 nuts.
2. Disconnect the 2-P connector from the speaker assembly.
3. Remove the speaker grille and speaker from the speaker box.

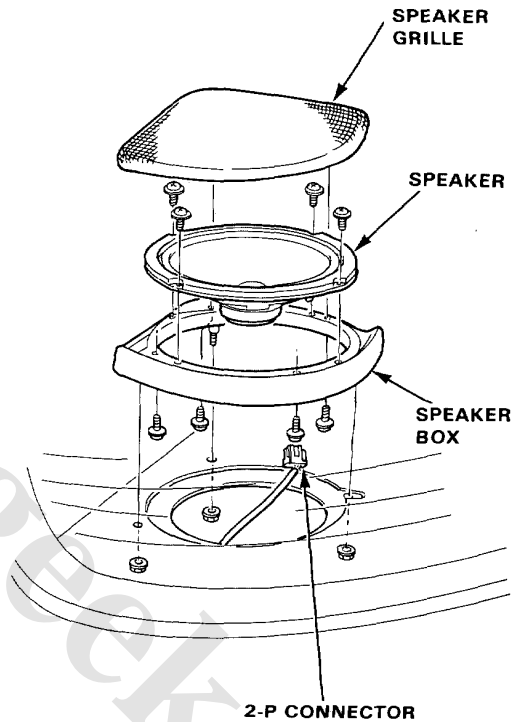





Mast Antenna Replacement

Removal


NOTE: The antenna mast alone can be replaced without having to remove the power antenna motor unit.

1. Remove the special nut, spacer and bushing.
2. Carefully withdraw the antenna mast while extending it by turning the radio switch "ON".

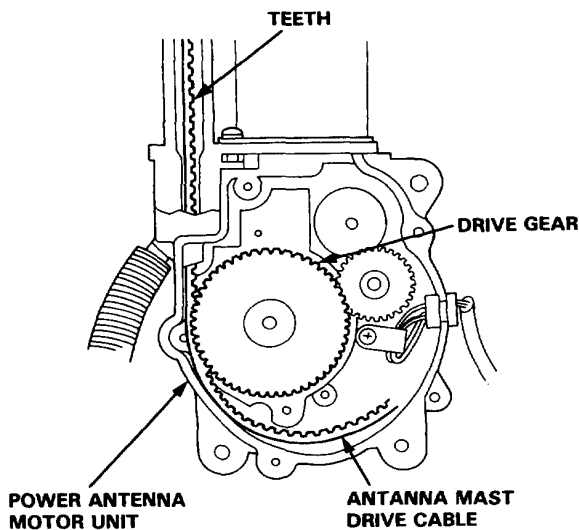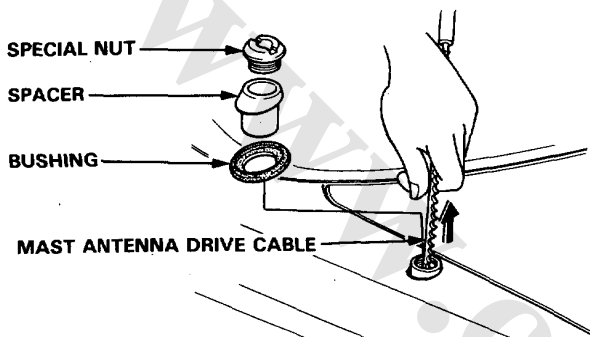

Installation

1. Carefully direct the teeth of antenna mast drive cable as shown, and insert the drive cable into the antenna housing.

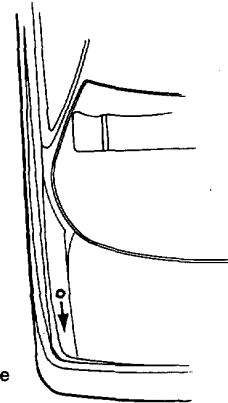


Direction of the teeth.

2. Check for engagement of the cable teeth to the drive gear; by carefully moving the cable up and down.
3. Turn the radio switch "OFF", and let the motor pull the drive cable inside the antenna housing.
4. Insert the antenna mast into the antenna housing, and install the bushing and spacer, tighten the special nut.
5. Check that the mast antenna retracts and extends fully when the radio switch is turned ON and OFF repeatedly.

Stereo Sound System

Power Antenna Motor Replacement

1. Remove the trunk side trim panel.
2. Disconnect the 4-P [6-P] connector and antenna lead from the motor, then remove the special nut and mounting nuts to take out the motor with the mast antenna.

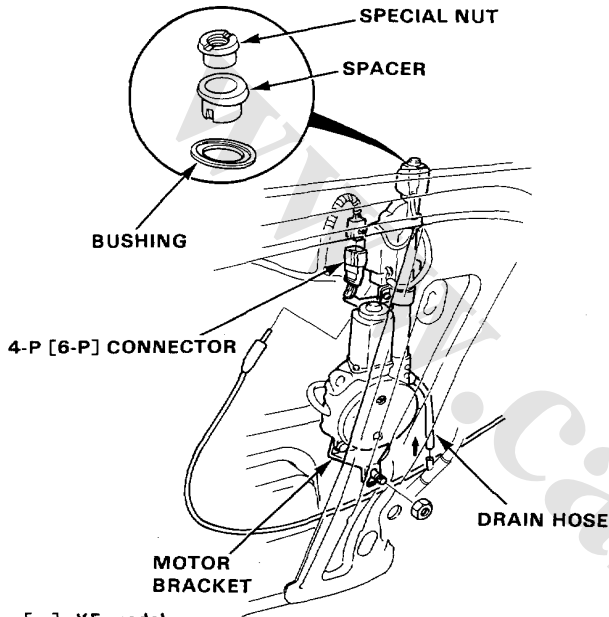



[]: KE model

3. Install in the reverse order of removal.

NOTE: Tighten the special nut, and then tighten mounting nuts to motor bracket.

Retractor Relay Test

1. Remove the relay from the motor antenna.
2. There should be no continuity between the B and D terminals when the battery is connected to the C and F terminals. There should be continuity when the battery is disconnected.

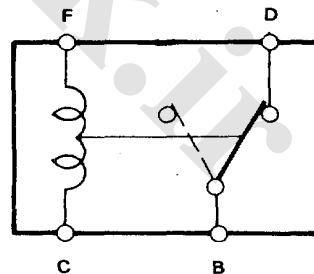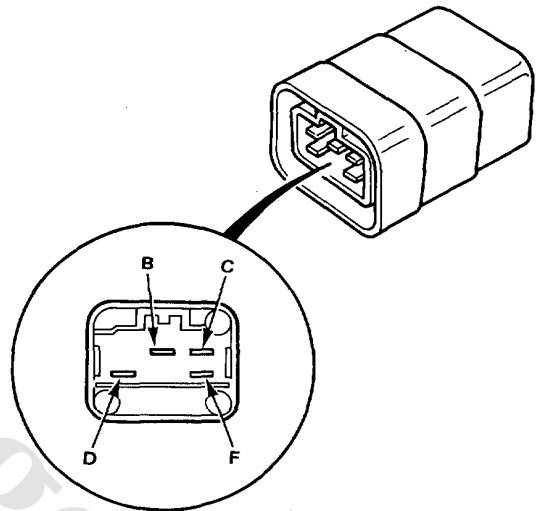




Sunroof

Component Location Index


SUNROOF SWITCH
Function Test, page 16-226
Test, page, 16-226

SUNROOF MOTOR
Test, page 16-227
Replacement, section 14

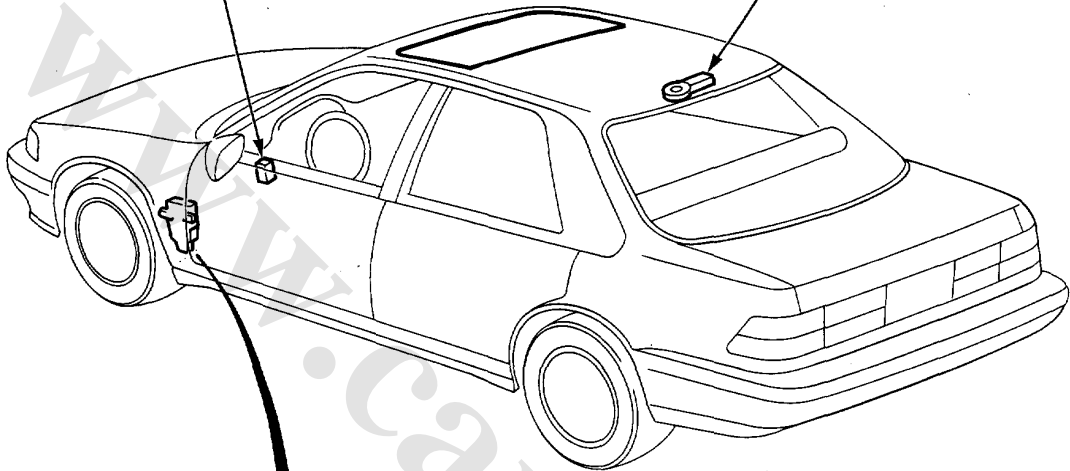

SUNROOF OPEN RELAY
Test, page 16-227


SUNROOF CLOSE RELAY
Test, page 16-227

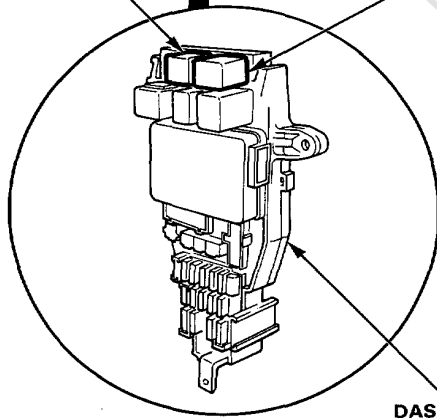

DASH FUSE BOX
(Located driver side, kick panel)

Sunroof

Circuit Diagram

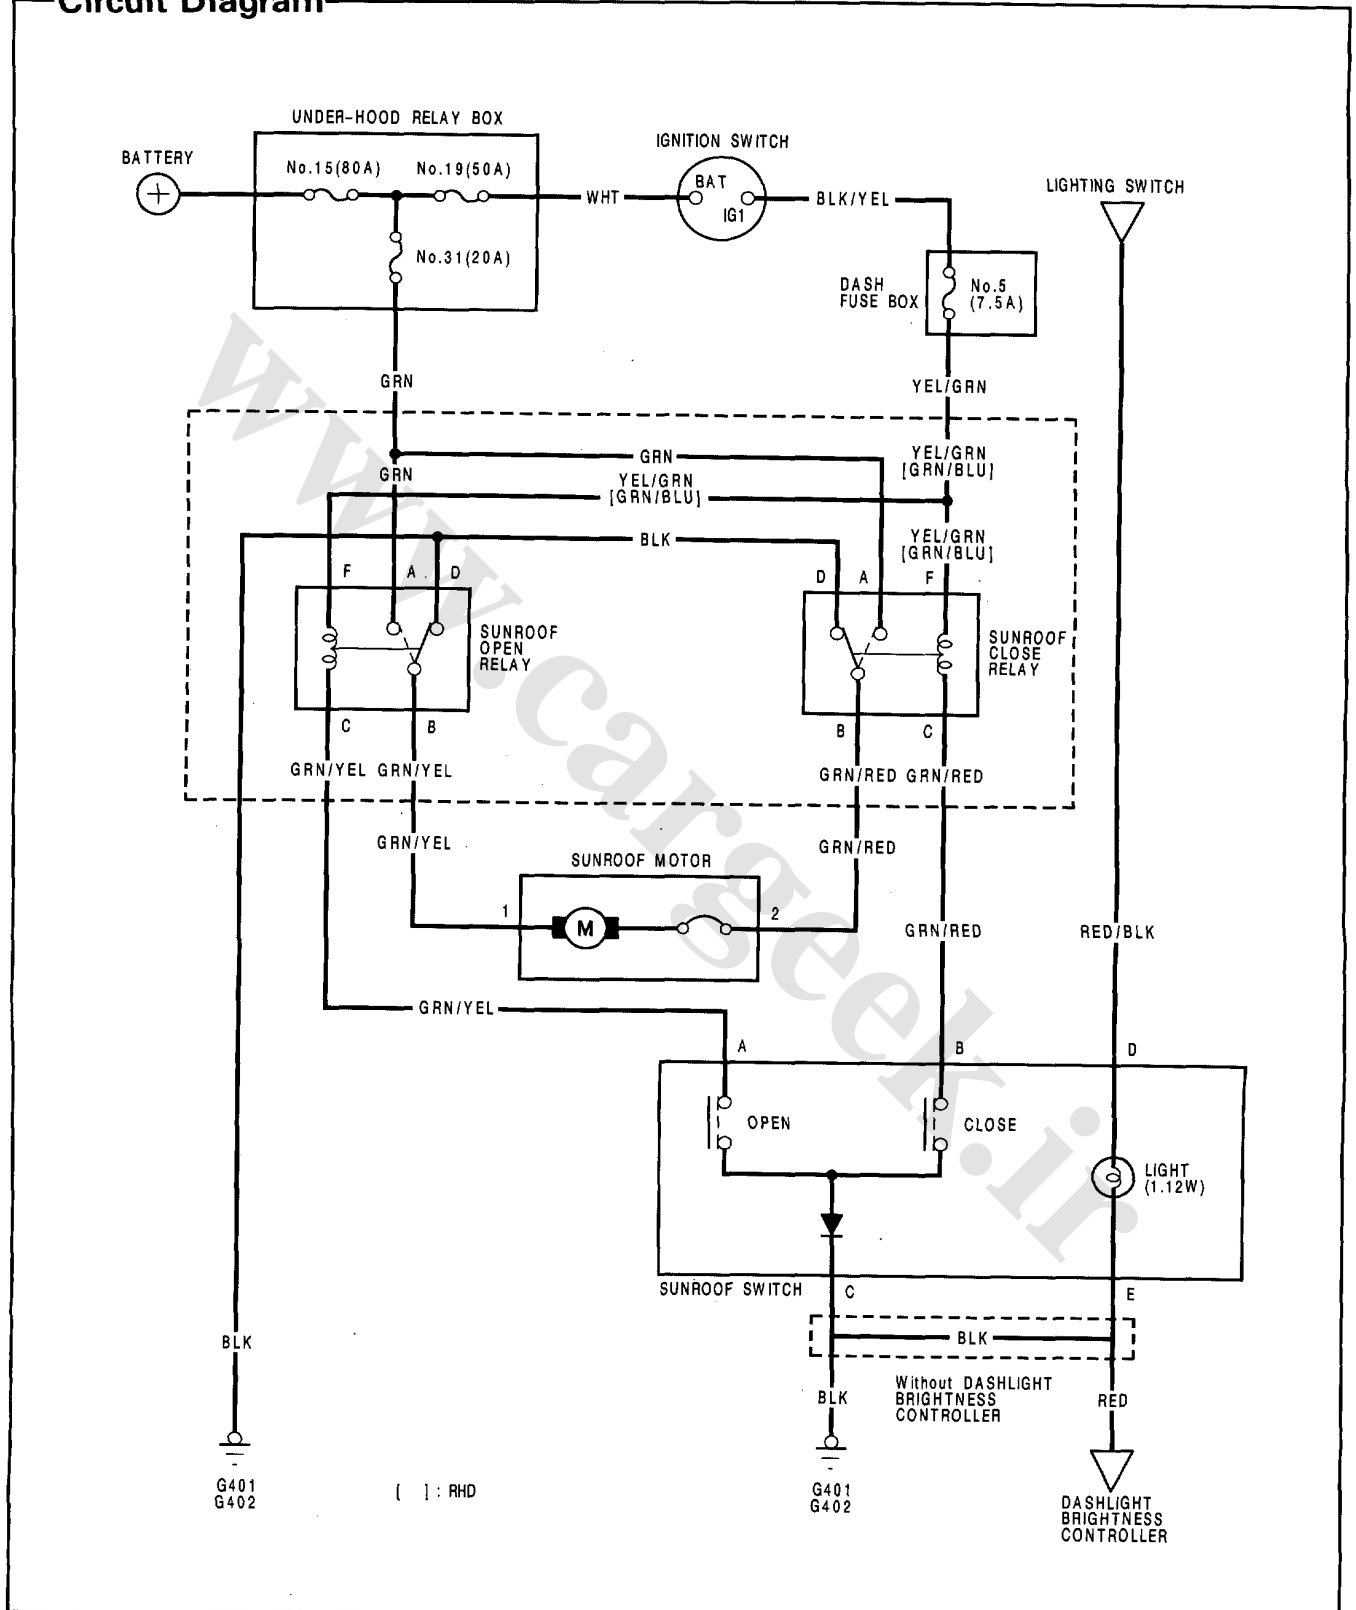



Electrical Troubleshooting


NOTE: The numbers in the table show the troubleshooting sequence.

Symptom		Item to be inspected											
		Clutch out of adjustment, foreign matter stuck between guide rail and sunroof, or outer cable not attached properly.	Blown No. 19 (50 A) fuse (in the under-hood relay box)	Blown No. 5 (7.5 A) fuse (in the dash fuse box)	Function Test	Open relay	Close relay	Sunroof motor	Sunroof switch	Poor ground	Open circuit in wires or loose or disconnected terminals		
Sunroof does not move, but motor turns.		1											
Sunroof does not move and motor does not turn (sunroof can be moved with sunroof wrench).	With all switches		1	2	3			5	4	G401 G402	GRN, YEL/GRN GRN/YEL, or GRN/RED		
	With OPEN switch.					1	2		3		GRN/YEL		
	With CLOSE switch.					2	1		3		GRN/RED		

Sunroof

Function Test

- Carefully pry out the cruise main switch/sunroof switch from the instrument panel.
NOTE: Be careful not to damage the switch or the instrument panel when prying out the switch.
- Disconnect the 5-P and 6-P connectors from the switches.
- Connect the GRN/YEL terminal to the BLK terminal with a jumper wire.
The sunroof should open when the ignition switch is turned ON.
 - If the sunroof opens, check the switch.
 - If not, connect the GRN/YEL terminal to body ground.
 - If the sunroof opens, check for open in the BLK wire, and check whether the G401 and G402 terminals are poor.
 - If not, remove the headliner and check the motor.


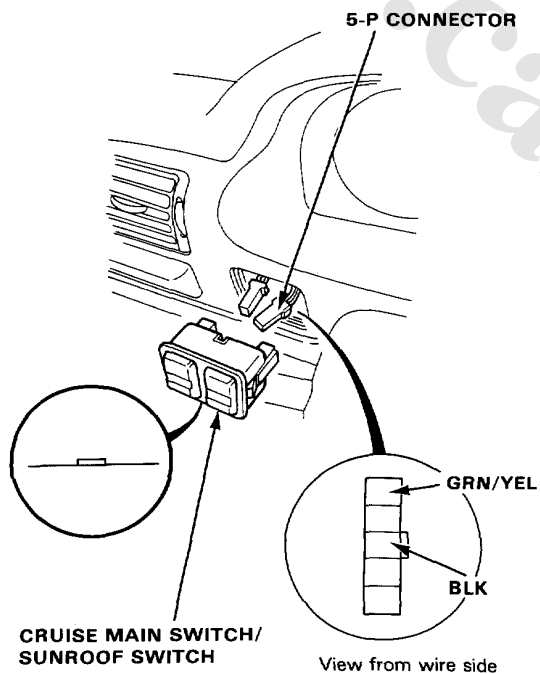


Switch Test

- Remove the switches from the instrument panel.
- Check for continuity between the terminals in each switch position according to the table.

Terminal	A	B	C	D	E
Position					
OFF					
OPEN	○	○	○	○	○
CLOSE		○	○	○	○

CRUISE MAIN SWITCH/
SUNROOF SWITCH

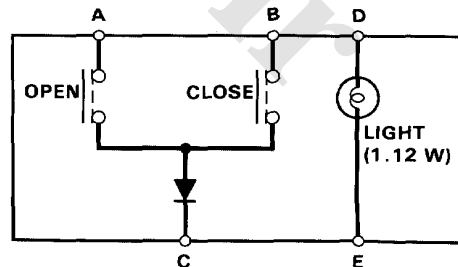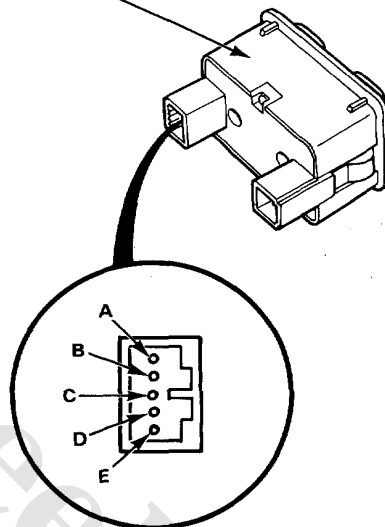




Motor Test



1. Remove the headliner.
2. Disconnect the 2-P connector from the sunroof motor.
3. Test motor operation by connecting battery to the No.1 and No.2 terminals. Test the motor in each direction, by switching the leads from the battery.
4. If the motor does not run, replace it.

NOTE: See Closing Force Check in section 14 for motor clutch test.

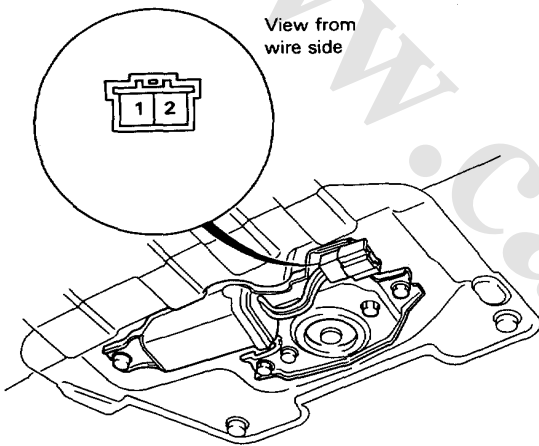


Relay Test

1. Remove the sunroof relays on the dash fuse box.
2. There should be continuity between the A and B terminals when the battery is connected to the F and C terminals.
There should be continuity between the B and D terminals when the battery is disconnected.

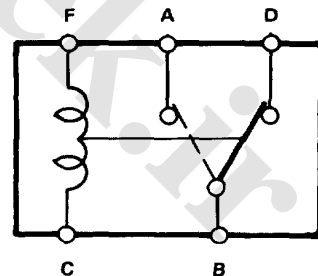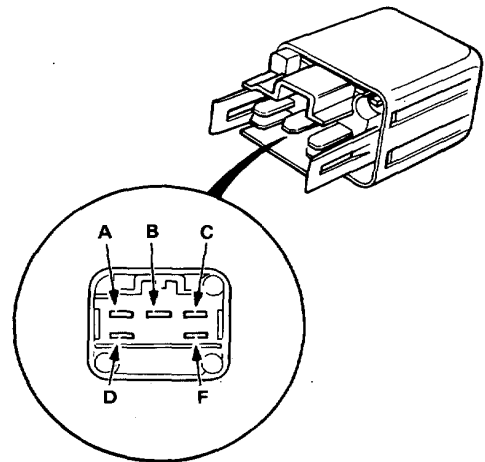

Gauge Assembly

Circuit Diagram

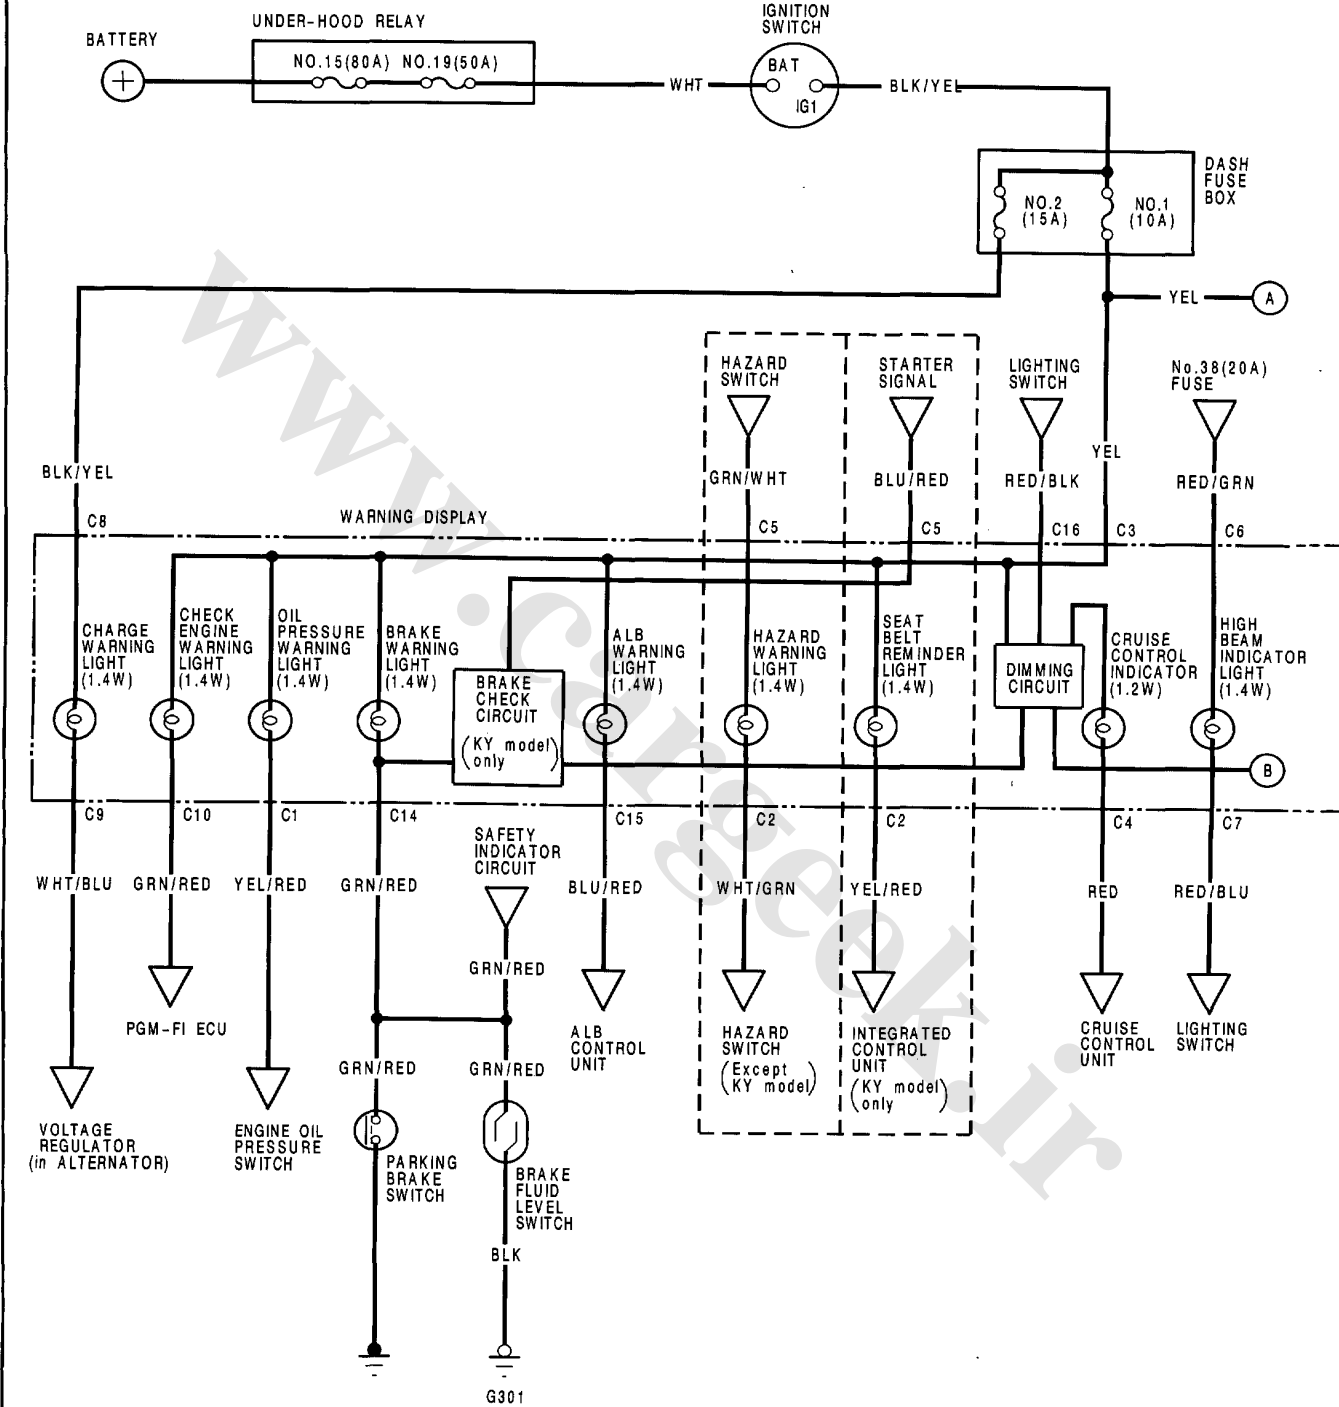




Sending Unit Test/Replacement


⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Remove the maintenance access cover.
2. With the ignition switch OFF, disconnect the 3-P connector from the fuel gauge sending unit.
3. Remove the fuel gauge sending unit.

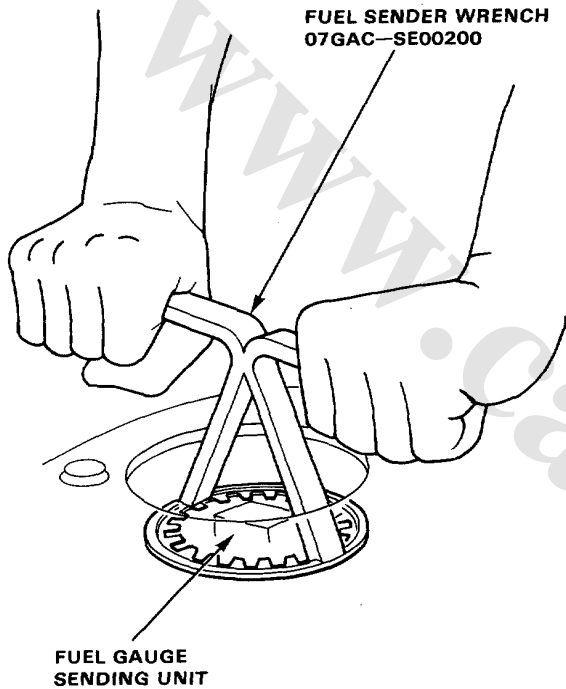

4. Measure resistance between the A and B terminals at E (EMPTY), 1/2 (HALF FULL) and F (FULL) by moving the float.

Float Position	E	1/2	F
Resistance (Ω)	105-110	25.5-39.5	2-5

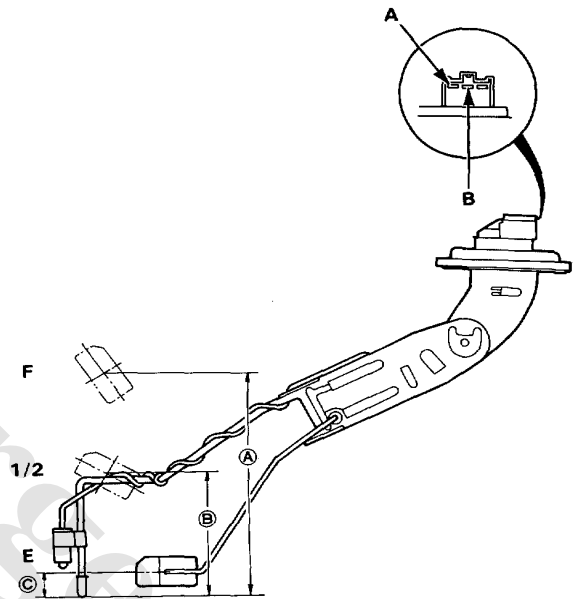

Float Position	A	B	C
With 4WS	121.5 mm (4.8 in)	70.0 mm (2.8 in)	17.0 mm (0.7 in)
Without 4WS	146.0 mm (5.7 in)	80.0 mm (3.1 in)	17.0 mm (0.7 in)

5. If unable to obtain the above readings, replace the fuel gauge sending unit.


Coolant Temperature Gauge

Gauge Test

NOTE:

- Refer to page 16-112 for wiring description of the coolant temperature gauge circuit.
- Check the No.1 (10 A) fuse in the dash fuse box before testing.

1. Make sure the ignition switch is OFF, then disconnect the RED wire from the coolant temperature gauge sender and ground it with a jumper wire.

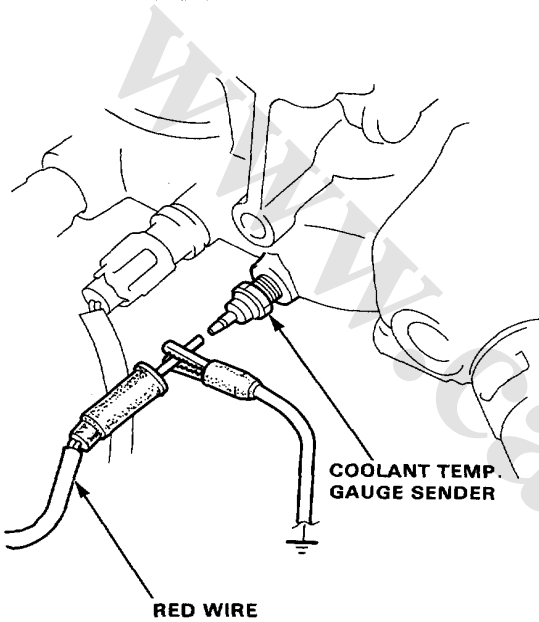

2. Turn the ignition switch ON. Check that the pointer of the coolant temperature gauge starts moving toward "H" mark.

CAUTION: Turn the ignition switch OFF before the pointer reaches "H" mark on the gauge dial. Failure to turn the ignition OFF quickly enough may cause damage to the gauge.


- If the pointer of the gauge does not swing at all, check for an open in the YEL or RED wire.

Replace the coolant temperature gauge if the fuse and wiring are normal.

- Inspect the gauge sender if the gauge is OK.

Sender Test

1. Disconnect the RED wire from the sender.
2. With the engine cold, use an ohmmeter to measure resistance between the positive terminal and the engine (ground).

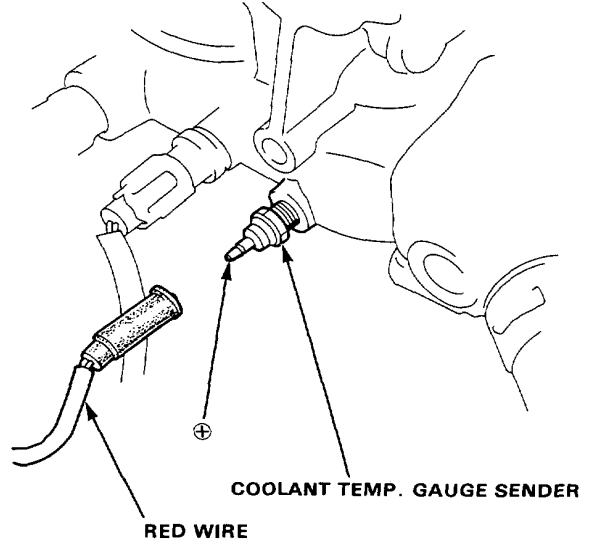

3. Check the temperature of the coolant.
4. Run the engine and measure the change in resistance with the engine at operating temperature (cooling fan comes on).

Temperature	56°C (133°F)	85°C (185°F) – ["C" mark]	100°C (212°F)
Resistance (Ω)	142	49 – 32	

5. If obtained readings are substantially different from specifications above, replace the gauge sender.


Fuel Gauge

Gauge Test

NOTE:

- Refer to page 16-112 for wiring description of the fuel gauge circuit.
- Check the No. 1 (10 A) fuse in the dash fuse box before testing.

1. Remove the maintenance access cover.
2. Disconnect the 3-P connector from the fuel gauge sending unit.

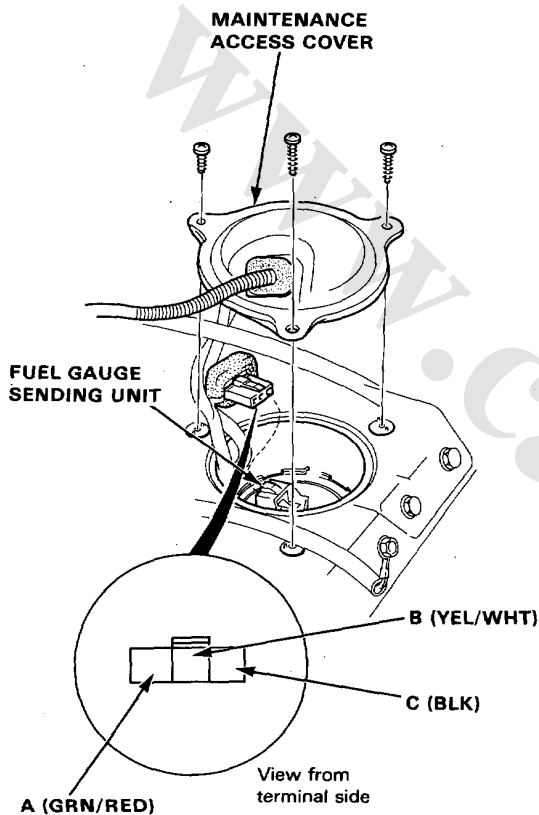

3. Connect the voltmeter positive probe to the B (YEL/WHT) terminal and the negative probe to the C (BLK) terminal, then turn the ignition switch ON. There should be between 5 and 8V.

- If the voltage is as specified, go to step 4.
- If the voltage is not as specified, check for:
 - An open in the YEL, YEL/WHT or BLK wire.
 - Poor ground (G401).

4. Turn the ignition switch OFF. Attach a jumper wire between the B (YEL/WHT) and C (BLK) terminals.

Turn the ignition switch ON. Check that the pointer of the fuel gauge starts moving toward "F" mark.


CAUTION: Turn the ignition switch OFF before the pointer reaches "F" mark on the gauge dial. Failure to turn the ignition switch OFF before the pointer reaches the "F" mark may cause damage to the fuel gauge.

NOTE: The fuel gauge is a bobbin (cross coil) type, hence the fuel level is continuously indicated even when the ignition switch is OFF, and the pointer moves more slowly than that of a bimetal type.

- If the pointer of the fuel gauge does not swing at all, replace the gauge.
- Inspect the fuel gauge sending unit if the gauge is OK.


Cooling Fan Control

Circuit Diagram (KY and KQ models)

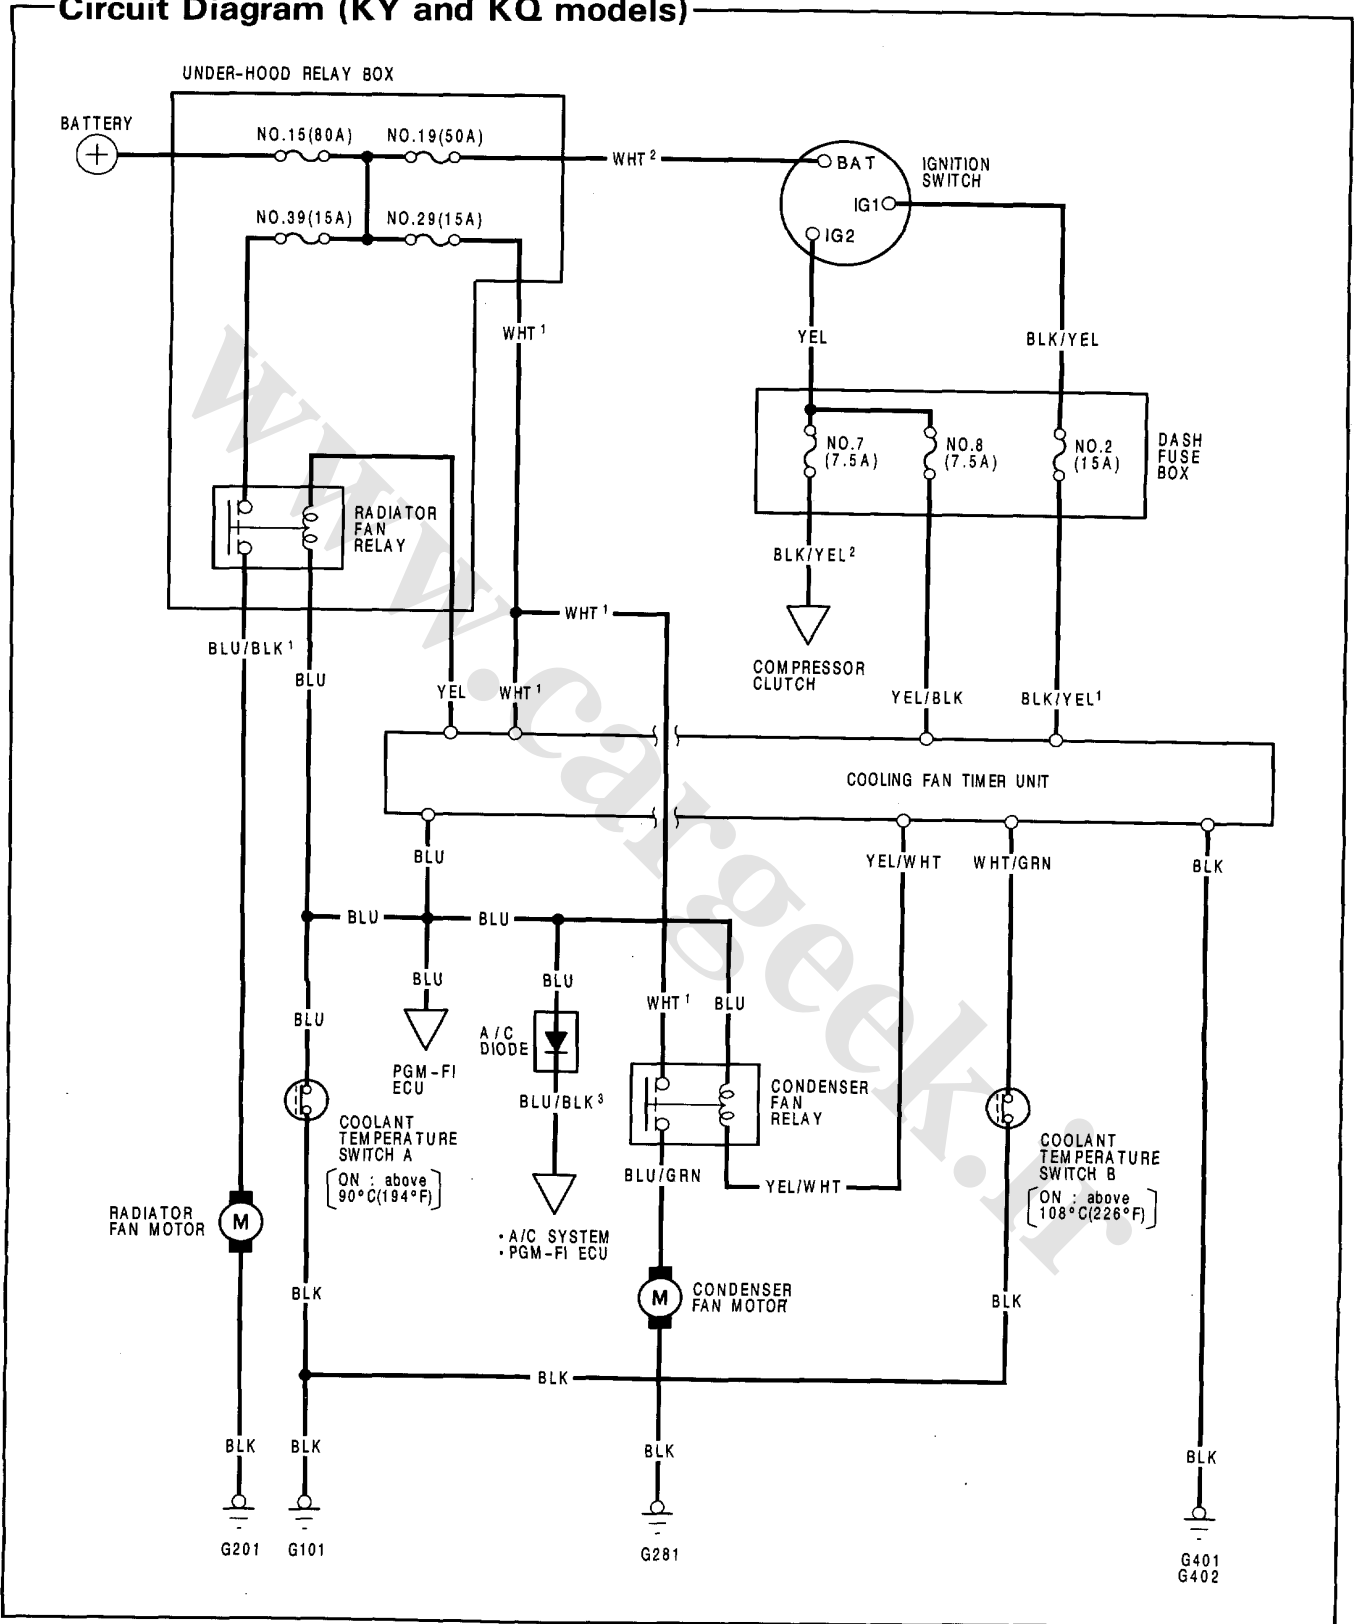




Circuit Diagram (Except KY and KQ models: With Fan Timer System)

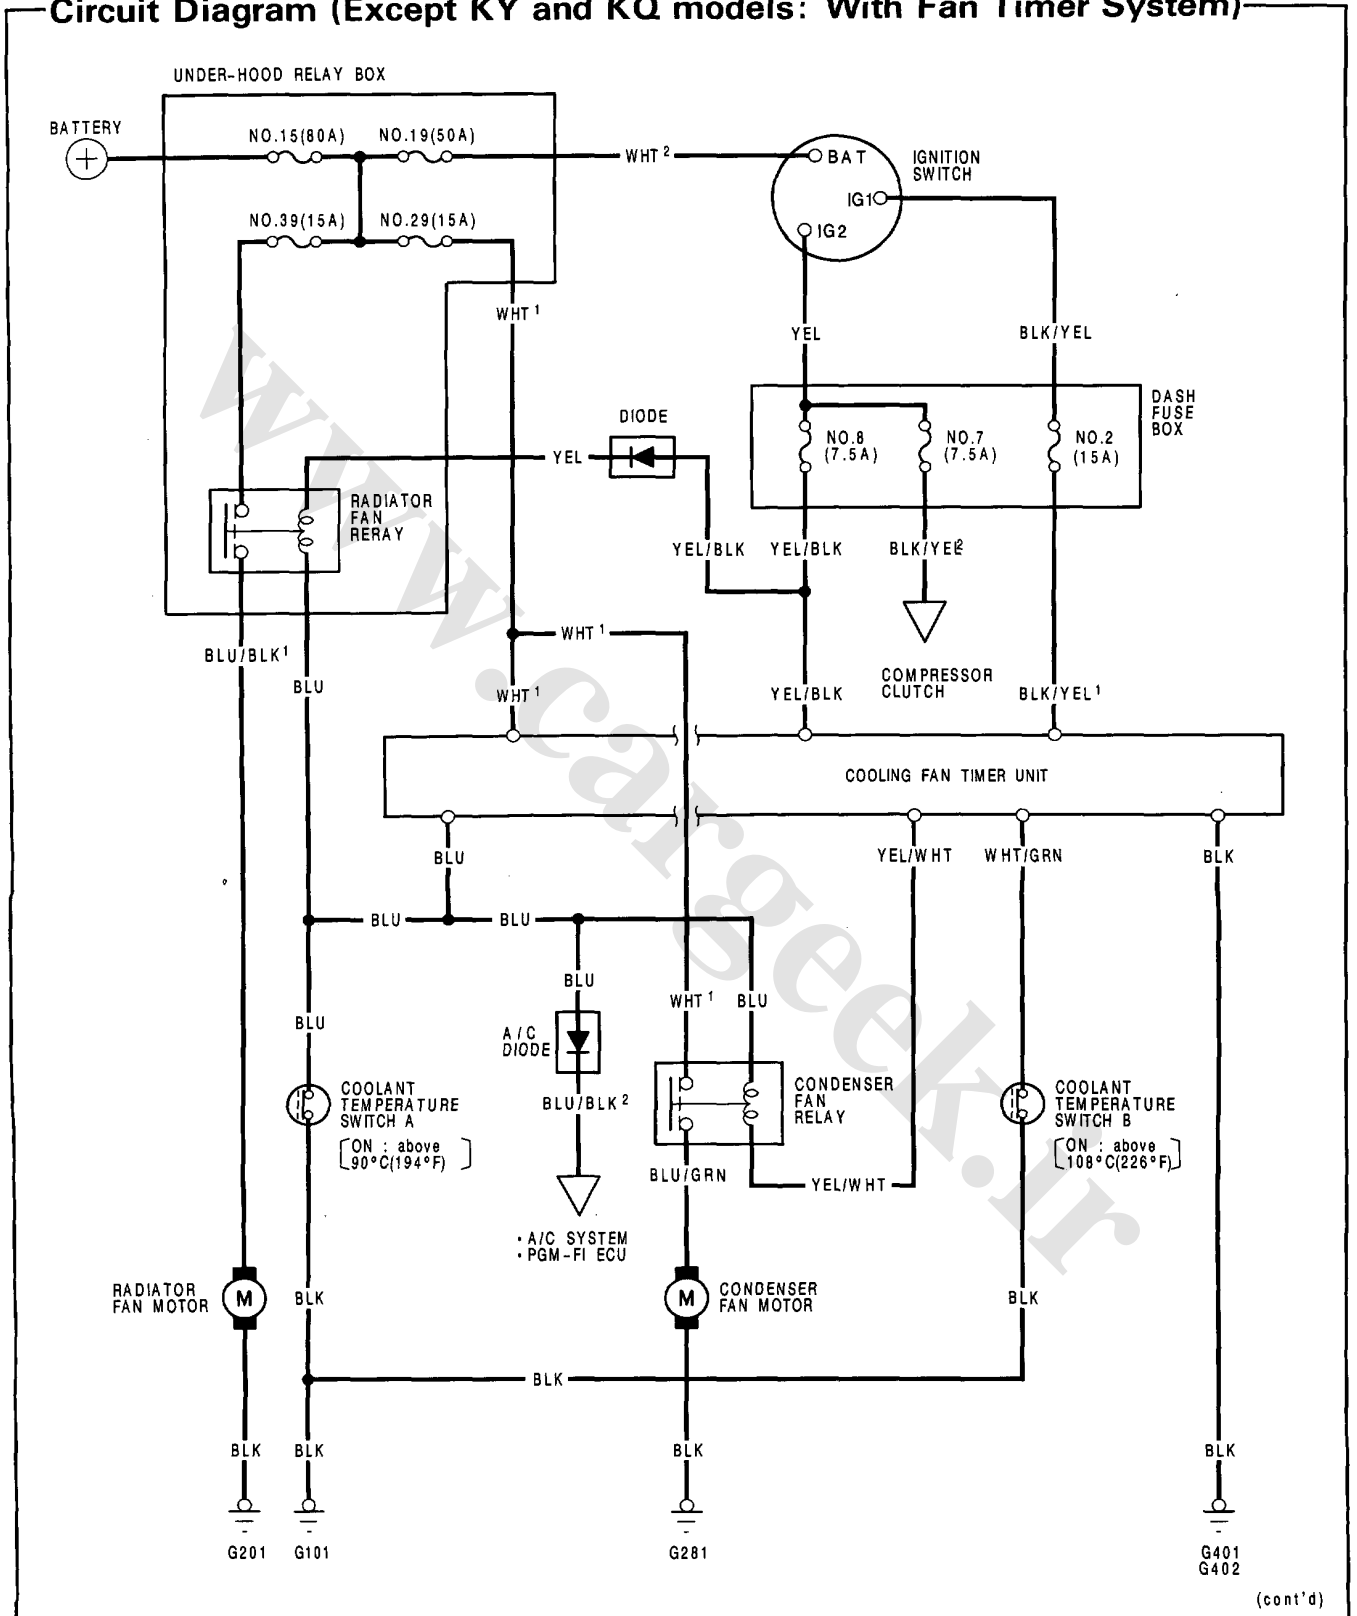

(cont'd)


Cooling Fan Control

Circuit Diagram (Except KY and KQ models: Without Fan Timer System)

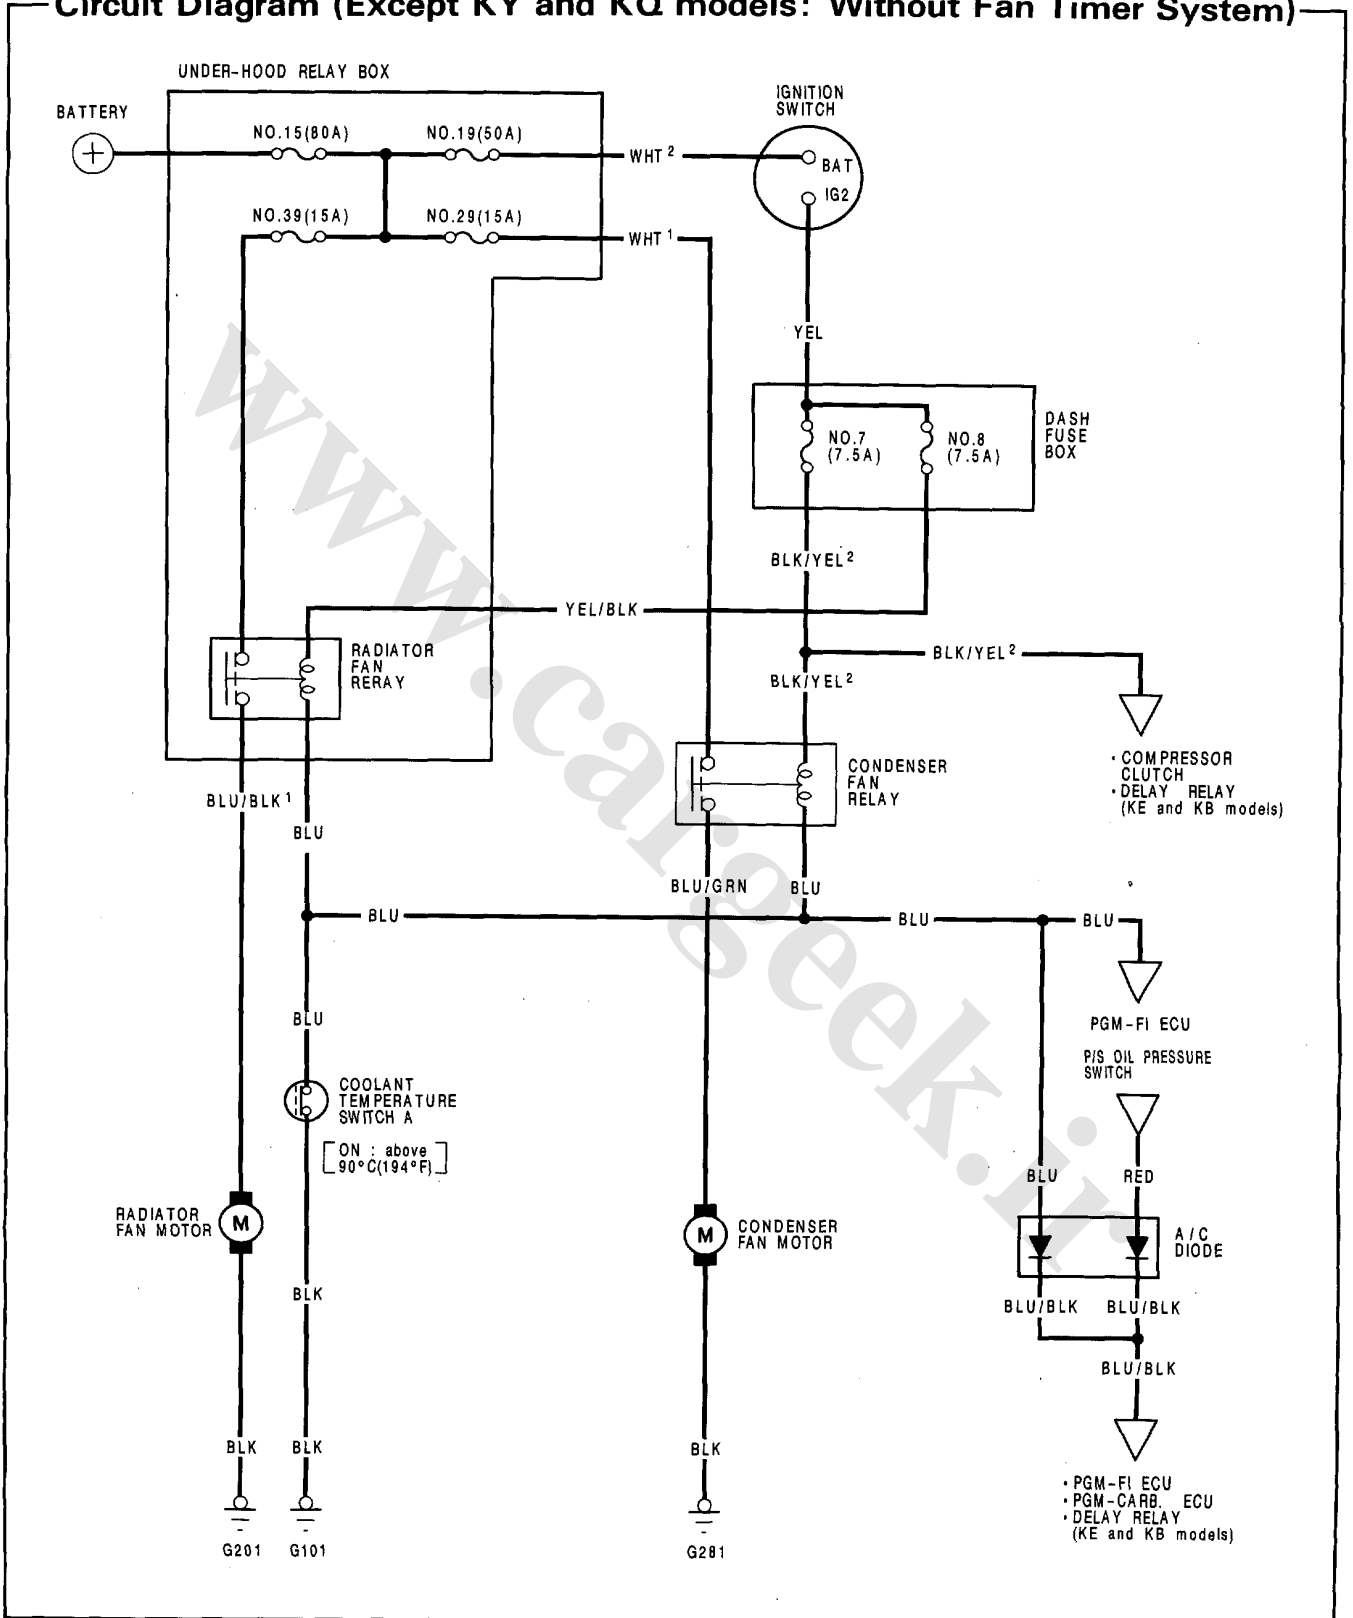



Circuit Diagram (Without A/C)

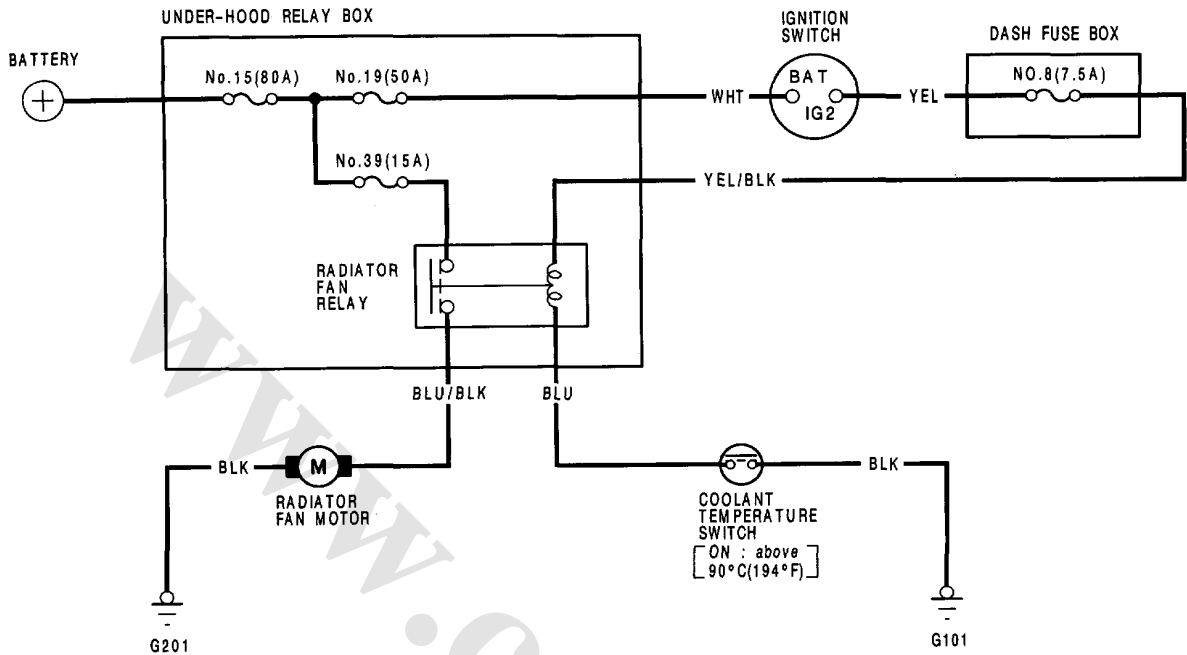


Troubleshooting (With A/C)

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected		Blown No. 29 (15 A) or No. 39 (15 A) fuse (in the under-hood relay box)	Radiator fan or condenser fan relay	Radiator fan or condenser fan motor	A/C diode	Blown No. 2 (15 A) fuse (in the dash fuse box)	Coolant temperature switch A	Faulty cooling fan timer unit	Coolant temperature switch B	A/C system	Poor ground	Open circuit in wires or loose or disconnected terminals
Symptom		1	2	3	4						G401 G402	BLU, BLU/BLK ¹ , BLU/BLK ² BLU/BLK ³ , BLU/YEL, YEL/BLK, YEL/WHT, BLU/GRN, YEL or WHT ¹
Fans do not rotate.	Under all conditions.					1	2	3			G101	YEL/BLK, YEL or BLU
	A/C ON									1		
Fan timer unit fails to function properly.								2	1		G401 G402	WHT ¹ , WHT/GRN or YEL/WHT

Cooling Fan Control

Timer Unit Terminals (With fan timer system)

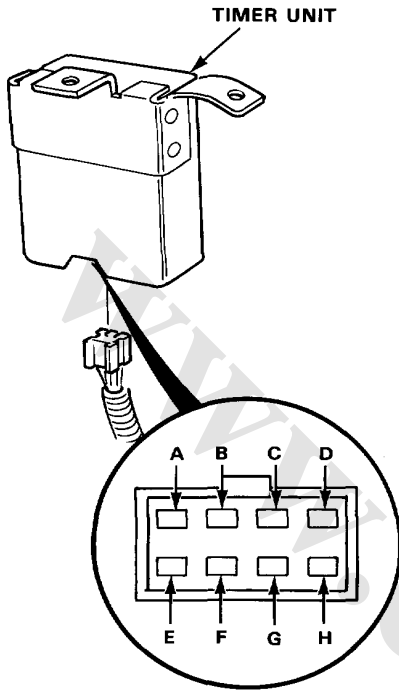

Terminal	Wire	Destination
A	YEL*1	Radiator fan relay ⊕
	YEL/WHT*2	Condenser fan relay ⊖
B	YEL/BLK	Power supply (For condenser fan relay by way of timer unit with ignition switch ON)
	WHT/YEL*1	Condenser fan relay ⊖
C	*2	(Not used)
	BLK	Ground
E	WHT/GRN	Coolant temperature switch B
F	WHT	Constant power (For condenser fan relay by way of timer unit)
G	BLK/YEL	IG1 (Timer reset signal)
H	BLU	Condenser fan relay ⊕


* 1: KY and KQ models

* 2: Except KY and KQ models


Fan Motor Test

1. Disconnect the 2-P connector from the fan motor.
2. Test motor operation by connecting battery positive to the A terminal, and negative to the B terminal.
3. If the motor fails to run smoothly, replace it.

Radiator Fan Motor:

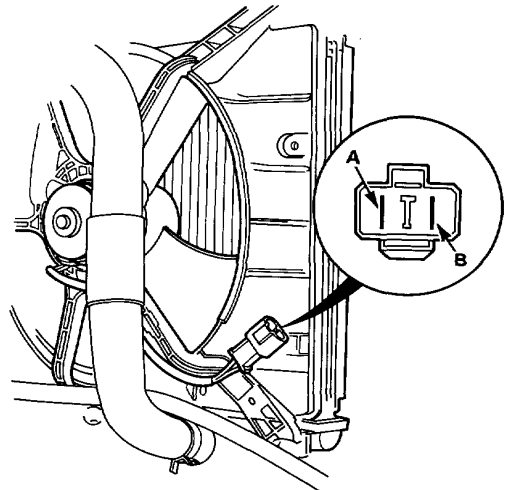

Condenser Fan Motor:

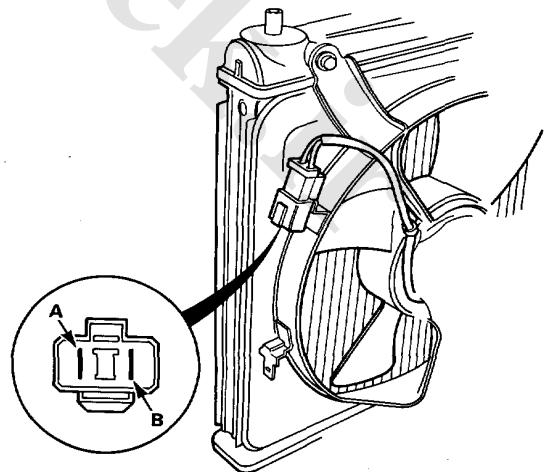




Relay Test


There should be continuity between the A and B terminals when the battery is connected to the C and D terminals. There should be no continuity when the battery is disconnected.

NOTE: Test procedures are same for all relays.

RADIATOR FAN RELAY (in the relay box)

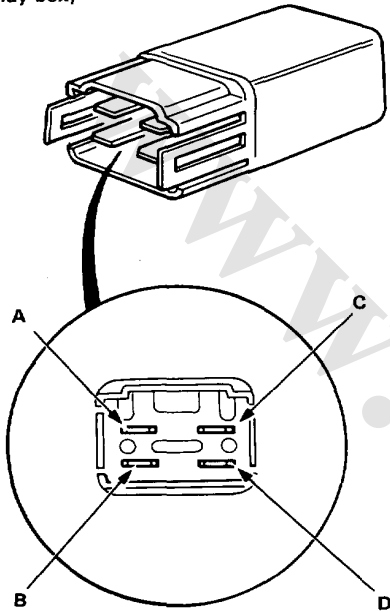


CONDENSER FAN RELAY (With A/C)

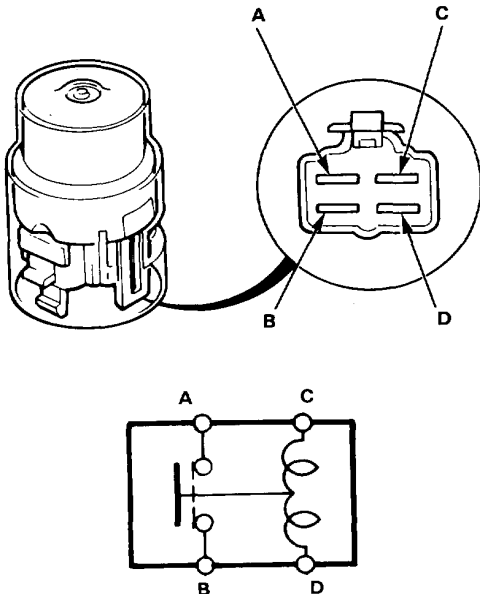

Coolant Temperature Switch Test

1. Remove the coolant temperature switch A from the thermostat housing or the switch B from the water outlet cover.
2. Suspend the coolant temperature switch in a container of coolant as shown.

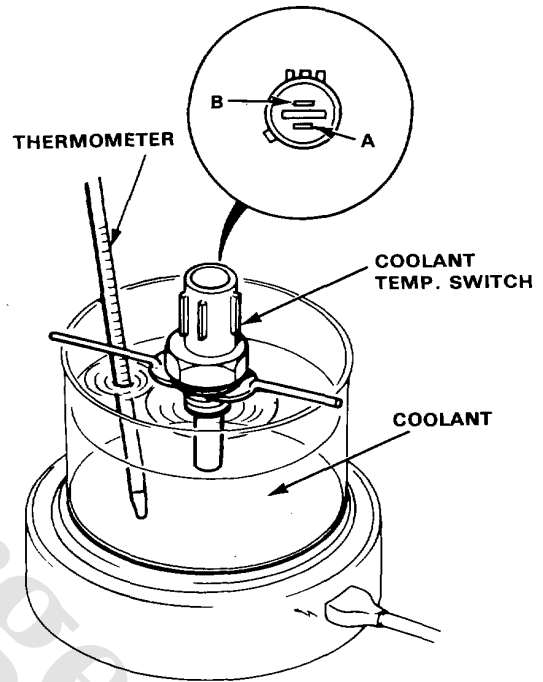

3. Heat the coolant and check coolant temperature with a thermometer.
4. Measure the resistance between the A and B terminals according to the table.

		Terminal	
Temperature		A	B
Switch A	Above	87–93°C (189–199°F)	○—○
	Below	80–91°C (176–196°F)	
Switch B	Above	105–111°C (221–232°F)	○—○
	Below	98–109°C (208–228°F)	

Gauge Assembly

Component Location Index

FUEL SENDER UNIT
Test, page 16-126
Replacement, page 16-127

GAUGE ASSEMBLY
Gauge Location Index, page 16-111
Bulb Location, page 16-104
Disassembly, page 16-118
Removal, page 16-120
Beeper Test (ND), page 16-120


BRAKE FLUID LEVEL SWITCH
Description, page 16-124
Test, page 16-124

PARKING BRAKE SWITCH
Description, page 16-124
Test, page 16-124

OIL PRESSURE SWITCH
Test, page 16-125

COOLANT TEMPERATURE GAUGE
Test, page 16-128

SPEED SENSOR
(Located under the thermostat housing)
Input Test, page 16-122
Replacement, page 16-123
Troubleshooting, page 16-121

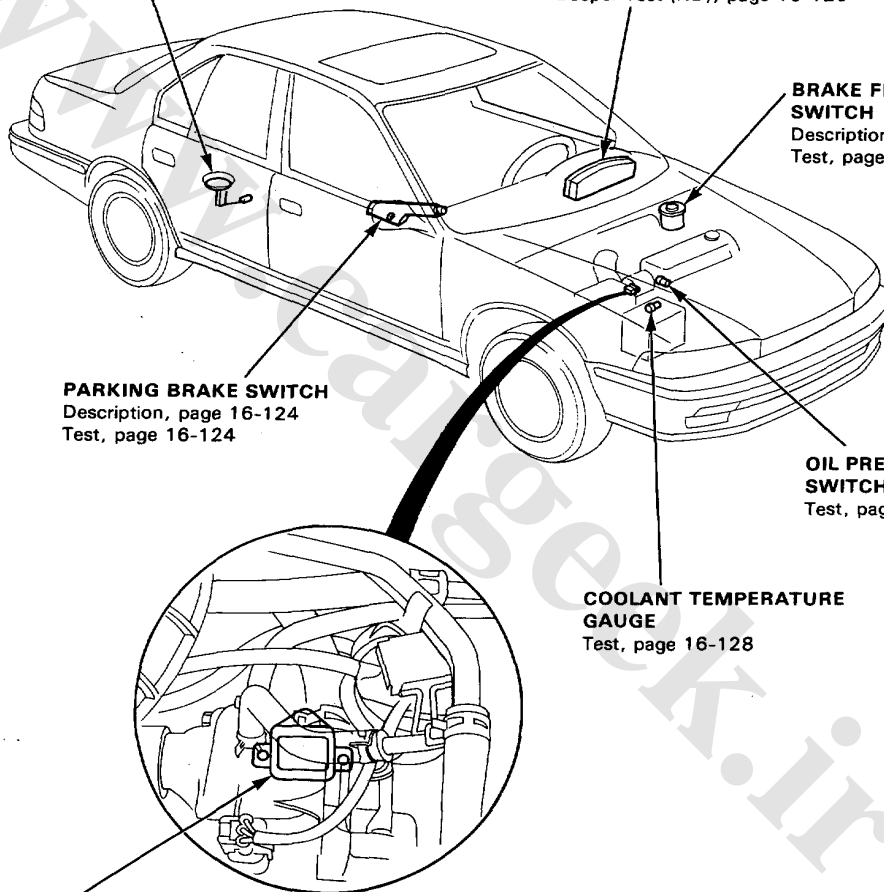



Gauge Location Index

ND:

COOLANT TEMPERATURE GAUGE

Gauge Test, page 16-128
Sender Test, page 16-128

SPEEDOMETER


Indicates 60 km/h [60 mph]
at 637 [1,026] min⁻¹ (rpm)
of the speed sensor.

TACHOMETER

Indicates 100 min⁻¹ (rpm) at 200
pulses per minute of
the igniter unit.

FUEL GAUGE

Gauge Test, page 16-126
Sending Unit Test/Replacement, page 16-127

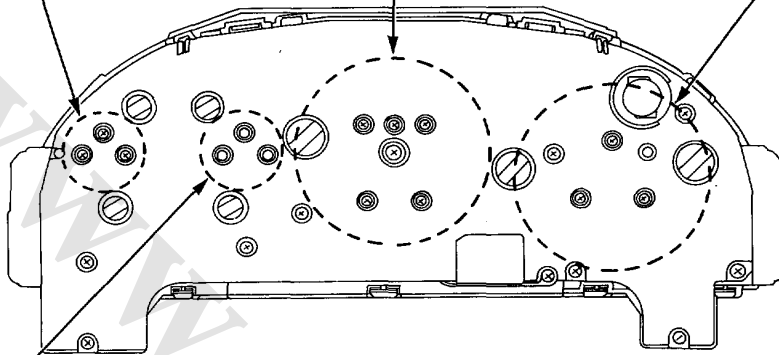

NS:

COOLANT TEMPERATURE GAUGE

Gauge Test, page 16-128
Sender Test, page 16-128

SPEEDOMETER

Indicates 60 km/h [60 mph]
at 637 [1,026] rpm of
the speed sensor.

TACHOMETER


Indicates 100 min⁻¹ (rpm) at 200
pulses per minute of
the igniter unit.

FUEL GAUGE

Gauge Test, page 16-126
Sending Unit Test/Replacement,
page 16-127

SPEED ALARM CIRCUIT (KY model)


Beeper sounds when speed exceeds 106 ± 4 km/h.

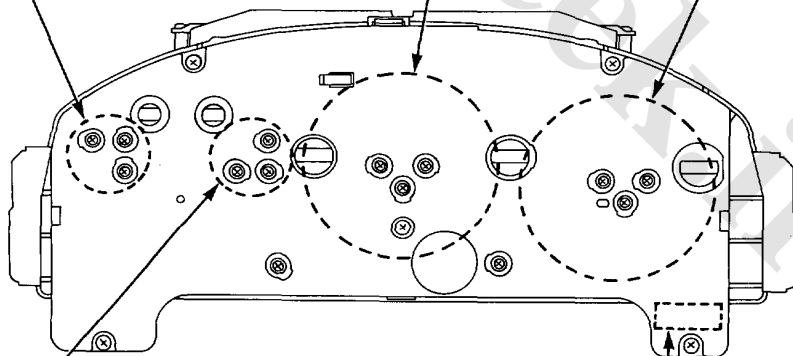




ALB Fuse Box

NOTE: ALB fuse box is located right side, engine compartment.

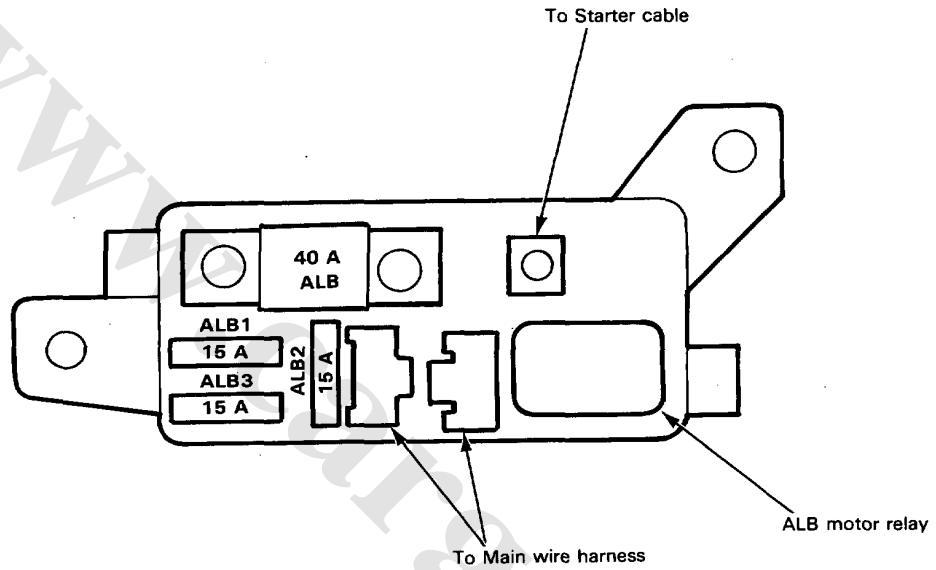

Power Distribution


Circuit Identification

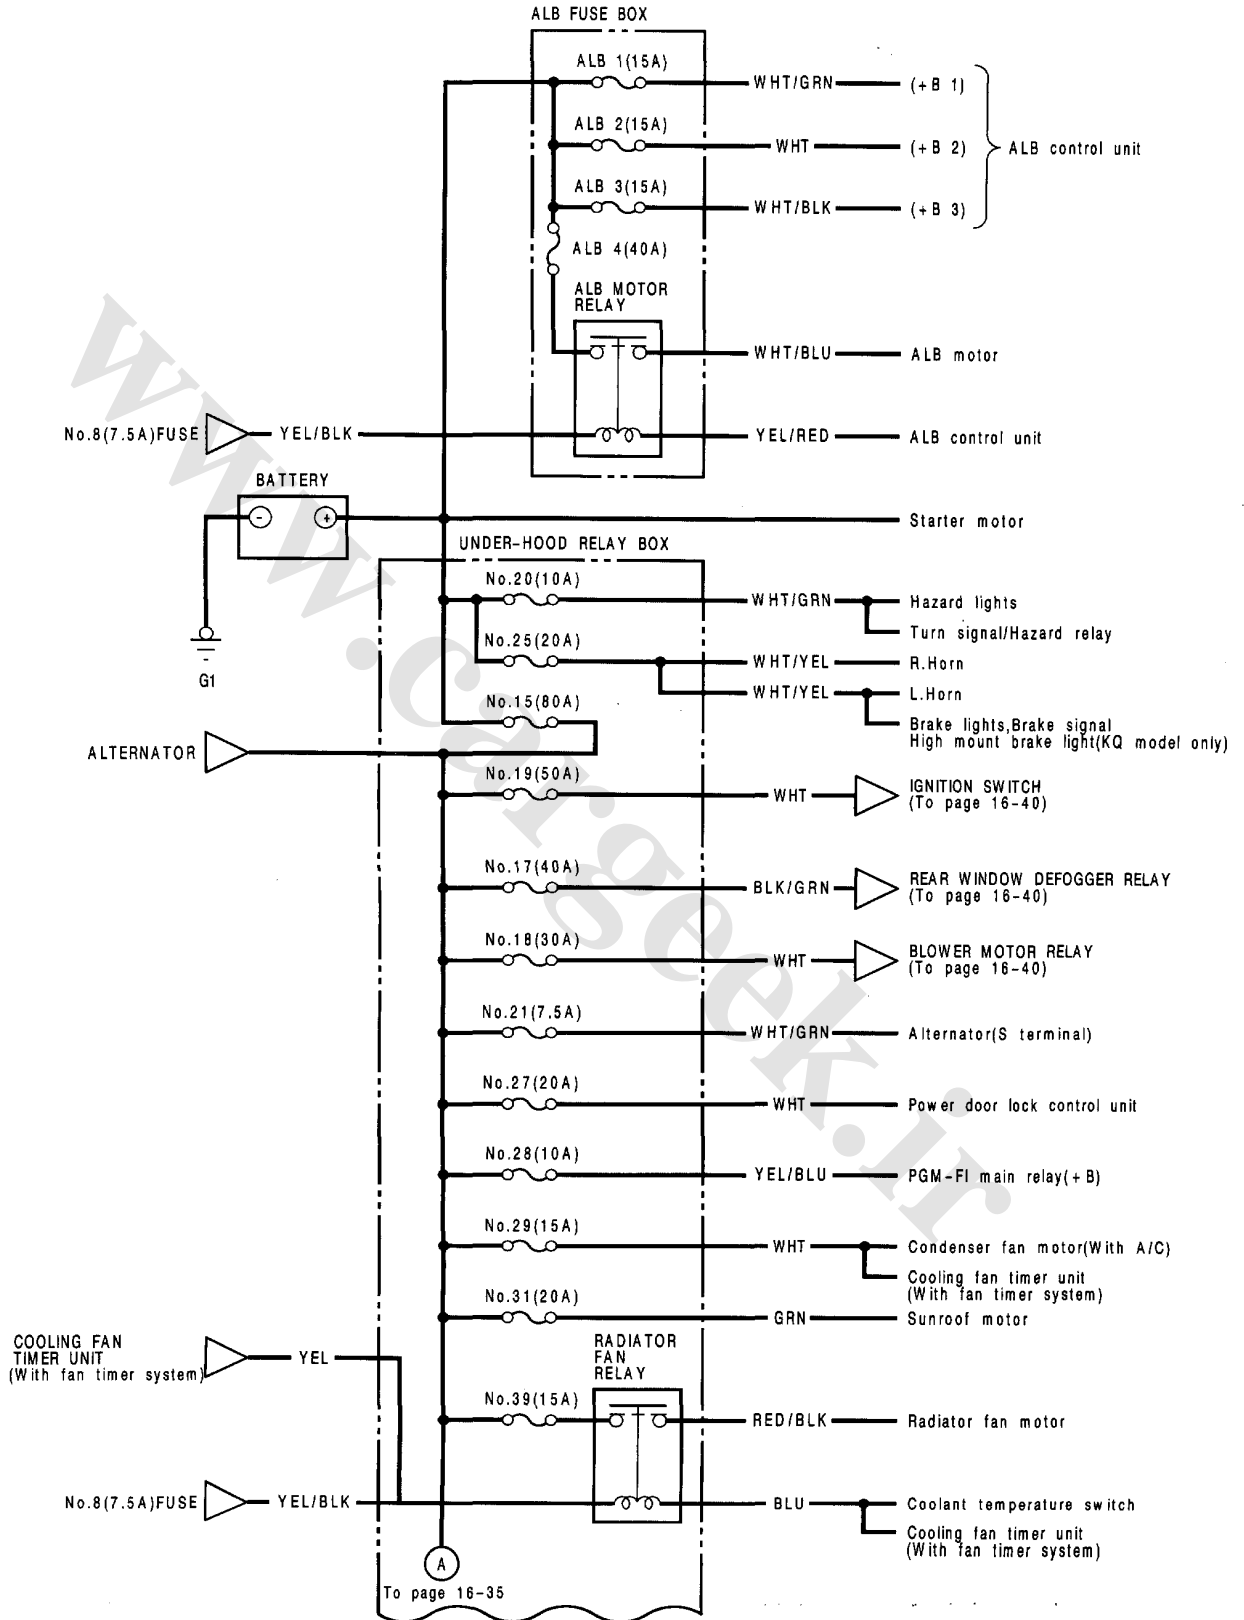



UNDER-HOOD RELAY BOX

From page 16-34

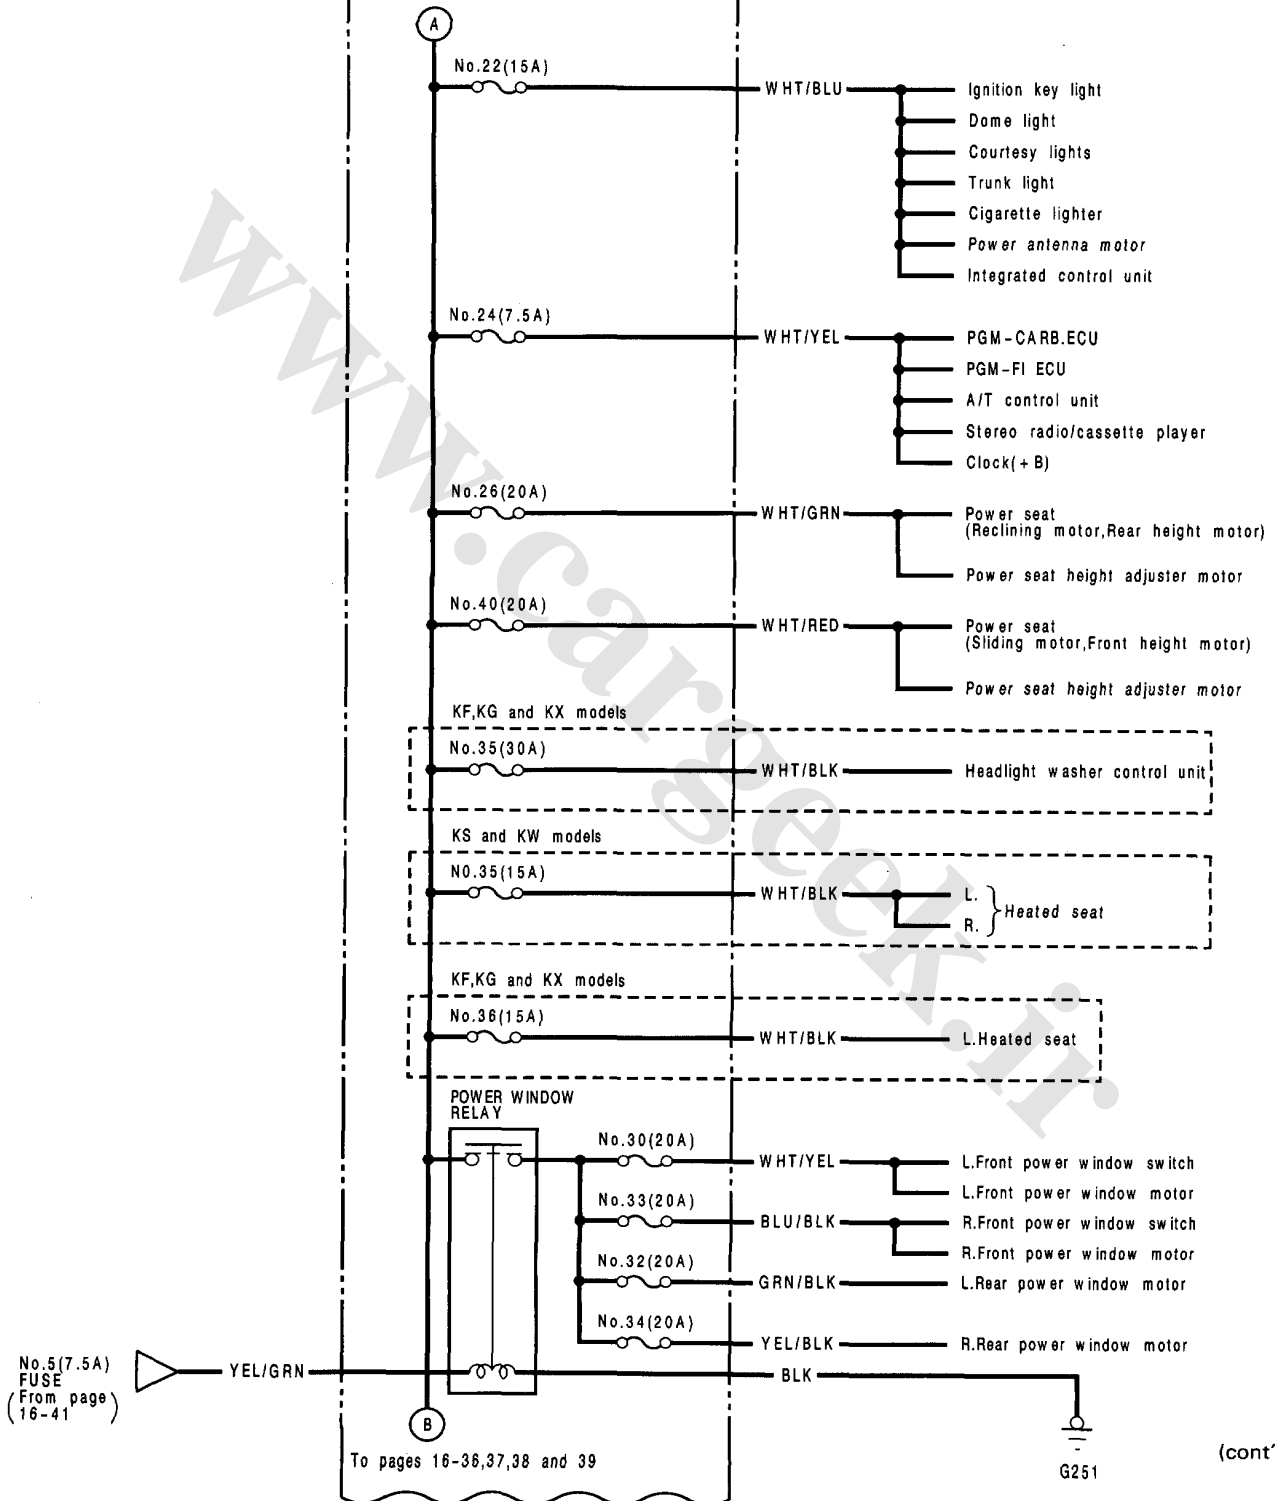


To pages 16-36, 37, 38 and 39

(cont'd)

Power Distribution


Circuit Identification (cont'd)

KF, KG, KB and KX models:

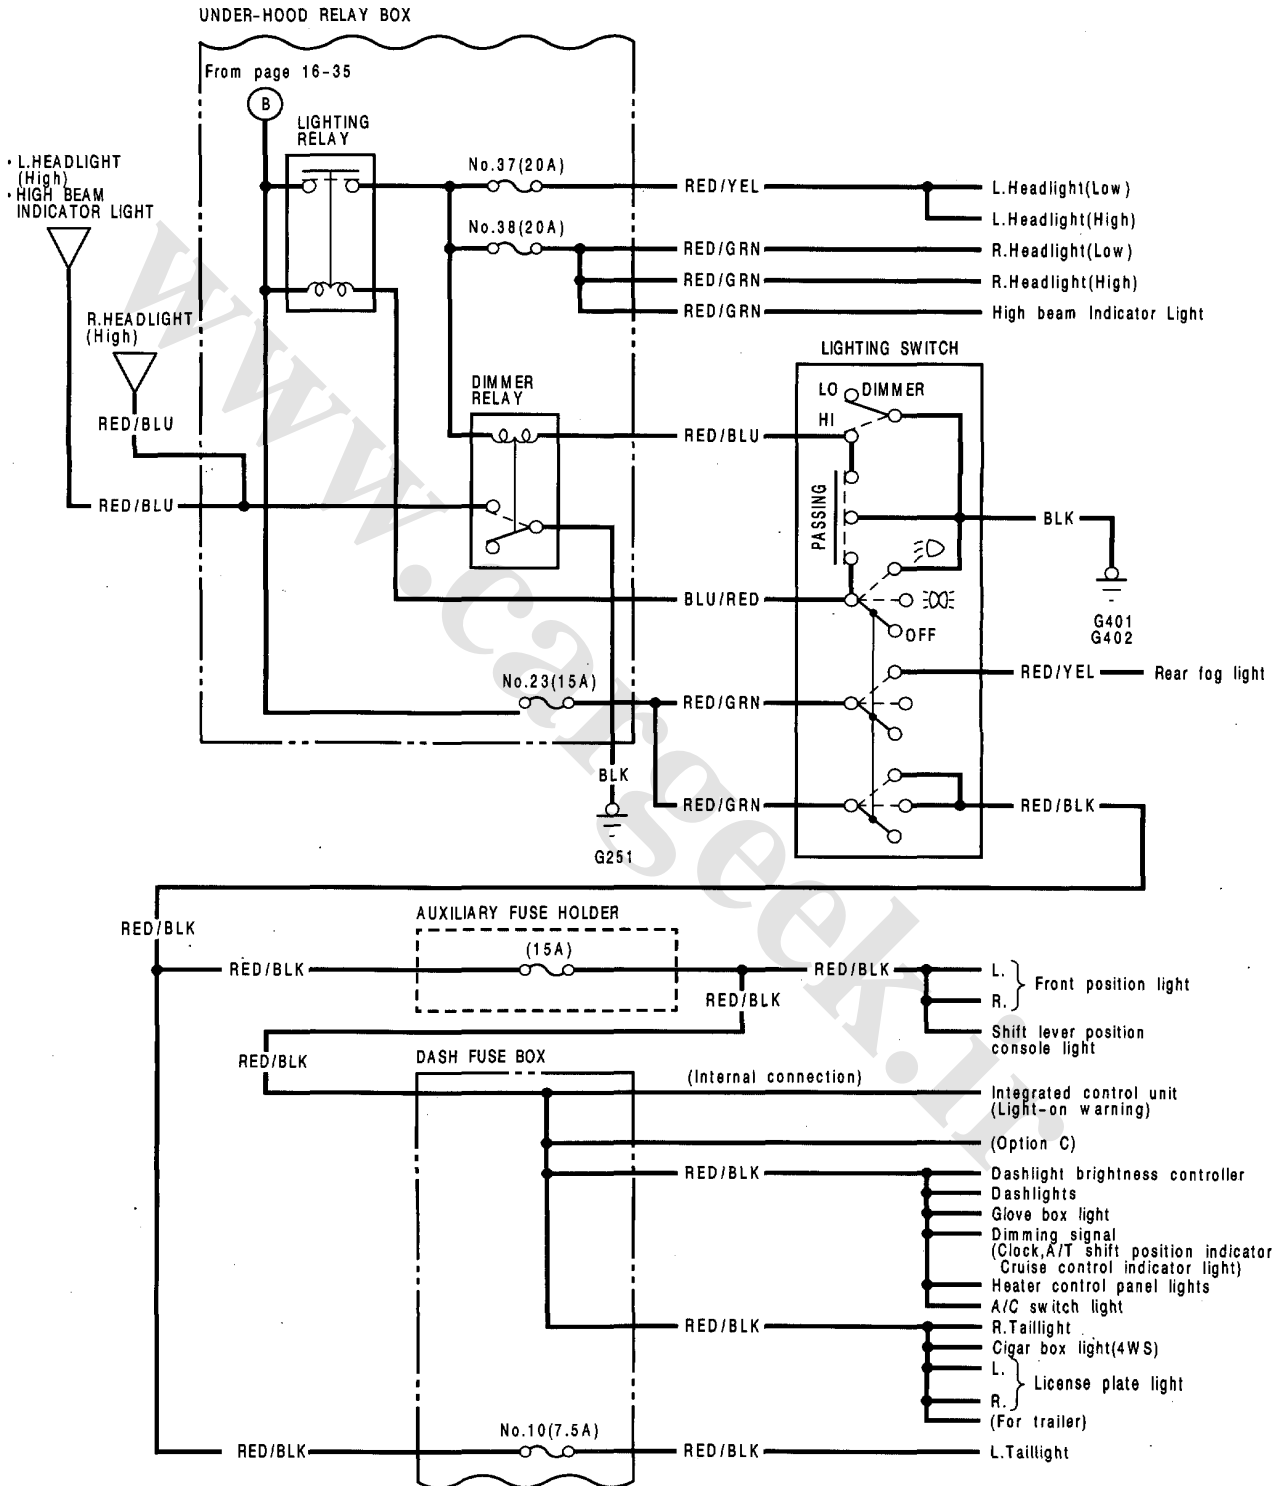



KY, KQ, KP and KT models:

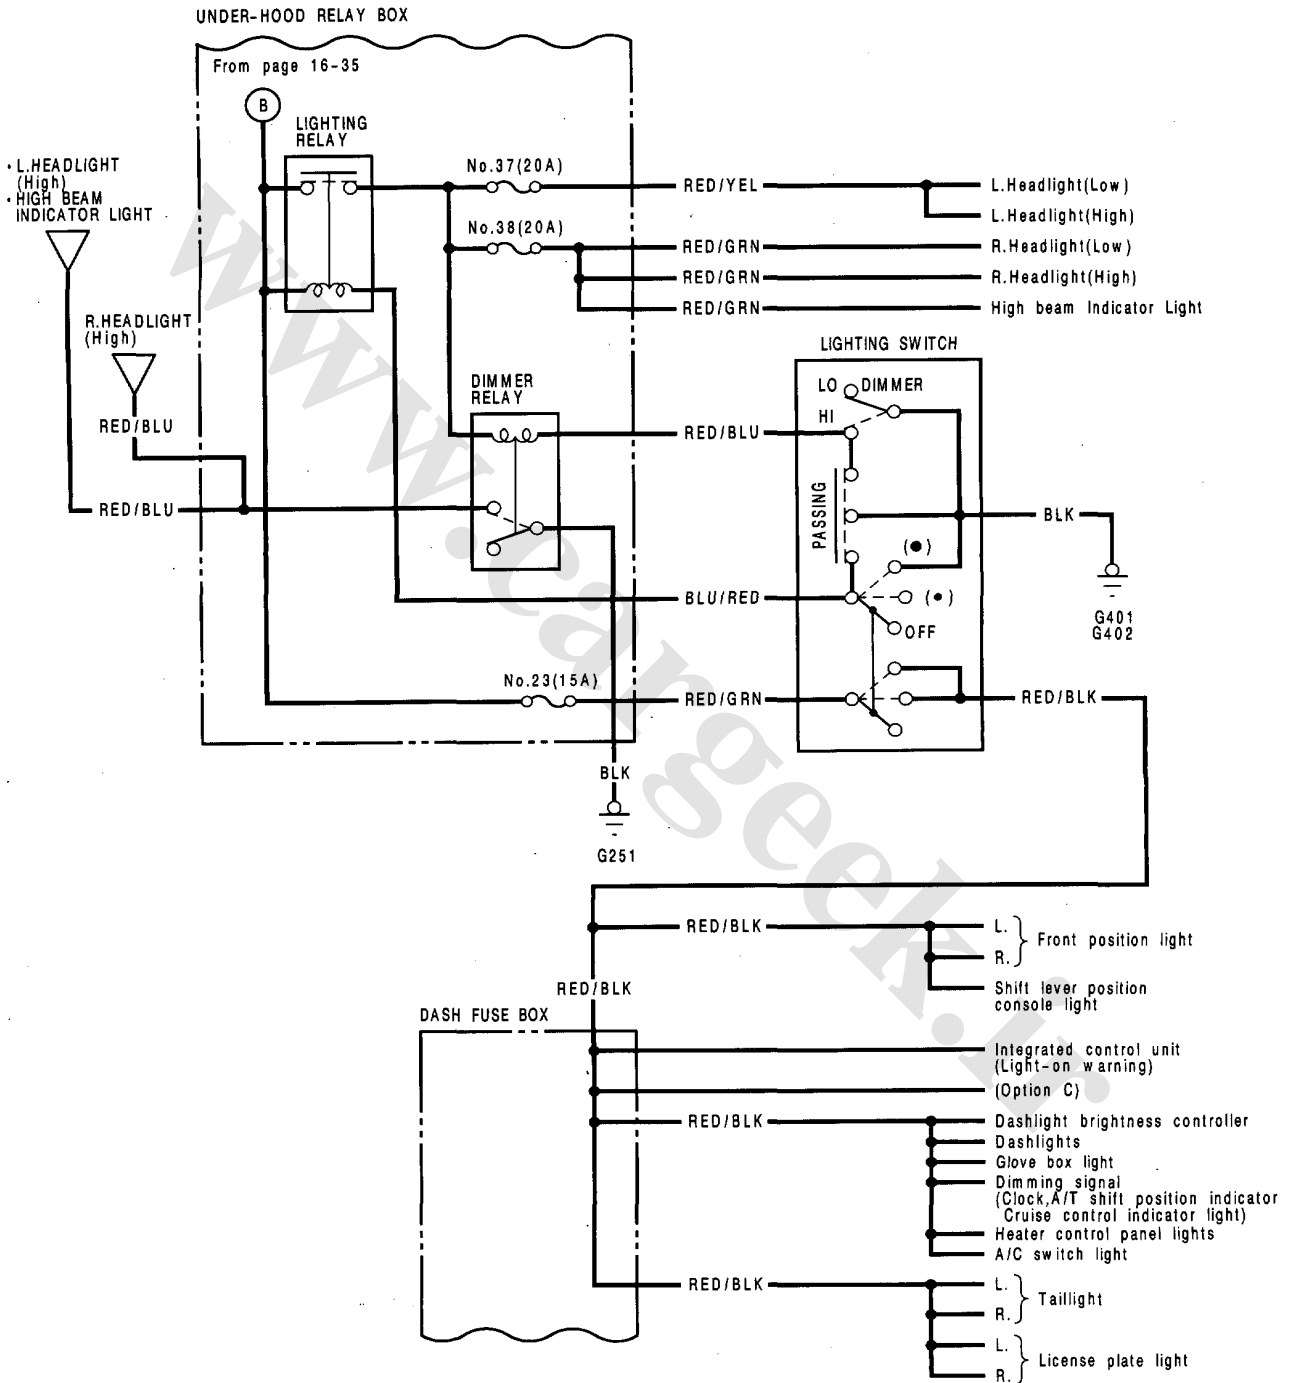


(cont'd)

Power Distribution


Circuit Identification (cont'd)

With Daytime Light:

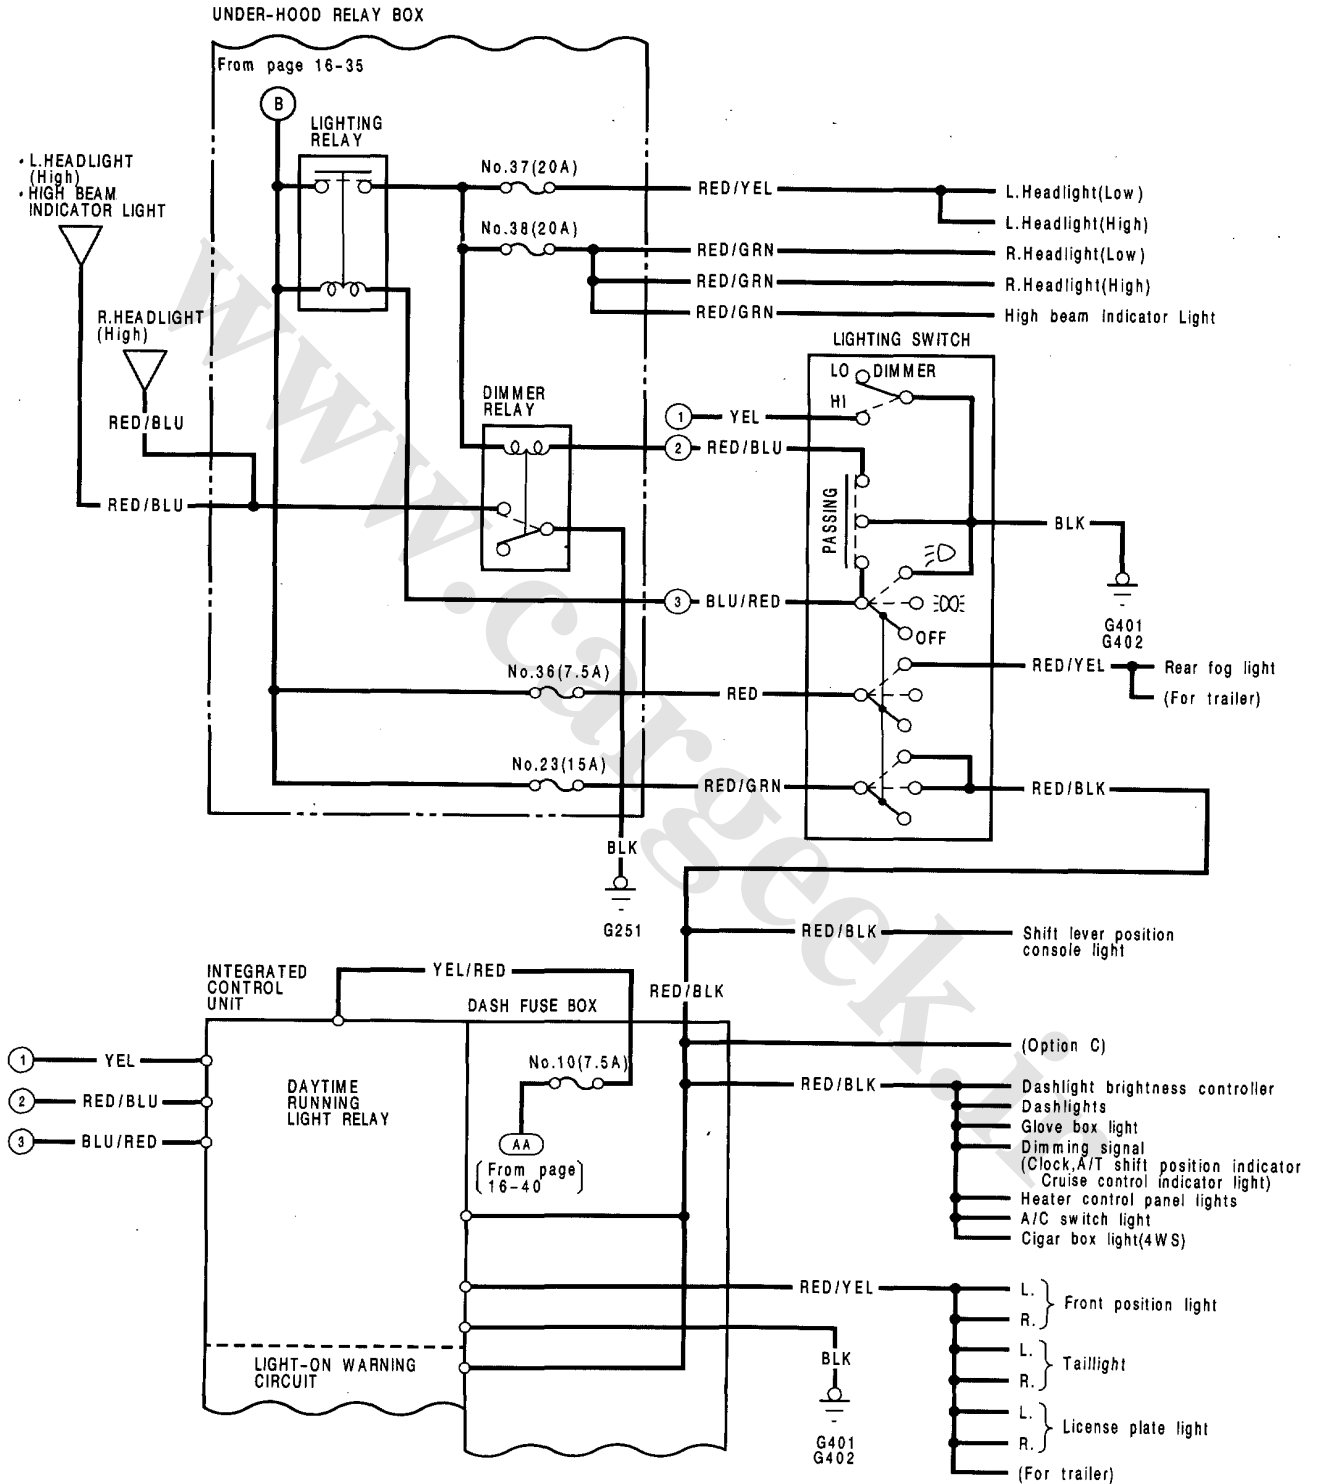





With Dim-Dip Light:

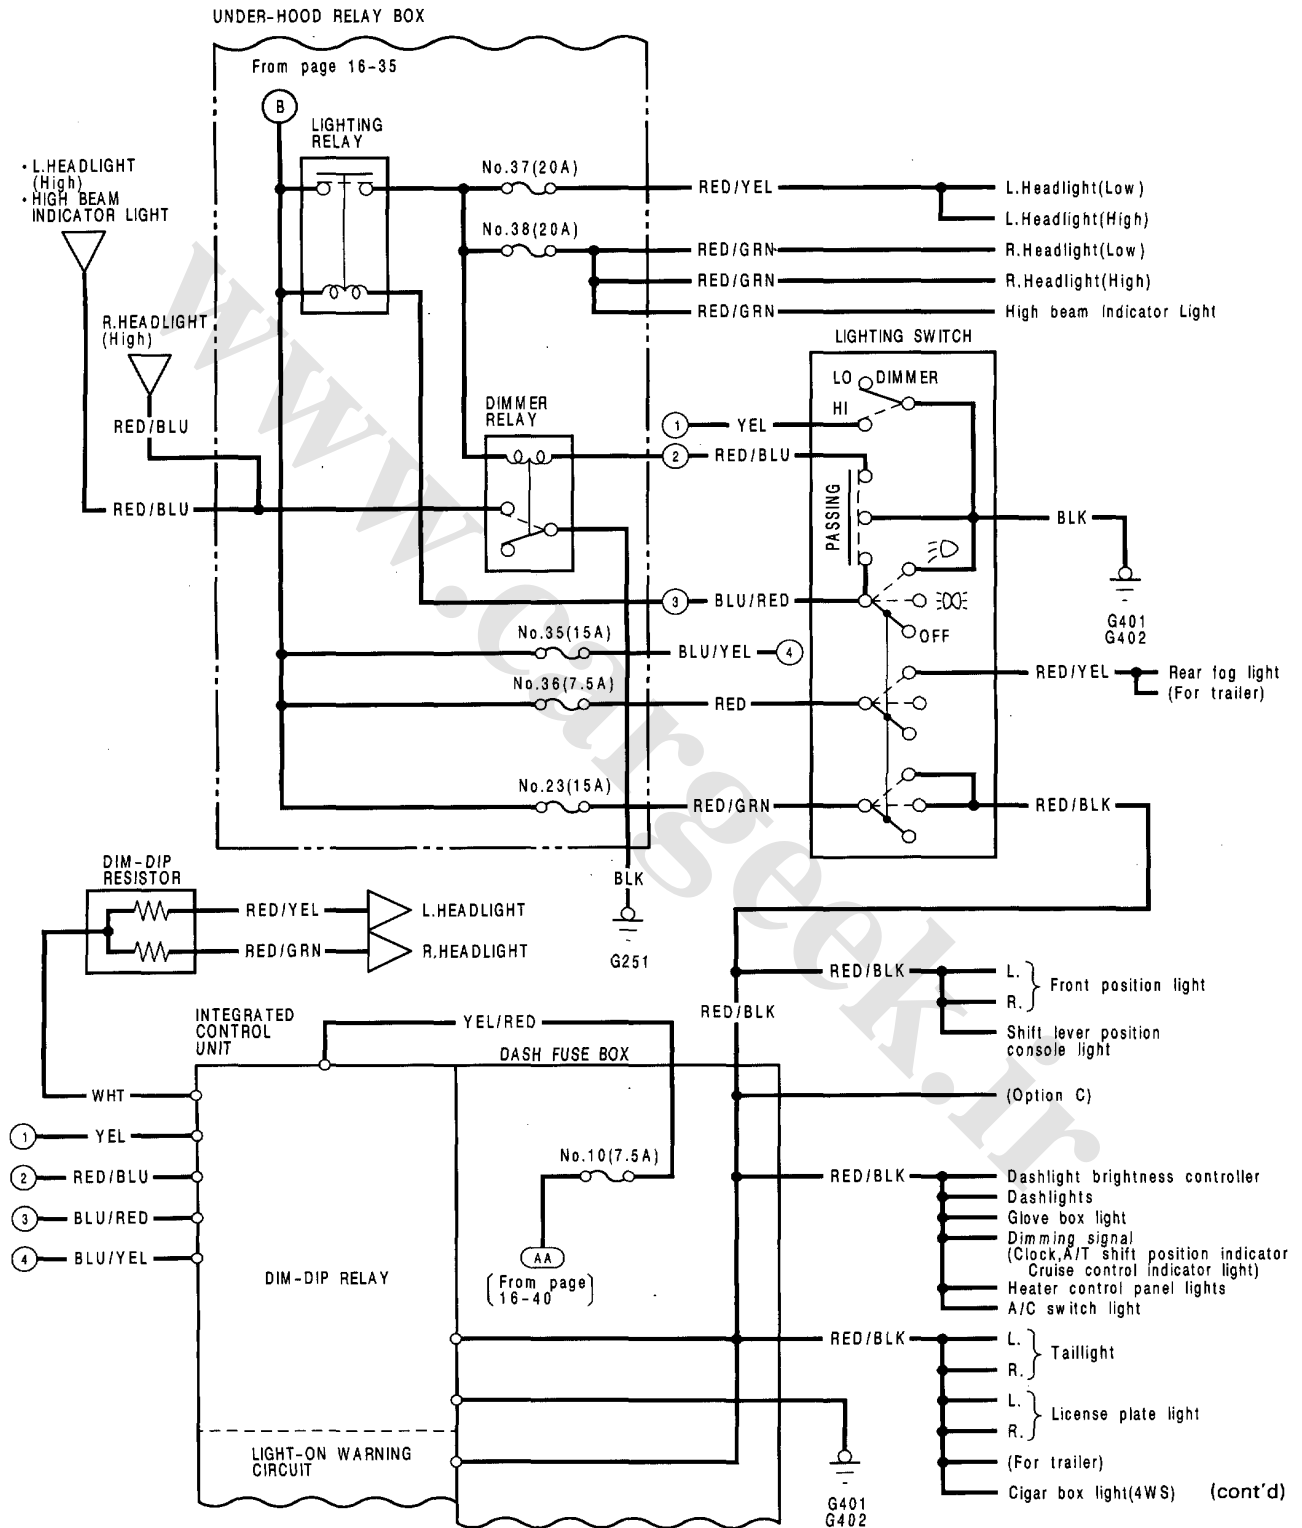

Power Distribution


Circuit Identification (cont'd)

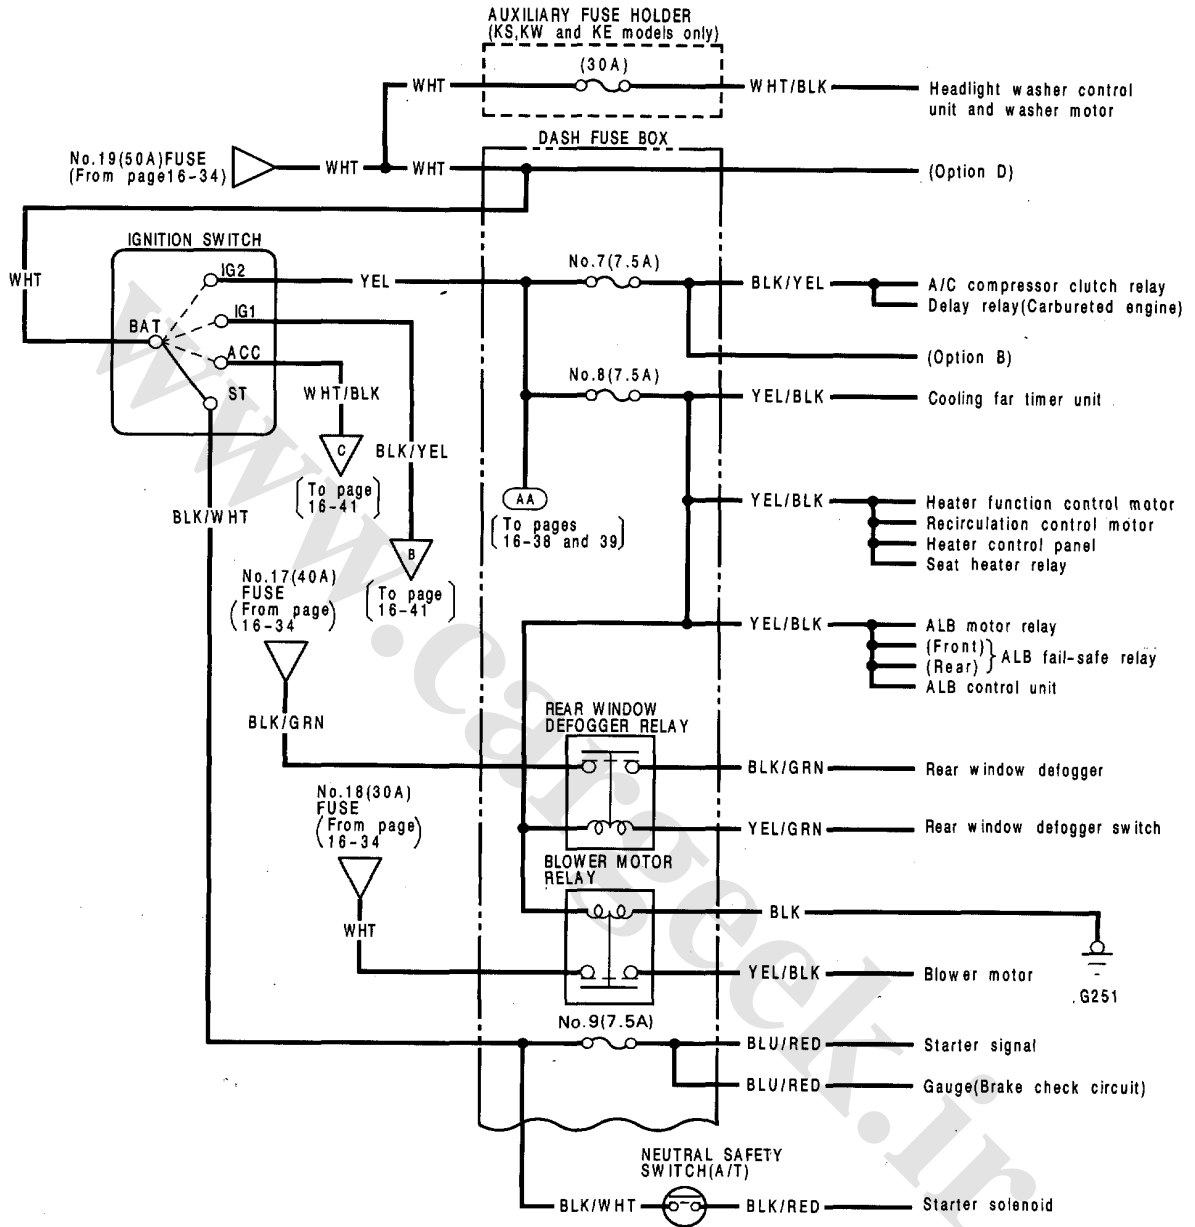


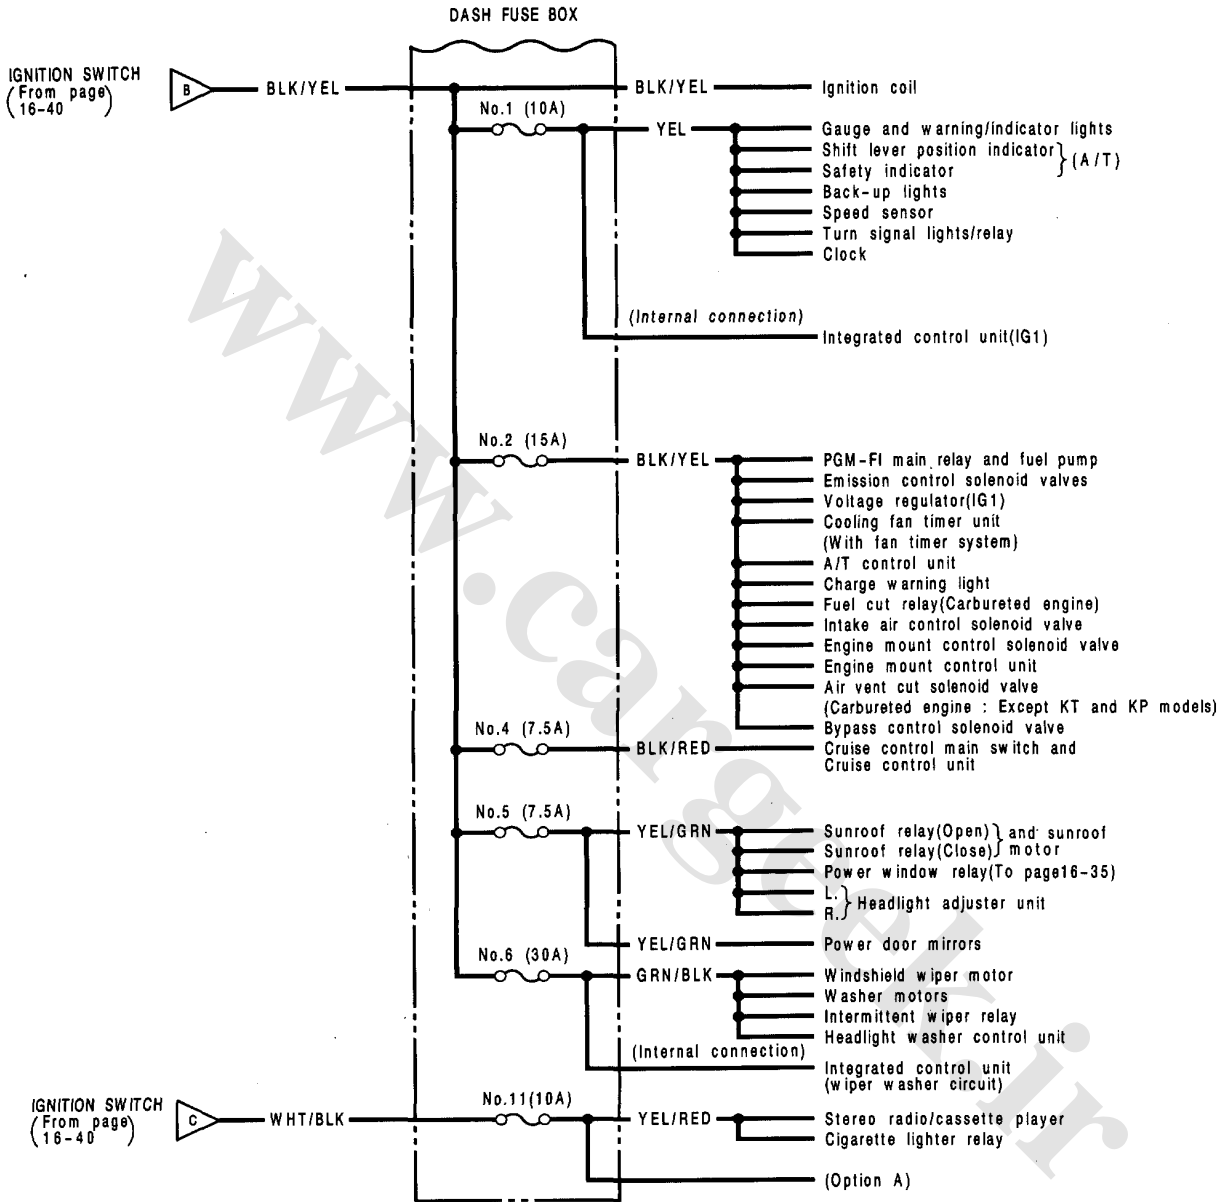

Ground Distribution

Circuit Identification

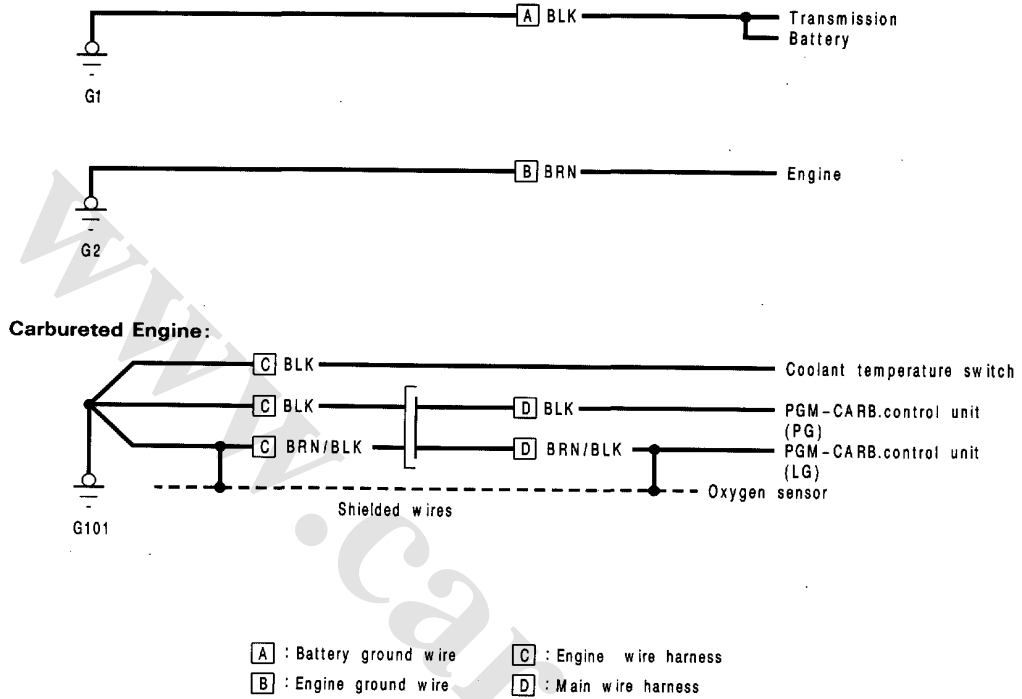


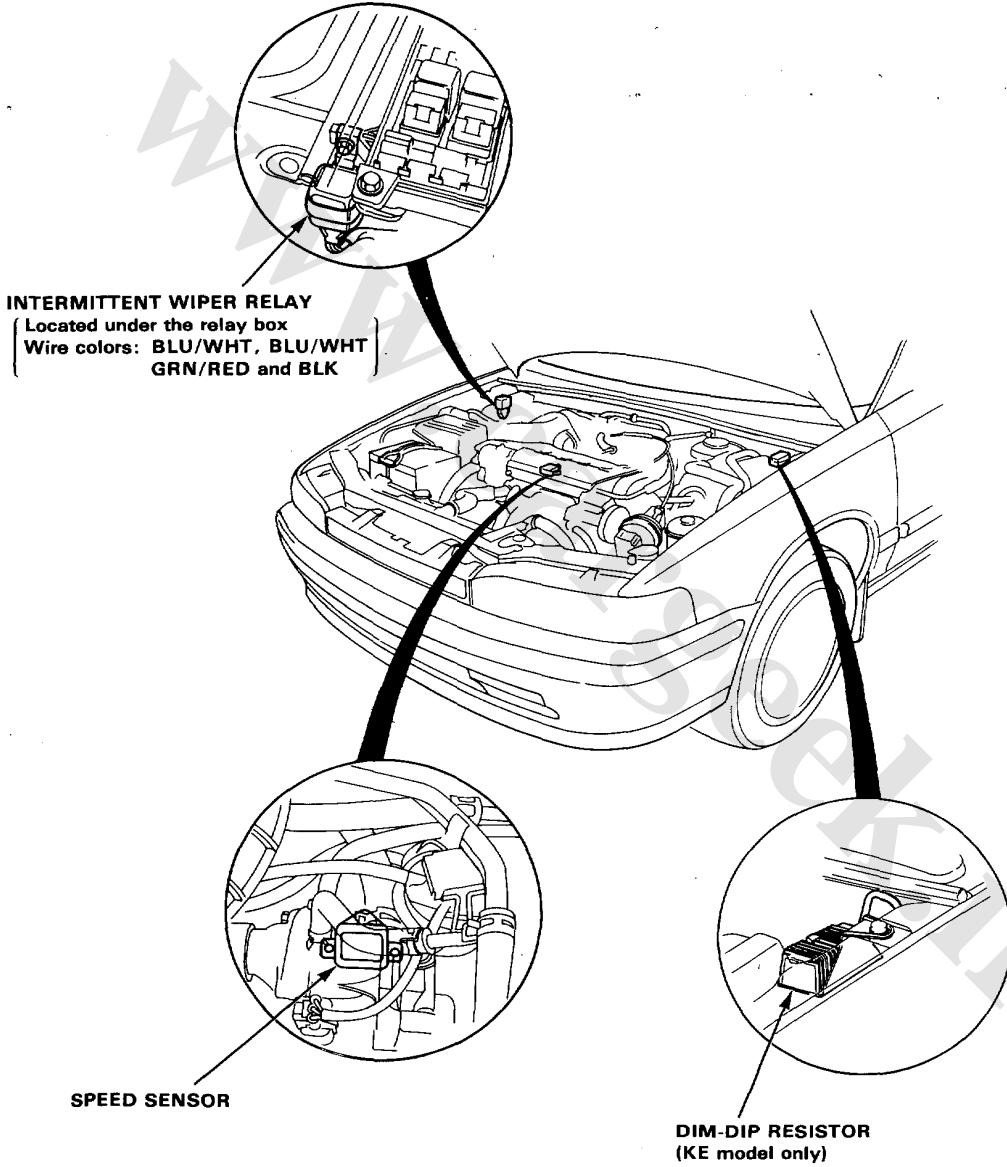

Relays and Control Unit Locations


Dashboard

NOTE: RHD type is symmetrical to LHD type.

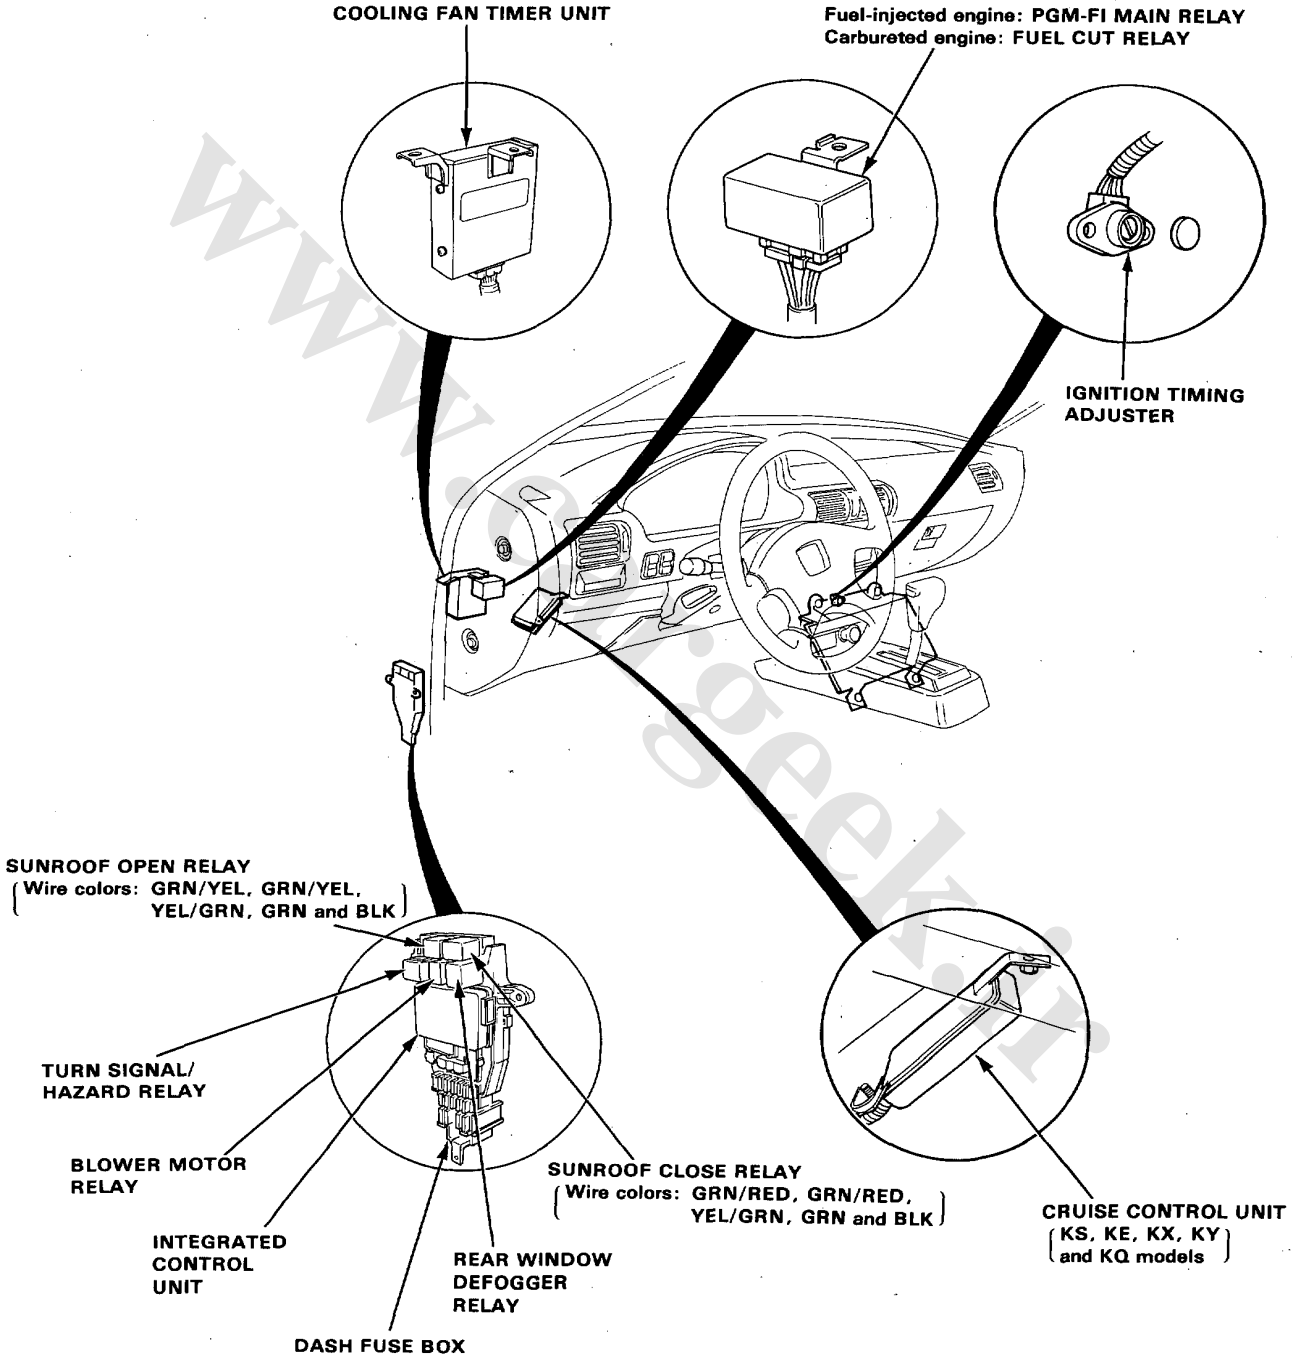






CIGARETTE LIGHTER RELAY
(Wire colors: WHT/BLU, YEL/RED)
WHT/RED and BLK

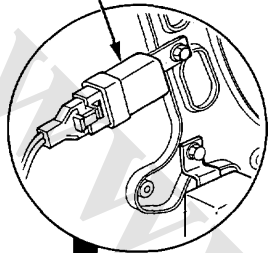


SERVICE CHECK CONNECTOR

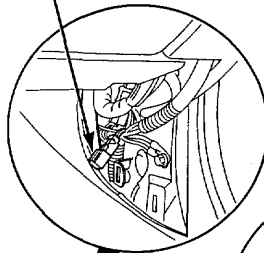


DELAY RELAY
(Carbureted engine)

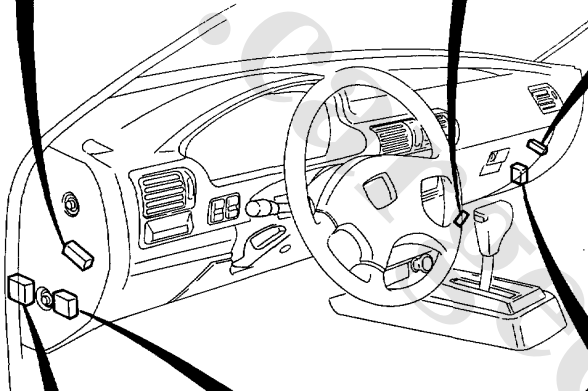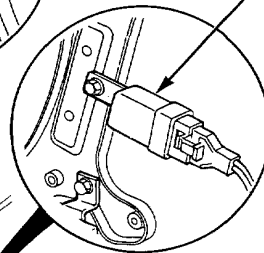


SEAT HEATER MAIN RELAY
(KS, KW and KX models only)
(Wire colors: YEL/BLK, WHT/BLK)
BLK/GRN and BLK

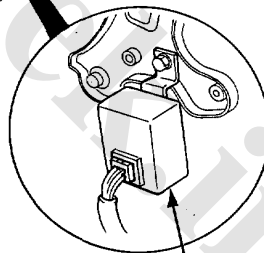

ENGINE MOUNT CONTROL UNIT (A/T only)

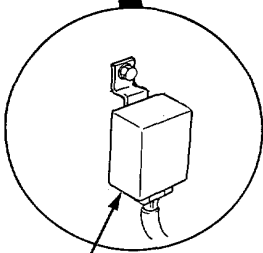

HEADLIGHT WASHER CONTROL UNIT
(European model only)

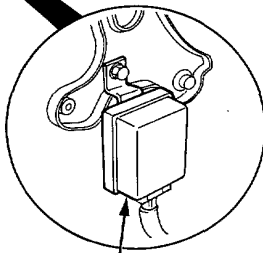


Relays and Control Unit Locations

Floor and Door

NOTE: RHD type is symmetrical to LHD type.


Fuel-injected engine: PGM-FI ECU

Carbureted engine: PGM-CARB. CONTROL UNIT (Except KP and KT models)

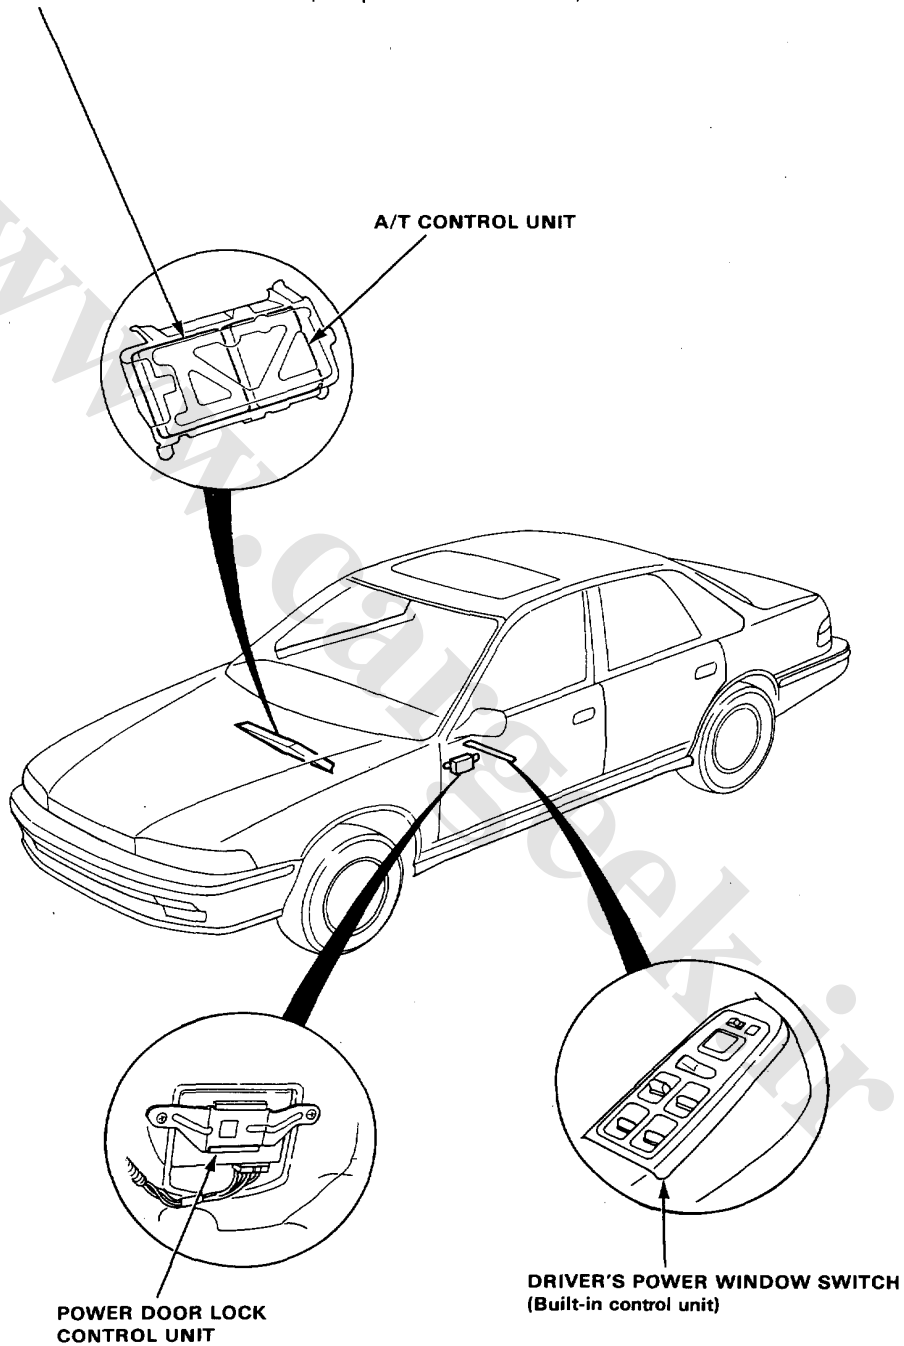




Seat

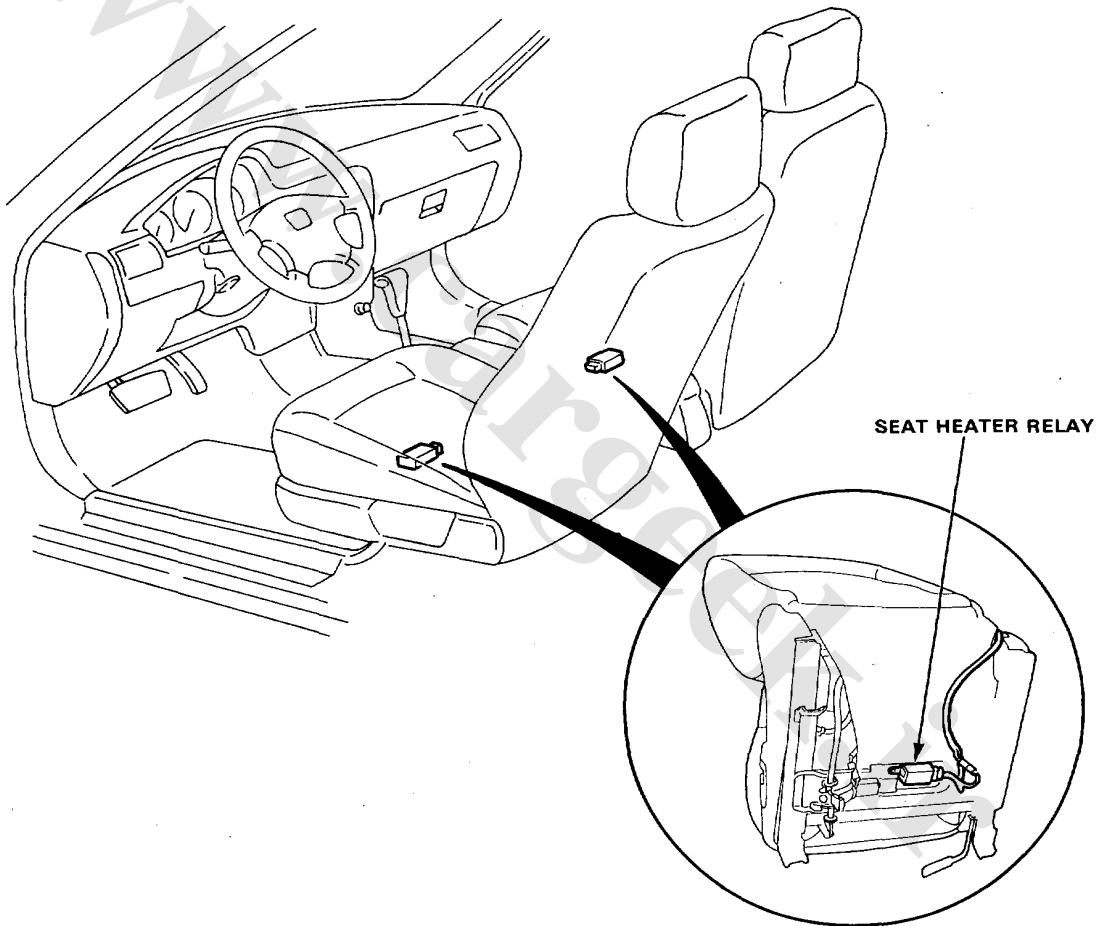

Relays and Control Unit Locations

Trunk

ALB CONTROL UNIT

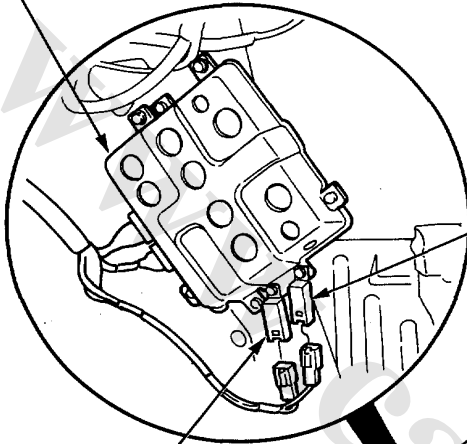


ALB FRONT FAIL
SAFE RELAY

(Wire colors: BRN/BLK, YEL/BLK)
YEL/GRN and BLK

ALB REAR FAIL SAFE RELAY


(Wire colors: BLU/BLK, YEL/BLK)
YEL/GRN and BLK

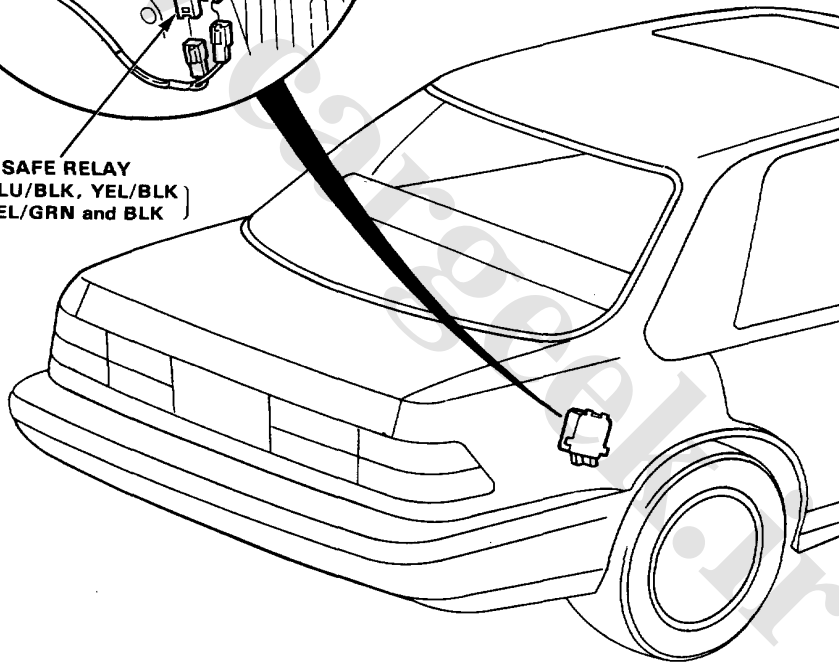



Wire Harness and Ground Locations

Engine Compartment

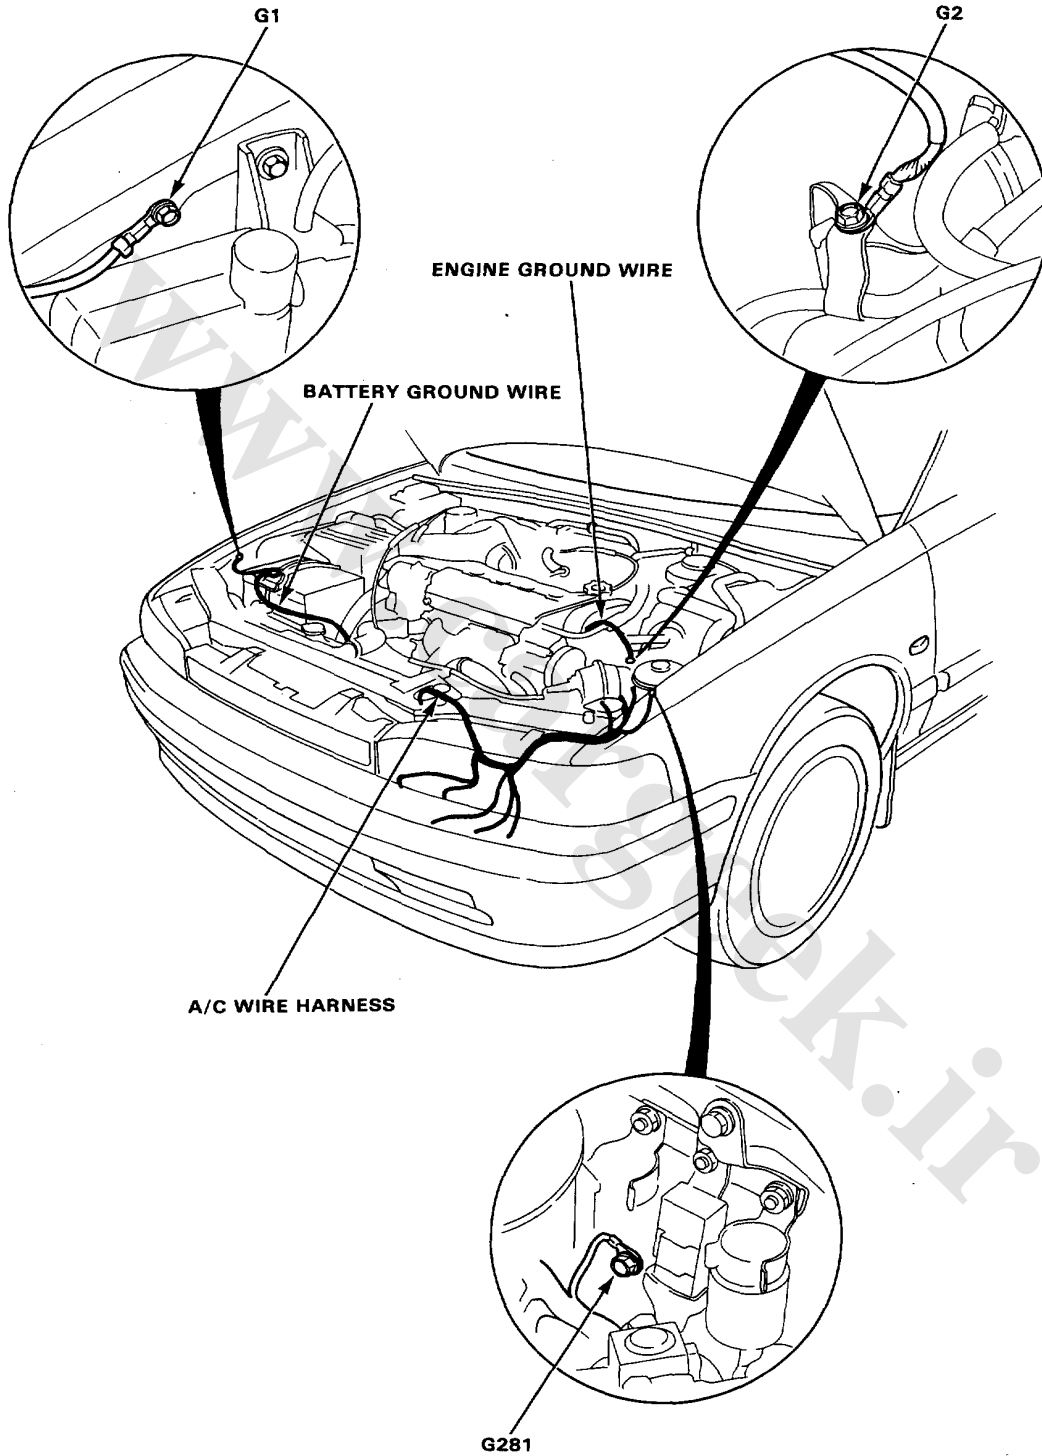


(cont'd)



Horns


Test

1. Remove the front bumper.
2. Disconnect the 2-P connector from the horn.
3. Test the horn by connecting battery voltage to the A and B terminals. The horn should sound.
4. If the horn fails to sound, replace it.

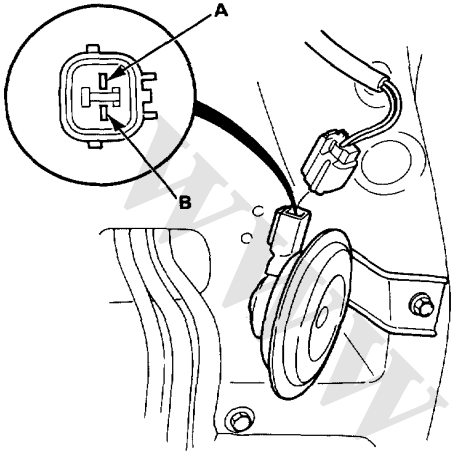

Horn Circuit:

- Slip Ring Test, see page 16-262.

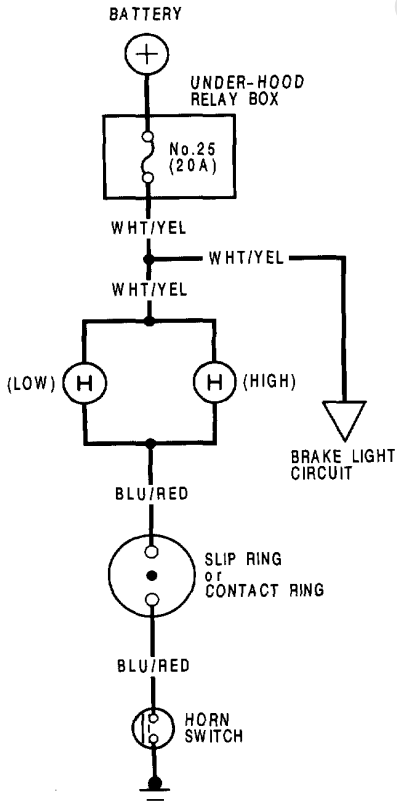


Switch Test

1. Remove the steering wheel, then turn it over.
2. Check for continuity between the hub core and the contact ring, or the hub core and the BLU/RED lead for cars equipped with cruise control, according to the table.


With Cruise Control:

Terminal Position	HUB CORE	BLU/RED
PRESS	○—○	○—○
FREE		

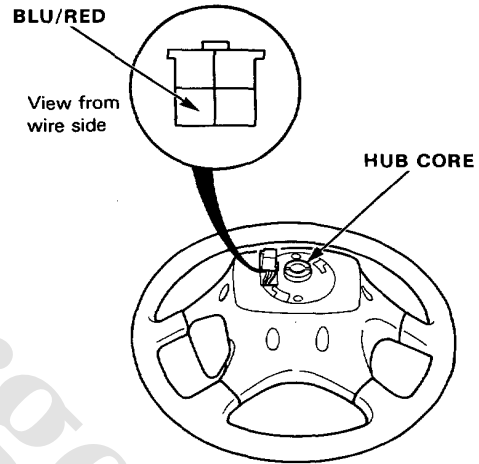

Without Cruise Control:

Terminal Position	HUB CORE	CONTACT RING
PRESS	○—○	○—○
FREE		

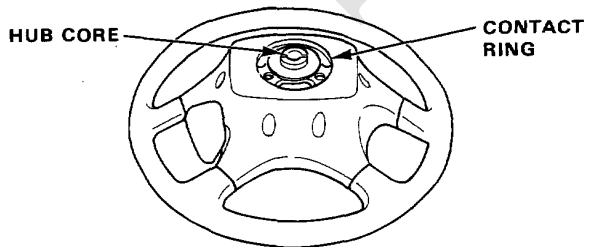

3. If OK, reinstall the steering wheel, then test the combination switch.

Low Fuel Warning System

Warning Light Test

NOTE: Refer to page 16-112 for wiring description of the low fuel warning circuit.


1. Park car on level ground.

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area. Drain fuel only into an approved container.

2. Drain fuel tank into an approved container. Then install the drain bolt with a new washer.
3. Add less than 8.6 ℓ (2.2 U.S. Gal, 1.8 Imp. Gal) of fuel and turn the ignition switch on. The low fuel warning light should come on within 4 minutes.
4. Then add one more gallon of fuel [approx. 4 ℓ (1.1 U.S. Gal, 0.9 Imp. Gal)]. The light should go out within 4 minutes.

- If the warning light did not come on in step 3, remove the maintenance access cover and disconnect the 3-P connector from the fuel gauge sending unit. Connect the A (GRN/RED) terminal to the C (BLK) terminal with a jumper wire.

- If the light comes on, the problem is either the sending unit or its ground.
- If the light does not come on, the problem is an open in the GRN/RED wire to the gauge assembly, no power to the gauge or bad bulb.

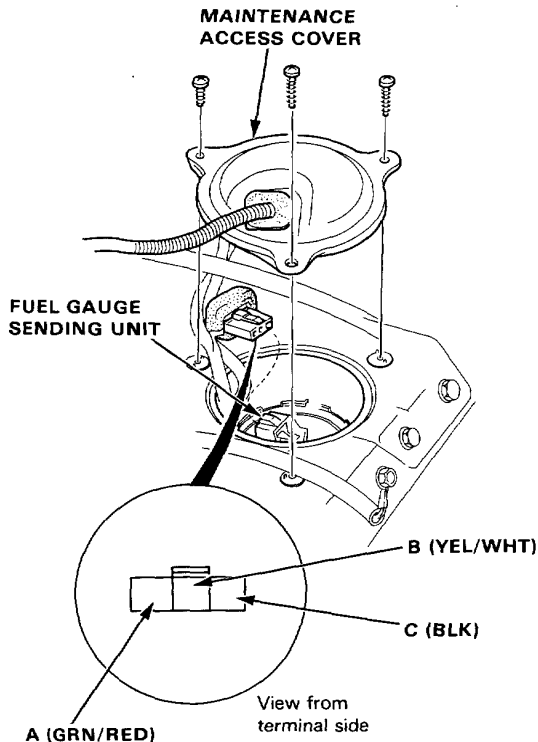

Oil Pressure Warning System



Description

NOTE: Refer to page 16-112 for wiring description of the oil pressure warning circuit.

With the engine running and normal oil pressure, the oil pressure switch is open and the oil pressure warning light does not operate. If engine oil pressure falls below 24.5 kpa (0.25 kg/cm², 3.6 psi), the oil pressure switch is closed, current flows through the oil pressure warning light and the oil pressure switch to ground, and the oil pressure light goes on.

Oil Pressure Switch Test


1. Disconnect the YEL/RED wire from the oil pressure switch.
2. There should be continuity between the positive terminal and the engine(ground) with the engine stopped. There should be no continuity when the engine runs.

OIL PRESSURE SWITCH

18 N·m (1.8 kg-m, 13 lb-ft)

1/8 in. BSP (British Standard Pipe Taper) 28 Threads/inch.

Use proper liquid sealant.

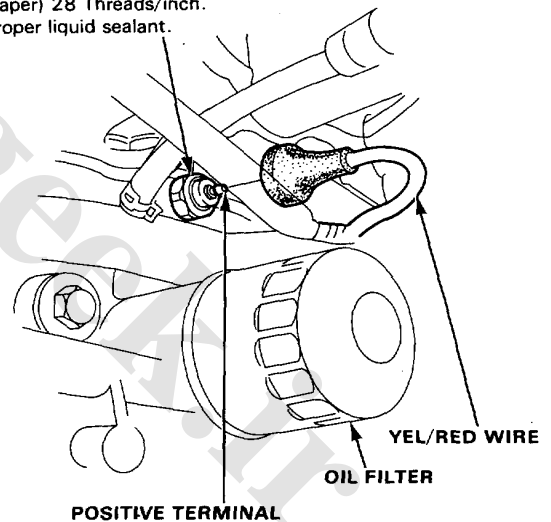

3. If the switch fails to operate, check the engine oil level, then inspect the oil pump and pressure if the oil level is correct (see section 5).


Fuel Gauge

Gauge Test

NOTE:

- Refer to page 16-112 for wiring description of the fuel gauge circuit.
- Check the No. 1 (10 A) fuse in the dash fuse box before testing.

1. Remove the maintenance access cover.
2. Disconnect the 3-P connector from the fuel gauge sending unit.

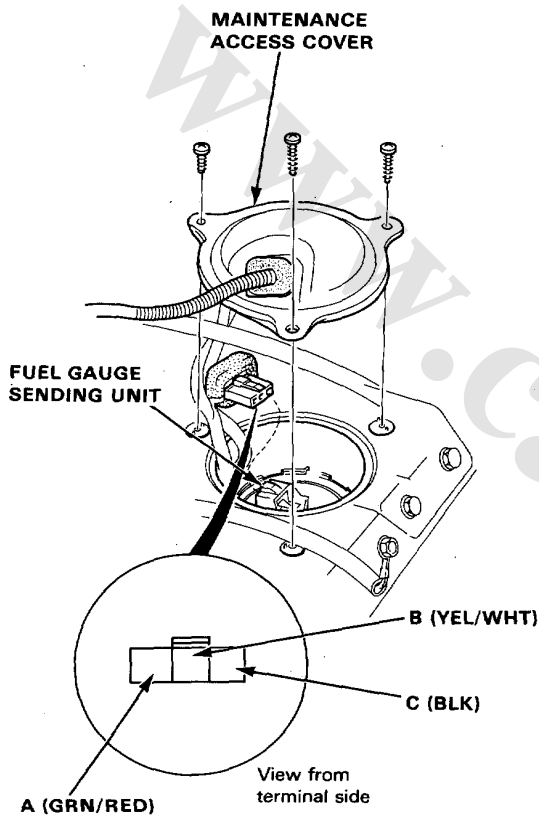

3. Connect the voltmeter positive probe to the B (YEL/WHT) terminal and the negative probe to the C (BLK) terminal, then turn the ignition switch ON. There should be between 5 and 8V.

- If the voltage is as specified, go to step 4.

- If the voltage is not as specified, check for:
 - An open in the YEL, YEL/WHT or BLK wire.
 - Poor ground (G401).

4. Turn the ignition switch OFF. Attach a jumper wire between the B (YEL/WHT) and C (BLK) terminals.

Turn the ignition switch ON.

Check that the pointer of the fuel gauge starts moving toward "F" mark.

CAUTION: Turn the ignition switch OFF before the pointer reaches "F" mark on the gauge dial. Failure to turn the ignition switch OFF before the pointer reaches the "F" mark may cause damage to the fuel gauge.

NOTE: The fuel gauge is a bobbin (cross coil) type, hence the fuel level is continuously indicated even when the ignition switch is OFF, and the pointer moves more slowly than that of a bimetal type.


- If the pointer of the fuel gauge does not swing at all, replace the gauge.
- Inspect the fuel gauge sending unit if the gauge is OK.



Sending Unit Test/Replacement


⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Remove the maintenance access cover.
2. With the ignition switch OFF, disconnect the 3-P connector from the fuel gauge sending unit.
3. Remove the fuel gauge sending unit.

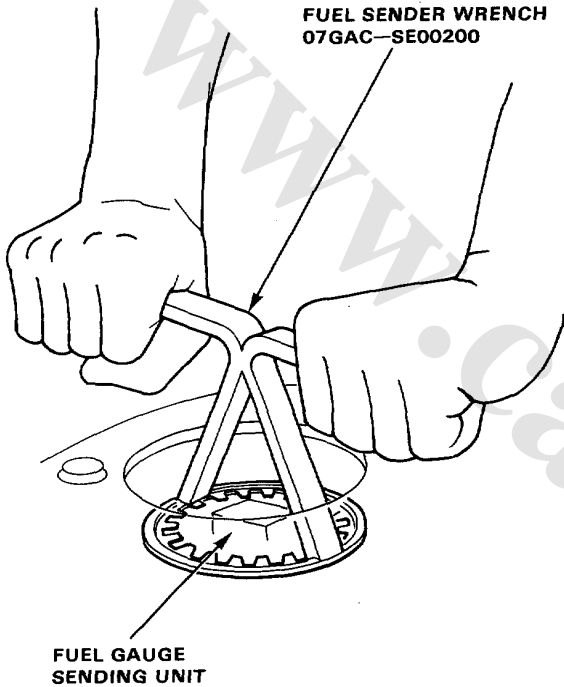

4. Measure resistance between the A and B terminals at E (EMPTY), 1/2 (HALF FULL) and F (FULL) by moving the float.

Float Position	E	1/2	F
Resistance (Ω)	105-110	25.5-39.5	2-5

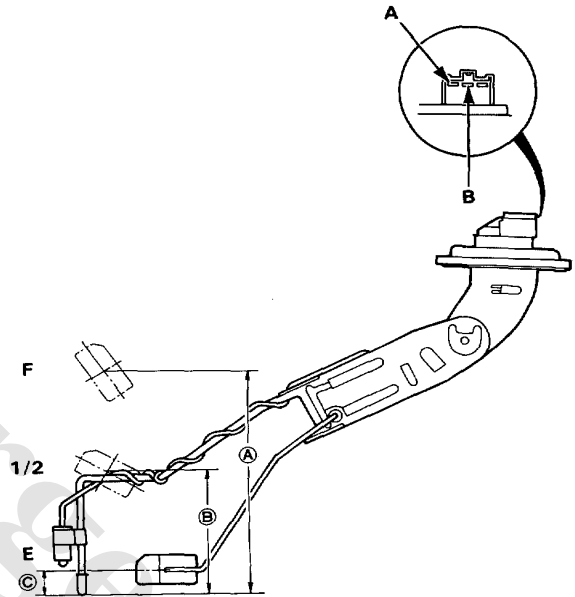

Float Position	A	B	C
With 4WS	121.5 mm (4.8 in)	70.0 mm (2.8 in)	17.0 mm (0.7 in)
Without 4WS	146.0 mm (5.7 in)	80.0 mm (3.1 in)	17.0 mm (0.7 in)

5. If unable to obtain the above readings, replace the fuel gauge sending unit.


Coolant Temperature Gauge

Gauge Test

NOTE:

- Refer to page 16-112 for wiring description of the coolant temperature gauge circuit.
- Check the No.1 (10 A) fuse in the dash fuse box before testing.

1. Make sure the ignition switch is OFF, then disconnect the RED wire from the coolant temperature gauge sender and ground it with a jumper wire.

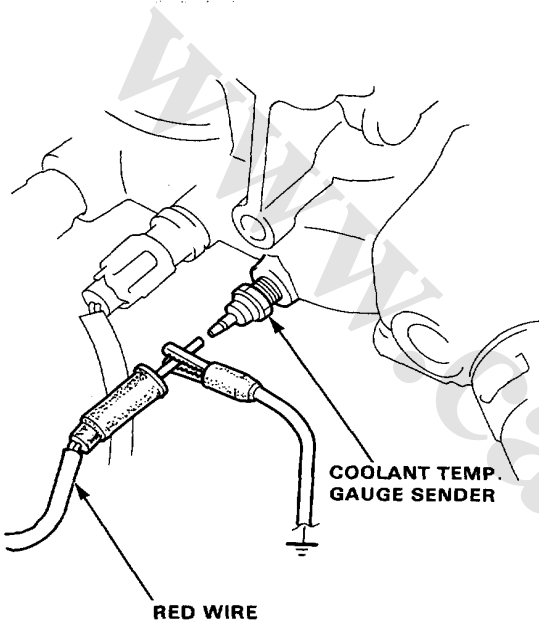

2. Turn the ignition switch ON. Check that the pointer of the coolant temperature gauge starts moving toward "H" mark.

CAUTION: Turn the ignition switch OFF before the pointer reaches "H" mark on the gauge dial. Failure to turn the ignition OFF quickly enough may cause damage to the gauge.


- If the pointer of the gauge does not swing at all, check for an open in the YEL or RED wire.

Replace the coolant temperature gauge if the fuse and wiring are normal.

- Inspect the gauge sender if the gauge is OK.

Sender Test

1. Disconnect the RED wire from the sender.
2. With the engine cold, use an ohmmeter to measure resistance between the positive terminal and the engine (ground).

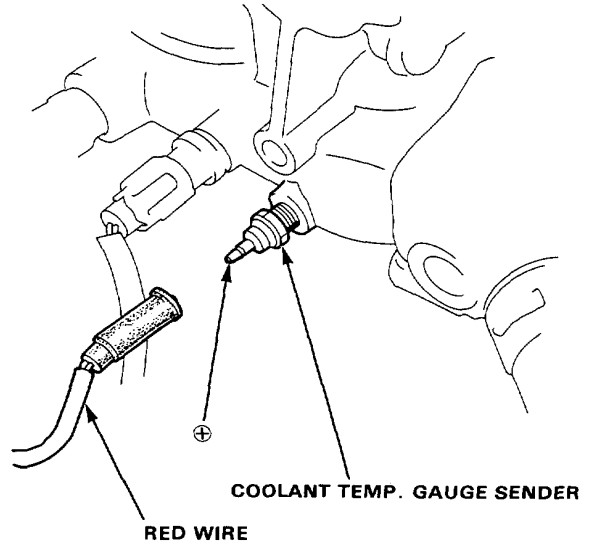

3. Check the temperature of the coolant.
4. Run the engine and measure the change in resistance with the engine at operating temperature (cooling fan comes on).


Temperature	56°C (133°F)	85°C (185°F) – ["C" mark]	100°C (212°F)
Resistance (Ω)	142	49 – 32	

5. If obtained readings are substantially different from specifications above, replace the gauge sender.



Safety Indicator


Component Location Index

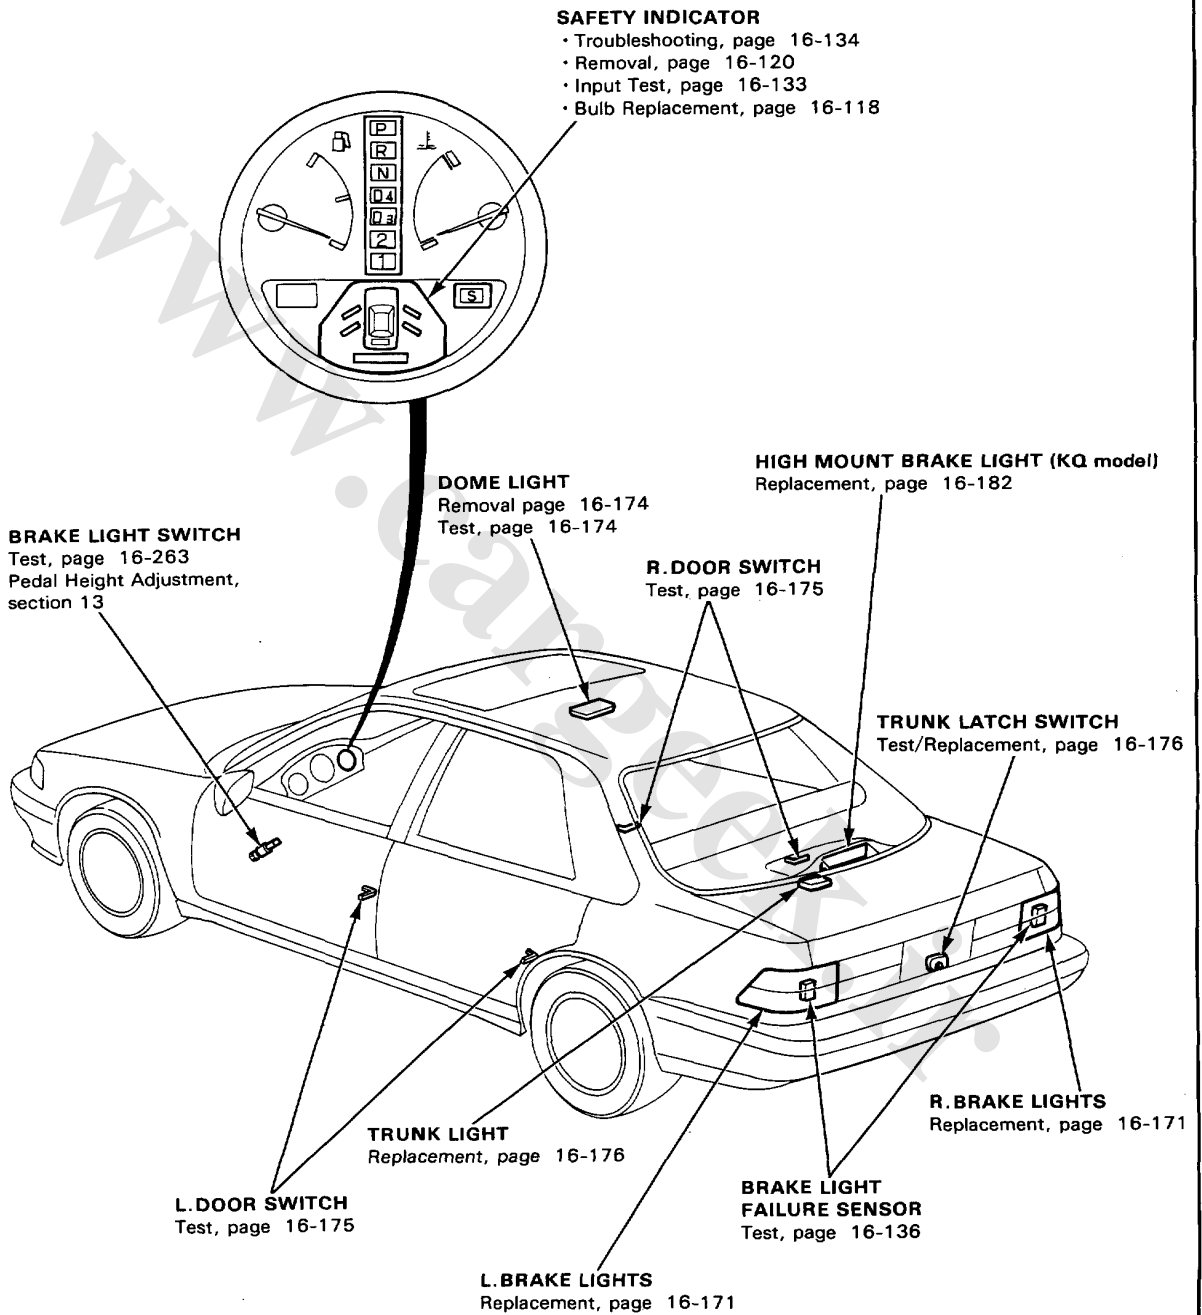


Safety Indicator

Brake Light Failure Sensor Test (KQ model)

1. First make sure the brake lights come on when the brake pedal is pressed.
 - If none of the brake lights come on, check the brake light circuit (see page 16-181).
 - If one of the brake lights does not come on, check whether the bulb is blown. If the bulb is OK, go to step 2.
 - If all the brake lights come on, go to step 2.
2. Open the trunk lid and the maintenance lid of the right taillight. Make sure the **BRAKE LAMP** of the safety indicator does not come on when the WHT/GRN terminal of the 8-P connector is grounded and the ignition switch is turned OFF to ON.

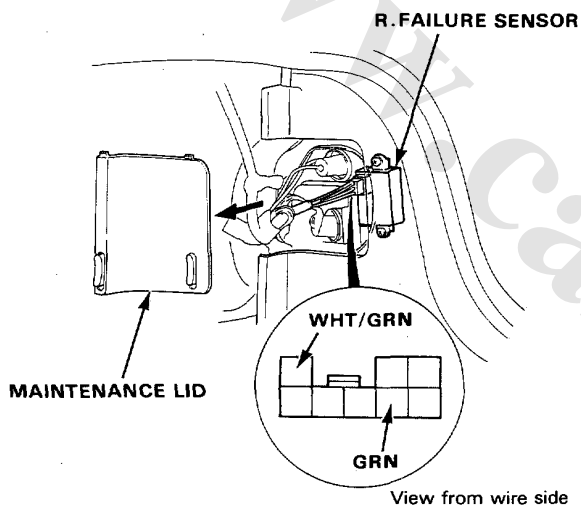

- If the **BRAKE LAMP** comes on, check for an open in the WHT/GRN wire between the safety indicator and the right failure sensor and whether the safety indicator circuit (main print panel) has a problem.
 - If the **BRAKE LAMP** does not come on, go to step 3.
3. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the GRN terminal of the 8-P connector grounded and the brake pedal pressed.
 - If the **BRAKE LAMP** comes on, replace the right failure sensor.
 - If the **BRAKE LAMP** does not come on, go to step 4.
 4. Open the maintenance lid of the left taillight. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the GRN terminal of the 8-P connector grounded and the brake pedal pressed.

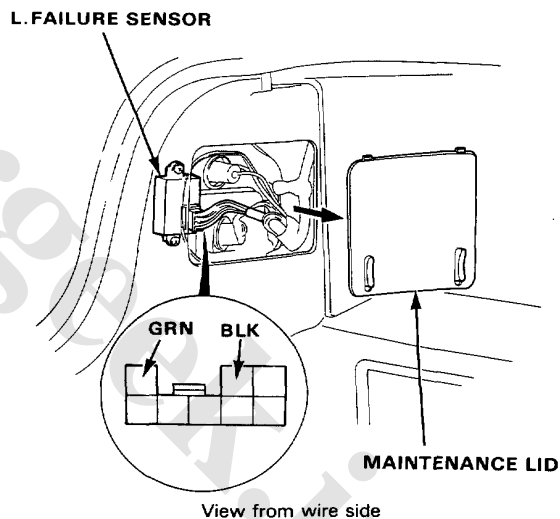



- If the **BRAKE LAMP** comes on, there is an open in the GRN wire between the left failure sensor and the right failure sensor.
 - If the **BRAKE LAMP** does not come on, go to step 5.
5. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the BLK terminal of the 8-P connector grounded and the brake pedal pressed.
- If the **BRAKE LAMP** comes on, replace the left failure sensor.
 - If the **BRAKE LAMP** does not come on, check for an open in the BLK wire between the left failure sensor and ground, and check whether the G701 terminal is poor.

Shift Lever Position Indicator

Component Location Index


• **GAUGE ASSEMBLY**

Removal, page 16-120

Disassembly, page 16-118


• **A/T CONTROL SYSTEM**

See Automatic Transmission, section 9.

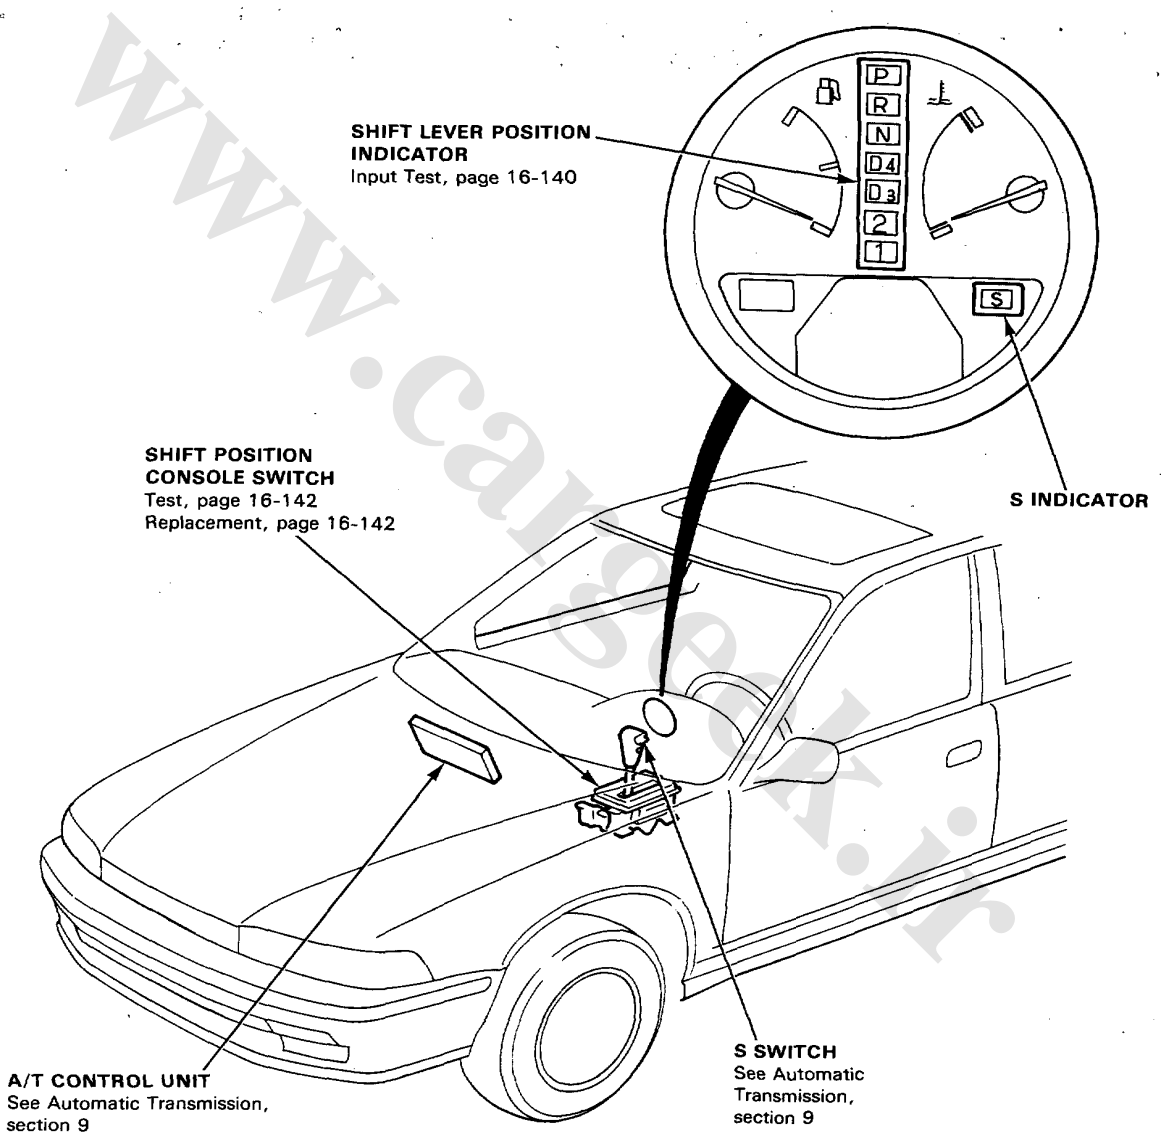



Circuit Diagram

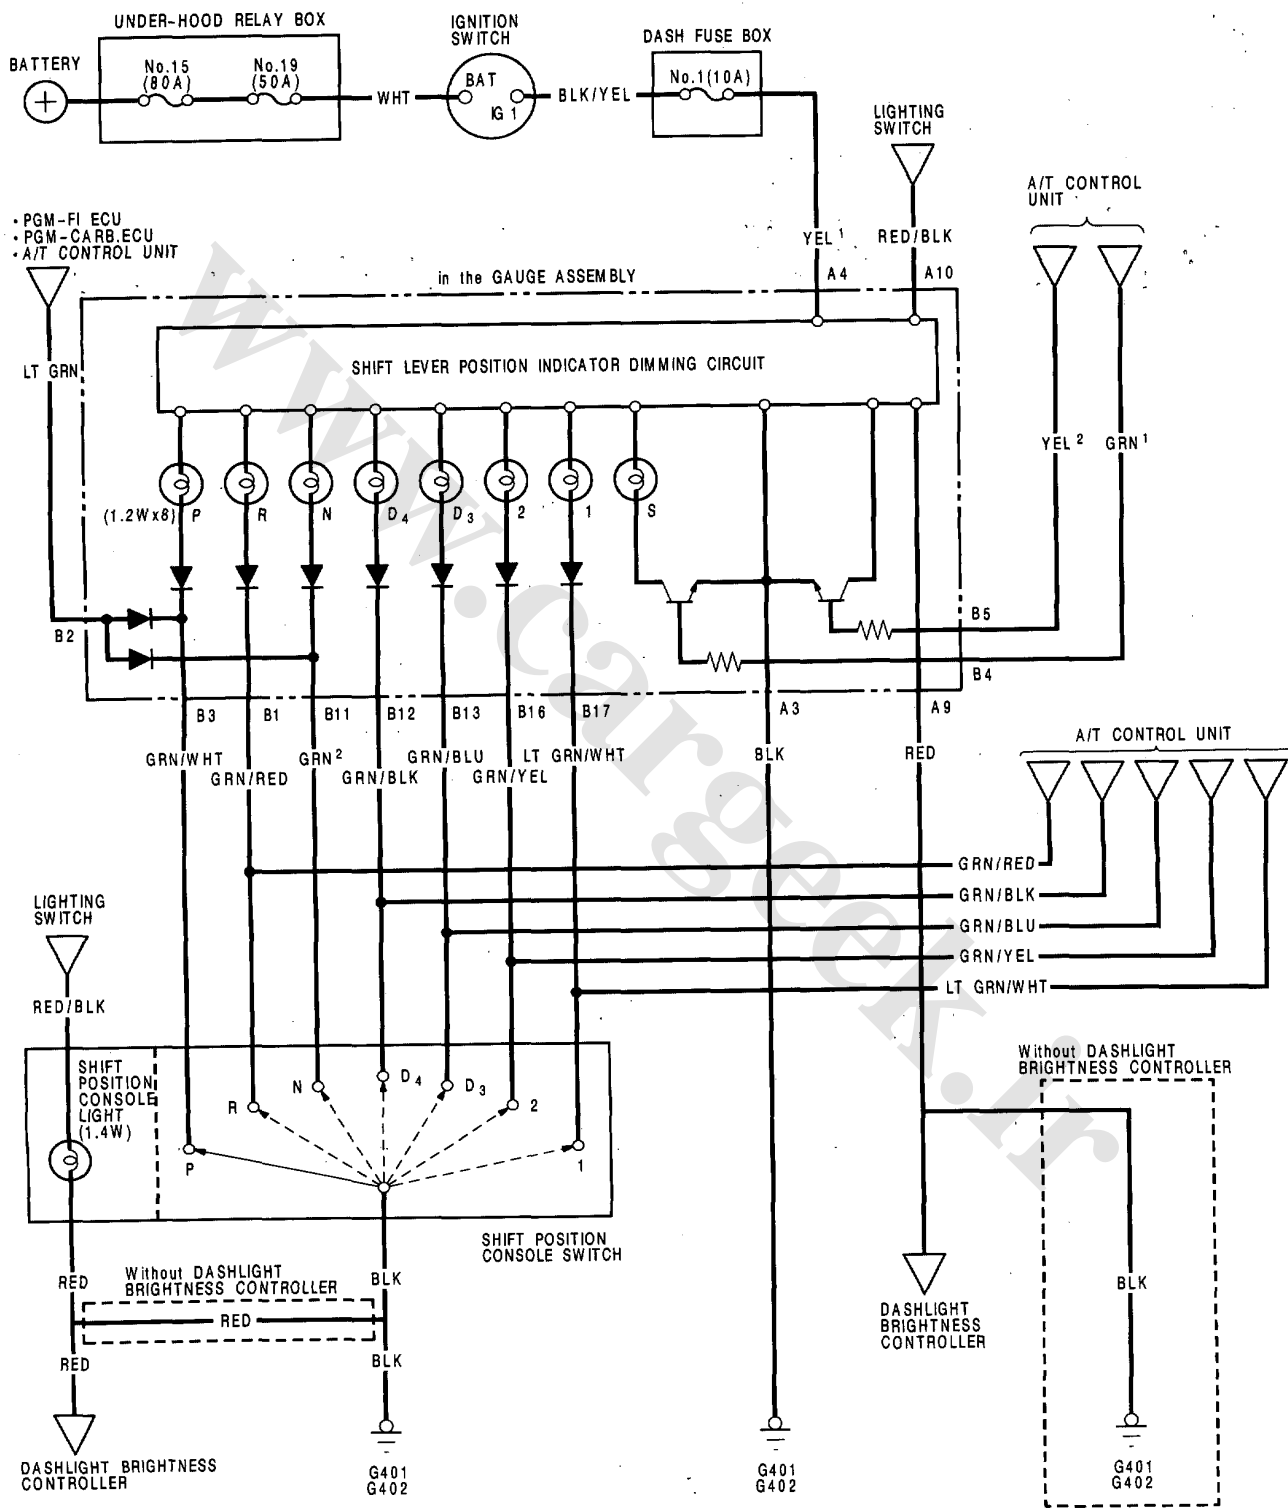


Shift Lever Position Indicator

Indicator Input Test

Remove the gauge assembly from the dashboard and disconnect the 10-P, 16-P and 22-P connectors from the gauge assembly. Make the following input tests at the harness pins. If all tests prove OK, yet the indicator still fails to work, replace the main print panel, the tachometer, the speedometer and the odo/trip meter as a set.

NOTE: Several different wires have the same color. They have been given a number suffix to distinguish them (for example GRN¹ and GRN² are not the same).

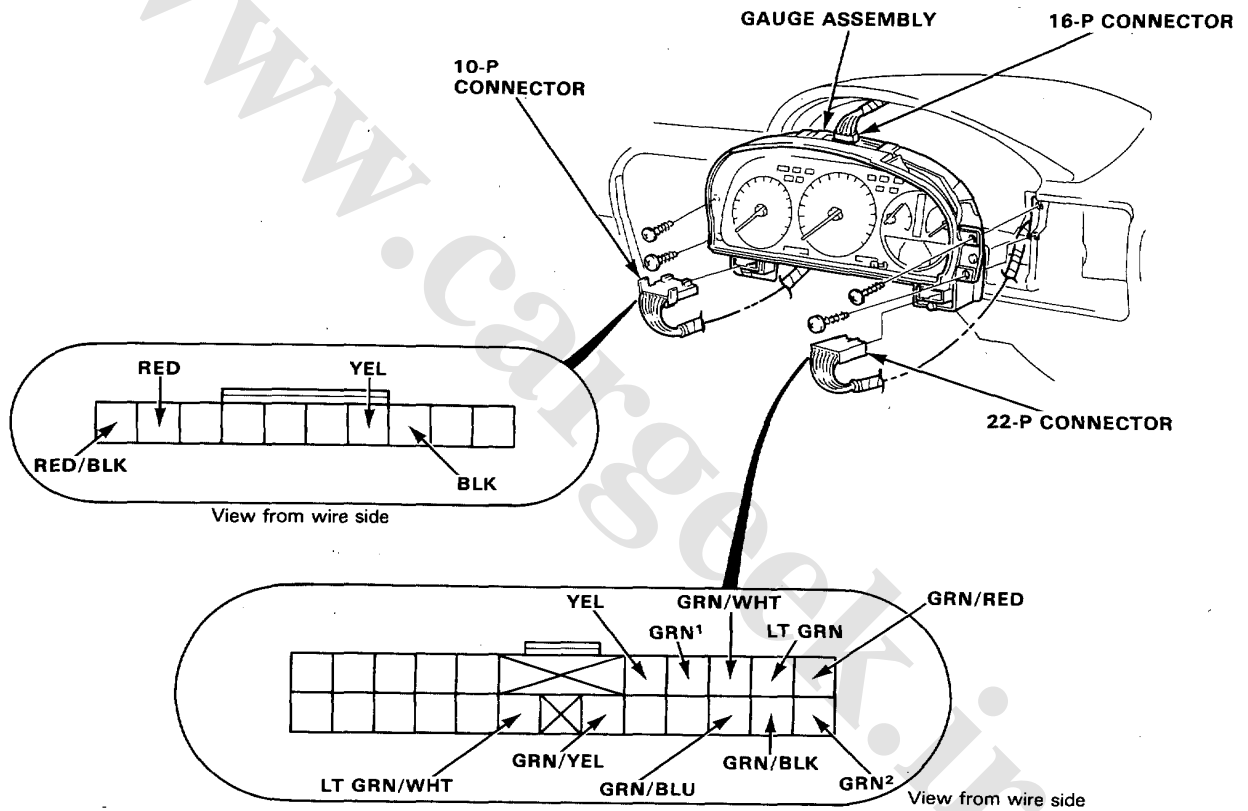



No.	Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	YEL ¹	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.1 (10 A) fuse.. • An open in the wire.
3	GRN/WHT	Shift lever position in P.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Faulty shift position console switch • Poor ground (G401, G402) • An open in the wire.
	GRN/RED	Shift lever position in R.		
	GRN ²	Shift lever position in N.		
	GRN/BLK	Shift lever position in D ₄		
	GRN/BLU	Shift lever position in D ₃		
	GRN / YEL	Shift lever position in 2.		
	LTGRN/WHT	Shift lever position in 1.		
4	RED/BLK and RED	Lighting switch ON and dashlight brightness control knob on full bright.	Check for voltage between RED/BLK and RED terminals: should be battery voltage.	<ul style="list-style-type: none"> • Faulty dashlight brightness control system. • An open in the wire.
5	GRN ¹	Ignition switch ON, shift lever position in D ₃ or D ₄ and S switch ON.	Check for voltage to ground: should be about 5 V.	<ul style="list-style-type: none"> • Faulty S switch. • Faulty shift position console switch. • Faulty A/T control system. • An open in the wire.
6	YEL ²	Ignition switch ON, shift lever position in D ₃ or D ₄ and S switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Faulty S switch. • Faulty shift position console switch • Faulty A/T control system. • An open in the wire.
7	LT GRN	Ignition switch ON.	Check for voltage to ground: should be about 5 V.	<ul style="list-style-type: none"> • Faulty PGM-FI ECU. • Faulty PGM-CARB. ECU. • An open in the wire.


Shift Lever Position Indicator

Shift Position Console Switch Test

1. Remove the console, then disconnect the 12-P and 2-P connectors from the console switch.
2. Check for continuity between the terminals in each position according to the table.

NOTE:

- Move the lever back and forth without touching the push button at each position, and check for continuity within a range of free play of the shift lever.
- If no continuity within a range of free play, adjust the installation position of console switch.

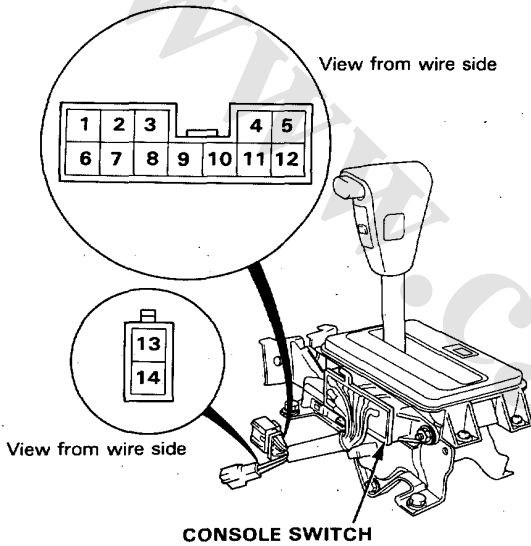

Shift Position Console Switch


Terminal Position	8	1	2	3	4	5	6	7	11
1	○				○				
2	○			○		○			
D ₃	○		○			○			
D ₄	○	○				○			
N	○						○		
R	○							○	
P	○								○

Back-up Light Switch Neutral Safety Switch

Terminal Position	9	10	13	14
1				
2				
D ₃				
D ₄				
N			○	○
R	○	○		
P			○	○

Shift Position Console Switch Replacement

1. Remove the console, then disconnect the 12-P and 2-P connectors from the console switch.
2. Remove the 2 console switch mounting bolts.

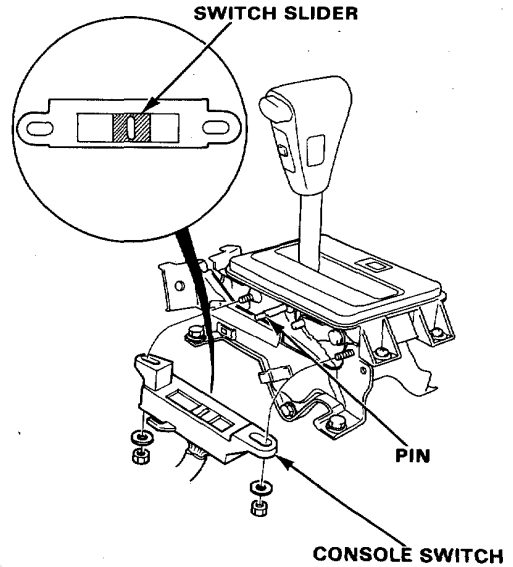

3. Position the switch slider to "Neutral" as shown above.
4. Shift the select lever to "Neutral", then slip the console switch into position.
5. Attach the switch with the 2 bolts.
6. Test the console switch with P and N position of shift lever (see page 16-142).

NOTE: The engine should start when the shift lever is in the N position in the range of free play.

7. Connect the 12-P and 2-P connectors, clamp the harness and install the console.




Integrated Control Unit

Circuit Diagram (Without Daytime and Dim-Dip Light)

Description:

A multi-function control unit located on the driver's side kick panel, integrates the functions of the combined operation with wiper/washer circuit, light-on warning circuit, entry light timer circuit, seat belt reminder circuit (KY model only) and brake light circuit (KG model only) onto one circuit board sharing common circuit functions.

NOTE: Several different wires have the same color. They have been given a number suffix to distinguish them (for example GRN¹ and GRN² are not the same).

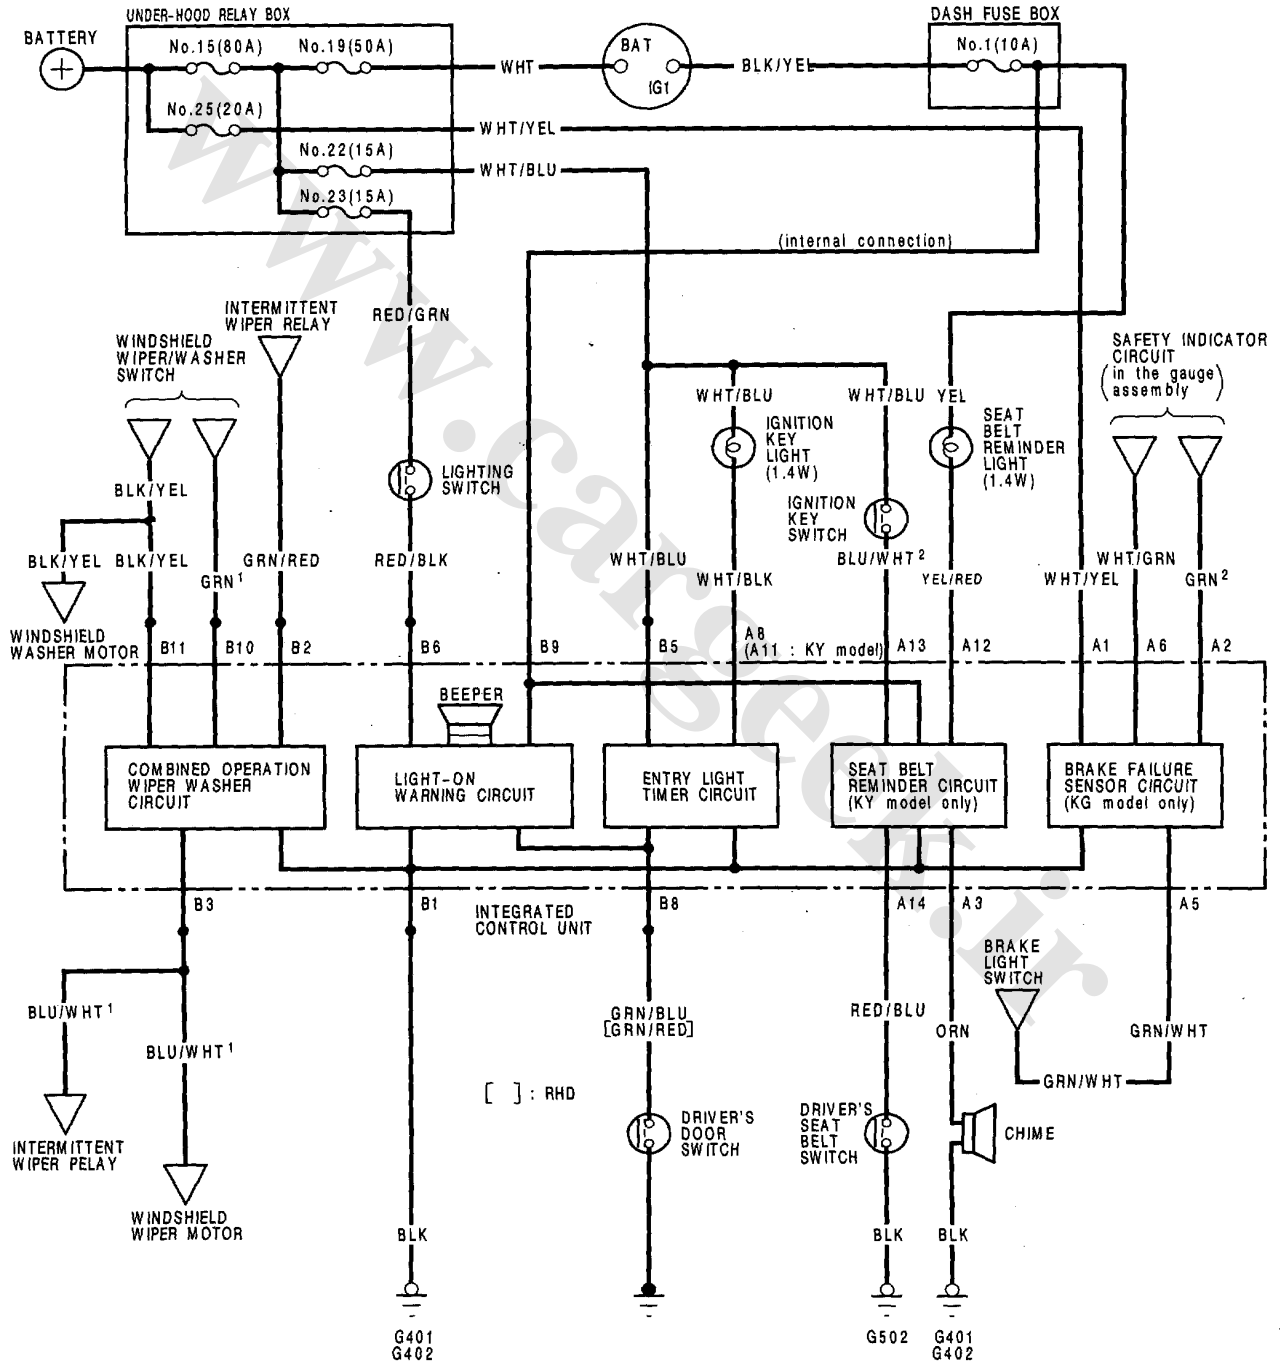



Except KQ model:

Description

Safety Indicator Warning System:

The warning lights are used to indicate when the trunk lid or a door is not fully closed, or when a brake light is faulty. The warning lights will remain ON for about 2 seconds after the ignition switch has been turned ON to show that the system circuit is functioning.

Brake Light Bulb Failure Warning:


If all brake light bulbs are OK, the warning light stays off because the WHT/GRN² wire is constantly being grounded by the two brake light failure sensors connected in series. With the brakes off, the ground is provided through the diode, the failure sensor relay coils and bulb filaments to ground. With the brake lights on, all 2 relays, (1 in the left sensor, 1 in the right) connected in series, supply ground. If any of the 2 bulbs or either of L. brake lights and R. brake lights are not working, the chain is broken and the WHT/GRN² wire is not being grounded. The warning light comes on.

Brake Light Circuit Failure Warning:

When the ignition switch is turned ON, the brake light warning light stays on.

When the brake pedal is depressed once, the warning light should go out.

If there is defect in the brake system (blown fuse, faulty brake light switch, open or short circuit and/or blown bulb(s)), the brake light warning light stays on with the brake pedal operated.

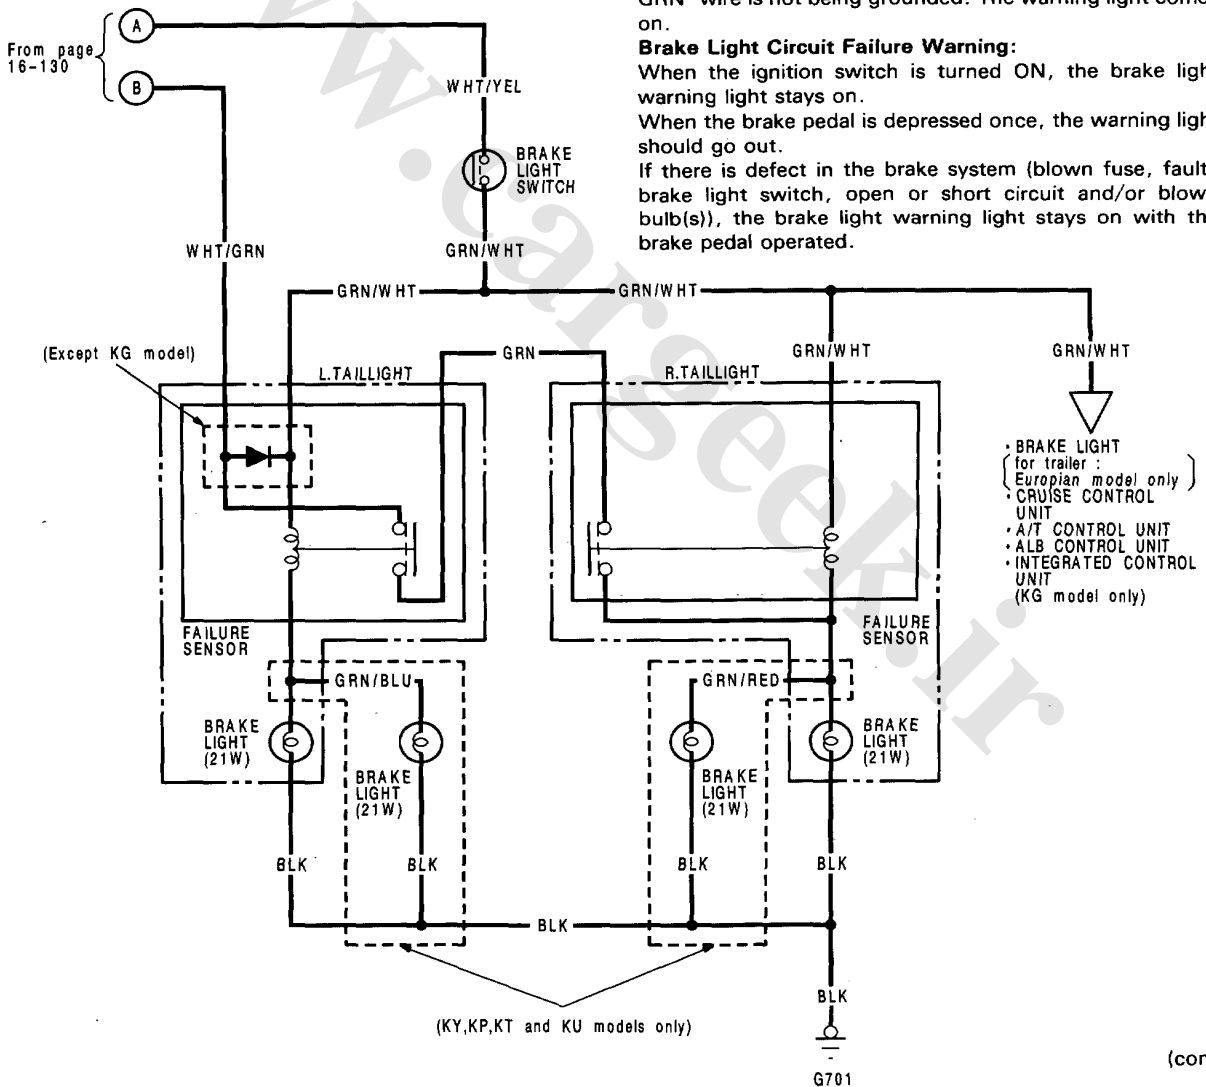

(cont'd)

Safety Indicator

Circuit Diagram (cont'd)

KQ model:


Description

Safety Indicator Warning System:

The warning lights are used to indicate when the trunk lid or a door is not fully closed, or when a brake light is faulty. The warning lights will remain ON for about 2 seconds after the ignition switch has been turned ON to show that the system circuit is functioning.

Brake Light Bulb Failure Warning:

If all brake light bulbs are OK, the warning light stays off because the WHT/GRN² wire is constantly being grounded by the two brake light failure sensors connected in series. With the brakes off, the ground is provided through the diode, the failure sensor relay coils and bulb filaments to ground. With the brake lights on, all 5 relays, (3 in the left sensor, 2 in the right) connected in series, supply ground. If any of the 5 bulbs is not working, the chain is broken and the WHT/GRN² wire is not being grounded. The warning light comes on.

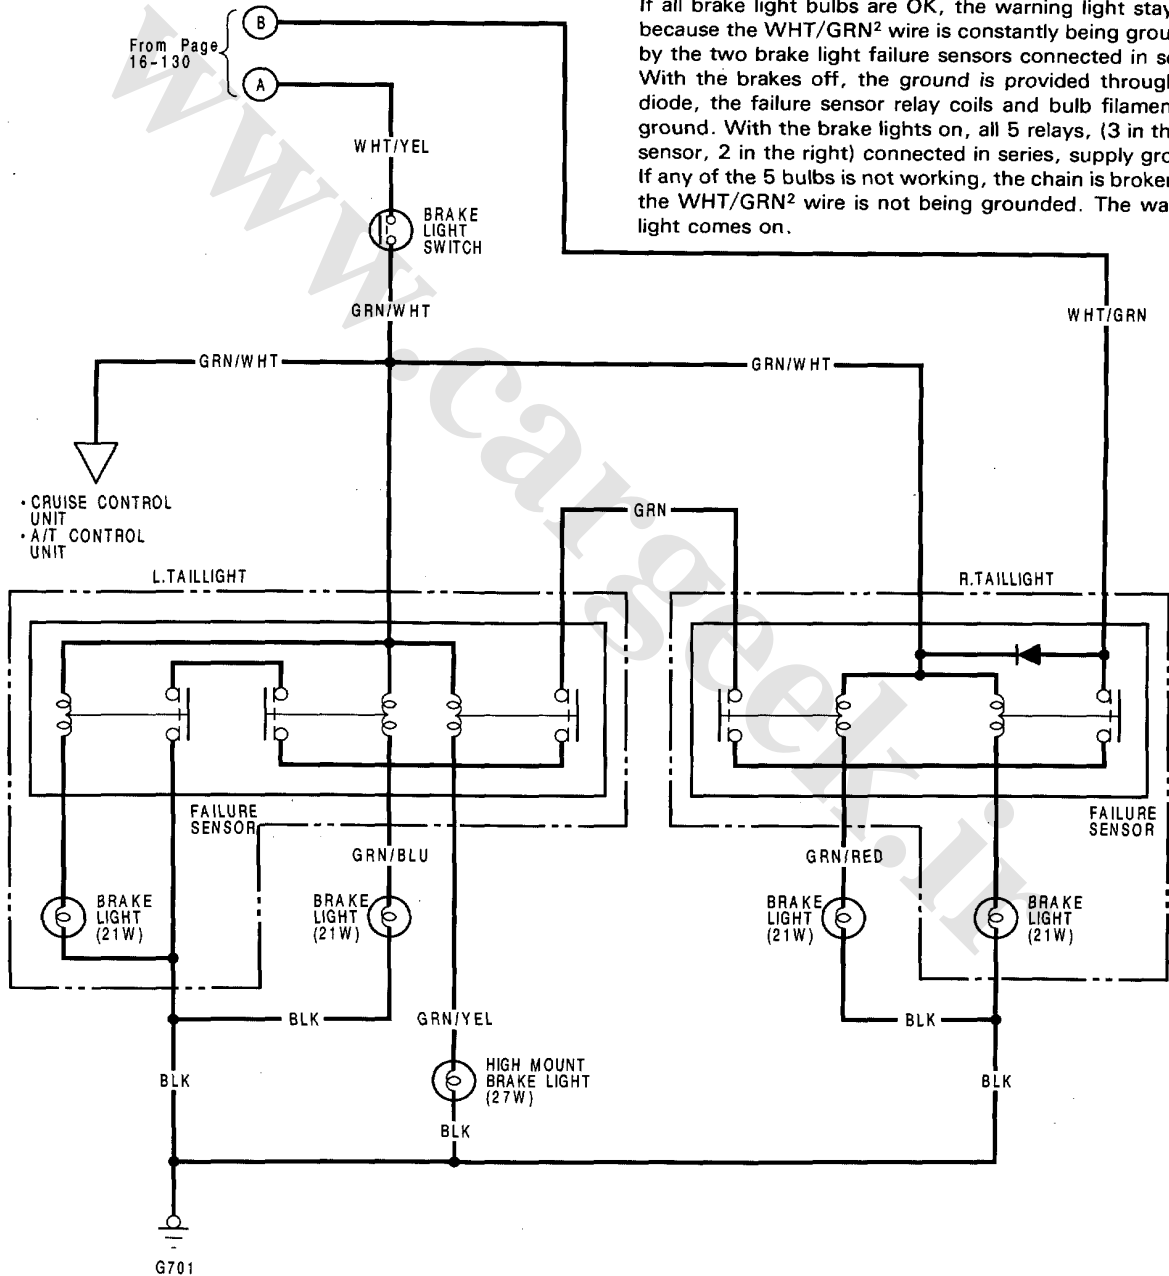




Indicator Input Test

Remove the gauge assembly from the dashboard to disconnect the 10-P, 16-P and 22-P connectors from the indicator.

Make the following input tests at the harness pins.

If all tests prove OK, yet the indicator still fails to work, replace the main print panel, the tachometer, the speedometer and the odo/trip meter as a set.

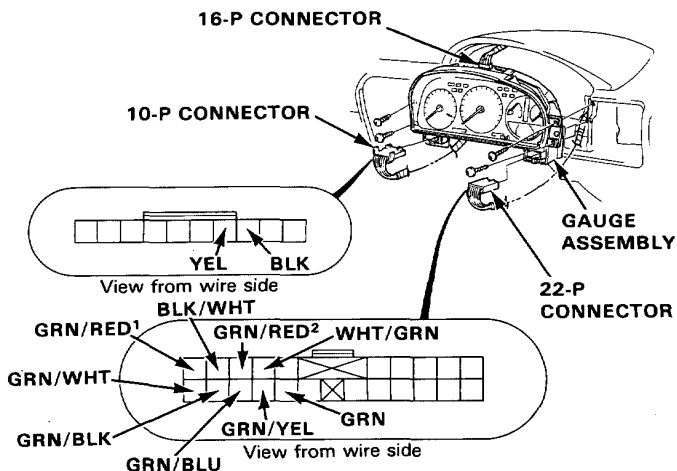

No.	Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402) • An open in the wire.
2	YEL	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.1 (10 A) fuse. • An open in the wire.
3	WHT	Brake pedal pushed.	Check for continuity to ground: should be continuity with the pedal pushed.	<ul style="list-style-type: none"> • Blown No. 25 (20 A) fuse. • Faulty brake light switch. • Blown brake light bulbs. • Faulty brake light failure sensors. • Poor ground (G701). • An open in the WHT/GRN or GRN/WHT wire.
4	GRN/BLK	Trunk lid opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove No.22 (15 A) fuse.	<ul style="list-style-type: none"> • Faulty trunk latch switch. • An open in the wire.
5	GRN/RED ¹	Right front door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No. 22 (15 A) fuse.	<ul style="list-style-type: none"> • An open in the wire. • Faulty door switch. • Poor installation of the switch.
	GRN/BLU	Left front door opened.		
	GRN/WHT	Right rear door opened.		
	GRN/YEL	Left rear door opened.		
6	BLK/WHT	Dome light switch in MIDDLE position.	Attach to ground: Dome light should come on.	<ul style="list-style-type: none"> • Blown No.22 (15 A) fuse. • Faulty dome light. • An open in the WHT/BLU or BLK/WHT wire.
7	GRN/RED ²	Ignition switch ON.	Attach to ground: Brake light warning in the safety indicator should come on.	<ul style="list-style-type: none"> • Faulty safety indicator circuit. • Blown bulb. • An open in the wire.

KG model only:

8	GRN	With brake pedal released, ignition switch OFF to ON.	Check for continuity in both directions between the GRN and BLK terminals: should be continuity in only one direction as the ignition switch is turned ON, then no continuity in both directions with brake pedal pushed.	<ul style="list-style-type: none"> • Faulty brake light circuit failure sensor.
---	-----	---	---	--

Safety Indicator

Troubleshooting

NOTE:

- The numbers in the table show the troubleshooting sequence.
- Make sure that the dome light bulb and the trunk light bulb are not blown up.

Symptom	Blown fuse		Safety indicator circuit (main print panel)	Blown indicator bulb	Brake light failure sensor	Door switch	Trunk latch switch	Brake light switch	Poor ground	Open circuit in wires or loose or disconnected terminals
	No.22 (15 A)	No.1 (10 A)								
No indicators operate.		1	2						G401 G402	YEL
Warning lights fail to come on when ignition switch is turned to ON.			1	2						
The indicator lights do not turn on or some indicator lights do not turn off.			1	2						
Trunk warning light not lit with trunk lid opened			2	3			1			GRN/BLK
Door warning lights not lit with doors opened.			2	3		1				GRN/RED ¹ GRN/BLU GRN/WHT GRN/YEL
Brake warning light not lit with blown brake light bulb.			2		1					GRN WHT/GRN GRN/RED ²
Brake warning light remains on with good brake light bulbs.			2					1		GRN WHT/GRN GRN/RED ²
Dome light not operated with door opened (When switch position is in MIDDLE)	1		3			2				




Brake Light Failure Sensor Test (Except KQ model)

1. First make sure the brake lights come on when the brake pedal is pressed.

- If none of the brake lights come on, check the brake light circuit (see page 16-180).
- If one of the brake lights does not come on, check whether the bulb is blown. If the bulb is OK, go to step 2.
- If all the brake lights come on, go to step 2.


2. Open the trunk lid and the maintenance lid of the left taillight. Make sure the **BRAKE LAMP** of the safety indicator does not come on when the WHT/GRN terminal of the 8-P connector is grounded and the ignition switch is turned OFF to ON.

L. FAILURE SENSOR

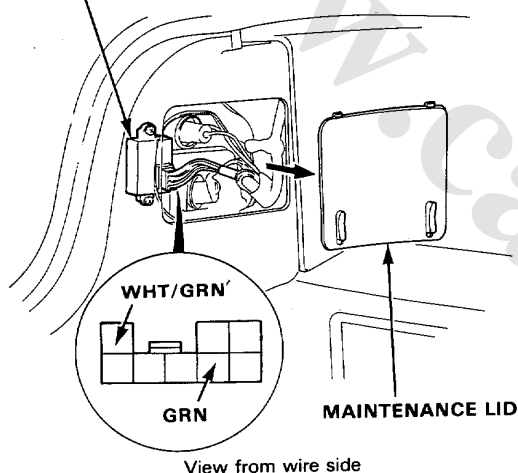

- If the **BRAKE LAMP** comes on, check for an open in the WHT/GRN wire between the safety indicator and the left failure sensor and whether the safety indicator circuit (main print panel) has a problem.
 - If the **BRAKE LAMP** does not come on, go to step 3.
3. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the GRN terminal of the 8-P connector grounded and the brake pedal pressed.
- If the **BRAKE LAMP** comes on, replace the left failure sensor.
 - If the **BRAKE LAMP** does not come on, go to step 4.


4. Open the maintenance lid of the right taillight. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the GRN terminal of the 8-P connector grounded and the brake pedal pressed.

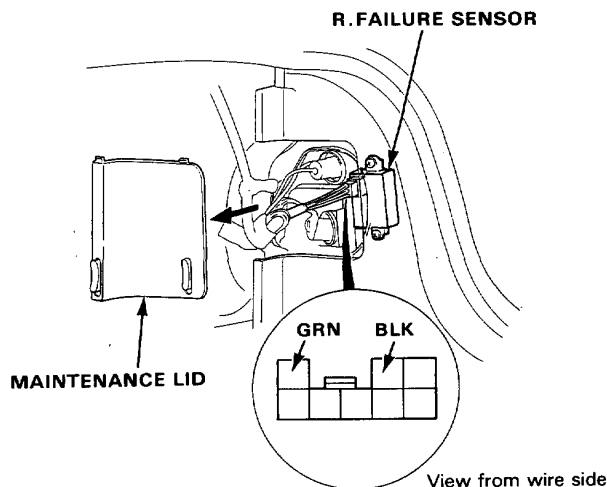


- If the **BRAKE LAMP** comes on, there is an open in the GRN wire between the left failure sensor and the right failure sensor.
 - If the **BRAKE LAMP** does not come on, go to step 5.
5. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the BLK terminal of the 8-P connector grounded and the brake pedal pressed.
- If the **BRAKE LAMP** comes on, replace the right failure sensor.
 - If the **BRAKE LAMP** does not come on, check for an open in the BLK wire between the right failure sensor and ground, and check whether the G701 terminal is poor.

Safety Indicator


Circuit Diagram

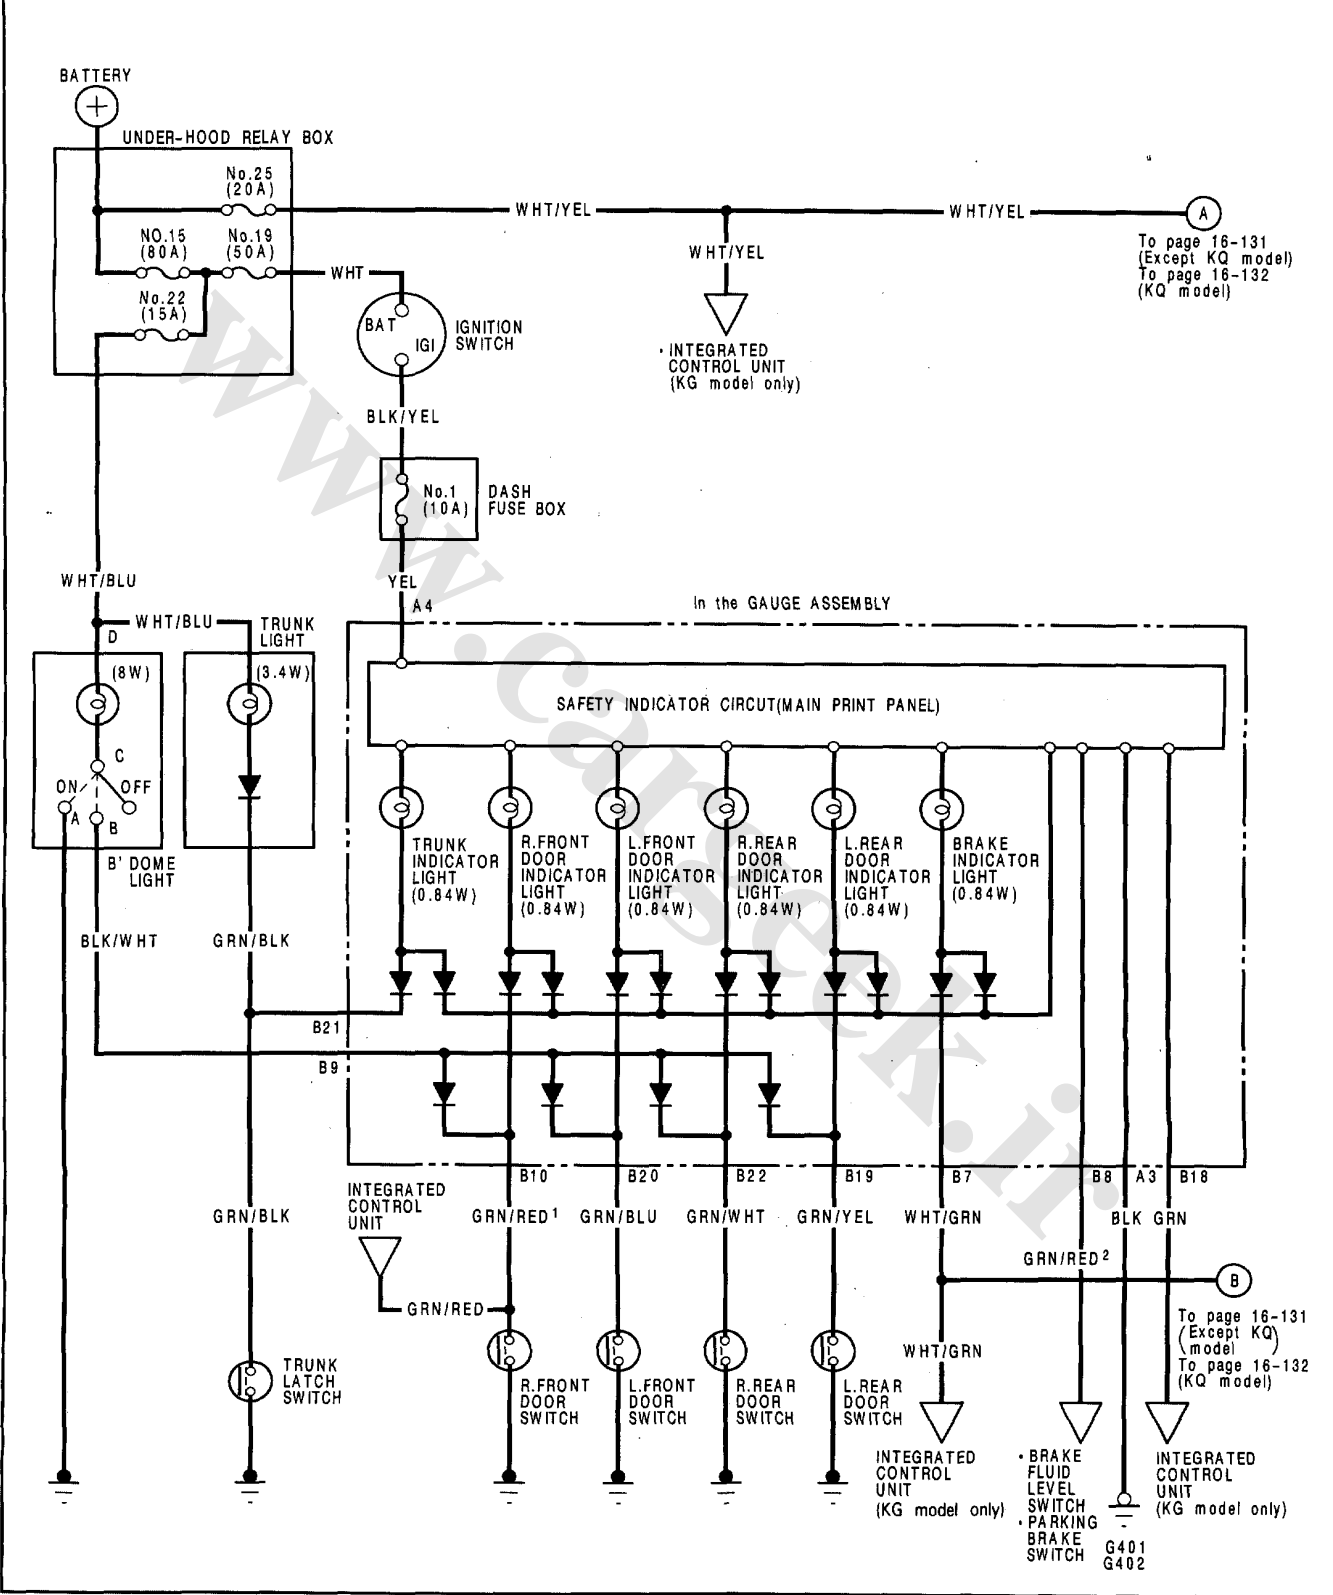


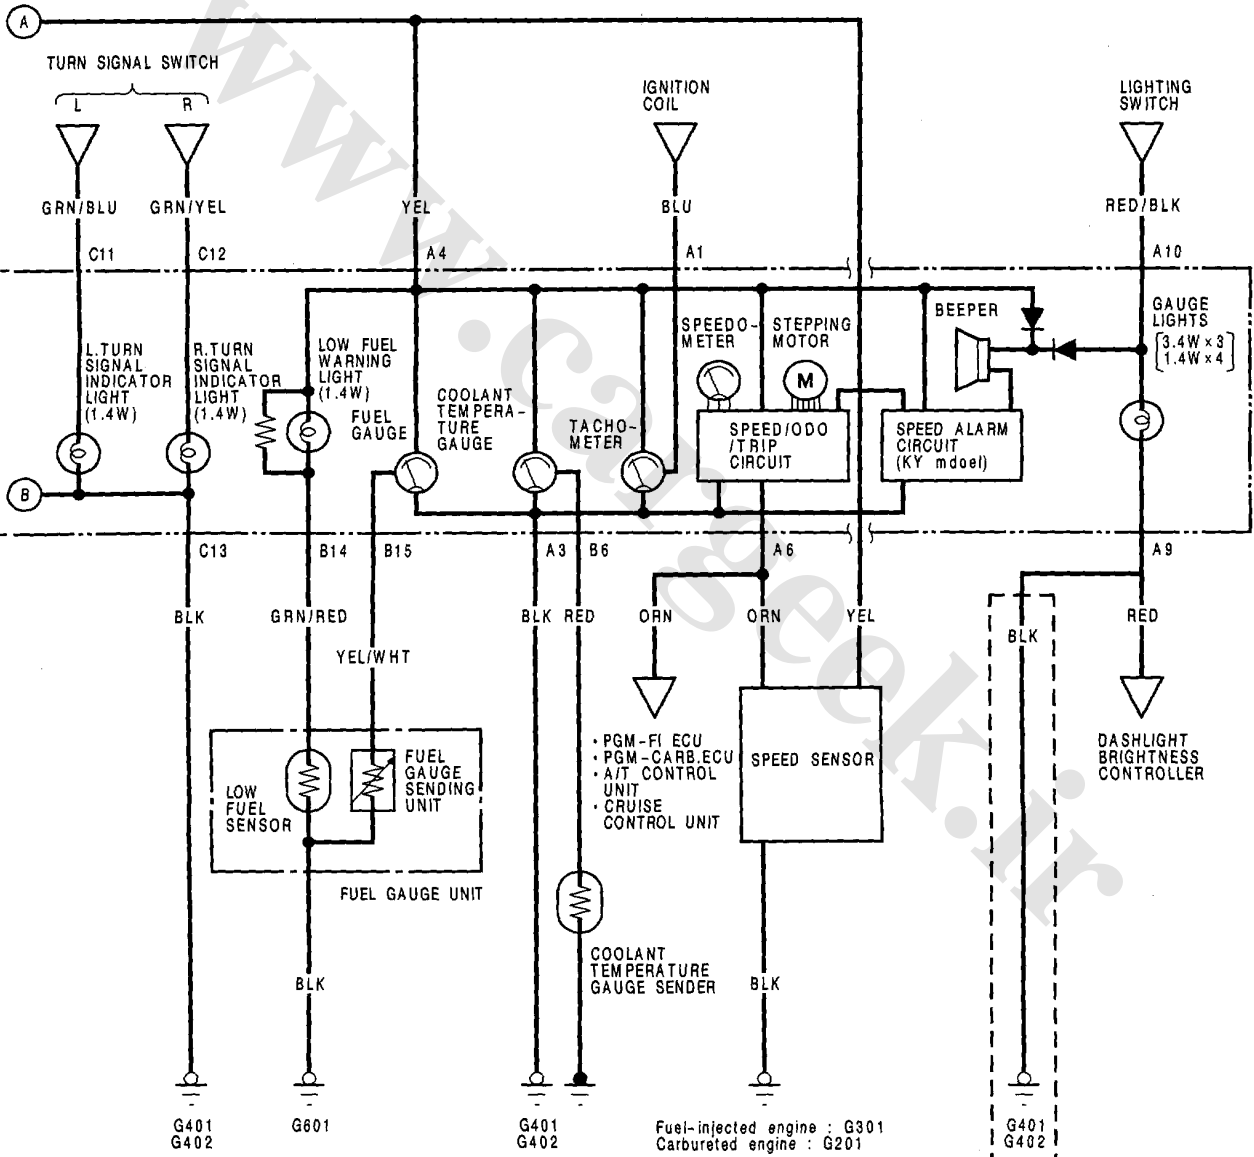

Gauge Assembly

Terminal Locations


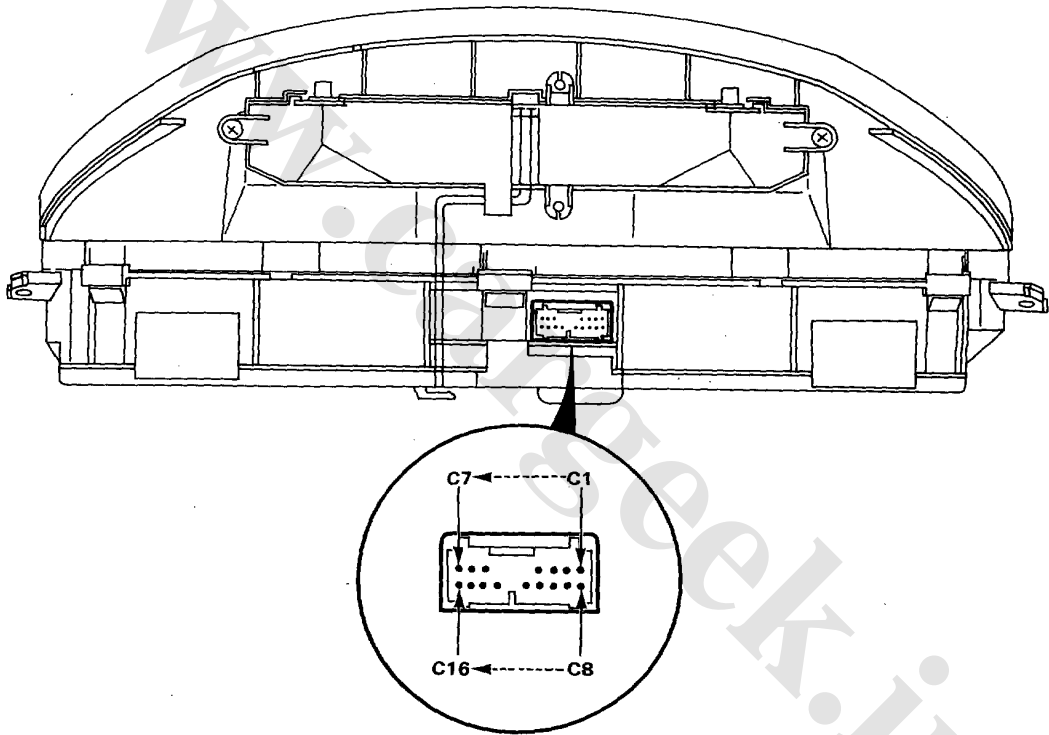


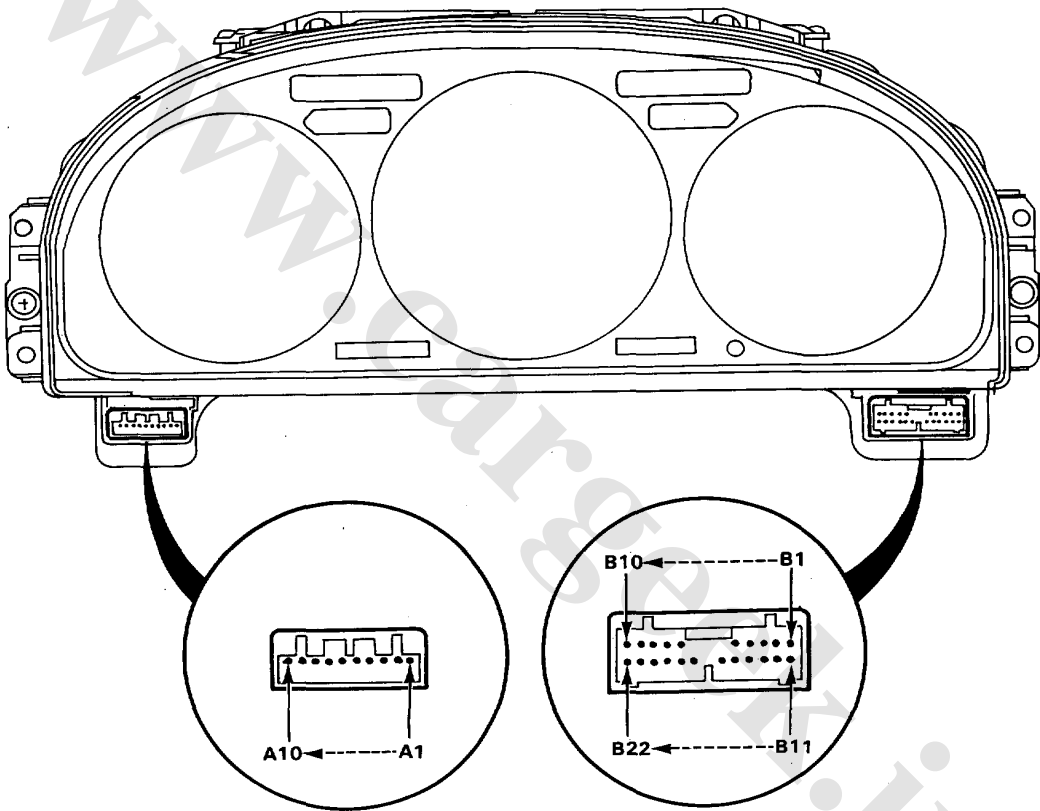

Gauge Assembly



Bulb Locations (ND)

GAUGE LIGHTS (1.4 W x 2)

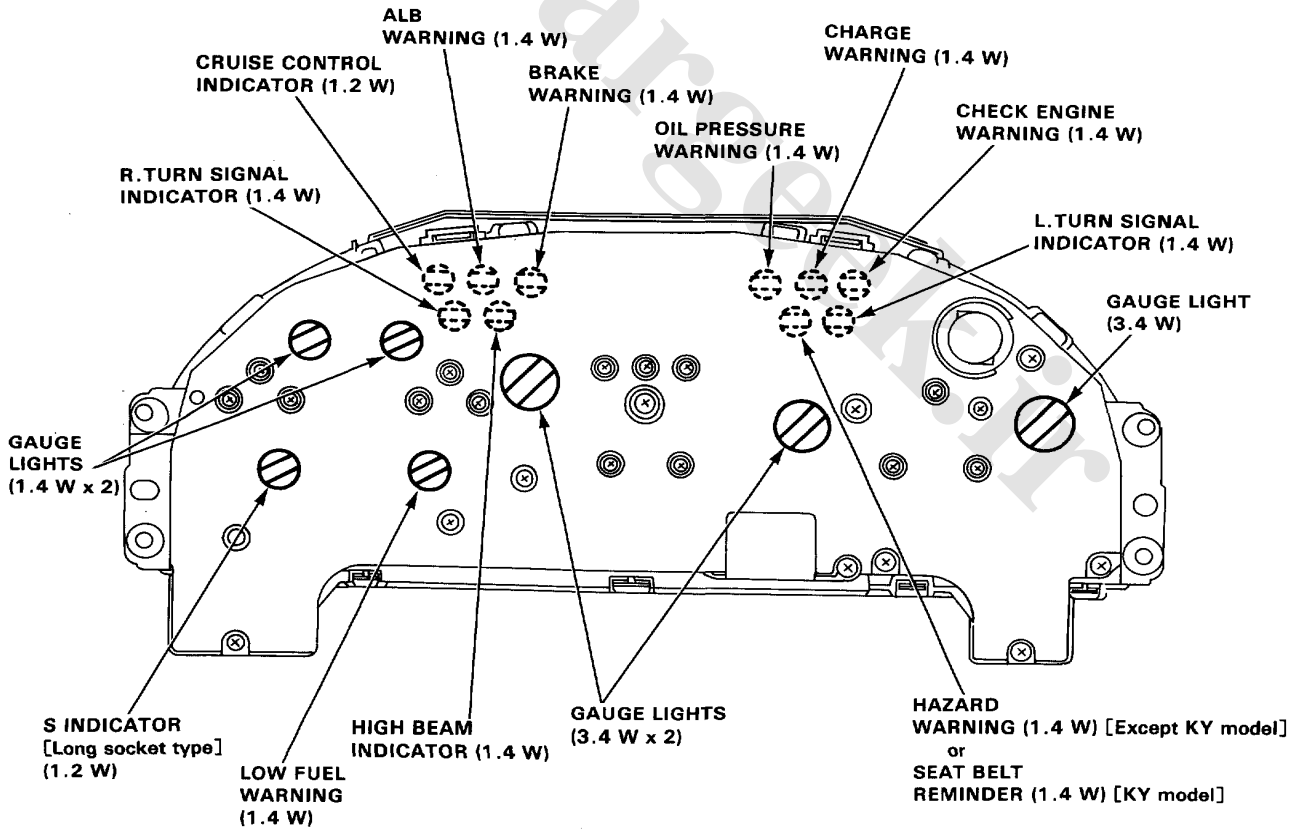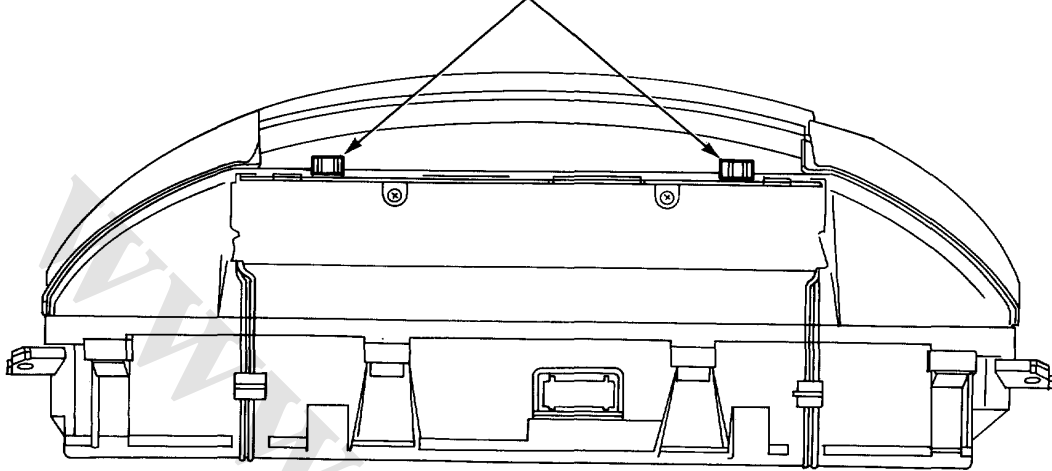




(NS)

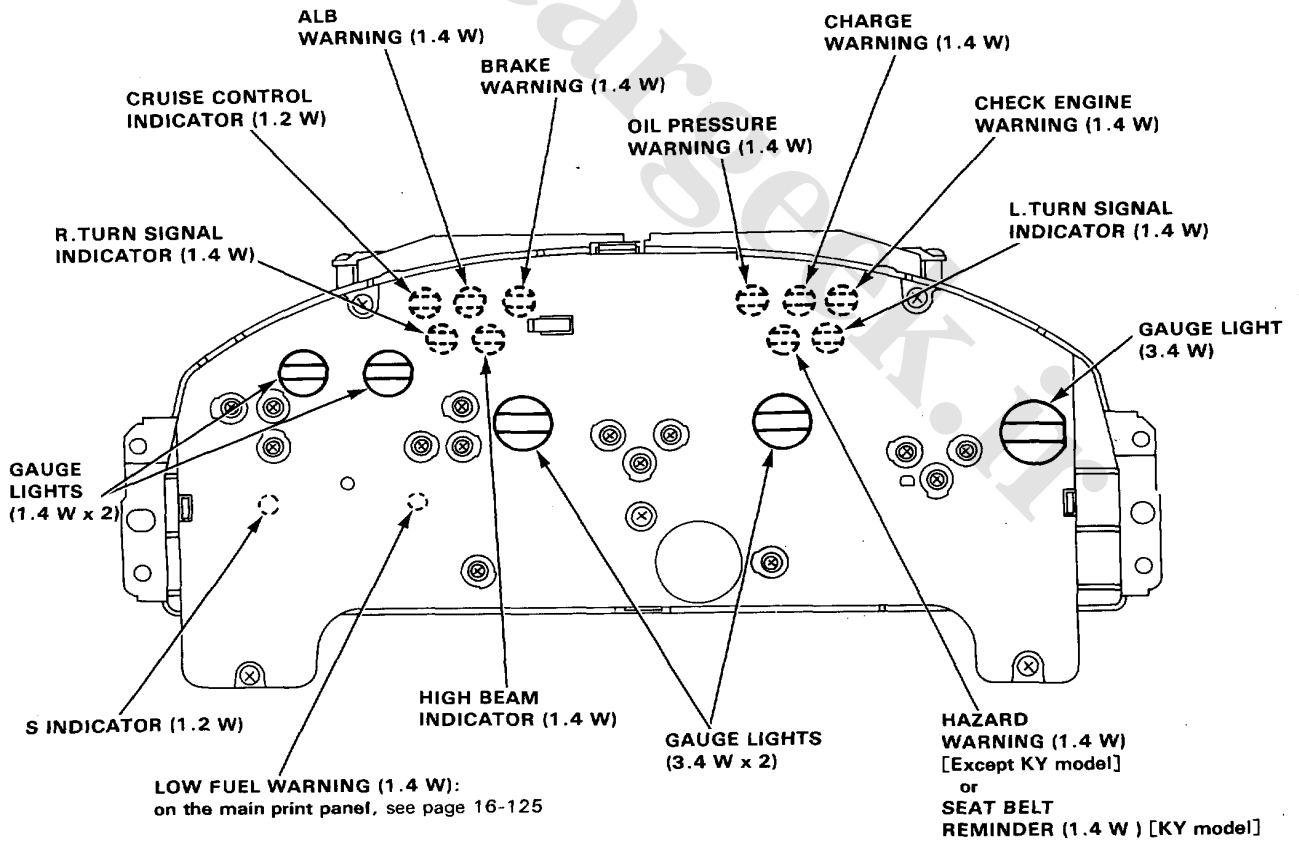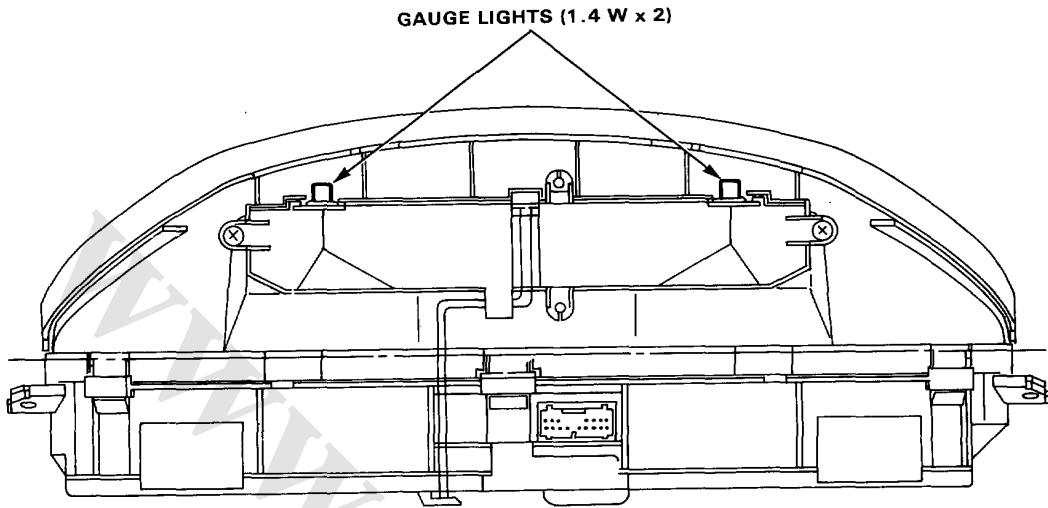

Gauge Assembly


Disassembly (ND)

NOTE: Handle the terminals and printed circuits carefully to avoid damaging them.

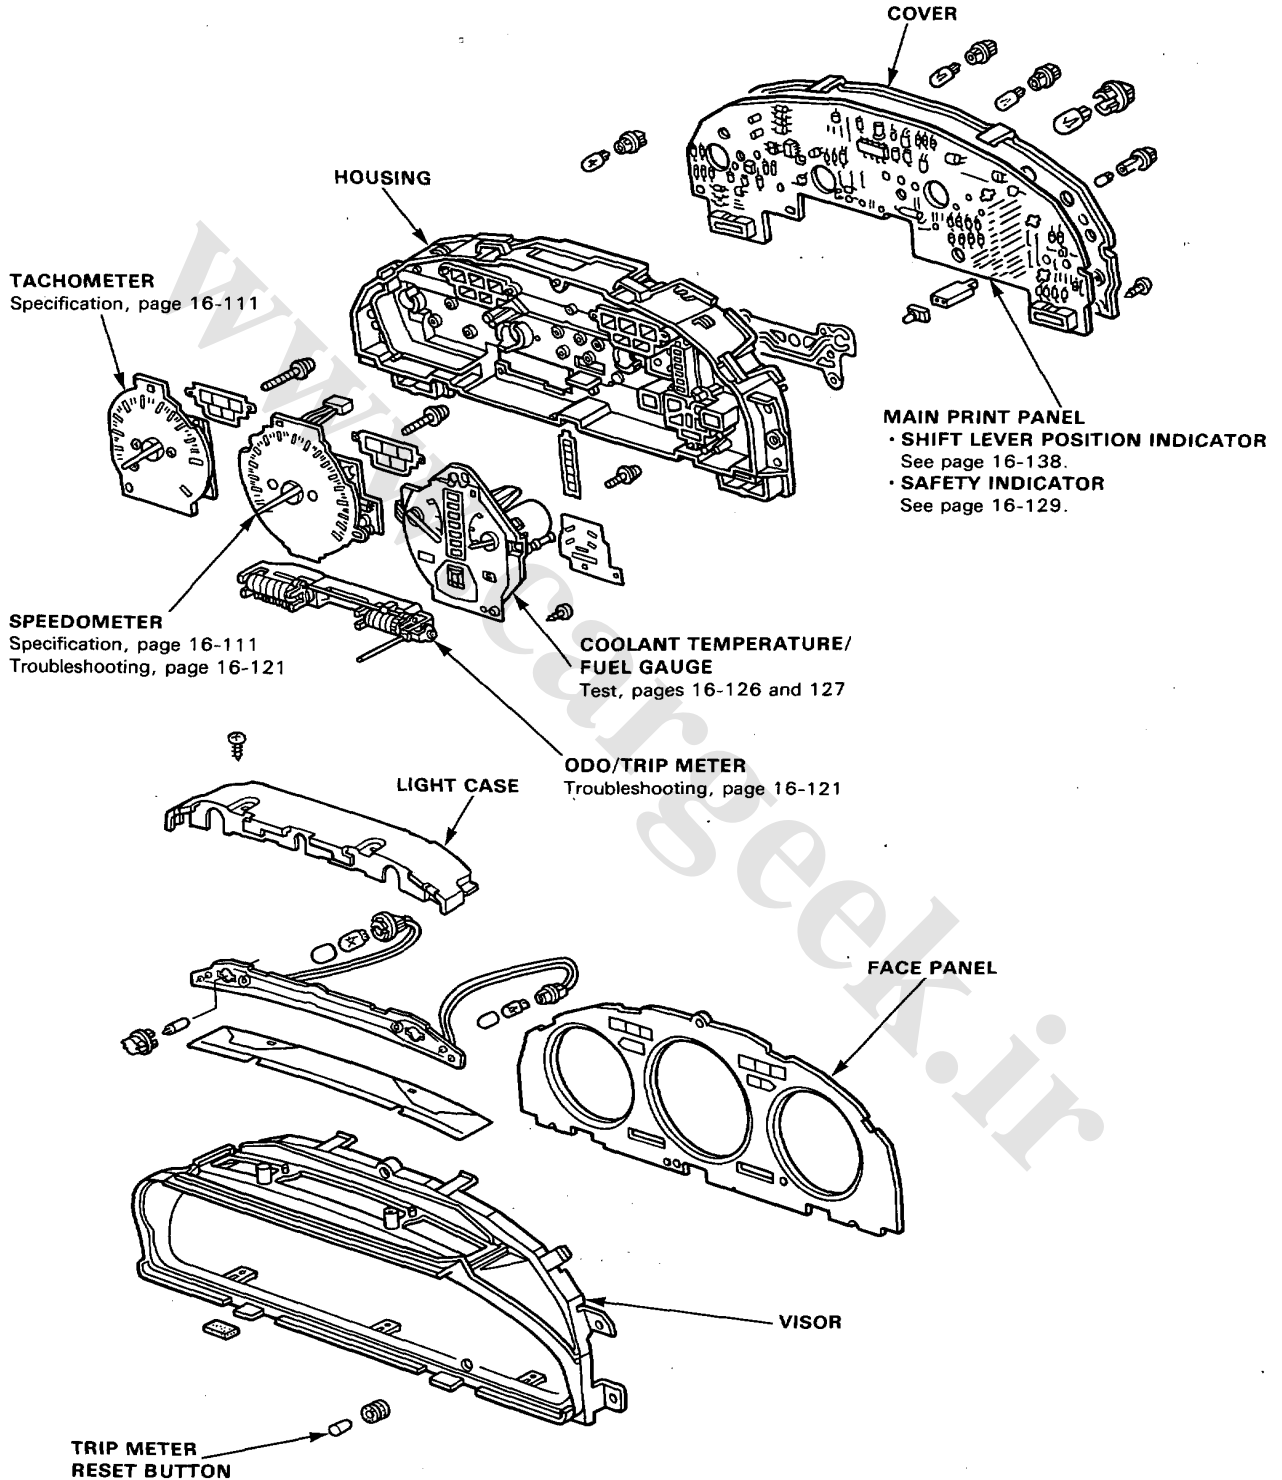




(NS)

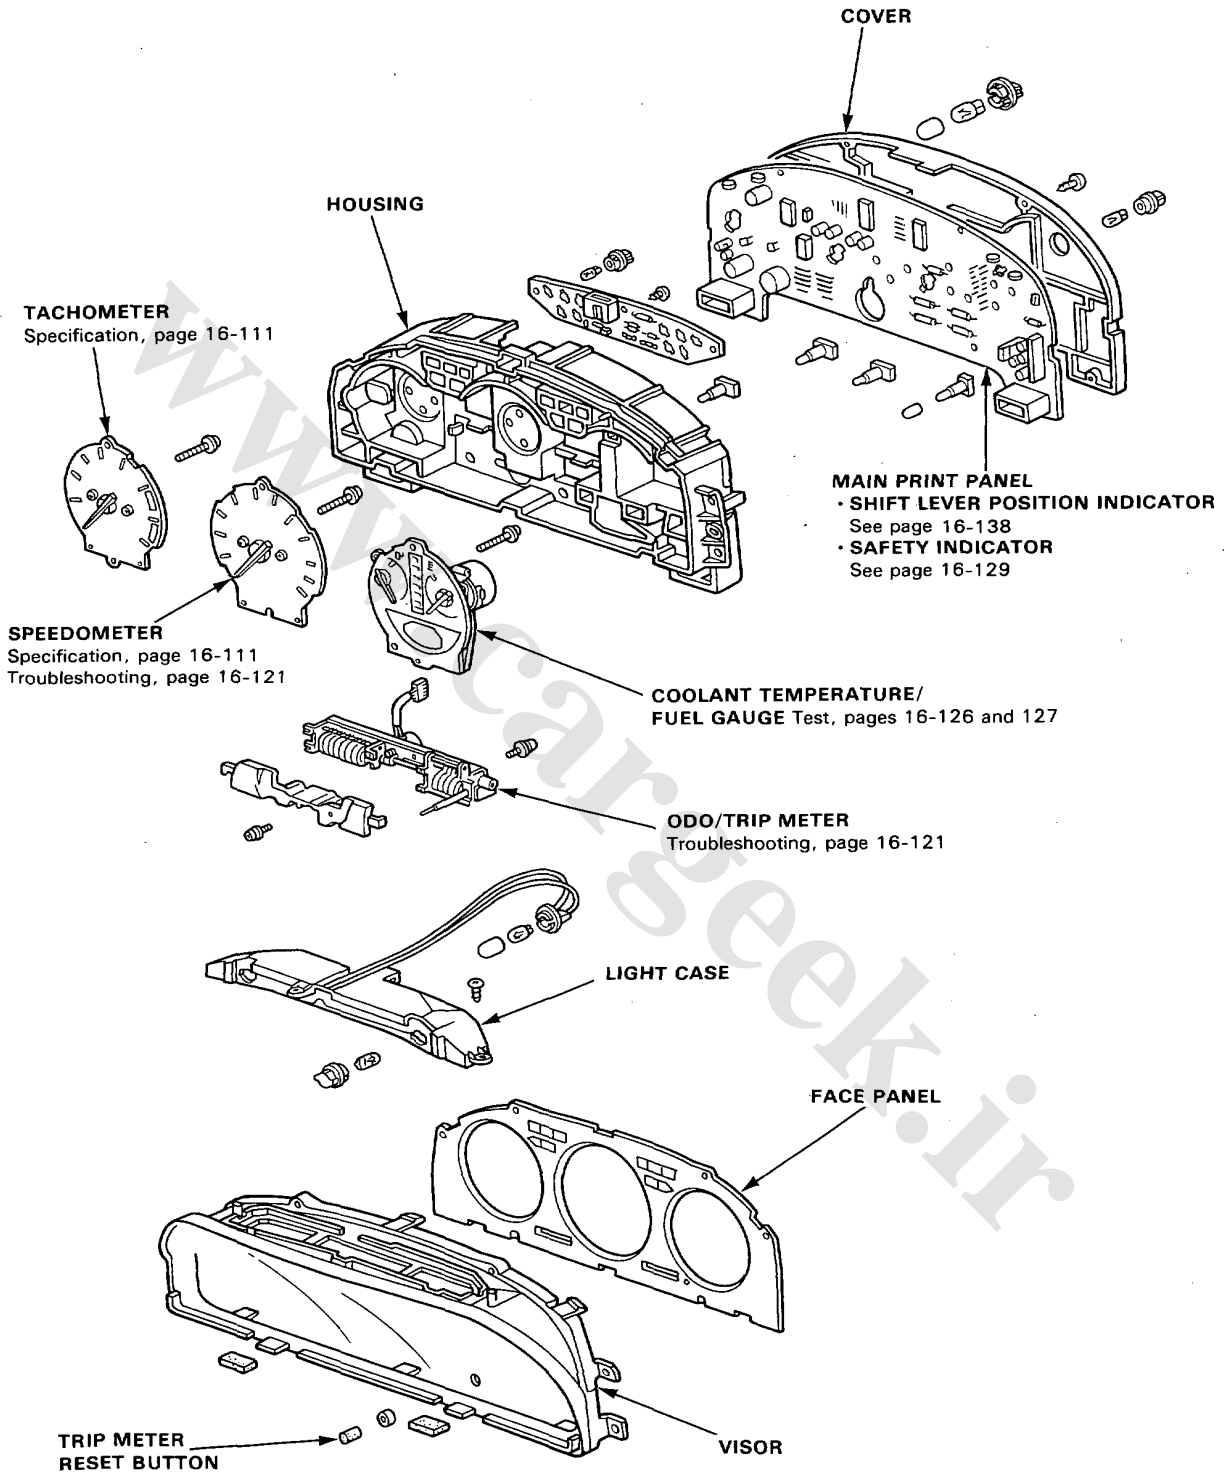


Gauge Assembly

Removal

1. Remove the console and the instrument panel from the dashboard, then disconnect each switch connector.

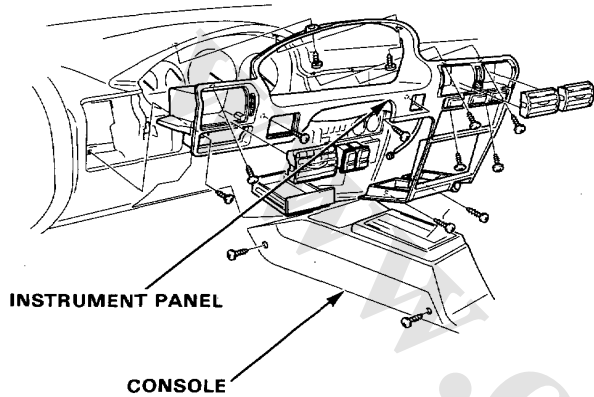


2. Remove the 4 screws and the gauge assembly, then disconnect 10-P, 16-P and 22-P connectors.

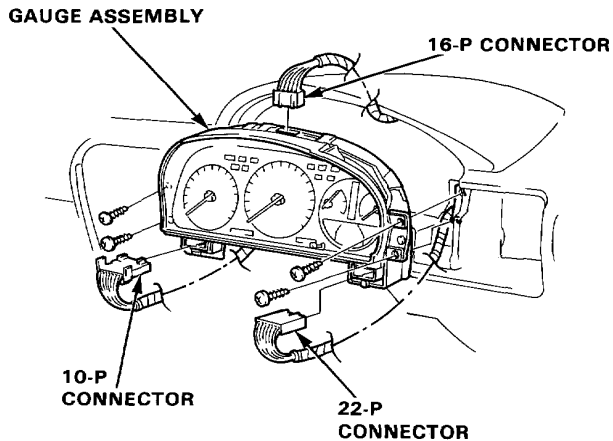

Beeper Test (ND)

1. Remove the beeper from the gauge assembly.
2. Test the beeper operation by connecting the battery positive to the \oplus terminal (\oplus mark), and negative to the \ominus terminal.

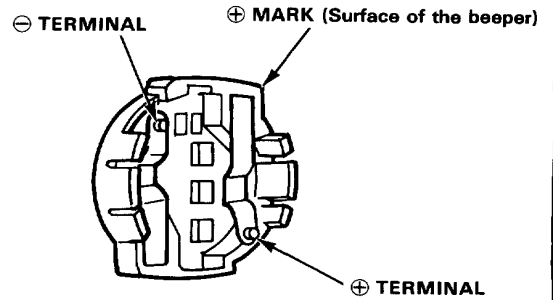

3. If the beeper fails to operate, replace it.



Speed/Odo/Trip meter Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Item to be inspected Symptom	Blown No.1 (10 A) fuse (in the dash fuse box)	ND		NS		Speed sensor input test	Speed sensor is not installed correctly	Poor ground	Open circuit in wires or loose or disconnected terminals
		Speedometer	Odo/trip meter	Main print panel	Odo/trip meter				
Speedometer does not operate.	1			1					ORN
Speedometer operates, but deflection error is great.	2			2			1		
Odo/trip meter does not operate.			1		1				
Speedometer and odo/trip meter do not operate.	1	3		3			2	G401 G402	YEL or ORN

NOTE:


- NS speedometer circuit is built in the main print panel assembly.
- Replace all of the main print panel, the tachometer, the speedometer and the odo/trip meter as a set if one of the above parts is defective.

Gauge Assembly

Speed Sensor Input Test

NOTE: Check the No.1 (10 A) fuse in the dash fuse box before testing.

1. Disconnect the 3-P connector from the speed sensor.

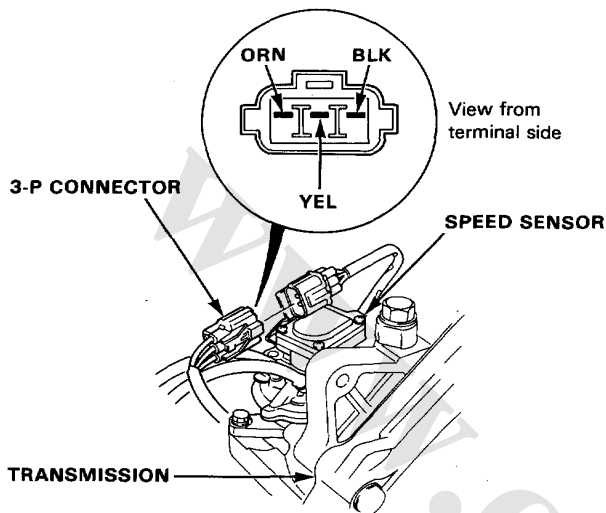

2. Check for continuity between the BLK terminal and body ground.

There should be continuity.

- If there is no continuity, check for:

- An open in the BLK wire.
- Poor ground (Fuel-injected engine: G301
Carbureted engine: G201)

- If there is continuity, go to step 3.

3. Check for voltage between the YEL terminal and body ground with the ignition switch ON.

There should be battery voltage.

- If there is no voltage, check for an open in the YEL wire.

- If there is battery voltage, go to step 4.

4. Check for voltage between the ORN terminal and body ground with the ignition switch ON.

There should be approximately 5 V.

- If there is no voltage, check for:

- A6 terminal of gauge assembly (see page 16-115).
- An open in the ORN wire.


- If there is approximately 5 V, go to step 5.

5. If all continuity and voltage tests are normal, but the speedometer and the odo/trip meter do not operate, replace the speed sensor.



Replacement

1. Disconnect the 3-P connector from the speed sensor.
2. Remove the mounting bolts and the speed sensor from the power steering speed sensor.

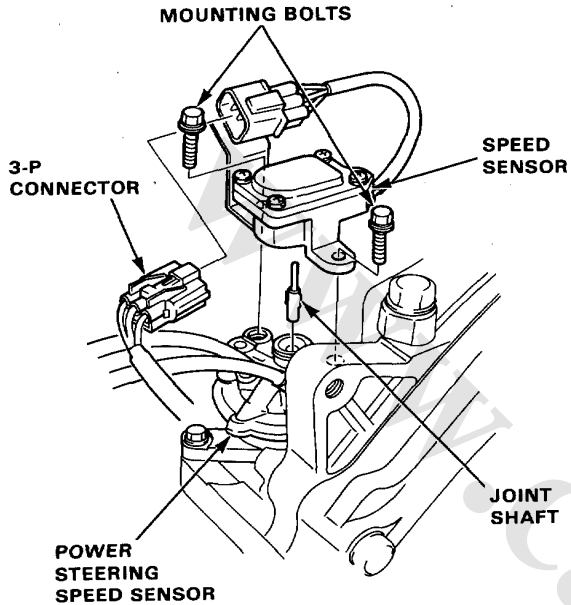

3. Install in the reverse order of removal.

NOTE: Be careful not to loose the joint shaft, for it is a tiny part.

Brake Warning System

Description

NOTE: Refer to page 16-112 for wiring description of the circuit check system.

Description:

The brake warning light goes on if the parking brake is applied, if the brake fluid level is low, and as a circuit test while cranking the engine.

Parking Brake:

With the ignition switch in "Run" or "Start", and the parking brake switch closed, the brake warning light operates to remind the driver that the parking brake is applied.

Brake Fluid Level:

With the ignition switch in "Run" or "Start", and the brake fluid level switch closed, the brake warning light operates to warn the driver of low brake fluid level in the brake master cylinder.


NOTE: Low fluid level indicates brake wear or system leaks; check brake pad wear before adding fluid.

Circuit Check: KY model only

With the ignition switch in "Start", voltage is applied through the No.9 (7.5A) fuse in the dash fuse box to the circuit check built into the integrated control unit. The circuit check transistor is on, and current flows through the No.1 (10A) fuse in the dash fuse box, the brake warning light and the circuit transistor to ground. The brake warning light operates. This operation tests the brake warning circuit and bulb.


Parking Brake Switch Test

1. Remove the center console and disconnect the connector from the switch.
2. There should be continuity between the positive terminal and body ground with the brake lever up. There should be no continuity with the brake lever down.

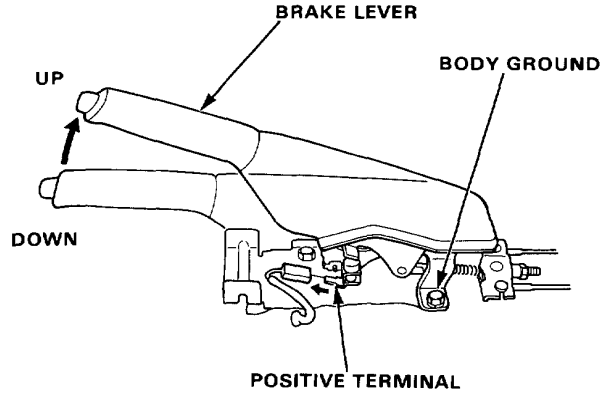

Brake Fluid Level Switch Test




1. Remove the reservoir cap. Check that the float moves up and down freely. Replace the reservoir cap assembly if the float does not move freely.
2. Check for continuity between the terminals with the float up and down. There should be continuity with the float down and no continuity with the float up. Replace the reservoir cap assembly if necessary.

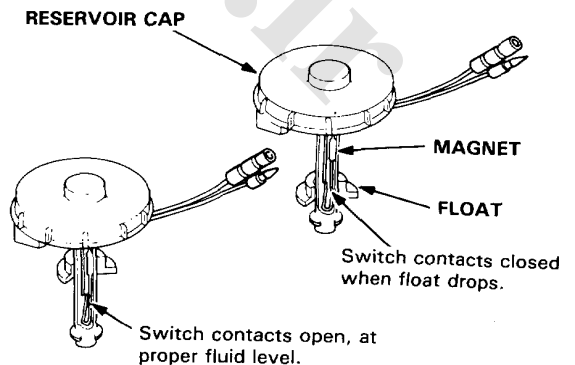



- Compare the readings to the chart below. If no output or below specification, go to step 7. If output is within specification, go to step 6.

NOTE: Subtract 5 to 10 amperes from the maximum reading due to engine operation.

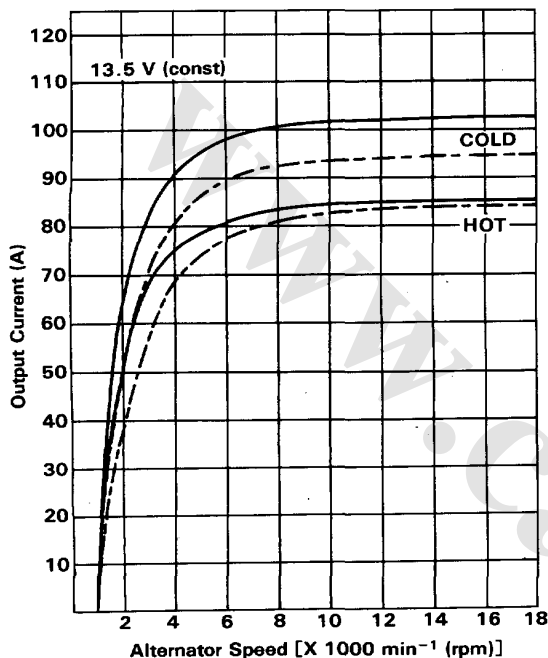


Engine Speed [min⁻¹ (rpm)]
 (A) ——— : Fuel-injected engine (All models)
 Carbureted engine (KS, KW and KY models)
 (B) - - - : Carbureted engine (Except KS, KW and KY models)

- Turn off all loads in step 4, then measure the alternator output voltage at 1,500 min⁻¹ (rpm).

- If the voltage is between 13.9 V and 15.1 V, the alternator and regulator are OK. If the charge warning light is still on, see Charge Warning Light Test.

- Perform a full-field test: Insert a short screwdriver into the full field access hole at the back of the alternator. While grounding the screwdriver and check amperage reading.

CAUTION: The voltage will rise quickly when the alternator is full fielded. Do not allow the voltage to exceed 18 volts or damage to the electrical system may result.

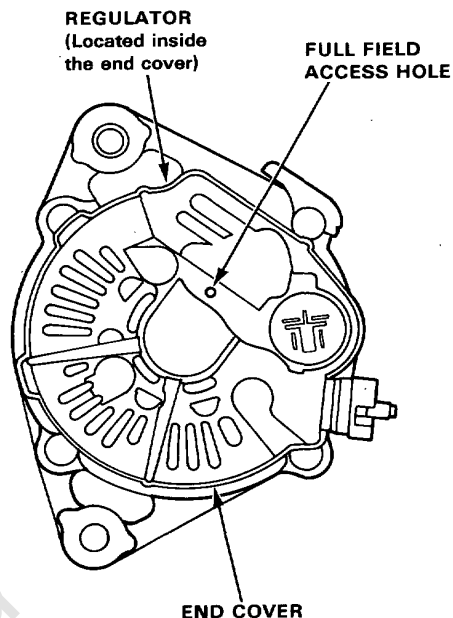


- If the amperage is not within specification, replace the alternator.
- If the amperage is within specification, replace the voltage regulator.

Charging System

Charge Warning Light Test

NOTE: Before testing, check the wire harness connection, alternator belt tension and No.2 (15 A) fuse in the dash fuse box.

1. Turn the ignition switch on. The charge warning light should come on.
If it does not come on, unplug the alternator connector and short the pin of the L (WHT/BLU) terminal to ground.

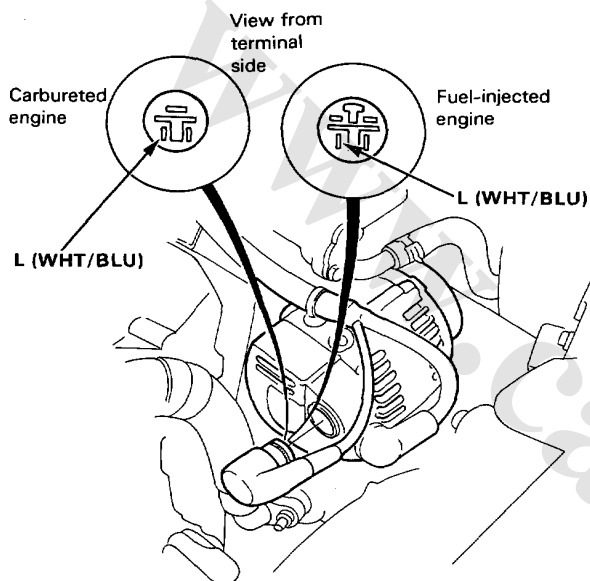


- If the warning light still does not come on, check for:
 - Bad bulb.
 - An open in the WHT/BLU wire between the warning light and voltage regulator.
 - An open in the BLK/YEL wire between the warning light and the dash fuse box, or the dash fuse box and the ignition switch.
- If the light comes on, check the alternator and regulator (see page 16-94).

2. Start the engine and let it idle. The charge warning light should go off.
If it stays on this time, check the alternator and regulator (see page 16-94).
If the system is charging, proceed as follows.

3. Without ALB: There is a short to ground in the WHT/BLU wire between the warning light and the dash fuse box, or the dash fuse box and the voltage regulator.

With ALB: Go to step 4

4. Unplug the alternator connector, then remove the right trunk trim panel.
Disconnect the 18-P connector from the ALB control unit.
With the ignition switch ON, the charge warning light should go off.

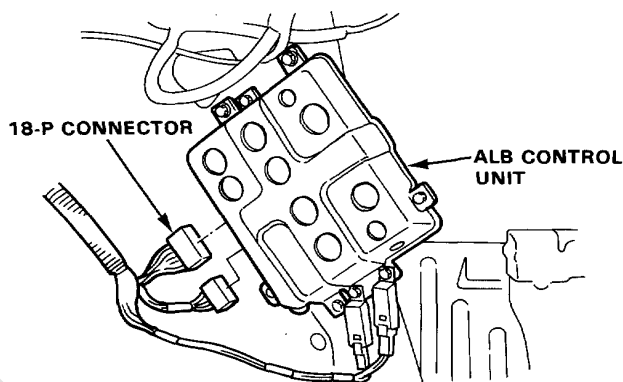

- If the light goes off, there is a short in the ALB control unit.
- If the light does not go off, there is a short to ground in the WHT/BLU wire between the ALB control unit and the dash fuse box, or the dash fuse box and the voltage regulator.

Low Fuel Warning System

Warning Light Test

NOTE: Refer to page 16-112 for wiring description of the low fuel warning circuit.


1. Park car on level ground.

WARNING Do not smoke while working on fuel system. Keep open flame away from work area. Drain fuel only into an approved container.

2. Drain fuel tank into an approved container. Then install the drain bolt with a new washer.
3. Add less than 8.6 l (2.2 U.S. Gal, 1.8 Imp. Gal) of fuel and turn the ignition switch on. The low fuel warning light should come on within 4 minutes.
4. Then add one more gallon of fuel [approx. 4 l (1.1 U.S. Gal, 0.9 Imp. Gal)]. The light should go out within 4 minutes.

- If the warning light did not come on in step 3, remove the maintenance access cover and disconnect the 3-P connector from the fuel gauge sending unit. Connect the A (GRN/RED) terminal to the C (BLK) terminal with a jumper wire.

- If the light comes on, the problem is either the sending unit or its ground.
- If the light does not come on, the problem is an open in the GRN/RED wire to the gauge assembly, no power to the gauge or bad bulb.

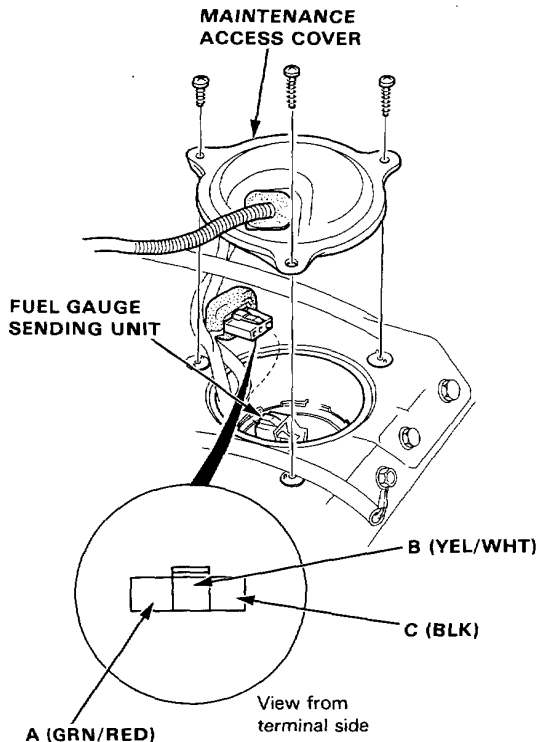

Oil Pressure Warning System



Description

NOTE: Refer to page 16-112 for wiring description of the oil pressure warning circuit.

With the engine running and normal oil pressure, the oil pressure switch is open and the oil pressure warning light does not operate. If engine oil pressure falls below 24.5 kpa (0.25 kg/cm², 3.6 psi), the oil pressure switch is closed, current flows through the oil pressure warning light and the oil pressure switch to ground, and the oil pressure light goes on.

Oil Pressure Switch Test


1. Disconnect the YEL/RED wire from the oil pressure switch.
2. There should be continuity between the positive terminal and the engine(ground) with the engine stopped. There should be no continuity when the engine runs.

OIL PRESSURE SWITCH

18 N·m (1.8 kg-m, 13 lb-ft)

1/8 in. BSP (British Standard Pipe Taper) 28 Threads/inch.

Use proper liquid sealant.

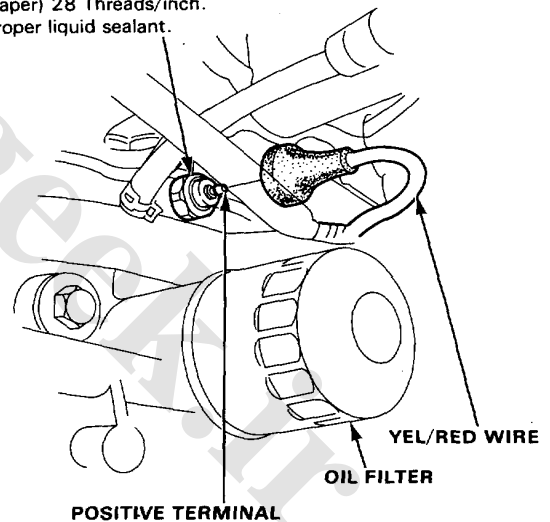

3. If the switch fails to operate, check the engine oil level, then inspect the oil pump and pressure if the oil level is correct (see section 5).



Seat Belt Reminder System (KY model only)


Description

NOTE: Refer to page 16-112 for wiring description of the seat belt reminder circuit.

With the ignition switch in "Run" or "Start", voltage is applied to the reminder of the integrated control unit. When you unbuckle the driver's seat belt, the reminder circuit senses ground at the "A14" terminal. With voltage at the "B9" terminal and ground at the "B1" terminal, the seat belt reminder chime sounds and the timer contacts close and open. This causes the seat belt reminder light to flash on and off. After 5 seconds the chime stops and the contacts remain open.


Seat Belt Switch Test

1. Slide the driver's seat forward until the seat belt center anchor bolt is accessible, to disconnect the 2-P connector from the seat belt switch.
2. There should be continuity between the A and B terminals when the driver's seat belt is not buckled. There should be no continuity when the driver's seat belt is buckled.

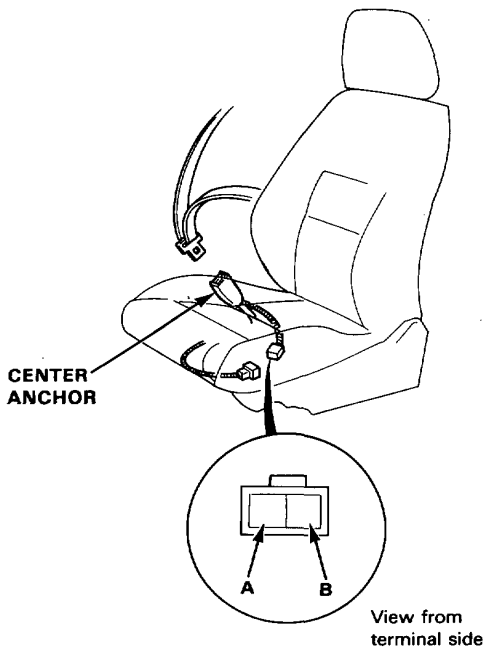

Chime Test

1. Remove the left side kick panel and disconnect the 2-P connector from the main wire harness.
2. Test chime operation by connecting battery positive to the ORN terminal, and negative to the BLK terminal, and cycling the power on-off repeatedly.
3. If the chime fails to sound every time power is cycled, replace it.

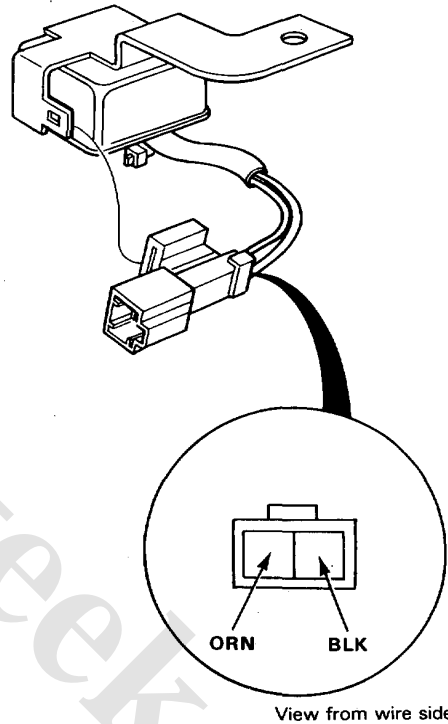




Wipers/Washers


Component Location Index

- Troubleshooting 16-246

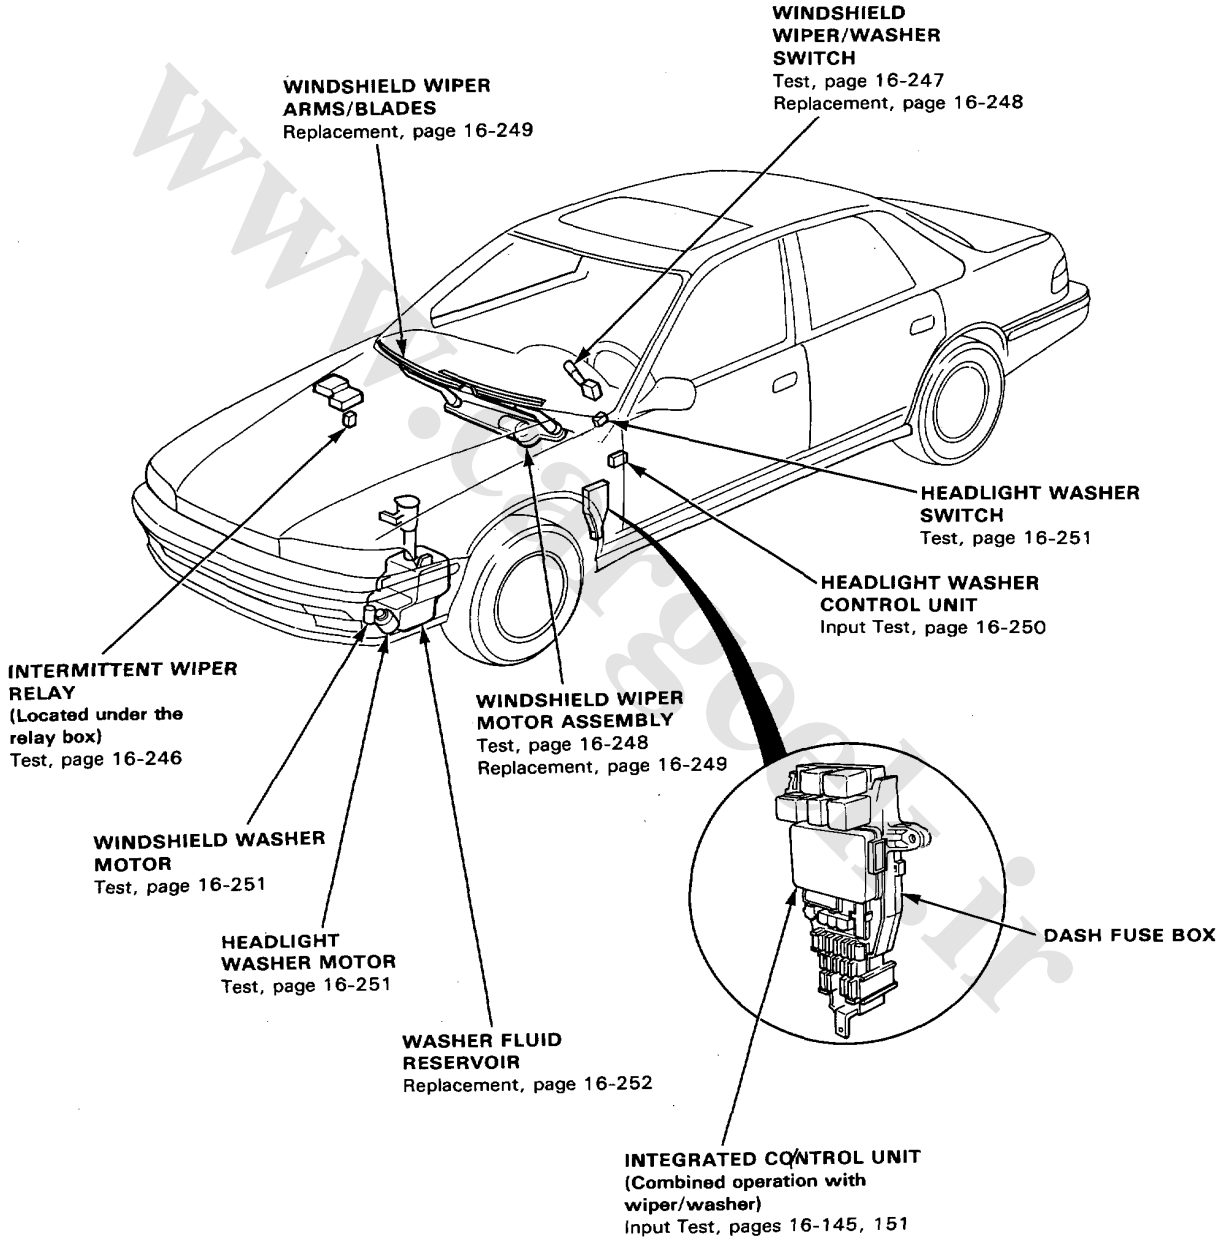


Wipers/Washers

Circuit Diagram

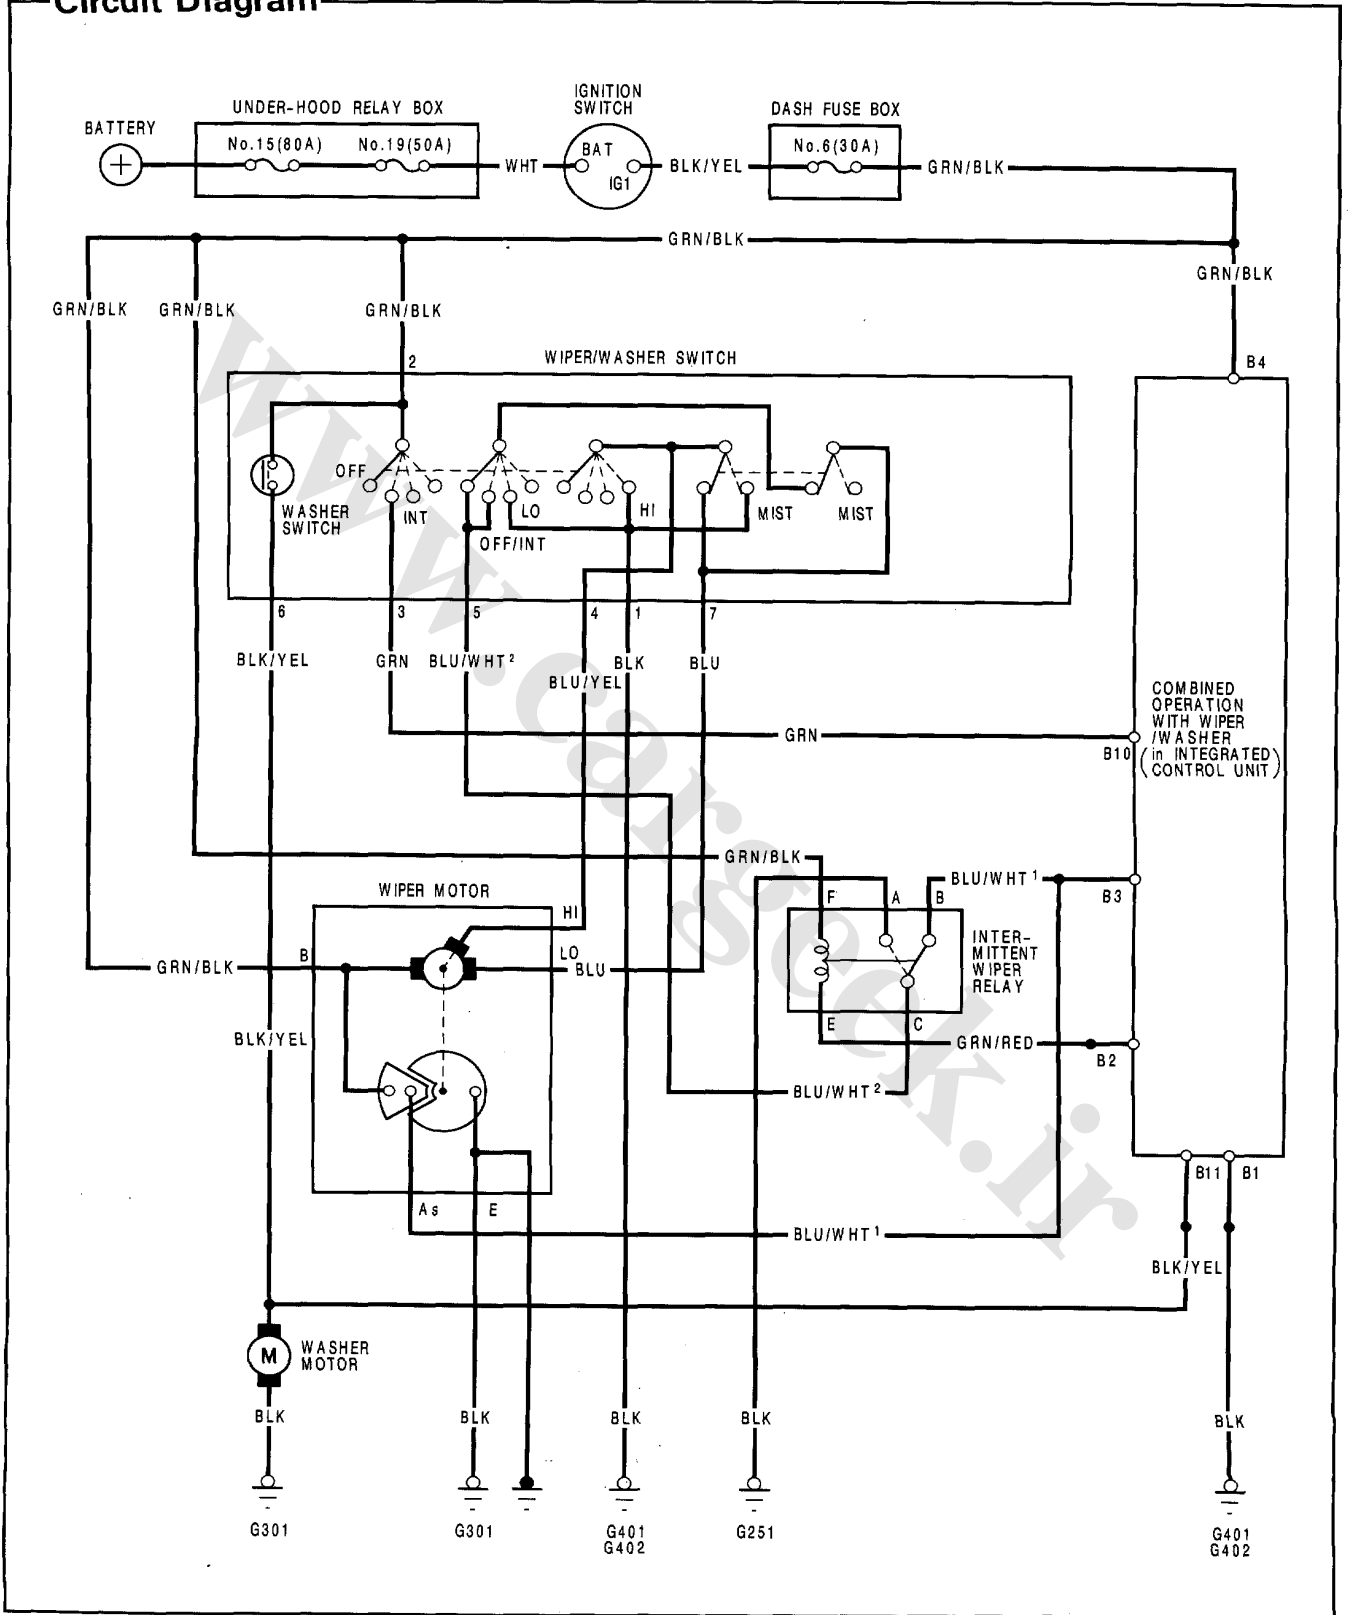



Circuit Diagram (Headlight Washer)

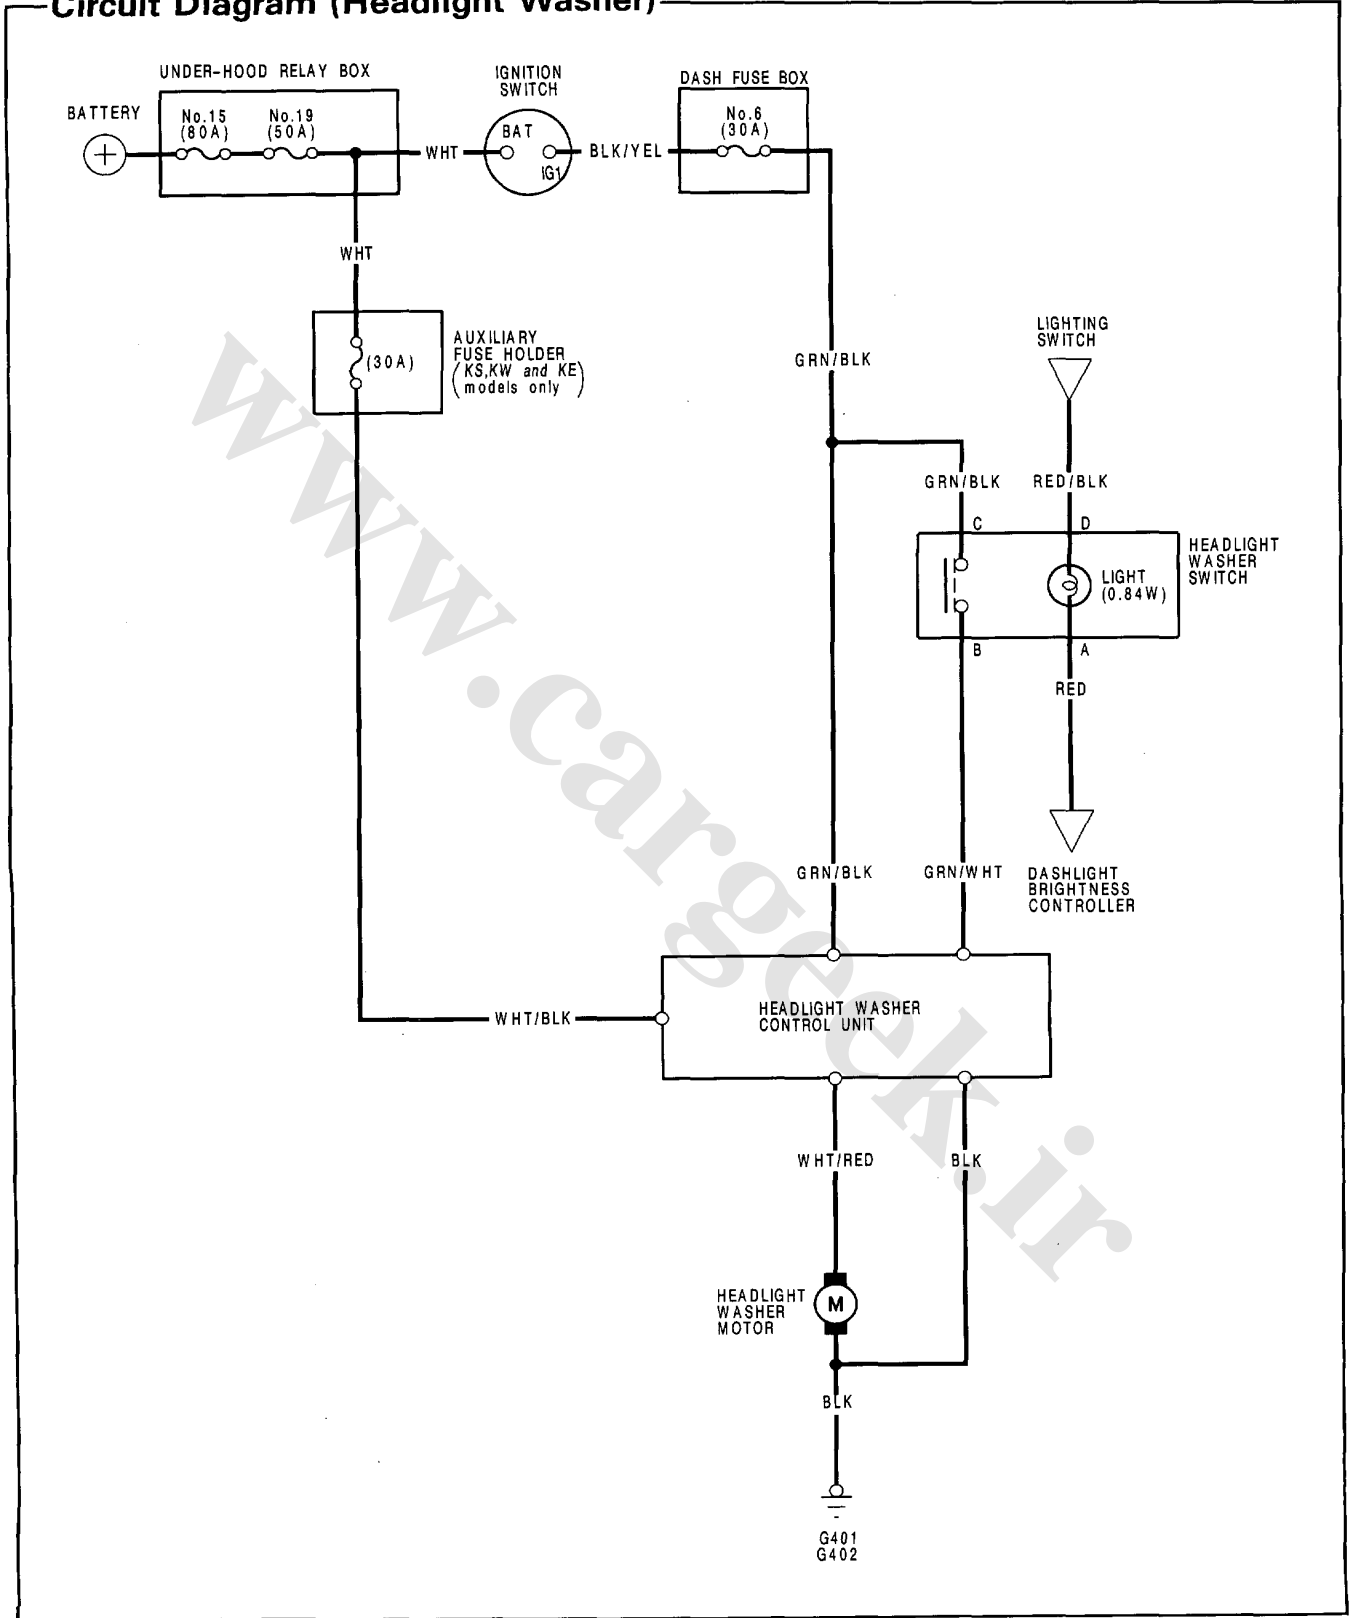

Wipers/Washers



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom		Item to be inspected												
		Blown No. 6 (30 A) fuse (in the dash fuse box)	Wiper switch	Mist switch	Wiper motor assembly	Washer switch	Washer motor	Intermittent wiper relay	Combined operation with washer (in the integrated control unit)	Insufficient washer fluid in reservoir	Disconnected blocked washer hose or clogged outlet	Disconnected wiper linkages	Poor Ground	Open circuit in wires or loose or disconnected terminals
Wipers do not operate	In all positions	1	4		2							3	G301	GRN/BLK
	In INT		1				2							ORN, BLU/WHT ¹
	In LO or HI		1		2									BLU/YEL, BLU
	In MIST			1										
Blades do not return to park position when wipers are turned OFF.			2		1									BLU/WHT ¹
Erratic intermittent cycle or wipers do not operate intermittently.							1							GRN/BLK, GRN BLU/WHT ¹ , GRN/RED
Little or no washer fluid is pumped.						4	3		1	2			G301	BLK/YEL
Wipers do not operate simultaneously with washer.														BLK/YEL

Intermittent Wiper Relay Test


1. Remove the intermittent wiper relay.
2. There should be continuity between the A and C terminals when the battery is connected to the E and F terminals.
There should be continuity between the B and C terminals when the battery is disconnected.

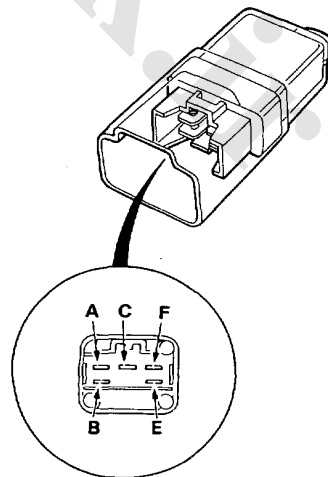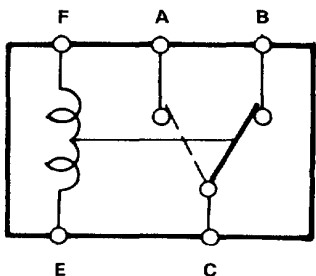



Wiper/Washer Switch Test

1. Remove the instrument lower panel.
2. Disconnect the 7-P connector of wiper washer switch from the main wire harness.
3. Check for continuity between the terminal in each switch position according to the table.

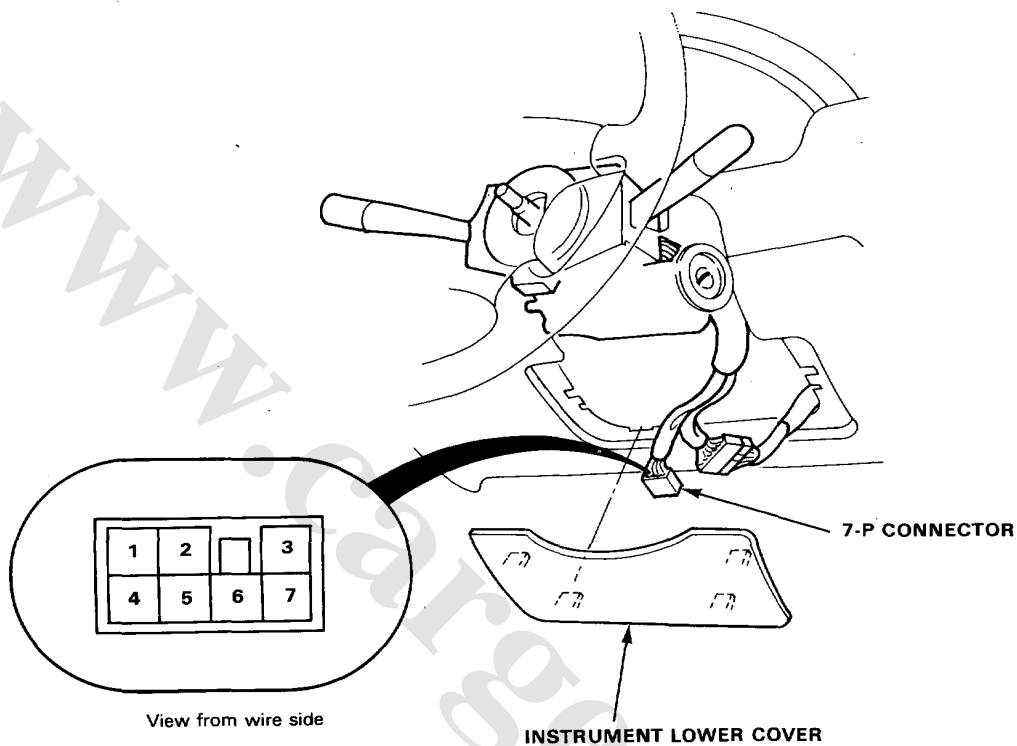

Terminal	1	2	3	4	5	6	7
Position							
OFF					○		○
INT		○	○		○		○
Lo	○						○
Hi	○			○			
Mist switch "ON"	○			○			
Washer switch "ON"		○				○	

Wipers/Washers


Wiper/Washer Switch Replacement

1. Remove the steering wheel.
2. Remove the lower and upper covers from the steering column.
3. Disconnect the 8-P and 2-P connectors from the wiper/washer switch.
4. Remove the 2 screws and slide the wiper/washer switch out of the housing as shown.

NOTE:


- Be careful not to damage the steering wheel cover.
- If equipped with cruise control, remove the wiper/washer switch after removing the slip ring (see page 16-262).

SELF-LOCKING NUT
50 N·m (5.0 kg-m, 36.2 lb-ft)
Replace.

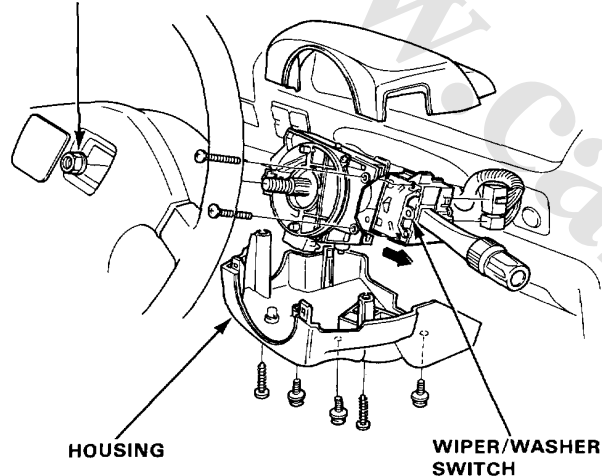

Windshield Wiper Motor Test

1. Disconnect the 5-P connector of the wiper motor assembly.
2. Test motor operation:
LOW SPEED: Connect battery positive to the B (GRN/BLK) terminal and negative to the Lo (BLU) terminal.
HIGH SPEED: Connect battery positive to the B (GRN/BLK) terminal and negative to the Hi (BLU/YEL) terminal.
3. If the motor fails to run smoothly, replace it.

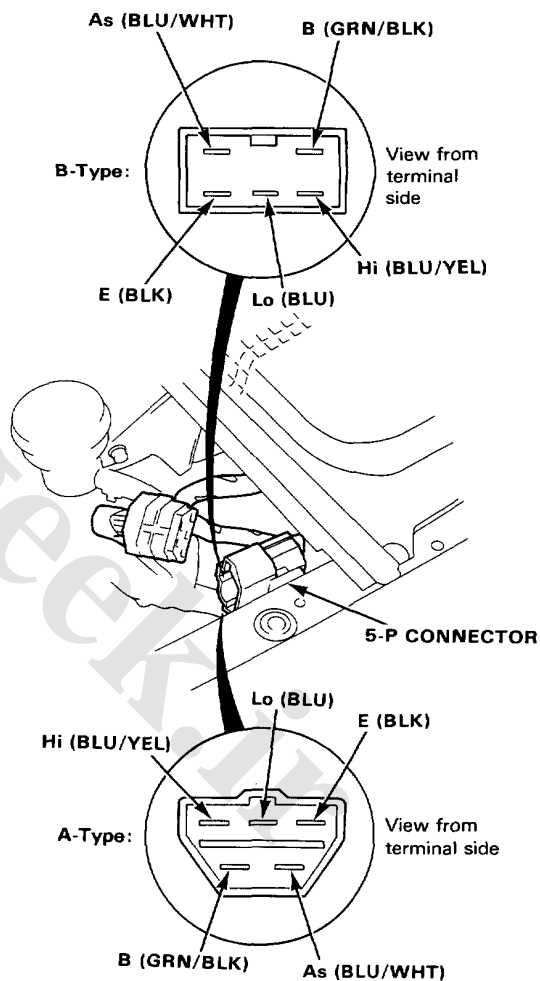




Windshield Wiper Motor Replacement


1. Open the hood and remove the cap nuts and the wiper arms

NOTE: Carefully remove the wiper arms so that the wiper arms do not touch the hood.

2. Remove the hood seal and air scoop by prying off the trim clips and removing the screws.

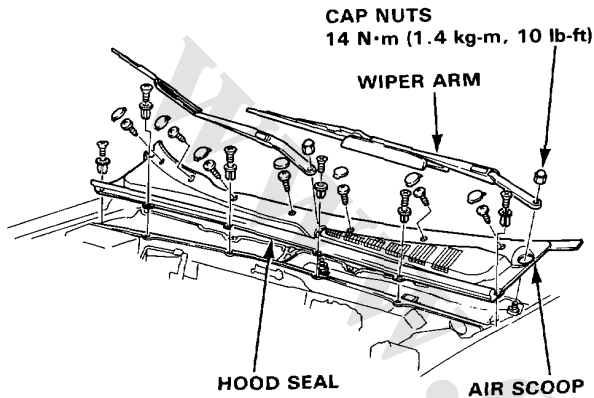


3. Disconnect the 5-P connector from the wiper motor assembly, then remove the 3 mounting bolts and the wiper linkage assembly.

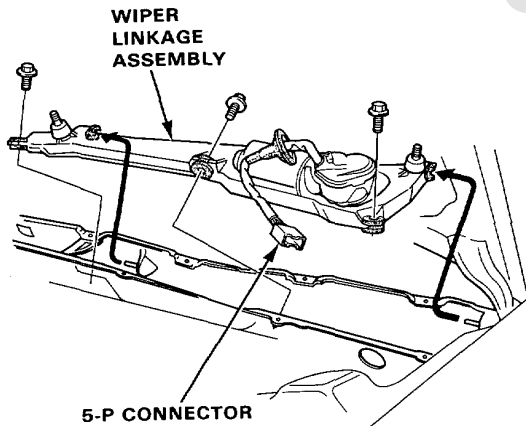

4. Remove the 3 mounting bolts and 1 nut from the wiper linkage assembly to remove the wiper motor assembly.

MOUNTING BOLTS

10 N·m (1.0 kg-m,
7.2 lb-ft)

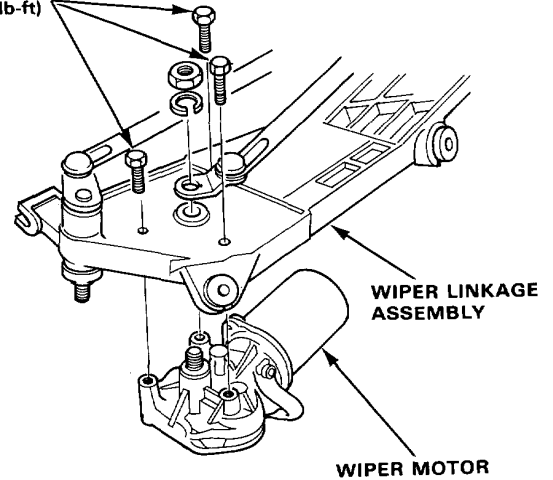

5. Install the wiper motor assembly in the reverse order of removal.


Wipers/Washers

Headlight Washer Control Unit Input Test

Disconnect the 6-P connector from the control unit, located at left kick panel.

Make the following input tests at the harness pins.

If all tests prove OK, yet the system still fails to work, replace the control unit.

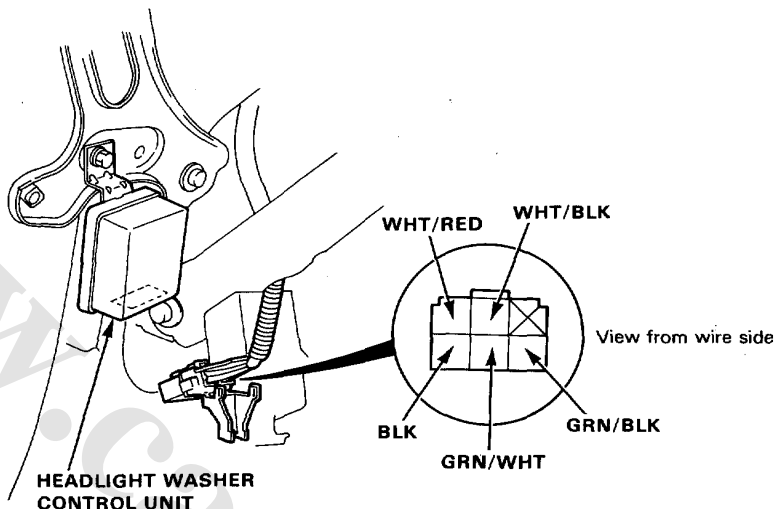

No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402). • An open in the wire.
2	WHT/BLK *	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown 30 A fuse in auxiliary fuse holder. • An open in the wire.
3	GRN/WHT	Ignition switch ON and headlight washer switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.6 (30 A) fuse. • Faulty headlight washer switch • An open in the wire.
4	WHT/RED	Connect the WHT terminal to the WHT/RED terminal.	Check the headlight washer motor operation: should run.	<ul style="list-style-type: none"> • Faulty headlight washer motor. • Poor ground (G401, G402). • An open in the wire.
5	GRN/BLK	Ignition switch ON.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.6 (30 A) fuse. • An open in the wire.

*: KS, KW and KE models only




Headlight Washer Switch Test

1. Pry out the switch from the floor console, then disconnect the 4-P connector from the switch.
2. Check for continuity between the terminals according to the table.


NOTE: Be careful not to damage the switch or the instrument panel when prying out the switch.

Terminal	B	C	A		D
Position					
OFF			○	⊕	○
ON	○	○			

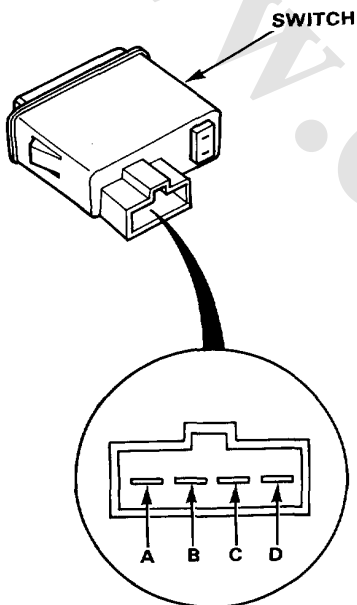

Washer Motor Test

1. Remove the front bumper and disconnect the 2-P connector from the washer motor.
2. Test washer motor operation by connecting battery positive to the ⊕ terminal and negative to the ⊖ terminal.

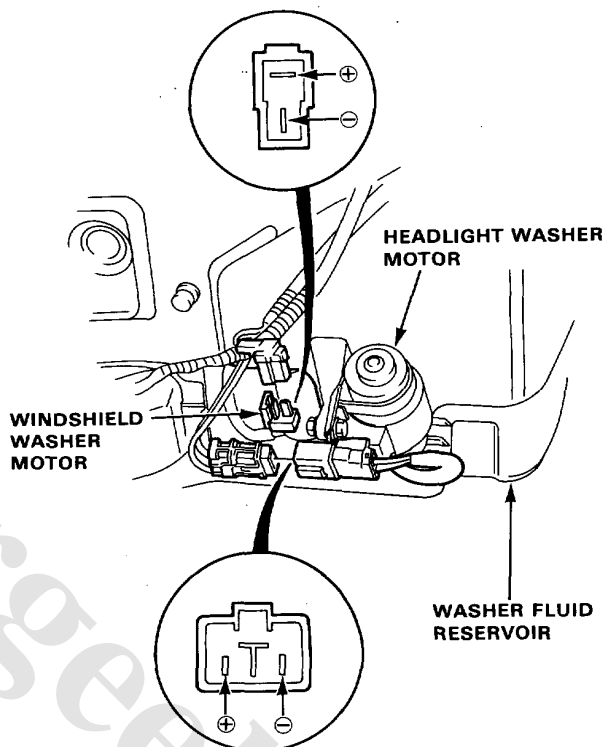


Wipers/Washers

Washer Replacement

1. Remove the bumper, then remove the washer reservoir by removing the 3 mounting bolts.
2. Disconnect the hoses and the 2-P connectors from the windshield and the headlight washer motors.
3. Remove the washer nozzles.

NOTE:


- Clamp the hose in the left front fender.
- Take care not to pinch hoses during reinstallation.
- Install the grommets firmly.
- After installation, adjust the washer nozzles.

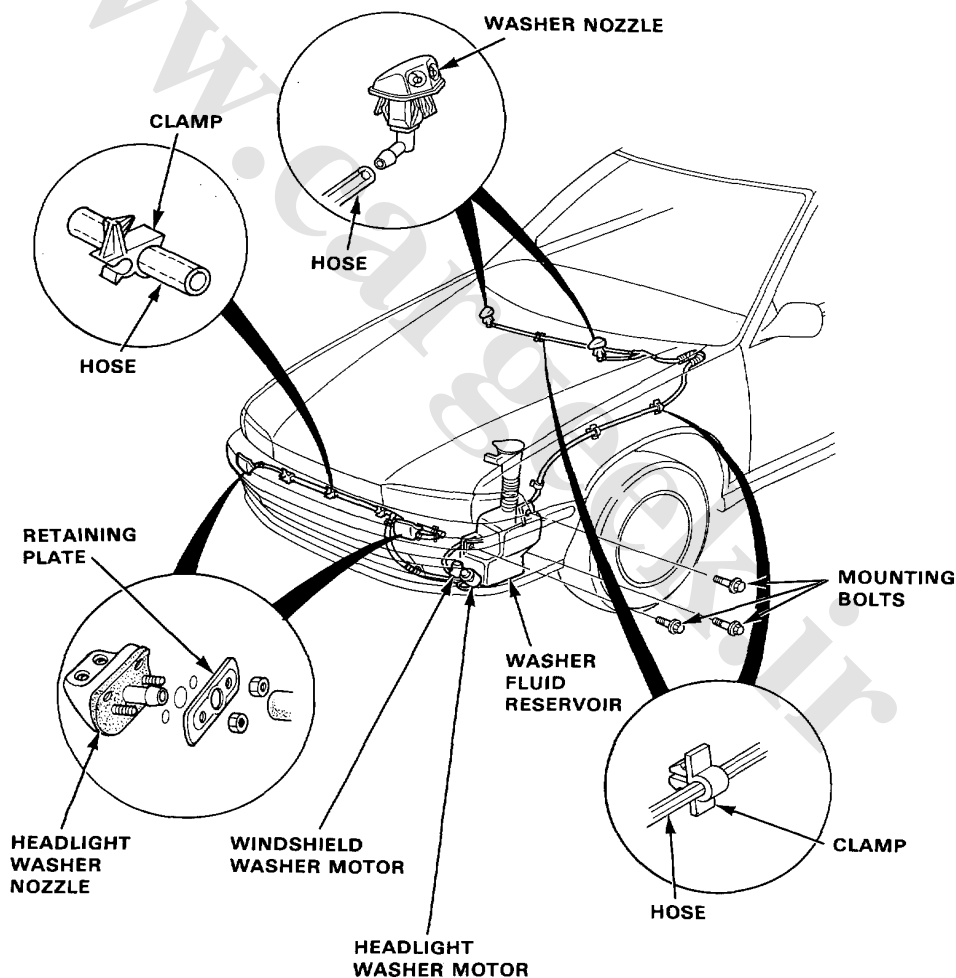



Power Window


Component Location Index

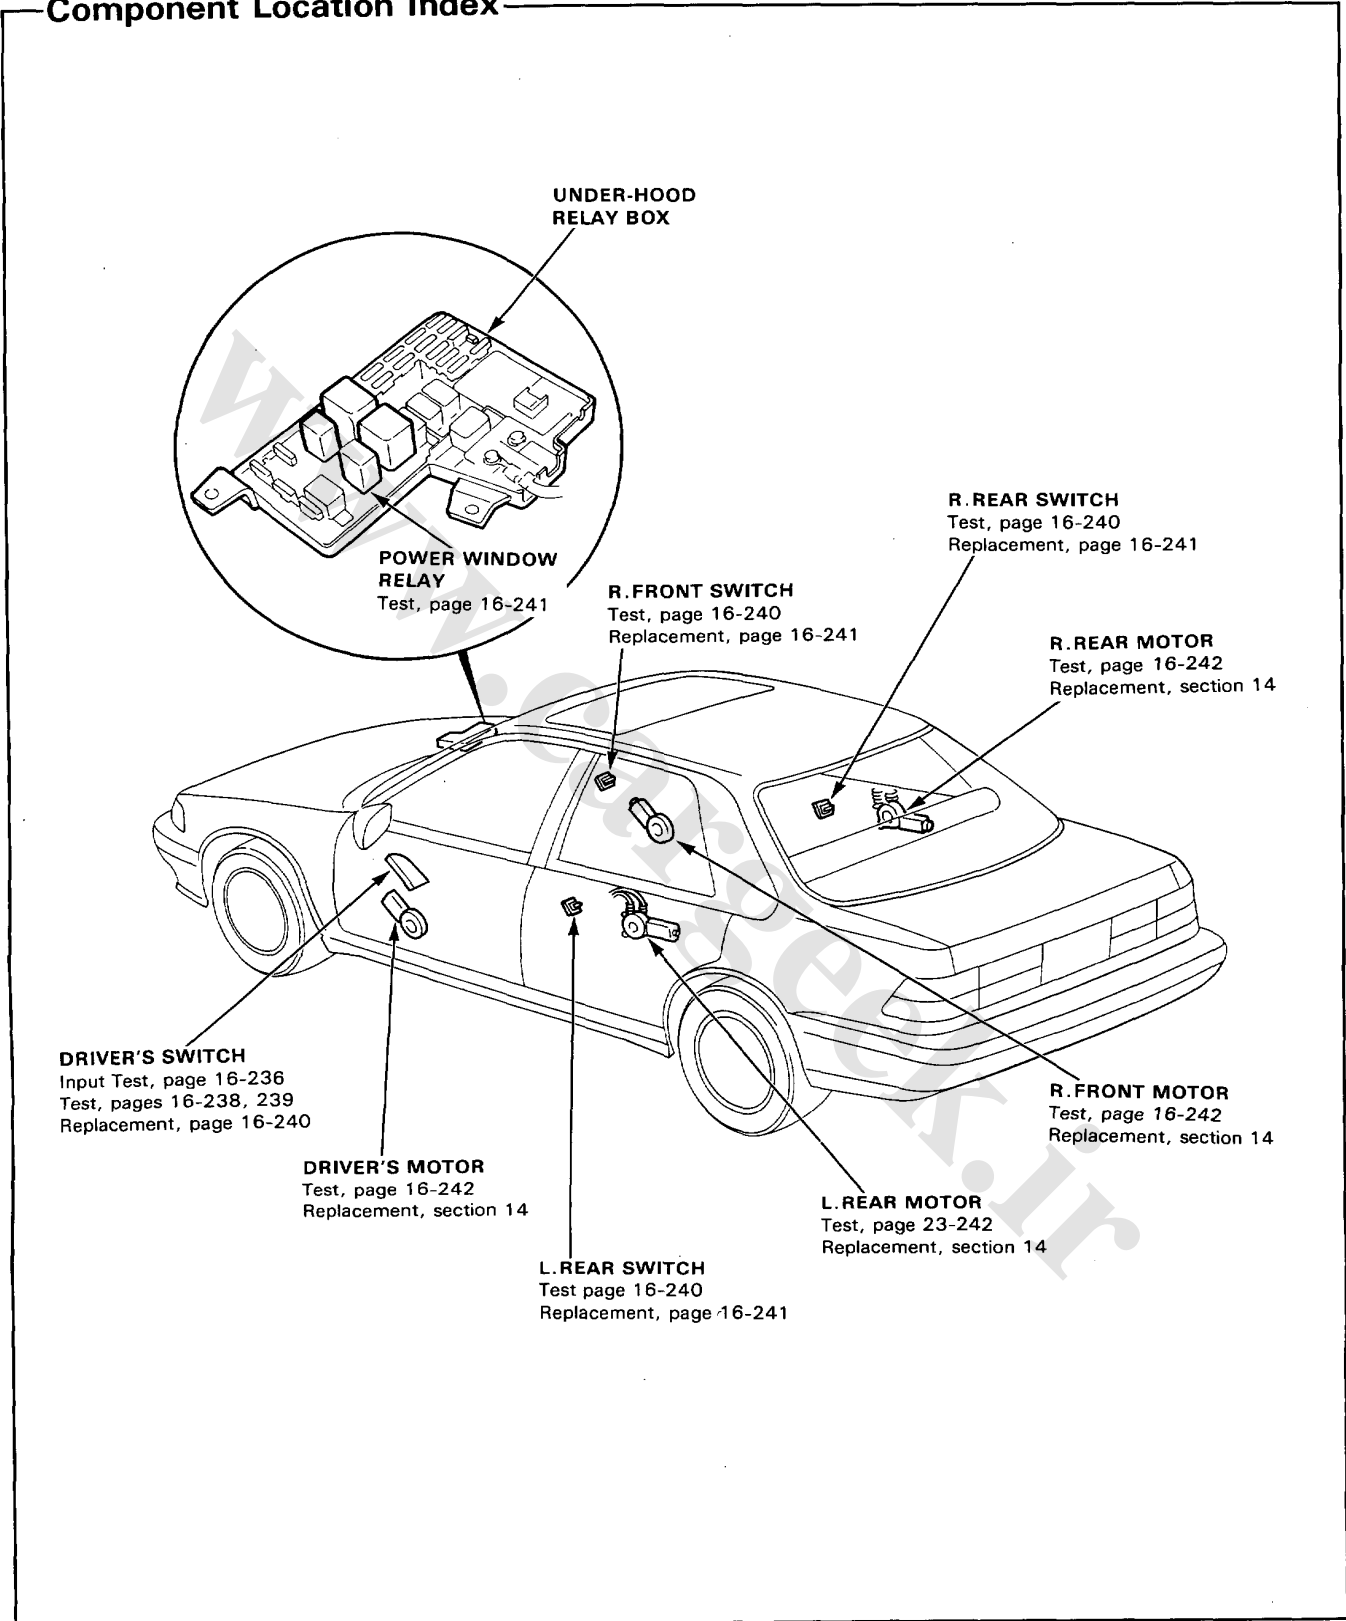

Power Windows

Circuit Diagram

NOTE :
 Several different wires have the same color. They have been given a number suffix to distinguish them (for example RED/BLU and RED/BLU¹ are not the same).
 "DN" in the switch circuit denotes DOWN.

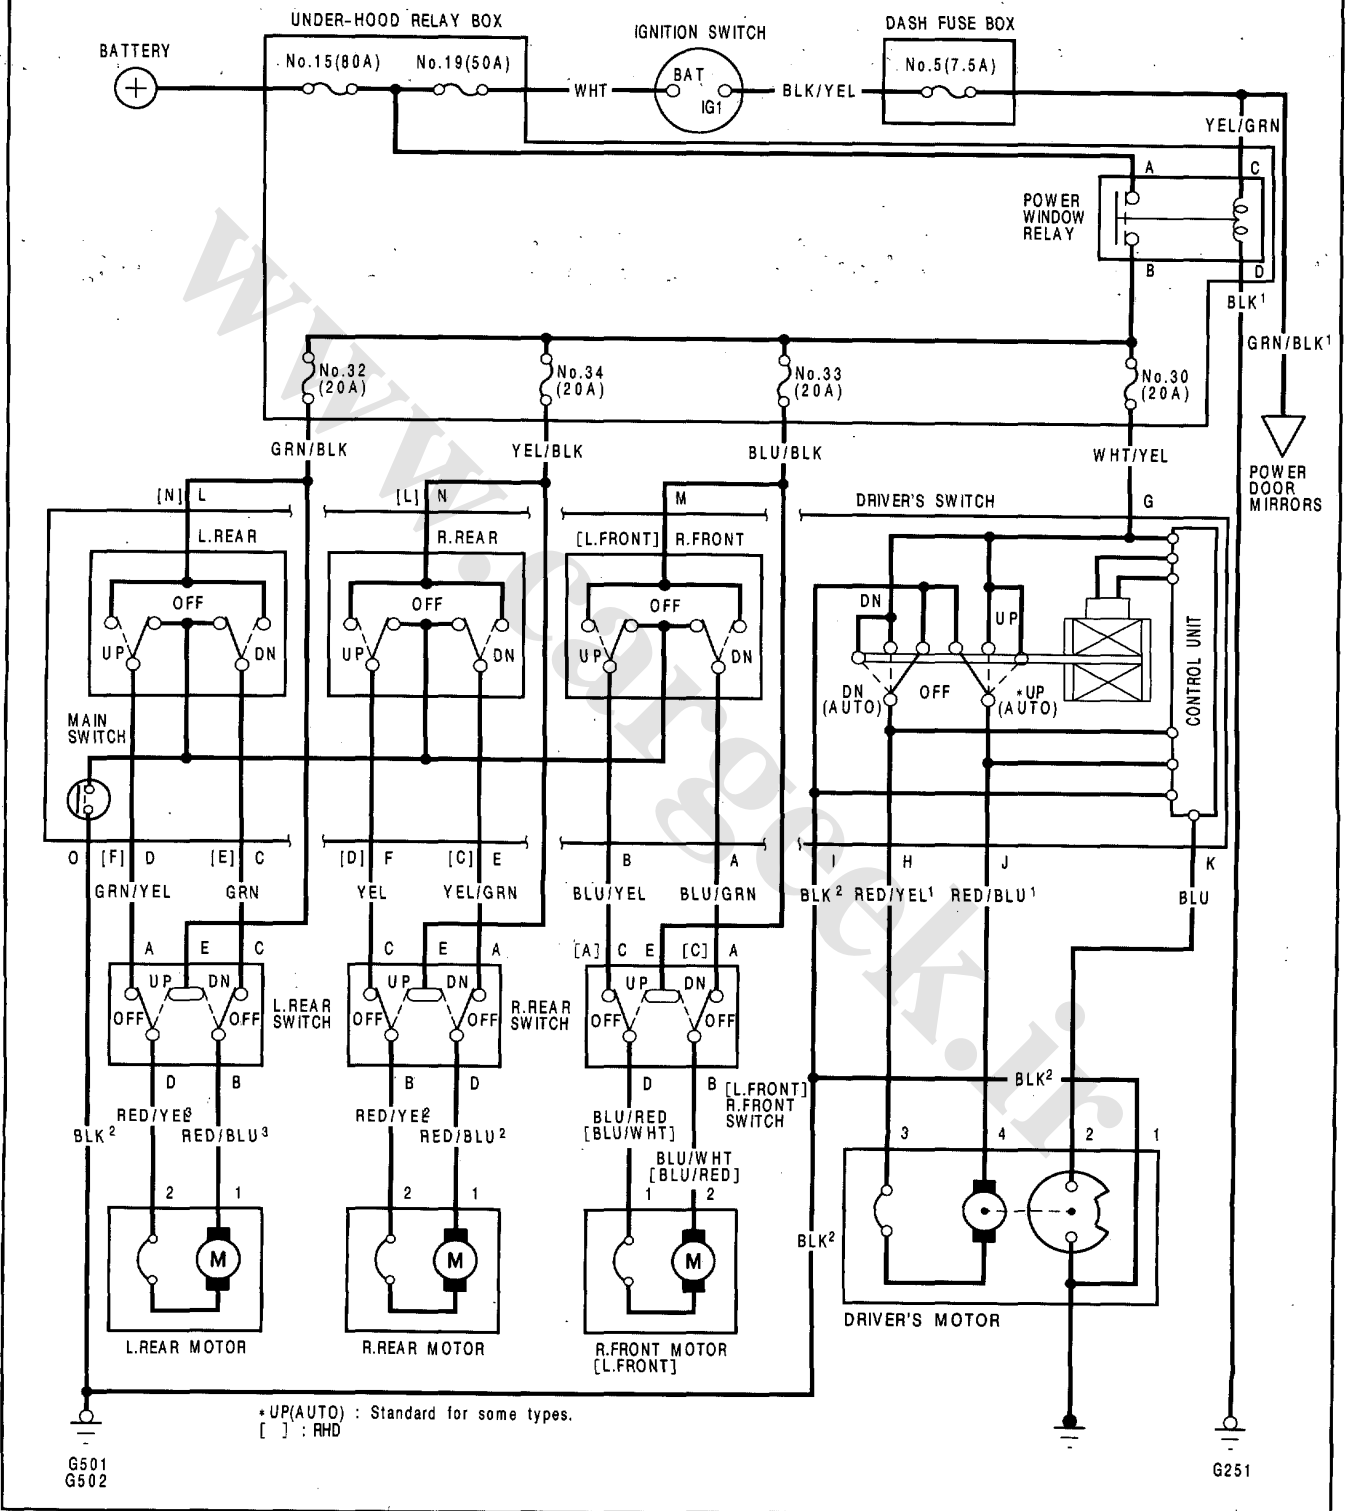



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom	Item to be inspected																						
	State of charge and clean and tight connections of battery			Power window relay				in the dash fuse box				Driver's door switch		Passenger switch		Driver's motor	Pulser (in driver's motor)	Passenger's motor	Window regulator	Driver's door switch input	Poor ground	Open circuit in wires or loose or disconnected terminals	
	1	2	3																				
All windows do not operate.	1	2	3																		G251	BLK/YEL, YEL/GRN	
Driver's window does not operate.				1									2						3	4			WHT/YEL
Driver's window does not operate in AUTO.										1				2						3			BLU
Passenger windows do not operate.	Right front [Left]					1			2	3					4	5							BLU/BLK
	Left rear						1	2	3						4	5							GRN/BLK
	Right rear						1	2	3						4	5							

[] : RHD


Power Windows

Driver's Switch Input Test

NOTE: The control unit is built into the driver's switch, and only controls driver's door window operation.

Remove the driver's door trim panel and disconnect the 14-P and 1-P connectors from the driver's switch. Make the following input tests at the harness pins.

NOTE: Recheck the connections between the 10-P or 14-P and 1-P connectors, and the driver's switch, then replace the driver's switch if all input tests prove OK.

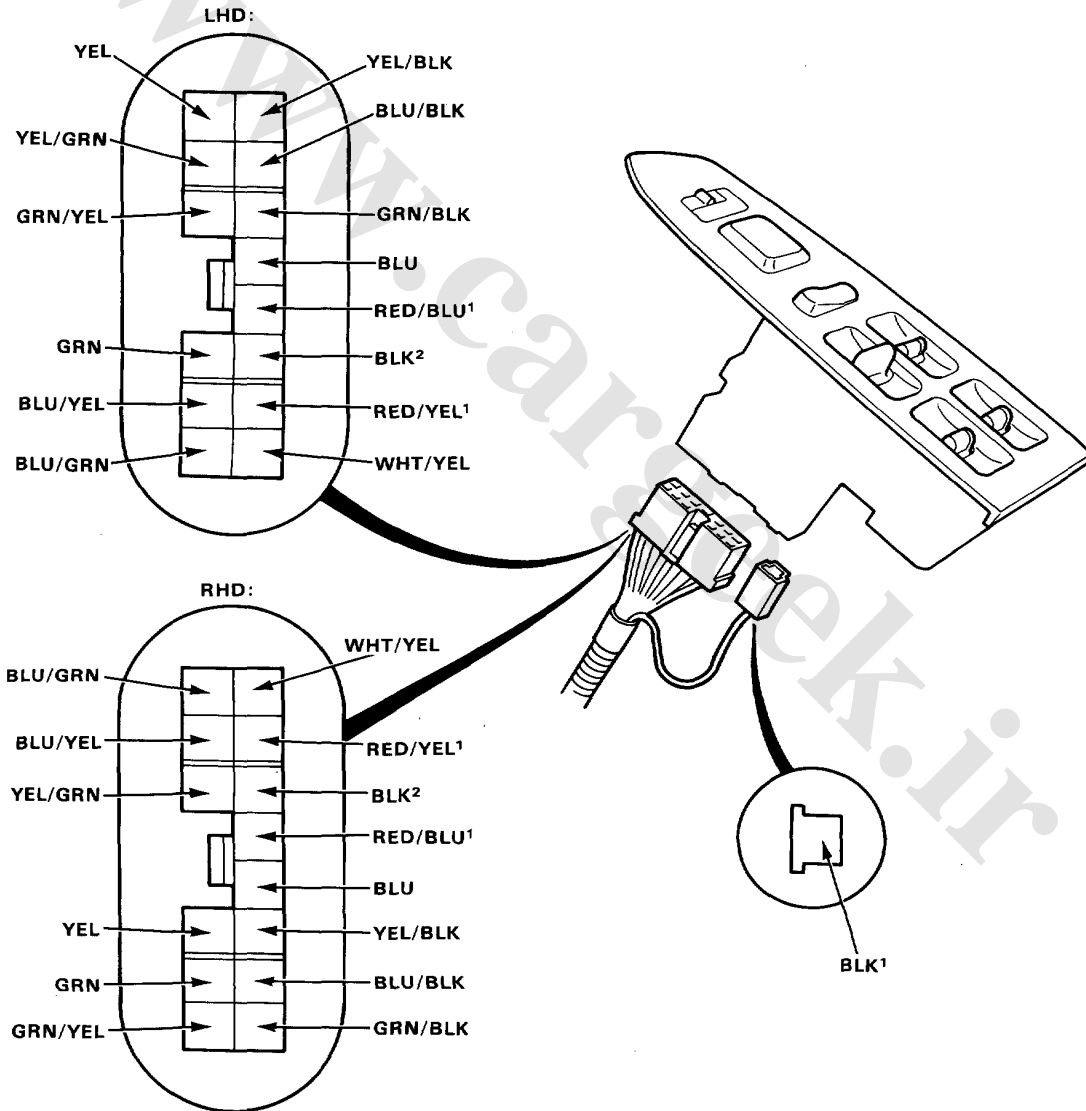



No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK ²	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G501, G502) • An open in the wire.
2	WHT/YEL	Ignition switch ON.	Check for voltage to ground: should be battery voltage .	<ul style="list-style-type: none"> • Blown No.30, 32, 33 or 34 (20 A) fuse. • Faulty power window relay. • An open in the wire.
	BLU/BLK			
	YEL/BLK			
	GRN/BLK			
3	RED/BLU ¹ and RED/YEL ¹	Connect the WHT/YEL terminal to the RED/BLU ¹ terminal, and the RED/YEL terminal to the BLK ² terminal, then ignition switch ON.	Check the driver's motor operation: should run.	<ul style="list-style-type: none"> • Faulty driver's motor. • An open in the wire.
4	BLU/YEL and BLU/GRN	Connect the BLU/BLK terminal to the BLU/YEL terminal, and the BLU/GRN terminal to the BLK ² terminal, then ignition switch ON.	Check the right front motor operation: should run.	<ul style="list-style-type: none"> • Faulty R.front [L.front] motor. • Faulty R.front [L.front] switch. • An open in the wire.
5	YEL and YEL/GRN	Connect the YEL/BLK terminal to the YEL terminal, and the YEL/GRN terminal to the BLK terminal, then ignition switch ON.	Check the right rear motor operation: should run.	<ul style="list-style-type: none"> • Faulty R. rear motor. • Faulty R. rear switch. • An open in the wire.
6	GRN/YEL and GRN	Connect the GRN/BLK terminal to the GRN/YEL terminal, and the GRN terminal to the BLK terminal, then ignition switch ON.	Check the left rear motor operation: should run.	<ul style="list-style-type: none"> • Faulty L. rear motor. • Faulty L. rear switch. • An open in the wire.
7	BLU and BLK ²	Connect the WHT/YEL terminal to the RED/YEL ¹ terminal, and the BLK ² terminal to the RED/BLU ¹ terminal, then ignition Switch ON.	Check for resistance between the BLU and BLK ² terminals: should indicate between 20-50 ohms as the driver's motor runs.	<ul style="list-style-type: none"> • Faulty pulser. • Faulty driver's motor. • An open in the wire


[] : RHD

Power Windows

Driver's Switch Test

LHD:

1. Remove the switch from the arm rest.
2. Check for continuity between the terminals in each switch position according to the tables.

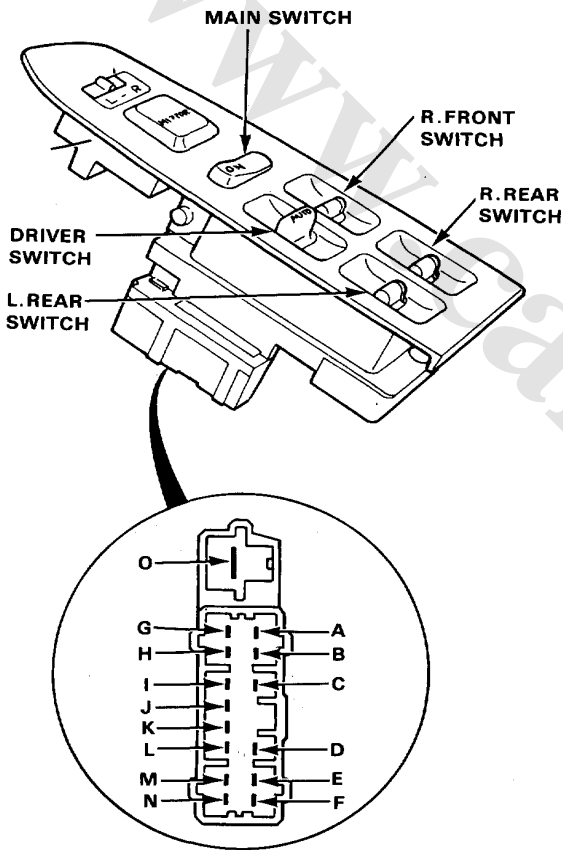

DRIVER'S SWITCH

Terminal		G	H	I	J
Position					
OFF			○—○	○—○	○—○
UP		○—○			○—○
DOWN		○—○	○—○		
DOWN (AUTO)		○—○	○—○		

R. FRONT SWITCH

Terminal		A	B	M	O
Position	Main Switch				
OFF	ON	○—○	○—○		○—○
	OFF	○—○	○—○		
UP	ON		○—○	○—○	
	OFF		○—○	○—○	
DOWN	ON	○—○		○—○	
	OFF	○—○		○—○	

R. REAR SWITCH



Terminal		E	F	N	O
Position	Main Switch				
OFF	ON	○—○	○—○		○—○
	OFF	○—○	○—○		
UP	ON		○—○	○—○	
	OFF		○—○	○—○	
DOWN	ON	○—○		○—○	
	OFF	○—○		○—○	

L. REAR SWITCH

Terminal		C	D	L	O
Position	Main Switch				
OFF	ON	○—○	○—○		○—○
	OFF	○—○	○—○		
UP	ON		○—○	○—○	
	OFF		○—○	○—○	
DOWN	ON	○—○		○—○	
	OFF	○—○		○—○	



RHD:

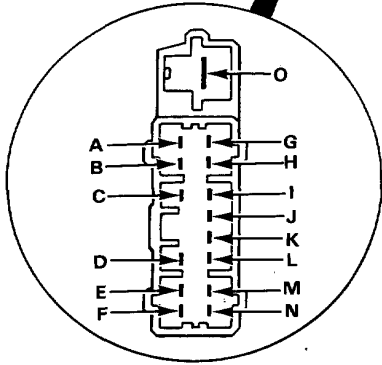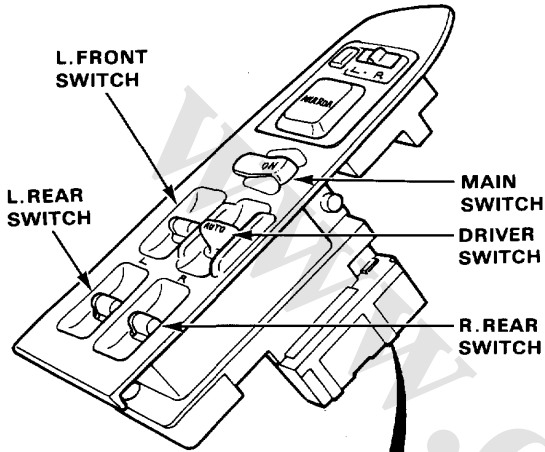

DRIVER'S SWITCH

Terminal	G	H	I	J
Position				
OFF		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
UP (AUTO)	<input type="radio"/>			<input type="radio"/>
UP	<input type="radio"/>			<input type="radio"/>
DOWN	<input type="radio"/>	<input type="radio"/>		
DOWN (AUTO)	<input type="radio"/>	<input type="radio"/>		

L. FRONT SWITCH

Terminal	A	B	M	O
Position				
OFF	ON	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	OFF	<input type="radio"/>	<input type="radio"/>	
UP	ON	<input type="radio"/>	<input type="radio"/>	
	OFF	<input type="radio"/>	<input type="radio"/>	
DOWN	ON	<input type="radio"/>	<input type="radio"/>	
	OFF	<input type="radio"/>	<input type="radio"/>	

R. REAR SWITCH

Terminal	C	D	L	O
Position				
OFF	ON	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	OFF	<input type="radio"/>	<input type="radio"/>	
UP	ON	<input type="radio"/>	<input type="radio"/>	
	OFF	<input type="radio"/>	<input type="radio"/>	
DOWN	ON	<input type="radio"/>	<input type="radio"/>	
	OFF	<input type="radio"/>	<input type="radio"/>	

L. REAR SWITCH

Terminal	E	F	N	O
Position				
OFF	ON	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	OFF	<input type="radio"/>	<input type="radio"/>	
UP	ON	<input type="radio"/>	<input type="radio"/>	
	OFF	<input type="radio"/>	<input type="radio"/>	
DOWN	ON	<input type="radio"/>	<input type="radio"/>	
	OFF	<input type="radio"/>	<input type="radio"/>	


Power Windows

Passenger's Switch Test

1. Remove the switch from the arm rest, then disconnect the 5-P connector.
2. Check for continuity between the terminals in each switch position according to the table.


NOTE: Right [Left] front switch is shown. Rear switches are similar.
 []: RHD

Terminal	A	B	C	D	E
UP		○	—	○	
OFF	○			○	
DOWN		○	○		○

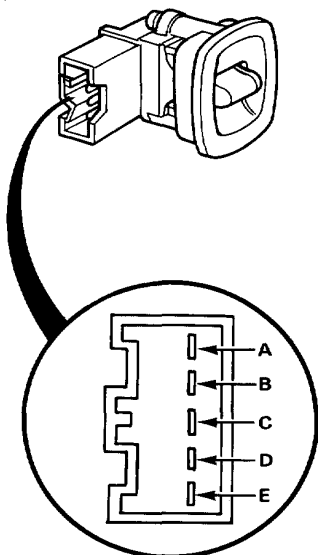


Driver's Switch Replacement

1. Remove the driver's door trim panel, then disconnect all of the connectors from the driver's door trim panel.
2. Remove the arm rest from the driver's door trim panel by removing the retainer and the screws.

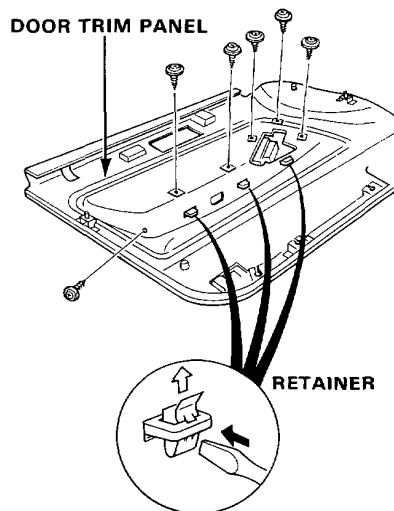


3. Remove the power window master switch from the arm rest by removing three screws.

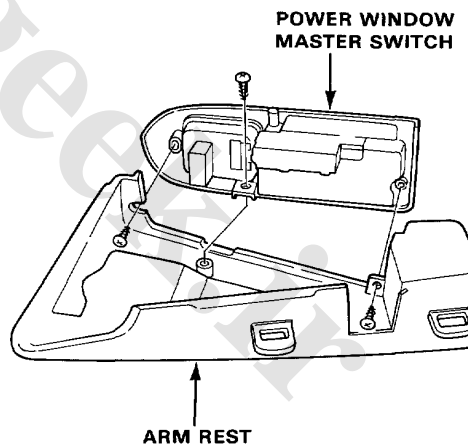





Passenger's Switch Replacement

1. Remove the switch from the arm rest by removing the 1 mounting screw, then disconnect the 5-P connector from the switch.

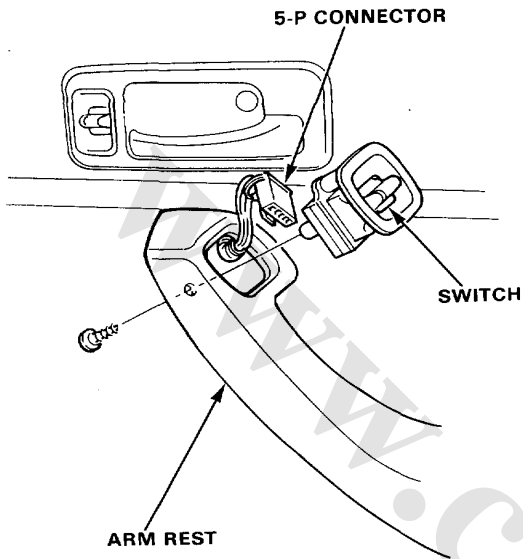

Relay Test

1. Remove the relay from the under-hood relay box.
2. There should be continuity between the A and B terminals when the battery is connected to the C and D terminals. There should be no continuity when the battery is disconnected.

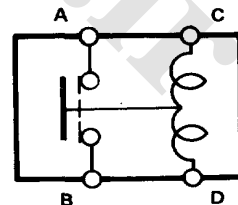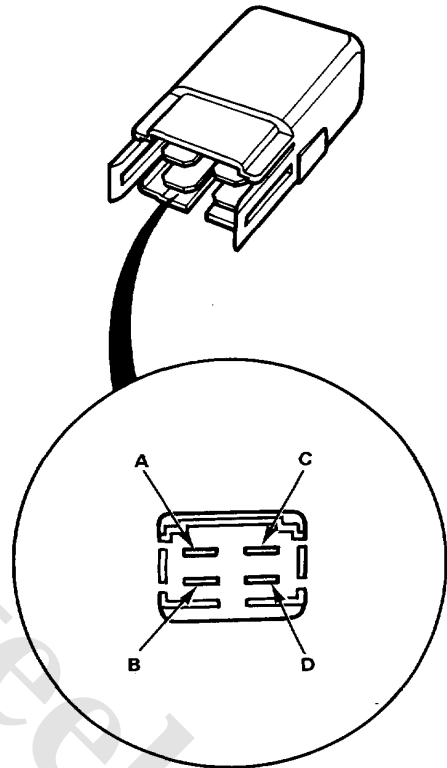


Power Windows

Driver's Motor Test


Motor Test:

1. Remove the door trim panel.
2. Disconnect the 4-P connector from the door wire harness.
3. Test motor operation by connecting battery voltage to the No.3 and No.4 terminals.
Test the motor in each direction, by switching the leads from the battery.
4. If the motor does not run, replace it.

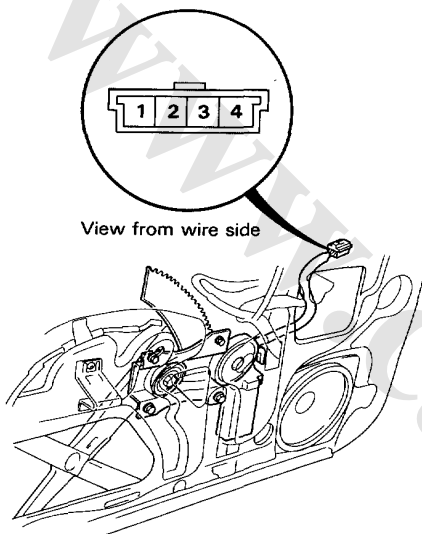



Pulser Test:

Measure resistance between the No.1 and No.2 terminals when running the motor by connecting battery voltage to the No.3 and No.4 terminals. Ohmmeter should indicate between 20-50 ohms as the motor runs.

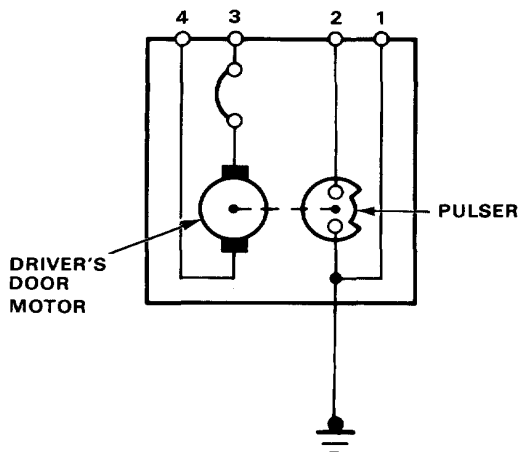

Passenger's Motor Test

1. Remove the door trim panel.
2. Disconnect the 2-P connector from the motor.
3. Test motor operation by applying battery voltage to the No.1 and No.2 terminals.
Test the motor in each direction, by switching the leads from the battery.
4. If the motor does not run, replace it.

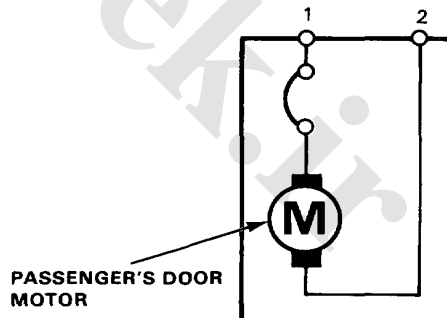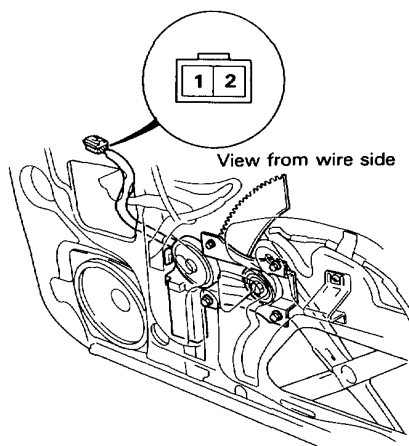

Wiring Diagrams

Index

Air Conditioner	17	Lights, Interior	
Anti-Lock Brake System (ALB)	14	Courtesy Lights	3
Automatic Transmission Control System	14	Dashlight Brightness Control	6
Battery	1	Dome Lights	3
Blower Controls	17	Glove Box Light	6
Charging System	1	Trunk Light	6
Cigarette Lighter	10	Vanity Mirror Light	6
Clock	10	Lighting System	6
Cooling Fan Control	16	Mirror, Power	6
Cruise Control System	12	Seat, Power	13
Defogger, Rear Window	11	Starting System	1
Door Lock, Power	12	Stereo Sound System	10
Fuel and Emissions	16	Sunroof	11
Gauges	2	Turn Signal / Hazard Flasher System	13
Headlight Adjuster System	4	Warning System	
Horns	4	ALB Warning	2
Ignition Switch	1	Brake Warning	2
Ignition System	1	Charge Warning	2
Indicators		Check Engine Warning	2
Cruise Control Indicator	2	Hazard Warning	2
Trunk Open Indicator	2	Light-on Warning	5
High Beam Indicator	2	Oil Pressure Warning	2
Shift Lever Position Indicator	4	Washers	
Turn Signal Indicator	2	Windshield	13
Integrated Control Unit	5	Headlight Washer	13
Lights, Exterior		Windows, Power	7
Back-up Lights	10	Wipers	
Brake Lights	3	Windshield	7
Hazard Lights	2		
Headlights	6		
License Plate Lights	6		
Marker Lights	6		
Taillights	6		

Intro

General information

Special Tools

Specifications

Maintenance

Fuel and Emissions

Carburetor Engine

Fuel-Injected Engine

Transaxle

Manual Transmission

Heater and Air Conditioner

Air Conditioner

Home

www.cargeek.ir

Intro

General information

Special Tools

Specifications

Maintenance

Engine

Exhaust Pipe and Muffler

Fuel and Emission (Fuel

InjectedEngine)

Transaxle

Automatic Transmission

Body

Electrical

Home

www.cargeek.ir

Intro

General information

Special Tools

Specifications

Maintenance

Engine

Fuel and Emissions

Carburated Engine

Fuel-Injected Engine

Transaxle

Clutch

Manual Transmission

Automatic Transmission

Carburated Engine

Fuel-Injected Engine

Suspension

Brakes (including ABS)

Body

Heater and Air Conditioning

Electrical (including SRS)

Supplemental Restraint System

Home

Intro

General information

Special Tools

Specifications

Maintenance

Fuel and Emissions

Transaxle

Body

Electrical (including SRS)

Home

www.cargeek.ir

[Intro](#)

[General information](#)

[Special Tools](#)

[Specifications](#)

[Maintenance](#)

[Fuel and Emissions](#)

[Electrical \(including SRS\)](#)

[Home](#)

www.cargeek.ir

INTRODUCTION

How to Use This Manual

This supplement contains information for the 1991 ACCORD. Refer to following shop manual for service procedures and data not included in this supplement.

Description	Code No.
ACCORD CHASSIS Maintenance and Repair 90	62SM400
F18A/F20A/F22A ENGINE Maintenance and Repair	62PT400
H2 MANUAAL TRANSMISSION Maintenance and Repair	62PX500
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400

The first page of each section is marked with a black tab that lines up with one of the thumb index tabs on this page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Special Information

⚠ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of standard workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by American Honda, might be done, or of the possible hazardous consequences of each conceivable way, nor could American Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by American Honda, **must satisfy himself thoroughly** that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

*(Asterisk) marked sections are not included in this manual.

First Edition 11/90 266 pages
All Rights Reserved

HONDA MOTOR CO., LTD.
Service Publication Office

General Info



Special Tools



Specifications

specs

Maintenance



Engine



Fuel and Emissions



Transaxle



Steering*



Suspension*



Brakes*



Body*



Heater and Air Conditioner



Electrical*



Outline of Model Changes

ITEM	DESCRIPTION	91 MODEL	REFERENCE SECTION
Engine	Tightening torque changed <ul style="list-style-type: none"> • Engine mounting bolts and nuts • Main bearing cap nut • Exhaust pipe-to-muffler connecting nut. Changed <ul style="list-style-type: none"> • Exhaust manifold (KQ model) • Crank bore marking method 	○	5
Carburation	Adapted <ul style="list-style-type: none"> • KE with CATA model. Modified <ul style="list-style-type: none"> • Vacuum connection. 	○	6
PGM-FI	Adapted <ul style="list-style-type: none"> • KE with CATA model (2.0 ℓ) Modified <ul style="list-style-type: none"> • KQ model (2.2 ℓ) • Electronic control unit (ECU) • Vacuum connections • TDC/CRANK/CYL sensors • Fuel pressure • Constant vacuum control (CVC) valve 	○	6
Manual Transmission	Modified <ul style="list-style-type: none"> • Change lever • 3rd/4th synchro hub and 3rd/4th synchro sleeve • 5th synchro hub and 5th synchro sleeve • 1st/2nd synchro hub 	○	8
Power Steering	Changed <ul style="list-style-type: none"> • High pressure pipe for power steering pump 	○	5

- For the reason of environment conservation and to secure the required quantity of Freon, the Freon collector has been adapted and its maintenance procedure has been described (See Section 15).



General Information

Chassis and Engine Numbers	1 – 2
Identification Number Locations	1 – 4
Label Locations	1 – 6
Lift and Support Points	1 – 8
Towing	1 – 11
Preparation of Work	1 – 12
Symbol Marks	1 – 20
Abbreviation	1 – 21

www.CarGeek.ir

Chassis and Engine Numbers
Identification Number Locations
Label Locations
Lift and Support Points
Towing
Preparation of Work
Symbol Marks
Abbreviation

www.cargeek.ir

Chassis and Engine Numbers

Vehicle Identification Number (1.8 l Carbureted Engine)

JHM CB1 5 2 0 0 C 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB1: ACCORD 1.8 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual

Vehicle Grade
 2 : LX (KB)
 3 : EX (KB)

Fixed Code

Auxiliary Number

Factory Code
 C: Sayama Factory in Japan

Model Year
 1: 1991

Serial Number

Vehicle Identification Number (2.0 l Fuel-Injected Engine)

JHM CB3 5 4 0 0 1 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB3: ACCORD 2.0 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual
 6 : 4-door, 4-speed Automatic

Vehicle Grade
 4 : 2.0i, F20A4 with CATA (KG, KS)
 F20A4 without CATA (KF, KE)
 F20A5 (KB, KW)
 2.0i with anti-lock brake system
 F20A4 with CATA (KG, KX, KS, KE)
 F20A4 without CATA (KF, KE)
 F20A5 (KB)
 EXi, F20A5 (KU)
 EXi with anti-lock brake system,
 F20A5 (KU)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 1 : 1991

Serial Number

Vehicle Identification Number (2.0 l Carbureted Engine)

JHM CB3 5 2 0 0 C 1 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB3: ACCORD 2.0 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual
 6 : 4-door, 4 speed Automatic

Vehicle Grade
 2 : DX, F20A2 (KG, KS)
 F20A3 (KW)
 : LX, F20A3 (KP, KT, KY)
 3 : EX, F20A2 with CATA (KG, KX, KS)
 F20A2 without CATA (KF, KE)
 F20A3 (KB, KW, KP, KT, KU, KY)
 F20A6 (KG)
 :EX with anti-lock brake system
 F20A2 with CATA (KG, KS, KE)
 F20A2 without CATA (KF)
 F20A3 (KB)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 1 : 1991

Serial Number

Vehicle Identification Number (2.2 l Fuel-Injected Engine)

JHM CB7 5 5 0 0 C 0 00001

Manufacturer Code and Vehicle Type
 JHM: HONDA MOTOR CO., LTD., JAPAN.
 HONDA Passenger Car

Body and Engine Type
 CB7: ACCORD 2.2 l

Door and Transmission Type
 5 : 4-door, 5-speed Manual
 6 : 4-door, 4-speed Automatic

Vehicle Grade
 5 : 2.2i, F22A3 with CATA (KF, KG, KX, KS, KE)
 EXi, F22A2 (KY)
 F22A9 with CATA (KQ)

Fixed Code

Auxiliary Number

Factory Code
 C : Sayama Factory in Japan

Model Year
 1 : 1991

Serial Number



Engine Number
(DX: European, LX: General and EX: KG 90 ps)

F18A2 - 20 00001

Engine Type

- F18A2 : 1.8 l SOHC Carbureted
Leaded gasoline: KB
- F20A2 : 2.0 l SOHC Carbureted
Unleaded gasoline with CATA
: KG/KS (DX)
- F20A3 : 2.0 l SOHC Carbureted
Leaded gasoline: KW (DX),
KP/KT/KU/KY (LX)
- F20A6 : 2.0 l SOHC Carbureted (90ps)
Unleaded gasoline with CATA
: KG (EX 90ps)

Transmission Type

- 20: 5-speed manual
- 25: 4-speed automatic

Serial Number

Engine Number
(2.2i: European)

F22A3 - 20 00001

Engine Type

- F22A3 : 2.2 l SOHC Fuel-Injected
Unleaded gasoline with CATA

Transmission Type

- 20: 5-speed manual
- 25: 4-speed automatic

Serial Number

Engine Number
(EXi: KQ, KY)

F22A2 - 2000001

Engine Type

- F22A2 : 2.2 l SOHC Fuel-Injected
Leaded gasoline: KY
- F22A9 : 2.2 l SOHC Fuel-Injected
Unleaded gasoline with CATA
: KQ

Serial Number

- F22A2: 2000001~
- F22A9: 1000001~

Engine Number
(EX except KG 90 ps)

F20A2 - 20 00001

Engine Type

- F20A2 : 2.0 l SOHC Carbureted
Unleaded gasoline with CATA
: KG, KX, KS, KE
- 2.0 l SOHC Carbureted
Unleaded gasoline without CATA
: KF, KE
- F20A3 : 2.0 l SOHC Carbureted
Leaded gasoline
: KB, KW, KP, KT, KU, KY

Transmission Type

- 20: 5-speed manual
- 25: 4-speed automatic

Serial Number

Manual Transmission Number

H2C4 - 2000001

Transmission Type

- H2C4: 2.0 l Fuel-Injected and 2.2 l Fuel-Injected
except KQ
- H2S8: 1.8 l and 2.0 l Carbureted
- H2U5: 2.2 l Fuel-Injected: KQ

Serial Number

Automatic Transmission Number

MPXA - 2000001

Transmission Type

Serial Number

Engine Number
(2.0i: European and EXi: KU)

F20A4 - 20 00001

Engine Type


- F20A4 : 2.0 l SOHC Fuel-Injected
Unleaded gasoline with CATA
: KG, KX, KS, KE
- 2.0 l SOHC Fuel-Injected
Unleaded gasoline without
CATA: KF, KE
- F20A5 : 2.0 l SOHC Fuel-Injected
Leaded gasoline: KB, KW, KU


Transmission Type

- 20: 5-speed manual
- 25: 4-speed automatic

Serial Number

Identification Number Locations

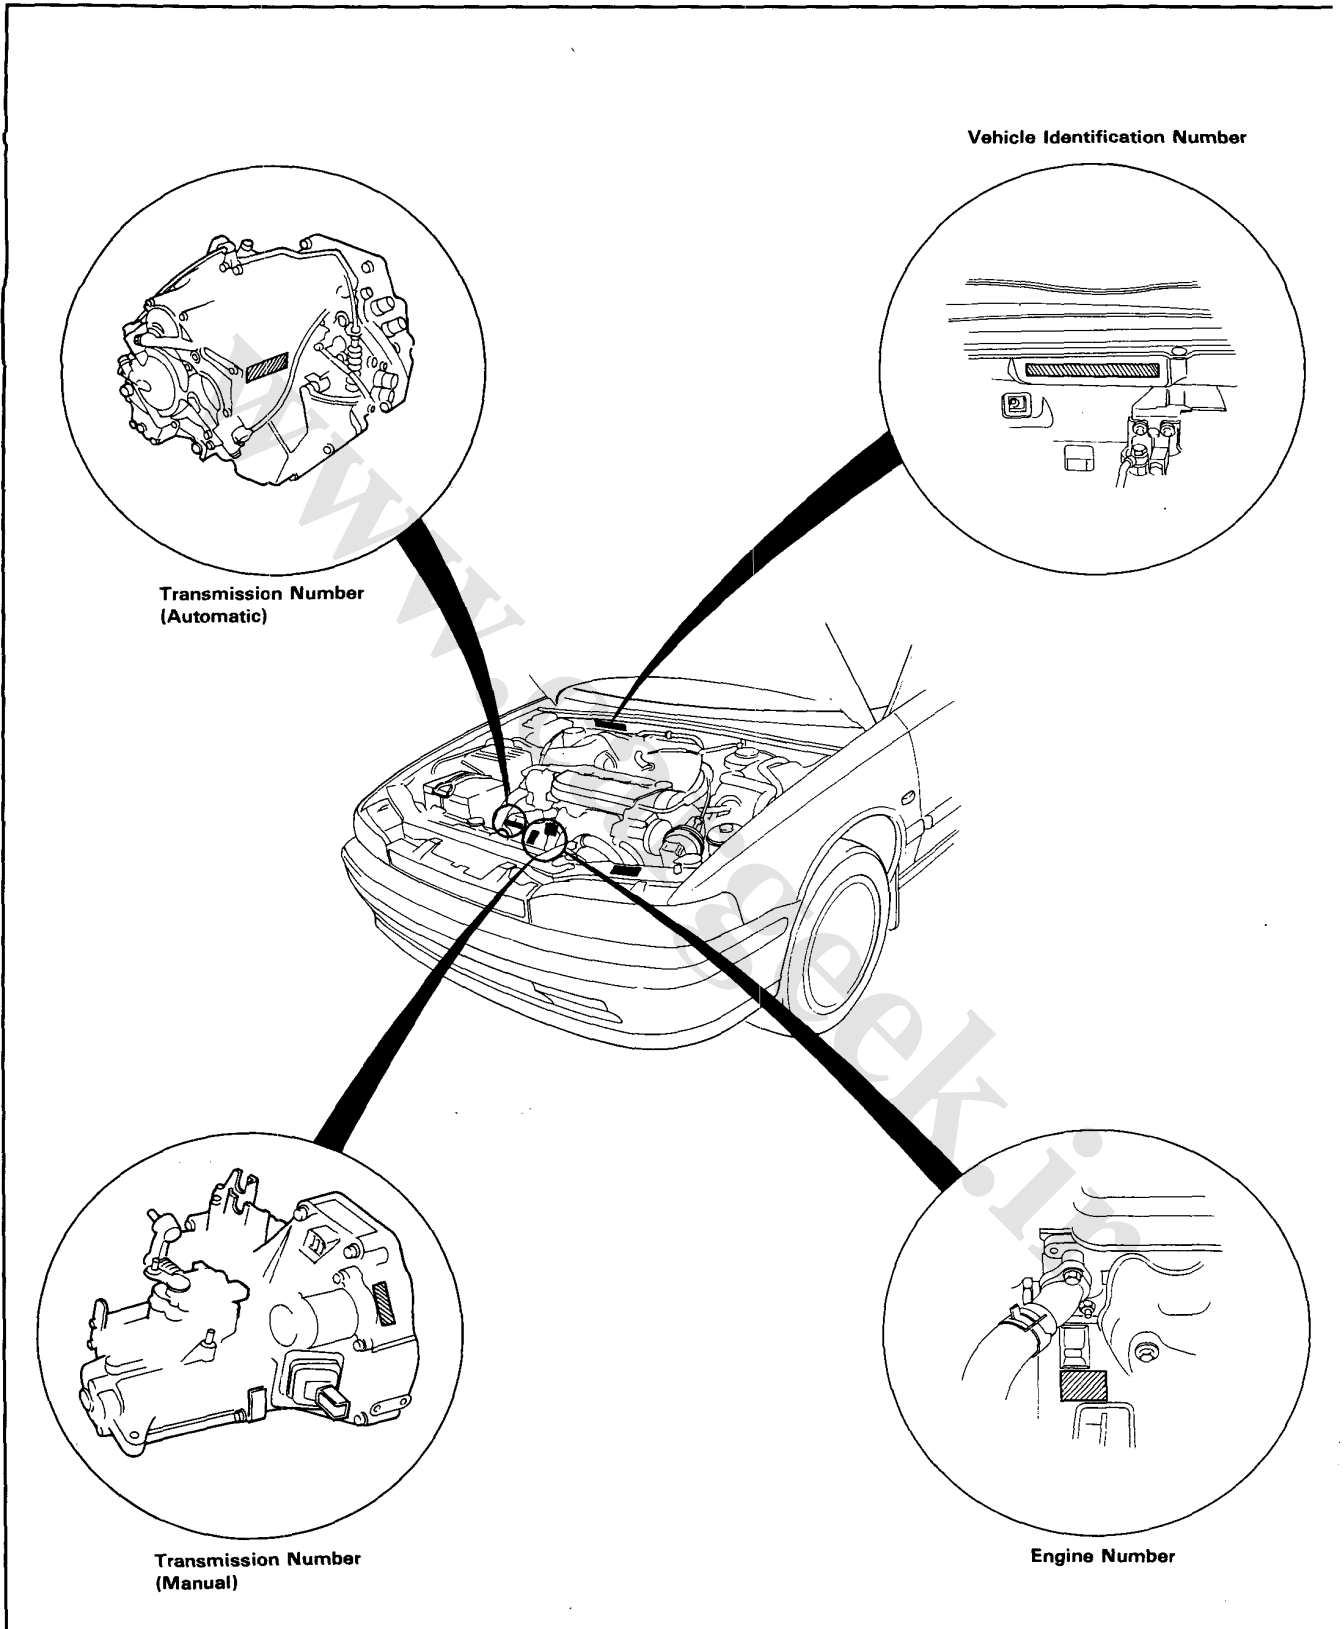


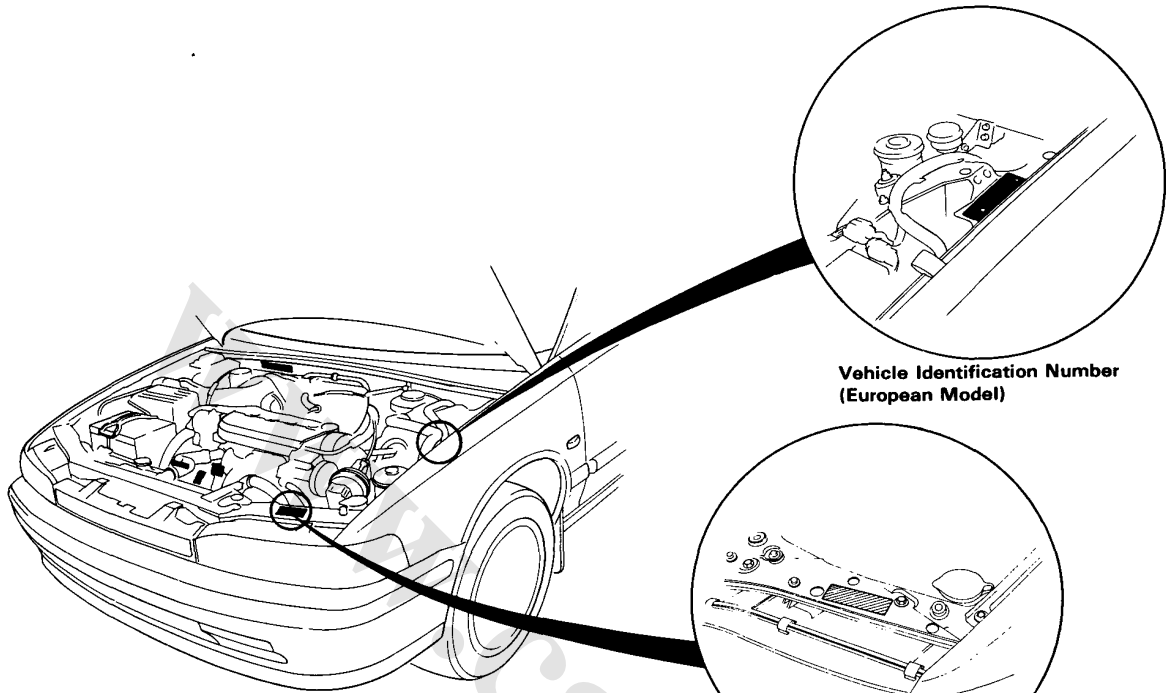


**Vehicle Identification Number
(European Model)**

**Vehicle Identification Number
(KQ, KT Model)**

**Vehicle Identification Number
(KS Model only)**

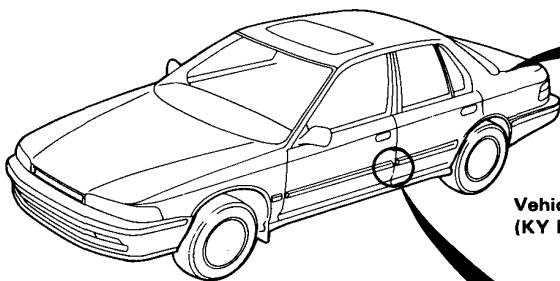


**Vehicle Identification Number
(KY Model only)**

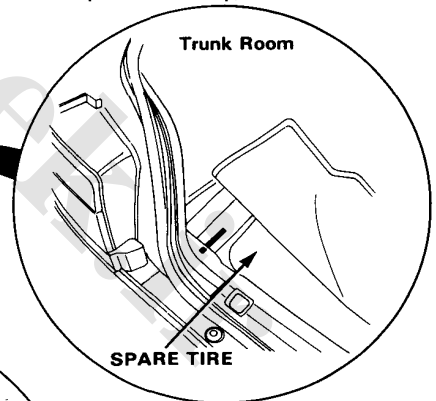


Trunk Room

SPARE TIRE

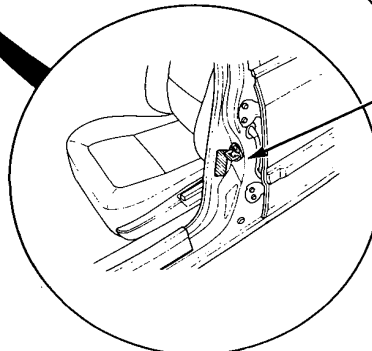

**CENTER
PILLAR**

Label Locations

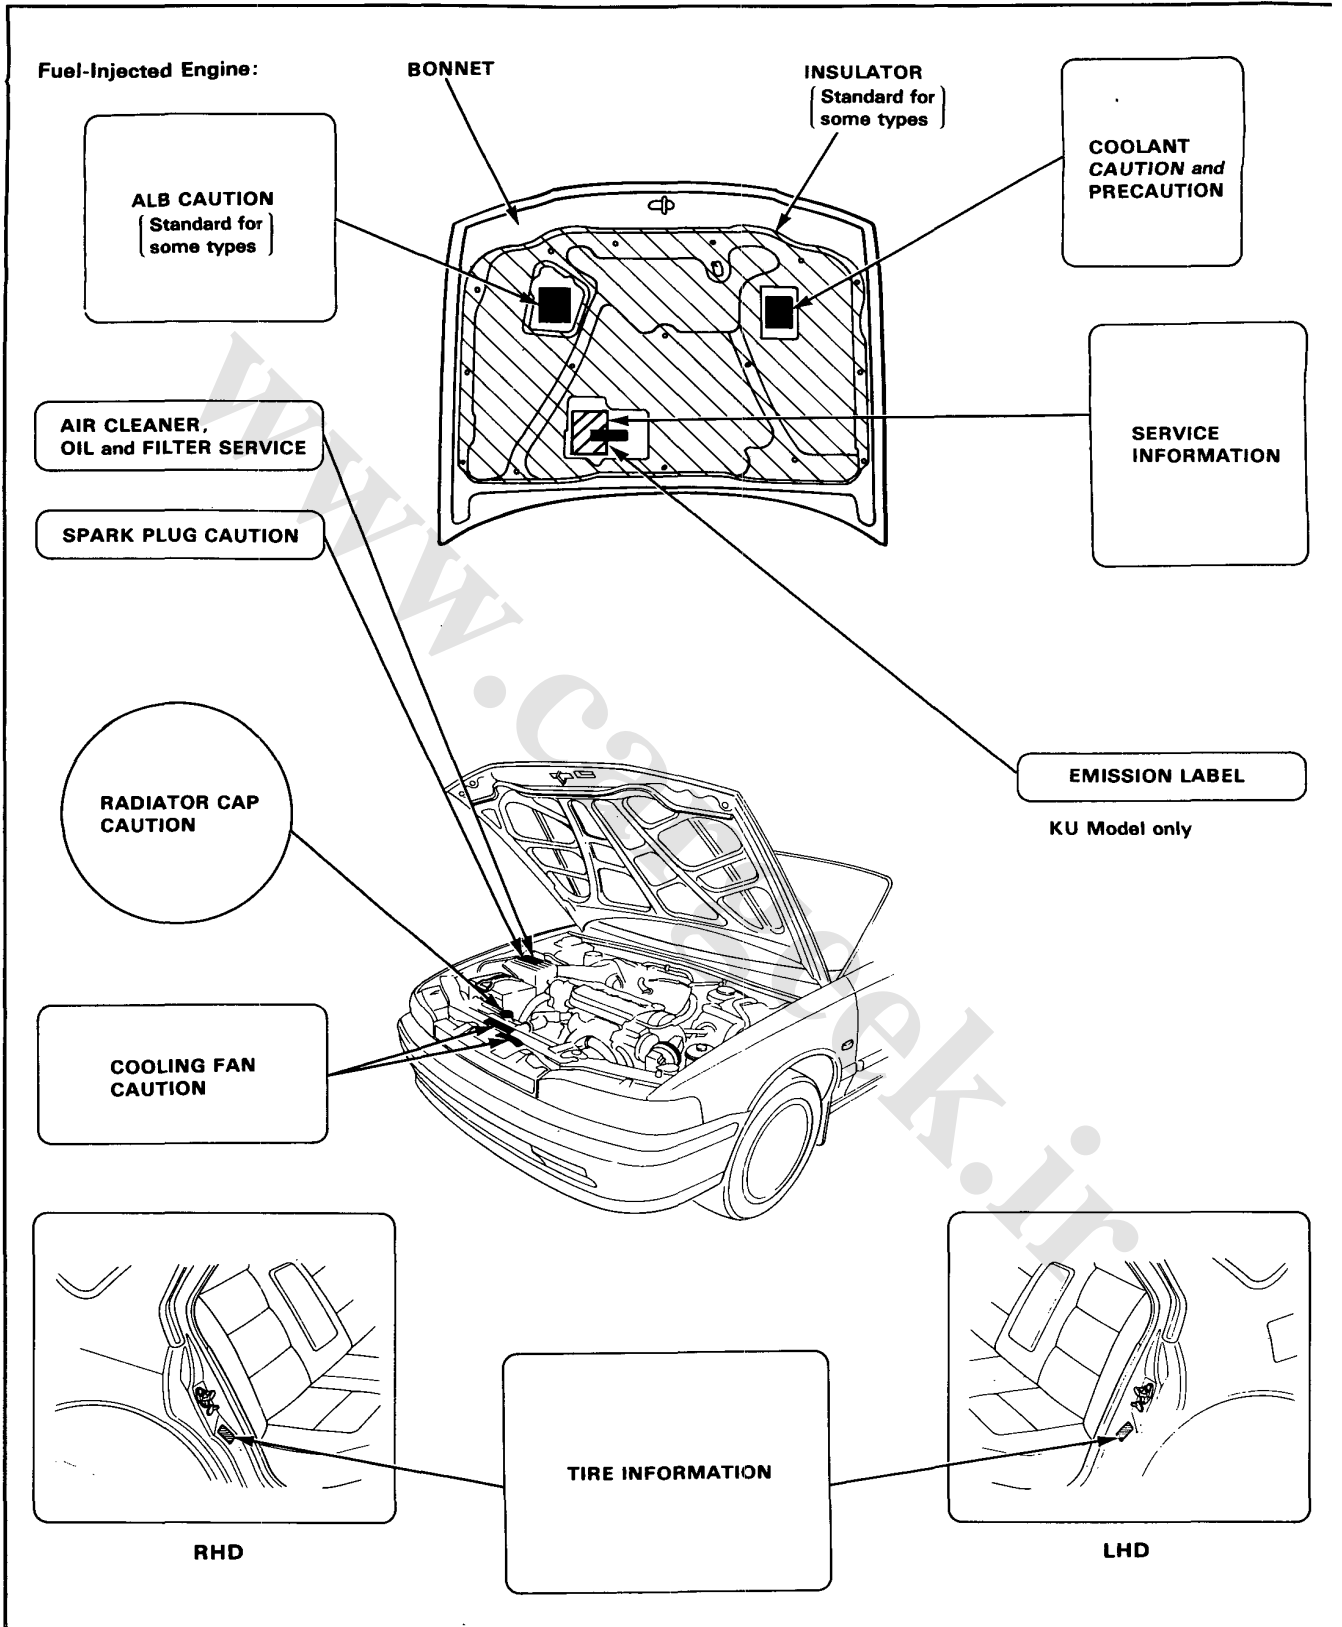



Carbureted Engine:

ALB CAUTION
(Standard for
some types)

BONNET

INSULATOR
(Standard for
some types)

COOLANT
CAUTION and
PRECAUTION


SERVICE
INFORMATION

EMISSION LABEL
KU Model only


AIR CLEANER,
OIL and FILTER SERVICE

RADIATOR CAP
CAUTION

COOLING FAN
CAUTION

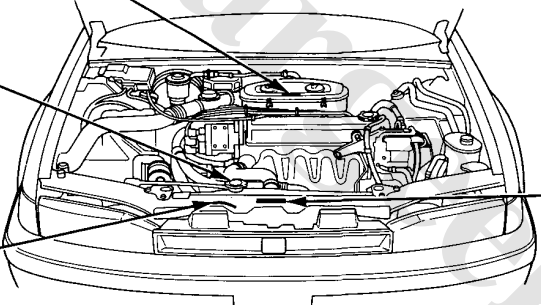


COOLING FAN
CAUTION

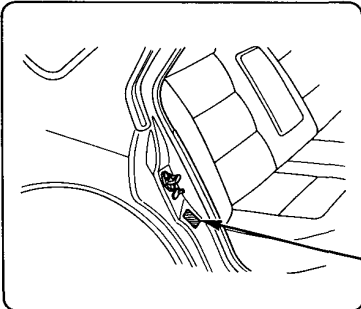

RHD

TIRE INFORMATION

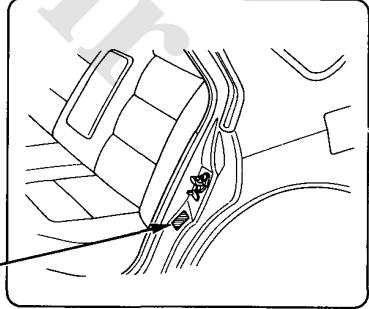

LHD


Lift and Support Points

Hoist

1. Place the lift blocks as shown.
2. Raise the hoist a few inches and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

▲ WARNING When heavy rear components such as suspension, fuel tank, spare tire and trunk lid are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight transfer.

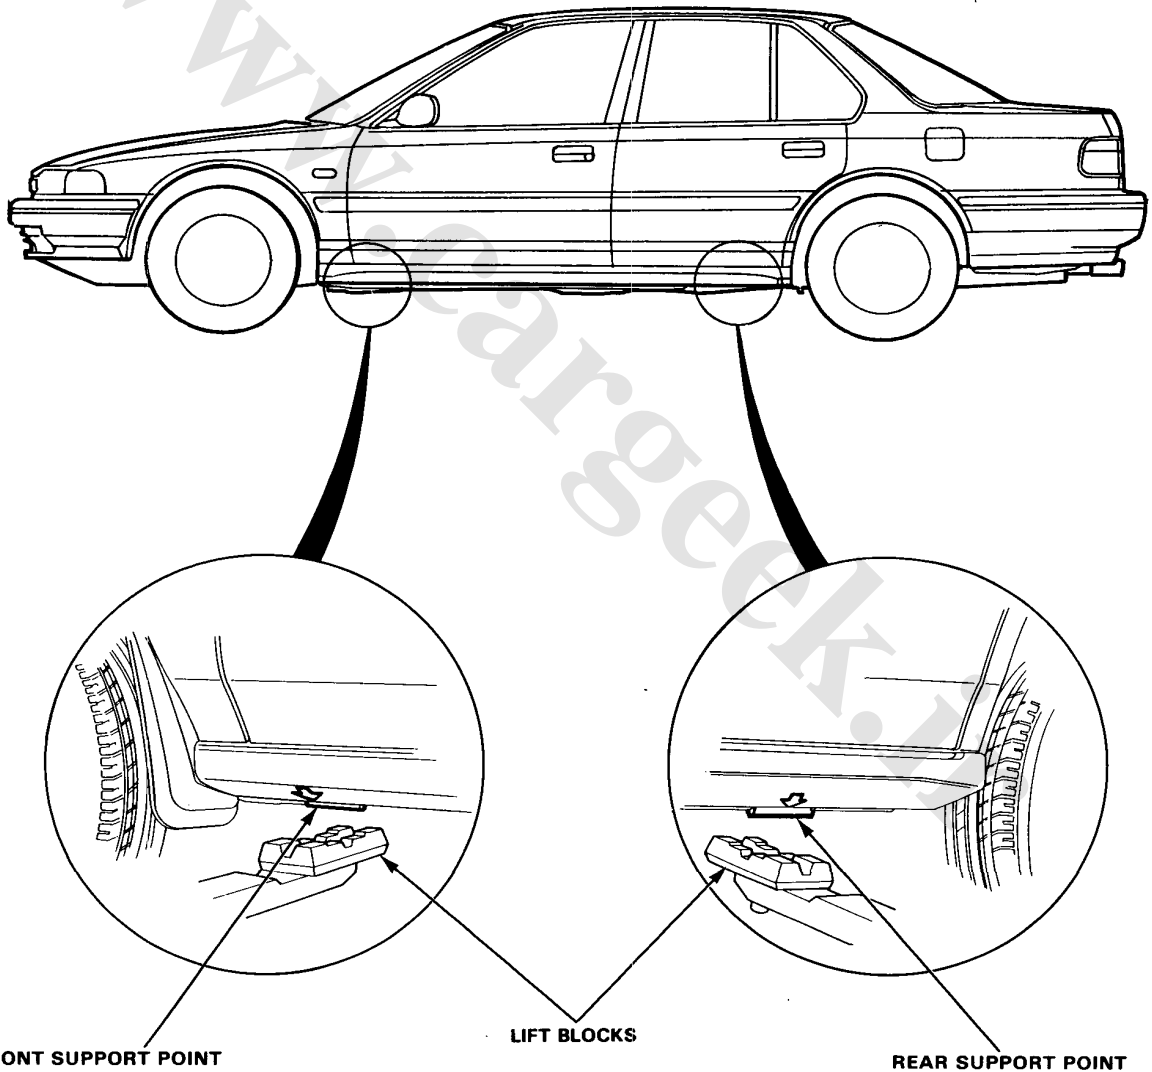




Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-8 so the car will be approximately level, then lower the car onto the stands.


▲ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front

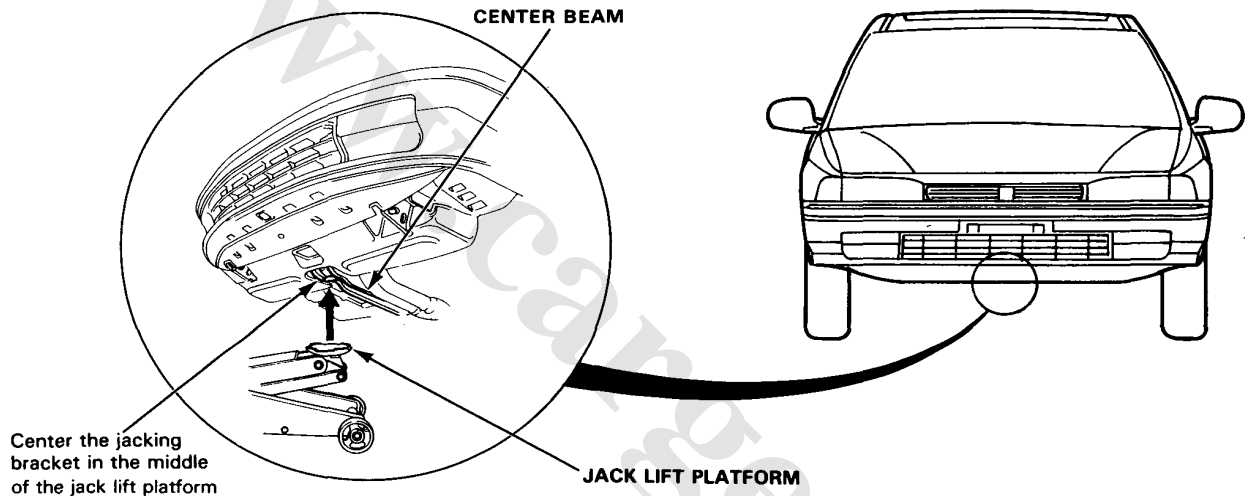



Rear

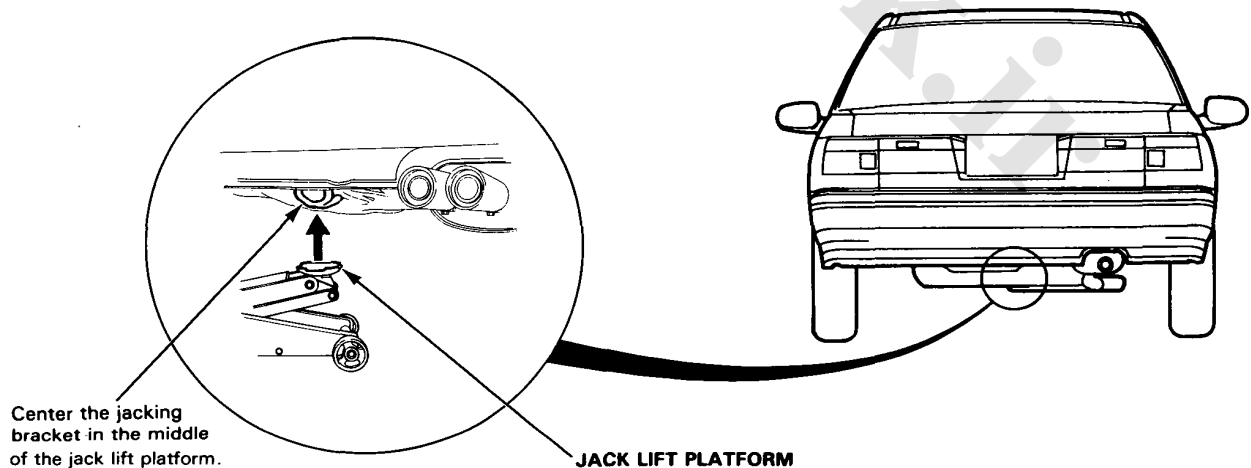


(cont'd)

Lift and Support Points (cont'd)

Safety Stands

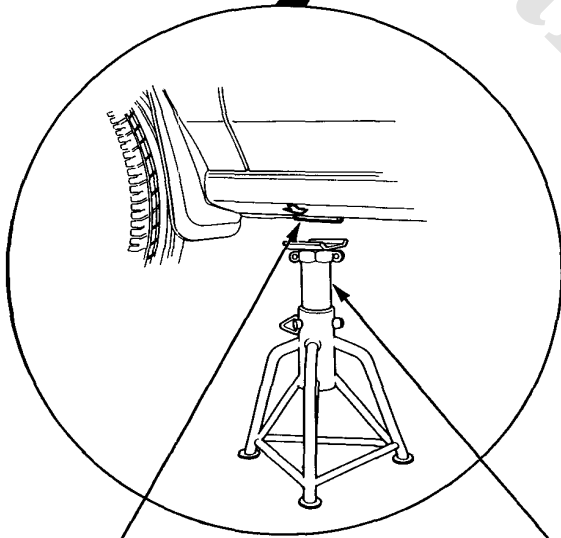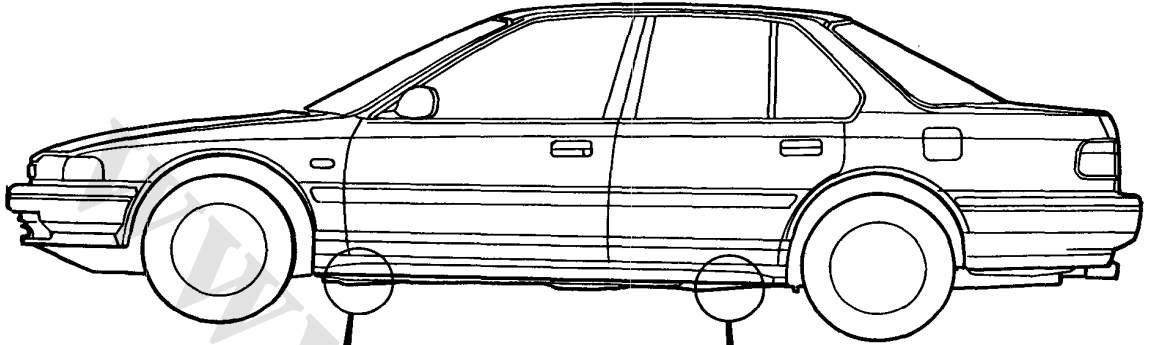

FRONT SUPPORT POINT

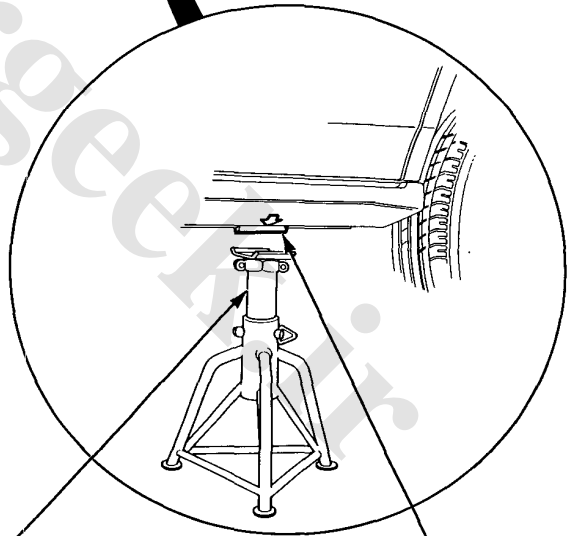

REAR SUPPORT POINT

SAFETY STANDS



Towing

If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and his chains and lift straps, to avoid damaging the bumper and the body under it.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A chain may be attached to the hook shown in the picture. Do not attach a tow bar to either bumper.

⚠ WARNING

DO NOT push or tow a car to start it. The forward surge when the engine starts could cause a collision. On some types, also, under some conditions, the catalytic converter could be damaged. A car equipped with an automatic transmission cannot be started by pushing or torwing.

If the car is to be towed with the front wheels on the ground, observe the following precautions:

Manual Transmission

Shift the transmission to Neutral and turn the ignition key to the "I" position.


Automatic Transmission

First, check the automatic transmission fluid level. Start the engine and shift to D₄, then to N. Return the ignition key to the "I" position.

CAUTION:

- Do not tow with front wheels on the ground when the automatic transmission fluid level is low or the transmission cannot be shifted with the engine running.
- Do not exceed 55 km/h (35 mph) or tow for distances of more than 80 km (50 miles).
- When towing a car with 4WS even with the front wheels off the ground, turn the wheels straight ahead and tie the steering wheel in place.

TIE DOWN BRACKETS

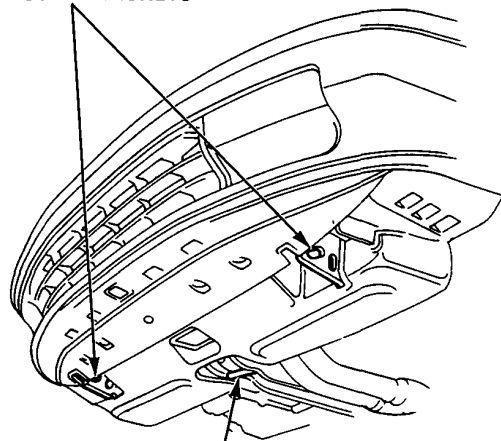


TOWING HOOK

Preparation of Work

Special Caution Items For This Car


1. 4WS system servicing (with 4WS)

- Do not disassemble the rear steering gear box.
- When towing the car even with the front wheels off the ground, center the steering and tie the steering wheel in place.
- When testing or adjusting the wheel alignment, attach the rear steering center lock pin to the rear steering gear box. Make sure that the rear steering gear box is located at the neutral position.

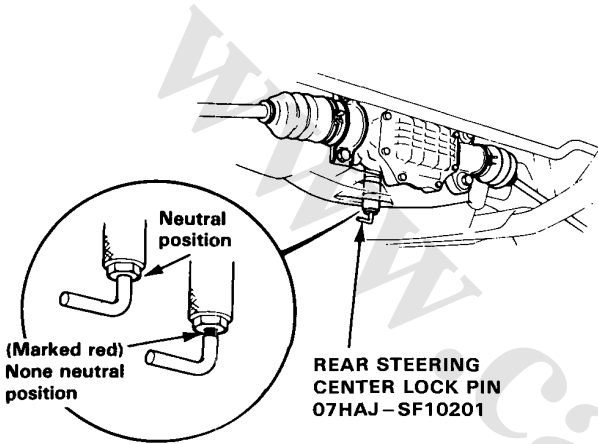


2. Anti-lock brake system piping system servicing

- Disassemble the anti-lock brake system piping system after relieve the high-pressured brake fluid.
- Otherwise, the high-pressured brake fluid will burst out and it is very dangerous.
- See section 13 of base manual (62SM400) how to relieve the high-pressured brake fluid.

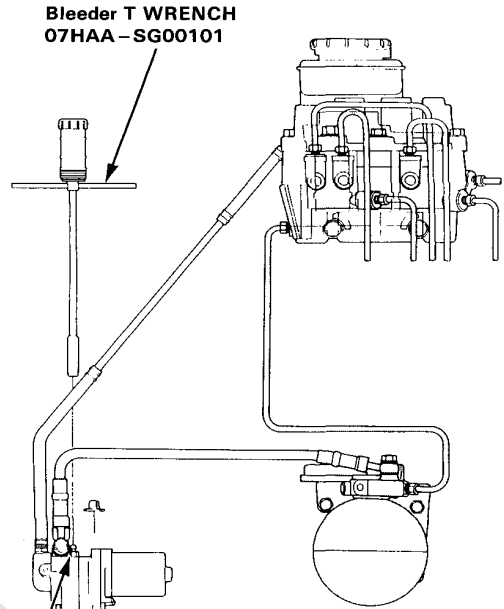


3. Fuel Line Servicing

- Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

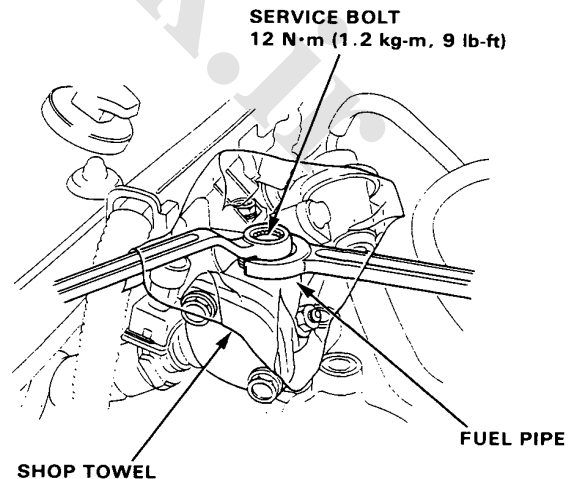




- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

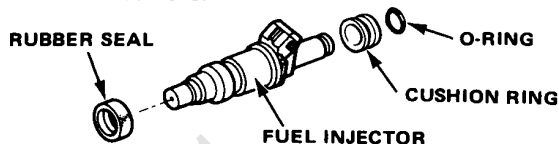

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

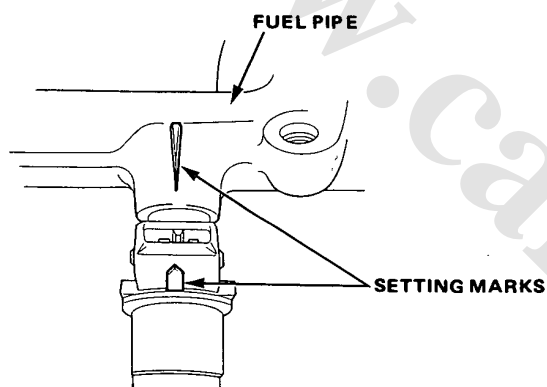

4. Inspection for fuel leakage
 - After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

5. Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, Carburetor, A/T, Cruise control and anti-lock brake system control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the control units.

The control unit locations:

- Fuel-Injection, Carburetor, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- Anti-lock brake system: Right side panel of trunk room.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring. When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).


6. Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine liquid gasket part No. OY740-99986.

- Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
- Apply liquid gasket evenly, being careful to cover all the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing the old residue.
- Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


Preparation of Work

CAUTION: Observe all safety precautions and notes while working.

1. Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

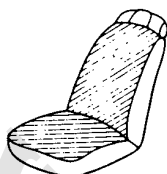

2. Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate as frequently as possible when a work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

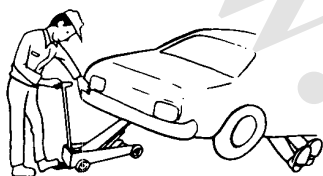


3. Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.




4. Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.




5. Use the special tools when use of such is specified.

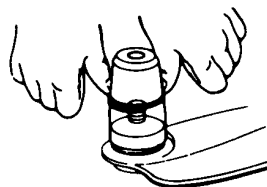


6. Parts must be assembled with the proper torque according to the maintenance standards established.
7. When tightening a series of bolts or nuts, begin with the center or larger diameter bolts and tighten them in crisscross pattern in two or more steps.

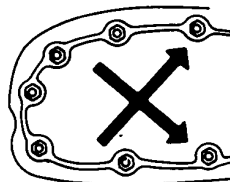

8. Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

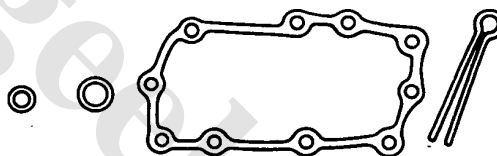


9. Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

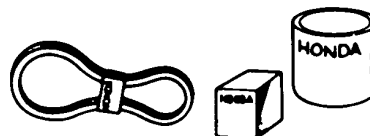




10. Coat or fill parts with specified grease as specified (Page 4-2). Clean all removed parts with solvent upon disassembly.

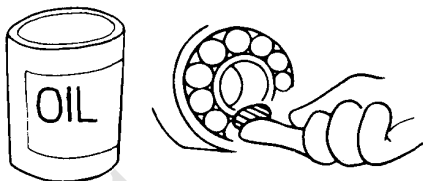

11. Brake fluid and hydraulic components
- When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
 - Do not mix different brands of fluid as they may not be compatible.
 - Do not reuse drained brake fluid.
 - Because brake fluid can cause damage to painted and resin surfaces, care should be taken not to spill it on such materials. If spilled accidentally, quickly rinse it with water or warm water from painted or resin surfaces.
 - After disconnecting brake hoses or pipes, be sure to plug the openings to prevent loss of brake fluid.
 - Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.




- Keep disassembled parts from air-borne dust and abrasives.
 - Check that parts are clean before assembly.
12. Avoid oil or grease getting on rubber parts and tubes, unless specified.
13. Upon assembling, check every part for proper installation and operation.

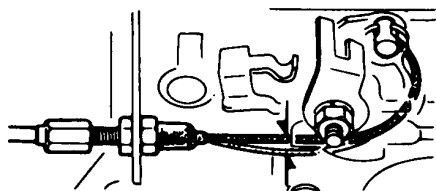


Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

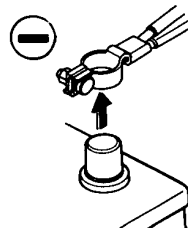


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

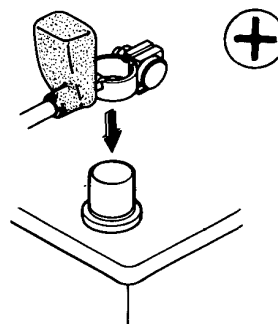

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

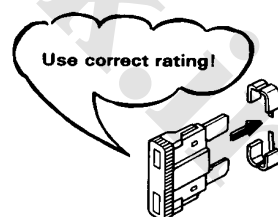

- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

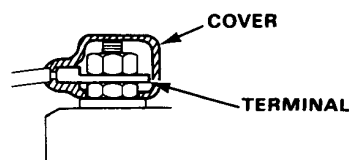


(cont'd)

Preparation of Work


Electrical (cont'd)

Since new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.


- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector. Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

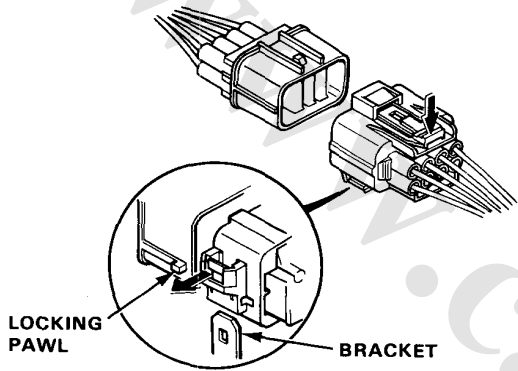


- Push the locking tab to disconnect.

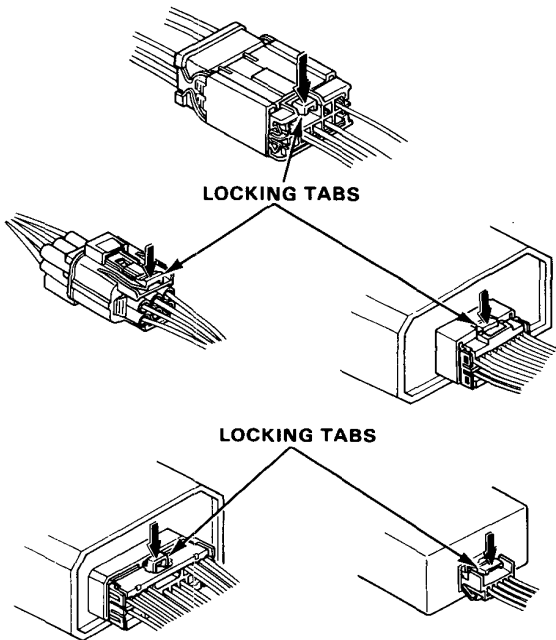


- Pull up the locking tab to remove the connector from the bracket.

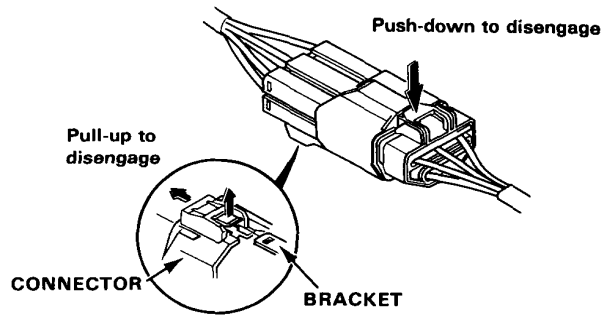

- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

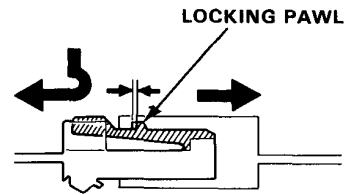


- When disconnecting a connector, pull it off from the mating coupler by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.

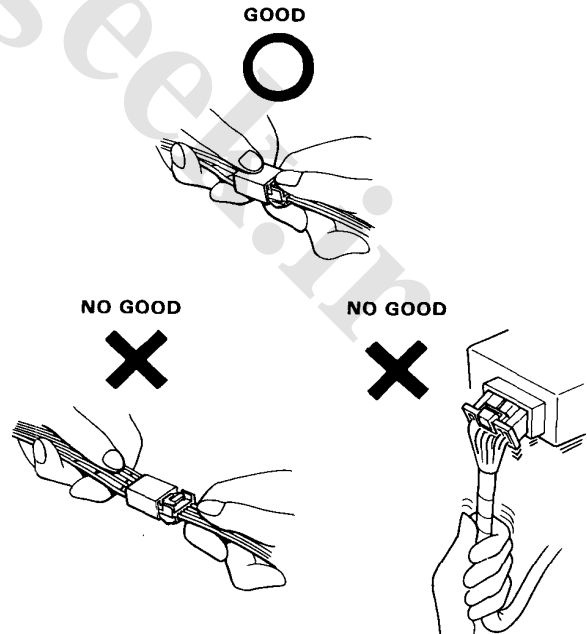





- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

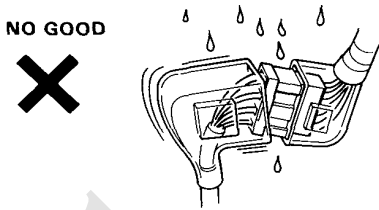


- Before connecting connectors, check to see that the terminals are in place and are not bent or distorted.

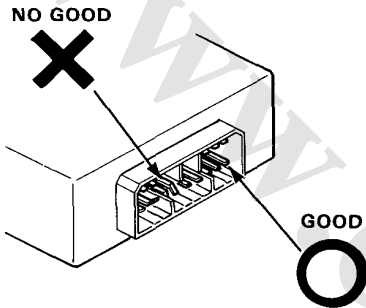


- Check for loose retainers and rubber seals. The illustration shows examples of terminal and seal abnormality.

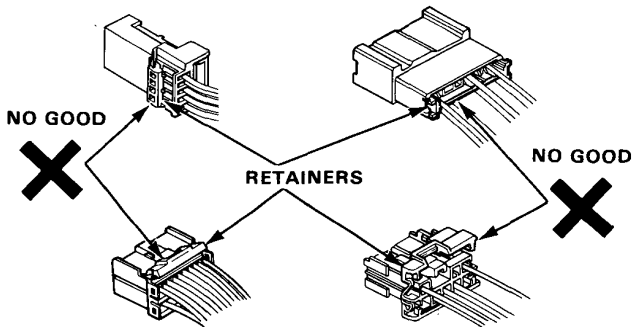

Example of waterproof connector:

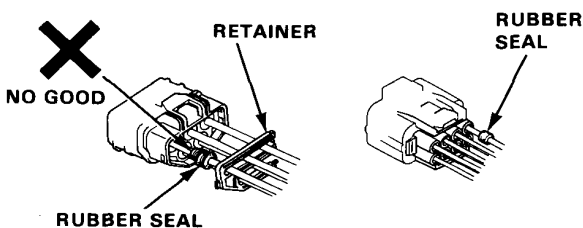

- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

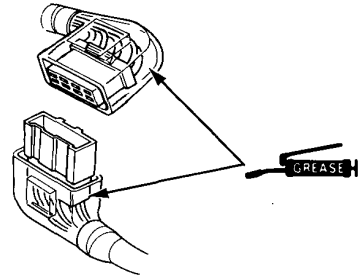


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.



- The locking tab with an angle end should be pushed when connecting.



- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Don't use wire harnesses with a loose wire or coupler.

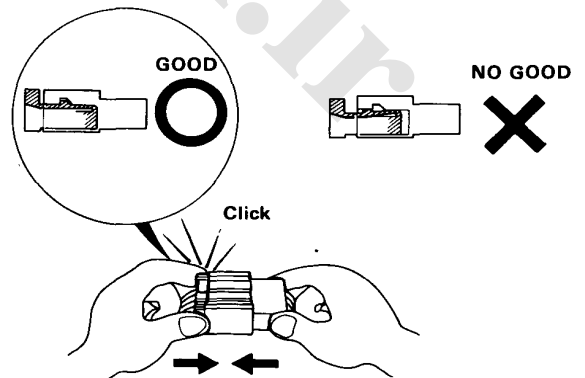


(cont'd)


Preparation of Work

Electrical (cont'd)




- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

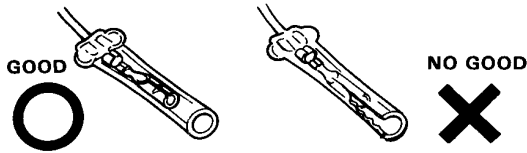


- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open of the cover is not facing upward.

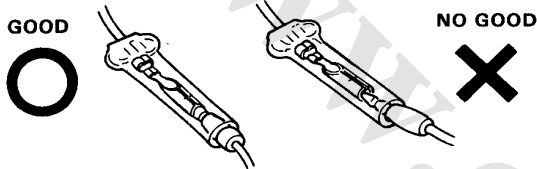


- Secure wires and wire harnesses to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or wire harnesses.
- Remove with care not to damage the lock.

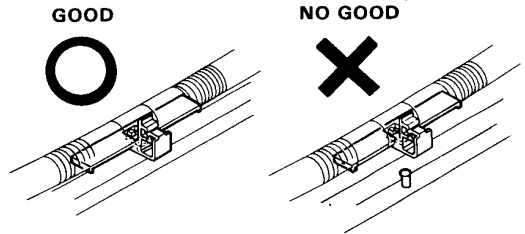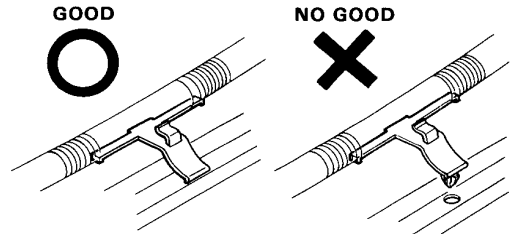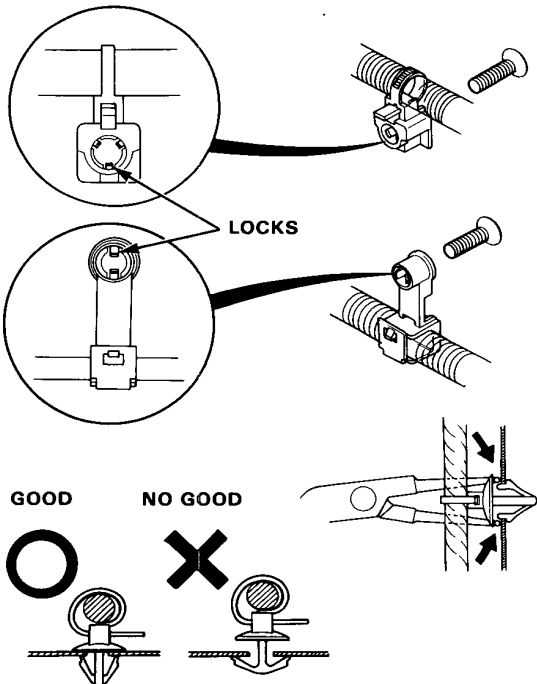

- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

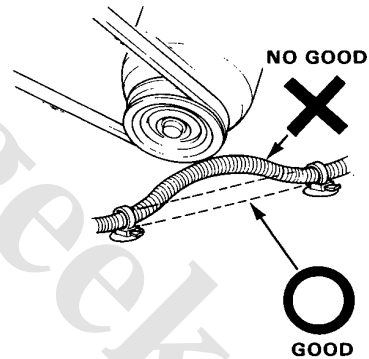


- Always keep a safe distance between wire harnesses and any heated parts.

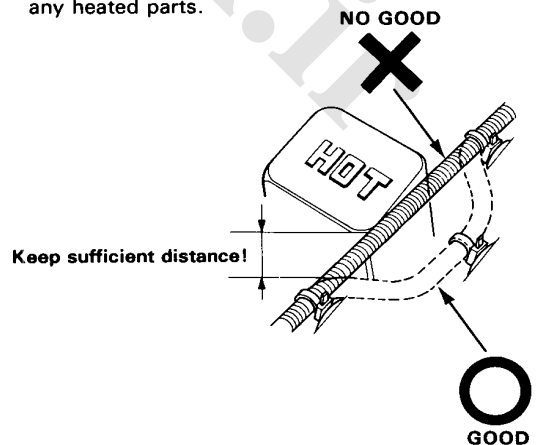





- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends or bolts, screws and other fasteners.

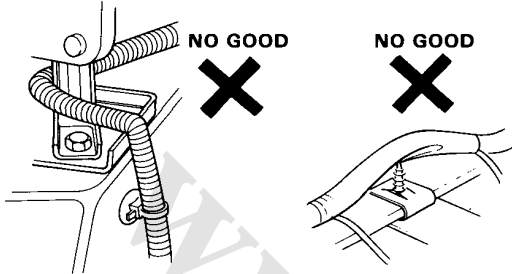


- Route harnesses so they are not pulled taut or slackened excessively.

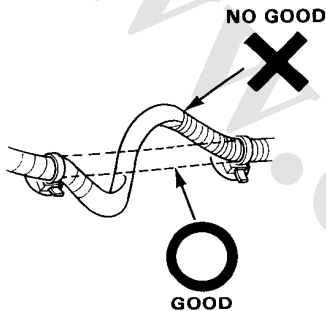


- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

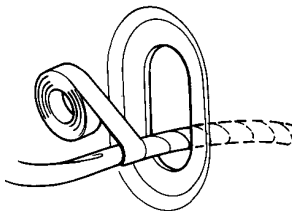


- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

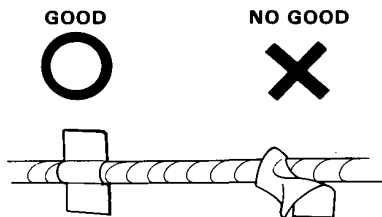


- Seat grommets in their grooves properly.

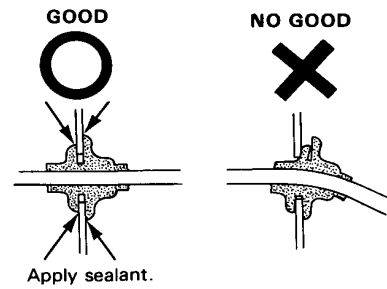

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

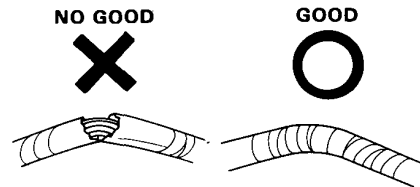

- After installing parts, make sure that wire harnesses are not pinched.

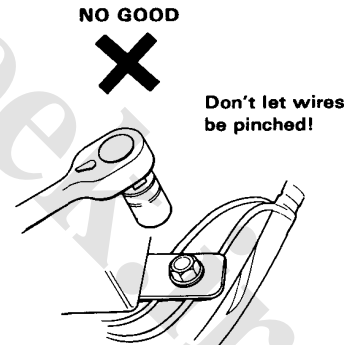

- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched or interfering with adjacent or surrounding parts in all steering positions.


(cont'd)

Preparation of Work


Symbol Marks

Electrical (cont'd)

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

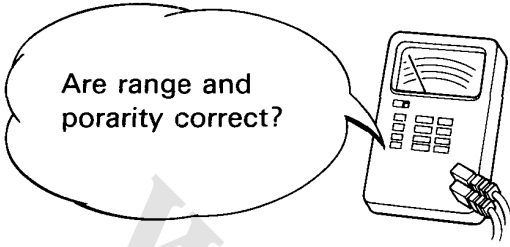


- Always insert the probe of the tester from the wire harness side (except waterproof connectors).

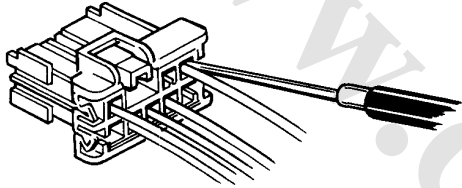


- Make sure to use the probe with a taper tip.

GOOD




NO GOOD



- Do not drop parts.

NO GOOD

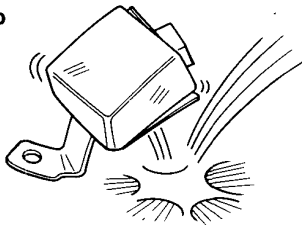

The following symbols stand for:



:Apply engine oil.



:Apply brake fluid.



:Apply grease.



:Apply DEXRON® II Automatic Transmission Fluid.



:Apply Power Steering Fluid.



:Apply or check vacuum.



:Sequence for removal or installation.



Abbreviation

2WS	Front Wheel Steering	P	Parking
4WS	Four Wheel Steering	R	Reverse
A/C	Air Conditioner	N	Neutral
A/T	Automatic Transmission	D ₄	Drive Position (1st—4th)
ATF	Automatic Transmission Fluid	D ₃	Drive Position (1st—3rd)
B or BAT	Battery	2	Fixed 2nd speed
CATA	Catalytic Converter	1	Fixed 1st speed
EACV	Electronic Air Control Valve	S	S Signal/S Switch
ECU	Electronic Control Unit for Fuel-Injection System		
EGR	Exhaust Gas Recirculation		
EX	Exhaust		
GND	Ground		
IG	Ignition		
IN	Intake		
INT	Intermittent		
L.	Left		
LHD	Left Hand Drive		
M/T	Manual Transmission		
PCV	Positive Crankcase Ventilation		
PGM-FI	Programmed Fuel-Injection		
P/S	Power Steering		
R.	Right		
RHD	Right Hand Drive		
SW	Switch		
SOL.V	Solenoid Valve		
TDC	Top Dead Center		

Tool List

www.cargeek.ir

Special Tools

5. Engine

Number	Tool Number	Description	Q'ty	Remarks
①	07GAF-PH70100	Pilot Collar	1	
②	07HAD-PJ70200	Valve Guide Seal Installer	1	
③	07HAF-PL20102	Piston Base Head	1	
④	07HAH-PJ70100	Valve Guide Reamer 5.5mm	1	
⑤	07JAB-0010000	Crank Pulley Holder Set	1	
⑤-1	07JAA-0010200	Socket Wrench 19 mm	(1)	
⑤-2	07JAB-0010200	Handle	(1)	
⑥	07JAB-0010400	Pulley Holder Attachment HEX 50 mm	1	
⑦	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
⑧	07JGG-0010100	Belt Tension Gauge	1	
⑨	07KAK-SJ40100	Engine Tilt Hanger Set	1	
⑩	07LAF-PT20100	Bearing Replacement Tool Set	1	
⑪	07LAG-PT20100	Balancer Shaft Lock Pin	1	
⑫	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
⑬	07LAZ-PT30110	R.P.M. Connecting Adaptor (A)	1	Component Tools
⑭	07LAZ-PT30120	R.P.M. Connecting Adaptor (B)	1	
⑮	07406-0030000	Oil Pressure Gauge Adaptor	1	
⑯	07746-0010300	Driver Attachment 42 x 47 mm	1	for Crankshaft
⑰	07746-0010400	Driver Attachment 52 x 55 mm	1	for Balancer Shaft
⑱	07749-0010000	Driver	1	
⑲	07757-0010000	Valve Spring Compressor	1	
⑳	07912-6110001	Oil Filter Socket	1	
㉑	07924-PD20003 or 07924-PD20002	Ring Gear Holder	1	
㉒	07942-0010100	Valve Guide Remover 5.5 mm	1	
㉓	07942-8920000	Valve Guide Driver 5.5 mm	1	
㉔	07948-SB00101	Driver Attachment	1	
㉕	07973-PE00310	Piston Pin Driver Shaft	1	
㉖	07973-PE00320	Piston Pin Driver Head	1	
㉗	07973-PE00400	Piston Pin Base Insert	1	
㉘	07973-6570500	Piston Base	1	
㉙	07973-0570600	Piston Base Spring	1	



6. Fuel and Emissions

Number	Tool Number	Description	Q'ty	Remarks
①	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
②	07LAA—PT50100	O ₂ Sensor Socket Wrench	1	
③	07LAJ—PT30100	ECU Test Harness	1	
④	07LAJ—PT30200	Test Harness	1	
⑤	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑤-1	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑤-2	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑥	07406—0040001	Fuel Pressure Gauge Set	1	
⑥-1	07406—0040100	Pressure Gauge	(1)	Component Tools
⑥-2	07406—0040201	Hose Assembly	(1)	
⑦	07411—0020000	Digital Circuit Tester	1	
⑧	07614—0050100	Fuel Line Clamp	1	

7. Clutch

Number	Tool Number	Description	Q'ty	Remarks
①	07JAF—PM7011A	Clutch Alignment Disc	1	
②	07LAF—PT00110	Clutch Alignment Shaft	1	
③	07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
④	07936—3710100	Handle	1	

8. Manual Transmission

Number	Tool Number	Description	Q'ty	Remarks
①	07GAJ—PG20102	Mainshaft Inspection Tool Set	1	
①-1	07GAJ—PG20110	Mainshaft Holder	(1)	Component Tools
①-2	07GAJ—PG20130	Mainshaft Base	(1)	
②	07HAJ—PK40201	Preload Inspection Tool	1	
③	07JAC—PH80000	Adjusting Bearing Remover Set	1	
③-1	07JAC—PH80100	Bearing Remover Attachment	(1)	Component Tools
③-2	07JAC—PH80200	Bearing Remover Handle	(1)	
③-3	07741—0010201	Bearing Remover Weight	(1)	
④	07JAD—PH80400	Pilot Driver 28 mm	1	
⑤	07JAD—SH30100	Oil Seal Driver	1	
⑥	07744—0010400	Pin Driver 5.0 mm	1	07944—6110100 may also be used
⑦	07746—0010300	Attachment 42 x 47 mm	1	
⑧	07746—0010400	Attachment 52 x 55 mm	1	
⑨	07746—0010500	Attachment 62 x 68 mm	1	
⑩	07746—0010600	Attachment 72 x 75 mm	1	
⑪	07746—0030100	Driver	1	
⑫	07746—0030200	Inner Driver 25 mm	1	
⑬	07749—0010000	Driver	1	
⑭	07944—SA00000	Pin Driver 4.0 mm	1	
⑮	07947—6110501	Oil Seal Driver	1	
⑯	07979—PJ40001	Magnet Stand Base	1	

Special Tools

9. Automatic Transmission

Number	Tool Number	Description	Q'ty	Remarks
①	07GAB—PF50100	Mainshaft Holder	1	
②	07GAD—PG20100	Pin Driver 5.0 mm	1	
③	07GAE—PG40200	Clutch Spring Compressor Set	1	
③-1	07HAE—PL50100	Clutch Spring Compressor Attachment	(1)	Component Tools
③-2	07GAE—PG40200	Clutch Spring Compressor Bolt Assembly	(1)	
③-3	07960—6120101	Clutch Spring Compressor Attachment	(1)	
④	07GAJ—PG20200	Preload Inspection Tool	1	
⑤	07HAC—PK40101	Housing puller	1	
⑤-1	07HAC—PK40110	Puller Base, Replacement	(1)	May also be used when combined with 07HAC—PK40100
⑥	07JAC—PH80000	Adjusting Bearing Remover Set	1	
⑥-1	07JAC—PH80100	Bearing Remover Attachment	(1)	Component Tools
⑥-2	07JAC—PH80200	Bearing Handle Assembly	(1)	
⑥-3	07741—0010201	Remover Weight	(1)	
⑦	07JAD—PH80101	Driver Attachment	1	
⑧	07JAD—PH80400	Pilot Driver 28 x 30 mm	1	
⑨	07JAD—PN00100	Driver Attachment	1	
⑩	07LAF—PX40100	Clutch Spring Compressor Attachment	1	
⑪	07LAJ—PT30100	ECU Test Harness	1	
⑫	07406—0020003	Oil Pressure Gauge	1	
⑬	07406—0020201	Oil Pressure Gauge Hose	1	
⑭	07406—0070000	Low Pressure Gauge	1	
⑮	07746—0010400	Attachment 52 x 55 mm	1	
⑯	07746—0010500	Attachment 62 x 68 mm	1	
⑰	07746—0010600	Attachment 72 x 75 mm	1	
⑱	07746—0030100	Driver 40 mm I.D.	1	
⑲	07749—0010000	Driver	1	
⑳	07947—6340500	Driver Attachment E	1	

10. Driveshafts

Number	Tool Number	Description	Q'ty	Remarks
①	07GAD—PG40100	Seal Driver Attachment	1	
②	07GAF—SD40700	Hub Dis/Assembly Base	2	
③	07LAD—SM40100	Seal Driver Attachment	1	
④	07LAF—SM40300	Support Base Attachment	1	
⑤	07746—0010200	Attachment, 37 x 40 mm	1	
⑥	07746—0010300	Attachment, 42 x 47 mm	1	
⑦	07746—0030100	Driver, 40 mm I.D.	1	
⑧	07749—0010000	Driver	1	
⑨	07947—SD90101	Seal Driver Attachment	1	
⑩	07965—SD90100	Support Base	1	



11. Steering

Number	Tool Number	Description	Q'ty	Remarks
①	07GAG—SD40300	Cylinder End Seal Slider	1	
②	07HAG—SF10100	Piston Seal Ring Guide	1	
③	07HAG—SF10200	Piston Seal Ring Sizing Tool	1	
④	07HAG—SF10300	Pinion Seal Ring Guide	1	
⑤	07JGG—0010100	Belt Tension Gauge	1	
⑥-1	07LAK—SM40110	P/S Joint Adaptor (Pump)	1	
⑥-2	07LAK—SM40120	P/S Joint Adaptor (Hose)	1	
⑦	07406—0010001	P/S Pressure Gauge Set	1	
⑦-1	07406—0010300	Pressure Control Valve	1	
⑦-2	07406—0010400	Pressure Gauge	1	
⑧	07406—0010101	Bypass Tube Joint (included with 07406—0010001)	1	
⑨	07725—0030000	Universal Holder	1	
⑩	07746—0010300	Attachment 42 x 47 mm	1	
⑪	07749—9910000	Driver	1	
⑫	07916—SA50001	Locknut Wrench 40 mm	1	
⑬	07941—6920003	Ball Joint Remover	1	
⑭	07947—6340300	Driver Attachment	1	
⑮	07974—SA50600	Pinion Seal Guide	1	

11. Steering (4WS only)

Number	Tool Number	Description	Q'ty	Remarks
①	07HAG—SF10000	4WS Tool Kit	1	
①-1	07HAG—SF10400	Pinion Seal Ring Sizing Tool	1	
①-2	07HAG—SF10500	Driven Seal Ring Guide	1	
②	07HAJ—SF10100	Rack Adjuster Gauge Holder Set	1	
③	07HAJ—SF10201	Rear Steering Center Lock Pin	1	
④	07HAJ—SF10300	Stroke Rod Holder Set	1	
⑤	07HAJ—SF10400	Inspection Adaptor	1	
⑥	07LAA—SM40100	Locknut Wrench, 43 mm	1	
⑦	07LAA—SM40200	Locknut Socket 36 x 43 mm	1	
⑧	07LAG—SM40000	4WS Tool Kit	1	
⑧-1	07LAG—SM40100	Piston Seal Ring Guide	1	
⑧-2	07LAG—SM40200	Piston Seal Ring Sizing Tool	1	
⑧-3	07LAG—SM40300	Cylinder End Seal Slider	1	
⑧-4	07LAG—SM40400	Cylinder End Seal Guide	1	
⑧-5	07LAG—SM40500	Tool Box	1	
⑨	07703—0010101	TORX® Bit T40	1	

12. Suspension

Number	Tool Number	Description	Q'ty	Remarks
①	07GAE--SE00101	Spring Compressor	1	
②	07GAF--SD40100	Hub Assembly Pin	1	
③	07GAF--SD40330	Ball Joint Remover/Installer	1	4WS Only
④	07GAF--SE00200	Hub Assembly Guide Attachment	1	4WS Only
⑤	07GAG--SD40700	Ball Joint Clip Installation Guide	1	
⑥	07HAF--SF10100	Ball Joint Dis/Assembly Tool set	1	
⑥-1	07HAF--SF10110	Ball Joint Remover Base	1	
⑥-2	07HAF--SF10120	Ball Joint Installer Base	1	
⑥-3	07HAF--SF10130	Ball Joint Remover/Installer	1	
⑦	07HAJ--SF10201	Rear Steering Center Lock Pin	1	
⑧	07HGJ--0010000	Toe Inspection Gauge Set	1	4WS Only
⑨	07HGK--0010200	Wheel Alignment Gauge Attachment	1	
⑩	07703--0010100	TORX® BIT T40	1	4WS Only
⑪	07749--0010000	Driver	1	
⑫	07941--6920003	Ball Joint Remover	1	
⑬	07947--SB00100	Oil Seal Driver	1	4WS Only
⑭	07965--6340301	Hub Dis/assembly Base	2	
⑮	07965--6920201	Hub Dis/Assembly Base	1	

13. Brakes

Number	Tool Number	Description	Q'ty	Remarks
①	07GAG--SE00100	Pushrod Adjustment Gauge	1	
②	07HAE--SG00100	Brake Spring Compressor	1	
③	07HAK--SG00110	Pressure Gauge Joint Pipe	1	
④	07LAF--SM40200	Brake spring installer	1	
⑤	07404--5790300	Pressure Gauge Attachment	1	
⑥	07406--5790200	Pressure Gauges	2	
⑦	07410--5790100	Pressure Gauge Attachment	2	
⑧	07410--5790500	Tube Joint Adaptor	1	
⑨	07510--6340100	Pressure Gauge Joint Pipe	1	
⑩	07510--6340300	Vacuum Joint Tube A	1	
⑪	07914--SA50001	Snap Ring Pliers	1	
⑫	07921--0010001	Flare Nut Wrench	1	
⑬	07973--SA50000	Rear Caliper Guide	1	

13. Brakes (ALB only)

Number	Tool Number	Description	Q'ty	Remarks
①	07HAA--SG00101	Bleeder T-Wrench	1	
②	07HAJ--SG00601	ALB Checker	1	
	or			
	07508--SB00000	ALB Checker	1	
	--07HAJ--SG00400	Adaptor	1	

**14. Body**

Number	Tool Number	Description	Q'ty	Remarks
①	07GAZ-SE30100	Torsion Bar Assembly Tool	1	

15. Heater and Air Conditioner

Number	Tool Number	Description	Q'ty	Remarks
①	07JGG-0010100	Belt Tension Gauge	1	
②	07LAB-SK70100	A/C Clutch Holder	1	
③	07LAJ-PT30100	ECU Test Harness	1	

16. Electrical

Number	Tool Number	Description	Q'ty	Remarks
①	07GAC-SE00200	Fuel Sender Wrench	1	
②	07JGG-0010100	Belt Tension Gauge	1	

Lubrication Points
Maintenance Schedule

www.cargeek.ir

Maintenance

Lubrication Points.....	4-2
Maintenance Schedule	4-4


www.Cargeek.ir




Lubrication Points

No.	LUBRICATION POINTS	LUBRICANT
1	Engine	API Service Grade: SF or SG 10 W-30 SAE Viscosity: See chart below
2	Transmission Manual Automatic	API Service Grade: SE or SF SAE Viscosity: See chart below DEXRON® or DEXRON® II Automatic transmission fluid
3	Brake line	Brake fluid DOT3 or DOT4
4	Clutch line	Brake fluid DOT3
5	Power steering gearbox	Steering grease P/N 08733-B070E
6	Shift lever pivots (Manual)	Silicone grease with molybdenum disulfide
7-22	Steering ball joints Suspension ball joints Steering boots Steering column bushings Select lever (Automatic) Pedal linkage Intermediate shaft Brake master cylinder pushrod Trunk hinges Door hinges upper and lower Door opening detents Fuel filler lid Engine hood hinges Engine hood latch Tilt lever Rear brake shoe linkage	Multi-purpose grease
23	Caliper Piston seal Dust seal Caliper pin Piston	Silicone grease
24	Power steering system	Power steering fluid P/N 08208-99961


Recommended Engine Oil
(SF or SG Grade 10W-30 Oil)

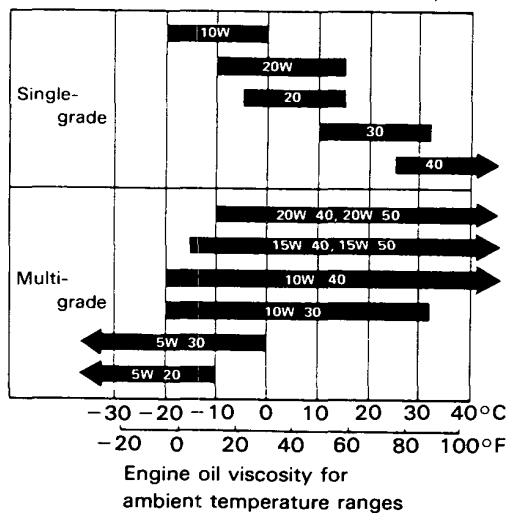

Recommended Manual Transmission Oil
(SE or SF Grade Oil)

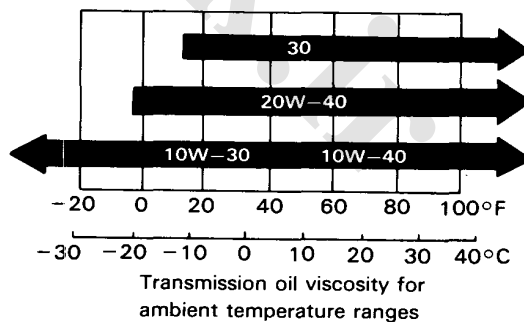

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

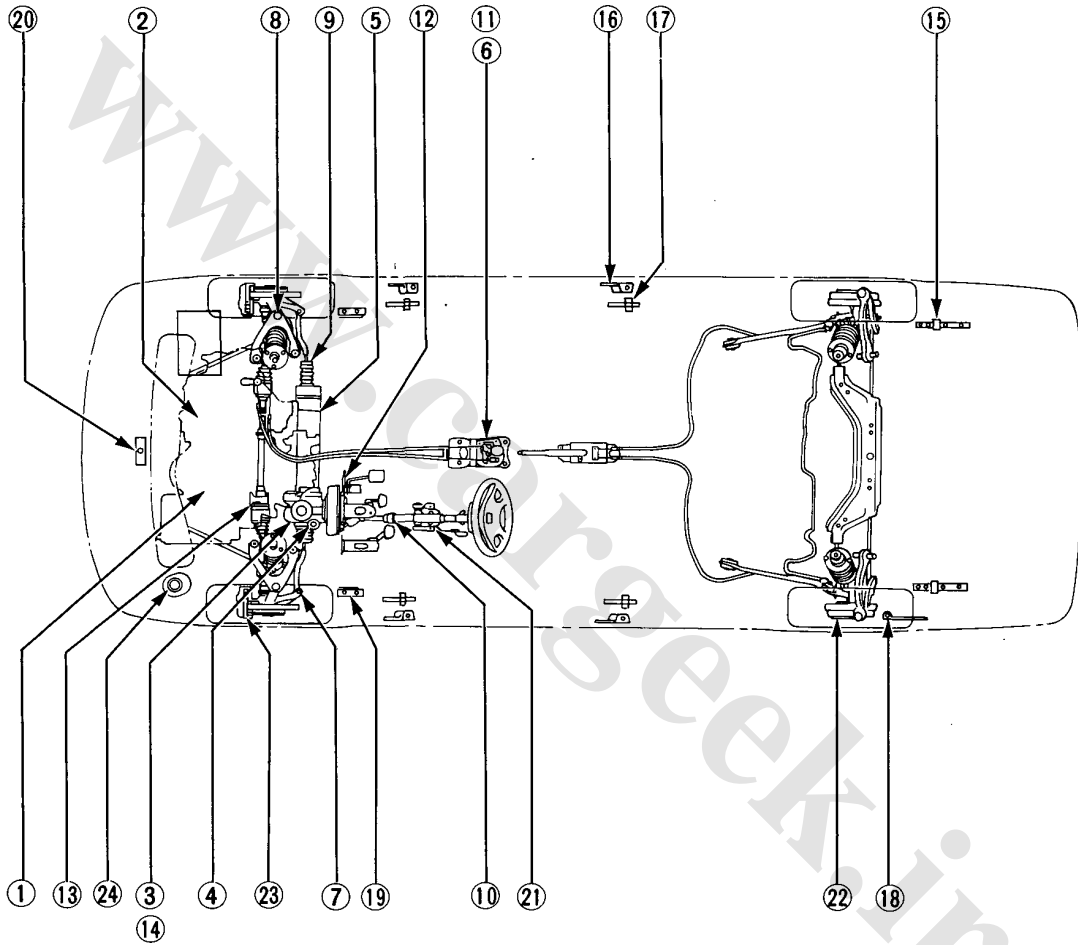

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace C—Clean		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
Idle speed and idle CO*3		I	I	I	I	I	
Idle speed and idle CO*4						I	
Valve clearance		I	I	I	I	I	
Alternator drive belt			I		I		
Timing belt and timing balancer belt						R	
Water pump						I	
■ Engine oil and oil filter	Replace every 10,000 km (6,000 miles) or 6 months						
■ Transmission oil			R		R		
■ Radiator coolant					R*1		
Cooling system hoses and connections			I		I		
E.G.R. system (Standard for some types)						I	
Secondary air supply system (Standard for some types)						I	
Air cleaner element (Viscous type for European and KQ models)			R		R		
Air cleaner element (Dry type except European and KQ models)	R		R	R	R	R	
Fuel filter (Including aux filter*5)			R		R		
Tank, fuel line and connections			I		I		
Intake air temp. control system*3, *5						I	
Throttle control system*3, *5			I		I		
Throttle control system*4, *5						I	
Choke mechanism*5 (except KS models)			I		I		
Choke mechanism*5 (KS model)				C*7		I	
Choke opener operation (only for carburetor automatic choke type)						I	
Evaporative emission control system*6						I	
Ignition timing and control system*3			I		I		
Ignition timing and control system*4						I	
Spark plugs (for cars using unleaded gasoline)			R*2		R*2		
Spark plugs (for cars using leaded gasoline)	R		R	R	R	R	
Distributor cap and rotor*3			I		I		
Distributor cap and rotor*4						I	
Ignition wiring*3			I		I		
Ignition wiring*4						I	
Positive crankcase ventilation valve*3			I		I		
Positive crankcase ventilation valve*4						I	
Blow-by filter*5			I		I		

■: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

*1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.

*2 For KS type, replace every 2 years or 40,000 km (24,000 miles) whichever comes first after 30,000 km (18,000 miles).

*3 Except KS, KX models

*4 KS, KX models

*5 Only for carbureted type

*6 Except KP, KT and 2.0 i of KE, KF

*7 Recommended by manufacturer only



Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
ITEM							
Brake hoses and lines (Including anti-lock brake system hoses and pipes for anti-lock brke system models)		I	I	I	I	I	
Brake fluid (Including anti-lock brake system Fluid for anti-lock brake system models)			R		R		
Front brake discs and calipers		I	I	I	I	I	
Front brake pads		Inspect every 10,000 km (6,000 miles) or 6 months					
Rear brake discs, calipers and pads (for disk brake type)			I		I		
Rear brake drums, wheel cylinders and linings (for drum brake type)			I		I		
Parking brake		I	I		I		
Exhaust pipe and muffler		I	I	I	I	I	
Suspension mounting bolts		I	I	I	I	I	
Front wheel alignment (except 4WS models)		I	I	I	I	I	
Front and rear wheel alignment (4WS models)		I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots (Including center shaft for 4WS models)	Except 4WS models		I		I		
	4WS models		I	I	I	I	
Anti-lock brake system high pressure hose (for anti-lock brake system models)					R		
Anti-lock brake system operation (for Anti-lock brake system models)		I	I		I		
Power steering system		I	I	I	I	I	
Power steering pump belt			I		I		
Catalytic converter heat shield (Standard for some types)						I	

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I— Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
. B C . E .	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months

CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

Maintenance Schedule

Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace C—Clean		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
Idle speed and idle CO*3		I	I	I	I	I	
Idle speed and idle CO*4						I	
Valve clearance		I	I	I	I	I	
Alternator drive belt			I		I		
Timing belt and timing balancer belt						R	
Water pump						I	
■ Engine oil and oil filter	Replace every 10,000 km (6,000 miles) or 6 months						
■ Transmission oil			R		R		
■ Radiator coolant					R*1		
Cooling system hoses and connections			I		I		
E.G.R. system (Standard for some types)						I	
Secondary air supply system (Standard for some types)						I	
Air cleaner element (Viscous type for European and KQ models)			R		R		
Air cleaner element (Dry type except European and KQ models)	R		R	R	R	R	
Fuel filter (Including aux filter*5)			R		R		
Tank, fuel line and connections			I		I		
Intake air temp. control system*3, *5						I	
Throttle control system*3, *5			I		I		
Throttle control system*4, *5						I	
Choke mechanism*5 (except KS models)			I		I		
Choke mechanism*5 (KS model)				C*7		I	
Choke opener operation (only for carburetor automatic choke type)						I	
Evaporative emission control system*6						I	
Ignition timing and control system*3			I		I		
Ignition timing and control system*4						I	
Spark plugs (for cars using unleaded gasoline)			R*2		R*2		
Spark plugs (for cars using leaded gasoline)	R		R	R	R	R	
Distributor cap and rotor*3			I		I		
Distributor cap and rotor*4						I	
Ignition wiring*3			I		I		
Ignition wiring*4						I	
Positive crankcase ventilation valve*3			I		I		
Positive crankcase ventilation valve*4						I	
Blow-by filter*5			I		I		

■: These service intervals assume routine checking and replenishment has been done, as needed, by the customer.

*1 Thereafter, replace every 2 years or 40,000 km (24,000 miles), whichever comes first.

*2 For KS type, replace every 2 years or 40,000 km (24,000 miles) whichever comes first after 30,000 km (18,000 miles).

*3 Except KS, KX models

*4 KS, KX models

*5 Only for carbureted type

*6 Except KP, KT and 2.0 i of KE, KF

*7 Recommended by manufacturer only



Service at the interval listed x 1,000 km (or miles) or after that number of months, whichever comes first.	R—Replace		I—Inspect. After inspection, clean, adjust, repair or replace if necessary.				
	x 1,000 km x 1,000 miles months	20 12 12	40 24 24	60 36 36	80 48 48	100 60 60	
ITEM							
Brake hoses and lines (Including anti-lock brake system hoses and pipes for anti-lock brke system models)		I	I	I	I	I	
Brake fluid (Including anti-lock brake system Fluid for anti-lock brake system models)			R		R		
Front brake discs and calipers		I	I	I	I	I	
Front brake pads		Inspect every 10,000 km (6,000 miles) or 6 months					
Rear brake discs, calipers and pads (for disk brake type)			I		I		
Rear brake drums, wheel cylinders and linings (for drum brake type)			I		I		
Parking brake		I	I		I		
Exhaust pipe and muffler		I	I	I	I	I	
Suspension mounting bolts		I	I	I	I	I	
Front wheel alignment (except 4WS models)		I	I	I	I	I	
Front and rear wheel alignment (4WS models)		I	I	I	I	I	
Steering operation, tie rod ends, steering gear box and boots (Including center shaft for 4WS models)	Except 4WS models	I	I		I		
	4WS models	I	I	I	I	I	
Anti-lock brake system high pressure hose (for anti-lock brake system models)					R		
Anti-lock brake system operation (for Anti-lock brake system models)		I	I		I		
Power steering system		I	I	I	I	I	
Power steering pump belt			I		I		
Catalytic converter heat shield (Standard for some types)						I	

CAUTION: The following items must be serviced more frequently on cars normally used under severe driving conditions. Refer to the chart below for the appropriate maintenance intervals.

Severe driving conditions include:

A : Repeated short distance driving

B : Driving in dusty conditions

C : Driving in severe cold weather

D : Driving in areas using road salt or other corrosive materials

E : Driving on rough and/or muddy roads

F : Towing a trailer

R—Replace.

I— Inspect. After inspection, clean, adjust, repair or replace if necessary.

Condition	Maintenance item	Maintenance operation	Interval
A B . . . F	Engine oil and oil filter	R	Every 5,000 km (3,000 miles) or 3 months
. F	Transmission oil	R	Every 20,000 km (12,000 miles) or 12 months
A B . D E F	Front brake discs and calipers	I	Every 10,000 km (6,000 miles) or 6 months
A B . D E F	Rear brake discs, calipers and pads	I	Every 20,000 km (12,000 miles) or 12 months
. B C . E .	Power steering system	I	Every 10,000 km (6,000 miles) or 6 months









CAUTION: Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods. Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

- Special Tools**
- Component Locations**
 - Index**
- System Description**
 - Vacuum Connections**
 - Electrical Connections**
- Troubleshooting**
 - Self - Diagnostic Procedures**
 - How to Read Flow Charts**
- PGM - CARB Control System**
 - Sysptom - to - System Chart**
 - Troubleshooting Flow Charts - Manifold Absolute Pressure Sensor**
 - Vacuum Switch**
- Carburetor**
 - Sysptom - to - Sub System Chart**
 - Idle Control System**
 - Vacuum Controlled Secondary**
 - Slow Air Jet Control System**
 - Power Valve**
 - Idle Speed/Mixture**
 - Replacement**
- Fuel Supply System**
 - Symptom - to - Sub System Chart**
- Air IntakeSystem**
 - Symptom - to - Sub System Chart**
- Emission Control System**
 - Symptom - to - Sub System Chart**
 - Tailpipe Emissions**
 - Catalytic Converter**
 - Air Injection Control**
 - EGR System**
 - Throttle Control System**
 - Evaporative Emission Controls**

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remark
①	07411-0020000	Digital Circuit Tester	1	
②	07614-0050100	Fuel Line Clamp	1	
③	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
④	07LAJ-PT30100	ECU Test Harness	1	
⑤	07LAJ-PT30200	Test Harness	1	
⑥	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
⑥-1	07LAZ-PT30110	R.P.M. Connecting Adaptor (A)	(1)	┌ Component Tools
⑥-2	07LAZ-PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑦	07LAA-PT50100	O ₂ Sensor Socket Wrench	1	

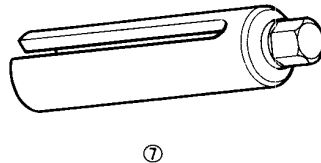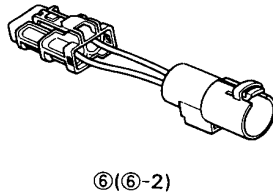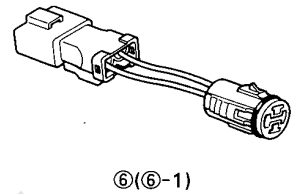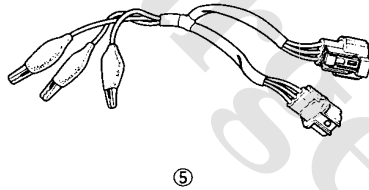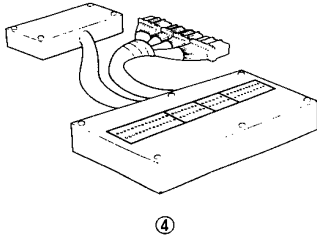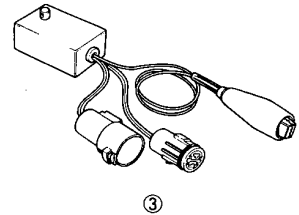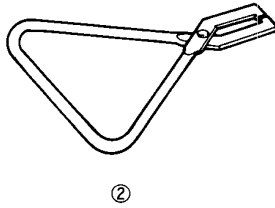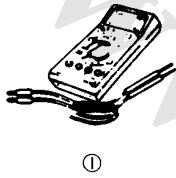




Component Locations


Index


(KE with CATA)

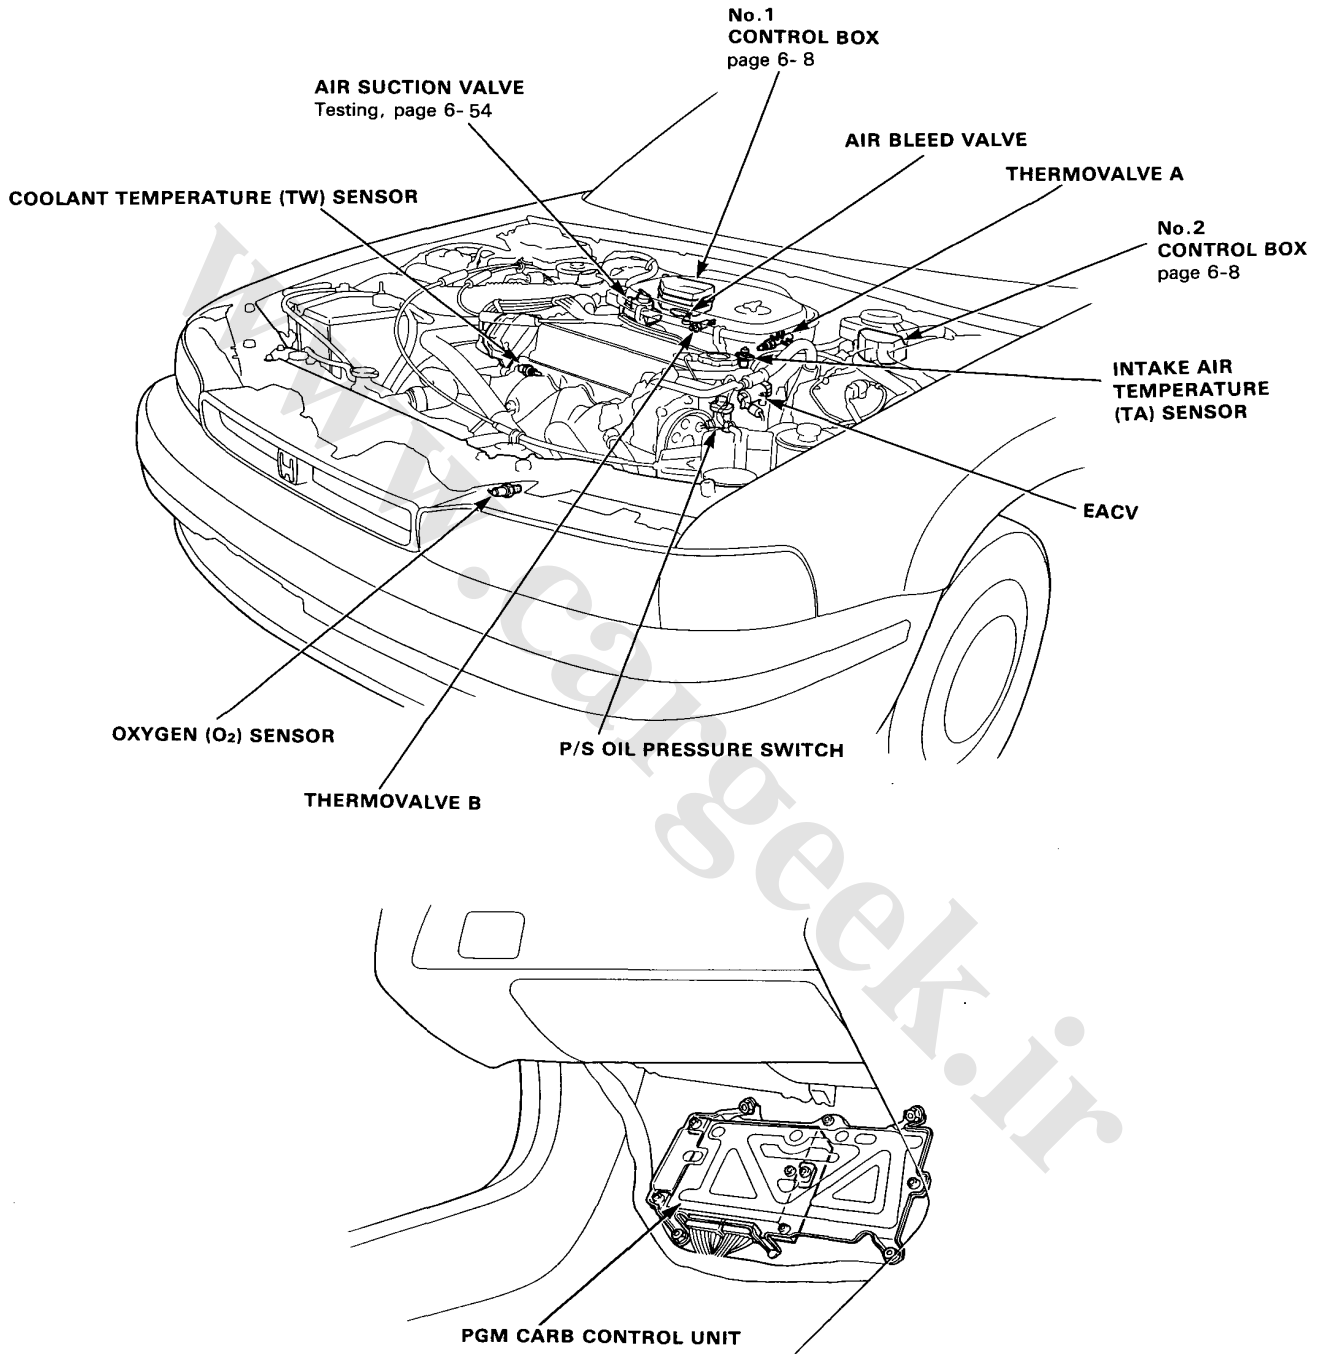

Component Locations

Index

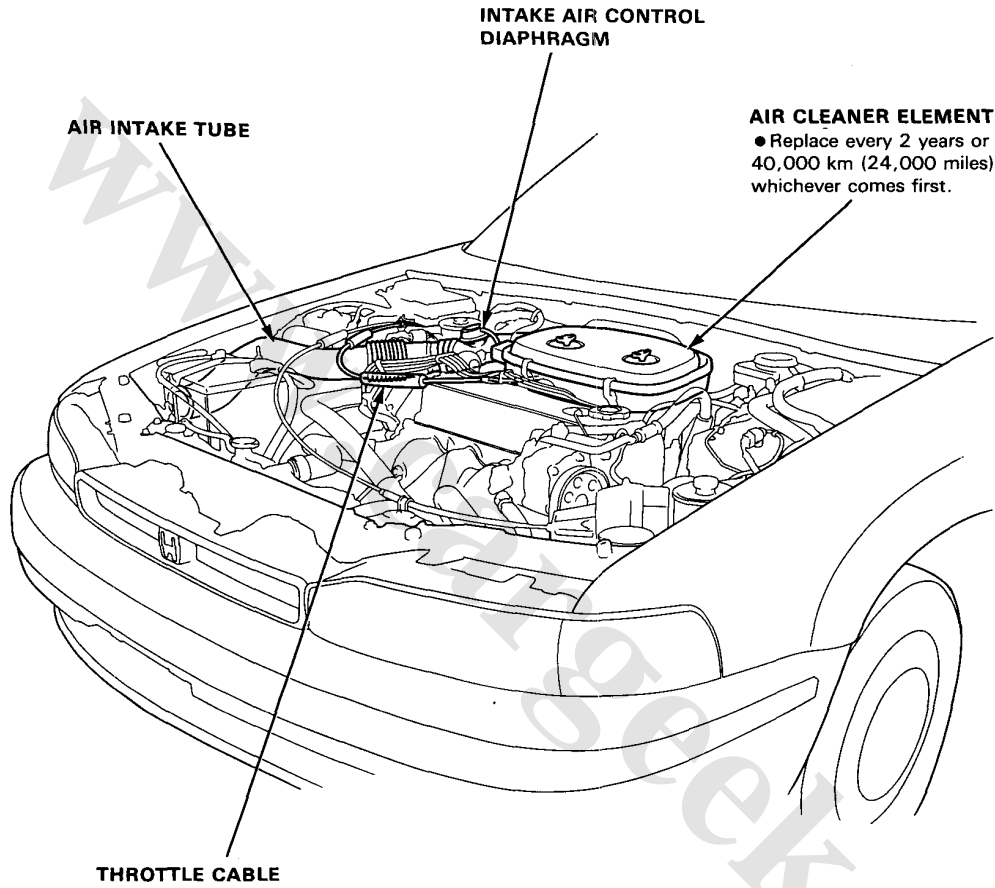


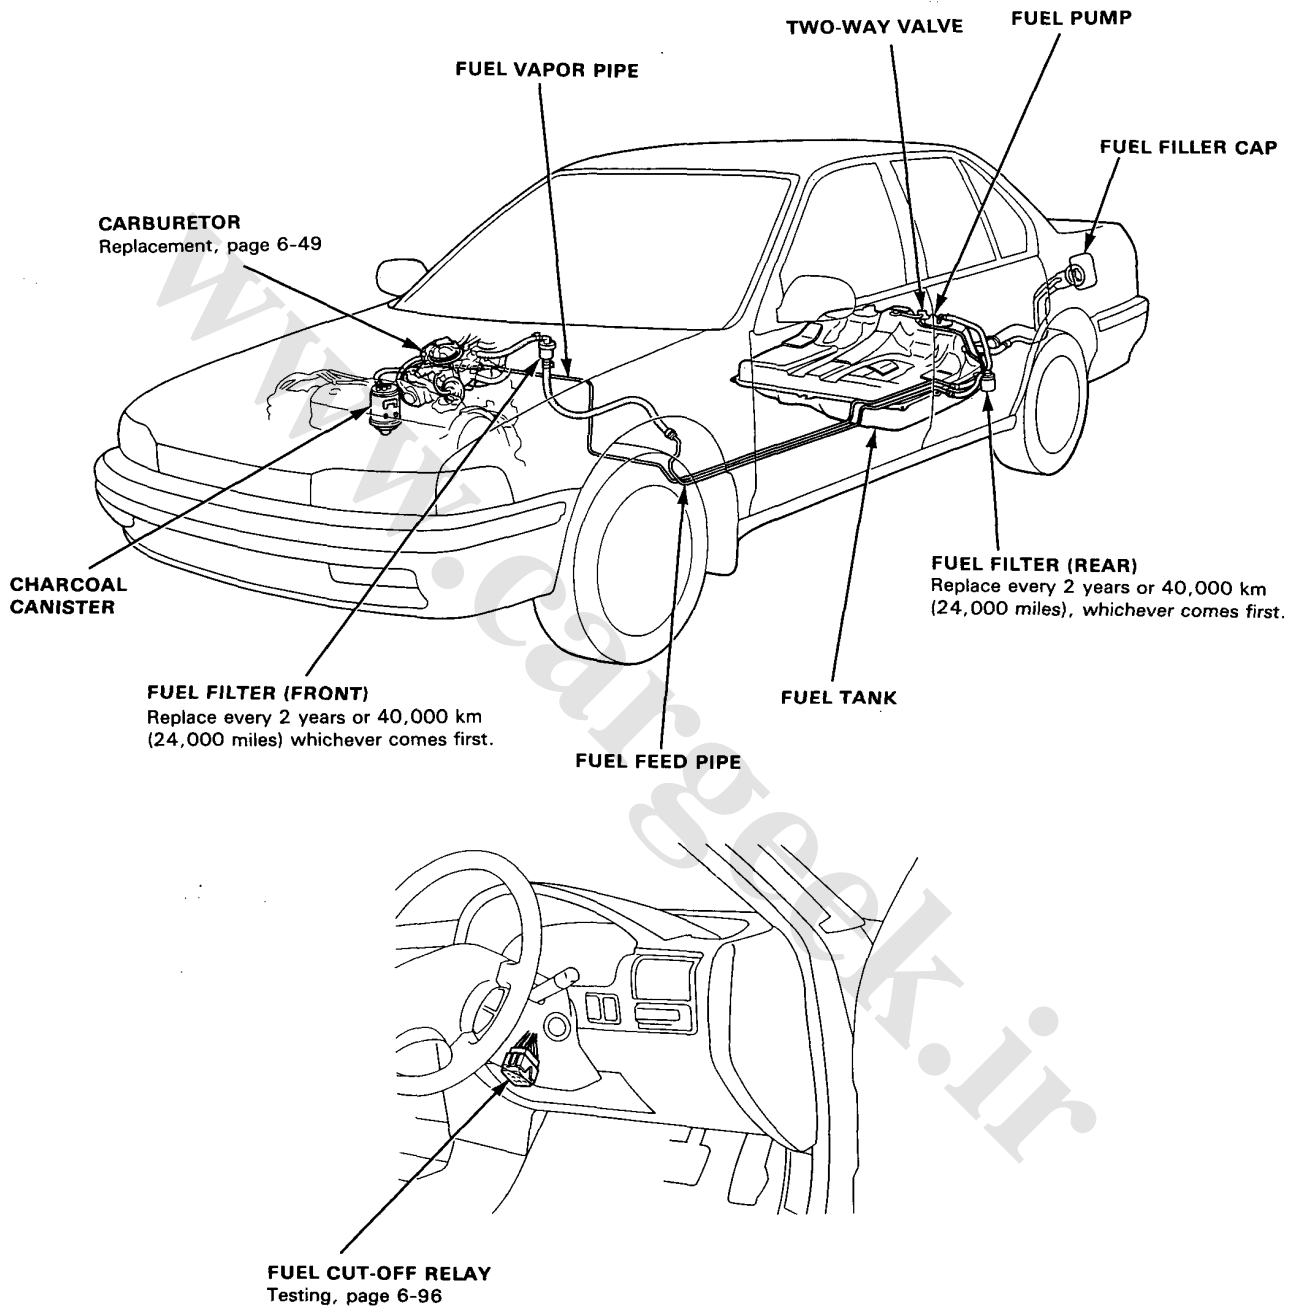

System Description


Vacuum Connections

(KX, KS, KG)

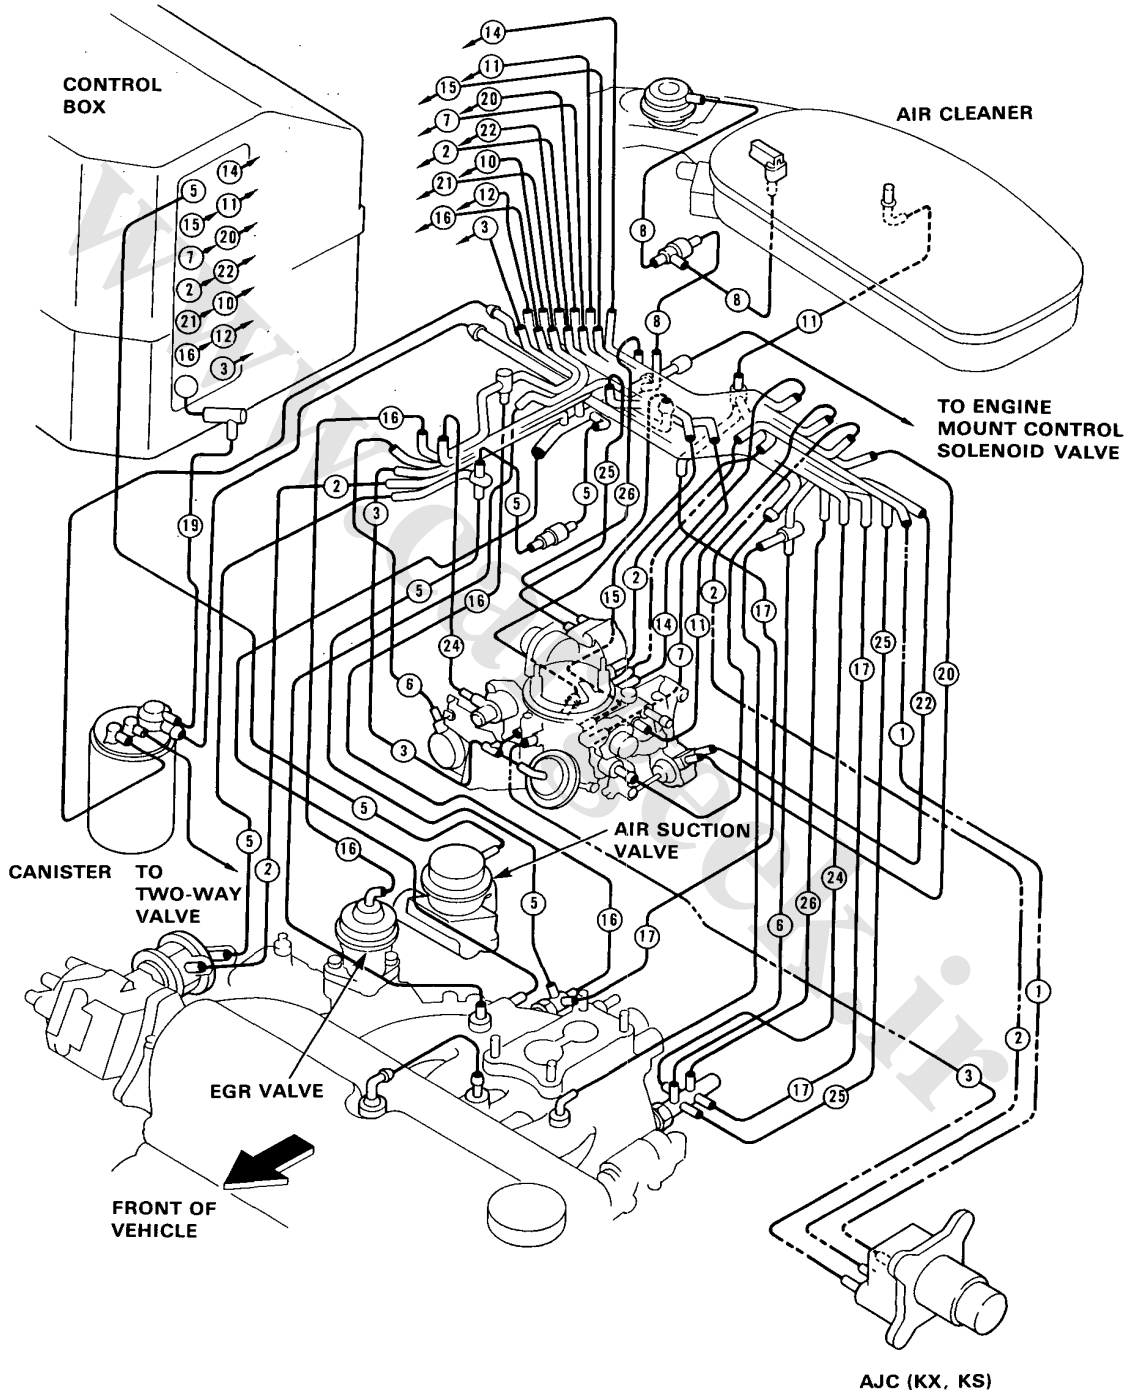



(KE with CATA)

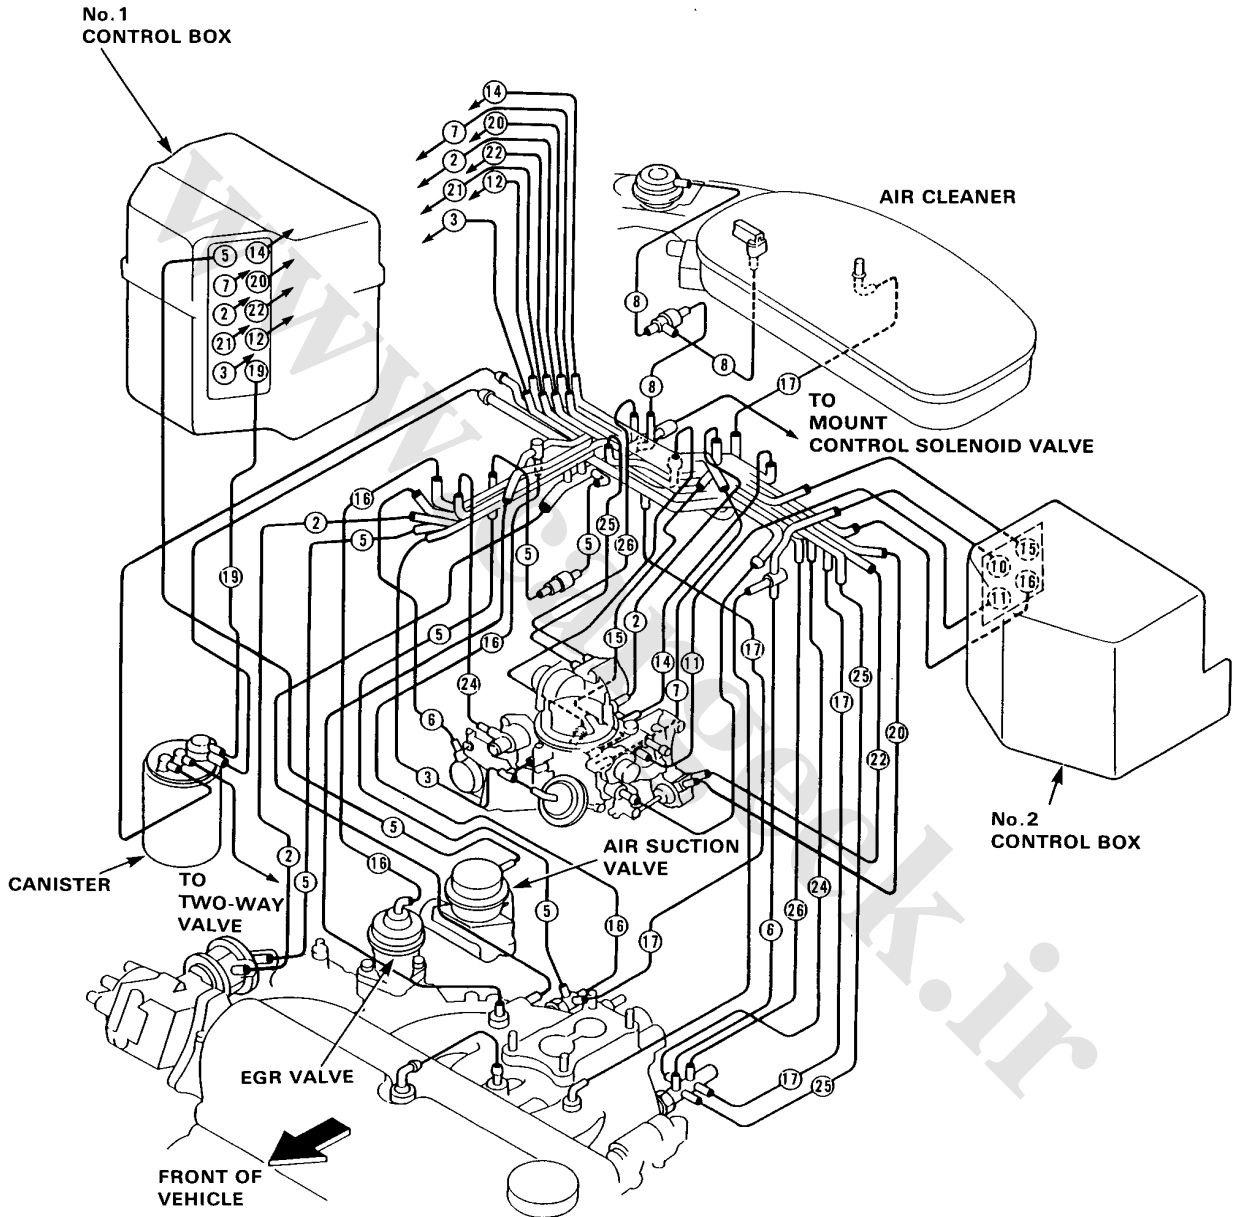


System Description


Vacuum Connections

(KE with CATA)

No.1 Control Box

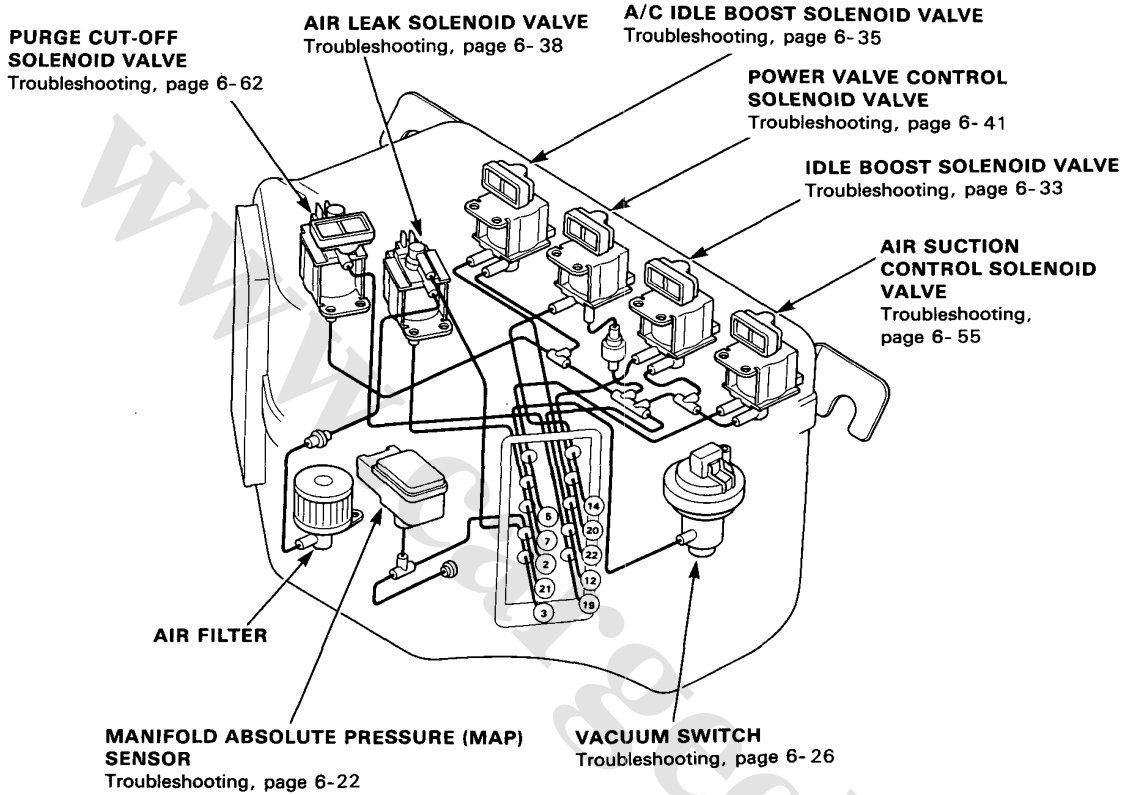


No.2 Control Box

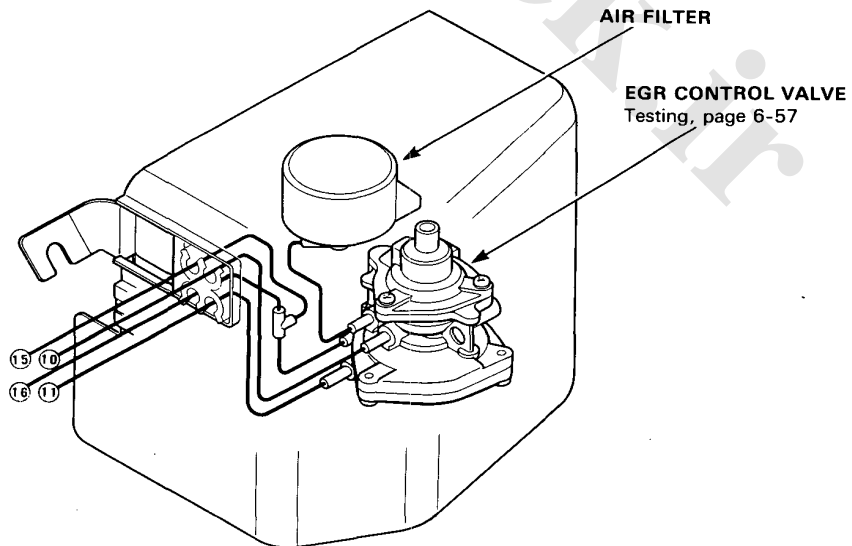




(KF, KB, KW, KE, KU)

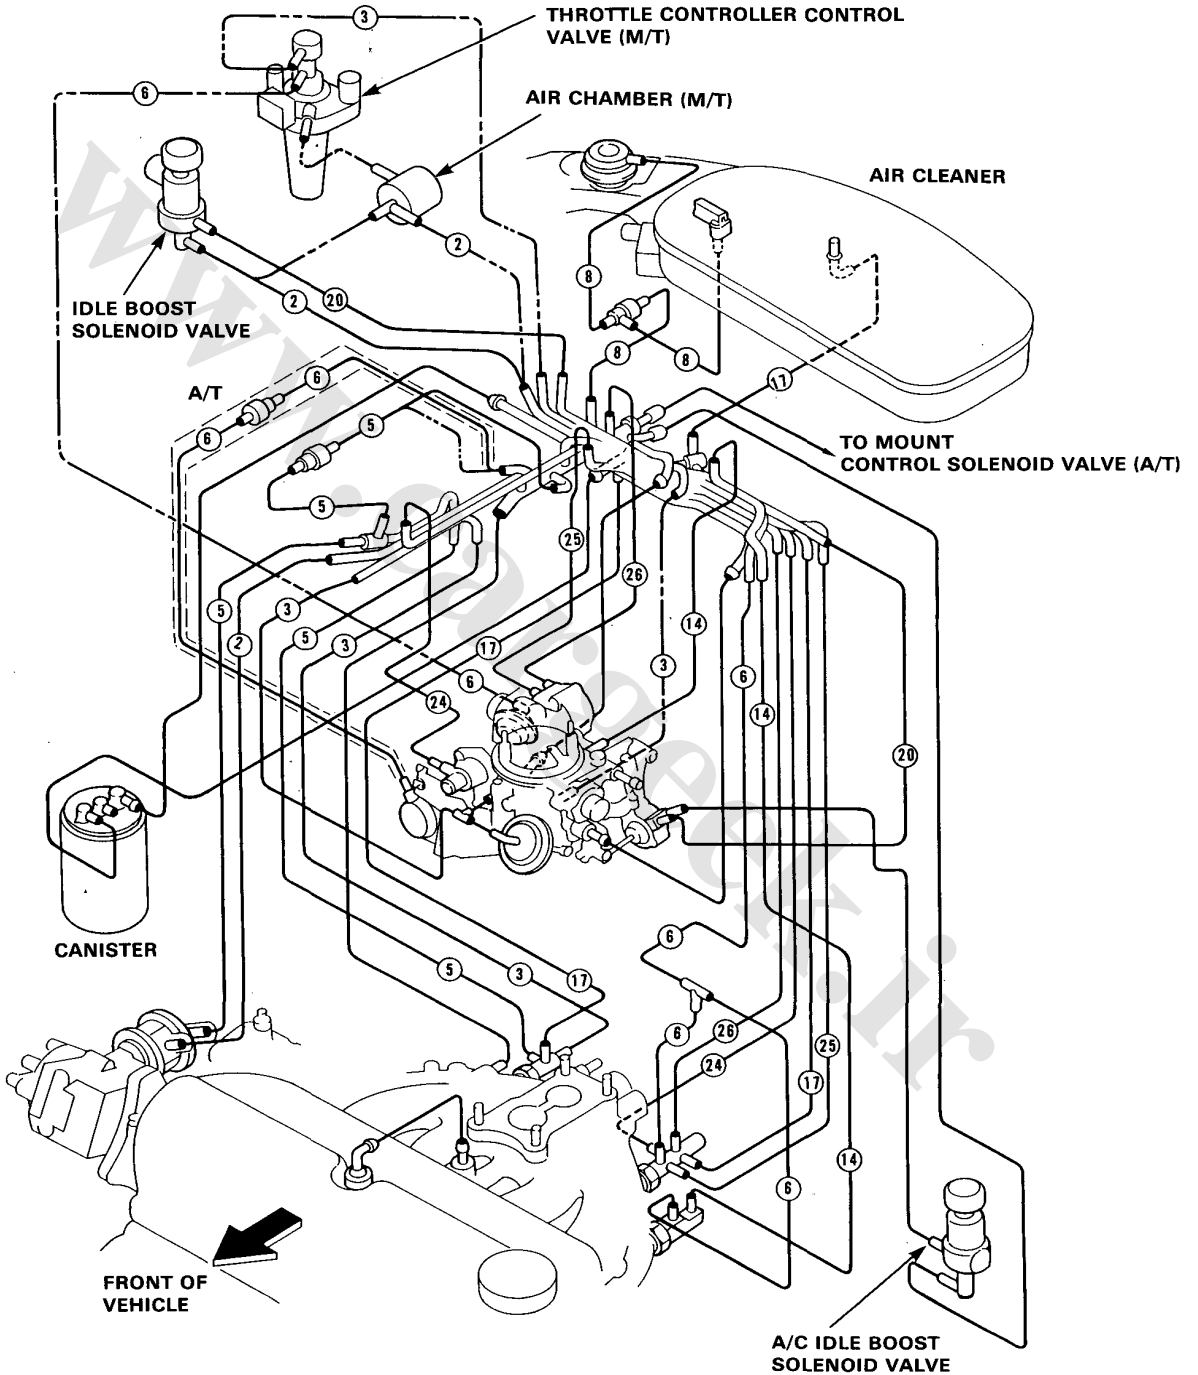

System Descriptions


Vacuum Connections

(KP, KT)

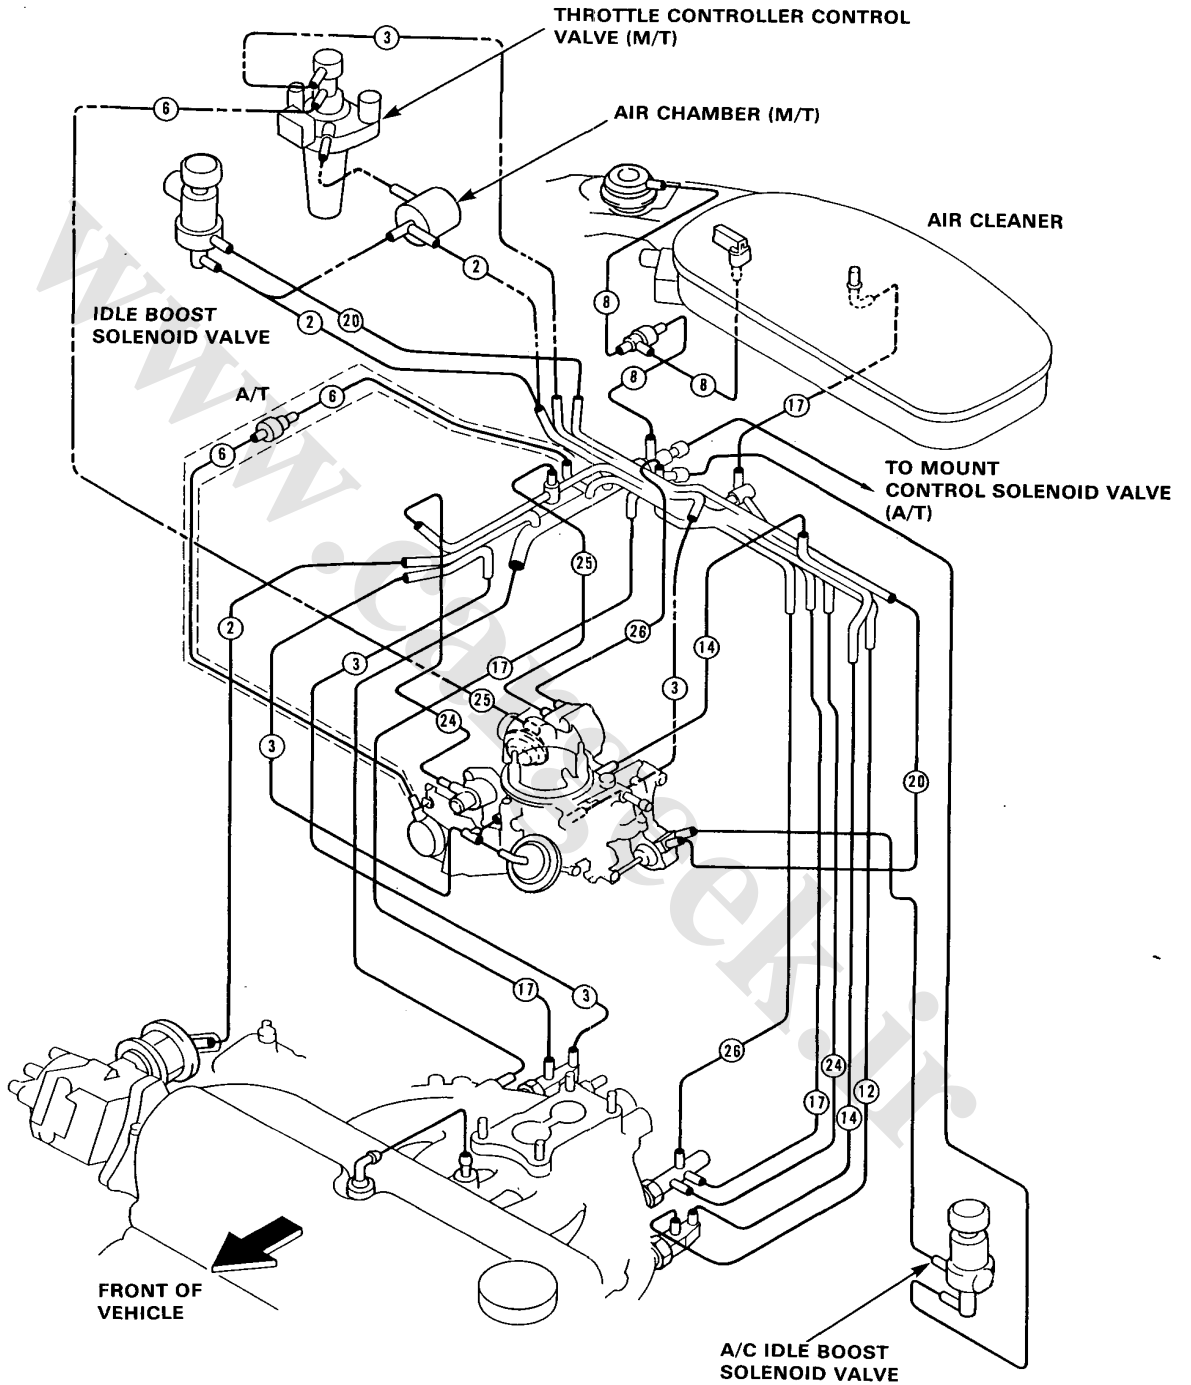




(KY)

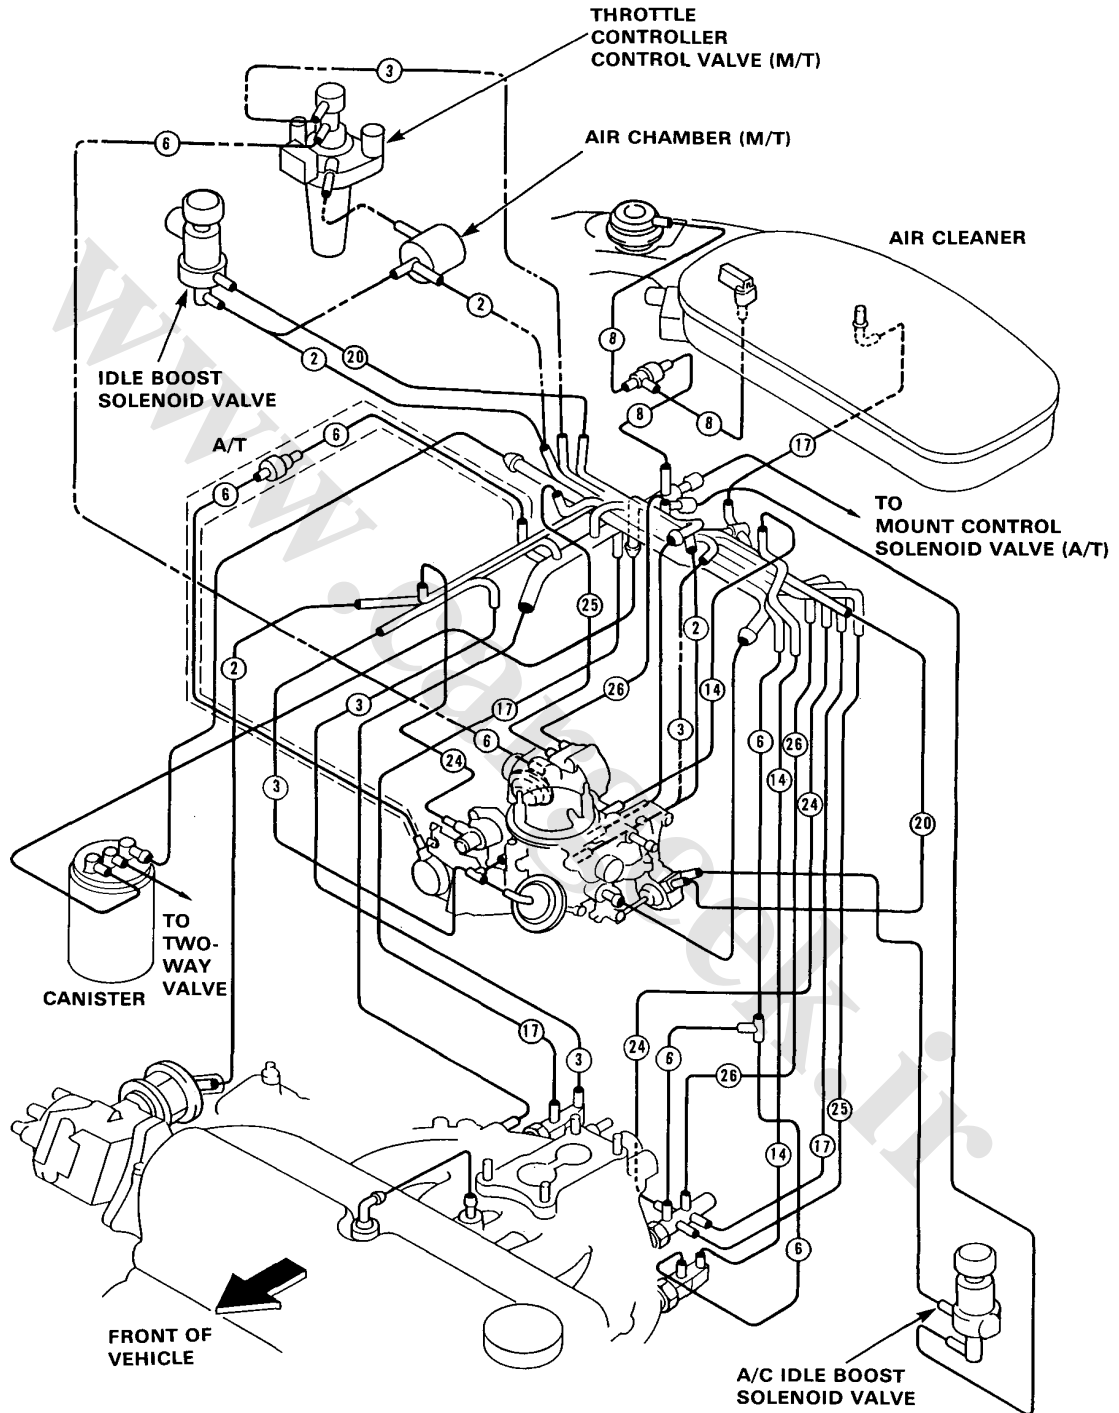

System Descriptions

Vacuum Connections

(KX, KS, KG, KE with CATA)

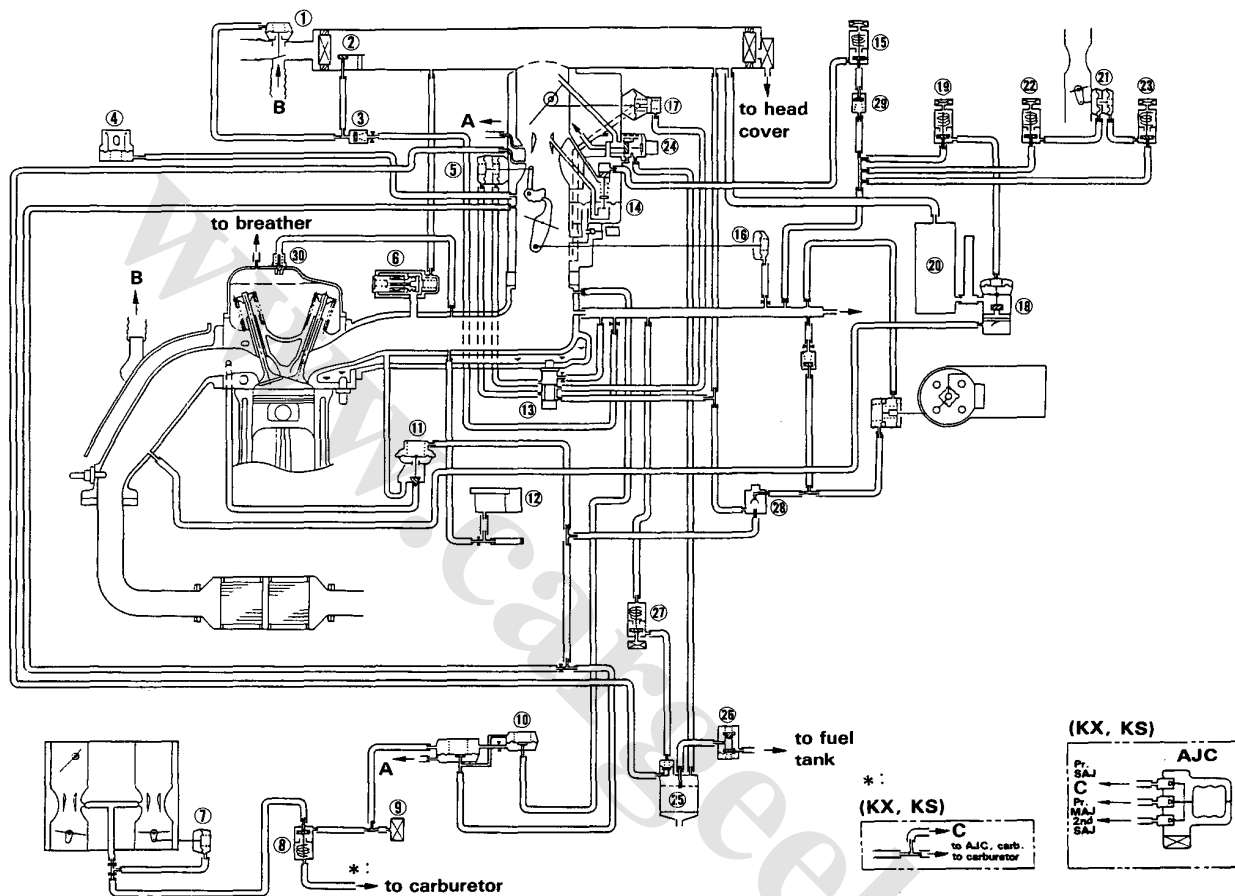


- ① AIR CONTROL DIAPHRAGM
- ② AIR BLEED VALVE
- ③ CHECK VALVE
- ④ VACUUM SWITCH
- ⑤ FAST IDLE UNLOADER
- ⑥ EACV
- ⑦ SECONDARY DIAPHRAGM
- ⑧ AIR LEAK SOLENOID VALVE
- ⑨ AIR FILTER
- ⑩ EGR CONTROL VALVE
- ⑪ EGR VALVE
- ⑫ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ⑬ THERMOVALVE A
- ⑭ POWER VALVE
- ⑮ POWER VALVE CONTROL SOLENOID VALVE

- ⑯ THROTTLE CONTROLLER
- ⑰ CHOKE OPENER
- ⑱ AIR SUCTION VALVE
- ⑲ AIR SUCTION CONTROL SOLENOID VALVE
- ⑳ AIR CHAMBER
- ㉑ IDLE BOOST THROTTLE CONTROLLER
- ㉒ IDLE BOOST SOLENOID VALVE
- ㉓ A/C IDLE BOOST SOLENOID VALVE
- ㉔ AIR VENT CUT-OFF SOLENOID VALVE
- ㉕ CANISTER
- ㉖ TWO-WAY VALVE
- ㉗ PURGE CUT-OFF SOLENOID VALVE
- ㉘ THERMOVALVE B
- ㉙ CHECK VALVE
- ㉚ PCV VALVE



(KF, KB, KW, KE, KU)

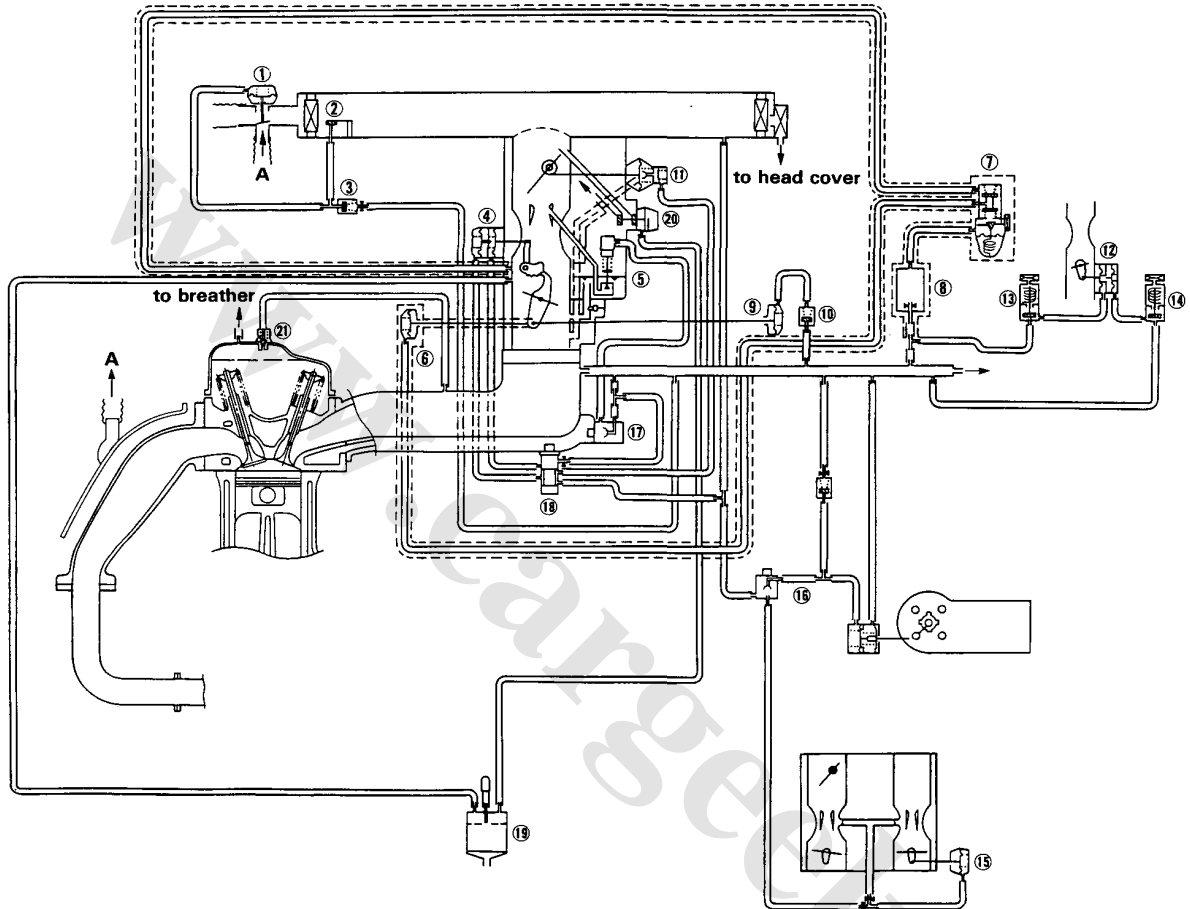


- ①AIR CONTROL DIAPHRAGM
- ②AIR BLEED VALVE
- ③CHECK VALVE
- ④FAST IDLE UNLOADER
- ⑤POWER VALVE
- ⑥THROTTLE CONTROLLER (M/T)
- ⑦THROTTLE CONTROLLER CONTROL VALVE (M/T)
- ⑧AIR CHAMBER (M/T)
- ⑨THROTTLE CONTROLLER (A/T)
- ⑩CHECK VALVE (A/T)

- ⑪CHOKE OPENER
- ⑫IDLE BOOST THROTTLE CONTROLLER
- ⑬IDLE BOOST SOLENOID VALVE
- ⑭A/C IDLE BOOST SOLENOID VALVE
- ⑮SECONDARY DIAPHRAGM
- ⑯THERMOVALVE D
- ⑰THERMOVALVE C
- ⑱THERMOVALVE A
- ⑲CANISTER
- ⑳AIR VENT CUT-OFF SOLENOID VALVE
- ㉑PCV VALVE

System Descriptions

Vacuum Connections

(KP, KT)

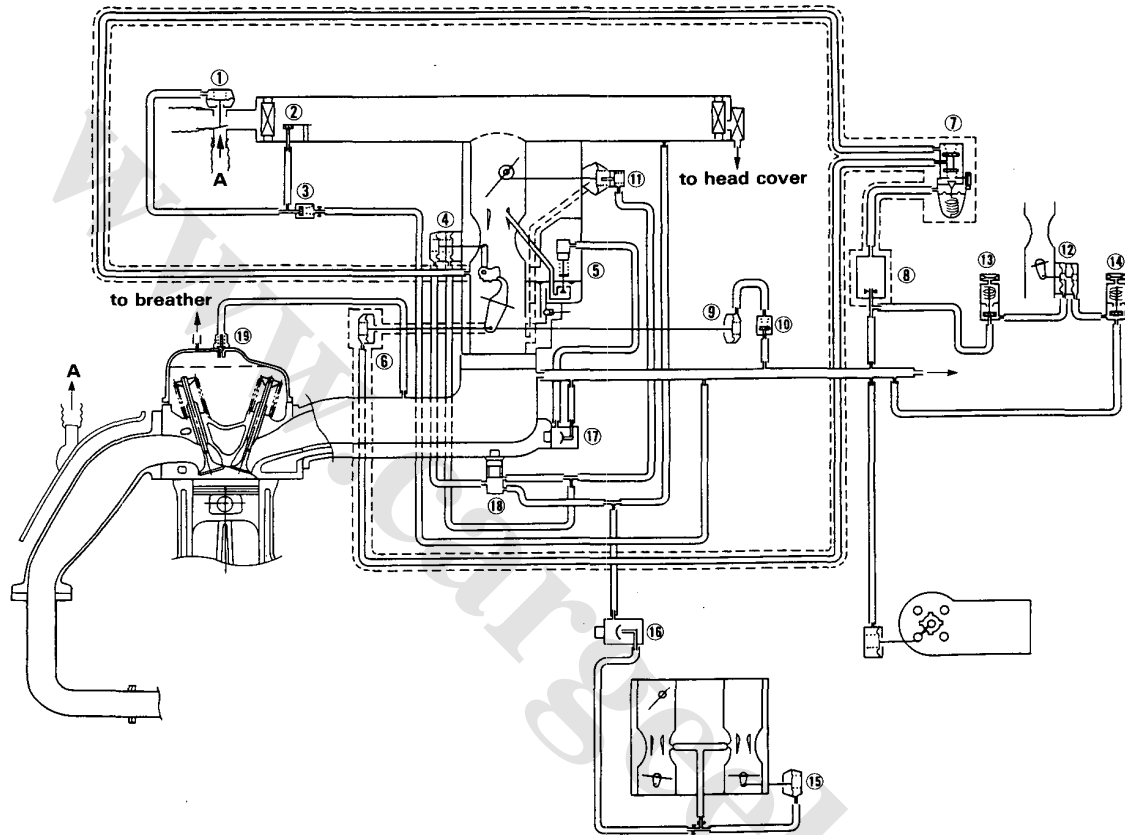


- ① AIR CONTROL DIAPHRAGM
- ② AIR BLEED VALVE
- ③ CHECK VALVE
- ④ FAST IDLE UNLOADER
- ⑤ POWER VALVE
- ⑥ THROTTLE CONTROLLER (M/T)
- ⑦ THROTTLE CONTROLLER CONTROL VALVE (M/T)
- ⑧ AIR CHAMBER (M/T)
- ⑨ THROTTLE CONTROLLER (A/T)
- ⑩ CHECK VALVE (A/T)

- ⑪ CHOKE OPENER
- ⑫ IDLE BOOST THROTTLE CONTROLLER
- ⑬ IDLE BOOST SOLENOID VALVE
- ⑭ A/C IDLE BOOST SOLENOID VALVE
- ⑮ SECONDARY DIAPHRAGM
- ⑯ THERMOVALVE D
- ⑰ THERMOVALVE C
- ⑱ THERMOVALVE A
- ⑳ PCV VALVE



(KY)

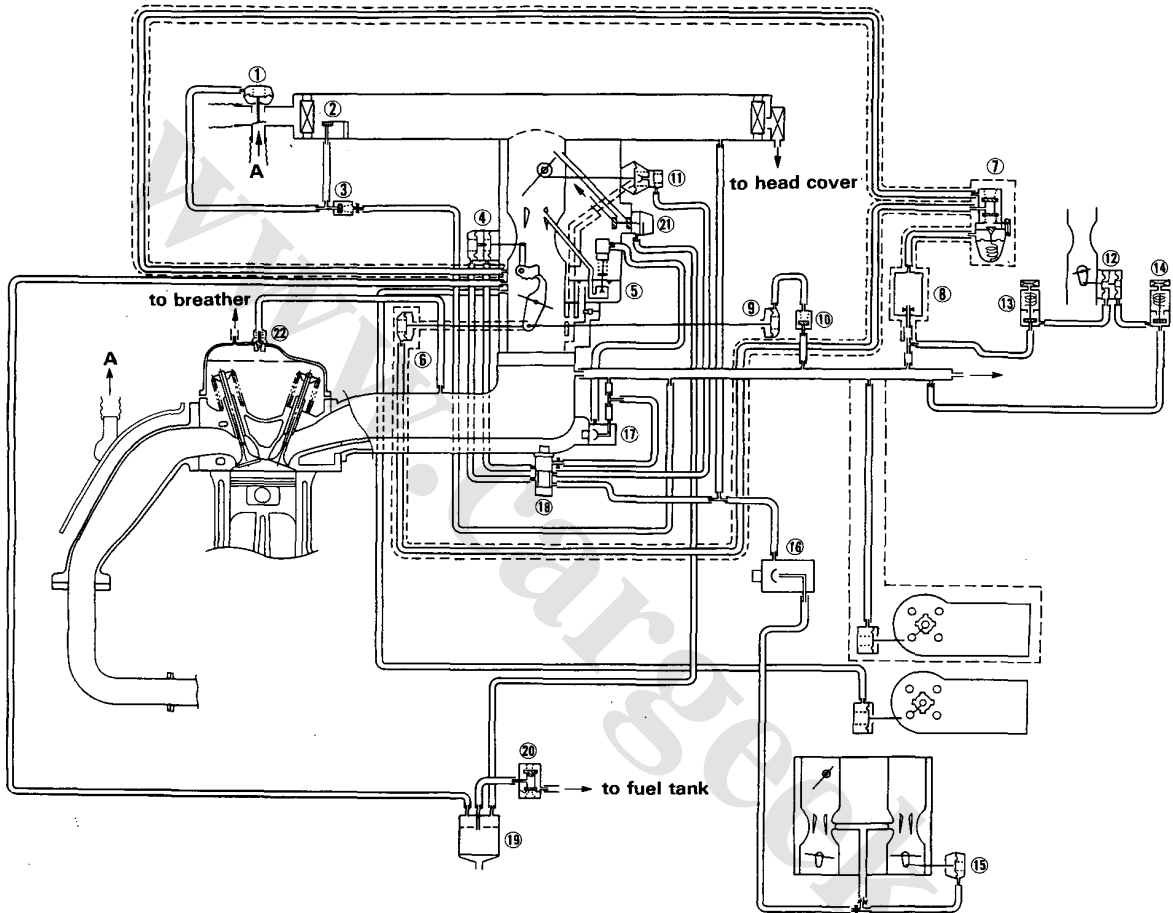


- | | |
|--|----------------------------------|
| ①AIR CONTROL DIAPHRAGM | ⑫IDLE BOOST THROTTLE CONTROLLER |
| ②AIR BLEED VALVE | ⑬IDLE BOOST SOLENOID VALVE |
| ③CHECK VALVE | ⑭A/C IDLE BOOST SOLENOID VALVE |
| ④FAST IDLE UNLOADER | ⑮SECONDARY DIAPHRAGM |
| ⑤POWER VALVE | ⑯THERMOVALVE D |
| ⑥THROTTLE CONTROLLER (M/T) | ⑰THERMOVALVE C |
| ⑦THROTTLE CONTROLLER CONTROL VALVE (M/T) | ⑱THERMOVALVE A |
| ⑧AIR CHAMBER (M/T) | ⑲CANISTER |
| ⑨THROTTLE CONTROLLER (A/T) | ⑳TWO-WAY VALVE |
| ⑩CHECK VALVE (A/T) | ㉑AIR VENT CUT-OFF SOLENOID VALVE |
| ⑪CHOKE OPENER | ㉒PCV VALVE |


System Descriptions

Electrical Connections

(KE with CATA)

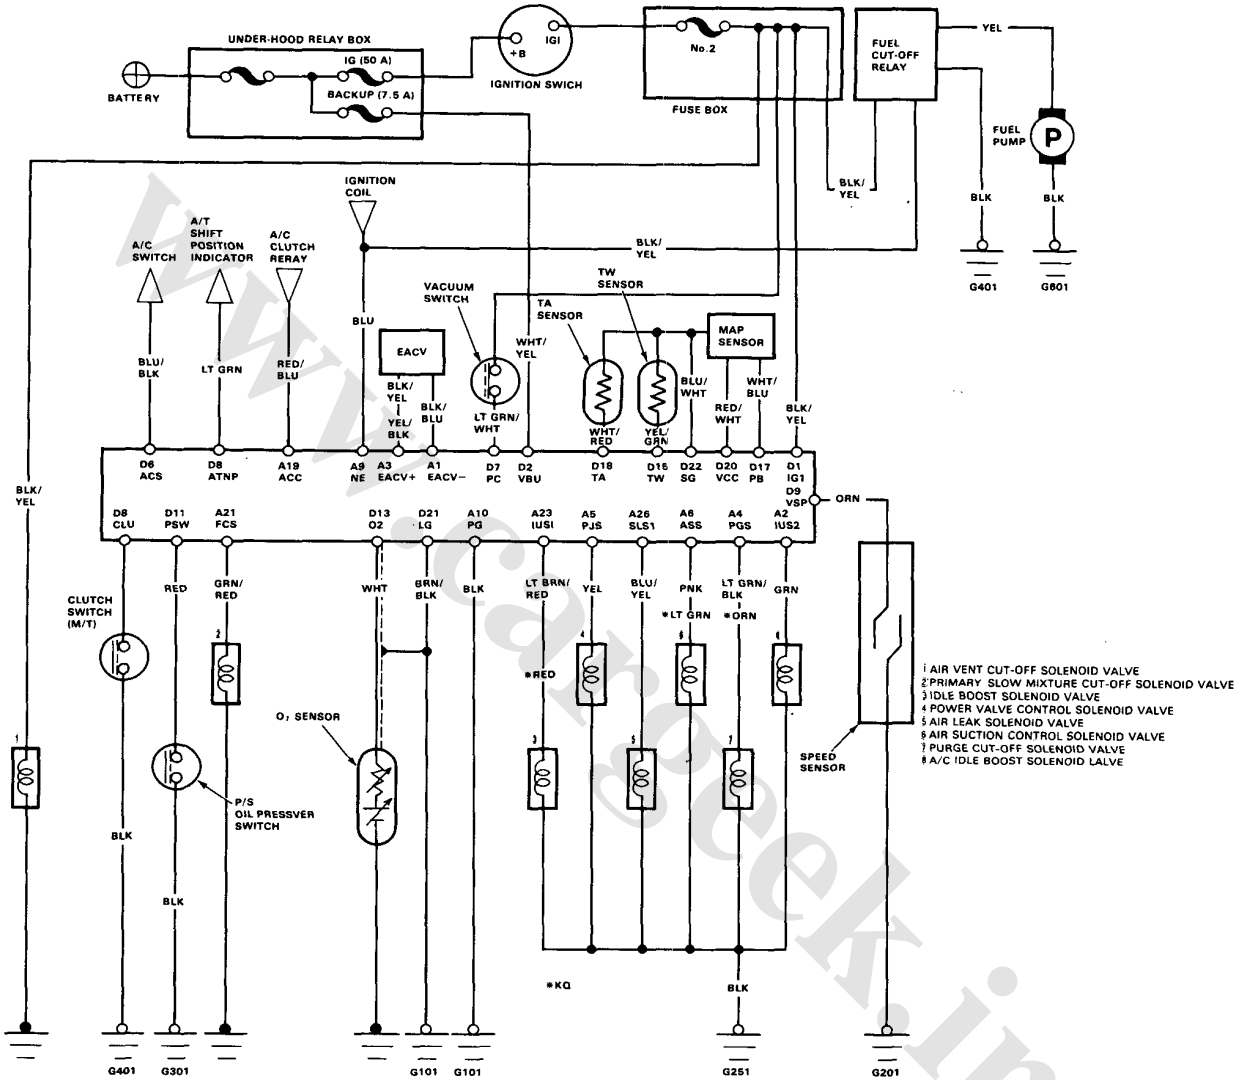

- 1 AIR VENT CUT-OFF SOLENOID VALVE
- 2 PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE
- 3 IDLE BOOST SOLENOID VALVE
- 4 POWER VALVE CONTROL SOLENOID VALVE
- 5 AIR LEAK SOLENOID VALVE
- 6 AIR SUCTION CONTROL SOLENOID VALVE
- 7 PURGE CUT-OFF SOLENOID VALVE
- 8 A/C IDLE BOOST SOLENOID VALVE

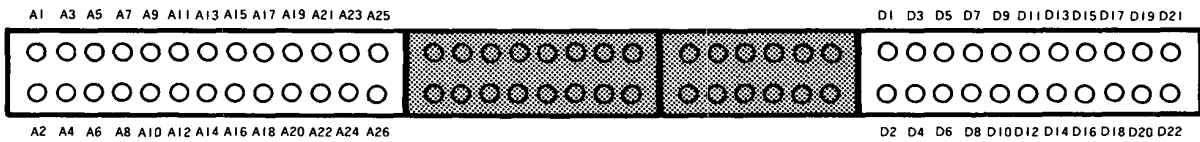


TERMINAL LOCATION


System Descriptions

Electrical Connections

(KE with CATA)

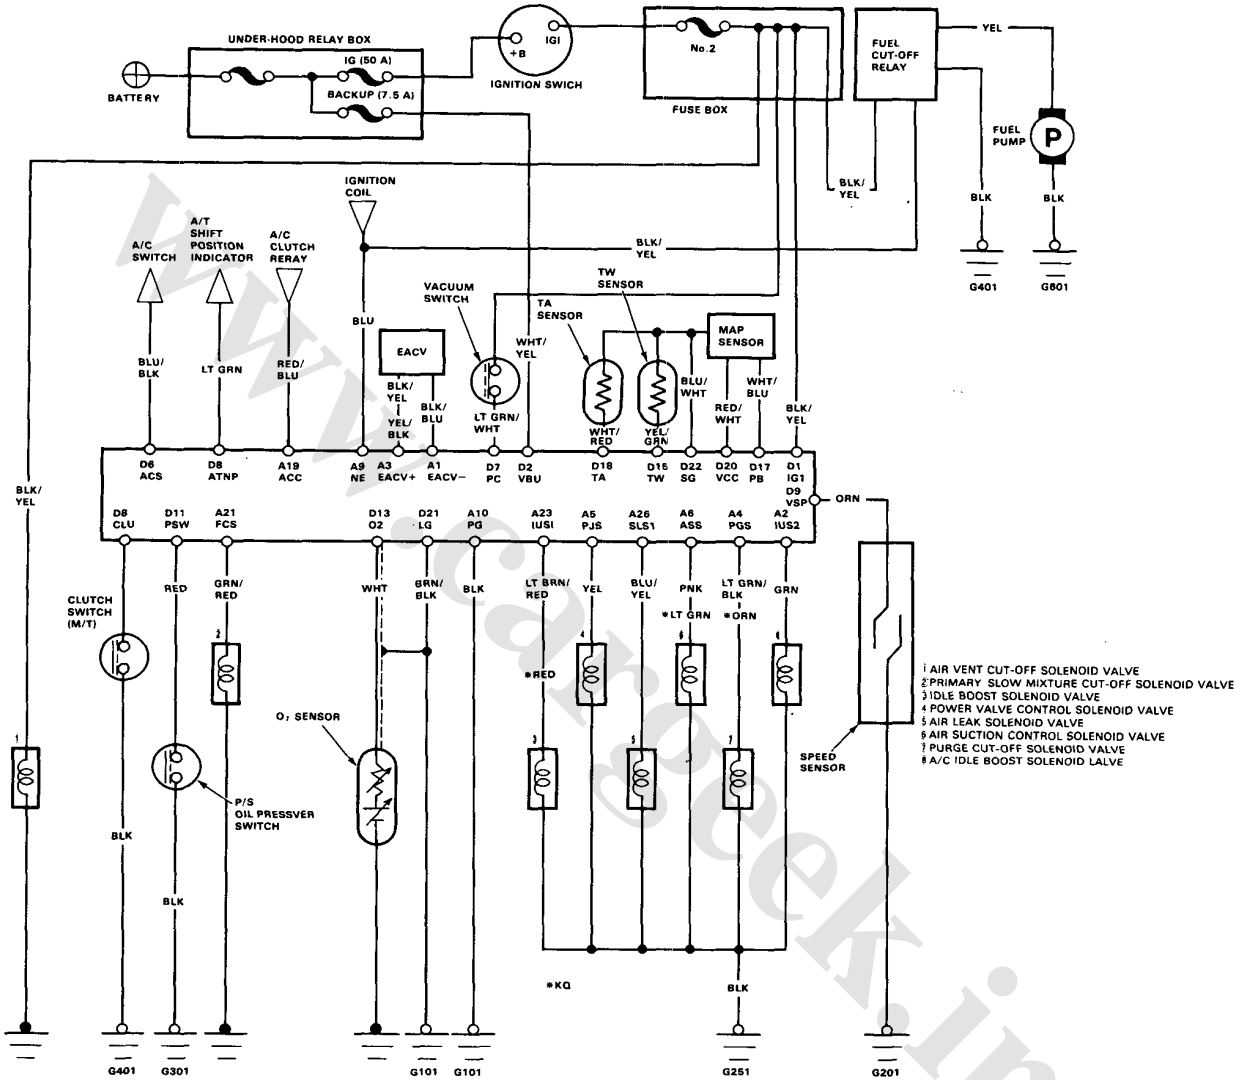

- 1 AIR VENT CUT-OFF SOLENOID VALVE
- 2 PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE
- 3 IDLE BOOST SOLENOID VALVE
- 4 POWER VALVE CONTROL SOLENOID VALVE
- 5 AIR LEAK SOLENOID VALVE
- 6 AIR SUCTION CONTROL SOLENOID VALVE
- 7 PURGE CUT-OFF SOLENOID VALVE
- 8 A/C IDLE BOOST SOLENOID VALVE

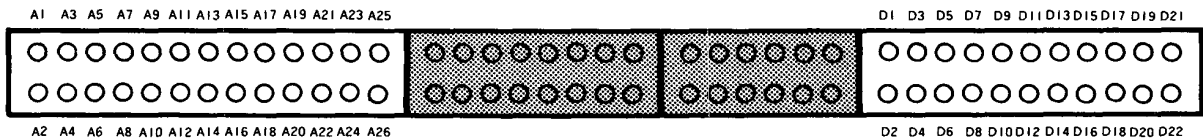

TERMINAL LOCATION




Troubleshooting

Self-Diagnostic Procedure

Turn the ignition on, pull down the passenger's side carpet from under the dashboard and observe the LED on the top of the control unit. The LED indicates a system failure code by its blinking frequency.

The control unit LED can indicate any number of simultaneous component problems by blinking separate codes, one after another.

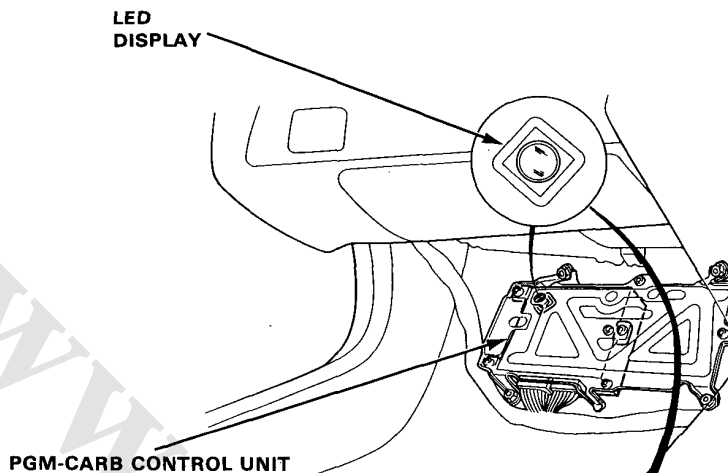


Separate Problems:



- = See Problem CODE 1
- = See Problem CODE 2
- = See Problem CODE 3

Simultaneous Problems:



- = See Problem CODE 1 and 2
- = See Problem CODE 2 and 4
- = See Problem CODE 1, 2 and 3

SELF-DIAGNOSIS INDICATOR BLINKS	SYSTEM INDICATED	PAGE
1	OXYGEN CONTENT	---
2	VEHICLE SPEED PULSER	---
3	MANIFOLD ABSOLUTE PRESSURE	6-22
4	VACUUM SWITCH SIGNAL	6-26
5	MANIFOLD ABSOLUTE PRESSURE	6-24
6	COOLANT TEMPERATURE	---
8	IGNITION COIL SIGNAL	---
10	INTAKE AIR TEMPERATURE	---
14	ELECTRONIC AIR CONTROL	---

If CODE 7, 9, 11, 12, 13 (or more than 14), count the number of blinks again; if the indicator is in fact blinking these codes, substitute a known-good control unit and recheck. If the indication goes away, replace the original control unit. The control unit LED may come on, indicating a system problem, when, in fact, there is a poor or intermittent electrical connection. First, check the electrical connections, clean or repair connections if necessary.

(cont'd)



How to Read Flow Charts

A flow chart is designed to be used from start to final repair. It's like a map showing you the shortest distance. But beware; if you go off the "map" anywhere but a "stop" symbol, you can easily get lost.

START

(bold type)

Describes the conditions or situation to start a troubleshooting flow chart.

ACTION

Asks you to do something; perform a test, set up a condition, etc.

DECISION

Asks you about the result of an action by giving an "answer" and asking did you get the same answer: Yes or No.

STOP

(bold type)

The end of a series of actions and decisions, describes a final repair action and sometimes directs you to an earlier part of the flow to confirm your repair.

NOTE:

- The term "Intermittent Failure" is used several times in these charts. It simply means a system may have had a failure, but it checks out OK through all your tests. You may need to road test the car to reproduce the failure or if the problem was a loose connection, you may have unknowingly solved it while doing the tests.
- "Open" and "Short" are common electrical terms. An open is a break in a wire or at a connection. A short is an accidental connection of a wire to ground. In simple electronics, this usually means something won't work at all. In complex electronics (like electronic control units), this can sometimes mean something works, but not the way it's supposed to.
- If the electrical readings are not as specified when using the ECU test harness, check the test harness connections before proceeding.

Symptom-to System Chart

(KE with CATA)

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-CARB CONTROL SYSTEM						
		PGM-CARB CONTROL UNIT	OXYGEN SENSOR	VEHICLE SPEED PULSER	MANIFOLD ABSOLUTE PRESSURE SENSOR	VACUUM SWITCH	COOLANT TEMPERATURE SENSOR	IGNITION COIL SIGNAL
	SYMPTOM	—	—	—	22, 24	26	—	—
	SELF-DIAGNOSIS INDICATOR (LED) BLINKS	① or *	①	②	③ or ⑤	④	⑥	⑧
	ENGINE WON'T START							
	DIFFICULT TO START ENGINE WHEN COLD	(BU)						
	WHEN COLD FAST IDLE OUT OF SPECIFIC	(BU)						
	ROUGH IDLE	(BU)	③		②			
	WHEN WARM ENGINE SPEED TOO HIGH	(BU)						
	WHEN WARM ENGINE SPEED TOO LOW	(BU)						
	WHILE WARMING UP	(BU)			②		③	
	AFTER WARMING UP	(BU)			②			
	MISFIRE OR ROUGH RUNNING	(BU)	③	③	②			
	FAILS EMISSION TEST	(BU)	②		①			
	LOSS OF POWER	(BU)			③			

* CODE 7, 9, 11, 12, 13, or exceeds 14: count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good control unit and recheck. If the indication goes away, replace the original ECU.

(BU): When the self-diagnosis indicator is on, the back-up system is in operation.

Substitute a known-good control unit and recheck. If the indication goes away, replace the original ECU.



PGM-CARB CONTROL SYSTEM					EMISSION CONTROL				
INTAKE AIR TEMPERATURE SENSOR	A/T SHIFT POSITION SIGNAL	CLUTCH SWITCH SIGNAL	P/S OIL PRESSURE SWITCH	A/C SIGNAL	CARBURETOR	FUEL SUPPLY	AIR INTAKE	ELECTRONIC AIR CONTROL VALVE	OTHER EMISSION CONTROL
---	---	---	---	---	30	50	51	---	52
⑩								⑭	
					②	①			
					①				
③					①				③
③					①			③	③
			③	③	①				
					①				
					①			③	
					①			①	
					①	②			
					②		③	③	③
					③	②	①		②

PGM-CARB Control System

Troubleshooting Flow Chart — MAP Sensor

③ Self-diagnosis LED indicator blinks three times: Most likely an electrical problem in the Manifold Absolute Pressure (MAP) Sensor system.

⑤ Self-diagnosis LED indicator blinks five times: Most likely a mechanical problem (broken hose) in the Manifold Absolute Pressure (MAP) Sensor system.

③

—Engine is warm and running.
—LED indicates CODE 3.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Start the engine and allow to idle.

Does LED indicate CODE 3 ?

NO

Intermittent failure (test drive may be necessary).

YES

Turn the ignition switch OFF.

Connect the test harness between the MAP sensor and wire harness.

Turn the ignition switch ON.

Measure voltage between RED (+) terminal and GRN (-) terminal.

Is there approx. 5 V ?

NO

Measure voltage between RED (+) terminal and body ground.

YES


Measure voltage between WHT (+) terminal and GRN (-) terminal.

(To page 6-23)

Is there approx. 5 V ?


YES

Repair open in BLU/WHT wire between control unit (D22) and MAP sensor.

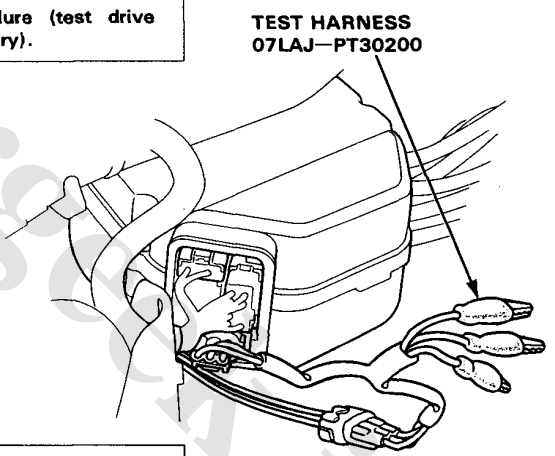

Turn the ignition switch OFF.

(To page 6-23)

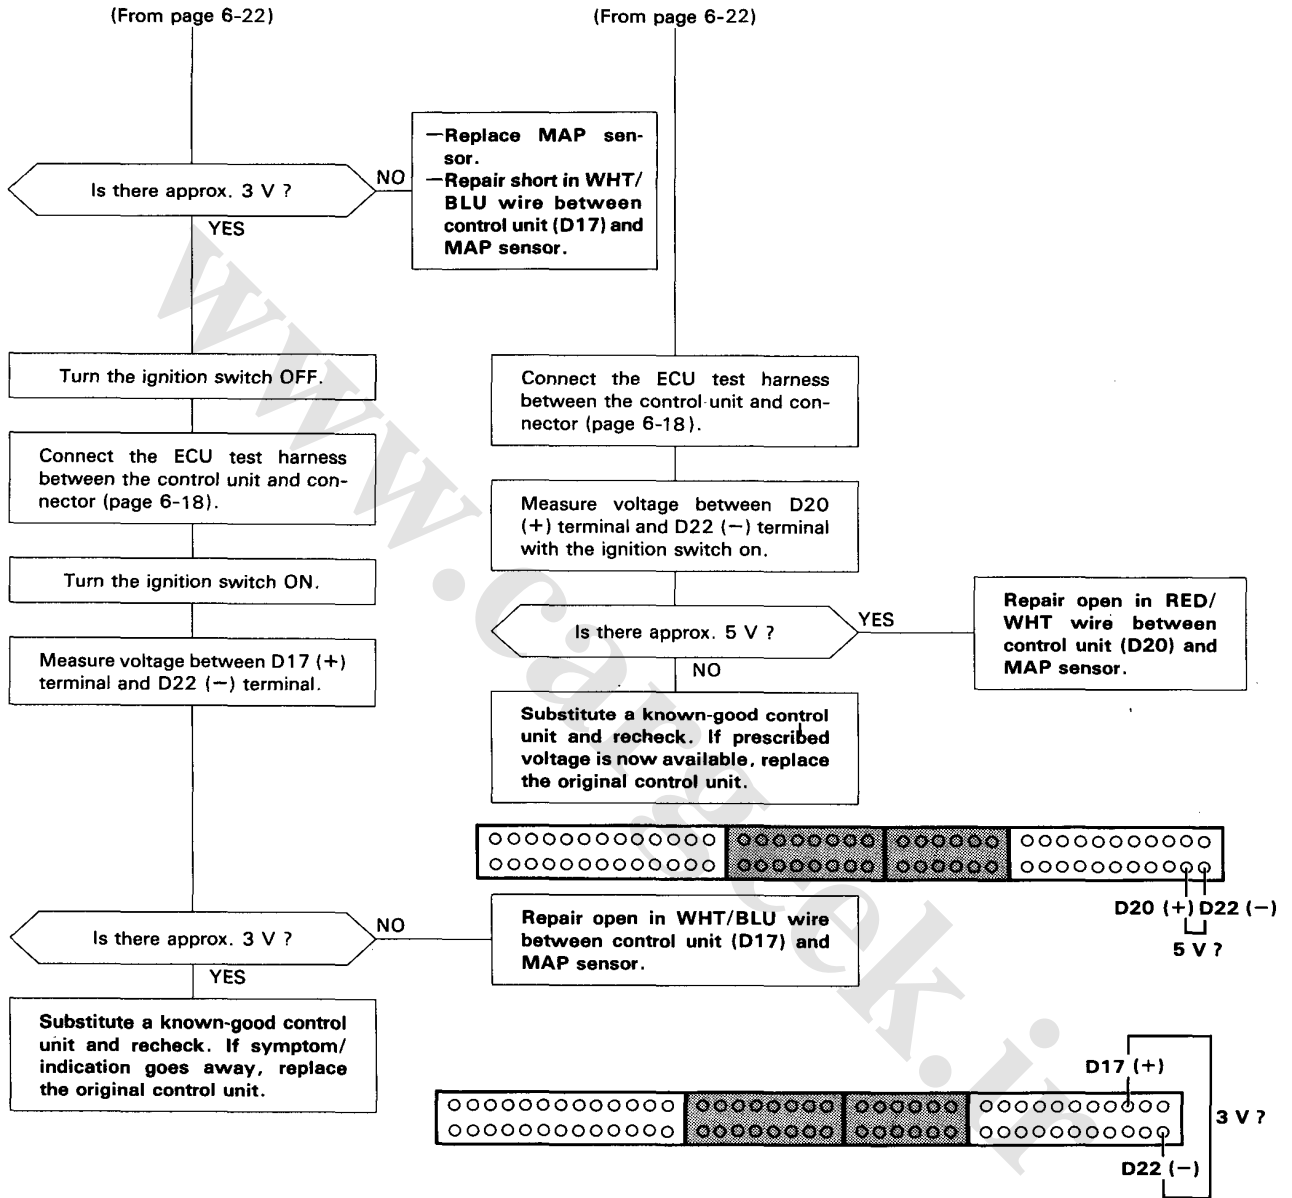

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — MAP Sensor (cont'd)

5

LED indicates CODE 5.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Start engine and keep engine speed at idle.

Does LED indicate CODE 5 ?


NO

Intermittent failure (test drive may be necessary).

YES

Stop engine.

Remove #21 hose from the vacuum hose manifold and connect a T-fitting from a vacuum gauge between the vacuum hose manifold and the MAP sensor.

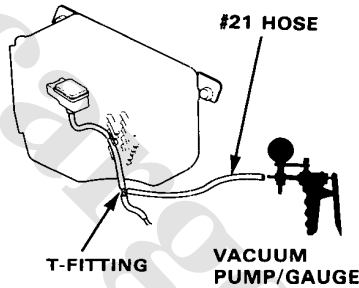

Start engine.


Is there vacuum ?

NO

Repair as necessary.

YES

Connect a vacuum pump to #21 hose and apply vacuum.

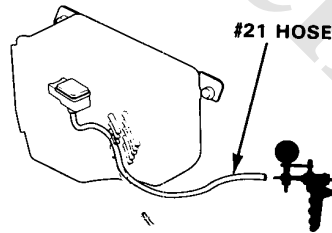

Does it hold vacuum ?

NO

Replace #21 hose.

YES

(To page 6-25)



(From page 6-24)

Stop engine.

Connect the test harness between the MAP sensor and wire harness.

Turn the ignition switch ON.

Measure voltage between WHT (+) terminal and GRN (-) terminal.

Is there approx. 3 V ?


NO

Replace MAP sensor.

YES

Substitute a known-good control unit and recheck. If symptom/indication goes away, replace the original control unit.

TEST HARNESS
07LAJ-PT30200

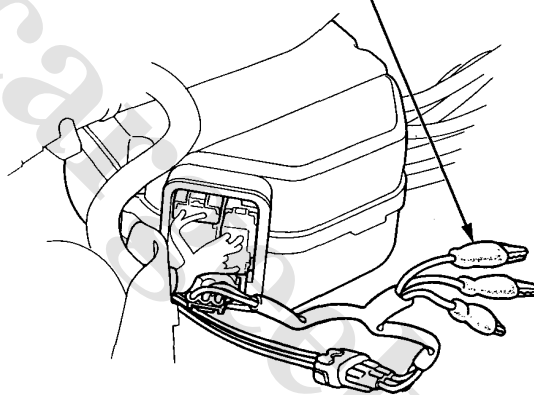

PGM-CARB Control System

Troubleshooting Flow Chart — Vacuum Switch

④ Self-diagnosis LED indicator blinks four times: A problem in the vacuum switch.

— Engine is warm running.
— LED indicates CODE 4.


Turn the ignition switch OFF.


Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset control unit.

Disconnect the 2P connector on the control box.

Measure resistance between No. 1 terminal and No.2 terminal on the control box.

(To page 6-27)

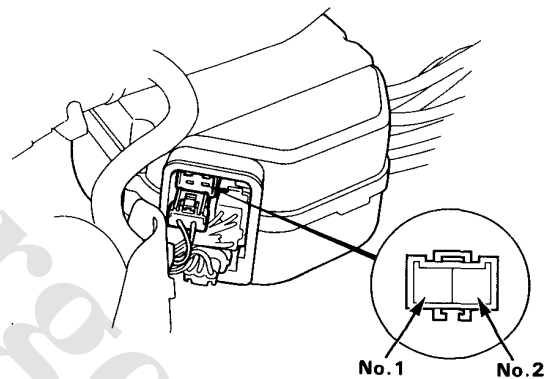

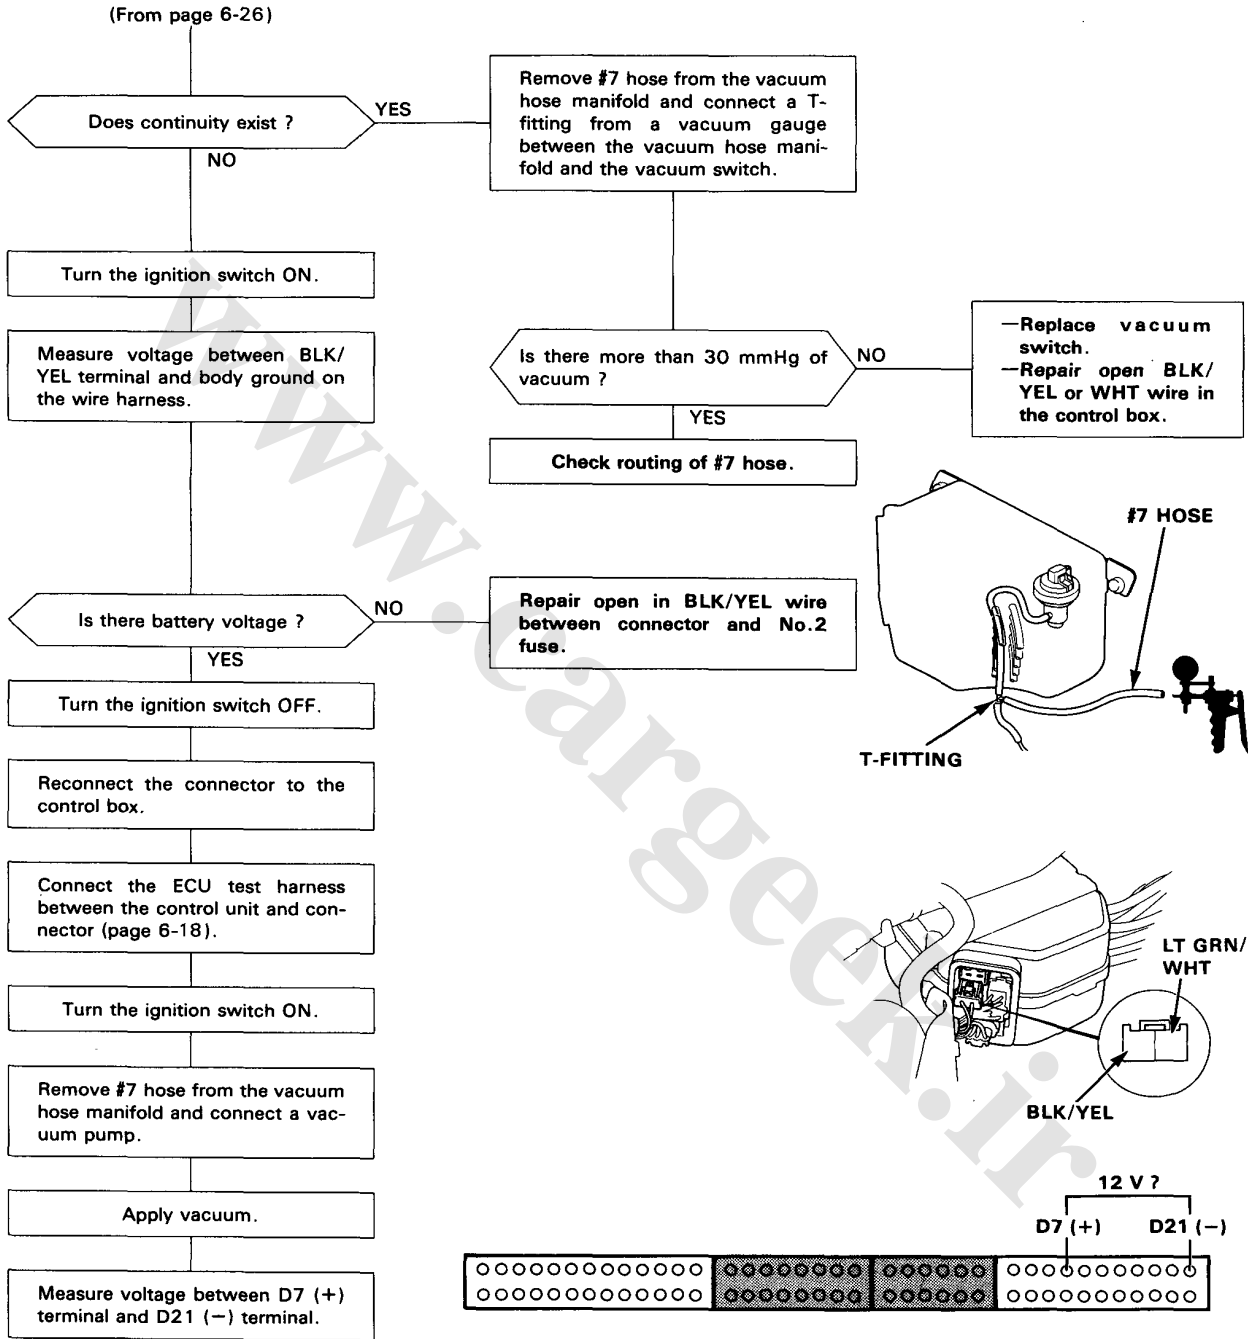


(To page 6-28)

(cont'd)

PGM-CARB Control System

Troubleshooting Flow Chart — Vacuum Switch (cont'd)

(From page 6-27)

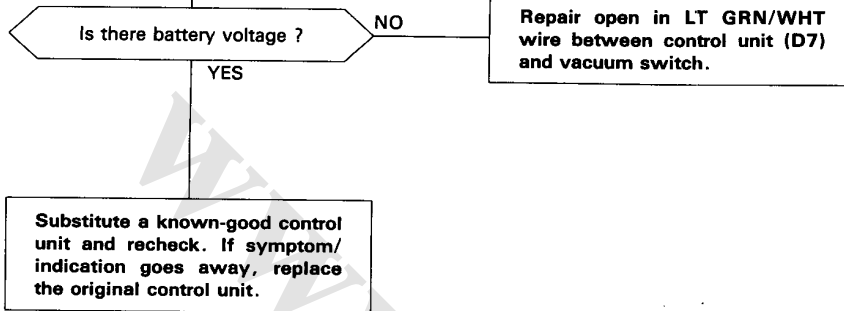

Carburetor

Symptom-to-Sub System Chart

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in pages 6-30 and 6-31.

PAGE	SYSTEM	IDLE SPEED/ MIXTURE	IDLE BOOST	AUTOMATIC CHOKE/ FAST IDLE SYSTEM	AIR VENT CUT-OFF SOLENOID VALVE FLOAT LEVEL
		46	32	—	—
ENGINE WON'T START					
DIFFICULT TO START ENGINE	WHEN COLD			①	②
	WHEN WARM				②
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFICATION		②	①	
	WHEN WARM ENGINE SPEED TOO HIGH	①	②	③	
	WHEN WARM ENGINE SPEED TOO LOW	①	①		
	ROUGH IDLE/ FLUCTUATION	①	③		②
FREQUENT STALLING	WHILE WARMING UP		②	①	
	AFTER WARMING UP	①	②		②
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING			①	①
	LOSS OFF POWER				②
	AFTERBURN	①			
	HESITATION/SURGE				



POWER VALVE	PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE	SLOW AIR JET CONTROL	VACUUM CONTROLLED SECONDARY	ACCELERATOR PUMP
40	—	38	—	—
	②	②		
	①			②
	①	②		
②	②			
		②		
		②		
		③	②	
②	①			
	①	①		
			②	
③			①	③
②				①

Carburetor

Idle Control System

Testing


1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Check the idle speed with headlights, heater blower, rear window defogger, cooling fan and air conditioner off.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

- If OK, go to step 4.
 - If not, go to step 3.
3. Disconnect the two vacuum hoses at idle boost throttle controller and check each for vacuum.

There should be no vacuum in both hoses.

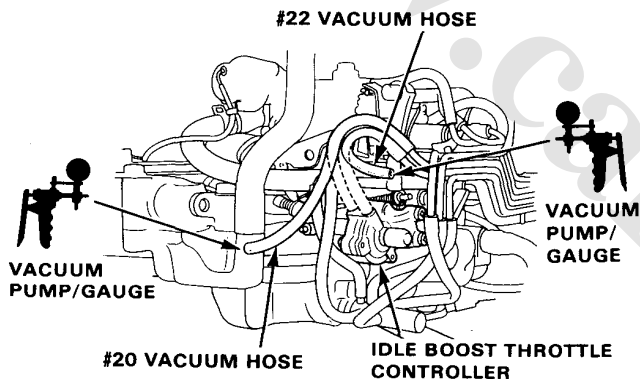

- If there is no vacuum, check the throttle valve shaft for binding or sticking and replace the idle boost throttle controller.
- If there is vacuum at the #20 vacuum hose, go to idle boost solenoid valve troubleshooting (page 6-33).
- If there is vacuum at the #22 vacuum hose, go to A/C idle boost solenoid valve troubleshooting (page 6-35).


4. Disconnect the connector on the P/S oil pressure switch, and check the idle speed.

Idle speed should be:

Manual	950 ± 50 min ⁻¹ (rpm)
Automatic	820 ± 50 min ⁻¹ (rpm) (in "D")

- If OK, go to step 6.
- If not, go to step 5.

5. Disconnect the #20 vacuum hose at idle boost throttle controller and check vacuum wheel is turning. There should be vacuum.

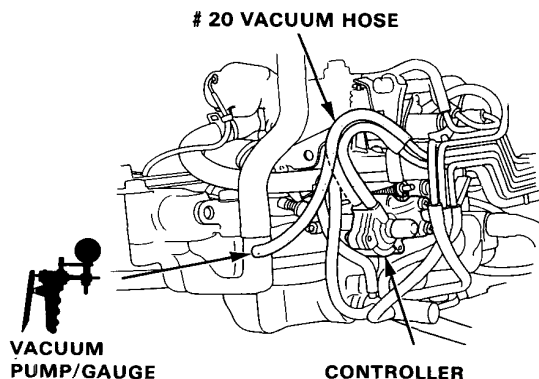

- If there is vacuum, check the throttle valve shaft for binding or sticking and replace the idle boost throttle controller.
- If there is no vacuum, check the #20 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the idle boost solenoid valve troubleshooting (page 6-33).

6. Check the idle speed with the A/C on.

Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

- If not, disconnect the two vacuum hoses at idle boost throttle controller and check each for vacuum.
 - If there is no vacuum at the #20 vacuum hose, check the #20 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the idle boost solenoid valve troubleshooting (page 6-33).
 - If there is no vacuum at the #22 vacuum hose, check the #22 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the A/C idle boost solenoid valve troubleshooting (page 6-35).



Troubleshooting Flowchart Idle Boost Solenoid Valve

Inspection of Idle Boost Solenoid Valve.

Open the control box.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect #20 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.

Apply vacuum.

Is vacuum indicated on the gauge ?

YES

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Measure voltage between RED (+) and BLK (-) terminals

Is there voltage ?

YES



Check the self-diagnosis indicator (page 6-20).
If OK, check the input troubleshooting (page 6-20).

Replace the solenoid valve.

NO

Turn steering wheel slowly.

Apply vacuum.

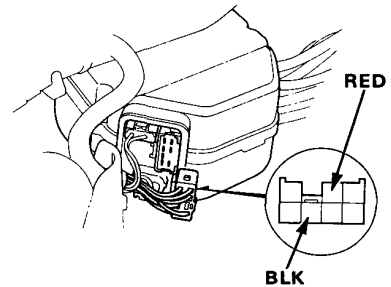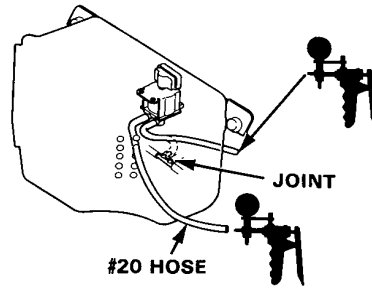


(To page 6-34)

(cont'd)





Carburetor

Idle Control System (cont'd)

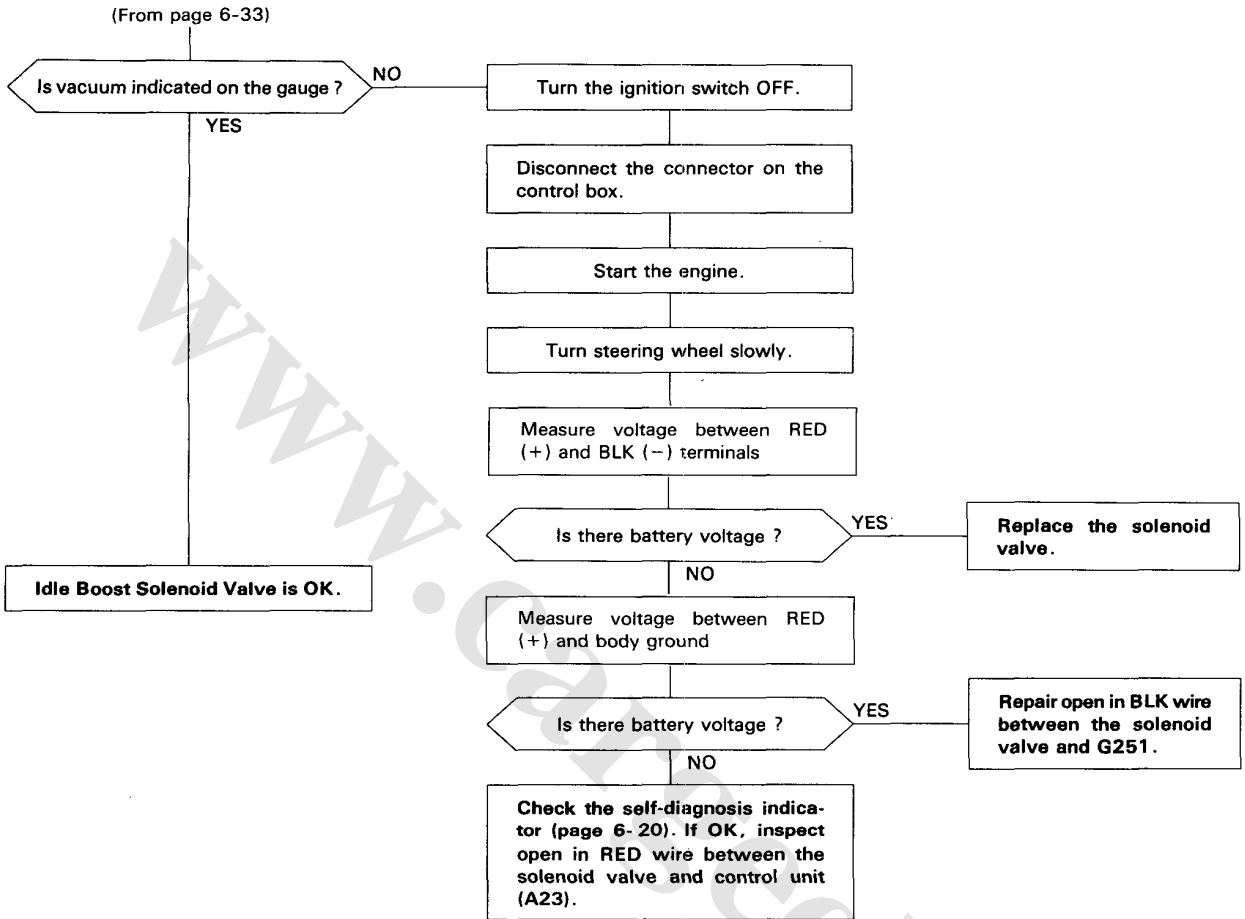



Troubleshooting Flowchart A/C Idle Boost Solenoid Valve

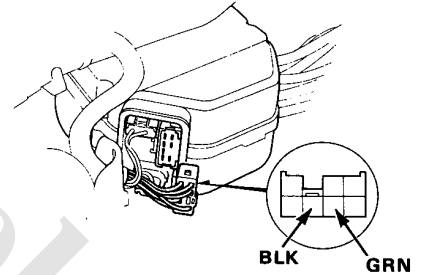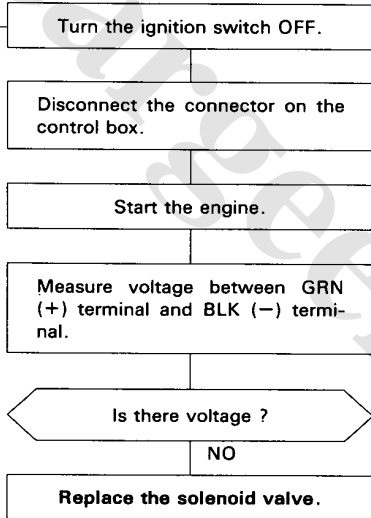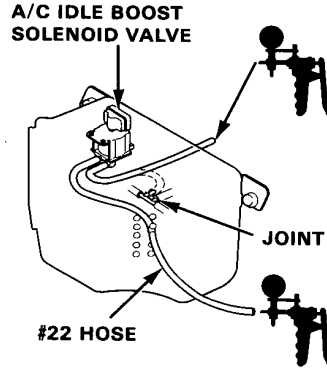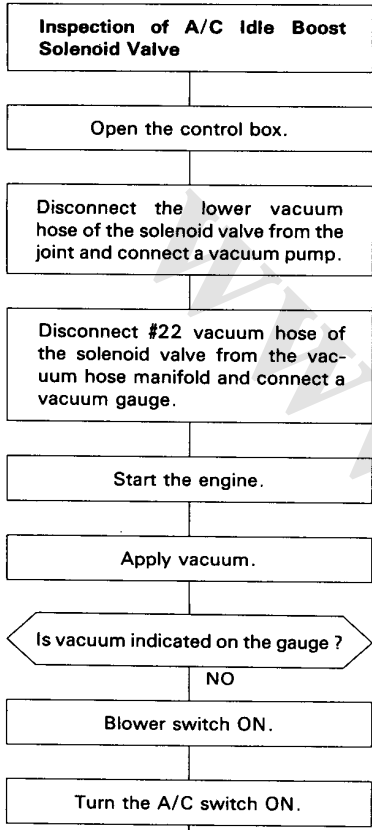


Check the self-diagnosis indicator (page 6-20).
If OK, check the input troubleshooting (page 6-20).

(To page 6-36)

(cont'd)

Carburetor

Idle Control System (cont'd)

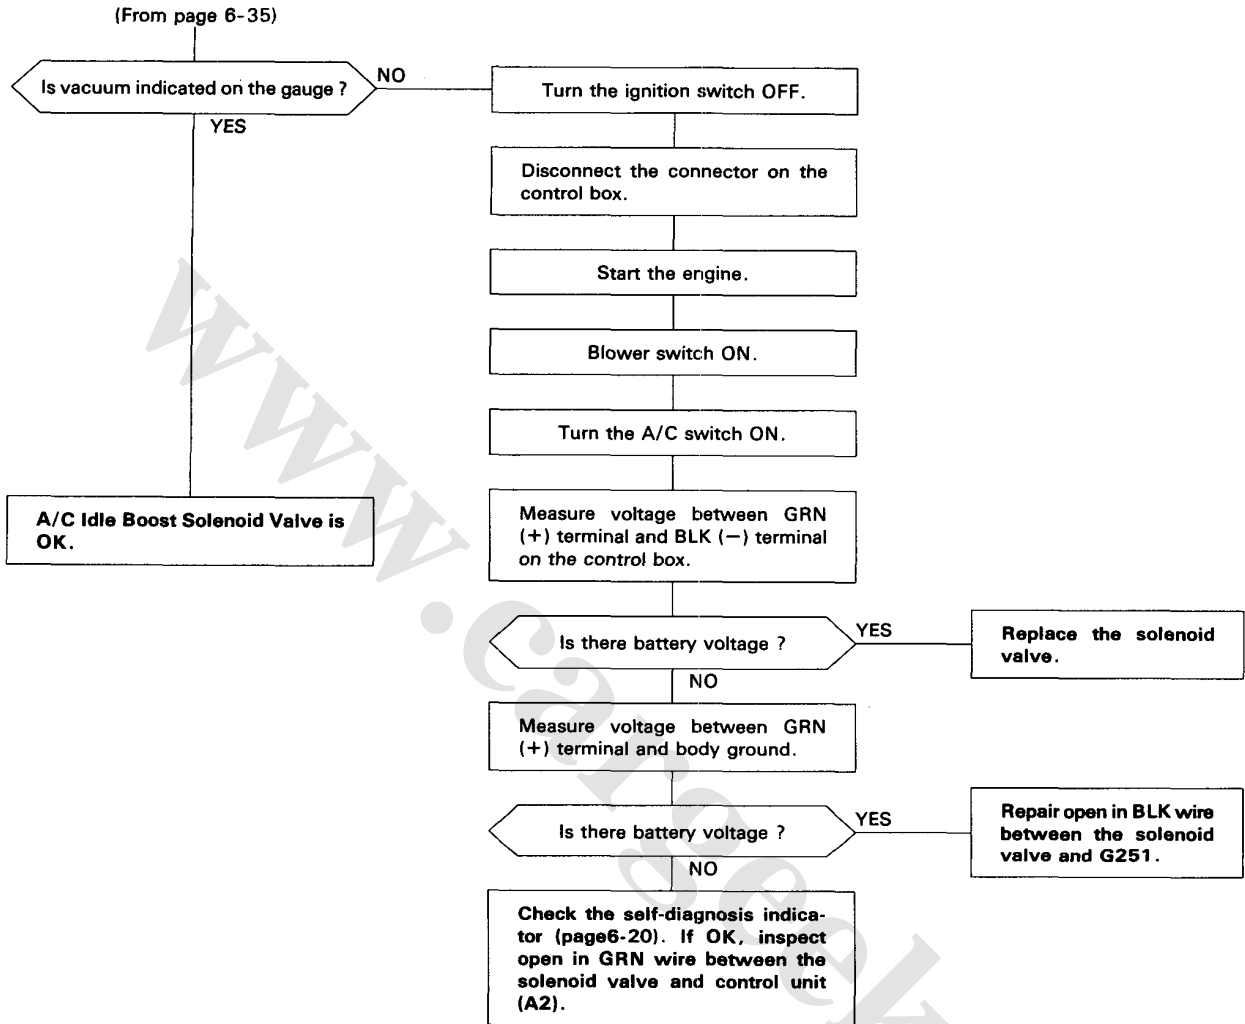




Vacuum Controlled Secondary


Testing

1. Disconnect the secondary diaphragm vacuum hose and attach a spare piece of hose between the diaphragm and a vacuum pump.
2. Open the throttle valve fully and apply a vacuum. Check the diaphragm rod moves as vacuum is applied and that the vacuum then remains steady.

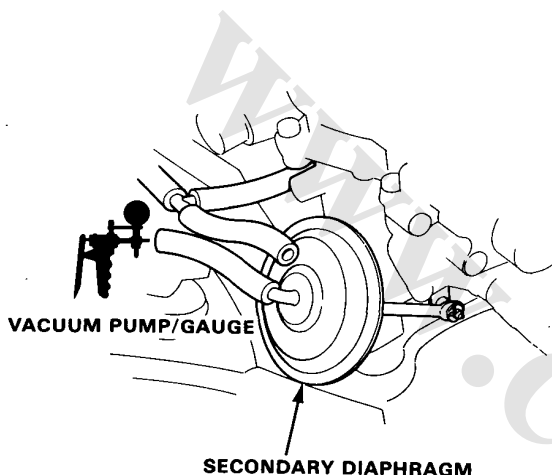

- If the vacuum does not hold or the rod does not move, first check the hose for proper connection and condition, then replace the diaphragm and recheck.


3. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
4. Disconnect the vacuum hose from the 3-way joint connect a vacuum pump and apply vacuum. It should not hold vacuum.

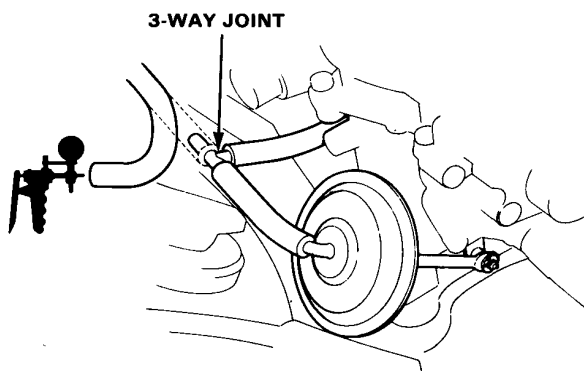

- If it holds vacuum, check the vacuum line for proper connection or cracks. If OK, go to the air leak solenoid valve troubleshooting (page 6-38).
5. Raise the engine speed to 5,000 min⁻¹ (rpm), then close the throttle suddenly. And then apply vacuum.

It should hold vacuum.

- If it does not hold vacuum, check the vacuum line for proper connection, blockage or disconnected hose. If OK, go to the air leak solenoid valve troubleshooting (page 6-38).
6. Disconnect the vacuum hose from the 3-way joint and connect to a vacuum pump/gauge. Apply a vacuum. It should not hold vacuum.

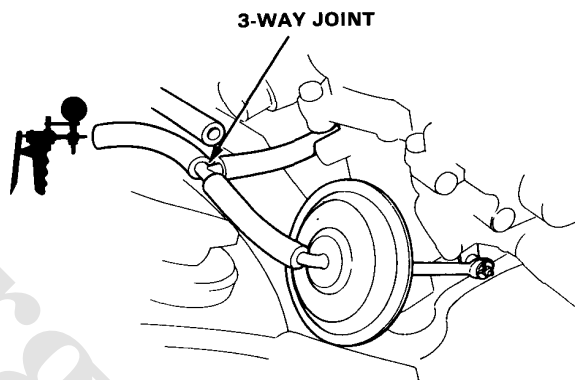

- If vacuum does not hold, test is complete.
- If vacuum is held, check the hose, the 3-way joint and clean the vacuum port.

Carburetor

Slow Air Jet Control System


Troubleshooting Flowchart Air Leak Solenoid Valve

Inspection of Air Leak Solenoid Valve.

Disconnect the #2 vacuum hose from the carburetor and connect a vacuum pump, then cap the carburetor.

Start the engine.

VACUUM PUMP/
GAUGE

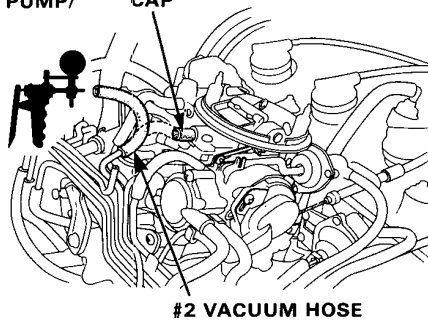

#2 VACUUM HOSE

Apply 100 mmHg (4 in.Hg) vacuum to the hose.

NOTE: Engine coolant temperature must be below 63°C (145°F).

Does solenoid valve hold vacuum ?

NO

YES

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Measure voltage between BLU/YEL (+) terminal and BLK (-) terminal.

Is there battery voltage ?

YES

Replace the solenoid valve.

NO

Measure voltage between BLU/YEL (+) terminal and body ground.


Is there battery voltage ?

YES

Repair open in BLK wire between the solenoid valve and G251.

NO

Check the self-diagnosis indicator (page 6-20). If OK, inspect open in wire between the solenoid valve and control unit (A26).

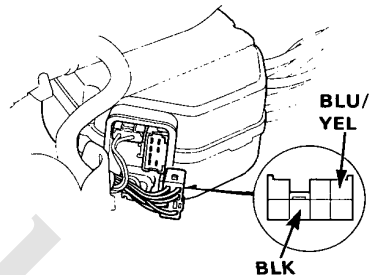

Raise the engine speed to 5,000 min⁻¹ (rpm), then close the throttle suddenly.

(To page 6-39)

Carburetor

Slow Air Jet Control System


Troubleshooting Flowchart Air Leak Solenoid Valve

Inspection of Air Leak Solenoid Valve.

Disconnect the #2 vacuum hose from the carburetor and connect a vacuum pump, then cap the carburetor.

Start the engine.

VACUUM PUMP/
GAUGE

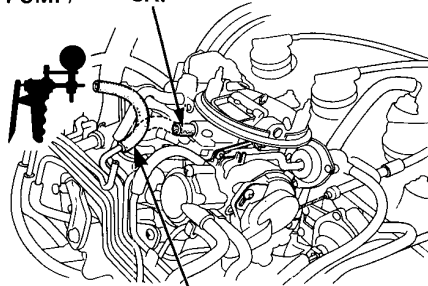

#2 VACUUM HOSE

Apply 100 mmHg (4 in.Hg) vacuum to the hose.

NOTE: Engine coolant temperature must be below 63°C (145°F).

Does solenoid valve hold vacuum ?

NO

YES

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.

Measure voltage between BLU/YEL (+) terminal and BLK (-) terminal.

Is there battery voltage ?

YES

Replace the solenoid valve.

NO

Measure voltage between BLU/YEL (+) terminal and body ground.


Is there battery voltage ?

YES

Repair open in BLK wire between the solenoid valve and G251.


NO

Check the self-diagnosis indicator (page 6-20). If OK, inspect open in wire between the solenoid valve and control unit (A26).

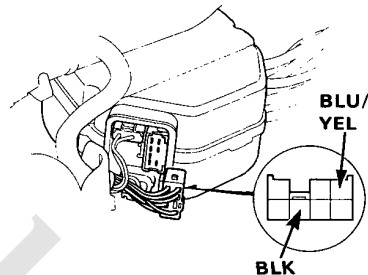

Raise the engine speed to 5,000 min⁻¹ (rpm), then close the throttle suddenly.

(To page 6-39)

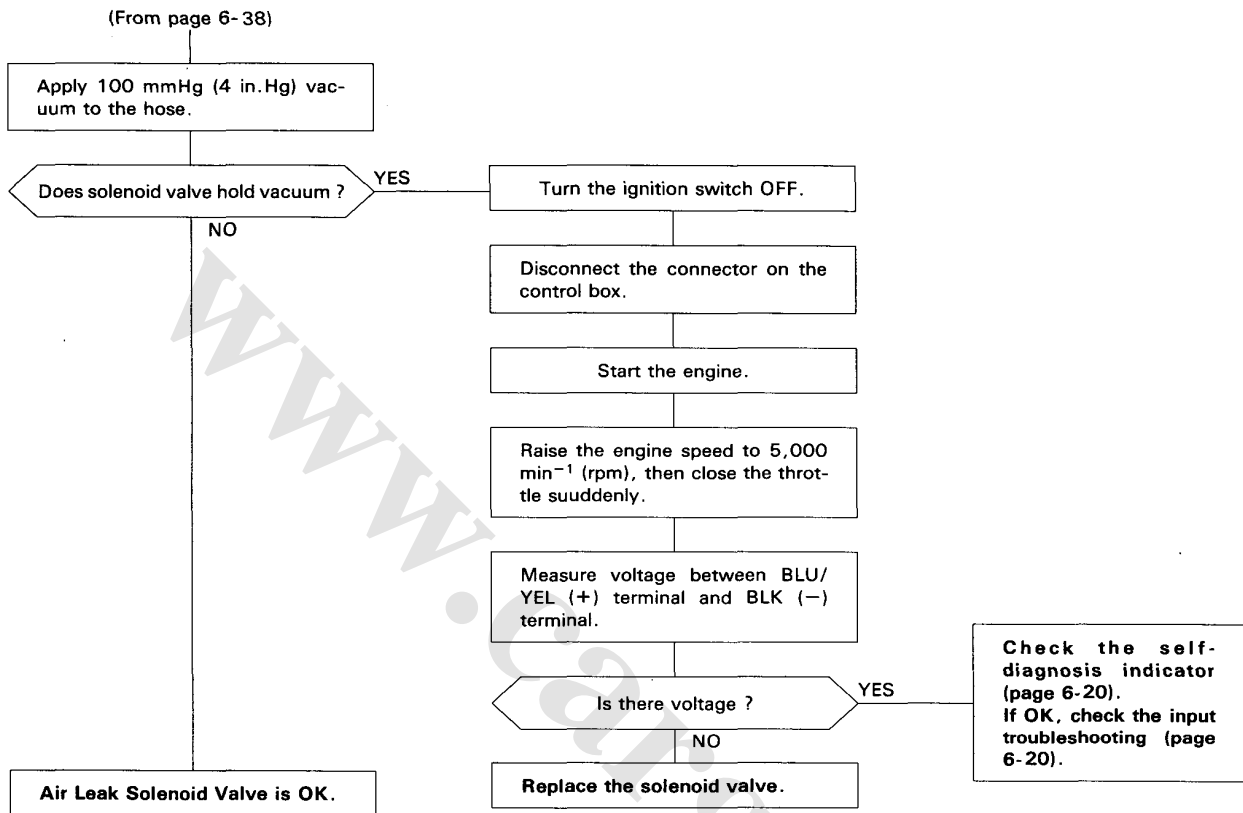


Carburetor

Power Valve

Testing

1. Disconnect the #14 vacuum hose from the vacuum hose manifold and connect a vacuum pump. Apply vacuum and listen for a clicking noise from the power valve.

VACUUM PUMP/GAUGE

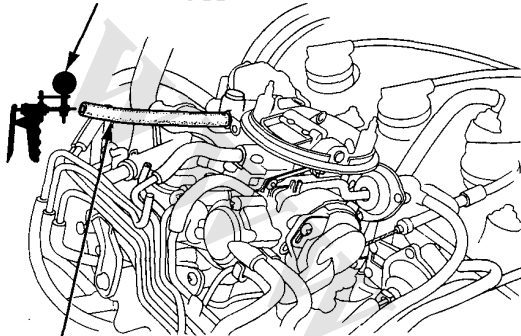


#14 VACUUM HOSE

- If a clicking sound is heard, go on to step 2.
- If no sound is heard, replace the power valve and retest.

2. Disconnect the #14 vacuum hose from the carburetor and connect a vacuum gauge to the hose.

#14 VACUUM HOSE

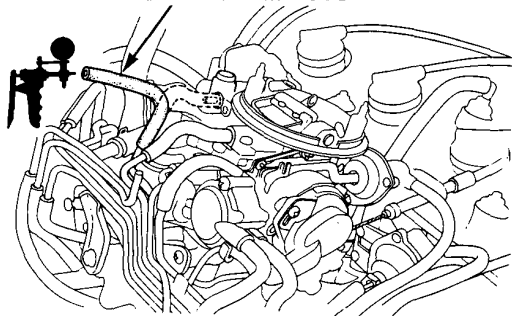

3. Start the engine and check the vacuum.
There should be no vacuum for about 3 seconds after the engine is started. And there should be vacuum within 15 seconds after the engine is started.
NOTE: The engine coolant temperature must be below 30°C (86°F).

- If not, check the #14 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the power valve control solenoid valve troubleshooting (page 6-41).

4. Warm up to normal operating temperature (the cooling fan comes on).



5. Check the vacuum.

There should be vacuum.



- If not, check the #14 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to the power valve control solenoid valve troubleshooting (page 6-41).



Troubleshooting Flowchart Power Valve Control Solenoid Valve

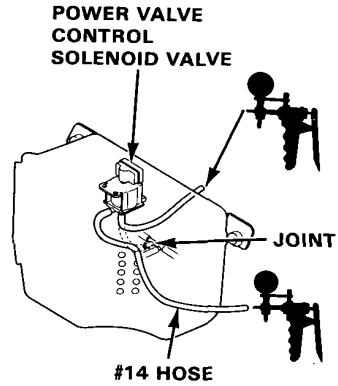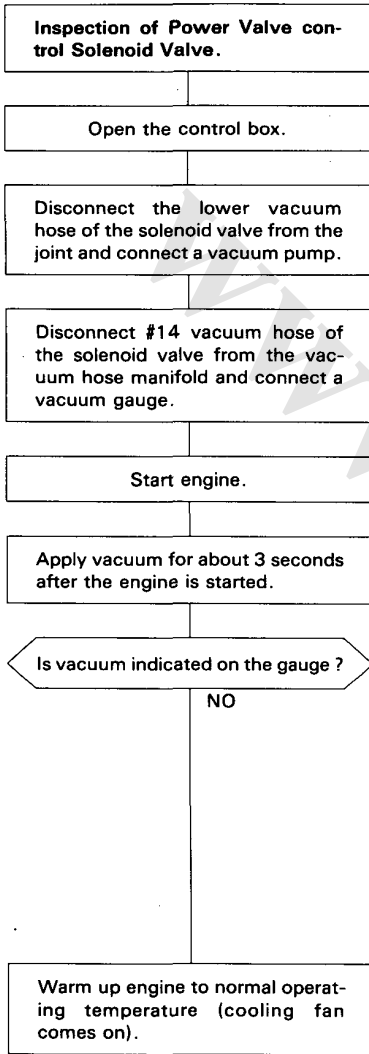

NOTE: The engine coolant temperature must be below 30°C (86°F)

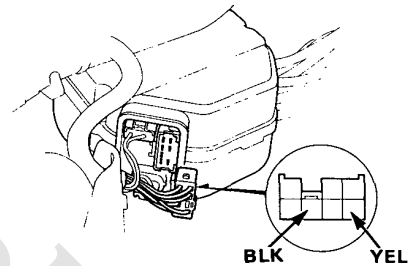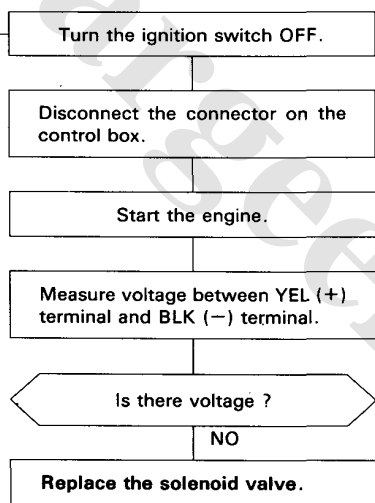


Check the self-diagnosis indicator (page 6-20). If OK, substitute a known-good control unit and retest. If symptom goes away, replace the original control unit.

(To page 6-42)

(cont'd)

Carburetor

Power Valve (cont'd)

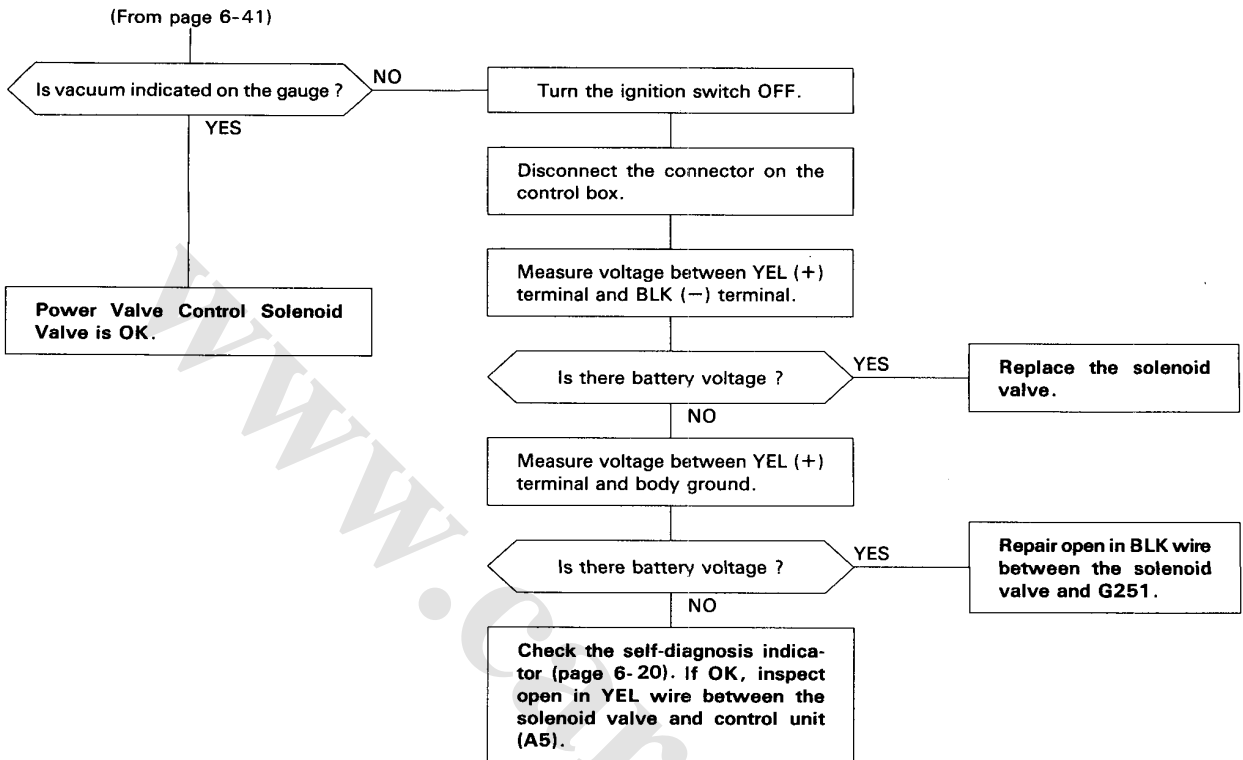



Idle Speed/Mixture

(KS, KG)

Inspection/Adjustment


Propane Enrichment Method

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.


NOTE:

- This procedure requires a propane enrichment kit.
- Check that the self diagnosis indicator before making idle speed and mixture inspections.

1. Start the engine and warm up to normal operating temperature (the cooling fan comes twice).
2. Disconnect the #8 vacuum hose from the intake air control diaphragm and clamp the hose end.

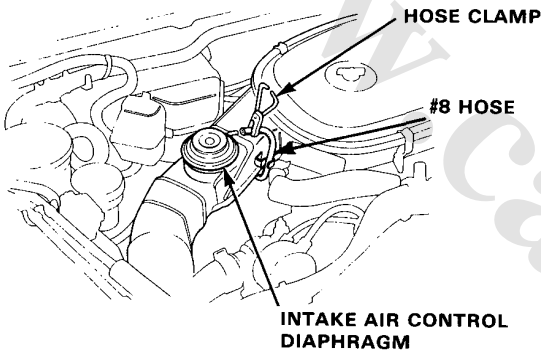


3. Connect a tachometer.

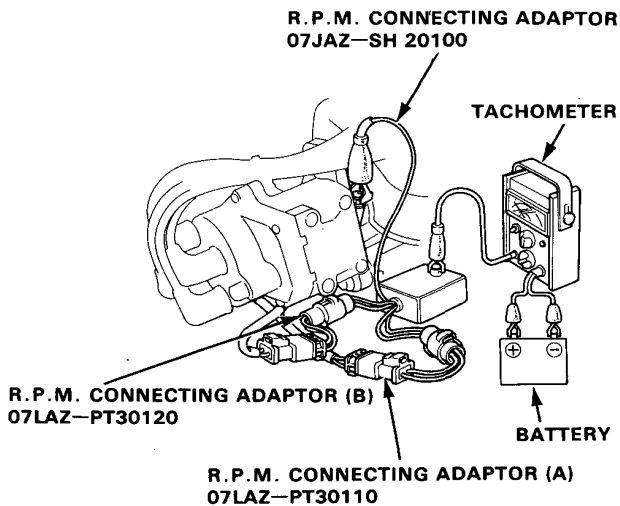

4. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at $2,500-3,000 \text{ min}^{-1}$ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off (with DAY LIGHT: headlights on). Idle speed should be:


Manual	$800 \pm 50 \text{ min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{ min}^{-1}$ (rpm) (in "D")

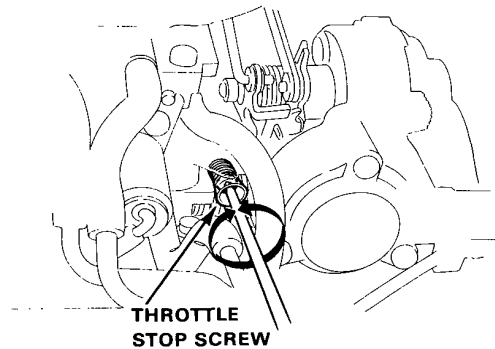

Adjust the idle speed, if necessary, by turning the throttle stop screw.

NOTE: If the idle speed is excessively high, check the throttle control system (page 6-59)

5. Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

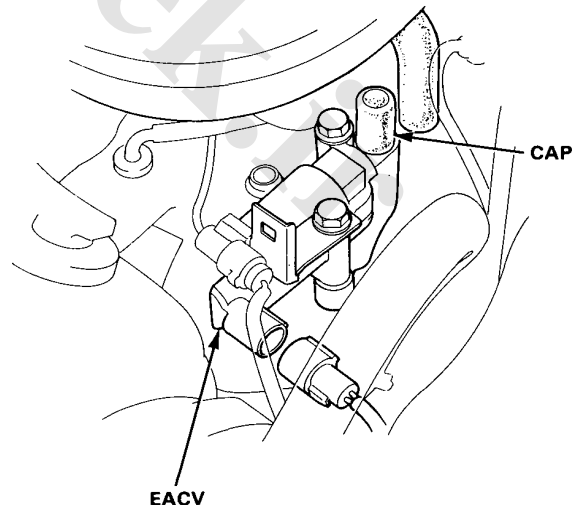


(cont'd)


Carburetor

Idle Speed/Mixture (cont'd)

- Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

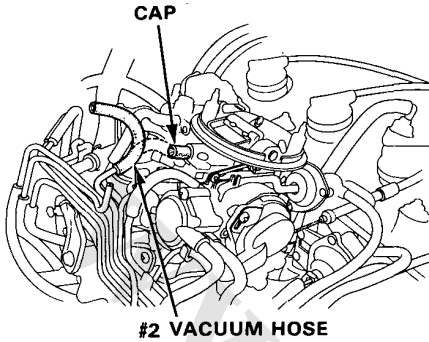


- Disconnect air cleaner intake tube from air intake duct.
- Insert the hose of the propane enrichment kit into the intake tube about 10 cm.
NOTE: Check that propane bottle has adequate gas before beginning test.

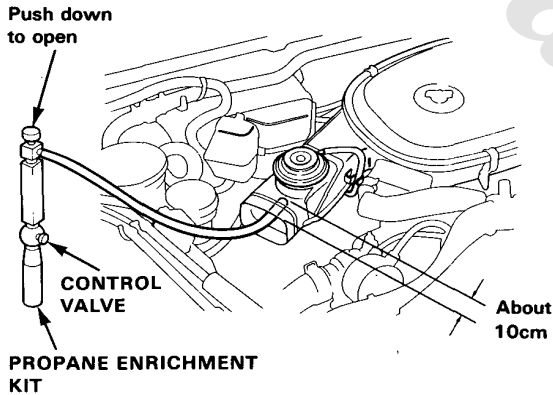

- With engine idling, depress push button on top of propane device, then slowly open the propane control valve to obtain maximum engine speed. Engine speed should increase as percentage of propane injected goes up.


NOTE: Open the propane control valve slowly; a sudden burst of propane may stall the engine.

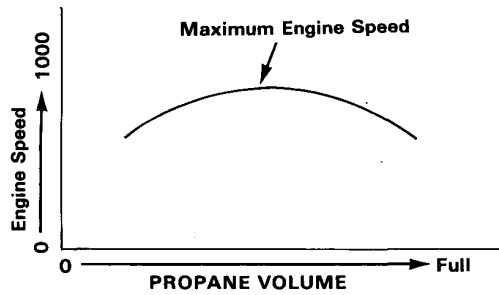

Engine speed increase should be:

Manual	$160 \pm 20 \text{ min}^{-1} \text{ (rpm)}$
Automatic	$50 \pm 10 \text{ min}^{-1} \text{ (rpm)}$ (in "D")

- If engine speed does not increase per specification, mixture is improperly adjusted. Go to step 10.
 - If engine speed increases per specification, go to step 14.
- Remove the air cleaner and close the propane control valve.
 - Remove the mixture adjusting screw hole cap.

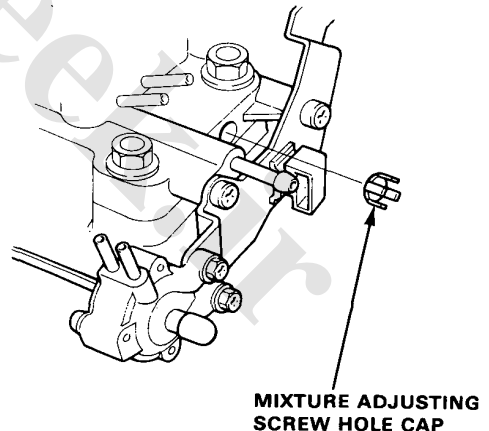



12. Start engine and warm up to normal operating temperature ; the cooling fan will come on.
13. Reinstall the propane enrichment kit and recheck maximum propane enriched engine speed.

- If the propane enriched speed is too low, mixture is too rich: turn the mixture screw 1/4-turn clockwise and recheck.
- If the propane enriched speed is too high, mixture is too lean: turn the mixture screw 1/4-turn counter-clockwise and recheck.

14. Close the propane control valve speed and remove the BACK UP fuse for 10 seconds to reset control unit. Recheck idle speed.

Idle speed should be:


Manual	$800 \pm 50 \text{min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{min}^{-1}$ (rpm) (in "D")

- If idle speed is as specified (step 4), go to step 15.
- If idle speed is not as specified, adjust by turning throttle stop screw, then repeat steps 13 and 14.

15. Remove propane enrichment kit and reconnect air cleaner intake tube on the air intake duct.
16. Reinstall the mixture adjusting screw hole cap.
17. Disconnect the connector on the P/S oil pressure switch, and check the idle speed.

Idle speed should be:


Manual	$950 \pm 50 \text{min}^{-1}$ (rpm)
Automatic	$820 \pm 50 \text{min}^{-1}$ (rpm) (in "D")

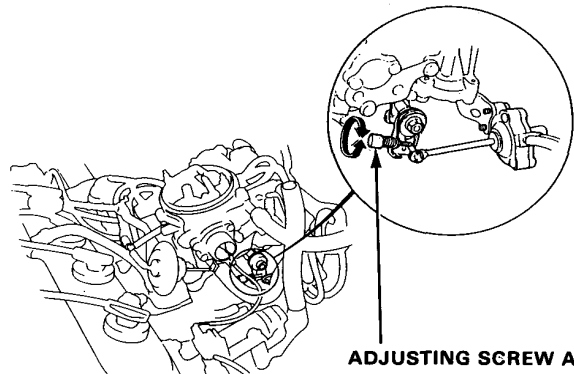

Adjust the idle speed, if necessary, by turning the adjusting screw A.

18. If equipped with air conditioner, check the idle speed with the A/C on (with DAY LIGHT: headlights on). Idle speed should be:

Manual	$800 \pm 50 \text{min}^{-1}$ (rpm)
Automatic	$750 \pm 50 \text{min}^{-1}$ (rpm) (in "D")

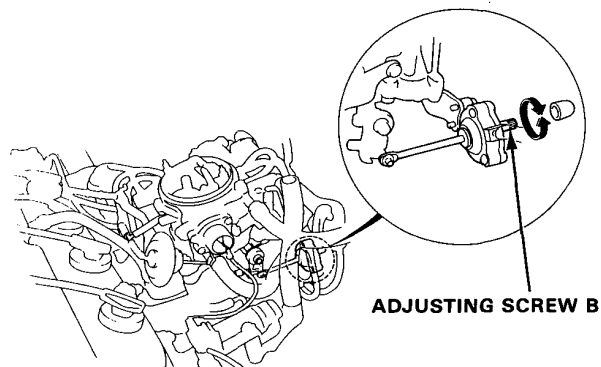

Adjust the idle speed, if necessary, by turning the adjusting screw B.

(cont'd)

Carburetor

Idle Speed / Mixture (cont'd)

(Except KS, KG, KQ)


CO Meter Method

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

NOTE:


- Check that the self-diagnosis indicator (KX, KE with CATA) before making idle speed and mixture inspections.

1. Start the engine and warm it up to normal operating temperature (the cooling fan comes twice).
2. Connect a tachometer.

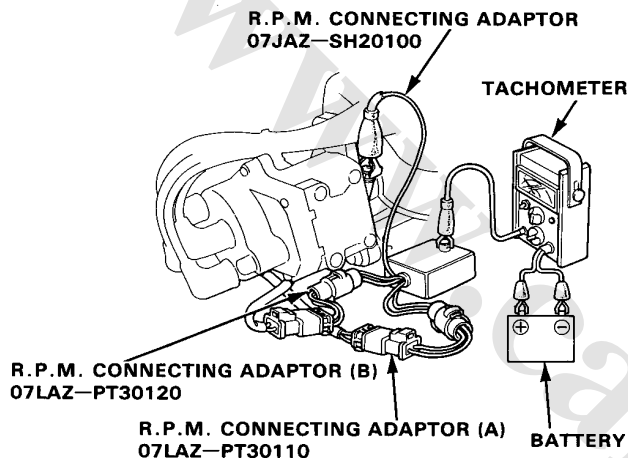

3. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000min⁻¹ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off (with DAY LIGHT: headlights on). **Idle speed should be:**

Manual	800±50min ⁻¹ (rpm)
Automatic	750±50min ⁻¹ (rpm)(in "D")

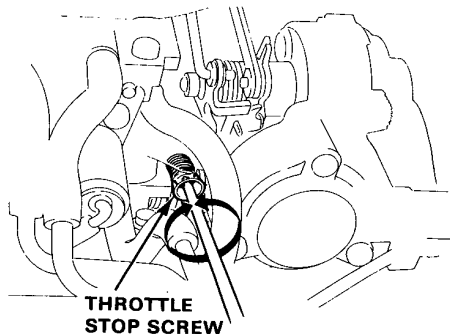

Adjust the idle speed, if necessary, by turning the throttle stop screw.

NOTE: If the idle speed is excessively high, check the throttle control system (page 6-59)

4. Calibrate the NDIR CO Meter in accordance with the manufacturer's recommended procedures. Insert exhaust gas sampling probe into the tailpipe at least 40 cm.
5. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO with cooling fan, air conditioner OFF and headlights OFF.


Specified CO%:

KX, KE with CATA: 0.1%


Except KX, KE with CATA: 1±1%

- If idle CO is as specified, go to step 14.
- If not, go to step 6 through 13.

6. KX : Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

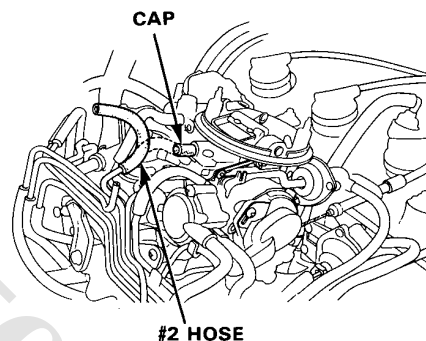


7. KX: Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

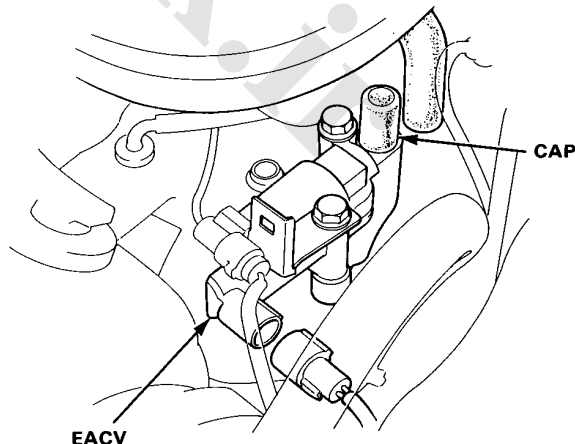




8. **KX:**
Disconnect the wire harness from the O² sensor.

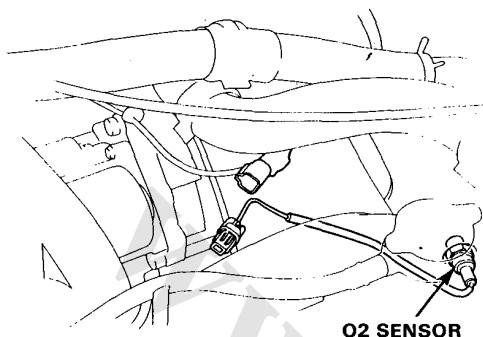

9. **KX:**
Remove the rubber cap from the gas pipe.

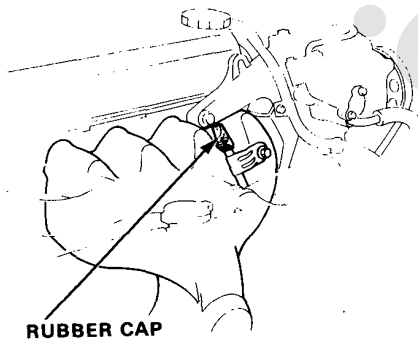


10. **KX:**
Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO.

Specified CO%;
KX: 2.3 ± 1.0%
KE with CATA: 2.5 ± 0.5%


- If not, specification, go to step 11.

11. Remove mixture adjusting screw hole plug and adjust by turning mixture adjusting screw to obtain proper CO reading.

(KX, KE with CATA)

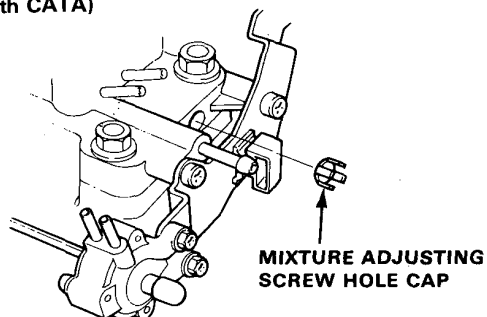

(Except KX, KE with CATA)

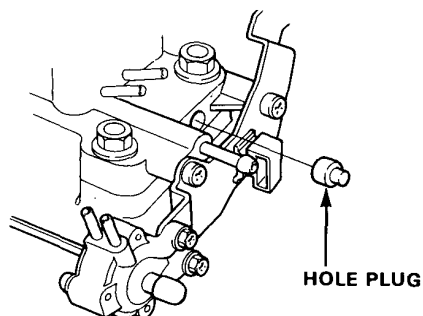

— Turning mixture adjusting screw

clockwise: CO reading decreases
counterclockwise: CO reading increases

Readjust idle speed if necessary, and recheck idle CO.

12. **KX:**
Reconnect the connector and hose. Remove BACK UP fuse for 10 seconds to reset control unit.

13. **KX, KE with CATA**
Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Recheck idle CO.

Specified CO%: 0.1%

- If idle CO is as specified, go to step 14.
- If not, check the self-diagnosis indicator (page 6-20). If not, inspect the EACV and the catalytic converter (page 6-53), then repeat step 6.

14. Recheck idle speed.
Idle speed should be:

Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

(cont'd)

Carburetor


Idle Speed/Mixture (cont'd)

- If idle speed is as specified, go to step 15.
- If idle speed is not as specified, adjust by turning throttle stop screw, then repeat step 5.

15. Reinstall the mixture adjusting screw hole cap.

16. Disconnect the connector on the P/S oil pressure switch.
Except KX, KE with CATA; Connect a jumper wire between the RED terminal and the BLK terminal.


P/S OIL PRESSURE SWITCH

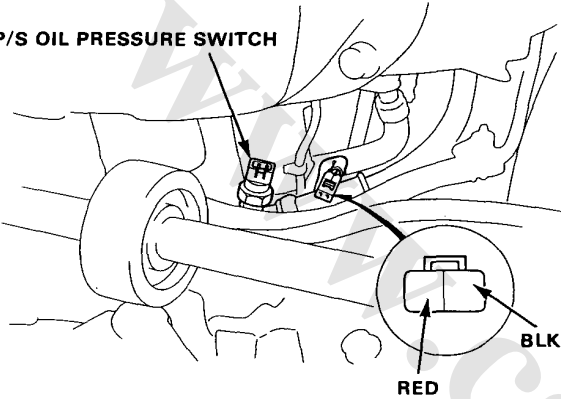

17. Check the idle speed.

Idle speed should be :

Manual	950 ± 50 min ⁻¹ (rpm)
Automatic	820 ± 50 min ⁻¹ (rpm) (in "D")

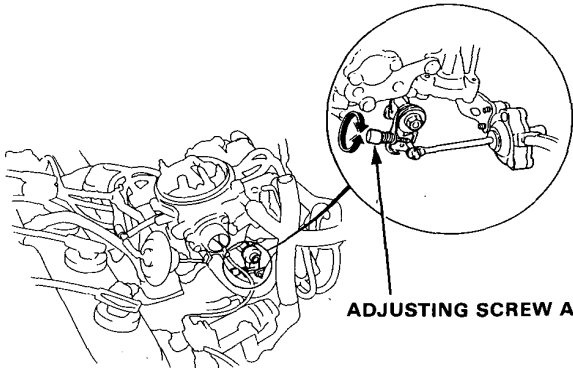


Adjust the idle speed, if necessary, by turning the adjusting screw A.

18. If equipped with air conditioner, check the idle speed with the A/C on.

Idle speed should be:


Manual	800 ± 50 min ⁻¹ (rpm)
Automatic	750 ± 50 min ⁻¹ (rpm) (in "D")

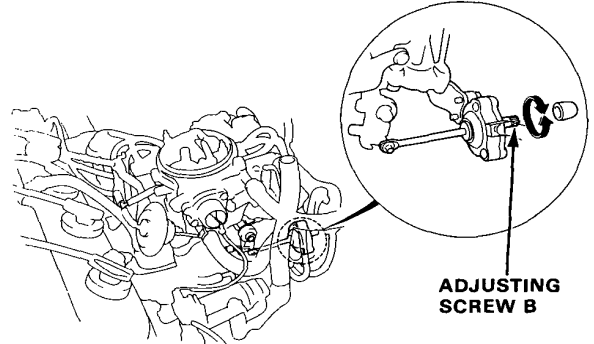

Adjust the idle speed, if necessary, by turning the adjusting screw B.



Replacement

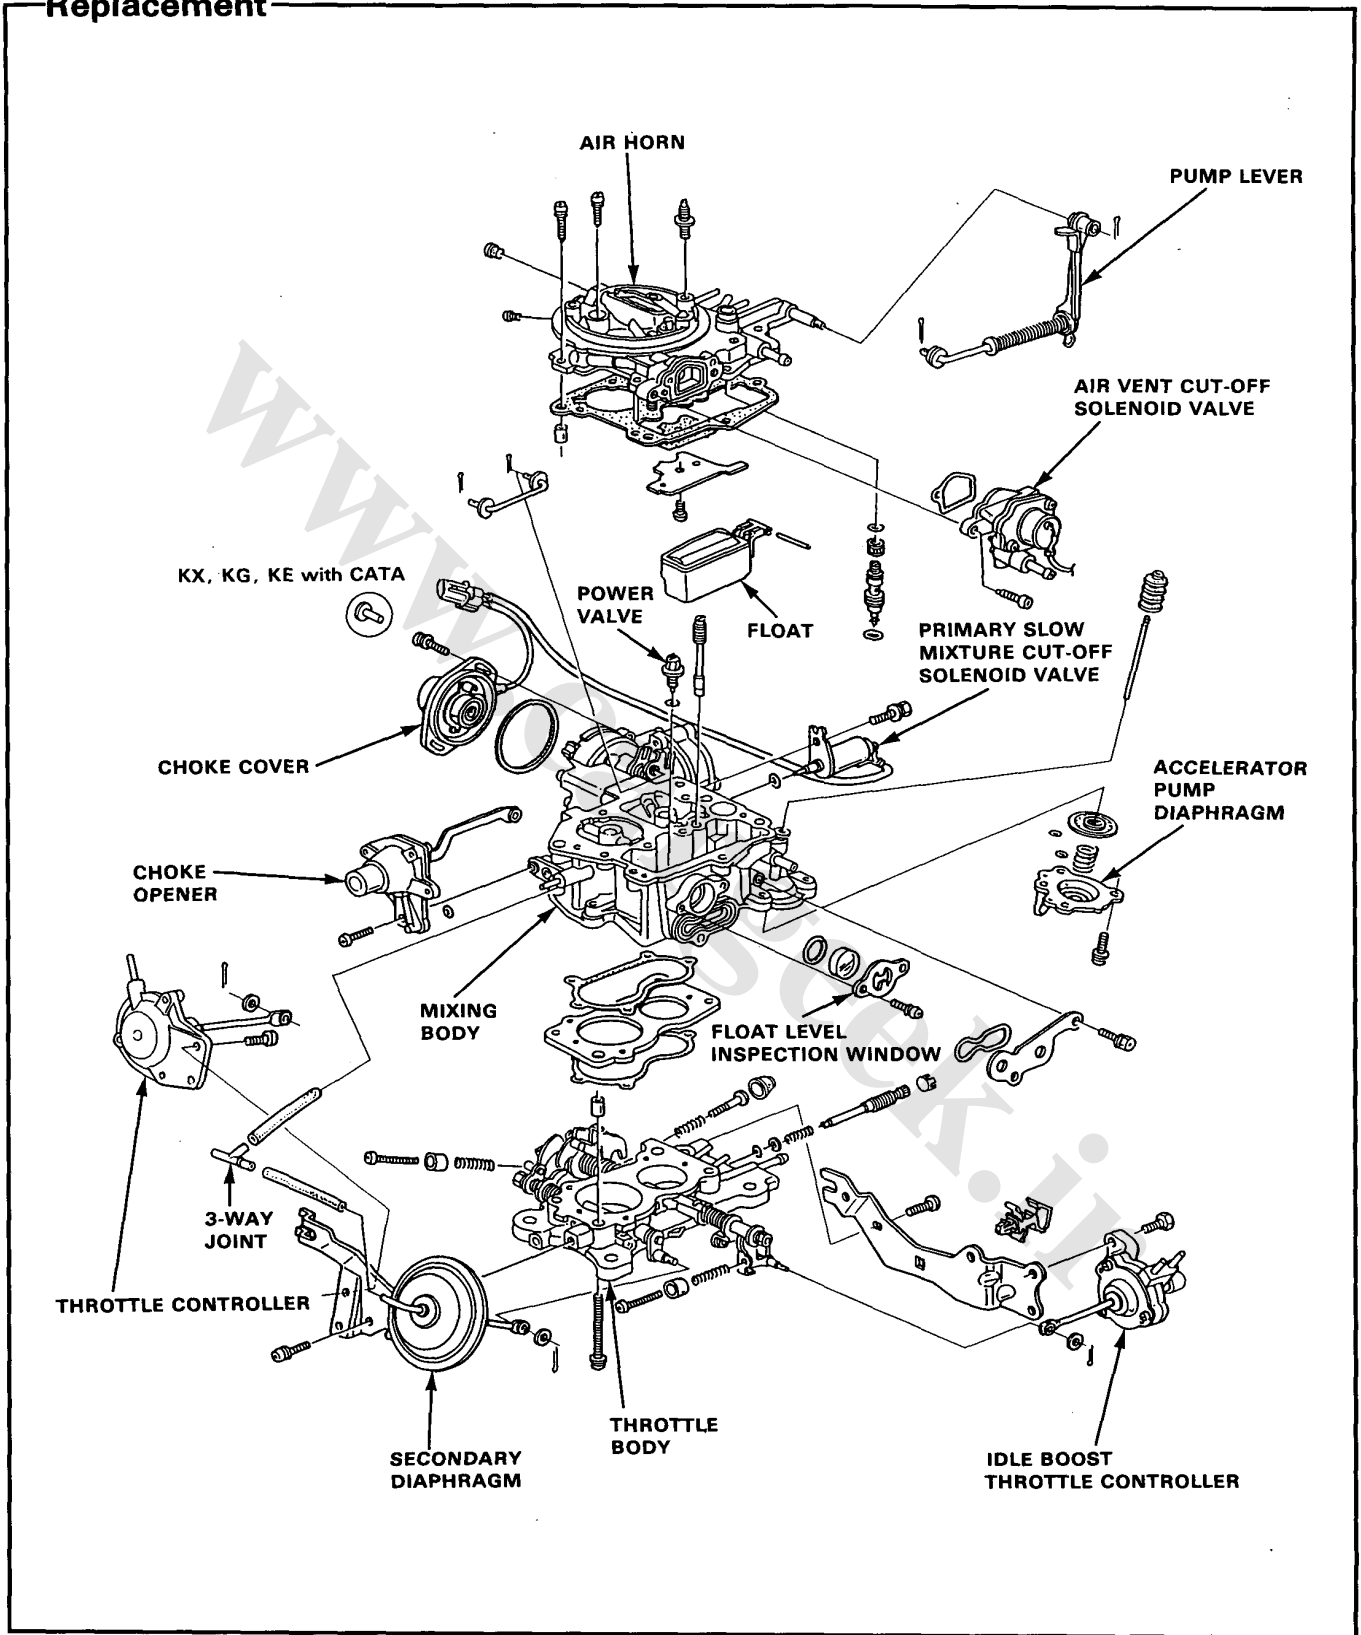

Fuel Supply System

Symptom-to-sub System Chart

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in this page.

PAGE		SYSTEM	FUEL FILTERS	FUEL PUMP	FUEL CUT-OFF RELAY	FUEL TANK	CONTAMINATED FUEL
SYMPTOM			---	---	---	---	*
ENGINE WON'T START			③	①	②		②
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING		①				①
	LOSS OF POWER		①				①

* Fuel with dirt, water or a high percentage of alcohol is considered contaminated.



Air Intake System

Symptom-to-Sub System Chart

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in this page.

PAGE	SYSTEM	THROTTLE CABLE	AIR INTAKE CONTROL
SYMPTOM		—	—
LOSS OF POWER			①
AFTERBURN			①
HESITATION/SURGE			①

Emission Control System

Symptom-to-sub System Chart

NOTE:

- Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected, starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try next system ②, etc.
- Before starting inspection, check that other items that affect engine performance are within specification. Check the self-diagnosis indicator, valve clearance, air cleaner, and PCV valve. In addition, check the ignition timing, function of the vacuum and centrifugal advance, and the condition of the spark plugs. If those items are all within specifications, begin with the troubleshooting listed in this page.

PAGE	SYSTEM	FEEDBACK CONTROL	THROTTLE CONTROL	EGR	EVAPORATIVE CONTROL	AIR INJECTION
		---	59	57	60	54
ENGINE WON'T START				②	①	
DIFFICULT TO START ENGINE	WHEN COLD	①	②	②	①	
	WHEN WARM	①	②	③	①	
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFICATION	①	②	②		
	WHEN WARM ENGINE SPEED TOO HIGH		①			
	WHEN WARM ENGINE SPEED TOO LOW	①		②		
	ROUGH IDLE/ FLUCTUATION	①		②		
FREQUENT STALLING	WHILE WARMING UP	①		②		
	AFTER WARMING UP	①		②		
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	②		①		
	LOSS OFF POWER	①			①	
	AFTERBURN	①	②			②
	HESITATION/SURGE	①		②		



Tailpipe Emissions

Inspection

NOTE: It is not possible to use a CO meter to adjust the idle mixture; the effect of the catalytic converter prevents accurate tracking of such small changes in air-fuel ratio.

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. KS, KG:
Check the idle speed/mixture using the propane enrichment method.
2. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
3. Start the engine and warm it up to normal operating temperature (the cooling fan comes on twice).
4. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO %:


KX, KS, KG, KE with CATA: below 0.1%

Except KX, KS, KG, KE with CATA: 1.0 ± 1.0%

Catalytic Converter

Inspection

If excessive exhaust system back-pressure is suspected, remove the catalytic converter from the car and make a visual check for plugging, melting or cracking of the catalyst. Replace the catalytic converter if any of the visible area is damaged or plugged.

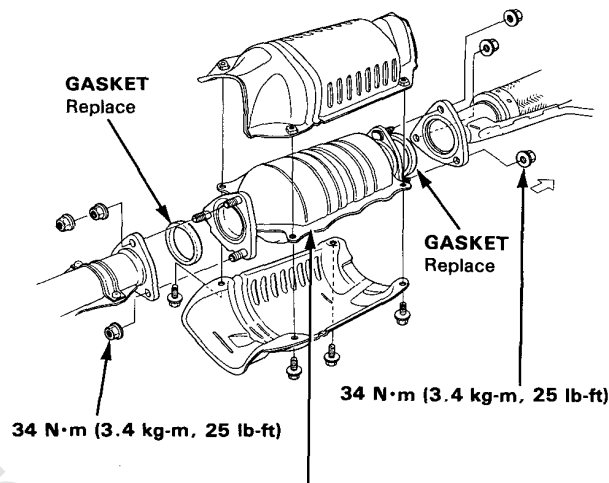

CATALYTIC CONVERTER

Removal Installation, section 5
Inspect housing for cracks or other damage.
Inspect element for clogging by looking through the inside.

Emission Control System


Air Injection Control

Testing


1. Start the engine.
2. Remove the air cleaner cover and filter.
3. Start the engine and check for a bubbling noise from the air suction port idle.

A bubbling noise should not be heard.

NOTE: Engine coolant temperature must be below 30°C (86°F)

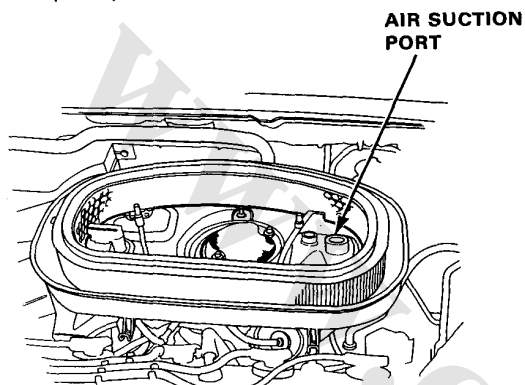

- If a bubbling noise is heard, disconnect the #5 vacuum hose from the air suction valve and connect a vacuum pump. There should be no vacuum.

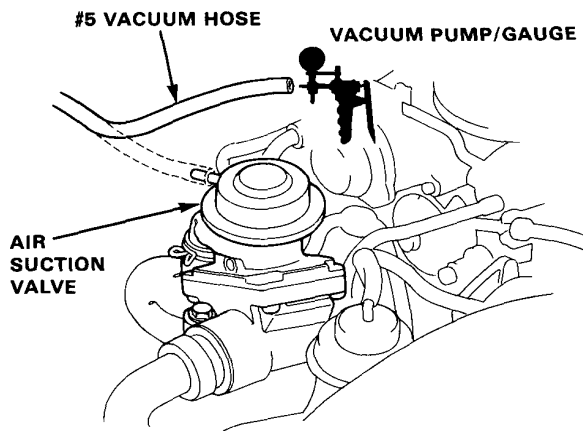

- If there is no vacuum, replace air suction valve and retest.
- If there is vacuum, go to troubleshooting (page 6-55).

4. Warm up to normal operating temperature.
NOTE: Engine coolant temperature must be below 70°C (158°F).

A bubbling noise should be heard.

- If bubbling noise is not heard, disconnect the #5 vacuum hose from the air suction valve and connect a vacuum pump.

There should be vacuum.

- If there is vacuum, replace the air suction valve and retest.
- If there is no vacuum, check the #5 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to troubleshooting (page 6-55).



Troubleshooting Flow Chart Air Suction Control Solenoid Valve

Inspection of Air Suction Control Solenoid Valve.

Open the control box lid.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect the #5 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.

Apply vacuum.

Does solenoid valve hold vacuum ?

NO

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Warm up normal operating temperature.

NOTE: Engine coolant temperature must be below 70 °C (158 °F)


Start the engine.

Measure voltage between LT GRN (+) and BLK (-) terminals


Is there voltage ?

NO

Replace the solenoid valve.

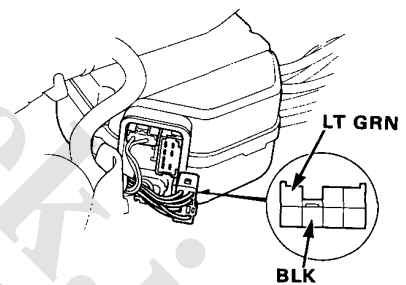

Check the self-diagnosis indicator (page 6-20). If OK, substitute a known-good control unit and retest. If symptom goes away, replace the original control unit.

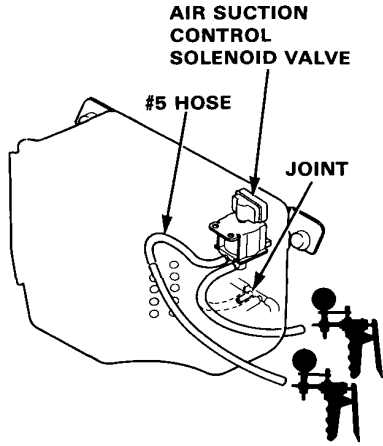


NOTE: Engine coolant temperature must be below 30 °C (86 °F)

(To page 6-56)

(cont'd)

Emission Control System

Air Injection Control (cont'd)

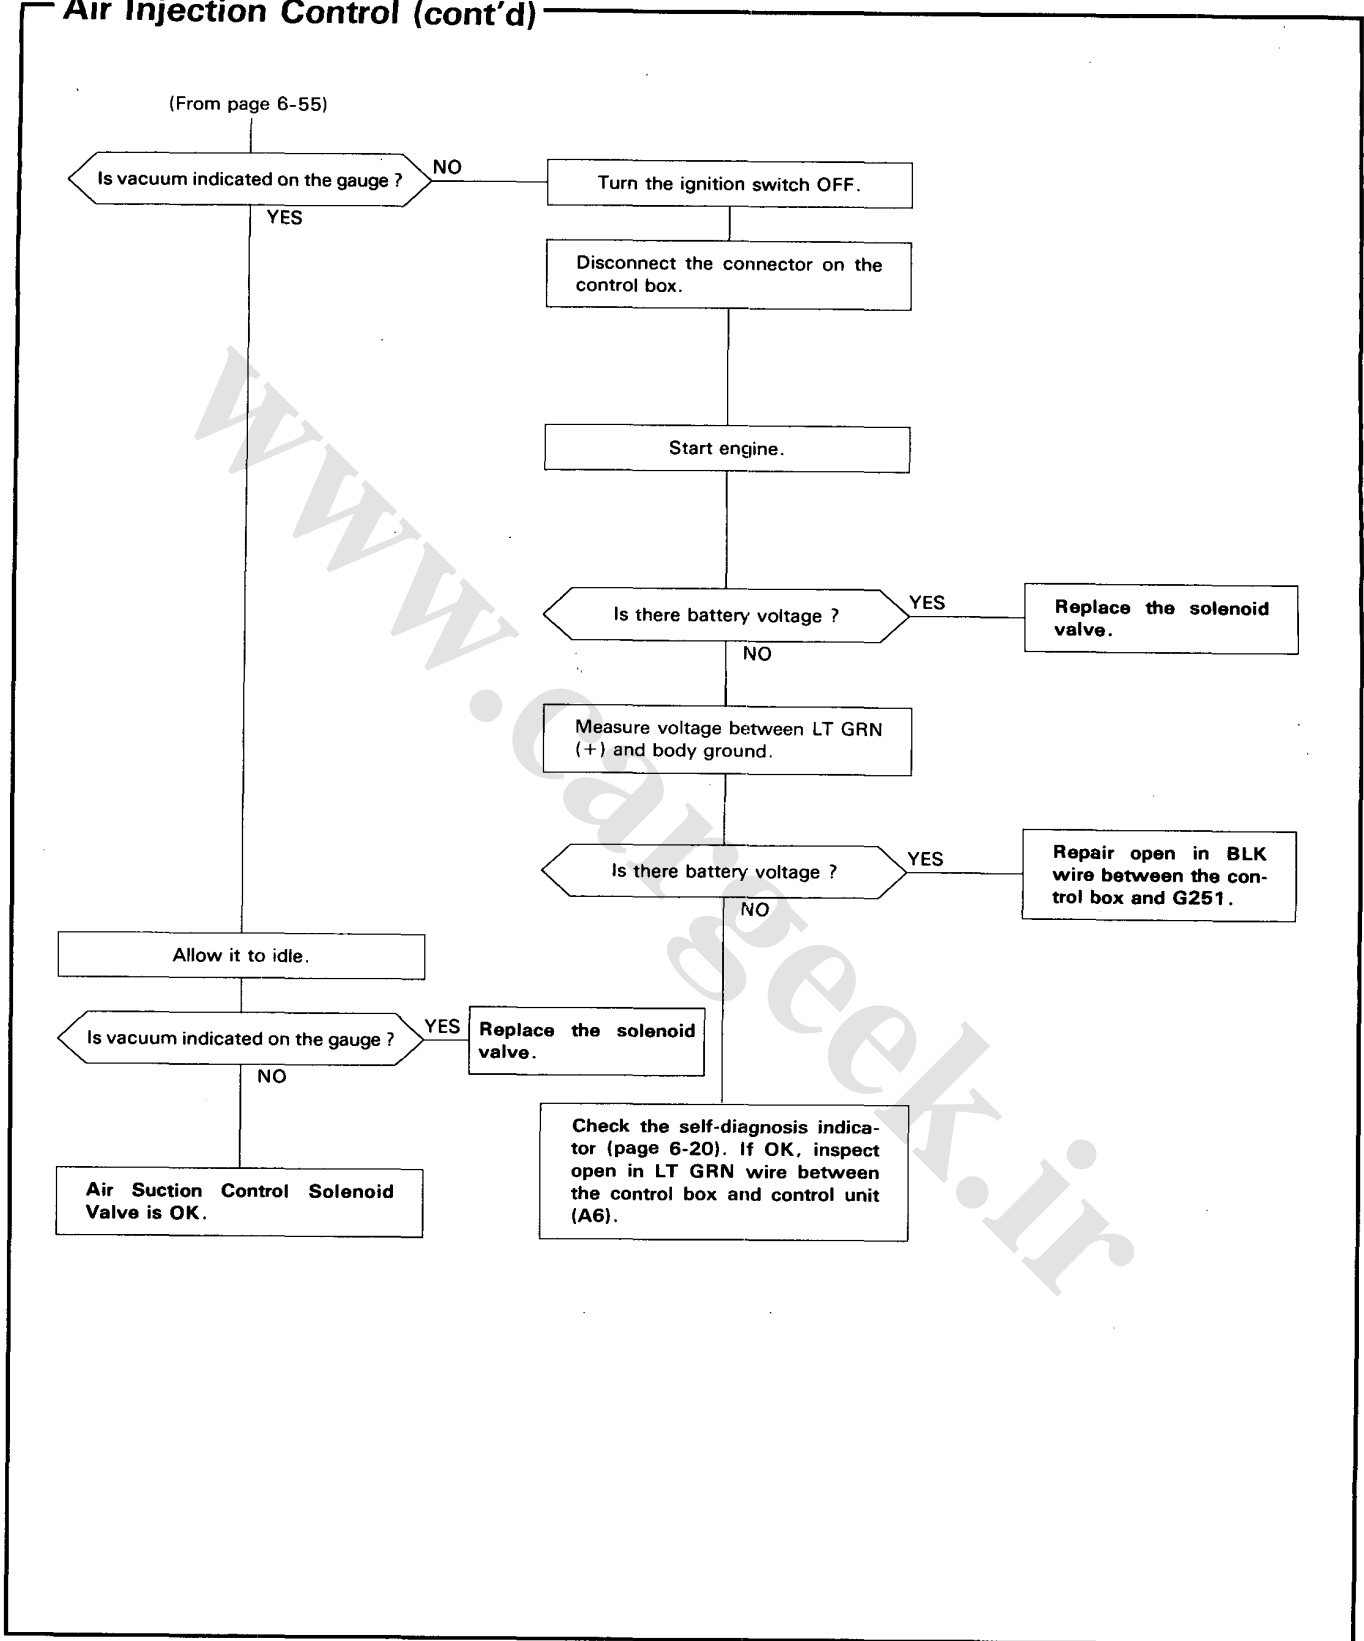




EGR System

Testing (COLD ENGINE)

NOTE: The engine coolant temperature must be below the thermostatic valve B set temperature (55°C, 131°F).

1. Disconnect the vacuum hose from the EGR valve and connect a vacuum gauge to the hose.

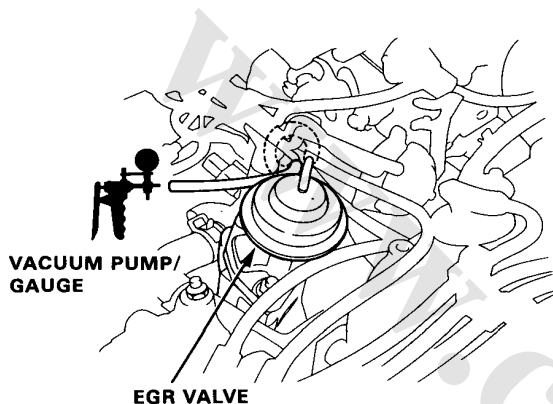


2. Start the engine and raise the engine speed to 3,000 min^{-1} (rpm)

Vacuum should not be available.

- If vacuum is not available, go on to the hot engine inspection (right column).
- If vacuum is available, replace thermostatic valve B and retest.

Testing (HOT ENGINE)

1. Disconnect the vacuum hose from the EGR valve and connect a vacuum gauge to the hose.

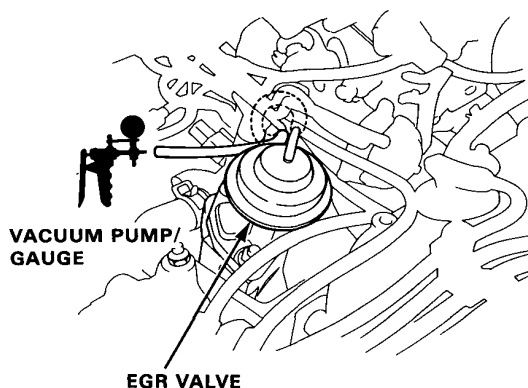

2. Start the engine and wait for the cooling fan to come on.
3. Remove the control box and remove the control box cover.


Vacuum should be as shown below:

Condition		Vacuum at EGR hose
1	Idle	No
2	3,000 min^{-1} (rpm)	Yes, 50–152 mm
3	3,000 min^{-1} (rpm) with blocked vacuum bleed (shown next column)	Less than 50 mm Hg
4	Rapid acceleration	Yes, 50–152 mm Hg
5	Deceleration	No

(cont'd)

Emission Control System


EGR System (cont'd)

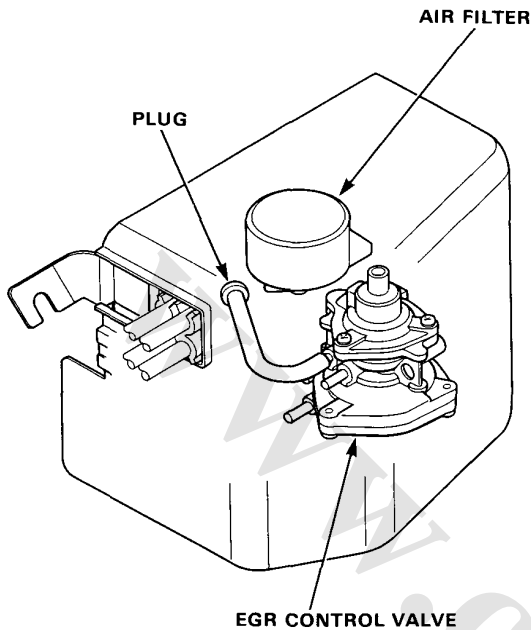

- If vacuum is available at idle (condition 1) check the vacuum hoses for proper routing and connections, then check for correct idle speed and idle mixture, and make adjustment as necessary.
- If there is no vacuum in conditions 2 and 4, check the #10, #11, #15 and #16 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, replace the thermostatic valve B and retest.
- If vacuum is more than 50 mm Hg in condition 3, replace the EGR control valve and check the vacuum hoses for proper routing and connections.

EGR Valve

1. Start engine and allow to idle.
2. Disconnect vacuum hose from EGR Valve and connect a vacuum pump to EGR Valve

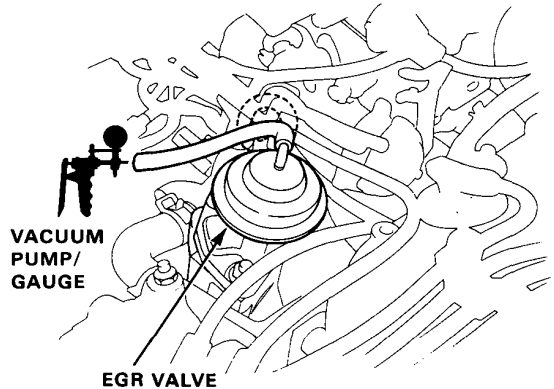

3. Apply 150 mm Hg (6 in. Hg) vacuum to EGR Valve. Vacuum should remain steady and engine should die.
- If vacuum remains steady and engine dies, EGR valve is working properly, remove the vacuum pump and reconnect EGR vacuum hose ; test is complete.
 - If vacuum does not remain steady and engine does not die, replace EGR valve and retest.
 - If vacuum remains steady but engine does not die : Remove EGR valve ; check EGR valve and manifold for blockage, clean or replace as necessary and retest.




Throttle Control System


Testing (HOT ENGINE)

1. Start the engine and warm up to normal operating temperature (the cooling fan comes on).
2. Disconnect the #6 vacuum hose from the throttle controller and check the engine speed.

Engine speed should be: $1,800 \pm 300 \text{ min}^{-1} \text{ (rpm)}$

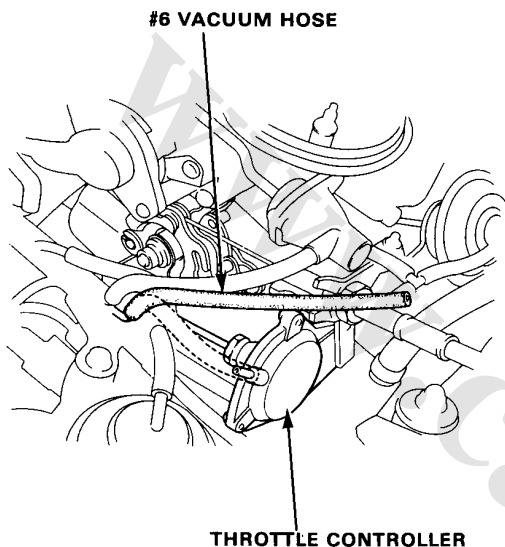


- If the engine speed is excessively high, adjust by turning the adjusting screw.

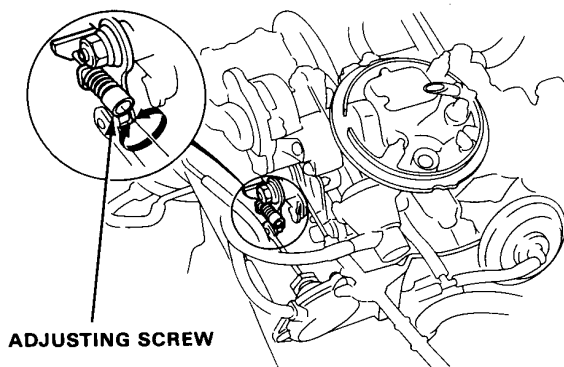

- If the engine speed does not change, connect a vacuum pump to the #6 vacuum hose and check vacuum.

There should be vacuum.

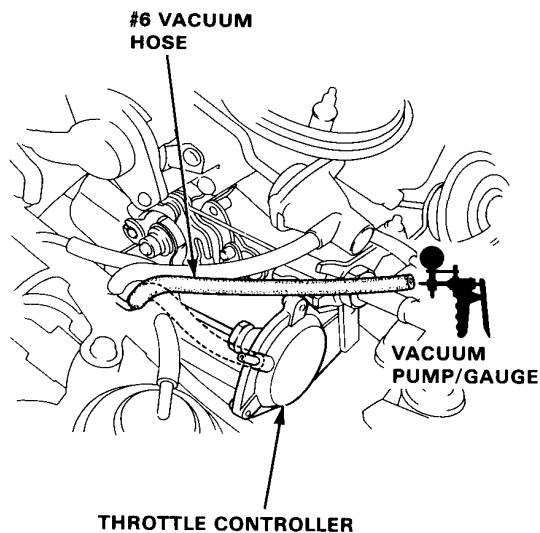

- If there is no vacuum, check the #6 vacuum hose for proper connection, cracks, brockage or disconnected hose.
- If there is vacuum, replace the throttle controller and retest.

3. Reconnect the #6 vacuum hose and check the idle speed. Idle speed should be within specification (page 6-43).


Emission Control System

Evaporative Emission Controls

Testing (COLD ENGINE)

NOTE: Engine coolant temperature must be below 63 °C (145°F)

1. Disconnect the #19 vacuum hose at purge control diaphragm valve and connect vacuum pump/gauge to the hose.

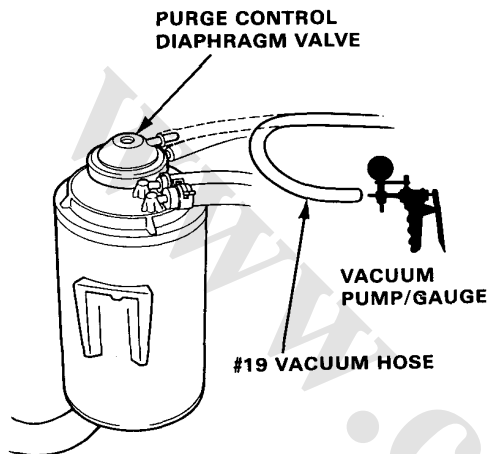


2. Start the engine and allow to idle.

There should be no vacuum.

- If there is no vacuum, go to hot engine test (next column).
- If there is vacuum, go to troubleshooting (page 6-62).

Testing (HOT ENGINE)

1. Disconnect the #19 vacuum hose at the purge control diaphragm valve and connect a vacuum pump/gauge to the hose.

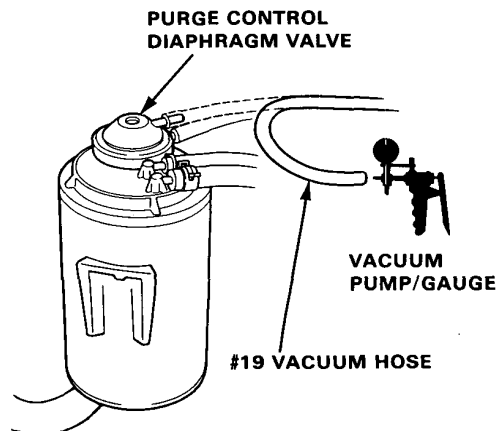

2. Start the engine and warm up to normal operating temperature (the cooling fan comes on). Block rear wheels and set the parking brake. Jack up the front of the car and support with safety stands.

⚠ WARNING Block rear wheels before jacking up front of car.

Place the shift or selector lever in 2nd gear or "2" range and accelerate above 5 km/h, 2,000 min⁻¹ (rpm).


There should be vacuum.

- If there is vacuum, go to step 3.
- If there is no vacuum, check the #19 and #12 vacuum line for proper connection, cracks, blockage or disconnected hose. If OK, go to troubleshooting (page 6-62).

3. Disconnect a vacuum pump/gauge and reconnect hose.
4. Remove fuel filler cap.



5. Remove the canister purge air hose from frame and connect hose to a vacuum gauge as shown.

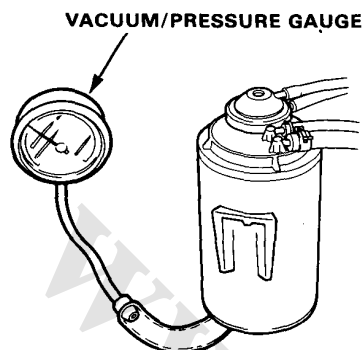

6. Place the shift or selector lever in 2nd gear or "2" range and raise the engine speed to 3,500 min^{-1} (rpm). Vacuum should appear on the gauge within 1 minute.


- If vacuum appears on the gauge in 1 minute, remove the gauge and go on to step 8.
- If no vacuum, disconnect the vacuum gauge and reinstall the fuel filler cap.

7. Remove the charcoal canister and check for signs of damage.

- If damaged, replace the canister.
- If OK, go on to step 8.

8. Stop the engine. Disconnect the hose from the canister PCV fitting. Connect a vacuum pump to the canister PURGE fitting as shown, and apply vacuum.

Vacuum should remain steady.

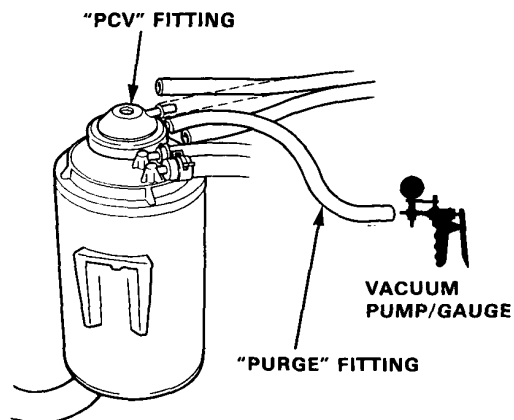

- If vacuum remains steady, go on to step 9.
- If vacuum drops, replace the canister and retest.


9. Restart the engine. Reconnect the hose to the canister PCV fitting, and raise engine to 3,500 min^{-1} (rpm) (in 2nd gear or "2" range).

PURGE side vacuum should drop to zero.

- If PURGE side vacuum does not drop to zero, replace the canister and retest.

10. Connect a vacuum pump to TANK fitting as shown, and apply vacuum.

If should not hold vacuum.

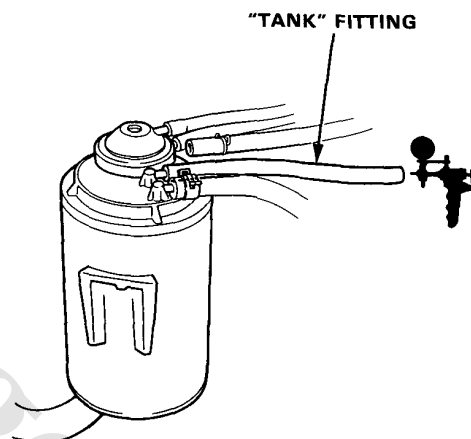

- If it does not hold vacuum, reinstall fuel filler cap and canister; test is complete.
- If it holds vacuum, replace canister and retest.

Emission Control System

Evaporative Emission Controls (cont'd)

Troubleshooting Flowchart Purge Cut-off Solenoid Valve

Inspection of Purge Cut-off Solenoid valve.

Open the control box.

Disconnect the lower vacuum hose of the solenoid valve from the joint and connect a vacuum pump.

Disconnect #19 vacuum hose of the solenoid valve from the vacuum hose manifold and connect a vacuum gauge.

Start the engine.

Apply vacuum.


Is vacuum indicated on the gauge ?

NO

Block rear wheels and set the parking brake. Jack up the front of the car and support with safety stand.

Place the shift or selector lever in second or "2" and accelerate above 5 km/h, 2,000 min⁻¹ (rpm).

(To page 6-63)

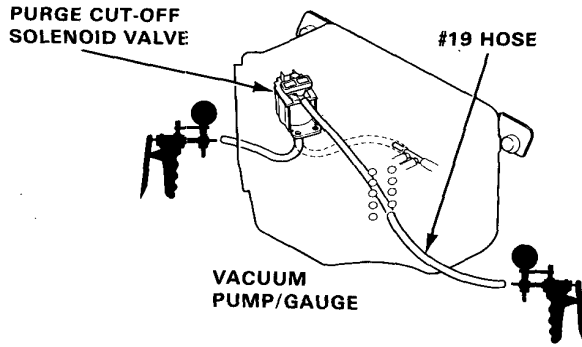

Turn the ignition switch OFF.

Disconnect the connector on the control box.

Start the engine.


Measure voltage between ORN (+) and BLK (-) terminals.

Is there battery voltage ?

NO


Measure voltage between ORN (+) and body ground.

(To page 6-63)

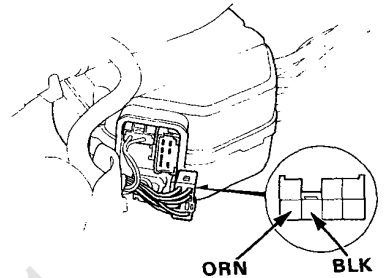

Replace the solenoid valve.

WARNING Block rear wheels before jacking up front of car.

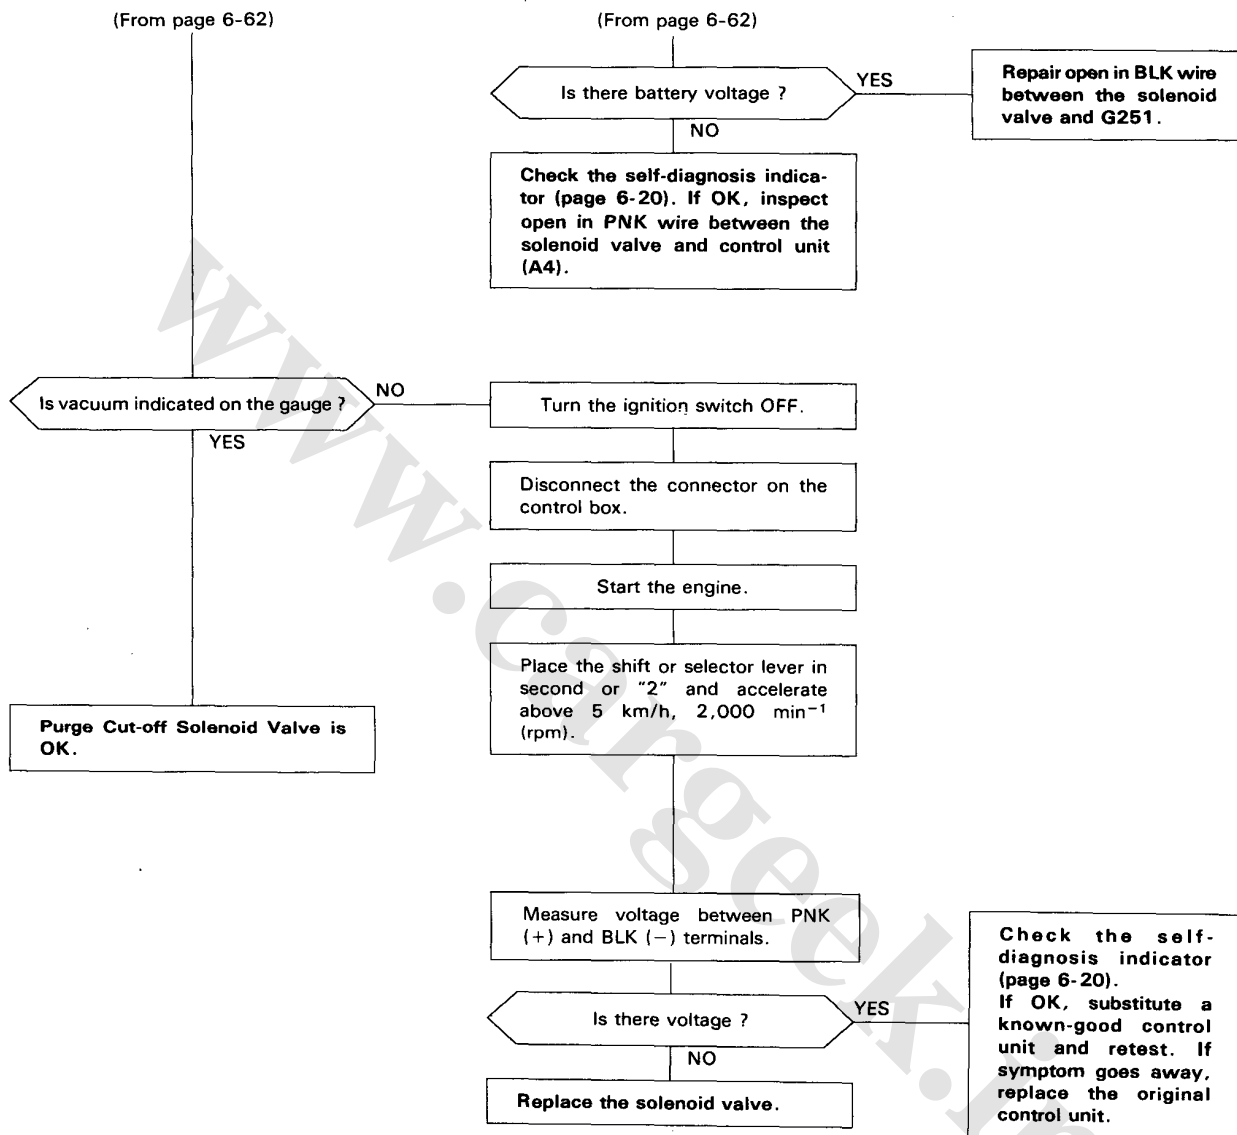


- Special Tools
- Component Locations
- Index
- System Description
- Vacuum Connections
- Troubleshooting
 - Troubleshooting Guide (With CATA)
 - Troubleshooting Guide (Without CATA)
 - Self-diagnostic Procedures
- PGM-CARB Control System
- Troubleshooting Flow Charts
 - Oxygen Sensor
 - Oxygen Sensor Heater
 - Manifold Absolute Pressure Sensor
 - TDC/CRANK/CYL Sensors
- Idle Control System
 - Idle Speed Setting
- Fuel Supply System
 - System Troubleshooting Guide
 - Fuel Pressure
 - Pressure Regulator
 - Fuel Filter
- Air Intake System
 - System Troubleshooting Guide
 - Bypass Control System
- Emission Control System
 - System Troubleshooting Guide
 - Tailpipe Emissions
 - Exhaust Gas Recirculation System

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07LAA-PT50100	O ₂ Sensor Socket Wrench	1	
②	07LAJ-PT30100	ECU Test Harness	1	
③	07LAJ-PT30200	Test Harness	1	
④	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
⑤	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
⑤-1	07LAZ-PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑤-2	07LAZ-PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑥	07406-0040001	Fuel Pressure Gauge Set	1	
⑥-1	07406-0040100	Pressure Gauge	(1)	Component Tools
⑥-2	07406-0040201	Hose Assembly	(1)	
⑦	07411-0020000	Digital Circuit Tester	1	

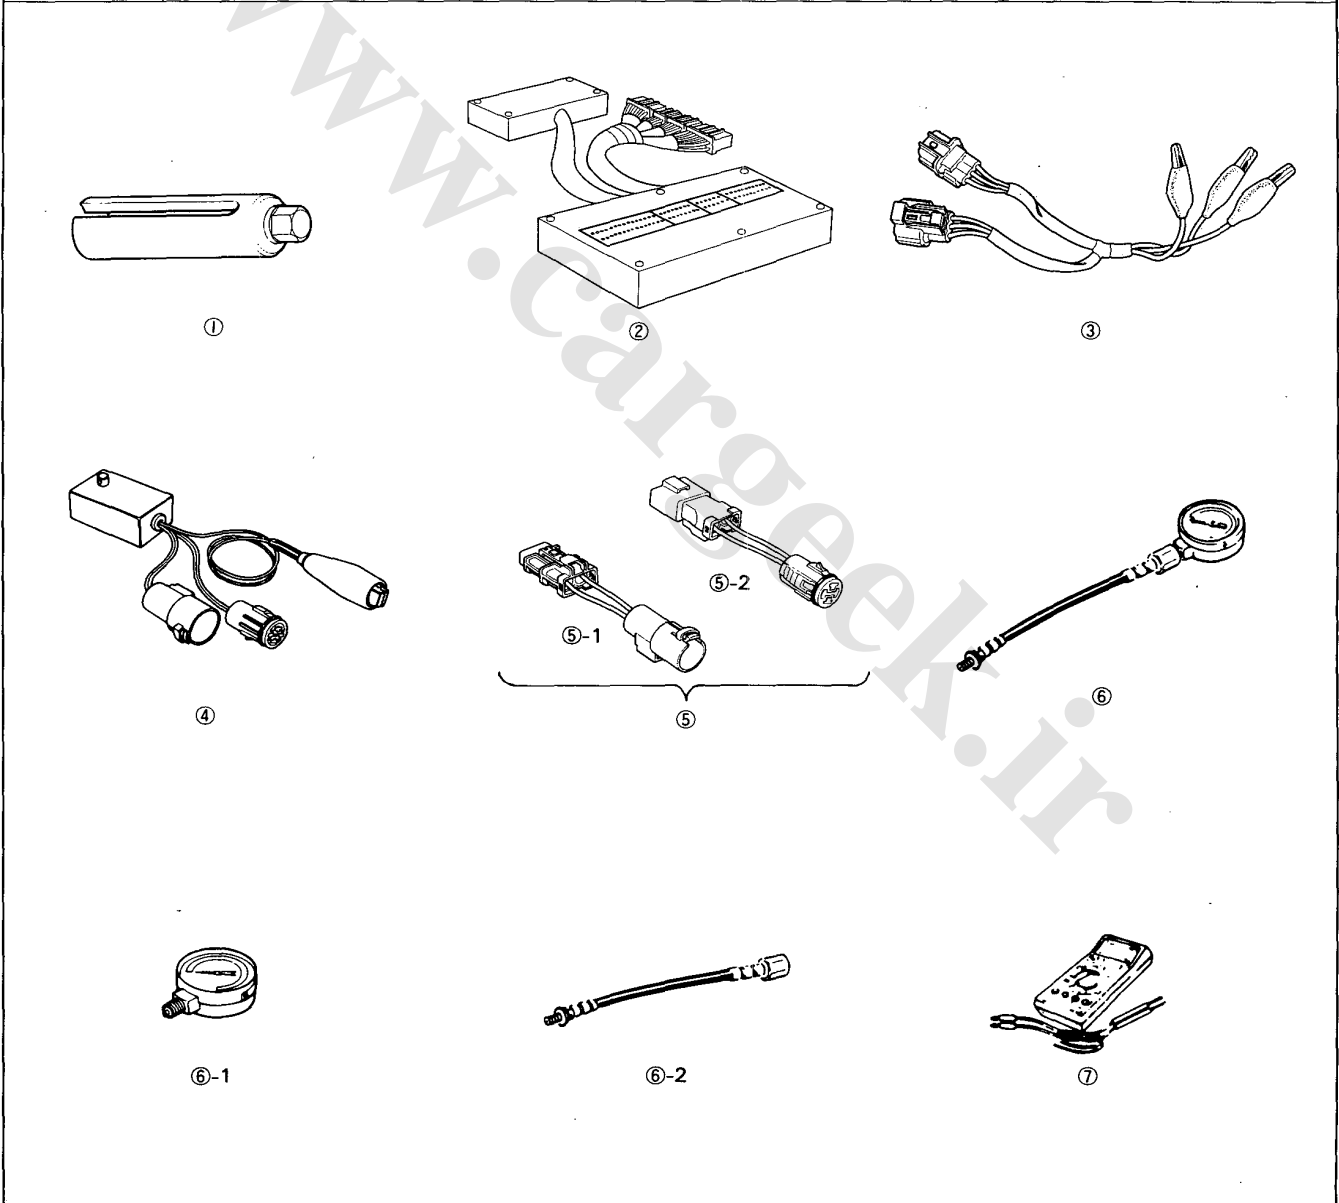





Component Locations

Index

2.2 l except KY:

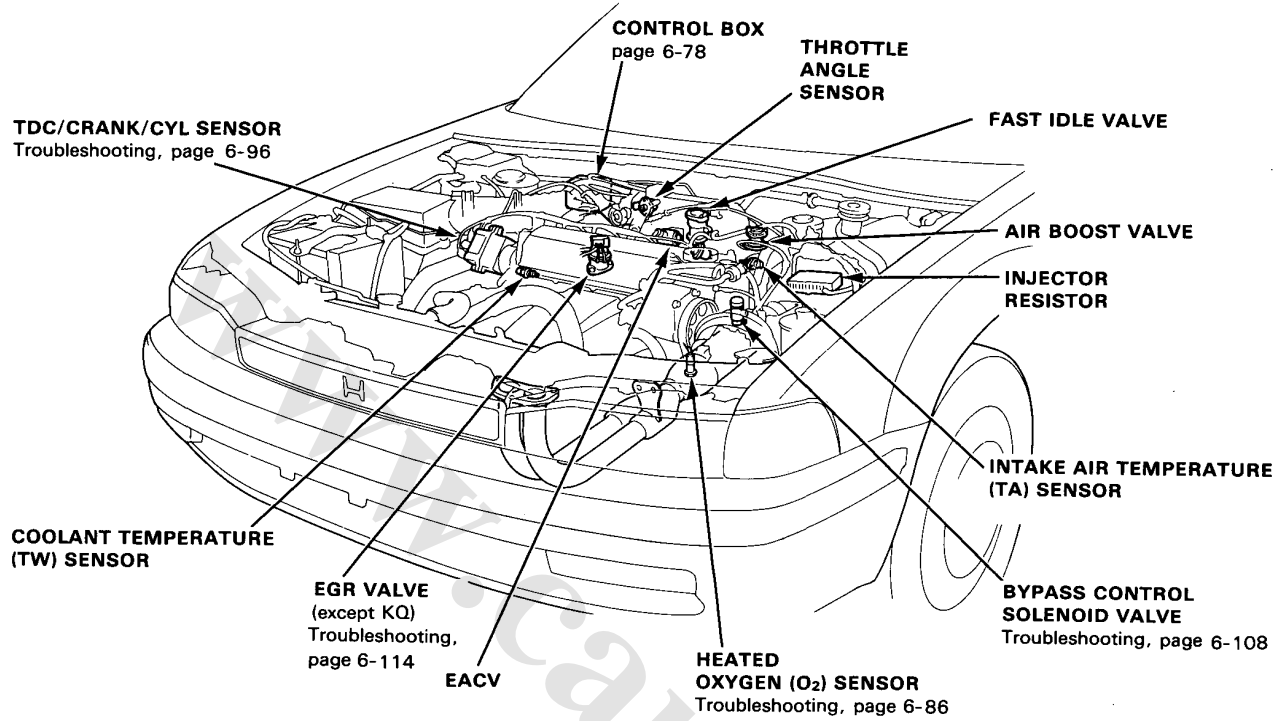


2.2 l KY:

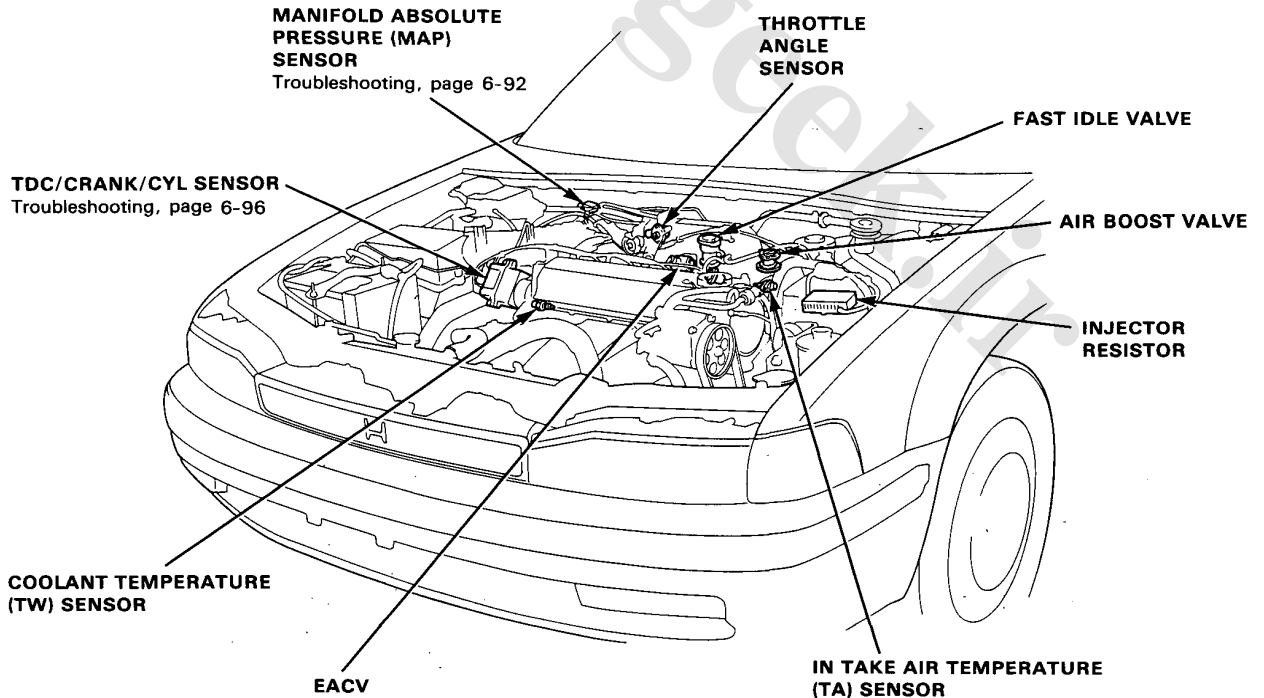

System Description

Vacuum Connections

2.0 l with CATA:

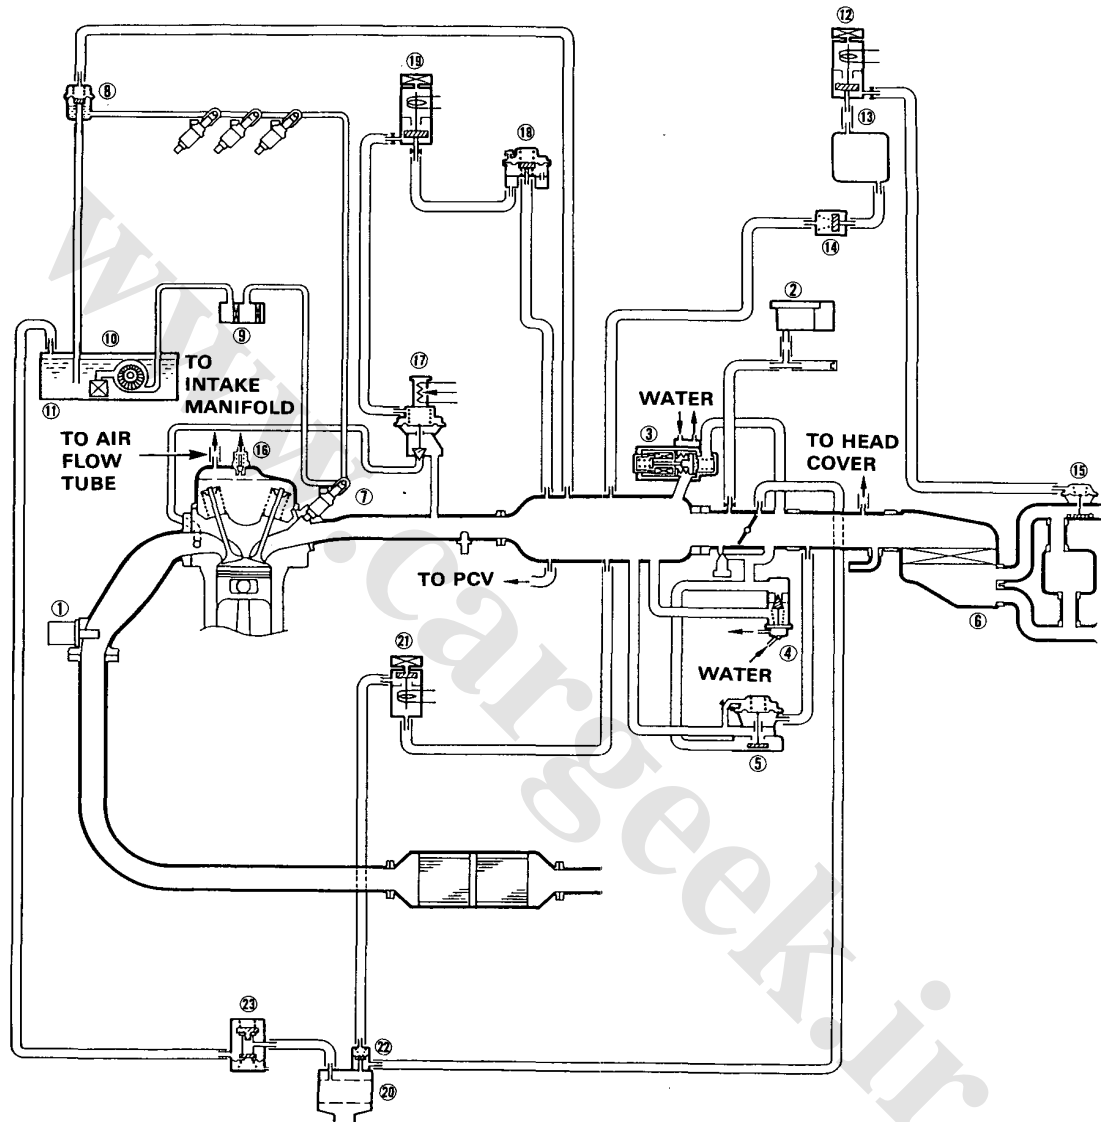





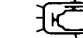

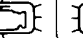




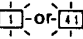
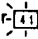
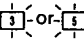
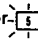
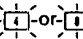
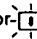
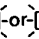

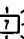
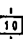
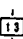
- ① OXYGEN (O₂) SENSOR
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR BOOST VALVE
- ⑥ AIR CLEANER
- ⑦ FUEL INJECTOR
- ⑧ PRESSURE REGULATOR
- ⑨ FUEL FILTER
- ⑩ FUEL PUMP
- ⑪ FUEL TANK
- ⑫ INTAKE CONTROL SOLENOID VALVE

- ⑬ AIR CHAMBER
- ⑭ CHECK VALVE
- ⑮ INTAKE CONTROL DIAPHRAGM
- ⑯ PCV VALVE
- ⑰ EGR VALVE
- ⑱ CONSTANT VACUUM CONTROL (CVC) VALVE
- ⑲ EGR CONTROL SOLENOID VALVE
- ⑳ CHARCOAL CANISTER
- ㉑ PURGE CUT-OFF SOLENOID VALVE
- ㉒ PURGE CONTROL DIAPHRAGM VALVE
- ㉓ TWO-WAY VALVE

Troubleshooting

Troubleshooting Guide [With CATA]

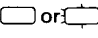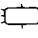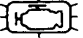NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.




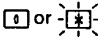

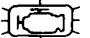
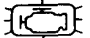

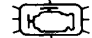




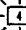
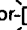
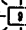
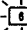
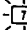
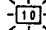
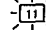
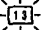
PAGE	SYSTEM	PGM-FI							
		ECU	OXYGEN SENSOR	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	ATMO-SPHERIC PRESSURE SENSOR
	SYMPTOM	—	86,90	92	96	—	—	—	—
	CHECK ENGINE WARNING LIGHT TURNS ON	 or 							
	CHECK ENGINE WARNING LIGHT BLINKS	 or 	 or 	 or 	 or  or 				
	ENGINE WON'T START	③			③				
	DIFFICULT TO START ENGINE WHEN COLD	BU		③	③	①			③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	BU				③			
	ROUGH IDLE	BU		③					
	WHEN WARM IDLE SPEED TOO HIGH	BU							
	WHEN WARM IDLE SPEED TOO LOW	BU							
FREQUENT STALLING	WHILE WARMING UP	BU				③			
	AFTER WARMING UP	BU							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	BU			③				
	FAILS EMISSION TEST	BU	③	②					
	LOSS OF POWER	BU		③			②		

- if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.
- BU: When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.

Troubleshooting

Troubleshooting Guide [Without CATA]

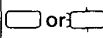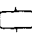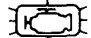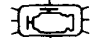NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

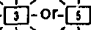PAGE	SYSTEM	PGM-FI							
		ECU	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	IMA SENSOR	ATMO-SPHERIC PRESSURE SENSOR
	SYMPTOM	---	92	96	---	---	---	---	---
	CHECK ENGINE WARNING LIGHT TURNS ON	 or 							
	CHECK ENGINE WARNING LIGHT BLINKS	 or 	 or 	 or  or 					
	ENGINE WON'T START	③		③					
	DIFFICULT TO START ENGINE WHEN COLD	(BU)	③	③	①				③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	(BU)			③				
	ROUGH IDLE	(BU)	③						
	WHEN WARM IDLE SPEED TOO HIGH	(BU)							
	WHEN WARM IDLE SPEED TOO LOW	(BU)							
FREQUENT STALLING	WHILE WARMING UP	(BU)			③				
	AFTER WARMING UP	(BU)							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)		③					
	FAILS EMISSION TEST	(BU)	②						
	LOSS OF POWER	(BU)	③				②		

• if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.

(BU): When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.




IGNITION OUTPUT SIGNAL	PGM-FI			IDLE CONTROL		FUEL SUPPLY	AIR INTAKE	EMISSION CONTROL
	VEHICLE SPEED SENSOR	A/T FI Signal A	A/T FI Signal B	ELECTRONIC AIR CONTROL VALVE	OTHER IDLE CONTROLS			
—	—	—	—	—	—	103	107	112
①						②		
					②			
				①	②			
				①		②		
				①	②			
				①		②		
				①	②	③		
				③	①	②		
				③		①		
						③		①
						①	③	③

Troubleshooting


Self-diagnostic Procedures

I. When the Check Engine warning light has been reported on, do the following:

1. Connect the Service Check Connector terminals with a jumper wire as shown (the Service Check Connector is located under the dash on the passenger side of the car).

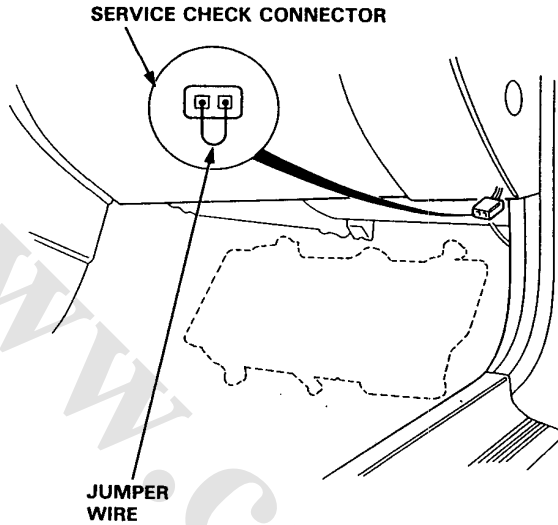

2. Note the CODE: the Check Engine warning light indicates a failure code by blinking frequency. The Check Engine warning light can indicate any number of simultaneous component problems by blinking separate codes, one after another. Problem codes 1 through 9 are indicated by a individual short blinks. Problem codes 10 through 43 are indicated by a series of long and short blinks. The number of long blinks equals the first digit, the number of short blinks equals the second digit.

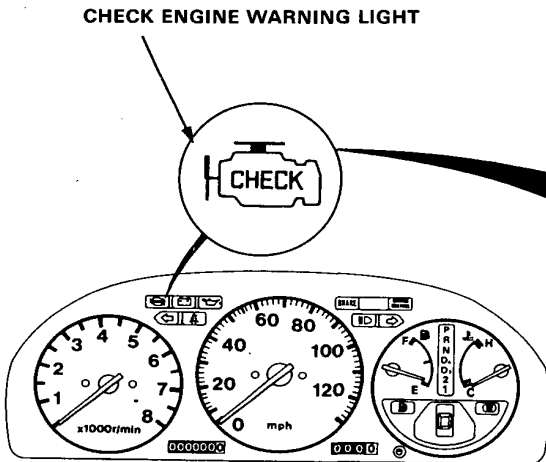

Separate Problems:

Short

- = See Problem CODE 1
- = See Problem CODE 3
- = See Problem CODE 13

Long short

Simultaneous Problems:


- = See Problem CODE 1 and 3
- = See Problem CODE 3 and 4
- = See Problem CODE 3 and 14



II. ECU Reset Procedure

1. Turn the ignition switch off.
2. Remove the Back Up fuse (7.5 A) from the under-hood fuse/relay box for 10 seconds to reset ECU.

NOTE: Disconnecting the Back Up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you reset them.

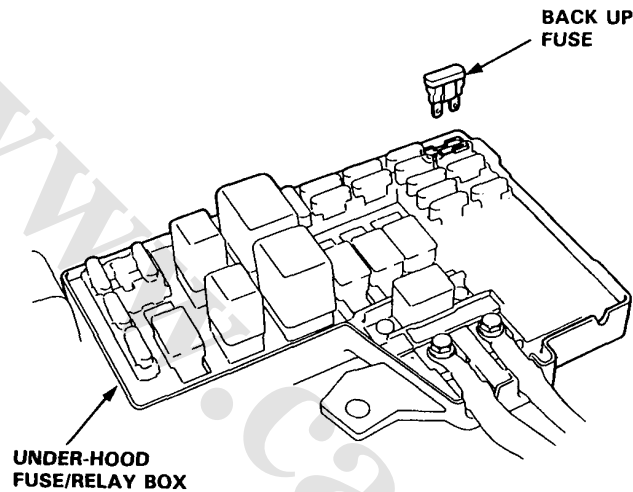

III. Final Procedure (this procedure must be done after any troubleshooting)

1. Remove the Jumper Wire.

NOTE: If the Service Check Connector is jumped the Check Engine warning light will stay on.

2. Do the ECU Reset Procedure.
3. Set the radio preset stations and the clock setting.

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor



Self-diagnosis Check Engine warning light indicates code 1: A problem in the Heated Oxygen (O₂) Sensor circuit.



— Check Engine warning light has been reported on, with service check connector jumped (page 6-84) CODE 1 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Inspect fuel pressure (page 6-104).

Is it normal ?

NO

Go to page 6-103 Fuel Supply System.

YES

Warm up engine to normal operating temperature (cooling fan comes on).

Run engine for 10 seconds.

Road test with the Transmission in 2nd gear, accelerate using wide open throttle for at least 5 seconds. Then decelerate for at least 5 seconds with the throttle completely closed.

Is Check Engine warning light on and does it indicate CODE 1 ?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires.

YES

(To page 6-87)



(From page 6-86)

Turn the ignition switch OFF.

Disconnect the O₂ sensor connector and connect A (-) terminal to B (+) terminal with a battery.

After two minutes, measure voltage between C (-) terminal and D (+) terminal.

Start the engine.

Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and below 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Replace O₂ sensor.

YES


Stop engine.

Connect the O₂ sensor connector to engine wire harness.

Connect the ECU test harness between the ECU and connector

(To page 6-88)


2.2 l :

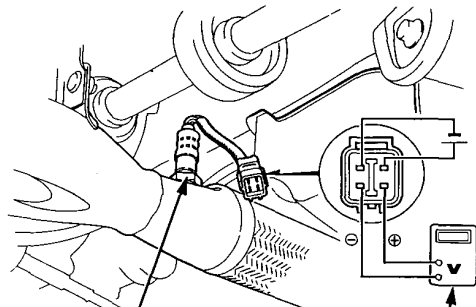

O₂ SENSOR
45 N·m (4.5 kg·m, 33 lb-ft)

DIGITAL MULTIMETER
07411-0020000


2.0 l :

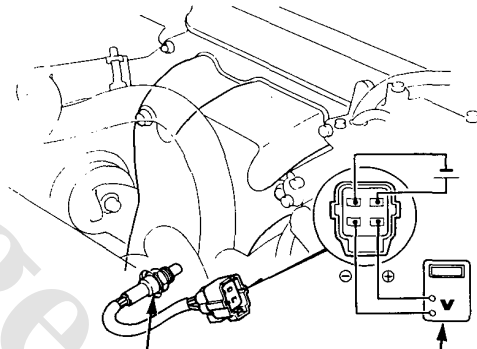

O₂ SENSOR

DIGITAL MULTIMETER

2.0 l :

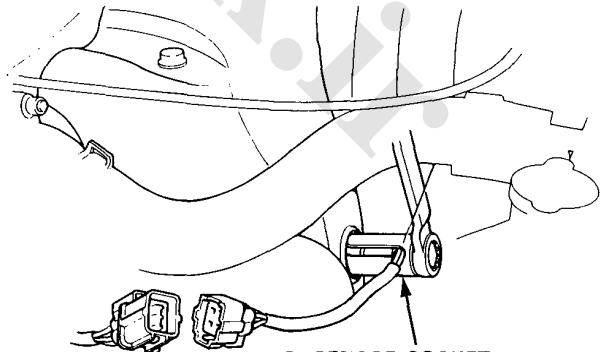

O₂ SENSOR SOCKET
WRENCH
07LAA-PT50100
45 N·m (4.5 kg·m, 33 lb-ft)

(cont'd)

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor (cont'd)

(From page 6-87)

Restart and warm up engine to normal operating temperature (cooling fan comes on).

Measure voltage between D14 (+) and A26 (-) terminal.


Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Repair short or open in WHT wire between ECU (D14) and O₂ sensor.


YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.




PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor Heater



Self-diagnosis Check Engine warning light indicates code 41: A problem in the Oxygen (O₂) Sensor Heater circuit.



2.2 l :

—Engine is running.
—Check Engine warning light has been reported on, with service check connector jumped (page 6-84), CODE 41 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does it indicate CODE 41 ?

NO
Intermittent failure, system is OK at this time (test driving may be necessary). Check for poor connections or loose wires at O₂ sensor connector.

YES
Stop engine.

Disconnect the 4P connector from the O₂ sensor.

Measure resistance between terminals A and B on the O₂ sensor.

Is there 10–40 Ω ?

NO
Replace O₂ sensor.

YES
Check for continuity to body ground on each terminal on the O₂ sensor.

Does continuity exist ?

YES
Replace O₂ sensor.


NO
Check for continuity between terminal A and terminals C and D individually.

Does continuity exist ?


YES
Replace O₂ sensor.


(To page 6-91)

O₂ SENSOR
45N·m(45kg·m, 33ft·lb)

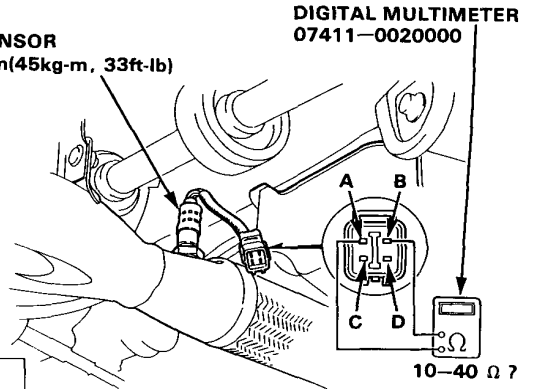

2.0 l :

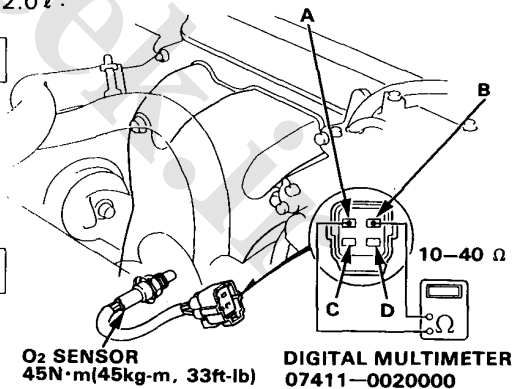

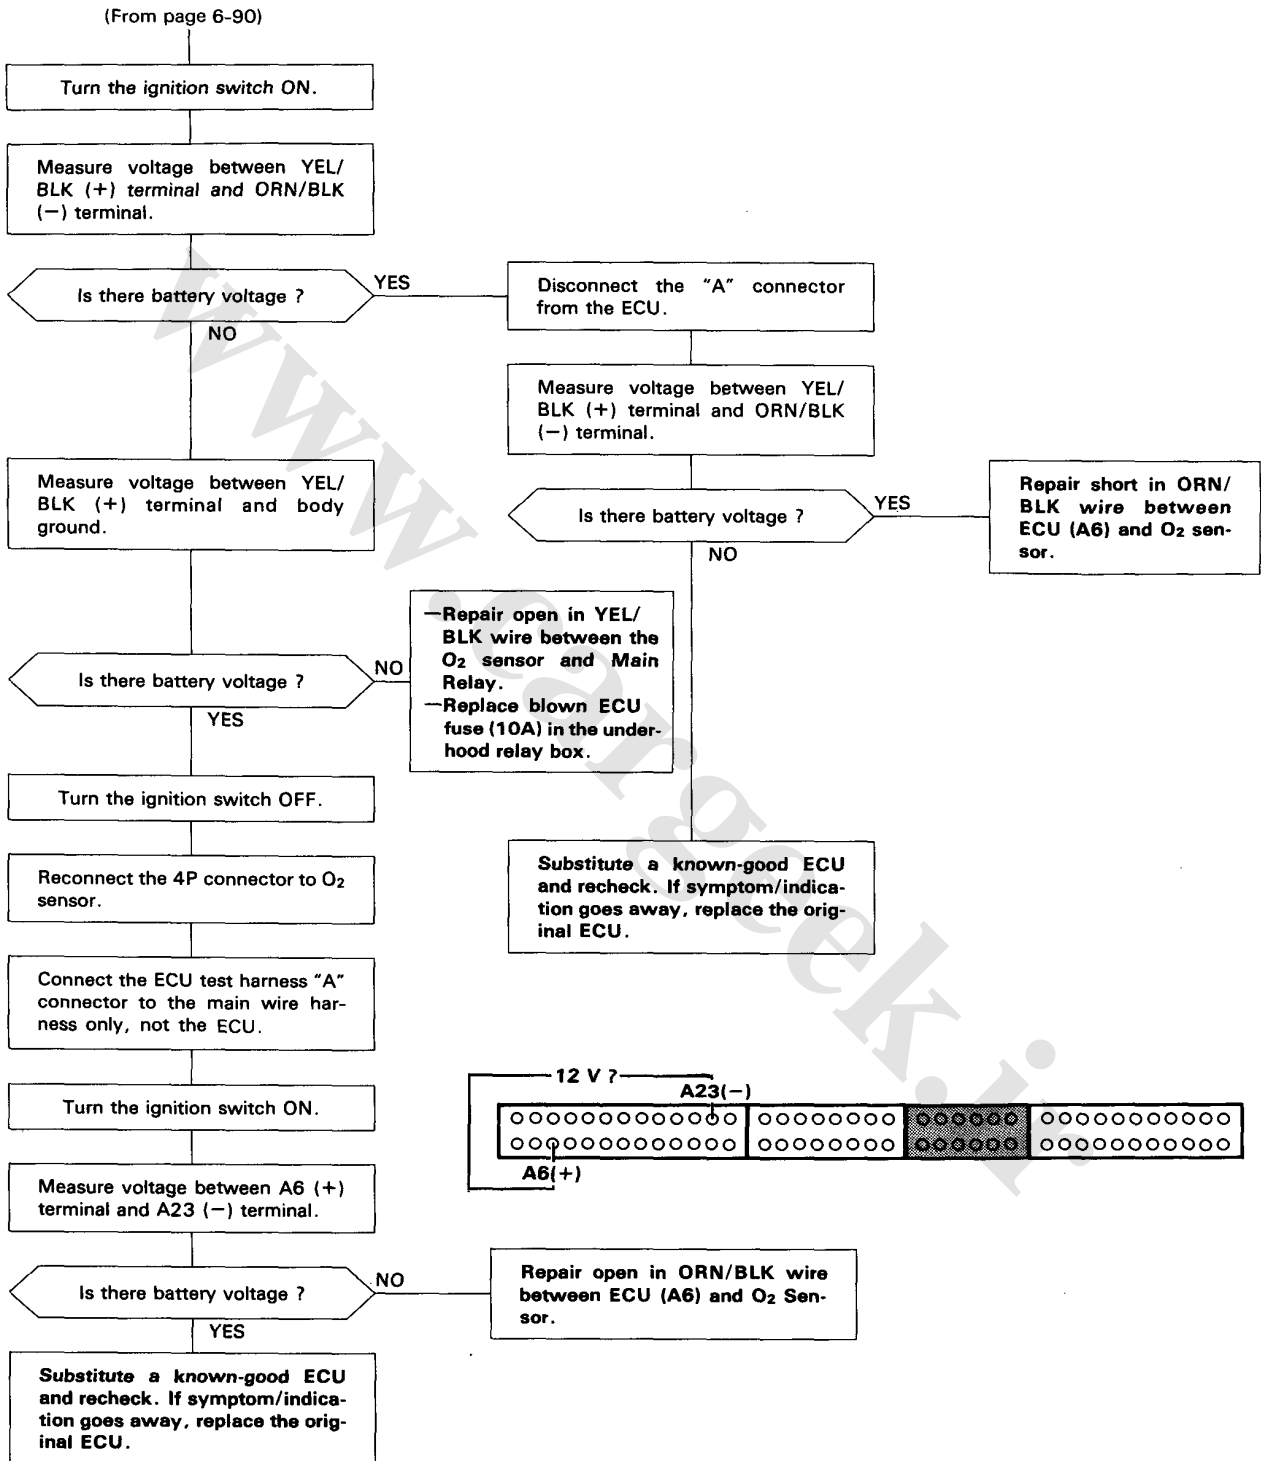


PGM-FI Control System


Troubleshooting Flowchart — MAP Sensor



Self-diagnosis Check Engine warning light indicates code 3: Most likely an electrical problem in the Manifold Absolute Pressure (MAP) Sensor system.




Self-diagnosis Check Engine warning light indicates code 5: Most likely a mechanical problem (broken hose) in the Manifold Absolute Pressure (MAP) Sensor system.



—Engine is warm and running.
—Check Engine warning light has been reported on, with service check connector jumped (page 6-84), CODE 3 is indicated.

2.0 l WITH CATA AND
2.2 l EXCEPT KE, KQ, KY :

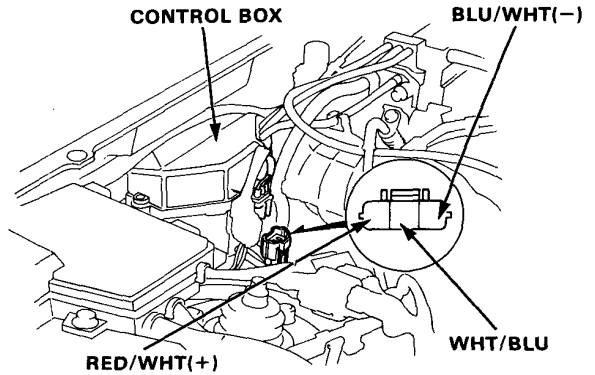

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Warm up engine to normal operating temperature (cooling fan comes on).

Is Check Engine warning light on and does it indicate CODE 3 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connection or loose wires at MAP sensor connector and ECU.


YES

Turn the ignition switch OFF.

Disconnect the 3P connector from the MAP sensor.


Turn the ignition switch ON.

(To page 6-93)

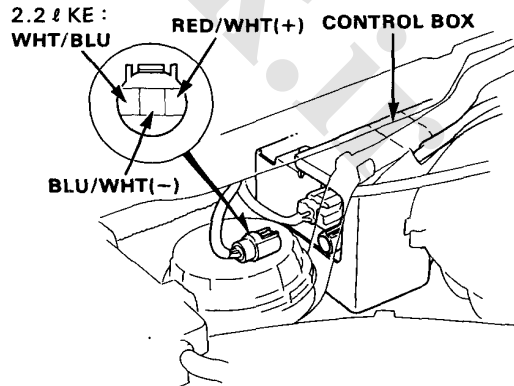



2.0L WITHOUT CATA AND
2.2L KQ, KY :

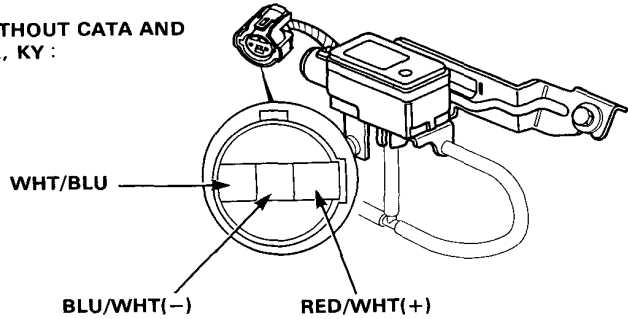

(From page 6-92)

Measure voltage between RED/
WHT (+) terminal and body
ground.

Is there approx. 5 V ?

**Repair open in RED/WHT wire
between ECU (D19) and MAP
sensor.
If wire is OK, substitute a
known-good ECU and recheck. If
prescribed voltage is now avail-
able, replace the original ECU.**

Measure voltage between RED/
WHT (+) terminal and BLU/WHT
(-) terminal.

Is there approx. 5 V ?

**Repair open in BLU/
WHT wire between
ECU (D21) and MAP
sensor.
If wire is OK, substi-
tute a known-gttd ECU
and recheck. If pre-
scribed voltage is now
available, replace the
original ECU.**

Measure voltage between WHT/
BLU (+) terminal and BLU/WHT
(-) terminal.

Is there approx. 5 V ?

**Repair open or short in
WHT/BLU wire
between ECU (D17)
and MAP sensor.
If wire is OK, substi-
tute a known-good
ECU and recheck. If
prescribed voltage is
now available, replace
the original ECU.**

Turn the ignition switch OFF.

Reconnect the 3P connector to
the MAP sensor.

Connect the ECU test harness
between the ECU and connector.


Turn the ignition switch ON.

(To page 6-94)

(cont'd)

PGM-FI Control System


Troubleshooting Flowchart — TDC/CRANK/CYL Sensors




Self-diagnosis Check Engine warning light indicates code 4: A problem in the circuit of the CRANK Sensor.



Self-diagnosis Check Engine warning light indicates code 8: A problem in the circuit of the TDC Sensor.



Self-diagnosis Check Engine warning light indicates code 9: A problem in the circuit of the CYL Sensor.



—Check Engine warning light has been reported on, with service check connector jumped (page 6-84), CODE 4 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does it indicate CODE 4 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at distributor connector.

YES

Stop engine.

Disconnect the 8P connector from the TDC/CRANK/CYL sensor.

Measure resistance between B terminal and F terminal.


Is there 260–500 Ω ?

NO

Replace the distributor assembly (section 16).

YES

(To page 6-97)

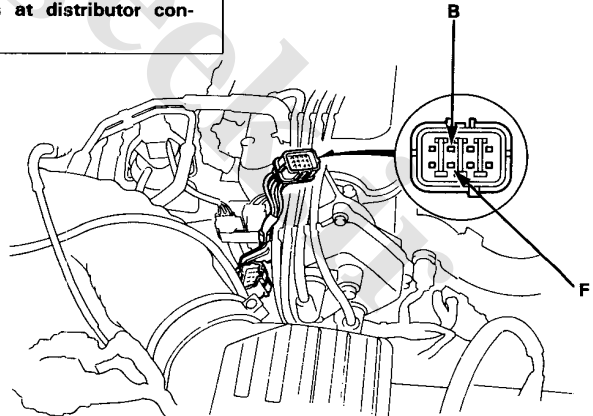



(From page 6-96)

Check for continuity to body ground on B terminal and F terminal individually.

Does continuity exist ?

YES


Replace the distributor assembly (section 16).

NO

Reconnect the connector.

Connect the ECU test harness only to the main wire harness, not to the ECU .

Measure resistance between B15 terminal and B16 terminal.

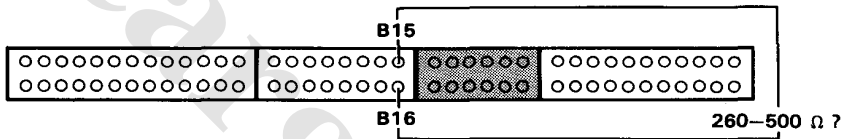

Is there 260-500 Ω ?

NO

Repair open in BLU/GRN and/or BLU/YEL wires.

YES

Check for continuity to body ground on B15 terminal.

Does continuity exist ?

YES

Repair short in BLU/GRN wire between ECU (B15) and distributor connector.

NO

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

(Cont'd)

PGM-FI Control System

Troubleshooting Flowchart — TDC/CRANK/CYL Sensors (cont'd)



—Check Engine warning light has been reported on, with service check connector jumped (page 6-84), CODE 8 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does it indicate CODE 8 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at distributor connector.

YES

Stop engine.

Disconnect the 8P connector from the TDC/CRANK/CYL sensor.

Measure resistance between C terminal and G terminal.

Is there 260–500 Ω ?

NO

Replace the distributor assembly (section 16).

YES

Check for continuity to body ground on C terminal and G terminal individually.

Does continuity exist ?


YES

Replace the distributor assembly (section 16).

NO

Reconnect the connector.

(To page 6-99)

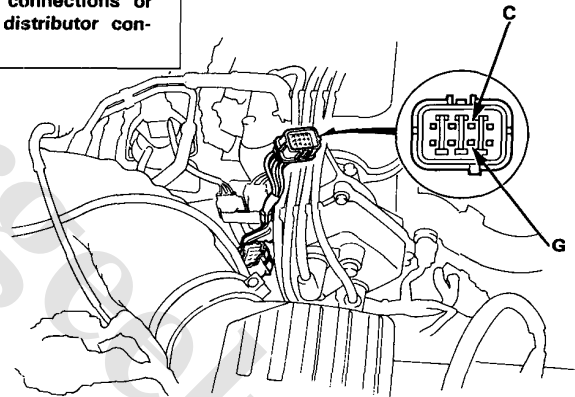




(From page 6-98)

Connect the ECU test harness only to the main wire harness, not to the ECU.

Measure resistance between B13 terminal and B14 terminal.

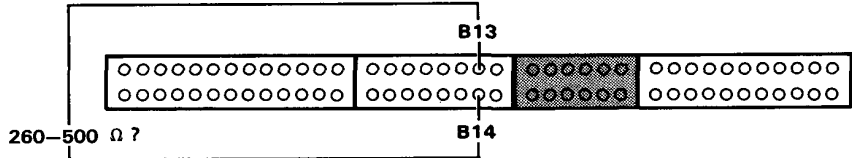

Is there 260-500 Ω ?

NO

Repair open in ORN/BLU and/or WHT/BLU wires.

YES

Check for continuity to body ground on B13 terminal.

Does continuity exist ?

YES

Repair short in ORN/BLU wire between ECU (B13) and distributor connector.


NO

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

(Cont'd)

PGM-FI Control System

Troubleshooting Flowchart — TDC/CRANK/CYL Sensors (cont'd)



—Check Engine warning light has been reported on, with service check connector jumped (page 6-84), CODE 9 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does it indicate CODE 9 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary).
Check for poor connections or loose wires at the distributor connector.

YES

Stop engine.

Disconnect the 8P connector from the TDC/CRANK/CYL sensor.

Measure resistance between D terminal and H terminal.

Is there 260–500 Ω ?

NO

Replace the distributor assembly (section 16).

YES

Check for continuity to body ground on D terminal and H terminal individually.

Does continuity exist ?


YES

Replace the distributor assembly (section 16).

NO

Reconnect the connector.

(To page 6-101)

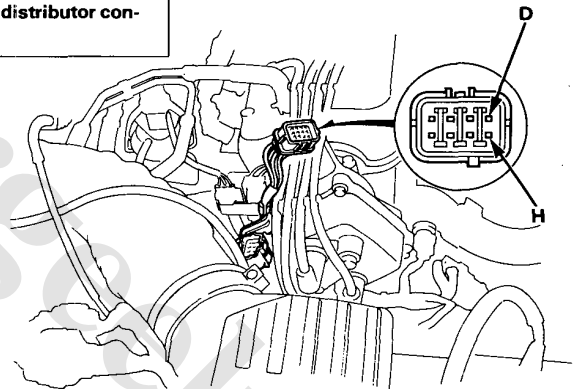




(From page 6-100)

Connect the ECU test harness only to the main wire harness, not to the ECU.

Measure resistance between B11 terminal and B12 terminal.

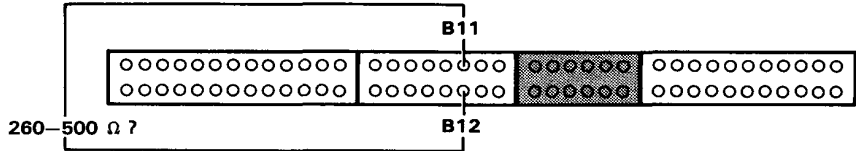

Is there 260-500 Ω ?

NO

Repair open in ORN and/or WHT wires.

YES

Check for continuity to body ground on B11 terminal.

Does continuity exist ?

YES

Repair short in ORN wire between ECU (B11) and distributor connector.

NO


Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.

Idle Control System


Idle Speed Setting

Inspection/Adjustment

1. Start the engine and warm it up to normal operating temperature (the cooling fan comes on).
2. Connect a tachometer.

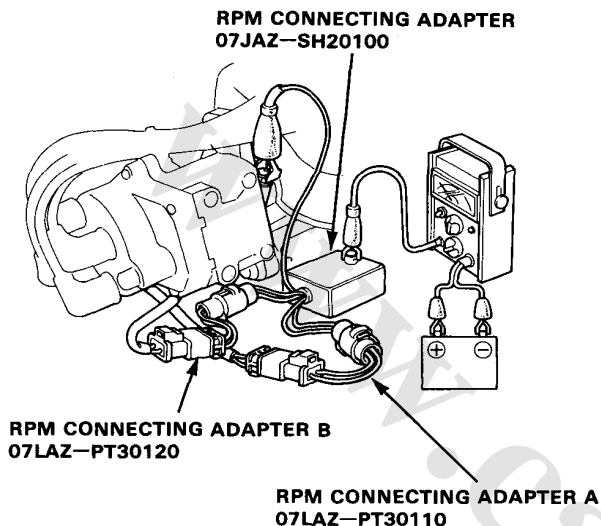

3. Disconnect the 2P connector from the EACV.

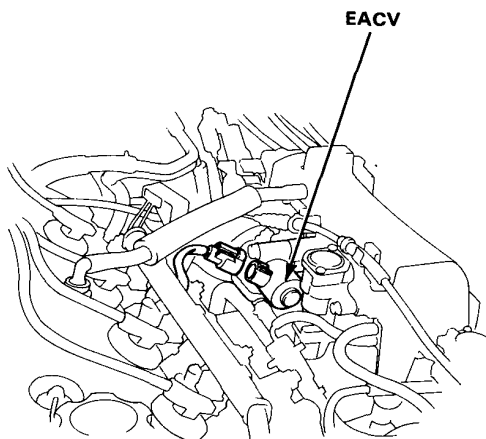


4. Check idling in no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating.

Idle speed should be:

Manual	620±50 min ⁻¹ (rpm)
Automatic	620±50 min ⁻¹ (rpm) (N) or (P)

Adjust the idle speed, if necessary, by turning the idle adjusting screw.

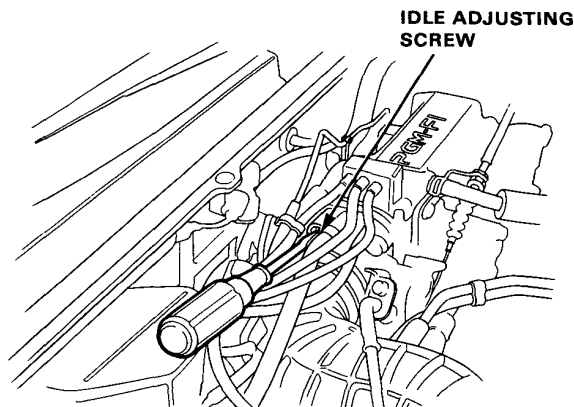

5. Turn the ignition switch OFF.
6. Reconnect the 2P connector on the EACV, then remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.
7. Restart an idle the engine with no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating for one minute, then check the idle speed.

Idle speed should be:

Manual	770±50 min ⁻¹ (rpm)
Automatic	770±50 min ⁻¹ (rpm) (N) or (P)

8. Idle the engine for one minute with headlights (Hi) and rear defogger ON and check the idle speed.

Idle speed should be:

Manual	770±50 min ⁻¹ (rpm)
Automatic	770±50 min ⁻¹ (rpm) (N) or (P)

9. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:

Manual	770±50 min ⁻¹ (rpm)
Automatic	770±50 min ⁻¹ (rpm) (N) or (P)

NOTE: If the idle speed is not within specifications, see System Troubleshooting Guide.



Fuel Supply System

Symptom Troubleshooting Guide

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SUB SYSTEM	FUEL INJECTOR	INJECTOR RESISTOR	PRESSURE REGULATOR	FUEL FILTER	FUEL PUMP	MAIN RELAY	CONTAMINATED FUEL
		—	—	105	106	—	—	*
ENGINE WON'T START		③	③		③	①	②	③
DIFFICULT TO START ENGINE WHEN COLD OR HOT								①
ROUGH IDLE		①	②					③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	①	②	③				③
	FAILS EMISSION TEST	②	③	①				
	LOSS OF POWER	③	③		①	③		②

* Fuel with dirt, water or a high percentage of alcohol is considered contaminated.

Fuel Supply System

Fuel Pressure


Relieving

⚠ WARNING

- Do not smoke while working on the fuel system. Keep open flames or sparks away from the work area.
- Be sure to relieve fuel pressure while the engine is off.

NOTE: Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the 6 mm service bolt at the fuel pipe.

1. Remove fuel filter cap.
2. Disconnect the battery negative cable from the battery negative terminal.
3. Use a box end wrench on the 6 mm service bolt at the fuel pipe, while holding the special banjo bolt with another wrench.
4. Place a rag or shop towel over the 6 mm service bolt.
5. Slowly loosen the 6 mm service bolt one complete turn.

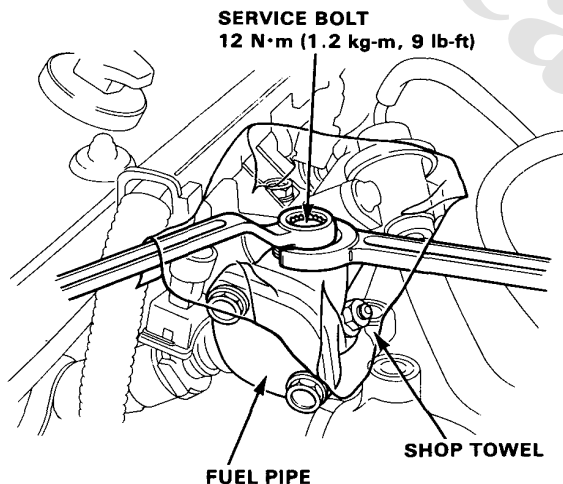

NOTE:

- A fuel pressure gauge can be attached at the 6 mm service bolt hole.
- Always replace the washer between the service bolt and the special banjo bolt, whenever the service bolt is loosened to relieve fuel pressure.
- Replace all washers whenever the bolts are removed to disassemble parts.

Inspection

1. Relieve fuel pressure.
2. Remove the service bolt on the fuel pipe while holding the banjo bolt with another wrench and attach the fuel pressure gauge.
3. Start the engine. Measure the fuel pressure with the engine idling and vacuum hose of the pressure regulator disconnected.

Pressure should be:


(2.2 ℓ : KS, KX, KG, KE, KF, KY, 2.0 ℓ)
 235–284 kPa (2.4–2.9 kg/cm², 34–41 psi)
 (KQ)
 265–314 kPa (2.7–3.2 kg/cm², 38–46 psi)

4. Reconnect vacuum hose to the pressure regulator.

Pressure should be:

(2.2 ℓ : KS, KX, KG, KE, KF, KY)
 176–225 kPa (1.8–2.3 kg/cm², 26–33 psi)
 (KQ, 2.0 ℓ)
 196–245 kPa (2.1–2.6 kg/cm², 28–36 psi)

FUEL PRESSURE GAUGE 07406–0040001

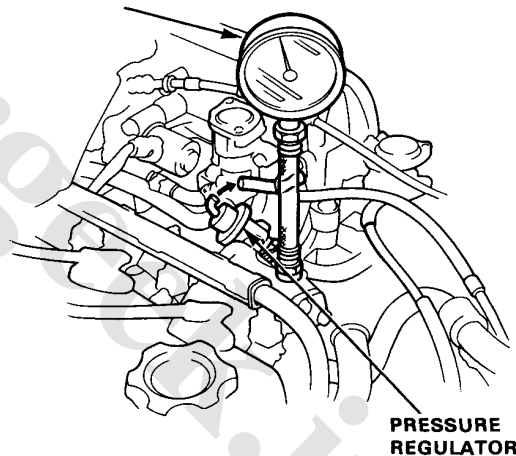

- If the fuel pressure is not as specified, first check the fuel pump. If the pump is OK, check the following:
 - If the pressure is higher than specified, inspect for:
 - Pinched or clogged fuel return hose or piping.
 - Faulty pressure regulator (page 6-105).
 - If the pressure is lower than specified, inspect for:
 - Clogged fuel filter.
 - Pressure regulator failure (page 6-105).
 - Leakage in the fuel line.



Pressure Regulator

Testing

▲ WARNING Do not smoke during the test, Keep open flames away from your work area.

1. Attach a pressure gauge to the service port of the fuel pipe (page 6-104).

Pressure should be:

(2.2 l :KS, KX, KG, KE, KF, KY, 2.0 l)


235–284 kPa (2.4–2.9 kg/cm², 34–41 psi)

(KQ)

265–314 kPa (2.7–3.2 kg/cm², 38–46 psi)


(with the regulator vacuum hose disconnected)

FUEL PRESSURE GAUGE
07406–0040001

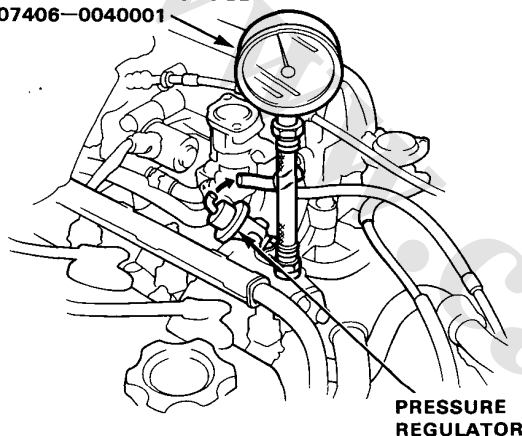

2. Reconnect the vacuum hose to the pressure regulator.
3. Check that the fuel pressure rises when the vacuum hose from the regulator is disconnected again.
 - If the fuel pressure did not rise, check to see if it rise with the fuel return hose lightly pinched.
 - If the fuel pressure still does not rise, replace the pressure regulator.


PRESSURE REGULATOR

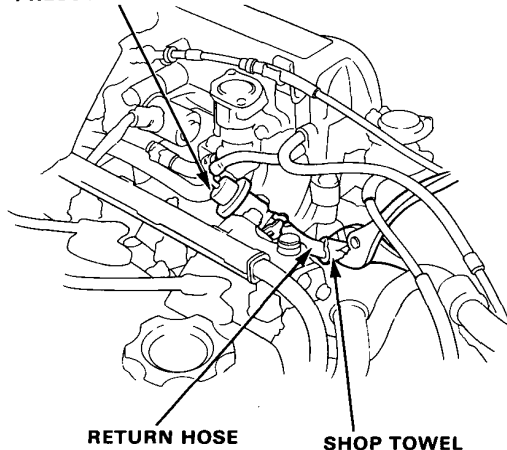

Replacement

▲ WARNING Do not smoke while working on fuel system. Keep open flame way from work area.

1. Place a shop towel under pressure regulator, then relieve fuel pressure (page 6-104).
2. Disconnect the vacuum hose and fuel return hose.
3. Remove the two 6 mm retainer bolts.

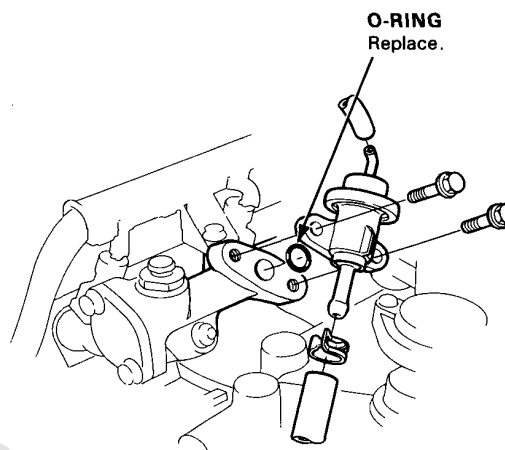

NOTE:

- Replace the O-ring.
- When assembling the regulator, apply clean engine oil to the O-ring and assemble it into its proper position, taking care not to damage the O-ring.

Fuel Supply System


Fuel Filter

Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

The filter should be replaced : every 2 years or 40,000 km, (24,000 miles), whichever comes first or whenever the fuel pressure drops below the specified value 235–284 kPa, 2.4–2.9 kg/cm², 34–41 psi (Except KQ) [KQ:265–314 kPa (2.7–3.2 kg/cm², 38–46 psi)] with the pressure regulator vacuum hose disconnected after making sure that the fuel pump and the pressure regulator are OK.

1. Place a shop towel under and around the fuel filter.
2. Relieve fuel pressure (page 6-104).
3. Remove the 12 mm banjo bolt and the fuel feed pipe from the filter.
4. Remove the fuel filter clamp and fuel filter.
5. When assembling, use new washers, as shown.

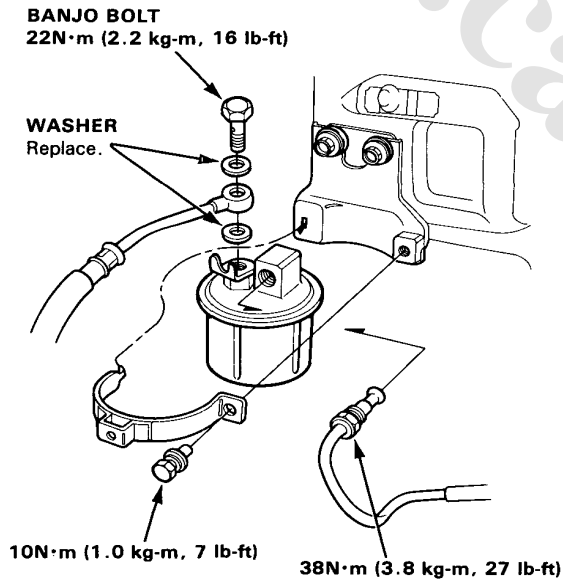

CAUTION: Clean the flared joint of high pressure hoses thoroughly before reconnecting them.



Air Intake System

System Troubleshooting Guide

NOTE: Across each row in the chart, the sub systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next system ②, etc.

2.0 l and KY :

PAGE	SUB SYSTEM	THROTTLE CABLE	THROTTLE BODY	INTAKE CONTROL SYSTEM
		---	---	---
SYMPTOM				
WHEN WARM RPM TOO HIGH		②	①	
LOSS OF POWER			①	②

2.2 l except KY :

PAGE	SUB SYSTEM	THROTTLE CABLE	THROTTLE BODY	INTAKE CONTROL SYSTEM	BYPASS CONTROL
		---	---	---	108
SYMPTOM					
WHEN WARM RPM TOO HIGH		②	①		
LOSS OF POWER			①	③	②

Air Intake System

Bypass Control System (2.2 l Except KY)


Troubleshooting Flowchart

Inspection of Bypass Control System

Start engine and allow to idle.

Remove #13 vacuum hose from the bypass control diaphragm and connect vacuum gauge to the hose.

VACUUM PUMP/GAUGE

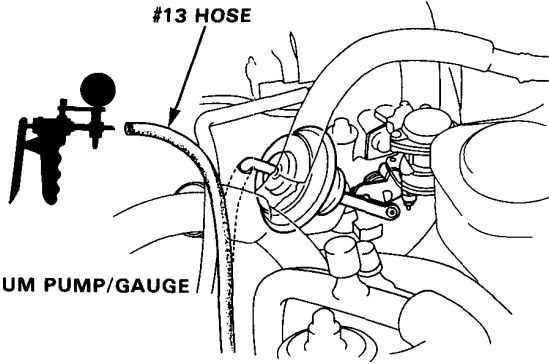

Is there vacuum ?

NO

Remove #12 vacuum hose from the vacuum tank, then check for vacuum at the tank.

Is there vacuum ?


NO

Repair the blockage or vacuum leak between the vacuum tank and the intake manifold.

YES

Disconnect the 2P connector from the Bypass Control Solenoid Valve.

Measure voltage between BLK/YEL (+) terminal and PNK/BLU (-) terminal.

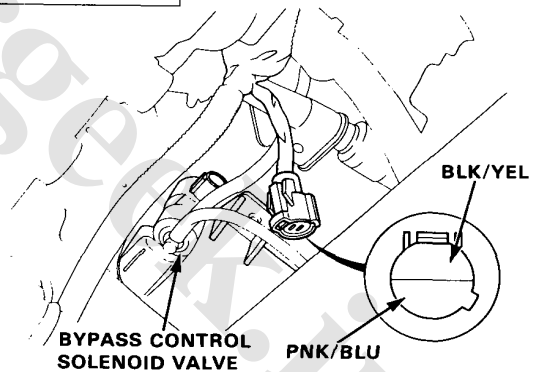

Is there battery voltage ?

YES


Replace the bypass control solenoid valve.

NO

Measure voltage between BLK/YEL (+) terminal and body ground.

(To page 6-109)

(To page 6-109)

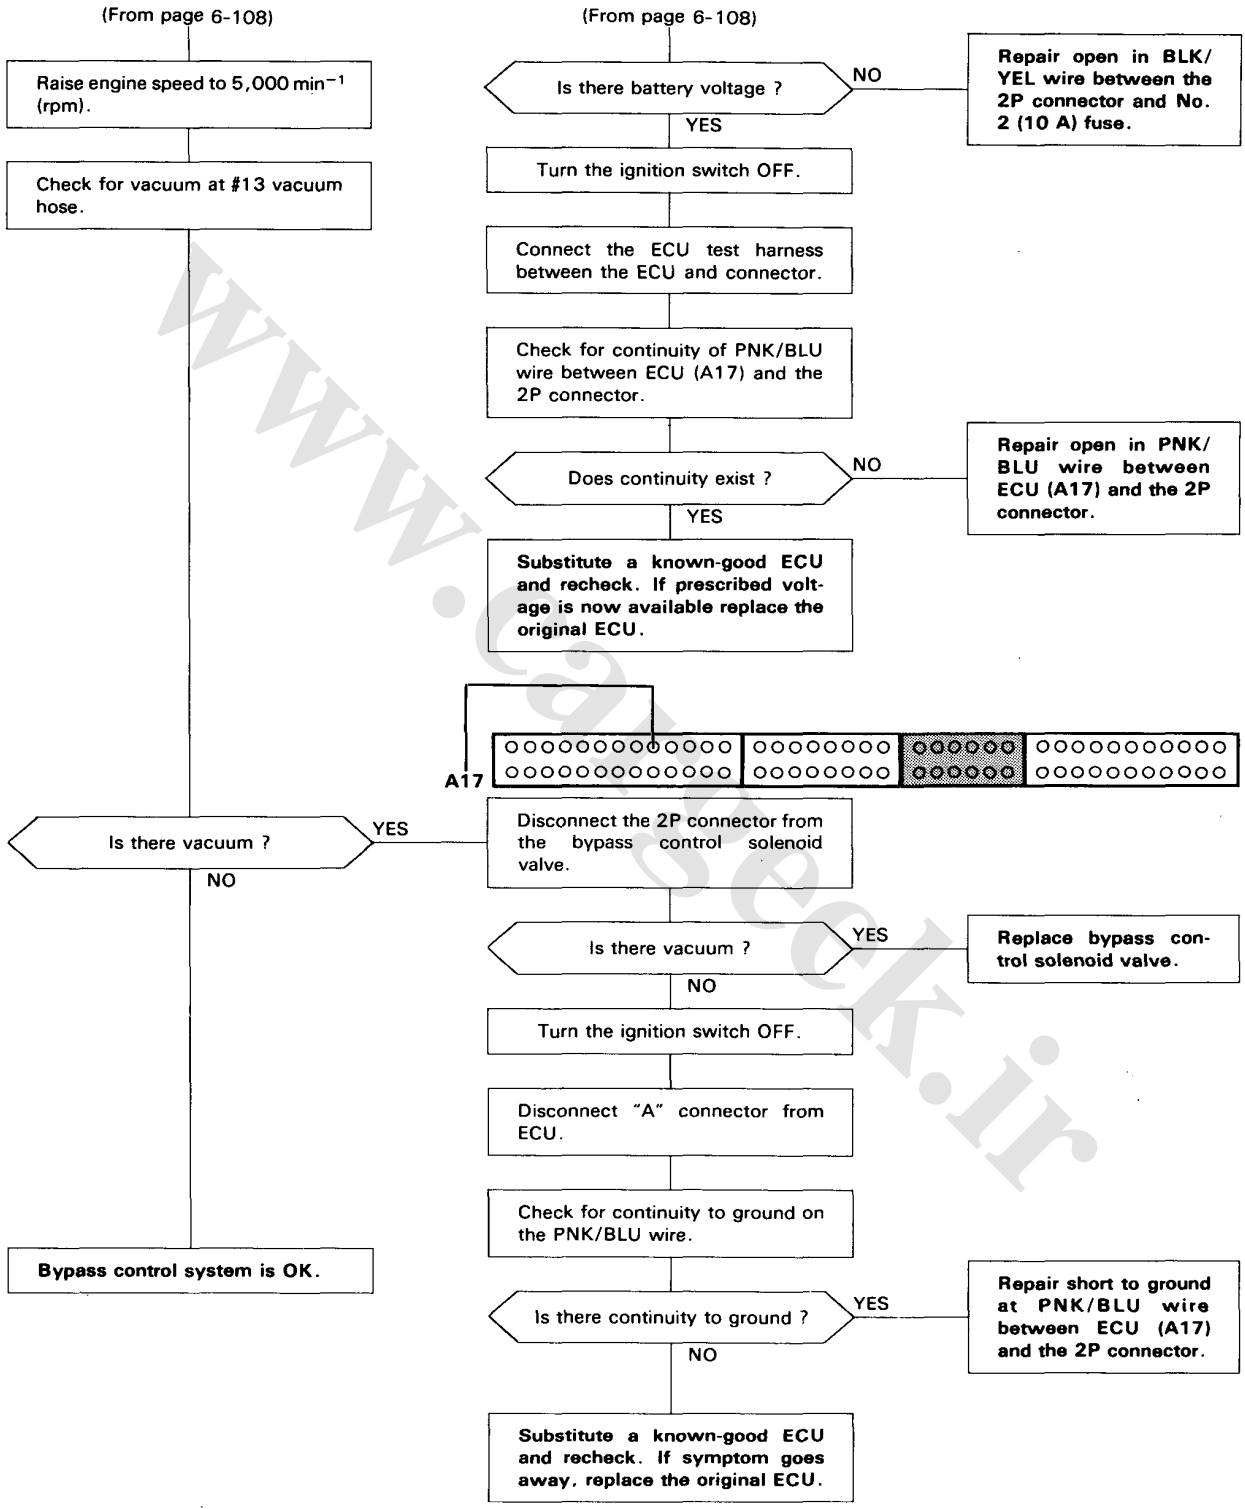


Air Intake System

Bypass Valve (2.2 l Except KY)


Testing

CAUTION: Do not adjust the bypass valve full-close screw. It was preset at the factory.

1. Check the bypass valve shaft for binding or sticking.
2. Check the bypass valve for smooth movement.
3. Check that Ⓐ of the bypass valve is in close contact with the stopper when the bypass valve is fully open.

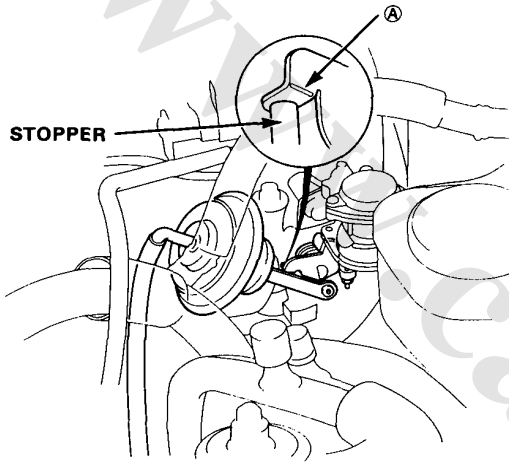

4. Check that Ⓑ of the bypass valve is in close contact with the full-close screw when the valve is fully closed.

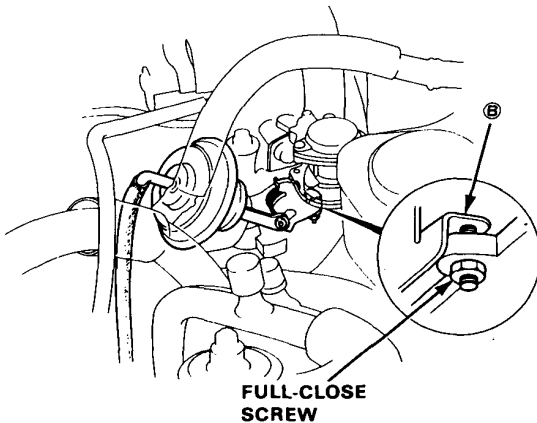


- If any fault is found, clean the linkage and shafts with carburetor cleaner.
- If the problem still exists after cleaning, disassemble the intake manifold and check the bypass valve (page 6-111).

(cont'd)



Bypass Valve (2.2 l Except KY) (cont'd)

Disassembly

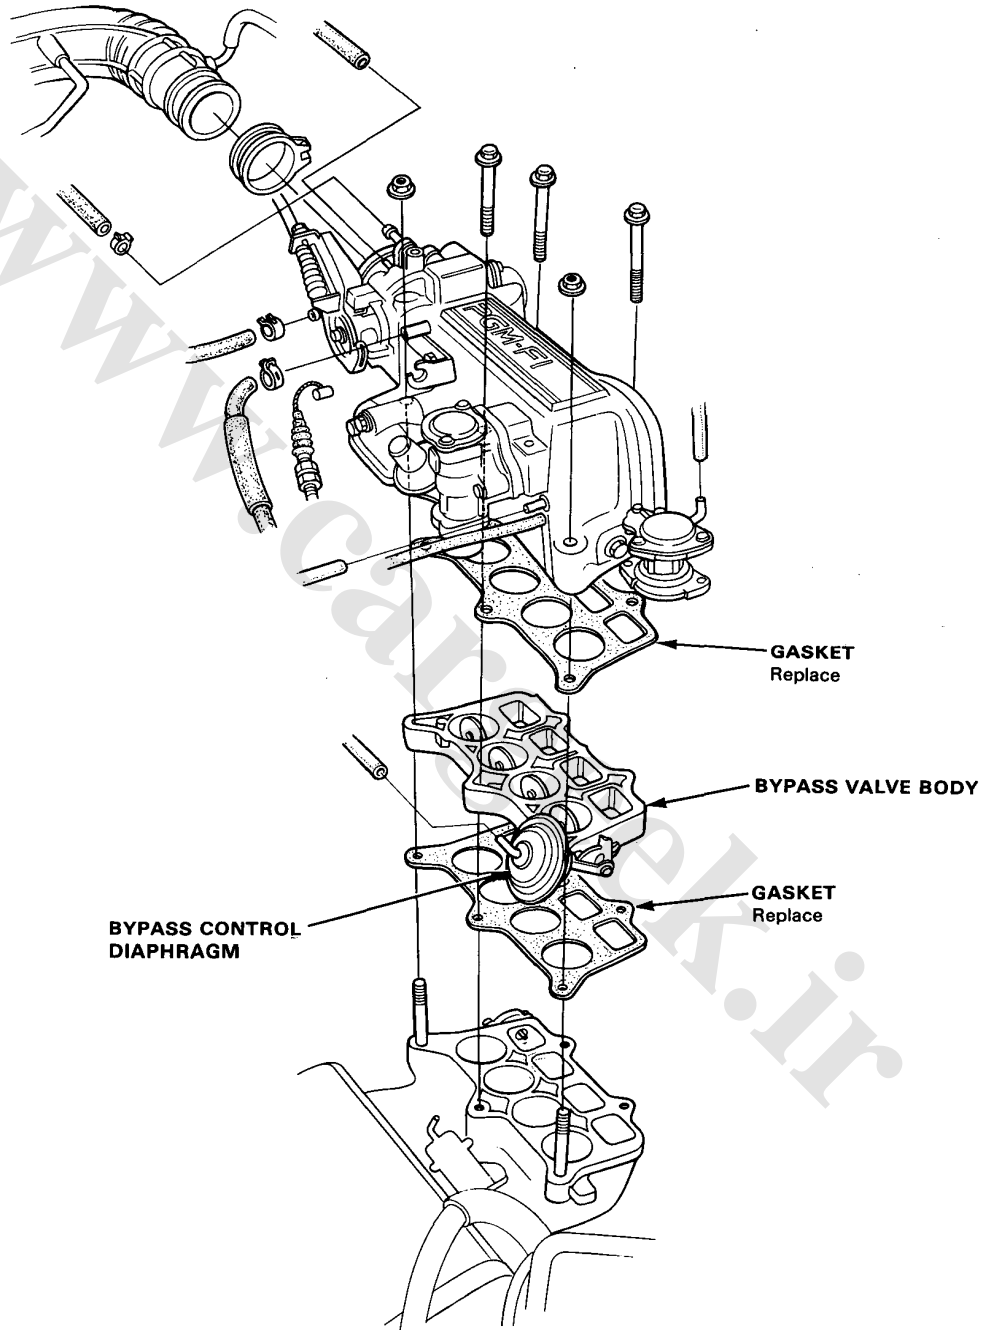

Emission Control System

System Troubleshooting Guide

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

With CATA:

PAGE	SUB SYSTEM	CATALYTIC CONVERTER	EGR SYSTEM (except KQ)	POSITIVE CRANKCASE VENTILATION SYSTEM	EVAPORATIVE EMISSION CONTROLS
SYMPTOM		---	114	---	---
ROUGH IDLE			①	②	
FREQUENT (AFTER STALLING (WARMING UP)			①		
POOR PERFORMANCE	FAILS EMISSION TEST	①			②
	LOSS OF POWER	①			

Without CATA :

PAGE	SUB SYSTEM	POSITIVE CRANKCASE VENTILATION SYSTEM	EVAPORATIVE EMISSION CONTROLS (KY)
SYMPTOM		---	---
ROUGH IDLE		①	
POOR PERFORMANCE (FAILS EMISSION TEST)			①

Emission Control System

System Troubleshooting Guide

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

With CATA:

PAGE	SUB SYSTEM	CATALYTIC CONVERTER	EGR SYSTEM (except KQ)	POSITIVE CRANKCASE VENTILATION SYSTEM	EVAPORATIVE EMISSION CONTROLS
SYMPTOM		---	114	---	---
ROUGH IDLE			①	②	
FREQUENT (AFTER STALLING (WARMING UP)			①		
POOR PERFORMANCE	FAILS EMISSION TEST	①			②
	LOSS OF POWER	①			

Without CATA :

PAGE	SUB SYSTEM	POSITIVE CRANKCASE VENTILATION SYSTEM	EVAPORATIVE EMISSION CONTROLS (KY)
SYMPTOM		---	---
ROUGH IDLE		①	
POOR PERFORMANCE (FAILS EMISSION TEST)			①



Tailpipe Emission

Inspectin

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.


1. Start the engine and warm up to normal operating temperature (cooling fan comes on).
2. Connect tachometer.
3. Check idle speed and adjust the idle speed, if necessary (page 6-102)
4. Warm up and calibrate the CO meter according to the meter manufacture's instructions.
5. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO%:

With CATA: 0.1 % maximum

Without CATA: 1.0 ± 1.0 %

- If unable to obtain this reading :
On With CATA, see ECU troubleshooting guide (page 6-80).
On other models, adjust by turning the adjusting screw of the IMA sensor.

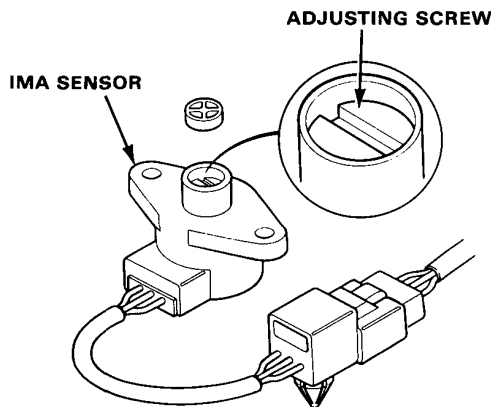


- If unable to obtain a CO reading of specified % by this procedure, check the engine tune-up condition.


Emission Control System

Exhaust Gas Recirculation System

Troubleshooting Flowchart



Self-diagnosis Check Engine warning light indicates code 12: Most likely a problem in the Exhaust Gas Recirculation (EGR) system.



—Check Engine warning light has been reported on, with service check connector jumped (page 6-84), CODE 12 is indicated.

Turn the ignition switch OFF.

Remove the BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Road test necessary: Warm up the engine to normal operating temperature (cooling fan comes on). Drive the car on the road for approx. 10 minutes. Try to keep the engine speed in the 1700–2500 range.


Is Check Engine warning light on and does it indicated CODE 12 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires at EGR and ECU.

YES

With the engine at idle, disconnect the #16 hose from the EGR valve and connect a vacuum pump/gauge to the hose.

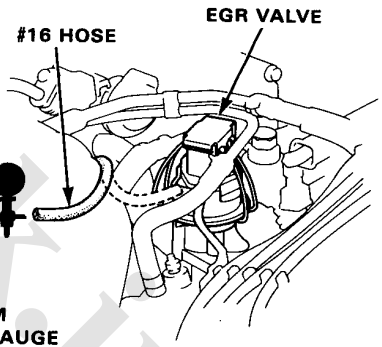

(To page 6-115)

Gearshift Mechanism
Mainshaft
Countershaft


www.cargeek.ir

Gearshift Mechanism

Overhaul

NOTE:

- Inspect rubber parts for wear or damage when disassembling.
- Check that new cotter pin is seated firmly.

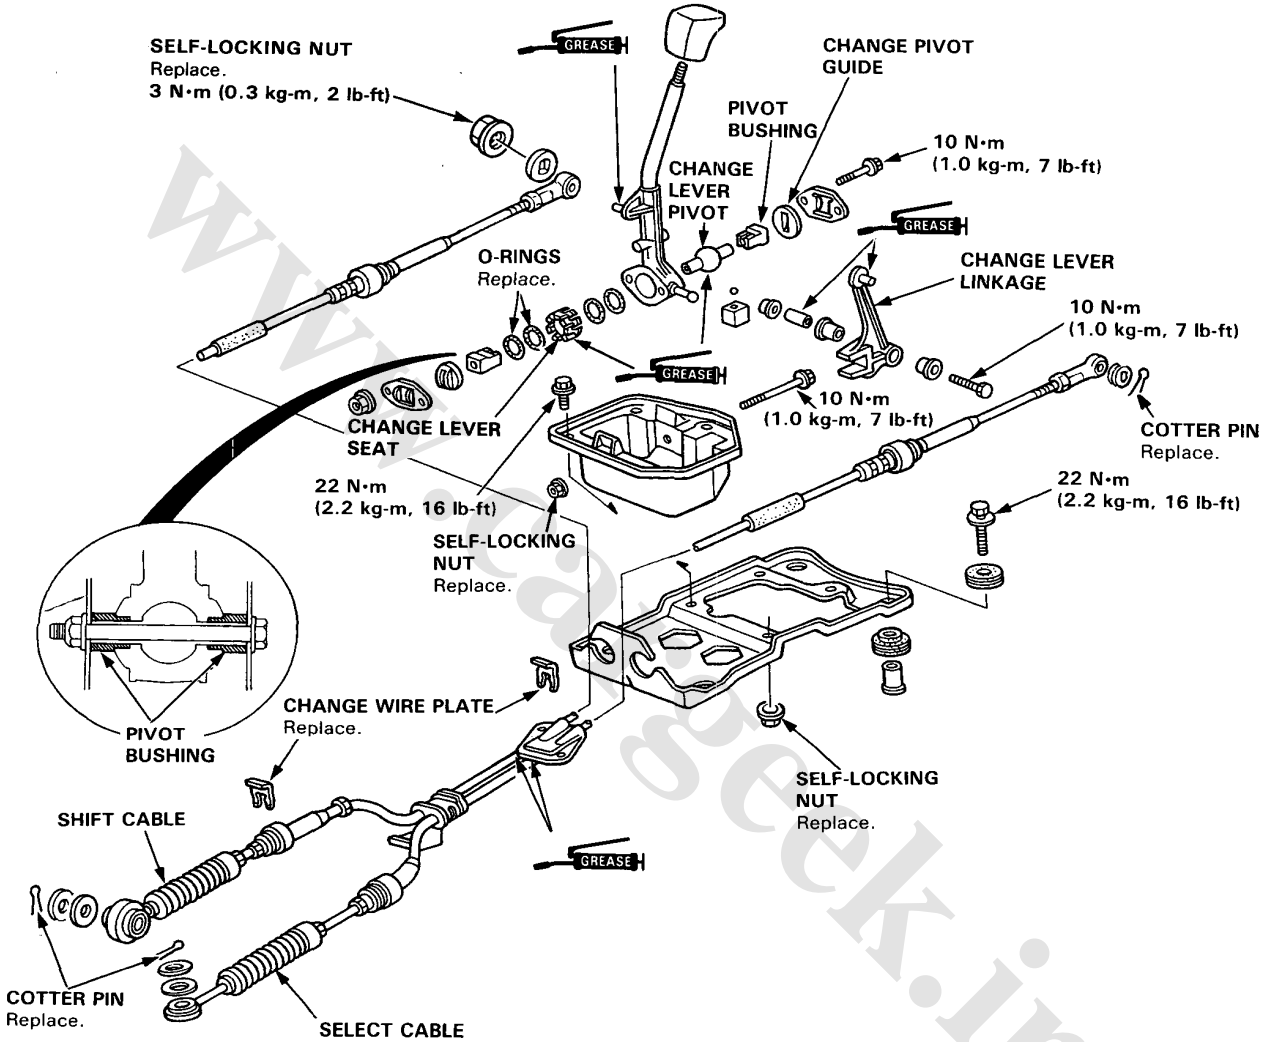





Cable Adjustment

Select Cable:

1. With the transmission in neutral, measure the clearance between (A) and (B).

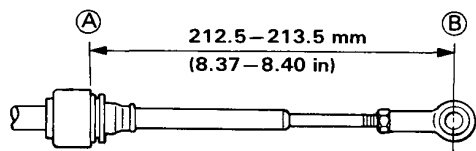


2. If there is no clearance between (A) and (B), loosen the locknut and turn the adjuster as necessary.

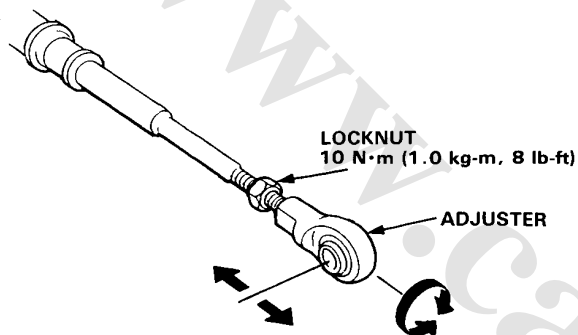

3. Tighten the locknut and install the select cable to the linkage.


NOTE:

- Check that new cotter pin is seated firmly.
- After adjustment, check operation of the gear-shift lever.

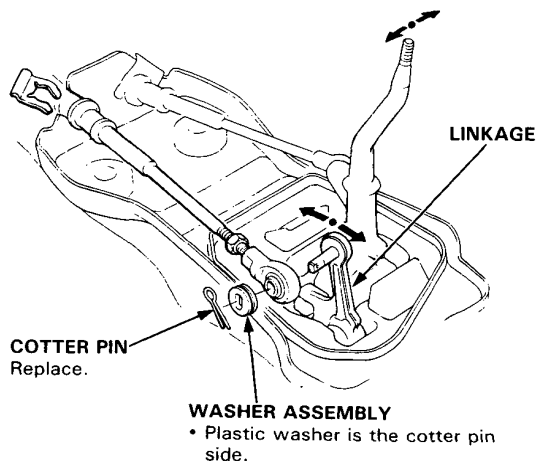


Shift Cable:

1. With the transmission in neutral, measure the clearance between (A) and (B).

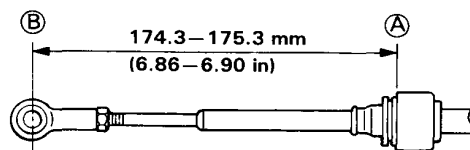


2. If there is no clearance between (A) and (B), loosen the locknut and turn the adjuster as necessary.

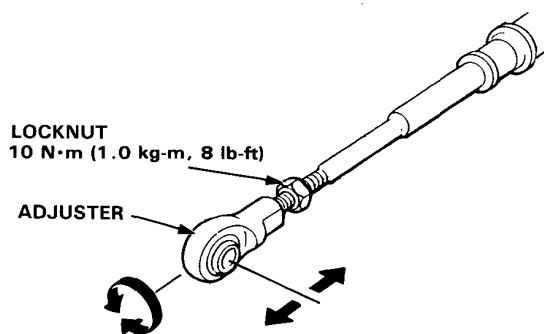

3. Tighten the locknut and install the shift cable to the change lever.

NOTE: After adjustment, check operation of the gear-shift lever.

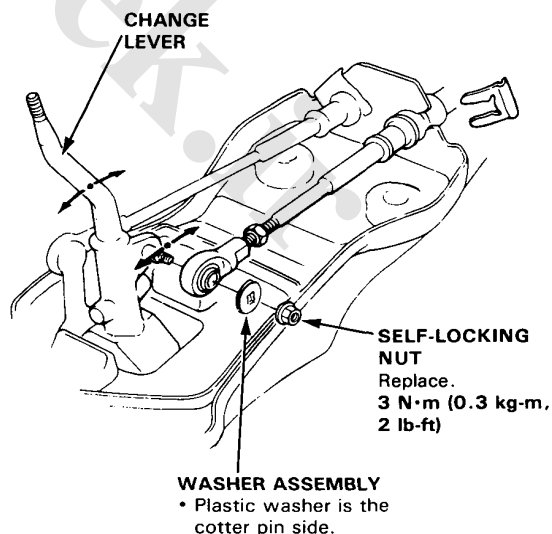


Mainshaft

Index



Before assembling, clean all parts in solvent, dry them with compressed air, then coat them with clean oil.

* Mark parts: H2U5, H2C4 only.

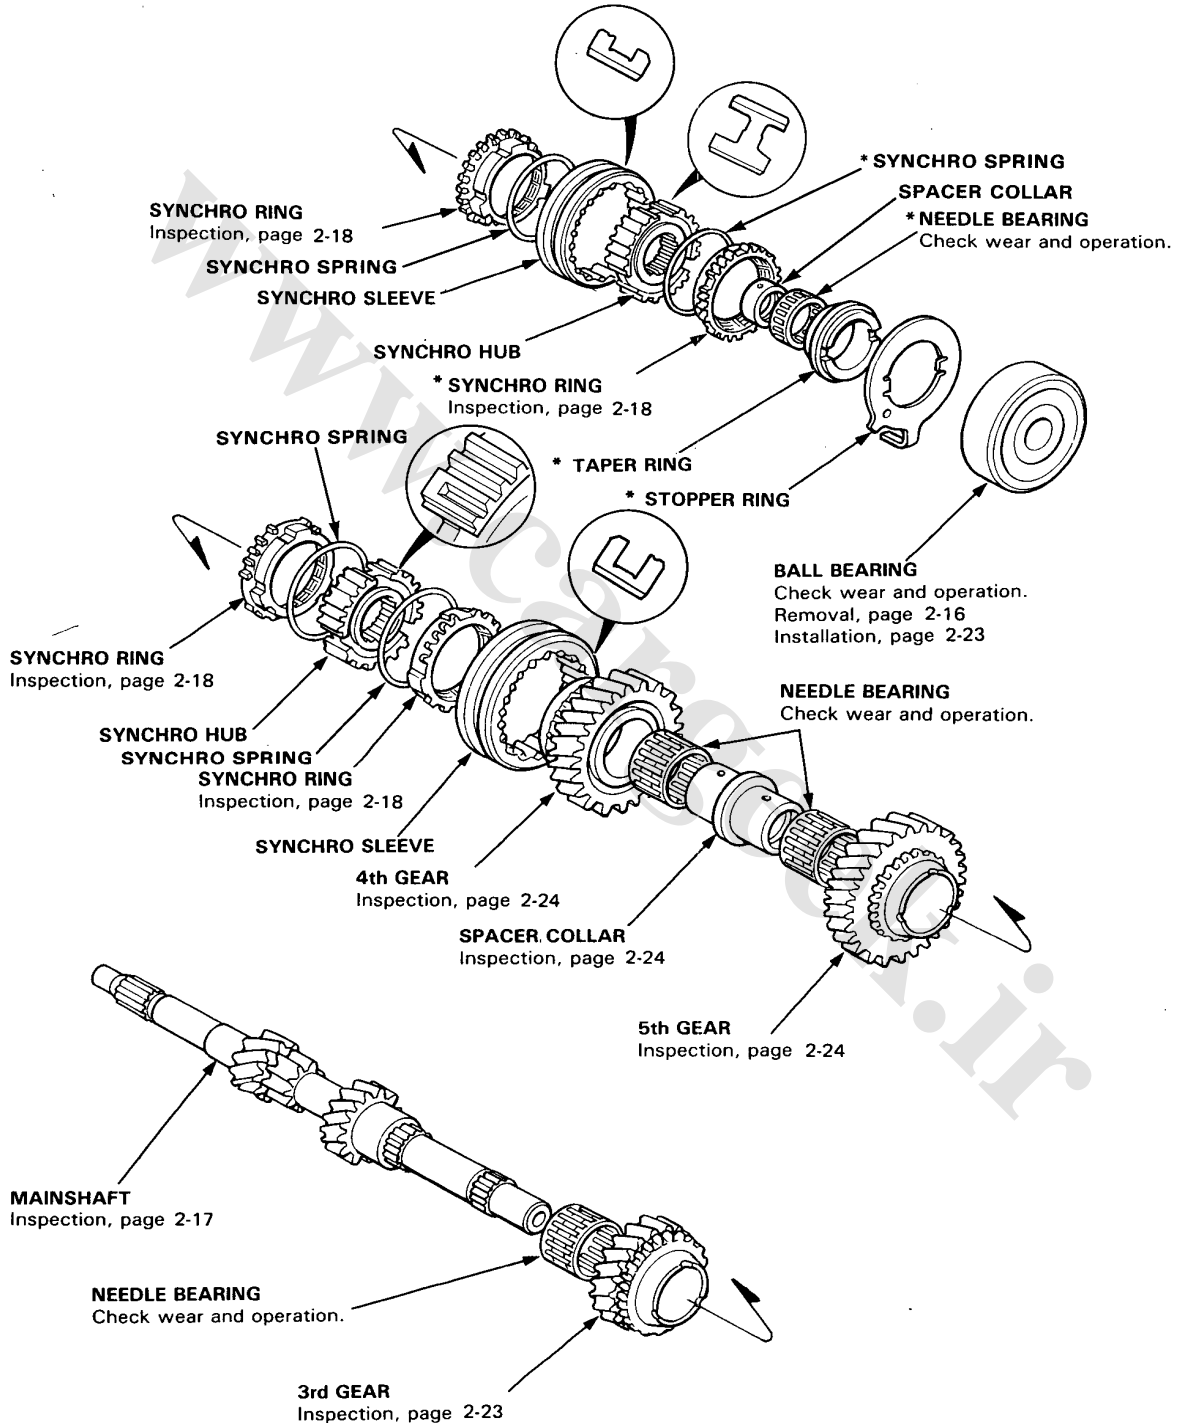


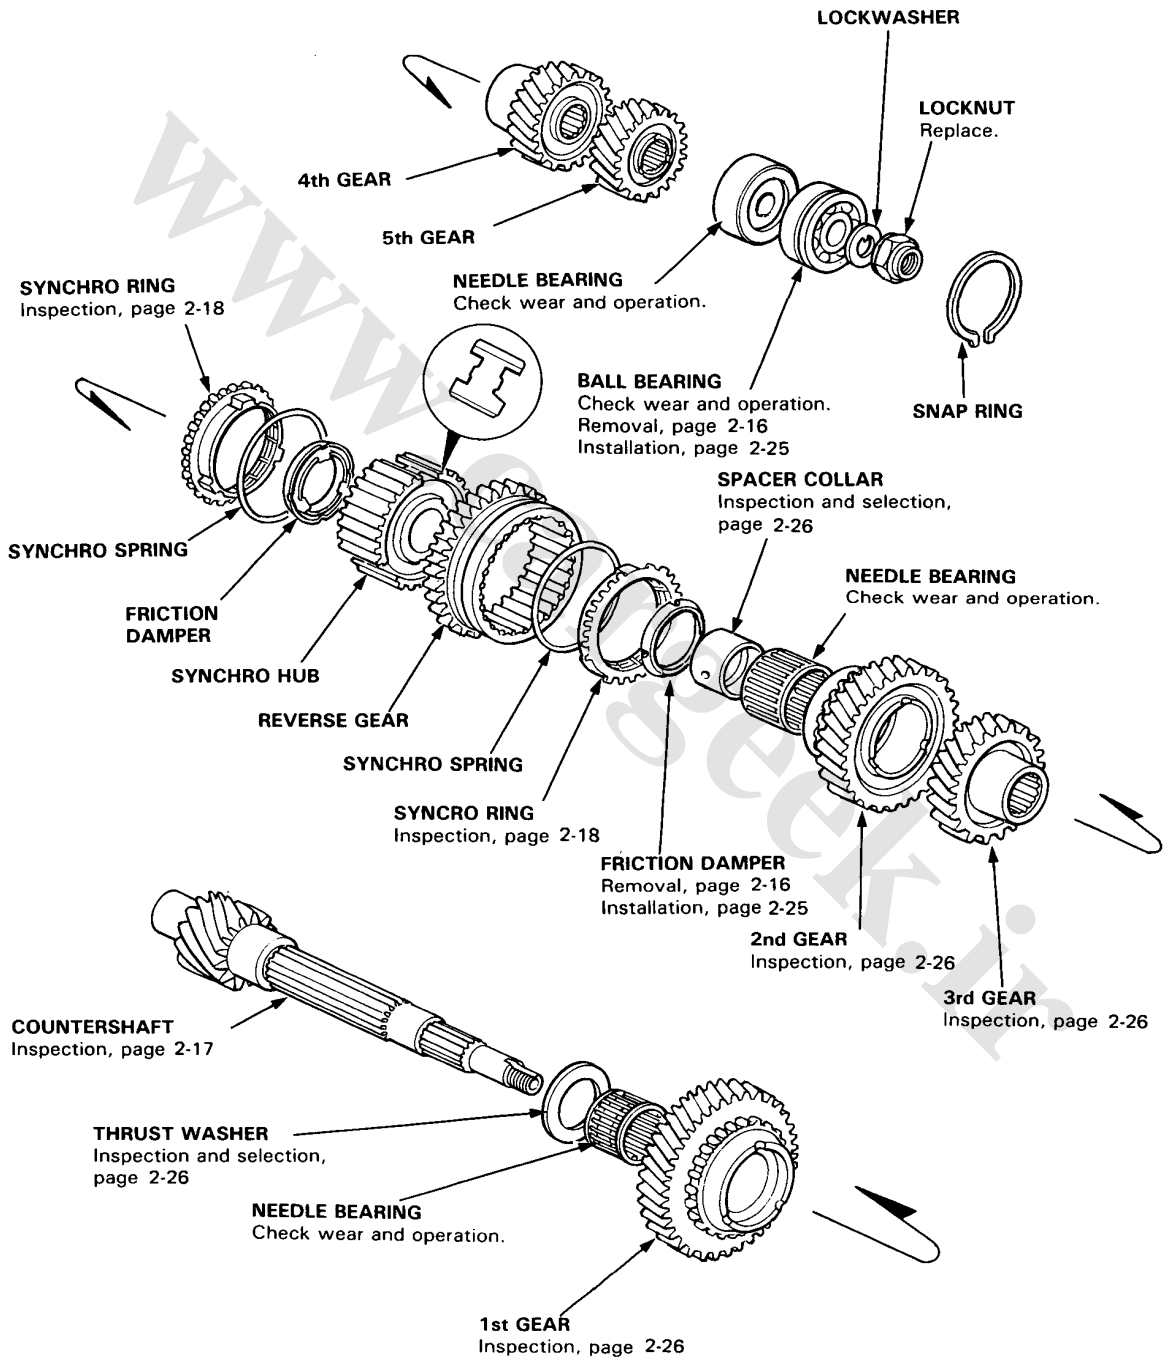


Countershaft

Index

NOTE: The needle bearings are of the same size.

 Before assembling, clean all parts in solvent, dry them with compressed air, then coat them with clean oil.



Service Tips
Discharge Procedure
System Charging
 System Evacuation
 Leak Test
 Charging Procedure
Supplement

www.cargeek.ir

Service Tips

⚠ WARNING When handling refrigerant (R-12) :


- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes; if it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (cans of R-12) stored below 40°C (100 °F).
- Do not handle or discharge refrigerant in an enclosed area near an open flame ; it may ignite and produce a poisonous gas.
- The ozone is a fragile layer surrounding the earth which acts as a shield against the sun's ultra-violet radiation. Chlorine from chemicals called chlorofluorocarbons (CFCs) destroy the ozone in the stratosphere. Automotive air conditioning systems currently use chlorofluorocarbons as the refrigerant.

Auto air conditioning service equipment has been developed to minimize the release of CFCs to the atmosphere. All service procedures should be performed using this equipment according to the manufacturer's instructions.

CAUTION:

1. Always disconnect the negative cable from the battery whenever replacing air conditioner parts.
2. Keep moisture and dust out of the system. When disconnecting any lines, plug or cap the fittings immediately; don't remove the caps or plugs until just before you reconnect each line.
3. Before connecting any hose or line, apply a few drops of refrigerant oil to the O-ring.
4. When tightening or loosening a fitting, use a second wrench to support the matching fitting.
5. When discharging the system, use a refrigerant recovery system, Don't release refrigerant into the atmosphere.
6. Add refrigerant oil after replacing the following parts;

Condenser	10 cc (1/3 fl oz)
Evaporator	25 cc (5/6 fl oz)
Line or hose	10 cc (1/3 fl oz)
Receiver	10 cc (1/3 fl oz)
Compressor	On compressor replacement, subtract the volume of oil drained from the removed compressor from 100 cc (3 1/3 fl oz), and drain the calculated volume of oil from the new compressor: 100 cc (3 1/3 fl oz) - Volume of removed compressor = Draining volume.

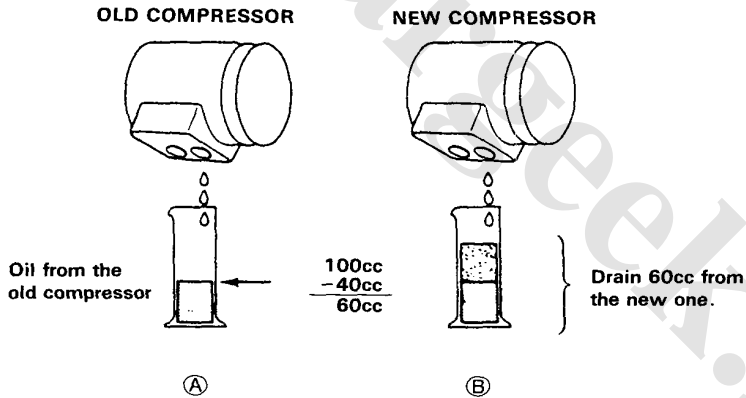




Discharge Procedure

Discharge

⚠ WARNING

- Keep away from open flames. The refrigerant, although nonflammable, will produce a poisonous gas if burned.
 - Work in a well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small enclosed area.
1. Connect a Refrigerant Recovery System to the A/C system.
 2. Operate the Refrigerant Recovery System according to the manufacturer's instructions.
- IMPORTANT:** Do not vent refrigerant to the atmosphere. The chlorofluorocarbons (CFCs) used in conventional refrigerant (R-12) may damage the earth's ozone layer. Always use UL-listed, refrigerant recovery/recycling equipment to extract the refrigerant before you open an A/C system to make repairs. Follow the equipment manufacturer's instructions.

Refrigerant Recovery/Recycling System.

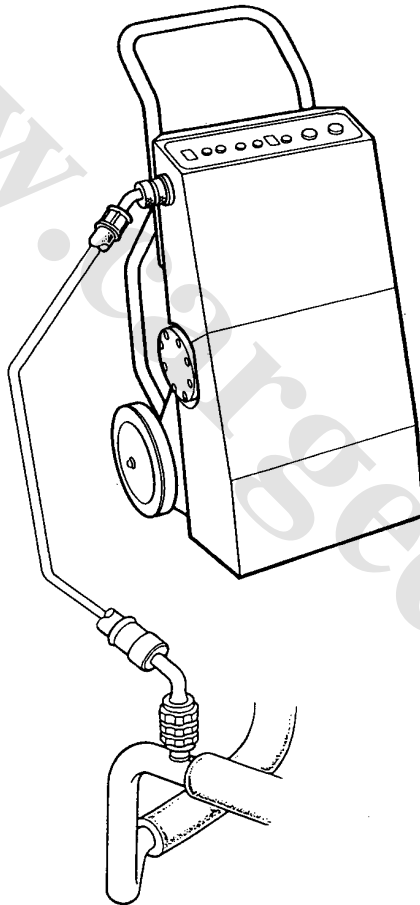

System Charging

System Evacuation



The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of R-12 into the atmosphere.

1. When an A/C System has been opened to the atmosphere, such as during installation or repair, it must be evacuated using a vacuum pump. (If the system has been open for several days, the receiver/dryer should be replaced).
2. Connect a gauge, pump and refrigerant containers (recovery tank of R12) as shown.
NOTE: Do not open the recovery tank.
3. Start the pump, then open the both pressure valves, both pressure stop valves and evacuation valve (2 valve gauge: evacuation stop valve). Run the pump for about 15 minutes. Close the both pressure valves and

evacuation valve (2 valve gauge: evacuation stop valve) and stop the pump. The low gauge should indicate above 700mmHg. (27 in-Hg) and remain steady with the valves closed.

NOTE: If low pressure does not reach more than 700 mmHg (27 in-Hg) in 15 minutes, there is probably a leak in the system. Check for leaks, and repair (see Leak Test).

4. If there are no leaks open the valves and continue pumping for at least another 15 minutes, then close both valves, stop the pump.

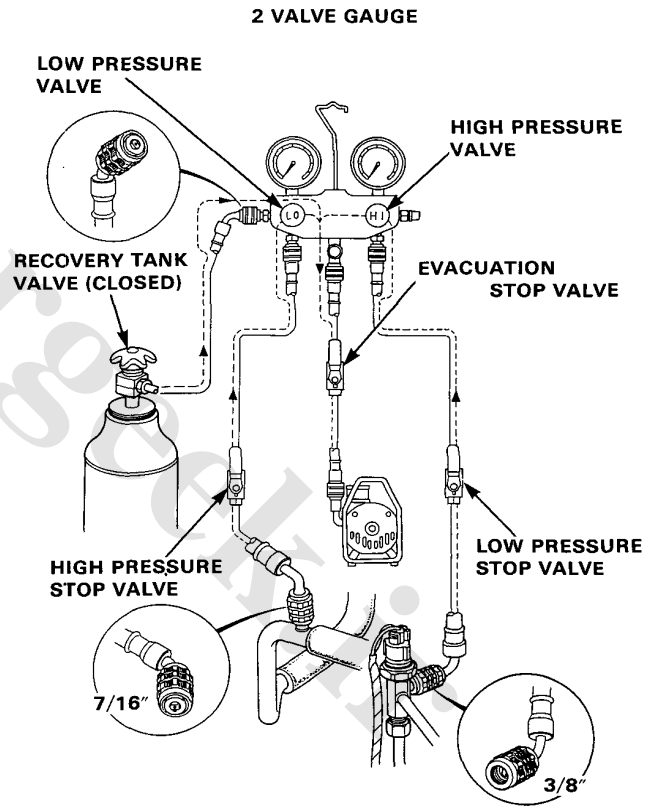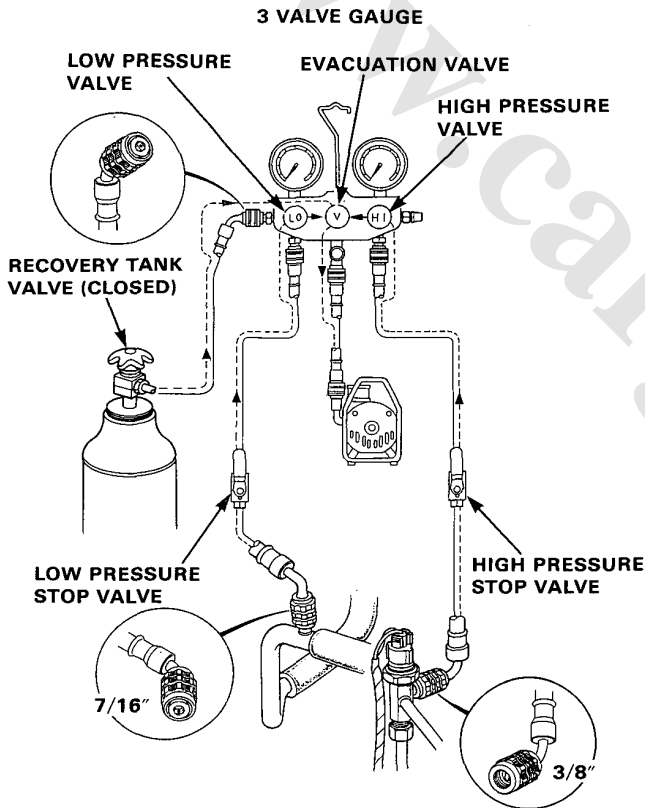



Leak Test

The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of R-12 into the atmosphere.


⚠ WARNING When handling refrigerant (R-12):

- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (recovery tank of R-12) stored below 40°C (100°F).
- Keep away from open flame. Refrigerant, although non-flammable, will produce poisonous gas if burned.
- Work in well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small, enclosed area.

NOTE: Check for leaks after evacuation.

1. Close the evacuation valve (2 valve gauge; evacuation stop valve).

2. Open the recovery tank.
3. Open high pressure valve to charge the system to about 100 kPa (14 psi), then close the supply valve. NOTE: Close the low pressure valve.
4. Check the system for leaks using a leak detector. NOTE: Particularly check for leaks around the compressor, condenser, and receiver-dryer.
5. If you find any leaks, tighten the joint nuts and bolts to the specified torque.
6. Recheck the system for leaks using a leak detector.
7. If you find leaks that require the system to be opened (to repair or replace hoses, fittings, etc.), release any charge in the system according to the Discharge Procedure on page.
8. After checking and repairing leaks, the system must be evacuated (see System Evacuation on page).

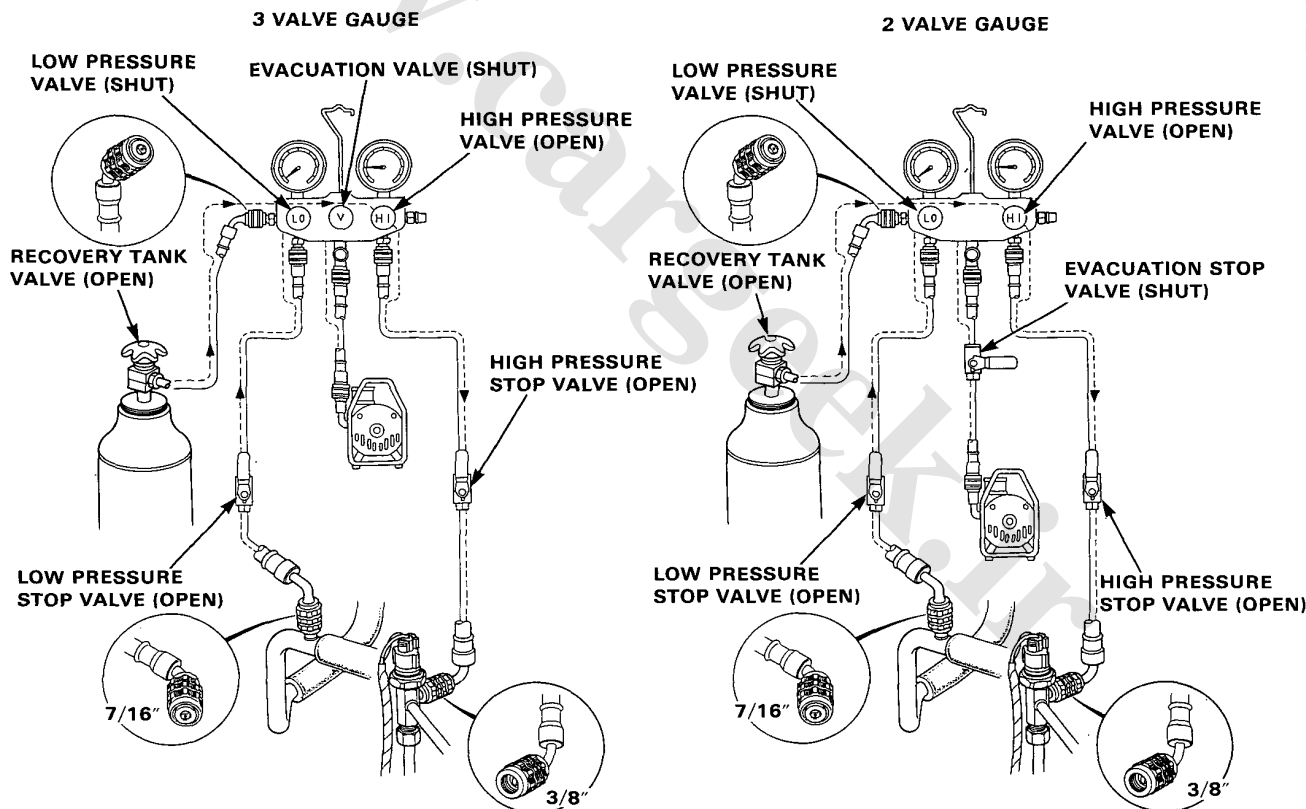

System Charging

Charging Procedures

The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of R-12 into the atmosphere.

⚠ WARNING When handling refrigerant (R-12):

- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (recovery tank of R-12) stored below 40°C (100°F).
- Keep away from open flame. Refrigerant, although non-flammable, will produce poisonous gas if burned.
- Work in well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small, enclosed area.

CAUTION: Do not overcharge the system; the compressor will be damaged.

1. After leak test, check that the high pressure valve is closed and start the engine.


NOTE: Run the engine below 1500 rpm.


2. Open the front door. Turn the A/C switch on. Turn the air mix dial (lever) to COOL. Turn function control switch (lever) on. Turn the heater fan switch on "E" (MAX).
3. Open the low pressure valve and charge with refrigerant.

⚠ WARNING

- Do not open the high gauge valve.
 - Do not turn the cans upside down.
4. Charge the system with refrigerant capacity. Refrigerant capacity: 900–950 g (32–34 oz)
 - ★ Measure the charged refrigerant capacity using a weighing instrument.
 5. When fully charged, close the low pressure valve and the refrigerant cans. Check the system.
 6. Close the high pressure stop valve.
 7. Open the low pressure valve and gradually open the high pressure valve. When both pressure gauge are the same, close the low pressure stop valve and stop the engine.
 8. Disconnect the charge hose quickly.
 9. Check the system for leaks using a leak detector.

NOTE: Particularly check for leaks around the compressor, condenser, and receiver-dryer.

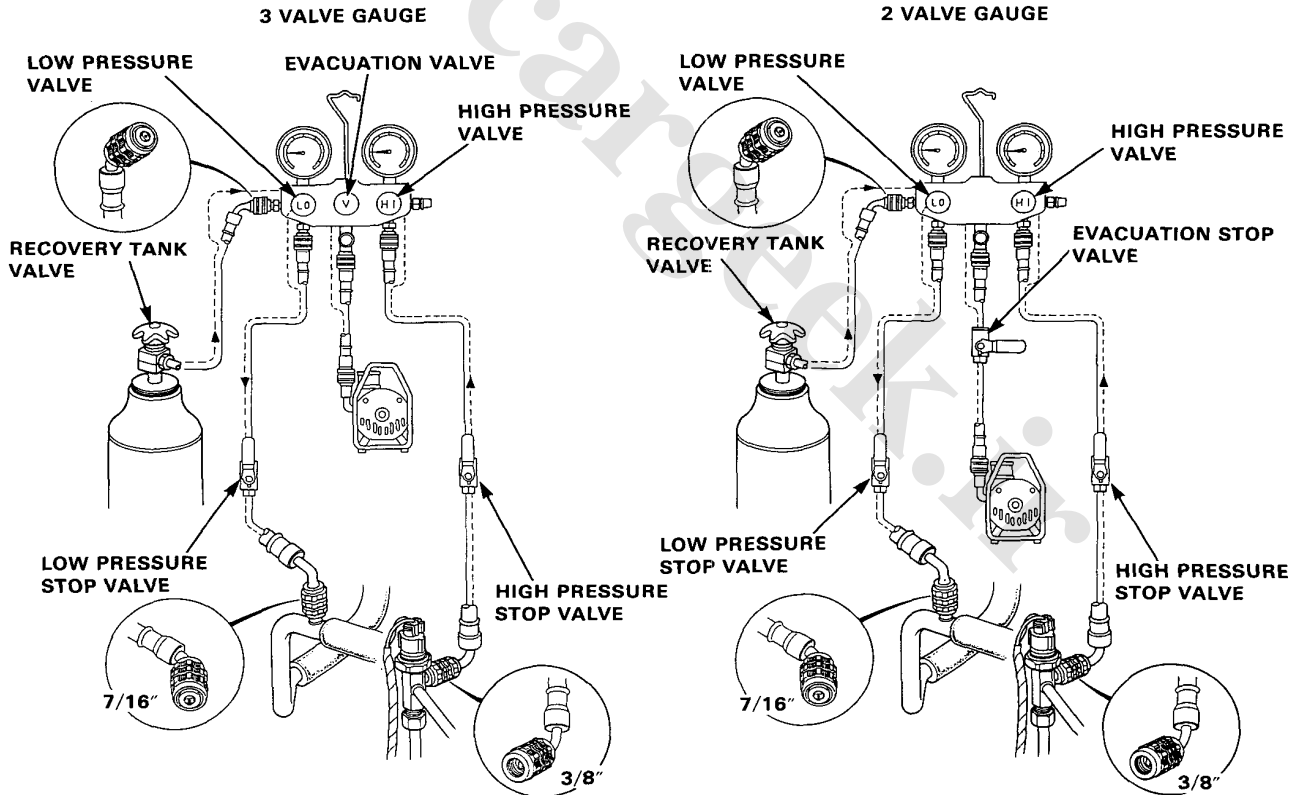



The following are the procedures to be adhered to when servicing air conditioners to reduce the amount of R-12 into the atmosphere.


⚠ WARNING When handling refrigerant (R-12):

- Always wear eye protection.
- Do not let refrigerant get on your skin or in your eyes. If it does:
 - Do not rub your eyes or skin.
 - Splash large quantities of cool water in your eyes or on your skin.
 - Rush to a physician or hospital for immediate treatment. Do not attempt to treat it yourself.
- Keep refrigerant containers (recovery tank of R-12) stored below 40°C (100°F)
- Keep away from open flame. Refrigerant, although non-flammable, will produce poisonous gas if burned.
- Work in well-ventilated area. Refrigerant evaporates quickly, and can force all the air out of a small, enclosed area.

CAUTION: Do not overcharge the system; the compressor will be damaged.

1. Connect the gauge as shown, close both pressure stop valves. Purge air from the charge hose A, then loosen the stop valve connector.
2. Attach a pump and refrigerant containers (can: 250 g x 2) as shown.
NOTE: Do not open cans.
3. Open both pressure valves and evacuation valve (2 valve gauge: evacuation stop valve), start the pump. The low gauge should indicate above 700 mmHg (27 in-Hg), then run the pump about 1 minute.

3 VALVE GAUGE

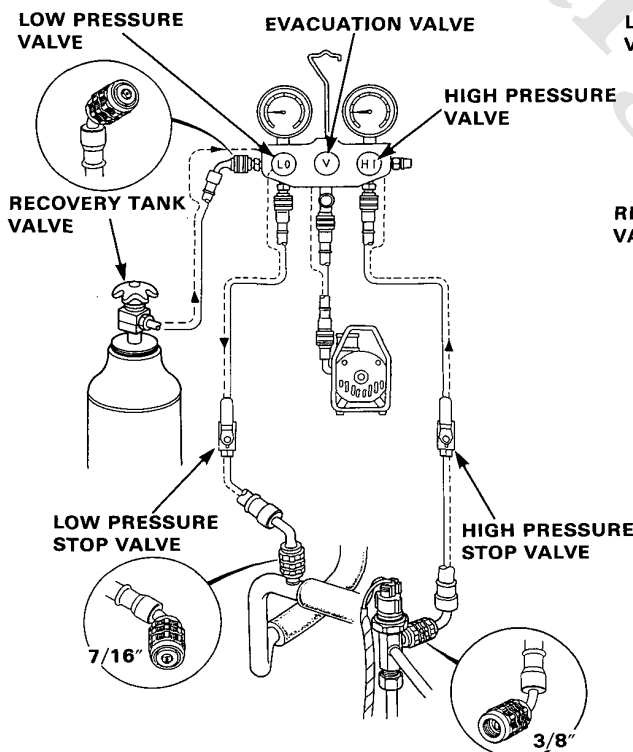

4. Close both pressure valves and evacuation valve (2 valve gauge: evacuation stop valve). Open both pressure stop valve.
5. Start the engine and turn on A/C switch.
6. Stop the engine and check for leaks using a leak detector.

NOTE: Particularly check for leaks around the compressor, condenser, and receiver-dryer.

7. Test the system using the pressure test and inspection data.

Test condition:

- Start the engine.
- Turn the air mix dial (lever) to COOL.
- Turn the function control switch (lever) on.
- Turn the recirculation control switch on.
- Turn the heater fan switch on "E" (MAX).


If there is insufficient refrigerant in system, continue to charge system.

8. Open one or two cans, open the low pressure gauge. Charge the system until there are no bubbles in the sight glass.

⚠ WARNING

- Do not open the high gauge valve.
 - Do not turn the cans upside down.
9. After adding supplemental refrigerant, close the high pressure stop valve. Open the low pressure valve and gradually open the high pressure valve. When pressure gauges read same, close the low pressure stop valve and stop the engine.
 10. Disconnect the charge hose quickly.
 11. Check the system for leaks using a leak detector.

2 VALVE GAUGE

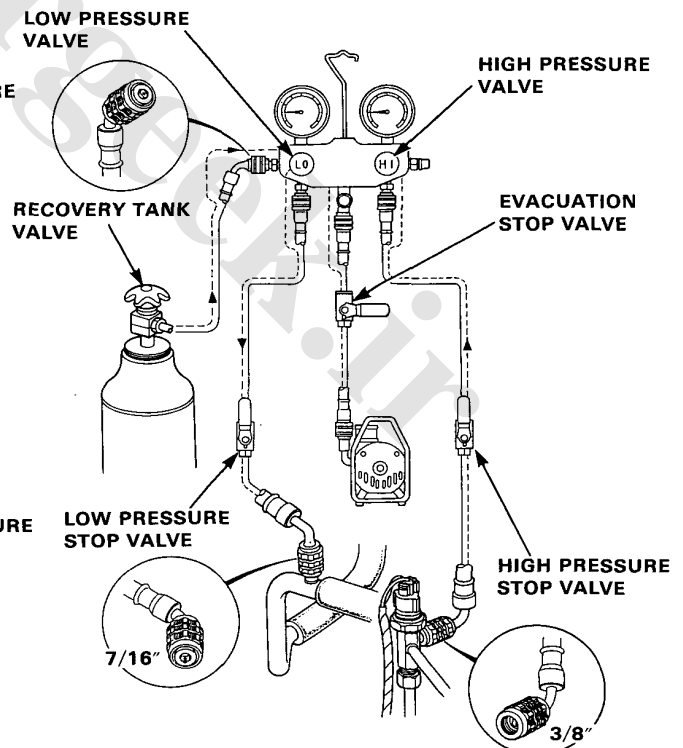

How to Use This Manual

This supplement contains information for the 1991 ACCORD AERO DECK.

Refer to following shop manuals for service procedures and data not included in this supplement.

Description	Code No.
ACCORD CHASSIS Maintenance and Repair 90	62SM400
ACCORD SUPPLEMENT 91	62SM420
F18A/F20A/F22A ENGINE Maintenance and Repair	62PT400
H2 MANUAL TRANSMISSION Maintenance and Repair	62PX500
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400

The first page of each section is marked with a black tab that lines up with one of the thumb index tabs on this page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Special Information

▲ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of *standard* workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda, might be done, or of the possible hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, *must satisfy himself thoroughly* that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

*(Asterisk) marked sections are not included in this manual.

First Edition 3/91 174 pages.

All Rights Reserved

HONDA MOTOR CO., LTD.
Service Publication Office

General Info



Special Tools



Specifications

specs

Maintenance



Engine



Fuel and Emissions




Transaxle



Steering*



Suspension*




Brakes*



Body



Wax and
Air Conditioner



Electrical



Chassis and Engine Numbers
Identification Number Locations
Label Locations
Lift and Support Points
Towing
Preparation of Work
Symbol Marks
Abbreviation

www.cargeek.ir

Chassis and Engine Numbers

Vehicle Identification Number

1HG CB8 7 5 0 0 A 000001

Manufacturer Code _____
1HG : HONDA OF AMERICA
MFG., INC., USA

Vehicle Type _____
CB8 : ACCORD AERO DECK 2.2 ℓ

Door and Transmission Type _____
7 : 5-door, 5-speed Manual
8 : 5-door, 4-speed Automatic

Vehicle Grade _____
5 : LX

Fixed Code _____

Auxiliary Number _____

Factory Code _____
A : Ohia Factory in U. S. A. (Marysville)

Serial Number _____

Engine Number

F22A7 - 1000001

Engine Type _____
F22A7 : 2.2 ℓ SOHC Fuel-Injected
with Manual Transmission
F22A8 : 2.2 ℓ SOHC Fuel-Injected
with Automatic Transmission

Serial Number _____

Transmission Number

H2C4 - 6000001


Transmission Type _____
H2C4 : Manual
APXA : Automatic

Serial Number _____
H2C4 : 6000001~
APXA : 1000001~






Identification Number Locations


Transmission Number
(Automatic)

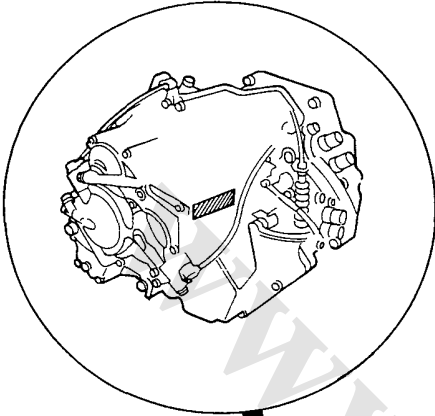


Vehicle Identification Number

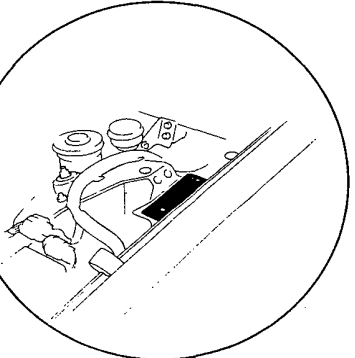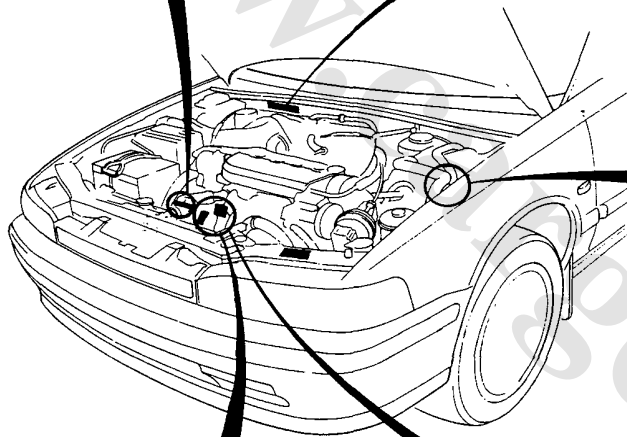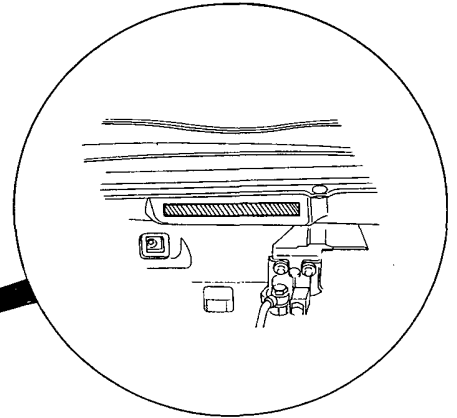

Vehicle Identification Number

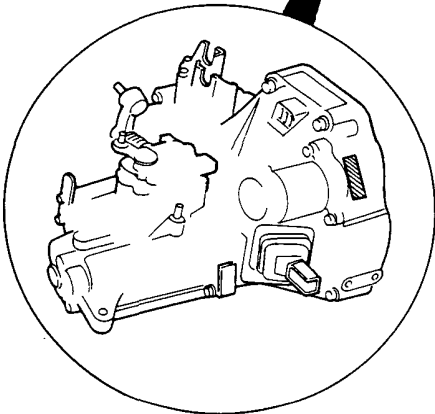


Transmission Number
(Manual)

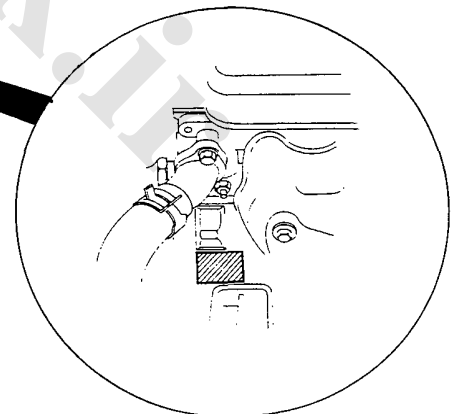

Engine Number

Label Locations

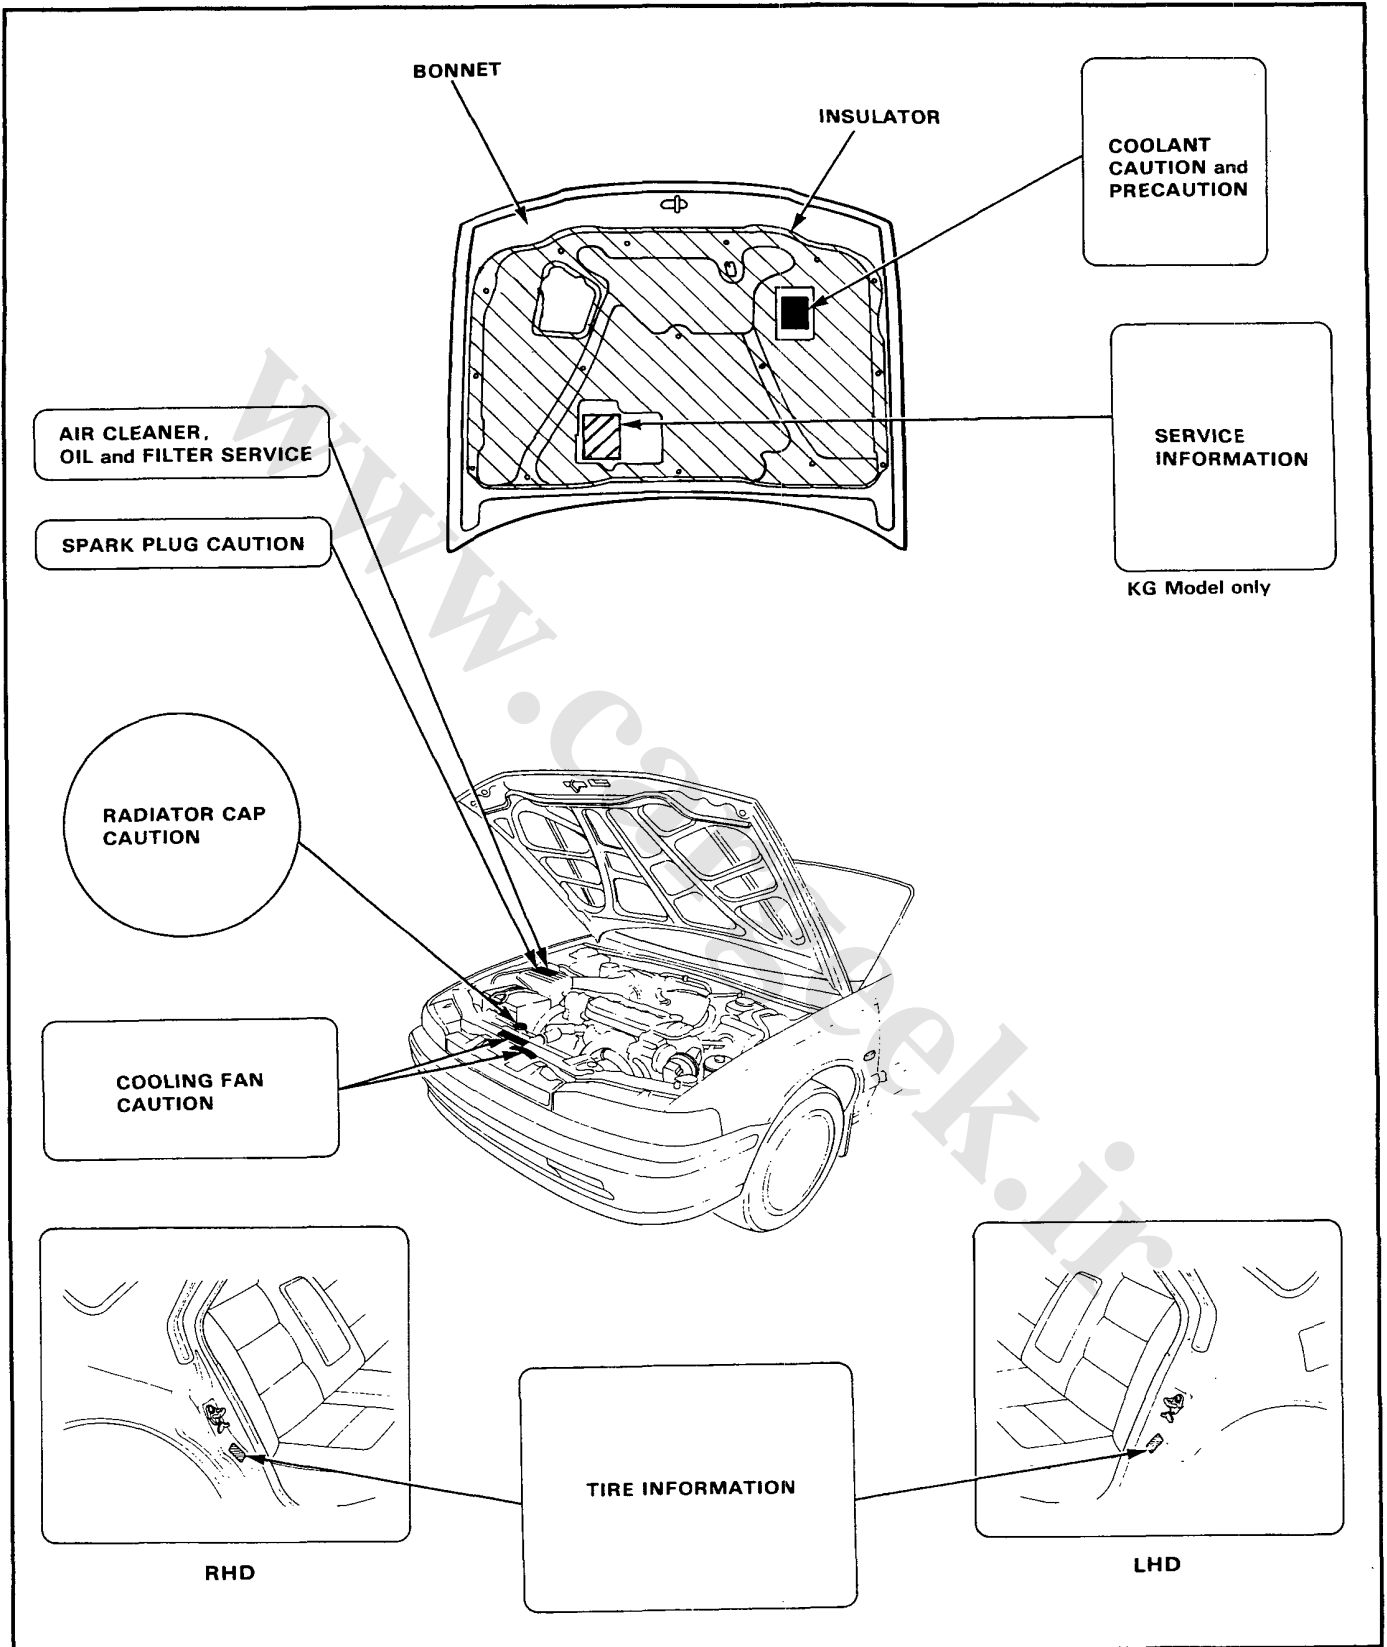





Lift and Support Points

Hoist


1. Place the lift blocks as shown.
2. Raise the hoist a few inches and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

⚠ WARNING When heavy rear components such as suspension, fuel tank, spare tire and tailgate are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight transfer.

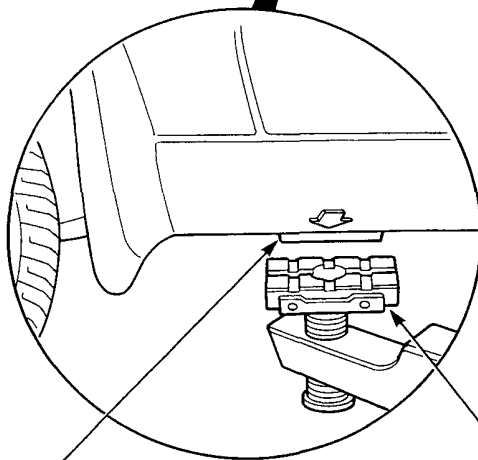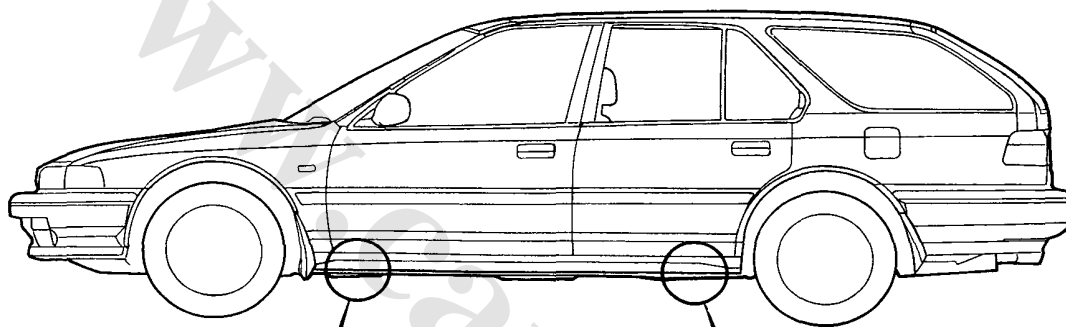

FRONT SUPPORT POINT

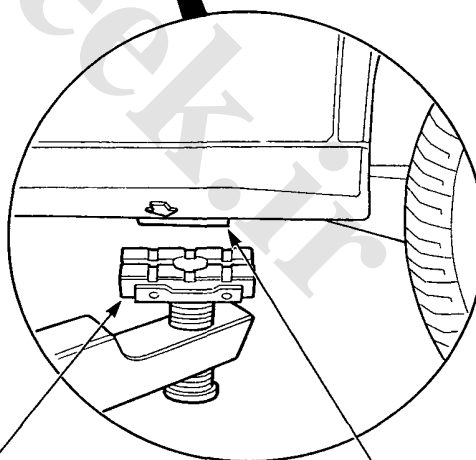

REAR SUPPORT POINT

LIFT BLOCKS

(cont'd)

Lift and Support Points (cont'd)


Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-7 so the car will be approximately level, then lower the car onto the stands.


▲ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front

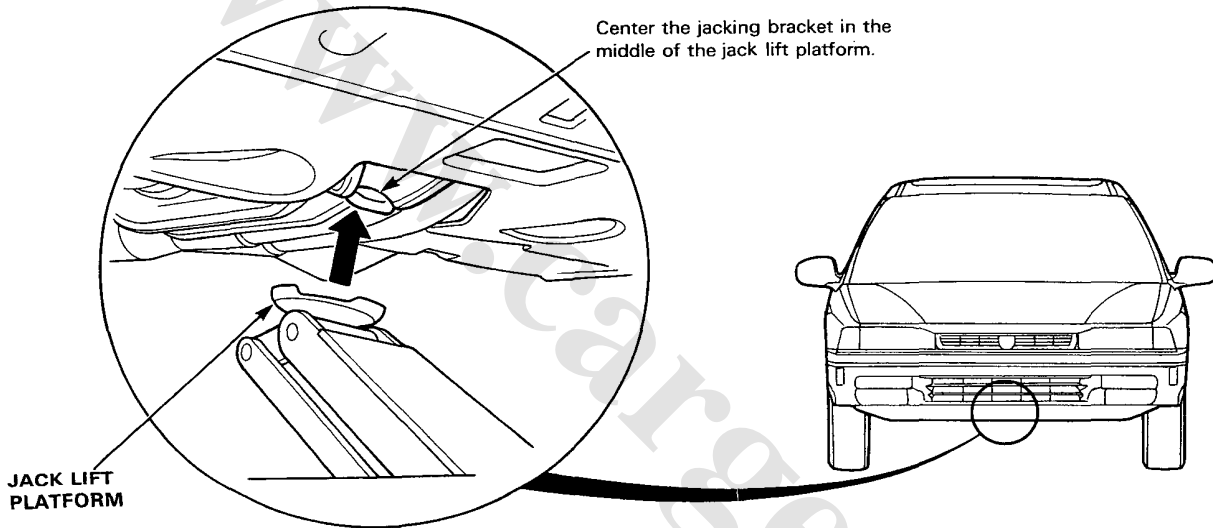




Rear

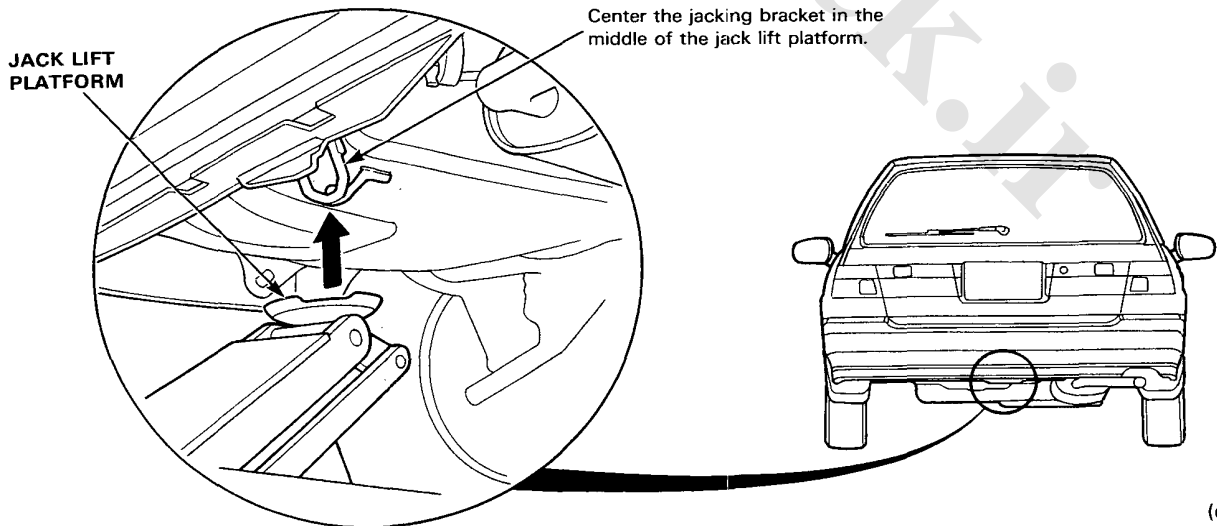

(cont'd)



Safety Stands

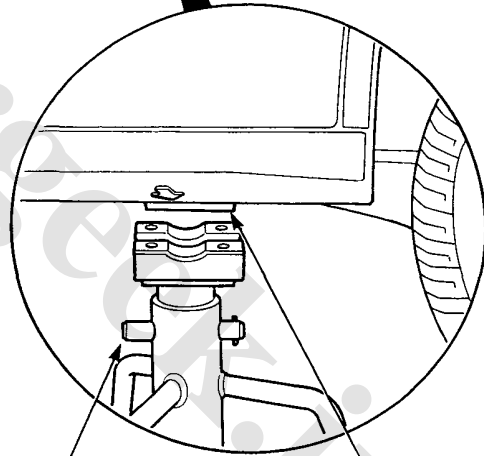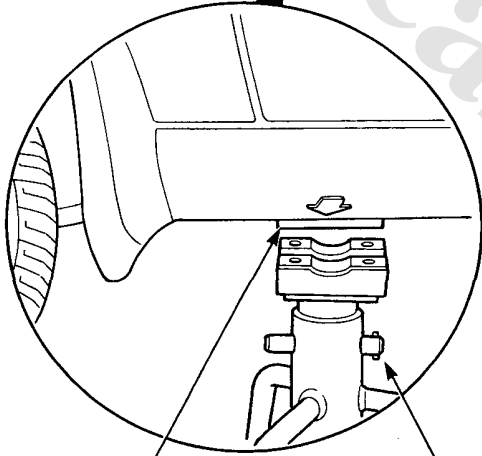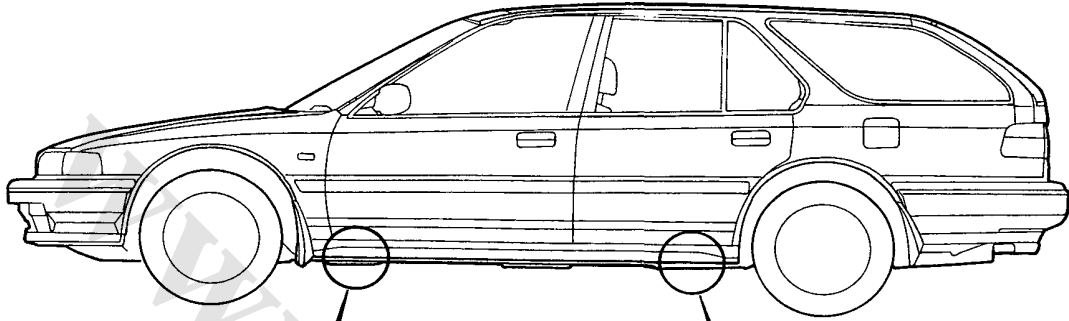

FRONT SUPPORT POINT

SAFETY STANDS

REAR SUPPORT POINT

Towing

If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and his chains and lift straps, to avoid damaging the bumper and the body under it.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A chain may be attached to the hook shown in the picture. Do not attach a tow bar to either bumper.

▲ WARNING

DO NOT push or tow a car to start it. The forward surge when the engine starts could cause a collision. On some types, also, under some conditions, the catalytic converter could be damaged. A car equipped with an automatic transmission cannot be started by pushing or towing.

If the car is to be towed with the front wheels on the ground, observe the following precautions:

Manual Transmission

Shift the transmission to Neutral and turn the ignition key to the "I" position.


Automatic Transmission

First, check the automatic transmission fluid level. Start the engine and shift to D₄, then to N. Return the ignition key to the "I" position.

CAUTION:

- Do not tow with front wheels on the ground when the automatic transmission fluid level is low or the transmission cannot be shifted with the engine running.
- Do not exceed 55 km/h (35 mph) or tow for distances of more than 80 km (50 miles).

TIE DOWN BRACKETS

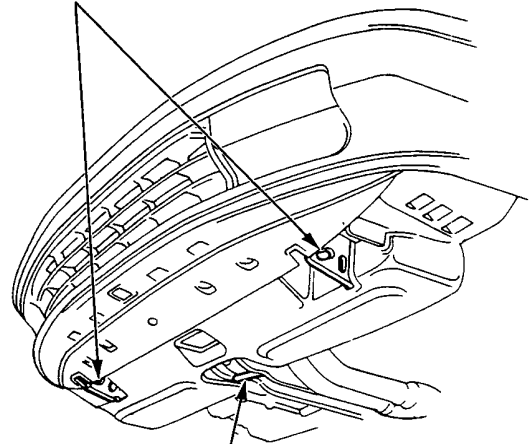

TOWING HOOK




Preparation of Work


Special Caution Item For This Car

● Fuel Line Servicing


- Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

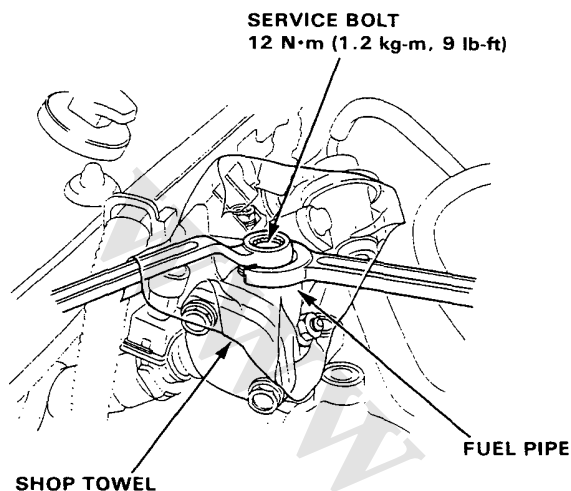

- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

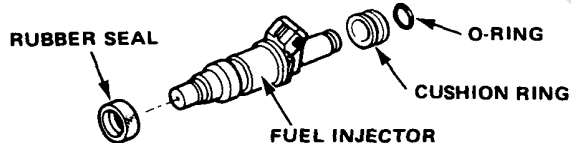

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

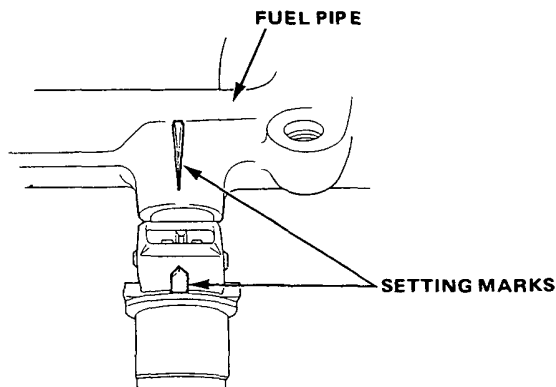

● Inspection for fuel leakage

- After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

● Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, A/T, and Cruise control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the control units.

The control unit locations:

- Fuel-Injection, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring. When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).


● Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine liquid gasket part No. 0Y740-99986.

- Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
- Apply liquid gasket evenly, being careful to cover all the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing the old residue.
- Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


Preparation of Work

CAUTION: Observe all safety precautions and notes while working.


- Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

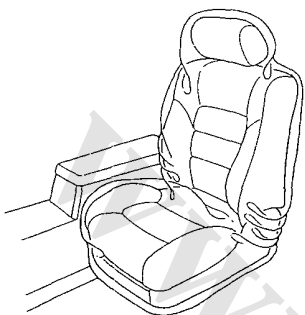


- Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate at frequently as possible when work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

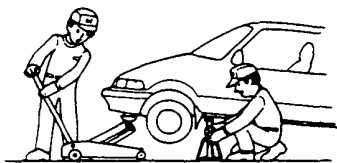


- Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.

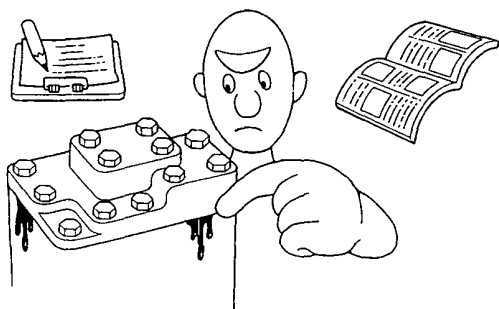


- Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.

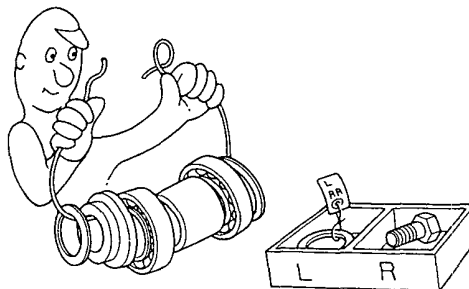


- Use the special tool when use of such a tool is specified.

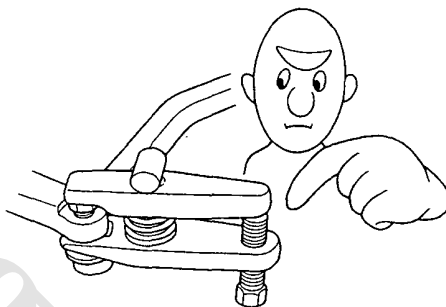


- Parts must be assembled with the proper torque according to the maintenance standards established.
- When tightening a series of bolts or nuts, begin with the center or large diameter bolts and tighten them in crisscross pattern in two or more steps.

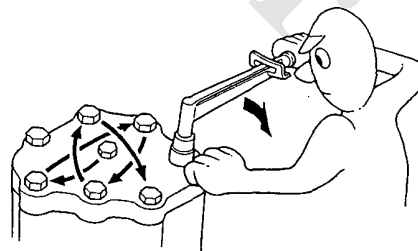


- Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

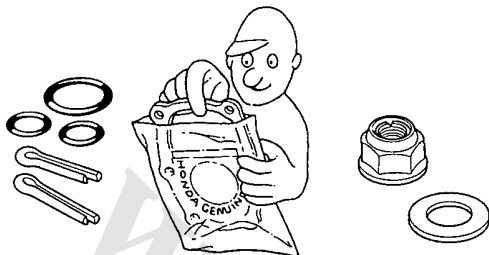

- Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

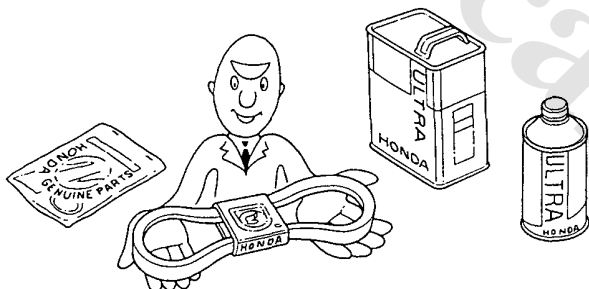


- Coat or fill parts with specified grease as specified (page 4-2). Clean all removed parts with solvent upon disassembly.

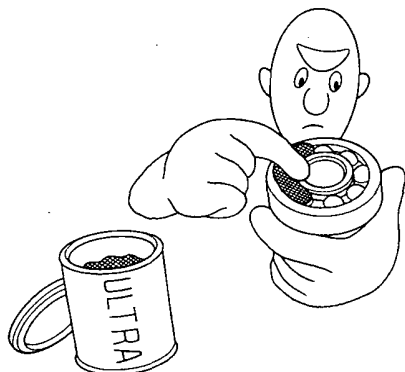


- Brake fluid and hydraulic components

- When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
- Do not mix different brands of fluid as they may not be compatible.
- Do not reuse drained brake fluid.
- Because brake fluid can cause damage to painted and resin surfaces, care should be taken not to spill it on such materials. If spilled accidentally, quickly rinse it with water or warm water from painted or resin surfaces.
- After disconnecting brake hoses or pipes, be sure to plug the openings to prevent loss of brake fluid.
- Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.

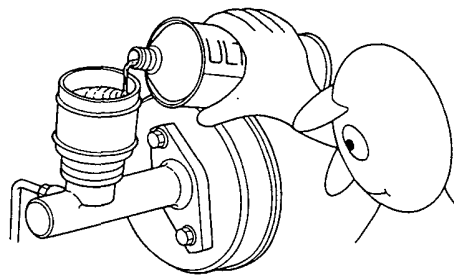


- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.
- Avoid oil or grease getting on rubber parts and tubes, unless specified.
- Upon assembling, check every part for proper installation and operation.

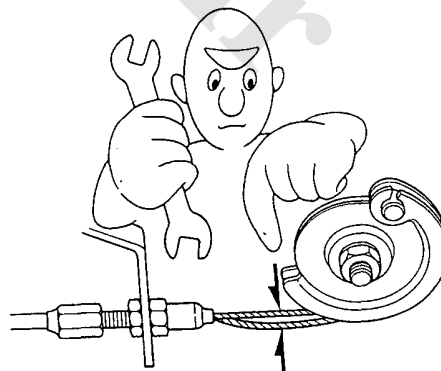


Preparation of Work

Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

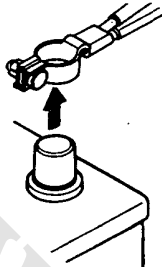


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

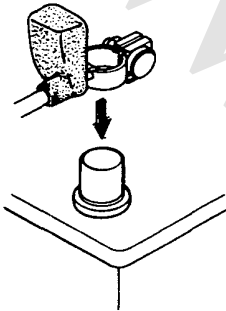

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

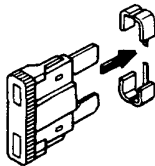


- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

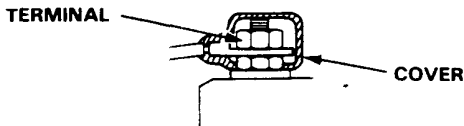


- As to locking connectors, be sure to disengage the lock before disconnecting.
- Conventional connectors may be of two types, those in which the lock is pressed to remove, and those in which the lock is pulled up to remove. Be sure to ascertain the type of locking device before beginning work. The following is a depiction of the means of disconnecting various typical connectors.

Press to disengage:

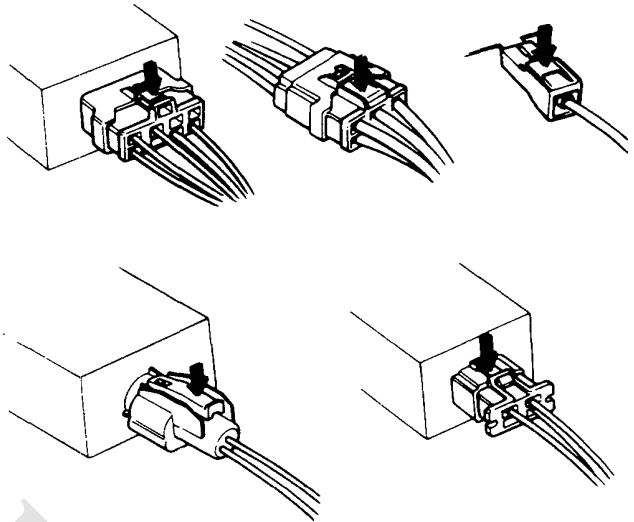


Pull up to disengage:

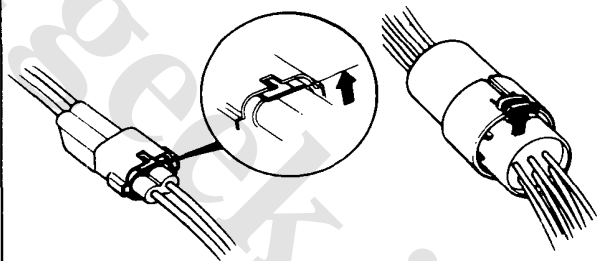




When new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.

- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector.
Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

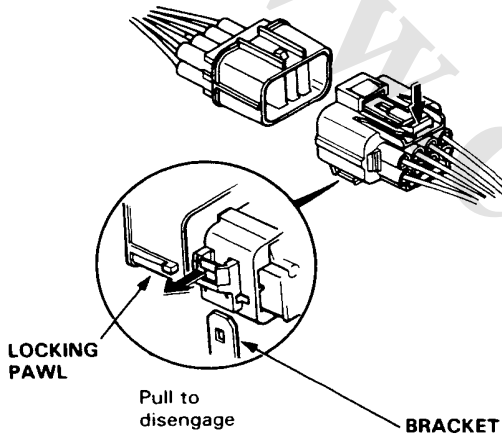

- Push the locking tab to disconnect.

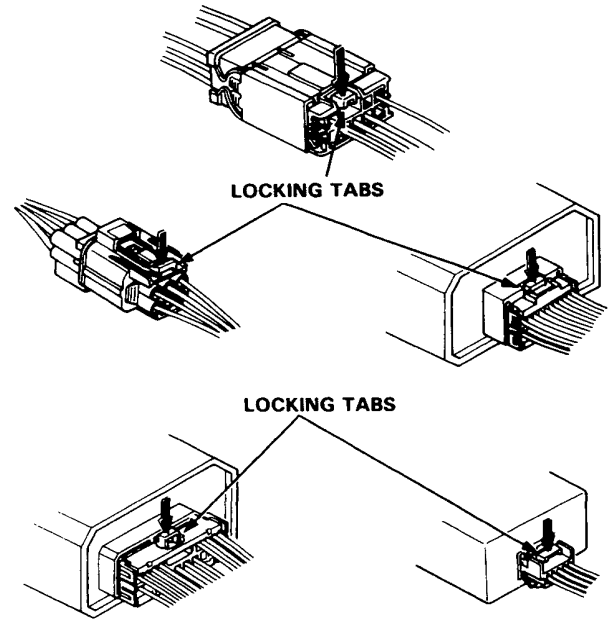


(cont'd)


Preparation of Work

Electrical (cont'd)

- Pull the locking tab to remove the connector from the bracket.

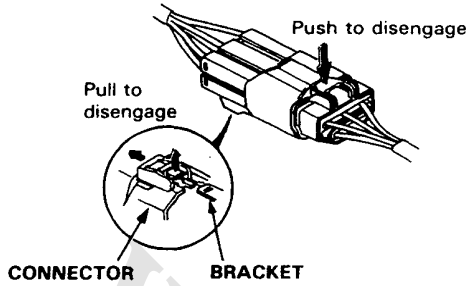


- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

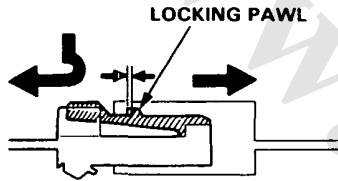


- When disconnecting a connector, pull it off from the mating connector by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.


Good

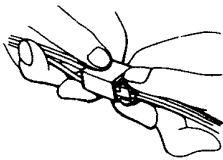

No Good

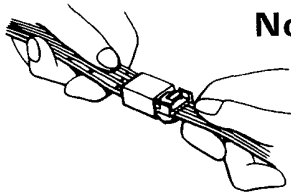


No Good

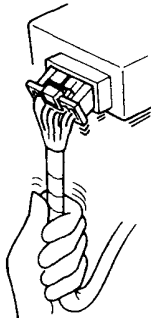


- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

No Good

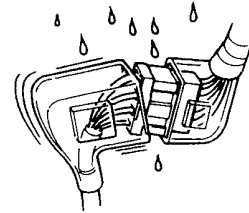


- Before connecting connectors, check to see that the terminals are in place and not bent or distorted.

No Good

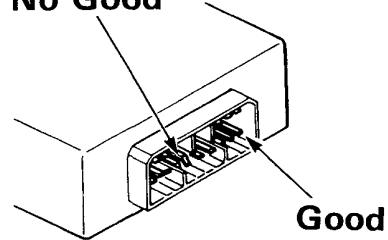


- Check for loose retainers and rubber seals. The illustration shows examples of terminal and seal abnormality.

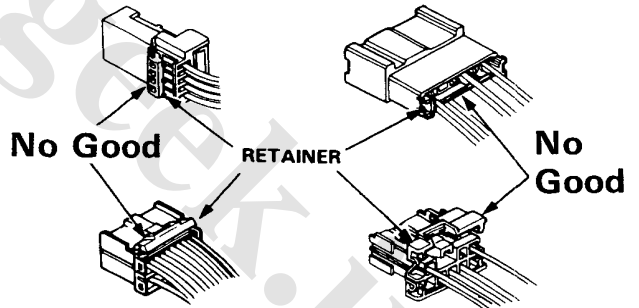

- Example of waterproof connector:


No Good

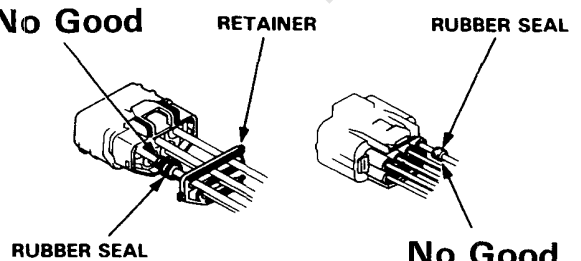


No Good




Good

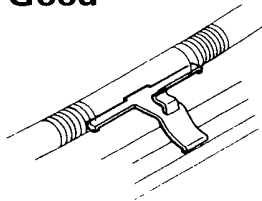


No Good

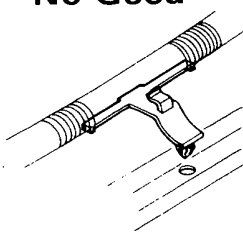


Good

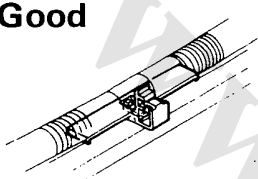


No Good

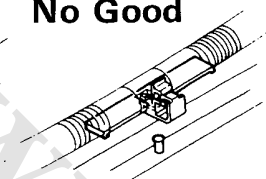


- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

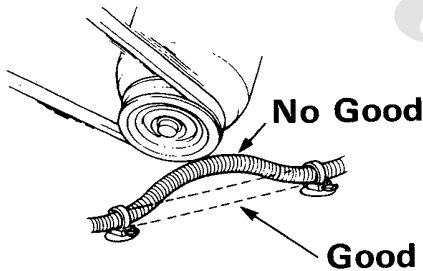


- Always keep a safe distance between wire harnesses and any heated parts.

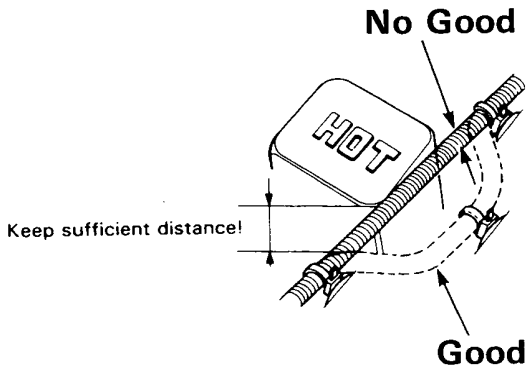

- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

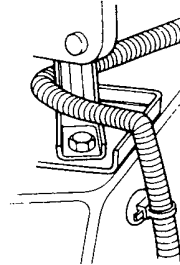


No Good

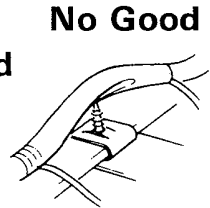


No Good

- Route harnesses so they are not pulled taut or slackened excessively.

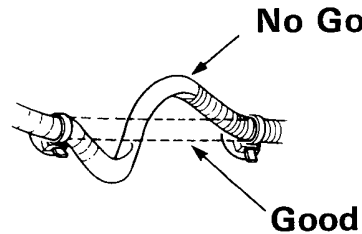


- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

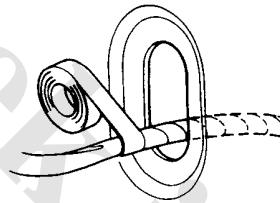


- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

Good



No Good




(cont'd)

Preparation of Work

Electrical (cont'd)


- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

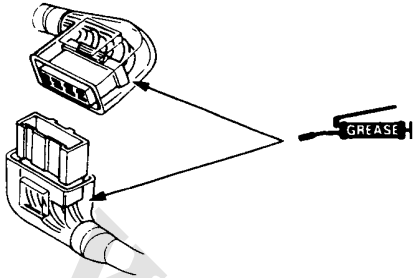


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.




- The locking tab with an angle end should be pushed when connecting.




- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Do not use wire harnesses with a loose wire or connector.

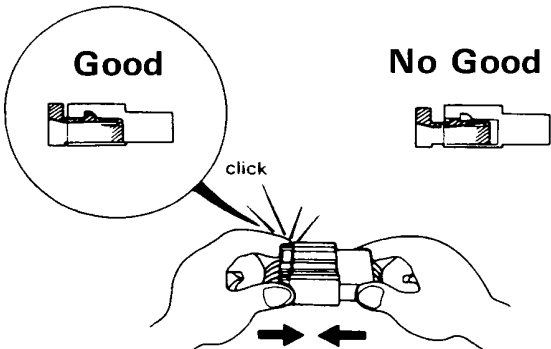



- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

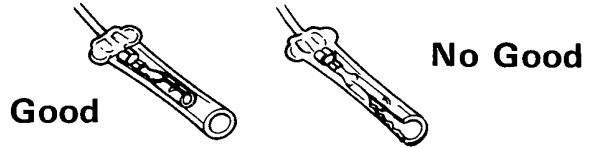

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open end of the cover faces down.

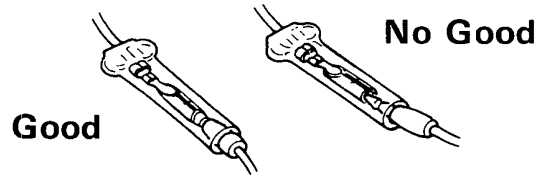


- Secure wires and wire harness to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or harnesses.
- Remove with care not to damage the lock.

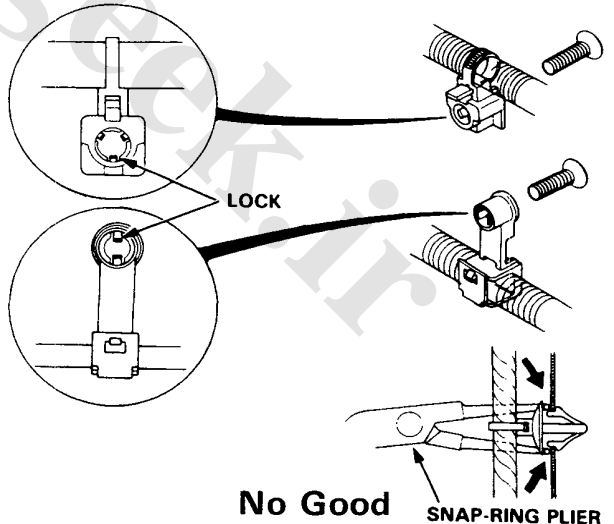





- Seat grommets in their grooves properly.

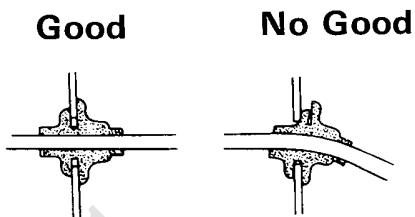

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

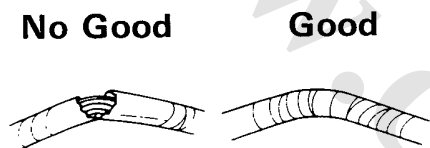


- After installing parts, make sure that wire harnesses are not pinched.

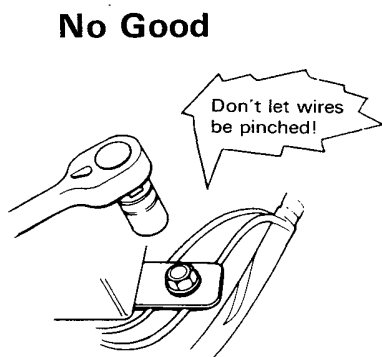


- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfering with adjacent or surrounding parts in all steering positions.


- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

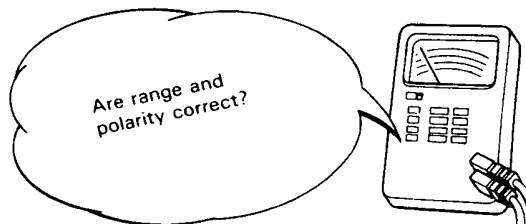

- Always insert the probe of the tester from the wire harness side (except waterproof connector).

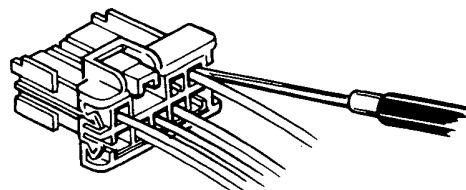

- Make sure to use the probe with a tapered tip.




- Do not drop parts.



Symbol Marks


The following symbols stand for:


 :Apply engine oil.

 :Apply brake fluid.

 :Apply grease.

 :Apply Automatic Transmission Fluid.

 : Apply Power Steering Fluid.

 :Apply or check vacuum.

①, ②, ③, :Sequence for removal or installation.
 ①, ②, ③, :Sequence for removal or installation.

A/C	Air Conditioner
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
B or BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	PGM-FI Electronic Control Unit
EGR	Exhaust Gas Recirculation
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L	Left
LHD	Left Hand Drive
M/T	Manual Transmission
RCV	Poaitive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
P/S	Power Steering
R	Right
RHD	Right Hand Drive
SW	Switch
SOL. V	Solenoid Valve
TDC	Top Dead Center

P	Parking
R	Reverse
N	Neutral
D₄	Drive Position (1st~4th)
D₃	Drive Position (1st~3rd)
2	Fixed 2nd speed
1	Fixed 1st speed
S	S signal/S Switch

Standards and Services Limits
Design Specifications
Body Specifications

www.cargeek.ir

Standards and Service Limits

5. Engine/Cylinder Head, Valve Train

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Compression	250 min ⁻¹ (rpm) and wide-open throttle	Nominal Minimum Maximum variation	1226 kPa (12.5 kg/cm ² , 178 psi) 931 kPa (9.5 kg/cm ² , 135 psi) 196 kPa (2 kg/cm ² , 28 psi)
Cylinder head	Warpage Height	99.95–100.05 (3.935–3.938)	0.05 (0.002)
Camshaft	End play	0.05–0.15 (0.002–0.006)	0.50 (0.020)
	Oil clearance	0.05–0.089 (0.002–0.0035)	0.150 (0.006)
	Runout	0.015 (0.0006)	0.030 (0.001)
	Cam lobe height	IN 38.526 (1.5167) EX 38.972 (1.5343)	—
Valve	Valve clearance	IN 0.24–0.28 (0.0094–0.0110) EX 0.28–0.32 (0.0110–0.1259)	—
	Valve stem O.D.	IN 5.480–5.490 (0.2157–0.2161) EX 5.450–5.460 (0.2145–0.2149)	5.450 (0.2145) 5.420 (0.2133)
	Stem-to-guide clearance	IN 0.025–0.050 (0.0009–0.0019) EX 0.055–0.080 (0.0021–0.0031)	0.08 (0.0031) 0.12 (0.0047)
	Valve seat	Width Valve stem installed height	IN and EX 1.25–1.55 (0.049–0.061) IN 48.245–48.715 (1.8994–1.9179) EX 50.315–50.785 (1.9809–1.994)
Valve spring	Free length	IN (NH) 53.15 (2.0925) (CH) 53.16 (2.0929)	— — —
		EX (NH) 55.78 (2.196)	—
		(CH) 55.80 (2.1968)	—
		Valve guide	I.D. Valve guide installed height
Rocker arm	Arm-to-shaft clearance	IN 0.017–0.050 (0.0007–0.0020) EX 0.018–0.054 (0.0007–0.0021)	0.080 (0.0031) 0.080 (0.0031)

NH: NIHON HATSUJO
CH: CHUO HATSUJO

5. Engine/Engine Block

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Cylinder block	Warpage of deck surface	0.07 (0.003) max.	0.10 (0.004)	
	Bore diameter	85.00–85.02 (3.3464–3.3472)	85.07 (3.3492)	
	Bore taper	—	0.05 (0.002)	
	Reboring limit	—	0.5 (0.02)	
Piston	Skirt O.D. (At 21 mm (0.83 in) from bottom of skirt)	A 84.98–84.99 (3.3456–3.4605)	84.97 (3.3452)	
		B 84.97–84.98 (3.3452–3.3456)	84.96 (3.3448)	
		0.02–0.04 (0.0008–0.0016)	0.05 (0.0020)	
Piston ring	Piston-to-ring clearance	Top 0.035–0.060 (0.0014–0.0024) Second 0.030–0.055 (0.0011–0.0022)	0.130 (0.0051) 0.130 (0.0051)	
		Ring end gap	Top 0.20–0.35 (0.0079–0.0138) Second 0.40–0.55 (0.0157–0.0217) Oil 0.20–0.70 (0.0079–0.0276)	0.60 (0.0236) 0.70 (0.0276) 0.80 (0.0315)
	Connecting rod		Pin-to rod interference	0.013–0.032 (0.0005–0.0013)
		Small end bore diameter	21.968–21.981 (0.8649–0.8654)	—
Large end bore diameter		Nominal 51 (2.008)	—	
	End play installed on crankshaft	0.15–0.30 (0.006–0.012)	0.40 (0.016)	
Crankshaft	Main journal diameter	No. 1, 2 Journals 49.976–50.000 (1.9676–1.9685) No. 3 Journal 49.972–49.996 (1.9674–1.9683) No. 4, 5 Journals 49.984–50.006 (1.9679–1.9688)	— — —	
		Taper/out-of-round, main journal	0.005 (0.0002) max.	0.010 (0.0004)
		Rod journal diameter	47.976–48.000 (1.8888–1.8898)	—
	Taper/out-of-round, rod journal	0.005 (0.0002) max.	0.010 (0.0004)	
		End play	0.10–0.35 (0.004–0.014)	0.45 (0.018)
		Runout	0.015 max (0.0006)	0.020 (0.0008)
Bearings	Main bearing-to journal oil clearance	No. 1, 2 Journals 0.021–0.045 (0.0009–0.0018) No. 3 Journal 0.025–0.049 (0.0011–0.0019) No. 4, 5 Journals 0.013–0.037 (0.0005–0.0015)	0.05 (0.002) 0.054 (0.0021) 0.05 (0.002)	
		Rod bearing-to journal oil clearance	0.021–0.049 (0.0008–0.0019)	0.05 (0.002)

Unit of length: mm (in.)

5. Engine/Engine Block (cont'd)

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT	
Balancer Shaft	Journal diameter	No. 1 journal (Front)	(Rear)	42.722–42.734 (1.6820–1.6824)	—	
		No. 2 journal		20.938–20.950 (0.8243–0.8248)	—	
		No. 3 journal		38.712–38.724 (1.5241–1.5246)	—	
	Journal taper			34.722–34.734 (1.3670–1.3674)	—	
		End play	(Front)	(Rear)	0.005 (0.0002)	—
	Runout				0.100–0.350 (0.0040–0.0138)	—
		Oil Clearance	No. 1 journal (Rear)	No. 1(Front), 3 journal No. 2, journal	0.060–0.180 (0.0024–0.0070)	—
Balancer Shaft Bearing	I.D	No. 1 journal (Front)	(Rear)	42.800–42.820 (1.6850–1.6858)	—	
		No. 2 journal		21.000–21.013 (0.8268–0.8273)	—	
		No. 3 journal		38.800–38.820 (1.5276–1.5283)	—	
				34.800–34.820 (1.3701–1.3710)	—	

5. Engine/Engine Lubrication

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity (US. qt., Imp. qt.)	4.9 (5.2, 4.3) After engine disassembly 3.8 (4.0, 3.3) After oil change, including oil filter 3.5 (3.7, 3.1) After oil change, without oil filter			
Oil pump	Displacement	43.9 ℓ (11.6 US. gal., 9.7 Imp. gal.)/6,000 min ⁻¹ (rpm)			
	Inner-to-outer rotor radial clearance	0.02–0.16 (0.0008–0.0063)			0.2 (0.008)
	Pump body-to-rotor radial clearance	0.10–0.19 (0.0040–0.0075)			0.21 (0.0083)
Relief valve	Pressure setting 80°C (176°F)	Idle	69 kPa (0.7 kg/cm ² , 10 psi) min.		
		3,000 min ⁻¹ (rpm)	3431 kPa (3.5 kg/cm ² , 50 psi)		

5. Engine/Cooling

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Thermostat	Starts to open Full open Valve lift at full open	78°C ± 2 (172°F ± 3) 90°C (194°F) 8 (0.31) max.			86–90°C (187–194°F)
Water pump	Displacement	160 ℓ (42.2 US gal, 35.2 Imp gal)/6,000 min ⁻¹ (rpm)			
Radiator	Capacity (incl. heater) ℓ (US. qt., Imp. qt) (Includes reservoir tank 0.6 (0.63, 0.53) after overhaul at change pressure cap opening pressure	MT: 6.6 (6.97, 5.81) AT: 7.1 (7.50, 6.23) MT: 3.0 (3.17, 2.64) AT: 3.5 (3.70, 3.08) 93–123 kpa (0.95–1.25 kg/cm ² , 13.5–17.8 psi)			
Cooling fan	"ON" temperature "OFF" temperature "ON" temperature (Fan timer) "OF" temperature (Fan timer)	87°–93°C (189°–199°F) 80°–91°C (176°–196°F) 105°–111°C (221°–231°F) 98°–109°C (208°–228°F)			

Standards and Service Limits

6. Fuel and Emissions

	MEASUREMENT	STANDARD (NEW)
Fuel Pump (PGM-FI)	Delivery pressure Displacement (minimum in 10 seconds) Relief valve opening pressure	240–279 Pa (2.45–2.85 kg/cm ² , 35–41 lb-ft) 230 cc (7.8 US oz., 8.1 Imp oz.) 441–588 kPa (4.5–6.0 kg/cm ² , 64–85 psi)
Fuel Pump (CARB)	Delivery pressure Displacement (minimum in minute at 12V)	9–14 kPa (0.09–0.14 kg/cm ² , 1.3–2.0 psi) 760 cc (25.7 US oz., 26.8 Imp oz.)
Pressure Regulator (PGM-FI)	Pressure with regulator vacuum hose disconnected	240–279 kPa (2.45–2.85 kg/cm ² , 35–41 psi)
Fuel Tank	Capacity	65 ℓ (17.2 US gal., 14.3 Imp gal.)
Engine	Fast idle	1,400 ± 200 min ⁻¹ (rpm)
	Idle speed (with headlights and cooling fan OFF) MT AT	770±50 min ⁻¹ (rpm) 770±50 min ⁻¹ (rpm) in P or N positions
	Idle CO	0.1% maximum



7. Clutch

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	210 (8.3) to floor	---
	Stroke	142.0 (5.6)	---
	Pedal play	9–15 (0.4–0.6)	---
	Disengagement height	90 (3.5) min. to floor 80 (3.1) min. to carpet	---
Flywheel	Clutch surface runout	0.05 (0.002) max.	0.15 (0.006)
Clutch disc	Rivet head depth	1.3 (0.05) min.	0.2 (0.008)
	Surface runout	0.8 (0.03) max.	1.0 (0.04)
	Thickness	8.5–9.2 (0.33–0.36)	6.1 (0.24)
Clutch cover	Unevenness of diaphragm spring	0.6 (0.02) max.	0.8 (0.03)

8. Manual Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	1.9 (2.0, 1.7) at assembly 2.0 (2.1, 1.8) at oil change	
Mainshaft	End play	0.10–0.16 (0.0039–0.0063)	Adjust with a shim. 29.93 (1.1783)
	Diameter of ball bearing contact area	27.977–27.990 (1.1015–1.1020)	37.930 (1.4933)
	Diameter of third gear contact area	37.984–38.000 (1.4954–1.4961)	27.940 (1.1000)
	Diameter of ball bearing contact area Runout	27.987–28.000 (1.1018–1.1024) 0.02 (0.008) max.	0.05 (0.002)
Mainshaft third and fourth gears	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness 3rd gear	32.42–32.47 (1.276–1.278)	32.3 (1.27)
	4th gear	30.92–30.97 (1.217–1.219)	30.8 (1.21)
Mainshaft fifth gear	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness	30.42–30.47 (1.198–1.200)	30.3 (1.193)
Countershaft	End play	0.05–0.21 (0.0019–0.0083)	0.50 (0.02)
	Diameter of needle bearing contact area	33.000–33.015 (1.2992–1.2998)	32.95 (1.297)
	Diameter of ball bearing needle bearing contact area	24.987–25.000 (0.9837–0.9845)	24.94 (0.982)
	Diameter of low gear contact area	39.984–40.000 (1.5742–1.5748)	39.93 (1.572)
	Runout	0.02 (0.0008) max.	0.05 (0002)

8. Manual Transmission (cont'd)

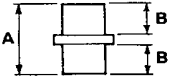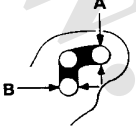	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Countershaft low gear	I.D. End play	46.009–46.025 (1.8114–1.8120) 0.04–0.10 (0.002–0.004)	46.08 (1.814) Adjust with a washer.
Countershaft second gear	I.D. End play Thickness	50.009–50.025 (1.9689–1.9695) 0.04–0.10 (0.002–0.004) 33.92–33.97 (1.335–1.337)	50.08 (1.972) Adjust with a collar. 32.8 (1.2913)
Spacer collar (Countershaft second gear)	I.D. O.D. Length	36.48–36.49 (1.4362–1.4366) 43.989–44.000 (1.7318–1.7323) 29.03–29.05 (1.1429–1.1437) 28.98–29.00 (1.1409–1.1417)	36.50 (1.437) 43.94 (1.730) — —
Spacer collar (Mainshaft fourth and fifth gears)	I.D. O.D. Length	31.002–31.012 (1.2205–1.2209) 37.989–38.000 (1.4956–1.4961) 56.45–56.55 (2.222–2.226) 26.03–26.08 (1.0248–1.0268)	31.06 (1.223) 37.94 (1.494) — 26.01 (1.024)
			
Reverse idler gear	I.D. Gear-to-reverse gear shaft clearance	20.016–20.043 (0.7880–0.7891) 0.036–0.084 (0.0014–0.0033)	20.09 (0.7909) 0.160 (0.006)
Synchronizer ring	Ring-to-gear clearance (ring pushed against gear)	0.85–1.10 (0.0335–0.0433)	0.40 (0.016)
Shift fork	Synchronizer sleeve groove width Fork-to-synchronizer sleeve clearance	6.75–6.85 (0.266–0.270) 0.35–0.65 (0.014–0.026)	— 1.0 (0.039)
Reverse shift fork	Pawl groove width Fork-to-reverse idle gear clearance Groove width Fork-to fifth/reverse shift Shaft clearance	13.0–13.3 (0.51–0.52) 0.5–1.1 (0.02–0.43) 7.05–7.25 (0.278–0.2854) 7.4–7.7 (0.29–0.30) 0.05–0.35 (0.002–0.014) 0.4–0.8 (0.02–0.03)	1.8 (0.07) — — 0.5 (0.02) 1.0 (0.04)
			
Shift arm	I.D. Shift arm-to-shaft clearance Shift fork diameter at contact area Shift-arm-to-shift fork shaft clearance	15.973–16.000 (0.6289–0.6299) 0.005–0.059 (0.0002–0.0023) 12.9–13.0 (0.508–0.512) 0.2–0.5 (0.01–0.02)	— — — 0.6 (0.02)
Select lever	Pin size of contact area Shaft outer diameter Shift arm cover clearance	7.9–8.0 (0.311–0.315) 15.41–15.68 (0.607–0.617) 0.032–0.102 (0.0013–0.0040)	— — —
Shift arm lever	O.D. Transmission housing clearance	15.941–15.968 (0.6276–0.6287) 0.027–0.139 (0.0011–0.0055)	— —
Inter lock	Bore diameter Shift arm lever clearance	16.00–16.05 (0.630–0.632) 0.032–0.109 (0.0013–0.0043)	— —
Ring gear	Backlash	0.085–0.142 (0.0033–0.0056)	0.200 (0.0079)
Differential carrier	Pinion shaft bore diameter Carrier-to-pinion shaft clearance Driveshaft bore diameter Carrier-to-driveshaft clearance	18.000–18.018 (0.7087–0.7094) 0.017–0.047 (0.0007–0.0019) 28.005–28.025 (1.1026–1.1033) 0.020–0.062 (0.0008–0.0024) 0.055–0.091 (0.0022–0.0036)	— 0.100 (0.0039) — 0.120 0.150
Differential pinion gear	Backlash Pinion gear bore diameter Pinion gear-to-pinion shaft clearance	0.05–0.15 (0.002–0.006) 18.042–18.066 (0.7103–0.7113) 0.059–0.095 (0.0023–0.0037)	Selection with 7 types of washers. — 0.150 (0.0059)
Differential taper roller bearing	Preload	1.4–2.6 N·m (14–26 kg·cm, 1.0–1.9 lb·ft)	Selection with 20 types of shims.

Standards and Service Limits

9. Automatic Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	2.4 (2.5, 2.1) at oil change 6.0 (6.4, 5.2) at assembly		
Hydraulic pressure	Line pressure at 2,000 min ⁻¹ (rpm)	784 kPa (8.0 kg/cm ² , 113 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open	
	4th clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 74 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	460 kPa (4.7 kg/cm ² , 66 psi) Throttle valve full-closed 735 kPa (7.5 kd/cm ² , 106 psi) Throttle valve more than 2/8 open	
	3rd clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 71 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve than 2/8 open	
	2nd clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open	
	1st clutch pressure at 2,000 min ⁻¹ (rpm)	784-833 kPa (8.0-8.5 kg/cm ² , 113-120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)	
	Throttle B pressure	closed	0	—
		open	784-833 kPa (8.0-8.5 kg/cm ² , 113-120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)
Stall speed	Check with car on level ground	2,350-2,650 min ⁻¹ (rpm)		
Clutch	Clutch initial clearance	1st hold	0.8-1.0 (0.031-0.039)	
		1st, 2nd	0.65-0.85 (0.026-0.033)	
		3rd, 4th	0.4-0.6 (0.016-0.024)	
	Clutch return spring free length	1st, 2nd, 3rd, 4th, 33.5 (1.318)	31.5 (1.240)	
	Clutch disc thickness	1.88-2.0 (0.074-0.0807)	Until grooves worn out	
	Clutch plate thickness	1st, 1.95-2.05 (0.0767-0.0807)	Discoloration ↑ ↓ Discoloration	
		2nd, 2.55-2.65 (0.1003-0.1043)		
3rd, 4th, 2.25-2.35 (0.0885-0.0925)				
Clutch end plate thickness	Mark 1	2.05-2.10 (0.081-0.083)		
	Mark 2	2.15-2.20 (0.085-0.087)		
	Mark 3	2.25-2.30 (0.089-0.091)		
	Mark 4	2.35-2.40 (0.093-0.094)		
	Mark 5	2.45-2.50 (0.096-0.098)		
	Mark 6	2.55-2.60 (0.100-0.102)		
	Mark 7	2.65-2.70 (0.104-0.106)		
	Mark 8	2.75-2.80 (0.108-0.110)		
	Mark 9	2.85-2.90 (0.112-0.114)		

9. Automatic Transmission (cont'd)

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT		
Valve body	Stator camshaft needle bearing contact area I.D. (torque converter side)	27.000—27.021 (1.0630—1.0638)		Wear or damage		
	Stator camshaft needle bearing contact area I.D. (oil pump side)	29.000—29.013 (1.417—1.422)		—		
	Oil pump driven gear I.D.	14.016—14.034 (0.5518—0.5525)		Wear or damage		
	Oil pump shaft O.D.	13.980—13.990 (0.5504—0.5508)		Wear or damage		
	Oil pump gear side clearance	0.03—0.05 (0.0012—0.0020)		0.07 (0.0028)		
	Oil pump gear-to-body clearance	—		—		
	Drive Driven	0.21—0.265 (0.0083—0.0104) 0.07—0.125 (0.0027—0.0049)		—		
Regulator valve body	Sealing ring contact area diameter	35.000—35.025 (1.3780—1.3789)		35.050 (1.3799)		
Accumulator body	Sealing ring contact area diameter	32.000—32.025 (1.2598—1.2608)		32.05 (1.2618)		
Stator camshaft	Sealing ring contact area diameter	29.000—29.013 (1.1417—1.1422)		29.05 (1.1436)		
Shifting device and parking brake control	Reverse shift fork thickness	5.90—6.00 (0.232—0.236)		5.40 (0.213)		
	Parking brake ratchet pawl	—		Wear or other defect		
	Parking gear	—		Wear or other defect		
	Throttle cam stopper	Carburetor PGM-FI	18.5—18.6 (0.7283—0.7322) 17.0—17.1 (0.6692—0.6732)	—		
Servo body	Shift fork Shaft I.D.	A	14.000—14.005 (0.5512—0.5514)	—		
		B	14.006—14.010 (0.5514—0.5516)	—		
		C	14.011—14.015 (0.5516—0.5518)	—		
	Shift fork shaft valve bore I.D.	37.000—37.039 (1.4567—1.4582)		37.045 (1.4585)		
Transmission	Diameter of needle bearing contact area	22.984—23.000 (0.9047—0.9055)		Wear or damage		
	On mainshaft and stator shaft	31.984—32.000 (1.2592—1.2598)		—		
	On mainshaft 4th gear collar	—		—		
	On mainshaft 3rd gear collar	Carburetor PGM-FI	41.984—42.000 (1.6529—1.6535) 45.984—46.000 (1.8103—1.8110)	—		
	On countershaft 1st gear collar	40.984—42.000 (1.6135—1.6535)		—		
	On countershaft 4th gear collar	35.980—35.996 (1.4165—1.4171)		—		
	On countershaft reverse gear collar	35.984—36.000 (1.4166—1.4173)		—		
	On countershaft parking gear	39.984—40.000 (1.5741—1.5748)		—		
	On secondary shaft 1st gear	31.975—31.991 (1.2588—1.2594)		—		
	On secondary shaft 2nd gear	35.984—36.000 (1.4166—1.4173)		—		
	Reverse idle shaft holder I.D.	14.416—14.434 (0.5675—0.5682)		—		
	Mainshaft 3rd gear I.D.	52.000—52.019 (2.0472—2.0479)		—		
	4th gear I.D.	38.000—38.016 (1.4960—1.4966)		—		
	Countershaft 1st gear I.D.	47.000—47.016 (1.8504—1.8510)		—		
	4th gear I.D.	42.000—42.016 (1.6535—1.6541)		—		
	reverse gear I.D.	42.000—42.016 (1.6535—1.6541)		—		
	idle gear I.D.	48.000—48.016 (1.8897—1.8903)		—		
	Secondary shaft 1st gear I.D.	37.000—37.016 (1.4566—1.4573)		—		
	2nd gear I.D.	42.010—42.025 (1.6539—1.6545)		—		
	Mainshaft 3rd gear collar length	20.000—20.050 (0.7874—0.7893)		—		
	4th gear collar length	47.500—47.550 (1.8700—1.8720)		—		
	Countershaft 1st gear collar length	27.500—27.550 (1.0826—1.0846)		—		
	4th gear collar length	20.04—20.08 (0.7889—0.7905)		—		
	reverse gear collar length	15.00—15.05 (0.5905—0.5925)		—		
	Secondary shaft distance collar length	4.95—5.00 (0.1948—0.1968)		—		
	Countershaft 1st gear thickness	1.45—1.50 (0.0570—0.0590)		—		
	Countershaft parking gear length	25.030—25.048 (0.9854—0.9861)		Wear or damage		
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS	
Spring	Regulator valve Spring	A	1.8 (0.0709)	14.7 (0.5887)	86.5 (3.4055)	16.5
		B	1.8 (0.0709)	9.6 (0.3780)	44.0 (1.7323)	7.5
	Stator reaction spring	5.5 (0.2165)		37.4 (1.4724)	30.3 (1.1929)	2.1
	Torque converter check valve spring	1.1 (0.0433)		8.4 (0.3307)	33.8 (1.3307)	12.5
	Relief valve spring	1.0 (0.0394)		8.4 (0.3307)	39.1 (1.5393)	15.1
	Cooler relief valve spring	1.1 (0.0433)		8.4 (0.3307)	46.8 (1.8425)	17.0
	2nd orifice control valve spring	0.6 (0.0236)		6.6 (0.2598)	52.2 (2.0551)	21.0
	Servo orifice control valve spring	0.8 (0.0315)		6.6 (0.2598)	52.5 (2.0669)	33.0
	4th exhaust valve spring	0.9 (0.0354)		7.1 (0.2795)	60.8 (2.3936)	28.9
	1-2 shift spring	1.0 (0.0393)		8.6 (0.3386)	41.3 (1.6259)	16.9
	2-3 shift spring	0.9 (0.0354)		7.6 (0.2992)	57.0 (2.2440)	26.8
	1st accumulator spring	2.1 (0.0826)		16.3 (0.6417)	96.0 (3.7795)	17.1
	4th accumulator spring	2.9 (0.1142)		22.0 (0.8661)	84.5 (3.3267)	10.9
	2nd accumulator spring	3.2 (0.1260)		20.7 (0.8149)	80.7 (3.1771)	10.8
	3rd accumulator spring	2.8 (0.1102)		17.5 (0.6889)	94.2 (3.7086)	16.1
	L/C shift spring	0.9 (0.0354)		7.6 (0.2992)	73.7 (2.9016)	32.0
	L/C timing spring	0.8 (0.0314)		6.6 (0.2598)	64.0 (2.5196)	40.1
	D-inhibitor spring (Servo control valve spring)	1.0 (0.0394)		8.1 (0.3188)	52.6 (2.0708)	22.4
	3rd kick-down spring	1.1 (0.0433)		7.6 (0.2992)	48.3 (1.9015)	23.3
	2nd kick-down spring	1.2 (0.0472)		7.1 (0.2795)	46.9 (1.8464)	20.6
	Throttle adjust spring	0.8 (0.0314)		6.2 (0.2440)	30.0 (1.1811)	8.0
	Throttle B spring	1.5 (0.0591)		8.5 (0.3346)	41.5 (1.6334)	11.2
	1st-hold accumulator spring	4.0 (0.1574)		25.0 (0.9842)	64.7 (2.5472)	7.3
	Modulator valve spring/CPC valve spring	1.4 (0.0551)		9.4 (0.3700)	33.0 (1.2992)	10.5
	L/C control spring	0.8 (0.0314)		6.6 (0.2598)	41.0 (1.6141)	25.0

Standards and Service Limits

9. Automatic Transmission (cont'd)

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Rign gear	Backlash	0.085—0.142 (0.003—0.006)	0.200 (0.008)
Differential carrier	Pinion shaft bore diameter	18.000—18.018 (0.7087—0.7094)	—
	Carrier-to-pinion shaft clearance	0.017—0.047 (0.001—0.002)	0.100 (0.004)
	Driveshaft bore diameter	28.005—28.025 (1.1026—1.1033)	—
	Carrier-to driveshaft clearance	0.025—0.066 (0.001—0.003)	0.120 (0.005)
Differential pinion gear	Backlash	0.08—0.15 (0.03—0.006)	Adjust with a washer
	Pinion gear bore diameter	18.042—18.066 (0.710—0.711)	—
	Pinion gear-to pinion shaft clearance	0.059—0.095 (0.002—0.004)	0.150 (0.006)
Differential taper roller bearing preload	For used bearing	2.5—3.7 N·m (25—37 kg-cm, 22—32 lb-in)	Adjust with a washer
	After replacement of bearing	2.8—4.0 N·m (28—40 kg-cm, 24—35 lb-in)	Adjust with a washer

11. Steering

MEASUREMENT		STANDARD (NEW)	
Steering wheel	Play	10 (0.39) maximum	
Gearbox	Pinion starting torque	Below 1.0N-m (10 kg-cm, 0.72 lb-ft)	
	Angle of rack guide screw loosend from locked position	35° \pm 5°	
Pump	Pump pressure with valve closed (oil temperature: 40°C/104°F minimum) Do not run for more than 5 seconds	7,845—8,826 kPa (80—90 kg/cm ² , 1,138—1,280 psi) at idle	
Power steering fluid	Capacity	0.5 ℓ (0.53 US qt., 0.44 Imp qt.)	
	Reservoir At change (approx.)	1.8 ℓ 1.90 US qt. 1.58 Imp qt.)	
Power steering belt	Deflection between pulleys with 98 N (10 kg, 22 lbs) force	For used belt	13.0—16.0 (0.51—0.62)
		For new belt	9.5—11.5 (0.37—0.45)
	Belt tension between pulleys (measured with tension gauge)	For used belt	343—490 N (35—50 kg, 77—110 lb)
		For new belt	686—882 N (70—90 kg, 154—198 lb)

12. Suspension

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Wheel alignment	Total toe	Front	0±2 (0±0.08)
		Rear	IN 4±2 (0.16±0.08)
	Camber	Front	0° 00' ± 1'
		Rear	-0° 30' ± 1'
	Caster	Front	3° 00' ± 1'
Front Wheel turning angle	Inward wheel	39° ± 2'	
	Outward wheel (reference)	29° 30'	
Wheel	Rim runout	Steel wheel	Below 1.0 (0.04)
		Aluminum wheel	Below 1.0 (0.04)
		Axial	Below 0.7 (0.03)
		Radial	Below 0.7 (0.03)
Wheel bearing	End play	Front	0—0.05 (0—0.002)
		Rear	0—0.05 (0—0.002)

Unit of length: mm (in.)

13. Brakes

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Parking brake lever	Play in stroke 200 N (20 kg, 44 lbs)		To be locked when pulled 4–8 notches	---
Foot brake pedal	Pedal height (from floor)	MT AT	190 (7.5) 195 (7.7)	---
Master cylinder	Piston-to-push rod clearance		0–0.4 (0–0.016)	---
Disc brake	Disc thickness	Front	23.0 (0.91)	21.0 (0.83)
		Rear	10.0 (0.39)	8.0 (0.32)
	Disc runout	Front	---	0.10 (0.004)
		Rear	---	0.15 (0.006)
Disc parallelism Pad thickness	Front and rear	12.5 (0.49) 9.0 (0.35)	0.015 (0.0006) 1.6 (0.06) 1.6 (0.06)	
Brake booster	Characteristics at 20 kg (44 lbs) pedal pressure		Line pressure Unit: kPa (kg/cm ² /psi)	
	Vacuum			
	0 mm (0 in) Hg 300 mm (11.8 in) Hg 500 mm (19.7 in) Hg		922 (9.4/134) minimum 5,494 (56/796) minimum 8,535 (87/1,237) minimum	

15. Air Conditioner

	MEASUREMENT		STANDARD (NEW)
Air conditioner system	Lubricant capacity	Condenser Evaporator Line or hose Reservoir	10 cc (0.3 US oz., 0.4 Imp oz.) 25 cc (0.8 US oz., 0.9 Imp oz.) 10 cc (0.3 US oz., 0.4 Imp oz.) 10 cc (0.3 US oz., 0.4 Imp oz.)
Compressor	Lubricant capacity Stator coil resistance at 20°C (68°F) Pulley-to pressure plate clearance		900–950 g (31.7–33.5 oz) 3.4–3.8 Ω 0.35–0.65 (0.014–0.026)
Compressor belt	Deflection between pulleys with 98N (10 kg, 22 lbs) force	For used belt For new belt	10–12 (0.4–0.5) 4.5–7.0 (0.18–0.28)
	Belt tension between pulleys (measured with tension gauge)	For used belt For new belt	441–588 N (45–60 kg, 99–132 lbs) 931–1,127 N (95–115 kg, 209–254 lbs)

Standards and Service Limits

Unit of length: mm (in.)

16. Electrical

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Ignition coil	Rated voltage		12 Volts	
	Winding resistance	Primary	0.6-0.8 Ω	
Secondary		12.9-19.3 kΩ		
Ignition wire	Resistance		25 kΩ maximum	
Spark plug	Type (): Manufacturer	standard	ZFR6F-11 (NGK) or KJ20CR-L11 (ND)	
		Option	ZFR7F-11 (NGK) or KJ22CR-L11 (ND)	
	Gap		1.0-1.1 (0.039-0.043)	
Ignition timing	At idling		15° ± 2° BTDC	
Battery	Lighting capacity (20-hours ratio)		65Ah	
	Starting capacity (voltage after 5 sec.)		8.4 V minimum/300 ampere draw at -15°C (59°F)	
Alternator	Output		80A	
	Rotor coil resistance Slip ring O.D. Brush length Brush spring tension	2.8-3.0 Ω		14.0 (0.55) 5.5 (0.22)
		14.4 (0.57)		
		10.5 (0.41)		
		300-360 g (10.6-12.7 oz)		
Alternator belt	Deflection at midway between pulleys with 98 N (10 kg, 22 lb) force	Model without A/C	Used belt	10-12 (0.39-0.47)
			New belt	8.5-11 (0.33-0.43)
		Model with A/C	Used belt	10-12 (0.39-0.47)
			New belt	4.5-7.0 (0.18-0.28)
	Belt tension between pulleys (measured with tension gauge)	Model without A/C	Used belt	294-441 N (30-45 kg, 66-99 lb)
			New belt	441-637 N (45-65 kg, 99-143 lb)
		Model with A/C	Used belt	441-637 N (45-65 kg, 99-143 lb)
			New belt	931-1,128 N (95-115 kg, 209-154 lb)
Starting motor	Output		1.6 kw	
	Manufacturer: Mitsuba	Mica depth	0.4-0.5 (0.016-0.02)	0.15 (0.006)
		Commutator runout	0-0.02 (0-0.001)	0.05 (0.002)
Commutator O.D.		28.0-28.1 (1.10-1.11)	27.5 (1.08)	
Brush length		15.8-16.2 (0.62-0.64)	10.0 (0.39)	
Manufacturer: NIPPONDENSO	Mica depth	0.5-0.8 (0.02-0.03)	0.2 (0.01)	
	Commutator runout	0-0.02 (0-0.001)	0.05 (0.002)	
	Commutator O.D.	29.9-30.0 (1.18-1.18)	29.0 (1.14)	
	Brush length	15.0-15.5 (0.59-0.61)	10.0 (0.39)	
		Brush spring tension	16-18N (1.6-1.8 kg, 3.5-4.0 lbs)	
		Brush spring tension	19-24N (1.9-2.4 kg, 4.2-5.3 lbs)	

Design Specifications


	ITEMS	METRIC	ENGLISH	NOTES	
DIMENSIONS	Overall length	4,700 mm	185.0 in		
	Overall width	1,695 mm	66.7 in		
	Overall height	1,400 mm	55.1 in		
	Wheel base	2,720 mm	107.1 in		
	Track	Front	1,475 mm	58.1 in	
		Rear	1,480 mm	58.3 in	
	Ground clearance	160 mm	6.3 in		
	Seating capacity		Five		
	Turning circle diameter (at tire center)	10.8 m	35.4 ft		
WEIGHT	Curb weight	MT without A/C	1,405 kg	3,097 lb	
		MT with A/C	1,427 kg	3,146 lb	
		AT without A/C	1,430 kg	3,153 lb	
		AT with A/C	1,452 kg	3,201 lb	
		Max permissible weight	1,920 kg	4,233 lb	
ENGINE	Type	Water-cooled, 4-stroke OHC			
	Cylinder arrangement	In-line, 4-cylinders			
	Bore and stroke	85 x 95 mm	3.35 x 3.74 in		
	Displacement	2,156 cm ³	131.5 cu. in		
	Compression ratio	9.8			
	Valve train	Belt driven, Single Overhead Camshaft			
	Lubrication system	Forced and wet sump			
STARTER	Type	Gear reduction			
	Normal output	1.6 kw			
	Nominal voltage	12 V			
	Hour rating	30 seconds			
	Direction of rotation	Clockwise as viewed from gear end			
	Weight		4.75 kg	10.5 lb	
NIPPONDENSO Mitsuba		3.7 kg	8.2 lb		
TRANSMISSION	Clutch	MT	Single plate dry, diaphragm spring Torque converter with lock-up clutch		
		AT			
	Clutch lining area		217 cm ²	33.6 sq. in	
	Transmission	MT	Synchronized 5-speed forward, 1 reverse Electronically controlled dual range 4-speed forward automatic, 1 reverse 1 : 1 (Direct)		
		AT			
	Primary reduction ratio				
	Gear ratio		Gear	MT	AT
			1st	3.307	2.705
			2nd	1.809	1.366
			3rd	1.230	1.057
		4th	0.933	0.731	
		5th	0.757	—	
		Reverse	3.000	2.047	
	Final	4.266	4.285		

Design Specifications

	ITEMS		METRIC	ENGLISH	NOTES
AIR CONDITIONER	Cooling capacity		4,350 kcal/h	17,259 BTU/h	
	-Condition: Compressor speed		1,900 min ⁻¹ (rpm)		
	Outside air temperature		27°C	81°F	
	Outside air humidity		50 %		
	Condenser air temperature		35°C	95°F	
	Condenser air velocity		4.5 m/sec.	14.8 ft/sec.	
Blower capacity		440 m ³	15,542 cu.ft/h		
Compressor Type		Swash-plate			
No. of cylinders		10			
Capacity		178 cc/rev.	10.9 cu.in/rev.		
Maximum speed		8,800 min ⁻¹ (rpm)			
Lubricant capacity		90-120 cc	3.0-4.0 US oz.	3.2-4.2 Imp oz.	
Condenser		Corrugated fin type			
Evaporator		Corrugated fin type			
Blower Type		Sirocco fan			
Motor input		210 W (12 V)			
Speed control		5-speed			
Maximum capacity		500 m ³ /h	17,662 cu.ft/h		
Temperature control		Air-mix type			
Clutch Type		Dry single-plate			
Power consumption		40W (12V) maximum			
Refrigerant Type		R-12			
Quantity		0.90-0.95 kg	2.0-2.1 lb		
STEERING SYSTEM	Type		Rack and pinion		
	Overall ratio		16.1 : 1		
	Turns, lock-to-lock		3.13		
	Steering wheel diameter		375 mm	14.8 in	
Power steering fluid capacity		1.8 l	1.9 US qt.	1.6 Imp qt.	
Power steering fluid		Genuine Power Steering Fluid P/N: 08208-99961			
SUSPENSION	Type	Front	Independent double wishbone, coil spring		
		Rear	Independent double wishbone, coil spring		
	Shock absorber	Front and rear	Telescopic, hydraulic nitrogen gas-filled		
WHEEL ALIGNMENT	Total toe	Front	0±3 mm	0±0.12 in	
		Rear	IN 2±2 mm	0.08±0.08 in	
	Camber	Front	0° 00' ± 1'		
		Rear	-0° 30' ± 1'		
	Caster	Front	3°00'		
BRAKE SYSTEM	Type	Front	Ventilated disc		
		Rear	Solid disk		
	Pad and lining swept area (total)	Front	370 cm ²	64 sq. in	
		Rear	277 cm ²	44 sq. in	
TIRES	Size		195/60R15 87V		
ELECTRICAL	Fuses In the fuse box		7.5A, 10A, 15A, 20A, 30A		
	In the relay box		7.5A, 10A, 15A, 20A, 30A, 50A, 80A		
	Headlights	High/Low	12V-60/55W		
	Turn signal lights	Front	12V-21W		
		Rear	12V-21W		
		Side	12V-5W		
	Position lights		12V-5W		
	License plate light		12V-5W		
	Buck-up lights		12V-21W		
	Stop lights		12V-21W		
	Taillight		12V-5W		
	Rear fog light		12V-21W		
	Dome lights		12V-8W		
	Door courtesy lights		12V-3.4W		
	Rear room light		12V-5W		
	Gauge lights		12V-3.4/1.4W		
	Indicator lights		12V-0.84/0.91/1.12/1.4W		
	Warning lights		12V-1.4/3.4W		
	Glove box light		12V-3.4W		
	Illumination and pilot lights		12V-1.4/1.2W LED: 0.91W, 0.84W		
	Heater illumination lights		12V-1.2/1.4W		

Body Specifications

Unit: mm (in.)

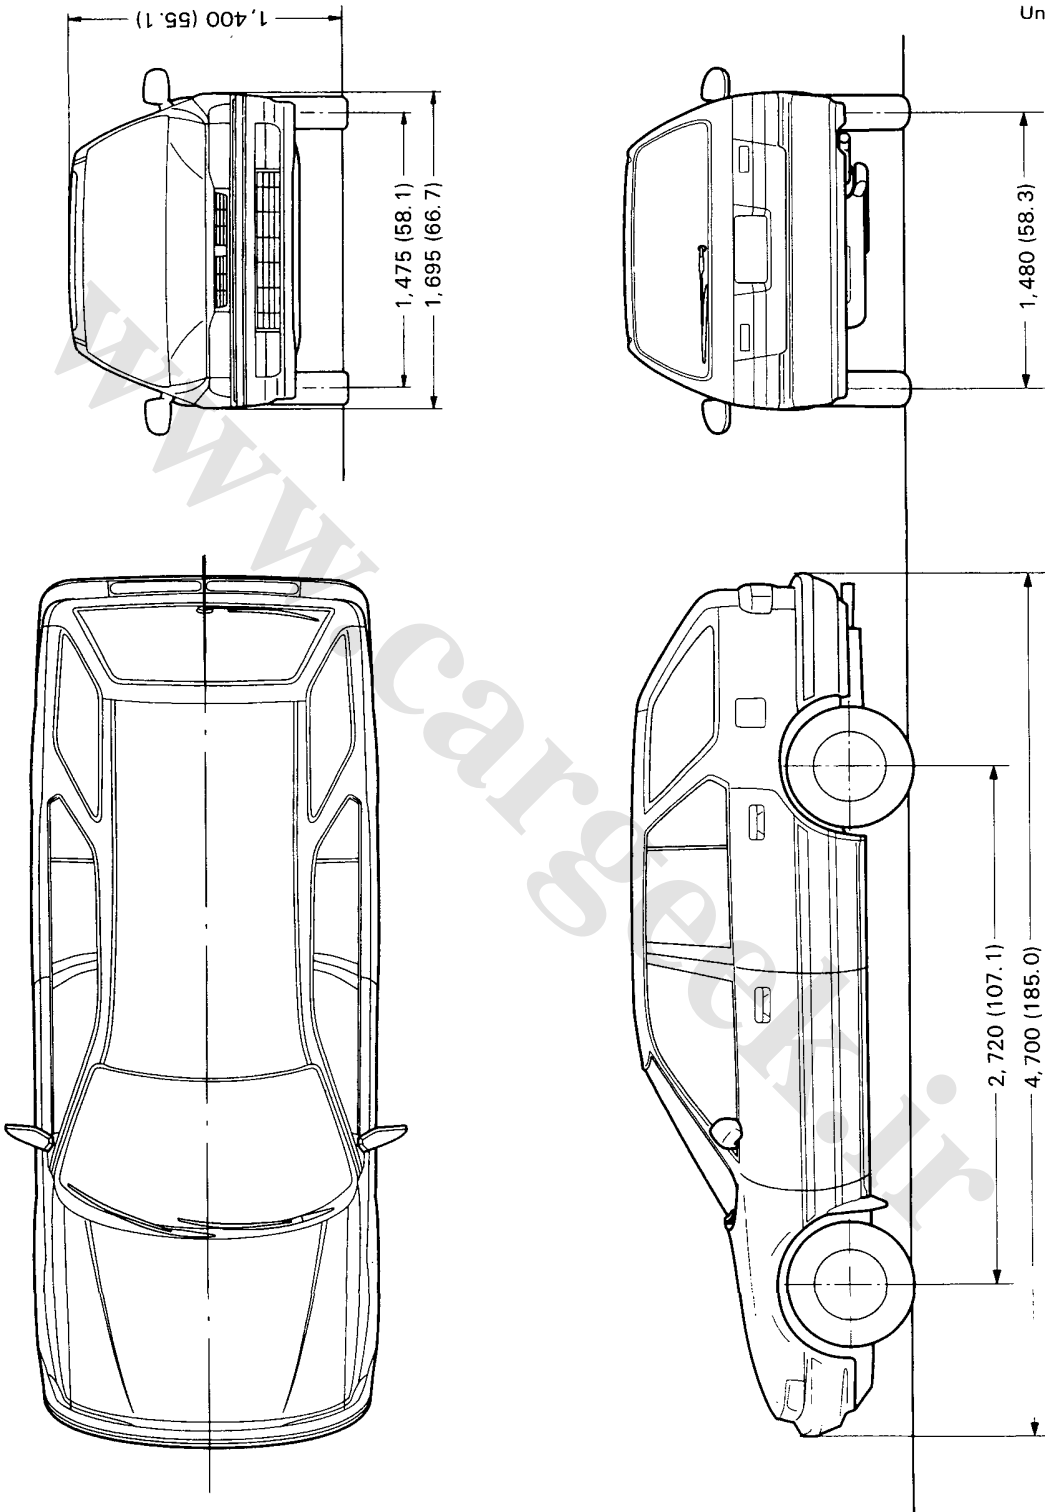

Maintenance

Lubrication Points.....	4-2
Maintenance Schedule	4-4



www.Cargeek.ir


Replacement

www.cargeek.ir

Exhaust Pipe and Muffler


Replacement

NOTE: Use new gaskets and self-locking nuts when reassembling.

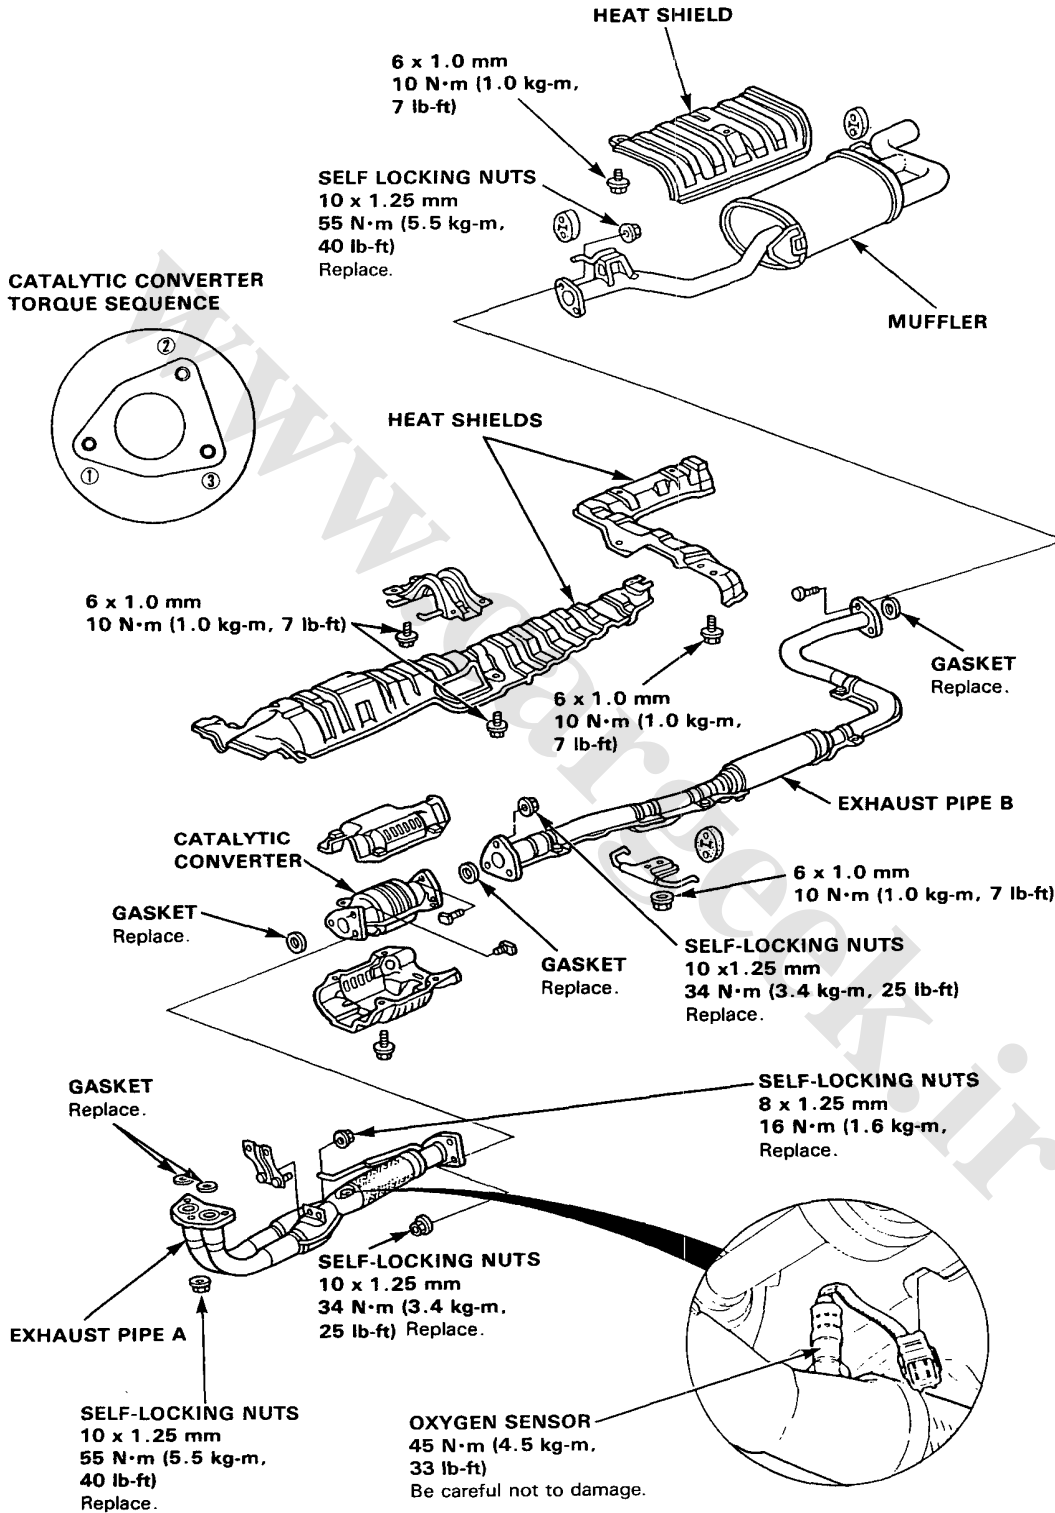

Component Locations
Index
Fuel Supply System
Fuel Tank

www.cargeek.ir

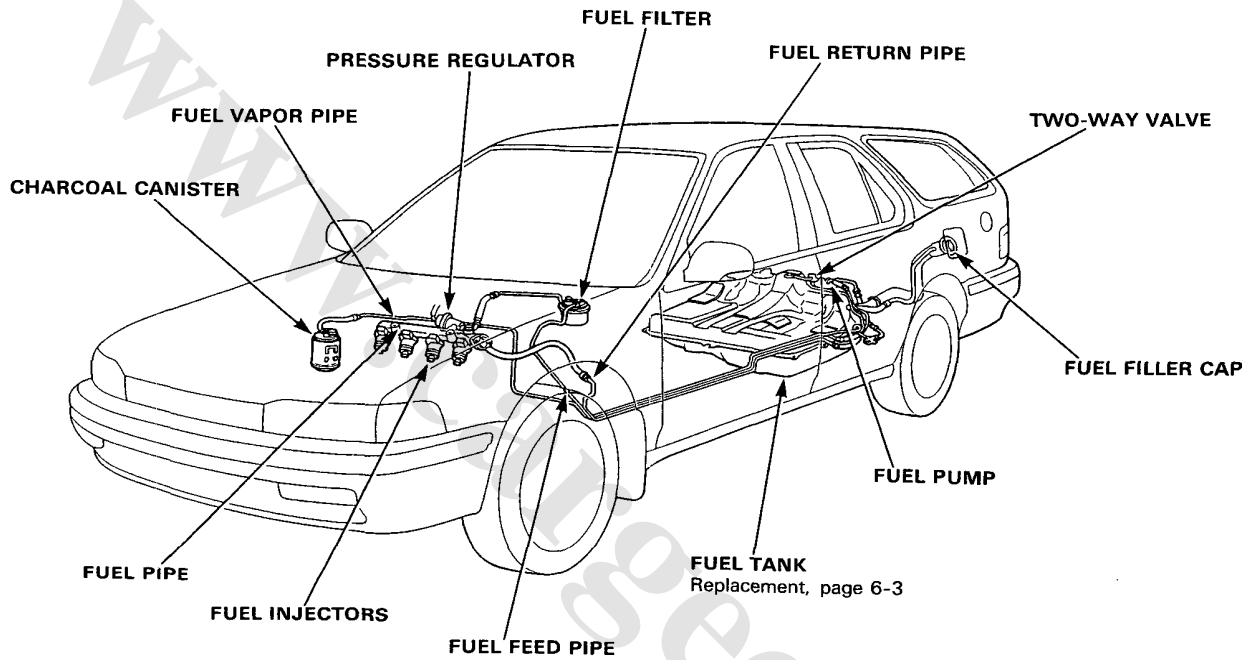



Fuel Supply System

Fuel Tank

Replacement


⚠ WARNING Do not smoke while working on fuel system. Keep open flame away from work area.

1. Relieve the fuel pressure
2. Block front wheels. Jack up the rear of the car and support with jackstands.
3. Remove the drain bolt and drain the fuel into an approved container.
4. Disconnect the 3P connector in the trunk.
5. Remove the fuel hose protector.
6. Disconnect the hoses.

CAUTION:

- When disconnecting the hoses, slide back the clamps, then twist hoses as you pull, to avoid damaging them.
- Clean the flared joint of high pressure hoses thoroughly before reconnecting them.

7. Place a jack, or other support, under the tank.
8. Remove the strap bolts and let the straps fall free.
9. Remove the fuel tank.
- NOTE: The tank may stick on the undercoat applied to its mount. To remove, carefully pry it off the mount.
10. Install a new washer on the drain bolt, then install parts in the reverse order of removal.

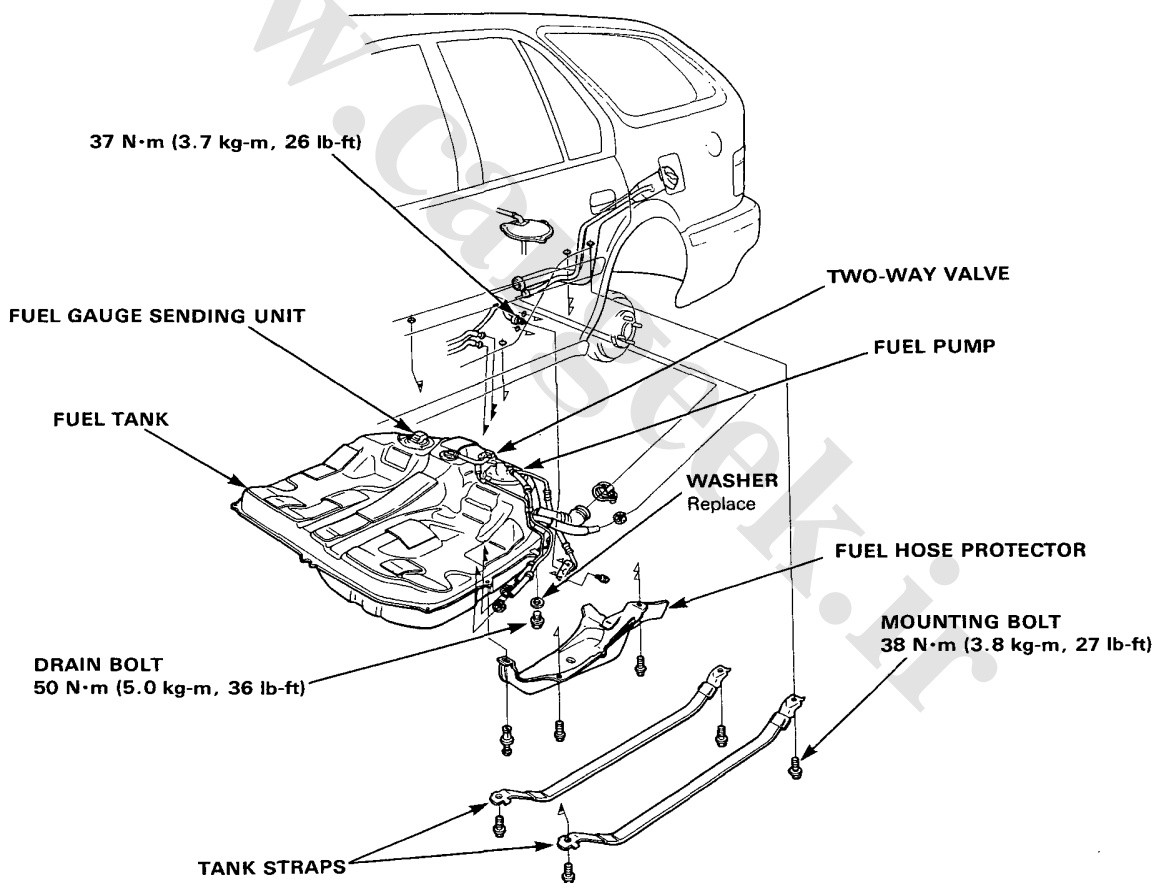


Automatic Transmission

NOTE:

- Automatic transmission has been modified, from MPXA to APXA.
- Refer to following shop manuals for service procedures.

On-car service of the automatic transmission ACCORD CHASSIS
Maintenance and Repair (62SM400)
Automatic Transmission
PX4B (Fuel-Injected Engine)

Automatic transmission service PX4B AUTOMATIC TRANSMISSION
Maintenance and Repair (62PX400)
• PX4B Automatic Transmission B type
• Differential



www.CarGeek.ir

Outline of Model Change

Automatic transmission has been modified, from MPXA to APXA.

Carpet/Spare Tire Lid/Rear Floor Box

Headliner

Interior Trim

Rear Seats

Rear Window Glass/Quarter Glass

Index

Rear Window

Quarter Glass

Seat Belts

Rear Replacement

Inspection

Tailgate

Tailgate Latch/Fuel Lid Opener Cable


www.cargeek.ir

Carpet/Spare Tire Lid/Rear Floor Box

Replacement

1. Remove:
 - Front seats
 - Rear seat
 - Center console
 - Opener cover and footrest
 - Front seat belt lower anchor and center anchor bolts
 - Center pillar lower trim
 - Kick panels
 - Door sill moldings
2. Pry out the clips in the rear and under the dashboard.
3. Remove the carpet by sliding it rearward.
4. Remove the mounting bolts, then remove the floor box and floor cover.

* : Torx bolt locations
NOTE: Use TORX® T-30.

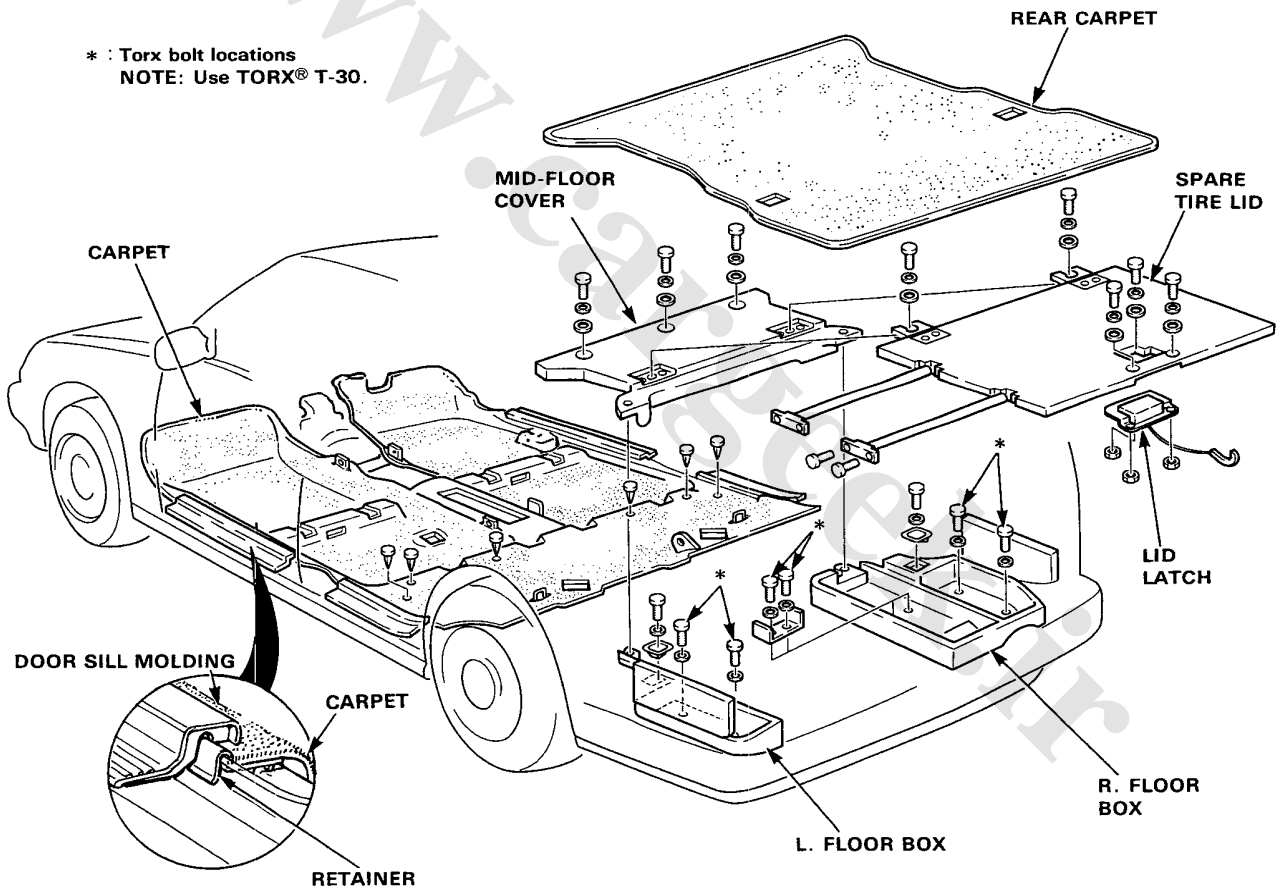

5. Install the carpet in the reverse order of removal.


NOTE:

- Make sure the carpet fits onto the body correctly.
- Take care not to damage the carpet.

Headliner

Replacement

1. Remove:
 - Sun visors and holders.
 - Rearview mirror assembly.
 - Front pillar trim.
 - Rear roof side trim.
 - Roof trim (sunroof opening).
 - Quarter window trim panel (page 14-11).
 - Dome lights.
 - Speaker covers (Section 16)
 - Grab handles, and coat hook.
2. Remove the clips and rear roof trim, then remove the headliner.

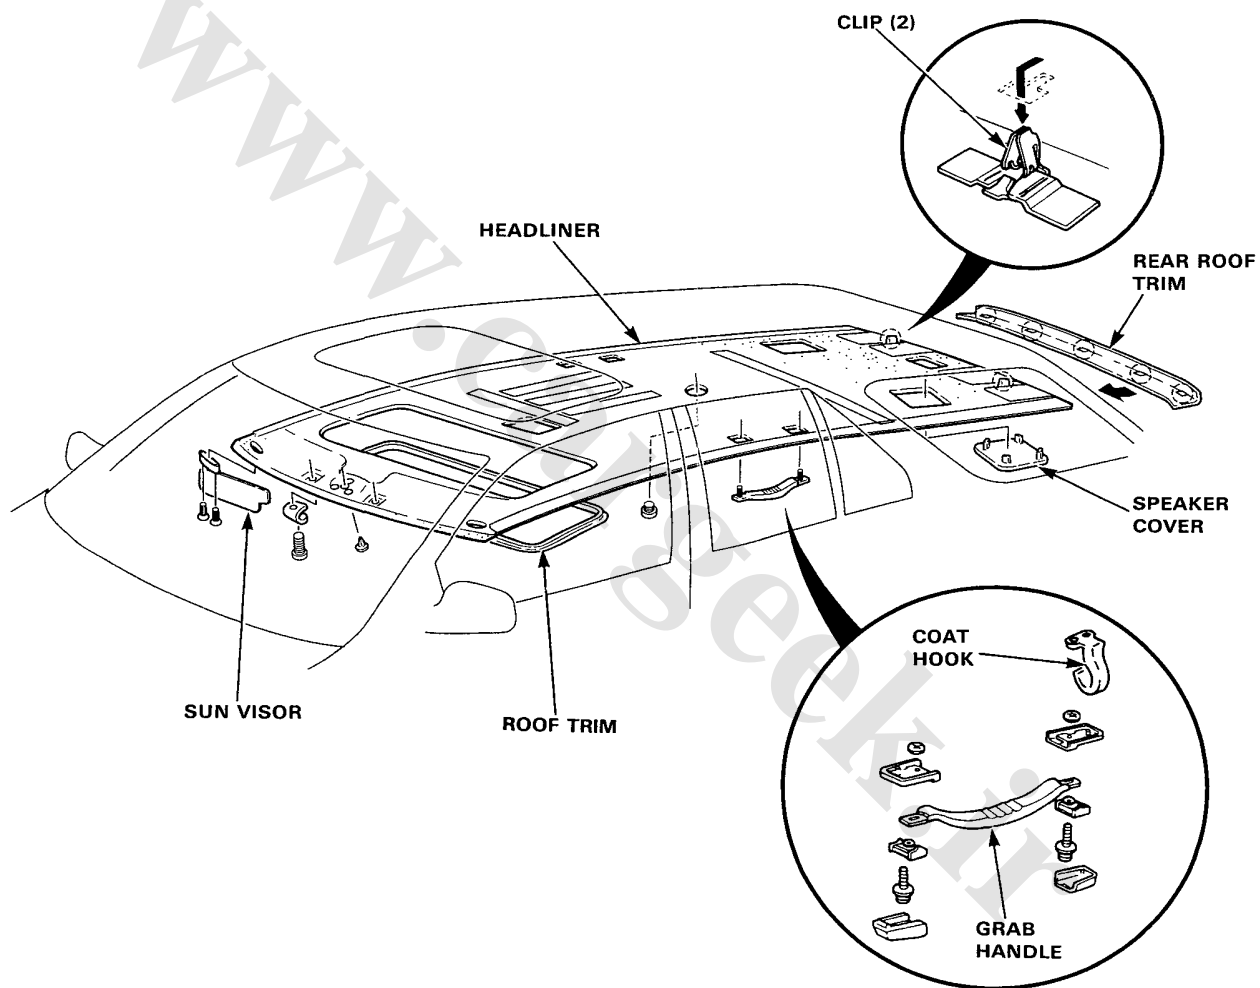

3. Assemble the headliner in the reverse order of disassembly.


NOTE:

- When installing the headliner inside the passenger compartment, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the two sides of the headliner are securely attached to the trim.



Interior Trim Replacement


NOTE: Front interior trim is the same as Sedan.
Disassemble in numbered sequence.
○: Clip locations

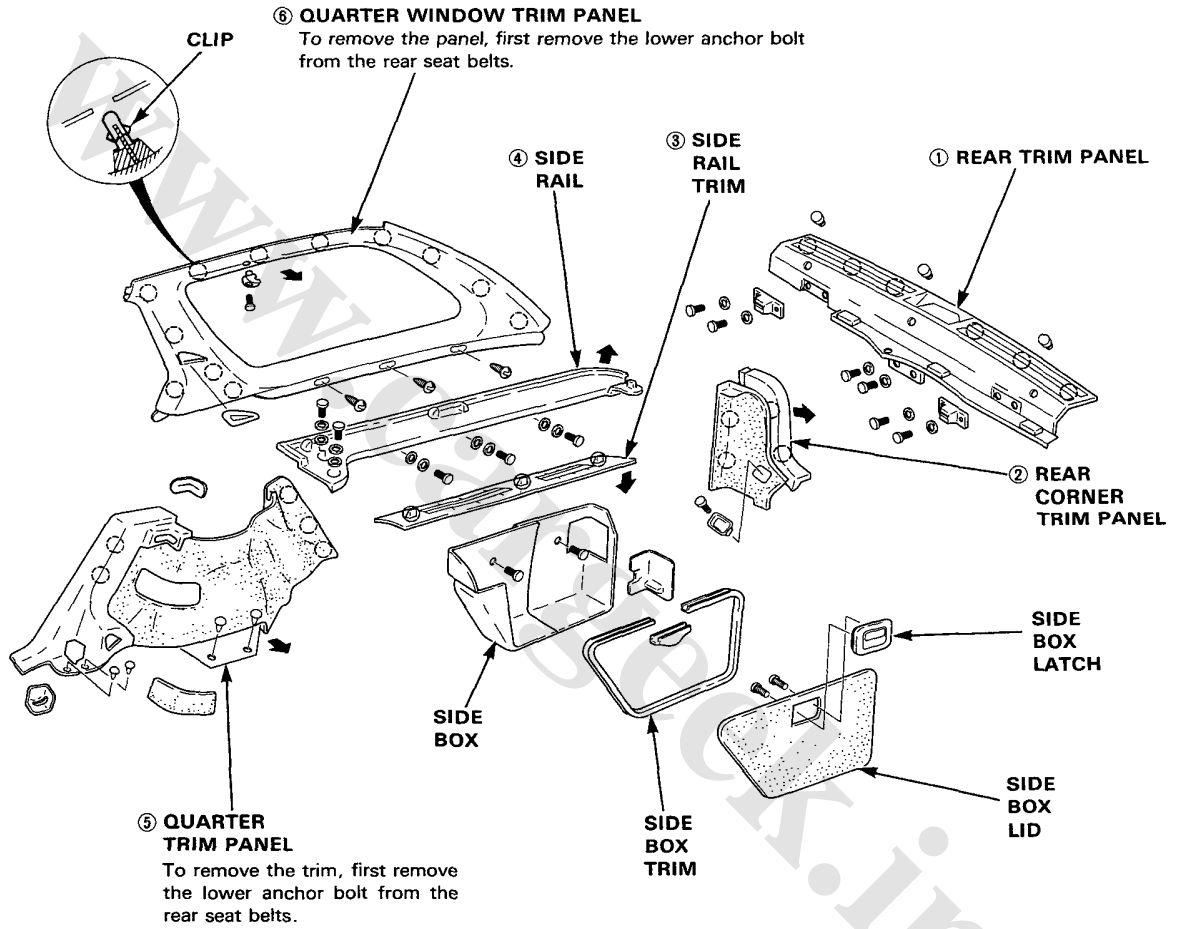



Rear Seats Replacement

Disassemble in numbered sequence.

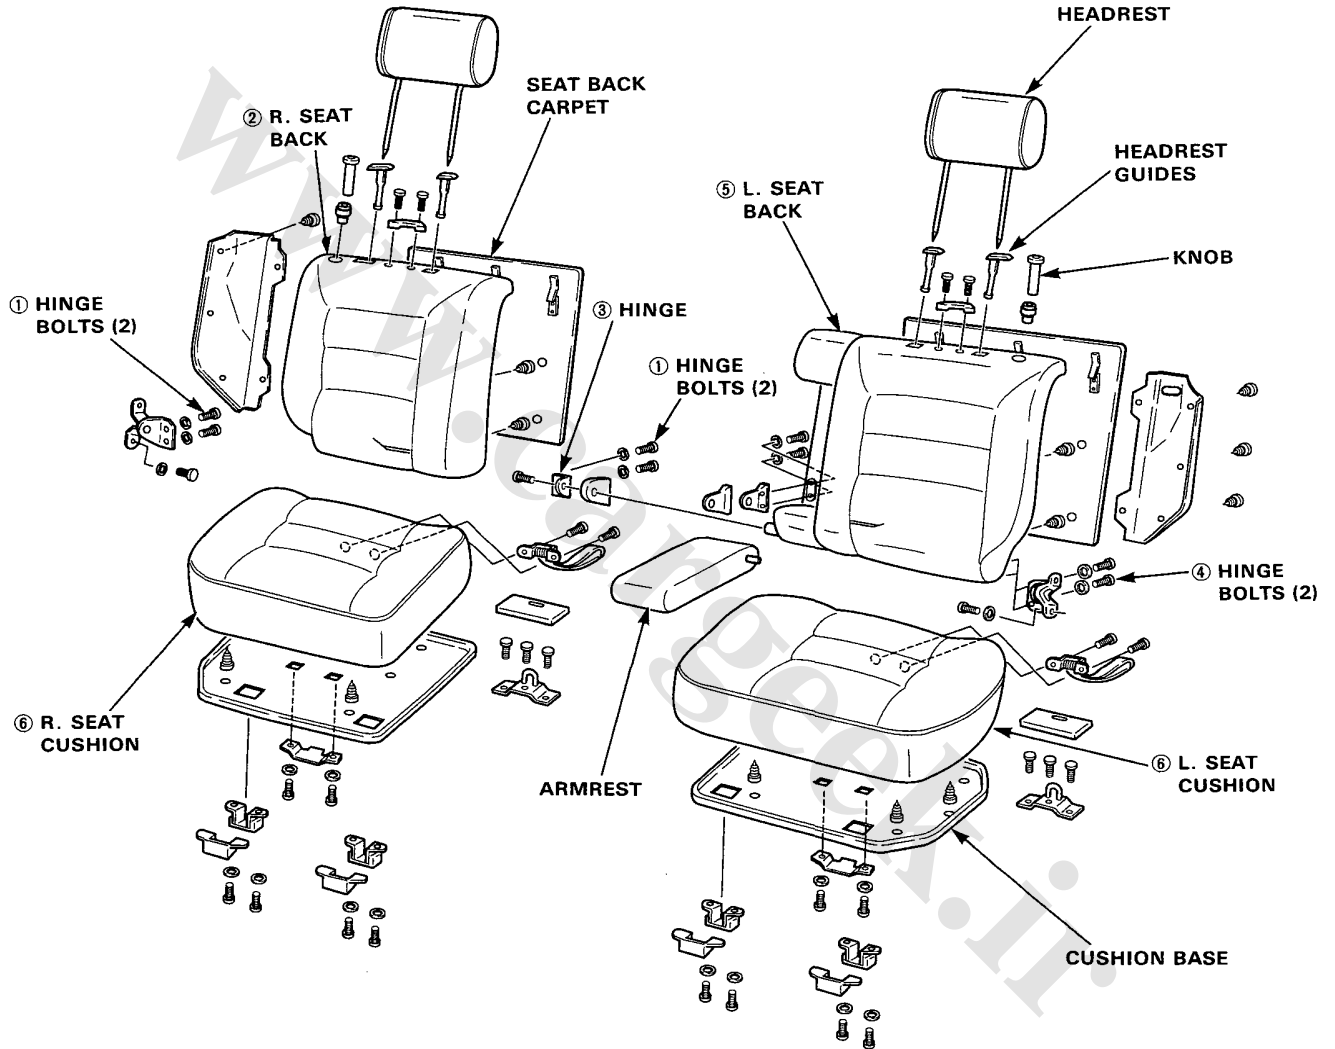


REAR WINDOW
Removal, page 14-3
Installation, page 14-3

RUBBER DAM

REAR WINDOW FASTENER
(Self-adhesive-type)

QUARTER GLASS FASTENER
(Clip-type)

QUARTER GLASS FASTENER
(Self-adhesive-type)

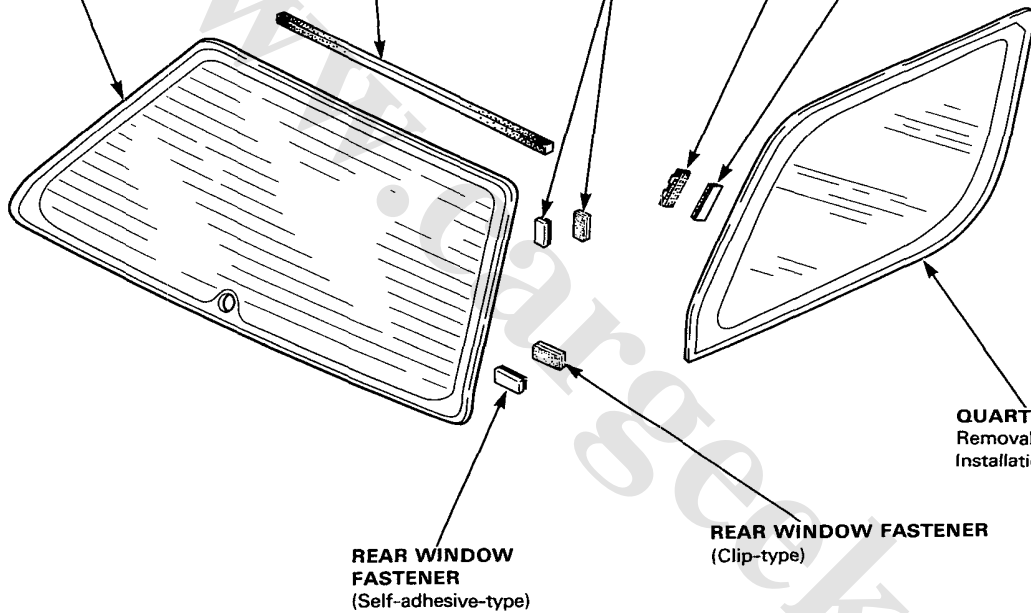

QUARTER GLASS
Removal, page 14-7
Installation, page 14-7

REAR WINDOW FASTENER
(Self-adhesive-type)

REAR WINDOW FASTENER
(Clip-type)



Rear Window


Removal

CAUTION:

- Wear gloves to remove and install the glass.
- Do not damage the defroster grid lines.

1. To remove the rear window glass, first remove the:
 - Tailgate trim panel (page 14-18).
 - Rear wiper (See section 16).
 - Rear window trim (page 14-18).
 - High mount brake light (See section 16).
2. Use a knife to cut through the glass adhesive from inside car, all the way around the glass area.

NOTE: Take care not to scratch or score the glass.

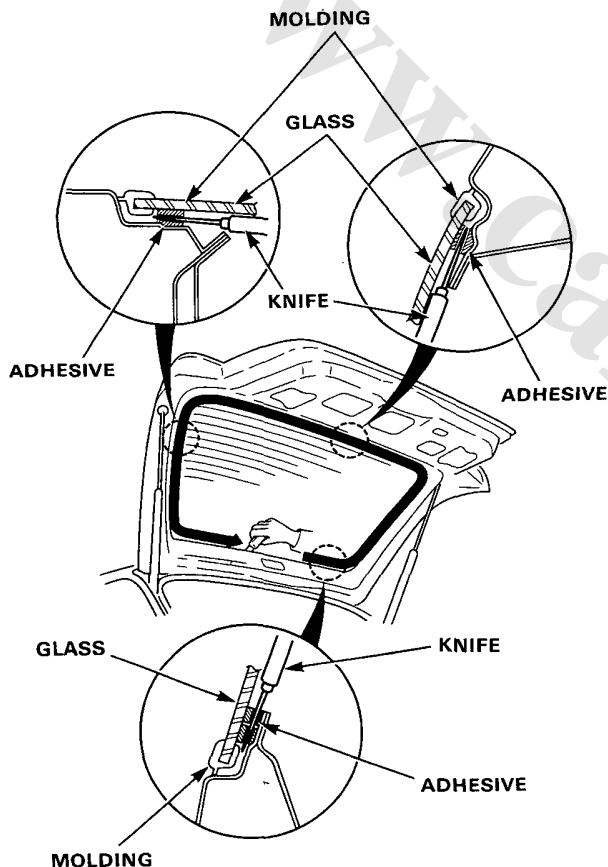

Installation

1. Scrape the old adhesive smooth with a knife, to a thickness of about 2 mm (0.08 in.) on the bonding surface around the entire window glass flange.

NOTE:


- Do not scrape down to the painted surface of the body; damaged paint will interfere with proper bonding.
- Remove the old window fasteners from the tailgate.
- Mask off surrounding surfaces before applying primer.

2. Clean the body bonding surface with a sponge dampened in alcohol.

NOTE: After cleaning, keep oil, grease or water from getting on the surface.

3. If the glass is to be reinstalled, use a putty knife to scrape off all traces of old adhesive, then clean the glass surface with alcohol where new adhesive is to be applied.

NOTE: Make sure the bonding surface is kept free of water, oil and grease.

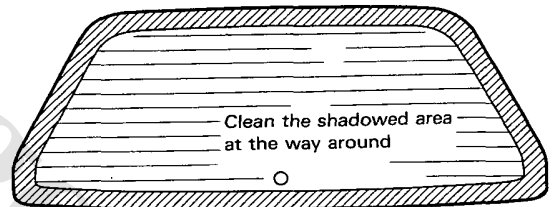


(cont'd)


Rear Window

Installation (cont'd)

4. Install the window fasteners on the tailgate.

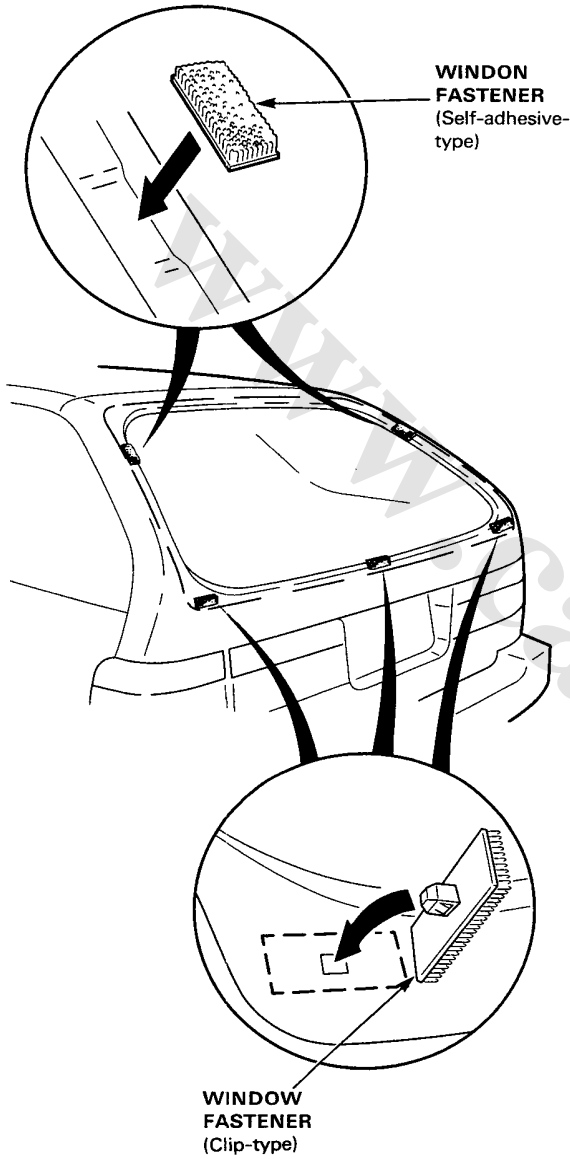


5. Adhere the side and lower window fasteners to the sides and lower edge of the glass as shown.

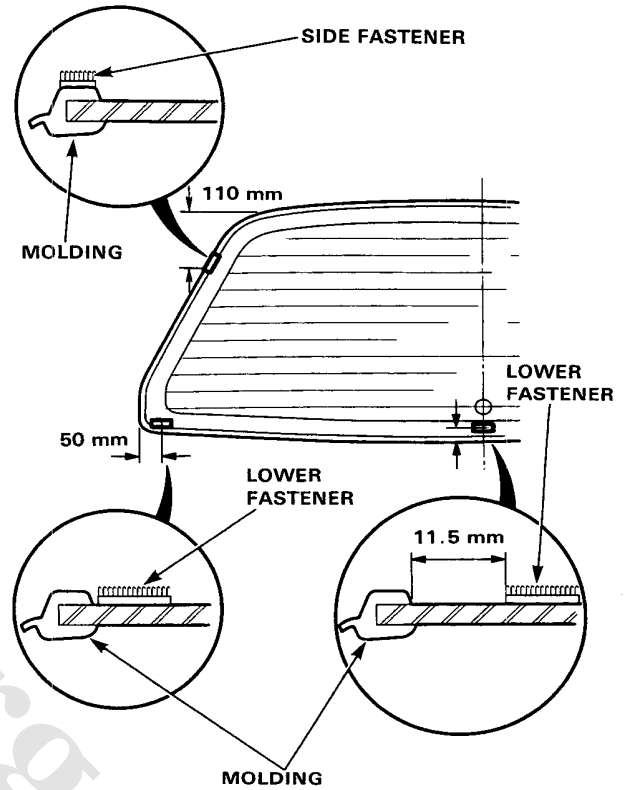



6. Set the glass upright on the tailgate, and center it in the opening. Mark the location by marking lines across the glass and body with a grease pencil at the four points shown.


NOTE: Check that the window fasteners align with each other as shown.

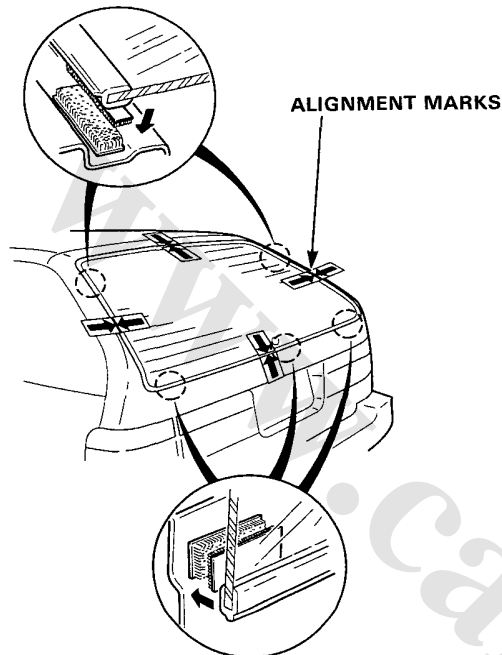

7. Center and glue the rubber dam to the inside face of the glass as shown, to contain the adhesive during installation.

NOTE:


- Be careful not to touch the glass where adhesive will be applied.
- Mask off surrounding surfaces before applying primer.

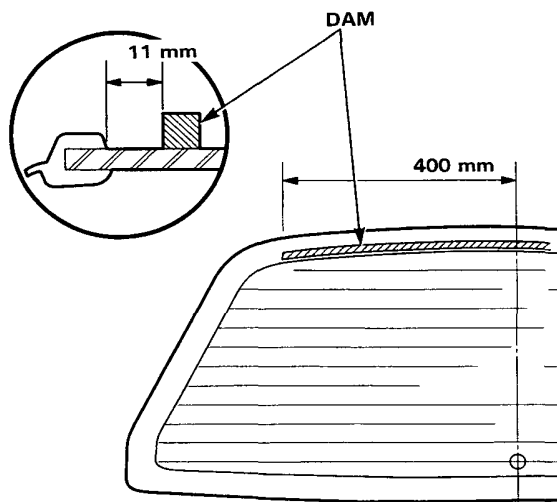

8. With a sponge, apply a light coat of glass primer around the edge of glass as shown, then lightly wipe it off with gauze or cheesecloth.

NOTE:


- Do not apply body primer to the glass, and do not get body and glass primer sponges mixed up.
- Never touch the primed surfaces with your hands. If you do, the adhesive may not bond to the glass properly, causing a leak after the glass is installed.
- Keep water, dust, and abrasive materials away from the primed surface.

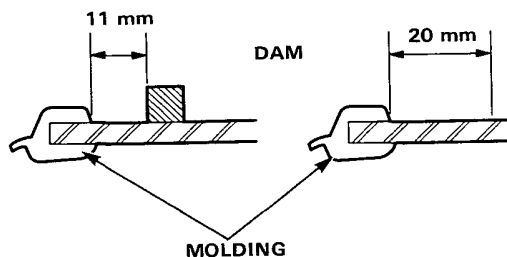

9. With a sponge, apply a light coat of body primer to the original adhesive remaining around the window opening flange.

NOTE:

- Do not apply glass primer to the body, and be careful not to mix up glass and body primer sponges.
- Never touch the primed surfaces with your hands.

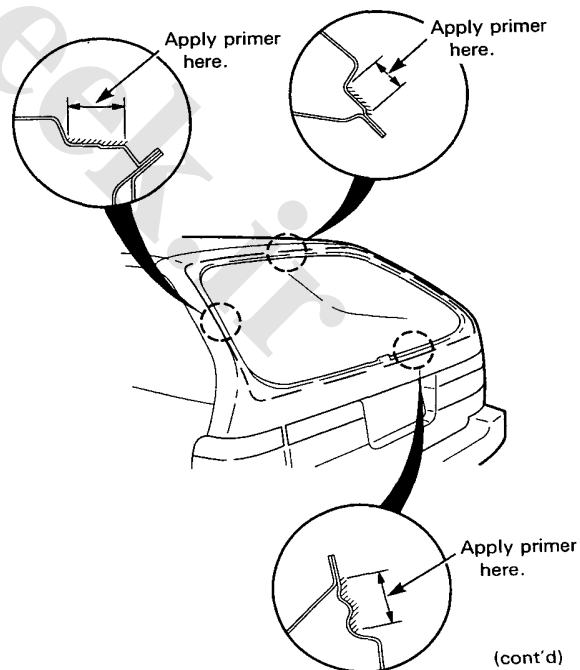

(cont'd)

Rear Window

Installation (cont'd)


- Thoroughly mix all the adhesive and hardener together on a glass or metal plate with a putty knife.

NOTE:


- Clean the plate with a sponge and alcohol before mixing.
- Follow the instructions that come with the adhesive.

- Before filling a cartridge, cut off the end of the nozzle at the angle shown.


Cut off nozzle end as shown.

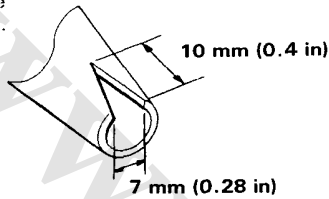

- Pack adhesive into the cartridge without air pockets, to ensure continuous delivery. Put the cartridge in a caulking gun, and run a bead of adhesive around the edge of the glass as shown.

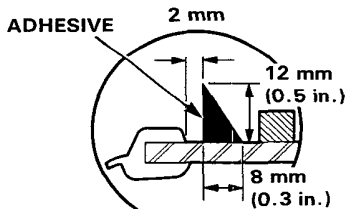


Make a slightly thicker bead at each corner and curve.

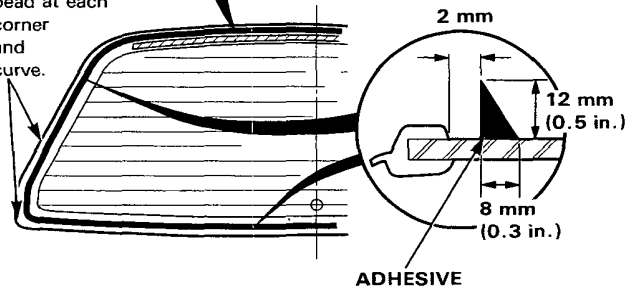

- Use suction cups to hold the glass over the opening, then set it down on the adhesive. Lightly push on the glass until its edges are fully seated on the adhesive all the way around.

NOTE: Do not open and close the doors until the adhesive is dry.

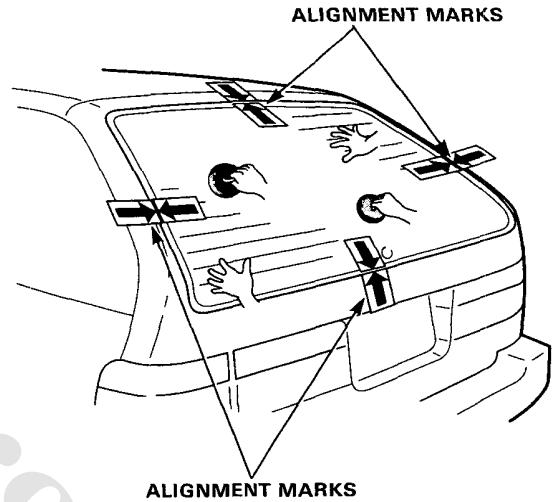

- Scrape or wipe the excess adhesive off with a putty knife or gauze.

NOTE: Use a soft shop towel dampened with alcohol to remove adhesive from a painted surface or glass.

- After the adhesive is dry, spray water over the glass and check for leaks. Mark leaking areas and let the glass dry, then seal with sealant.

NOTE: Let the car stand for at least 4 hours after glass installation. If the car has to be used within the first 4 hours, it must be driven slowly.


- Reinstall all remaining removed parts.

Seat Belts

Rear Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove:
 - Rear seat back.
 - Side trim panel.
 - Rear side trim.
 - Rear corner trim.
 - Quarter window.
2. Remove the upper anchor bolt, the lower anchor bolt and retractor bolt with a 17 mm socket or box-end wrench.

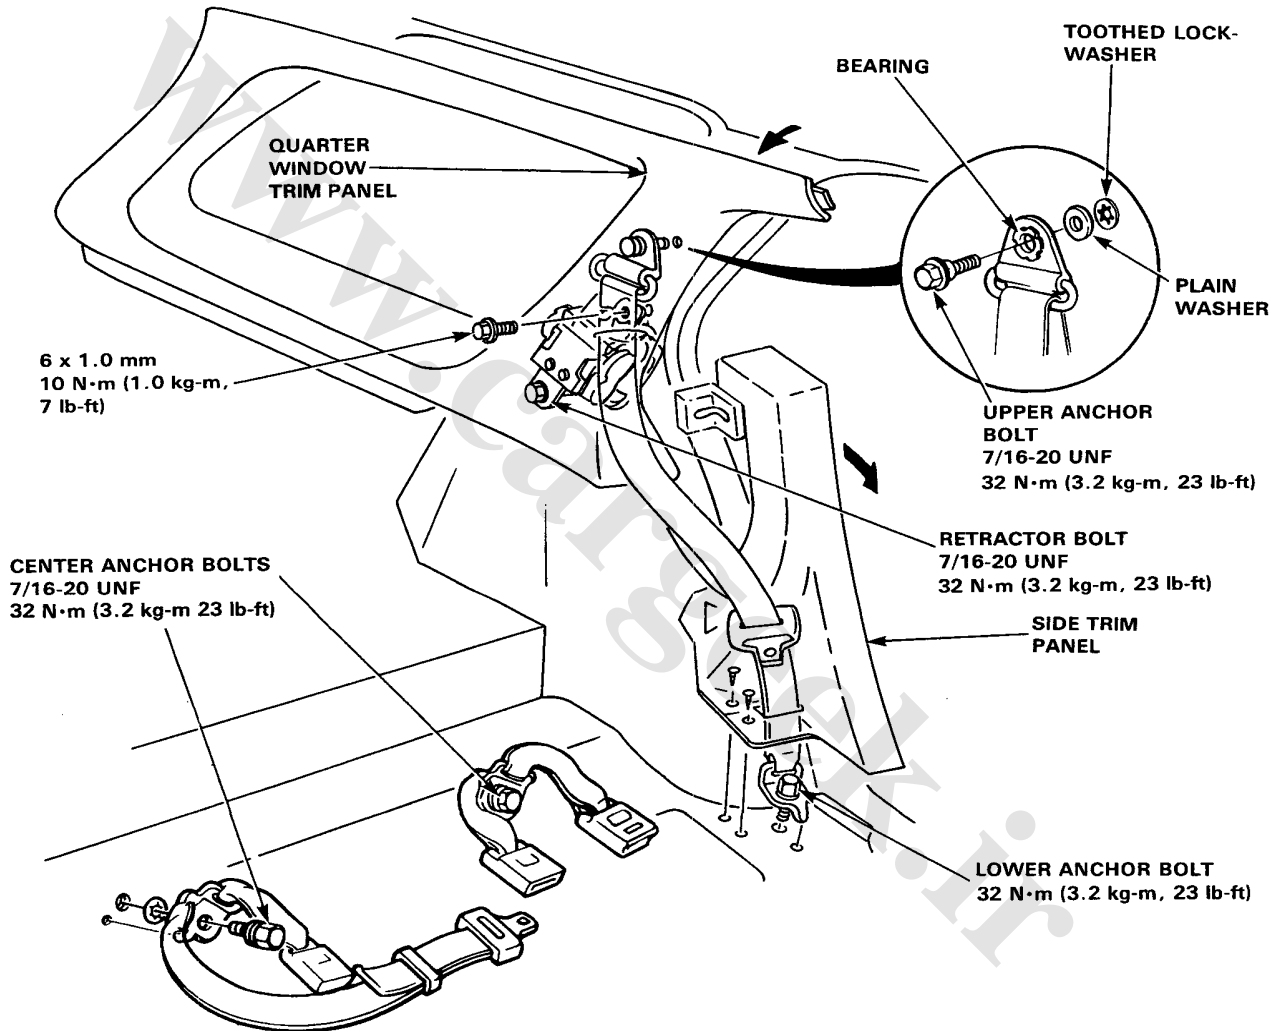

3. Check that the retractor locking mechanism functions properly.
4. Install the seat belt in the reverse order of removal.

NOTE:

- Before attaching the rear pillar trim panel and rear seat, make sure there are no twists in the belt.
- Pass the seat belts through the seat belt guides of the seat cushion.
- * On reassembly, replace the upper anchor bolt and use liquid thread lock.




Inspection

Retractor Inspection

1. With the retractor installed, check that the belt can be pulled out freely.
2. Make sure that the belt does not lock when the retractor is tilted over slowly to 15° from the mounted position. The belt should lock when the retractor is tilted over 40°.

CAUTION: Do not attempt to disassemble the retractor.

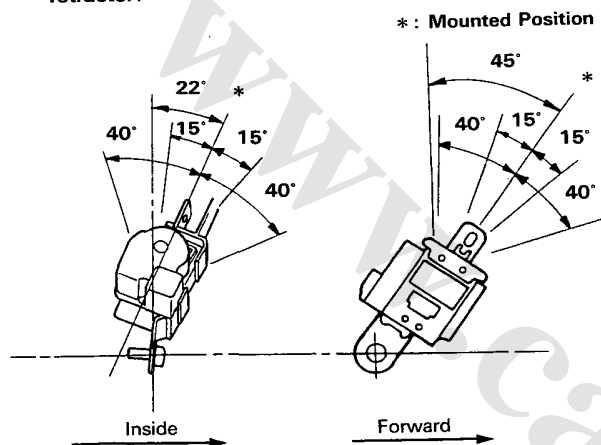

3. Replace the belt with a new one if there is any abnormality.

On the Car Belt Inspection

1. Check that the belt is not twisted or caught on anything.
2. After installing an anchor, check for free movement on its retaining bolt. If necessary, remove the bolt and check that the washers and other parts are not damaged or installed improperly.
3. Check the belts for fouling, damage or discoloration. Clean with a shop towel if fouled.

CAUTION: Use only soap and water to clean.

4. Check that the belt does not lock when pulled out slowly. The belt is designed to lock only during a sudden stop or impact.
5. Make sure that the belt will retract automatically when released.
6. Replace the belt with a new one if there is any abnormality.




Tailgate

Replacement/Adjustment

1. Remove the screws and detach the clips, then remove the tailgate upper and lower trim panels.
2. Pull the wire harness out of the tailgate and disconnect the washer hose.
NOTE: Before pulling out the wire harness, tie a string to the end of it so you can pull it back in when the tailgate is reinstalled.
3. Remove the tailgate support struts.
NOTE: Let an assistant hold the tailgate when removing the struts.
4. Remove the tailgate by removing the tailgate mounting bolts.
NOTE: Take care not to damage the roof panel.

If necessary: Lower the rear of the headliner just enough to gain access to the hinge mounting nuts, then remove the hinge by removing the hinge mounting nuts.

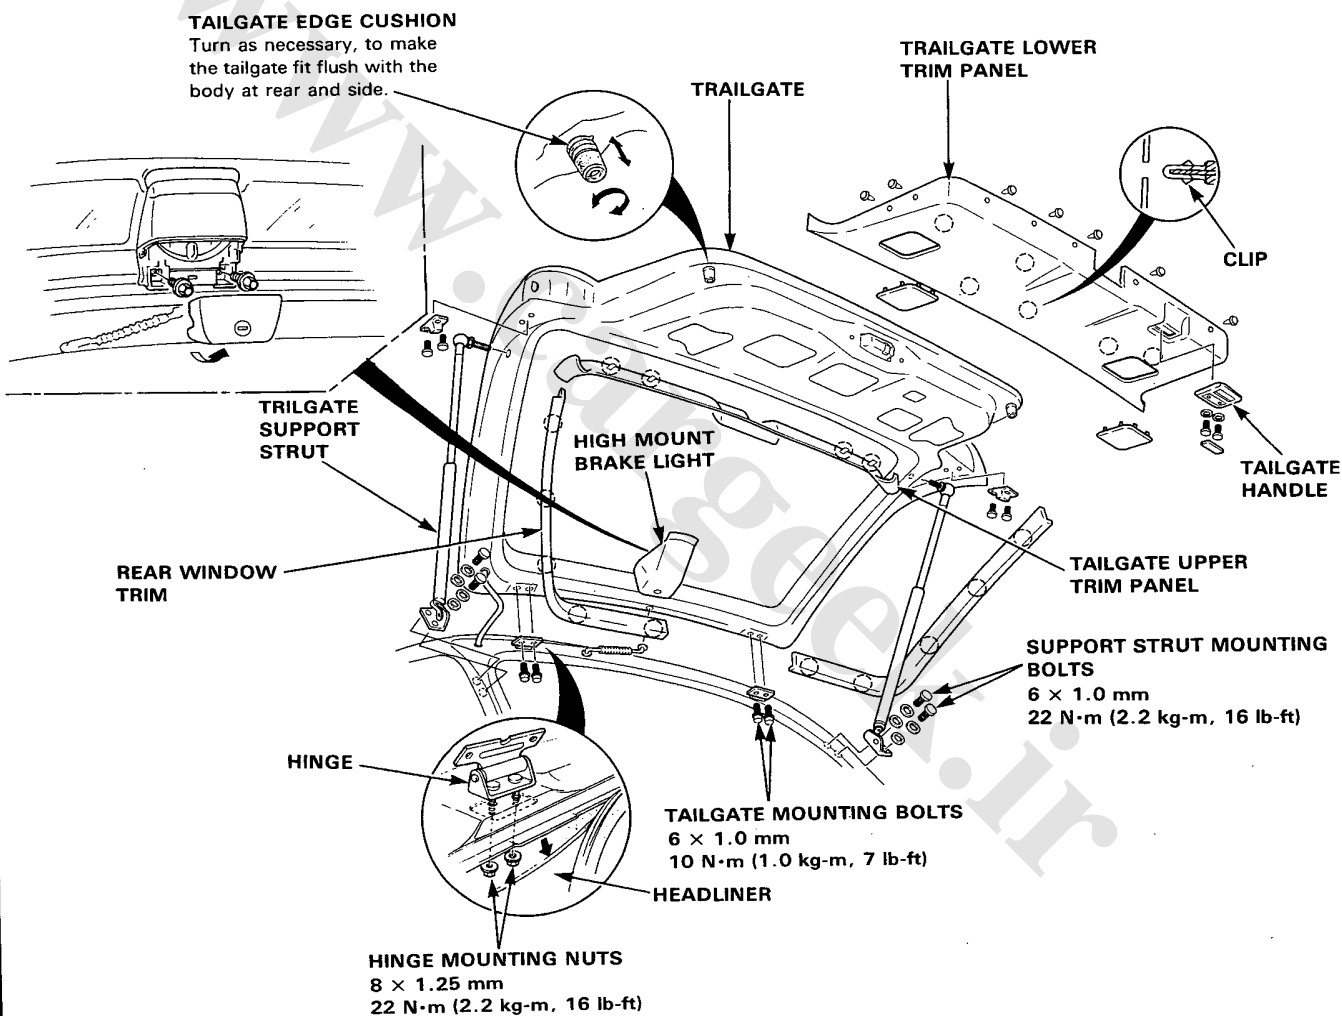



5. installation sequence is essentially the reverse order of removal. However, observe the following:
 - Before tightening the hinge nuts, adjust the tailgate fit and striker.
 - Use care when pulling the wire harness back in to avoid damaging the body.
 - Coat the inside and outside of the grommet with sealant.

Tailgate Latch/Fuel Lid Opener Cable


Tailgate Lock Replacement

1. Remove the tailgate lower trim panel (page 14-17).
2. To remove the outside handle, first remove the:
 - License light covers
 - Wiper arm (See section 16)
 - Wiper motor (See section 16)
3. To remove the tailgate latch assembly, first disconnect the rod and connector.

NOTE: To ease reassembly, note the location (A) of the rod on the joint before disconnecting it.

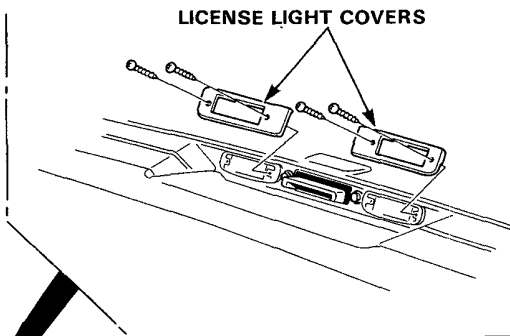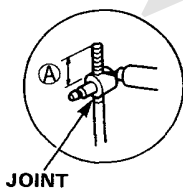

TAILGATE LOCK CYLINDER
Remove the tailgate lock cylinder by turning it right.

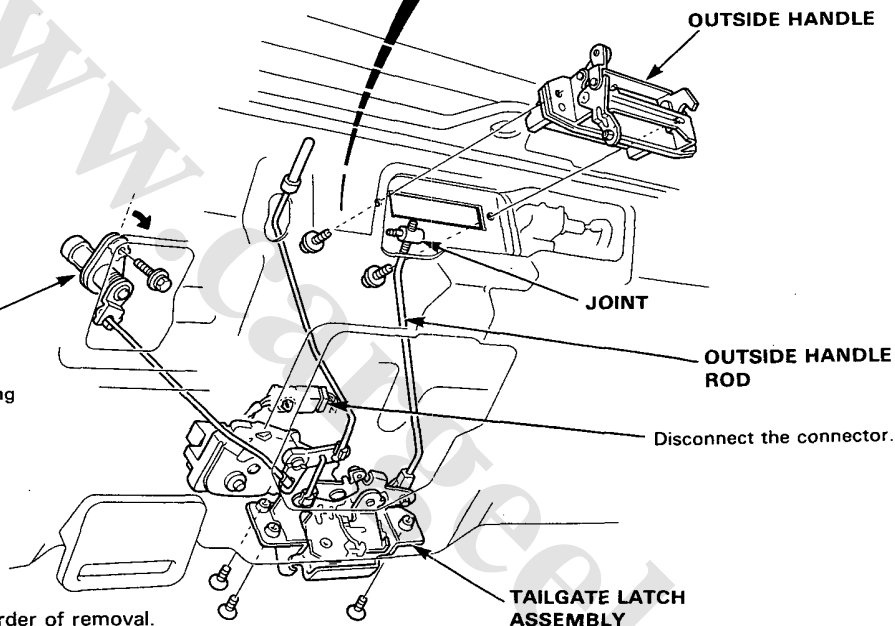

4. Installation is the reverse order of removal.



NOTE: After installing, check that the tailgate latch is operated properly.

Fuel Lid Opener Cable Replacement

Fuel lid opener cable is routed and connected properly as shown.

NOTE: Take care not to bend the cable.

→:Clip locations

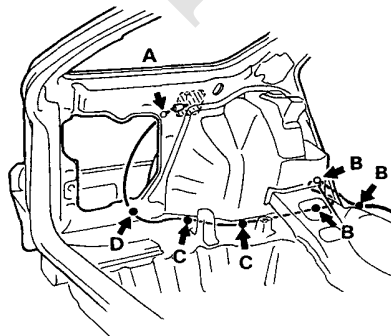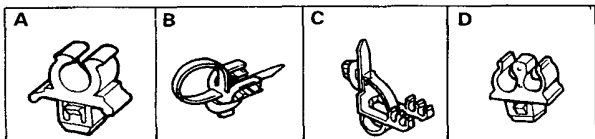

Electrical

Index to Circuits and Systems

Brake Lights	
Brake Light Failure Sensor Test ..	16-9
Circuit Diagram	16-8
Ground Distribution	
Circuit Identification	16-7
Power Door Locks	
Circuit Diagram	16-17
Component Location Index.....	16-16
Control Unit Input Test.....	16-19
Control Unit Input Test (cont'd) .	16-20
Door Key Cylinder Switch Test ..	16-23
Driver's Door Actuator Test	16-21
Ignition Key Switch Test.....	16-24
Passenger's Door Actuator Test .	16-23
Tailgate Actuator Test	16-22
Troubleshooting	16-18
Rear Wiper/Washer	
Circuit Diagram	16-26
Component Location Index.....	16-25
Wiper Motor Replacement	16-28
Wiper Motor Test	16-28
Washer Motors Test.....	16-29
Wiper/Washer Switch Test	16-27
Relay and Control Unit Locations	
Floor and Door.....	16-2
Stereo Sounds System	
Circuit Diagram	16-13
Component Location Index.....	16-12
Power Antenna Motor Test	16-14
Rear Speaker Replacement.....	16-15
Tailgate Latch Switch	
Test/Replacement	16-10
Taillights	
Replacement	16-11
Wire Harness and Ground Locations	
Floor.....	16-3
Rear.....	16-5
Rear Roof.....	16-4
Tailgate	16-6
Wiring Diagrams	16-30




- Brake Lights**
 - Brake Light Failure Sensor Test
 - Circuit Diagram
- Ground Distribution**
 - Circuit Identification
- Power Door Locks**
 - Circuit Diagram
 - Component Location Index
 - Control Unit Input Test
 - Control Unit Input Test (con'd)
 - Door Key Cylinder Switch Test
 - Driver's Door Actuator Test
 - Ignition Key Switch Test
 - Passenger's Door Actuator Test
 - Tailgate Actuator Test
 - Troubleshooting
- Rear Wiper/Washer**
 - Circuit Diagram
 - Component Location Index
 - Wiper Motor Replacement
 - Wiper Motor Test
 - Washer Motor Test
 - Wiper/washer Switch Test
- Relay and Control Unit Locations**
 - Floor and Door
- Stereo Sounds System**
 - Circuit Diagram
 - Component Location Index
 - Power Antenna Motor Test
 - Rear Speaker Replacement
- Tailgate Latch Switch**
 - Test/Replacement
- Taillights**
 - Replacement
- Wire Harness and Ground Locations**
 - Floor
 - Rear
 - Rear Roof
 - Tailgate
 - Wiring Diagrams



Brake Light Failure Sensor Test


1. First make sure the brake lights come on when the brake pedal is pressed.
 - If none of the brake lights come on, check the brake light circuit.
 - If one of the brake lights does not come on, check whether the bulb is blown. If the bulb is OK, go to step 2.
 - If all the brake lights come on, go to step 2.
2. Open the tailgate and the right rear quarter trim panel. Make sure the **BRAKE LAMP** of the safety indicator does not come on when the A (WHT/GRN) terminal of the 6-P connector is grounded and the ignition switch is turned from OFF to ON.

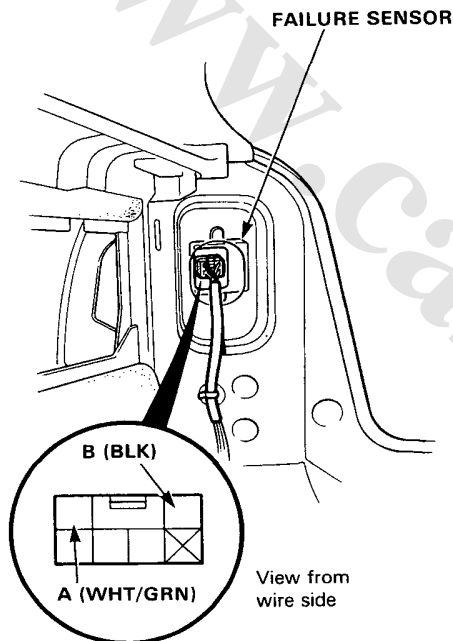

3. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned from OFF to ON with the B (BLK) terminal of the 6-P connector grounded and the brake pedal pressed.
 - If the **BRAKE LAMP** comes on, replace the failure sensor.
 - If the **BRAKE LAMP** does not come on, check for an open in the BLK wire, and check whether the G703 (or G401, G402) terminal is poor.


- If the **BRAKE LAMP** comes on, check for an open in the WHT/GRN wire between the safety indicator and the failure sensor and whether the safety indicator circuit (main print panel) has a problem.
- If the **BRAKE LAMP** does not come on, go to step 3.

Brake Lights Circuit Diagram

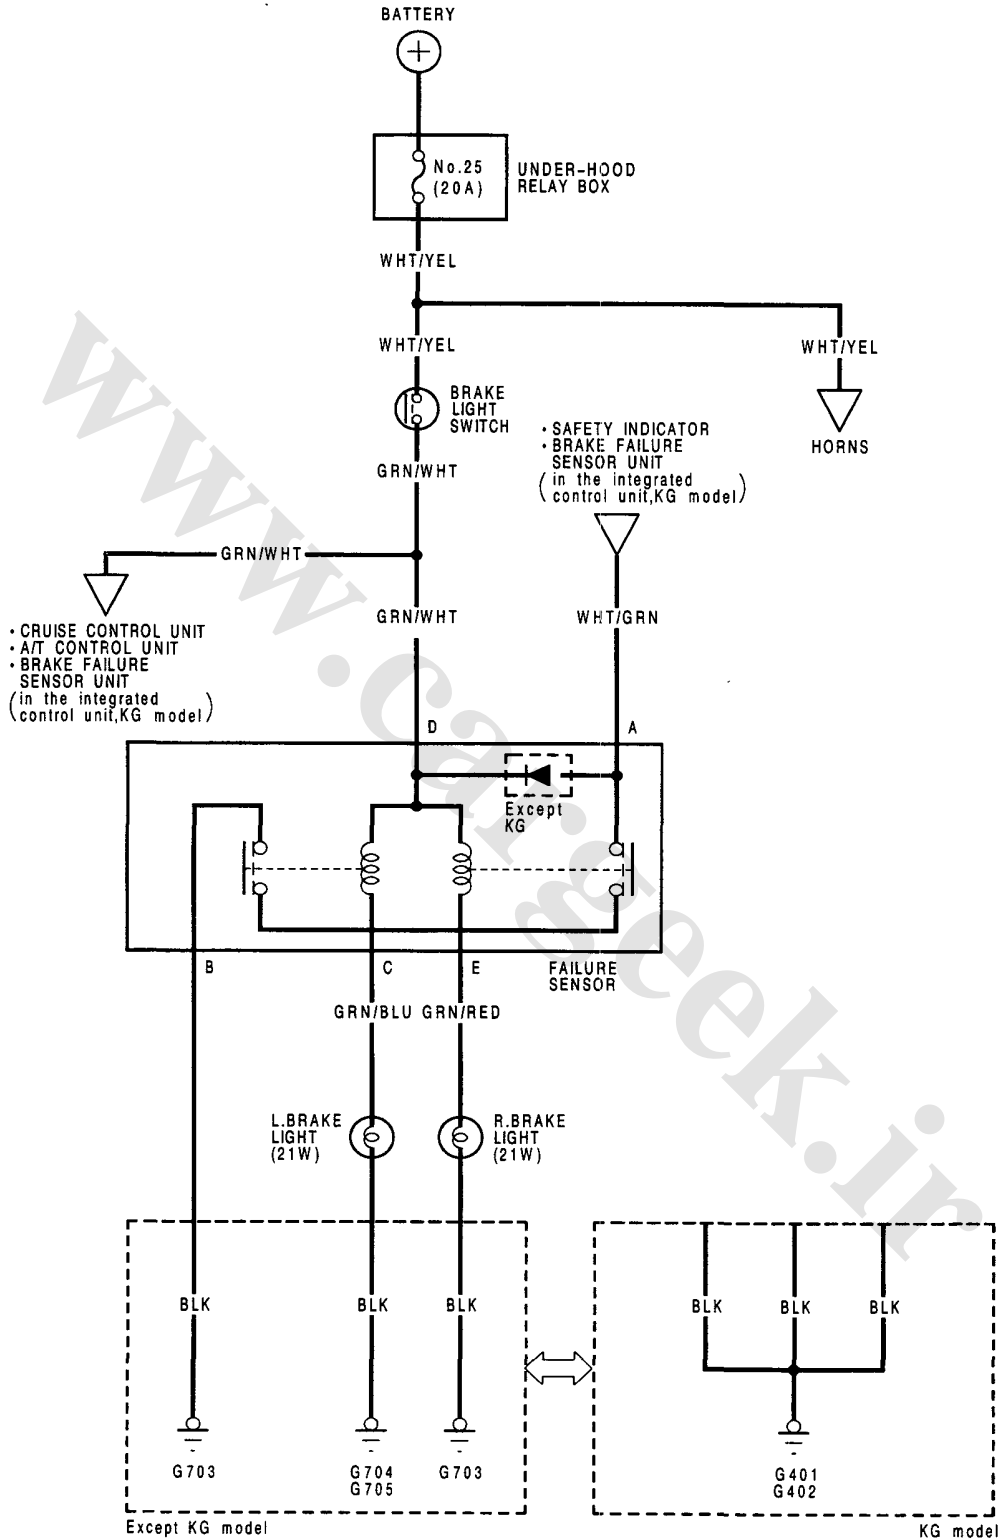

Ground Distribution


Circuit Identification

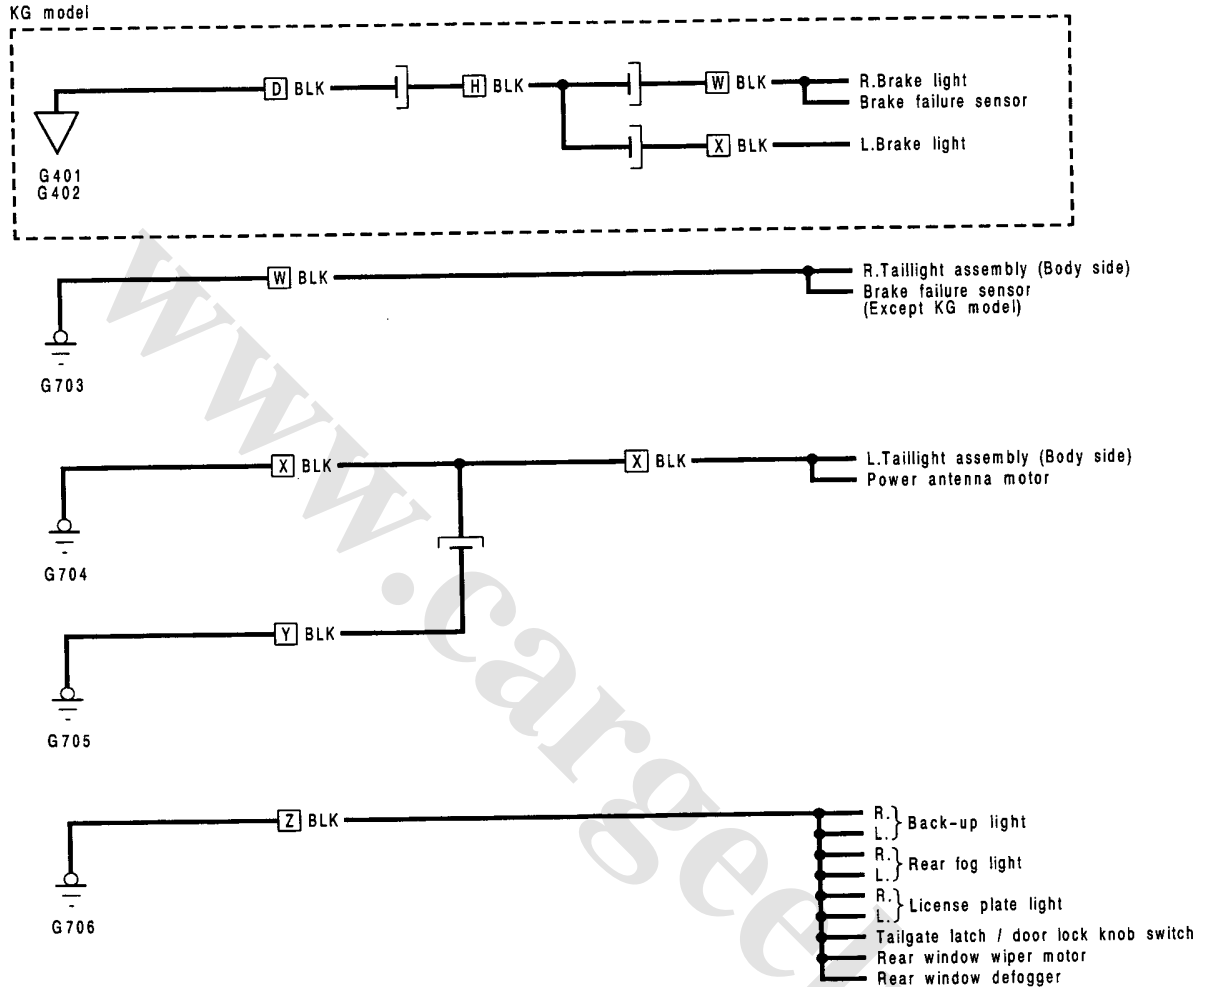

- D** : Main wire harness
- H** : Floor wire harness
- W** : Right rear wire harness
- X** : Left rear wire harness
- Y** : Tailgate wire harness
- Z** : Tailgate sub wire harness



Circuit Diagram

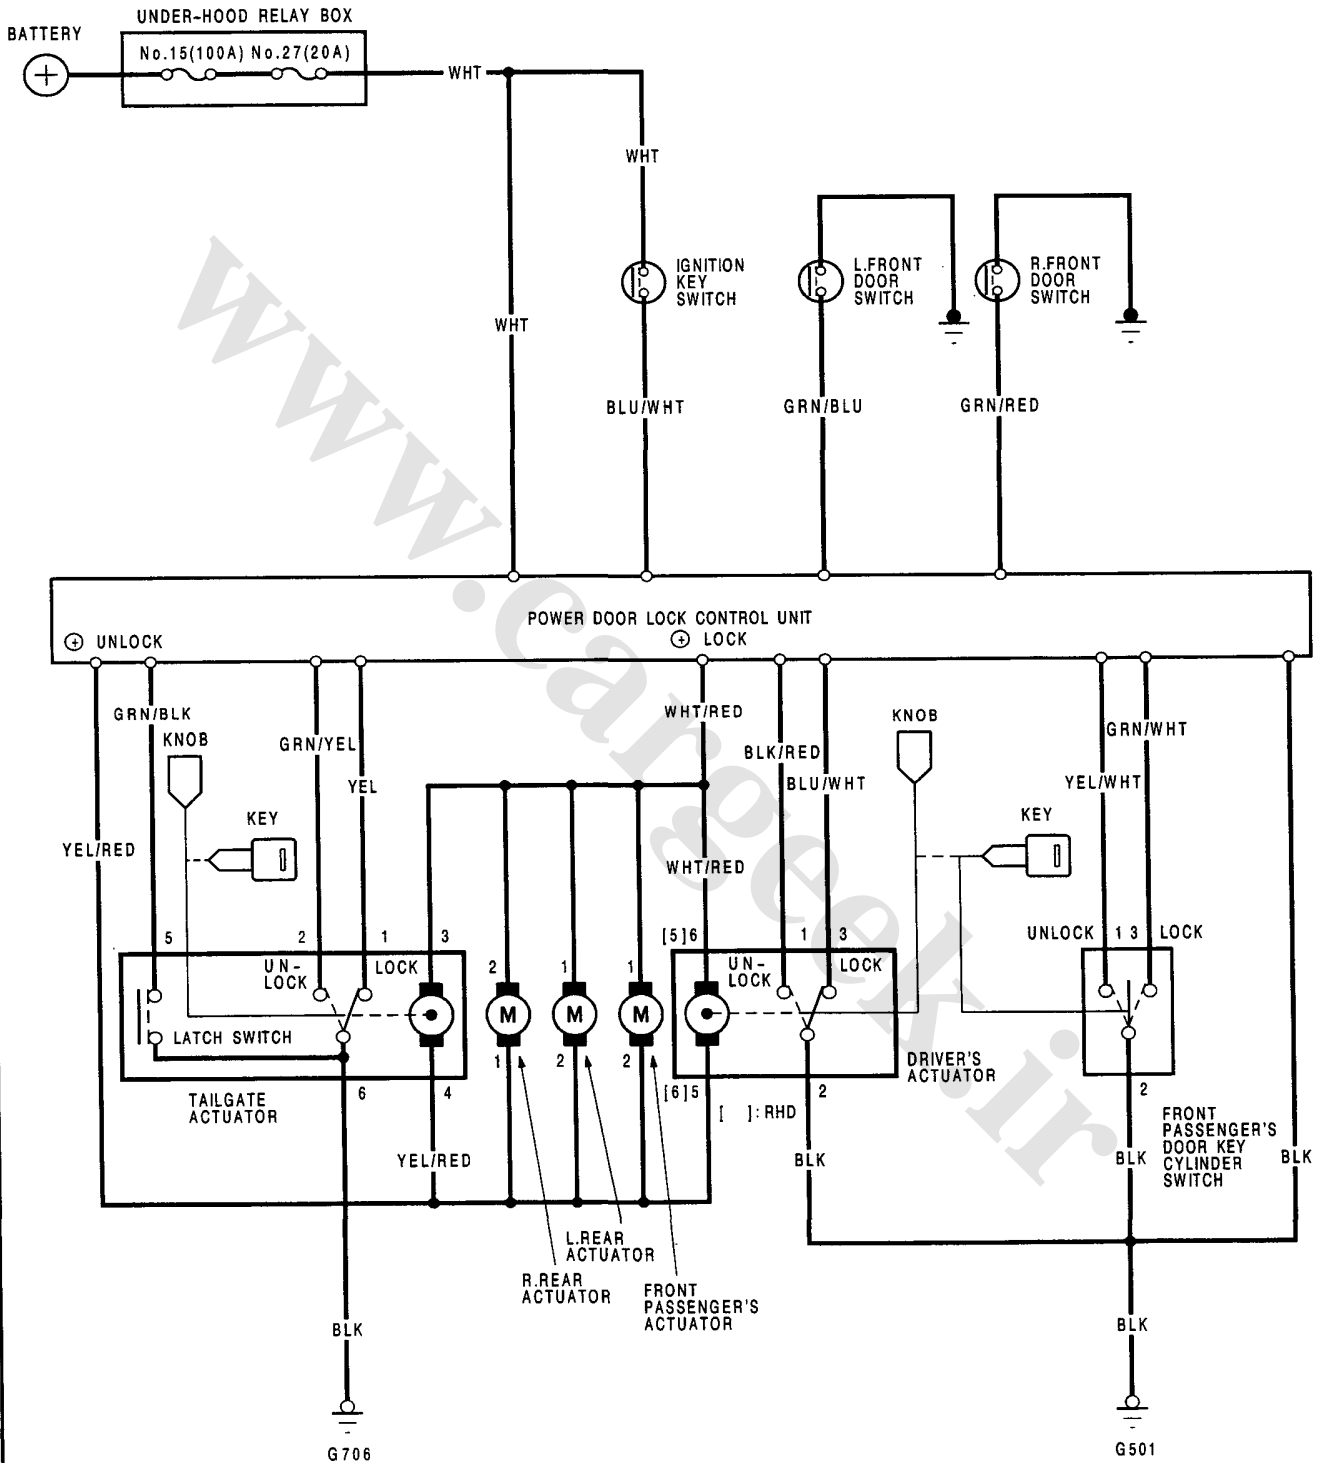


Power Door Locks

Component Location Index

NOTE: RHD type is symmetrical to LHD type.

- FRONT PASSENGER'S DOOR KEY CYLINDER SWITCH
Test, page 16-23
- IGNITION KEY SWITCH
Test, page 16-24

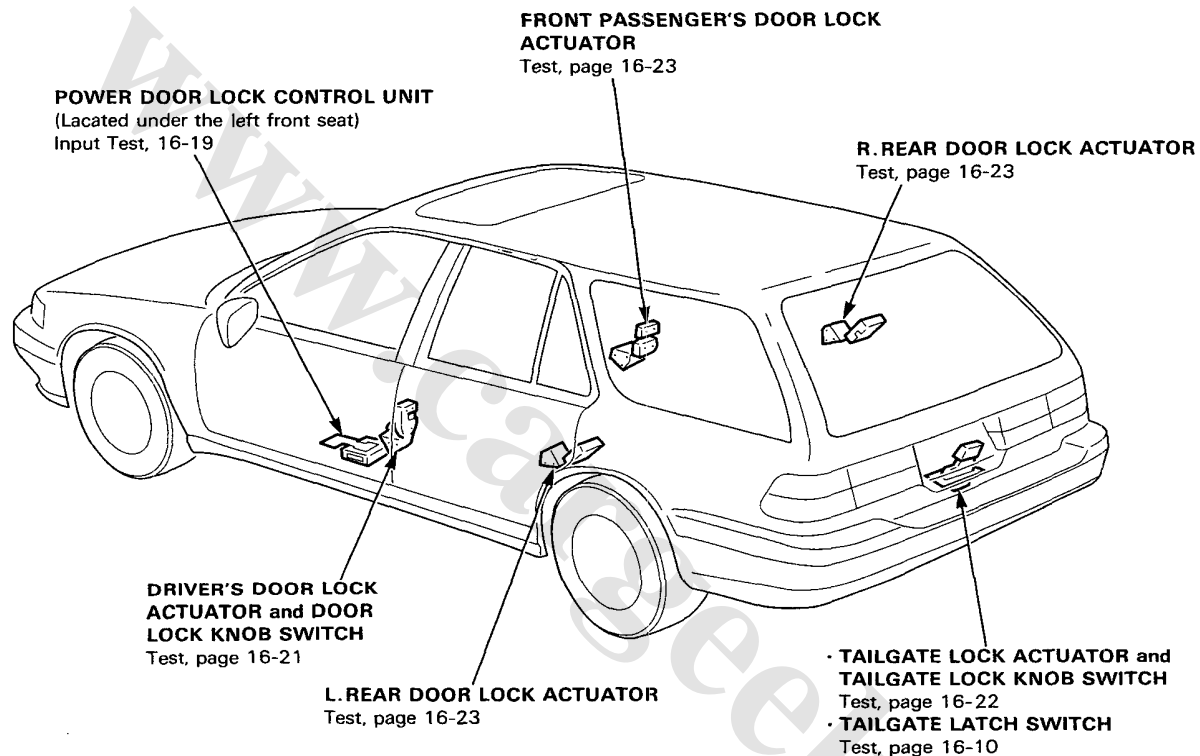




Control Unit Input Test

Slide the left front seat forward to disconnect the 10-P and 14-P connectors from the control unit.
Make the following input test at the connector terminals.

NOTE: Recheck the connections between the 10-P, 14-P connectors and the control unit, then replace the control unit if all input tests prove OK.

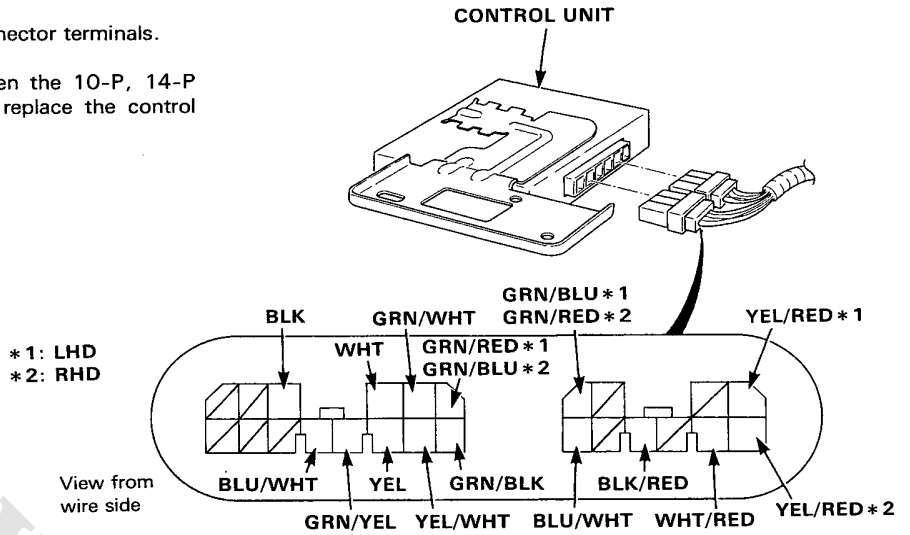


No.	Terminal	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Poor ground (G501). • An open in the wire.
2	WHT	Under all conditions.	Check for voltage to ground: should be battery voltage.	<ul style="list-style-type: none"> • Blown No.27 (20 A) fuse. • An open in the wire.
3	BLU/WHT	Driver's door lock knob in LOCK.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> • Faulty door lock knob switch. • Poor ground (G501). • An open in the wire.
4	BLK/RED	Driver's door lock knob in UNLOCK.		
5	YEL/RED and WHT/RED	Connect the WHT terminal to the WHT/RED terminal, and the YEL/RED terminal to the BLK terminal momentarily.	Check door lock operation: all doors should lock as the battery is connected momentarily.	<ul style="list-style-type: none"> • Faulty actuators. • An open in the wire.
		Connect the WHT terminal to the YEL/RED terminal, and the WHT/RED terminal to the BLK terminal momentarily.	Check door lock operation: all doors should unlock as the battery is connected momentarily.	

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

(cont'd)

Power Door Locks

Control Unit Input Test (cont'd)

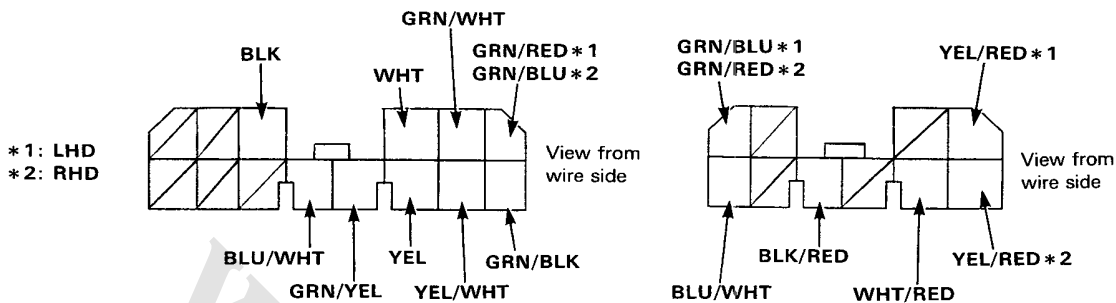

No. Terminal Test condition Test: desired result Possible cause (if result is not obtained)

6	YEL	Tailgate lock knob in LOCK.	Check for continuity to ground: should be continuity.	<ul style="list-style-type: none"> Faulty tailgate lock knob switch. Poor ground (G706). An open in the wire.
7	GRN/YEL	Tailgate lock knob in UNLOCK.		
8	GRN/BLK	Tailgate opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No.22 (15A) fuse.	<ul style="list-style-type: none"> Faulty tailgate latch switch. Poor ground (G706). An open in the wire.
9	GRN/WHT	Front passenger's door key cylinder in LOCK.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No.22 (15A) fuse.	<ul style="list-style-type: none"> Faulty passenger's door key cylinder switch. Poor ground (G501). An open in the wire.
10	YEL/WHT	Front passenger's door key cylinder in UNLOCK.		
11	GRN/BLU	L. front door opened.	Check for continuity to ground: should be continuity. NOTE: Before testing, remove the No.22 (15A) fuse.	<ul style="list-style-type: none"> Faulty door switch. An open in the wire.
12	GRN/RED	R. front door opened.		
13	BLU/WHT	Ignition key turned from "II" to "0" position.	Check for voltage to ground: should be battery voltage when the ignition key is turned from "II" to "0" position and no voltage when it is removed.	<ul style="list-style-type: none"> Blown No.22 (15A) fuse. Faulty ignition key switch. An open in the wire.




Passenger's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the 2-P connector from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 1 and No. 2 terminals.
Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

NOTE: Right front actuator is shown; rear actuators are similar.

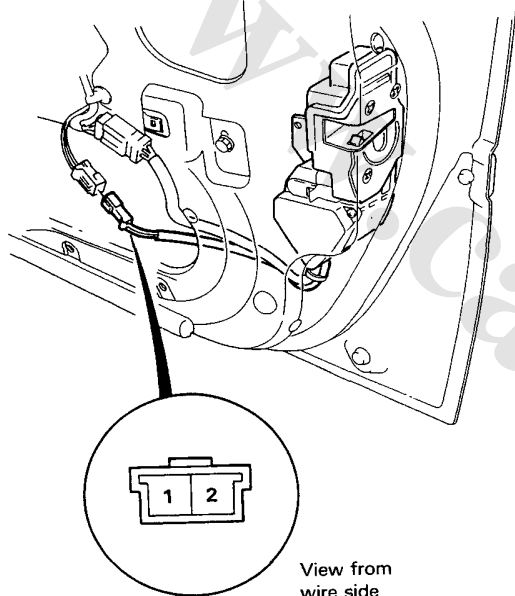


4. If the actuator fails to operate properly, replace it.

Door Key Cylinder Switch Test

1. Remove the front passenger's door trim panel.
2. Disconnect the 3-P connector of the key cylinder switch.
3. Check for continuity between the terminals in each switch position according to the table.

Terminal	1	2	3
Position			
UNLOCK		○	○
LOCK	○	○	

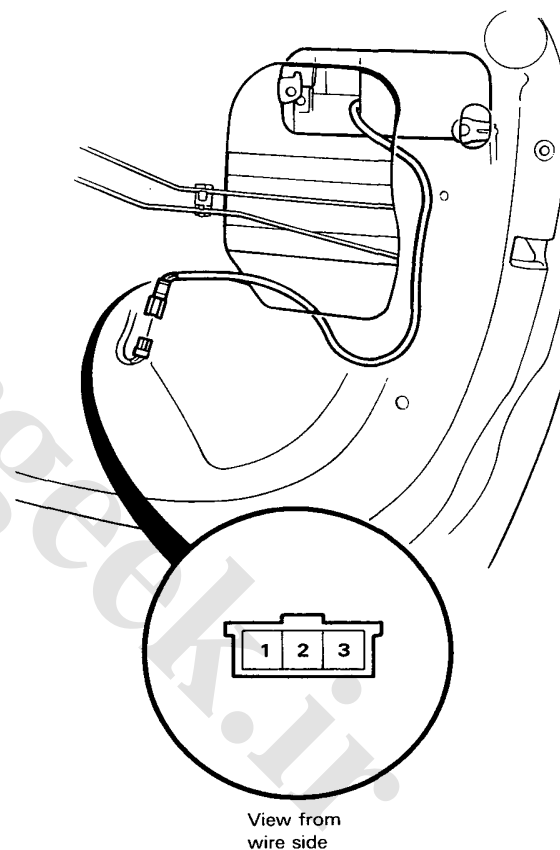




Driver's Door Actuator Test

1. Remove the door trim panel.
2. Disconnect the connectors from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 5 and No. 6 terminals.
Test the actuator in each direction, by switching the leads from the battery.


CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

NOTE: LHD type is shown; RHD type is similar.

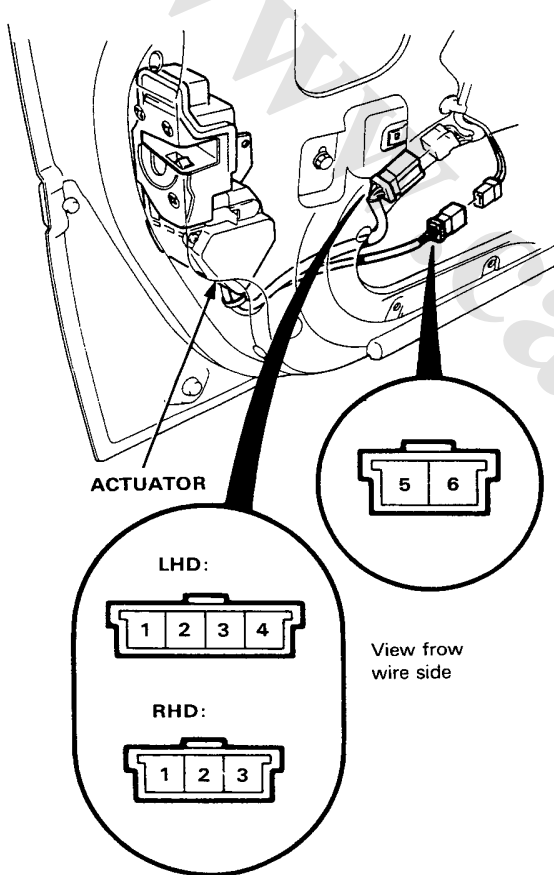

5. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	1	2	3
LOCK		○	○
UNLOCK	○	○	

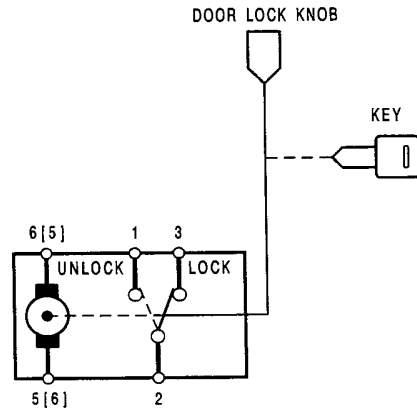



[]: RHD

4. If the actuator fails to operate properly, replace it.

Power Door Locks

Ignition Key Switch Test

1. Remove the instrument lower panel, then disconnect the 6-P connector from the main wire harness.
2. There should be continuity between the A and B terminals when the ignition switch is turned from "II" to "O" position.
There should be no continuity when the ignition key is removed.

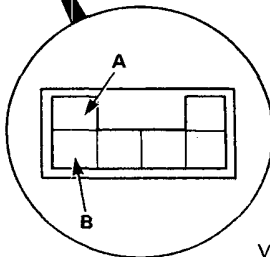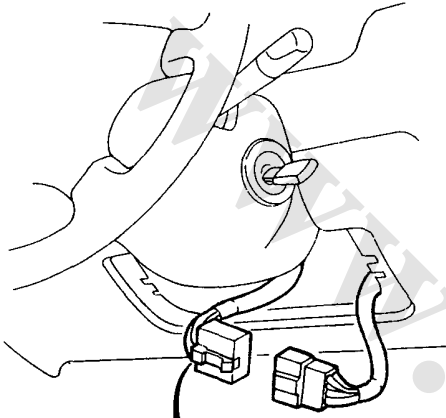


View from wire side

Power Door Locks

Tailgate Actuator Test


1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 4-P and 2-P connectors from the actuator.
3. Test actuator operation by connecting battery voltage to the No. 5 and No. 6 terminals. Test the actuator in each direction, by switching the leads from the battery.

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.

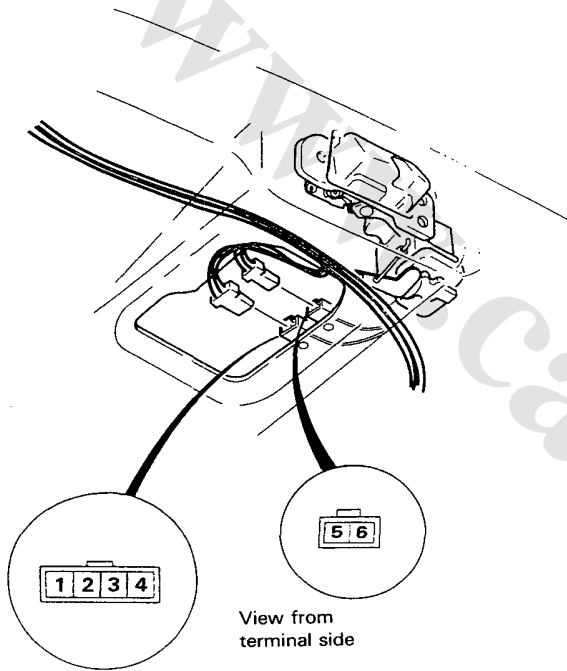

5. Check for continuity between the terminals in each switch position according to the table.

Terminal	1	2	6
LOCK	○	—	○
UNLOCK		○	○

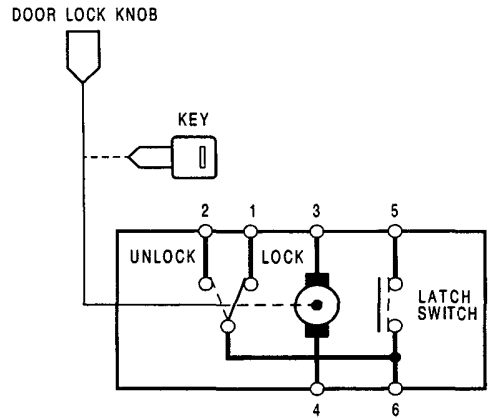

4. If the actuator fails to operate properly, replace it.

Power Door Locks


Troubleshooting


NOTE: The numbers in the table show the troubleshooting sequence.

Symptom	Item to be inspected		Blown No. 27 (20 A) fuse (in the under-hood relay box)	Door lock knob switch (in the driver's door lock actuator)	Control unit input	Passenger's door actuators	Disconnected or obstructed door lock rod/linkage	Front passenger's door key cylinder switch.	Tailgate lock knob switch	Poor ground	Open circuit in wires or loose or disconnected terminals
Power door lock system does not operate at all			1		2					G501	WHT
Doors do not lock or unlock with driver's door lock knob switch.	All passenger's doors.			1	3		2			G501	BLU/WHT
	One or more passenger's doors.					1					YEL/RED or WHT/RED
Doors do not lock or unlock with front passenger's door key cylinder switch.	All doors.				3		2	1		G501	GRN/WHT or YEL/WHT
	One or more doors.					1					YEL/RED or WHT/RED
Doors do not lock or unlock with tailgate lock knob switch.	All doors.				3		2		1	G706	GRN/ YEL or YEL
	One or more doors.					1					YEL/RED or YEL/WHT

CAUTION: To prevent damage to the motor, apply battery voltage momentarily.


Rear Wiper/Washer Circuit Diagram

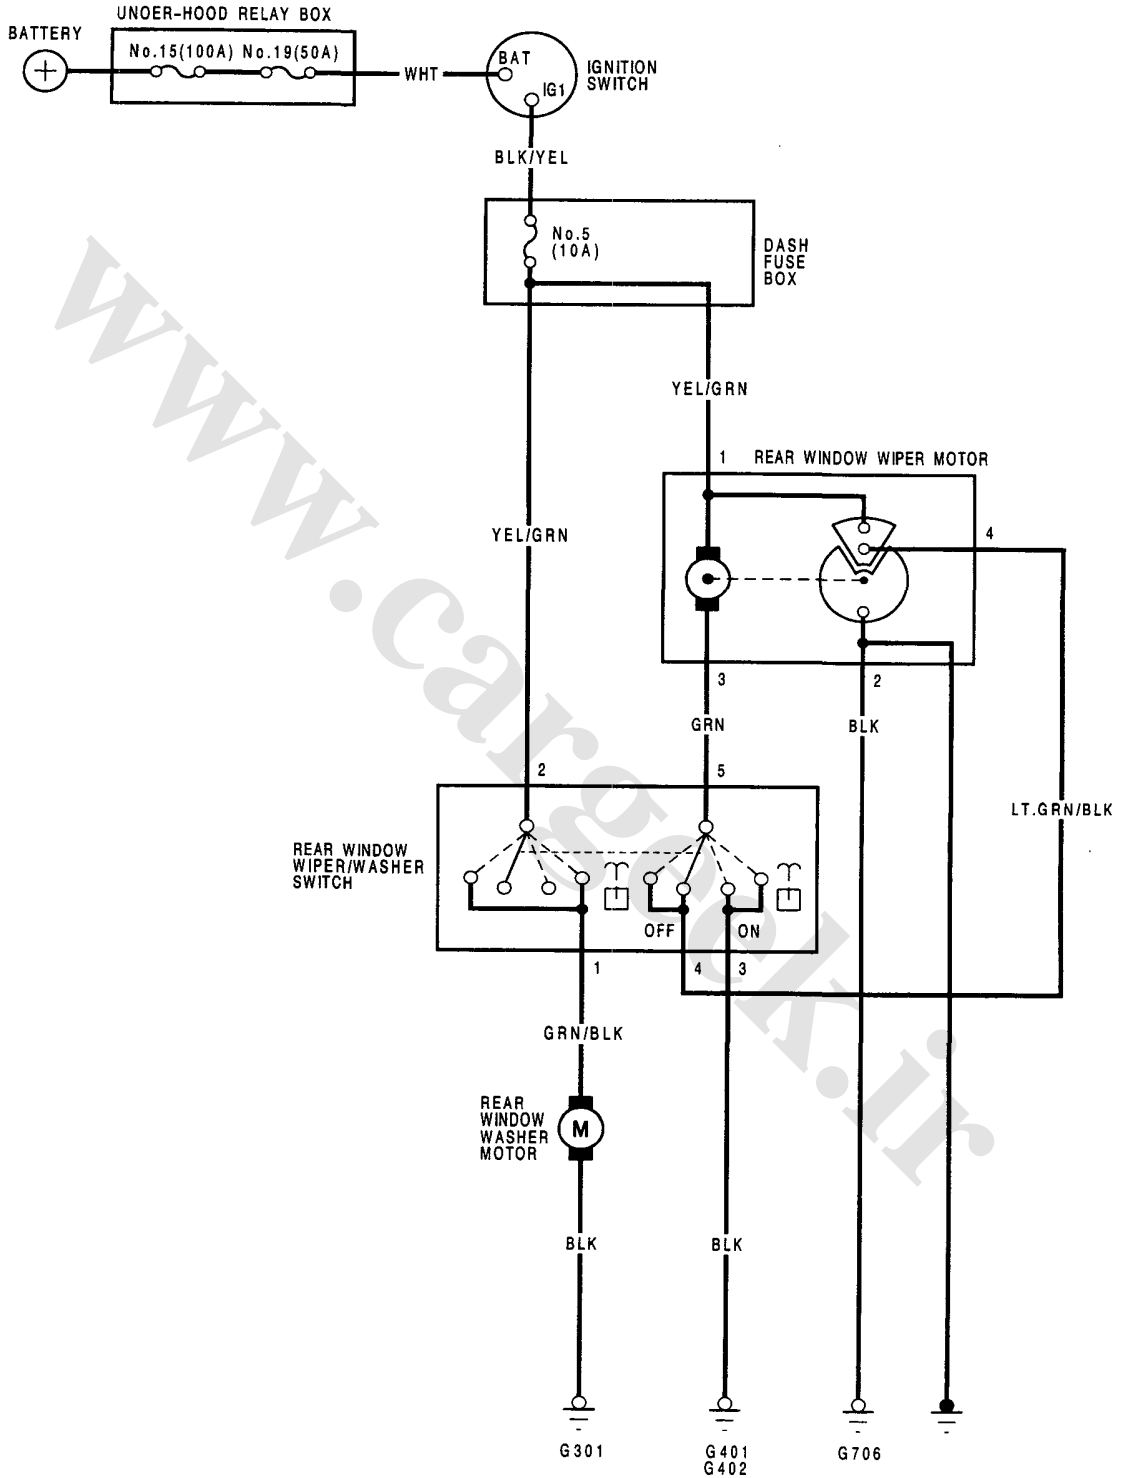



Rear Wiper/Washer

Component Location Index


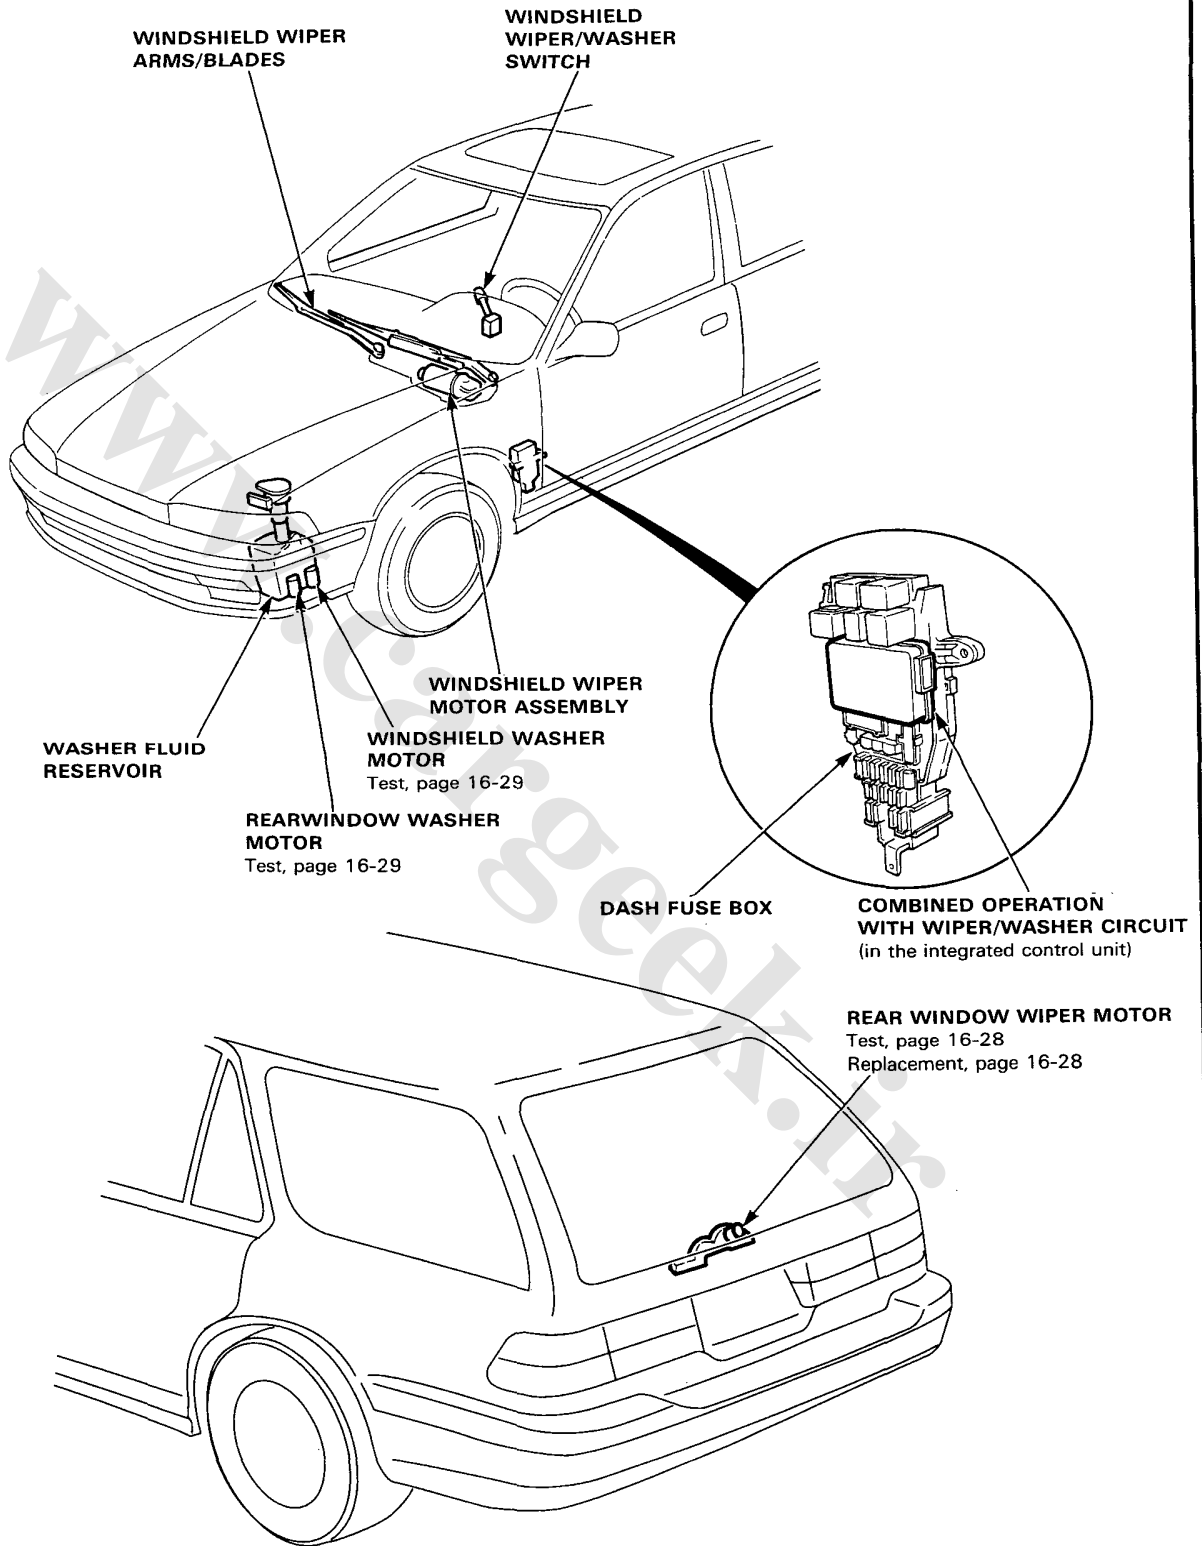


Rear Wiper/Washer

Wiper Motor Test


1. Remove the tailgate trim panel, then disconnect the 4-P connector.
2. Test wiper motor operation by connecting battery positive wire to No. 1 terminal and battery negative wire to No. 2 terminal. If the motor fails to run smoothly, replace it.
3. While running the motor, check the voltages between the terminals according to the table.

1	4	2	voltage should be between 5-10V
○	○	○	
	○	○	

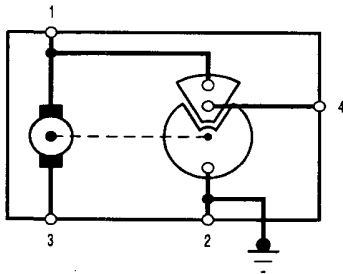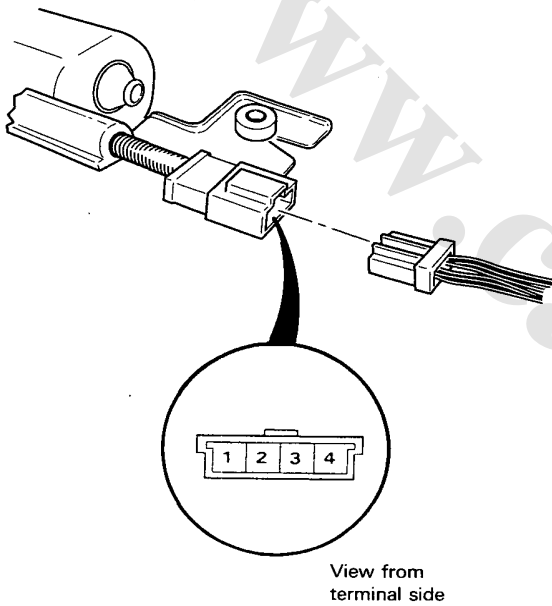


Wiper Motor Replacement

1. Remove the tailgate trim panel.
2. Remove the trim cover, outer nut, wiper arm, pivot cap, inner nut, washer, and rubber seal as shown below.

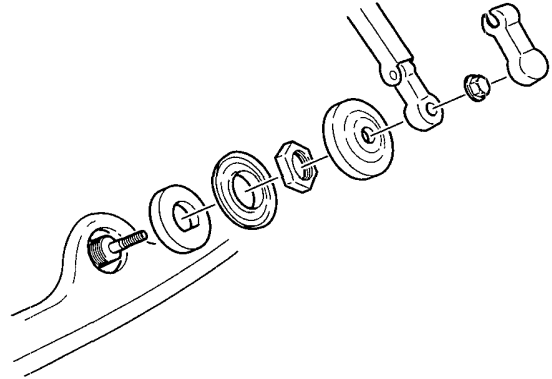


3. Disconnect the 4-P connector from the wiper motor.
4. Remove the three mounting bolts and the wiper motor assembly.

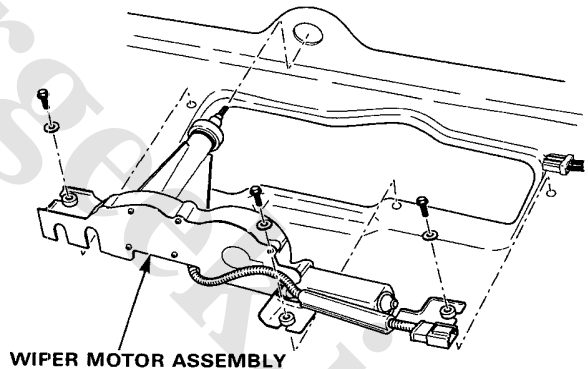



Washer Motors Test

1. Remove the front bumper and disconnect the 2-P connectors from the washer motors.
2. Test the washer motors operation by connecting battery positive to the \oplus terminal and negative to the \ominus terminal.

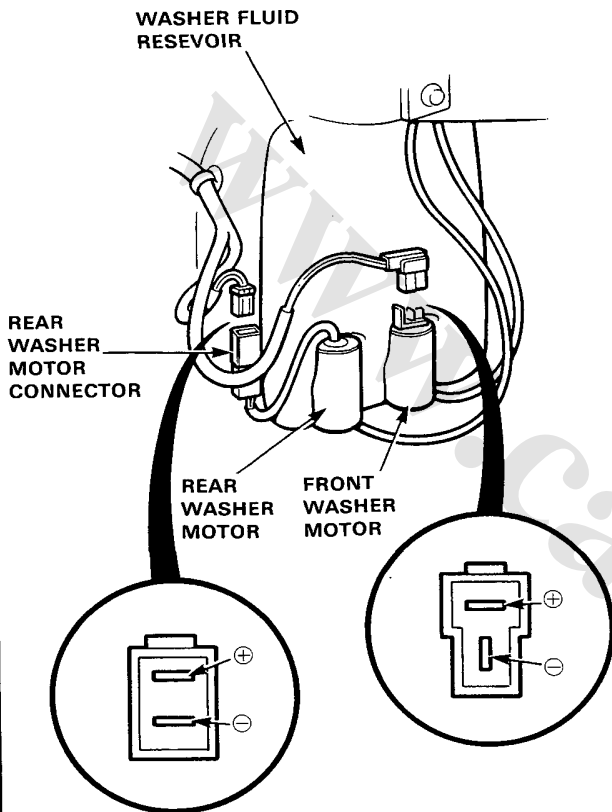


- If the motors fail to run smoothly or are not running, replace them.
- If the motors run smoothly, but there is not enough fluid pumped, check for disconnected, blocked or damaged washer hoses.



Wiper/Washer Switch Test

1. Remove the dashboard lower panel and knee bolster.
2. Disconnect the 7-P connector from the main wire harness.
3. Check for continuity between the terminals in each switch position according to the table.

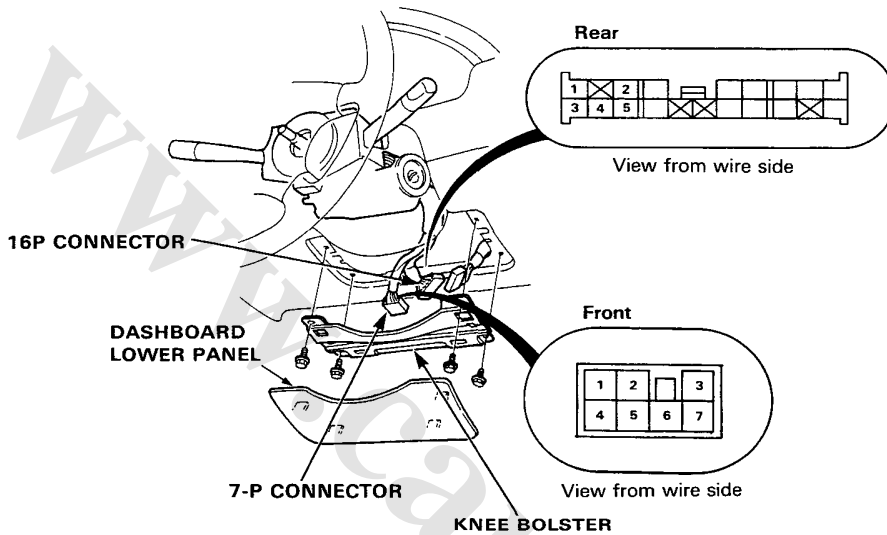

Front

Terminal	1	2	3	4	5	6	7
Position							
OFF					○		○
INT		○	○		○		○
LO	○						○
HI	○			○			
Mist switch "ON"	○			○			
Washer switch "ON"		○				○	


Rear

Terminal	1	2	3	4	5
Position					
Washer Switch "ON"	○	○		○	○
OFF				○	○
ON			○		○
Washer Switch "ON"	○	○	○		○

Relays and Control Unit Locations


Floor and Door

NOTE: RHD type is symmetrical to LHD type.

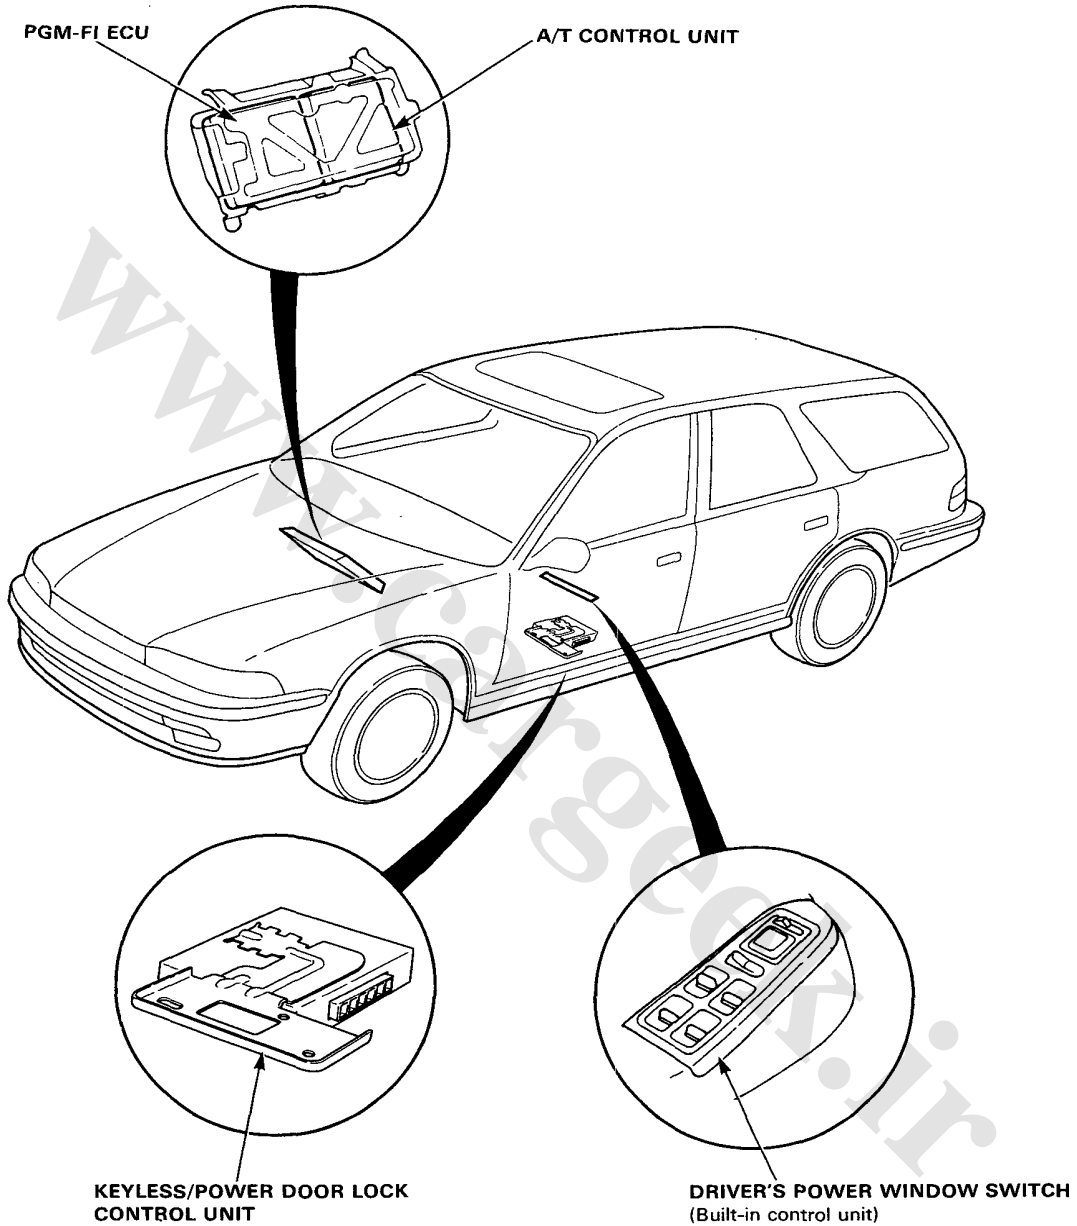




Circuit Diagram

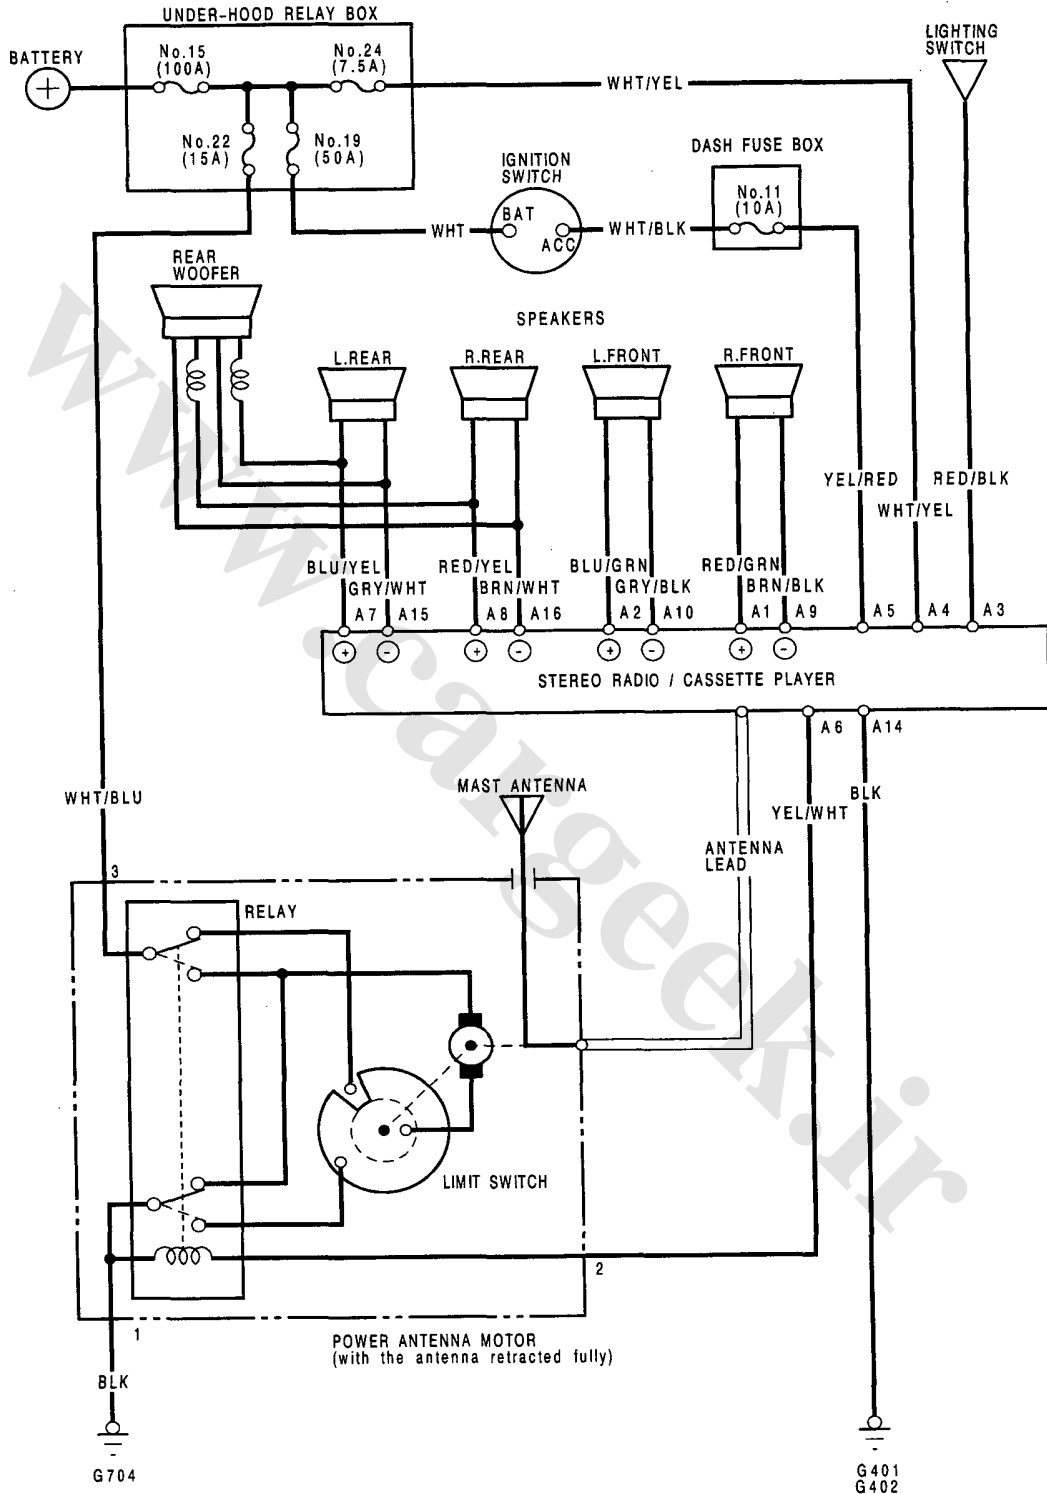

Stereo Sound System

Component Location Index

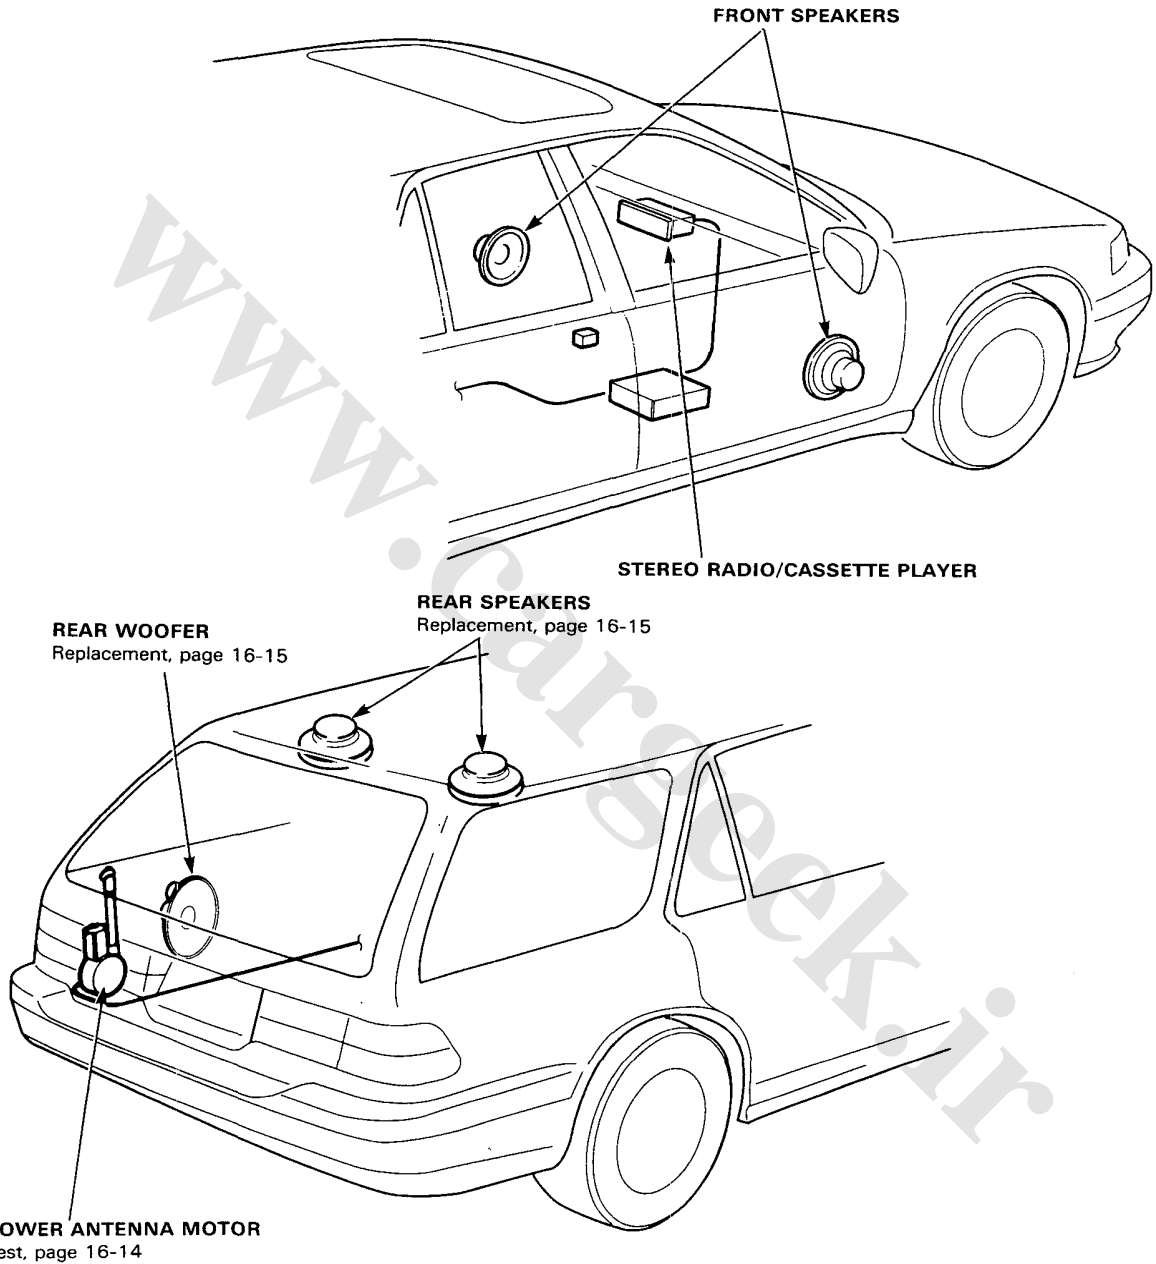

Stereo Sound System


Power Antenna Motor Test

1. Remove the left rear quarter trim panel.
2. Disconnect the 3-P connector from the motor and remove the connector from its clamp.
3. First check power to the motor at the connector terminals. There should be battery voltage between the WHT/BLU (+) and BLK (-) terminals all the time. There should be battery voltage between the YEL/WHT (+) and BLK (-) terminals only with the ignition and radio switched ON.


4. Test motor operation:

FULL EXTEND: Connect battery positive to the No. 3 and No. 2 terminals and negative to the No. 1 terminal.

RETRACTED: Then disconnect battery positive from the No. 2 terminal.

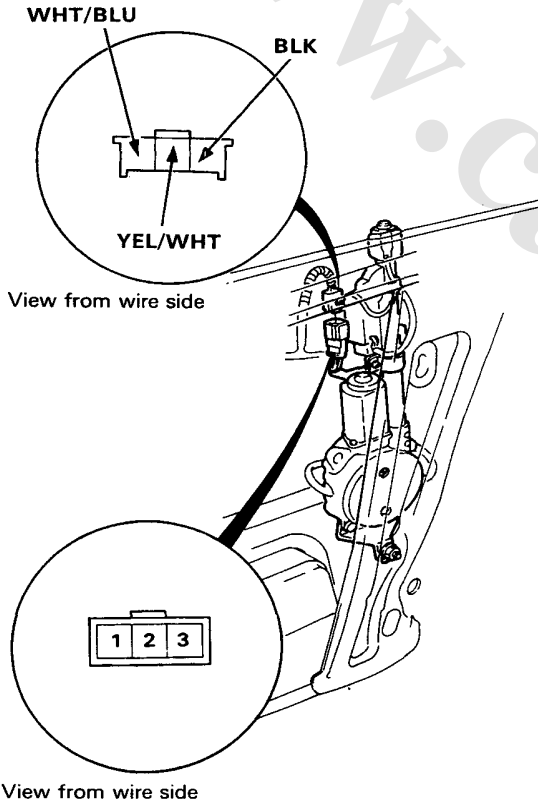

5. If the motor fails to operate properly, replace it.

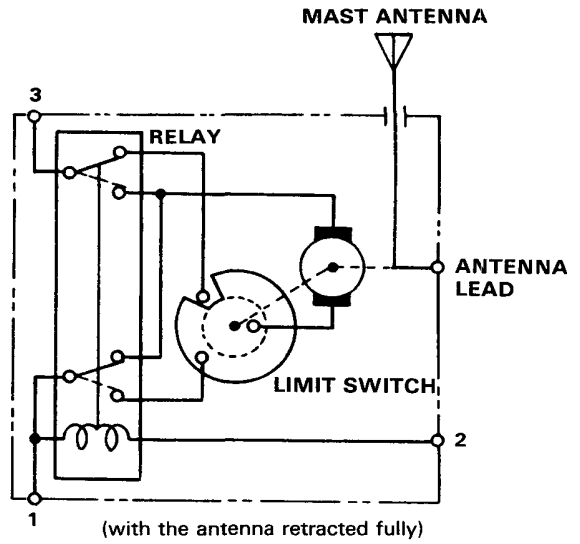





Rear Speaker Replacement

1. Open the tailgate and pry the speaker grille off.
2. Remove the 4 screws and disconnect the connector (S).

Right/Left Speaker:

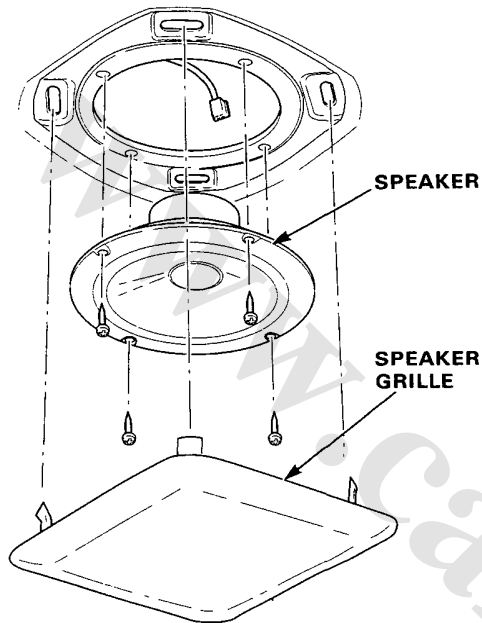



Woofer Speaker:

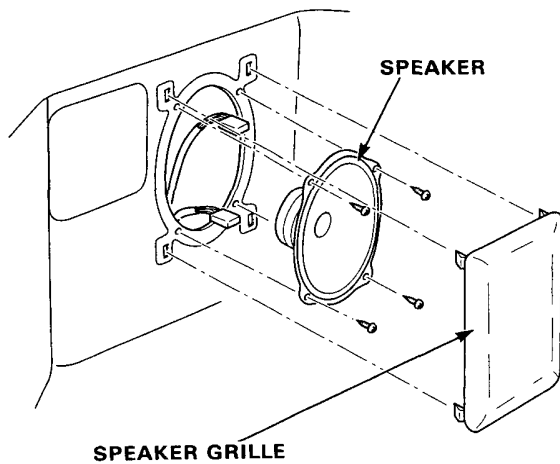


Tailgate Latch Switch

Test/Replacement

1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 2-P connector from the tailgate latch.
3. There should be continuity between the two tailgate latch switch connector terminals.

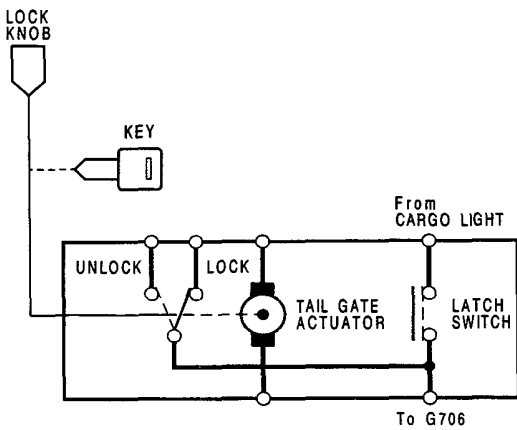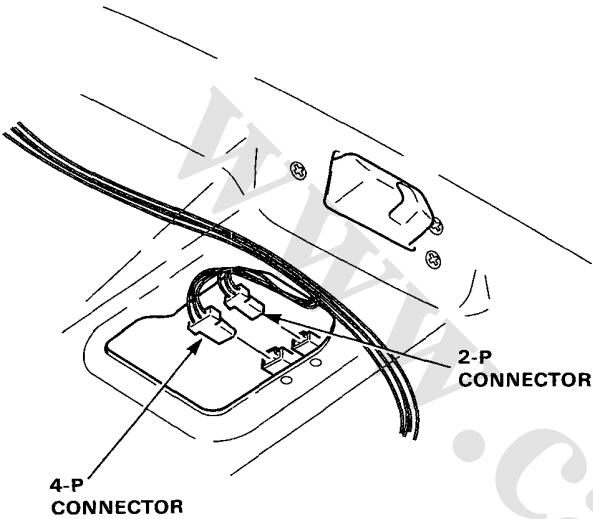

4. If necessary, remove the 3 screws and pull the latch of the tailgate, then disconnect the 4-P connector and rods from the latch.

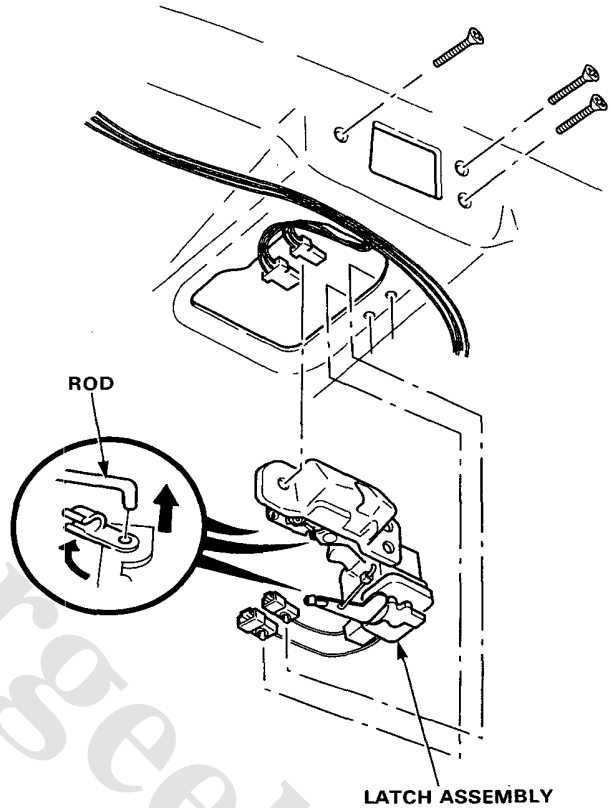




Taillights

Replacement

Body side:


1. Open the tailgate and remove the rear quarter trim panel.
2. Disconnect the 4-P or 6-P connector from the body-side taillight.
3. Remove the 4 mount nuts and the taillight.

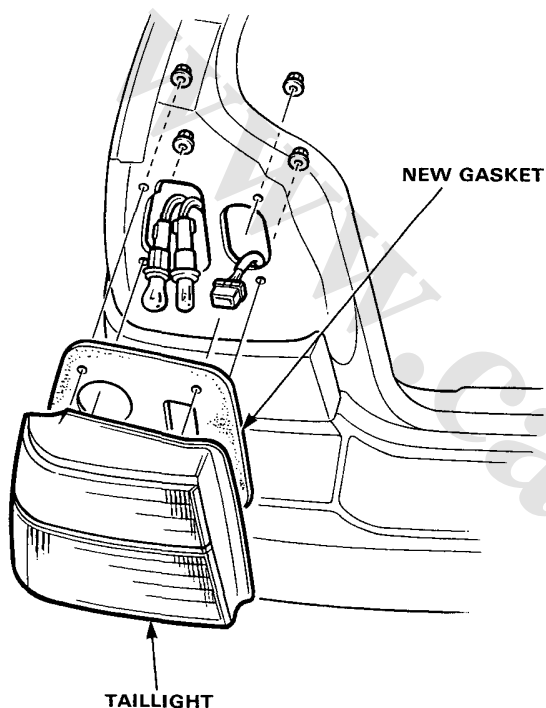

4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.

Tailgate side:

1. Open the tailgate and remove the tailgate trim panel.
2. Disconnect the 4-P connector from the tailgate-side taillight.
3. Remove the 6 mount nuts and the tailgate-side taillight.

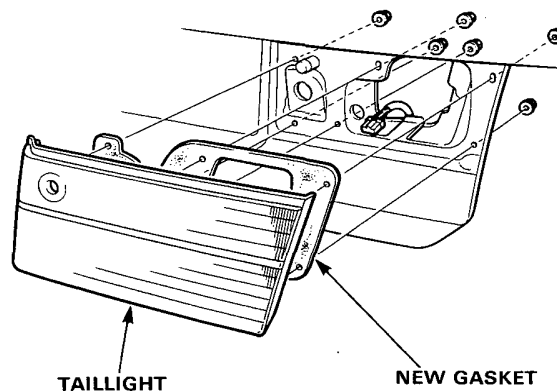


4. Inspect the gasket; replace if it is distorted or overly compressed.
5. Make sure that there is no water leakage in the taillights, after installing the taillights.




Floor

LHD:

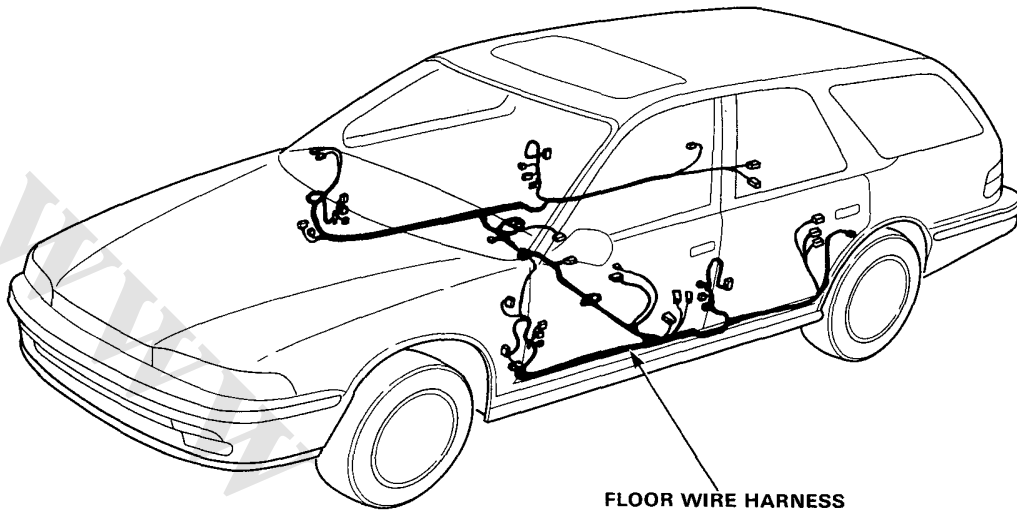


FLOOR WIRE HARNESS


RHD:

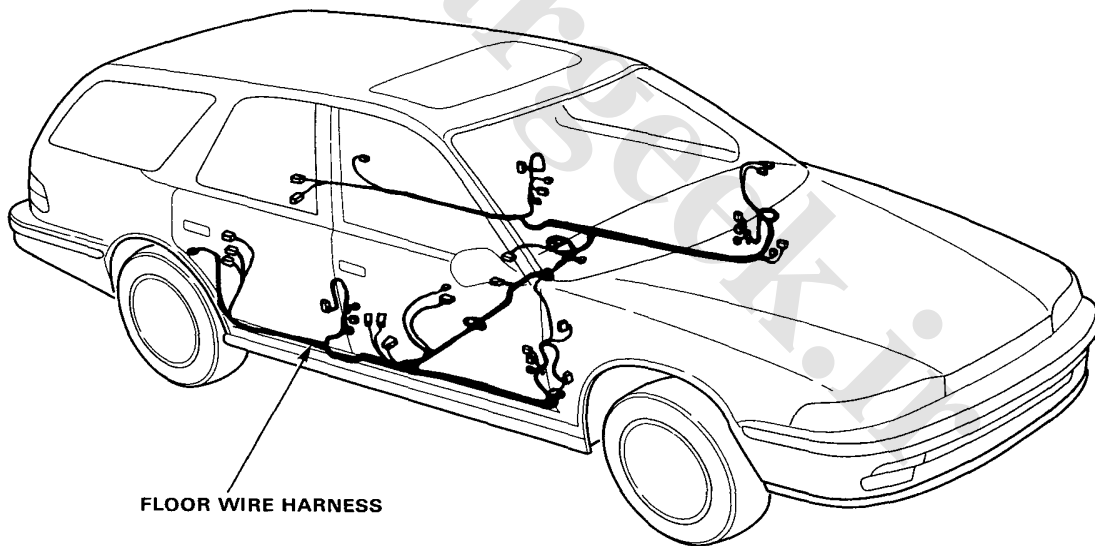

FLOOR WIRE HARNESS




Rear

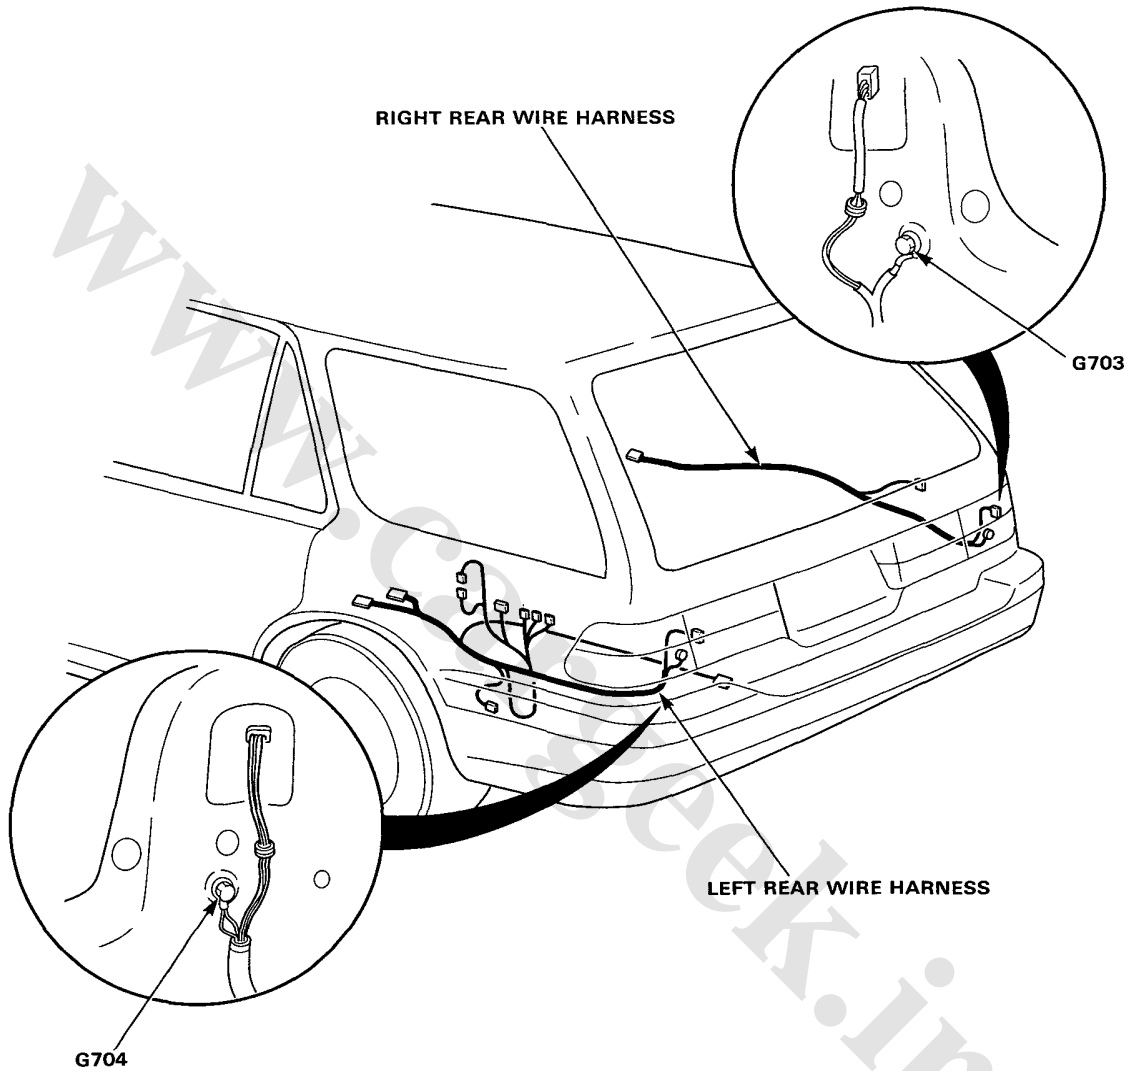

Wire Harness and Ground Locations


Rear Roof

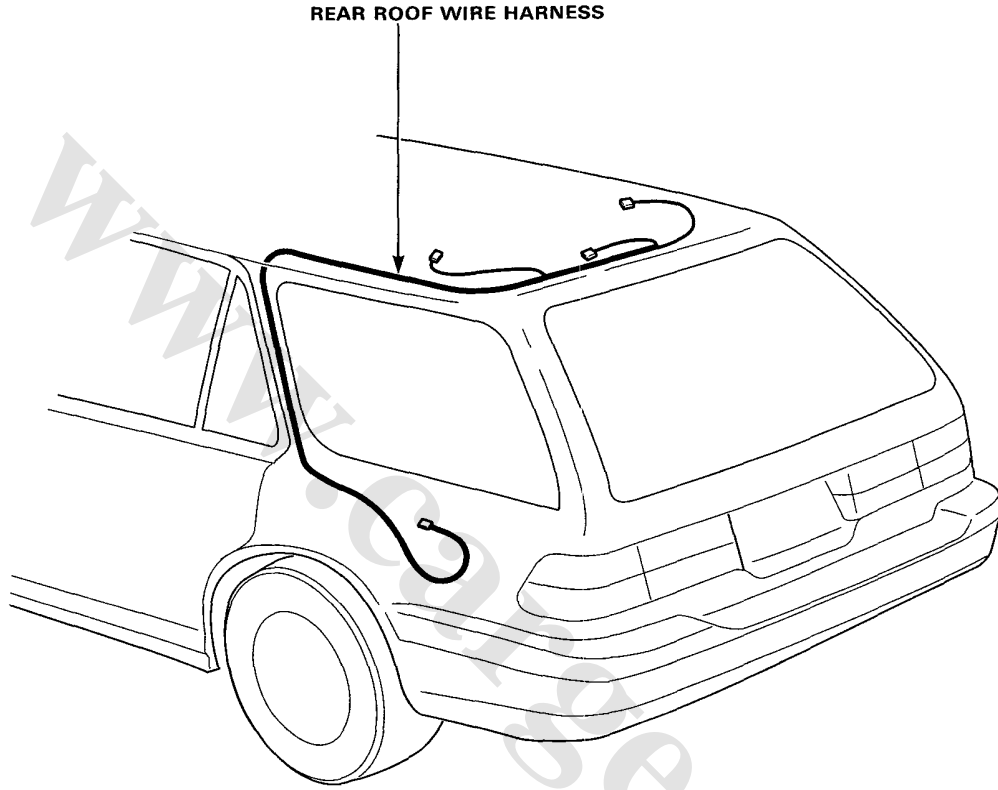

Wire Harness and Ground Locations

www.CarGeek.ir

Tailgate

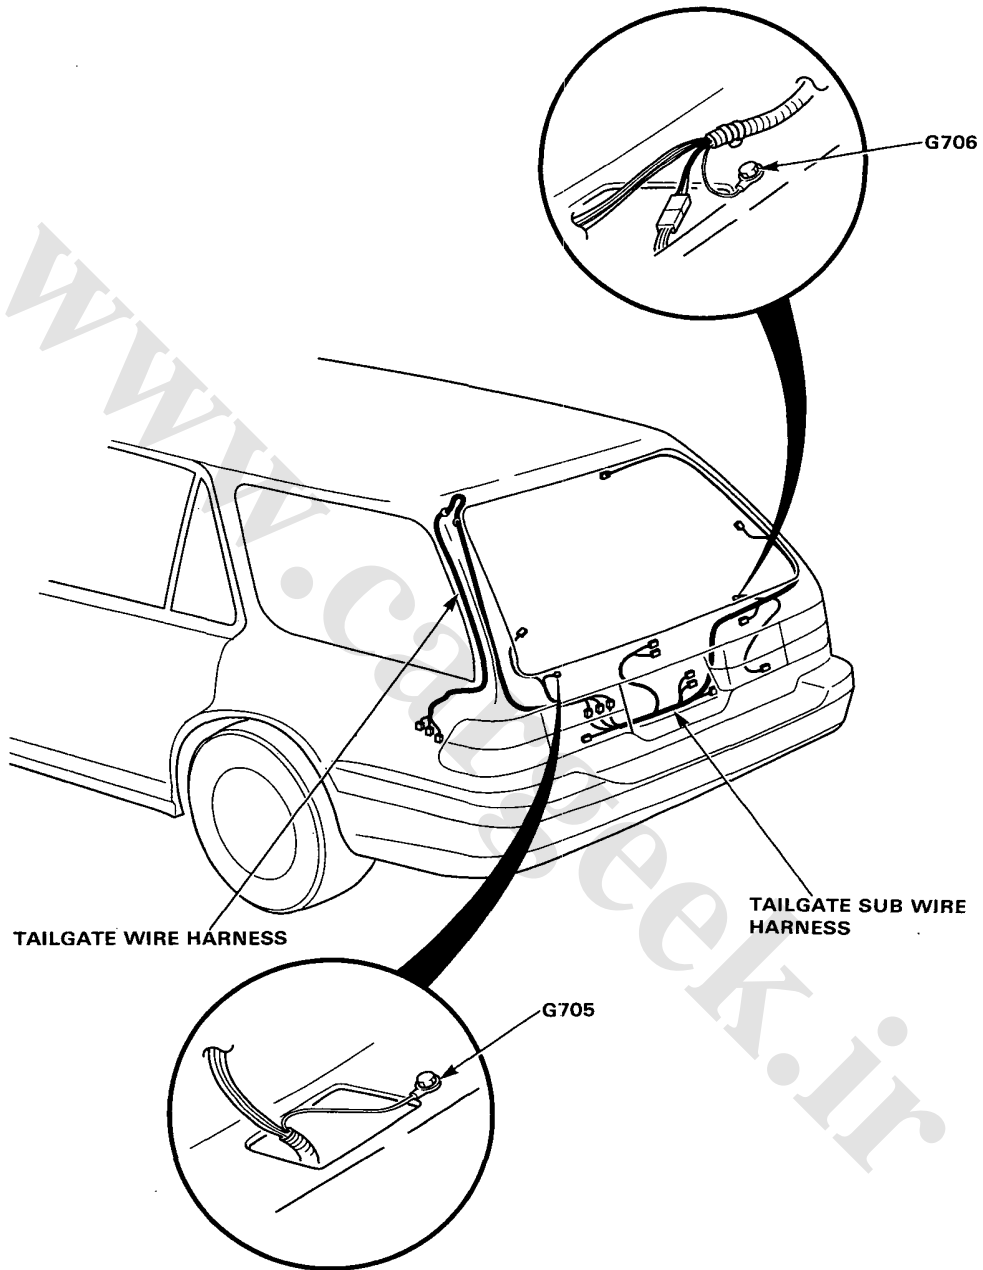

Index

Air Conditioner.....	17	Lights, Interior	
Anti-Lock Brake System (ABS).....	14	Cargo Light.....	3
Automatic Transmission Control System.....	14	Courtesy Lights.....	3
Battery.....	1	Dashlight Brightness Control	6
Blower Controls.....	17	Dome Lights.....	3
Charging System.....	1	Glove Box Light	6
Cigarette Lighter.....	10	Trunk Light	3
Clock.....	10	Vanity Mirror Light	6
Cooling Fan Control.....	16	Lighting System.....	6
Cruise Control System.....	12	Mirror, Power.....	11
Defogger, Rear Window.....	11	Seat, Power.....	13
Door Lock, Power.....	12	Starting System.....	1
Fuel and Emissions	16	Stereo Sound System.....	10
Gauges.....	2	Sunroof.....	11
Headlight Adjuster System.....	4	Turn Signal/Hazard Flasher System.....	10
Horns.....	4	Warning System	
Ignition Switch.....	1	ABS Warning	2
Ignition System.....	1	Brake Warning.....	2
Indicators		Charge Warning	2
Cruise Control Indicator	2	Check Engine Warning.....	2
Trunk Open Indicator.....	2	Hazard Warning	2
High Beam Indicator.....	2	Light-on Warning.....	5
Shift Lever Position Indicator.....	4	Oil Pressure Warning.....	2
Turn Signal Indicator.....	2	Washers	
Integrated Control Unit.....	5	Rear Window	13
Lights, Exterior.....		Windshield	13
Back-up Lights.....	10	Headlight Washer	13
Brake Lights	3	Windows, Power.....	12
Hazard Lights.....	2	Wipers	
Headlights	6	Windshield	13
License Plate Lights.....	6	Rear Window	13
Marker Lights.....	6		
Taillights.....	6		

INTRODUCTION

www.CarGeek.ir

General Info



Special Tools



Specifications

specs

Maintenance



Engine



Cooling



Fuel and Emissions



* Transaxle



* Steering



Suspension



* Brakes
(Including ABS)



* Body



* Heater and
Air Conditioner



* Electrical
(Including SRS)



As sections with * include SRS components, special precautions are required, when servicing.

How to Use This Manual

This supplement contains information for the 1992 ACCORD and ACCORD AERO DECK.

Refer to following shop manuals for service procedures and data not included in this supplement.

Description	Code No.
ACCORD CHASSIS Maintenance and Repair 90	62SM400
ACCORD SUPPLEMENT 91	62SM420
ACCORD AERO DECK SUPPLEMENT 91	62SM421
F18A/F20A/F22A ENGINE Maintenance and Repair	62PT400
H2 MANUAL TRANSMISSION Maintenance and Repair	62PX500
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400

The first page of each section is marked with a black tab that lines up with one of the thumb index tabs on this page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Special Information

▲ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of *standard* workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda, might be done, or of the possible hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, *must satisfy himself thoroughly* that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

marked sections are not included in this manual.

First Edition 11/91 590 pages
All Rights Reserved

HONDA MOTOR CO., LTD.
Service Publication Office

www.cargeek.ir

Chassis and Engine Numbers
Identification Number Locations
Label Locations
Lift and Support Points
Towing
Preparation of Work
Symbol Marks
Abbreviations

www.cargeek.ir

Chassis and Engine Numbers

Vehicle Identification Number
(4D with 2.0 l Carbureted engine)

JHMCB35200C200001

Manufacturer, Make and Type of Vehicle
JHM: HONDA MOTOR CO., LTD. JAPAN
HONDA Passenger car

Body Type
CB3: ACCORD 2.0 l

Body and Transmission Type
5: 4-door 5-speed Manual
6: 4-door 4-speed Automatic

Vehicle Grade
2: DX, KG/KS (F20A2)
LX, KY (F20A3 Leaded gasoline)
3: EX, KF/KG/KS/KE (F20A2)
KF/KE (F20A3 Unleaded gasoline)
KB/KW/KP/KT/KU/KY (F20A3, Leaded gasoline)
EX (90ps), KG (F20A6)

Fixed Code
Auxiliary Number
Factory Code
C: Sayama Factory in Japan

Model Year
2: 1992

Serial Number

Vehicle Identification Number
(4D with 2.0 l Fuel-injected engine except KB other)

JHMCB35400C200001

Manufacturer, Make and Type of Vehicle
JHM: HONDA MOTOR CO., LTD. JAPAN
HONDA Passenger car

Body Type
CB3: ACCORD 2.0 l

Body and Transmission Type
5: 4-door 5-speed Manual
6: 4-door 4-speed Automatic

Vehicle Grade
4: 2.0i, KF/KE (F20A5 Unleaded gasoline)
KB/KW (F20A5 Leaded gasoline)
KF/KG/KS/KE (F20A8)
2.0i with ABS
KF/KE (F20A5 Unleaded gasoline)
KB (F20A5 Leaded gasoline)
KF/KG/KS/KE (F20A8)
EXi, KU (F20A5 Leaded gasoline)

Fixed Code
Auxiliary Number
Factory Code
C: Sayama Factory in Japan

Model Year
2: 1992

Serial Number

Vehicle Identification Number
(4D with 2.0 l Fuel-injected engine KB other)

1HGCC155*NA700001

Manufacturer, Code and Vehicle Type
1HG: HONDA OF AMERICA MFG., INC., U.S.A.
HONDA Passenger car

Body Type
CC1: ACCORD 2.0 l

Body and Transmission Type
5: 4-door 5-speed Manual
6: 4-door 4-speed Automatic

Vehicle Grade
5: LX
6: EX

Check Digit
Model Year
N: 1992

Factory Code
A: Ohio Factory in U.S.A. (Marysvill)

Serial Number

Vehicle Identification Number
(4D with 2.2 l Fuel-injected engine)

JHMCB75400C200001

Manufacturer, Make and Type of Vehicle
JHM: HONDA MOTOR CO., LTD. JAPAN
HONDA Passenger car

Body Type
CB7: ACCORD 2.2 l

Body and Transmission Type
5: 4-door 5-speed Manual
6: 4-door 4-speed Automatic

Vehicle Grade
4: LXi, KQ (F22A9)
5: 2.2i, KF/KG/KX/KS/KE (F22A3)
EXi, KQ (F22A9)
KY (F22A2)

Fixed Code
Auxiliary Number
Factory Code
C: Sayama Factory in Japan

Model Year
2: 1992

Serial Number



Vehicle Identification Number
(5D with 2.2 l Fuel-injected engine) 1HGCB87400A000001

Manufacturer, Code and Vehicle Type
1HG: HONDA OF AMERICA MFG., INS., U.S.A.
HONDA Passenger car

Body Type
CB8: ACCORD AERO DECK 2.2 l (KF/KG/KE)
CB9: ACCORD WAGON 2.2 l (KQ)

Body and Transmission Type
7: 5-door 5-speed Manual
8: 5-door 4-speed Automatic

Vehicle Grade
4: 2.2i (KF/KG/KE) LXi (KQ)
5: 2.2i with A/C (KF/KG/KE) LXi with A/C (KQ)

Fixed Code

Auxiliary Number

Factory Code
A: Ohio Factory in U.S.A. (Marysvill)

Model Year
0: 1992

Serial Number

Engine Number
(2.2 l engine for 4D European model) F22A3-3000001

Engine Type
F22A3: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA (KF/KG/KX/KS/KE)

Transmission Type
30: Manual
35: Automatic

Serial Number

Engine Number
(2.2 l engine for 4D except European model) F22A2-3000001

Engine Type
F22A2: 2.2 l Fuel-injected engine
Leaded gasoline without CATA (KY)
F22A9: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA (KQ)

Serial Number
F22A2: 3000001 ~
F22A9: 2000001 ~

Engine Number
(2.0 l engine) F20A2-3000001

Engine Type
F20A2: 2.0 l Carbureted engine
Unleaded gasoline with CATA (KF/KG/KS/KE)
F20A3: 2.0 l Carbureted engine
Unleaded gasoline without CATA (KF/KE)
F20A3: 2.0 l Carbureted engine
Leaded gasoline without CATA (KB/KW/KP/KT/KU/KY)
F20A5: 2.0 l Fuel-injected engine
Unleaded gasoline without CATA (KF/KE)
F20A5: 2.0 l Fuel-injected engine
Leaded gasoline without CATA (KB/KB other/KW/KU)
F20A6: 2.0 l Carbureted engine
Unleaded gasoline with CATA (KG*90ps)
F20A8: 2.0 l Fuel-injected engine
Unleaded gasoline with CATA (KF/KG/KX/KS/KE)

Transmission Type
10: F20A8 engine with Manual
15: F20A8 engine with Automatic
23: F20A5 engine (KB other) with Manual
28: F20A5 engine (KB other) with Automatic
30: F20A2, F20A3, F20A5 and F20A6 engine (except KB other) with Manual
35: F20A2, F20A3, F20A5 engine (except KB other) with Automatic

Serial Number

Engine Number
(2.2 l engine for 5D model) F22A6-2960001

Engine Type
F22A6: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA for Manual and Automatic (KQ)
F22A7: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA for Manual (KF/KG/KX/KS/KE)
F22A8: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA for Automatic (KF/KG/KX/KS/KE)

Serial Number
F22A6: 2960001 ~
F22A7 and F22A8: 2000001 ~


Transmission Number H2C4-3000001

Transmission Type
H2C4: Manual with F20A5/F20A8/F22A2/F22A3 engine (4D), F22A7 engine (5D)
H2S8: Manual with F20A2/F20A3/F20A6 engine
H2U5: Manual with F22A6 engine (5D)/F22A9 engine (4D)
MPXA: Automatic with 4D
APX4: Automatic with 5D


Serial Number
Manual (4D): 3000001 ~
Manual (5D): 7000001 ~
Automatic (4D): 3000001 ~
Automatic (5D): 6000001 ~

Identification Number Locations


Vehicle Identification Number

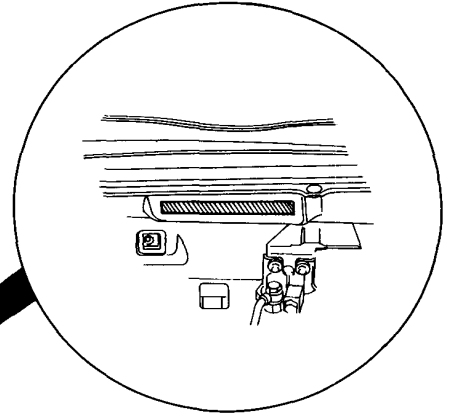


Transmission Number
(Automatic)

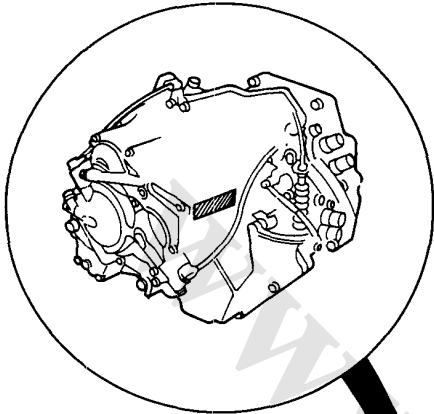


Transmission Number
(Manual)

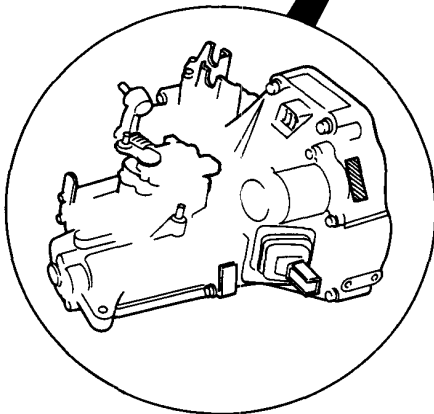


Engine Number

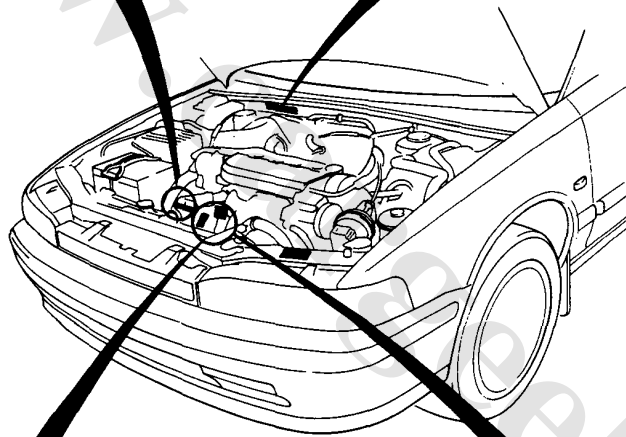


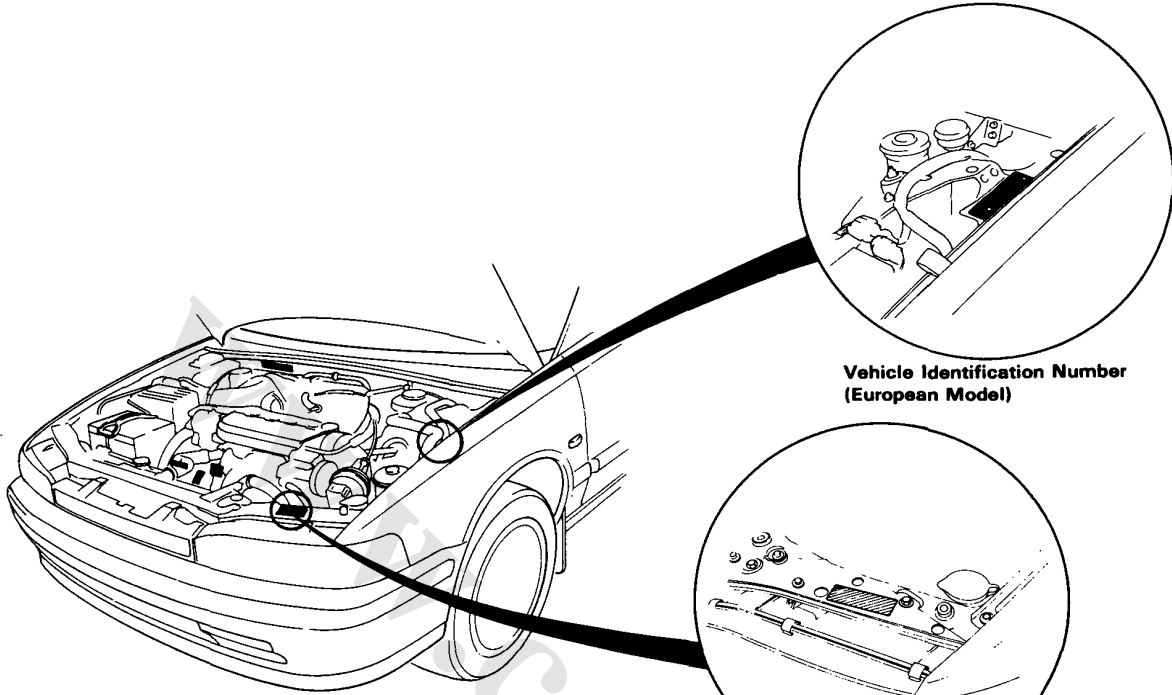


**Vehicle Identification Number
(European Model)**

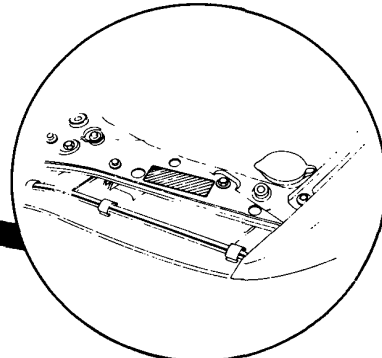

**Vehicle Identification Number
(KQ, KT Model)**

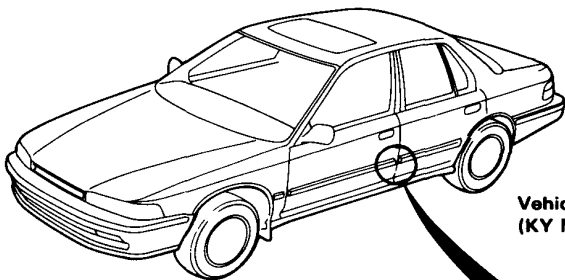




**Vehicle Identification Number
(KY Model only)**

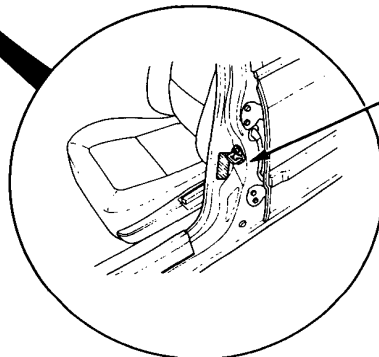

**CENTER
PILLAR**

Label Locations

Warning/Caution Labels (SRS type I)

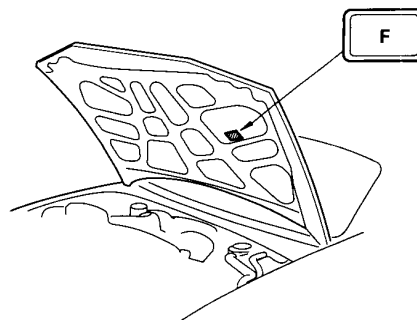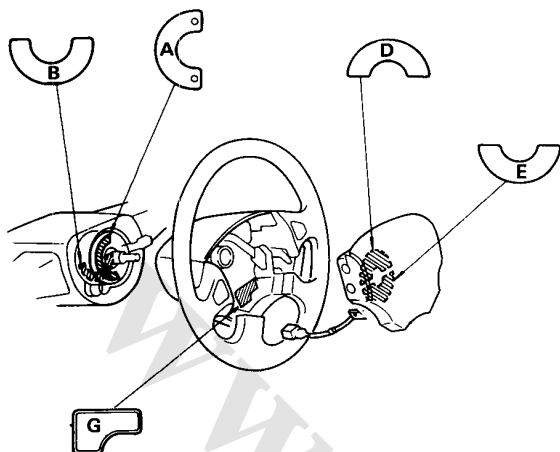

A: CABLE REEL CAUTION A


SRS
CAUTION
● REFER TO THE SHOP MANUAL.
ATTENTION
● SE REPORTER AU MANUAL D'ATELIER.
ACHTUNG
● WERKSTATTHANDBUCH LESEN.
WAARSCHUWING
● LEES HET WERKPLAATSHANOBOEK.

B: CABLE REEL CAUTION B

SRS
CAUTION
● REFER TO THE SHOP MANUAL.
ATTENTION
● SE REPORTER AU MANUEL D'ATELIER.
ACHTUNG
● WERKSTATTHANDBUCH LESEN.
WAARSCHUWING
● LES HET WERKPLAATSHANOBOEK.

C: STEERING WHEEL WARNING

WARNING	SRS
● REFER TO THE SHOP MANUAL.	
● SE REPORTER AU MANUEL D'ATELIER.	
● WERKSTATTHANDBUCH LESEN.	
● LEES HET WERKPLAATSHANDBOEK.	

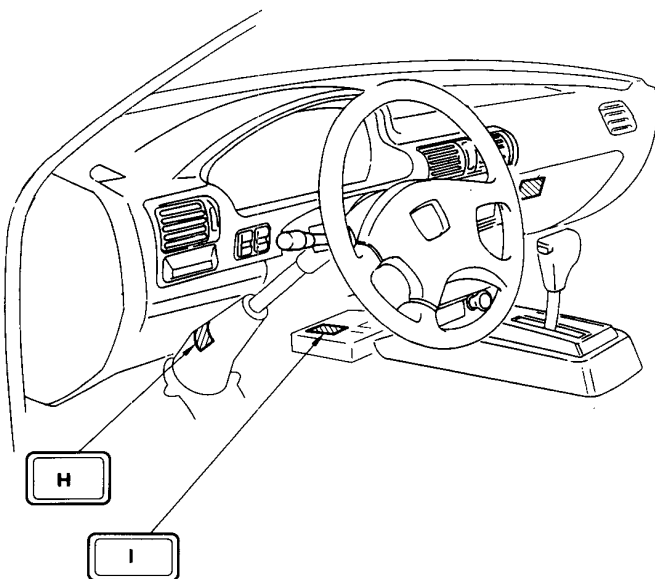



D: INFLATOR COVER LABEL

- DANGER
EXPLOSIVE/FLAMMABLE
POISON
REFER TO THE SHOP MANUAL.
- DANGER
EXPLOSIF ET INFLAMMABLE
POISON
SE REPORTER AU MANUEL D'ATELIER
- GEFÄHR
EXPLOSIV/ENTZÜNDBAR
GIFT
WERKSTATTHANDBUCH LESEN.
- GEVAAR
EXPLOSIEGEVAAR/BPANDBAAR
GIFTIG
LEES HET WERKPLAATSHANDBOEK.

E: MODULE WARNING

- WARNING** **SRS**
- REFER TO THE SHOP MANUAL.
 - SE REPORTER AU MANUEL D'ATELIER.
 - WERKSTATTHANDBUCH LESEN.
 - LEES HET WERKPLAATSHANDBOEK.

F: ENGINE HOOD WARNING

WARNING **SRS**
THIS VEHICLE IS EQUIPPED WITH A AIRBAG SYSTEM AS A SUPPLEMENTAL RESTRAINT SYSTEM. (SRS)
ALL S.R.S. ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW.
DO NOT USE ELECTRICAL TEST EQUIPMENT ON THESE CIRCUITS.
TAMPERING WITH OR DISCONNECTING THE S.R.S. WIRING COULD RESULT IN ACCIDENTAL FIRING OF THE INFLATOR OR MAKE THE SYSTEM INOPERATIVE WHICH MAY RESULT IN SERIOUS INJURY.

ATTENTION **SRS**
CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.).
TOUS LES FILS ET CONNECTEURS ELECTRIQUES DU SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.) SONT DE COULEUR JAUNE. N'UTILISEZ PAS UN EQUIPEMENT D'ESSAIS ELECTRIQUES SUR CES CIRCUITS. NE TOUCHEZ PAS ET NE DEBRANCHEZ PAS LES FILS DU SYSTEME S.R.S. CAR CECI POURRAIT DE TRADUIRE PAR LE DECLENCHEMENT ACCIDENTEL DU GONFLEUR OU RENDRE LE SYSTEME INOPERANT ET VOUS EXPOSER AINSI A DE GRAVES BLESSURES.

WARNING **SRS**
DIESES FAHRZEUG IST MIT EINEM FAHRER-AIRBAG (SRS) ALS ZUSÄTZLICHEM RÜCKHALTESYSTEM AUSGERÜSTET.
ALLE ELEKTRISCHEN KABEL, SOWIE DIE ZUGEHÖRIGEN STECKVERBINDER DES S.R.S.-SYSTEMS SIND IN GELBER FARBE AUSGEFÜHRT.
KEINE ELEKTRISCHEN PRÜFGERÄTE AN DIE S.R.S.-VERKABELUNG ANSCHLIEßEN.
VERÄNDERN ODER UNTERBRECHEN DER S.R.S.-VERKABELUNG KANN UNKONTROLLIERTES ZÜNDEN DES GASGENERATORS AUSLÖSEN, ODER DAS SYSTEM AUßER FUNKTION SETZEN WAS ZU ERNSTHAFTEN VERLETZUNGEN FÜHREN KANN.

WAARSCHUWING **SRS**
DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.).
ALLE ELEKTRISCHE LEIDINGEN EN AANSLUITINGEN VAN DE S.R.S. ZIJN GEEL GEKLEURD. GEBRUIK GEEN ELEKTRISCHE TESTAPPARATUUR VOOR DEZE CIRCUITS. KNOEIE MET OF LOSKOPPELEN VAN DE S.R.S. LEIDINGEN KAN LEIDEN TOT BRAND IN DE VULINRICHTING OF TOT UITSCHAKELEN VAN HET SYSTEEM DIT KAN TOT ERNSTIGE ONGELUKKEN LEIDEN.

(cont'd)

Label Localions

Warning/Caution Labels (SRS type I) (cont'd)

G: DRIVER INFORMATION

SRS ALWAYS WEAR YOUR SEAT BELT

- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS)
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
- IF YOUR SRS INDICATOR LIGHTS WHILE DRIVING SEE YOUR AUTHORIZED HONDA DEALER.

SRS ATTACHEZ TOUJOURS VOTRE CEINTURE

- CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR OUI CONSTITUE UN SYSTEME DE RETENUECOMPLEMENTAIRE (S.R.S.).
- CE COUSSIN D'AIR COMPLETE LA FONCTION DE LA CEINTURE DE SECURITE.
- SI LE TMOIN SRS S'ALLUME PENDANT LA CONDUITE.
ADRESSEZ VOUS A VOTRE CONCESSIONNAIRE HONDA OFFICIEL.

SRS SICHERHEITSGURTE BEI JEDER FAHRT ANLEGEN

- DIESES FAHRZEUG BESITZT EINEN FAHRER AIRBAG ALS ZUSATZLICHES RUCKHALE-SYSTEM (S.R.S.).
- ES IST EINE EPGANZUNG ZUM SICHERHEITSGURT.
- WENN DIE SRS KONTROLLEUCHE WAHREND DER FAHRT AUFLEUCHTET UMGEHEND FINEN HONDA HANDLER AUFsuchen.

SRS DRAAG ALTIJD UW VEILIGHEIDSGORDEL

- DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.).
- DIT IS ONTWORPEN ALS EXTRA BESCHERMING BIJ DE VEILIGHEIDSGORDEL.
- ALS HEL SRS-WAARSCHUWINGSLAMPJE GAAT BRANDEN ONDER HET RIJDEN, NEEM DAN KONTAKT OP MET EEN HONDA DEALER.

H: STEERING COLUMN CAUTION (KE)

CAUTION **SRS**

TO AVOID DAMAGING THE S.R.S. CABLE OR REEL. WHICH COULD MAKE THE SYSTEM INOPERATIVE. REMOVE THE STEERING WHEEL BEFORE REMOVING THE STEERING SHAFT CONNECTOR BOLT.

ATTENTION **SRS**

POUR NE PAS RISQUER D'ENDOMMAGER LE CABLE OU L'ENROULEUR DU S.R.S. ET DE RENDRE AINST LE SYSTEME INOPERANT RETIREZ LE VOLANT AVANT DE DEVINSSER LE BOULON D'ACCOUPEMENT D'ARBRE DE DIRECTION.

H: STEERING COLUMN CAUTION (KG)

ACHTUNNG **SRS**

UM EINE BESCHÄDIGUNG DER SRS-VERKABELUNG, DIE ZUM AUSTALL DES SYSTEMS FÜHREN KANN ZU VERHINDERN, IMMER DAS LENKRAD VOR DEM LENKWELLENVERBINDUNGSBOLZEN AUSBAUEN.

WAARSCHUWING **SRS**

OM TE VOORKOMEN DAT DE S.R.S. -KABEL OF -HASPEL BESCHADIGD WORDEN, HETGEEN ERTOE ZOU LEIDEN DAT HET SYSTEEM UITVALT, DIENT U HET STUUR TE VERWIJDEREN VOORDAT U DE STUURSCHACHTCONNECTORBOUT VERWIJDERT.

I: SRS UNIT CAUTION

CAUTION **SRS**

- NO SERVICEABLE PARTS INSIDE.
- DO NOT DISASSEMBLE OR TAMPER.
- DO NOT DROP.
- STORE IN A CLEAN, DRY AREA.

ATTENTION

- AUCUN POINT D'INTERVENTION A L'INTERIEUR.
- NO PAS DEMONTER OU TOUCHER.
- NO PAS FAIRE TOMBER.
- RANGER DANS UN ENDROIT PROPRE ET SEC.

WAARSCHUWING


- BINNENIN BEVINDEN ZICH GEEN OHDER DELEN DIE AAN ONDERHOUD ONDERHEVIG ZIJN.
- DEMONTEER NIETS EN KNC EI NIET AAN DE S.R.S.
- LAAT DE S.R.S. NIET VALLEN.

ACHTUNG

- WARTUNGSFREIES BAUTEIL: NICHT ÖFFNEN, ZERLEGEN, ODER VERÄNDERN!
- NICHT WERFEN!
- TROCKEN UND GESCHOTZT LAGERN!



Warning/Caution Labels (SRS type II)

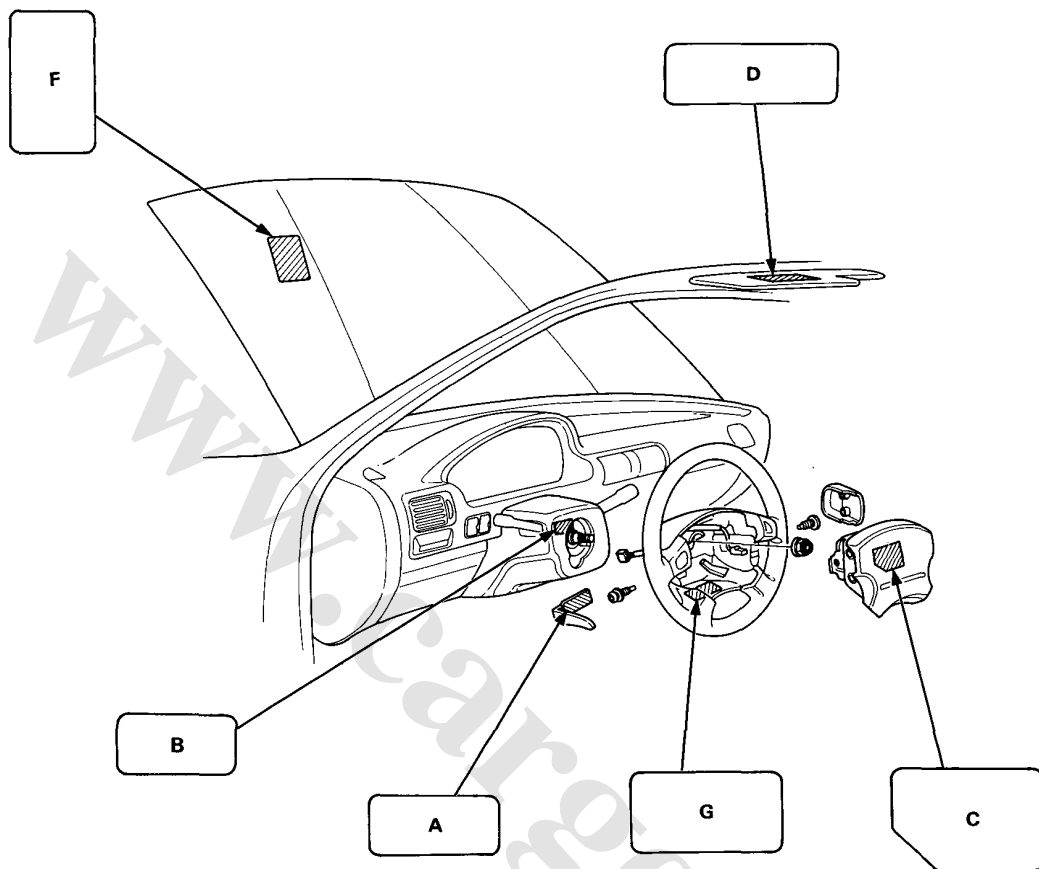

A: MAINTENANCE LID CAUTION

CAUTION **SRS**
 BEFORE MAINTENANCE, SWITCH OFF THE IGNITION.
ATTENTION
 AVANT TOUT ENTRETIEN, COUPER LE CONTACT.
ACHTUNG
 VOR WARTUNG ZÜNDUNG AUSSCHALTEN.
 LET OP
 ZET HET KONTAKTSLOT AF ALVORENS MET HET
 ONDERHOUD TE BEGINNEN.

B: SLIP RING CAUTION

CAUTION **SRS**
 ● CAUTION REFER TO SHOP MANUAL
 ● ACHTUNG WERKSTATT HANDBUCH LESEN
 ● ATTENTION SE REPORTER AU MANUEL D'ATELIER
 ● WAARSCHUWING LEES HET WERKPLAATS
 HANDBOEK

C: MONITOR CAUTION

CAUTION **SRS**
 REFER TO THE SHOP MANUAL
ATTENTION
 SE REPORTER AU MANUEL D'ATELIER
WAARSCHUWING
 LEES HET WERKPLAATS HANDBOEK
ACHTUNG
 ● WERKSTATT HANDBUCH LESEN
 ● DER GASGENERATOR IN DIESEM GEHÄUSE
 DARF NUR FÜR INSASSEN-RÜCKHALTESYSTEME
 MIT LUFTSACK IN KRAFTFAHRZEUGE
 MONTIERT WERDEN.
 DIE MONTAGE UND DEMONTAGE
 DES GASGENERATORS
 DARF NUR VON DAFÜR
 GESCHULTEM PERRSONAL
 VORGENCHMEN VERDEN.

(cont'd)

Label Locations

Warning/Caution Labels (SRS type II) (cont'd)

D: DRIVER INFORMATION

ALWAYS WEAR YOUR SEAT BELT SRS

- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (S.R.S.).
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
- IF YOUR SRS INDICATOR LIGHTS WHILE DRIVING, SEE YOUR AUTHORIZED HONDA DEALER.

ATTACHEZ TOUJOURS VOTRE CEINTURE SRS

- CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR POUR LE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.).
- CE COUSSIN D'AIR COMPLETE LA FONCTION DE LA CEINTURE DE SECURITE.
- SI LE TEMON SRS S'ALLUME PENDANT LA CONDUITE, ADRESSEZ-VOUS A VOTRE CONCESSIONNAIRE HONDA OFFICIEL.

SICHERHEITSGURTE


BEI JEDER FAHRT ANLEGEN SRS

- DIESES FAHRZEUG BESITZT EINEN FAHRER-AIRBAG ALS ZUSÄTZLICHES RÜCKHALTESYSTEM (S.R.S.).
- ES IST EINE ERGÄNZUNG ZUM SICHERHEITGURT.
- WENN DIE SRS-KONTROLLEUCHE WÄHREND DER FAHRT AUFLEUCHTET, UMGEHEND FINEN HONDA HÄNDLER AUFZUSUCHEN.

DRAAG ALTIJD UW VEILIGHEIDSGORDEL SRS

- DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALTS EXTRA BESCHERMING (S.R.S.).
- DIT IS ONTWERPEN ALS EXTRA BESCHERMING BIJ DE VEILIGHEIDSGORDEL.
- ALS HEL SRS-WAARSCHUWINGSLAMPJE GAAT BRANDEN ONDER HET RIJDEN. NEEM DAN KONTAKT OP MET EEN HONDA DEALER.

E: LABEL AIRBAG

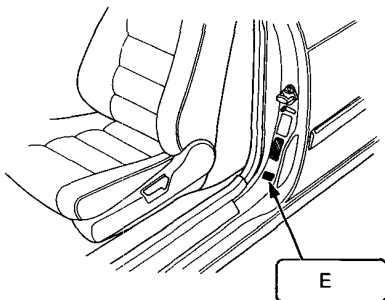

F: UNDER-HOOD WARNING

WARNING SRS

THIS VEHICLE IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS). ALL S.R.S. ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW. DO NOT USE ELECTRICAL TEST EQUIPMENT ON THESE CIRCUITS. TAMPERING WITH OR DISCONNECTING THE S.R.S. WIRING COULD RESULT IN ACCIDENTAL FIRING OF THE INFLATOR OR MAKE THE SYSTEM INOPERATIVE, WHICH MAY RESULT IN SERIOUS INJURY.

ATTENTION SRS

CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S) TOUS LES FILS ET CONNECTEURS ELECTRIQUES DU SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.) SONT DE COULEUR JAUNE. N'UTILISEZ PAS UN EQUIPEMENT D'ESSAIS ELECTRIQUES SUR CES CIRCUITS. NE TOUCHEZ PAS ET NE DEBRANCHEZ PAS LES FILS DU SYSTEME S.R.S. CAR CECI POURRAIT DE TRADUIRE PAR LE DECLENCHEMENT ACCIDENTEL DU GONFLEUR OU RENDRE LE SYSTEME INOPERANT ET VOUS EXPOSER AINSI A DE GRAVES BLESSURES.

WARNUNG SRS

DIESES FAHRZEUG IST MIT EINEM FAHRER-AIRBAG (SRS) ALS ZUSÄTZLICHEM RÜCKHALTESYSTEM AUSGERÜSTET.

ALLE ELEKTRISCHEN KABEL, SOWIE DIE ZUGEHÖRIGEN STECKVERBINDER DES S.R.S. -SYSTEMS SIND IN GELBER FARBE AUSGEFÜHRT.

KEINE ELEKTRISCHEN PRÜGERÄTE AN DIE S.R.S. -VERKABELUNG ANSCHLIEßEN. VERÄNDERN ODER UNTERBRECHEN DER S.R.S. -VERKABELUNG KANN UNKONTROLLIERTES ZÜNDEN DES GASGENERATORS AUSLÖSEN. ODER DAS SYSTEM AUßER FUNKTION SETZEN. WAS ZU ERNSTHAFTEN VERLETZUNGEN FÜHREN KANN.

WAARSCHUWING SRS

DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.).

ALLE ELEKTRISCHE LEIDINGEN EN AANSLUITINGEN VAN DE S.R.S. ZIJN GEEL GEKLEURD. GEBUIK GEEN ELEKTRISCHE TESTAPPARATUUR VOOR DEZE CIRCUITS. KNOEIEI MET OF LOSKOPPELEN VAN DE S.R.S. LEIDINGEN KAN LEIDEN TOT BRAND IN DE VULINRICHTING OF TOT UITSCHAKELEN VAN HET SYSTEEM DIT KAN TOT ERNSTIGE ONGELUKKEN LEIDEN.

G: COVER CAUTION

CAUTION SRS

ACHTUNG

- REFER TO THE SHOP MANUAL
- SE REPORTER AU MANUEL D'ATELIER.
- WERKSTATT HANDBUCH LESEN.
- LEES HET WERKPLAATSHANDBOEK.



Warning/Caution Labels (except SRS)


Carbureted Engine:

BONNET

INSULATOR
(Standard for
some types)

ABS CAUTION
(Standard for
some types)

COOLANT
CAUTION and
PRECAUTION

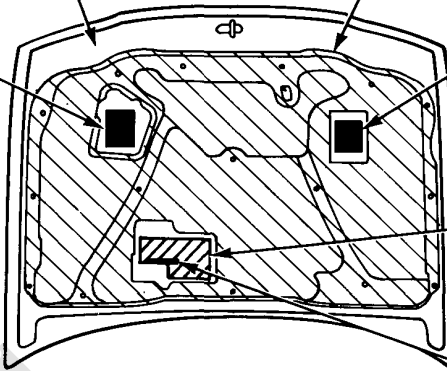


SERVICE
INFORMATION

AIR CLEANER,
OIL and FILTER SERVICE

EMISSION LABEL


KU Model only

RADIATOR CAP
CAUTION

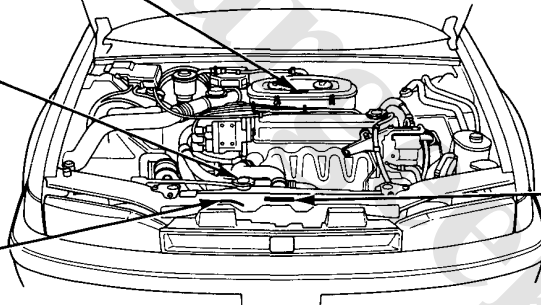


COOLING FAN
CAUTION

COOLING FAN
CAUTION

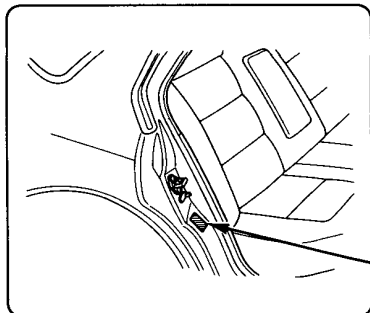

RHD

TIRE INFORMATION

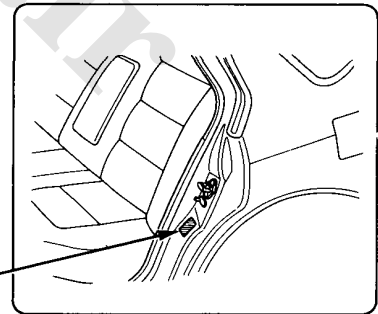

LHD

(cont'd)

Warning/Caution Labels (except SRS) (cont'd)

Fuel-Injected Engine:

BONNET

INSULATOR
(Standard for
some types)

ABS CAUTION
(Standard for
some types)

COOLANT
CAUTION and
PRECAUTION

AIR CLEANER,
OIL and FILTER SERVICE

SERVICE
INFORMATION

SPARK PLUG CAUTION

EMISSION LABEL

KU Model only

RADIATOR CAP
CAUTION

COOLING FAN
CAUTION

TIRE INFORMATION

RHD

LHD



Lift and Support Points



Hoist

1. Place the lift blocks as shown.
2. Raise the hoist a few inches and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.


⚠ WARNING When heavy rear components such as suspension, fuel tank, spare tire and tailgate are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight transfer.

Lift and support points for the 4-door model are shown in the following illustrations. These points are available for the 5-door model.

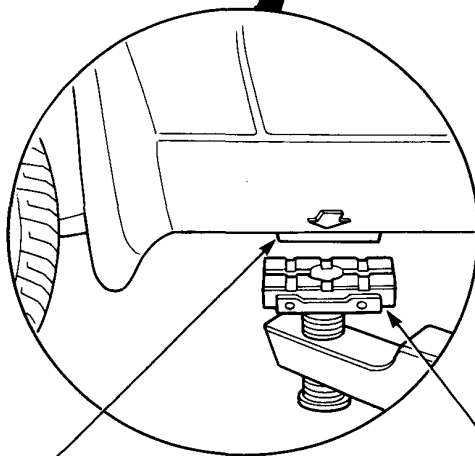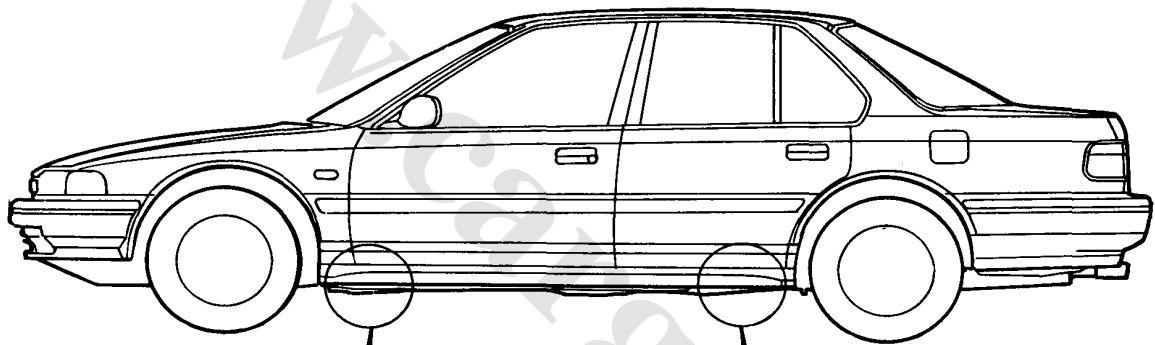

FRONT SUPPORT POINT

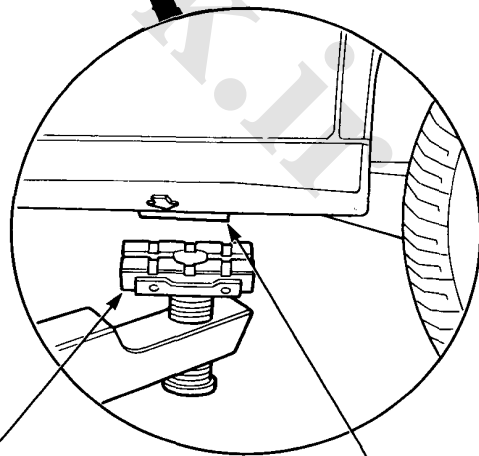

REAR SUPPORT POINT

LIFT BLOCKS

Lift and Support Points (cont'd)


Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-7 so the car will be approximately level, then lower the car onto the stands.


▲ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front



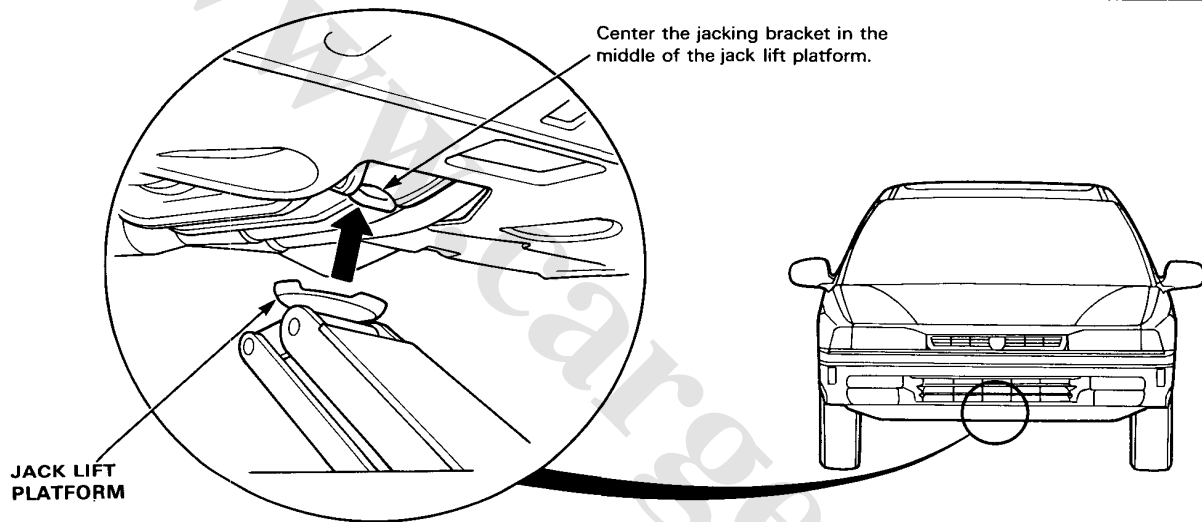


Rear

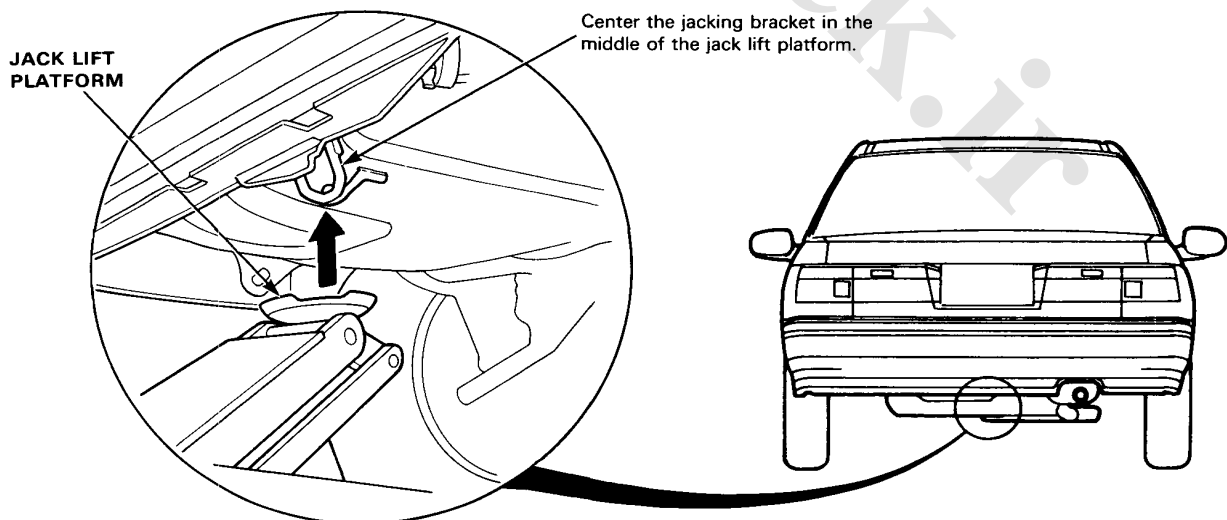



Safety Stands

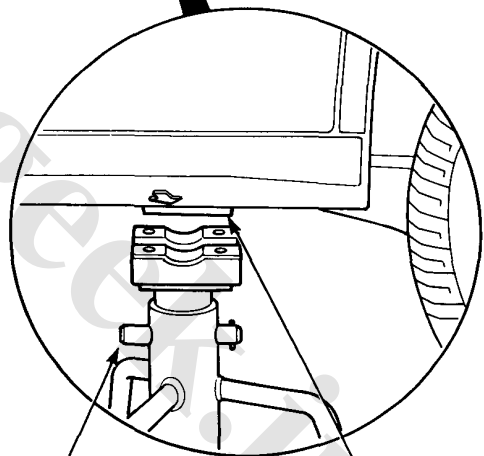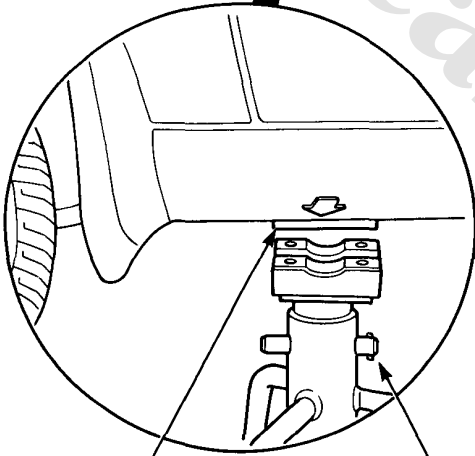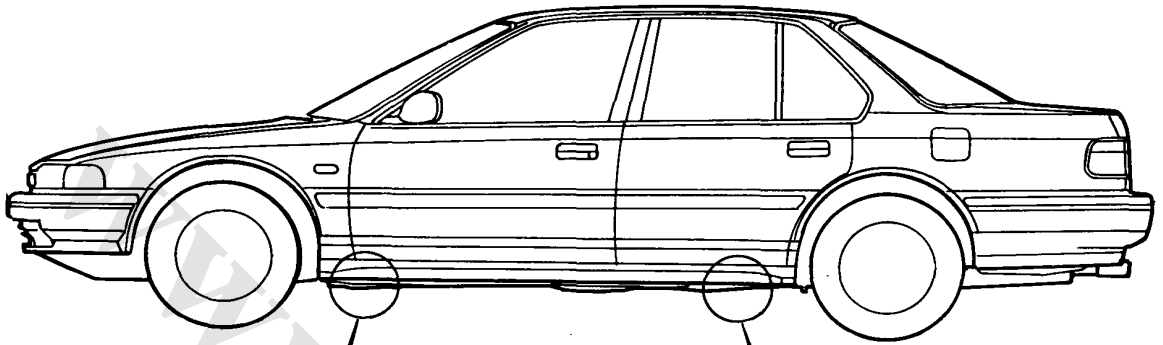

FRONT SUPPORT POINT

SAFETY STANDS

REAR SUPPORT POINT

Towing

If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and his chains and lift straps, to avoid damaging the bumper and the body under it.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A chain may be attached to the hook shown in the picture. Do not attach a tow bar to either bumper.

⚠ WARNING

DO NOT push or tow a car to start it. The forward surge when the engine starts could cause a collision. On some types, also, under some conditions, the catalytic converter could be damaged. A car equipped with an automatic transmission cannot be started by pushing or towing.

If the car is to be towed with the front wheels on the ground, observe the following precautions:

Manual Transmission

Shift the transmission to Neutral and turn the ignition key to the "I" position.


Automatic Transmission

First, check the automatic transmission fluid level. Start the engine and shift to D₄, then to N. Return the ignition key to the "I" position.

CAUTION:

- Do not tow with front wheels on the ground when the automatic transmission fluid level is low or the transmission cannot be shifted with the engine running.
- Do not exceed 55 km/h (35 mph) or tow for distances of more than 80 km (50 miles).
- When towing a car with 4WS even with the front wheels off the ground, turn the wheels straight ahead and tie the steering wheel in place.

TIE DOWN BRACKETS

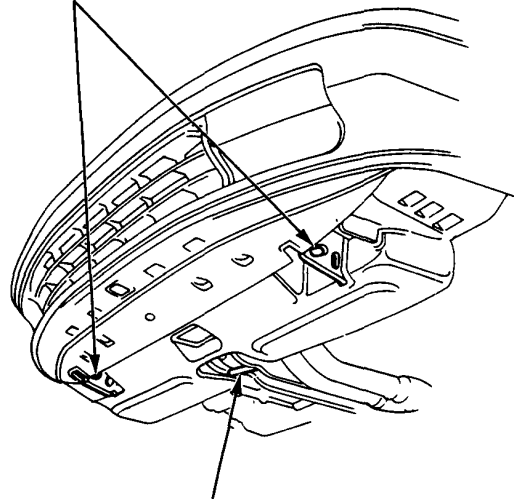


TOWING HOOK




Preparation of Work

Special Caution Items For This Car


- 4WS system servicing (with 4WS)
 - Do not disassemble the rear steering gear box.
 - When towing the car even with the front wheels off the ground, center the steering and tie the steering wheel in place.
 - When testing or adjusting the wheel alignment, attach the rear steering center lock pin to the rear steering gear box. Make sure that the rear steering gear box is located at the neutral position.

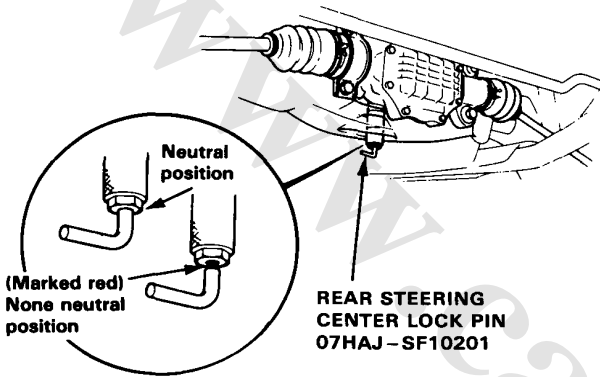

- Anti-lock brake system piping system servicing
 - Disassemble the anti-lock brake system piping system after relieve the high-pressured brake fluid.
 - Otherwise, the high-pressured brake fluid will burst out and it is very dangerous.
 - See section 13 of base manual (62SM400) how to relieve the high-pressured brake fluid.

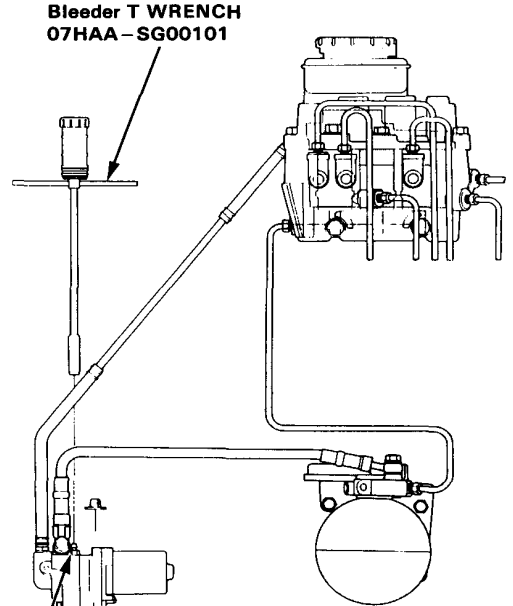

- Fuel Line Servicing
 - Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

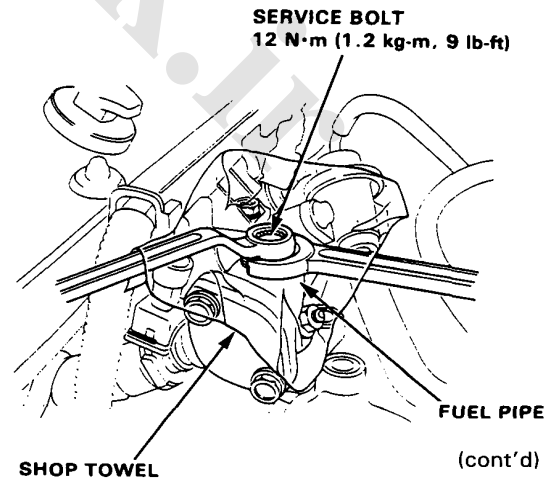


(cont'd)


Preparation of Work

Special Caution Items For This Car (cont'd)

- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

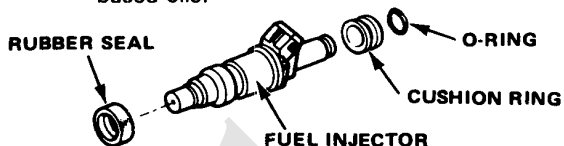

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

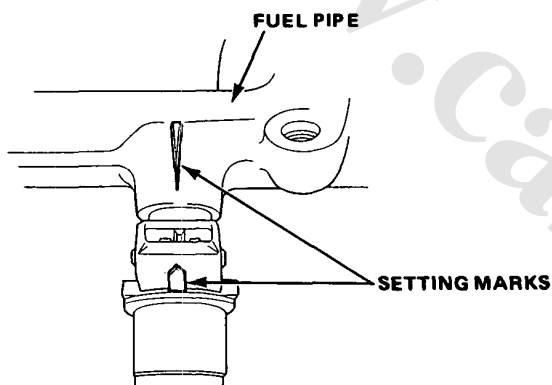

- Inspection for fuel leakage
 - After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

- Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, Carburetor, A/T, Cruise control and anti-lock brake system control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the control units.

The control unit locations:

- Fuel-Injection, Carburetor, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- Anti-lock brake system: Right side panel of trunk room.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring. When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).

- Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine liquid gasket part No. 0Y740-99986.

- Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
- Apply liquid gasket evenly, being careful to cover all the mating surface.
- To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
- Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing the old residue.
- Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


General Caution

CAUTION: Observe all safety precautions and notes while working.


- Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.




- Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate at frequently as possible when work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

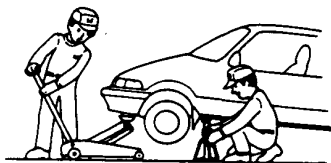


- Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.

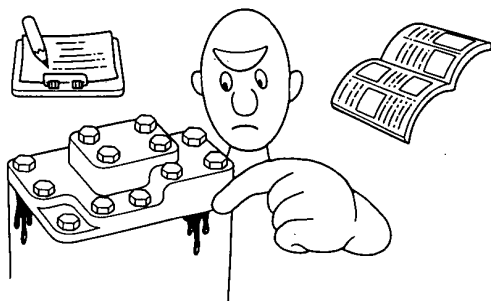

- Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.

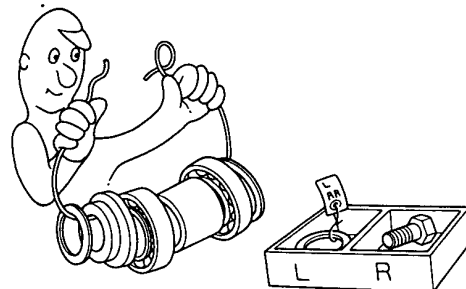


- Use the special tool when use of such a tool is specified.

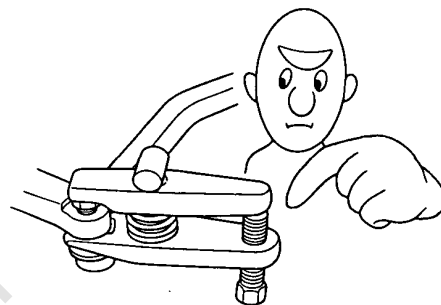

- Parts must be assembled with the proper torque according to the maintenance standards established.

- When tightening a series of bolts or nuts, begin with the center or large diameter bolts and tighten them in crisscross pattern in two or more steps.

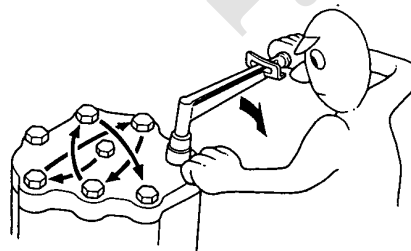


(cont'd)


Preparation of Work

General Caution (cont'd)

- Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

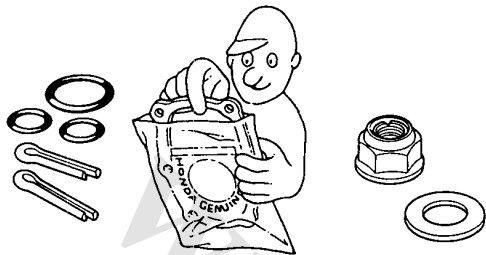

- Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

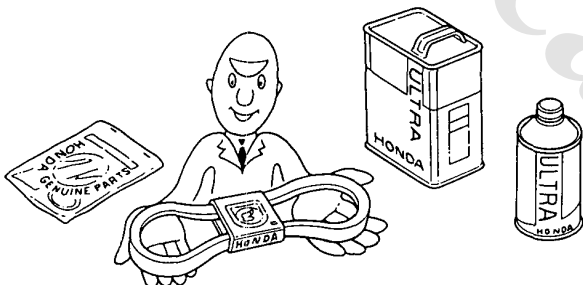


- Coat or fill parts with specified grease as specified (page 4-2). Clean all removed parts with solvent upon disassembly.



- Brake fluid and hydraulic components


- When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
- Do not mix different brands of fluid as they may not be compatible.
- Do not reuse drained brake fluid.
- Because brake fluid can cause damage to painted and resin surfaces, care should be taken not to spill it on such materials. If spilled accidentally, quickly rinse it with water or warm water from painted or resin surfaces.
- After disconnecting brake hoses or pipes, be sure to plug the openings to prevent loss of brake fluid.
- Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.

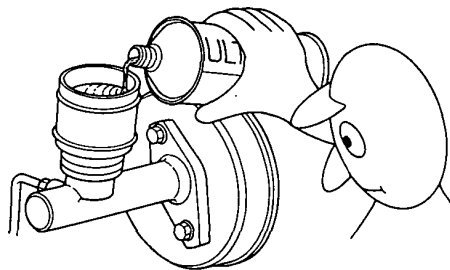

- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.

- Avoid oil or grease getting on rubber parts and tubes, unless specified.


- Upon assembling, check every part for proper installation and operation.

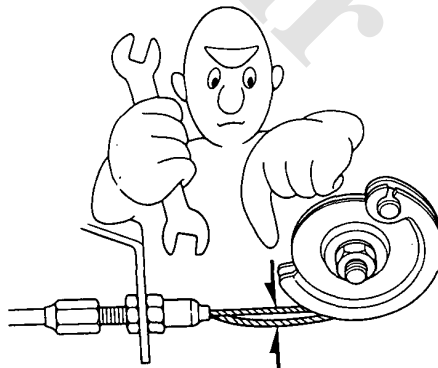




Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

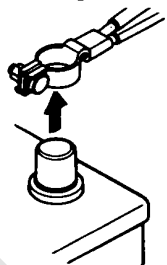


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

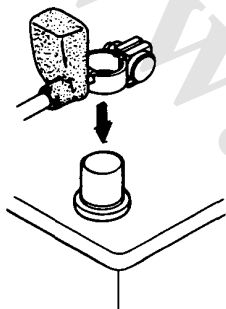

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

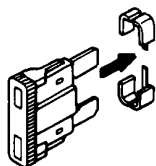


- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

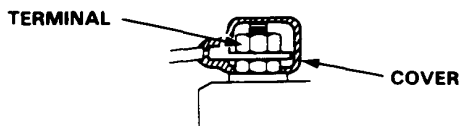


- As to locking connectors, be sure to disengage the lock before disconnecting.
- Conventional connectors may be of two types, those in which the lock is pressed to remove, and those in which the lock is pulled up to remove. Be sure to ascertain the type of locking device before beginning work. The following is a depiction of the means of disconnecting various typical connectors.

Press to disengage:

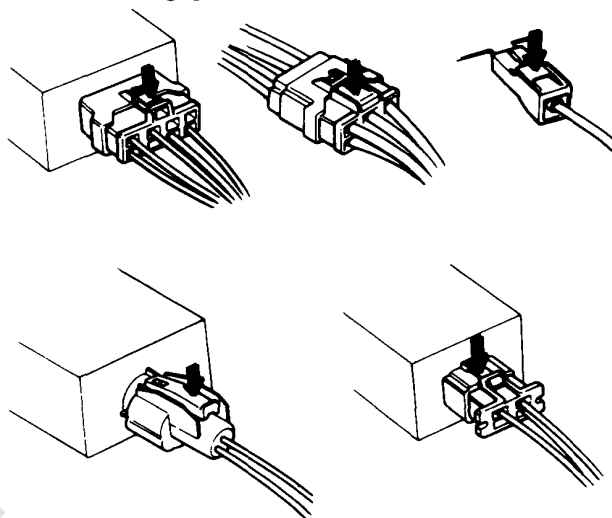

Pull up to disengage:

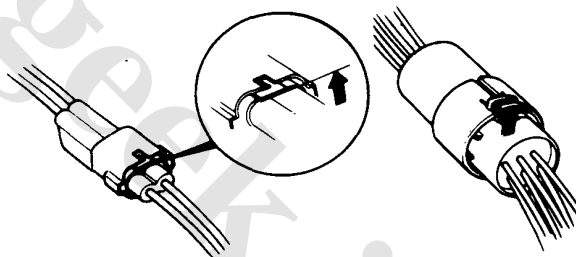


(cont'd)

Preparation of Work


Electrical (cont'd)

When new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.

- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector.
Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

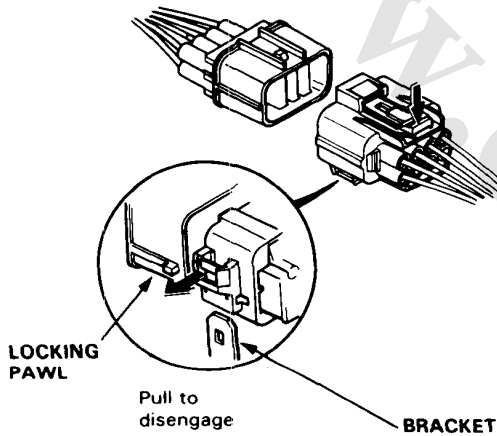


- Push the locking tab to disconnect.

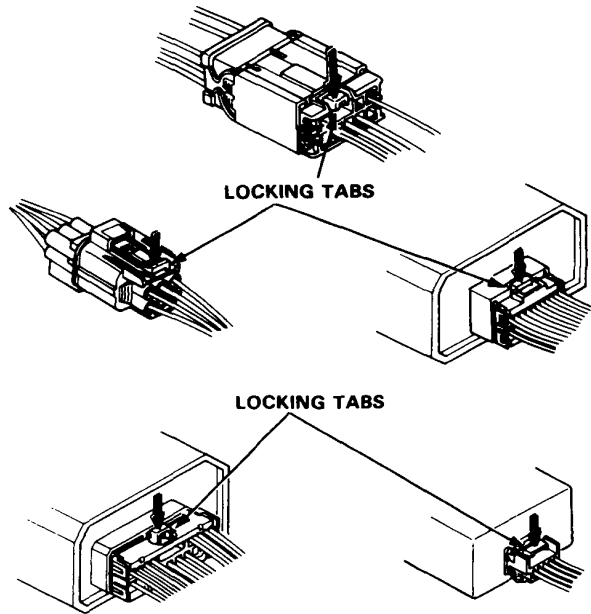




- Pull the locking tab to remove the connector from the bracket.

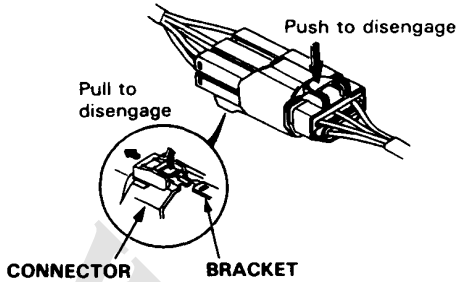


- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

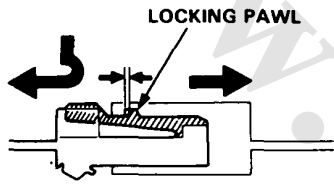


- When disconnecting a connector, pull it off from the mating connector by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.


Good

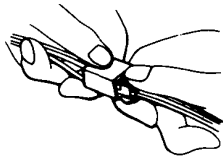

No Good

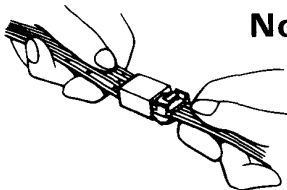


No Good

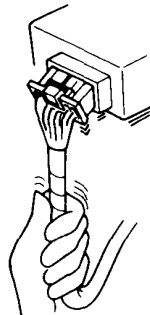


- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

No Good

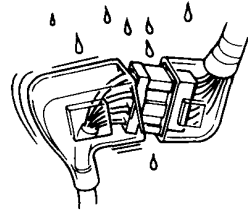


- Before connecting connectors, check to see that the terminals are in place and not bent or distorted.

No Good

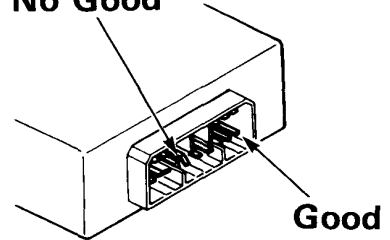


- Check for loose retainer and rubber seals. The illustration shows examples of terminal and seal abnormality.

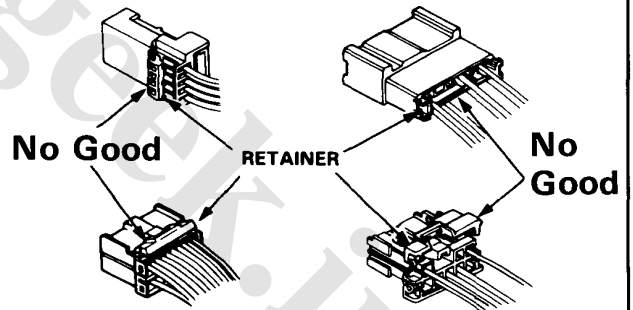

- Example of waterproof connector:

No Good

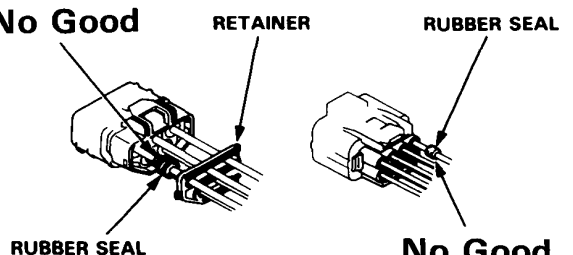


No Good

(cont'd)


Preparation of Work

Electrical (cont'd)


Good

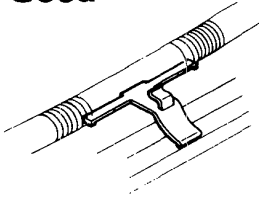


No Good

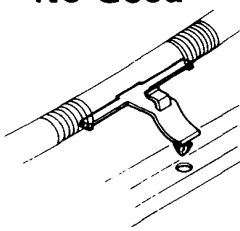


Good

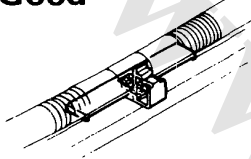


No Good

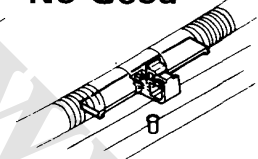


- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

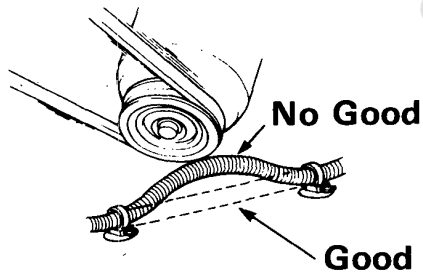

- Always keep a safe distance between wire harnesses and any heated parts.

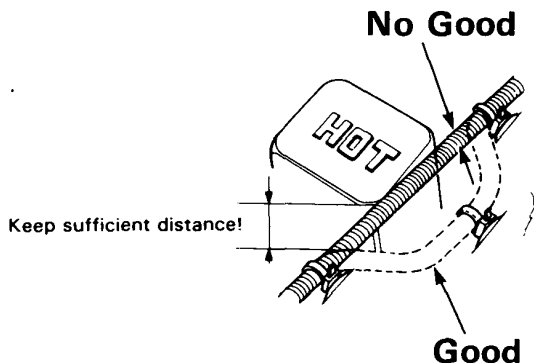


- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

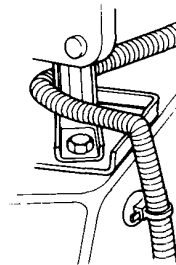


No Good


No Good

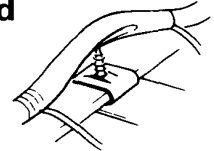

- Route harnesses so they are not pulled taut or slackened excessively.

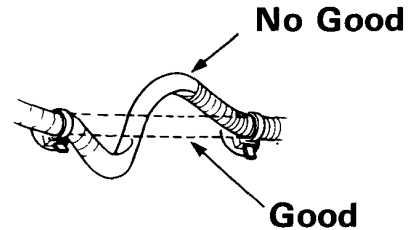


- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

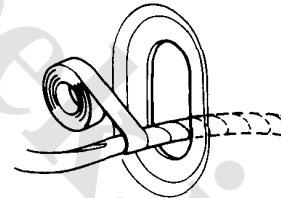

- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.


Good

No Good





- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

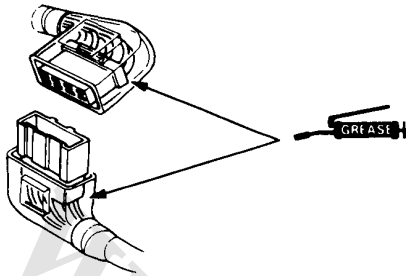


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.




- The locking tab with an angle end should be pushed when connecting.




- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Do not use wire harnesses with a loose wire or connector.

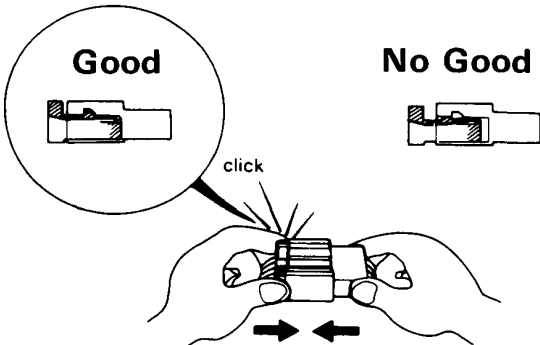


- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

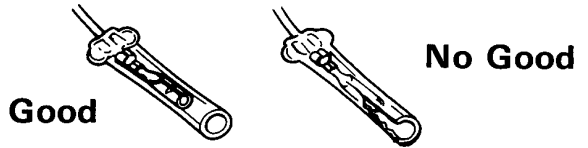

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open end of the cover faces down.

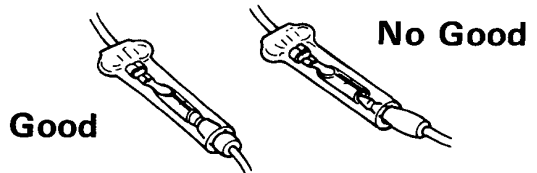

- Secure wires and wire harness to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or harnesses.
- Remove with care not to damage the lock.

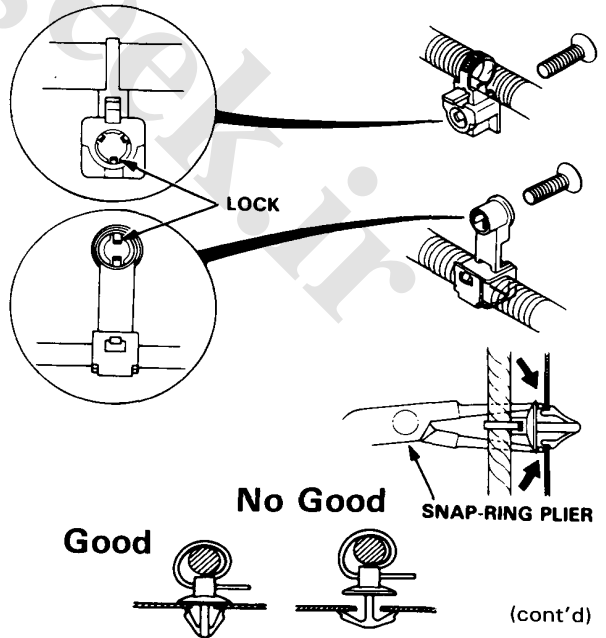


(cont'd)

Preparation of Work


Electrical (cont'd)

- Seat grommets in their grooves properly.

Good

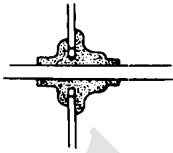

No Good

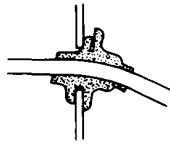

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

No Good




Good




- After installing parts, make sure that wire harnesses are not pinched.

No Good

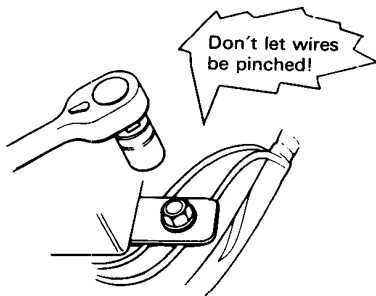


- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfering with adjacent or surrounding parts in all steering positions.

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

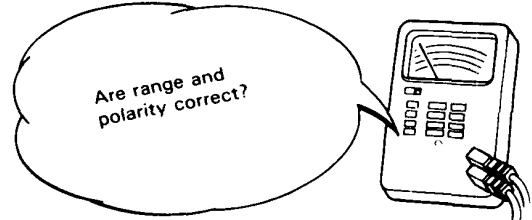


- Always insert the probe of the tester from the wire harness side (except waterproof connector).

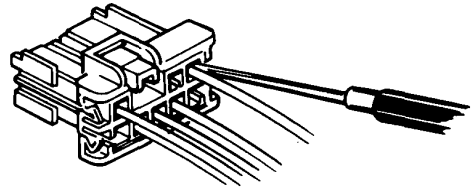

- Make sure to use the probe with a tapered tip.

Good




No Good



- Do not drop parts.

No Good

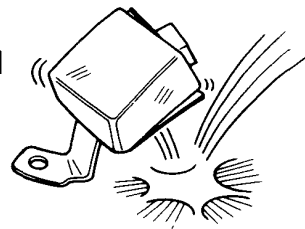



Symbol Marks

Abbreviation

The following symbols stand for:



:Apply engine oil.



:Apply brake fluid.



:Apply grease.



:Apply Automatic Transmission Fluid.



: Apply Power Steering Fluid.



:Apply or check vacuum.

①, ②, ③, :

①, ②, ③, :Sequence for removal or installation.

2WS
4WS
ABS
A/C
A/T
ATF
B or BAT
CATA
EACV
ECU
EGR
EX
GND
IG
IN
INT
L
LHD
M/T
PCV
PGM-FI
P/S
R.
RHD
SW
SOL. V
TDC

Two Wheel Steering
Four Wheel Steering
Anti-lock Brake System
Air Conditioner
Automatic Transmission
Automatic Transmission Fluid
Battery
Catalytic Converter
Electronic Air Control Valve
PGM-FI Electronic Control Unit
Exhaust Gas Recirculation
Exhaust
Ground
Ignition
Intake
Intermittent
Left
Left Hand Drive
Manual Transmission
Positive Crankcase Ventilation
Programmed Fuel-Injection
Power Steering
Right
Right Hand Drive
Switch
Solenoid Valve
Top Dead Center

P
R
N
D₄
D₃
2
1
S

Parking
Reverse
Neutral
Drive Position (1st~4th)
Drive Position (1st~3rd)
Fixed 2nd speed
Fixed 1st speed
S mode (D4 or D3)

Standards and Services Limits
Design Specifications
Body Specifications

www.cargeek.ir

Standards and Service Limits

5. Engine/Cylinder Head, Valve Train

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Compression	250 min ⁻¹ (rpm) and wide-open throttle	Nominal Minimum Maximum variation	1226 kPa (12.5 kg/cm ² , 178 psi) 931 kPa (9.5 kg/cm ² , 135 psi) 196 kPa (2 kg/cm ² , 28 psi)	
Cylinder head	Warpage Height	99.95–100.05 (3.935–3.938)	0.05 (0.002)	
Camshaft	End play	0.05–0.15 (0.002–0.006)	0.50 (0.020)	
	Oil clearance	0.050–0.089 (0.002–0.0035)	0.150 (0.006)	
	Runout	0.015 (0.0006) max.	0.030 (0.001)	
	Cam lobe height	IN	1. F20A2:	—
			2. F20A3:	—
			3. F20A5:	—
			4. F20A6:	—
			5. F20A8:	—
			6. F22A2:	—
			7. F22A3:	—
		EX	8. F22A6:	—
9. F22A7:			—	
10. F22A8:			—	
11. F22A9:			—	
Valve	Valve clearance	IN	0.23–0.28 (0.0091–0.0110)	
		EX	0.27–0.32 (0.0106–0.1259)	
	Valve stem O.D.	IN	5.480–5.490 (0.2157–0.2161)	5.450 (0.2146)
		EX	5.450–5.460 (0.2145–0.2149)	5.420 (0.2133)
	Stem-to-guide clearance	IN	0.020–0.045 (0.0007–0.0017)	0.075 (0.0029)
		EX	0.055–0.080 (0.0021–0.0031)	0.120 (0.0047)
		IN and EX	1.25–1.55 (0.049–0.0610)	2.00 (0.0787)
	Valve seat	Width	48.245–48.715 (1.8994–1.9179)	—
		Valve stem installed height	50.315–50.785 (1.9809–1.9994)	—
	Valve spring	Free length	IN (NH)	56.28 (2.2157)* ¹
				54.82 (2.1582)* ¹
			53.15 (2.0925)* ²	
(CH)			56.26 (2.2150)* ¹	
			54.81 (2.1578)* ¹	
		53.16 (2.0929)* ²		
	(AS)	54.82 (2.1582)* ¹	—	

- | | |
|----------------------------------|---|
| 1. F20A2: 2.0 l CARB with CATA | 7. F22A3: 2.2 l PGM-FI with CATA |
| 2. F20A3: 2.0 l CARB | 8. F22A6: 2.2 l PGM-FI with CATA for 5D KQ |
| 3. F20A5: 2.0 l PGM-FI | 9. F22A7: 2.2 l PGM-FI with CATA for 5D EC M/T |
| 4. F20A6: 2.0 l CARB with CATA | 10. F22A8: 2.2 l PGM-FI with CATA for 5D EC A/T |
| 5. F20A8: 2.0 l PGM-FI with CATA | 11. F22A9: 2.2 l PGM-FI with CATA for KQ |
| 6. F22A2: 2.2 l PGM-FI | |

NH: NIHON HATSUJO
 CH: CHUO HATSUJO
 AS: ASSOCIATED SPRING

*1: 2.0 l CARB
 *2: 2.0 l PGM-FI and 2.2 l

Unit of length: mm (in.)

5. Engine/Cylinder Head, Valve Train

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Valve spring	Free length	EX (AS): (NH): (CH):	56.28 (2.2157)* ¹ 55.78 (2.1960)* ² 55.80 (2.1968)* ²	— — —
Valve guide	I.D. Valve guide installed height	IN and EX IN EX	5.515—5.530 (0.2171—0.2177) 23.75—24.25 (0.9148—0.9547) 15.05—15.55 (0.5925—0.6122)	5.53 (0.2177) — —
Rocker arm	Arm-to-shaft clearance	IN EX	0.017—0.050 (0.0007—0.0020) 0.018—0.054 (0.0007—0.0021)	0.080 (0.0031) 0.080 (0.0031)

*1: 2.0 ℓ CARB

AS: ASSOCIATED SPRING

*2: 2.0 ℓ PGM-FI and 2.2 ℓ

NH: NIHON HATSUJO

CH: CHUO HATSUJO

5. Engine/Engine Block

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Cylinder block	Warpage of deck surface Bore diameter Bore taper Reboring limit		0.07 (0.003) max. 85.00—85.02 (3.3464—3.3472) — —	0.10 (0.004) 85.07 (3.3492) 0.05 (0.002) 0.5 (0.02)
Piston	Skirt O.D. (At 21 mm (0.83 in)) Clearance in cylinder	A B	84.98—84.99 (3.3456—3.4605) 84.97—84.98 (3.3452—3.3456) 0.02—0.04 (0.0008—0.0016)	84.97 (3.3452) 84.96 (3.3448) 0.05 (0.0020)
Piston ring	Piston-to-ring clearance Ring end gap	Top Second Top Second Oil	0.035—0.060 (0.0014—0.0024) 0.030—0.055 (0.0011—0.0022) 0.20—0.35 (0.0079—0.0138) 0.40—0.55 (0.0157—0.0217) 0.20—0.70 (0.0079—0.0276)	0.130 (0.0051) 0.130 (0.0051) 0.60 (0.0236) 0.70 (0.0276) 0.80 (0.0315)
Connecting rod	Pin-to rod interference Small end bore diameter Large end bore diameter End play installed on crankshaft	2.0 ℓ 2.2 ℓ	0.013—0.032 (0.0005—0.0013) 21.968—21.981 (0.8649—0.8654) Nominal 48 (1.890) Nominal 51 (2.008) 0.15—0.30 (0.006—0.012)	— — — — 0.40 (0.016)
Crankshaft	Main journal diameter Rod journal diameter Taper/out-of-round, main journal Taper/out-of-round, rod journal End play Runout	No. 1, 2 Journals No. 3 Journal No. 4 Journal No. 5 Journal 2.0 ℓ 2.2 ℓ 2.0 ℓ 2.2 ℓ	49.976—50.000 (1.9676—1.9685) 49.972—49.996 (1.9674—1.9683) 49.984—50.008 (1.9679—1.9688) 49.984—50.008 (1.9679—1.9688) 49.988—50.012 (1.9680—1.9690) 0.005 (0.0002) max. 44.976—45.000 (1.7710—1.7717) 47.976—48.000 (1.8888—1.8898) 0.005 (0.0002) max. 0.10—0.35 (0.004—0.014) 0.015 max. (0.0006)	— — — — — 0.010 (0.0004) — — 0.010 (0.0004) 0.45 (0.018) 0.020 (0.0008)
Bearings	Main bearing-to journal oil clearance Rod bearing-to journal oil clearance	No. 1, 2 Journals No. 3 Journal No. 4 Journal No. 5 Journal 2.2 ℓ 2.0 ℓ	0.021—0.045 (0.0009—0.0018) 0.025—0.049 (0.0001—0.0019) 0.013—0.037 (0.0005—0.0015) 0.009—0.033 (0.0004—0.0013) 0.021—0.049 (0.0008—0.0019) 0.015—0.043 (0.0006—0.0017)	0.05 (0.002) 0.054 (0.0021) 0.05 (0.002) 0.05 (0.002) 0.05 (0.002) 0.05 (0.002)

Standards and Service Limits

5. Engine/Engine Block

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Balancer Shaft	Journal diameter	No.1 journal (Front)	42.722-42.734 (1.6820-1.6824)	---
		(Rear)	20.938-20.950 (0.8243-0.8248)	---
		No.2 journal	38.712-38.724 (1.5241-1.5246)	---
	Journal taper	No.3 journal	34.722-34.734 (1.3670-1.3674)	---
			0.005 (0.0002)	---
	End play	(Front)	0.100-0.350 (0.0040-0.0138)	---
		(Rear)	0.060-0.180 (0.0024-0.0070)	---
	Runout Oil Clearance		0.020 (0.0008)	---
		No.1 journal (Rear)	0.050-0.075 (0.0020-0.0030)	---
		No.1, 3 journal	0.066-0.118 (0.0026-0.0046)	---
No.2, journal		0.076-0.128 (0.0030-0.0050)	---	
Balancer Shaft Bearing	I.D	No.1 journal (Front)	42.800-42.820 (1.6850-1.6858)	---
		(Rear)	21.000-21.013 (0.8268-0.8273)	---
	No.2 journal	38.800-38.820 (1.5276-1.5283)	---	
	No.3 journal	34.800-34.820 (1.3701-1.3710)	---	

5. Engine/Engine Lubrication

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity ℓ (US. qt., Imp. qt.)		4.9 (5.2, 4.3) After engine disassembly 3.8 (4.0, 3.3) After oil change, including oil filter 3.5 (3.7, 3.1) After oil change, without oil filter	
Oil pump	Displacement		43.9 ℓ (11.6 US. gal., 9.7 Imp. gal.)/6,000 min ⁻¹ (rpm)	
	Inner-to-outer rotor radial clearance		0.02-0.16 (0.0008-0.0063)	0.2 (0.008)
	Pump body-to-rotor radial clearance		0.10-0.19 (0.0040-0.0075)	0.21 (0.0083)
	Pump body-to-rotor side clearance		0.02-0.07 (0.001-0.003)	0.12 (0.005)
Relief valve	Pressure setting 80°C (176°F)	Idle	69 kPa (0.7 kg/cm ² , 10 psi) min.	
		3,000 min ⁻¹ (rpm)	3431 kPa (3.5 kg/cm ² , 50 psi)	

Unit of length: mm (in.)

5. Engine/Cooling

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Thermostat	Starts to open Full open Valve lift at full open	78°C ± 2 (172°F ± 3) 90°C (194°F) 8 (0.31) max.	86–90°C (187–194°F)
Water pump	Displacement	160 ℓ (42.2 US gal, 35.2 Imp gal)/6,000 min ⁻¹ (rpm)	
Radiator	Capacity (incl. heater) ℓ (US qt, Imp qt) (Includes reservoir tank 0.6 (0.63, 0.53)) after overhaul 1. F20A2: 2. F20A3: 3. F20A5: 4. F20A6: 5. F20A8: 6. F22A2: 7. F22A3: 8. F22A6: 9. F22A7: 10. F22A8: 11. F22A9: at change 1. F20A2: 2. F20A3: 3. F20A5: 4. F20A6: 5. F20A8: 6. F22A2: 7. F22A3: 8. F22A6: 9. F22A7: 10. F22A8: 11. F22A9: Pressure cap opening pressure	MT: 7.2 (7.61, 6.34) AT: 7.1 (7.50, 6.23) 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 6.6 (6.97, 5.81) 7.1 (7.50, 6.23) 7.2 (7.61, 6.34)* 7.1 (7.50, 6.23)* 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 6.6 (6.97, 5.81) 7.1 (7.50, 6.23) 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 6.6 (6.97, 5.81) 7.1 (7.50, 6.23) 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 7.2 (7.61, 6.34) 7.1 (7.50, 6.23) 6.6 (6.97, 5.81) 7.1 (7.50, 6.23) MT: 3.6 (3.80, 3.17) AT: 3.5 (3.70, 3.08) 3.6 (3.80, 3.17) 3.5 (3.70, 3.08) 3.0 (3.17, 2.64) 3.5 (3.70, 3.08) 3.6 (3.80, 3.17)* 3.5 (3.70, 3.08)* 3.6 (3.80, 3.17) 3.5 (3.70, 3.08) 3.6 (3.80, 3.17) 3.5 (3.70, 3.08) 3.0 (3.17, 2.64) 3.0 (3.17, 2.64) 3.6 (3.80, 3.17) 3.6 (3.80, 3.17) 3.0 (3.17, 2.64) 3.5 (3.70, 3.08) 3.6 (3.80, 3.17) 3.5 (3.70, 3.08) 3.0 (3.17, 2.64) 3.5 (3.70, 3.08)	
Cooling fan	"ON" temperature "OFF" temperature "ON" temperature (Fan timer) "OFF" temperature (Fan timer)	87°–93°C (189°–199°F) 80°–91°C (176°–196°F) 105°–111°C (221°–231°F) 98°–109°C (208°–228°F)	

1. F20A2: 2.0 ℓ CARB with CATA
2. F20A3: 2.0 ℓ CARB
3. F20A5: 2.0 ℓ PGM-FI
4. F20A6: 2.0 ℓ CARB with CATA
5. F20A8: 2.0 ℓ PGM-FI with CATA
6. F22A2: 2.2 ℓ PGM-FI
7. F22A3: 2.2 ℓ PGM-FI with CATA
8. F22A6: 2.2 ℓ PGM-FI with CATA for 5D KQ
9. F22A7: 2.2 ℓ PGM-FI with CATA for 5D EC M/T
10. F22A8: 2.2 ℓ PGM-FI with CATA for 5D EC A/T
11. F22A9: 2.2 ℓ PGM-FI with CATA

*Except KQ, KY types

Standards and Service Limits

6. Fuel and Emissions

MEASUREMENT		STANDARD (NEW)
Fuel pump (PGM-FI)	Delivery pressure Displacement (minimum in 10 seconds) Relief valve opening pressure	240–279 kPa (2.45–2.85 kg/cm ² , 35–41 psi) 230 cc (7.8 US oz, 8.1 Imp oz) 441–588 kPa (4.5–6.0 kg/cm ² , 64–85 psi)
Fuel pump (CARB)	Delivery pressure Displacement (minimum in minute at 12V)	9–12 kPa (0.09–0.12 kg/cm ² , 1.3–1.7 psi) 700 cc (23.7 US oz, 19.7 Imp oz)
Pressure regulator (PGM-FI)	Pressure with regulator vacuum hose disconnected	240–279 kPa (2.45–2.85 kg/cm ² , 34–41 psi)* ¹ 275–324 kPa (2.80–3.30 kg/cm ² , 40–47 psi)* ²
Fuel tank	Capacity 2WS: 4WS:	65 ℓ (17.2 US gal, 14.3 Imp gal) 60 ℓ (15.9 US gal, 13.2 Imp gal)
Engine	Fast idle	PGM-FI: 1,400 ± 400 min ⁻¹ (rpm) CARB: 3,400 ± 500 min ⁻¹ (rpm)
	Idle speed (with headlights and cooling fan OFF)	MT with carbureted engine: 800 ± 50 min ⁻¹ (rpm) MT with PGM-FI engine: 770 ± 50 min ⁻¹ (rpm) AT with carbureted engine: 750 ± 50 min ⁻¹ (rpm) in [N] or [P] positions AT with PGM-FI engine: 770 ± 50 min ⁻¹ (rpm) in [N] or [P] positions
	Idle CO	With CATA: 0.1% maximum Without CATA: 1.0 ± 1.0%

*1: F20A5, F22A2, F22A3, F22A7, F22A8 engine
*2: Except F20A5, F22A2, F22A3, F22A7, F22A8 engine



7. Clutch

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	RHD: 210 (8.3) to floor LHD: 184 (7.2) to floor	—
	Stroke Pedal play Disengagement height	142.0 (5.6) 9–15 (0.4–0.6) 90 (3.5) min. to floor 80 (3.1) min. to carpet	— — — —
Flywheel	Clutch surface runout	0.05 (0.002) max.	0.15 (0.006)
Clutch disc	Rivet head depth	1.3 (0.05) min.	0.2 (0.008)
	Surface runout Thickness	0.6 (0.02) max. 8.4–9.1 (0.33–0.36)	1.0 (0.04) 6.0 (0.24)
Clutch cover	Unevenness of diaphragm spring	0.6 (0.02) max.	0.8 (0.03)

8. Manual Transmission

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (US. qt., Imp. qt.)	1.9 (2.0, 1.7) at assembly 2.0 (2.1, 1.8) at oil change	
Mainshaft	End play	0.10–0.16 (0.0039–0.0063)	Adjust with a shim.
	Diameter of ball bearing contact area	27.977–27.990 (1.1015–1.1020)	27.940 (1.1000)
	Diameter of third gear contact area	37.984–38.000 (1.4954–1.4961)	37.930 (1.4933)
	Diameter of ball bearing contact area Runout	27.987–28.000 (1.1018–1.1024) 0.02 (0.0008) max.	27.940 (1.1000) 0.05 (0.002)
Mainshaft third and fourth gears	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness 3rd gear 4th gear	32.42–32.47 (1.276–1.278) 30.92–30.97 (1.217–1.219)	32.3 (1.27) 30.8 (1.21)
Mainshaft fifth gear	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play Thickness	0.06–0.21 (0.0024–0.0083) 30.92–30.97 (1.217–1.219)	0.30 (0.012) 30.8 (1.21)
Countershaft	End play	0.05–0.40 (0.0019–0.0157)	0.50 (0.02)
	Diameter of needle bearing contact area	38.000–38.015 (1.4961–1.4967)	37.95 (1.4941)
	Diameter of ball bearing needle bearing contact area	24.987–25.000 (0.9837–0.9845)	24.94 (0.982)
	Diameter of low gear contact area Runout	39.984–40.000 (1.5742–1.5748) 0.02 (0.0008) max.	39.93 (1.572) 0.05 (0.002)

8. Manual Transmission

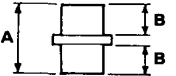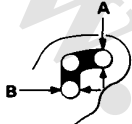	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Countershaft low gear	I.D. End play	46.009–46.025 (1.8114–1.8120) 0.04–0.10 (0.002–0.004)	46.08 (1.814) Adjust with a washer.
Countershaft second gear	I.D. End play Thickness	47.009–47.025 (1.8507–1.8514) 0.04–0.10 (0.002–0.004) 34.62–34.67 (1.3630–1.3650)	47.08 (1.8535) Adjust with a collar. 33.5 (1.3189)
Spacer collar (Countershaft second gear)	I.D. O.D. Length	36.48–36.49 (1.4362–1.4366) 41.989–42.000 (1.6531–1.6535) 29.02–29.04 (1.1425–1.1433) 29.07–29.09 (1.1445–1.1453)	36.50 (1.437) 41.94 (1.651) — —
Spacer collar (Mainshaft fourth and fifth gears)	I.D. O.D. Length	31.002–31.012 (1.2205–1.2209) 37.989–38.000 (1.4956–1.4961) 56.45–56.55 (2.222–2.226) 26.03–26.08 (1.0248–1.0268)	31.06 (1.223) 37.94 (1.494) — 26.01 (1.024)
		A B	
Reverse idler gear	I.D. Gear-to-reverse gear shaft clearance	20.016–20.043 (0.7880–0.7891) 0.036–0.084 (0.0014–0.0033)	20.09 (0.7909) 0.160 (0.0006)
Synchronizer ring	Ring-to-gear clearance (ring pushed against gear)	0.85–1.10 (0.0335–0.0433)	0.40 (0.016)
Shift fork	Synchronizer sleeve groove width Fork-to-synchronizer sleeve clearance	6.75–6.85 (0.266–0.270) 0.35–0.65 (0.014–0.026)	— 1.0 (0.039)
Reverse shift fork	Pawl groove width Fork-to-reverse idle gear clearance Groove width Fork-to fifth/reverse shift shaft clearance	13.0–13.3 (0.51–0.52) 0.5–1.1 (0.02–0.43) 7.05–7.25 (0.278–0.2854) 7.4–7.7 (0.29–0.30) 0.05–0.35 (0.002–0.014) 0.4–0.8 (0.02–0.03)	— 1.8 (0.07) — — 0.5 (0.02) 1.0 (0.04)
		at A at B at A at B	
Shift arm	I.D. Shift arm-to-shaft clearance Shift fork diameter at contact area Shift-arm-to-shift fork shaft clearance	15.973–16.000 (0.6289–0.6299) 0.005–0.059 (0.0002–0.0023) 12.9–13.0 (0.508–0.512) 0.2–0.5 (0.01–0.02)	— — — 0.6 (0.02)
Select lever	Pin size of contact area Shaft outer diameter Shift arm cover clearance	7.9–8.0 (0.311–0.315) 15.41–15.68 (0.607–0.617) 0.032–0.102 (0.0013–0.0040)	— — —
Shift arm lever	O.D. Transmission housing clearance	15.941–15.968 (0.6276–0.6287) 0.027–0.139 (0.0011–0.0055)	— —
Inter lock	Bore diameter Shift arm lever clearance	16.00–16.05 (0.630–0.632) 0.032–0.109 (0.0013–0.0043)	— —
Ring gear	Backlash	0.085–0.142 (0.0033–0.0056)	0.200 (0.0079)
Differential carrier	Pinion shaft bore diameter Carrier-to-pinion shaft clearance Driveshaft bore diameter Carrier-to-driveshaft clearance	18.000–18.018 (0.7087–0.7094) 0.017–0.047 (0.0007–0.0019) 28.005–28.025 (1.1026–1.1033) 0.025–0.066 (0.0009–0.0026) 0.055–0.091 (0.0022–0.0036)	— 0.100 (0.0039) — 0.120 0.150
		R L	
Differential pinion gear	Backlash Pinion gear bore diameter Pinion gear-to-pinion shaft clearance	0.05–0.15 (0.002–0.006) 18.042–18.066 (0.7103–0.7113) 0.059–0.095 (0.0023–0.0037)	Selection with 7 types of washers. — 0.150 (0.0059)
Differential taper roller bearing	Preload	1.4–2.6 N·m (14–26 kg·cm, 1.0–1.9 lb·ft)	Selection with 20 types of shims.

Standards and Service Limits

9. Automatic Transmission

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	2.4 (2.5, 2.1) at oil change 6.0 (6.4, 5.2) at assembly	
Hydraulic pressure	Line pressure at 2,000 min ⁻¹ (rpm)	Carburetor 760 kPa (7.75 kg/cm ² , 110 psi) Throttle valve full- closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle valve more than 2/8 open	710 kPa (7.25kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI 784 kPa (8.0 kg/cm ² , 113 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120psi) Throttle valve more than 2/8 open	735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
4th clutch pressure at 2,000 min ⁻¹ (rpm)		Carburetor 411 kPa (4.2 kg/cm ² , 59 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle Valve more than 2/8 open	352 kPa (3.6 kg/cm ² , 51 spi) Throttle valve full-closed 710 kPa (7.25 kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI 520 kPa (5.3 kg/cm ² , 75 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	460 kPa (4.7 kg/cm ² , 66 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
3rd clutch pressure at 2,000 min ⁻¹ (rpm)		Carburetor 392 kPa (4.0 kg/cm ² , 57 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle valve more than 2/8 open	352 kPa (3.6 kg/cm ² , 51 psi) Throttle valve full-closed 710 kPa (7.25 kg/cm ² , 103 psi) Throttle volve more than 2/8 open
		PGM-FI 490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
2nd clutch pressure at 2,000 min ⁻¹ (rpm)		Carburetor 392 kPa (4.0 kg/cm ² , 57 psi) Throttle valve full-closed 808 kPa (8.25 kg/cm ² , 117 psi) Throttle valve more than 2/8 open	352 kPa (3.6 kg/cm ² , 51 psi) Throttle valve full-closed 710 kPa (7.25 kg/cm ² , 103 psi) Throttle valve more than 2/8 open
		PGM-FI 490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open
1st clutch pressure at 2,000 min ⁻¹ (rpm)		Carburetor 750–808 kPa (7.75–8.25 kg/cm ² , 110–117 psi)	710 kPa (7.25 kg/cm ² , 103 psi)
		PGM-FI 784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)

Unit of length: mm (in.)

9. Automatic Transmission

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT	
Hydraulic pressure	Governor pressure at (37.5 mph) 60 km/h	Carburetor with CATA	225–235 kPa (2.30–2.40 kg/cm ² , 32–34 psi)	220 kPa (2.25 kg/cm ² , 32 psi)	
		Carburetor without CATA	166–176 kPa (1.70–1.80 kg/cm ² , 24–25 psi)	162 kPa (1.65 kg/cm ² , 23 psi)	
	Throttle pressure A	Carburetor with CATA	closed	0	—
			open	514–530 kPa (5.25–5.4 kg/cm ² , 74–76 psi)	509 kPa (5.2 kg/cm ² , 73 psi)
		Carburetor with CATA	closed	0	—
			open	485–500 kPa (4.95–5.10 kg/cm ² , 70–72 psi)	480 kPa (4.9 kg/cm ² , 69 psi)
	Throttle pressure B	Carburetor	closed	0	—
			open	760–808 kPa (7.75–8.25 kg/cm ² , 110–117 psi)	710 kPa (7.25 kg/cm ² , 103 psi)
		PGM-FI	closed	0	—
			open	784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)
Stall speed	Check with car on level ground	2.350–2.650 min ⁻¹ (rpm)			
Clutch	Clutch initial clearance	1st-hold	0.8–1.0 (0.031–0.039)	—	
		1st, 2nd	0.65–0.85 (0.026–0.033)	—	
		3rd, 4th	0.4–0.6 (0.016–0.024)	—	
	Clutch return spring free length	Carburetor	1st, 2nd, 3rd: 33.9 (1.33) 4th: 30.2 (1.189)	31.9 (1.256) 28.2 (1.110)	
		PGM-FI	1st, 2nd, 3rd, 4th: 33.5 (1.318)	31.5 (1.240)	
	Clutch disc thickness		1.88–2.0 (0.074–0.079)	Until grooves worn out	
	Clutch plate thickness	Carburetor	1st, 2nd: 2.25–2.35 (0.089–0.093)	Discoloration ↑ ↓ Discoloration	
			3rd, 4th, 1.95–2.05 1st-hold: (0.077–0.081)		
			1st: 1.95–2.05 (0.0767–0.0807)		
		PGM-FI	2nd: 2.55–2.65 (0.1003–0.1043)		
3rd, 4th: 2.25–2.35 (0.0885–0.0925)					
Clutch end plate thickness	Mark 1	2.05–2.10 (0.081–0.83)			
	Mark 2	2.15–2.20 (0.085–0.087)			
	Mark 3	2.25–2.30 (0.089–0.091)			
	Mark 4	2.35–2.40 (0.093–0.094)			
	Mark 5	2.45–2.50 (0.096–0.098)			
	Mark 6	2.55–2.60 (0.100–0.102)			
	Mark 7	2.65–2.70 (0.104–0.106)			
	Mark 8	2.75–2.80 (0.108–0.110)			
	Mark 9	2.85–2.90 (0.112–0.114)			
	* Mark 10	2.95–3.00 (0.116–0.118)			

*Carbureted engine only.

Standards and Service Limits

9. Automatic Transmission (cont'd)

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Valve body	Stator camshaft needle bearing contact area I.D. (torque converter side)	27.000-27.021 (1.0630-1.0638)	Wear or damage
	Stator camshaft needle bearing contact area I.D. (oil pump side)	29.000-29.013 (1.417-1.1422)	—
Drive Driven	Oil pump driven gear I.D.	14.016-14.034 (0.5518-0.5525)	Wear or damage
	Oil pump gear shaft O.D.	13.980-13.990 (0.5504-0.5508)	Wear or damage
	Oil pump gear side clearance	0.03-0.05 (0.0012-0.0020)	0.07 (0.0028)
	Oil pump gear-to-body clearance	0.21-0.265 (0.0083-0.0104)	—
		0.07-0.125 (0.0027-0.0049)	—
Regulator valve body	Sealing ring contact area diameter	35.000-35.025 (1.3780-1.3789)	35.050 (1.3799)
Accumulator body	Sealing ring contact area diameter	32.000-32.013 (1.2598-1.2600)	32.05 (1.2618)
Stator camshaft	Sealing ring contact area diameter	29.000-29.013 (1.1417-1.1422)	29.05 (1.1436)
Shifting device and parking brake control	Reverse shift fork thickness	5.90-6.00 (0.232-0.236)	5.40 (0.213)
	Parking brake ratchet pawl	—	Wear or other defect
	Parking gear	—	Wear or other defect
Carburetor PGM-FI	Throttle cam stopper	18.5-18.6 (0.7283-0.7322)	—
		17.0-17.1 (0.6692-0.6732)	—
Servo body	Shift fork shaft I.D.	A	14.000-14.005 (0.5512-0.5514)
		B	14.006-14.010 (0.5514-0.5516)
		C	14.011-14.015 (0.5516-0.5518)
	Shift fork shaft valve bore I.D.	37.000-37.039 (1.4567-1.4582)	37.045 (1.4585)
Transmission	Diameter of needle bearing contact area	22.984-23.000 (0.9049-0.9055)	Wear or damage
	On mainshaft and stator shaft	31.984-32.000 (1.2592-1.2598)	
	On mainshaft 4th gear collar	41.984-42.000 (1.6529-1.6535)	↑ Wear or damage
	On mainshaft 3rd gear collar	45.984-46.000 (1.8103-1.8110)	
	Carburetor PGM-FI	40.984-41.000 (1.6142-1.6535)	
	On counter shaft 1st gear collar	31.975-31.991 (1.2589-1.2595)	
	On counter shaft 4th gear	35.979-36.000 (1.4165-1.4173)	
	On counter shaft reverse gear	39.984-40.000 (1.5741-1.5748)	
	On counter shaft parking gear	31.975-31.991 (1.2588-1.2594)	
	On secondary shaft 1st gear	31.975-31.991 (1.2588-1.2594)	
	On secondary shaft 2nd gear	14.416-14.434 (0.5675-0.5682)	
	Reverse idler gear shaft holder I.D.	48.000-48.019 (1.8898-1.8905)	
	Mainshaft 3rd gear I.D.	52.000-52.019 (2.0472-2.0479)	
	Carburetor PGM-FI	38.005-38.021 (1.4963-1.4969)	
4th gear I.D.			

9. Automatic Transmission

Unit of length: mm (in.)

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission	Countershaft 1st gear I.D.	47.000—47.016 (1.8504—1.8510)	Wear or damage ↑ ↓
	4th gear I.D.	38.000—38.016 (1.4961—1.4967)	
	reverse gear I.D.	42.000—42.016 (1.6535—1.6541)	
	idler gear I.D.	48.000—48.016 (1.8897—1.8903)	
	Secondary shaft 1st gear I.D.	37.000—37.016 (1.4566—1.4573)	
	2nd gear I.D.	37.000—37.016 (1.4566—1.4573)	
	Mainshaft 3rd gear collar length	20.000—20.050 (0.7874—0.7893)	
	Carburetor PGM-FI	19.500—19.550 (0.7677—0.7697)	
	4th gear collar length	47.500—47.550 (1.8700—1.8720)	
	Countershaft 1st gear collar length	27.500—27.550 (1.0826—1.0846)	
	Secondary shaft distance collar length	4.95—5.00 (0.1948—0.1968)	
	Secondary shaft 2nd gear thrust washer thickness	4.35—4.45 (0.1713—0.1752)	
	Countershaft 1st gear thrust washer thickness	1.45—1.50 (0.0570—0.0590)	
	Countershaft idler gear thrust washer thickness	3.45—3.55 (0.1358—0.1398)	
Countershaft parking gear length	25.030—25.048 (0.9854—0.9861)	Wear or damage	

www.cargeek.ir

Standards and Service Limits

9. Automatic Transmission (cont'd)

Unit of length: mm (in.)

	MEASUREMENT	STANDARD (NEW)			
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS
Spring (Carburetor)	One way ball spring	0.29 (0.0114)	4.0 (0.1574)	14.0 (0.5511)	13.0
	Regulator valve spring A	1.80 (0.0708)	14.7 (0.5787)	86.5 (3.4055)	16.5
	Regulator valve spring B	1.80 (0.0708)	9.6 (0.3779)	44.0 (1.7328)	7.5
	Stator reaction spring	5.50 (0.2165)	37.4 (1.4724)	30.3 (1.1929)	2.1
	Throttle modulator spring	with CATA 1.20 (0.0472)	9.4 (0.3700)	27.2 (1.0708)	8.0
	without CATA	1.20 (0.0472)	9.4 (0.3700)	26.3 (1.0354)	8.0
	Torque convertor check valve spring	1.10 (0.0433)	8.4 (0.3307)	36.4 (1.4331)	12.0
	Relife valve spring	1.00 (0.0393)	8.4 (0.3307)	39.1 (1.5393)	15.1
	Cooler check valve spring	1.10 (0.0433)	8.4 (0.3307)	46.8 (1.8425)	17.0
	Governor spring A	with CATA 1.0 (0.0393)	18.8 (0.7401)	25.8 (1.0157)	4.0
	without CATA	1.0 (0.0393)	18.8 (0.7401)	41.2 (1.6220)	4.0
		1.0 (0.0393)	18.8 (0.7401)	44.3 (1.7440)	4.0
	Governor spring B	with CATA 0.8 (0.0314)	11.8 (0.4645)	22.9 (0.9016)	7.0
		0.9 (0.0354)	11.8 (0.4645)	18.4 (0.7244)	6.2
		without CATA 0.9 (0.0354)	11.8 (0.4645)	21.4 (0.8425)	6.2
	Second orifice control spring	0.7 (0.0275)	6.6 (0.2598)	53.3 (2.0984)	20.5
	Servo orifice spring	0.9 (0.0354)	7.1 (0.2795)	61.2 (2.4094)	28.2
	Throttle spring A	1.0 (0.0393)	8.5 (0.3346)	21.0 (0.8267)	5.8
		1.0 (0.0393)	8.5 (0.3346)	21.0 (0.8267)	5.4
		1.0 (0.0393)	8.5 (0.3346)	22.2 (0.8740)	6.0
		1.0 (0.0393)	8.5 (0.3346)	22.1 (0.8701)	5.5
	Throttle adjust spring A	0.8 (0.0314)	6.2 (0.2440)	27.0 (1.0630)	23.0
	Throttle adjust spring B	0.8 (0.0314)	6.2 (0.2440)	30.0 (1.1811)	8.0
	Throttle spring B	1.4 (0.0551)	8.5 (0.3346)	41.6 (1.6378)	14.0
	1-2 shift spring	with CATA 0.5 (0.0196)	4.6 (0.1811)	42.3 (1.6653)	25.0
		without CATA 0.6 (0.0236)	6.1 (0.2401)	42.3 (1.6653)	21.1
	1-2 shift ball spring	with CATA 0.4 (0.0157)	4.5 (0.1771)	13.0 (0.5118)	8.7
		without CATA 0.4 (0.0157)	4.5 (0.1771)	12.6 (0.4960)	8.7
	2-3 shift spring	with CATA 0.9 (0.0354)	7.6 (0.2992)	70.0 (2.7559)	28.2
		without CATA 0.8 (0.0314)	7.6 (0.2992)	58.9 (2.3188)	16.8
	2-3 shift ball spring	with CATA 0.5 (0.0196)	4.5 (0.1771)	11.7 (0.4606)	10.5
		without CATA 0.5 (0.0196)	4.5 (0.1771)	14.1 (0.5551)	10.5
	3-4 shift spring	with CATA 0.9 (0.0354)	9.6 (0.3779)	35.8 (1.4094)	10.3
		without CATA 0.9 (0.0354)	9.6 (0.3779)	27.7 (1.0905)	10.3
	3-4 shift ball spring	with CATA 0.5 (0.0196)	4.5 (0.1771)	11.5 (0.4527)	7.4
		without CATA 0.5 (0.0196)	4.5 (0.1771)	11.3 (0.4448)	7.4
	1st-hold accumulator spring	4.0 (0.1574)	21.5 (0.8464)	71.7 (2.8228)	8.3
	1st accumulator spring	1.8 (0.0709)	16.3 (0.6417)	115.4 (4.5433)	18.6
	4th accumulator spring	2.6 (0.1023)	16.0 (0.6292)	84.6 (3.3307)	14.3
	2nd accumulator spring	3.2 (0.1378)	22.0 (0.8661)	77.1 (3.0354)	10.0
	3rd accumulator spring	2.6 (0.1023)	17.5 (0.6889)	78.6 (3.0944)	11.0
	L/C shift spring	0.9 (0.0354)	7.6 (0.2992)	73.7 (2.9015)	32.0
	L/C timing spring B	with CATA 1.0 (0.0393)	6.6 (0.2598)	84.0 (3.3070)	42.4
		without CATA 1.0 (0.0393)	6.6 (0.2598)	79.1 (3.1141)	42.4
	L/C timing spring A	with CATA 0.9 (0.0354)	6.6 (0.2598)	55.9 (2.2007)	27.3
		without CATA 0.9 (0.0354)	6.6 (0.2598)	50.0 (1.9685)	27.3
	Governor cut spring	0.8 (0.0314)	7.6 (0.2992)	44.5 (1.7519)	17.0
	L/C control spring	0.7 (0.0275)	6.6 (0.2598)	42.9 (1.6889)	14.1
	CPC valve spring	1.4 (0.0551)	9.4 (0.3700)	31.2 (1.2283)	10.9
	3rd kick down spring	0.9 (0.0354)	7.6 (0.2992)	62.7 (2.4684)	27.5
	Reverse control spring	0.7 (0.0275)	7.1 (0.2795)	40.0 (1.5748)	20.8
	L/C cut spring	0.7 (0.0275)	7.6 (0.2992)	31.0 (1.2204)	12.7
	Accumulator control spring	1.2 (0.0472)	7.7 (0.3031)	45.6 (1.7952)	21.8
	2nd kick down spring	1.2 (0.0472)	7.1 (0.2795)	46.9 (1.8464)	20.6
	Servo control spring	0.9 (0.0354)	6.4 (0.2519)	32.5 (1.2795)	17.5
	2-1 timing spring	0.7 (0.0275)	5.6 (0.2204)	33.0 (1.2992)	21.7
	4th exhaust spring	0.8 (0.0314)	6.1 (0.2401)	51.1 (2.0118)	26.6

Unit of length: mm (in.)

9. Automatic Transmission

	MEASUREMENT		STANDARD (NEW)			
			WIRE DIA.	O.D.	FREE LENGTH	No. of COILS
Spring (PGM-FI)	Regulator valve spring	A	1.8 (0.0709)	14.7 (0.5887)	86.5 (3.4055)	16.5
		B	1.8 (0.0709)	9.6 (0.3779)	44.0 (1.7323)	12.7
	Stator reaction spring		4.5 (0.1772)	35.4 (1.3937)	30.3 (1.1929)	1.92
	Torque converter check valve spring		1.1 (0.0433)	8.4 (0.3307)	36.4 (1.4331)	12.0
	Relief valve spring		1.0 (0.0394)	8.4 (0.3307)	39.1 (1.5393)	15.1
	Cooler check valve spring		1.1 (0.0433)	8.4 (0.3307)	46.8 (1.8425)	17.0
	2nd orifice spring		0.6 (0.0236)	6.6 (0.2598)	55.8 (2.1968)	15.8
	Servo orifice spring		0.8 (0.0315)	6.6 (0.2598)	52.5 (2.0669)	33.0
	4th exhaust spring		0.9 (0.0354)	7.1 (0.2795)	60.8 (2.3936)	28.9
	1-2 shift spring		1.0 (0.0393)	8.6 (0.3386)	41.3 (1.6259)	16.9
	2-3 shift spring		0.9 (0.0354)	7.6 (0.2992)	57.0 (2.2440)	26.8
	1st accumulator spring		1.8 (0.0709)	16.3 (0.6417)	115.4 (4.5433)	18.6
	4th accumulator spring		2.9 (0.1142)	22.0 (0.8661)	90.1 (3.5472)	10.9
	2nd accumulator spring		3.5 (0.1378)	22.0 (0.8661)	77.1 (3.0354)	10.0
	3rd accumulator spring		2.8 (0.1102)	17.5 (0.6889)	94.2 (3.7086)	16.1
	L/C shift spring		0.9 (0.0354)	7.6 (0.2992)	73.7 (2.9016)	32.0
	L/C timing spring		0.8 (0.0314)	6.6 (0.2598)	51.1 (2.0118)	14.7
	Servo control spring		1.0 (0.0394)	8.1 (0.3188)	52.6 (2.0708)	22.4
	3rd kick-down spring		1.1 (0.0433)	7.6 (0.2992)	48.3 (1.9015)	23.3
	2nd kick-down spring		1.2 (0.0472)	7.1 (0.2795)	46.9 (1.8464)	20.6
	Throttle adjust spring		0.8 (0.0314)	6.2 (0.2440)	30.0 (1.1811)	8.0
	Throttle B spring		1.4 (0.0551)	8.5 (0.3346)	41.5 (1.6339)	10.5
			1.4 (0.0551)	8.5 (0.3346)	41.5 (1.6339)	11.2
			1.4 (0.0551)	8.5 (0.3346)	41.6 (1.6378)	12.4
	1st-hold accumulator spring		4.0 (0.1574)	25.0 (0.9842)	64.7 (2.5472)	7.3
	CPC valve spring		1.4 (0.0551)	9.4 (0.3700)	33.0 (1.2992)	10.5
	L/C control spring		0.7 (0.0276)	6.6 (0.2598)	38.0 (1.4961)	14.1

Standards and Service Limits

9. Automatic Transmission (cont'd)

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Rign gear	Backlash	0.085–0.142 (0.003–0.006)	0.200 (0.008)
Differential carrier	Pinion shaft bore diameter	18.000–18.018 (0.7087–0.7094)	—
	Carrier-to-pinion shaft clearance	0.017–0.047 (0.001–0.002)	0.100 (0.004)
	Driveshaft bore diameter	28.005–28.025 (1.1026–1.1033)	—
	Carrier-to driveshaft clearance	0.025–0.066 (0.001–0.003)	0.120 (0.005)
Differential pinion gear	Backlash	0.05–0.15 (0.02–0.006)	Adjust with a washer
	Pinion gear bore diameter	18.042–18.066 (0.710–0.711)	—
	Pinion gear-to pinion shaft clearance	0.059–0.095 (0.002–0.004)	0.120 (0.005)
Differential tapered roller bearing preload	For used bearing	2.5–3.7 N·m (25–37 kg·cm, 1.8–2.7 lb-ft)	Adjust with a washer
	After replacement of bearing	2.8–4.0 N·m (28–48 kg·cm, 2.0–2.9 lb-ft)	Adjust with a washer

11. Steering

	MEASUREMENT	STANDARD (NEW)
Steering wheel	Play	10 (0.39) maximum
Gearbox	Pinion starting torque	Below 1.0N-m (10 kg·cm, 0.72 lb-ft)
	Angle of rack guide screw loosend from locked position	20° + 5° - 0
Pump	Pump pressure with valve closed (oil temperature: 40°C/104°F minimum) Do not run for more than 5 seconds	7,845–8,826 kPa (80–90 kg/cm², 1,138–1,280 psi) at idle
Power steering fluid	Capacity	0.5 ℓ (0.53 US qt, 0.44 Imp qt)
	Reservoir At change (approx.)	1.8 ℓ (1.90 US qt, 1.58 Imp qt)
Power steering belt	Deflection between pulleys with 98 N (10 kg, 22 lbs) force	For used belt
		For new belt
Belt tension between pulleys (measured with belt tension gauge)	For used belt	13.0–16.0 (0.51–0.62)*
		For new belt
		9.5–11.5 (0.37–0.45)
		343–490 N (35–50 kg, 77–110 lb)*
		686–882 N (70–90 kg, 154–198 lb)

*When using a new belt, first adjust the deflection or tension to these values, then readjust the deflection or tension to the values for the used belts after running engine for five minutes.

12. Suspension

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Wheel alignment	Total toe	Front	0±2 (0±0.08)	
		Rear	IN 2±2 (0.08±0.08)	
	Camber	Front	2WS:	IN 3±2 (0.12±0.08)
			4WS:	0° 00' ± 1'
		Rear	2WS:	-0° 30' ± 1'
			4WS:	-0° 20' ± 1'
	Caster	Front	2WS:	3° 00' ± 1'
			4WS:	3° 00' ± 1'
	Front Wheel turning angle	Inward wheel	2WS:	39° 05' ± 2°
			4WS:	38° 50' ± 2°
Rear Wheel turning angle (4WS only)	Outward wheel (reference)	2WS:	29° 30'	
		4WS:	29° 30'	
Wheel	Rim runout	Steel wheel	Below 1.0 (0.04)	
		Aluminum wheel	Below 1.0 (0.04)	
Wheel bearing	End play	Axial	Below 0.7 (0.03)	
		Radial	Below 0.7 (0.03)	
		Front	0–0.05 (0–0.002)	
		Rear	0–0.05 (0–0.002)	

Unit of length: mm (in.)

13. Brakes

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Parking brake lever	Play in stroke 200 N (20 kg, 44 lbs)	To be locked when pulled 4-8 notches		—
Foot brake pedal	Pedal height (from floor)	LHD: MT	165 ± 0.5 (6.5 ± 0.02)	—
		AT	170 ± 0.5 (6.7 ± 0.02)	—
	Free play	RHD: MT	190 (7.5) minimum	—
		AT	195 (7.7) minimum	5 (0.20)
Master cylinder	Piston-to-push rod clearance	0-0.4 (0-0.016)		—
Brake drum	I.D.	220 (8.66)		221 (8.70)
Lining	Thickness	4.5 (0.18)		2.0 (0.08)
Disc brake	Disc thickness	Front	23.0 (0.91)	21.0 (0.83)
		Rear	10.0 (0.39)	8.0 (0.32)
	Disc runout	Front	—	0.10 (0.004)
		Rear	—	0.10 (0.004)
	Disc parallelism	Front and rear	—	0.015 (0.0006)
Pad thickness	Front	2.0 ℓ model: 12.5 (0.49) 2.2 ℓ model: 12.0 (0.47)	1.6 (0.06)	
	Rear	9.0 (0.35)	1.6 (0.06)	
Brake booster	Characteristics at 20 kg (44 lbs) pedal pressure		Line pressure Unit: kPa (kg/cm ² /psi)	
	Vacuum	Brakes	Conventional type	with anti-lock-brake system
	0 mm (0 in) Hg		922 (9.4/134) minimum	813 (8.3/118) minimum
300 mm (11.8 in) Hg		5,494 (56/796) minimum	6,076 (62/882) minimum	
500 mm (19.7 in) Hg		8,535 (87/1,237) minimum	8,134 (83/1,180) minimum	

15. Air Conditioner

MEASUREMENT		STANDARD (NEW)	
Air conditioner system	Lubricant capacity	Condenser	10 cc (0.3 US oz, 0.4 Imp oz)
		Evaporator	25 cc (0.8 US oz, 0.9 Imp oz)
		Line or hose	10 cc (0.3 US oz, 0.4 Imp oz)
		Reservoir	10 cc (0.3 US oz, 0.4 Imp oz)
Compressor	Lubricant capacity	800-850 g (28.2-30.0 oz)	
	Stator coil resistance at 20°C (68°F)	3.4-3.8 Ω	
	Pulley-to pressure plate clearance	0.35-0.65 (0.014-0.026)	
Compressor belt	Deflection between pulleys with 98N (10 kg, 22 lbs) force	For used belt	10-12 (0.4-0.5)*
		For new belt	4.5-7.0 (0.18-0.28)
Compressor belt	Belt tension between pulleys (measured with belt tension gauge)	For used belt	441-588 N (45-60 kg, 99-132 lbs)
		For new belt	931-1,127 N (95-115 kg, 209-254 lbs)

*When using a new belt, first adjust the deflection or tension to these values, then readjust the deflection or tension to the values for the used belts after running engine for five minutes.

Standards and Service Limits

Unit of length: mm (in.)

16. Electrical

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Ignition coil	Rated voltage		12 Volts		
	Winding resistance	Primary	0.6–0.8 Ω		
		Secondary	< 0.5–0.7 Ω >		
< >: Carbureted engine		12.8–19.2 kΩ < 14.4–21.6 kΩ >			
Ignition wire	Resistance		25 kΩ maximum		
Spark plug	Type (): Manufacturer	Standard	ZFR5F-11 (NGK) or KJ16CR-L11 (ND)* ¹ ZFR6F-11 (NGK) or KJ20CR-L11 (ND)* ²		
		Option	ZFR5F-11 (NGK) or KJ16CR-L11 (ND)* ³ ZFR6F-11 (NGK) or KJ20CR-L11 (ND)* ⁴ ZFR7F-11 (NGK) or KJ22CR-L11 (ND)* ⁵		
	Gap		1.0–1.1 (0.039–0.043)		
Ignition timing	At idling		PGM-FI engine: 15° ± 2° BTDC Carbureted engine: F20A2, F20A3-MT, F20A6: 15° ± 2° BTDC F20A3-AT (KY): 0° ± 2° BTDC F20A3-AT (others): 10° ± 2° BTDC		
Battery	Lighting capacity (20-hours ratio) < >: KY, KQ (except 5D), KP, KT		65Ah < 47Ah >		
	Starting capacity (voltage after 5 sec.)		8.4 V minimum/300 ampere draw at –15°C (59°F)		
Alternator	Output < >: Carbureted engine (except KS, KU, KW, KY)		80A < 70A >		
	Rotor coil resistance		2.8–3.0 Ω		
	Slip ring O.D.		14.4 (0.57)		
Brush length		10.5 (0.41)			
Brush spring tension		300–360 g (10.6–12.7 oz)			
Alternator belt	Deflection at midway between pulleys with 98 N (10 kg, 22 lb) force	Model without A/C	Used belt*	10–12 (0.39–0.47)	
			New belt	8.5–11 (0.33–0.43)	
		Model with A/C	Used belt*	10–12 (0.39–0.47)	
			New belt	4.5–7.0 (0.18–0.28)	
	Belt tension between pulleys (measured with belt tension gauge)	Model without A/C	Used belt*	294–441 N (30–45 kg, 66–99 lb)	
			New belt	441–637 N (45–65 kg, 99–143 lb)	
		Model with A/C	Used belt*	441–637 N (45–65 kg, 99–143 lb)	
			New belt	931–1,128 N (95–115 kg, 209–154 lb)	
Starting motor	Output		4D European except KE Except European and KE 5D KE Except KE		
	Manufacturer: Mitsuba		MT: 1.4 kW (2.2 t: 1.6 kW) MT: 1.4 kW MT: 1.4 kW MT: 1.6 kW		
	Manufacturer: ND		AT: 1.6 kW AT: 1.4 kW AT: 1.4 kW AT: 1.6 kW		
	Mica depth	0.4–0.5 (0.016–0.02)		0.15 (0.006)	
		Commutator runout		0–0.02 (0–0.001)	
	Commutator O.D.	28.0–28.1 (1.10–1.11)		0.05 (0.002)	
Brush length		27.5 (1.08)			
Brush spring tension	15.8–16.2 (0.62–0.64)		10.0 (0.39)		
	16–18 N (1.6–1.8 kg, 3.5–4.0 lbs)		—		
Mica depth		0.5–0.8 (0.02–0.03)		0.2 (0.01)	
Commutator runout		0–0.02 (0–0.001)		0.05 (0.002)	
Commutator O.D.		29.9–30.0 (1.18–1.18)		29.0 (1.14)	
Brush length		15.0–15.5 (0.59–0.61)		10.0 (0.39)	
Brush spring tension		19–24 N (1.9–2.4 kg, 4.2–5.3 lbs)		—	

*When using a new belt, first adjust the deflection or tension to these values, then readjust the deflection or tension to the values for the used belts after running engine for five minutes.

- *1: Except the European and GULF model of Engine type F20A3.
- *2: European and GULF model of Engine type F20A3.
All fuel injection type.
- *3: Engine type F20A8, F22A2, F22A6 and F22A9.
European and GULF model of Engine type F20A3.
European model of Engine type F20A5.
- *4: Except the European and GULF model of Engine type F20A3.
Except the European and Hong Kong model of Engine type F20A5.
- *5: Engine type F20A2, F20A6, F20A8, F22A2, F22A3, F22A6, F22A7, F22A8 and F22A9.
European and GULF model of Engine type F20A3.
European model of Engine type F20A5.

Design Specifications (4D)

	ITEMS	METRIC	ENGLISH	NOTES						
DIMENSIONS	Overall length	4,700 mm 4,705 mm 4,710 mm 4,710 mm	185.0 in 185.2 in 185.4 in 185.4 in	Gulf model Australian model Finish model						
	Overall width	1,695 mm 1,705 mm 1,705 mm	66.7 in 67.1 in 67.1 in							
	Overall height	1,390 mm 1,400 mm	54.7 in 55.1 in	Gulf model Australian model						
	Wheelbase	2,720 mm	107.1 in	Gulf model						
	Track	1,475 mm 1,480 mm	58.1 in 58.3 in							
	Ground clearance	160 mm 170 mm	6.3 in 6.7 in	Gulf model						
	Seating capacity		Five							
	Turning circle diameter (at tire center)	4.9 m 5.4 m	16.1 ft 17.7 ft							
	WEIGHT	Curb weight	See page 3-19							
		Max. permissible weight (for European)								
2.0 ℓ without Anti-lock brake system		1,740 kg	3,836 lb							
2.0 ℓ with Anti-lock brake system		1,760 kg	3,880 lb							
2.2 ℓ		1,840 kg	4,056 lb							
ENGINE	Type	Water-cooled, 4-stroke OHC		2.0 ℓ 2.2 ℓ 2.0 ℓ 2.2 ℓ						
	Cylinder arrangement	4-cylinder in-line transverse								
	Bore and stroke	85 × 88 mm 85 × 95 mm	3.35 × 3.46 in 3.35 × 3.74 in							
	Displacement	1,997 cm ³ 2,156 cm ³	121.8 cu-in 131.5 cu-in							
	Compression ratio	2.0 ℓ carbureted 2.0 ℓ fuel-injected 2.2 ℓ (F22A3) 2.2 ℓ (F22A2) 2.2 ℓ (F22A9)	9.0 : 1 < 8.9 : 1 > 9.6 : 1 < 9.0 : 1 > 9.8 : 1 8.9 : 1 8.8 : 1		< > : With catalytic converter					
Valve train	Belt driven, single overhead camshaft									
Lubrication system	Forced and wet sump, trochoid pump									
Fuel required	F20A5*1 engine: Premium unleaded grade gasoline with 98 R.O.N. or higher F20A3, F20A5*2, F22A3 engine: Premium unleaded grade gasoline with 95 R.O.N. or higher F20A2, F20A3*1, F20A6, F22A 9 engine: Unleaded grade gasoline with 91 R.O.N. or higher F20A3*2, F22A2 engine: Leaded grade gasoline with 91 R.O.N. or higher									
STARTER	Type	Gear reduction								
	Normal output	European except KE Except European and KE			MT: 1.4 kW (2.2 ℓ: 1.6 kW) AT: 1.6 kW MT: 1.4 kW AT: 1.4 kW					
	Normal voltage	12 V								
	Hour rating	30 seconds								
	Direction of rotation	Clockwise as viewed from gear end								
TRANSMISSION	Clutch	MT AT	Single plate dry, diaphragm spring Torque converter with lock-up clutch 203 cm ³ 31.5 sq. in							
	Clutch lining area	MT AT	Synchronized 5-speed forward, 1 reverse 4-speed forward automatic, 1 reverse or Electronically controlled dual range 4-speed forward automatic, 1 reverse 1 : 1 (Direct)							
	Primary reduction ratio									
	Gear ratio			MT				AT		
			Gear	①	②	③		④	⑤	⑥
			1st	3.307	3.307	3.307		2.705	2.705	2.705
			2nd	1.857	1.809	1.809		1.482	1.482	1.366
			3rd	1.269	1.230	1.230		1.028	1.028	1.028
			4th	0.966	0.933	0.903		0.731	0.707	0.731
			5th	0.787	0.757	0.705		—	—	—
	Reverse	3.000	3.000	3.000	2.047	2.047	2.047			
	Final	4.266	4.266	4.062	4.285	4.285	4.285			

①: F20A2, F20A3, F20A6 ②: F20A5, F20A8, F22A2, F22A3, F22A7 ③: F22A9
④: 0, F20A2, F20A3, F20A6 ⑤: F22A6, F22A2, F22A9 ⑥: F22A3

*1: Except the UK (can be used UNLEADED) and FRANCE
*2: U.K. and FRANCE only

(cont'd)

Design Specifications (4D)

(cont'd)

	ITEMS		METRIC	ENGLISH	NOTES
AIR CONDITIONER	Cooling capacity		4,650 kcal/h	18,451 BTU/h	
	-Condition: Compressor speed		27°C	81°F	
	Outside air temperature				
	Outside air humidity		50 %		
	Condenser air temperature		35°C	95°F	
Condenser air velocity		4.5 m/sec.	14.8 ft/sec.		
Blower capacity		440 m ³	15,542 cu.ft/h		
Compressor		Type	Swash-plate		
No. of cylinders			10		
Capacity			178 cc/rev.	10.9 cu.in/rev.	
Maximum speed			90-120 cc	8,800 min ⁻¹ (rpm)	
Lubricant capacity				3.0-4.0 US oz. 3.2-4.2 Imp oz.	
Condenser			Corrugated fin type		
Evaporator			Corrugated fin type		
Blower		Type	Sirocco fan		
Motor input			210 W (12 V)		
Speed control			5-speed		
Maximum capacity			500 m ³ /h	17,662 cu.ft/h	
Temperature control			Air-mix type		
Clutch		Type	Dry single-plate		
Power consumption			40W (12V) maximum		
Refrigerant		Type	R-12		
Quantity			0.80-0.85 kg	1.8-1.9 lb	
STEERING SYSTEM	Type		Rack and pinion		
	Overall ratio		16.1 : 1 <13.0 : 1>		< > : 4WS
	Turns, lock-to-lock		3.13 <2.5>		< > : 4WS
	Steering wheel diameter		375 mm	14.8 in	
Power steering fluid capacity		1.8 ℓ	1.9 US qt. 1.6 Imp qt.		
Power steering fluid		Genuine Power Steering Fluid P/N: 08208-99961			
SUSPENSION	Type		Independent double wishbone, coil spring		
	Shock absorber		Independent double wishbone, coil spring Telescopic, hydraulic (nitrogen gas-filled)		() : except KP, KT
WHEEL ALIGNMENT	Total toe		0 mm	0.0	
	Front		IN 2.0 mm	0.08 in	
	Rear		IN 3.0 mm	0.12 in	
	Camber			0°00'	
Front			-0°30'		
Rear			-0°20'		
Caster			3°00'		
BRAKE SYSTEM	Type		Front Rear		
	Pad and lining swept area (total)		2.2 ℓ (except KY) or ABS or 4WS: Solid disc		
	Front		15 in	415 cm ²	64 sq. in
	Rear		14 in	311 cm ²	48 sq. in
Drum			242 cm ²	38 sq. in	
Disc			281 cm ²	44 sq. in	
TIRES	Size/Pressure		See the tyre label attached to the driver's side rear door jamb.		
ELECTRICAL	Fuses In the anti-lock brake system fuse box		7.5A, 15A, 50A		
	In the fuse box		7.5A, 10A, 15A, 30A		
	In the relay box		7.5A, 10A, 15A, 20A, 30A, 40A, 50A, 80A		
	Headlights		High/Low		
	Turn signal lights		Front		
			Rear		
	Position lights		12V-65/55W, 55W		
	License plate lights		12V-21W		
	Buck-up lights		12V-21W		
	Stop lights		12V-5W		
	High mount brake light		12V-5W		
	Taillights		12V-21W		
	Rear fog lamp		12V-21W		
	Interior light		12V-8W		
	Door courtesy lights		12V-3.4W		
	Vanity mirror light		12V-1.8W		
	Boot light		12V-3.4W		
	Trunk light		12V-3.4W		
	Gauge lights		12V-3.4/1.4W		
	Indicator lights		12V-0.84/0.91/1.12/1.2/1.4W		
	Warning lights		12V-1.4/3.4W		
	Glove box light		12V-3.4W		
Illumination and pilot lights		12V-1.4/1.2W LED: 0.91W, 0.84W			
Heater illumination lights		12V-1.2/1.4W			

European Models

	ITEM	METRIC	ENGLISH	NOTES
WEIGHT	Carb weight			
	2.0 l CARB M/T DX	1,225 kg	2,701 lb	KG
		1,235 kg	2,723 lb	KS
	EX	1,225 kg	2,701 lb	KB, KF*
		1,230 kg	2,712 lb	KG, KF
		1,240 kg	2,734 lb	KE, KS
	EX with ABS	1,242 kg	2,738 lb	KB, KF*
		1,247 kg	2,749 lb	KG, KF
		1,257 kg	2,771 lb	KE, KS
	2.0 l CARB A/T DX	1,250 kg	2,756 lb	KG
		1,260 kg	2,778 lb	KS
	EX	1,250 kg	2,756 lb	KB, KF*
		1,255 kg	2,767 lb	KG
		1,265 kg	2,765 lb	KE, KS
	EX with ABS	1,267 kg	2,793 lb	KB, KF*
		1,272 kg	2,804 lb	KG
		1,282 kg	2,826 lb	KE, KS
	2.0 l PGM-FI M/T EXi	1,245 kg	2,745 lb	KB, KF*, KS
		1,250 kg	2,756 lb	KG
		1,255 kg	2,767 lb	KF
		1,260 kg	2,778 lb	KE
	EXi with ABS	1,262 kg	2,782 lb	KB, KF*, KS
		1,267 kg	2,793 lb	KG
		1,272 kg	2,804 lb	KF
		1,285 kg	2,833 lb	KX
		1,277 kg	2,815 lb	KE
	2.0 l PGM-FI A/T EXi	1,270 kg	2,800 lb	KB, KF*, KS
		1,275 kg	2,810 lb	KG
		1,280 kg	2,822 lb	KF
		1,285 kg	2,833 lb	KE
	EXi with ABS	1,287 kg	2,837 lb	KB, KF*, KS
		1,292 kg	2,848 lb	KG
	1,297 kg	2,859 lb	KF	
	1,310 kg	2,888 lb	KX	
	1,302 kg	2,870 lb	KE	
2.2 l M/T EXT	1,310 kg	2,888 lb	KG, KX	
	1,305 kg	2,877 lb	KF	
	1,315 kg	2,899 lb	KE, KS	
EXT with 4WS	1,345 kg	2,965 lb	KG, KX	
	1,340 kg	2,954 lb	KF	
	1,350 kg	2,976 lb	KE	
2.2 l A/T EXT	1,335 kg	2,943 lb	KG, KX	
	1,330 kg	2,932 lb	KF	
	1,340 kg	2,954 lb	KE, KS	
EXT with 4WS	1,370 kg	3,020 lb	KG, KX	
	1,365 kg	3,009 lb	KF	
	1,375 kg	3,031 lb	KE	
Weight Distributions (Front/Rear)				
2.0 l CARB M/T DX	750/475 kg	1,635/1,047 lb	KG	
	755/480 kg	1,664/1,058 lb	KS	
EX	745/480 kg	1,642/1,058 lb	KB, KF*	
	750/480 kg	1,635/1,058 lb	KG, KF	
	775/485 kg	1,664/1,069 lb	KE, KS	
EX with ABS	760/482 kg	1,675/1,063 lb	KB, KF*	
	765/482 kg	1,687/1,063 lb	KG, KF	
	770/487 kg	1,698/1,074 lb	KE, KS	
2.0 l CARB A/T DX	775/475 kg	1,709/1,047 lb	KG	
	780/480 kg	1,720/1,058 lb	KS	
EX	770/480 kg	1,698/1,058 lb	KB, KF*	
	775/480 kg	1,709/1,058 lb	KG	
	780/485 kg	1,720/1,069 lb	KE, KS	
EX with ABS	785/482 kg	1,731/1,063 lb	KB, KF*	
	790/482 kg	1,742/1,063 lb	KG	
	795/487 kg	1,753/1,074 lb	KE, KS	
2.0 l PGM-FI M/T EXi	755/490 kg	1,664/1,080 lb	KB, KF*, KS	
	755/495 kg	1,664/1,091 lb	KG	
	760/495 kg	1,675/1,091 lb	KF	
	765/495 kg	1,687/1,091 lb	KE	
EXi with ABS	770/492 kg	1,698/1,085 lb	KB, KF*, KS	
	770/497 kg	1,698/1,096 lb	KG	
	775/497 kg	1,710/1,096 lb	KF	
	780/505 kg	1,720/1,113 lb	KX	
	780/497 kg	1,720/1,096 lb	KE	

KF*: French territory except main land.

Design Specifications (4D)

European Models (cont'd)

	ITEM	METRIC	ENGLISH	NOTES
WEIGHT (cont'd)	Weight Distributions (Front/Rear) 2.0 ℓ PGM-FI A/T EXi	780/490 kg	1,720/1,080 lb	KB, KF*, KS KG
		780/495 kg	1,720/1,091 lb	
	EXi with ABS	785/495 kg	1,731/1,091 lb	KB, KF*, KS KG KF KE
		790/495 kg	1,742/1,091 lb	
		795/492 kg	1,753/1,085 lb	
		795/497 kg	1,753/1,096 lb	
		800/497 kg	1,764/1,096 lb	
		805/505 kg	1,775/1,113 lb	
	2.2 ℓ M/T EXT	805/505 kg	1,775/1,113 lb	KG, KX KF KE, KS KG, KX KF KE
		805/500 kg	1,775/1,102 lb	
		810/505 kg	1,786/1,113 lb	
		805/540 kg	1,775/1,190 lb	
		805/535 kg	1,775/1,179 lb	
		810/540 kg	1,786/1,190 lb	
	2.2 ℓ A/T EXT	830/505 kg	1,830/1,113 lb	KG, KX KF KE, KS KG, KX KF KE
		830/500 kg	1,830/1,102 lb	
		835/505 kg	1,841/1,113 lb	
		830/540 kg	1,830/1,190 lb	
830/535 kg		1,830/1,179 lb		
835/540 kg		1,843/1,190 lb		

KF*: French territory except main land.

Except European Models

	ITEM	METRIC	ENGLISH	NOTES		
WEIGHT	Carb Weight 2.0 ℓ CARB M/T	LX	1,265 kg	2,786 lb	KY	
		EX	1,285 kg	2,830 lb	KY	
		EX*1	1,300 kg	2,863 lb	KY	
	2.0 ℓ CARB A/T	LX	1,290 kg	2,841 lb	KY	
		EX	1,310 kg	2,885 lb	KY	
		EX*1	1,325 kg	2,918 lb	KY	
	2.2 ℓ PGM-FI M/T	EXi	1,320 kg	2,907 lb	KY	
		LXi	1,270 kg	2,979 lb	KQ	
		EXi	1,280 kg	2,819 lb	KQ	
		EXi*2	1,325 kg	2,918 lb	KQ	
	2.2 ℓ PGM-FI A/T	EXi	1,350 kg	2,974 lb	KY	
		LXi	1,300 kg	2,663 lb	KQ	
		EXi	1,310 kg	2,885 lb	KQ	
		EXi*2	1,355 kg	2,985 lb	KQ	
	Weight Distributions (Front/Rear)	2.0 ℓ CARB M/T	LX	760/505 kg	1,674/1,112 lb	KY
			EX	770/515 kg	1,690/1,134 lb	KY
			EX*1	775/525 kg	1,707/1,156 lb	KY
		2.0 ℓ CARB A/T	LX	790/500 kg	1,740/1,101 lb	KY
			EX	795/515 kg	1,751/1,134 lb	KY
			EX*1	800/525 kg	1,762/1,156 lb	KY
		2.2 ℓ PGM-FI M/T	EXi	790/530 kg	1,740/1,167 lb	KY
			LXi	755/515 kg	1,663/1,134 lb	KQ
			EXi	765/515 kg	1,685/1,134 lb	KQ
			EXi*2	780/545 kg	1,645/1,200 lb	KQ
		2.2 ℓ PGM-FI A/T	EXi	820/530 kg	1,806/1,167 lb	KY
			LXi	790/510 kg	1,740/1,123 lb	KQ
			EXi	800/510 kg	1,762/1,123 lb	KQ
			EXi*2	815/540 kg	1,795/1,190 lb	KQ

*1: Cars with sunroof, *2: Cars with 4WS and ABS.

Design Specifications (5D)

	ITEMS	METRIC	ENGLISH	NOTES			
DIMENSIONS	Overall length	4,740 mm	186.6 in	European model Australian model European model Australian model			
	Overall width	4,745 mm 1,695 mm	186.8 in 66.7 in				
	Overall height	1,715 mm	67.5 in				
	Wheel base	1,400 mm	55.1 in				
	Track	2,720 mm	107.1 in				
		Front Rear	1,475 mm 1,480 mm		58.1 in 58.3 in		
		Ground clearance	160 mm		6.3 in		
WEIGHT	Seating capacity		Five				
	Turning circle diameter (at tire center)	11.6 m	38.1 ft				
WEIGHT	Curb weight	MT without A/C MT with A/C	1,405 kg 1,427 kg	3,097 lb 3,146 lb			
		AT without A/C AT with A/C	1,430 kg 1,452 kg	3,153 lb 3,201 lb			
	Max permissible weight		1,920 kg	4,233 lb			
ENGINE	Type	Water-cooled, 4-stroke OHC 4-cylinder In-line transverse					
	Cylinder arrangement	85 x 95 mm 3.35 x 3.74 in					
	Bore and stroke	2,156 cm ³ 131.5 cu. in					
	Displacement	F22A7, F22A8: 9.8, F22A6: 8.8					
	Compression ratio	Belt driven, single overhead camshaft					
	Valve train	Forced and wet sump, trochoid pump					
	Lubrication system	F22A7, F22A8 engine: Premium unleaded grade gasoline with 95 R.O.N. or higher F22A6 engine: Unleaded grade gasoline with 91 R.O.N. or higher					
Fuel required							
STARTER	Type	Gear reduction		< > KE			
	Normal output	1.6 kW < 1.4 kW >					
	Nominal voltage	12 V					
	Hour rating	30 seconds					
	Direction of rotation	Clockwise as viewed from gear end					
	Weight	NIPPONDENSO Mitsuba 1.6 kW Mitsuba 1.4 kW	4.75 kg 3.7 kg 3.5 kg		10.5 lb 8.2 lb 7.7 lb		
TRANSMISSION	Clutch	MT AT	Single plate dry, diaphragm spring Torque converter with lock-up clutch				
	Clutch lining area		203 cm ²	31.5 sq. in			
	Transmission	MT AT	Synchronized 5-speed forward, 1 reverse Electronically controlled dual range 4-speed forward automatic, 1 reverse 1 : 1 (Direct)				
	Primary reduction ratio						
	Gear ratio		Gear	MT ①	MT ②	AT ③	AT ④
			1st	3.307	3.307	2.705	2.705
			2nd	1.809	1.809	1.366	1.482
			3rd	1.230	1.230	1.057	1.057
			4th	0.933	0.903	0.731	0.707
			5th	0.757	0.705	—	—
		Reverse	3.000	3.000	2.047	2.047	
	Final	4.266	4.266	4.285	4.285		

- ① F22A7 engine
② F22A6 engine
③ F22A8 engine
④ F22A6 engine


Design Specifications (5D)

	ITEMS		METRIC	ENGLISH	NOTES
AIR CONDITIONER	Cooling capacity		4,650 kcal/h	18,451 BTU/h	
	-Condition: Compressor speed		1,900 min ⁻¹ (rpm)		
	Outside air temperature		27°C	81°F	
	Outside air humidity		50 %		
	Condenser air temperature		35°C	95°F	
Condenser air velocity		4.5 m/sec.	14.8 ft/sec.		
Blower capacity		440 m ³	15,542 cu.ft/h		
Compressor Type		Swash-plate			
No. of cylinders		10			
Capacity		178 cc/rev.	10.9 cu.in/rev.		
Maximum speed		8,800 min ⁻¹ (rpm)			
Lubricant capacity		90-120 cc	3.0-4.0 US oz.	3.2-4.2 Imp oz.	
Condenser		Corrugated fin type			
Evaporator		Corrugated fin type			
Blower Type		Sirocco fan			
Motor input		210 W (12 V)			
Speed control		5-speed			
Maximum capacity		500 m ³ /h	17,662 cu.ft/h		
Temperature control		Air-mix type			
Clutch		Dry single-plate			
Power consumption		40W (12V) maximum			
Refrigerant Type		R-12			
Quantity		0.80-0.85 kg	1.8-1.9		
STEERING SYSTEM	Type		Rack and pinion		
	Overall ratio		16.1 : 1		
	Turns, lock-to-lock		3.13		
	Steering wheel diameter		375 mm	14.8 in	
Power steering fluid capacity		1.8 ℓ	1.9 US qt.	1.6 Imp qt.	
Power steering fluid		Genuine Power Steering Fluid P/N: 08208-99961			
SUSPENSION	Type	Front	Independent double wishbone, coil spring		
		Rear	Independent double wishbone, coil spring		
	Shock absorber	Front and rear	Telescopic, hydraulic nitrogen gas-filled		
WHEEL ALIGNMENT	Total toe	Front	0 mm	0 in	
		Rear	IN 2.0 mm	0.08 in	
	Camber	Front	0°00'		
		Rear	-0°30'		
	Caster	Front	3°00'		
BRAKE SYSTEM	Type	Front	Ventilated disc		
		Rear	Solid disk		
	Pad and lining swept area (total)	Front	370 cm ²	64 sq. in	
		Rear	277 cm ²	44 sq. in	
TIRES	Size/Pressure		See the tyre label attached to the driver's side rear door jamb.		
ELECTRICAL	Fuses In the fuse box		7.5A, 10A, 15A, 20A, 30A		
	In the relay box		7.5A, 10A, 15A, 20A, 30A, 50A, 80A		
	Headlights	Outside	12V-60/55W		
		Inside	12V-55W		
	Turn signal lights	Front	12V-21W		
		Rear	12V-21W		
		Side	12V-5W		
	Position lights		12V-5W		
	License plate light		12V-5W		
	Buck-up lights		12V-21W		
	Stop/Taillight		12V-21/5W		
	Rear fog lamp		12V-21W		
	Interior lights		12V-8W		
	Door courtesy lights		12V-3.4W		
	Luggage area light		12V-5W		
	High mount brake light		12V-45CP		
	Gauge lights		12V-3.4/1.4W		
	Indicator lights		12V-0.84/0.91/1.12/1.4W		
	Warning lights		12V-1.4/3.4W		
	Glove box light		12V-3.4W		
	Illumination and pilot lights		12V-1.4/1.2W LED: 0.91W, 0.84W		
Heater illumination lights		12V-1.2/1.4W			

KQ only

Body Specifications


4-door

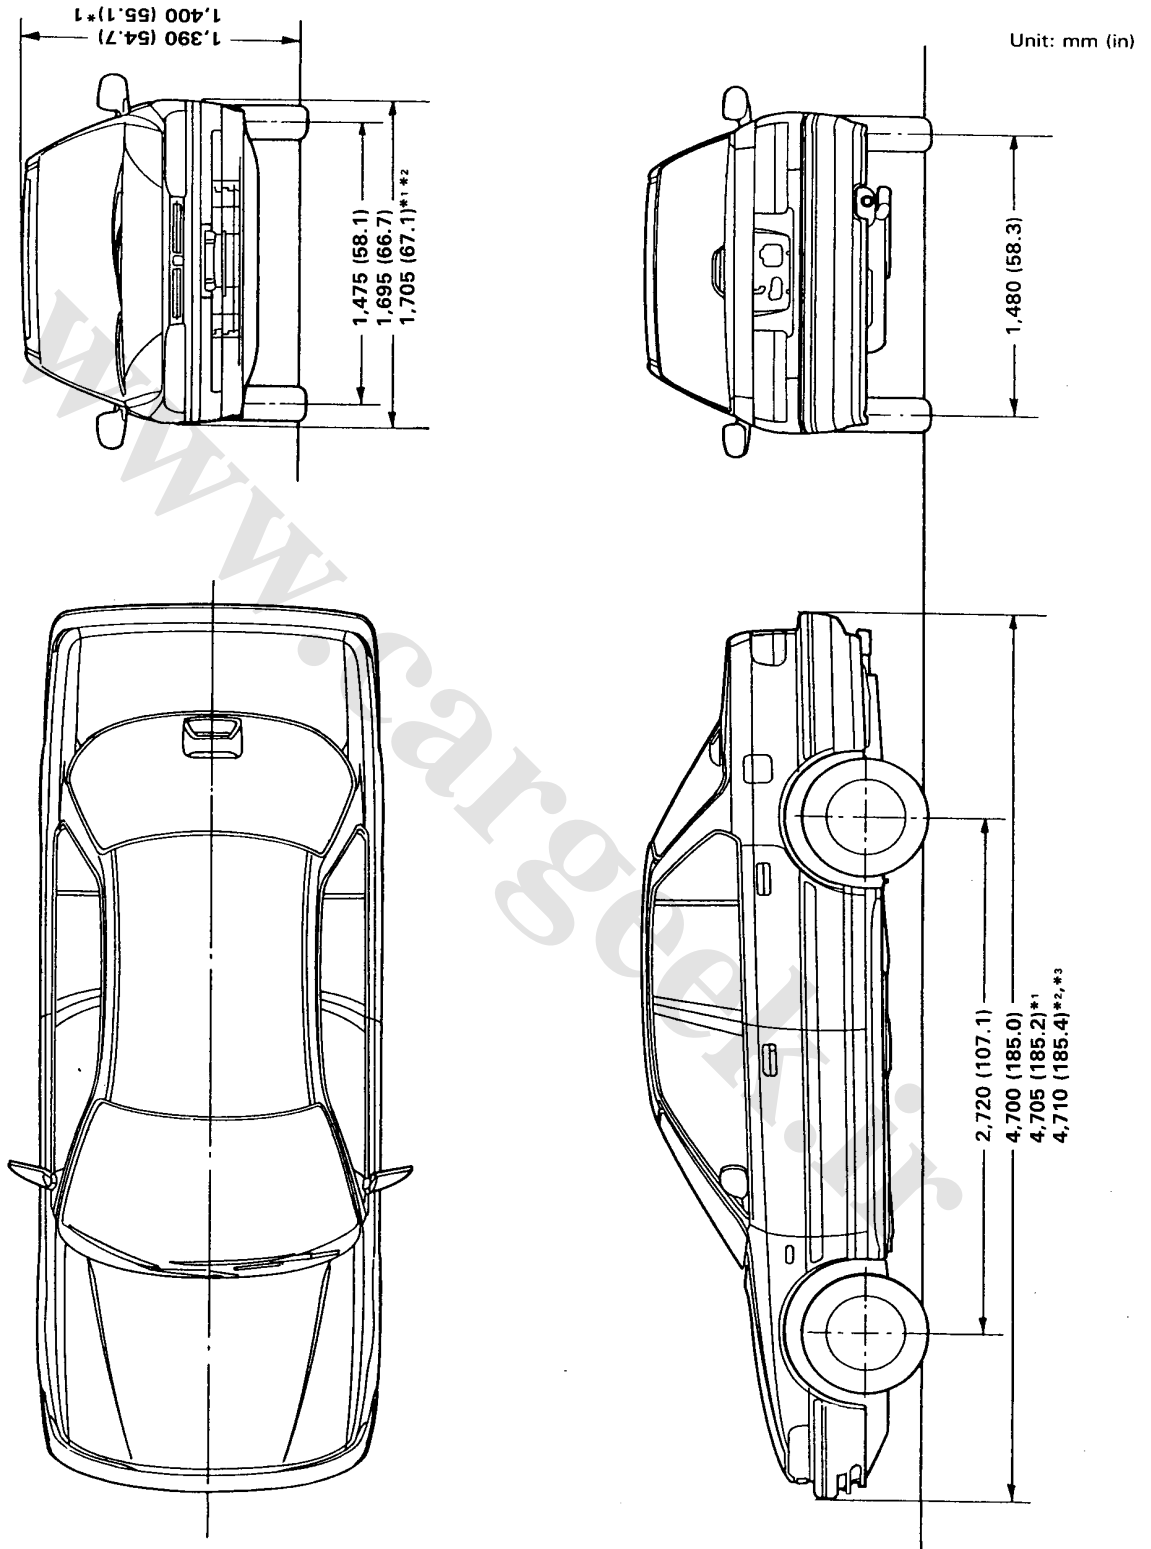

*1: Gulf model *2: Australian model *3: Finish model

5-door

Unit: mm (in.)

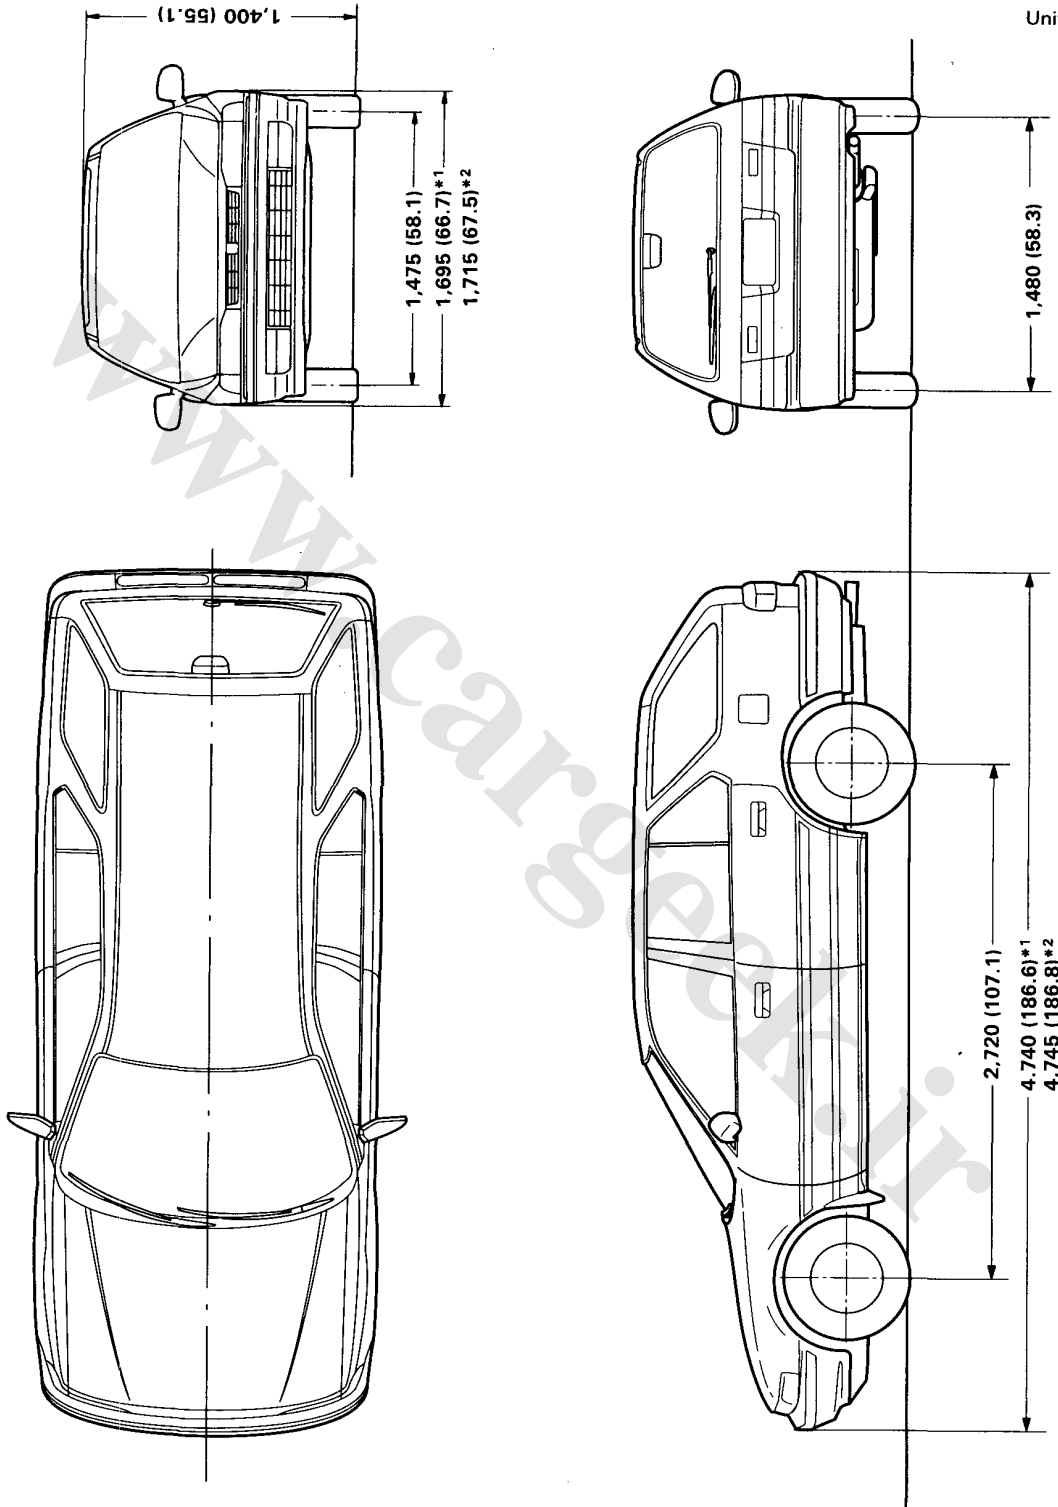

*1: European model *2: Australian model

Timing Belt and Balancer Belt

Special Tools

Illustrated Index

Timing Belt Inspection

Timing Belt Tension Adjustment

Timing Balancer Belt Inspection




Positioning Timing Belt

Replacement

www.cargeek.ir

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07JAA-0010200	Socket Wrench 19 mm	1	
②	07JAB-0010200	Handle	1	
③	07MAB-PY30100	Pulley Holder Attachment HEX 50 mm	1	
④	07LAG-PT20100	Balancer Shaft Lock Pin	1	

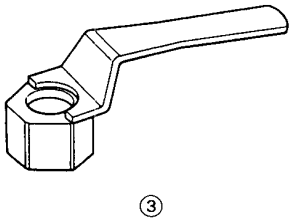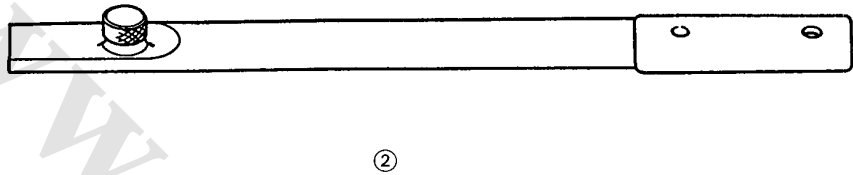




Timing Belt and Timing Balancer Belt

Illustrated Index

NOTE:

- Refer to page 5-6 for positioning crank and pulley before installing timing belt.
- Before removing, mark direction of rotation.

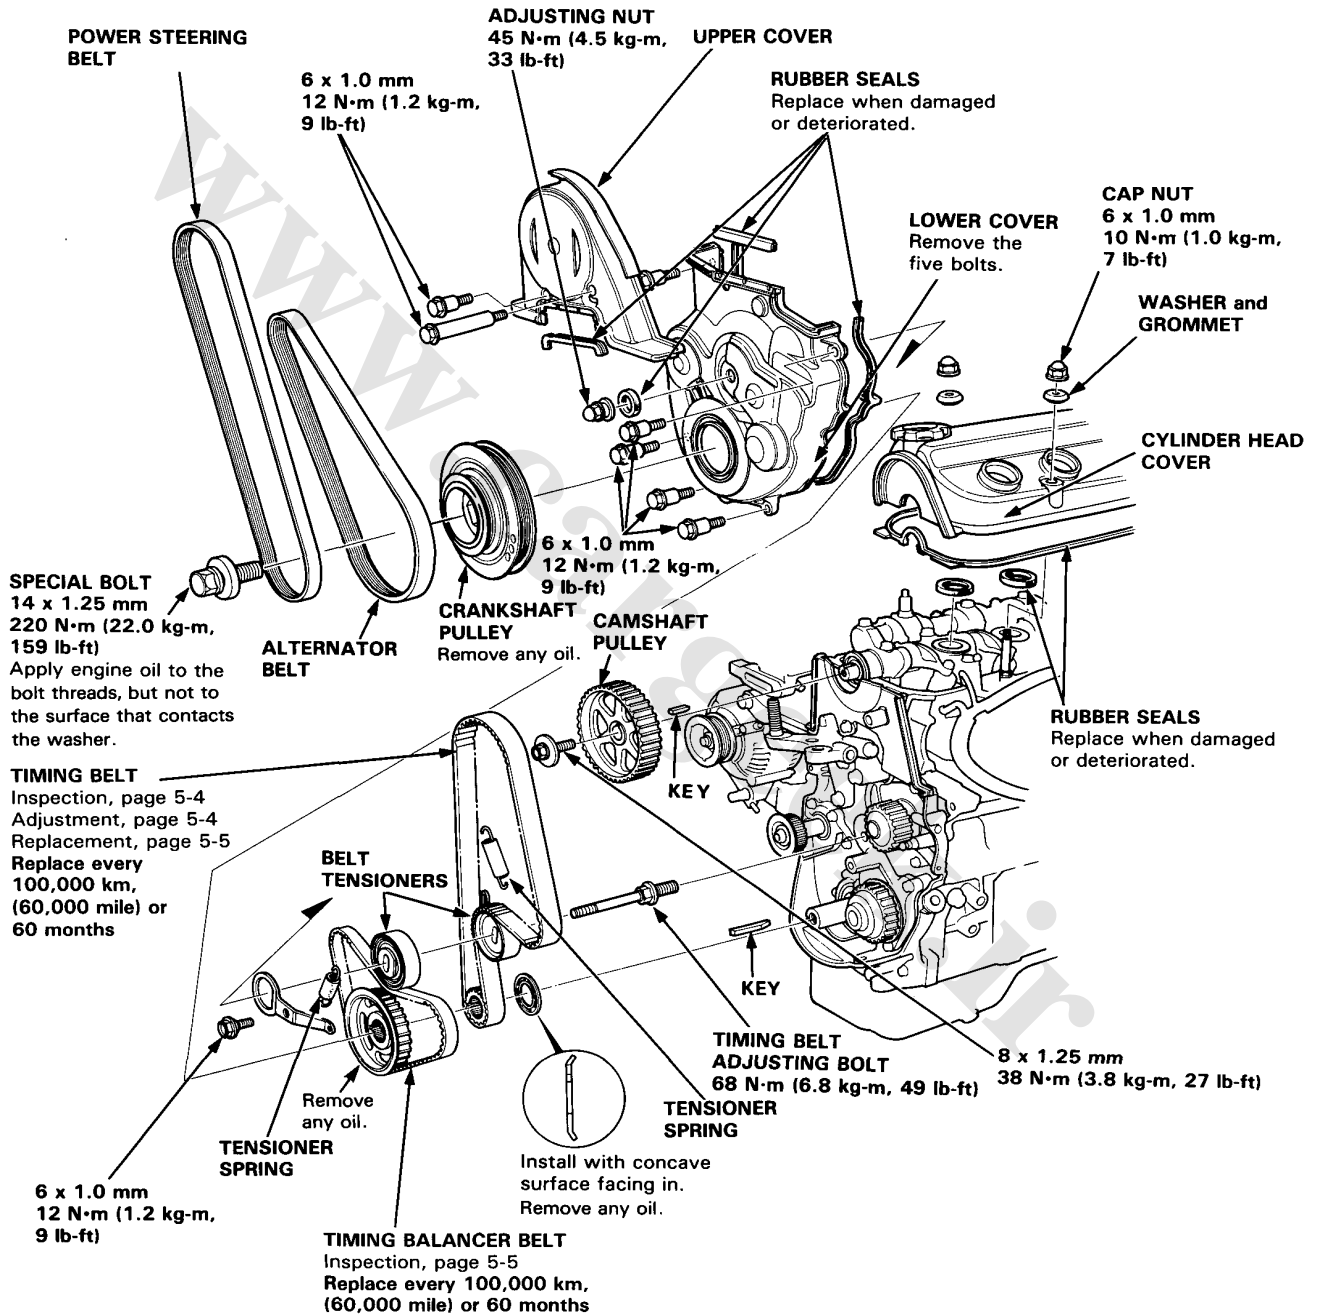

Timing Belt



Inspection

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the cylinder head cover.
2. Remove the cylinder head cover.
3. Remove the timing belt upper cover.
4. Inspect the timing belt for cracks and oil soaking.

NOTE:

- Replace the belt if oil soaked.
- Remove any oil or solvent that gets on the belt.

Inspect this area for wear.

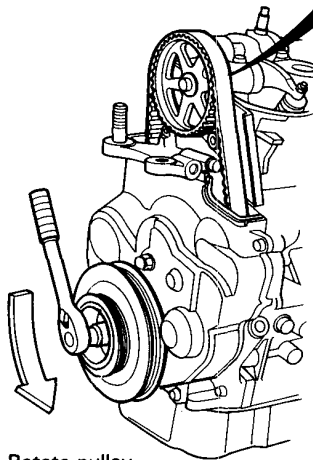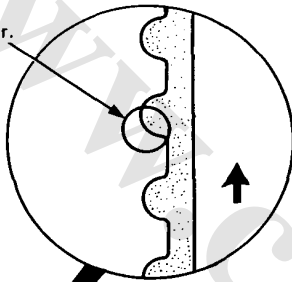

Rotate pulley and inspect belt.

5. After inspecting, retorque the crank pulley bolt to 220 N·m (22.0 kg·m, 159 lb·ft).

Tension Adjustment


CAUTION: Always adjust timing belt tension with the engine cold.

NOTE:

- The adjuster is spring-loaded to properly tension the belt. Do not apply any extra pressure to the belt while performing the adjustment.
- Inspect the timing balancer belt before adjusting the belt tension.
- Do not loosen the adjusting nut more than one full turn.

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the cylinder head cover.
2. Remove the cylinder head cover.
3. Set the No. 1 piston at TDC (page 5-6)
4. Loosen the adjusting nut 2/3-1 turn, then tighten it.

ADJUSTING NUT
45 N·m
(4.5 kg·m, 33 lb·ft)

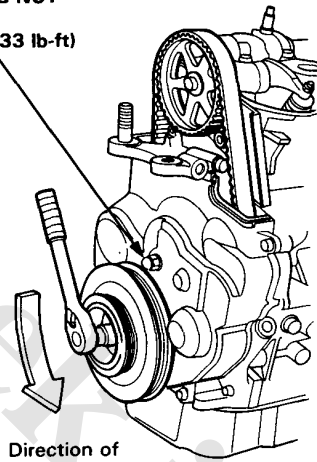

Direction of Rotation.

5. Rotate the crankshaft counterclockwise 3-teeth on the camshaft pulley, then reloosen the adjusting nut to create tension on the timing belt.
6. Tighten the adjusting nut.
7. After adjusting, retorque the crank pulley bolt to 220 N·m (22.0 kg·m, 159 lb·ft).



Timing Balancer Belt



Inspection

1. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the cylinder head cover.
2. Remove the cylinder head cover.
3. Remove the timing belt upper cover.
4. Remove the crankshaft pulley.
5. Remove the timing belt lower cover.
6. Install the crankshaft pulley.
7. Inspect the timing balancer belt for cracks and oil soaking.

NOTE:

- Replace the belt if oil soaked.
- Remove any oil or solvent that gets on the belt.

Inspect this area for wear.

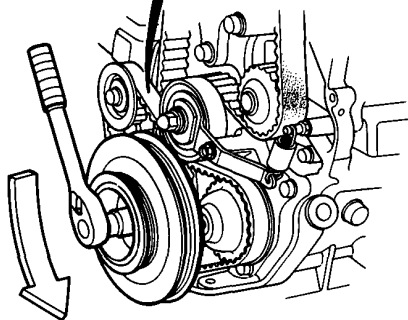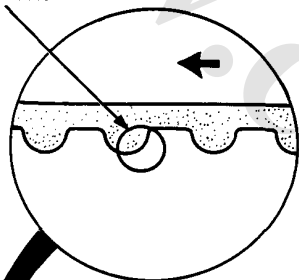

Rotate pulley and inspect belt.

8. After inspecting, retorque the crank pulley bolt to 220 N·m (22.0 kg-m, 159 lb-ft).

NOTE: Refer to page 5-10 for timing balancer belt tension adjustment.



Timing Belt

Positioning Crankshaft Before Installing Timing Belt

NOTE:

- Install the timing belt with the No. 1 piston at TDC (Top Dead Center) on the compression stroke.
- After installing, retorque the crank pulley bolt to 220 N·m (22.0 kg·m, 159 lb·ft).


CAMSHAFT TDC POSITION:

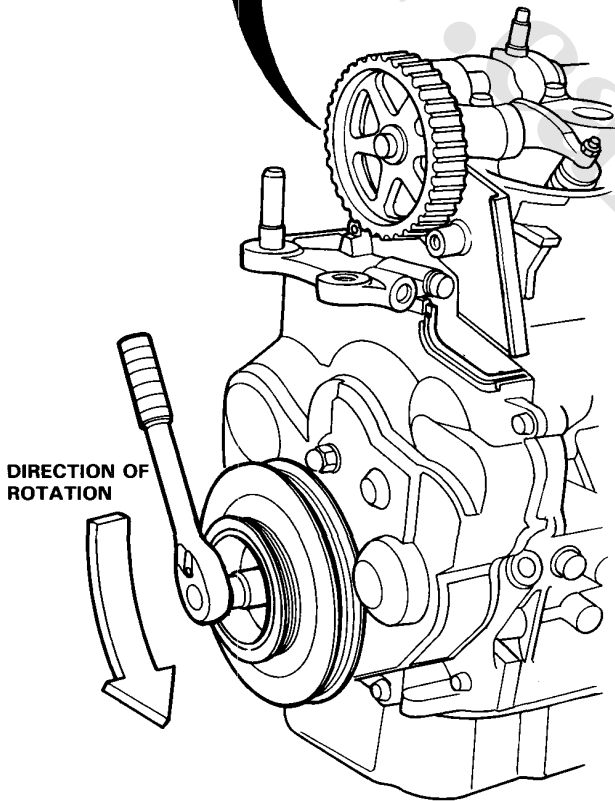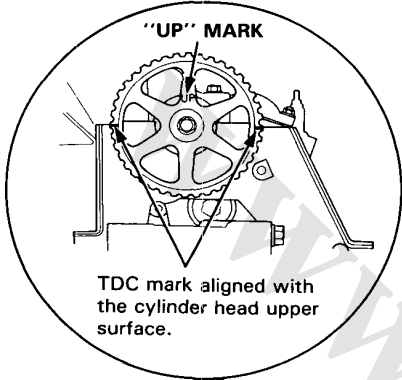


NOTE: When turning the crankshaft with a socket wrench, install the crankshaft pulley and the pulley bolt.

CRANKSHAFT TDC POSITION:

MANUAL TRANSMISSION:

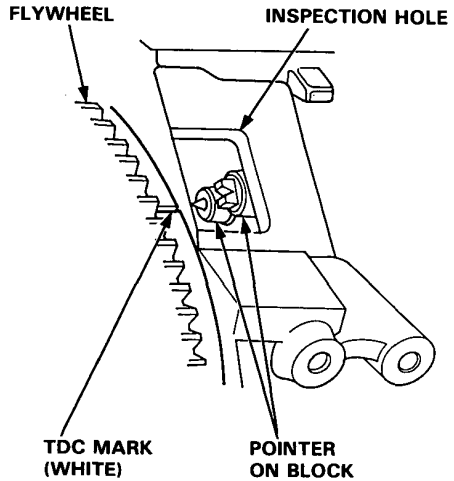

AUTOMATIC TRANSMISSION:

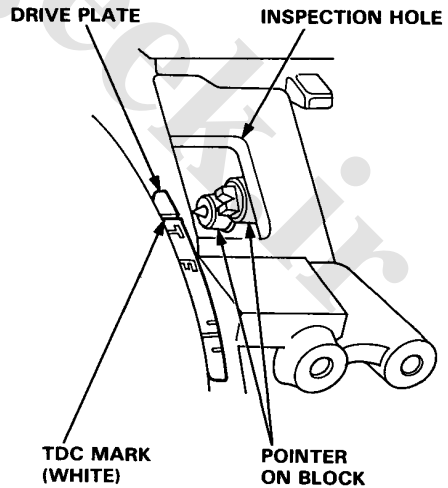




Timing Belt and Timing Balancer Belt

Replacement

NOTE: Turn the crankshaft so that the No. 1 cylinder is at TDC (page 5-6)


1. Remove the splash shield.

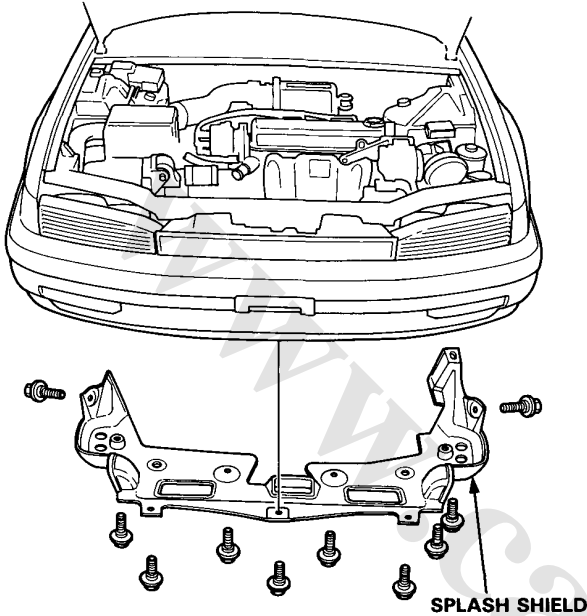

2. Disconnect the connector, then remove the cruise control actuator.

NOTE:


- Do not disconnect the control cable.
- Take care not to bend the cable when removing the actuator. Always replace a kinked cable with a new one.

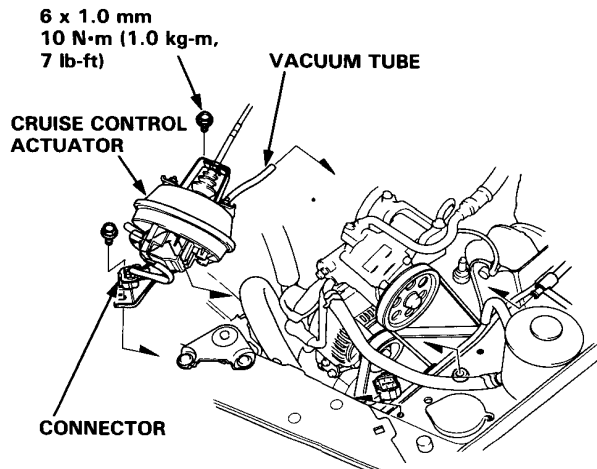

3. Remove the mounting bolt, nut and V-belt from the power steering pump, then remove the pipe. Pull the pump away from the mounting bracket.


NOTE:

- Plug the pipe and the pump port.
- Do not disconnect the hose.
- After installing, adjust the tension of the power steering belt.

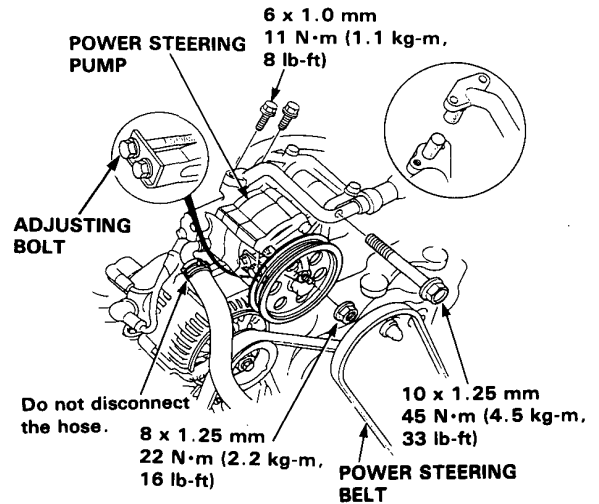

4. Disconnect the alternator terminal and the connector, then remove the engine wire harness from the cylinder head cover.
5. Loosen the alternator mounting bolt, nut and the adjusting nut, then remove the alternator belt or air conditioner belt (cars equipped with air conditioner).

NOTE: After installing, adjust the tension of the alternator belt or air conditioner belt.

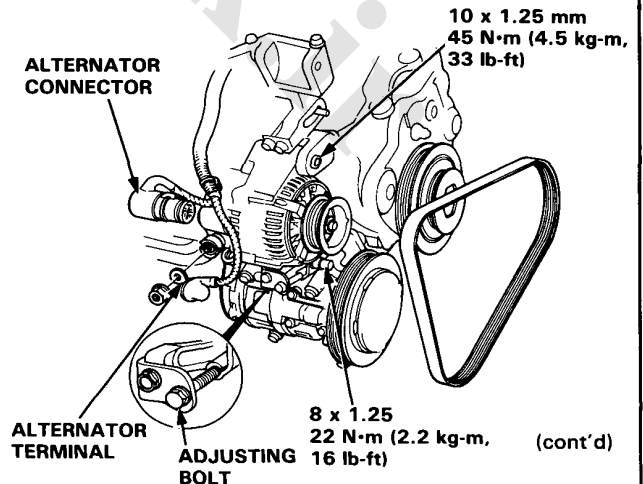

Special Tools

Compound Locations

System Description

Vacuum Connections

Electrical Connections

Troubleshooting

Self - diagnostic Procedure

PGM - CARB Control System

Symptom - to System Chart

Carburetor

Idle Speed/Mixture


Emission Control System







Tailpipe Emission

www.cargeek.ir

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Remark
①	07JAZ—SH20100	R.P.M. Connecting Adaptor	 Component Tools
②	07LAJ—PT30100 or 07LAJ—PT3010A	Test Harness	
②	07LAJ—PT3010A	R.P.M. Connecting Adaptor	
③	07LAZ—PT30100	R.P.M. Connecting Adaptor	
③-1	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	
③-2	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	
④	07411—0020000	Digital Circuit Tester	

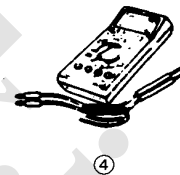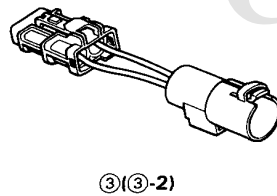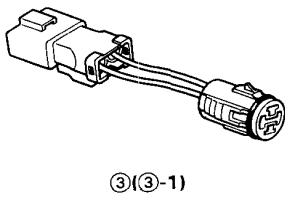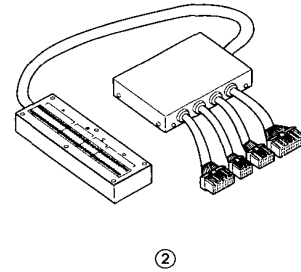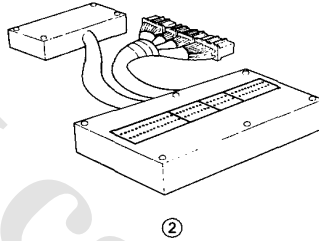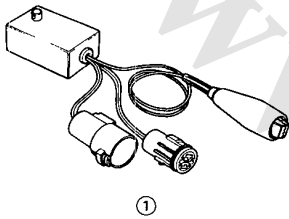




Component Locations

Index


[KF with CATA]

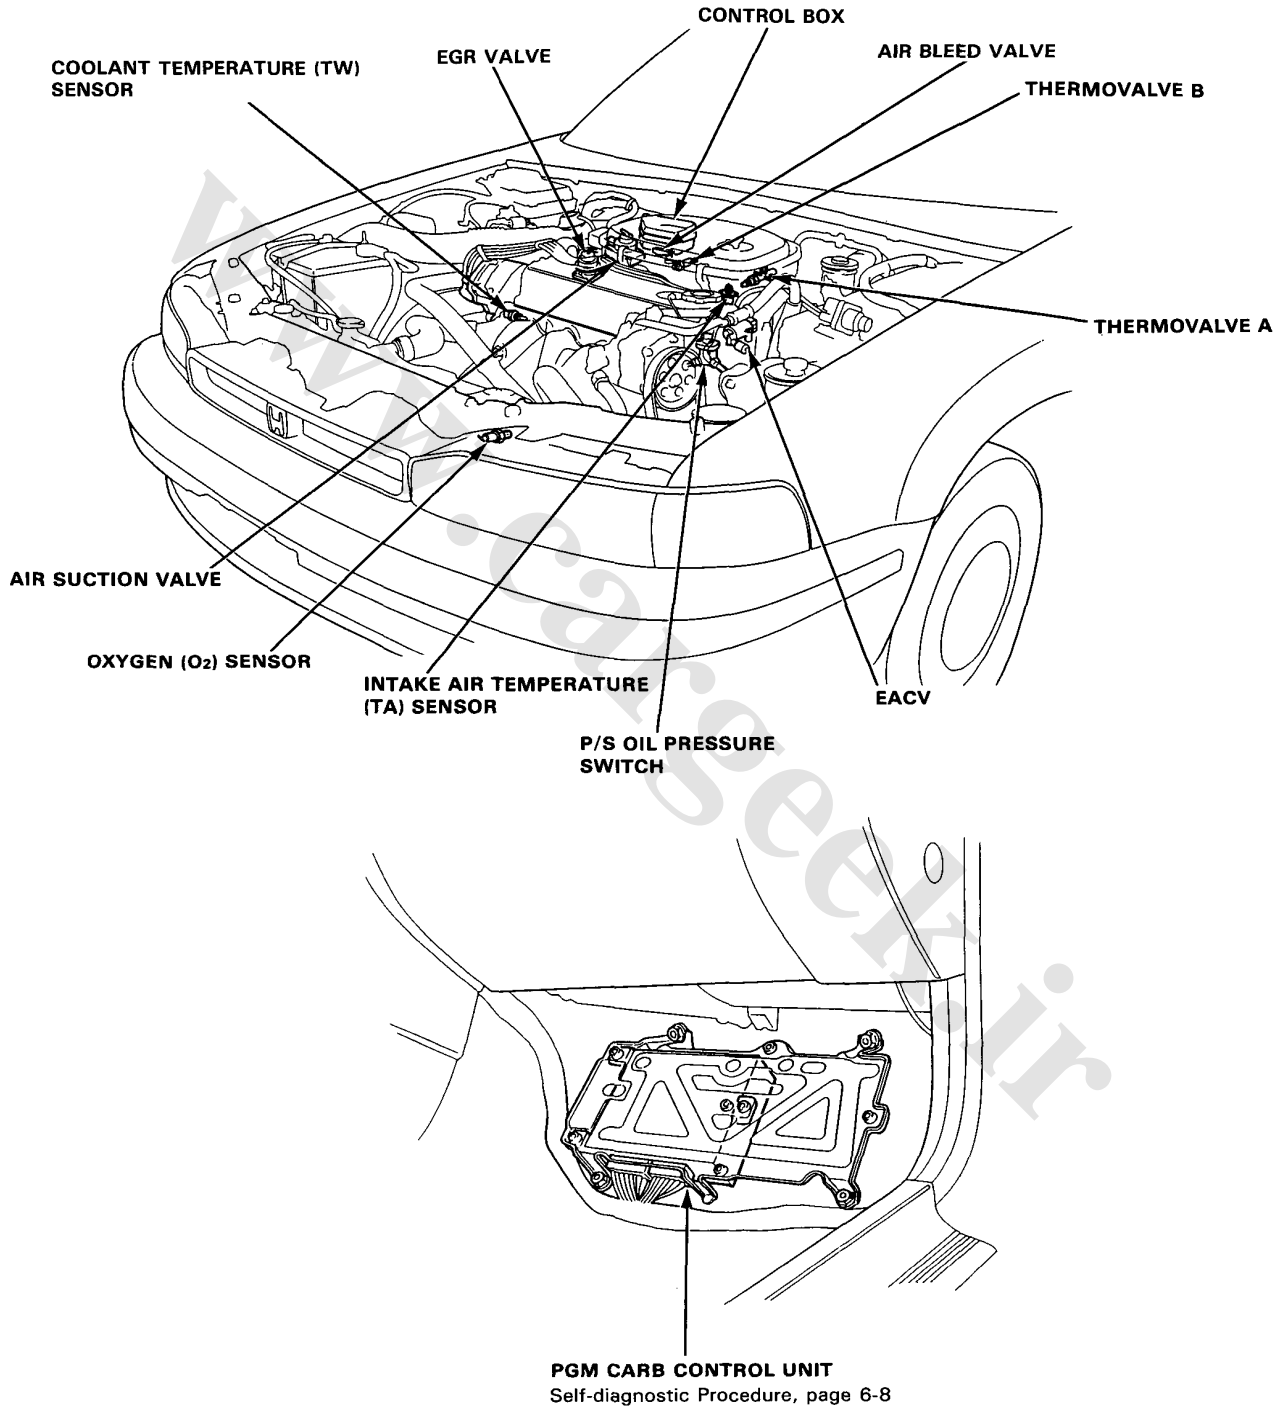

System Description


Vacuum Connections

[KF with CATA]

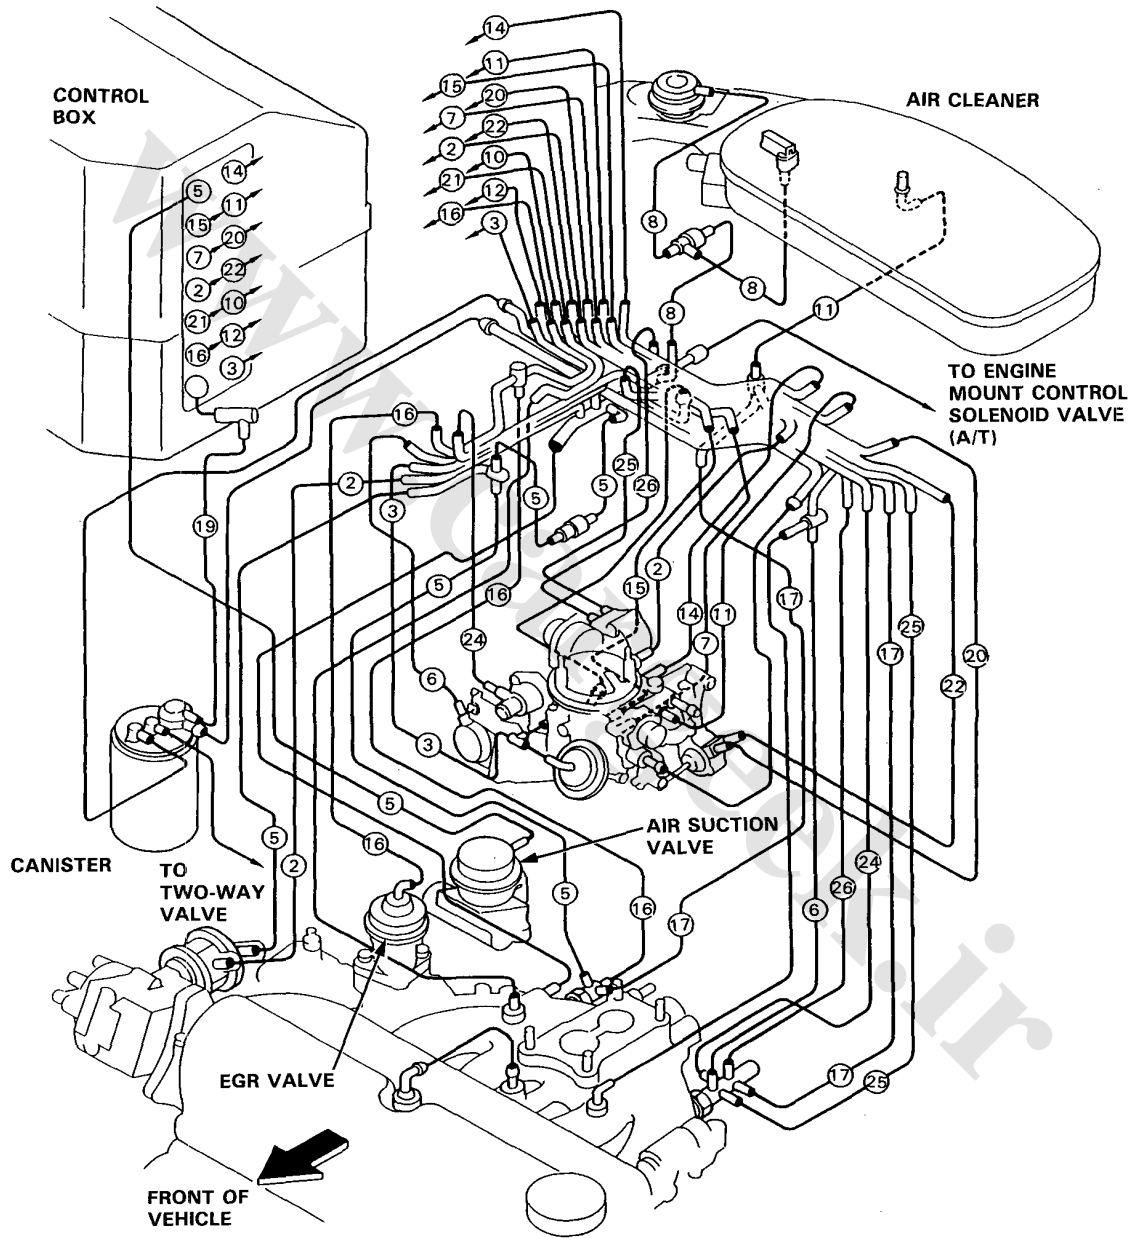




Control Box
[KF with CATA]

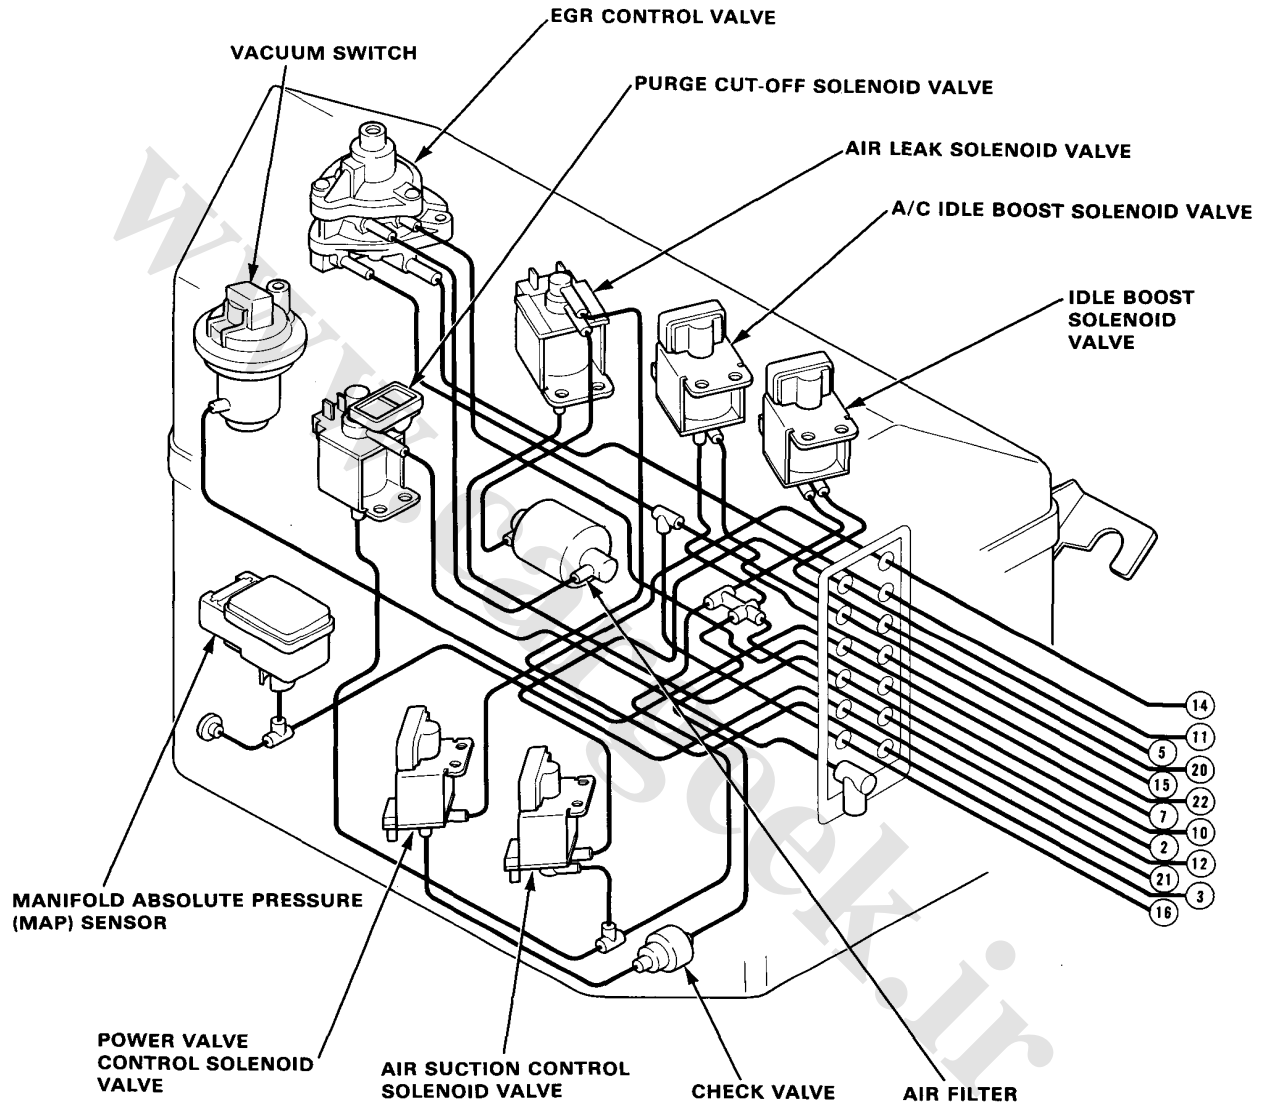

System Descriptions

Vacuum Connections

[KF with CATA]

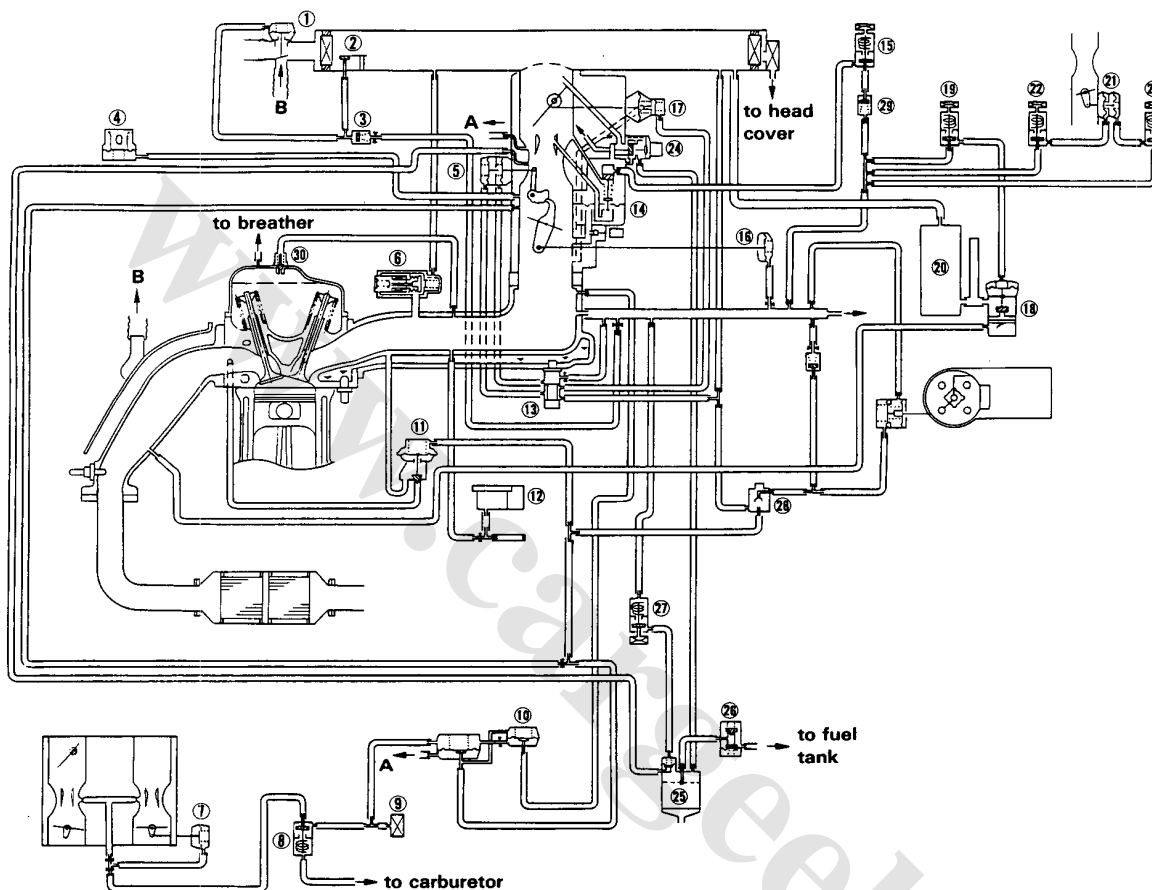

- ① AIR CONTROL DIAPHRAGM
- ② AIR BLEED VALVE
- ③ CHECK VALVE
- ④ VACUUM SWITCH
- ⑤ FAST IDLE UNLOADER
- ⑥ EACV
- ⑦ SECONDARY DIAPHRAGM
- ⑧ AIR LEAK SOLENOID VALVE
- ⑨ AIR FILTER
- ⑩ EGR CONTROL VALVE
- ⑪ EGR VALVE
- ⑫ MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ⑬ THERMOVALVE A
- ⑭ POWER VALVE
- ⑮ POWER VALVE CONTROL SOLENOID VALVE


- ⑯ THROTTLE CONTROLLER
- ⑰ CHOKE OPENER
- ⑱ AIR SUCTION VALVE
- ⑲ AIR SUCTION CONTROL SOLENOID VALVE
- ⑳ AIR CHAMBER
- ㉑ IDLE BOOST THROTTLE CONTROLLER
- ㉒ IDLE BOOST SOLENOID VALVE
- ㉓ A/C IDLE BOOST SOLENOID VALVE
- ㉔ AIR VENT CUT-OFF SOLENOID VALVE
- ㉕ CANISTER
- ㉖ TWO-WAY VALVE
- ㉗ PURGE CUT-OFF SOLENOID VALVE
- ㉘ THERMOVALVE B
- ㉙ CHECK VALVE
- ㉚ PCV VALVE



System Descriptions

Electrical Connections


[KF with CATA]

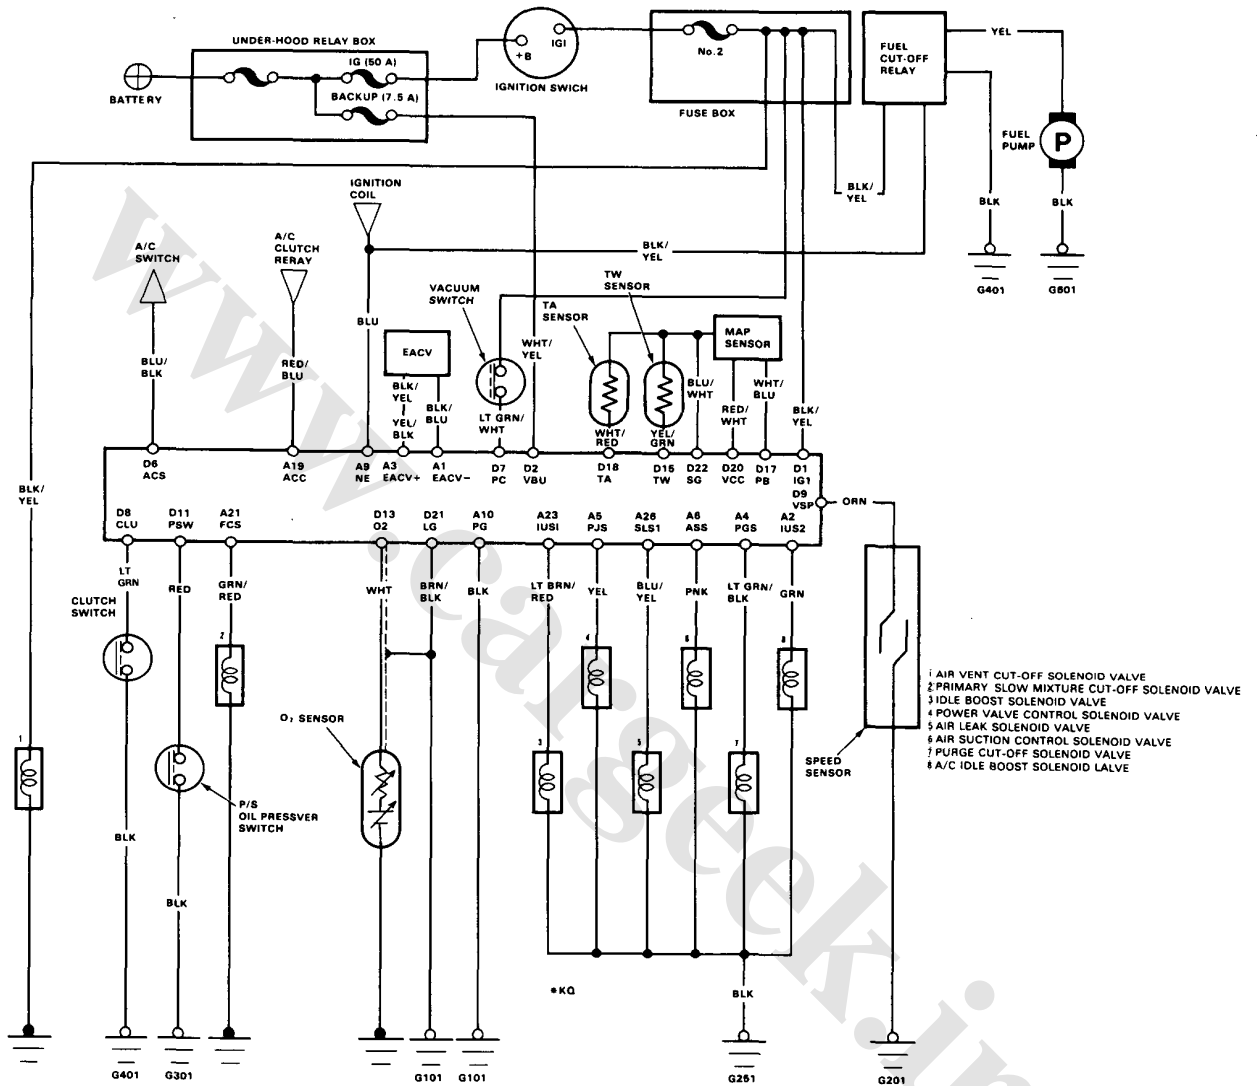

- 1 AIR VENT CUT-OFF SOLENOID VALVE
- 2 PRIMARY SLOW MIXTURE CUT-OFF SOLENOID VALVE
- 3 IDLE BOOST SOLENOID VALVE
- 4 POWER VALVE CONTROL SOLENOID VALVE
- 5 AIR LEAK SOLENOID VALVE
- 6 AIR SUCTION CONTROL SOLENOID VALVE
- 7 PURGE CUT-OFF SOLENOID VALVE
- 8 A/C IDLE BOOST SOLENOID VALVE

A1 A3 A5 A7 A9 A11 A13 A15 A17 A19 A21 A23 A25

D1 D3 D5 D7 D9 D11 D13 D15 D17 D19 D21



A2 A4 A6 A8 A10 A12 A14 A16 A18 A20 A22 A24 A26


D2 D4 D6 D8 D10 D12 D14 D16 D18 D20 D22

TERMINAL LOCATION


Troubleshooting

Self-Diagnostic Procedure

Turn the ignition on, pull down the passenger's side carpet from under the dashboard and observe the LED on the top of the control unit. The LED indicates a system failure code by its blinking frequency. The control unit LED can indicate any number of simultaneous component problems by blinking separate codes, one after another.

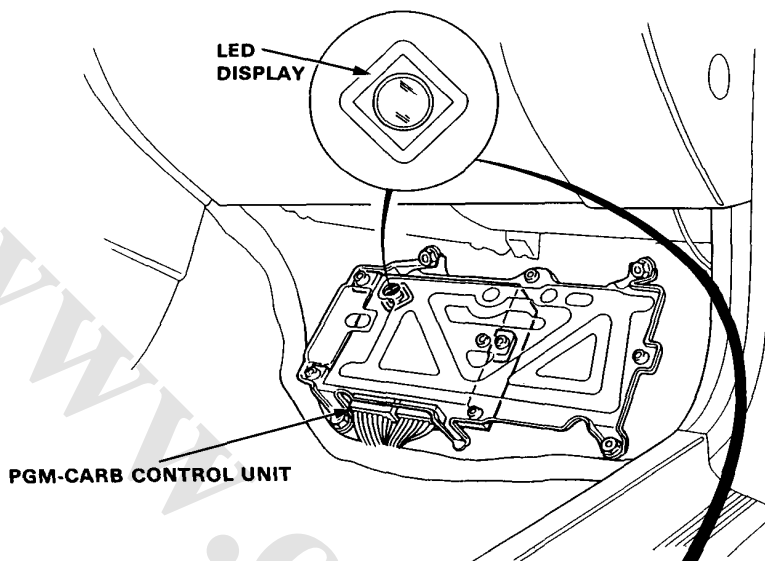


Separate Problems:



- = See Problem CODE 1
- = See Problem CODE 2
- = See Problem CODE 3

Simultaneous Problems:





- = See Problem CODE 1 and 2
- = See Problem CODE 2 and 4
- = See Problem CODE 1,2 and 3

SELF-DIAGNOSIS INDICATOR BLINKS	SYSTEM INDICATED
1	OXYGEN CONTENT
2	VEHICLE SPEED PULSER
3	MANIFOLD ABSOLUTE PRESSURE
4	VACUUM SWITCH SIGNAL
5	MANIFOLD ABSOLUTE PRESSURE
6	COOLANT TEMPERATURE
8	IGNITION COIL SIGNAL
10	INTAKE AIR TEMPERATURE
14	ELECTRONIC AIR CONTROL

If CODE 7, 9, 11, 12, 13 (or more than 14), count the number of blinks again; if the indicator is in fact blinking these codes, substitute a known-good control unit and recheck. If the indication goes away, replace the original control unit. The control unit LED may come on, indicating a system problem, when, in fact, there is a poor or intermittent electrical connection. First, check the electrical connections, clean or repair connections if necessary.




If the inspection for a particular code requires the ECU test harness, remove the door sill molding, the small cover on the kick panel, and pull the carpet back to expose the control unit. Unbolt the control unit bracket. Remove the control unit from the bracket. Connect the ECU test harness. Then check the system according to the procedure described for the appropriate code (s) listed on the following pages.

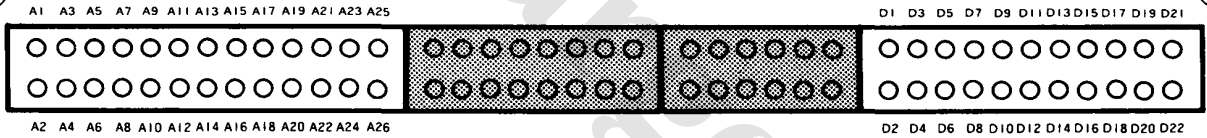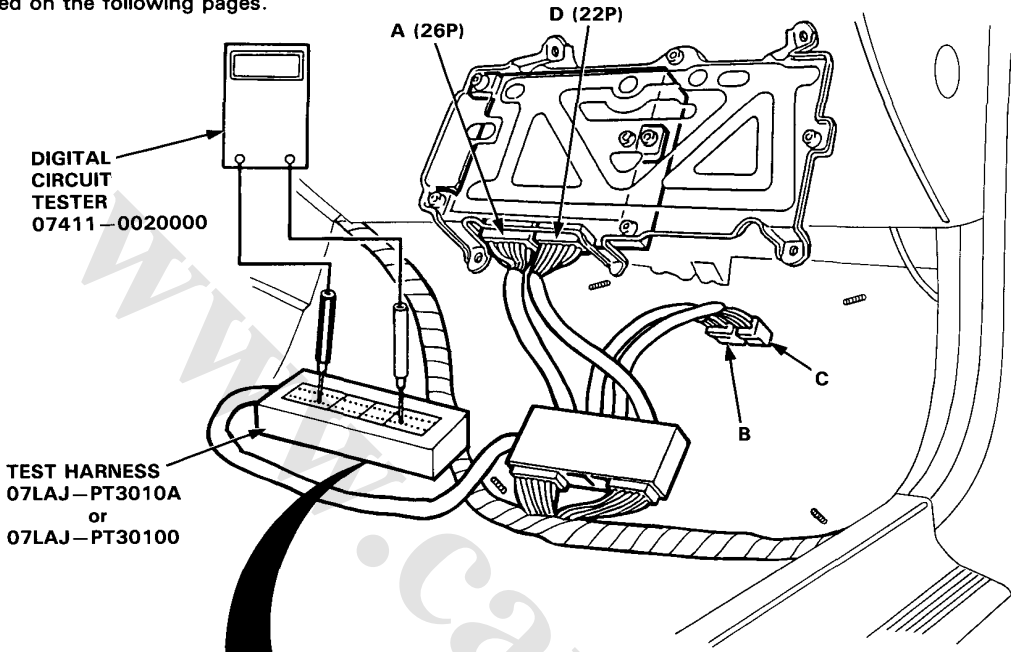

TERMINAL LOCATION

CAUTION:

- Puncturing the insulation on a wire can cause poor or intermittent electrical connections.
- For testing at connectors other than the ECU test harness, bring the tester probe into contact with the terminal from the connector side of wire harness connectors in the engine compartment. For female connectors, just touch lightly with the tester probe and do not insert the probe.

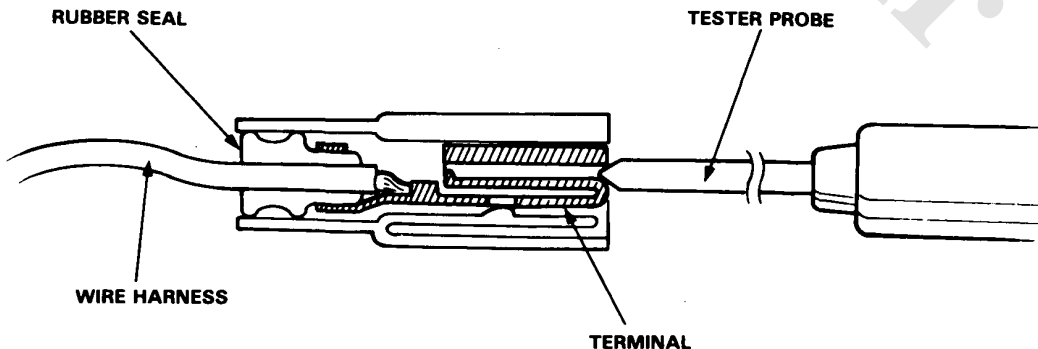

Symptom-to System Chart

[KF with CATA]

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-CARB CONTROL SYSTEM						
		PGM-CARB CONTROL UNIT	O ₂ YGEN SENSOR	VEHICLE SPEED PULSER	MANIFOLD ABSOLUTE PRESSURE SENSOR	VACUUM SWITCH	COOLANT TEMPERATURE SENSOR	IGNITION COIL SIGNAL
SYMPTOM		---	---	---	---	---	---	---
SELF-DIAGNOSIS INDICATOR (LED) BLINKS		⑦ or *	①	②	③ or ⑤	④	⑥	⑧
ENGINE WON'T START								
DIFFICULT TO START ENGINE WHEN COLD		(BU)						
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPECIFIC	(BU)						
	ROUGH IDLE	(BU)	③		②			
	WHEN WARM ENGINE SPEED TOO HIGH	(BU)						
	WHEN WARM ENGINE SPEED TOO LOW	(BU)						
FREQUENT STALLING	WHILE WARMING UP	(BU)			②		③	
	AFTER WARMING UP	(BU)			②			
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)	③	③	②			
	FAILS EMISSION TEST	(BU)	②		①			
	LOSS OF POWER	(BU)			③			

* CODE 7, 9, 11, 12, 13, or exceeds 14: count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good control unit and recheck. If the indication goes away, replace the original ECU.

(BU): When the self-diagnosis indicator is on, the back-up system is in operation.

Substitute a known-good control unit and recheck. If the indication goes away, replace the original ECU.



PGM-CARB CONTROL SYSTEM							EMISSION CONTROL	
INTAKE AIR TEMPERATURE SENSOR	CLUTCH SWITCH SIGNAL	P/S OIL PRESSURE SWITCH	A/C SIGNAL	CARBURETOR	FUEL SUPPLY	AIR INTAKE	ELECTRONIC AIR CONTROL VALVE	OTHER EMISSION CONTROL
10							14	
				2	1			
				1				
3				1				3
3				1			3	3
		3	3	1				
				1				
				1			3	
				1			1	
				1	2			
				2		3	3	3
				3	2	1		2

Carburetor

Idle Speed / Mixture

[KF with CATA]


CO Meter Method

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.


NOTE:

- Check that the self-diagnosis indicator before making idle speed and mixture inspections.

1. Start the engine and warm it up to normal operating temperature (the cooling fan comes twice).
2. Connect a tachometer.

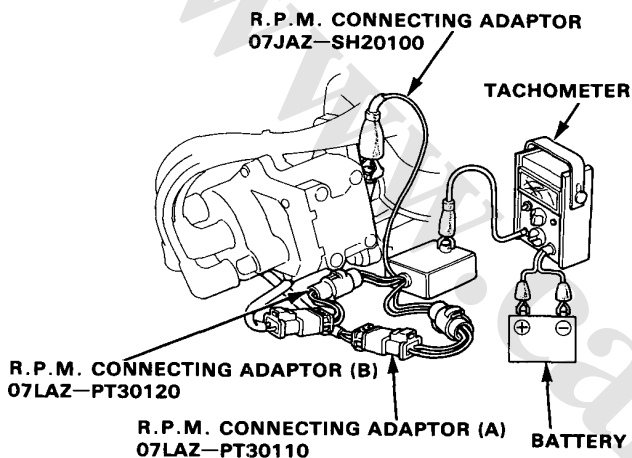

3. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000min⁻¹ (rpm) for 1 minute. Check idle speed with the headlights, heater blower, rear window defogger, cooling fan and air conditioner off.
Idle speed should be: 800 ± 50 min⁻¹ (rpm)

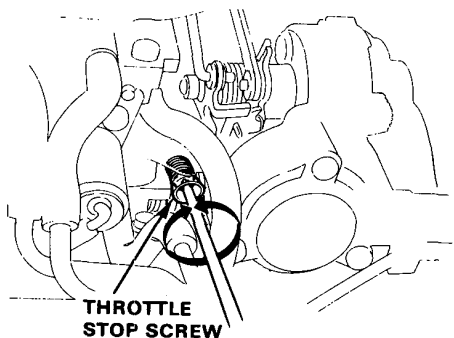

Adjust the idle speed, if necessary, by turning the throttle stop screw.


NOTE: If the idle speed is excessively high, check the throttle control system.

4. Calibrate the NDIR CO Meter in accordance with the manufacturer's recommended procedures. Insert exhaust gas sampling probe into the tailpipe at least 40 cm.
5. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO with cooling fan, air conditioner OFF and headlights OFF.


Specified CO%: 0.1%

- If idle CO is as specified, go to step 13.
- If not, go to step 6 through 12.

6. Disconnect the #2 vacuum hose from the carburetor, then cap the carburetor.

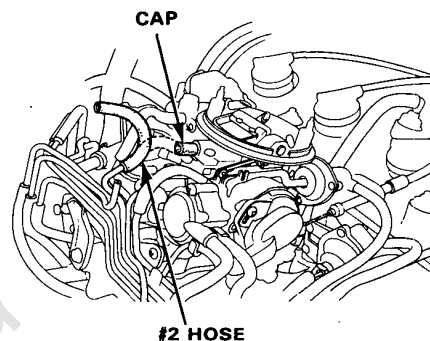


7. Disconnect the 2P connector from the EACV and disconnect the hose from the EACV, then cap the EACV.

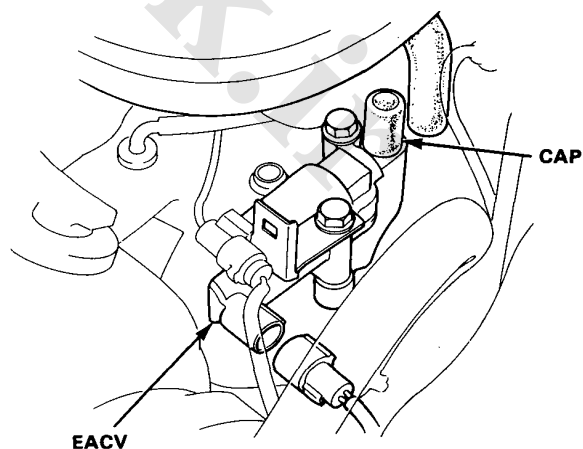



8. Disconnect the wire harness from the O² sensor.

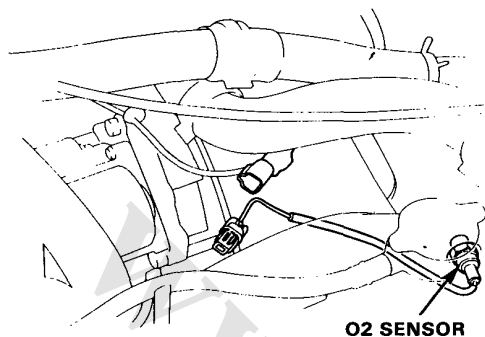


9. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Check specification for idle CO.

Specified CO%: 2.5 ± 0.5%

- If not, specification, go to step 10.

10. Remove mixture adjusting screw hole plug and adjust by turning mixture adjusting screw to obtain proper CO reading.

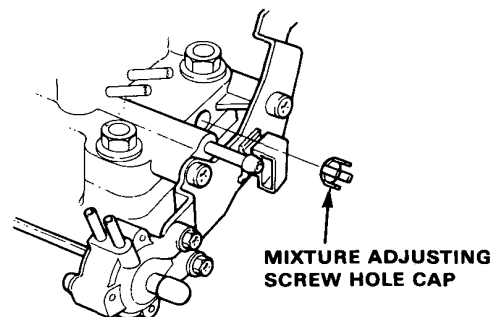

- Turning mixture adjusting screw

clockwise: CO reading decreases
counterclockwise: CO reading increases

Readjust idle speed if necessary, and recheck idle CO.

11. Reconnect the connector and hose. Remove BACK UP fuse for 10 seconds to reset control unit.
12. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min⁻¹ (rpm) for 1 minute. Recheck idle CO.
- Specified CO%: 0.1%**
- If idle CO is as specified, go to step 13.
 - If not, check the self-diagnosis indicator (page 6-8). If not, inspect the EACV and the catalytic converter, then repeat step 6.
13. Recheck idle speed.
Idle speed should be: 800 ± 50 min⁻¹ (rpm)

(cont'd)


Carburetor

Idle Speed/Mixture (cont'd)

- If idle speed is as specified, go to step 14.
- If idle speed is not as specified, adjust by turning throttle stop screw, then repeat step 5.


14. Reinstall the mixture adjusting screw hole cap.
15. Disconnect the connector on the P/S oil pressure switch.

P/S OIL PRESSURE SWITCH

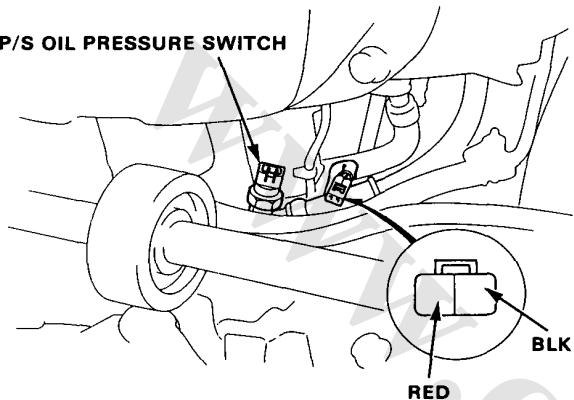

16. Check the idle speed.


Idle speed should be: $950 \pm 50 \text{ min}^{-1} \text{ (rpm)}$

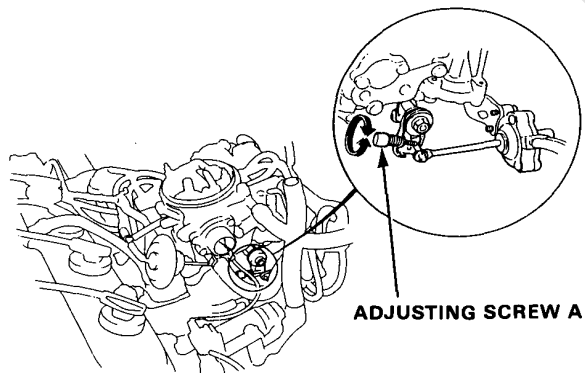

Adjust the idle speed, if necessary, by turning the adjusting screw A.

17. If equipped with air conditioner, check the idle speed with the A/C on.

Idle speed should be: $800 \pm 50 \text{ min}^{-1} \text{ (rpm)}$

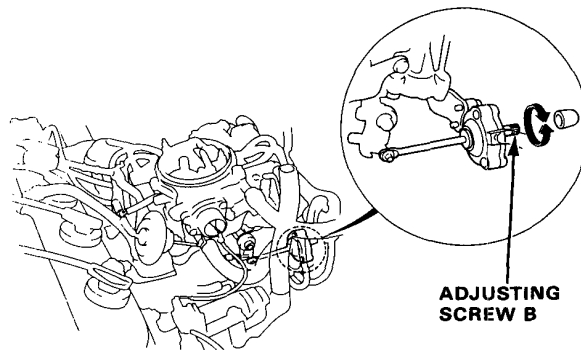

Adjust the idle speed, if necessary, by turning the adjusting screw B.



Emission Control System

Tailpipe Emissions

Inspection

NOTE: It is not possible to use a CO meter to adjust the idle mixture; the effect of the catalytic converter prevents accurate tracking of such small changes in air-fuel ratio.

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
2. Start the engine and warm it up to normal operating temperature (the cooling fan comes on twice).
3. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min^{-1} (rpm) for 1 minute.
4. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO %: below 0.1%



Emission Control System

Tailpipe Emissions

Inspection

NOTE: It is not possible to use a CO meter to adjust the idle mixture; the effect of the catalytic converter prevents accurate tracking of such small changes in air-fuel ratio.

⚠ WARNING Do not smoke during this procedure. Keep any open flame away from your work area.

1. Warm up and calibrate the CO meter according to the meter manufacturer's instructions.
2. Start the engine and warm it up to normal operating temperature (the cooling fan comes on twice).
3. Turn the ignition switch OFF. Restart the engine and hold engine at idle for 2 minutes. And hold engine at 2,500–3,000 min^{-1} (rpm) for 1 minute.
4. Check idle CO with the headlights, heater blower, rear window defogger, cooling fan, and air conditioner off.

Specified CO %: below 0.1%

Special Tools

System Description

Vacuum Connections

Troubleshooting

Troubleshooting Guide ((with CATA)

PGM - CARB Control System - Troubleshooting Flowcharts

Oxygen Sensor




Oxygen Sensor Heater

www.cargeek.ir

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Remarks
①	07LAJ-PT30100 or	Test Harness	
① ②	07LAJ-PT3010A 07411-0020000	Digital Circuit Tester	

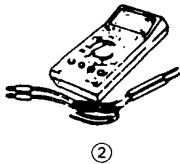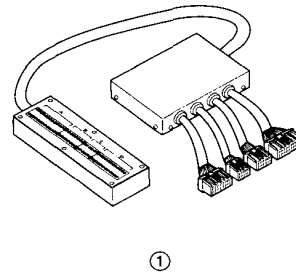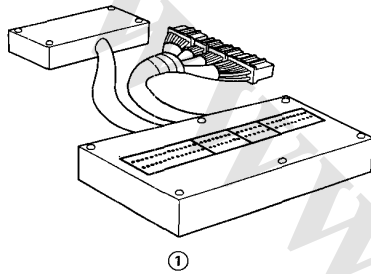




Component Locations

Index


[2.0 l with CATA]

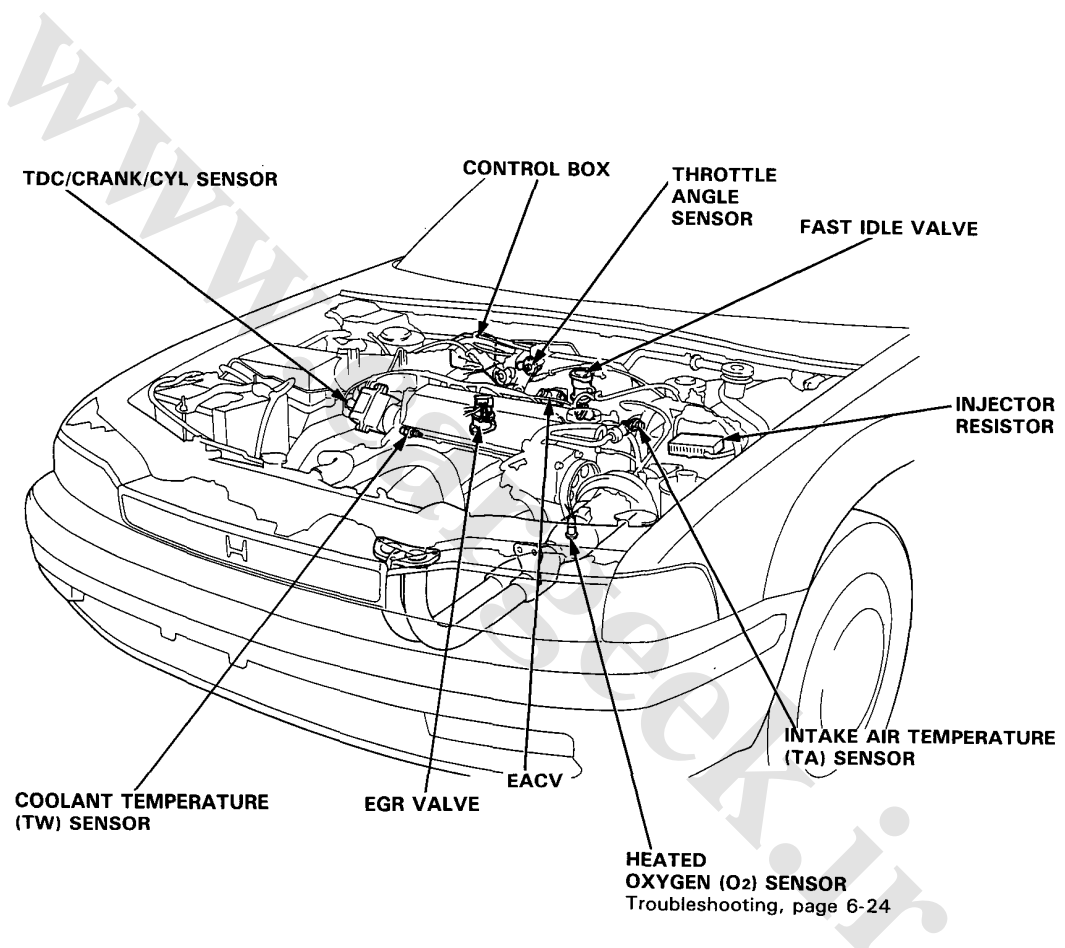

System Description


Vacuum Connections

[2.0 l with CATA]

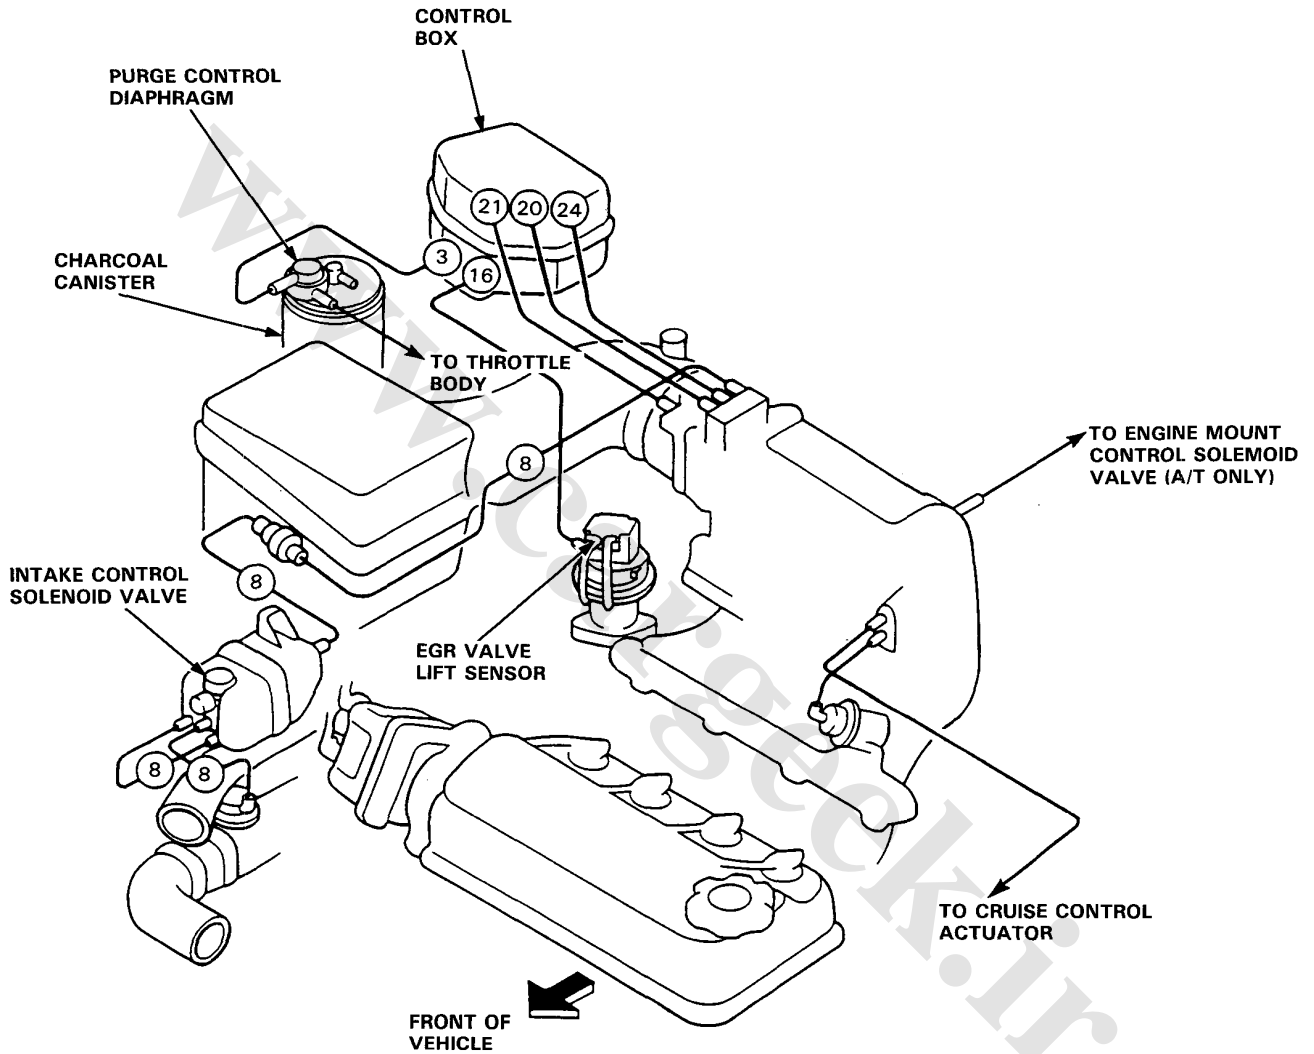



[2.0 l with CATA]

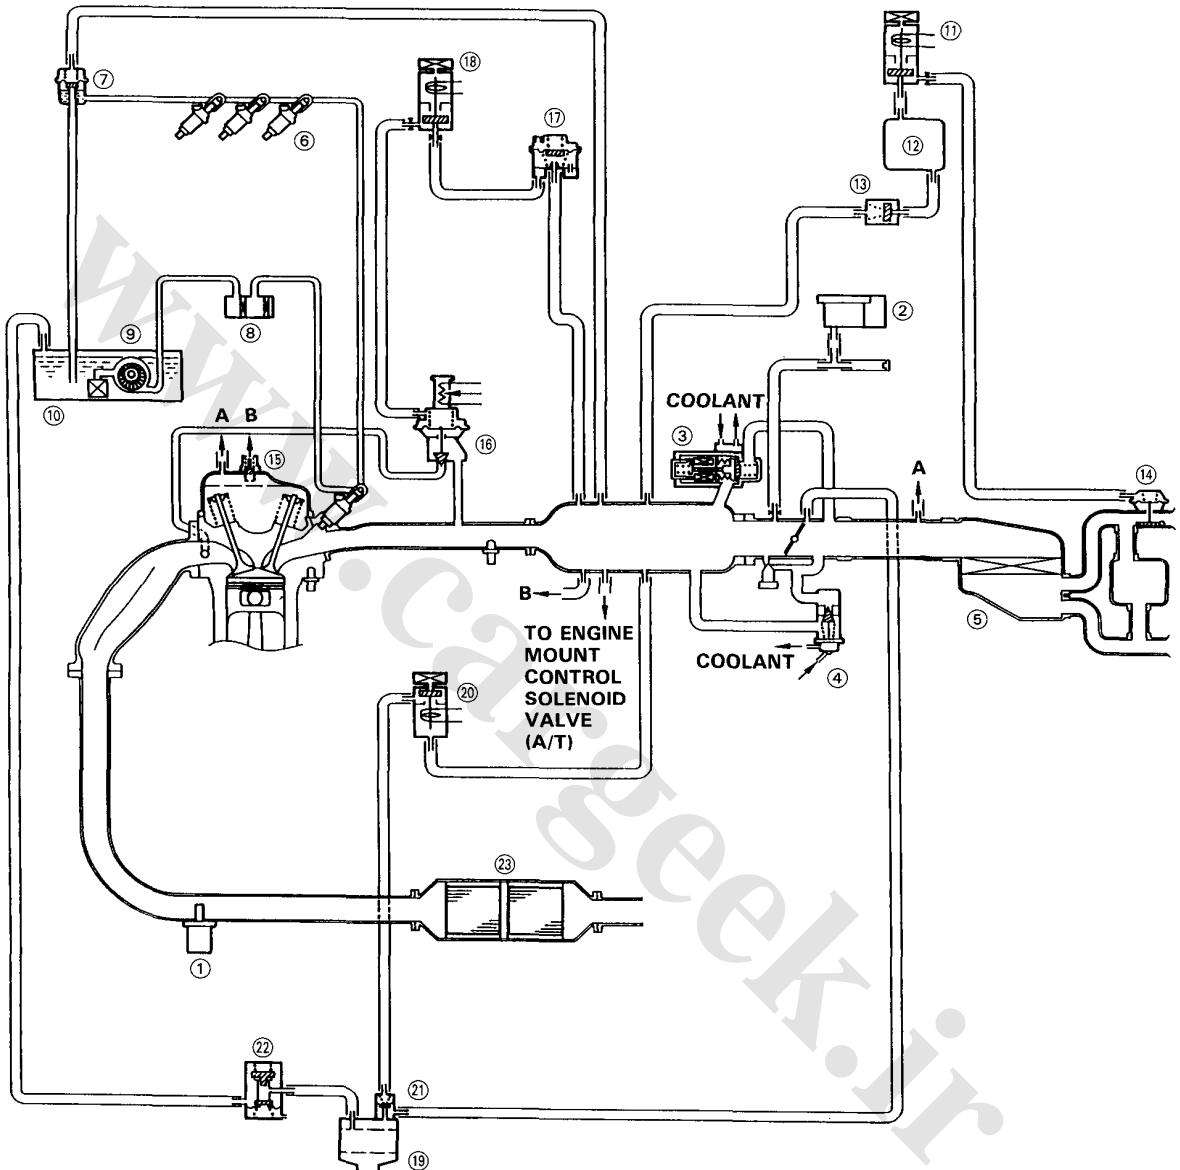










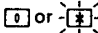
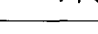
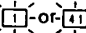
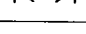
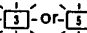
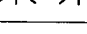
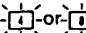
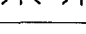





- ① HEATED OXYGEN (O₂) SENSOR
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR CLEANER
- ⑥ FUEL INJECTOR
- ⑦ PRESSURE REGULATOR
- ⑧ FUEL FILTER
- ⑨ FUEL PUMP
- ⑩ FUEL TANK
- ⑪ INTAKE CONTROL SOLENOID VALVE
- ⑫ AIR CHAMBER

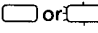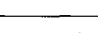- ⑬ CHECK VALVE
- ⑭ INTAKE CONTROL DIAPHRAGM
- ⑮ PCV VALVE
- ⑯ EGR VALVE
- ⑰ CONSTANT VACUUM CONTROL (CVC) VALVE
- ⑱ EGR CONTROL SOLENOID VALVE
- ⑲ CHARCOAL CANISTER
- ⑳ PURGE CUT-OFF SOLENOID VALVE
- ㉑ PURGE CONTROL DIAPHRAGM VALVE
- ㉒ TWO-WAY VALVE
- ㉓ CATALYTIC CONVERTER

Troubleshooting

Troubleshooting Guide [With CATA]

NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

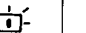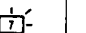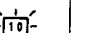PAGE	SYSTEM	PGM-FI							
		ECU	OXYGEN SENSOR	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	ATMOSPHERIC PRESSURE SENSOR
SYMPTOM		—	24, 28	—	—	—	—	—	—
CHECK ENGINE WARNING LIGHT TURNS ON		 or 							
CHECK ENGINE WARNING LIGHT BLINKS		 or 	 or 	 or 	 or  or 				
ENGINE WON'T START		③			③				
DIFFICULT TO START ENGINE WHEN COLD		(BU)		③	③	①			③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	(BU)				③			
	ROUGH IDLE	(BU)		③					
	WHEN WARM IDLE SPEED TOO HIGH	(BU)							
	WHEN WARM IDLE SPEED TOO LOW	(BU)							
FREQUENT STALLING	WHILE WARMING UP	(BU)				③			
	AFTER WARMING UP	(BU)							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	(BU)			③				
	FAILS EMISSION TEST	(BU)	③	②					
	LOSS OF POWER	(BU)		③			②		

- if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.
- (BU): When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.



PGM-FI				IDLE CONTROL		FUEL SUPPLY	AIR INTAKE	EMISSION CONTROL	
IGNITION OUTPUT SIGNAL	VEHICLE SPEED SENSOR	A/T FI Signal A	A/T FI Signal B	ELECTRONIC AIR CONTROL VALVE	OTHER IDLE CONTROLS			EGR CONTROL SYSTEM	OTHER EMISSION CONTROLS
—	—	—	—	—	—	—	—	—	—
①						②			
					②				
				①	②				
				①		②		③	
				①	②				
				①		②			
				①	②	③			
				③	①	②		③	
				③		①		③	
						②			①
						①	③		③

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor



Self-diagnosis Check Engine warning light indicates code 1: A problem in the Heated Oxygen (O₂) Sensor circuit.



— Check Engine warning light has been reported on, with service check connector jumped CODE 1 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Inspect fuel pressure.

Is it normal ?

NO — Go to Fuel Supply System.

YES

Warm up engine to normal operating temperature (cooling fan comes on).

Run engine for 10 seconds.

Road test with the Transmission in 2nd gear, accelerate using wide open throttle for at least 5 seconds. Then decelerate for at least 5 seconds with the throttle completely closed.

Is Check Engine warning light on and does it indicate CODE 1 ?


NO — Intermittent failure, system is OK at this time. Check for poor connections or loose wires.

YES


(To page 6-25)



(From page 6-24)

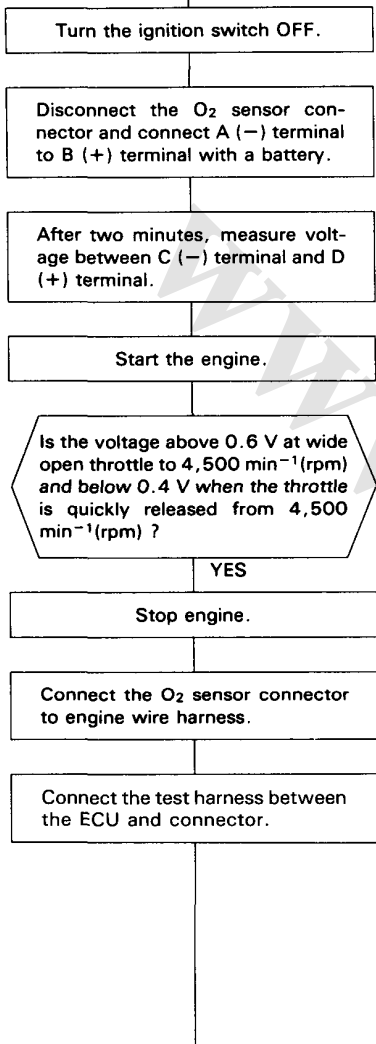

(To page 6-26)

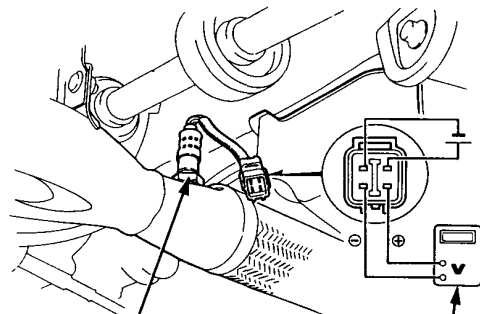

O₂ SENSOR
45 N·m (4.5 kg·m, 33 lb·ft)

DIGITAL MULTIMETER
07411-0020000

www.cargeek.ir

(cont'd)

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor (cont'd)

(From page 6-25)

Restart and warm up engine to normal operating temperature (cooling fan comes on).

Measure voltage between D14 (+) and A26 (-) terminal.


Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Repair short or open in WHT wire between ECU (D14) and O₂ sensor.

YES

Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.



Above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm).
Below 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm).

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor Heater



Self-diagnosis Check Engine warning light indicates code 41: A problem in the Oxygen (O₂) Sensor Heater circuit.



— Engine is running.
— Check Engine warning light has been reported on, with service check connector jumped, CODE 41 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does it indicate CODE 41 ?

NO

Intermittent failure, system is OK at this time (test driving may be necessary).
Check for poor connections or loose wires at O₂ sensor connector.

YES

Stop engine.

Disconnect the 4P connector from the O₂ sensor.

Measure resistance between terminals A and B on the O₂ sensor.

Is there 10–40 Ω ?

NO

Replace O₂ sensor.

YES

Check for continuity to body ground on each terminal on the O₂ sensor.

Does continuity exist ?

YES

Replace O₂ sensor.

NO

Check for continuity between terminal A and terminals C and D individually.

Does continuity exist ?

YES


Replace O₂ sensor.

NO

(To page 6-29)

O₂ SENSOR
45 N·m (45 kg-m, 33 lb-ft)

DIGITAL MULTIMETER
07411-0020000

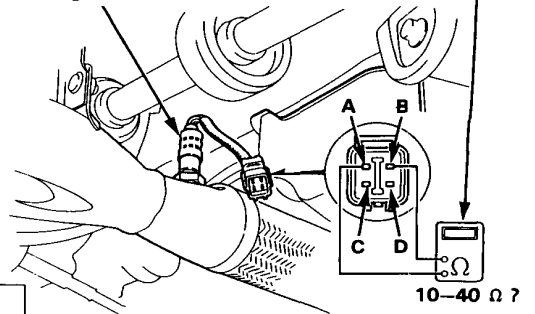


Illustrated Index

www.cargeek.ir

Illustrated Index

NOTE:

- Whenever the transmission is removed, the release bearing sliding surface should be cleaned and greased.
- If the * mark parts were removed, the clutch hydraulic system must be bled.

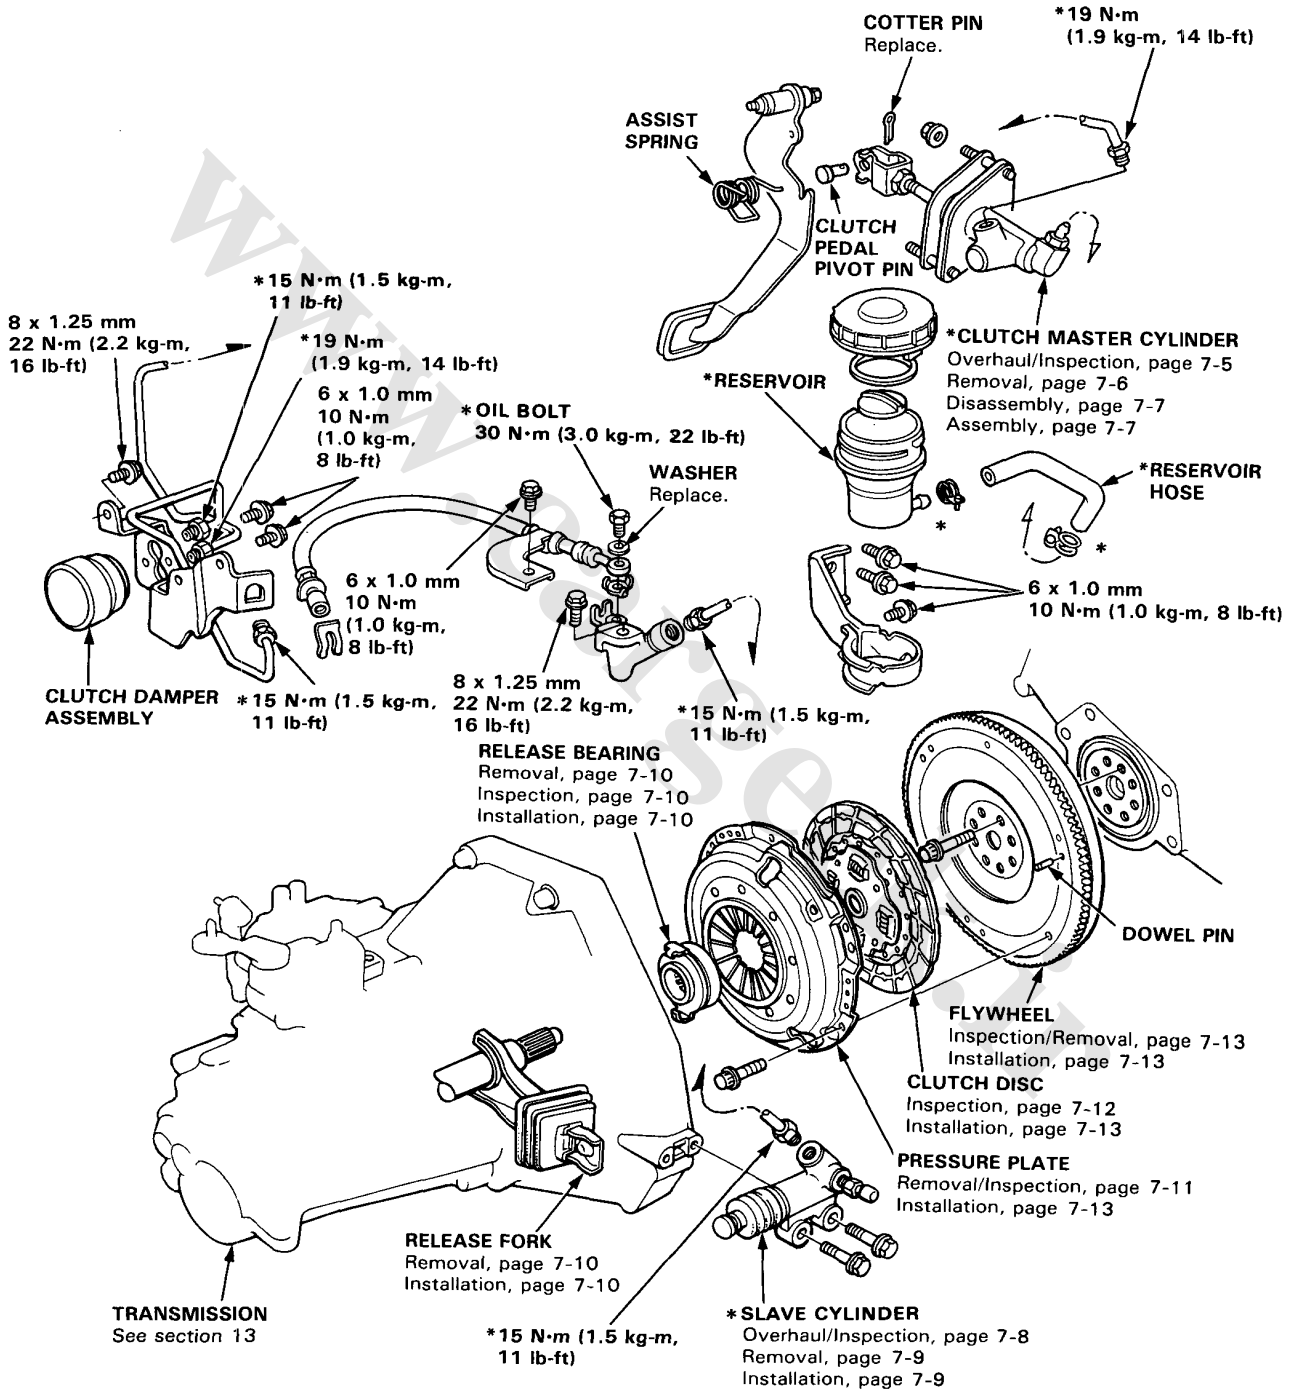

Special Tools

Gearshift Mechanism Overhaul

Transmission Assembly Removal

Countershaft Bearing (Clutch Housing) Replacement


Countershaft Clearance Inspection

Transmission Assembly Installation

www.cargeek.ir

Special Tools

Ref. No.	Tool Number	Description	Qty	Remarks
①	07JAC-PH80000	Adjustable Bearing Remover Set	1	} Component Tools
①-1	07JAC-PH80100	Bearing Remover Attachment	(1)	
①-2	07JAC-PH80200	Remover Handle Assembly	(1)	
①-3	07741-0010201	Remover Weight	(1)	
②	07749-0010000	Outer Handle A	1	
③	07947-6340400	Driver Attachment	1	
④	07746-0030100	Inner Handle C	1	
⑤	07746-0030200	Inner Driver, 25 mm	1	

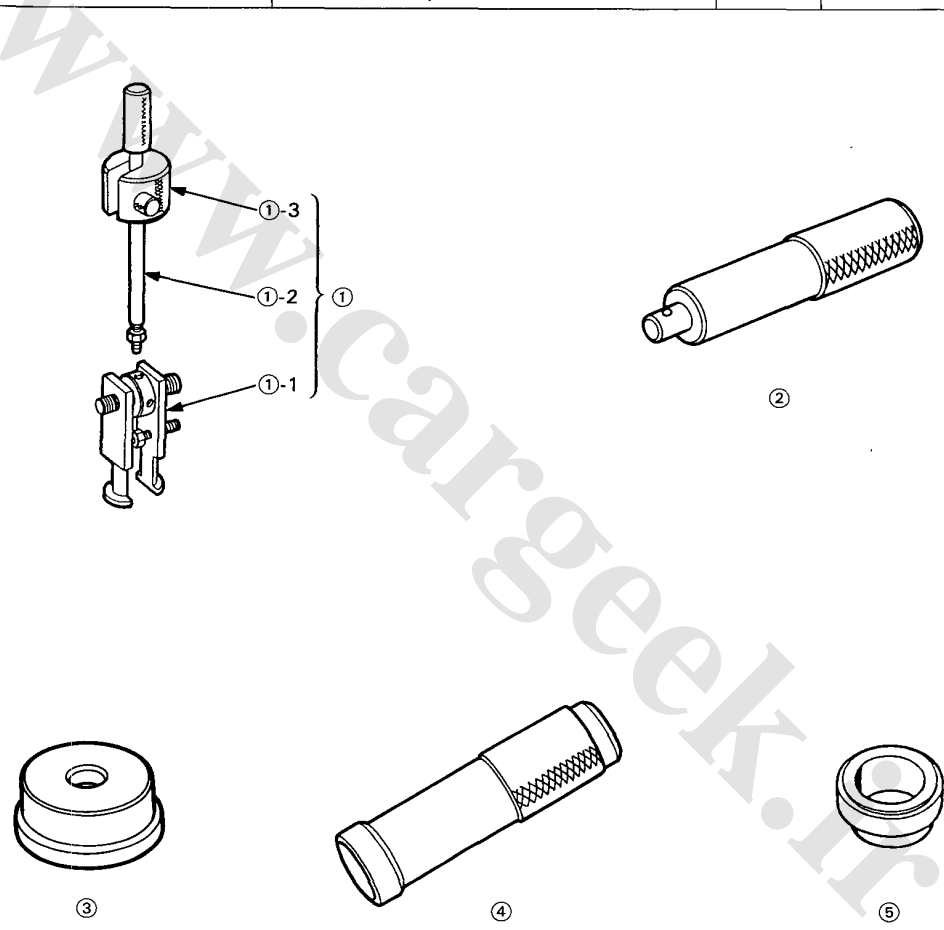




Gearshift Mechanism

Overhaul

NOTE:

- Inspect rubber parts for wear and damage when disassembling.
- Check that the new cotter pin is seated firmly.

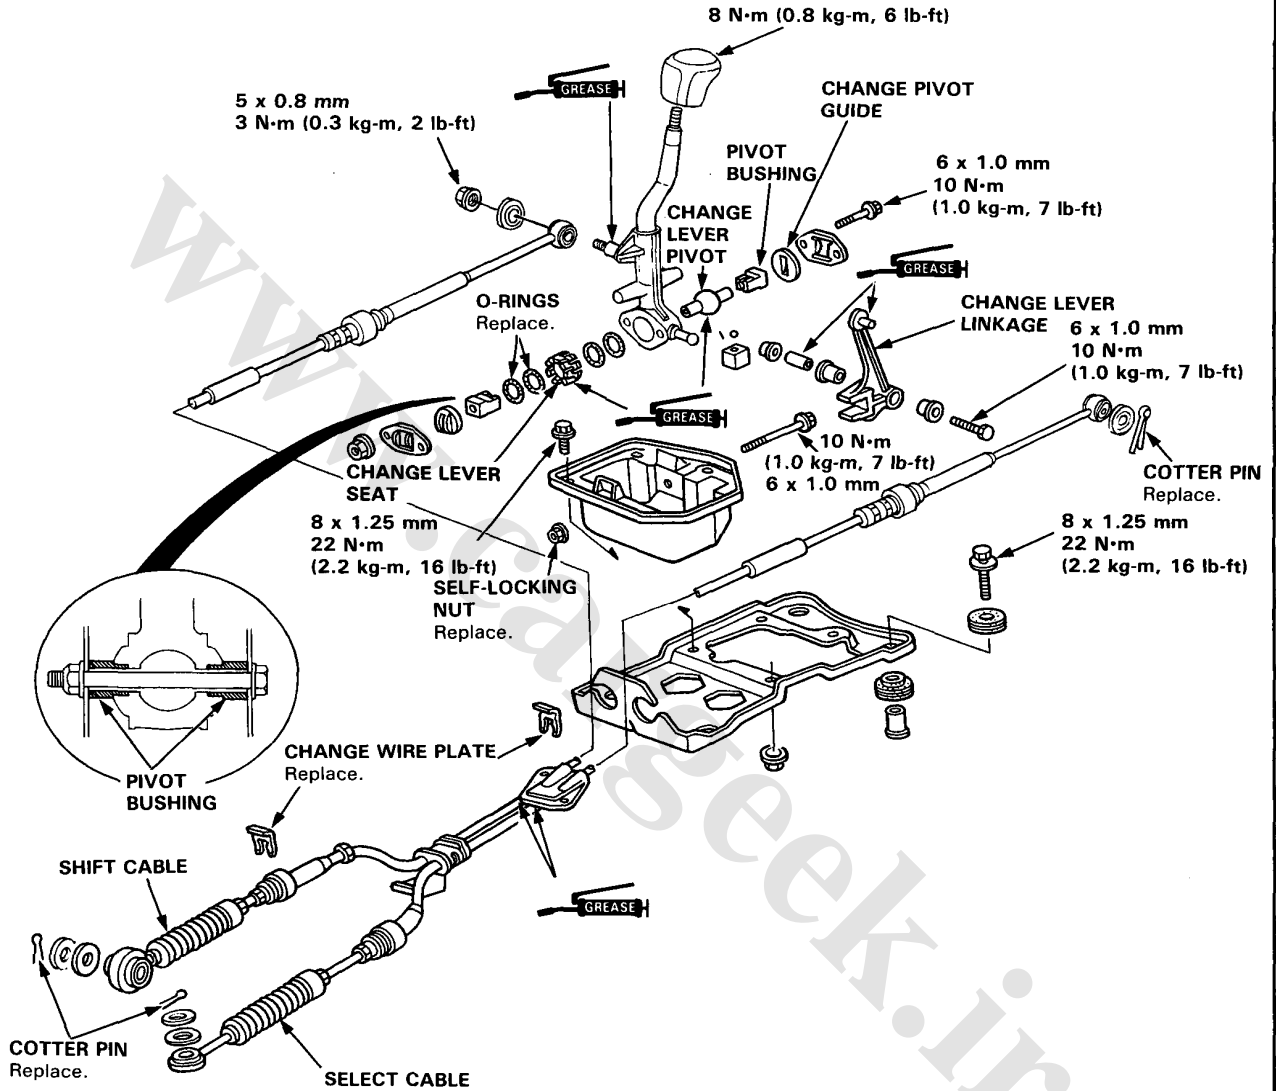

Transmission Assembly


Removal

⚠ WARNING

- Make sure jacks and safety stands are placed properly, and hoist brackets are attached to correct positions on the engine.
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

CAUTION: Use fender covers to avoid damaging painted surfaces.


1. Disconnect the battery negative (-) and positive (+) cables from the battery, and remove the battery.
2. Remove the air intake hose and battery base (see section 6).
3. Disconnect the starter motor cables, remove the starter mounting bolts, then remove the starter motor.
4. Disconnect the transmission ground cable.
5. Disconnect the back-up light switch connectors.

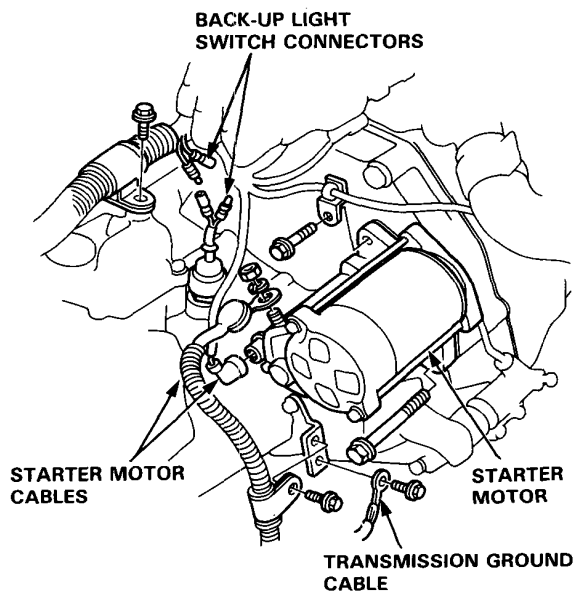


6. Shift the transmission into reverse gear by moving the shift levers.
7. First remove the cable stay and disconnect the cables from the top housing of the transmission.

NOTE: Remove both cables and the stay together.

CAUTION: Take care not to bend the cables.

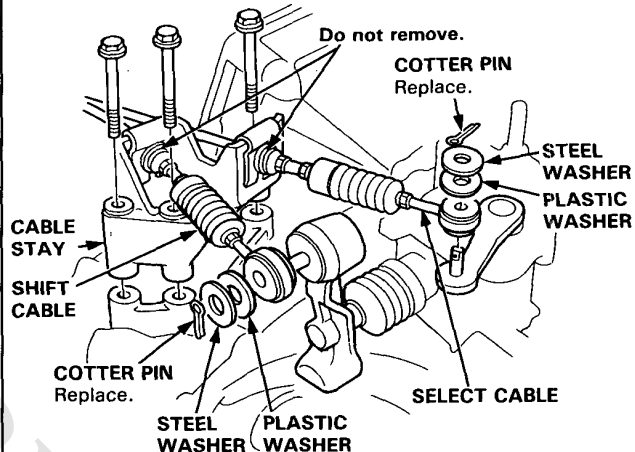

8. Disconnect the connector and remove the speed sensor, but leave its hoses connected.

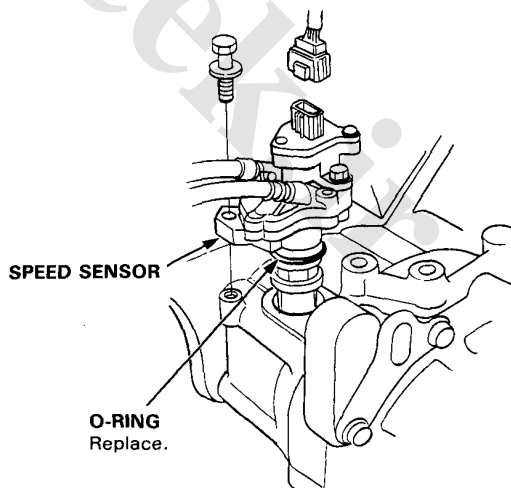




9. Remove both front wheels.
10. Remove the undercarriage splash shield.
11. Drain the transmission oil.
12. Remove the mounting bolts and clutch slave cylinder with the clutch pipe and push rod.
13. Remove the mounting bolt and clutch hose joint with the clutch pipe and clutch hose.


NOTE:

- Do not operate the clutch pedal once the slave cylinder has been removed.
- Take care not to bend the pipe.

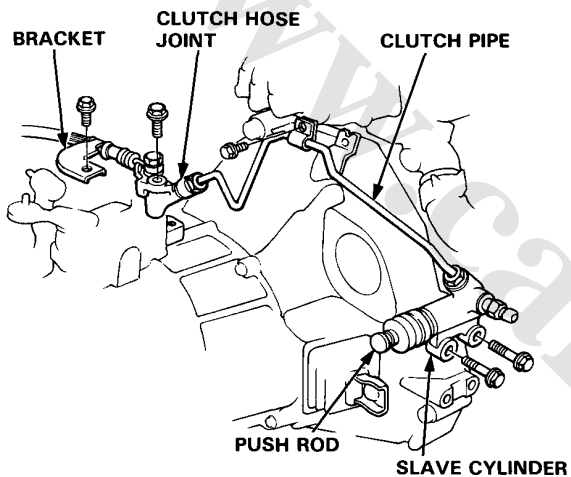


14. Remove the clutch damper assembly and support it with a piece of wire.

NOTE: Do not disconnect the pipes.

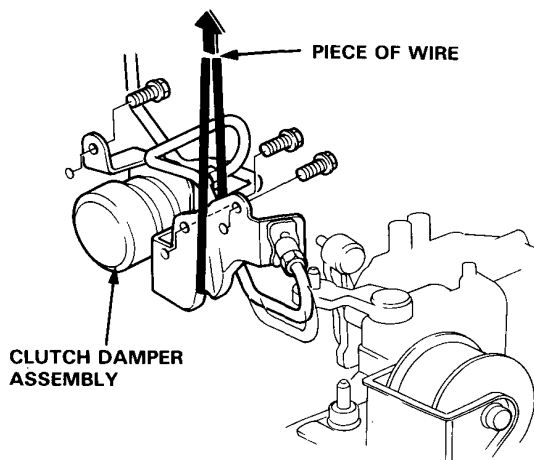


15. Remove the center beam.
16. Remove the header pipe.

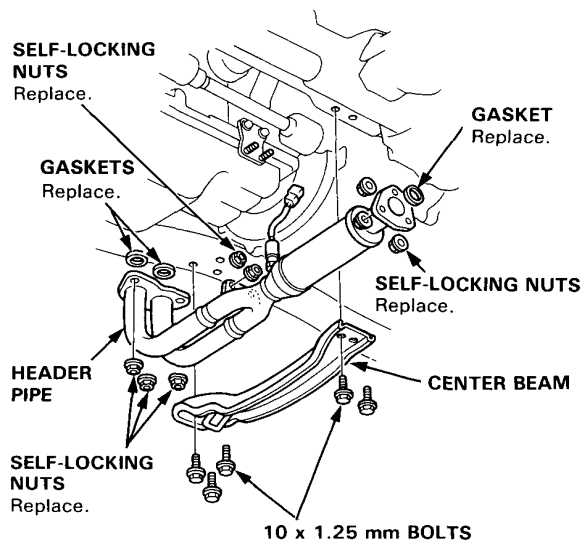

17. Remove the cotter pin and lower arm ball joint nuts, then separate the ball joints and lower arms (see section 12).

18. Remove the damper fork bolt.

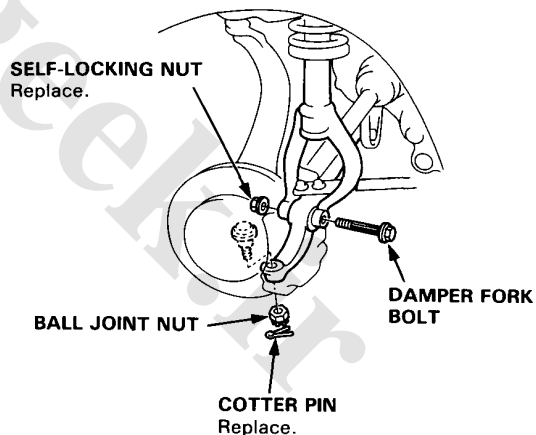


(cont'd)

Transmission Assembly

Removal (cont'd)


19. Pry the right and left driveshafts out of the differential and the intermediate shaft.
20. Pull on the inboard joint and remove the right and left driveshafts (see section 10).
21. Remove the 3 mounting bolts and lower the bearing support.
22. Remove the intermediate shaft from the differential (see section 10).

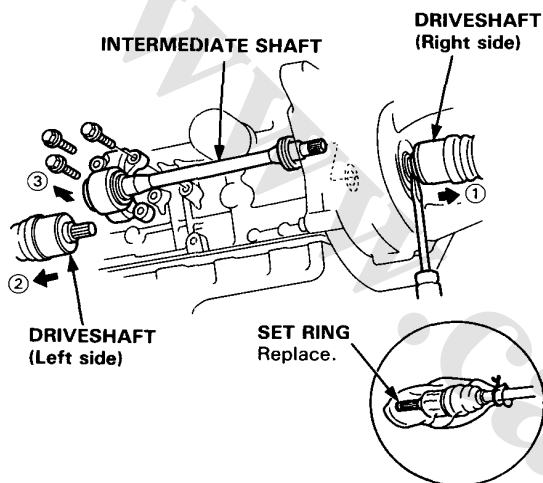


NOTE:

- Coat all precision finished surfaces with clean engine oil or grease.
- Tie plastic bags over the driveshaft ends.


23. Remove the right damper pinch bolt, then separate the damper fork and damper.
24. Remove the bolts and nut, then remove the right radius rod.

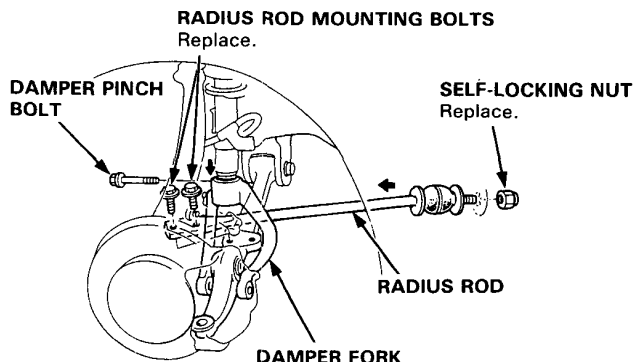

25. Remove the engine stiffener.
26. Remove the clutch cover.

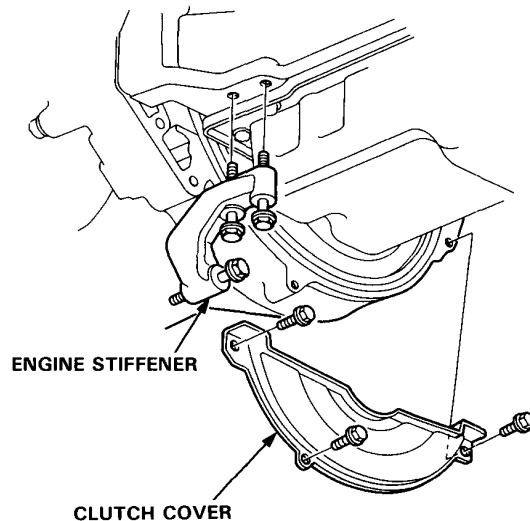


27. Remove the intake manifold bracket.

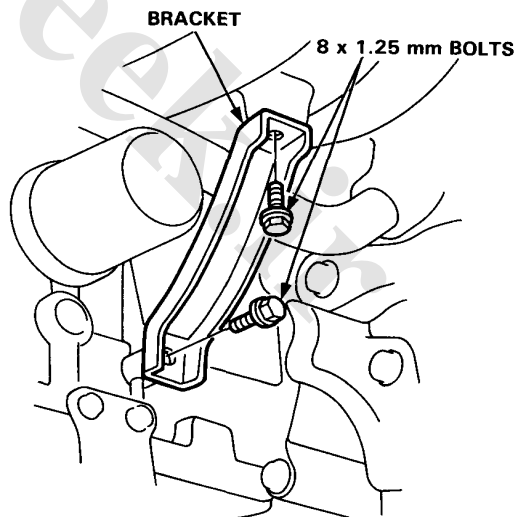





- 28. Remove the rear engine mount bracket stay.
- 29. Remove the 3 rear engine mount bracket mounting bolts.
- 30. Remove the transmission housing mounting bolt (Engine side).

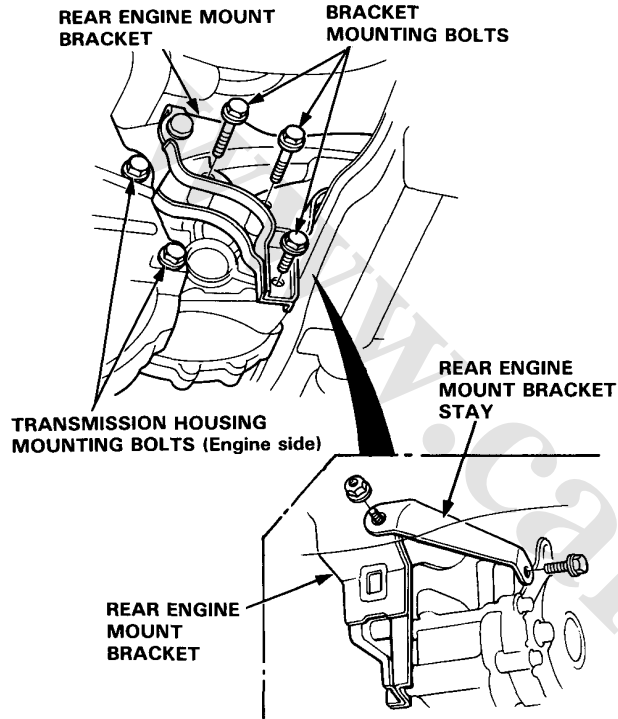

- 31. Swing the right driveshaft to the inner fender.

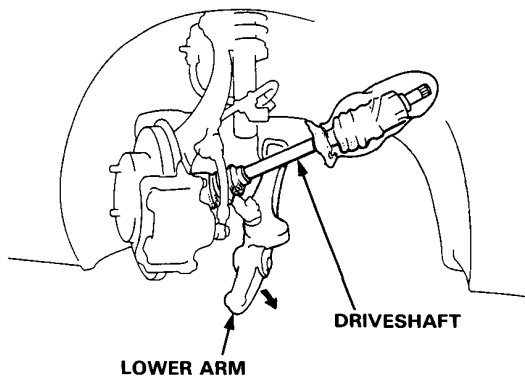


- 32. Place a floor jack under the transmission and raise transmission just enough to take weight off of the mounts.
- 33. Remove the transmission mount mounting bolt and loosen the mount bracket mounting nuts.
- 34. Remove the 3 transmission housing mounting bolts.

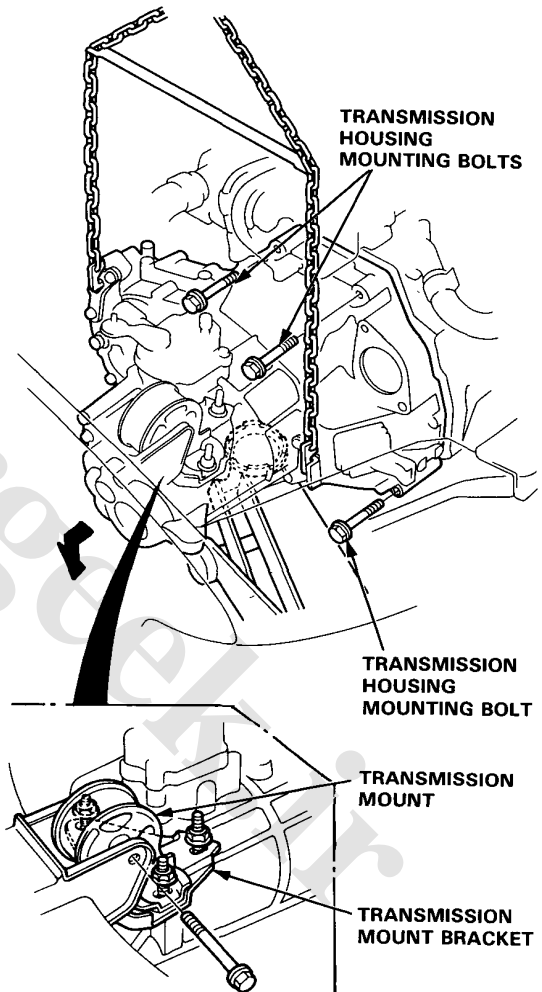


Countershaft Bearing (Clutch Housing)

Replacement

1. Remove the differential assembly.
2. Remove the retaining plate from the clutch housing. Remove the magnet.

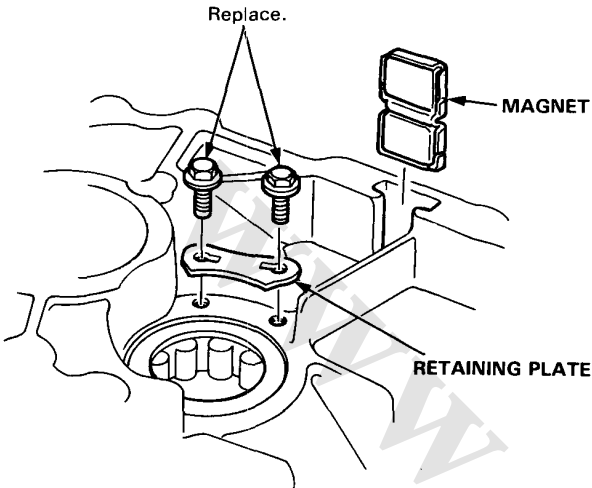


3. Remove the needle bearing with the special tool, then remove the oil guide plate.

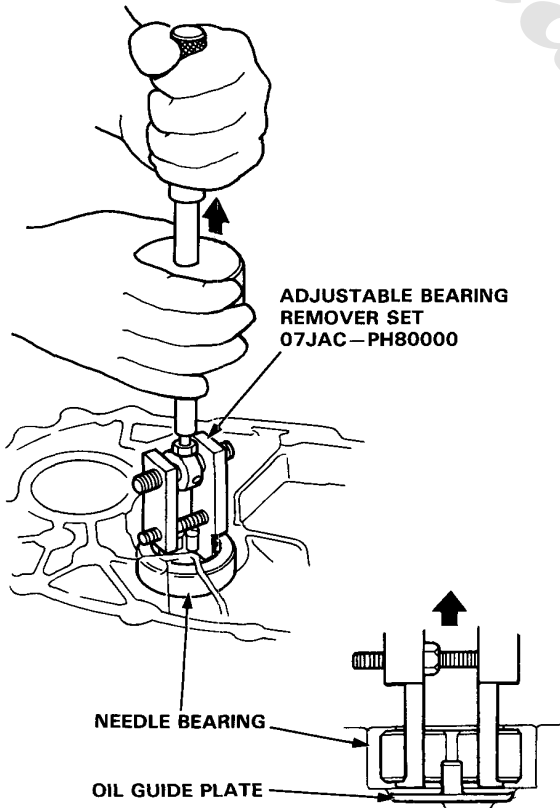


4. Position the oil guide plate and new needle bearing in the bore of the clutch housing.

NOTE: Position the needle bearing with the oil hole facing up.

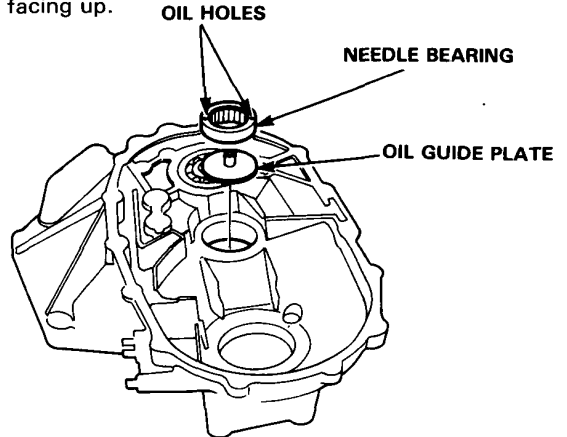


5. Drive the needle bearing using the special tools.

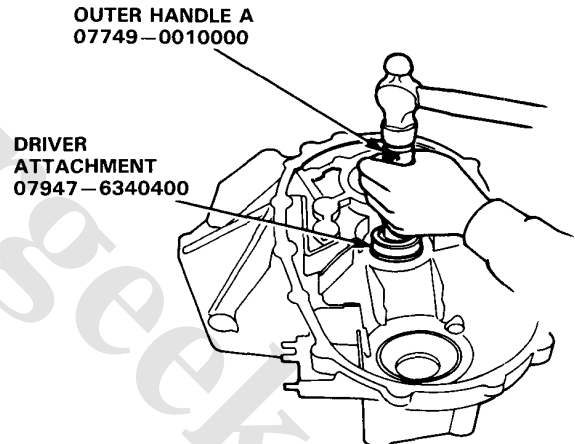

6. Install the needle bearing retaining plate and stake the bolt heads in the groove in the retaining plate.


6 x 1.0 mm
12 N·m (1.2 kg·m, 9 lb-ft)

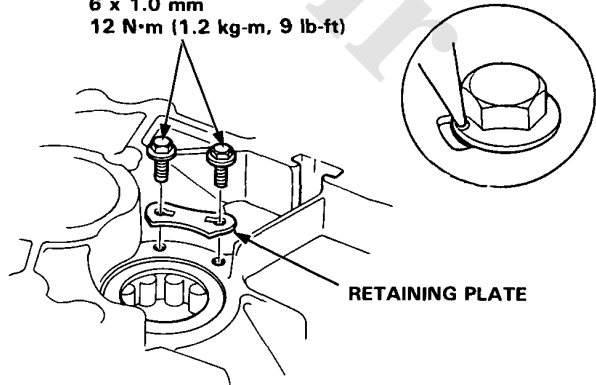


Countershaft Bearing (Clutch Housing)

Replacement

1. Remove the differential assembly.
2. Remove the retaining plate from the clutch housing. Remove the magnet.

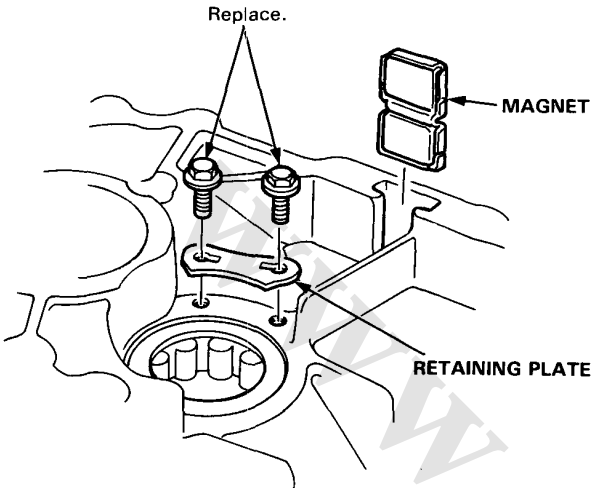


3. Remove the needle bearing with the special tool, then remove the oil guide plate.

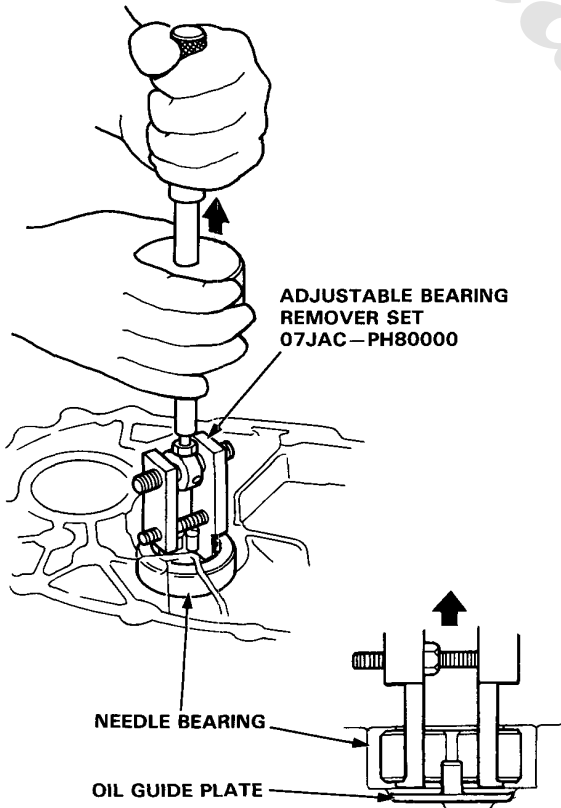


4. Position the oil guide plate and new needle bearing in the bore of the clutch housing.

NOTE: Position the needle bearing with the oil hole facing up.

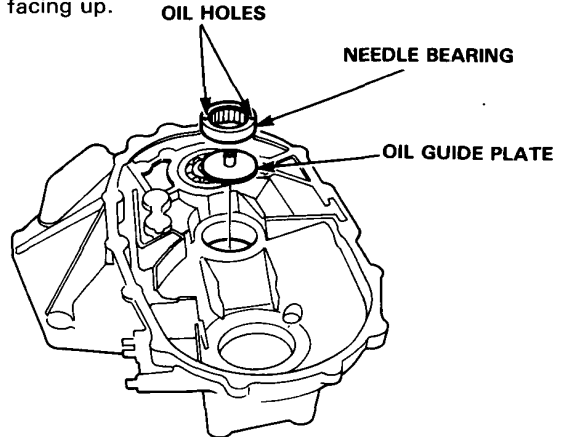


5. Drive the needle bearing using the special tools.

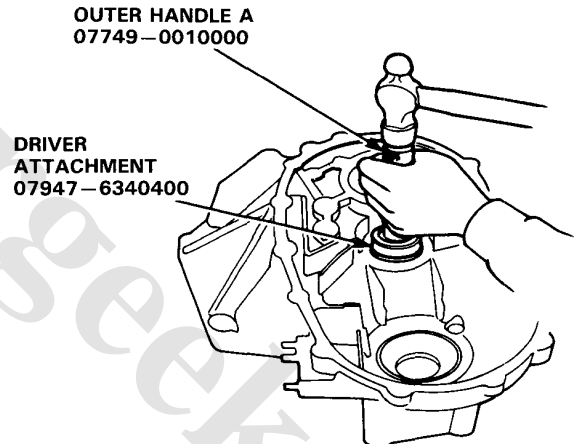

6. Install the needle bearing retaining plate and stake the bolt heads in the groove in the retaining plate.

6 x 1.0 mm
12 N·m (1.2 kg·m, 9 lb-ft)

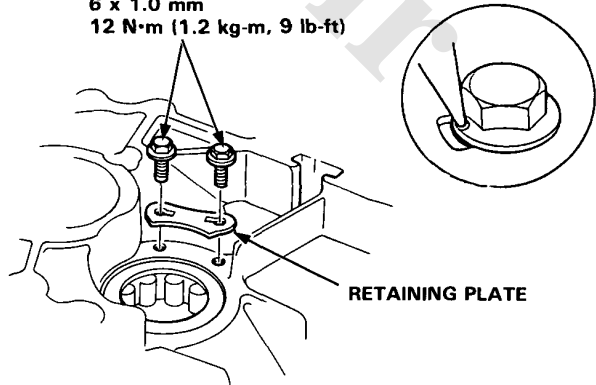




Countershaft


Clearance Inspection

NOTE: Two types of 36 x 44 x 29 mm collars and five types of thrust washers for 1st gear are available for the adjustment of the clearance between the gears on the countershaft (page 8-10).

1. Assemble the gears, spacer collars, thrust washer, synchro hub, synchro ring, etc. as shown below.

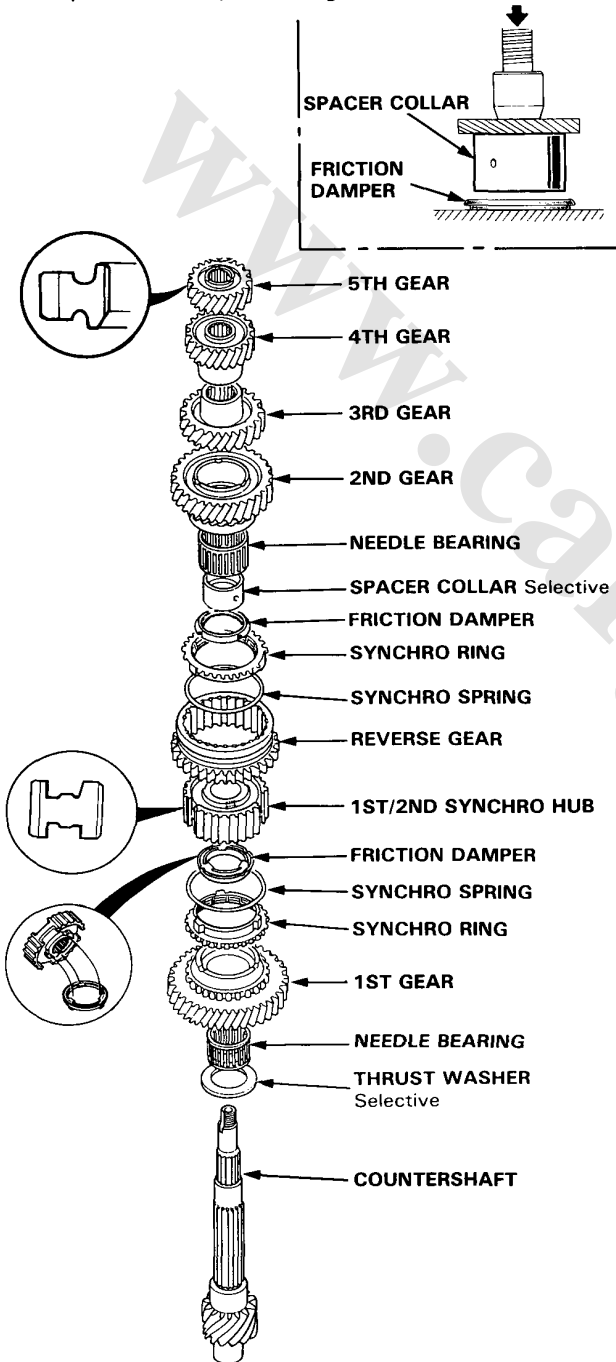


2. Install the needle bearing.
3. Install the ball bearing using the special tool and a press as shown.

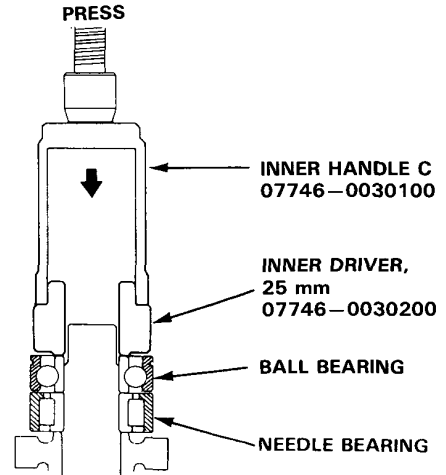

4. Install the spring washer.
5. Tighten the locknut, then stake the locknut tab into groove.

NOTE: Place the shaft in a vice with soft jaws.

130 → 0 → 130 N·m (13.0 → 0 → 13.0 kg-m,
94 → 0 → 94 lb-ft)

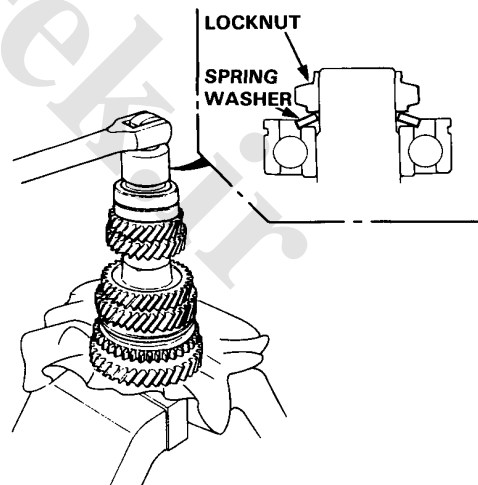

(cont'd)


Countershaft

Clearance Inspection (cont'd)

6. Measure and record the clearance between the 1st gear and thrust washer.

Standard: 0.04–0.10 mm
(0.0016–0.0039 in)

Service Limit: 0.18 mm (0.0070 in)

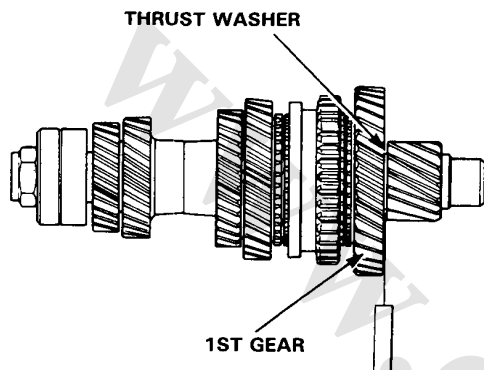

7. If the clearance is out of tolerance, select the appropriate thrust washer for the correct clearance from the charts.

THRUST WASHER


	PART NUMBER	THICKNESS
A	23921-PG1-000	1.96 mm (0.0771 in)
B	23922-PG1-000	1.99 mm (0.0783 in)
C	23923-PG1-000	2.02 mm (0.0795 in)
D	23924-PG1-000	2.05 mm (0.0807 in)
E	23925-PG1-000	2.08 mm (0.0819 in)

8. Replace 1st gear if its thickness is less than the service limit.

9. Measure the clearance between the 2nd gear and 3rd gear.

Standard: 0.04–0.10 mm
(0.0016–0.0039 in)

Service Limit: 0.18 mm (0.0070 in)

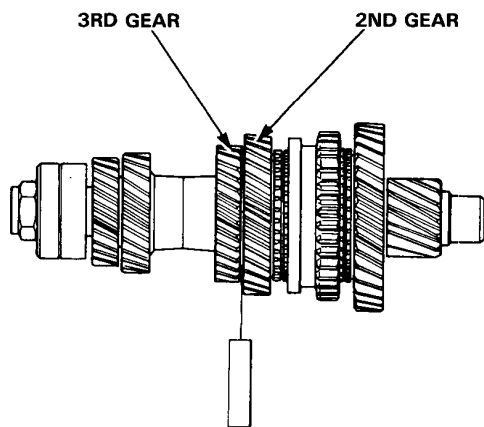

10. If the clearance is out of tolerance, select the appropriate spacer collar for the correct clearance from the charts.

SPACER COLLAR

	PART NUMBER	THICKNESS
A	23917-P21-010	29.02–29.04 mm (1.1425–1.1433 in)
B	23918-P21-010	29.07–29.09 mm (1.1445–1.1453 in)

11. Replace 2nd gear if its thickness is less than the service limit.


12. Stake the locknut tab in the groove.



Transmission Assembly

Installation


1. Place the transmission on the transmission jack, and raise to the engine level.
2. Check that the 4 dowel pins are installed.
3. Install the 3 transmission housing mounting bolts.

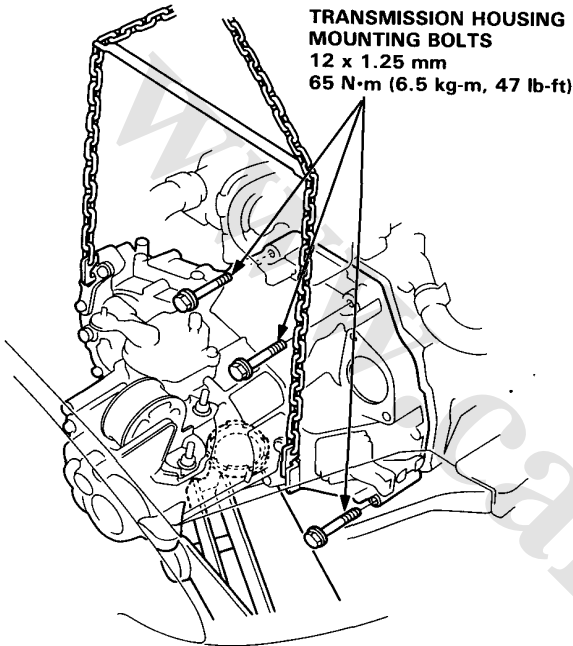

4. Install the transmission mount and mount bracket.



NOTE: Torque mounting bolt and nuts in sequence shown.

CAUTION: Check that the bushings are not twisted or offset.

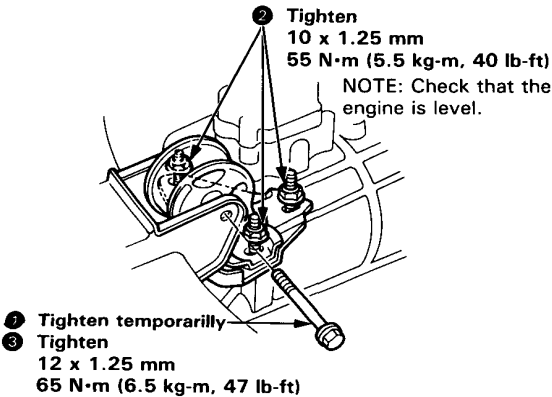


5. Install the transmission housing mounting bolts (Engine side).
6. Install the 3 rear engine bracket mounting bolts.
7. Install the rear engine mount bracket stay.

NOTE: Loosely install the stay mounting bolt and nut, then torque in the sequence shown.

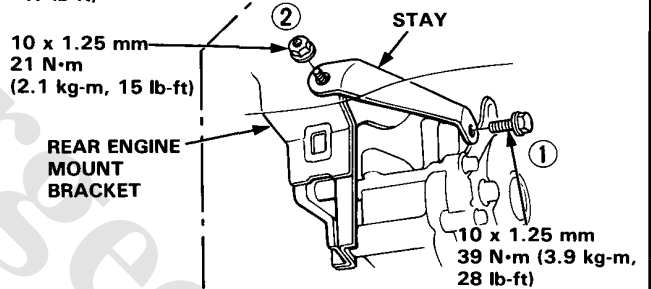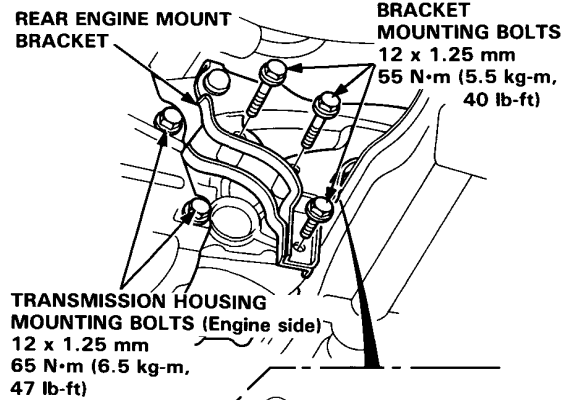

8. Install the intake manifold bracket.

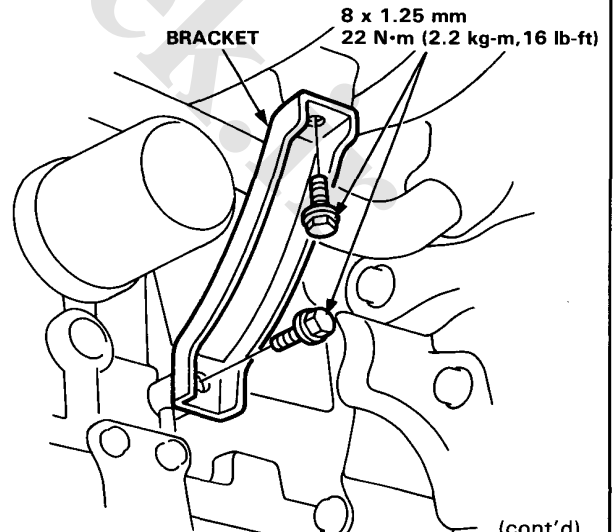

(cont'd)

Special Tools

Description

Transmission Sectional View

Pressure Testing

Throttle Control Cable

Illustrated Index

R.Side Cover

Transmission Housing

Torque Converter Housing

R.Side Cover Removal

Transmission Housing Removal

Torque Converter Housing/Valve Body Removal

Main Valve Body

Servo Body

Mainshaft

Countershaft

Secondary Shaft

Clutch Inspection

Transmission Housing Bearings


Removal/Installation

Transmission Reassembly

www.Cargeek.ir

Special Tools


Ref. No.	Tool Number	Description	Qty	Remarks
①	07406-0020003	A/T Oil Pressure Gauge Set	1	
①-1	07406-0020201	A/T Oil Pressure Gauge Hose	1	
②	07406-0070000	A/T Low Pressure Gauge	1	
③	07GAB-PF50101 or 07GAB-PF50100	Mainshaft Holder	1	
④	07HAC-PK40101	Housing Puller	1	
⑤	07LGC-0010100	Snap Ring Pliers	1	
⑥	07749-0010000	Driver	1	
⑦	07746-0010600	Attachment, 72 x 75 mm	1	
⑧	07NAD-PX40100	Attachment, 78 x 80 mm	1	
⑨	07HAF-PK40100	Gear Installer	1	

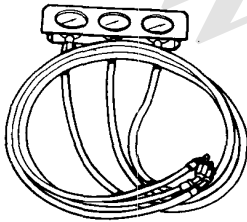


①




①-1

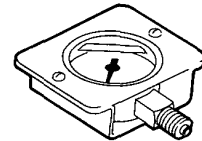


②



③

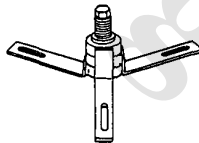


④




⑤




⑥

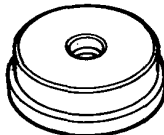

⑦



⑧

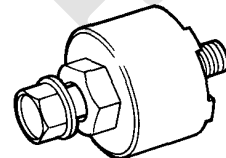


⑨



Description

Transmission Sectional View

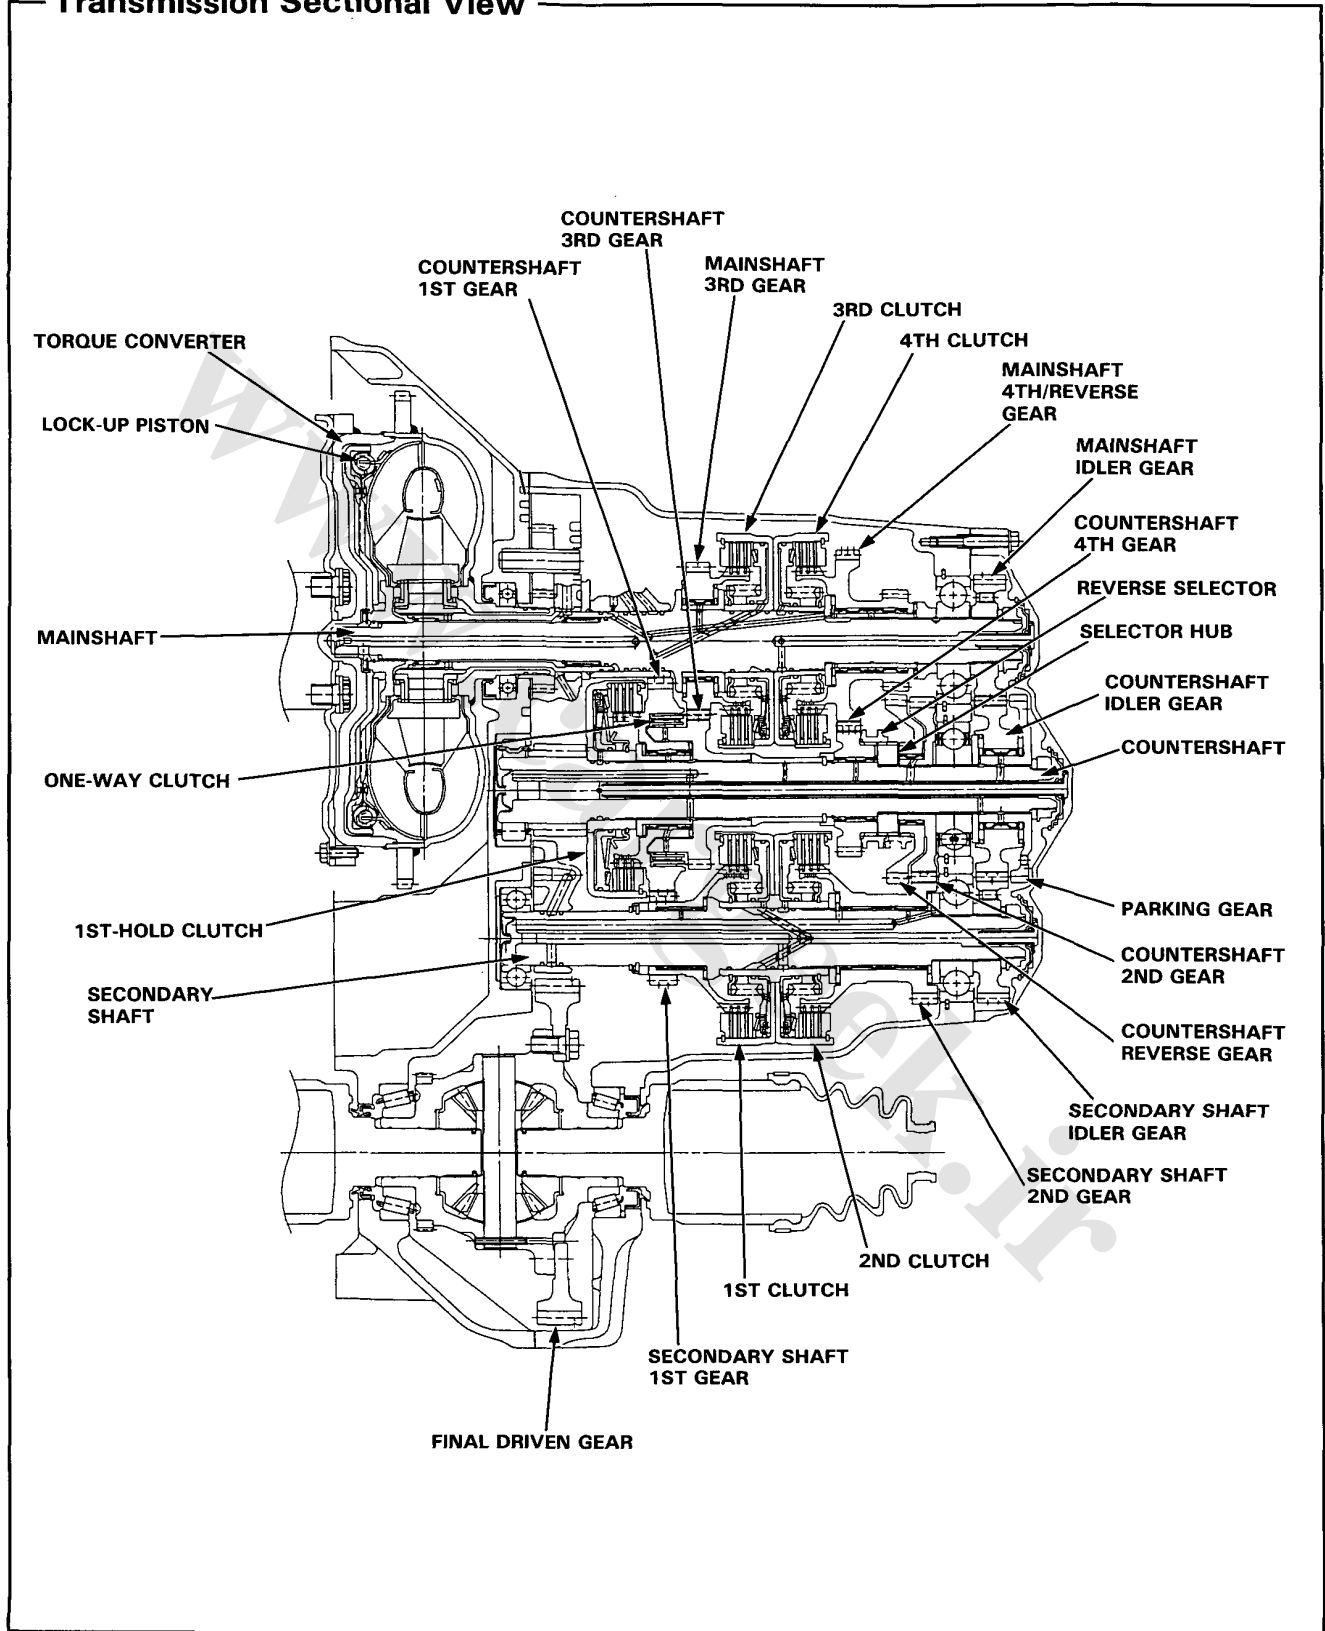

Pressure Testing


CAUTION:

- Before testing, be sure the transmission is filled to the proper level.
- Connect an oil pressure gauge securely, being sure not to allow dust and other foreign particles to enter the inspection hole.
- Warm up the engine before testing.
- Set the parking brake securely, and block both rear wheels.
- Raise the front of the car and support with safety stands.

NOTE: Do not reuse old aluminum washers. Install the sealing bolt in the inspection hole and tighten to the specified torque 18 N·m (1.8 kg-m, 12 lb-ft).

1. Stop the engine and connect a tachometer.
2. Connect an oil pressure gauge to each inspection hole.


GAUGE SET 07406-002003 (Includes Pressure Hoses)
A/T OIL PRESSURE GAUGE HOSE 07406-002021

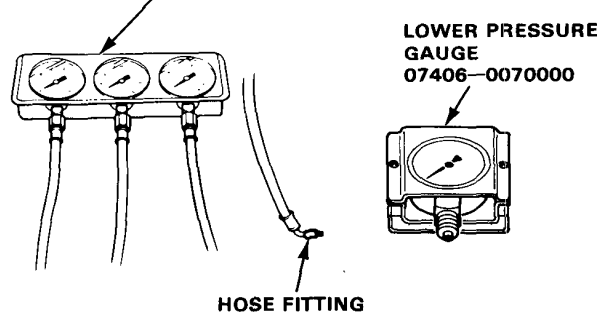

3. Start the engine and measure respective pressures as follows.

Line Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 2,000 min⁻¹ (rpm).
3. Measure the line pressure.

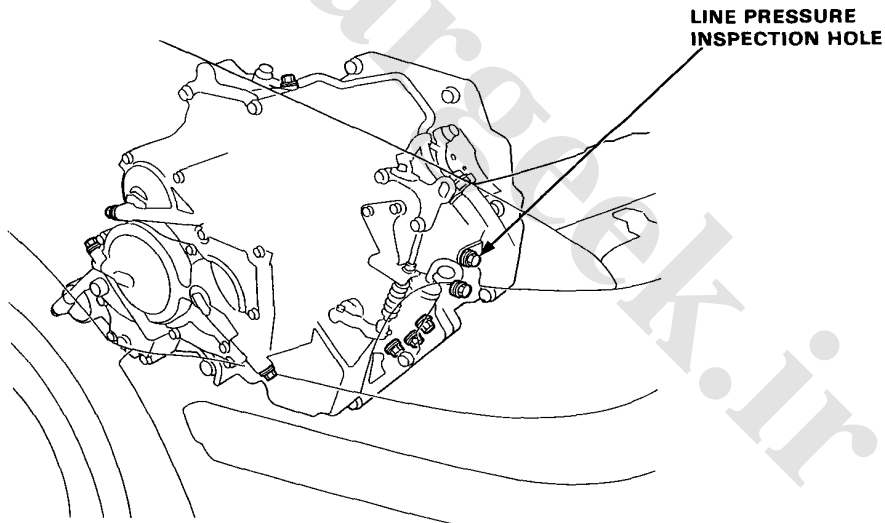


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Line	N or P	No (or low) Line pressure	Torque converter, oil pump pressure regulator, torque converter check valve, oil pump	760—809 kPa (7.75—8.25 kg/cm ² , 110—117 psi)	711 kPa (7.25 kg/cm ² , 103 psi)

NOTE: Higher pressures may be indicated if measurements are made in selector positions other than N or P.



Clutch Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Raise the front of the car and support with safety stands.
3. Allow the front wheels to rotate freely.
4. Run the engine at 2,000 min⁻¹ (rpm).
5. Measure the clutch pressure.

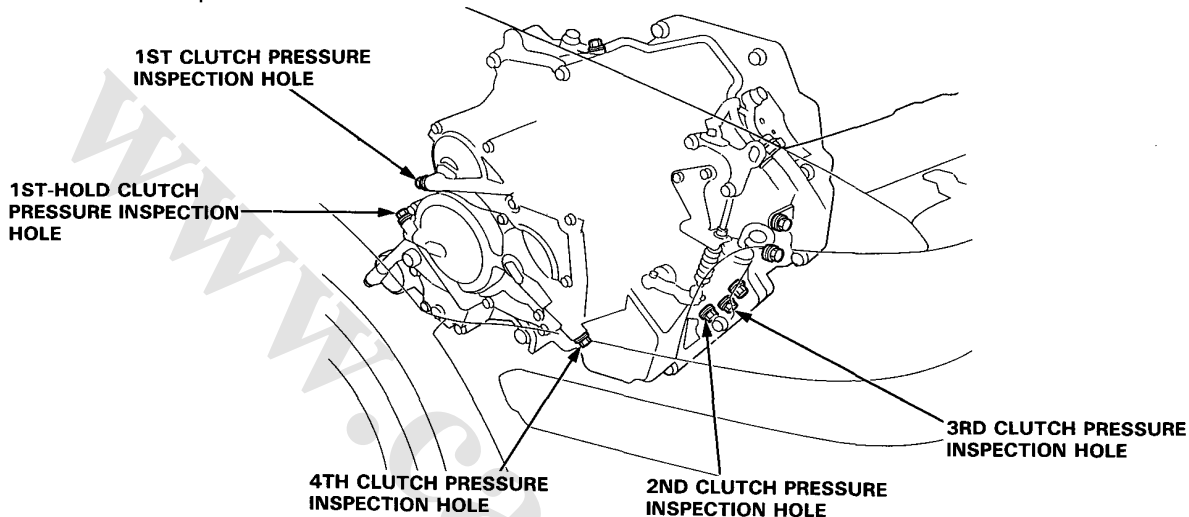

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
1st Clutch	1	No or low 1st pressure	1st Clutch	760–809 kPa (7.75–8.25 kg/cm ² , 110–117 psi)	711 kPa (7.25 kg/cm ² , 103 psi)
1st-hold Clutch	1	No or low 1st-hold pressure	1st-hold Clutch		
2nd Clutch	2	No or low 2nd pressure	2nd Clutch		
2nd Clutch	D₃ or D₄	No or low 2nd pressure	2nd Clutch	392 kPa (4.0 kg/cm ² , 57 psi) (throttle fully closed)	353 kPa (3.6 kg/cm ² , 51 psi) (throttle fully closed)
3rd Clutch	D₃	No or low 3rd pressure	3rd Clutch	809 kPa (8.25 kg/cm ² , 117 psi) (throttle more than 1/4 opened)	711 kPa (7.25 kg/cm ² , 103 psi) (throttle more than 1/4 opened)
4th Clutch	D₄	No or low 4th pressure	4th Clutch	412 kPa (4.2 kg/cm ² , 60 psi) (throttle fully closed)	353 kPa (3.6 kg/cm ² , 51 psi) (throttle fully closed)
	R			809 kPa (8.25 kg/cm ² , 117 psi) (throttle more than 1/4 opened)	711 kPa (7.25 kg/cm ² , 103 psi) (throttle more than 1/4 opened)
	R	No or low 4th pressure	Servo valve or 4th Clutch	760–809 kPa (7.75–8.25 kg/cm ² , 110–117 psi)	711 kPa (7.25 kg/cm ² , 103 psi)

(cont'd)


Pressure Testing

(cont'd)


Clutch Low/High Pressure Test

1. Set the parking brake and block rear wheels securely.
2. Raise the car and support with safety stands.
3. Attach the gauge set to the appropriate pressure test port.
4. Remove the cable end of the throttle control lever.


NOTE: Do not loosen the locknuts, simply unhook the cable end.

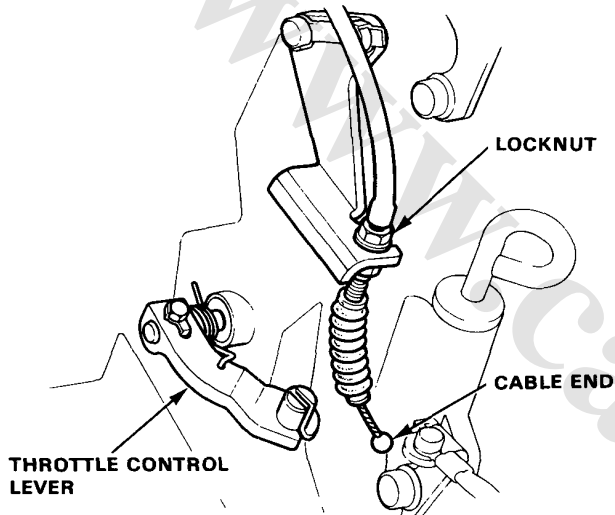


5. Warm up the engine to normal operating temperature (cooling fan comes on).
6. With the engine idling, move the selector lever to or .
7. Slowly move the throttle linkage to increase engine rpm until pressure is indicated on the appropriate gauge. Then release the throttle linkage, allowing the engine to return to an idle, and record the pressure reading.

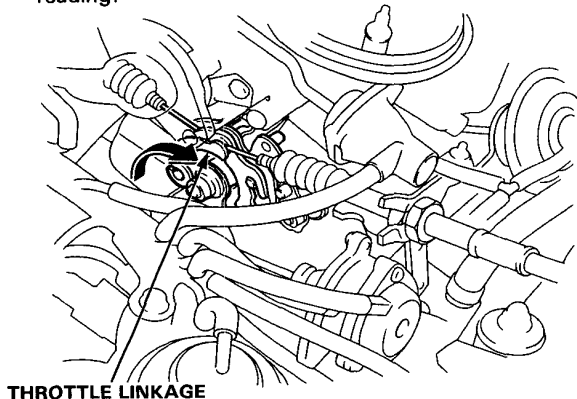

8. With the engine idling, lift the throttle control lever up approximately 1/2 of its possible travel and increase the engine rpm until pressure is indicated on the appropriate gauge. Record the highest pressure reading obtained.

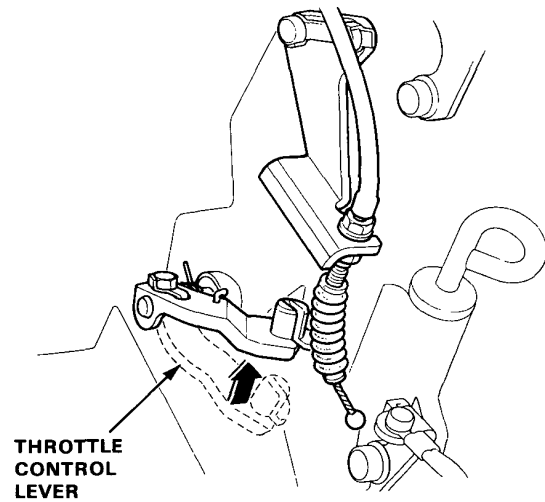

9. Repeat steps 7 and 8 for each clutch pressure being inspected.

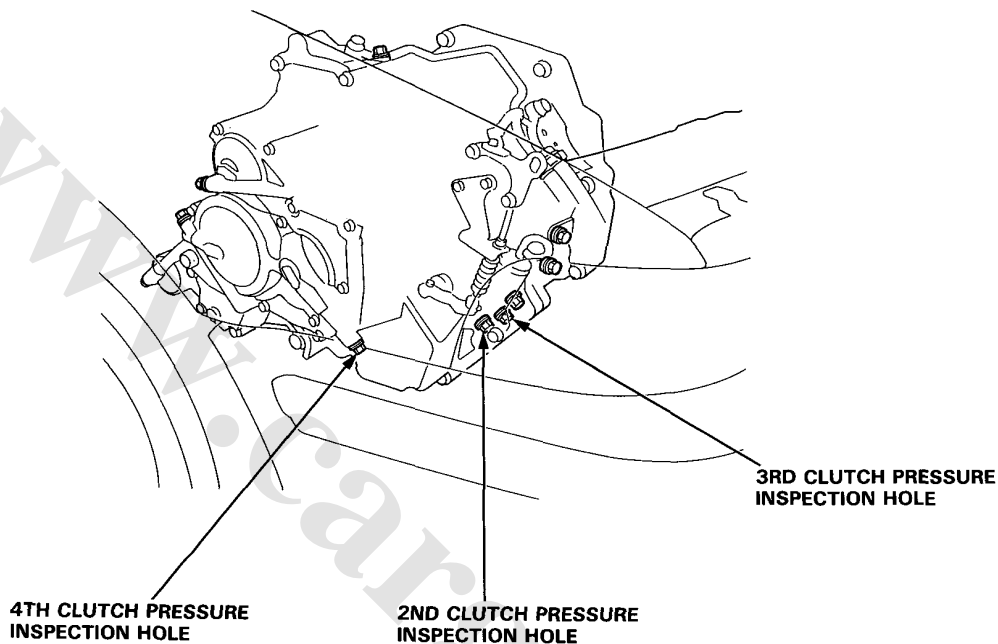


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
2nd Clutch	D ₂ or D ₄	No or low 2nd pressure	2nd Clutch	392–814 kPa (4.0–8.25 kg/cm ² , 57–117 psi)	353 kPa (3.6 kg/cm ² , 51 psi) with lever released.
3rd Clutch	D ₃ or D ₄	No or low 3rd pressure	3rd Clutch		711 kPa (7.25 kg/cm ² , 103 psi) with lever in half or more throttle position.
4th Clutch	D ₄	No or low 4th pressure	4th Clutch	412–809 kPa (4.2–8.25 kg/cm ² , 60–117 psi)	353 kPa (3.6 kg/cm ² , 51 psi) with lever released. 711 kPa (7.25 kg/cm ² , 103 psi) with lever in half or more throttle position.

Pressure Testing

(cont'd)

Throttle Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 1,000 min⁻¹ (rpm).
3. Disconnect the throttle control cable from the throttle lever and set the control lever in full throttle position.

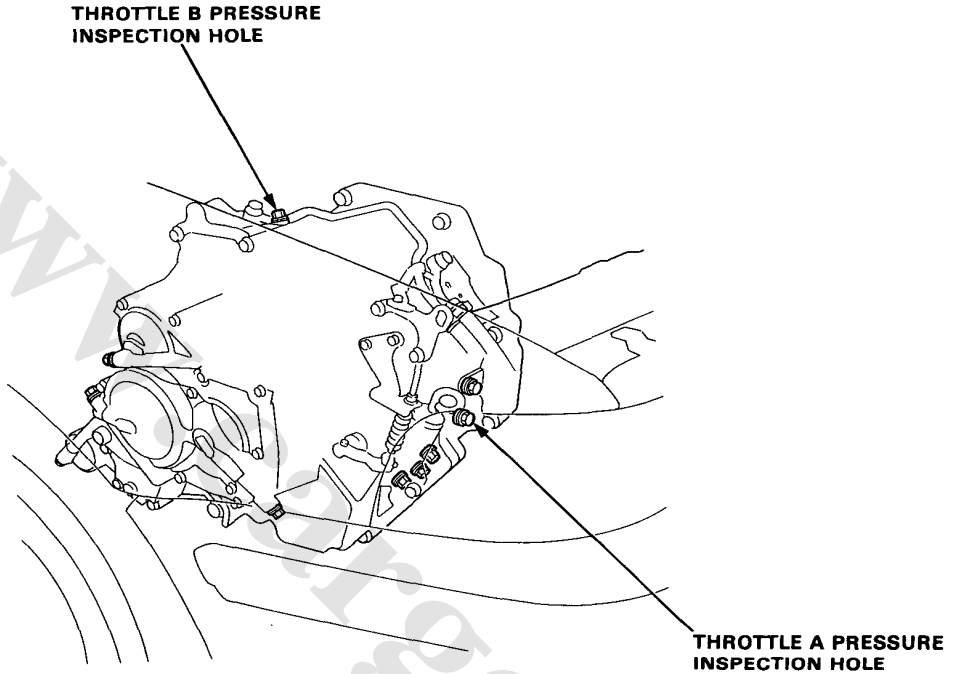


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE		
				Standard	Service Limit	
Throttle A	D ₁ or D ₂	No or low Throttle A pressure	Throttle valve A	F20A2 Engine	514—530 kPa (5.25—5.4 kg/cm ² , 74—76 psi)	509 kPa (5.2 kg/cm ² , 73 psi)
				F20A3 Engine	485—500 kPa (4.95—5.1 kg/cm ² , 70—72 psi)	480 kPa (4.9 kg/cm ² , 69 psi)
Throttle B	D ₁ or D ₂	No or low Throttle B pressure	Throttle valve B	0 kPa (0 kg/cm ² , 0 psi) with lever released 760—808 kPa (7.75—8.25 kg/cm ² , 110—117 psi) with lever in full throttle position	710 kPa (7.25 kg/cm ² , 103 psi) with lever in full throttle position	



Governor Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Raise the front of the car and support with safety stands.
3. Run the vehicle at 60 km/h (38 mph).

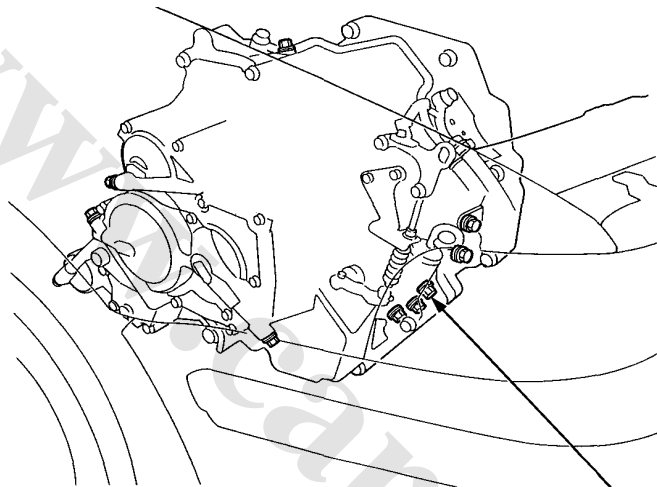

GOVERNOR PRESSURE INSPECTION HOLE



PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE		
					Standard	Service Limit
Governor	D ₁ or D ₂	No or low governor pressure	Governor valve	F20A2 Engine	225—235 kPa (2.3—2.4 kg/cm ² , 32—34 psi)	220 kPa (2.25 kg/cm ² , 32 psi)
				F20A3 Engine	166—176 kPa (1.7—1.8 kg/cm ² , 24—25 psi)	162 kPa (1.65 kg/cm ² , 23 psi)

Throttle Control Cable


Inspection

NOTE: Before inspecting the throttle control cable, make sure;


- Throttle cable free play is correct (see Section 11).
 - Idle speed is correct (see Section 11).
 - To warm up the engine to normal operating temperature (cooling fan comes on).
1. Verify that the throttle control lever is synchronized with the throttle linkage while depressing and releasing the accelerator pedal.
 2. If the throttle control lever is not synchronized with the throttle linkage, adjust the throttle control cable.

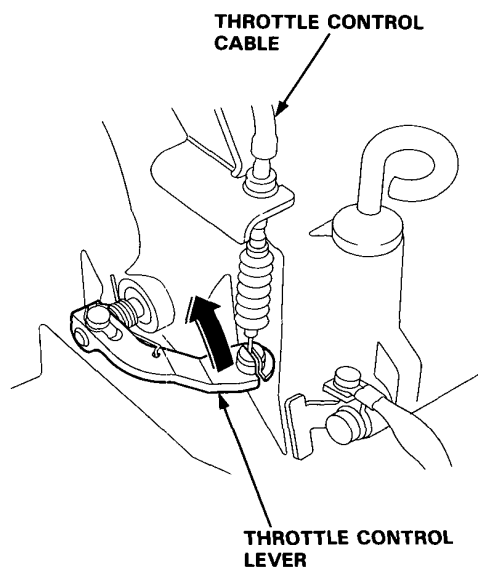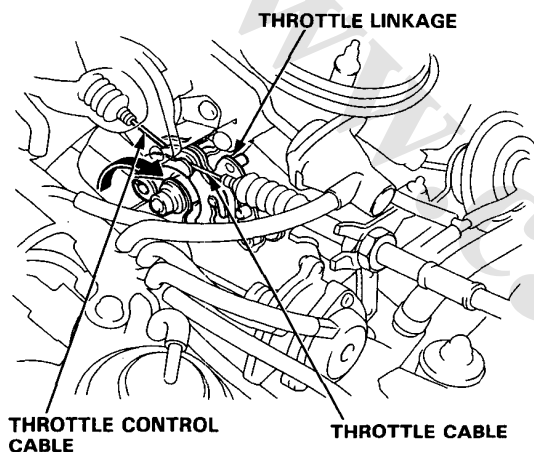


3. Check that there is play in the throttle control lever while depressing the accelerator pedal to the full-throttle position.

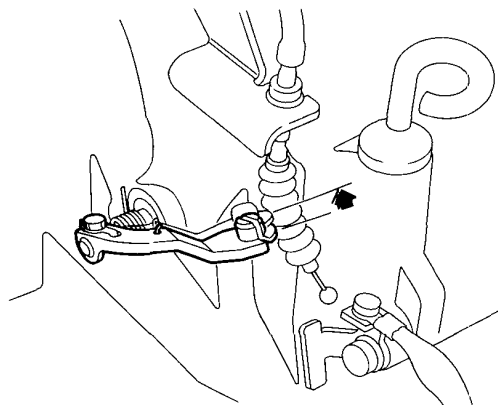

4. Remove the cable end of the throttle control cable from the throttle control lever.
5. Check that the throttle control lever moves smoothly.

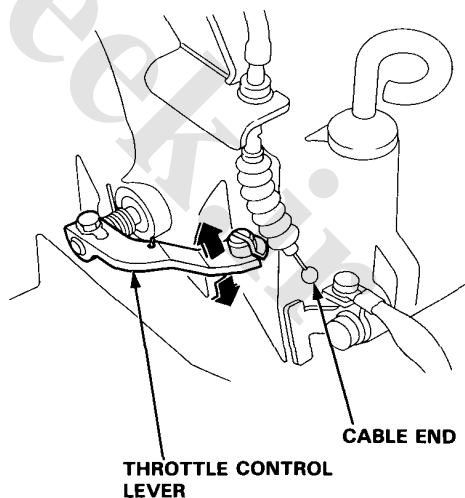




Adjustment


NOTE: Before adjusting the throttle control cable, make sure;

- Throttle cable free play is correct (see Section 11).
- Idle speed is correct (see Section 11).
- To warm up the engine to normal operating temperature (cooling fan comes on).


1. Verify that the throttle linkage is in the full-closed position.

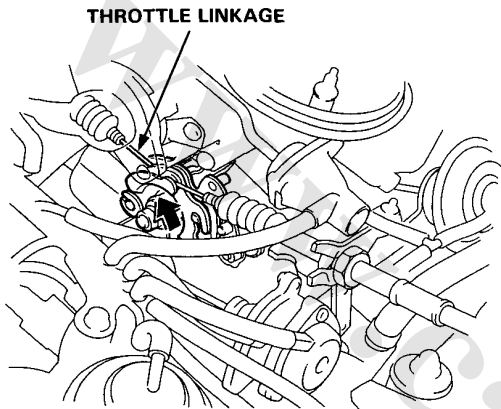

2. Loosen the locknut of the throttle control cable at the throttle control lever.
3. Remove the free play of the throttle control cable with the locknut, while pushing the throttle control lever to the full-closed position as shown.

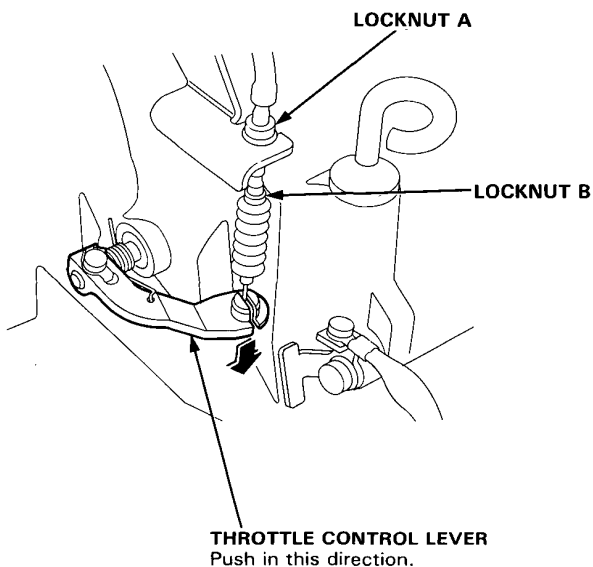


4. Tighten the locknut.

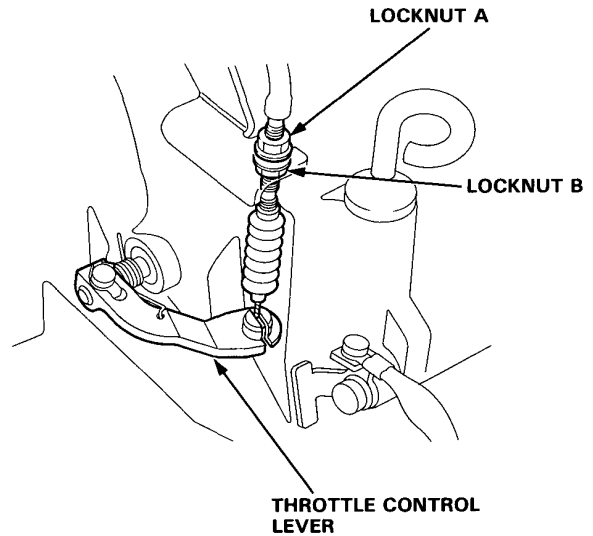

5. After tightening the locknuts, inspect the synchronization and throttle control lever movement.

Illustrated Index

R. Side Cover

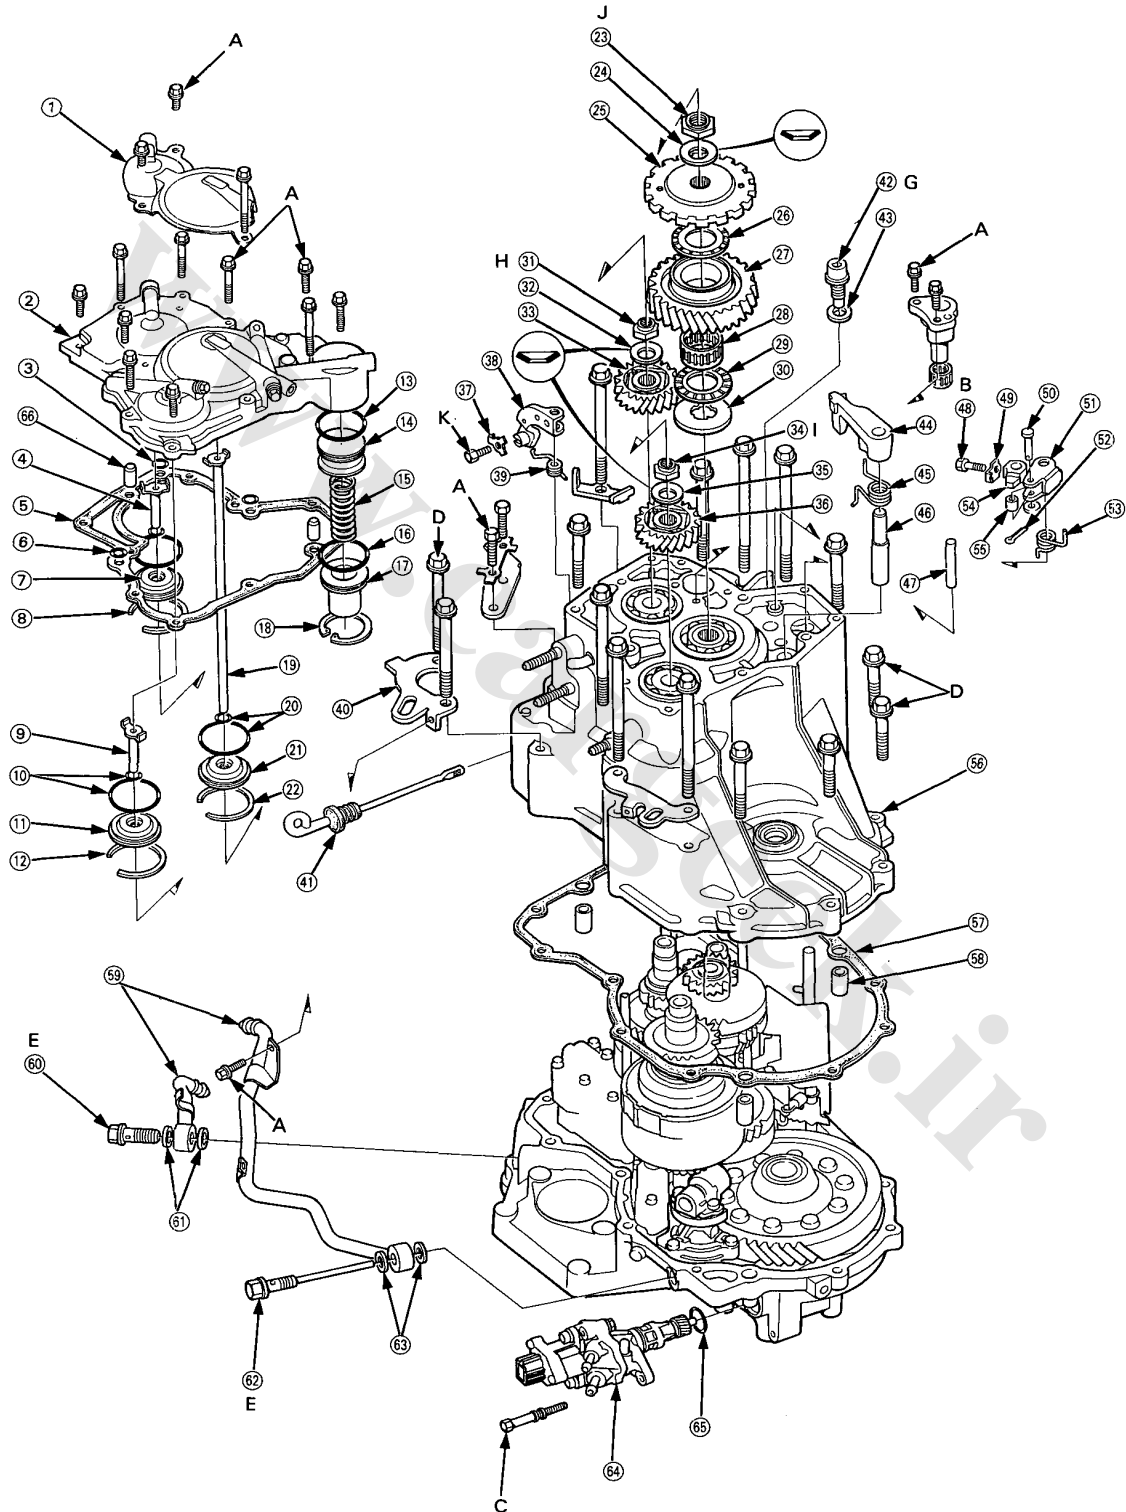




- ① R. SIDE COVER PROTECTOR
 ② R. SIDE COVER
 ③ O-RING Replace.
 ④ 4TH CLUTCH FEED PIPE
 ⑤ R. SIDE COVER GASKET Replace.
 ⑥ O-RING Replace.
 ⑦ FEED PIPE GUIDE
 ⑧ SNAP RING
 ⑨ 1ST CLUTCH FEED PIPE
 ⑩ O-RING Replace.
 ⑪ FEED PIPE GUIDE
 ⑫ SNAP RING
 ⑬ O-RING Replace.
 ⑭ 1ST-HOLD ACCUMULATOR PISTON
 ⑮ 1ST-HOLD ACCUMULATOR SPRING
 ⑯ O-RING Replace.
 ⑰ 1ST-HOLD ACCUMULATOR COVER
 ⑱ SNAP RING
 ⑲ 1ST-HOLD CLUTCH FEED PIPE
 ⑳ O-RING Replace.
 ㉑ FEED PIPE GUIDE
 ㉒ SNAP RING
 ㉓ COUNTERSHAFT LOCKNUT, 24 x 1.25 mm
 (Flange nut) Replace.
 ㉔ CONICAL SPRING WASHER Replace.
 ㉕ PARKING GEAR
 ㉖ THRUST NEEDLE BEARING
 ㉗ COUNTERSHAFT IDLER GEAR
 ㉘ NEEDLE BEARING
 ㉙ THRUST NEEDLE BEARING
 ㉚ THRUST WASHER
 ㉛ MAINSHAFT LOCKNUT, 24 x 1.25 mm
 (Flange nut) Replace.
 NOTE: Left-hand threads
 ㉜ CONICAL SPRING WASHER Replace.
 ㉝ MAINSHAFT IDLER GEAR
 ㉞ SECONDARY SHAFT LOCKNUT, 24 x 1.25 mm
 (Flange nut) Replace.
 ㉟ CONICAL SPRING WASHER Replace.
 ㊱ SECONDARY SHAFT IDLER GEAR
 ㊲ LOCK WASHER Replace.
 ㊳ THROTTLE CONTROL LEVER
 ㊴ THROTTLE CONTROL LEVER SPRING
 ㊵ TRANSMISSION HANGER
 ㊶ ATF LEVEL GAUGE
 ㊷ DRAIN PLUG
 ㊸ SEALING WASHER Replace.
 ㊹ PARKING BRAKE PAWL
 ㊺ PARKING BRAKE PAWL SPRING
 ㊻ PARKING BRAKE PAWL SHAFT
 ㊼ PARKING BRAKE PAWL STOPPER
 ㊽ SPECIAL BOLT
 ㊾ LOCK WASHER Replace.
 ㊿ ROLLER PIN
 ① PARKING BRAKE LEVER
 ② COTTER PIN Replace.
 ③ PARKING BRAKE SPRING
 ④ PARKING BRAKE STOPPER
 ⑤ PARKING BRAKE ROLLER
 ⑥ TRANSMISSION HOUSING
 ⑦ TRANSMISSION HOUSING GASKET Replace.
 ⑧ DOWEL PIN
 ⑨ ATF COOLER PIPE
 ⑩ JOINT BOLT
 ⑪ SEALING WASHER Replace.
 ⑫ JOINT BOLT
 ⑬ SEALING WASHER Replace.
 ⑭ SPEEDOMETER SENSOR
 ⑮ O-RING Replace.
 ⑯ DOWEL PIN
 ⑰ REVERSE IDLER GEAR SHAFT HOLDER
 ⑱ NEEDLE BEARING

TORQUE SPECIFICATIONS

Ref. No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 × 1.0 mm	
B	14 N·m (1.4 kg-m, 10 lb-ft)	6 × 1.0 mm	
C	18 N·m (1.8 kg-m, 13 lb-ft)	8 × 1.25 mm	
D	55 N·m (5.5 kg-m, 40 lb-ft)	10 × 1.25 mm	
E	29 N·m (2.9 kg-m, 21 lb-ft)	12 × 1.25 mm	
G	50 N·m (5.0 kg-m, 36 lb-ft)	18 × 1.5 mm	Joint Bolt
H	230 → 0 → 170 N·m (23.0 → 0 → 17.0 kg-m, 166 → 0 → 123 lb-ft)	24 × 1.25 mm	Drain Plug Mainshaft Locknut
I	230 → 0 → 170 N·m (23.0 → 0 → 17.0 kg-m, 166 → 0 → 123 lb-ft)	24 × 1.25 mm	Left-hand threads Secondary Shaft
J	230 → 0 → 170 N·m (23.0 → 0 → 17.0 kg-m, 166 → 0 → 123 lb-ft)	24 × 1.25 mm	Locknut Countershaft
K	8 N·m (0.8 kg-m, 6 lb-ft)	5 × 0.8 mm	Locknut

Illustrated Index

Transmission Housing

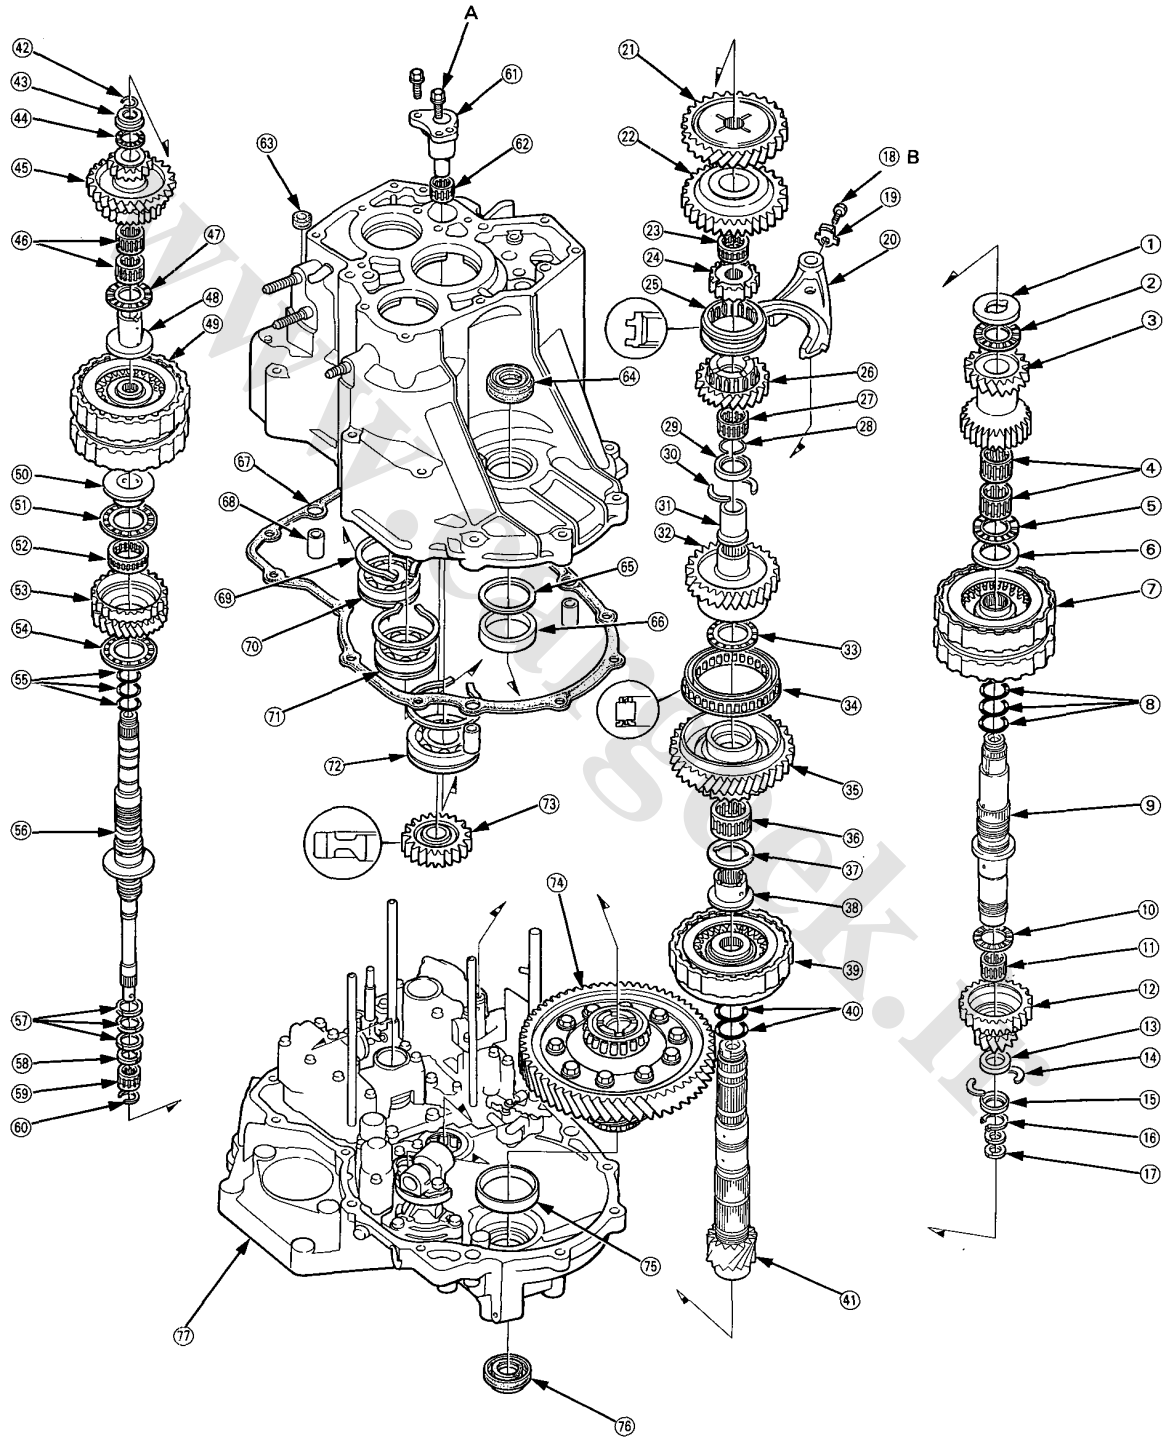




- ① THRUST WASHER
 ② THRUST NEEDLE BEARING
 ③ SECONDARY SHAFT 2ND GEAR
 ④ NEEDLE BEARING
 ⑤ THRUST NEEDLE BEARING
 ⑥ SPLINED WASHER Selective part
 ⑦ 1ST/2ND CLUTCH ASSEMBLY
 ⑧ O-RINGS Replace.
 ⑨ SECONDARY SHAFT
 ⑩ THRUST NEEDLE BEARING
 ⑪ NEEDLE BEARING
 ⑫ SECONDARY SHAFT 1ST GEAR
 ⑬ DISTANCE COLLAR, 5.0 mm
 ⑭ COTTERS, 29 mm
 ⑮ COTTER RETAINER
 ⑯ SNAP RING
 ⑰ SEALING RINGS, 32 mm
 ⑱ LOCK BOLT
 ⑲ LOCK WASHER Replace.
 ⑳ SHIFT FORK
 ㉑ COUNTERSHAFT 2ND GEAR
 ㉒ COUNTERSHAFT REVERSE GEAR
 ㉓ NEEDLE BEARING
 ㉔ REVERSE SELECTOR
 ㉕ REVERSE SELECTOR HUB
 ㉖ COUNTERSHAFT 4TH GEAR
 ㉗ NEEDLE BEARING
 ㉘ SNAP RING
 ㉙ COLLAR, 32 mm
 ㉚ COTTERS, 29 mm
 ㉛ DISTANCE COLLAR
 ㉜ COUNTERSHAFT 3RD GEAR
 ㉝ THRUST NEEDLE BEARING
 ㉞ ONE-WAY CLUTCH
 ㉟ COUNTERSHAFT 1ST GEAR
 ㊱ NEEDLE BEARING
 ㊲ THRUST WASHER
 ㊳ COUNTERSHAFT 3RD GEAR COLLAR
 ㊴ 1ST-HOLD CLUTCH ASSEMBLY
 ㊵ O-RINGS Replace.
 ㊶ COUNTERSHAFT
 ㊷ SNAP RING
 ㊸ COLLAR
 ㊹ THRUST NEEDLE BEARING
 ㊺ MAINSHAFT 4TH/REVERSE GEAR
 ㊻ NEEDLE BEARINGS
 ㊼ THRUST NEEDLE BEARING
 ㊽ 4TH GEAR COLLAR
 ㊾ 3RD/4TH CLUTCH ASSEMBLY
 ㊿ 3RD GEAR COLLAR
 ① THRUST NEEDLE BEARING
 ② NEEDLE BEARING
 ③ MAINSHAFT 3RD GEAR
 ④ THRUST NEEDLE BEARING
 ⑤ O-RINGS Replace.
 ⑥ MAINSHAFT
 ⑦ SEALING RINGS, 35 mm
 ⑧ SEALING RING, 29 mm
 ⑨ NEEDLE BEARING
 ⑩ SET RING
 ⑪ REVERSE IDLER GEAR SHAFT HOLDER
 ⑫ NEEDLE BEARING
 ⑬ OIL SEAL Replace.
 ⑭ TRANSMISSION HOUSING OIL SEAL Replace.
 ⑮ THRUST SHIM Selective part
 ⑯ BEARING OUTER RACE
 ⑰ TRANSMISSION HOUSING GASKET Replace.
 ⑱ DOWEL PIN
 ⑲ SNAP RING
 ㉑ TRANSMISSION HOUSING MAINSHAFT BEARING
 ㉒ TRANSMISSION HOUSING SECONDARY SHAFT BEARING
 ㉓ TRANSMISSION HOUSING COUNTERSHAFT BEARING
 ㉔ REVERSE IDLER GEAR
 ㉕ DIFFERENTIAL ASSEMBLY
 ㉖ BEARING OUTER RACE
 ㉗ TORQUE CONVERTER HOUSING OIL SEAL Replace.
 ㉘ TORQUE CONVERTER HOUSING

TORQUE SPECIFICATIONS

Ref. No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 × 1.0 mm	
B	14 N·m (1.4 kg-m, 10 lb-ft)	6 × 1.0 mm	

Illustrated Index

Torque Converter Housing

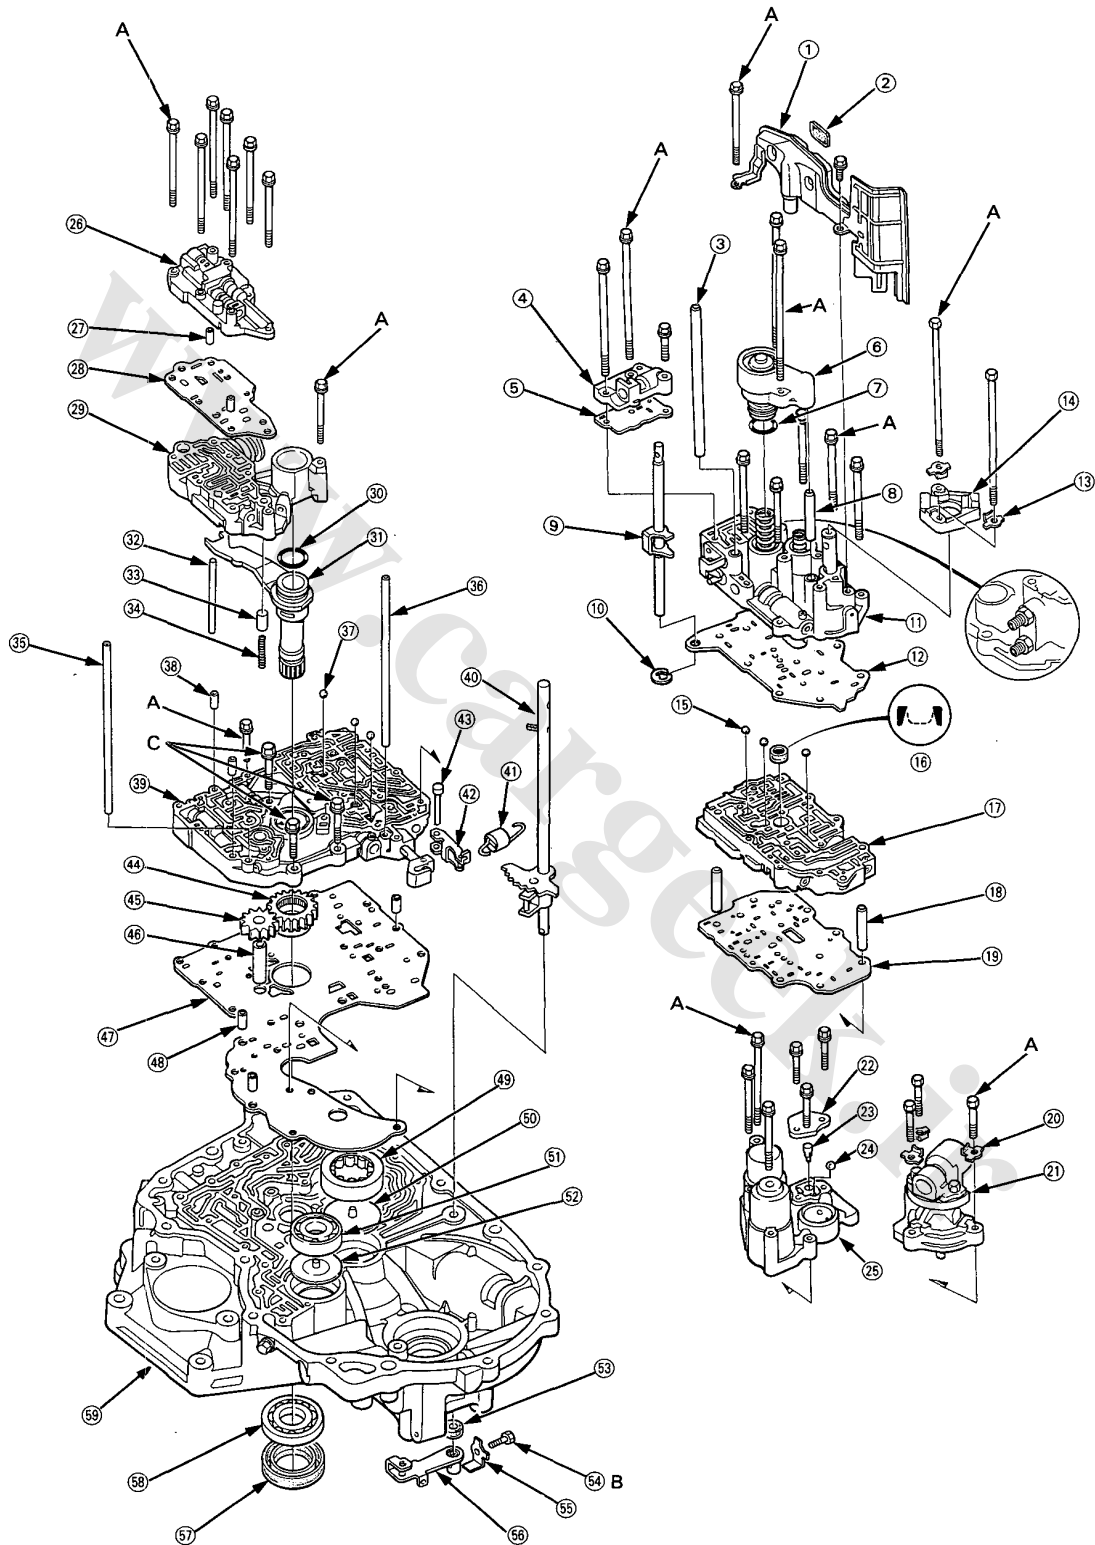



- | | | |
|-----------------------------|-----------------------------|---------------------------------------|
| ① ATF STRAINER | ⑩ E-RING Replace. | ⑳ STOPPER PIN |
| ② MAGNET | ⑪ SERVO BODY | ㉑ TORQUE CONVERTER CHECK VALVE |
| ③ OIL FEED PIPE | ⑫ SERVO SEPARATOR PLATE | ㉒ TORQUE CONVERTER CHECK VALVE SPRING |
| ④ MODULATOR VALVE BODY | ⑬ LOCK WASHER Replace. | ㉓ OIL FEED PIPE |
| ⑤ MODULATOR SEPARATOR PLATE | ⑭ SERVO DETENT BASE | ㉔ OIL FEED PIPE |
| ⑥ 4TH ACCUMULATOR COVER | ⑮ CHECK BALL | ㉕ CHECK BALL |
| ⑦ O-RING Replace. | ⑯ FILTER Replace. | ㉖ DOWEL PIN |
| ⑧ OIL FEED PIPE | ⑰ SECONDARY VALVE BODY | ㉗ MAIN VALVE BODY |
| ⑨ THROTTLE CONTROL SHAFT | ⑱ DOWEL PIN | ㉘ CONTROL SHAFT ASSEMBLY |
| | ⑲ SECONDARY SEPARATOR PLATE | ㉙ DETENT SPRING |
| | ㉒ LOCK WASHER Replace. | ㉚ DETENT ARM |
| | ㉓ GOVERNOR BODY | ㉛ DETENT ARM SHAFT |
| | ㉔ ACCUMULATOR BODY COVER | ㉜ OIL PUMP DRIVE GEAR |
| | ㉕ 1ST ACCUMULATOR CHOKE | ㉝ OIL PUMP DRIVEN GEAR |
| | ㉖ STEEL BALL | ㉞ OIL PUMP DRIVEN GEAR SHAFT |
| | ㉗ 1ST/2ND ACCUMULATOR BODY | ㉟ MAIN SEPARATOR PLATE |
| | ㉘ THROTTLE VALVE BODY | ㊱ DOWEL PIN |
| | ㉙ DOWEL PIN | ㊲ COUNTERSHAFT NEEDLE BEARING |
| | ㉚ THROTTLE SEPARATOR PLATE | ㊳ OIL GUIDE PLATE Replace. |
| | ㉛ REGULATOR VALVE BODY | ㊴ SECONDARY SHAFT BALL BEARING |
| | ㉜ O-RING Replace. | ㊵ OIL GUIDE PLATE Replace. |
| | ㉝ STATOR SHAFT | ㊶ OIL SEAL Replace. |
| | | ㊷ SPECIAL BOLT |
| | | ㊸ LOCK WASHER Replace. |
| | | ㊹ CONTROL LEVER |
| | | ㊺ OIL SEAL Replace. |
| | | ㊻ MAINSHAFT BALL BEARING |
| | | ㊼ TORQUE CONVERTER HOUSING |

TORQUE SPECIFICATIONS

Ref. No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 × 1.0 mm	
B	14 N·m (1.4 kg-m, 10 lb-ft)	6 × 1.0 mm	
C	18 N·m (1.8 kg-m, 13 lb-ft)	8 × 1.25 mm	

R. Side Cover

Removal

NOTE:



- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- When removing the transmission R. side cover, replace the following:
 - R. side cover gasket
 - Lock washers
 - Transmission housing gasket
 - O-rings
 - Each shaft locknut and conical spring washer
 - Sealing washers

1. Remove the 11 bolts securing the R. side cover, then remove the cover.

NOTE: It is not necessary to remove the R. side cover protector.

2. Slip the special tool onto the mainshaft.

MAINSHAFT HOLDER
07GAB-PF50101 or
07GAB-PF50100

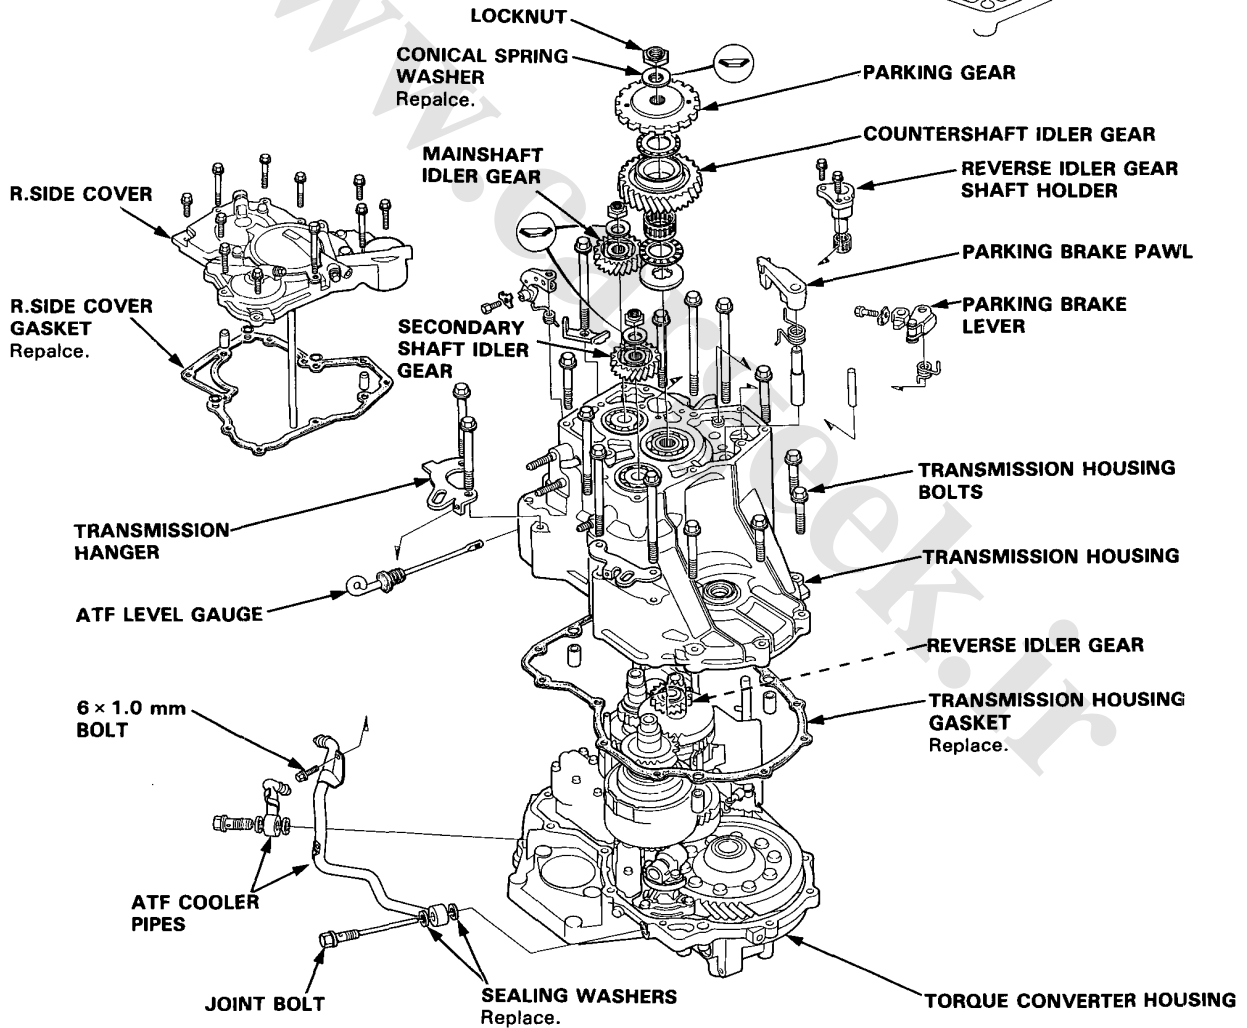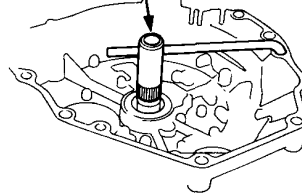




3. Engage the parking brake pawl with the parking gear.
4. Cut the lock tabs of each shaft locknut using a chisel as shown. Then remove the locknuts and conical spring washers from each shaft.


NOTE:

- Mainshaft locknut has left-hand threads.
- Clean the old locknuts, they are used when installing to press the idler gears on the mainshaft and secondary shaft and the parking gear on the countershaft.

CAUTION: Keep all of the chiseled particles out of the transmission.

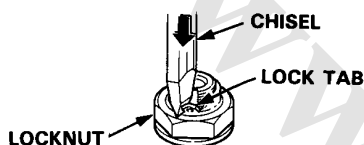

5. Remove the special tool from the mainshaft after removing the locknuts.
6. Remove the parking gear using a puller from the countershaft as shown. Then remove the idler gears using a puller from the mainshaft and secondary shaft.

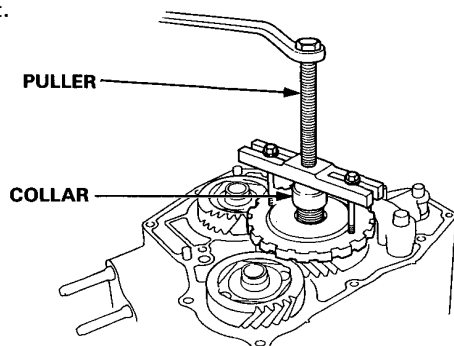


7. Remove the countershaft idler gear, needle bearing, thrust needle bearing, and thrust washer from the countershaft.
8. Remove the parking brake pawl, spring, shaft, and stopper from the housing.
9. Remove the throttle control lever and spring from the throttle control shaft.
10. Remove the ATF cooler pipe mounting bolt from the transmission hanger.
11. Remove the transmission housing mounting bolts.

12. Remove the reverse idler gear shaft assembly.


NOTE: The steel ball will not pop out because it is staked in the shaft.

13. Move the reverse idler gear to disengage it from the countershaft reverse gear as shown.

NOTE: The transmission housing will not separate from the torque converter housing if the reverse idler gear is not removed.

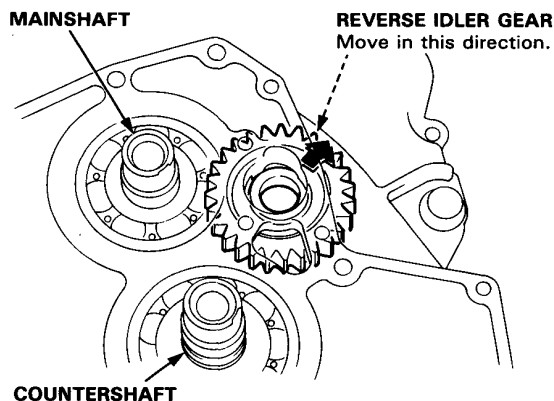


14. Align the spring pin with the transmission housing groove by turning the control shaft.
15. Install the special tool on the transmission housing, then remove the housing as shown.

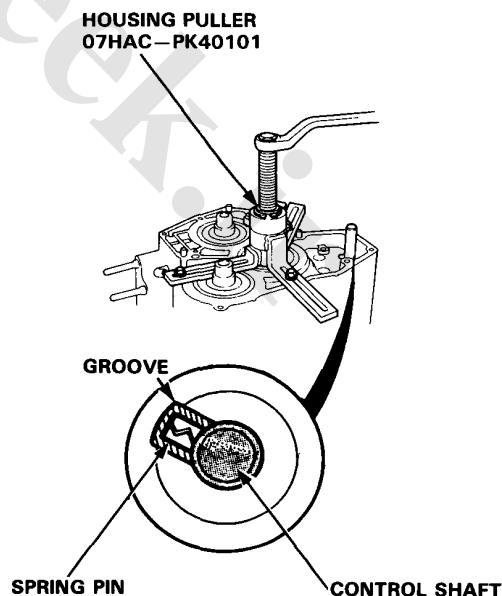

Transmission Housing

Removal

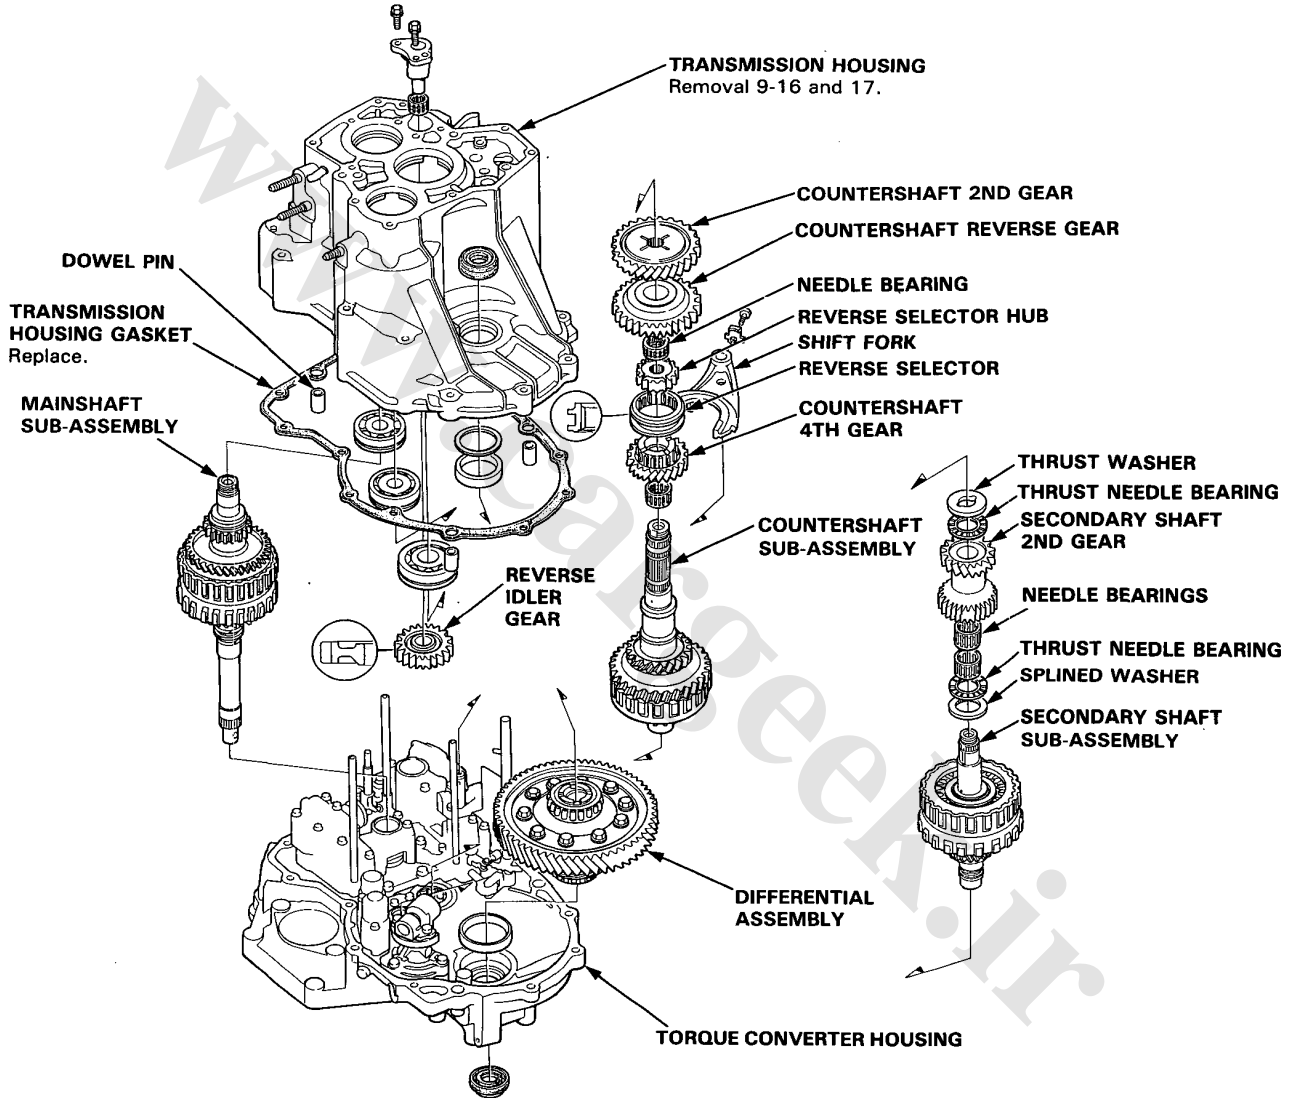




NOTE:


- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- When removing the transmission housing, replace the following:
 - Transmission housing gasket
 - Lock washer

1. Remove the transmission housing (9-16 and 17).
2. Remove the reverse idler gear from the transmission housing.
3. Remove the countershaft 2nd gear, reverse gear, secondary shaft 2nd gear, thrust washer, and thrust needle bearing together from the countershaft and secondary shaft.
4. Remove the lock bolt securing the shift fork, then remove the fork with the reverse selector from the countershaft.
5. Remove the needle bearings, thrust needle bearing, and splined washer from the secondary shaft.
6. Remove the secondary shaft sub-assembly.
7. Remove the mainshaft sub-assembly.
8. Remove the countershaft sub-assembly.
9. Remove the differential assembly.

Torque Converter Housing/Valve Body

Removal

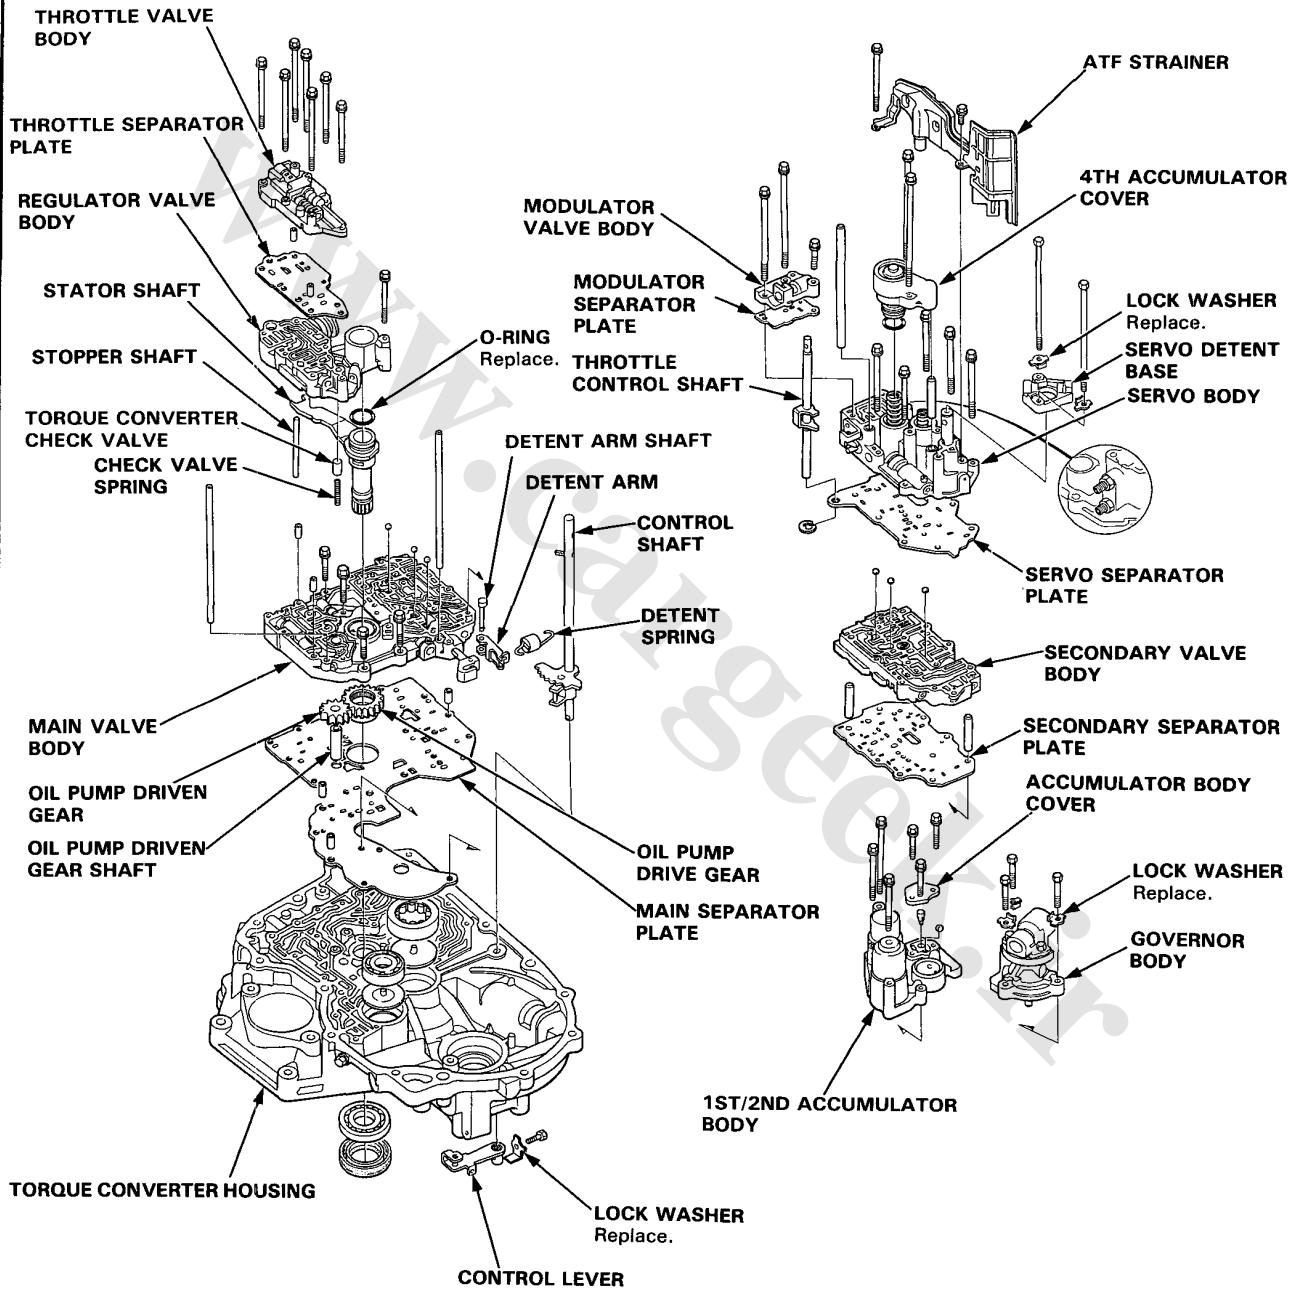

**NOTE:**

- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- When removing the valve body replace the following:
 - O-rings
 - Lock washers

1. Remove the lock bolt securing the control lever, then remove the control lever.
2. Remove the 2 bolts securing the servo detent base, then remove the servo detent base.
3. Remove the 2 bolts securing the ATF strainer, then remove the ATF strainer.
4. Remove the oil feed pipes from the servo body and main valve body.
5. Remove the 3 bolts securing the modulator valve body, then remove the modulator valve body and separator plate.
6. Remove the 2 bolts securing the 4th accumulator cover, then remove the 4th accumulator cover and oil feed pipe.

NOTE: The 4th accumulator cover is spring loaded, to prevent stripping the threads in the servo body, press down on the accumulator cover while unscrewing the bolts.

7. Remove the 5 bolts securing the servo body, then remove the servo body and separator plate.
8. Remove the secondary valve body and separator plate.
9. Remove the 7 bolts securing the throttle valve body, then remove the throttle valve body and separator plate.
10. Remove the 1 bolt securing the regulator valve body, then remove the regulator valve body.

11. Remove the stator shaft and stopper shaft.
12. Remove the detent spring from the detent arm, then remove the control shaft from the torque converter housing.
13. Remove the detent arm and detent arm shaft from the main valve body.
14. Remove the 4 bolts securing the main valve body, then remove the main valve body.
15. Remove the 6 bolts securing the 1st/2nd accumulator body, then remove the 1st/2nd accumulator body.
16. Remove the 3 bolts securing the governor body, then remove the governor body.
17. Remove the oil pump driven gear shaft, then remove the oil pump gears.
18. Remove the main separator plate with 3 dowel pins.


Main Valve Body


Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow all passages.
- Replace valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair.
- Coat all parts with ATF before reassembly.

CAUTION: Do not use a magnet to remove the check balls; it may magnetize the balls.

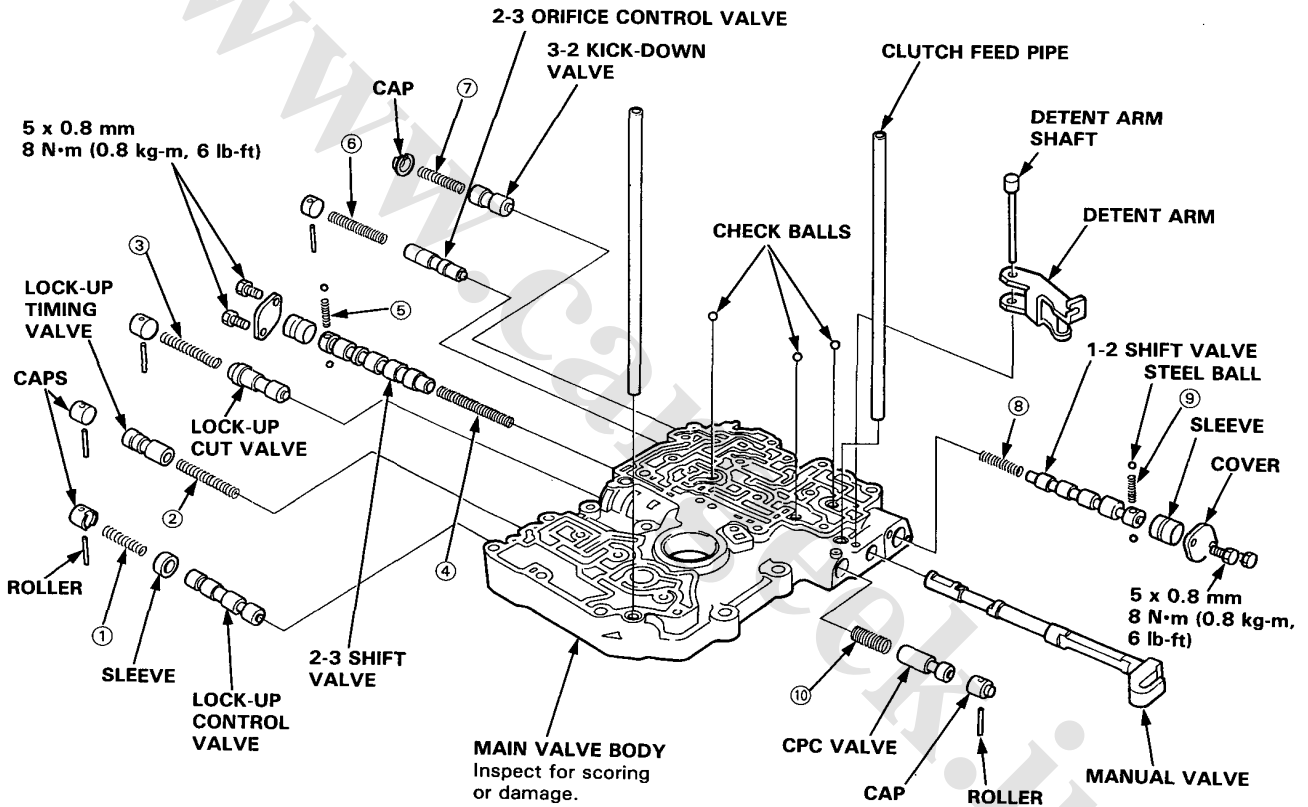

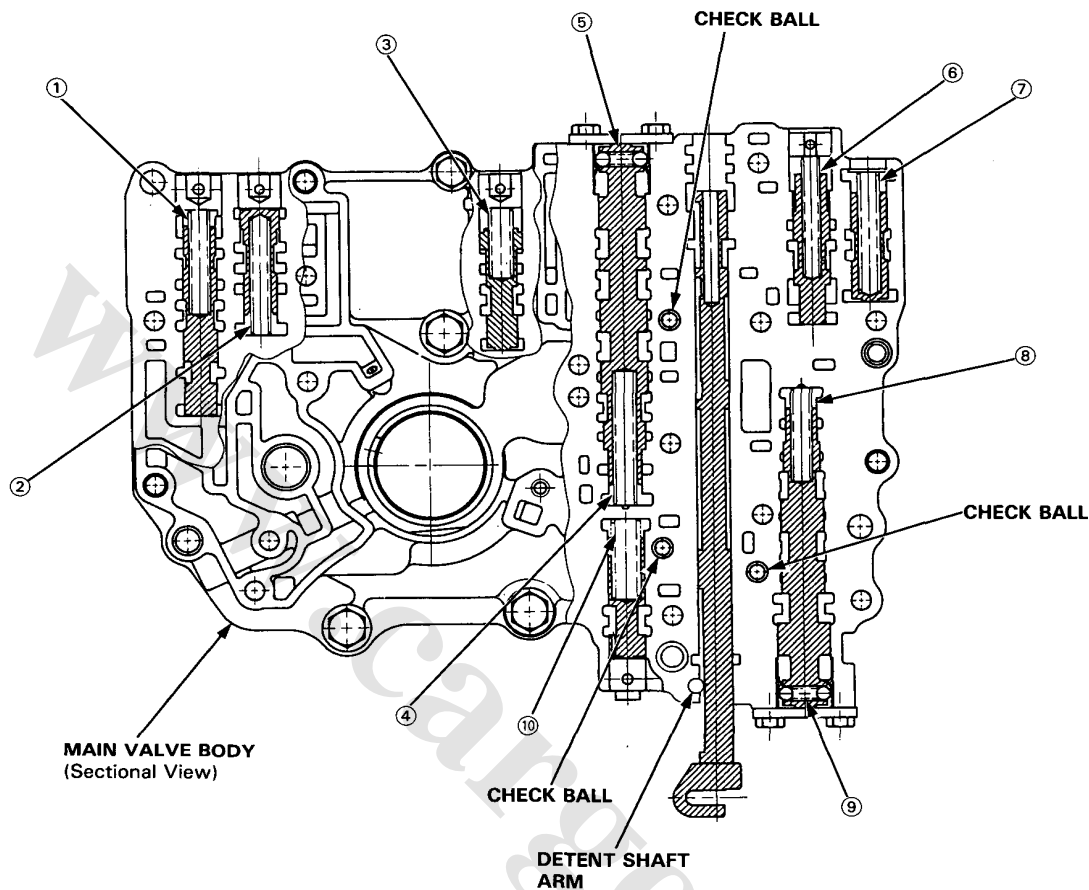

SPRING SPECIFICATIONS

Unit of length: mm (in)


No.	SPRING	STANDARD (NEW)				
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS	
①	Lock-Up Control Spring	0.7 (0.028)	6.6 (0.260)	42.9 (1.689)	14.1	
②	Lock-Up Timing A Spring	F20A2	0.9 (0.035)	6.6 (0.260)	55.9 (2.201)	27.3
		F20A3	0.9 (0.035)	6.6 (0.260)	50.0 (1.969)	27.3
③	Lock-Up Cut Spring	0.7 (0.028)	7.6 (0.299)	31.0 (1.220)	12.7	
④	2-3 Shift Spring	F20A2	0.9 (0.035)	7.6 (0.299)	70.0 (2.756)	28.2
		F20A3	0.8 (0.031)	7.6 (0.299)	58.9 (2.319)	16.8
⑤	2-3 Shift Ball Spring	F20A2	0.5 (0.020)	4.5 (0.177)	11.7 (0.461)	10.5
		F20A3	0.5 (0.020)	4.5 (0.177)	14.1 (0.555)	10.5
⑥	2-3 Orifice Control Spring	0.7 (0.028)	6.6 (0.260)	53.3 (2.098)	20.5	
⑦	3-2 Kick-Down Spring	1.2 (0.047)	7.1 (0.280)	46.9 (1.846)	20.6	
⑧	1-2 Shift Spring	F20A2	0.5 (0.020)	4.6 (0.181)	42.3 (1.665)	25.0
		F20A3	0.6 (0.024)	6.1 (0.240)	42.3 (1.665)	21.1
⑨	1-2 Shift Ball Spring	F20A2	0.4 (0.016)	4.5 (0.177)	13.0 (0.512)	8.7
		F20A3	0.4 (0.016)	4.5 (0.177)	12.6 (0.496)	8.7
⑩	CPC Valve Spring	1.4 (0.055)	9.4 (0.370)	31.2 (1.228)	10.9	

Servo Body

Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Replace the servo body as an assembly if any parts are worn or damaged.
- Replace ATF strainer if its inlet opening is clogged.
- Coat all parts with ATF before reassembly.

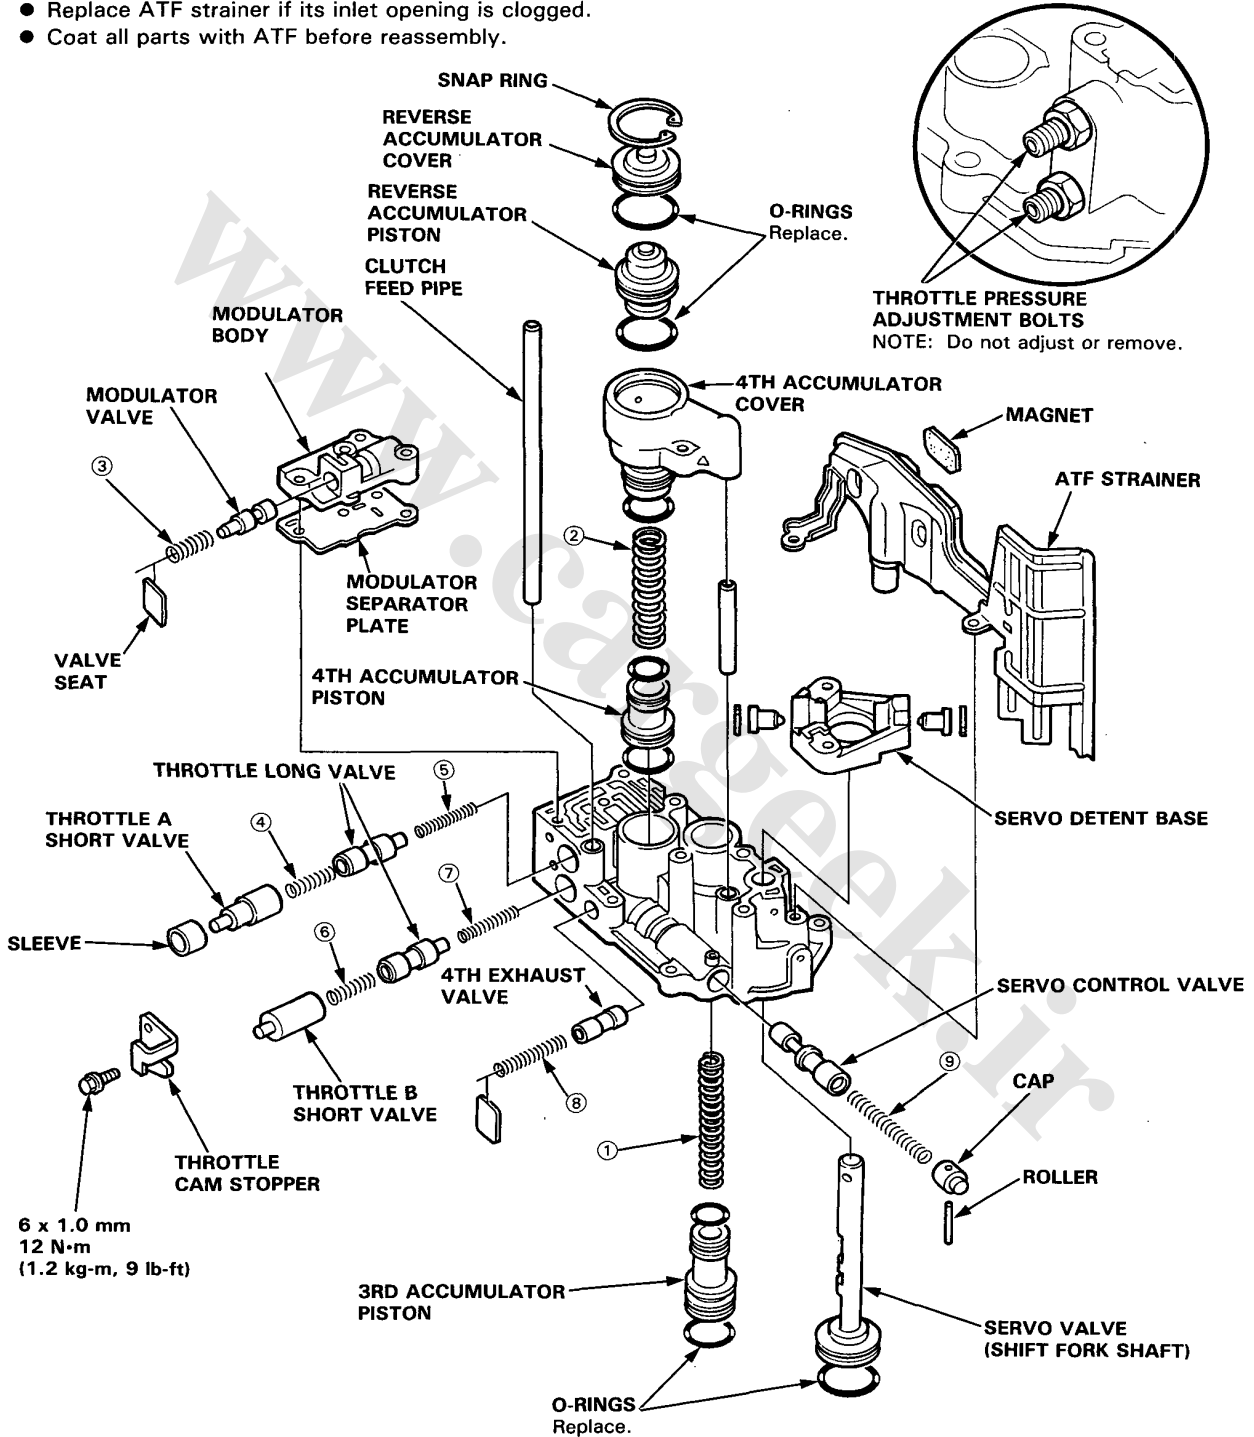




SPRING SPECIFICATIONS

Unit of length: mm (in)

No.	SPRING	STANDARD (NEW)				
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS	
①	3rd Accumulator Spring	2.6 (0.102)	17.5 (0.689)	78.6 (3.094)	11	
②	4th Accumulator Spring	2.6 (0.102)	16.0 (0.630)	84.6 (3.331)	14.3	
③	Modulator Spring	F20A2	1.2 (0.047)	9.4 (0.370)	27.2 (1.071)	8.0
		F20A3	1.2 (0.047)	9.4 (0.370)	26.3 (1.035)	8.0
④	Throttle A Spring	1.0 (0.039)	8.5 (0.335)	21.0 (0.827)	5.8	
		1.0 (0.039)	8.5 (0.335)	21.0 (0.827)	5.4	
		1.0 (0.039)	8.5 (0.335)	22.2 (0.874)	6.0	
		1.0 (0.039)	8.5 (0.335)	22.1 (0.870)	5.5	
⑤	Throttle A Adjusting Spring	0.8 (0.031)	6.2 (0.244)	27.0 (1.063)	8.5	
⑥	Throttle B Spring	1.4 (0.055)	8.5 (0.335)	41.6 (1.638)	14.0	
		1.4 (0.055)	8.5 (0.335)	41.5 (1.634)	10.5	
		1.4 (0.055)	8.5 (0.335)	41.5 (1.634)	11.2	
		1.4 (0.055)	8.5 (0.335)	41.6 (1.638)	12.4	
⑦	Throttle B Adjusting Spring	0.8 (0.031)	6.2 (0.244)	30.0 (1.181)	8	
⑧	4th Exhaust Spring	0.8 (0.031)	6.1 (0.240)	51.1 (2.012)	26.6	
⑨	Servo Control Spring	0.9 (0.035)	6.4 (0.252)	32.5 (1.280)	17.5	

NOTE:

- After disassembly of the ATF strainer, check that it is in good condition, and the inlet opening is not clogged. Replace the strainer with a new one if it is clogged or damaged.
- The strainer can be reused if it is not clogged. Clean the inlet opening thoroughly with compressed air before reinstalling it.

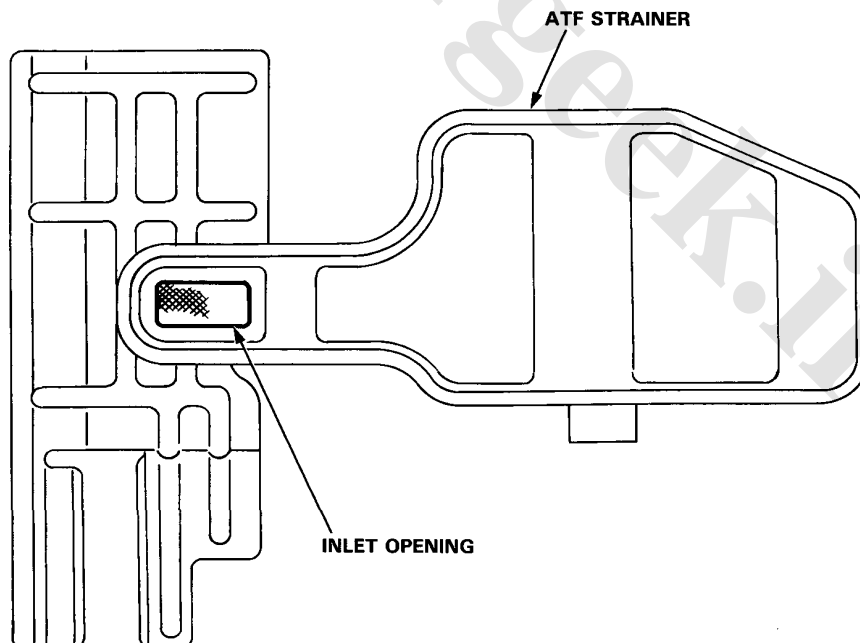



Mainshaft

Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Install thrust needle bearings with unrolled edge of bearing retainer facing washer.
- Inspect thrust needle and needle bearings for galling and rough movement.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damage to the O-rings.

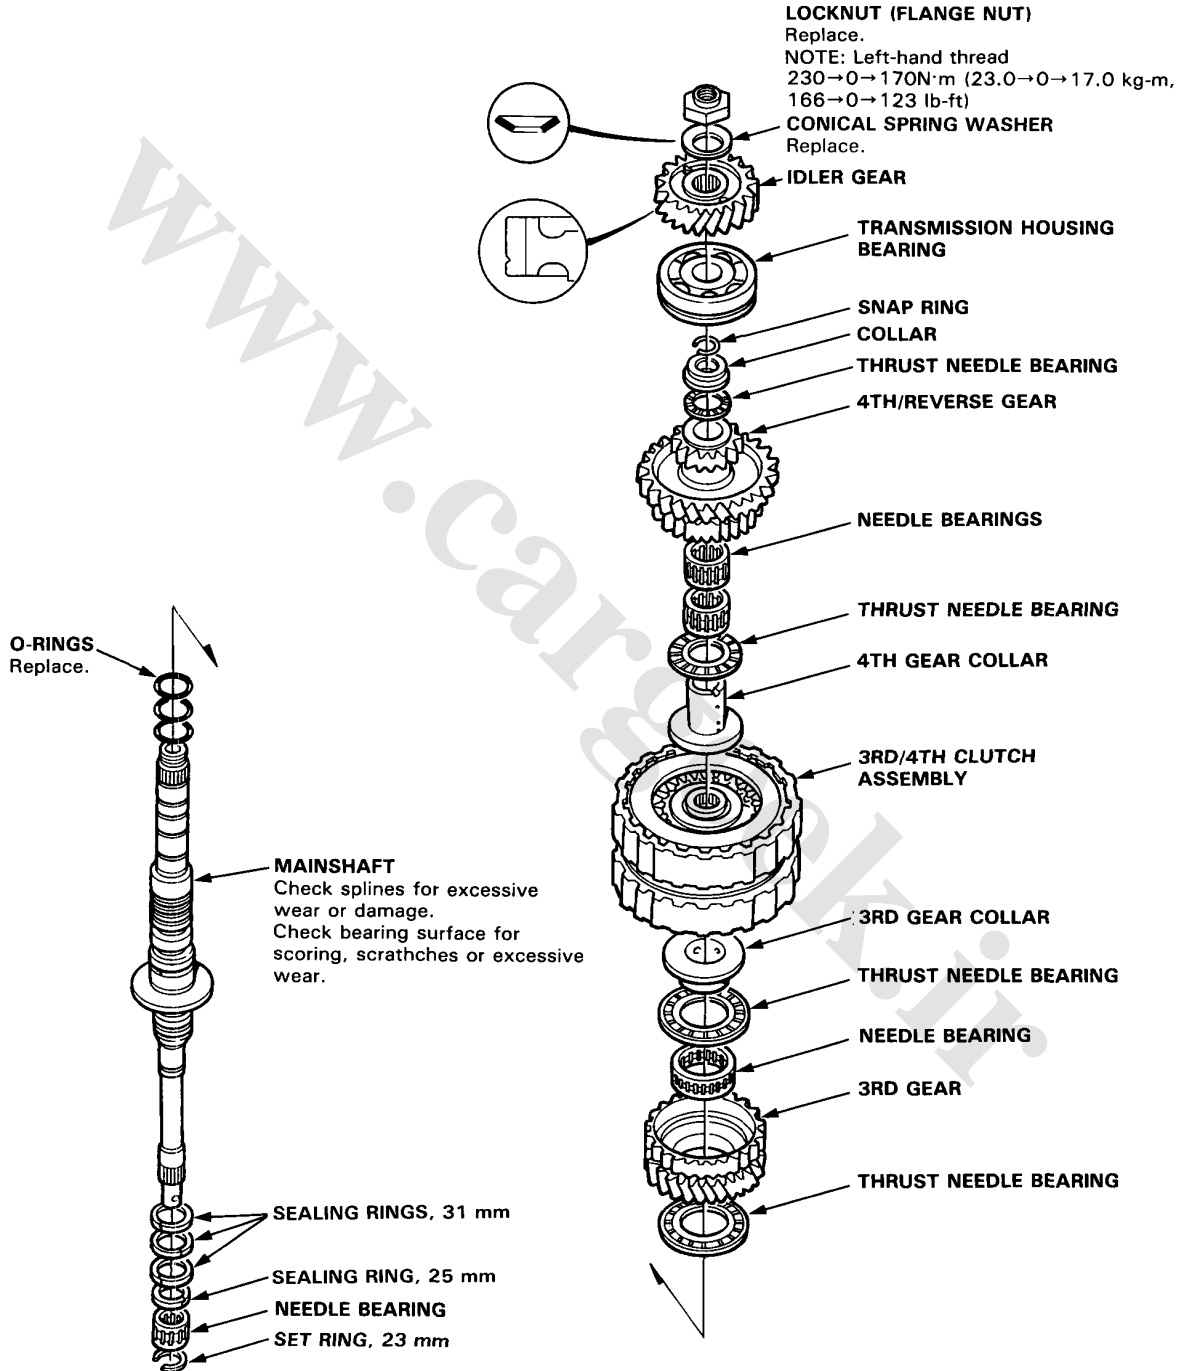




Countershaft

Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Install thrust needle bearings with unrolled edge of bearing retainer facing washer.
- Inspect thrust needle and needle bearings for galling and rough movement.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damage to the O-rings.

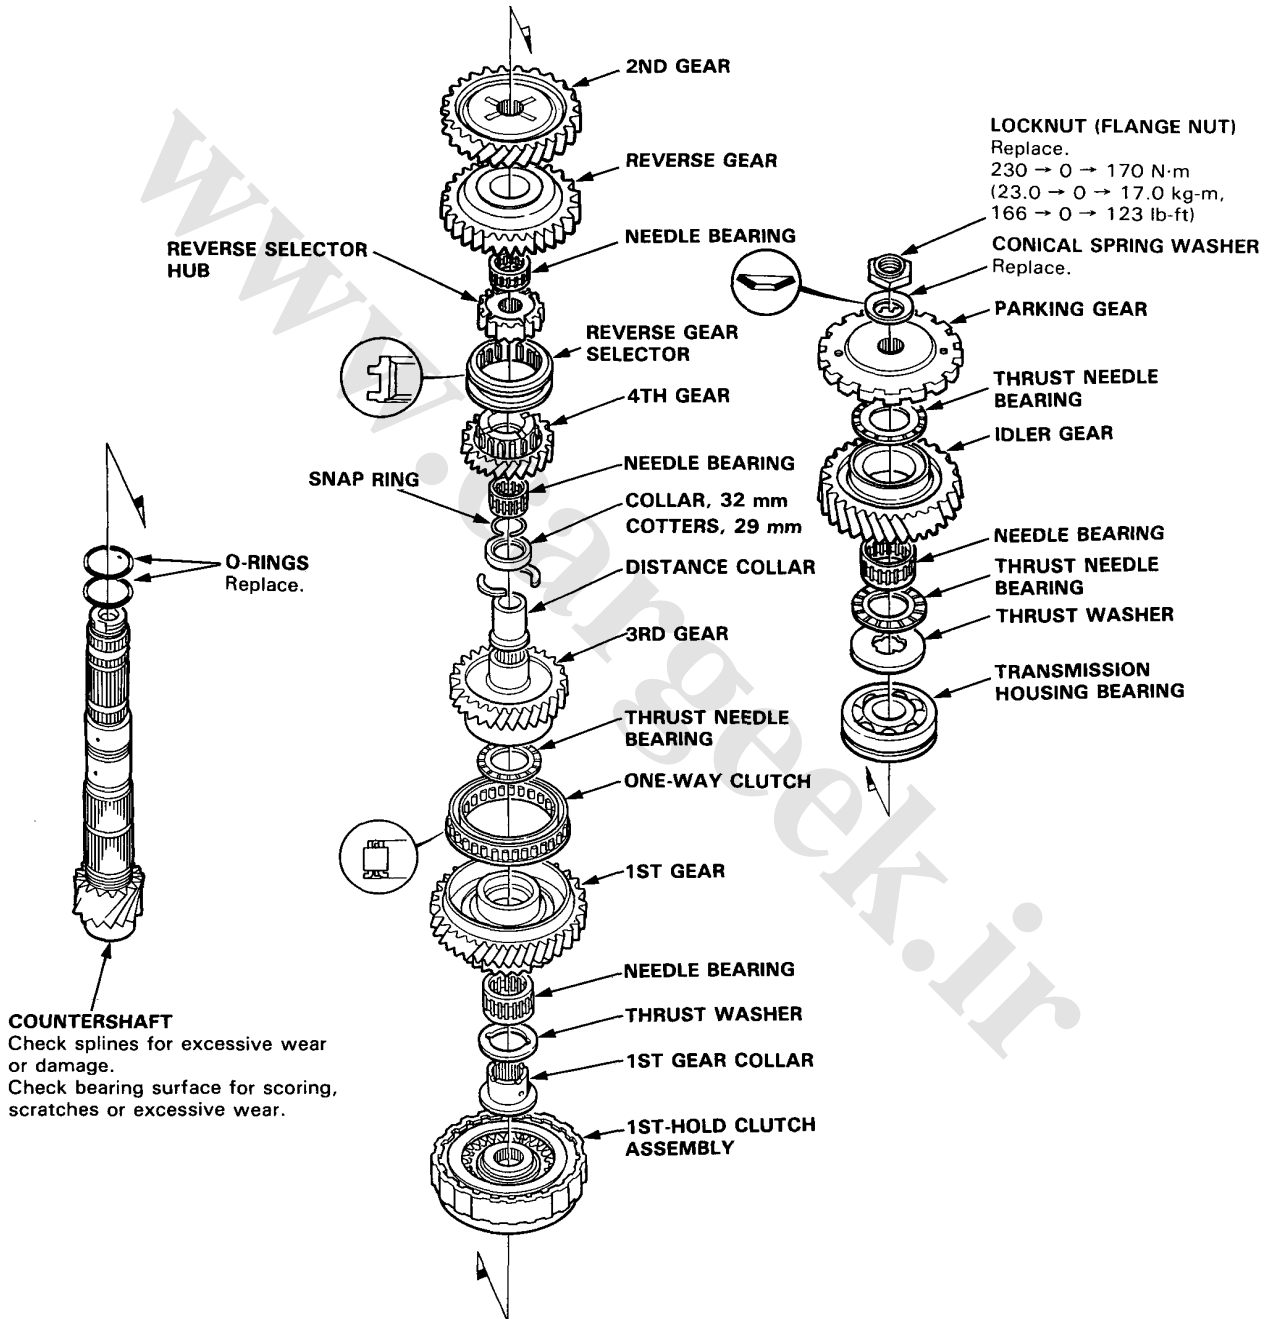


Secondary Shaft

Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Install thrust needle bearings with unrolled edge of bearing retainer facing washer.
- Inspect thrust needle and needle bearings for galling and rough movement.
- Before installing the O-ring, wrap the shaft splines with tape to prevent damage to the O-rings.

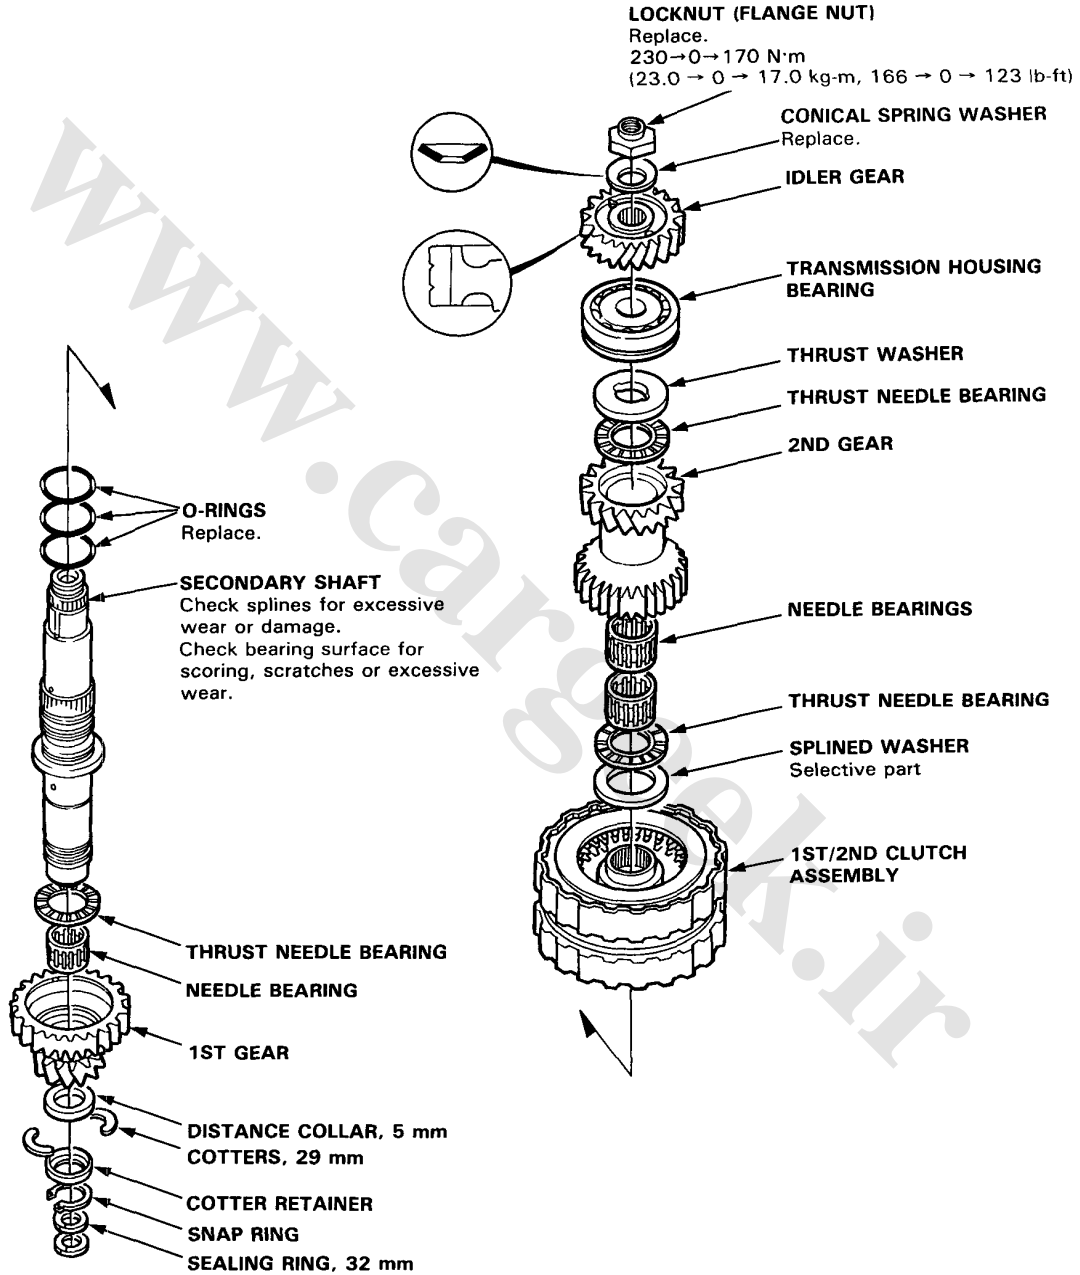




Inspection

- Clearance Measurement


NOTE: Lubricate all parts with ATF during assembly.

1. Remove the secondary shaft bearing from the transmission housing (see page 9-33).
2. Assemble the secondary shaft assembly without O-rings, then torque the secondary shaft locknut to 30 N·m (3.0 kg·m, 22 lb·ft).

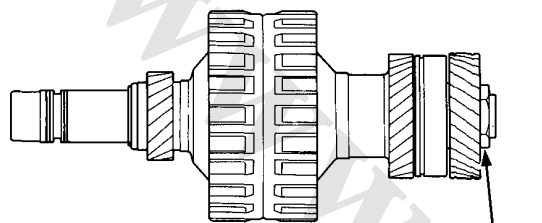

LOCKNUT
30 N·m
(3.0 kg·m
22 lb·ft)


3. Attach the dial indicator to the secondary shaft 2nd gear as shown.

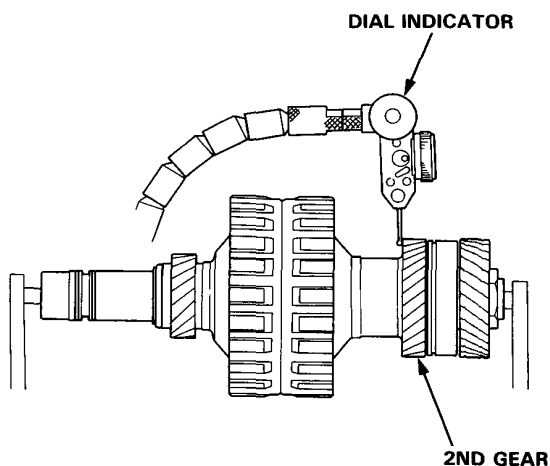

4. Measure the 2nd gear axial clearance moving the 2nd gear.

STANDARD: 0.07–0.15 mm (0.003–0.006 in)

NOTE: Take measurement in at least three places and take average as the actual clearance.

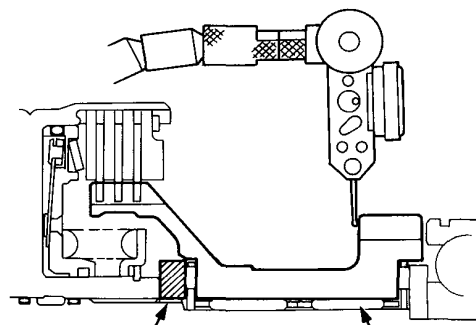

SPLINED WASHER

2ND GEAR

5. If the clearance is out of tolerance, remove the splined washer and measure the thickness.

SPLINED WASHER

No	Part Number	Thickness
1	90406-PX3-700	3.85 mm (0.152 in)
2	90407-PX3-700	3.90 mm (0.154 in)
3	90408-PX3-700	3.95 mm (0.156 in)
4	90409-PX3-700	4.00 mm (0.157 in)
5	90410-PX3-700	4.05 mm (0.159 in)
6	90411-PX3-700	4.10 mm (0.161 in)
7	90412-PX3-700	4.15 mm (0.163 in)
8	90413-PX3-700	4.20 mm (0.165 in)
9	90414-PX3-700	4.25 mm (0.167 in)

6. After replacing the splined washer, make sure that the clearance is within tolerance.

Clutch


Inspection

1. Measure the clearance between the clutch end plate and top disc with a dial indicator. Zero the dial indicator with the clutch end plate lowered and lift it up to the snap ring. The distance that the clutch end plate moves is the clearance between the clutch end plate and top disc.

NOTE: Measure at three locations.


End Plate-to-Top Disc Clearance:

Clutch	Service Limit
1st	0.65–0.85 mm (0.026–0.033 in)
2nd	0.65–0.85 mm (0.026–0.033 in)
3rd	0.40–0.60 mm (0.016–0.024 in)
4th	0.40–0.60 mm (0.016–0.024 in)
1st-Hold	0.80–1.00 mm (0.031–0.039 in)

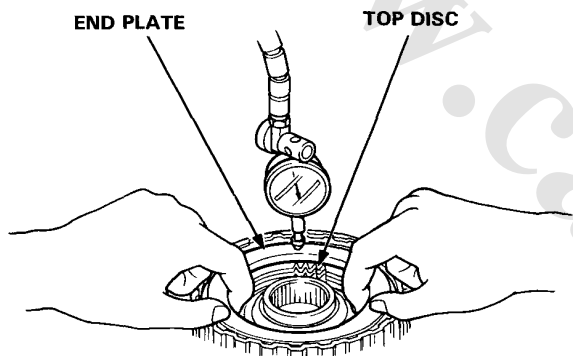

2. If the clearance is not within the service limits, select a new clutch end plate from the following table.

NOTE: If the thickest clutch end plate is installed but the clearance is still over the standard, replace the clutch discs and clutch plates.

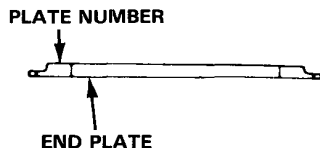

CLUTCH END PLATE

• 1ST and 2ND CLUTCHES

Plate No.	Part Number	Thickness mm (in)
1	22631-PR9-003	2.1 (0.083)
2	22632-PR9-003	2.2 (0.087)
3	22633-PR9-003	2.3 (0.091)
4	22634-PR9-003	2.4 (0.094)
5	22635-PR9-003	2.5 (0.098)
6	22636-PR9-003	2.6 (0.102)
7	22637-PR9-003	2.7 (0.106)
8	22638-PR9-003	2.8 (0.110)
9	22639-PR9-003	2.9 (0.114)

• 3RD and 4TH CLUTCHES

Plate No.	Part Number	Thickness mm (in)
1	22551-PF4-000	2.1 (0.082)
2	22552-PF4-000	2.2 (0.086)
3	22553-PF4-000	2.3 (0.090)
4	22554-PF4-000	2.4 (0.094)
5	22555-PF4-000	2.5 (0.098)
6	22556-PF4-000	2.6 (0.102)
7	22557-PF4-000	2.7 (0.106)
8	22558-PF4-000	2.8 (0.110)
9	22559-PF4-000	2.9 (0.114)
10	22560-PF4-000	3.0 (0.118)

• 1ST-HOLD CLUTCH

Plate No.	Part Number	Thickness mm (in)
1	22551-PX4-003	2.1 (0.083)
2	22552-PX4-003	2.2 (0.087)
3	22553-PX4-003	2.3 (0.091)
4	22554-PX4-003	2.4 (0.094)
5	22555-PX4-003	2.5 (0.098)
6	22556-PX4-003	2.6 (0.102)
7	22557-PX4-003	2.7 (0.106)
8	22558-PX4-003	2.8 (0.110)
9	22559-PX4-003	2.9 (0.114)




Transmission Housing Bearings

Removal/Installation


NOTE: Lubricate all parts with ATF before assembly.

1. To remove the mainshaft, countershaft and secondary shaft bearings from the transmission housing, expand each snap ring with snap ring pliers, then push the bearing out using the special tool and a press as shown.


NOTE: Do not remove the snap rings unless it's necessary to clean the grooves in the housing.

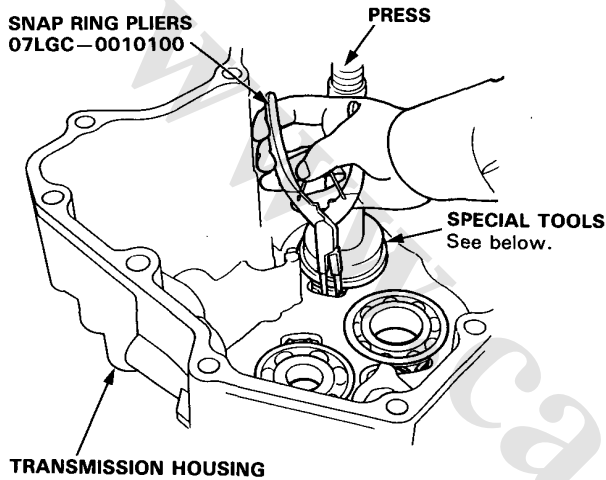

• Mainshaft and Secondary Shaft Bearings

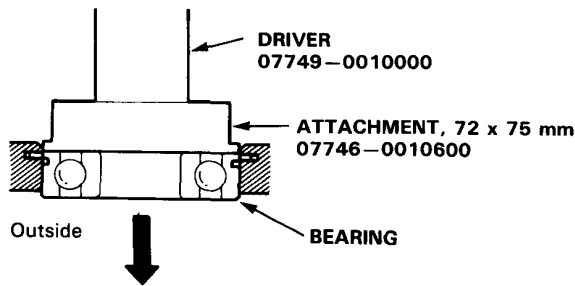


• Countershaft Bearing

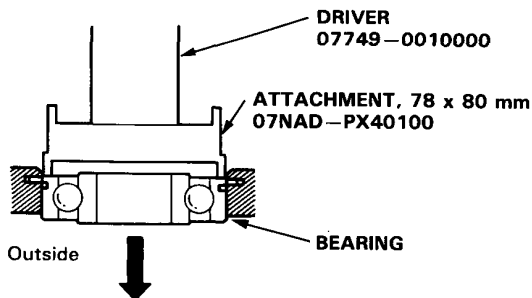


2. Expand each snap ring with snap ring pliers, insert the new bearing part-way into the housing using the special tool and a press as shown. Install with groove side of the bearing facing inside the housing.
3. Release the pliers, then push the bearing down into the housing until the snap ring snaps in place around it.

• Mainshaft and Secondary Shaft Bearings

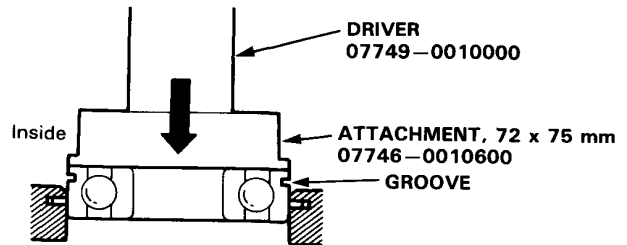


• Countershaft Bearing

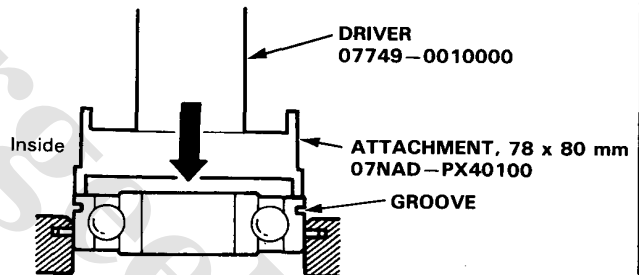

4. After installing the ball bearings verify the following:

- The snap ring is seated in the bearing and housing grooves.
- The snap ring operates freely.
- The ring end gap is correct.

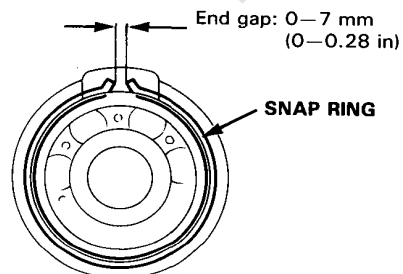


Transmission/Valve Body

Reassembly

NOTE:

- Coat all parts with ATF.
- Replace these parts:
 - O-rings
 - Lock washers
 - Gaskets
 - Locknuts and conical spring washers
 - Sealing washers
- Torque the 6 x 1.0 mm Bolts: 12 N·m (1.2 kg·m, 9 lb·ft)

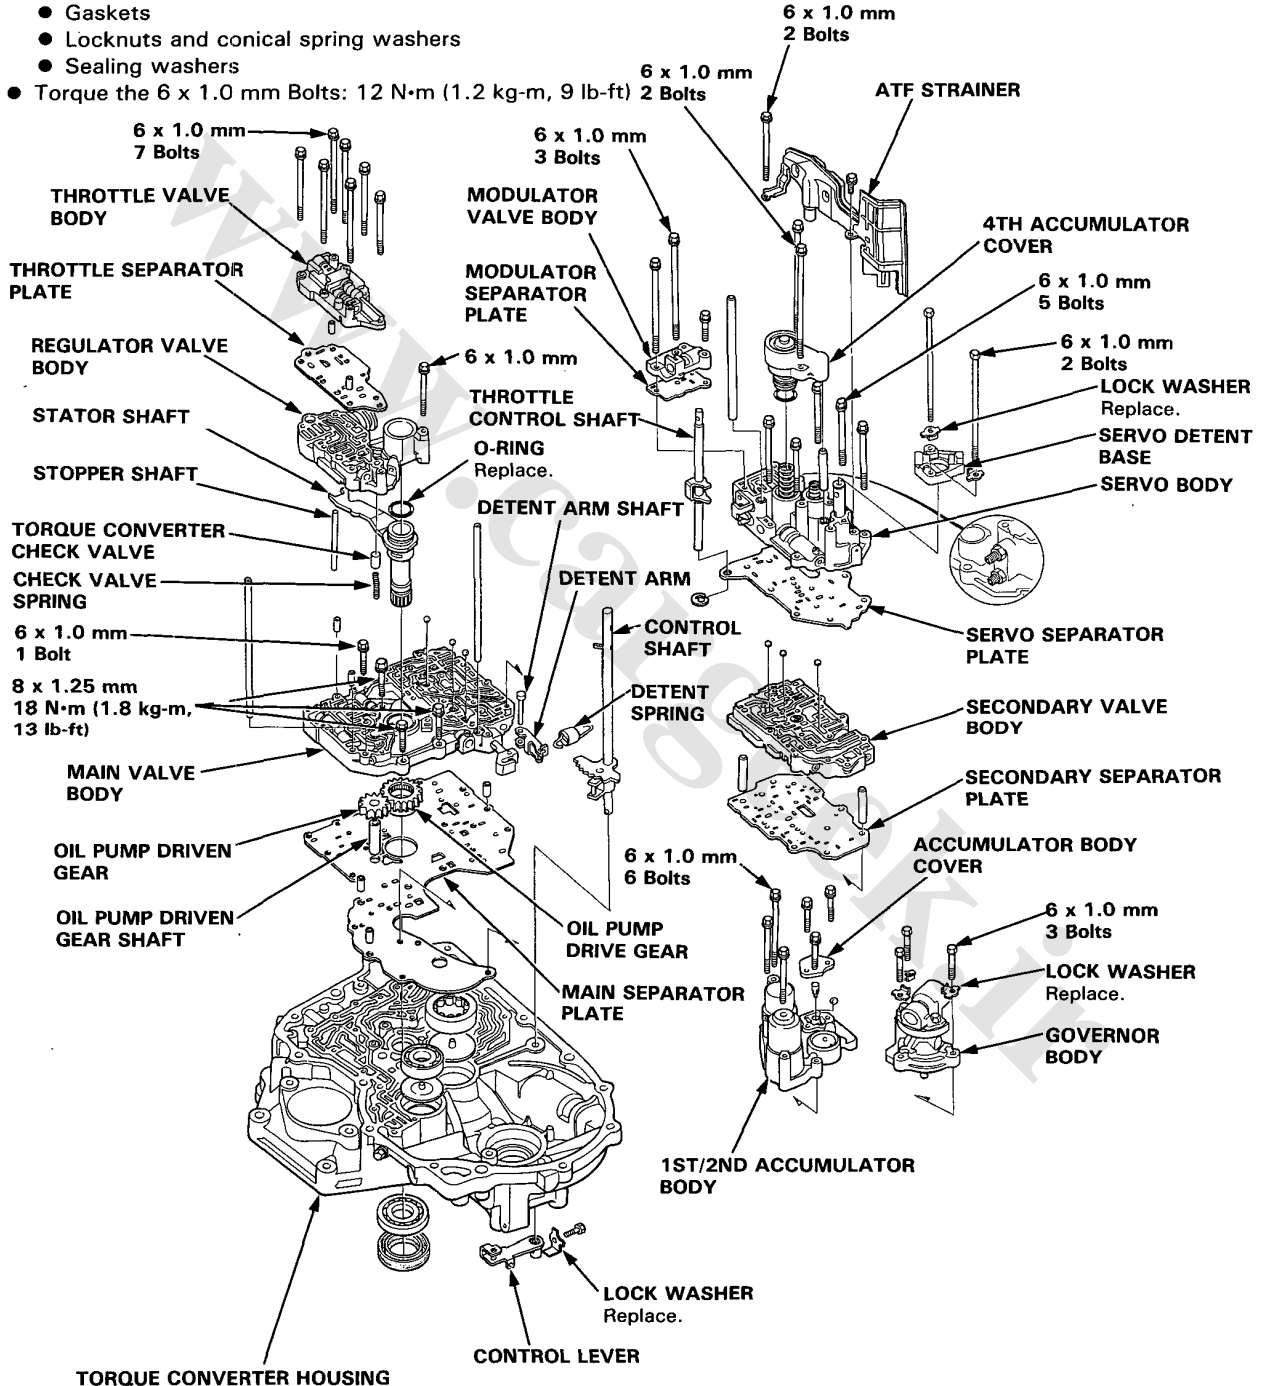

Special Tools

Description

Transmission Sectional View

Electrical Control System

Component Location

Circuit Diagram

Electrical Troubleshooting

Troubleshooting Procedures

Symptom - to -Component Chart

Troubleshooting Flowchart

Road Test

Pressure Testing

Shift Indicator Panel

Shift Cable

Gearshift Selector

Throttle Control Cable

Illustration Index

R. Side Cover

Transmission Housing

Torque Converter Housing

R. Side Cover

Removal

Transmission Housing

Removal

Torque Converter Housing/Valve Body

Removal

Main Valve Body

Secondary Valve Body

Mainshaft

Countershaft

Secondary Shaft

Transmission Housing Bearings


Removal/Installation

Transmission


Reassembly

Special Tools


Ref. No.	Tool Number	Description	Qty	Remarks
①	07LAJ—PT30100 or 07LAJ—PT3010A	Test Harness	1	
②	07406—0020003	A/T Oil Pressure Gauge Set	1	
②-1	07406—0020201	A/T Oil Pressure Gauge Hose	1	
③	07406—0070000	A/T Low Pressure Gauge	1	
④	07GAB—PF50101 or 07GAB—PF50100	Mainshaft Holder	1	
⑤	07HAC—PK40101	Housing Puller	1	
⑥	07LGC—0010100	Snap Ring Pliers	1	
⑦	07749—0010000	Driver	1	
⑧	07746—0010600	Attachment, 72 x 75 mm	1	
⑨	07NAD—PX40100	Attachment, 78 x 80 mm	1	
⑩	07HAF—PK40100	Gear Installer	1	

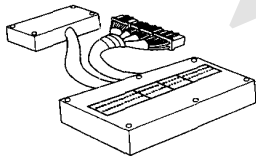


①

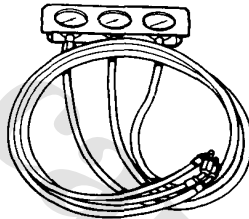


②

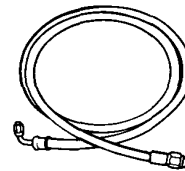


②-1

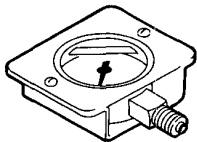


③




④

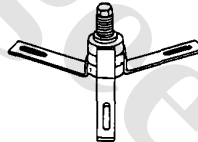


⑤

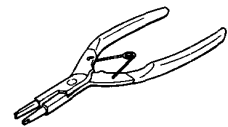


⑥




⑦

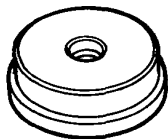

⑧



⑨

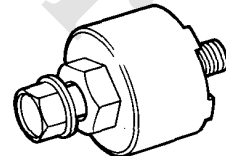


⑩



Description

Transmission Sectional View

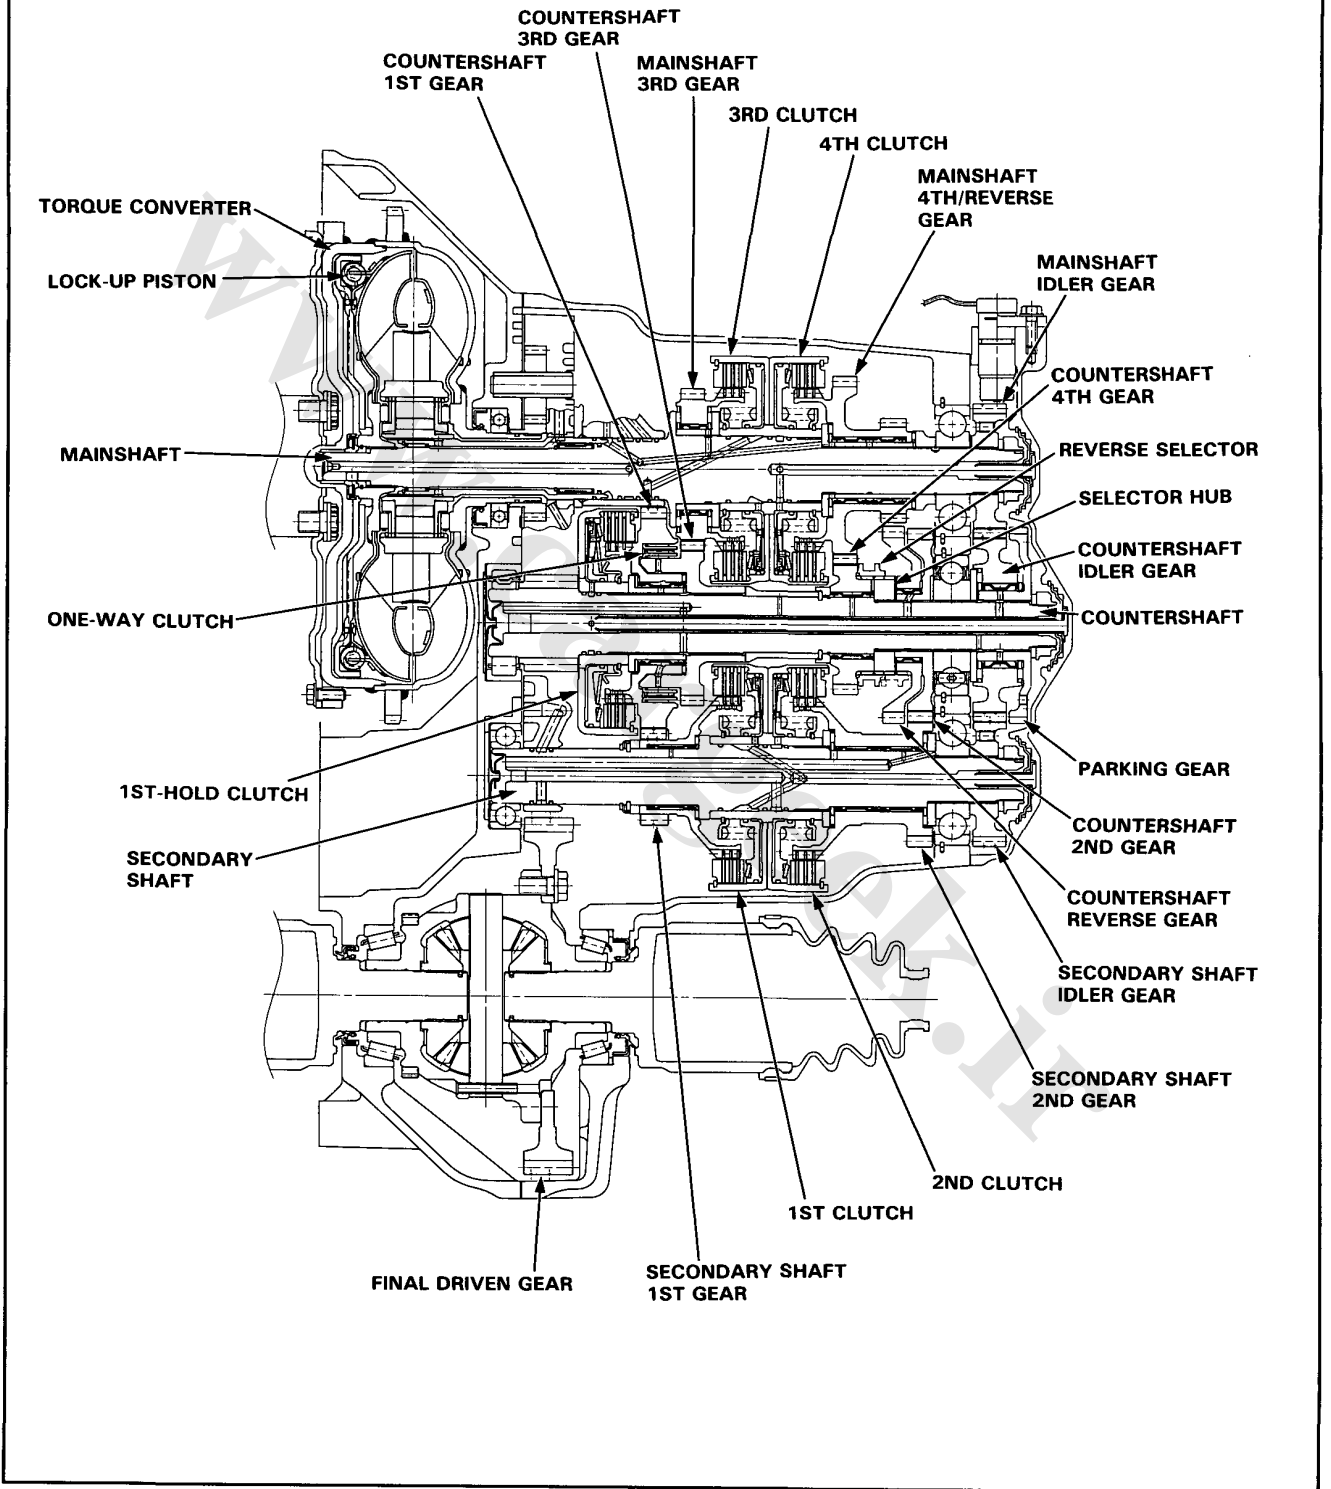


Description

Electrical Control System

KB other

Circuit Diagram and Terminal Location

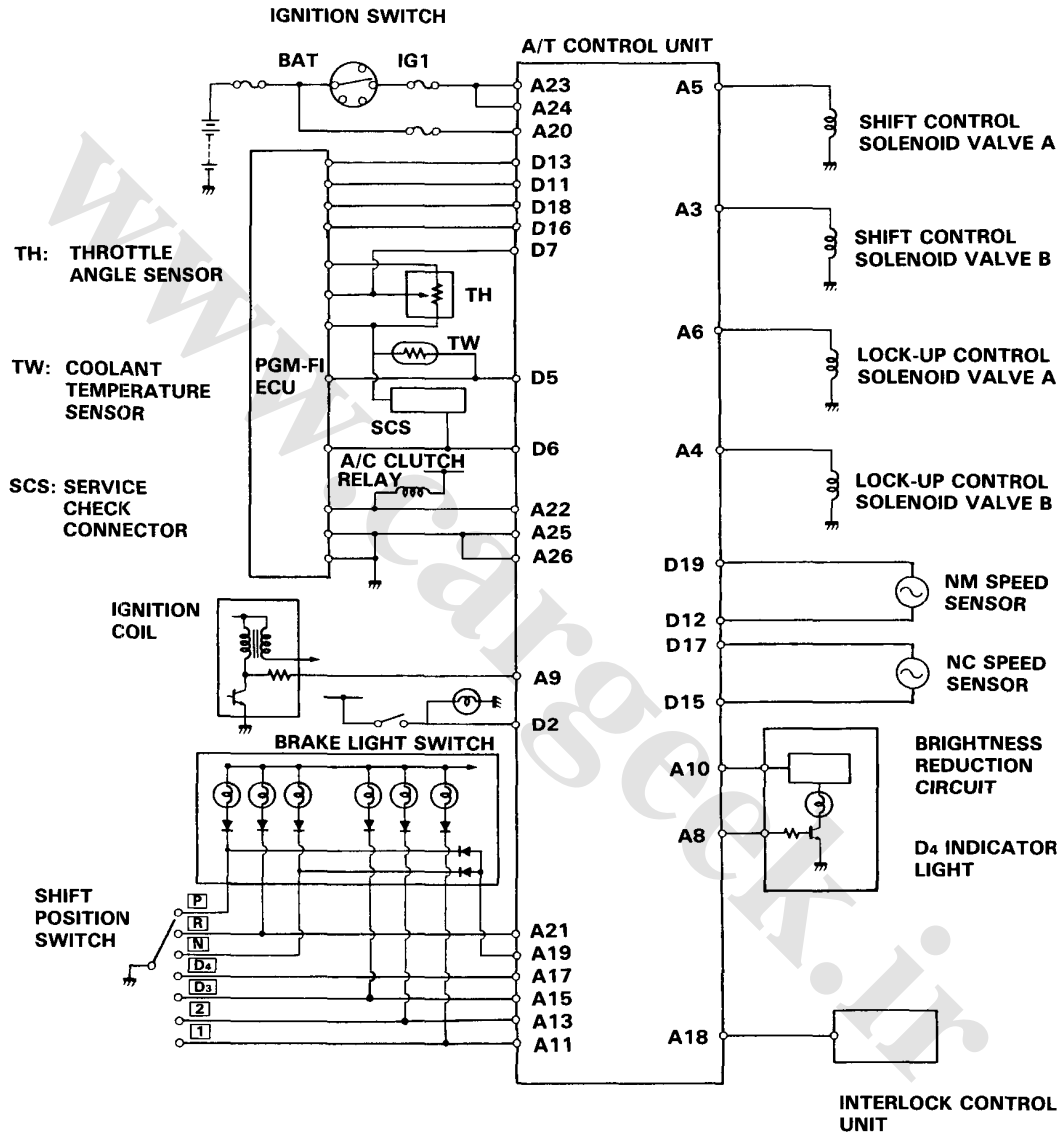



⊠											⊠											
	A3	A5		A9	A11	A13	A15	A17	A19	A21	A23	A25			D5	D7	D9	D11	D13	D15	D17	D19
	A4	A6	A8	A10				A18	A20	A22	A24	A26	D2	D6				D12		D16	D18	

TERMINAL LOCATION





Component Location

KB other

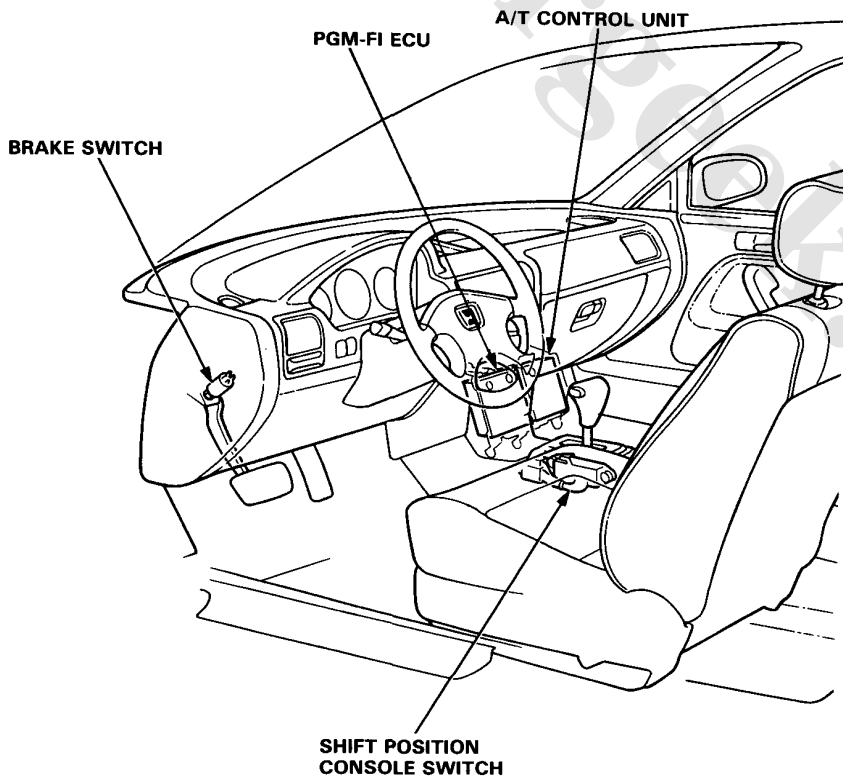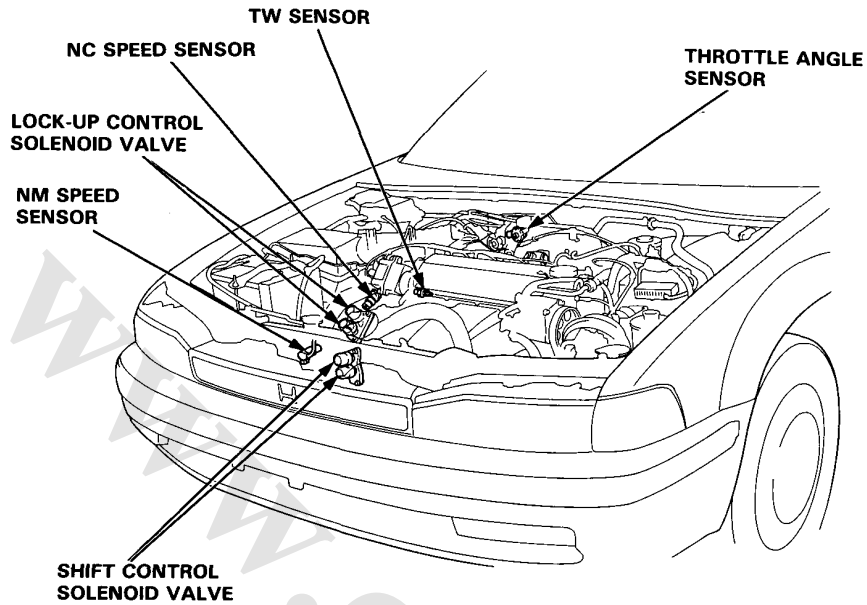

Circuit Diagram

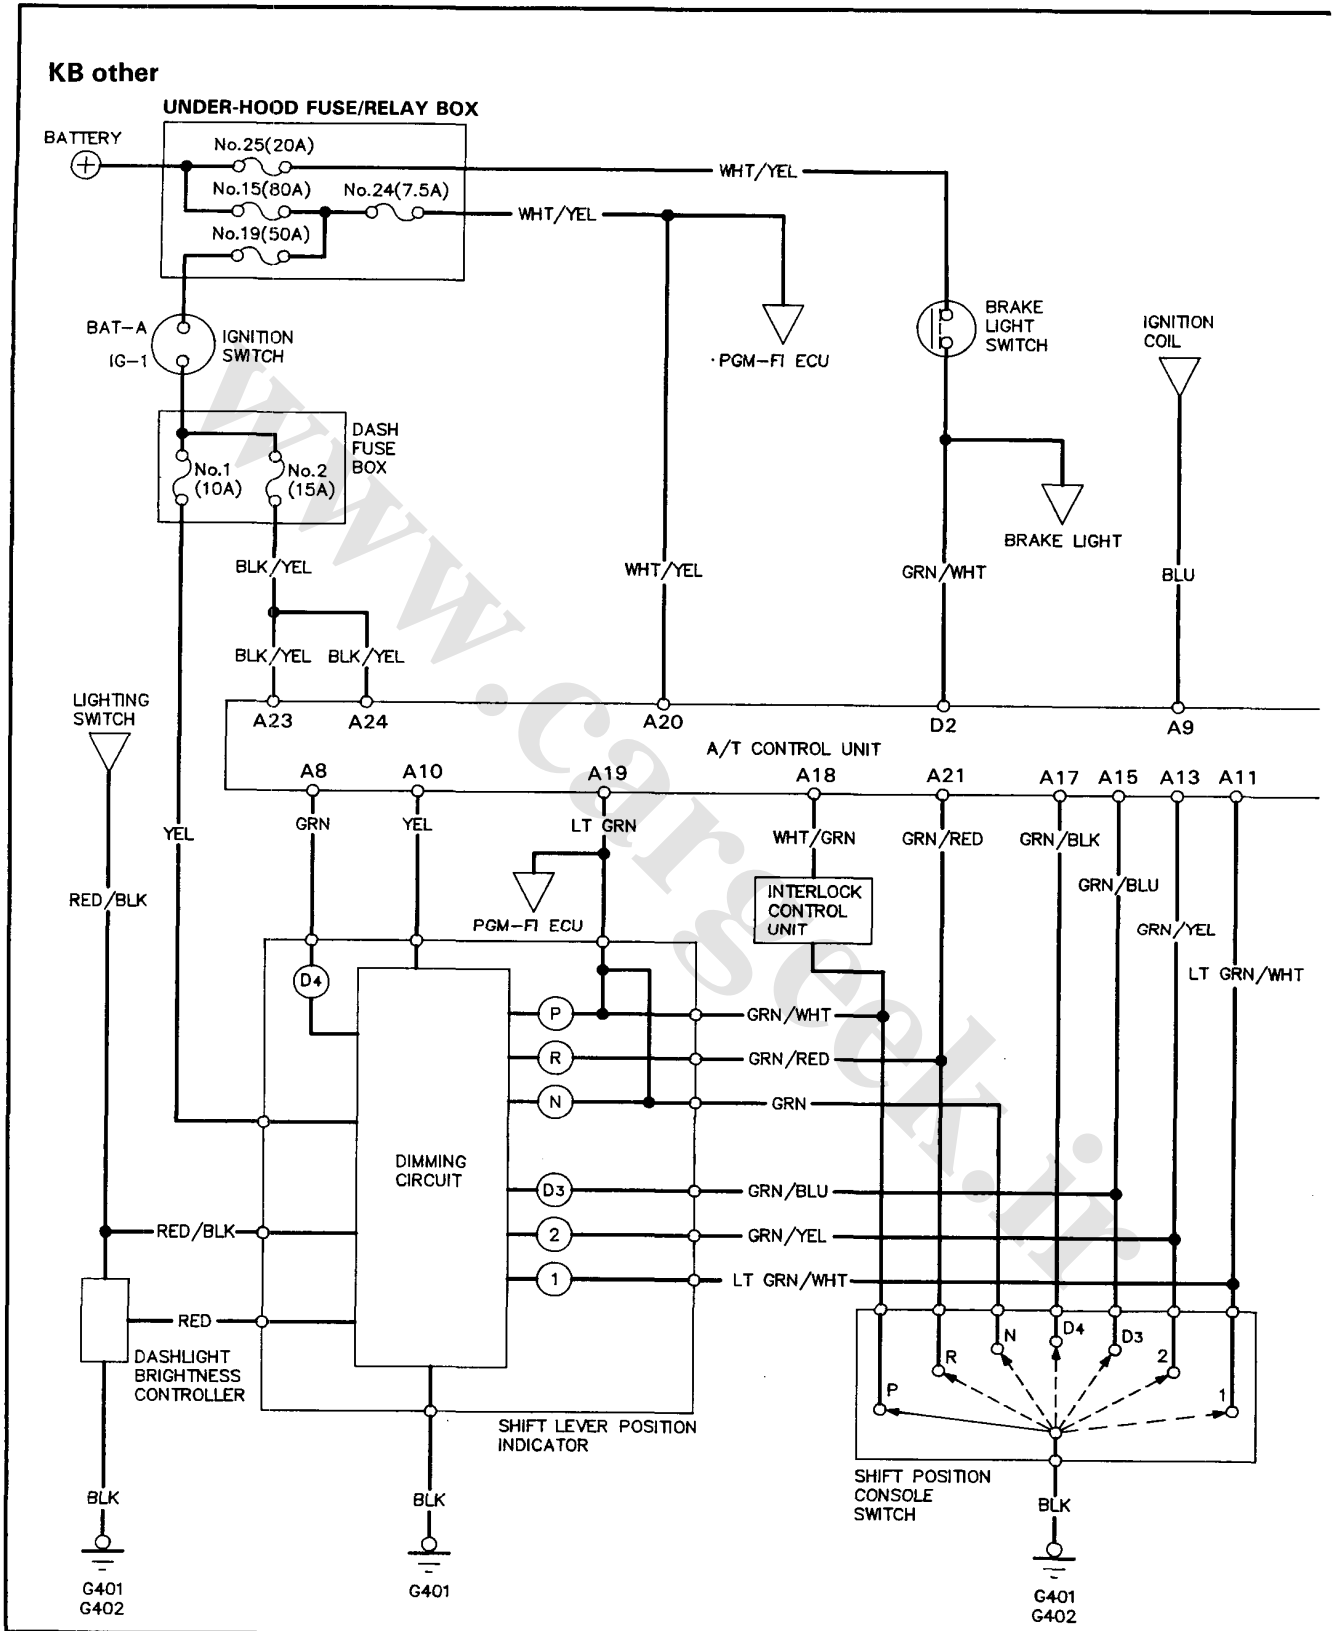

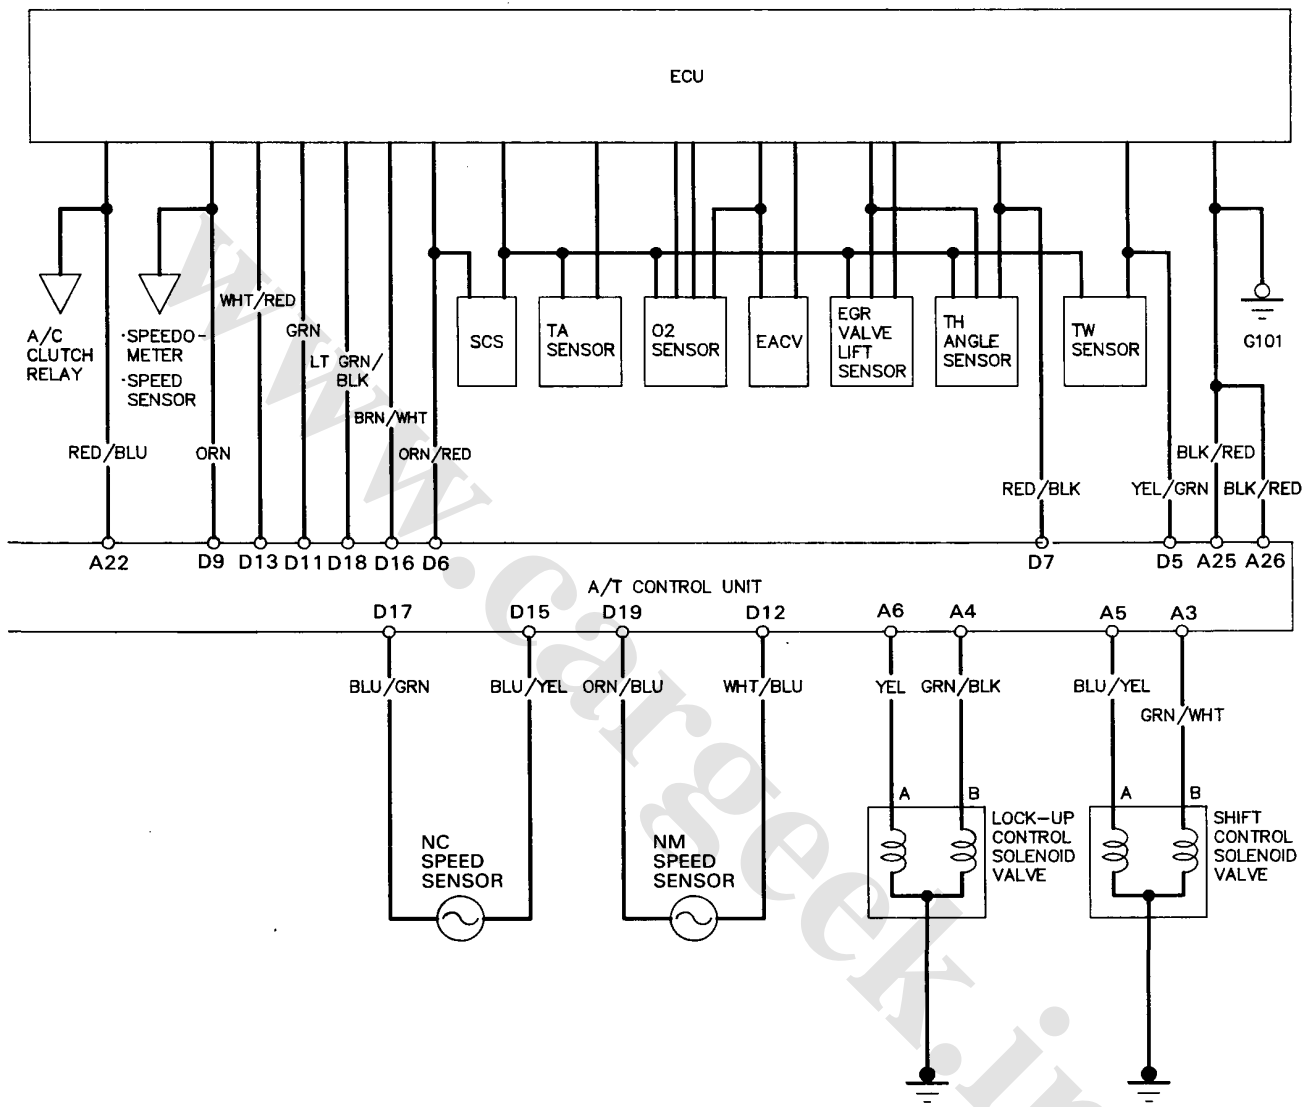

					⊠											
A3	A5		A9	A11	A13	A15	A17	A19	A21	A23	A25					
A4	A6	A8	A10				A18	A20	A22	A24	A26					

					⊠										
		D5	D7	D9	D11	D13	D15	D17	D19						
D2		D6			D12		D16	D18							

TERMINAL LOCATION

Electrical Troubleshooting

Troubleshooting Procedures



Except KB other

When the A/T control unit senses an abnormality in the input or output systems, the [S] indicator light in the gauge assembly will blink. However, when the Service Check Connector (located to the lower right (LHD) or left (RHD) of the glove compartment) is shorted with a jumper wire, the [S] indicator light will also blink the problem code when the ignition switch is turned on.

When the [S] indicator light has been reported on, connect the two terminals of the Service Check Connector together with a jumper wire. Then turn on the ignition switch and observe either the [S] indicator light.


LHD:

RHD:

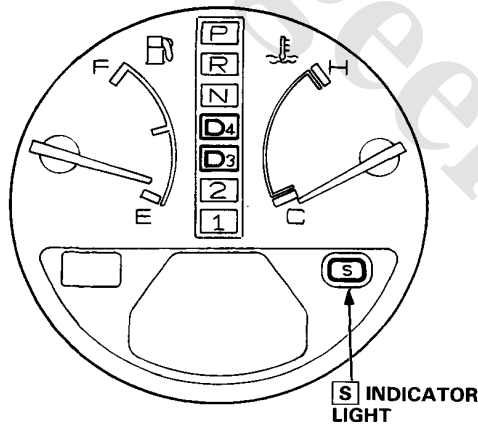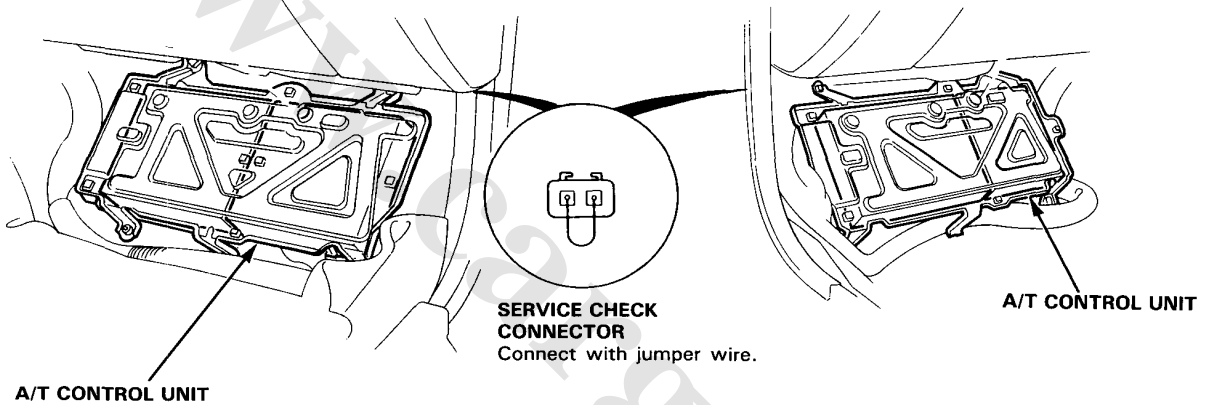





Problem codes 1 through 9 are indicated by individual short blinks, Problem codes 10 through 15 are indicated by a series of long and short blinks. One long blink equals 10 short blinks. Add the long and short blinks together to determine the problem code. After determining the problem code, refer to the electrical system Symptom-to-Component Chart.

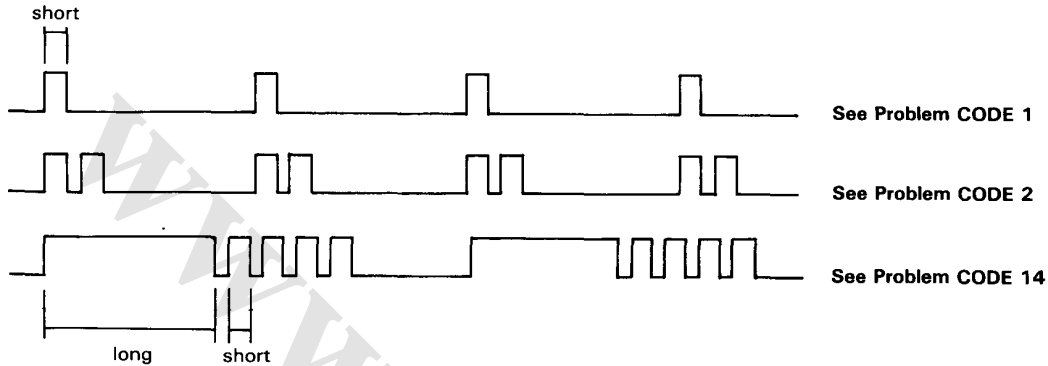

Some PGM-FI problems will also make the **S** indicator light come on. After repairing the PGM-FI system, disconnect the Back Up fuse (7.5 A) in the under-hood relay box for more than 10 seconds to reset the A/T control unit memory.

NOTE: Disconnecting the Back up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

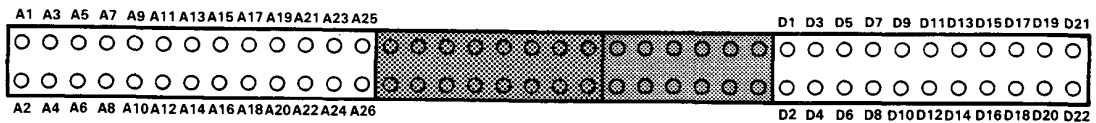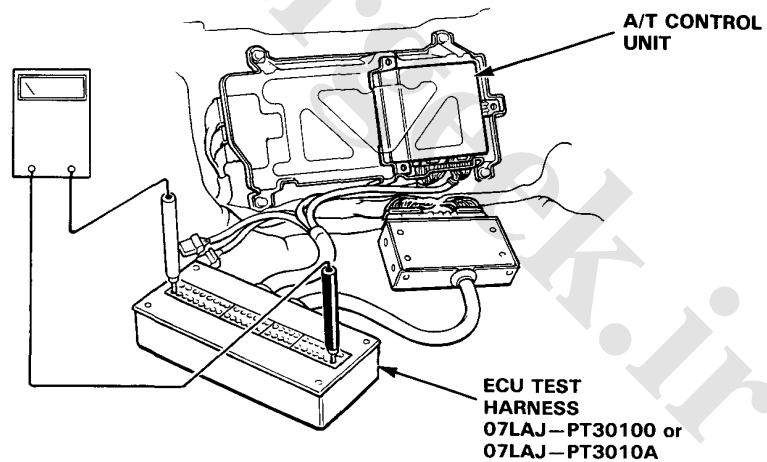

Terminal Locations

NOTE:

- Only the A and D sections of the ECU test harness are used for A/T troubleshooting.
- Unless otherwise noted, use only the Digital Multimeter for testing.


Electrical Troubleshooting

Troubleshooting Procedures


KB other

When the A/T control unit senses an abnormality in the input or output systems, the **D4** indicator light in the gauge assembly will blink. However, when the Service Check Connector (located to the lower right of the glove compartment) is connected with a jumper wire, the **D4** indicator light will blink the problem code when the ignition switch is turned on.

When the **D4** indicator light has been reported on, connect the two terminals of the Service Check Connector together with a jumper wire. Then turn on the ignition switch and observe either the **D4** indicator light.


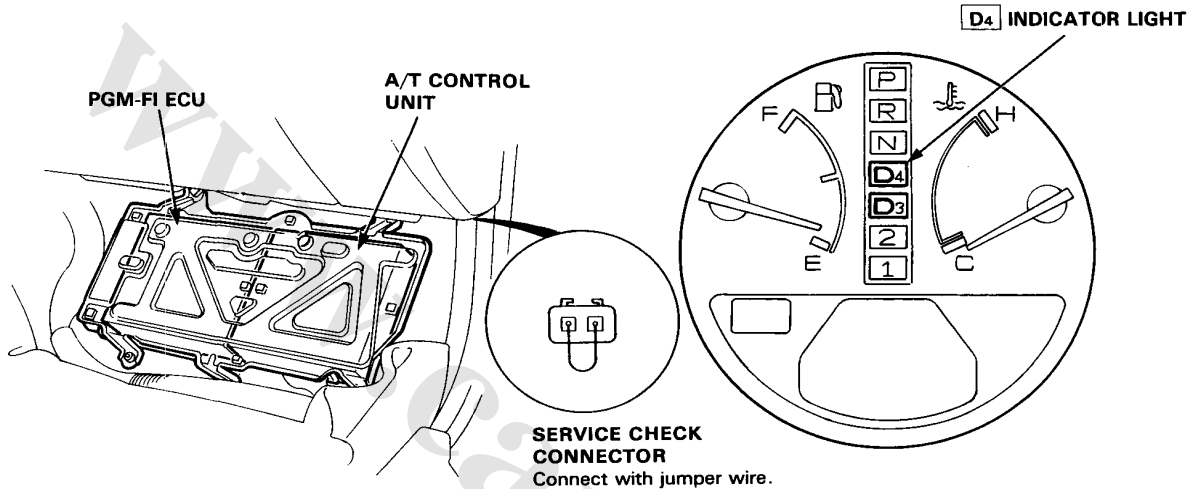


Problem codes 1 through 9 are indicated by individual short blinks, Problem codes 10 through 15 are indicated by a series of long and short blinks. One long blink equals 10 short blinks. Add the long and short blinks together to determine the problem code. After determining the problem code, refer to the electrical system Symptom-to-Component Chart on page 14-36.

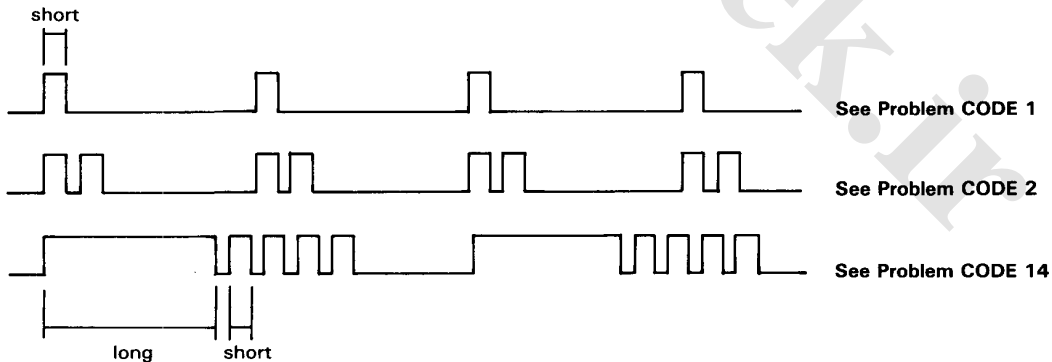

Some PGM-FI problems will also make the **D4** indicator light come on. After repairing the PGM-FI system, disconnect the Back Up fuse (7.5 A) in the under-hood fuse/relay box for more than 10 seconds to reset the A/T control unit memory.

NOTE: Disconnecting the Back up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

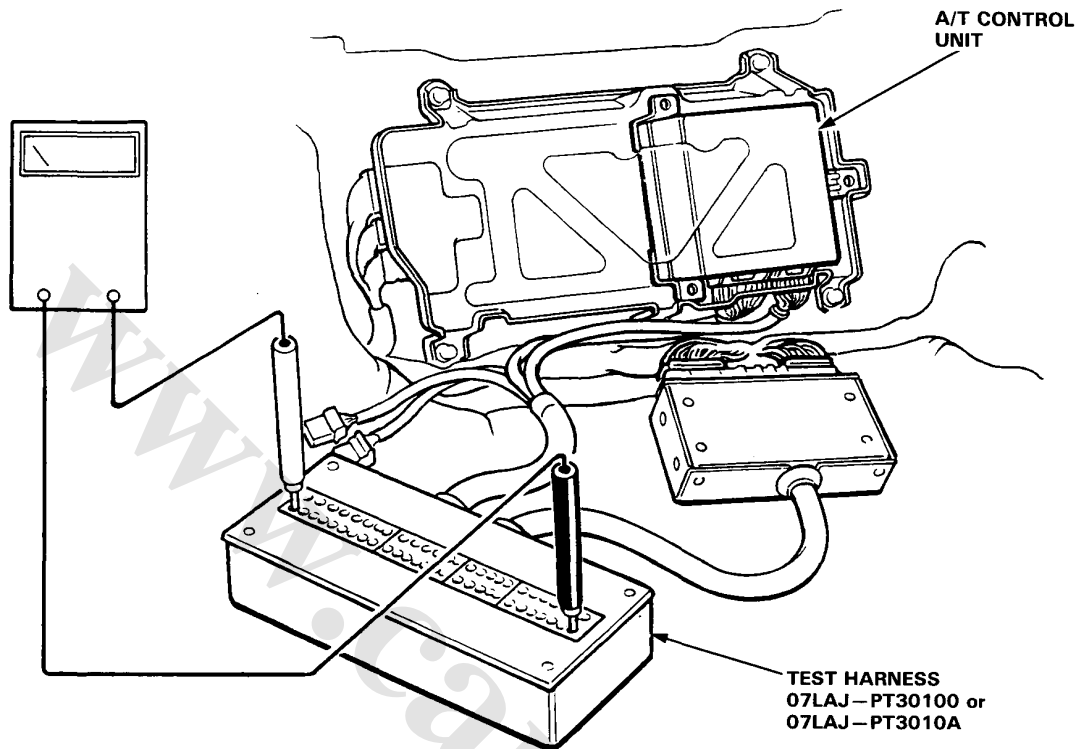

Terminal Locations

NOTE:

- Only the A and D sections of the ECU test harness are used for A/T troubleshooting.
- Unless otherwise noted, use only the Digital Multimeter for testing.

Electrical Troubleshooting

Symptom-to-Component Chart

KB other

Number of D4 indicator light blinks while Service Check Connector is jumped.	D4 indicator light	Possible Cause	Symptom	Refer to page
1	Blinks	<ul style="list-style-type: none"> • Disconnected lock-up control solenoid valve A connector • Short or open in lock-up control solenoid valve A wire • Faulty lock-up control solenoid valve A 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. • Lock-up clutch does not disengage. • Unstable idle speed. 	9-56
2	Blinks	<ul style="list-style-type: none"> • Disconnected lock-up control solenoid valve B connector • Short or open in lock-up control solenoid valve B wire • Faulty lock-up control solenoid valve B 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-57
3	Blinks or OFF	<ul style="list-style-type: none"> • Disconnected throttle angle sensor connector • Short or open in throttle angle sensor wire • Faulty throttle angle sensor 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-58
4	Blinks	<ul style="list-style-type: none"> • Disconnected sensor connector • Short or open in speed sensor wire • Faulty speed sensor 	<ul style="list-style-type: none"> • Lock-up clutch does not engage. 	9-59
5	Blinks	<ul style="list-style-type: none"> • Short in shift position console switch wire • Faulty shift position console switch 	<ul style="list-style-type: none"> • Fails to shift other than 2nd ↔ 4th gears. • Lock-up clutch does not engage. 	9-60
6	OFF	<ul style="list-style-type: none"> • Disconnected shift position console switch connector • Open in shift position console switch wire • Faulty shift position console switch 	<ul style="list-style-type: none"> • Fails to shift other than 2nd ↔ 4th gears. • Lock-up clutch does not engage. • Lock-up clutch engages and disengages alternately. 	9-62
7	Blinks	<ul style="list-style-type: none"> • Disconnected shift control solenoid valve A connector • Short or open in shift control solenoid valve A wire • Faulty shift control solenoid valve A 	<ul style="list-style-type: none"> • Fails to shift (between 1st ↔ 4th, 2nd ↔ 4th or 2nd ↔ 3rd gears only). • Fails to shift (stuck in 4th gear) 	9-64
8	Blinks	<ul style="list-style-type: none"> • Disconnected shift control solenoid valve B connector • Short or open in shift control solenoid valve B wire • Faulty shift control solenoid valve B 	<ul style="list-style-type: none"> • Fails to shift (stuck in 1st or 4th gears). 	9-65



Number of D4 indicator light blinks while Service Check Connector is jumped.	D4 indicator light	Possible Cause	Symptom	Refer to page
9	Blinks	<ul style="list-style-type: none"> • Disconnected NC speed sensor connector • Short or open in the NC speed sensor wire • Faulty NC speed sensor 	• Lock-up clutch does not engage.	9-66
10	Blinks	<ul style="list-style-type: none"> • Disconnected water temperature sensor connector • Short or open in the water temperature sensor wire • Faulty water temperature sensor 	• Lock-up clutch does not engage.	9-68
11	OFF	<ul style="list-style-type: none"> • Disconnected ignition coil connector • Short or open in ignition coil wire • Faulty ignition coil 	• Lock-up clutch does not engage.	9-69
14	OFF	<ul style="list-style-type: none"> • Short or open in FAS wire • Trouble in PGM-FI ECU 	• Transmission jerks hard when shifting.	9-70
15	OFF	<ul style="list-style-type: none"> • Disconnected NM speed sensor connector • Short of open in NM speed sensor wire • Faulty NM speed sensor 	• Transmission jerks hard when shifting.	9-72

If the self-diagnosis **D4** indicator light does not blink, perform an inspection according to the table listed below.

Sympton	Probable Cause	Ref. page
D4 indicator light is on steady, not blinking whenever the ignition is on.	_____	9-74
D4 indicator light does not come on for 2 seconds after ignition is first turned on.	_____	9-75
Shift lever cannot be moved from P position with depressing the brake pedal.	Check brake light signal.	9-76
Lock-up clutch does not have duty operation (ON-OFF).	Check A/C signal with A/C on.	9-77
Lock-up clutch does not engage.		

- If a customer describes the symptoms for codes 3, 6, or 11, yet the **D4** indicator light is not blinking, it will be necessary to recreate the symptom by test driving, and then checking the **D4** indicator light with the ignition still ON.
- If the **D4** indicator light displays codes other than those listed above or stays lit continuously, the control unit is faulty.
- Sometimes the **D4** indicator light and the Check Engine light may come on simultaneously. If so, check the PGM-FI system according to the number of blinks on the PGM-FI ECU self-diagnosing indicator, then reset the memory by removing the Back-Up fuse in the under hood fuse/relay box for more than 10 seconds. Drive the vehicle for several minutes at speed over 30 mph (50 km/h), then recheck the lights.

NOTE: Disconnecting the Back up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you can reset them.

Electrical Troubleshooting

Troubleshooting Flowchart

KB other

Self-diagnosis **D4** indicator light blinks once.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A6 (YEL) and A25 (BLK/RED) terminals.

Is there voltage?

YES

Repair short to power source in YEL wire between the A6 terminal and the lock-up control solenoid valve A.

NO

Turn the ignition switch OFF.

Disconnect the 2P connector from the lock-up control solenoid valve assembly.

Check for continuity between the A6 (YEL) and A25 (BLK/RED) terminals.

Is there continuity?

YES

Repair short to ground in YEL wire between the A6 terminal and the lock-up control solenoid valve A.

NO

Connect the 2P connector to the lock-up control solenoid valve assembly.

Measure the resistance between the A6 (YEL) and A25 (BLK/RED) terminals.

Is the resistance 12 – 24 Ω?




NO

Check for open in YEL wire between the A6 terminal and the lock-up control solenoid valve A. If wire is OK, check the lock-up control solenoid valve A.

YES

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

NOTE: View from wire side.

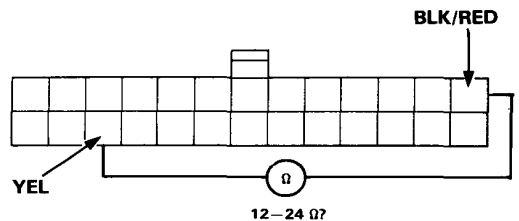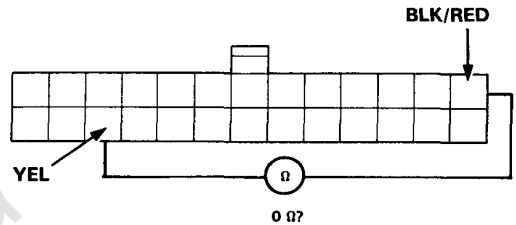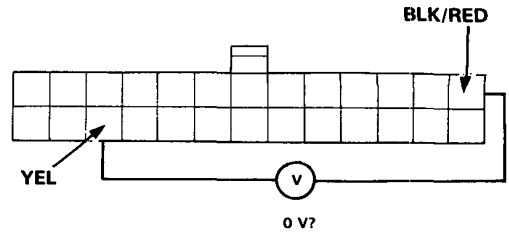



KB other

NOTE: View from wire side.

Self-diagnosis **D4** indicator light blinks twice.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A4 (GRN/BLK) and A25 (BLK/RED) terminals.

Is there voltage?

Repair short to power source in GRN/BLK wire between the A4 terminal and the lock-up control solenoid valve B.

NO

Turn the ignition switch OFF.

Measure the resistance between the A4 (GRN/BLK) and A25 (BLK/RED) terminals.

Is the resistance 12–24 Ω?

Check for open in GRN/BLK wire between the A4 terminal and the lock-up control solenoid valve B. If wire is OK, check the lock-up control solenoid valve B.

YES

Disconnect the 2P connector from the lock-up control solenoid valve assembly.

Check for continuity between the A4 (GRN/BLK) and A25 (BLK/RED) terminals.




Is there continuity?

Repair short to ground in GRN/BLK wire between the A4 terminal and the lock-up control solenoid valve B.

NO

Connect the 2P connector to the lock-up control solenoid valve assembly.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

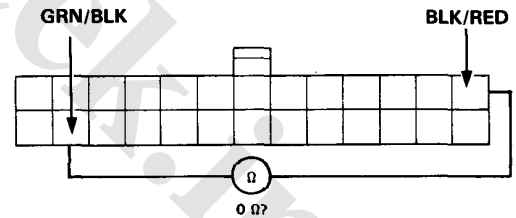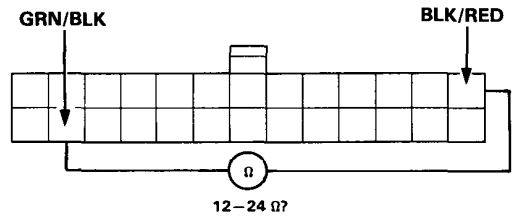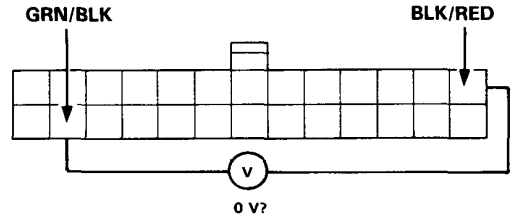

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

Self-diagnosis **D4** indicator light blinks three times.

Turn the ignition switch ON.

Check whether the Check Engine warning light blinks (Section 6).

Does the Check Engine warning light blink?

YES Repair the PGM-FI System. See Section 6.


NOTE: View from wire side.

NO
Turn the ignition switch OFF.

Disconnect the 26P and 22P connectors from the control unit.

Turn the ignition switch ON.

Measure the voltage between the D18 (LT GRN/BLK) and A25 (BLK/RED) terminals.

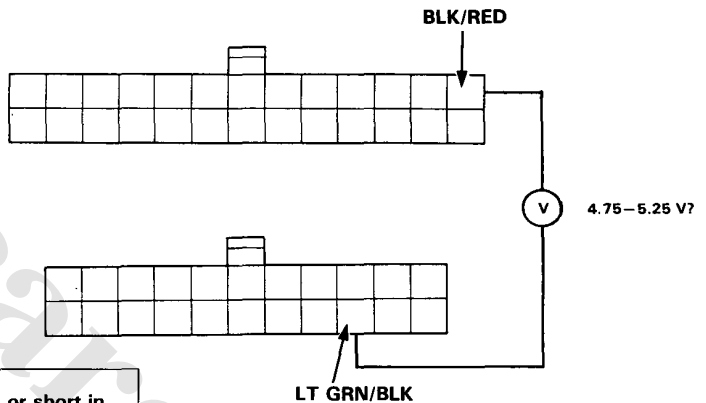

Is the voltage 4.75-5.25 V?


NO Repair open or short in LT GRN/BLK wire between the D18 terminal and the D14 terminal of the ECU.

YES
Turn the ignition switch OFF.

Connect the Test Harness between the connectors and the control unit.

Turn the ignition switch ON.

Measure the voltage between the D7 and A25 terminals.

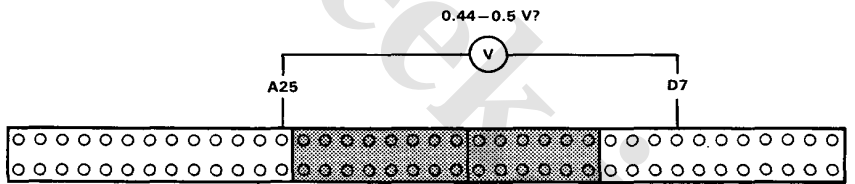

Is the voltage 0.44-0.56 V?*

NO Repair open or short in RED/BLK wire between the D7 terminal and the throttle angle sensor.

YES * ± 10%
Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.



KB other

Self-diagnosis **D4** indicator light blinks four times.

Jack up the front of the car and block one wheel.

Shift transmission to **N**.

Disconnect the 26P and 22P connectors from the control unit.

Turn the ignition switch ON.

Rotate the front wheel and check for voltage between the A25 (BLK/RED) and D9 (ORN) terminals.

Does the voltage 0–5 V appear alternately?

YES

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.


NO

Check for short or open in ORN wire between the D9 terminal and the speed sensor. If wire is OK, check the speed sensor.

⚠ WARNING

- Set the parking brake securely and block the rear wheels.
- Jack up the front of the car and support with a rigid jack.

NOTE: View from wire side.

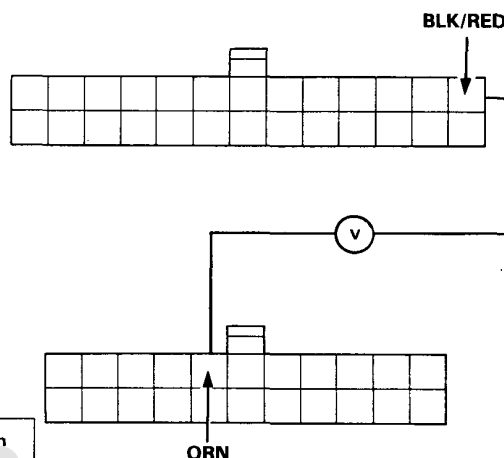

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

Self-diagnosis [D4] indicator light blinks five times.

Turn the ignition switch ON.

Observe the A/T shift indicator and select each position separately.

Does the indicator light properly? NO
See A/T shift position indicator inspection (Section 16).

YES

Turn the ignition switch OFF.

Connect the Test Harness between the control unit and connectors.

Turn the ignition switch ON.

Shift to other than [R] position.

Measure the voltage between the A21 and A25 terminals.

Is there battery voltage? NO
Check for short in GRN/RED wire between the A21 terminal and the shift position console switch. If wire OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

YES



Shift to other than [N] and [P] position.


Measure the voltage between the A19 and A25 terminals.

Is there battery voltage? NO
Check for short in LT GRN wire between the A19 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

YES

To page 9-61

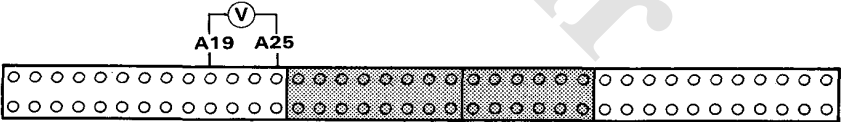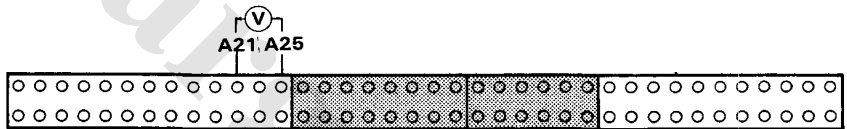



From page 9-60

Shift to other than **D4** position.

Measure the voltage between the A17 and A25 terminals.

Is there battery voltage?

NO

YES

Shift to other than **D3** position.

Measure the voltage between the A15 and A25 terminals.

Is there battery voltage?

NO

YES

Shift to other than **2** position.

Measure the voltage between the A13 and A25 terminals.

Is there battery voltage?

NO

YES

Shift to other than **1** position.


Measure the voltage between the A11 and A25 terminals.

Is there battery voltage?


NO

YES


Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.




Check for short in GRN/BLK wire between the A17 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.



Check for short in GRN/BLU wire between the A15 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.



Check for short in GRN/YEL wire between the A13 terminal and the shift position console switch. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.



Check for short in LT GRN/WHT wire between the A11 terminal and shift position console switch or shift position indicator. If wire is OK, check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

Self-diagnosis **D4** indicator light blinks six times.

Turn the ignition switch ON.

Observe the A/T shift indicator and select each position separately.

Does the indicator light properly? **NO** See A/T shift position indicator inspection. (Section 16).

YES
Turn the ignition switch OFF.

Connect the Test Harness between the control unit and connectors.

Turn the ignition switch ON.

Shift to **R** position.

Measure the voltage between the A21 and A25 terminals.



Is there voltage? **YES** Repair open in GRN/RED wire between the A21 terminal and the shift position console switch.



NO
Shift to **N** or **P** position.

Measure the voltage between the A19 and A25 terminal.

Is there voltage? **YES** Repair open in LT GRN wire between the A19 terminal and the shift position console switch.

NO
To page 9-63

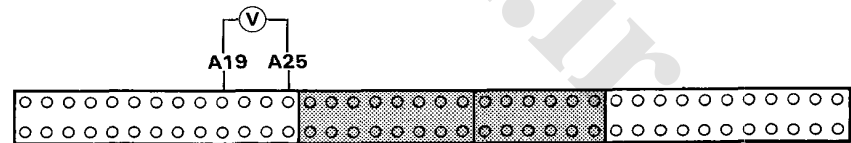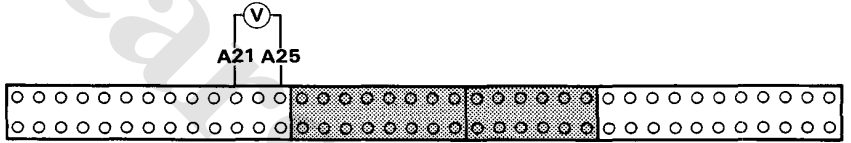

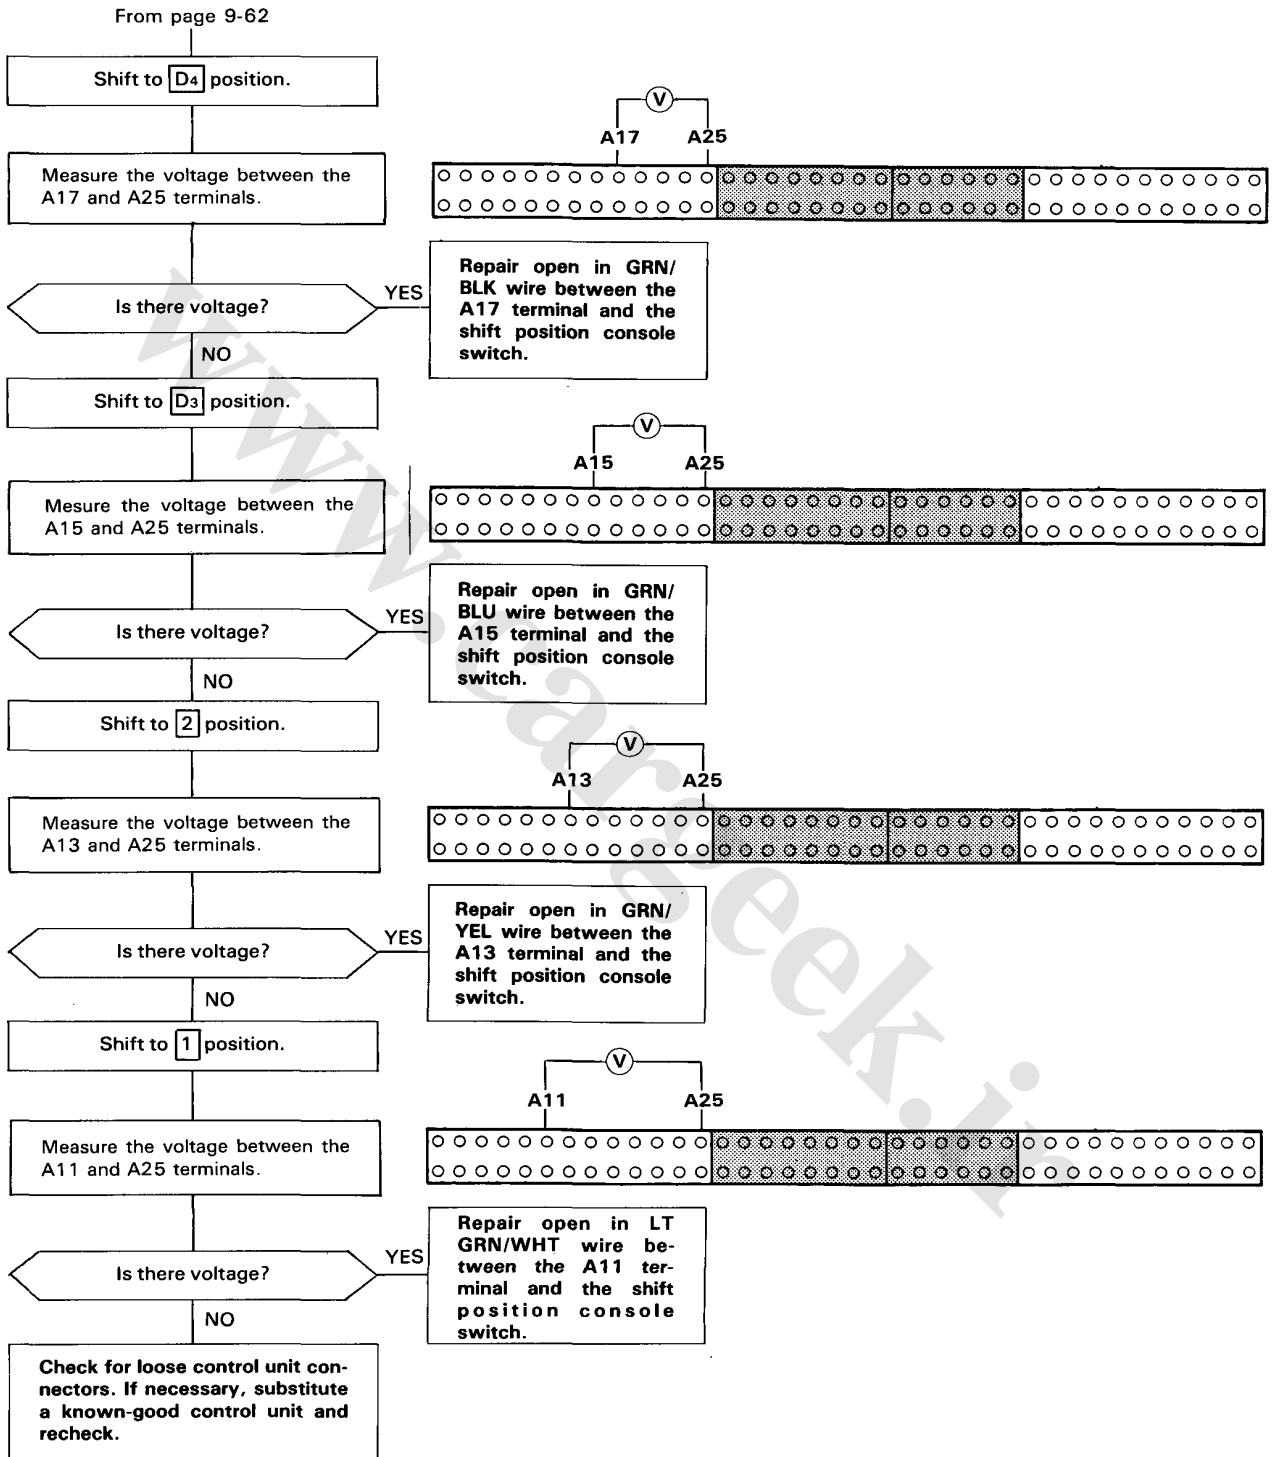

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

Self-diagnosis **D4** indicator light blinks seven times.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A5 (BLU/YEL) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair short to power source in BLU/YEL wire between the A5 terminal and the shift control solenoid valve A.

NO

Turn the ignition switch OFF.

Measure the resistance between the A5 (BLU/YEL) and A25 (BLK/RED) terminals.

Is the resistance 12 – 24 Ω?

NO
Check for open in BLU/YEL wire between the A5 terminal and the shift control solenoid valve A. If wire is OK, check the shift control solenoid valve A.

YES

Disconnect the 2P connector from the shift control solenoid valve assembly.

Check for continuity between the A5 (BLU/YEL) and A25 (BLK/RED) terminals.

Is there continuity?




YES
Repair short to ground in BLU/YEL wire between the A5 terminal and the shift control solenoid valve A.

NO

Connect the 2P connector to the shift control solenoid valve assembly.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

NOTE: View from wire side.

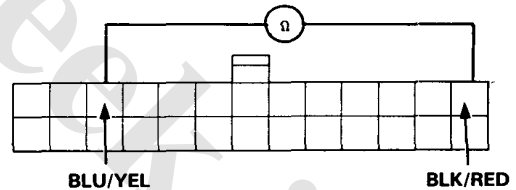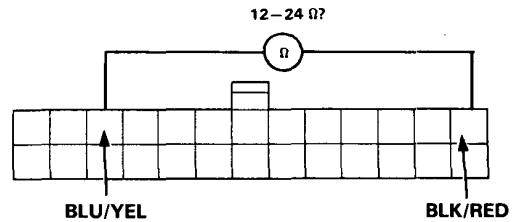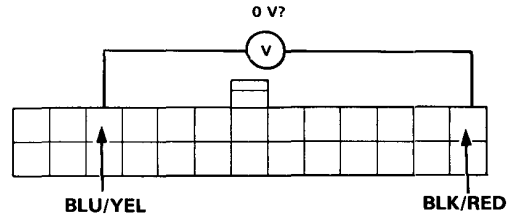



KB other

Self-diagnosis **D4** indicator light blinks eight times.

Disconnect the 26P connector from the control unit.

Turn the ignition switch ON.

Measure the voltage between the A3 (GRN/WHT) and A25 (BLK/RED) terminals.

Is there voltage?

YES
Repair short to power source in GRN/WHT wire between the A3 terminal and shift control solenoid valve B.

Turn the ignition switch OFF.

Measure the resistance between the A3 (GRN/WHT) and A25 (BLK/RED) terminals.

Is the resistance 12 – 24 Ω?

NO
Check for open in GRN/WHT wire between the A3 terminal and the shift control solenoid valve B. If wire is OK, check the shift control solenoid valve B.

Disconnect the 2P connector from the shift control solenoid valve assembly.

Check for continuity between the A3 (GRN/WHT) and A25 (BLK/RED) terminals.




Is there continuity?

YES
Repair short to ground in GRN/WHT wire between the A3 terminal and the shift control solenoid valve B.

Connect the 2P connector to the shift control solenoid valve assembly.

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

NOTE: View from wire side.

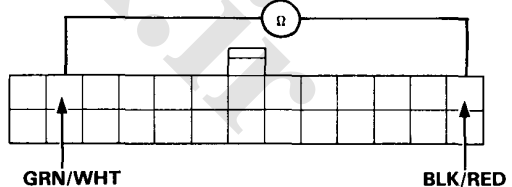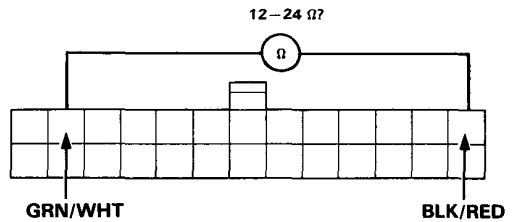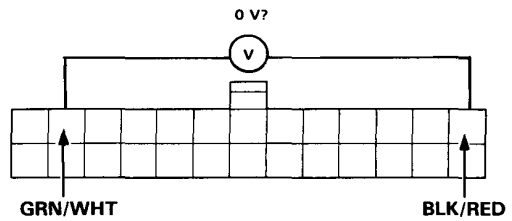


(cont'd)


Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)


KB other

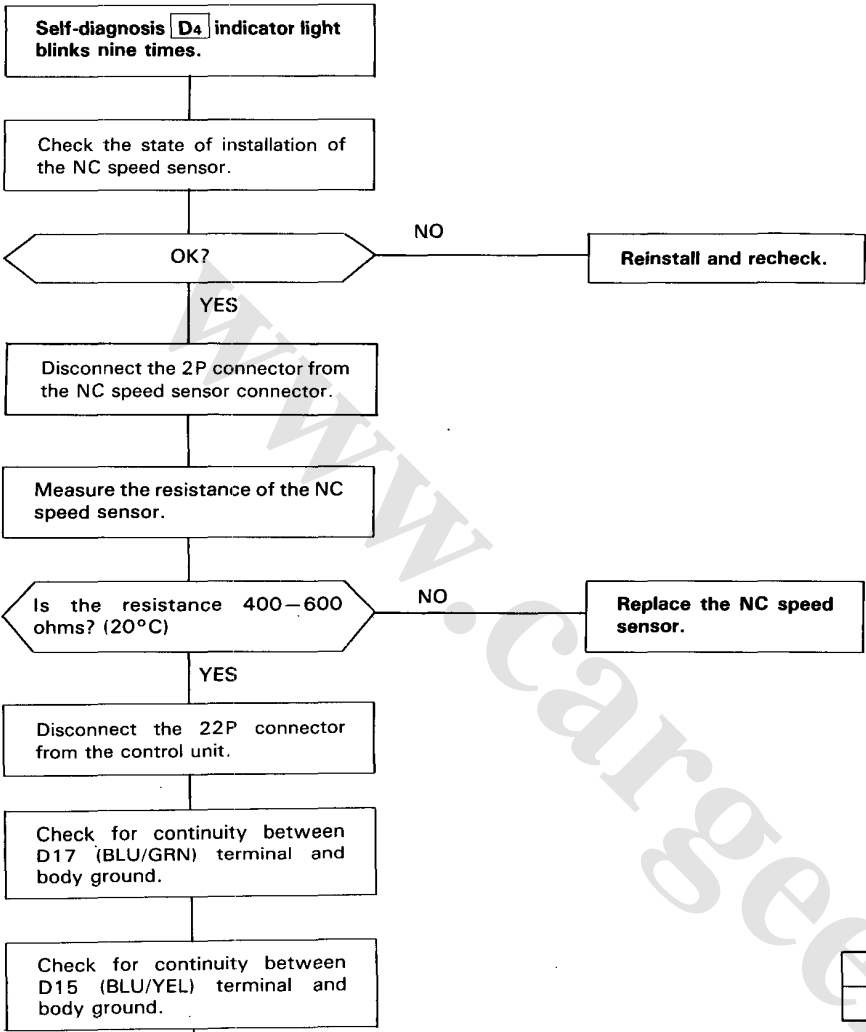

To page 9-67

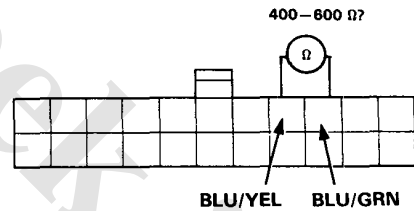

NOTE: View from wire side.

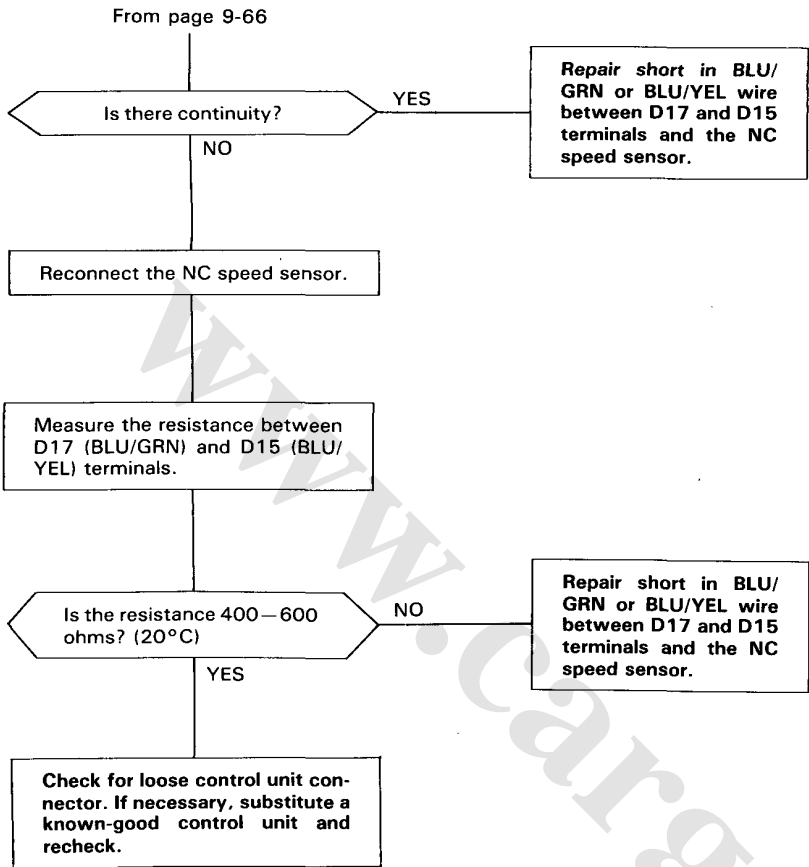


(cont'd)



Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

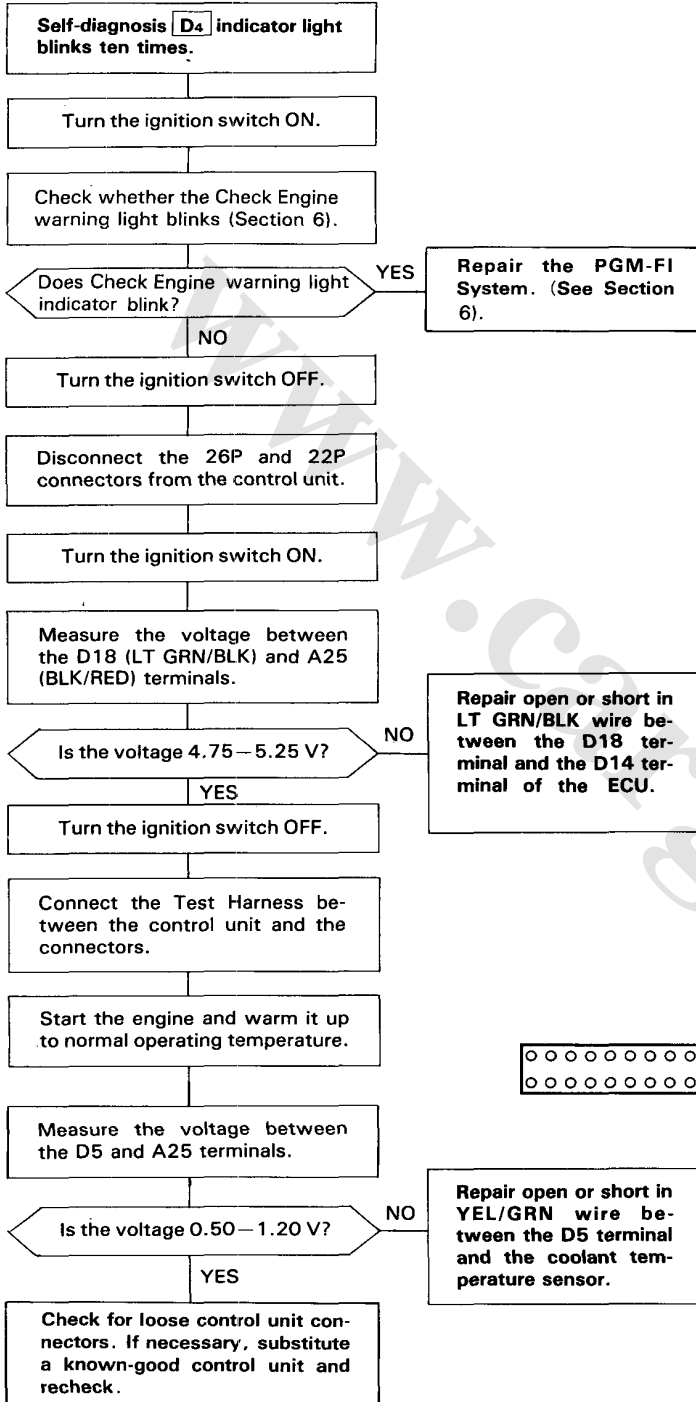


NOTE: View from wire side.

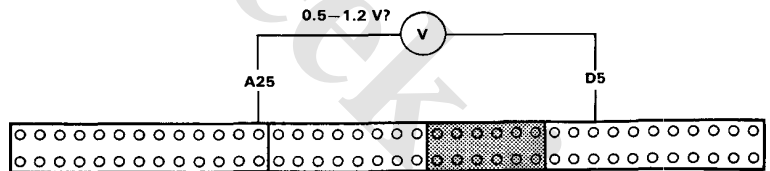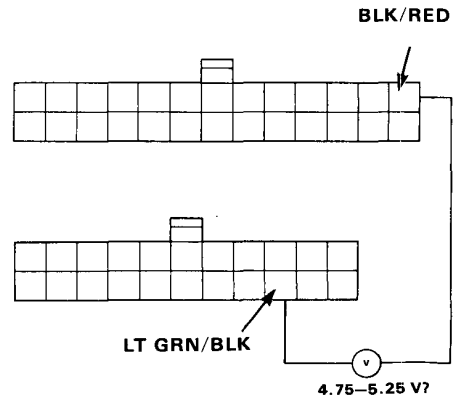




KB other

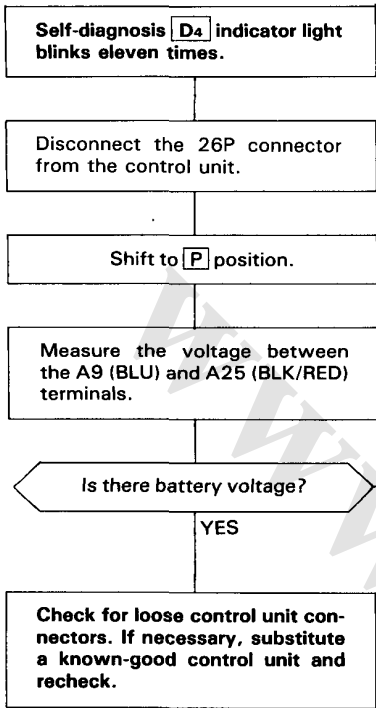

NOTE: View from wire side.

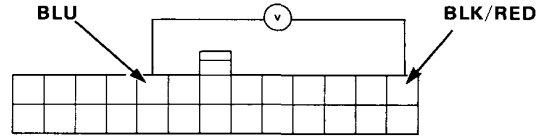

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

Self-diagnosis **D4** indicator light blinks fourteen times.

Start the engine and warm it up to normal operating temperature.

Shift to **P** position.

Turn the ignition switch OFF.

Connect the Test Harness between the control unit and connectors.

Turn the ignition switch ON and wait for at least two seconds.

Using an analog voltmeter, measure the voltage between the D16 (+) and A25 (-) terminals.

Is there approx. 5 V for over five seconds?

YES

Jack up the front of the car.

Start the engine.

Shift to **D4** position.

Raise the engine to over 2,000 min⁻¹ (rpm) (over 40 mph in 4th gear) for five seconds.

Release and depress the throttle so that the transmission downshifts and upshifts.


Using an analog voltmeter, measure the voltage between D16 (+) and A25 (-) terminals



To page 9-71

WARNING

- Make sure jacks and safety stands are placed properly (see Section 1).
- While testing, be careful of the rotating front wheels.

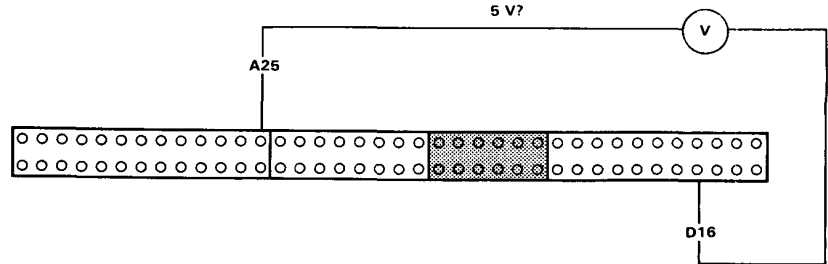

Does the meter jerk from 0 V to 4 V approx. every four seconds?

NO

YES

Refer to PGM-FI A/T Signal (Section 6).

NO

Is the Check Engine light on?

YES

Repair the PGM-FI System (Section 6).

NO



Turn the ignition switch OFF.

Disconnect the A connector from the PGM-FI ECU.

Check for continuity on the BRN/WHT wire between the D16 terminal on the A/T control unit and the PGM-FI ECU.



To page 9-71

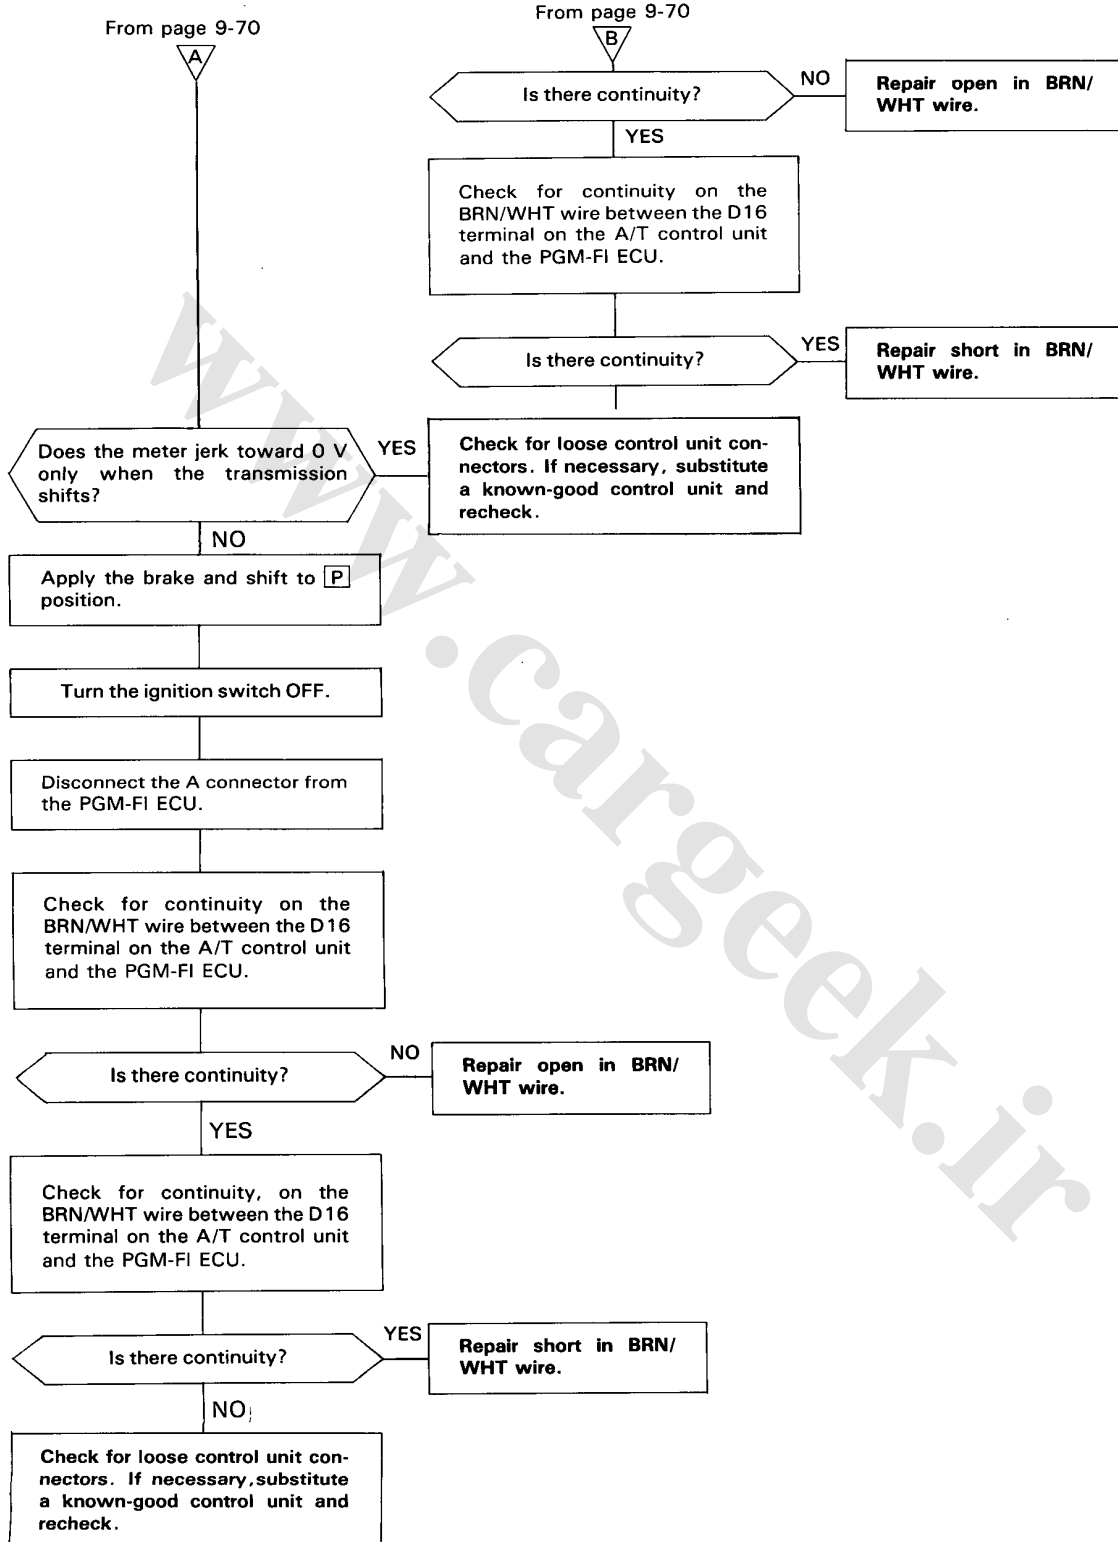

(cont'd)

Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

Self-diagnosis **D4** indicator light blinks fifteen times.

Check the state of installation of NM and NC speed sensor.

OK?

NO **Reinstall and recheck.**

YES
Disconnect the 2P connector from the NM speed sensor.

Measure the resistance of the NM speed sensor.

Is the resistance 400–600 ohms? (20°C)

NO **Replace the NM speed sensor.**

YES
Disconnect the 22P connector from the control unit.

Check the continuity between D19 (ORN/BLU) and D12 (WHT/BLU) terminals and body ground.

Is the continuity?

YES **Repair short in ORN/BLU or WHT/BLU wires between D19 and D12 terminals and the NM speed sensor.**

NO
Reconnect the 2P connector to the NM speed sensor.

Measure the resistance between D19 (ORN/BLU) and D12 (WHT/BLU) terminals.


Is the resistance 400–600 ohms? (20°C)

NO **Check for continuity between D19 (ORN/BLU) terminal and the NM speed sensor.**


YES
To page 9-73 **A**

NOTE: A code 15 on the A/T control unit doesn't always mean there's an electrical problem in the NM or NC circuit, code 15 may also indicate a mechanical problem in the trans.

NOTE: View from wire side.

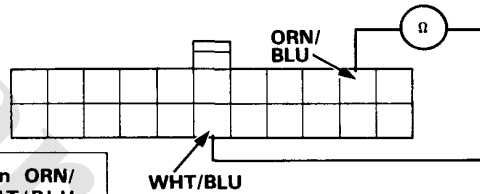

To page 9-73 **B**




From page 9-72

A

Run Electrical Troubleshooting for code 9. Check for loose control unit connector. If necessary, substitute a known-good control unit and recheck.

From page 9-72

B

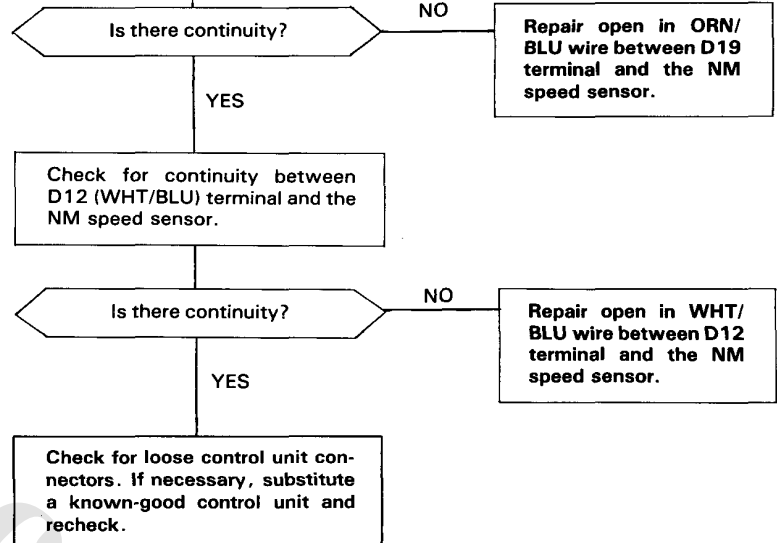


(cont'd)

Electrical Troubleshooting


Troubleshooting Flowchart (cont'd)

KB other

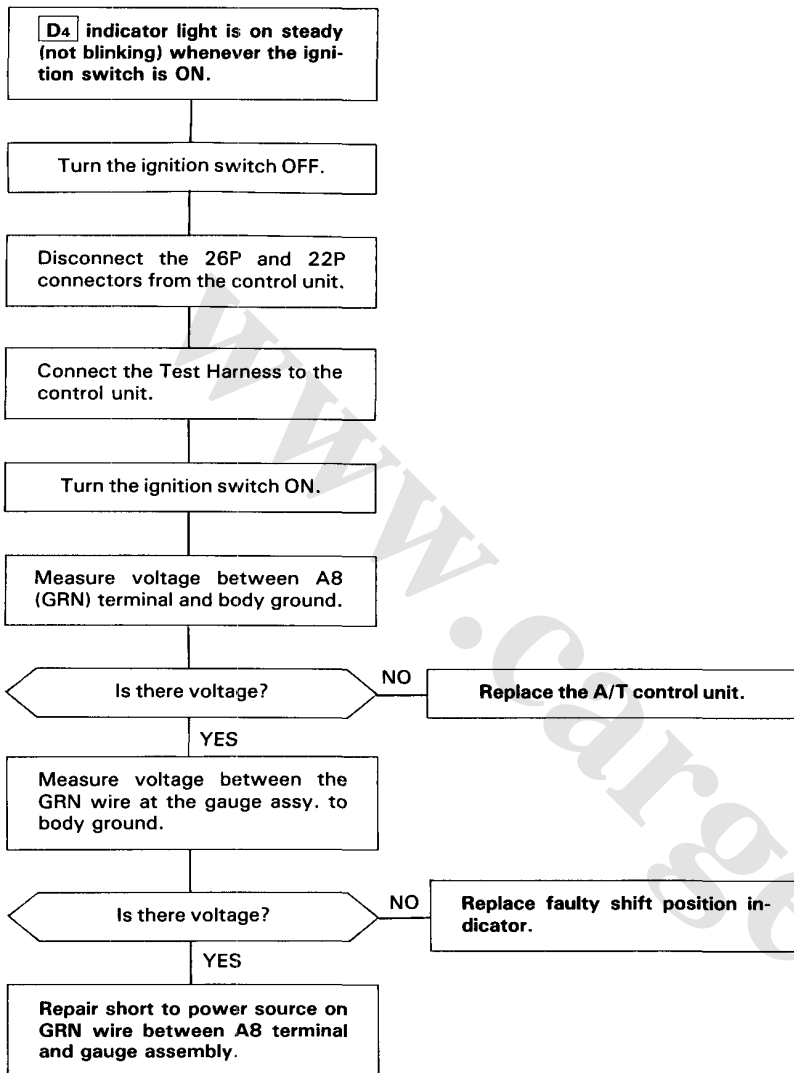



KB other

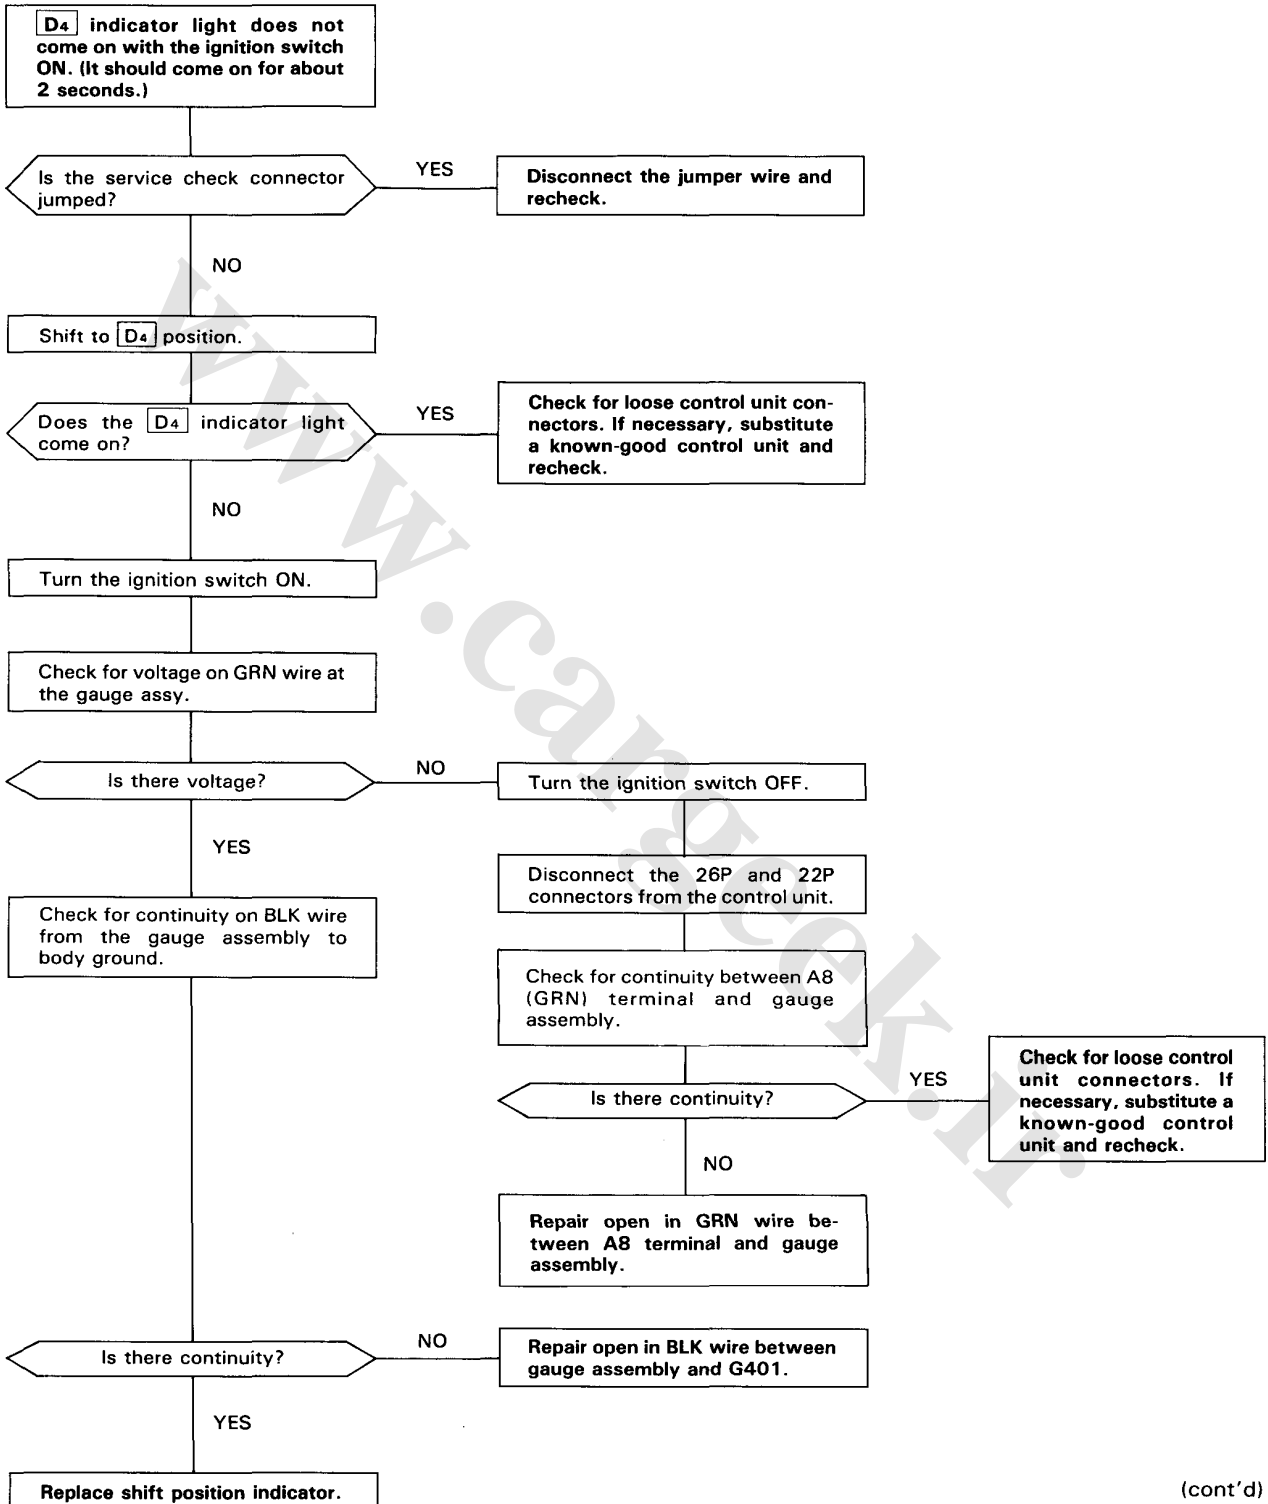


(cont'd)


Electrical Troubleshooting

Troubleshooting Flowchart (cont'd)

KB other

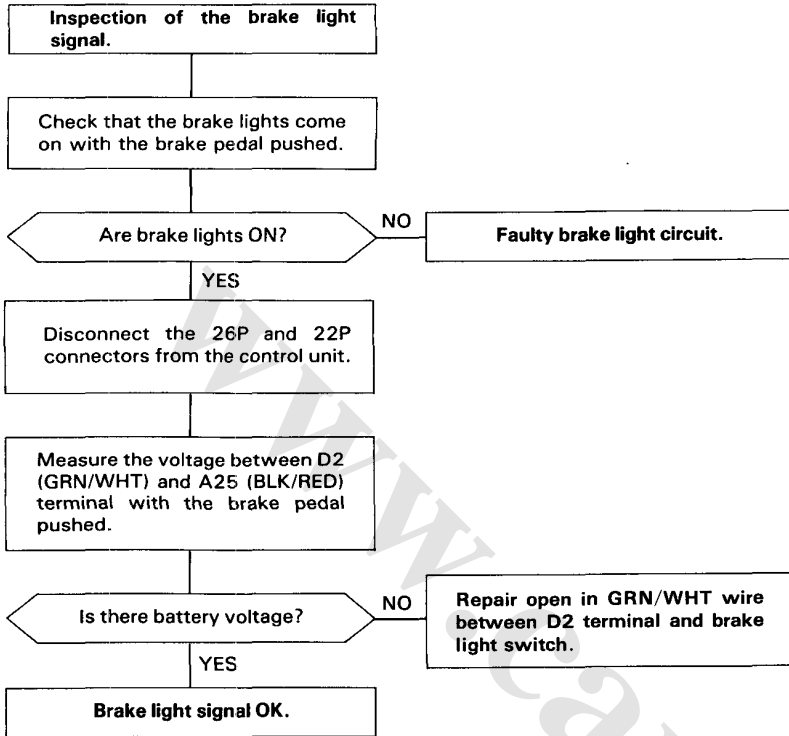


NOTE: View from wire side.

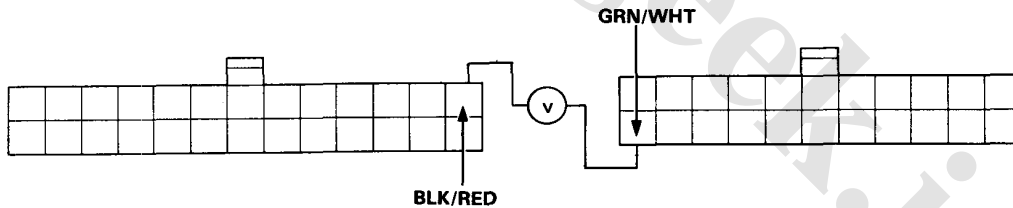




KB other

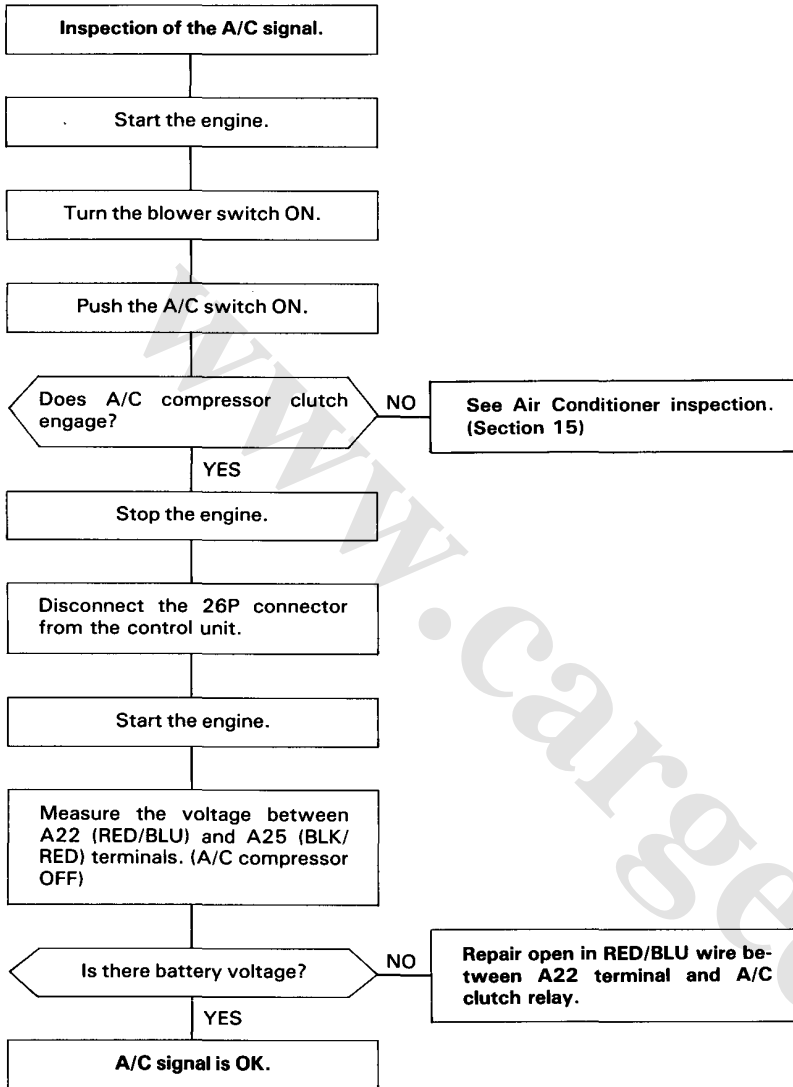

NOTE: View from wire side.

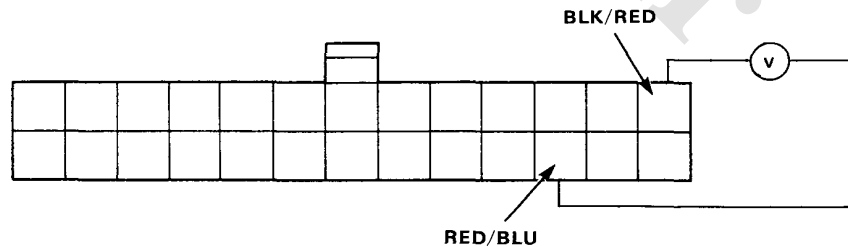

Road Test

NOTE: Warm up the engine to operating temperature.

1. Apply parking brake and block the wheels. Start the engine, then move the selector lever to **D₄** while depressing the brake pedal. Depress the accelerator pedal, and release it suddenly. Engine should not stall.
2. Repeat same test in **D₃** position.
3. Shift the selector lever to **D₄** position and check that the shift points occur at approximate speeds shown. Also check for abnormal noise and clutch slippage.

F20A8, F22A3, and F22A8 Engines

D₄ Position: Normal Mode (S switch OFF)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	21–24	42–45	58–64	23–27
	mph	13–15	26–28	36–40	14–17
3.5/8 throttle Acceleration from a stop	km/h	27–34	56–63	87–97	97–105
	mph	17–21	35–39	54–60	60–65
Full-throttle Acceleration from a stop	km/h	48–56	108–114	151–164	130–138
	mph	30–35	67–71	94–102	81–86

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	21–26	29–35	—	(3rd→1st) 10–16
	mph	13–16	18–22	—	(3rd→1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	77–85	—	—	—
	mph	48–53	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	127–135	126–135	85–94	40–48
	mph	79–84	78–84	53–59	25–30

D₄ Position: S Mode (S switch ON)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	18–21	42–45	77–84	40–45
	mph	11–13	26–28	48–52	25–28
3.5/8 throttle Acceleration from a stop	km/h	27–34	77–84	113–122	121–129
	mph	17–21	48–52	70–76	75–80
Full-throttle Acceleration from a stop	km/h	48–56	108–114	154–164	138–146
	mph	30–35	67–71	96–102	86–91

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	40–45	29–35	—	(3rd→1st) 10–16
	mph	25–28	18–22	—	(3rd→1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	95–103	—	—	—
	mph	59–64	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	127–135	126–135	86–98	40–48
	mph	79–84	78–84	55–61	25–30



F20A5 (except KB other) and F22A2 Engines

D4 Position: Normal Mode (S switch OFF)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	14–18	27–31	40–46	17–21
	mph	9–11	17–19	25–29	11–13
3.5/8 throttle Acceleration from a stop	km/h	28–34	53–59	74–82	97–104
	mph	17–21	33–37	46–51	60–65
Full-throttle Acceleration from a stop	km/h	42–49	102–110	149–158	130–138
	mph	26–30	63–68	93–98	81–86

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	15–21	26–32	—	(3rd→1st) 9–15
	mph	9–13	16–20	—	(3rd→1st) 6–9
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	89–96	—	—	—
	mph	55–60	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	126–134	124–133	85–94	39–46
	mph	78–83	77–83	53–58	24–29

D4 Position: S Mode (S switch ON)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	17–21	39–43	77–83	36–40
	mph	11–13	24–27	48–52	22–25
3.5/8 throttle Acceleration from a stop	km/h	37–43	72–78	106–114	122–129
	mph	23–27	45–48	66–71	76–80
Full-throttle Acceleration from a stop	km/h	43–50	102–110	149–158	130–138
	mph	27–31	63–68	93–98	81–86

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	35–40	31–37	—	(3rd→1st) 11–17
	mph	22–25	19–23	—	(3rd→1st) 7–11
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	107–114	—	—	—
	mph	66–71	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	126–134	124–133	85–94	39–46
	mph	78–83	77–83	53–58	24–29

(cont'd)

Road Test

(cont'd)

F22A9 Engine

D4 Position: Normal Mode (S switch OFF)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	21–24	42–45	58–64	23–27
	mph	13–15	26–28	36–40	14–17
3.5/8 throttle Acceleration from a stop	km/h	27–34	56–63	87–97	97–105
	mph	17–21	35–39	54–60	60–65
Full-throttle Acceleration from a stop	km/h	48–56	101–109	151–161	135–143
	mph	30–35	63–68	94–100	84–89

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	21–26	29–35	—	(3rd→1st) 10–16
	mph	13–16	18–22	—	(3rd→1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	77–85	—	—	—
	mph	48–53	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	129–137	126–135	85–95	40–48
	mph	80–85	78–84	53–59	25–30

D4 Position: S Mode (S switch ON)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	18–21	39–42	61–68	37–42
	mph	11–13	24–26	38–42	23–26
3.5/8 throttle Acceleration from a stop	km/h	27–34	66–72	100–109	111–119
	mph	17–21	41–45	62–68	69–74
Full-throttle Acceleration from a stop	km/h	48–56	101–109	154–164	143–151
	mph	30–35	63–68	96–102	89–94

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	35–40	29–35	—	(3rd→1st) 10–16
	mph	22–25	18–22	—	(3rd→1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	84–92	—	—	—
	mph	52–57	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	129–137	126–135	89–98	40–48
	mph	80–85	78–84	55–61	25–30



F22A6 Engine

D4 Position: Normal Mode (S switch OFF)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	21–24	42–45	58–64	23–27
	mph	13–15	26–28	36–40	14–17
3.5/8 throttle Acceleration from a stop	km/h	27–34	56–63	87–97	97–105
	mph	17–21	35–39	54–60	60–65
Full-throttle Acceleration from a stop	km/h	48–56	101–109	151–161	135–143
	mph	30–35	63–68	94–100	84–89

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	21–26	26–32	—	(3rd→1st) 10–16
	mph	13–16	16–20	—	(3rd→1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	77–85	—	—	—
	mph	48–53	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	129–137	126–135	85–95	40–48
	mph	80–85	78–84	53–59	25–30

D4 Position: S Mode (S switch ON)

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	18–21	39–42	61–68	37–42
	mph	11–13	24–26	38–42	23–26
3.5/8 throttle Acceleration from a stop	km/h	27–34	66–72	100–109	111–119
	mph	17–21	41–45	62–68	69–74
Full-throttle Acceleration from a stop	km/h	48–56	101–109	154–164	143–151
	mph	30–35	63–68	96–102	89–94

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	35–40	26–32	—	(3rd→1st) 10–16
	mph	22–25	16–20	—	(3rd→1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	84–92	—	—	—
	mph	52–57	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	129–137	126–135	89–98	40–48
	mph	80–85	78–84	55–61	25–30

(cont'd)

Road Test

(cont'd)

F20A5 Engine: KB other

● Upshift

		1st→2nd	2nd→3rd	3rd→4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	14–18	27–31	40–46	17–21
	mph	9–11	17–19	25–29	11–13
3.5/8 throttle Acceleration from a stop	km/h	28–34	53–59	74–82	97–104
	mph	17–21	33–37	46–51	60–65
Full-throttle Acceleration from a stop	km/h	42–49	102–110	149–158	130–138
	mph	26–30	63–68	93–98	81–86

● Downshift

		Lock-up Clutch OFF	4th→3rd	3rd→2nd	2nd→1st
0.7/8 throttle Coasting or braking to a stop	km/h	15–21	26–32	—	(3rd→1st) 9–15
	mph	9–13	16–20	—	(3rd→1st) 6–9
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	89–96	—	—	—
	mph	55–60	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	126–134	124–133	85–94	39–46
	mph	78–83	77–83	53–58	24–29

4. Accelerate to about 35 mph (57 km/h) so the transmission is in 4th, then shift **D4** to **2**. The car should immediately begin slowing down from engine braking.

CAUTION: Do not shift from **D4 or **D3** to **2** or **1** at speeds over 62.5 mph (100 km/h); you may damage the transmission.**

1 (1st Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this position.

2 (2nd Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this position.

R (Reverse)

Accelerate from a stop at full throttle, and check for abnormal noise and clutch slippage.

P (Park)

Park car on slope (approx. 16°), apply the parking brake, and shift into Park. Release the brake; the car should not move.

Pressure

Testing

⚠ WARNING

- Make sure jacks and safety stands are placed properly.
- While testing, be careful of the rotating front wheels.

CAUTION:

- Before testing, be sure the transmission is filled to the proper level.
- Connect an oil pressure gauge securely, being sure not to allow dust and other foreign particles to enter the inspection hole.
- Warm up the engine before testing.
- Set the parking brake securely, and block both rear wheels.
- Raise the front of the car and support with safety stands.



Line Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Run the engine at 2,000 min⁻¹ (rpm).
3. Measure the line pressure.

NOTE: Do not reuse old aluminum washers. Install the sealing bolt in the inspection hole and tighten to the specified torque 18 N·m (1.8 kg-m, 12 lb-ft).

1. Stop the engine and connect a tachometer.
2. Connect an oil pressure gauge to each inspection hole.
3. Start the engine and measure respective pressures as follows.

A/T OIL PRESSURE GAUGE SET 07406-0020003 (Includes Pressure Hoses)
 A/T OIL PRESSURE GAUGE HOSE 07406-0020201

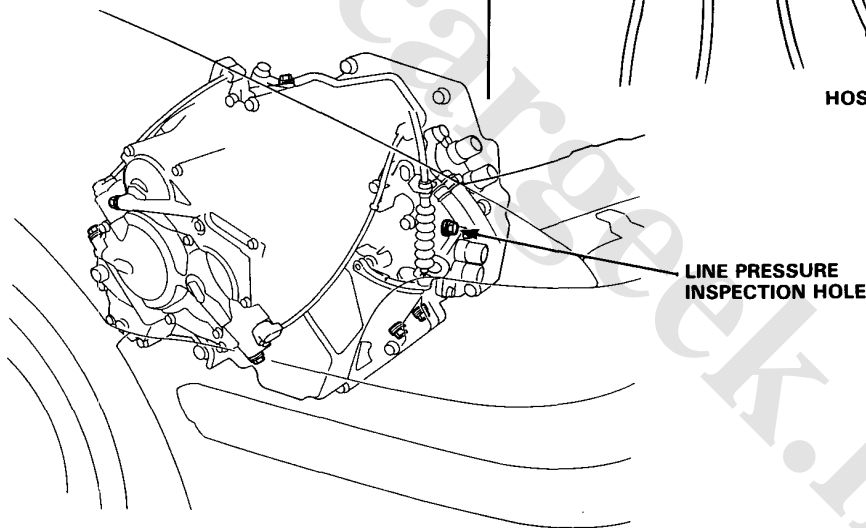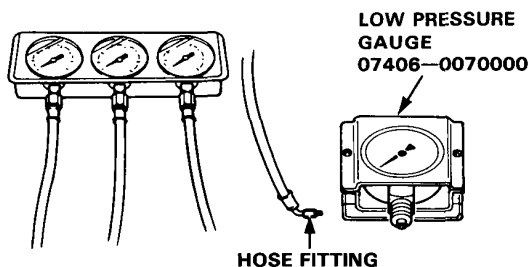


PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Line	N or P	No (or low) line pressure	Torque converter, oil pump pressure regulator, torque converter check valve, oil pump	785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)

NOTE: Higher pressures may be indicated if measurements are made in selector positions other than **N** or **P**.



Clutch Pressure Measurement

1. Set the parking brake and block both rear wheels securely.
2. Raise the front of the car and support with safety stands.
3. Allow the front wheels to rotate freely.
4. Run the engine at 2,000 min⁻¹ (rpm).
5. Measure each clutch pressure.

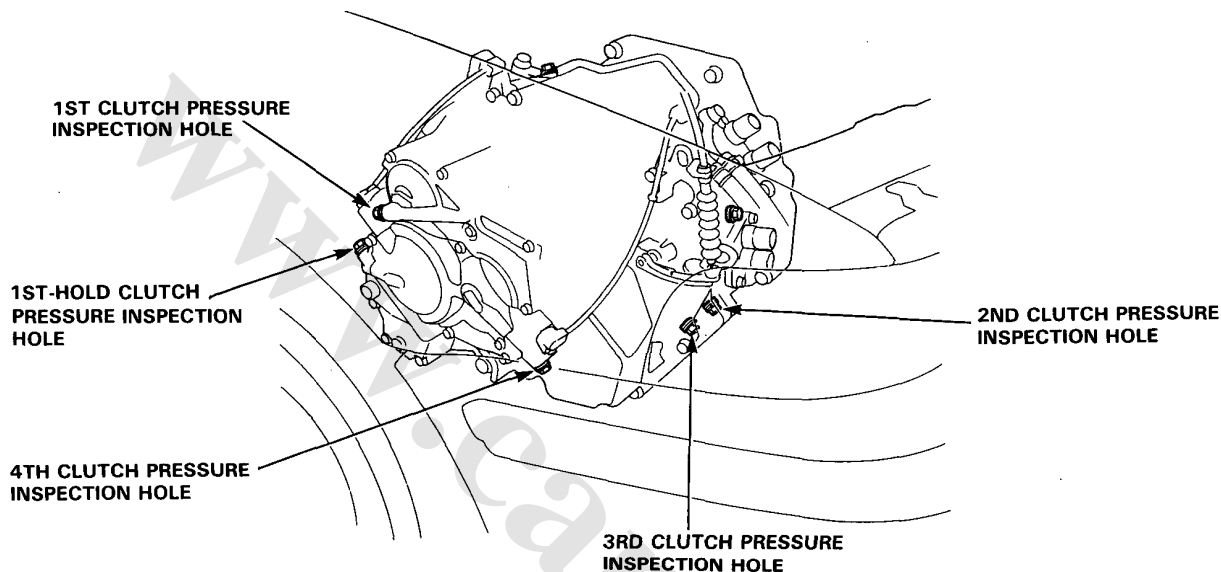

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
1st Clutch	1	No or low 1st pressure	1st Clutch	785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)
1st-hold Clutch	1	No or low 1st-hold pressure	1st-hold Clutch		
2nd Clutch	2	No or low 2nd pressure	2nd Clutch		
2nd Clutch	2	No or low 2nd pressure	2nd Clutch	490 kPa (5.0 kg/cm ² , 71 psi) (throttle fully closed)	441 kPa (4.5 kg/cm ² , 64 psi) (throttle fully closed)
3rd Clutch	D ₃	No or low 3rd pressure	3rd Clutch	834 kPa (8.5 kg/cm ² , 121 psi) (throttle more than 1/4 opened)	735 kPa (7.5 kg/cm ² , 107 psi) (throttle more than 1/4 opened)
4th Clutch	D ₄	No or low 4th pressure	4th Clutch	520 kPa (5.3 kg/cm ² , 75 psi) (throttle fully closed)	461 kPa (4.7 kg/cm ² , 67 psi) (throttle fully closed)
	R	No or low 4th pressure	Servo valve or 4th Clutch	834 kPa (8.5 kg/cm ² , 121 psi) (throttle more than 1/4 opened)	735 kPa (7.5 kg/cm ² , 107 psi) (throttle more than 1/4 opened)
				785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi)	735 kPa (7.5 kg/cm ² , 107 psi)

(cont'd)


Pressure

Testing (cont'd)


Low/High Pressure Test

1. Set the parking brake and block rear wheels securely.
2. Raise the car and support with safety stands.
3. Attach the gauge set to the appropriate pressure test port.
4. Remove the cable end of the throttle control lever.


NOTE: Do not loosen the locknuts, simply unhook the cable end.

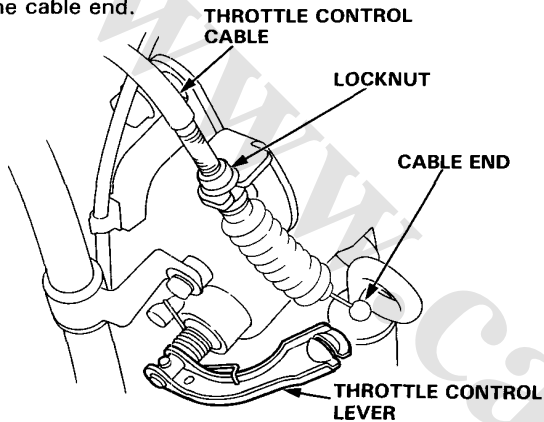



5. Warm up the engine to normal operating temperature (cooling fan comes on).
6. With the engine idling, move the selector lever to **D3** or **D4**.
7. Slowly move the throttle linkage to increase engine rpm until pressure is indicated on the appropriate gauge. Then release the throttle linkage, allowing the engine to return to an idle, and record the pressure reading.

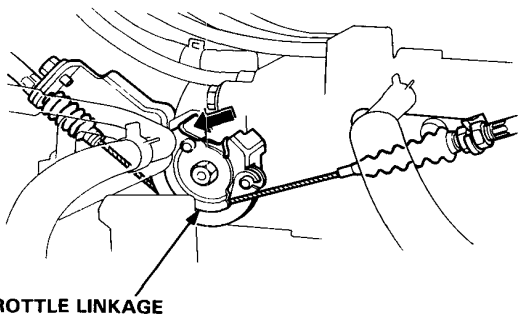

8. With the engine idling, lift the throttle control lever up approximately 1/2 of its possible travel and increase the engine rpm until pressure is indicated on the appropriate gauge. Record the highest pressure reading obtained.

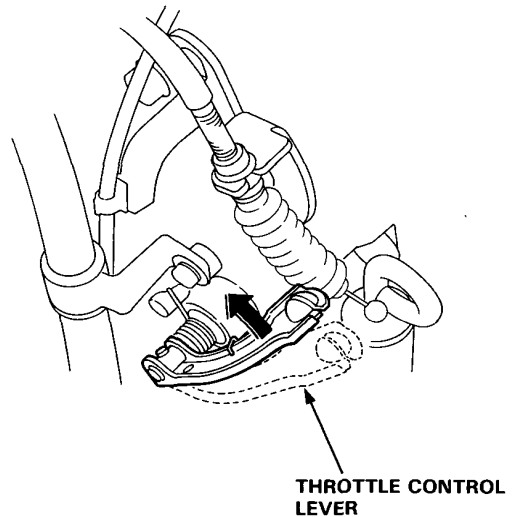

9. Repeat steps 7 and 8 for each clutch pressure being inspected.

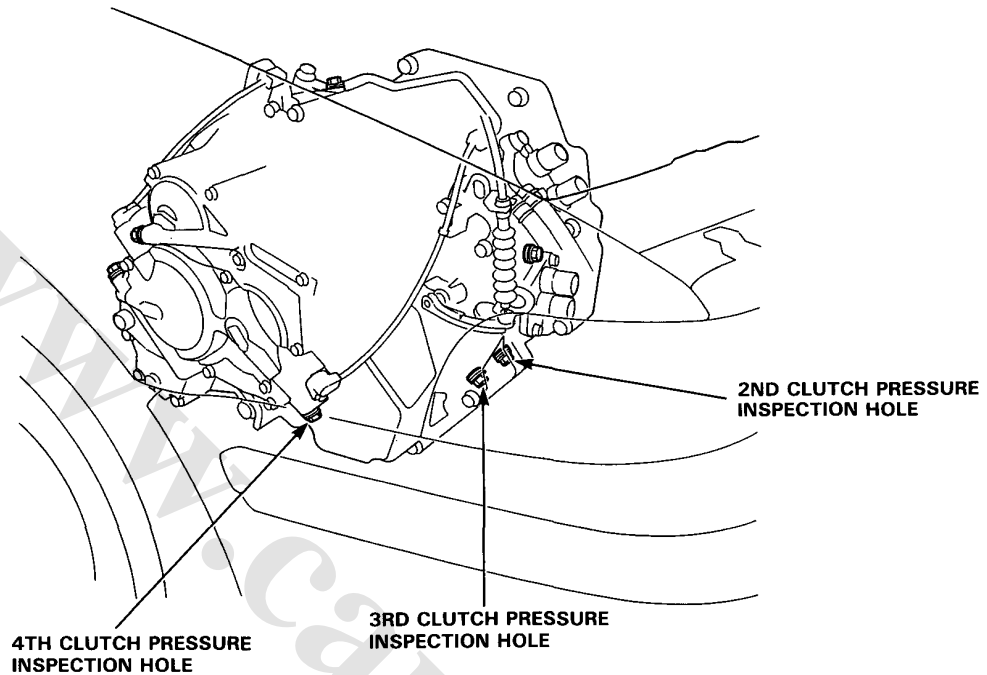

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
2nd Clutch	D ₃ or D ₄	No or low 2nd pressure	2nd Clutch	490–834 kPa (5.0–8.5 kg/cm ² , 71–121 psi) varies with throttle opening	441 kPa (4.5 kg/cm ² , 64 psi) with lever released
3rd Clutch	D ₃ or D ₄	No or low 3rd pressure	3rd Clutch		735 kPa (7.5 kg/cm ² , 107 psi) with lever in full throttle position
4th Clutch	D ₄	No or low 4th pressure	4th Clutch	520–834 kPa (5.3–8.5 kg/cm ² , 75–121 psi) varies with throttle opening	461 kPa (4.7 kg/cm ² , 67 psi) with lever released 735 kPa (7.5 kg/cm ² , 107 psi) with lever in full throttle position


(cont'd)

Pressure


Testing (cont'd)

Throttle B Pressure Measurement

1. Set the parking brake securely and block the wheels.
2. Run the engine at $1,000 \text{ min}^{-1}$ (rpm)
3. Disconnect the throttle control cable from the throttle lever and set the control lever in full throttle position.

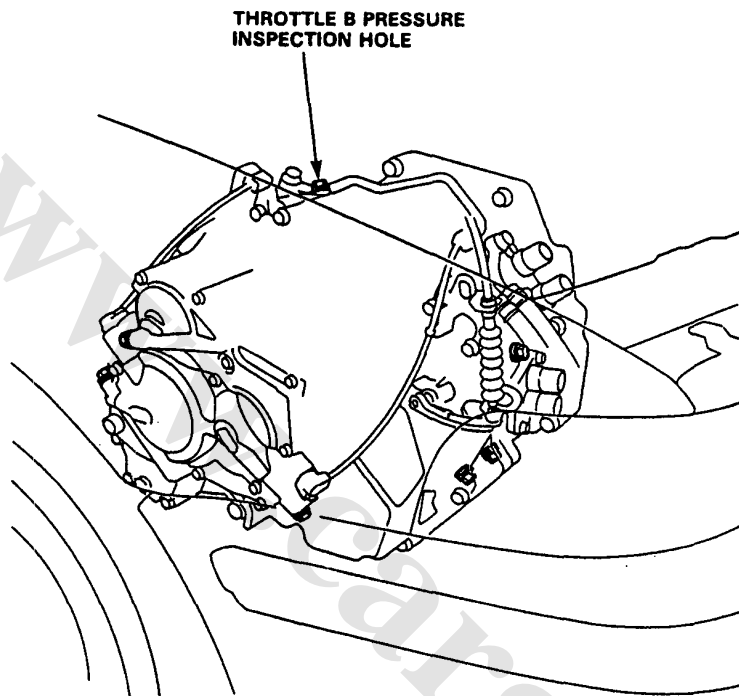

PRESSURE	SELECTOR POSITION	SYMPTOM	PROBABLE CAUSE	FLUID PRESSURE	
				Standard	Service Limit
Throttle B	D ₃ or D ₄	No (or low) throttle B pressure	Throttle valve B	0 kPa (0 kg/cm ² , 0 psi) with lever released 785–834 kPa (8.0–8.5 kg/cm ² , 114–121 psi) with lever in full throttle position	735 kPa (7.5 kg/cm ² , 107 psi) with lever in full throttle position.



Shift Indicator Panel

Adjustment


ACCORD AERO DECK

SRS wire harness is routed near the gearshift selector.

NOTE: LHD is shown; RHD is similar.


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

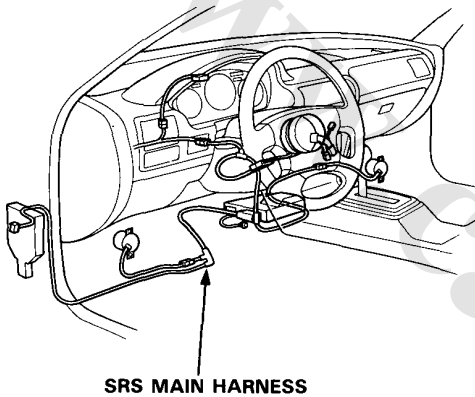

1. Check that the index mark of the indicator aligns with the **N** mark of the shift indicator panel with the transmission in NEUTRAL.
2. If not aligned, remove the center console. (see Section 14).
3. Remove the shift indicator panel mounting screws and adjust by moving the panel.

NOTE: Whenever the shift indicator panel is removed, reinstall the panel as described above.

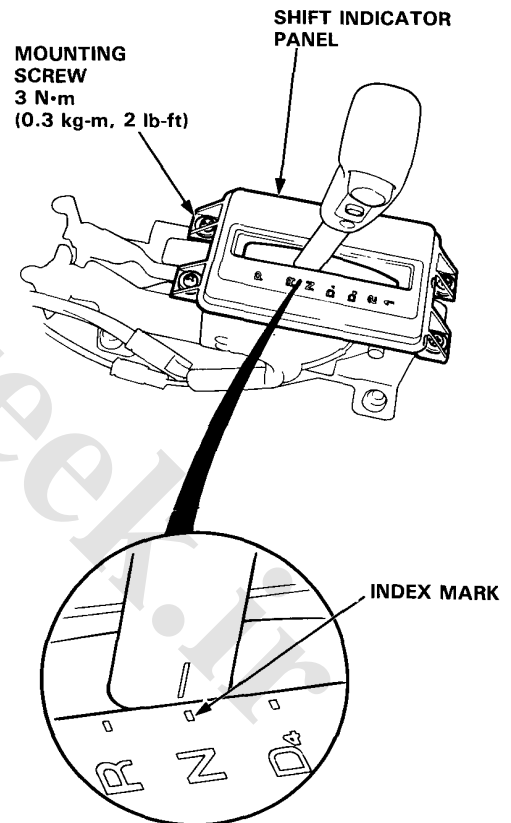

Shift Cable

Adjustment


ACCORD AERO DECK

SRS wire harness is routed near the gearshift selector.


NOTE: LHD is shown; RHD is similar.

CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

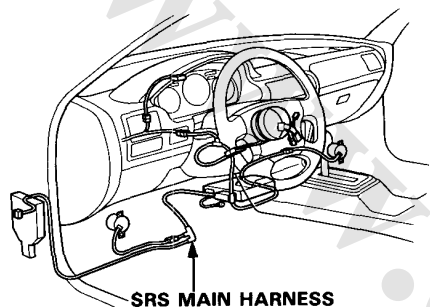

1. Start the engine. Shift to reverse to see if the reverse gear engages. If not, refer to Troubleshooting.
2. With the engine off, remove the console (see Section 14).
3. Shift to **N** position, then remove the lock pin from the cable adjuster.

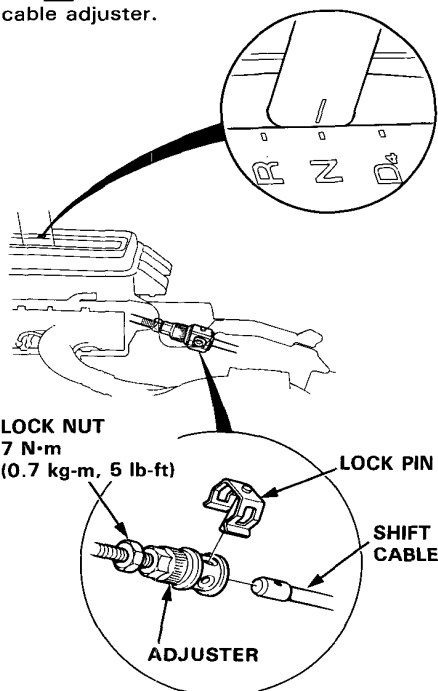

4. Check that the hole in the adjuster is perfectly aligned with the hole in the shift cable.

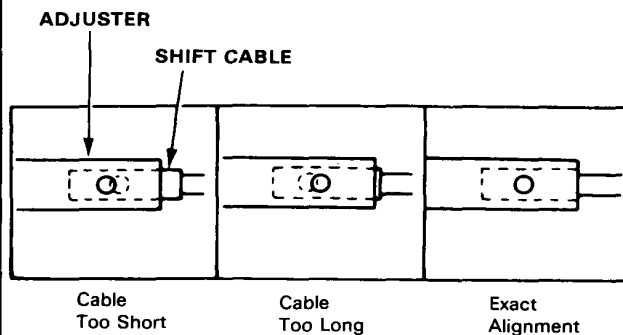

NOTE: There are two holes in the end of the shift cable. They are positioned 90° apart to allow cable adjustments in 1/4 turn increments.

5. If not perfectly aligned, loosen the lock nut on shift cable and adjust as required.
6. Tighten the lock nut.
7. Install the lock pin on the adjuster.

NOTE: If you feel the lock pin binding as you reinstall it, the cable is still out of adjustment and must be readjusted.

8. Start the engine and check the shift lever in all gears. If any gear does not work properly, refer to troubleshooting.



Removal/Installation


ACCORD AERO DECK

SRS wire harness is routed near the gearshift selector.

NOTE: LHD is shown; RHD is similar.

CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

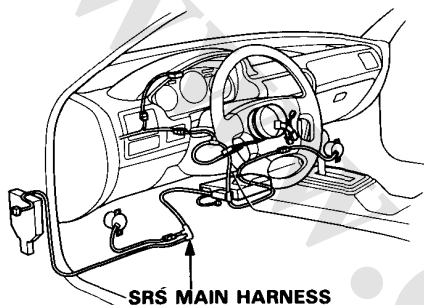

⚠ WARNING


- Make sure jacks and safety stands are placed properly and hoist brackets are attached to correct positions on the engine.
- Apply parking brake and block rear wheels, so car will not roll off stands and fall on you while working under it.

1. Remove the front console (see Section 14).
2. Remove the lock pin from the cable adjuster.
3. Remove the bolts, then remove the cable bracket and cable guide.
4. Remove the exhaust pipe A and center beam.
5. Remove cable holder.
6. Remove the shift cable with control lever from the control shaft.

CAUTION: Take care not to bend the cable when removing it.

7. Install the shift cable in the reverse order of removal.

NOTE: On reassembly, check the cable adjustment (page 9-90).

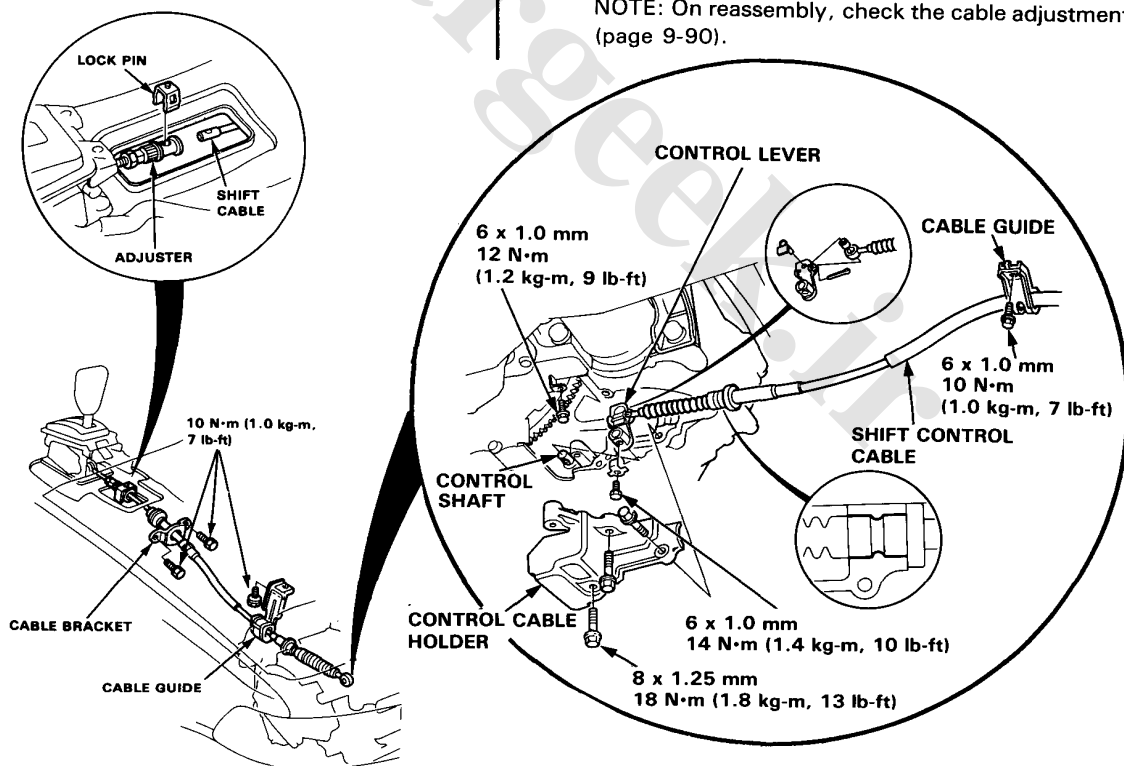

Gearshift Selector


ACCORD AERO DECK

SRS wire harness is routed near the gearshift selector.

NOTE: LHD is shown; RHD is similar.

CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.

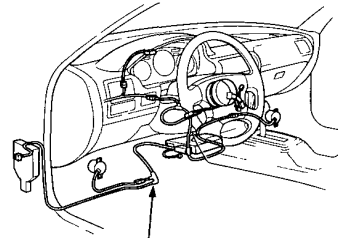

SRS MAIN HARNESS

PUSH KNOB SPRING

SELECTOR LEVER KNOB

3 N·m (0.3 kg-m, 2 lb-ft)
Apply non hardening thread lock sealant.

SLIDER

3 N·m (0.3 kg-m, 2 lb-ft)
Apply non hardening thread lock sealant.

S SWITCH

SHIFT INDICATOR PANEL

PUSH KNOB

LOCK PIN ROD

Replace.

LOCK PIN

ADJUSTER

10 N·m (1.0 kg-m, 7 lb-ft)

SHIFT POSITION
CONSOLE SWITCH
See section 16.

10 N·m (1.0 kg-m, 7 lb-ft)


SELECTOR MOUNT
BRACKET

10 N·m (1.0 kg-m, 7 lb-ft)

LEVER COVER



KB other

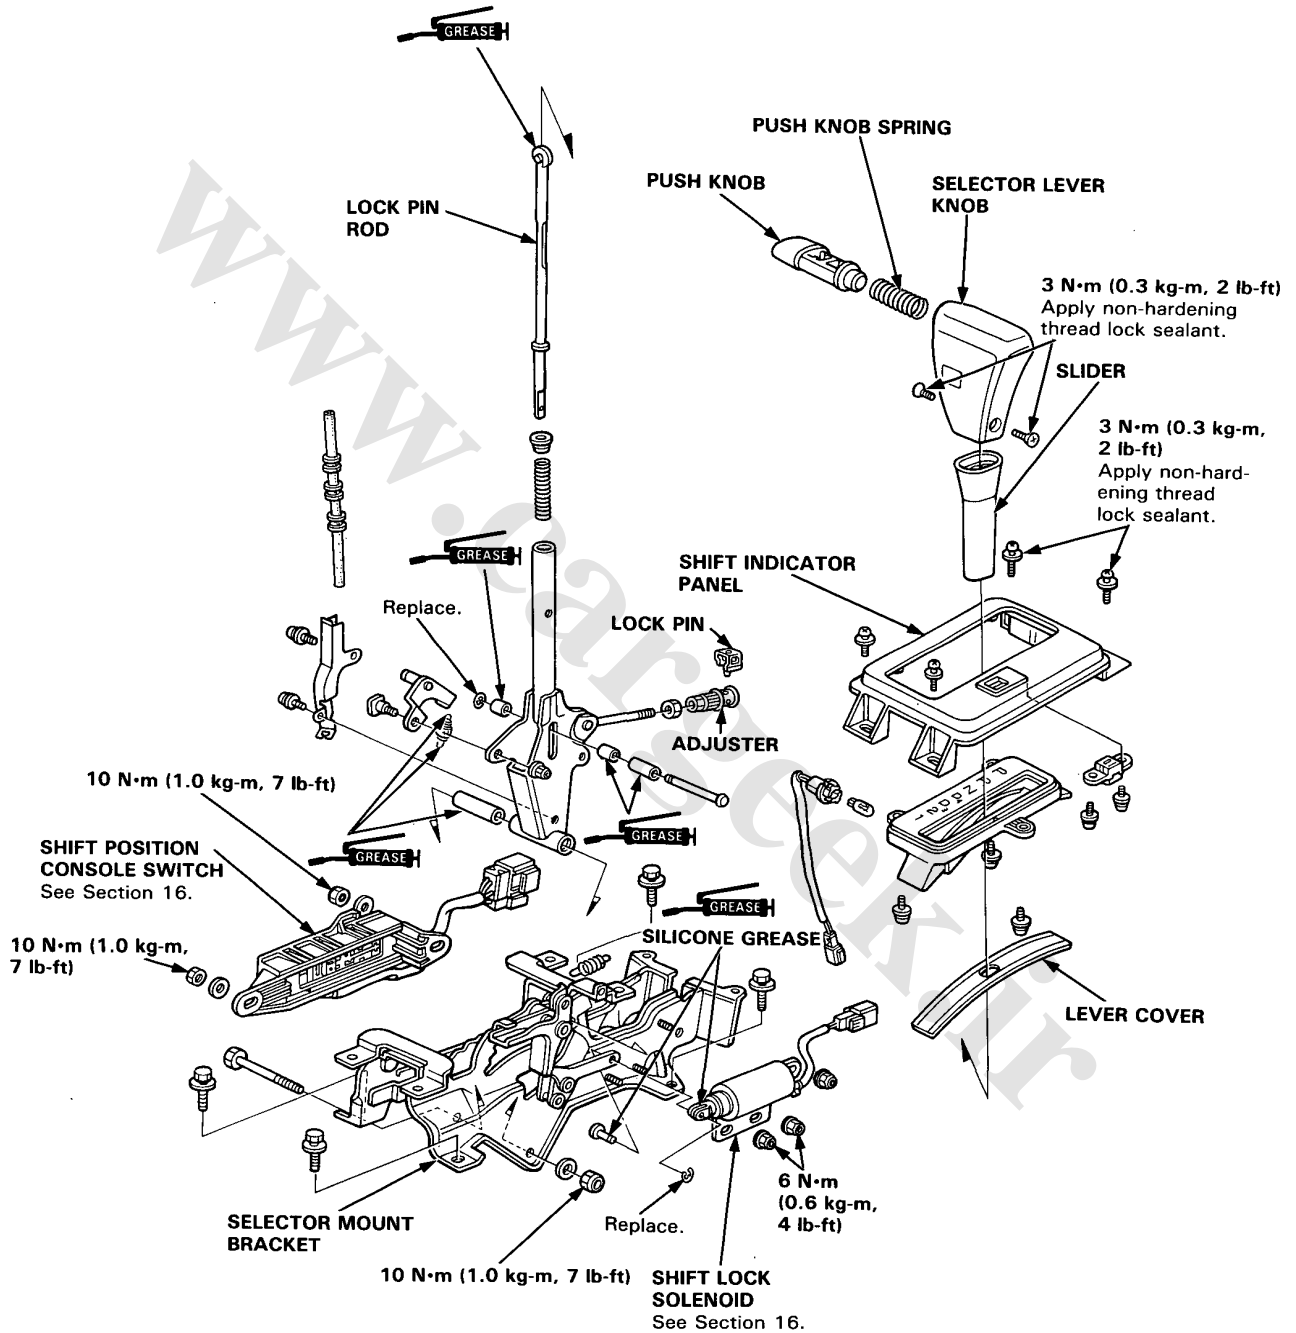



Throttle Control Cable

Inspection


NOTE: Before inspecting the throttle control cable, make sure;

- Throttle cable free play is correct (see Section 6).
- Idle speed is correct (see Section 6).
- To warm up the engine to normal operating temperature (cooling fan comes on).


1. Verify that the throttle control lever is synchronized with the throttle linkage while depressing and releasing the accelerator pedal.
2. If the throttle control lever is not synchronized with the throttle linkage, adjust the throttle control cable.

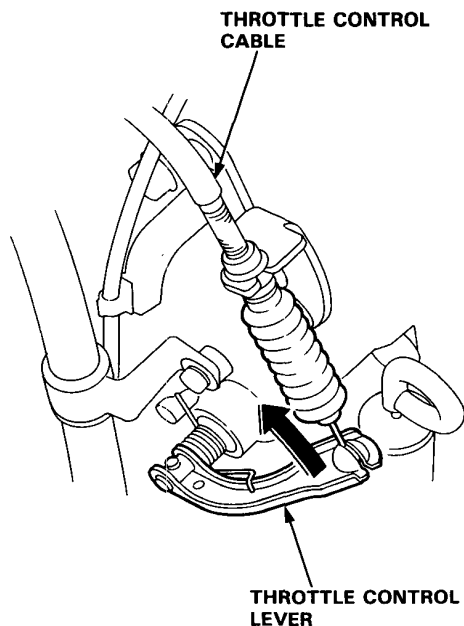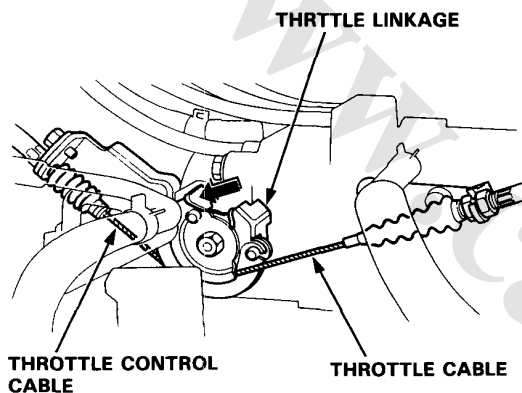

3. Check that there is play in the throttle control lever while depressing the accelerator pedal to the full-throttle position.

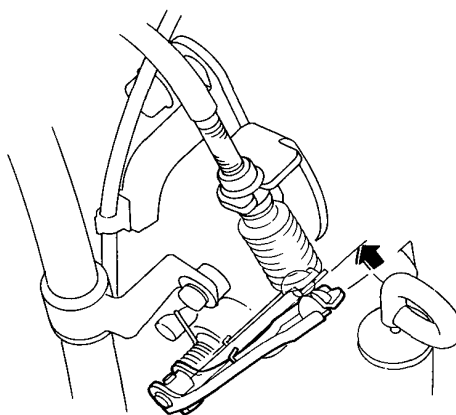

4. Remove the cable end of the throttle control cable from the throttle control lever.
5. Check that the throttle control lever moves smoothly.

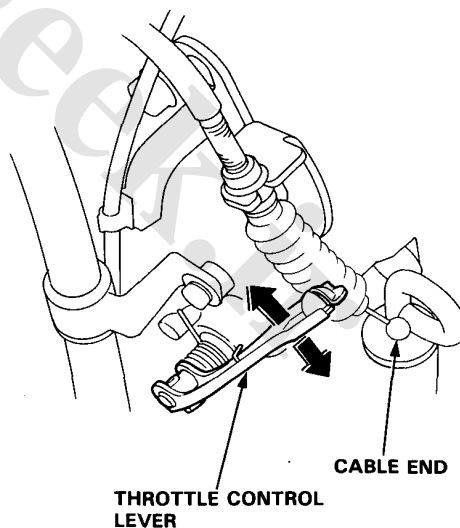




Adjustment


NOTE: Before adjusting the throttle control cable, make sure;

- Throttle cable free play is correct (see Section 6).
- Idle speed is correct (see Section 6).
- To warm up the engine to normal operating temperature (cooling fan comes on).


1. Verify that the throttle linkage is in the full-closed position.

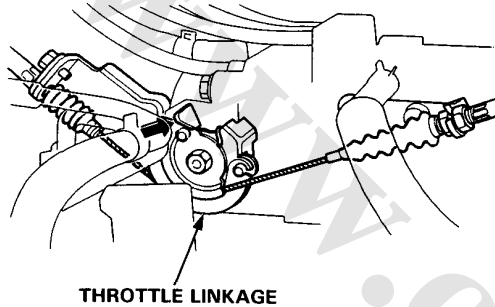

2. Loosen the locknut of the throttle control cable at the throttle control lever.
3. Remove the free play of the throttle control cable with the locknut, while pushing the throttle control lever to the full-closed position as shown.

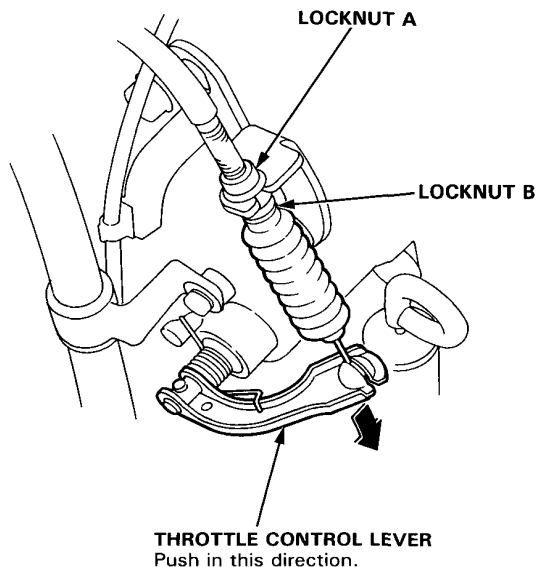


4. Tighten the locknut.

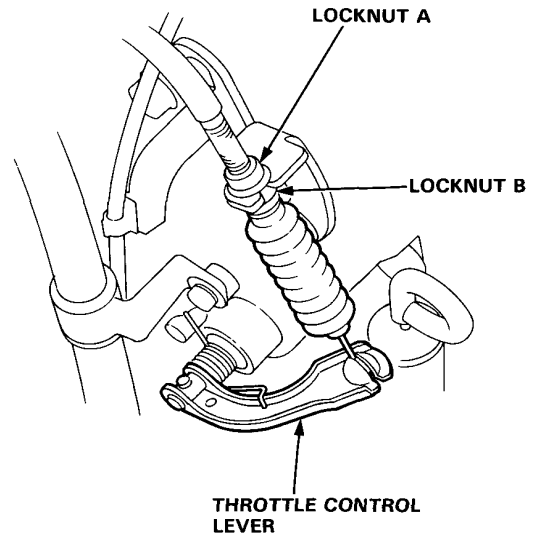

5. After tightening the locknuts, inspect the synchronization and throttle control lever movement.

Illustrated Index

R. Side Cover

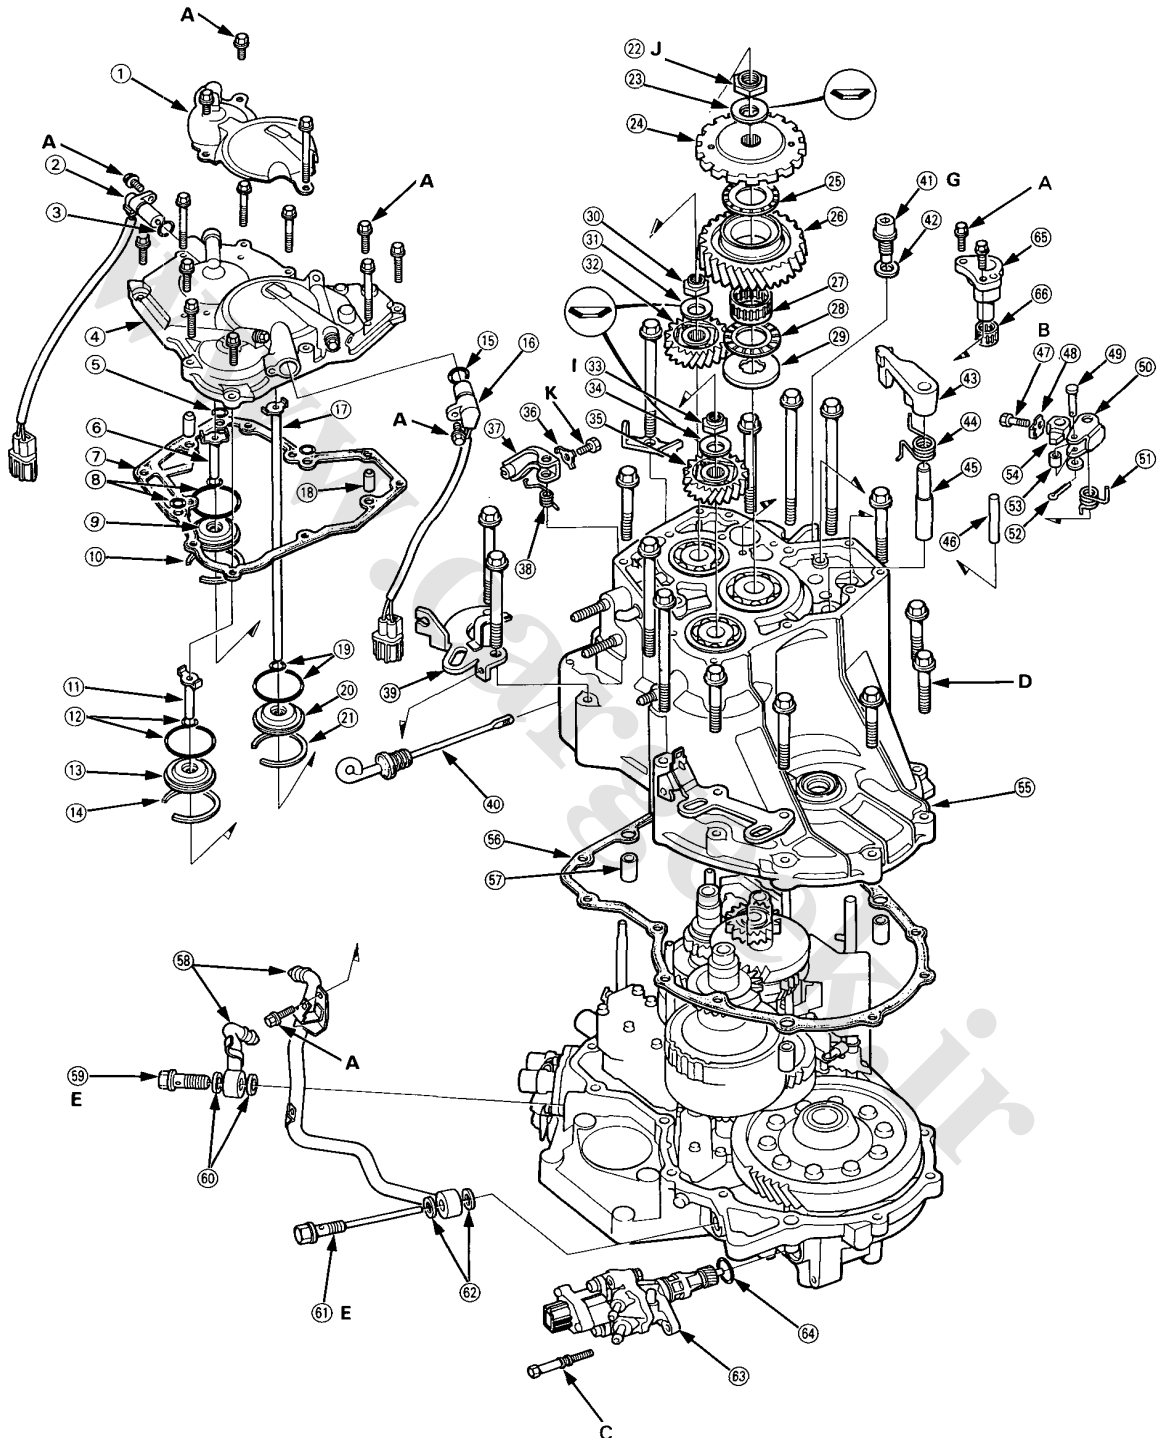




- ① R.SIDE COVER PROTECTOR
- ② NM SPEED SENSOR
- ③ O-RING Replace.
- ④ R.SIDE COVER
- ⑤ O-RING Replace.
- ⑥ 4TH CLUTCH FEED PIPE
- ⑦ R.SIDE COVER GASKET Replace.
- ⑧ O-RINGS Replace.
- ⑨ FEED PIPE GUIDE
- ⑩ SNAP RING
- ⑪ 1ST CLUTCH FEED PIPE
- ⑫ O-RINGS Replace.
- ⑬ FEED PIPE GUIDE
- ⑭ SNAP RING
- ⑮ O-RING Replace.
- ⑯ NC SPEED SENSOR
- ⑰ 1ST-HOLD CLUTCH FEED PIPE
- ⑱ DOWEL PIN
- ⑲ O-RINGS Replace.
- ⑳ FEED PIPE GUIDE
- ㉑ SNAP RING
- ㉒ COUNTERSHAFT LOCKNUT, 24 × 1.25 mm
(Flange nut) Replace.
- ㉓ CONICAL SPRING WASHER Replace.
- ㉔ PARKING GEAR
- ㉕ THRUST NEEDLE BEARING
- ㉖ COUNTERSHAFT IDLER GEAR
- ㉗ NEEDLE BEARING
- ㉘ THRUST NEEDLE BEARING
- ㉙ THRUST WASHER
- ㉚ MAINSHAFT LOCKNUT, 24 × 1.25 mm
(Flange nut) Replace.
- NOTE: Left-hand threads
- ㉛ CONICAL SPRING WASHER Replace.
- ㉜ MAINSHAFT IDLER GEAR
- ㉝ SECONDARY SHAFT LOCKNUT, 24 × 1.25 mm
(Flange nut) Replace.
- ㉞ CONICAL SPRING WASHER Replace.
- ㉟ SECONDARY SHAFT IDLER GEAR
- ㊱ LOCK WASHER Replace.
- ㊲ THROTTLE CONTROL LEVER
- ㊳ THROTTLE CONTROL LEVER SPRING
- ㊴ TRANSMISSION HANGER
- ㊵ ATF LEVEL GAUGE
- ㊶ DRAIN PLUG
- ㊷ SEALING WASHER Replace.
- ㊸ PARKING BRAKE PAWL
- ㊹ PARKING BRAKE PAWL SPRING
- ㊺ PARKING BRAKE PAWL STOPPER
- ㊻ PARKING BRAKE PAWL SHAFT
- ㊼ LOCK BOLT
- ㊽ LOCK WASHER Replace.
- ㊾ ROLLER PIN
- ㊿ PARKING BRAKE LEVER
- ① PARKING BRAKE SPRING
- ② COTTER PIN Replace.
- ③ PARKING BRAKE ROLLER
- ④ PARKING BRAKE STOPPER
- ⑤ TRANSMISSION HOUSING
- ⑥ TRANSMISSION HOUSING GASKET Replace.
- ⑦ DOWEL PIN
- ⑧ ATF COLLER PIPES
- ⑨ JOINT BOLT
- ⑩ SEALING WASHERS Replace.
- ⑪ JOINT BOLT
- ⑫ SEALING WASHERS Replace.
- ⑬ SPEED SENSOR
- ⑭ O-RING Replace.
- ⑮ REVERSE IDLER GEAR SHAFT HOLDER
- ⑯ NEEDLE BEARING

TORQUE SPECIFICATIONS

Ref No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 × 1.0 mm	
B	14 N·m (1.4 kg-m, 10 lb-ft)	6 × 1.0 mm	
C	18 N·m (1.8 kg-m, 13 lb-ft)	8 × 1.25 mm	
D	55 N·m (5.5 kg-m, 40 lb-ft)	10 × 1.25 mm	
E	29 N·m (2.9 kg-m, 21 lb-ft)	12 × 1.25 mm	
G	50 N·m (5.0 kg-m, 36 lb-ft)	18 × 1.5 mm	Joint Bolt
H	230 → 0 → 170 N·m (23.0 → 0 → 17.0 kg-m, 166 → 0 → 123 lb-ft)	24 × 1.25 mm	Drain Plug Mainshaft Locknut
I	230 → 0 → 170 N·mm (23.0 → 0 → 17.0 kg-m, 166 → 0 → 123 lb-ft)	24 × 1.25 mm	Left-hand threads Secondary Shaft
J	230 → 0 → 170 N·mm (230 → 0 → 17.0 kg-m, 166 → 0 → 123 lb-ft)	24 × 1.25 mm	Locknut Countershaft
K	8 N·m (0.8 kg-m, 6 lb-ft)	5 × 0.8 mm	Locknut

Illustrated Index

Transmission Housing

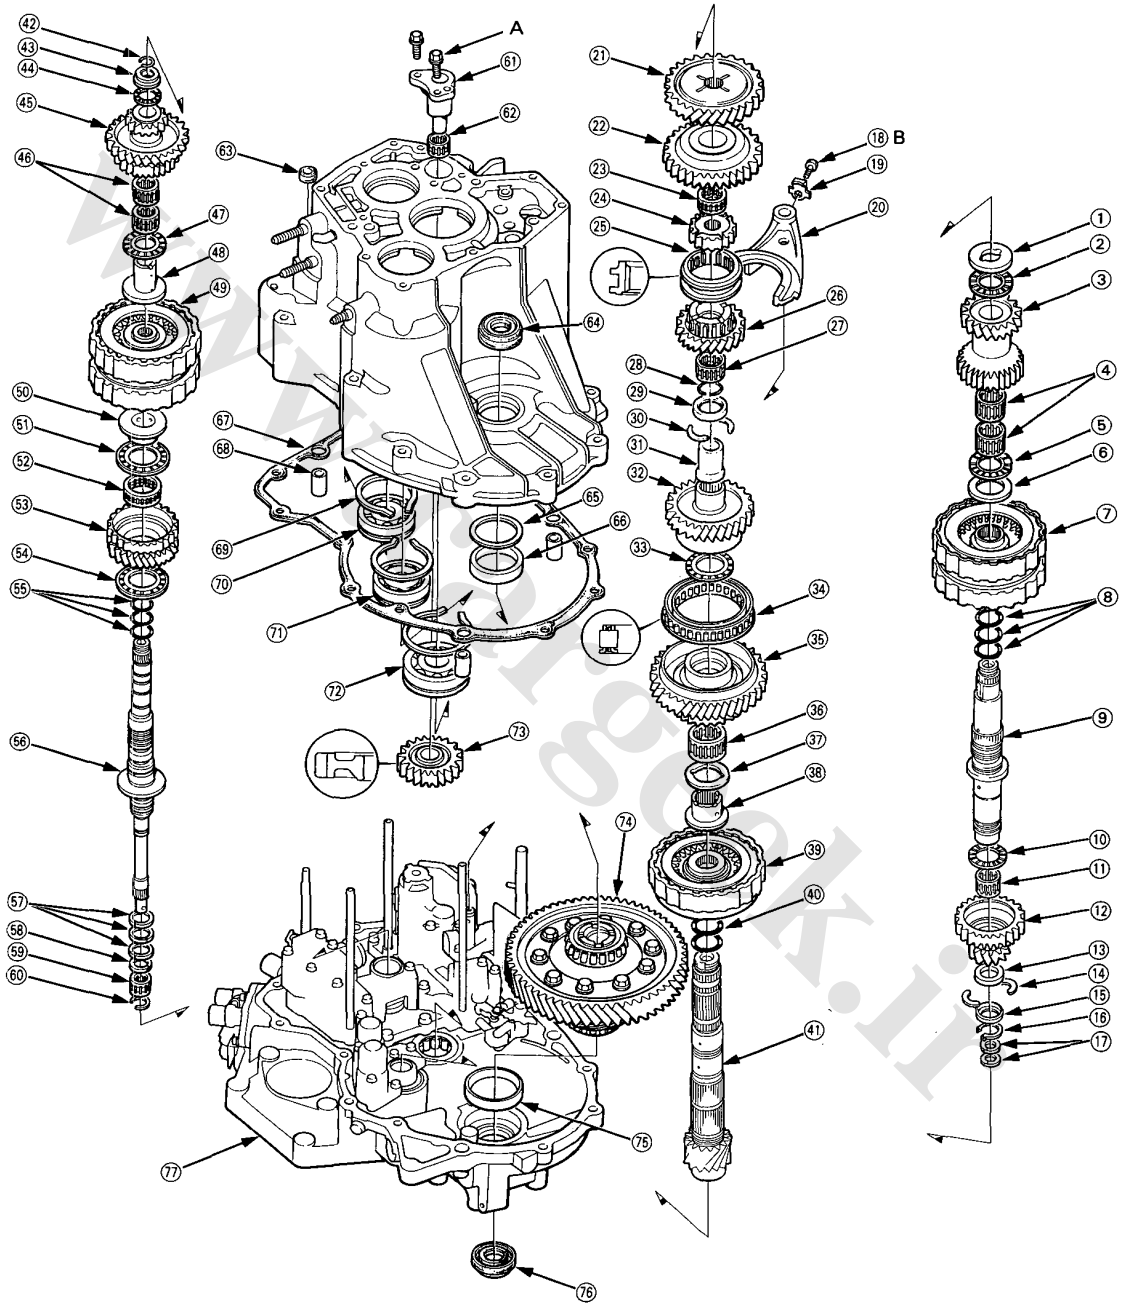




- ① THRUST WASHER
 ② THRUST NEEDLE BEARING
 ③ SECONDARY SHAFT 2ND GEAR
 ④ NEEDLE BEARING
 ⑤ THRUST NEEDLE BEARING
 ⑥ SPLINED WASHER Selective part
 ⑦ 1ST/2ND CLUTCH ASSEMBLY
 ⑧ O-RINGS Replace.
 ⑨ SECONDARY SHAFT
 ⑩ THRUST NEEDLE BEARING
 ⑪ NEEDLE BEARING
 ⑫ SECONDARY SHAFT 1ST GEAR
 ⑬ DISTANCE COLLAR, 5.0 mm
 ⑭ COTTERS, 29 mm
 ⑮ COTTER RETAINER
 ⑯ SNAP RING
 ⑰ SEALING RINGS, 32 mm
 ⑱ LOCK BOLT
 ⑲ LOCK WASHER Replace.
 ⑳ SHIFT FORK
 ㉑ COUNTERSHAFT 2ND GEAR
 ㉒ COUNTERSHAFT REVERSE GEAR
 ㉓ NEEDLE BEARING
 ㉔ REVERSE SELECTOR
 ㉕ REVERSE SELECTOR HUB
 ㉖ COUNTERSHAFT 4TH GEAR
 ㉗ NEEDLE BEARING
 ㉘ SNAP RING
 ㉙ COLLAR, 32 mm
 ㉚ COTTERS, 29 mm
 ㉛ DISTANCE COLLAR
 ㉜ COUNTERSHAFT 3RD GEAR
 ㉝ THRUST NEEDLE BEARING
 ㉞ ONE-WAY CLUTCH
 ㉟ COUNTERSHAFT 1ST GEAR
 ㊱ NEEDLE BEARING
 ㊲ THRUST WASHER
 ㊳ COUNTERSHAFT 3RD GEAR COLLAR
 ㊴ 1ST-HOLD CLUTCH ASSEMBLY
 ㊵ O-RINGS Replace.
 ㊶ COUNTERSHAFT
 ㊷ SNAP RING
 ㊸ COLLAR
 ㊹ THRUST NEEDLE BEARING
 ㊺ MAINSHAFT 4TH/REVERSE GEAR
 ㊻ NEEDLE BEARINGS
 ㊼ THRUST NEEDLE BEARING
 ㊽ 4TH GEAR COLLAR
 ㊾ 3RD/4TH CLUTCH ASSEMBLY
 ㊿ 3RD GEAR COLLAR
 ① THRUST NEEDLE BEARING
 ② NEEDLE BEARING
 ③ MAINSHAFT 3RD GEAR
 ④ THRUST NEEDLE BEARING
 ⑤ O-RINGS Replace.
 ⑥ MAINSHAFT
 ⑦ SEALING RINGS, 35 mm
 ⑧ SEALING RING, 29 mm
 ⑨ NEEDLE BEARING
 ⑩ SET RING
 ⑪ REVERSE IDLER GEAR SHAFT HOLDER
 ⑫ NEEDLE BEARING
 ⑬ OIL SEAL Replace.
 ⑭ TRANSMISSION HOUSING OIL SEAL Replace.
 ⑮ THRUST SHIM Selective part
 ⑯ BEARING OUTER RACE
 ⑰ TRANSMISSION HOUSING GASKET Replace.
 ⑱ DOWEL PIN
 ⑲ SNAP RING
 ㉑ TRANSMISSION HOUSING MAINSHAFT BEARING
 ㉒ TRANSMISSION HOUSING SECONDARY SHAFT BEARING
 ㉓ TRANSMISSION HOUSING COUNTERSHAFT BEARING
 ㉔ REVERSE IDLER GEAR
 ㉕ DIFFERENTIAL ASSEMBLY
 ㉖ BEARING OUTER RACE
 ㉗ TORQUE CONVERTER HOUSING OIL SEAL Replace.
 ㉘ TORQUE CONVERTER HOUSING

TORQUE SPECIFICATIONS

Ref No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 × 1.0 mm	
B	14 N·m (1.4 kg-m, 10 lb-ft)	6 × 1.0 mm	

Illustrated Index

Torque Converter Housing

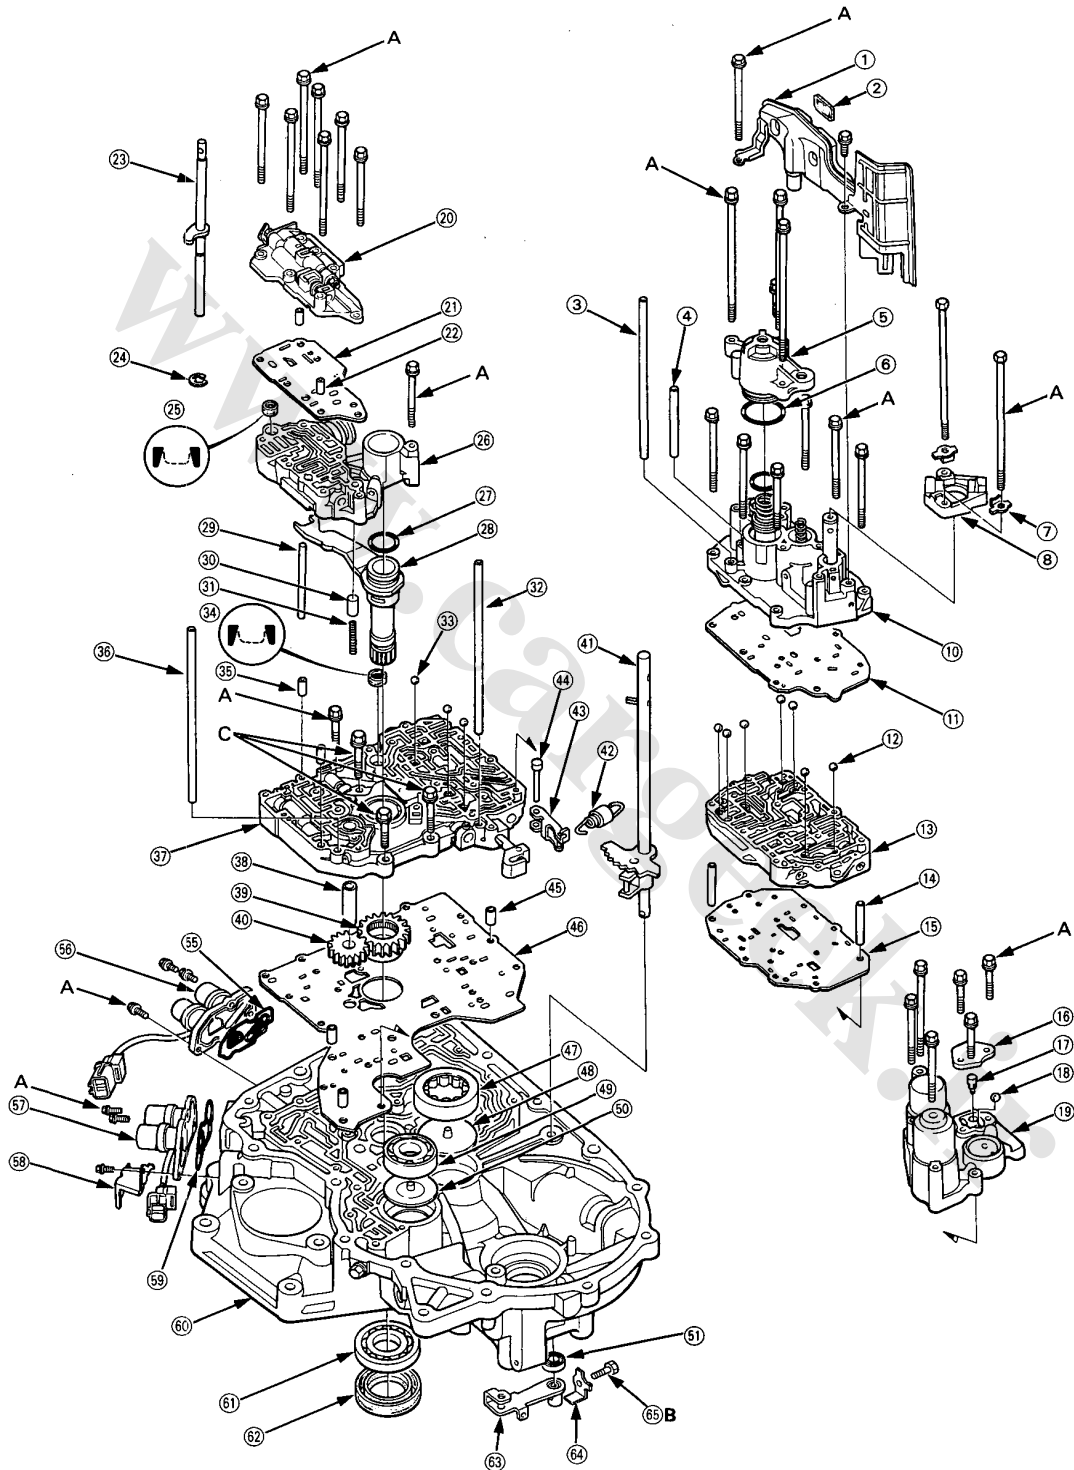



- | | |
|---------------------------------------|--|
| ① ATF STRAINER | ③② OIL FEED PIPE |
| ② MAGNET | ③③ CHECK BALL |
| ③ OIL FEED PIPE | ③④ FILTER Replace. |
| ④ OIL FEED PIPE | ③⑤ DOWEL PIN |
| ⑤ 4TH ACCUMULATOR COVER | ③⑥ OIL FEED PIPE |
| ⑥ O-RING Replace. | ③⑦ MAIN VALVE BODY |
| ⑦ LOCK WASHER Replace. | ③⑧ OIL PUMP DRIVEN GEAR SHAFT |
| ⑧ SERVO DETENT BASE | ③⑨ OIL PUMP DRIVE GEAR |
| ⑨ DOWEL PIN | ④① OIL PUMP DRIVEN GEAR |
| ⑩ SERVO BODY | ④② CONTROL SHAFT |
| ⑪ SERVO SEPARATOR PLATE | ④③ DETENT SPRING |
| ⑫ CHECK BALL | ④④ DETENT ARM |
| ⑬ SECONDARY VALVE BODY | ④⑤ DETENT ARM SHAFT |
| ⑭ DOWEL PIN | ④⑥ DOWEL PIN |
| ⑮ SECONDARY SEPARATOR PLATE | ④⑦ MAIN SEPARATOR PLATE |
| ⑯ ACCUMULATOR BODY COVER | ④⑧ COUNTERSHAFT NEEDLE BEARING |
| ⑰ 1ST ACCUMULATOR CHOKE | ④⑨ OIL GUIDE PLATE Replace. |
| ⑱ STEEL BALL | ④⑩ SECONDARY SHAFT BALL BEARING |
| ⑲ 1ST/2ND ACCUMULATOR BODY | ⑤① OIL GUIDE PLATE Replace. |
| ⑳ THROTTLE VALVE BODY | ⑤② OIL SEAL Replace. |
| ㉑ THROTTLE SEPARATOR PLATE | ⑤③ SHIFT CONTROL SOLENOID FILTER/GASKET Replace. |
| ㉒ DOWEL PIN | ⑤④ SHIFT CONTROL SOLENOID VALVE ASSEMBLY |
| ㉓ THROTTLE CONTROL SHAFT | ⑤⑤ LOCK-UP CONTROL SOLENOID VALVE ASSEMBLY |
| ㉔ E RING Replace. | ⑤⑥ CONECTOR HOLDER |
| ㉕ FILTER Replace. | ⑤⑦ LOCK-UP CONTROL SOLENOID FILTER/GASKET Replace. |
| ㉖ REGULATOR VALVE BODY | ⑤⑧ TORQUE CONVERTER HOUSING |
| ㉗ O-RING Replace. | ⑤⑨ MAINSHAFT BALL BEARING |
| ㉘ STATOR SHAFT | ⑤⑩ OIL SEAL Replace. |
| ㉙ STOPPER SHAFT | ⑤⑪ CONTROL LEVER |
| ⑳ TORQUE CONVERTE CHECK VALVE | ⑤⑫ LOCK WASHER Replace. |
| ㉑ TORQUE CONVERTER CHECK VALVE SPRING | ⑤⑬ LOCK BOLT |

TORQUE SPECIFICATIONS

Ref No.	Torque Value	Bolt Size	Remarks
A	12 N·m (1.2 kg-m, 9 lb-ft)	6 × 1.0 mm	
B	14 N·m (1.4 kg-m, 10 lb-ft)	6 × 1.0 mm	
C	18 N·m (1.8 kg-m, 13 lb-ft)	8 × 1.25 mm	

R. Side Cover

Removal

NOTE:



- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- When removing the transmission R. side cover, replace the following:
 - R. side cover gasket
 - Lock washers
 - Transmission housing gasket
 - O-rings
 - Each shaft locknut and conical spring washer
 - Sealing washers

1. Remove the 11 bolts securing the R. side cover, then remove the cover.

NOTE: It is not necessary to remove the R. side cover protector.

2. Slip the special tool onto the mainshaft.

MAINSHAFT HOLDER
07GAB-PF50101 or
07GAB-PF50100

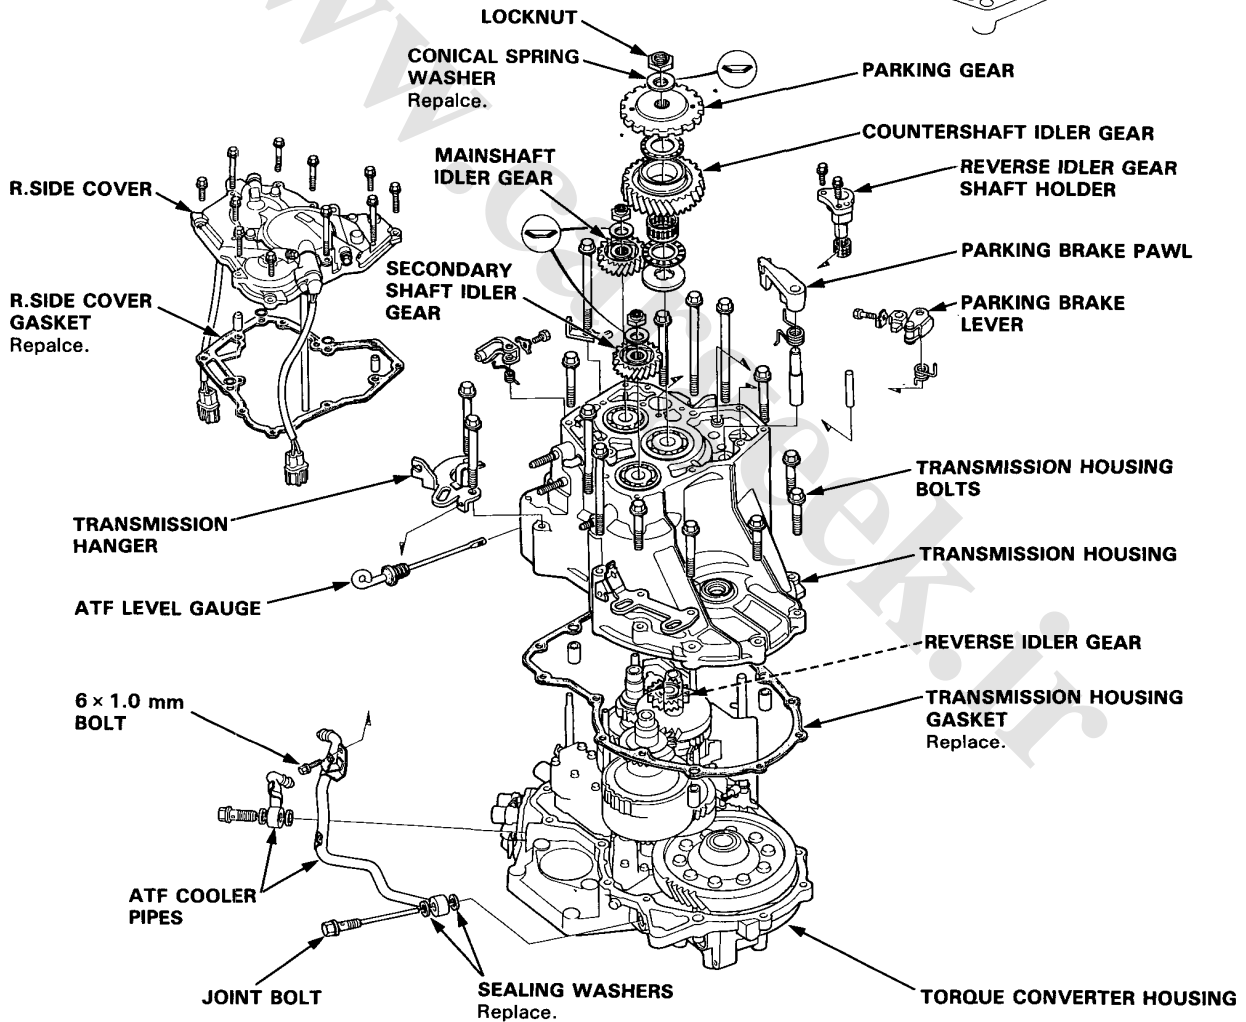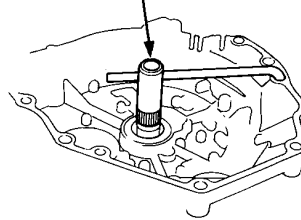




3. Engage the parking brake pawl with the parking gear.
4. Cut the lock tabs of each shaft locknut using a chisel as shown. Then remove the locknuts and conical spring washers from each shaft.


NOTE:

- Mainshaft locknut has left-hand threads.
- Clean the old locknuts, they are used when installing to press the idler gears on the mainshaft and secondary shaft and the parking gear on the countershaft.

CAUTION: Keep all of the chiseled particles out of the transmission.

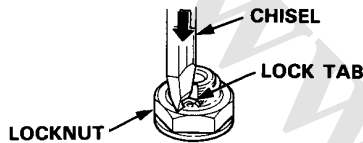

5. Remove the special tool from the mainshaft after removing the locknuts.
6. Remove the parking gear using a puller from the countershaft as shown. Then remove the idler gears using a puller from the mainshaft and secondary shaft.

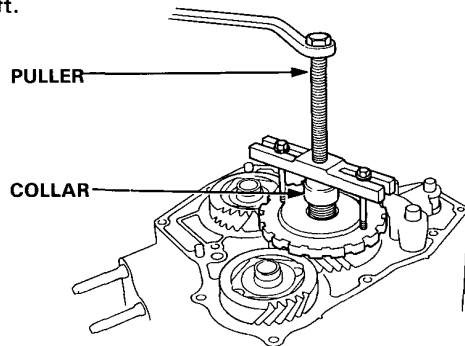


7. Remove the countershaft idler gear, needle bearing, thrust needle bearing, and thrust washer from the countershaft.
8. Remove the parking brake pawl, spring, shaft, and stopper from the housing.
9. Remove the throttle control lever and spring from the throttle control shaft.
10. Remove the ATF cooler pipe mounting bolt from the transmission hanger.
11. Remove the transmission housing mounting bolts.

12. Remove the reverse idler gear shaft assembly.

NOTE: The steel ball will not pop out because it is staked in the shaft.

13. Move the reverse idler gear to disengage it from the countershaft reverse gear as shown.


NOTE: The transmission housing will not separate from the torque converter housing if the reverse idler gear is not removed.

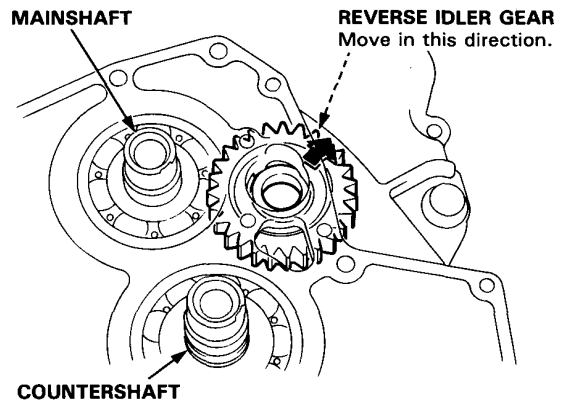

14. Align the spring pin with the transmission housing groove by turning the control shaft.


15. Install the special tool on the transmission housing, then remove the housing as shown.


**HOUSING PULLER
07HAC-PK40101**

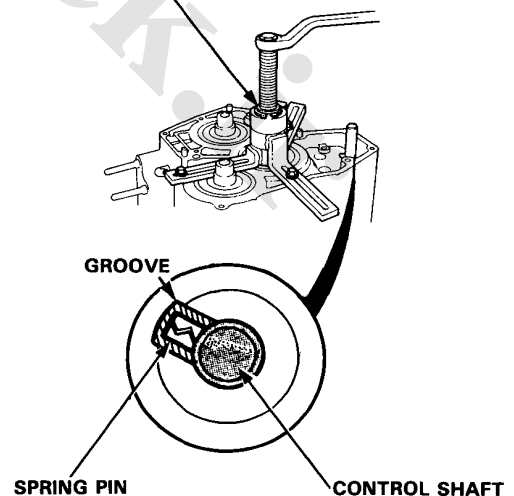

Transmission Housing

Removal

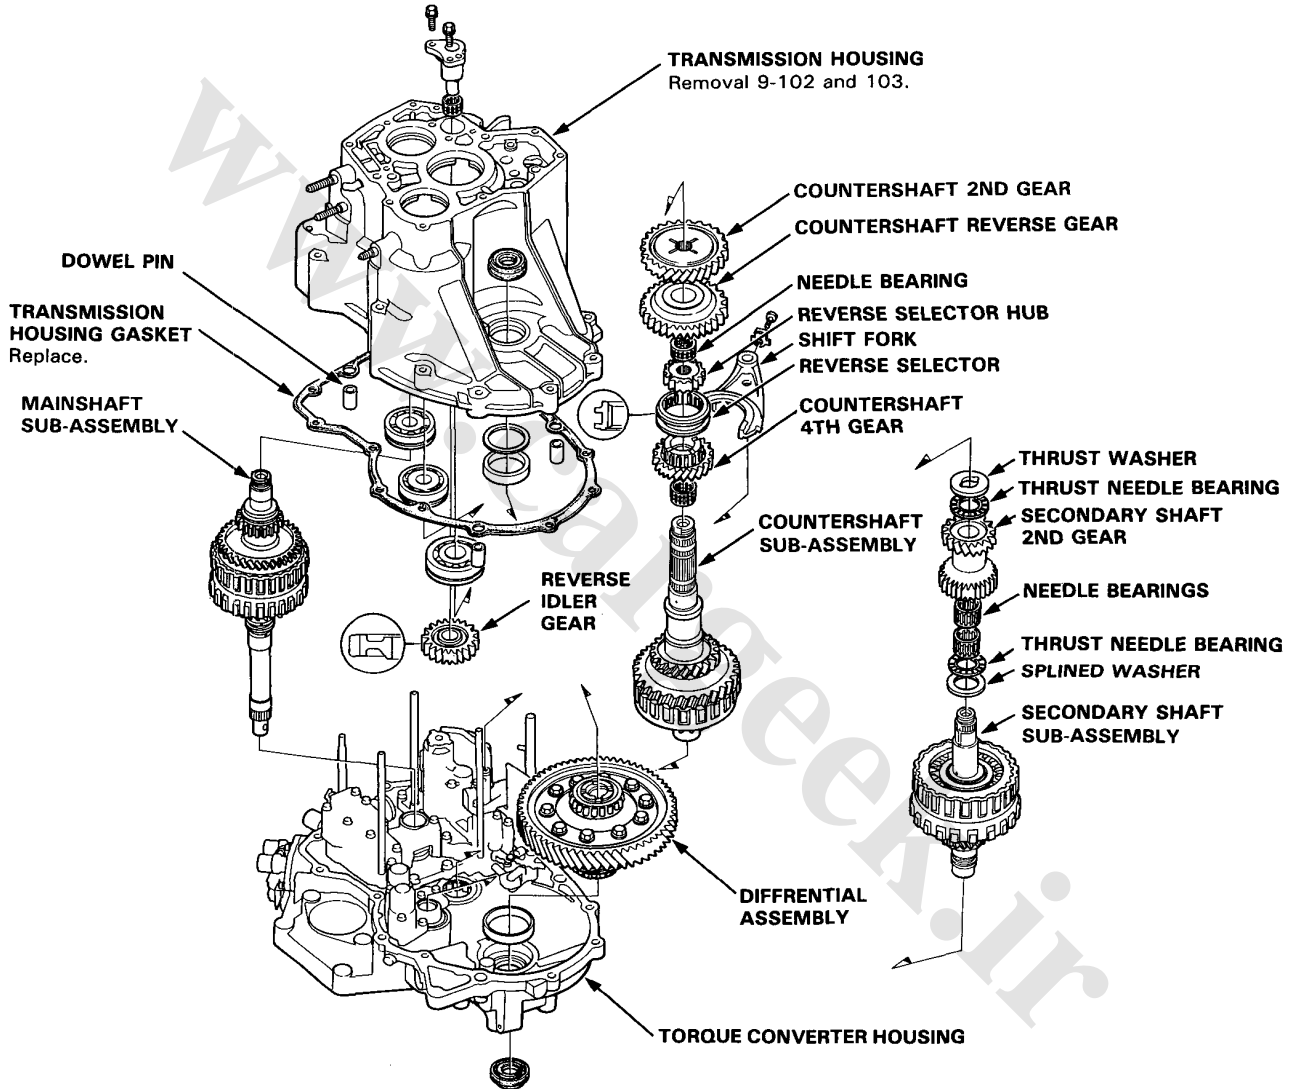




NOTE:


- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- When removing the transmission housing, replace the following:
 - Transmission housing gasket
 - Lock washer

1. Remove the transmission housing (9-102 and 103).
2. Remove the reverse idler gear from the transmission housing.
3. Remove the countershaft 2nd gear, reverse gear, secondary shaft 2nd gear, thrust washer, and thrust needle bearing together from the countershaft and secondary shaft.
4. Remove the lock bolt securing the shift fork, then remove the fork with the reverse selector from the countershaft.
5. Remove the needle bearings, thrust needle bearing, and splined washer from the secondary shaft.
6. Remove the secondary shaft sub-assembly.
7. Remove the mainshaft sub-assembly.
8. Remove the countershaft sub-assembly.
9. Remove the differential assembly.

Torque Converter Housing/Valve Body

Removal

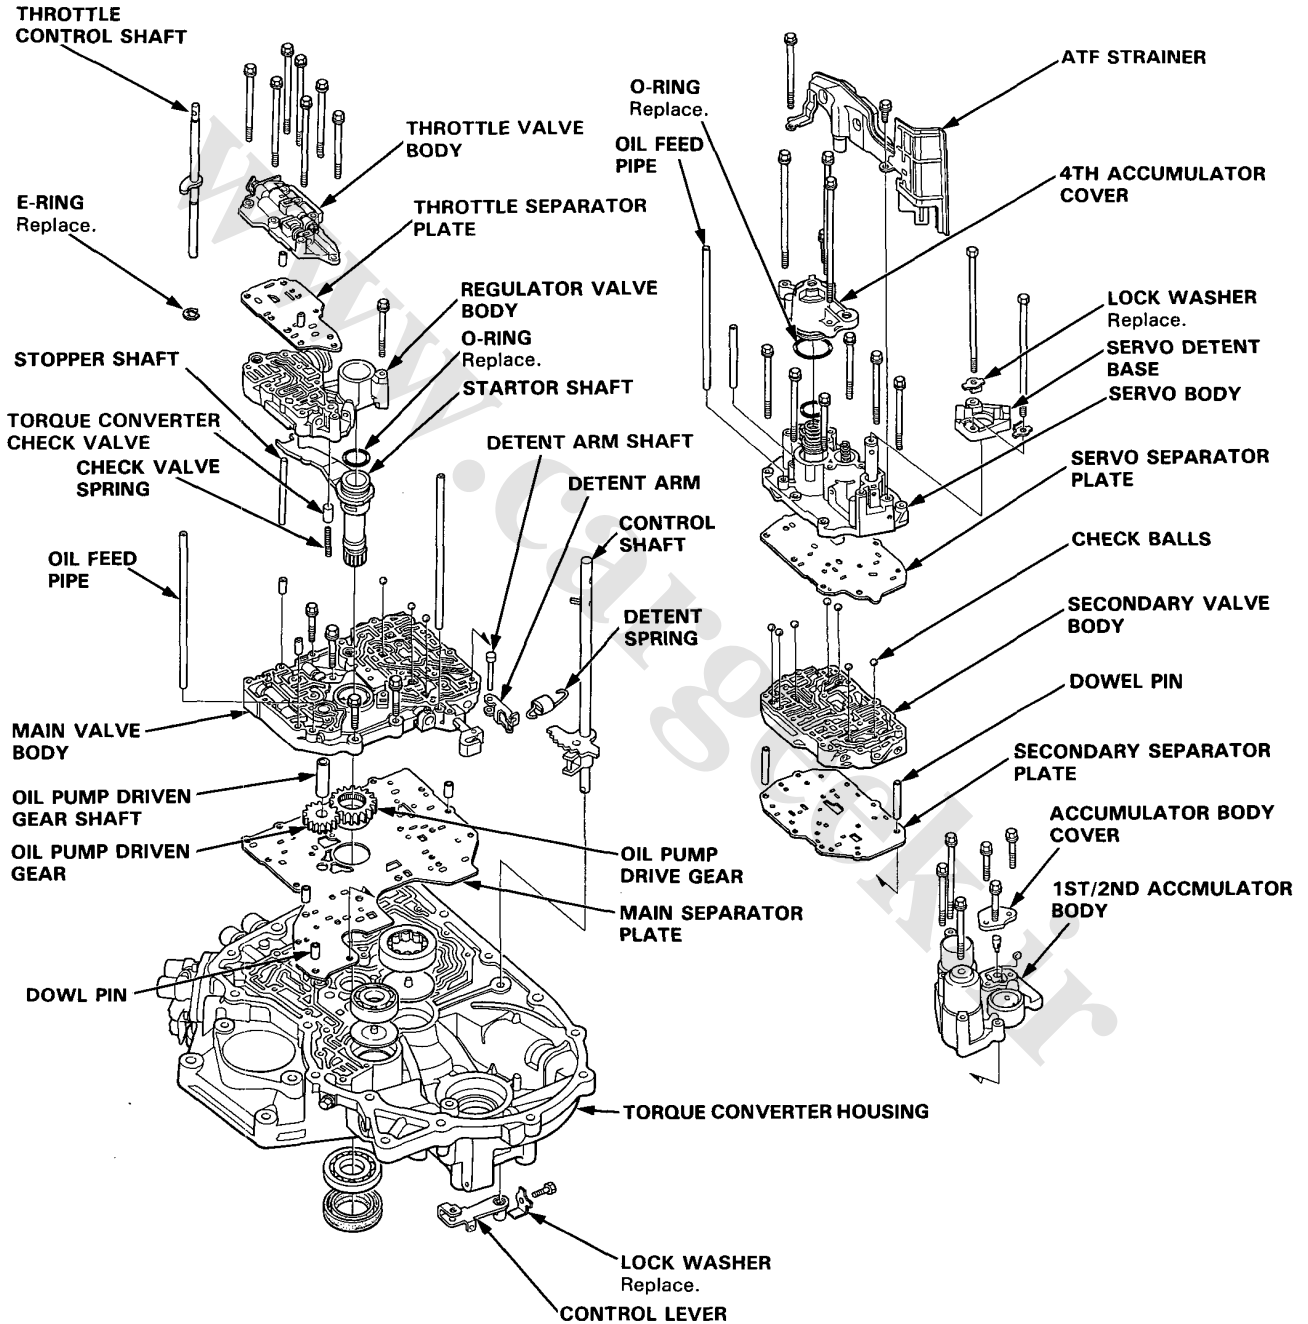

**NOTE:**

- Clean all parts thoroughly in solvent or carburetor cleaner and dry with compressed air.
- Blow out all passages.
- When removing the valve body replace the following:
 - O-rings
 - Lock washers

1. Remove the lock bolt securing the control lever, remove the control lever.
2. Remove the 2 bolts securing the servo detent base, then remove the servo detent base.
3. Remove the 2 bolts securing the ATF strainer, then remove the ATF strainer.
4. Remove the oil feed pipes from the servo body and main valve body.
5. Remove the 3 bolts securing the 4th accumulator cover, then remove the 4th accumulator cover.

NOTE: The 4th accumulator cover is spring loaded, to prevent stripping the threads in the servo body, press down on the accumulator cover while unscrewing the bolts in a criss-cross pattern.

6. Remove the 7 bolts securing the servo body, then remove the servo body and separator plate.
7. Remove the secondary valve body and separator plate.
8. Remove the 7 bolts securing the throttle valve body, then remove the throttle valve body and separator plate.
9. Remove the 1 bolt securing the regulator valve body, then remove the regulator valve body.

10. Remove the stator shaft and stopper shaft.
11. Remove the detent spring from the detent arm, then remove the control shaft from the torque converter housing.
12. Remove the detent arm and detent arm shaft from the main valve body.
13. Remove the 4 bolts securing the main valve body, then remove the main valve body.
14. Remove the 6 bolts securing the 1st/2nd accumulator body, then remove the 1st/2nd accumulator body.
15. Remove the oil pump driven gear shaft, then remove the oil pump gears.
16. Remove the main separator plate with 3 dowel pins.


Main Valve Body


Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow all passages.
- Replace valve body as an assembly if any parts are worn or damaged.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair.

CAUTION: Do not use a magnet to remove the check balls; it may magnetize the balls.

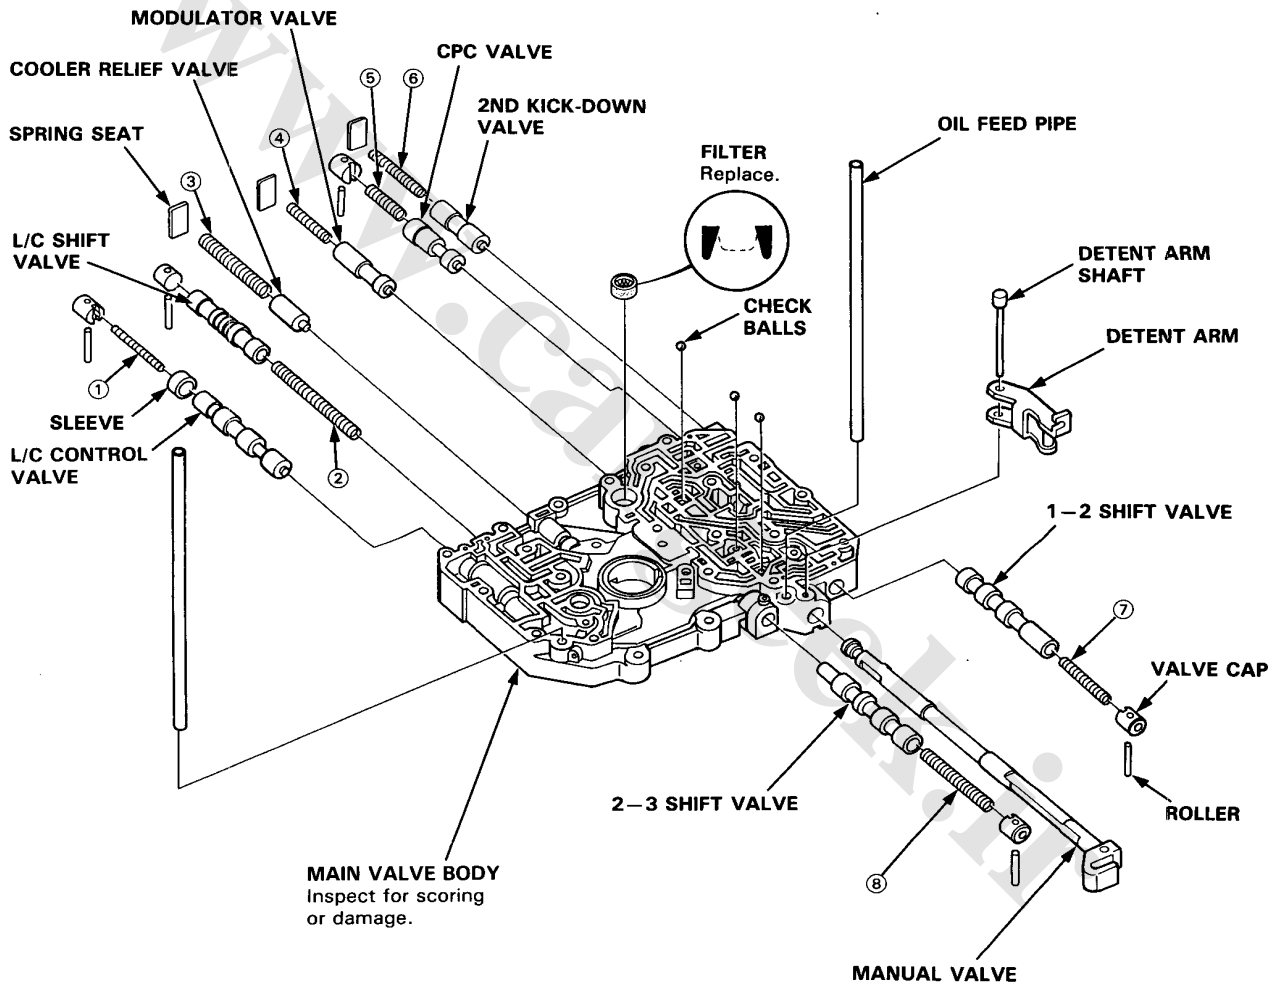

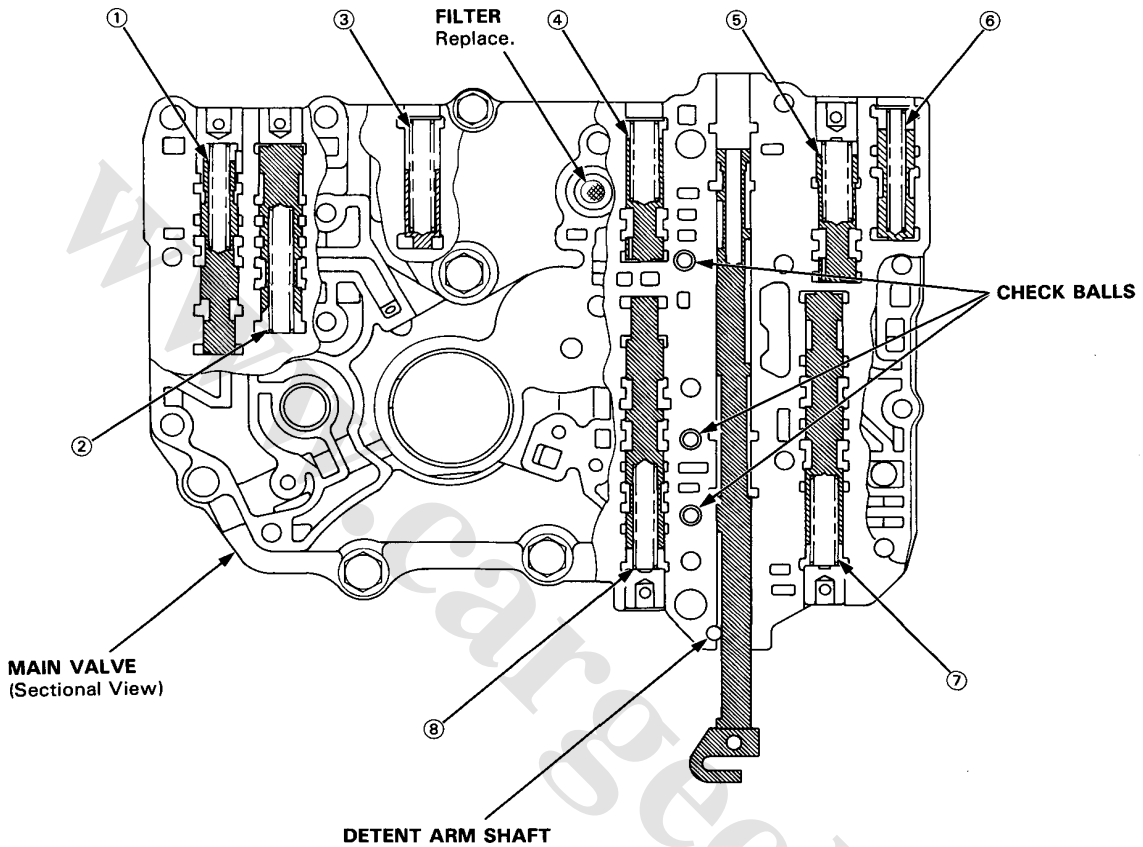

SPRING SPECIFICATIONS

Unit of length: mm (in)

No.	SPRINGS	STANDARD (NEW)			
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS
①	Lock-up control valve spring	0.7 (0.028)	6.6 (0.260)	38.0 (1.496)	14.1
②	Lock-up shift valve spring	0.9 (0.035)	7.6 (0.299)	73.7 (2.902)	32.0
③	Cooler relief valve spring	1.1 (0.043)	8.4 (0.331)	46.8 (1.843)	17.0
④	Modulator valve spring	1.4 (0.055)	9.4 (0.370)	33.0 (1.299)	10.5
⑤	CPC valve spring	1.4 (0.055)	9.4 (0.370)	33.0 (1.299)	10.5
⑥	2nd kick-down valve spring	1.2 (0.047)	7.1 (0.280)	46.9 (1.846)	20.6
⑦	1-2 shift valve spring	1.0 (0.039)	8.6 (0.339)	41.3 (1.626)	16.9
⑧	2-3 shift valve spring	0.9 (0.035)	7.6 (0.299)	57.0 (2.244)	26.8


Secondary Valve Body


Disassembly/Inspection/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air. Blow out all passages.
- Check all valves for free movement. If any fail to slide freely, see Valve Body Repair.
- Coat all parts with ATF before assembling.
- Replace the valve body as an assembly if any parts are worn or damaged.

CAUTION: Do not use a magnet to remove the check balls; it may magnetize the balls.

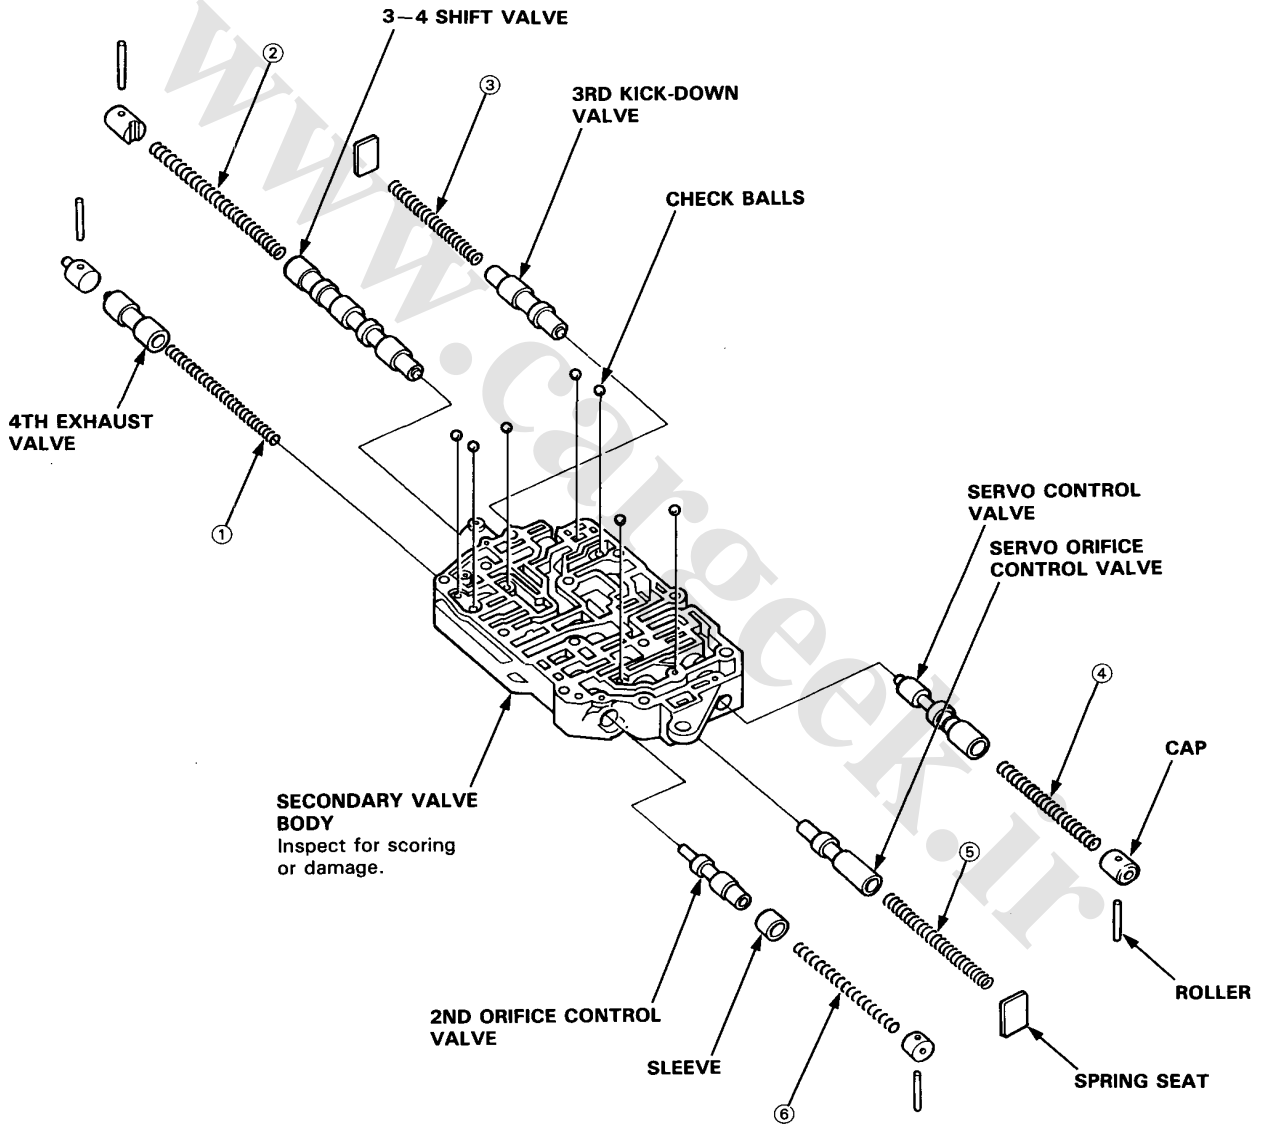

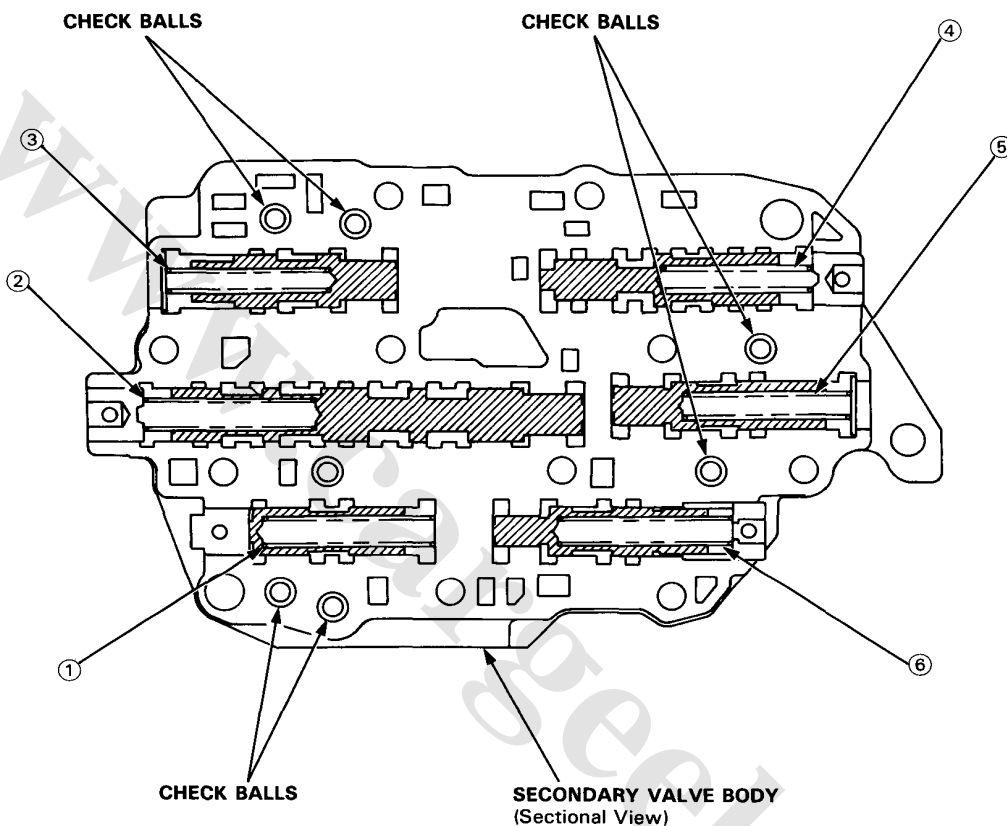

SPRING SPECIFICATIONS

Unit of length: mm (in)


No.	SPRINGS	STANDARD (NEW)			
		WIRE DIA.	O.D.	FREE LENGTH	No. of COILS
①	4th exhaust valve spring	0.9 (0.035)	7.1 (0.280)	60.8 (2.394)	28.9
②	3-4 shift valve spring	0.9 (0.035)	7.6 (0.299)	57.0 (2.244)	26.8
③	3rd kick-down valve spring	1.1 (0.043)	7.6 (0.299)	48.3 (1.902)	23.3
④	Servo control valve spring	1.0 (0.039)	8.1 (0.319)	52.6 (2.071)	22.4
⑤	Servo orifice control valve spring	0.8 (0.031)	6.6 (0.260)	52.5 (2.067)	33.0
⑥	2nd orifice control valve spring	0.6 (0.024)	6.6 (0.260)	55.8 (2.200)	15.8


Mainshaft

Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Install thrust needle bearings with unrolled edge of bearing retainer facing washer.
- Inspect thrust needle and needle bearings for galling and rough movement.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damage to the O-rings.

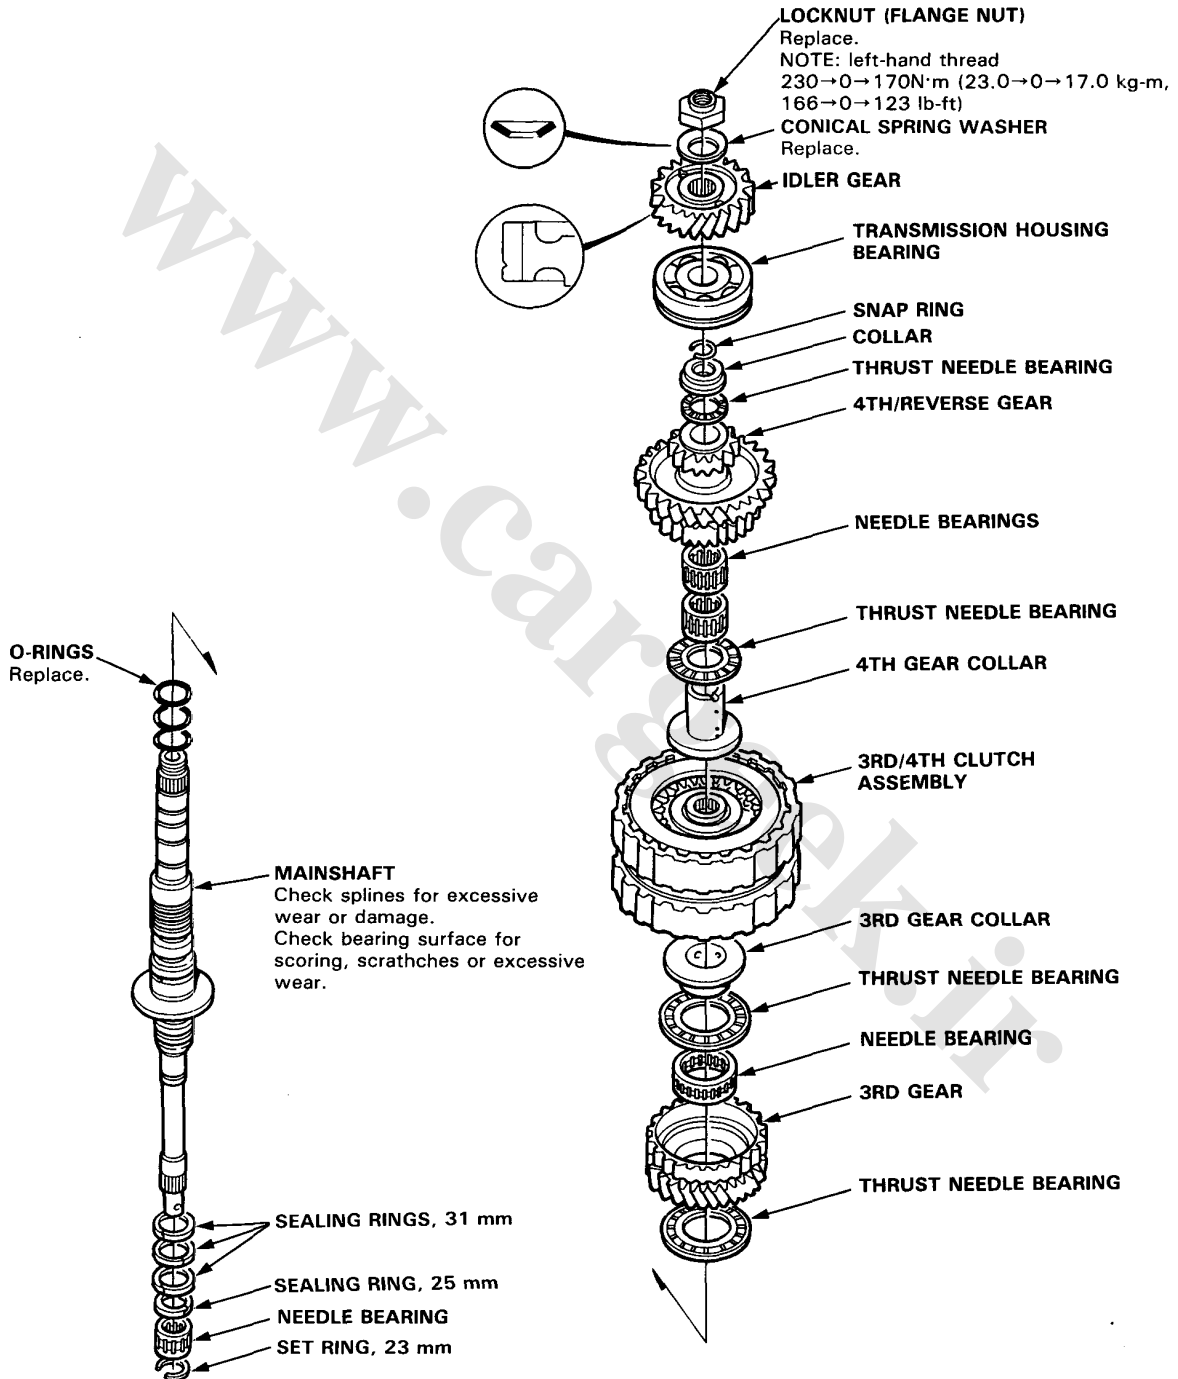




Countershaft

Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Install thrust needle bearings with unrolled edge of bearing retainer facing washer.
- Inspect thrust needle and needle bearings for galling and rough movement.
- Before installing the O-rings, wrap the shaft splines with tape to prevent damage to the O-rings.

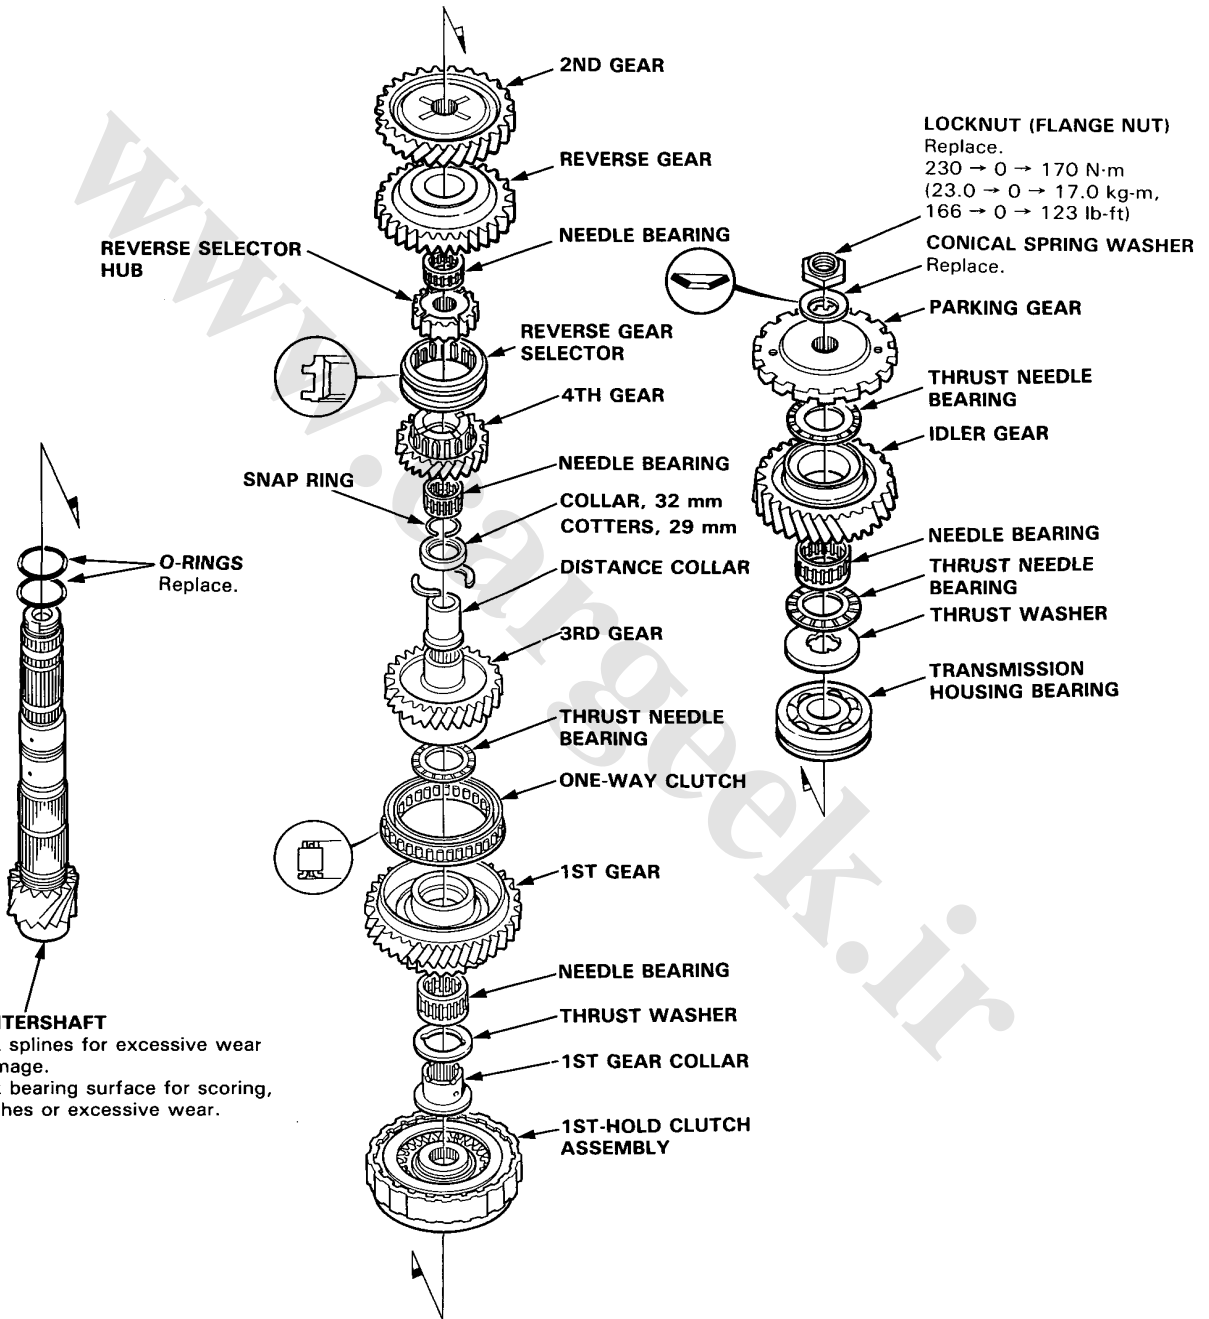


Secondary Shaft

Disassembly/Inspection/Reassembly

NOTE:

- Lubricate all parts with ATF during reassembly.
- Install thrust needle bearings with unrolled edge of bearing retainer facing washer.
- Inspect thrust needle and needle bearings for galling and rough movement.
- Before installing the O-ring, wrap the shaft splines with tape to prevent damage to the O-rings.

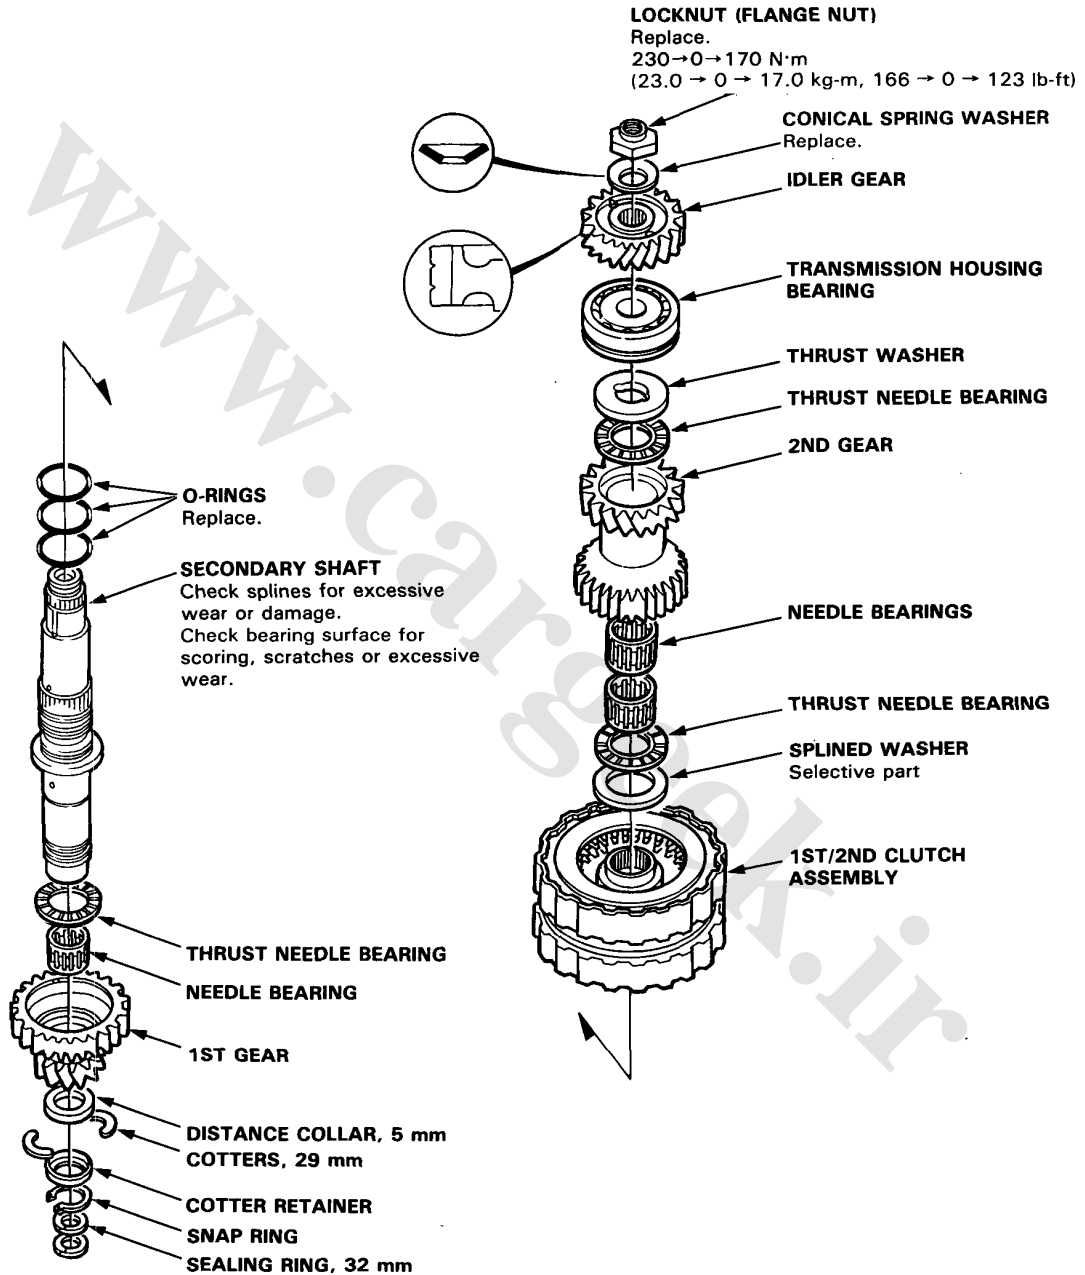




Inspection

- Clearance Measurement


NOTE: Lubricate all parts with ATF during assembly.

1. Remove the secondary shaft bearing from the transmission housing (see page 9-116).
2. Assemble the secondary shaft assembly without O-rings, then torque the secondary shaft locknut to 30 N·m (3.0 kg·m, 22 lb·ft).

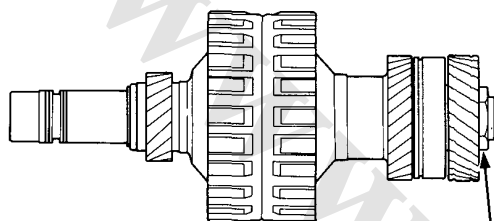

LOCKNUT
30 N·m
(3.0 kg·m
22 lb·ft)


3. Attach the dial indicator to the secondary shaft 2nd gear as shown.

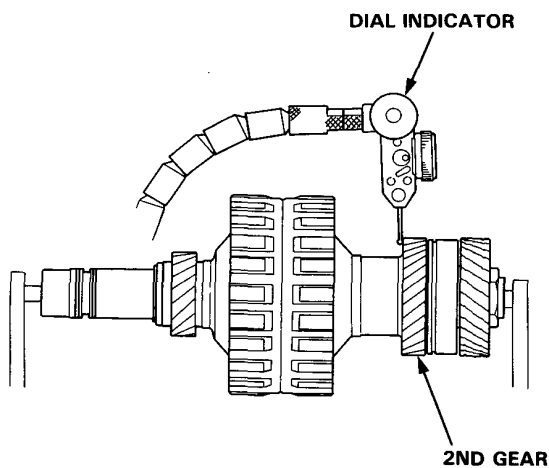

4. Measure the 2nd gear axial clearance moving the 2nd gear.

STANDARD: 0.07–0.15 mm (0.003–0.006 in)

NOTE: Take measurement in at least three places and take average as the actual clearance.

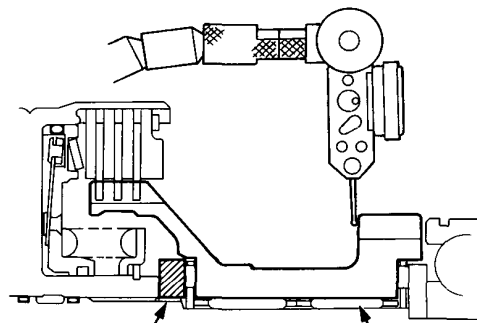

SPLINED WASHER

2ND GEAR

5. If the clearance is out of tolerance, remove the splined washer and measure the thickness.

SPLINED WASHER

No	Part Number	Thickness
1	90406-PX4-700	4.05 mm (0.159 in)
2	90407-PX4-700	4.10 mm (0.161 in)
3	90408-PX4-700	4.15 mm (0.163 in)
4	90409-PX4-700	4.20 mm (0.165 in)
5	90410-PX4-700	4.25 mm (0.167 in)
6	90411-PX4-700	4.30 mm (0.169 in)
7	90412-PX4-700	4.35 mm (0.171 in)
8	90413-PX4-700	4.40 mm (0.173 in)
9	90414-PX4-700	4.45 mm (0.175 in)

6. After replacing the splined washer, make sure that the clearance is within tolerance.


Transmission Housing Bearings

Removal/Installation


NOTE: Lubricate all parts with ATF before assembly.

1. To remove the mainshaft, countershaft and secondary shaft bearings from the transmission housing, expand each snap ring with snap ring pliers, then push the bearing out using the special tool and a press as shown.


NOTE: Do not remove the snap rings unless it's necessary to clean the grooves in the housing.

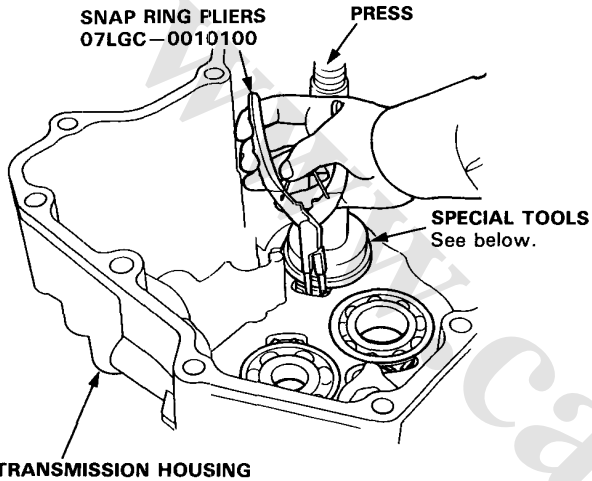

● Mainshaft and Secondary Shaft Bearings

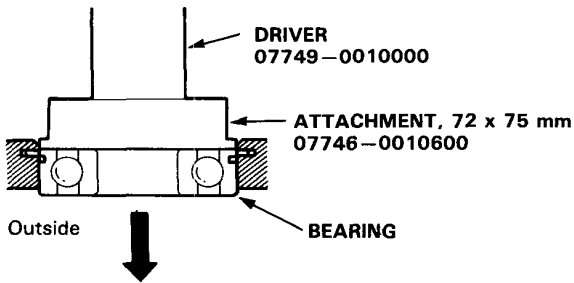


● Countershaft Bearing

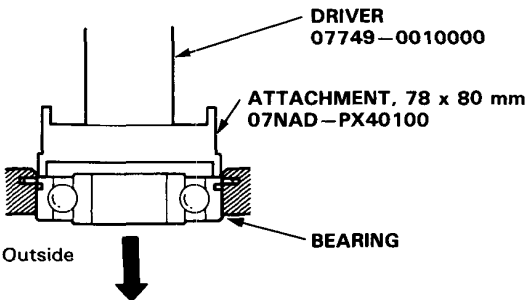


2. Expand each snap ring with snap ring pliers, insert the new bearing part-way into the housing using the special tool and a press as shown. Install with groove side of the bearing facing inside the housing.
3. Release the pliers, then push the bearing down into the housing until the snap ring snaps in place around it.

● Mainshaft and Secondary Shaft Bearing

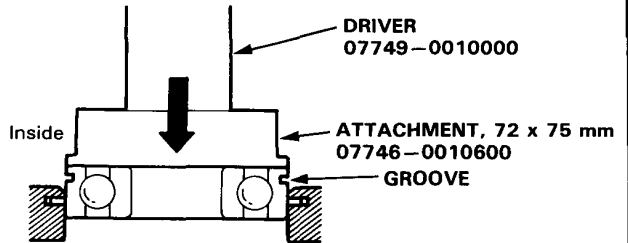


● Countershaft Bearings

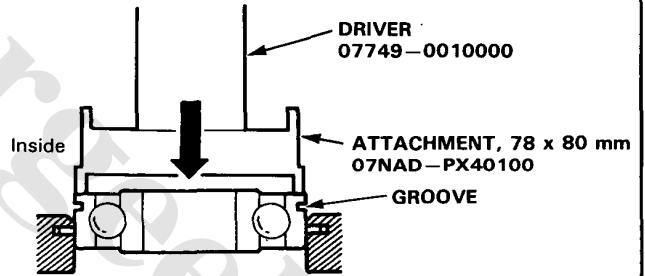

4. After installing the ball bearings, verify the following:

- The snap ring is seated in the bearing and housing grooves.
- The snap ring operates freely.
- The ring end gap is correct.

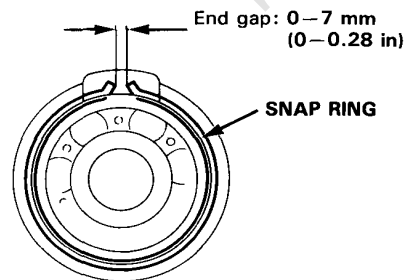


Transmission/Valve Body

Reassembly

NOTE:

- Coat all parts with ATF.
- Replace these parts:
 - O-rings
 - Lock washers
 - Gaskets
 - Locknuts and conical spring washer
 - Sealing washer
- Torque the 6 x 1.0 mm Bolts: 12 N·m (1.2 kg·m, 9 lb·ft)

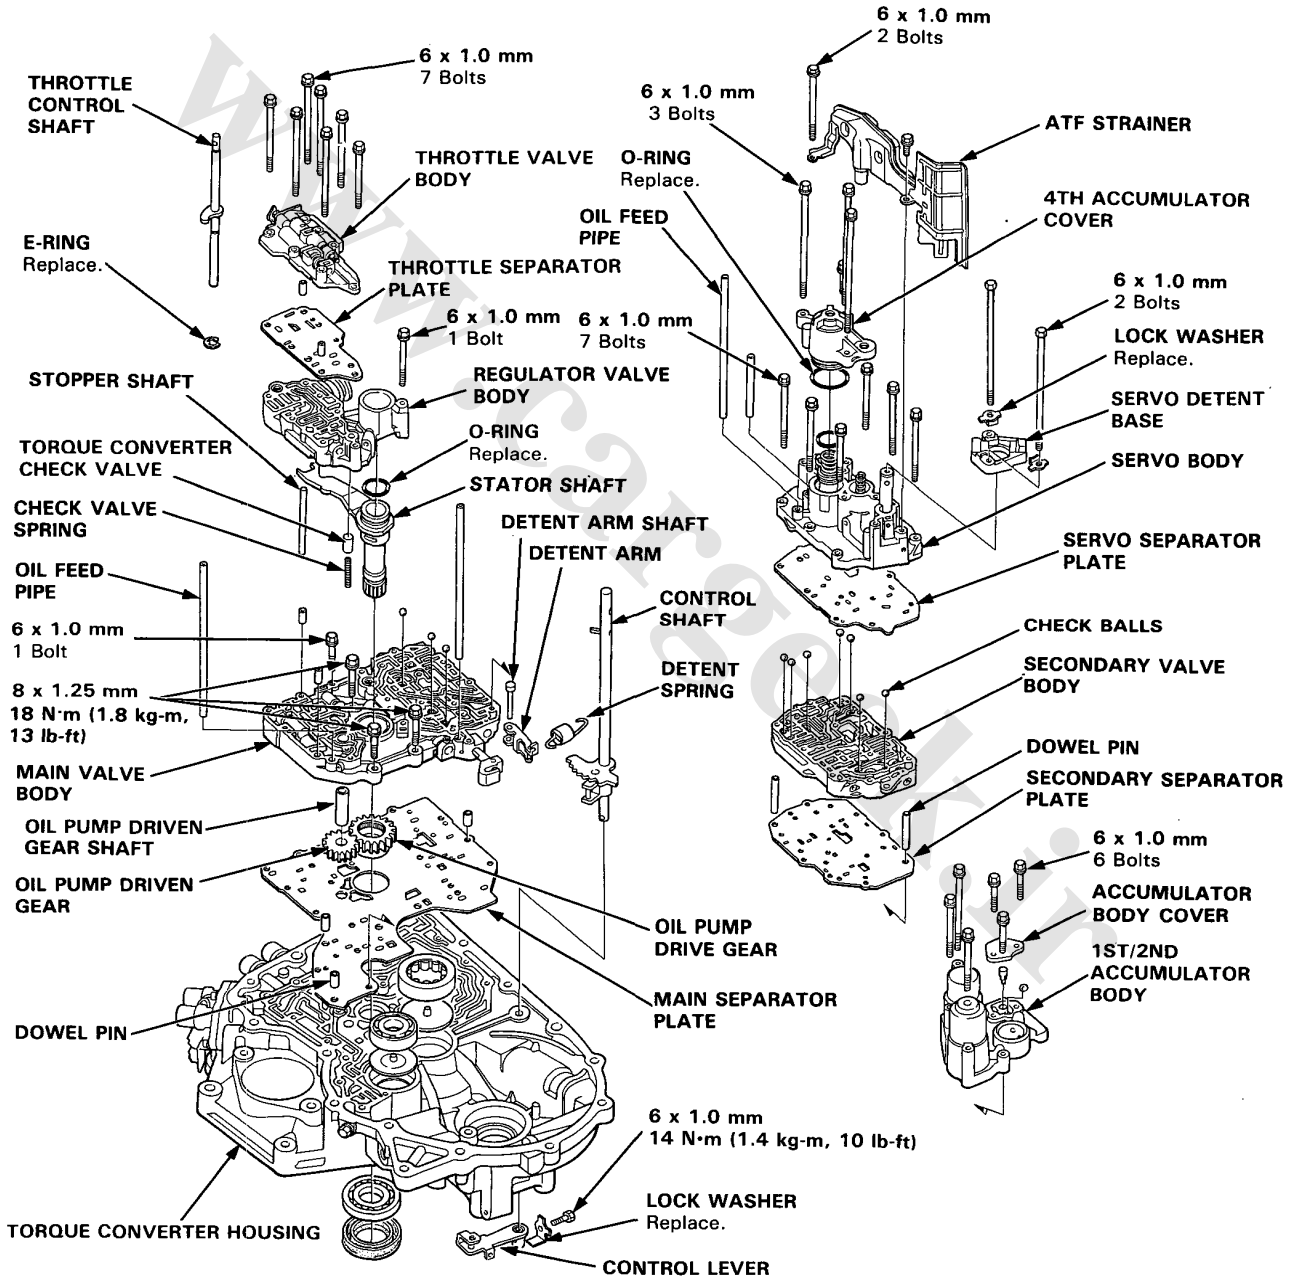

Torque Specification

www.cargeek.ir


Front Suspension

Torque Specifications

CAUTION:

- Replace the self-locking nuts after removal.
- Replace the self-locking bolts if you can easily thread a non-self-locking nut past their nylon locking inserts.
(If should require 1 N·m (0.1 kg-m, 0.7 lb-ft) of torque to turn the test nut on the bolt).
The vehicle should be on the ground before any bolts or nuts connected to rubber mounts or bushings are tightened.

NOTE: Wipe off the grease before tightening the nut at the ball joint.

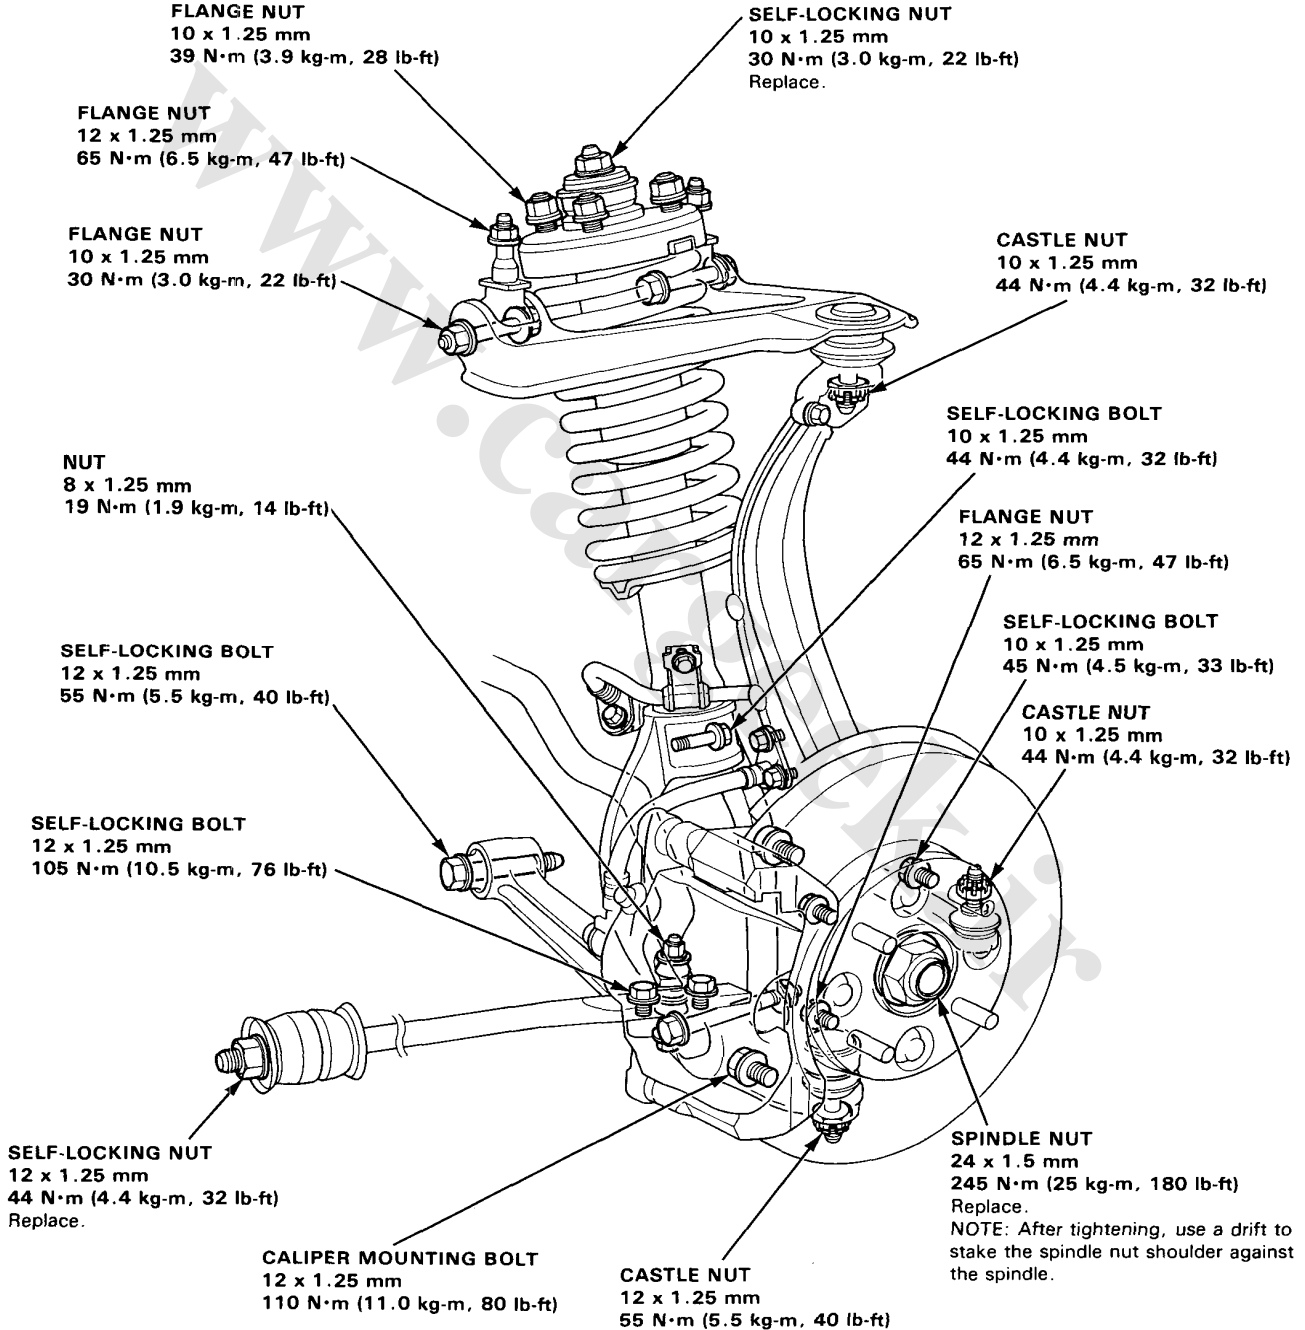

Special Tools

Pedal Height (LHD only)

Adjustment

Circuit Diagram

Wiring/Connector Location

ALB Checker

Function Test

Wheel Sensor Signal Confirmation

Troubleshooting

Anti - lock Brake System

Indicator Light

Symptom - to System Chart

Flowcharts

Mater Cylinder, Booster (LHD only)

Removal/Installation

Hydraulic System

Index/Hydraulic Connections

Relieving Accumulator/

Line Pressure

Modulator Unit

Index/Torque

Solenoids

Leak Test

Piston

Replacement

Power Unit

Index/Torque



Accumulator Disposal

Bleeding

Air Bleeding with ALB Checker

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Page Reference
①	07HAA-SG00100 or 07HAA-SG00101	Bleeder-T Wrench	1	13-13, 13-20, 13-34, 13-41
②	07HAJ-SG00602 or 07HAJ-SG00601 or 07508-SB00000 and 07HAJ-SG00400	ALB Checker Adaptor	1 1	13-7, 13-9, 13-41

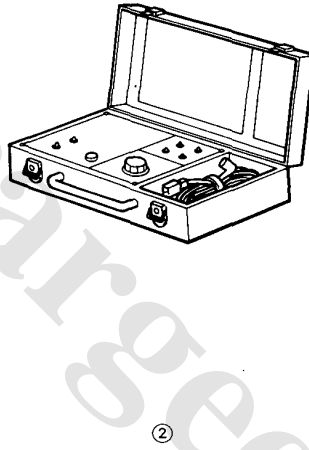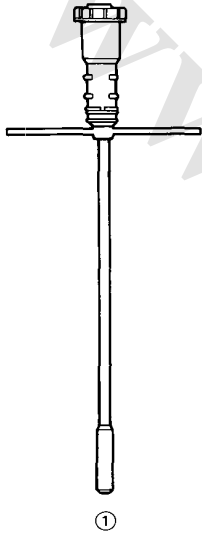


Pedal Height (LHD only)

Adjustment

1. Disconnect the brake light switch connector, loosen the brake light switch locknut and back off the brake light switch until it is no longer touching the brake pedal.
2. Turn up the floor mat and measure the pedal height from the left side center of the pedal surface to the floor, at right angles with the pedal surface as shown.

NOTE: On cars with SRS, the cutout is made to achieve the measurement to the floor.

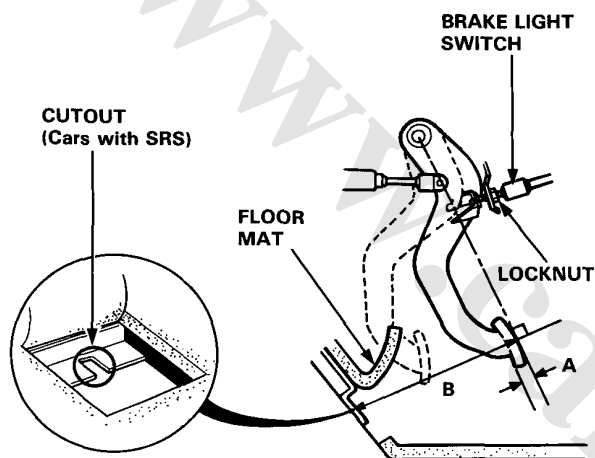

A: Pedal Play


1–5 mm (0.04–0.20 in)

B: Pedal Height

Manual Transmission: 165 ± 0.5 mm
(6.5 \pm 0.02 in)

Automatic Transmission: 170 ± 0.5 mm
(6.7 \pm 0.02 in)


3. Loosen the pushrod locknut and screw the pushrod in or out with pliers until the pedal height from the floor is properly adjusted. After adjustment, tighten the locknut.

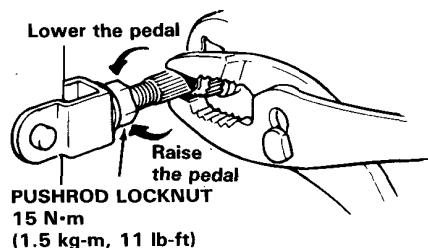

PUSHROD LOCKNUT
15 N·m
(1.5 kg·m, 11 lb·ft)


4. Screw in the brake light switch until its plunger is fully depressed (threaded end touching pad on the pedal arm). Then back off the switch so that the clearance between the threaded end and pad is 0.3–1.0 mm (0.012–0.039 in), and tighten the locknut.
Connect the brake light switch connector.


CAUTION: Check that the brake lights go off when the pedal is released.

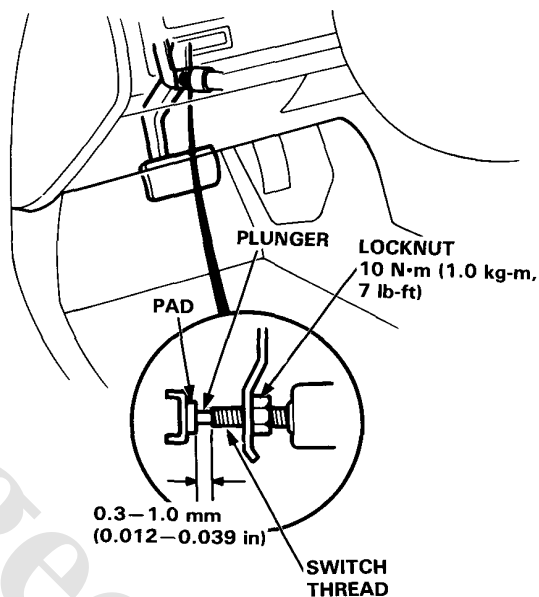


NOTE: After adjusting the pedal height check for cruise control operation.

Circuit Diagram

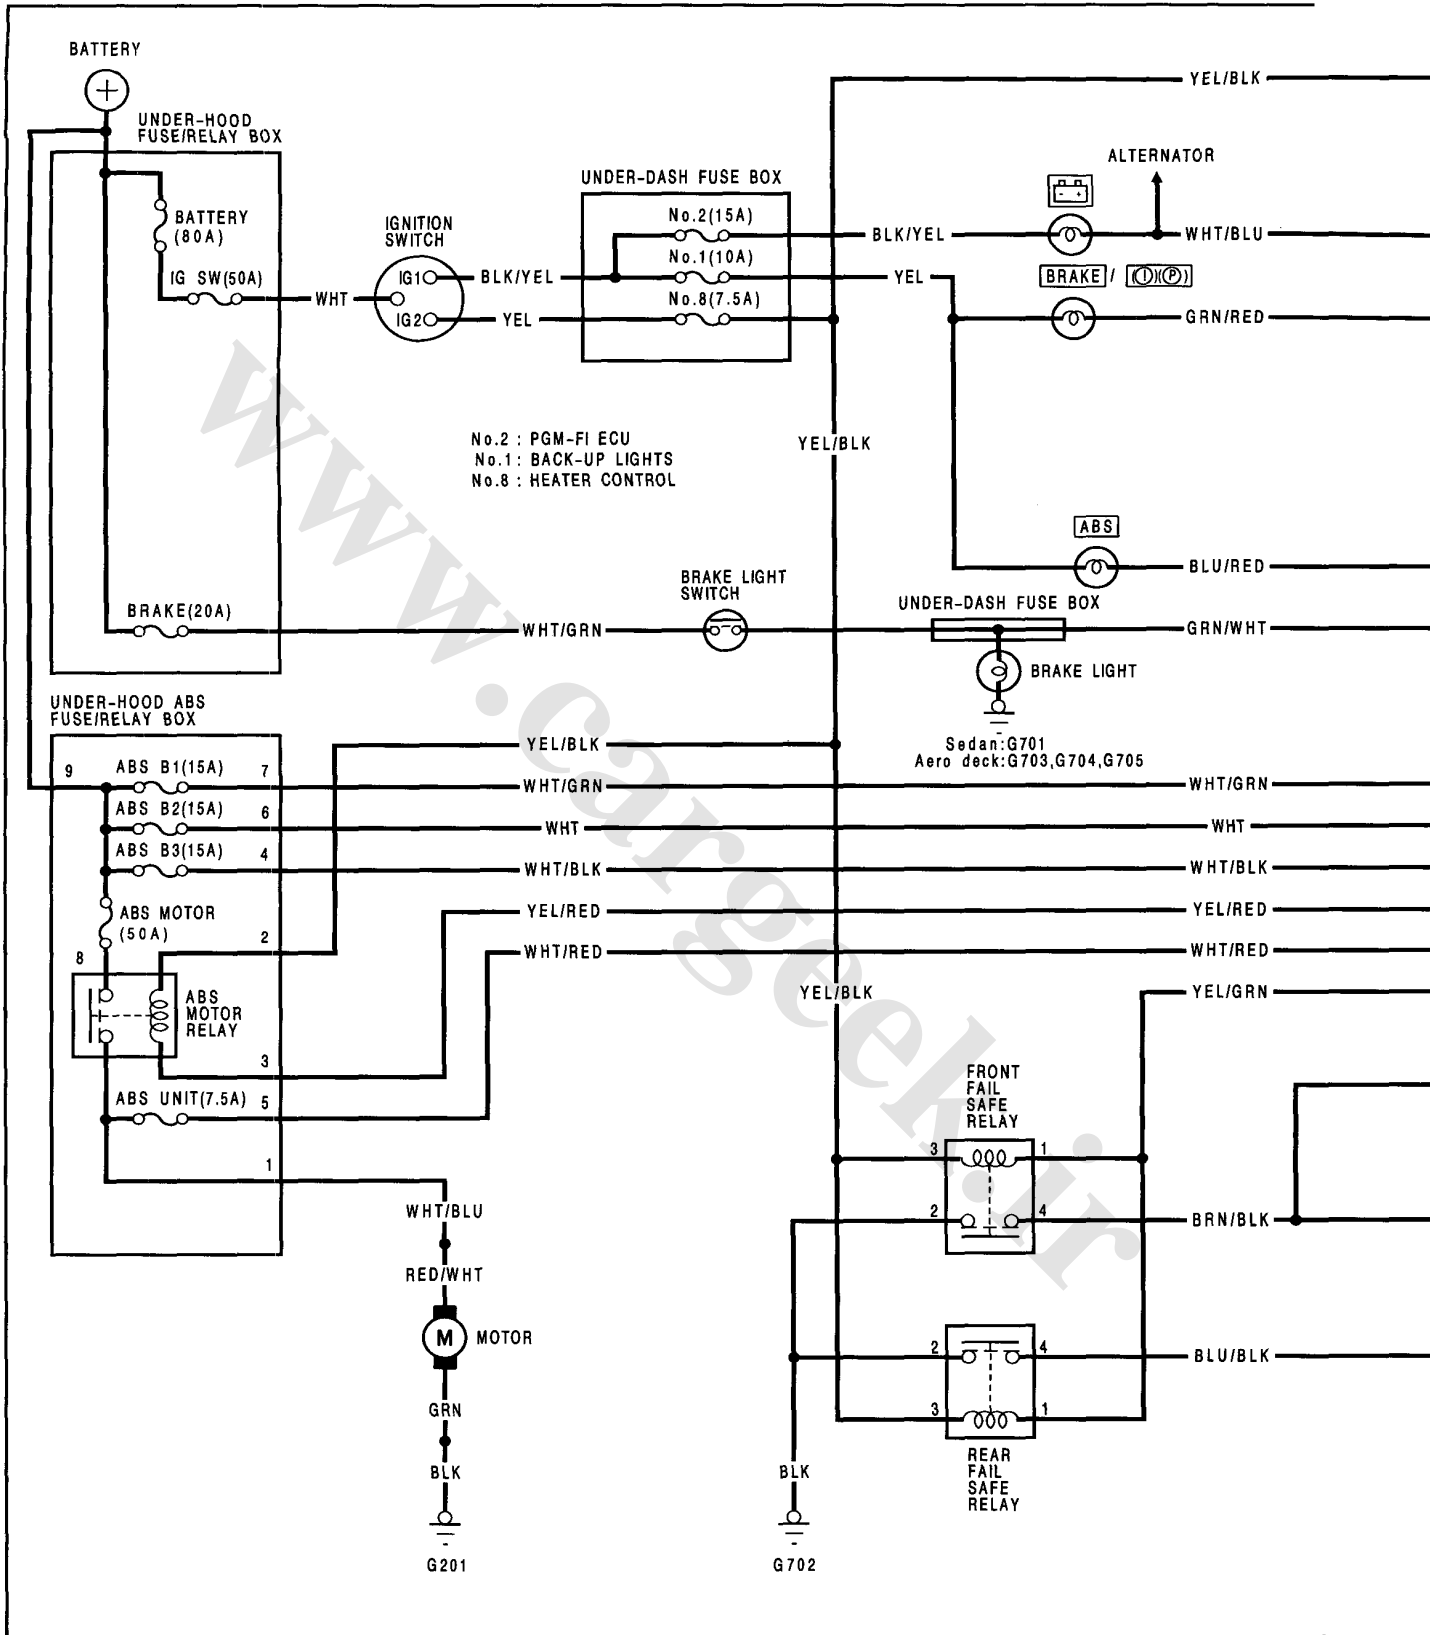

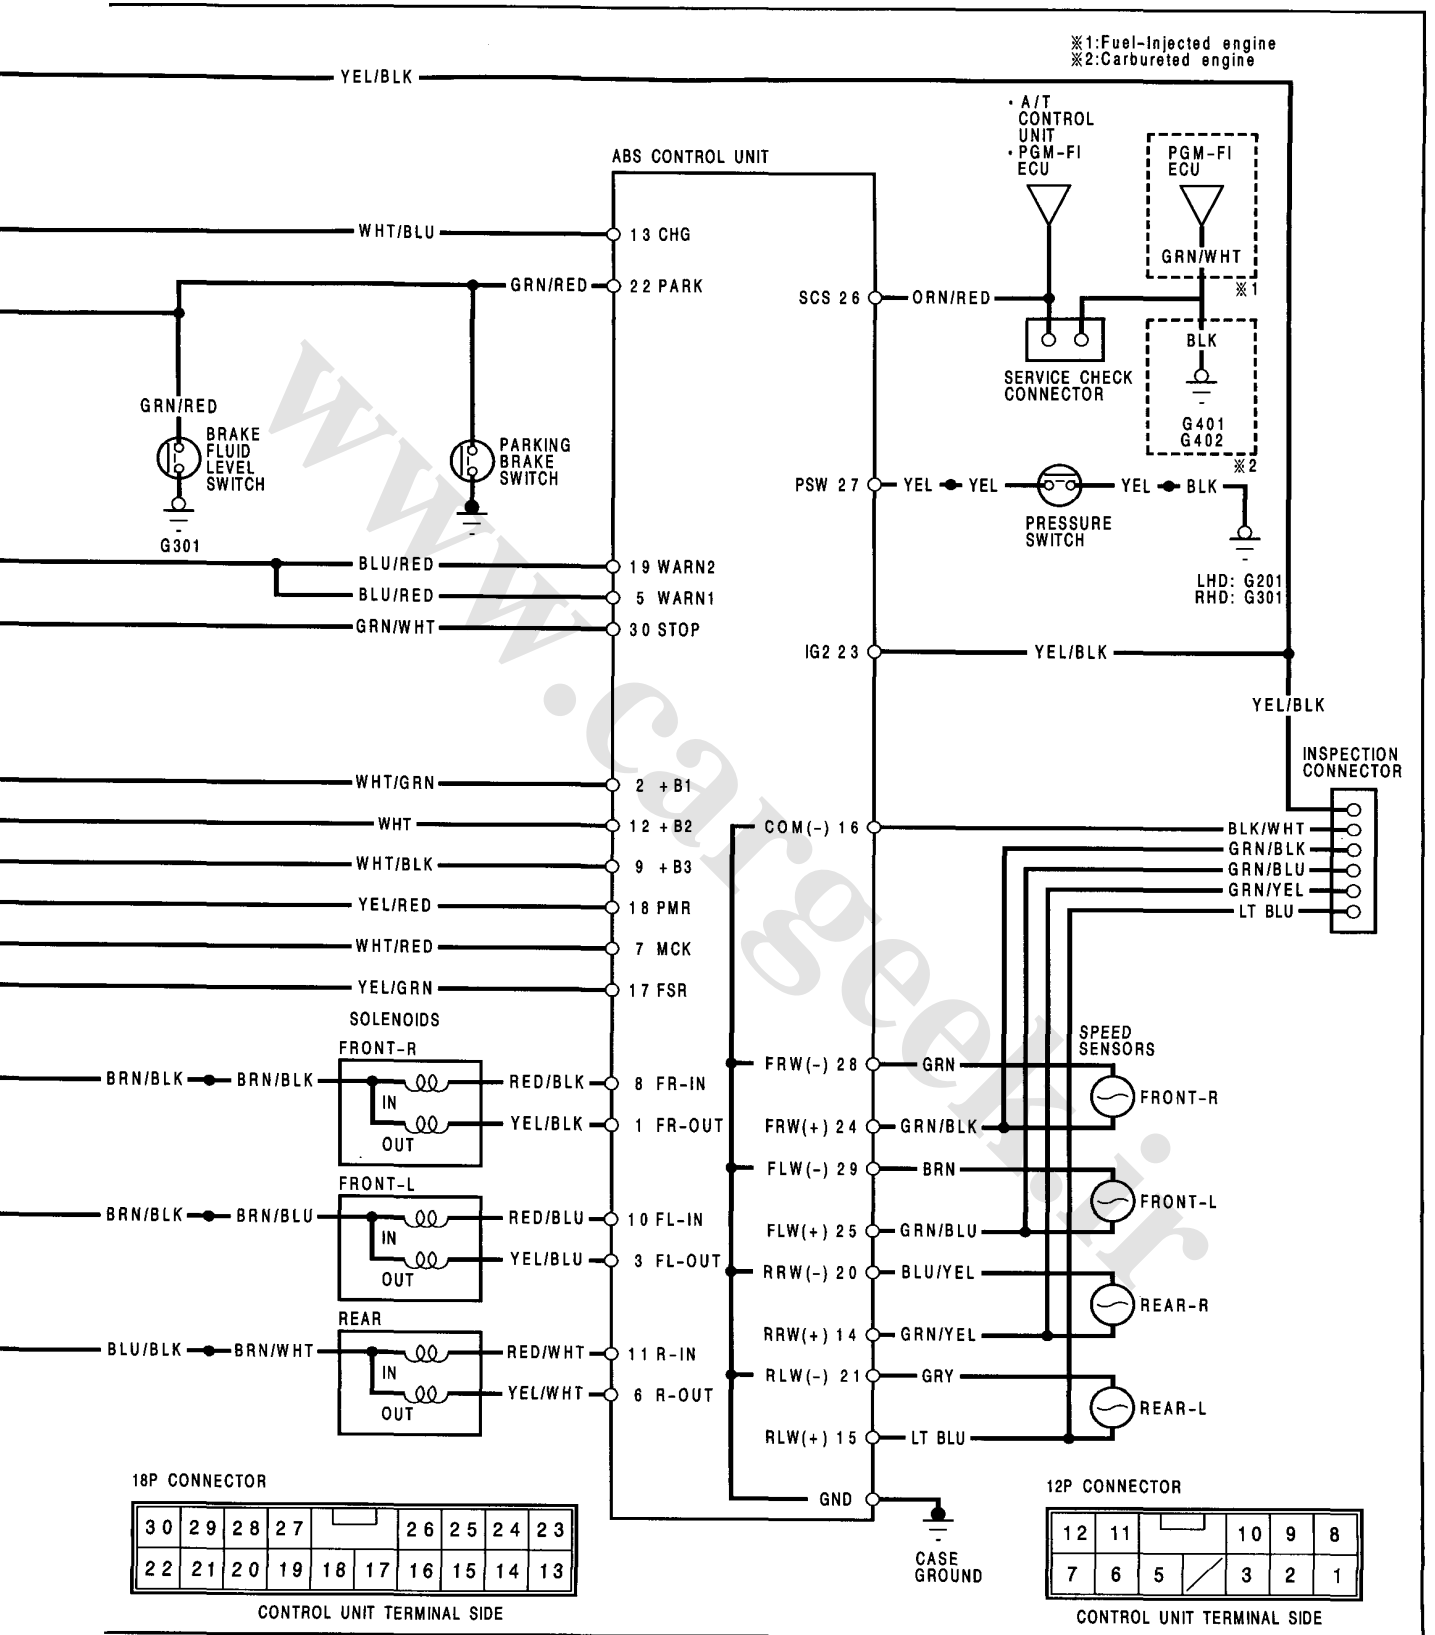

Wiring/Connector Location

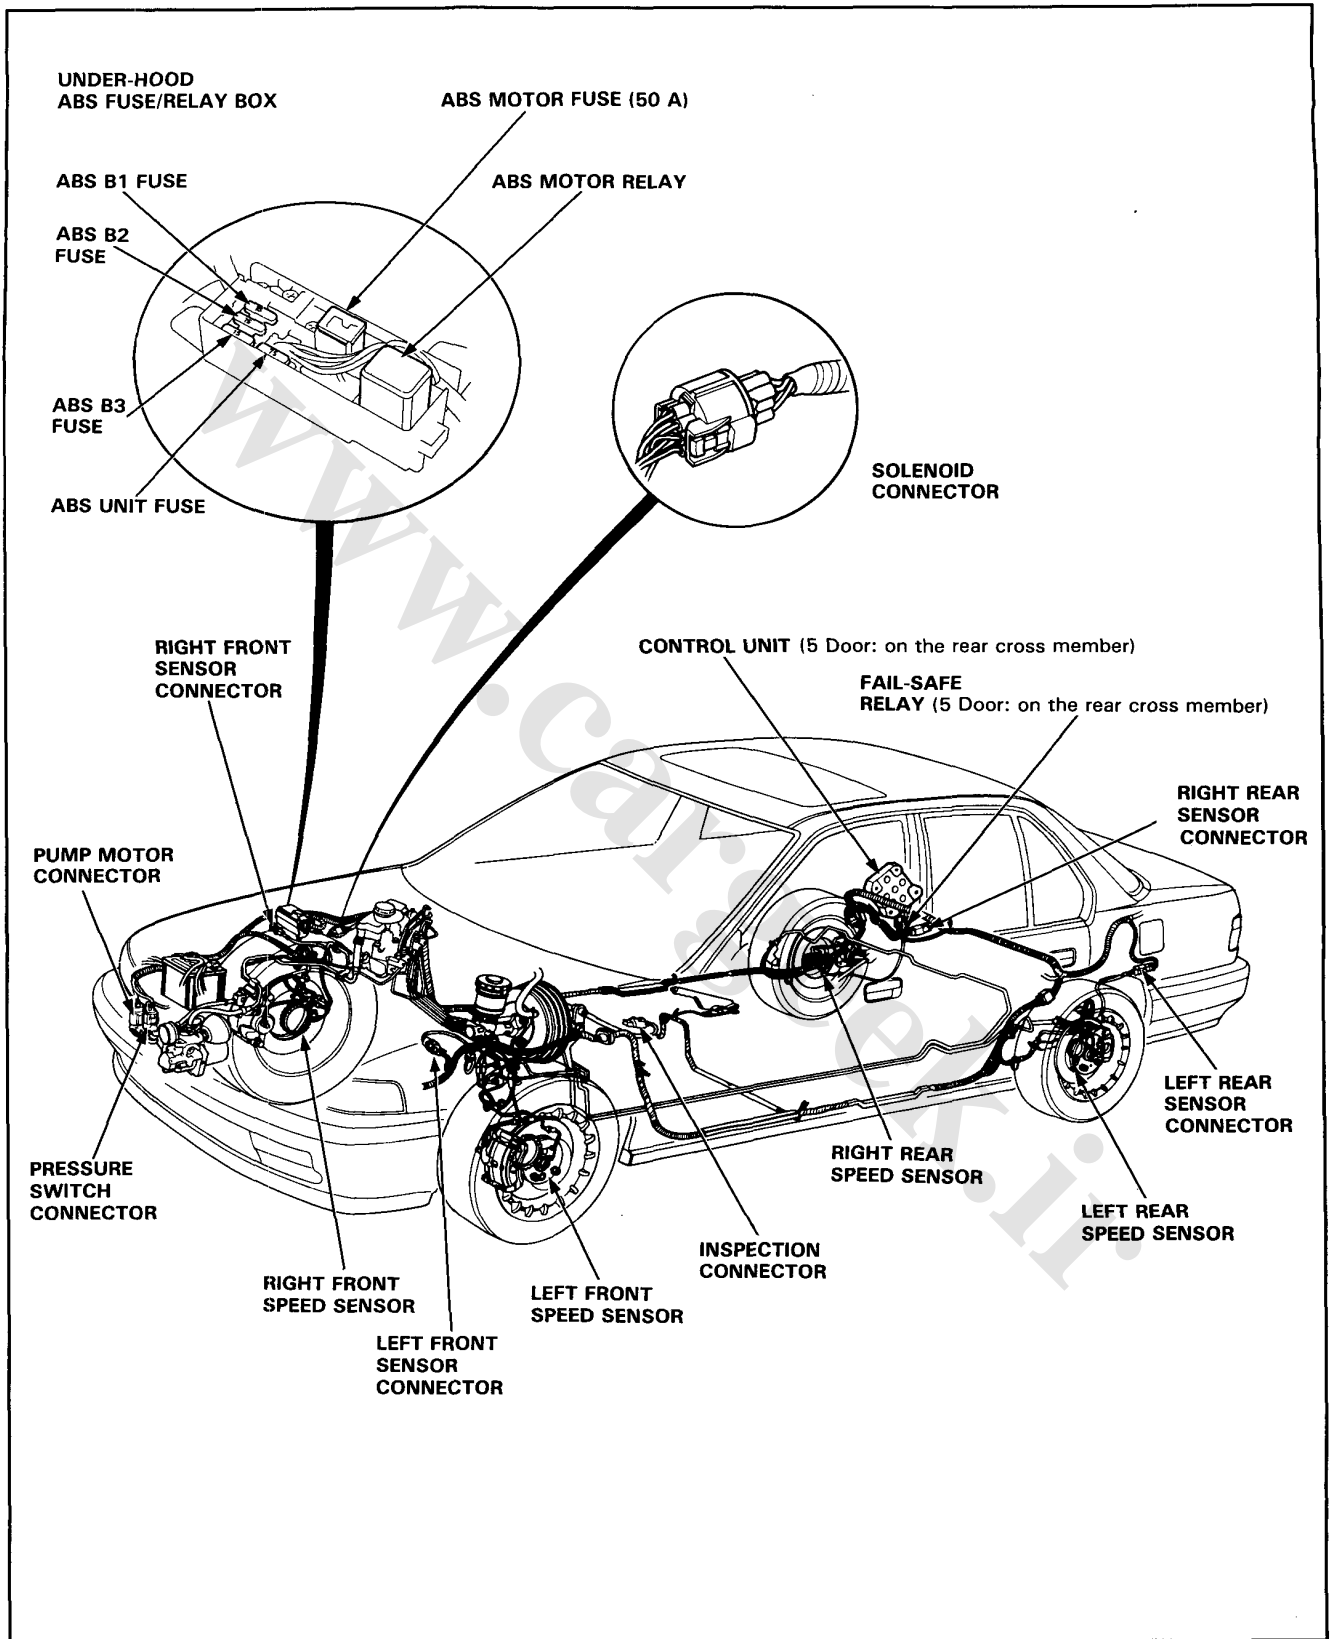



ALB Checker

Function Test


NOTE:

- The ALB checker is designed to confirm proper operation of the anti-lock brake system by simulating each system function and operating condition. Before using the checker, confirm that the anti-lock brake system indicator light is not indicating some other problem with the system. The light should go on when the ignition is first turned on and then go off and stay off one second after the engine is started.
- The checker should be used through modes 1–5 to confirm proper operation of the system in any one of the following situations:
 - After replacing any anti-lock brake system component.
 - After replacing or bleeding the system fluid (0 mode not necessary).
 - After any body or suspension repair that may have affected the sensors or their wiring.
- The procedure for modes 1–5 are on this page and 13-8, mode 0 (wheel sensor signal) is on page 13-9.
- Use the following models of ALB checkers:
 07HAJ–SG00601 or
 07HAJ–SG00602 or
 07508–SB00000 and
 07HAJ–SG00400 (Adaptor)

⚠ WARNING Disconnect the ALB checker before driving the car. A collision can result from a reduction, or complete loss, of braking ability causing severe personal injury or death.

1. With the ignition switch off, disconnect the 6-P inspection connector from the connector cover located on the cross-member under the passenger's seat and connect the 6-P inspection connector to the ALB checker.


ANTI-LOCK BRAKE SYSTEM INDICATOR LIGHT

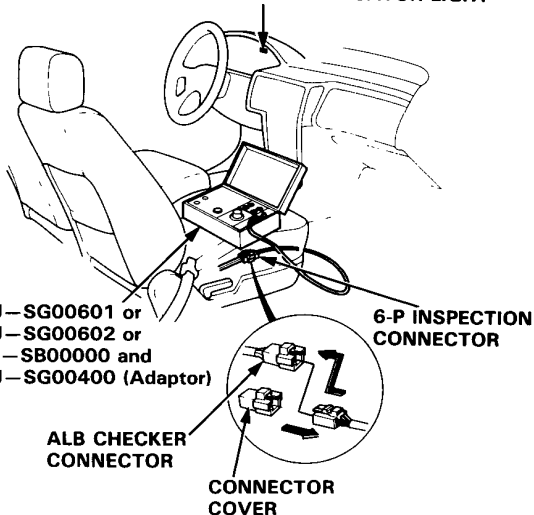


NOTE: Place the vehicle on level ground with the wheels blocked, put the transmission in neutral for manual transmission models, and in P for automatic transmission models.

2. Start the engine and release the parking brake.
3. Operate the ALB checker as follows:
 - (1) Set the pulse selector switch to 50.
 - (2) Turn the Mode Selector switch to "1".
 - (3) Push the Start Test switch:
 - The test in progress light should come ON.
 - In one or two more seconds, all four monitor lights should come on (If not the checker is faulty).
 - The anti-lock brake system indicator light should not come ON (If it comes on the checker harness to the 6-P connector connection is faulty).

NOTE: When the test in progress indicator light is ON. Don't turn the Mode Selector switch.

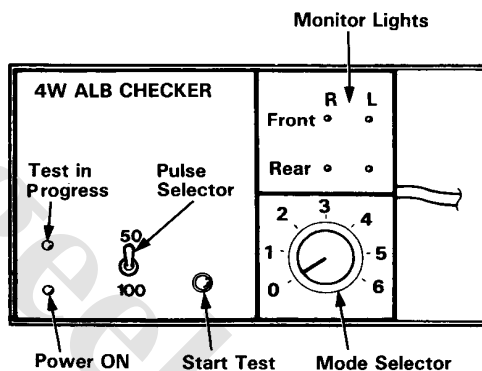

4. Turn the Mode Selector Switch to "2."

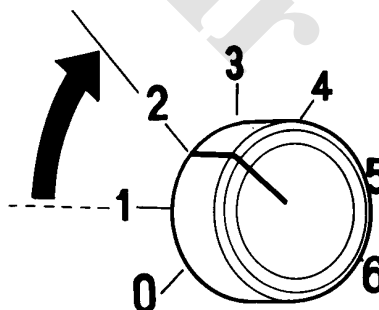


(cont'd)

ALB Checker

Function Test (cont'd)

5. Depress the brake pedal firmly and push the Start Test switch.
The anti-lock brake system indicator light should not go on while the Test in Progress light is ON. There should be kickback on the brake pedal. If not as described, go to troubleshooting, page 13-12.

NOTE: The operation sequence simulated by Modes 2, 3, 4 and 5:

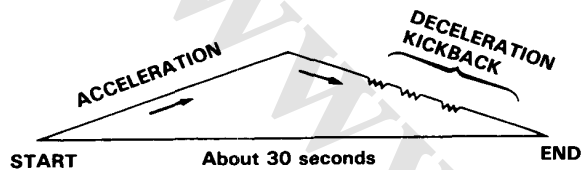

6. Turn the Mode Selector switch to 3, 4 and 5.
Perform step 5 for each of the test mode positions.

Mode 1:

Sends the simulated driving signal 0 km/h (0 mph) → 180 km/h (112 mph) → 0 km/h (0 mph) of each wheel to the control unit to check the control unit self diagnosis circuit. There should be NO kickback.

Mode 2:

Sends the driving signal of each wheel, then sends the lock signal of the left rear wheel to the control unit. There should be kickback.

Mode 3:

Sends the driving signal of each wheel, then sends the lock signal of the right rear wheel to the control unit. There should be kickback.

Mode 4:

Sends the driving signal of each wheel, then sends the lock signal of the left front wheel to the control unit. There should be kickback.

Mode 5:

Sends the driving signal of each wheel, then sends the lock signal of the right front wheel to the control unit. There should be kickback.

Mode 6:

Not used on this model.


Inspection points:

- The anti-lock brake system indicator light comes ON in mode 1.
 - Check the wiring.
- There is no kickback in modes 2 through 5.
 - Shorted wires.
 - Faulty or disconnected power unit connector.
 - Faulty power unit.



Wheel Sensor Signal Confirmation

NOTE: Use the ALB checker (mode 0) to confirm proper wheel sensor operation.

1. Disconnect the 6-P inspection connector from the connector cover located on the cross-member under the passenger's seat and connect the 6-P inspection connector to the ALB checker.

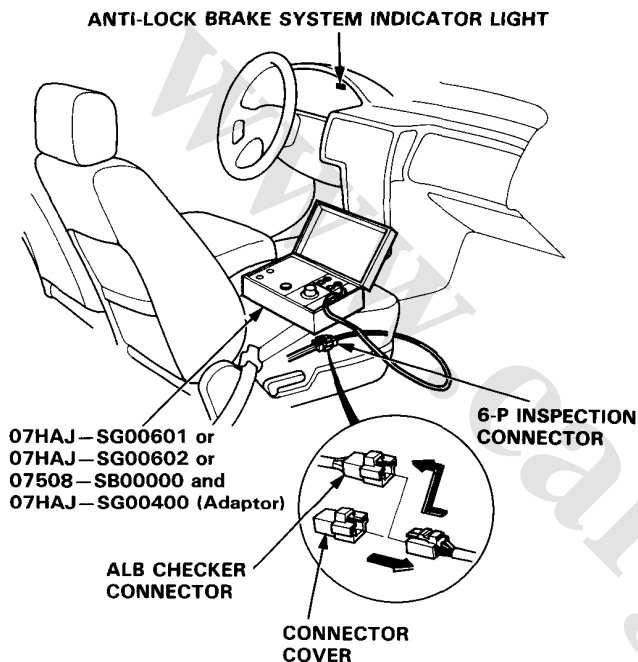

2. Raise the car so that all four wheels are off the ground and support on safety stands.
3. Turn the ignition switch ON.
4. Turn the Mode Selector switch to "0."

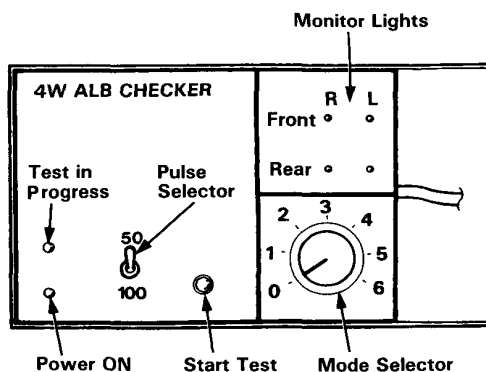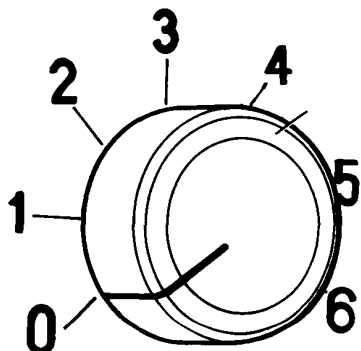

5. With the transmission in neutral, rotate each wheel briskly (one revolution per second) by hand, and confirm that its respective monitor light on the checker blinks as the wheel rotates.

NOTE:

- Rotating a wheel too slowly will produce only a weak blink of its monitor light that may be difficult to see.
- In bright sunlight, the monitor light may be difficult to see. Perform tests in a shaded area.
- In some instances, it may not be possible to spin the front wheels fast enough to get a monitor indication. If necessary, start the engine and slowly accelerate and decelerate the front wheels. The monitor lights should blink, indicating a good wheel sensor signal.

If any monitor light fails to blink, check the suspected sensor, its air gap and its wiring/connectors.

Troubleshooting

Anti-lock Brake System Indicator Light


Temporary Driving Conditions:

1. The anti-lock brake system indicator light comes on and the control unit memorizes the problem under certain conditions.

NOTE: Problem codes explained on page 13-12.

- The tire(s) adhesion is lost due to excessive cornering speed.
Problem codes: 5, 5-4, 5-8.
 - The vehicle loses traction when starting from a stuck condition on a muddy, snowy, or sandy road.
Problem code: 4-1, 4-2, 4-4, 4-8.
 - When the parking brake is applied for more than 30 seconds while the vehicle is being driven.
Problem code: 2-1.
 - The vehicle is driven on an extremely rough road.
2. The anti-lock brake system is OK if the anti-lock brake system indicator light goes off after the engine is restarted.

ANTI-LOCK BRAKE SYSTEM INDICATOR LIGHT

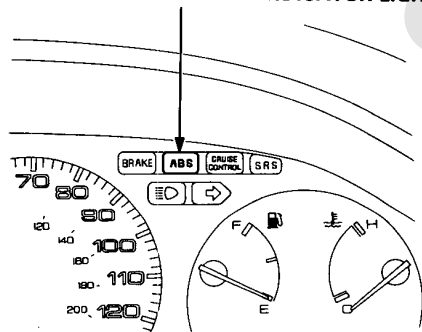

3. If you receive a customer's report that the anti-lock brake system indicator light sometimes comes on, check the system using the ALB checker to confirm whether there is any trouble in the system.
See page 13-7.
4. The anti-lock brake system indicator light will come on and the control unit will memorize a problem code when there is insufficient battery voltage to the control unit. An example would be when the battery is so weak that the car must be jump-started. After the battery is sufficiently recharged, the anti-lock brake system indicator light will work normally after the engine is stopped and restarted.

However, after recharging the battery, the problem code must be cleared from the control unit's memory by disconnecting the ABS B2 (15 A) fuse for at least 3 seconds.

Anti-lock Brake System Indicator Light Circuit:

CAUTION: Use only the digital multimeter to check the system.

1. The indicator light does not go on when the ignition switch is turned on.

Check the following items. If they are OK, check the control unit connectors. If not loose or disconnected, substitute a known-good control unit and recheck:

- Blown anti-lock brake system indicator light bulb.
- Open circuit in YEL wire between No. 1 (10 A) fuse and gauge assembly.
- Open circuit in BLU/RED wire between gauge assembly and control unit.
- Loose component grounding of the control unit to the body.

2. The anti-lock brake system indicator light remains ON after the engine is started, however the anti-lock brake system indicator light does not blink any code or sub-code. Check the following items:


- Loose or poor connection of the wire harness at the control unit.
- Faulty ABS B2 (15 A) fuse.
- Open circuit in WHT wire between ABS B2 (15 A) fuse and control unit.
- Open circuit in YEL/BLK wire between fuse No. 8 (7.5 A) and control unit.
- Short circuit in BLU/RED wire between gauge assembly and control unit.
- Open circuit in WHT/BLU wire between alternator and control unit.

If the problem is not found, substitute a known-good control unit and recheck whether the anti-lock brake system indicator light remains ON.



Comes on and remains on while running:

1. Stop the engine.
2. Turn the ignition switch on and make sure that the anti-lock brake system indicator light comes on.
3. Restart the engine and check the anti-lock brake system indicator light.
 - There is no problem in the anti-lock brake system if the anti-lock brake system indicator light goes off.
 - Go to step 4 if the anti-lock brake system indicator light goes off and then comes back on.
4. Stop the engine.
5. Disconnect the service check connector from the connector cover located under the dash on the passenger side of the car.
Connect the two terminals of the service check connector with a jumper wire.
6. Turn the ignition switch on, but do not start the engine.
7. Record the blinking frequency of the anti-lock brake system indicator light.
The blinking frequency indicates the problem code.

CAUTION: Before starting the engine, disconnect the jumper wire from the service check connector, or else the Check Engine light will stay on with the engine running.

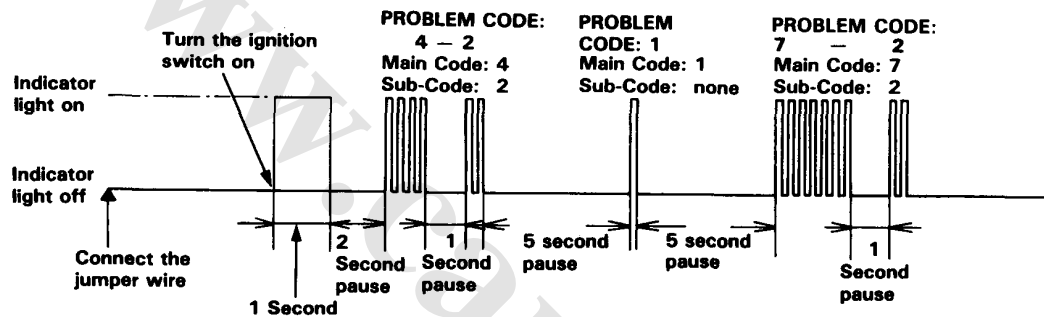**NOTE:**

- The control unit can indicate three problem codes (one, two or three problems).
- If the anti-lock brake system indicator light does not light, see Troubleshooting of Anti-lock Brake System Indicator Light Circuit page 13-10.
- If you miscount the blinking frequency, turn the ignition switch off then on to cycle the anti-lock brake system indicator light again.
- After the repair is completed, disconnect the ABS B2 (15 A) fuse for at least 3 seconds to erase the control unit's memory. Then turn the ignition key on again and recheck.
- The memory is erased if the connector is disconnected from the control unit or the control unit is removed from the body.
- After recording the main and sub-code (if applicable), refer to the Symptom-to-System Chart.

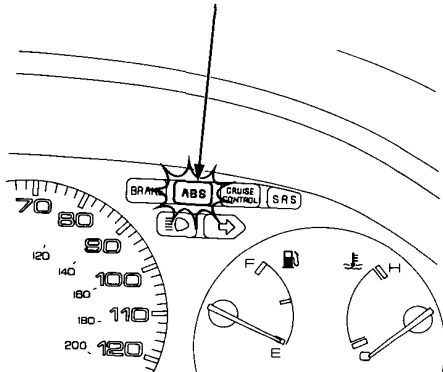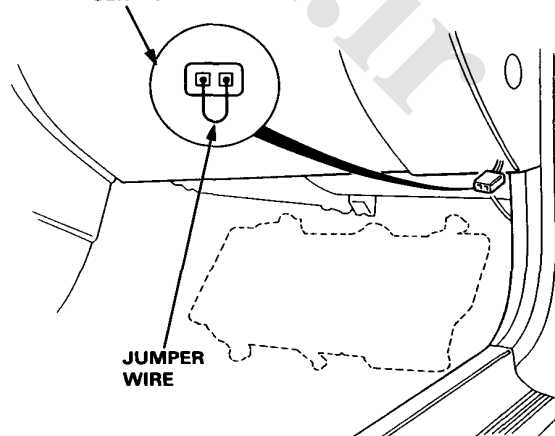ANTI-LOCK BRAKE SYSTEM INDICATOR LIGHT**SERVICE CHECK CONNECTOR**

Troubleshooting

Symptom-to-System Chart

PROBLEM CODE		PROBLEMATIC COMPONENT/ SYSTEM	AFFECTED				See page	OTHER COMPONENT	See page
MAIN CODE	SUB CODE		FRONT RIGHT	FRONT LEFT	REAR RIGHT	REAR LEFT			
①	—	Pump motor over-run	—	—	—	—	13-13	Pressure switch	
	②	Pump motor circuit problem	—	—	—	—	13-15	Motor relay unit fuse Motor fuse	
	③	High pressure leakage	—	—	—	—	13-18	Solenoid	
	④	Pressure switch	—	—	—	—	13-19		
	⑧	Accumulator gas leakage	—	—	—	—	13-20		
②	①	Parking brake switch-related problem	—	—	—	—	13-20	Brake fluid level switch BRAKE light	
③	①	Pulser(s)	○						
	②			○					
	④				○	○			
④	①	Speed sensor	○				13-21		
	②			○					
	④				○				
	⑧					○			
⑤	—	Speed sensor(s)			○	○	13-22	Modulator	
	④				○				
	⑧					○			
⑥	—	Fail-safe relay (Open, short)	—	—	—	—	13-23 (Function Test)	Front or rear fail-safe relay	
	①		—	—	—	—		Front fail-safe relay	
	④		—	—	—	—		Rear fail-safe relay	
⑦	①	Solenoid related problem (Open)	○				13-28	ABS B3 fuse	
	②			○				ABS B1 fuse Front fail-safe relay	
	④				○	○		Rear fail-safe relay	

Flowcharts

Problem code 1: Pump Motor Over-run

CAUTION: Use only the digital multimeter to check the system.

Bleed high pressure fluid from the maintenance bleeder with the Bleeder T-wrench.

Remove the pump motor relay.

Connect the No. 1 and 8 terminals using a jumper wire for about 8 seconds.

Does the pump motor run with an increasingly loud, raspy sound?

NO

Pump runs with a constant soft sound:
Bleed air from anti-lock brake system using the procedure on page 13-41 and check the pump sound again.

YES

Check the accumulator fluid quantity by bleeding the high pressure line with the Bleeder T-wrench.


Is there 40–70 cc?

NO


(To page 13-14)

YES


(To page 13-14)

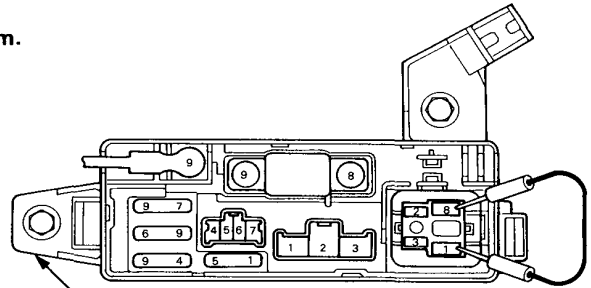

UNDER-HOOD ABS FUSE/RELAY BOX

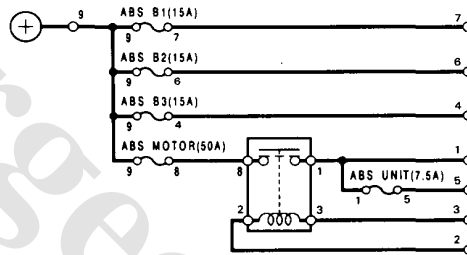

UNDER-HOOD ABS FUSE/RELAY BOX CIRCUIT DIAGRAM

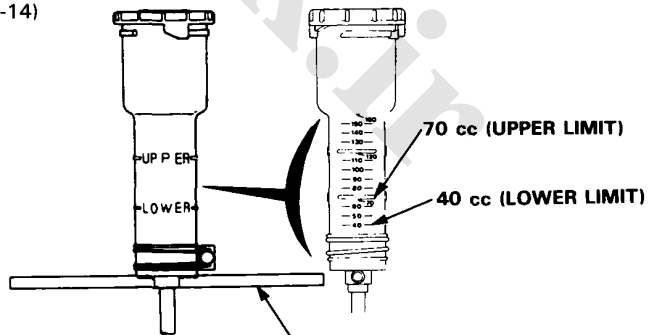

BLEEDER T-WRENCH
07HAA-SG00100
OR
07HAA-SG00101


(cont'd)

Troubleshooting


Flowcharts (cont'd)

(From page 13-13)


(From page 13-13)

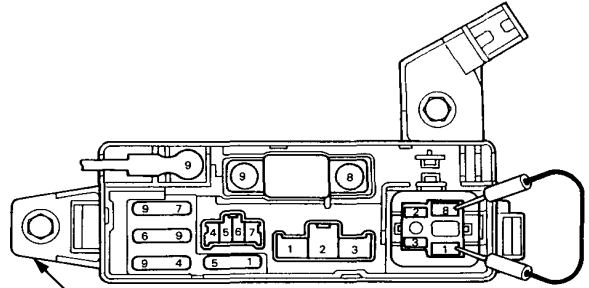


UNDER-HOOD ABS FUSE/RELAY BOX

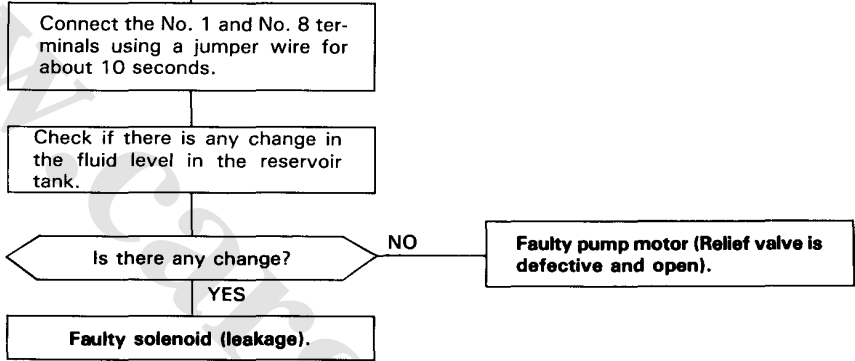

SWITCH-SIDE CONNECTOR

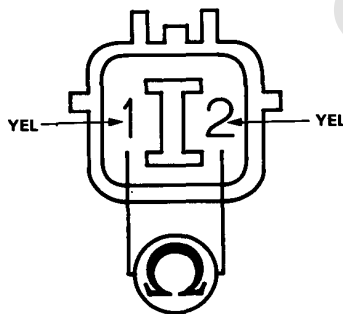

View from terminal side.

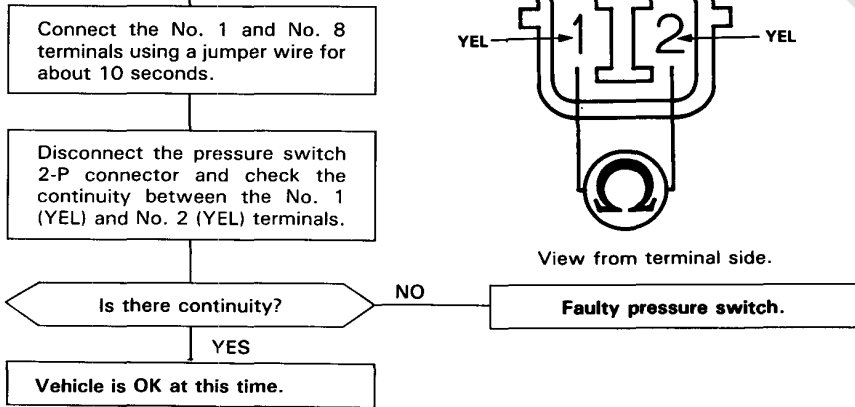

Problem code 1-2: Pump Motor Circuit Problem

CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The indicator light comes ON after restarting the engine until the malfunction code is erased (by disconnecting the ABS B2 fuse for 3 seconds).

Pre-test steps:


- Check ABS MOTOR (50 A) FUSE
- Check ABS UNIT (7.5 A) FUSE
- Check for loose under-hood ABS fuse/relay box connectors.

Remove and check the pump motor relay.

Does it work properly? **NO** → Faulty pump motor relay.

YES

Connect the No. 1 and No. 8 terminals using a jumper wire.

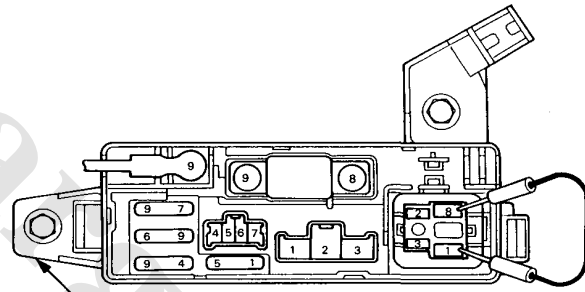

UNDER-HOOD ABS FUSE/RELAY BOX


Does the pump motor run? **NO** → (To page 13-17)

YES

Disconnect the jumper wire.

Disconnect the 2-P connector from the pump motor.

(To page 13-16)

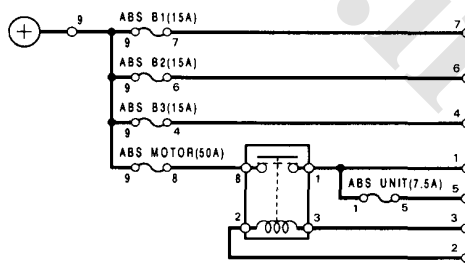

UNDER-HOOD ABS FUSE/RELAY BOX CIRCUIT DIAGRAM

(cont'd)

Troubleshooting

Flowcharts (cont'd)

(From page 13-15)

Remove the ABS UNIT (7.5 A) fuse from under-hood ABS fuse/relay box.

Turn the ignition switch ON.

Check for voltage between the under-hood ABS fuse/relay box ABS unit fuse No. 5 terminal and body ground.

Is there battery voltage?

NO
Repair open in WHT/RED wire between the ABS unit fuse and control unit.

YES
Reinstall the fuse to the under-hood ABS fuse/relay box.

Check for voltage between the pump motor relay No. 1 terminal and body ground.

Is there battery voltage?

NO
Faulty under-hood ABS fuse/relay box.

YES
Check for voltage between the No. 2 terminal and body ground.

Is there battery voltage?

NO
Repair open in BLK/YEL wire between the fuse and pump motor relay.

YES
Reinstall the pump motor relay.



Disconnect the 18-P connector from the control unit.

Check for voltage between the control unit connector No.18 (YEL/RED) terminal and body ground.

Is there battery voltage?

NO
Repair open in YEL/RED wire between the pump motor relay and control unit.

YES
Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

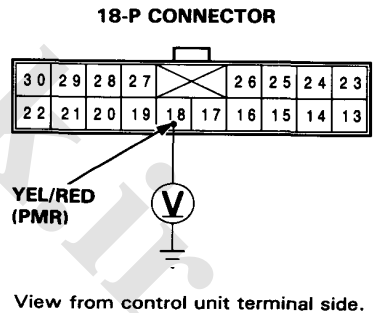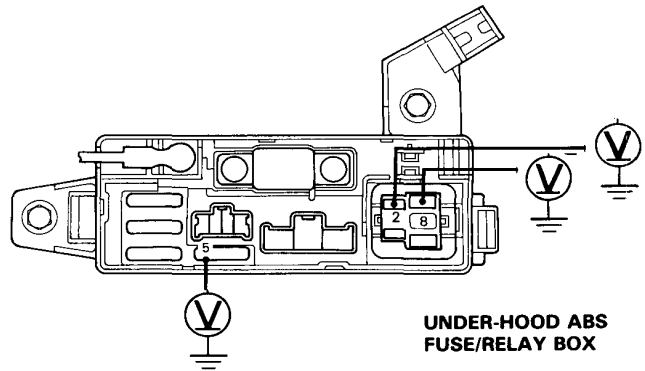

(From page 13-13)

Check for voltage between the No. 1 terminal and body ground.

Is there battery voltage?

NO

Faulty under-hood ABS fuse/relay box.

YES

Disconnect the 2-P connectors from the pump motor.

Check for voltage between the No. 1 (WHT/BLU) terminal and body ground.

Is there battery voltage?

NO

Repair open in WHT/BLU wire between the motor relay and pump motor.

YES

Check for voltage between the No. 1 (WHT/BLU) terminal and No. 2 (BLK) terminal.


Is there battery voltage?

NO


Repair open in BLK wire between the pump motor and ground or poor ground (G201).

YES


Faulty pump motor.

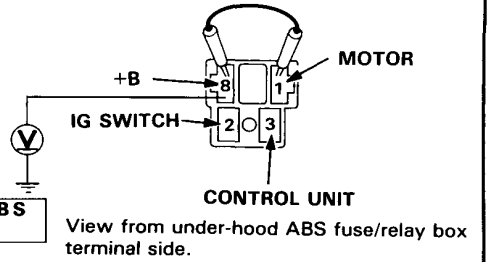

HARNESS-SIDE CONNECTOR
BLK (GROUND) WHT/BLU (MOTOR RELAY)

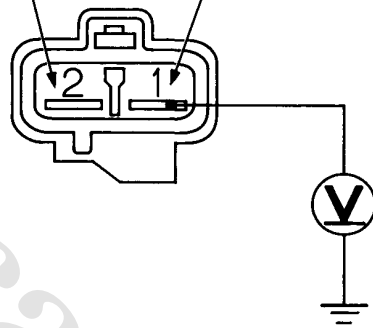

HARNESS-SIDE CONNECTOR
BLK (GROUND) WHT/BLU (MOTOR RELAY)

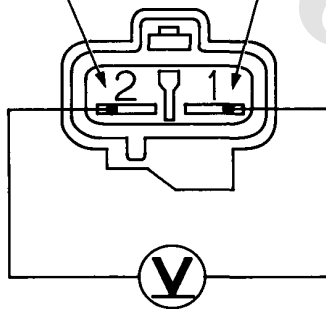

(cont'd)

Troubleshooting

Flowcharts (cont'd)

Problem code 1-3: High Pressure Leakage

CAUTION: Use only the digital multimeter to check the system.

Pre-test steps:

- Check reservoir fluid level, and if necessary, fill to the MAX level.
- Check for fluid leaks from the functional parts and replace the faulty parts if there is a leak.

Functional parts:

- Modulator
- Power unit
- High pressure hoses

Bleed high pressure fluid from the maintenance bleeder with the Bleeder T-wrench.

Remove the pump motor relay.


Connect the No. 1 and No. 8 terminals using a jumper wire for about 10 seconds.

Disconnect the 2-P connector from the pressure switch.


After 30 minutes, check for continuity between the No.1 (YEL) and No.2 (YEL) terminals on the switch side of connector.

Is there continuity? **YES** → Vehicle is OK at this time.

NO → Faulty solenoid (leakage).

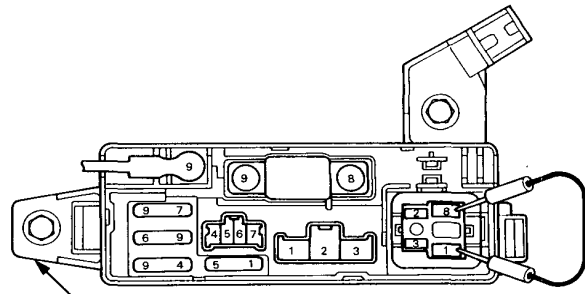


UNDER-HOOD ABS FUSE/RELAY BOX

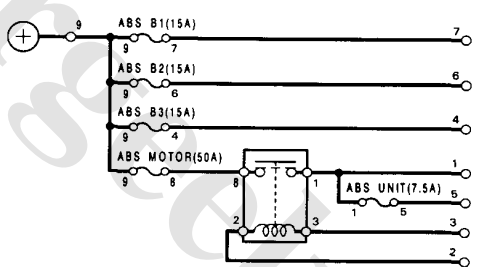

UNDER-HOOD ABS FUSE/RELAY BOX CIRCUIT DIAGRAM

SWITCH-SIDE CONNECTOR

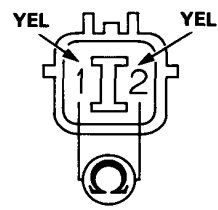

View from terminal side.

Problem code 1-4: Pressure Switch Circuit

CAUTION: Use only the digital multimeter to check the system.

Bleed high pressure fluid from the maintenance bleeder with the Bleeder T-wrench (see page 19-80).

Disconnect the 2-P connector from the pressure switch.

Check the continuity of pressure switch between the No.1 (YEL) and No.2 (YEL) terminals.

Is there continuity?

YES

Faulty pressure switch (closed).

NO

Check for continuity between the No.1 (YEL) terminal and body ground on the harness-side connector.

Is there continuity?


YES

Repair short in YEL wire between the control unit and pressure switch.

NO


Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

SWITCH-SIDE CONNECTOR

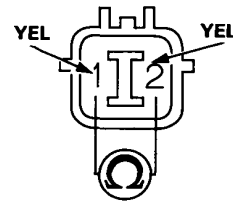

View from terminal side.

HARNESS-SIDE CONNECTOR

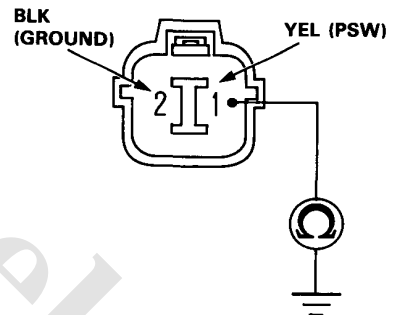

View from terminal side.

(cont'd)


Troubleshooting

Flowcharts (cont'd)

Problem Code 1-8: Accumulator Gas Leakage

Check the following items:

- The relief plug is loose.
- The relief plug O-ring is out of place.
- Bleed the high pressure line with the Bleeder T-wrench. Operate the pump motor for 10 seconds and bleed the high pressure line again with the Bleeder T-wrench. If no fluid or more than 70 cc of fluid comes out, it is likely that the gas has leaked out.

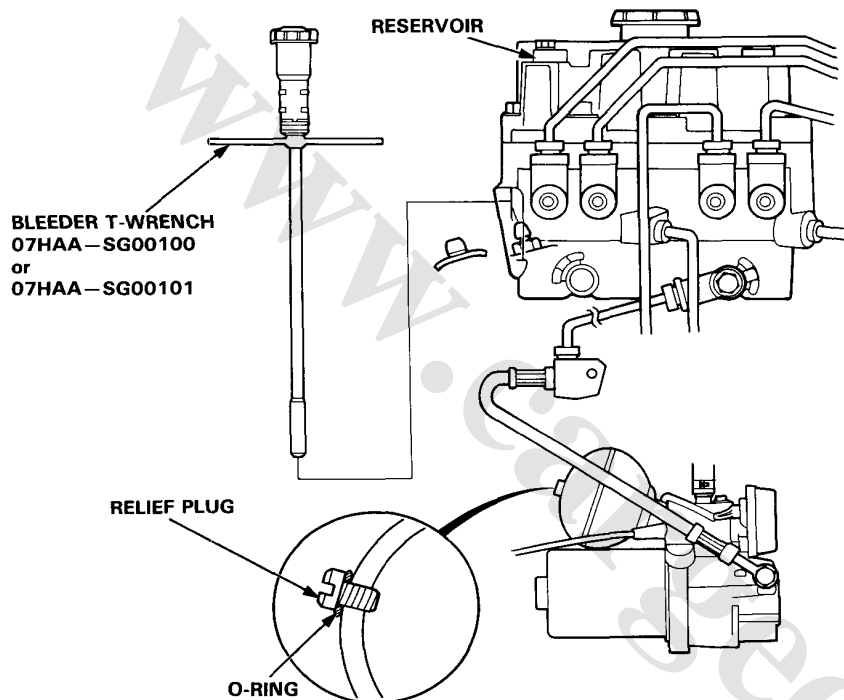

Problem code 2-1: Parking Brake Switch Related Problem

If the parking brake has been released, the following items are possible causes. If they are OK, check the control unit connectors for good connection. If not loose or disconnected, substitute a known-good control unit and recheck.

NOTE: Before Troubleshooting Problem Code 2-1, remove the ABS B2 (15 A) fuse for 3 seconds to clear the control unit's memory, then test drive the car.

If the anti-lock brake system indicator light stays off, the probability is that the car was driven with the parking brake applied.

- The parking brake is applied for more than 30 seconds while driving.
- The brake fluid level in the master cylinder is too low.
- GRN/RED wire is shorted between the **BRAKE** indicator light and parking brake switch.
- GRN/RED wire is shorted between the **BRAKE** indicator light and brake fluid level switch.
- The **BRAKE** indicator light is blown.
- GRN/RED has an open between the **BRAKE** indicator light and the control unit.
- The stop light is blown.

Problem Code 4-1 to 4-8: Speed Sensor

CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The indicator light comes ON after restarting the engine until the malfunction code is erased (by disconnecting the ABS B2 fuse for 3 seconds).


Disconnect the 18-P connector from the control unit.

Check each sensor for continuity between the positive and negative:

- GRN/BLK: Front Right Positive
- GRN: Front Right Negative
- GRN/BLU: Front Left Positive
- BRN: Front Left Negative
- GRN/YEL: Rear Right Positive
- BLU/YEL: Rear Right Negative
- LT BLU: Rear Left Positive
- GRY: Rear Left Negative

* table

Front	700 – 1100 Ω
Rear	2 Door • 4 Door
	2WS 1000 – 1500 Ω
	4WS 600 – 900 Ω
	5 Door
2WS	600 – 900 Ω

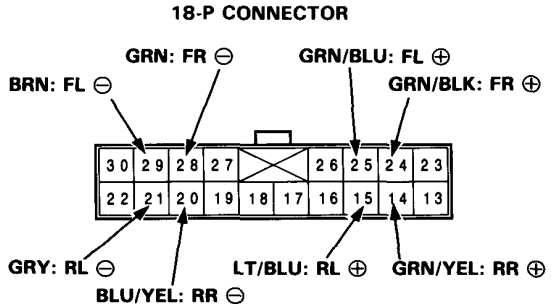

Is the resistance as specified?
* See table

YES

Check for continuity to ground of wire and sensor.

View from control unit terminal side.

Is there continuity?

YES

Repair short in sensor wire or faulty speed sensor.

NO

Disconnect the 2-P connector of the speed sensor.

Check for resistance between the sensor terminals.

Is the resistance as specified?
* See table

NO

Faulty speed sensor.

YES

Reconnect the 18-P connector from the control unit.

Check each wire for continuity between the speed sensor harness-side terminals and body ground.

Is there continuity? **

NO

Repair open in wire harness.

YES

Check for loose speed sensor connectors. If necessary, substitute a known-good control unit and recheck.


** Positive: Less than 3.3 kΩ is OK.
Negative: Less than 1 Ω is OK.

SENSOR-SIDE CONNECTOR

FRONT




REAR



View from terminal side.

HARNESS-SIDE CONNECTOR

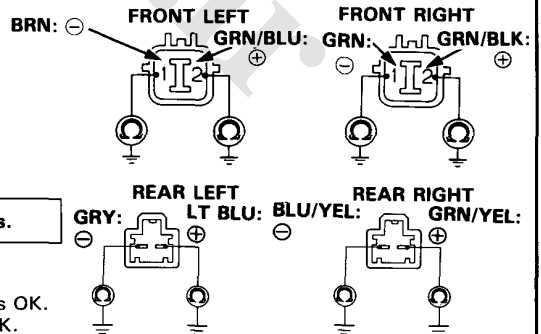

View from terminal side.

(cont'd)

Troubleshooting

Flowcharts (cont'd)

Problem Code 5 to 5-8: Speed Sensor(s)

CAUTION: Use only the digital multimeter to check the system.

NOTE: If a malfunction is detected, this code appears and the fail-safe function is activated. The indicator light comes ON after restarting the engine until the malfunction code is erased (by disconnecting the ABS B2 fuse for 3 seconds.)


Disconnect the 18-P connector from the control unit.

Check the resistance of each sensor between the positive and negative:

- GRN/YEL: Rear Right Positive
- BLU/YEL: Rear Right Negative
- LT BLU: Rear Left Positive
- GRY: Rear Left Negative

* table

Front	700 – 1100 Ω
Rear	2 Door • 4 Door
	2WS 1000 – 1500 Ω
	4WS 600 – 900 Ω
	5 Door
2WS	600 – 900 Ω

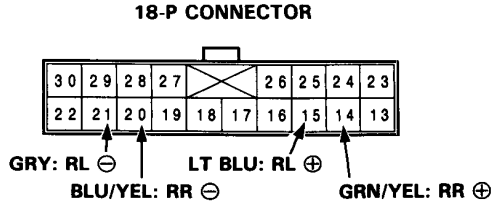

Is the resistance as specified? *see table

Check for each wire continuity to ground.

Is there continuity?

Repair short in sensor wire or faulty speed sensor.

Disconnect the wire harness from speed sensor.

Reconnect the 18-P connector to the control unit.

Connect the ALB checker to the inspection connector.

Check for ALB function in MODE 2 and 3.

Check for resistance between the sensor terminals.

Does it work properly?

Faulty modulator.

Is the resistance as specified? *see table

Check for rear brake drag. If OK, substitute a known-good control unit and recheck.

Faulty speed sensor.

Reconnect the 18-P connector from the control unit.

Check each wire for continuity between the speed sensor harness-side terminals and body ground.


Is there continuity? **

Repair open in wire harness.

Check for loose speed sensor connectors. If necessary, substitute a known-good control unit and recheck.


** Positive: Less than 3.3 kΩ is OK. Negative: Less than 1 Ω is OK.

SENSOR-SIDE CONNECTOR REAR



View from terminal side.

HARNESS-SIDE CONNECTOR REAR LEFT REAR RIGHT

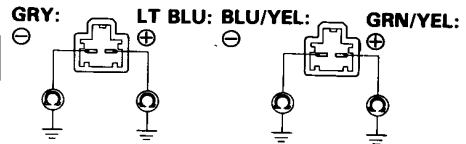

View from terminal side.

Problem Code 6-1: Front Fail-Safe Relay Circuit

CAUTION: Use only the digital multimeter to check the system.

Pre-test steps:

- Check ABS B1 (15 A) FUSE
- Check ABS B3 (15 A) FUSE
- Check for loose under-hood ABS fuse/relay box connectors.

Remove the front fail-safe relay.

Wire colors of the fail-safe relay connector
 Front: BRN/BLK, YEL/BLK, YEL/GRN, BLK
 Rear: BLU/BLK, YEL/BLK, YEL/GRN, BLK

Check relay function.

Does it work properly?

Faulty front fail-safe relay.

Disconnect the 10-P connector from the solenoid.

Turn the ignition switch ON.

Check for voltage between the fail-safe relay No. 3 (BLK/YEL) terminal and body ground.

Is there battery voltage?

NO

Repair open in BLK/YEL wire between the fuse and front fail-safe relay.

YES

Turn the ignition switch OFF.

Check for continuity between the fail-safe relay No. 4 (BRN/BLK) terminal and body ground.

Is there continuity?

YES

Repair short in BRN/BLK wire between the solenoid and front fail-safe relay.

NO

Check each wire for continuity between the solenoid terminals and body ground
 No. 4 (BRN/BLK): Front Right
 No. 6 (BRN/BLU): Front Left

Is there continuity?

YES


Faulty solenoid (short).

NO

(To page 13-24)

YEL/GRN: CONTROL UNIT (FSR)

BLK: GROUND

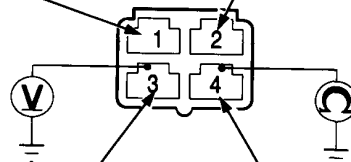


BLK/YEL: IG SWITCH

BRN/BLK: FRONT SOLENOID

View from terminal side.

SOLENOID-SIDE CONNECTOR

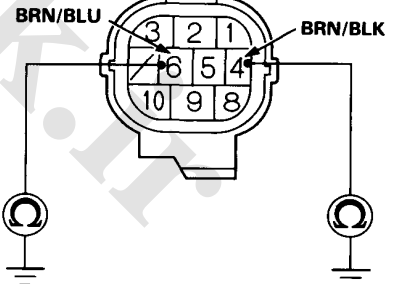

View from terminal side.

(cont'd)

Troubleshooting

Flowcharts (cont'd)

(From page 13-23)

Disconnect the 18-P and 12-P connector from the control unit.

Check each wire for continuity between the control unit and body ground.
 No. 8 (RED/BLK): Front Right Inlet
 No. 1 (YEL/BLK): Front Right Outlet
 No. 10 (RED/BLU): Front Left Inlet
 No. 3 (YEL/BLU): Front Left Outlet

Is there continuity?

YES
 Repair short in wire between the solenoid and control unit:
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Left Outlet

NO
 Disconnect the rear fail-safe relay connector.

Check for continuity between the No. 17 (YEL/GRN) terminal and body ground.

Is there continuity?

YES
 Repair short in YEL/GRN wire between the control unit and front fail-safe relay.

NO
 Reinstall the front fail-safe relay.




Turn the ignition switch ON.

Check for voltage between the control unit connector No. 17 (YEL/GRN) terminal and body ground.

Is there battery voltage?

NO
 Repair open in YEL/GRN wire between the front fail-safe relay and control unit.

YES
 Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

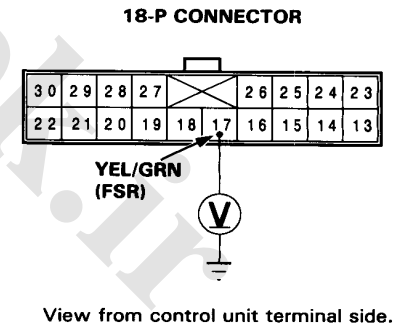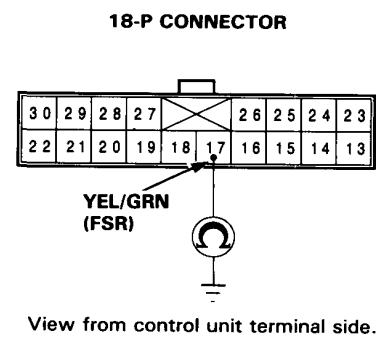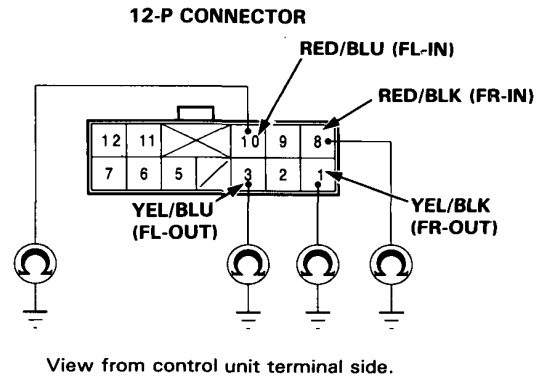

Problem Code 6-4: Rear Fail-Safe Relay Circuit

CAUTION: Use only digital multimeter to check the system.

Remove the rear fail-safe relay.

Check relay function.

Does it work properly? **NO** → Faulty rear fail-safe relay.

YES

Disconnect the 10-P connector from the solenoid.

Turn the ignition switch ON.

Check for voltage between the fail-safe relay No. 3 (BLK/YEL) terminal and body ground.

Is there battery voltage? **NO** → Repair open in BLK/YEL wire between the fuse and front fail-safe relay.

YES

Turn the ignition switch OFF.

Check for continuity between the fail-safe relay No. 4 (BLU/BLK) terminal and body ground.

Is there continuity? **YES** → Repair short in BLU/BLK wire between the solenoid and rear fail-safe relay.



NO

Reinstall the rear fail-safe relay.

Check for continuity between the solenoid No. 5 (BRN/WHT) terminal and body ground.

Is there continuity? **YES** → Faulty solenoid (short).

NO
(To page 13-26)

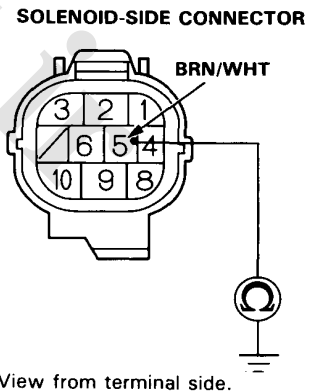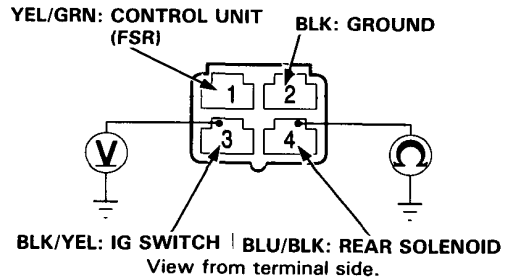

(cont'd)

Troubleshooting

Flowcharts (cont'd)

(From page 13-25)

Disconnect the 18-P and 12-P connector from the control unit.

Check each wire for continuity between the control unit and body ground.
No. 11 (RED/WHT): Rear Inlet
No. 6 (YEL/WHT): Rear Outlet

Is there continuity?

YES
Repair short in wire between the solenoid and control unit:
RED/WHT: Rear Inlet
YEL/WHT: Rear Outlet

Disconnect the front fail-safe relay connector.

Check for continuity between the No. 17 (YEL/GRN) terminal and body ground.

Is there continuity?

YES
Repair short in YEL/GRN wire between the control unit and rear fail-safe relay.

Reinstall the rear fail-safe relay.




Turn the ignition switch ON.

Check for voltage between the control unit connector No. 17 (YEL/GRN) terminal and body ground.

Is there battery voltage?

NO
Repair open in YEL/GRN wire between the rear fail-safe relay and control unit.

YES
Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

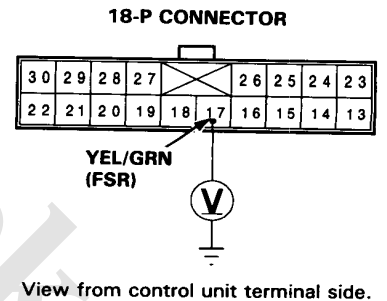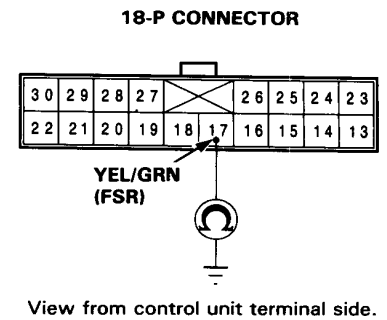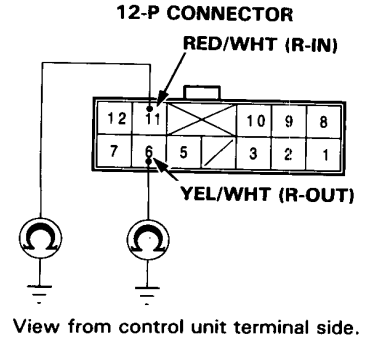

Problem code 7-1 and 7-2 Front Solenoid Related Problem

CAUTION: Use only the digital multimeter to check the system.

Pre-test steps:

- Check ABS B1 (15 A) FUSE
- Check ABS B3 (15 A) FUSE
- Check for loose under-hood ABS fuse/relay box connectors.

Disconnect the 10-P connector from the solenoids.

Check for resistance between the solenoid terminals:
No.1 (RED/BLK) and No.4 (BRN/BLK): Front Right Inlet
No.3 (RED/BLU) and No.6 (BRN/BLU): Front Left Inlet

Is there 1-3Ω?

NO

Faulty solenoid.

YES

Check for resistance between the solenoid terminals:
No. 8 (YEL/BLK) and No. 4 (BRN/BLK): Front Right Outlet
No. 10 (YEL/BLU) and No. 6 (BRN/BLU): Front Left Outlet

Is there 1-3Ω?

NO

Faulty solenoid.

YES

Disconnect the 12-P connector from control unit.

Check each wire for continuity between the control unit and front solenoid:
RED/BLK: Front Right Inlet
YEL/BLK: Front Right Outlet
RED/BLU: Front Left Inlet
YEL/BLU: Front Left Outlet




Is there continuity?

NO

Repair open in wire between the solenoid and control unit:
RED/BLK: Front Right Inlet
YEL/BLK: Front Right Outlet
RED/BLU: Front Left Inlet
YEL/BLU: Front Left Outlet

YES

(To page 13-28)

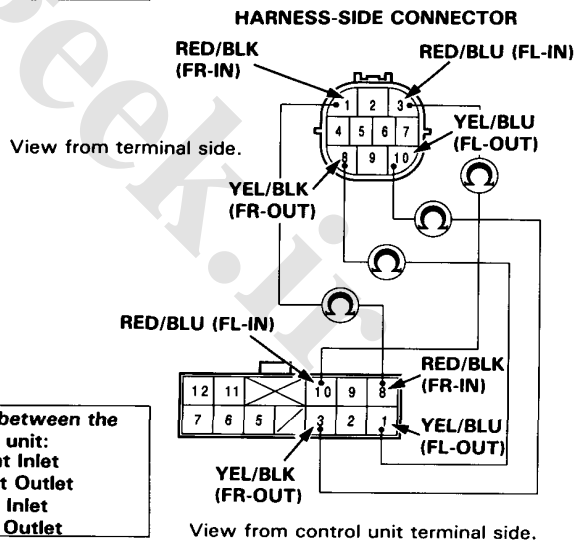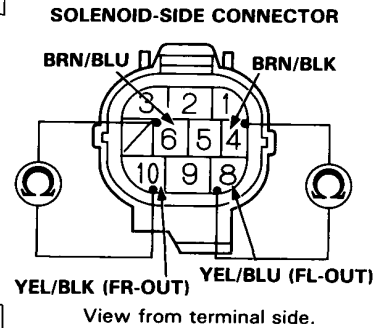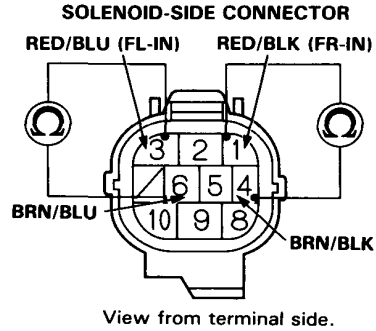

(cont'd)

Troubleshooting

Flowcharts (cont'd)

(From page 13-27)

Check each wire for continuity between the control unit and body ground:

- No. 8 (RED/BLK): Front Right Inlet
- No. 1 (YEL/BLK): Front Right Outlet
- No. 10 (RED/BLU): Front Left Inlet
- No. 3 (YEL/BLU): Front Left Outlet

Is there continuity?

YES

NO

Remove the front fail-safe relay.

Check for relay function.

Does it work properly?

NO

YES

Check for continuity between the fail-safe relay connector No. 2 (BLK) terminal and body ground.

Is there continuity?

NO

YES

Check BRN/BLK wire for continuity between the solenoids and front fail-safe relay.

Is there continuity?

NO

YES

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.


Repair short in wire between the solenoid and control unit:
 RED/BLK: Front Right Inlet
 YEL/BLK: Front Right Outlet
 RED/BLU: Front Left Inlet
 YEL/BLU: Front Right Outlet

Faulty front fail-safe relay.

Repair open in BLK wire between the fail-safe relay and ground or poor ground (G503).


Repair open in BRN/BLK wire between the solenoids and front fail-safe relay.

12-P CONNECTOR

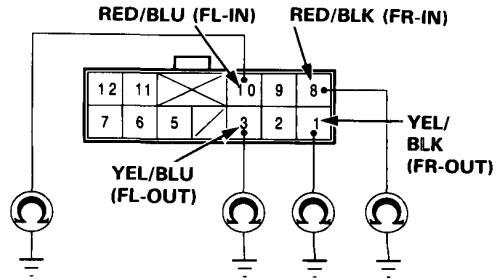


View from control unit terminal side.

YEL/GRN: CONTROL UNIT (FSR) BLK: GROUND

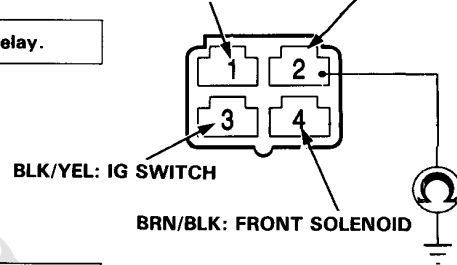

View from terminal side.

HARNESS-SIDE CONNECTOR

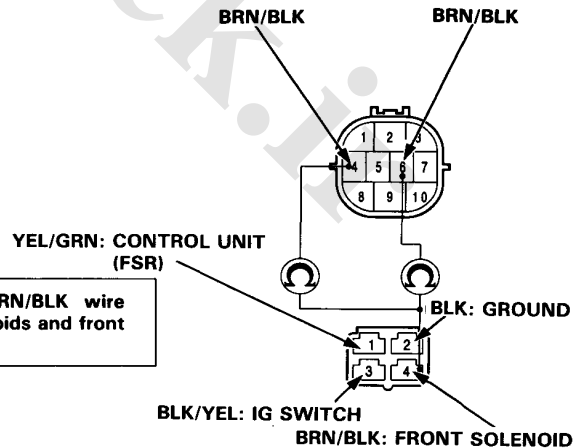

View from terminal side.

Problem Code 7-4: Rear Solenoid Problem

CAUTION: Use only the digital multimeter to check the system.

Disconnect the 10-P connector from the solenoids.

Check for resistance between the solenoid terminals:
 No.2 (RED/WHT) and No.5 (BRN/WHT): Rear Inlet
 No.9 (YEL/WHT) and No.5 (BRN/WHT): Rear Outlet

Is there 1-3Ω?

NO

Faulty solenoid.

YES

Disconnect the 12-P connector from control unit.

Check each wire for continuity between the control unit and rear solenoid:
 RED/WHT: Rear Inlet
 YEL/WHT: Rear Outlet

Is there continuity?

NO

Repair open in wire between the solenoid and control unit:
 RED/WHT: Rear Inlet
 YEL/WHT: Rear Outlet

YES

Check each wire for continuity between the control unit and body ground:
 No.11 (RED/WHT): Rear Inlet
 No.6 (YEL/WHT): Rear Outlet

Is there continuity?


YES

Repair short in wire between the solenoid and control unit:
 RED/WHT: Rear Inlet
 YEL/WHT: Rear Outlet

NO


(To page 13-30)

SOLENOID-SIDE CONNECTOR

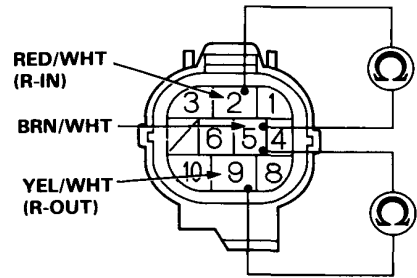


View from terminal side.

HARNESS-SIDE CONNECTOR

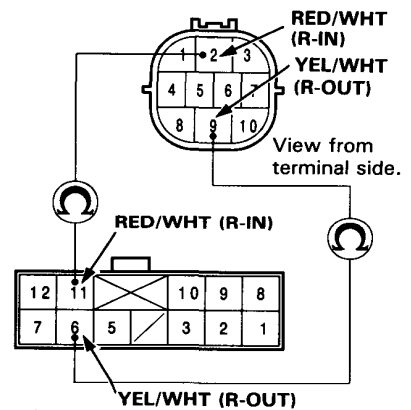

View from control unit terminal side.

12-P CONNECTOR

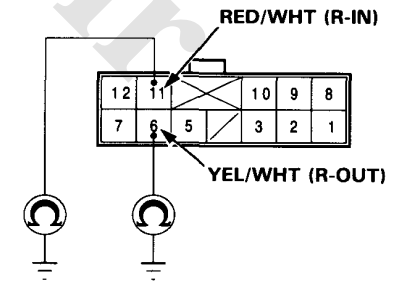

View from control unit terminal side.

(cont'd)

Troubleshooting

Flowcharts (cont'd)

(From page 13-29)

Remove the rear fail-safe relay.

Check for relay function.

Does it work properly?

NO

Faulty rear fail-safe relay.

YES

Check for continuity between the fail-safe relay connector No. 3 (BLK) terminal and body ground.

Is there continuity?

NO

Repair open in BLK wire between the fail-safe relay and ground or poor ground (G503).

YES

Check BLU/BLK wire for continuity between the solenoid and rear fail-safe relay.


Is there continuity?

NO


Repair open in BLU/BLK wire between the solenoid and rear fail-safe relay.

YES

Check for loose control unit connectors. If necessary, substitute a known-good control unit and recheck.

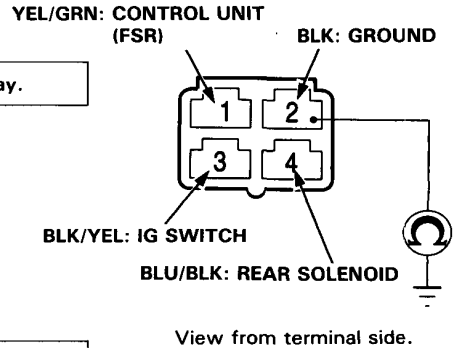

HARNES-SIDE CONNECTOR

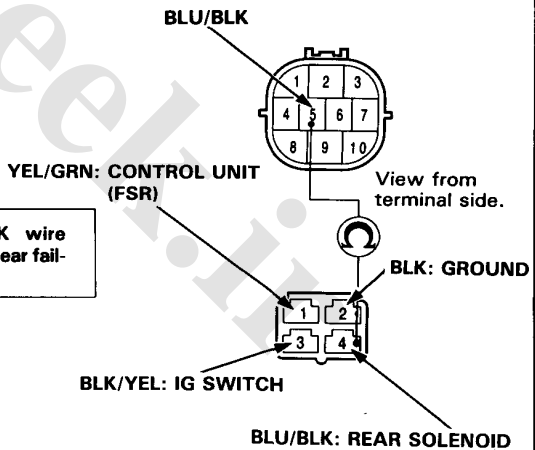


Master Cylinder, Booster (LHD only)

Removal/Installation

CAUTION:

- Be careful not to bend or damage the brake pipes when removing the master cylinder and booster.
- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid. Use only clean DOT 3 or 4 brake fluid.
- When connecting the brake pipes, make sure that there is no interference between the brake pipes and other parts.
- Do not disassemble the booster. Replace it as a complete assembly.

1. Drain the brake fluid from the master cylinder.
2. Disconnect the brake fluid level switch connectors.
3. Disconnect the brake pipes from the master cylinder.
4. Remove the master cylinder mounting nuts and the master cylinder.
5. Disconnect the vacuum hose from the booster and remove the check valve bracket.
6. Loosen the pushrod locknut.
7. Remove the cotter pin and joint pin.
8. Remove the booster mounting nuts.
9. Remove the clevis from the pushrod, then remove the booster from the body.

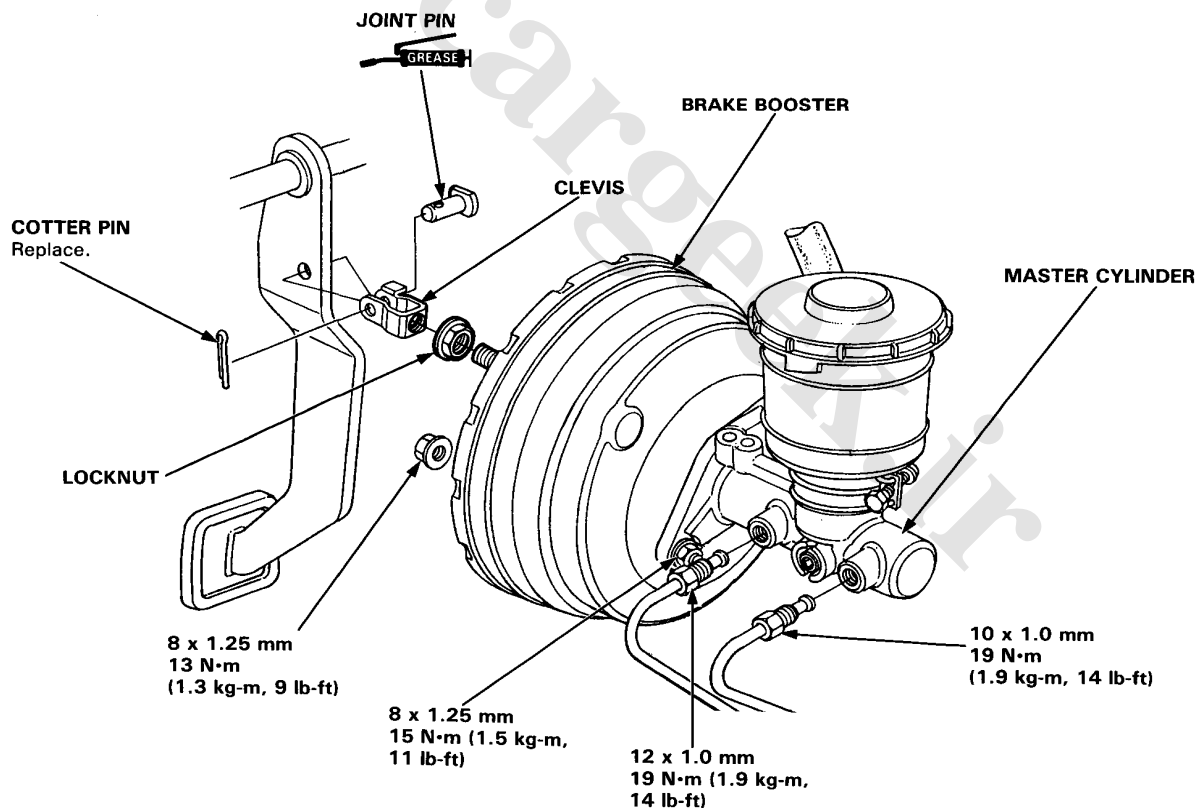


(cont'd)

Master Cylinder, Booster (LHD only)

Removal/Installation (cont'd)

10. Install the booster on the body and install the clevis onto the pushrod.
11. Adjust the pushrod length as shown.

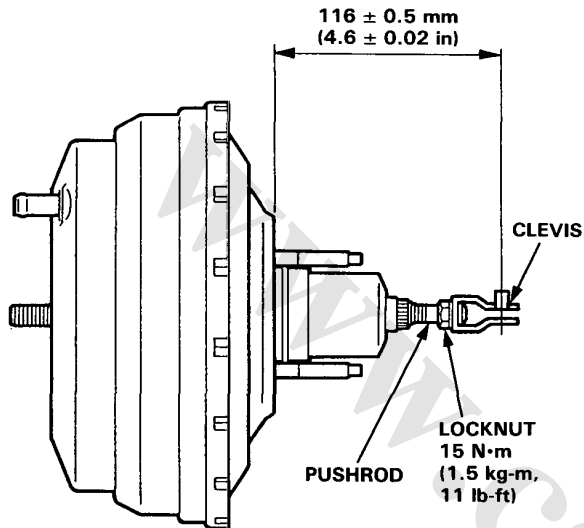

12. Install the removed parts in the reverse order of removal.

NOTE: Before installing the master cylinder, check and adjust the pushrod clearance.


13. After installation, check and adjust the brake pedal height (page 13-3).
14. Fill and bleed the brake system.

Hydraulic System

Index/Hydraulic Connections

CAUTION: Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.

WARNING Before removing the modulator-to-power unit high-pressure line, be sure to relieve the high pressure fluid from the maintenance bleeder (page 13-34).

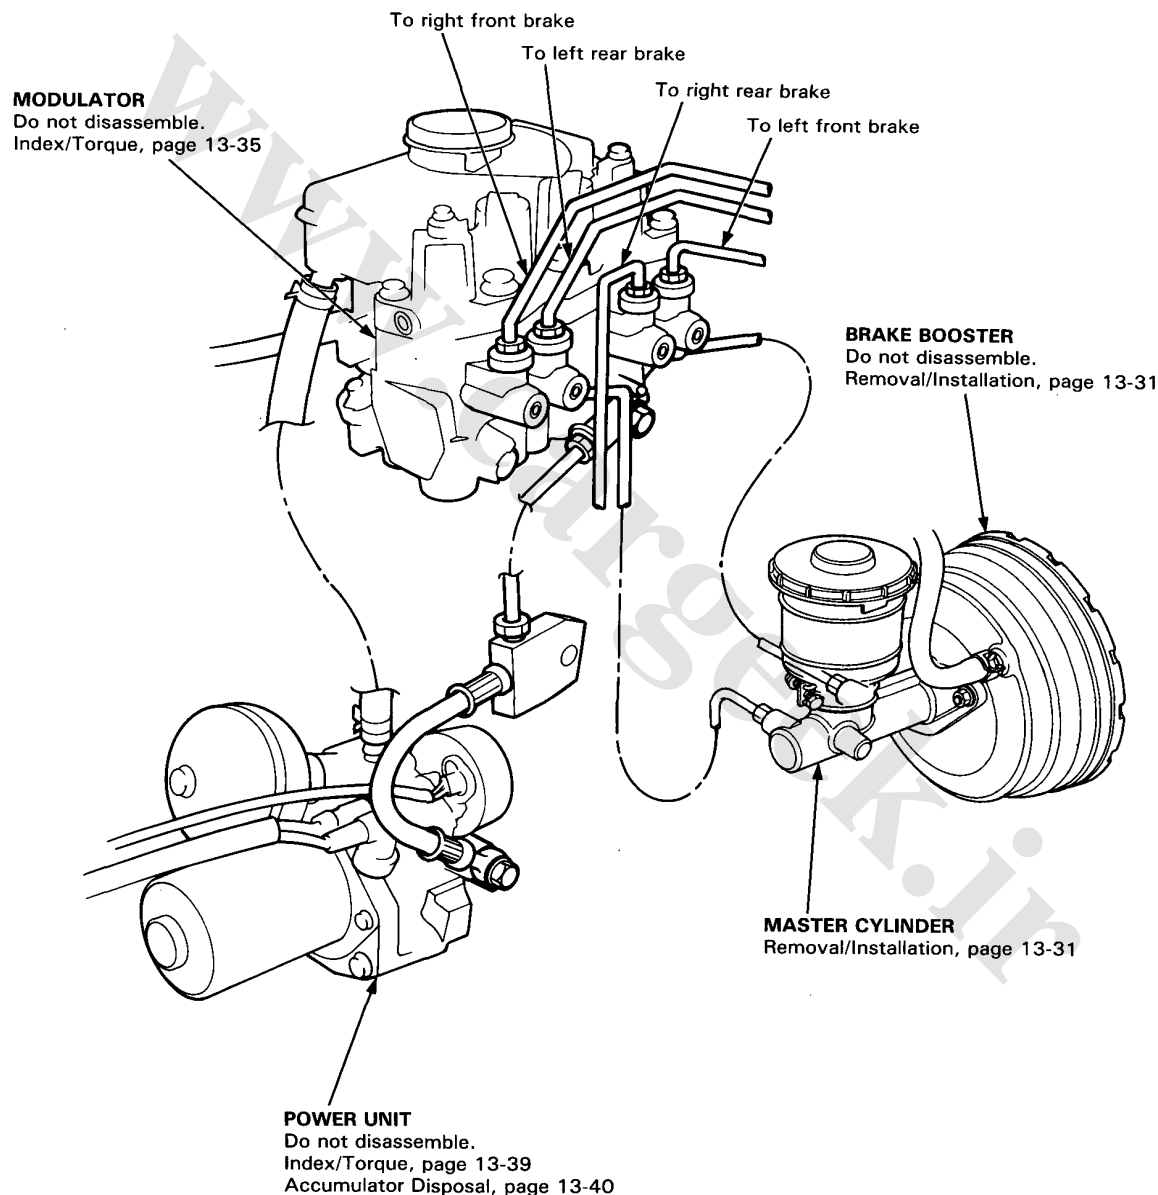

Hydraulic System

Relieving Accumulator/Line Pressure

▲ WARNING Use the Bleeder T-wrench before disassembling the parts shaded in the illustration.

1. Open the hood.
2. Remove the red cap from the bleeder on the modulator.
3. Install the Bleeder T-wrench on the maintenance bleeder and turn it out slowly 90° to collect high-pressure fluid into the reservoir. Turn the T-wrench out one complete turn to drain the brake fluid thoroughly.
4. Retighten the maintenance bleeder and discard the fluid.
5. Reinstall the red cap.

Reservoir Brake Fluid Draining


1. Draining brake fluid from modulator tank:
The brake fluid may be sucked out through the top of the modulator tank with a syringe. It may also be drained through the reservoir-to-power unit hose by disconnecting it at the power unit.
2. Draining brake fluid from master cylinder:
Loosen the bleed screw and pump the brake pedal to drain the brake fluid from the master cylinder.

▲ WARNING

- High-pressure fluid will squirt out if the shaded pipe/hose is removed.
- To drain high-pressure brake fluid, follow the procedure on this page.

BLEEDER T-WRENCH
07HAA—SG00100 or
07HAA—SG00101

MAINTENANCE
BLEEDER
9 N·m
(0.9 kg·m,
7 lb·ft)

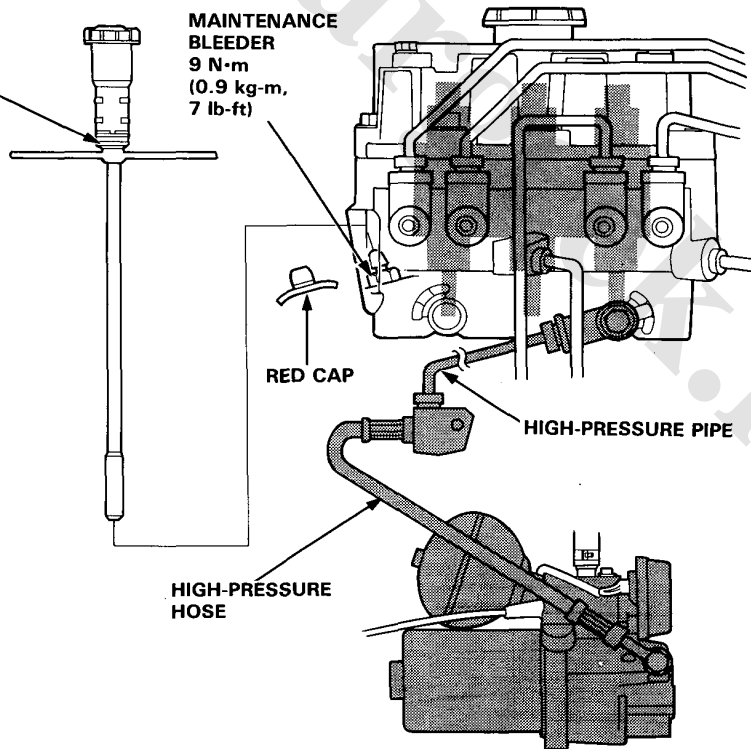


Modulator Unit

Index/Torque

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid. Use only clean DOT 3 or 4 brake fluid.

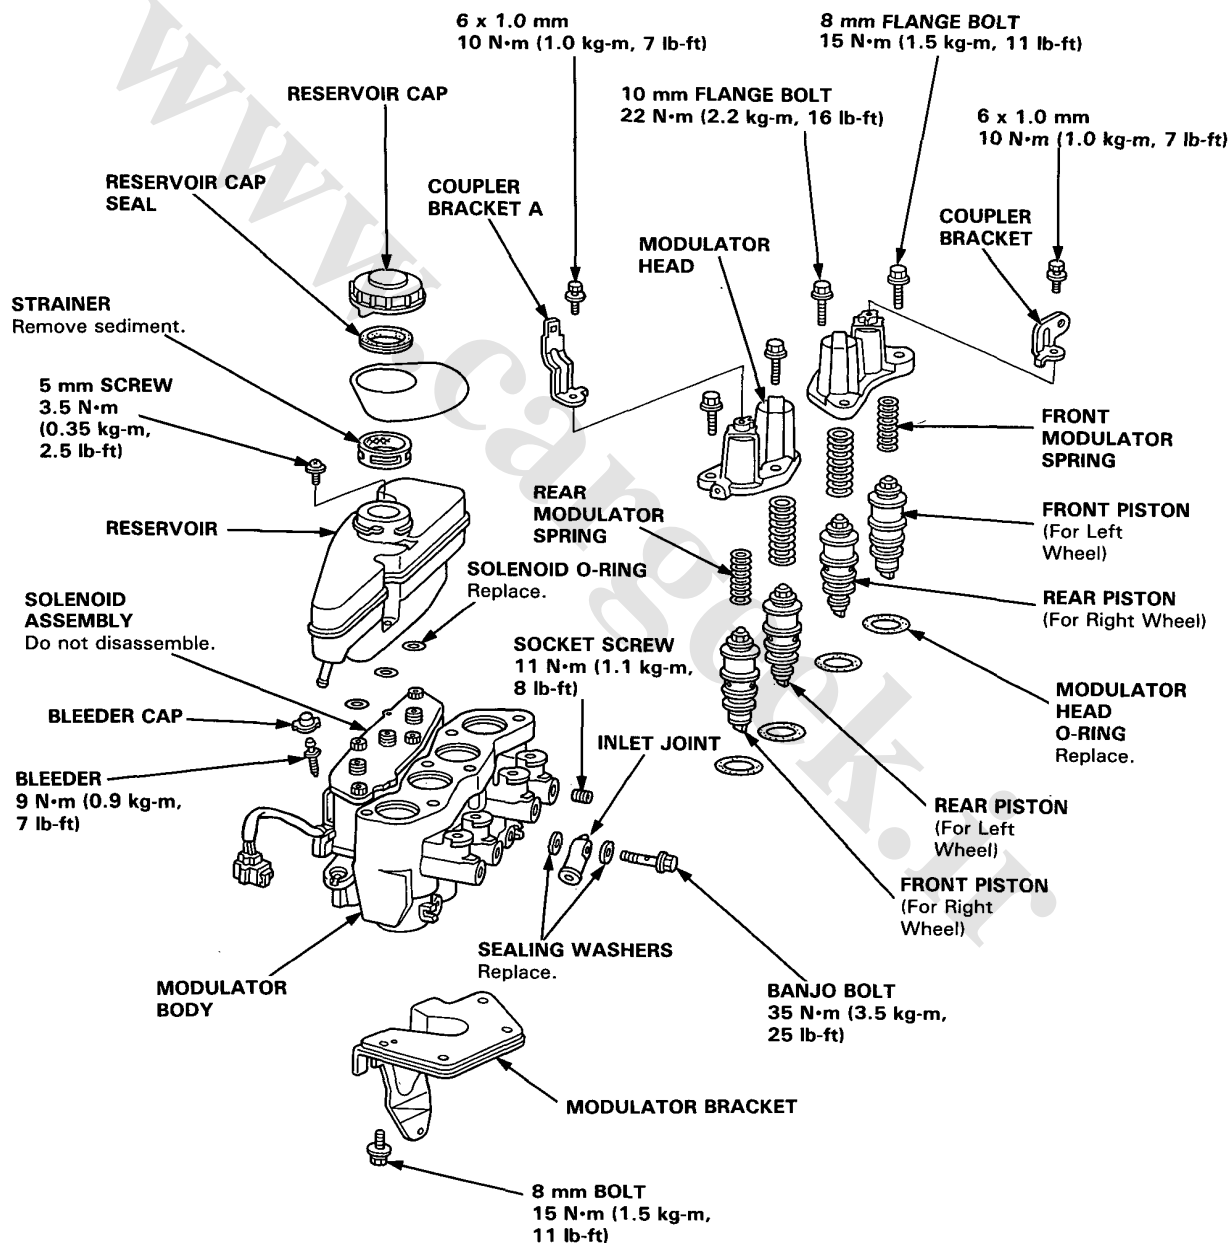


Solenoids

Leak Test

NOTE: If a solenoid leaks excessively, the brake fluid level in the modulator reservoir tank will rise when operating the ABS motor. The modulator reservoir may also overflow.

1. Connect an ohmmeter between the YEL and YEL terminals of the pressure switch connector.
2. Attach the positive (+) lead of a fully charged 12 V battery to the RED/WHT terminal of the motor connector and negative (-) lead to the GRN terminal, and install a switch between negative lead and GRN terminal as shown.
3. Turn the switch on to allow sufficient pressure to build up within the accumulator and check for continuity. If the ohmmeter shows continuity (pressure switch turned on), run the motor for 10 seconds more, then turn the switch off.

- Check if the solenoid hisses or squeaks. Replace the modulator if the solenoid hisses or squeaks.
- Check the pressure switch for continuity within 30 minutes. It is normal if there is continuity. If there is no continuity, a solenoid is faulty or high-pressure line leaks.

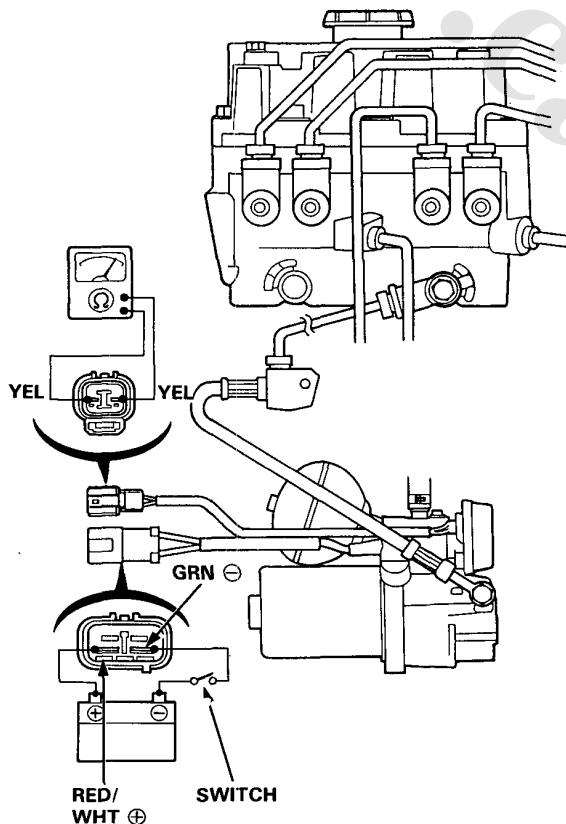


Piston

Replacement

CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Replace parts with new ones whenever specified to do so.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid. Use only clean DOT 3 or 4 brake fluid.


1. Remove the modulator head.
2. Remove the modulator springs and O-rings.

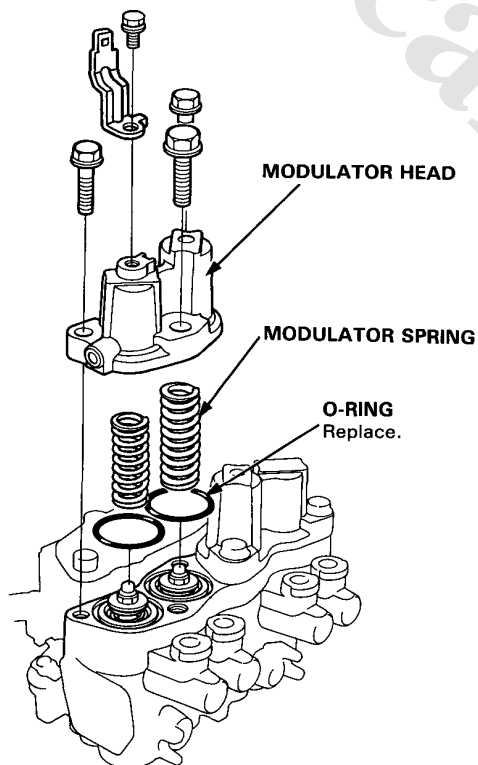


3. Insert the screwdriver under the spring seat, pry the piston assembly off slightly, then pull the piston assembly while grasping the locknut with pliers.

NOTE:

- Place a suitable washer between the screwdriver and modulator body to prevent damage to the modulator body.
- Be careful not to damage the piston sleeve.

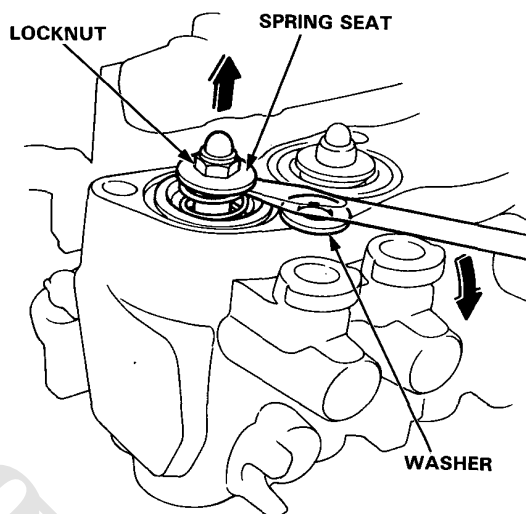

4. Apply rubber grease to the shaded areas of a new piston assembly as shown.

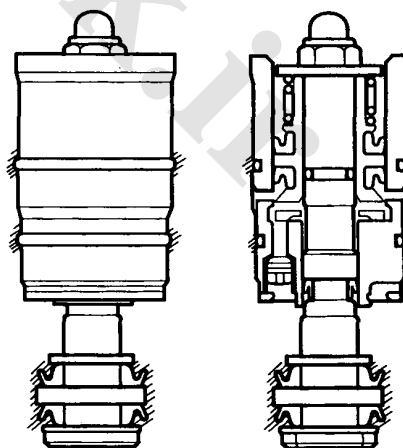


(cont'd)


Piston

Replacement (cont'd)

5. Pour brake fluid into the piston hole in the modulator body.
6. Coat the sliding surface of the piston with brake fluid and install the piston assembly into the modulator body.

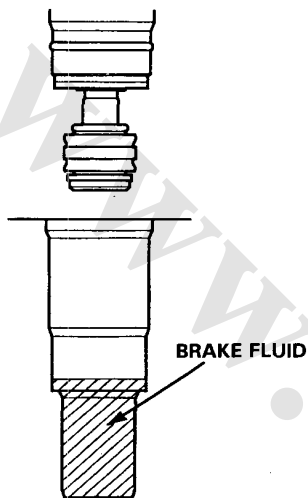

7. Push down the piston several times until no bubbles come out from the solenoid side.

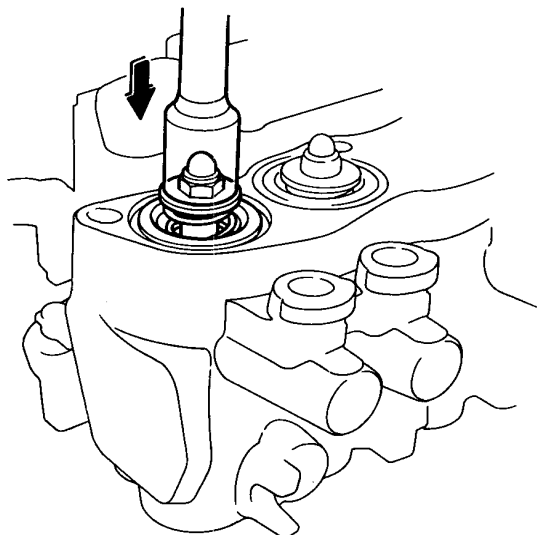


8. Install new O-rings into the grooves in the modulator body.
9. Install the modulator springs.

NOTE: Do not interchange the front and rear modulator springs. The longer spring is the rear modulator spring.

10. Install the modulator head onto the body, being careful not to bind the O-rings.

8 mm FLANGE BOLT
15 N·m (1.5 kg-m,
11 lb-ft)

10 mm FLANGE BOLT
22 N·m (2.2 kg-m,
16 lb-ft)

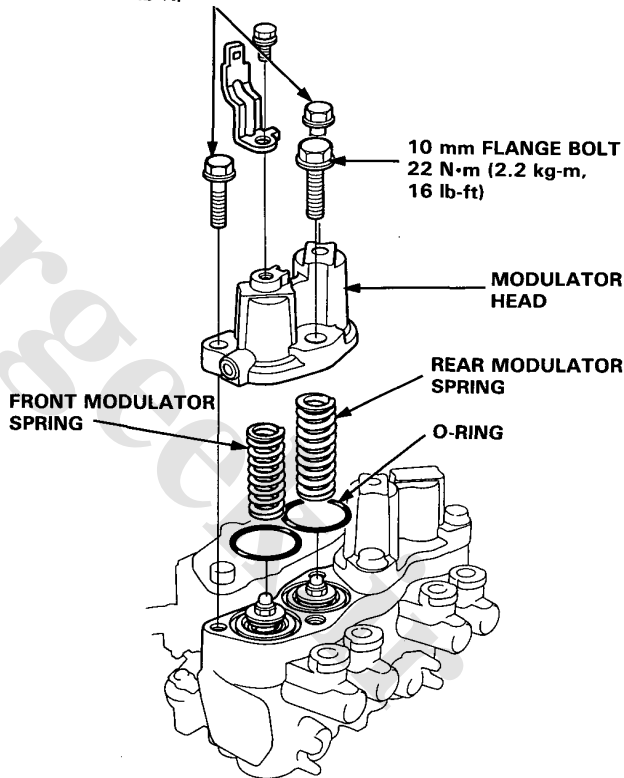


Power Unit

Index/Torque

⚠ WARNING Before removing the modulator-to-power unit high-pressure line, be sure to relieve the high pressure fluid from the maintenance bleeder (page 13-34).

CAUTION:

- Be careful not to bend or damage the brake pipes when removing the power unit.
- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- To prevent spills, cover the hose joints with rags or shop towels.
- Before reassembling, check that all parts are free of dust and other foreign particles.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid. Use only clean DOT 3 or 4 brake fluid.
- When connecting the brake pipes, make sure that there is no interference between the brake pipes and other parts.
- Do not disassemble the power unit. Replace the power unit as an assembly if it is defective.

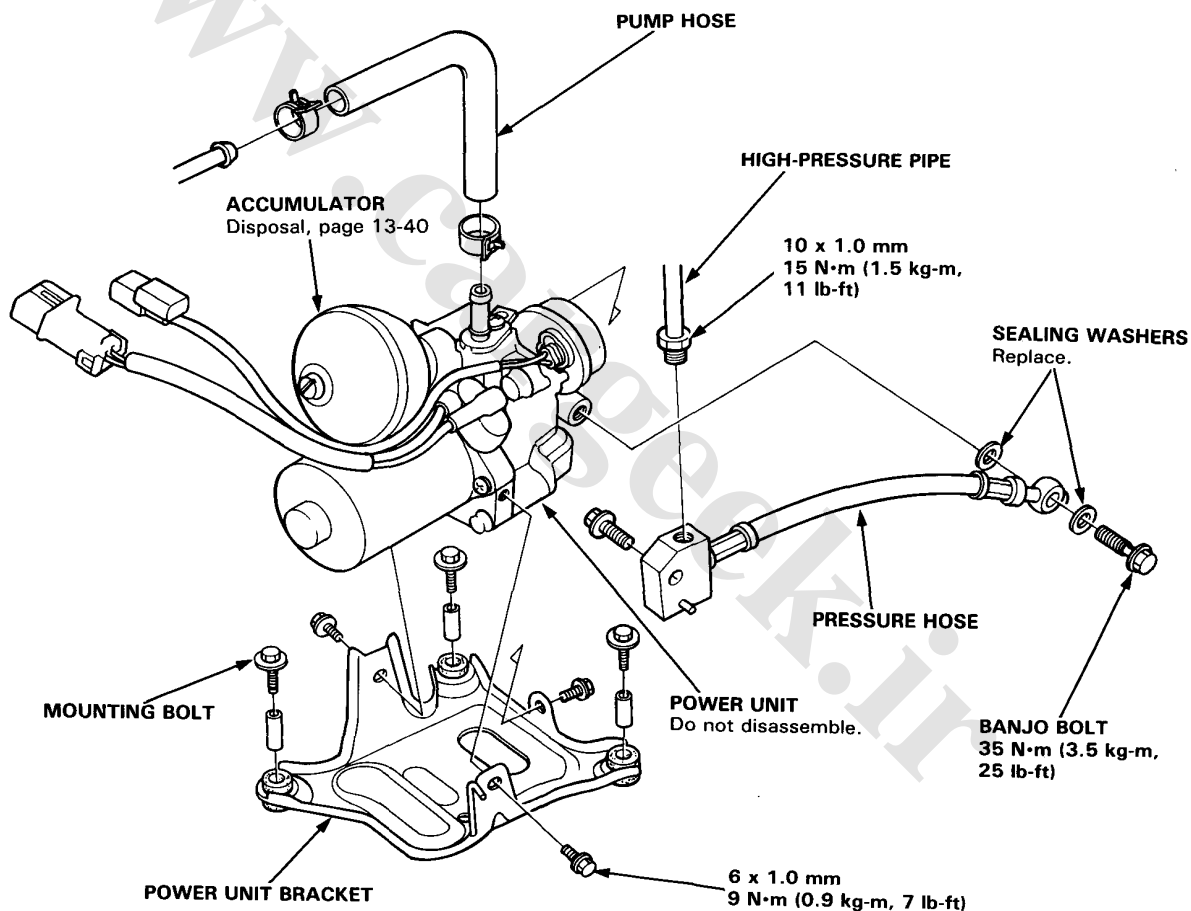


Power Unit


Accumulator Disposal

⚠ WARNING The accumulator contains high pressure nitrogen gas. Do not puncture, expose to the flame, or attempt to disassemble the accumulator or it may explode and severe personal injury may result.

1. Secure the power unit in a vise and remove the accumulator from the power unit.

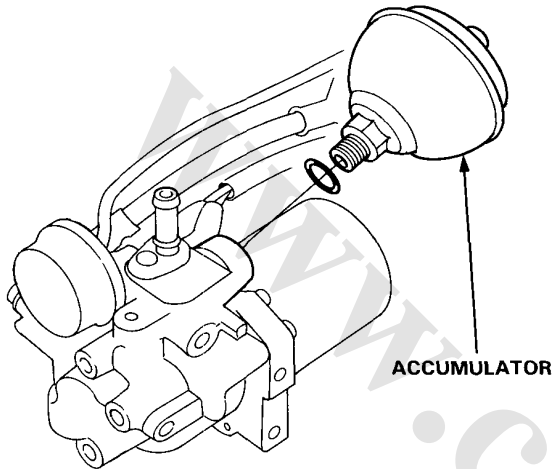

2. Secure the accumulator in a vise so that the relief plug points straight up.
3. Slowly turn the plug 3-1/2 turns and then wait 3 minutes for all pressure to escape.
4. Remove the plug completely and dispose of the accumulator.

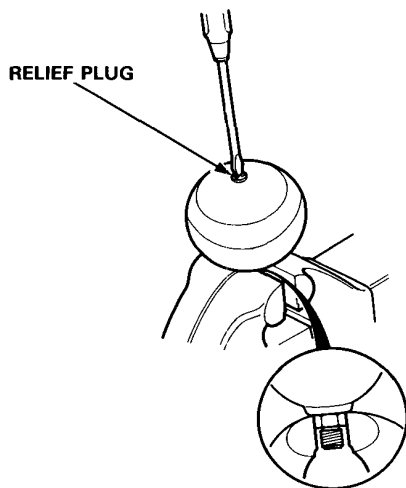


Bleeding

Air Bleeding with ALB Checker


CAUTION:

- Do not spill brake fluid on the car; it may damage the paint; if brake fluid does contact the paint, wash it off immediately with water.
- Make sure no dirt or other foreign matter is allowed to contaminate the brake fluid.
- Do not mix different brands of brake fluid as they may not be compatible.
- Do not reuse the drained fluid. Use only clean DOT 3 or 4 brake fluid.


1. Place the vehicle on level ground with the wheels blocked. Put the transmission in neutral for manual transmission models, and in P for automatic transmission models. Release the parking brake.
2. Disconnect the 6-P inspection (orange) connector from the cross-member under the passenger's seat and connect the inspection connector to the ALB checker.

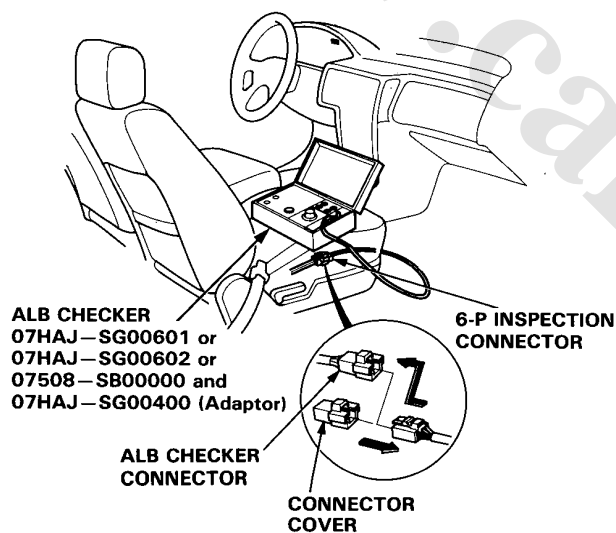

3. Fill the modulator reservoir to the MAX level and install the reservoir cap.

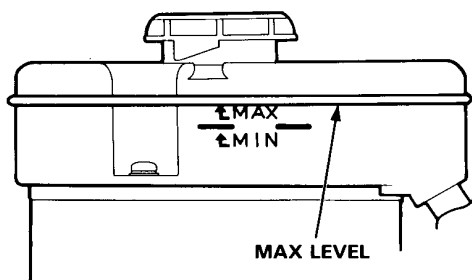

4. Start the engine and allow it to idle for a few minutes, then stop it. Check the fluid level in the modulator reservoir and refill to the MAX level if necessary.
5. Bleed high-pressure fluid from the maintenance bleeder with the special tool.

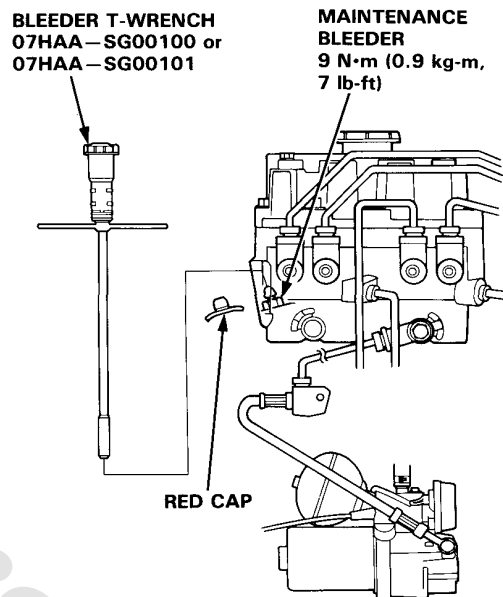

6. Start the engine and allow it to idle for a few minutes, then stop it. Check the fluid level in the modulator reservoir and refill to the MAX level if necessary.
 7. Turn the Mode Selector switch of the checker to 2.
 8. While depressing the brake pedal firmly, push the Start Test switch to operate the modulator. There should be kickback on the brake pedal. If not, repeat steps 5 to 8.
- NOTE: Continue to depress the brake pedal firmly when operating the checker.
9. Turn the Mode Selector switch to 3, 4 and 5. Perform step 8 for each of the test mode positions.
 10. Refill the modulator reservoir to the MAX level and install the reservoir cap.

▲ WARNING Disconnect the ALB checker before driving the car. A collision can result from a reduction or complete loss of braking ability, causing severe personal injury or death.

Bumper
 Front Replacement
Carpet/Door Sill Mouldings
Console
Dashboard
 Component Removal/Installation
 Replacement
Front Grille/Licence Plate Trim
Front Seat - back Cover
Rear Emblems


www.cargeek.ir



Front Bumper Replacement

NOTE: An assistant is helpful when removing the front bumper.

1. Open the hood, then remove the bumper mounting nuts.
2. Remove the right and left front turn signal lights.
3. Remove the 2 bumper mounting screws on each side at the corner edge of the bumper.
4. Remove the 2 lower clips, the lower mounting bolts on each side and the 4 bumper mounting bolts.
NOTE: When removing the clips, loosen the screw, then remove the clips with a clip remover.
5. Remove the bumper by sliding it forward.
NOTE: Take care not to scratch the bumper.

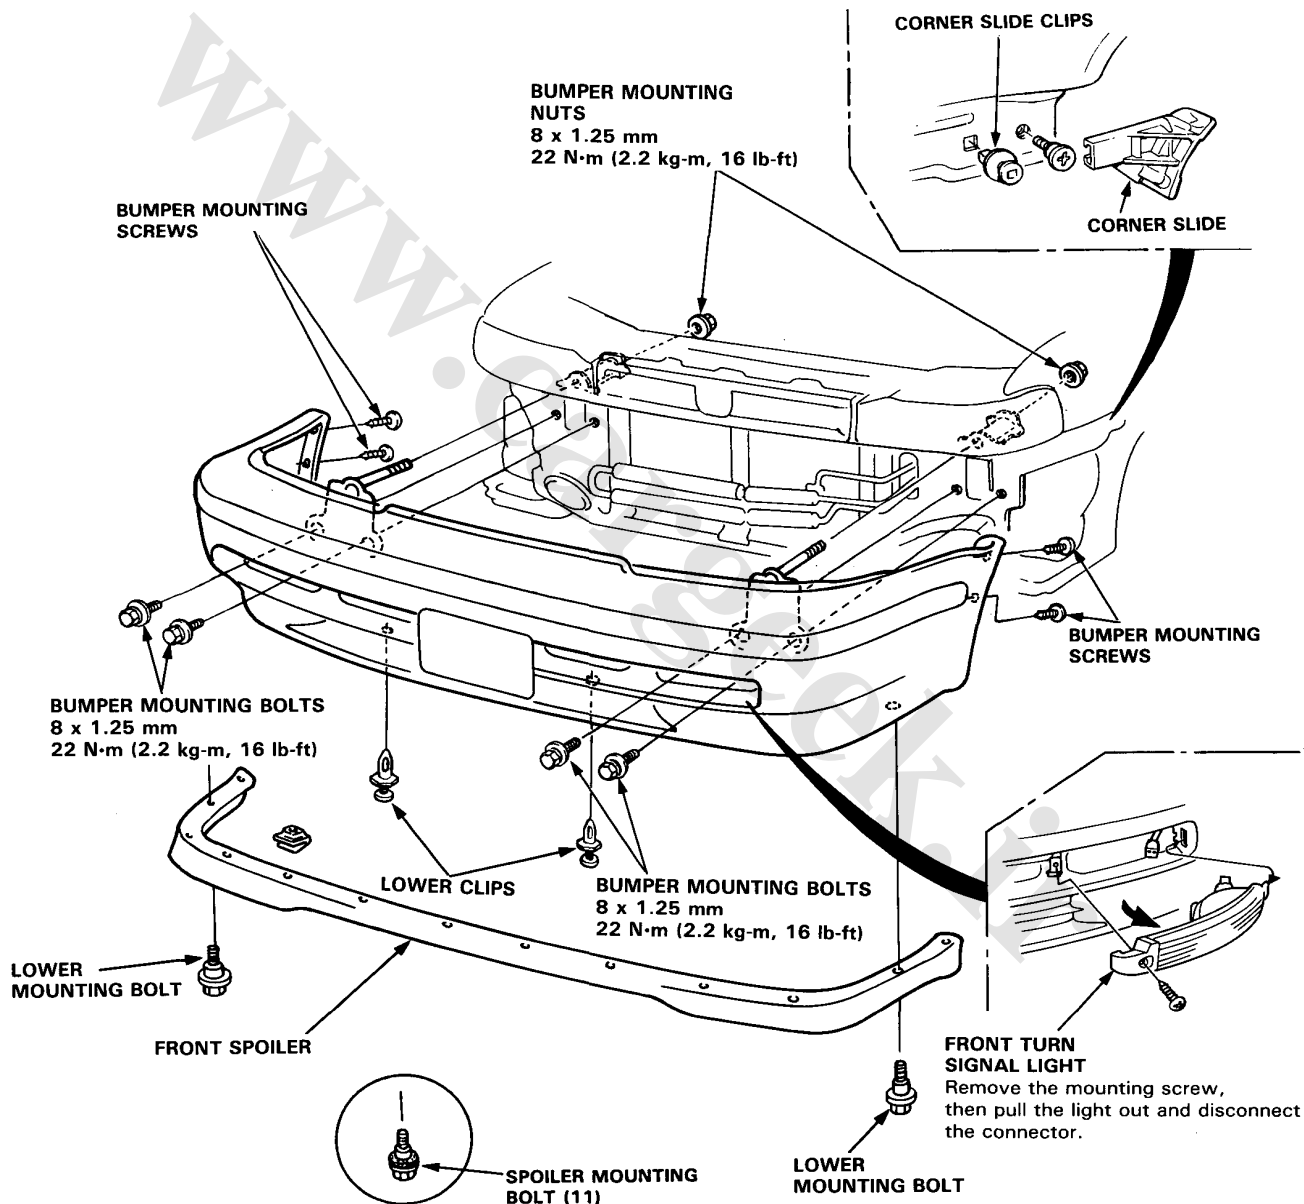

6. Installation is the reverse of the removal procedure.

Carpet/Door Sill Moldings

Replacement

Aero Deck (KG, KE):





SRS wire harnesses are routed near the carpet.

CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

1. Remove:
 - Front seats
 - Rear seat cushion
 - Consoles
 - Open cover
 - Front seat belt lower anchors
 - Center pillar lower trims
 - Kick panels and door sill moldings
2. Pry out the clips at the rear edge and under the dashboard.
3. Remove the carpet by sliding it rearward.

SRS Type I

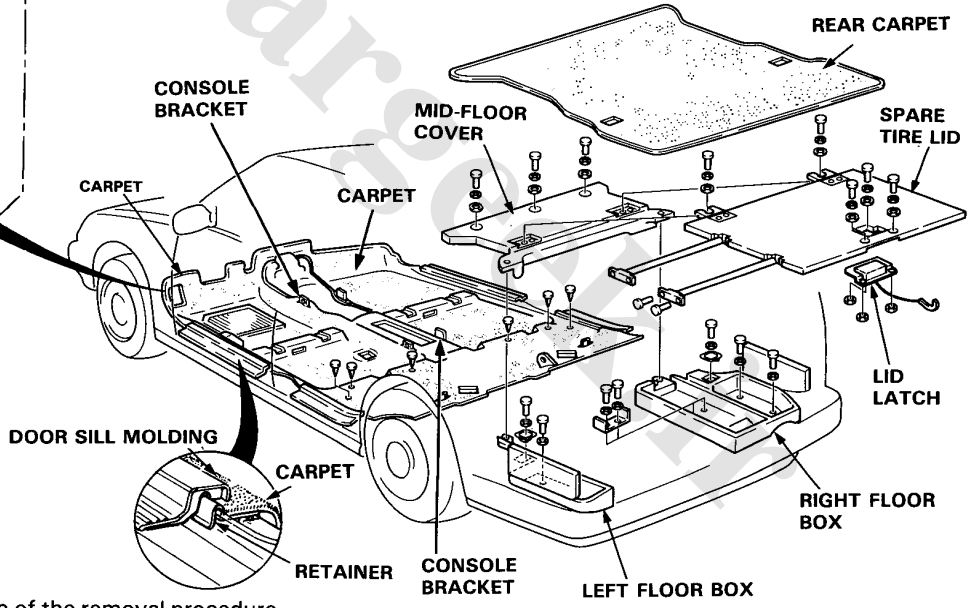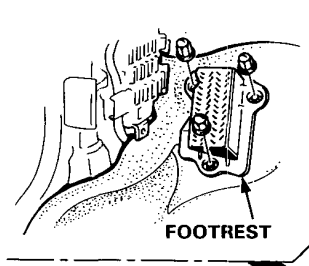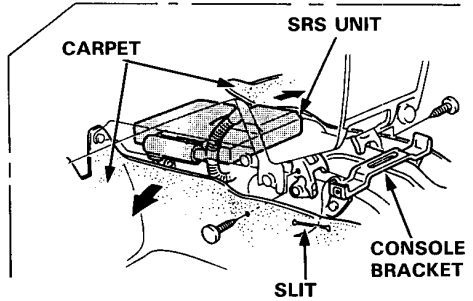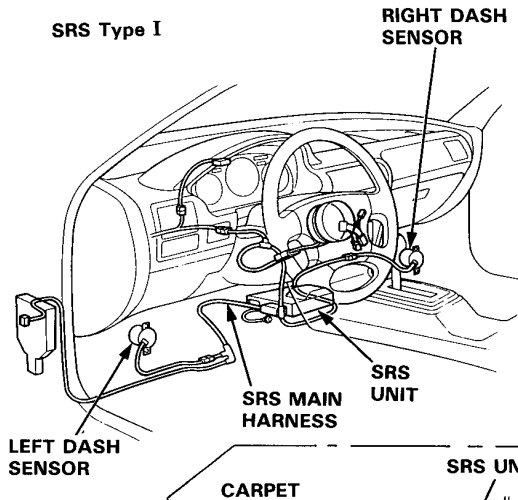

4. Installation is the reverse of the removal procedure.

NOTE:

- Take care not to damage, wrinkle or twist the carpet.
- Make sure the seat harnesses are routed correctly.
- Pass the console bracket through the carpet.



Console

Replacement


Aero Deck (KG, KE):

SRS harnesses are routed near the console.


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

SRS Type I

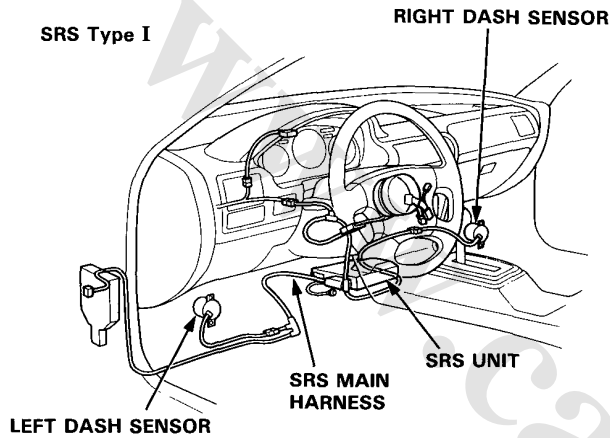


Beverage Holder removal:
(KB other model)

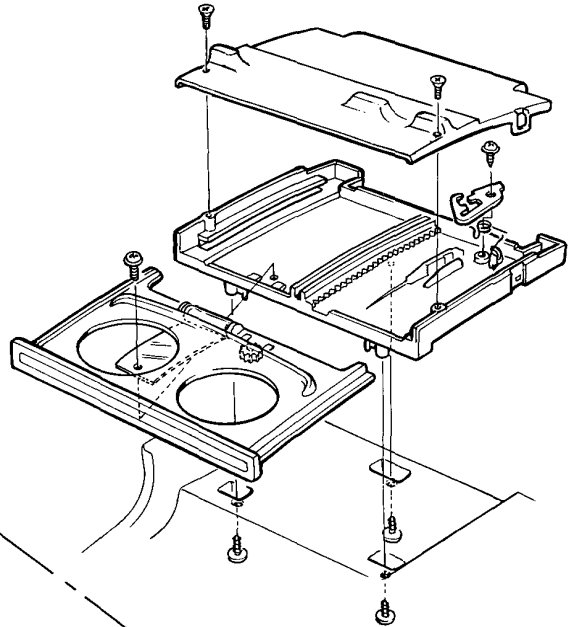

Disassemble in numbered sequence.

NOTE:

- Lift up the parking brake lever.
- For manual transmission models, remove the shift lever knob.
- Remove the front and rear console as an assembly.
- Take care not to scratch the consoles and dashboard.

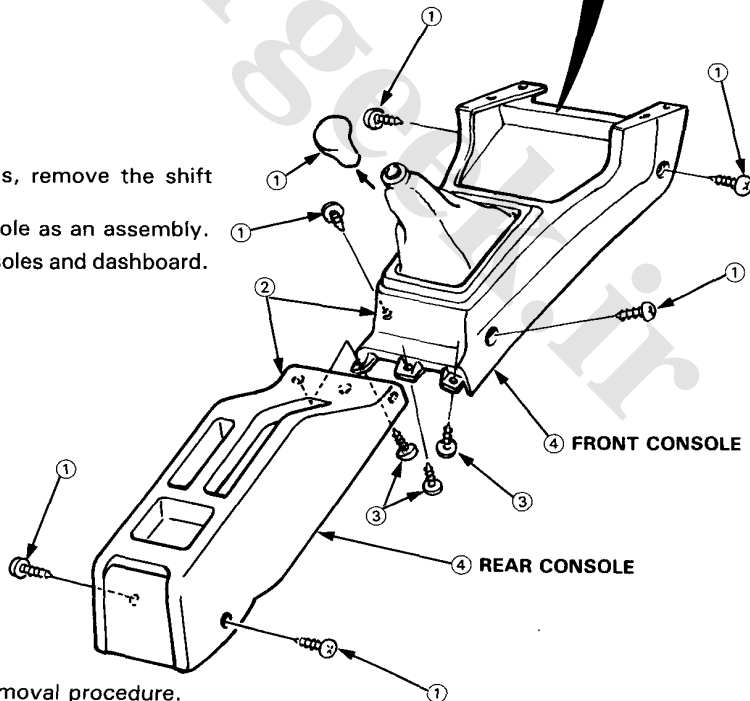

Installation is the reverse of the removal procedure.



Dashboard

Component Removal/Installation

SRS wire harnesses are routed near the dashboard and steering column.



CAUTION:

- All SRS electrical wiring harnesses are covered with yellow other insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

SRS Type I: Aero Deck (KG, KE)

RIGHT DASH SENSOR




SRS Type II: Sedan

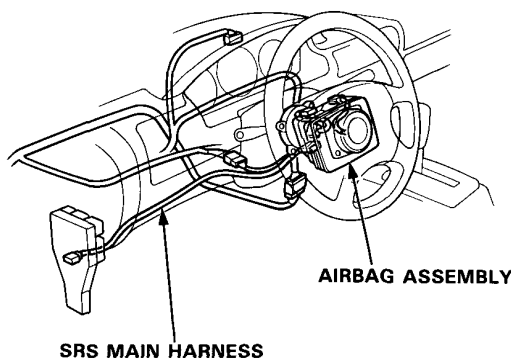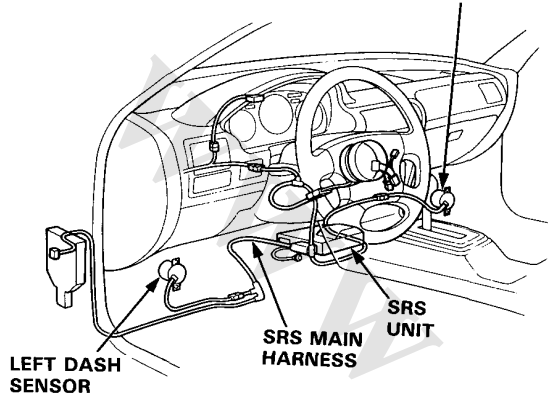

Instrument Panel Removal:

NOTE: Take care not to scratch or score the dashboard and instrument panel.

1. Remove:
 - Console (page 14-3)
 - Ashtray and ashtray holder
 - Stereo radio/cassette
 - Coin box, cruise control master switch, sunroof switch and panel brightness controller
 - Side and center air vents
2. Remove the 12 mounting screws and disconnect the connectors.
3. Carefully pull out the instrument panel from the dashboard.

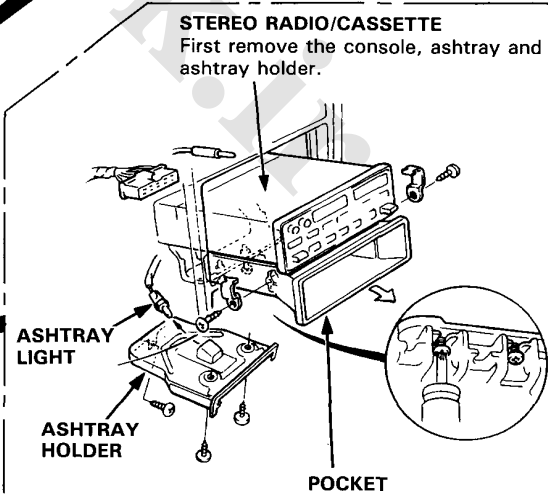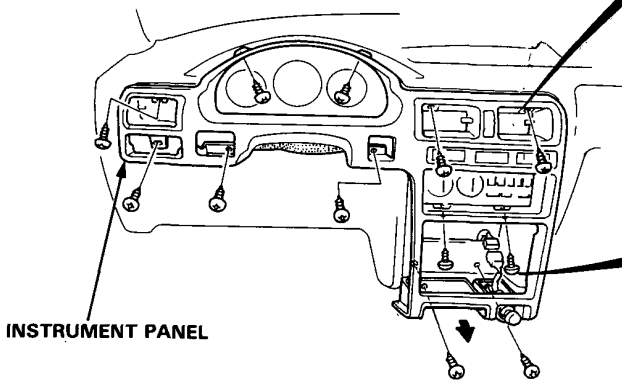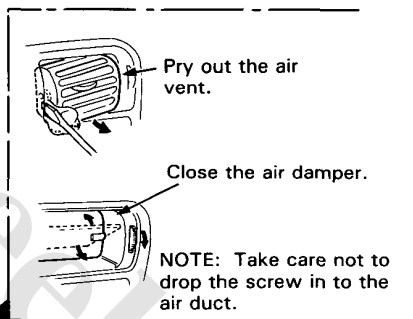

4. Installation is the reverse of the removal procedure.

Dashboard


Replacement

SRS wire harnesses are routed near the dashboard and steering column.

CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damage wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

SRS Type I: Aero Deck (KG, KE)

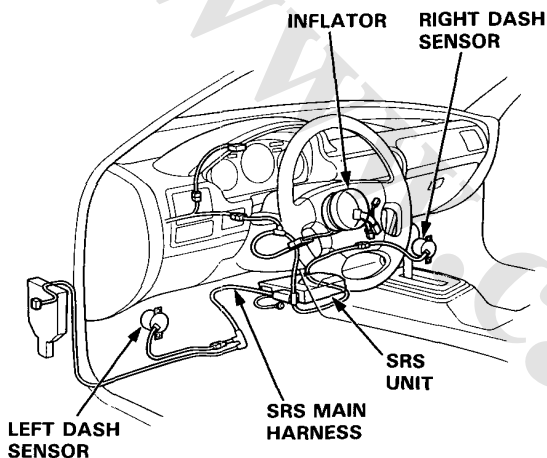

⚠ WARNING To avoid accidental deployment and possible injury always install the protective short connector on the inflator connector when the harness is disconnected.

SRS Type II: Sedan

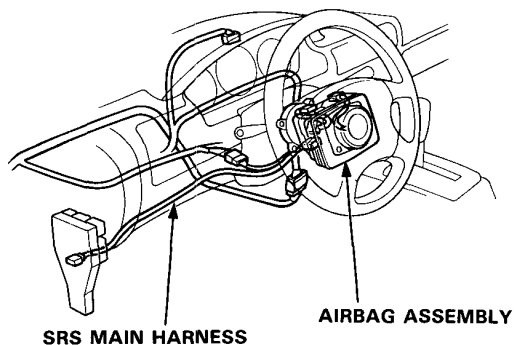


⚠ WARNING Before removing the steering column, first disconnect the connector between the slip ring and the SRS main harness.

1. Remove the console (page 14-3).
2. Remove the lower panel and knee bolster (KB other model only).
3. Disconnect the cable reel connector or slip ring connector (see Section 16).


SRS Type I: Aero Deck (KG, KE)

Install the short connector (RED) on the airbag.

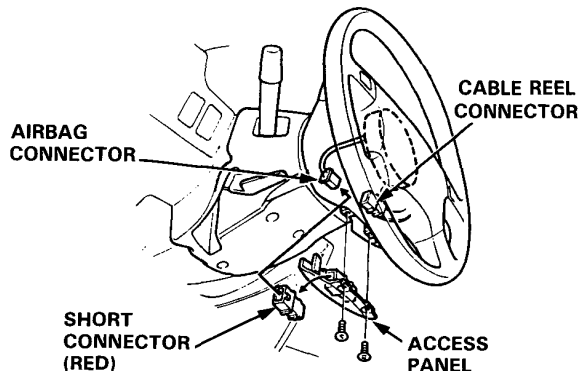

SRS Type II: Sedan

Remove the steering column lower cover. Pull out the connector lock, then disconnect the SRS main harness connector from the slip ring.

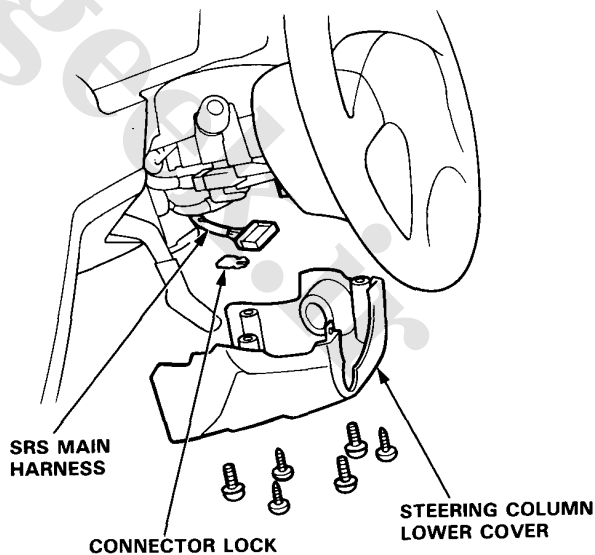




- Lower or remove the steering column (see Section 11).


SRS Type I: Aero Deck (KG, KE)

Lower the steering column.

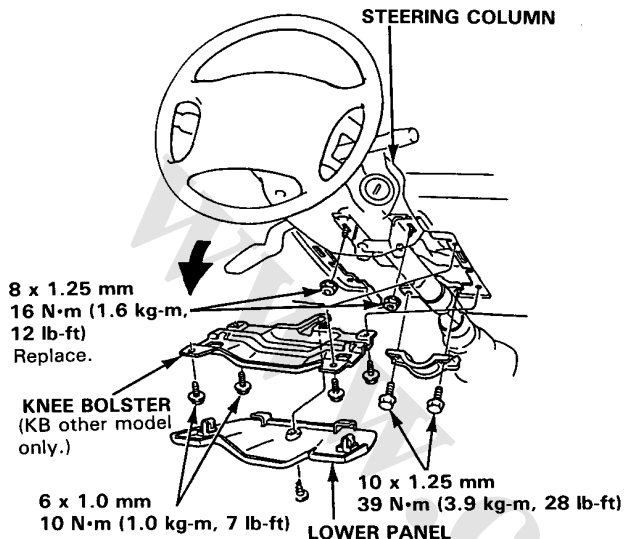

SRS Type II: Sedan


Remove the steering column.

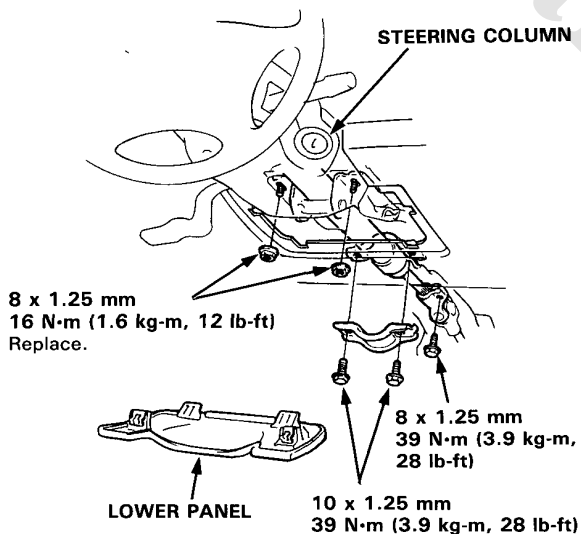

NOTE: To prevent damage to the steering column, wrap it with a shop towel.


- Disconnect the dashboard wire harness from the connectors and fuse box.
- Remove the radio/pocket and disconnect the dashboard wire harness.

Driver's side:

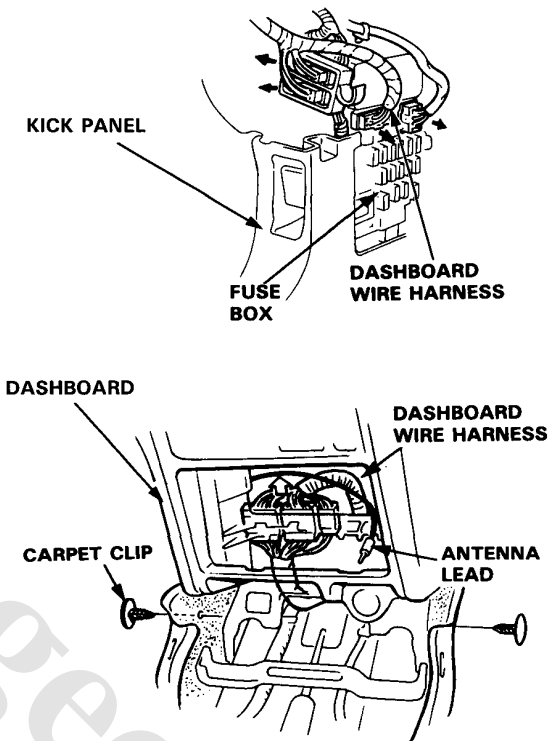

- Disconnect the heater control cable and function control cable (Lever type).

Passenger's side:

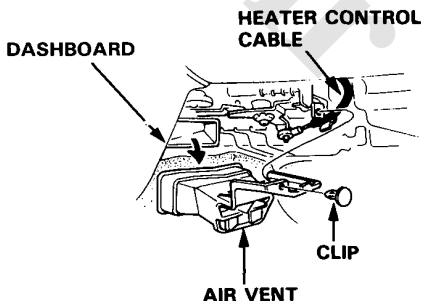

(cont'd)


Dashboard

Replacement (cont'd)

8. Remove the caps on both side and clock.
9. Remove the 7 dashboard mounting bolts.
10. Lift and remove the dashboard.

NOTE:

- Use protective tape on the bottom of the front pillar trim.
- Take care not to scratch the dashboard.
- When prying with a flat tip screwdriver, wrap it with protective tape to prevent damage.

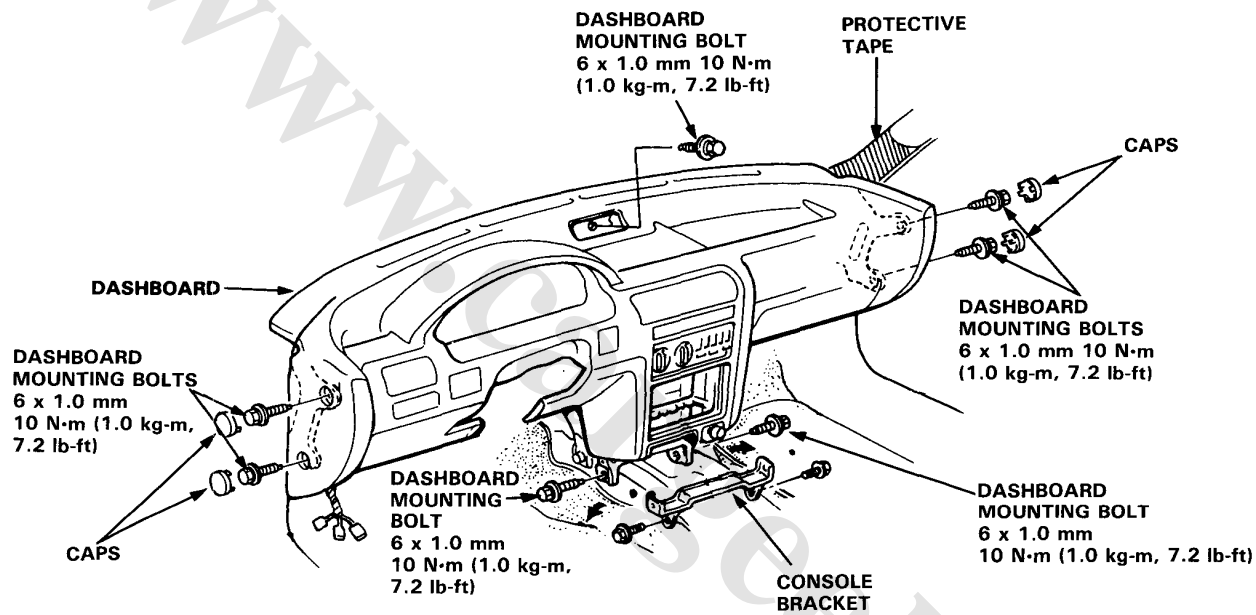

11. Installation is the reverse of the removal procedure.

NOTE:


- Make sure the dashboard fits onto the body correctly.
- Before tightening the dashboard bolts, make sure the dashboard wires are not pinched, and that the dashboard is not interfering with the heater control and function cables.

Front Grille/License Plate Trim

Front Grille Replacement

NOTE: Take care not to damage the front grille and grille moldings.

1. Remove the 5 screws.
2. Push the clips on each side with a flat tip screwdriver as shown, then remove the front grille.
3. Set the clips onto the front grille, then install the front grille in the reverse order of removal.

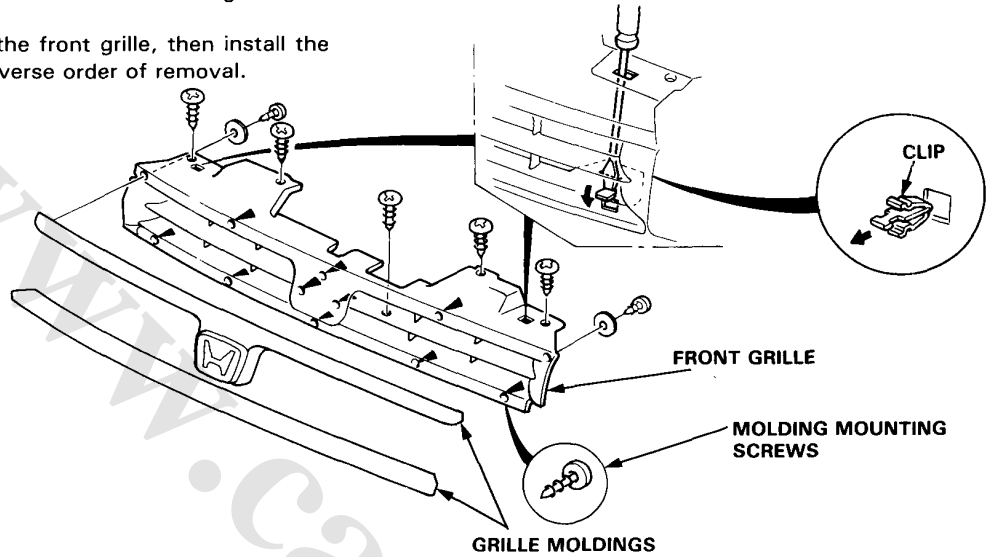

License Plate Trim Replacement



1. Remove the taillights and license plate.
2. Remove the bolts and detach the clips from inside of the trunk lid, then remove the license plate trim.

NOTE: Take care not to scratch the trim.

3. Installation is the reverse of the removal procedure.

NOTE: If necessary, replace any damaged clips.

⊗ : Clip locations

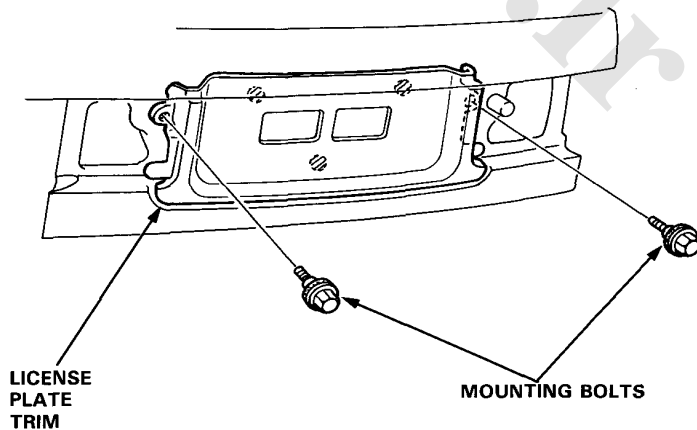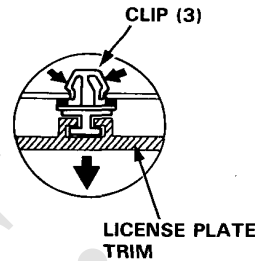

Front Seat-back Cover


Replacement

CAUTION: Wear gloves to remove and install the seat cover.

NOTE: Take care not to split the seams or damage the cover.

Seat-back cover removal:

1. Remove the seat-back from the seat track and recline adjuster.
2. Remove the headrest from the seat-back.
3. Remove the lumbar support knob and armrest (KB other model).
4. Turn over the seat cover by releasing all the hooks and inside springs.
5. Remove the headrest guides, then remove the seat-back cover.

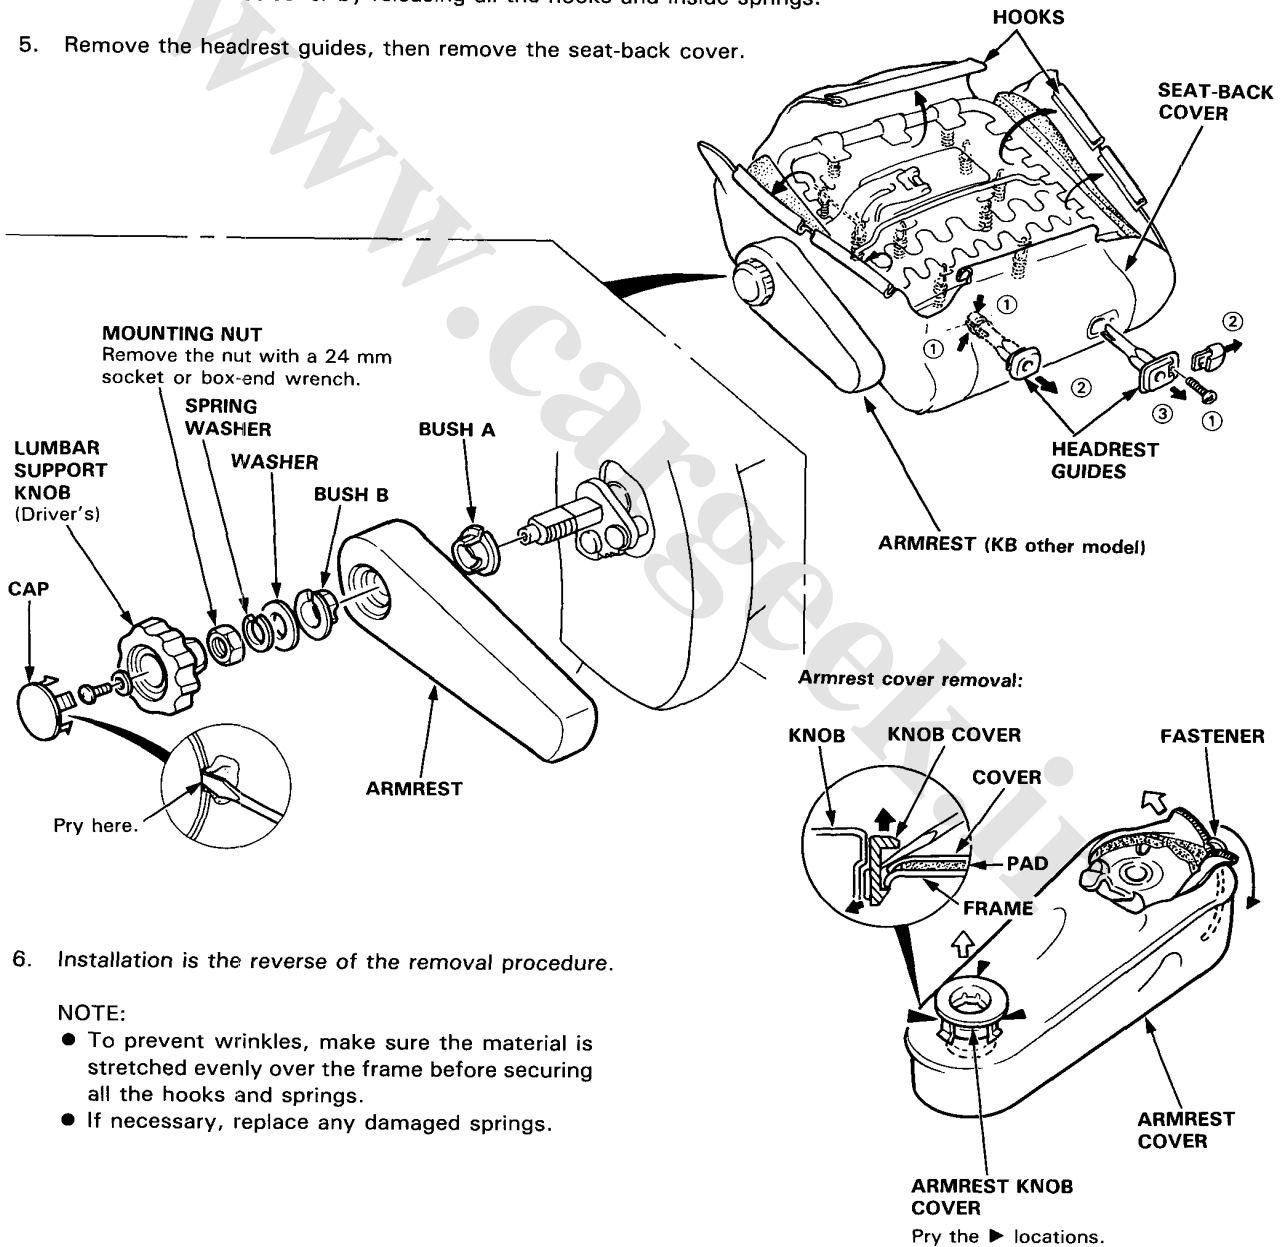

6. Installation is the reverse of the removal procedure.

NOTE:

- To prevent wrinkles, make sure the material is stretched evenly over the frame before securing all the hooks and springs.
- If necessary, replace any damaged springs.



Rear Emblems


Installation

Apply the emblems where shown.





NOTE:

- Before applying, clean the body surface with a sponge dampened in alcohol.
- After cleaning, keep oil, grease on water from getting on the surface.
- When applying, make sure there are no wrinkles in the emblems.

Sedan:

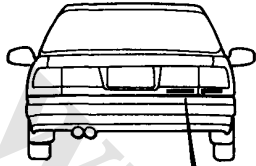

Aero Deck (KG, KE)/Wagon (KQ):

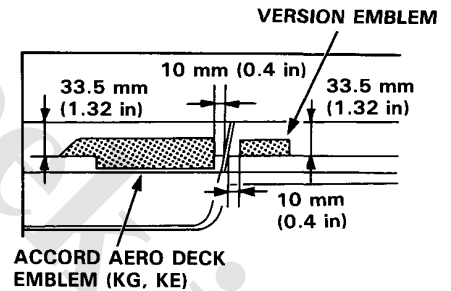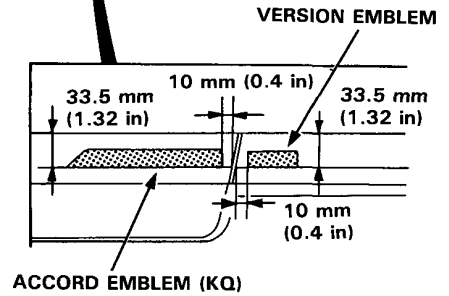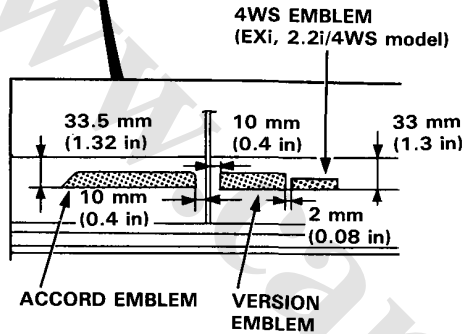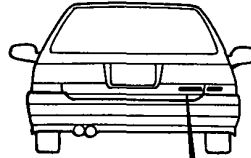

Heater and Air Conditioner

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Some models of the ACCORD SEDAN and ACCORD AERO DECK include a driver's side airbag, located in the steering wheel hub, as part of a Supplemental Restraint System (SRS). There are two types of SRS: Type I (SRS unit is not part of the airbag assembly), which is used for Aero Deck models, and type II (SRS unit is part of the airbag assembly), which is used for Sedan models. Information necessary to safely service the SRS is included in this shop manual. Items marked * on the contents page of each section include, * or are located near, SRS components. Servicing, disassembling or replacing these items will require special precautions and tools, and should therefore be done only by an authorized HONDA dealer.

WARNING

- To avoid rendering the SRS inoperative, which can lead to personal injury or death in the event of a severe frontal collision, all service work must be performed by an authorized HONDA dealer.
- Improper service, including incorrect removal and installation of the SRS, and replacing with wrong parts, can lead to personal injury caused by unintentional activation of the airbag.
- All SRS electrical wiring harnesses are covered with yellow outer insulation. Related components are located in the steering column, the dashboard, and behind the dashboard lower cover. Do not use electrical test equipment on these circuits.

Service work nearby and in the areas listed below may affect the SRS and must therefore be performed by an authorized HONDA dealer.

SRS Type I:


- Steering wheel
- Behind the instrument panel
- Under-dash fuse box
- Dashboard lower panel (repair and paint work)
- Center console
- Installing of car stereo units and other accessories
- A/C heater

SRS Type II:

- Steering wheel (Be careful that the steering wheel receives no strong shocks as the SRS unit (sensors), inflator, etc. are located in it.)
- Behind the instrument panel
- Under-dash fuse box

Outline of Model Change

- Before removing the heater assembly and the heater control panel, read the WARNING above. (Made necessary by change in the SRS system.), and see section 16.



SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

Some models of the ACCORD SEDAN and ACCORD AERO DECK include a driver's side airbag, located in the steering wheel hub, as part of a Supplemental Restraint System (SRS). There are two types of SRS: Type I (SRS unit is not part of the airbag assembly), which is used for Aero Deck models, and type II (SRS unit is part of the airbag assembly), which is used for Sedan models. Information necessary to safely service the SRS is included in this shop manual. Items marked * on the contents page of each section include, or are located near, SRS components. Servicing, disassembling or replacing these items will require special precautions and tools, and should therefore be done only by an authorized HONDA dealer.

▲ WARNING

- To avoid rendering the SRS inoperative, which can lead to personal injury or death in the event of a severe frontal collision, all service work must be performed by an authorized HONDA dealer.
- Improper service, including incorrect removal and installation of the SRS, and replacing with wrong parts, can lead to personal injury caused by unintentional activation of the airbag.
- All SRS electrical wiring harnesses are covered with yellow outer insulation. Related components are located in the steering column, the dashboard, and behind the dashboard lower cover. Do not use electrical test equipment on these circuits.

Service work nearby and in the areas listed below may affect the SRS and must therefore be performed by an authorized HONDA dealer.

SRS Type I:

- Steering wheel
- Behind the instrument panel
- Under-dash fuse box
- Dashboard lower panel (repair and paint work)
- Center console
- Installing of car stereo units and other accessories
- A/C heater

SRS Type II:

- Steering wheel (Be careful that the steering wheel receives no strong shocks as the SRS unit (sensors), inflator, etc. are located in it.)
- Behind the instrument panel
- Under-dash fuse box

Special Tools

Relay and Control Unit Locations

Engine Compartment

Dashboard

Seat

Door and Floor

Wire Harness and Ground Locations

Engine Compartment

Dashboard

Floor

Trunk

Rear

Tailgate

Door

Roof

Rear Roof

Seat

Fuses

Under - hood Fuse/Relay Box

Under - hood Fuse Box

Under - hood ABS Fuse/Relay Box

Power Distribution

Ground Distribution

Charging System

Troubleshooting

Gauge Assembly

Circuit Diagram (with SRS)

Terminal Locations (with SRS)

Bulb Locations

Nippon Denso (with SRS)

INippon Seiki (with SRS)

Safety Indicator

Circuit Diagram

(with SRS Sedan)

(with SRS Aero deck)

Indicator Input Test (with SRS)

Shift Lever Position Indicator

Circuit Diagram (with SRS)

Indicator Input Test (WITH SRS)

Brake/ High Mount Brake Light

Circuit Diagram

(Wagon KQ model)

Brake Light Failure Sensor Test

(Wagon KQ model)

High Mount Brake Light Bulb

Replacement (Wagon KQ model)

Horns

Component Locations Index (with SRS)

Circuit Diagram (with SRS)

Switch Test

(with SRS Type 1)

(with SRS Type 2)

Horn Relay Test

Cruise Control

Component Locations Index (with SRS)

**Circuit Diagram
(with SRS Type 1)**

(with SRS Type 2)

SET/RESUME Switch Test

(with SRS Type 1)


(with SRS Type 2)

Slip Ring Replacement/Test (with SRS Type 2)


www.cargeek.ir

Special Tools


Ref. No.	Tool Number	Description	Qty	Page Reference
①	07HAZ-SG00500	Deployment Tool	1	16-124
②	07MAZ-SS10100	SRS Disposal Bracket (SRS Type I)	1	16-156
③	07MAZ-SL00500	Test Harness A (SRS Type II)	1	16-111
④	07MAZ-SP00500	Test Harness B (SRS Type II)	1	16-114
⑤	07LAZ-SL40300	Test Harness C (SRS Type II)	1	16-84, 93, 117
⑥	07LAZ-SL40400	Test Harness D (SRS Type II)	1	16-115

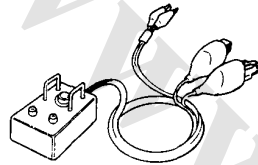


①

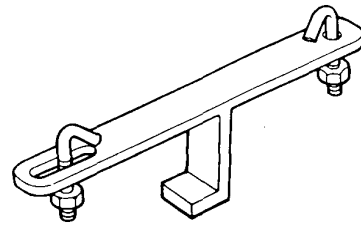


②

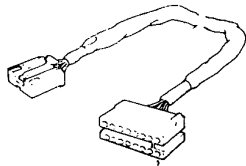


③

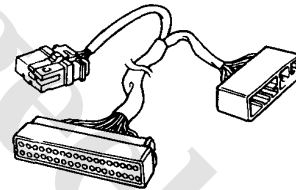

④

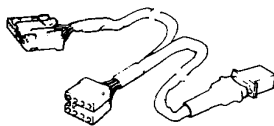

⑤

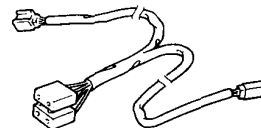

⑥



Relays and Control Unit Locations

Engine Compartment

UNDER-HOOD ABS FUSE/RELAY BOX

ABS MOTOR RELAY




DIMMER RELAY

HEADLIGHT RELAY


RADIATOR FAN RELAY

UNDER-HOOD FUSE/RELAY BOX


POWER WINDOW RELAY

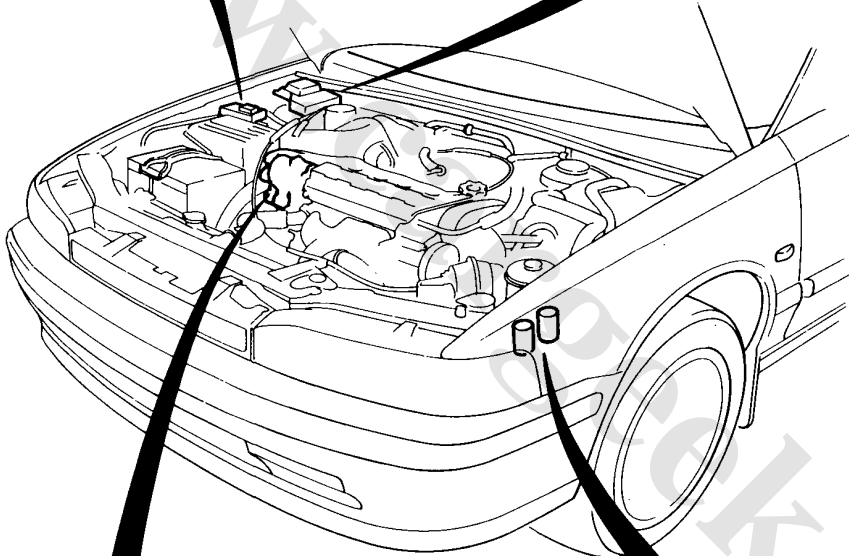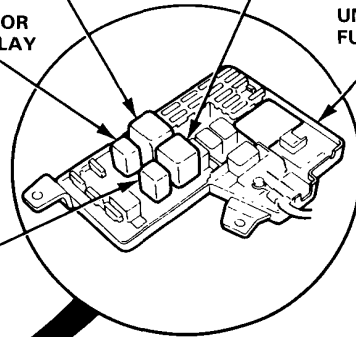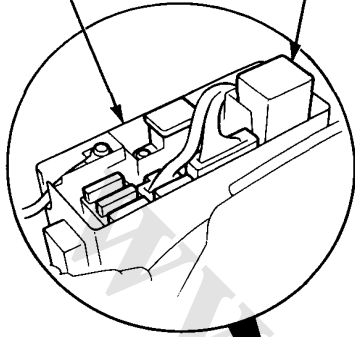

A/C COMPRESSOR CLUTCH RELAY
[Wire colors: BLK/YEL, BLK/YEL, RED/BLU, and RED]

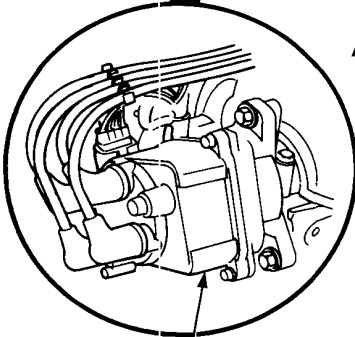

DISTRIBUTOR
(Has built-in igniter unit)

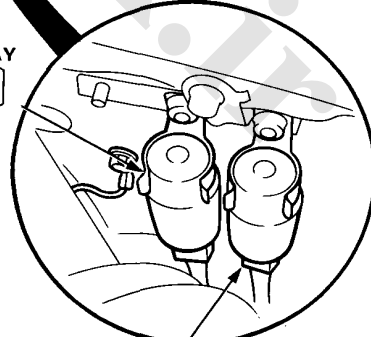


CONDENSER FAN RELAY
[Wire colors: YEL/WHT, WHT, BLU, and BLU/YEL]



(cont'd)

Relays and Control Unit Locations


Engine Compartment (cont'd)

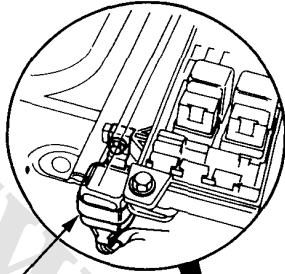

INTERMITTENT WIPER RELAY
Located under the relay box
Wire colors: BLU/WHT, BLU/WHT
GRN/RED, GRN/BLK, and BLK

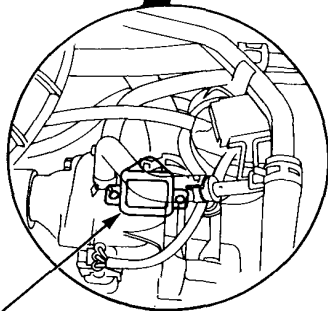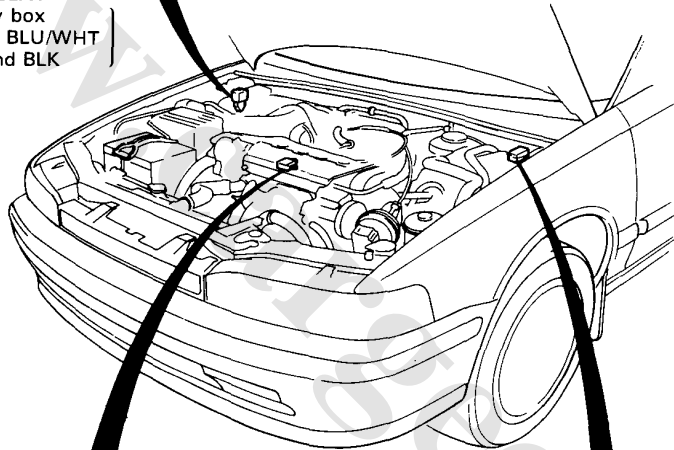

SPEED SENSOR

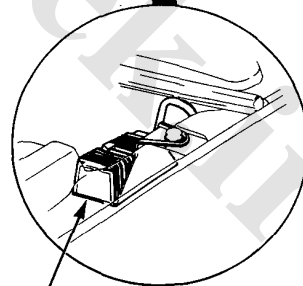


DIM-DIP RESISTOR
(KE mode only)



Dashboard

NOTE: RHD type is symmetrical to LHD type.

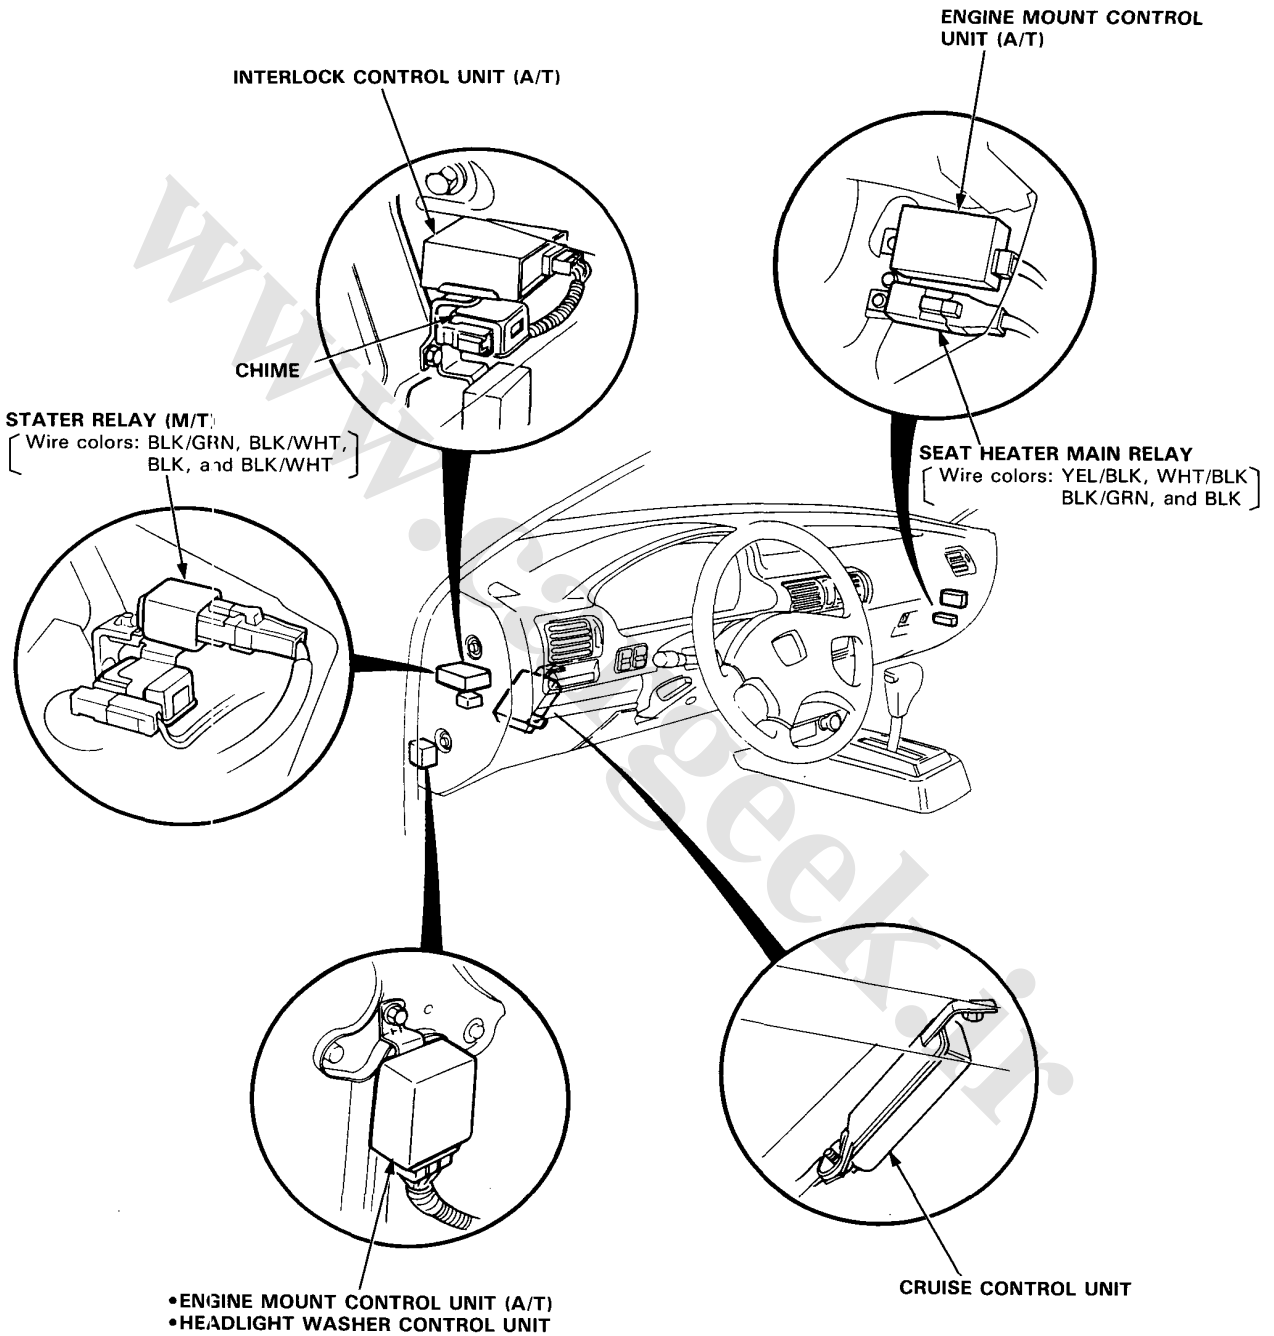


(cont'd)

Relays and Control Unit Locations

Dashboard (cont'd)




NOTE: RHD type is symmetrical to LHD type.

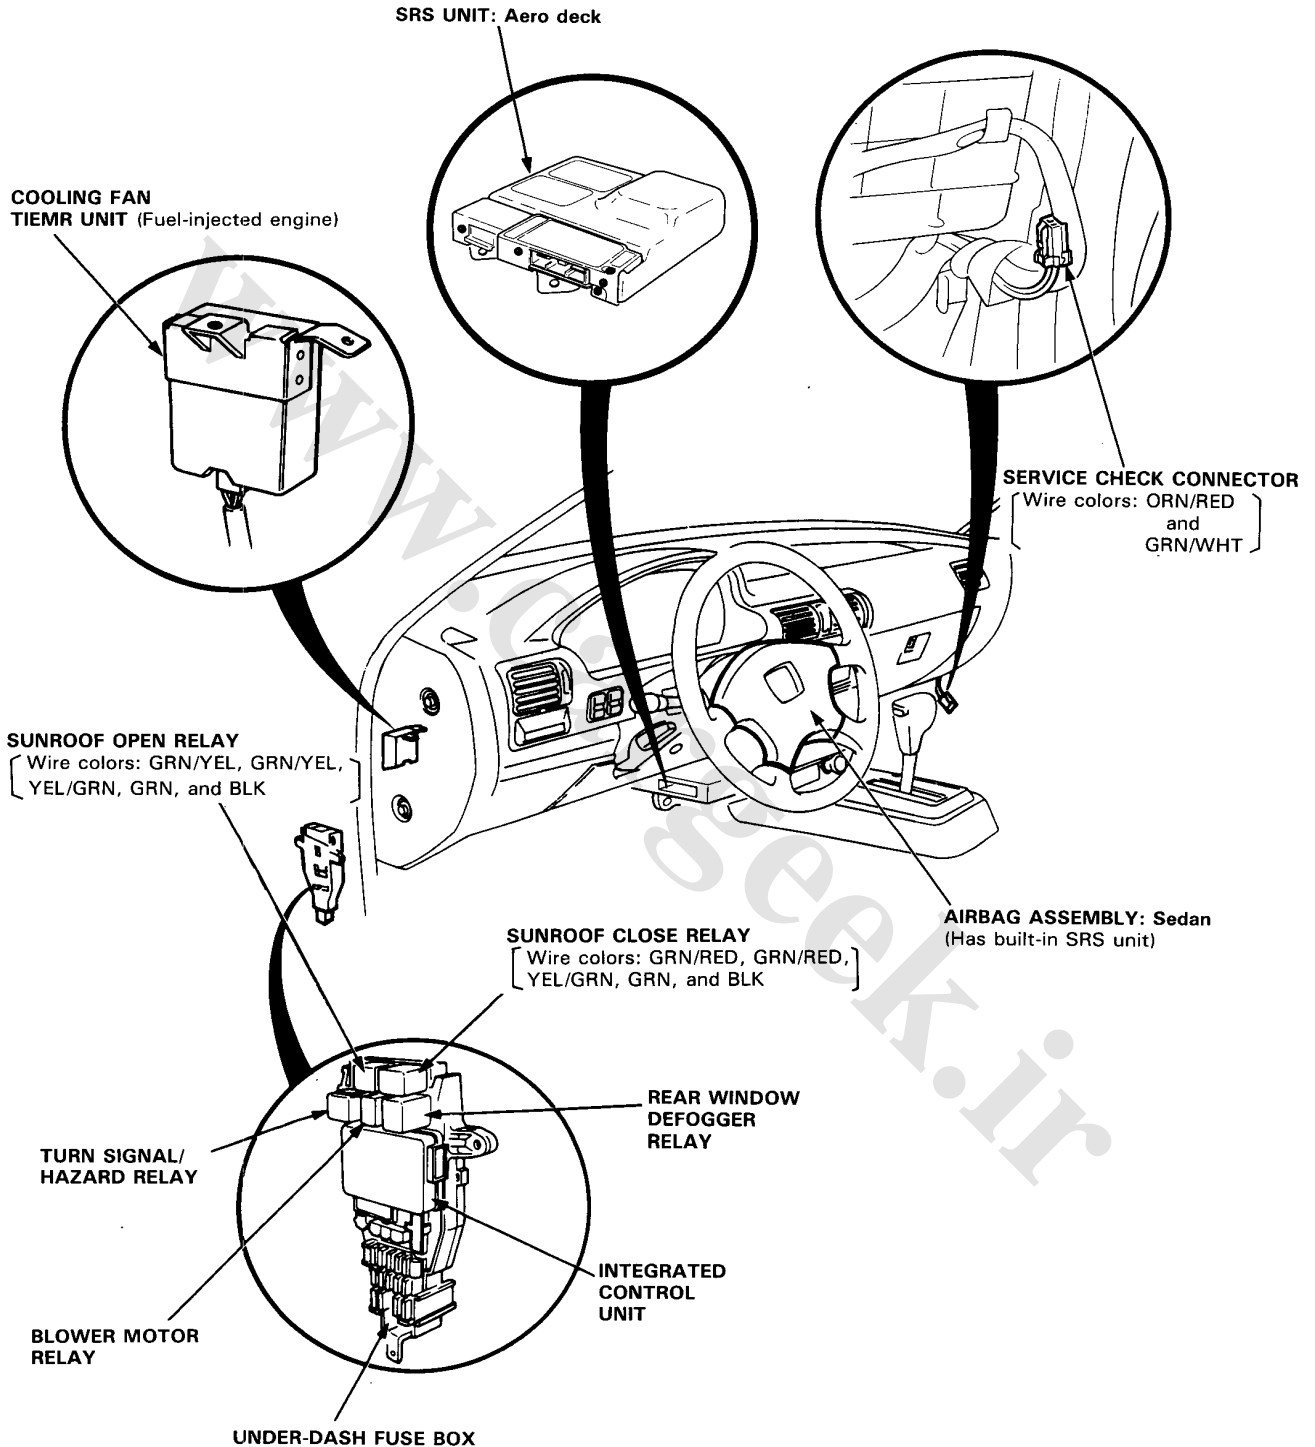




- Fuel-injected engine: PGM-FI MAIN RELAY
- Carbureted engine: FUEL CUT RELAY

DELAY RELAY
(Carbureted engine: Except PGM-CARB)

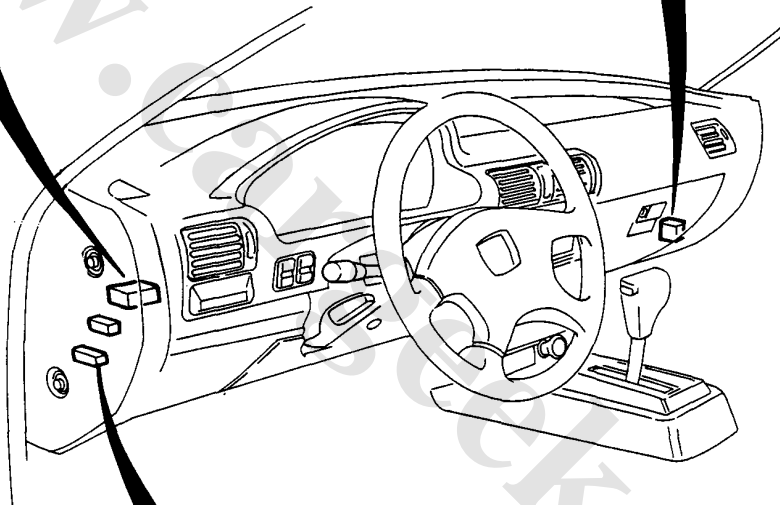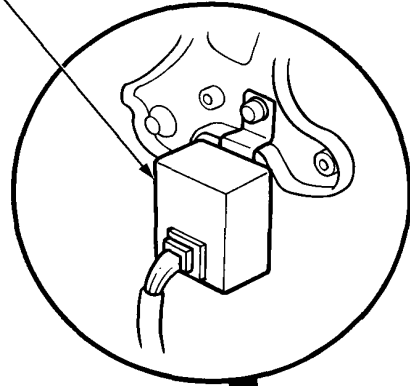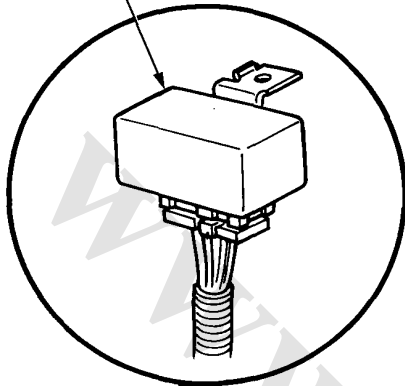


CIGARETTE LIGHTER RELAY
[Wire colors: WHT/BLU, YEL/RED
WHT/RED, and BLK]

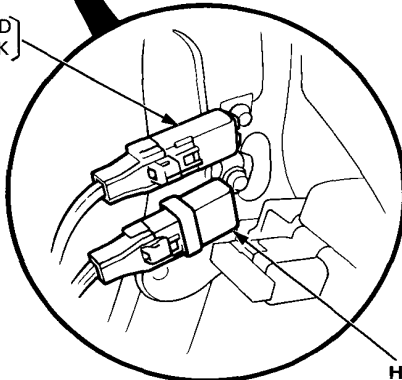

HORN RELAY
[Wire colors: WHT/YEL, BLU/RED
LT GRN/BLU, and BLK]

Relay and Control Unit Locations

Seat

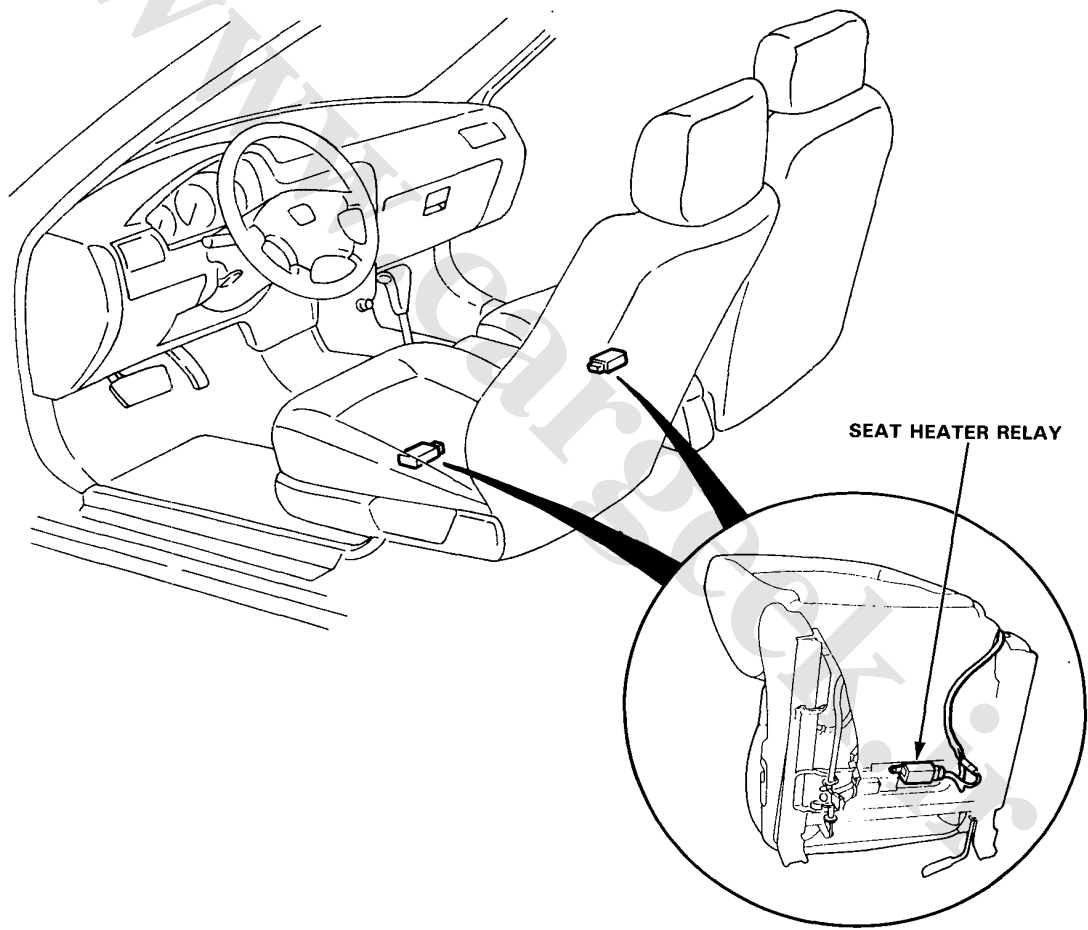



Door and Floor

Sedan:

NOTE: RHD type is symmetrical to LHD type, but except ABS CONTROL UNIT.

Fuel-injected engine PGM-FI ECU

Carbureted engine: PGM-CARB. CONTROL UNIT

ABS FRONT FAIL-SAFE RELAY

Wire colors: YEL/GRN, BLK, YEL/BLK, and BRN/BLK

ABS CONTROL UNIT

A/T CONTROL UNIT

ABS REAR FAIL-SAFE RELAY

Wire colors: YEL/GRN, BLK, YEL/BLK, and BLU/BLK

ECU COVER

(Located right front floor)

DRIVER'S POWER WINDOW SWITCH

(Has built-in control unit)

POWR DOOR LOCK CONTROL UNIT
(Sedan)


(cont'd)

Relays and Control Unit Locations

Floor and Door (cont'd)

Aerodeck:


NOTE: RHD type is symmetrical to LHD type, but except KEYLESS/POWER DOOR LOCK CONTROL UNIT.

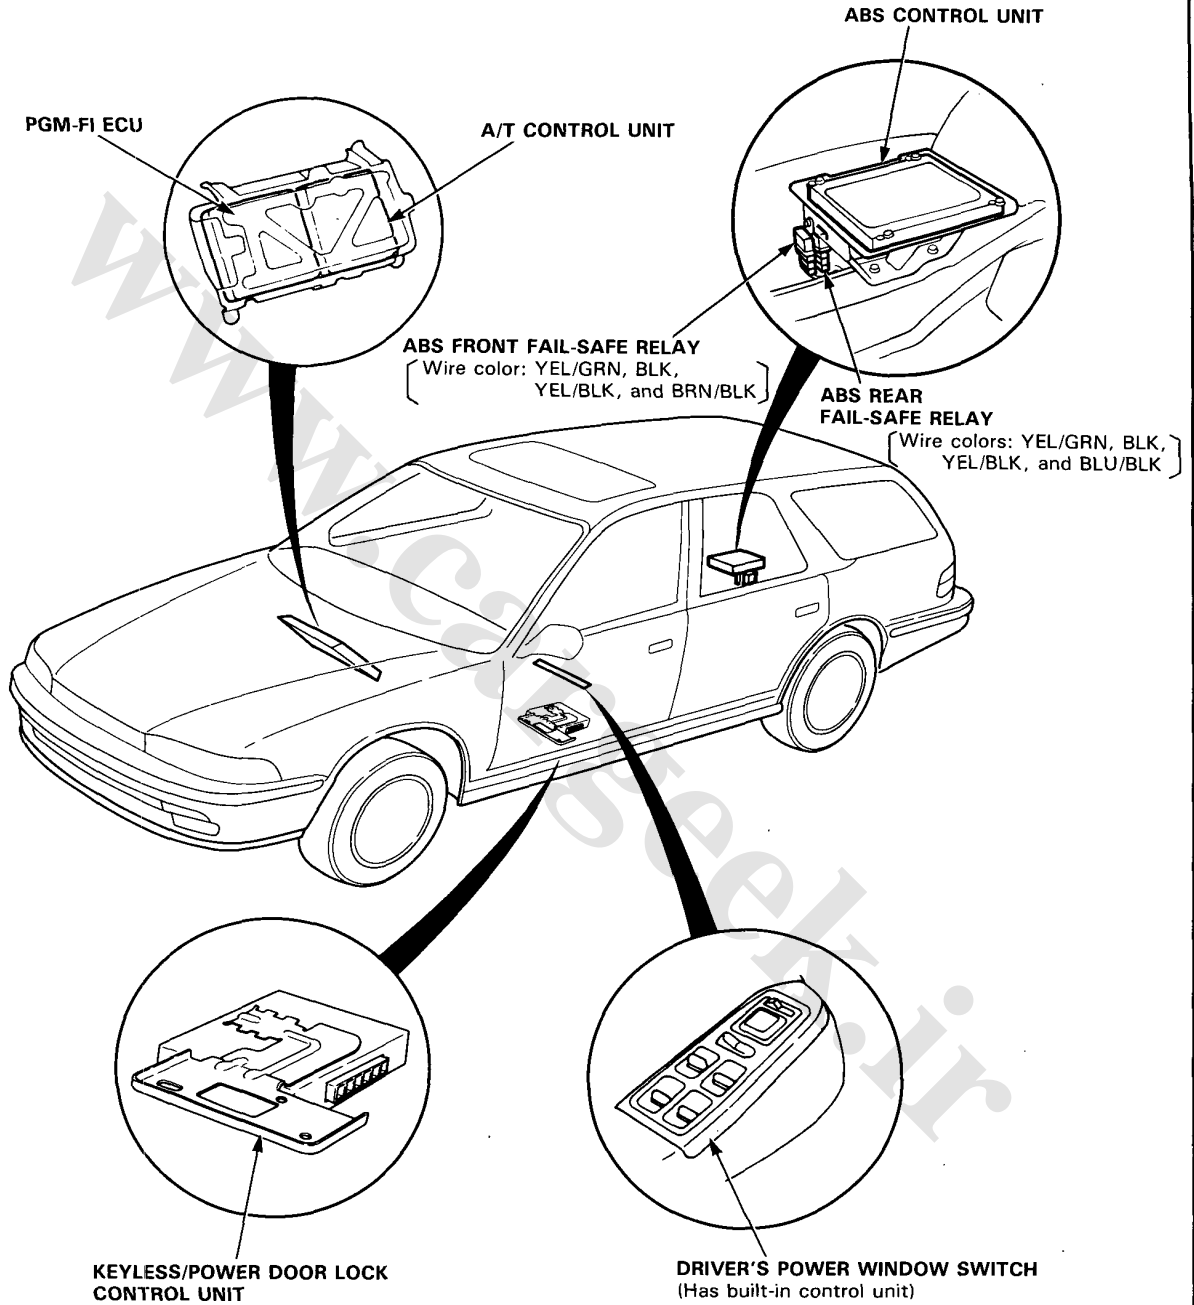



Wire Harness and Ground Locations


Engine Compartment

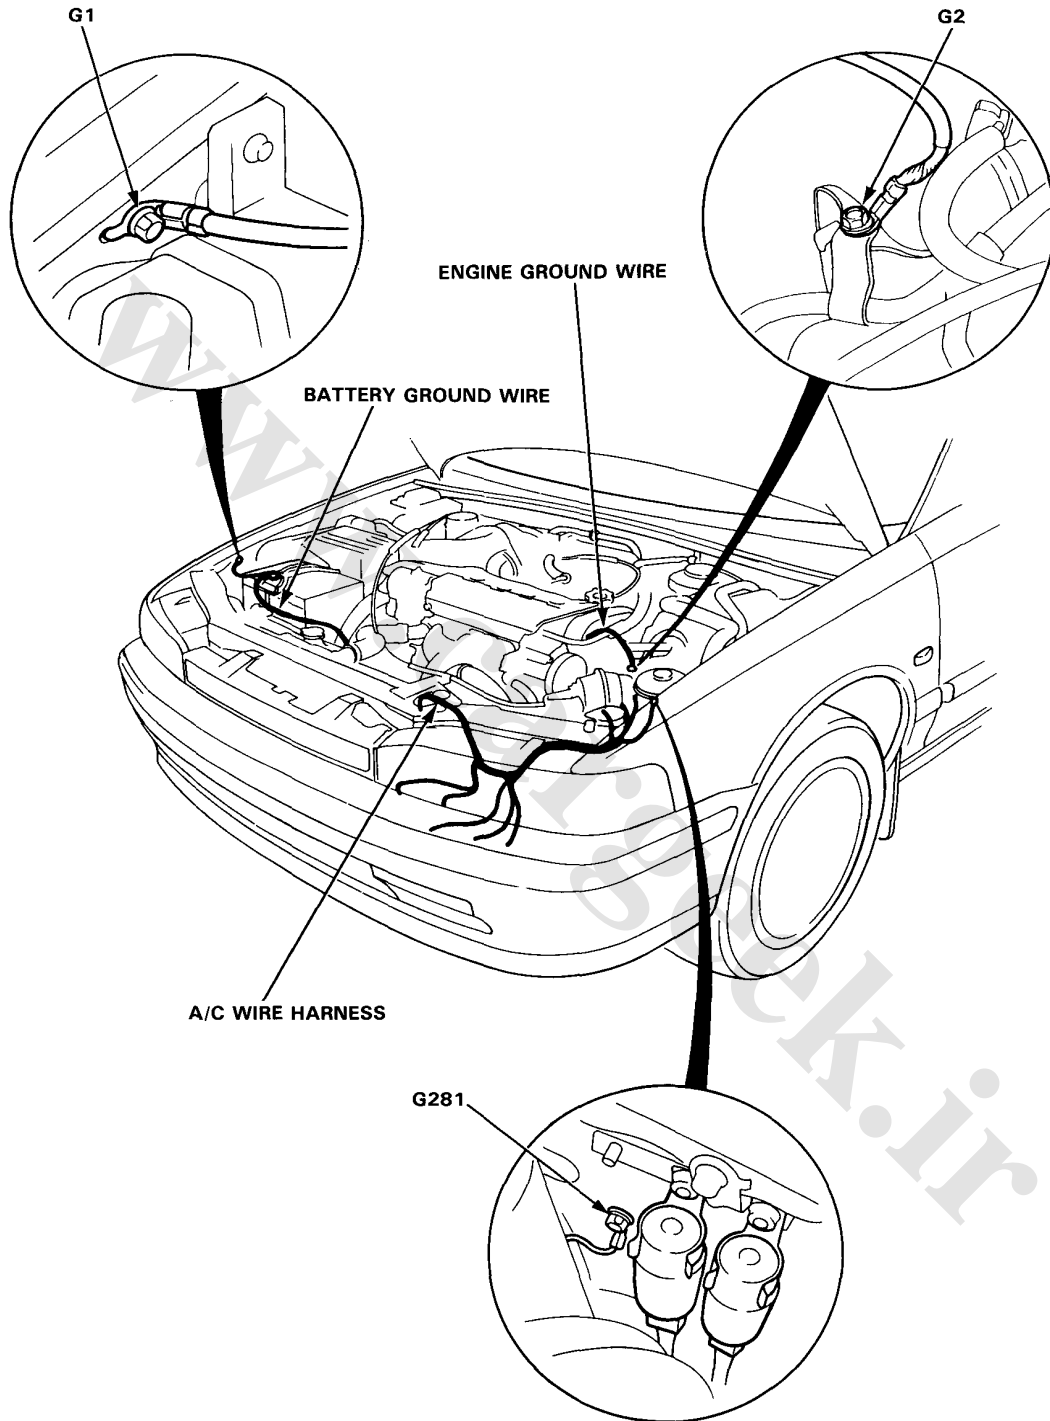


(cont'd)

Wire Harness and Gound Locations


Engine Compartment (cont'd)

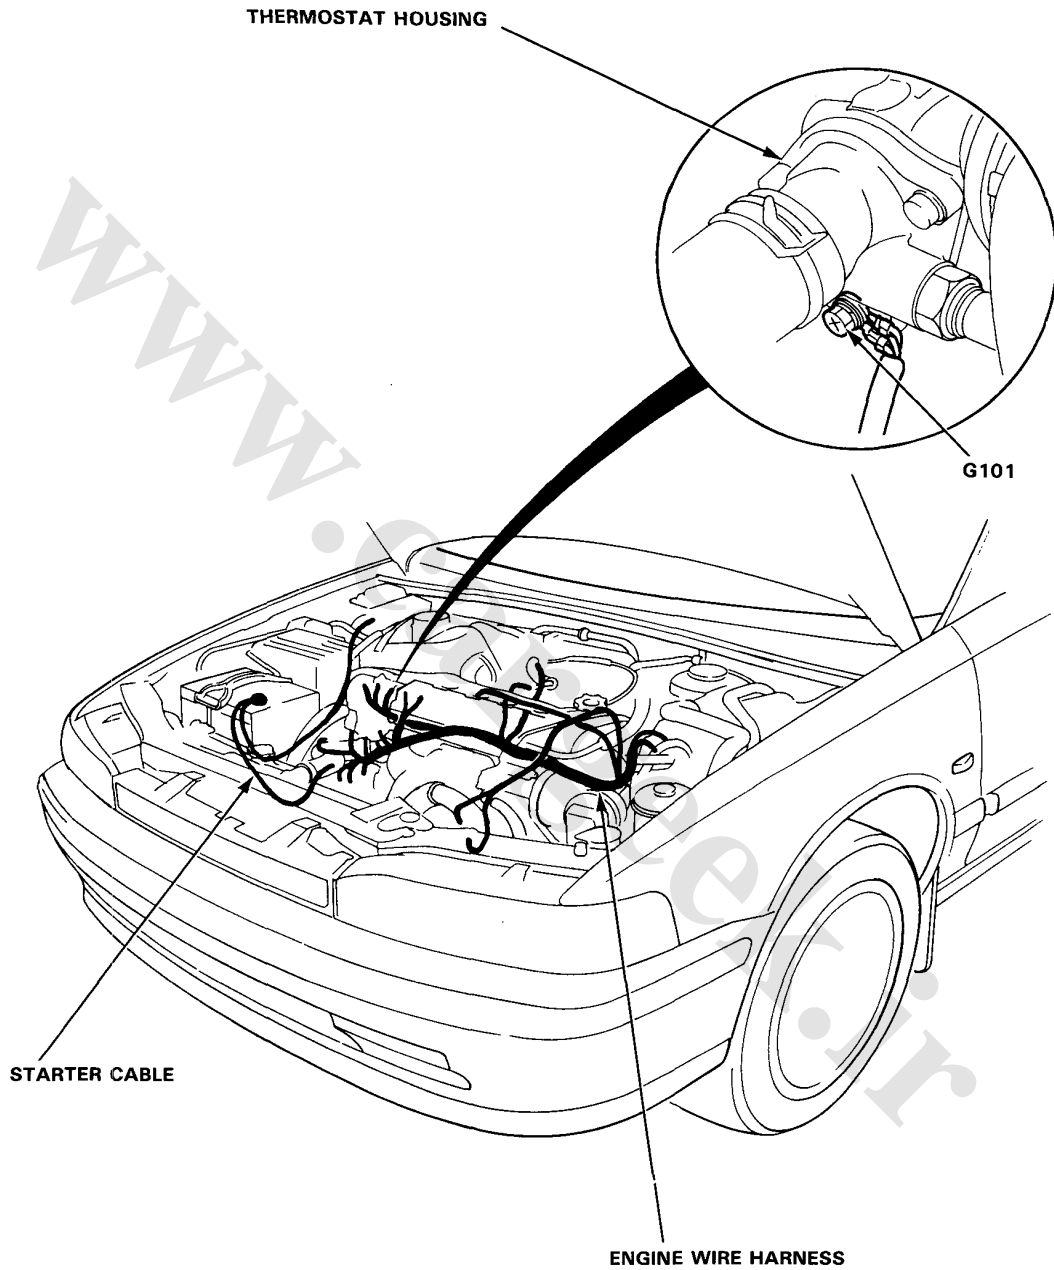

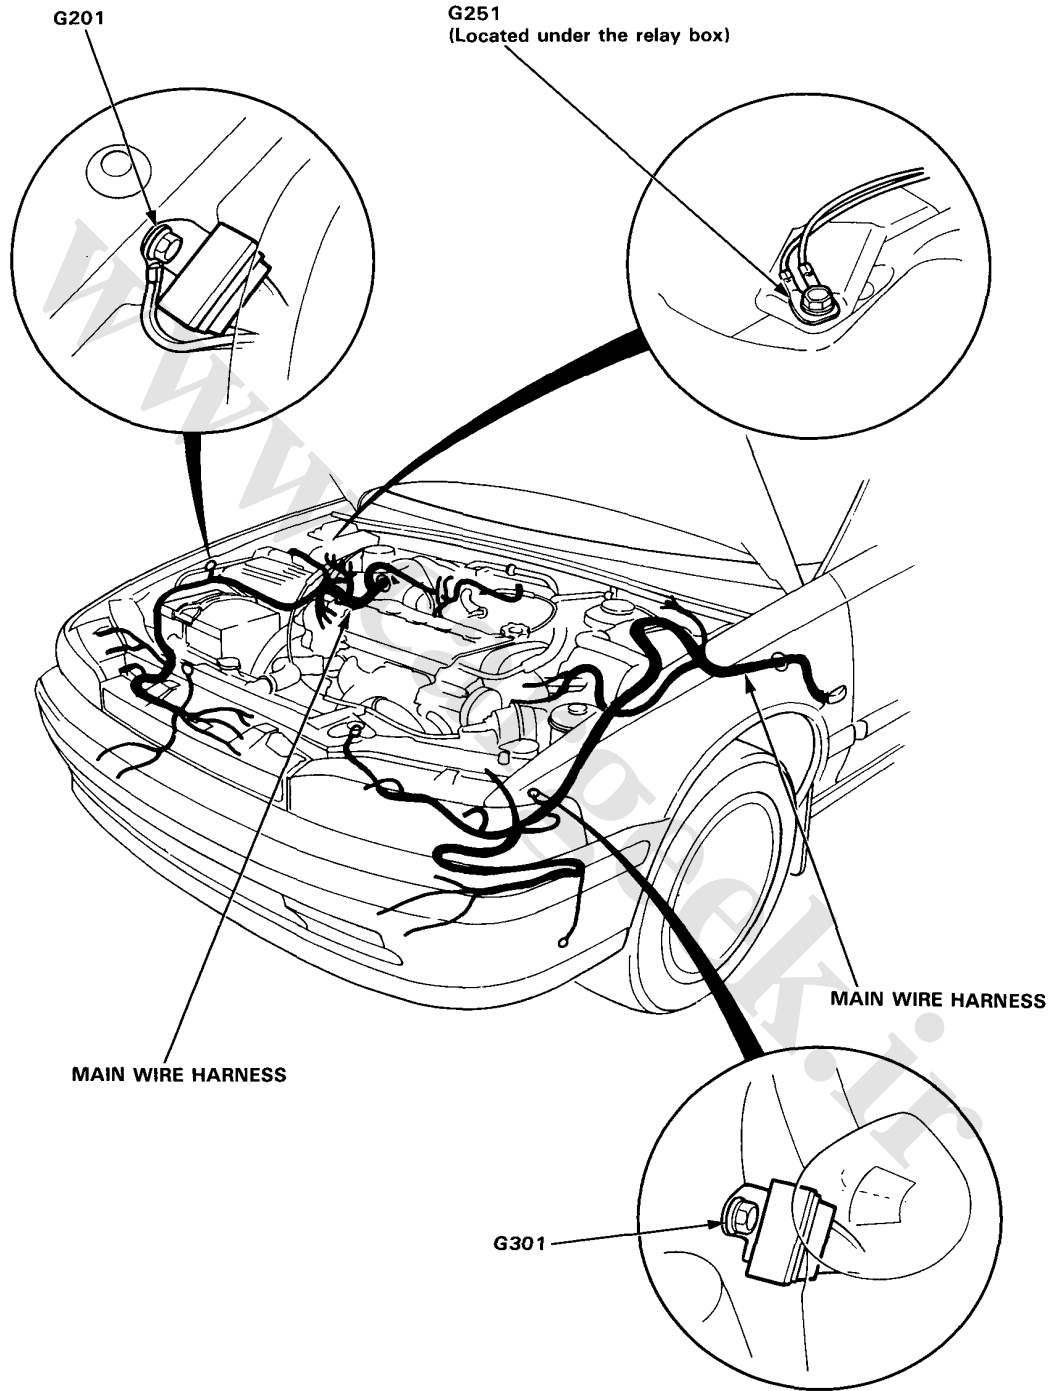


Wire Harness and Ground Locations

Dashboard (LHD)

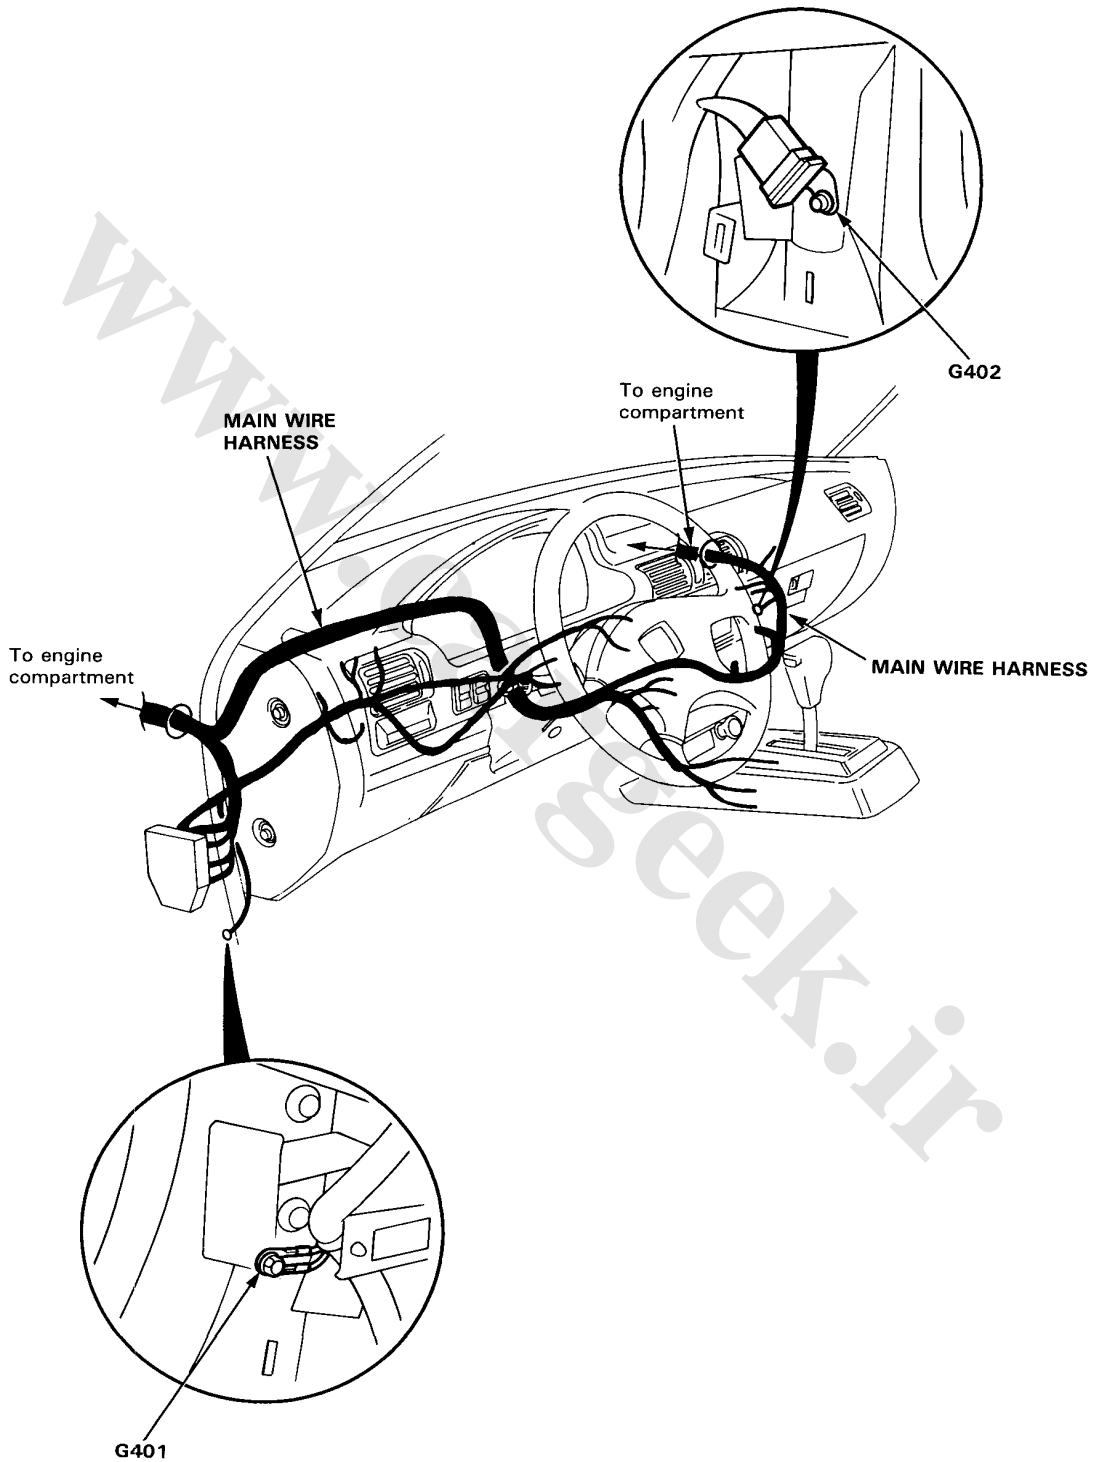




(RHD)

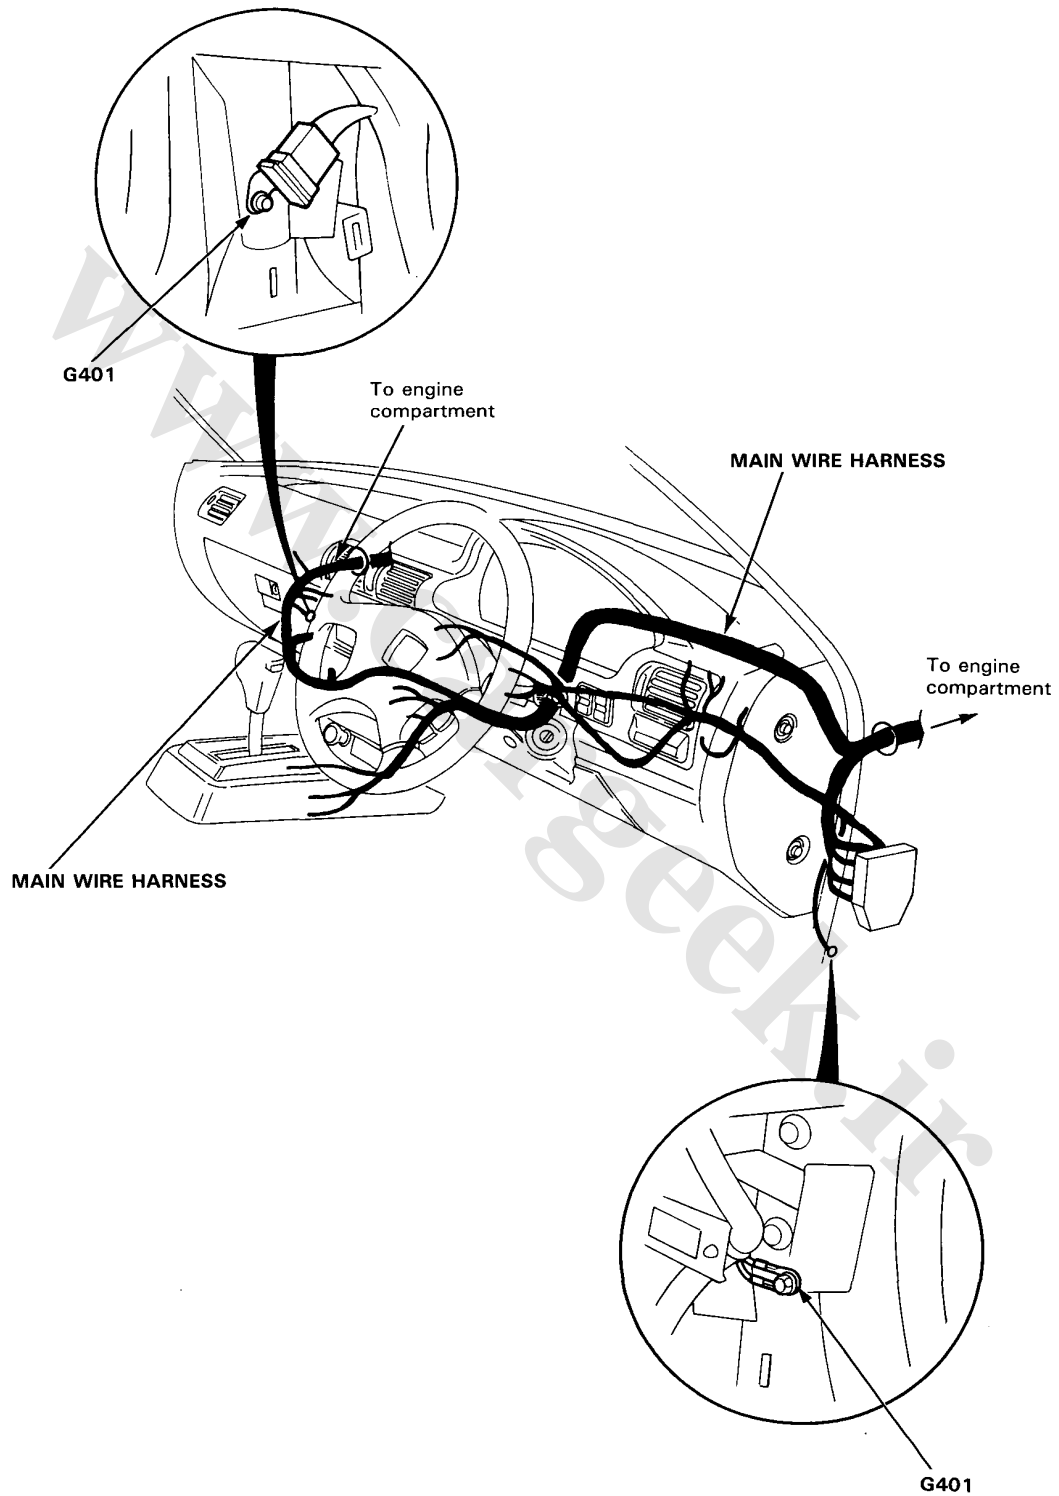


Wire Harness and Ground Locations

Dashboard (LHD)

Sedan:

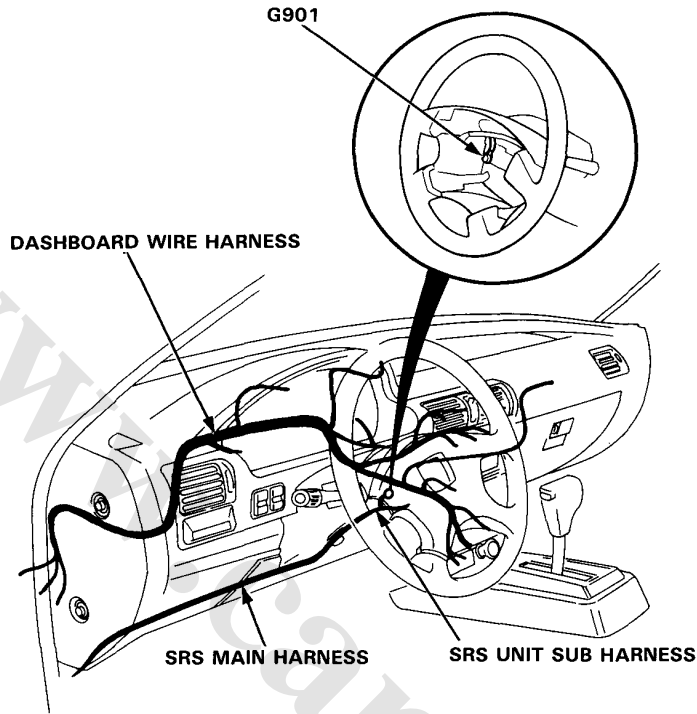


Aero deck:

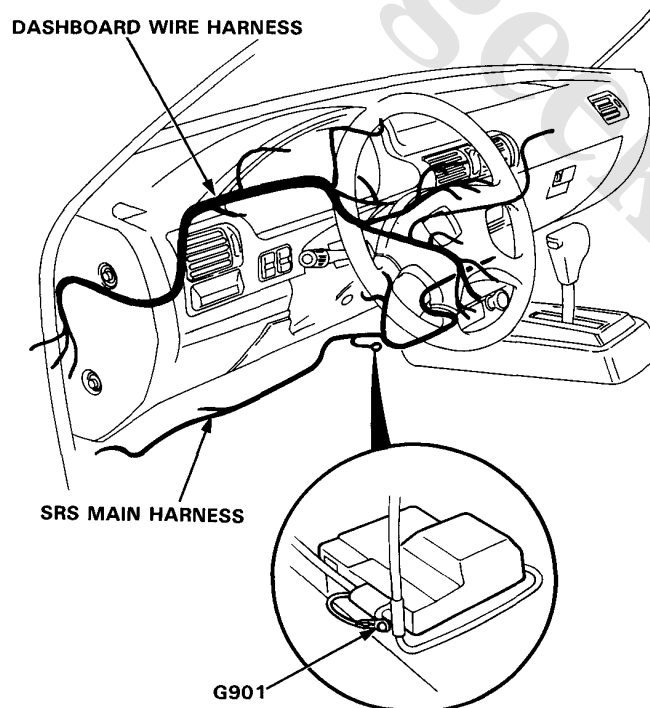




(RHD)

Sedan:

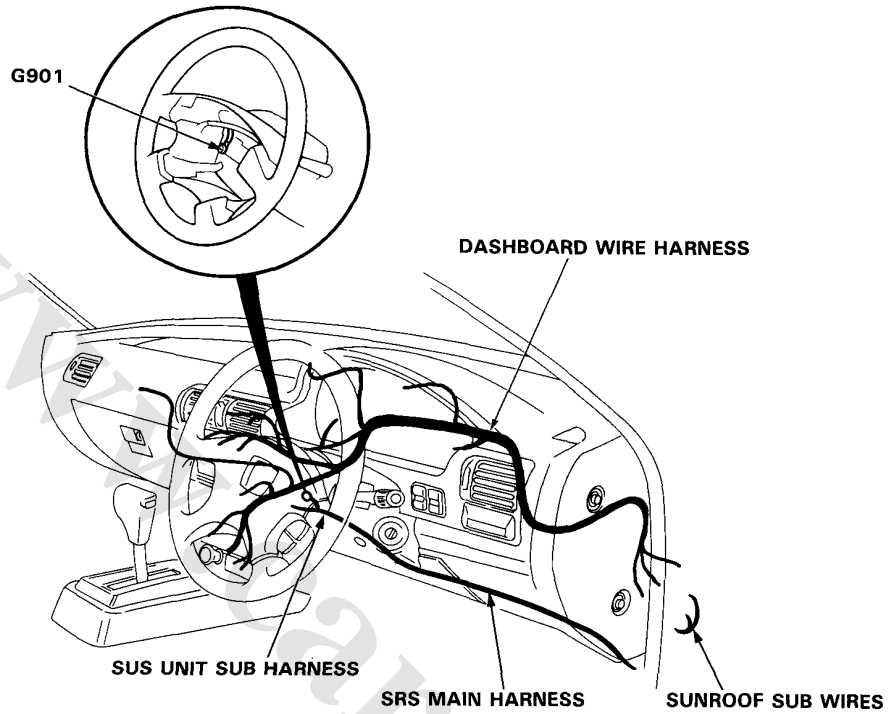


Aero deck/Wagon:

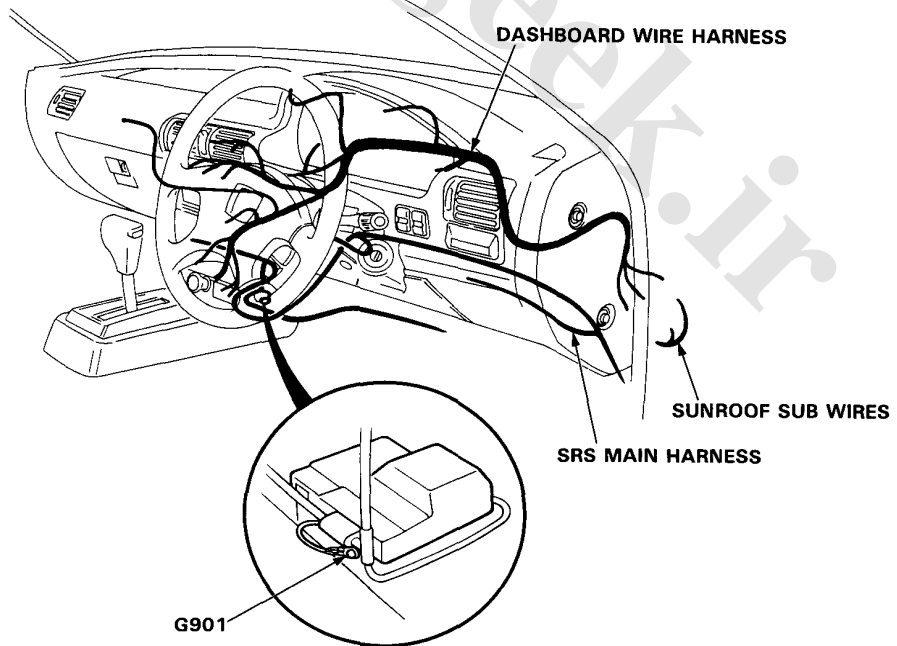

Wire Harness and Ground Locations


Floor (LHD)

Sedan:

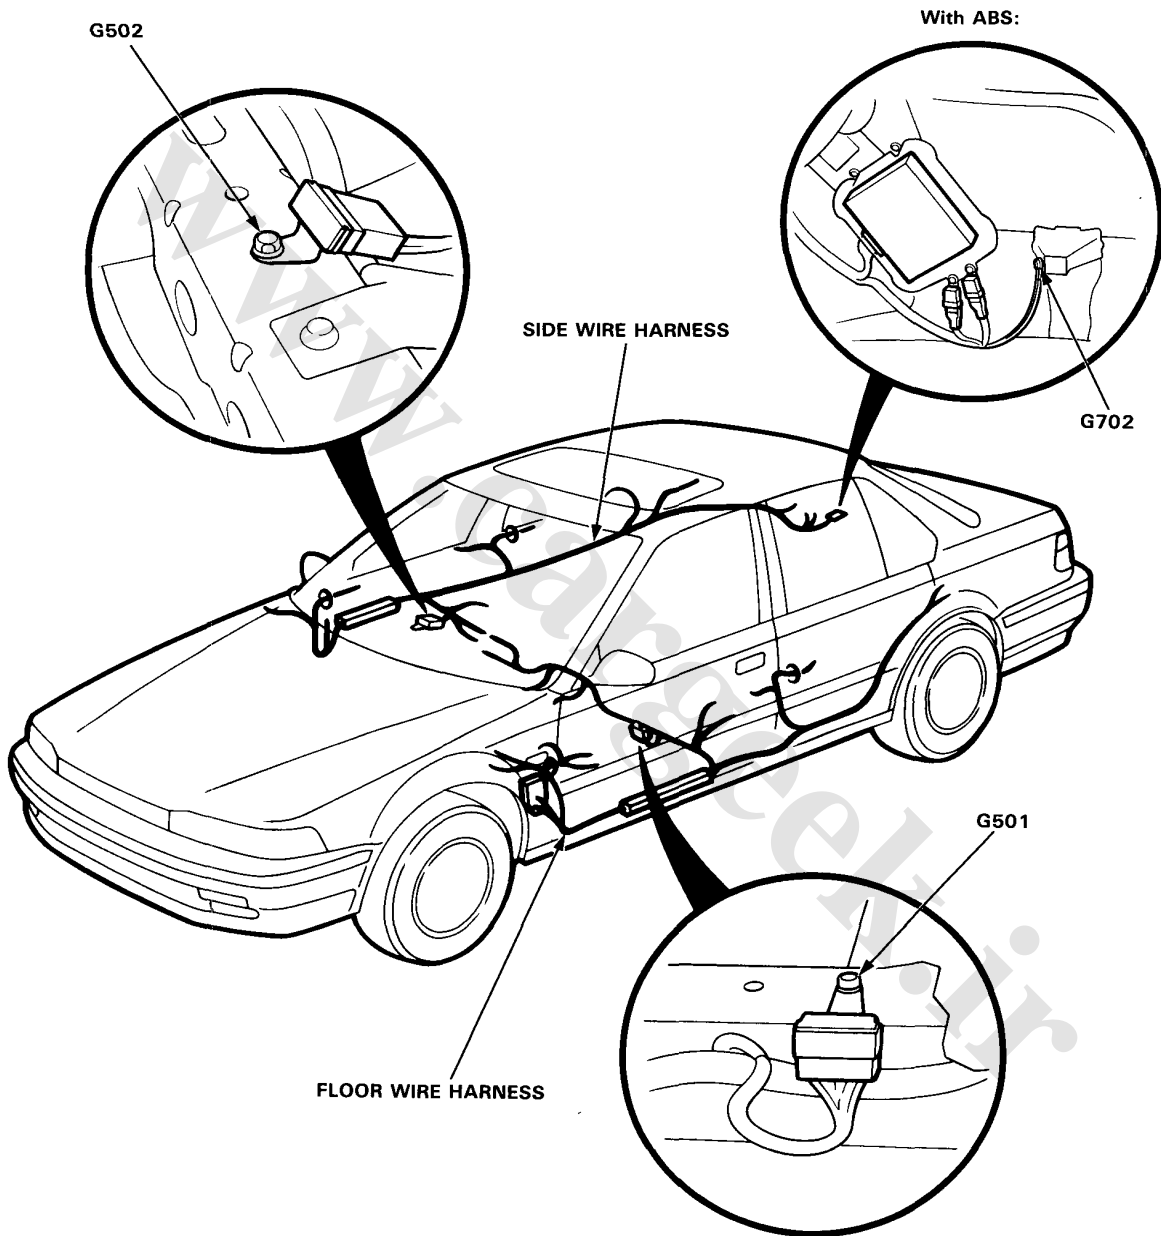




Aero deck:

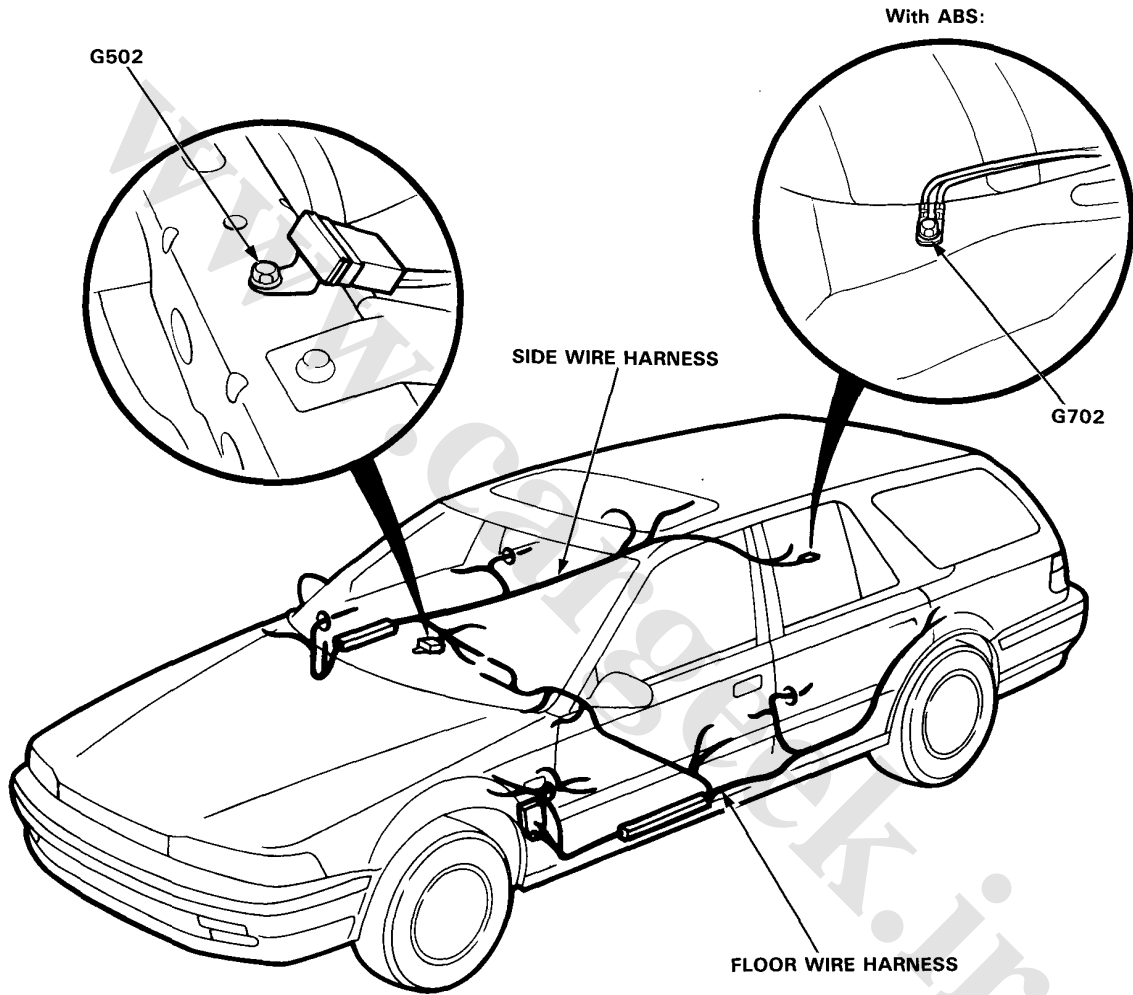

Wire Harness and Ground Locations


Floor (RHD)

Sedan:

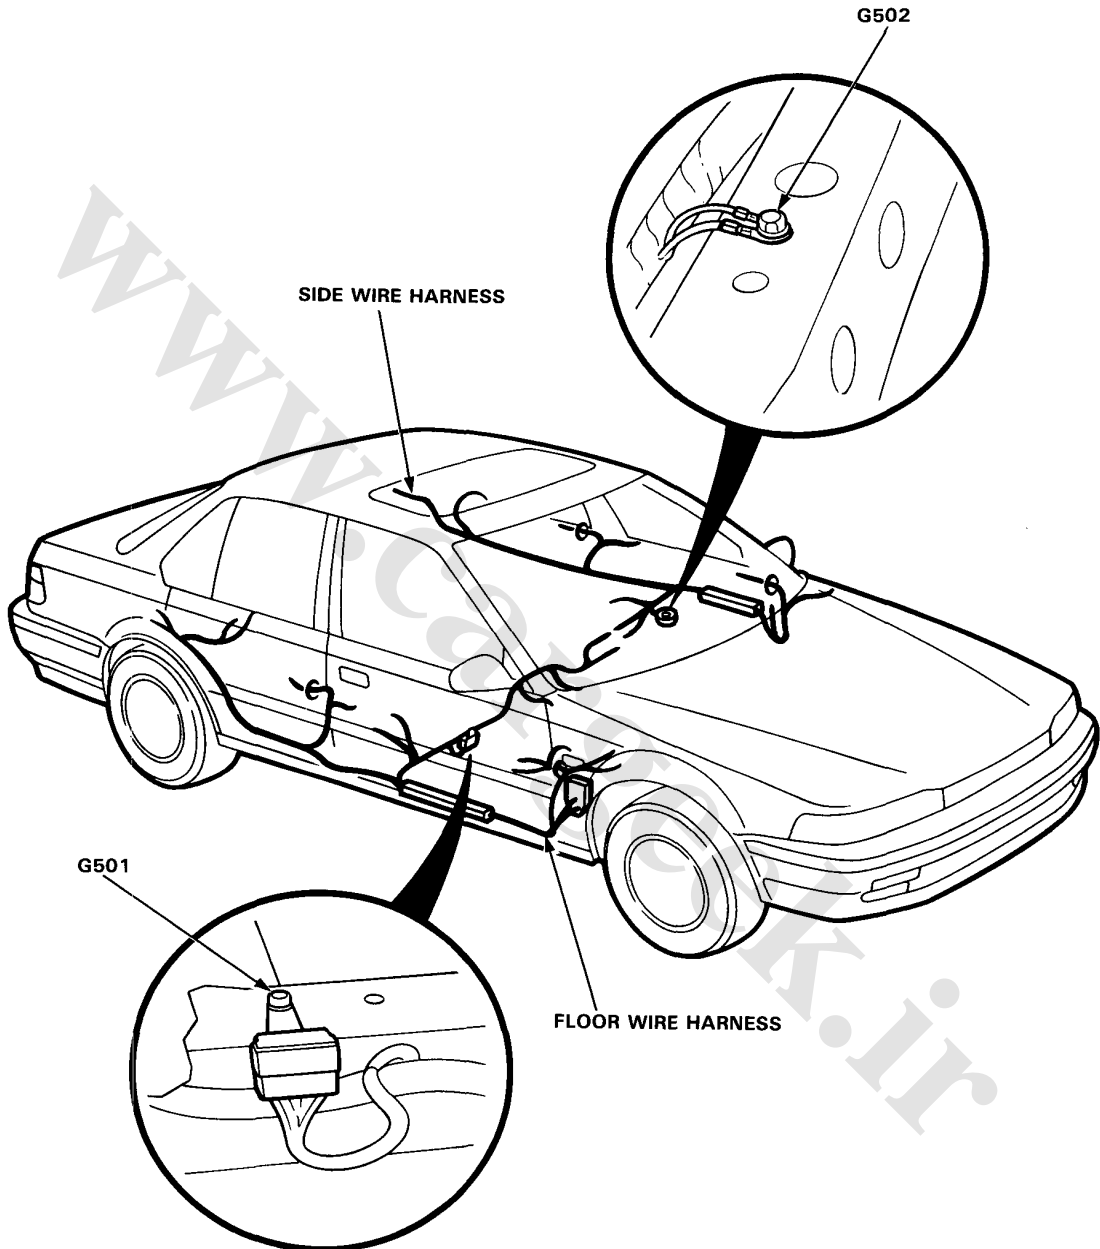




Aero deck/Wagon:

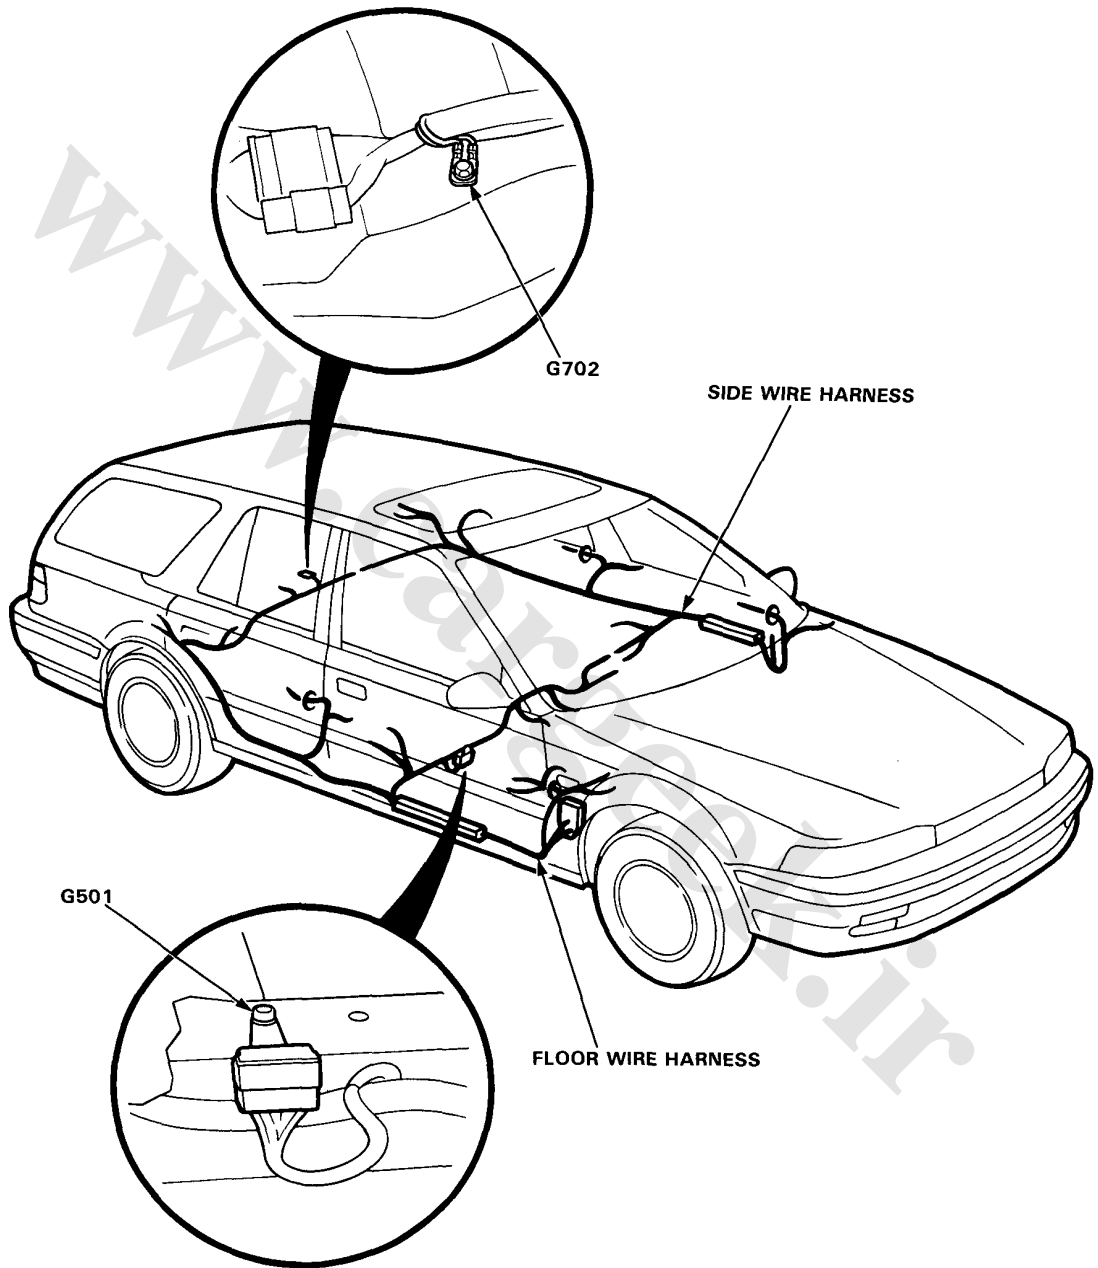


Wire Harness and Ground Locations

Trunk (LHD)

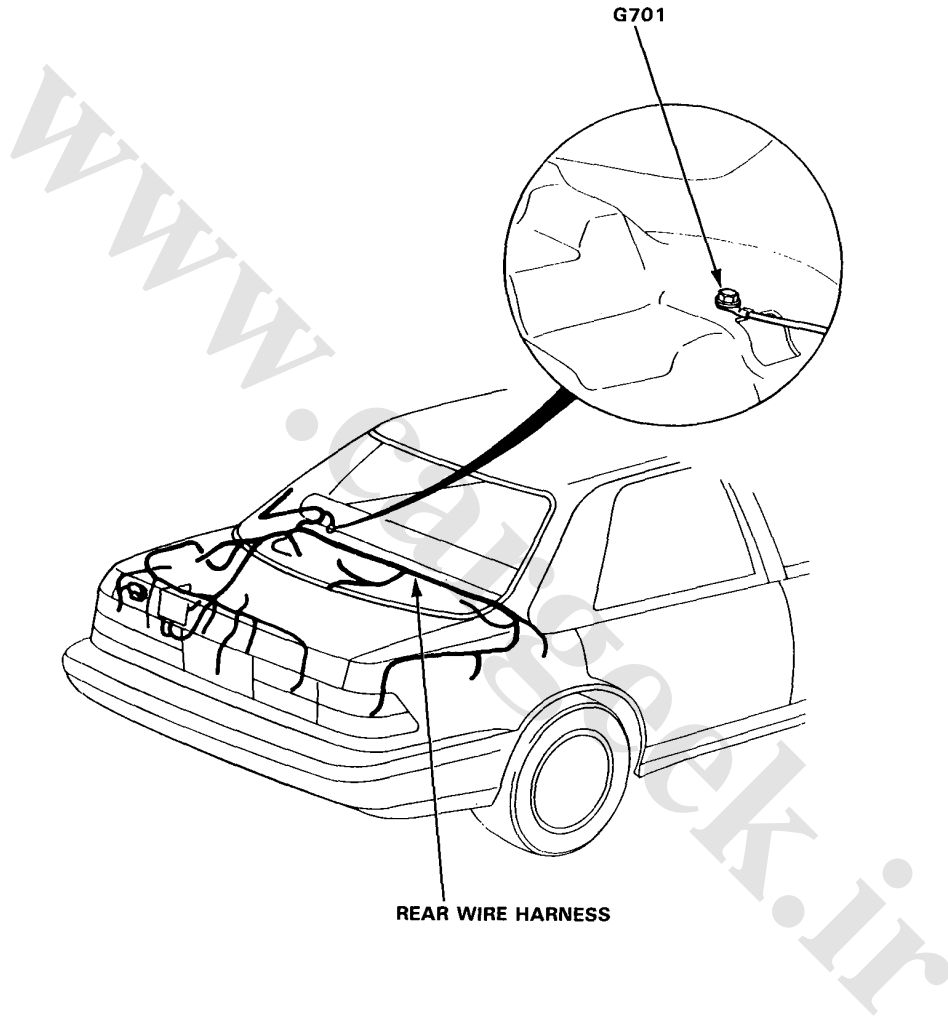




(RHD)

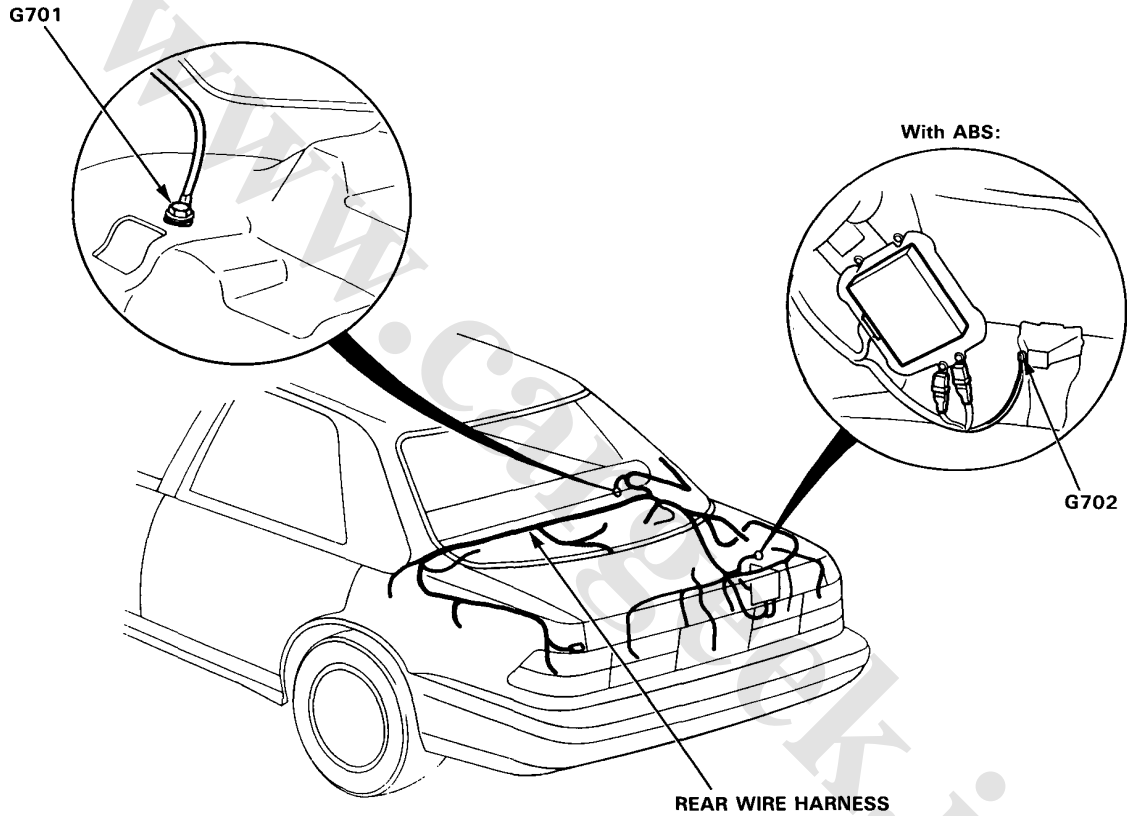


Wire Harness and Ground Locations

Trunk

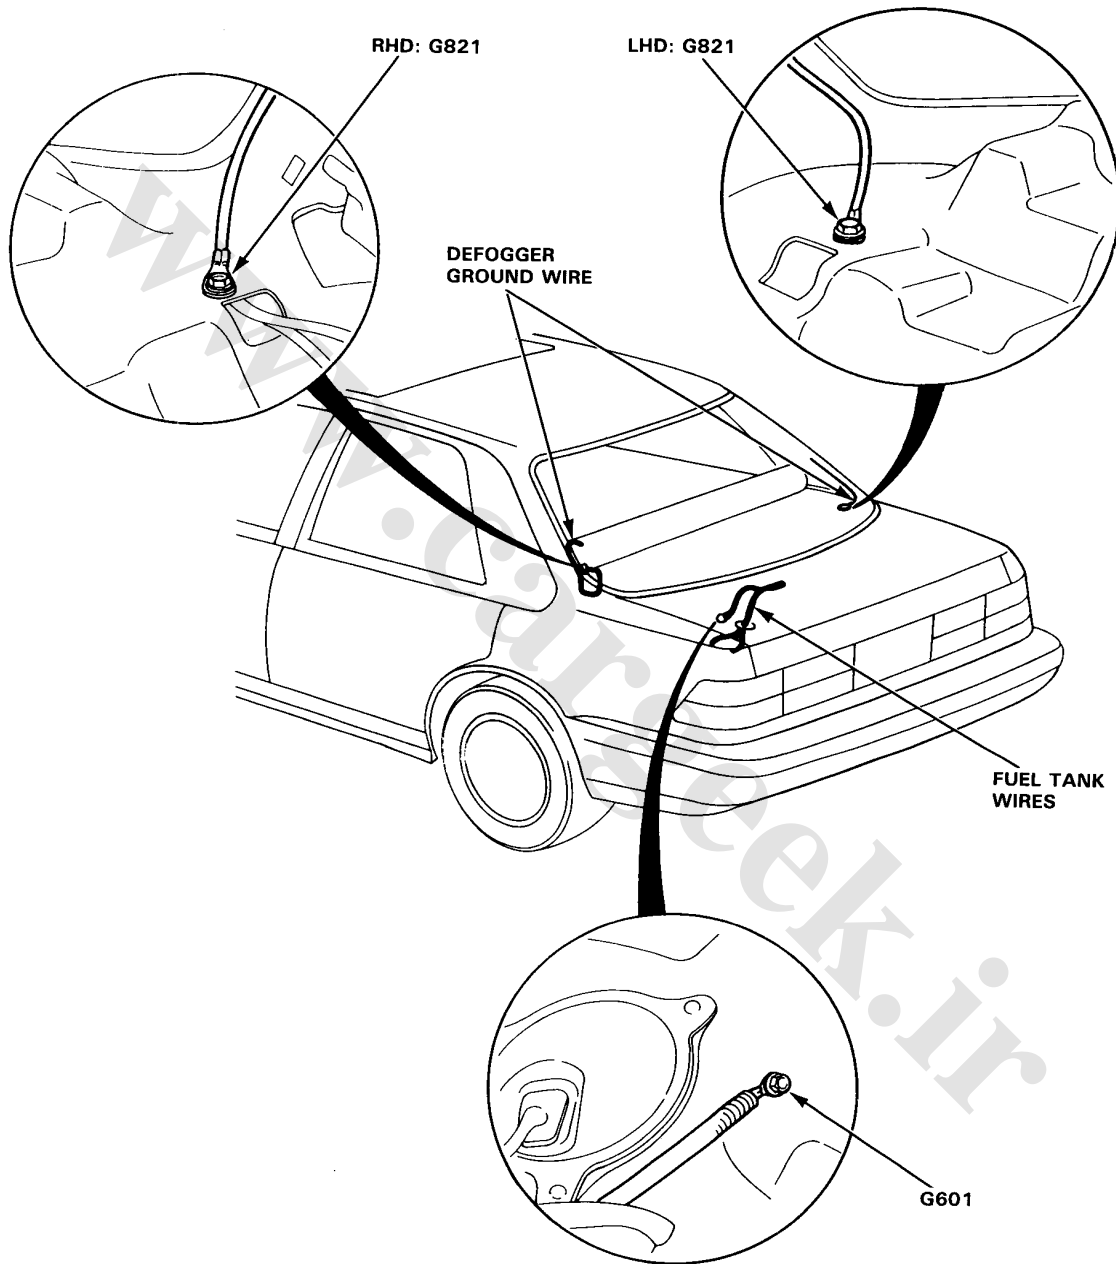




Rear

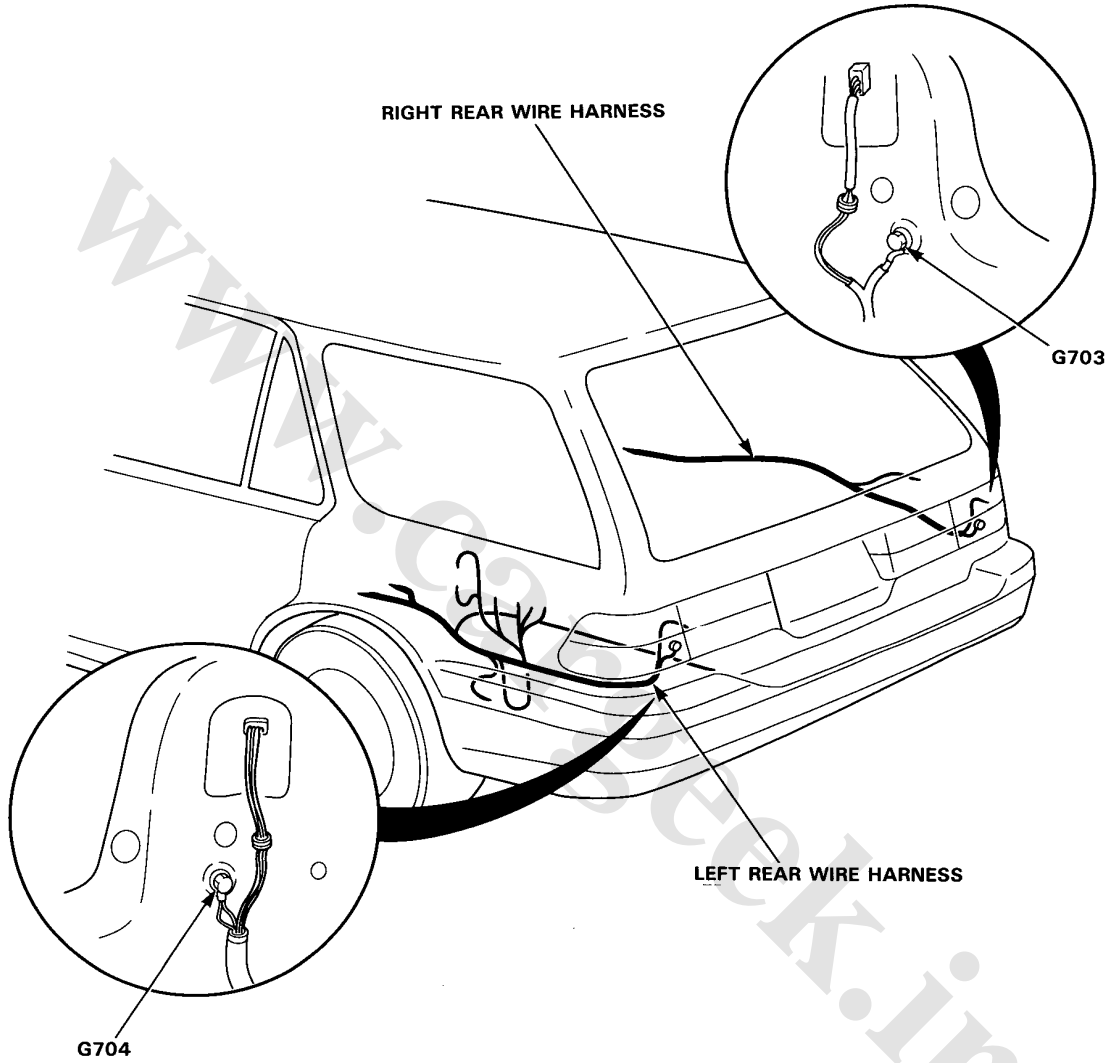


Wire Harness and Ground Locations

Tailgate

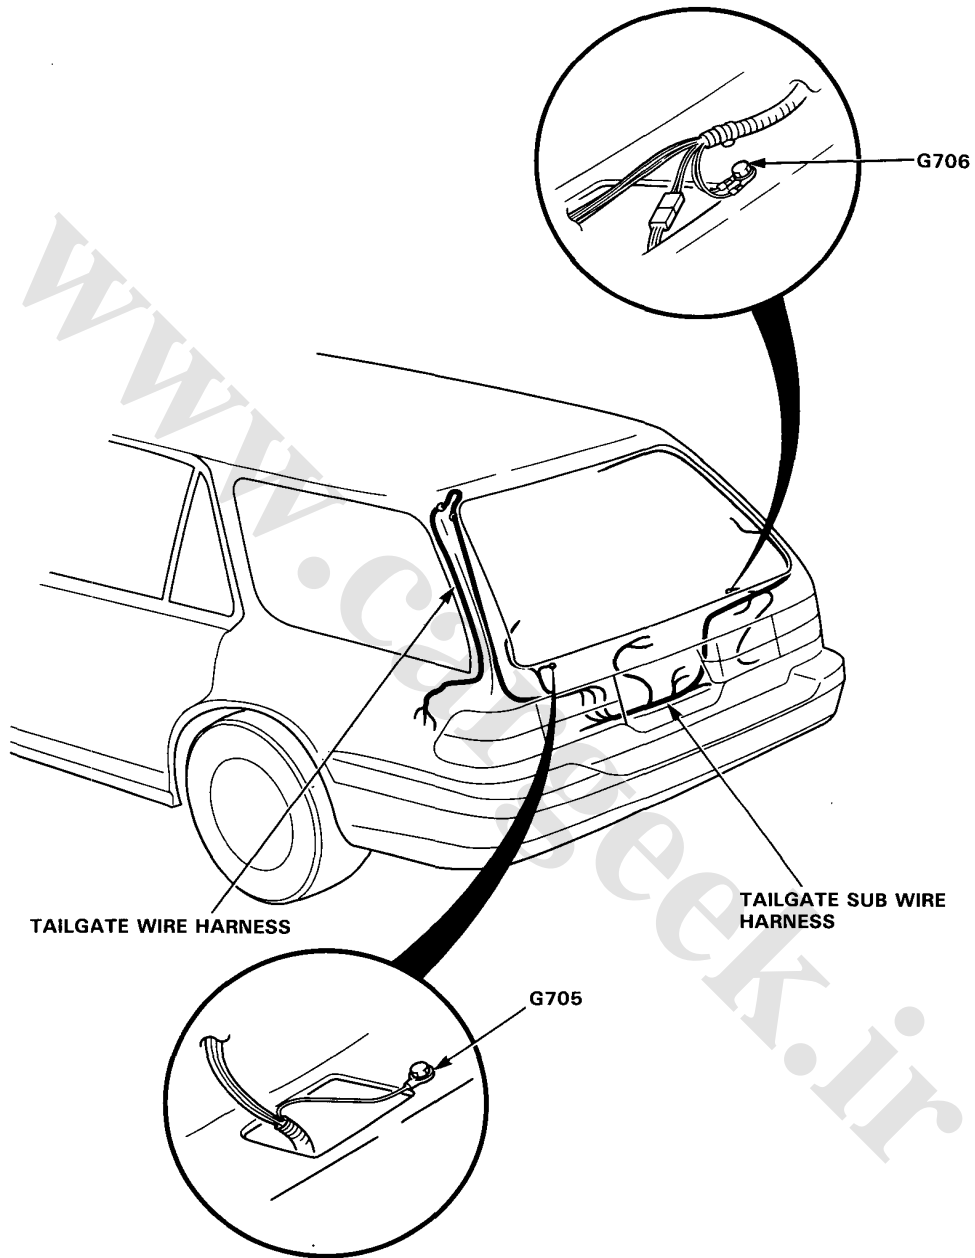




Door

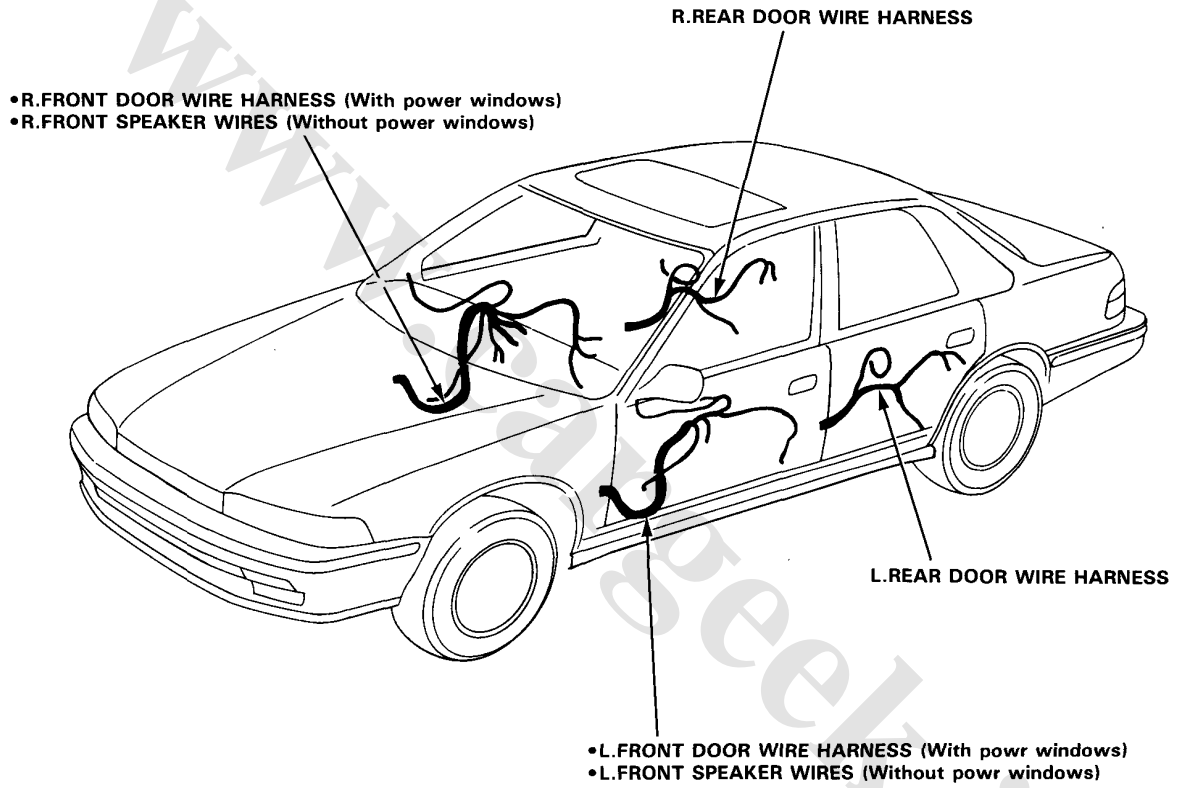

Wire Harness and Ground Locations


Roof

Sedan and Aero deck/Wagon:

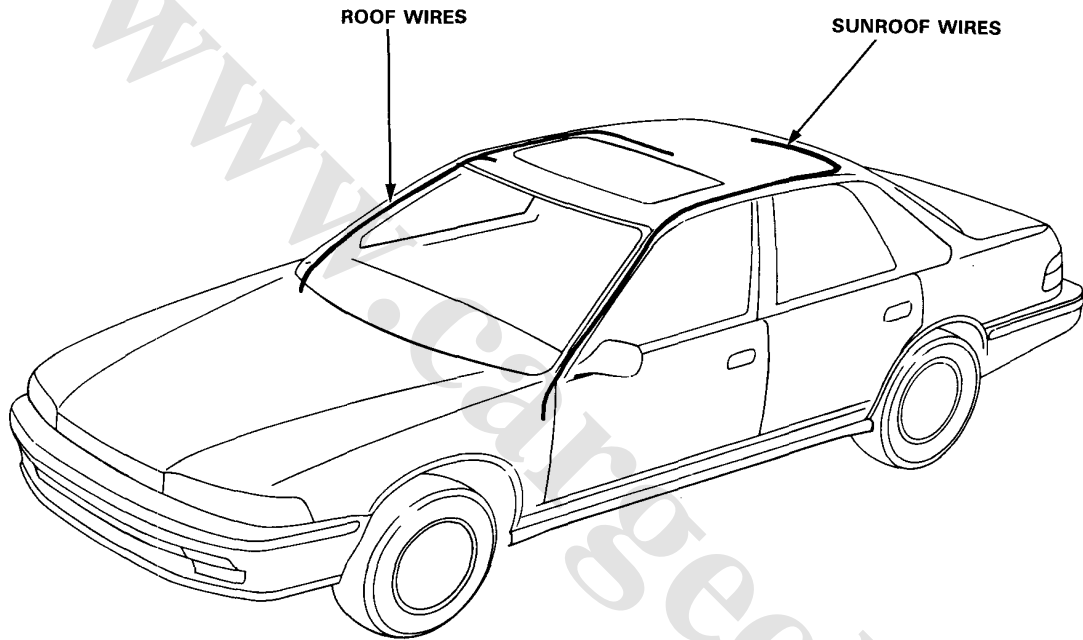




Rear Roof

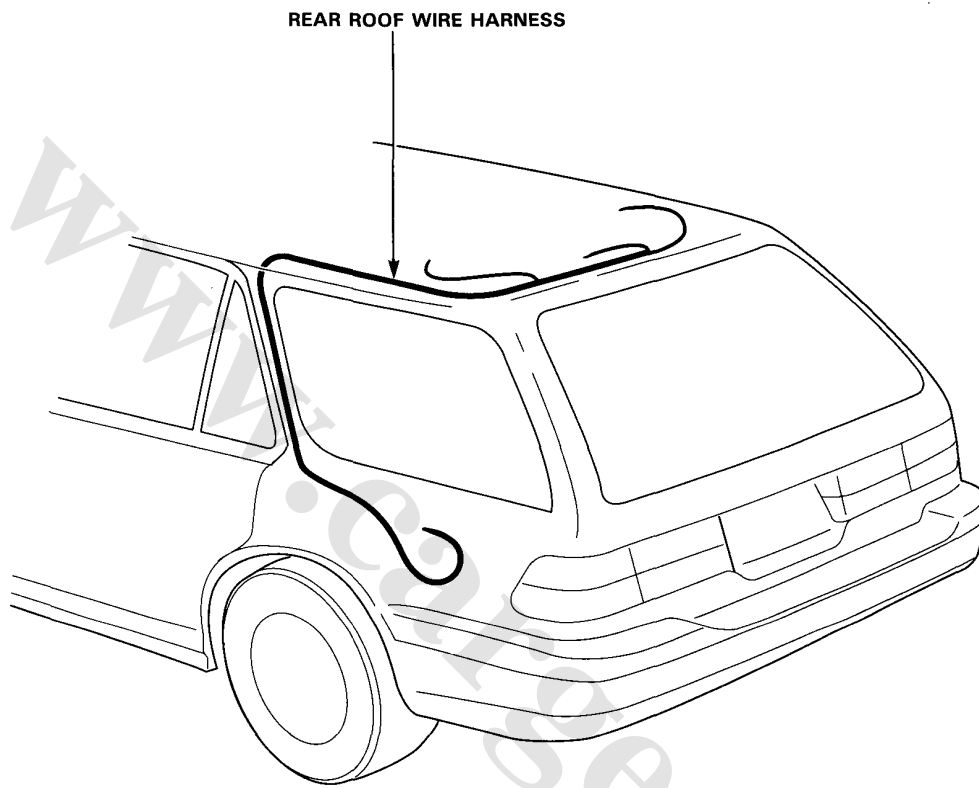


Wire Harness and Ground Locations

Seat

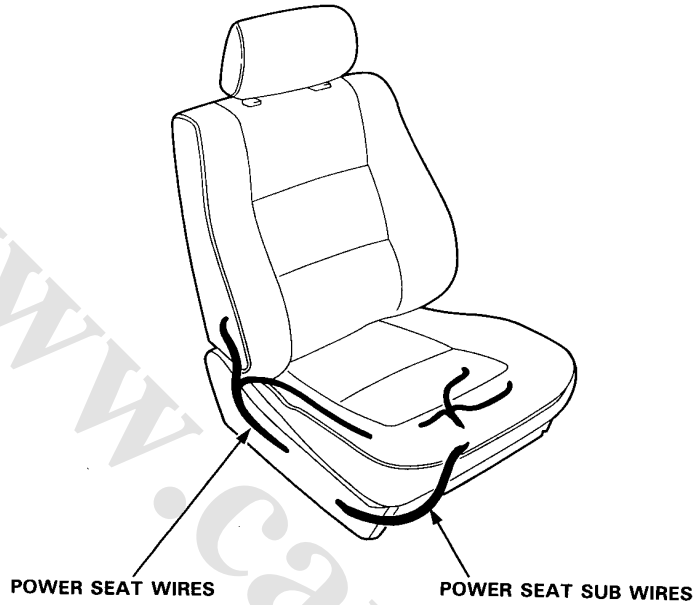

Height adjuster only:

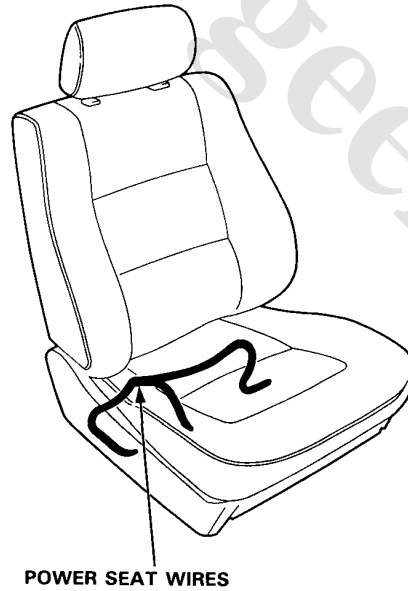




Fuses

Under-Hood Fuse/Relay Box


NOTE: Under-hood fuse/relay box is located right side, engine compartment.

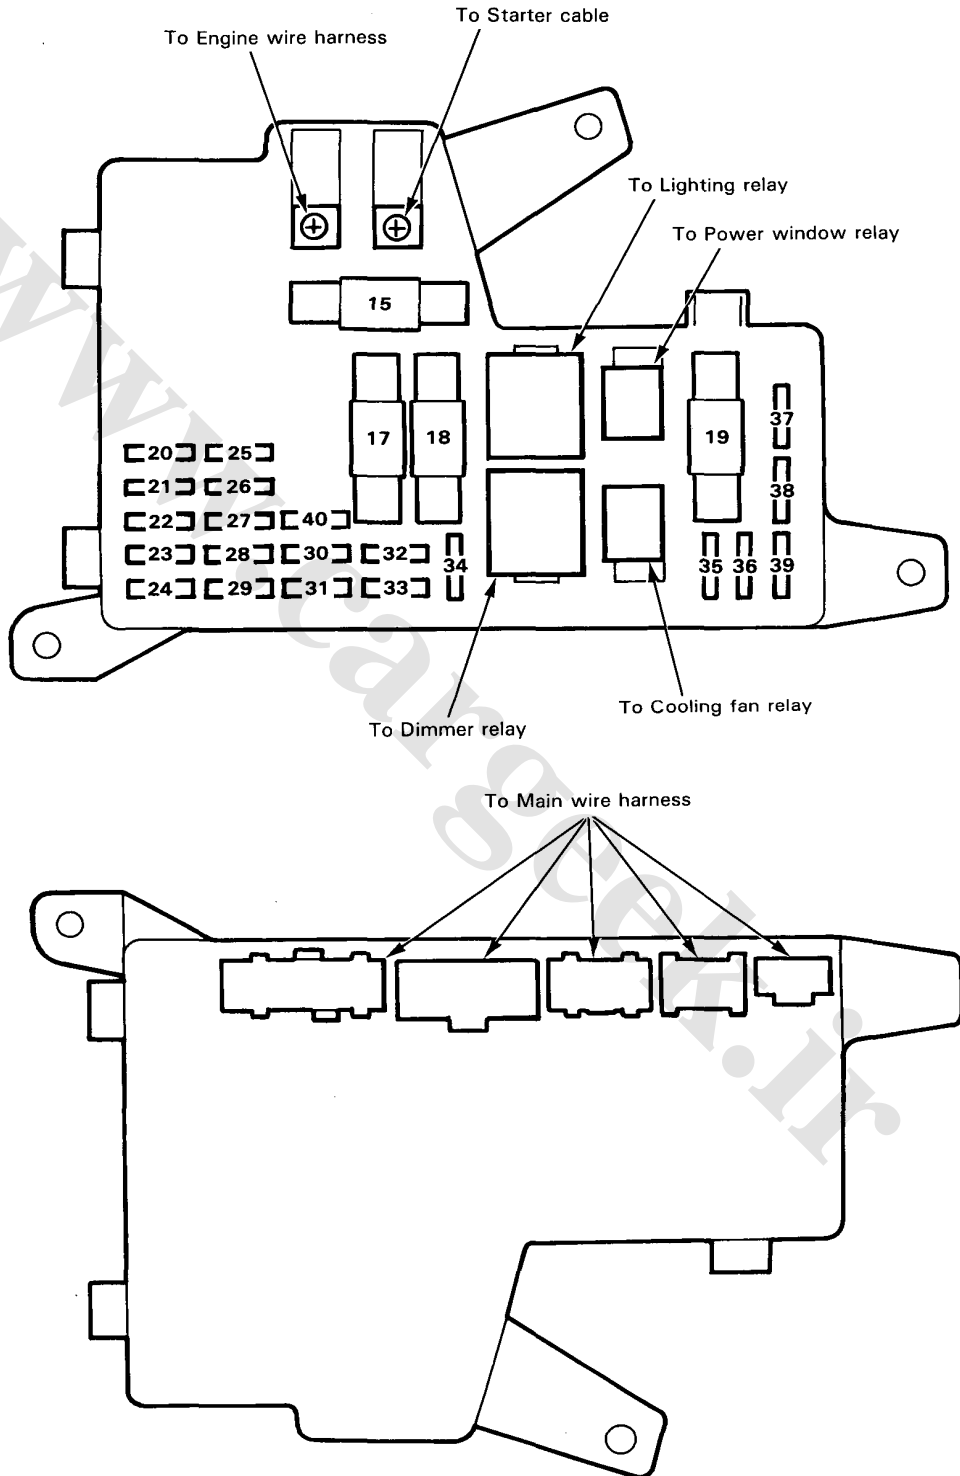

Fuses

Under-Dash Fuse Box


NOTE: Under-dash fuse box is located behind left kick panel (LHD) or right kick panel (RHD).

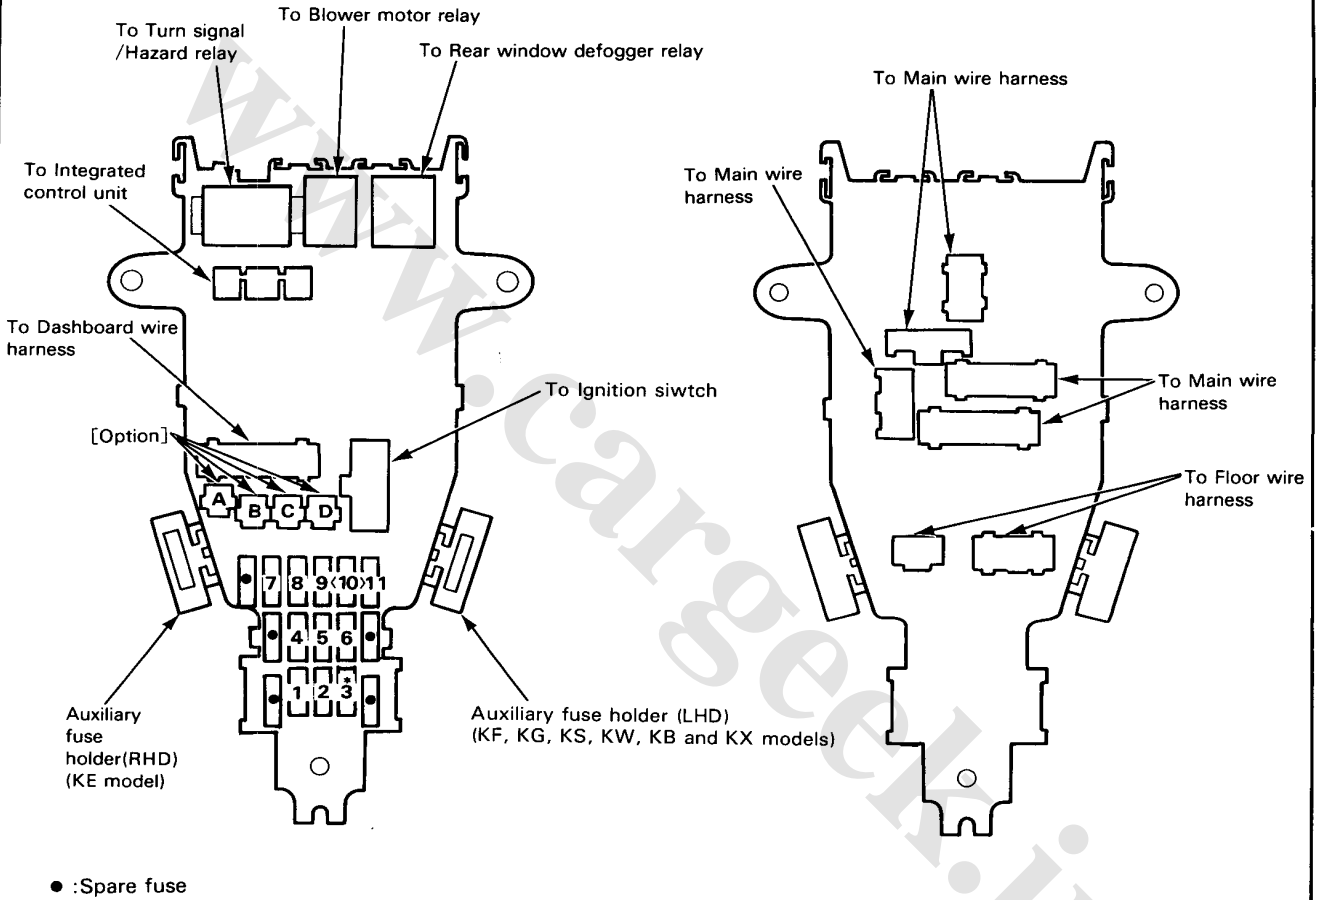




Under-Hood ABS Fuse/Relay Box

NOTE: ABS Fuse/Relay box is on the right side of the engine compartment.

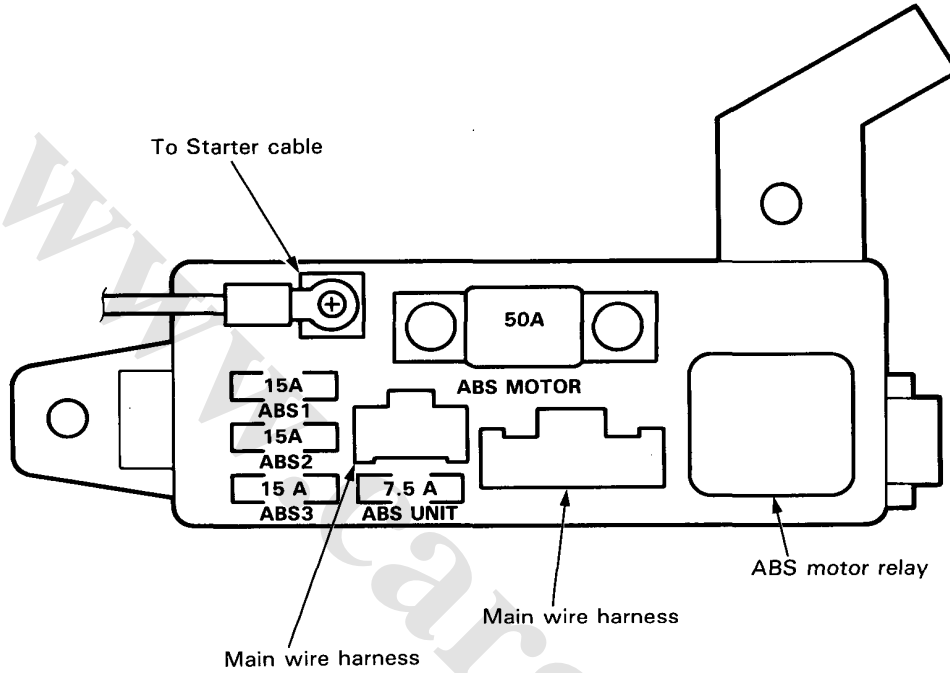


Power Distribution Circuit Identification

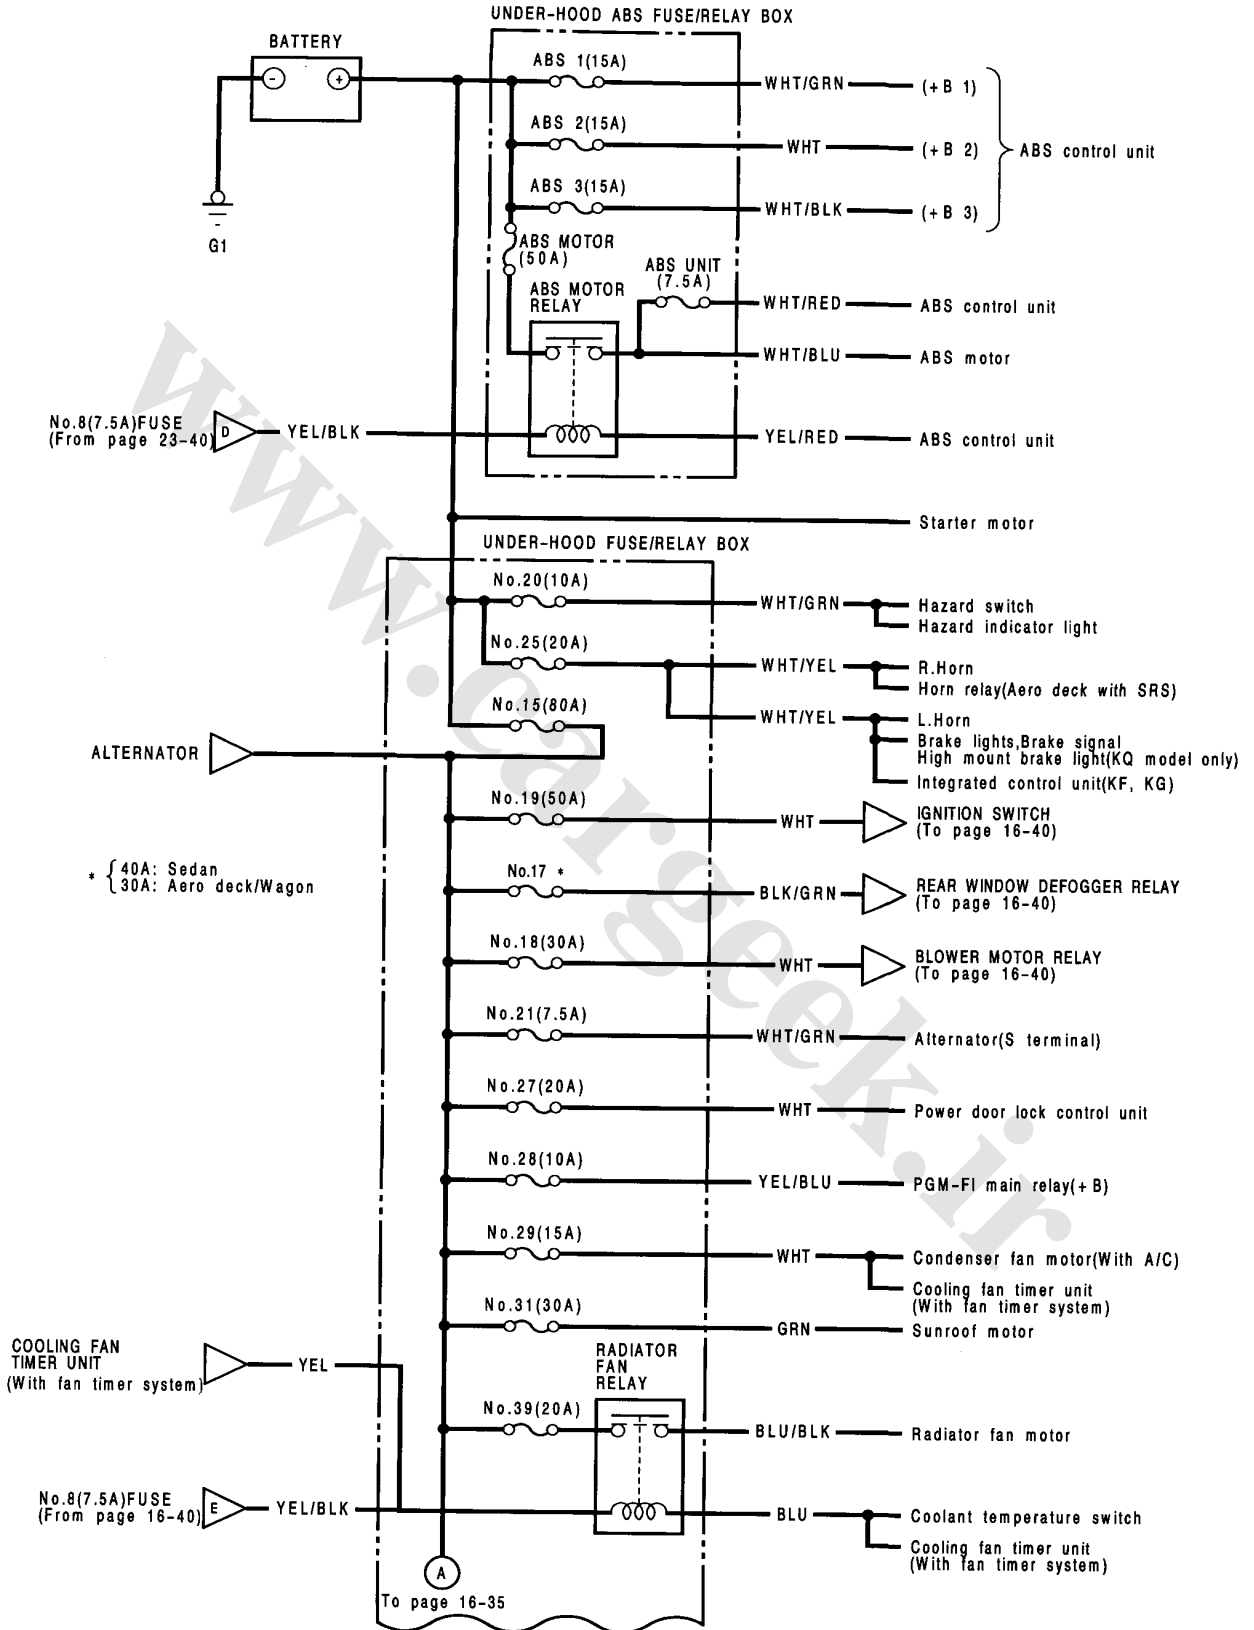



UNDER-HOOD FUSE/RELAY BOX

From page 16-34

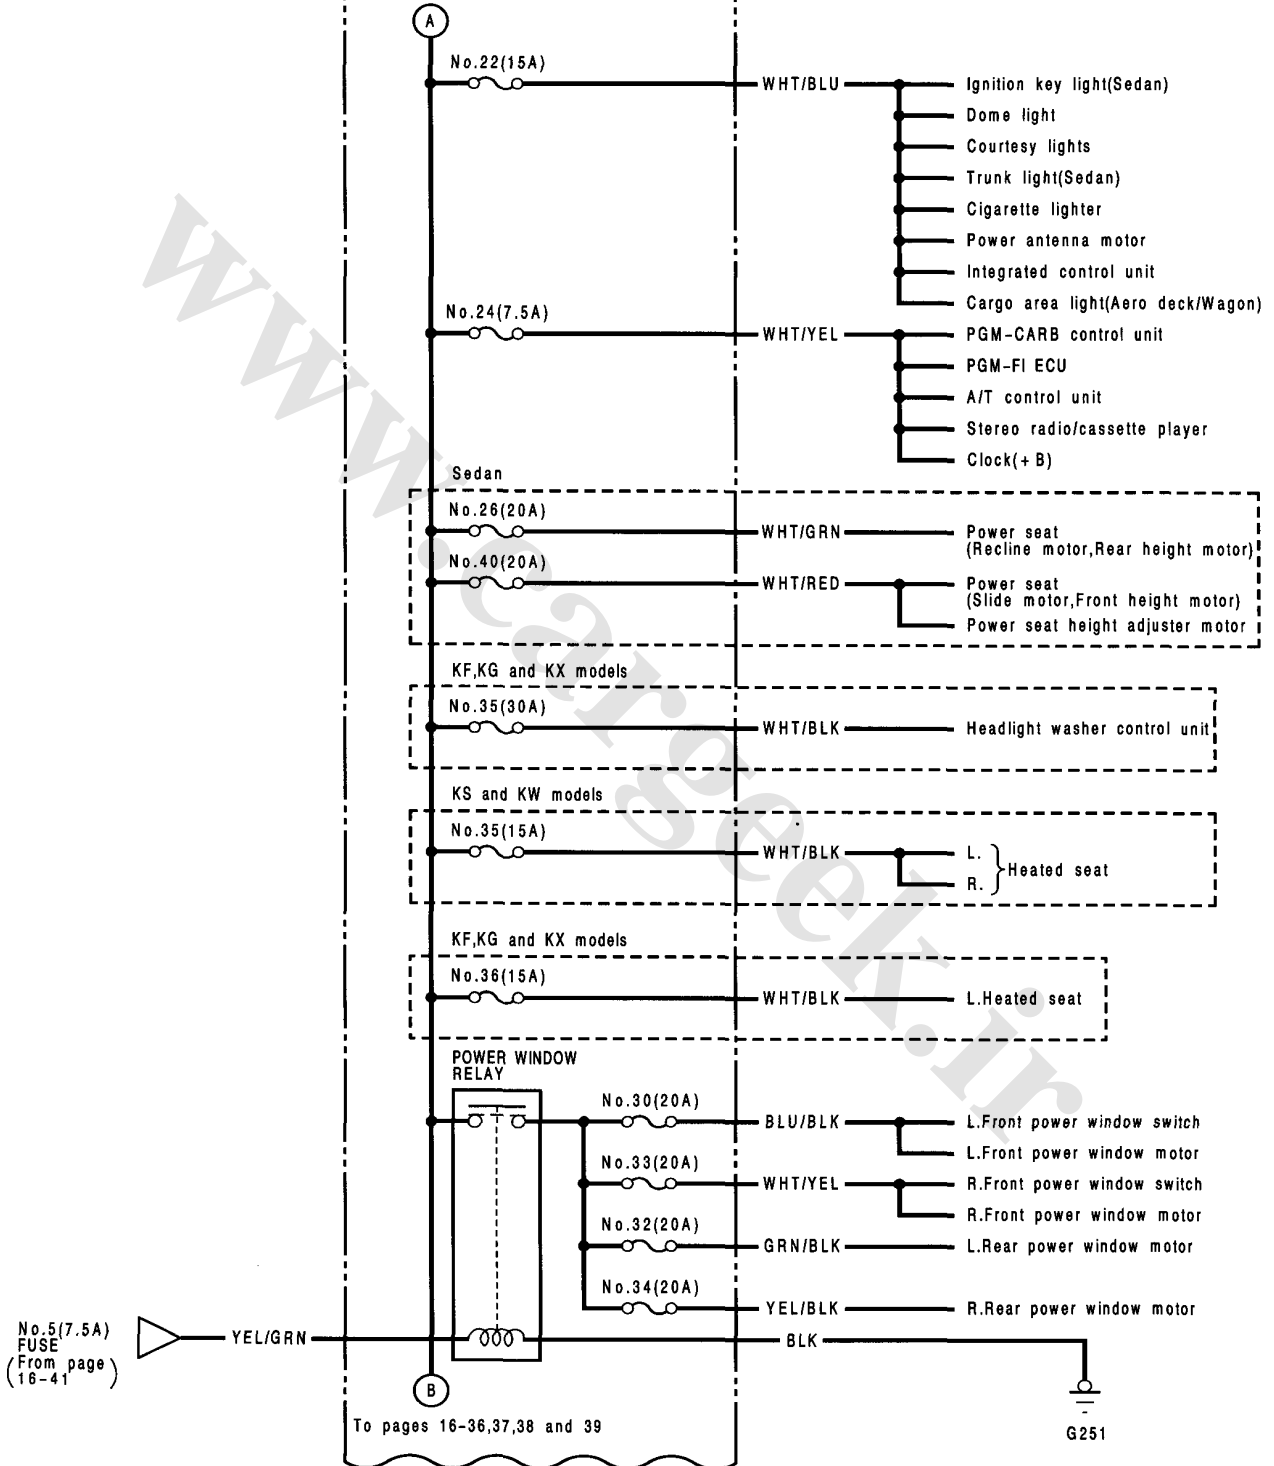


To pages 16-36, 37, 38 and 39

(cont'd)

Power Distribution


Circuit Identification (cont'd)

KF,KG,KB and KX models :

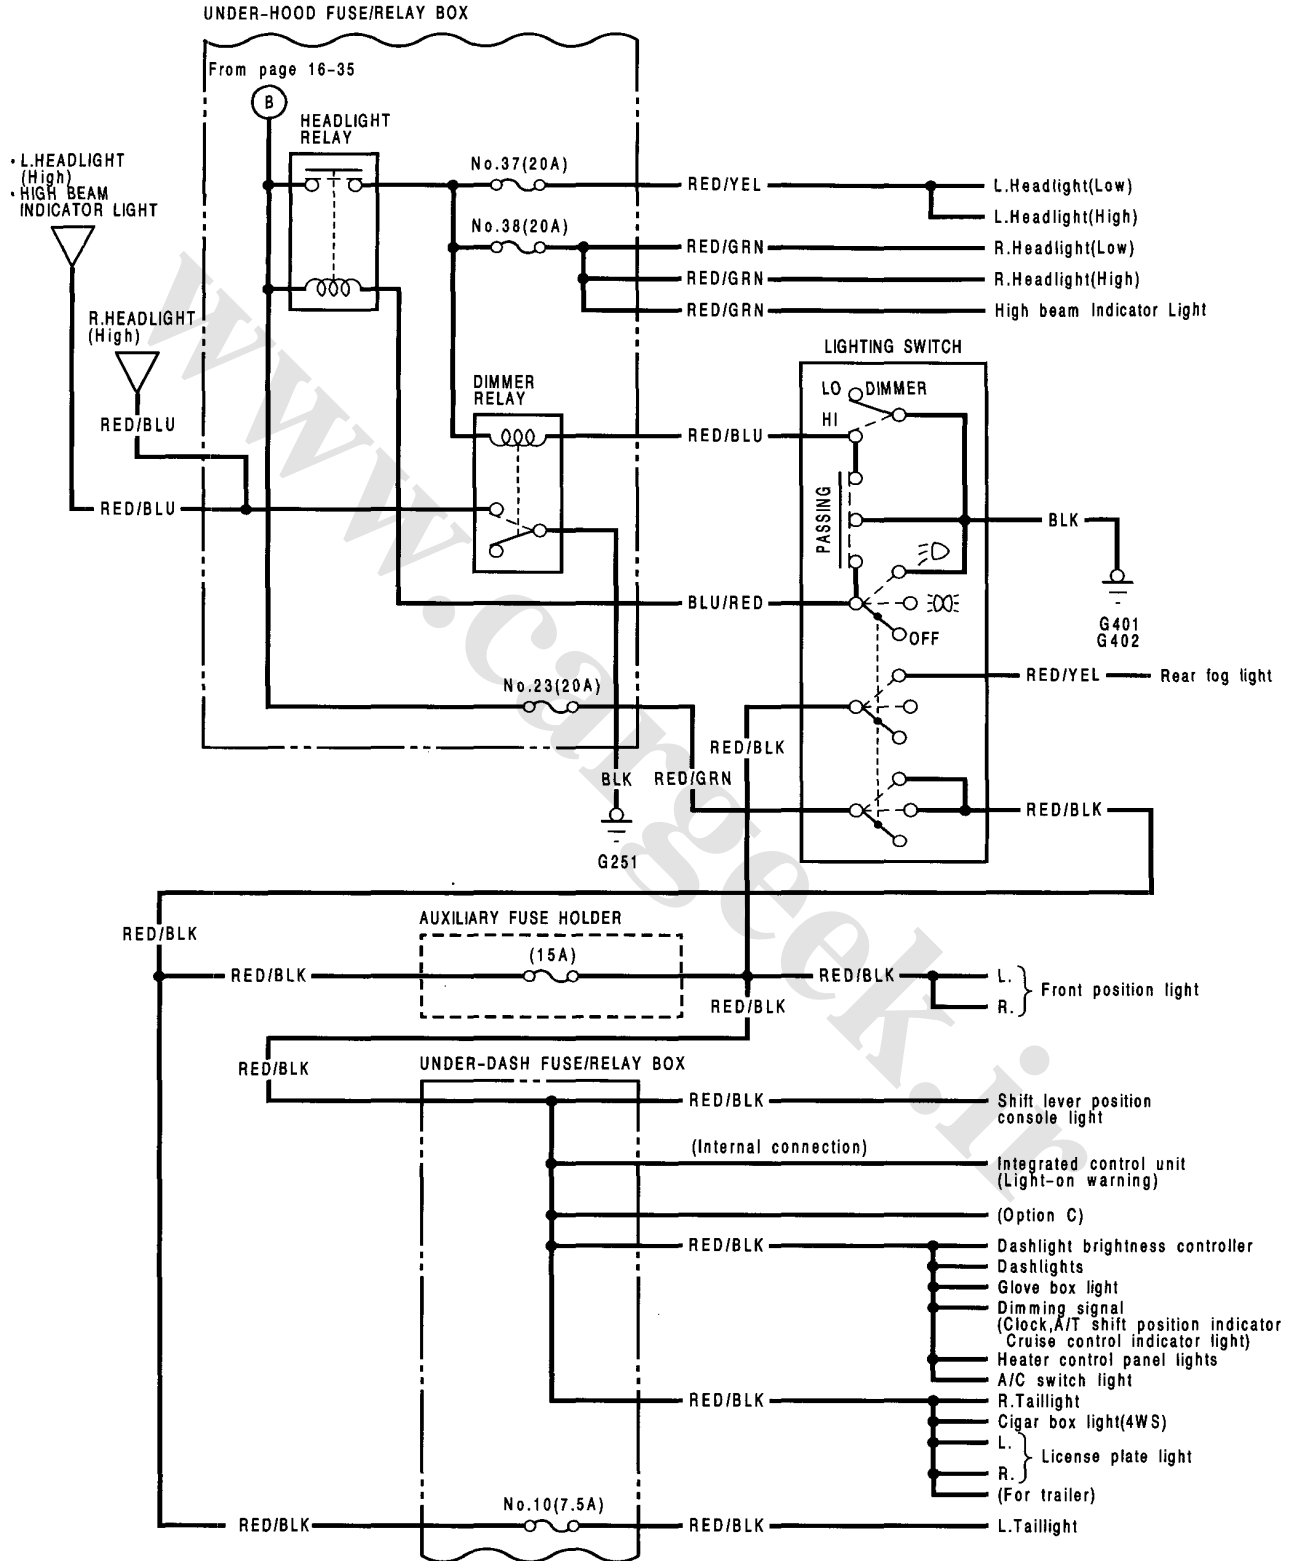



KY,KQ,KP,KT and KU models :

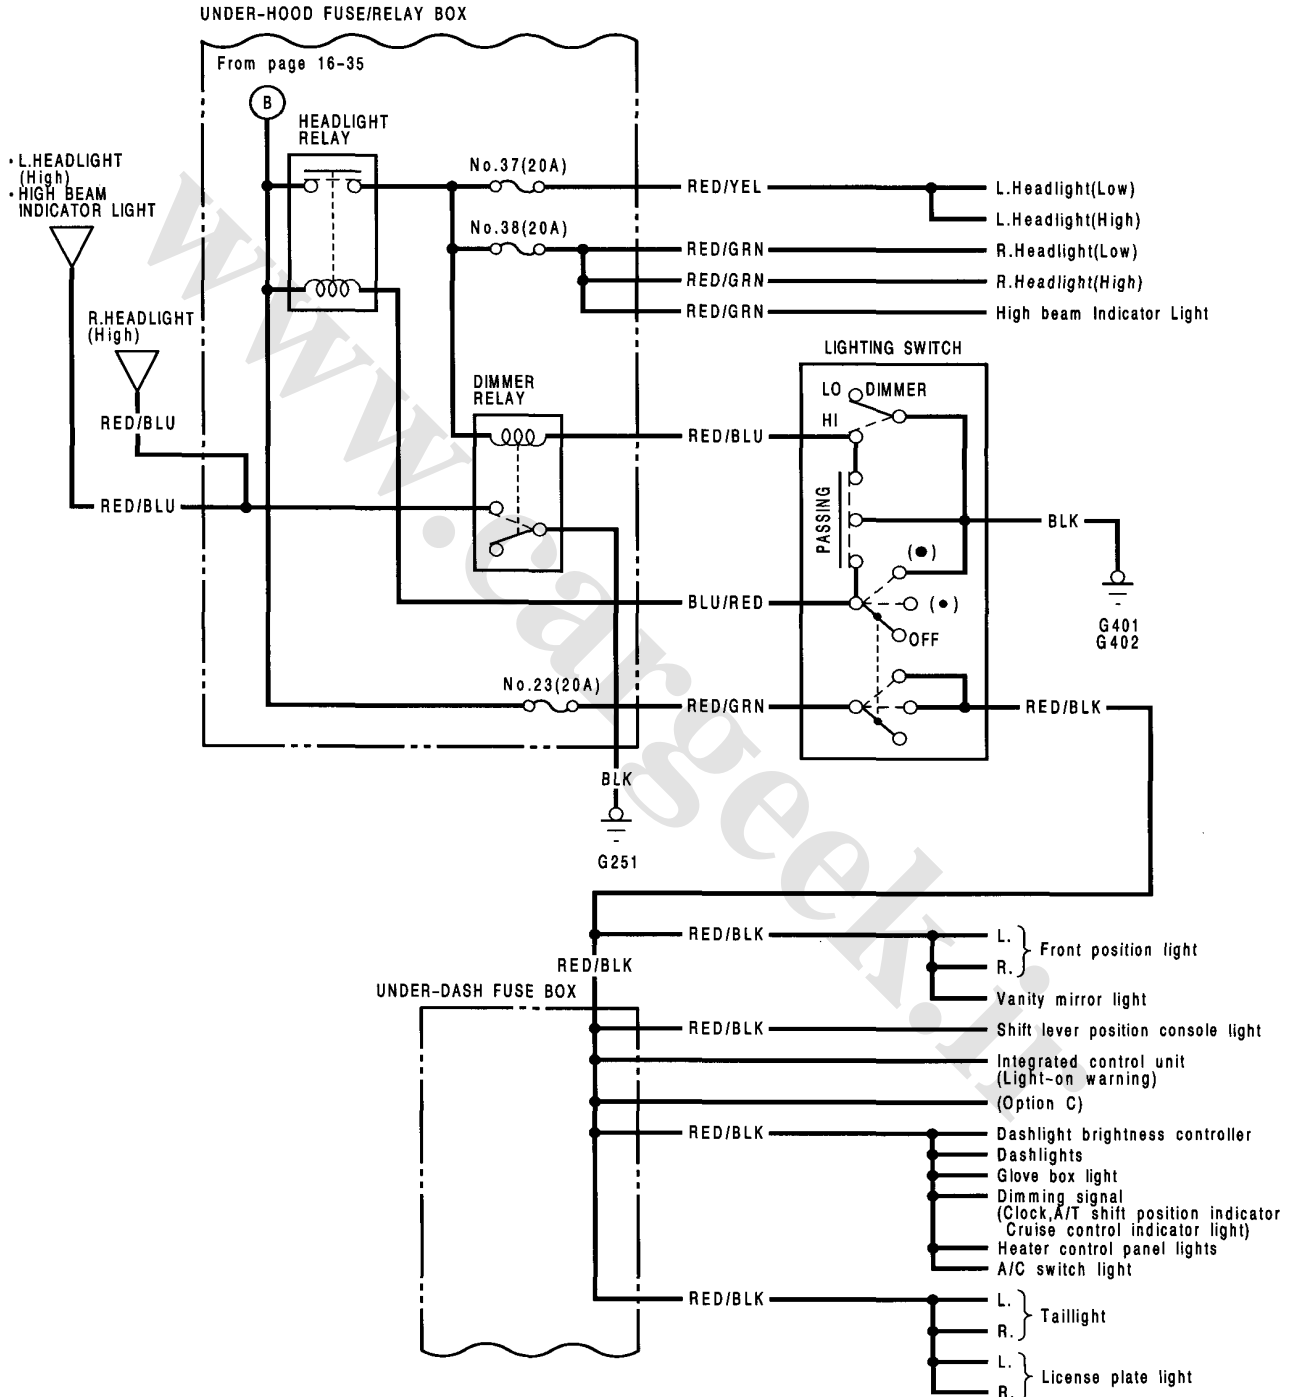


(cont'd)

Power Distribution


Circuit Identification (cont'd)

With Daytime Light :

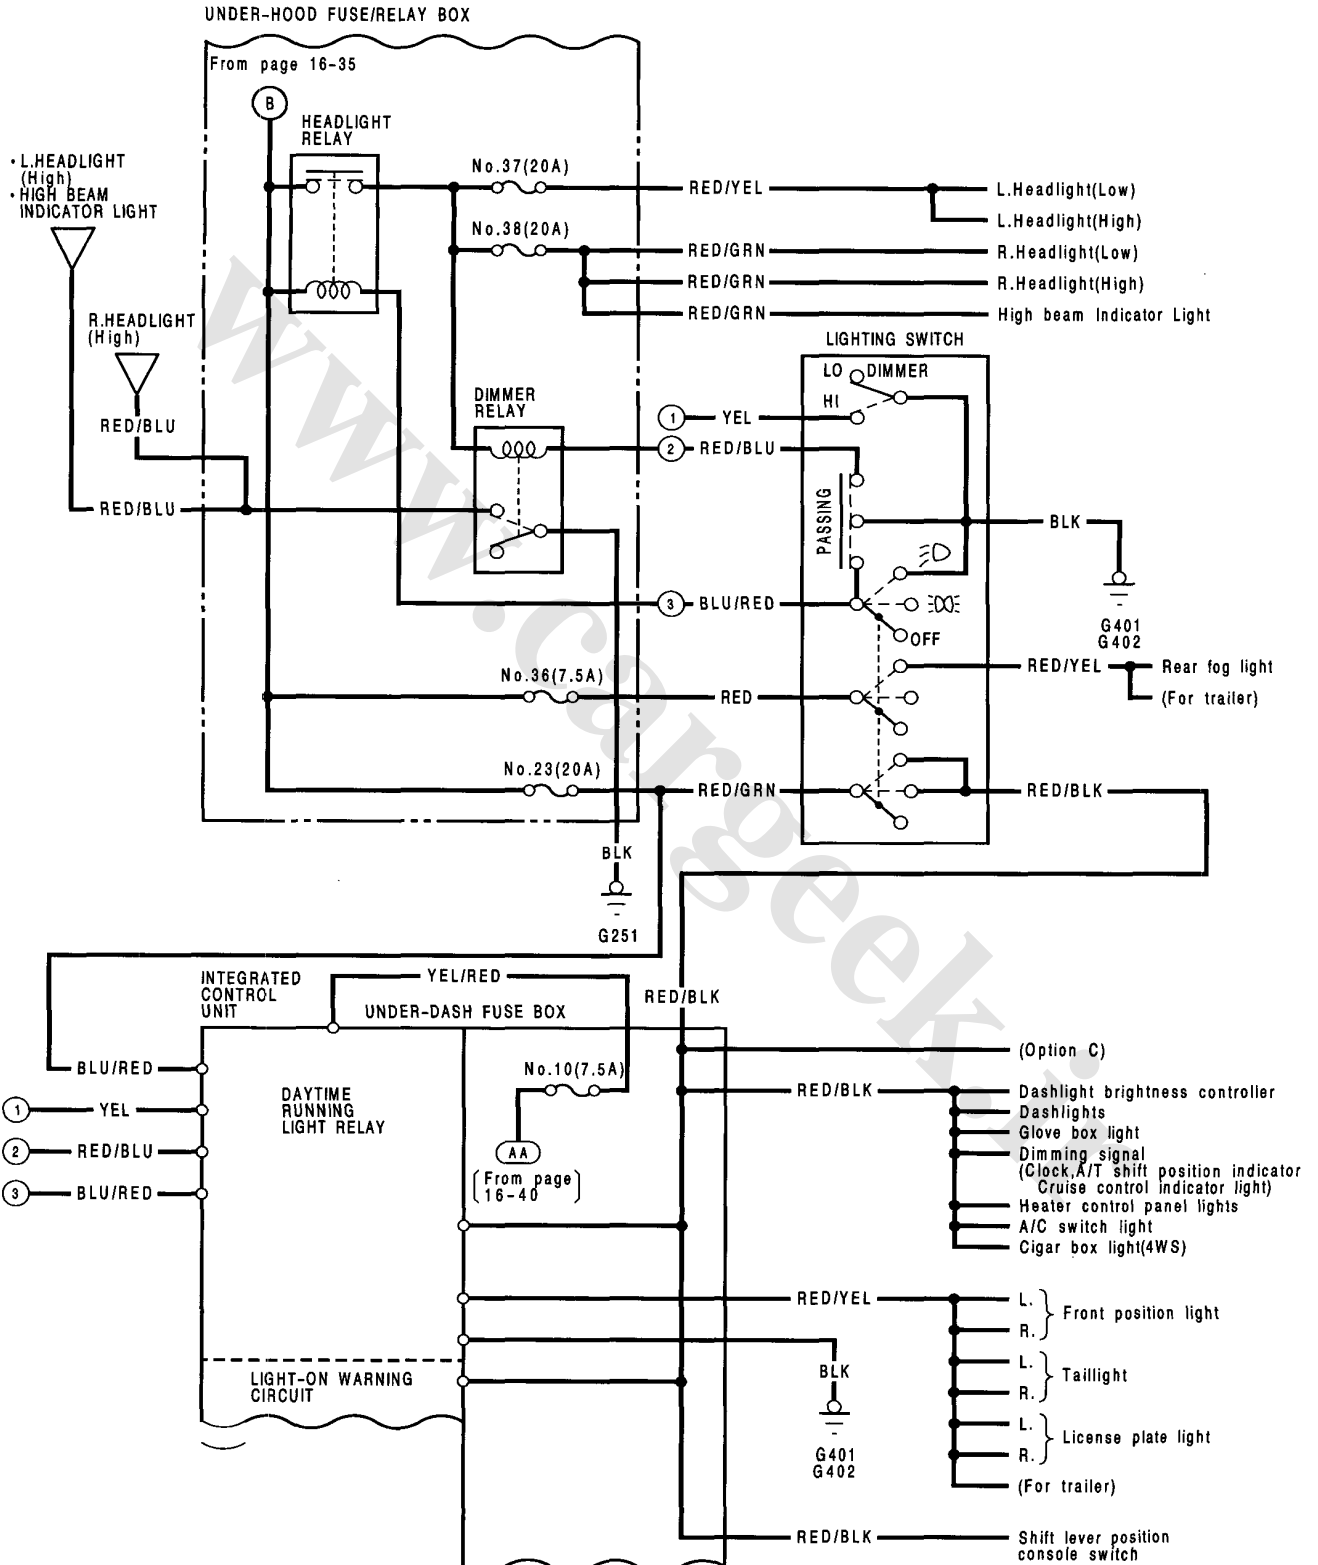




With Dim-Dip Light :


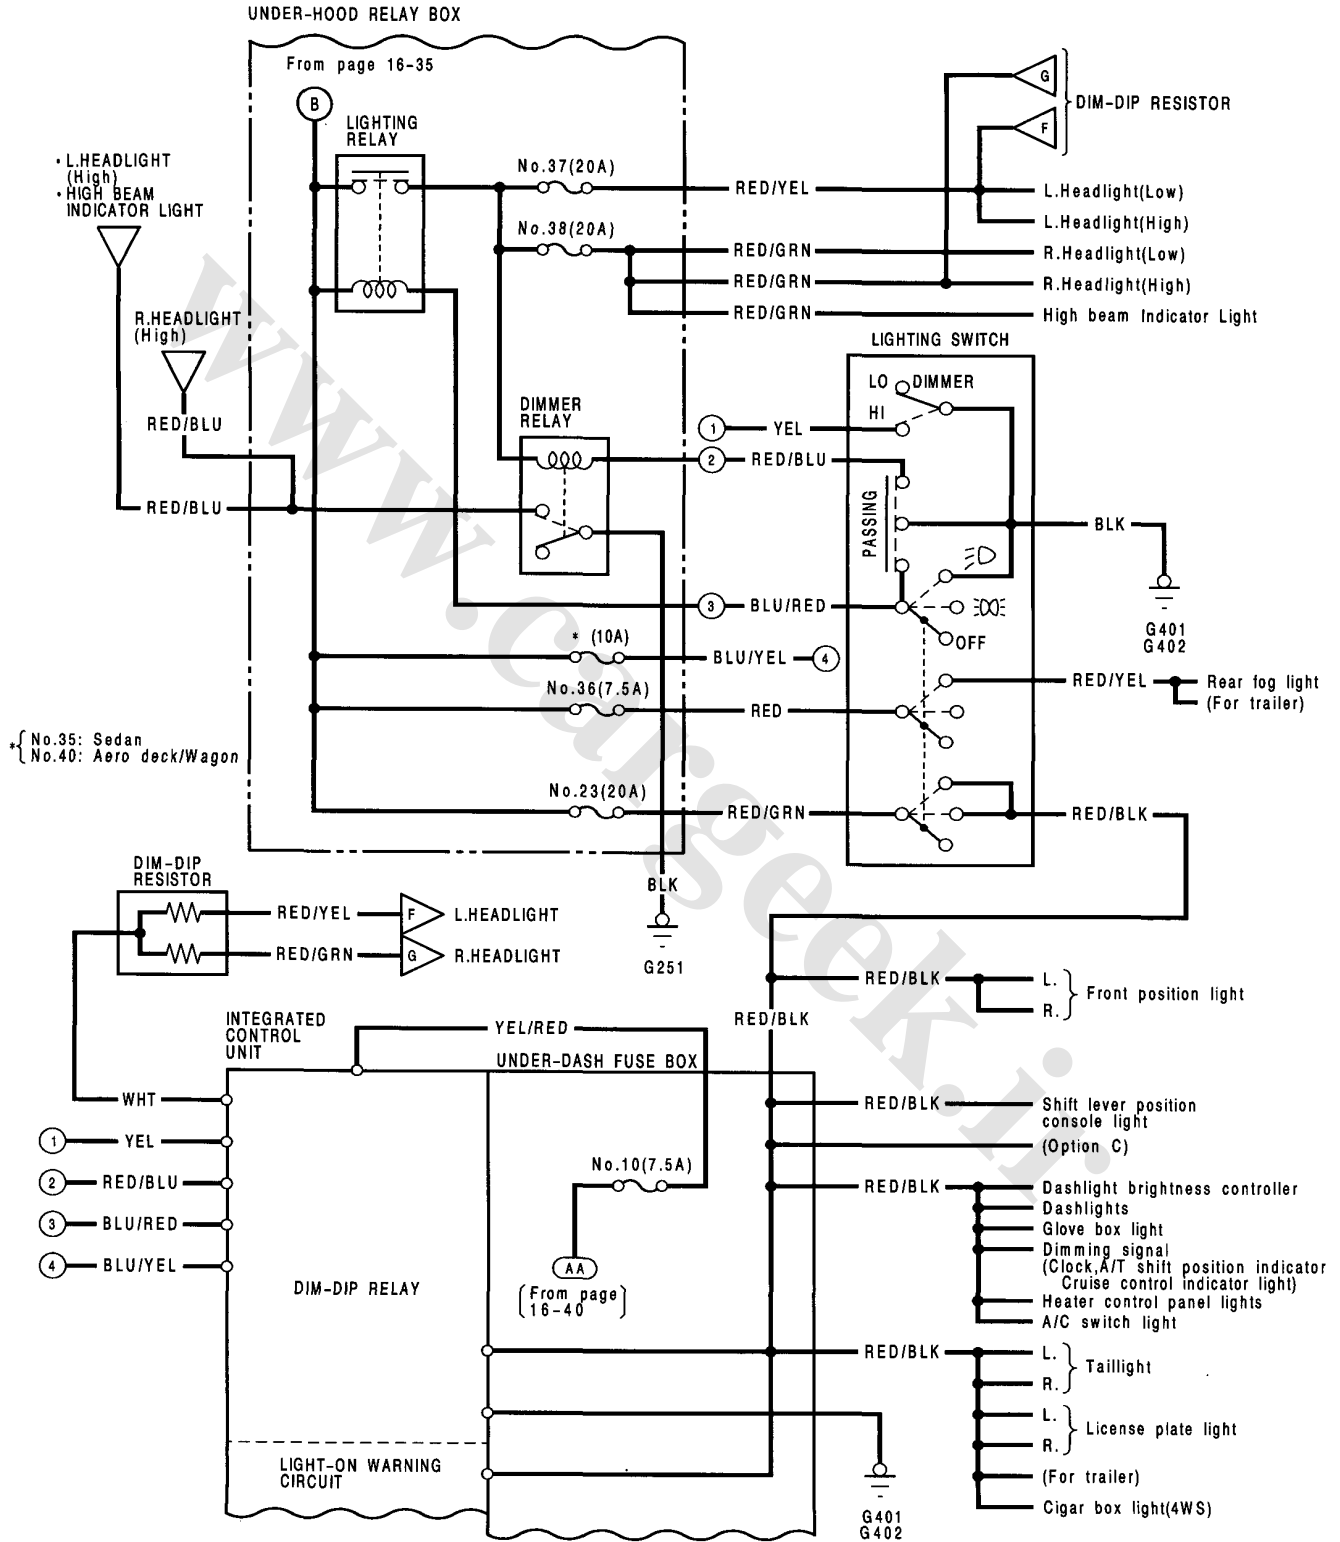


(cont'd)

Power Distribution


Circuit Identification (cont'd)

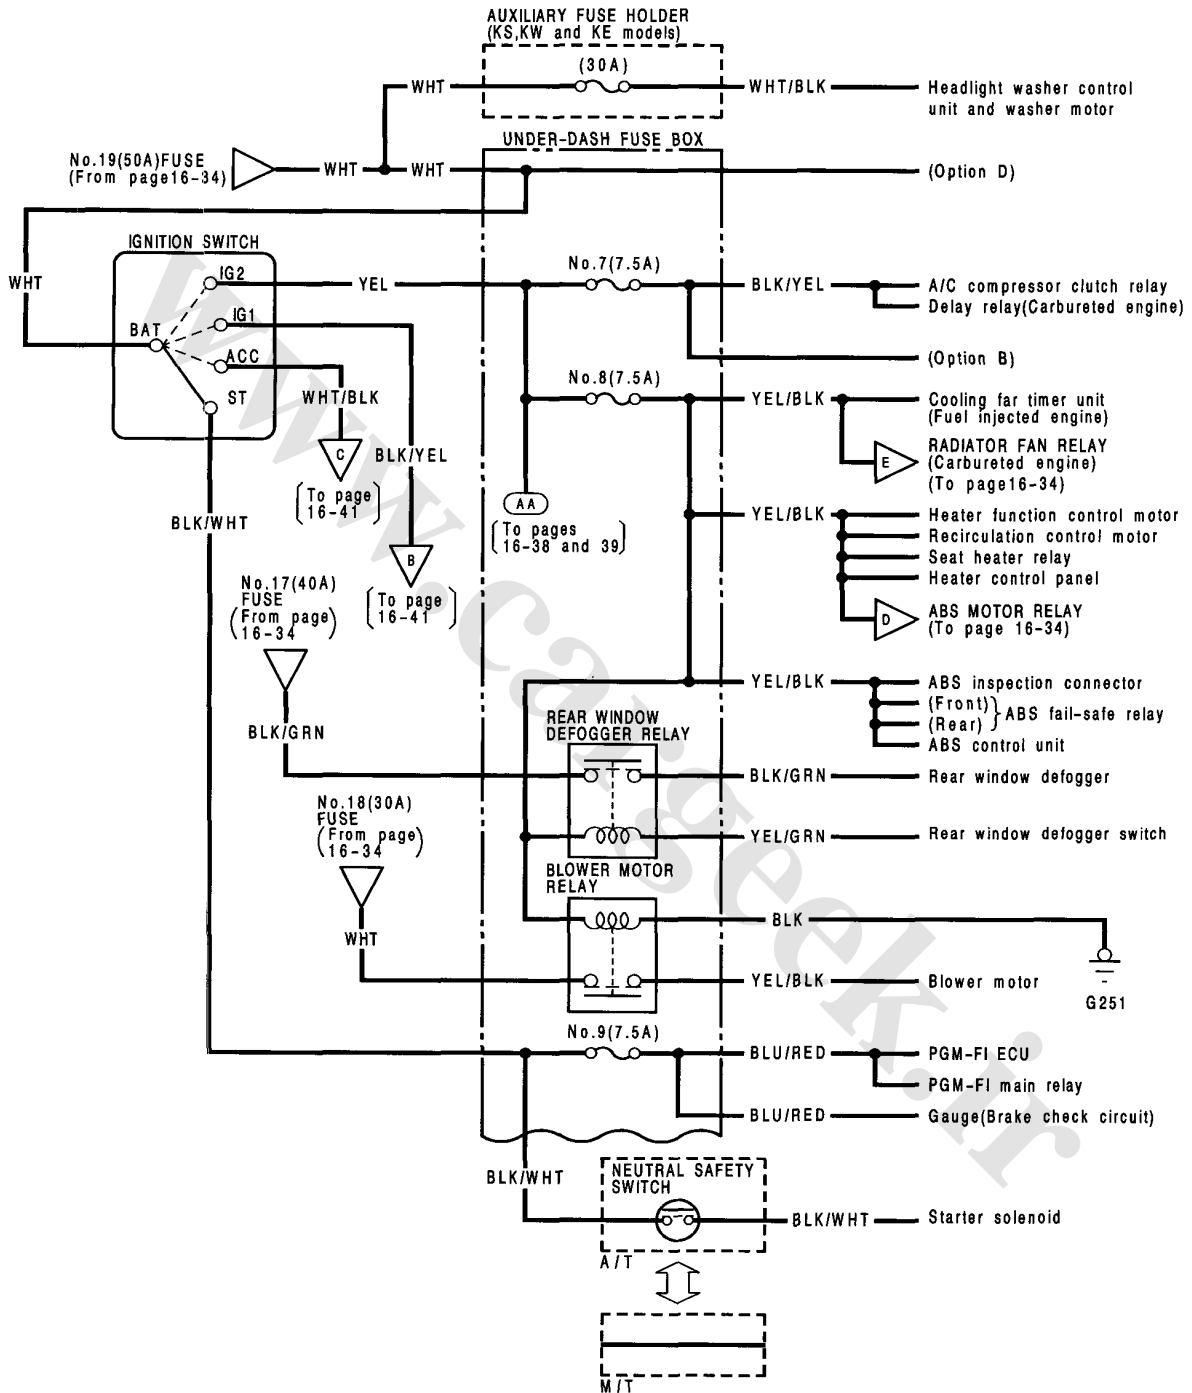

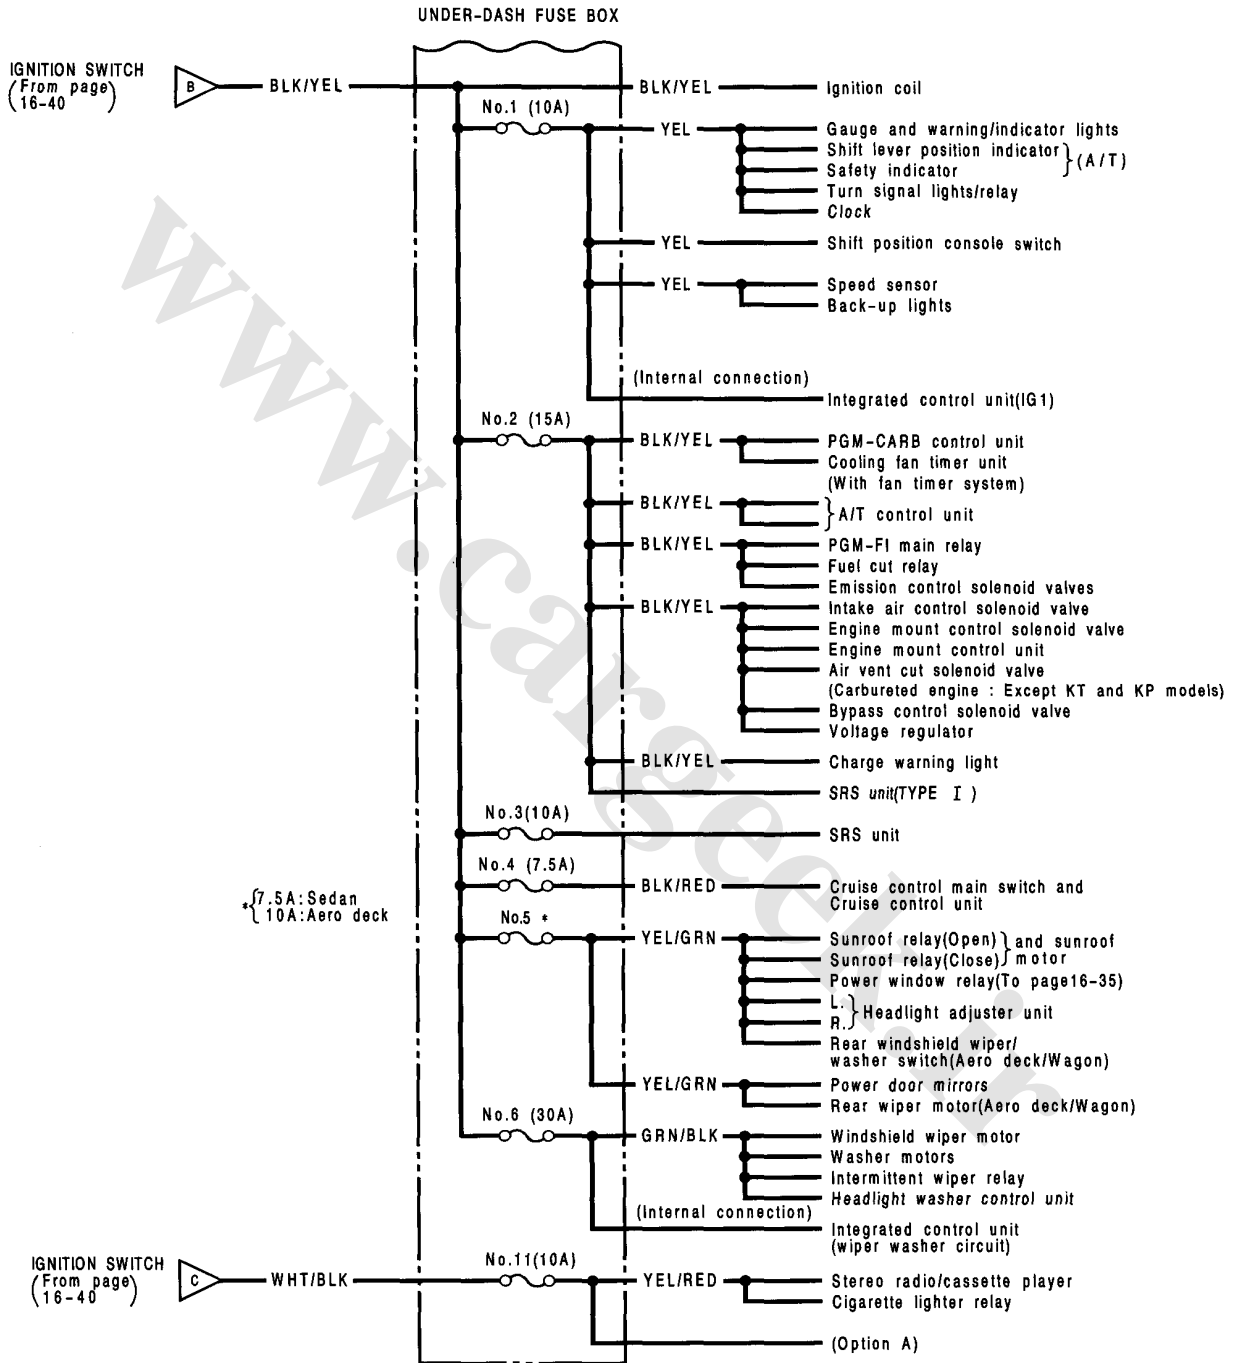


Ground Distribution

Circuit Identification

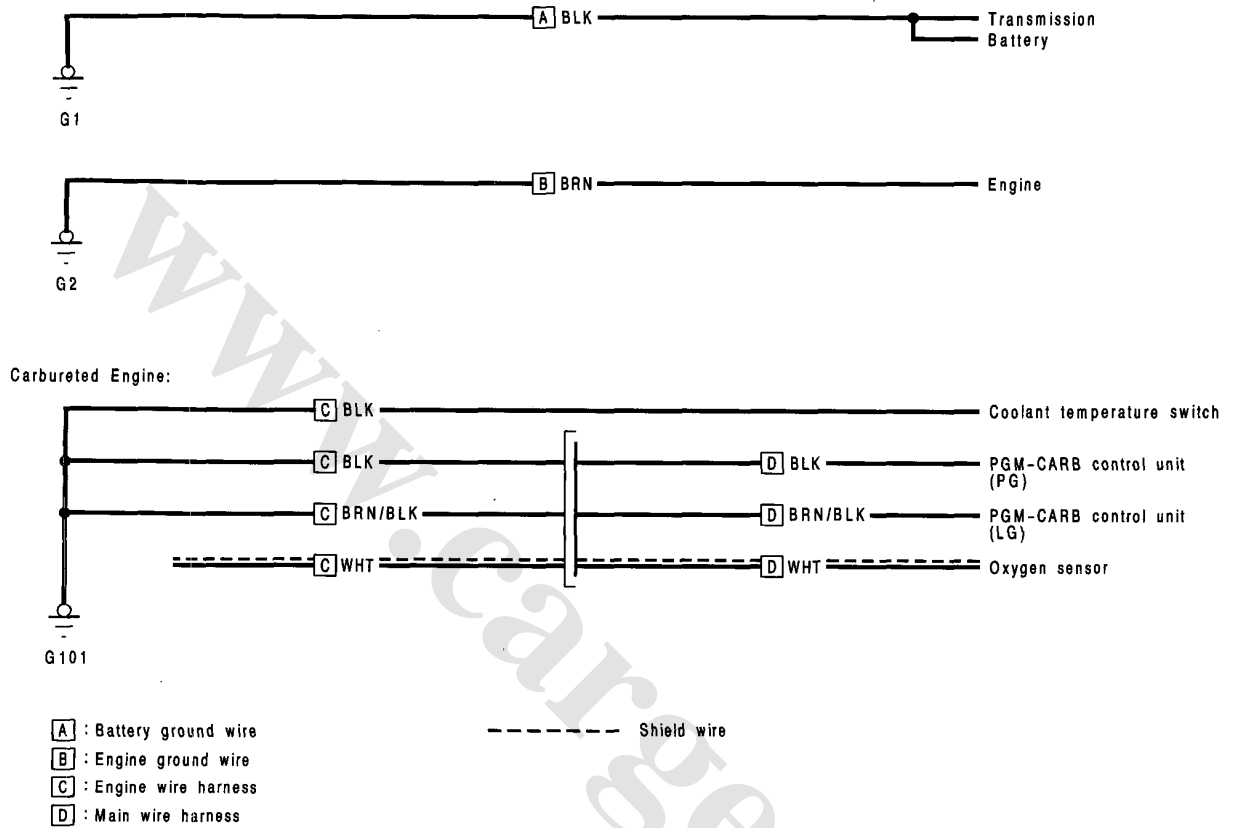



Fuel-Injected Engine:

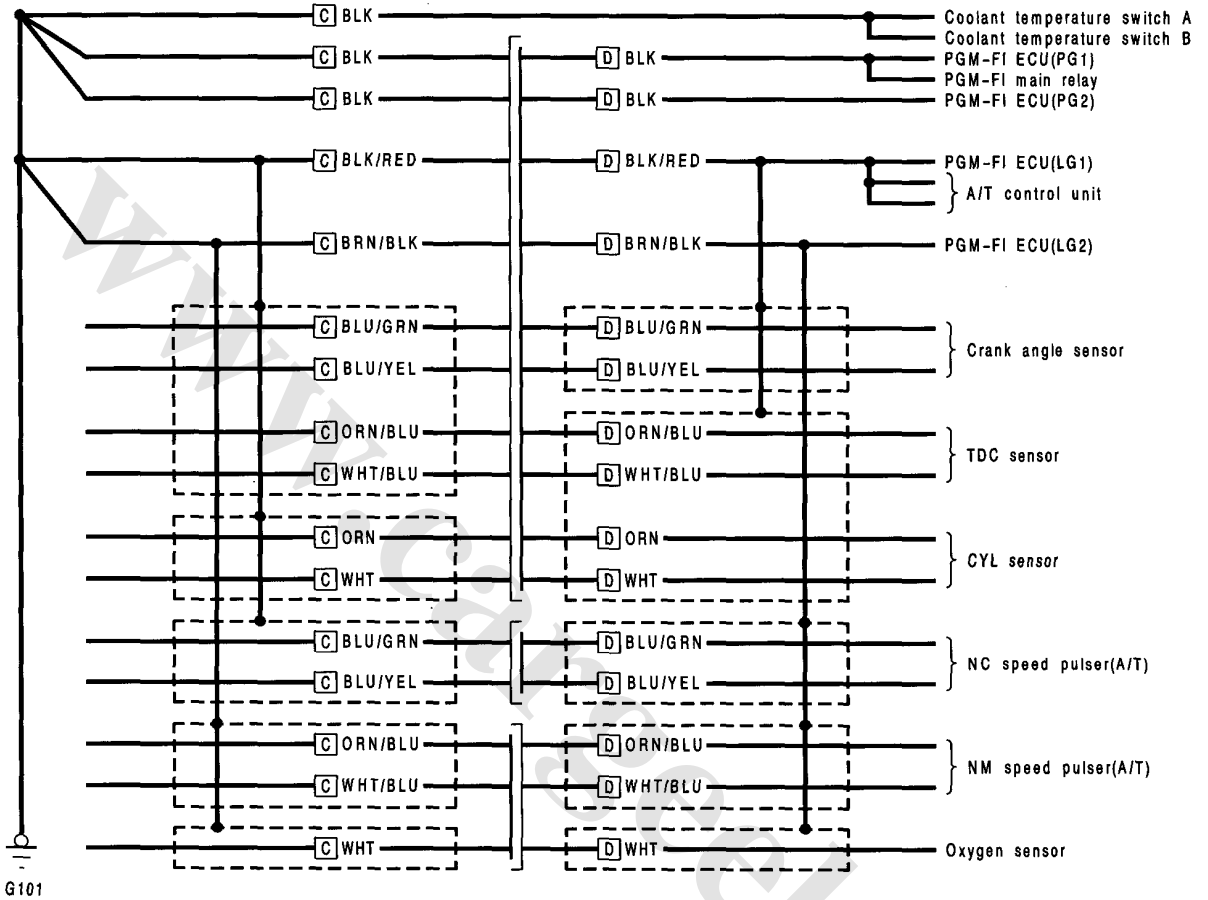


C : Engine wire harness
D : Main wire harness

----- Shield wire

Ground Distribution



Circuit Identification (LHD)

Europe model:

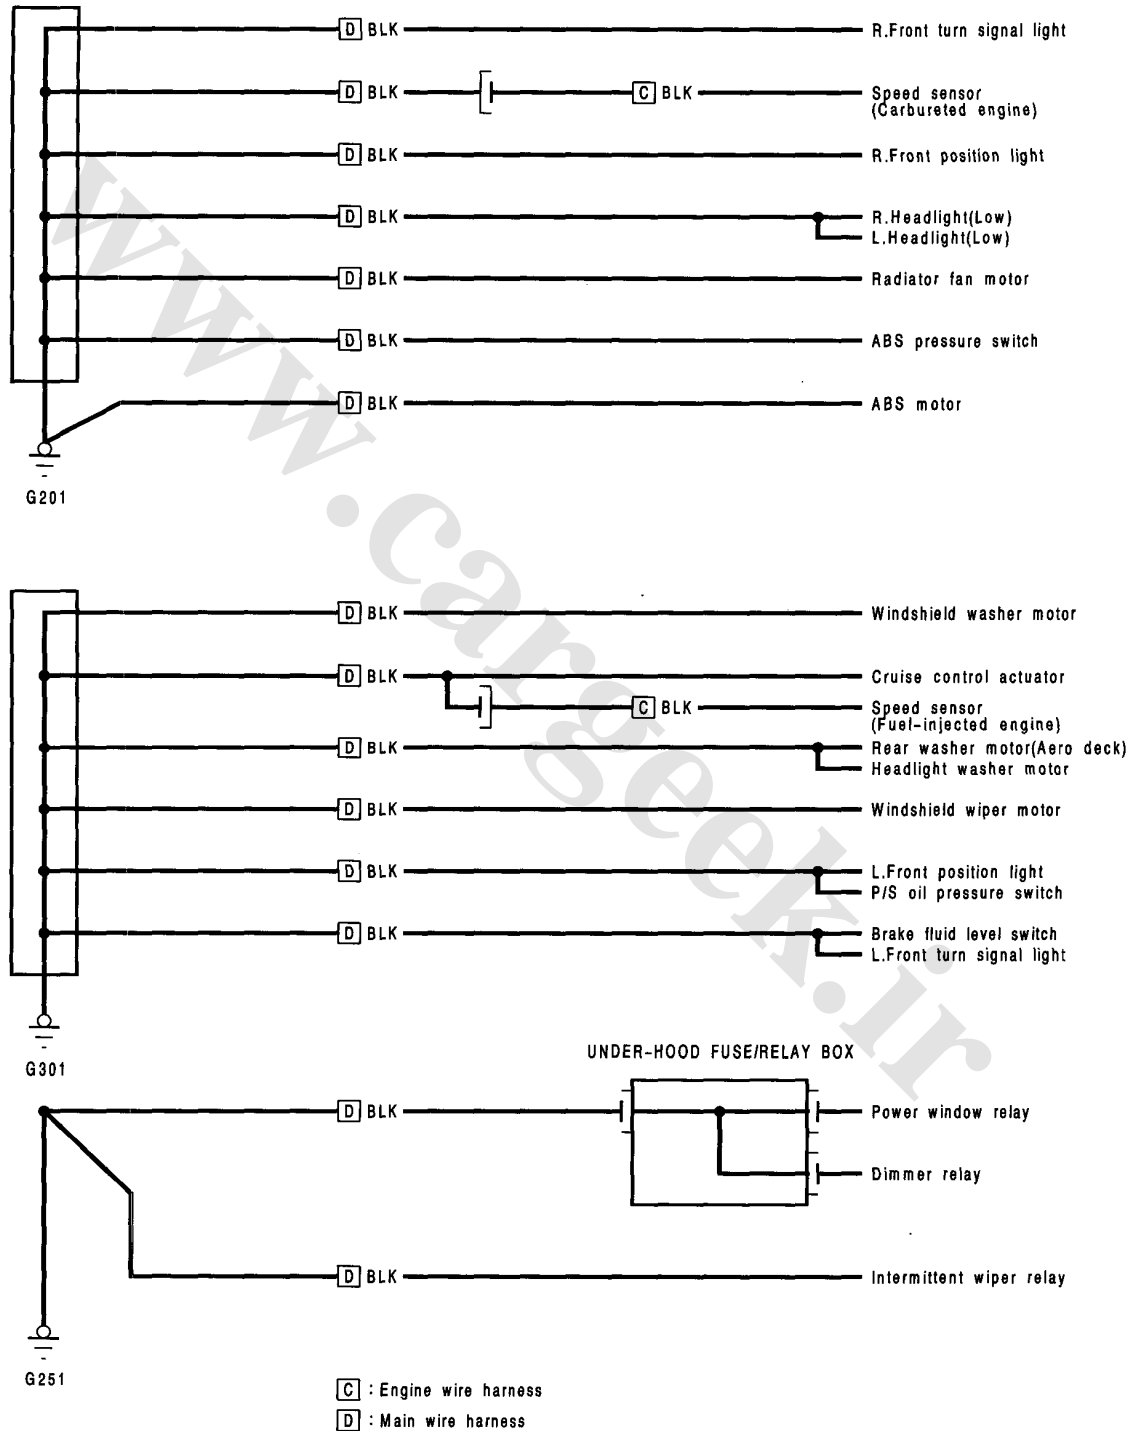




Except europe model:

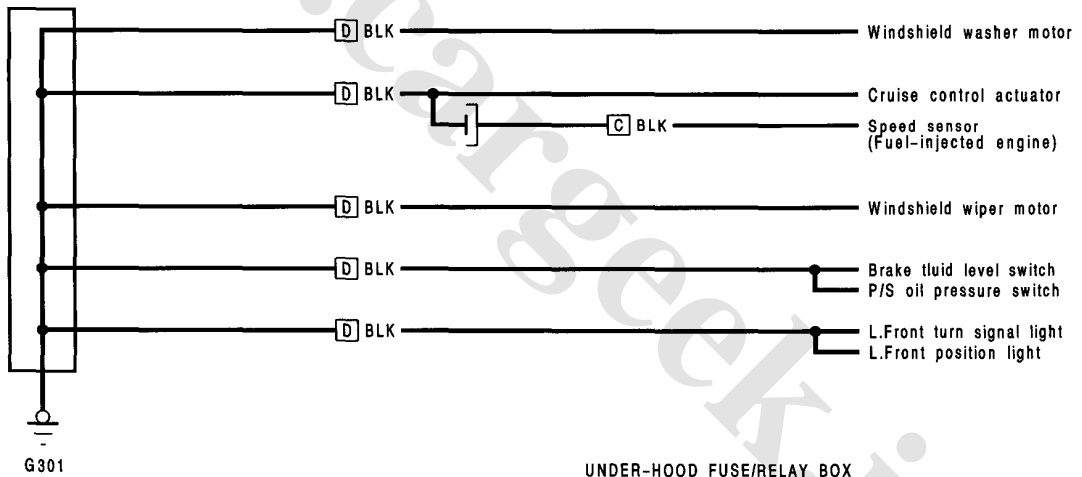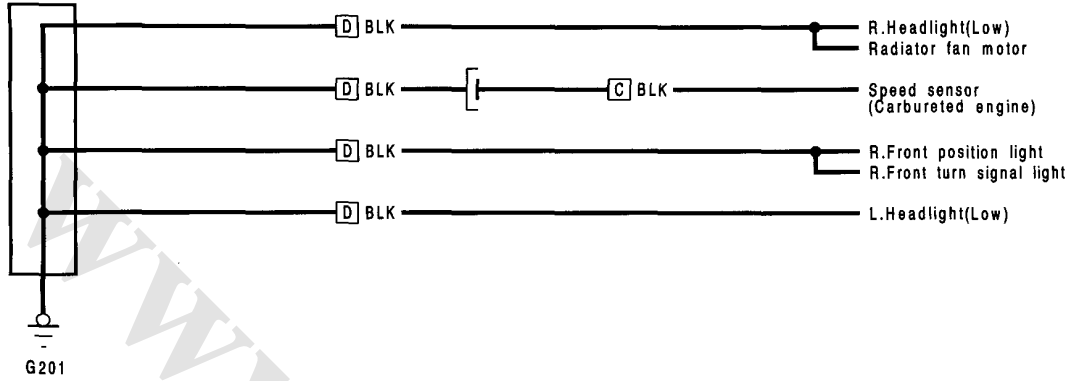

G301

G251

UNDER-HOOD FUSE/RELAY BOX

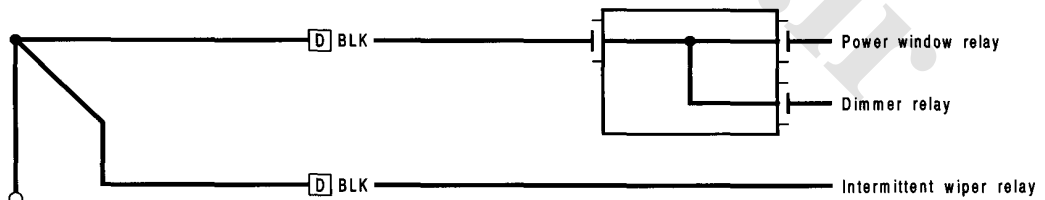




(C) : Engine wire harness

(D) : Main wire harness

(cont'd)

Ground Distribution

Circuit Identification (RHD) (cont'd)

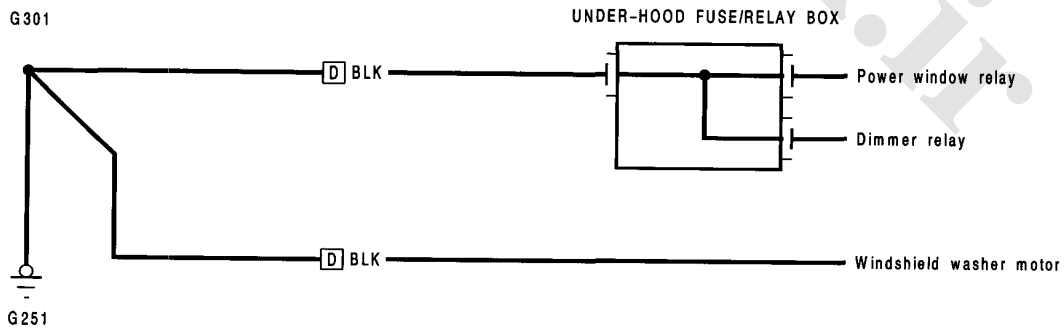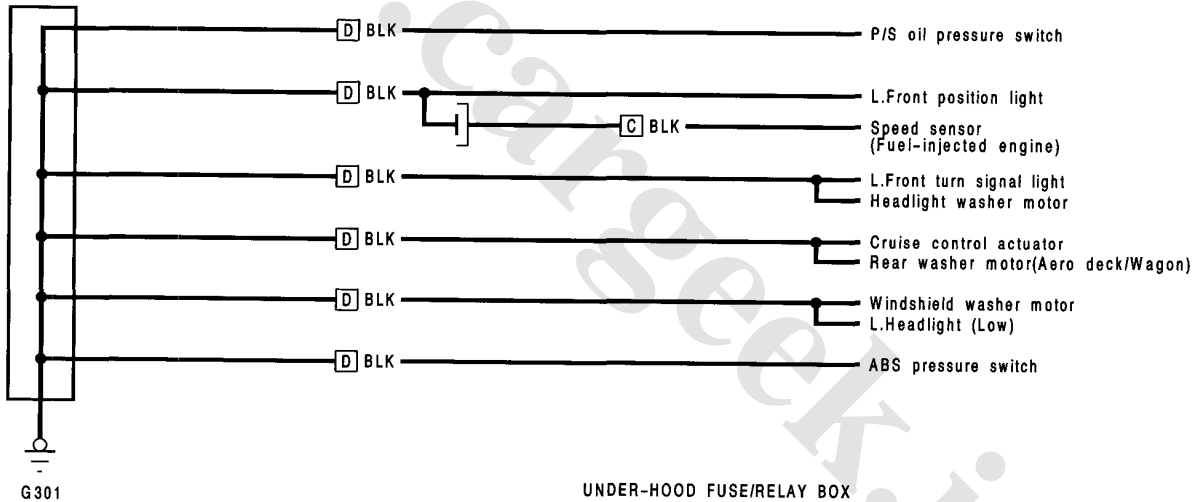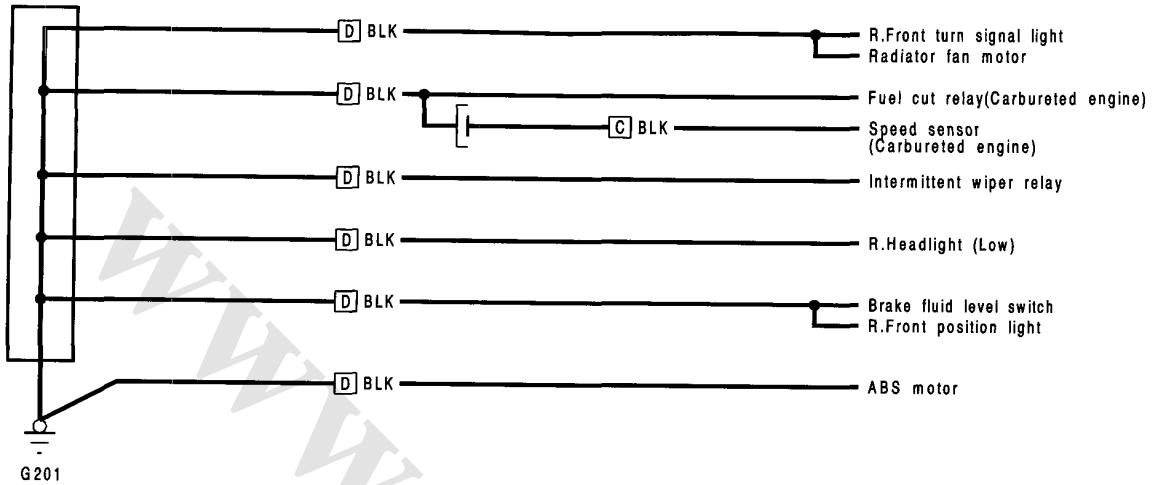


[C] : Engine wire harness
 [D] : Main wire harness



(LHD)

Europe model:

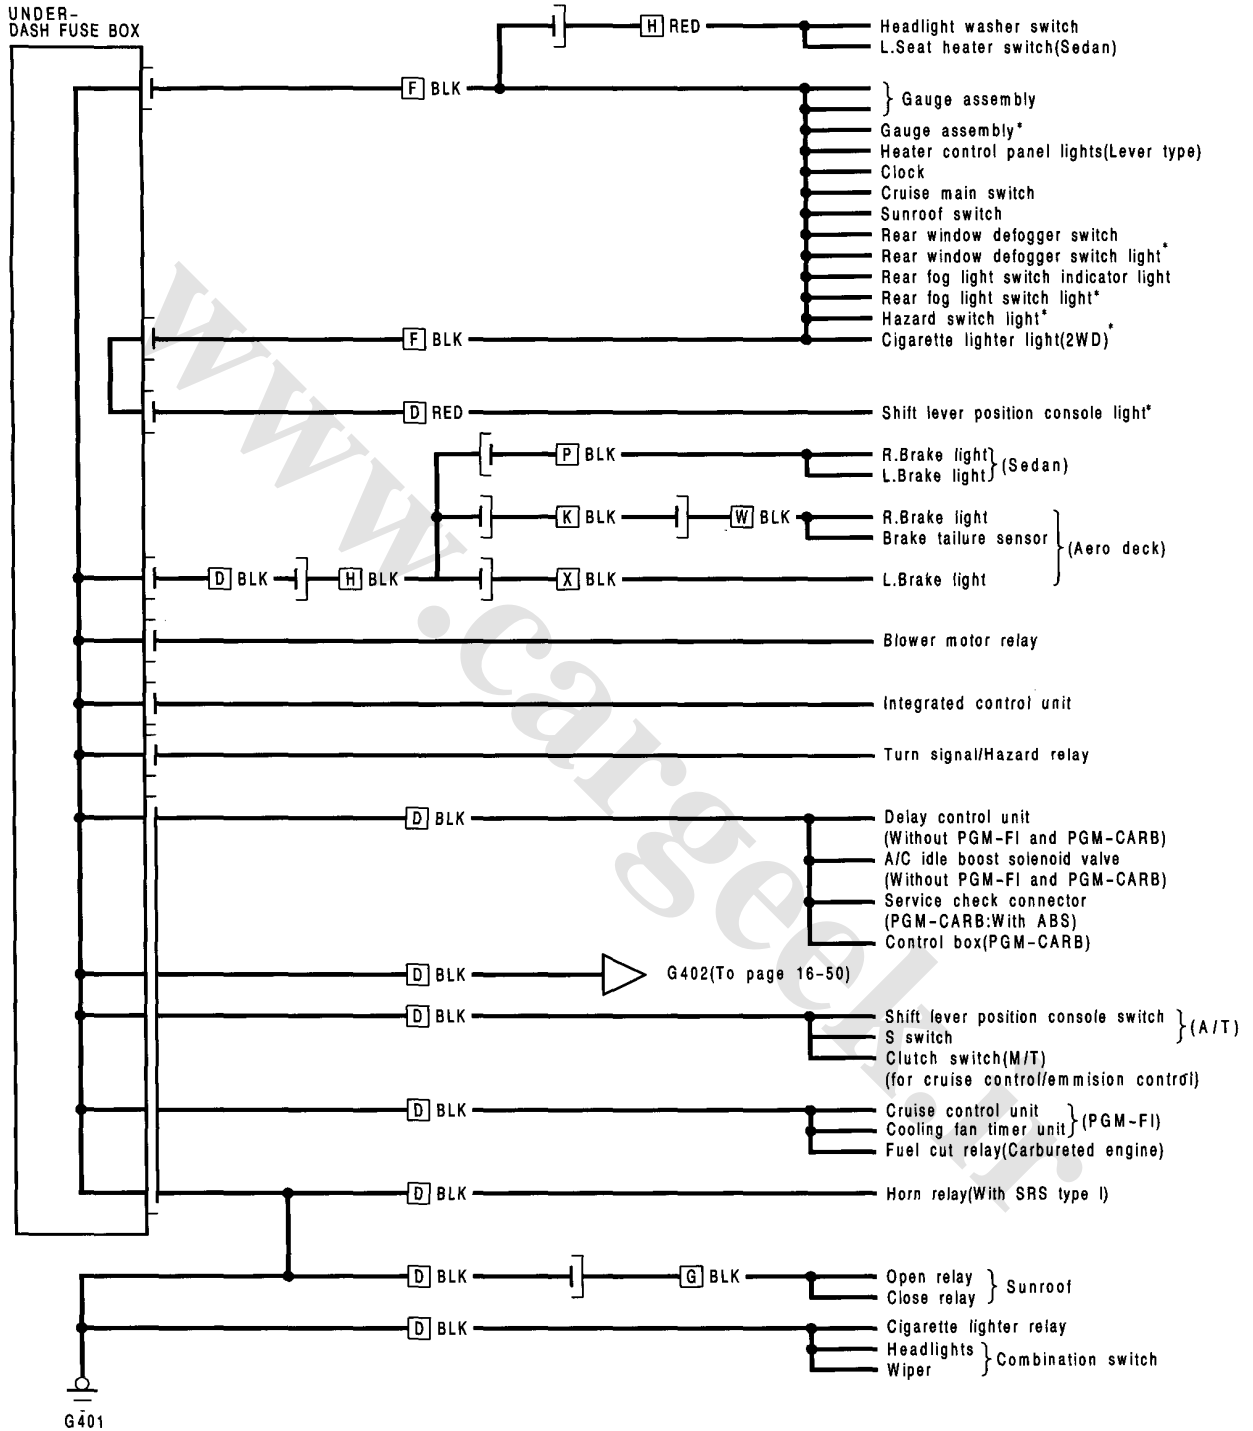

*:Without dashlight brightness controller


- D** : Main wire harness
- F** : Dashboard wire harness
- G** : Sunroof wires
- H** : Floor wire harness
- K** : Side wire harness
- P** : Rear wire harness
- W** : Right rear wire harness
- X** : Left rear wire harness

(cont'd)


Ground Distribution

Circuit Identification (LHD)


Excep europe model:

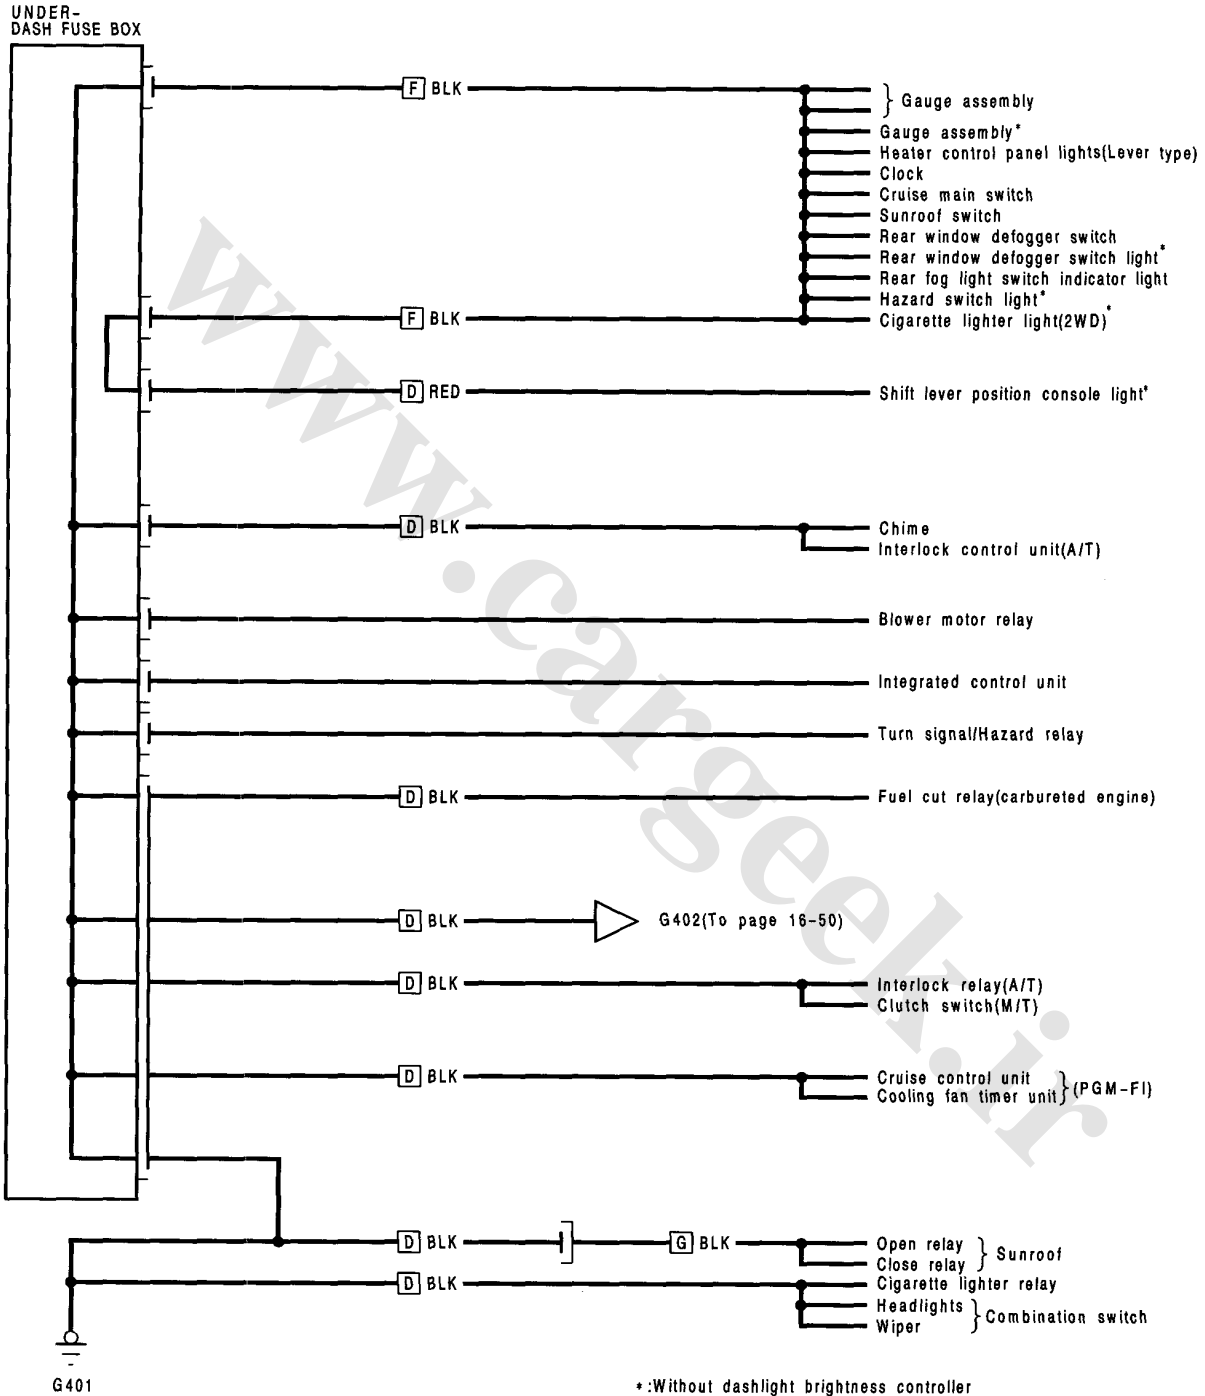

- D** : Main wire harness
- F** : Dashboard wire harness
- G** : Sunroof wires



UNDER-DASH FUSE BOX

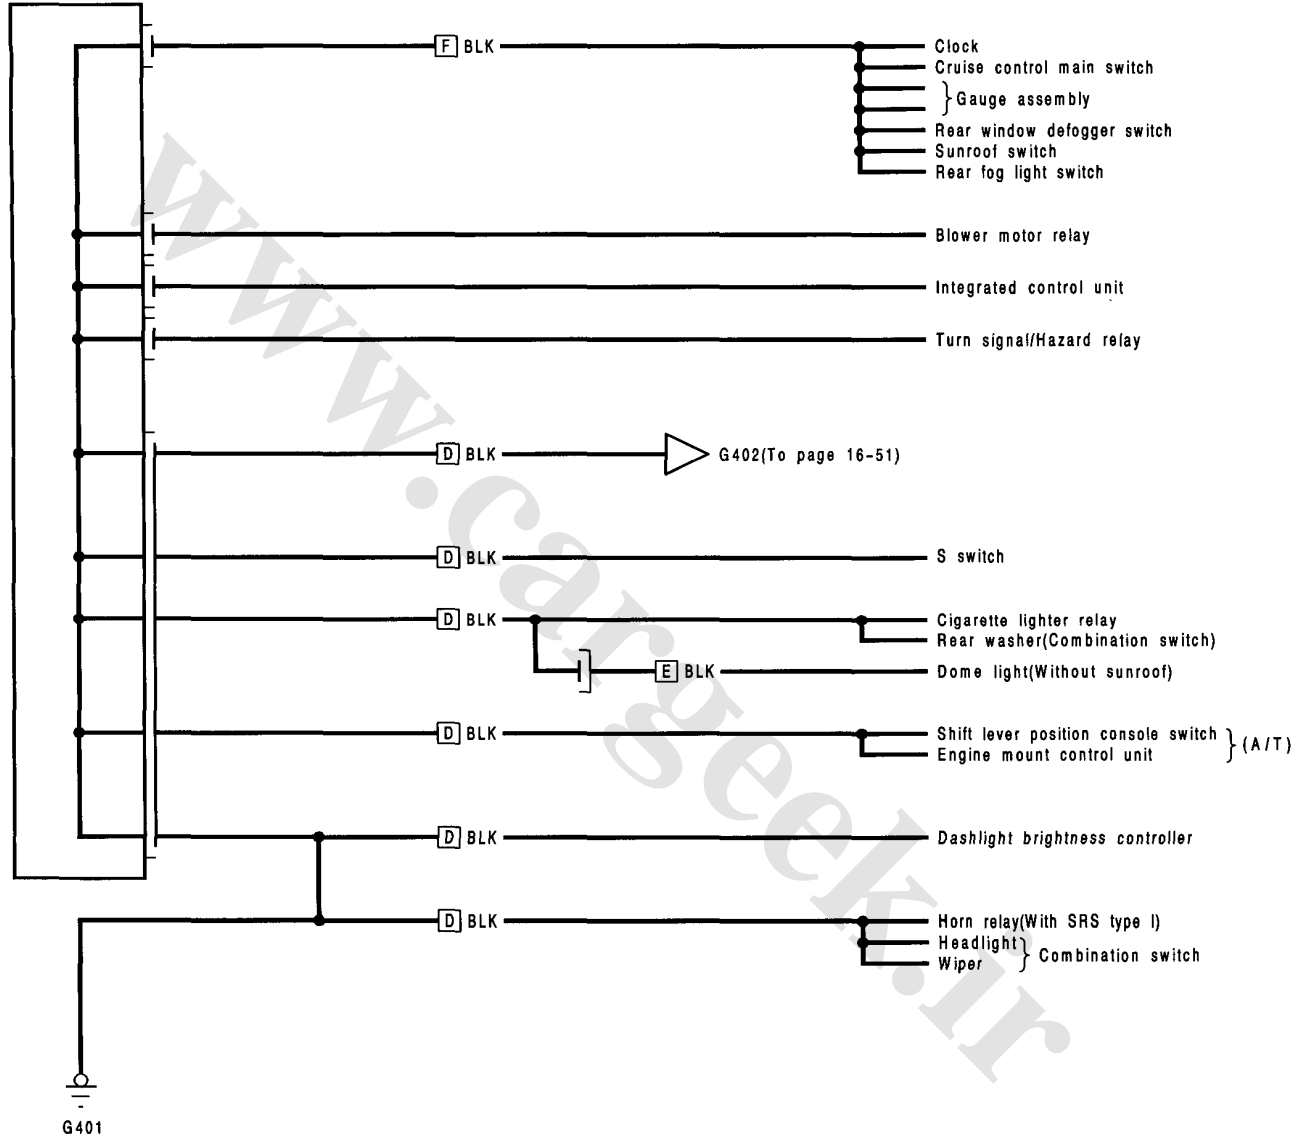


- D** : Main wire harness
- F** : Dashboard wire harness
- E** : Roof wires


Ground Distribution

Circuit Identification (LHD)

Europe model:

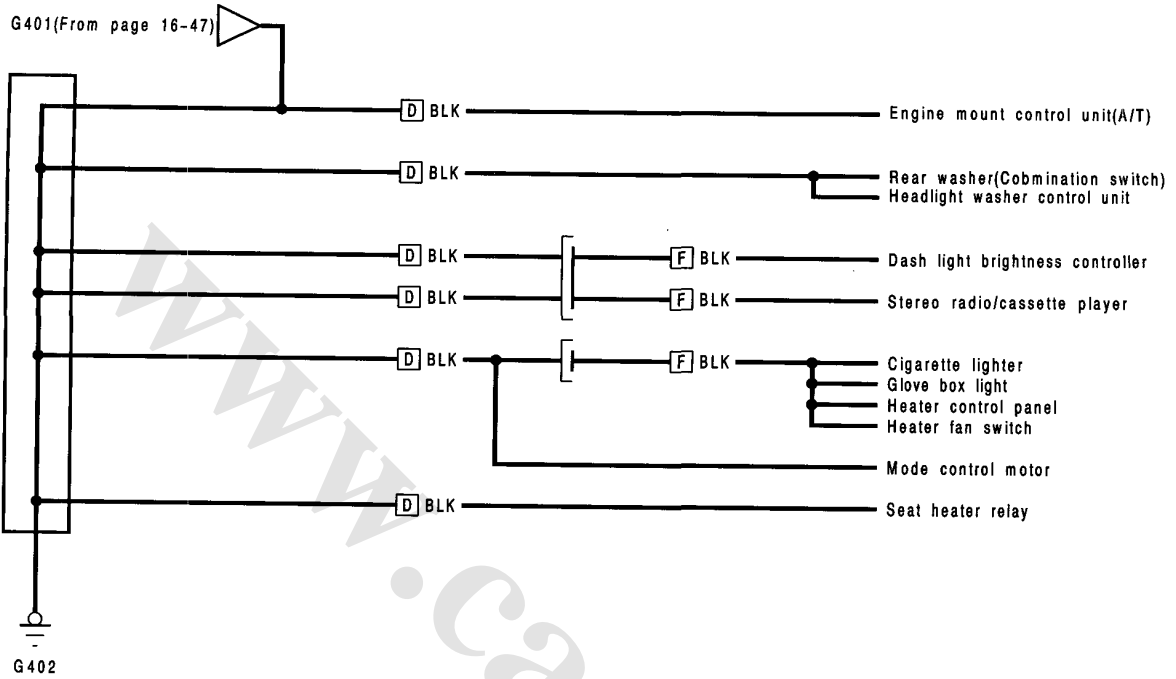


Except europe model:

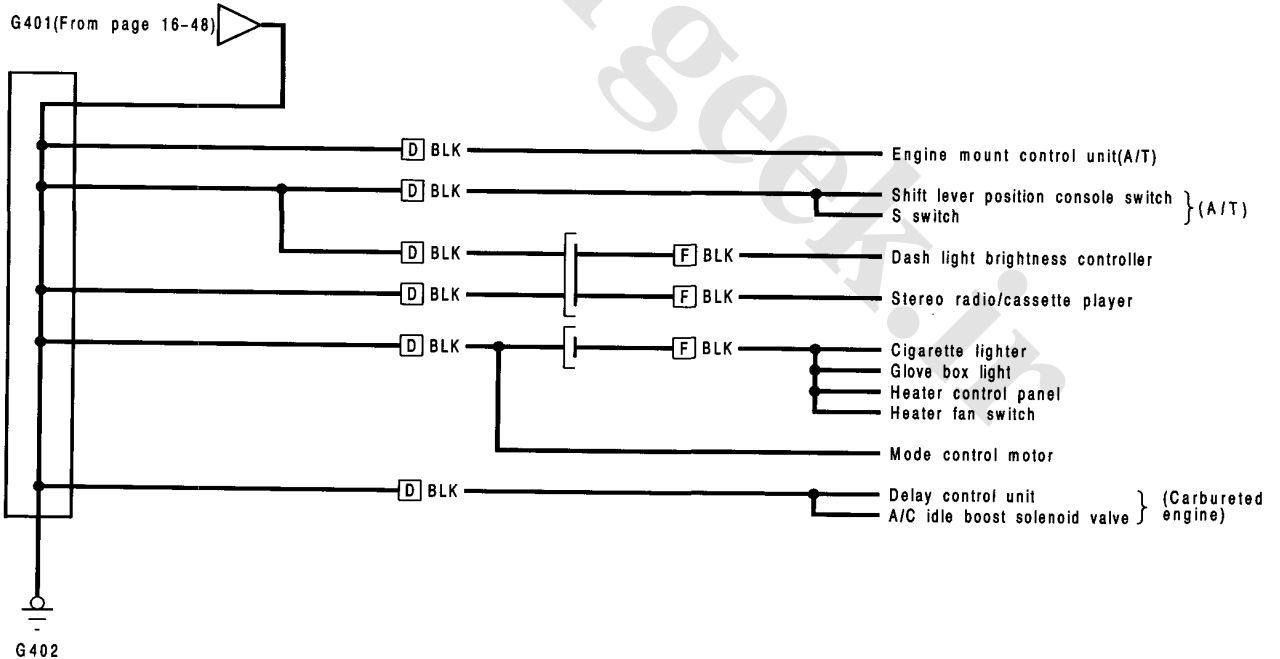

[D] : Main wire harness
[F] : Dashboard wire harness






(RHD)

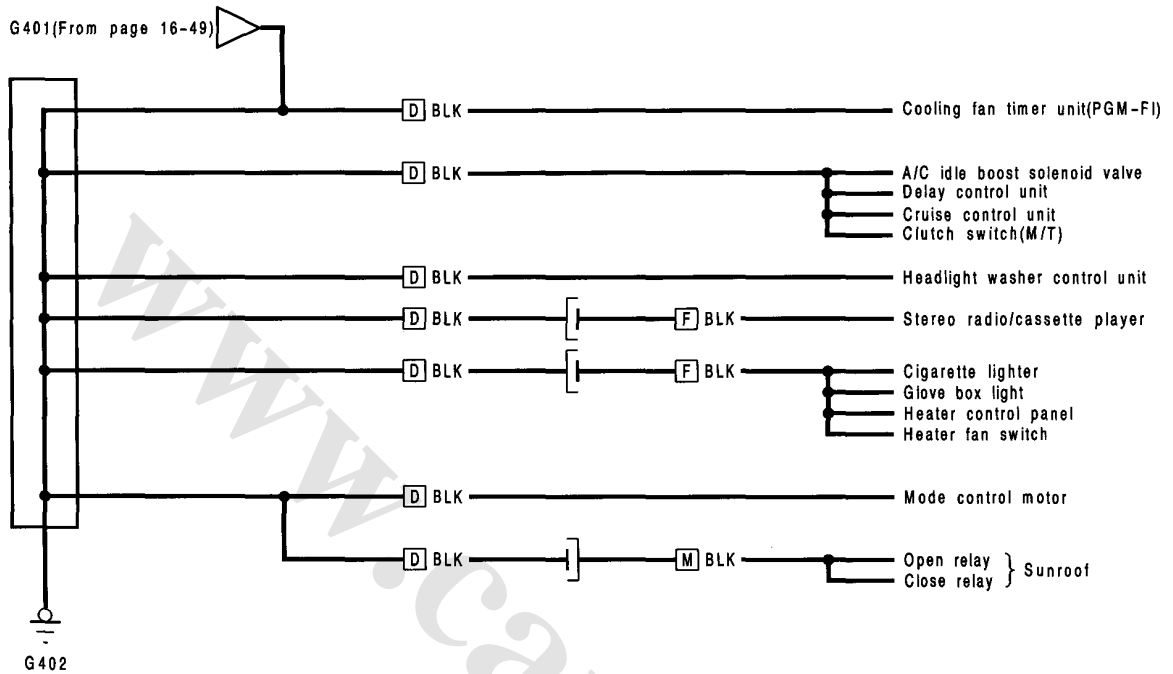

- D** : Main wire harness
- F** : Dashboard wire harness
- M** : Sunroof sub wires

Ground Distribution

Circuit Identification (LHD)

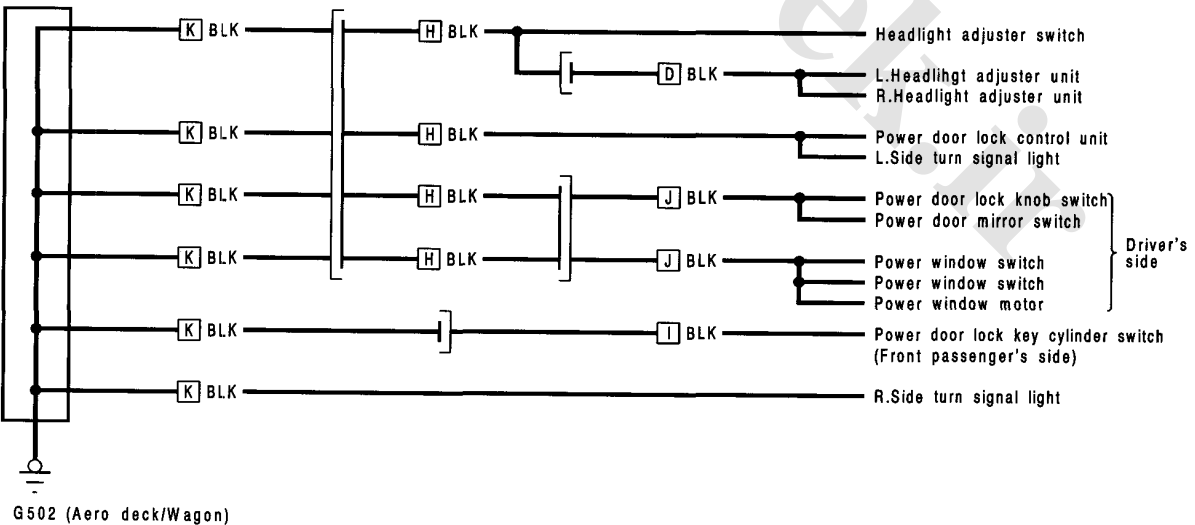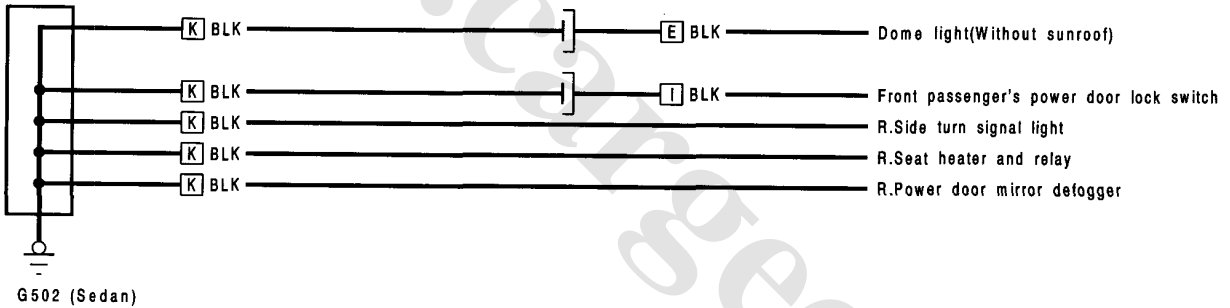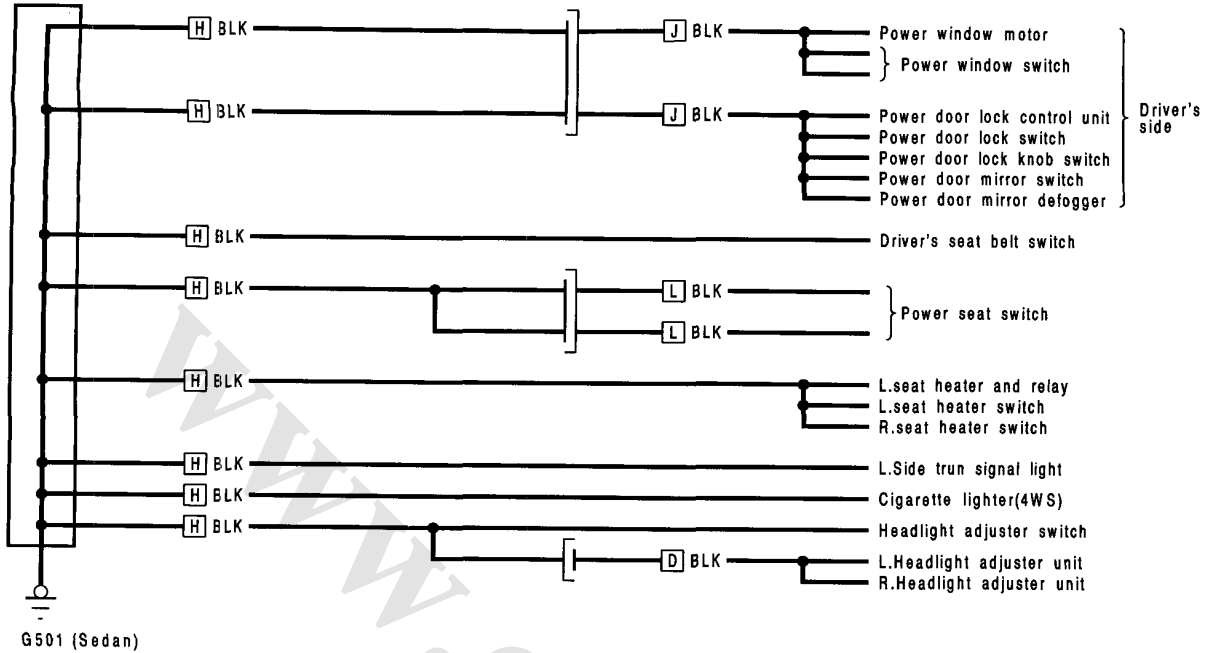

[D] : Main wire harness
[E] : Roof wires




[H] : Floor wire harness
[I] : Right front door wire harness

[J] : Driver door wire harness
[K] : Side wire harness

[L] : Power seat wires






(RHD)

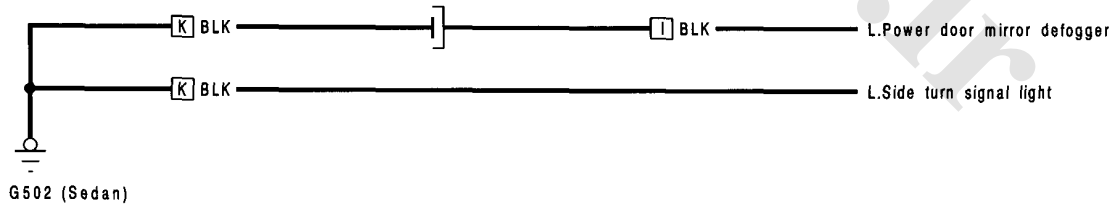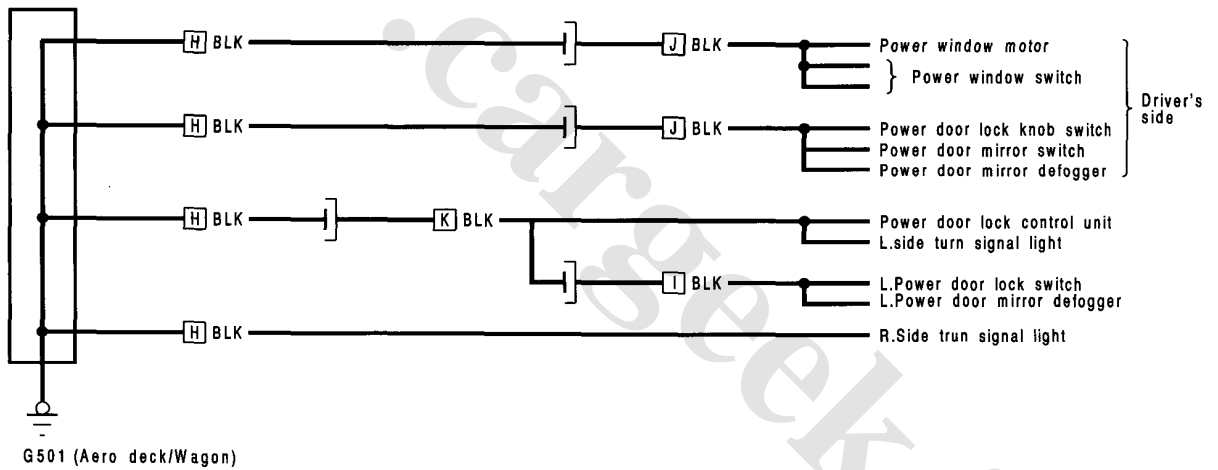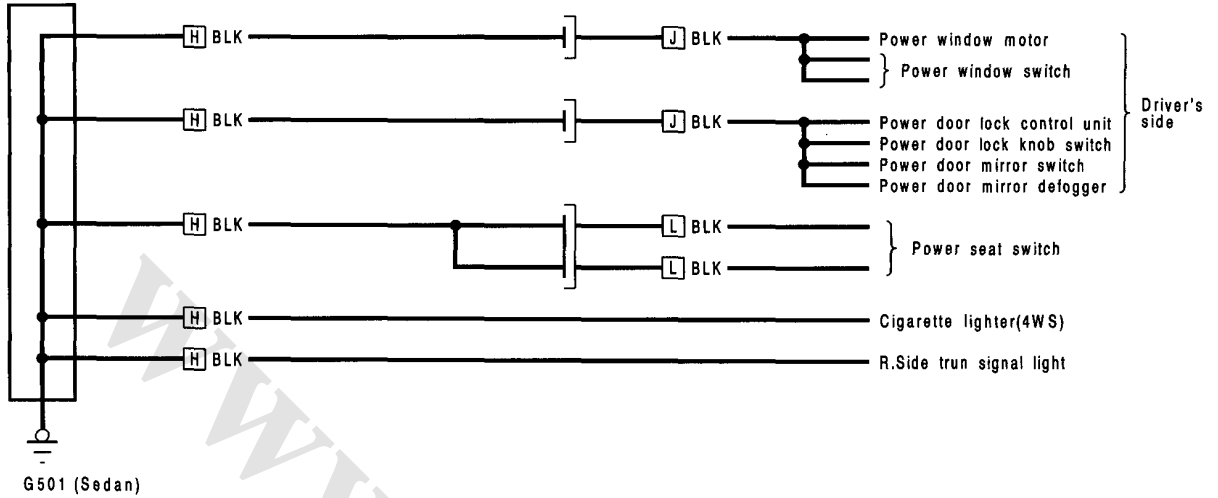

[H] : Floor wire harness [J] : Driver door wire harness [L] : Power seat wires
 [I] : Right front door wire harness [K] : Side wire harness

Ground Distribution

Circuit Identification (LHD)





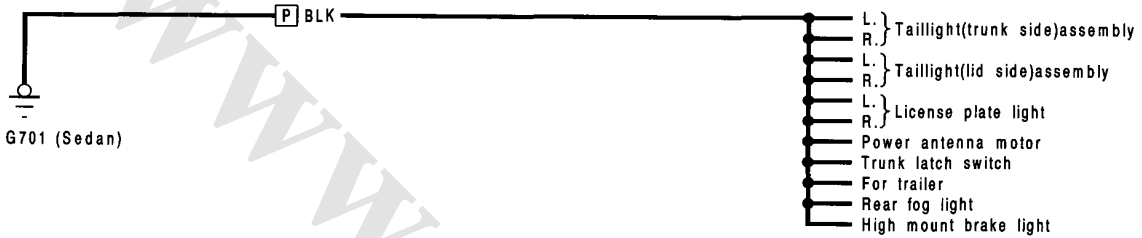


- K : Side wire harness
- N : Fuel tank wires
- P : Rear wire harness
- S : SRS unit sub harness

- T : A/C wire harness
- U : SRS main harness
- V : Defogger ground wire





(RHD)

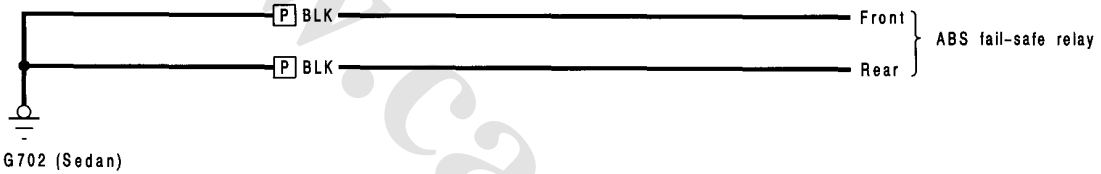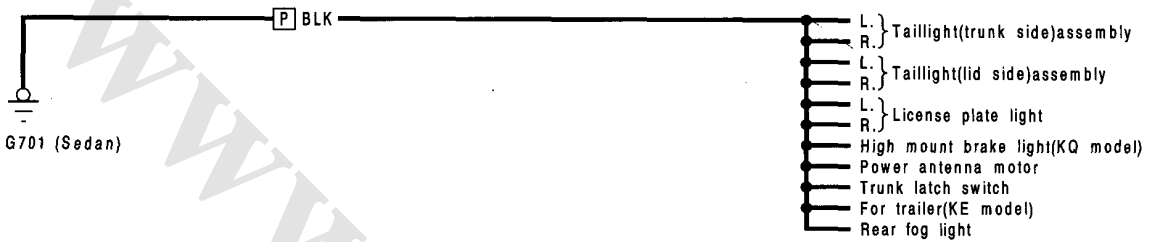

- | | | |
|--------------------------|----------------------------|----------------------------|
| [H] : Floor wire harness | [S] : SRS unit sub harness | [U] : SRS main harness |
| [N] : Fuel tank wires | [T] : A/C wire harness | [V] : Defogger ground wire |
| [P] : Rear wire harness | | |

Ground Distribution

Circuit Identification

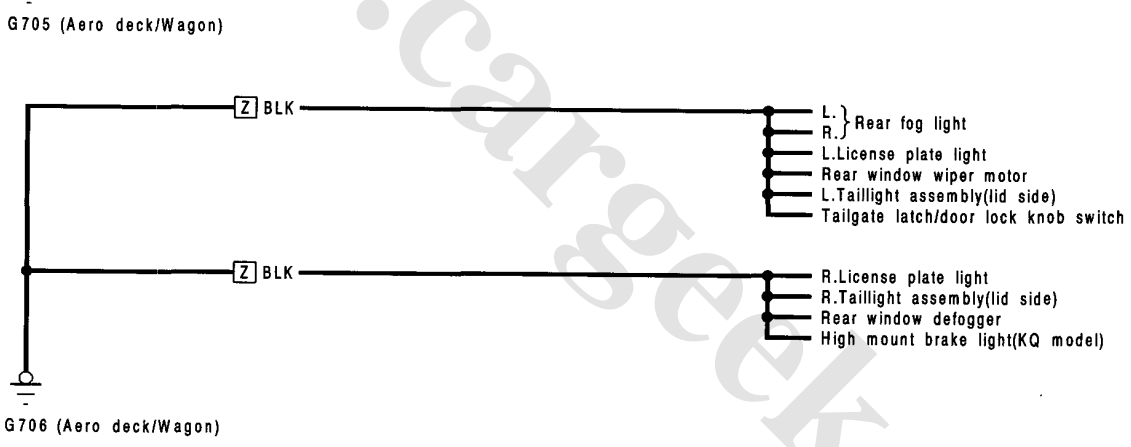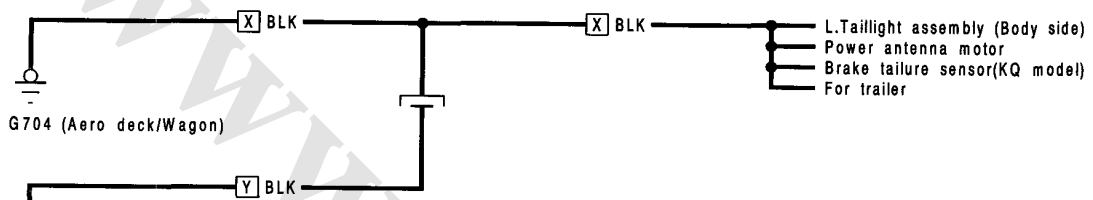

- W** : Right rear wire harness
- X** : Left rear wire harness
- Y** : Tailhgte wire harness
- Z** : Tailghte sub wire harness



Charging System

Troubleshooting

NOTE:

- Before troubleshooting check:
 - Tightness of the alternator belt.
 - That the self-diagnosis indicator light of the PGM-FI ECU does not blink. If it blinks (20 times), refer to section 11.
- Troubleshoot by performing following tests in the order listed below.

Malfunction:

- Charging system light does not go off.
- Charging system light does not go on.
- Battery is dead or low.

1. Test the operation of the alternator and regulator (see page 16-58).

2. Test the operation of the charging system light (see page 16-59).

3. Check the IG and S terminal voltage of the alternator connector (see page 16-60).

Charging system light does not go off because the engine idle speed is too low:

- Check the idle speed.


(cont'd)

Charging System

Troubleshooting (cont'd)

Alternator/Regulator Operation Test:

CAUTION: Be careful during testing as the cooling fan comes on suddenly while the engine is running.

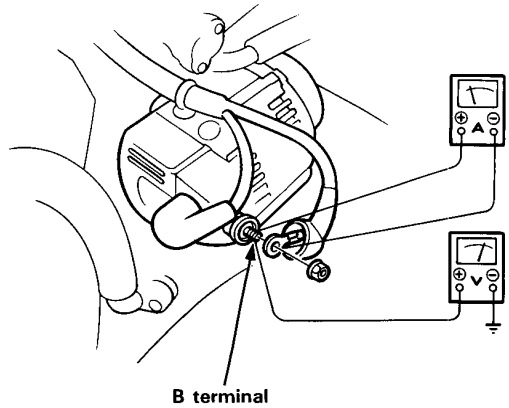

Be sure to use a good battery. Disconnect the B terminal, then connect an ammeter, and a voltmeter as shown.

NOTE: Be sure to use an ammeter capable of measuring amperages higher than 120 A.

Start the engine, and let it idle until it reaches normal operating temperature (cooling fan comes on 2 tiems).

Raise the engine speed to 2000 rpm and hold it there. Turn the headlights (HI) on, and check the voltage at the battery terminals.

CAUTION: As the headlights warm up considerably, do not cover them.

Is the voltage between 13.9 and 15.1 V?

NO

Test the alternator (see page 16-61).

YES

Turn the blower motor and the rear window defogger on, and check the battery voltage.

Is the battery voltage less than 13.5 V?

NO

Turn also the fog lights, brake lights, etc. on)

YES

Read the amperage.

Are there more than *A?

NO

Test the alternator (see page 16-61).

YES



Alternator/Regulator operation is OK. Test the charging system light operation (see page 16-59).

*:

- with A/C: 60 A
- without A/C: 55 A



Charging System Light Test:

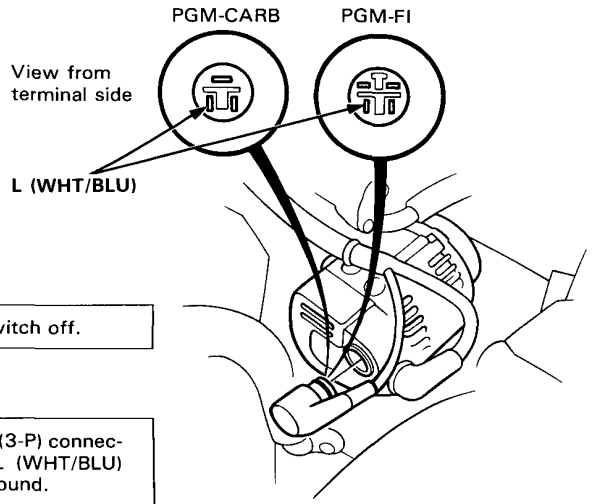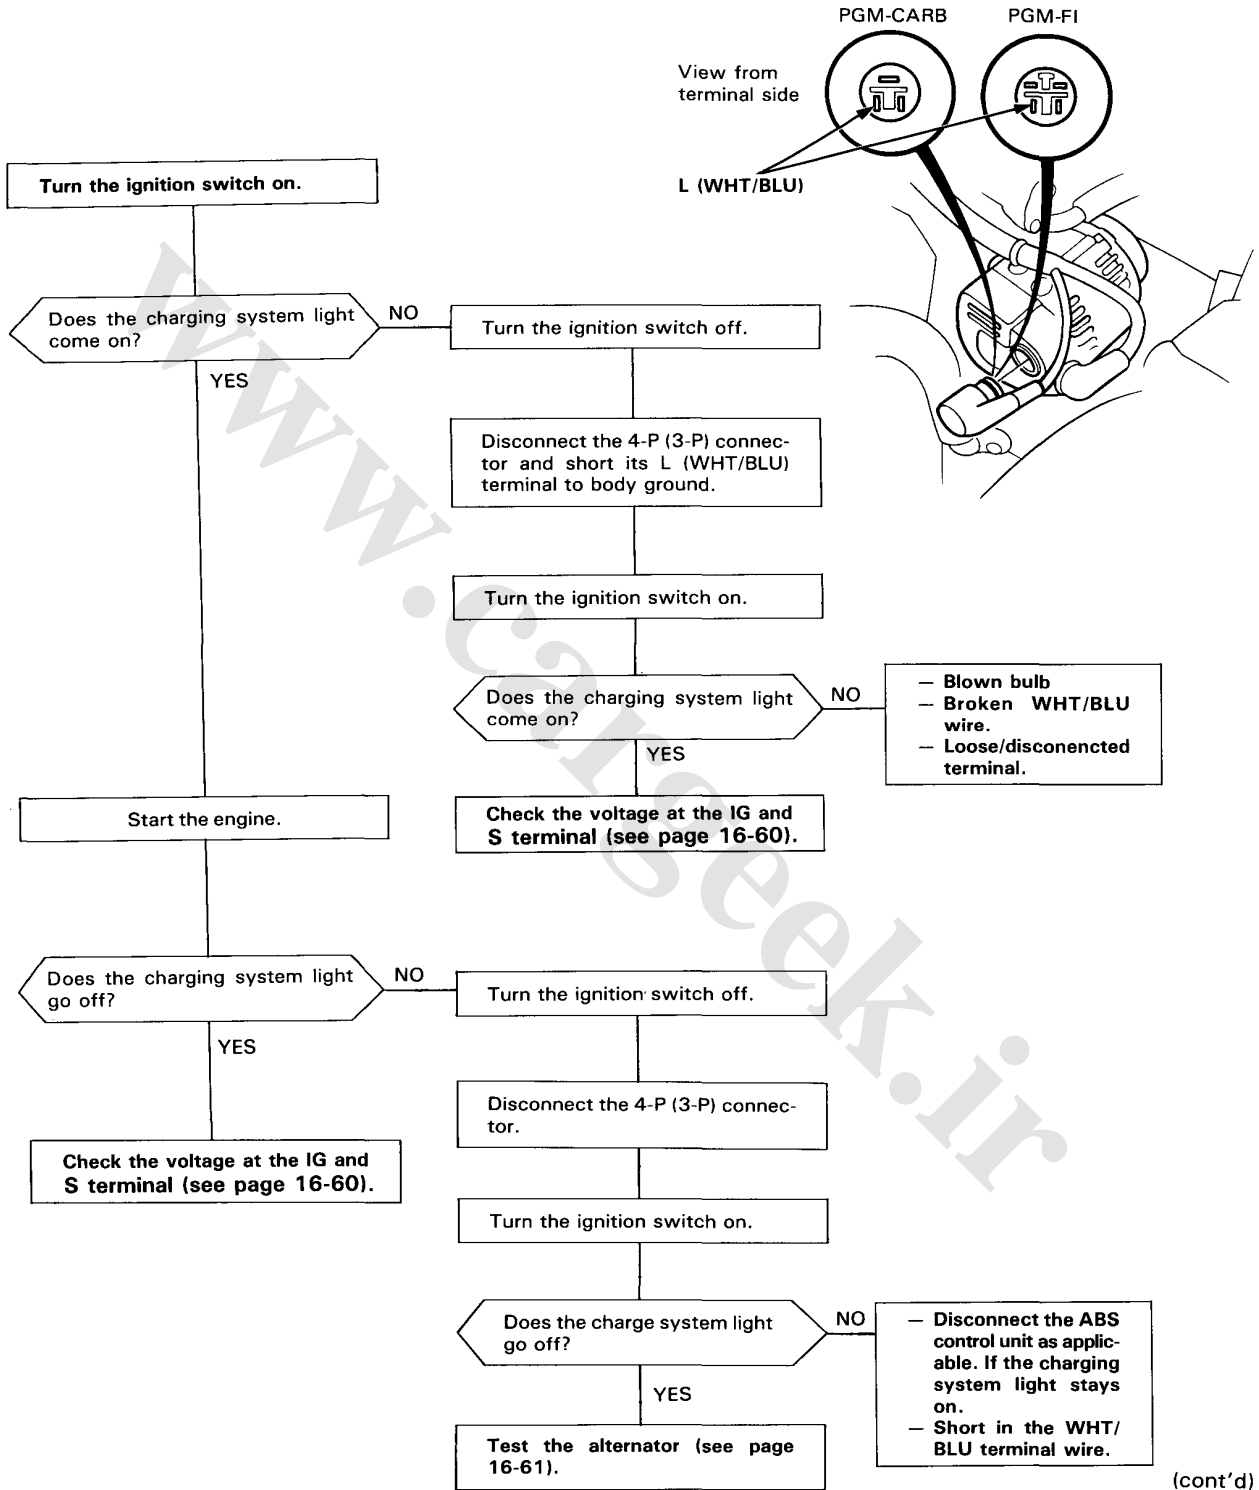

(cont'd)

Charging System

Troubleshooting (cont'd)

Voltage Checks at IG and S Terminals:

Turn the ignition switch off.


Are the B terminal, the 4-P (3-P) connector and under-hood fuse/relay box terminals securely tightened?

NO
Tighten or reconnect the terminals securely.

YES

Disconnect the 4-P (3-P) connector and turn the ignition switch on.

Measure the voltage between body ground and the IG terminal of the 4-P (3-P) conector.

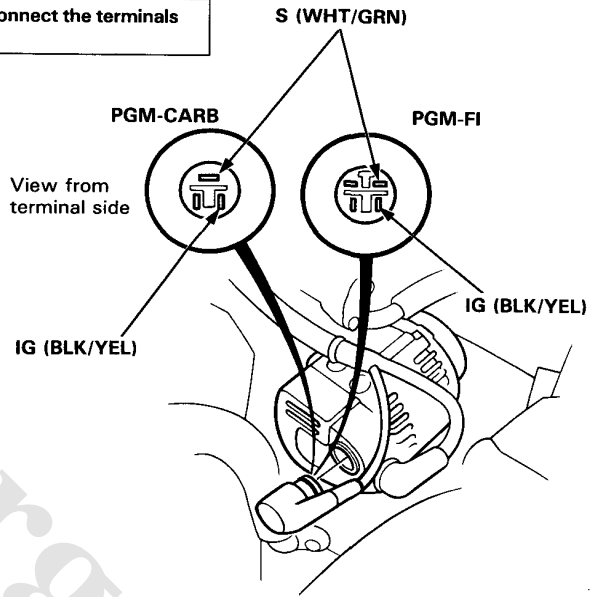

Is there battery voltage?

NO
- Blown No. 2 (15 A) fuse
- An open in the BLK/YEL wire.

YES

Measure the voltage between body ground and the S terminal of the 4-P (3-P) connector.

Is there battery voltage?

NO
- Blown No. 21 (7,5 A) fuse
- An open in the WHT/GRN wire.


YES

Check the battery.




Alternator Test:



NOTE: Because an overall check is necessary to avoid misleading conclusions, test the alternator in the order described below.

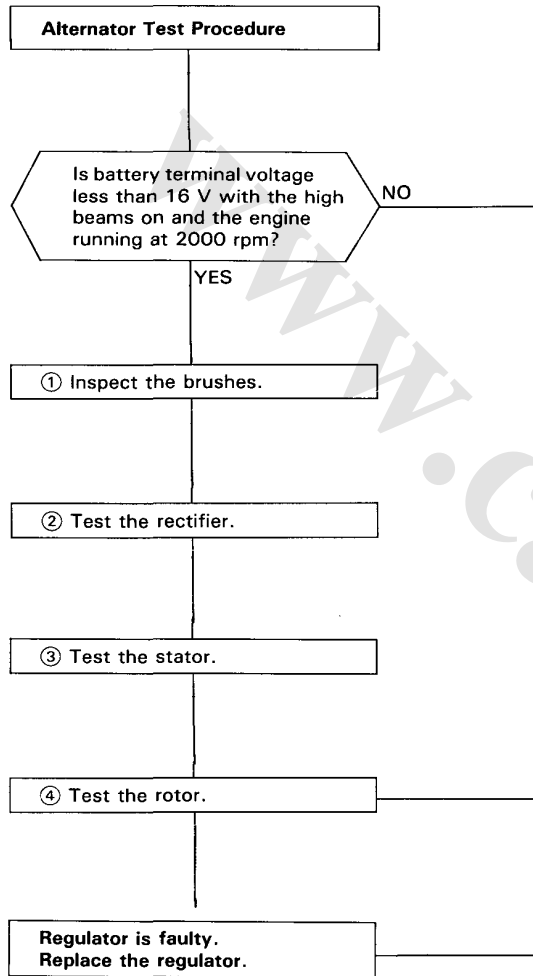

Gauge Assembly

Circuit Diagram (With SRS)

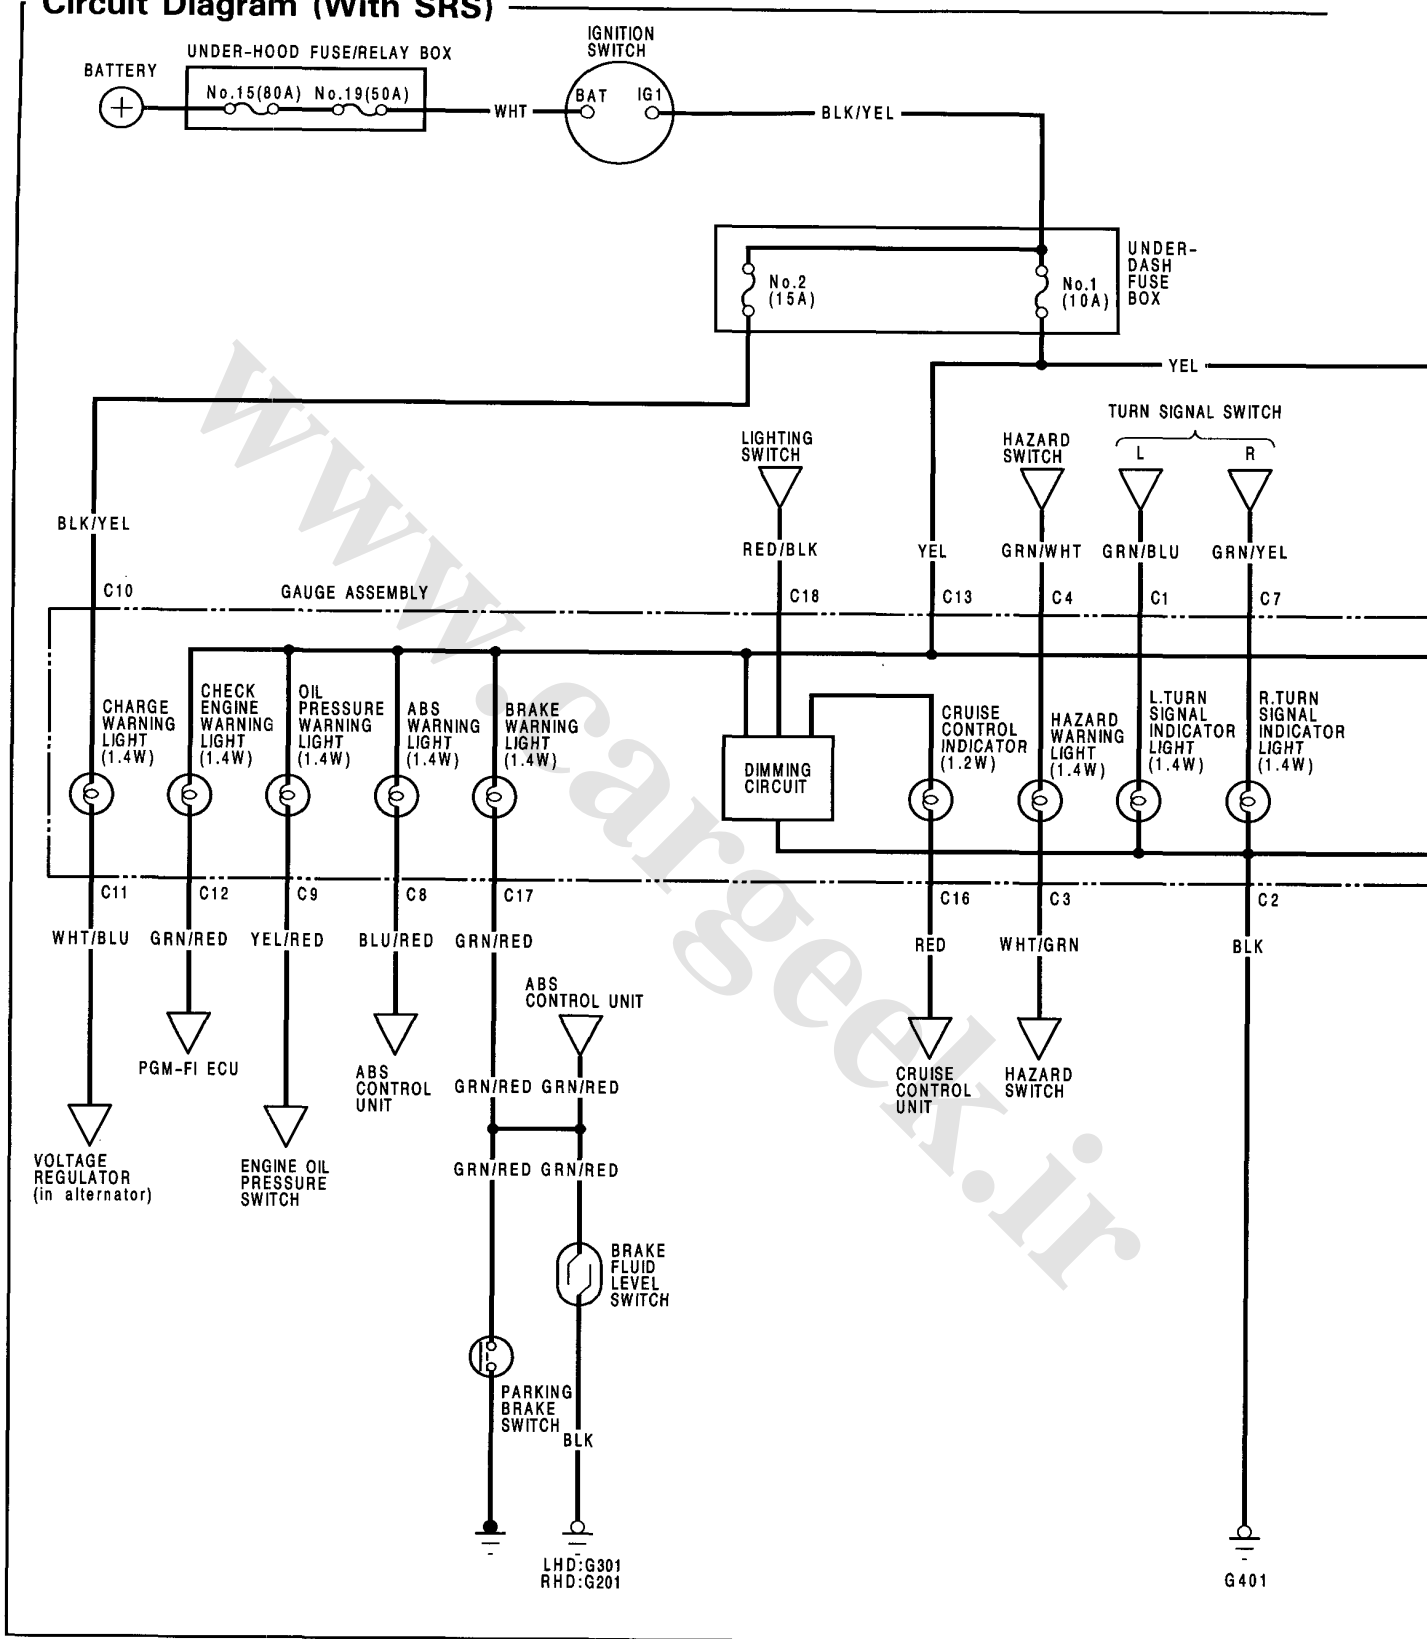

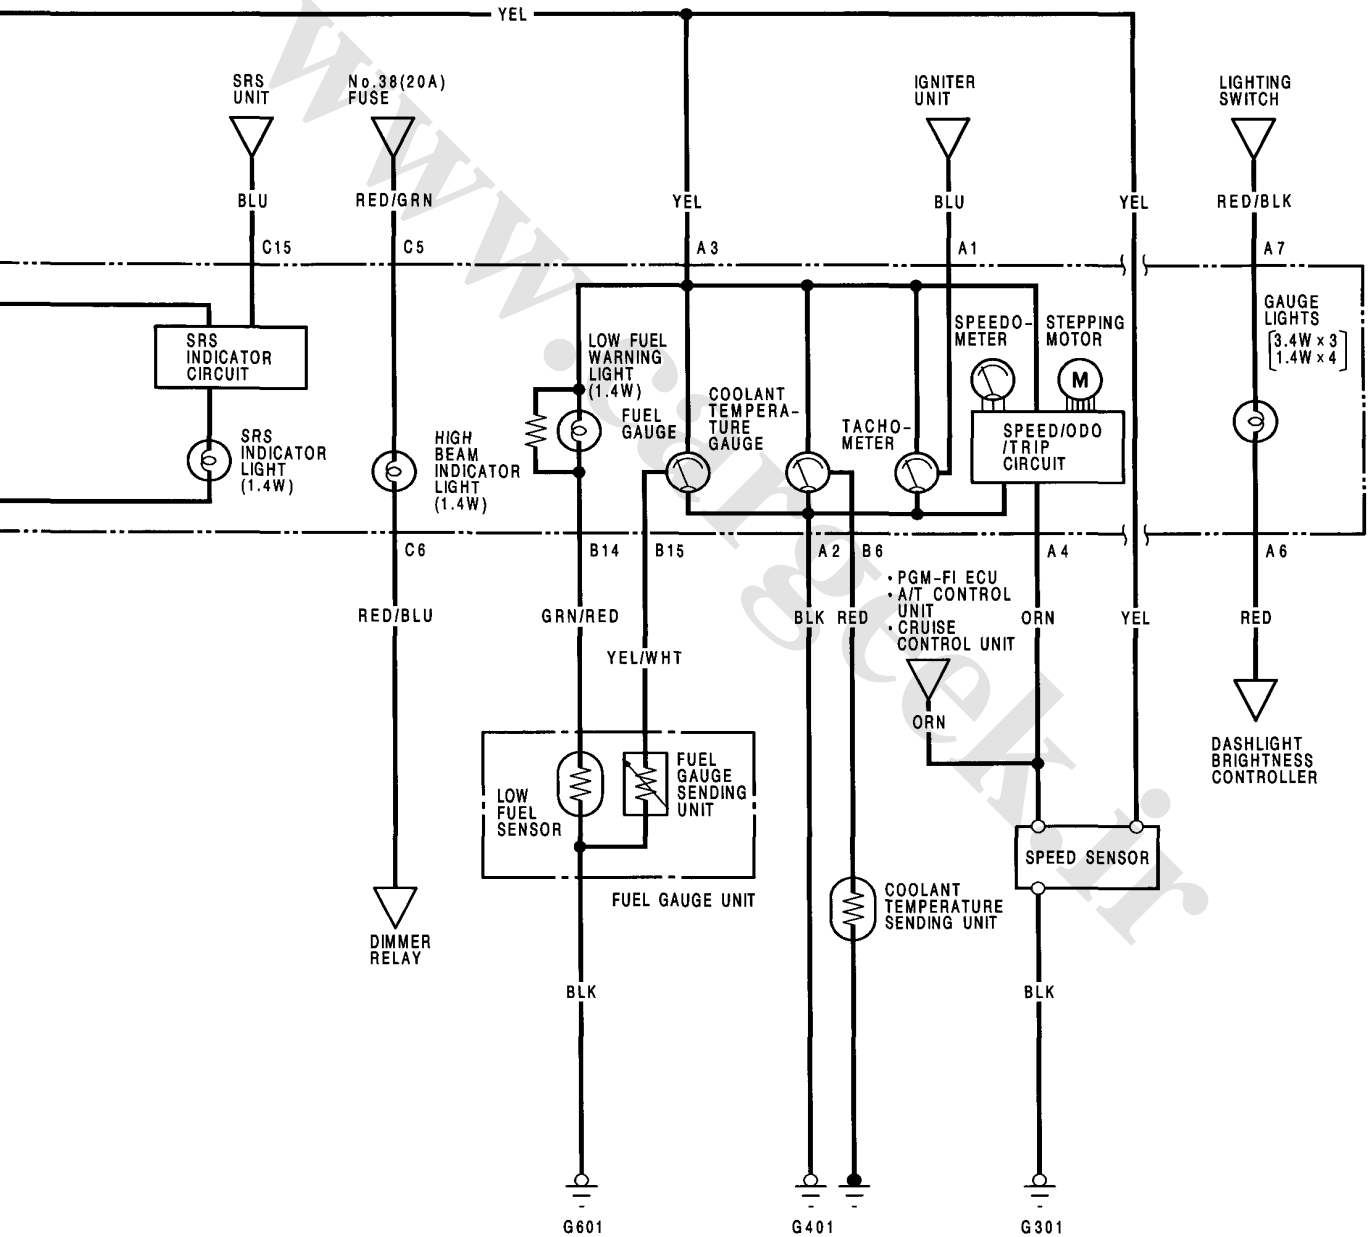


Gauge Assembly

Terminal Locations (With SRS)



CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).
- SRS Type II only: Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

SRS Type I

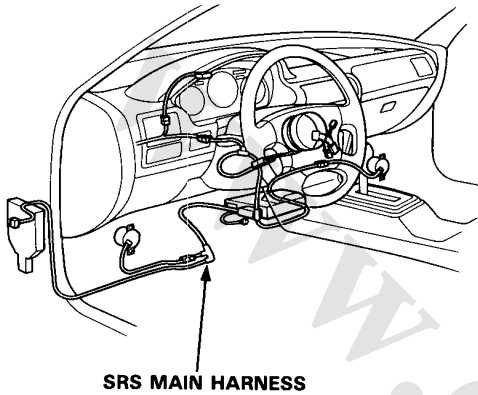


SRS Type II

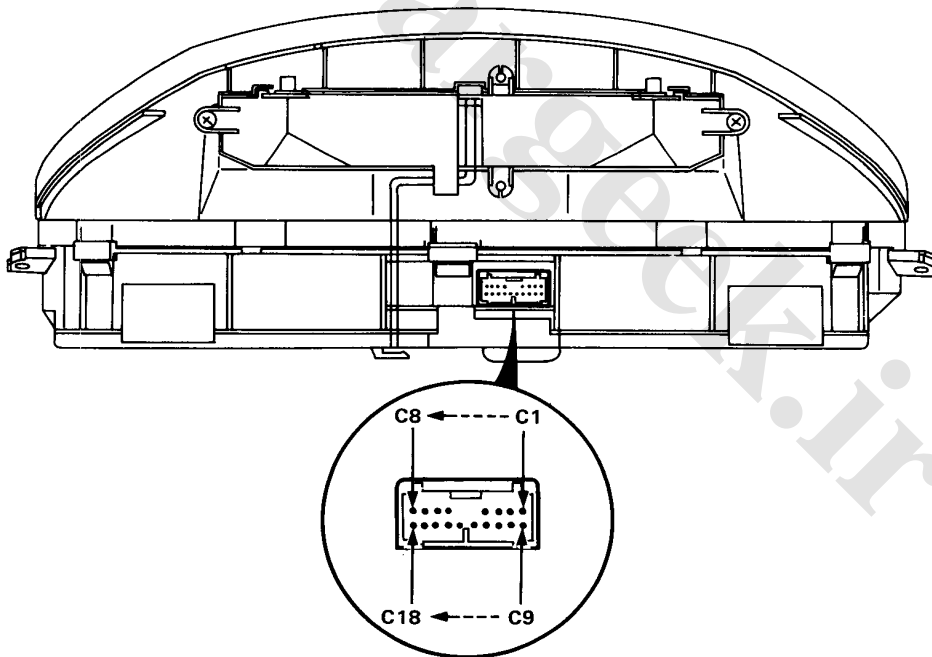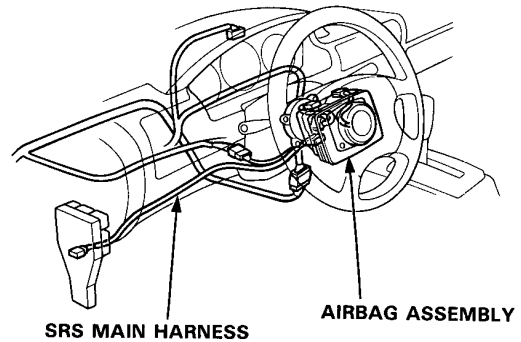

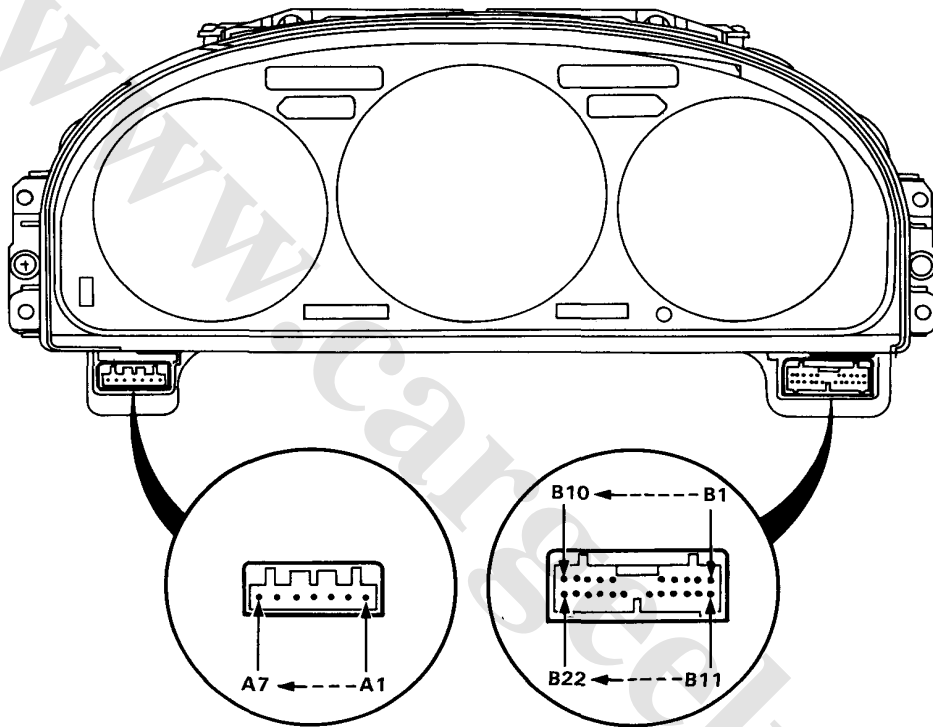


Gauge Assembly

Bulb Locations (Nippon Denso: With SRS)

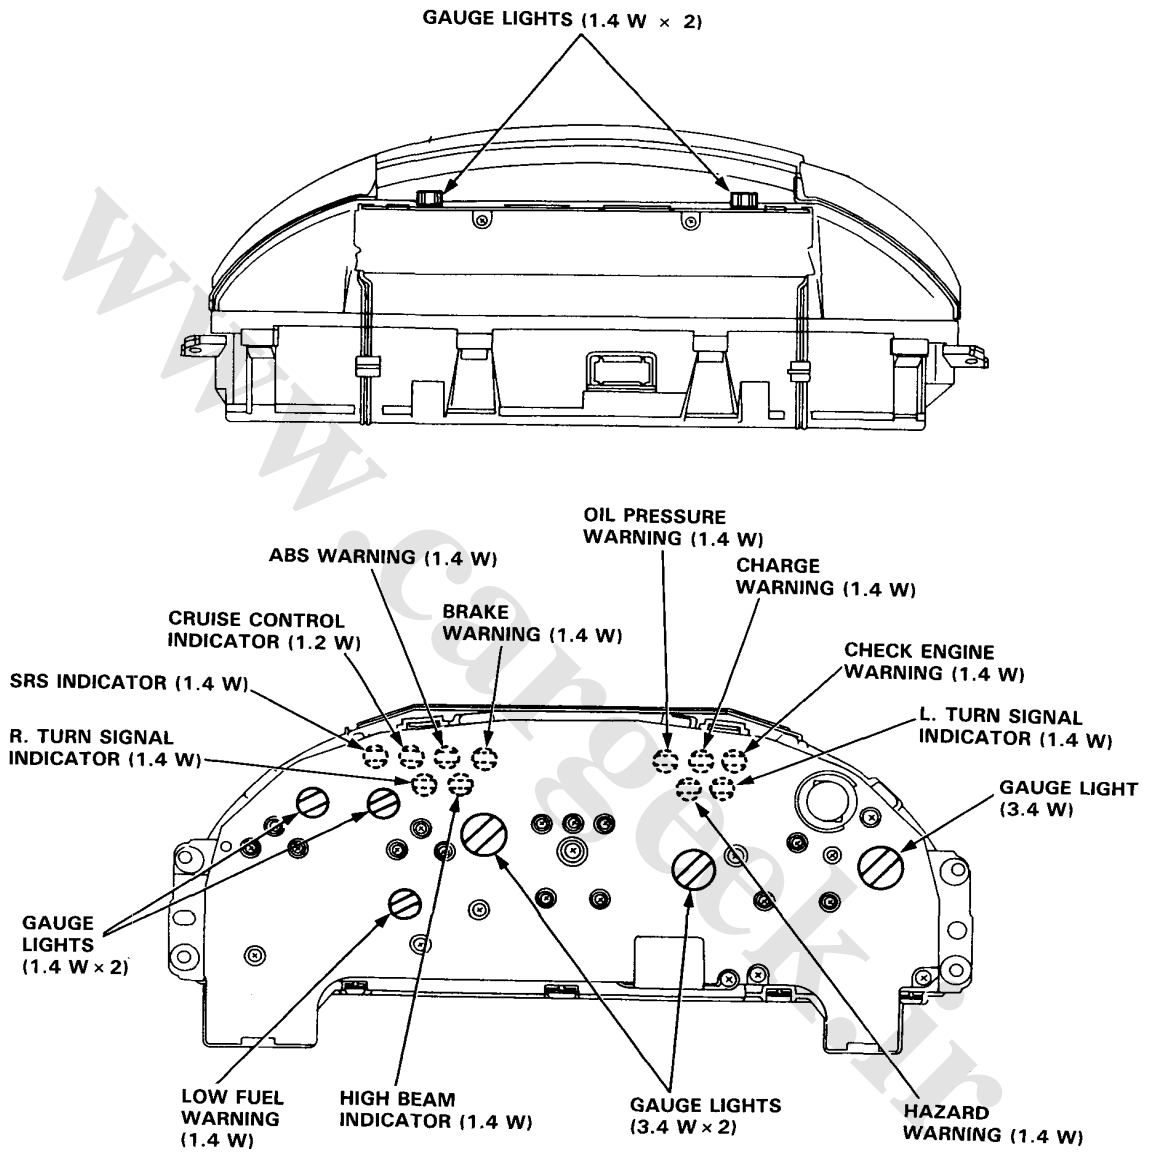





Bulb Locations (Nippon Seiki: With SRS)

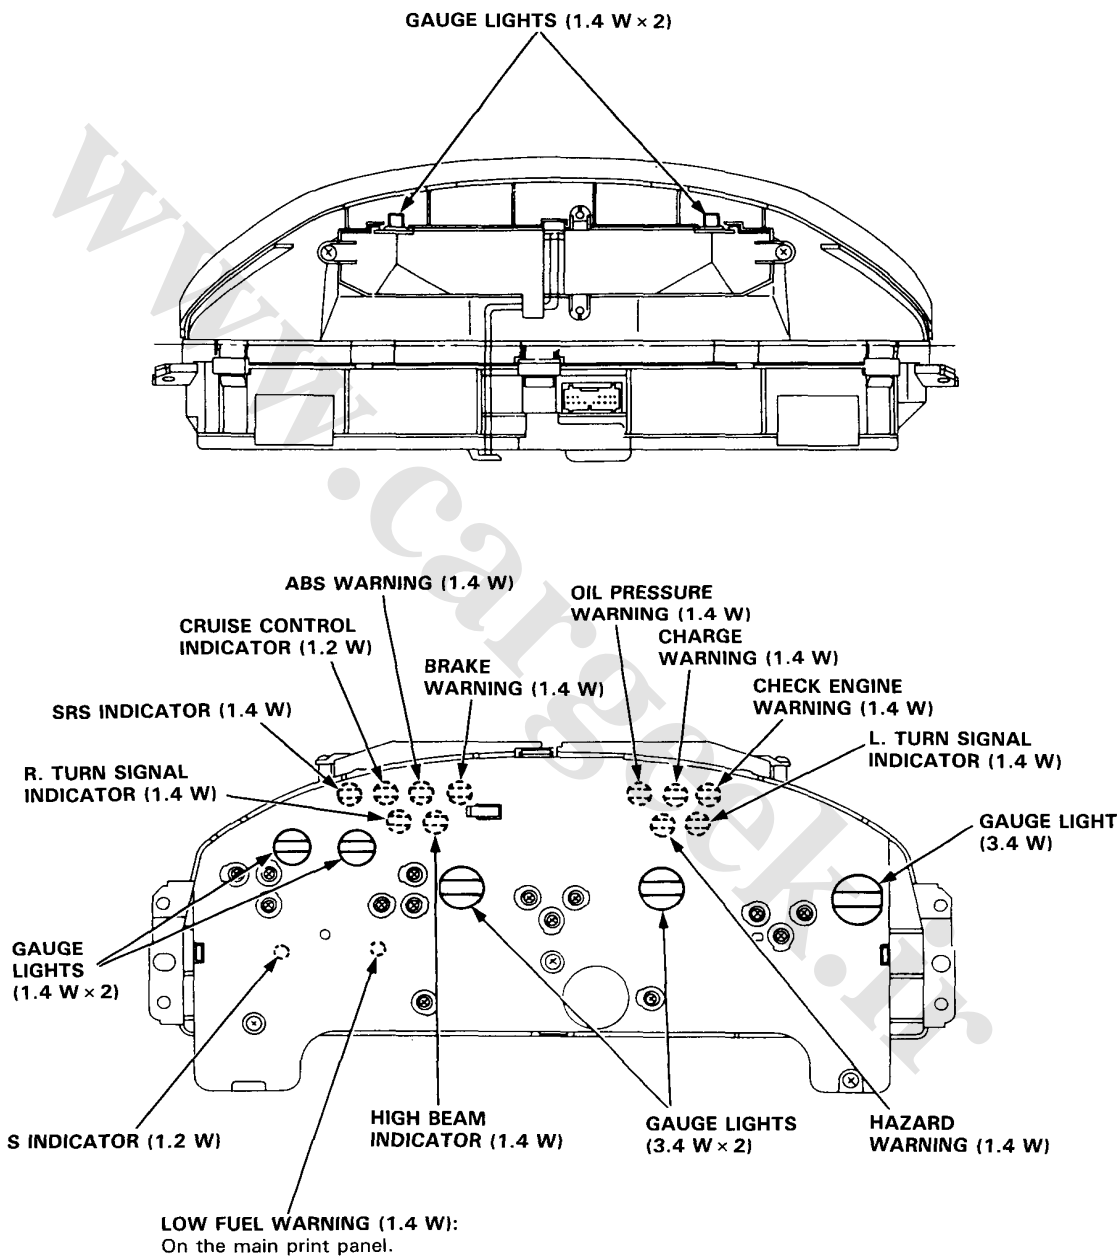

Safety Indicator


Circuit Diagram (With SRS: Sedan)

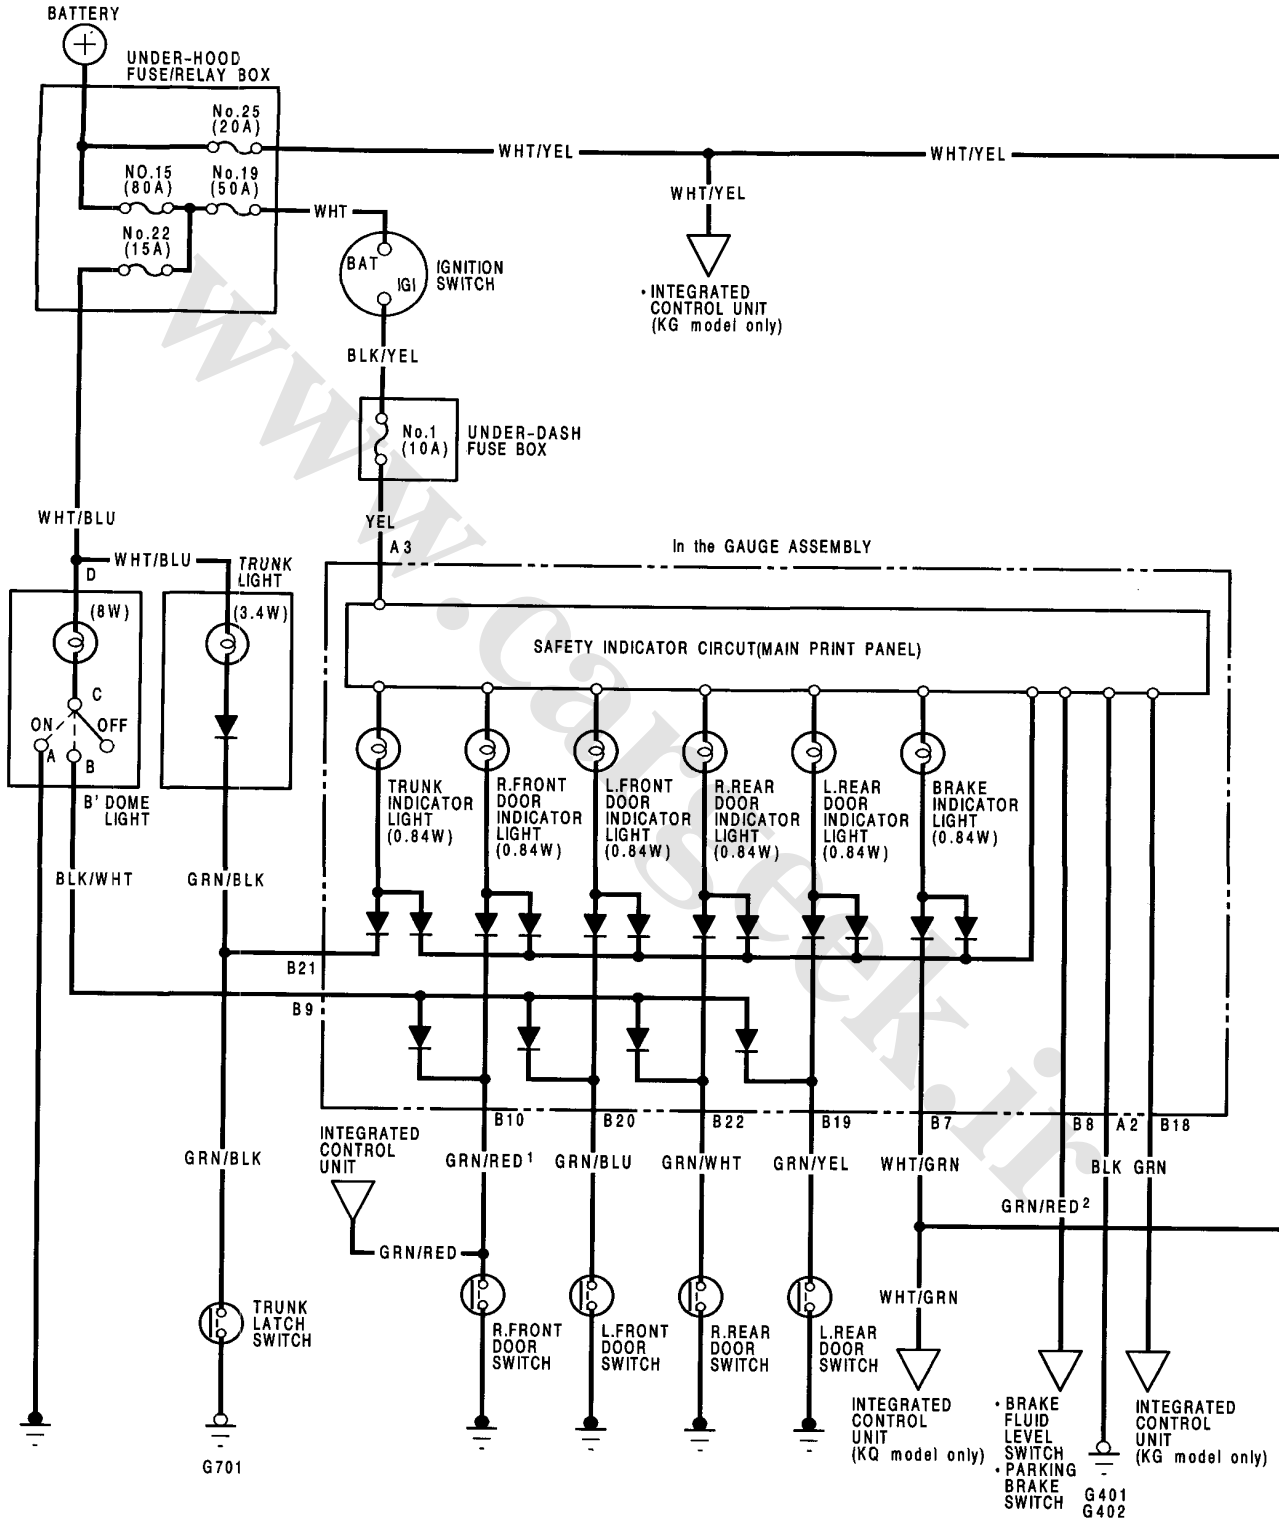


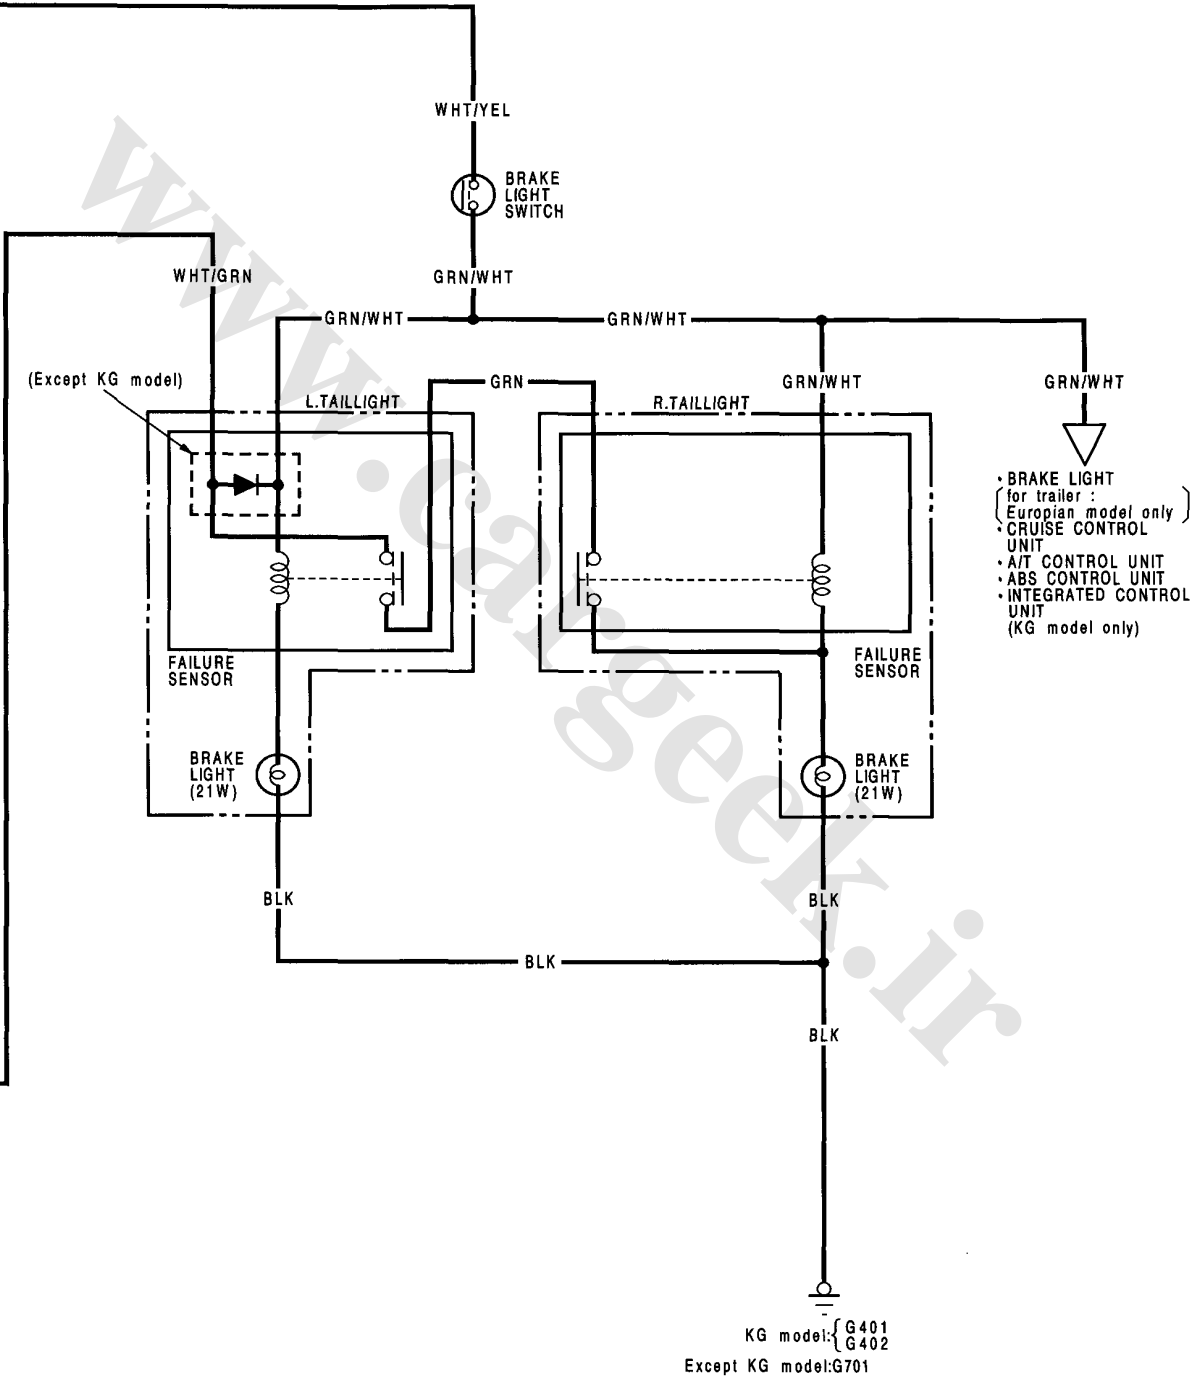

Safety Indicator

Circuit Diagram (With SRS: Aero deck)

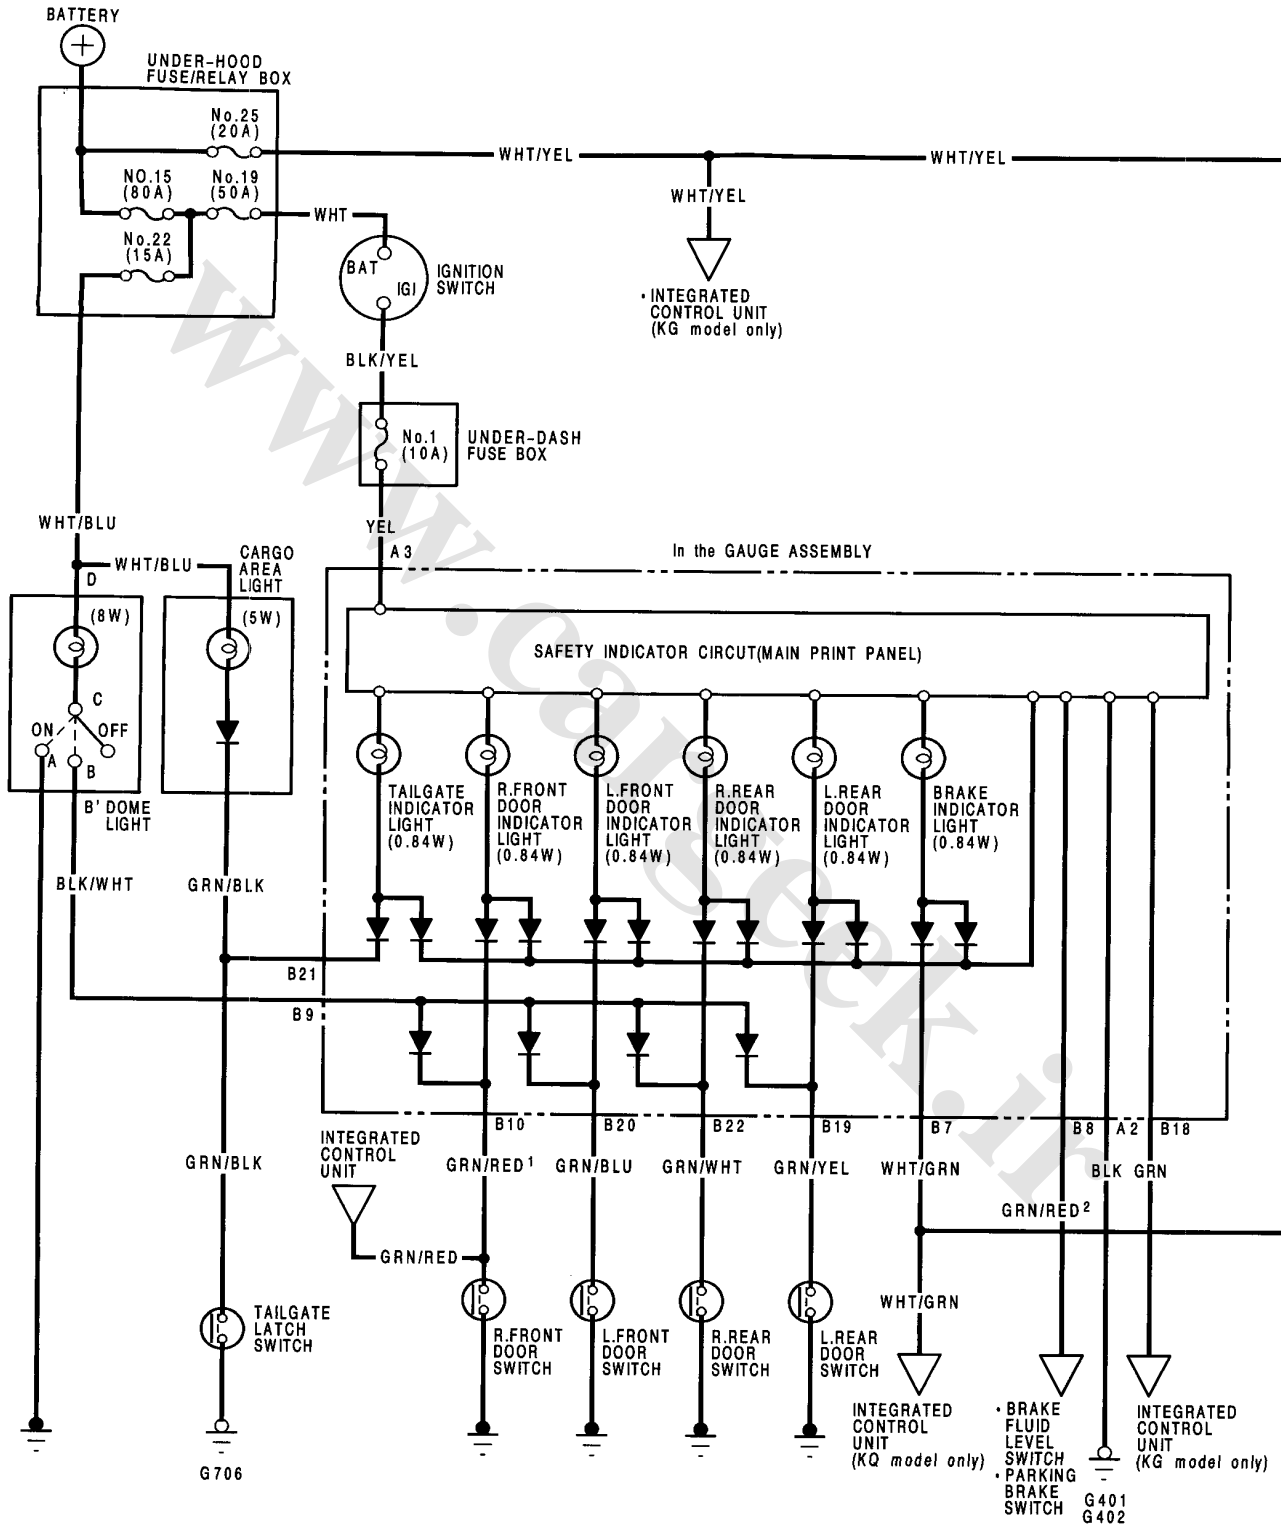

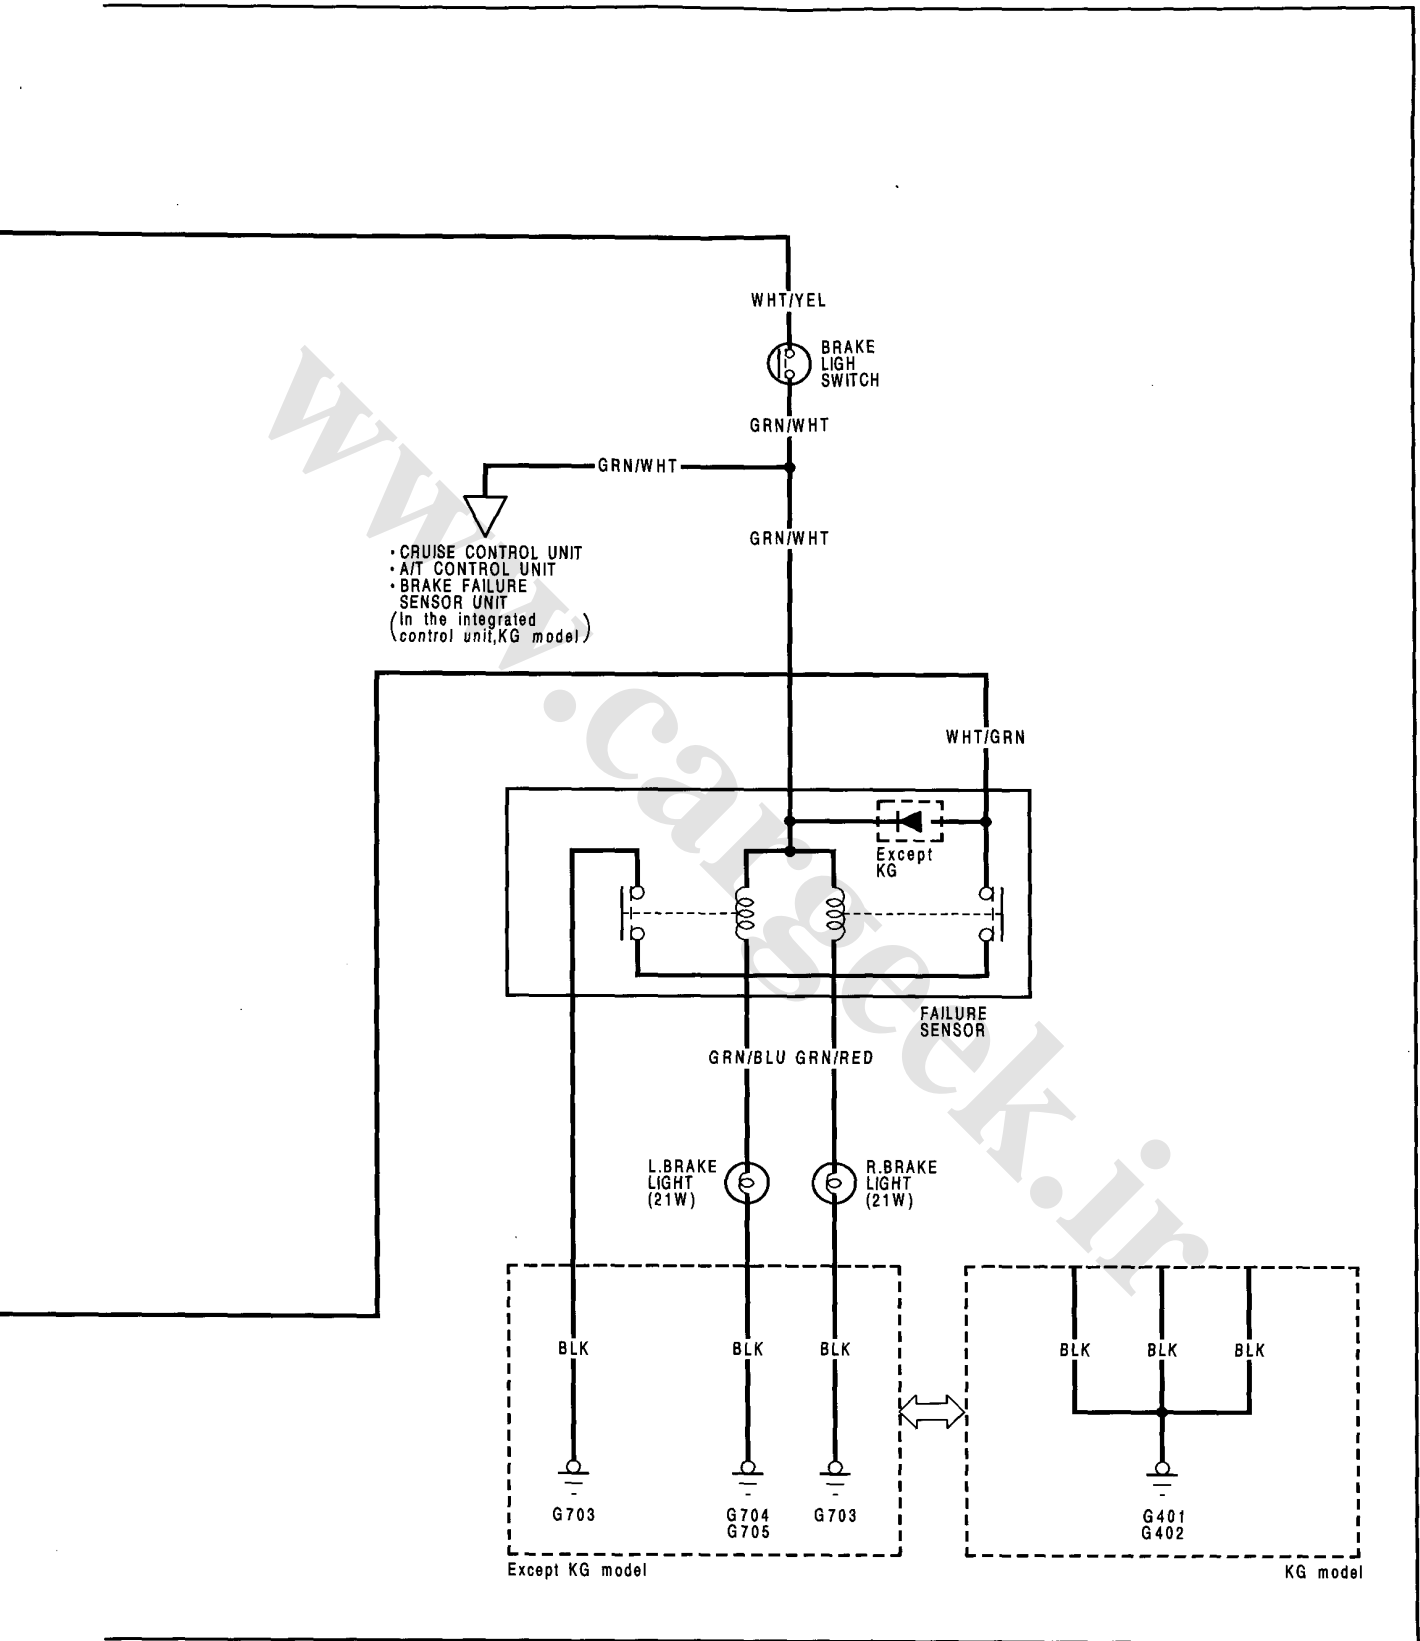


Safety Indicator

Indicator Input Test (With SRS)


CAUTION:

- All SRS electrical wiring harness are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).
- SRS Type II only: Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

SRS Type I

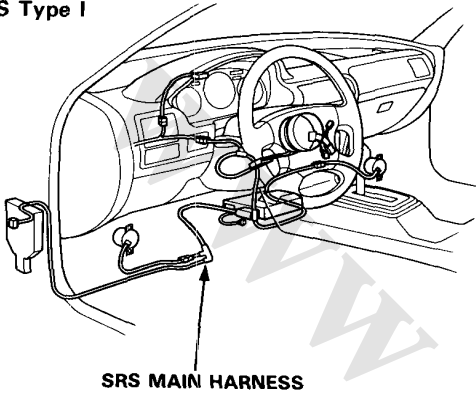


SRS Type II

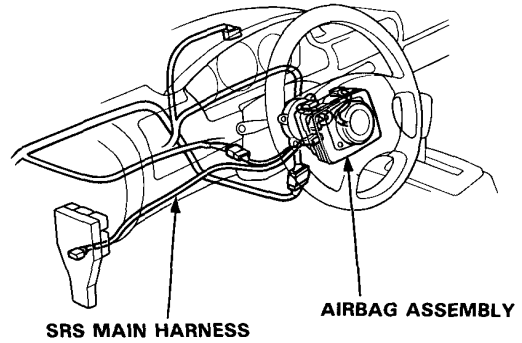

Remove the gauge assembly from the dashboard and disconnect the 7-P, 18-P and 22-P connectors from it. Make the following input tests at the connector terminals. If all tests prove OK, yet the indicator still fails to work, replace the main print panel, speedometer, tachometer and odo/trip meter.

NOTE: Several different wires have the same color. They have been given a number suffix to distinguish them (for example GRN/RED¹ and GRN/RED² are not the same).

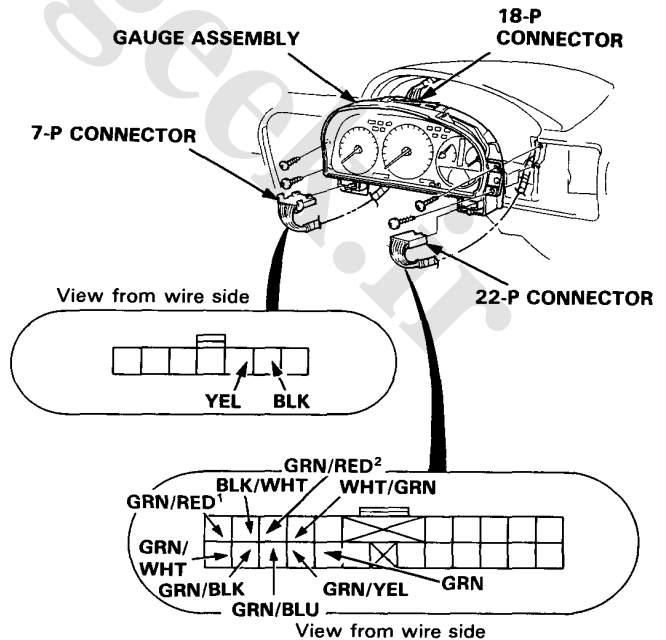




No.	Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: there should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402) An open in the wire.
2	YEL	Ignition switch ON.	Check for voltage to ground: there should be battery voltage.	<ul style="list-style-type: none"> Blown No. 1 (10 A) fuse. An open in the wire.
3	WHT/GRN	Brake pedal pushed.	Check for continuity to ground: there should be continuity with the pedal pushed.	<ul style="list-style-type: none"> Blown No. 25 (20 A) fuse. Faulty brake light switch. Blown brake light bulbs. Faulty brake light failure sensors. Poor ground (G701: Sedan), (G401, G402: Aero deck KG model) (G703, G704, G705: Aero deck KE model). An open in the WHT/GRN or GRN/WHT wire.
4	GRN/BLK	Trunk lid (Sedan) or tailgate (Aero deck) opened.	Check for continuity to ground: there should be continuity. NOTE: Before testing, remove No. 22 (15 A) fuse.	<ul style="list-style-type: none"> Faulty trunk latch switch. An open in the wire. Poor ground (G701: Sedan), (G706: Aero deck).
5	GRN/RED ¹	Right front door opened.	Check for continuity to ground: there should be continuity. NOTE: Before testing, remove the No. 22 (15 A) fuse.	<ul style="list-style-type: none"> An open in the wire. Faulty door switch. Poor installation of the switch.
	GRN/BLU	Left front door opened.		
	GRN/WHT	Right rear door opened.		
	GRN/YEL	Left rear door opened.		
6	BLK/WHT	Dome light switch in MIDDLE position.	Attach to ground: Dome light should come on.	<ul style="list-style-type: none"> Blown No. 22 (15 A) fuse. Faulty dome light. An open in the WHT/BLU or BLK/WHT wire.
7	GRN/RED ²	Ignition switch ON.	Attach to ground: Brake light warning in the safety indicator should come on.	<ul style="list-style-type: none"> Faulty safety indicator circuit. Blown bulb. An open in the wire.

KG model only:

8	GRN	With brake pedal released, ignition switch OFF to ON.	Check for continuity in both directions between the GRN and BLK terminals: there should be continuity in only one direction as the ignition switch is turned ON, then no continuity in both directions with brake pedal pushed.	<ul style="list-style-type: none"> Faulty brake light circuit failure sensor.
---	-----	---	---	--



Shift Lever Position Indicator Circuit Diagram (With SRS)

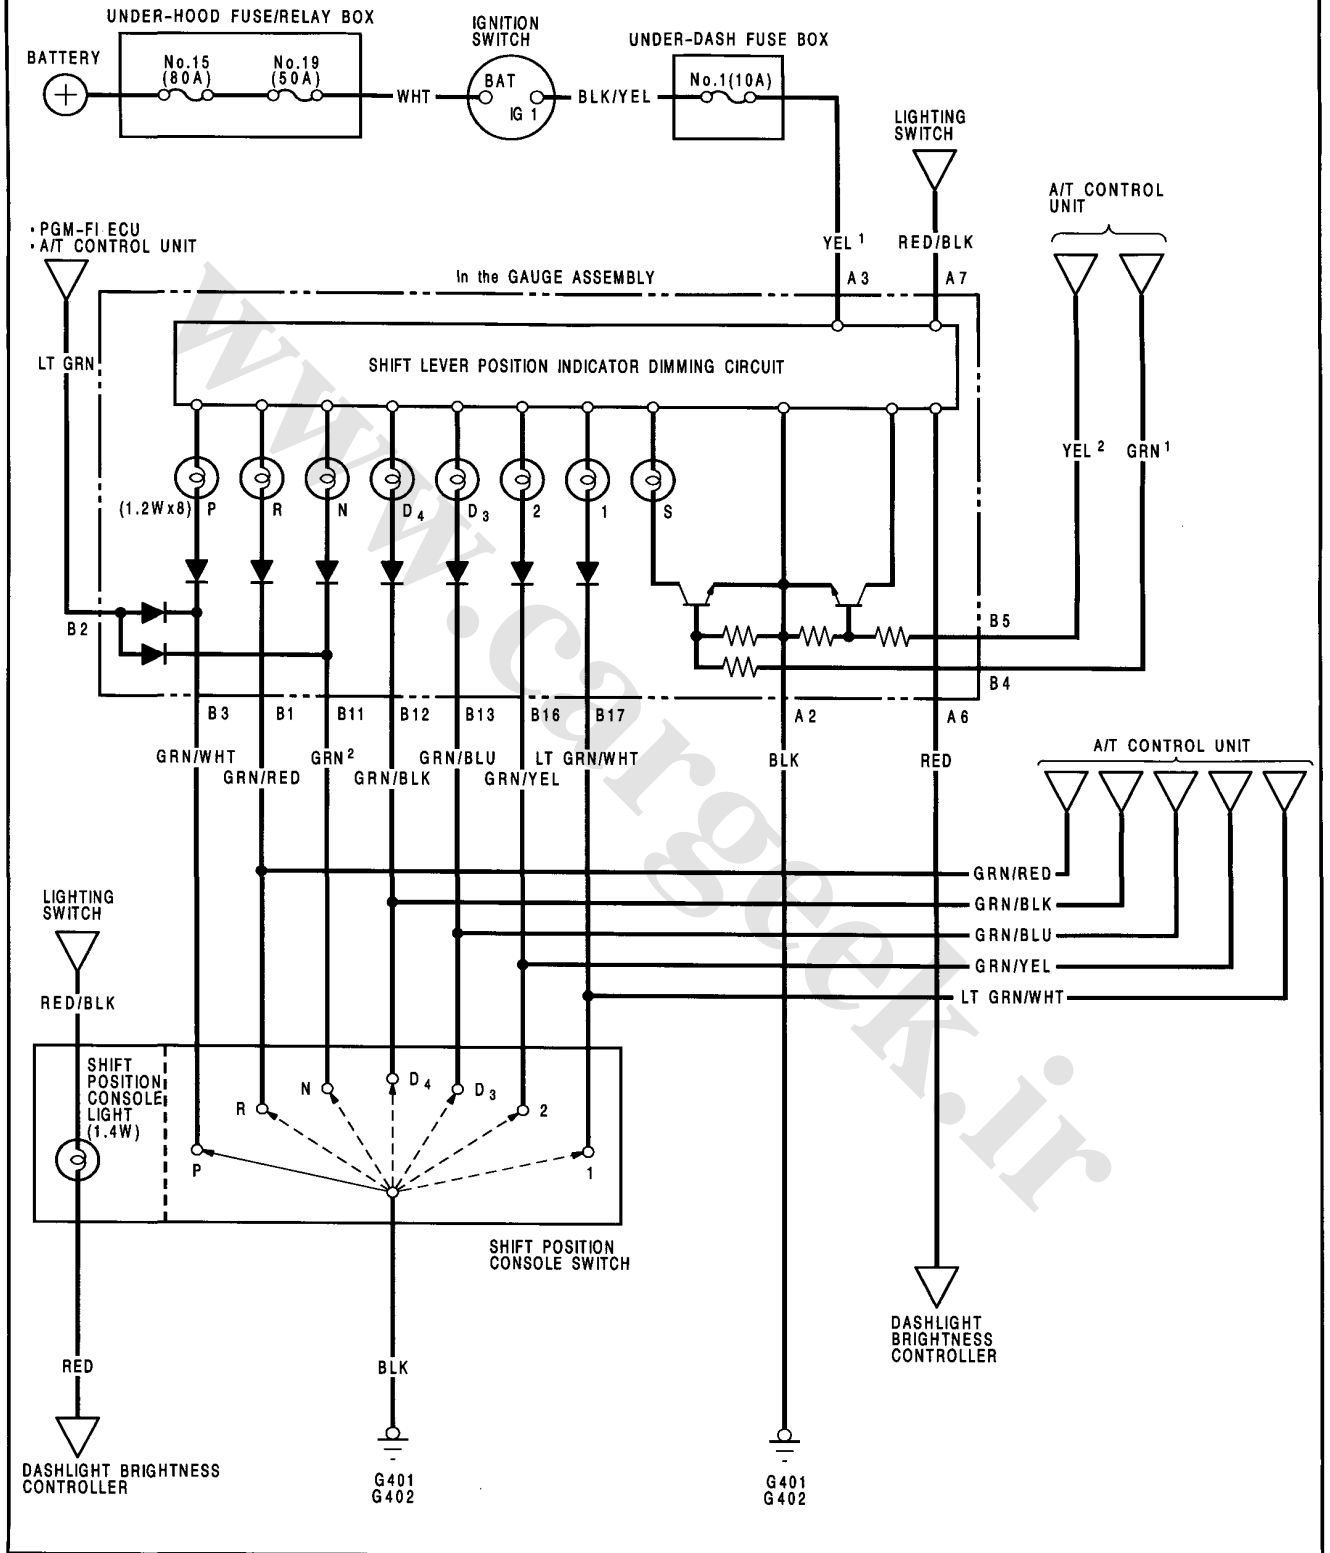


Shift Lever Position Indicator

Indicator Input Test (With SRS)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).
- SRS Type II only: Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

SRS Type I

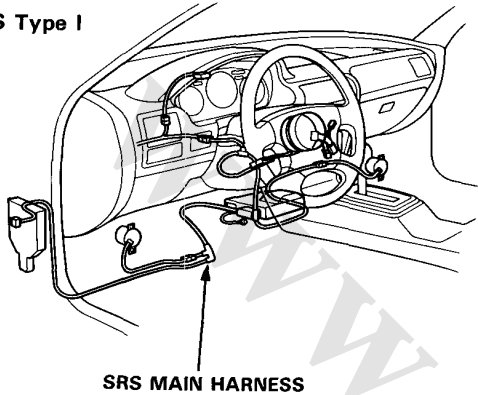


SRS Type II

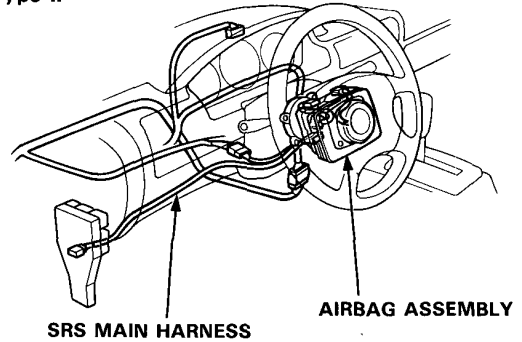

Remove the gauge assembly from the dashboard and disconnect the 7-P, 18-P and 22-P connectors from the gauge assembly. Make the following input tests at the connector terminals. If all tests prove OK, yet the indicator still fails to work, replace the main print panel, speedometer, tachmeter and odo/trip meter.

NOTE: Several different wires have the same color. They have been given a number suffix to distinguish them (for example GRN¹ and GRN² are not the same).

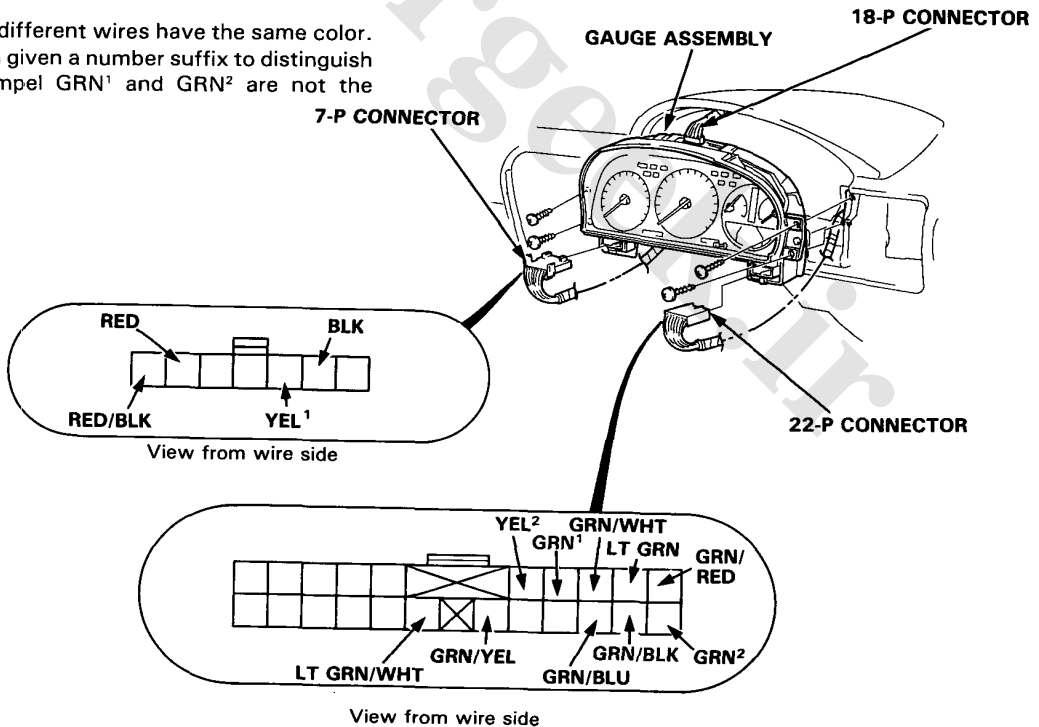




No.	Wire	Test condition	Test: desired result	Possible cause (if result is not obtained)
1	BLK	Under all conditions.	Check for continuity to ground: there should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402) An open in the wire.
2	YEL ¹	Ignition switch ON.	Check for voltage to ground: there should be battery voltage.	<ul style="list-style-type: none"> Blown NO. 1 (10 A) fuse. An open in the wire.
3	GRN/WHT	Shift lever in position P.	Check for continuity to ground: there should be continuity.	<ul style="list-style-type: none"> Faulty shift position console switch. Poor ground (G401, G402) An open in the wire.
	GRN/RED	Shift lever in position R.		
	GRN ²	Shift lever in position N.		
	GRN/BLK	Shift lever in position D ₄		
	GRN/BLU	Shift lever in position D ₃		
	GRN/YEL	Shift lever in position 2.		
	LT GRN/WHT	Shift lever in position 1.		
4	RED/BLK and RED	Lighting switch ON and dashlight brightness control dial on full bright.	Check for voltage between RED/BLK and RED terminals: there should be battery voltage.	<ul style="list-style-type: none"> Faulty dashlight brightness control system. An open in the wire.
5	GRN ¹	Ignition switch ON, shift lever position in D ₃ or D ₄ and S switch ON.	Check for voltage to ground: there should be about 5 V.	<ul style="list-style-type: none"> Faulty S switch. Faulty shift position console switch. Faulty A/T control system. An open in the wire.
6	YEL ²	Ignition switch ON, shift lever position in D ₃ or D ₄ and S switch ON.	Check for voltage to ground: there should be battery voltage.	<ul style="list-style-type: none"> Faulty S switch. Faulty shift position console switch. Faulty A/T control system. An open in the wire.
7	LT GRN	Ignition switch ON.	Check for voltage to ground: there should be about 5 V.	<ul style="list-style-type: none"> Faulty PGM-FI ECU. Faulty PGM-CARB. control unit. An open in the wire.

Brake/High Mount Brake Light


Circuit Diagram (Wagon: KQ model)

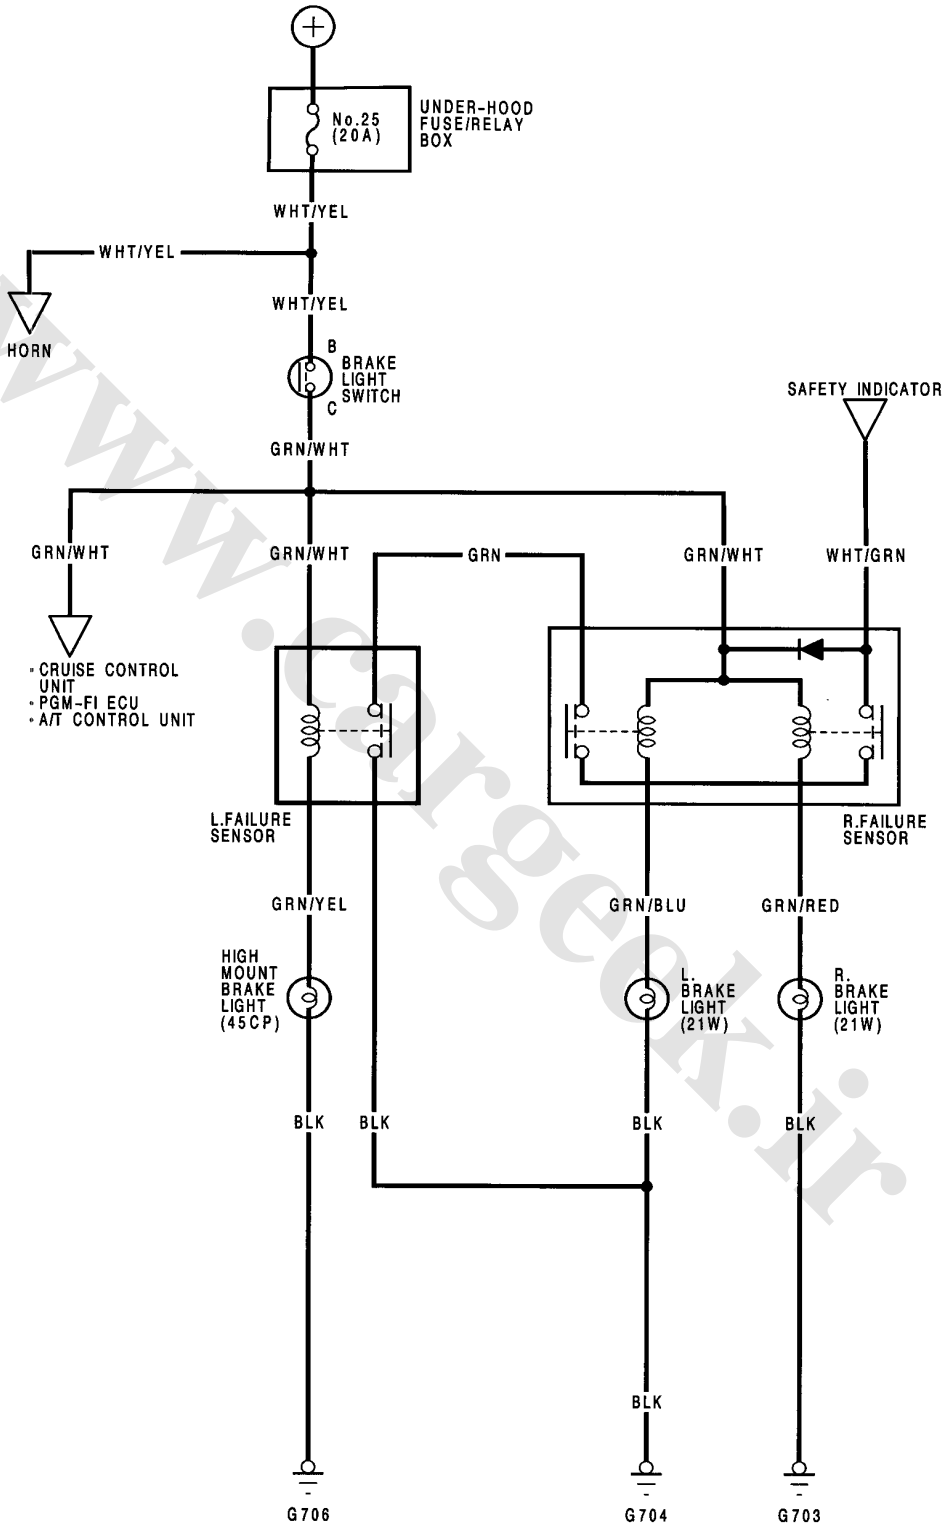



Brake Light Failure Sensor Test (Wagon: KQ model)


- First make sure the brake lights come on when the brake pedal is pressed.
 - If none of the brake lights come on, check the brake light circuit.
 - If one of the brake lights does not come on, check whether the bulb is blown. If the bulb is OK, go to step 2.
 - If all the brake lights come on, go to step 2.
- Open the tailgate and remove the right rear quarter trim panel. Make sure the **BRAKE LAMP** of the safety indicator does not come on when the WHT/GRN terminal of the 6-P connector is grounded and the ignition switch is turned OFF to ON.

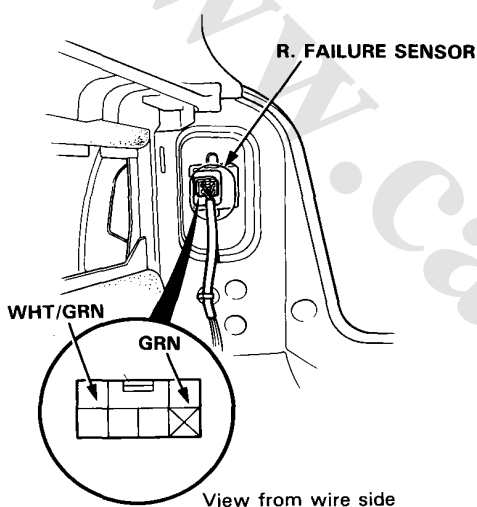

- If the **BRAKE LAMP** comes on, check for an open in the WHT/GRN wire between the safety indicator and the right failure sensor, and whether the safety indicator circuit (main print panel) has a problem.
 - If the **BRAKE LAMP** does not come on, go to step 3.
- Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the GRN terminal of the 6-P connector grounded and the brake pedal pressed.
 - If the **BRAKE LAMP** comes on, replace the right failure sensor.
 - If the **BRAKE LAMP** does not come on, go to step 4.

- Remove the left rear quarter trim panel. Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the GRN terminal of the 4-P connector grounded and the brake pedal pressed.

L. FAILURE SENSOR

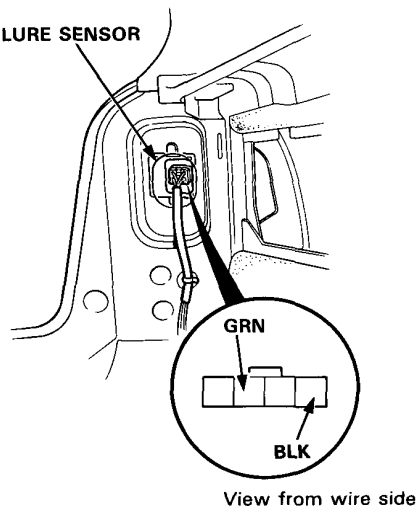


- If the **BRAKE LAMP** comes on, there is an open in the GRN wire between the left failure sensor and the right failure sensor.
 - If the **BRAKE LAMP** does not come on, go to step 5.
- Make sure the **BRAKE LAMP** does not come on when the ignition switch is turned OFF to ON with the BLK terminal of the 4-P connector grounded and the brake pedal pressed.
 - If the **BRAKE LAMP** comes on, replace the left failure sensor.
 - If the **BRAKE LAMP** does not come on, check for an open in the BLK wire between the left failure sensor and ground, and check whether the G704 terminal is loose.

Brake/High Mount Brake Light

High Mount Brake Light Bulb Replacement (Wagon: KQ model)

1. Open the tailgate.
2. Remove the high mount brake light cover.
3. Remove the bulb from the socket.

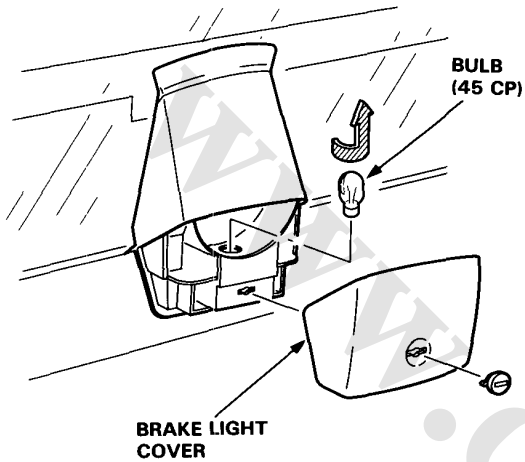


Horns

Component Location Index (With SRS)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).
- SRS Type II only: Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

SRS Type I

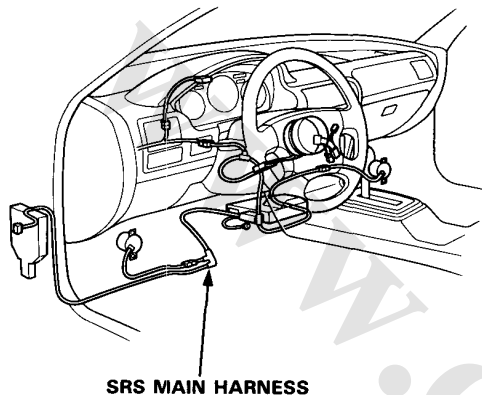


SRS Type II

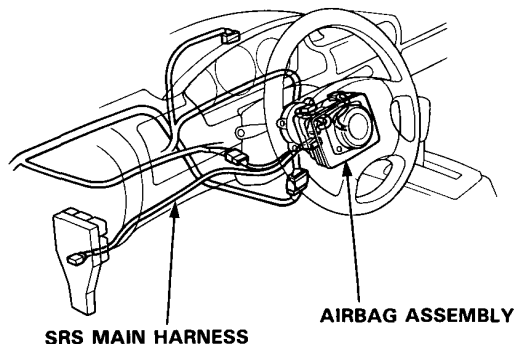


NOTE: RHD type is symmetrical to LHD type.


HORN SWITCHES
Test, page 16-84 and 86

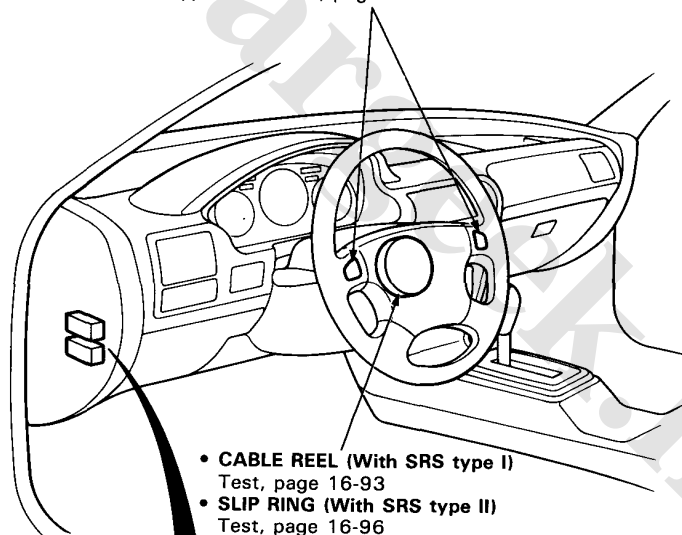


- CABLE REEL (With SRS type I)
Test, page 16-93
- SLIP RING (With SRS type II)
Test, page 16-96

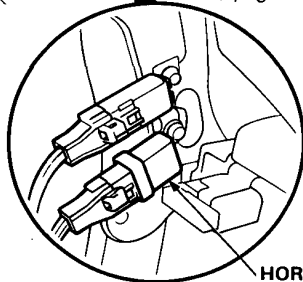

HORN RELAY (With SRS type I)
Test, page 16-88



Circuit Diagram (With SRS)

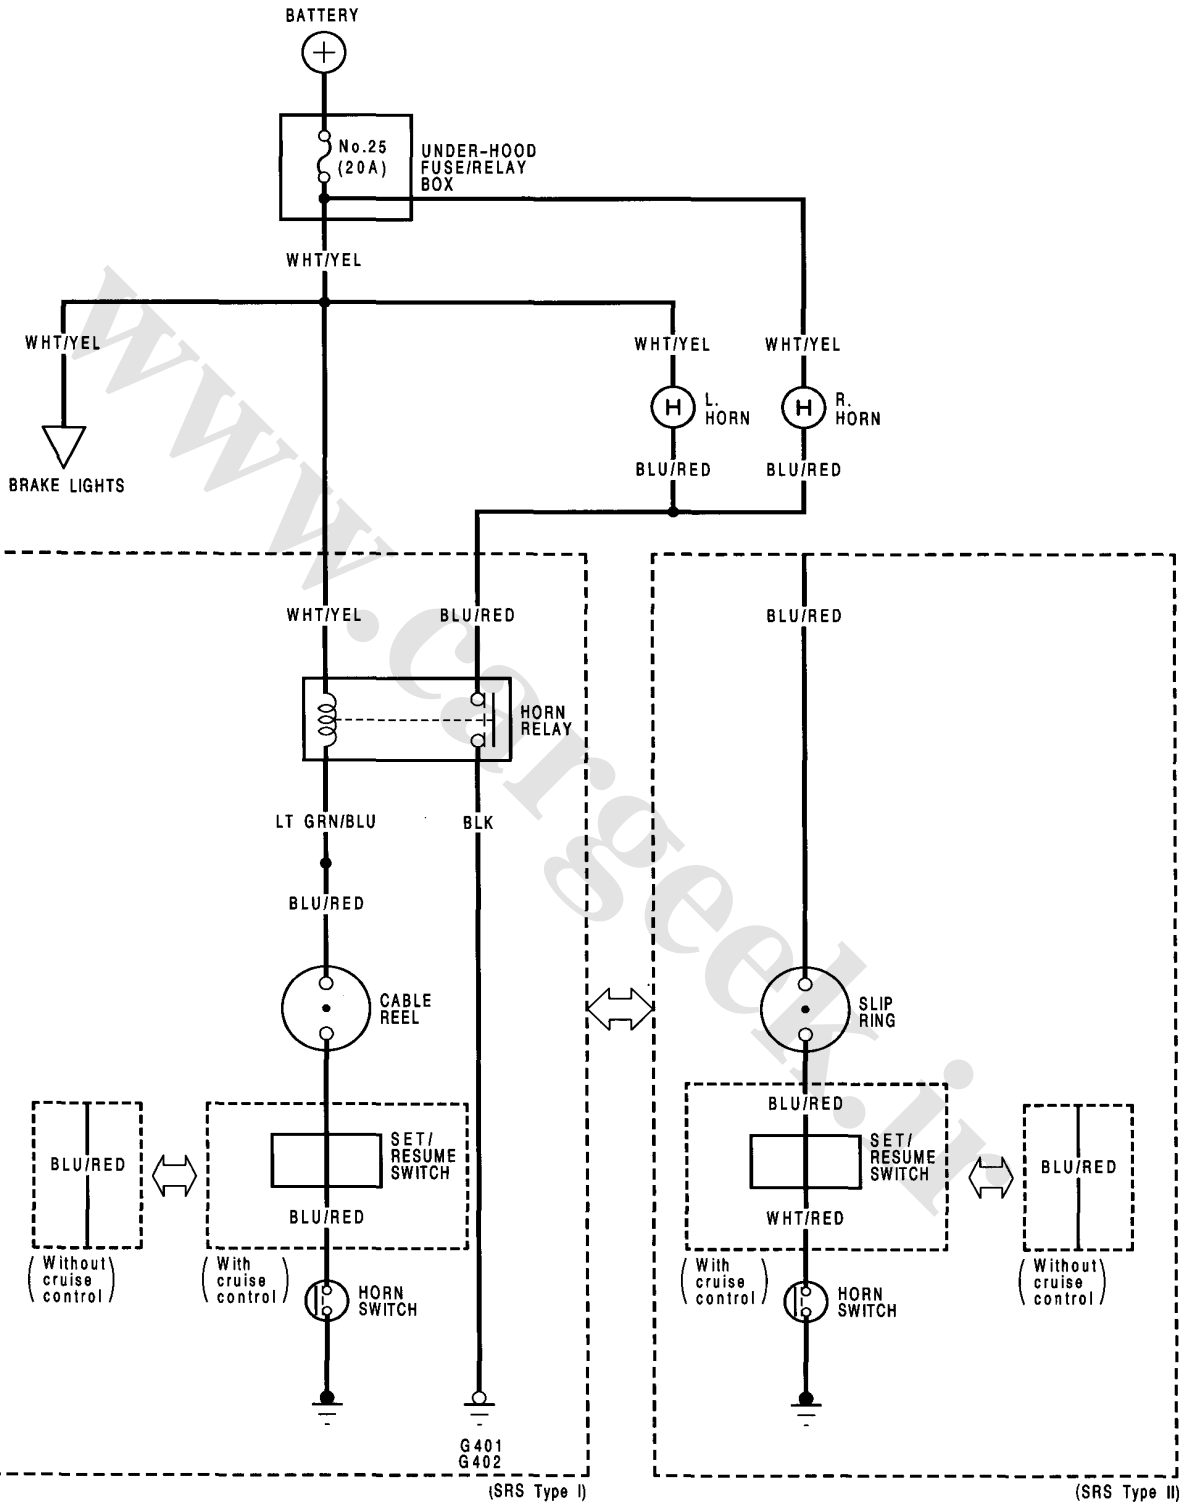


Horns


Switch Test (With SRS Type I)

CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

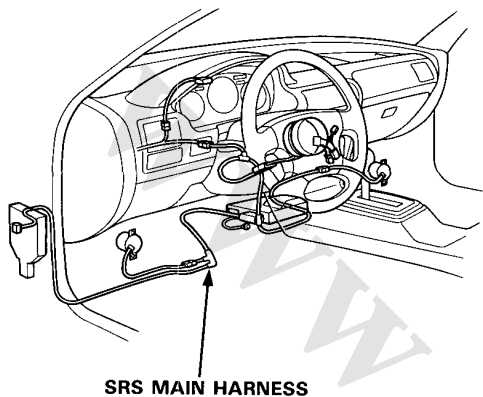

1. Disconnect the battery negative cable, then disconnect the positive cable.
2. Make sure the wheels are straight ahead.
3. Remove the dashboard lower cover.
4. Install the short connector on the airbag.

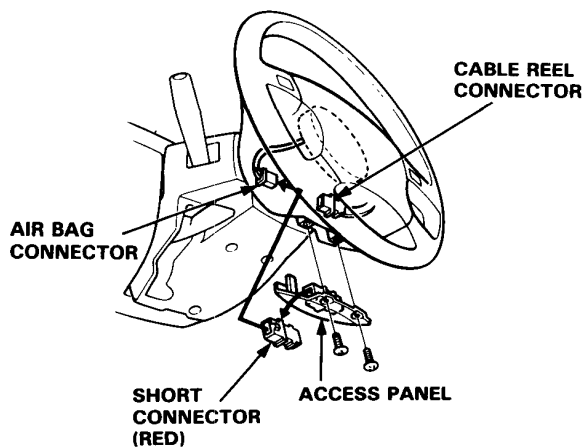

5. Disconnect the cable reel harness 6-P connector from the SRS main harness, then connect Test Harness C only to the cable reel harness.

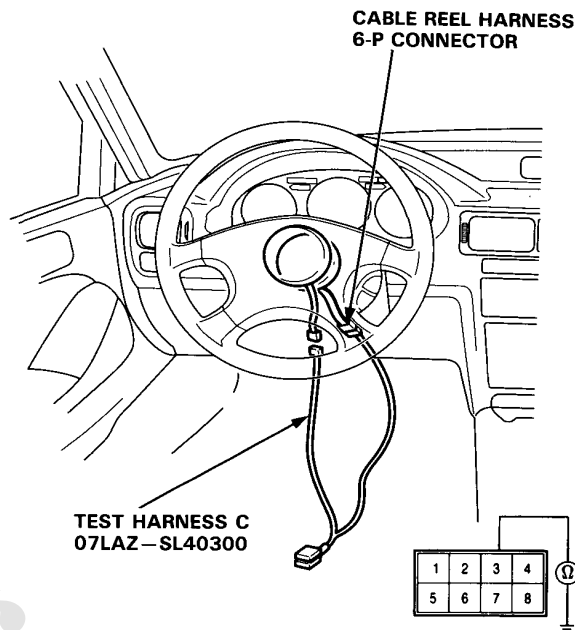


6. Check for continuity between the No. 3 terminal and body ground with the horn switch pressed. There should be continuity.

- If there is continuity, the horn switch is OK.
- If there is no continuity, go to step 7.




- Remove the 2 TORX® bolts using TORX® T30 bit, then remove the airbag assembly.

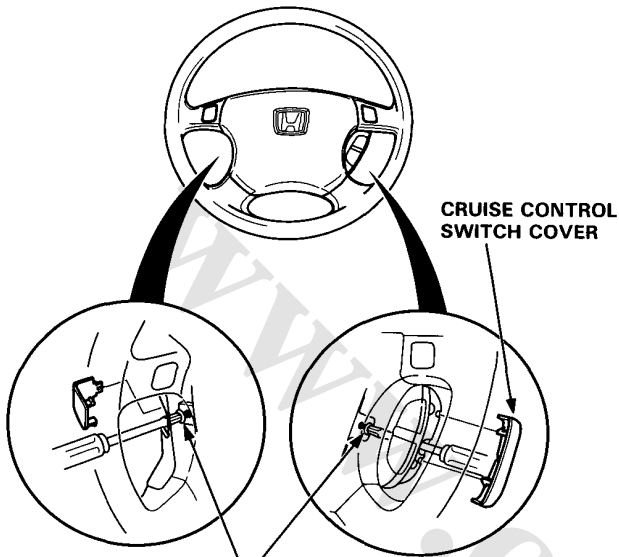


TORX® BOLT
10 N·m (1.0 kg-m, 7 lb-ft)
Replace

- Check for continuity between the horn positive terminal and the steering shaft with the horn switch pressed. There should be no continuity.

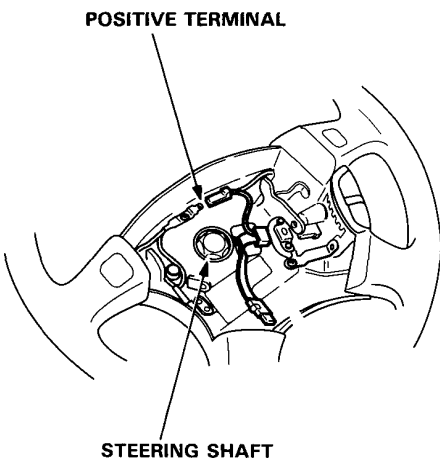

- If there is continuity, replace the cable reel.
- If there is no continuity, remove the nut and the steering wheel. Remove the 4 screws, then remove the steering wheel cover. Replace the horn switch.

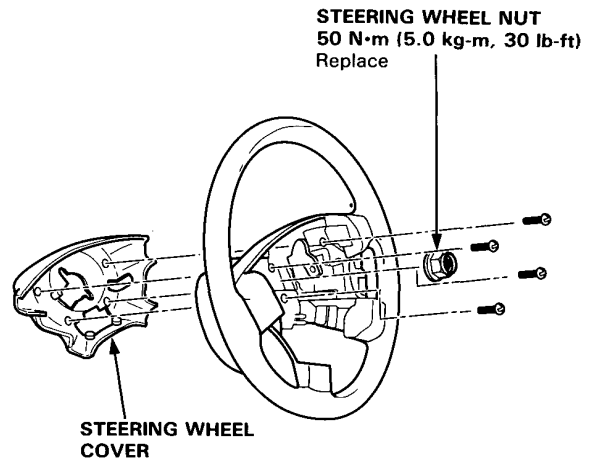


- Install the steering wheel.

Horns


Switch Test (With SRS Type II)

CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

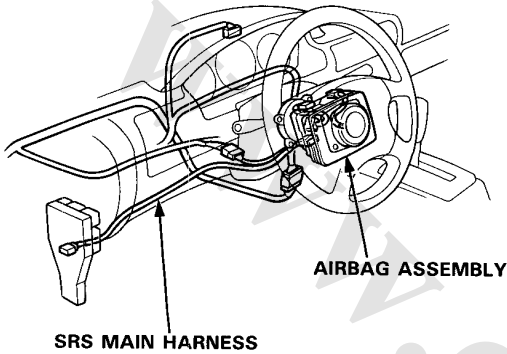

1. Remove the dashboard lower cover and steering column covers.

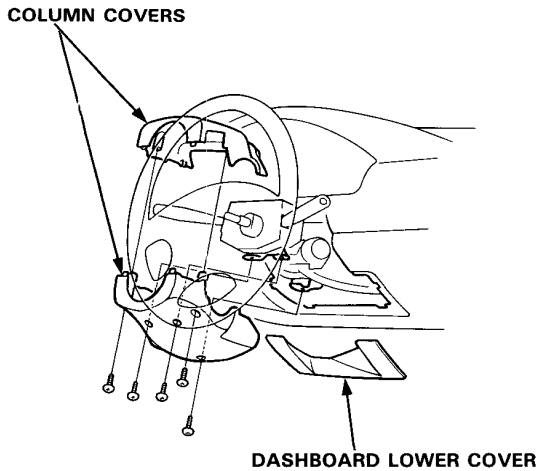

2. Disconnect the SRS main harness 4-P connector from the main wire harness.

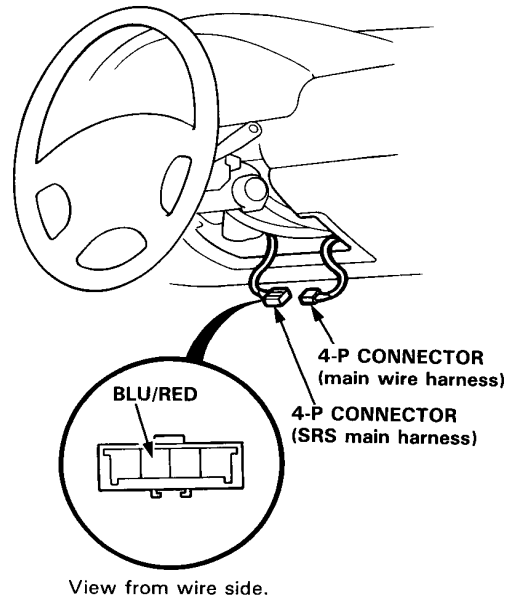


3. Check for continuity between the BLU/RED (SRS main harness side) terminal and body ground with the horn button pushed.

- If there is continuity, the horn switch is OK.
- If there is no continuity, go to step 4.


4. Disconnect the 5-P connector from the slip ring.

NOTE: See page 16-140 before removing the connector for locked with the connector lock pin.

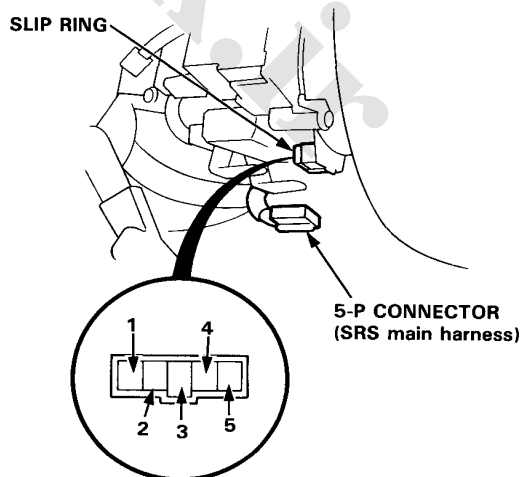




5. Check for continuity between No. 3 terminal and body ground with the horn button pushed.
 - If there is continuity, check for bent, loose or corroded terminal, or open the BLU/RED wire between the SRS main harness.
 - If there is no continuity, go to step 6.
6. Remove the maintenance lid and the SET/RESUME switch from the steering wheel.
7. Remove the 2 TORX® bolts using a TORX® T30 bit, then remove the airbag assembly.

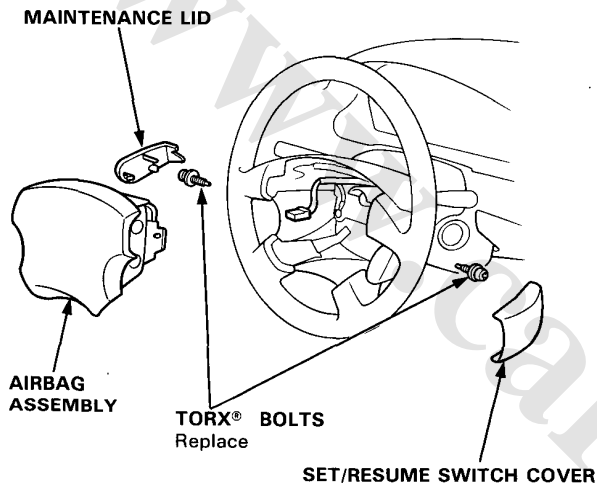

8. Check for continuity between the horn switch positive terminal and the steering shaft with the horn button pushed.


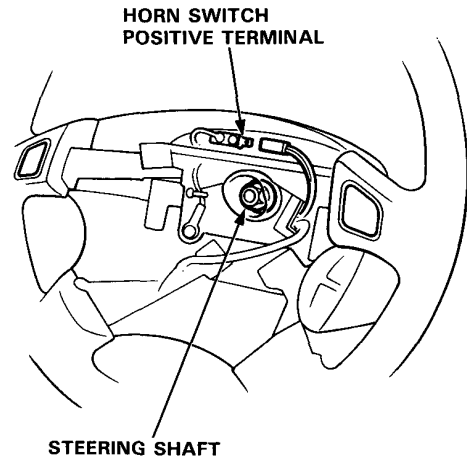


- If there is continuity, check for:
 - Faulty slip ring (see page 16-96).
 - Faulty SET/RESUME switch (see page 16-94).
 - A bent, loose or corroded terminal, or an open in the BLU/RED or WHT/RED wire (between the SRS sub harness).
 - If there is no continuity, repair or replace the horn switch.
9. Install the steering wheel.
 10. After installing, make sure the correct working of the:
 - Horn switch
 - SRS system (see section Supplemental Restraint System).

Horns

Horn Relay Test

1. There should be continuity between the A and B terminals when the battery is connected to the C and D terminals.
There should be no continuity when the battery is disconnected.

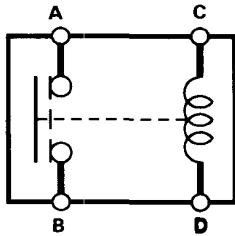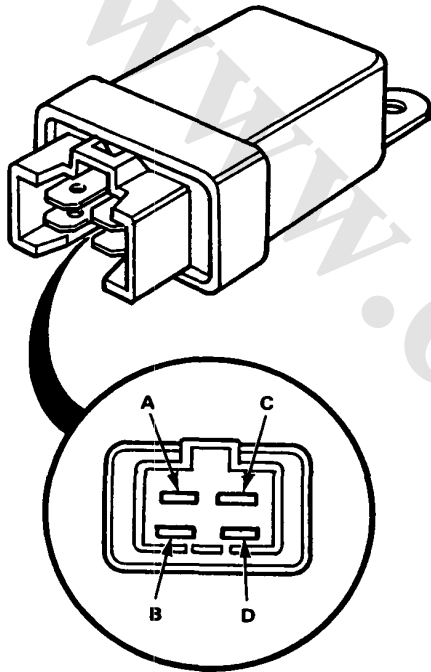




Cruise Control

Component Location Index (With SRS)



CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- SRS Type I only: Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).
- SRS Type II only: Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

SRS Type I

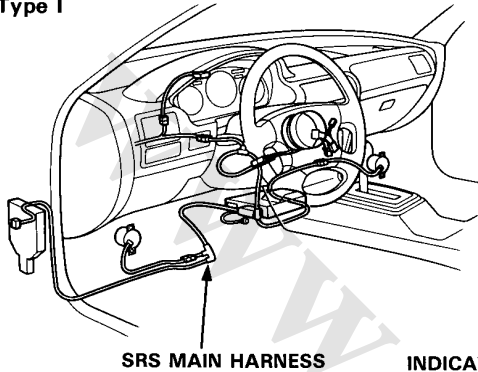


SRS Type II

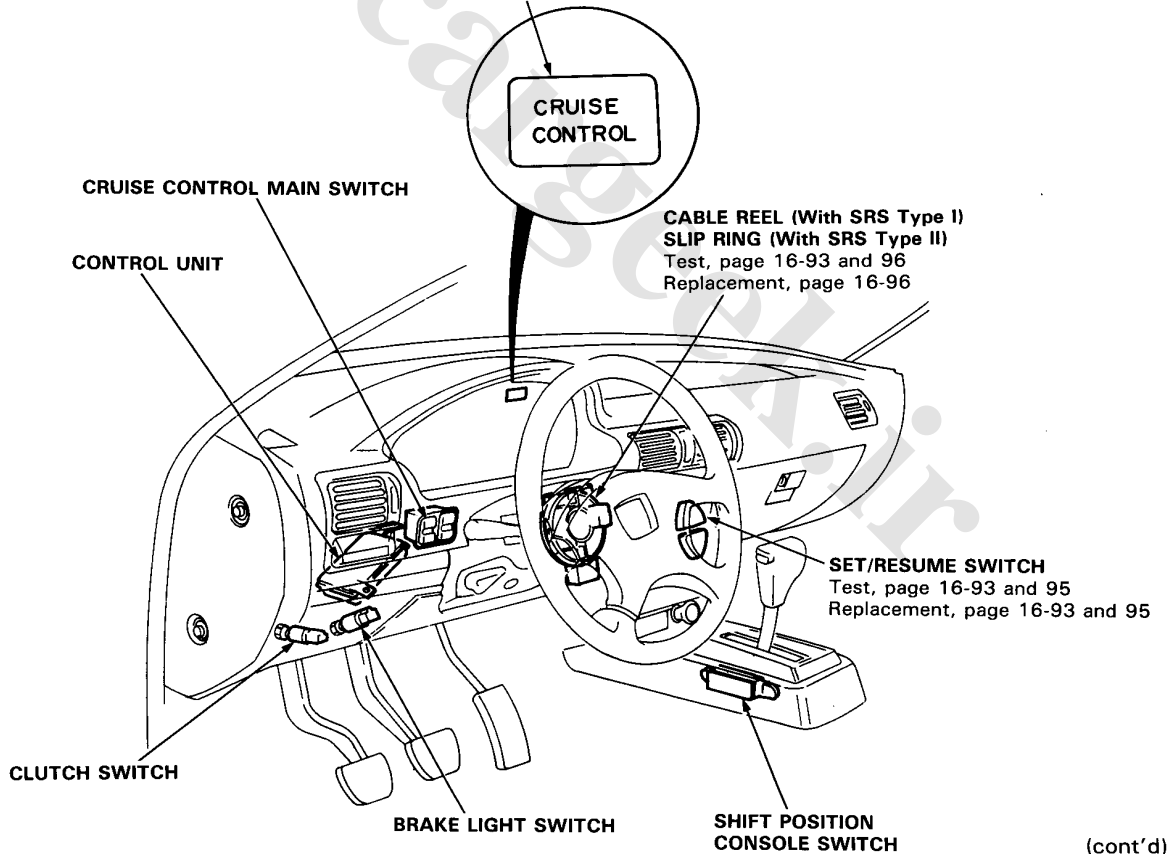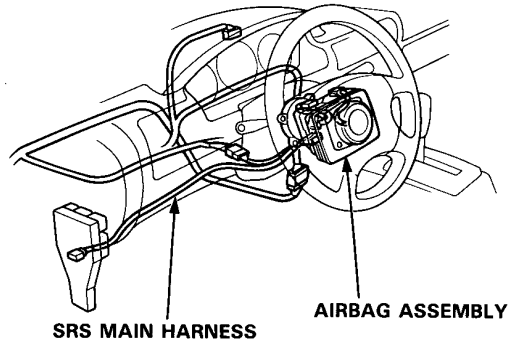

(cont'd)


Cruise Control

Component Location Index (With SRS) (cont'd)

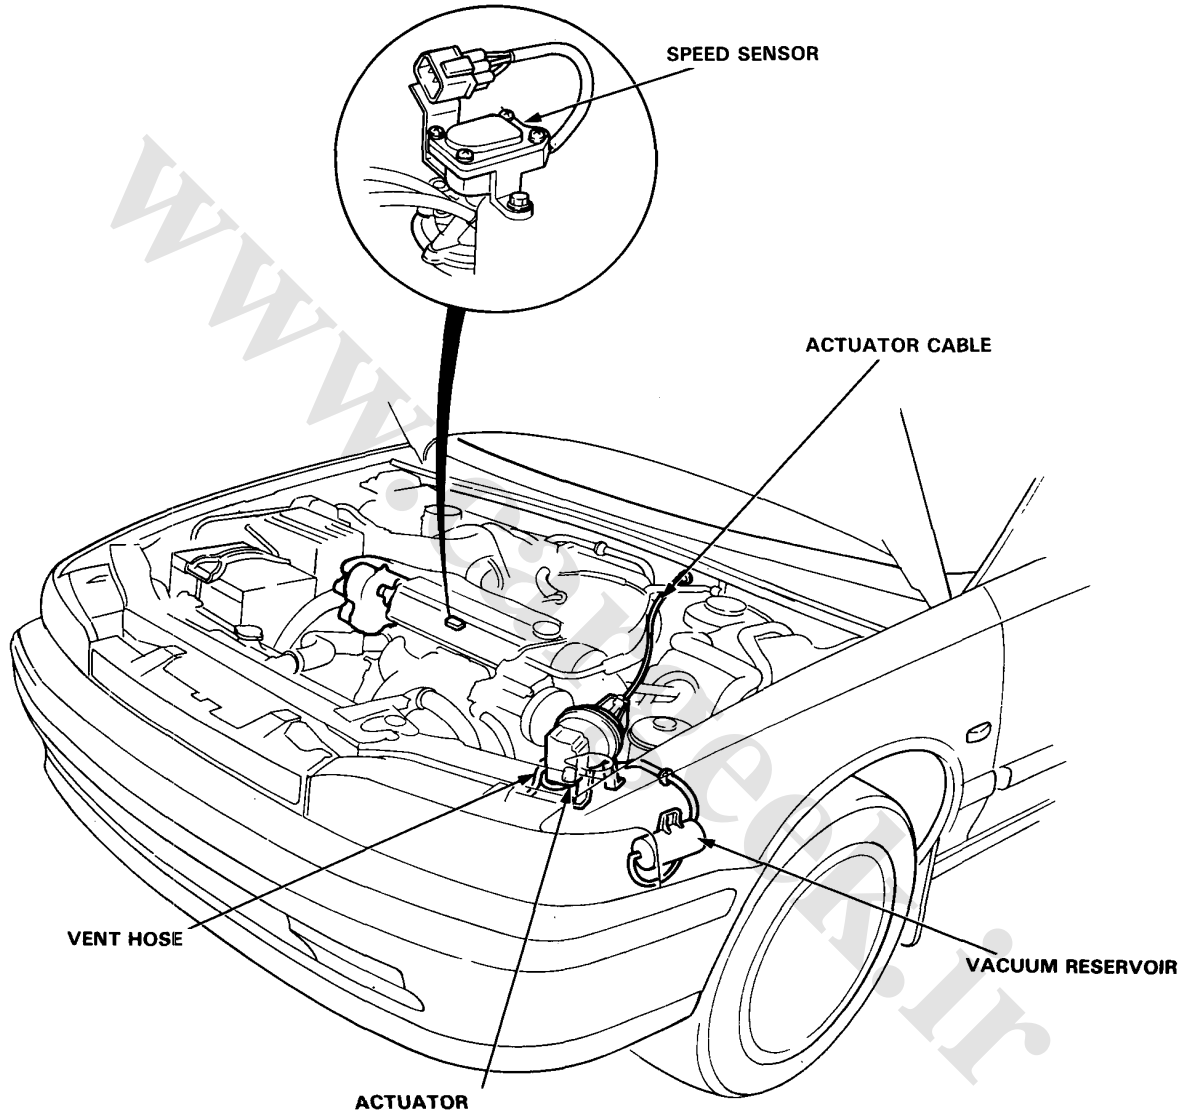




Circuit Diagram (With SRS Type I)

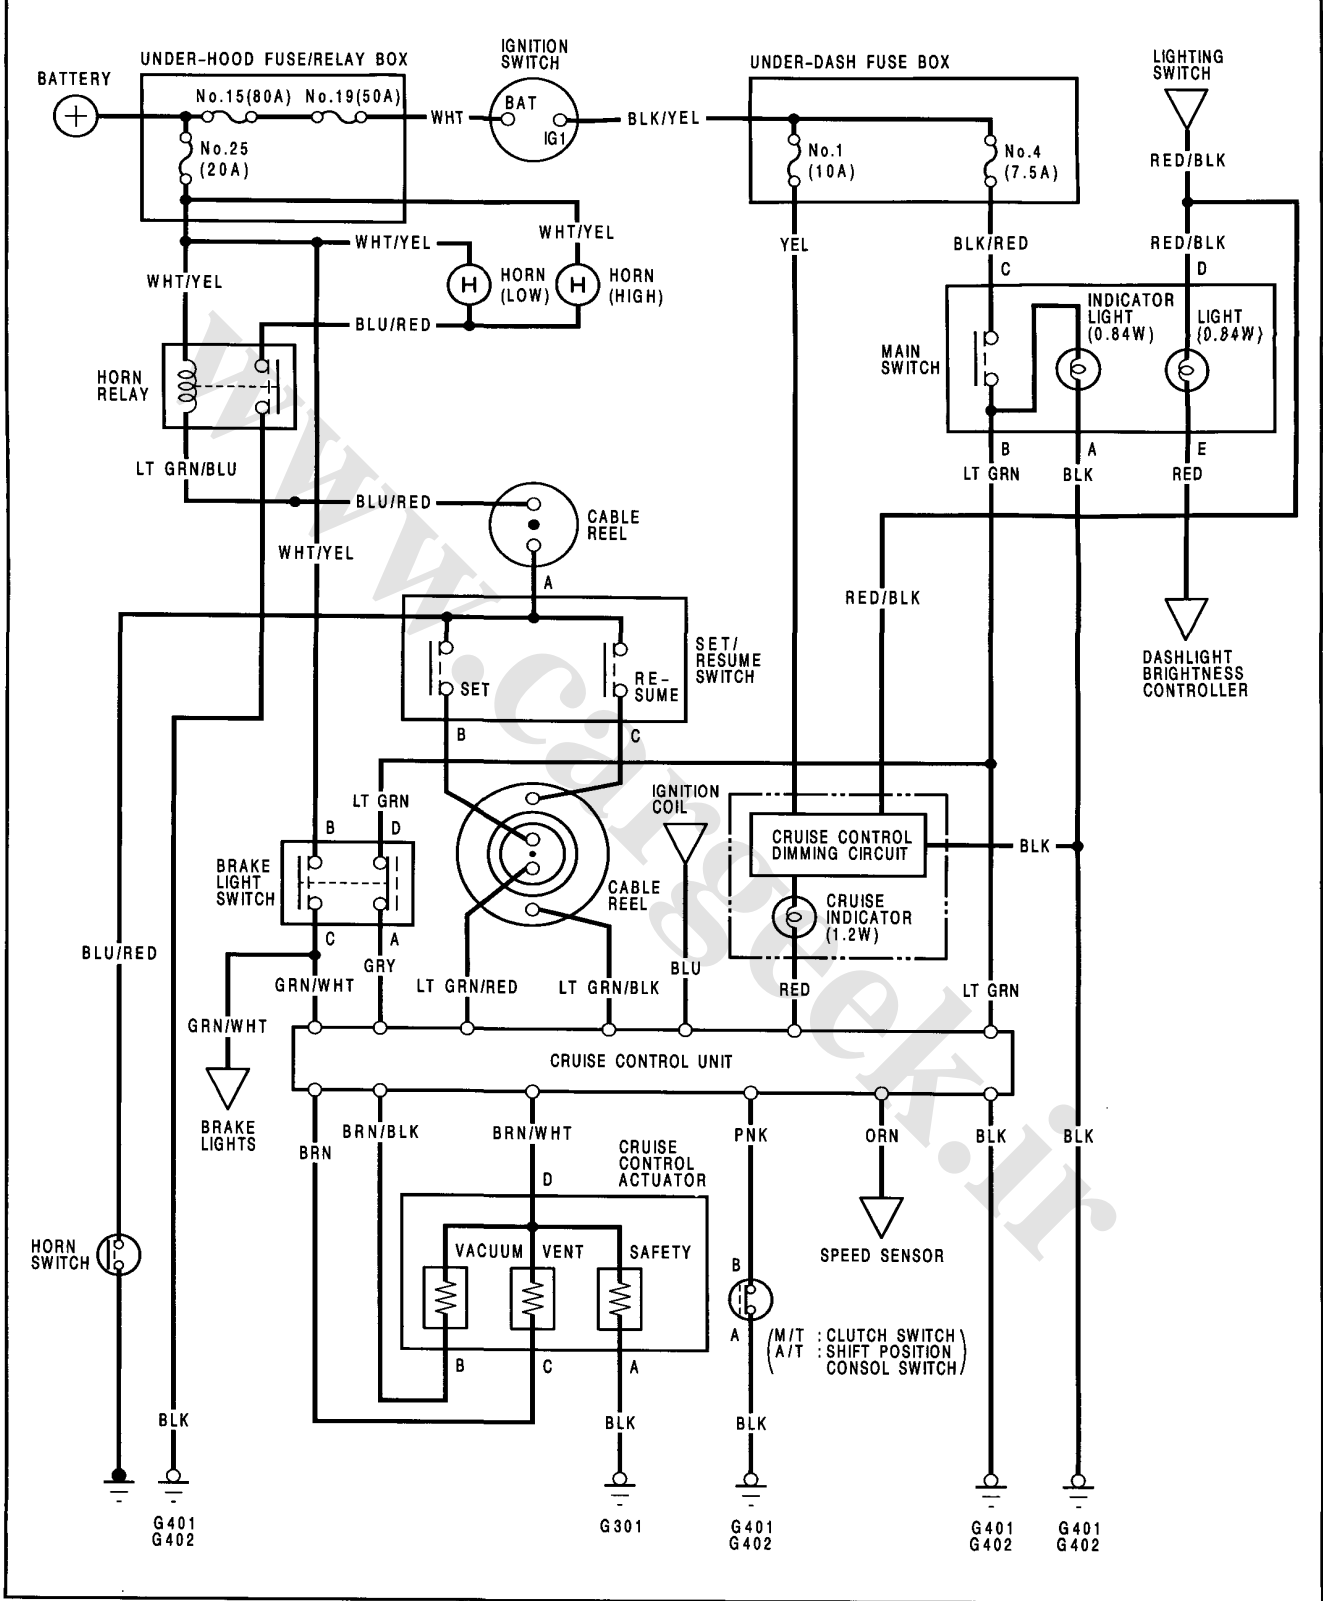

Cruise Control

Circuit Diagram (With SRS Type II)

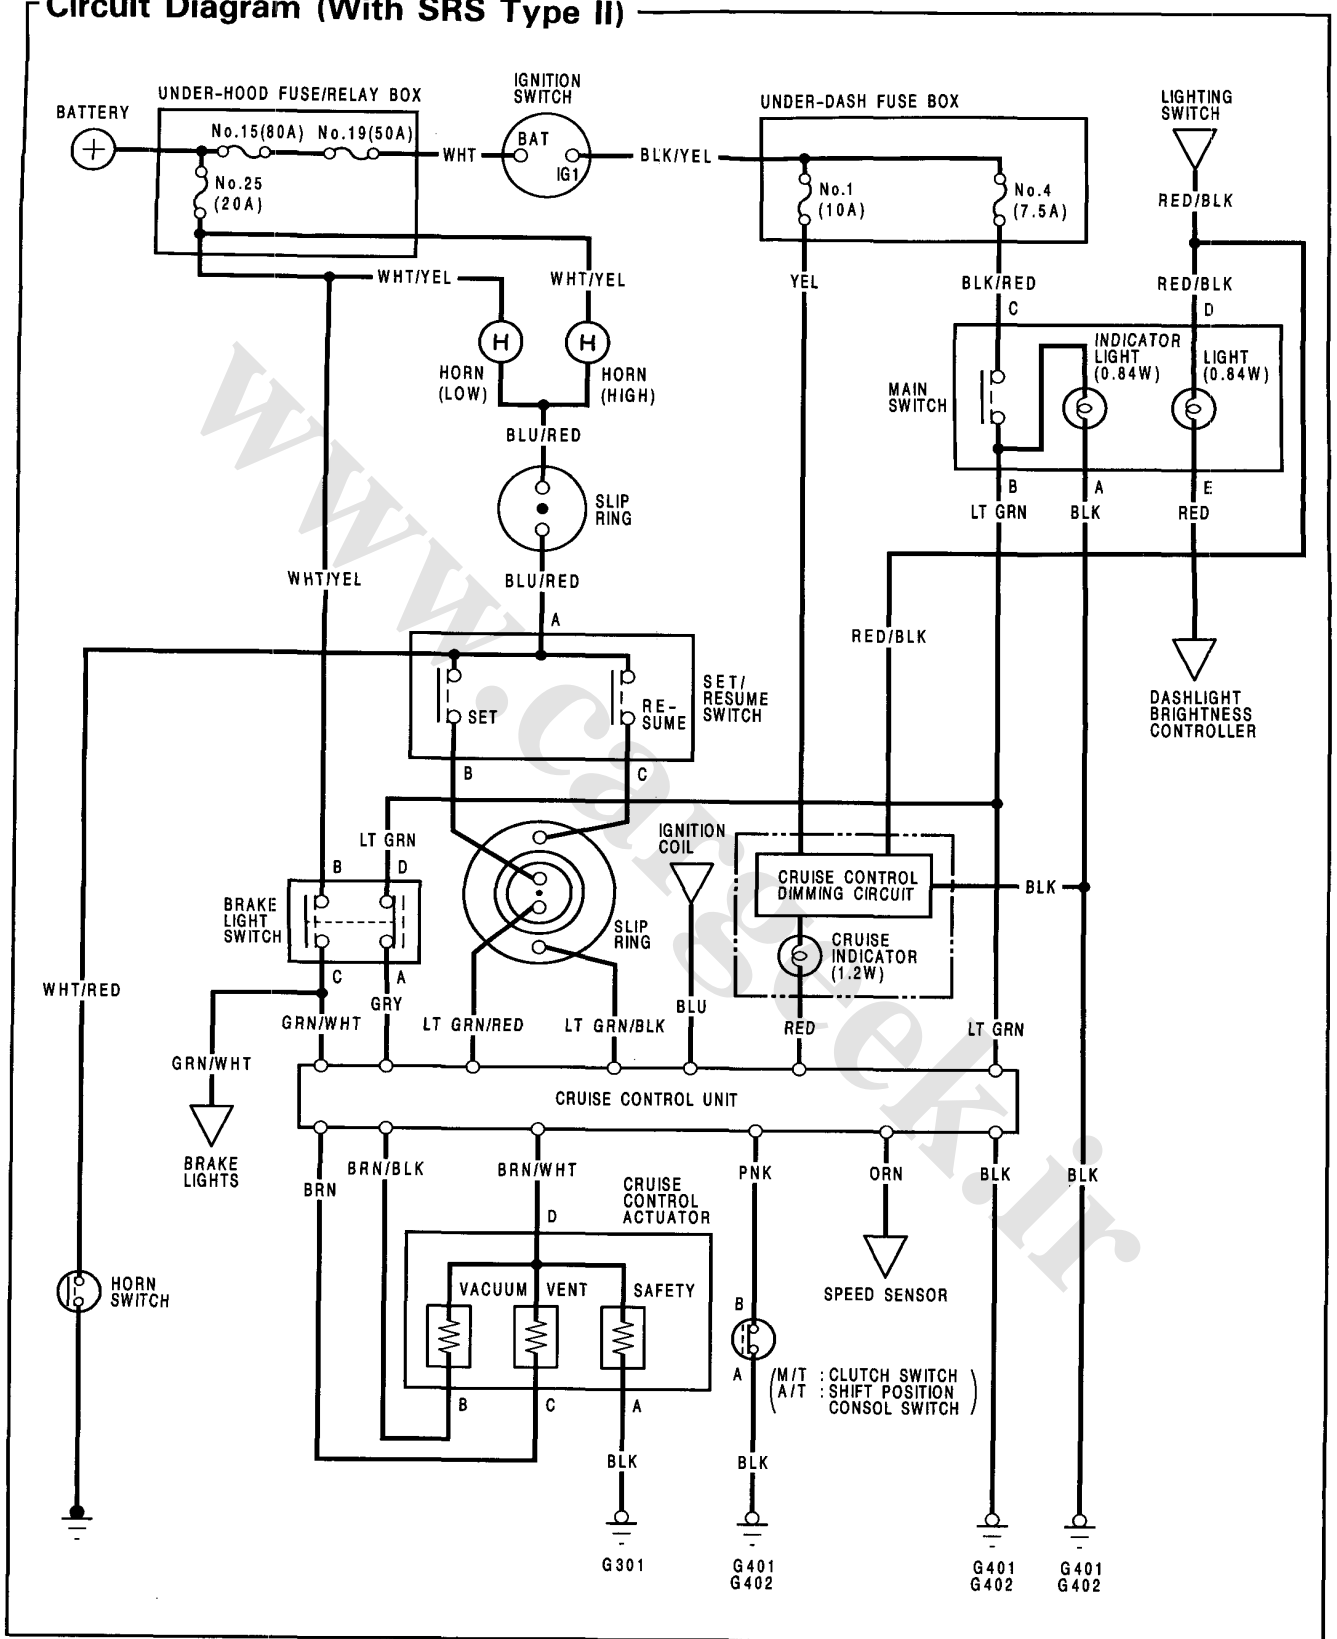




SET/RESUME Switch Test (With SRS Type I)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag (see page 16-105).

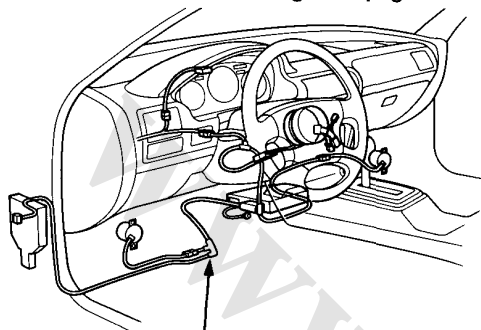

SRS MAIN HARNESS

1. Disconnect the cable reel harness 6-P connector from the SRS main harness, then connect Test Harness C only to the cable reel harness.

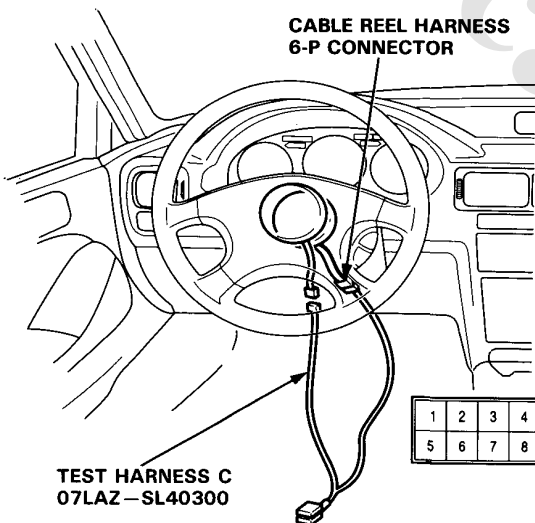

CABLE REEL HARNESS 6-P CONNECTOR

TEST HARNESS C
07LAZ-SL40300


1	2	3	4
5	6	7	8

2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	3 (BLU/RED)	2 (LT GRN/RED)	1 (LT GRN/BLK)
SET (ON)	○	○	
RESUME (ON)	○		○

- If there is continuity, the SET/RESUME switch is OK.
- If there is no continuity, go to step 3.

3. Remove the switch cover from the SET/RESUME switch, then separate the SET/RESUME switch by removing the 2 screws.

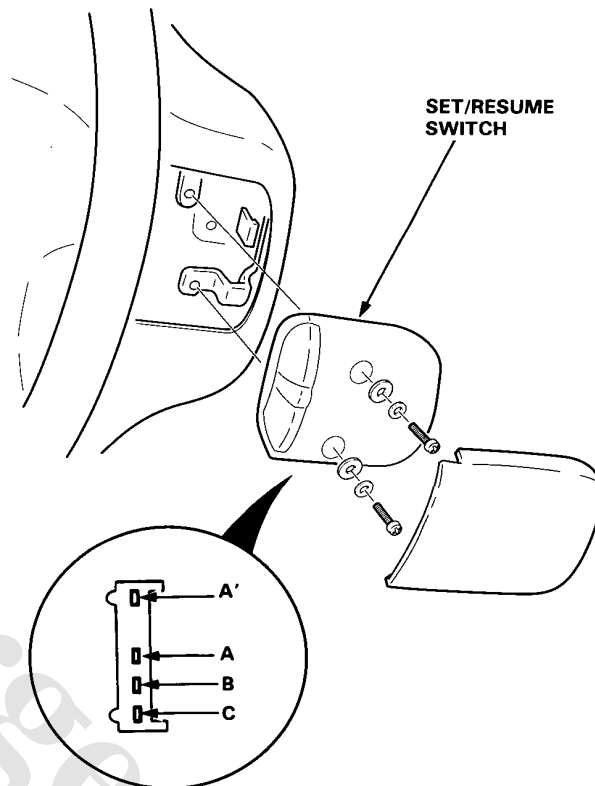

4. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A or A'	B	C
SET (ON)	○		○
RESUME (ON)	○	○	


- If there is continuity, replace the cable reel.
- If there is no continuity, replace the switch.

Cruise Control


SET/RESUME Switch Test (With SRS Type II)

CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

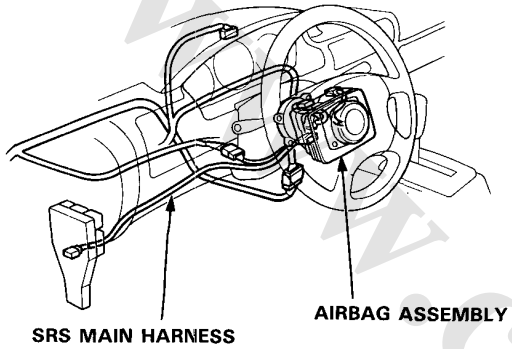

1. Remove the dashboard lower cover and steering column covers.

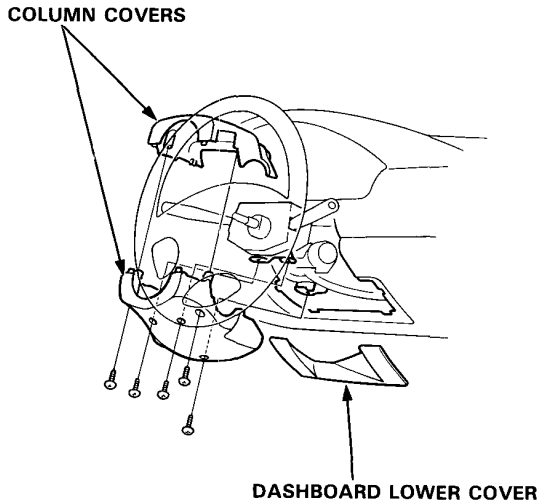

2. Disconnect the SRS main harness 4-P connector from the main wire harness.

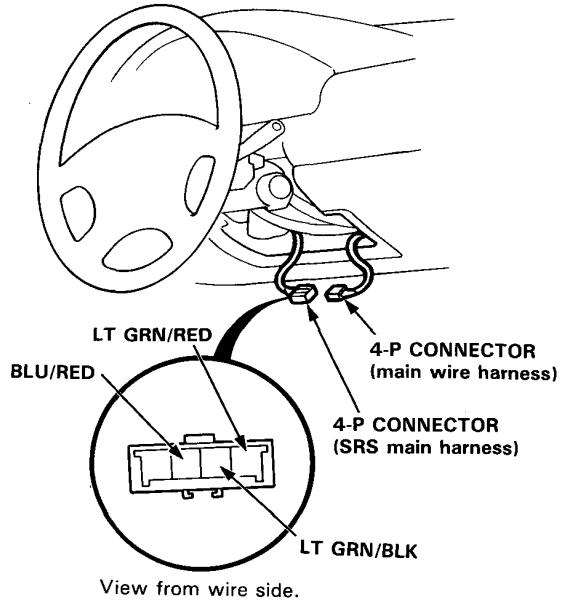

3. Check for continuity between the terminals in each switch position according to the table.


Terminal	BLU/RED	LT GRN/RED	LT GRN/BLK
Position			
SET(ON)	○	○	
RESUME(ON)	○		○

- If there is continuity, the SET/RESUME switch is OK.
- If there is no continuity, go to step 4.



4. Disconnect the 5-P connector from the slip ring.

NOTE: See page 16-140 before removing the connector for locked with the connector lock pin.

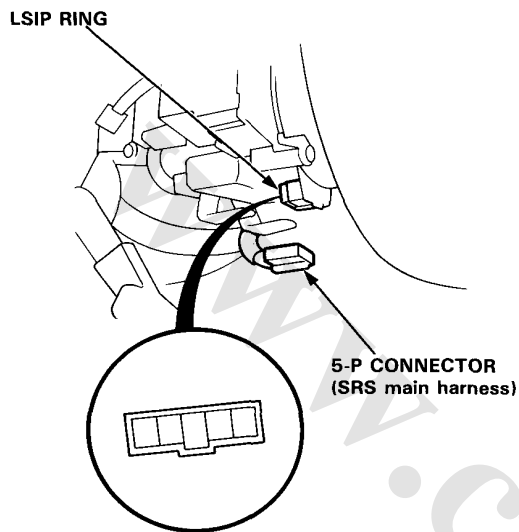


5. Check for continuity between the terminals in each switch position at the slip ring side according to the table.

Terminal	1	2	3	4	5
Position					
SET(ON)			○	○	
RESUME(ON)			○	○	○

- If there is continuity, an open in the SRS main harness.
- If there is no continuity, go to step 6.

6. Remove the switch cover from the SET/RESUME switch, then separate the SET/RESUME switch by removing the 2 screws.

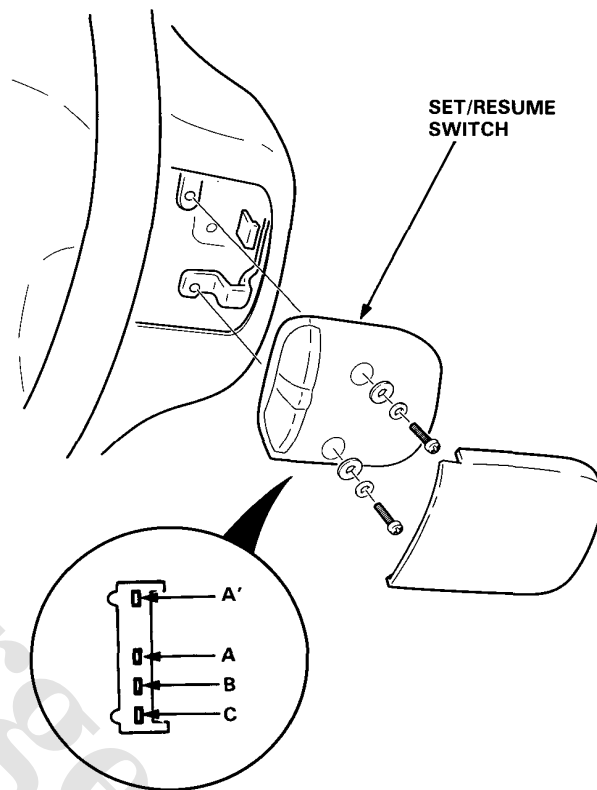

7. Check for continuity between the terminals in each switch position according to the table.

Terminal	A or A'	B	C
Position			
SET (ON)	○	○	○
RESUME (ON)	○	○	


- If there is continuity, check for:
 - Faulty slip ring (see page 16-96).
 - A bent, loose or corroded terminal, or an open in the SRS sub harness.
- If there is no continuity, replace the switch.

Cruise Control

Slip Ring Replacement/Test (With SRS Type II)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wiring harness, turn the ignition switch off, disconnect the negative and positive battery cables, and wait at least three minutes.

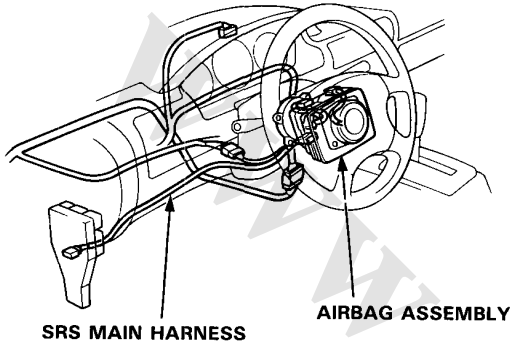


1. Remove the steering column covers.
2. Remove the airbag assembly (see page 16-87).
3. Disconnect the SRS unit sub harness 5-P connector from the slip ring, then remove the steering wheel.

STEERING WHEEL NUT
50 N·m (5.0 kg-m, 30 lb-ft)
Replace

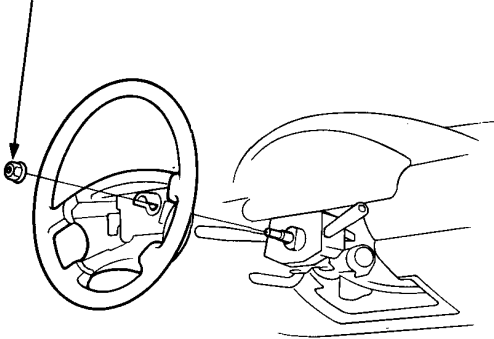


4. Disconnect the SRS main harness 5-P connector from the slip ring.
5. Remove the 4 screws and the slip ring.

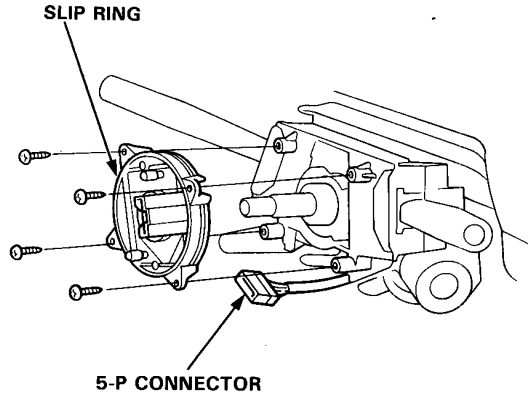


6. Check for continuity between the A and A', B and B', C and C', D and D', E and E' terminals with turning the slip ring.

UPPER SIDE:

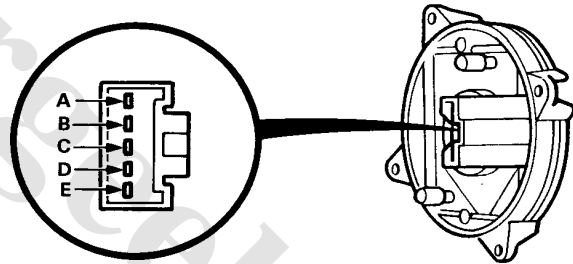

LOWER SIDE:

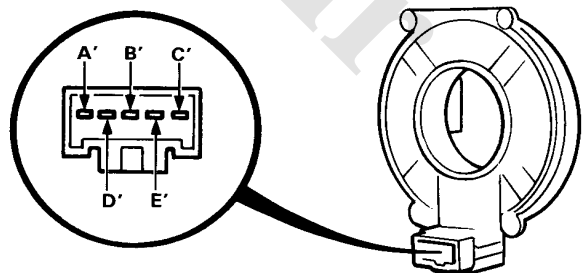

If even a terminal do not continue, replace the slip ring assembly.

Supplement Restraint System - Type 1

(AERO DECK)

Component Location Index

Description

Circuit Diagram

Wiring Locations

Precautions/Procedures

Troubleshooting

Airbag Assembly

Removal

Installation

Disposal

Cable Reel

Removal

Installation

Dash Sensor

Removal

Installation

SRS Unit

Removal

Installation

Supplement Restraint System - Type 2

(SEDAN)

Component Location Index

Description

Circuit Diagram

Wiring Locations

Precautions/Procedures

Troubleshooting

Self - diagnosis system

Failure code table

Airbag Assembly

Removal

Installation

Disposal

Slip Ring

Removal

Installation

Supplemental Restraint System (Type I)

Component Location Index

NOTE: RHD type is symmetrical to LHD type.

SRS INDICATOR LIGHT

(In the gauge assembly)

Troubleshooting, page 16-106

Gauge assembly, page 16-62

CABLE REEL

Removal, page 16-126

Installation, page 16-128

TO HORN

TO CRUISE CONTROL
SET/RESUME SWITCH

TO AIRBAG
ASSEMBLY

AIRBAG ASSEMBLY

Removal/Installation,
page 16-122

Disposal, page 16-124

RIGHT DASH SENSOR

Removal/Installation,
page 16-130

SRS UNIT

(Including cowl sensor)




Removal/installation,
page 16-132

SRS MAIN HARNESS

LEFT DASH SENSOR

Removal/Installation,
page 16-130


UNDER - DASH FUSE BOX

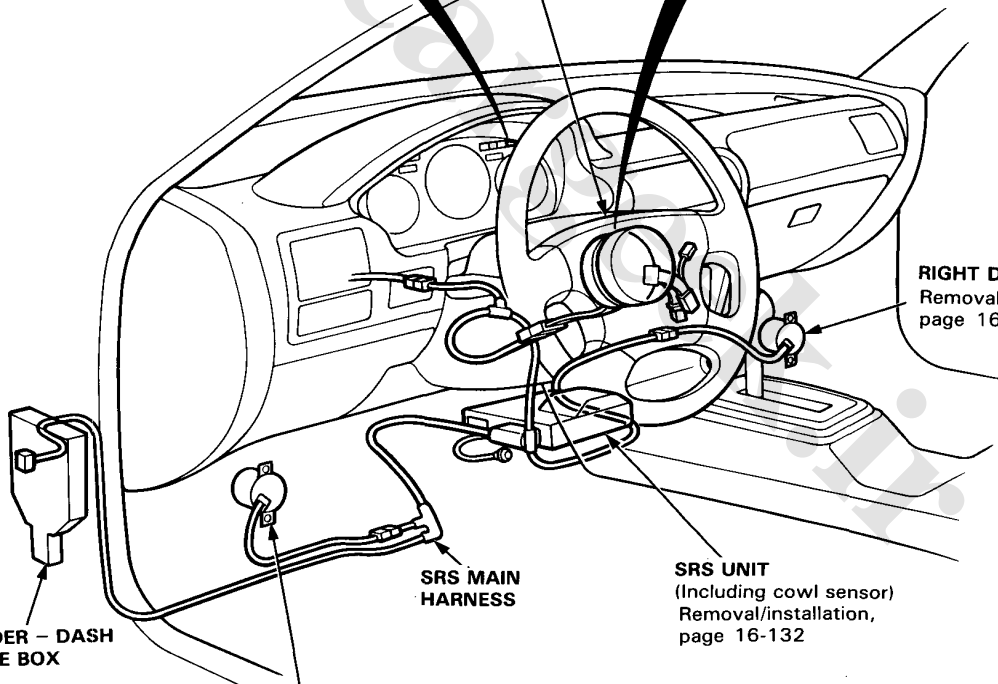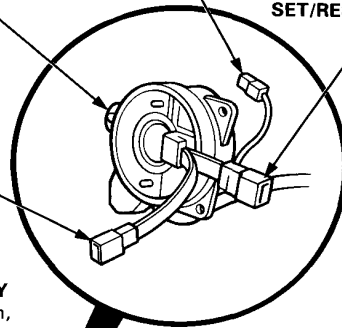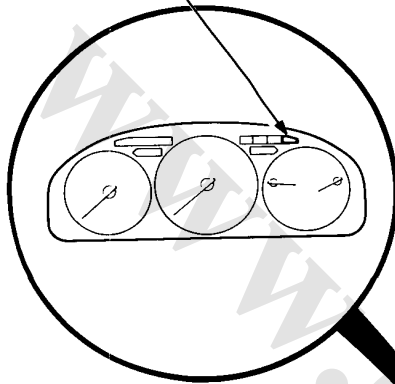

Description

The SRS is a safety device which, when used in conjunction with the seat belt, is designed to protect the driver by operating only when the car receives a frontal impact exceeding a certain set limit.

The system is composed of left and right dash sensors, the SRS unit (includes cowl sensor), the cable reel and airbag assembly.

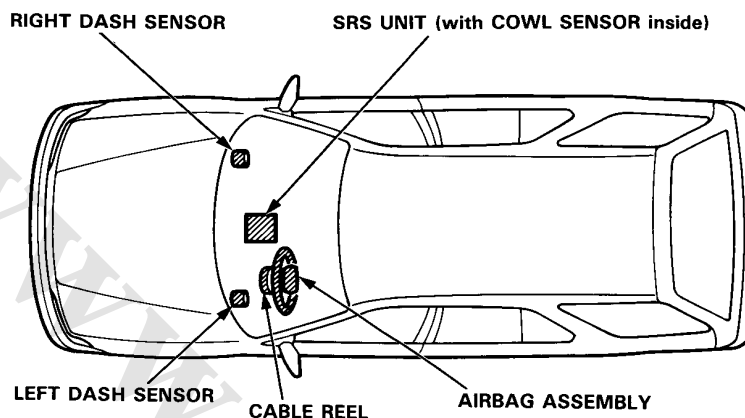


Operation

As shown in the diagram below, the left and right dash sensors are connected in parallel. This parallel set of sensors are connected in series with the airbag inflator circuit and the car battery. In addition, a back-up power circuit is connected in parallel with the car battery. The back-up power circuit and the cowl sensor are located inside the SRS unit.

For the SRS to operate:

- (1) The cowl sensor and one or both dash sensors must activate.
- (2) Electrical energy is supplied to the airbag inflator by the battery, or the back-up power circuit if the battery voltage is too low.
- (3) The airbag deploys.

It takes about 0.1 seconds from the beginning of the airbag deployment until it is completely deflated (frontal collision against a fixed wall at a speed of 50 km/h [30 mph])

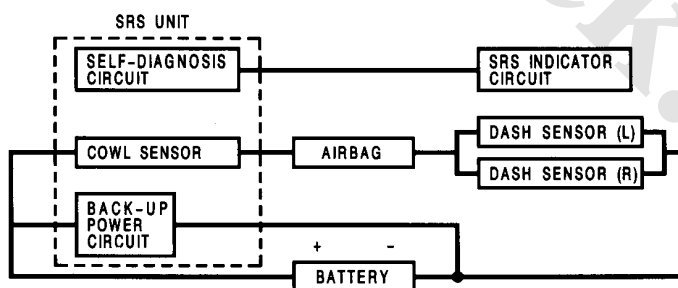


Self-diagnosis system

A self-diagnosis circuit is built into the SRS unit; when the ignition switch is turned ON, the SRS indicator light comes on and goes off after about 6 seconds if the system is operating normally. If the light does not come on, or does not go off after 6 seconds, or if it comes on while driving, this indicates an abnormality in the system. It must be inspected and repaired as soon as possible.

Supplemental Restraint System (TYPE I)

Circuit Diagram

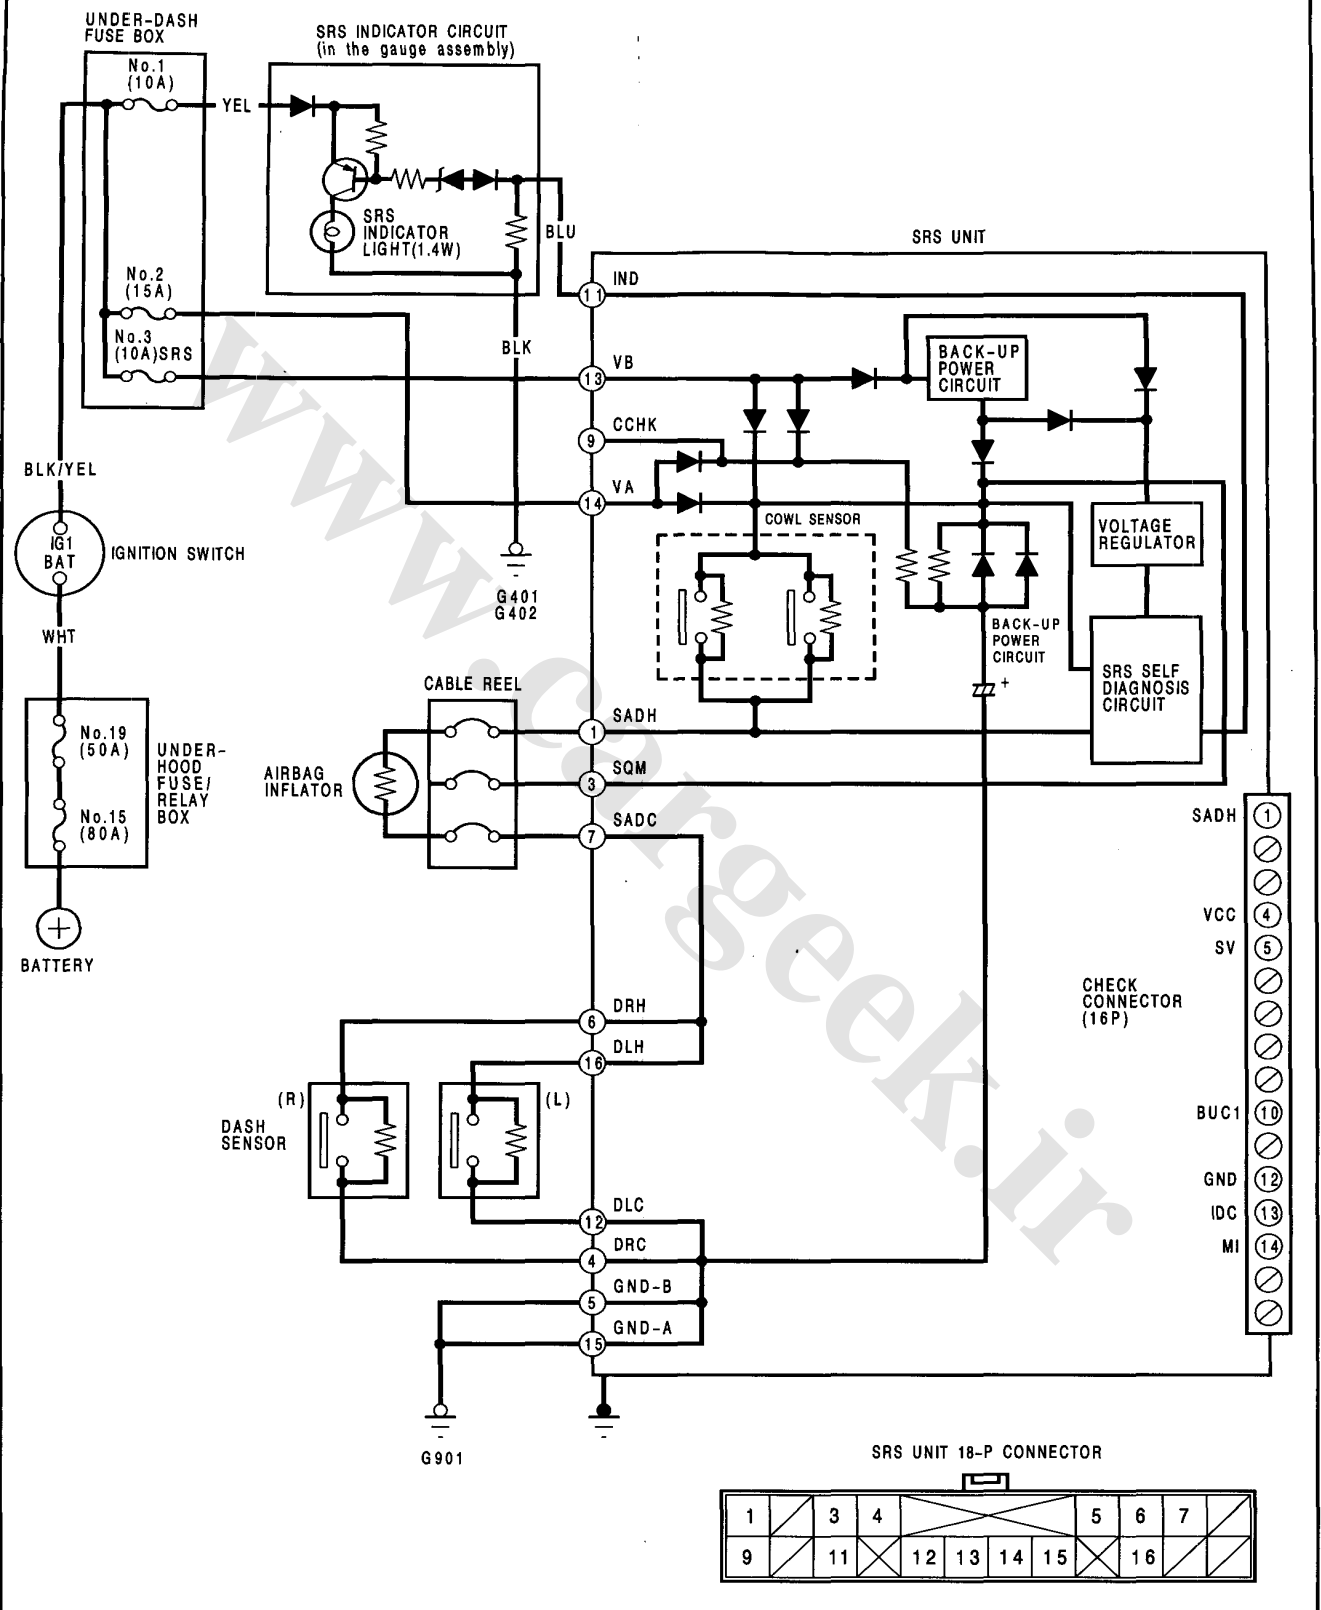

SRS UNIT 18-P CONNECTOR

1	3	4		5	6	7
9	11	12	13	14	15	16




Wiring Locations

CAUTION: Make sure all SRS ground locations are clean and grounds are securely attached.

NOTE:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- RHD type is symmetrical to LHD type.

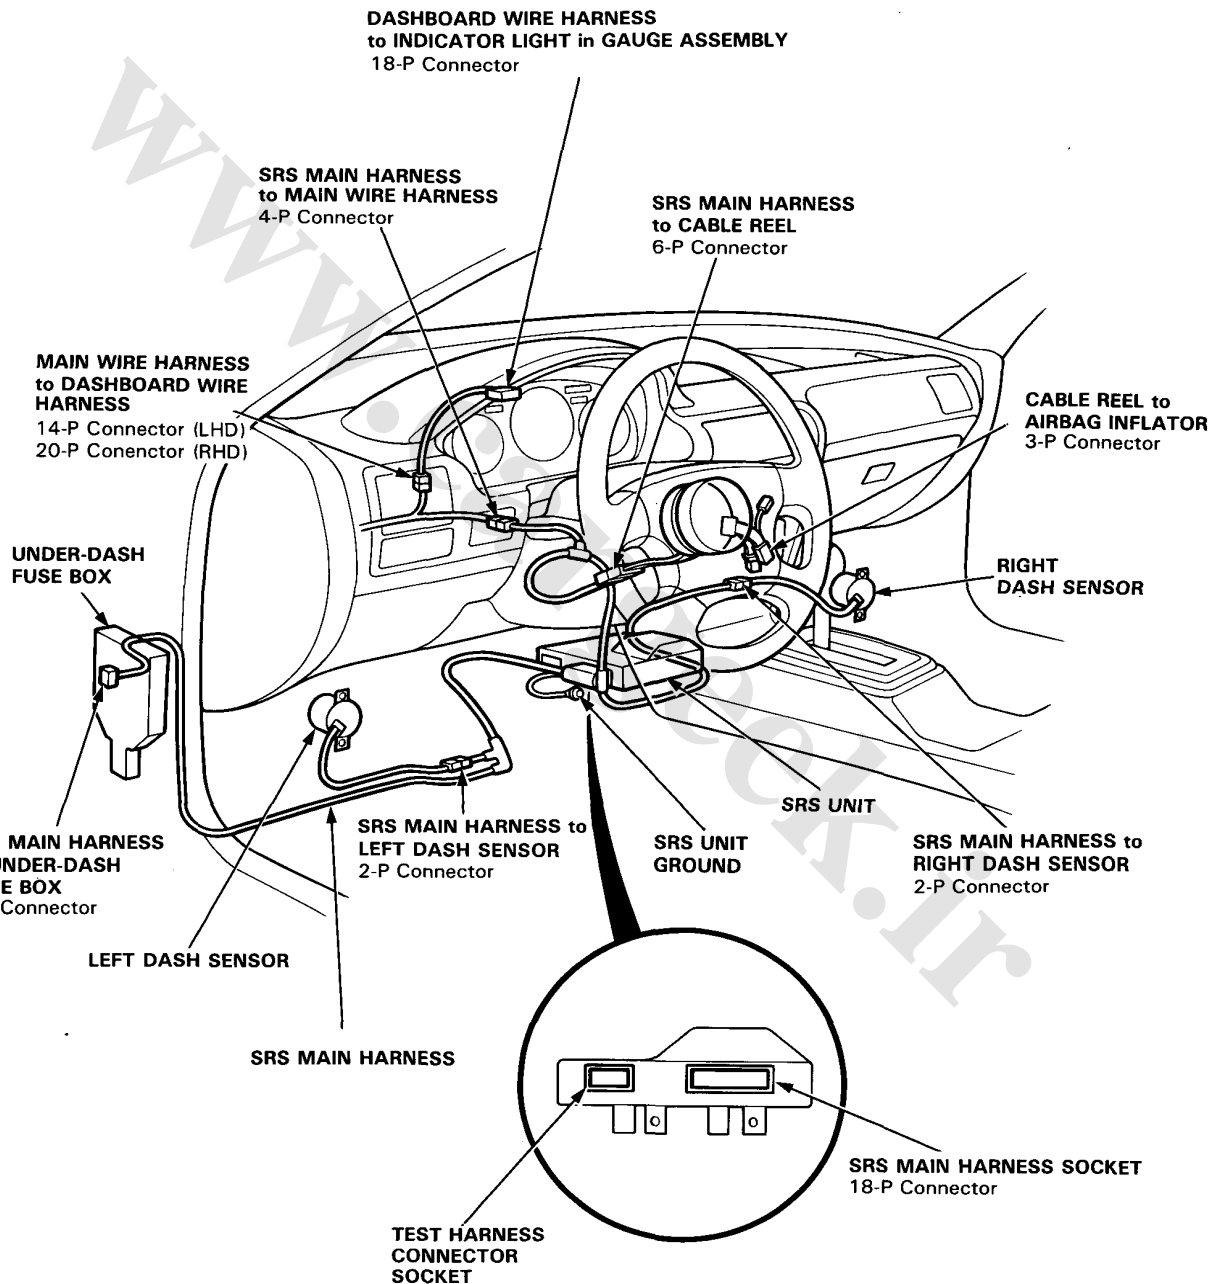


Supplemental Restraint System (Type I)

General Precautions

- Carefully inspect any SRS part before you install it. Do not install any part that shows signs of being dropped or improperly handled, such as dents, cracks or deformation:

- Airbag assembly.
- Dash sensors.
- Cable reel.
- SRS unit.

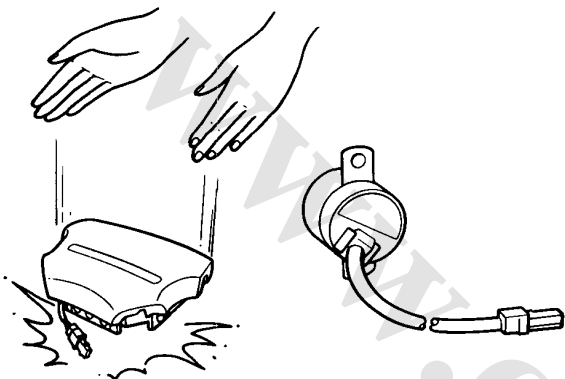


- Use only a digital circuit tester to check the system. Using an analog circuit tester may cause an accidental deployment and possible injury.
- Do not install used SRS parts from another car. When making SRS repairs, use only new parts.
- Except when performing electrical inspections, always disconnect both the negative cable and positive cable at the battery before beginning work.
- Replacement of the combination light and wiper/washer switches and cruise control switch can be done without removing the steering wheel:
 - Combination light and wiper/washer switch replacement.
 - Cruise control switch replacement.

CAUTION: Take extra care when painting or doing body work on any part of the dashboard lower panel.

Avoid direct exposure of the sensors or wiring to heat guns, welding, or spraying equipment.


Airbag Handling and Storage

Do not try to disassemble the airbag assembly. If it has no serviceable parts. Once an airbag has been operated (deployed), it cannot be repaired or reused.

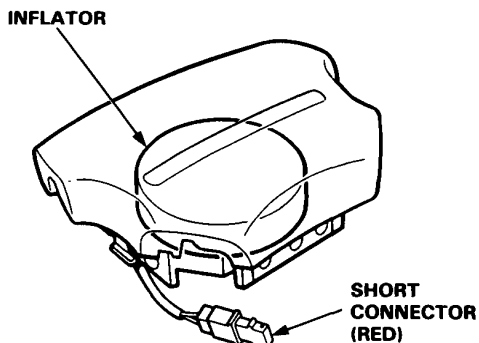

For temporary storage of the airbag assembly during service, please observe the following precautions:

- Store the removed airbag assembly with the pad surface up.

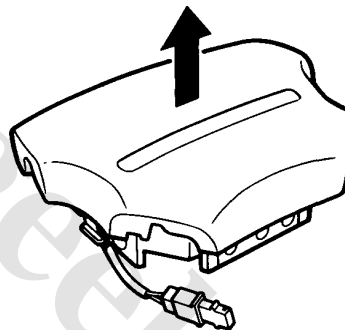

WARNING If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

- Store the removed airbag assembly on a secure flat surface away from any high heat source (exceeding 100°C/212°F) and free of any oil, grease, detergent or water.


CAUTION: Improper handling or storage can internally damage the airbag assembly, making it inoperative.

If you suspect the airbag assembly has been damaged, install a new unit and refer to the Deployment/Disposal Procedures for disposing of the damaged airbag.

Steering-related Precautions


● Steering Wheel and Cable Reel Alignment:

NOTE: To avoid misalignment of the steering wheel or airbag on reassembly, make sure the wheels are turned straight ahead before removing the steering wheel.

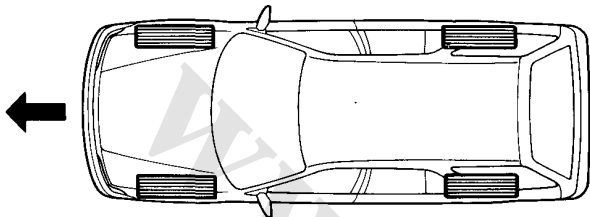

Rotate the cable reel clockwise until it stops. Then rotate it counterclockwise (approximately two turns) until:


- The yellow gear tooth lines up with the mark on the cover.
- The arrow on the cable reel label points straight up.

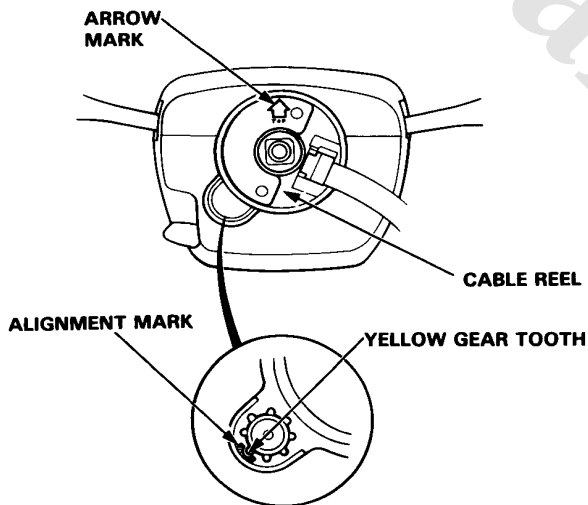

● Steering Column Removal:

CAUTION:

- Before removing the steering column, first disconnect the connector between the cable reel and the SRS main harness.
- If the steering column is going to be removed without dismounting the steering wheel, lock the steering by turning the ignition key to 0-LOCK position or remove the key from the ignition.

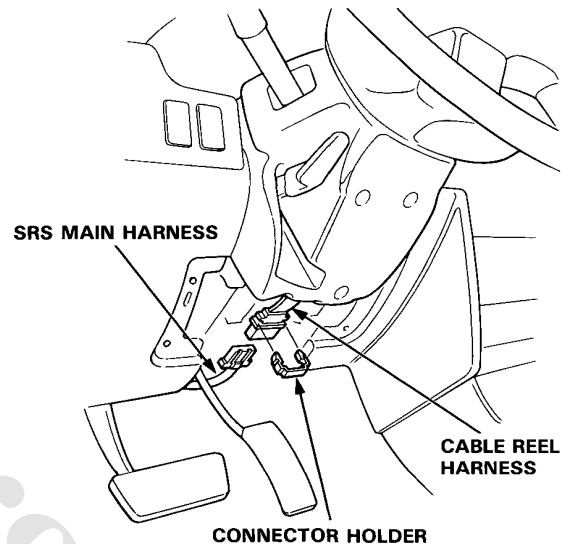

● Steering Wheel:

Do not replace the original steering wheel with any other design, since it will make it impossible to properly install the airbag (only use genuine HONDA replacement parts).


After reassembly confirm that the wheels are still turned straight ahead, and that the steering wheel spoke angle is correct. If minor spoke angle adjustment is necessary, do so only by adjustment of the tie-rods, not by removing and repositioning the steering wheel.

Supplemental Restraint System (Type I)


Sensor Inspection

⚠ WARNING

- Disconnect both the negative and positive battery cables.
- Install the short connector before working around the dashboard lower panel or the SRS sensors.
- After any degree of frontal body damage, inspect both dash sensors. Replace a sensor if it is dented, cracked, or deformed.

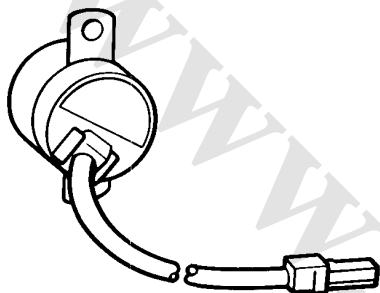


- Be sure the sensors are installed securely.

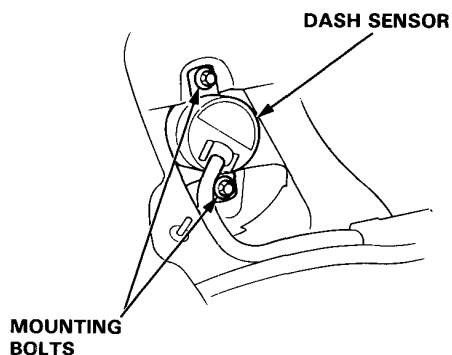


Wiring related Precautions

- Never attempt to modify, splice or repair SRS wiring.

NOTE: SRS wiring can be identified by special yellow outer protective covering.

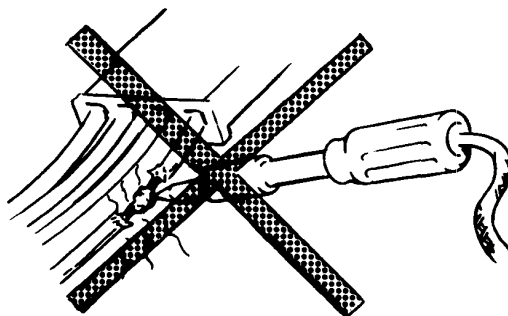

- Be sure to install the harness wires so that they are not pinched or interfering with other car parts.

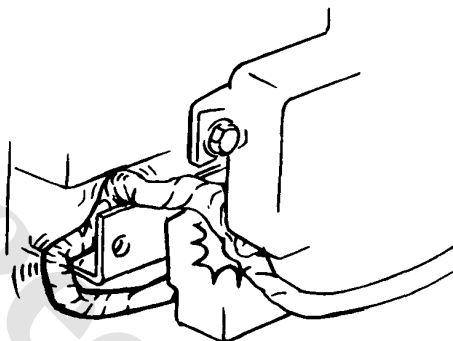


- Make sure all SRS ground locations are clean and grounds are securely fastened for optimum metal-to-metal contact. Poor grounding can cause intermittent problems that are difficult to diagnose.



- Install short connectors as follows whenever you are working near SRS wiring or components.

⚠ WARNING To avoid accidental deployment and possible injury, always install the protective short connector on the airbag connector before working near any SRS wiring.

1. Disconnect the battery negative cable, then disconnect the positive cable.
2. Remove the access panel from the steering wheel, then remove the red short connector from the panel.

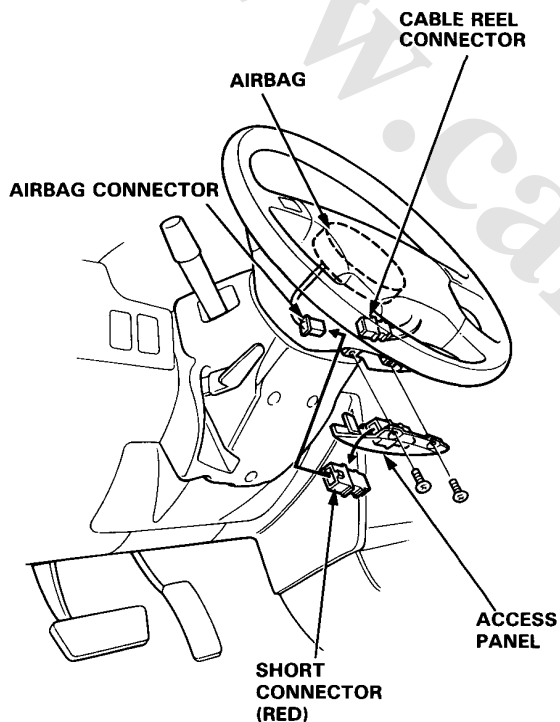


3. Disconnect the connector between the airbag and cable reel, then install the short connector on the airbag side of the connector.

- If you ever remove the under-dash fuse box or the SRS main harness, disconnect the SRS connector from the fuse box.

CAUTION: Avoid breaking the connector; it's double-locked.

1. First lift the connector lid with a thin screwdriver, then press the connector tab down and pull the connector out.

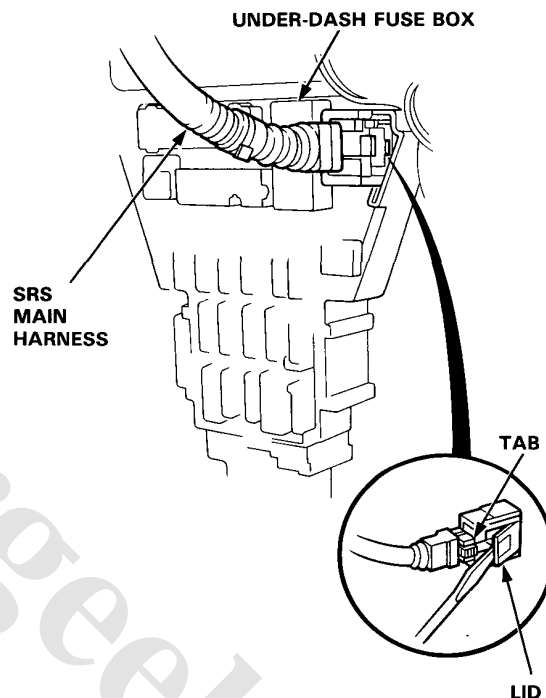


2. To reinstall the connector, push it into position until it clicks, then close its lid.

Supplemental Restraint System (Type I)

Troubleshooting

Self-diagnosis Function

The SRS unit includes a self-diagnosis function. If there is a failure in the sensors, SRS unit, inflator, or their circuits, the SRS light in the instrument panel goes ON.

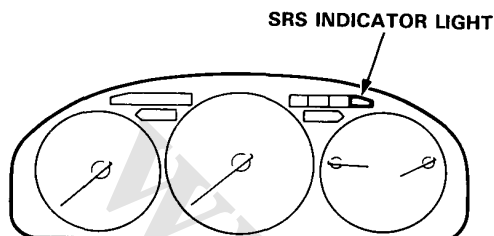

As a system check, the SRS light also comes on when the ignition is first turned to the II position. If the light goes off after approximately 6 seconds, the system is OK.

If the SRS light remains on (or fails to come on in the system check mode), one of the SRS components (or the wiring/connectors in-between) is faulty.

Troubleshooting Precautions

- Always use the test harness. Do not use test probes directly on component connector terminals or wires; you may damage them or the control unit.
- When connecting any of the test harnesses to the system, push the connectors straight-in; do not bend the connector terminals.
- Before disconnecting any part of the SRS wire harness, install the short connector (RED) on the airbag.

SRS Indicator Light Troubleshooting

Possible conditions:


1. SRS light does not come on at all — see page 16-108.
2. SRS light stays on constantly — see page 16-112.
3. SRS light comes on in combination with a failure of another electrical system (brake system, check engine light etc.). Check for damage/corrosion at the under-dash fuse box connector.

NOTE:

- Before starting the applicable troubleshooting, check the condition of all SRS connectors and ground points.
- If the fault is not found after completing the applicable troubleshooting, substitute a known-good SRS unit and check whether the light indication goes away. If it does, the original SRS unit must be faulty; replace it.

Short Connector Installation

1. Disconnect the battery negative cable, then the positive cable.
2. Remove the access panel from the steering wheel, then remove the short connector (RED).

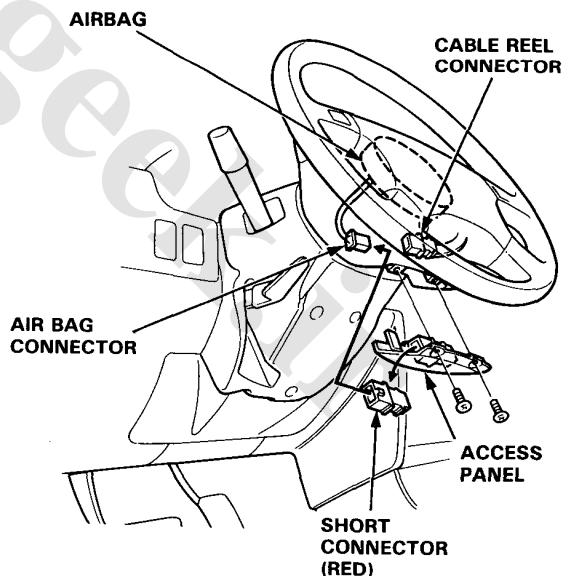


3. Disconnect the connector between the airbag and cable reel, then connect the short connector (RED) to the airbag.




Test Harnesses and Attachment Points


Test Harness A

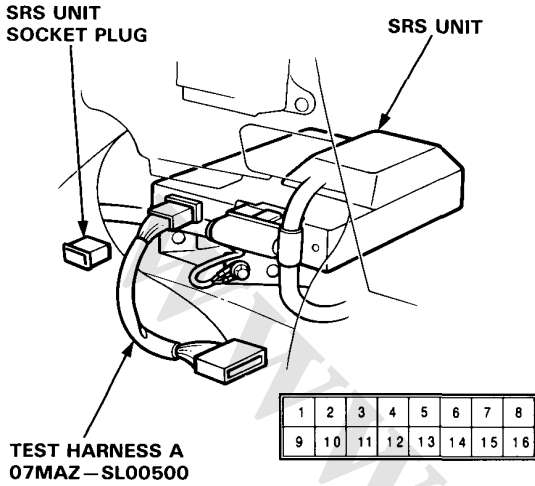


Test Harness C

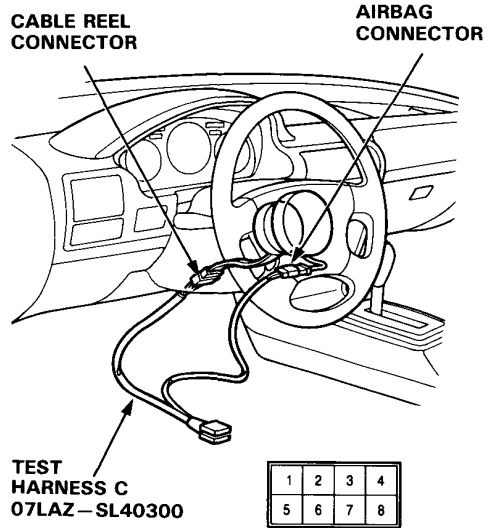

Test Harness B

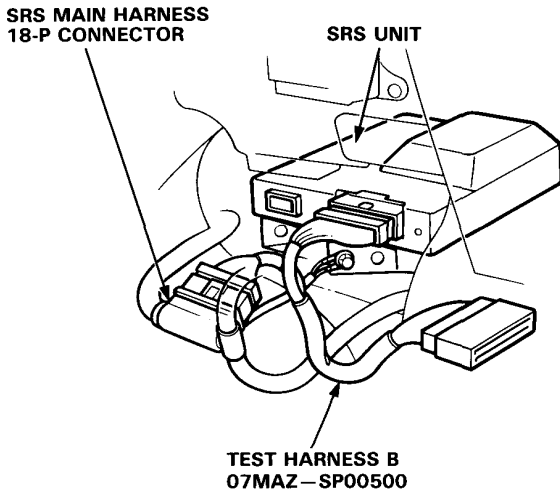

Test Harness D

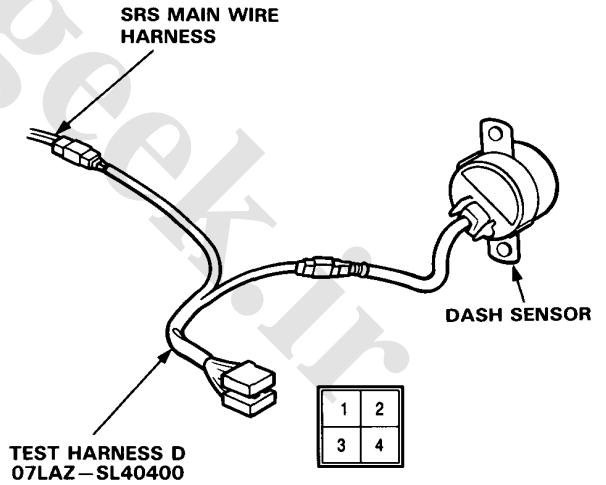

A-SIDE (SRS UNIT SIDE)

A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
B	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18

B-SIDE (WIRE HARNESS SIDE)

Supplemental Restraint System (Type I)

Troubleshooting

The SRS Indicator Light Does Not Go On

CAUTION: Use only a digital circuit tester to check the system.

Disconnect the battery negative cable and then the positive cable.
Install the short connector on the airbag (see page 16-105).

Connect the battery positive cable and then the negative cable.

Turn the ignition switch ON.

Do any other indicator lights (brake system light etc.) come on (in the dash panel)?

Turn the ignition switch OFF.

Disconnect the SRS main harness 18-P connector from the SRS unit.

Turn the ignition switch ON.

Does the SRS indicator light come on?


Turn the ignition switch OFF.

Inspect No. 1 fuse

Is No. 1 fuse OK?

Replace fuse.

Repair open in dashboard wire harness between the No.1 fuse and gauge assembly.

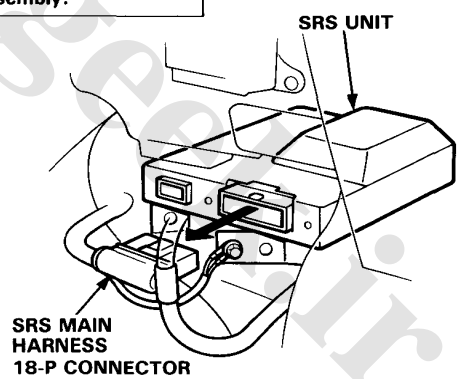

The SRS unit is faulty.


(To page 16-109)



(From page 16-108)

Disconnect the SRS main harness 4-P connector from the main wire harness.

Turn the ignition switch ON.

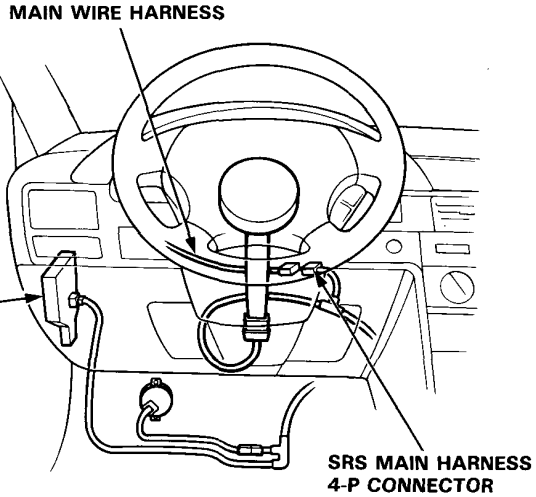

Is SRS indicator light ON?

YES — The SRS main harness is faulty.

NO

Turn the ignition switch OFF.

Remove the gauge assembly, then inspect the SRS indicator light bulb.

Is the SRS indicator light bulb OK?


NO — Replace the indicator light bulb.

YES


Connect a voltmeter between the No. 15 terminal of the 18-P connector and body ground.

Turn the ignition switch ON.

Measure the voltage between the No. 15 terminal and body ground.

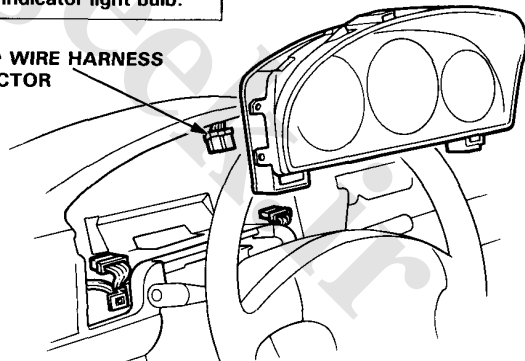

View from terminal side



(To page 16-110)

(cont'd)

Supplemental Restraint System (Type I)

Troubleshooting (cont'd)

(From page 16-109)

Is there less than 8.5 V with ignition switch ON?

NO

Short in the BLU wire of the dashboard wire harness. Replace the dashboard wire harness.

DASHBOARD WIRE HARNESS 18-P CONNECTOR



YES

Turn the ignition switch OFF.

Connect the voltmeter between the No. 13 terminal (+) and the No. 2 terminal (-) of the dashboard wire harness 18-P connector.

Turn the ignition switch ON.

Measure the voltage between the No. 13 and No. 2 terminals.

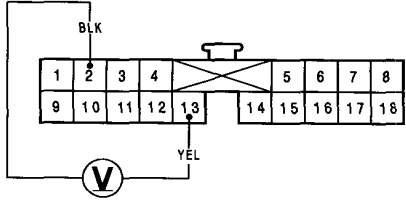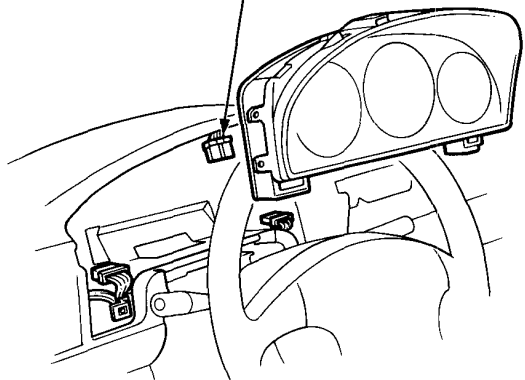

View from terminal side

Is there battery voltage?

NO

Check for continuity between the No. 2 terminal and body ground.

YES

Turn the ignition switch OFF.

Does continuity exist?

NO

Repair open in the BLK wire (No. 2 terminal) between the gauge assembly and body ground or look for a poor ground (G401, 402).

YES

Repair open in the YEL wire (No. 13 terminal) of the dashboard wire harness between the gauge assembly and the No. 1 fuse.

(To page 16-111)




(From page 16-110)


Reconnect each connector to the gauge assembly and SRS unit then connect Test Harness A to the SRS unit.

Measure the voltage between the No. 13 terminal and body ground for 6 seconds after ignition is first turned on.

NOTE: Make sure you reinstall the plug in the SRS unit socket after testing (DE only).

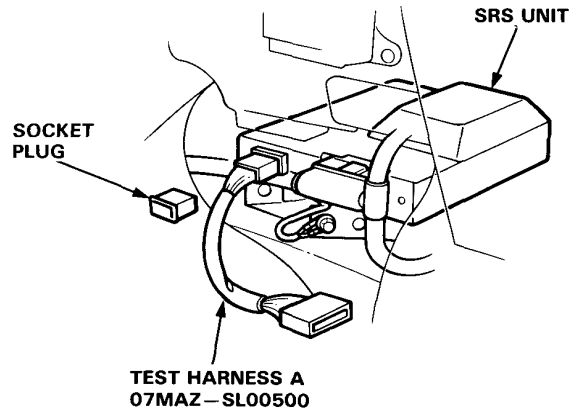

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

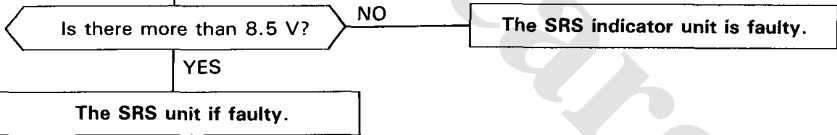

(cont'd)

Supplemental Restraint System (Type I)


Troubleshooting (cont'd)

SRS Indicator Light Stays on Continuously


1. Make a photocopy of next page.
2. Connect test harness A to the SRS unit as shown.
3. Turn the ignition switch ON.
 - Voltages in the charts assume the car's "battery voltage" is about 12 volts. Less than 12 volts will result in different or possibly false readings.
 - Do not disconnect the airbag from the circuit when checking SRS unit voltages.

NOTE: There are two kinds of SRS units which do not differ in their functions and may be replaced with each other. However, as they don't have the same voltages, be sure to refer to the right chart.


NEC: (77940-SM4-N81-M1, 77940-SM4-A81)

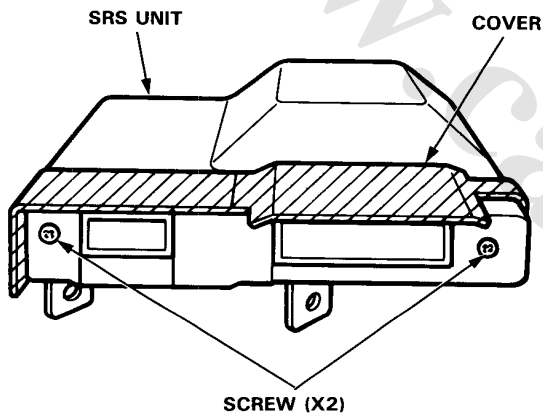

DE: (77940-SM5-A81)

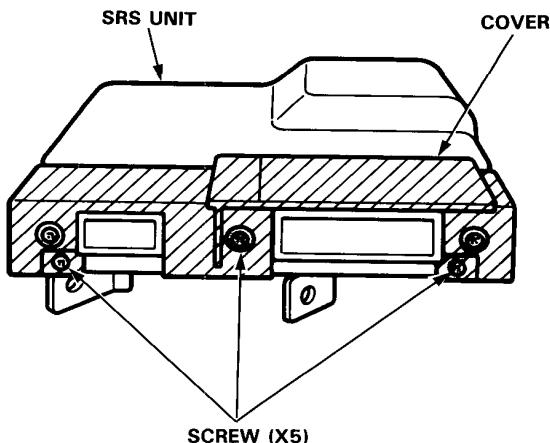

4. First, check for voltage between Test Connector Terminal No. 12 and ground.
 - If voltage is indicated, there is a poor ground (see page 16-121).
 - Continue with checking all the other terminals if no voltage is indicated.
5. Record your voltage readings, for each terminal, in the row of blank boxes near the top of the chart.
6. Compare each reading with the voltage ranges listed in the column below it. If the reading is within a range, circle that range.
 - If you circled all the Failure Mode ranges across any row, check the car for the Probable Failure Mode listed at the end of the row. (Refer to the letter for that Mode on the following pages).
 - If you did not circle all the ranges across any row, replace the SRS unit with a known-good unit, and retest.
 - If all your voltage readings are now Normal, replace the SRS unit.
 - If your voltage readings are still not Normal but they don't fit within a complete row of Failure Mode ranges, check the condition of the terminals in each of the SRS connectors shown in the system diagram on page 16-101.

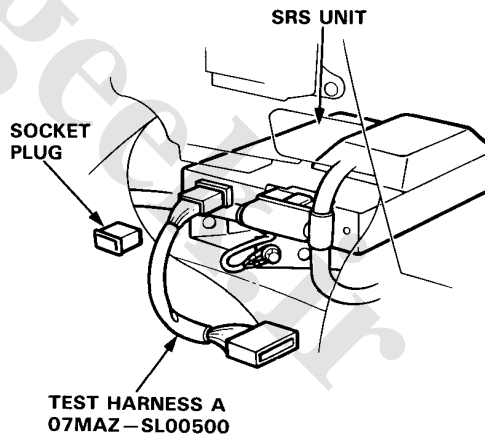

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16



NEC: (77940-SM4-N81, 77940-SM4-A81)

Test Connector Terminal	1 SADH	-	-	4 VCC	5 SV	-	-	-	-	10 BUC1	-	12 GND	13 IDC	14 M1	-	-	Probable Failure Mode	
Normal Voltage	3.5 -5.2	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	8.5 -13.0	7.5 -11	-	-		
Your Voltage Reading		-	-			-	-	-	-		-				-	-		
Failure Mode Voltage	0	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	7.5 -11	-	-	Open in cowl sensor or short in dash sensor.	
	7.5 -11	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	7.5 -11	-	-	Short in cowl sensor or open in both dash sensors.	
	5.3 -7.2	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	7.5 -11	-	-	C Open in one dash sensor.	
	7.5 -11	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	7.5 -11	-	-	D Open in airbag inflator or cable reel.	
	3.5 -5.2	-	-	0	0	-	-	-	-	8.5 -14.5	-	0	2.0 -8.5	6 -11	-	-	E Blown SRS fuse (No. 3) or open in the wire.	
	3.5 -7.2	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	0 (8.5-13.0)	7.5 -11	-	-	F Short (or open) in SRS indicator wire harness.	

DE: (77940-SM5-A81)

Test Connector Terminal	1 SADH	-	-	4 VCC	5 SV	-	-	-	-	10 BUC1	-	12 GND	13 IDC	14 M1	-	-	Probable Failure Mode	
Normal Voltage	5.1 -7.0	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	8.5 -13.0	10.5 -14.5	-	-		
Your Voltage Reading		-	-			-	-	-	-		-				-	-		
Failure Mode Voltage	0	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	10.5 -14.5	-	-	Open in cowl sensor or short in dash sensor.	
	10.5 -14.5	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	10.5 -14.5	-	-	Short in cowl sensor or open in both dash sensors.	
	7.1 -9.5	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	10.5 -14.5	-	-	C Open in one dash sensor.	
	10.5 -14.5	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	2.0 -8.5	10.5 -14.5	-	-	D Open in airbag inflator or cable reel.	
	4.0 -7.0	-	-	0	0	-	-	-	-	8.5 -14.5	-	0	2.0 -8.5	8.5 -14.5	-	-	E Blown SRS fuse (No. 3) or open in the wire.	
	5.1 -7.0	-	-	4.5 -5.5	12.0 -14.0	-	-	-	-	10.5 -14.5	-	0	0 (8.5-13.0)	10.5 -14.5	-	-	F Short (or open) in SRS indicator wire harness.	


(cont'd)

Supplemental Restraint System (Type I)


Troubleshooting (cont'd)

Mode A: Open in cowl sensor, or short in dash sensor.

1. Disconnect the battery negative cable and then the positive cable. Install the short connector (RED) on the airbag (see page 16-105).
2. Connect Test Harness B between the SRS unit and SRS main harness 18-P connector.

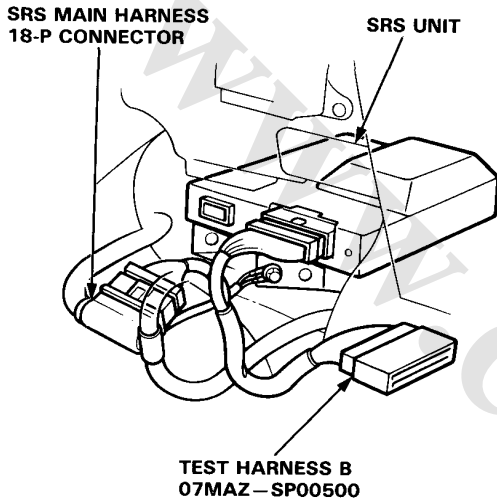


3. Reconnect the battery cables, then check the resistance between the left dash sensor terminals B12 and B16, and between the right dash sensor terminals B4 and B6.

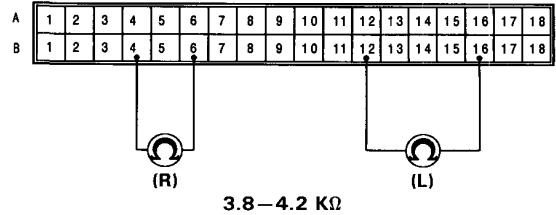

- If resistance is 3.8–4.2 KΩ for either sensor, go to step 4.
- If resistance is less than 3.8–4.2 KΩ for either sensor, go to step 5.


4. Check continuity between body ground and each terminal of both dash sensors.

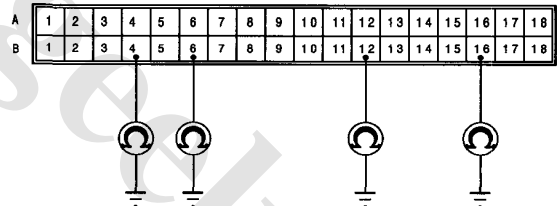

- If there is no continuity, the SRS unit is faulty. Substitute a known-good SRS unit and recheck the voltages according to the chart on page 16-113.
- If there is continuity at any of the terminals, go to step 6.




5. Connect Test Harness D between the dash sensor and the SRS main harness 2-P connector. Check the resistance between the No. 1 terminal and No. 2 terminal.

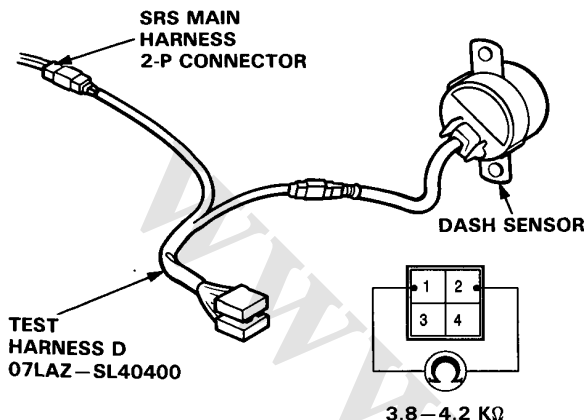

NOTE: The left and right sensors cannot be checked at the same time.


- If resistance is 3.8–4.2 KΩ, replace the SRS main harness and recheck the voltages according to the chart on page 16-113.
 - If resistance is less than 3.8 – 4.2 KΩ, the respective dash sensor is faulty. Replace the dash sensor and recheck the voltages according to the chart on page 16-113.
6. Connect Test Harness D between the dash sensor and SRS main harness 2-P connector. Check continuity between the No. 1 terminal and body ground, and between the No. 2 terminal and body ground.

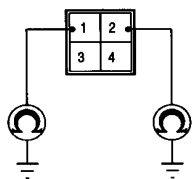


- If there is continuity, the dash sensor is faulty. Replace it and recheck the voltages according to the chart on page 16-113.
- If there is no continuity, replace the SRS main harness and recheck the voltages according to the chart on page 16-113.

Mode B: Short cowl sensor, or open in dash sensor.
Mode C: Open in one dash sensor.

1. Disconnect the battery negative cable and then the positive cable. Install the short connector (RED) on the airbag (see page 16-105).
2. Connect Test Harness B between the SRS unit and SRS main harness 18-P connector.

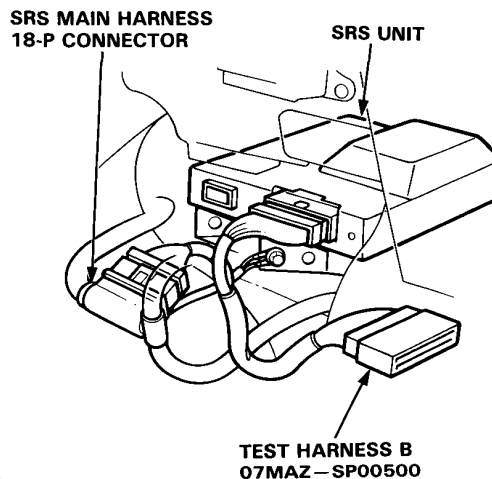

3. Check the resistance between terminals B1 and B7.
 - If the resistance is more than 0.2 KΩ, go to mode D troubleshooting.
 - If the resistance is less than 0,2 KΩ, check the resistance between the left dash sensor terminals B12 and B16, and between the right dash sensor terminals B4 and B6.

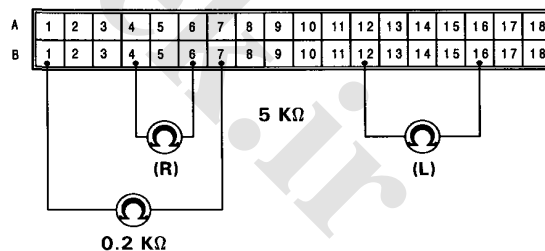


- If resistance is more than 5 KΩ, go to step 4.
- If resistance is less than 5 KΩ, the SRS unit is faulty. Substitute a known-good SRS unit and recheck the voltages according to the chart on page 16-113.

(cont'd)

Supplemental Restraint System (Type I)

Troubleshooting (cont'd)


4. Connect Test Harness D between the dash sensor and the SRS main harness 2-P connector. Check the resistance between the No. 1 terminal and No. 2 terminal.

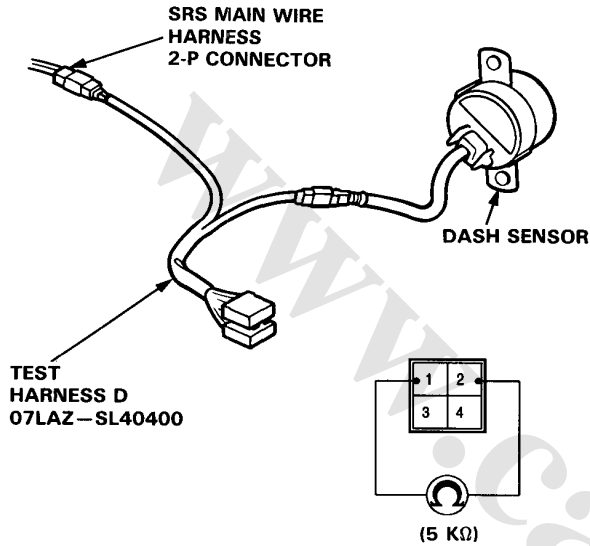


- If resistance is more than 5 KΩ, the dash sensor is faulty. Replace it and recheck the voltages according to the chart on page 16-113.
- If resistance is less than 5 KΩ, the SRS main harness is faulty. Replace the SRS main harness and recheck the voltages according to the chart on page 16-113.

Mode D: Open in airbag inflator or cable reel.

1. Disconnect the battery negative cable and then the positive cable.
2. Connect Test Harness B between the SRS unit and SRS main harness 18-P connector.

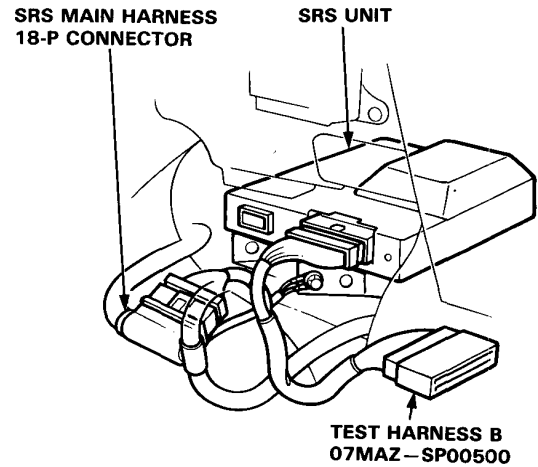


3. Check the resistance between terminals B4 and B6, and between terminals B12 and B16.
 - If the resistance is more than 5 KΩ, go to mode B troubleshooting.
 - If the resistance is less than 5 KΩ, measure the resistance between the B1 and the B7 terminals.

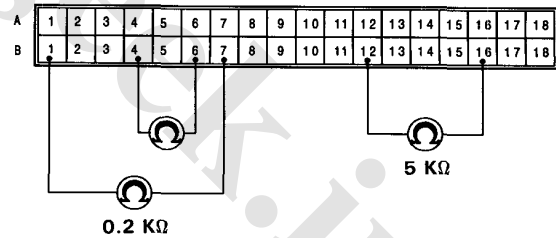


- If resistance is more than 0.2 KΩ, go to step 4.
- If resistance is less than 0.2 KΩ, the SRS unit is faulty. Substitute a known-good SRS unit and recheck the voltages according to the chart on page 16-113.



4. Disconnect the cable reel harness 6-P connector from the SRS main harness, then connect Test Harness C only to the cable reel harness side of the 6-P connector.

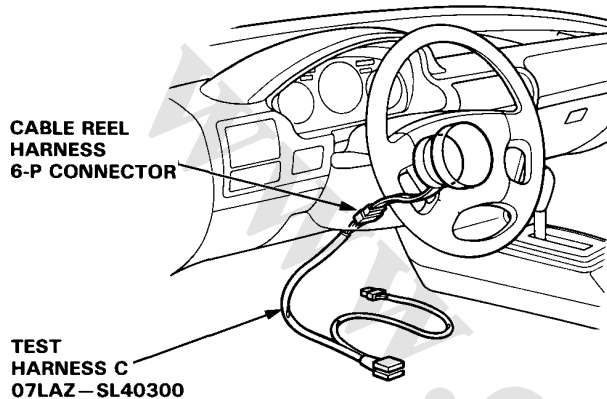


5. Measure the resistance between the No. 4 terminal and the No. 5 terminal.

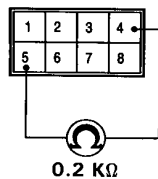


- If resistance is more than 0.2 KΩ, go to step 5.
- If resistance is less than 0.2 KΩ, the SRS main harness is faulty. Replace the SRS main harness and recheck the voltages according to the chart on page 23-305.

6. Disconnect the airbag 3-P connector from the cable reel harness, then connect Test Harness C to the airbag 3-P connector.

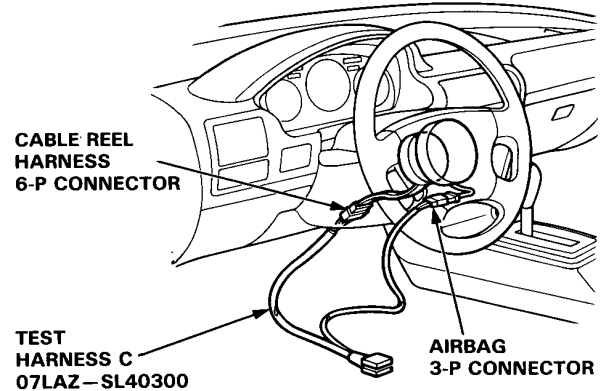

7. Measure the resistance between the No. 7 terminal and the No. 8 terminal.

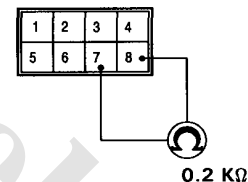

- If resistance is more than 0.2 KΩ, the inflator is faulty. Replace the airbag assembly and recheck the voltages according to the chart on page 16-113.
- If resistance is less than 0.2 KΩ, the cable reel is faulty. Replace the cable reel and recheck the voltages according to the chart on page 16-113.

(cont'd)

Supplemental Restraint System (Type I)


Troubleshooting (cont'd)

Mode E: Blown SRS No. 3 fuse, or open in the wire.


1. Check the SRS No.3 (10 A) fuse in the under-dash fuse box. If it's OK, go on to step 2. If it's blown, replace it with a new 10 A fuse, then turn the ignition switch ON:

- If fuse doesn't blow, go on to step 2.
- If the fuse blows, troubleshoot as necessary to find the short.

2. Disconnect battery negative cable, then the positive cable. Install the short connector (RED) on the airbag (see page 16-105).
3. Connect Test Harness B between the SRS unit and SRS main harness 18-P connector.

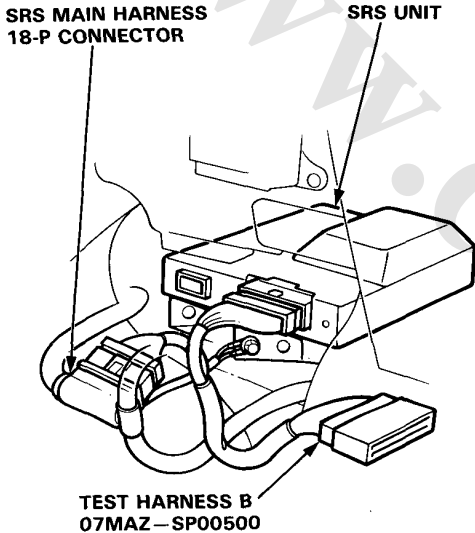

4. Reconnect the positive and negative cables to the battery.
5. Measure the voltage between the B13 terminal and body ground with the ignition switch ON.

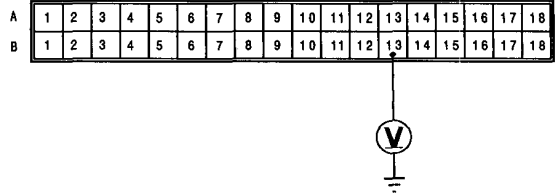


- If there is battery voltage, the SRS unit is faulty. Replace it and recheck the voltages according to the chart on page 16-113.
- If less than battery voltage, the SRS main harness is faulty. Replace it and recheck the voltages according to the chart on page 16-113.




Mode F: Short or open in SRS indicator wire harness.

1. Disconnect the SRS main harness 4-P connector from the main wire harness.

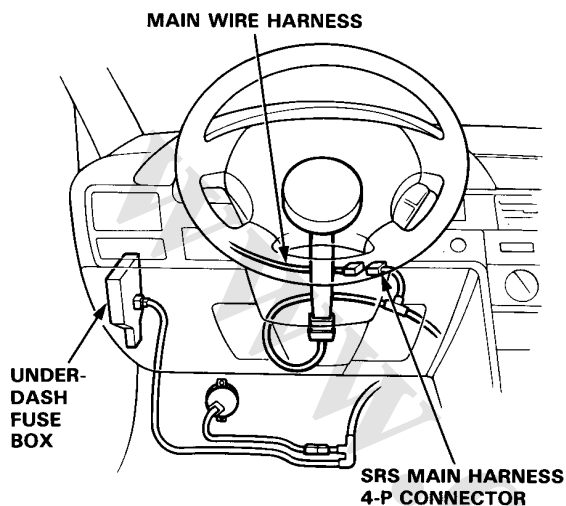


2. Measure the voltage between the No. 1 terminal and body ground on the SRS main harness 4-P connector side, with the ignition switch ON.

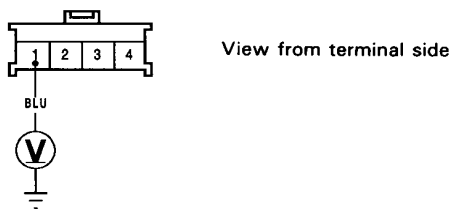

- If voltage is more than 8.5 V, go to step 8.
- If voltage is less than 8.5 V, go to step 3.

3. Disconnect the battery negative cable, then the positive cable. Install the short connector (RED) on the airbag (see page 16-105).
4. Reconnect the battery positive cable and negative cable.

5. Connect Test Harness B between the SRS unit and SRS main harness 18-P connector.

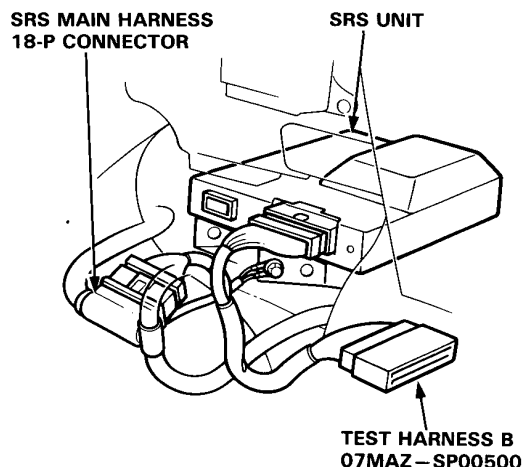

6. Check for continuity between the B11 terminal and body ground.

A	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
B	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18




- If there is continuity, the SRS main harness is shorted. Replace the SRS main wire harness and recheck the voltages according to the chart on page 16-113.
- If there is no continuity, go to step 7.

(cont'd)

Supplemental Restraint System (Type I)


Troubleshooting (cont'd)

7. Check for continuity between the B11 terminal of Test Harness B and the No. 1 terminal of the SRS main harness 4-P connector.

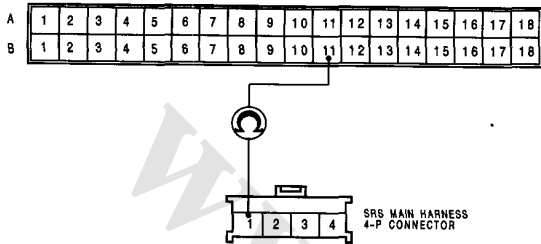


- If there is continuity, the SRS unit is faulty; Replace it and recheck the voltages according to the chart on page 16-113.
- If there is no continuity, there is an open in the SRS main harness. Replace the SRS main wire harness and recheck the voltages according to the chart on page 16-113.

8. Connect the SRS main harness 4-P connector to the main wire harness. Disconnect the dashboard wire harness 18-P connector from the gauge assembly.

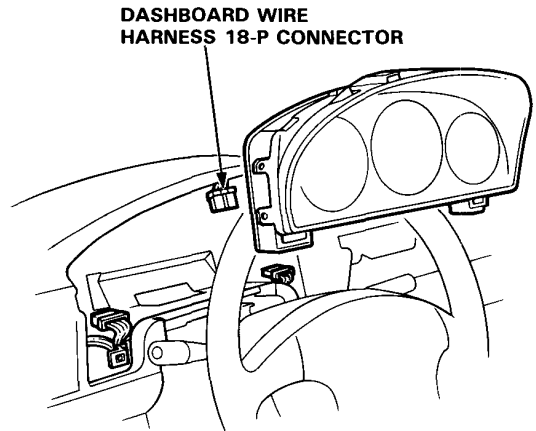

9. Measure the voltage between the No. 15 terminal and body ground with the ignition switch ON.

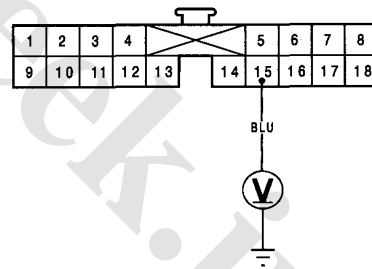


- If voltage is more than 8.5 V, the SRS indicator circuit is faulty (in the gauge assembly.) Replace the gauge assembly and recheck the voltages according to the chart on page 16-113.
- If voltage is less than 8.5 V, the dashboard wire harness (or the main wire harness) is faulty. Replace it and recheck the voltages according to the chart on page 16-113.




Poor ground at SRS unit or unit mounting bolts.

1. Disconnect the battery negative cable and then the positive cable. Install the short connector (RED) on the airbag. (see page 16-105).
2. Connect Test Harness B between the SRS unit and SRS main harness 18-P connector.

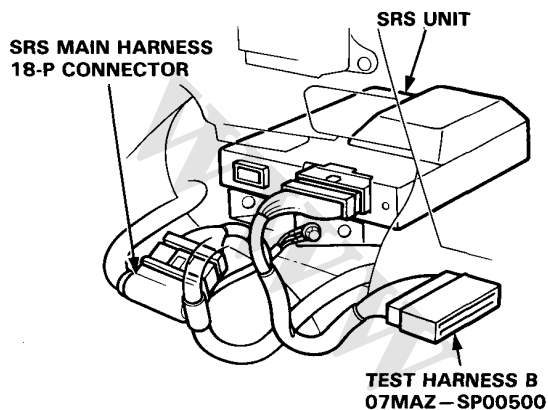

3. Check for continuity between the B5, B15 terminals and body ground.

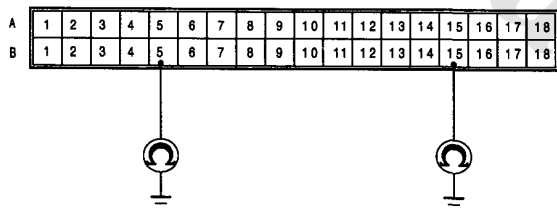

- If there is continuity, the SRS unit is faulty. Replace it and recheck the voltages according to the chart on page 16-113.
- If there is no continuity, there is an open in the SRS unit ground, the SRS unit component grounds, or the SRS main harness is faulty. Check the grounds (check the SRS unit ground wire and mounting bolts) and, if necessary, replace the SRS main harness. Recheck the voltages according to the chart on page 16-113.

Supplemental Restraint System (Type I)


Airbag Assembly Removal

⚠ WARNING Store a removed airbag assembly with the pad surface up, if the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:


- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Carefully inspect the airbag assembly before installing it. Do not install an airbag assembly that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.
- Always keep the short connector on the airbag connector when the harness is disconnected.
- Do not disassemble or tamper with the airbag assembly.

1. Disconnect the battery negative cable, and then the positive cable.
2. Remove the access panel from the steering wheel, then remove the short connector from the panel.

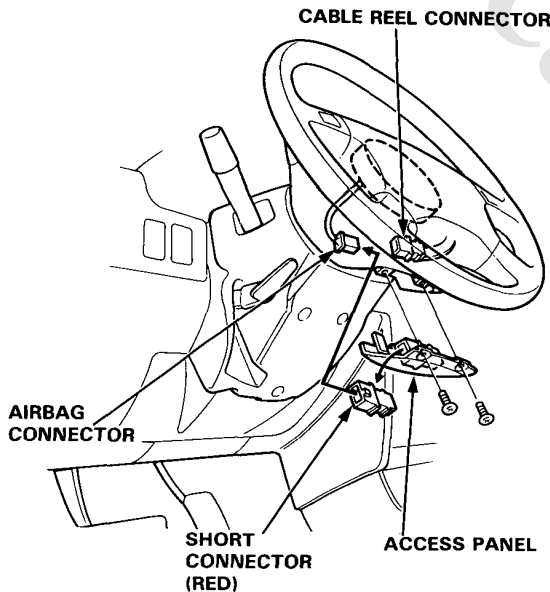

3. Disconnect the connector between the airbag and cable reel.
4. Install the short connector (RED) on the airbag.

5. Remove the 2 TORX® bolts using a TORX® T30 bit, then remove the airbag assembly.

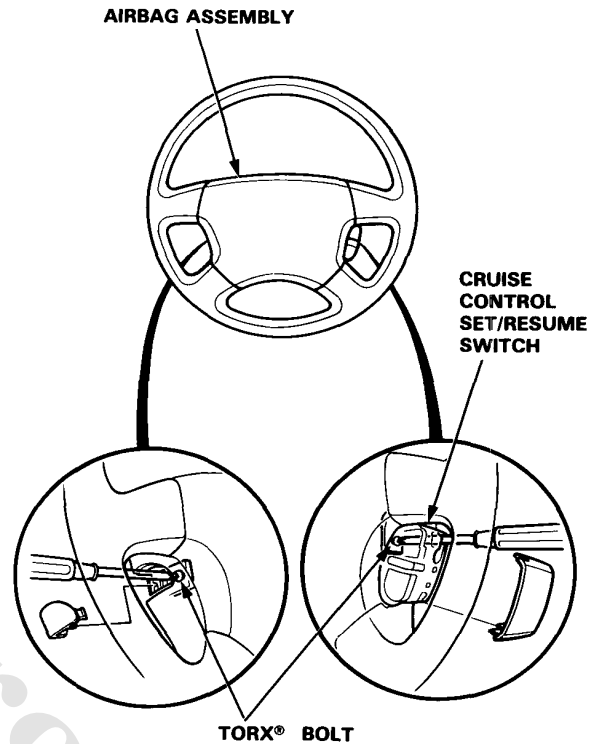

Supplemental Restraint System (Type I)


Airbag Assembly Removal

⚠ WARNING Store a removed airbag assembly with the pad surface up, if the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:


- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Carefully inspect the airbag assembly before installing it. Do not install an airbag assembly that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.
- Always keep the short connector on the airbag connector when the harness is disconnected.
- Do not disassemble or tamper with the airbag assembly.

1. Disconnect the battery negative cable, and then the positive cable.
2. Remove the access panel from the steering wheel, then remove the short connector from the panel.

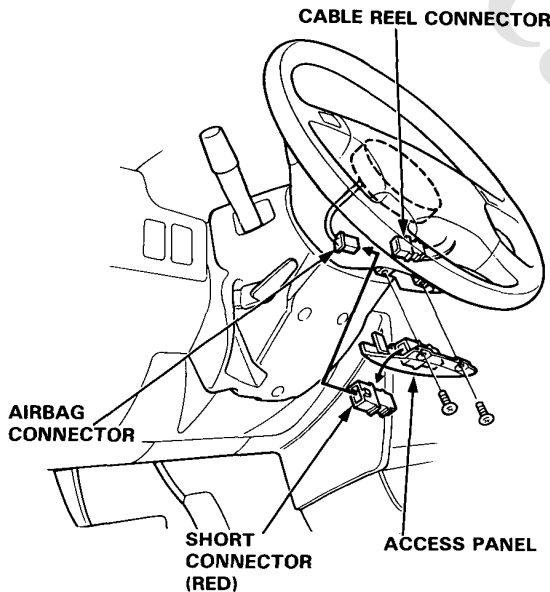

3. Disconnect the connector between the airbag and cable reel.
4. Install the short connector (RED) on the airbag.

5. Remove the 2 TORX® bolts using a TORX® T30 bit, then remove the airbag assembly.

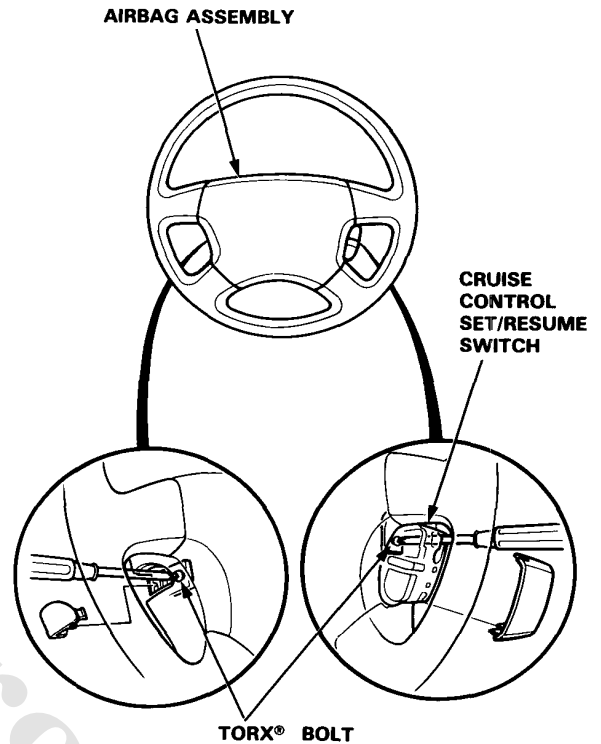


Airbag Assembly Installation


CAUTION:

- Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.
- Be sure the battery cables are disconnected.

1. Place the airbag assembly in the steering wheel, and secure it with new TORX® bolts.

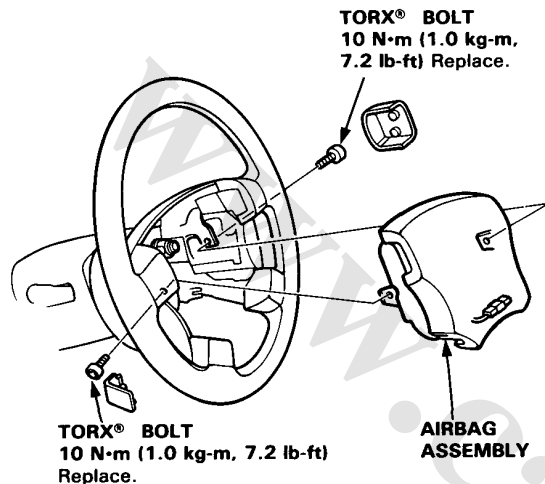

2. Remove the short connector from the airbag connector.

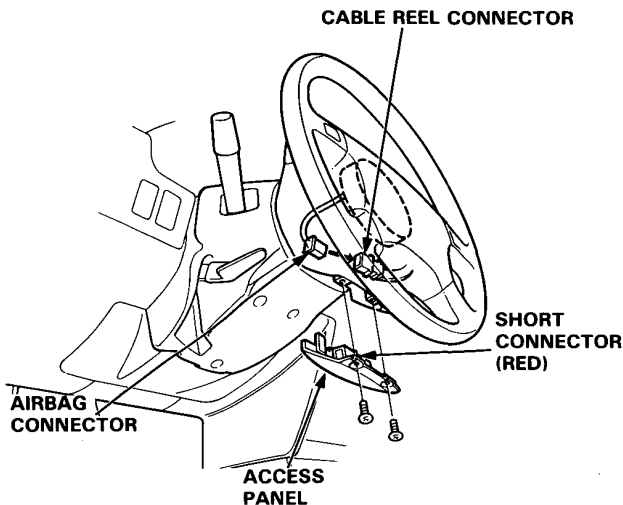

3. Reconnect the airbag connector to the cable reel connector. Attach the short connector to the access panel, then reinstall the panel on the steering wheel.

4. Reconnect the battery positive cable, then the negative cable.

5. After installing the airbag assembly, confirm proper system operation:

- Turn the ignition to II: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
- Make sure both horn buttons work.
- Take a test drive and make sure the cruise control set/resume switch works (with cruise control).

Supplemental Restraint System (Type I)

Airbag Disposal

Before scrapping any airbag (including one in a whole car to be scrapped) the airbag must be deployed. If the car is still within the warranty period, before deploying the airbag, the HONDA District Service Manager must give approval and/or special instructions.


Only after an airbag is already deployed (as the result of vehicle collision, for example), it can be scrapped. If the airbag appears intact (not deployed), it should be treated with extreme caution.

Developing the Airbag: In-car


NOTE: If an SRS car is to be entirely scrapped, its airbag should be deployed while still in the car. An airbag should not be considered a salvageable part and should never be installed in another car.

⚠ WARNING Confirm that the airbag assembly is securely mounted; otherwise, severe personal injury could result during deployment.

1. Disconnect both the negative cable and then the positive cable from the battery.
2. Confirm that the special tool is functioning properly by following the check procedure on the label of the tool set box or on page 16-125.
3. Remove the access panel, then disconnect the connector between the airbag and cable reel.

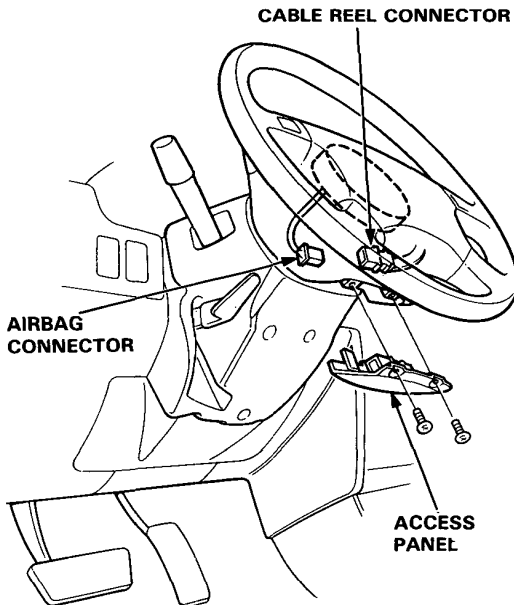

4. Cut off the airbag connector, then strip the wire ends and connect the special tool alligator clips to them. Place the special tool approximately 10 meters (30 ft) away from the airbag.

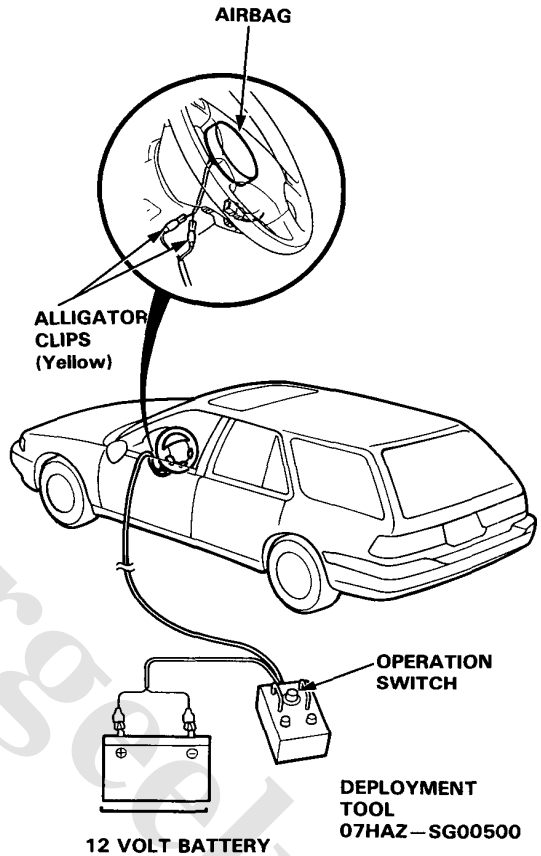



Airbag Disposal (cont'd)

5. Connect a 12 volt battery to the tool:
 - If the green light on the tool goes on, the airbag igniter circuit is defective and cannot deploy the bag. Go to Damaged Airbag Special Procedure.
 - If the red light on the tool goes on, the airbag is ready to be deployed.
6. Push the tool's deployment switch. The airbag should deploy (deployment is both highly audible and visible — a loud noise and rapid inflation of the bag, followed by slow deflation).
 - If audible/visible deployment happens and the green light on the tool goes on, continue with this procedure.
 - If the airbag doesn't deploy, yet the green light goes ON, its igniter is defective. Go to Damaged Airbag Special Procedure.

⚠ WARNING During deployment, the airbag assembly can become hot enough to burn you. Wait thirty minutes after deployment before touching the assembly.

7. Dispose of the complete airbag assembly. No part of it can be reused. Place it in a sturdy plastic bag and seal it securely.

CAUTION:


- Wear a face shield and gloves when handling a deployed airbag.
- Wash your hands and rinse them well with water after handling a deployed airbag.



Deploying the Airbag: Out-of-car.

NOTE: If an intact airbag assembly has been removed from a scrapped car or has been found defective or damaged during transit, storage, or service, it should be deployed as follows:

⚠ WARNING Position the airbag assembly face up, outdoors on flat ground at least thirty feet from any obstacles or people.

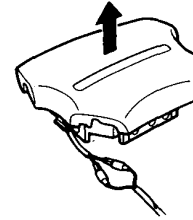

1. Confirm that the special tool is functioning properly by following the check procedure on this page or on the tool box label.
2. Remove the short connector from the airbag connector.
3. Follow steps 4, 5, 6 and 7 of the in-car deployment procedure.

Damaged Airbag Special Procedure.

⚠ WARNING If an airbag cannot be deployed, it should not be treated as normal scrap; it should still be considered a potentially explosive device that can cause serious injury.

1. If installed in a car, follow the removal procedure on page 16-122.
2. In all cases, make sure a short connector is properly installed on the airbag connector.
3. Package the airbag in exactly the same packaging that the new replacement part came in.
4. Mark the outside of the box "DAMAGED AIRBAG NOT DEPLOYED" so it does not get confused with your parts stock.
5. Contact your HONDA District Service Manager for how and where to return it for disposal.

Deployment Tool: Check Procedure.

1. Connect the yellow clips to both switch protector handles on the tool; connect the tool to a battery.
2. Push the operation switch: green means tool is OK; red means tool is faulty.
3. Disconnect the battery and the yellow clips.


Supplemental Restraint System (Type I)

Cable Reel Removal


▲ WARNING Store a removed airbag assembly with the pad surface up. If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:


- Carefully inspect the airbag assembly before installing it. Do not install an airbag assembly that shows signs of being dropped or improperly handled, such as dents, cracks or deformation.
 - Always keep the short connector on the airbag connector when the harness is disconnected.
 - Do not disassemble or tamper with the airbag assembly.
1. Disconnect the battery negative cable and then the positive cable.
 2. Make sure the wheels are aligned straight ahead.
 3. Install the short connector (RED) on the airbag.

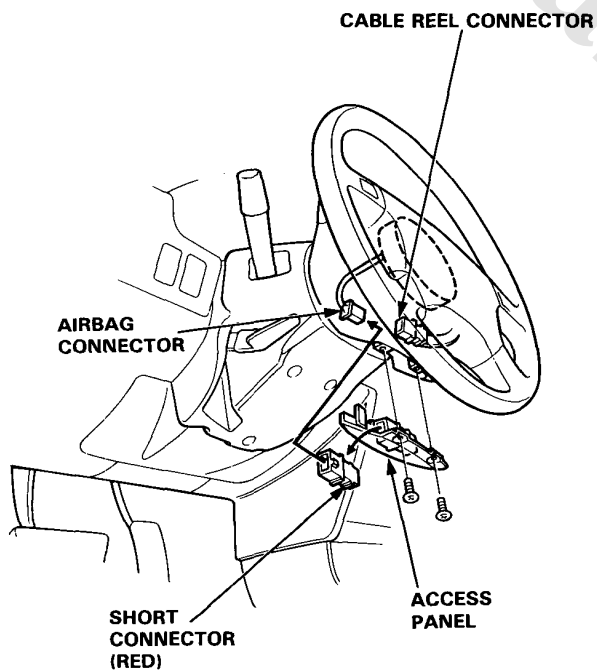

4. Remove the dashboard lower cover and knee bolster. Disconnect the cable reel 6-P connector from the SRS main harness, then remove the connector holder.

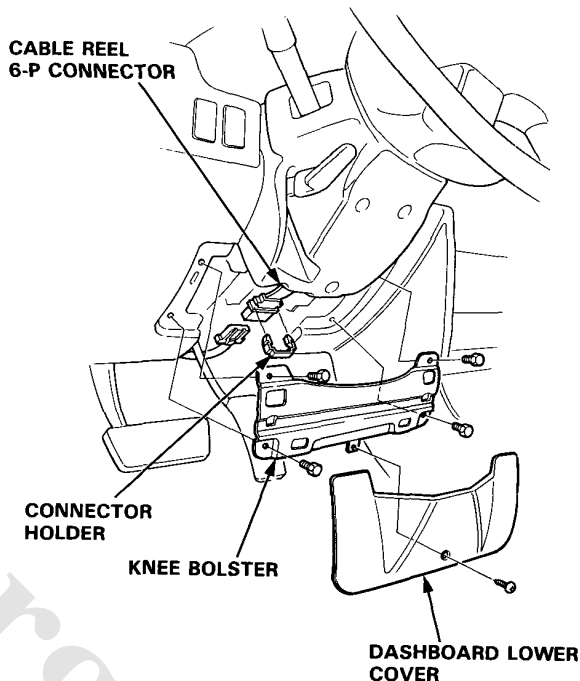


5. Remove the airbag assembly from the steering wheel (two T30 TORX® bolts), then remove the steering wheel nut.

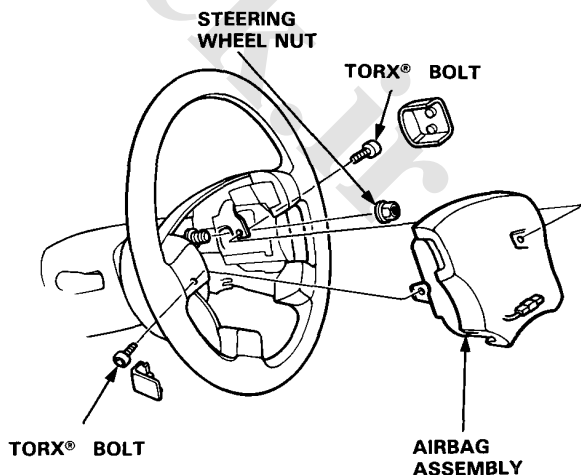




6. Disconnect the connectors from the horn and cruise control set/resume switches, then remove the cable reel 3-P connector from its clip.

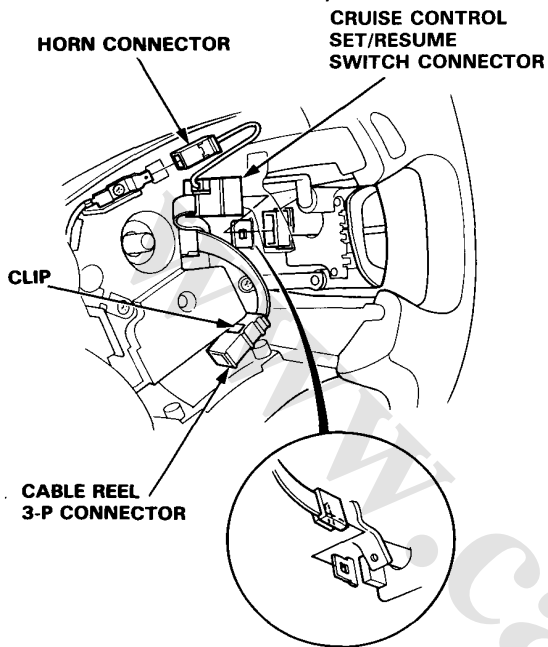

7. Remove the steering wheel from the column.

8. Remove the upper and lower column covers.

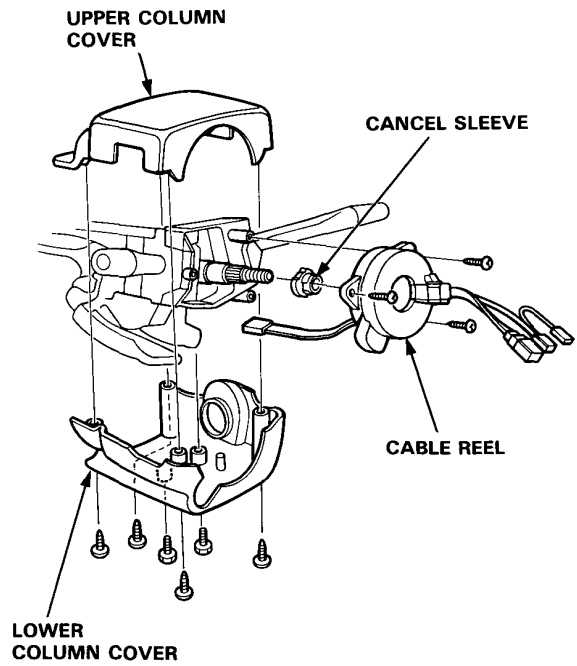

9. Remove the cable reel and cancel sleeve.


Supplemental Restraint System (Type I)

Cable Reel Installation

CAUTION:


- Before installing the steering wheel, the front wheels should be aligned straight ahead.
- Be sure to install the harness wires so that they are not pinched or interfering with other car parts.
- After reassembly, confirm that the wheels are still turned straight ahead and that the steering wheel spoke angle is correct. If minor spoke angle adjustment is necessary do so only by adjustment of the tie rods, not by removing and repositioning the steering wheel.

1. Align the cancel sleeve grooves with the cable reel projections, then carefully install the cable reel and the cancel sleeve on the steering column shaft.

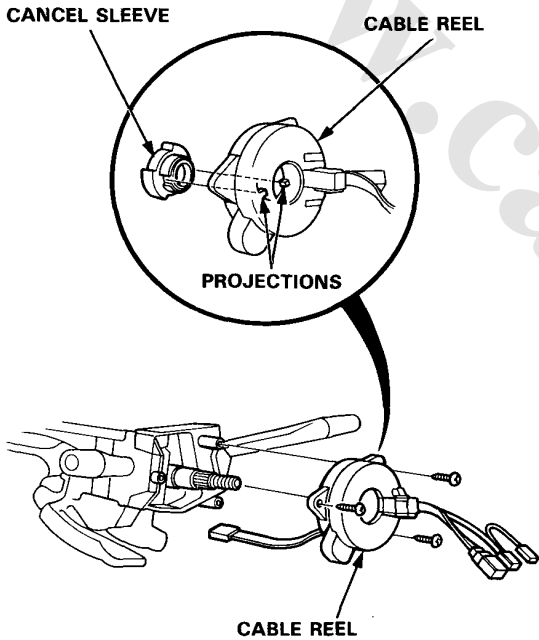


2. Install the steering column upper and lower covers.
3. Center the cable reel.
Do this by first rotating the cable reel clockwise until it stops. Then rotate it counterclockwise (approximately two turns) until:

- The yellow gear tooth lines up with the mark on the cover.
- The arrow on the cable reel label points straight up.

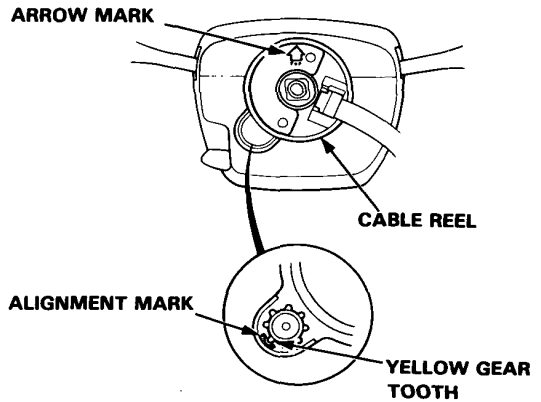


4. Install the steering wheel and attach the cable reel connector to the clip.

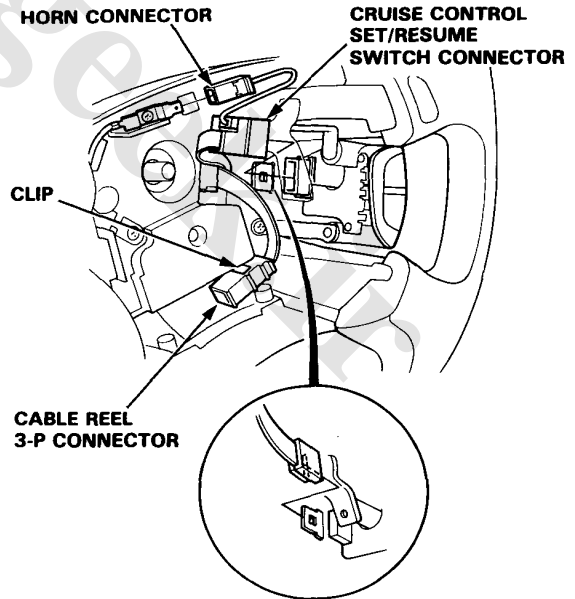


5. Connect the horn connector and cruise control connector.

6. Install the steering wheel nut.

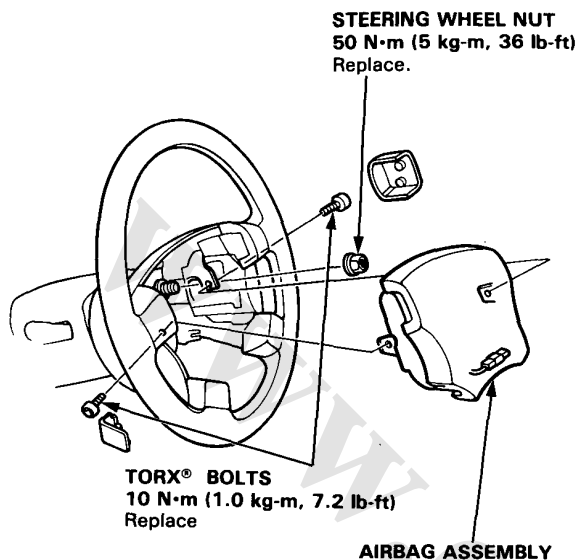

7. Install the airbag assembly.
8. Connect the cable reel harness to the SRS main harness, then attach the connector to the steering column with the connector holder.

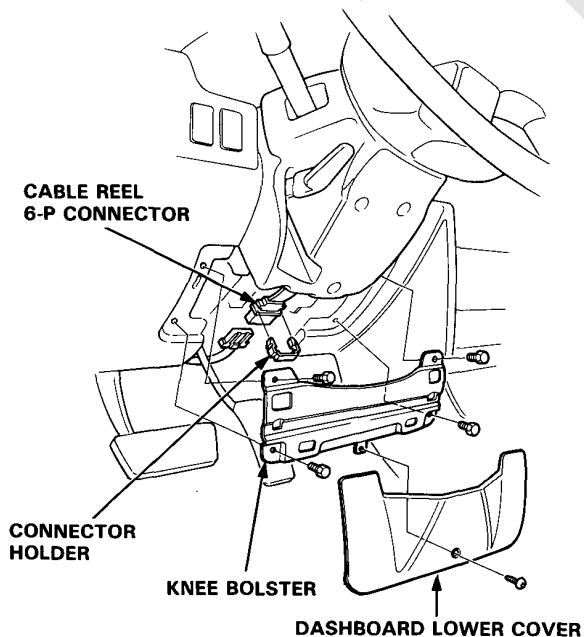


9. Reinstall the knee bolster and dashboard lower cover.

10. Remove the short connector from the airbag, then connect the cable reel connector to the airbag connector. Attach the short connector to the access panel, then reinstall the panel.

11. Reconnect the battery positive cable, then the negative cable.

12. After installing the cable reel, confirm proper system operation:

- Turn the ignition to II; the instrument panel SRS light should go on for about 6 seconds and then go off.
- Make sure both horn buttons work.
- Make sure the headlight and wiper switches work.
- Go for a test drive and make sure the cruise control set/resume switch works.
- Rotate the steering wheel counterclockwise to make sure the yellow gear tooth lines up with the slot on the cover.

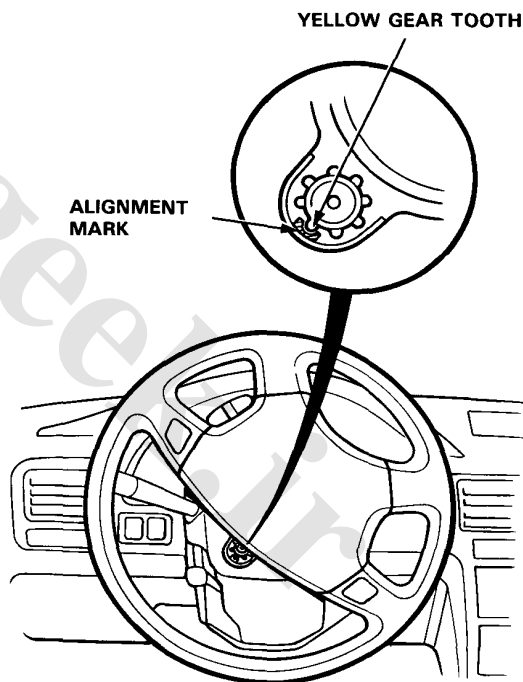


Supplemental Restraint System (Type I)

Dash Sensor Removal


CAUTION:

- Do not damage the sensor wiring.
- Do not install used SRS parts from another car. When repairing an SRS: use only new parts.
- Carefully inspect the dash sensors for signs of being dropped or improperly handled, such as dents, cracks or deformation.


1. Disconnect the battery negative cable, then the positive cable.
2. Install the short connector (RED) on the airbag (see page 16-105).

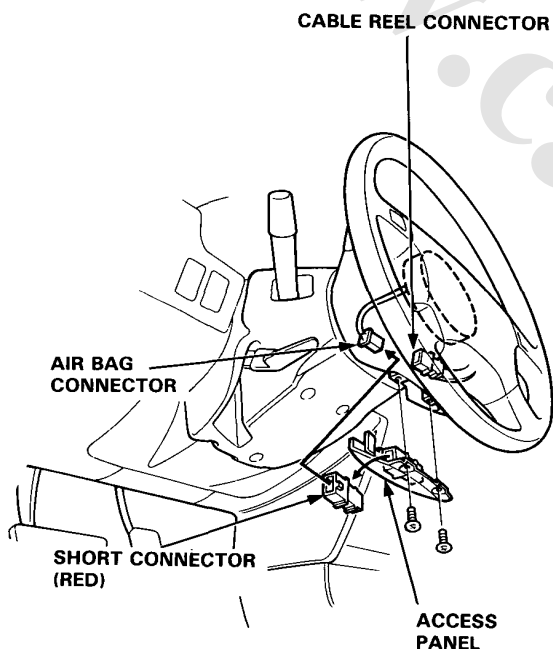

3. Driver's side: Pull back the carpeting, then remove the steering joint cover. Pull the rubber floor pad up, then remove the sensor protector.
4. Passenger's side: Pull back the carpeting, then unbolt the ECU bracket. On A/T models, disconnect the A/T control unit connector. Pull the rubber floor pad down.

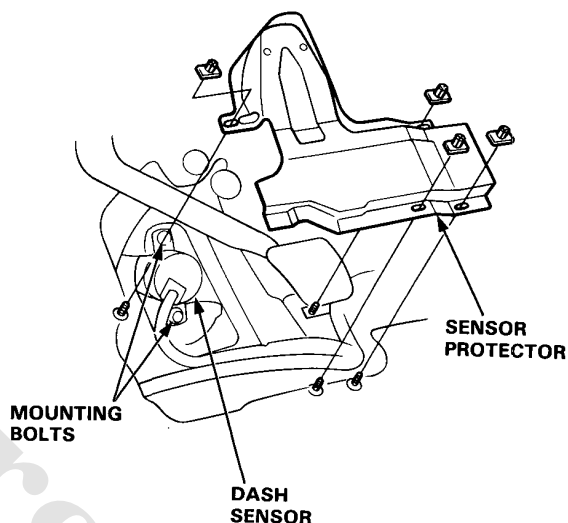

5. Remove the 2 mounting bolts, then remove the dash sensor.

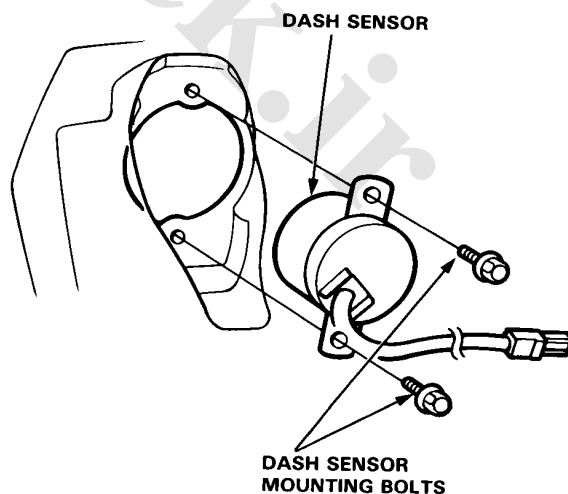


Dash Sensor Installation

CAUTION:


- Be sure to install the harness wires so they are not pinched or interfering with other car parts.
- Replace a sensor if it is dented, cracked, or deformed.
- For the SRS to function properly, the right and left sensors must be installed on the proper sides.

1. Be sure the battery cables are disconnected.
2. Install the sensor securely.

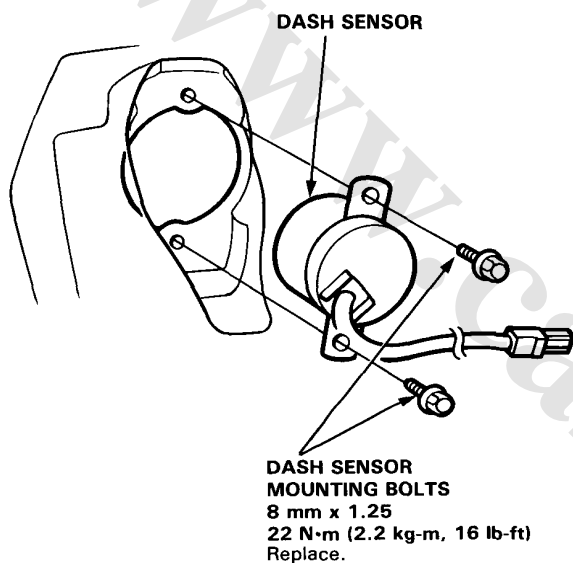

3. Reinstall all other removed parts.

4. Remove the short connector from the airbag. Reconnect the airbag connector to the cable reel connector. Attach the short connector to the access panel, then reinstall the panel.

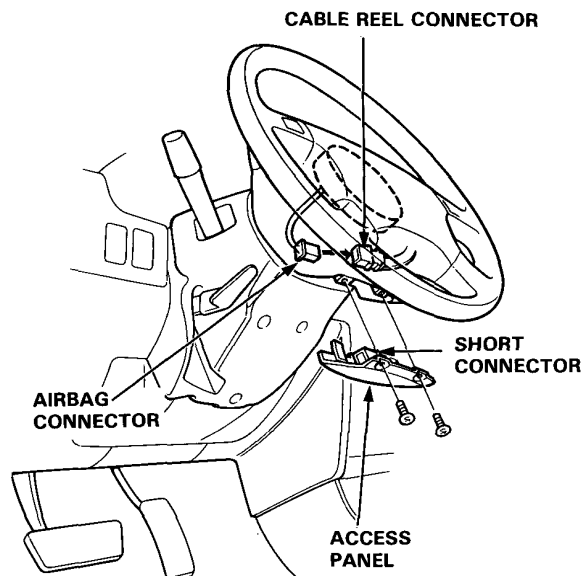

5. Reconnect the battery positive cable, then the negative cable.
6. After installing the dash sensor, confirm proper system operation:
 - Turn the ignition to II: the instrument panel SRS light should go on for about 6 seconds and then go off.

Supplemental Restraint System (Type I)



SRS Unit Removal

CAUTION:

- Before disconnecting any part of the SRS wire harness, install the short connector on the airbag.
- Do not damage the SRS unit terminals or connectors.
- Do not disassemble the SRS unit; it has no serviceable parts.
- Store the SRS unit in a clean, dry area.
- Do not use any SRS unit which has been subjected to water damage or shows signs of being dropped or improperly handled, such as dents, cracks or deformation.

1. Disconnect the battery negative cable, then the positive cable.
2. Install the short connector on the airbag (see page 16-105).
3. Pull down the carpeting from both sides of the front console.
4. Remove the harness protector.


5. Disconnect the SRS main harness 18-P connector from the SRS unit.
6. Remove the 4 TORX® bolts from the SRS unit, then pull out the SRS unit from the passenger's side.

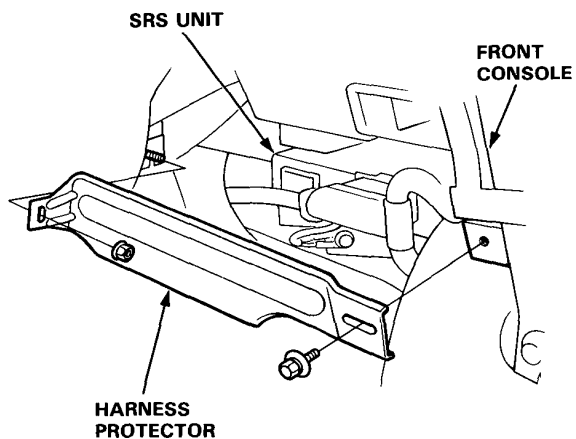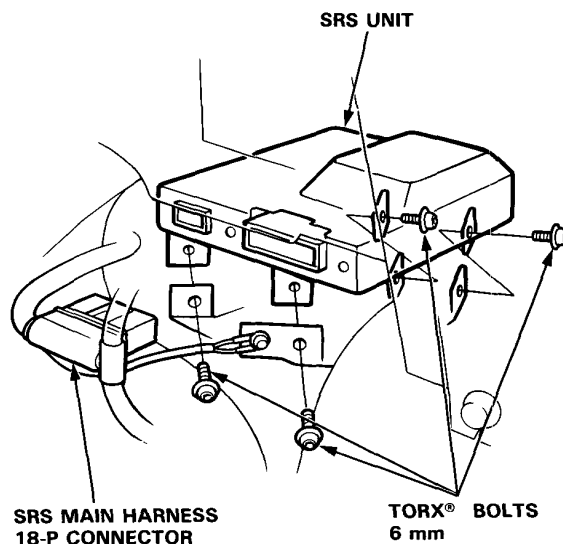


SRS Unit Installation

CAUTION: Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.


1. Install the SRS unit.

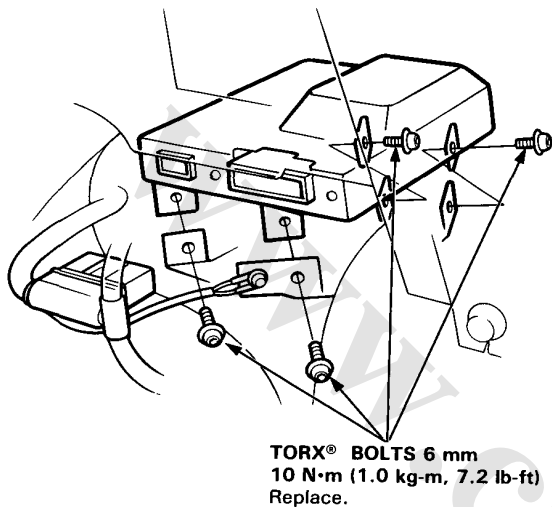

2. Connect the SRS main harness 18-P connector to the SRS unit; push it into position until it clicks.
3. Install the harness protector, then put the carpet back in place.

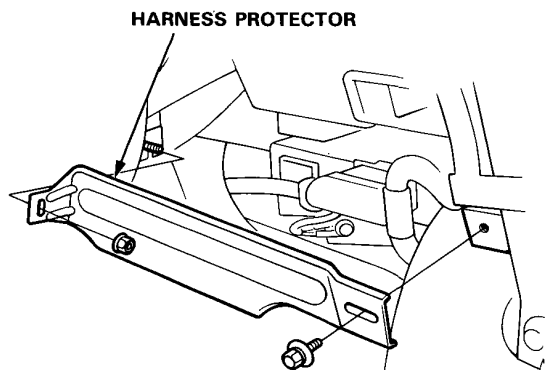

4. Remove the short connector from the airbag.
5. Reconnect the airbag connector to the cable reel connector. Attach the short connector to the access panel, then reinstall the panel.

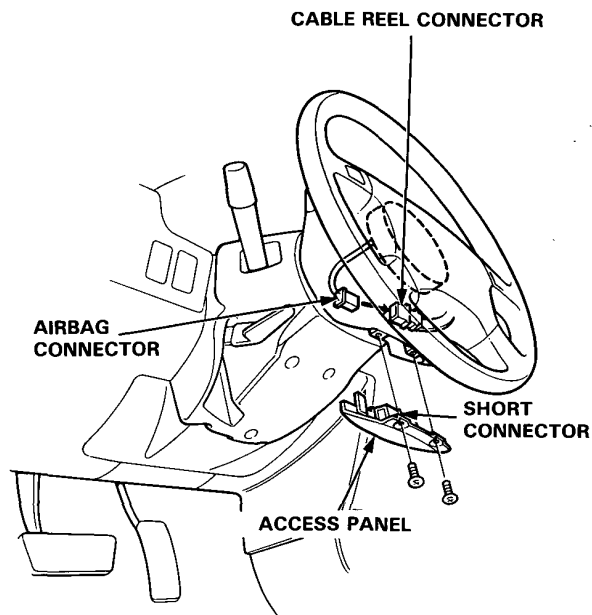


6. Reconnect the battery positive cable, then the negative cable.
7. After installing the SRS unit, confirm proper system operation:
 - Turn the ignition to II: the instrument panel SRS light should go on for about 6 seconds and then go off.

Supplemental Restraint System (Type II)

Component Location Index

NOTE: RHD type is symmetrical to LHD type.


SRS INDICATOR LIGHT
(In the gauge assembly)
Troubleshooting, page 16-142
Gauge assembly, page 16-62

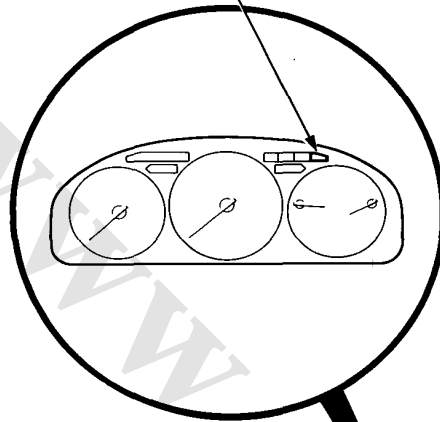

SRS UNIT SUB HARNESS

SRS MAIN HARNESS

UNDER-DASH FUSE BOX




SLIP RING
Removal, page 16-58
Installation, page 16-159

SRS AIRBAG ASSEMBLY
Removal, page 16-154
Installation, page 16-155
Disposal, page 16-156



Description

The SRS is a safety device which, as a supplement to the seat belt, is designed to protect the driver by operating when the car receives a frontal impact exceeding a certain set limit. The system is comprised of the airbag assembly (which in turn consists of the SRS unit, inflator, and airbag) and the slip ring.

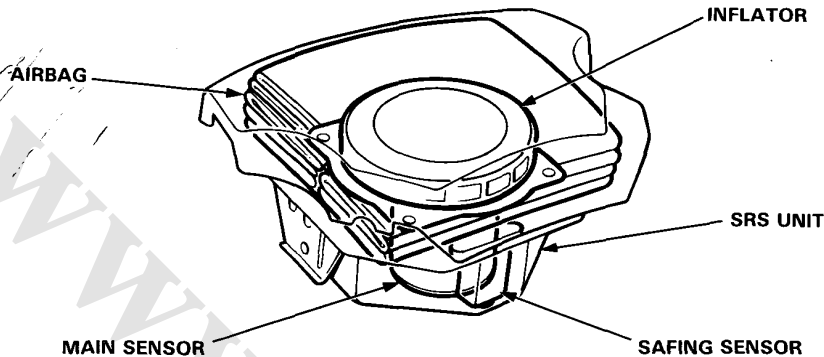


Operation

As shown in the diagram below, the main and safing sensors, and the safety switch are connected in series to the airbag inflator and the battery. A regulator circuit (increasing the reliability of the SRS system by raising the voltage when battery voltage drops) and a back-up power circuit are connected in parallel with the battery. The sensors, the safety switch, regulator and back-up circuits, and a self-diagnosis circuit (see description on next page) are all built into the SRS unit.

Sequence of operation:


- (1) The main sensor and the safing-sensor activate.
- (2) Power is supplied to the airbag inflator by the battery or the back-up power circuit if the battery is disconnected due to the impact.
- (3) The airbag deploys.

It takes about 0.1 seconds from the beginning of the airbag deployment until it is completely deflated (frontal collision against a fixed wall at a speed of 50 km/h [30 mph])

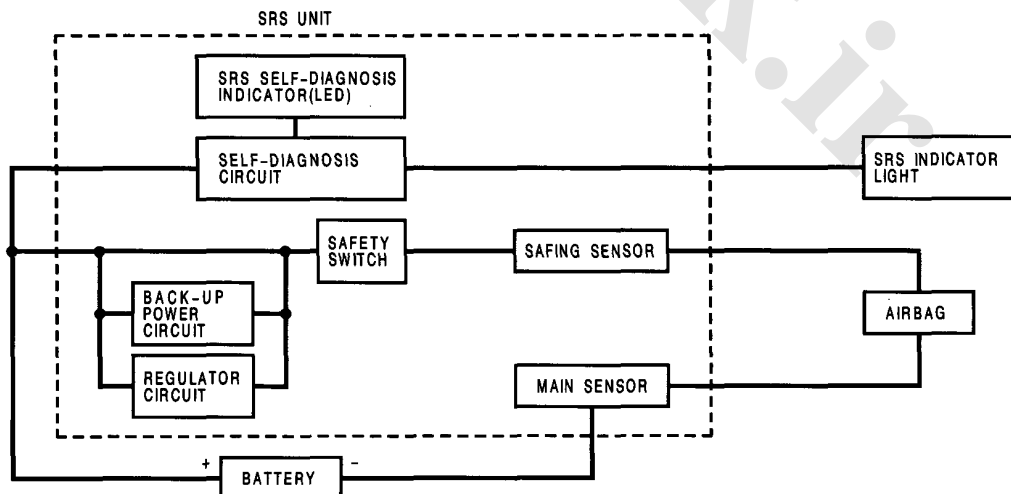

Supplemental Restraint System (Type II)

Circuit Diagram

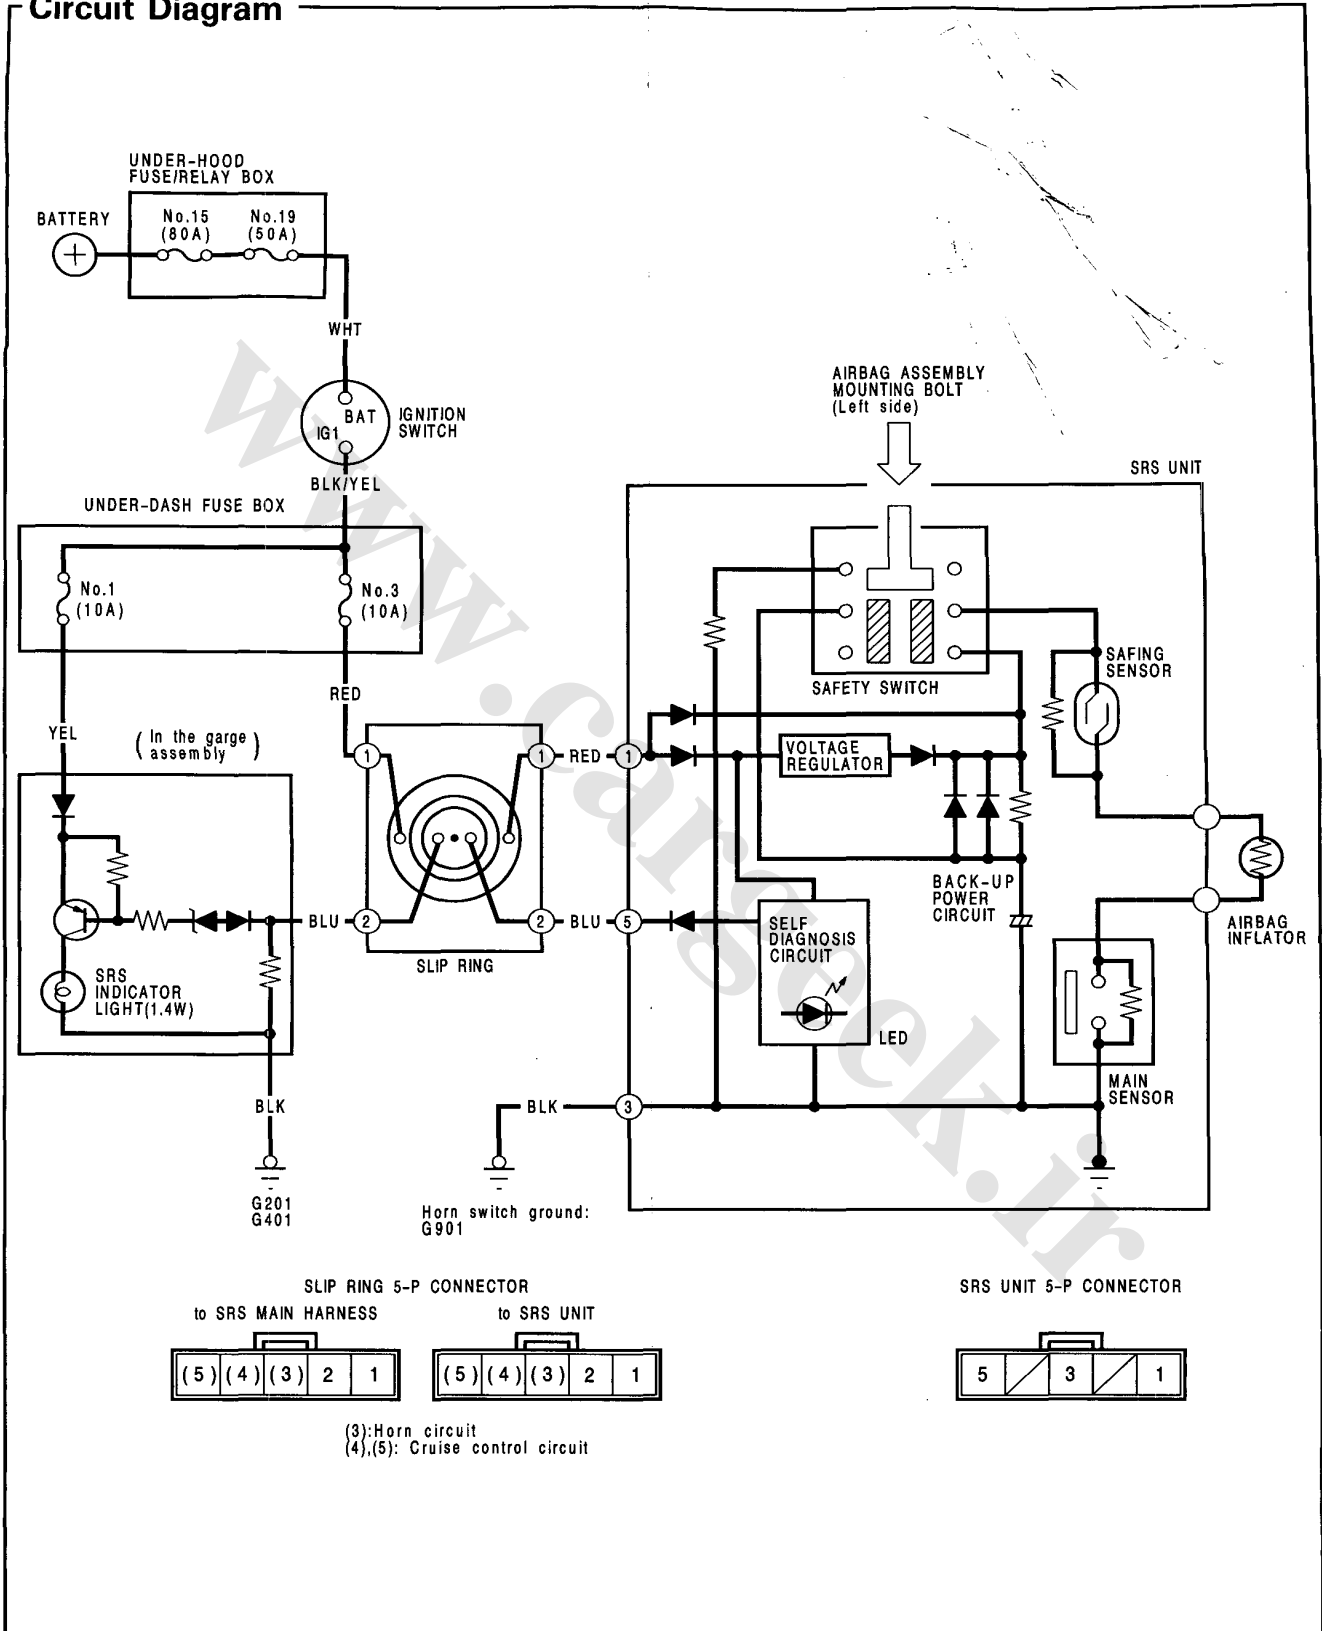




Wiring Locations

CAUTION: Make sure all SRS ground locations are clean and grounds are securely attached.

NOTE:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- RHD type is symmetrical to LHD type.

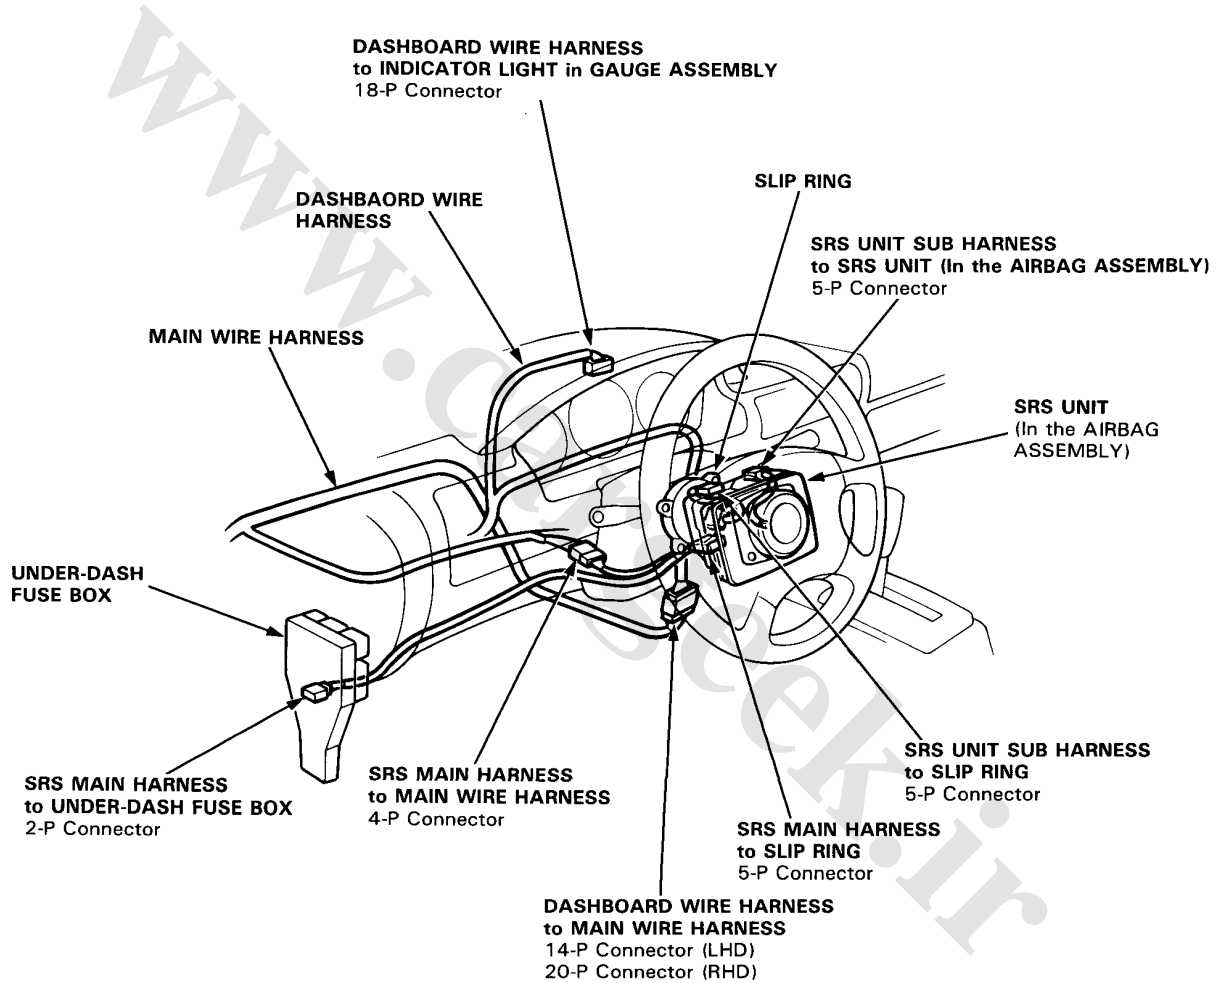


Supplemental Restraint System (Type II)

General Precautions

- Carefully inspect any SRS part before you install it. Do not install any part that shows signs of being dropped or improperly handled, such as dents, cracks or deformation:
 - Airbag assembly.
 - Slip ring.
 - Steering wheel.
- Use only a digital circuit tester to check the system. Using an analog circuit tester may cause an accidental deployment and possible injury.
- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Before beginning work related to the SRS system, turn the ignition switch off, disconnect the negative and positive battery cables, and wait three minutes.
- Replacement of the combination light and wiper/washer switches and cruise control switch can be done without removing the steering wheel:
 - Combination light and wiper/washer switch replacement.
 - Cruise control switch replacement.
- After completed work, check that the connectors are installed tightly:
 - the SRS indicator light should go off 6 sec after the ignition switch has been turned on.
 - with the ignition switch turned on, the LED of the SRS unit should blink one time.

LED
(in the SRS unit)

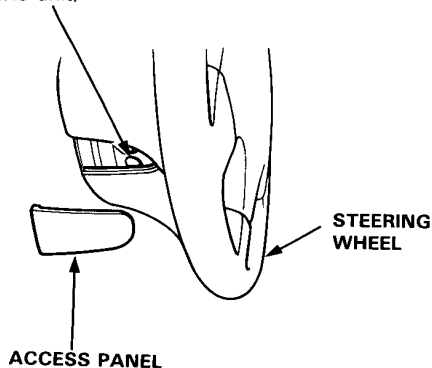


Airbag Handling and Storage

- Do not try to disassemble the airbag assembly. It has no serviceable parts. Once an airbag has been deployed, it cannot be repaired or reused.
- Be careful that the airbag assembly receives no strong shocks; it could deploy.
- Special bolts are necessary for installing the airbag assembly. Do not use other bolts.

For temporary storage of the airbag assembly during service, observe the following precautions:

- Store the removed airbag assembly with the pad surface up.

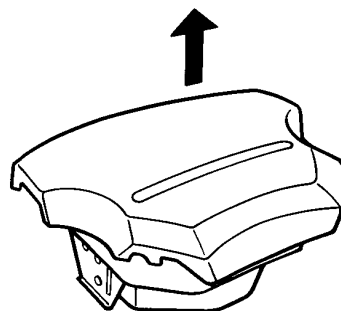

▲ WARNING If the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury

- Store the removed airbag assembly on a secure flat surface away from any high heat source (exceeding 85°C/185°F) and free of any oil, grease, detergent or water.


CAUTION: Improper handling or storage can internally damage the airbag assembly, making it inoperative. You suspect the airbag assembly has been damaged, install a new unit and refer to the Deployment/Disposal Procedures for scrapping of the damaged airbag.




Wiring related Precautions

- Never attempt to modify, splice or repair SRS wiring.

NOTE: SRS wiring can be identified by special yellow outer protective covering.

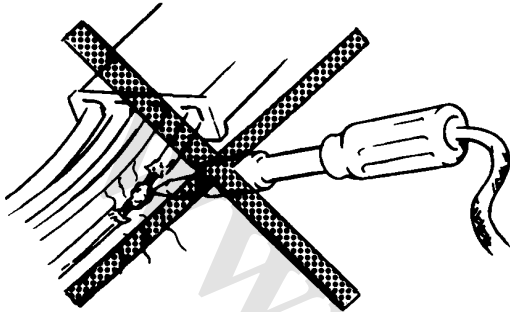

- Be sure to install the harness wires so that they are not pinched or interfering with other car parts.

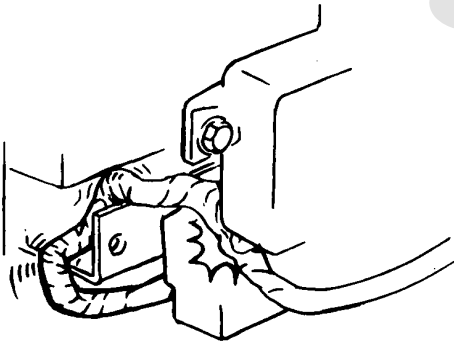


- Make sure all SRS ground locations are clean and grounds are securely fastened for optimum metal-to-metal contact. Poor grounding can cause intermittent problems that are difficult to diagnose.

- Disconnecting the SRS Connector at the Fuse Box:

CAUTION: Avoid breaking the connector; it's double-locked.

First lift the connector lid with a thin screwdriver, then press the connector tab down and pull the connector out.

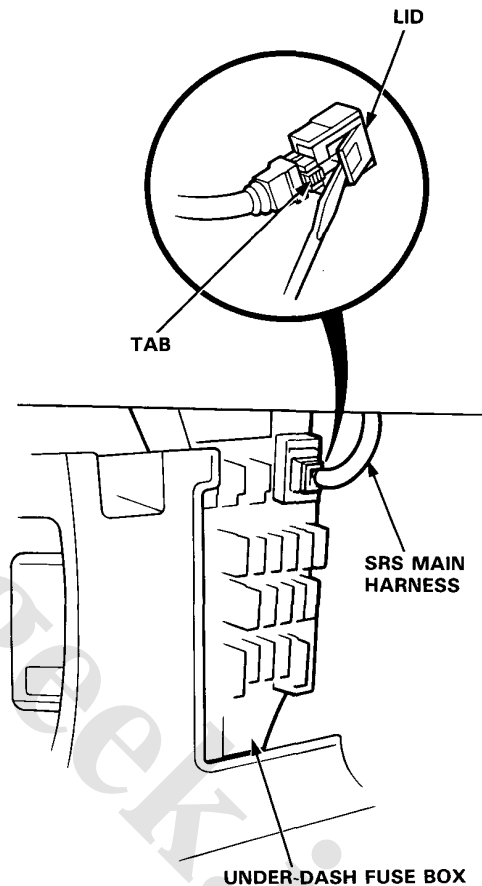

To reinstall the connector, push it into position until it clicks, then close its lid.

(cont'd)

Supplemental Restraint System (Type II)


Wiring related Precautions (cont'd)

- Disconnecting the SRS Connector at the SRS Unit and Slip ring:


NOTE: Dispose of the connector lock; not reuse it.

1. Pull the connector lock out with pliers.
2. Depress the connector tab and pull the connector out.

SRS UNIT:

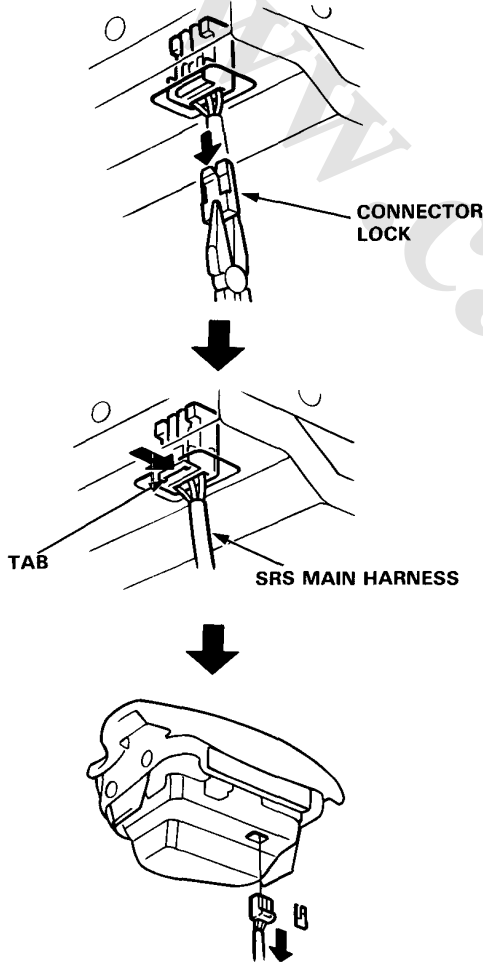

SLIP RING:

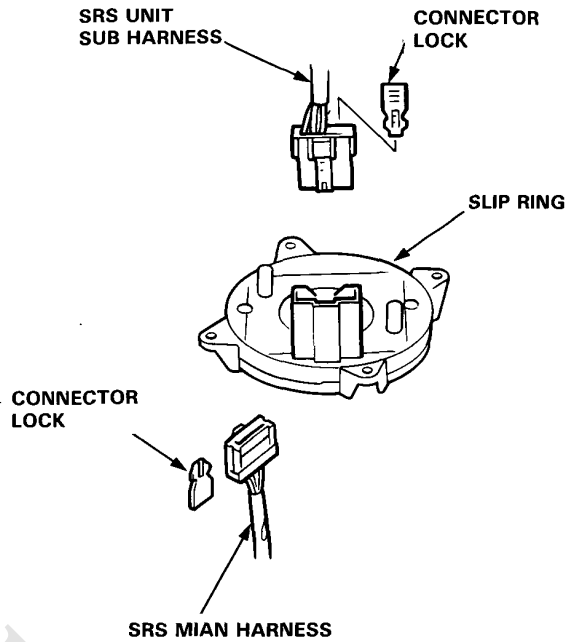




Steering-related Precautions

- Steering Column Removal:

CAUTION:

- Turn the ignition switch off, disconnect the negative and positive battery cables, and wait three minutes.
- Be careful that the steering wheel receives no strong shocks.
- Before removing the steering column, first disconnect the connector between the slip ring and the SRS main harness.
- If the steering column is going to be removed without dismounting the steering wheel, lock the steering by turning the ignition key to 0-LOCK position or remove the key from the ignition so that the steering wheel will not turn.

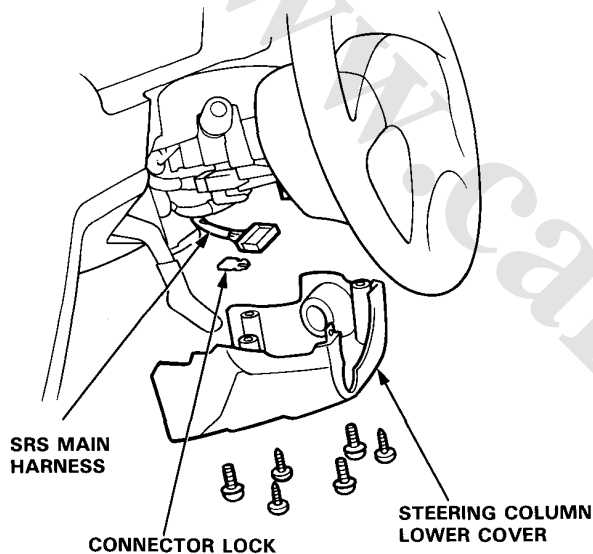


- Steering Wheel:

Do not replace the original steering wheel with any other design, since it will make it impossible to properly install the airbag (only use genuine HONDA replacement parts).

- Slip Ring

CAUTION:

- Do not grease the slip ring.
- Do not disassemble the slip ring. It has no serviceable parts and has to be replaced as a whole.
- The slip ring is a special part of models equipped with SRS. When replacing, be sure to use only a genuine HONDA spare part.

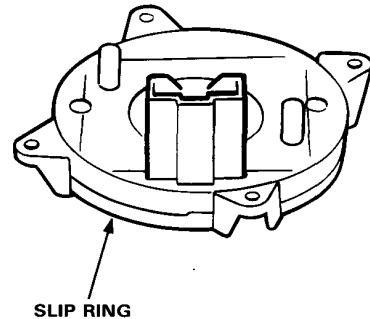


Supplemental Restraint System (Type II)

Troubleshooting

Self-diagnosis system

When the ignition switch is turned ON, the SRS indicator light comes on and goes off after about 6 seconds, and the self-diagnosis indicator (LED) blinks one time, if the system is operating normally. If there is an abnormality in the SRS, the SRS indicator light will stay on while the LED in the SRS unit will indicate the system problem by blinking a failure code (see the table on next page).

- If the SRS indicator light does not come on, or does not go off after 6 seconds, or if it comes on while driving, the system must be inspected and repaired as soon as possible.
- To see the indicated failure code, remove the access panel at the left side of the steering wheel.
- If there is a failure in the system, the LED will first blink one time (OK signal), then it will indicate the failure code.
- If simultaneous system problems occur, the LED will indicate only the problem with the higher priority. The problem with the highest priority is that on top of the failure code table, the problem with the lowest priority is that at the bottom of the table (see page 16-143).

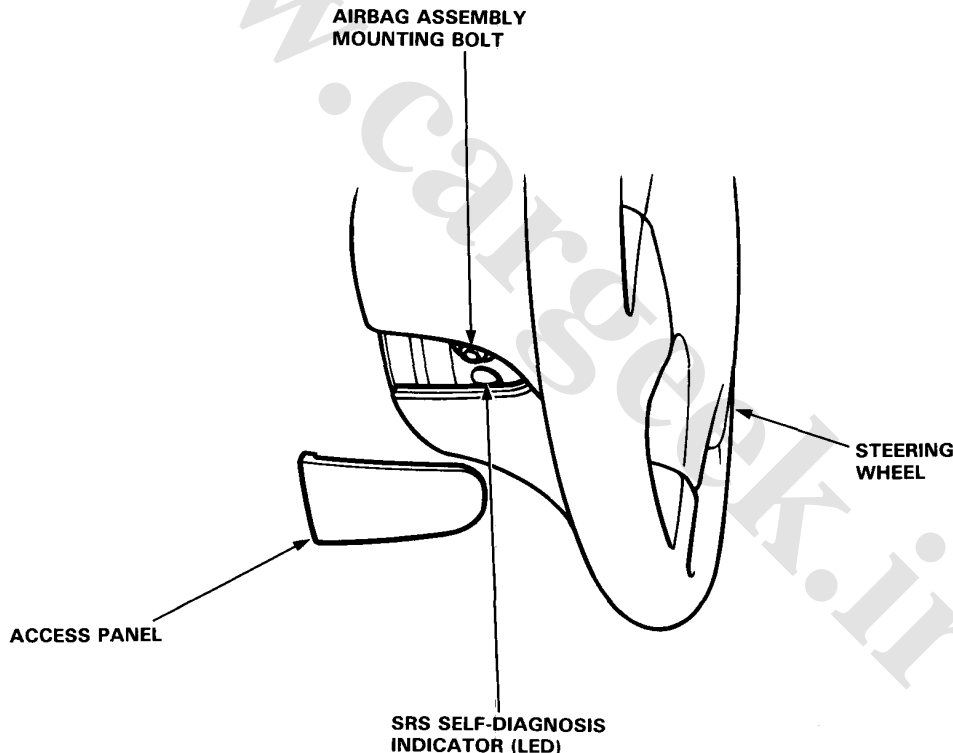



Failure Code Table

Self-diagnosis indicator (LED) blinks	SRS indicator light	Cause
1	doesn't come on (with the ignition switch turn ON)	<ul style="list-style-type: none"> ● Blown No. 1 (10 A) fuse. ● Blown SRS indicator light bulb. ● Poor ground.
0	doesn't go off	<ul style="list-style-type: none"> ● Faulty SRS unit. ● Poor ground.
1		<ul style="list-style-type: none"> ● Short (or open) in SRS indicator wire harness.
stay on continuously		<ul style="list-style-type: none"> ● Faulty SRS self-diagnosis circuit.
2		<ul style="list-style-type: none"> ● Faulty safety switch.
3		<ul style="list-style-type: none"> ● Faulty back-up power circuit.
4		<ul style="list-style-type: none"> ● Faulty safety switch.
5		<ul style="list-style-type: none"> ● Open in airbag inflator.
6		<ul style="list-style-type: none"> ● Open in main sensor. ● Short in safing sensor.
7		<ul style="list-style-type: none"> ● Short in main sensor. ● Open in safing sensor.

(cont'd)

Supplemental Restraint System (Type II)


Troubleshooting (cont'd)

The SRS Indicator Does Not Light

- The SRS indicator light will not come on until 6 seconds after the ignition switch has been turned on.
- The LED of the SRS unit should blink one time.

CAUTION:

- Use only a digital circuit tester to check the system.

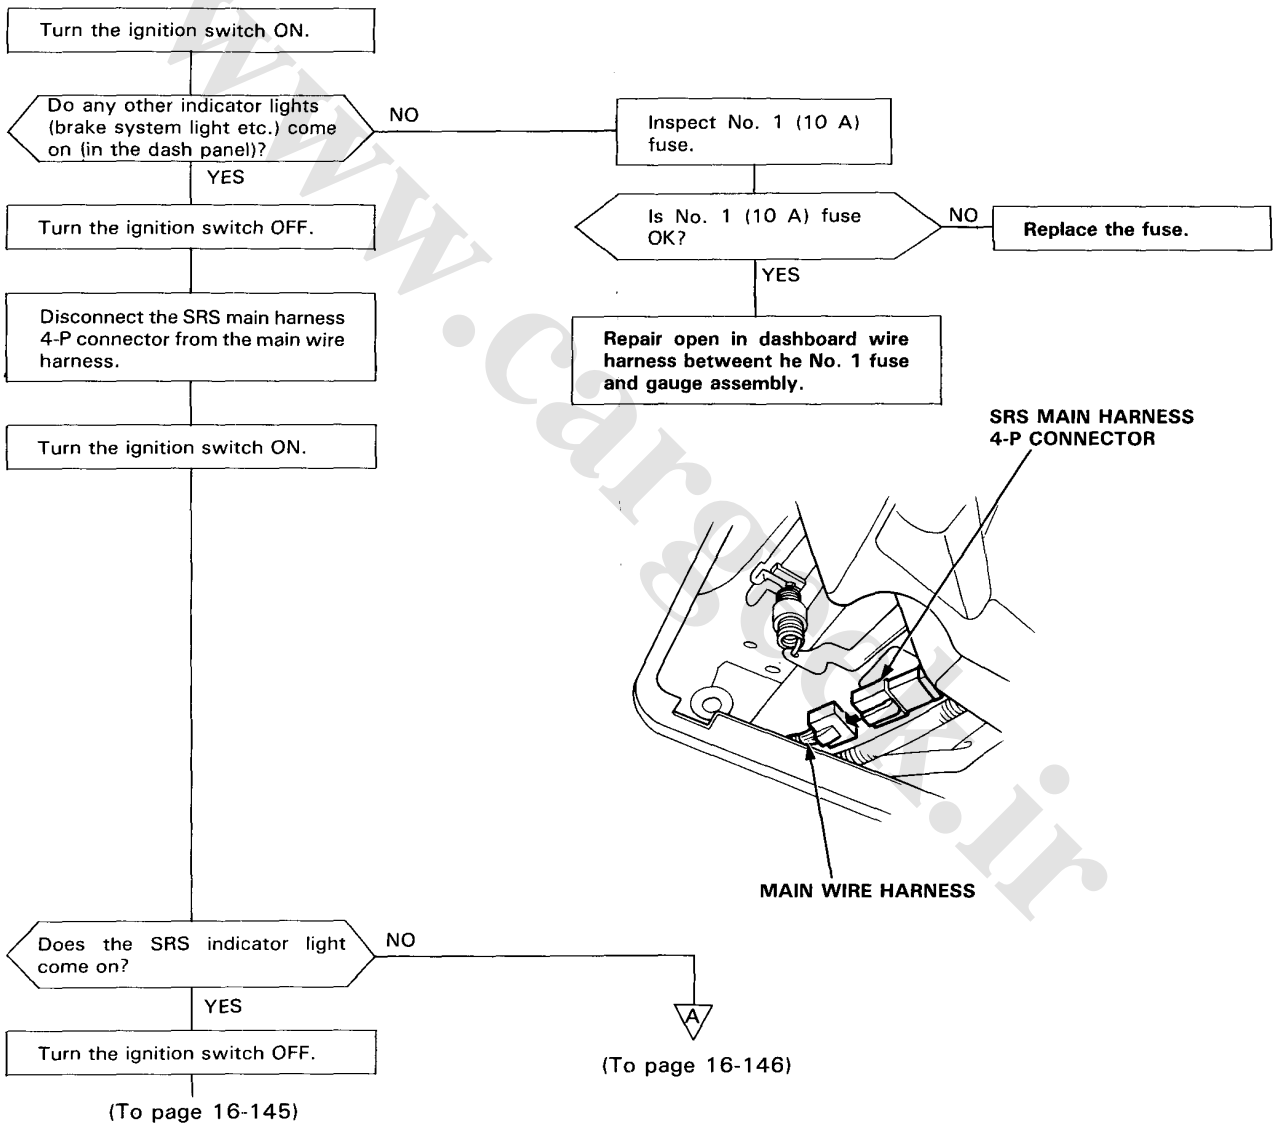



(From page 16-144)


Reconnect the SRS main harness 4-P connector to the main wire harness.

Disconnect the negative and positive battery cables, and wait three minutes.

Remove the airbag assembly from the steering wheel (see page 16-154).

CAUTION: Make sure the wheels are aligned straight ahead. Remove the left airbag assembly mounting special bolt first (the safety switch will automatically turn off).

Disconnect the SRS unit sub harness 5-P connector from the SRS unit (In the airbag assembly).

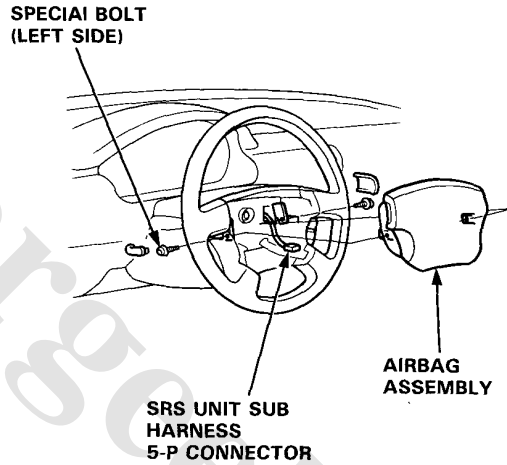

Reconnect the positive and negative battery cables, then turn the ignition switch ON.

Does the SRS indicator light come on?

NO

Short in the BLU wire of SRS unit sub harness, SRS main harness or the slip ring. Replace faulty component.

YES


SRS unit is faulty. Replace the airbag assembly.

(cont'd)

Supplemental Restraint System (Type II)

Troubleshooting (cont'd)

(From page 16-144)

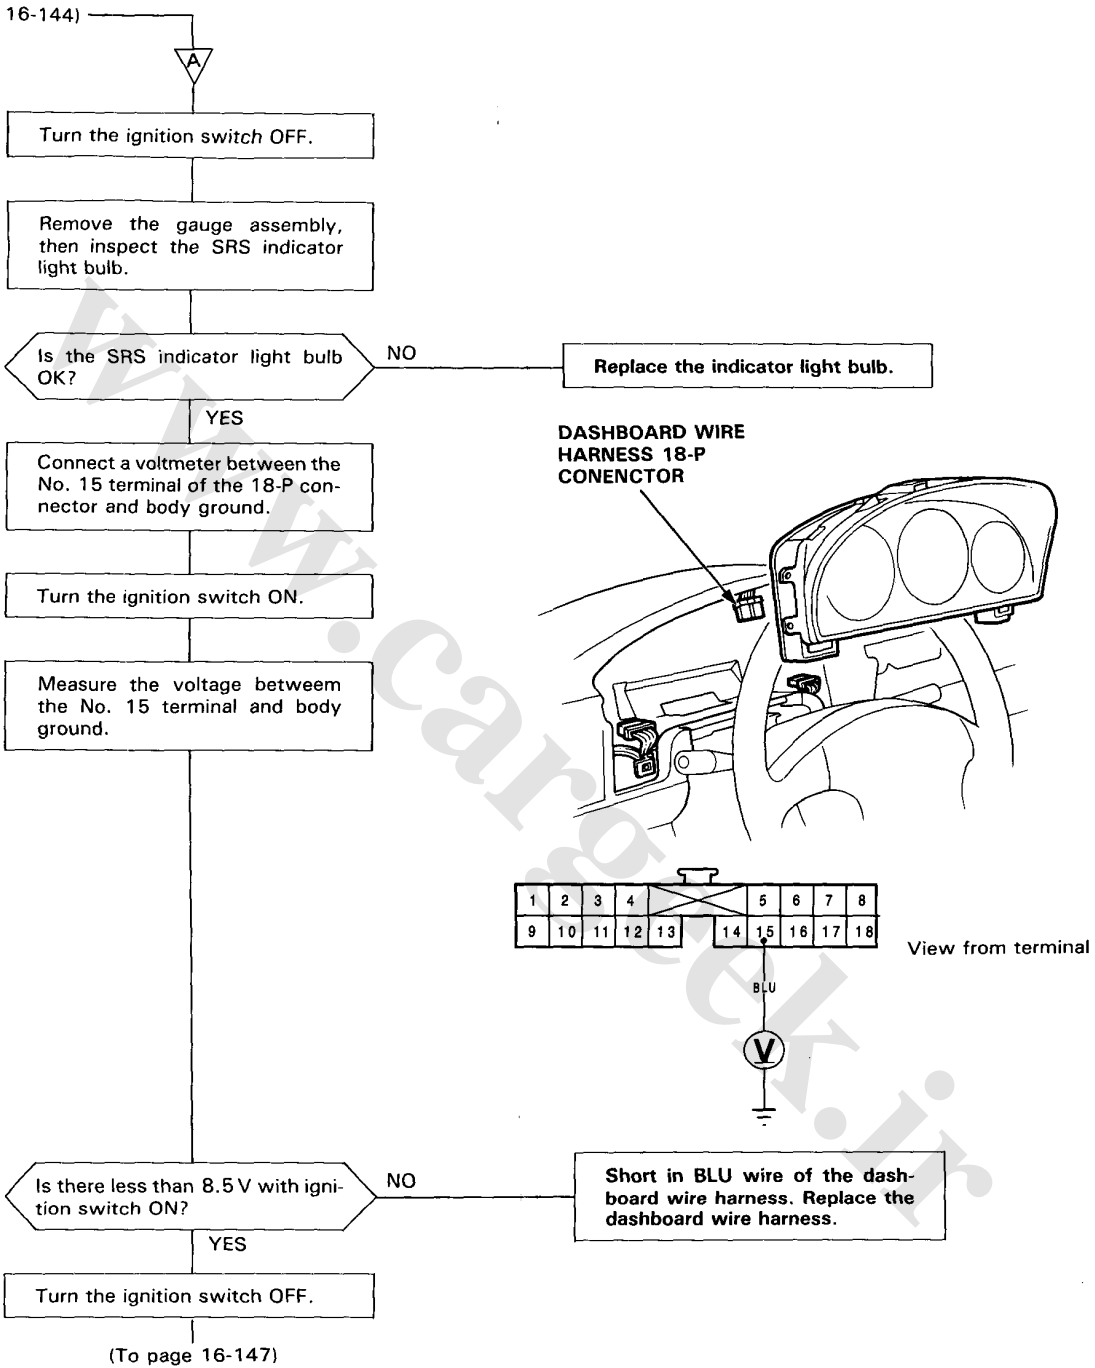




(From page 16-146)

Connect the voltmeter between the No. 13 terminal (+) and the No. 2 terminal (-) of the dashboard wire harness 18-P connector.

Turn the ignition switch ON.

Measure the voltage between the No. 13 terminal and the No. 2 terminal.

**DASHBAORD WIRE HARNESS
18-P CONNECTOR**

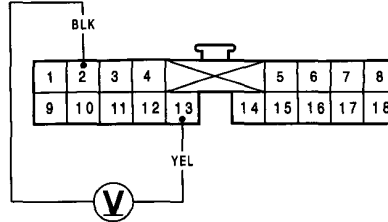

View from terminal side

Is there battery voltage?


YES

The SRS indicator circuit in the gauge assembly is faulty.

NO

Check for continuity between the No. 2 terminal and body ground.

**DASHBOARD WIRE HARNESS
18-P CONECTOR**

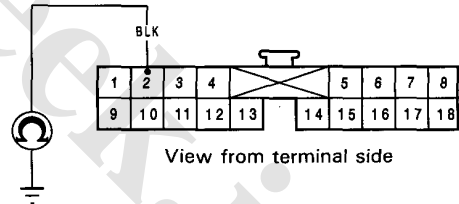

View from terminal side

Does continuity exist?

YES

Repair open in the YEL wire (No. 13 terminal) of the dashboard wire harness between the gauge assembly and the No. 1 fuse.

NO

Repair open in the BLK wire (No. 2 terminal) between the gauge assembly and body ground or look for a poor ground (G201, 401).

(cont'd)

Supplemental Restraint System (Type II)

Troubleshooting (cont'd)

The SRS Indicator Light Stays on Continuously

- The LED of the SRS unit does not light.

Turn the ignition switch OFF, then inspect No. 1 (10 A) fuse.

Is No. 1 (10 A) fuse OK?

NO

Replace the fuse.

YES

Disconnect the negative and positive battery cables, and wait three minutes.


Remove the airbag assembly from the steering wheel (see page 16-154).

Disconnect the SRS unit sub harness 5-P connector from the SRS unit (In the airbag assembly).

Reconnect the positive and negative battery cables, then turn the ignition switch ON.

(To page 16-149)

CAUTION: Make sure the wheels are aligned straight ahead. Remove the left airbag assembly mounting special bolt first (the safety switch will automatically turn off).


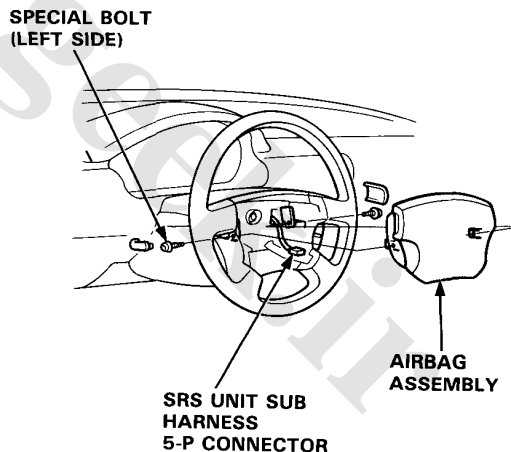




(From page 16-148)

NOTE: Rotate the steering wheel slowly to check that there is good contact to the slip ring.

Measure the voltage between the No. 1 terminal and the No. 3 terminal of the SRS unit sub harness 5-P connector.

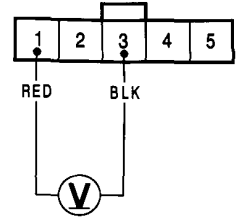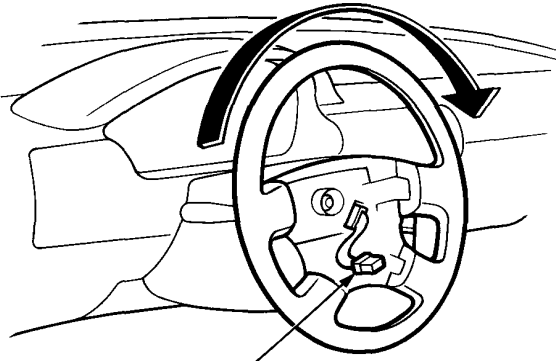

View from terminal side

SRS UNIT SUB HARNESS 5-P CONNECTOR


Is there battery voltage? YES -> SRS unit is faulty. Replace the airbag assembly. NO -> [Next Step]

Check for continuity between the No. 3 terminal and body ground.


Does continuity exist? NO -> Open in the BLK wire (No. 3 terminal) of the SRS unit sub harness between the SRS unit and body ground or look for a poor ground (G901). YES -> [Next Step]

Disconnect the SRS main harness 5-P connector from the slip ring.

View from terminal side

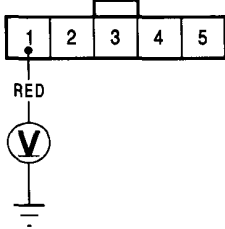

SRS MAIN HARNESS 5-P CONNECTOR

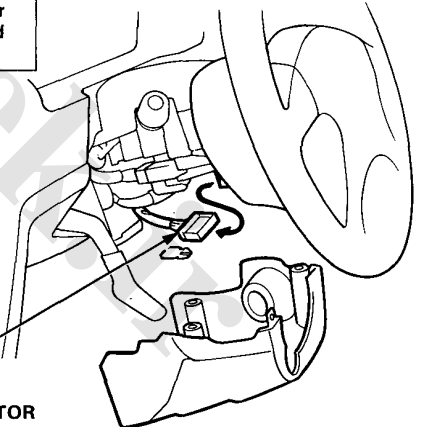

Measure the voltage between the No. 1 terminal of the SRS main harness 5-P connector and body ground.

Is there battery voltage? NO -> Open in the RED wire of the SRS main harness between the fuse box and the slip ring. Replace the harness. YES -> [Next Step]

Open in the RED wire of the SRS unit sub harness or the slipping. Replace the faulty component.

(cont'd)


Supplemental Restraint System (Type II)

Troubleshooting (cont'd)

The SRS Indicator Light Stays on Continuously.

- The LED of the SRS unit blinks one time.

SRS MAIN HARNESS
4-P CONNECTOR

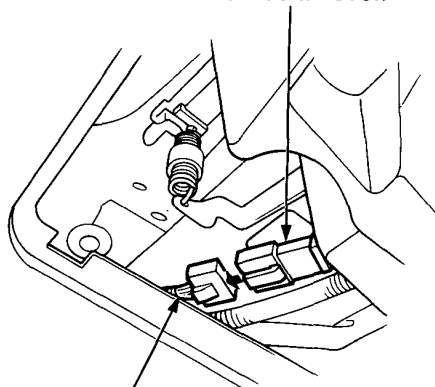

MAIN WIRE HARNESS



View from terminal side



Turn the ignition switch OFF, then disconnect the SRS main harness 4-P connector from the main wire harness.

Measure the voltage between the No. 1 terminal of the SRS main harness 4-P connector and body ground.

Is there more than 8.5 V until 6 seconds after the ignition switch has been turned on.

YES



(To page 15-152)

NO

Turn the ignition switch OFF.

Disconnect the negative and positive battery cables, and wait three minutes.


Remove the airbag assembly from the steering wheel (see page 16-154).

Disconnect the SRS unit sub harness 5-P connector from the SRS unit (In the airbag assembly).

(To page 16-151)

CAUTION: Make sure the wheels are aligned straight ahead. Remove the left airbag assembly mounting special bolt first (the safety switch will automatically turn off).

SPECIAL BOLT
(LEFT SIDE)

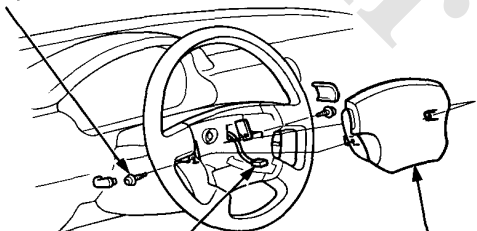

SRS UNIT SUB
HARNESS
5-P CONNECTOR




AIRBAG
ASSEMBLY



(From page 16-150)

NOTE: Rotate the steering wheel slowly to check that there is good contact to the slip ring.

Check for continuity between the No. 1 terminal of the SRS main harness 4-P connector and No. 5 terminal of the SRS unit sub harness 5-P connector.

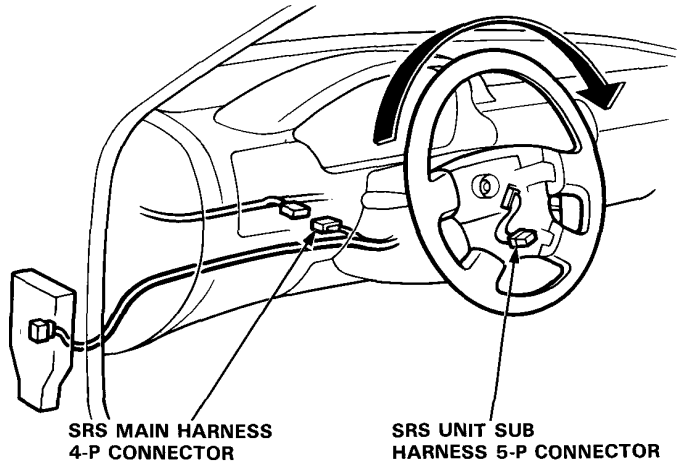

View from terminal side

Does continuity exist? NO


Open in the BLU wire of the SRS main harness, SRS unit sub harness or the slip ring. Replace the faulty component.

YES

NOTE: Rotate the steering wheel slowly to check that there is good contact to the slip ring.

Check for continuity between the No. 1 terminal of the SRS main harness 4-P connector and body ground.

SRS MAIN HARNESS 4-P CONNECTOR



BLU

View from terminal side



Does continuity exist? YES

Short in the BLU wire of the SRS main harness, SRS unit sub harness or the slip ring. Replace the faulty component.

NO

SRS unit is faulty. Replace the airbag assembly.

(cont'd)

Supplemental Restraint System (Type II)



Troubleshooting (cont'd)

(From page 16-150)



Turn the ignition switch OFF, then remove the gauge assembly.

Check for continuity between the No. 1 terminal of the main wire harness and the No. 15 terminal of the dashboard wire harness.

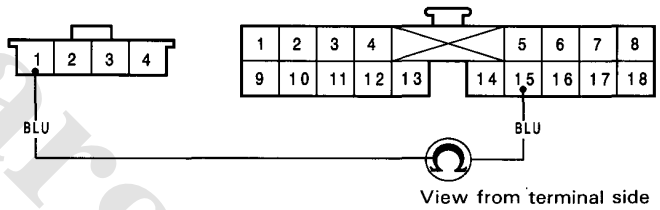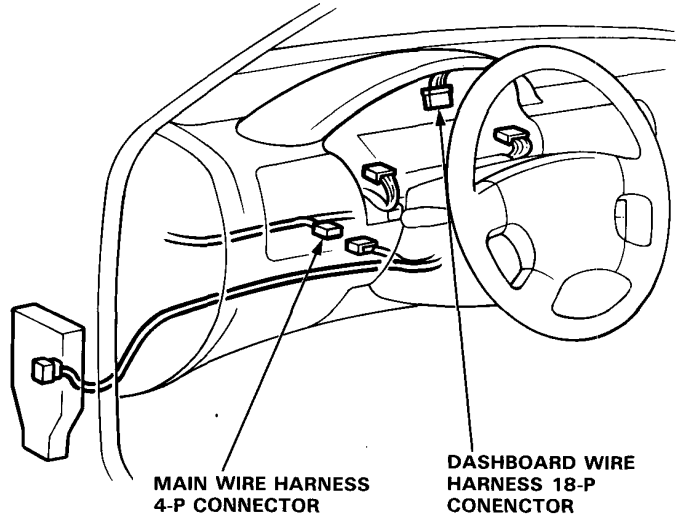

Does continuity exist?

NO

Open in the BLU wire of the dashboard wire harness or the main wire harness. Replace the faulty component.

YES

The SRS indicator circuit in the gauge assembly is faulty. Replace it.



The SRS Indicator Light Stays on Continuously.

- The LED of the SRS unit doesn't go off or blinks 2, 3, 4, 5, 6 or 7 times.

Replace the SRS airbag assembly.

www.cargeek.ir



Airbag Assembly Installation


CAUTION:

- Be sure to install the SRS wiring so that it is not pinched or interfering with other car parts.
- Be sure the battery cables are disconnected.

1. Reconnect the SRS unit sub harness 5-P connector to the SRS unit.
2. Place the airbag assembly in the steering wheel, and secure it with new special bolts.

NOTE: Be sure to torque the bolts as specified.

SPECIAL BOLT
10 N·m (1.0 kg-m, 7.2 lb-ft)
Replace.

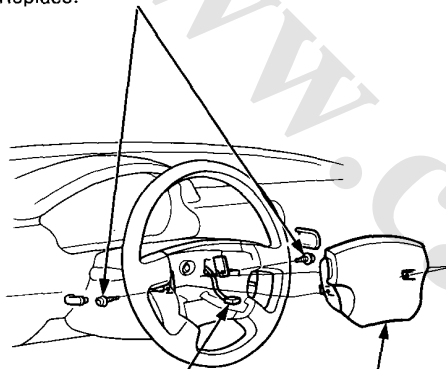

**SUS UNIT SUB
HARNESS
5-P CONNECTOR**

**AIRBAG
ASSEMBLY**

3. Reconnect the battery positive and negative cables.
4. After installing the airbag assembly, confirm proper system operation:
 - Turn the ignition to ON: the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
 - The SRS self diagnosis indicator (LED) should blink one time with the ignition switch ON.

Supplemental Restraint System (Type II)

Airbag Disposal

Before scrapping any airbag (including one in a whole car to be scrapped) the airbag must be deployed. If the car is still within the warranty period, before deploying the airbag, the HONDA District Service Manager must give approval and/or special instruction.

Only after an airbag is already deployed (as the result of vehicle collision, for example), can the normal scrapping procedure be done.


If the airbag appears, intact (not deployed), it should be treated with extreme caution.

Follow the procedure, described below.


1. Turn the ignition switch off, then disconnect the negative and positive battery cables, and wait three minutes.
2. Remove the special bolts using a TORX T30 bit, then remove the airbag assembly (see page 16-154).

CAUTION: Make sure the wheels are aligned straight ahead. Remove the left airbag assembly mounting special bolt first (the safety switch will automatically turn off).

3. Disconnect the SRS unit sub harness 5-P connector from the SRS unit, then remove the airbag assembly from the steering wheel.

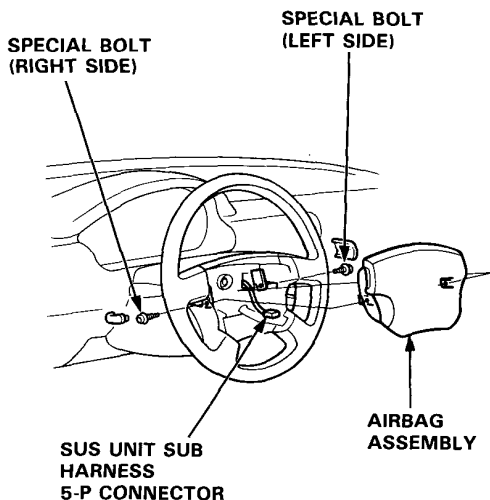


4. Remove the 3 SRS unit mounting nuts from the airbag assembly, then remove the SRS unit.

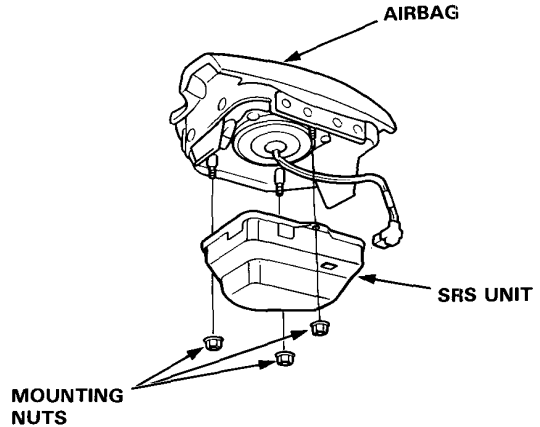

5. Install the SRS Disposal Bracket on the airbag assembly, and clamp it firmly into a vice.

WARNING Confirm that the airbag assembly is securely clamped or mounted; otherwise, severe personal injury could be caused by the deployment.


NOTE: Instead of using the SRS Disposal Bracket, the airbag assembly may be reinstalled to the steering wheel.

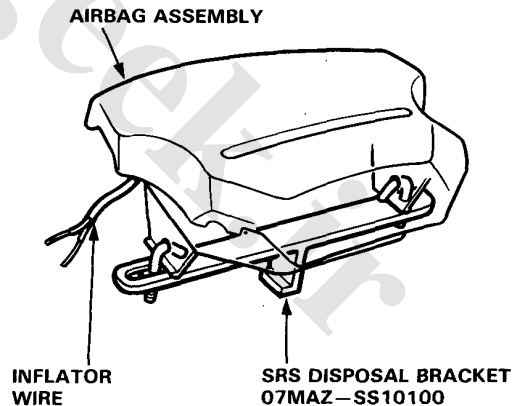

6. Cut off the airbag connector, then strip the wire ends.

7. Confirm that the Deployment Tool is functioning properly (see check procedure on this page).
8. Connect the alligator clips to the inflator wire ends.

▲ WARNING The distance between deployment tool and airbag assembly has to be at least 10 meters (30 ft).

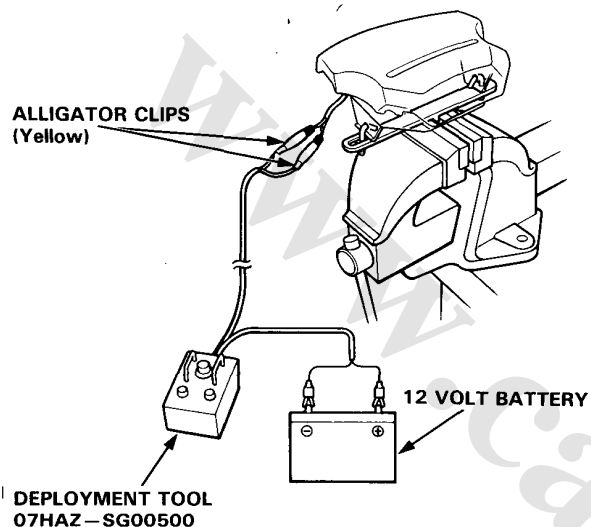


9. Connect a 12 volt battery to the tool:
 - If the green light on the tool goes on, the airbag igniter circuit is defective and cannot deploy the bag. Go to Damaged Airbag Special Procedure.
 - If the red light on the tool goes on, the airbag is ready to be deployed.
10. Push the tool's deployment switch. The airbag should deploy (deployment is both highly audible and visible—a loud noise and rapid inflation of the bag, followed by slow deflation).
 - If audible / visible deployment happens and the green light on the tool goes on, continue with this procedure.
 - If the airbag doesn't deploy, yet the green light goes on, it's igniter is defective. Go to Damaged Airbag Special Procedure.

▲ WARNING During deployment, the airbag assembly can become hot enough to burn you. Wait thirty minutes after deployment before touching the assembly.

11. Dispose of the complete airbag assembly. No part of it can be reused. Place it in a sturdy plastic bag and seal it securely.

CAUTION:

- Wear a face shield and gloves when handling a deployed airbag.
- Wash your hands and rinse them well with water after handling a deployed airbag.

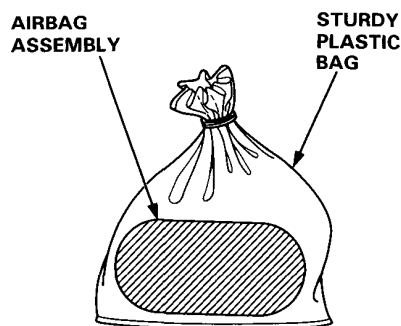

Damaged Airbag Special Procedure.

▲ WARNING If an airbag cannot be deployed, it should not be treated as normal scrap; it should still be considered a potentially explosive device that can cause serious injury.

1. If installed in a car, follow the removal procedure on page 16-154.
2. Package the airbag in exactly the same packaging that the new replacement part came in.
3. Mark the outside of the box "DAMAGED AIRBAG NOT DEPLOYED" so it does not get confused with your parts stock.
4. Contact your HONDA District Service Manager for how and where to return it for disposal.

Deployment Tool: Check Procedure.

1. Connect the yellow clips to both switch protector handles on the tool; connect the tool to a battery.
2. Push the operation switch: green means tool is OK; red means tool is faulty.
3. Disconnect the battery and the yellow clips.

Supplemental Restraint System (Type II)


Slip Ring Removal

⚠ WARNING Store a removed airbag assembly with the pad surface up, if the airbag is improperly stored face down, accidental deployment could propel the unit with enough force to cause serious injury.

CAUTION:


- Before beginning work related to the SRS system, turn the ignition switch off, disconnect the negative and positive battery cables, and wait three minutes.
- Do not install used SRS parts from another car. When repairing an SRS, use only new parts.
- Do not disassemble the slip ring. It has no serviceable parts and has to be replaced as a whole.
- The slip ring is a special part of models equippe with SRS. When replacing, be sure to use only a genuine HONDA spare part.
- Make sure the wheels are aligned straight ahead. Remove the left airbag assembly mounting special bolt first (the safety switch will automatically turn off).

1. Turn the ignition switch off, then disconnect the negative and positive battery cables, and wait three minutes.
2. Remove the airbag assembly (see page 16-154).
3. Remove the steering wheel, then remove the upper and lower steering column covers.

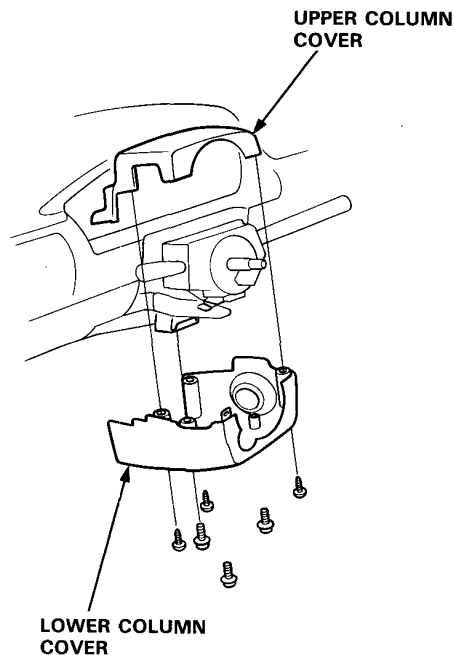

4. Pull out the connector lock, then disconnect the SRS main harness 5-P connector from the slip ring.

NOTE: Dispose of the connector lock, it is not to be reused.

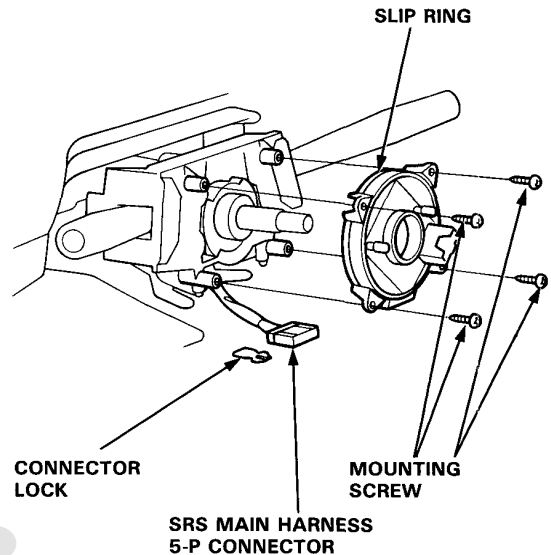


5. Remove the 4 mounting screws, then remove the slip ring.




Slip Ring Installation


1. Install the slip ring on the steering column, then connect the SRS main harness 5-P connector to the slip ring.

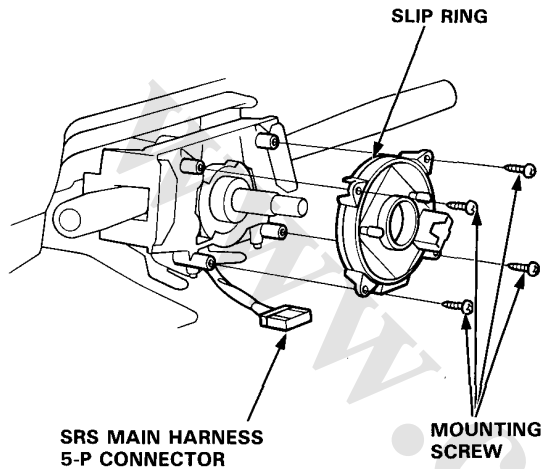

2. Install the steering column upper and lower covers.

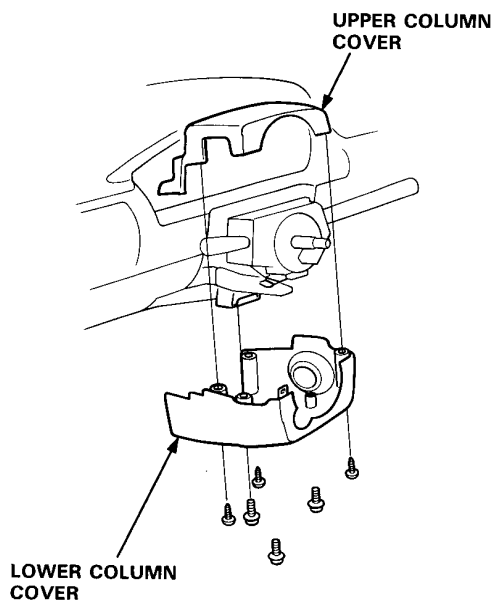

3. Install the steering wheel.

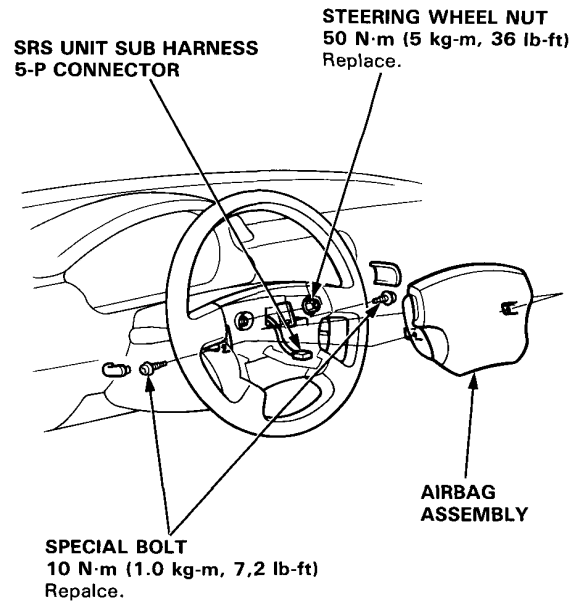

4. Connect the SRS unit sub harness 5-P connector to the SRS unit.
5. Place the airbag assembly into the steering wheel, and secure it with new special bolts.

NOTE: Be sure to torque the bolts as specified.

6. Reconnect the battery positive and negative cables.
7. After installing the slip ring, confirm proper system operation:

- Turn the ignition to ON; the instrument panel SRS indicator light should go on for about 6 seconds and then go off.
- The SRS self diagnosis indicator (LED) should blink one time with the ignition switch ON.



How to Use This Manual

This supplement contains information for the 1992 ACCORD COUPE. Refer to following shop manuals for service procedures and data not included in this supplement.

Description	Code No.
ACCORD CHASSIS Maintenance and Repair 90	62SM400
ACCORD SUPPLEMENT 91	62SM420
ACCORD AERO DECK SUPPLEMENT 91	61SM421
ACCORD SUPPLEMENT 92 F18A/F20A/F22A ENGINE Maintenance and Repair	62SM422 62PT400
H2 MANUAL TRANSMISSION Maintenance and Repair	62PX500
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400

The first page of each section is marked with a black tab that lines up with one of the thumb index tabs on this page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Special Information

⚠ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of *standard* workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause **PERSONAL INJURY**, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda, might be done, or of the possible hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, *must satisfy himself thoroughly* that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

marked sections are not included in this manual.

Special Tools



Specifications

specs

Maintenance



Engine



Cooling



Fuel and Emissions



* Transaxle



* Steering



Suspension




* Brakes (Including **ABS**)



* Body



* Heater and Air Conditioner



* Electrical (Including **SRS**)



As sections with * include SRS components, special precautions are required, when servicing.

Chassis and Engine Numbers
Identification Number Locations
Label Locations
Lift and Support Points
Towing
Preparation of Work
Symbol Marks
Abbreviations

www.cargeek.ir

Chassis and Engine Numbers

Vehicle Identification Number 1HGCC11400A000001

Manufacturer, Make and Type of Vehicle _____
1HG: HONDA OF AMERICA MFG., INC., U.S.A.
HONDA Passenger car

Body Type _____
CC1: ACCORD 2.0 ℓ

Body and Transmission Type _____
1: 2-door Coupe 5-speed Manual
2: 2-door Coupe 4-speed Automatic

Vehicle Grade _____
4: Without air conditioner
5: With air conditioner

Fixed Code _____

Auxiliary Number _____

Factory Code _____
A: Ohio Factory in U.S.A. (Marysvill)

Model Year _____
0: 1992

Serial Number _____

Engine Number F20A7-1000001

Engine Type _____
F20A7: 2.0 ℓ Fuel-injected engine
Unleaded gasoline with CATA (KF/KG/KE)

Transmission Type _____
10: Manual
15: Automatic

Serial Number _____


Transmission Number H2C4-7000001

Transmission Type _____
H2C4: Manual
APXA: Automatic

Serial Number _____
Manual: 7000001 ~
Automatic: 6000001 ~







Identification Number Locations

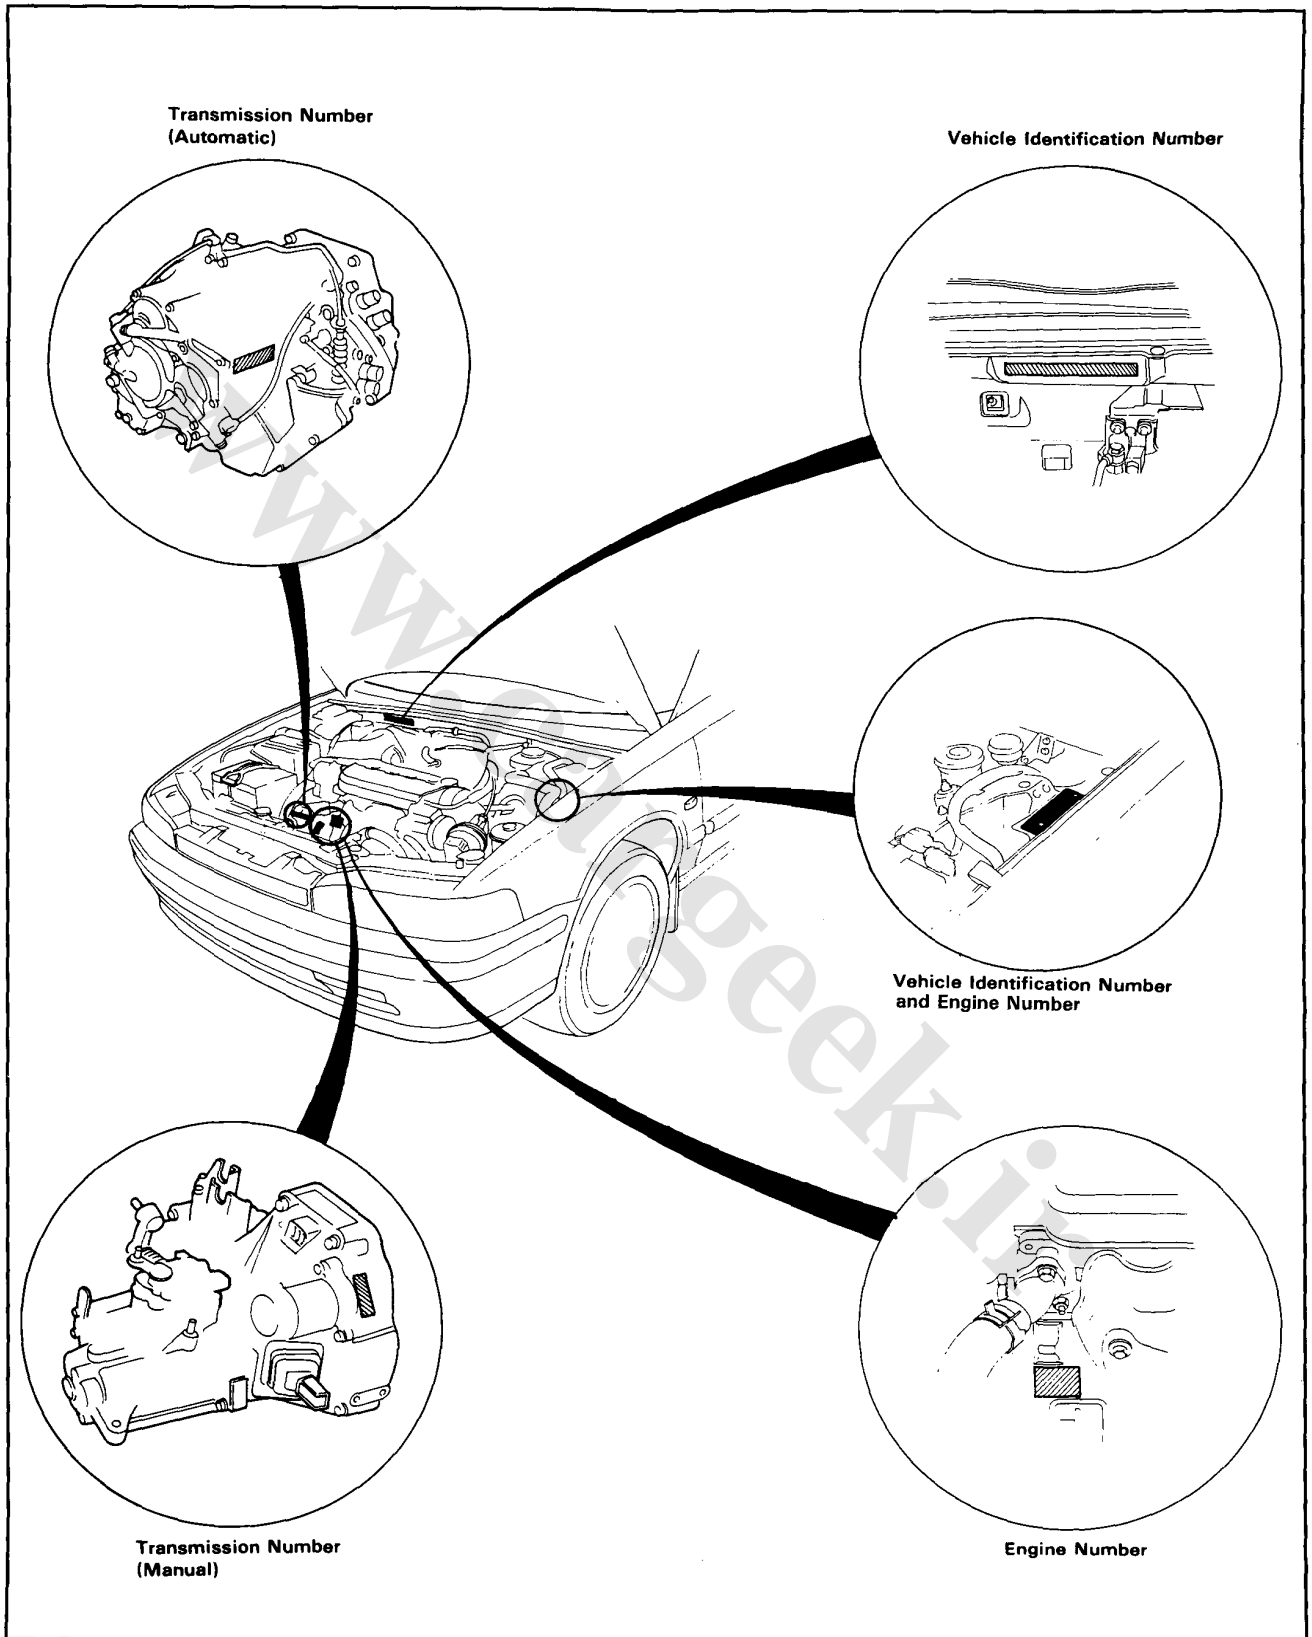

Label Locations

Warning/Caution Labels (SRS)

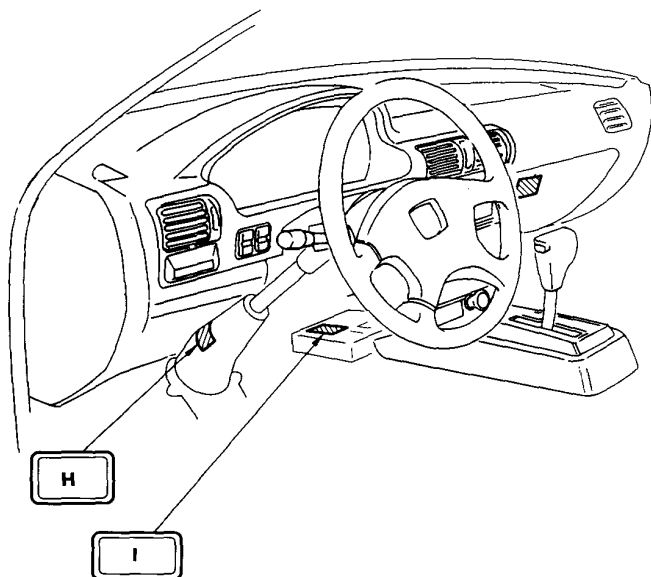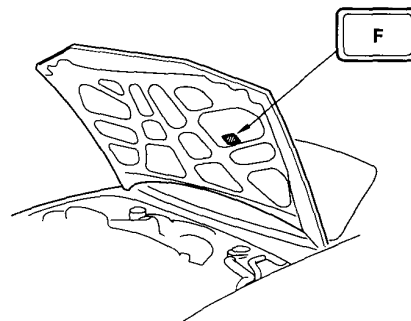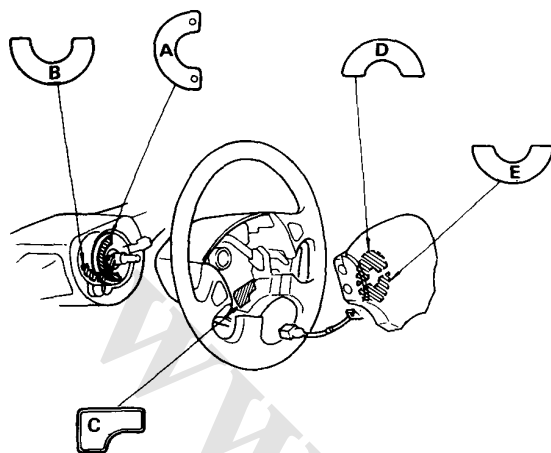

A: CABLE REEL CAUTION A

SRS

CAUTION

- REFER TO THE SHOP MANUAL.
- ATTENTION**
- SE REPORTER AU MANUAL D'ATELIER.
- ACHTUNG**
- WERKSTATTHANDBUCH LESEN.
- WAARSCHUWING**
- LEES HET WERKPLAATSHANOBEEK.

B: CABLE REEL CAUTION B

SRS

CAUTION

- REFER TO THE SHOP MANUAL.
- ATTENTION**
- SE REPORTER AU MANUEL D'ATELIER.
- ACHTUNG**
- WERKSTATTHANDBUCH LESEN.
- WAARSCHUWING**
- LES HET WERKPLAATSHANOBEEK.

C: STEERING WHEEL WARNING

WARNING

SRS

- REFER TO THE SHOP MANUAL.
- SE REPORTER AU MANUEL D'ATELIER.
- WERKSTATTHANDBUCH LESEN.
- LEES HET WERKPLAATSHANOBEEK.

**D: INFLATOR COVER LABEL**

- **DANGER**
EXPLOSIVE/FLAMMABLE
POISON
REFER TO THE SHOP MANUAL.
- **DANGER**
EXPLOSIF ET INFLAMMABLE
POISON
SE REPORTER AU MANUEL D'ATELIER
- **GEFAHR**
EXPLOSIV/ENTZÜNDBAR
GIFT
WERKSTATTHANDBUCH LESEN.
- **GEVAAR**
EXPLOSIEGEVAAR/BPANDBAAR
GIFTIG
LEES HET WERKPLAATSHANDBOEK.

E: MODULE WARNING

- WARNING** **SRS**
- REFER TO THE SHOP MANUAL.
 - SE REPORTER AU MANUEL D'ATELIER.
 - WERKSTATTHANDBUCH LESEN.
 - LEES HET WERKPLAATSHANDBOEK.

F: ENGINE HOOD WARNING

WARNING **SRS**
THIS VEHICLE IS EQUIPPED WITH A AIRBAG SYSTEM AS A SUPPLEMENTAL RESTRAINT SYSTEM. (SRS)
ALL S.R.S. ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW.
DO NOT USE ELECTRICAL TEST EQUIPMENT ON THESE CIRCUITS.
TAMPERING WITH OR DISCONNECTING THE S.R.S. WIRING COULD RESULT IN ACCIDENTAL FIRING OF THE INFLATOR OR MAKE THE SYSTEM INOPERATIVE WHICH MAY RESULT IN SERIOUS INJURY.

ATTENTION **SRS**
CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.).
TOUS LES FILS ET CONNECTEURS ELECTRIQUES DU SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.) SONT DE COULEUR JAUNE. N'UTILISEZ PAS UN EQUIPMENT D'ESSAIS ELECTRIQUES SUR CES CIRCUITS. NE TOUCHEZ PAS ET NE DEBRANCHEZ PAS LES FILS DU SYSTEME S.R.S. CAR CECI POURRAIT DE TRADUIRE PAR LE DECLENCHEMENT ACCIDENTEL DU GONFLEUR OU RENDRE LE SYSTEME INOPERANT ET VOUS EXPOSER AINSI A DE GRAVES BLESSURES.

WARNING **SRS**
DIESES FAHRZEUG IST MIT EINEM FAHRER-AIRBAG (SRS) ALS ZUSÄTZLICHEM RÜCKHALTESYSTEM AUSGERÜSTET.
ALLE ELEKTRISCHEN KABEL, SOWIE DIE ZUGEHÖRIGEN STECKVERBINDER DES S.R.S.-SYSTEMS SIND IN GELBER FARBE AUSGEFÜHRT.
KEINE ELEKTRISCHEN PRÜFGERÄTE AN DIE S.R.S.-VERKABELUNG ANSCHLIEBEN.
VERÄNDERN ODER UNTERBRECHEN DER S.R.S.-VERKABELUNG KANN UNKONTROLLIERTES ZÜNDEN DES GASGENERATORS AUSLÖSEN. ODER DAS SYSTEM AUßER FUNKTION SETZEN WAS ZU ERNSTHAFTEN VERLETZUNGEN FÜHREN KANN.

WAARSCHUWING **SRS**
DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.).
ALLE ELEKTRISCHE LEIDINGEN EN AANSLUITINGEN VAN DE S.R.S. ZIJN GEEL GEKLEURD. GEBRUIK GEEN ELEKTRISCHE TESTAPPARATUUR VOOR DEZE CIRCUITS. KNOEIEN MET OF LOSKOPPELEN VAN DE S.R.S. LEIDINGEN KAN LEIDEN TOT BRAND IN DE VULINRICHTING OF TOT UITSCHAKELEN VAN HET SYSTEEM DIT KAN TOT ERNSTIGE ONGELUKKEN LEIDEN.

(cont'd)

Label Locations

Warning/Caution Labels (SRS) (cont'd)

G: DRIVER INFORMATION

SRS ALWAYS WEAR YOUR SEAT BELT

- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS)
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
- IF YOUR SRS INDICATOR LIGHTS WHILE DRIVING SEE YOUR AUTHORIZED HONDA DEALER.

SRS ATTACHEZ TOUJOURS VOTRE CEINTURE

- CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUECOMPLEMENTAIRE (S.R.S.).
- CE COUSSIN D'AIR COMPLETE LA FONCTION DE LA CEINTURE DE SECURITE.
- SI LE TEMOIN SRS S'ALLUME PENDANT LA CONDUITE.
ADRESSEZ VOUS A VOTRE CONCESSIONNAIRE HONDA OFFICIEL.

SRS SICHERHEITSGURTE BEI JEDER FAHRT ANLEGEN

- DIESES FAHRZEUG BESITZT EINEN FAHRER AIRBAG ALS ZUSATZLICHES RUCKHALE-SYSTEM (S.R.S.).
- ES IST EINE EPGANZUNG ZUM SICHERHEITSGURT.
- WENN DIE SRS KONTROLLEUCHE WAHREND DER FAHRT AUFLEUCHTET UMGEHEND FINEN HONDA HANDLER AUFsuchen.

SRS DRAAG ALTIJD UW VEILIGHEIDSGORDEL

- DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDESKANT ALS EXTRA BESCHERMING (S.R.S.).
- DIT IS ONTWERPEN ALS EXTRA BESCHERMING BIJ DE VEILIGHEIDSGORDEL.
- ALS HEL SRS-WAARSCHUWINGSLAMPJE GAAT BRANDEN ONDER HET RIJDEN, NEEM DAN KONTAKT OP MET EEN HONDA DEALER.

H: STEERING COLUMN CAUTION (KE)

CAUTION **SRS**

TO AVOID DAMAGING THE S.R.S. CABLE OR REEL, WHICH COULD MAKE THE SYSTEM INOPERATIVE. REMOVE THE STEERING WHEEL BEFORE REMOVING THE STEERING SHAFT CONNECTOR BOLT.

ATTENTION **SRS**

POUR NE PAS RISQUER D'ENDOMMAGER LE CABLE OU L'ENROULEUR DU S.R.S. ET DE RENDRE AINST LE SYSTEME INOPERANT RETIREZ LE VOLANT AVANT DE DEVINSSER LE BOULON D'ACCOUPEMENT D'ARBRE DE DIRECTION.

H: STEERING COLUMN CAUTION (KG)

ACHTUNG **SRS**

UM EINE BESCHÄDIGUNG DER SRS-VERKABELUNG, DIE ZUM AUSTALL DES SYSTEMS FÜHREN KANN ZU VERHINDERN, IMMER DAS LENKRAD VOR DEM LENKSELLENVERBINDUNGSBOLZEN AUSBAUEN.

WAARSCHUWING **SRS**

OM TE VOORKOMEN DAT DE S.R.S. -KABEL OF -HASPEL BESCHADIGD WORDEN, HETGEEN ERTOE ZOU LEIDEN DAT HET SYSTEEM UITVALT, DIENT U HET STUUR TE VERWIJDEREN VOORDAT U DE STUURSCHACHTCONNECTORBOUT VERWIJDERT.

I: SRS UNIT CAUTION

CAUTION **SRS**

- NO SERVICEABLE PARTS INSIDE.
- DO NOT DISASSEMBLE OR TAMPER.
- DO NOT DROP.
- STORE IN A CLEAN, DRY AREA.

ATTENTION

- AUCUN POINT D'INTERVENTION A L'INTERIEUR.
- NO PAS DEMONTER OU TOUCHER.
- NO PAS FAIRE TOMBER.
- RANGER DANS UN ENDROIT PROPRE ET SEC.

WAARSCHUWING


- BINNENIN BEVINDEN ZICH GEEN OHDER DELEN DIE AAN ONDERHOUD ONDERHEVIG ZIJN.
- DEMONTEER NIETS EN KNCI NIET AAN DE S.R.S.
- LAAT DE S.R.S. NIET VALLEN.

ACHTUNG

- WARTUNGSFREIES BAUTEIL: NICHT ÖFFNEN, ZERLEGEN, ODER VERÄNDERN!
- NICHT WERFEN!
- TROCKEN UND GESCHOTZT LAGERN!



Warning/Caution Labels (except SRS)

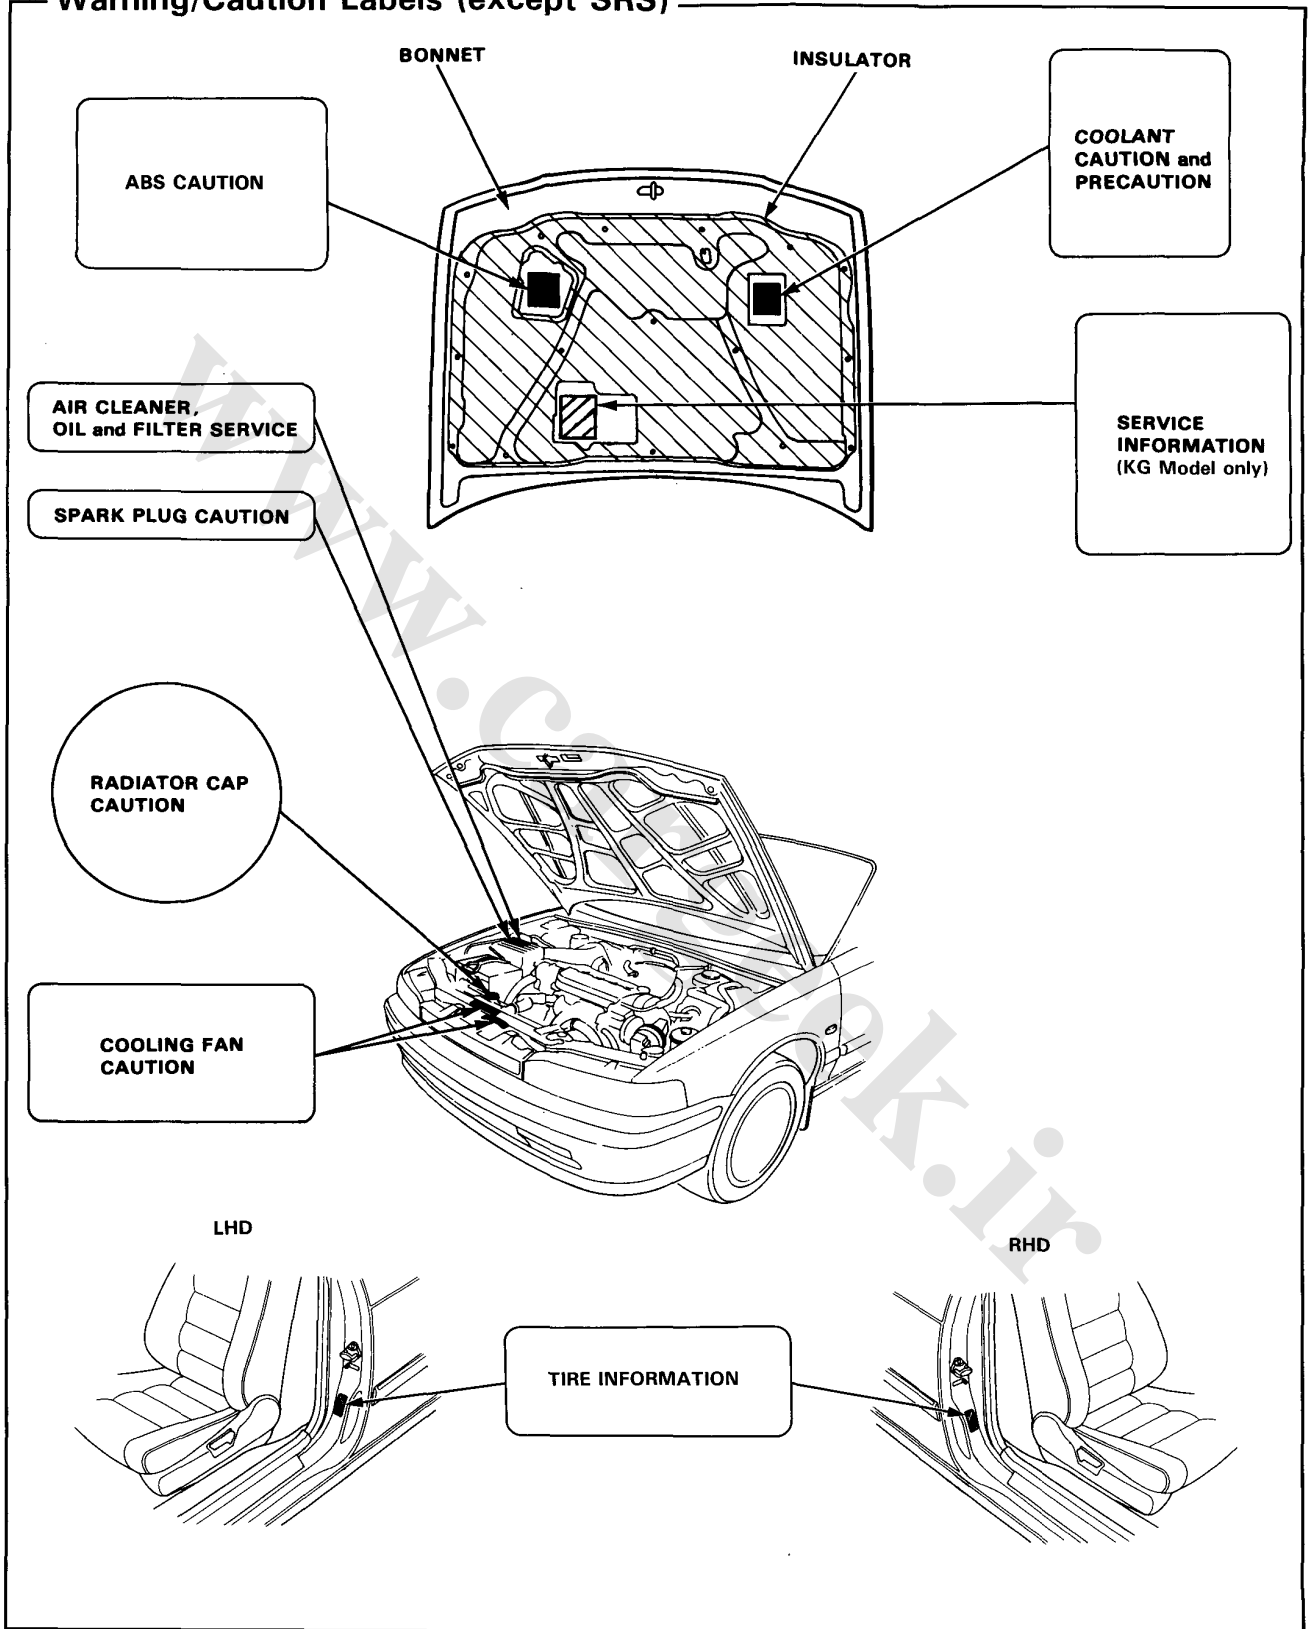



Lift and Support Points

Hoist


1. Place the lift blocks as shown.
2. Raise the hoist a few centimeters (inches) and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

⚠ WARNING When heavy rear components such as suspension, fuel tank, spare tire and tailgate are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight transfer.

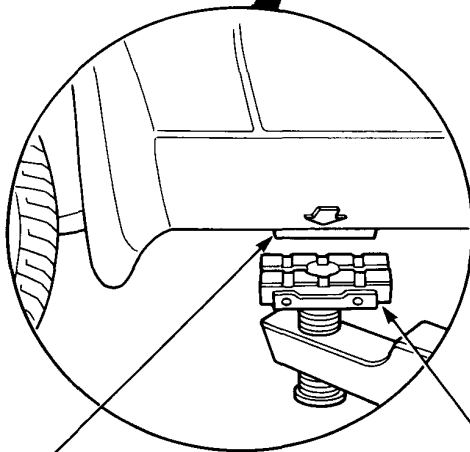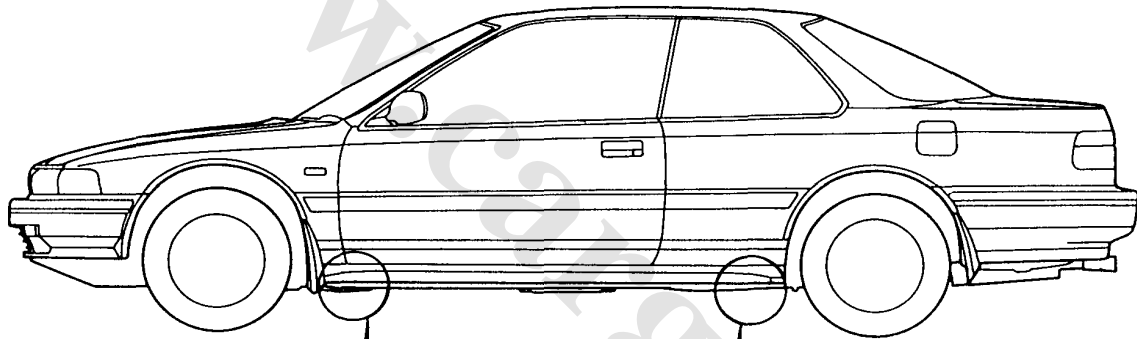

FRONT SUPPORT POINT

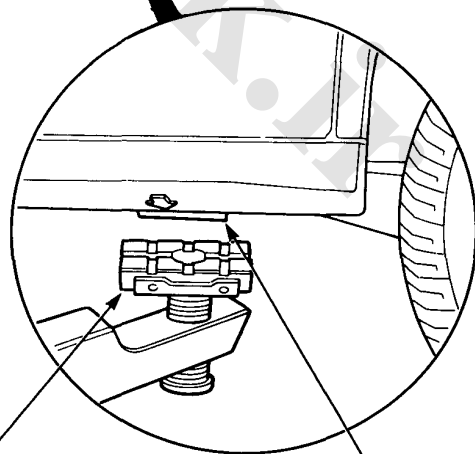

LIFT BLOCKS

REAR SUPPORT POINT




Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic in PARK).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-7 so the car will be approximately level, then lower the car onto the stands.


⚠ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front



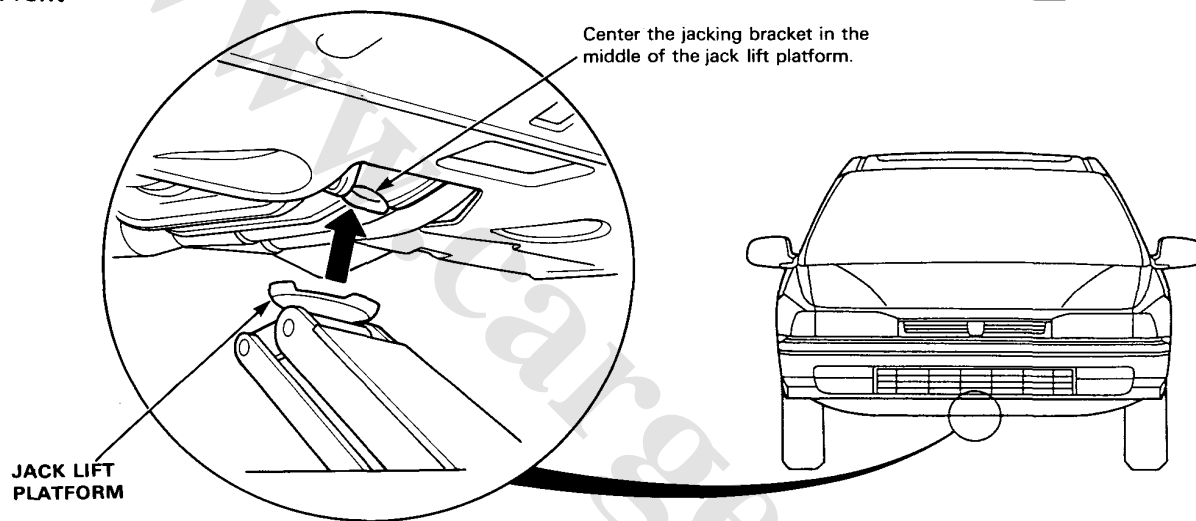


Rear

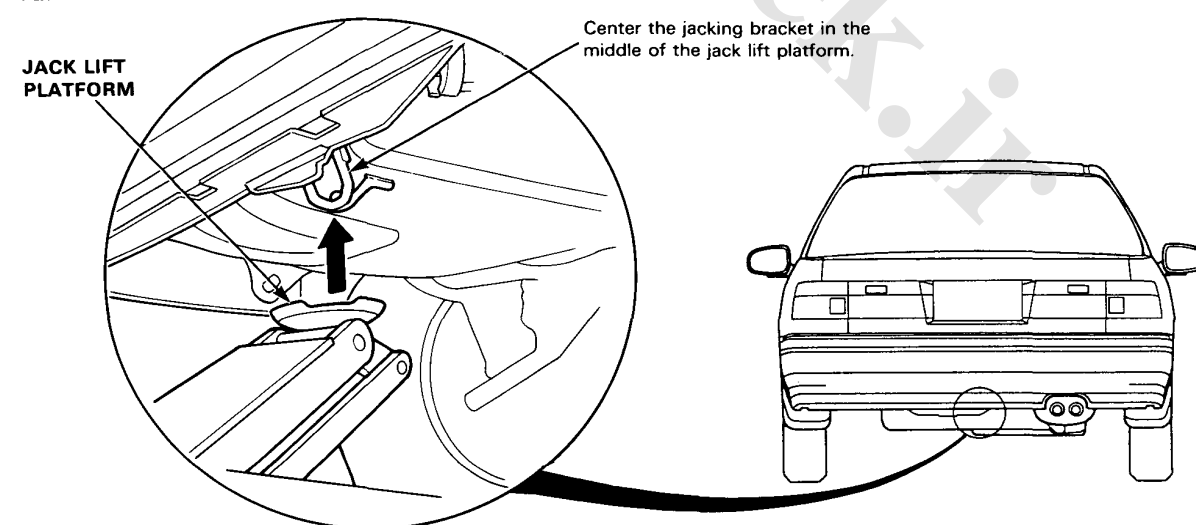

Lift and Support Points (cont'd)

Safety Stands

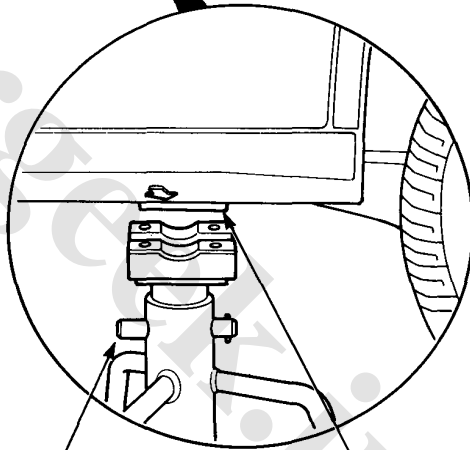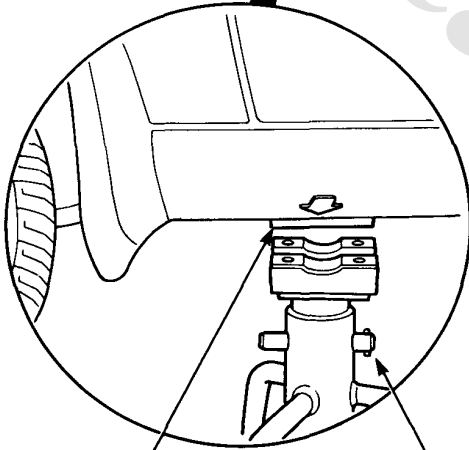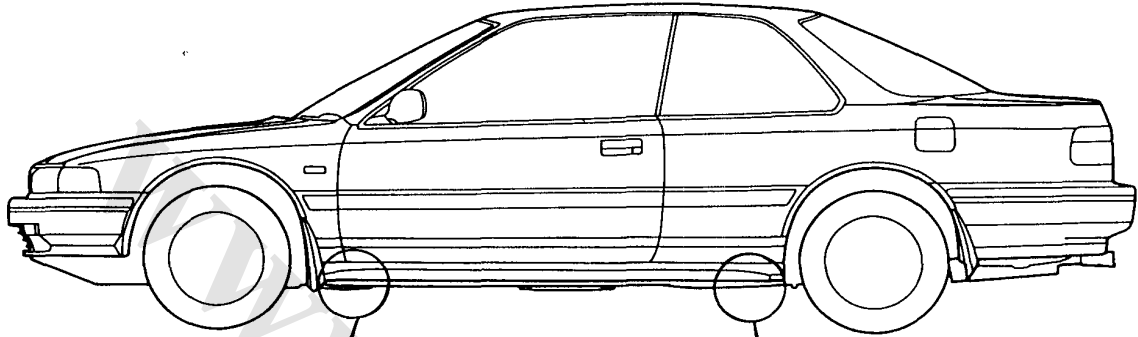

FRONT SUPPORT POINT

SAFETY STANDS

REAR SUPPORT POINT



Towing

If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and his chains and lift straps, to avoid damaging the bumper and the body under it.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A chain may be attached to the hook shown in the picture. Do not attach a tow bar to either bumper.

⚠ WARNING

DO NOT push or tow a car to start it. The forward surge when the engine starts could cause a collision. Also, under some conditions, the catalytic converter could be damaged. A car equipped with an automatic transmission cannot be started by pushing or towing.

If the car is to be towed with the front wheels on the ground, observe the following precautions:

Manual Transmission

Shift the transmission to Neutral and turn the ignition key to the "I" position.


Automatic Transmission

First, check the automatic transmission fluid level. Start the engine and shift to D₄, then to N. Return the ignition key to the "I" position.

CAUTION:

- Do not tow with front wheels on the ground when the automatic transmission fluid level is low or the transmission cannot be shifted with the engine running.
- Do not exceed 55 km/h (35 mph) or tow for distances of more than 80 km (50 miles).

TIE DOWN BRACKETS

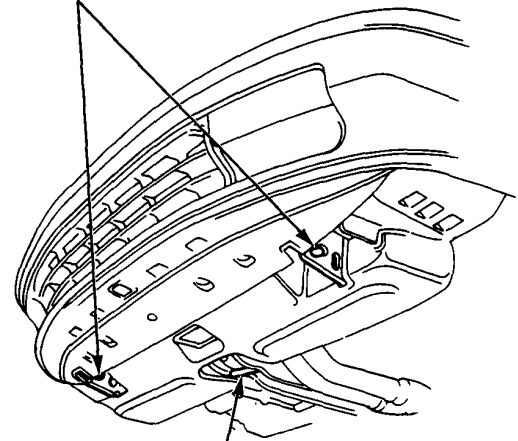


TOWING HOOK

Preparation of Work

Special Caution Items For This Car

- Anti-lock brake system piping system servicing
 - Disassemble the anti-lock brake system piping system after relieve the high-pressured brake fluid.
 - Otherwise, the high-pressured brake fluid will burst out and it is very dangerous.
 - See section 13 of base manual (62SM400) how to relieve the high-pressured brake fluid.


Bleeder T WRENCH
07HAA-SG00101

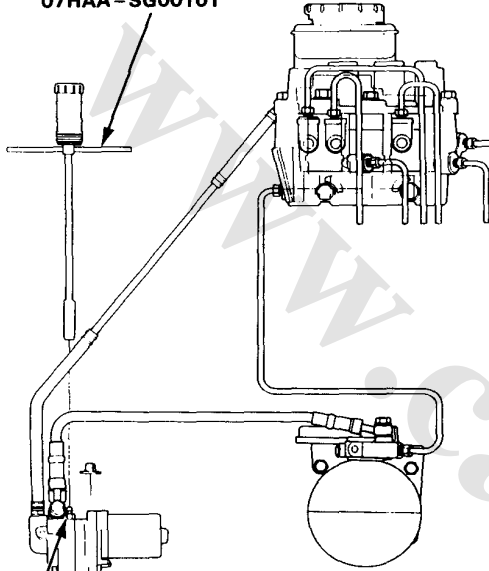

SERVICE BOLT
6 N·m (0.6 kg-m, 4 lb-ft)


- Fuel Line Servicing
 - Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

SERVICE BOLT
12 N·m (1.2 kg-m, 9 lb-ft)

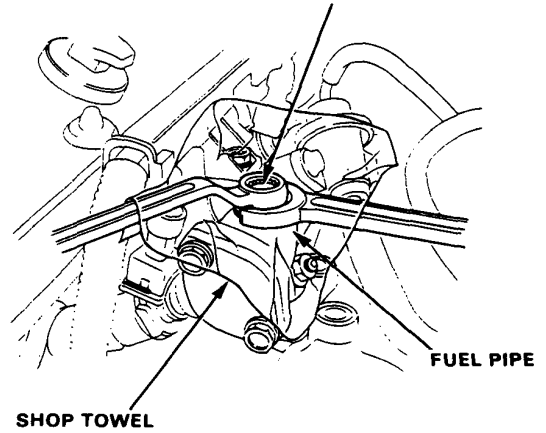




- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

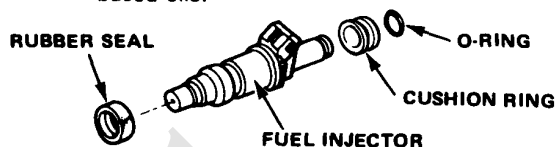

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

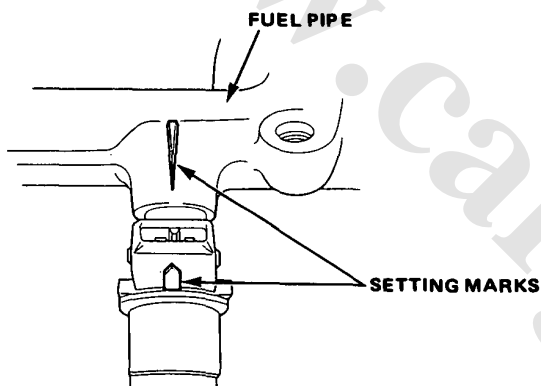

- **Inspection for fuel leakage**
 - After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

- Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, A/T, Cruise control and anti-lock brake system control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in.) away from the control units.

The control unit locations:


- Fuel-Injection, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- Anti-lock brake system: Right side panel of trunk room.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring. When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).

- Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine liquid gasket part No. 0Y740-99986.
 - Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
 - Apply liquid gasket evenly, being careful to cover all the mating surface.
 - To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
 - Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing the old residue.
 - Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


Preparation of Work

CAUTION: Observe all safety precautions and notes while working.


- Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

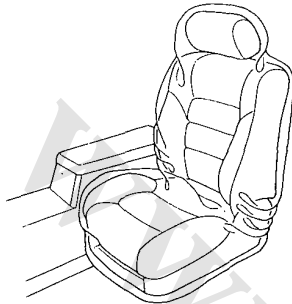


- Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate at frequently as possible when work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

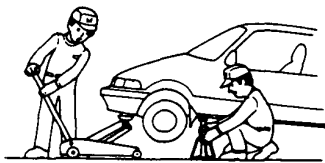


- Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.

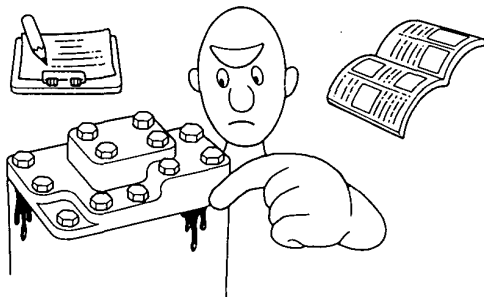


- Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.

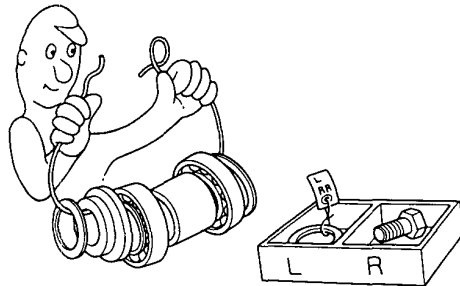

- Use the special tool when use of such a tool is specified.

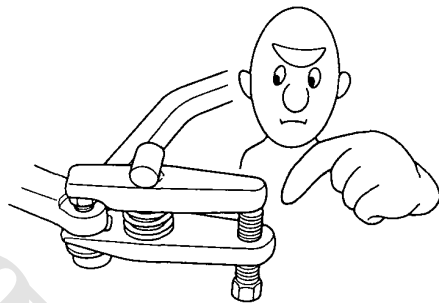


- Parts must be assembled with the proper torque according to the maintenance standards established.
- When tightening a series of bolts or nuts, begin with the center or large diameter bolts and tighten them in crisscross pattern in two or more steps.

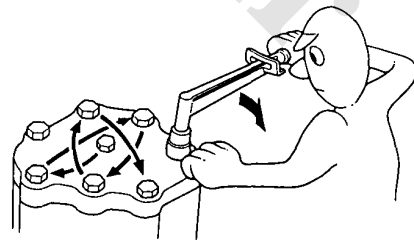




- Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

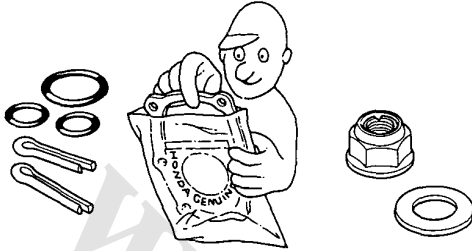

- Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

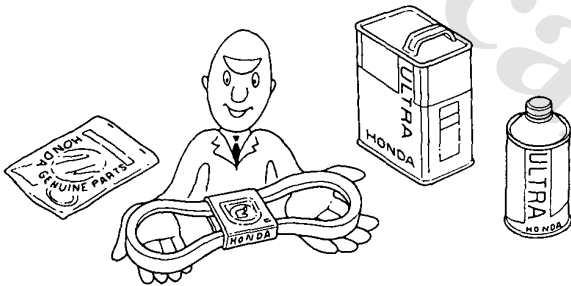


- Coat or fill parts with specified grease as specified (page 4-2). Clean all removed parts with solvent upon disassembly.



- Brake fluid and hydraulic components


- When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
- Do not mix different brands of fluid as they may not be compatible.
- Do not reuse drained brake fluid.
- Because brake fluid can cause damage to painted and resin surfaces, care should be taken not to spill it on such materials. If spilled accidentally, quickly rinse it with water or warm water from painted or resin surfaces.
- After disconnecting brake hoses or pipes, be sure to plug the openings to prevent loss of brake fluid.
- Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.

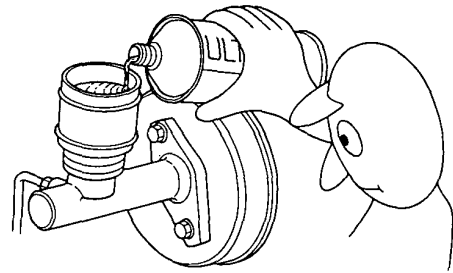

- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.

- Avoid oil or grease getting on rubber parts and tubes, unless specified.


- Upon assembling, check every part for proper installation and operation.

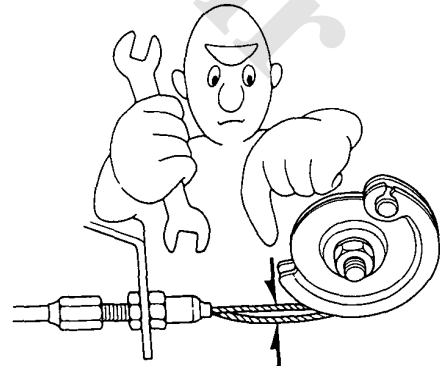


Preparation of Work

Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

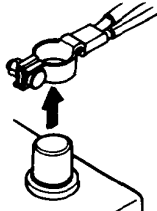


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

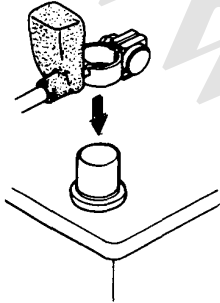

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.


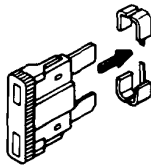


- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

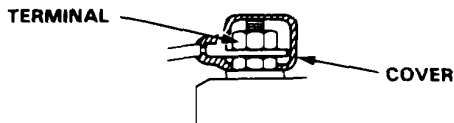


- As to locking connectors, be sure to disengage the lock before disconnecting.
- Conventional connectors may be of two types, those in which the lock is pressed to remove, and those in which the lock is pulled up to remove. Be sure to ascertain the type of locking device before beginning work. The following is a depiction of the means of disconnecting various typical connectors.

Press to disengage:

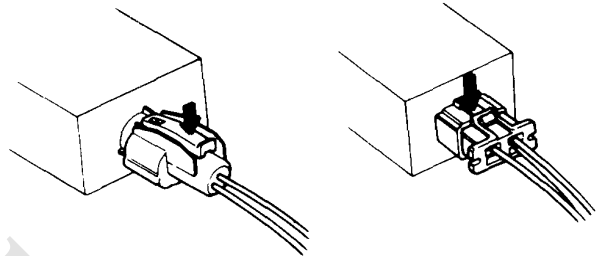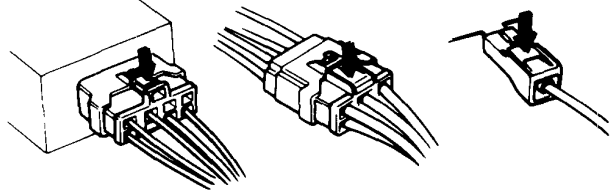


Pull up to disengage:

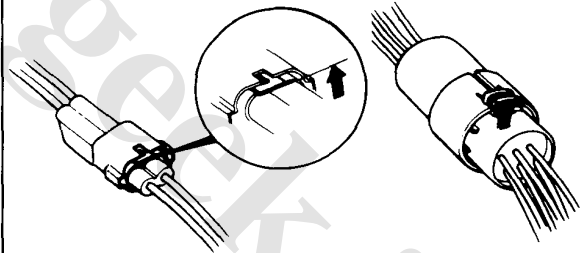




Connection and disconnection of them should be done paying attention to the following precautions.

- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector.
Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

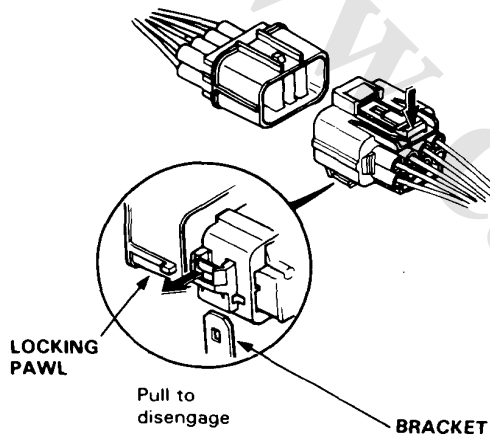

- Push the locking tab to disconnect.

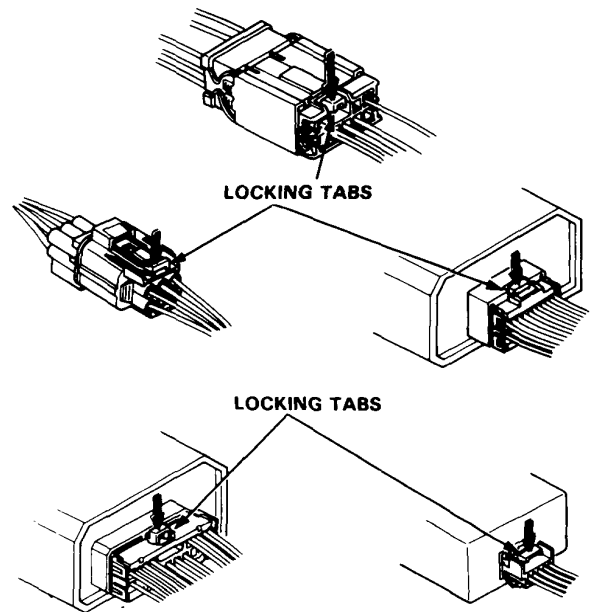


(cont'd)


Preparation of Work

Electrical (cont'd)

- Pull the locking tab to remove the connector from the bracket.

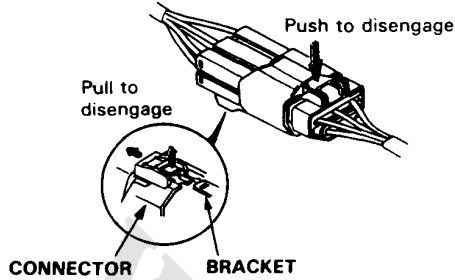


- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

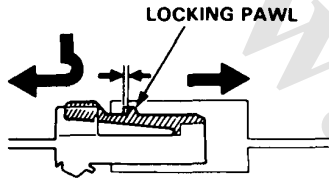


- When disconnecting a connector, pull it off from the mating connector by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.


Good

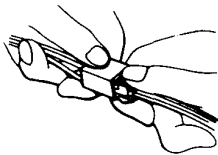

No Good

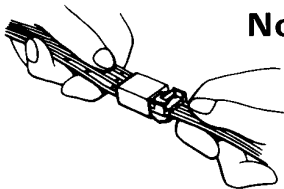


No Good

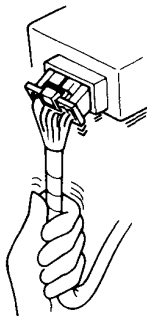


- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

No Good

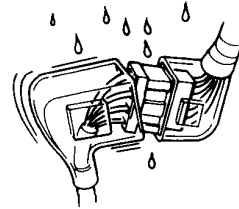


- Before connecting connectors, check to see that the terminals are in place and not bent or distorted.

No Good

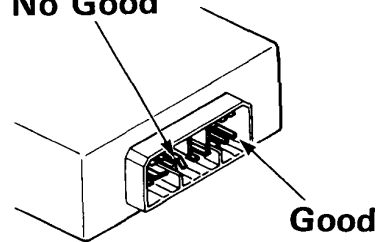


- Check for loose retainer and rubber seals. The illustration shows examples of terminal and seal abnormality.

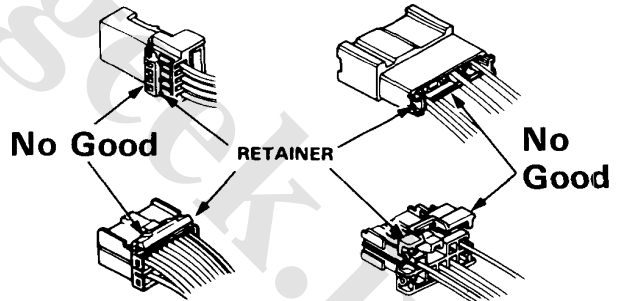

- Example of waterproof connector:

No Good

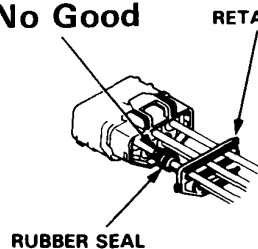


RETAINER

RUBBER SEAL


RUBBER SEAL

No Good

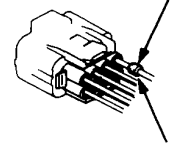





Good

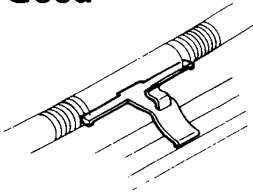


No Good

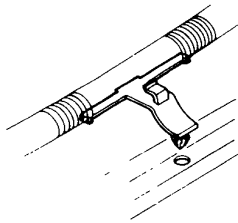


Good

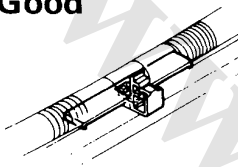


No Good

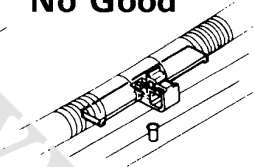


- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

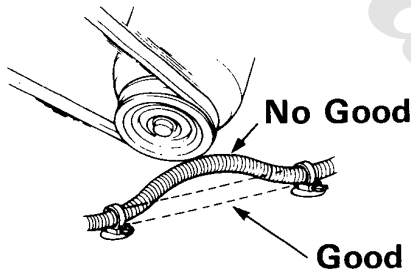


- Always keep a safe distance between wire harnesses and any heated parts.

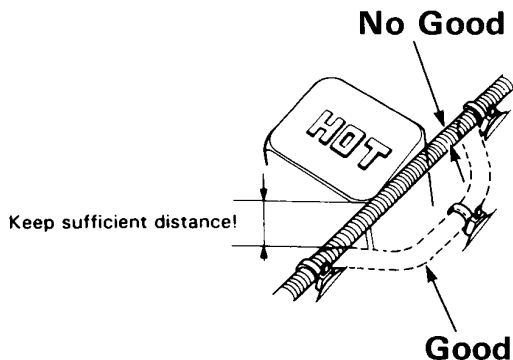

- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

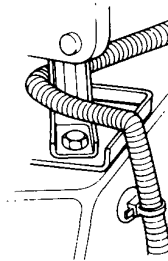


No Good

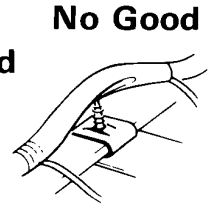

No Good


- Route harnesses so they are not pulled taut or slackened excessively.

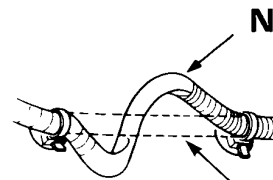

No Good

Good


- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

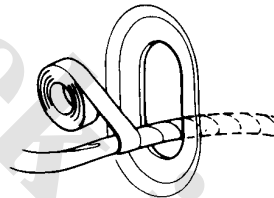

- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

Good

No Good




(cont'd)

Preparation of Work

Electrical (cont'd)


- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

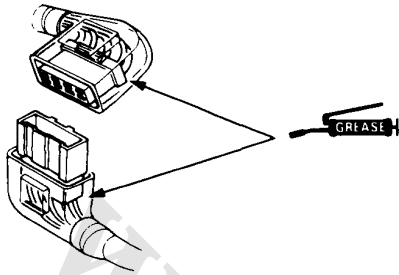


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.




- The locking tab with an angle end should be pushed when connecting.




- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Do not use wire harnesses with a loose wire or connector.

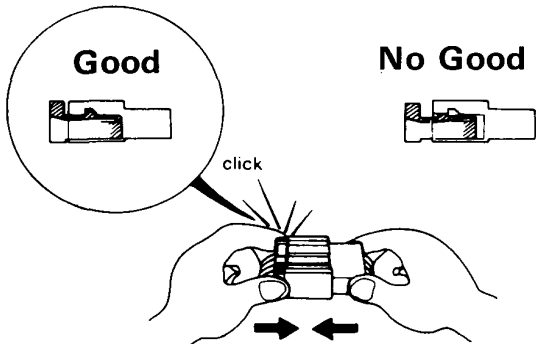


- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

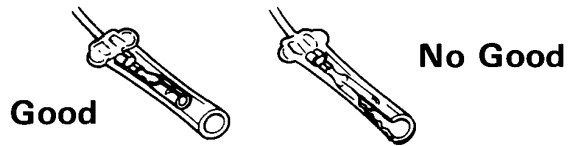

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open end of the cover faces down.

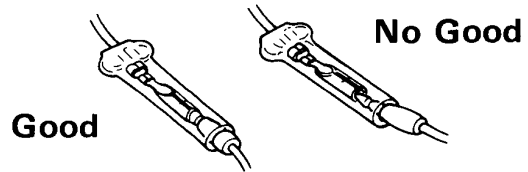


- Secure wires and wire harness to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or harnesses.
- Remove with care not to damage the lock.

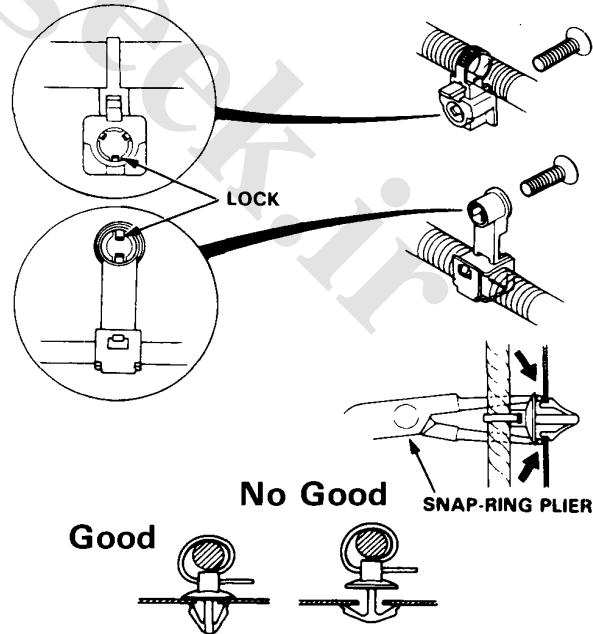




- Seat grommets in their grooves properly.

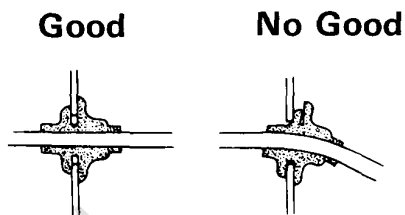

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

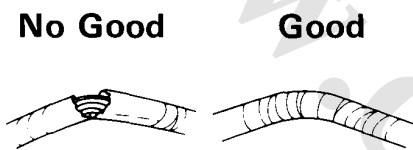


- After installing parts, make sure that wire harnesses are not pinched.




- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfering with adjacent or surrounding parts in all steering positions.

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

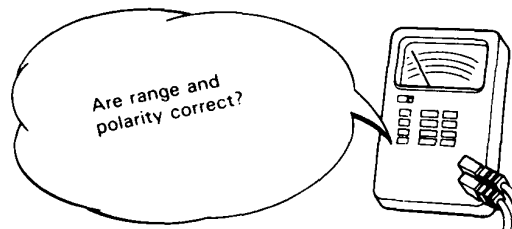

- Always insert the probe of the tester from the wire harness side (except waterproof connector).

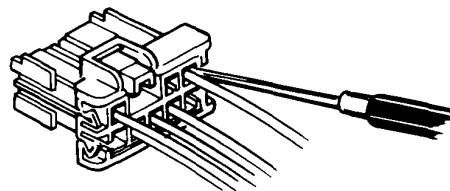

- Make sure to use the probe with a tapered tip.



- Do not drop parts.



Symbol Marks

Abbreviation

The following symbols stand for:



:Apply engine oil.



:Apply brake fluid.



:Apply grease.



:Apply Automatic Transmission Fluid.



: Apply Power Steering Fluid.



:Apply or check vacuum.

①, ②, ③, :

①, ②, ③, :

:Sequence for removal or installation.

A/C	Air Conditioner
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
B or BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	PGM-FI Electronic Control Unit
EGR	Exhaust Gas Recirculation
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L	Left
LHD	Left Hand Drive
M/T	Manual Transmission
PCV	Positive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
P/S	Power Steering
R	Right
RHD	Right Hand Drive
SW	Switch
SOL. V	Solenoid Valve
TDC	Top Dead Center

P	Parking
R	Reverse
N	Neutral
D ₄	Drive Position (1st-4th)
D ₃	Drive Position (1st-3rd)
2	Fixed 2nd speed
1	Fixed 1st speed
S	S Mode (D ₄ or D ₃)

Tool List

www.cargeek.ir

Special Tools

5. Engine

Number	Tool Number	Description	Qty	Remarks
①	07GAF—PH60300	Piston Pin Base Insert	1	07973-PE00400 may also be used
②	07GAF—PH70100	Pilot Collar	1	
③	07HAD—PJ70200	Valve Guide Seal Installer	1	
④	07HAF—PL20102	Piston Base Head	1	
⑤	07HAH—PJ70100	Valve Guide Reamer 5.5 mm	1	
⑥	07JAB—0010000	Crank Pulley Holder Set	(1)	
⑥-1	07JAA—0010200	Socket Wrench 19 mm	1	
⑥-2	07JAB—0010200	Handle	1	
⑦	07JAB—0010400	Pulley Holder Attachment HEX 50 mm	1	
⑧	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
⑨	07JGG—0010100	Belt Tension Gauge	1	
⑩	07KAK—SJ40101 or 07KAK—SJ40100	Engine Tilt Hanger Set	1	
⑪	07LAB—PV00100 or 07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
⑫	07LAF—PT20100	Bearing Replacement Tool Set	1	
⑬	07LAG—PT20100	Balancer Shaft Lock Pin	1	
⑭	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑮	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	1	Component Tools
⑯	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	1	
⑰	07406—0030000	Oil Pressure Gauge Adaptor	1	
⑱	07742—0010100	Valve Guide Remover 5.5 mm	1	
⑲	07746—0010300	Driver Attachment 42 x 47 mm	1	for Crankshaft
⑳	07746—0010400	Driver Attachment 52 x 55 mm	1	for Balancer Shaft
㉑	07749—0010000	Driver	1	
㉒	07757—0010000	Valve Spring Compressor	1	
㉓	07912—6110001	Oil Filter Socket	1	
㉔	07942—8920000	Valve Guide Driver 5.5 mm	1	
㉕	07948—SB00101	Driver Attachment	1	
㉖	07973—PE00310	Piston Pin Driver Shaft	1	Set No. 07973—PE00302
㉗	07973—PE00320	Piston Pin Driver Head	1	
㉘	07973—6570500	Piston Base	1	
㉙	07973—6570600	Piston Base Spring	1	

6. Fuel and Emissions

Number	Tool Number	Description	Qty	Remarks
①	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
②	07LAA—PT50101 or 07LAA—PT50100	O ₂ Sensor Socket Wrench	1	
③	07LAJ—PT30100 or 07LAJ—PT3010A	ECU Test Harness	1	
④	07LAJ—PT30200	Test Harness	1	
⑤	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑤-1	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑤-2	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑥	07406—0040001	Fuel Pressure Gauge Set	1	
⑥-1	07406—0040100	Pressure Gauge	(1)	Component Tools
⑥-2	07406—0040201	Hose Assembly	(1)	
⑦	07411—0020000	Digital Circuit Tester	1	
⑧	07614—0050100	Fuel Line Clamp	1	

7. Clutch

Number	Tool Number	Description	Qty	Remarks
①	07LAB—PV00100 or 07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
②	07JAF—PM7011A	Clutch Alignment Disc	1	
③	07LAF—PT00110	Clutch Alignment Shaft	1	
④	07936—3710100	Handle	1	



8. Manual Transmission

Number	Tool Number	Description	Qty	Remarks	
①	07GAJ—PG20102	Mainshaft Inspection Tool Set	1	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <p>①-1</p> <p>①-2</p> <p>③-1</p> <p>③-2</p> <p>③-3</p> </div> <div style="border-left: 1px solid black; padding-left: 5px;"> <p>Component Tools</p> </div> </div>	
①-1	07GAJ—PG20110	Mainshaft Holder	(1)		
①-2	07GAJ—PG20130	Mainshaft Base	(1)		
②	07HAJ—PK40201	Preload Inspection Tool	1		
③	07JAC—PH80000	Adjusting Bearing Remover Set	1		
③-1	07JAC—PH80100	Bearing Remover Attachment	(1)		
③-2	07JAC—PH80200	Bearing Remover Handle	(1)		
③-3	07741—0010201	Bearing Remover Weight	(1)		
④	07JAD—PH80400	Pilot Driver 28 mm	1		
⑤	07JAD—SH30100	Oil Seal Driver	1		
⑥	07744—0010400	Pin Driver 5.0 mm	1		07944—6110100 may also be used
⑦	07746—0010300	Attachment 42 x 47 mm	1		
⑧	07746—0010400	Attachment 52 x 55 mm	1		
⑨	07746—0010500	Attachment 62 x 68 mm	1		
⑩	07746—0010600	Attachment 72 x 75 mm	1		
⑪	07746—0030100	Driver	1		
⑫	07746—0030200	Inner Driver 25 mm	1		
⑬	07749—0010000	Driver	1		
⑭	07944—SA00000	Pin Driver 4.0 mm	1		
⑮	07947—6110501	Oil Seal Driver	1		
⑯	07979—PJ40001	Magnet Stand Base	1		

9. Automatic Transmission

Number	Tool Number	Description	Qty	Remarks	
①	07GAB—PF50101 or 07GAB—PF50100	Mainshaft Holder	1	<div style="display: flex; align-items: center;"> <div style="margin-right: 10px;"> <p>③</p> <p>③-1</p> <p>③-2</p> <p>③-3</p> </div> <div style="border-left: 1px solid black; padding-left: 5px;"> <p>Component Tools</p> </div> </div>	
②	07GAD—PG20100	Pin Driver 5.0 mm	1		
③	07GAE—PG40002	Clutch Spring Compressor Set	1		
③-1	07HAE—PL50100	Clutch Spring Compressor Attachment	(1)		
③-2	07GAE—PG40200	Clutch Spring Compressor Bolt Assembly	(1)		
③-3	07960—6120101	Clutch Spring Compressor Attachment	(1)		
④	07HAC—PK40101	Housing Puller	1		
④-1	07HAC—PK40110	Puller Base, Replacement	(1)		May also be used when combined with 07HAC—PK40101 or 07HAC—PK40100
⑤	07HAF—PK40100	Gear Installer	1		
⑥	07HAJ—PK40201 or 07GAJ—PG20200	Preload Inspection Tool	1		
⑦	07JAC—PH80000	Adjusting Bearing Remover Set	1		
⑦-1	07JAC—PH80100	Bearing Remover Attachment	(1)		
⑦-2	07JAC—PH80200	Bearing Handle Assembly	(1)		
⑦-3	07741—0010201	Remover Weight	(1)		
⑧	07JAD—PH80101	Driver Attachment	1		
⑨	07JAD—PH80400	Pilot Driver 28 x 30 mm	1		
⑩	07JAD—PN00100	Driver Attachment	1		
⑪	07LAE—PX40100	Clutch Spring Compressor Attachment	1		
⑫	07LAJ—PT30100 or 07LAJ—PT3010A	ECU Test Harness	1		
⑬	07NAD—PX40100	Attachment, 78 x 80 mm	1		
⑭	07406—0020003	Oil Pressure Gauge	1		
⑮	07406—0020201	Oil Pressure Gauge Hose	1		
⑯	07406—0070000	Low Pressure Gauge	1		
⑰	07746—0010400	Attachment 52 x 55 mm	1		
⑱	07746—0010500	Attachment 62 x 68 mm	1		
⑲	07746—0010600	Attachment 72 x 75 mm	1		
⑳	07746—0030100	Driver 40 mm I.D.	1		
㉑	07749—0010000	Driver	1		
㉒	07947—6340500	Driver Attachment E	1		

Special Tools

10. Driveshafts

Number	Tool Number	Description	Qty	Remarks
①	07GAD—PG40100	Seal Driver Attachment	1	
②	07GAF—SD40700	Hub Dis/Assembly Base	2	
③	07LAD—SM40100	Seal Driver Attachment	1	
④	07LAF—SM40300	Support Base Attachment	1	
⑤	07746—0010200	Attachment, 37 x 40 mm	1	
⑥	07746—0010300	Attachment, 42 x 47 mm	1	
⑦	07746—0030100	Driver, 40 mm I.D.	1	
⑧	07749—0010000	Driver	1	
⑨	07947—SD90101	Seal Driver Attachment	1	
⑩	07965—SD90100	Support Base	1	

11. Steering

Number	Tool Number	Description	Qty	Remarks
①	07GAG—SD40300	Cylinder End Seal Slider	1	
②	07HAG—SF10100	Piston Seal Ring Guide	1	
③	07HAG—SF10200	Piston Seal Ring Sizing Tool	1	
④	07GAG—SD40400	Piston Seal Ring Guide	1	
⑤	07JGG—0010100	Belt Tension Gauge	1	
⑥-1	07LAK—SM40110	P/S Joint Adaptor (Pump)	1	□ Set No. 07LAK—SM40100
⑥-2	07LAK—SM40120	P/S Joint Adaptor (Hose)	1	
⑦	07MAC—SL00200	Ball Joint Remover, 28 mm	1	
⑧	07406—0010001	P/S Pressure Gauge Set	1	
⑧-1	07406—0010300	Pressure Control Valve	1	
⑧-2	07406—0010400	Pressure Gauge	1	
⑨	07406—0010101	Bypass Tube Joint (included with 07406—0010001)	1	
⑩	07725—0030000	Universal Holder	1	
⑪	07746—0010300	Attachment 42 x 47 mm	1	
⑫	07749—0010000	Driver	1	
⑬	07MAA—SL00100 or 07916—SA50001	Locknut Wrench 40 mm	1	
⑭	07947—6340300	Driver Attachment	1	
⑮	07974—SA50600	Pinion Seal Guide	1	

12. Suspension

Number	Tool Number	Description	Qty	Remarks
①	07GAE—SE00101	Spring Compressor	1	
②	07GAF—SD40100	Hub Assembly Pin	1	
③	07GAG—SD40700	Ball Joint Clip Installation Guide	1	
④	07HAF—SF10100	Ball Joint Dis/Assembly Tool Set	1	
④-1	07HAF—SF10110	Ball Joint Remover Base	1	
④-2	07HAF—SF10120	Ball Joint Installer Base	1	
④-3	07HAF—SF10130	Ball Joint Remover/Installer	1	
⑤	07MAC—SL00200	Ball Joint Remover, 28 mm	1	
⑥	07MGK—0010100 or 07HGK—0010200	Wheel Alignment Gauge Attachment	1	
⑦	07749—0010000	Driver	1	
⑧	07965—6340301	Hub Dis/Assembly Base	2	
⑨	07965—6920201	Hub Dis/Assembly Base	1	



13. Brakes

Number	Tool Number	Description	Qty	Remarks
①	07JAG—SD40100 or 07GAG—SE00100	Pushrod Adjustment Gauge	1	
②	07HAA—SG00101 or 07HAA—SG00100	Bleeder T-Wrench	1	
③	07HAE—SG00100	Brake Spring Compressor	1	
④	07HAJ—SG00602 or 07HAJ—SG00601 or 07508—SB00000 and 07HAJ—SG00400	ALB Checker ALB Checker ALB Checker Adaptor	1 1 1 1	
⑤	07HAK—SG00110	Pressure Gauge Joint Pipe	1	
⑥	07LAF—SM40200	Brake Spring Installer	1	
⑦	07404—5790300	Pressure Gauge Attachment	1	
⑧	07406—5790200	Pressure Gauges	2	
⑨	07410—5790100	Pressure Gauge Attachment	2	
⑩	07410—5790500	Tube Joint Adaptor	1	
⑪	07510—6340101	Pressure Gauge Joint Pipe	1	
⑫	07510—6340300	Vacuum Joint Tube A	1	
⑬	07914—SA50000	Snap Ring Pliers	1	
⑭	07921—0010001	Flare Nut Wrench	1	
⑮	07973—SA50000	Rear Caliper Guide	1	

14. Body

Number	Tool Number	Description	Qty	Remarks
①	07GAZ—SE30100	Torsion Bar Assembly Tool	1	

15. Heater and Air Conditioner

Number	Tool Number	Description	Qty	Remarks
①	07JGG—0010100	Belt Tension Gauge	1	
②	07LAJ—PT30100	ECU Test Harness	1	
③	07NAB—HAC0100 or 07LAB—SK70100	A/C Clutch Holder	1	

16. Electrical

Number	Tool Number	Description	Qty	Remarks
①	07GAC—SE00200	Fuel Sender Wrench	1	
②	07JGG—0010100	Belt Tension Gauge	1	
③	07HAZ—SG00500	Deployment Tool	1	
④	07LAZ—SL40300	SRS Test Harness C	1	
⑤	07LAZ—SL40400	SRS Test Harness D	1	
⑥	07MAZ—SL00500	SRS Test Harness A	1	
⑦	07MAZ—SP00500	SRS Test Harness B	1	

Standards and Services Limits
Design Specifications
Body Specifications

www.cargeek.ir

Standards and Service Limits

5. Engine/Cylinder Head, Valve Train

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Compression	250 min ⁻¹ (rpm) and wide-open throttle	Nominal Minimum Maximum variation	1226 kPa (12.5 kg/cm ² , 178 psi) 931 kPa (9.5 kg/cm ² , 135 psi) 196 kPa (2 kg/cm ² , 28 psi)	
Cylinder head	Warpage Height	99.95-100.05 (3.935-3.938)	0.05 (0.002)	
Camshaft	End play	0.05-0.15 (0.002-0.006)	0.50 (0.020)	
	Oil clearance	0.05-0.089 (0.002-0.0035)	0.150 (0.006)	
	Runout	0.015 (0.0006)	0.030 (0.001)	
	Cam lobe height	IN EX 38.741 (1.5252) 38.972 (1.5343)	— —	
Valve	Valve clearance	IN EX 0.23-0.28(0.0094-0.0110) 0.27-0.32(0.0110-0.1259)	— —	
	Valve stem O.D.	IN EX 5.485-5.495 (0.2159-0.2163) 5.450-5.460 (0.2145-0.2149)	5.455 (0.2148) 5.420 (0.2133)	
	Stem-to-guide clearance	IN EX 0.020-0.045 (0.0007-0.0017) 0.055-0.080 (0.0021-0.0031)	0.075 (0.0029) 0.12 (0.0047)	
		Valve seat	Width Valve stem installed height	2.00 (0.0787) — —
Valve spring	Free length	IN and EX IN EX 1.25-1.55 (0.049-0.061) 48.245-48.715 (1.8994-1.9179) 50.315-50.785 (1.9809-1.994)	— — —	
		IN (NH) (CH) EX (NH) (CH) 53.15 (2.0925) 53.16 (2.0929) 55.78 (2.196) 55.80 (2.1968)	— — — —	
		Valve guide	I.D. Valve guide installed height	5.53 (0.2177) — —
Rocker arm	Arm-to-shaft clearance	IN EX 0.017-0.050 (0.0007-0.0020) 0.018-0.054 (0.0007-0.0021)	0.080 (0.0031) 0.080 (0.0031)	

NH: NIHON HATSUJO manufacture
CH: CHUO HATSUJO manufacture

5. Engine/Engine Block

MEASUREMENT		STANDARD (NEW)		SERVICE LIMIT
Cylinder block	Warpage of deck surface Bore diameter Bore taper Reboring limit	0.07 (0.003) max. 85.00-85.02 (3.3464-3.3472)	0.10 (0.004) 85.07 (3.3492) 0.05 (0.002) 0.5 (0.02)	
Piston	Skirt O.D. (At 21 mm (0.83 in) from bottom of skirt) Clearance in cylinder	No Mark B 84.98-84.99 (3.3456-3.4605) 84.97-84.98 (3.3452-3.3456) 0.02-0.04 (0.0008-0.0016)	84.97 (3.3452) 84.96 (3.3448) 0.05 (0.0020)	
Piston ring	Piston-to-ring clearance	Top Second 0.035-0.060 (0.0014-0.0024) 0.030-0.055 (0.0011-0.0022)	0.130 (0.0051) 0.130 (0.0051)	
		Ring end gap	Top Second Oil 0.20-0.35 (0.0079-0.0138) 0.40-0.55 (0.0157-0.0217) 0.20-0.70 (0.0079-0.0276)	0.60 (0.0236) 0.70 (0.0276) 0.80 (0.0315)
			Connecting rod	Pin-to rod interference Small end bore diameter Large end bore diameter End play installed on crankshaft
Crankshaft	Main journal diameter	No. 1, 2 Journals No. 3 Journal No. 4 Journal No. 5 Journal 49.976-50.000 (1.9676-1.9685) 49.972-49.996 (1.9674-1.9683) 49.984-50.008 (1.9679-1.9688) 49.988-50.012 (1.9680-1.9690)	— — — —	
		Taper/out-of-round, main journal	0.005 (0.0002) max.	
		Rod journal diameter	44.976-45.000 (1.7710-1.7717)	
		Taper/out-of-round, rod journal	0.005 (0.0002) max.	
		End play Runout	0.10-0.35 (0.004-0.014) 0.015 max (0.0006)	
Bearings	Main bearing-to journal oil clearance	No. 1, 2 Journals No. 3 Journal No. 4 Journal No. 5 Journal 0.021-0.045 (0.0009-0.0018) 0.025-0.049 (0.0001-0.0019) 0.013-0.037 (0.0005-0.0015) 0.009-0.033 (0.0004-0.0013)	0.05 (0.002) 0.054 (0.0021) 0.05 (0.002) 0.05 (0.002)	
		Rod bearing-to journal oil clearance	0.015-0.043 (0.0008-0.0019)	
			0.05 (0.002)	

Unit of length: mm (in.)

5. Engine/Engine Block (cont'd)

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT	
Balancer Shaft	Journal diameter	No. 1 journal (Front)	(Rear)	42.722–42.734 (1.6820–1.6824)	—	
		No. 2 journal		20.938–20.950 (0.8243–0.8248)	—	
		No. 3 journal		38.712–38.724 (1.5241–1.5246)	—	
	Journal taper			34.722–34.734 (1.3670–1.3674)	—	
		End play	(Front)	(Rear)	0.005 (0.0002)	—
	Runout				0.100–0.350 (0.0040–0.0138)	—
		Oil Clearance	No. 1 journal (Rear)		0.060–0.180 (0.0024–0.0070)	—
	Balancer Shaft Bearing	I.D	No. 1 journal (Front)	(Rear)	0.020 (0.0008)	—
No. 1 journal (Front), 3 journal				0.050–0.075 (0.0020–0.0030)	—	
No. 2, journal				0.066–0.118 (0.0026–0.0046)	—	
No. 3 journal				0.076–0.128 (0.0030–0.0050)	—	
Balancer Shaft Bearing	I.D	No. 1 journal (Front)	(Rear)	42.800–42.820 (1.6850–1.6858)	—	
		No. 2 journal		21.000–21.013 (0.8268–0.8273)	—	
		No. 3 journal		38.800–38.820 (1.5276–1.5283)	—	
		No. 3 journal		34.800–34.820 (1.3701–1.3710)	—	

5. Engine/Engine Lubrication

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Engine oil	Capacity (US. qt., Imp. qt.)	4.9 (5.2, 4.3) After engine disassembly 3.8 (4.0, 3.3) After oil change, including oil filter 3.5 (3.7, 3.1) After oil change, without oil filter			
Oil pump	Displacement	43.9 ℓ (11.6 US. gal., 9.7 Imp. gal.)/6,000 min ⁻¹ (rpm)			
	Inner-to-outer rotor radial clearance	0.02–0.16 (0.0008–0.0063)			0.2 (0.008)
	Pump body-to-rotor radial clearance	0.10–0.19 (0.0040–0.0075)			0.21 (0.0083)
	Pump body-to-rotor side clearance	0.02–0.07 (0.001–0.003)			0.12 (0.005)
Relief valve	Pressure setting 80°C (176°F)	Idle	69 kPa (0.7 kg/cm ² , 10 psi) min.		
		3,000 min ⁻¹ (rpm)	3431 kPa (3.5 kg/cm ² , 50 psi)		

5. Engine/Cooling

		MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Thermostat	Starts to open Full open Valve lift at full open	78°C ± 2 (172°F ± 3) 90°C (194°F) 8 (0.31) max.			86–90°C (187–194°F)
Water pump	Displacement	160 ℓ (42.2 US gal, 35.2 Imp gal)/6,000 min ⁻¹ (rpm)			
Radiator	Capacity (incl. heater) ℓ (US. qt., Imp. qt) (Includes reservoir tank 0.6 (0.63, 0.53) after overhaul at change pressure cap opening pressure	MT: 6.6 (6.97, 5.81) AT: 7.1 (7.50, 6.23) MT: 3.0 (3.17, 2.64) AT: 3.5 (3.70, 3.08) 93–123 kPa (0.95–1.25 kg/cm ² , 13.5–17.8 psi)			
Cooling fan	"ON" temperature	87°–93°C (189°–199°F)			
	"OFF" temperature	80°–91°C (176°–196°F)			
	"ON" temperature (Fan timer)	105°–111°C (221°–231°F)			
	"OF" temperature (Fan timer)	98°–109°C (208°–228°F)			

Standards and Service Limits

6. Fuel and Emissions

	MEASUREMENT	STANDARD (NEW)
Fuel Pump	Displacement (minimum in 10 seconds) Relief valve opening pressure	230 cc (7.8 US oz., 8.1 Imp oz.) 441–588 kPa (4.5–6.0 kg/cm ² , 64–85 psi)
Pressure Regulator (PGM-FI)	Pressure with regulator vacuum hose disconnected	275–324 kPa (2.80–3.30 kg/cm ² , 40–47 psi)
Fuel Tank	Capacity	65 ℓ (17.2 US gal., 14.3 Imp gal.)
Engine	Fast idle	1,400 ± 400 min ⁻¹ (rpm)
	Idle speed (with headlights and cooling fan OFF)	MT 770 ± 50 min ⁻¹ (rpm)
		AT 770 ± 50 min ⁻¹ (rpm) in [P] or [N] positions
	Idle CO	0.1% maximum



7. Clutch

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Clutch pedal	Pedal height	RHD	210 (8.3) to floor	---
		LHD	184 (7.2) to floor	---
	Stroke		142 (5.6)	---
	Pedal play		9–15 (0.4–0.6)	---
	Disengagement height		90 (3.5) min. to floor 80 (3.1) min. to carpet	---
Flywheel	Clutch surface runout		0.05 (0.002) max.	0.15 (0.006)
Clutch disc	Rivet head depth		1.3 (0.05) min.	0.2 (0.008)
	Surface runout		0.8 (0.03) max.	1.0 (0.04)
	Thickness		8.5–9.2 (0.33–0.36)	6.1 (0.24)
Clutch cover	Unevenness of diaphragm spring		0.6 (0.02) max.	0.8 (0.03)

8. Manual Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	1.9 (2.0, 1.7) at assembly 2.0 (2.1, 1.8) at oil change	
Mainshaft	End play	0.10–0.16 (0.0039–0.0063)	Adjust with a shim.
	Diameter of ball bearing contact area	27.977–27.990 (1.1015–1.1020)	27.940 (1.1000)
	Diameter of third gear contact area	37.984–38.000 (1.4954–1.4961)	37.930 (1.4933)
	Diameter of ball bearing contact area Runout	27.987–28.000 (1.1018–1.1024) 0.02 (0.0008) max.	27.940 (1.1000) 0.05 (0.002)
Mainshaft third and fourth gears	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness 3rd gear 4th gear	32.42–32.47 (1.276–1.278) 30.92–30.97 (1.217–1.219)	32.3 (1.27) 30.8 (1.21)
Mainshaft fifth gear	I.D.	43.009–43.025 (1.6933–1.6939)	43.080 (1.6961)
	End play	0.06–0.21 (0.0024–0.0083)	0.30 (0.012)
	Thickness	30.92–30.97 (1.217–1.219)	3.08 (0.12)
Countershaft	End play	0.05–0.40 (0.0019–0.0157)	0.50 (0.02)
	Diameter of needle bearing contact area	38.000–38.015 (1.4961–1.4967)	37.95 (1.4941)
	Diameter of ball bearing needle bearing contact area	24.987–25.000 (0.9837–0.9845)	24.94 (0.982)
	Diameter of low gear contact area	39.984–40.000 (1.5742–1.5748)	39.93 (1.572)
	Runout	0.02 (0.0008) max.	0.05 (0002)

8. Manual Transmission (cont'd)

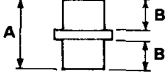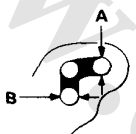	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Countershaft low gear	I.D. End play	46.009–46.025 (1.8114–1.8120) 0.04–0.10 (0.002–0.004)	46.08 (1.814) Adjust with a washer.
Countershaft second gear	I.D. End play Thickness	47.009–47.025 (1.8507–1.8514) 0.04–0.10 (0.002–0.004) 34.62–34.67 (1.3630–1.3650)	47.08 (1.8535) Adjust with a collar. 33.5 (1.3186)
Spacer collar (Countershaft second gear)	I.D. O.D. Length	36.48–36.49 (1.4362–1.4366) 41.989–42.000 (1.6531–1.6535) 29.02–29.04 (1.1425–1.1433) 29.07–29.09 (1.1445–1.1453)	36.50 (1.437) 41.94 (1.651) — —
Spacer collar (Mainshaft fourth and fifth gears)	I.D. O.D. Length	31.002–31.012 (1.2205–1.2209) 37.989–38.000 (1.4956–1.4961) 56.45–56.55 (2.222–2.226) 26.03–26.08 (1.0248–1.0268)	31.06 (1.223) 37.94 (1.494) — 26.01 (1.024)
			
Reverse idler gear	I.D. Gear-to-reverse gear shaft clearance	20.016–20.043 (0.7880–0.7891) 0.036–0.084 (0.0014–0.0033)	20.09 (0.7909) 0.160 (0.0006)
Synchronizer ring	Ring-to-gear clearance (ring pushed against gear)	0.85–1.10 (0.0335–0.0433)	0.40 (0.016)
Shift fork	Synchronizer sleeve groove width Fork-to-synchronizer sleeve clearance	6.75–6.85 (0.266–0.270) 0.35–0.65 (0.014–0.026)	— 1.0 (0.039)
Reverse shift fork	Pawl groove width Fork-to-reverse idle gear clearance Groove width Fork-to fifth/reverse shift shaft clearance	13.0–13.3 (0.51–0.52) 0.5–1.1 (0.02–0.43) 7.05–7.25 (0.278–0.2854) 7.4–7.7 (0.29–0.30) 0.05–0.35 (0.002–0.014) 0.4–0.8 (0.02–0.03)	— 1.8 (0.07) — — 0.5 (0.02) 1.0 (0.04)
			
Shift arm	I.D. Shift arm-to-shaft clearance Shift fork diameter at contact area Shift-arm-to-shift fork shaft clearance	15.973–16.000 (0.6289–0.6299) 0.005–0.059 (0.0002–0.0023) 12.9–13.0 (0.508–0.512) 0.2–0.5 (0.01–0.02)	— — — 0.6 (0.02)
Select lever	Pin size of contact area Shaft outer diameter Shift arm cover clearance	7.9–8.0 (0.311–0.315) 15.41–15.68 (0.607–0.617) 0.032–0.102 (0.0013–0.0040)	— — —
Shift arm lever	O.D. Transmission housing clearance	15.941–15.968 (0.6276–0.6287) 0.027–0.139 (0.0011–0.0055)	— —
Inter lock	Bore diameter Shift arm lever clearance	16.00–16.05 (0.630–0.632) 0.032–0.109 (0.0013–0.0043)	— —
Ring gear	Backlash	0.085–0.142 (0.0033–0.0056)	0.200 (0.0079)
Differential carrier	Pinion shaft bore diameter Carrier-to-pinion shaft clearance Driveshaft bore diameter Carrier-to-driveshaft clearance	18.000–18.018 (0.7087–0.7094) 0.017–0.047 (0.0007–0.0019) 28.005–28.025 (1.1026–1.1033) 0.025–0.066 (0.0009–0.0026) 0.055–0.091 (0.0022–0.0036)	— 0.100 (0.0039) — 0.120 0.150
Differential pinion gear	Backlash Pinion gear bore diameter Pinion gear-to-pinion shaft clearance	0.05–0.15 (0.002–0.006) 18.042–18.066 (0.7103–0.7113) 0.059–0.095 (0.0023–0.0037)	Selection with 7 types of washers. — 0.150 (0.0059)
Differential taper roller bearing	Preload	1.4–2.6 N·m (14–26 kg·cm, 1.0–1.9 lb·ft)	Selection with 20 types of shims.

Standards and Service Limits

9. Automatic Transmission

	MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT	
Transmission oil	Capacity ℓ (U.S. qt., Imp. qt.)	2.4 (2.5, 2.1) at oil change 6.0 (6.4, 5.2) at assembly		
Hydraulic pressure	Line pressure at 2,000 min ⁻¹ (rpm)	784 kPa (8.0 kg/cm ² , 113 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open	
	4th clutch pressure at 2,000 min ⁻¹ (rpm)	520 kPa (5.3 kg/cm ² , 75 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	460 kPa (4.7 kg/cm ² , 66 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open	
	3rd clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 71 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open	
	2nd clutch pressure at 2,000 min ⁻¹ (rpm)	490 kPa (5.0 kg/cm ² , 71 psi) Throttle valve full-closed 833 kPa (8.5 kg/cm ² , 120 psi) Throttle valve more than 2/8 open	441 kPa (4.5 kg/cm ² , 64 psi) Throttle valve full-closed 735 kPa (7.5 kg/cm ² , 106 psi) Throttle valve more than 2/8 open	
	1st clutch pressure at 2,000 min ⁻¹ (rpm)	784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)	
	Throttle pressure B		closed 0	
			open 784–833 kPa (8.0–8.5 kg/cm ² , 113–120 psi)	735 kPa (7.5 kg/cm ² , 106 psi)
Stall speed	Check with car on level ground	2,350–2,650 min ⁻¹ (rpm)		
Clutch	Clutch initial clearance	1st hold 0.8–1.0 (0.031–0.039)	—	
		1st, 2nd 0.65–0.85 (0.026–0.033)	—	
		3rd, 4th 0.4–0.6 (0.016–0.024)	—	
	Clutch return spring free length	1st, 2nd, 3rd, 4th, 33.5 (1.318)	31.5 (1.240)	
	Clutch disc thickness	1.88–2.0 (0.074–0.079)	Until grooves worn out	
	Clutch plate thickness	1st, 1.95–2.05 (0.0767–0.0807)	Discoloration ↑ Discoloration	
		2nd, 2.55–2.65 (0.1003–0.1043)		
3rd, 4th, 2.25–2.35 (0.0885–0.0925)				
Clutch end plate thickness	Mark 1 2.05–2.10 (0.081–0.083)	Discoloration		
	Mark 2 2.15–2.20 (0.085–0.087)			
	Mark 3 2.25–2.30 (0.089–0.091)			
	Mark 4 2.35–2.40 (0.093–0.094)			
	Mark 5 2.45–2.50 (0.096–0.098)			
	Mark 6 2.55–2.60 (0.100–0.102)			
	Mark 7 2.65–2.70 (0.104–0.106)			
	Mark 8 2.75–2.80 (0.108–0.110)			
	Mark 9 2.85–2.90 (0.112–0.114)			

Unit of length: mm (in.)

9. Automatic Transmission (cont'd)

		MEASUREMENT	STANDARD (NEW)		SERVICE LIMIT			
Valve body	Stator camshaft needle bearing contact area I.D. (torque converter side) Stator camshaft needle bearing contact area I.D. (oil pump side) Oil pump driven gear I.D. Oil pump gear shaft O.D. Oil pump gear side clearance Oil pump gear-to-body clearance	Drive Driven	27.000–27.021 (1.0630–1.0638)		Wear or damage			
			29.000–29.013 (1.1417–1.1422) 14.016–14.034 (0.5518–0.5525) 13.980–13.990 (0.5504–0.5508) 0.03–0.05 (0.0012–0.0020)		— Wear or damage Wear or damage 0.07 (0.0028)			
Regulator valve body	Sealing ring contact area diameter		35.000–35.025 (1.3780–1.3789)		35.050 (1.3799)			
Accumulator body	Sealing ring contact area diameter		32.000–32.025 (1.2598–1.2608)		32.05 (1.2618)			
Stator camshaft	Sealing ring contact area diameter		29.000–29.013 (1.1417–1.1422)		29.05 (1.1436)			
Shifting device and parking brake control	Reverse shift fork thickness Parking brake ratchet pawl Parking gear Throttle cam stopper		5.90–6.00 (0.232–0.236)		5.40 (0.213)			
			— 17.0–17.1 (0.6692–0.6732)		Wear or other defect Wear or other defect —			
Servo body	Shift fork Shaft I.D.	A	14.000–14.005 (0.5512–0.5514)		—			
		B	14.006–14.010 (0.5514–0.5516)		—			
		C	14.011–14.015 (0.5516–0.5518)		—			
	Shift fork shaft valve bore I.D.		37.000–37.039 (1.4567–1.4582)		37.045 (1.4585)			
Transmission	Diameter of needle bearing contact area On mainshaft and stator shaft On mainshaft 4th gear collar On mainshaft 3rd gear collar On countershaft 1st gear collar On countershaft 4th gear On countershaft reverse gear On countershaft parking gear On secondary shaft 1st gear On secondary shaft 2nd gear Reverse idle shaft holder I.D. Mainshaft 3rd gear I.D. 4th gear I.D. Countershaft 1st gear I.D. 4th gear I.D. reverse gear I.D. idle gear I.D. Secondary shaft 1st gear I.D. 2nd gear I.D. Mainshaft 3rd gear collar length 4th gear collar length Countershaft 1st gear collar length Secondary shaft 2nd gear thrust washer thickness Countershaft 1st gear thrust washer thickness Countershaft idler gear thrust washer thickness Countershaft parking gear length		22.984–23.000 (0.9047–0.9055) 31.984–32.000 (1.2592–1.2598) 45.984–46.000 (1.8103–1.8110) 40.984–41.000 (1.6135–1.6142) 31.975–31.991 (1.2589–1.2595) 35.979–36.000 (1.4165–1.4173) 39.984–40.000 (1.5741–1.5748) 31.975–31.991 (1.2588–1.2594) 31.975–31.991 (1.2588–1.2594) 14.416–14.434 (0.5675–0.5682) 52.000–52.019 (2.0472–2.0479) 38.005–38.021 (1.4963–1.4969) 47.000–47.016 (1.8504–1.8510) 38.000–38.016 (1.4961–1.4967) 42.000–42.016 (1.6535–1.6541) 48.000–48.016 (1.8897–1.8903) 37.000–37.016 (1.4566–1.4573) 37.000–37.016 (1.4566–1.4573) 37.000–37.016 (1.4566–1.4573) 47.500–47.550 (1.8700–1.8720) 27.500–27.550 (1.0826–1.0846) 4.35–4.45 (0.1713–0.1752) 1.45–1.50 (0.0570–0.0590) 3.45–3.55 (0.1358–0.1398) 25.030–25.048 (0.9854–0.9861)		Wear or damage ↑ Wear or damage			
			WIRE DIA.	O.D.	FREE LENGTH	No. of COILS		
		Spring	Regulator valve spring Stator reaction spring Torque converter check valve spring Relief valve spring Cooler check valve spring 2nd orifice spring Servo orifice spring 4th exhaust spring 1-2 shift spring 2-3 shift spring 1st accumulator spring 4th accumulator spring 2nd accumulator spring 3rd accumulator spring L/C shift spring L/C timing spring Servo control spring 3rd kick-down spring 2nd kick-down spring Throttle adjust spring Throttle B spring 1st-hold accumulator spring CPC valve spring L/C control spring	A	1.8 (0.0709)	14.7 (0.5887)	86.5 (3.4055)	16.5
				B	1.8 (0.0709)	9.6 (0.3779)	44.0 (1.7323)	12.7
					4.5 (0.1772)	35.4 (1.3937)	30.3 (1.1929)	1.92
					1.1 (0.0433)	8.4 (0.3307)	36.4 (1.4331)	12.0
					1.0 (0.0394)	8.4 (0.3307)	39.1 (1.5393)	15.1
					1.1 (0.0433)	8.4 (0.3307)	46.8 (1.8425)	17.0
					0.6 (0.0236)	6.6 (0.2598)	55.8 (2.1968)	15.8
					0.8 (0.0315)	6.6 (0.2598)	52.5 (2.0669)	33.0
					0.9 (0.0354)	7.1 (0.2795)	60.8 (2.3936)	28.9
					1.0 (0.0393)	8.6 (0.3386)	41.3 (1.6259)	16.9
					0.9 (0.0354)	7.6 (0.2992)	57.0 (2.2440)	26.8
					1.8 (0.0709)	16.3 (0.6417)	115.4 (4.5433)	18.6
					2.9 (0.1142)	22.0 (0.8661)	90.1 (3.5472)	10.9
					3.5 (0.1378)	22.0 (0.8661)	77.1 (3.0354)	10.0
					2.8 (0.1102)	17.5 (0.6889)	94.2 (3.7086)	16.1
	0.9 (0.0354)			7.6 (0.2992)	73.7 (2.9016)	32.0		
	0.8 (0.0314)			6.6 (0.2598)	51.1 (2.0118)	14.7		
	1.0 (0.0394)			8.1 (0.3188)	52.6 (2.0708)	22.4		
	1.1 (0.0433)			7.6 (0.2992)	48.3 (1.9015)	23.3		
	1.2 (0.0472)			7.1 (0.2795)	46.9 (1.8464)	20.6		
	0.8 (0.0314)			6.2 (0.2440)	30.0 (1.1811)	8.0		
	1.4 (0.0551)			8.5 (0.3346)	41.5 (1.6339)	10.5		
	1.4 (0.0551)			8.5 (0.3346)	41.5 (1.6339)	11.2		
	1.4 (0.0551)			8.5 (0.3346)	41.6 (1.6378)	12.4		
	4.0 (0.1574)			25.0 (0.9842)	64.7 (2.5472)	7.3		
	1.4 (0.0551)			9.4 (0.3700)	33.0 (1.2992)	10.5		
	0.7 (0.0276)			6.6 (0.2598)	38.0 (1.4961)	14.1		

Standards and Service Limits

9. Automatic Transmission (cont'd)

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Rign gear	Backlash		0.085–0.142 (0.003–0.006)	0.200 (0.008)
Differential carrier	Pinion shaft bore diameter		18.000–18.018 (0.7087–0.7094)	—
	Carrier-to-pinion shaft clearance		0.017–0.047 (0.001–0.002)	0.100 (0.004)
	Driveshaft bore diameter		28.005–28.025 (1.1026–1.1033)	—
	Carrier-to driveshaft clearance		0.025–0.066 (0.001–0.003)	0.120 (0.005)
Differential pinion gear	Backlash		0.05–0.15 (0.02–0.006)	Adjust with a washer
	Pinion gear bore diameter		18.042–18.066 (0.710–0.711)	—
	Pinion gear-to pinion shaft clearance		0.059–0.095 (0.002–0.004)	0.120 (0.005)
Differential tapered roller bearing preload	For used bearing		2.5–3.7 N·m (25–37 kg·cm, 1.8–2.7 lb-ft)	Adjust with a washer
	After replacement of bearing		2.8–4.0 N·m (28–48 kg·cm, 2.0–2.9 lb-ft)	Adjust with a washer

11. Steering

	MEASUREMENT		STANDARD (NEW)
Steering wheel	Play		10 (0.39) maximum
Gearbox	Pinion starting torque		Below 1.0N·m (10 kg·cm, 0.72 lb-ft)
	Angle of rack guide screw loosend from locked position		20° ± 5° – 0
Pump	Pump pressure with valve closed (oil temperature: 40°C/104°F minimum) Do not run for more than 5 seconds		7,845–8,826 kPa (80–90 kg/cm², 1,138–1,280 psi) at idle
Power steering fluid	Capacity		0.5 ℓ (0.53 US qt, 0.44 Imp qt)
	Reservoir At change (approx.)		1.8 ℓ (1.90 US qt, 1.58 Imp qt)
Power steering belt	Deflection between pulleys with 98 N (10 kg, 22 lbs) force		13.0–16.0 (0.51–0.62)* 9.5–11.5 (0.37–0.45)
	Belt tension between pulleys (measured with belt tension gauge)		343–490 N (35–50 kg, 77–110 lb)* 686–882 N (70–90 kg, 154–198 lb)

*When using a new belt, first adjust the deflection or tension to these values, then readjust the deflection or tension to the values for the used belts after running engine for five minutes.

12. Suspension

	MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT
Wheel alignment	Total toe		0±2 (0±0.08) IN 2±2 (0.08±0.08)	—
	Camber	Front	0° 00' ± 1'	—
		Rear	–0° 30' ± 1'	—
	Caster	Front	3° 00' ± 1'	—
	Front Wheel turning angle	Inward wheel Outward wheel (reference)	39°05' ± 2° 29°30'	— — —
Wheel	Rim runout	Steel wheel	Below 1.0 (0.04)	2.0 (0.08)
		Aluminum wheel	Below 1.0 (0.04)	1.5 (0.06)
		Axial	Below 0.7 (0.03)	2.0 (0.08)
		Radial	Below 0.7 (0.03)	1.5 (0.06)
Wheel bearing	End play	Front	0–0.05 (0–0.002)	—
		Rear	0–0.05 (0–0.002)	—

Unit of length: mm (in.)

13. Brakes

		MEASUREMENT	STANDARD (NEW)	SERVICE LIMIT
Parking brake lever		Play in stroke 200 N (20 kg, 44 lbs)	To be locked when pulled 4–8 notches	—
Foot brake pedal	Pedal height (from floor)	LHD: MT AT	165±0.5 (6.5±0.02) 170±0.5 (6.7±0.02)	— —
	Free play	RHD: MT AT	190 (7.5) minimum 195 (7.7) minimum	— —
Master cylinder		Piston-to-push rod clearance	0–0.4 (0–0.016)	5 (0.20)
Disc brake	Disc thickness	Front	23.0 (0.91)	21.0 (0.83)
		Rear	10.0 (0.39)	8.0 (0.32)
	Disc runout	Front	—	0.10 (0.004)
		Rear	—	0.15 (0.006)
	Disc parallelism	Front and rear	—	0.015 (0.0006)
	Pad thickness	Front	12.5 (0.49)	1.6 (0.06)
		Rear	9.0 (0.35)	1.6 (0.06)
Brake booster	Characteristics at 20 kg (44 lbs) pedal pressure			
		Vacuum	Line pressure Unit: kPa (kg/cm ² /psi)	
		0 mm (0 in) Hg 300 mm (11.8 in) Hg 500 mm (19.7 in) Hg	813 (8.3/118) minimum 6,076 (62/882) minimum 8,134 (83/1,180) minimum	

15. Air Conditioner

		MEASUREMENT	STANDARD (NEW)
Air conditioner system	Lubricant capacity	Condenser Evaporator Line or hose Reservoir	10 cc (0.3 US oz, 0.4 Imp oz) 25 cc (0.8 US oz, 0.9 Imp oz) 10 cc (0.3 US oz, 0.4 Imp oz) 10 cc (0.3 US oz, 0.4 Imp oz)
Compressor	Lubricant capacity Stator coil resistance at 20°C (68°F) Pulley-to pressure plate clearance		90–120 cc (3.0–4.0 US oz, 3.2–4.2 Imp oz) 3.4–3.8 Ω 0.35–0.65 (0.014–0.026)
Compressor belt	Deflection between pulleys with 98 N (10 kg, 22 lbs) force	For used belt For new belt	10–12 (0.4–0.5)* 4.5–7.0 (0.18–0.28)
	Belt tension between pulleys (measured with belt tension gauge)	For used belt For new belt	441–588 N (45–60 kg, 99–132 lbs)* 931–1,127 N (95–115 kg, 209–254 lbs)

*When using a new belt, first adjust the deflection or tension to these values, then readjust the deflection or tension to the values for the used belts after running engine for five minutes.

Standards and Service Limits

Unit of length: mm (in.)

16. Electrical

MEASUREMENT		STANDARD (NEW)	SERVICE LIMIT	
Ignition coil	Rated voltage	12 Volts		
	Winding resistance	Primary Secondary	0.6–0.8 Ω 12.8–19.2 kΩ	
Ignition wire	Resistance	25 kΩ maximum		
Spark plug	Type (): Manufacturer	Standard	ZFR6F-11 (NGK) or KJ20CR-L11 (ND)	
		Option	ZFR5F-11 (NGK) or KJ16CR-L11 (ND) ZFR7F-11 (NGK) or KJ22CR-L11 (ND)	
	Gap	1.0–1.1 (0.039–0.043)		
Ignition timing	At idling	15° ± 2° BTDC		
Battery	Lighting capacity (20-hours ratio)	65Ah		
	Starting capacity (voltage after 5 sec.)	8.4 V minimum/300 ampere draw at –15°C (59°F)		
Alternator	Output	80A		
	Rotor coil resistance	2.8–3.0 Ω	—	
	Slip ring O.D.	14.4 (0.57)	14.0 (0.55)	
	Brush length	10.5 (0.41)	5.5 (0.22)	
Alternator belt	Deflection at midway between pulleys with 98 N (10 kg, 22 lb) force	Model without A/C	Used belt*	10–12 (0.39–0.47)
			New belt	8.5–11 (0.33–0.43)
		Model with A/C	Used belt*	10–12 (0.39–0.47)
			New belt	4.5–7.0 (0.18–0.28)
	Belt tension between pulleys (measured with tension gauge)	Model without A/C	Used belt*	294–441 N (30–45 kg, 66–99 lb)
			New belt	441–637 N (45–65 kg, 99–143 lb)
		Model with A/C	Used belt*	441–637 N (45–65 kg, 99–143 lb)
			New belt	931–1,128 N (95–115 kg, 209–154 lb)
Starting motor	Output	KE Except KE	MT: 1.4 kW AT: 1.4 kW AT: 1.6 kW	
	Manufacturer: Mitsuba	Mica depth Commutator runout Commutator O.D. Brush length Brush spring tension	0.4–0.5 (0.016–0.02) 0–0.02 (0–0.001) 28.0–28.1 (1.10–1.11) 15.8–16.2 (0.62–0.64) 16–18 N (1.6–1.8 kg, 3.5–4.0 lbs)	

*When using a new belt, first adjust the deflection or tension to these values, then readjust the deflection or tension to the values for the used belts after running engine for five minutes.

Design Specifications

	ITEMS	METRIC	ENGLISH	NOTES			
DIMENSIONS	Overall length	4,700 mm	185.0 in				
	Overall width	1,695 mm	66.7 in				
	Overall height	1,375 mm	54.1 in				
	Wheel base	2,720 mm	107.1 in				
	Track	1,475 mm	58.1 in				
		Front	1,480 mm	58.3 in			
	Rear	160 mm	6.3 in				
	Ground clearance						
	Seating capacity		Five				
	Turning radius (at body end)	5.8 m	19.0 ft				
WEIGHT	Curb weight	MT KG	1,315 kg	2,899 lb	Air Conditioner: added 22 (24/- 2) kg		
		KF, KE	1,310 kg	2,888 lb			
		AT KG	1,340 kg	2,954 lb			
	Weight distribution	KF, KE	1,335 kg	2,943 lb			
		MT KG	785/530 kg	1,731/1,168 lb			
		KF, KE	785/525 kg	1,731/1,157 lb			
		AT KG	810/530 kg	1,786/1,168 lb			
		KF, KE	810/525 kg	1,786/1,157 lb			
		Max. permissible weight (EC)	1,760 kg	3,880 lb			
		Max. towing weight (trailer with brake)	1,200 kg	2,646 lb			
	Max. towing hitch downward load	70 kg	154 lb				
ENGINE	Type	Water-cooled, 4-stroke OHC					
	Cylinder arrangement	In-line, transvers, 4-cylinders					
	Bore and stroke	85 x 88 mm	3.35 x 3.46 in				
	Displacement	1,997 cm ³	121.8 cu-in				
	Compression ratio	9.0 : 1					
	Valve train	Belt driven, Single overhead camshaft					
	Lubrication system	Forced and wet sump, trochoid pump					
Fuel required	Premium unleaded gasoline with 95 Research Octane Number or higher						
STARTER	Type	Gear reduction					
	Normal output	1.6 kW (KG, KF AT), 1.4 kW (Except KG, KF AT)					
	Nominal voltage	12 V					
	Hour rating	30 seconds					
	Direction of rotation	Clockwise as viewed from gear end					
Weight	Mitsuba 1.6 kW	3.7 kg	8.2 lb				
	Mitsuba 1.4 kW	3.5 kg	7.7 lb				
TRANSMISSION	Clutch	MT	Single plate dry, diaphragm spring Torque converter with lock-up clutch 203 cm ² 31.5 sq. in Synchronized 5-speed forward, 1 reverse Electronically controlled dual range 4-speed forward automatic, 1 reverse 1 : 1 (Direct)				
		AT					
	Clutch lining area	MT					
		AT					
	Transmission	MT					
		AT					
	Primary reduction ratio	1 : 1 (Direct)					
	Gear ratio				Gear	MT	AT
					1st	3.307	2.705
					2nd	1.809	1.366
		3rd	1.230	1.028			
		4th	0.933	0.731			
		5th	0.757	—			
		Reverse	3.000	2.047			
	Final	4.266	4.285				


Design Specifications

(cont'd)

	ITEMS	METRIC	ENGLISH	NOTES
AIR CONDITIONER	Cooling capacity	4,650 kcal/h	18,451 BTU/h	
	— Condition:	Compressor speed Outside air temperature Outside air humidity Condenser air temperature Condenser air velocity Blower capacity	1,900 min ⁻¹ (rpm) 27° 50 % 35°C 4.5 m/sec. 440 m ³	81°F 95°F 14.8 ft/sec. 15,542 cu-ft/h
	Compressor	Type No. of cylinders Capacity Maximum speed Lubricant capacity	Swash-plate 10 178 cc/rev. 8,800 min ⁻¹ (rpm) 90–120 cc	10.9 cu-in/rev. 3.0–4.0 US oz. 3.2–4.2 Imp oz.
	Condenser Evaporator		Corrugated fin type Corrugated fin type	
	Blower	Type Motor input Speed control Maximum capacity	Sirocco fan 210 W (12 V) 5-speed 500 m ³ /h	17,662 cu-ft/h
STEERING SYSTEM	Temperature control		Air-mix type Dry single-plate 40 W (12 V) maximum	
	Clutch	Type	R-12	
	Refrigerant	Type Quantity	0.80–0.85 kg	1.8–1.9 lb
	Type Overall ratio Turns, lock-to-lock Steering wheel diameter Power steering fluid capacity		Rack and pinion 16.1 : 1 3.13 375 mm 1.8 ℓ	14.8 in 1.9 US qt. 1.6 Imp qt.
	Power steering fluid		Power Steering Fluid-V P/N: 08280–99954	
SUSPENSION	Type	Front Rear	Independent double wishbone, coil spring	
	Shock absorber	Front and rear	Independent double wishbone, coil spring Telescopic, hydraulic (nitrogen gas-filled)	
WHEEL ALIGNMENT	Total toe	Front Rear	0 IN 2.0 mm	0 0.08 in
	Camber	Front Rear	0°00' –0°30'	
	Caster	Front Rear	3°00'	
BRAKE SYSTEM	Type	Front Rear	Ventilated disc Solid disc	
	Pad and lining swept area (total)	Front Rear	415 cm ² 281 cm ²	64 sq. in 44 sq. in
TIRES	Size/Pressure	See the tyre label attached to the driver's door jamb.		
ELECTRICAL	Fuses		7.5A, 15A, 50A	
	In the anti-lock brake system fuse box		7.5A, 10A, 15A, 30A	
	In the fuse box		7.5A, 10A, 15A, 20A, 30A, 40A, 50A, 80A	
	In the relay box			
	Headlights	Inside Outside	12V–55W 12V–65/55W	
	Turn signal lights	Front Rear Side	12V–21W 12V–21W 12V–5W	
	Position lights		12V–5W	
	License plate lights		12V–5W	
	Back-up lights		12V–21W	
	Stop Taillights		12V–21/5W	
	Rear fog light		12V–21W	
	Interior light		12V–8W	
	Door courtesy lights		12V–3.4W	
	Vanity mirror light		12V–1.8W	
	Boot light		12V–3.4W	
	Gauge lights		12V–3.4/1.4W	
	Indicator lights		12V–0.84/0.91/1.12/1.2/1.4W	
	Warning lights		12V–1.4W	
Glove box light		12V–1.8W		
Illumination and pilot lights		12V–1.4/1.2W/1.12W LED: 0.91W, 0.84W		
Heater illumination lights		12V–1.2W		

Body Specifications

Unit: mm (in)

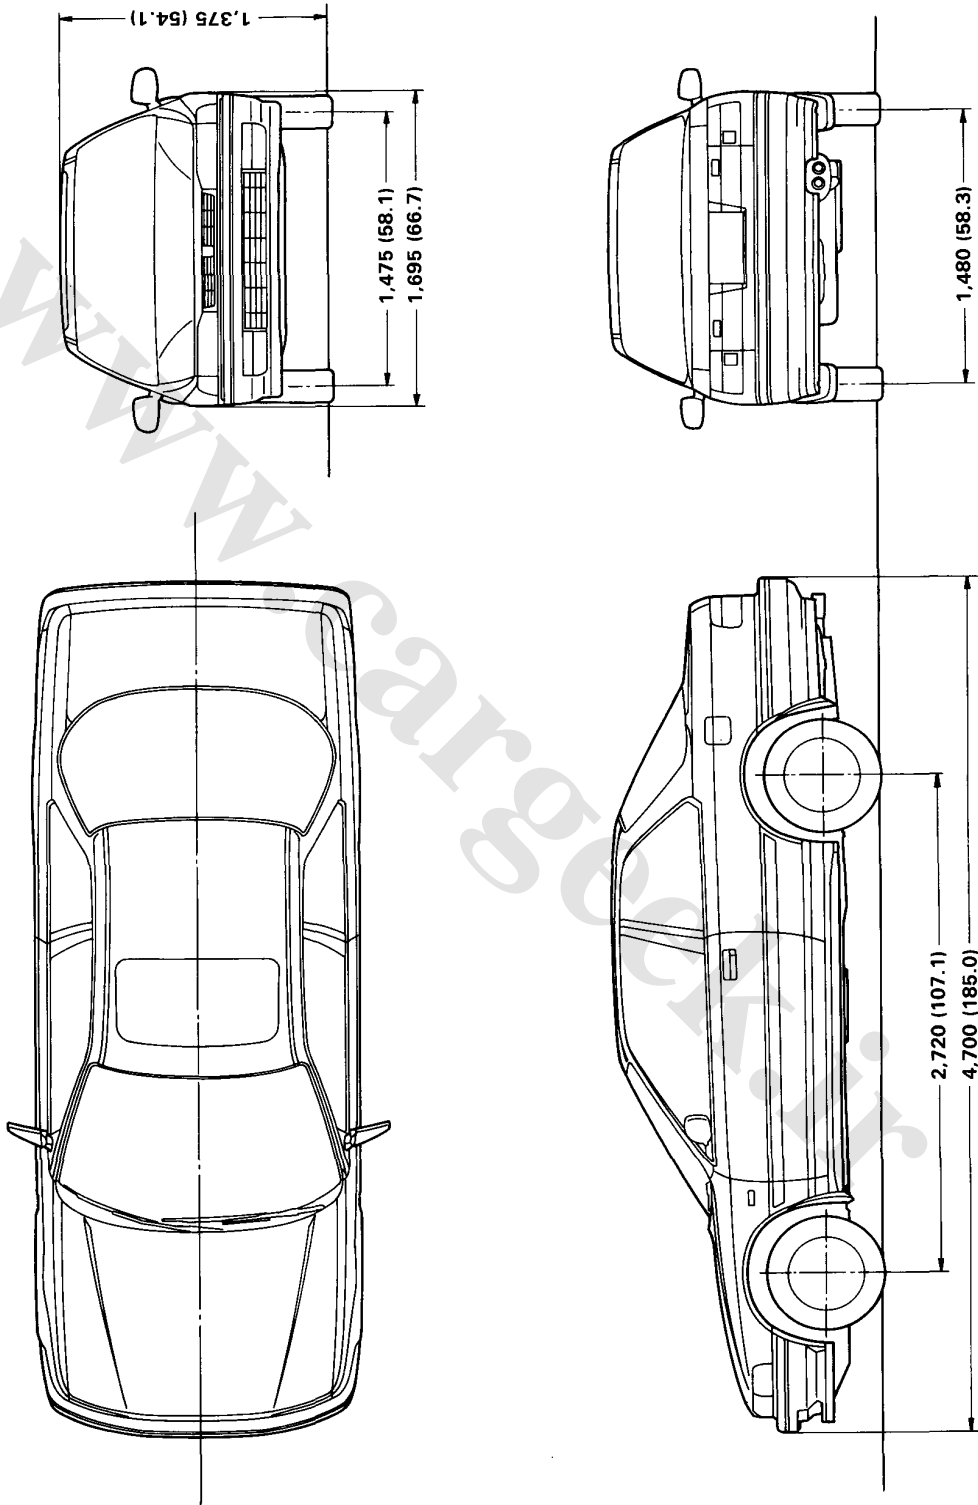

Special Tools

Component Locations

Index

System Description

Vacuum Connections

Electrical Connections

Troubleshooting

Troubleshooting Guide

Self- diagnostic Procedure

PGM - FI Control System

Troubleshooting Flowcharts

Oxygen Sensor

Oxygen Sensor Heater

Idle Control System

Idle Speed Settings

Fuel Supply System

Fuel Pressure

Pressure Regulator

Emission Control System









Exhaust Gas Recirculation System

www.Cargeek.ir

Special Tools

Special Tools

Ref. No.	Tool Number	Description	Q'ty	Remarks
①	07LAJ-PT30100 or 07LAJ-PT3010A	ECU Test Harness	1	
②	07LAJ-PT3020A	Test Harness	1	
③	07JAZ-SH20100	R.P.M. Connecting Adaptor	1	
④	07LAZ-PT30100	R.P.M. Connecting Adaptor	1	
④-1	07LAZ-PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
④-2	07LAZ-PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑤	07406-0040001	Fuel Pressure Gauge Set	1	
⑤-1	07406-0040100	Pressure Gauge	(1)	Component Tools
⑤-2	07406-0040201	Hose Assembly	(1)	
⑥	07411-0020000	Digital Circuit Tester	1	

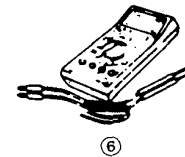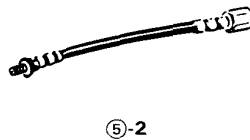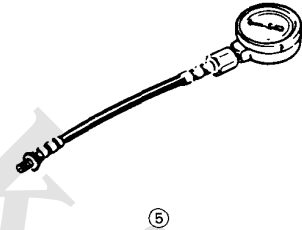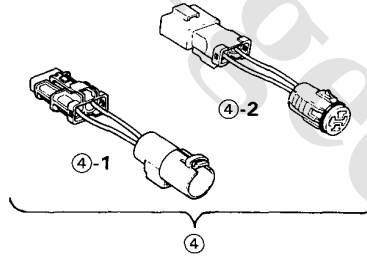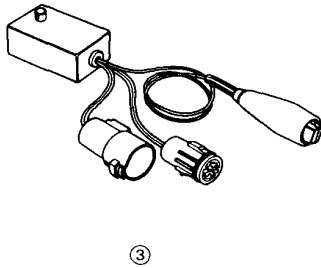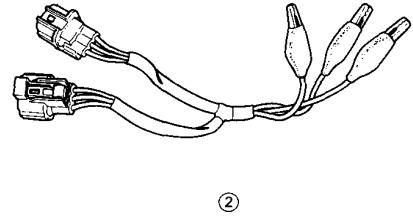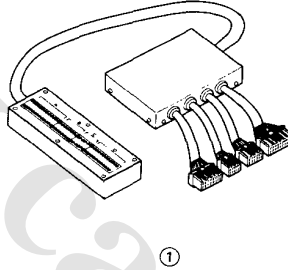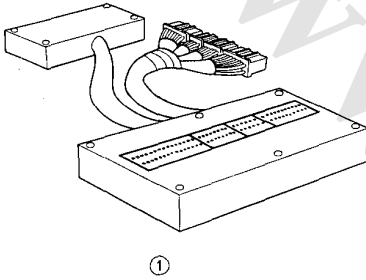




Component Locations

Index


LHD:

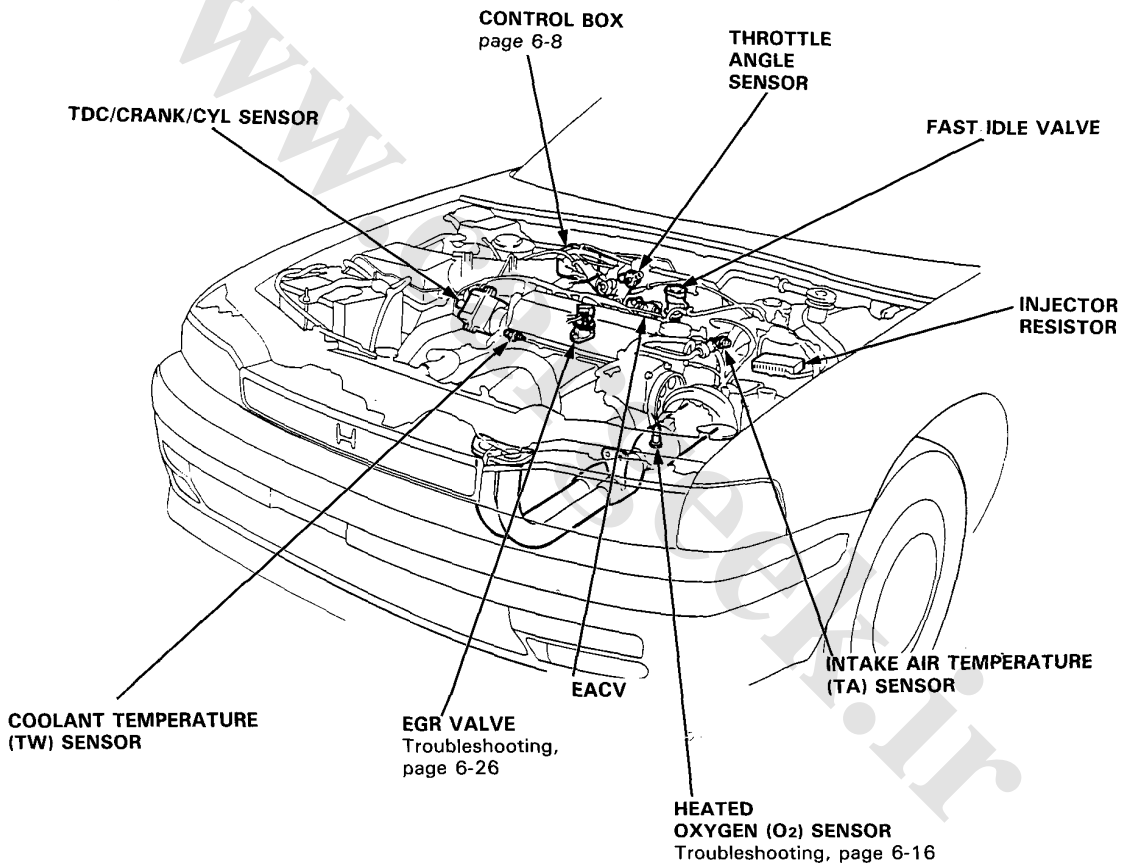

Component Locations


Index

RHD:

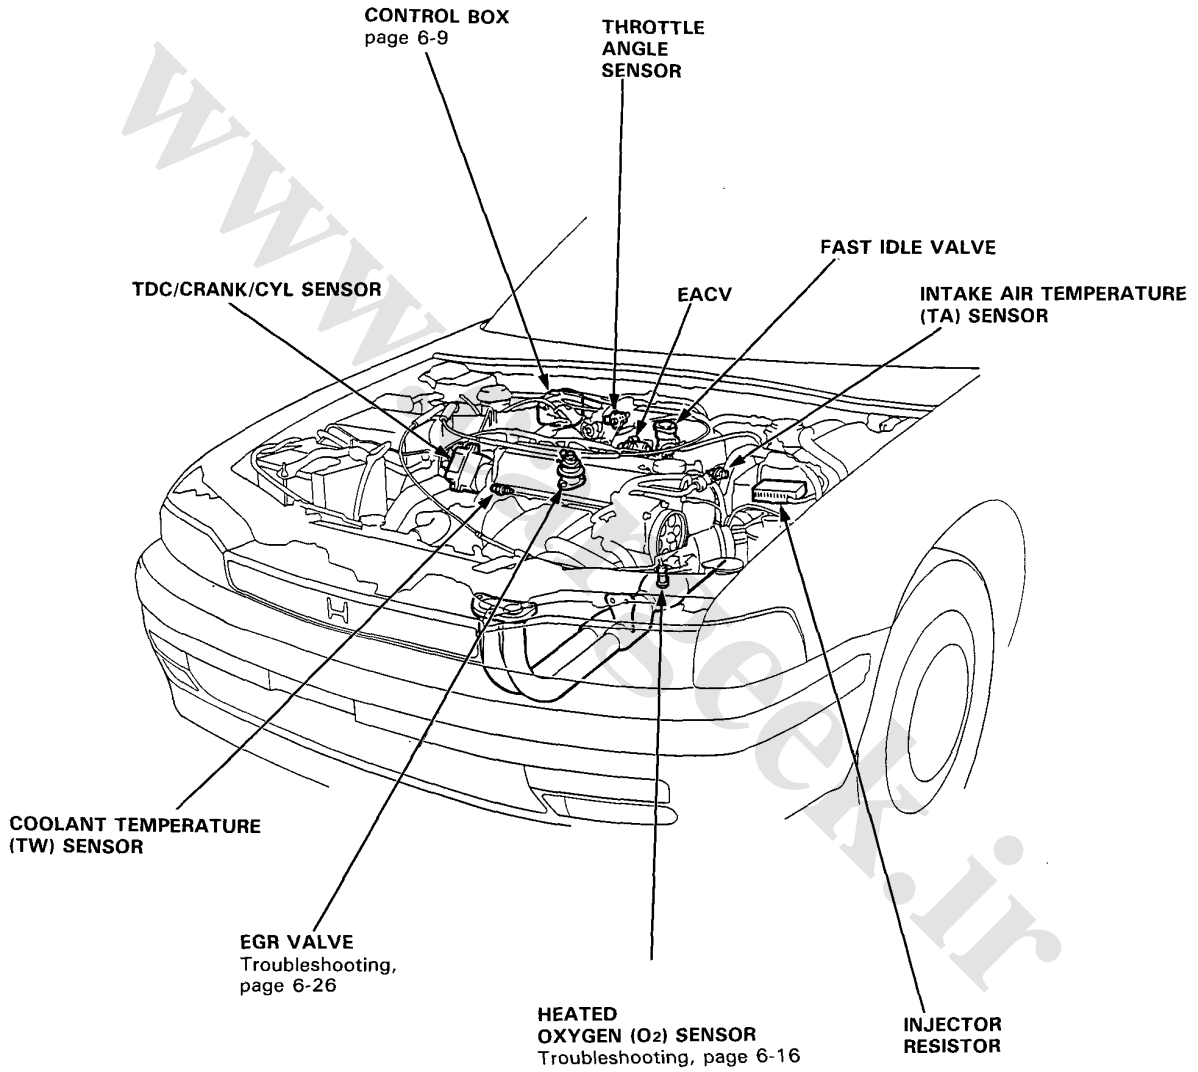


System Description

Vacuum Connections

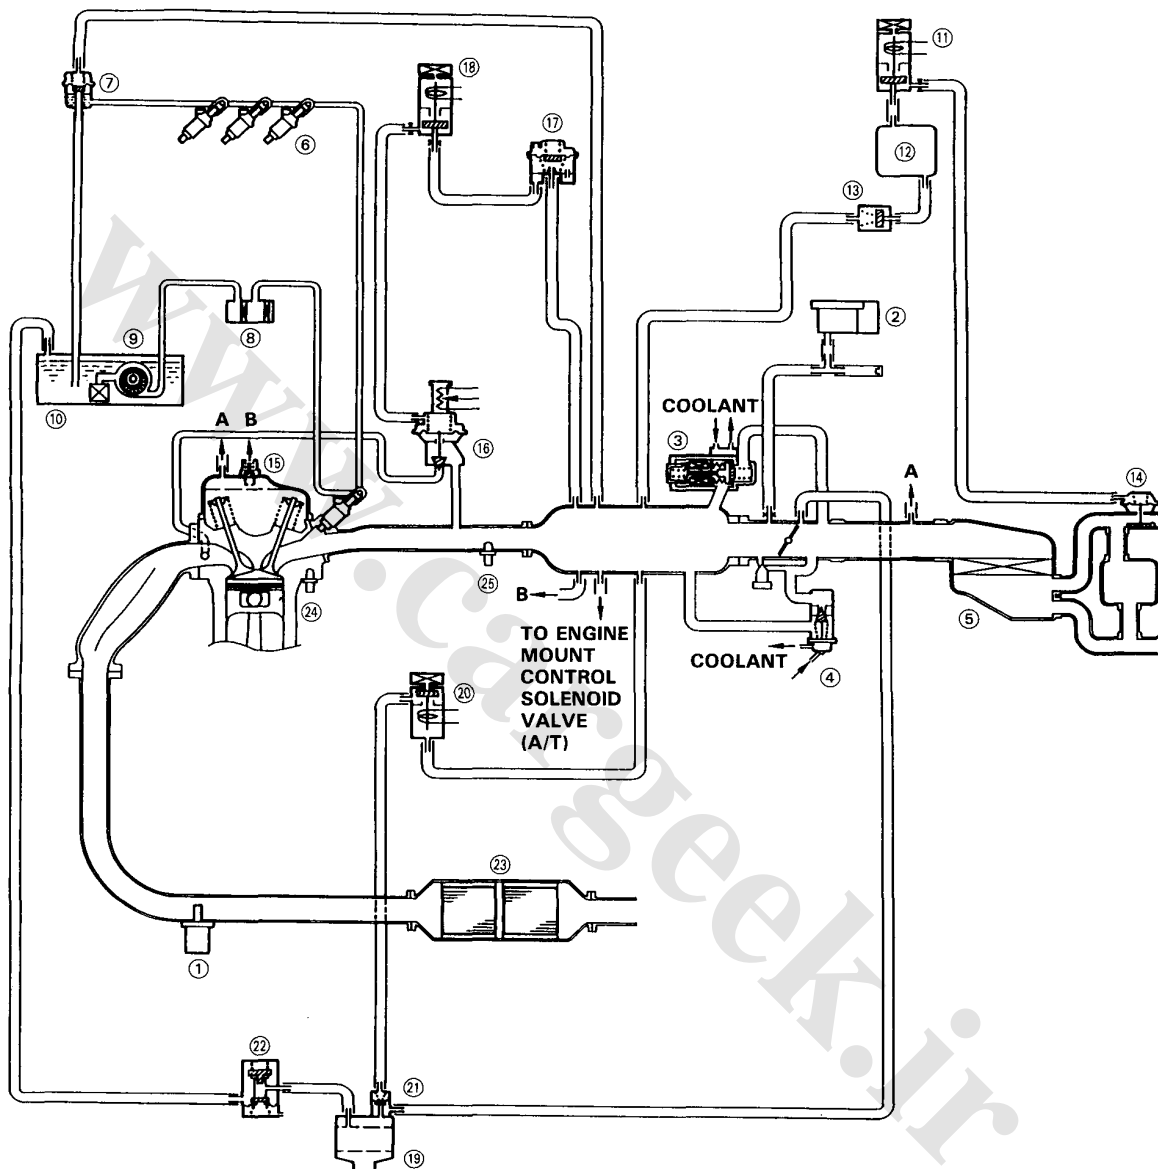


- | | |
|---|---------------------------------------|
| ① HEATED O ₂ SENSOR | ⑬ CHECK VALVE |
| ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR | ⑭ INTAKE CONTROL DIAPHRAGM |
| ③ ELECTRONIC AIR CONTROL VALVE (EACV) | ⑮ PCV VALVE |
| ④ FAST IDLE VALVE | ⑯ EGR VALVE |
| ⑤ AIR CLEANER | ⑰ CONSTANT VACUUM CONTROL (CVC) VALVE |
| ⑥ FUEL INJECTOR | ⑱ EGR CONTROL SOLENOID VALVE |
| ⑦ PRESSURE REGULATOR | ⑲ CHARCOAL CANISTER |
| ⑧ FUEL FILTER | ⑳ PURGE CUT-OFF SOLENOID VALVE |
| ⑨ FUEL PUMP | ㉑ PURGE CONTROL DIAPHRAGM VALVE |
| ⑩ FUEL TANK | ㉒ TWO-WAY VALVE |
| ⑪ INTAKE CONTROL SOLENOID VALVE | ㉓ CATALYTIC CONVERTER |
| ⑫ AIR CHAMBER | ㉔ COOLANT TEMPERATURE (TW) SENSOR |
| | ㉕ INTAKE AIR TEMPERATURE (TA) SENSOR |

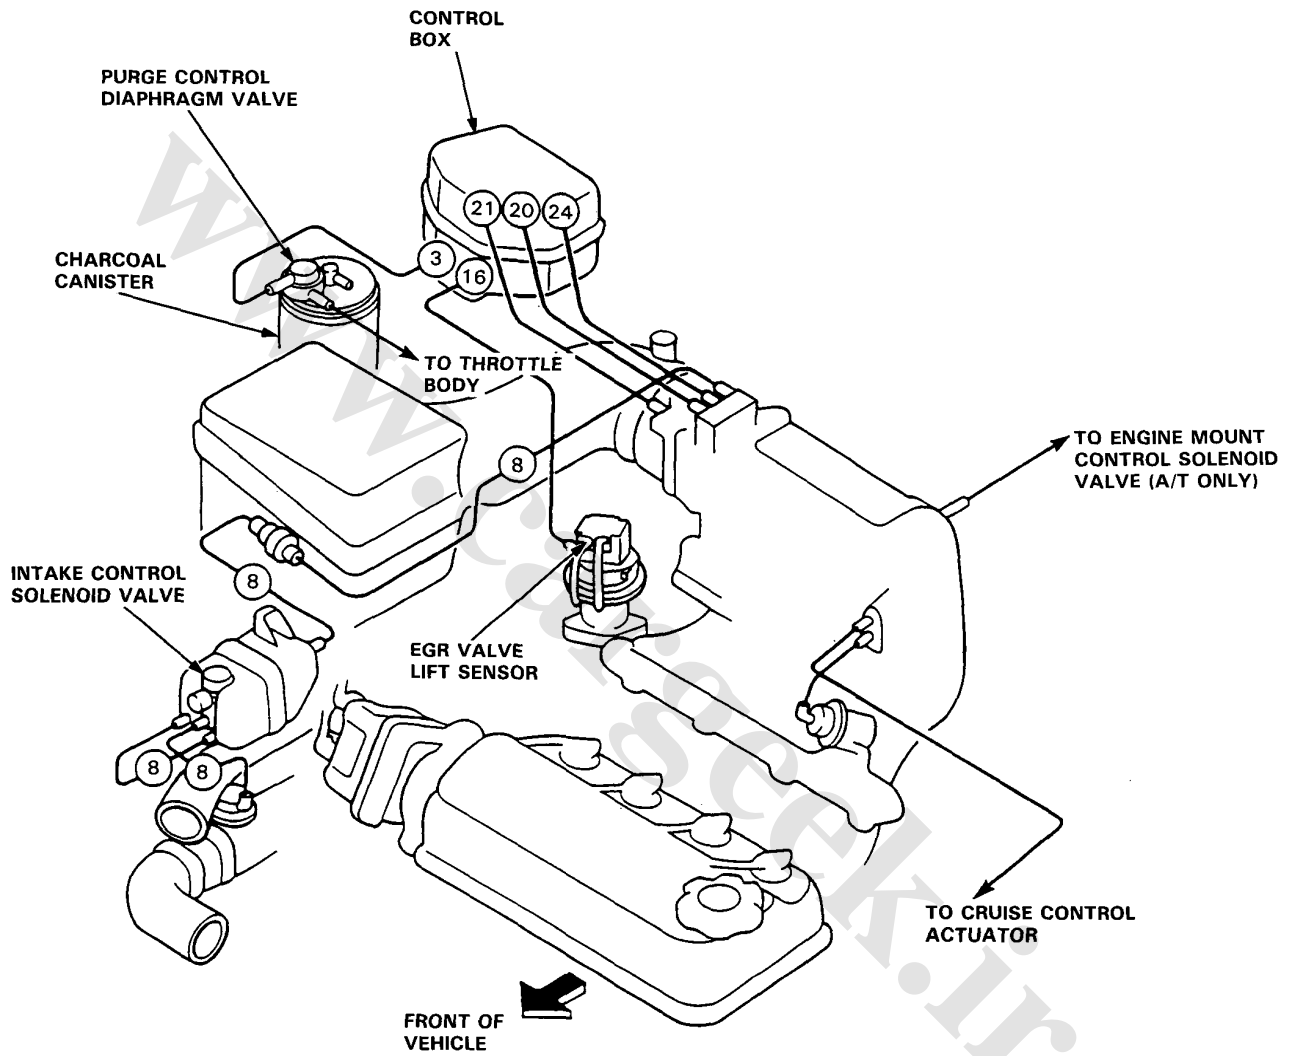

System Description

Vacuum Connections

Control Box (LHD):

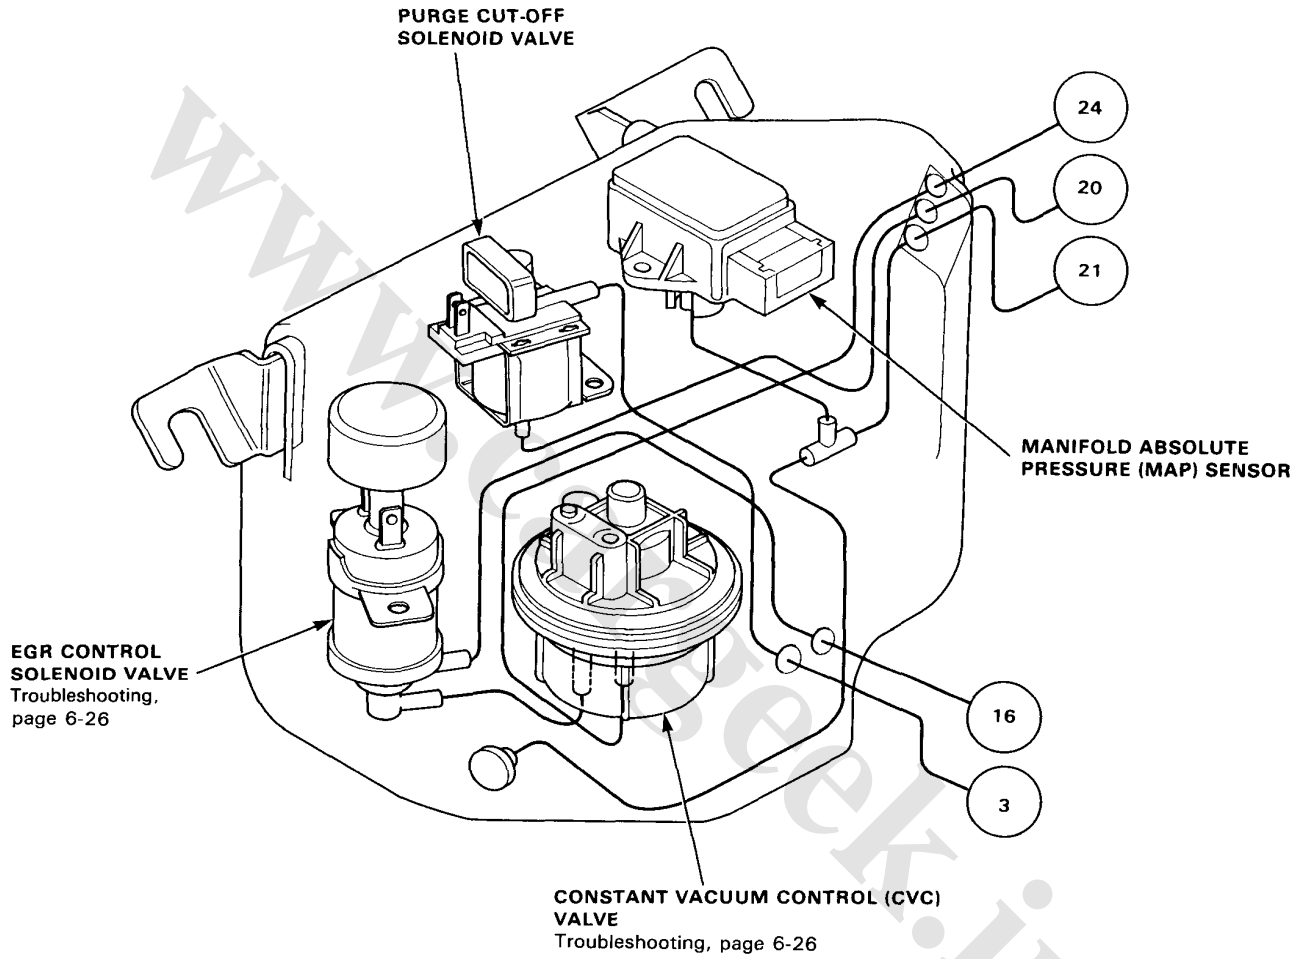




Control Box (RHD):

MANIFOLD ABSOLUTE
PRESSURE (MAP)
SENSOR

CONSTANT VACUUM CONTROL (CVC)
VALVE
Troubleshooting,
page 6-26

PURGE CUT-OFF
SOLENOID VALVE

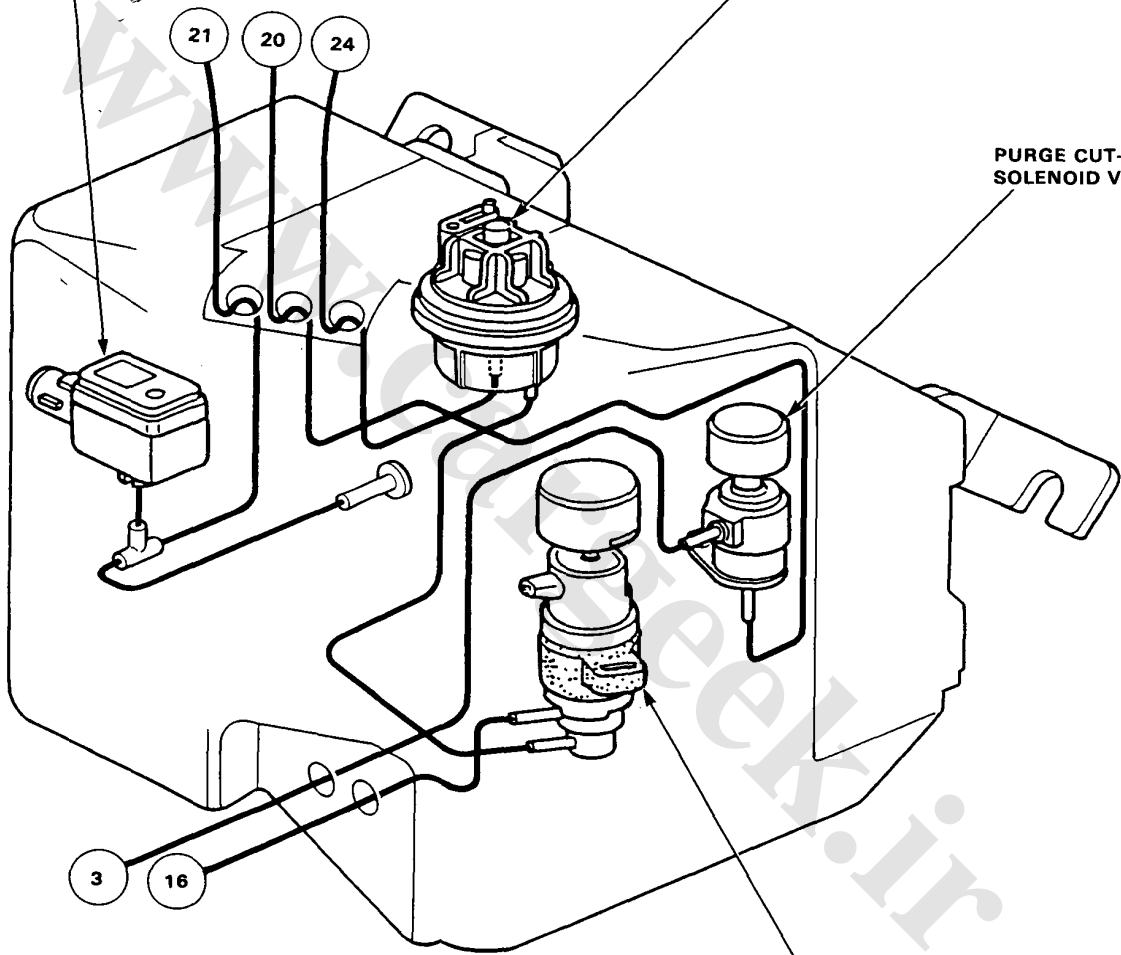


EGR CONTROL
SOLENOID
VALVE
Troubleshooting,
page 6-26

System Description


Electrical Connections

- FUSES**
- ① ECU (10 A)*
 - ② No. 2 (15 A)
 - ③ No. 9 (7.5 A)
 - ④ No. 7 (7.5 A)
 - ⑤ No. 1 (10 A)
 - ⑥ BACK UP (7.5 A)*
 - ⑦ IG (50 A)*
 - ⑧ BATTERY (80 A)*
- *In the main fuse box

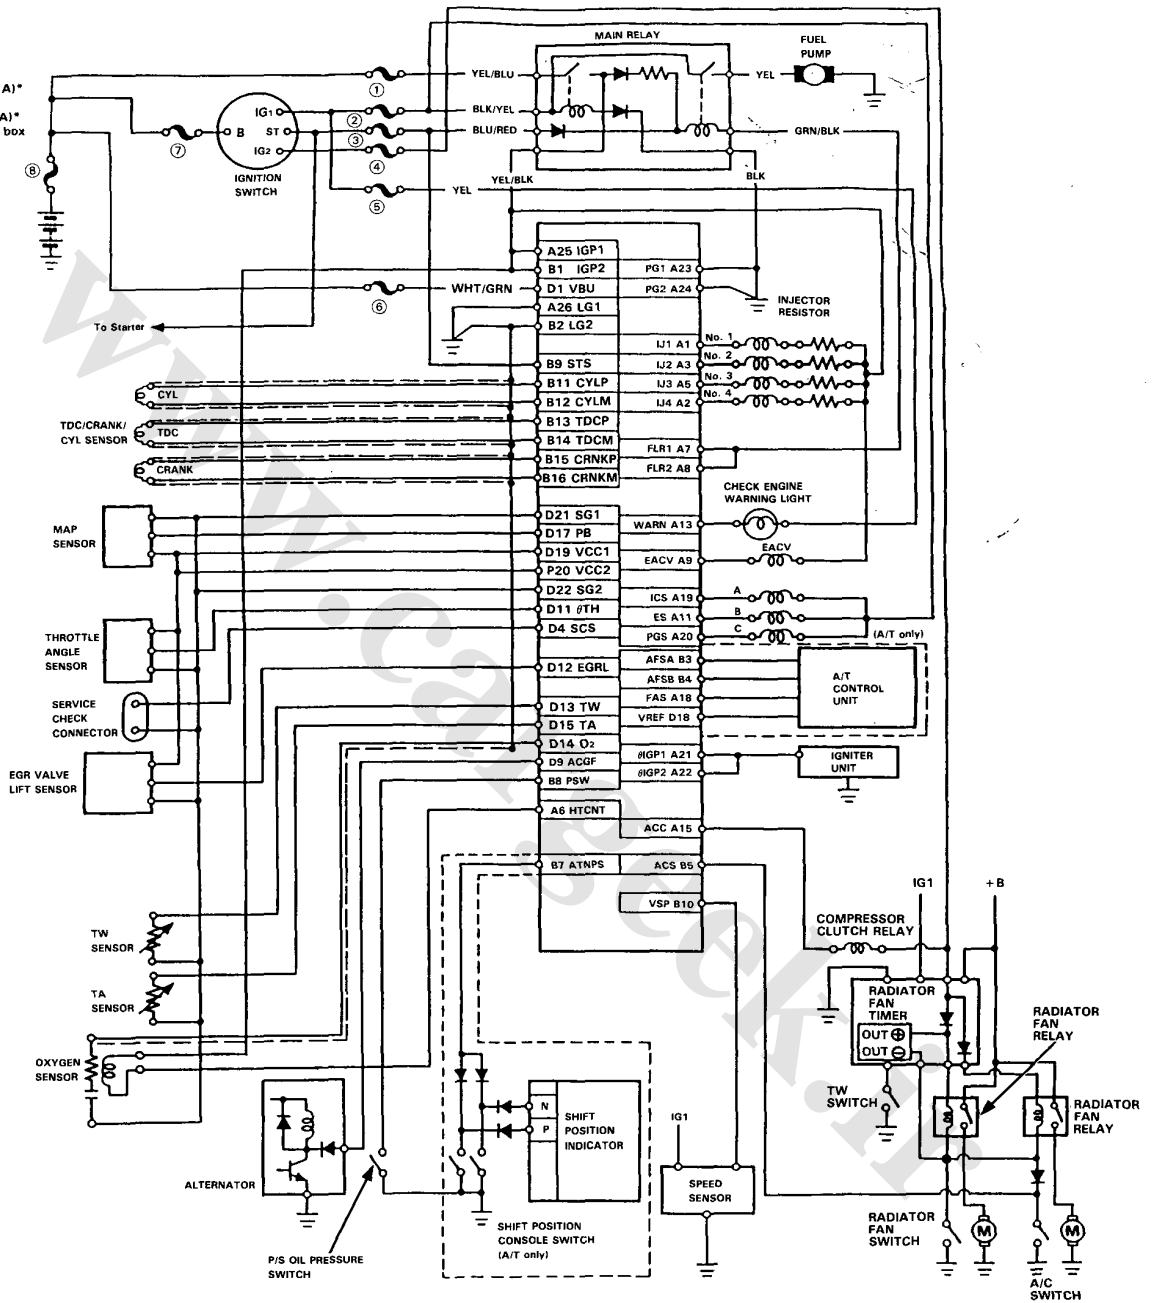

A: INTAKE CONTROL SOLENOID VALVE
 B: EGR CONTROL SOLENOID VALVE
 C: PURGE CUT-OFF SOLENOID VALVE

NOT USED







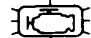



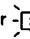
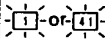
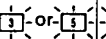
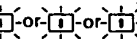
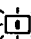
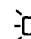
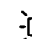
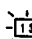


TERMINAL LOCATION

Troubleshooting

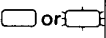Troubleshooting Guide

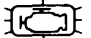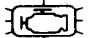NOTE: Across each row in the chart, the systems that could be sources of a symptom are ranked in the order they should be inspected starting with ①. Find the symptom in the left column, read across to the most likely source, then refer to the page listed at the top of that column. If inspection shows the system is OK, try the next most likely system ②, etc.

PAGE	SYSTEM	PGM-FI							
		ECU	OXYGEN SENSOR	MANIFOLD ABSOLUTE PRESSURE SENSOR	TDC/CRANK/CYL SENSOR	COOLANT TEMPERATURE SENSOR	THROTTLE ANGLE SENSOR	INTAKE AIR TEMPERATURE SENSOR	ATMO-SPHERIC PRESSURE SENSOR
SYMPTOM		—	16, 20	—	—	—	—	—	—
CHECK ENGINE WARNING LIGHT TURNS ON		 or 							
CHECK ENGINE WARNING LIGHT BLINKS		 or 							
ENGINE WON'T START		③			③				
DIFFICULT TO START ENGINE WHEN COLD		BU		③	③	①			③
IRREGULAR IDLING	WHEN COLD FAST IDLE OUT OF SPEC	BU				③			
	ROUGH IDLE	BU		③					
	WHEN WARM IDLE SPEED TOO HIGH	BU							
	WHEN WARM IDLE SPEED TOO LOW	BU							
FREQUENT STALLING	WHILE WARMING UP	BU				③			
	AFTER WARMING UP	BU							③
POOR PERFORMANCE	MISFIRE OR ROUGH RUNNING	BU			③				
	FAILS EMISSION TEST	BU	③	②					
	LOSS OF POWER	BU		③			②		

- if codes other than those listed above are indicated, count the number of blinks again. If the indicator is in fact blinking these codes, substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.
- BU: When the Check Engine warning light and the self-diagnosis indicator are on, the back-up system is in operation. Substitute a known-good ECU and recheck. If the indication goes away, replace the original ECU.



IGNITION OUTPUT SIGNAL	PGM-FI		IDLE CONTROL		FUEL SUPPLY	AIR INTAKE	EMISSION CONTROL	
	VEHICLE SPEED SENSOR	A/T FI Signal A	A/T FI Signal B	ELECTRONIC AIR CONTROL VALVE			OTHER IDLE CONTROLS	EGR CONTROL SYSTEM
—	—	—	—	—	—	—	26	—
①					②			
					②			
				①	②			
				①		②	③	
				①	②			
				①	②	③		
				③	①	②	③	
				③		①	③	
					②			①
					①	③		③


Troubleshooting

Self-diagnostic Procedures


I. When the Check Engine warning light has been reported on, do the following:

1. Connect the Service Check Connector terminals with a jumper wire as shown (the Service Check Connector is located under the dash on the passenger side of the car).

LHD:

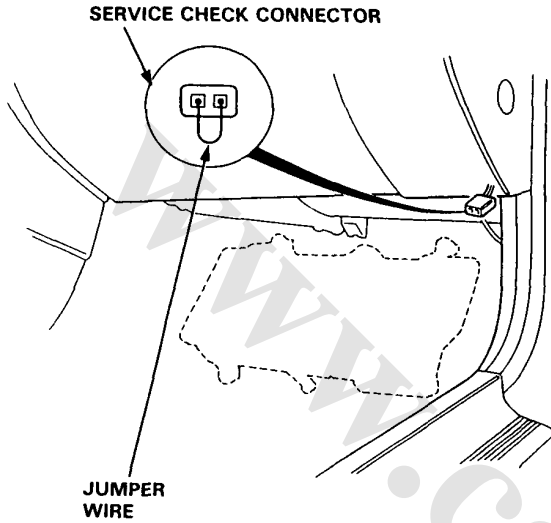


RHD:

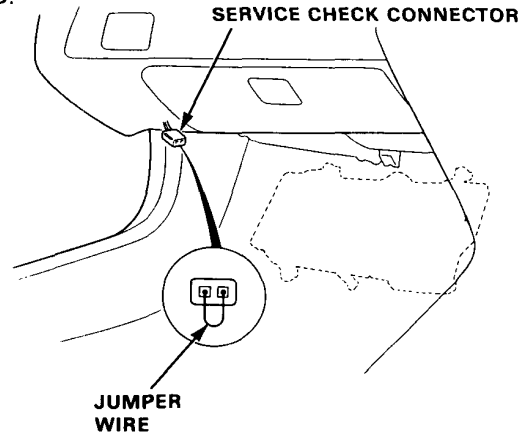


2. Note the CODE: the Check Engine warning light indicates a failure code by blinking frequency. The Check Engine warning light can indicate any number of simultaneous component problems by blinking separate codes, one after another. Problem codes 1 through 9 are indicated by a individual short blinks. Problem codes 10 through 41 are indicated by a series of long and short blinks. The number of long blinks equals the first digit, the number of short blinks equals the second digit.

CHECK ENGINE WARNING LIGHT

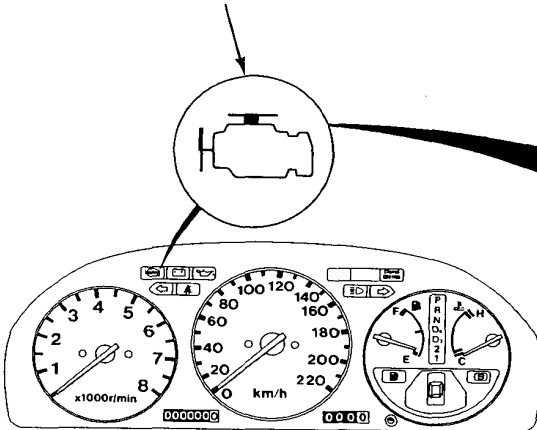


Separate Problems:

Short



Long short

Simultaneous Problems:






II. ECU Reset Procedure

1. Turn the ignition switch off.
2. Remove the Back Up fuse (7.5 A) from the under-hood fuse/relay box for 10 seconds to reset ECU.

NOTE: Disconnecting the Back Up fuse also cancels the radio preset stations and the clock setting. Make note of the radio presets before removing the fuse so you reset them.

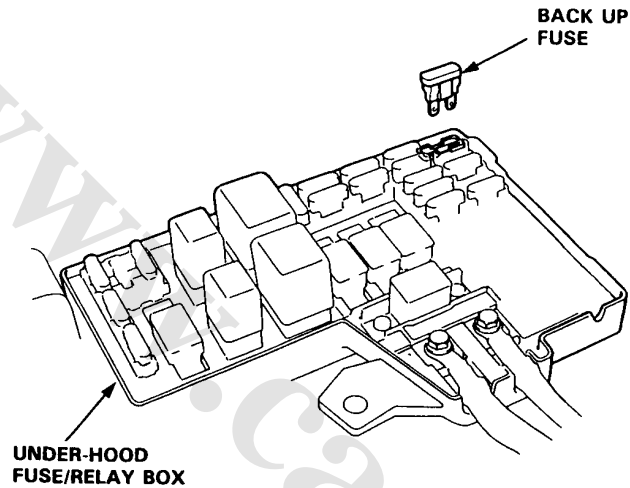

III. Final Procedure (this procedure must be done after any troubleshooting)

1. Remove the Jumper Wire.

NOTE: If the Service Check Connector is jumped the Check Engine warning light will stay on.

2. Do the ECU Reset Procedure.
3. Set the radio preset stations and the clock setting.

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor



Self-diagnosis Check Engine warning light indicates code 1: A problem in the Heated Oxygen (O₂) Sensor circuit.



— Check Engine warning light has been reported on, with service check connector jumped (page 6-14) CODE 1 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Inspect fuel pressure.

Is it normal ?

NO

Go to Fuel Supply System.

YES

Warm up engine to normal operating temperature (cooling fan comes on).

Run engine for 10 seconds.

Road test with the Transmission in 2nd gear, accelerate using wide open throttle for at least 5 seconds. Then decelerate for at least 5 seconds with the throttle completely closed.

Is Check Engine warning light on and does it indicate CODE 1 ?

NO

Intermittent failure, system is OK at this time. Check for poor connections or loose wires.

YES

(To page 6-17)



(From page 6-16)

Turn the ignition switch OFF.

Disconnect the O₂ sensor connector and connect A (-) terminal to B (+) terminal with a battery.

After two minutes, measure voltage between C (-) terminal and D (+) terminal.

Start the engine.

Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and below 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Replace O₂ sensor.


YES

Stop engine.

Connect the O₂ sensor connector to engine wire harness.

Connect the test harness between the ECU and connector.

(To page 6-18)

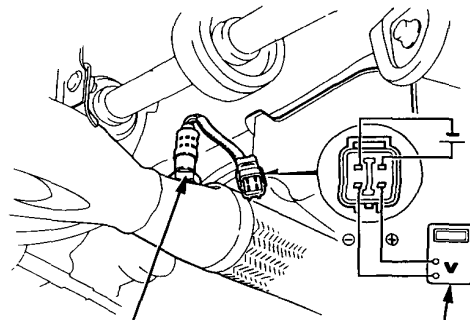

O₂ SENSOR
45 N·m (4.5 kg·m, 33 lb·ft)

DIGITAL MULTIMETER
07411-0020000

www.cargeek.ir

(cont'd)

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor (cont'd)

(From page 6-17)

Restart and warm up engine to normal operating temperature (cooling fan comes on).

Measure voltage between D14 (+) and A26 (-) terminal.


Is the voltage above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm) and 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm) ?

NO

Repair short or open in WHT wire between ECU (D14) and O₂ sensor.

YES


Substitute a known-good ECU and recheck. If symptom/indication goes away, replace the original ECU.



Above 0.6 V at wide open throttle to 4,500 min⁻¹(rpm).
Below 0.4 V when the throttle is quickly released from 4,500 min⁻¹(rpm).

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor Heater



Self-diagnosis Check Engine warning light indicates code 41: A problem in the Oxygen (O₂) Sensor Heater circuit.

— Engine is running.
— Check Engine warning light has been reported on, with service check connector jumped (page 6-14), CODE 41 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine warning light on and does it indicate CODE 41 ?

NO

Intermittent failure, system is OK at this time (test driving may be necessary).
Check for poor connections or loose wires at O₂ sensor connector.

YES

Stop engine.

Disconnect the 4P connector from the O₂ sensor.

Measure resistance between terminals A and B on the O₂ sensor.

Is there 10–40 Ω ?

NO

Replace O₂ sensor.

YES

Check for continuity to body ground on each terminal on the O₂ sensor.

Does continuity exist ?

YES

Replace O₂ sensor.

NO

Check for continuity between terminal A and terminals C and D individually.


Does continuity exist ?

YES

Replace O₂ sensor.


NO

(To page 6-21)

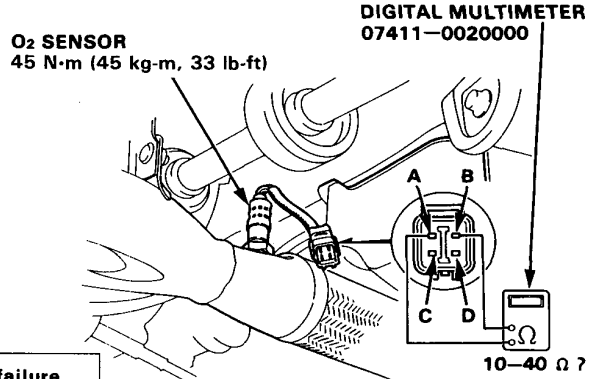



(From page 6-20)

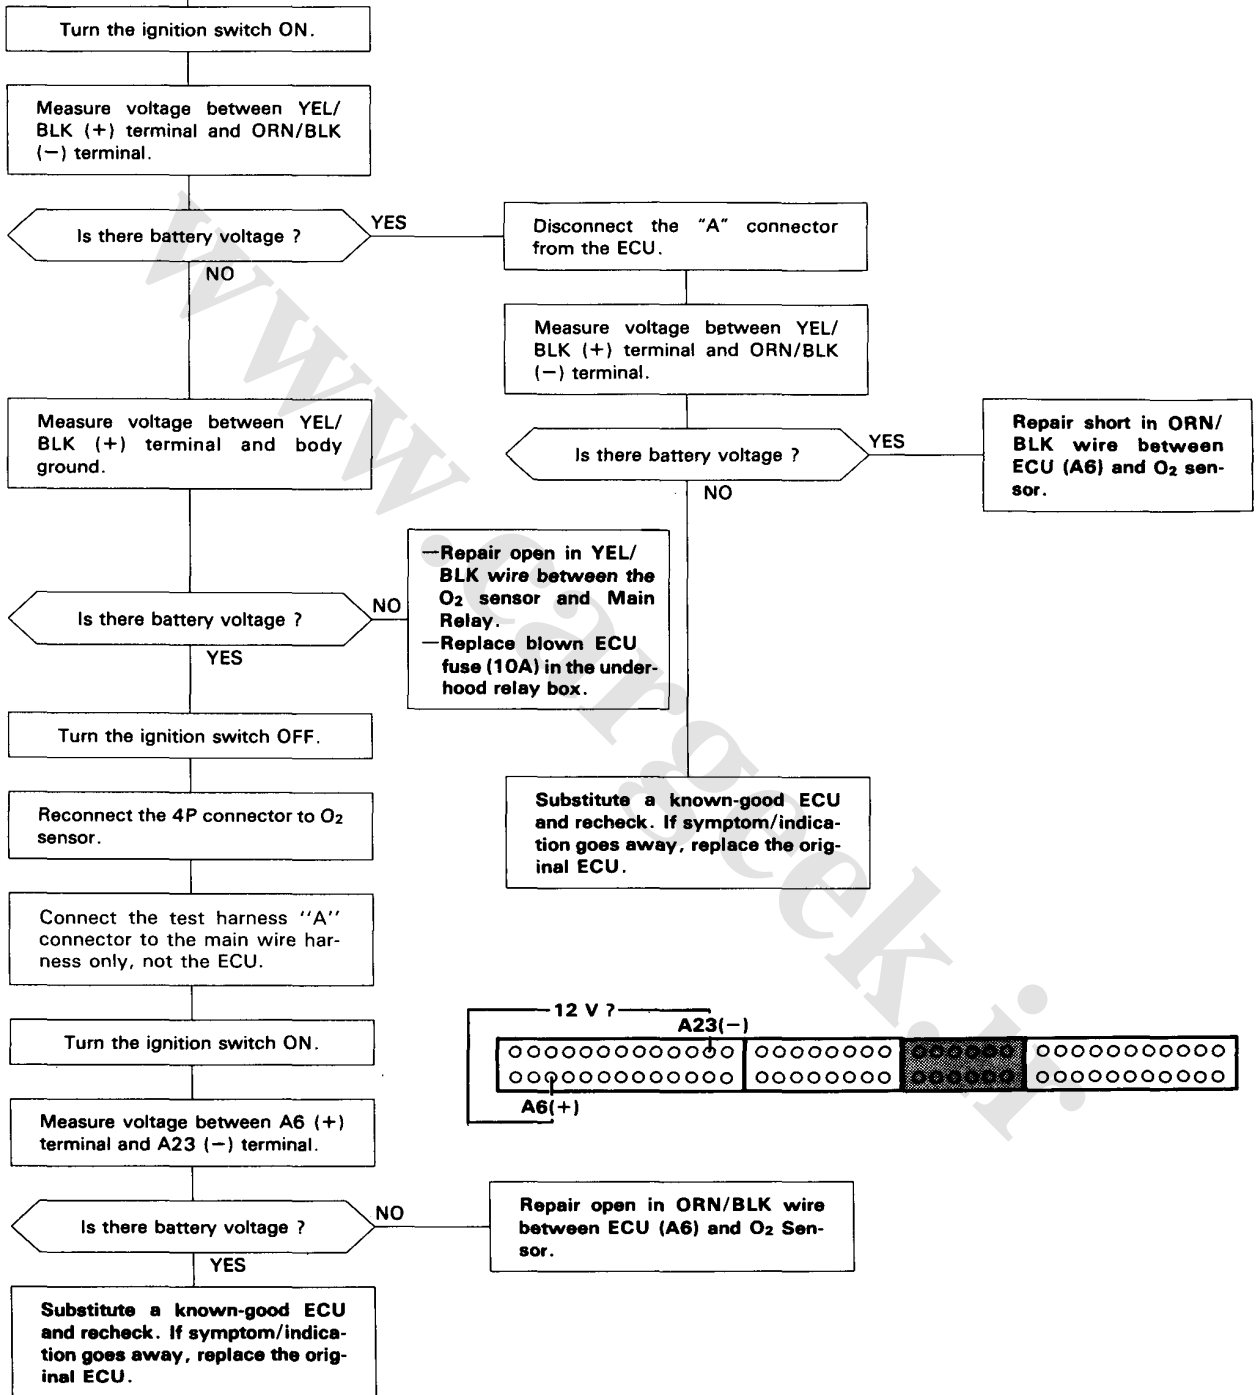


Idle Control System


Idle Speed Setting

Inspection/Adjustment

1. Start the engine and warm it up to normal operating temperature (the cooling fan comes on).
2. Connect a tachometer.

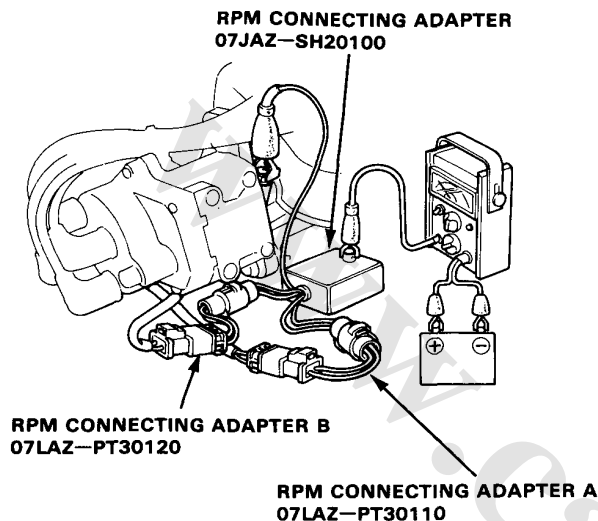

3. Disconnect the 2P connector from the EACV.

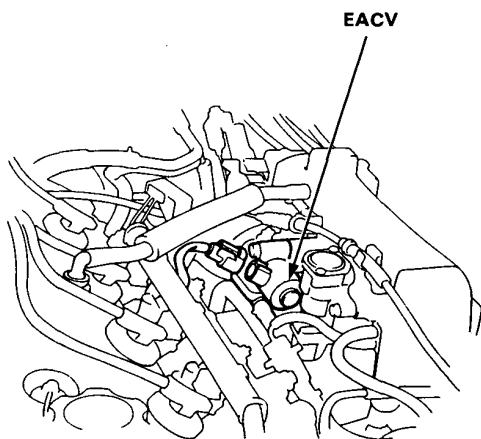


4. Check idling in no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating.

Idle speed should be:

Manual	620 ± 50 min ⁻¹ (rpm)
Automatic	620 ± 50 min ⁻¹ (rpm) (N or P)

Adjust the idle speed, if necessary, by turning the idle adjusting screw.

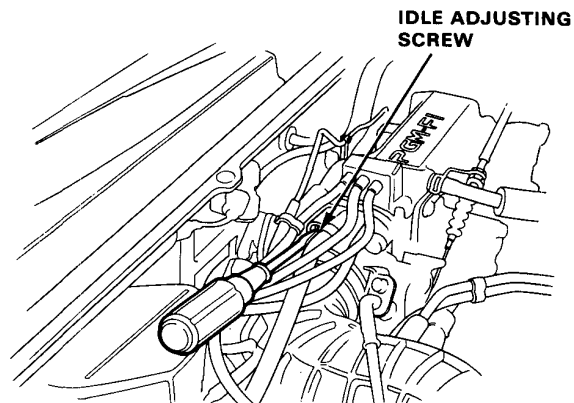

5. Turn the ignition switch OFF.
6. Reconnect the 2P connector on the EACV, then remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.
7. Restart an idle the engine with no-load conditions in which the headlights, blower fan, rear defogger, cooling fan, and air conditioner are not operating for one minute, then check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm) (N or P)

8. Idle the engine for one minute with headlights (Hi) and rear defogger ON and check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm) (N or P)

9. Idle the engine for one minute with heater fan switch at HI and air conditioner on, then check the idle speed.

Idle speed should be:

Manual	770 ± 50 min ⁻¹ (rpm)
Automatic	770 ± 50 min ⁻¹ (rpm) (N or P)

NOTE: If the idle speed is not within specifications, see System Troubleshooting Guide (page 6-12).

Fuel Supply System

Fuel Pressure


Relieving

⚠ WARNING

- Do not smoke while working on the fuel system. Keep open flames or sparks away from the work area.
- Be sure to relieve fuel pressure while the engine is off.

NOTE: Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the 6 mm service bolt at the fuel pipe.

1. Remove fuel filter cap.
2. Disconnect the battery negative cable from the battery negative terminal.
3. Use a box end wrench on the 6 mm service bolt at the fuel pipe, while holding the special banjo bolt with another wrench.
4. Place a rag or shop towel over the 6 mm service bolt.
5. Slowly loosen the 6 mm service bolt one complete turn.

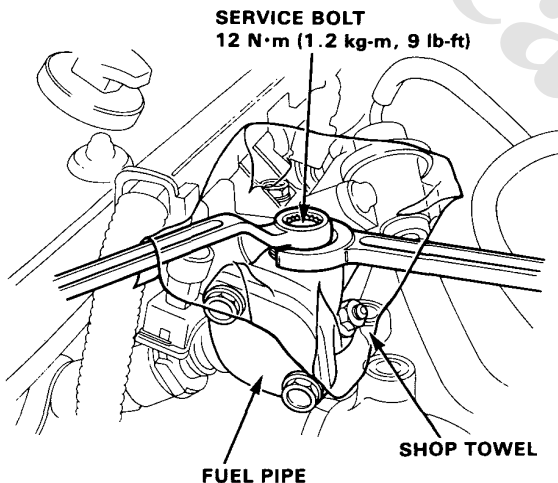

NOTE:

- A fuel pressure gauge can be attached at the 6 mm service bolt hole.
- Always replace the washer between the service bolt and the special banjo bolt, whenever the service bolt is loosened to relieve fuel pressure.
- Replace all washers whenever the bolts are removed to disassemble parts.

Inspection

1. Relieve fuel pressure.
2. Remove the service bolt on the fuel pipe while holding the banjo bolt with another wrench and attach the fuel pressure gauge.
3. Start the engine. Measure the fuel pressure with the engine idling and vacuum hose of the pressure regulator disconnected.

Pressure should be:


275–324 kPa (2.8–3.3 kg/cm², 40–47 psi)

4. Reconnect vacuum hose to the pressure regulator.

Pressure should be:

216–265 kPa (2.2–2.7 kg/cm², 31–38 psi)

FUEL PRESSURE GAUGE
07406–0040001

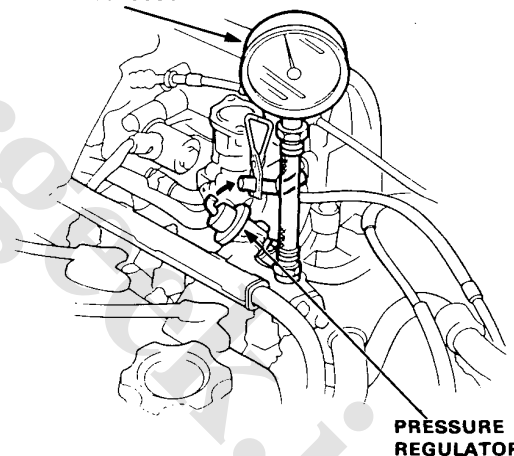

- If the fuel pressure is not as specified, first check the fuel pump. If the pump is OK, check the following:
 - If the pressure is higher than specified, inspect for:
 - Pinched or clogged fuel return hose or piping.
 - Faulty pressure regulator (page 6-25).
 - If the pressure is lower than specified, inspect for:
 - Clogged fuel filter.
 - Pressure regulator failure (page 6-25).
 - Leakage in the fuel line.



Pressure Regulator


Testing

⚠ WARNING Do not smoke during the test. Keep open flames away from your work area.

1. Attach a pressure gauge to the service port of the fuel pipe (page 6-24).


Pressure should be:
275–324 kPa (2.8–3.3 kg/cm², 40–47 psi)
(with the regulator vacuum hose disconnected)

FUEL PRESSURE GAUGE
07406–0040001

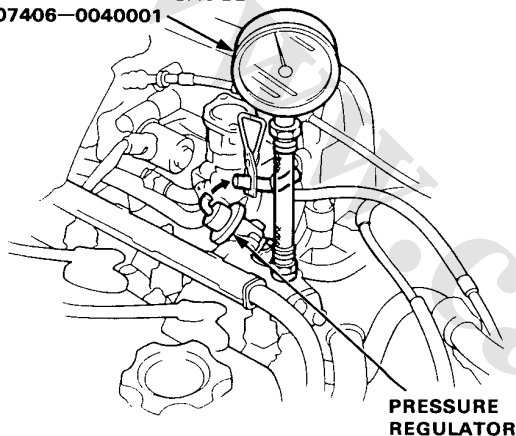

2. Reconnect the vacuum hose to the pressure regulator.
3. Check that the fuel pressure rises when the vacuum hose from the regulator is disconnected again.
 - If the fuel pressure did not rise, check to see if it rise with the fuel return hose lightly pinched.
 - If the fuel pressure still does not rise, replace the pressure regulator.

PRESSURE REGULATOR

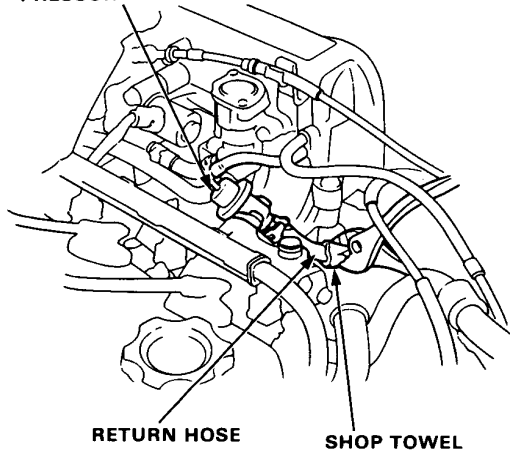


Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame way from work area.

1. Place a shop towel under pressure regulator, then relieve fuel pressure (page 6-24).
2. Disconnect the vacuum hose and fuel return hose.
3. Remove the two 6 mm retainer bolts.

O-RING
Replace.

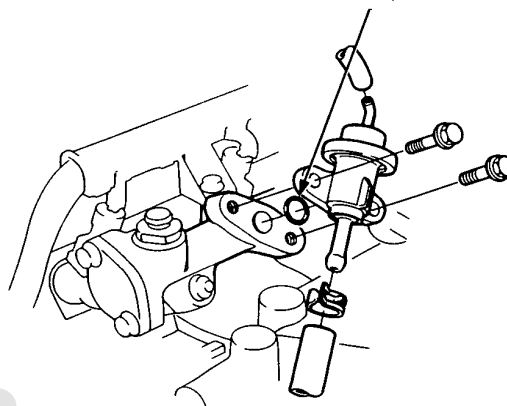

NOTE:

- Replace the O-ring.
- When assembling the regulator, apply clean engine oil to the O-ring and assemble it into its proper position, taking care not to damage the O-ring.


Emission Control System

Exhaust Gas Recirculation System

Troubleshooting Flowchart



Self-diagnosis Check Engine warning light indicates code 12: Most likely a problem in the Exhaust Gas Recirculation (EGR) system.



— Check Engine warning light has been reported on, with service check connector jumped (page 6-14), CODE 12 is indicated.

Turn the ignition switch OFF.

Remove the BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Road test necessary: Warm up the engine to normal operating temperature (cooling fan comes on). Drive the car on the road for approx. 10 minutes. Try to keep the engine speed in the 1700–2500 range.


Is Check Engine warning light on and does it indicated CODE 12 ?

NO

Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires at EGR and ECU.

YES

With the engine at idle, disconnect the #16 hose from the EGR valve and connect a vacuum pump/gauge to the hose.

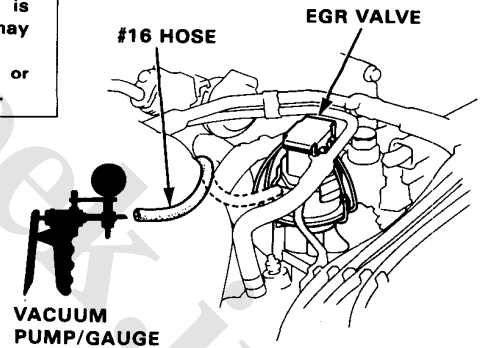

(To page 6-27)

Automatic Transmission - Road Test

www.cargeek.ir

Automatic Transmission

Road Test 9-2

NOTE: Refer to following shop manuals for service procedures.

On-car service of the automatic transmission	ACCORD CHASSIS Maintenance and Repair (62SM400) Automatic Transmission PX4B (Fuel-Injected Engine) ACCORD SUPPLEMENT 92 (62SM422) Automatic Transmission (Fuel-Injected Engine)
Automatic transmission service	PX4B AUTOMATIC TRANSMISSION Maintenance and Repair (62PX400) • PX4B Automatic Transmission B type • Differential ACCORD SUPPLEMENT 92 (62SM422) Automatic Transmission (Fuel-Injected Engine)



SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

The ACCORD COUPE includes a driver's side airbag, located in the steering wheel hub, as part of a Supplemental Restraint System (SRS Type I). Information necessary to safely service the SRS is included in 92 ACCORD shop manual (P/N 62SM422). Servicing, disassembling or replacing these items will require special precautions and tools, and should therefore be done only by an authorized HONDA dealer.

Outline of Model Change

The ACCORD COUPE has been added.

Road Test

NOTE: Warm up the engine to operating temperature.

1. Apply parking brake and block the wheels. Start the engine, then move the selector lever to **D₄** while depressing the brake pedal. Depress the accelerator pedal, and release it suddenly. Engine should not stall.
2. Repeat same test in **D₃** position.
3. Shift the selector lever to **D₄** position and check that the shift points occur at approximate speeds shown. Also check for abnormal noise and clutch slippage.

D₄ Position: Normal Mode (S switch OFF)

● Upshift

		1st–2nd	2nd–3rd	3rd–4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	21–24	42–45	58–64	23–27
	mph	13–15	26–28	36–40	14–17
3.5/8 throttle Acceleration from a stop	km/h	27–34	56–63	87–97	97–105
	mph	17–21	35–39	54–60	60–65
Full-throttle Acceleration from a stop	km/h	48–56	108–114	151–164	130–138
	mph	30–35	67–71	94–102	81–86

● Downshift

		Lock-up Clutch OFF	4th–3rd	3rd–2nd	2nd–1st
0.7/8 throttle Coasting or braking to a stop	km/h	21–26	29–35	—	(3rd–1st) 10–16
	mph	13–16	18–22	—	(3rd–1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	77–85	—	—	—
	mph	48–53	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	127–135	126–135	85–94	40–48
	mph	79–84	78–84	53–59	25–30


D₄ Position: S Mode (S switch ON)

● Upshift

		1st–2nd	2nd–3rd	3rd–4th	Lock-up Clutch ON
0.7/8 throttle Coasting down-hill from a stop	km/h	18–21	42–45	77–84	40–45
	mph	11–13	26–28	48–52	25–28
3.5/8 throttle Acceleration from a stop	km/h	27–34	77–84	113–122	121–129
	mph	17–21	48–52	70–76	75–80
Full-throttle Acceleration from a stop	km/h	48–56	108–114	154–164	138–146
	mph	30–35	67–71	96–102	86–91

● Downshift

		Lock-up Clutch OFF	4th–3rd	3rd–2nd	2nd–1st
0.7/8 throttle Coasting or braking to a stop	km/h	40–45	29–35	—	(3rd–1st) 10–16
	mph	25–28	18–22	—	(3rd–1st) 6–10
3.5/8 throttle When car is slowed by increased grade, wind, etc.	km/h	95–103	—	—	—
	mph	59–64	—	—	—
Full-throttle When car is slowed by increased grade, wind, etc.	km/h	127–135	126–135	86–98	40–48
	mph	79–84	78–84	55–61	25–30



4. Accelerate to about 35 mph (57 km/h) so the transmission is in 4th, then shift **D₄** to **2**. The car should immediately begin slowing down from engine braking.

CAUTION: Do not shift from **D₄** or **D₃** to **2** or **1** at speeds over 62.5 mph (100 km/h); you may damage the transmission.

1 (1st Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this position.

2 (2nd Gear)

1. Accelerate from a stop at full throttle. Check that there is no abnormal noise or clutch slippage.
2. Upshifts and downshifts should not occur with the selector in this position.

R (Reverse)

Accelerate from a stop at full throttle, and check for abnormal noise and clutch slippage.

P (Park)


Park car on slope (approx. 16°), apply the parking brake, and shift into Park. Release the brake; the car should not move.

Door
Quarter Glass
Interior Trim
Front Seat Cables/Rear Seats
Seat Belts
Trunk Lid/Fuel Lid Opener Cables
Side Mouldings

www.cargeek.ir

Doors


Index

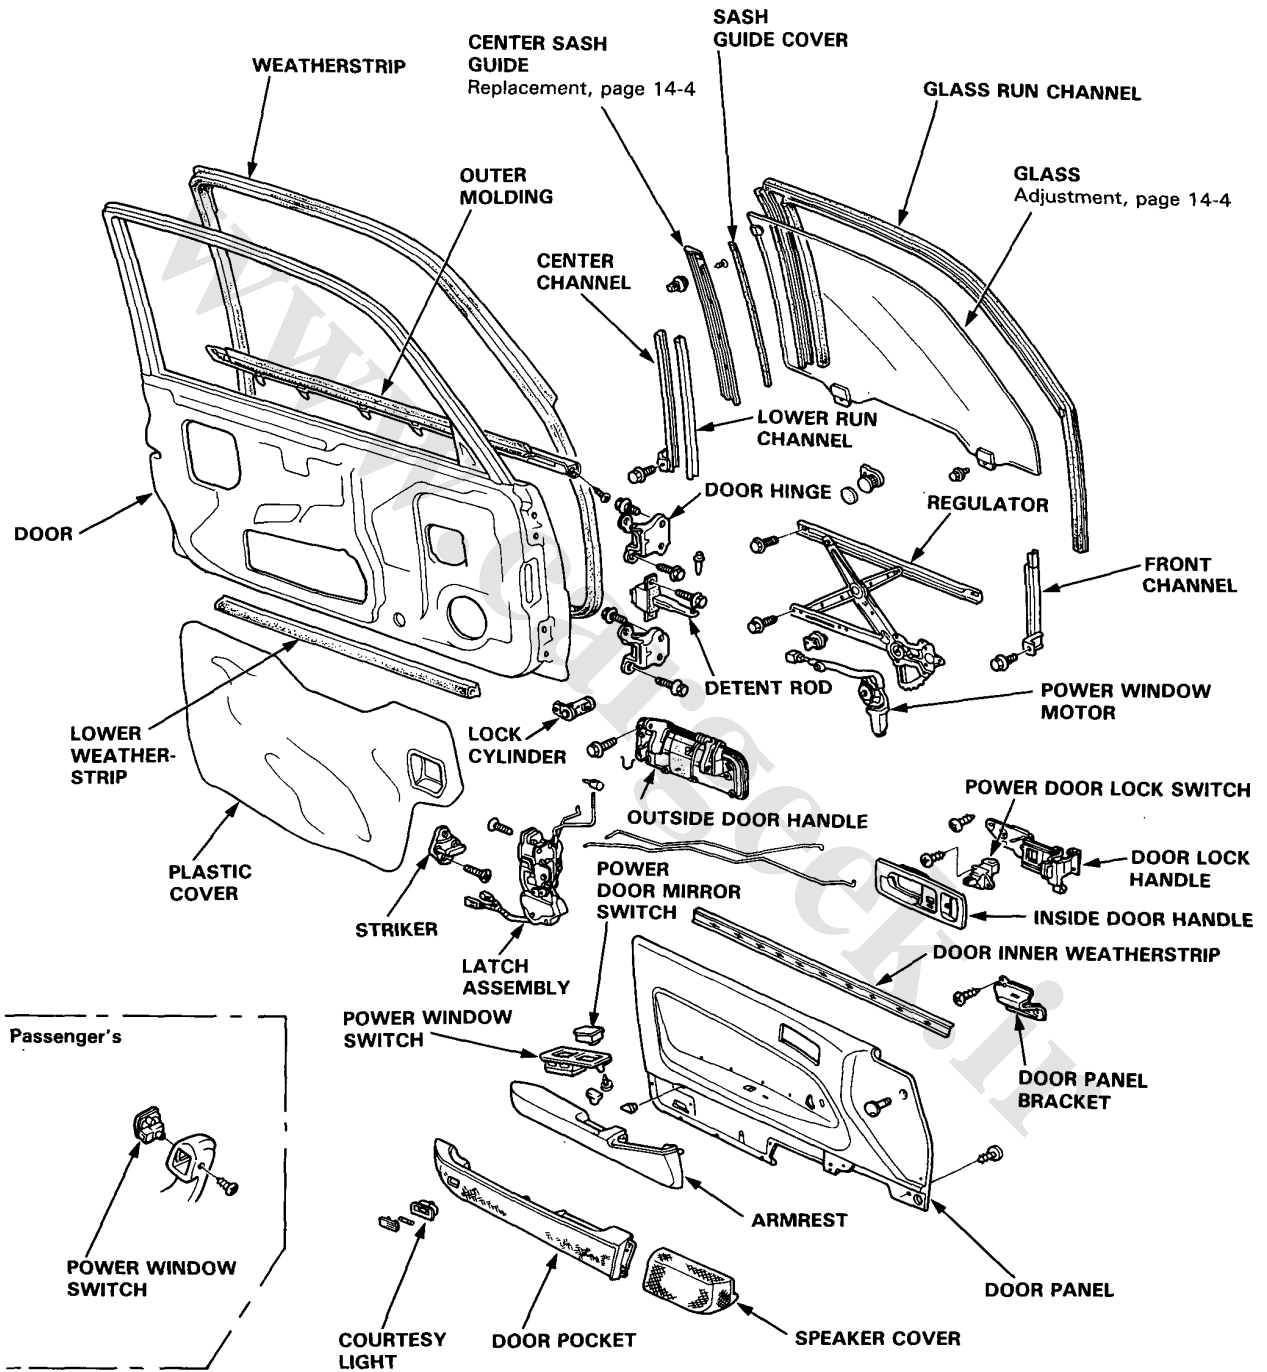




Inside Door Handle/Lock Handle Replacement


1. Remove the mounting screws, then pull the inside door handle out half-way and disconnect the latch rod.

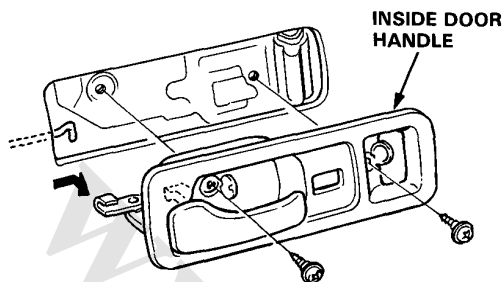


NOTE: Remove the panel with as little bending as possible to avoid creasing or breaking it.

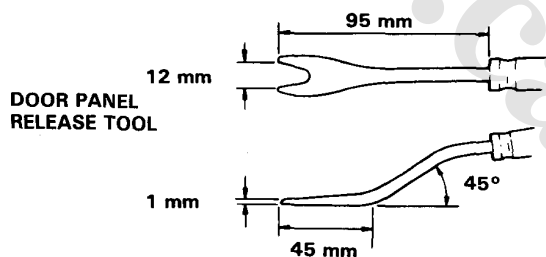


2. Remove the power door mirror switch and disconnect the connector.

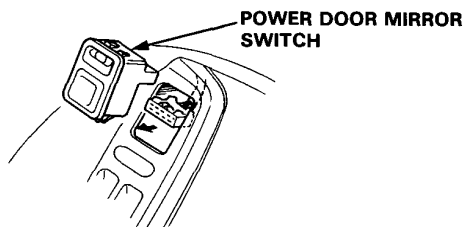

3. Remove the screws and clips (see door panel release tool) attaching the door panel. Remove the door panel by pulling it upward and disconnect the power window and courtesy light harnesses.

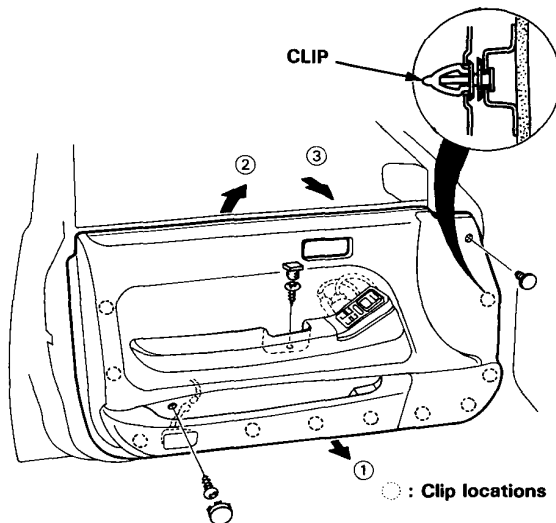

4. Disconnect the connector and latch rod. Remove the mounting screws, then remove the door lock handle.

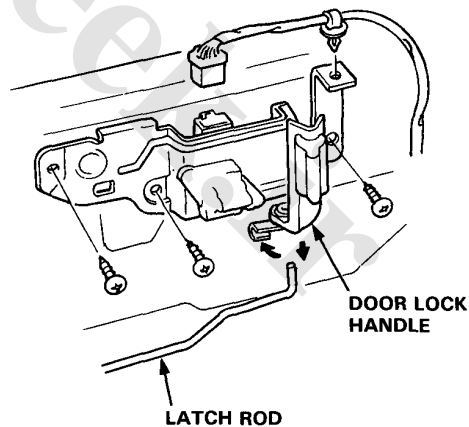


5. Installation is the reverse of the removal procedure.


Doors

Center Sash Guide/Glass Replacement

1. Remove:
 - Door panel (page 14-3)
 - Plastic cover
2. Lower the window fully.
3. Peel off the sash guide cover and remove the mounting screws, then remove the center sash guide from the door.

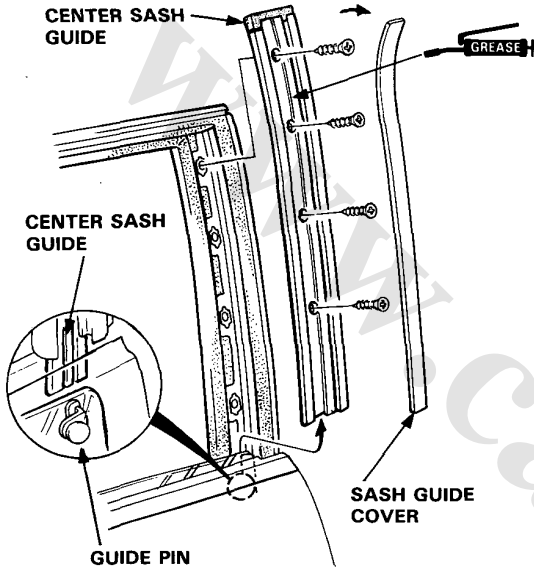


4. Carefully raise the window until you can see its mounting bolts, then remove the bolts.
5. Pull the glass out through the window slot.

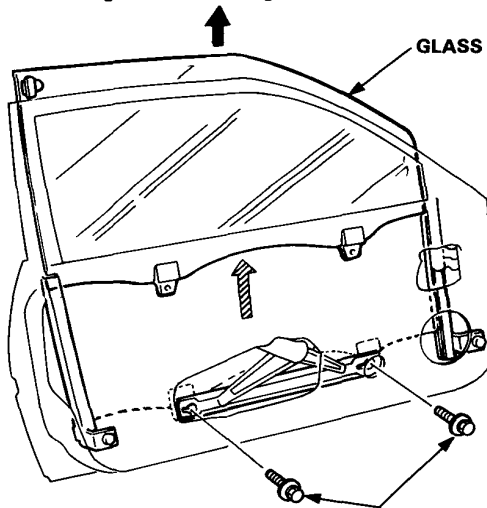

GLASS MOUNTING BOLTS
6 x 1.0 mm
6 N·m (0.6 kg·m, 4.3 lb·ft)

6. Installation is the reverse of the removal procedure.
7. Roll the glass up and down to see if it moves freely without binding. Also make sure that there is no clearance between the glass and glass run channel when the glass is closed.

NOTE: If necessary, loosen the roller guide bolt and adjust the window glass so it is parallel with the glass run channel.

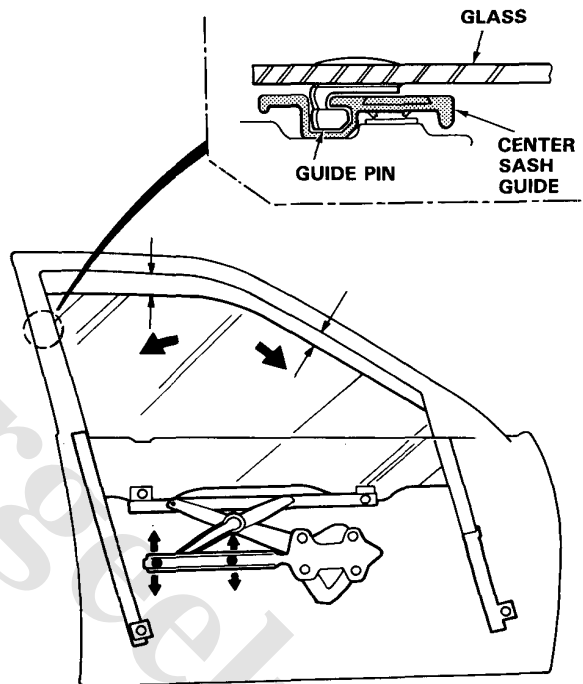





Quarter Glass

Replacement


1. Pry the latch cover out and remove the mounting screws.

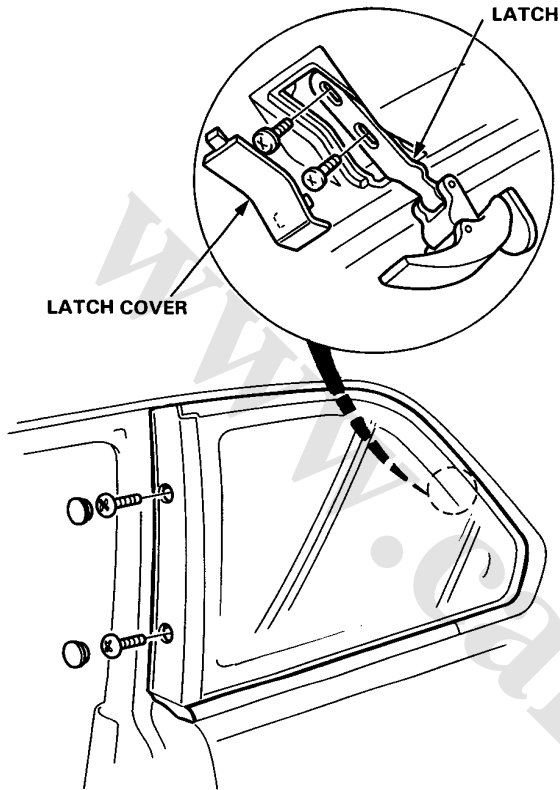


2. Remove the caps and 2 screws, then remove the quarter glass.
3. If necessary, pull out the special nut and holder from the body.

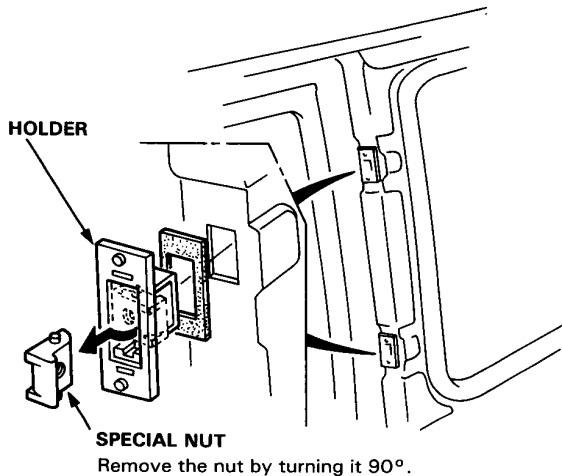

4. Remove the E-clip with a flat tip screwdriver, then remove the latch.

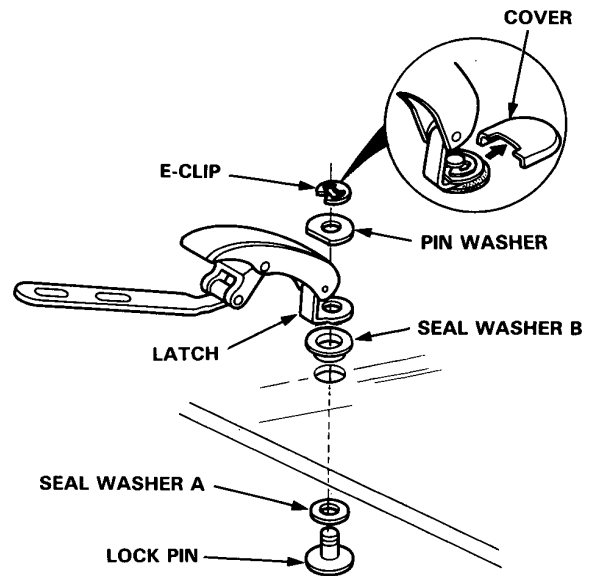

5. Remove the hinge mounting nuts and quarter glass hinges.

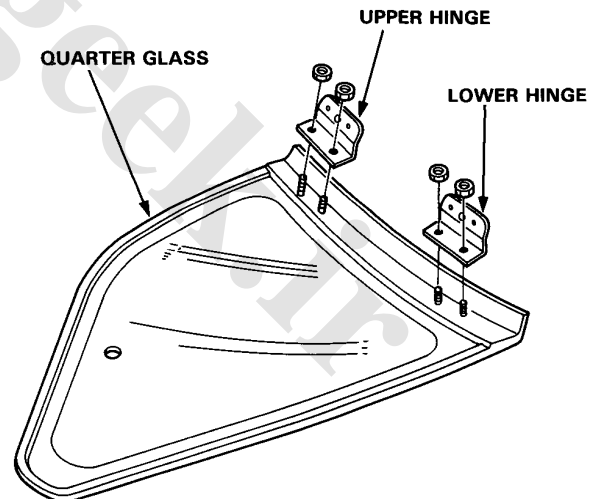


(cont'd)

Quarter Glass


Replacement (cont'd)

6. Remove the lower molding and the quarter molding.

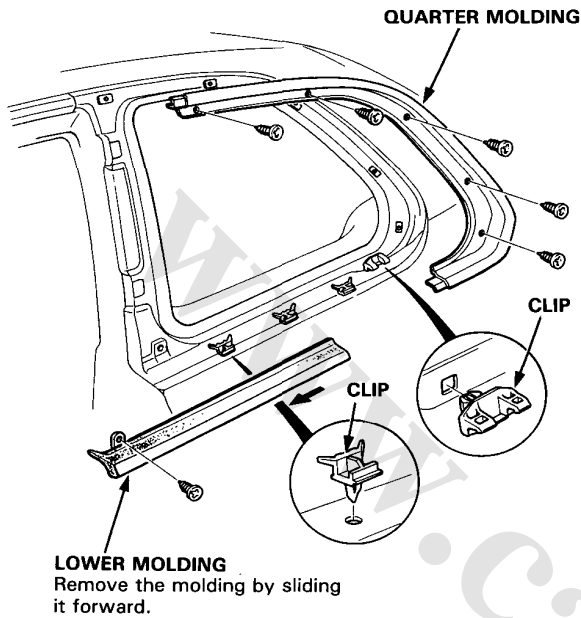

7. Install the lower molding, set the clips on to the molding.

8. Install in the reverse order of removal. Check for proper glass fit when closed after installation. To adjust, loosen the latch mounting screws and move the latch back and forth. Adjust so that the latch works smoothly, and the glass closes securely. Check for proper contact between the glass and weatherstrip at the rear edge.

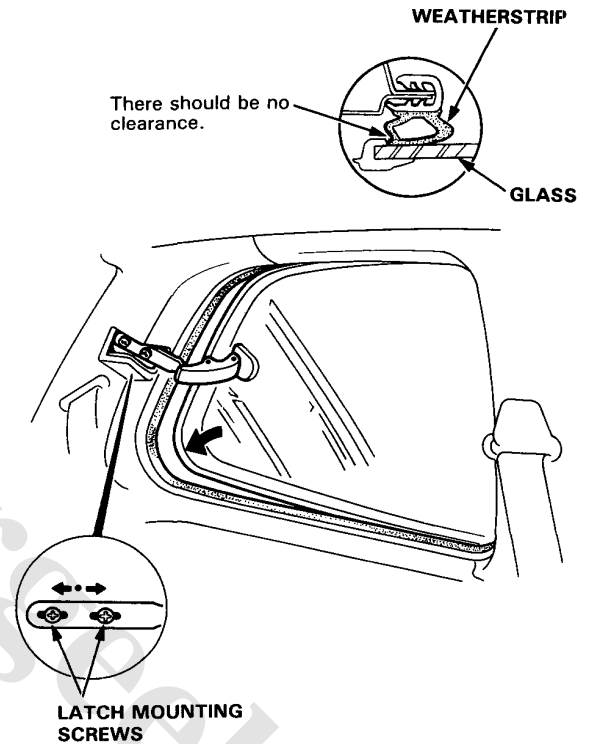

9. With the quarter glass closed fully, check for water and air leaks.

NOTE: Do not use high pressure water.





Interior Trim

Replacement

Disassemble in numbered sequence.

⊙: Clip locations

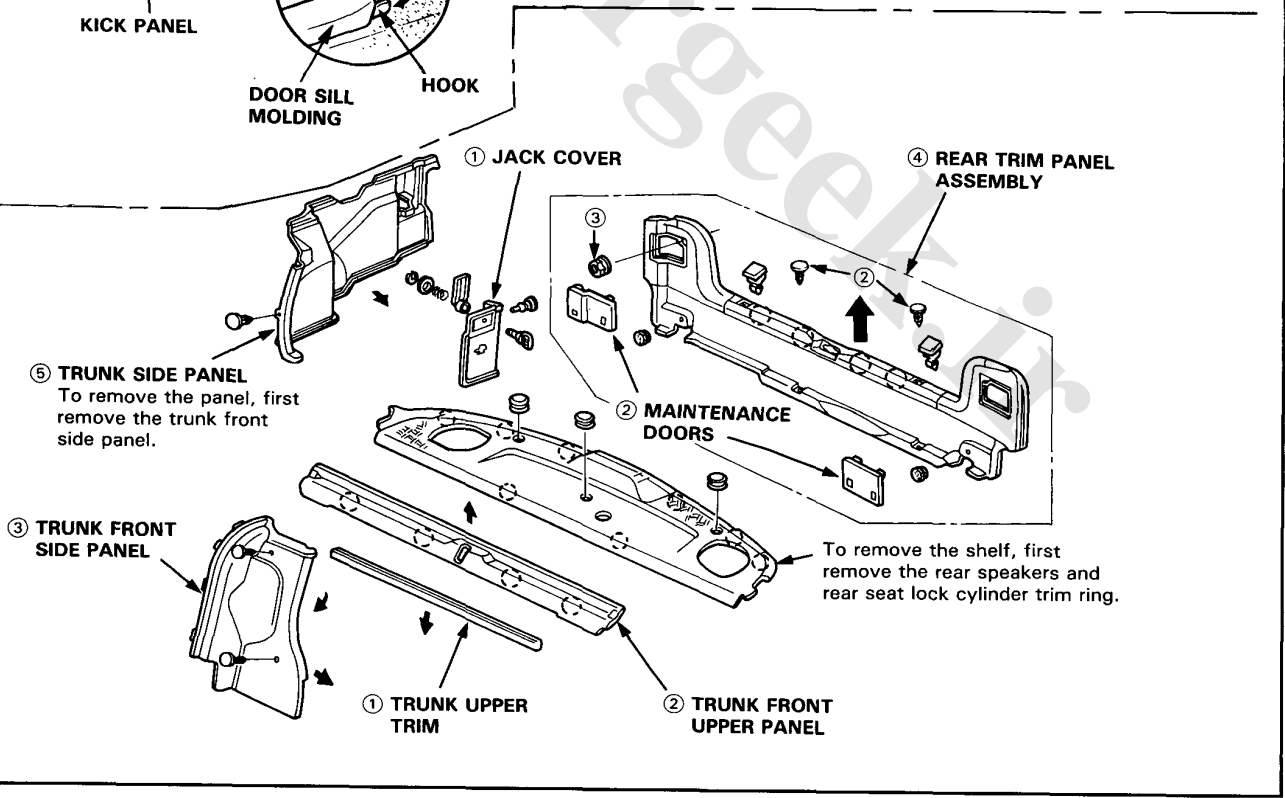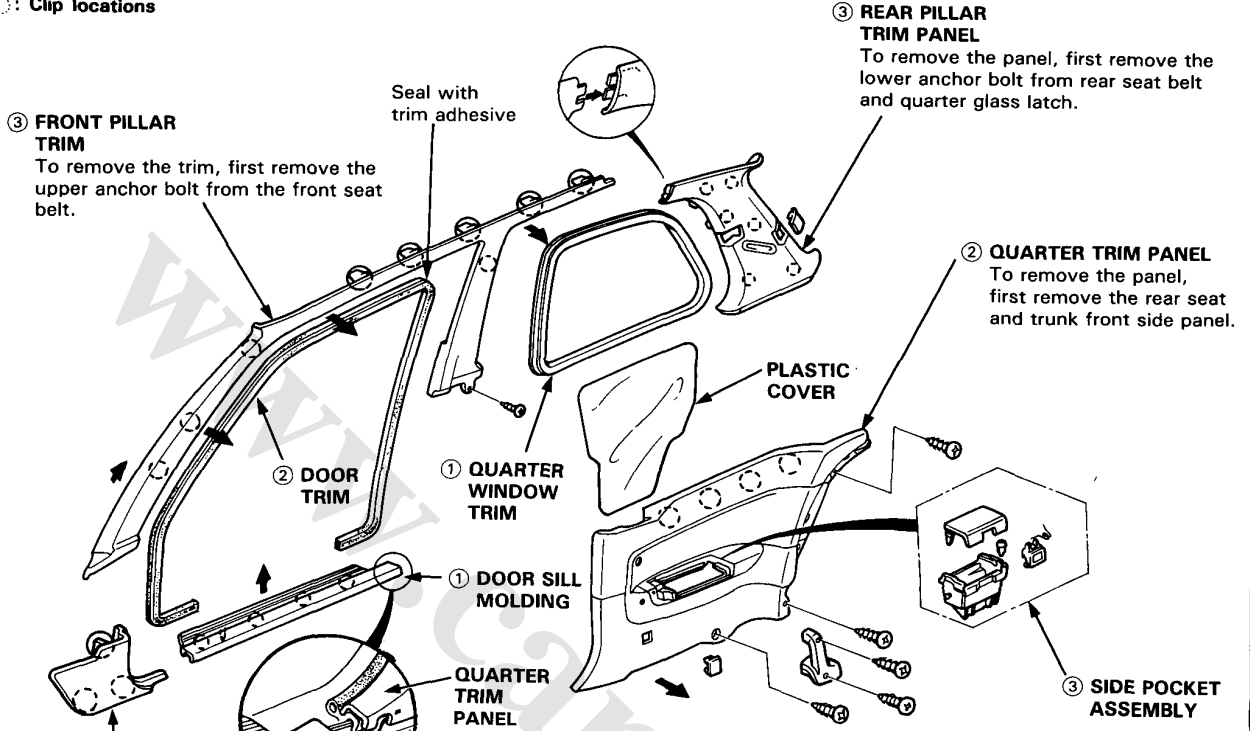


Front Seat Cables/Rear Seats

Front Seat Cables Replacement

Passenger's:

NOTE:


- Before installing the seat, make sure there are no twisted or pinched wires and cables.
- Apply the grease to the moving surface.

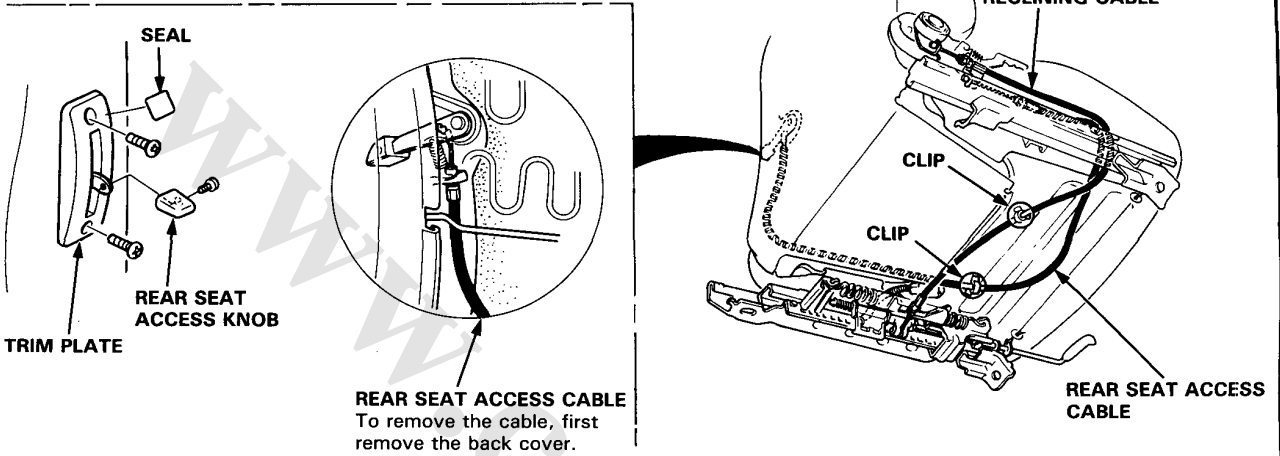

Rear Seats Replacement

NOTE:

- Before tightening the seat back mounting bolts, adjust the seat back fit and latch.
- Pass the seat belts through the belt guides of the seat cushion.

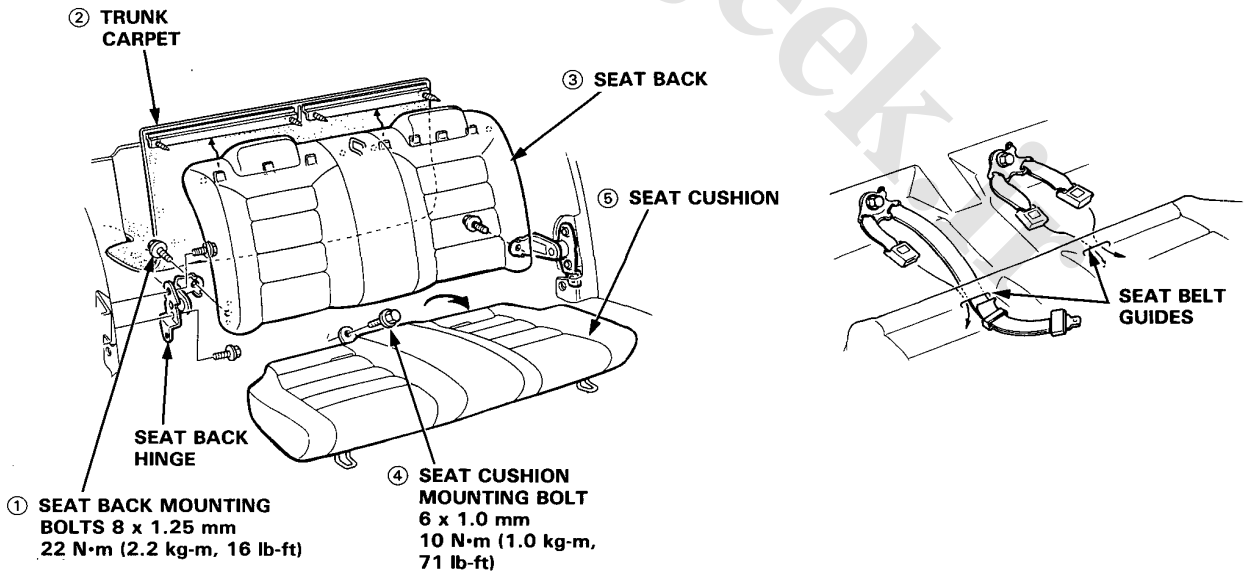





Seat Belts

Replacement

CAUTION: Check the seat belts for damage and replace them if necessary. Be careful not to damage them during removal and installation.

1. Remove the anchor bolts and retractor mounting bolt with a 17 mm socket or box-end wrench.

Front:

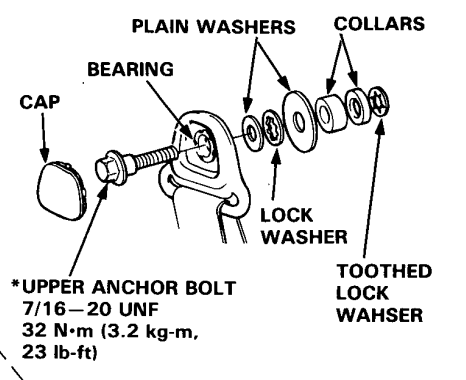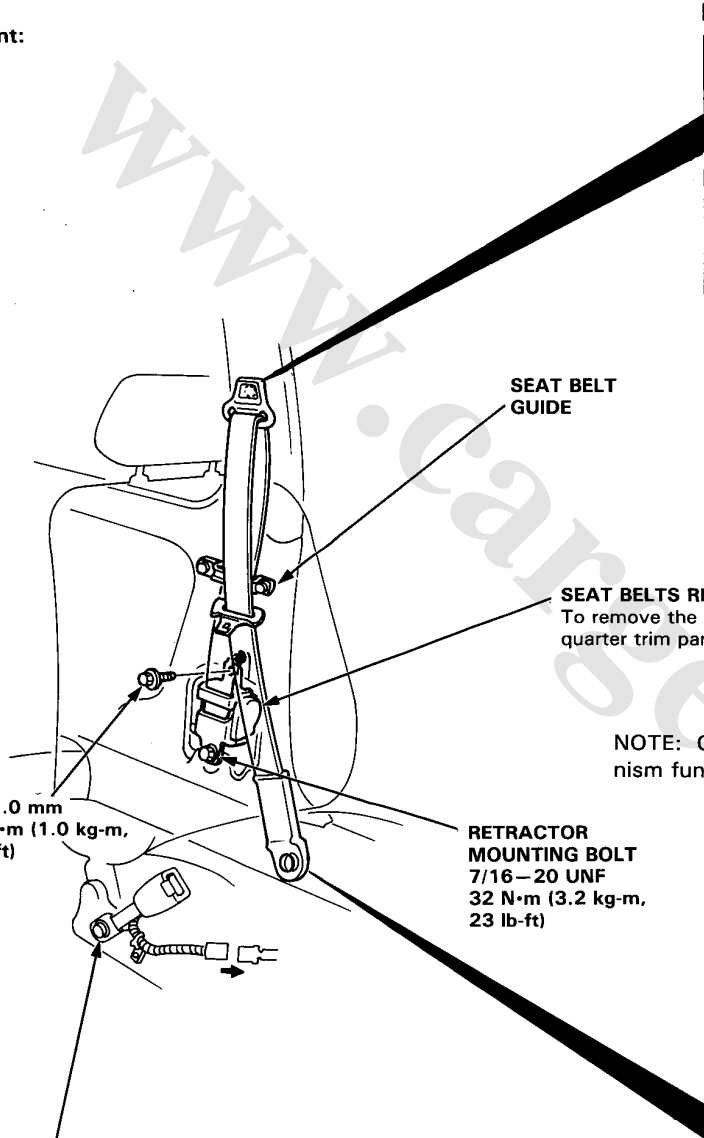

***UPPER ANCHOR BOLT**
 7/16-20 UNF
 32 N·m (3.2 kg-m,
 23 lb-ft)


SEAT BELTS RETRACTOR
 To remove the retractor, first remove the quarter trim panel (page 14-7).

NOTE: Check that the retractor locking mechanism functions as described on page 14-10.

6 x 1.0 mm
 10 N·m (1.0 kg-m,
 7 lb-ft)

RETRACTOR MOUNTING BOLT
 7/16-20 UNF
 32 N·m (3.2 kg-m,
 23 lb-ft)

***CENTER ANCHOR BOLT**
 7/16-20 UNF
 34 N·m (3.4 kg-m,
 25 lb-ft)

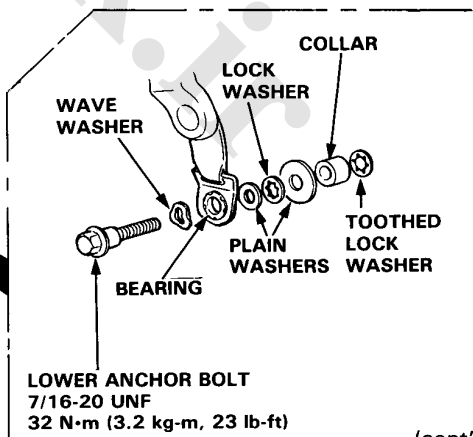


LOWER ANCHOR BOLT
 7/16-20 UNF
 32 N·m (3.2 kg-m, 23 lb-ft)

(cont'd)

Seat Belts

Replacement (cont'd)

Rear:

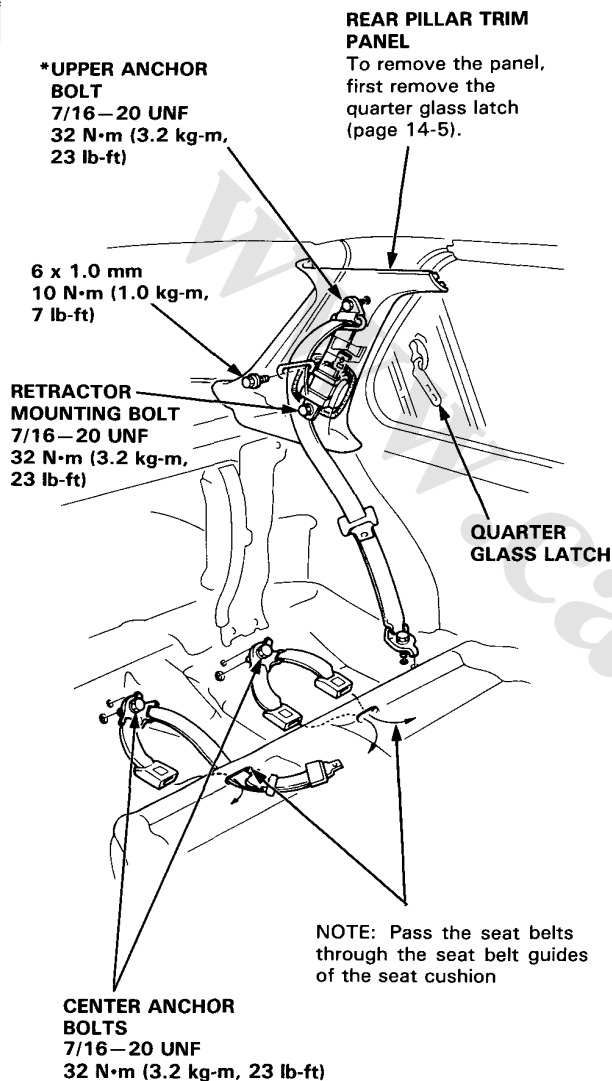

2. Installation is the reverse of the removal procedure.

NOTE:


- Make sure you assemble the washers and collars on the upper and lower anchor bolts as shown.
- * On reassembly, replace the upper anchor and center anchor bolts and use liquid thread lock.

Inspection

Retractor Inspection

1. With the retractor installed, check that the belt can be pulled out freely.
2. Make sure that the belt does not lock when the retractor is leaned slowly up to 15° from the mounted position. The belt should lock when the retractor is leaned over 40°.

CAUTION: Do not attempt to disassemble the retractor. *: Mounted Position.

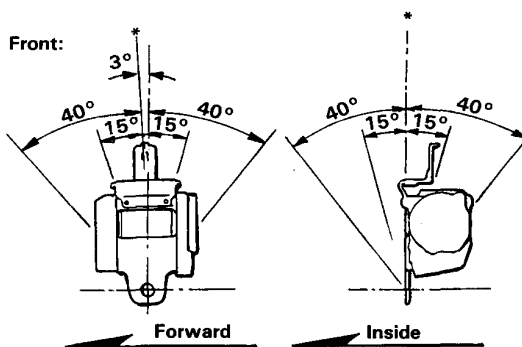

3. Replace the belt with a new one if there is any abnormality.

On-the-Car Belt inspection

1. Check that the belt is not twisted or caught on anything.
2. After installing the anchors, check for free movement on its retaining bolt. If necessary, remove the bolt and check that the washers and other parts are not damaged or improperly installed.
3. Check the belts for damage or discoloration. Clean with a shop towel if necessary.

CAUTION: Use only soap and water to clean.

NOTE: Dirt build-up in the metal loops of the seat belt anchors can cause belts to retract slowly. Wipe the inside of the loops with a clean cloth dampened in isopropyl alcohol.


4. Check that the belt does not lock when pulled out slowly. The belt is designed to lock only during a sudden stop or impact.
5. Make sure that the belt will retract automatically when released.
6. Replace the belt with a new one if there is any abnormality.



Trunk Lid/Fuel Lid Opener Cables

Replacement


→: Cliplocations

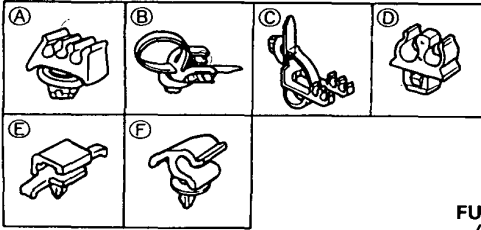


NOTE:

- Take care not to bend the cable.
- After installing, check that the trunk lid and fuel lid opener cables are routed and connected properly.

LHD:

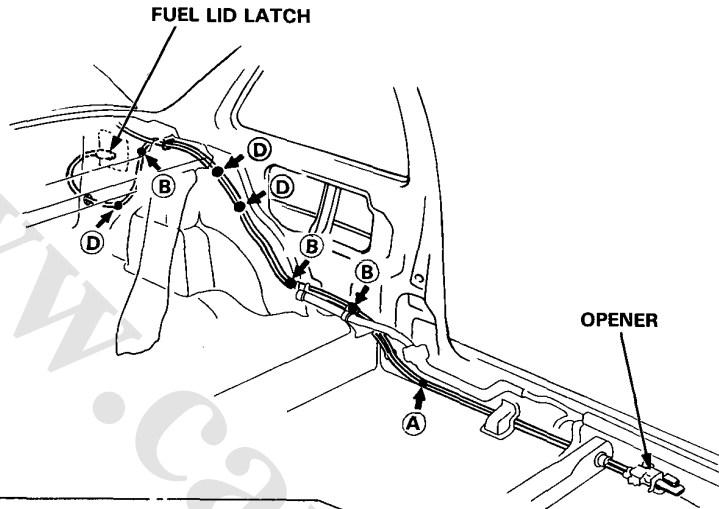


RHD:

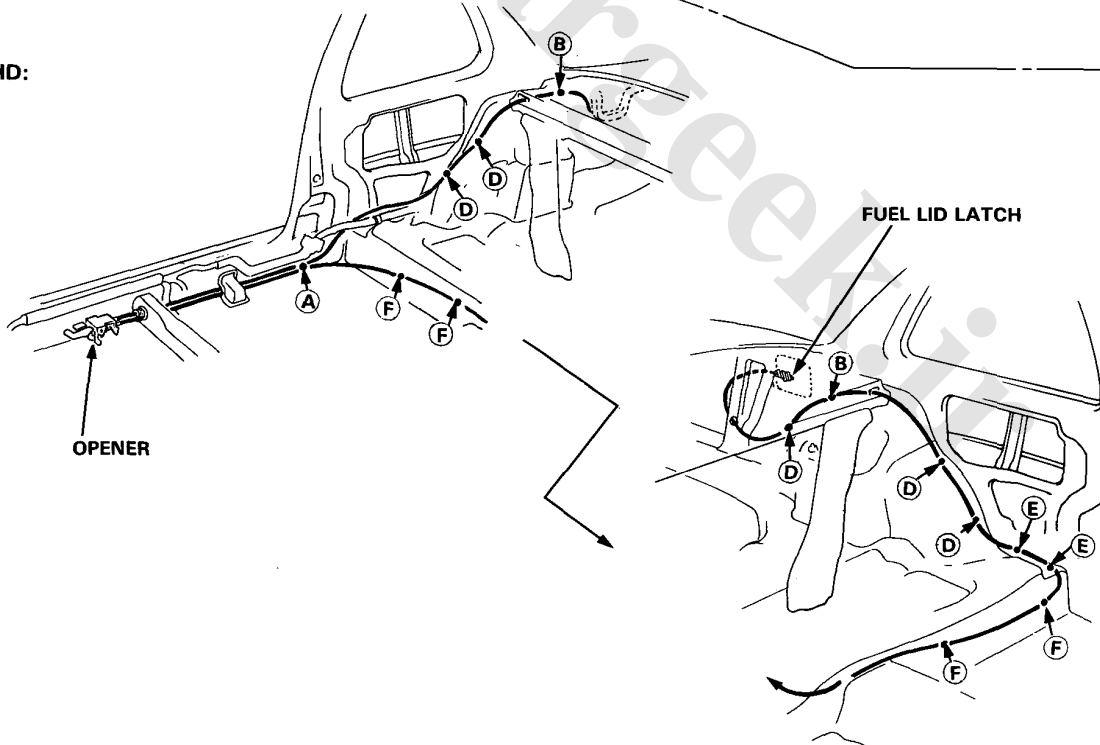

Side Moldings

Replacement

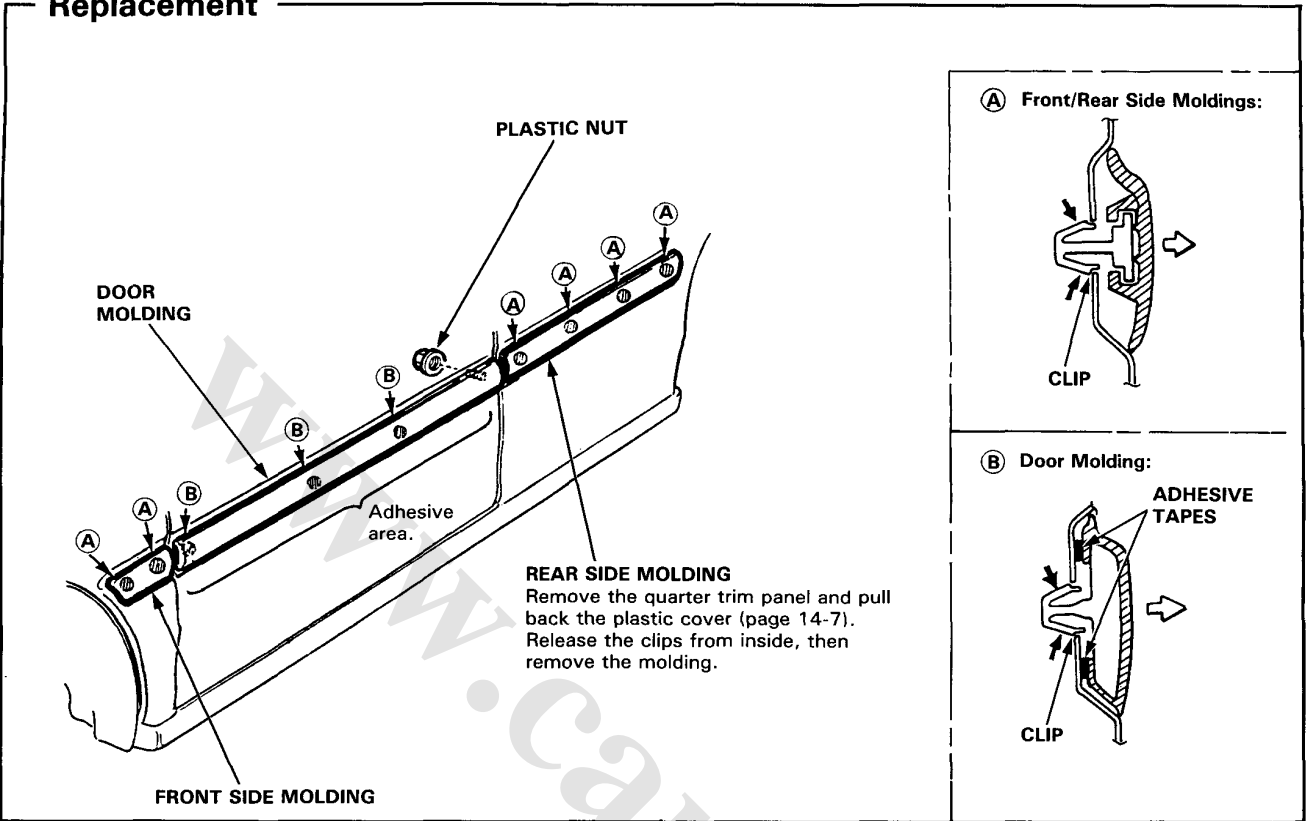

Special Tools

Relay and Control Unit Locations

Engine Compartment

Dashboard

Door and Floor

Wire Harness and Ground Locations

Engine Compartment

Dashboard

Floor

Trunk

Door

Roof

Fuses

Under - hood Fuse/Relay Box

Under - hood Fuse/Relay Box

Under - hood ABS Fuse/Relay Box

Power Distribution

Ground Distribution

Charging System

Troubleshooting

Gauge Assembly

Circuit Diagram

Terminal Locations

Bulb Locations

Safety Indicator

Circuit Diagram

Indicator Input Test

Shift Lever Position Indicator

Circuit Diagram

Indicator Input Test

Lighting System

Lighting Switch Replacement

Horns

Component Location Index

Circuit Diagram

Switch Test

Horn Relay Test

Locks, Power

Component Location Index

Circuit Diagram

Windows, Power

Component Location Index

Circuit Diagram

Troubleshooting

Master Switch Input Test

Master Switch Test

Passenger's Door Switch Test

Wipers/ Washers

Wipers/ Washer Switch Replacement

Cruise Control (KE model)


Component Location Index

Circuit Diagram

Set/Resume Switch Test

Special Tools

Ref. No	Tool Number	Description	Qty	Page Reference
①	07LAZ-SL40300	Test Harness C	1	16-61, 78

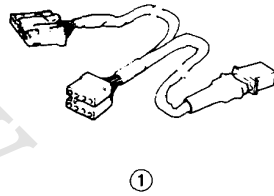



Relay and Control Unit Locations

Engine Compartment

UNDER-HOOD ABS FUSE/RELAY BOX

ABS MOTOR RELAY





DIMMER RELAY

HEADLIGHT RELAY

RADIATOR FAN RELAY


UNDER-HOOD FUSE/RELAY BOX

POWER WINDOW RELAY

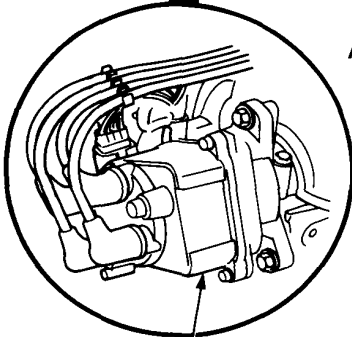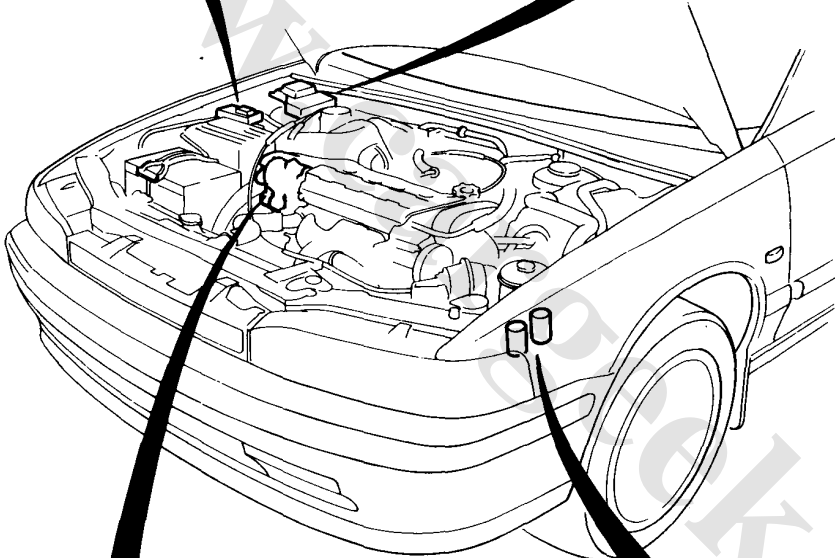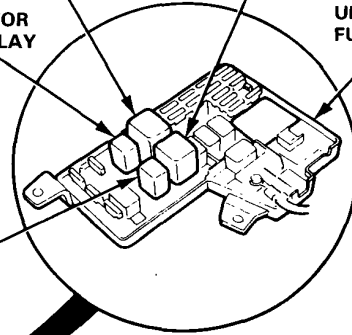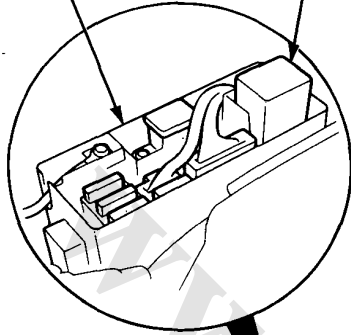

DISTRIBUTOR
(Has built-in igniter unit)

A/C COMPRESSOR CLUTCH RELAY
[Wire colors: BLK/YEL, BLK/YEL,
RED/BLU, and RED]

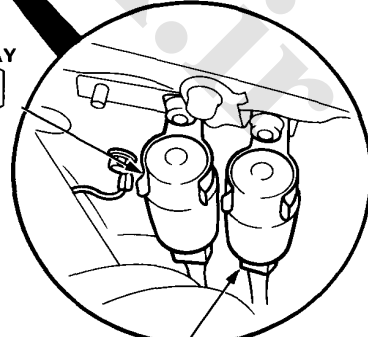


CONDENSER FAN RELAY
[Wire colors: YEL/WHT, WHT,
BLU, and BLU/YEL]



(cont'd)

Relay and Control Unit Locations


Engine Compartment (cont'd)

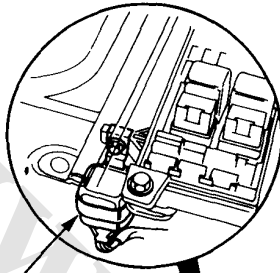


INTERMITTENT WIPER RELAY
Located under the fuse/relay box
Wire colors: BLU/WHT, BLU/WHT
GRN/RED, GRN/BLK, and BLK

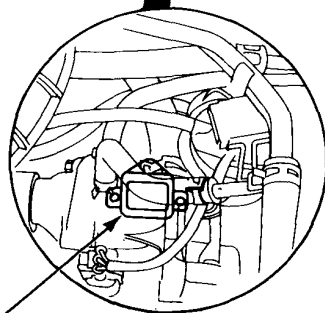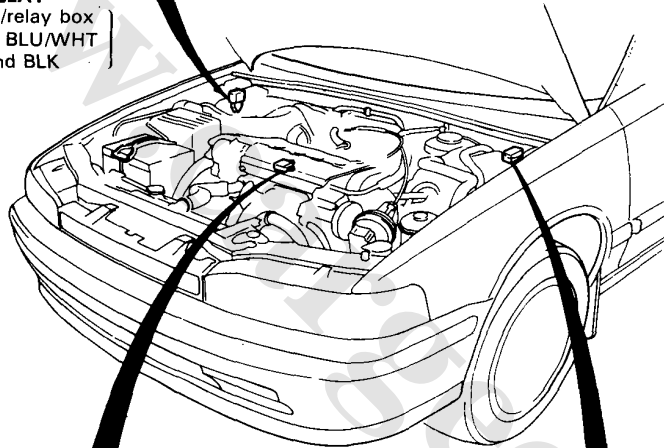

SPEED SENSOR

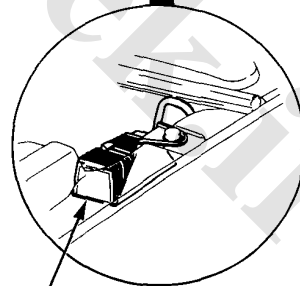


DIM-DIP RESISTOR
(KE model only)



Dashboard

NOTE: RHD type is symmetrical to LHD type.

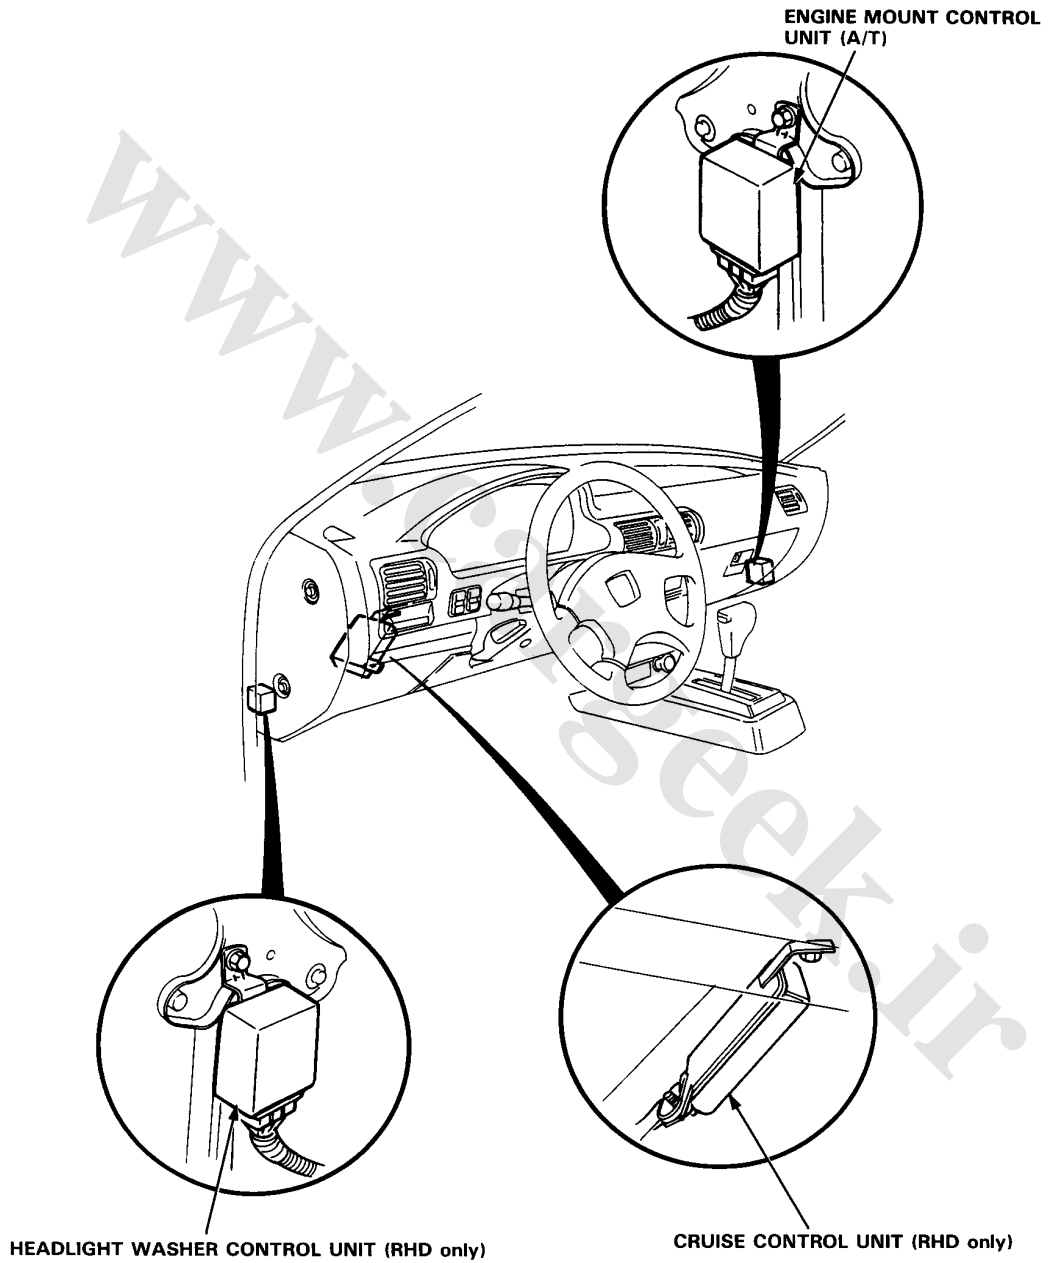



(cont'd)

Relay and Control Unit Locations

Dashboard (cont'd)

NOTE: RHD type is symmetrical to LHD type.

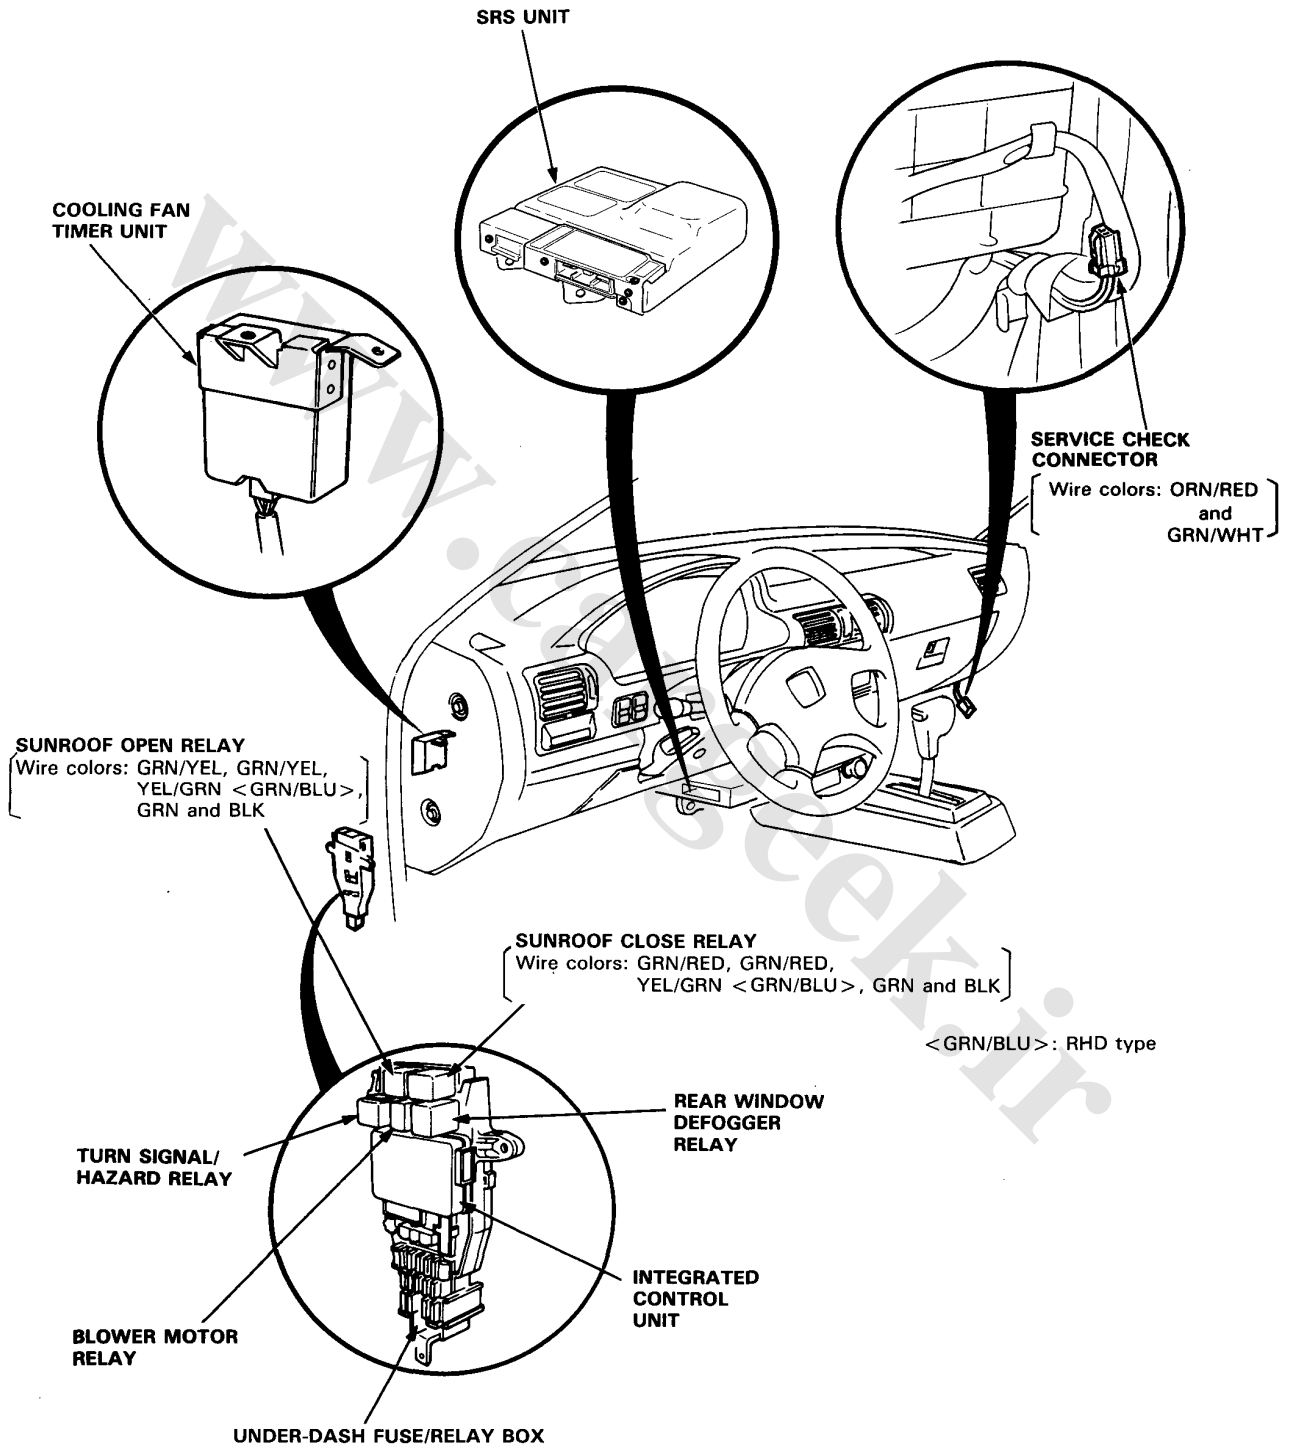


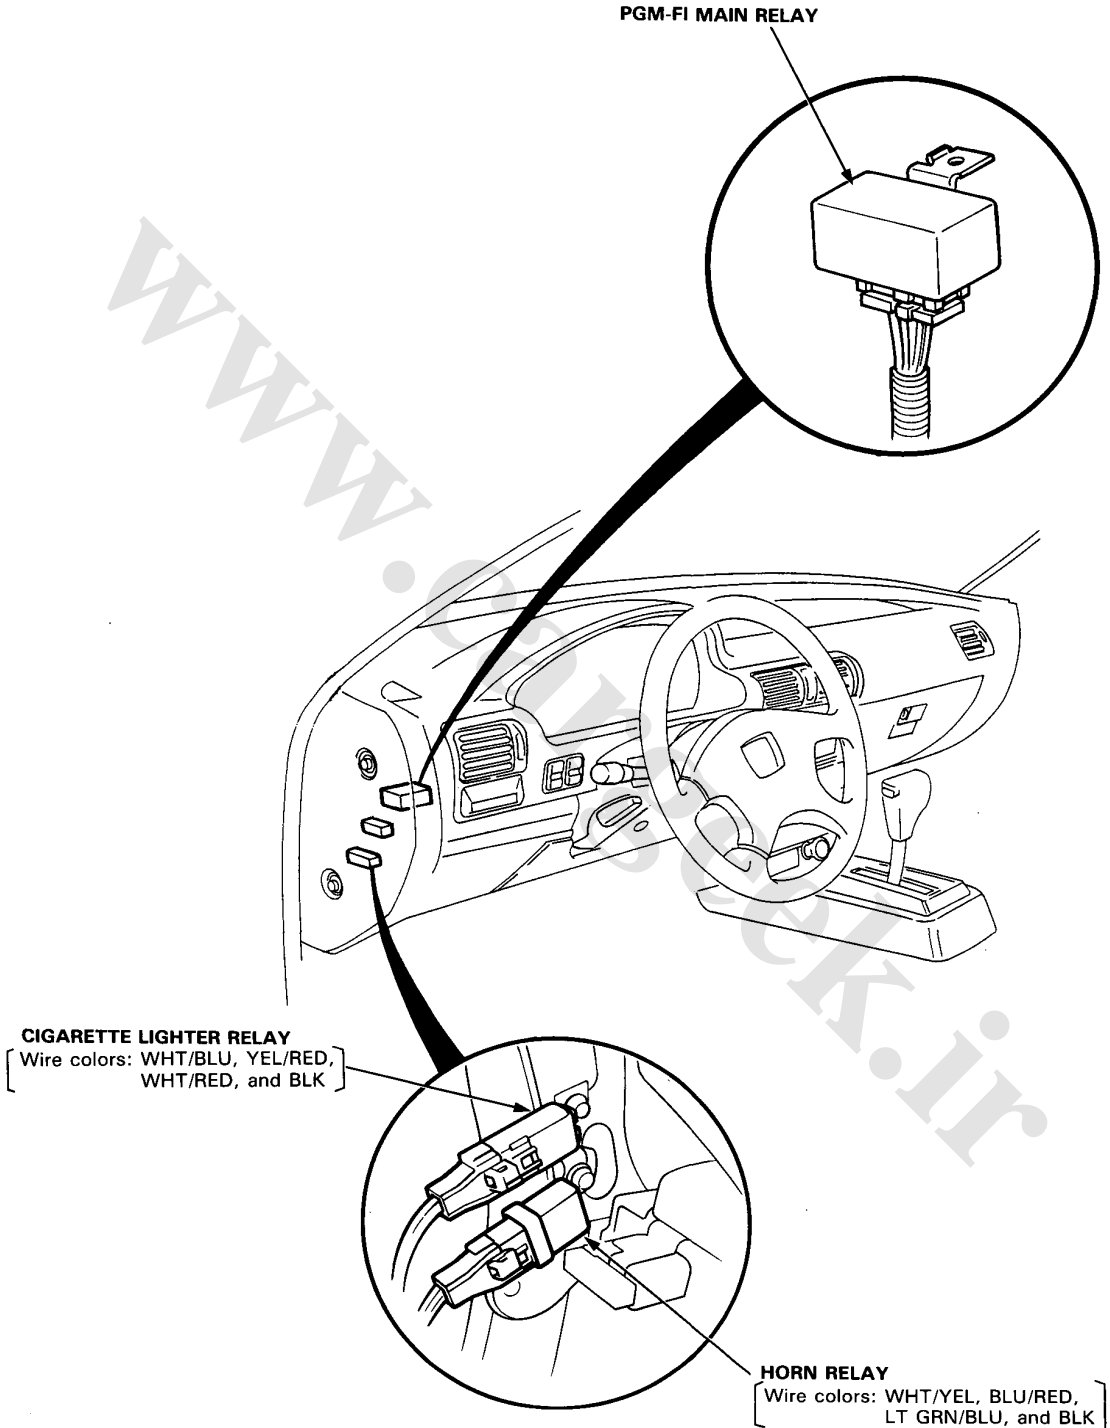

Relay and Control Unit Locations

Door and Floor


NOTE: RHD type is symmetrical to LHD type, except of the ABS CONTROL UNIT.

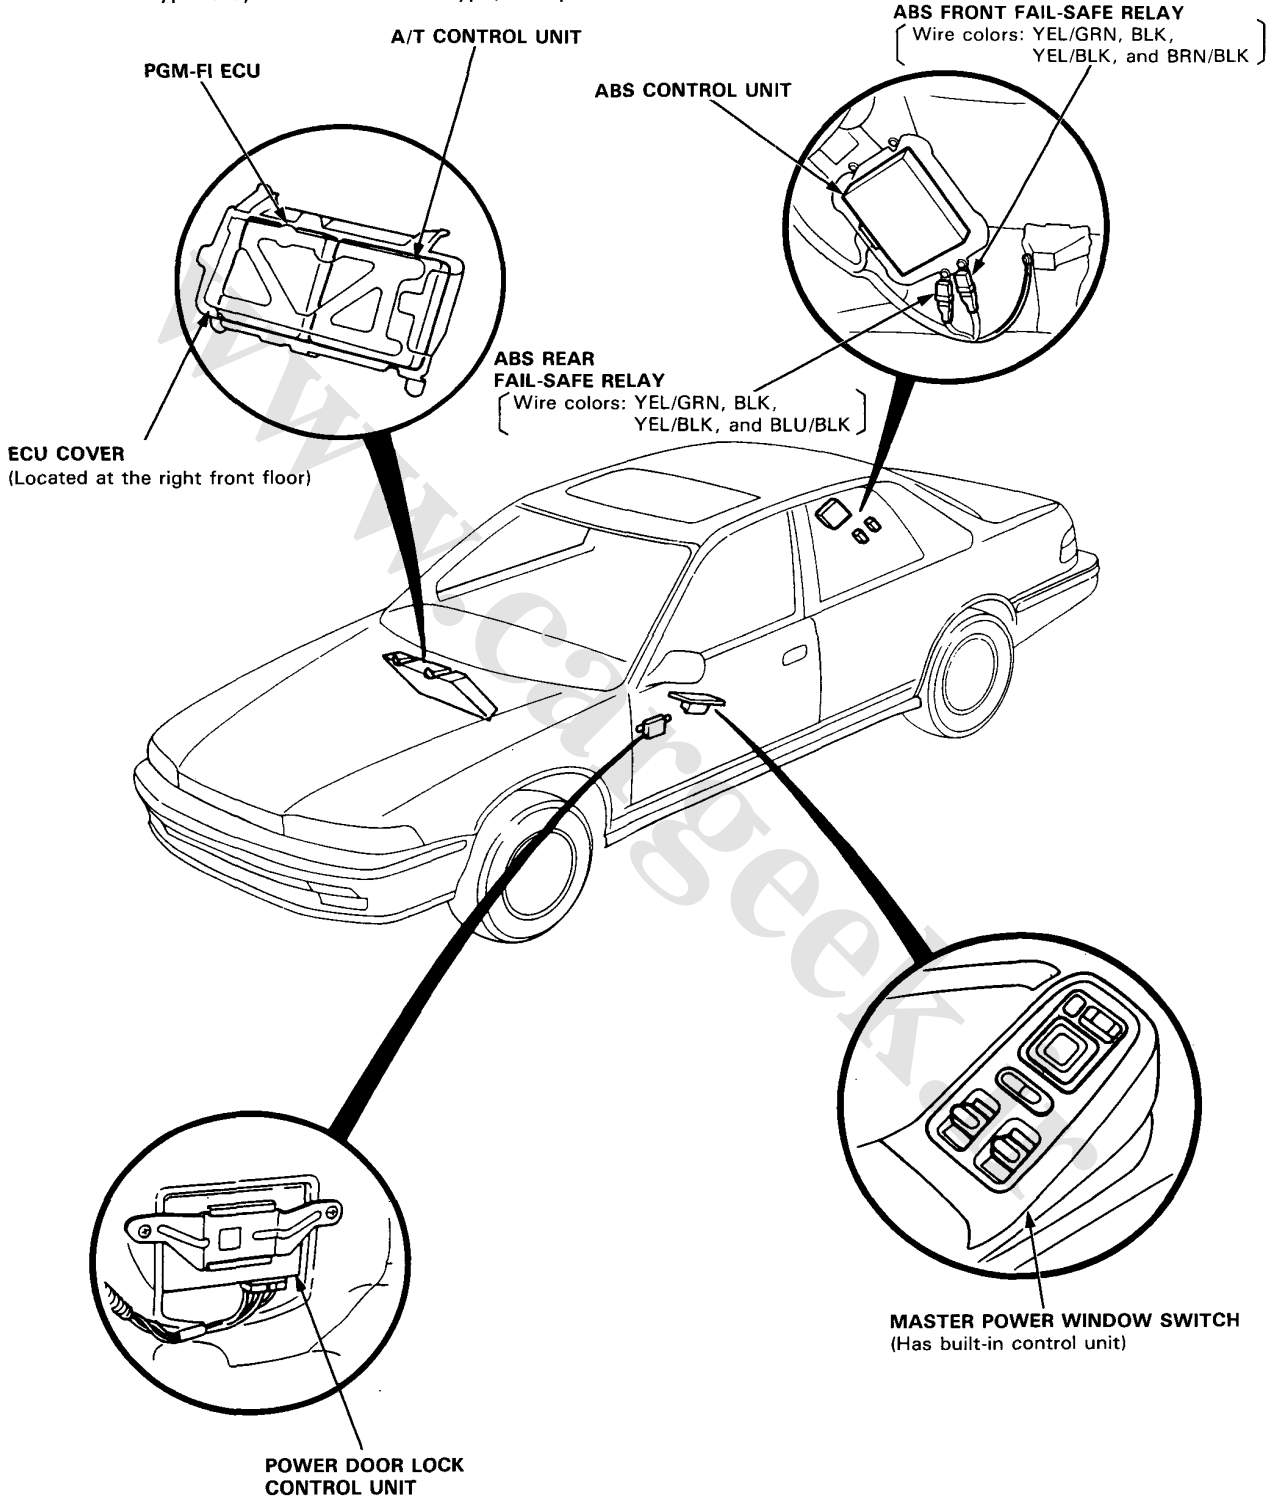



Wire Harness and Ground Locations

Engine Compartment

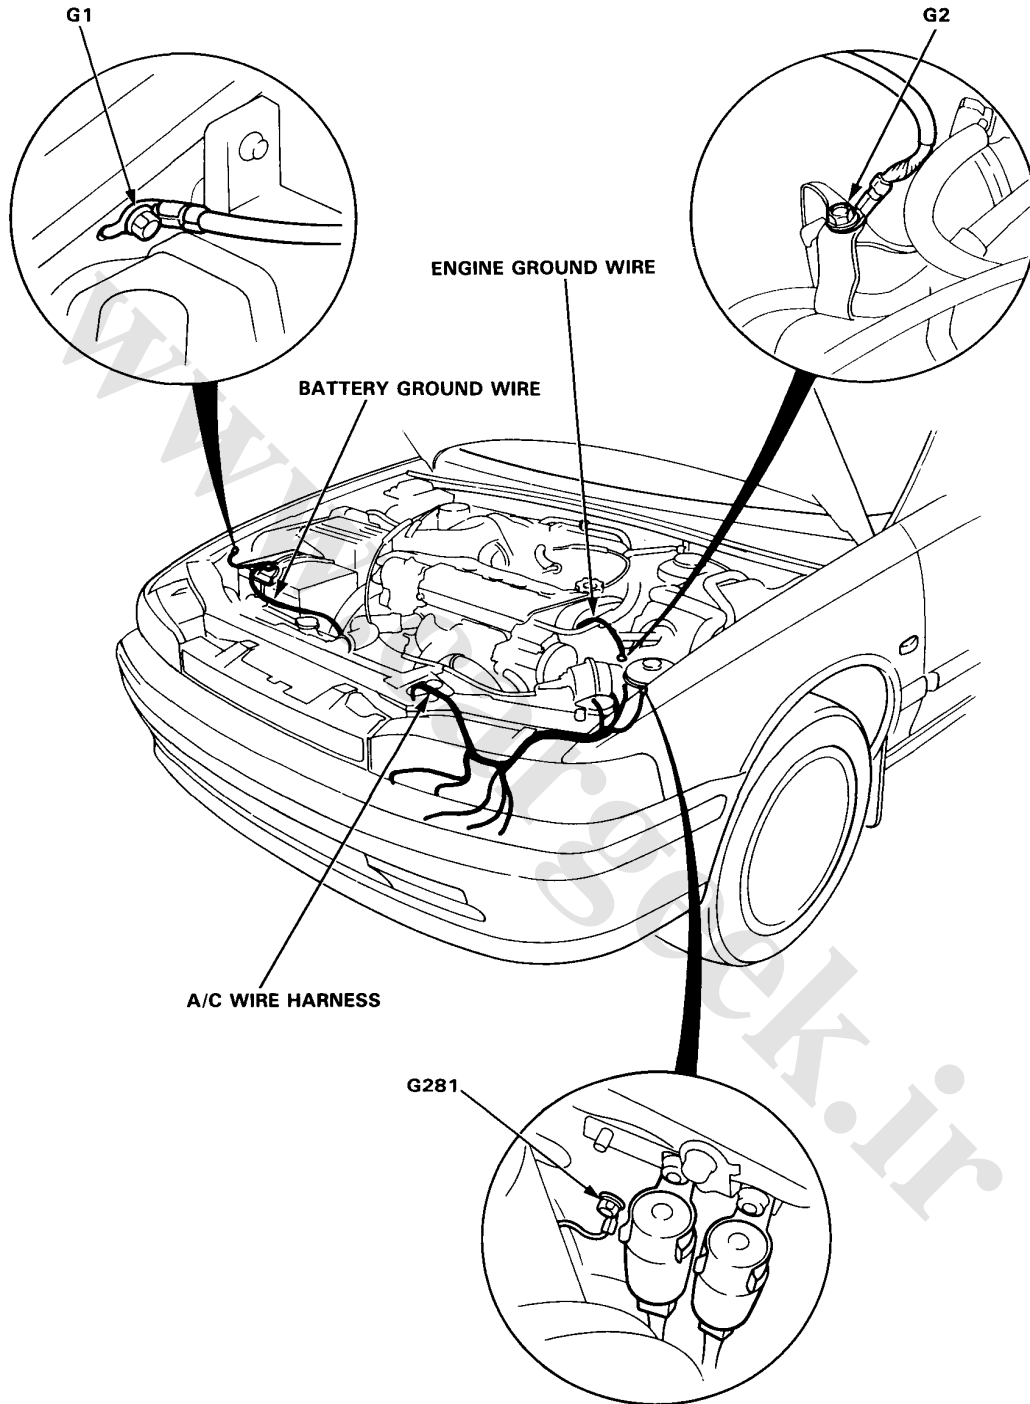


(cont'd)



Wire Harness and Ground Locations


Engine Compartment

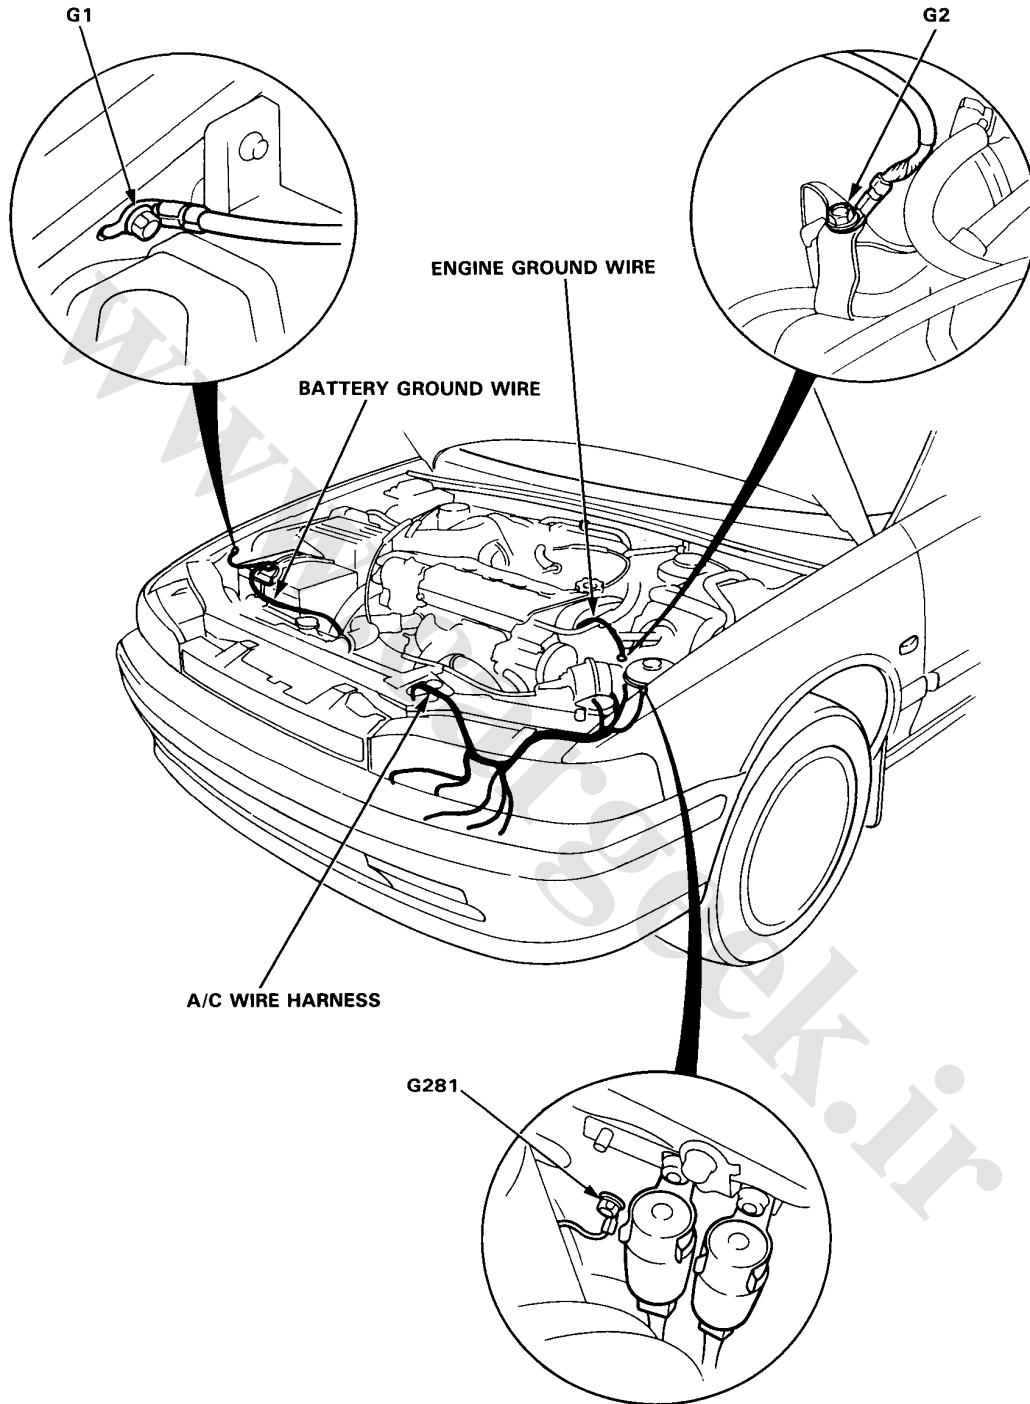


(cont'd)

Wire Harness and Ground Locations


Engine Compartment (cont'd)

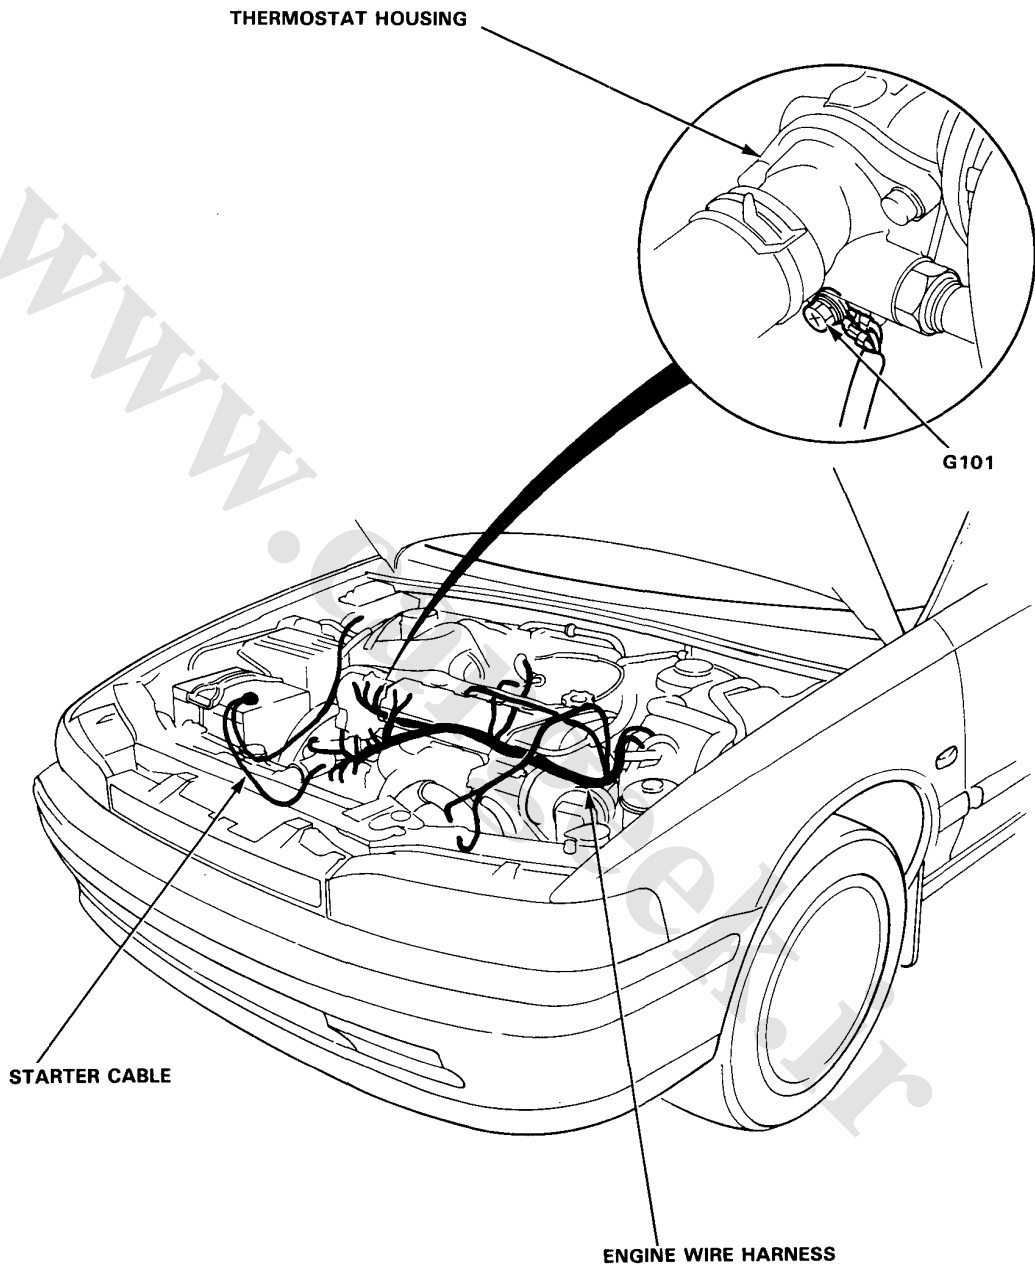

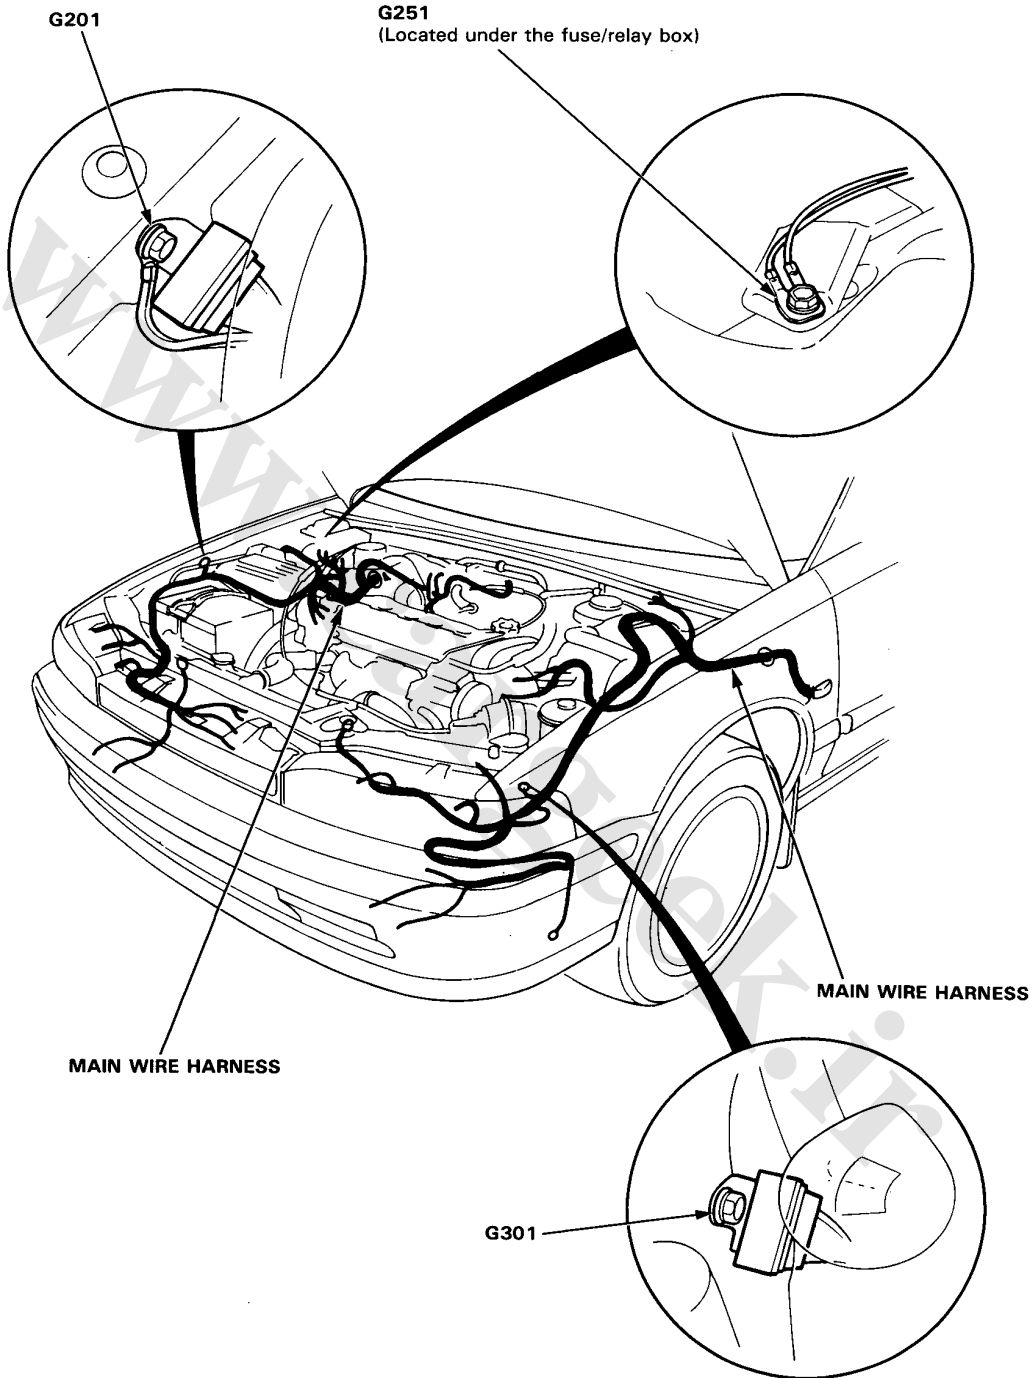


Wire Harness and Ground Locations

Dashboard (LHD)

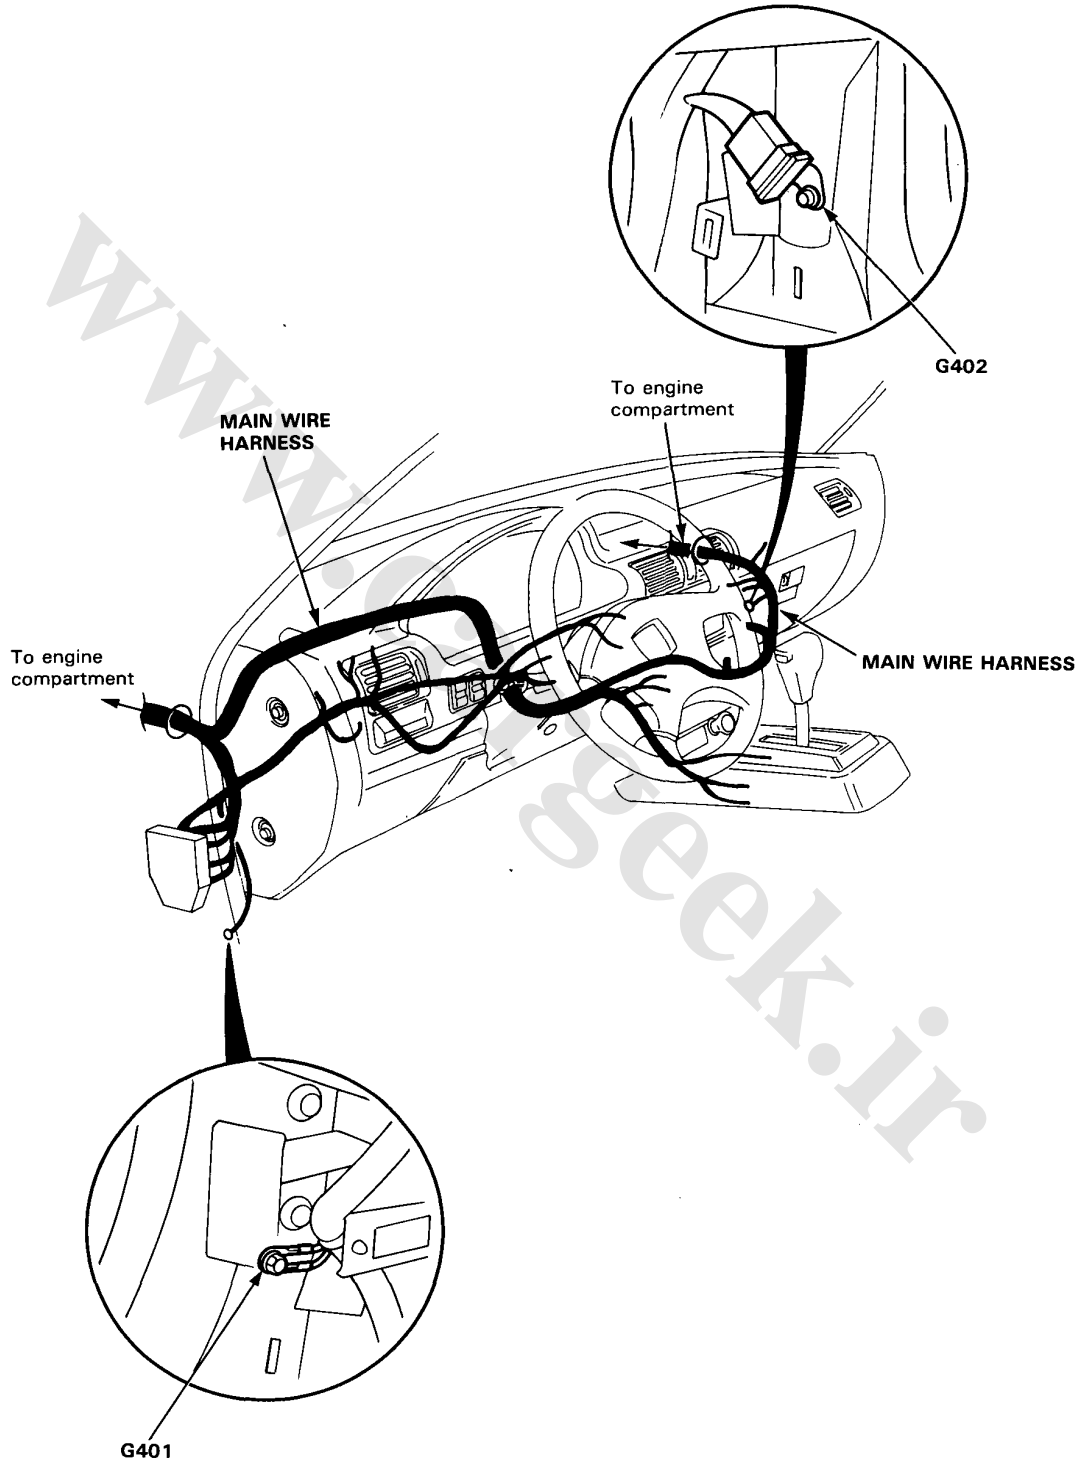




(RHD)

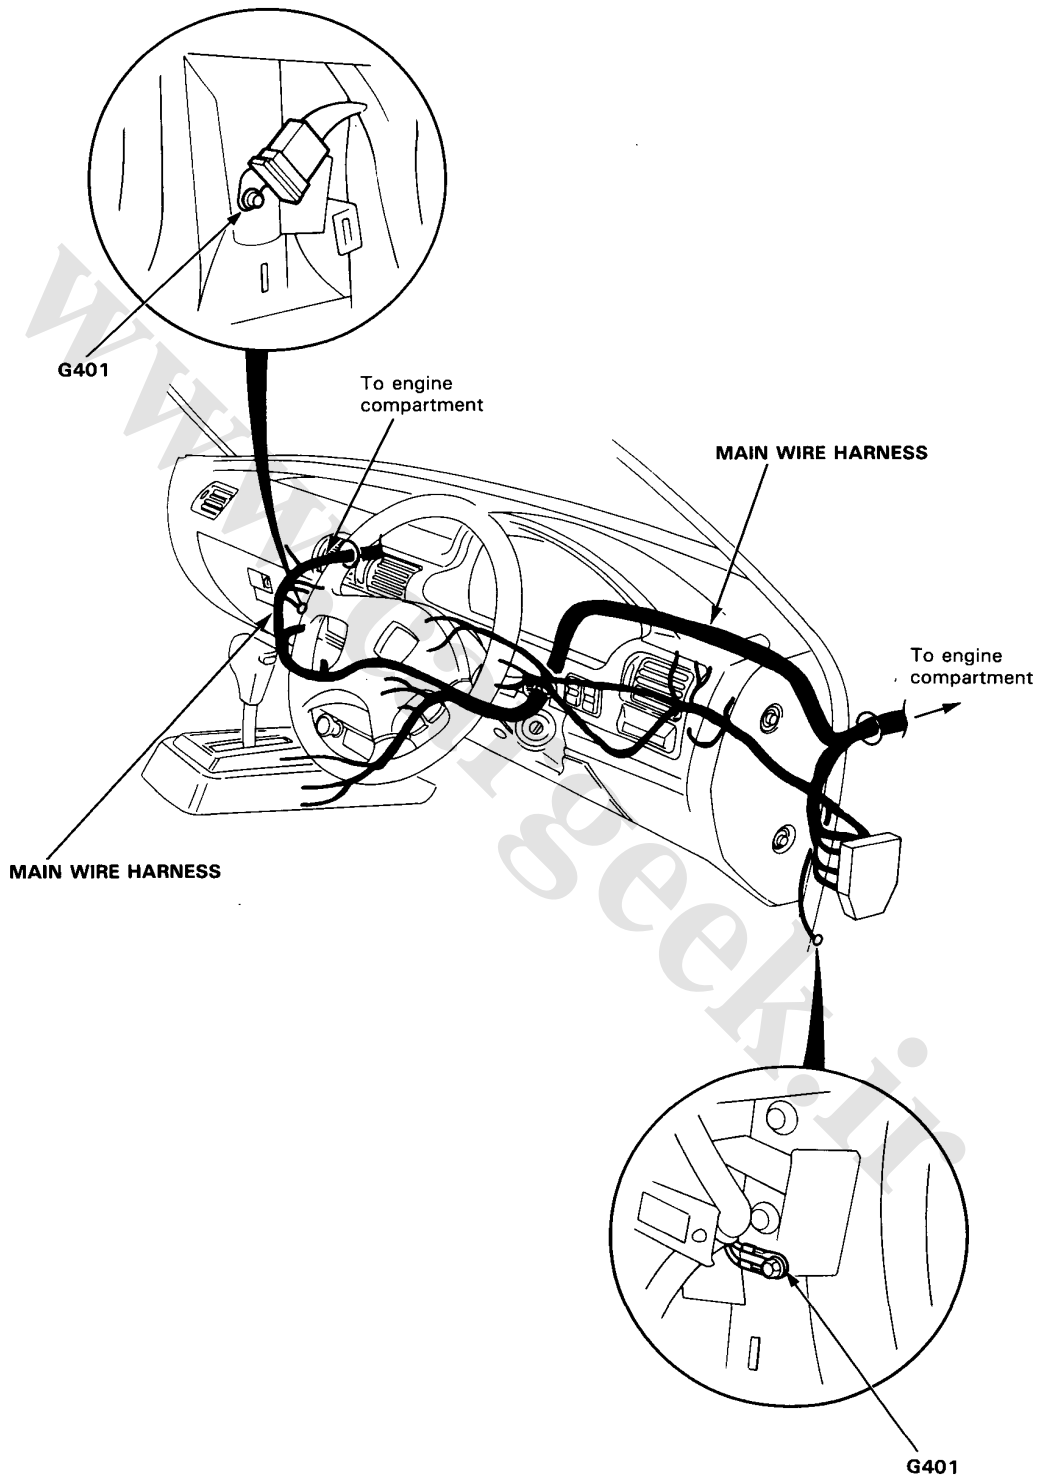


Wire Harness and Ground Locations

Dashboard (LHD)

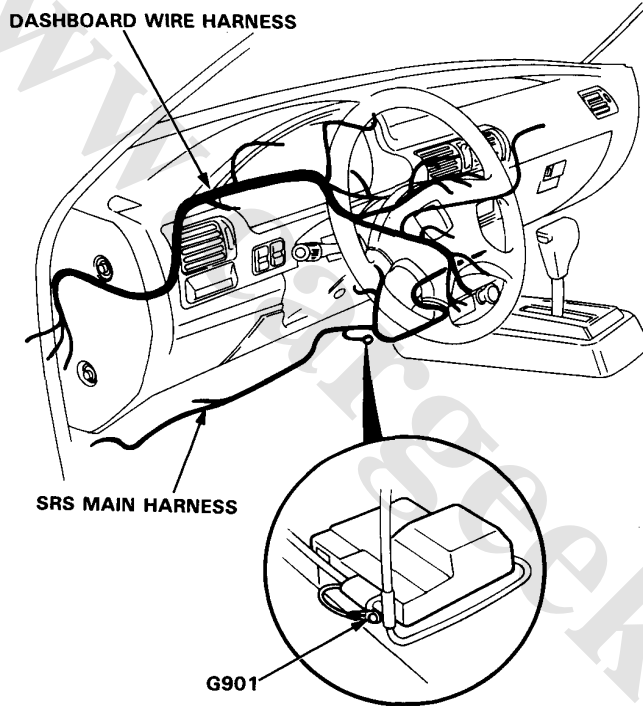




(RHD)

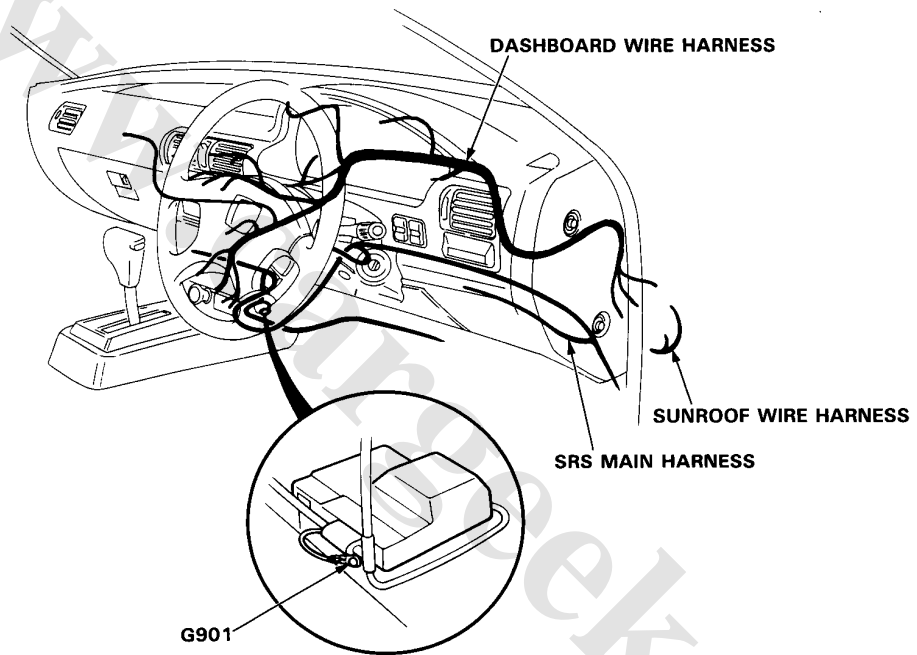


Wire Harness and Ground Locations

Floor (LHD)

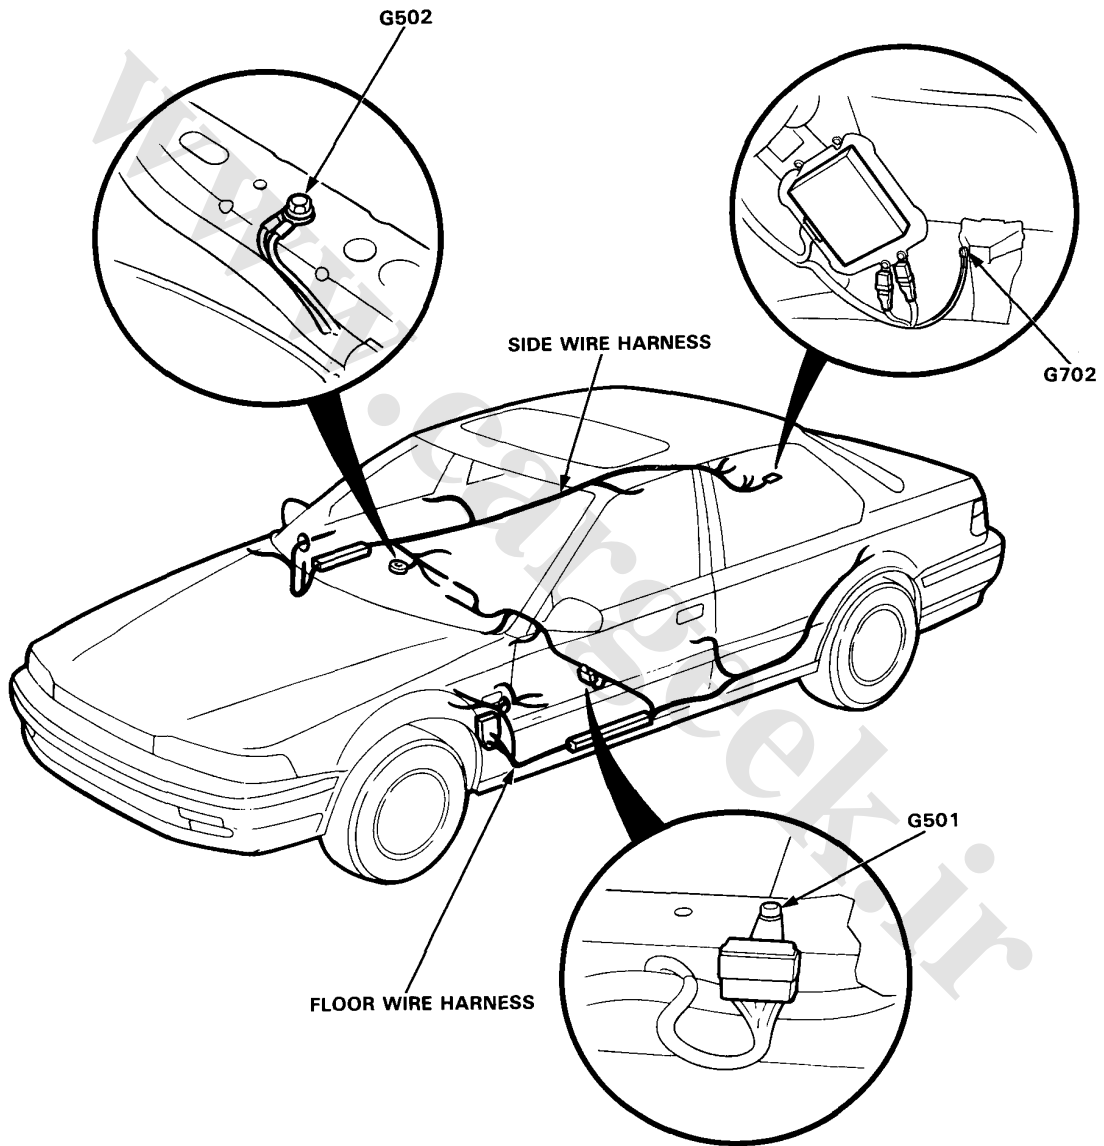




(RHD)

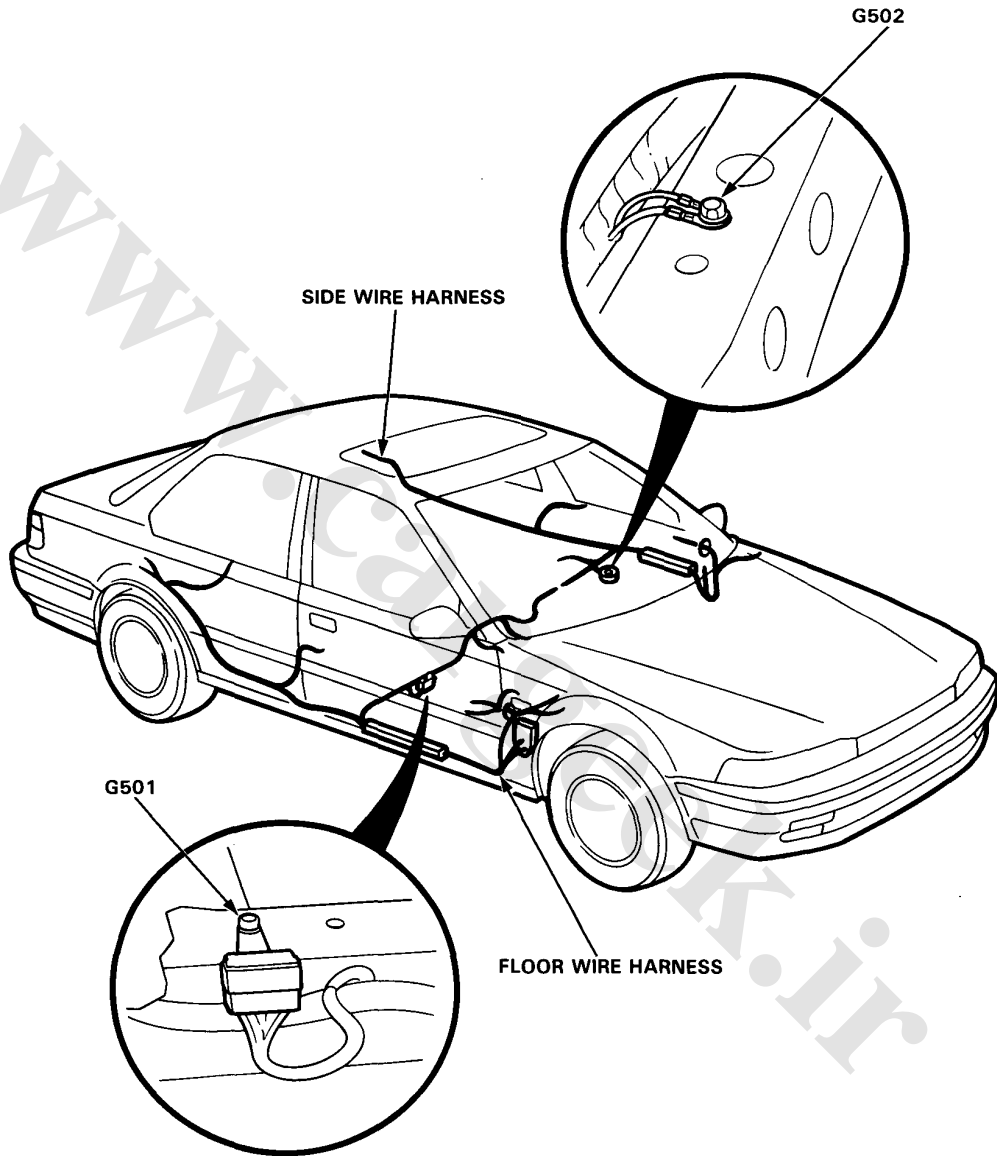


Wire Harness and Ground Locations

Trunk (LHD)

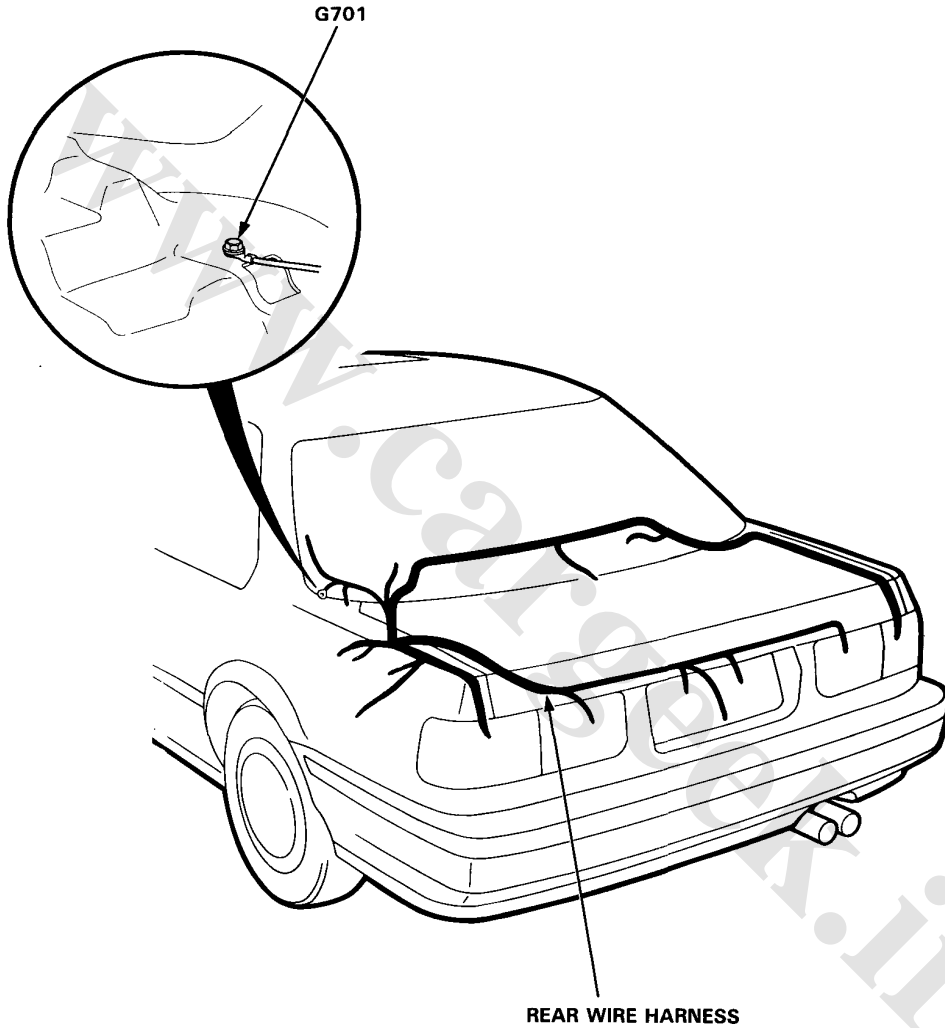




(RHD)

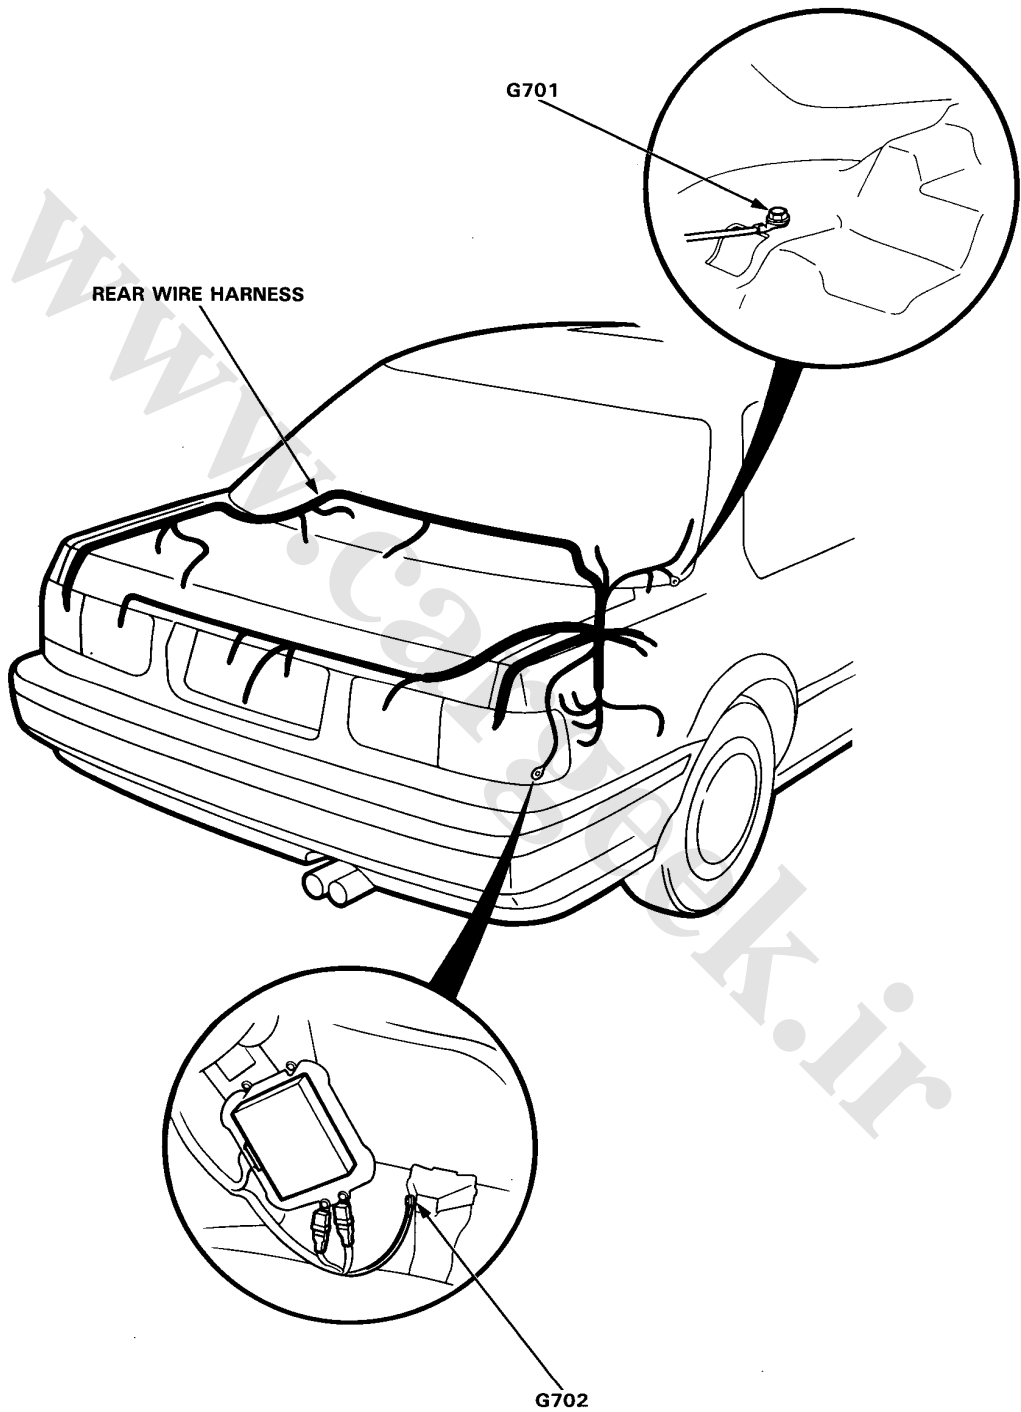

(cont'd)

Wire Harness and Ground Locations


Trunk (cont'd)

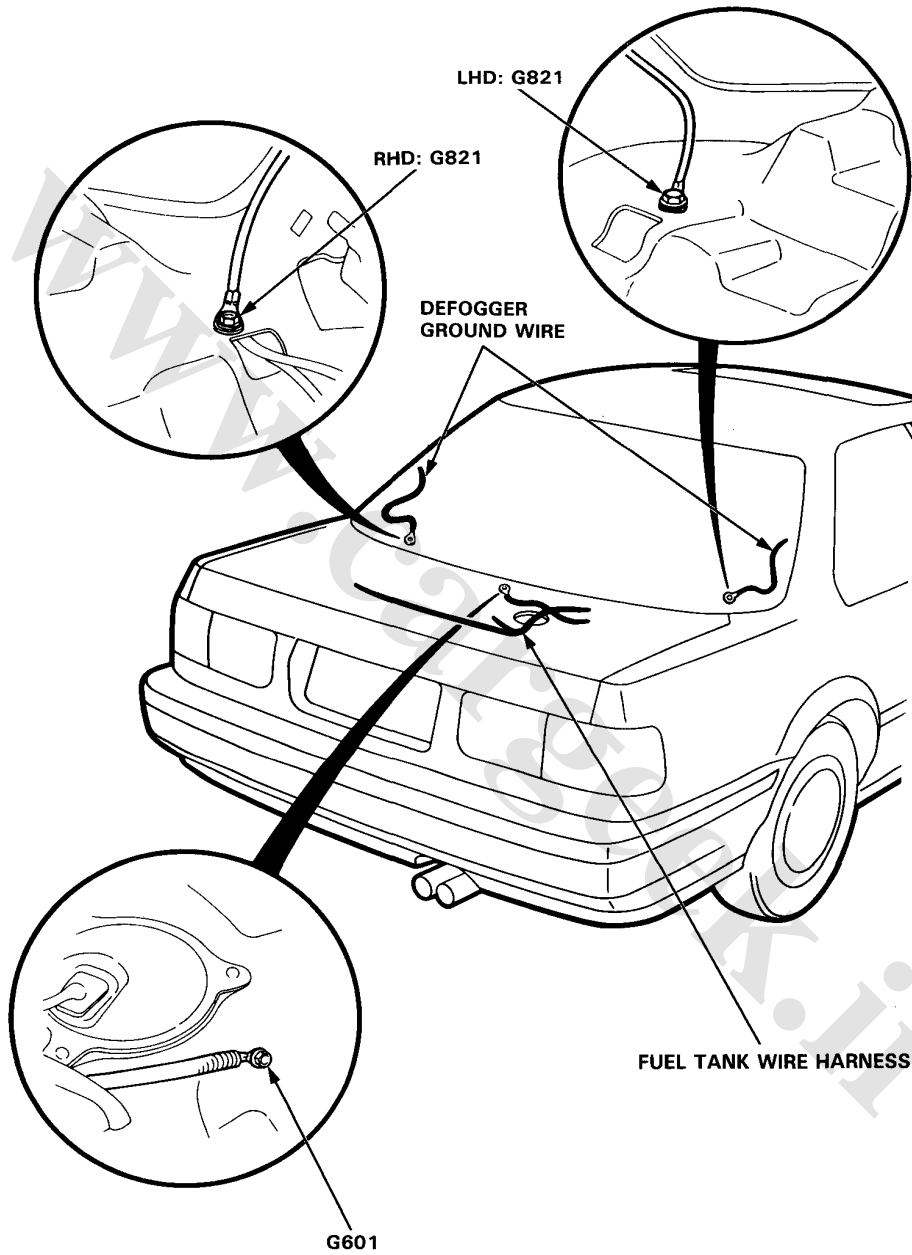




Door

NOTE: RHD type is symmetrical to LHD type.

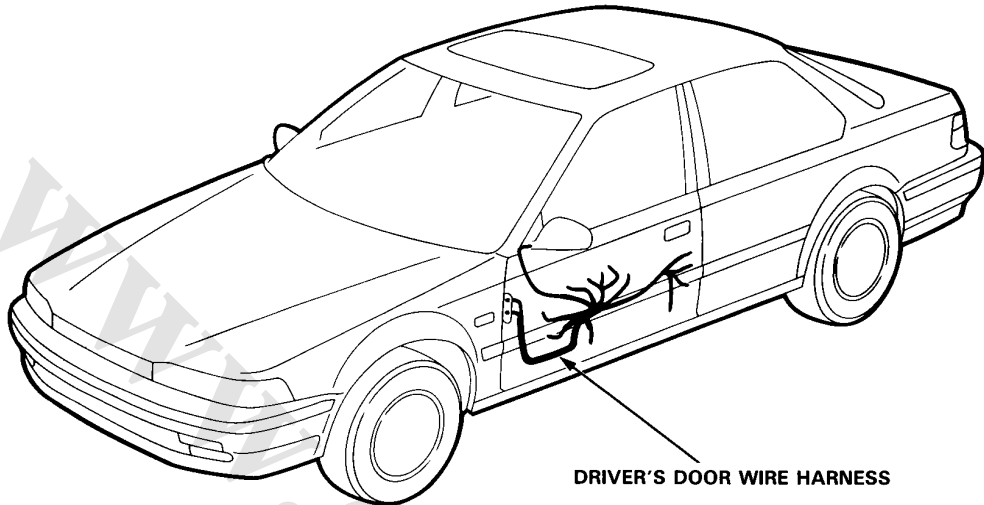


DRIVER'S DOOR WIRE HARNESS

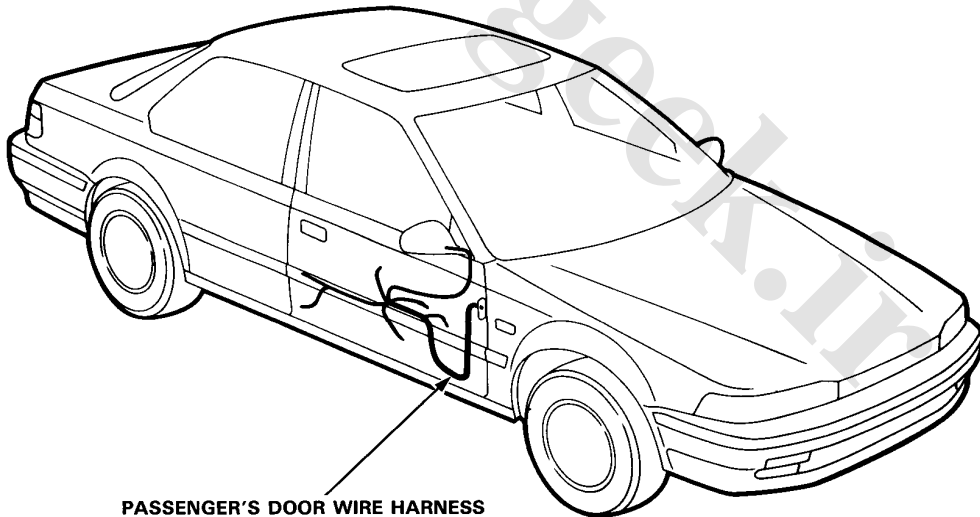

PASSENGER'S DOOR WIRE HARNESS

Wire Harness and Ground Locations

Roof

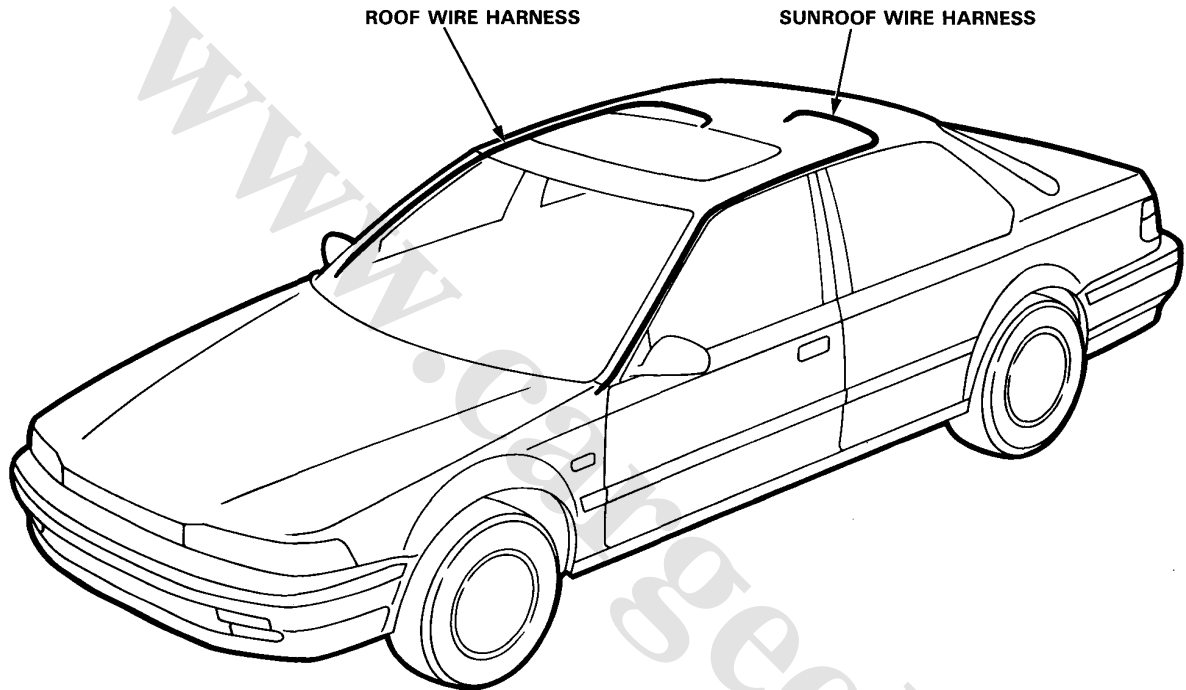





Fuses

Under-hood Fuse/Relay Box

NOTE: The under-hood fuse/relay box is located at the right side of the engine compartment.

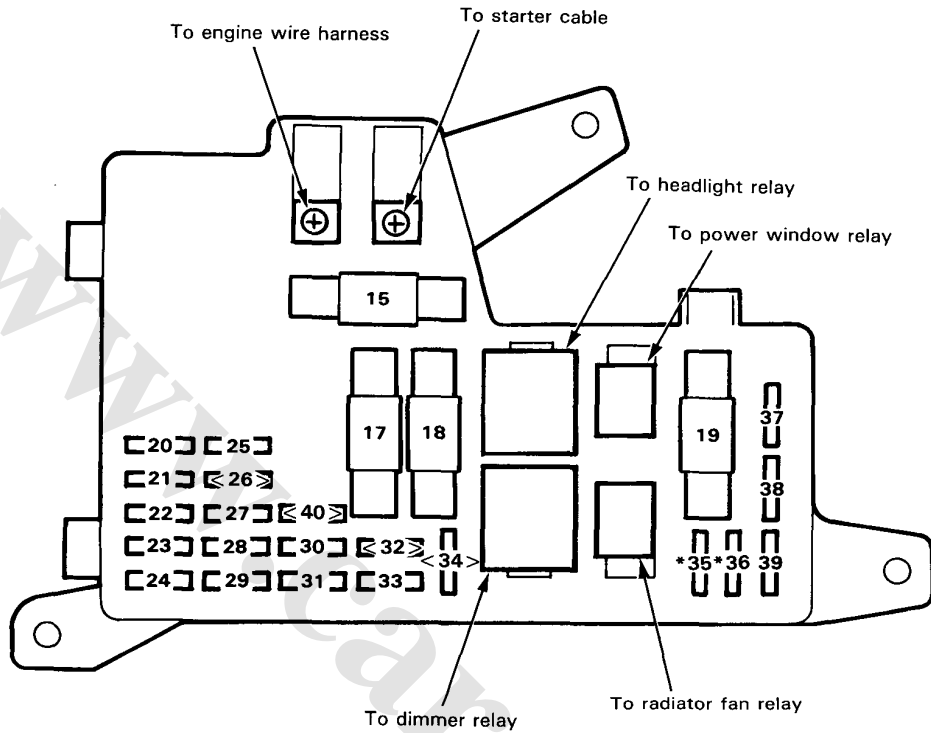


< >: Not used
 * : KE model

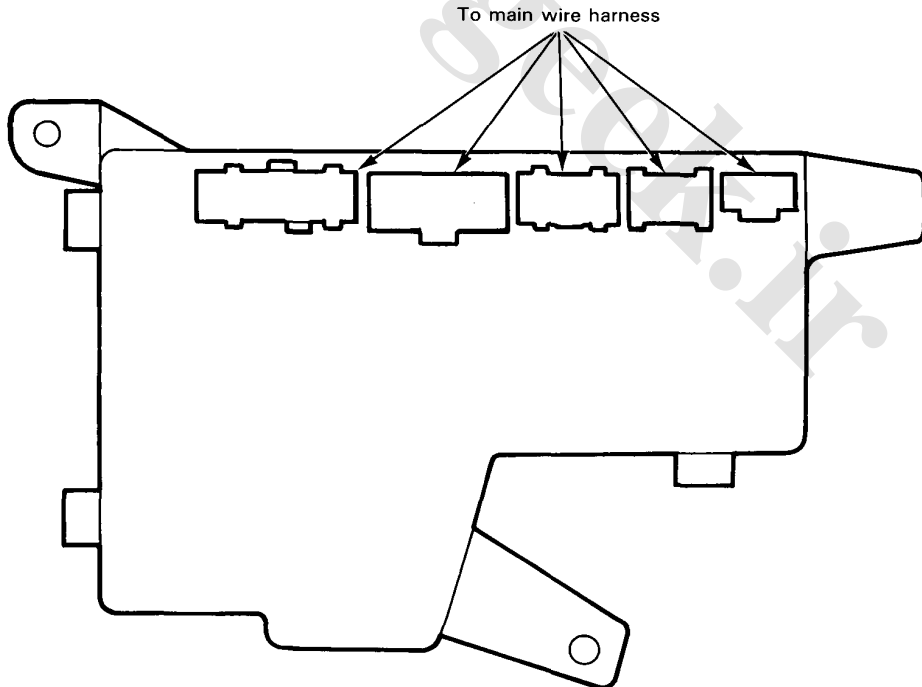

Fuses

Under-dash Fuse/Relay Box

NOTE: The under-dash fuse box is located behind the left (LHD) or right kick panel (RHD).

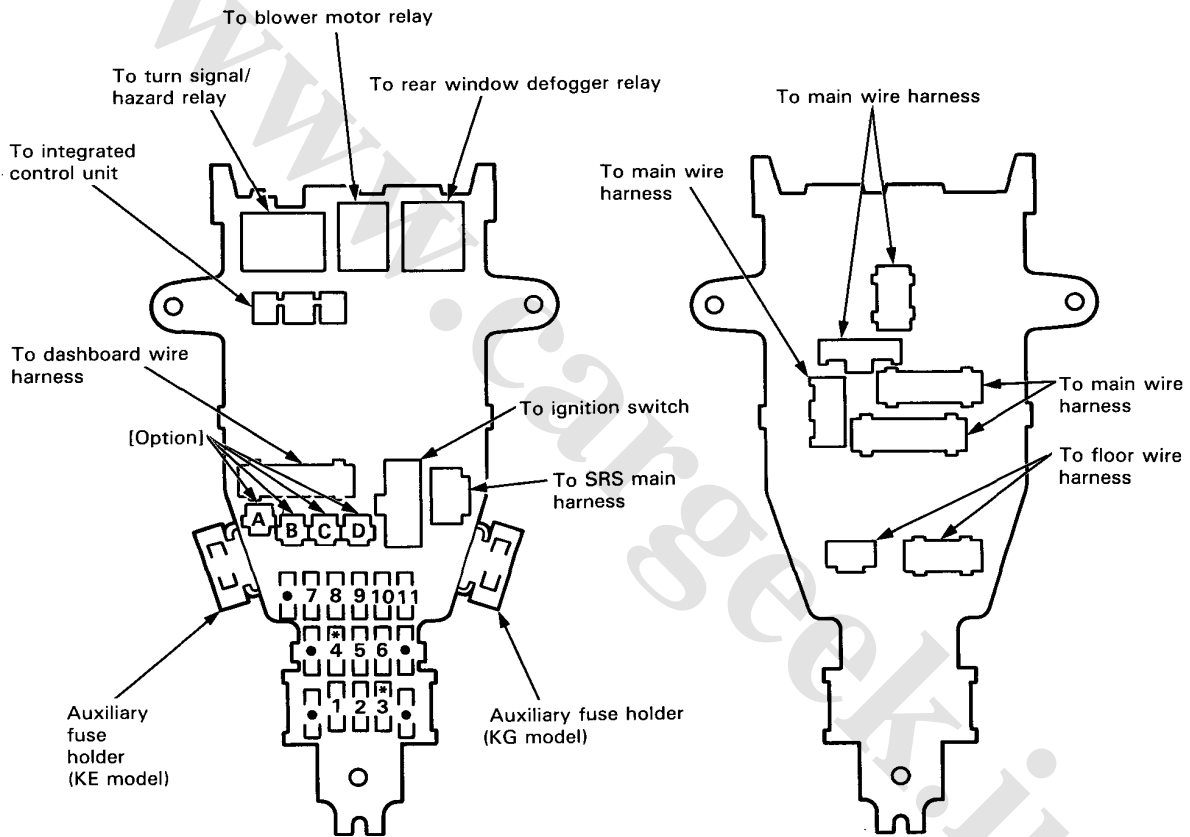


•: Spare fuse
*: KE model




Under-hood ABS Fuse/Relay Box

NOTE: The ABS Fuse/Relay box is located at the right side of the engine compartment.

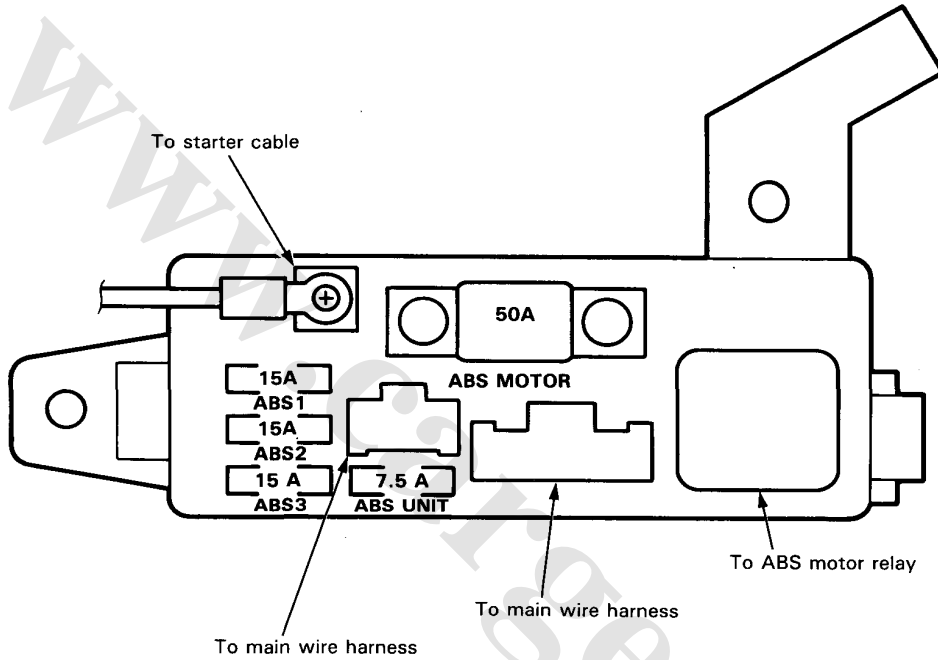


Power Distribution

Circuit Identification

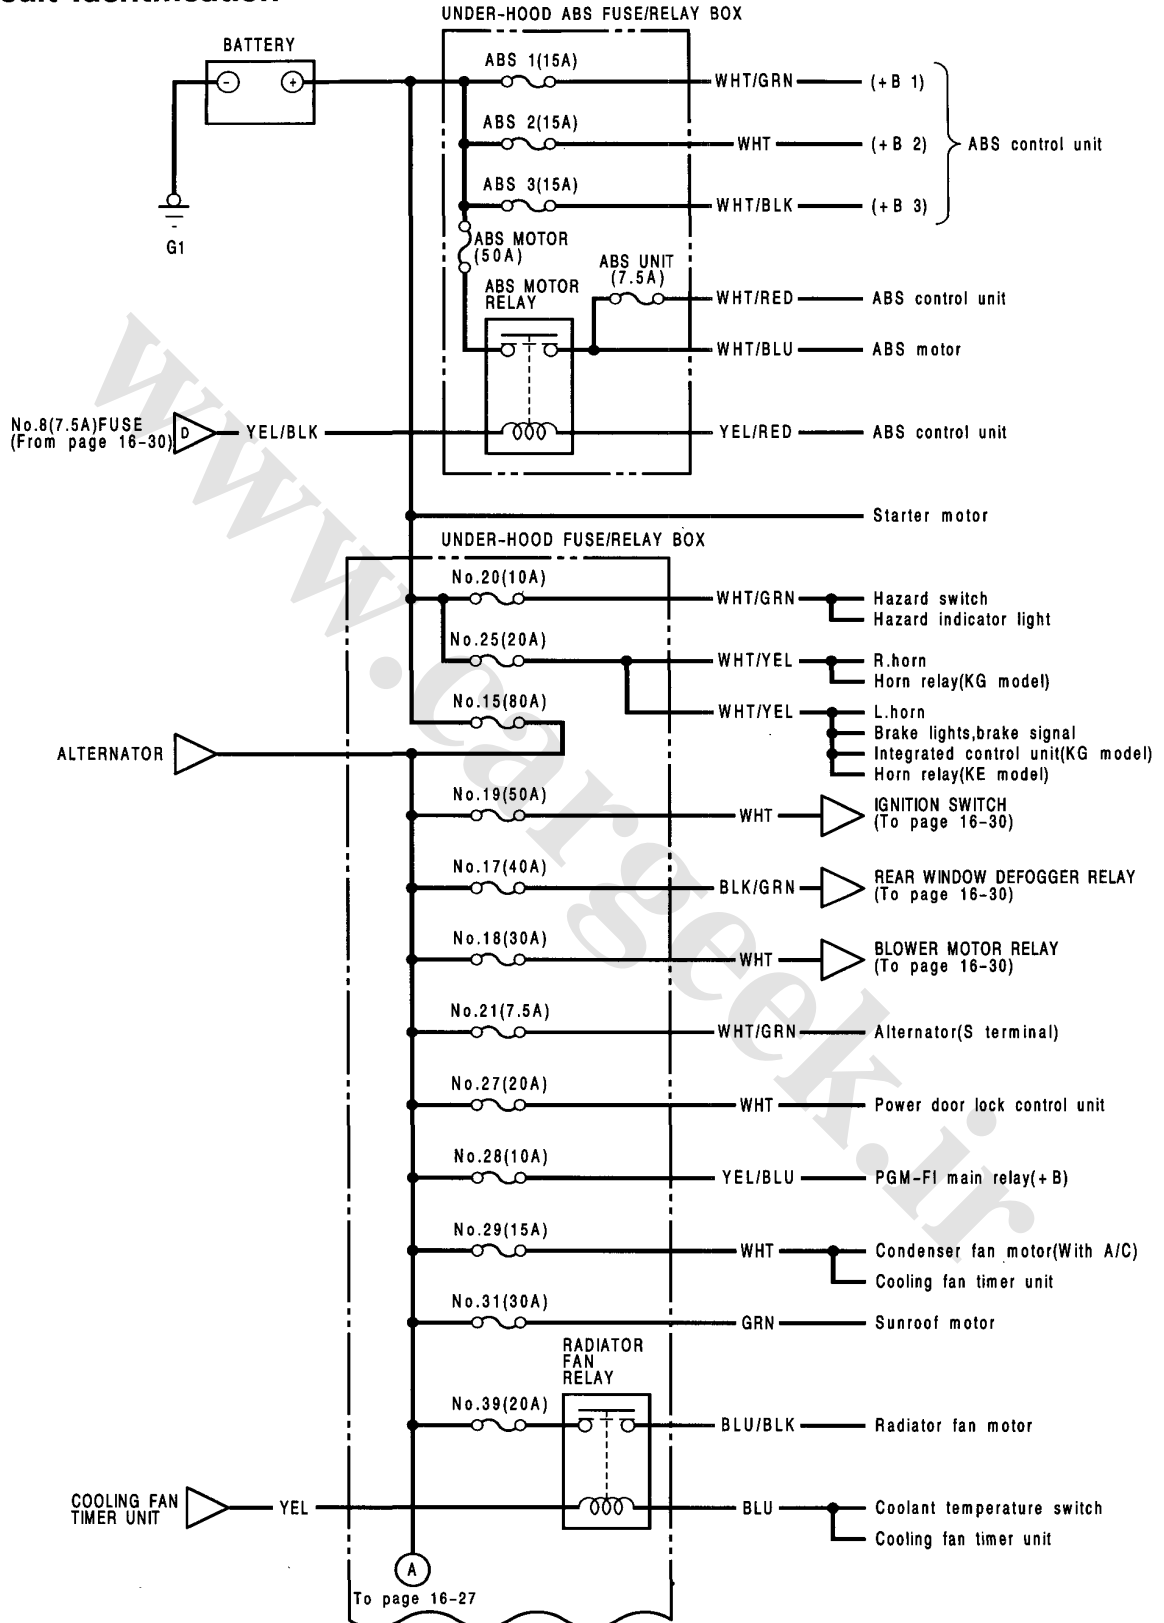



UNDER-HOOD FUSE/RELAY BOX

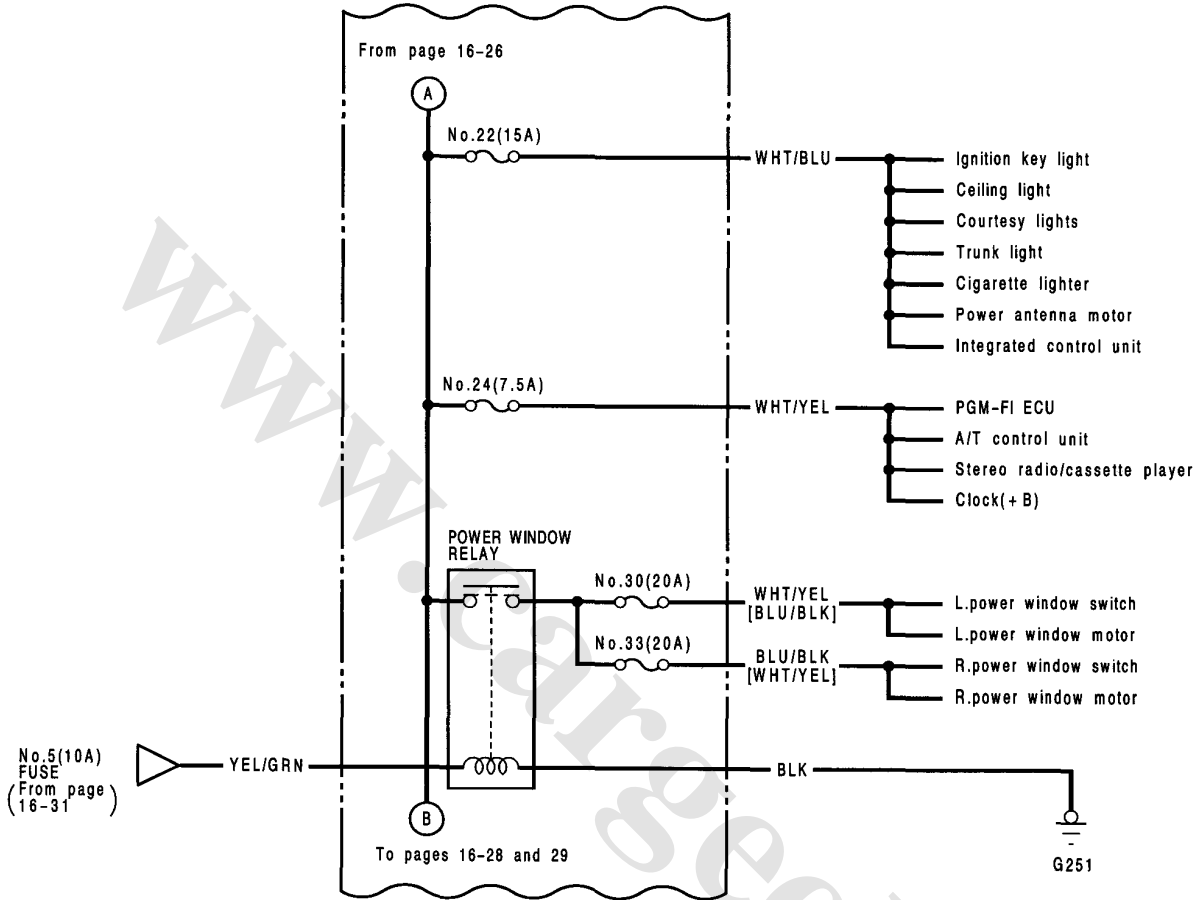


[] : KE model

(cont'd)

Power Distribution


Circuit Identification (cont'd)

KG model :

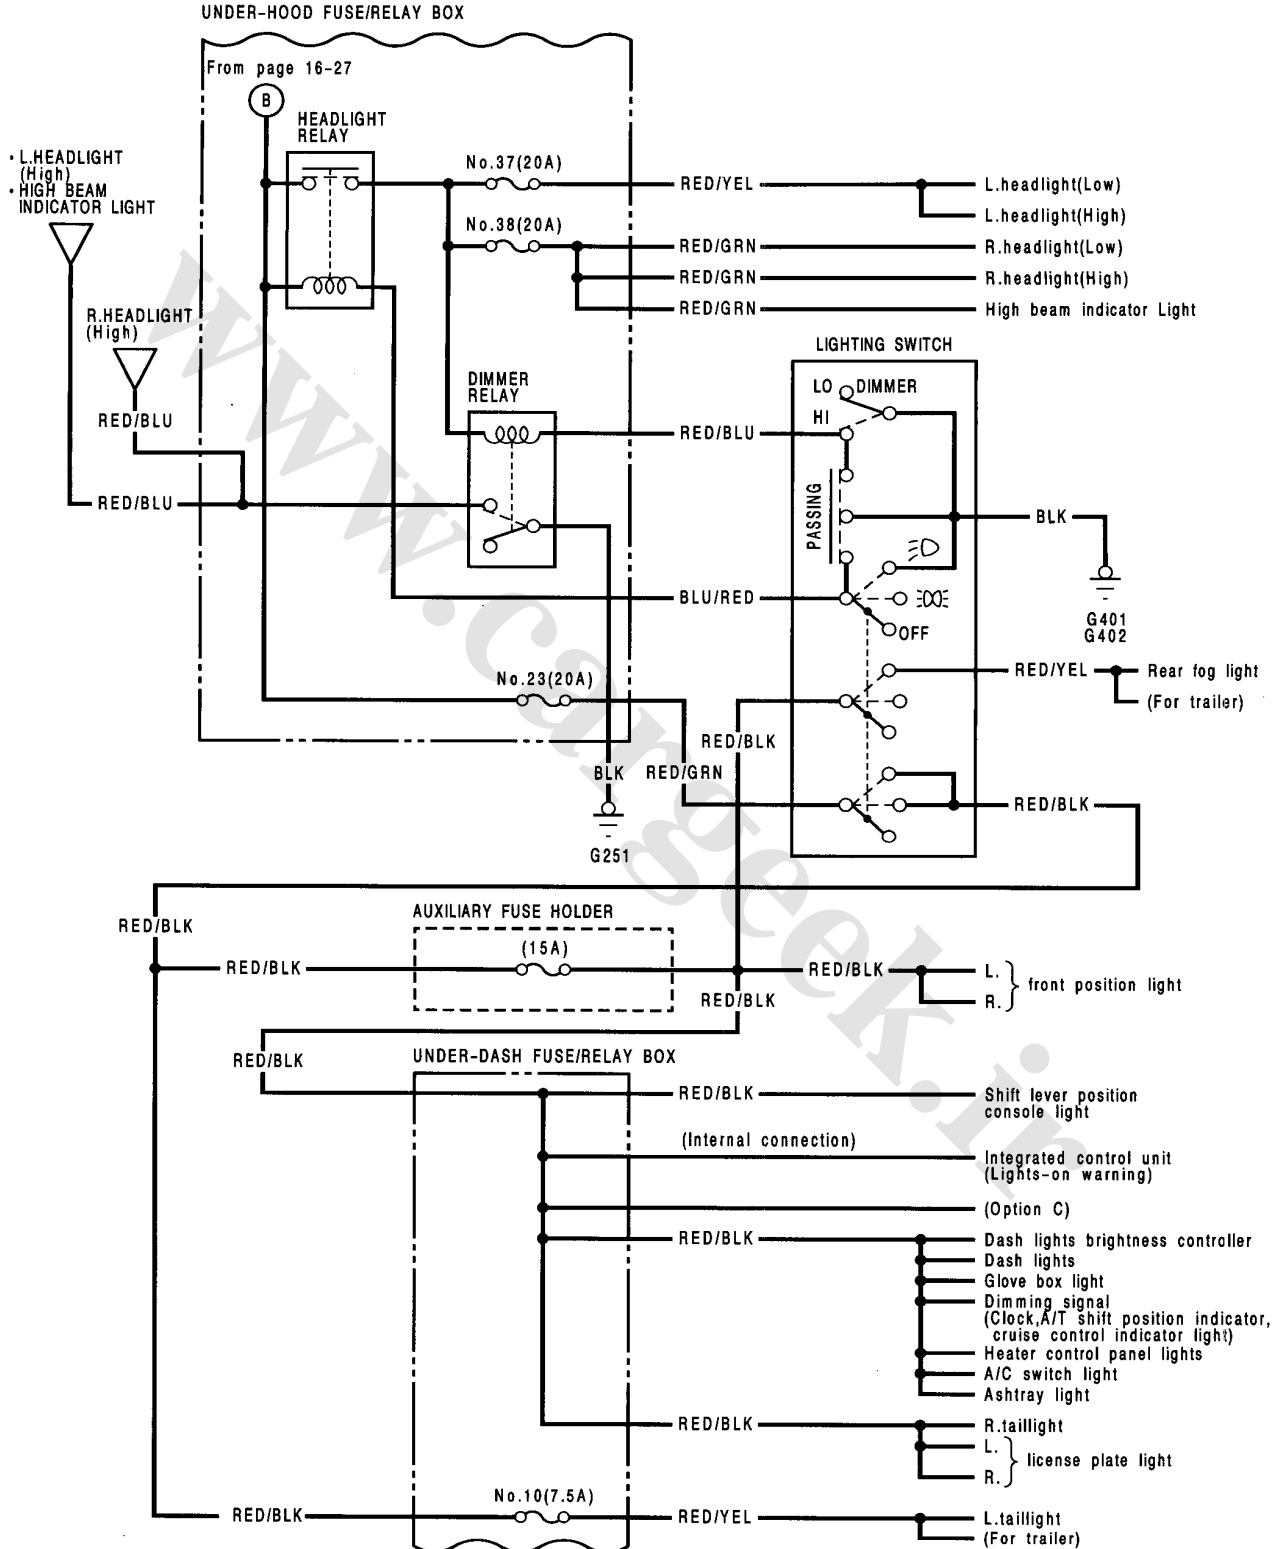




KE model:

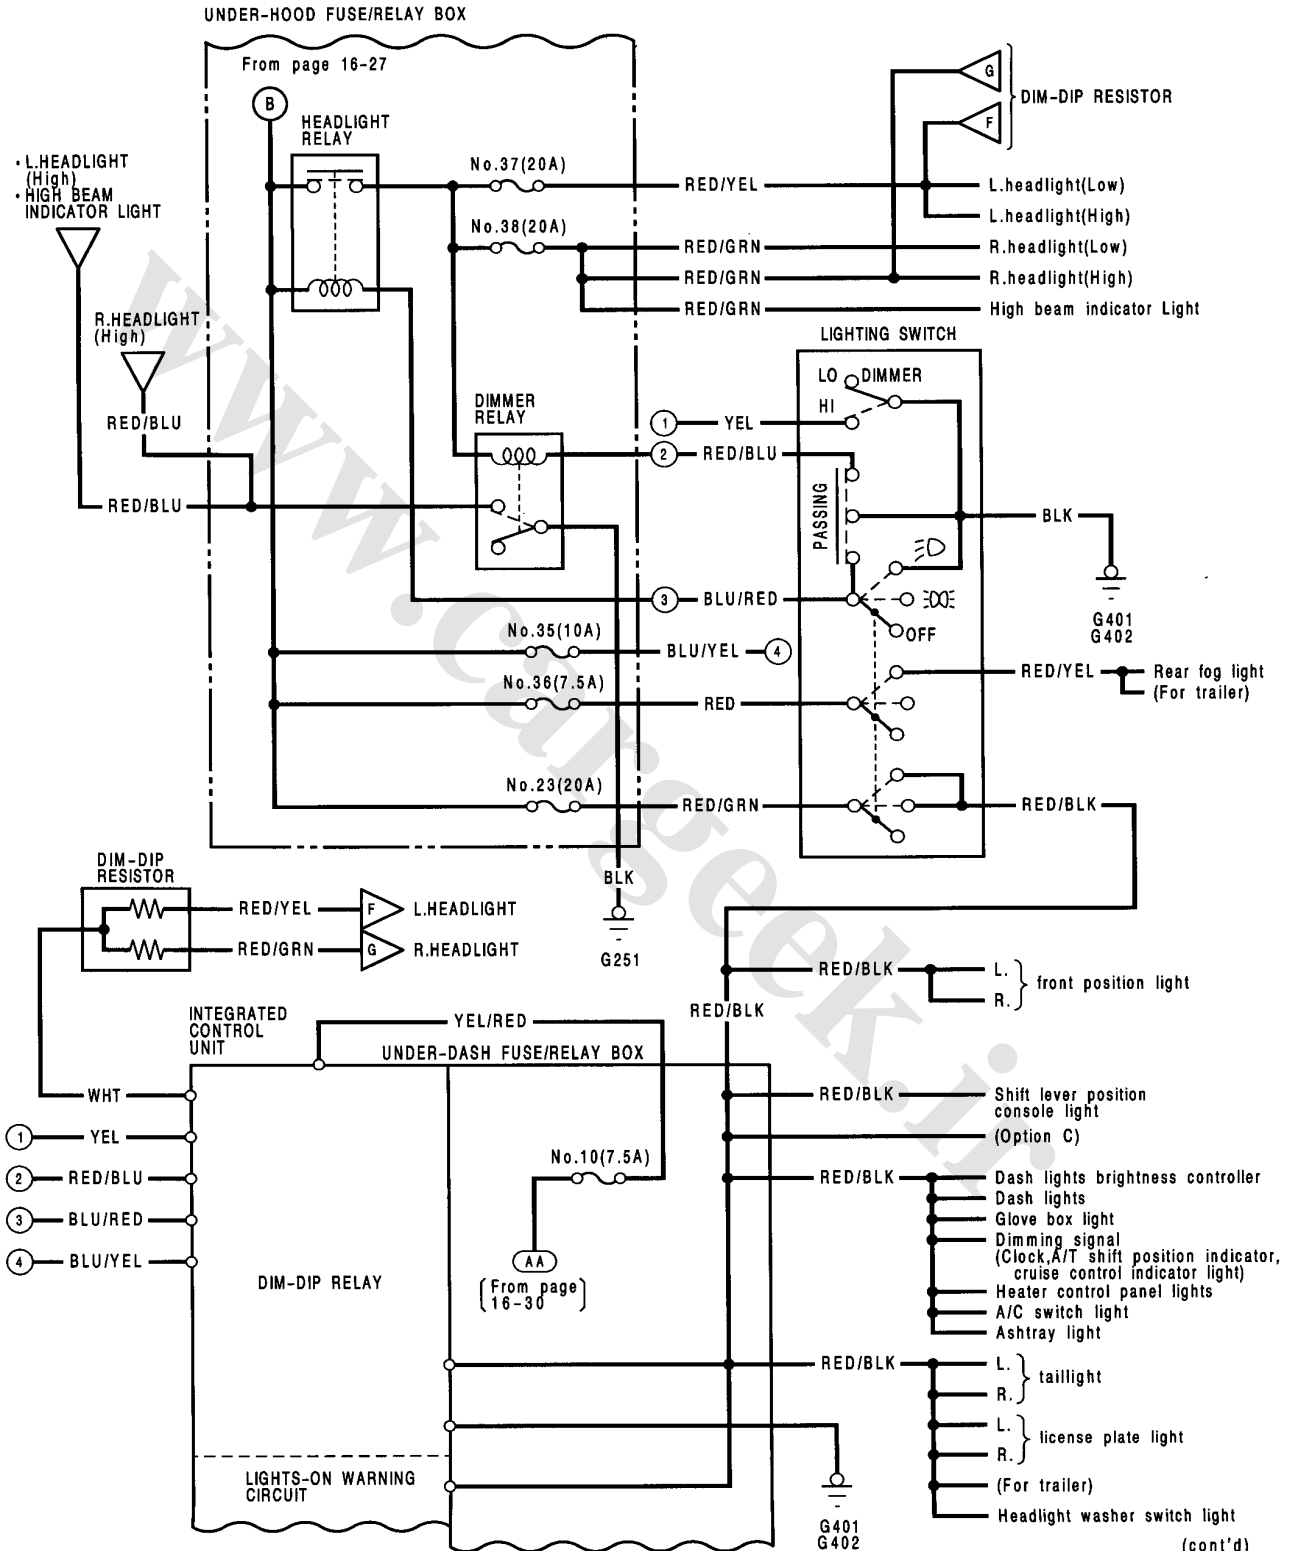


(cont'd)

Power Distribution


Circuit Identification (cont'd)

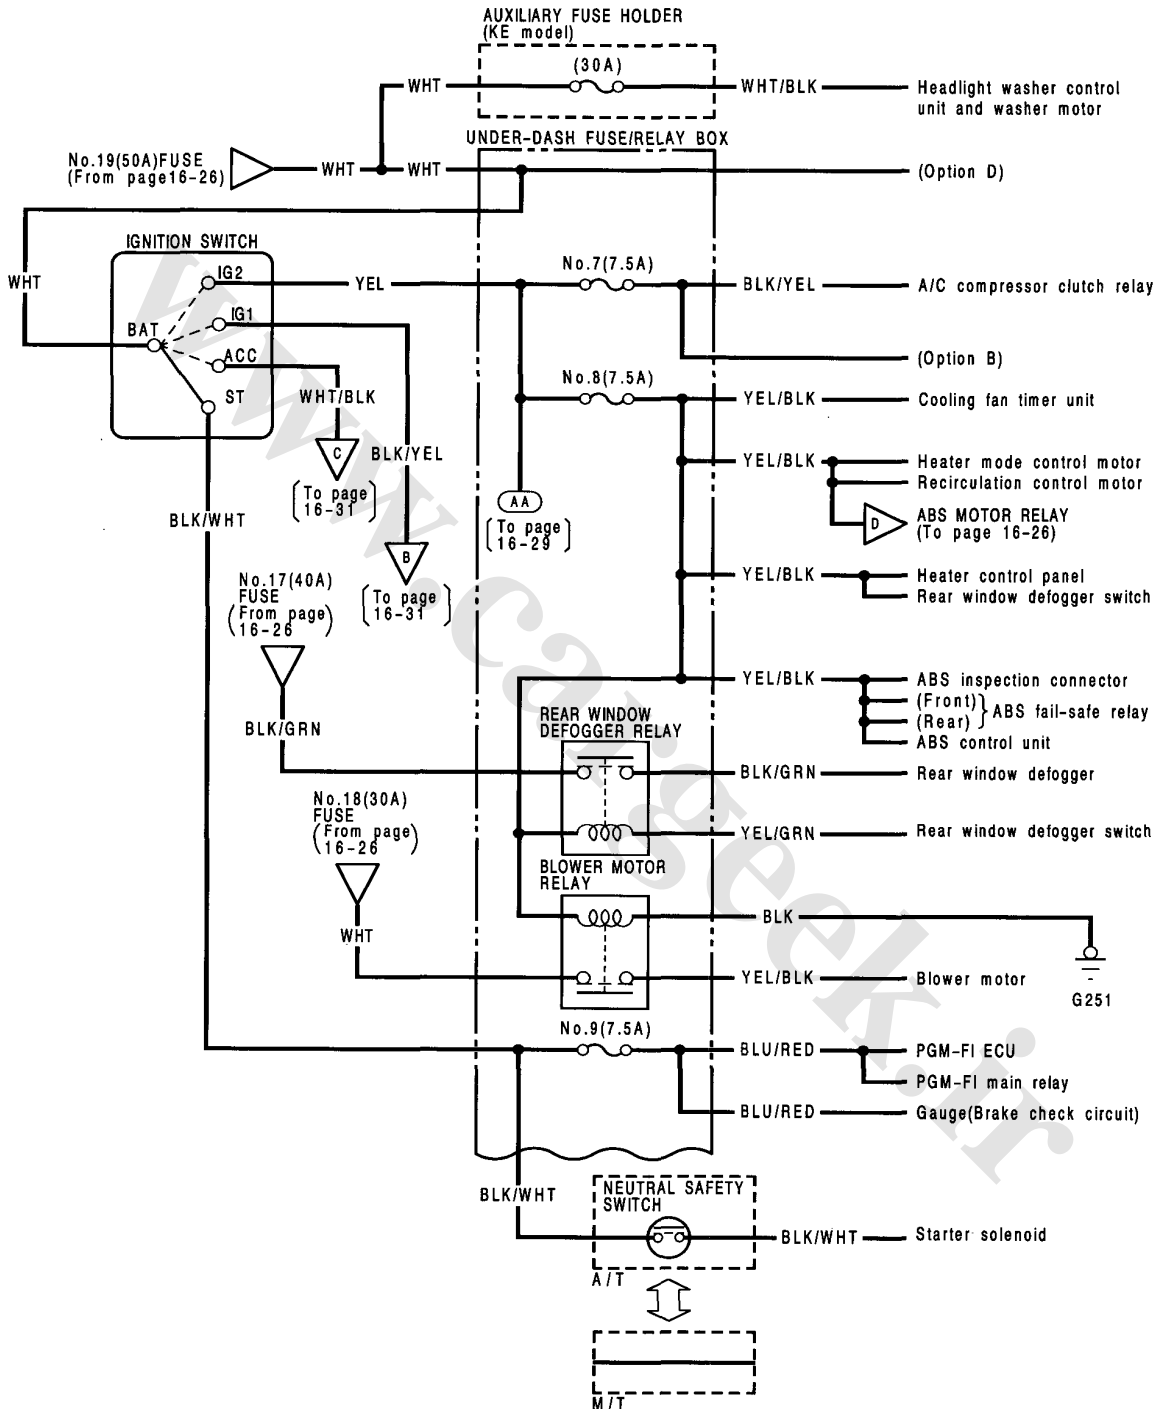

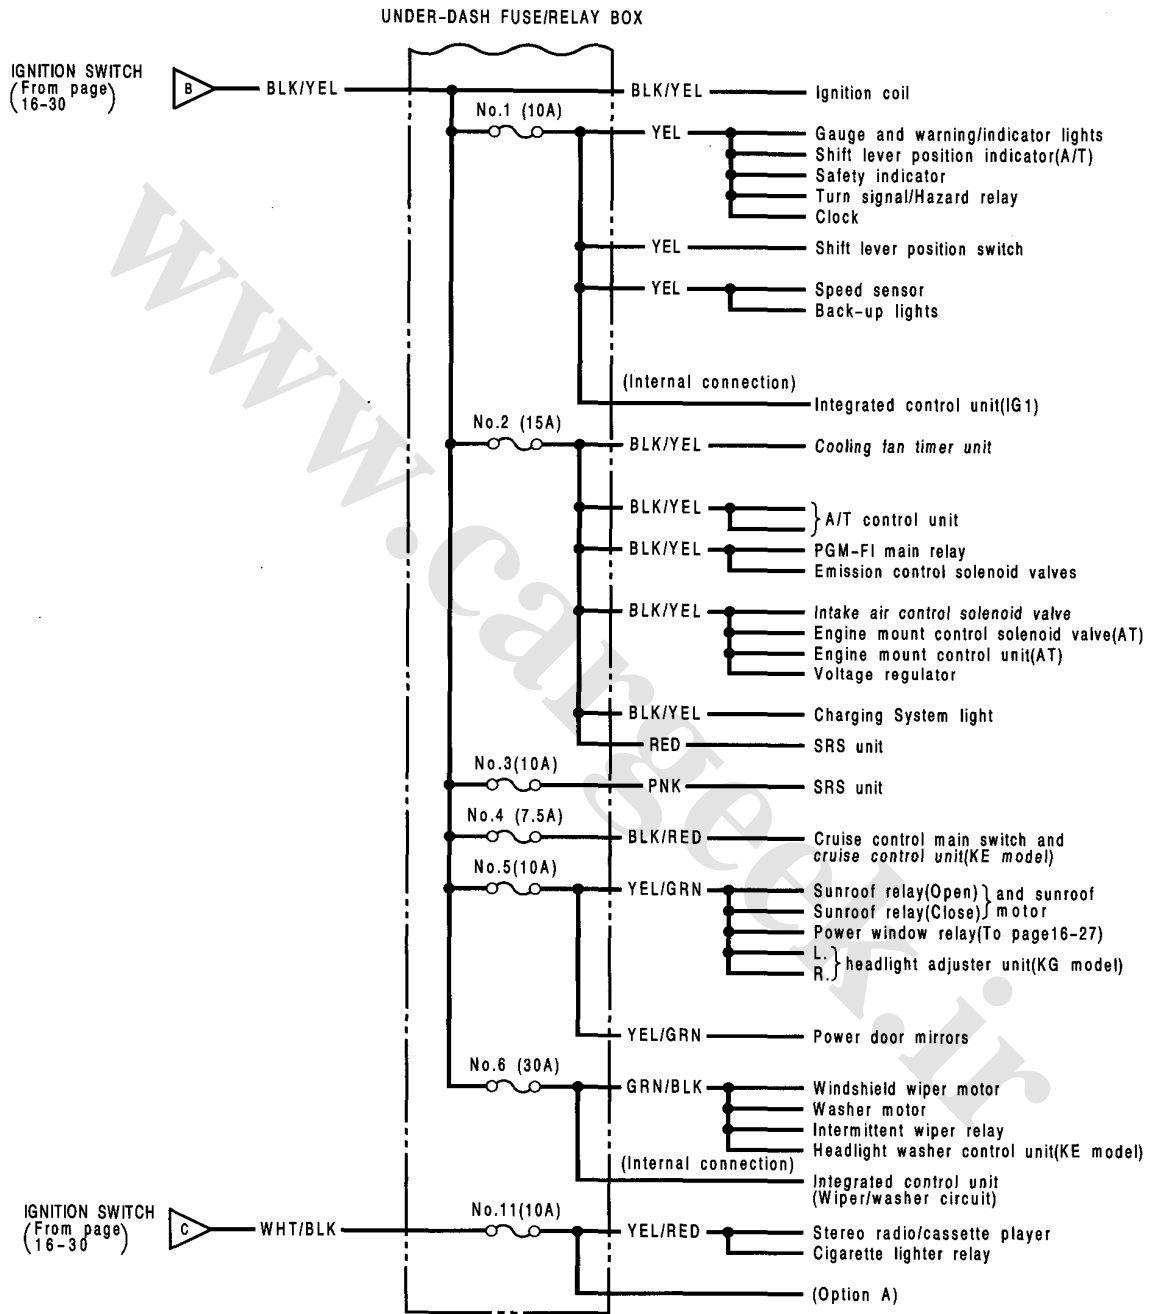

Ground Distribution

Circuit Identification

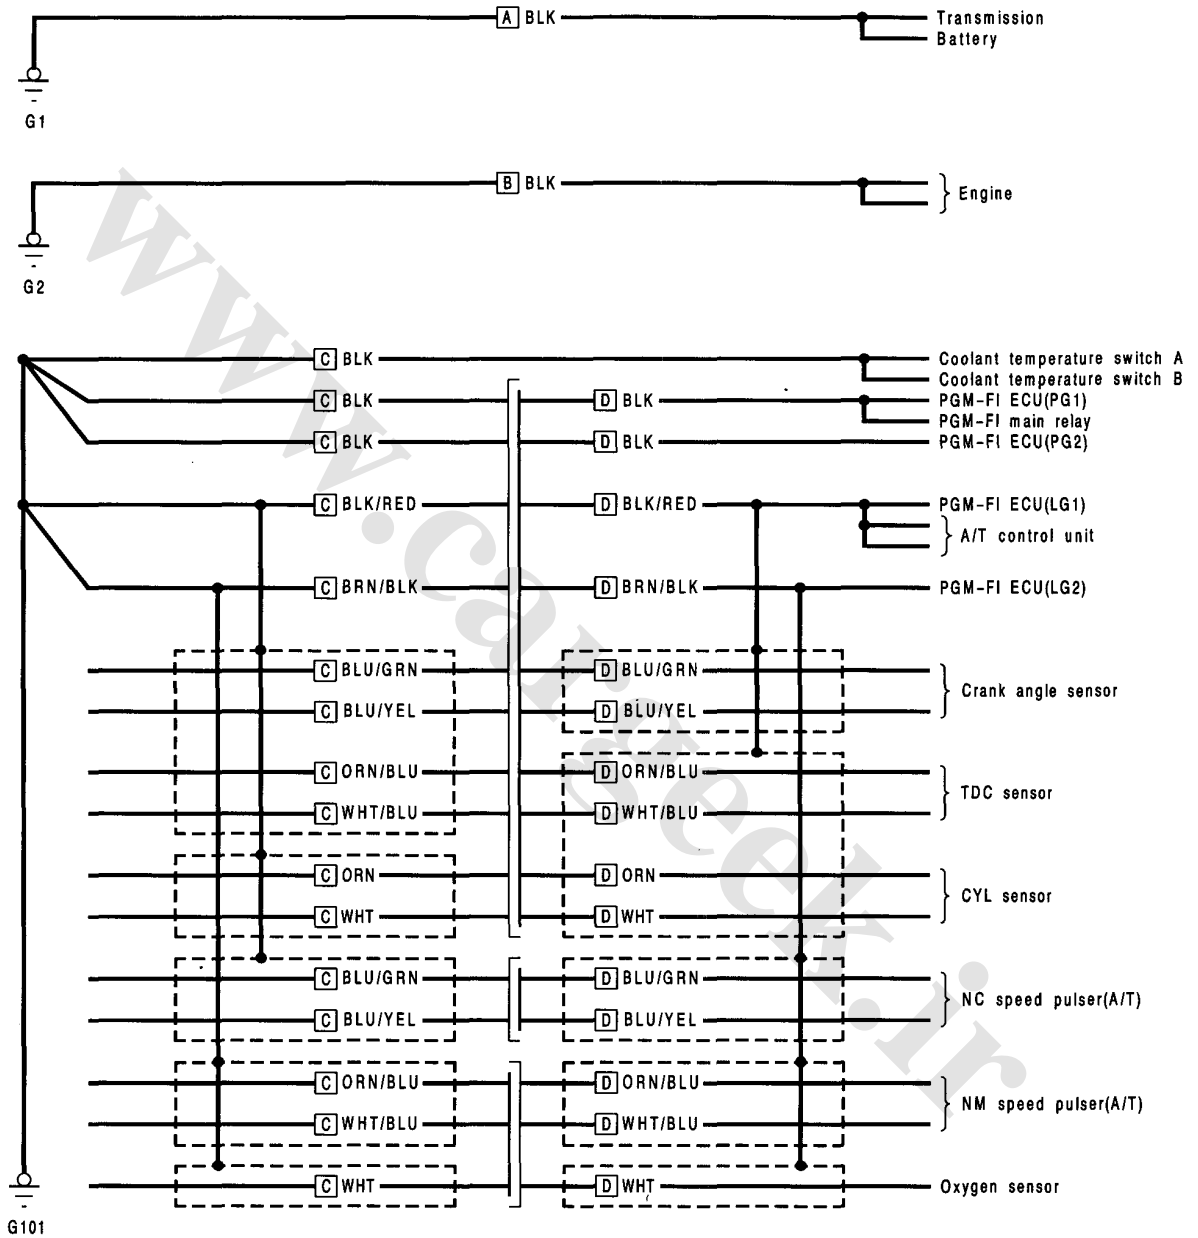


A : Battery ground wire
B : Engine ground wire

C : Engine wire harness
D : Main wire harness

----- Shield wire




Circuit Identification (KG model)

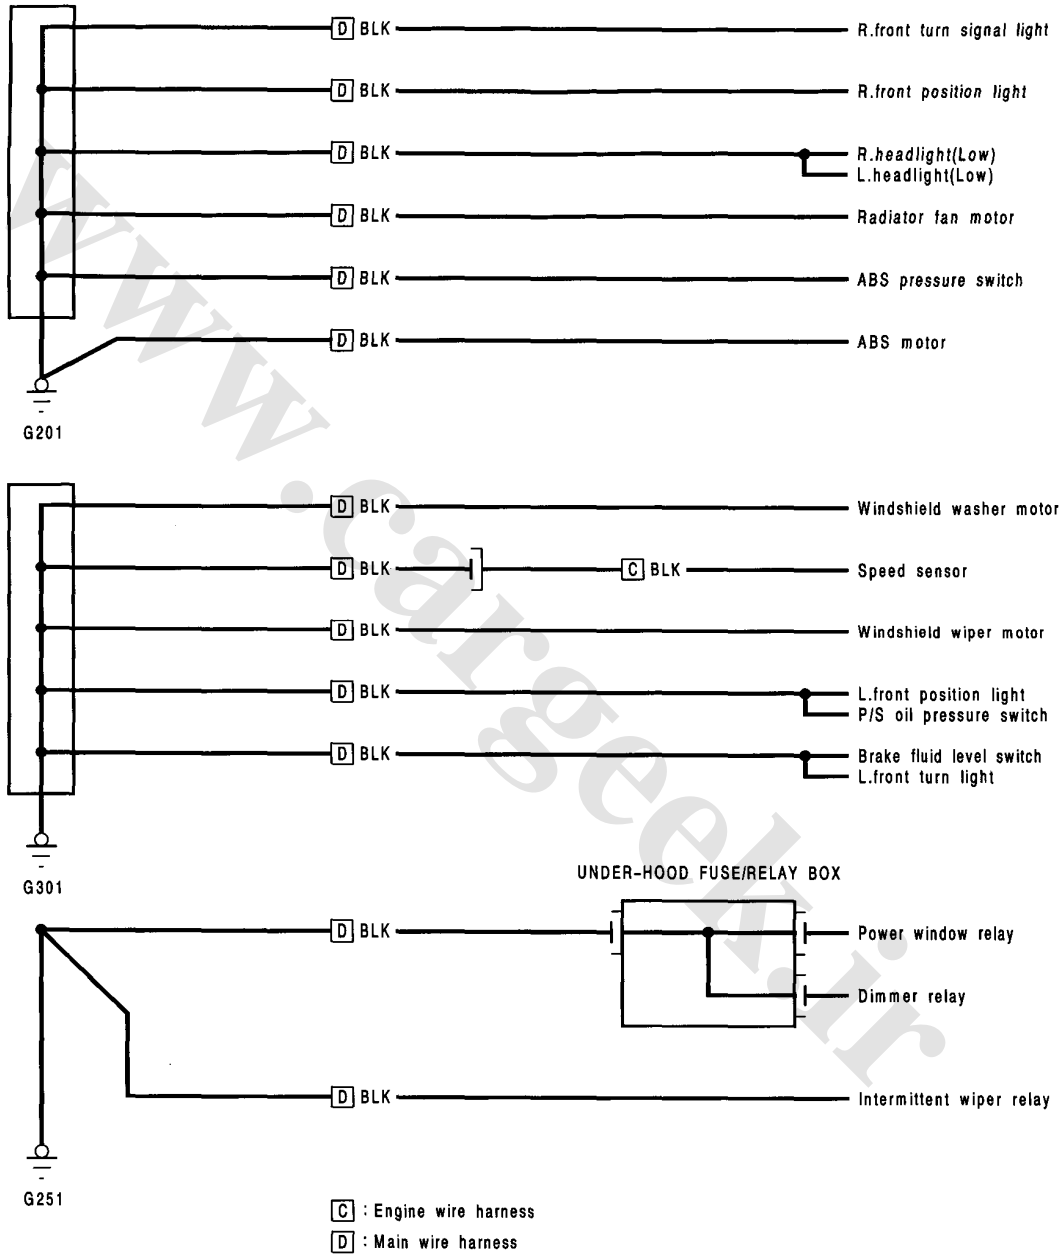


Ground Distribution

Circuit Identification (KE model)

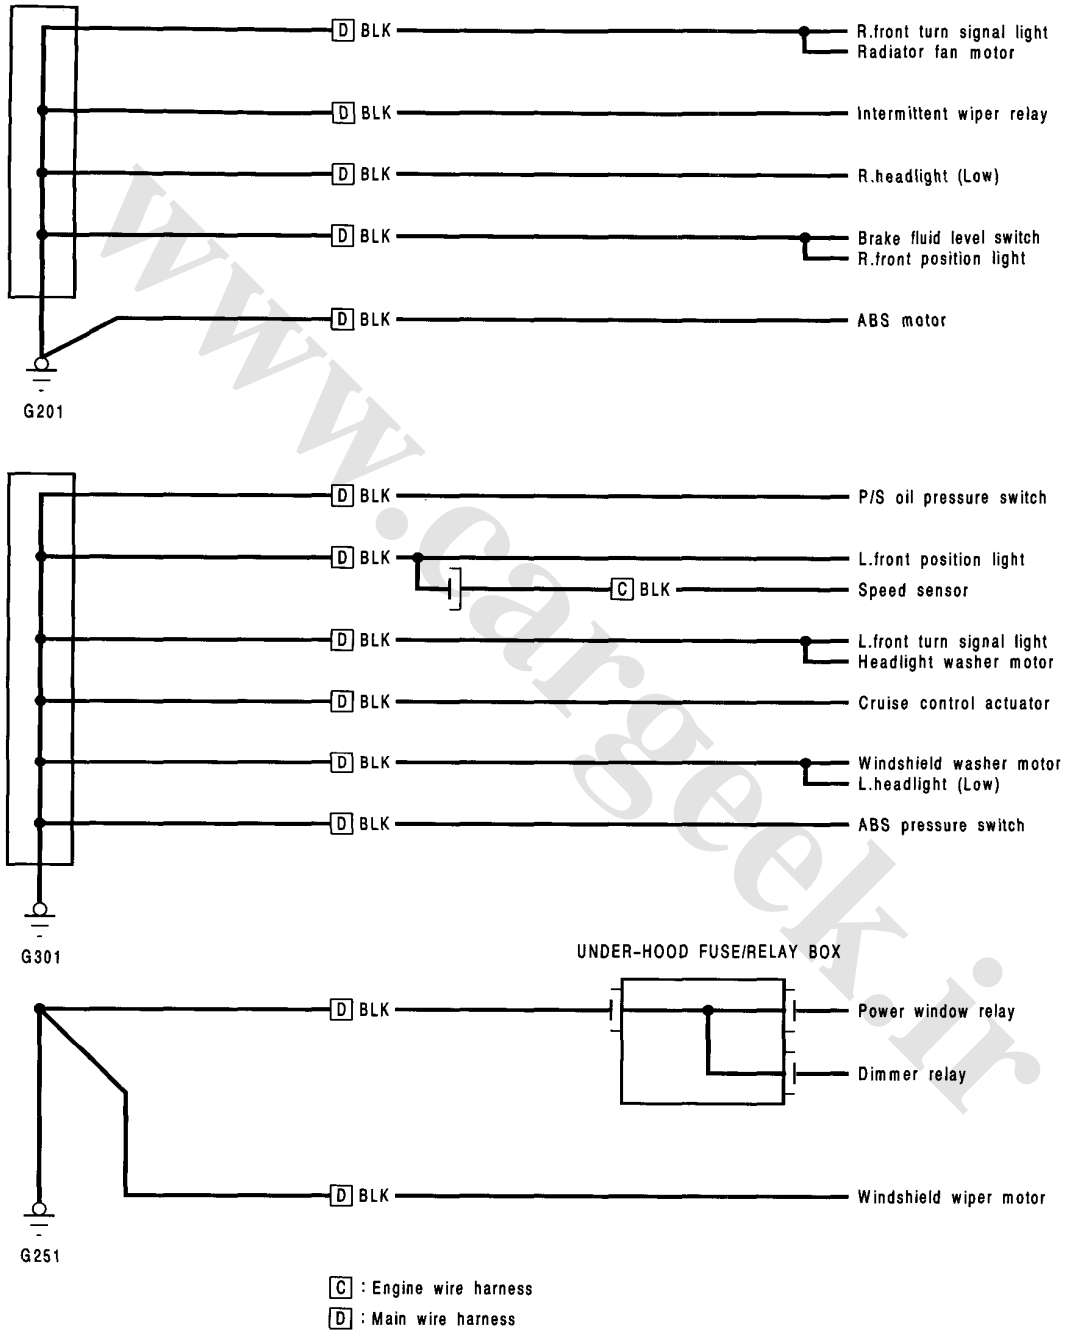




KG model :

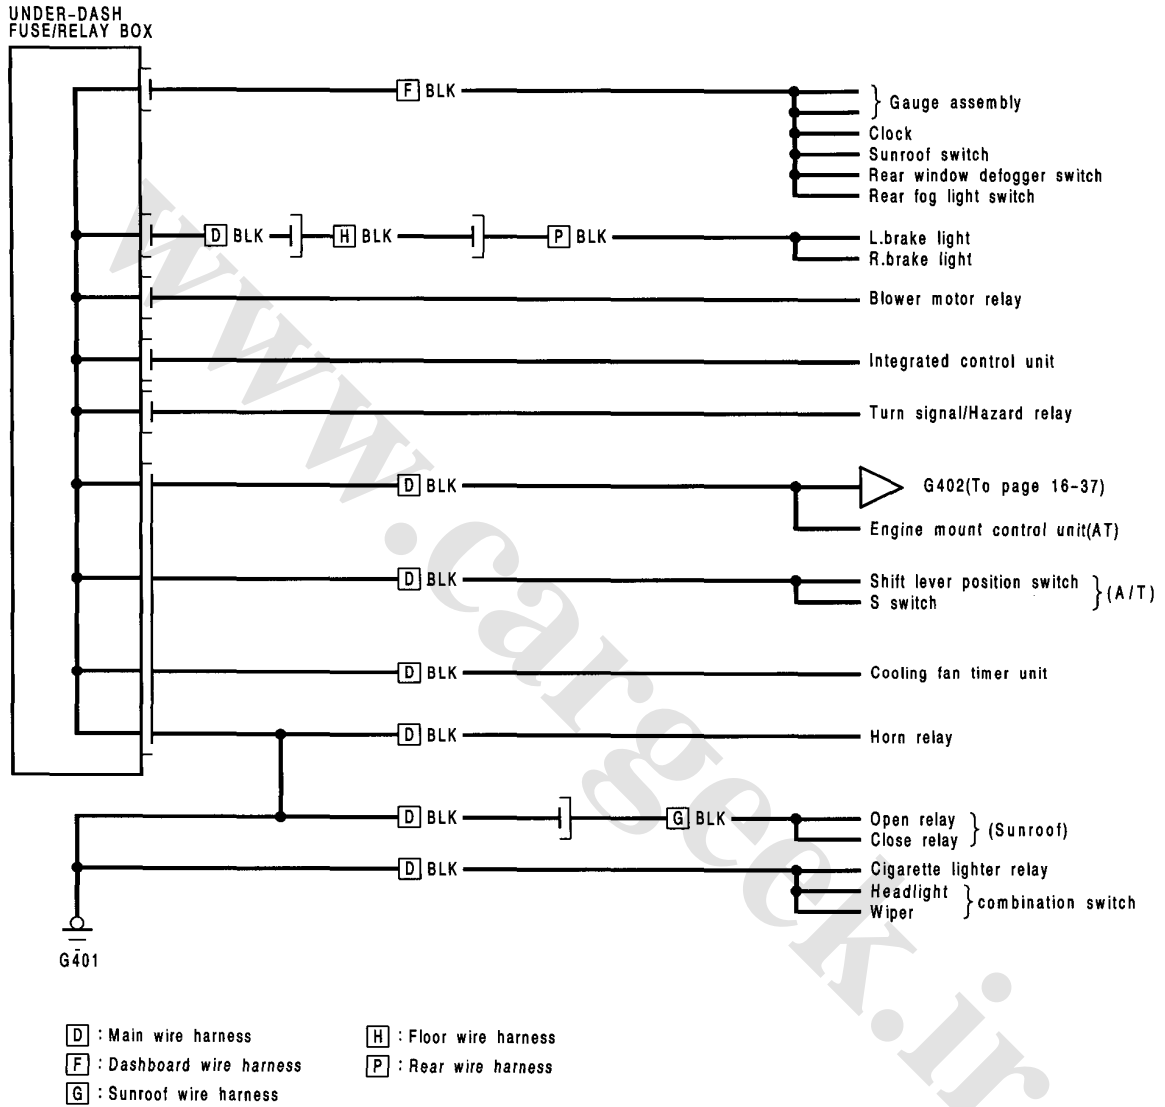


(cont'd)


Ground Distribution

Circuit Identification (KE model)

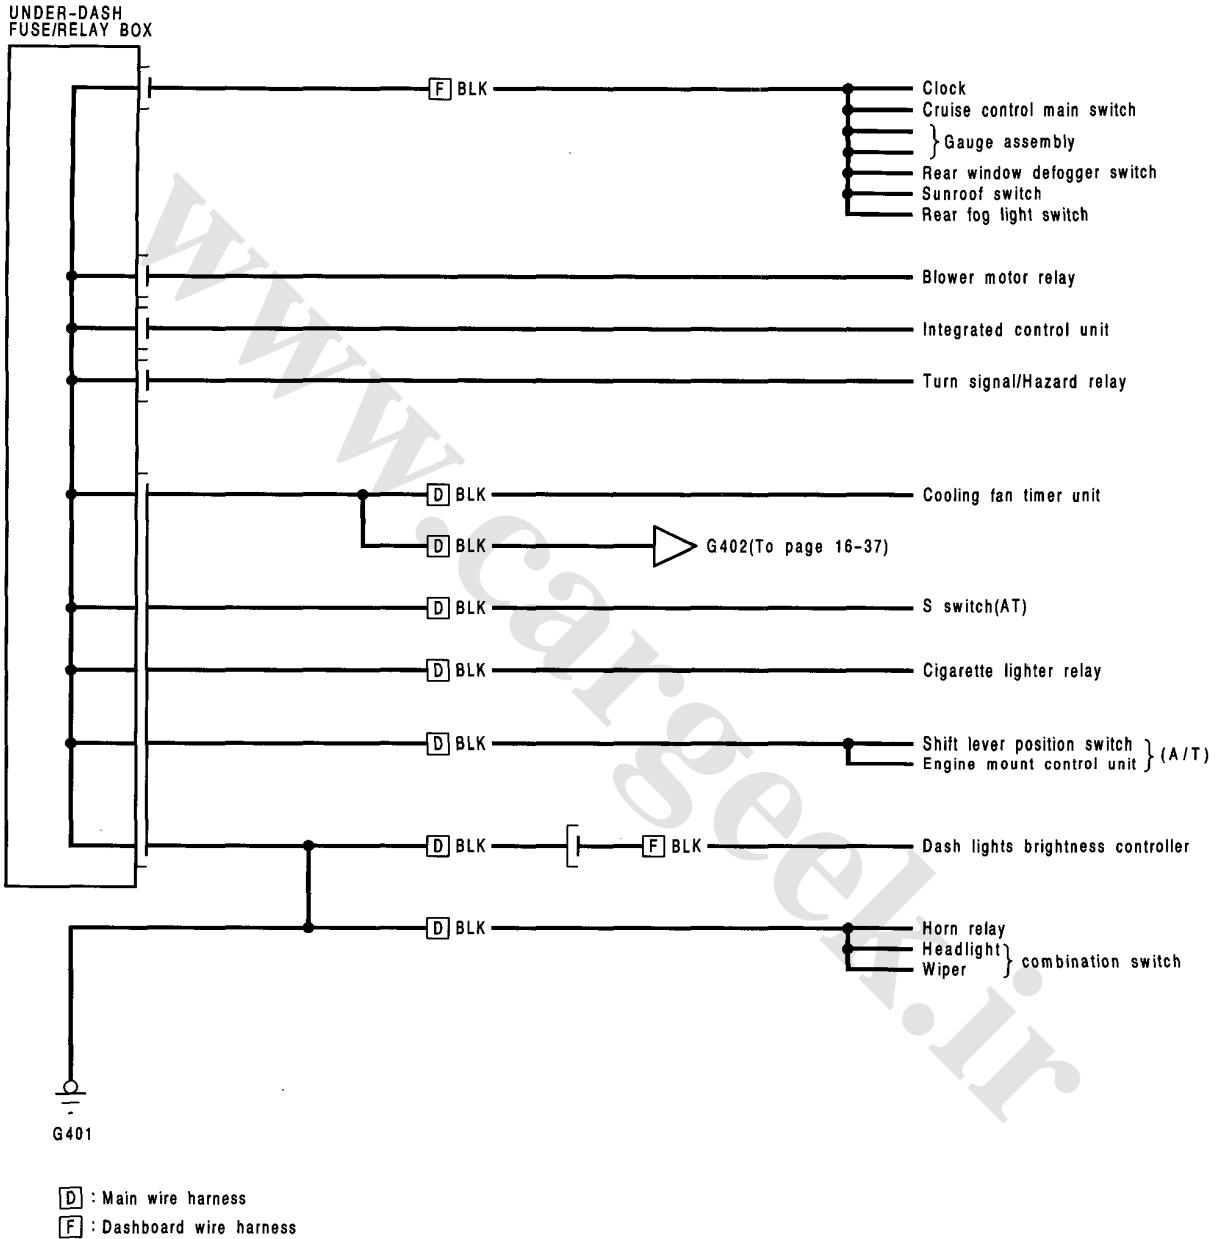




KG model:

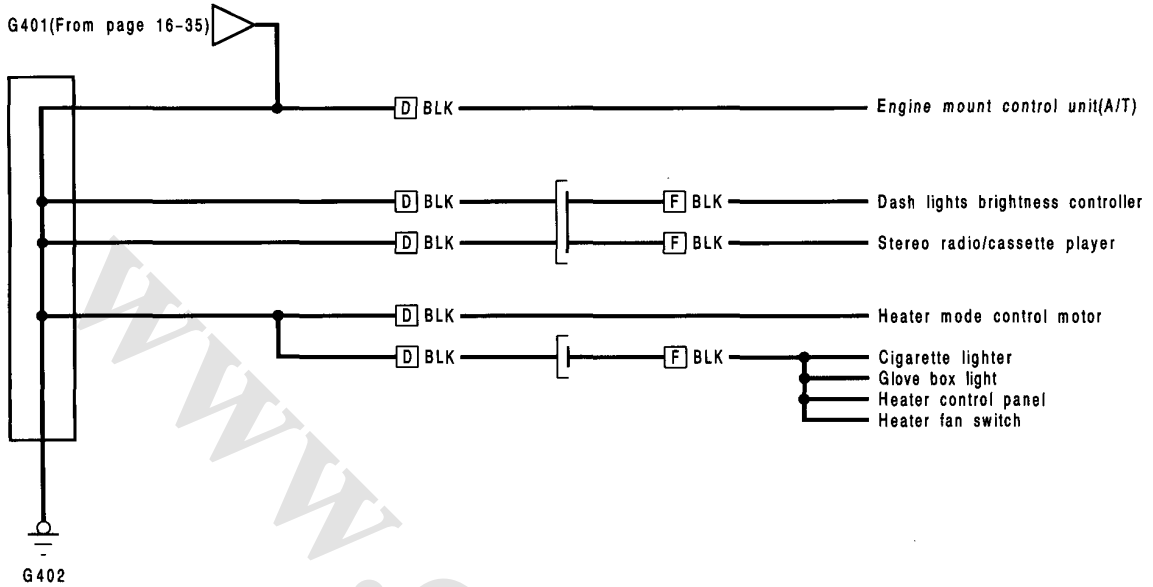

KE model:

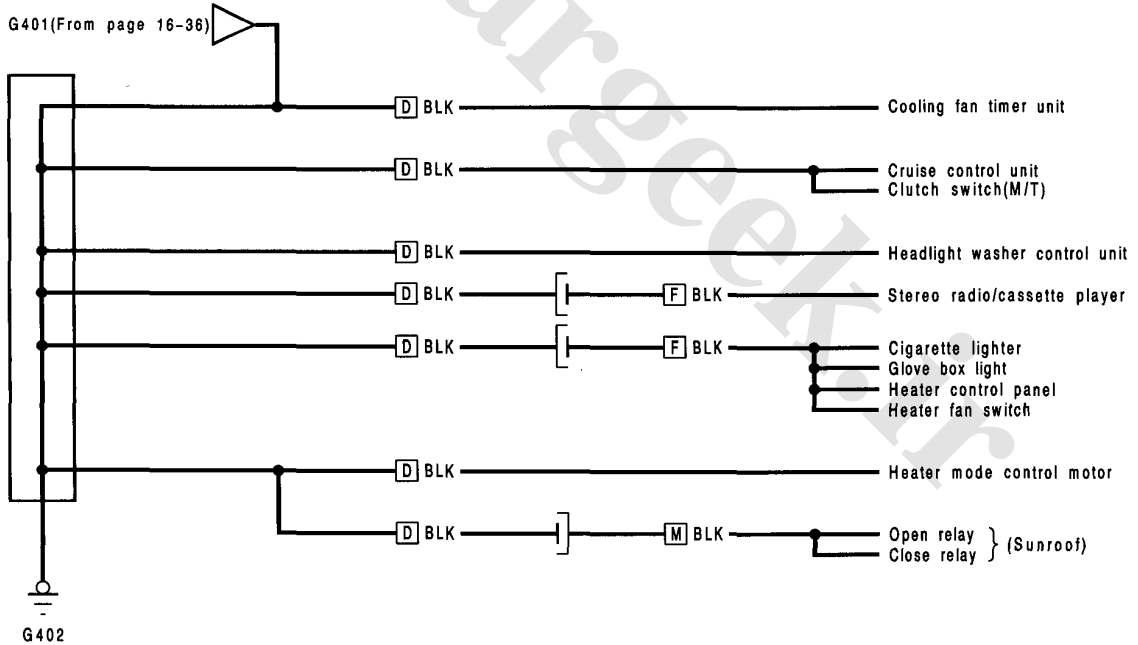


- [D] : Main wire harness
- [F] : Dashboard wire harness
- [M] : Sunroof wire harness

Ground Distribution

Circuit Identification


KG model:

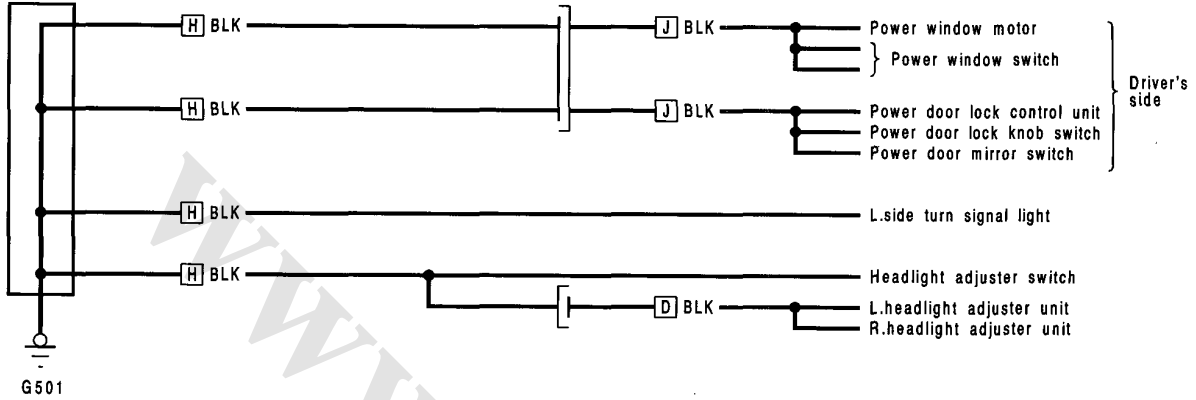


KG model:



KE model:

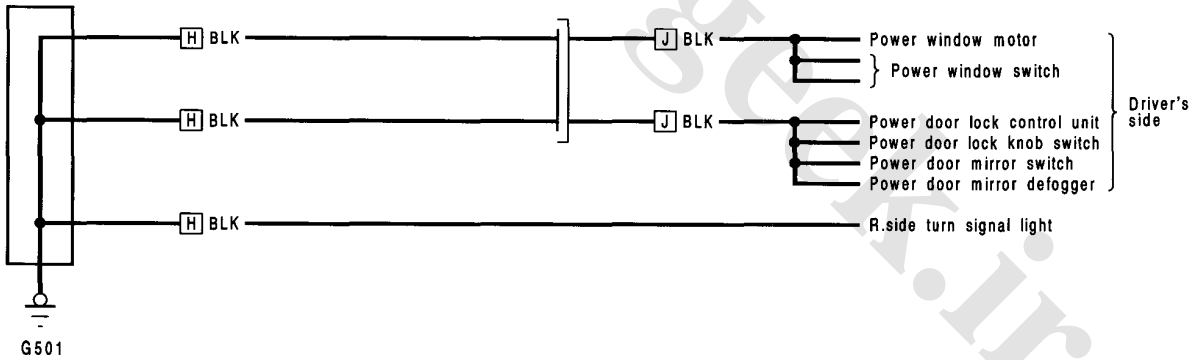


KE model:

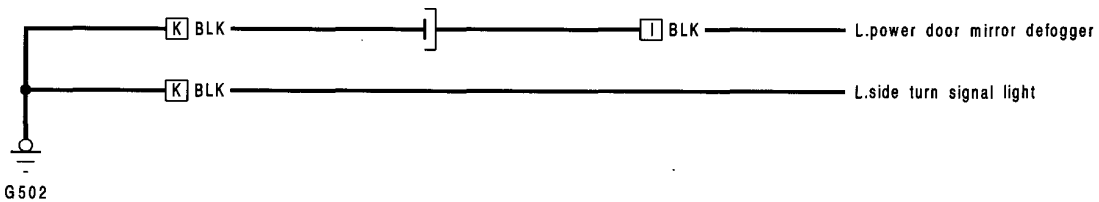

[D] : Main wire harness
[H] : Floor wire harness

[I] : Left door wire harness
[J] : Driver's door wire harness

[K] : Side wire harness

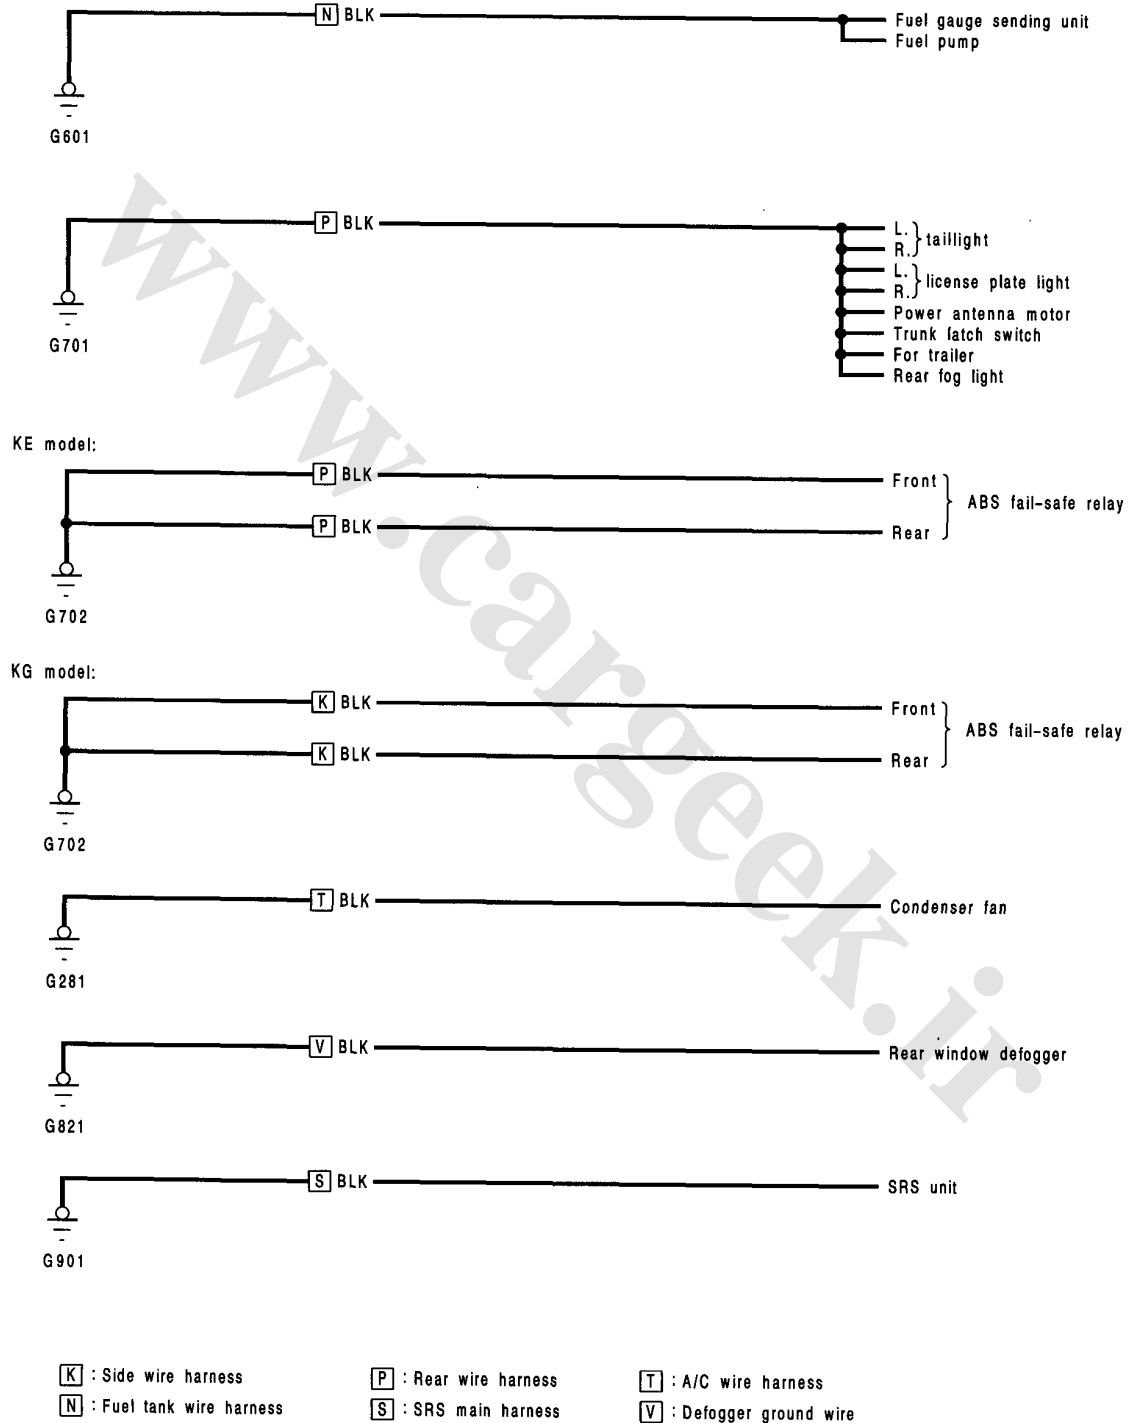


Charging System

Troubleshooting

NOTE:


- Before troubleshooting, check the tension of the alternator belt.
- Troubleshoot by performing following tests in the order listed below.

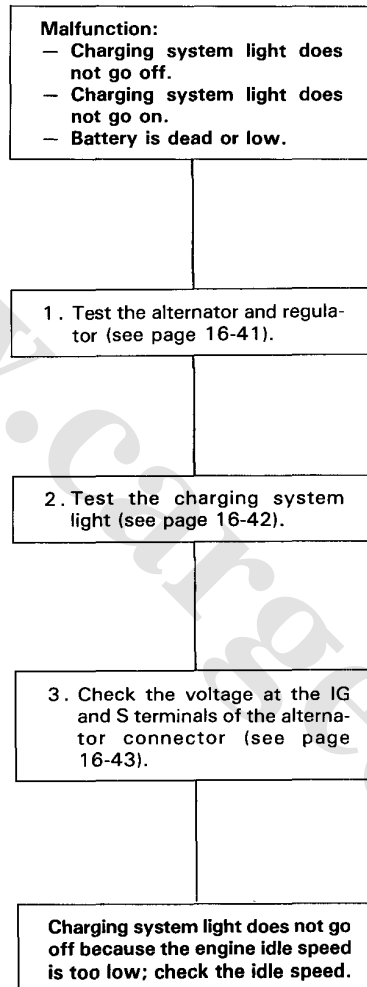



Alternator/Regulator Test:

CAUTION: Be careful during testing as the cooling fan comes on suddenly while the engine is running.

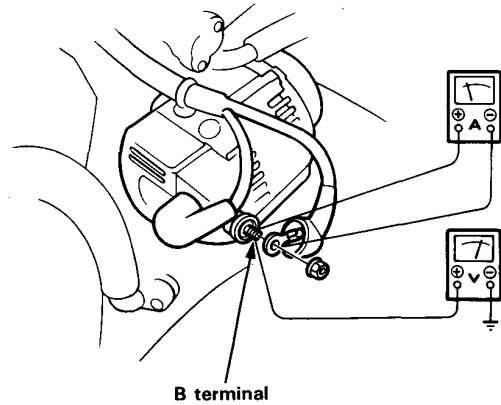

Be sure to use a good battery. Disconnect the B terminal, then connect an ammeter and a voltmeter as shown.

NOTE: Be sure to use an ammeter capable of measuring amperages higher than 120 A.

Start the engine, and let it idle until it reaches normal operating temperature (cooling fan comes on two times).

Raise the engine speed to 2000 rpm and hold it there. Turn the headlights (HI) on, and check the voltage at the battery terminals.

CAUTION: As the headlights warm up considerably, do not cover them.

Is the voltage between 13.9 and 15.1 V?

NO

Test the alternator components (see page 16-44).

YES

Turn the blower motor and the rear window defogger on, and check the battery voltage.

Is the battery voltage less than 13.5 V?

NO

Turn also the fog lights, brake lights, etc. on.

YES

Read the amperage.

Are there more than *A?

NO

Test the alternator components (see page 16-44).

YES

The alternator and regulator are OK. Test the charging system light (see page 16-42).

*:



- With A/C: 60 A
- Without A/C: 55 A

(cont'd)

Charging System

Troubleshooting (cont'd)

Charging System Light Test:

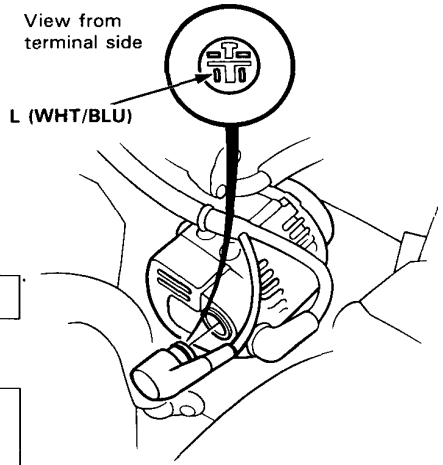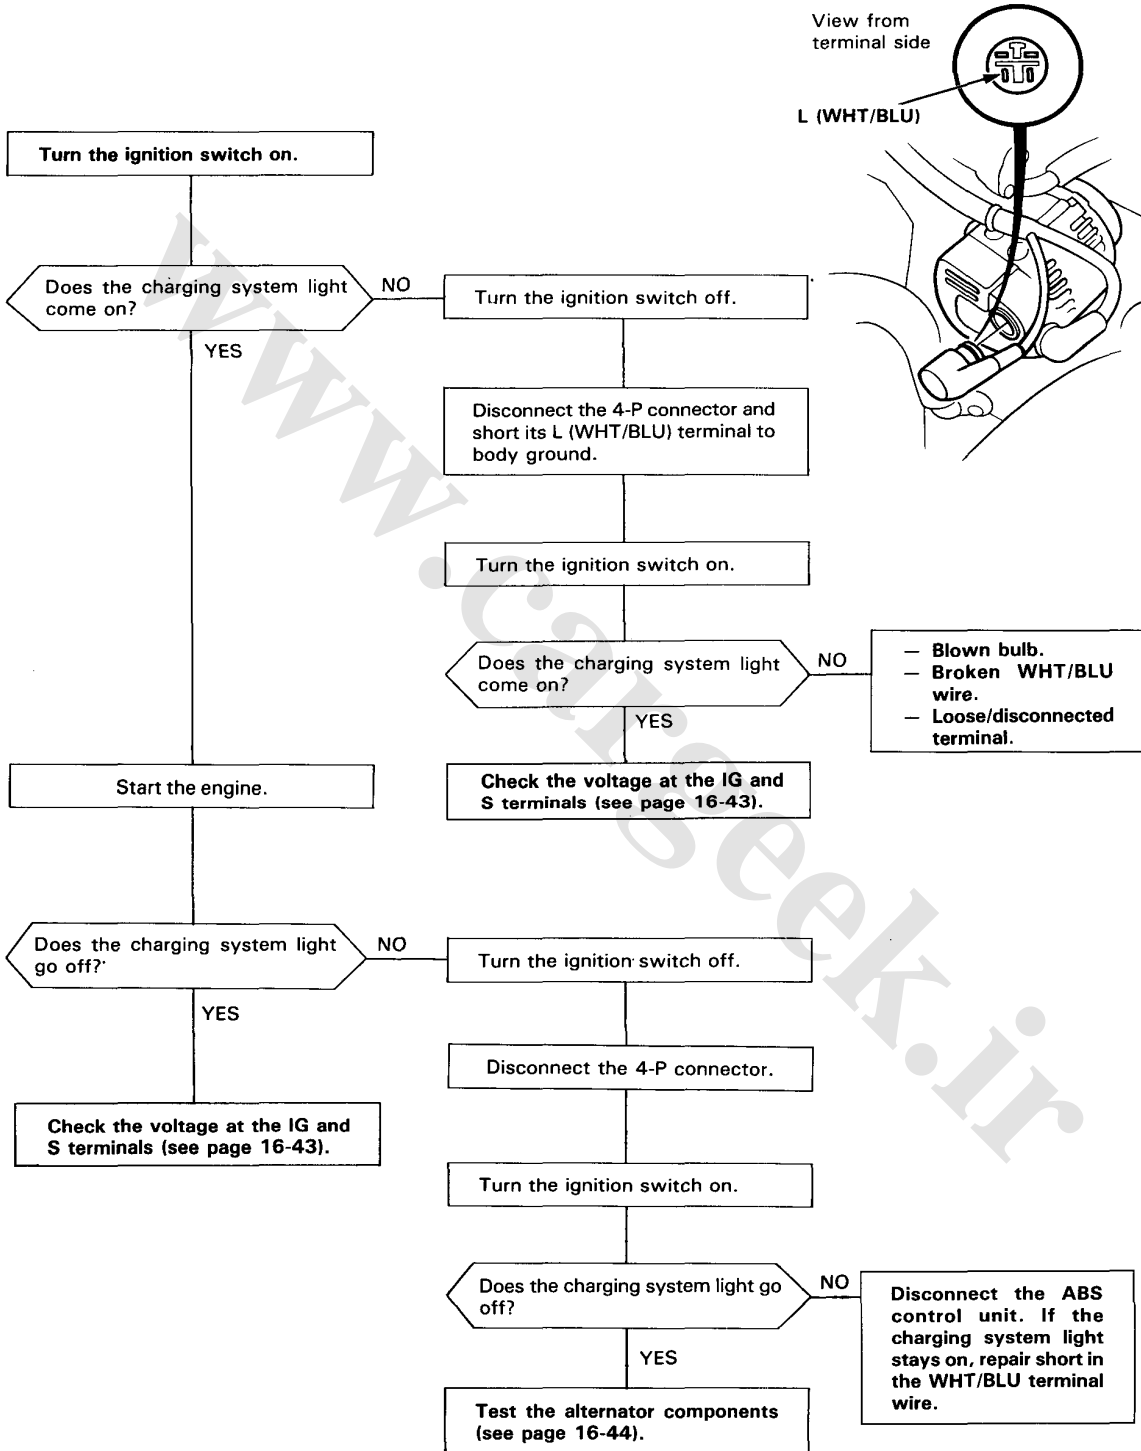

- Blown bulb.
- Broken WHT/BLU wire.
- Loose/disconnected terminal.



Voltage Checks at IG and S Terminals:

Turn the ignition switch off.

Are the B terminal, the 4-P connector and under-hood fuse/relay box terminals securely tightened?

NO

Tighten or reconnect the terminals securely.

YES

Disconnect the 4-P connector and turn the ignition switch on.

Measure the voltage between body ground and the IG terminal of the 4-P connector.

Is there battery voltage?

NO

- Blown No. 2 (15 A) fuse.
- An open in the BLK/YEL wire.

YES

Measure the voltage between body ground and the S terminal of the 4-P connector.


Is there battery voltage?

NO

- Blown No. 21 (7.5 A) fuse.
- An open in the WHT/GRN wire.

YES

Check the battery.

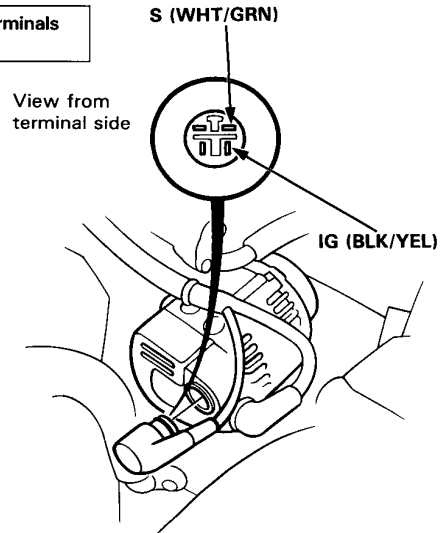


(cont'd)

Charging System

Troubleshooting (cont'd)


Alternator Components Test:


NOTE: Test the alternator components in the order described below.

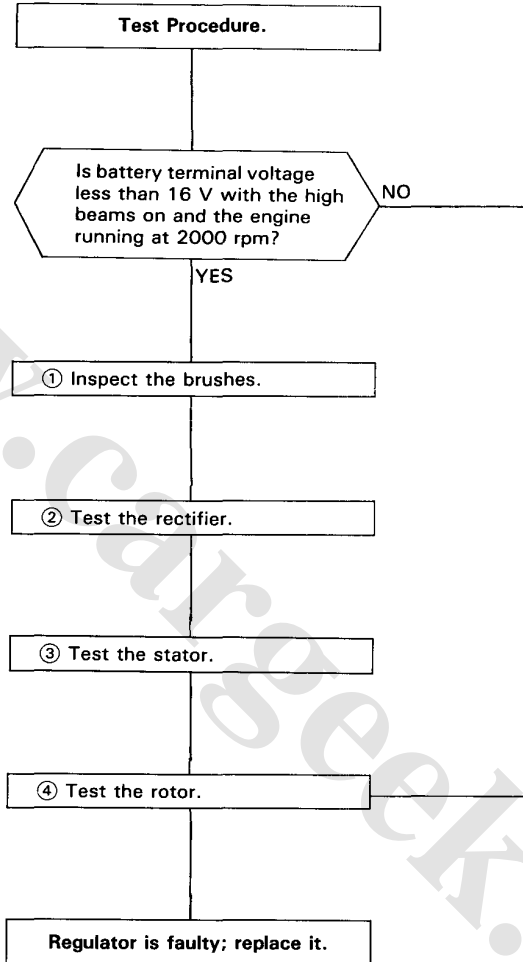

Gauge Assembly

Circuit Diagram

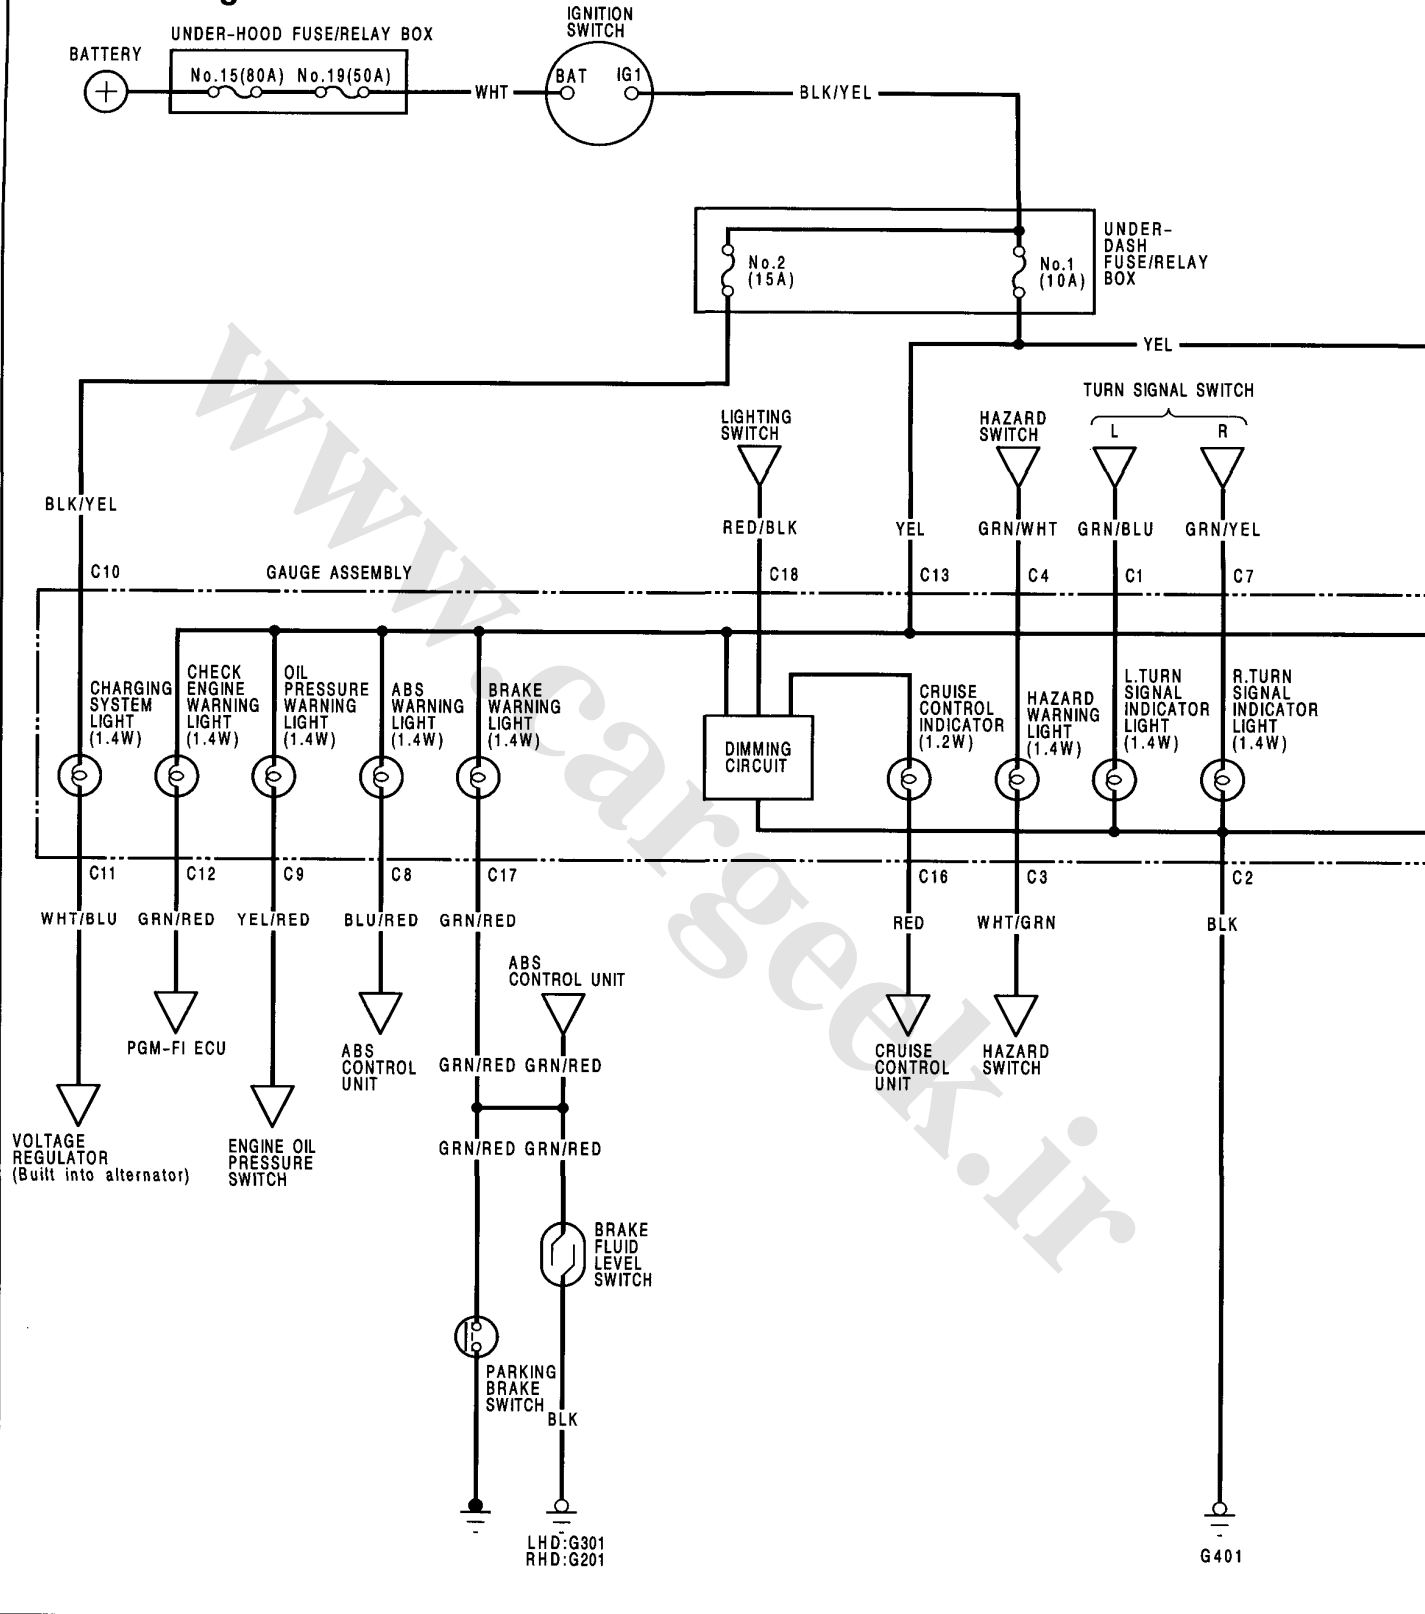

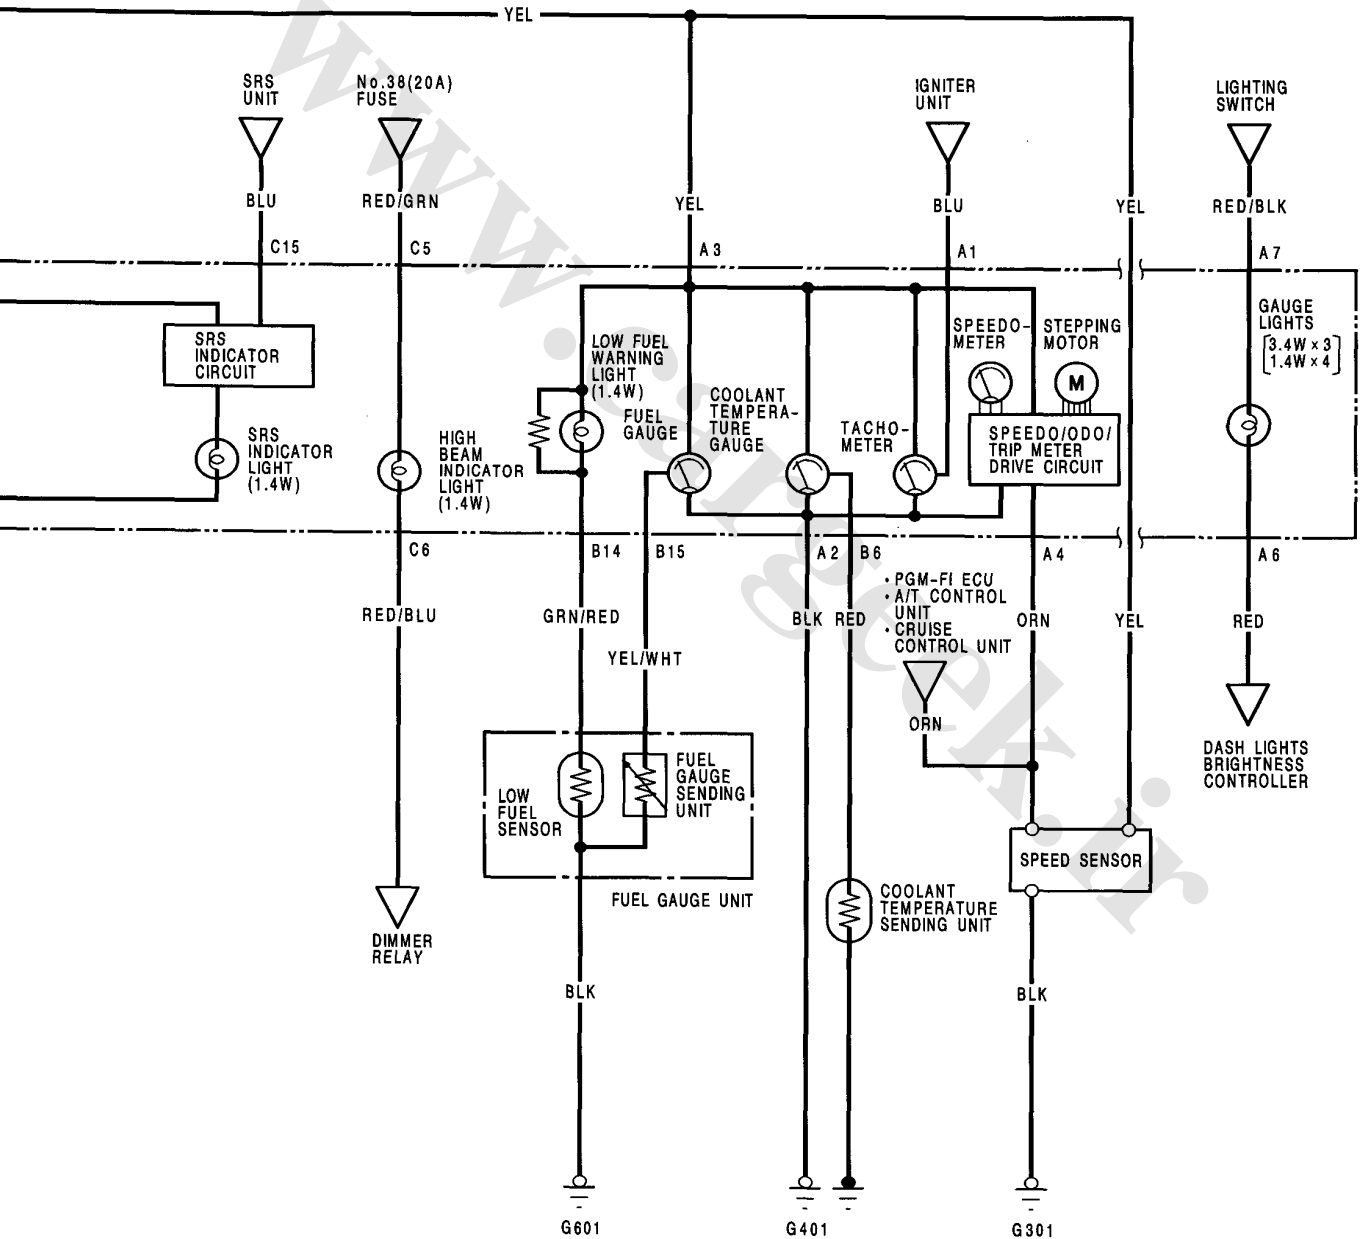


Gauge Assembly






Terminal Locations

CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

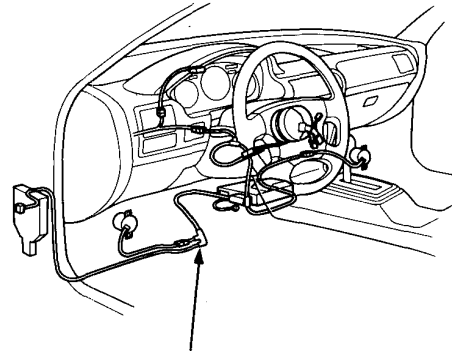


SRS MAIN HARNESS

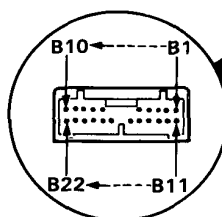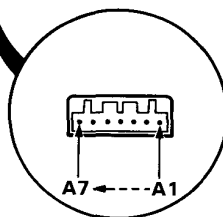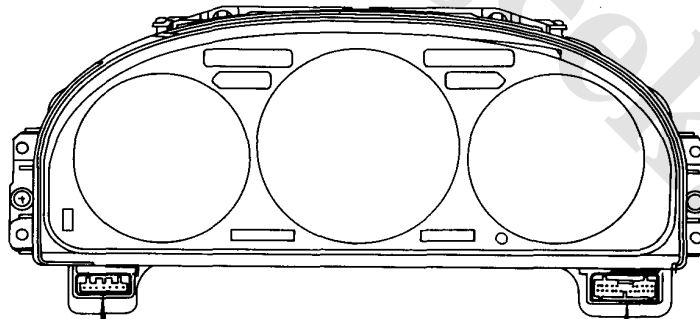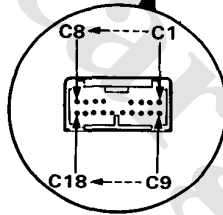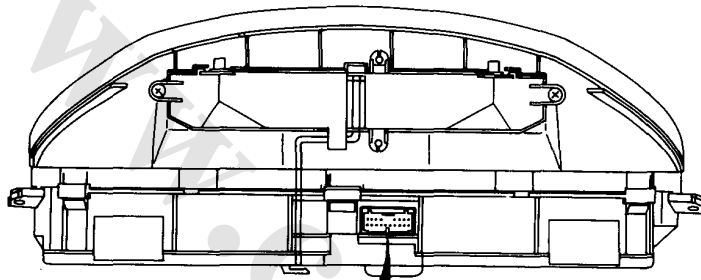





Bulb Locations

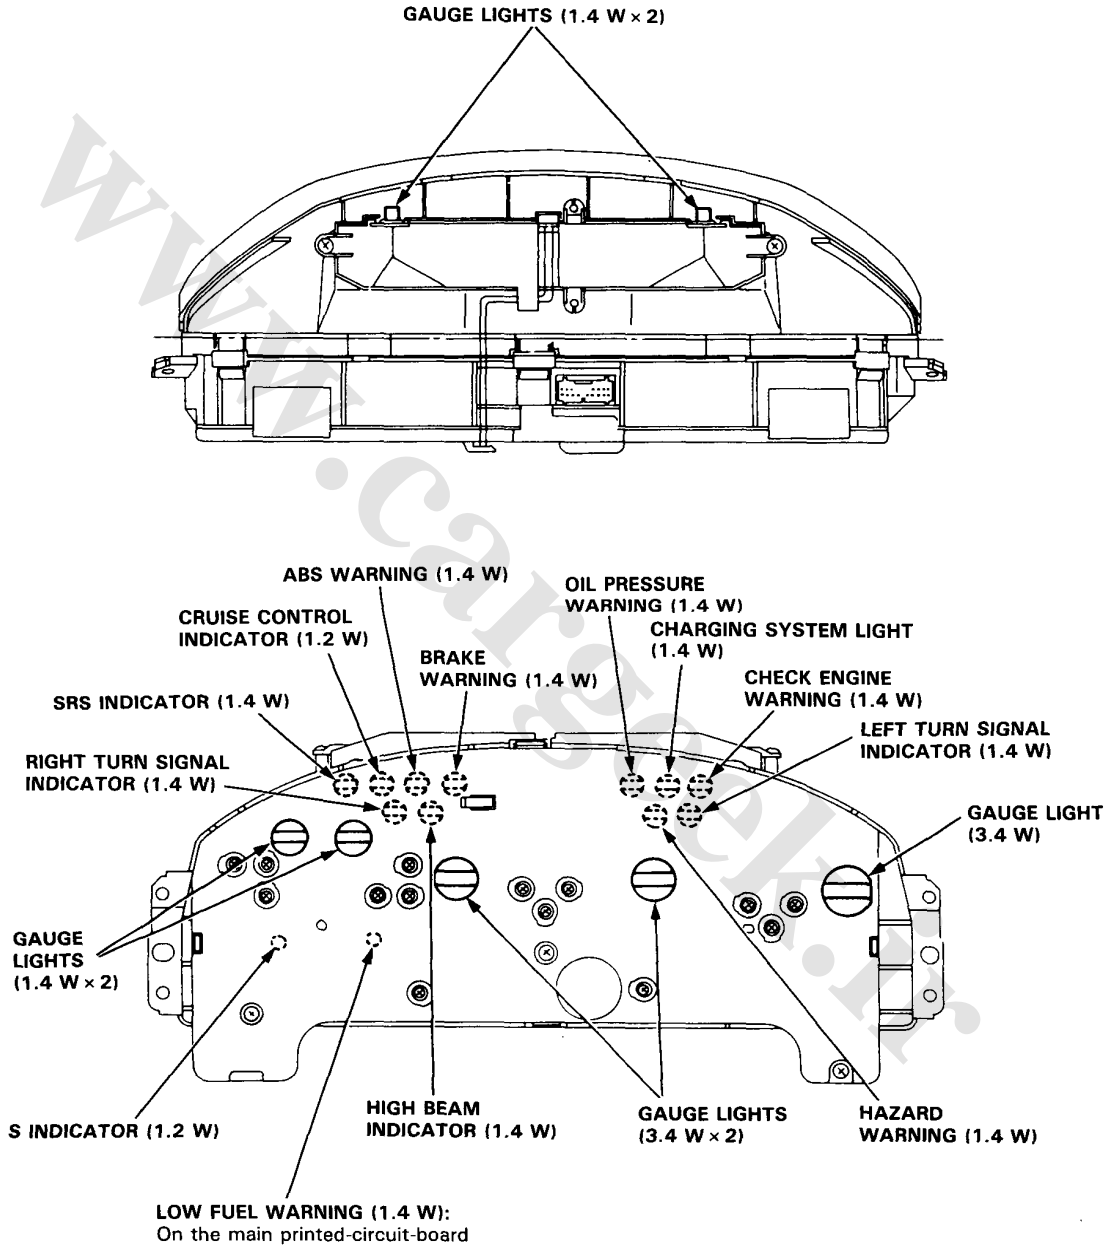

Safety Indicator Circuit Diagram

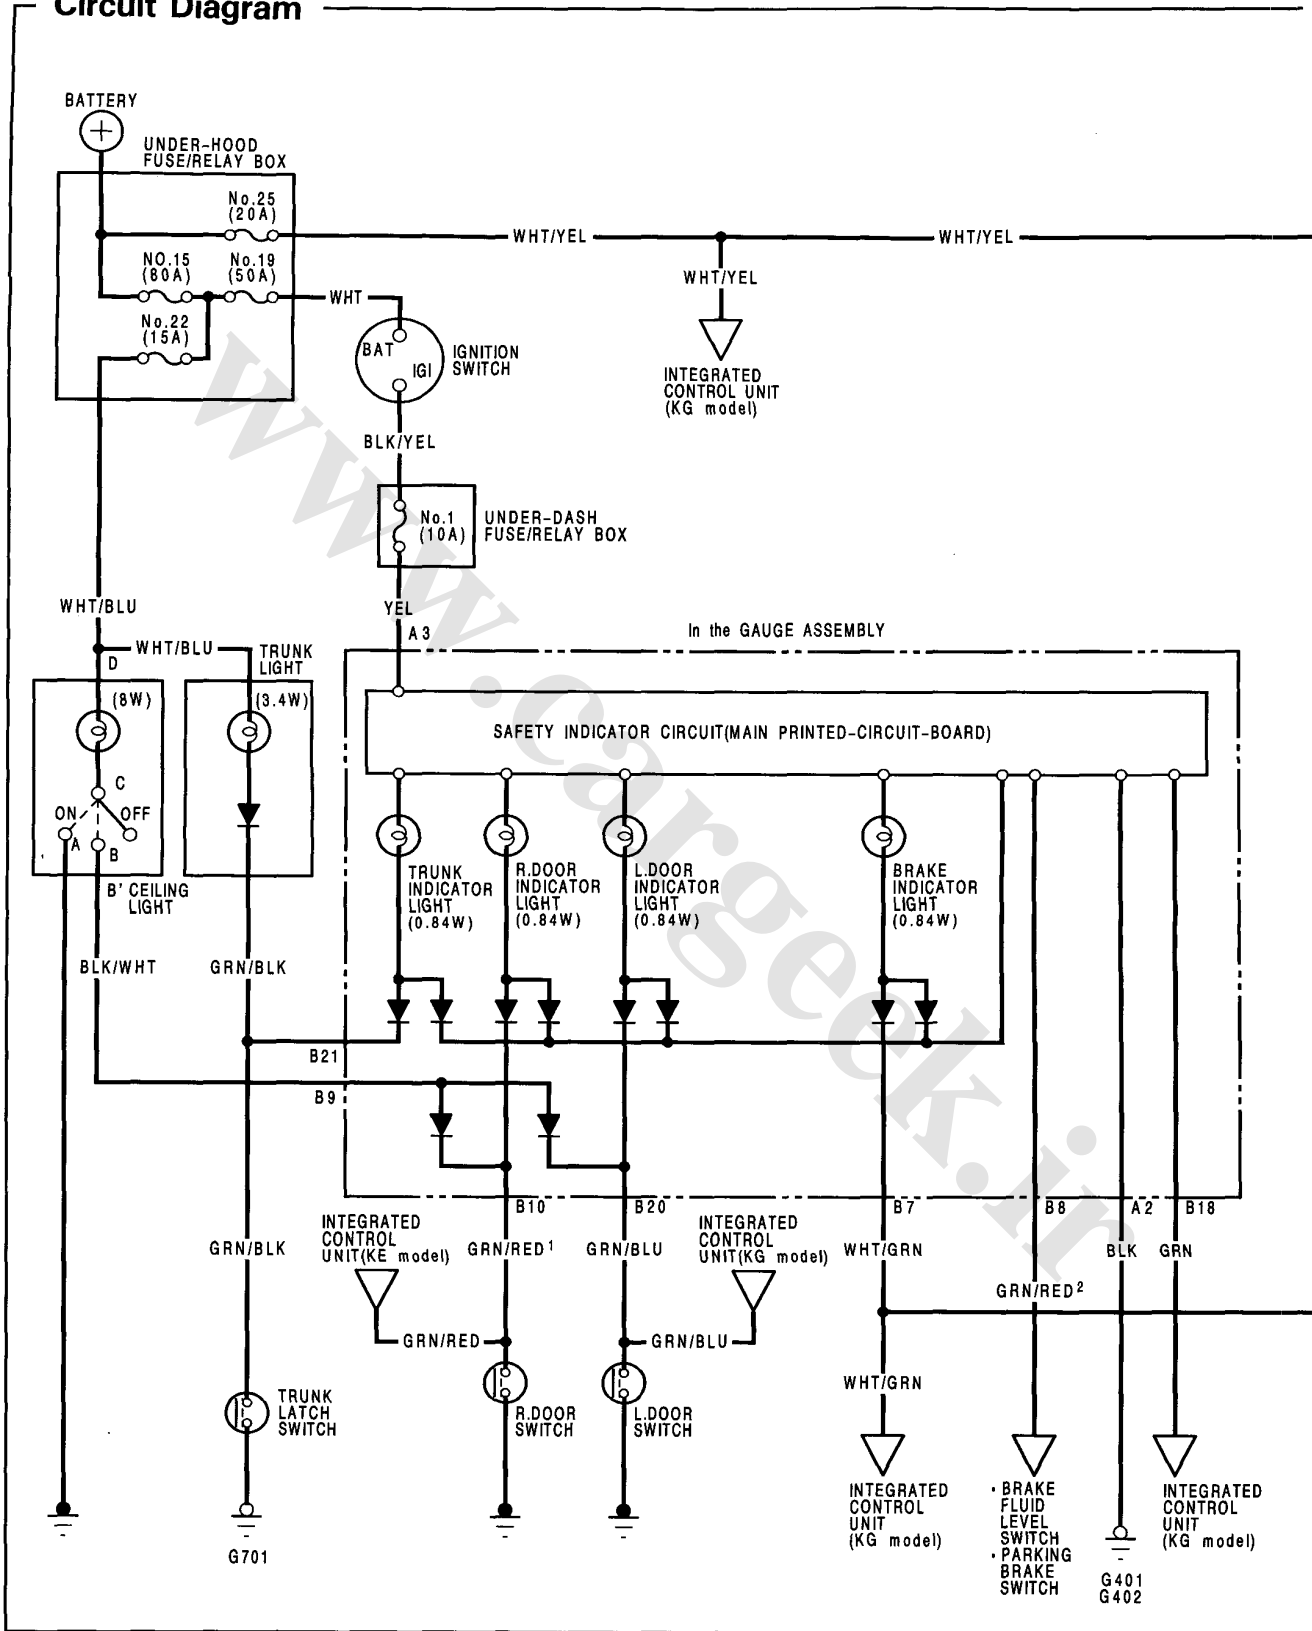

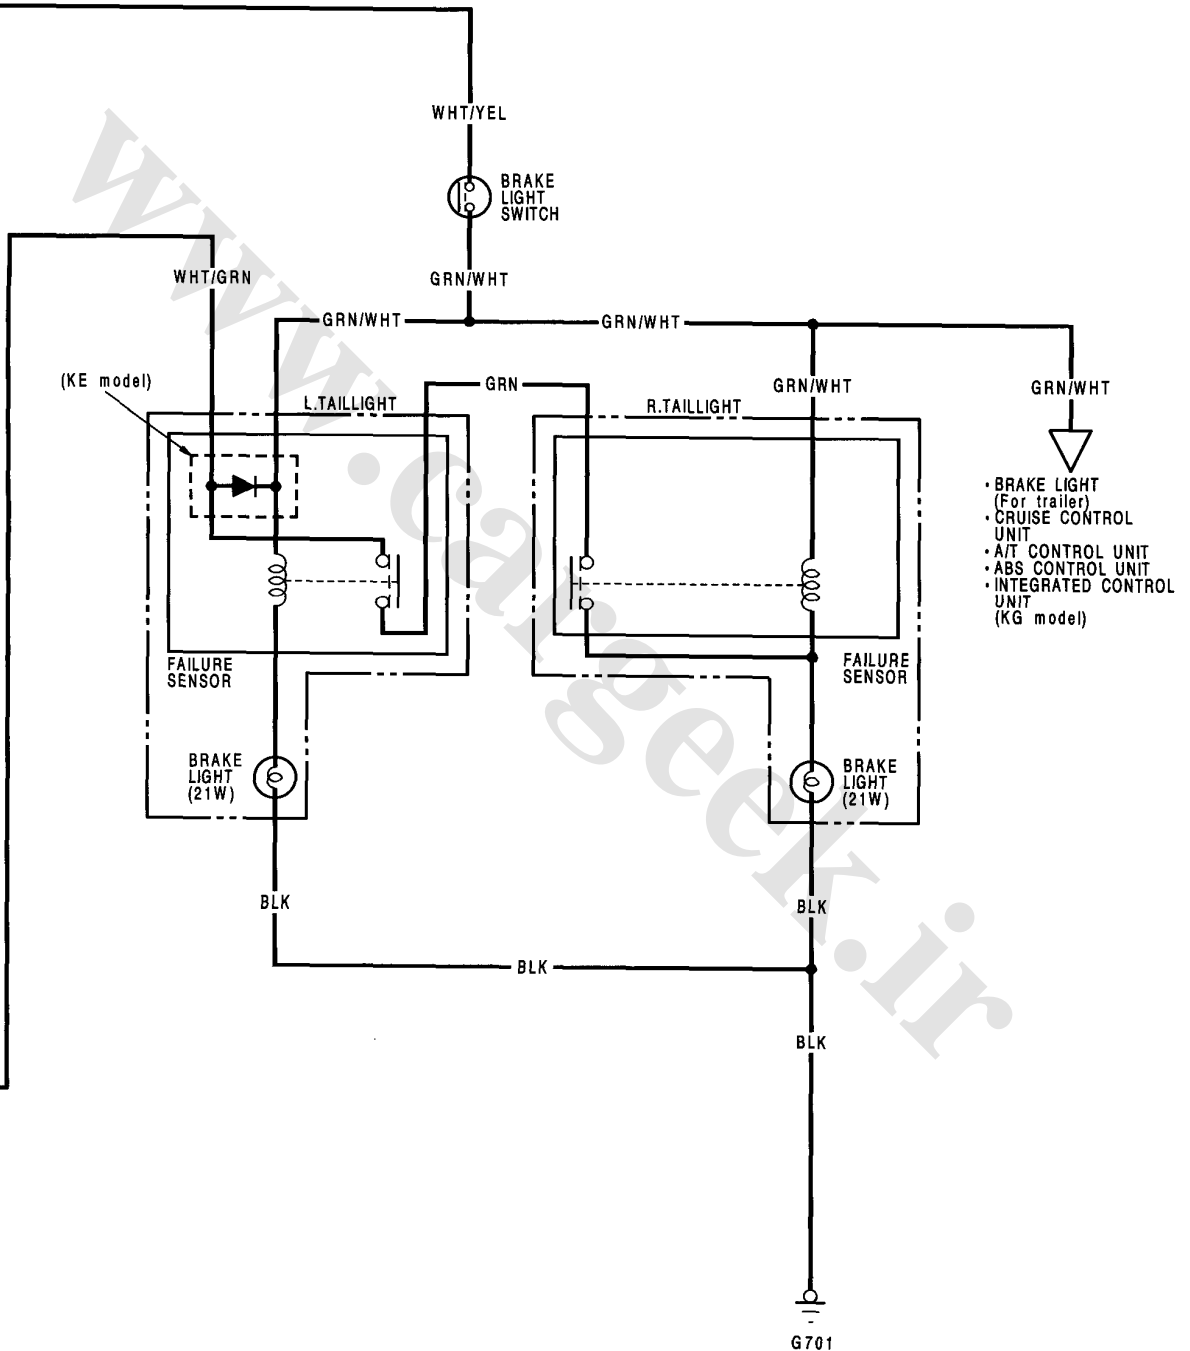


Safety Indicator

Indicator Input Test


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

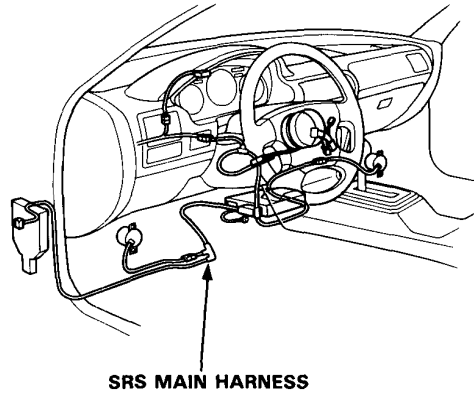

Remove the gauge assembly from the dashboard and disconnect the 7-P, 18-P, and 22-P connectors from it. Make the following input tests at the connector terminals. If all tests prove OK, yet the indicator still fails to work, replace the main printed-circuit-board, speedometer, tachometer, and odo/trip meter.

NOTE: Different wires with the same color have been given a number suffix to distinguish them (for example, GRN/RED¹ and GRN/RED² are not the same).

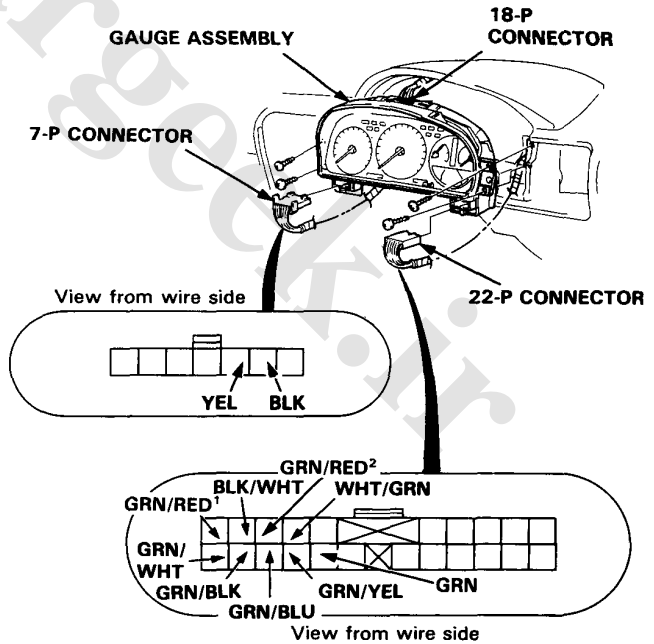



No.	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
1	BLK	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402). An open in the wire.
2	YEL	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 1 (10 A) fuse. An open in the wire.
3	WHT/GRN	Brake pedal pushed.	Check for continuity to ground: There should be continuity with the pedal pushed.	<ul style="list-style-type: none"> Blown No. 25 (20 A) fuse. Faulty brake light switch. Blown brake light bulbs. Faulty brake light failure sensors. Poor ground (G701). An open in the WHT/GRN or GRN/WHT wire.
4	GRN/BLK	Trunk lid open.	Check for continuity to ground: There should be continuity. NOTE: Before testing, remove No. 22 (15 A) fuse.	<ul style="list-style-type: none"> Faulty trunk latch switch. An open in the wire. Poor ground (G701).
5	GRN/RED ¹	Right door open.	Check for continuity to ground: There should be continuity. NOTE: Before testing, remove the No. 22 (15 A) fuse.	<ul style="list-style-type: none"> An open in the wire. Faulty door switch. Poor installation of the switch.
	GRN/BLU	Left door open.		
6	BLK/WHT	Ceiling light switch in MIDDLE position.	Attach to ground: Ceiling light should come on.	<ul style="list-style-type: none"> Blown No. 22 (15 A) fuse. Faulty ceiling light. An open in the WHT/BLU or BLK/WHT wire.
7	GRN/RED ²	Ignition switch ON.	Attach to ground: Brake light warning in the safety indicator should come on.	<ul style="list-style-type: none"> Faulty safety indicator circuit. Blown bulb. An open in the wire.


KG model only:

8	GRN	Brake pedal released, ignition switch turned from OFF to ON.	Check for continuity in both directions between the GRN and BLK terminals: There should be continuity in only one direction as the ignition switch is turned ON, then no continuity in both directions with the brake pedal pushed.	<ul style="list-style-type: none"> Faulty brake light circuit failure sensor.
---	-----	--	---	--



Shift Lever Position Indicator

Circuit Diagram

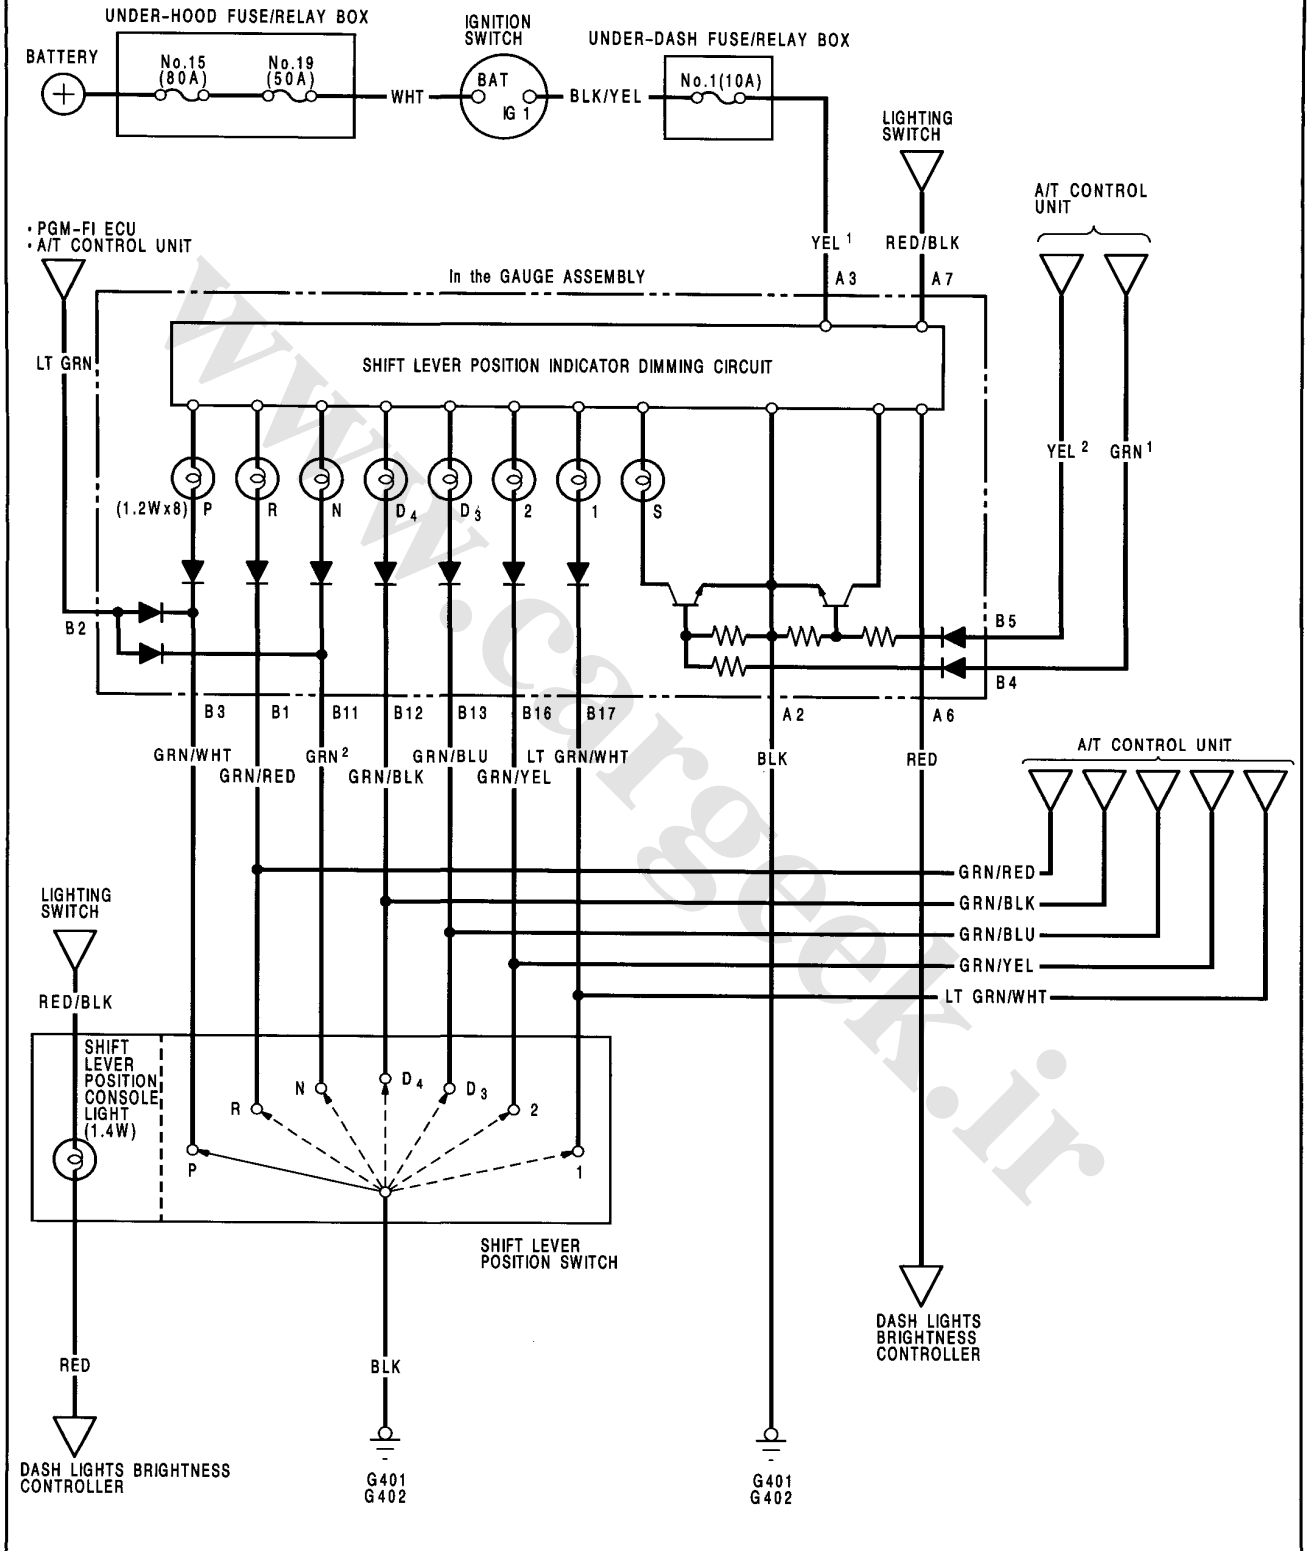


Shift Lever Position Indicator

Indicator Input Test


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

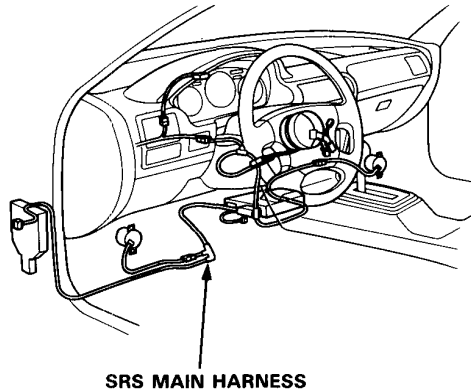

Remove the gauge assembly from the dashboard and disconnect the 7-P, 18-P, and 22-P connectors from it. Make the following input tests at the connector terminals. If all tests prove OK, yet the indicator still fails to work, replace the main printed-circuit-panel, speedometer, tachometer, and odo/trip meter.

NOTE: Different wires with the same color have been given a number suffix to distinguish them (for example, GRN¹ and GRN² are not the same).

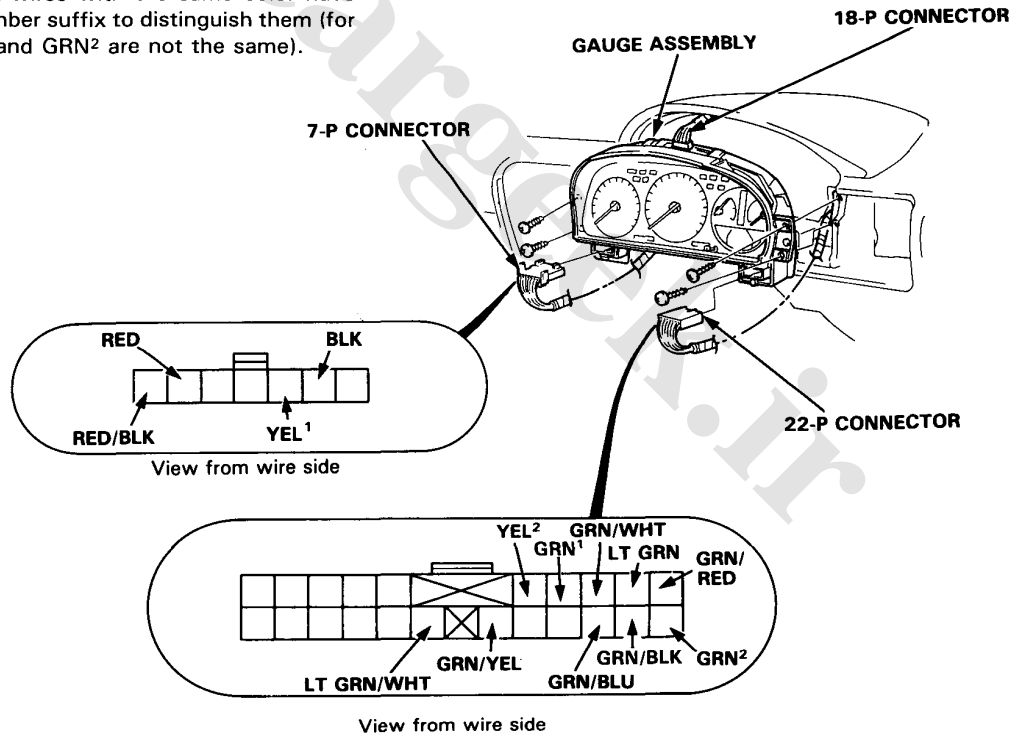




No.	Wire	Test condition	Test: Desired result	Possible cause if result is not obtained
1	BLK	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402). • An open in the wire.
2	YEL ¹	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 1 (10 A) fuse. • An open in the wire.
3	GRN/WHT	Shift lever in position P.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Faulty shift lever position switch. • Poor ground (G401, G402). • An open in the wire.
	GRN/RED	Shift lever in position R.		
	GRN ²	Shift lever in position N.		
	GRN/BLK	Shift lever in position D ₄		
	GRN/BLU	Shift lever in position D ₃		
	GRN/YEL	Shift lever in position 2.		
	LT GRN/WHT	Shift lever in position 1.		
4	RED/BLK and RED	Lighting switch ON and dash lights brightness control dial on full bright.	Check for voltage between the RED/BLK and RED terminals: There should be battery voltage.	<ul style="list-style-type: none"> • Faulty dash lights brightness control system. • An open in the wire.
5	GRN ¹	Ignition switch ON, shift lever in position D ₃ or D ₄ , and S switch ON.	Check for voltage to ground: There should be about 5 V.	<ul style="list-style-type: none"> • Faulty S switch. • Faulty shift lever position switch. • Faulty A/T control system. • An open in the wire.
6	YEL ²	Ignition switch ON, shift lever in position D ₃ or D ₄ , and S switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Faulty S switch. • Faulty shift lever position switch. • Faulty A/T control system. • An open in the wire.
7	LT GRN	Ignition switch ON.	Check for voltage to ground: There should be about 5 V.	<ul style="list-style-type: none"> • Faulty PGM-FI ECU. • An open in the wire.

Lighting System

Lighting Switch Replacement

CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

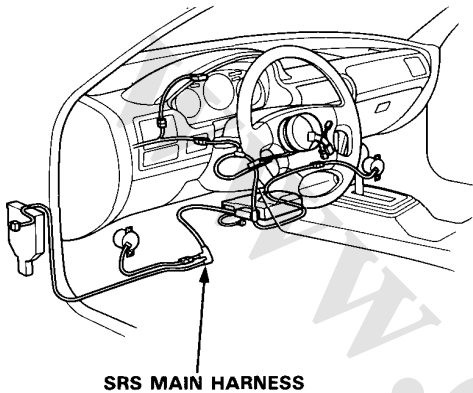


NOTE: LHD type is shown, RHD type is similar.


1. Remove the dashboard lower cover.



2. Remove the steering column covers.

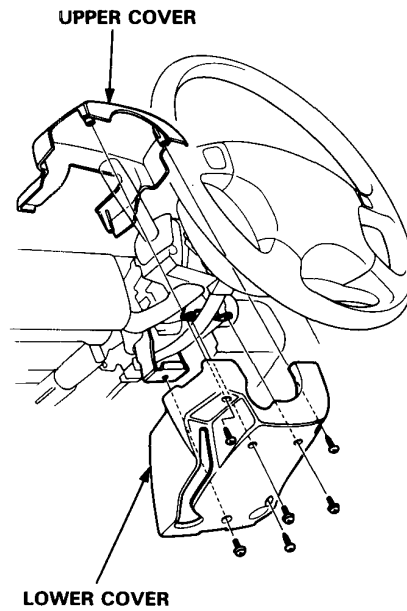

3. Disconnect the 14-P connector from the switch, then remove the two screws and the switch.

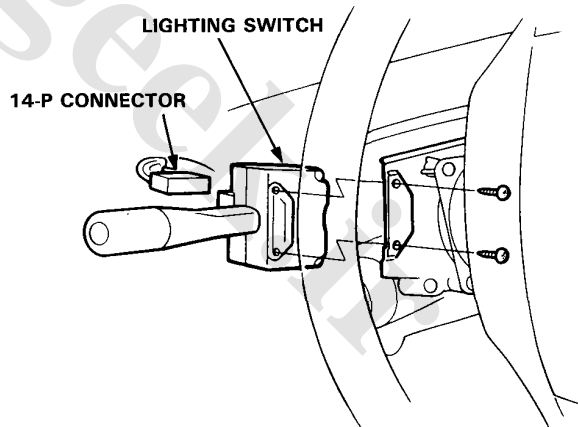




Horns

Component Location Index



CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

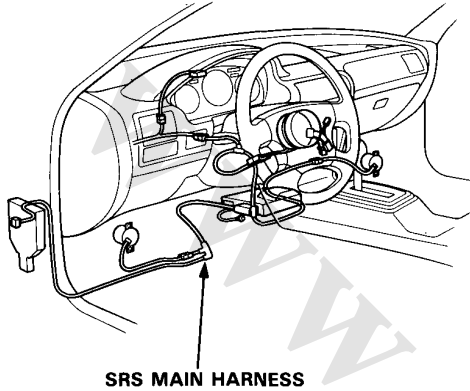

NOTE: RHD type is symmetrical to LHD type.


HORN SWITCHES
Test, pages 16-61 and 62.

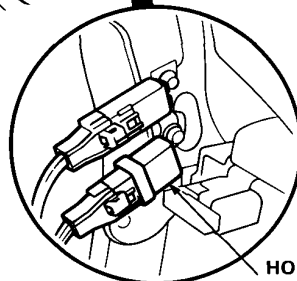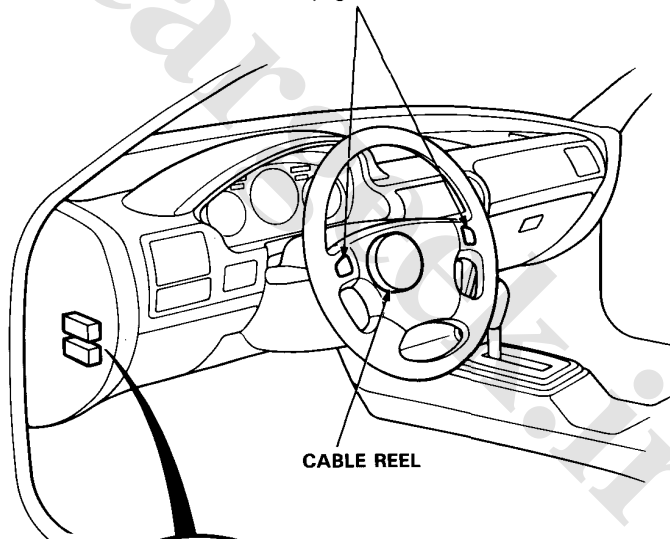

HORN RELAY
Test, page 16-63

Horns

Circuit Diagram

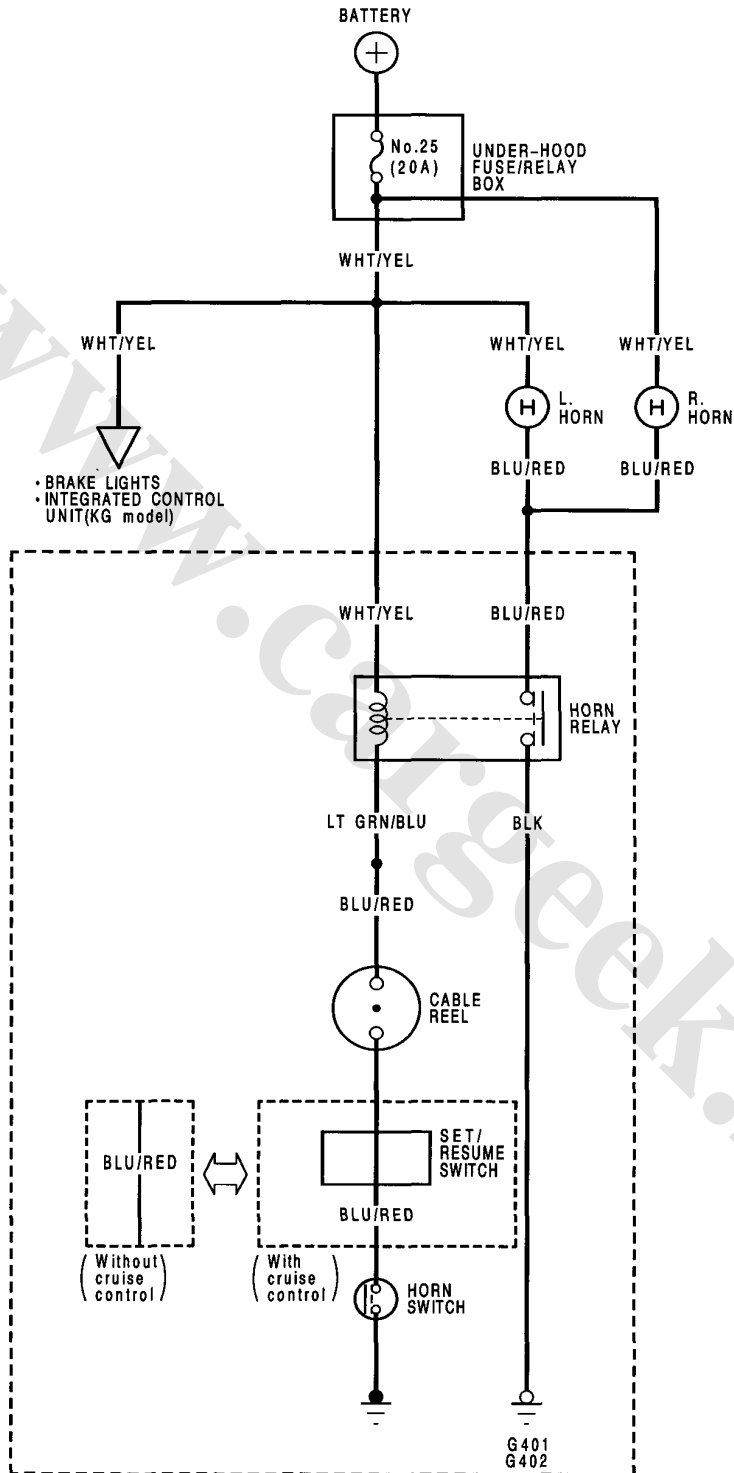





Switch Test

CAUTION:


- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

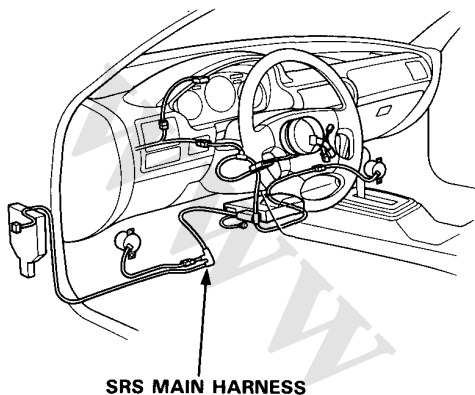

1. Disconnect the battery negative cable, then disconnect the positive cable.
2. Make sure the wheels are turned straight ahead.
3. Remove the dashboard lower cover.
4. Install the short connector on the airbag.

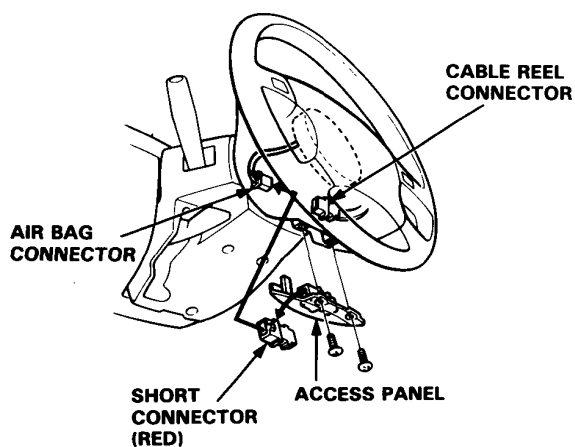

5. Disconnect the cable reel harness 6-P connector from the SRS main harness, then connect Test Harness C only to the cable reel harness 6-P connector.

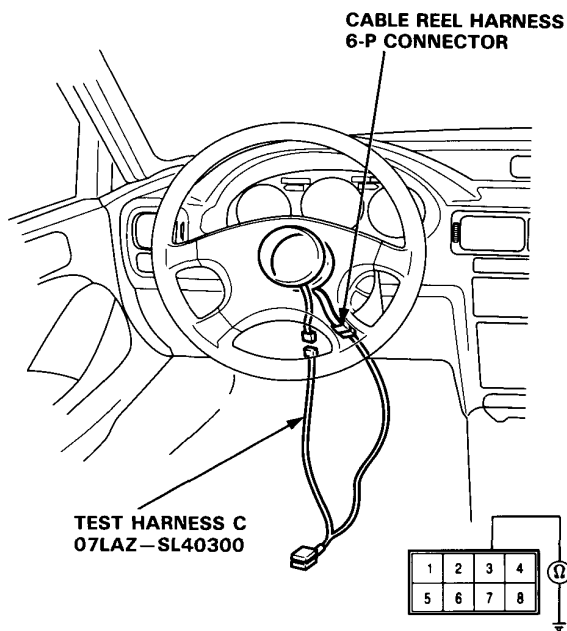


6. Check for continuity between the No. 3 terminal and body ground with the horn switch pressed. There should be continuity.
 - If there is continuity, the horn switch is OK.
 - If there is no continuity, go to step 7.

(cont'd)


Horns

Switch Test (cont'd)


7. Remove the two TORX® bolts using a TORX® T30 bit, then remove the airbag assembly.

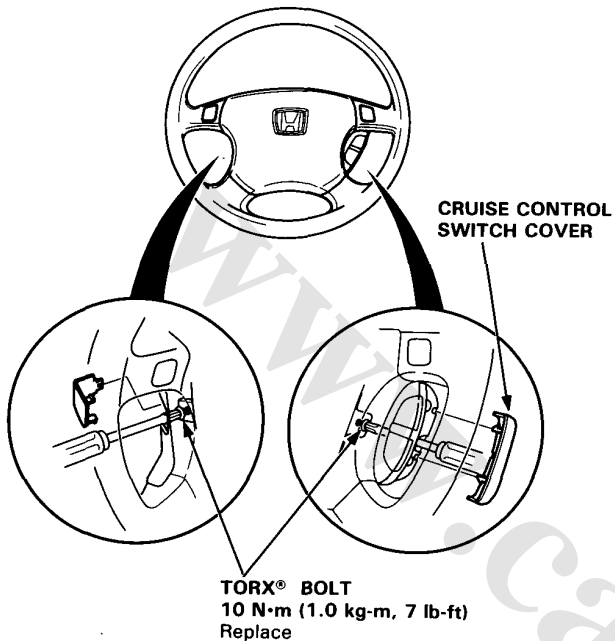

8. Check for continuity between the horn positive terminal and the steering shaft with the horn switch pressed. There should be no continuity.

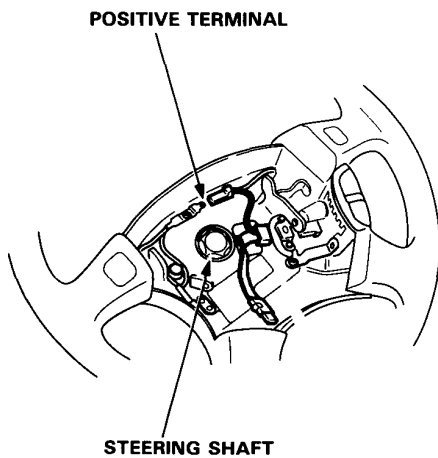

- If there is continuity, replace the cable reel.
- If there is no continuity, remove the nut and the steering wheel. Remove the four screws, then remove the steering wheel cover. Replace the horn switch.



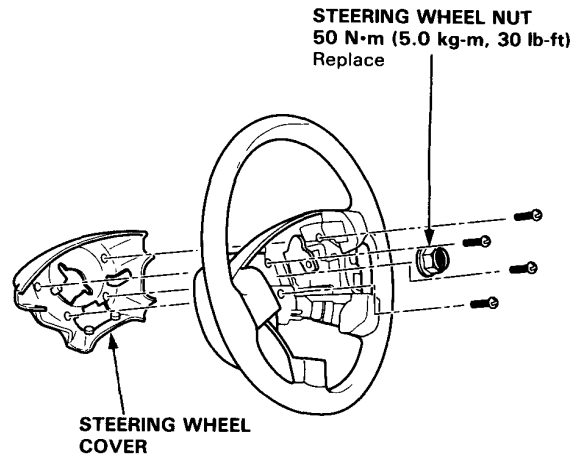


9. Install the steering wheel.




Horn Relay Test


1. There should be continuity between the A and B terminals when power and ground are connected to the C and D terminals.
There should be no continuity when power is disconnected.

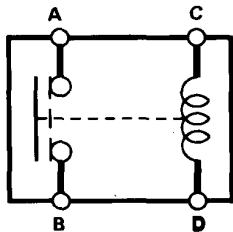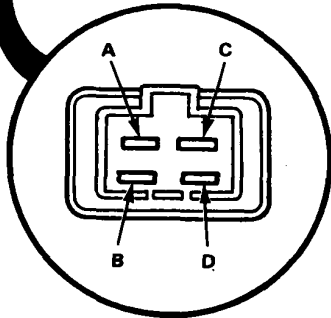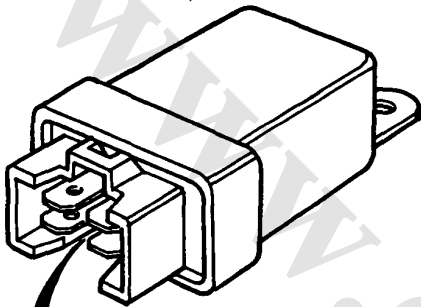


Power Door Locks

Component Location Index

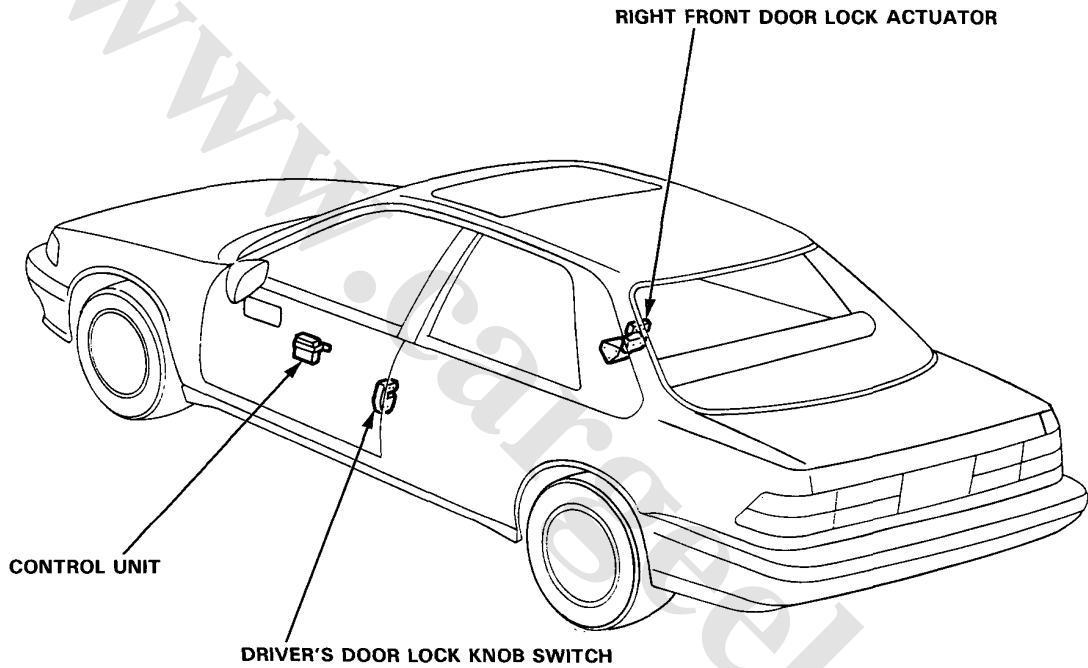




Circuit Diagram

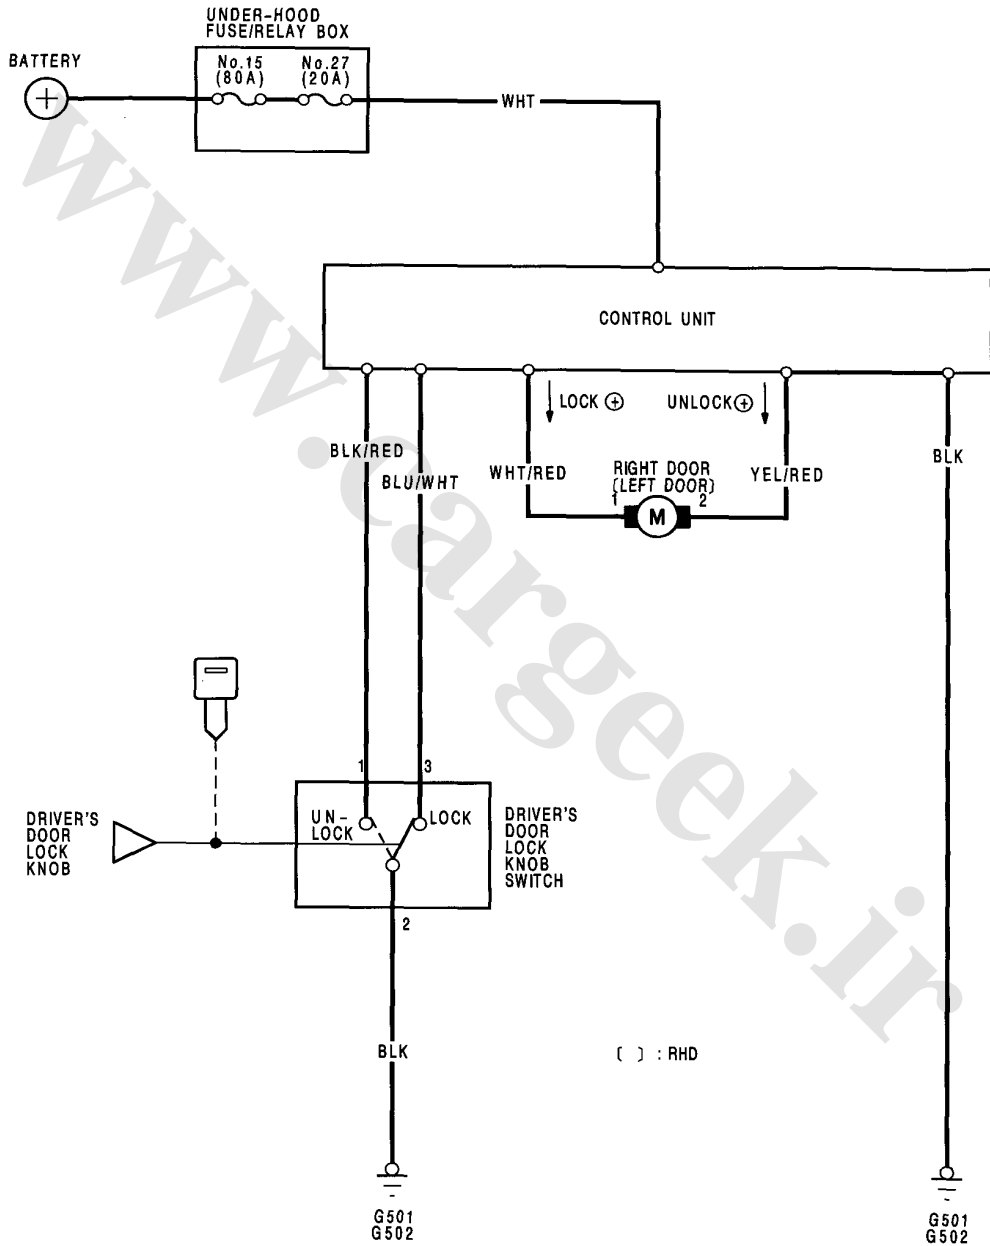



Power Window

Component Location Index

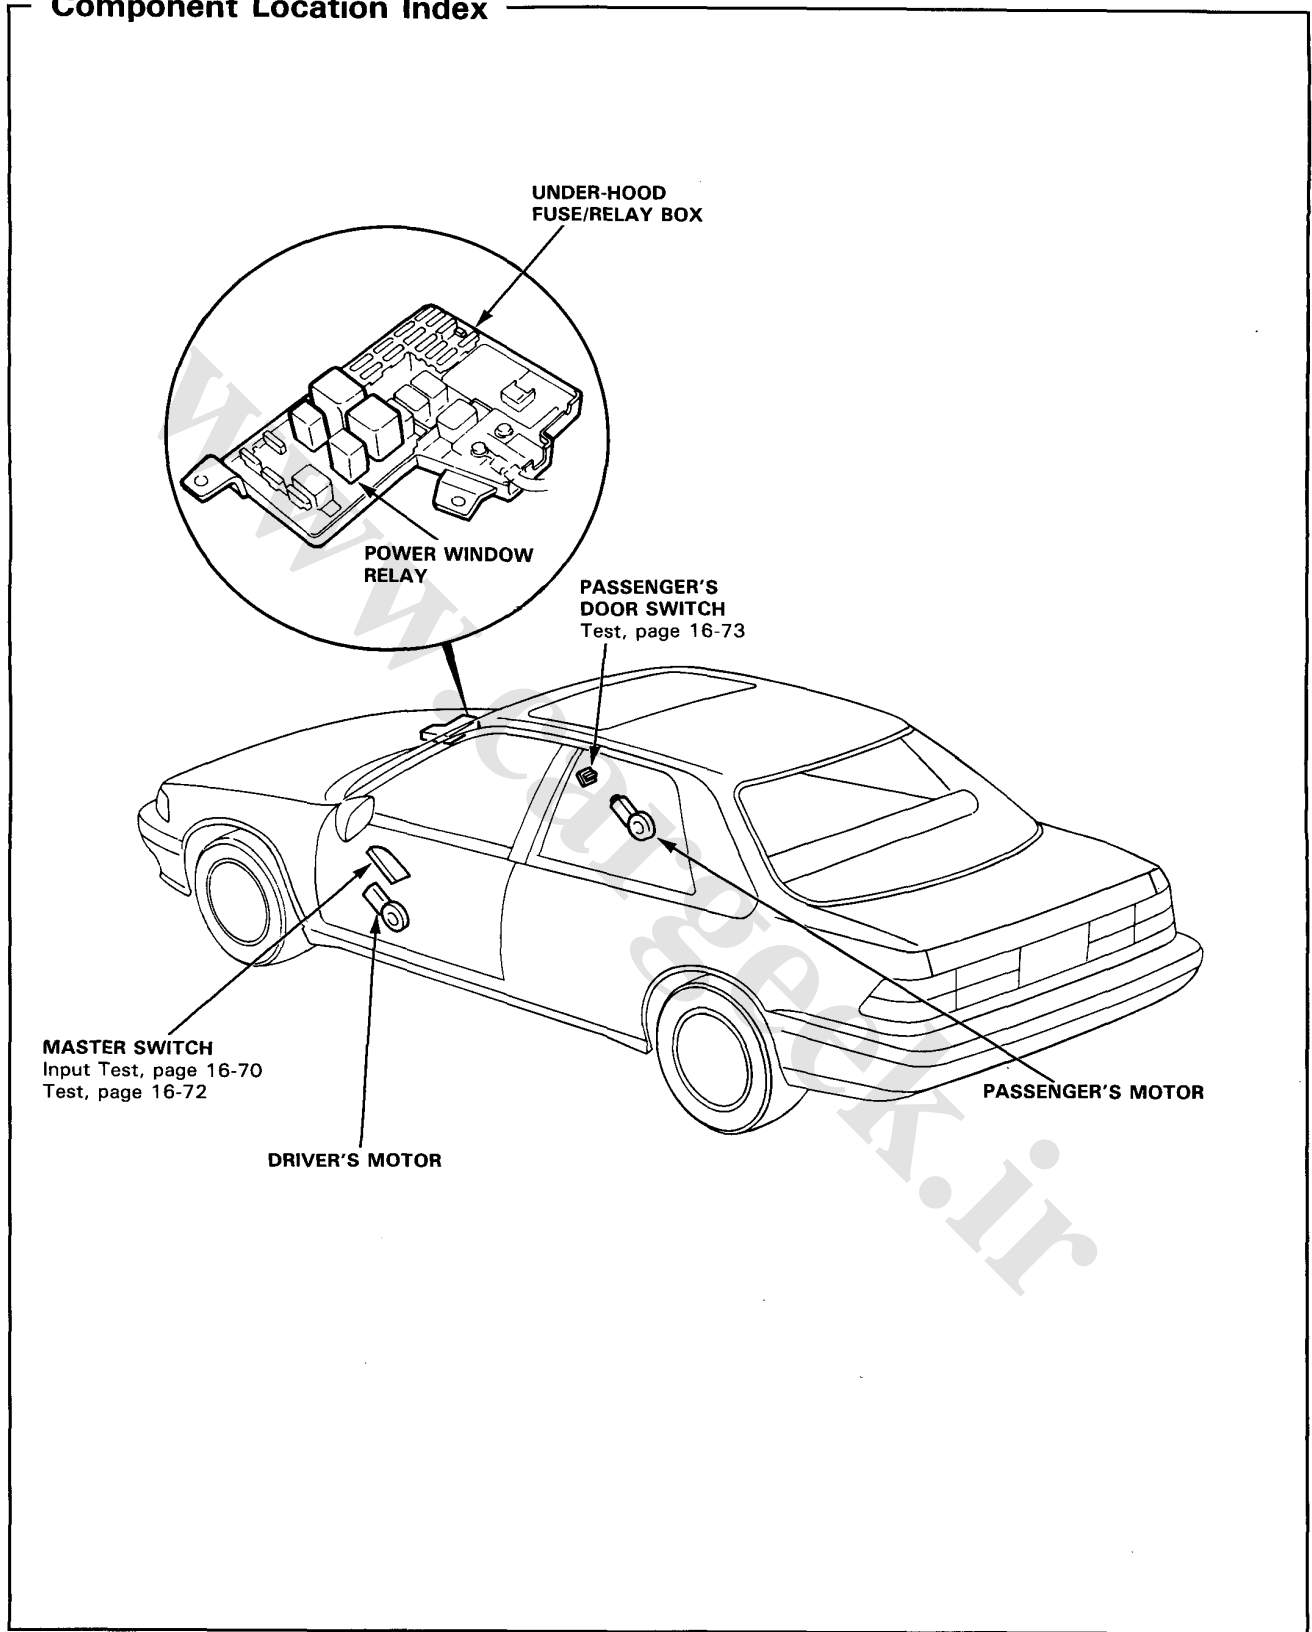


Power Windows

Circuit Diagram

NOTE:

- Different wires with the same color have been given a number suffix to distinguish them (BLK¹ and BLK² are not the same).
- "DN" in the switch circuit denotes DOWN.

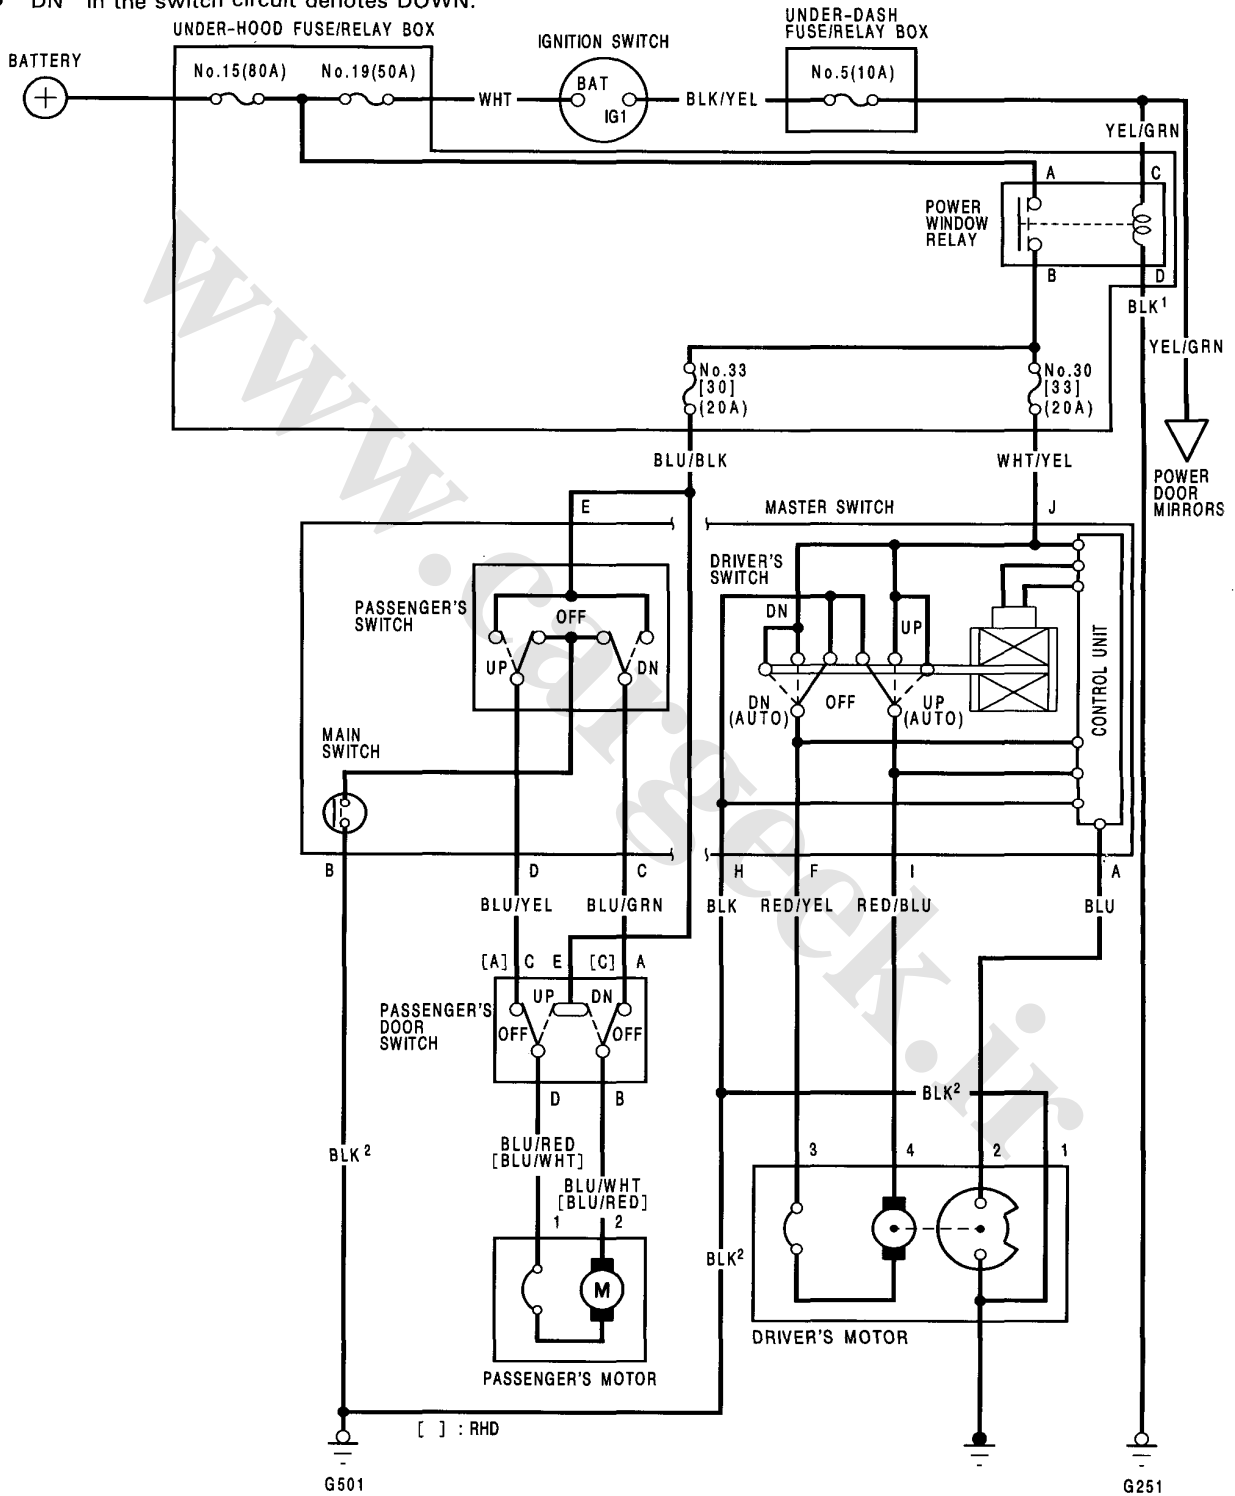



Troubleshooting

NOTE: The numbers in the table show the troubleshooting sequence.

Symptom	Item to be inspected		In the under-hood fuse/relay box		Master switch	Passenger's door switch	Driver's motor	Pulser (In driver's motor)	Passenger's motor	Window regulator	Driver's switch input	Poor ground	Open circuit in wires, loose or disconnected terminals.
	Blown No. 5 (10 A) fuse (In the under-dash fuse/relay box)	Power window relay	Blown No. 30 [33] (20 A) fuse	Blown No. 33 [30] (20 A) fuse									
All windows do not operate.	1	2										G251 G501	BLK/YEL, YEL/GRN
Driver's window does not operate.			1				2			3	4		WHT/YEL
Driver's window does not operate in AUTO.					1			2			3		BLU
Passenger's window does not operate.				1	2	3			4	5			BLU/BLK

[]: RHD


Power Windows

Master Switch Input Test

NOTE: The control unit is built into the master switch, and only controls the driver's door window operation.

Remove the driver's door panel and disconnect the 10-P connector from the master switch. Make the following input tests at the connector terminals.

NOTE: Recheck the connections between the 10-P connector and the master switch, then reinstall the master switch if all input tests prove OK.

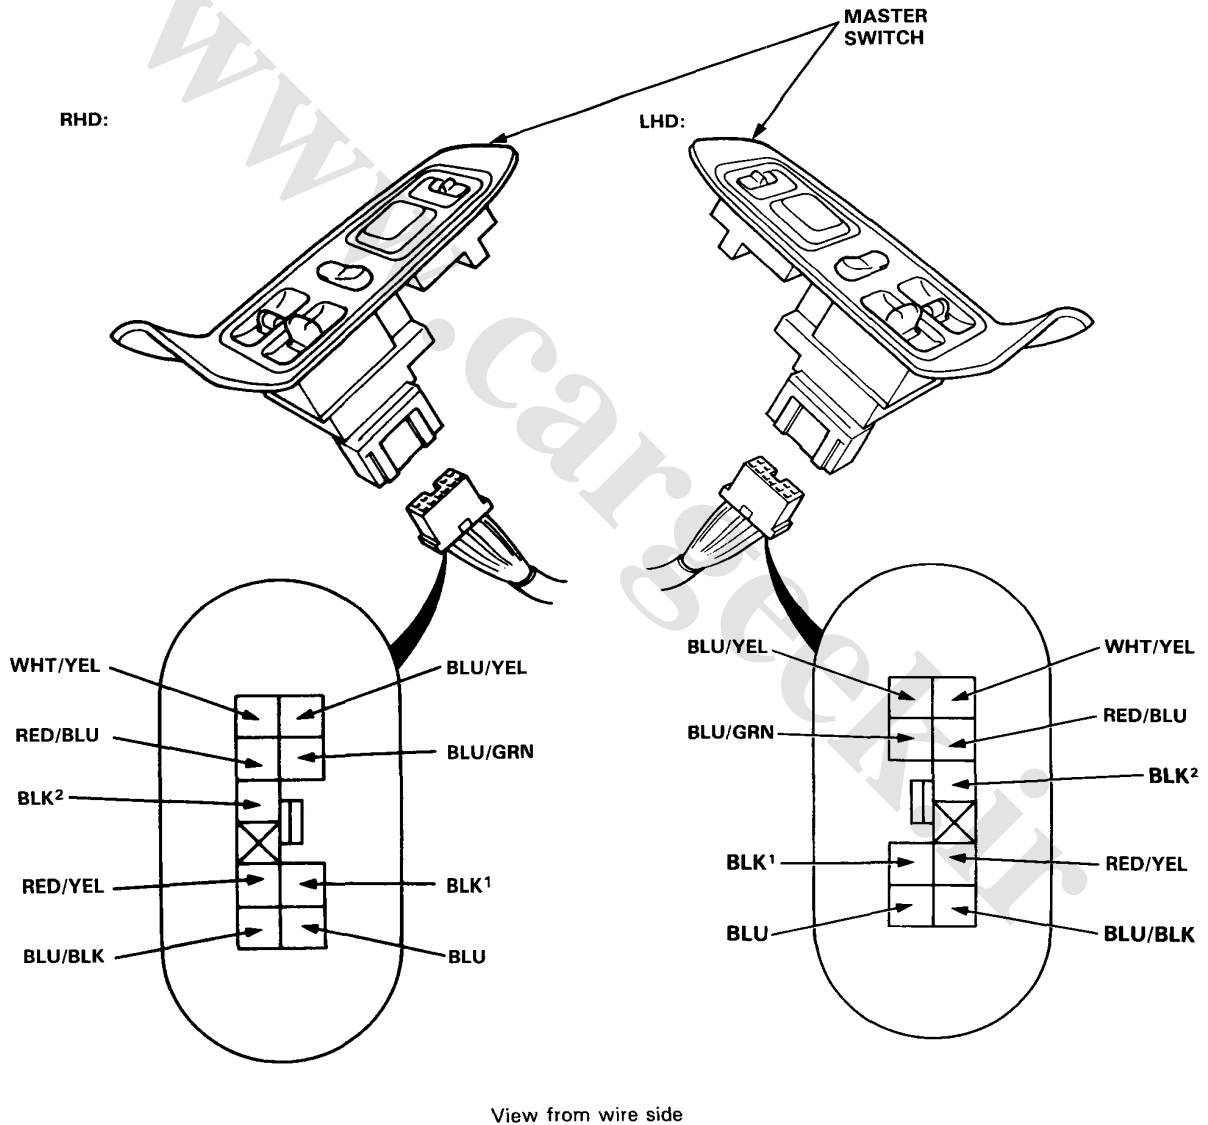




No.	Terminal	Test condition	Test: Desired result	Possible cause if result is not obtained
1	BLK ¹	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G501). • An open in the wire.
2	WHT/YEL	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 30 or 33 (20 A) fuse. • Faulty power window relay. • An open in the wire.
	BLU/BLK			
3	RED/BLU and RED/YEL	Connect the WHT/YEL terminal to the RED/BLU terminal, and the RED/YEL terminal to the BLK terminal, then turn the ignition switch ON.	Check the driver's motor operation: It should run.	<ul style="list-style-type: none"> • Faulty driver's motor. • An open in the wire.
4	BLU/YEL and BLU/GRN	Connect the BLU/BLK terminal to the BLU/YEL terminal, and the BLU/GRN terminal to the BLK terminal, then turn the ignition switch ON.	Check the passengers motor operation: It should run.	<ul style="list-style-type: none"> • Faulty passenger's motor. • Faulty passenger's door switch. • An open in the wire.
5	BLU and BLK ²	Connect the WHT/YEL terminal to the RED/YEL terminal, and the BLK terminal to the RED/BLU terminal, then turn the ignition switch ON.	After connecting the BLU and BLK terminals, check for movement of the analog ohmmeter needle: It should move back and forth alternately as the driver's motor runs.	<ul style="list-style-type: none"> • Faulty pulser. • Faulty driver's motor. • An open in the wire.

Power Windows


Master Switch Test

1. Remove the door panel.
2. Remove the master switch from the door panel.
3. Check for continuity between the terminals in each switch position according to the tables.

LHD:

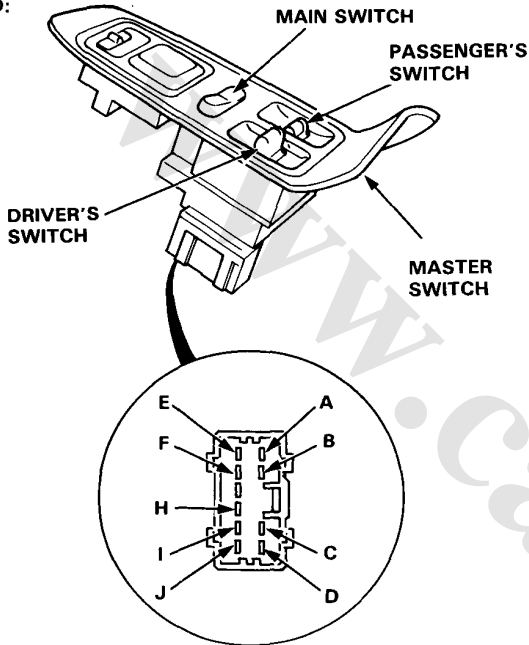

RHD:

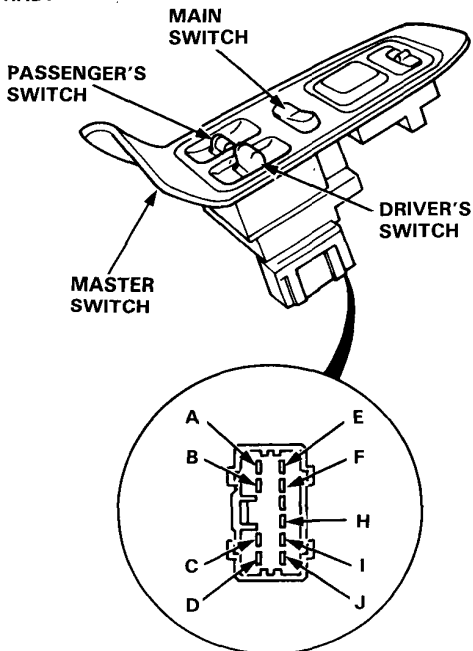

Driver's Switch

Terminal Position	F	H	I	J
OFF	○	○	○	
UP			○	○
UP (AUTO)			○	○
DOWN	○			○
DOWN (AUTO)	○			○

Passenger's Switch


Terminal Position		B	C	D	E
Main switch					
OFF	ON	○	○	○	
	OFF		○	○	
UP	ON			○	○
	OFF			○	○
DOWN	ON		○		○
	OFF		○		○



Passenger's Door Switch Test

1. Remove the switch from the arm rest, then disconnect the 5-P connector.
2. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A [C]	B	C [A]	D	E
UP				○—○	
OFF	○—○		○—○		
DOWN		○—○	○—○	○—○	○—○

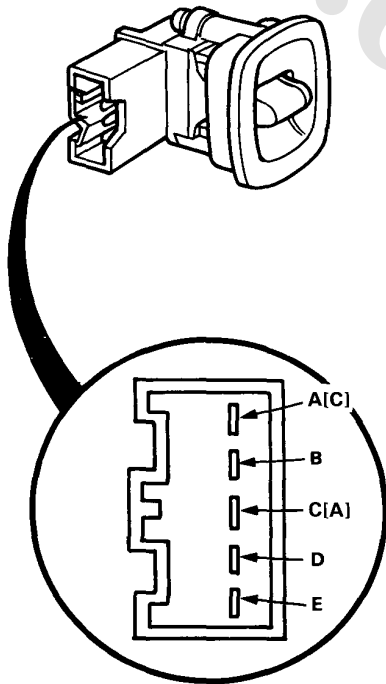


[]: RHD

Wipers/Washer

Wiper/Washer Switch Replacement


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

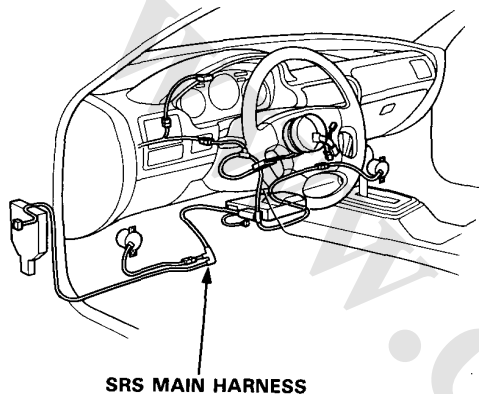


NOTE: LHD type is shown, RHD type is similar.


1. Remove the dashboard lower cover.

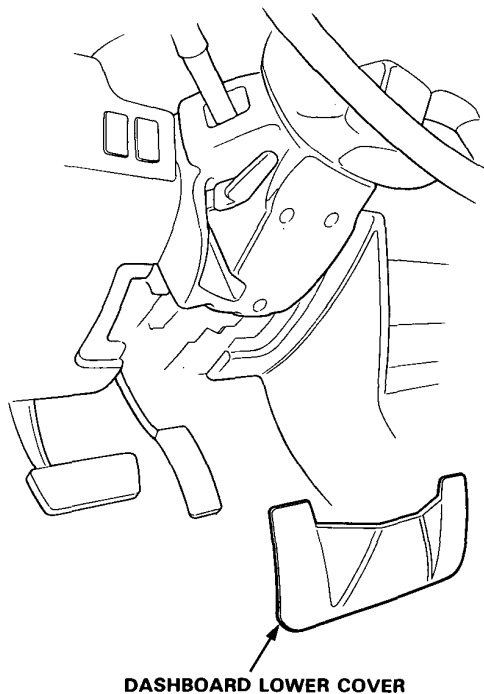

2. Remove the steering column covers.

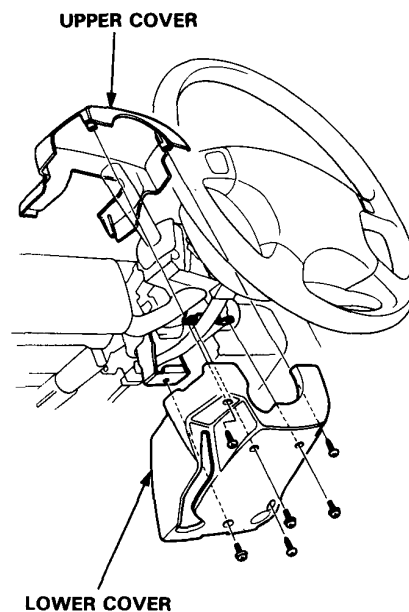

3. Disconnect the 8-P connector from the switch, then remove the two screws and the switch.

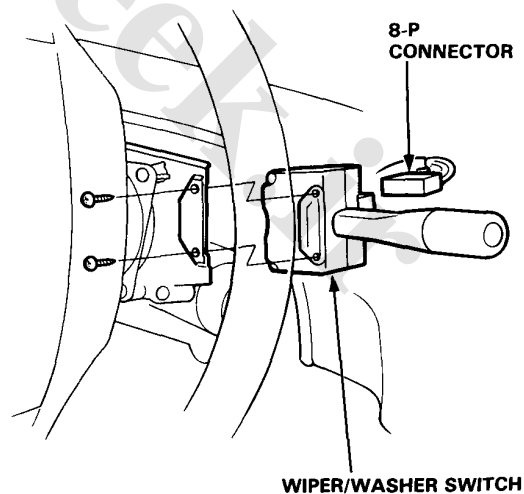




Cruise Control

Component Location Index (KE model)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

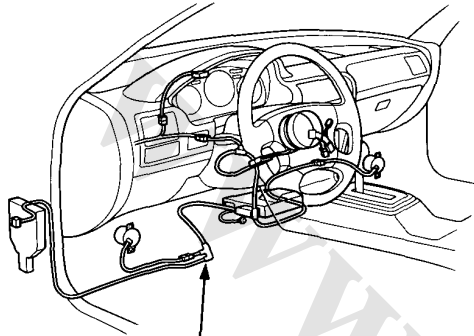

SRS MAIN HARNESS

INDICATOR LIGHT and DIMMING CIRCUIT
(In the gauge assembly)

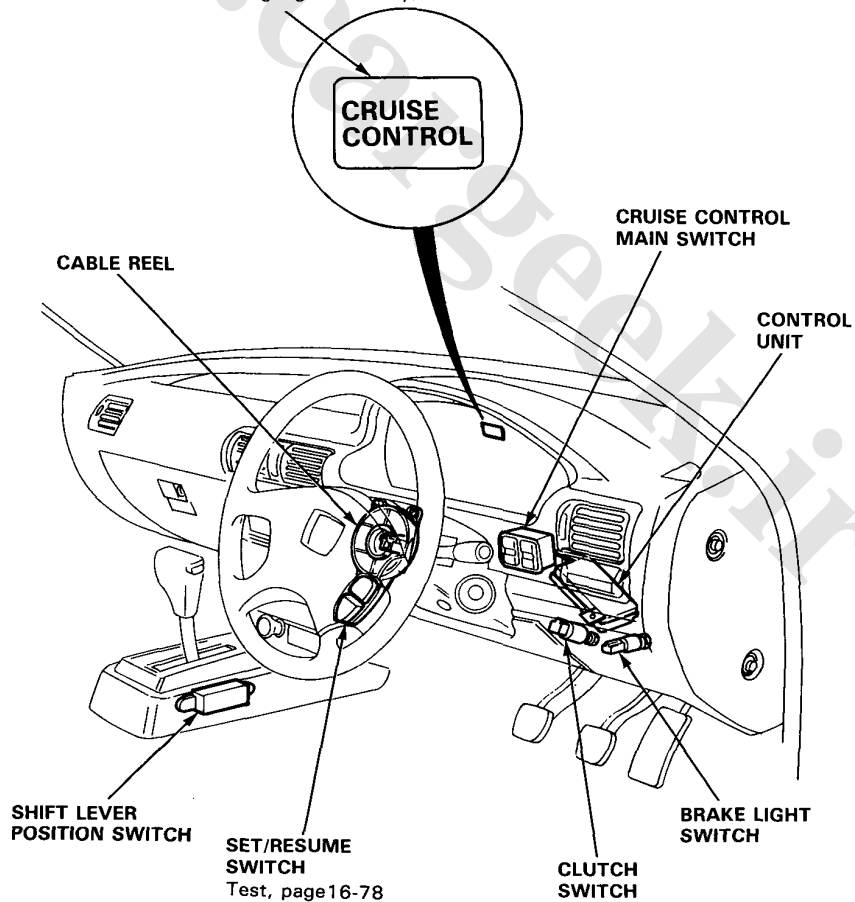

SHIFT LEVER POSITION SWITCH

SET/RESUME SWITCH
Test, page16-78


CLUTCH SWITCH

BRAKE LIGHT SWITCH

(cont'd)


Cruise Control

Component Location Index (KE model) (cont'd)

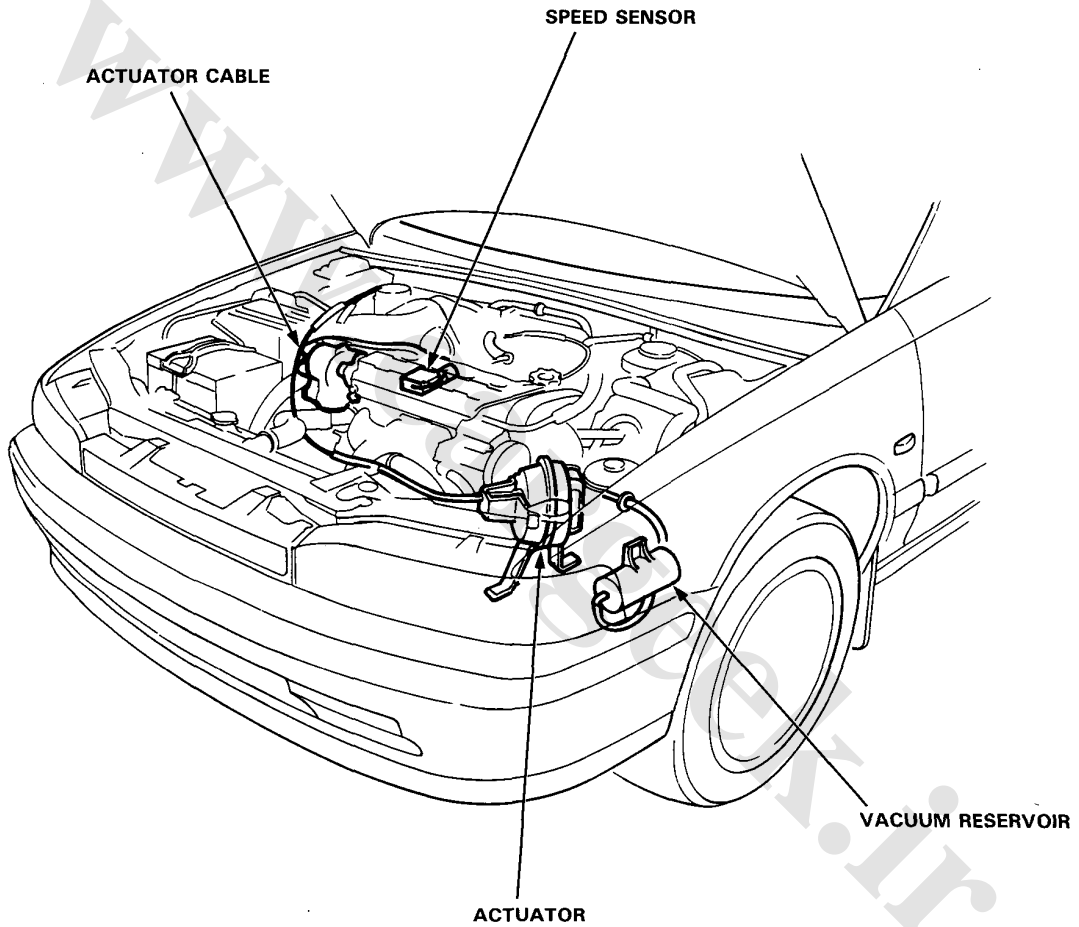



Circuit Diagram

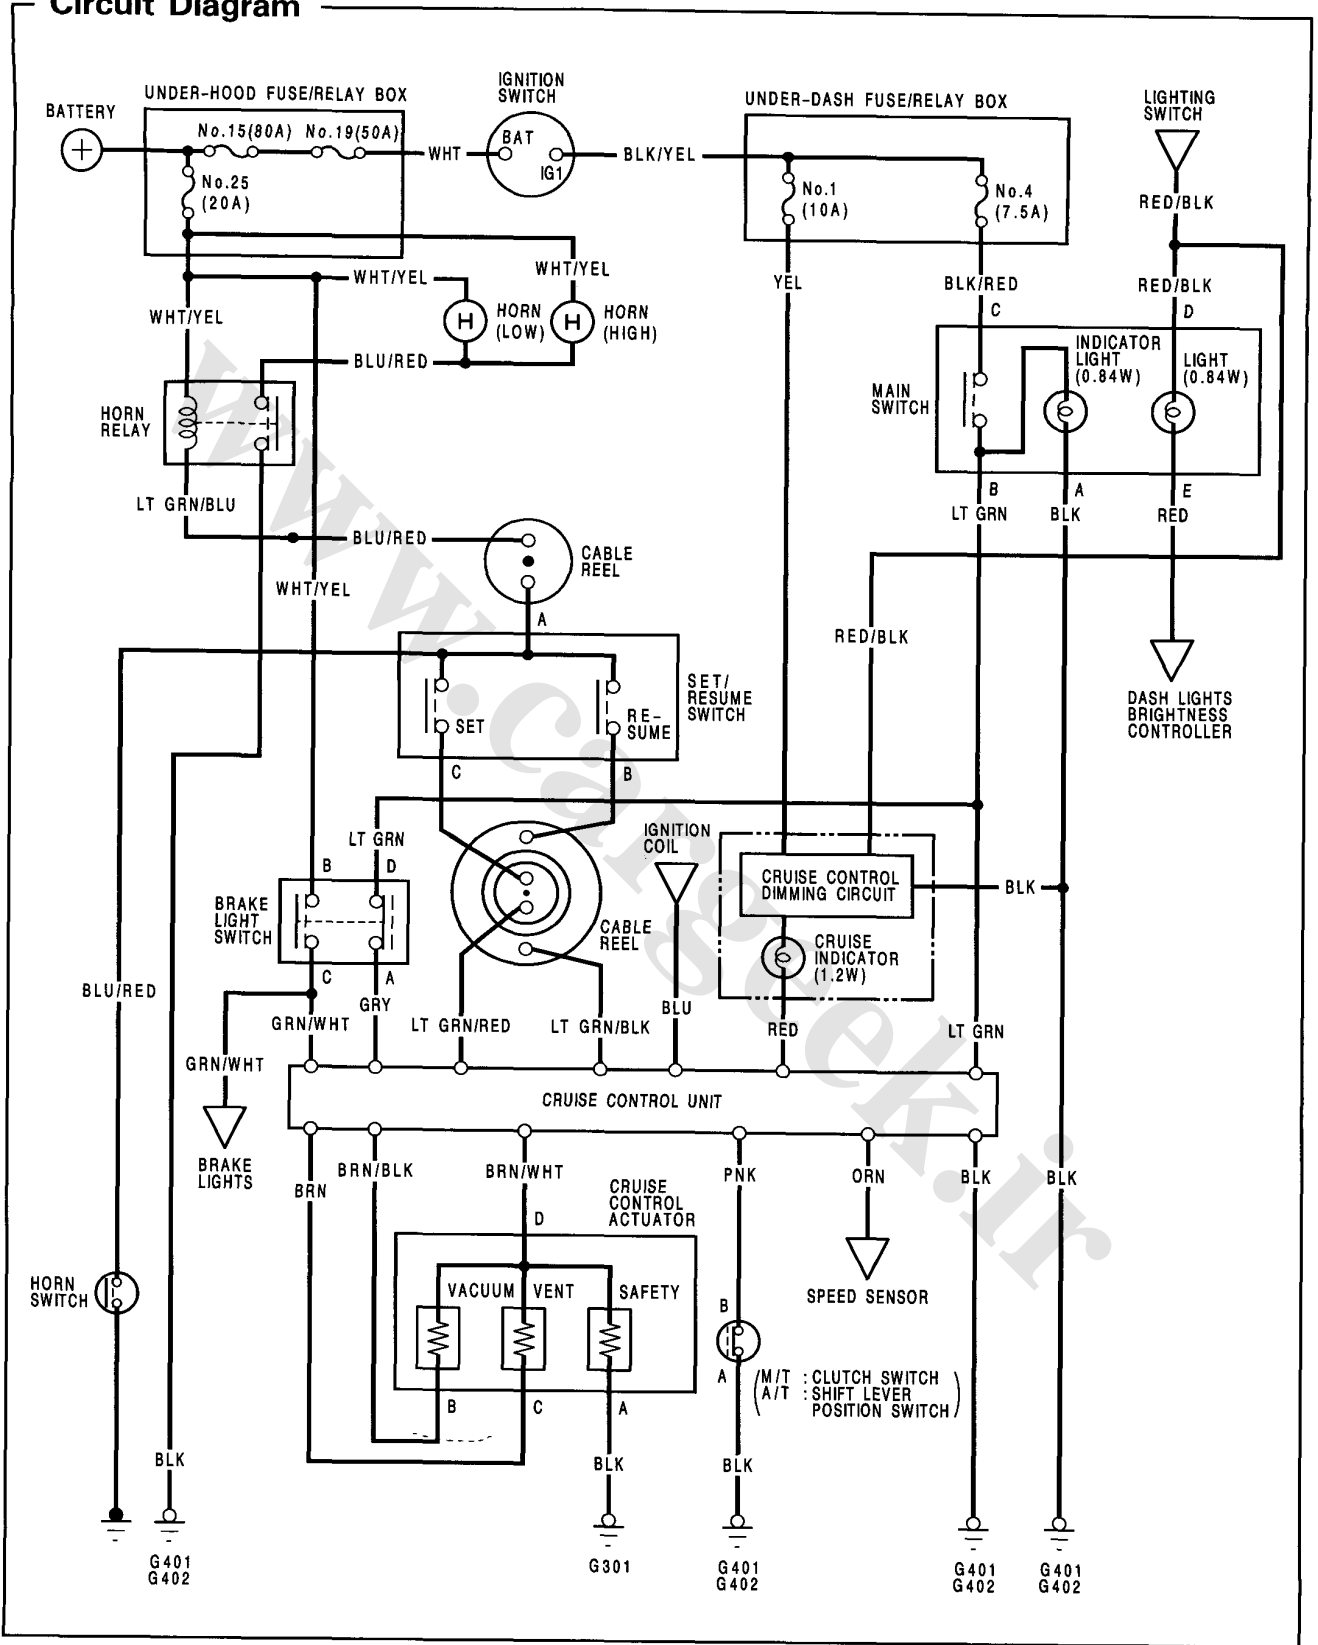


Cruise Control

SET/RESUME Switch Test (KE model)


CAUTION:

- All SRS electrical wiring harnesses are covered with yellow outer insulation.
- Replace the entire affected SRS harness assembly if it has an open circuit or damaged wiring.
- Before disconnecting the SRS wire harness, install the short connector on the airbag.

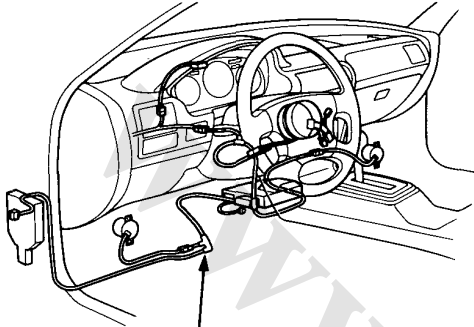

SRS MAIN HARNESS

1. Disconnect the cable reel harness 6-P connector from the SRS main harness, then connect Test Harness C only to the cable reel harness.

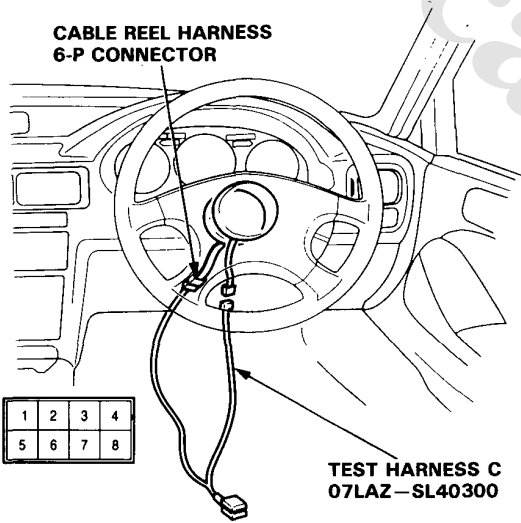

CABLE REEL HARNESS 6-P CONNECTOR

TEST HARNESS C
07LAZ-SL4030




2. Check for continuity between the terminals in each switch position according to the table.


Terminal Position	3 (BLU/RED)	2 (LT GRN/RED)	1 (LT GRN/BLK)
SET (ON)	○	○	
RESUME (ON)	○		○

- If there is continuity, the SET/RESUME switch is OK.
- If there is no continuity, go to step 3.

3. Remove the switch cover from the SET/RESUME switch, then separate the SET/RESUME switch by removing the two screws.

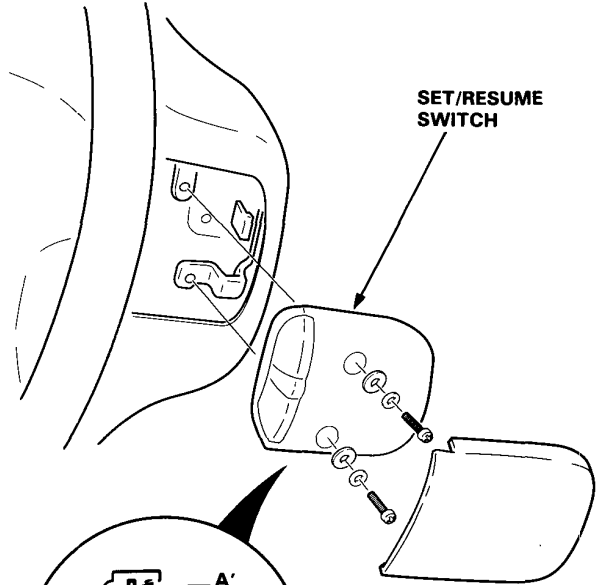

SET/RESUME SWITCH

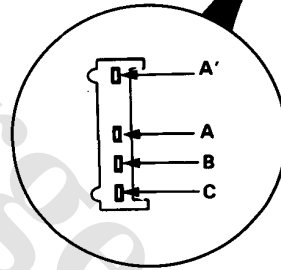

4. Check for continuity between the terminals in each switch position according to the table.

Terminal Position	A or A'	B	C
SET (ON)	○		○
RESUME (ON)	○	○	

- If there is continuity, replace the cable reel.
- If there is no continuity, replace the switch.

INTRODUCTION

How to Use This Manual

This supplement contains information for the 1993 ACCORD and ACCORD AERO DECK. Refer to following shop manuals for service procedures and data not included in this supplement.

Description	Code No.
ACCORD CHASSIS Maintenance and Repair 90	62SM400
ACCORD SUPPLEMENT 91	62SM420
ACCORD AERO DECK SUPPLEMENT 91	62SM421
ACCORD SUPPLEMENT 92	62SM422
ACCORD COUPE SUPPLEMENT 92	62SM423
F18A/F20A/F22A ENGINE Maintenance and Repair	62PT400
H2 MANUAL TRANSMISSION Maintenance and Repair	62PX500
PX4B AUTOMATIC TRANSMISSION Maintenance and Repair	62PX400

The first page of each section is marked with a black tab that lines up with one of the thumb index tabs on this page. You can quickly find the first page of each section without looking through a full table of contents. The symbols printed at the top corner of each page can also be used as a quick reference system.

Special Information


⚠ WARNING Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

CAUTION: Indicates a possibility of personal injury or equipment damage if instructions are not followed.

NOTE: Gives helpful information.

CAUTION: Detailed descriptions of standard workshop procedures, safety principles and service operations are not included. Please note that this manual does contain warnings and cautions against some specific service methods which could cause PERSONAL INJURY, or could damage a vehicle or make it unsafe. Please understand that these warnings cannot cover all conceivable ways in which service, whether or not recommended by Honda, might be done, or of the possible hazardous consequences of each conceivable way, nor could Honda investigate all such ways. Anyone using service procedures or tools, whether or not recommended by Honda, must satisfy himself thoroughly that neither personal safety nor vehicle safety will be jeopardized.

All information contained in this manual is based on the latest product information available at the time of printing. We reserve the right to make changes at any time without notice. No part of this publication may be reproduced, stored in retrieval system, or transmitted, in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. This includes text, figures and tables.

 marked sections are not included in this manual.

General Info 

Special Tools 

Specifications 

Maintenance 

Engine 

Cooling 

Fuel and Emissions 

* Transaxle 

* Steering 

Suspension 

* Brakes
(Including  ABS)

* Body 

* Heater and
Air Conditioner 

* Electrical
(Including  SRS) 

As sections with * include SRS components, special precautions are required, when servicing.

Outline of Model Changes

ITEM	DESCRIPTION	91 MODEL	91 AERO DECK	92*1 MODEL	93*1 MODEL	REFERENCE SECTION
General	Accord Aero Deck added		○			—
	Accord Wagon (KQ) added*2			○		—
Engine	Tightening torque changed <ul style="list-style-type: none"> • Engine Mounting bolts and nuts • Main bearing cap nut • Exhaust pipe-to muffler connecting nut Changed <ul style="list-style-type: none"> • Exhaust manifold (KQ model) • Crank bore marking method 	○				—
	Changed <ul style="list-style-type: none"> • Muffler 		○			—
Carburetor	Adopted <ul style="list-style-type: none"> • KE with CATA model Modified <ul style="list-style-type: none"> • Vacuum connections 		○			—
	Adapted <ul style="list-style-type: none"> • KF with CATA model Modified <ul style="list-style-type: none"> • PGM-CARB system diagram and connector 			○		—
PGM-FI	Adopted <ul style="list-style-type: none"> • KE with CATA model Modified <ul style="list-style-type: none"> • KQ model (2.2 ℓ) • Electronic control unit (ECU) • Vacuum connections • TDC/CRANK/CYL sensors • Fuel pressure • Constant vacuum control (CVC) valve 	○				—
	Modified <ul style="list-style-type: none"> • Fuel tank 		○			—
	Added <ul style="list-style-type: none"> • KF with CATA model Modified <ul style="list-style-type: none"> • Vacuum connections • O₂ sensor • Fuel-injected system diagram and connections 			○		—
	Added <ul style="list-style-type: none"> • 2.0 ℓ with CATA model of ACCORD AERODECK (KG, KE) 				○	6
Clutch	Changed <ul style="list-style-type: none"> • Torque value of clutch pipe 			○		—

*1 Includes 4-door (sedan) and 5-door (Aero deck or Wagon)

*2 Refer to the shop manual ACCORD SUPPLEMENT 91 "ACCORD AERO DECK" (No. 62SM421).

ITEM	DESCRIPTION	91 MODEL	91 AERO DECK	92*1 MODEL	93*1 MODEL	REFERENCE SECTION
Manual Transmission	Modified <ul style="list-style-type: none"> • Changed lever • 3rd/4th synchro sleeve • 5th synchro hub and 5th synchro sleeve • 1st/2nd synchro hub 	○				—
	Changed <ul style="list-style-type: none"> • Shift and select cable • Countershaft bearing • Torque value of countershaft locknut • 2nd gear spacer collar 			○		—
Automatic Transmission	Changed <ul style="list-style-type: none"> • Transmission type, from MPXA to APXA 		○			—
	Changed			○		—
Power Steering	Added <ul style="list-style-type: none"> • High pressure pipe for power steering pump 		○			—
Suspension	Changed <ul style="list-style-type: none"> • Torque value of front suspension 			○		—
Anti-lock Brake System	Changed <ul style="list-style-type: none"> • Brake booster for LHD car with ABS Modified <ul style="list-style-type: none"> • ABS control unit • ABS modulator unit and power unit 			○		—
Body	Added <ul style="list-style-type: none"> • Aero deck 		○			—
Electrical	Changed <ul style="list-style-type: none"> • Power supply circuit • Taillight Modified <ul style="list-style-type: none"> • Brake light failure sensor • Power door locks • Stereo sound system Adopted <ul style="list-style-type: none"> • Pear wiper/washer • Tailgated latch switch 		○			—
	Added <ul style="list-style-type: none"> • SRS type I and SRS type II • High mount brake light (KQ model) 			○		—
	Added <ul style="list-style-type: none"> • Interlock system (KQ model) • Driver's door lock actuator (KQ model) Changed <ul style="list-style-type: none"> • Idle speed for fuel-injected engine • Ignition timing for carbureted engine (KY model) • Integrated control unit (KY model) 				○	16

Chassis and Engine Numbers
Identification Number Locations
Lable Locations
Lift and Support Points
Towing
Preparation of Work
Symbol Marks
Abbreviations

www.cargeek.ir

Chassis and Engine Numbers

Vehicle Identification Number (4D with 2.0 l Carbureted engine)

JHMCB35200C300001

Manufacturer, Make and Type of Vehicle
 JHM: HONDA MOTOR CO., LTD. JAPAN
 HONDA Passenger car

Body Type
 CB3: ACCORD 2.0 l

Body and Transmission Type
 5: 4-door 5-speed Manual
 6: 4-door 4-speed Automatic

Vehicle Grade
 2: DX, KG/KS (F20A2)
 LX, KY (F20A3 Leaded gasoline)
 3: EX, KF/KG/KS/KE (F20A2)
 KF/KE (F20A3 Unleaded gasoline)
 KB/KW/KP/KT/KU/KY (F20A3, Leaded gasoline)
 EX (90ps), KG (F20A6)

Fixed Code
Auxiliary Number
Factory Code
 C: Saitama Factory in Japan

Model Year
 3: 1993

Serial Number

Vehicle Identification Number (4D with 2.0 l Fuel-injected engine except KB other)

JHMCB35400C300001

Manufacturer, Make and Type of Vehicle
 JHM: HONDA MOTOR CO., LTD. JAPAN
 HONDA Passenger car

Body Type
 CB3: ACCORD 2.0 l

Body and Transmission Type
 5: 4-door 5-speed Manual
 6: 4-door 4-speed Automatic

Vehicle Grade
 4: 2.0i, KF/KE (F20A5 Unleaded gasoline)
 KB/KW (F20A5 Leaded gasoline)
 KF/KG/KS/KE (F20A8)
 2.0i with ABS
 KF/KE (F20A5 Unleaded gasoline)
 KB (F20A5, Leaded gasoline)
 KF/KG/KX/KS/KE (F20A8)
 EXi, KU (F20A5 Leaded gasoline)

Fixed Code
Auxiliary Number
Factory Code
 C: Saitama Factory in Japan

Model Year
 3: 1993

Serial Number

Vehicle Identification Number (4D with 2.0 l, 2.2 l Fuel-injected engine KB other)

1HGCC155*PA700001

Manufacturer, Code and Vehicle Type
 1HG: HONDA OF AMERICA MFG., INC., U.S.A.
 HONDA Passenger car

Body Type
 CC1: ACCORD 2.0 l
 CD2: ACCORD 2.2 l

Body and Transmission Type
 5: 4-door 5-speed Manual
 6: 4-door 4-speed Automatic

Vehicle Grade
 5: LX (CC1)
 6: EX (CD2)

Check Digit
Model Year
 P: 1993

Factory Code
 A: Ohio Factory in U.S.A. (Marysvill)

Serial Number

Vehicle Identification Number (4D with 2.2 l Fuel-injected engine except KB other)

JHMCB75400C300001

Manufacturer, Make and Type of Vehicle
 JHM: HONDA MOTOR CO., LTD. JAPAN
 HONDA Passenger car

Body Type
 CB7: ACCORD 2.2 l

Body and Transmission Type
 5: 4-door 5-speed Manual
 6: 4-door 4-speed Automatic

Vehicle Grade
 4: LXi, KQ (F22A9)
 5: 2.2i, KF/KG/KX/KS/KE (F22A3)
 EXi, KQ (F22A9)
 KY (F22A2)

Fixed Code
Auxilliary Number
Factory Code
 C: Saitama Factory in Japan

Model Year
 3: 1993

Serial Number



Vehicle Identification Number
(5D with 2.2 l, 2.0 l Fuel-injected engine) 1HGCB87400A100001

Manufacturer, Code and Vehicle Type
1HG: HONDA OF AMERICA MFG., INS., U.S.A.
HONDA Passenger car

Body Type
CB8: ACCORD AERO DECK 2.2 l (KF/KG/KE)
CB9: ACCORD AERO DECK 2.2 l (KQ)
CC9: ACCORD AERO DECK 2.0 l (KF/KG/KE)

Body and Transmission Type
7: 5-door 5-speed Manual
8: 5-door 4-speed Automatic

Vehicle Grade
4: 2.0i, 2.2i (KF/KG/KE) LXi (KQ)
5: 2.0i, 2.2i with A/C (KF/KG/KE) LXi with A/C (KQ)

Fixed Code
Auxilliary Number
Factory Code
A: Ohio Factory in U.S.A. (Marysvill)

Model Year
1: 1993

Serial Number

Engine Number
(2.2 l engine for 4D European model) F22A3-4000001

Engine Type
F22A3: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA (KF/KG/KX/KS/KE)

Transmission Type
40: Manual
45: Automatic

Serial Number

Engine Number
(2.2 l engine for 4D except European model) F22A2-4000001

Engine Type
F22A2: 2.2 l Fuel-injected engine
Leaded gasoline without CATA (KY)
F22A9: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA (KQ)

Serial Number
F22A2: 4000001 ~
F22A9: 3000001 ~

Engine Number
(2.2 l engine for 5D model) F22A6-3960001

Engine Type
F22A6: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA for Manual and Automatic (KQ)
F22A7: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA for Manual (KF/KG/KX/KS/KE)
F22A8: 2.2 l Fuel-injected engine
Unleaded gasoline with CATA for Automatic (KF/KG/KX/KS/KE)

Serial Number
F22A6: 3960001 ~
F22A7 and F22A8: 3000001 ~

Engine Number
(2.0 l engine) F20A2-4000001

Engine Type
F20A2: 2.0 l Carbureted engine
Unleaded gasoline with CATA (KF/KG/KS/KE)
F20A3: 2.0 l Carbureted engine
Unleaded gasoline without CATA (KF/KE)
F20A3: 2.0 l Carbureted engine
Leaded gasoline without CATA (KB/KW/KP/KT/KU/KY)
F20A5: 2.0 l Fuel-injected engine
Unleaded gasoline without CATA (KF/KE)
F20A5: 2.0 l Fuel-injected engine
Leaded gasoline without CATA (KB/KW/KU)
F20A6: 2.0 l Carbureted engine
Unleaded gasoline with CATA (KG-90ps)
F20A7: 2.0 l Fuel-injected engine
Unleaded gasoline with CATA (KB other)
F20A8: 2.0 l Fuel-injected engine
Unleaded gasoline with CATA (KF/KG/KX/KS/KE)
F20Z3: 2.0 l Fuel-injected engine
Unleaded gasoline with CATA (5D-KF/KG/KE)

Transmission Type
10: F20Z3 engine
20: F20A7, F20A8 engine
40: Except F20Z3, F20A7, F20A8 engine


Serial Number


Transmission Number H2C4-4000001

Transmission Type
H2C4: Manual with F20A5/F20A8/F22A2/F22A3 engine (4D), F22A7/F20Z3 engine (5D)
H2S8: Manual with F20A2/F20A3/F20A6 engine
H2U5: Manual with F22A6 engine (5D)/F22A9 engine (4D)
MPXA: Automatic


Serial Number
Manual (4D): 4000001 ~
Manual (5D): 8000001 ~
Automatic: 4000001 ~

Identification Number Locations

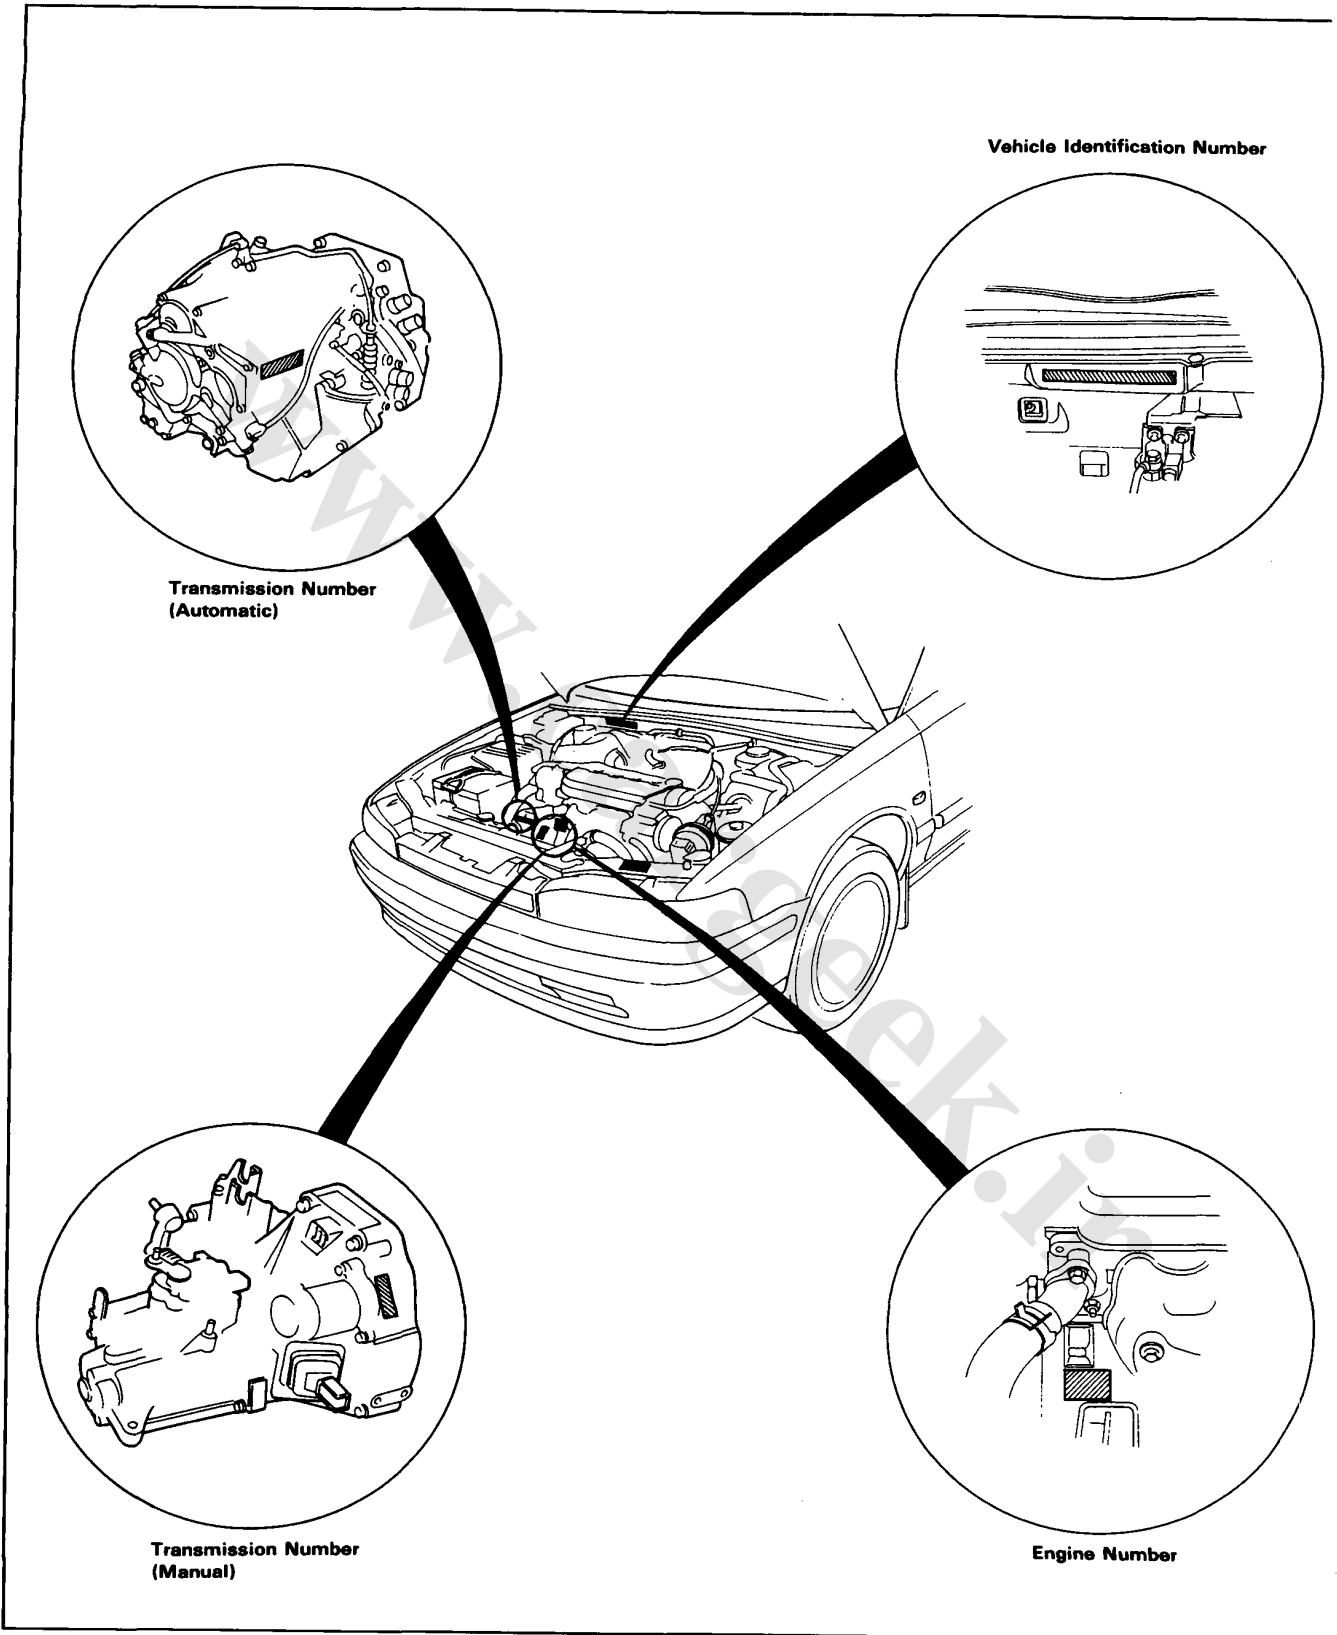


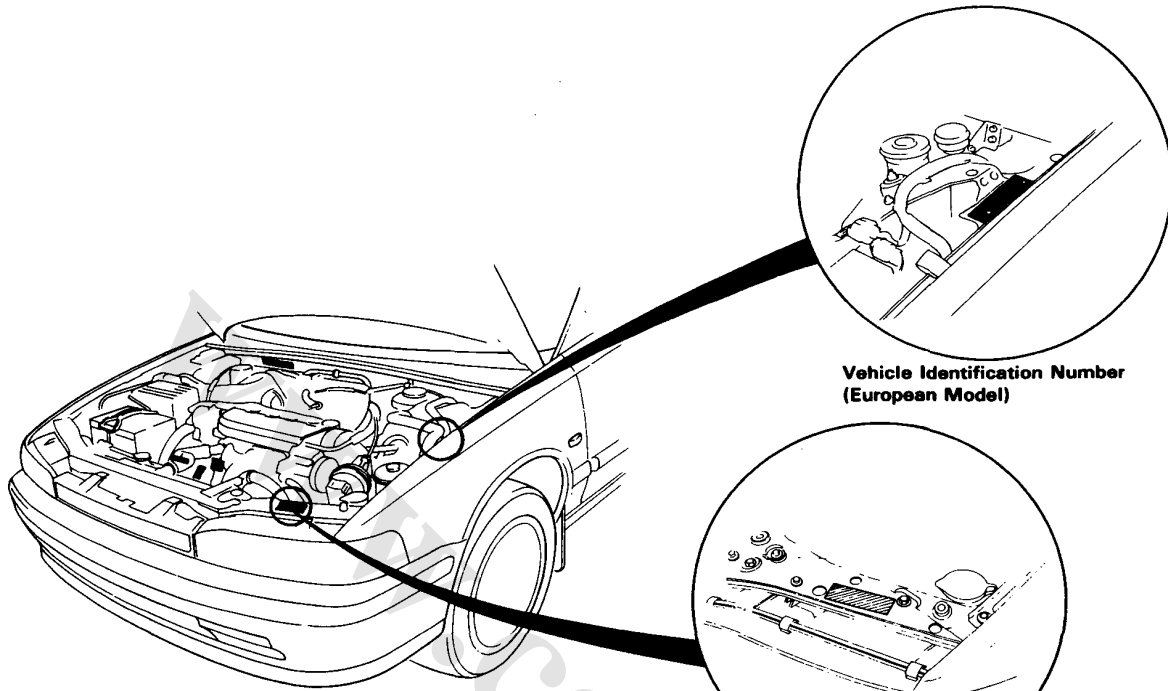


**Vehicle Identification Number
(European Model)**

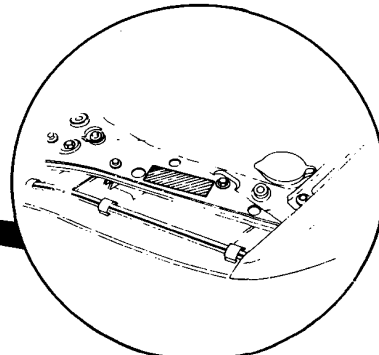

**Vehicle Identification Number
(KQ, KT Model)**

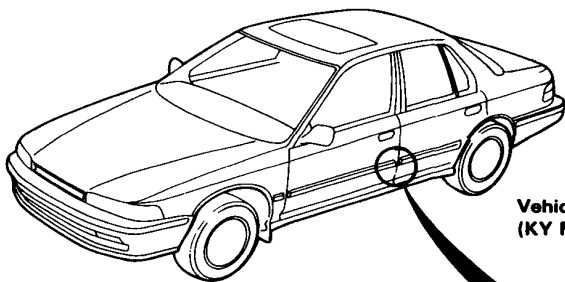



**Vehicle Identification Number
(KY Model only)**

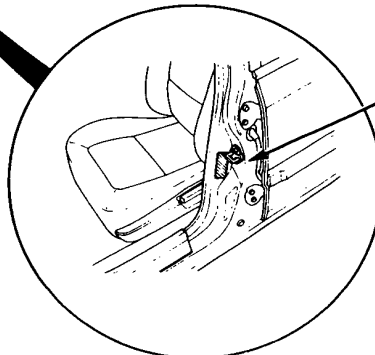

**CENTER
PILLAR**


Label Locations

Warning/Caution Labels (SRS type I)

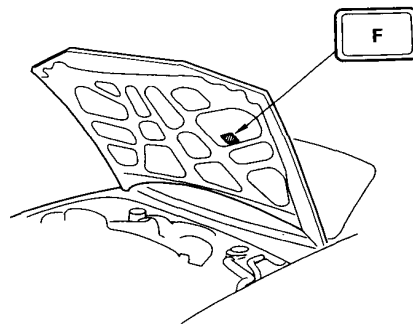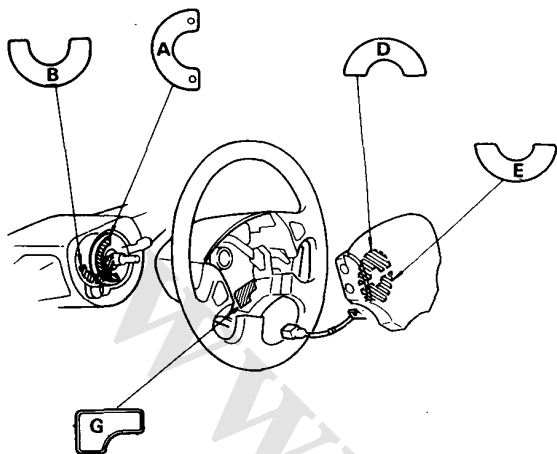


A: CABLE REEL CAUTION A

SRS
CAUTION
● REFER TO THE SHOP MANUAL.
ATTENTION
● SE REPORTER AU MANUAL D'ATELIER.
ACHTUNG
● WERKSTATTHANDBUCH LESEN.
WAARSCHUWING
● LEES HET WERKPLAATSHANOBOK.



B: CABLE REEL CAUTION B

SRS
CAUTION
● REFER TO THE SHOP MANUAL.
ATTENTION
● SE REPORTER AU MANUEL D'ATELIER.
ACHTUNG
● WERKSTATTHANDBUCH LESEN.
WAARSCHUWING
● LES HET WERKPLAATSHANOBOK.

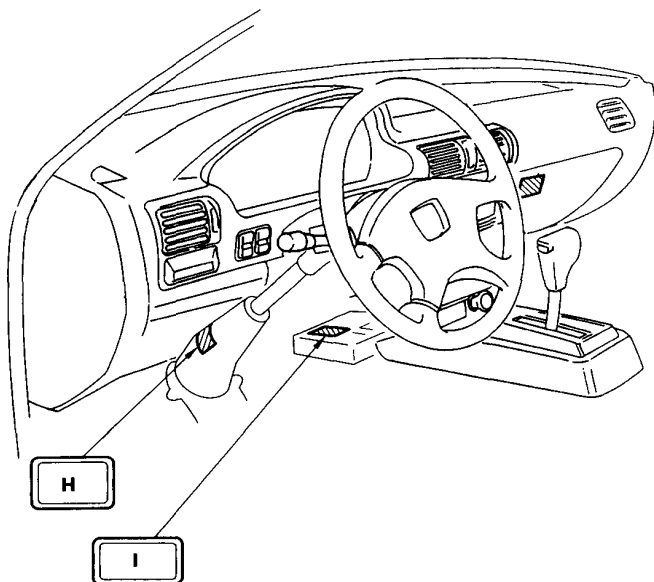

C: STEERING WHEEL WARNING

WARNING **SRS**
● REFER TO THE SHOP MANUAL.
● SE REPORTER AU MANUEL D'ATELIER.
● WERKSTATTHANDBUCH LESEN.
● LEES HET WERKPLAATSHANOBOK.



D: INFLATOR COVER LABEL

- DANGER
EXPLOSIVE/FLAMMABLE
POISON
REFER TO THE SHOP MANUAL.
- DANGER
EXPLOSIF ET INFLAMMABLE
POISON
SE REPORTER AU MANNEL D'ATELIER
- GEFÄHR
EXPLOSIV/ENTZÜNDBAR
GIFT
WERKSTATTHANDBUCH LESEN.
- GEVAAR
EXPLOSIEGEVAAR/BPANDBAAR
GIFTIG
LEES HET WERKPLAATSHANDBOEK.

E: MODULE WARNING

- WARNING** **SRS**
- REFER TO THE SHOP MANUAL.
 - SE REPORTER AU MANUEL D'ATELIER.
 - WERKSTATTHANDBUCH LESEN.
 - LEES HET WERKPLAATSHANDBOEK.

F: ENGINE HOOD WARNING

WARNING **SRS**
THIS VEHICLE IS EQUIPPED WITH A AIRBAG SYSTEM AS A SUPPLEMENTAL RESTRAINT SYSTEM. (SRS)
ALL S.R.S. ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW.
DO NOT USE ELECTRICAL TEST EQUIPMENT ON THESE CIRCUITS.
TAMPERING WITH OR DISCONNECTING THE S.R.S. WIRING COULD RESULT IN ACCIDENTAL FIRING OF THE INFLATOR OR MAKE THE SYSTEM INOPERATIVE WHICH MAY RESULT IN SERIOUS INJURY.

ATTENTION **SRS**
CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.).
TOUS LES FILS ET CONNECTEURS ELECTRIQUES DU SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.) SONT DE COULEUR JAUNE. N'UTILISEZ PAS UN EQUIPMENT D'ESSAIS ELECTRIQUES SUR CES CIRCUITS. NE TOUCHEZ PAS ET NE DEBRANCHEZ PAS LES FILS DU SYSTEME S.R.S. CAR CECI POURRAIT DE TRADUIRE PAR LE DECLENCHEMENT ACCIDENTEL DU GONFLEUR OU RENDRE LE SYSTEME INOPERANT ET VOUS EXPOSER AINSI A DE GRAVES BLESSURES.

WARNING **SRS**
DIESES FAHRZEUG IST MIT EINEM FAHRER-AIRBAG (SRS) ALS ZUSÄTZLICHEM RÜCKHALTESYSTEM AUSGERÜSTET.
ALLE ELEKTRISCHEN KABEL, SOWIE DIE ZUGEHÖRIGEN STECKVERBINDER DES S.R.S.-SYSTEMS SIND IN GELBER FARBE AUSGEFÜHRT.
KEINE ELEKTRISCHEN PRÜFGERÄTE AN DIE S.R.S.-VERKABELUNG ANSCHLIEBEN.
VERÄNDERN ODER UNTERBRECHEN DER S.R.S.-VERKABELUNG KANN UNKONTROLLIERTES ZÜNDEN DES GASGENERATORS AUSLÖSEN, ODER DAS SYSTEM AUßER FUNKTION SETZEN WAS ZU ERNSTHAFTEN VERLETZUNGEN FÜHREN KANN.

WAARSCHUWING **SRS**
DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURERSKANT ALS EXTRA BESCHERMING (S.R.S.).
ALLE ELEKTRISCHE LEIDINGEN EN AANSLUITINGEN VAN DE S.R.S. ZIJN GEEL GEKLEURD. GEBRUIK GEEN ELEKTRISCHE TESTAPPARATUUR VOOR DEZE CIRCUITS. KNOEIE MET OF LOSKOPPELEN VAN DE S.R.S. LEIDINGEN KAN LEIDEN TOT BRAND IN DE VULINRICHTING OF TOT UITSCHAKELEN VAN HET SYSTEEM DIT KAN TOT ERNSTIGE ONGELUKKEN LEIDEN.

(cont'd)

Label Locations

Warning/Caution Labels (SRS type I) (cont'd)

G: DRIVER INFORMATION

SRS ALWAYS WEAR YOUR SEAT BELT

- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS)
- IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
- IF YOUR SRS INDICATOR LIGHTS WHILE DRIVING SEE YOUR AUTHORIZED HONDA DEALER.

SRS ATTACHEZ TOUJOURS VOTRE CEINTURE

- CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR OUI CONSTITUE UN SYSTEME DE RETENUECOMPLEMENTAIRE (S.R.S.).

- CE COUSSIN D'AIR COMPLETE LA FONCTION DE LA CEINTURE DE SECURITE.
- SI LE TEMON SRS S'ALLUME PENDANT LA CONDUITE.
ADRESSEZ VOUS A VOTRE CONCESSIONNAIRE HONDA OFFICIEL.

SRS SICHERHEITSGURTE BEI JEDER FAHRT ANLEGEN

- DIESES FAHRZEUG BESITZT EINEN FAHRER AIRBAG ALS ZUSATZLICHES RUCKHALE-SYSTEM (S.R.S.).
- ES IST EINE EPGANZUNG ZUM SICHERHEITSGURT.
- WENN DIE SRS KONTROLLEUCHTE WAHREND DER FAHRT AUFLEUCHTET UMGEHEND FINEN HONDA HANDLER AUFSUCHEN.

SRS DRAAG ALTIJD UW VEILIGHEIDSGORDEL

- DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.).
- DIT IS ONTWERPEN ALS EXTRA BESCHERMING BIJ DE VEILIGHEIDSGORDEL.
- ALS HEL SRS-WAARSCHUWINGSLAMPJE GAAT BRANDEN ONDER HET RIJDEN, NEEM DAN KONTAKT OP MET EEN HONDA DEALER.

H: STEERING COLUMN CAUTION (KE model)

CAUTION **SRS**

TO AVOID DAMAGING THE S.R.S. CABLE OR REEL. WHICH COULD MAKE THE SYSTEM INOPERATIVE. REMOVE THE STEERING WHEEL BEFORE REMOVING THE STEERING SHAFT CONNECTOR BOLT.

ATTENTION **SRS**

POUR NE PAS RISQUER D'ENDOMMAGER LE CABLE OU L'ENROULEUR DU S.R.S. ET DE RENDRE AINST LE SYSTEME INOPERANT RETIREZ LE VOLANT AVANT DE DEVINSSER LE BOULON D'ACCOUPEMENT D'ARBRE DE DIRECTION.

H: STEERING COLUMN CAUTION (KG model)

ACHTUNNG **SRS**

UM EINE BESCHÄDIGUNG DER SRS-VERKABELUNG, DIE ZUM AUSTALL DES SYSTEMS FÜHREN KANN ZU VERHINDERN, IMMER DAS LENKRAD VOR DEM LENKWELLENVERBINDUNGS-BOLZEN AUSBAUEN.

WAARSCHUWING **SRS**

OM TE VOORKOMEN DAT DE S.R.S. -KABEL OF -HASPEL BESCHADIGD WORDEN, HETGEEN ERTOE ZOU LEIDEN DAT HET SYSTEEM UITVALT, DIENT U HET STUUR TE VERWIJDEREN VOORDAT U DE STUURSCHACHTCONNECTORBOUT VERWIJERT.

I: SRS UNIT CAUTION

CAUTION **SRS**

- NO SERVICEABLE PARTS INSIDE.
- DO NOT DISASSEMBLE OR TAMPER.
- DO NOT DROP.
- STORE IN A CLEAN, DRY AREA.

ATTENTION

- AUCUN POINT D'INTERVENTION A L'INTERIEUR.
- NO PAS DEMONTER OU TOUCHER.
- NO PAS FAIRE TOMBER.
- RANGER DANS UN ENDROIT PROPRE ET SEC.

WAARSCHUWING


- BINNENIN BEVINDEN ZICH GEEN OHDER DELEN DIE AAN ONDERHOUD ONDERHEVIG ZIJN.
- DEMONTEER NIETS EN KNCEI NIET AAN DE S.R.S.
- LAAT DE S.R.S. NIET VALLEN.

ACHTUNG

- WARTUNGSFREIES BAUTEIL: NICHT ÖFFNEN, ZERLEGEN, ODER VERÄNDERN!
- NICHT WERFEN!
- TROCKEN UND GESCHOTZT LAGERN!



Warning/Caution Labels (SRS type II)

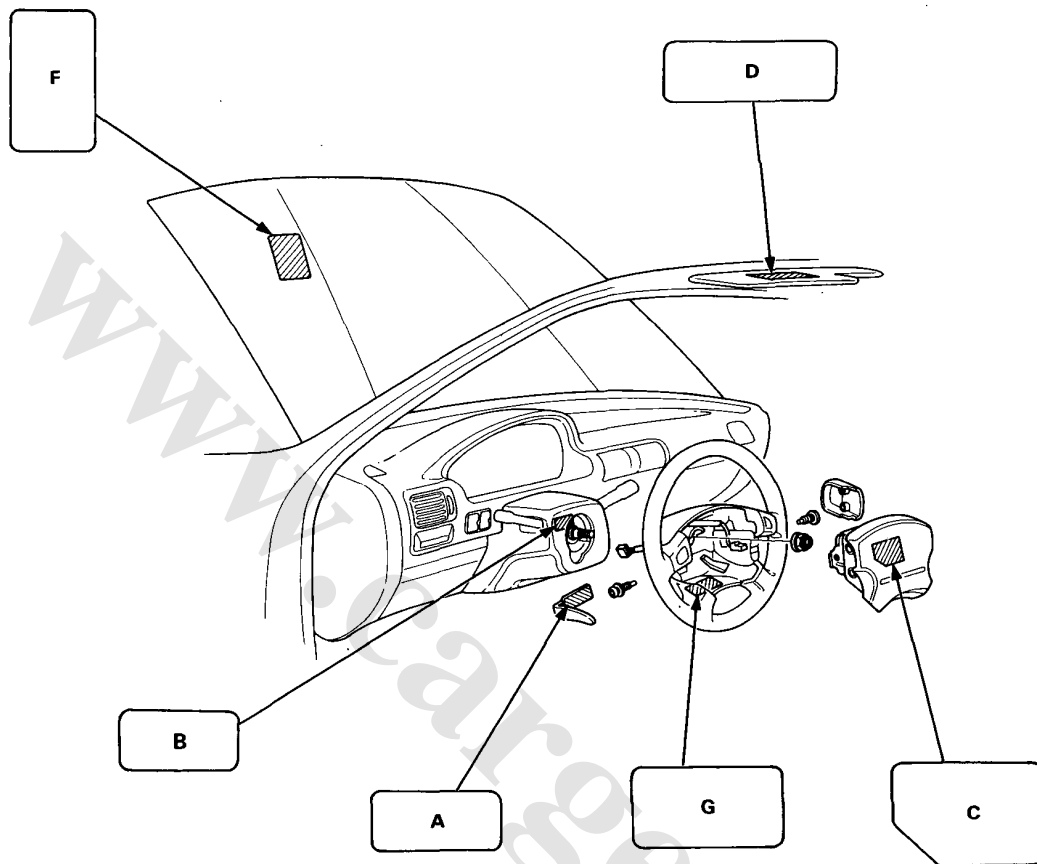

A: MAINTENANCE LID CAUTION

CAUTION **SRS**
 BEFORE MAINTENANCE, SWITCH OFF THE IGNITION.
 ATTENTION
 AVANT TOUT ENTRETIEN, COUPER LE CONTACT.
 ACHTUNG
 VOR WARTUNG ZÜNDUNG AUSSCHALTEN.
 LET OP
 ZET HET KONTAKTSLOT AF ALVORENS MET HET
 ONDERHOUD TE BEGINNEN.

B: SLIP RING CAUTION

CAUTION **SRS**
 ● CAUTION REFER TO SHOP MANUAL
 ● ACHTUNG WERKSTATT HANDBUCH LESEN
 ● ATTENTION SE REPORTER AU MANUEL D'ATELIER
 ● WAARSCHUWING LEES HET WERKPLAATS
 HANDBOEK

C: MONITOR CAUTION

CAUTION **SRS**
 REFER TO THE SHOP MANUAL
 ATTENTION
 SE REPORTER AU MANUEL D'ATELIER
 WAARSCHUWING
 LEES HET WERKPLAATS HANDBOEK
 ACHTUNG
 ● WERKSTATT HANDBUCH LESEN
 ● DER GASGENERATOR IN DIESEM GEHÄUSE
 DARF NUR FÜR INSASSEN-RÜCKHALTESYSTEME
 MIT LUFTSACK IN KRAFTFAHRZEUGE
 MONTIERT WERDEN.
 DIE MONTAGE UND DEMONTAGE
 DES GASGENERATORS
 DARF NUR VON DAFÜR
 GESCHULTEM PERRSONAL
 VORGENCHMEN VERDEN.

(cont'd)

Label Locations

Warning/Caution Labels (SRS type II) (cont'd)

D: DRIVER INFORMATION


- ALWAYS WEAR YOUR SEAT BELT** **SRS**
- THIS CAR IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (S.R.S.).
 - IT IS DESIGNED TO SUPPLEMENT THE SEAT BELT.
 - IF YOUR SRS INDICATOR LIGHTS WHILE DRIVING, SEE YOUR AUTHORIZED HONDA DEALER.

- ATTACHEZ TOUJOURS VOTRE CEINTURE** **SRS**
- CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR POUR LE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.).
 - CE COUSSIN D'AIR COMPLETE LA FONCTION DE LA CEINTURE DE SECURITE.
 - SI LE TEMOIN SRS S'ALLUME PENDANT LA CONDUITE, ADRESSEZ-VOUS A VOTRE CONCESSIONNAIRE HONDA OFFICIEL.

- SICHERHEITSGURTE BEI JEDER FAHRT ANLEGEN** **SRS**
- DIESES FAHRZEUG BESITZT EINEN FAHRER-AIRBAG ALS ZUSÄTZLICHES RÜCKHALTESYSTEM (S.R.S.).
 - ES IST EINE ERGÄNZUNG ZUM SICHERHEITSGURT.
 - WENN DIE SRS-KONTROLLEUCHE WÄHREND DER FAHRT AUFLEUCHTET, UMGEHEND FINEN HONDA HÄNDLER AUFsuchen.

- DRAAG ALTIJD UW VEILIGHEIDSGORDEL** **SRS**
- DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.).
 - DIT IS ONTWERPEN ALS EXTRA BESCHERMING BIJ DE VEILIGHEIDSGORDEL.
 - ALS HEL SRS-WAARSCHUWINGSLAMPJE GAAT BRANDEN ONDER HET RIJDEN. NEEM DAN KONTAKT OP MET EEN HONDA DEALER.

E: LABEL AIRBAG

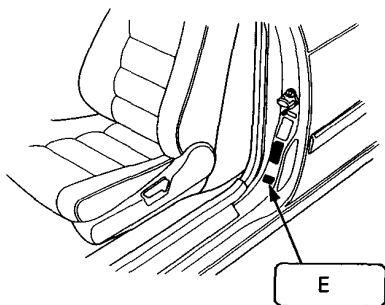

F: ENGINE HOOD WARNING

- WARNING** **SRS**
- THIS VEHICLE IS EQUIPPED WITH A DRIVER AIRBAG AS A SUPPLEMENTAL RESTRAINT SYSTEM (SRS). ALL S.R.S. ELECTRICAL WIRING AND CONNECTORS ARE COLORED YELLOW. DO NOT USE ELECTRICAL TEST EQUIPMENT ON THESE CIRCUITS. TAMPERING WITH OR DISCONNECTING THE S.R.S. WIRING COULD RESULT IN ACCIDENTAL FIRING OF THE INFLATOR OR MAKE THE SYSTEM INOPERATIVE, WHICH MAY RESULT IN SERIOUS INJURY.

- ATTENTION** **SRS**
- CE VEHICULE EST EQUIPE D'UN COUSSIN D'AIR DU COTE CONDUCTEUR QUI CONSTITUE UN SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.) TOUTS LES FILS ET CONNECTEURS ELECTRIQUES DU SYSTEME DE RETENUE COMPLEMENTAIRE (S.R.S.) SONT DE COULEUR JAUNE. N'UTILISEZ PAS UN EQUIPEMENT D'ESSAIS ELECTRIQUES SUR CES CIRCUITS. NE TOUCHEZ PAS ET NE DEBRANCHEZ PAS LES FILS DU SYSTEME S.R.S. CAR CECI POURRAIT DE TRADUIRE PAR LE DECLENCHEMENT ACCIDENTEL DU GONFLEUR OU RENDRE LE SYSTEME INOPERANT ET VOUS EXPOSER AINSI A DE GRAVES BLESSURES.

- WARNUNG** **SRS**
- DIESES FAHRZEUG IST MIT EINEM FAHRER-AIRBAG (SRS) ALS ZUSÄTZLICHEM RÜCKHALTESYSTEM AUSGERÜSTET. ALLE ELEKTRISCHEN KABEL, SOWIE DIE ZUGEHÖRIGEN STECKVERBINDER DES S.R.S. -SYSTEMS SIND IN GELBER FARBE AUSGEFÜHRT. KEINE ELEKTRISCHEN PRÜGERÄTE AN DIE S.R.S. -VERKABELUNG ANSCHLIEßEN. VERÄNDERN ODER UNTERBRECHEN DER S.R.S. -VERKABELUNG KANN UNKONTROLLIERTES ZÜNDEN DES GASGENERATORS AUSLÖSEN. ODER DAS SYSTEM AUßER FUNKTION SETZEN. WAS ZU ERNSTHAFTEN VERLETZUNGEN FÜHREN KANN.

- WAARSCHUWING** **SRS**
- DIT VOERTUIG IS UITGERUST MET EEN LUCHTKUSSEN AAN DE BESTUURDERSKANT ALS EXTRA BESCHERMING (S.R.S.). ALLE ELEKTRISCHE LEIDINGEN EN AANSLUITINGEN VAN DE S.R.S. ZIJN GEEL GEKLEURD. GEBRUIK GEEN ELEKTRISCHE TESTAPPARATUUR VOOR DEZE CIRCUITS. KNOEIEEN MET OF LOSKOPPELEN VAN DE S.R.S. LEIDINGEN KAN LEIDEN TOT BRAND IN DE VULINRICHTING OF TOT UITSCHAKELLEN VAN HET SYSTEEM DIT KAN TOT ERNSTIGE ONGELUKKEN LEIDEN.

G: COVER CAUTION

- CAUTION** **SRS**
- ACHTUNG**
- REFER TO THE SHOP MANUAL
 - SE REPORTER AU MANUEL D'ATELIER.
 - WERKSTATT HANDBUCH LESEN.
 - LEES HET WERKPLAATSHANDBOEK.



Warning/Caution Labels (except SRS)


Carbureted Engine:

ABS CAUTION
(Standard for some types)

BONNET

INSULATOR
(Standard for some types)

COOLANT CAUTION and PRECAUTION

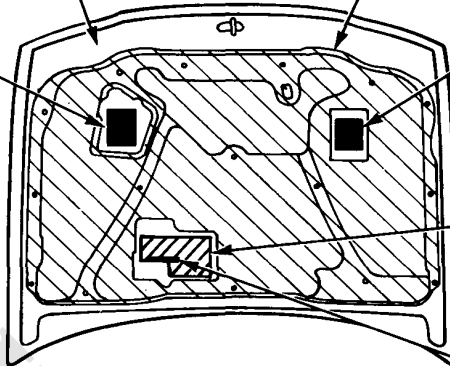



SERVICE INFORMATION
(KS Model only)

AIR CLEANER, OIL and FILTER SERVICE

EMISSION LABEL


KT Model only

RADIATOR CAP CAUTION

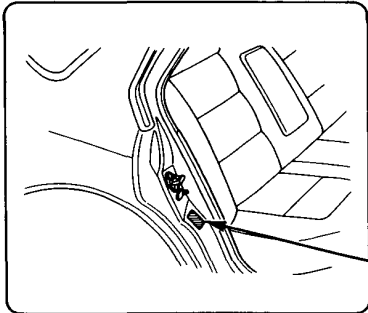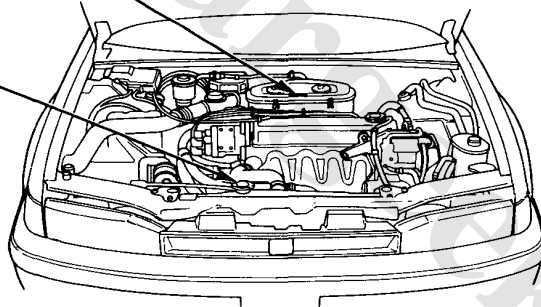

RHD


TIRE INFORMATION

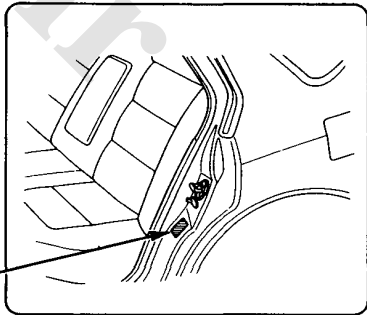

LHD

(cont'd)

Warning/Caution Labels (except SRS) (cont'd)

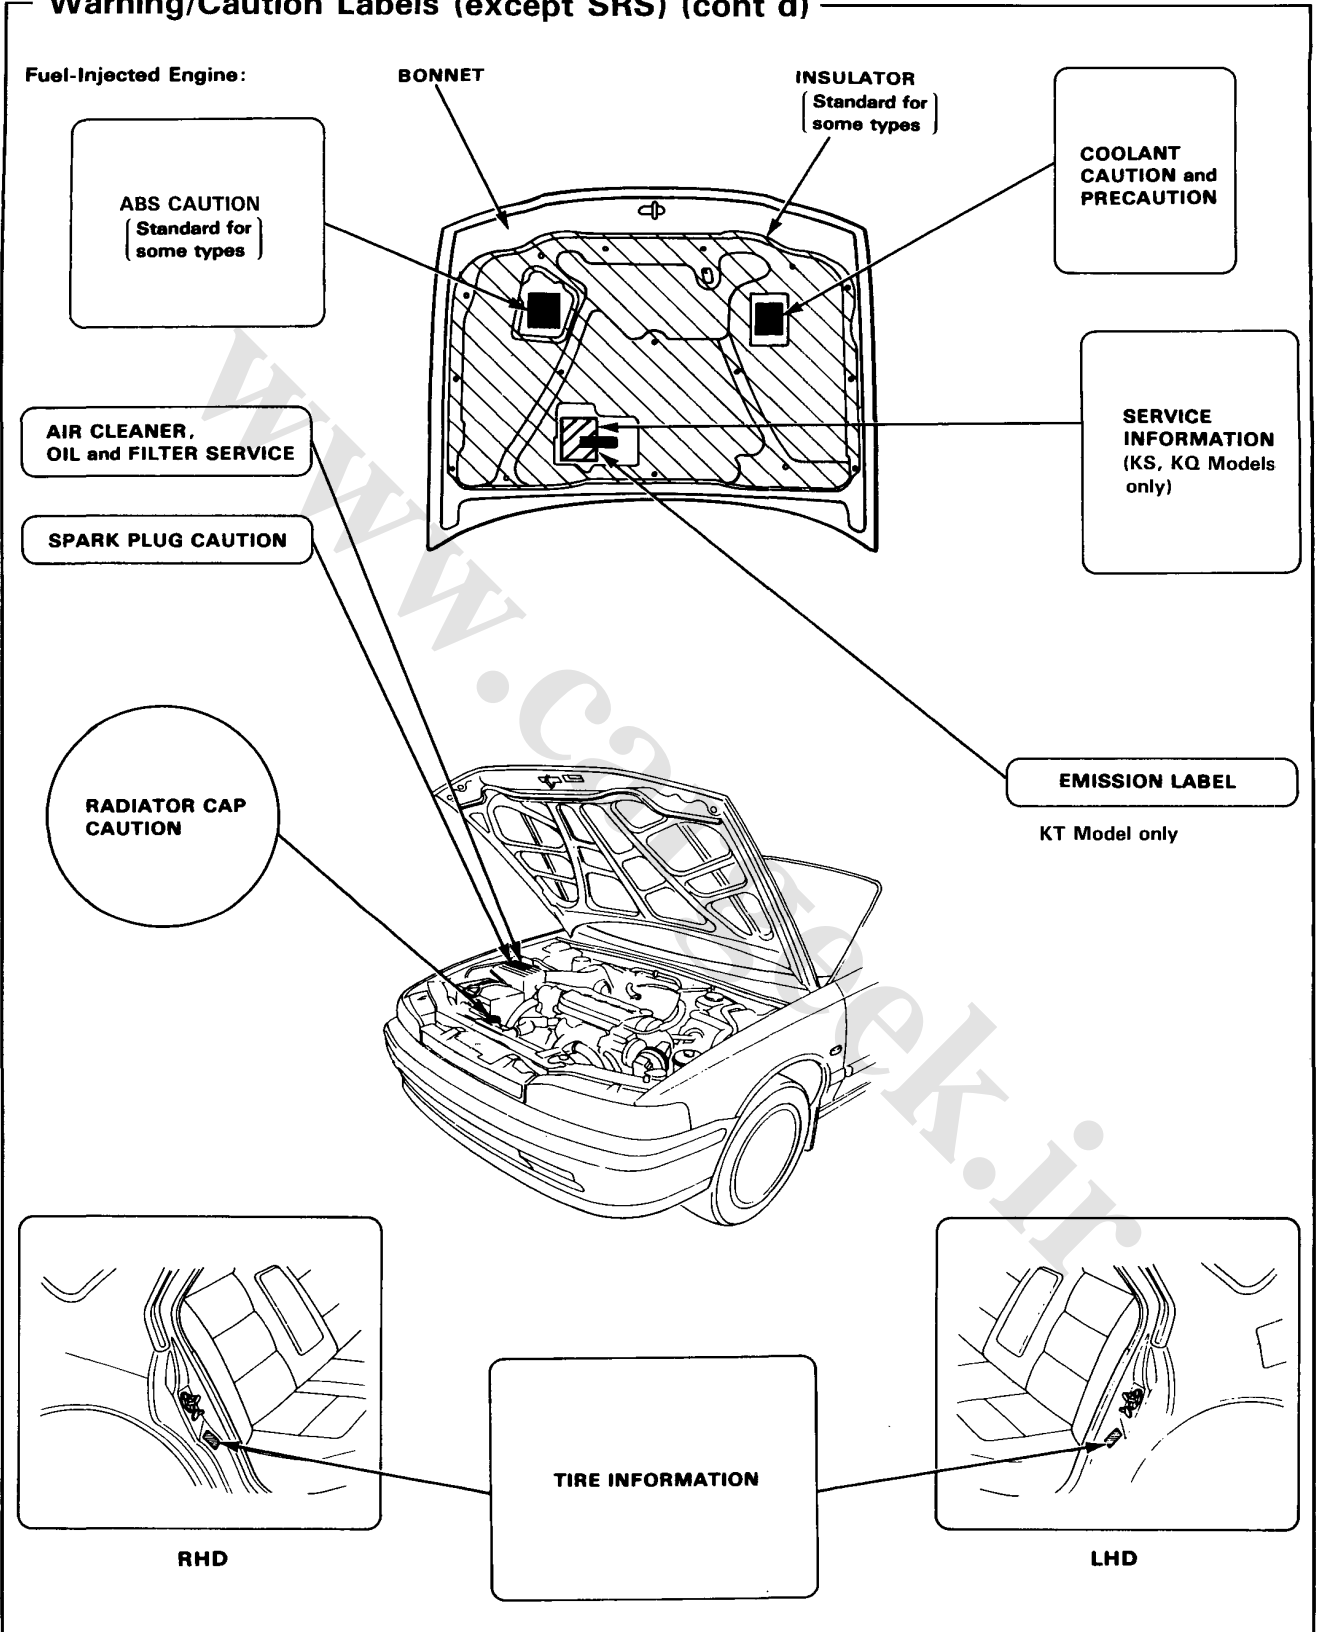



Lift and Support Points


Lift

⚠ WARNING When heavy rear components such as suspension, fuel tank, spare tire and tailgate are to be removed, place additional weight in the trunk before hoisting. When substantial weight is removed from the rear of the car, the center of gravity may change and can cause the car to tip forward on the hoist.

NOTE: Since each tire/wheel assembly weighs approximately 14 kg (30 lbs), placing the front wheels in the trunk will assist with the weight distribution.

Lift and support points for the 4-door model are shown in the following illustrations. These points are available for the 5-door model.

1. Place the lift blocks as shown.
2. Raise the hoist until the tyres are slightly off ground and rock the car to be sure it is firmly supported.
3. Raise the hoist to full height and inspect lift points for solid support.

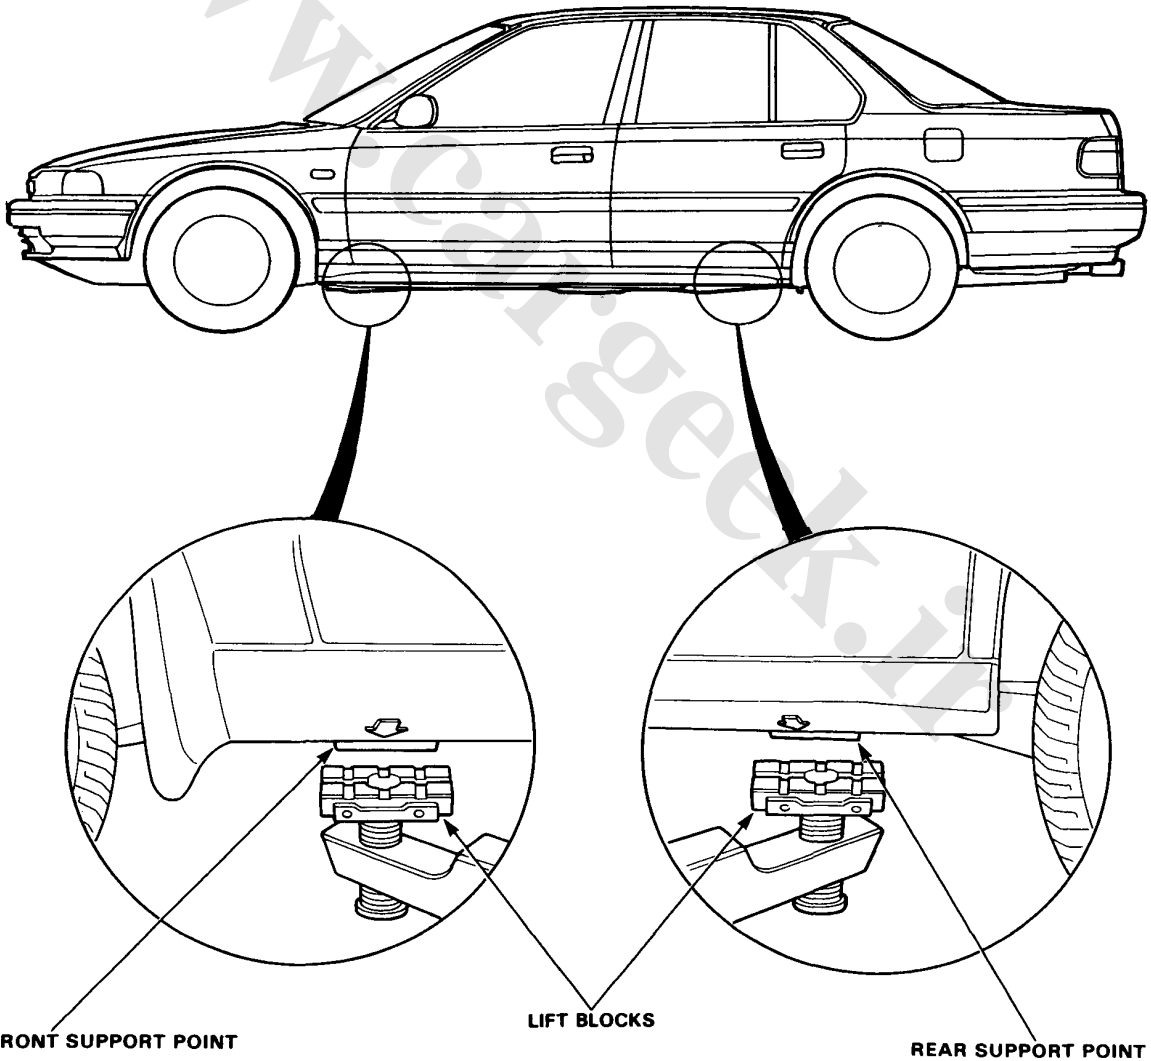

Lift and Support Points (cont'd)


Floor Jack

1. Set the parking brake and block the wheels that are not being lifted.
2. When lifting the rear of the car, put the gearshift lever in reverse (Automatic transmission in **P** position).
3. Raise the car high enough to insert the safety stands.
4. Adjust and place the safety stands as shown on page 1-15 so the car will be approximately level, then lower the car onto the stands.


⚠ WARNING

- Always use safety stands when working on or under any vehicle that is supported by only a jack.
- Never attempt to use a bumper jack for lifting or supporting the car.

Front


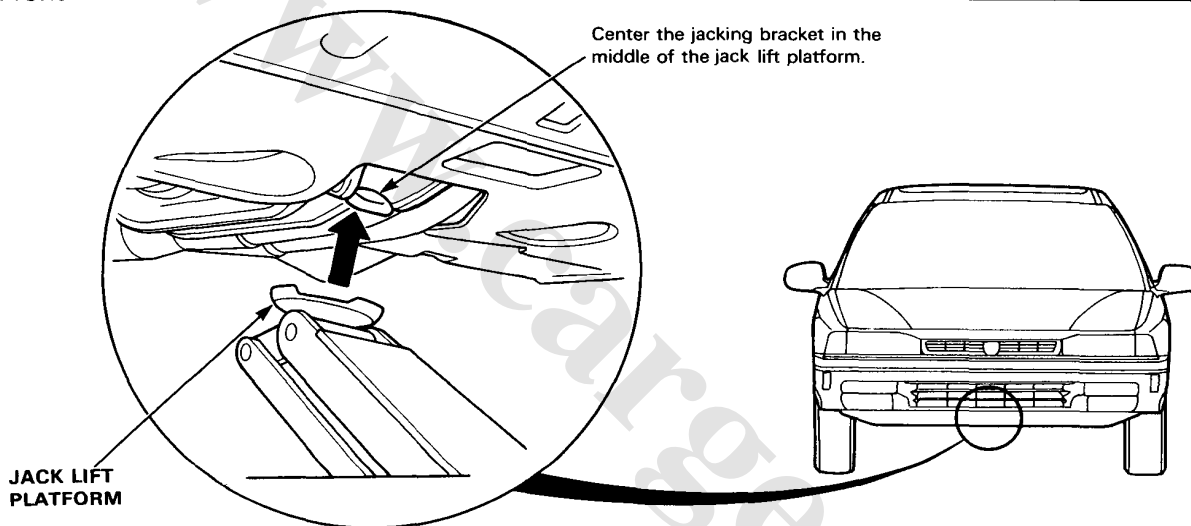


Rear

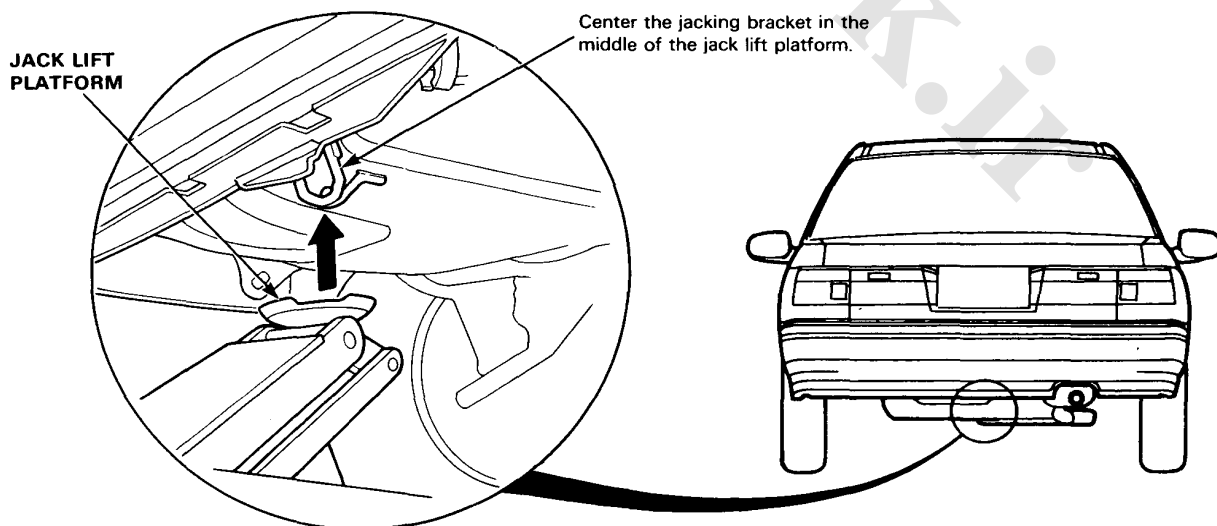



Safety Stands

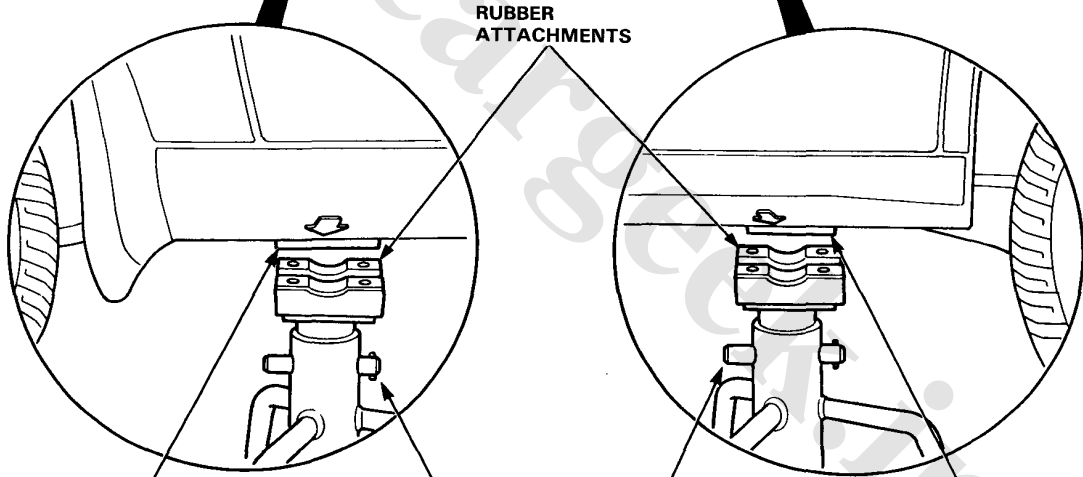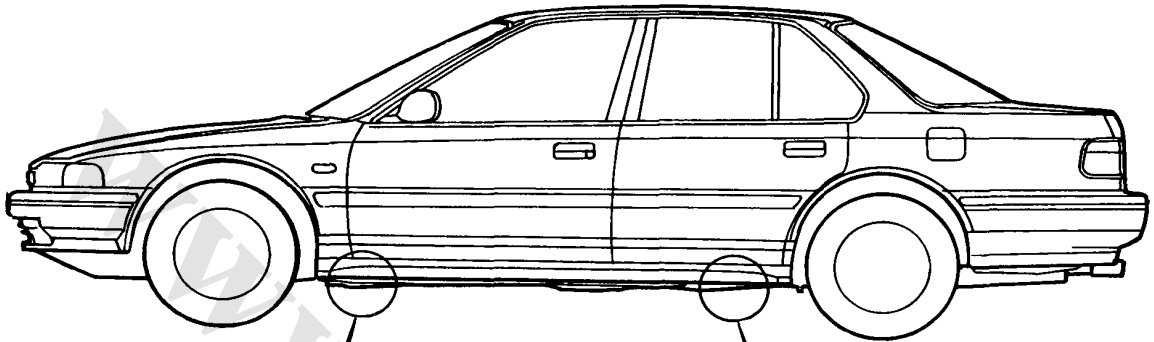

FRONT SUPPORT POINT

SAFETY STANDS

REAR SUPPORT POINT

Towing

If possible, always tow the car with the front wheels off the ground. The tow truck driver should position wood spacer blocks between the car's frame and his chains and lift straps, to avoid damaging the bumper and the body under it.

Do not use the bumpers to lift the car or to support the car's weight while towing. Check local regulations for towing. A chain may be attached to the hook shown in the picture. Do not attach a tow bar to either bumper.

▲ WARNING

DO NOT push or tow a car to start it. The forward surge when the engine starts could cause a collision. On some types, also, under some conditions, the catalytic converter could be damaged. A car equipped with an automatic transmission cannot be started by pushing or towing.

If the car is to be towed with the front wheels on the ground, observe the following precautions:

Manual Transmission

Shift the transmission to Neutral and turn the ignition key to the "I" position.


Automatic Transmission

First, check the automatic transmission fluid level. Start the engine and shift to **[D₄]** position, then to **[N]** position. Return the ignition key to the "I" position.

CAUTION:

- Do not tow with front wheels on the ground when the automatic transmission fluid level is low or the transmission cannot be shifted with the engine running.
- Do not exceed 35 mph (55 km/h) or tow for distances of more than 50 miles (80 km).
- When towing a car with 4WS even with the front wheels off the ground, turn the wheels straight ahead and tie the steering wheel in place.

TIE DOWN BRACKETS

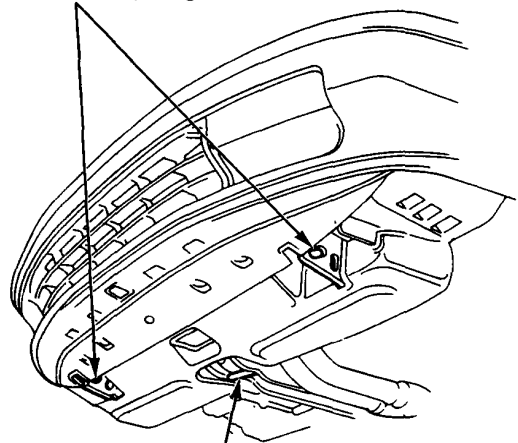


TOWING HOOK




Preparation of Work

Special Caution Items For This Car

- 4WS system servicing (with 4WS)
 - Do not disassemble the rear steering gear box.
 - When towing the car even with the front wheels off the ground, center the steering and tie the steering wheel in place.
 - When testing or adjusting the wheel alignment, attach the rear steering center lock pin to the rear steering gear box. Make sure that the rear steering gear box is located at the neutral position.

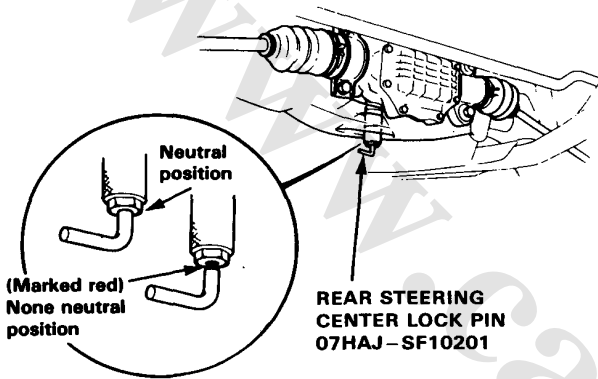


- Anti-lock brake system piping system servicing
 - Disassemble the anti-lock brake system piping system after relieve the high-pressured brake fluid.
 - Otherwise, the high-pressured brake fluid will burst out and it is very dangerous.
 - See section 13 of base manual (62SM400) how to relieve the high-pressured brake fluid.

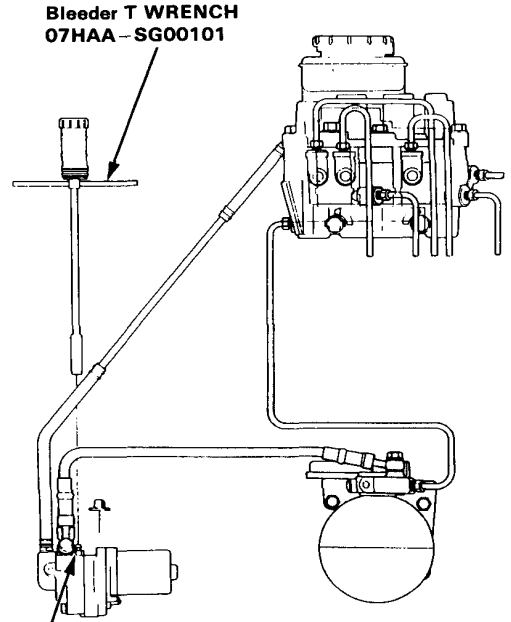

SERVICE BOLT
6 N·m (0.6 kg-m, 4 lb-ft)

- Fuel Line Servicing
 - Relieve fuel pressure by loosening the service bolt provided on the top of the fuel filter before disconnecting a fuel hose or a fuel pipe.

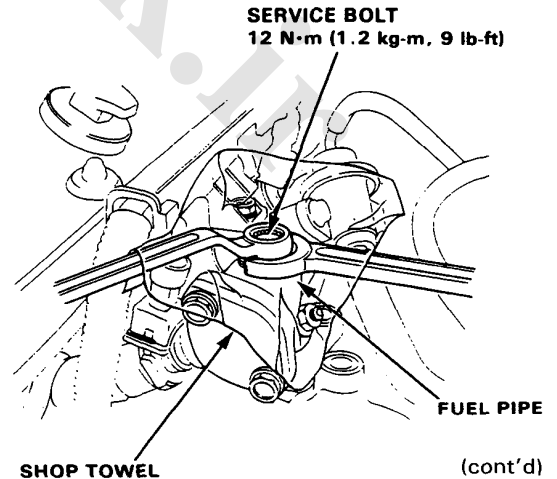


(cont'd)


Preparation of Work

Special Caution Items For This Car (cont'd)

- Be sure to replace washers, O-rings, and rubber seals with new ones when servicing fuel line parts.
- Always apply oil to the surfaces of O-rings and seal rings before installation. Never use brake fluid, radiator fluid, vegetable oils or alcohol-based oils.

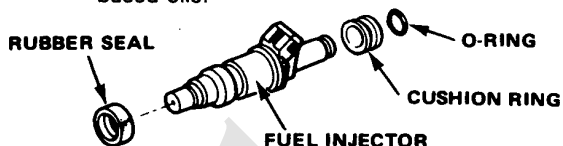

- When assembling the flare joint of the high-pressure fuel line, clean the joint and coat with new engine oil.
- When installing an injector, check the angle of the coupler. The center line of the coupler should align with the setting mark on the injector holder.

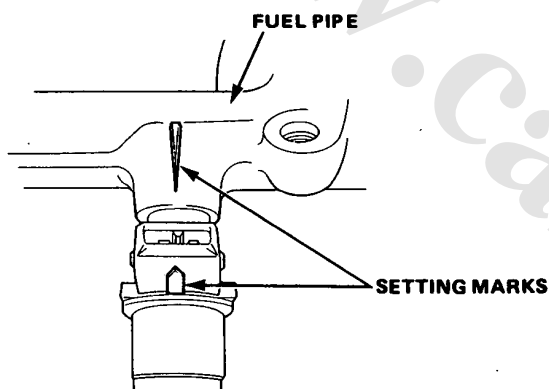

- Inspection for fuel leakage
 - After assembling fuel line parts, turn ON the ignition switch (do not operate the starter) so that the fuel pump is operated for approximately two seconds and the fuel is pressurized. Repeat this operation two or three times and check whether any fuel leakage has occurred in any of the various points in the fuel line.

- Installation of an amateur radio for cars equipped with PGM-FI.

Care has been taken for the Fuel-Injection, Carburetor, A/T, Cruise control and anti-lock brake system control units and its wiring to prevent erroneous operation from external interference, but erroneous operation of the control units may be caused by entry of extremely strong radio waves. Attention must be paid to the following items to prevent erroneous operation of the control units.

- The antenna and the body of the radio must be at least 200 mm (7.9 in) away from the control units.


The control unit locations:

- Fuel-Injection, Carburetor, A/T: Passenger's side front floor panel.
- Cruise control: Under dash panel of driver's side.
- Anti-lock brake system: Right side panel of trunk room.
- Do not lead the antenna feeder and the coaxial cable over a long distance parallel to the car's wiring. When crossing the wiring is required, execute crossing at a right angle.
- Do not install a radio with a large output (max. 10 W).
- Apply liquid gasket to the transmission, oil pump cover, right side cover and water outlet. Use HONDA genuine liquid gasket part No. 0Y740-99986.
 - Check that the mating surfaces are clean and dry before applying liquid gasket. Degrease the mating surfaces if necessary.
 - Apply liquid gasket evenly, being careful to cover all the mating surface.
 - To prevent leakage of oil, apply liquid gasket to the inner threads of the bolt holes.
 - Do not install the parts if 20 minutes or more have elapsed since applying liquid gasket. Instead, reapply liquid gasket after removing the old residue.
 - Wait at least 30 minutes before filling with appropriate liquid (engine oil, coolant and similar fluids).


General Caution

CAUTION: Observe all safety precautions and notes while working.


- Protect all painted surfaces and seats against dirt and scratches with a clean cloth or vinyl cover.

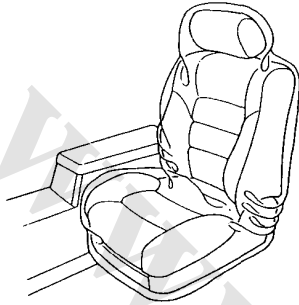


- Work safely and give your work your undivided attention. When either the front or rear wheels are to be raised, block the remaining wheels securely. Communicate as frequently as possible when work involves two or more workers. Do not run the engine unless the shop or working area is well ventilated.

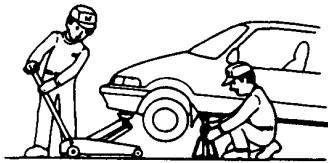


- Prior to removing or disassembling parts, they must be inspected carefully to isolate the cause for which service is necessary. Observe all safety notes and precautions and follow the proper procedures as described in this manual.

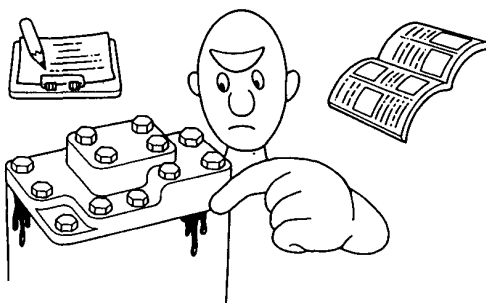


- Mark or place all removed parts in order in a parts rack so they can be reassembled in their original places.

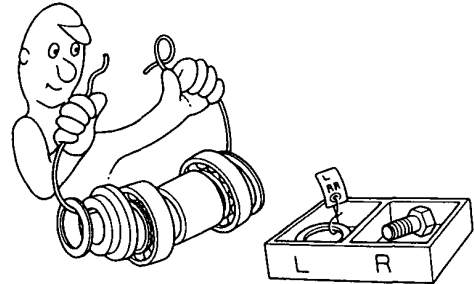

- Use the special tool when use of such a tool is specified.

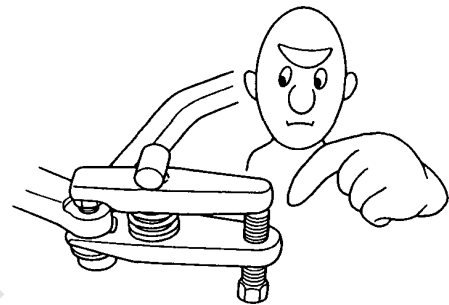

- Parts must be assembled with the proper torque according to the maintenance standards established.
- When tightening a series of bolts or nuts, begin with the center or large diameter bolts and tighten them in crisscross pattern in two or more steps.

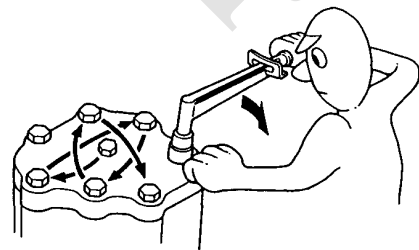


(cont'd)


Preparation of Work

General Caution (cont'd)


- Use new packings, gaskets, O-rings and cotter pins whenever reassembling.

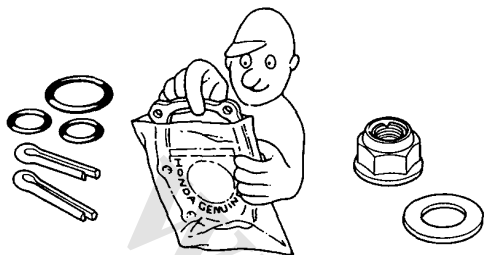


- Use genuine HONDA parts and lubricants or those equivalent. When parts are to be reused, they must be inspected carefully to make sure they are not damaged or deteriorated and are in good usable condition.

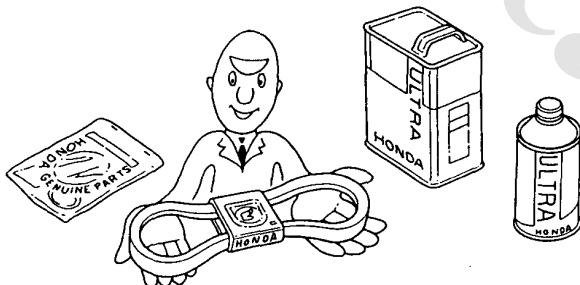


- Coat or fill parts with specified grease as specified (page 4-2). Clean all removed parts with solvent upon disassembly.

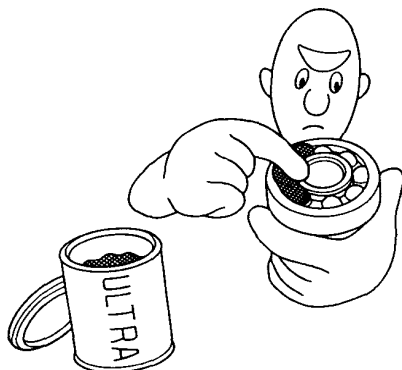

- Brake fluid and hydraulic components
 - When replenishing the system, use extreme care to prevent dust and dirt from entering the system.
 - Do not mix different brands of fluid as they may not be compatible.
 - Do not reuse drained brake fluid.
 - Because brake fluid can cause damage to painted and resin surfaces, care should be taken not to spill it on such materials. If spilled accidentally, quickly rinse it with water or warm water from painted or resin surfaces.
 - After disconnecting brake hoses or pipes, be sure to plug the openings to prevent loss of brake fluid.
 - Clean all disassembled parts only in clean BRAKE FLUID. Blow open all holes and passages with compressed air.

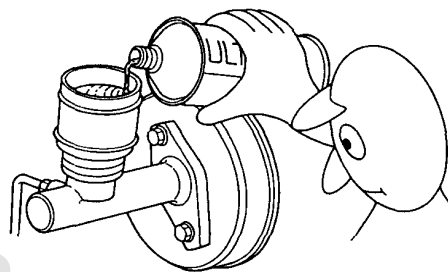


- Keep disassembled parts from air-borne dust and abrasives.
- Check that parts are clean before assembly.
- Avoid oil or grease getting on rubber parts and tubes, unless specified.
- Upon assembling, check every part for proper installation and operation.

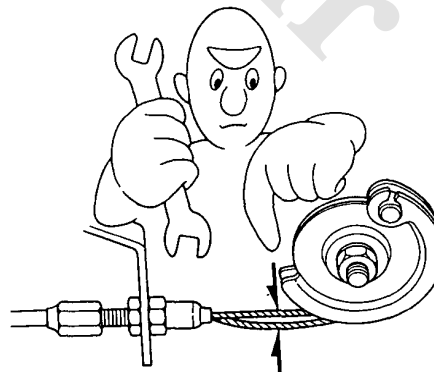




Electrical


- Before making any repairs on electric wires or parts, disconnect the battery cables from the battery starting with the negative (-) terminal.

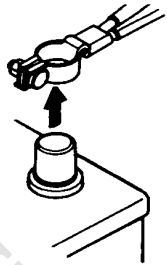


- After making repairs, check each wire or part for proper routing and installation. Also check to see that they are connected properly.
- Always connect the battery positive (+) cable first, then connect the negative (-) cable.

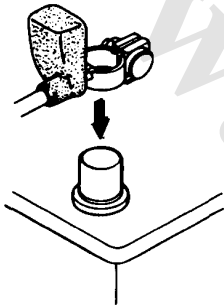

- Coat the terminals with clean grease after connecting the battery cables.
- Don't forget to install the terminal cover over the positive battery terminal after connecting.
- Before installing a new fuse, isolate the cause and take corrective measures, particularly when frequent fuse failure occurs.

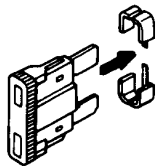


- Be sure to install the terminal cover over the connections after a wire or wire harness has been connected.

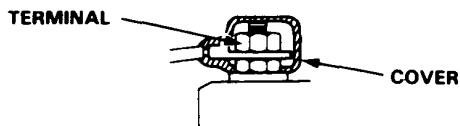


- As to locking connectors, be sure to disengage the lock before disconnecting.
- Conventional connectors may be of two types, those in which the lock is pressed to remove, and those in which the lock is pulled up to remove. Be sure to ascertain the type of locking device before beginning work. The following is a depiction of the means of disconnecting various typical connectors.

Press to disengage:

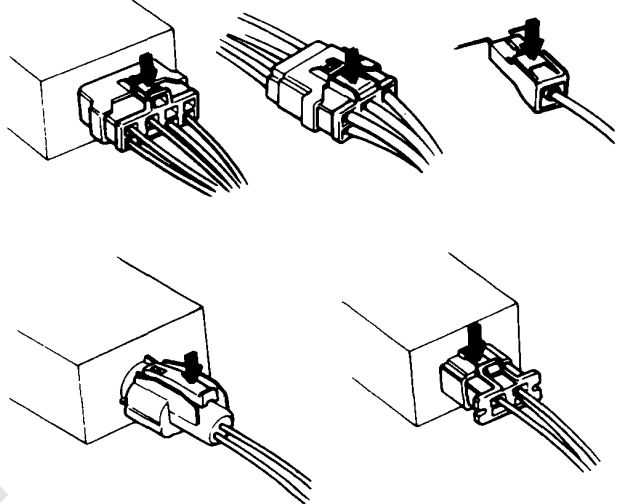

Pull up to disengage:

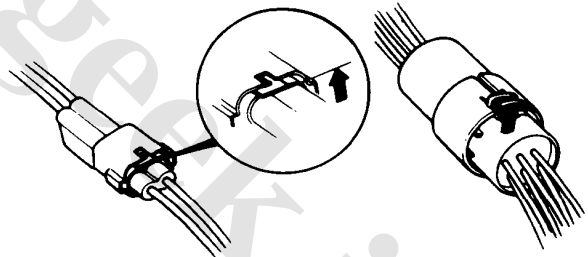


(cont'd)

Preparation of Work


Electrical (cont'd)

When new type connectors are used, connection and disconnection of them should be done paying attention to the following precautions.

- Because all the connectors except terminal of 1-P are equipped with push-down type locks, unlock them first before disconnecting the connectors.
- On the connectors installed on the bracket a pull type lock is equipped between the bracket and the connector.
Some connectors of this type can not be disconnected unless they are removed from their brackets. When disconnecting, check their shapes.
- On the bracket mounted connector with dual locks, remove the connector from the bracket before disconnecting.

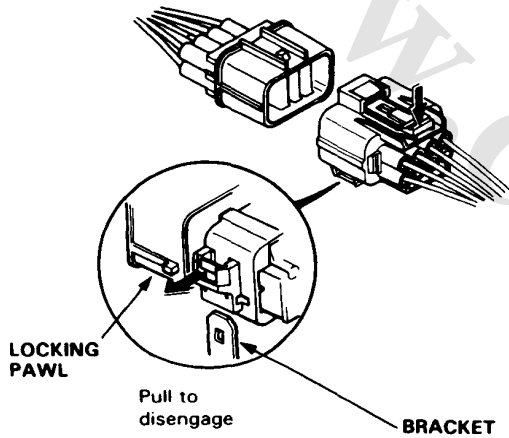


- Push the locking tab to disconnect.

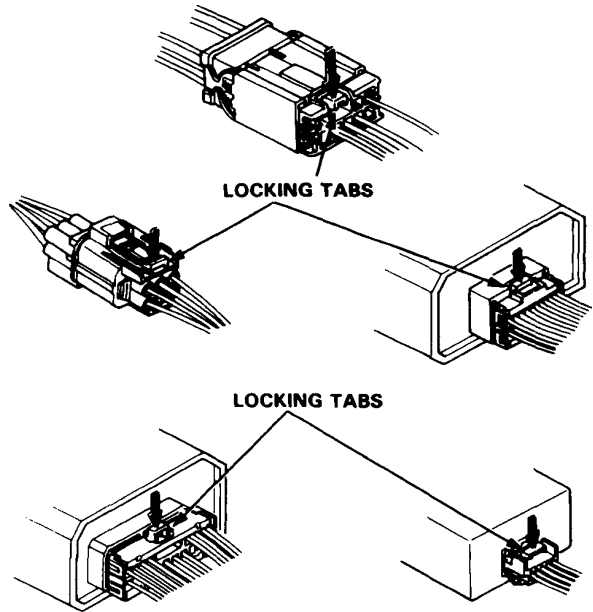




- Pull the locking tab to remove the connector from the bracket.

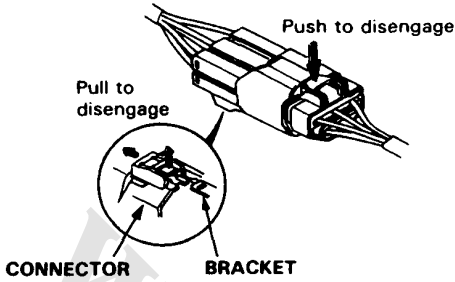


- When disconnecting locks, first press in the connector tightly (to provide clearance to the locking device), then operate the tab fully and remove the connector in the designated manner.

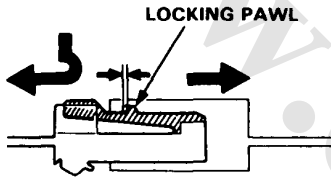


- When disconnecting a connector, pull it off from the mating connector by holding on both connectors.
- Never try to disconnect connectors by pulling on their wires.


Good

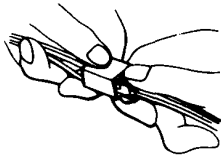

No Good

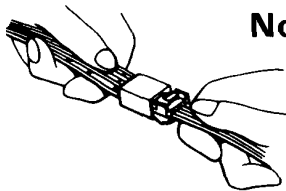


No Good

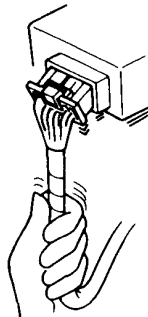


- Place the plastic cover over the mating connector after reconnecting. Also check that the cover is not distorted.

No Good

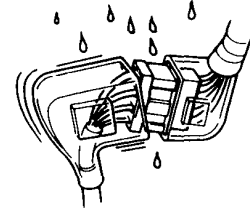


- Before connecting connectors, check to see that the terminals are in place and not bent or distorted.

No Good

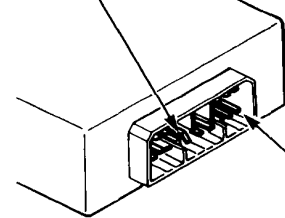


Good

- Check for loose retainer and rubber seals. The illustration shows examples of terminal and seal abnormality.

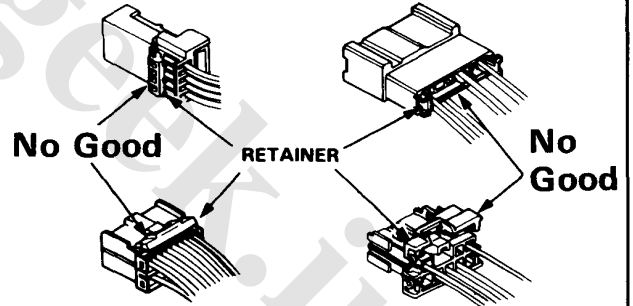

- Example of waterproof connector:


No Good

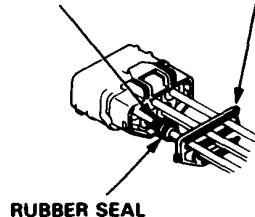

RUBBER SEAL

RETAINER

RUBBER SEAL




No Good

(cont'd)


Preparation of Work

Electrical (cont'd)


Good

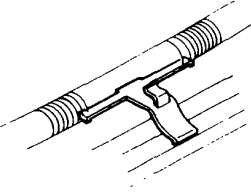


No Good

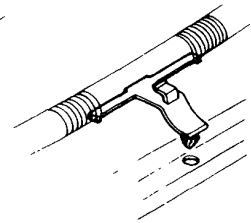


Good

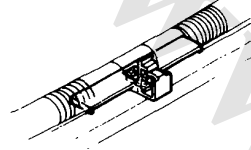


No Good

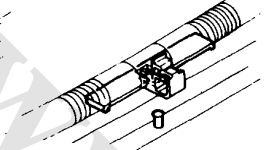


- After clamping, check each harness to be certain that it is not interfering with any moving or sliding parts of the vehicle.
- Keep wire harnesses away from the exhaust pipes and other hot parts.

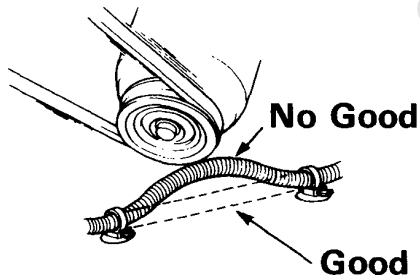


- Always keep a safe distance between wire harnesses and any heated parts.

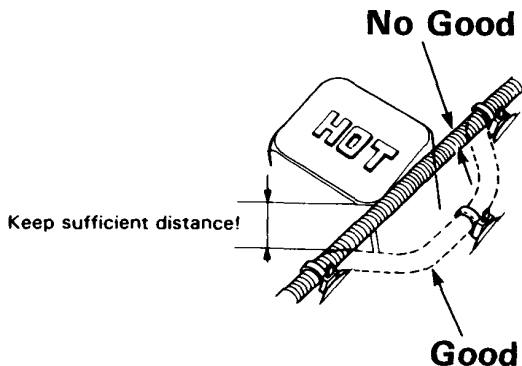


- Do not bring wire harnesses in direct contact with sharp edges or corners.
- Also avoid contact with the projected ends of bolts, screws and other fasteners.

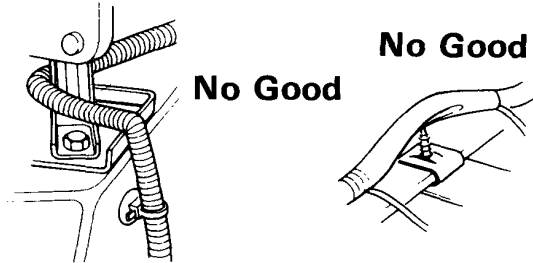


- Route harnesses so they are not pulled taut or slackened excessively.

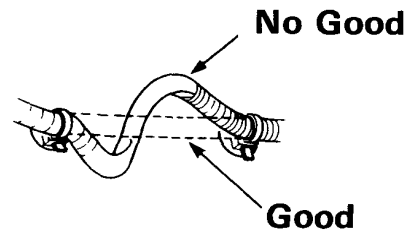

- Protect wires and harnesses with a tape or a tube if they are in contact with a sharp edge or corner.

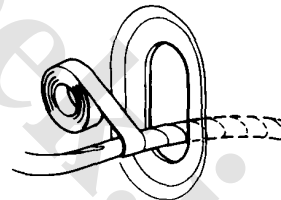


- Clean the attaching surface thoroughly if an adhesive is used. First, wipe with solvent or alcohol if necessary.

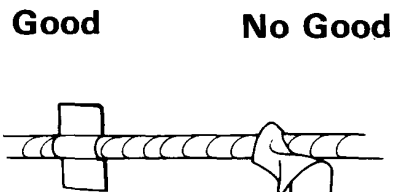




- For the connector which uses insulation grease, clean the connector then apply grease if the grease is insufficient or contaminated.

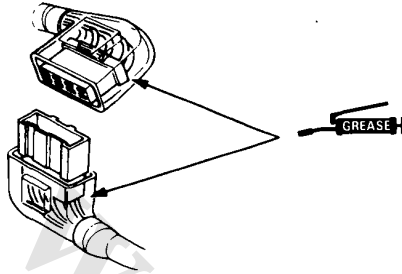


- Insert the connector tightly and make sure it is securely locked.
- Check all the wire harnesses are connected.
- There are two types of locking tab: one that you have to push and the other you should not touch when connecting the connector. Check the shape of the locking tab before connecting.
- The locking tab having a taper end should not be touched when connecting.




- The locking tab with an angle end should be pushed when connecting.




- Insert connectors fully until they will no longer go.
- The connectors must be aligned and engaged securely.
- Do not use wire harnesses with a loose wire or connector.

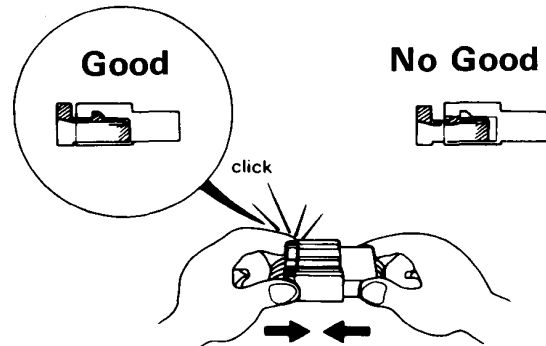


- Before connecting, check each connector cover for damage. Also make sure that the female connector is tight and not loosened from the previous use.

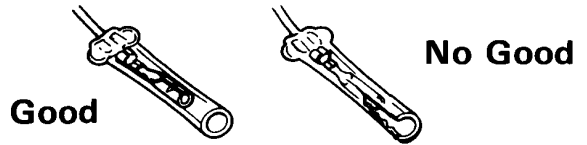

- Insert male connectors into the female connectors fully until they will no longer go.
- Be sure that plastic cover is placed over the connection.
- Position the wires so that the open end of the cover faces down.

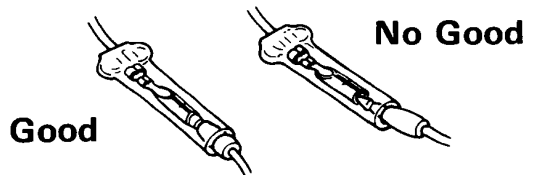

- Secure wires and wire harness to the frame with their respective wire bands at the designated locations. Position the wiring in the bands so that only the insulated surfaces contact the wires or harnesses.
- Remove with care not to damage the lock.

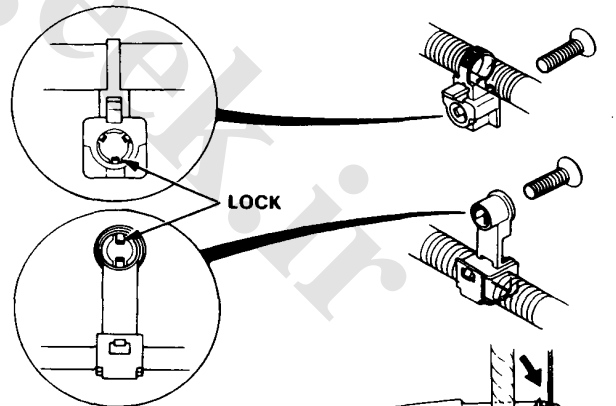


(cont'd)

Preparation of Work


Electrical (cont'd)

- Seat grommets in their grooves properly.

Good

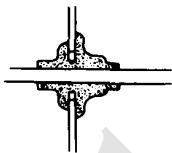

No Good

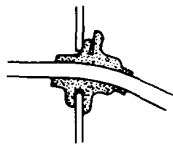

- Do not damage the insulation when connecting a wire.
- Do not use wires or harnesses with a broken insulation. Repair by wrapping with protective tape or replace with new ones if necessary.

No Good



Good




- After installing parts, make sure that wire harnesses are not pinched.

No Good




- After routing, check that the wire harnesses are not twisted or kinked.
- Wire harnesses should be routed so that they are not pulled taut, slackened excessively, pinched, or interfering with adjacent or surrounding parts in all steering positions.

- When using the Service Tester, follow the manufacturer's instructions and those described in the Shop Manual.

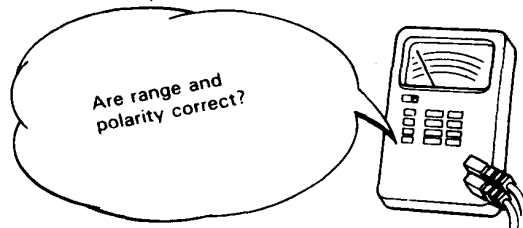


- Always insert the probe of the tester from the wire harness side (except waterproof connector).

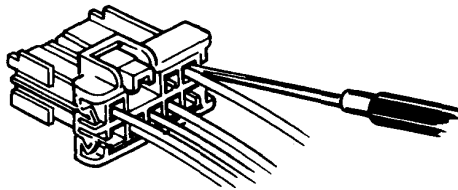


- Make sure to use the probe with a tapered tip.

Good




No Good



- Do not drop parts.

No Good

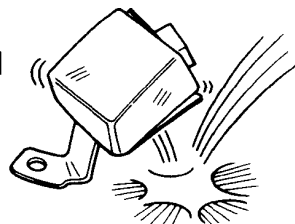



Symbol Marks

Abbreviation

The following symbols stand for:



:Apply engine oil.



:Apply brake fluid.



:Apply grease.




:Apply Automatic Transmission Fluid.



: Apply Power Steering Fluid.



:Apply or check vacuum.



:Sequence for removal or installation.

2WS	Two Wheel Steering
4WS	Four Wheel Steering
ABS	Anti-lock Brake System
A/C	Air Conditioner
A/T	Automatic Transmission
ATF	Automatic Transmission Fluid
B or BAT	Battery
CATA	Catalytic Converter
EACV	Electronic Air Control Valve
ECU	Electronic Control Unit
EGR	Exhaust Gas Recirculation
EX	Exhaust
GND	Ground
IG	Ignition
IN	Intake
INT	Intermittent
L	Left
LHD	Left Hand Drive
M/T	Manual Transmission
PCV	Positive Crankcase Ventilation
PGM-FI	Programmed Fuel-Injection
P/S	Power Steering
R.	Right
RHD	Right Hand Drive
SRS	Supplemental Restraint System
SW	Switch
SOL V	Solenoid Valve
TDC	Top Dead Center

P	Parking
R	Reverse
N	Neutral
D ₄	Drive Position (1st~4th)
D ₃	Drive Position (1st~3rd)
2	Fixed 2nd speed
1	Fixed 1st speed
S	S mode (D ₄ or D ₃)

Tool List

www.cargeek.ir

Special Tools

5. Engine

Number	Tool Number	Description	Qty	Remarks
①	07GAF—PH60300	Piston Pin Base Insert	1	07973-PE00400 may also be used
②	07GAF—PH70100	Pilot Collar	1	
③	07HAD—PJ70200	Valve Stem Seal Installer	1	
④	07HAF—PL20102	Piston Base Head	1	
⑤	07HAH—PJ70100	Valve Guide Reamer, 5.5 mm	1	
⑥	07JAB—0010000	Crank Pulley Holder Set	1	
⑥-1	07JAA—0010200	Socket Wrench, 19 mm	(1)	Component Tools
⑥-2	07JAB—0010200	Holder Handle	(1)	
⑦	07JAB—0010400	Pulley Holder Attachment, HEX 50 mm	1	
⑧	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
⑨	07JGG—0010100	Belt Tension Gauge	1	
⑩	07KAK—SJ40101 or 07KAK—SJ40100	Engine Tilt Hanger Set	1	
⑪	07LAB—PV00100 or 07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
⑫	07LAF—PT20100	Bearing Replacement Tool Set	1	
⑬	07LAG—PT20100	Balancer Shaft Lock Pin	1	
⑭	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑮	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑯	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑰	07406—0030000	Oil Pressure Gauge Adaptor	1	
⑱	07742—0010100	Valve Guide Remover, 5.5 mm	1	
⑲	07746—0010300	Driver Attachment, 42 x 47 mm	1	for Crankshaft for Balancer Shaft
⑳	07746—0010400	Driver Attachment, 52 x 55 mm	1	
㉑	07749—0010000	Driver	1	
㉒	07757—0010000	Valve Spring Compressor	1	
㉓	07912—6110001	Oil Filter Wrench	1	
㉔	07942—8920000	Valve Guide Driver, 5.5 mm	1	
㉕	07948—SB00101	Driver Attachment	1	
㉖	07973—PE00310	Piston Pin Driver Shaft	1	
㉗	07973—PE00320	Piston Pin Driver Head	1	
㉘	07973—6570500	Piston Base	1	
㉙	07973—6570600	Piston Base Spring	1	

6. Fuel and Emissions

Number	Tool Number	Description	Qty	Remarks
①	07JAZ—SH20100	R.P.M. Connecting Adaptor	1	
②	07LAA—PT50101 or 07LAA—PT50100	O ₂ Sensor Socket Wrench	1	
③	07LAJ—PT3010A or 07LAJ—PT30100	ECU Test Harness	1	
④	07LAJ—PT3020A or 07LAJ—PT30200	Test Harness	1	
⑤	07LAZ—PT30100	R.P.M. Connecting Adaptor	1	
⑤-1	07LAZ—PT30110	R.P.M. Connecting Adaptor (A)	(1)	Component Tools
⑤-2	07LAZ—PT30120	R.P.M. Connecting Adaptor (B)	(1)	
⑥	07406—0040001	Fuel Pressure Gauge Set	1	
⑥-1	07406—0040100	Pressure Gauge	(1)	Component Tools
⑥-2	07406—0040201	Hose Assembly	(1)	
⑦	07411—0020000	Digital Circuit Tester	1	
⑧	07614—0050100	Fuel Line Clamp	1	

7. Clutch

Number	Tool Number	Description	Qty	Remarks
①	07LAB—PV00100 or 07924—PD20003 or 07924—PD20002	Ring Gear Holder	1	
②	07JAF—PM7011A	Clutch Alignment Disc	1	
③	07LAF—PT00110	Clutch Alignment Shaft	1	
④	07936—3710100	Handle	1	



8. Manual Transmission

Number	Tool Number	Description	Qty	Remarks
①	07GAJ-PG20102	Mainshaft Inspection Tool Set	1	
①-1	07GAJ-PG20110	Mainshaft Holder	(1)	Component Tools
①-2	07GAJ-PG20130	Mainshaft Base	(1)	
②	07HAJ-PK40201	Preload Inspection Tool	1	
③	07JAC-PH80000	Adjusting Bearing Remover Set	1	
③-1	07JAC-PH80100	Bearing Remover Attachment	(1)	Component Tools
③-2	07JAC-PH80200	Bearing Remover Handle	(1)	
③-3	07741-0010201	Bearing Remover Weight	(1)	
④	07JAD-PH80400	Pilot Driver, 28 mm	1	
⑤	07JAD-SH30100	Oil Seal Driver	1	
⑥	07744-0010400	Pin Driver, 5.0 mm	1	07944-6110100 may also be used
⑦	07746-0010300	Attachment, 42 x 47 mm	1	
⑧	07746-0010400	Attachment, 52 x 55 mm	1	
⑨	07746-0010500	Attachment, 62 x 68 mm	1	
⑩	07746-0010600	Attachment, 72 x 75 mm	1	
⑪	07746-0030100	Driver	1	
⑫	07746-0030200	Inner Driver, 25 mm	1	
⑬	07749-0010000	Driver	1	
⑭	07944-SA00000	Pin Driver, 4.0 mm	1	
⑮	07947-6110501	Oil Seal Driver	1	
⑯	07979-PJ40001	Magnet Stand Base	1	

9. Automatic Transmission

Number	Tool Number	Description	Qty	Remarks
①	07GAB-PF50101 or 07GAB-PF50100	Mainshaft Holder	1	
②	07GAD-PG20100	Pin Driver, 5.0 mm	1	
③	07GAE-PG40200	Clutch Spring Compressor Set	1	
③-1	07HAE-PL50100	Clutch Spring Compressor Attachment	(1)	Component Tools
③-2	07GAE-PG40200	Clutch Spring Compressor Bolt Assembly	(1)	
③-3	07960-6120101	Clutch Spring Compressor Attachment	(1)	
④	07HAC-PK40101	Housing Puller	1	
④-1	07HAC-PK40110	Puller Base, Replacement	(1)	May also be used when combined with 07HAC-PK40101 or 07HAC-PK40100
⑤	07HAF-PK40100	Gear Installer	1	
⑥	07HAJ-PK40201 or 07GAJ-PG20200	Preload Inspection Tool	1	
⑦	07JAC-PH80000	Adjusting Bearing Remover Set	1	
⑦-1	07JAC-PH80100	Bearing Remover Attachment	(1)	Component Tools
⑦-2	07JAC-PH80200	Bearing Handle Assembly	(1)	
⑦-3	07741-0010201	Remover Weight	(1)	
⑧	07JAD-PH80101	Driver Attachment	1	
⑨	07JAD-PH80400	Pilot Driver, 28 x 30 mm	1	
⑩	07JAD-PN00100	Driver Attachment	1	
⑪	07LAE-PX40100	Clutch Spring Compressor Attachment	1	
⑫	07LAJ-PT30100 or 07LAJ-PT3010A	ECU Test Harness	1	
⑬	07LGC-0010100	Snap Ring Pliers	1	
⑭	07NAD-PX40100	Attachment, 78 x 80 mm	1	
⑮	07406-0020003	Oil Pressure Gauge	1	
⑯	07406-0020201	Oil Pressure Gauge Hose	1	
⑰	07406-0070000	Low Pressure Gauge	1	
⑱	07746-0010400	Attachment, 52 x 55 mm	1	
⑳	07746-0010500	Attachment, 62 x 68 mm	1	
㉑	07746-0010600	Attachment, 72 x 75 mm	1	
㉒	07746-0030100	Driver, 40 mm I.D.	1	
㉓	07749-0010000	Driver	1	
㉔	07947-6340500	Driver Attachment E	1	

Special Tools

10. Driveshafts

Number	Tool Number	Description	Qty	Remarks
①	07GAD—PG40100	Seal Driver Attachment	1	
②	07GAF—SD40700	Hub Dis/Assembly Base	2	
③	07LAD—SM40100	Seal Driver Attachment	1	
④	07LAF—SM40300	Support Base Attachment	1	
⑤	07746—0010200	Attachment, 37 x 40 mm	1	
⑥	07746—0010300	Attachment, 42 x 47 mm	1	
⑦	07746—0030100	Driver, 40 mm I.D.	1	
⑧	07749—0010000	Driver	1	
⑨	07947—SD90101	Seal Driver Attachment	1	
⑩	07965—SD90100	Support Base	1	

11. Steering

Number	Tool Number	Description	Qty	Remarks
①	07GAG—SD40300	Cylinder End Seal Slider	1	
②	07HAG—SF10100	Piston Seal Ring Guide	1	
③	07HAG—SF10200	Piston Seal Ring Sizing Tool	1	
④	07HAG—SF10300	Piston Seal Ring Guide	1	
⑤	07JGG—0010100	Belt Tension Gauge	1	
⑥-1	07LAK—SM40110	P/S Joint Adaptor (Pump)	1	
⑥-2	07LAK—SM40120	P/S Joint Adaptor (Hose)	1	
⑦	07MAC—SL00200	Ball Joint Remover, 28 mm	1	
⑧	07406—0010001	P/S Pressure Gauge Set	1	
⑧-1	07406—0010300	Pressure Control Valve	(1)	Component Tools
⑧-2	07406—0010400	Pressure Gauge	(1)	
⑨	07406—0010101	Bypass Tube Joint (included with 07406—0010001)	1	
⑩	07725—0030000	Universal Holder	1	
⑪	07746—0010300	Attachment, 42 x 47 mm	1	
⑫	07749—0010000	Driver	1	
⑬	07MAA—SLO0100 or 07916—SA50001	Locknut Wrench, 40 mm	1	
⑭	07947—6340300	Driver Attachment	1	
⑮	07974—SA50600	Pinion Seal Guide	1	

11. Steering (4WS only)

Number	Tool Number	Description	Qty	Remarks
①	07HAG—SF10000	4WS Tool Kit	1	
①-1	07HAG—SF10400	Pinion Seal Ring Sizing Tool	1	
①-2	07HAG—SF10500	Driven Seal Ring Guide	1	
②	07HAJ—SF10100	Rack Adjuster Gauge Holder Set	1	
③	07HAJ—SF10201	Rear Steering Center Lock Pin	1	
④	07HAJ—SF10300	Stroke Rod Holder Set	1	
⑤	07HAJ—SF10400	Inspection Adaptor	1	
⑥	07LAA—SM40100	Locknut Wrench, 43 mm	1	
⑦	07LAA—SM40200	Locknut Socket, 36 x 43 mm	1	
⑧	07LAG—SM40000	4WS Tool Kit	1	
⑧-1	07LAG—SM40100	Piston Seal Ring Guide	(1)	Component Tools
⑧-2	07LAG—SM40200	Piston Seal Ring Sizing Tool	(1)	
⑧-3	07LAG—SM40300	Cylinder End Seal Slider	(1)	
⑧-4	07LAG—SM40400	Cylinder End Seal Guide	(1)	
⑧-5	07LAG—SM40500	Tool Box	(1)	
⑨	07703—0010100	TORX® Bit T40	1	



12. Suspension

Number	Tool Number	Description	Qty	Remarks
①	07GAE—SE00101	Spring Compressor	1	
②	07GAF—SD40100	Hub Assembly Pin	1	
③	07GAF—SD40330	Ball Joint Remover/Installer	1	for 4WS
④	07GAF—SE00200	Hub Assembly Guide Attachment	1	for 4WS
⑤	07GAG—SD40700	Ball Joint Clip Installation Guide	1	
⑥	07HAF—SF10100	Ball Joint Dis/Assembly Tool Set	1	
⑥-1	07HAF—SF10110	Ball Joint Remover Base	1	
⑥-2	07HAF—SF10120	Ball Joint Installer Base	1	
⑥-3	07HAF—SF10130	Ball Joint Remover/Installer	1	
⑦	07HAJ—SF10201	Rear Steering Center Lock Pin	1	
⑧	07HGJ—0010001 or 07HGJ—0010000	Toe Inspection Gauge Set	1	for 4WS
⑨	07MAC—SL00200	Ball Joint Remover, 28 mm	1	
⑩	07MGK—0010001 or 07HGK—0010200	Wheel Alignment Gauge Attachment	1	
⑪	07703—0010100	TORX® BIT T40	1	for 4WS
⑫	07749—0010000	Driver	1	
⑬	07947—SB00100	Oil Seal Driver	1	for 4WS
⑭	07965—6340301	Hub Dis/Assembly Base	2	
⑮	07965—6920201	Hub Dis/Assembly Base	1	

13. Brakes

Number	Tool Number	Description	Qty	Remarks
①	07JAG—SD40100 or 07GAG—SE00100	Pushrod Adjustment Gauge	1	
②	07HAE—SG00100	Brake Spring Compressor	1	
③	07HAK—SG00110	Pressure Gauge Joint Pipe	1	for ABS
④	07LAF—SM40200	Brake Spring Installer	1	
⑤	07404—5790300	Pressure Gauge Attachment	1	
⑥	07406—5790200	Pressure Gauges	2	
⑦	07410—5790100	Pressure Gauge Attachment	2	
⑧	07410—5790500	Tube Joint Adaptor	1	
⑨	07510—6340101	Pressure Gauge Joint Pipe	2(1)	(): for ABS
⑩	07510—6340300	Vacuum Joint Tube A	1	
⑪	07914—SA50000	Snap Ring Pliers	1	
⑫	07921—0010001	Flare Nut Wrench	1	
⑬	07973—SA50000	Rear Caliper Guide	1	

13. Brakes (for ABS)

Number	Tool Number	Description	Qty	Remarks
①	07HAA—SG00101 or 07HAA—SG00100	Bleeder T-Wrench	1	
②	07HAJ—SG00602 or 07HAJ—SG00601 or 07508—SB00000 and 07HAJ—SG00400	ALB Checker ALB Checker ALB Checker Adaptor	1 1 1 1	

Special Tools

14. Body

Number	Tool Number	Description	Qty	Remarks
①	07GAZ-SE30100	Torsion Bar Assembly Tool	1	

15. Heater and Air Conditioner

Number	Tool Number	Description	Qty	Remarks
①	07JGG-0010100	Belt Tension Gauge	1	
②	07LAJ-PT3010A or 07LAJ-PT30100	ECU Test Harness	1	
③	07NAB-HAC0100 or 07LAB-SK70100	A/C Clutch Holder	1	

16. Electrical


Number	Tool Number	Description	Qty	Remarks
①	07GAC-SE00200	Fuel Sender Wrench	1	
②	07JGG-0010100	Belt Tension Gauge	1	
③	07HAZ-SG00500	Deployment Tool	1	for SRS
④	07LAZ-SL40300	SRS Test Harness C	1	for SRS type I
⑤	07LAZ-SL40400	SRS Test Harness D	1	
⑥	07MAZ-SL00500	SRS Test Harness A	1	
⑦	07MAZ-SP00500	SRS Test Harness B	1	
⑧	07MAZ-SS10100	SRS Disposal Bracket	1	for SRS type II

- Component Locations**
- Index
- System Description**
- Vacuum Connections
- PGM - FI Control System**
- Troubleshooting Flowcharts**
- Oxygen Sensor
- Oxygen Sensor Heater
- Fuel Supply System
- Fuel Supply System**
- Fuel Pressurer
- Pressure Regulator

www.cargeek.ir


Component Locations

Index

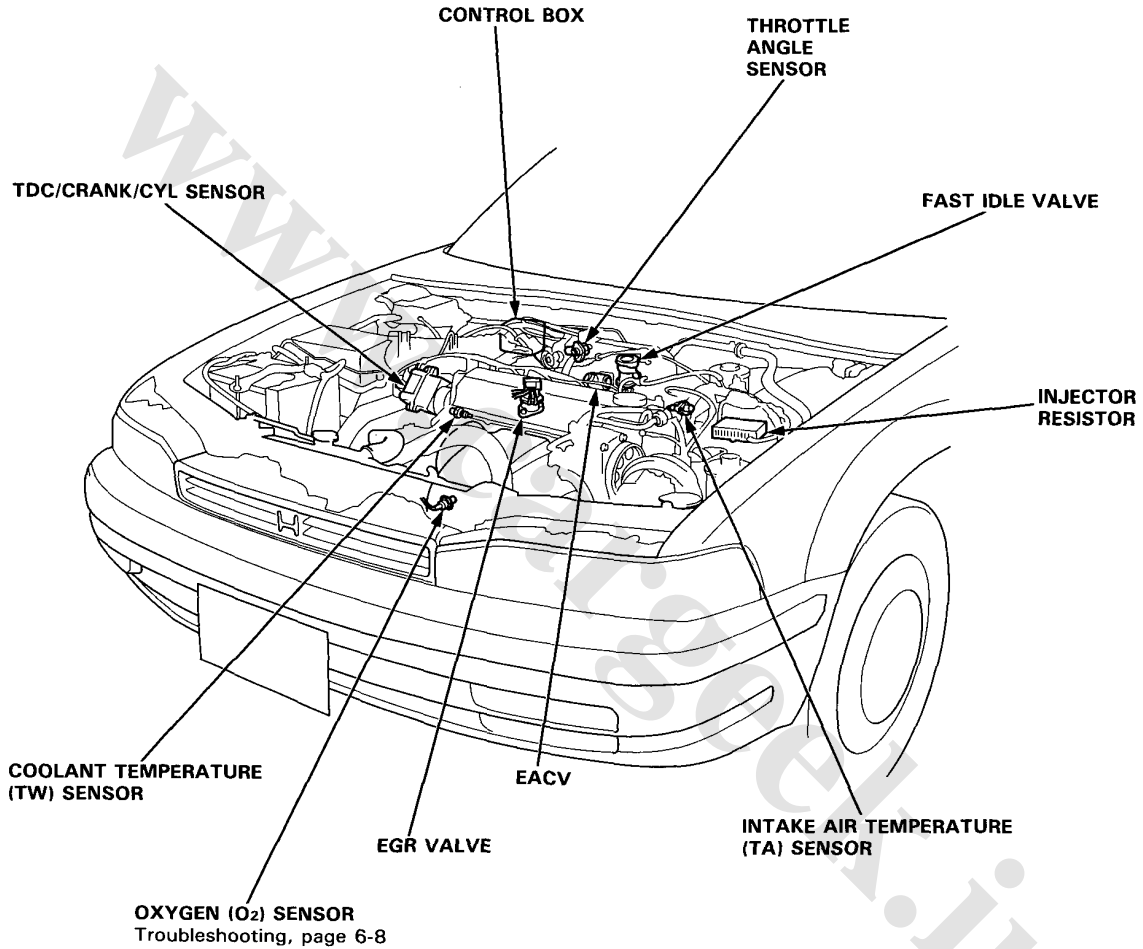


System Description

Vacuum Connections

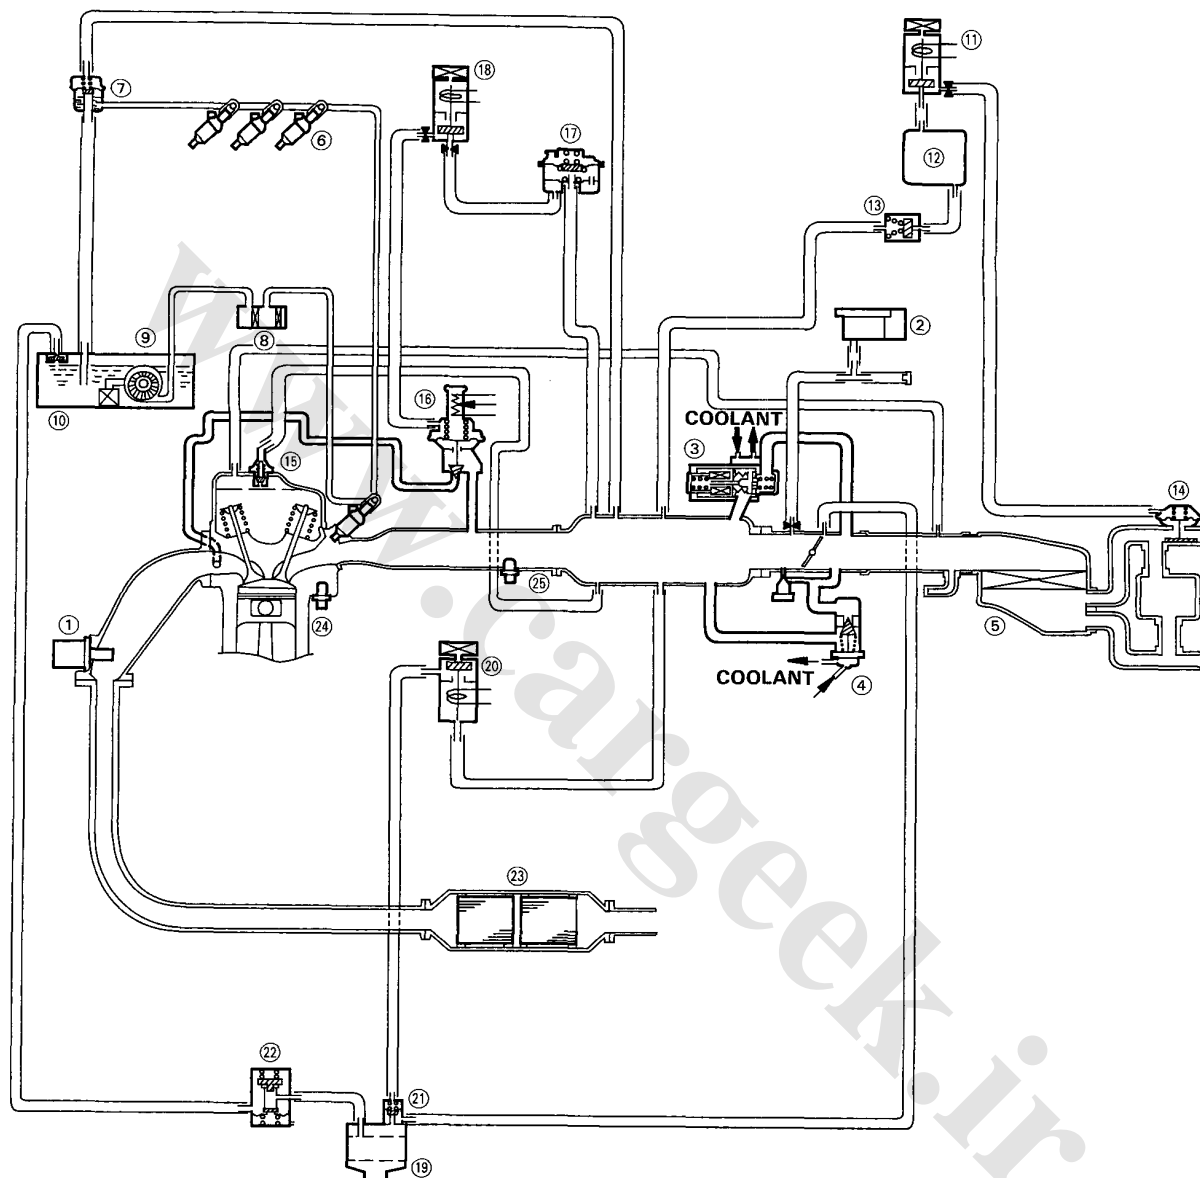

- ① OXYGEN (O₂) SENSOR
- ② MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR
- ③ ELECTRONIC AIR CONTROL VALVE (EACV)
- ④ FAST IDLE VALVE
- ⑤ AIR CLEANER
- ⑥ FUEL INJECTOR
- ⑦ PRESSURE REGULATOR
- ⑧ FUEL FILTER
- ⑨ FUEL PUMP
- ⑩ FUEL TANK
- ⑪ INTAKE CONTROL SOLENOID VALVE
- ⑫ AIR CHAMBER


- ⑬ CHECK VALVE
- ⑭ INTAKE CONTROL DIAPHRAGM
- ⑮ PCV VALVE
- ⑯ EGR VALVE
- ⑰ CONSTANT VACUUM CONTROL (CVC) VALVE
- ⑱ EGR CONTROL SOLENOID VALVE
- ⑲ CHARCOAL CANISTER
- ⑳ PURGE CUT-OFF SOLENOID VALVE
- ㉑ PURGE CONTROL DIAPHRAGM VALVE
- ㉒ TWO-WAY VALVE
- ㉓ CATALYTIC CONVERTER
- ㉔ COOLANT TEMPERATURE (TW) SENSOR
- ㉕ INTAKE AIR TEMPERATURE (TA) SENSOR

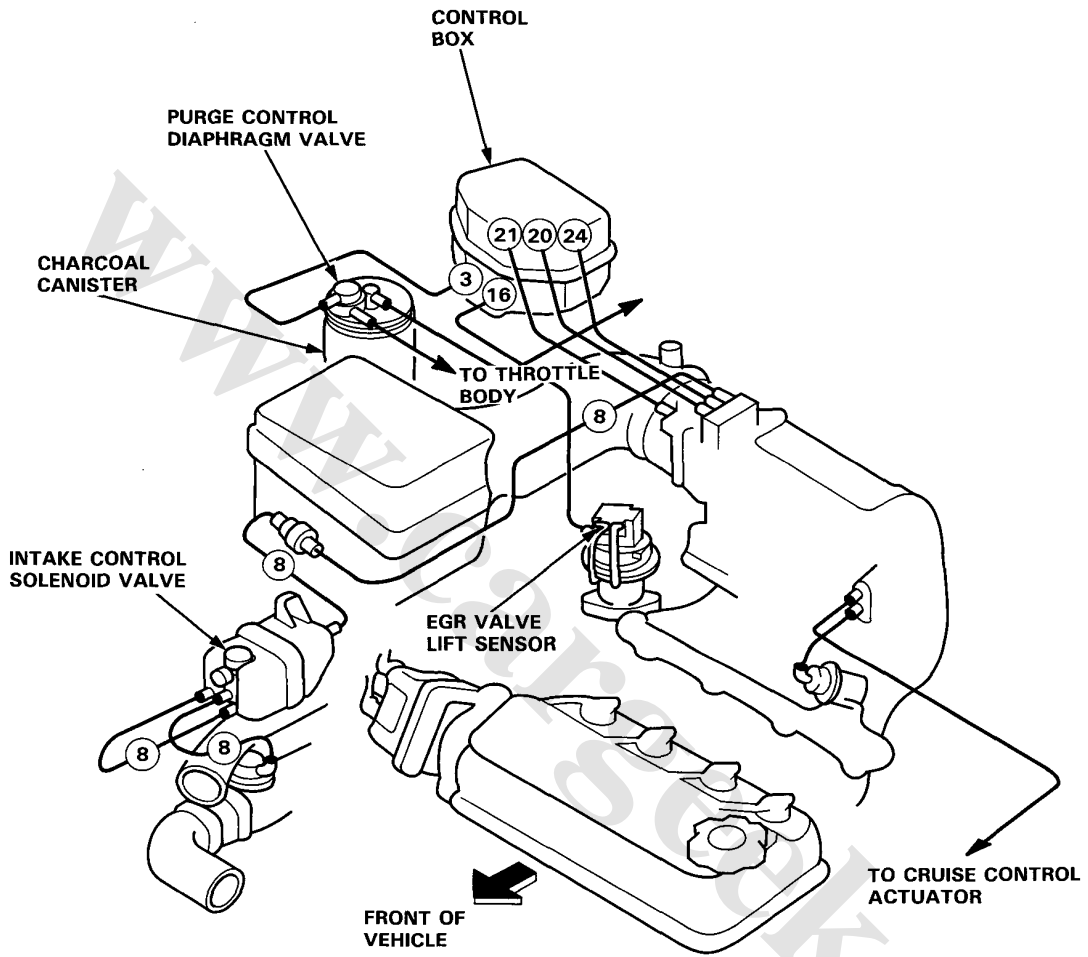

System Description


Vacuum Connections

Control Box (LHD):

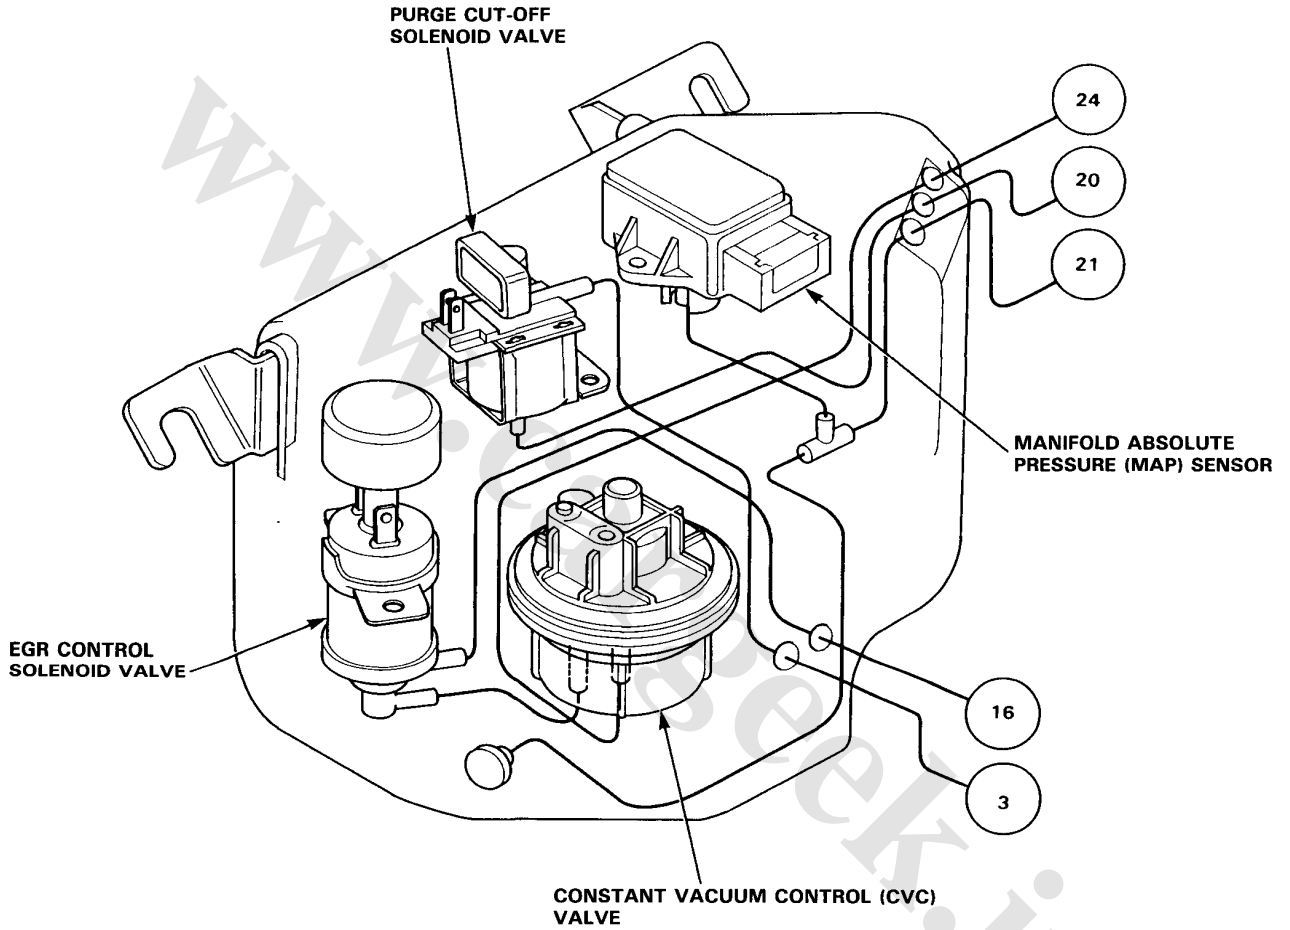




Control Box (RHD):

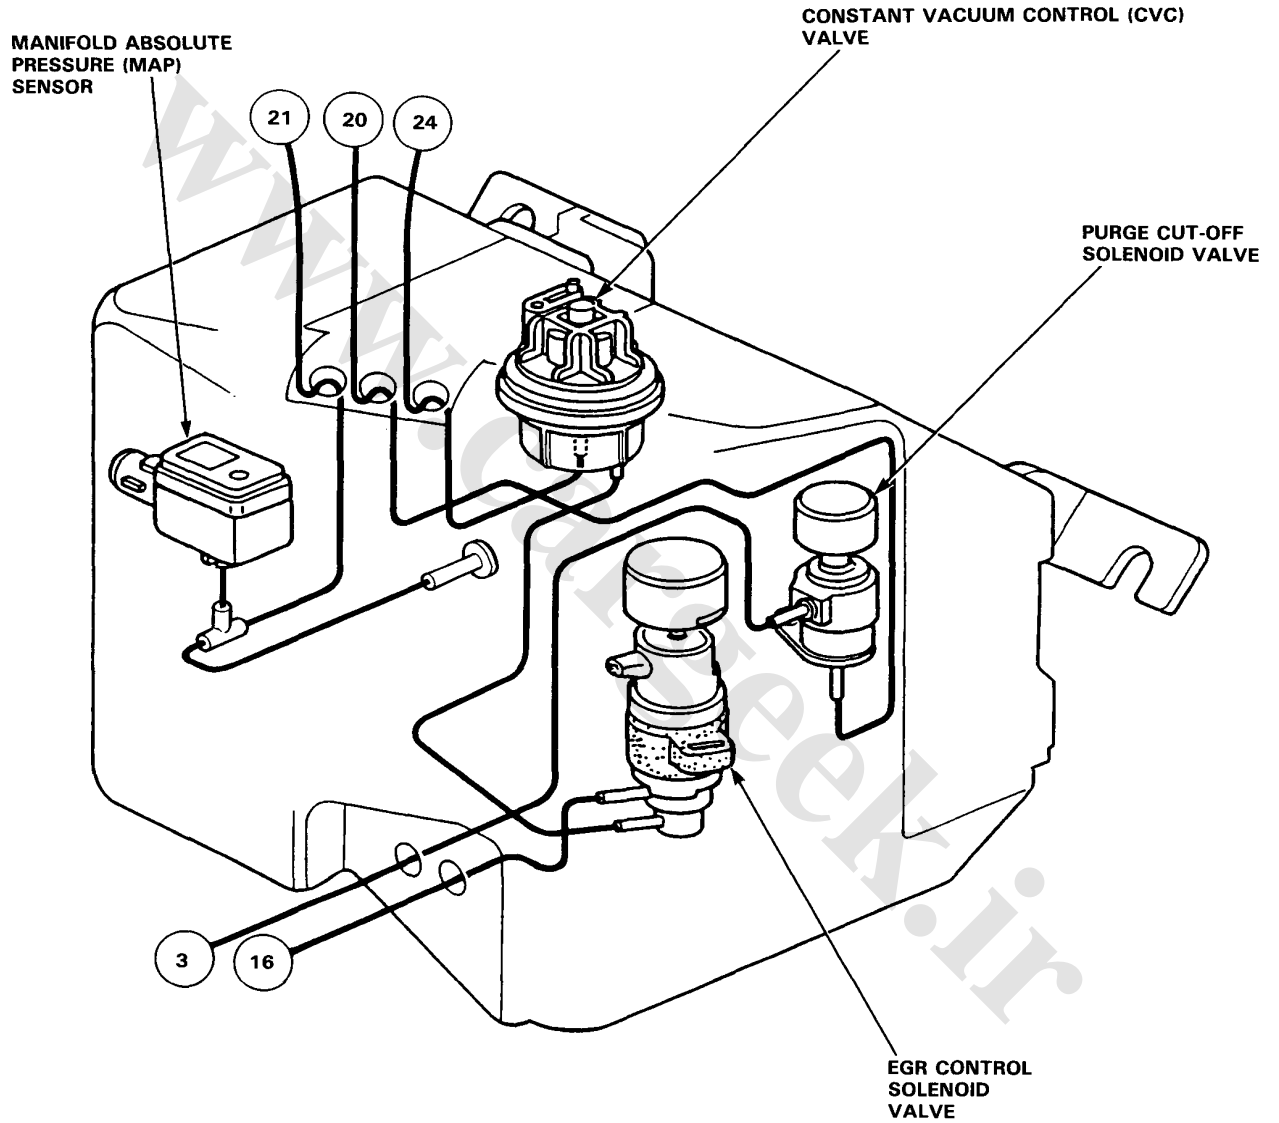


PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor



Self-diagnosis Check Engine light indicates code 1: A problem in the Oxygen (O₂) Sensor circuit.



- Check Engine light has been reported on.
- With service check connector jumped, CODE 1 is indicated.

Do the ECU Reset Procedure.

Warm up engine to normal operating temperature (the cooling fan comes on).

Run engine for 60 seconds.

Road test with the manual transmission in 4th gear. Starting at 1600 min⁻¹ (rpm), accelerate using wide open throttle for at least 5 seconds. Then decelerate for at least 5 seconds with the throttle completely closed.

Is Check Engine light on and does it indicate CODE 1?

NO


Intermittent failure, system is OK at this time. Check for poor connections or loose wires at the O₂ sensor and ECU.

YES

Go to page 6-12 and perform test for CODE 43.

PGM-FI Control System

Troubleshooting Flowchart — Oxygen Sensor Heater

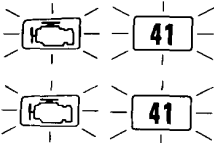

Self-diagnosis Check Engine light indicates code 41: A problem in the Oxygen (O₂) Sensor Heater circuit.

— Engine is running.
— Check Engine light has been reported on, with service check connector jumped, CODE 41 is indicated.

Turn the ignition switch OFF.

Remove BACK UP fuse in the under-hood relay box for 10 seconds to reset ECU.

Start engine.

Is Check Engine light on and does it indicate CODE 41?

NO

Intermittent failure, system is OK at this time (test driving may be necessary).
Check for poor connections or loose wires at O₂ sensor and ECU.

YES

Stop engine.

Disconnect the 4P connector from the O₂ sensor.

Measure resistance between terminals A and B on the O₂ sensor.

Is there 10–40 Ω?

NO

Replace the O₂ sensor.

YES

Check for continuity to body ground on each terminal on the O₂ sensor.

Is there continuity?

YES

Replace the O₂ sensor.

NO

Check for continuity between terminal A and terminals C and D individually.


Is there continuity?

YES

Replace the O₂ sensor.

NO

(To page 6-11)


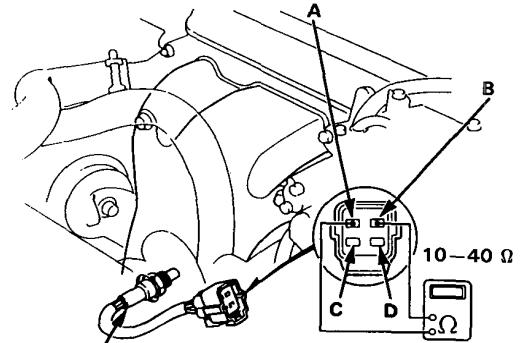


O₂ SENSOR
45 N·m (45 kg·m, 33 lb·ft)

DIGITAL MULTIMETER
07411-002000




(From page 6-10)

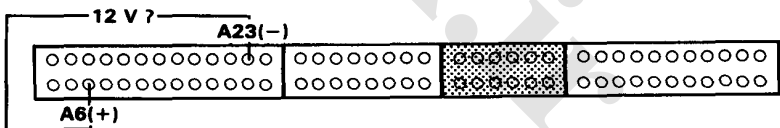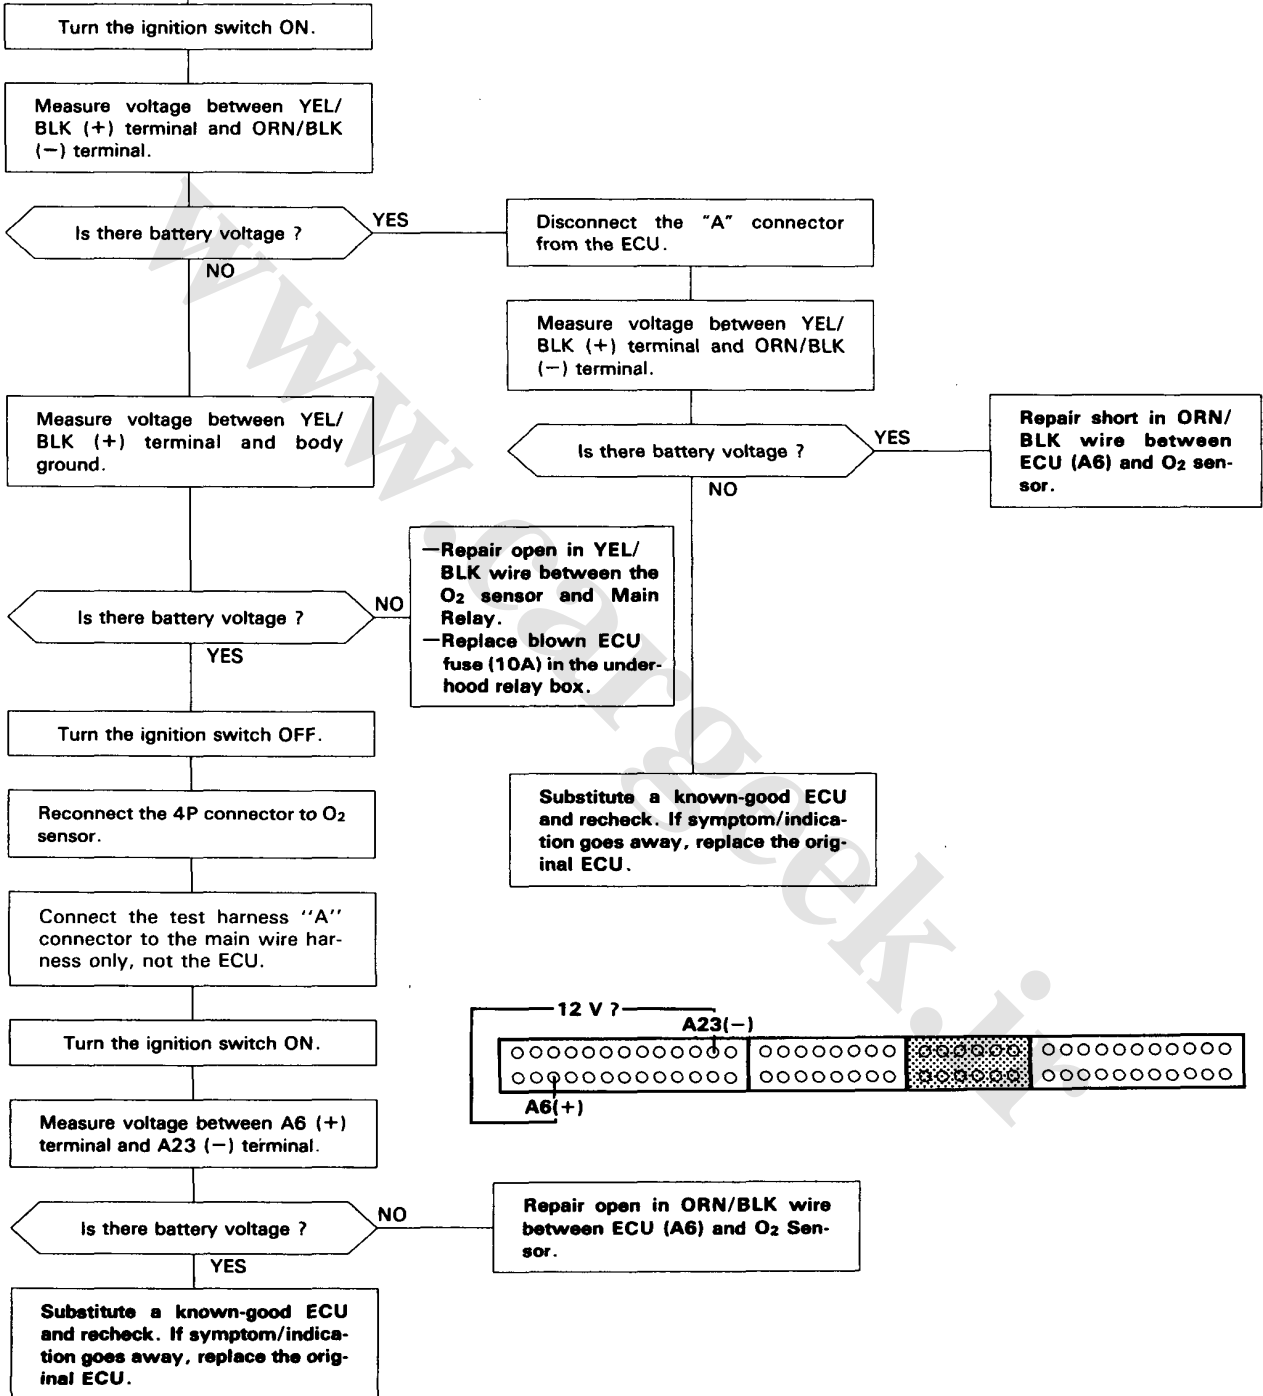

PGM-FI Control System

Troubleshooting Flowchart — Fuel Supply System

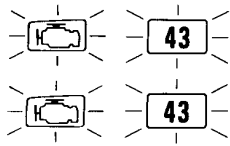

Self-diagnosis Check Engine light indicates code 43: A problem in the Oxygen (O₂) Sensor circuit or a problem in the Fuel Supply System.

- Check Engine light has been reported on.
- With service check connector jumped, CODE 43 is indicated.

From code 1 trouble-shooting (page 6-8).

Is the 43 code accompanied by the Check Engine light and poor driveability? **YES** → Go to Fuel Supply System.

NO
Do the ECU Reset Procedure.

Warm up engine to normal operating temperature (the cooling fan comes on).

Hold engine at 3,000 min⁻¹ (rpm) for 2 minutes.

Is the Check Engine light on and does it indicate CODE 43? **NO** → Intermittent failure, system is OK at this time (test drive may be necessary). Check for poor connections or loose wires at O₂ sensor and ECU.


YES

Turn the ignition switch OFF.

- NOTE:
- Use DIGITAL CIRCUIT TESTER (07411-0020000)
 - Use 2 Volt range.

Connect the test harness between the ECU and connectors.

With the ignition switch OFF, wait for at least 2 minutes.



Turn the ignition switch ON.


Voltage should start at 0.4–0.5 V when the ignition switch is first turned on, and decrease to below 0.1 V in less than 2 minutes.

Measure voltage between D14 (+) terminal and A26 (-) terminal as soon as the ignition switch is turned on.


(To page 6-13)




(From page 6-12)

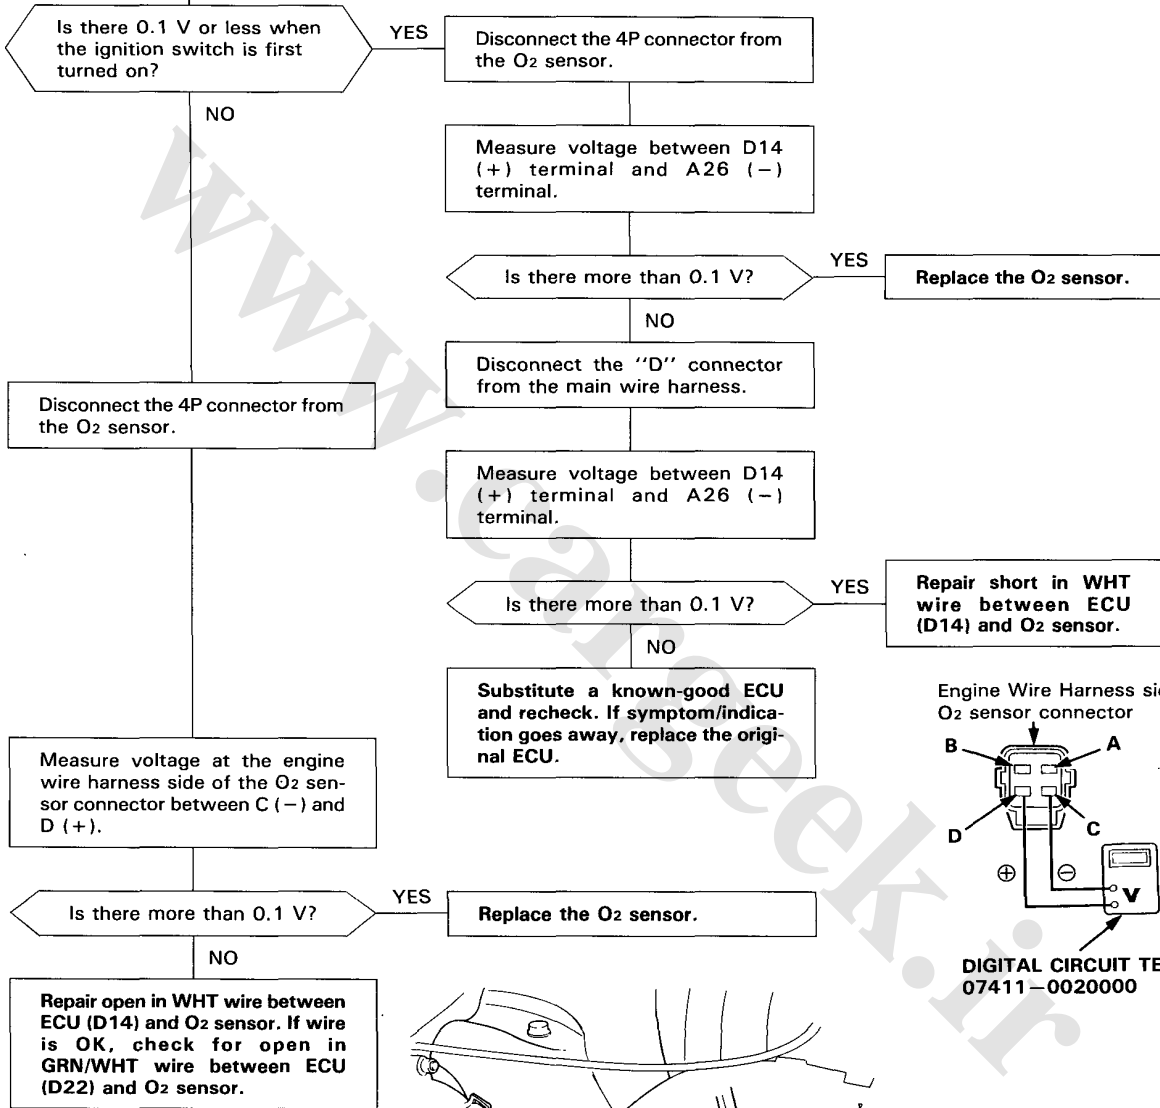

Engine Wire Harness side of the O2 sensor connector

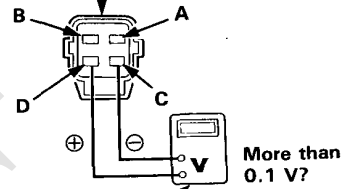

DIGITAL CIRCUIT TESTER
07411-0020000

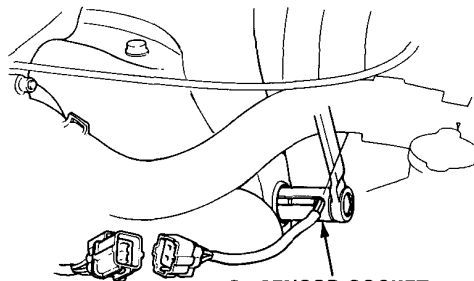

O2 SENSOR SOCKET
WRENCH
07LAA-PT50100
45 N·m (4.5 kg·m, 33 lb·ft)

Fuel Supply System

Fuel Pressure


Relieving

⚠ WARNING

- Do not smoke while working on the fuel system. Keep open flames or sparks away from the work area.
- Be sure to relieve fuel pressure while the engine is off.

NOTE: Before disconnecting fuel pipes or hoses, release pressure from the system by loosening the 6 mm service bolt at the fuel pipe.

1. Remove fuel filler cap.
2. Disconnect the battery negative cable from the battery negative terminal.
3. Use a box end wrench on the 6 mm service bolt at the fuel pipe, while holding the special banjo bolt with another wrench.
4. Place a rag or shop towel over the 6 mm service bolt.
5. Slowly loosen the 6 mm service bolt one complete turn.

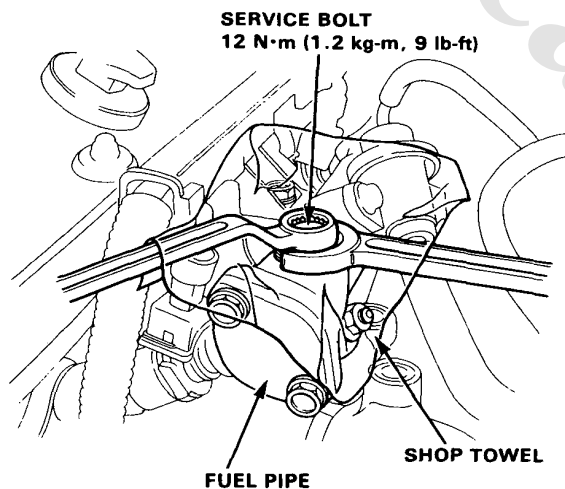

NOTE:

- A fuel pressure gauge can be attached at the 6 mm service bolt hole.
- Always replace the washer between the service bolt and the special banjo bolt, whenever the service bolt is loosened to relieve fuel pressure.
- Replace all washers whenever the bolts are removed to disassemble parts.

Inspection


1. Relieve fuel pressure.
2. Remove the service bolt on the fuel pipe while holding the banjo bolt with another wrench and attach the fuel pressure gauge.
3. Start the engine. Measure the fuel pressure with the engine idling and vacuum hose of the pressure regulator disconnected.

Pressure should be:
275–324 kPa (2.8–3.3 kg/cm², 40–47 psi)

4. Reconnect vacuum hose to the pressure regulator.

Pressure should be:
216–265 kPa (2.2–2.7 kg/cm², 31–38 psi)

FUEL PRESSURE GAUGE
07406–004001

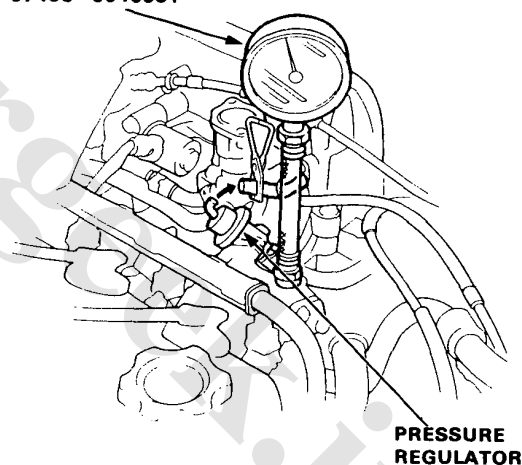

- If the fuel pressure is not as specified, first check the fuel pump. If the pump is OK, check the following:
 - If the pressure is higher than specified, inspect for:
 - Pinched or clogged fuel return hose or piping.
 - Faulty pressure regulator (page 6-15).
 - If the pressure is lower than specified, inspect for:
 - Clogged fuel filter.
 - Pressure regulator failure (page 6-15).
 - Leakage in the fuel line.



Pressure Regulator


Testing

⚠ WARNING Do not smoke during the test. Keep open flames away from your work area.

1. Attach a pressure gauge to the service port of the fuel pipe (page 6-14).

Pressure should be:
275–324 kPa (2.8–3.3 kg/cm², 40–47 psi)
(with the regulator vacuum hose disconnected)


FUEL PRESSURE GAUGE
07406–0040001

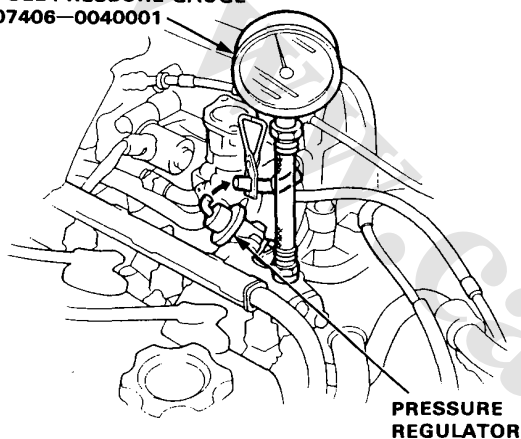

2. Reconnect the vacuum hose to the pressure regulator.
3. Check that the fuel pressure rises when the vacuum hose from the regulator is disconnected again.

- If the fuel pressure did not rise, check to see if it rise with the fuel return hose lightly pinched.
- If the fuel pressure still does not rise, replace the pressure regulator.

PRESSURE REGULATOR

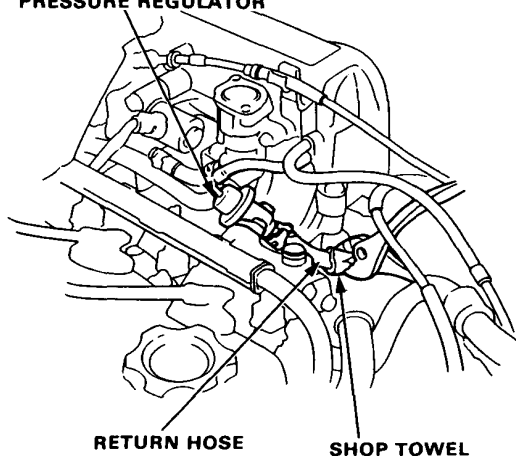


Replacement

⚠ WARNING Do not smoke while working on fuel system. Keep open flame way from work area.

1. Place a shop towel under pressure regulator, then relieve fuel pressure (page 6-14).
2. Disconnect the vacuum hose and fuel return hose.
3. Remove the two 6 mm retainer bolts.

O-RING
Replace.

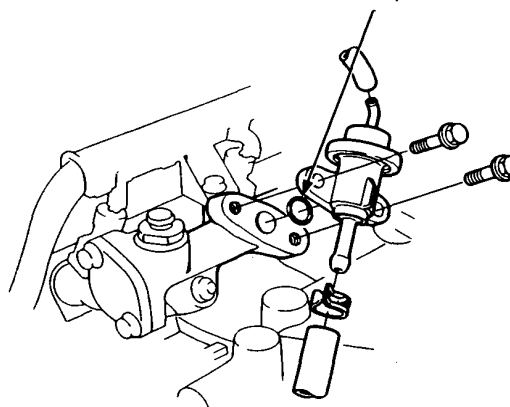

NOTE:

- Replace the O-ring.
- When assembling the regulator, apply clean engine oil to the O-ring and assemble it into its proper position, taking care not to damage the O-ring.

Ignition System
Interlock System
Integrated Control Unit
Seat Belt Reminder System
Key - in Reminder System
Power Door Locks

www.cargeek.ir


Ignition System

Ignition Timing Inspection and Setting (Fuel-Injected Engine)


NOTE: To be made at idle with the service check connector shorted, the blue service check connector is located in the front passenger corner under the dashboard.

1. Start the engine and allow it to warm up (radiator fan comes on).
2. Connect the ORN/RED and GRN/WHT terminals of the service check connector (BLU) with jumper wire.

NOTE: The illustration shows RHD.

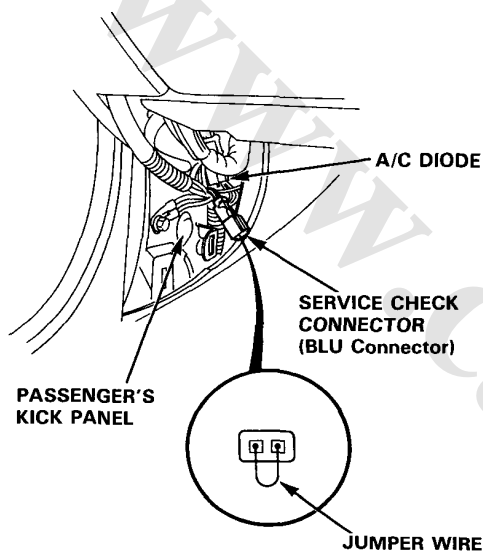

3. Connect a timing light to the No. 1 ignition wire. Remove the rubber cap from the inspection window in the flywheel/drive plate housing. While the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

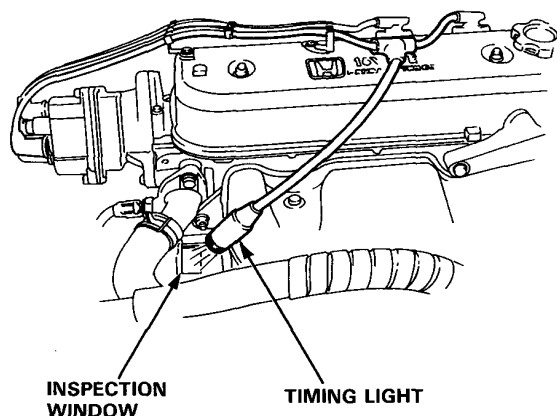


4. Adjust ignition timing, if necessary, to the following specifications:


Ignition Timing

- All models: $15 \pm 2^\circ$ BTDC (RED) at $770 \pm 50 \text{ min}^{-1}$ (rpm) in neutral

NOTE: The illustration shows A/T.

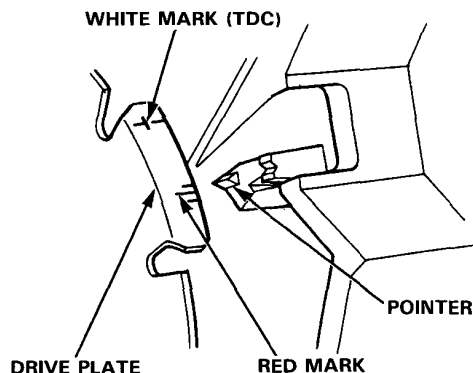

5. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing counterclockwise to advance the timing, or clockwise to retard the timing.

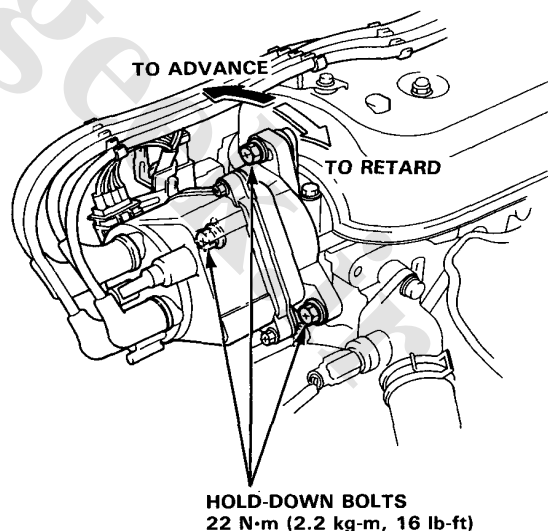


6. Tighten the adjusting bolts and recheck the timing.
7. Remove the jumper wire and install the rubber cap to the inspection window.



Ignition Timing Inspection and Setting (Carbureted Engine)

< KP, KT, KU and KY models >

1. Disconnect the vacuum hose from the vacuum advance diaphragm, then connect the vacuum pump/gauge to the vacuum hose.

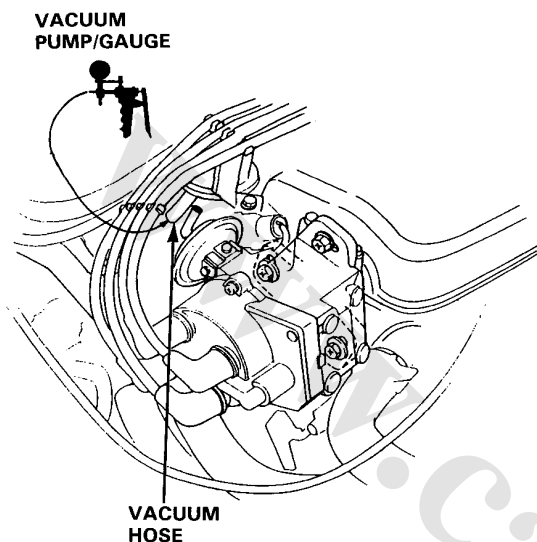


2. Start the engine.

KP, KT, KU and KY (M/T) models: Let it idle.

KY (A/T) model: Hold the engine at $4,000 \text{ min}^{-1}$ (rpm).

3. Check the vacuum hose for vacuum. The vacuum hose should have vacuum.
 - If the vacuum hose has no vacuum, check the vacuum hose of proper connection, cracks, blockage or disconnected hose.
4. Connect the vacuum hose to the vacuum advance diaphragm and allow the engine to warm up (radiator fan comes on).
5. Disconnect the vacuum hose from the vacuum advance diaphragm and plug them.

6. Connect a timing light to the No. 1 ignition wire. Remove the rubber cap from the inspection window in the flywheel/drive plate housing. While the engine idles, point the light toward the pointer on the flywheel (for M/T), or on the drive plate (for A/T).

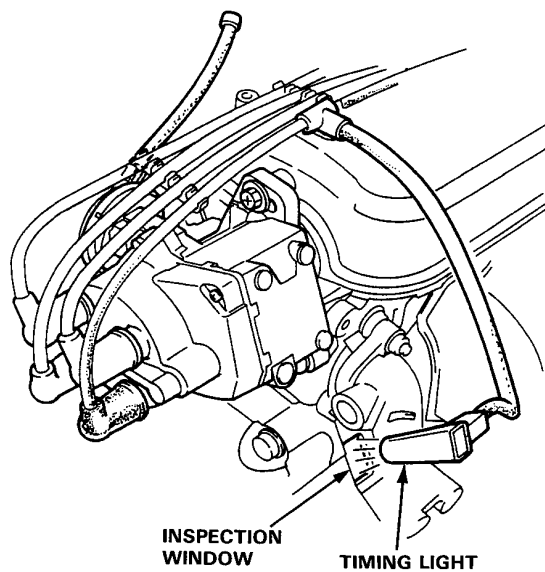


7. Read initial timing when timing mark is aligned to the pointer.

Initial Timing: 0° TDC (Except KY-A/T model)
 15° ATDC (KY-A/T model)

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

NOTE: The illustration shows A/T.

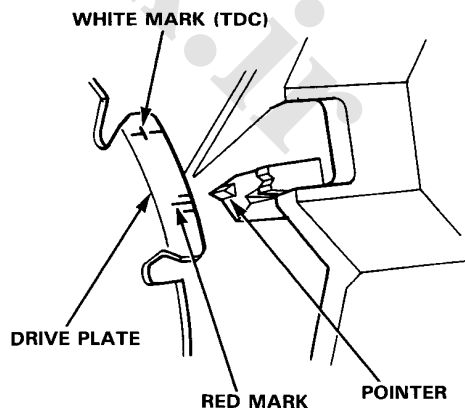


(cont'd)

Ignition System

Ignition Timing Inspection and Setting (Carbureted Engine) (cont'd)

8. Adjust as necessary by loosening the distributor adjusting bolts, and turn the distributor housing clockwise to retard the timing, or counterclockwise to advance the timing.

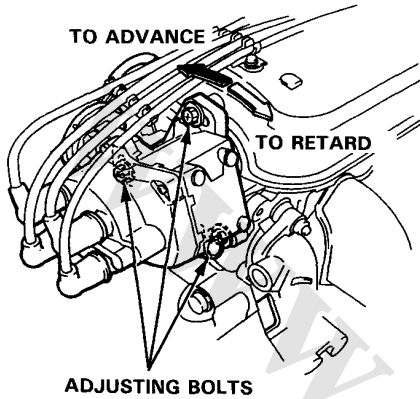

9. Tighten the distributor adjusting bolts, then recheck the timing.
10. Install the rubber cap to the inspection window.

11. Connect the vacuum hose to the vacuum advance diaphragm and inspect ignition timing at idle.

Ignition Timing

M/T: $15^\circ \pm 2^\circ$ BTDC (RED)

A/T: $10^\circ \pm 2^\circ$ BTDC (RED)


KY-A/T: $0^\circ \pm 2^\circ$ TDC (WHITE)

- Manual Transmission [at $800 \pm 50 \text{ min}^{-1}$ (rpm) in neutral]
- Automatic Transmission [at $750 \pm 50 \text{ min}^{-1}$ (rpm) in gear]

If advance is not as specified, check the vacuum advance diaphragm and distributor advance mechanism.

Integrated Control Unit

Circuit Diagram (Sedan: KY model)

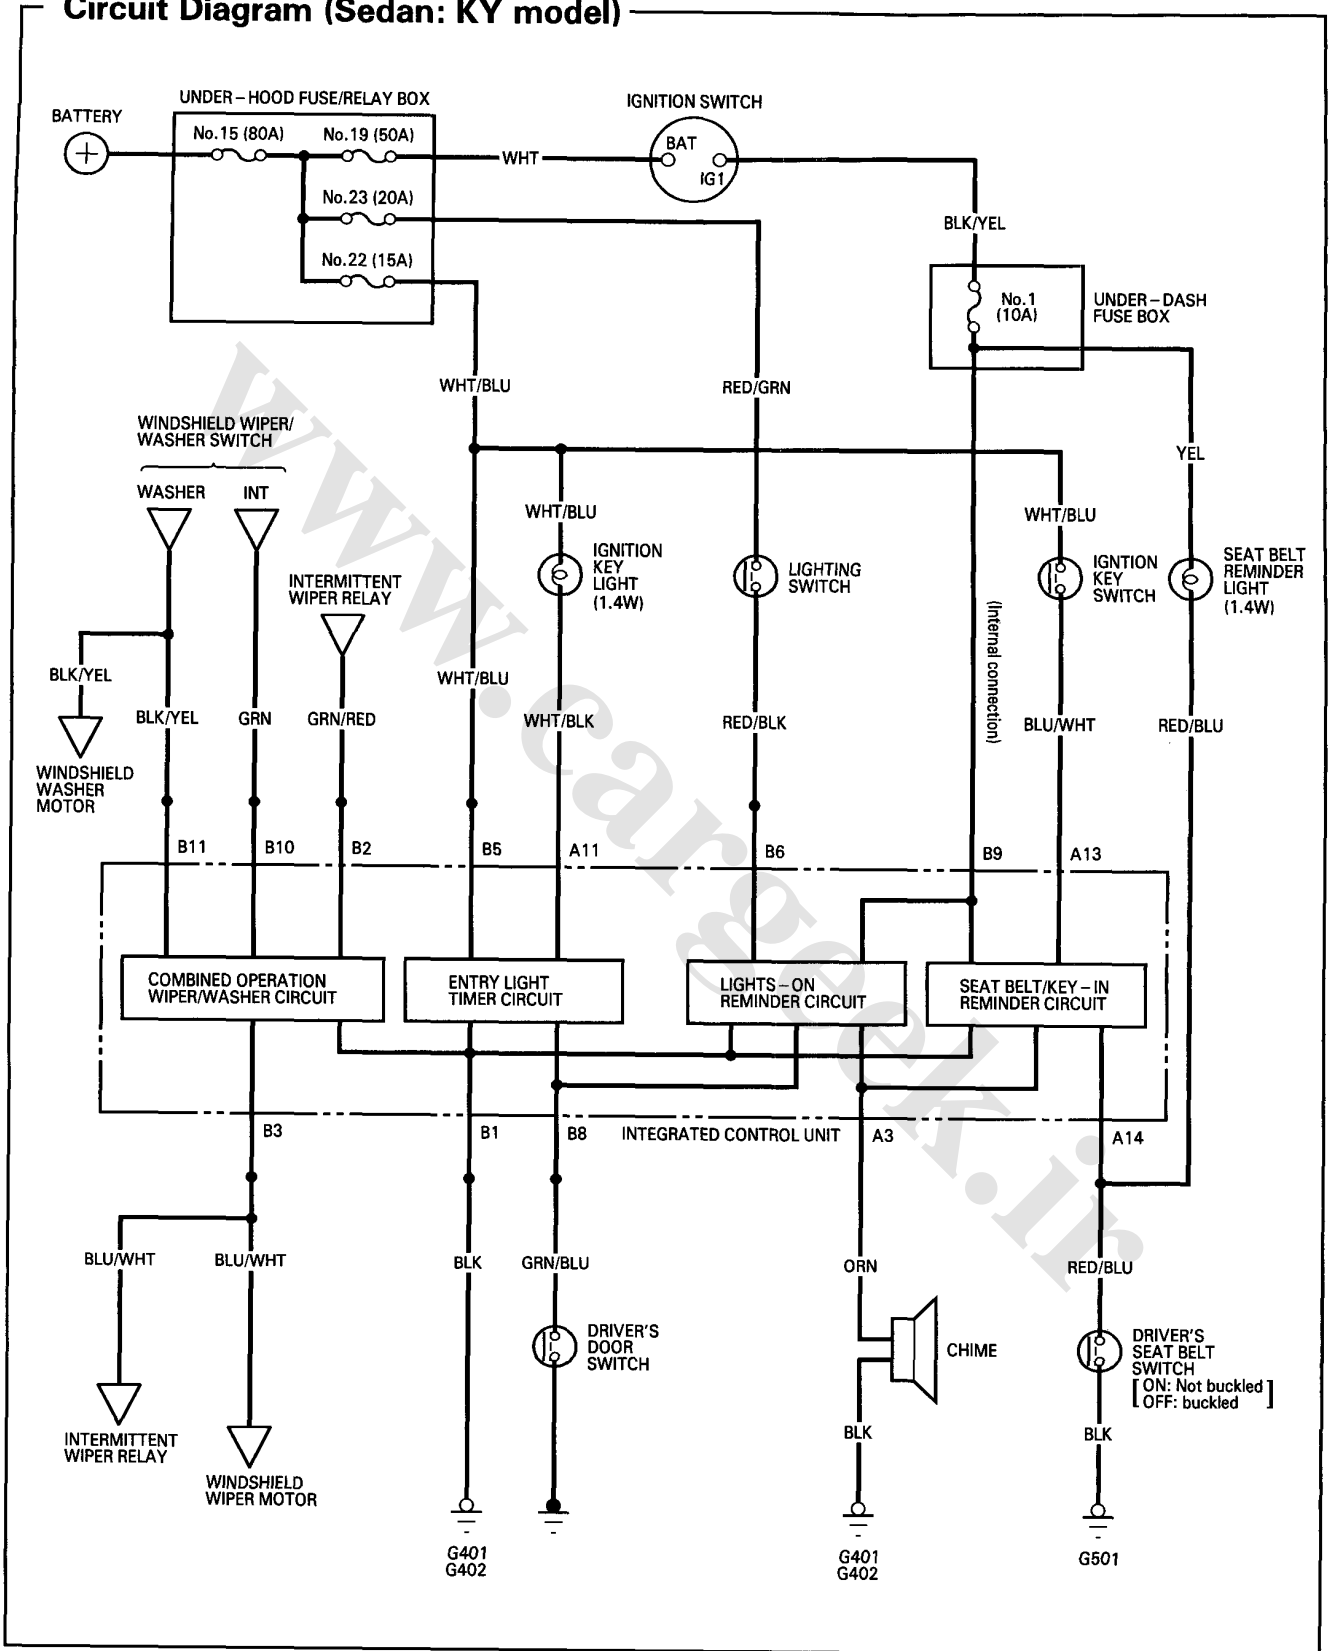



Input Test (Sedan: KY model)


Remove the left kick panel, then disconnect the 16-P connector from the integrated control unit.

Remove the integrated control unit.

Inspect the connector and the socket terminals to be sure they are all making good contact.

- If the terminals are bent, loose or corroded, repair them as necessary, and recheck the system.
- If the terminals look OK, make the following input tests at the connector and the socket.
 - If a test indicates a problem, find and correct the cause, then recheck the system.
 - If all the input tests prove OK, the control unit must be faulty; replace it.


NOTE: Do not disconnect any connectors from the under-dash fuse box except the one on the integrated control unit.

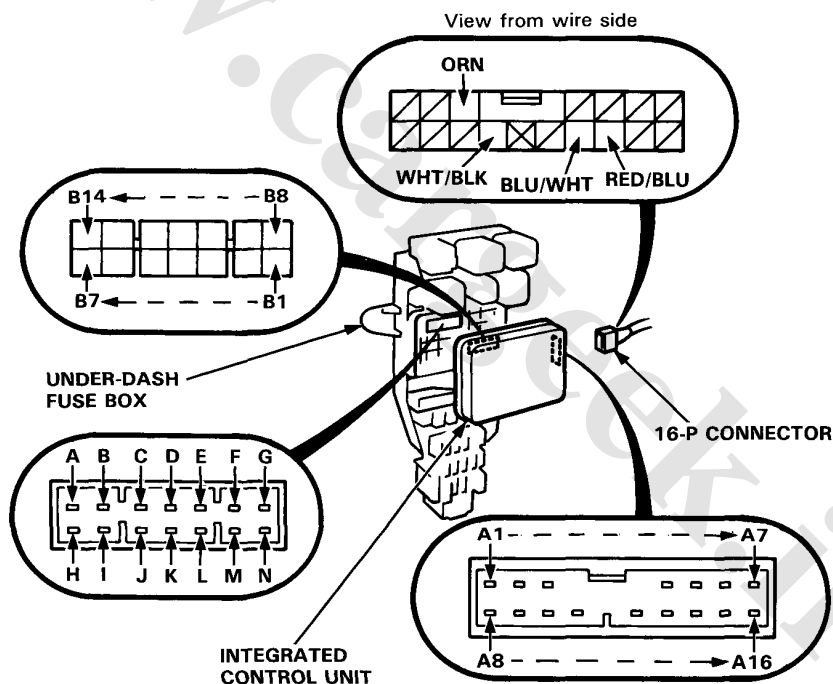


(cont'd)

Integrated Control Unit

Input Test (Sedan: KY model) (cont'd)

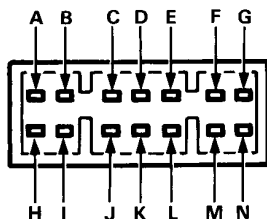

View from terminal side

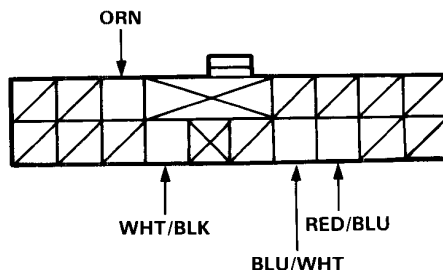


View from wire side

Entry Light Timer System:


No.	Terminal	Test condition	Test: Desired result	Possible cause if result is not obtained
1	H	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402). An open in the wire.
2	L	Under all conditions.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 22 (15 A) fuse. An open in the wire.
3	WHT/BLK	Under all conditions.	Attach to ground: Ignition key light should come on.	<ul style="list-style-type: none"> Blown bulb. An open in the wire.
4	A	Driver's door open.	Check for voltage to ground: It should be 1 V or less.	<ul style="list-style-type: none"> Faulty driver's door switch. An open in the wire.

Lights-on Reminder System:

No.	Terminal	Test condition	Test: Desired result	Possible cause if result is not obtained
1	H	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> Poor ground (G401, G402). An open in the wire.
2	M	Lighting switch ON (Second position).	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 23 (20 A) fuse. Faulty lighting switch. An open in the wire.
3	B	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> Blown No. 1 (10 A) fuse. An open in the wire.
4	A	Driver's door open.	Check for voltage to ground: It should be 1 V or less.	<ul style="list-style-type: none"> Faulty driver's door switch. An open in the wire.
5	ORN	Ignition switch ON and connect the B terminal to the ORN terminal.	Check chime operation: Chime should activate each time the battery is connected.	<ul style="list-style-type: none"> Faulty chime. An open in the wire.

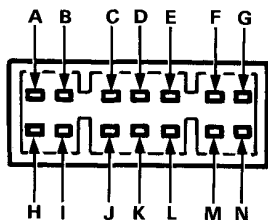

View from terminal side

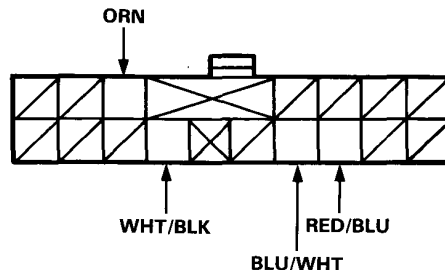

View from wire side

Wiper System:

No.	Terminal	Test condition	Test: Desired result	Possible cause if result is not obtained
1	H	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402). • An open in the wire.
2	I	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 6 (30 A) fuse. • Faulty intermittent wiper relay. • An open in the wire.
3	C	Ignition switch ON and wiper switch in INT Position	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 6 (30 A) fuse. • Faulty wiper switch. • An open in the wire.
4	D	Ignition switch ON and washer switch ON	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 6 (30 A) fuse. • Faulty washer switch. • An open in the wire.
5	J	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 6 (30 A) fuse. • Faulty intermittent wiper relay. • Faulty windshield wiper motor. • An open in the wire.


Seat Belt Reminder System:

No.	Terminal	Test condition	Test: Desired result	Possible cause if result is not obtained
1	H	Under all conditions.	Check for continuity to ground: There should be continuity.	<ul style="list-style-type: none"> • Poor ground (G401, G402). • An open in the wire.
2	B	Ignition switch ON.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Blown No. 1 (10 A) fuse. • An open in the wire.
3	ORN	Ignition switch ON and connect the B terminal to the ORN terminal.	Check chime operation: Chime should activate each time the battery is connected.	<ul style="list-style-type: none"> • Faulty chime. • An open in the wire.
4	RED/BLU	Driver's seat belt is not buckled.	Check for voltage to ground: It should be 1 V or less.	<ul style="list-style-type: none"> • Faulty driver's seat belt switch. • An open in the wire. • Poor ground (G501). • Blown bulb.
		Driver's seat belt is buckled.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Faulty driver's seat belt switch. • An open in the wire. • Blown bulb. • Blown No. 1 (10 A) fuse.
5	BLU/WHT	Ignition key is inserted into the ignition switch.	Check for voltage to ground: There should be battery voltage.	<ul style="list-style-type: none"> • Faulty ignition key switch. • An open in the wire.

Seat Belt Reminder System (Sedan: KY model)

Seat Belt Switch Test


1. Slide the front seat all the way forward then disconnect the 2-P connector from the seat belt switch.

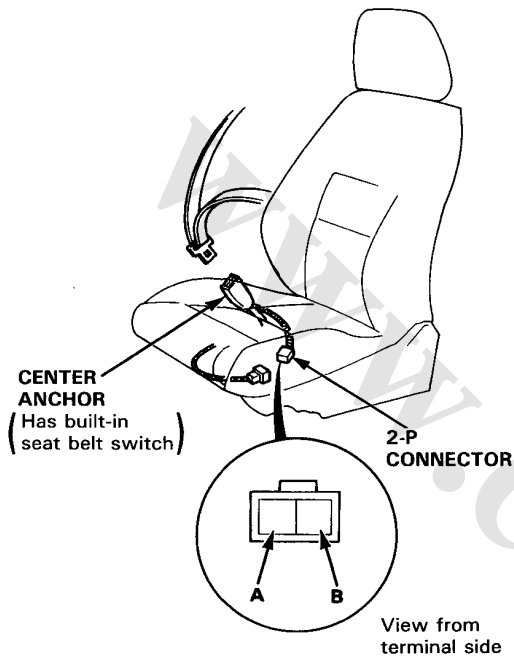


2. There should be continuity between the A and B terminals when the seat belt is not buckled. There should be no continuity when the seat belt is buckled.

Chime Test

1. Remove the left side kick panel and disconnect the 2-P connector from the main wire harness.
2. Test the chime by connecting battery power to the ORN terminal and ground to the BLK terminal, and cycling the power on-off repeatedly.
3. If the chime fails to sound every time power is cycled, replace it.


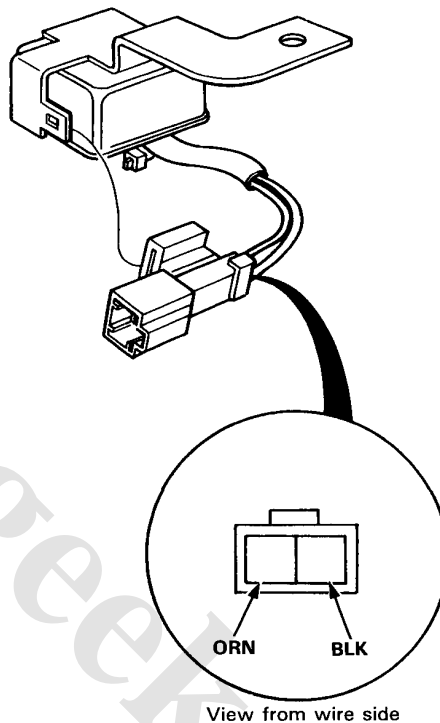




Key-in Reminder System (Sedan: KY model)

Ignition Key Switch Test

1. Remove the dashboard lower cover.
2. Disconnect the 6-P connector from the main wire harness.

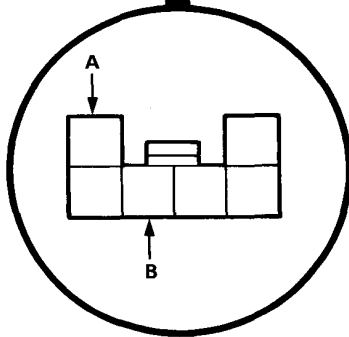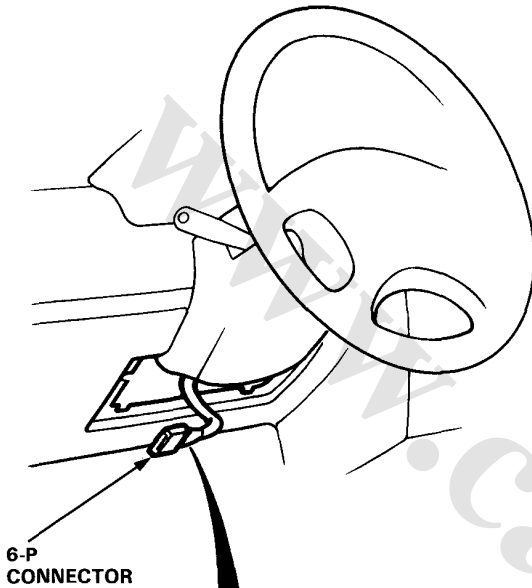

View from wire side

3. There should be continuity between the A and B terminals when the ignition key is inserted. There should be no continuity with the ignition key removed.

Power Door Locks (KQ model)

Component Location Index

