

SECTION CVT

CVT

A
B

CVT

D

E

CONTENTS

MODIFICATION NOTICE	6	Introduction	19
Major Modification Item	6	OBD Function for CVT System	19
INDEX FOR DTC	7	One or Two Trip Detection Logic of OBD	19
Alphabetical Index	7	ONE TRIP DETECTION LOGIC	19
FOR AUSTRALIA	7	TWO TRIP DETECTION LOGIC	19
EXCEPT FOR AUSTRALIA	8	OBD Diagnostic Trouble Code (DTC)	19
DTC No. Index	9	HOW TO READ DTC AND 1ST TRIP DTC	19
FOR AUSTRALIA	9	HOW TO ERASE DTC	20
EXCEPT FOR AUSTRALIA	10	HOW TO ERASE DTC (WITH CONSULT-II)	21
PRECAUTIONS	11	HOW TO ERASE DTC (WITH GST)	21
Precautions for Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"	11	Malfunction Indicator (MI)	22
Precautions for Procedures without Cowl Top Cover... 11	11	DESCRIPTION	22
On Board Diagnostic (OBD) System of CVT and Engine (For Australia)	11	TROUBLE DIAGNOSIS	23
Precautions for TCM and CVT Assembly Replacement	12	DTC Inspection Priority Chart	23
EEPROM ERASING PATTERNS	12	Fail-safe	23
METHOD FOR ERASING THE EEPROM IN THE TCM	12	FAIL-SAFE FUNCTION	23
METHOD FOR WRITING DATA FROM THE ROM ASSEMBLY IN THE TRANSAXLE	12	How to Perform Trouble Diagnosis for Quick and Accurate Repair	24
CHECK METHOD	12	INTRODUCTION	24
Removal and Installation Procedure for CVT Unit Connector	13	WORK FLOW	24
REMOVAL	13	DIAGNOSTIC WORKSHEET	27
INSTALLATION	13	CVT Electrical Parts Location	30
Precautions	14	Circuit Diagram	32
Service Notice or Precautions	14	Inspections Before Trouble Diagnosis	33
OBD SELF-DIAGNOSIS (FOR AUSTRALIA)	14	CVT FLUID CHECK	33
PREPARATION	15	STALL TEST	33
Special Service Tools	15	LINE PRESSURE TEST	35
Commercial Service Tools	16	Road Test	37
CVT FLUID	17	DESCRIPTION	37
Checking CVT Fluid	17	CONSULT-II OPERATION PROCEDURE	37
FLUID LEVEL CHECK	17	Check Before Engine Is Started	39
Changing CVT Fluid	18	Check at Idle	39
ON BOARD DIAGNOSTIC (OBD) SYSTEM (FOR AUSTRALIA)	19	Cruise Test	41
		Vehicle Speed at Which Gear Shifting Occurs	43
		TCM Input/Output Signal Reference Values	43
		TCM TERMINAL CONNECTOR LAYOUT	43
		TCM INSPECTION TABLE	44
		CONSULT-II Function (TRANSMISSION)	46
		FUNCTION	46
		CONSULT-II REFERENCE VALUE	46

F

G

H

I

J

K

L

M

CONSULT-II SETTING PROCEDURE	48	DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI	
WORK SUPPORT MODE	48	SPEED SENSOR)	71
SELF-DIAGNOSTIC RESULT MODE	50	Description	71
DATA MONITOR MODE	55	CONSULT-II Reference Value	71
CAN DIAGNOSTIC SUPPORT MONITOR		On Board Diagnosis Logic	71
MODE	57	Possible Cause	71
Diagnostic Procedure Without CONSULT-II	58	DTC Confirmation Procedure	71
OBD SELF-DIAGNOSTIC PROCEDURE (WITH		WITH CONSULT-II	71
GST)	58	WITH GST	71
DTC U1000 CAN COMMUNICATION LINE	59	Wiring Diagram — CVT — PRSCVT	72
Description	59	TCM Input/Output Signal Reference Values	73
On Board Diagnosis Logic	59	DTC P0720 VEHICLE SPEED SENSOR CVT (SEC-	
Possible Cause	59	ONDARY SPEED SENSOR)	74
DTC Confirmation Procedure	59	Description	74
WITH CONSULT-II	59	CONSULT-II Reference Value	74
WITH GST	59	On Board Diagnosis Logic	74
TCM Input/Output Signal Reference Values	59	Possible Cause	74
Wiring Diagram — CVT — CAN	60	DTC Confirmation Procedure	74
DTC P0615 START SIGNAL CIRCUIT	61	WITH CONSULT-II	74
Description	61	WITH GST	74
CONSULT-II Reference Value	61	TCM Input/Output Signal Reference Values	74
On Board Diagnosis Logic	61	Wiring Diagram — CVT — SESCOVT	75
Possible Cause	61	DTC P0725 ENGINE SPEED SIGNAL	76
DTC Confirmation Procedure	61	Description	76
WITH CONSULT-II	61	CONSULT-II Reference Value	76
TCM Input/Output Signal Reference Values	61	On Board Diagnosis Logic	76
Wiring Diagram — CVT — STSIG	62	Possible Cause	76
DTC P0703 STOP LAMP SWITCH CIRCUIT	63	DTC Confirmation Procedure	76
Description	63	WITH CONSULT-II	76
CONSULT-II Reference Value	63	DTC P0730 BELT DAMAGE	77
On Board Diagnosis Logic	63	Description	77
Possible Cause	63	CONSULT-II Reference Value	77
DTC Confirmation Procedure	63	On Board Diagnosis Logic	77
WITH CONSULT-II	63	Possible Cause	77
DTC P0705 PARK/NEUTRAL POSITION SWITCH..	64	DTC Confirmation Procedure	77
Description	64	WITH CONSULT-II	77
CONSULT-II Reference Value	64	DTC P0740 TORQUE CONVERTER CLUTCH	
On Board Diagnosis Logic	64	SOLENOID VALVE	78
Possible Cause	64	Description	78
DTC Confirmation Procedure	64	CONSULT-II Reference Value	78
WITH CONSULT-II	65	On Board Diagnosis Logic	78
WITH GST	65	Possible Cause	78
TCM Input/Output Signal Reference Values	65	DTC Confirmation Procedure	78
Wiring Diagram — CVT — PNP/SW	66	WITH CONSULT-II	78
Component Inspection	67	WITH GST	78
PNP SWITCH	67	TCM Input/Output Signal Reference Values	78
DTC P0710 CVT FLUID TEMPERATURE SENSOR		Wiring Diagram — CVT — TCV	79
CIRCUIT	68	Component Inspection	80
Description	68	TORQUE CONVERTER CLUTCH SOLENOID	
CONSULT-II Reference Value	68	VALVE	80
On Board Diagnosis Logic	68	DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)...	81
Possible Cause	68	Description	81
DTC Confirmation Procedure	68	CONSULT-II Reference Value	81
WITH CONSULT-II	68	On Board Diagnosis Logic	81
WITH GST	68	Possible Cause	81
TCM Input/Output Signal Reference Values	68	DTC Confirmation Procedure	81
Wiring Diagram — CVT — FTS	69	WITH CONSULT-II	81
Component Inspection	70	WITH GST	81
CVT FLUID TEMPERATURE SENSOR	70	DTC P0745 LINE PRESSURE SOLENOID VALVE...	82

Description	82	DTC P0840 TRANSMISSION FLUID PRESSURE	
CONSULT-II Reference Value	82	SENSOR A CIRCUIT (SEC PRESSURE SENSOR)..	94
On Board Diagnosis Logic	82	Description	94
Possible Cause	82	CONSULT-II Reference Value	94
DTC Confirmation Procedure	82	On Board Diagnosis Logic	94
WITH CONSULT-II	82	Possible Cause	94
WITH GST	82	DTC Confirmation Procedure	94
TCM Input/Output Signal Reference Values	82	WITH CONSULT-II	94
Wiring Diagram — CVT — LPSV	83	WITH GST	94
Component Inspection	84	Wiring Diagram — CVT — SECPS	95
PRESSURE CONTROL SOLENOID VALVE A		TCM Input/Output Signal Reference Values	96
(LINE PRESSURE SOLENOID VALVE)	84	DTC P0841 PRESSURE SENSOR FUNCTION	97
DTC P0746 PRESSURE CONTROL SOLENOID A		Description	97
PERFORMANCE (LINE PRESSURE SOLENOID		CONSULT-II Reference Value	97
VALVE)	85	On Board Diagnosis Logic	97
Description	85	Possible Cause	97
CONSULT-II Reference Value	85	DTC Confirmation Procedure	97
On Board Diagnosis Logic	85	WITH CONSULT-II	97
Possible Cause	85	DTC P0845 TRANSMISSION FLUID PRESSURE	
DTC Confirmation Procedure	85	SENSOR B CIRCUIT (PRI PRESSURE SENSOR)..	98
WITH CONSULT-II	85	Description	98
WITH GST	85	CONSULT-II Reference Value	98
DTC P0776 PRESSURE CONTROL SOLENOID B		On Board Diagnosis Logic	98
PERFORMANCE (SEC PRESSURE SOLENOID		Possible Cause	98
VALVE)	86	DTC Confirmation Procedure	98
Description	86	WITH CONSULT-II	98
CONSULT-II Reference Value	86	WITH GST	98
On Board Diagnosis Logic	86	Wiring Diagram — CVT — PRIPS	99
Possible Cause	86	TCM Input/Output Signal Reference Values	100
DTC Confirmation Procedure	86	DTC P0868 SECONDARY PRESSURE DOWN	101
WITH CONSULT-II	86	Description	101
WITH GST	86	CONSULT-II Reference Value	101
DTC P0778 PRESSURE CONTROL SOLENOID B		On Board Diagnosis Logic	101
ELECTRICAL (SEC PRESSURE SOLENOID		Possible Cause	101
VALVE)	87	DTC Confirmation Procedure	101
Description	87	WITH CONSULT-II	101
CONSULT-II Reference Value	87	DTC P1701 TRANSMISSION CONTROL MODULE	
On Board Diagnosis Logic	87	(POWER SUPPLY)	102
Possible Cause	87	Description	102
DTC Confirmation Procedure	87	On Board Diagnosis Logic	102
WITH CONSULT-II	87	Possible Cause	102
WITH GST	87	DTC Confirmation Procedure	102
TCM Input/Output Signal Reference Values	87	WITH CONSULT-II	102
Wiring Diagram — CVT — SECPSV	88	TCM Input/Output Signal Reference Values	102
Component Inspection	89	Wiring Diagram — CVT — POWER	103
PRESSURE CONTROL SOLENOID VALVE B		DTC P1705 THROTTLE POSITION SENSOR	105
(SECONDARY PRESSURE SOLENOID VALVE)		Description	105
.....	89	CONSULT-II Reference Value	105
DTC P0826 MANUAL MODE SWITCH CIRCUIT ...	90	On Board Diagnosis Logic	105
Description	90	Possible Cause	105
CONSULT-II Reference Value	90	DTC Confirmation Procedure	105
On Board Diagnosis Logic	90	WITH CONSULT-II	105
Possible Cause	90	DTC P1722 ESTM VEHICLE SPEED SIGNAL	106
DTC Confirmation Procedure	90	Description	106
WITH CONSULT-II	90	CONSULT-II Reference Value	106
Wiring Diagram — CVT — MMSW	91	On Board Diagnosis Logic	106
TCM Input/Output Signal Reference Values	93	Possible Cause	106
Component Inspection	93	DTC Confirmation Procedure	106
MANUAL MODE SWITCH	93	WITH CONSULT-II	106

DTC P1723 CVT SPEED SENSOR FUNCTION	107	CVT Indicator Lamp Does Not Come On	125
Description	107	SYMPTOM:	125
On Board Diagnosis Logic	107	DIAGNOSTIC PROCEDURE	125
Possible Cause	107	Engine Cannot Be Started in "P" or "N" Position ..	126
DTC Confirmation Procedure	107	SYMPTOM:	126
WITH CONSULT-II	107	DIAGNOSTIC PROCEDURE	126
DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM	108	In "P" Position, Vehicle Moves Forward or Backward	
Description	108	When Pushed	127
On Board Diagnosis Logic	108	SYMPTOM:	127
Possible Cause	108	DIAGNOSTIC PROCEDURE	127
DTC Confirmation Procedure	108	In "N" Position, Vehicle Moves	127
WITH CONSULT-II	108	SYMPTOM:	127
WITH GST	108	DIAGNOSTIC PROCEDURE	127
DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT	109	Large Shock "N" → "R" Position	128
Description	109	SYMPTOM:	128
CONSULT-II Reference Value	109	DIAGNOSTIC PROCEDURE	128
On Board Diagnosis Logic	109	Vehicle Does Not Creep Backward in "R" Position.	129
Possible Cause	109	SYMPTOM:	129
DTC Confirmation Procedure	109	DIAGNOSTIC PROCEDURE	129
WITH CONSULT-II	109	Vehicle Does Not Creep Forward in "D" Position ..	130
WITH GST	109	SYMPTOM:	130
TCM Input/Output Signal Reference Values	109	DIAGNOSTIC PROCEDURE	130
Wiring Diagram — CVT — L/USSV	110	CVT Does Not Shift	131
Component Inspection	111	SYMPTOM:	131
LOCK-UP SELECT SOLENOID VALVE	111	DIAGNOSTIC PROCEDURE	131
DTC P1745 LINE PRESSURE CONTROL	112	Cannot Be Changed to Manual Mode	132
Description	112	SYMPTOM:	132
On Board Diagnosis Logic	112	DIAGNOSTIC PROCEDURE	132
Possible Cause	112	CVT Does Not Shift in Manual Mode	132
DTC Confirmation Procedure	112	SYMPTOM:	132
WITH CONSULT-II	112	DIAGNOSTIC PROCEDURE	132
DTC P1777 STEP MOTOR - CIRCUIT	113	Vehicle Does Not Decelerate by Engine Brake	134
Description	113	SYMPTOM:	134
CONSULT-II Reference Value	113	DIAGNOSTIC PROCEDURE	134
On Board Diagnosis Logic	113	SHIFT CONTROL SYSTEM	135
Possible Cause	113	Removal and Installation	135
DTC Confirmation Procedure	113	CONTROL DEVICE COMPONENTS	135
WITH CONSULT-II	113	CONTROL CABLE COMPONENTS	136
WITH GST	113	REMOVAL	136
Wiring Diagram — CVT — STM	114	INSTALLATION	136
TCM Input/Output Signal Reference Values	115	Adjustment of CVT Position	137
Component Inspection	115	Checking of CVT Position	137
STEP MOTOR	115	CVT SHIFT LOCK SYSTEM	138
DTC P1778 STEP MOTOR - FUNCTION	116	Shift Lock System Electrical Parts Location	138
Description	116	Wiring Diagram — CVT — SHIFT	139
CONSULT-II Reference Value	116	Shift Lock Control Unit Reference Values	141
On Board Diagnosis Logic	116	SHIFT LOCK HARNESS CONNECTOR TERMI-	
Possible Cause	116	NALS LAYOUT	141
DTC Confirmation Procedure	116	SHIFT LOCK CONTROL UNIT INSPECTION	
WITH CONSULT-II	116	TABLE	141
WITH GST	116	Component Inspection	142
CVT INDICATOR CIRCUIT	117	SHIFT LOCK SOLENOID	142
Description	117	DETENTION SWITCH (FOR KEY)	142
CONSULT-II Reference Value	117	DETENTION SWITCH (FOR SHIFT)	142
TROUBLE DIAGNOSIS FOR SYMPTOMS	118	KEY LOCK SOLENOID	142
Wiring Diagram — CVT — NONDTC	118	KEY SWITCH	143
		STOP LAMP SWITCH	143

DIFFERENTIAL SIDE OIL SEAL	144	
Removal and Installation	144	A
COMPONENTS	144	
REMOVAL	144	
INSTALLATION	145	B
CVT FLUID COOLER SYSTEM	146	
CVT Fluid Cooler Removal and Installation (For South Africa)	146	
COMPONENTS	146	CVT
REMOVAL	146	
INSTALLATION	147	
CVT Fluid Cooler Valve Removal and Installation	149	D
COMPONENTS	149	
REMOVAL	149	
INSTALLATION	150	E
COMPONENT INSPECTION	150	
TRANSAXLE ASSEMBLY	151	
Removal and Installation	151	
COMPONENTS	151	F
REMOVAL	152	
INSPECTION	153	
INSTALLATION	153	G
SERVICE DATA AND SPECIFICATIONS (SDS) ...	155	
General Specifications	155	
Vehicle Speed at Which Gear Shifting Occurs	155	H
Stall Speed	155	
Line Pressure	155	
Solenoid Valves	155	I
CVT Fluid Temperature Sensor	156	
Primary Speed Sensor	156	J
Secondary Speed Sensor	156	
Removal and Installation	156	K
		L
		M

MODIFICATION NOTICE

PFP:00000

Major Modification Item

ACS00ALG

Addition of LHD models.

www.carseek.ir

INDEX FOR DTC**Alphabetical Index****NOTE:**

If DTC "U1000 CAN COMM CIRCUIT" is displayed with other DTCs, first perform the trouble diagnosis for "DTC U1000 CAN COMMUNICATION LINE". Refer to [CVT-59](#).

FOR AUSTRALIA

Items (CONSULT-II screen terms)	DTC		Reference page
	OBD	Except OBD	
	CONSULT-II GST*1	CONSULT-II only "TRANSMISSION"	
A/T TCC S/V FNCTN	P0744	P0744	CVT-81
ATF TEMP SEN/CIRC	P0710	P0710	CVT-68
BELT DAMG	—	P0730	CVT-77
BRAKE SW/CIRC	—	P0703	CVT-63
CAN COMM CIRCUIT	U1000	U1000	CVT-59
CVT SPD SEN/FNCTN	—	P1723	CVT-107
ENGINE SPEED SIG	—	P0725	CVT-76
ELEC TH CONTROL	—	P1726	CVT-108
ESTM VEH SPD SIG	—	P1722	CVT-106
INPUT SPD SEN/CIRC	P0715	P0715	CVT-71
L/PRESS CONTROL	—	P1745	CVT-112
L/PRESS SOL/CIRC	P0745	P0745	CVT-82
LU-SLCT SOL/CIRC	P1740	P1740	CVT-109
MANUAL MODE SWITCH	—	P0826	CVT-90
PNP SW/CIRC	P0705	P0705	CVT-64
PRESS SEN/FNCTN	—	P0841	CVT-97
PRS CNT SOL/A FCTN	P0746	P0746	CVT-85
PRS CNT SOL/B CIRC	P0778	P0778	CVT-87
PRS CNT SOL/B FCTN	P0776	P0776	CVT-86
SEC/PRESS DOWN	—	P0868	CVT-101
STARTER RELAY/CIRC	—	P0615	CVT-61
STEP MOTR CIRC	P1777	P1777	CVT-113
STEP MOTR/FNC	P1778	P1778	CVT-116
TCC SOLENOID/CIRC	P0740	P0740	CVT-78
TCM-POWER SUPPLY	—	P1701	CVT-102
TP SEN/CIRC A/T	—	P1705	CVT-105
TR PRS SENS/A CIRC	P0840	P0840	CVT-94
TR PRS SENS/B CIRC	P0845	P0845	CVT-98
VEH SPD SEN/CIR AT	P0720	P0720	CVT-74

CVT

*1: These numbers are prescribed by ISO 15031-5.

EXCEPT FOR AUSTRALIA

Items (CONSULT-II screen terms)	DTC	Reference page
A/T TCC S/V FNCTN	P0744	CVT-81
ATF TEMP SEN/CIRC	P0710	CVT-68
BELT DAMG	P0730	CVT-77
BRAKE SW/CIRC	P0703	CVT-63
CAN COMM CIRCUIT	U1000	CVT-59
CVT SPD SEN/FNCTN	P1723	CVT-107
ENGINE SPEED SIG	P0725	CVT-76
ELEC TH CONTROL	P1726	CVT-108
ESTM VEH SPD SIG	P1722	CVT-106
INPUT SPD SEN/CIRC	P0715	CVT-71
L/PRESS CONTROL	P1745	CVT-112
L/PRESS SOL/CIRC	P0745	CVT-82
LU-SLCT SOL/CIRC	P1740	CVT-109
MANUAL MODE SWITCH	P0826	CVT-90
PNP SW/CIRC	P0705	CVT-64
PRESS SEN/FNCTN	P0841	CVT-97
PRS CNT SOL/A FCTN	P0746	CVT-85
PRS CNT SOL/B CIRC	P0778	CVT-87
PRS CNT SOL/B FCTN	P0776	CVT-86
SEC/PRESS DOWN	P0868	CVT-101
STARTER RELAY/CIRC	P0615	CVT-61
STEP MOTR CIRC	P1777	CVT-113
STEP MOTR/FNC	P1778	CVT-116
TCC SOLENOID/CIRC	P0740	CVT-78
TCM-POWER SUPPLY	P1701	CVT-102
TP SEN/CIRC A/T	P1705	CVT-105
TR PRS SENS/A CIRC	P0840	CVT-94
TR PRS SENS/B CIRC	P0845	CVT-98
VEH SPD SEN/CIR AT	P0720	CVT-74

DTC No. Index**NOTE:**

If DTC "U1000 CAN COMM CIRCUIT" is displayed with other DTCs, first perform the trouble diagnosis for "DTC U1000 CAN COMMUNICATION LINE". Refer to [CVT-59](#).

FOR AUSTRALIA

DTC		Items (CONSULT-II screen terms)	Reference page
OBD	Except OBD		
CONSULT-II GST*1	CONSULT-II only "TRANSMISSION"		
—	P0615	STARTER RELAY/CIRC	CVT-61
—	P0703	BRAKE SW/CIRC	CVT-63
P0705	P0705	PNP SW/CIRC	CVT-64
P0710	P0710	ATF TEMP SEN/CIRC	CVT-68
P0715	P0715	INPUT SPD SEN/CIRC	CVT-71
P0720	P0720	VEH SPD SEN/CIR AT	CVT-74
—	P0725	ENGINE SPEED SIG	CVT-76
—	P0730	BELT DAMG	CVT-77
P0740	P0740	TCC SOLENOID/CIRC	CVT-78
P0744	P0744	A/T TCC S/V FNCTN	CVT-81
P0745	P0745	L/PRESS SOL/CIRC	CVT-82
P0746	P0746	PRS CNT SOL/A FCTN	CVT-85
P0776	P0776	PRS CNT SOL/B FCTN	CVT-86
P0778	P0778	PRS CNT SOL/B CIRC	CVT-87
—	P0826	MANUAL MODE SWITCH	CVT-90
P0840	P0840	TR PRS SENS/A CIRC	CVT-94
—	P0841	PRESS SEN/FNCTN	CVT-97
P0845	P0845	TR PRS SENS/B CIRC	CVT-98
—	P0868	SEC/PRESS DOWN	CVT-101
—	P1701	TCM-POWER SUPPLY	CVT-102
—	P1705	TP SEN/CIRC A/T	CVT-105
—	P1722	ESTM VEH SPD SIG	CVT-106
—	P1723	CVT SPD SEN/FNCTN	CVT-107
—	P1726	ELEC TH CONTROL	CVT-108
P1740	P1740	LU-SLCT SOL/CIRC	CVT-109
—	P1745	L/PRESS CONTROL	CVT-112
P1777	P1777	STEP MOTR CIRC	CVT-113
P1778	P1778	STEP MOTR/FNC	CVT-116
U1000	U1000	CAN COMM CIRCUIT	CVT-59

*1: These numbers are prescribed by ISO 15031-5.

EXCEPT FOR AUSTRALIA

DTC	Items (CONSULT-II screen terms)	Reference page
P0615	STARTER RELAY/CIRC	CVT-61
P0703	BRAKE SW/CIRC	CVT-63
P0705	PNP SW/CIRC	CVT-64
P0710	ATF TEMP SEN/CIRC	CVT-68
P0715	INPUT SPD SEN/CIRC	CVT-71
P0720	VEH SPD SEN/CIR AT	CVT-74
P0725	ENGINE SPEED SIG	CVT-76
P0730	BELT DAMG	CVT-77
P0740	TCC SOLENOID/CIRC	CVT-78
P0744	A/T TCC S/V FNCTN	CVT-81
P0745	L/PRESS SOL/CIRC	CVT-82
P0746	PRS CNT SOL/A FCTN	CVT-85
P0776	PRS CNT SOL/B FCTN	CVT-86
P0778	PRS CNT SOL/B CIRC	CVT-87
P0826	MANUAL MODE SWITCH	CVT-90
P0840	TR PRS SENS/A CIRC	CVT-94
P0841	PRESS SEN/FNCTN	CVT-97
P0845	TR PRS SENS/B CIRC	CVT-98
P0868	SEC/PRESS DOWN	CVT-101
P1701	TCM-POWER SUPPLY	CVT-102
P1705	TP SEN/CIRC A/T	CVT-105
P1722	ESTM VEH SPD SIG	CVT-106
P1723	CVT SPD SEN/FNCTN	CVT-107
P1726	ELEC TH CONTROL	CVT-108
P1740	LU-SLCT SOL/CIRC	CVT-109
P1745	L/PRESS CONTROL	CVT-112
P1777	STEP MOTR CIRC	CVT-113
P1778	STEP MOTR/FNC	CVT-116
U1000	CAN COMM CIRCUIT	CVT-59

PRECAUTIONS

PFP:00001

Precautions for Supplemental Restraint System (SRS) “AIR BAG” and “SEAT BELT PRE-TENSIONER”

ACS00AD7

The Supplemental Restraint System such as “AIR BAG” and “SEAT BELT PRE-TENSIONER”, used along with a front seat belt, helps to reduce the risk or severity of injury to the driver and front passenger for certain types of collision. This system includes seat belt switch inputs and dual stage front air bag modules. The SRS system uses the seat belt switches to determine the front air bag deployment, and may only deploy one front air bag, depending on the severity of a collision and whether the front occupants are belted or unbelted. Information necessary to service the system safely is included in the SRS and SB section of this Service Manual.


WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN/INFINITI dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system. For removal of Spiral Cable and Air Bag Module, see the SRS section.
- Do not use electrical test equipment on any circuit related to the SRS unless instructed to in this Service Manual. SRS wiring harnesses can be identified by yellow and/or orange harnesses or harness connectors.

Precautions for Procedures without Cowl Top Cover

ACS00ALF

When performing the procedure after removing cowl top cover, cover the lower end of windshield with urethane, etc.

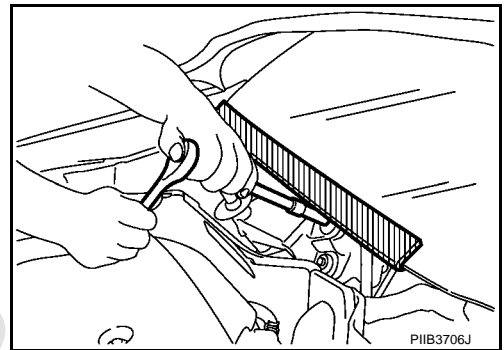**On Board Diagnostic (OBD) System of CVT and Engine (For Australia)**

ACS00AKO

The ECM has an on board diagnostic system. It will light up the malfunction indicator (MI) to warn the driver of a malfunction causing emission deterioration.

CAUTION:

- Be sure to turn the ignition switch OFF and disconnect the negative battery cable before any repair or inspection work. The open/short circuit of related switches, sensors, solenoid valves, etc. will cause the MI to light up.
- Be sure to connect and lock the connectors securely after work. A loose (unlocked) connector will cause the MI to light up due to the open circuit. (Be sure the connector is free from water, grease, dirt, bent terminals, etc.)
- Be sure to route and secure the harnesses properly after work. The interference of the harness with a bracket, etc. may cause the MI to light up due to the short circuit.
- Be sure to connect rubber tubes properly after work. A misconnected or disconnected rubber tube may cause the MI to light up due to the malfunction of the fuel injection system, etc.
- Be sure to erase the unnecessary malfunction information (repairs completed) from the TCM and ECM before returning the vehicle to the customer.

Precautions for TCM and CVT Assembly Replacement

ACS00AD8

CAUTION:

- Check if new data (Unit ID) are entered correctly after replacing CVT assembly and erasing data in TCM. (Connect CONSULT-II, and then turn ignition switch OFF.)
- When replacing CVT assembly or TCM, refer to the pattern table below and erase the EEPROM in the TCM if necessary.

EEPROM ERASING PATTERNS

CVT assembly	TCM	Erasing EEPROM in TCM	Remarks
Replaced	Replaced	Not required	Not required because the EEPROM in the TCM is in the default state. (CVT assembly must be replaced first.)
Not replaced	Replaced	Not required	Not required because the EEPROM in the TCM is in the default state.
Replaced	Not replaced	Required	Required because data has been written in the EEPROM in the TCM and because the TCM cannot write data from the ROM assembly in the transmission.

METHOD FOR ERASING THE EEPROM IN THE TCM

1. Connect CONSULT-II to data link connector. Refer to [CVT-48, "CONSULT-II SETTING PROCEDURE"](#).
2. Turn ignition switch ON. Confirm that CONSULT-II is turned ON.
3. Move selector lever to "R" position.
4. Touch "START (NISSAN BASED VHCL)" on CONSULT-II.
5. Select "SELF-DIAG RESULTS" mode for "TRANSMISSION" with CONSULT-II.
6. Press the brake pedal and turn the brake switch ON.
7. Press the accelerator pedal (0.5/8 - 4/8 throttle) not to exceed the half, and hold it in the half or less open position. (This will set the closed throttle position signal to OFF and the wide open throttle position signal to OFF.)
8. Touch "ERASE" on CONSULT-II, and then touch "YES".
9. Wait 3 seconds and then release the accelerator pedal.
10. Turn ignition switch OFF.

METHOD FOR WRITING DATA FROM THE ROM ASSEMBLY IN THE TRANSAXLE

In the following procedure, the TCM reads data from the ROM assembly and writes it to the EEPROM in the TCM.

1. Erase the EEPROM in the TCM.
2. Move selector lever to "P" position.
3. Turn ignition switch ON.

CHECK METHOD

- Standard: About 2 seconds after the ignition switch ON, the CVT indicator lamp lights up for 2 seconds.
- Non-standard: Even after the ignition switch ON, the CVT indicator lamp does not light up after 2 seconds or illuminates immediately.

CAUTION:

Perform in the "P" or "N" position.

Action for Non-Standard


- Replace the CVT assembly.
- Replace the TCM.

Removal and Installation Procedure for CVT Unit Connector

ACS00AD9



REMOVAL

- Rotate bayonet ring counterclockwise, pull out CVT unit harness connector upward and remove it.

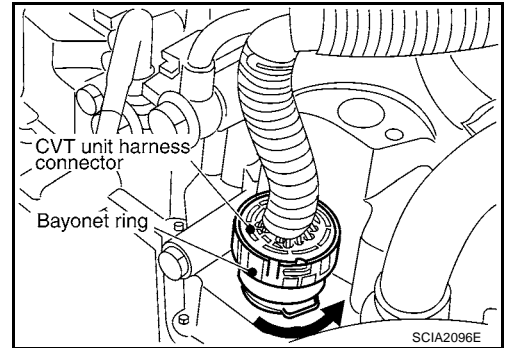


INSTALLATION

1. Align Δ marking on CVT unit harness connector terminal body with \square marking on bayonet ring, insert CVT unit harness connector, and then rotate bayonet ring clockwise.
2. Rotate bayonet ring clockwise until Δ marking on CVT unit harness connector terminal body is aligned with the slit on bayonet ring as shown in the figure (correctly fitting condition), install CVT unit harness connector to CVT unit harness connector terminal body.

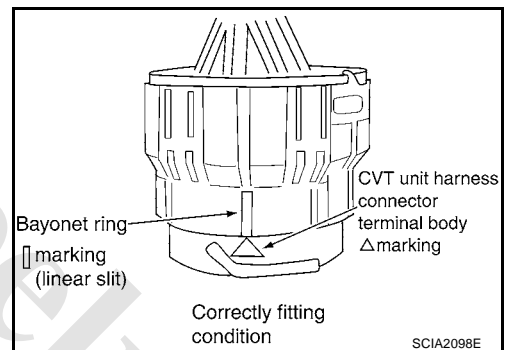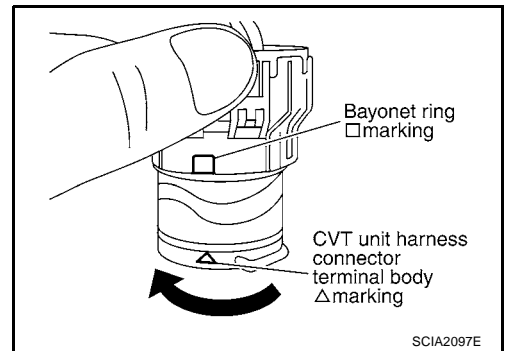

CAUTION:

- Securely align Δ marking on CVT unit harness connector terminal body with bayonet ring slit. Then, be careful not to make a half fit condition as shown in the figure.
- Do not mistake the slit of bayonet ring for other dent portion.

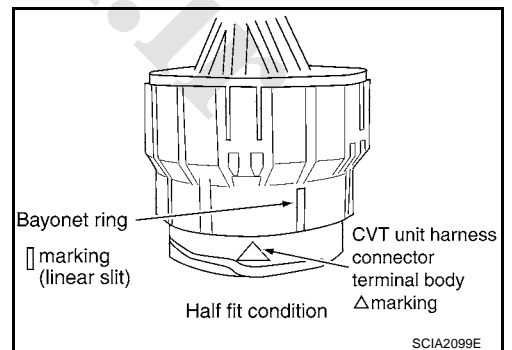


Precautions

ACS00ADA


NOTE:

If any malfunction occurs in the RE0F09A model transaxle, replace the entire transaxle assembly.


- Before connecting or disconnecting the TCM harness connector, turn ignition switch OFF and disconnect the battery cable from the negative terminal. Because battery voltage is applied to TCM even if ignition switch is turned OFF.

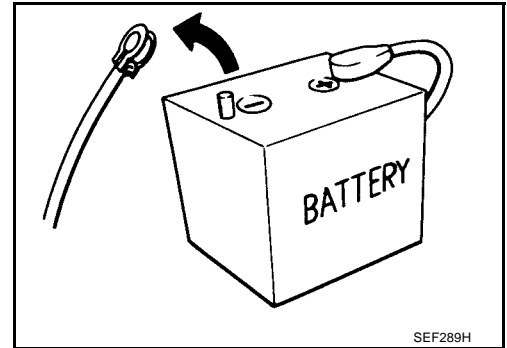

- When connecting or disconnecting pin connectors into or from TCM, take care not to damage pin terminals (bend or break).
When connecting pin connectors make sure that there are not any bends or breaks on TCM pin terminal.

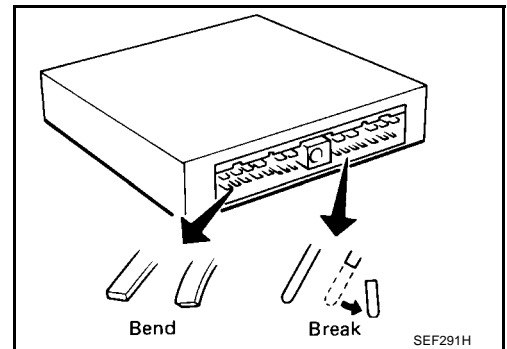

- Before replacing TCM, perform TCM input/output signal inspection and make sure whether TCM functions properly or not. Refer to [CVT-44, "TCM INSPECTION TABLE"](#).
- After performing each TROUBLE DIAGNOSIS, perform "DTC Confirmation Procedure".
If the repair is completed the DTC should not be displayed in the "DTC Confirmation Procedure".
- Always use the specified brand of CVT fluid. Refer to [MA-12, "Fluids and Lubricants"](#).
- Use lint-free paper, not cloth rags, during work.
- After replacing the CVT fluid, dispose of the waste oil using the methods prescribed by law, ordinance, etc.

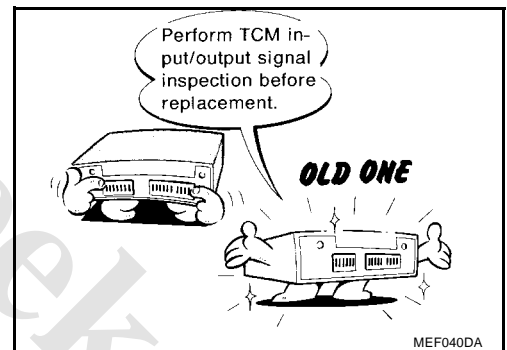

Service Notice or Precautions OBD SELF-DIAGNOSIS (FOR AUSTRALIA)

ACS00AKP

- CVT self-diagnosis is performed by the TCM in combination with the ECM. The results can be read through the blinking pattern of the malfunction indicator (MI). Refer to the table on [CVT-48, "Display Item List"](#) for the indicator used to display each self-diagnostic result.
- The self-diagnostic results indicated by the MI are automatically stored in both the TCM and ECM memories.
Always perform the procedure on [CVT-20, "HOW TO ERASE DTC"](#) to complete the repair and avoid unnecessary blinking of the MI.

For details of OBD, refer to [EC-17, "ON BOARD DIAGNOSTIC \(OBD\) SYSTEM"](#).

- Certain systems and components, especially those related to OBD, may use the new style slide-locking type harness connector. For description and how to disconnect, refer to [PG-123, "HARNESS CONNECTOR"](#).



PREPARATION

PFP:00002


Special Service Tools

ACS00ADC

Tool number Tool name	Description
ST2505S001 Oil pressure gauge set 1. ST25051001 Oil pressure gauge 2. ST25052000 Hose 3. ST25053000 Joint pipe 4. ST25054000 Adapter 5. ST25055000 Adapter	Measuring line pressure
KV40100621 Drift a: 76 mm (2.99 in) dia. b: 69 mm (2.72 in) dia.	Installing differential side oil seal ● Converter housing side (right)
ST33400001 Drift a: 60 mm (2.36 in) dia. b: 47 mm (1.85 in) dia.	Installing differential side oil seal ● Transaxle case side (left)

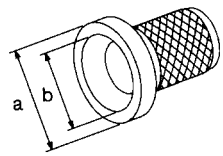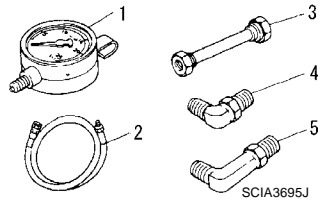

NT086

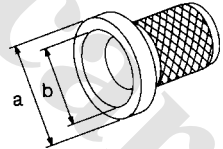


NT086

A
 B
CVT
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M

Commercial Service Tools

ACS00ADD


Tool number Tool name	Description
31197CA000 Drive plate location guide a: 14 mm (0.55 in) dia.	Installing transaxle assembly
31093CA000 Slinger	Removing and installing transaxle assembly
31092CA000 Slinger	Removing and installing transaxle assembly
Power tool	Loosening nuts and bolts

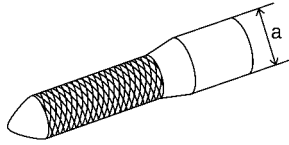


SCIA2013E



SCIA2014E



SCIA2015E

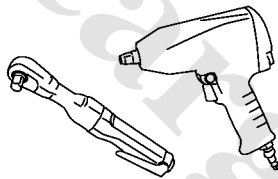

PBIC0190E

CVT FLUID


PFP:KLE50

Checking CVT Fluid FLUID LEVEL CHECK


ACS00ADE

Fluid level should be checked with the fluid warmed up to 50 to 80°C (122 to 176°F). The fluid level check procedure is as follows:

1. Check for fluid leakage.
2. With the engine warmed up, drive the vehicle in an urban area. When ambient temperature is 20°C (68°F), it takes about 10 minutes for the CVT fluid to warm up to 50 to 80°C (122 to 176°F).
3. Park the vehicle on a level surface.
4. Apply parking brake firmly.
5. With engine at idle, while depressing brake pedal, move shift selector throughout the entire shift range.

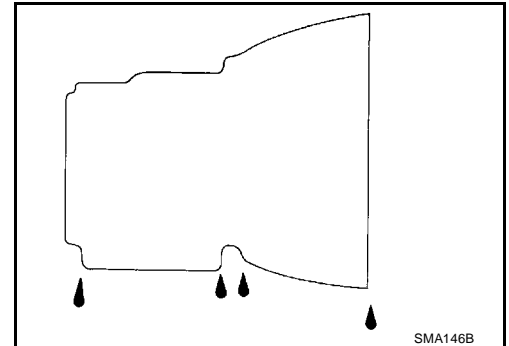


6. Pull out the CVT fluid level gauge from the CVT fluid charging pipe after pressing the tab on the CVT fluid level gauge to release the lock.

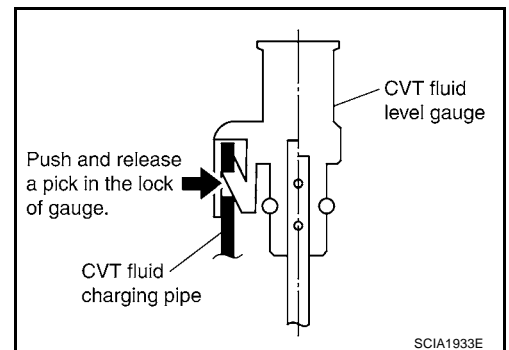

7. Wipe fluid off the CVT fluid level gauge. Insert the CVT fluid level gauge rotating 180° from the originally installed position, then securely push the CVT fluid level gauge until it meets the top end of the CVT fluid charging pipe.

CAUTION:


When wiping away the CVT fluid level gauge, always use lint-free paper, not a cloth rag.

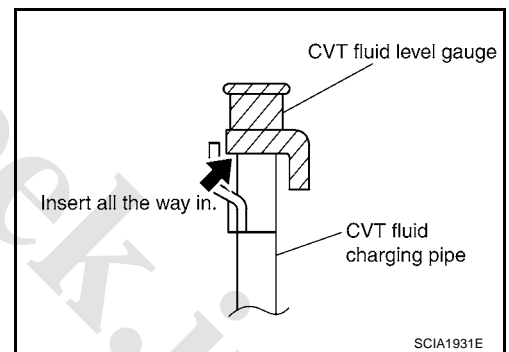

8. Place the selector lever in "P" or "N" and make sure the fluid level is within the specified range.

CAUTION:

When reinstalling CVT fluid level gauge, insert it into the CVT fluid charging pipe and rotate it to the original installation position until it is securely locked.

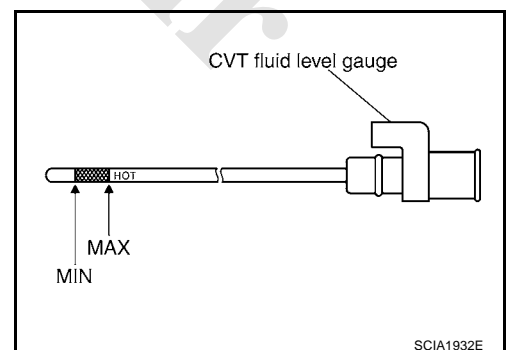

A

B

CVT

D

E

F

G

H

I

J


K

L

M

9. Check CVT fluid condition.

- If CVT fluid is very dark or smells burned, check operation of CVT. Flush cooling system after repair of CVT.
- If CVT fluid contains frictional material (clutches, bands, etc.), replace radiator and flush cooler line using cleaning solvent and compressed air after repair of CVT. Refer to [CO-2, "RADIATOR"](#).

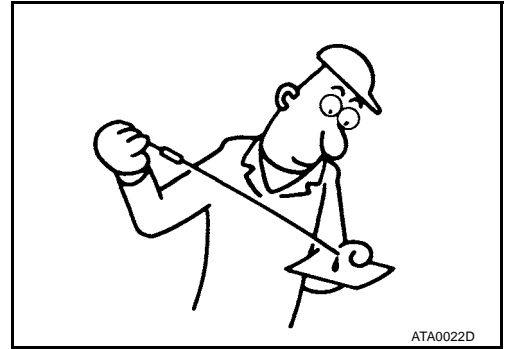

ATA0022D


Changing CVT Fluid

1. Warm up CVT fluid by driving the vehicle for 10 minutes.

- ⇐: Vehicle front
- Radiator (2)
- CVT fluid cooler hose [inlet side (3)]
- Transaxle assembly (4)

2. Drain CVT fluid from CVT fluid cooler hose [outlet side (1)] and refill with new CVT fluid at CVT fluid charging pipe with the engine running at idle speed.

3. Refill until new CVT fluid comes out from CVT fluid cooler hose [outlet side (1)].
About 30 to 50% extra fluid will be required for this procedure.

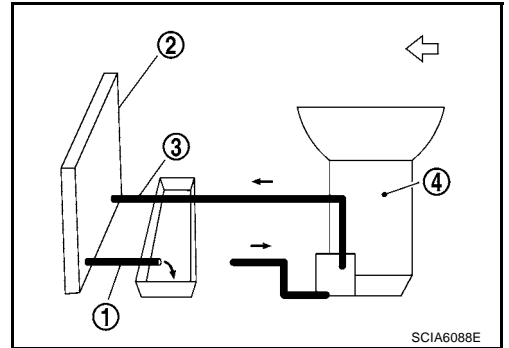

SCIA6088E

CVT fluid:

Genuine NISSAN CVT fluid NS-2

Fluid capacity:

Approx. 9.8 ℓ (8-5/8 Imp qt)

CAUTION:

- Use only Genuine NISSAN CVT fluid NS-2. Do not mix with other fluid.
- Using CVT fluid other than Genuine NISSAN CVT fluid NS-2 will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.
- When filling CVT fluid, take care not to scatter heat generating parts such as exhaust.
- Delete CVT fluid deterioration date with CONSULT-II after changing CVT fluid. Refer to [CVT-49, "Check CVT Fluid Deterioration Date"](#).

4. Check fluid leakage, fluid level and condition.

ON BOARD DIAGNOSTIC (OBD) SYSTEM (FOR AUSTRALIA)

PFP:00028

Introduction

ACS00AKJ

The CVT system has two self-diagnostic systems.

The first is the emission-related on board diagnostic system (OBD) performed by the TCM in combination with the ECM. The malfunction is indicated by the MI (malfunction indicator) and is stored as a DTC in the ECM memory, and the TCM memory.

The second is the TCM original self-diagnosis performed by the TCM. The malfunction is stored in the TCM memory. The detected items are overlapped with OBD self-diagnostic items. For detail, refer to [CVT-48, "Display Item List"](#).

OBD Function for CVT System

ACS00AKK

The ECM provides emission-related on board diagnostic (OBD) functions for the CVT system. One function is to receive a signal from the TCM used with OBD-related parts of the CVT system. The signal is sent to the ECM when a malfunction occurs in the corresponding OBD-related part. The other function is to indicate a diagnostic result by means of the MI (malfunction indicator) on the instrument panel. Sensors, switches and solenoid valves are used as sensing elements.

The MI automatically illuminates in One or Two Trip Detection Logic when a malfunction is sensed in relation to CVT system parts.

One or Two Trip Detection Logic of OBD

ACS00AKL

ONE TRIP DETECTION LOGIC

If a malfunction is sensed during the first test drive, the MI will illuminate and the malfunction will be stored in the ECM memory as a DTC. The TCM is not provided with such a memory function.

TWO TRIP DETECTION LOGIC

When a malfunction is sensed during the first test drive, it is stored in the ECM memory as a 1st trip DTC (diagnostic trouble code) or 1st trip freeze frame data. At this point, the MI will not illuminate. — 1st trip

If the same malfunction as that experienced during the first test drive is sensed during the second test drive, the MI will illuminate. — 2nd trip

The "trip" in the "One or Two Trip Detection Logic" means a driving mode in which self-diagnosis is performed during vehicle operation.

OBD Diagnostic Trouble Code (DTC)

ACS00AKM

HOW TO READ DTC AND 1ST TRIP DTC


DTC and 1st trip DTC can be read by the following methods.

(with **CONSULT-II** or (**GST**) CONSULT-II or GST (Generic Scan Tool) Examples: P0705, P0720 etc. These DTC are prescribed by SAE J2012.

(CONSULT-II also displays the malfunctioning component or system.)

- **1st trip DTC No. is the same as DTC No.**
- **Output of the diagnostic trouble code indicates that the indicated circuit has a malfunction. However, in case of the Mode II and GST, they do not indicate whether the malfunction is still occurring or occurred in the past and returned to normal.**
CONSULT-II can identify them as shown below, therefore, CONSULT-II (if available) is recommended.

A sample of CONSULT-II display for DTC and 1st trip DTC is shown on the next page. DTC or 1st trip DTC of a malfunction is displayed in SELF-DIAGNOSTIC RESULTS mode for "ENGINE" with CONSULT-II. Time data indicates how many times the vehicle was driven after the last detection of a DTC.

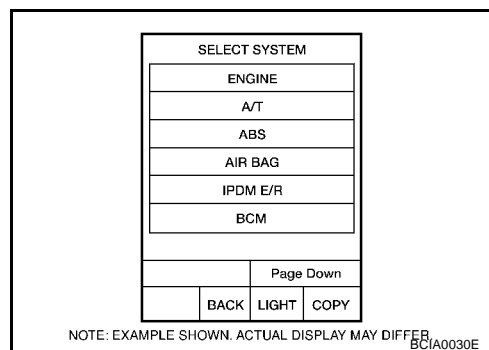

ON BOARD DIAGNOSTIC (OBD) SYSTEM (FOR AUSTRALIA)

If the DTC is being detected currently, the time data will be "0".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	0

SAT015K

If a 1st trip DTC is stored in the ECM, the time data will be "1t".

SELF-DIAG RESULTS	
DTC RESULTS	TIME
PNP SW/CIRC [P0705]	1 t

SAT016K

Freeze Frame Data and 1st Trip Freeze Frame Data

The ECM has a memory function, which stores the driving condition such as fuel system status, calculated load value, engine coolant temperature, short term fuel trim, long term fuel trim, engine speed and vehicle speed at the moment the ECM detects a malfunction.

Data which are stored in the ECM memory, along with the 1st trip DTC, are called 1st trip freeze frame data, and the data, stored together with the DTC data, are called freeze frame data and displayed on CONSULT-II or GST. The 1st trip freeze frame data can only be displayed on the CONSULT-II screen, not on the GST.

Only one set of freeze frame data (either 1st trip freeze frame data or freeze frame data) can be stored in the ECM. 1st trip freeze frame data is stored in the ECM memory along with the 1st trip DTC. There is no priority for 1st trip freeze frame data, and it is updated each time a different 1st trip DTC is detected. However, once freeze frame data (2nd trip detection/MI on) is stored in the ECM memory, 1st trip freeze frame data is no longer stored. Remember, only one set of freeze frame data can be stored in the ECM. The ECM has the following priorities to update the data.

Priority	Items	
1	Freeze frame data	Misfire — DTC: P0300 - P0306 Fuel Injection System Function — DTC: P0171, P0172, P0174, P0175
2		Except the above items (Includes CVT related items)
3	1st trip freeze frame data	

Both 1st trip freeze frame data and freeze frame data (along with the DTC) are cleared when the ECM memory is erased.

HOW TO ERASE DTC

The diagnostic trouble code can be erased by CONSULT-II, GST or ECM DIAGNOSTIC TEST MODE as described following.

- If the battery cable is disconnected, the diagnostic trouble code will be lost within 24 hours.
- When you erase the DTC, using CONSULT-II or GST is easier and quicker than switching the mode selector on the ECM.

The following emission-related diagnostic information is cleared from the ECM memory when erasing DTC related to OBD. For details, refer to [EC-18, "Emission-related Diagnostic Information"](#).

- Diagnostic trouble codes (DTC)
- 1st trip diagnostic trouble codes (1st trip DTC)
- Freeze frame data

- 1st trip freeze frame data
- System readiness test (SRT) codes
- Test values

HOW TO ERASE DTC (WITH CONSULT-II)

● If a DTC is displayed for both ECM and TCM, it is necessary to be erased for both ECM and TCM.

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Turn CONSULT-II ON and touch "TRANSMISSION".
3. Touch "SELF-DIAG RESULTS".
4. Touch "ERASE". (The DTC in the TCM will be erased.) Then touch "BACK" twice.
5. Touch "ENGINE".
6. Touch "SELF-DIAG RESULTS".
7. Touch "ERASE". (The DTC in the ECM will be erased.)


How to erase DTC (With CONSULT-II)

1. If the ignition switch stays "ON" after repair work, be sure to turn ignition switch "OFF" once. Wait at least 10 seconds and then turn it "ON" (engine stopped) again.

SELECT SYSTEM
IPDM E/R
BCM
AUTO DRIVE POS
AIR PRESSURE MONITOR
TRANSMISSION
METER A/C AMP



SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
CAN DIAG SUPPORT MNTR
CALIB DATA
FUNCTION TEST




SELF-DIAG RESULTS	
DTC RESULTS	TIME
TCC SOLENOID/CIRC [P0740]	PAST

2. Turn CONSULT -II "ON", and touch "TRANSMISSION".

3. Touch "SELF-DIAG RESULTS".


4. Touch "ERASE". (The DTC in the TCM will be erased.)



Touch "BACK".

Touch "BACK".

SELECT SYSTEM
ENGINE
ABS
AIR BAG
ALL MODE AWD/4WD
IPDM E/R
BCM



SELECT DIAG MODE
WORK SUPPORT
SELF-DIAG RESULTS
DATA MONITOR
DATA MONITOR (SPEC)
CAN DIAG SUPPORT MNTR
ACTIVE TEST



SELF-DIAG RESULTS	
DTC RESULTS	TIME
TCC SOLENOID/CIRC [P0740]	0

5. Touch "ENGINE".

6. Touch "SELF-DIAG RESULTS".

7. Touch "ERASE". (The DTC in the ECM will be erased.)

SCIA7508E

HOW TO ERASE DTC (WITH GST)

1. If the ignition switch stays ON after repair work, be sure to turn ignition switch OFF once. Wait at least 10 seconds and then turn it ON (engine stopped) again.
2. Select Mode 4 with GST (Generic Scan Tool). For details, refer to [EC-70. "Generic Scan Tool \(GST\) Function"](#).


Malfunction Indicator (MI)

ACS00AKN

DESCRIPTION

The MI is located on the instrument panel.

1. The MI will light up when the ignition switch is turned ON without the engine running. This is a bulb check.
 - If the MI does not light up, refer to [DI-39, "WARNING LAMPS"](#), or see [EC-272, "MIL AND DATA LINK CONNECTOR"](#).
2. When the engine is started, the MI should go off. If the MI remains on, the on board diagnostic system has detected an engine system malfunction.

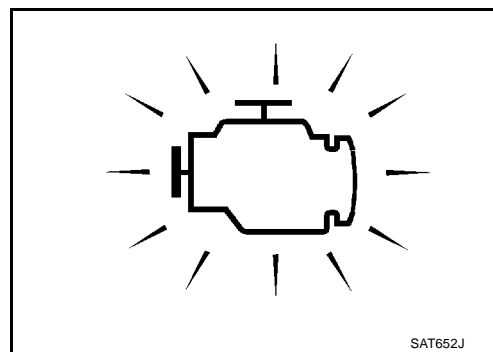

www.CarGeek.ir

TROUBLE DIAGNOSIS

PFP:00004

DTC Inspection Priority Chart

ACS00ADQ

If some DTCs are displayed at the same time, perform inspections one by one based on the following priority chart.

NOTE:

If DTC “U1000 CAN COMM CIRCUIT” is displayed with other DTCs, first perform the trouble diagnosis for “DTC U1000 CAN COMMUNICATION LINE”. Refer to [CVT-59](#) .

Priority	Detected items (DTC)
1	U1000 CAN communication line
2	Except above

Fail-safe

ACS00ADR

The TCM has an electrical fail-safe mode. This mode makes it possible to operate even if there is an error in a main electronic control input/output signal circuit.

FAIL-SAFE FUNCTION

If any malfunction occurs in a sensor or solenoid, this function controls the CVT to make driving possible.

Output Speed Sensor (Secondary Speed Sensor)

The shift pattern is changed in accordance with throttle position when an unexpected signal is sent from the output speed sensor (secondary speed sensor) to the TCM. The manual mode position and second position is inhibited, and the transaxle is put in “D”.

Input Speed Sensor (Primary Speed Sensor)

The shift pattern is changed in accordance with throttle position and secondary speed (vehicle speed) when an unexpected signal is sent from the input speed sensor (primary speed sensor) to the TCM. The manual mode position and second position is inhibited, and the transaxle is put in “D”.

PNP Switch

If an unexpected signal is sent from the PNP switch to the TCM, the transaxle is put in “D”.

Manual Mode Switch

If an unexpected signal is sent from the manual mode switch to the TCM, the transaxle is put in “D”.

CVT Fluid Temperature Sensor

If an unexpected signal is sent from the CVT fluid temperature sensor to the TCM, the gear ratio in use before receiving the unexpected signal is maintained or the gear ratio is controlled to keep engine speed under 5,000 rpm.

Transmission Fluid Pressure Sensor A (Secondary Pressure Sensor)

- If an unexpected signal is sent from the transmission fluid pressure sensor A (secondary pressure sensor) to the TCM, the secondary pressure feedback control is stopped and the offset value obtained before the non-standard condition occurs is used to control line pressure.
- If transmission fluid pressure sensor A (secondary pressure sensor) error signal is input to TCM, secondary pressure feedback control stops, but line pressure is controlled normally.

Pressure Control Solenoid A (Line Pressure Solenoid)

If an unexpected signal is sent from the solenoid to the TCM, the pressure control solenoid A (line pressure solenoid) is turned OFF to achieve the maximum fluid pressure.

Pressure Control Solenoid B (Secondary Pressure Solenoid)

If an unexpected signal is sent from the solenoid to the TCM, the pressure control solenoid B (secondary pressure solenoid) is turned OFF to achieve the maximum fluid pressure.

Torque Converter Clutch Solenoid

If an unexpected signal is sent from the solenoid to the TCM, the torque converter clutch solenoid is turned OFF to cancel the lock-up.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

Step Motor

If an unexpected signal is sent from the step motor to the TCM, the step motor coil phases "A" through "D" are all turned OFF to hold the gear ratio used right before the non-standard condition occurred.

CVT Lock-up Select Solenoid

If an unexpected signal is sent from the solenoid to the TCM, the CVT lock-up select solenoid is turned OFF to cancel the lock-up.

TCM Power Supply (Memory Back-up)

Transaxle assembly is protected by limiting the engine torque when the memory back-up power supply (for controlling) from the battery is not supplied to TCM. Normal status is restored when turning the ignition switch OFF to ON after the normal power supply.


How to Perform Trouble Diagnosis for Quick and Accurate Repair

ACS00ADS

INTRODUCTION


The TCM receives a signal from the vehicle speed sensor, PNP switch and provides shift control or lock-up control via CVT solenoid valves.

Input and output signals must always be correct and stable in the operation of the CVT system. The CVT system must be in good operating condition and be free of valve seizure, solenoid valve malfunction, etc.

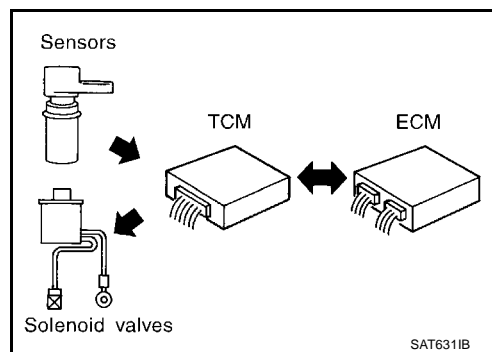

It is much more difficult to diagnose an error that occurs intermittently rather than continuously. Most intermittent errors are caused by poor electric connections or improper wiring. In this case, careful checking of suspected circuits may help prevent the replacement of good parts.


A visual check only may not find the cause of the errors. A road test with CONSULT-II or a circuit tester connected should be performed. Follow the [CVT-24, "WORK FLOW"](#).

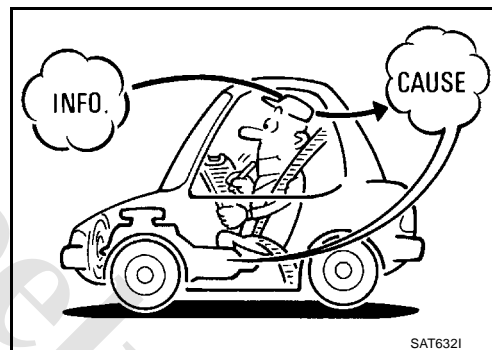

Before undertaking actual checks, take a few minutes to talk with a customer who approaches with a driveability complaint. The customer can supply good information about such errors, especially intermittent ones. Find out what symptoms are present and under what conditions they occur. A "DIAGNOSTIC WORKSHEET" as shown on the example (Refer to [CVT-27](#)) should be used.

Start your diagnosis by looking for "conventional" errors first. This will help troubleshoot driveability errors on an electronically controlled engine vehicle.

Also check related Service bulletins.

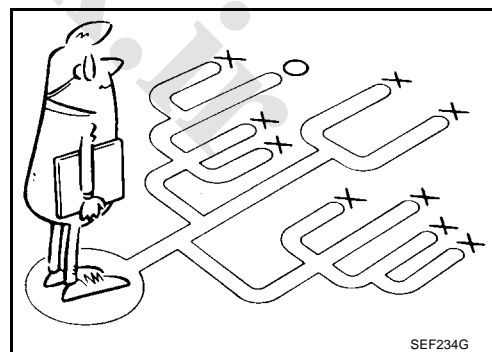


WORK FLOW

A good understanding of the malfunction conditions can make troubleshooting faster and more accurate. In general, each customer feels differently about a malfunction. It is important to fully understand the symptoms or conditions for a customer complaint.

Make good use of the two sheets provided, [CVT-27, "Information From Customer"](#) and [CVT-27, "Diagnostic Worksheet Chart"](#), to perform the best troubleshooting possible.

Work Flow Chart (For Australia)

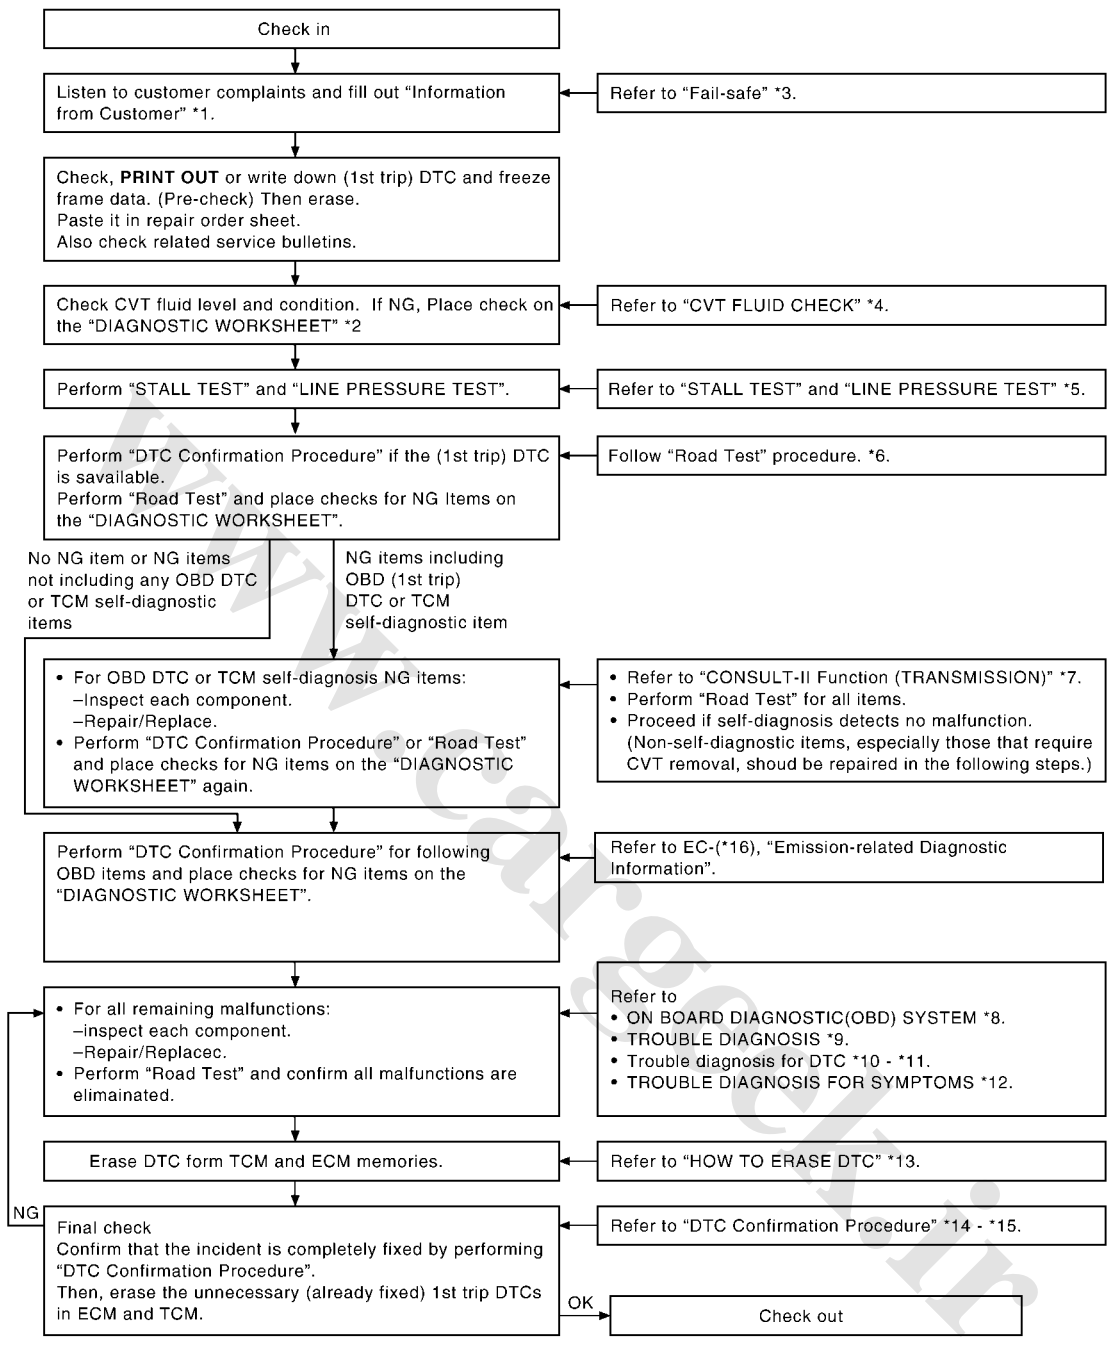


A
B
CVT
D
E
F
G
H
I
J
K
L
M

- *1. [CVT-27](#)
- *2. [CVT-27](#)
- *3. [CVT-23](#)
- *4. [CVT-33](#)
- *5. [CVT-33](#), [CVT-35](#)
- *6. [CVT-37](#)
- *7. [CVT-46](#)
- *8. [CVT-19](#)
- *9. [CVT-23](#)
- *10. [CVT-59](#)
- *11. [CVT-116](#)
- *12. [CVT-118](#)
- *13. [CVT-20](#)
- *14. [CVT-59](#)
- *15. [CVT-116](#)
- *16. [EC-18](#)

SCIA7440E

Work Flow Chart (Except For Australia)

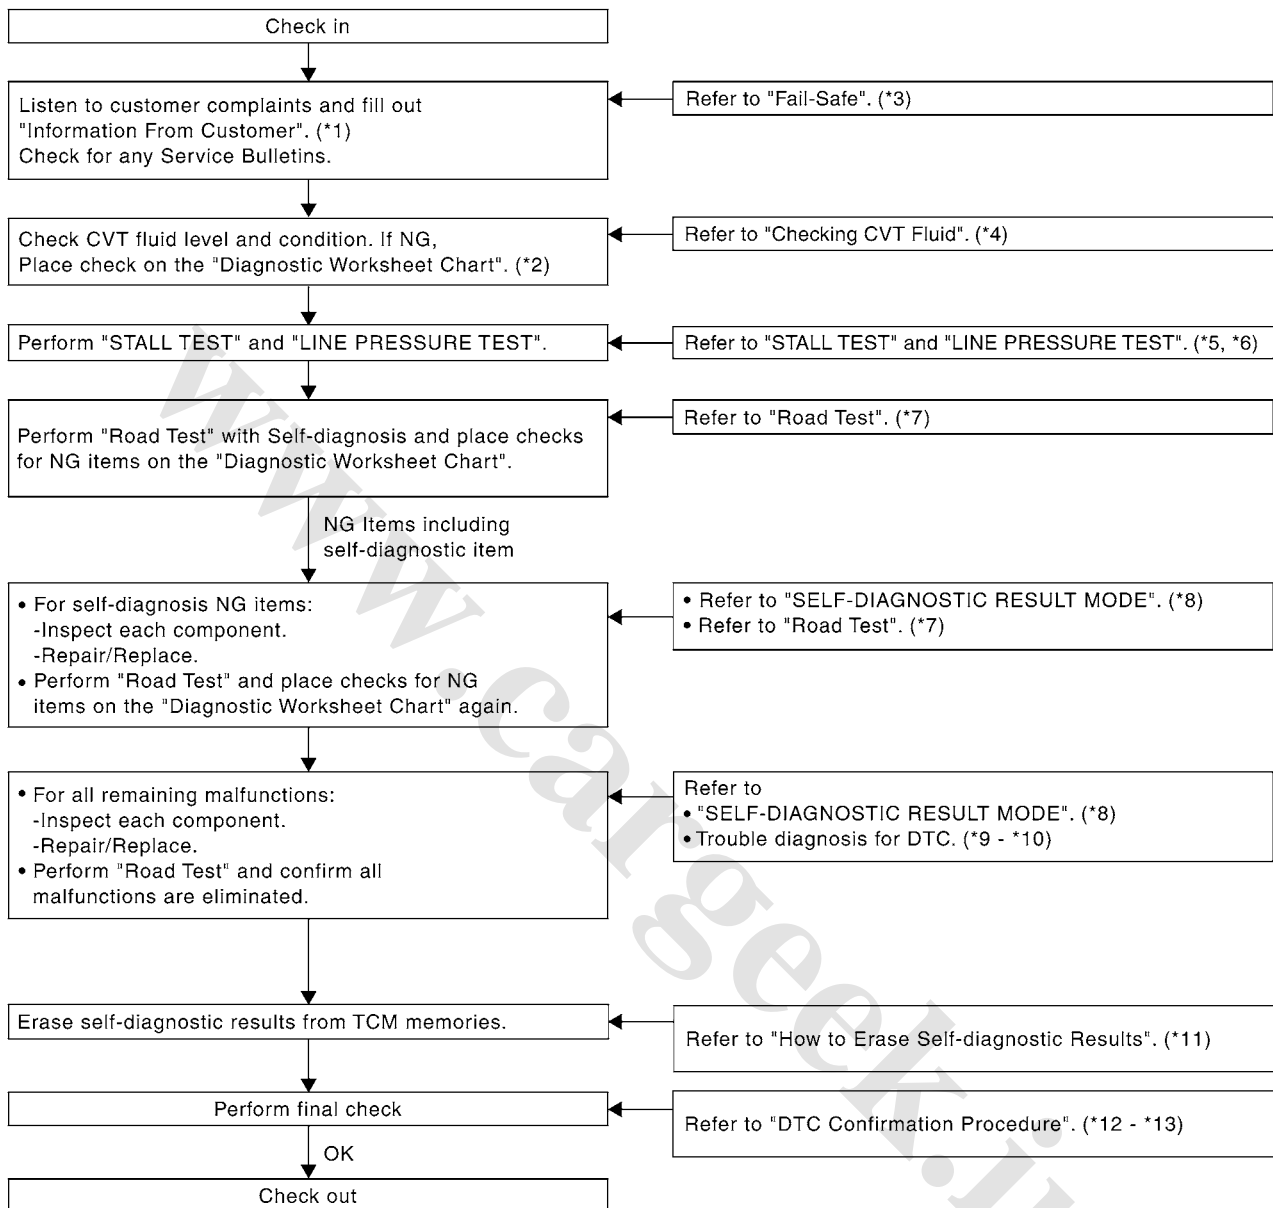

SCIA6682E

*1. [CVT-27](#)

*2. [CVT-27](#)

*3. [CVT-23](#)

*4. [CVT-33](#)

*5. [CVT-33](#)

*6. [CVT-35](#)

*7. [CVT-37](#)

*8. [CVT-50](#)

*9. [CVT-59](#)

*10. [CVT-116](#)

*11. [CVT-54](#)

*12. [CVT-59](#)

*13. [CVT-116](#)


	<input type="checkbox"/> Perform road test.	CVT-37
4	4-1.	<p>Check before engine is started CVT-39</p> <p><input type="checkbox"/> CVT-125. "CVT Indicator Lamp Does Not Come On"</p> <p><input type="checkbox"/> Perform self-diagnosis. Enter checks for detected items. CVT-50</p> <ul style="list-style-type: none"> <input type="checkbox"/> CVT-59. "DTC U1000 CAN COMMUNICATION LINE" <input type="checkbox"/> CVT-61. "DTC P0615 START SIGNAL CIRCUIT" <input type="checkbox"/> CVT-63. "DTC P0703 STOP LAMP SWITCH CIRCUIT" <input type="checkbox"/> CVT-64. "DTC P0705 PARK/NEUTRAL POSITION SWITCH" <input type="checkbox"/> CVT-68. "DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT" <input type="checkbox"/> CVT-71. "DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)" <input type="checkbox"/> CVT-74. "DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)" <input type="checkbox"/> CVT-76. "DTC P0725 ENGINE SPEED SIGNAL" <input type="checkbox"/> CVT-77. "DTC P0730 BELT DAMAGE" <input type="checkbox"/> CVT-78. "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE" <input type="checkbox"/> CVT-81. "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)" <input type="checkbox"/> CVT-82. "DTC P0745 LINE PRESSURE SOLENOID VALVE" <input type="checkbox"/> CVT-85. "DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-86. "DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-87. "DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-90. "DTC P0826 MANUAL MODE SWITCH CIRCUIT" <input type="checkbox"/> CVT-94. "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)" <input type="checkbox"/> CVT-97. "DTC P0841 PRESSURE SENSOR FUNCTION" <input type="checkbox"/> CVT-98. "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)" <input type="checkbox"/> CVT-101. "DTC P0868 SECONDARY PRESSURE DOWN" <input type="checkbox"/> CVT-102. "DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)" <input type="checkbox"/> CVT-105. "DTC P1705 THROTTLE POSITION SENSOR" <input type="checkbox"/> CVT-106. "DTC P1722 ESTM VEHICLE SPEED SIGNAL" <input type="checkbox"/> CVT-107. "DTC P1723 CVT SPEED SENSOR FUNCTION" <input type="checkbox"/> CVT-108. "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM" <input type="checkbox"/> CVT-109. "DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT" <input type="checkbox"/> CVT-113. "DTC P1777 STEP MOTOR - CIRCUIT" <input type="checkbox"/> CVT-116. "DTC P1778 STEP MOTOR - FUNCTION"
	4-2.	<p>Check at idle CVT-39</p> <ul style="list-style-type: none"> <input type="checkbox"/> CVT-126. "Engine Cannot Be Started in "P" or "N" Position" <input type="checkbox"/> CVT-127. "In "P" Position, Vehicle Moves Forward or Backward When Pushed" <input type="checkbox"/> CVT-127. "In "N" Position, Vehicle Moves" <input type="checkbox"/> CVT-128. "Large Shock "N" → "R" Position" <input type="checkbox"/> CVT-129. "Vehicle Does Not Creep Backward in "R" Position" <input type="checkbox"/> CVT-130. "Vehicle Does Not Creep Forward in "D" Position"

4	4-3.	Cruise test	CVT-41
		<ul style="list-style-type: none"> <input type="checkbox"/> CVT-131, "CVT Does Not Shift" <input type="checkbox"/> CVT-132, "Cannot Be Changed to Manual Mode" <input type="checkbox"/> CVT-132, "CVT Does Not Shift in Manual Mode" <input type="checkbox"/> CVT-134, "Vehicle Does Not Decelerate by Engine Brake" <input type="checkbox"/> Perform self-diagnosis. Enter checks for detected items. CVT-50 	
		<ul style="list-style-type: none"> <input type="checkbox"/> CVT-59, "DTC U1000 CAN COMMUNICATION LINE" <input type="checkbox"/> CVT-61, "DTC P0615 START SIGNAL CIRCUIT" <input type="checkbox"/> CVT-63, "DTC P0703 STOP LAMP SWITCH CIRCUIT" <input type="checkbox"/> CVT-64, "DTC P0705 PARK/NEUTRAL POSITION SWITCH" <input type="checkbox"/> CVT-68, "DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT" <input type="checkbox"/> CVT-71, "DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)" <input type="checkbox"/> CVT-74, "DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)" <input type="checkbox"/> CVT-76, "DTC P0725 ENGINE SPEED SIGNAL" <input type="checkbox"/> CVT-77, "DTC P0730 BELT DAMAGE" <input type="checkbox"/> CVT-78, "DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE" <input type="checkbox"/> CVT-81, "DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)" <input type="checkbox"/> CVT-82, "DTC P0745 LINE PRESSURE SOLENOID VALVE" <input type="checkbox"/> CVT-85, "DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-86, "DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-87, "DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)" <input type="checkbox"/> CVT-90, "DTC P0826 MANUAL MODE SWITCH CIRCUIT" <input type="checkbox"/> CVT-94, "DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)" <input type="checkbox"/> CVT-97, "DTC P0841 PRESSURE SENSOR FUNCTION" <input type="checkbox"/> CVT-98, "DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)" <input type="checkbox"/> CVT-101, "DTC P0868 SECONDARY PRESSURE DOWN" <input type="checkbox"/> CVT-102, "DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)" <input type="checkbox"/> CVT-105, "DTC P1705 THROTTLE POSITION SENSOR" <input type="checkbox"/> CVT-106, "DTC P1722 ESTM VEHICLE SPEED SIGNAL" <input type="checkbox"/> CVT-107, "DTC P1723 CVT SPEED SENSOR FUNCTION" <input type="checkbox"/> CVT-108, "DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM" <input type="checkbox"/> CVT-109, "DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT" <input type="checkbox"/> CVT-113, "DTC P1777 STEP MOTOR - CIRCUIT" <input type="checkbox"/> CVT-116, "DTC P1778 STEP MOTOR - FUNCTION" 	
5		<input type="checkbox"/> Inspect each system for items found to be NG in the self-diagnosis and repair or replace the malfunctioning parts.	
6		<input type="checkbox"/> Perform all road tests and enter the checks again for the required items.	CVT-37
7		<input type="checkbox"/> For any remaining NG items, perform the "diagnosis procedure" and repair or replace the malfunctioning parts.	
8		<input type="checkbox"/> Erase the results of the self-diagnosis from the TCM.	CVT-54

A
B
CVT
D
E
F
G
H
I
J
K
L
M

CVT Electrical Parts Location


LHD models

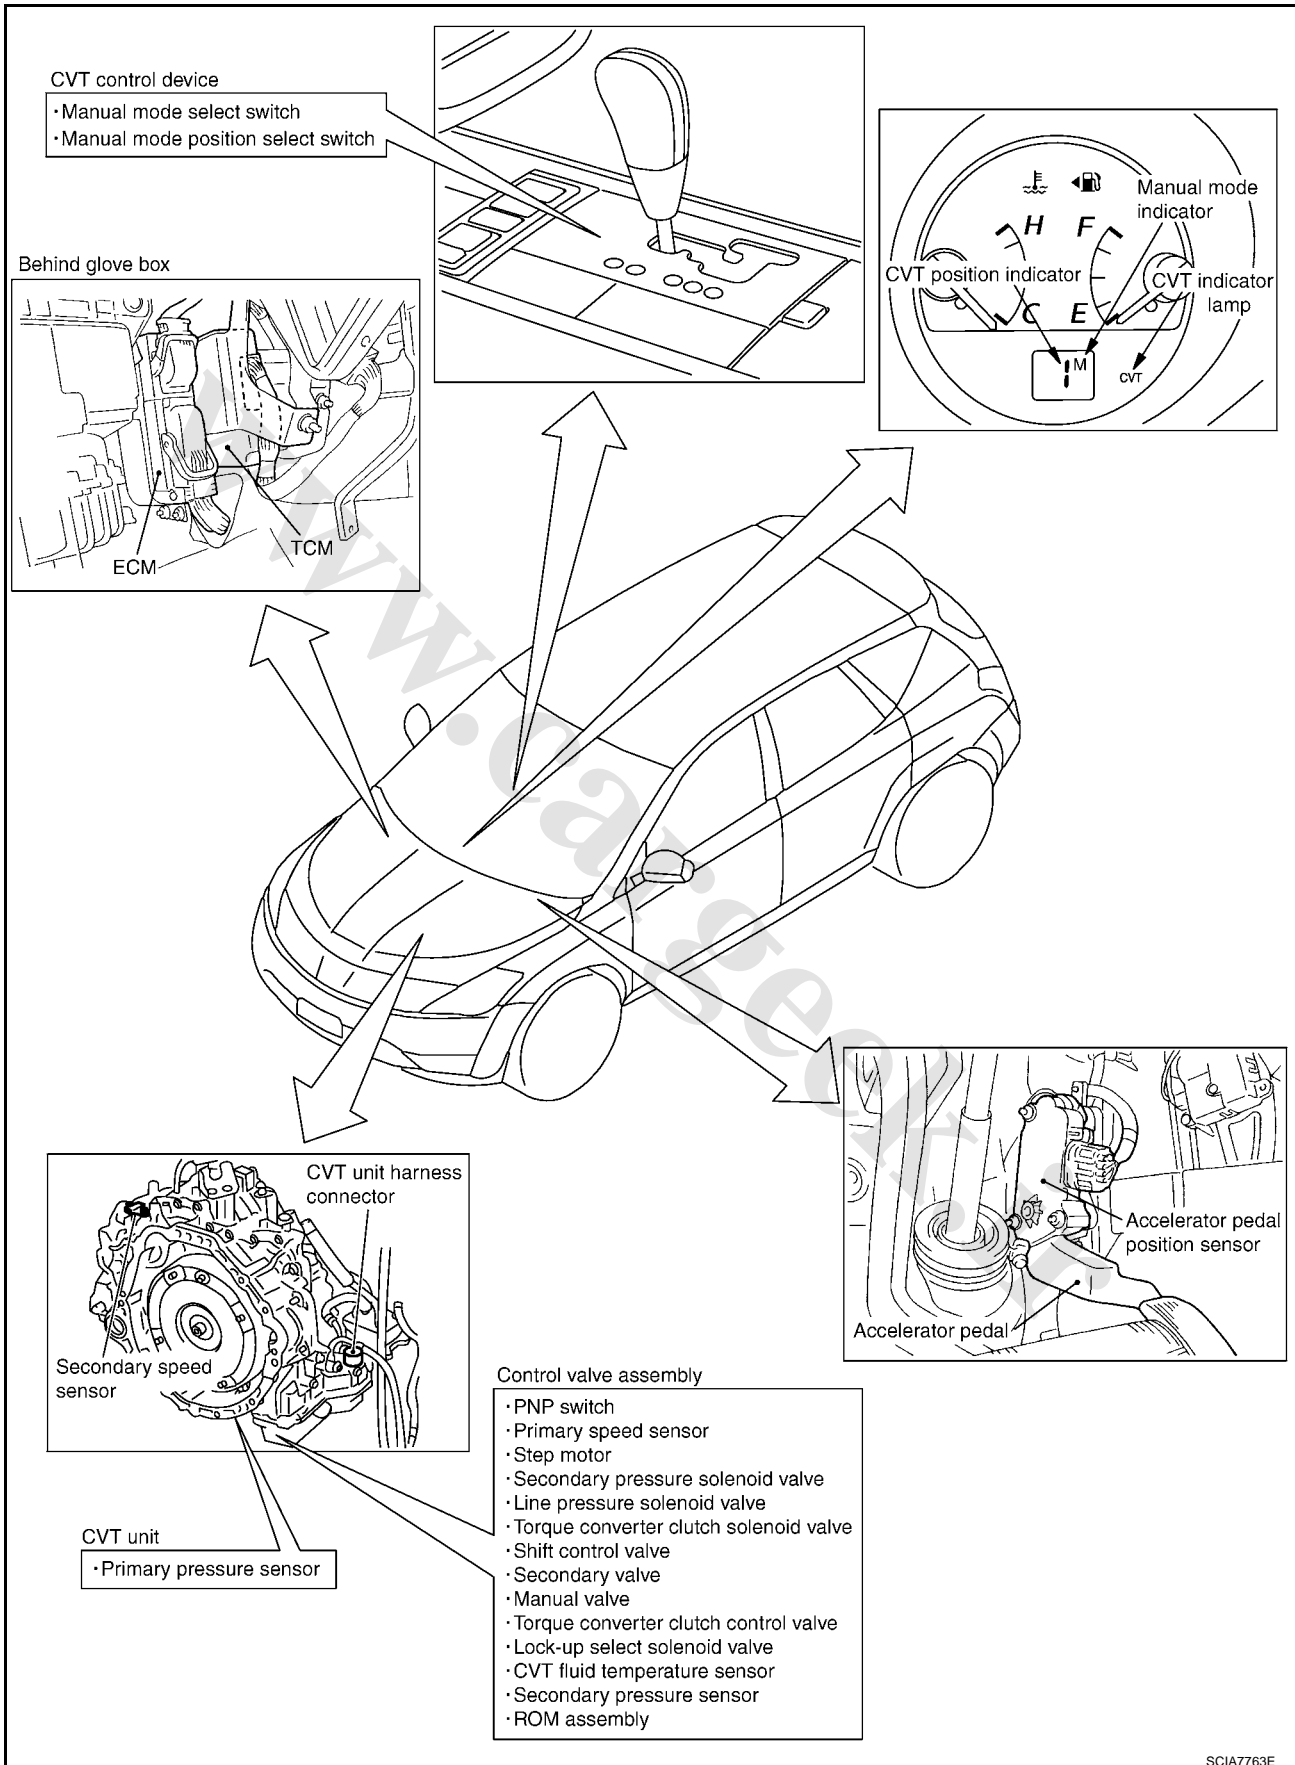

SCIA7763E


RHD models

A
B
CVT
D
E
F
G
H
I
J
K
L
M

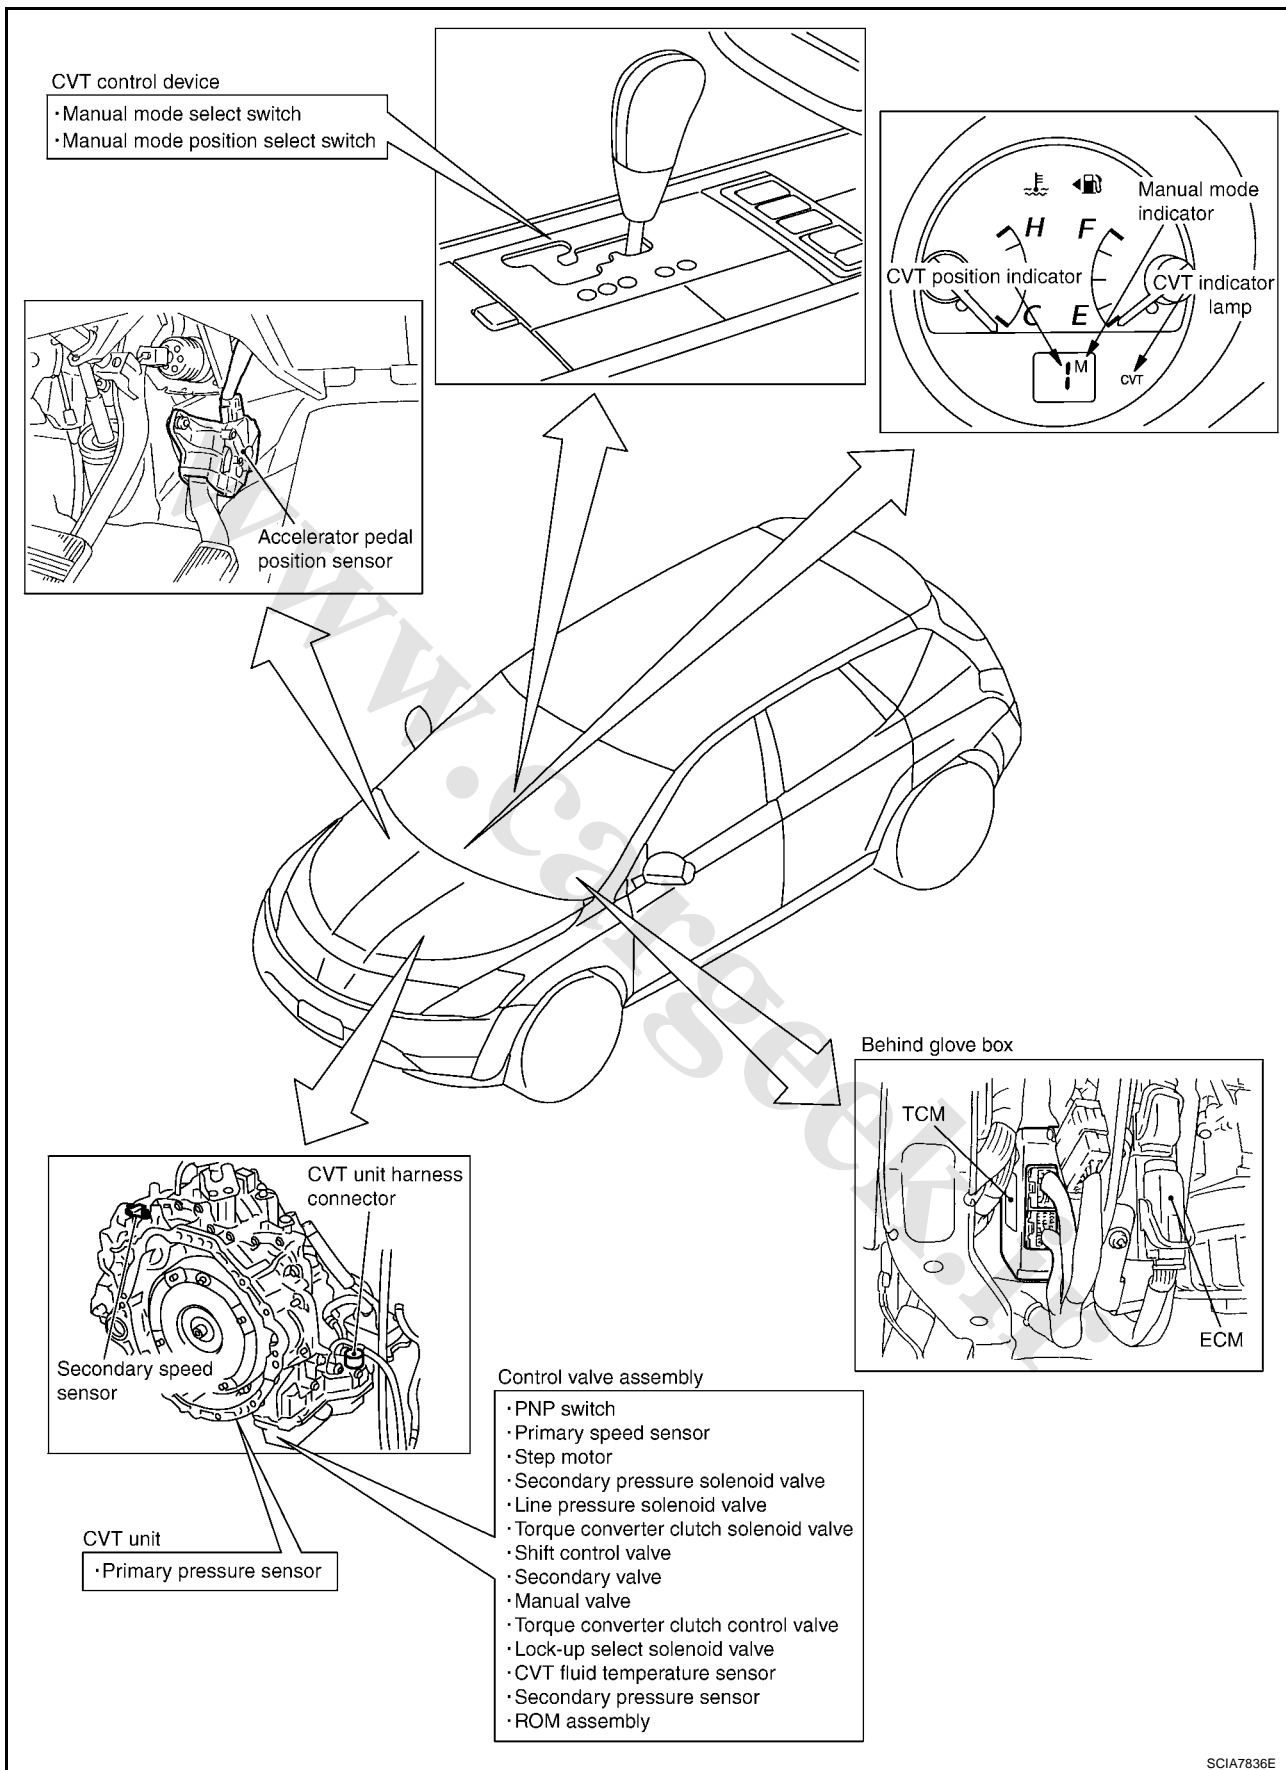

SCIA7836E

Circuit Diagram

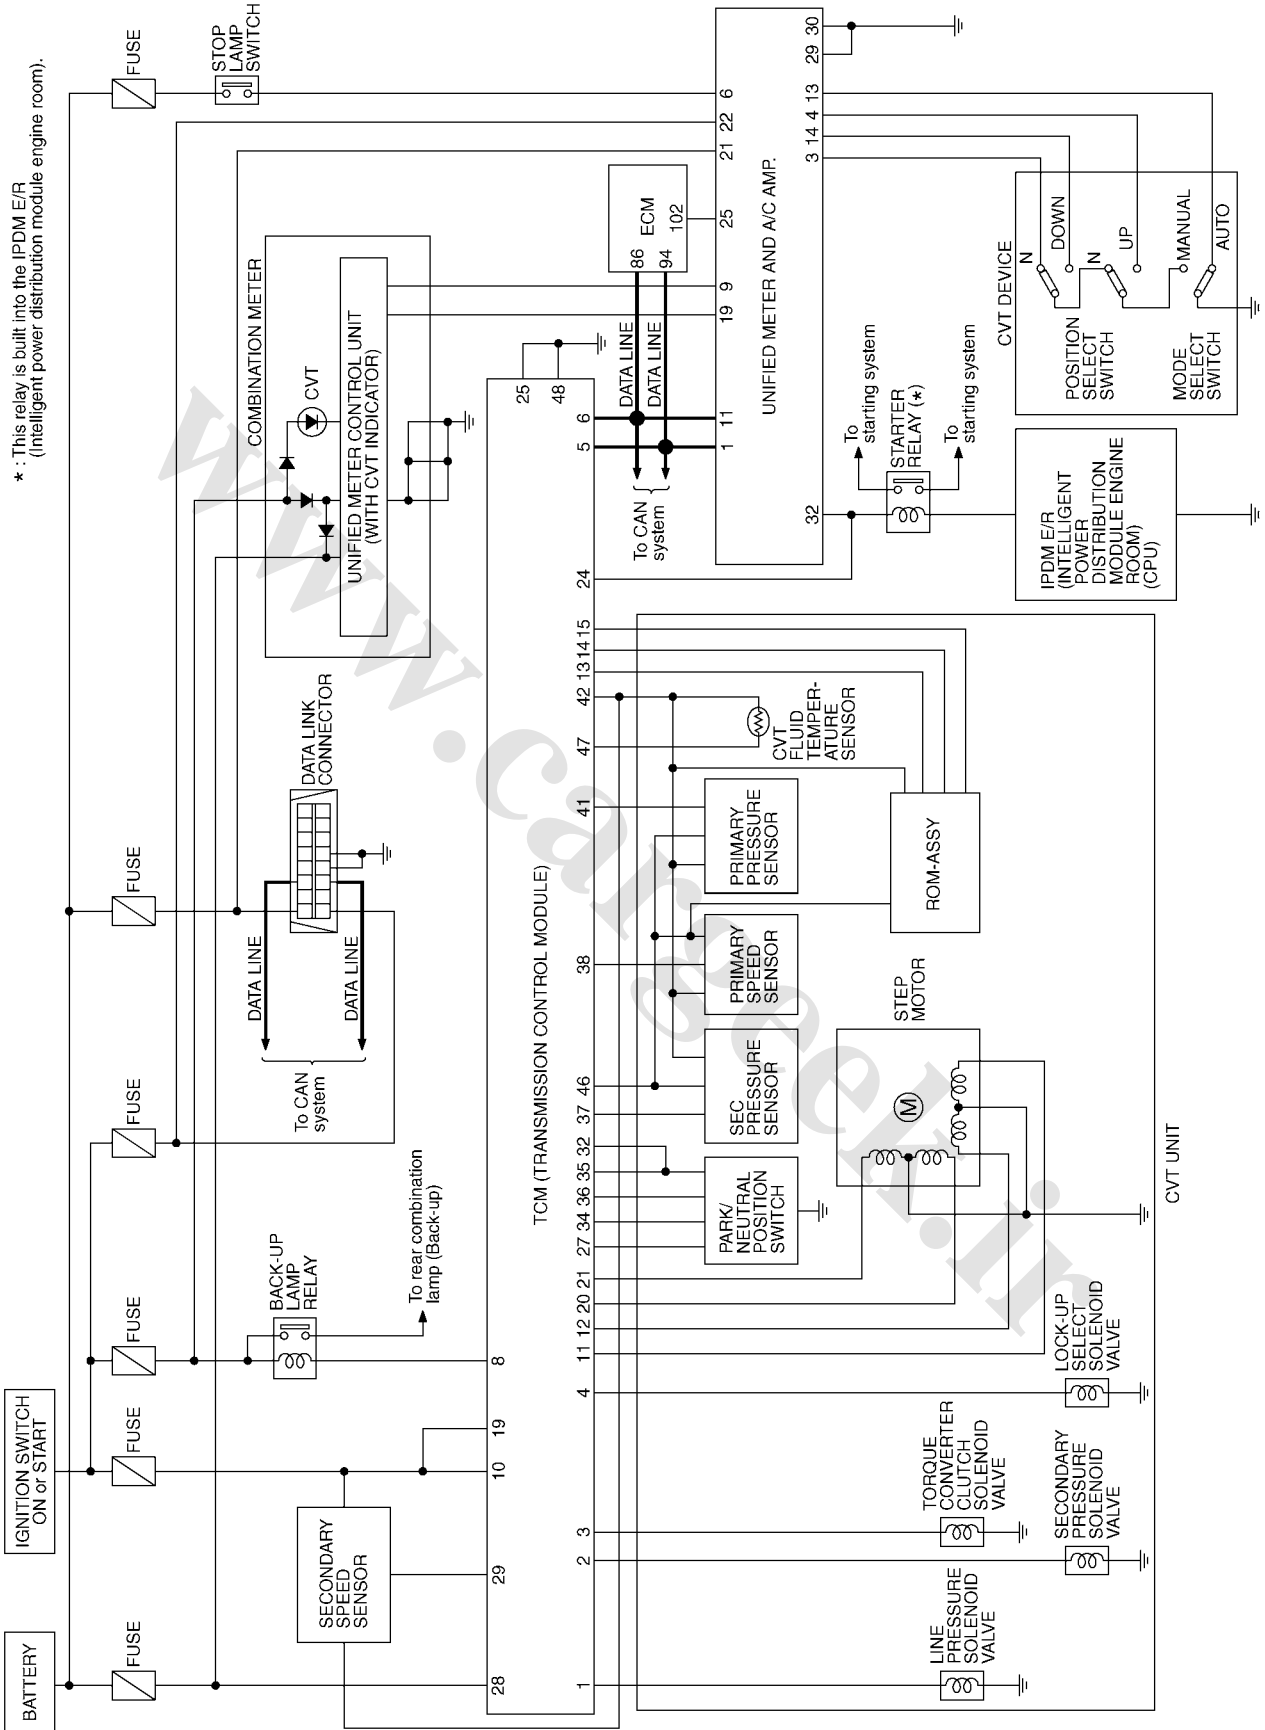

TCWB0135E

Inspections Before Trouble Diagnosis

CVT FLUID CHECK


CVT Fluid Leakage and CVT Fluid Level Check

- Inspect for fluid leakage and check the fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#).

CVT Fluid Condition Check

Inspect the fluid condition.


Fluid status	Conceivable cause	Required operation
Varnished (viscous varnish state)	Clutch, brake scorched	Replace the CVT fluid and check the CVT main unit and the vehicle for malfunctions (wire harnesses, cooler pipes, etc.)
Milky white or cloudy	Water in the fluid	Replace the CVT fluid and check for places where water is getting in.
Large amount of metal powder mixed in	Unusual wear of sliding parts within CVT	Replace the CVT fluid and check for improper operation of the CVT.

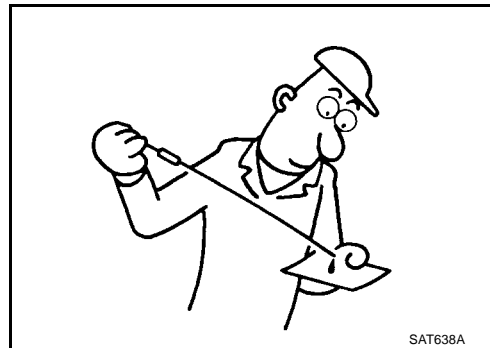


STALL TEST

Stall Test Procedure


- Inspect the amount of engine oil. Replenish the engine oil if necessary.
- Drive for about 10 minutes to warm up the vehicle so that the CVT fluid temperature is 50 to 80°C (122 to 176°F). Inspect the amount of CVT fluid. Replenish if necessary.

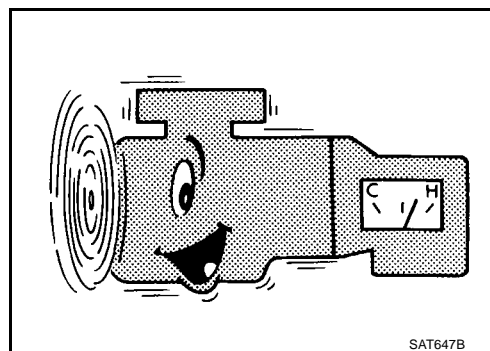

- Securely engage the parking brake so that the tires do not turn.
- Install a tachometer where it can be seen by driver during test.
 - It is good practice to mark the point of specified engine rpm on indicator.

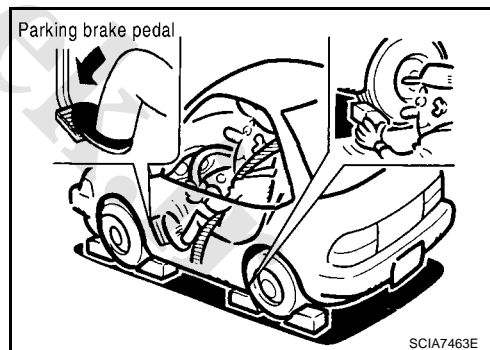

- Start engine, apply foot brake, and place selector lever in "D" position.

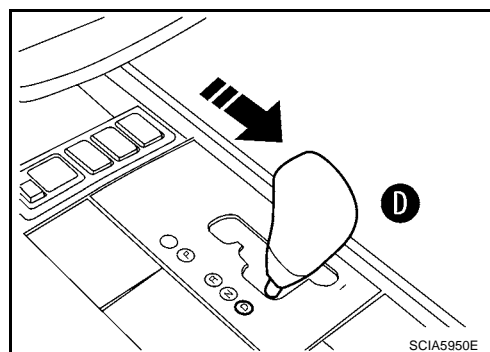

6. While holding down the foot brake, gradually press down the accelerator pedal.
7. Quickly read off the stall speed, and then quickly remove your foot from the accelerator pedal.

CAUTION:

Do not hold down the accelerator pedal for more than 5 seconds during this test.


Stall speed: 2,700 - 3,250 rpm

8. Move the selector lever to the “N” position.
9. Cool down the CVT fluid.

CAUTION:

Run the engine at idle for at least one minute.

10. Repeat steps 6 through 9 with selector lever in “R” position.

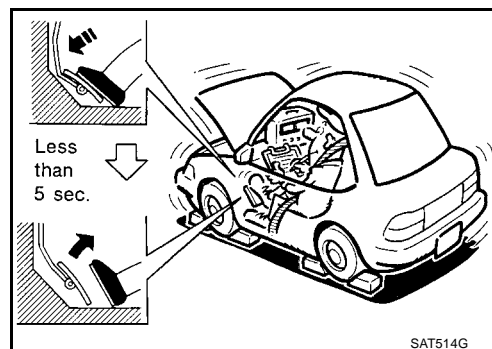

Judgement Stall Test

	Selector lever position		Expected problem location
	“D”	“R”	
Stall rotation	H	O	● Forward clutch
	O	H	● Reverse brake
	L	L	● Engine and torque converter one-way clutch
	H	H	● Line pressure low ● Primary pulley ● Secondary pulley ● Steel belt


O: Stall speed within standard value position.

H: Stall speed is higher than standard value.

L: Stall speed is lower than standard value.

LINE PRESSURE TEST

Line Pressure Test Port

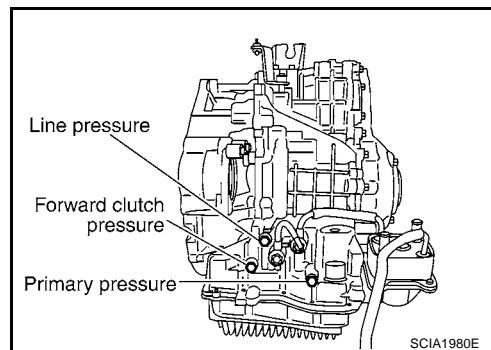

Line Pressure Test Procedure

1. Inspect the amount of engine oil and replenish if necessary.
2. Drive the car for about 10 minutes to warm it up so that the CVT fluid reaches in the range of 50 to 80°C (122 to 176°F), then inspect the amount of CVT fluid and replenish if necessary.

NOTE:


The CVT fluid temperature rises in the range of 50 to 80°C (122 to 176°F) during 10 minutes of driving.

3. After warming up CVT, remove the oil pressure detection plug and install the oil pressure gauge. (Special service tool: ST2505S001)

CAUTION:

When using the oil pressure gauge, be sure to use the O-ring attached to the oil pressure detection plug.

4. Securely engage the parking brake so that the tires do not turn.

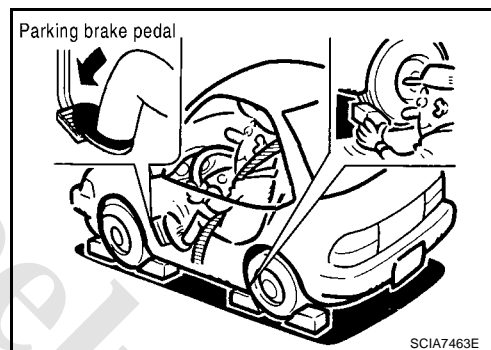

5. Start the engine, and then measure the line pressure at idle speed.

CAUTION:


Keep the brake pedal pressed all the way down during measurement.

6. After the measurements are complete, install the oil pressure detection plug and tighten to the specified torque below.

 : 7.5 N·m (0.77 kg·m, 66 in-lb)

CAUTION:

- Do not reuse O-ring.
- Apply CVT fluid to O-ring.

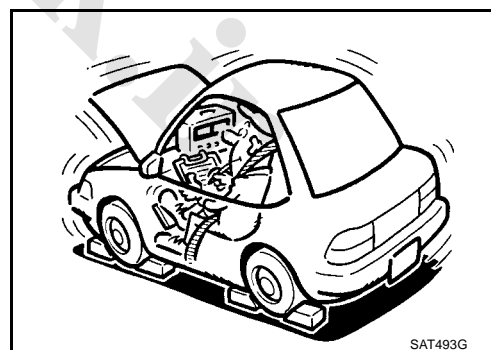

Line Pressure

Engine	Engine speed	Line pressure kPa (bar, kg/cm ² , psi)
		"R", "D" positions
VQ35DE	At idle speed	750 (7.50, 7.65, 108.8)
	At stall speed	5,700 (57.00, 58.14, 826.5)* ¹


*¹ : Reference values

Judgement of Line Pressure Test


Judgement		Possible cause
Idle speed	Low for all positions ("P", "R", "N", "D")	<p>Possible causes include malfunctions in the pressure supply system and low oil pump output. For example</p> <ul style="list-style-type: none"> ● Oil pump wear ● Pressure regulator valve or plug sticking or spring fatigue ● Oil strainer ⇒ oil pump ⇒ pressure regulator valve passage oil leak ● Engine idle speed too low
	Only low for a specific position	<p>Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.</p>
	High	<p>Possible causes include a sensor malfunction or malfunction in the line pressure adjustment function. For example</p> <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● CVT fluid temperature sensor malfunction ● Pressure control solenoid A (line pressure solenoid) malfunction (sticking in "OFF" state, filter clog, cut line) ● Pressure regulator valve or plug sticking
Stall speed	Oil pressure does not rise higher than the oil pressure for idle.	<p>Possible causes include a sensor malfunction or malfunction in the pressure adjustment function. For example</p> <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● TCM malfunction ● Pressure control solenoid A (line pressure solenoid) malfunction (shorting, sticking in "ON" state) ● Pressure regulator valve or plug sticking
	The pressure rises, but does not enter the standard position.	<p>Possible causes include malfunctions in the pressure supply system and malfunction in the pressure adjustment function. For example</p> <ul style="list-style-type: none"> ● Accelerator pedal position signal malfunction ● Pressure control solenoid A (line pressure solenoid) malfunction (sticking, filter clog) ● Pressure regulator valve or plug sticking
	Only low for a specific position	<p>Possible causes include an oil pressure leak in a passage or device related to the position after the pressure is distributed by the manual valve.</p>

Road Test DESCRIPTION

- The purpose of the test is to determine overall performance of CVT and analyze causes of problems.
- The road test consists of the following three parts:
 1. "Check Before Engine Is Started" [CVT-39](#) .
 2. "Check at Idle" [CVT-39](#) .
 3. "Cruise Test" [CVT-41](#) .

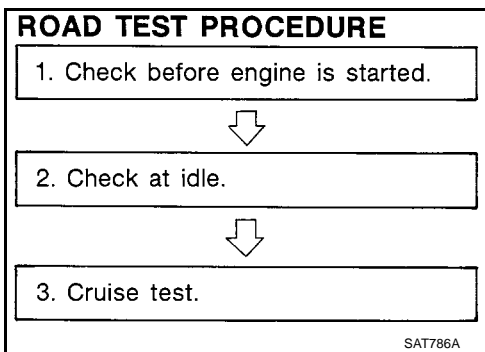

- Before road test, familiarize yourself with all test procedures and items to check.
- Perform tests on all items until specified symptom is found. Troubleshoot items which check out No Good after road test.

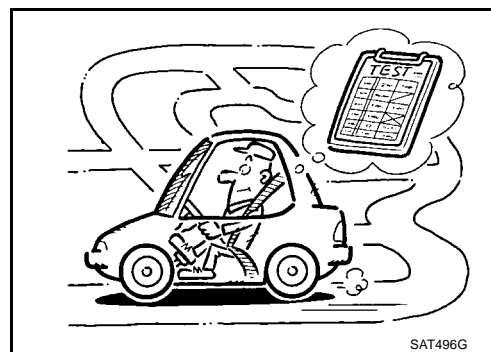


CONSULT-II OPERATION PROCEDURE


CAUTION:

If CONSULT-II is used with no connection of CONSULT-II CONVERTER, malfunctions might be detected in self-diagnosis depending on control unit which performs CAN communication.

- Using CONSULT-II, perform a cruise test and record the result.
 - Print the result and ensure that shifts and lock-ups take place as per Shift Schedule.
1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.

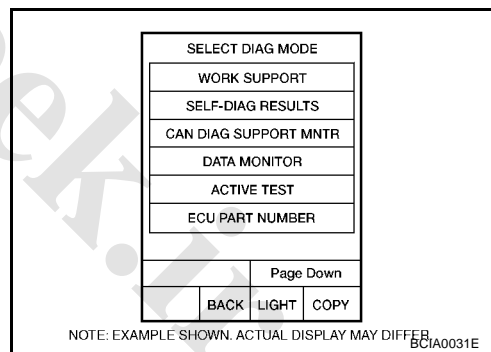

2. Touch "MAIN SIGNALS" to set recording condition.
3. See "Numerical Display", "Bar chart Display" or "Line Graph Display".
4. Touch "START".

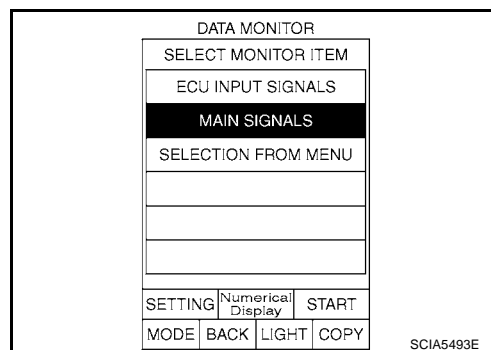

5. When performing cruise test. Refer to [CVT-41, "Cruise Test"](#) .
6. After finishing cruise test part, touch "RECORD".

DATA MONITOR			
MONITOR	NO DTC		
VEHICLE SPEED	0 km / h		
PRI SPEED	64 rpm		
ENG SPEED	672 rpm		
SLIP REV	127 rpm		
GEAR RATIO	2.37		
ACC PEDAL OPEN	0.0 / 8		
VENG TRQ	25.6 Nm		
SEC PRESS	0.925 MPa		
PRI PRESS	1.075MPa		
		Page Up	
		RECORD	
MODE	BACK	LIGHT	COPY

SCIA4584E

7. Touch "STORE".

REAL-TIME DIAG			
NO DTC			
		STORE	DISPLAY
BACK	LIGHT	COPY	

SCIA4492E

8. Touch "BACK".

STORE		SAVE REC DATA	
SYSTEM			
TRANSMISSION	06/19/2003, 15:17:47		
TRANSMISSION	06/19/2003, 15:22:23		
		STORE	DISPLAY
MODE	BACK	LIGHT	COPY

SCIA4493E

9. Touch "DISPLAY".

REAL-TIME DIAG			
NO DTC			
		STORE	DISPLAY
BACK	LIGHT	COPY	

SCIA4492E

10. Touch "PRINT".
11. Check the monitor data printed out.

Trigger	VEHICLE SPEED	PRI SPEED	ENG SPEED
	km/h	rpm	rpm
00'00	0	64	640
00'21	0	64	640
00'41	0	64	640
00'62	0	64	640
00'83	0	64	640
01'05	0	64	640
01'25	0	64	640
01'46	0	64	640
01'67	0	64	640
01'88	0	64	640
Graph	PRINT	Page Up	^^ Page Down
Print All		v v	>>
MODE	BACK	LIGHT	COPY

SCIA4494E

Check Before Engine Is Started

1. CHECK CVT INDICATOR LAMP

1. Park vehicle on flat surface.
2. Move selector lever to "P" position.
3. Turn ignition switch OFF. Wait at least 5 seconds.
4. Turn ignition switch ON. (Do not start engine.)


Does CVT indicator lamp come on for about 2 seconds?

YES >> 1. Turn ignition switch OFF.

2. Perform self-diagnosis and note NG items. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#).

3. Go to [CVT-39, "Check at Idle"](#).

NO >> Stop "Road Test". Go to [CVT-125, "CVT Indicator Lamp Does Not Come On"](#).

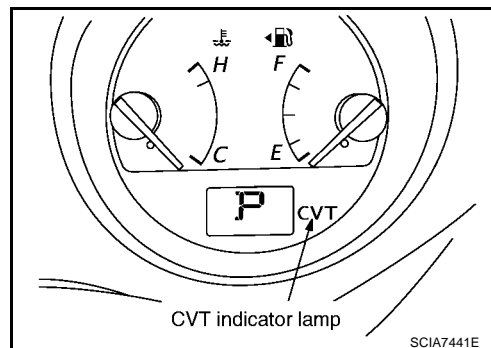

A
B
CVT

D

E

Check at Idle


1. CHECK STARTING THE ENGINE

1. Park vehicle on flat surface.
2. Move selector lever to "P" or "N" position.
3. Turn ignition switch OFF.
4. Turn ignition switch to START position.

Is engine started?

YES >> GO TO 2.

NO >> Stop "Road Test". Mark the box on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Go to [CVT-126, "Engine Cannot Be Started in "P" or "N" Position"](#).

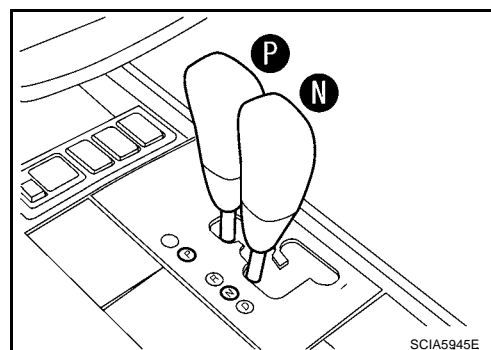

F

G

H

I

J


2. CHECK STARTING THE ENGINE

1. Turn ignition switch ON.
2. Move selector lever to "D", "M" or "R" position.
3. Turn ignition switch to START position.

Is engine started?

YES >> Stop "Road Test". Mark the box on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Go to [CVT-126, "Engine Cannot Be Started in "P" or "N" Position"](#).

NO >> GO TO 3.

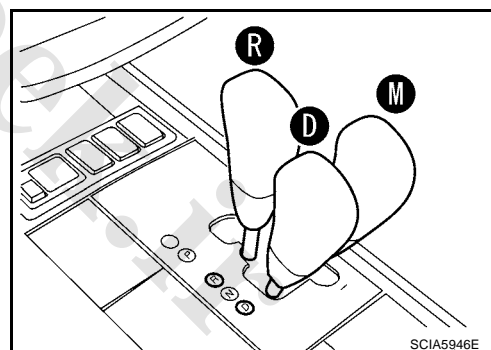

K

L

M


3. CHECK "P" POSITION FUNCTION

1. Move selector lever to "P" position.
2. Turn ignition switch OFF.
3. Release parking brake.
4. Push vehicle forward or backward.
5. Apply parking brake.

Does vehicle move when it is pushed forward or backward?

YES >> Mark the box [CVT-127, "In "P" Position, Vehicle Moves Forward or Backward When Pushed"](#) on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

NO >> GO TO 4.

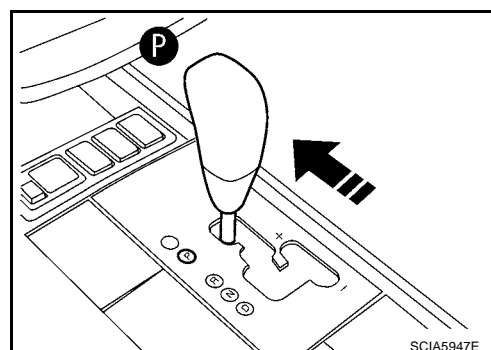


4. CHECK "N" POSITION FUNCTION

1. Start engine.
2. Move selector lever to "N" position.
3. Release parking brake.

Does vehicle move forward or backward?

- YES >> Mark the box "In CVT-127, "In "N" Position, Vehicle Moves" on the CVT-27, "DIAGNOSTIC WORKSHEET" . Continue "Road Test".
- NO >> GO TO 5.

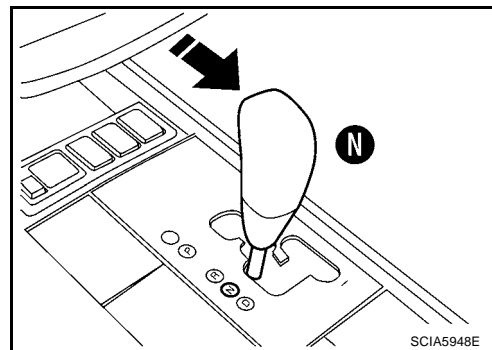


5. CHECK SHIFT SHOCK

1. Apply foot brake.
2. Move selector lever to "R" position.

Is there large shock when changing from "N" to "R" position?

- YES >> Mark the box CVT-128, "Large Shock "N" → "R" Position" on the CVT-27, "DIAGNOSTIC WORKSHEET" . Continue "Road Test".
- NO >> GO TO 6.

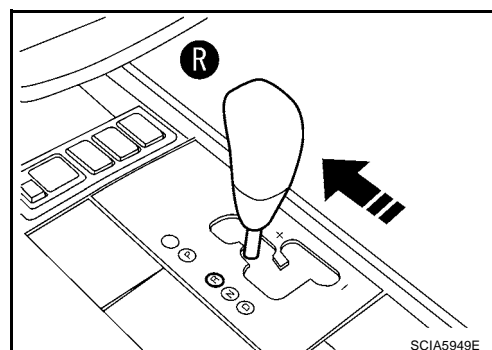

6. CHECK "R" POSITION FUNCTION

Release foot brake for several seconds.

Does vehicle creep backward when foot brake is released?


- YES >> GO TO 7.
- NO >> Mark the box CVT-129, "Vehicle Does Not Creep Backward in "R" Position" on the CVT-27, "DIAGNOSTIC WORKSHEET" . Continue "Road Test".

7. CHECK "D" POSITION FUNCTION

Move selector lever to "D" position and check if vehicle creeps forward.

Does vehicle creep forward in "D" position?

- YES >> Go to CVT-41, "Cruise Test" .
- NO >> Mark the box CVT-130, "Vehicle Does Not Creep Forward in "D" Position" on the CVT-27, "DIAGNOSTIC WORKSHEET" . Continue "Road Test".

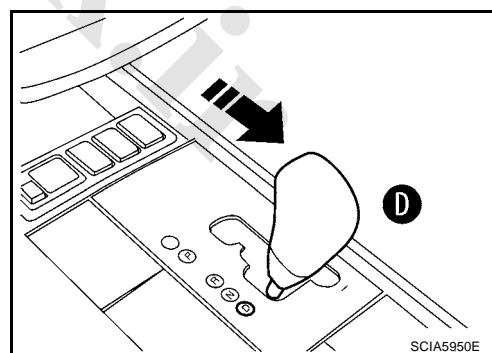


Cruise Test

1. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 1


1. Drive vehicle for approximately 10 minutes to warm engine oil and CVT fluid up to operating temperature.

CVT fluid operating temperature: 50 - 80°C (122 - 176°F)


2. Park vehicle on flat surface.
3. Move selector lever to "P" position.
4. Start engine.

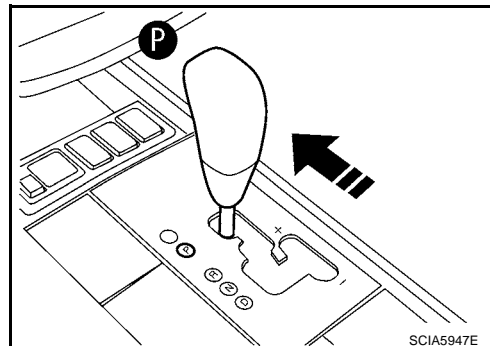

5. Move selector lever to "D" position.

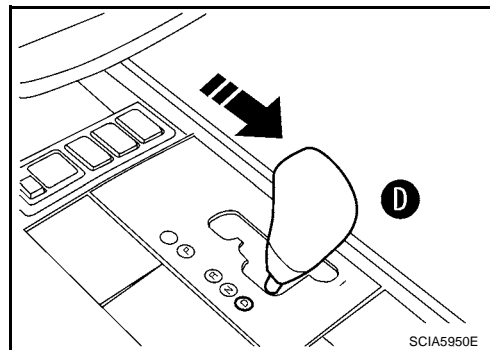


6. Accelerate vehicle to 2/8-way throttle depressing accelerator pedal constantly.

 **Read vehicle speed and engine speed. Refer to [CVT-43](#), "[Vehicle Speed at Which Gear Shifting Occurs](#)".**

OK or NG


OK >> GO TO 2.

NG >> Mark the box of [CVT-131](#), "[CVT Does Not Shift](#)" on the [CVT-27](#), "[DIAGNOSTIC WORKSHEET](#)". Continue "Road Test".

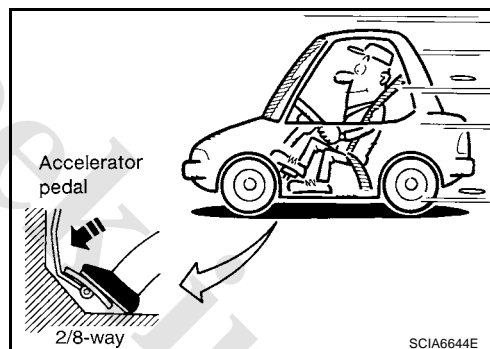

2. CHECK VEHICLE SPEED WHEN SHIFTING GEARS — PART 2

1. Park vehicle on flat surface.
2. Move selector lever to "D" position.

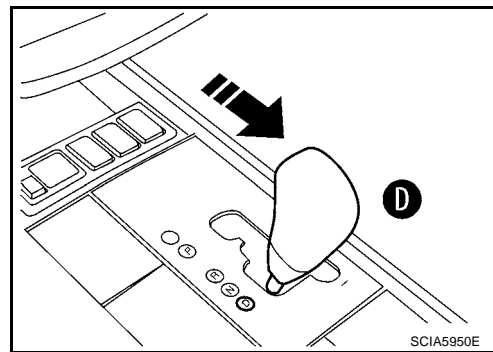


3. Accelerate vehicle to full depression depressing accelerator pedal constantly.
 - ⓑ Read vehicle speed and engine speed. Refer to [CVT-43, "Vehicle Speed at Which Gear Shifting Occurs"](#).

OK or NG

OK >> GO TO 3.

NG >> Mark the box of [CVT-131, "CVT Does Not Shift"](#) on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

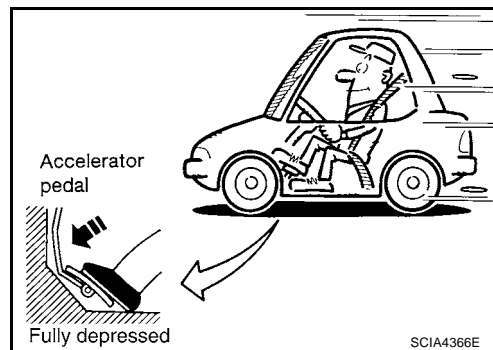


3. CHECK MANUAL MODE FUNCTION

Move to manual mode from "D" position.

Does it switch to manual mode?

YES >> GO TO 4.

NO >> Mark the box of [CVT-132, "Cannot Be Changed to Manual Mode"](#) on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

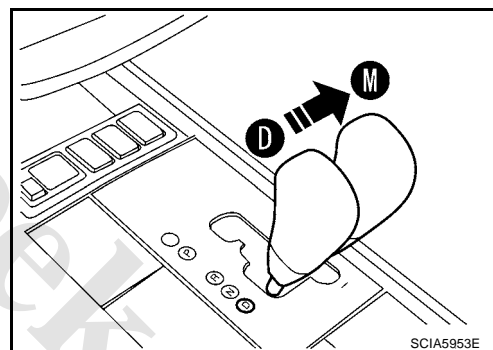

4. CHECK SHIFT-UP FUNCTION


During manual mode driving, is upshift from M1 → M2 → M3 → M4 → M5 → M6 performed?

ⓑ Read the gear position. Refer to [CVT-55, "DATA MONITOR MODE"](#).

Is upshifting correctly performed?

YES >> GO TO 5.

NO >> Mark the box of [CVT-132, "CVT Does Not Shift in Manual Mode"](#) on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

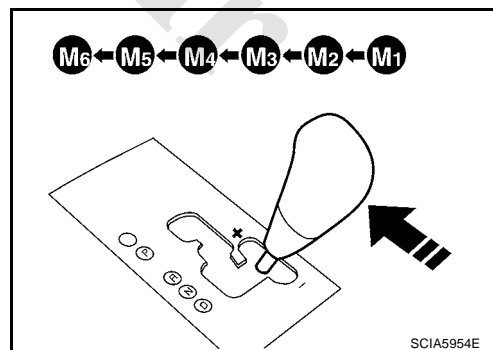

5. CHECK SHIFT-DOWN FUNCTION


During manual mode driving, is downshift from M6 → M5 → M4 → M3 → M2 → M1 performed?

④ Read the gear position. Refer to [CVT-55, "DATA MONITOR MODE"](#).

Is downshifting correctly performed?

YES >> GO TO 6.

NO >> Mark the box of [CVT-132, "CVT Does Not Shift in Manual Mode"](#) on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). Continue "Road Test".

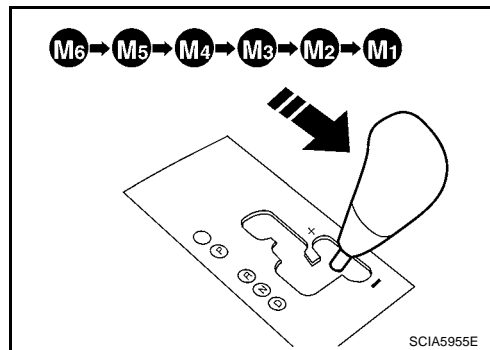

6. CHECK ENGINE BRAKE FUNCTION


Check engine brake.

Does engine braking effectively reduce speed in M1 position?

YES >> 1. Stop the vehicle.

2. Perform self-diagnosis. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#).

NO >> Mark the box of [CVT-134, "Vehicle Does Not Decelerate by Engine Brake"](#) on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#). then continue trouble diagnosis.

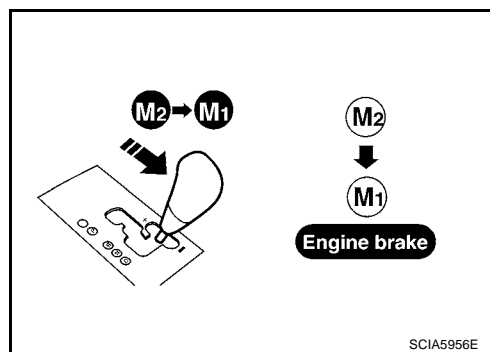

Vehicle Speed at Which Gear Shifting Occurs

Numerical value data are reference values.

Engine type	Throttle position	Shift pattern	Engine speed (rpm)	
			At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
VQ35DE	8/8	"D" position	2,800 - 4,300	3,900 - 5,300
	2/8	"D" position	1,200 - 2,000	1,300 - 2,100

CAUTION:

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).











TCM Input/Output Signal Reference Values

TCM TERMINAL CONNECTOR LAYOUT















1	2	3	4	5	6	7	8	9	25	26	27	28	29	30	31	32	33
10	11	12	13	14	15	16	17	18	34	35	36	37	38	39	40	41	42
19	20	21				22	23	24	43	44	45				46	47	48

TCM INSPECTION TABLE

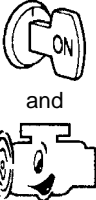Data are reference values and are measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Data (Approx.)
1	R/Y	Pressure control solenoid valve A (Line pressure solenoid valve)		Release your foot from the accelerator pedal.	5.0 - 7.0 V
				Press the accelerator pedal all the way down.	1.0 - 3.0 V
2	W/B	Pressure control solenoid valve B (Secondary pressure solenoid valve)		Release your foot from the accelerator pedal.	5.0 - 7.0 V
				Press the accelerator pedal all the way down.	3.0 - 4.0 V
3	L/W*1	Torque converter clutch solenoid valve		When CVT performs lock-up.	6.0 V
	G*2			When CVT does not perform lock-up.	1.0 V
4	L/Y*1	Lock-up select solenoid valve		Selector lever in "P", "N" positions.	Battery voltage
	L*2			Wait at least for 5 seconds with the selector lever in "R", "D" positions.	0 V
5	L	CAN-H	—		—
6	P	CAN-L	—		—
8	SB	Back-up lamp relay		Selector lever in "R" position.	0 V
				Selector lever in other positions.	Battery voltage
10	Y	Power supply		—	Battery voltage
					—
11	G/R	Step motor A	Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1		30.0 msec
12	O/B	Step motor B	<p>CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector.</p> <p>*1: A circuit tester cannot be used to test this item.</p>		10.0 msec
13	G/W	ROM assembly	—		—
14	L/R	ROM assembly	—		—
15	BR/R	ROM assembly	—		—
19	Y	Power supply		—	Battery voltage
					—
20	R	Step motor C	Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1		30.0 msec
21	R/G	Step motor D	<p>CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector.</p> <p>*1: A circuit tester cannot be used to test this item.</p>		10.0 msec
24	G/O	Starter relay		Selector lever in "N", "P" positions.	Battery voltage
				Selector lever in other positions.	0 V

www.CarGeek.ir
TROUBLE DIAGNOSIS

Terminal	Wire color	Item	Condition		Data (Approx.)
25	B	Ground	Always		0 V
27	BR/W	PNP switch 1		Selector lever in "R", "N" and "D" positions.	0 V
				Selector lever in "P" position.	Battery voltage
28	Y/R	Power supply (memory back-up)	Always		Battery voltage
29	G*1	Output speed sensor (Secondary speed sensor)		When driving ["D" position, 20 km/h (12 MPH)].	300 Hz
	LG/R*2				
32	GR	PNP switch 3 (monitor)		Selector lever in "D" position.	0 V
				Selector lever in "P", "R" and "N" positions.	8.0 V - Battery voltage
34	P/B	PNP switch 2		Selector lever in "N", "D" positions.	0 V
				Selector lever in "P", "R" positions.	10.0 V - Battery voltage
35	P/L	PNP switch 3		Selector lever in "D" position.	0 V
				Selector lever in "P", "R" and "N" positions.	8.0 V - Battery voltage
36	G*1	PNP switch 4		Selector lever in "R", "D" positions.	0 V
	G/O*2			Selector lever in "P", "N" positions.	10.0 V - Battery voltage
37	V/W	Transmission fluid pressure sensor A (Secondary pressure sensor)	 and 	"N" position idle	0.8 V
38	LG	Input speed sensor (Primary speed sensor)		When driving ["D" position, 20 km/h (12 MPH)].	600 Hz
41	V/O	Transmission fluid pressure sensor B (Primary pressure sensor)	 and 	"N" position idle	0.7 - 3.5 V
42	W/R	Sensor ground	Always		0 V
46	L/O	Sensor power		—	4.5 - 5.5 V
				—	0 V
47	V	CVT fluid temperature sensor		When CVT fluid temperature is 20°C (68°F)	2.0 V
				When CVT fluid temperature is 80°C (176°F)	1.0 V
48	B	Ground	Always		0 V

*1: LHD models

*2: RHD models

CONSULT-II Function (TRANSMISSION)

ACS00AE2

CONSULT-II can display each diagnostic item using the diagnostic test modes shown below.

FUNCTION

Diagnostic test mode	Function	Reference page
Work support	This mode enables a technician to adjust some devices faster and more accurately by following the indications on CONSULT-II.	CVT-48
Self-diagnostic results	Self-diagnostic results can be read and erased quickly.	CVT-50
Data monitor	Input/Output data in the TCM can be read.	CVT-55
CAN diagnostic support monitor	The results of transmit/receive diagnosis of CAN communication can be read.	CVT-57
CALIB data	Characteristic information for TCM and CVT assembly can be read. Do not use, but displayed.	—
Function test	Performed by CONSULT-II instead of a technician to determine whether each system is "OK" or "NG".	—
ECU part number	TCM part number can be read.	—

CONSULT-II REFERENCE VALUE

Item name	Condition	Display value (Approx.)
VSP SENSOR	During driving	Approximately matches the speedometer reading.
ESTM VSP SIG		
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
SEC HYDR SEN	"N" position idle	0.8 - 1.0 V
PRI HYDR SEN	"N" position idle	0.7 - 3.5 V
ATF TEMP SEN	When CVT fluid temperature is 20°C (68°F)	1.8 - 2.0 V
	When CVT fluid temperature is 80°C (176°F)	0.6 - 1.0 V
VIGN SEN	Ignition switch: ON	Battery voltage
VEHICLE SPEED	During driving	Approximately matches the speedometer reading.
PRI SPEED	During driving (lock-up ON)	Approximately matches the engine speed.
SEC SPEED	During driving	45 X Approximately matches the speedometer reading.
ENG SPEED	Engine running	Closely matches the tachometer reading.
GEAR RATIO	During driving	2.37 - 0.43
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8
SEC PRESS	"N" position idle	0.5 - 0.9 MPa
PRI PRESS	"N" position idle	0.3 - 0.9 MPa
STM STEP	During driving	-20 step – 190 step
ISOLT1	Lock-up OFF	0.0 A
	Lock-up ON	0.7 A
ISOLT2	Release your foot from the accelerator pedal.	0.8 A
	Press the accelerator pedal all the way down.	0.0 A
ISOLT3	Secondary pressure low - Secondary pressure high	0.8 - 0.0 A

www.CarGeek.ir
TROUBLE DIAGNOSIS

Item name	Condition	Display value (Approx.)
SOLMON1	Lock-up OFF	0.0 A
	Lock-up ON	0.6 - 0.7 A
SOLMON2	"N" position idle	0.8 A
	When stalled	0.3 - 0.6 A
SOLMON3	"N" position idle	0.6 - 0.7 A
	When stalled	0.4 - 0.6 A
INH SW3M	Selector lever in "D" position	ON
	Selector lever in "P", "R" and "N" positions	OFF
INH SW4	Selector lever in "R", "D" positions	ON
	Selector lever in "P", "N" positions	OFF
INH SW3	Selector lever in "D" position	ON
	Selector lever in "P", "R" and "N" positions	OFF
INH SW2	Selector lever in "N", "D" positions	ON
	Selector lever in "P", "R" positions	OFF
INH SW1	Selector lever in "R", "N" and "D" positions	ON
	Selector lever in "P" position	OFF
BRAKE SW	Depressed brake pedal	ON
	Released brake pedal	OFF
FULL SW	Fully depressed accelerator pedal	ON
	Released accelerator pedal	OFF
IDLE SW	Released accelerator pedal	ON
	Fully depressed accelerator pedal	OFF
DOWNLVR	Select lever: - side	ON
	Other than the above	OFF
UPLVR	Select lever: + side	ON
	Other than the above	OFF
NON MMODE	Manual shift gate position (neutral, +side, -side)	OFF
	Other than the above	ON
MMODE	Manual shift gate position (neutral)	ON
	Other than the above	OFF
SMCOIL D	During driving	Changes ON ⇔ OFF.
SMCOIL C		
SMCOIL B		
SMCOIL A		
LUSEL SOL OUT	Selector lever in "P", "N" positions	ON
	Wait at least for 5 seconds with the selector lever in "R" or "D" position	OFF
STRTR RLY OUT	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
STRTR RLY MON	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
VDC ON	VDC operate	ON
	Other conditions	OFF
TCS ON	TCS operate	ON
	Other conditions	OFF

A
B
CVT
D
E
F
G
H
I
J
K
L
M

Item name	Condition	Display value (Approx.)
ABS ON	ABS operate	ON
	Other conditions	OFF
RANGE	Selector lever in "N" or "P" position	N·P
	Selector lever in "R" position	R
	Selector lever in "D" position	D
M GEAR POS	During driving	1, 2, 3, 4, 5, 6

CONSULT-II SETTING PROCEDURE

Refer to [GI-33, "CONSULT-II Start Procedure"](#).


WORK SUPPORT MODE

Display Item List


Item name	Description
ENGINE BRAKE ADJ.	The engine brake level setting can be canceled.
CONFORM CVTF DETERIORTN	The CVT fluid deterioration level can be checked.

Engine Brake Adjustment


1. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.

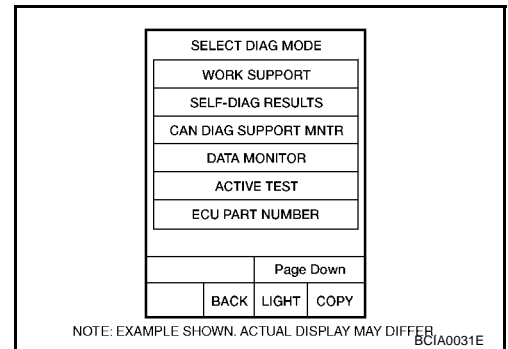

2. Touch "ENGINE BRAKE ADJ".

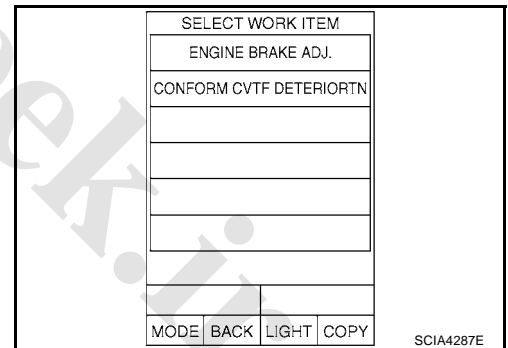

3. Touch "START".

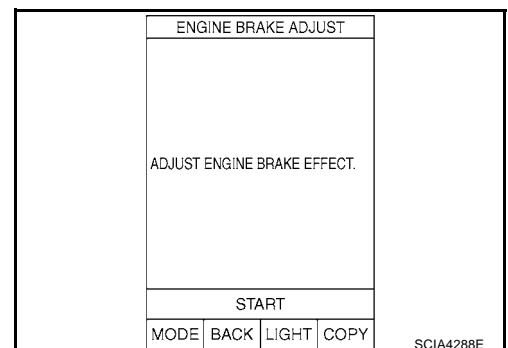

4. Set "ENGINE BRAKE LEVEL" by touching "UP" or "DOWN".

"ENGINE BRAKE LEVEL"


0: Initial set value (Engine brake level control is activated)

OFF: Engine brake level control is deactivated.

- Turn ignition switch OFF, wait at least 5 seconds and then turn ignition switch ON.
- Engine brake level set is completed.


CAUTION:

Mode of "+1" "0" "-1" "-2" "OFF" can be selected by pressing the "UP" "DOWN" on CONSULT-II screen. However, do not select mode other than "0" and "OFF". If the "+1" or "-1" or "-2" is selected, that might cause the irregular driveability.

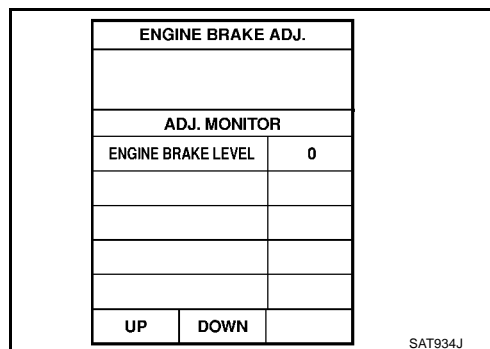


Check CVT Fluid Deterioration Date

1. Touch "WORK SUPPORT" on "SELECT DIAG MODE" screen.

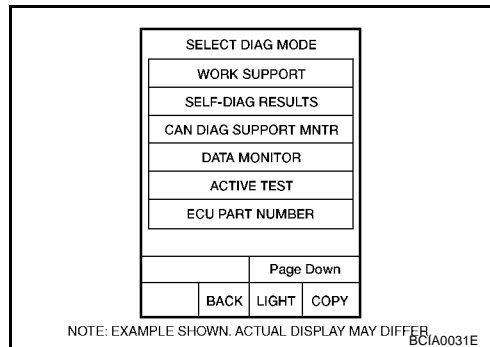

2. Touch "CONFORM CVTF DETERIORTN".

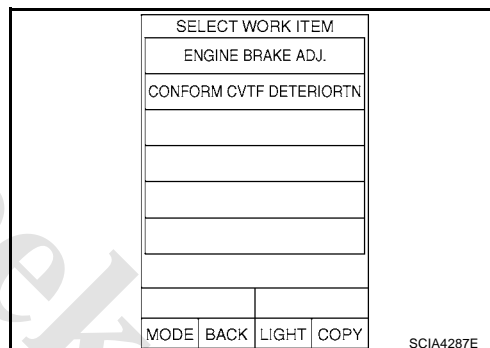

3. Check "CVTF DETERIORATION DATE".


"CVTF DETERIORATION DATE"

More than 210000:

It is necessary to change CVT fluid.

Less than 210000:


It is not necessary to change CVT fluid.

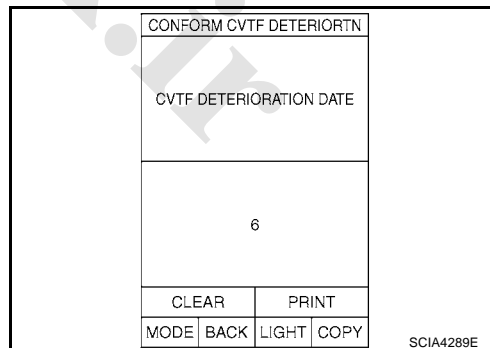

A
B
CVT
D
E
F
G
H
I
J
K
L
M

CAUTION:

Touch “CLEAR” after changing CVT fluid, and then erase “CVTF DETERIORATION DATE”.

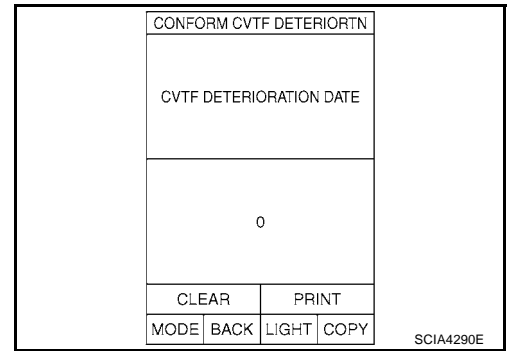


SELF-DIAGNOSTIC RESULT MODE

After performing self-diagnosis, place check marks for results on the [CVT-27, "DIAGNOSTIC WORKSHEET"](#) . Reference pages are provided following the items.

Operation Procedure

1. Touch “SELF-DIAG RESULTS” on “SELECT DIAG MODE” screen.
Display shows malfunction experienced since the last erasing operation.

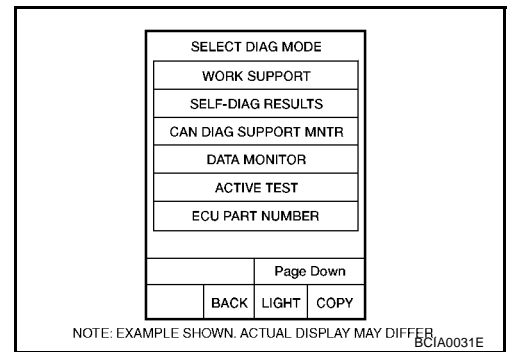

**Display Items List
For Australia**

X: Applicable —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD (DTC)	Reference page
		“TRANSMISSION” with CONSULT-II	MI*1, “ENGINE” with CONSULT-II or GST	
CAN COMM CIRCUIT	<ul style="list-style-type: none"> ● When a malfunction is detected in CAN communications 	U1000	U1000	CVT-59
STARTER RELAY/CIRC	<ul style="list-style-type: none"> ● If this signal is ON other than in “P” or “N” position, this is judged to be a malfunction (And if it is OFF in “P” or “N” position, this is judged to be a malfunction too.) 	P0615	—	CVT-61
BRAKE SW/CIRC	<ul style="list-style-type: none"> ● When the brake switch does not switch to ON or OFF 	P0703	—	CVT-63
PNP SW/CIRC	<ul style="list-style-type: none"> ● PNP switch 1-4 signals input with impossible pattern ● PNP switch 3 monitor terminal open or short circuit 	P0705	P0705	CVT-64
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> ● During running, the CVT fluid temperature sensor signal voltage is excessively high or low 	P0710	P0710	CVT-68
INPUT SPD SEN/CIRC	<ul style="list-style-type: none"> ● Input speed sensor (primary speed sensor) signal is not input due to an open circuit ● An unexpected signal is input when vehicle is being driven 	P0715	P0715	CVT-71
VEH SPD SEN/CIR AT	<ul style="list-style-type: none"> ● Signal from vehicle speed sensor CVT [Output speed sensor (Secondary speed sensor)] not input due to open or short circuit ● Unexpected signal input during running 	P0720	P0720	CVT-74

www.CarGeek.ir
TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD (DTC)	Reference page
		"TRANSMISSION" with CONSULT-II	MI*1, "ENGINE" with CONSULT-II or GST	
ENGINE SPEED SIG	<ul style="list-style-type: none"> TCM does not receive the CAN communication signal from the ECM 	P0725	—	CVT-76
BELT DAMG	<ul style="list-style-type: none"> Unexpected gear ratio detected 	P0730	—	CVT-77
TCC SOLENOID/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to open or short circuit 	P0740	P0740	CVT-78
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> CVT cannot perform lock-up even if electrical circuit is good TCM detects as irregular by comparing difference value with slip rotation 	P0744	P0744	CVT-81
L/PRESS SOL/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to open or short circuit TCM detects as irregular by comparing target value with monitor value 	P0745	P0745	CVT-82
PRS CNT SOL/A FCTN	<ul style="list-style-type: none"> Unexpected gear ratio was detected in the LOW side due to excessively low line pressure 	P0746	P0746	CVT-85
PRS CNT SOL/B FCTN	<ul style="list-style-type: none"> Secondary pressure is too high or too low compared with the commanded value while driving 	P0776	P0776	CVT-86
PRS CNT SOL/B CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value 	P0778	P0778	CVT-87
MANUAL MODE SWITCH	<ul style="list-style-type: none"> When an impossible pattern of switch signals is detected, a malfunction is detected 	P0826	—	CVT-90
TR PRS SENS/A CIRC	<ul style="list-style-type: none"> Signal voltage of the transmission fluid pressure sensor A (secondary pressure sensor) is too high or too low while driving 	P0840	P0840	CVT-94
PRESS SEN/FNCTN	<ul style="list-style-type: none"> Correlation between the values of the transmission fluid pressure sensor A (secondary pressure sensor) and the transmission fluid pressure sensor B (primary pressure sensor) is out of specification 	P0841	—	CVT-97
TR PRS SENS/B CIRC	<ul style="list-style-type: none"> Signal voltage of the transmission fluid pressure sensor B (primary pressure sensor) is too high or too low while driving 	P0845	P0845	CVT-98
SEC/PRESS DOWN	<ul style="list-style-type: none"> Secondary fluid pressure is too low compared with the commanded value while driving 	P0868	—	CVT-101
TCM-POWER SUPPLY	<ul style="list-style-type: none"> When the power supply to the TCM is cut OFF, for example because the battery is removed, and the self-diagnosis memory function stops This is not a malfunction message (Whenever shutting OFF a power supply to the TCM, this message appears on the screen) 	P1701	—	CVT-102
TP SEN/CIRC A/T	<ul style="list-style-type: none"> TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM 	P1705	—	CVT-105
ESTM VEH SPD SIG	<ul style="list-style-type: none"> CAN communication with the ABS actuator and the electric unit (control unit) is malfunctioning There is a great difference between the vehicle speed signal from the ABS actuator and the electric unit (control unit), and the vehicle speed sensor signal 	P1722	—	CVT-106

www.CarGeek.ir
TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	OBD (DTC)	Reference page
		"TRANSMISSION" with CONSULT-II	MI*1, "ENGINE" with CONSULT-II or GST	
CVT SPD SEN/FNCTN	<ul style="list-style-type: none"> A rotation sensor error is detected because the gear does not change in accordance with the position of the stepping motor <p>CAUTION: One of the "P0720 VEH SPD SEN/CIR AT", the "P0715 INPUT SPD SEN/CIRC" or the "P0725 ENGINE SPEED SIG" is displayed with the DTC at the same time</p>	P1723	—	CVT-107
ELECTH CONTROL	<ul style="list-style-type: none"> The electronically controlled throttle for ECM is malfunctioning 	P1726	—	CVT-108
LU-SLCT SOL/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value 	P1740	P1740	CVT-109
L/PRESS CONTROL	<ul style="list-style-type: none"> TCM detects the unexpected line pressure 	P1745	—	CVT-112
STEP MOTR CIRC	<ul style="list-style-type: none"> Each coil of the step motor is not energized properly due to an open or a short 	P1777	P1777	CVT-113
STEP MOTR/FNC	<ul style="list-style-type: none"> There is a great difference between the number of steps for the stepping motor and for the actual gear ratio 	P1778	P1778	CVT-116
NO DTC IS DETECTED: FURTHER TESTING MAY BE REQUIRED	<ul style="list-style-type: none"> No NG item has been detected 	X	X	—

*1: Refer to [CVT-22, "Malfunction Indicator \(MI\)"](#) .

Except For Australia

X: Applicable —: Not applicable

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	Reference page
		DTC	
CAN COMM CIRCUIT	<ul style="list-style-type: none"> When a malfunction is detected in CAN communications 	U1000	CVT-59
STARTER RELAY/CIRC	<ul style="list-style-type: none"> If this signal is ON other than in P or N position, this is judged to be a malfunction (And if it is OFF in P or N position, this is judged to be a malfunction too) 	P0615	CVT-61
BRAKE SW/CIRC	<ul style="list-style-type: none"> When the brake switch does not switch to ON or OFF 	P0703	CVT-63
PNP SW/CIRC	<ul style="list-style-type: none"> PNP switch 1-4 signals input with impossible pattern PNP switch 3 monitor terminal open or short circuit 	P0705	CVT-64
ATF TEMP SEN/CIRC	<ul style="list-style-type: none"> During running, the CVT fluid temperature sensor signal voltage is excessively high or low 	P0710	CVT-68
INPUT SPD SEN/CIRC	<ul style="list-style-type: none"> Input speed sensor (primary speed sensor) signal is not input due to an open circuit An unexpected signal is input when vehicle is being driven 	P0715	CVT-71
VEH SPD SEN/CIR AT	<ul style="list-style-type: none"> Signal from vehicle speed sensor CVT [Output speed sensor (Secondary speed sensor)] not input due to open or short circuit Unexpected signal input during running 	P0720	CVT-74
ENGINE SPEED SIG	<ul style="list-style-type: none"> TCM does not receive the CAN communication signal from the ECM 	P0725	CVT-76


TROUBLE DIAGNOSIS

Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	Reference page
		DTC	
BELT DAMG	<ul style="list-style-type: none"> ● Unexpected gear ratio detected 	P0730	CVT-77
TCC SOLENOID/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to open or short circuit 	P0740	CVT-78
A/T TCC S/V FNCTN	<ul style="list-style-type: none"> ● CVT cannot perform lock-up even if electrical circuit is good ● TCM detects as irregular by comparing difference value with slip rotation 	P0744	CVT-81
L/PRESS SOL/CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to open or short circuit ● TCM detects as irregular by comparing target value with monitor value 	P0745	CVT-82
PRS CNT SOL/A FCTN	<ul style="list-style-type: none"> ● Unexpected gear ratio was detected in the LOW side due to excessively low line pressure 	P0746	CVT-85
PRS CNT SOL/B FCTN	<ul style="list-style-type: none"> ● Secondary pressure is too high or too low compared with the commanded value while driving 	P0776	CVT-86
PRS CNT SOL/B CIRC	<ul style="list-style-type: none"> ● Normal voltage not applied to solenoid due to cut line, short, or the like ● TCM detects as irregular by comparing target value with monitor value 	P0778	CVT-87
MANUAL MODE SWITCH	<ul style="list-style-type: none"> ● When an impossible pattern of switch signals is detected, a malfunction is detected 	P0826	CVT-90
TR PRS SENS/A CIRC	<ul style="list-style-type: none"> ● Signal voltage of the transmission fluid pressure sensor A (secondary pressure sensor) is too high or too low while driving 	P0840	CVT-94
PRESS SEN/FNCTN	<ul style="list-style-type: none"> ● Correlation between the values of the transmission fluid pressure sensor A (secondary pressure sensor) and the transmission fluid pressure sensor B (primary pressure sensor) is out of specification 	P0841	CVT-97
TR PRS SENS/B CIRC	<ul style="list-style-type: none"> ● Signal voltage of the transmission fluid pressure sensor B (primary pressure sensor) is too high or too low while driving 	P0845	CVT-98
SEC/PRESS DOWN	<ul style="list-style-type: none"> ● Secondary fluid pressure is too low compared with the commanded value while driving 	P0868	CVT-101
TCM-POWER SUPPLY	<ul style="list-style-type: none"> ● When the power supply to the TCM is cut OFF, for example because the battery is removed, and the self-diagnosis memory function stops ● This is not a malfunction message (Whenever shutting OFF a power supply to the TCM, this message appears on the screen) 	P1701	CVT-102
TP SEN/CIRC A/T	<ul style="list-style-type: none"> ● TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM 	P1705	CVT-105
ESTM VEH SPD SIG	<ul style="list-style-type: none"> ● CAN communication with the ABS actuator and the electric unit (control unit) is malfunctioning ● There is a great difference between the vehicle speed signal from the ABS actuator and the electric unit (control unit), and the vehicle speed sensor signal 	P1722	CVT-106
CVT SPD SEN/FNCTN	<ul style="list-style-type: none"> ● A rotation sensor error is detected because the gear does not change in accordance with the position of the stepping motor <p>CAUTION: One of the "P0720 VEH SPD SEN/CIR AT", the "P0715 INPUT SPD SEN/CIRC" or the "P0725 ENGINE SPEED SIG" is displayed with the DTC at the same time</p>	P1723	CVT-107
ELEC TH CONTROL	<ul style="list-style-type: none"> ● The electronically controlled throttle for ECM is malfunctioning 	P1726	CVT-108


Items (CONSULT-II screen terms)	Malfunction is detected when...	TCM self-diagnosis	Reference page
		DTC	
LU-SLCT SOL/CIRC	<ul style="list-style-type: none"> Normal voltage not applied to solenoid due to cut line, short, or the like TCM detects as irregular by comparing target value with monitor value 	P1740	CVT-109
L/PRESS CONTROL	<ul style="list-style-type: none"> TCM detects the unexpected line pressure 	P1745	CVT-112
STEP MOTR CIRC	<ul style="list-style-type: none"> Each coil of the step motor is not energized properly due to an open or a short 	P1777	CVT-113
STEP MOTR/FNC	<ul style="list-style-type: none"> There is a great difference between the number of steps for the stepping motor and for the actual gear ratio 	P1778	CVT-116
NO DTC IS DETECTED: FURTHER TESTING MAY BE REQUIRED	<ul style="list-style-type: none"> No NG item has been detected 	X	—

How to Erase Self-diagnostic Results

1. Touch "SELF-DIAG RESULTS" on "SELECT DIAG MODE" screen.

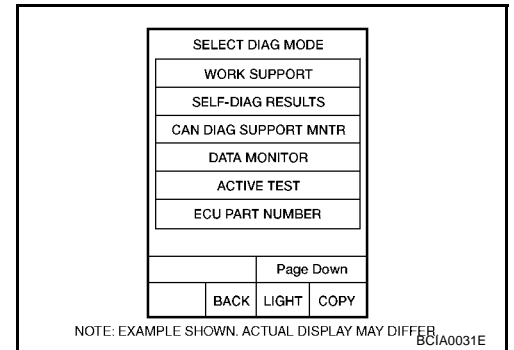

2. Touch "ERASE". (The self-diagnostic results will be erased.)

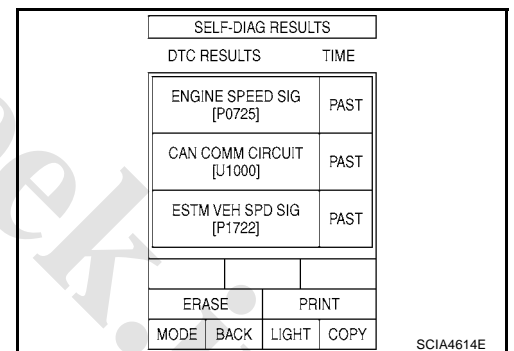


DATA MONITOR MODE

Operation Procedure

1. Touch "DATA MONITOR" on "SELECT DIAG MODE" screen.

NOTE:

When malfunction is detected, CONSULT-II performs "REAL-TIME DIAGNOSIS". Also, any malfunction detected while in this mode will be displayed at real time.

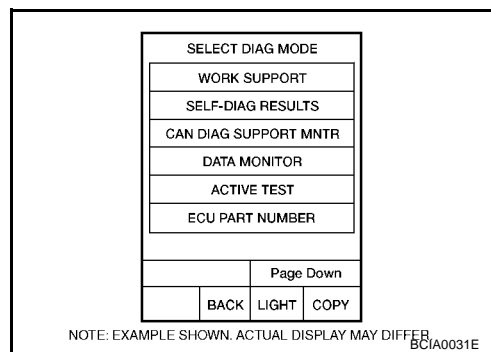

Display Items List

X: Standard, —: Not applicable, ▼: Option

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
VSP SENSOR (km/h)	X	—	▼	Output speed sensor (secondary speed sensor)
ESTM VSP SIG (km/h)	X	—	▼	
PRI SPEED SEN (rpm)	X	—	▼	
ENG SPEED SIG (rpm)	X	—	▼	
SEC HYDR SEN (V)	X	—	▼	
PRI HYDR SEN (V)	X	—	▼	
ATF TEMP SEN (V)	X	—	▼	CVT fluid temperature sensor
VIGN SEN (V)	X	—	▼	
VEHICLE SPEED (km/h)	—	X	▼	Vehicle speed recognized by the TCM
PRI SPEED (rpm)	—	X	▼	Primary pulley speed
SEC SPEED (rpm)	—	—	▼	Secondary pulley speed
ENG SPEED (rpm)	—	X	▼	
SLIP REV (rpm)	—	X	▼	Difference between engine speed and primary pulley speed
GEAR RATIO	—	X	▼	
G SPEED (G)	—	—	▼	
ACC PEDAL OPEN (0.0/8)	X	X	▼	Degree of opening for accelerator recognized by the TCM (Signal input with CAN communications) For fail-safe operation, the specific value used for control is displayed
TRQ RTO	—	—	▼	
SEC PRESS (MPa)	—	X	▼	
PRI PRESS (MPa)	—	X	▼	
ATF TEMP	—	X	▼	
DSR REV (rpm)	—	—	▼	
DGEAR RATIO	—	—	▼	

www.CarGeek.ir
TROUBLE DIAGNOSIS


Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
DSTM STEP (step)	—	—	▼	
STM STEP (step)	—	X	▼	
LU PRS (MPa)	—	—	▼	
LINE PRS (MPa)	—	—	▼	
TGT SEC PRESS (MPa)	—	—	▼	
ISOLT1 (A)	—	X	▼	Torque converter clutch solenoid valve output current
ISOLT2 (A)	—	X	▼	Pressure control solenoid valve A (line pressure solenoid valve) output current
ISOLT3 (A)	—	X	▼	Pressure control solenoid valve B (secondary pressure solenoid valve) output current
SOLMON1 (A)	X	X	▼	Torque converter clutch solenoid valve monitor current
SOLMON2 (A)	X	X	▼	Pressure control solenoid valve A (line pressure solenoid valve) monitor current
SOLMON3 (A)	X	X	▼	Pressure control solenoid valve B (secondary pressure solenoid valve) monitor current
INH SW3M (ON/OFF)	X	—	▼	PNP switch 3 ON-OFF status monitor
INH SW4 (ON/OFF)	X	—	▼	PNP switch 4 ON-OFF status
INH SW3 (ON/OFF)	X	—	▼	PNP switch 3 ON-OFF status
INH SW2 (ON/OFF)	X	—	▼	PNP switch 2 ON-OFF status
INH SW1 (ON/OFF)	X	—	▼	PNP switch 1 ON-OFF status
BRAKE SW (ON/OFF)	X	X	▼	Stop lamp switch (Signal input with CAN communications)
FULL SW (ON/OFF)	X	X	▼	Signal input with CAN communications
IDLE SW (ON/OFF)	X	X	▼	
SPORT MODE SW (ON/OFF)	X	X	▼	Not mounted but displayed
STRDWSW (ON/OFF)	X	—	▼	
STRUPSW (ON/OFF)	X	—	▼	
DOWNLVR (ON/OFF)	X	—	▼	
UPLVR (ON/OFF)	X	—	▼	
NON MMODE (ON/OFF)	X	—	▼	
MMODE (ON/OFF)	X	—	▼	
INDLRNG (ON/OFF)	—	—	▼	
INDDRNG (ON/OFF)	—	—	▼	"D" position indicator output
INDNRNG (ON/OFF)	—	—	▼	"N" position indicator output
INDRRNG (ON/OFF)	—	—	▼	"R" position indicator output
INDPRNG (ON/OFF)	—	—	▼	"P" position indicator output
CVTLAMP (ON/OFF)	—	—	▼	

Monitored item (Unit)	Monitor item selection			Remarks
	ECU INPUT SIGNALS	MAIN SIGNALS	SELECTION FROM MENU	
SPORT MODE IND (ON/OFF)	—	—	▼	Not mounted but displayed
MMODE IND (ON/OFF)	—	—	▼	
SMCOIL D (ON/OFF)	—	—	▼	Step motor coil "D" energizing status
SMCOIL C (ON/OFF)	—	—	▼	Step motor coil "C" energizing status
SMCOIL B (ON/OFF)	—	—	▼	Step motor coil "B" energizing status
SMCOIL A (ON/OFF)	—	—	▼	Step motor coil "A" energizing status
LUSEL SOL OUT (ON/OFF)	—	—	▼	
REV LAMP (ON/OFF)	—	X	▼	
STRTR RLY OUT (ON/OFF)	—	—	▼	Starter relay
LU SEL SOL MON (ON/OFF)	—	—	▼	
STRTR RLY MON (ON/OFF)	—	—	▼	Starter relay
VDC ON (ON/OFF)	X	—	▼	
TCS ON (ON/OFF)	X	—	▼	
ABS ON (ON/OFF)	X	—	▼	
ACC ON (ON/OFF)	X	—	▼	Not mounted but displayed
RANGE	—	X	▼	Indicates position is recognized by TCM Indicates a specific value required for control when fail-safe function is activated
M GEAR POS	—	X	▼	
Voltage (V)	—	—	▼	Displays the value measured by the voltage probe
Frequency (Hz)	—	—	▼	
DUTY-HI (high) (%)	—	—	▼	
DUTY-LOW (low) (%)	—	—	▼	The value measured by the pulse probe is displayed
PLS WIDTH-HI (ms)	—	—	▼	
PLS WIDTH-LOW (ms)	—	—	▼	

CAN DIAGNOSTIC SUPPORT MONITOR MODE

Operation Procedure

1. Touch "CAN DAIG SUPPORT MNTR" on "SELECT DIAG MODE" screen.

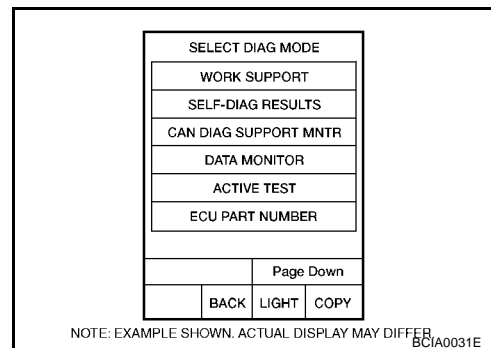

Diagnostic Procedure Without CONSULT-II
OB D SELF-DIAGNOSTIC PROCEDURE (WITH GST)



Refer to [EC-70, "Generic Scan Tool \(GST\) Function"](#) .

www.carseek.ir

DTC U1000 CAN COMMUNICATION LINE

PFP:23710

Description

ACS00AE3

CAN (Controller Area Network) is a serial communication line for real time application. It is an on-vehicle multiplex communication line with high data communication speed and excellent malfunction detection ability. Many electronic control units are equipped onto a vehicle, and each control unit shares information and links with other control units during operation (not independent). In CAN communication, control units are connected with 2 communication lines (CAN-H line, CAN-L line) allowing a high rate of information transmission with less wiring. Each control unit transmits/receives data but selectively reads required data only.

On Board Diagnosis Logic

ACS00AE4

Diagnostic trouble code "U1000 CAN COMM CIRCUIT" with CONSULT-II is detected when TCM cannot communicate to other control units.

Possible Cause

ACS00AE5

Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

ACS00AE6


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait for at least 6 seconds.
4. If DTC is detected, check possible cause items.

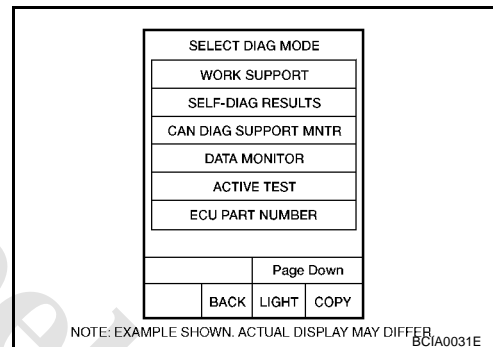

WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKR




TCM terminal data are reference values, measured between each terminal and ground.



Terminal	Wire color	Item	Condition	Data (Approx.)
5	L	CAN-H	—	—
6	P	CAN-L	—	—

Wiring Diagram — CVT — CAN

ACS00AE7

CVT-CAN-01

-  : DETECTABLE LINE FOR DTC
-  : NON-DETECTABLE LINE FOR DTC
-  : DATA LINE

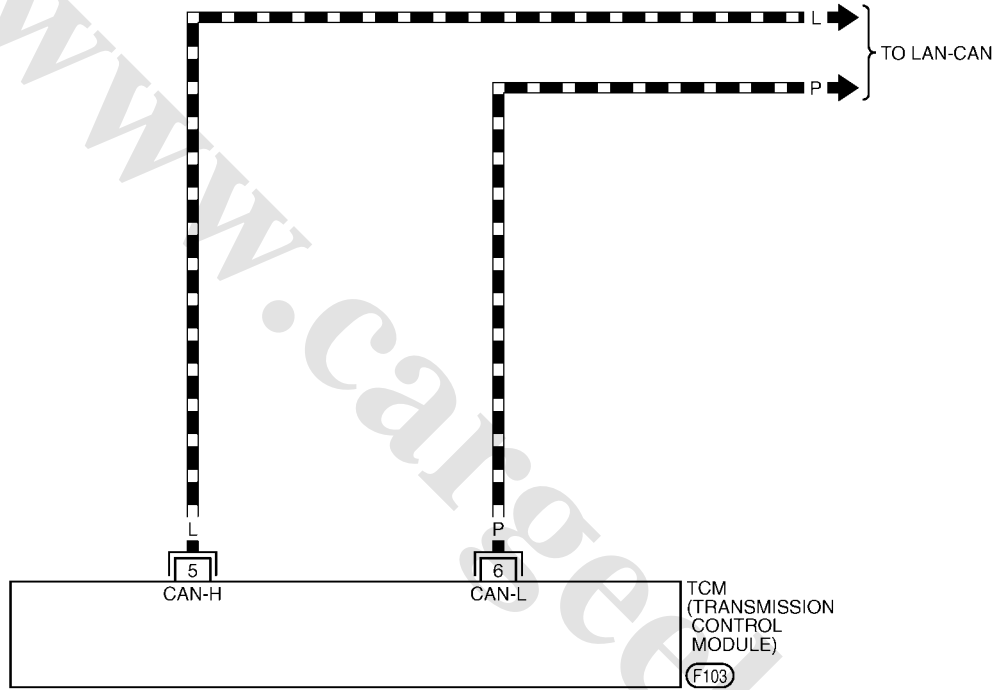

TCWB0136E

DTC P0615 START SIGNAL CIRCUIT

PFP:25230

Description

ACS00AE9

- TCM controls starter relay in IPDM E/R.
- TCM switches starter relay ON at "P" or "N" position and allows to crank engine.
- Then it prohibits cranking other than at "P" or "N" position.

CONSULT-II Reference Value

ACS00AEA

Remarks: Specification data are reference values.

Item name	Condition	Display value
STRTR RLY OUT	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF
STRTR RLY MON	Selector lever in "P", "N" positions	ON
	Selector lever in other positions	OFF

On Board Diagnosis Logic

ACS00AEB

Diagnostic trouble code "P0615 STARTER RELAY/CIRC" with CONSULT-II is detected when starter relay switched ON other than at "P" or "N" position. (Or when switched OFF at "P" or "N" position).

Possible Cause

ACS00AEC

- Harness or connectors
(Starter relay and TCM circuit is open or shorted.)
- Starter relay

DTC Confirmation Procedure

ACS00AED

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II


1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle for at least 2 consecutive seconds.
5. If DTC is detected, check possible cause items.

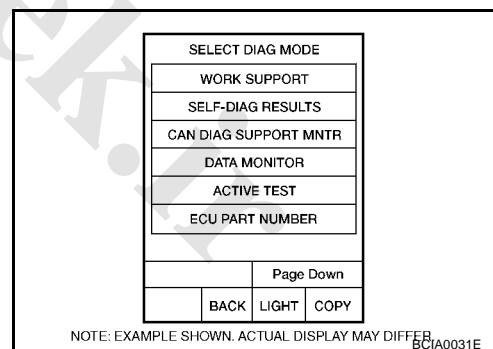

TCM Input/Output Signal Reference Values

ACS00AKS

TCM terminal data are reference values, measured between each terminal and ground.



Terminal	Wire color	Item	Condition	Data (Approx.)
24	G/O	Starter relay 	Selector lever in "N", "P" positions.	Battery voltage
			Selector lever in other positions.	0 V

Wiring Diagram — CVT — STSIG

ACS00AEE

CVT-STSIG-01

- : DETECTABLE LINE FOR DTC
- - - : NON-DETECTABLE LINE FOR DTC
- (L) : LHD MODELS
- (R) : RHD MODELS
- *1 2: (L)
- 7: (R)

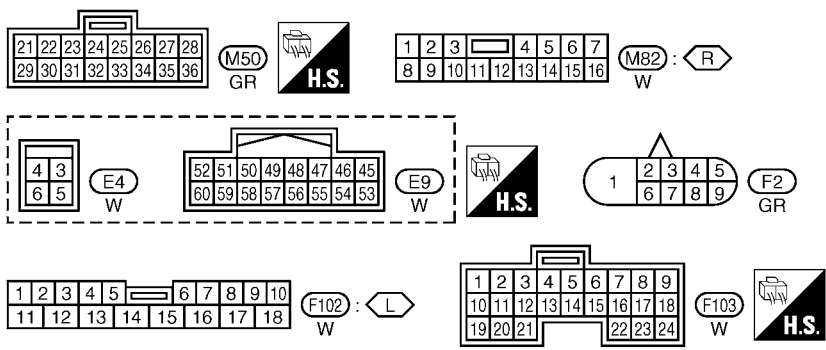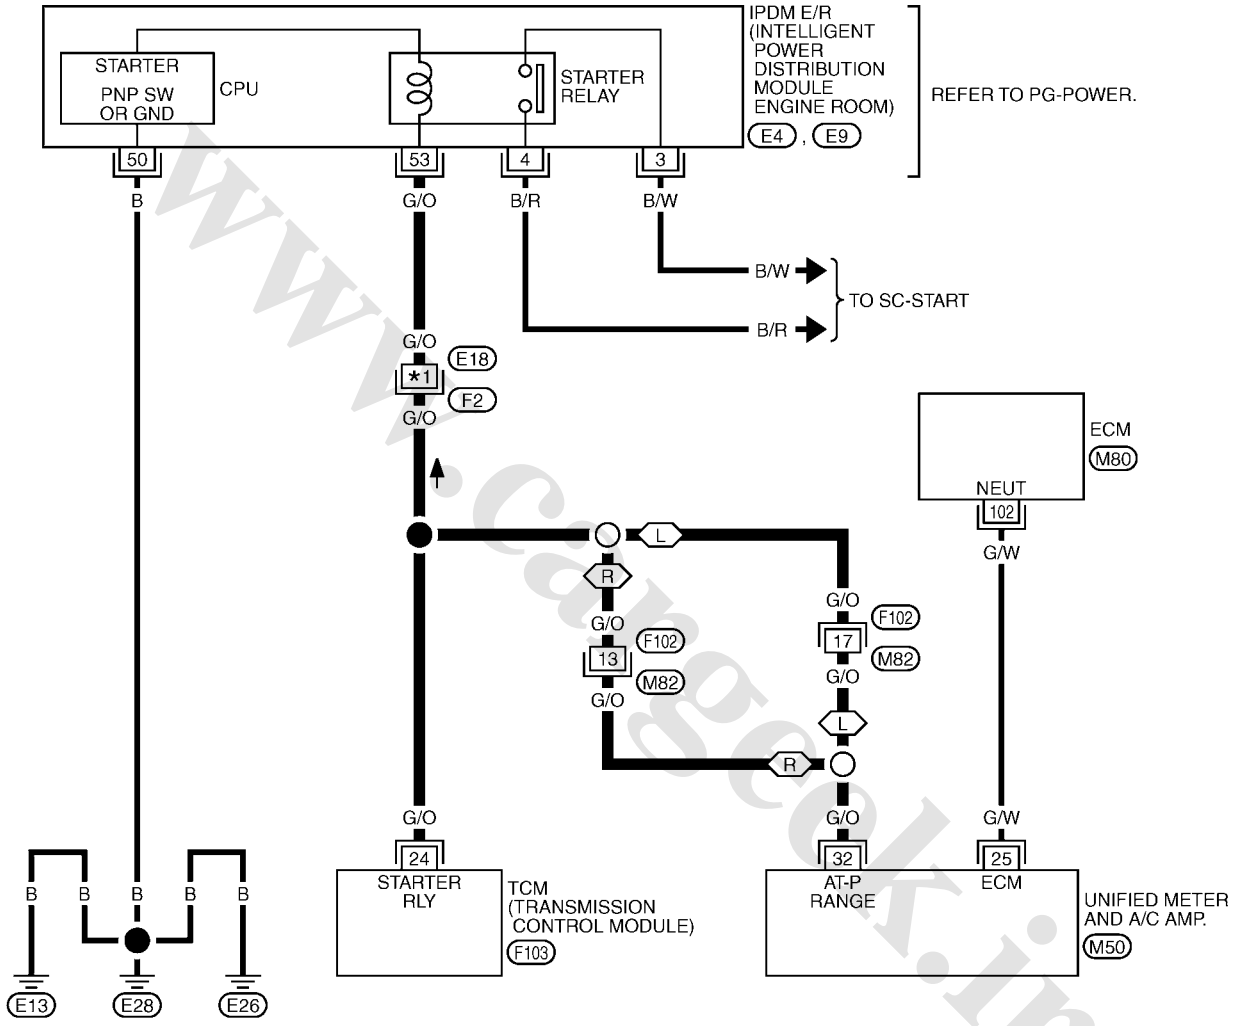

REFER TO THE FOLLOWING.
(M80) -ELECTRICAL UNITS

TCWB0137E

DTC P0703 STOP LAMP SWITCH CIRCUIT

PPF:25320

Description

ACS00AEG

“ON”, “OFF” status of the stop lamp switch is sent via the CAN communication from the unified meter and A/C amp to TCM using the signal.

CONSULT-II Reference Value

ACS00AEH

Remarks: Specification data are reference values.

Item name	Condition	Display value
BRAKE SW	Depressed brake pedal	ON
	Released brake pedal	OFF

On Board Diagnosis Logic

ACS00AEI

Diagnostic trouble code “P0703 BRAKE SW/CIRC” with CONSULT-II is detected when the stop lamp switch does not switch to ON and OFF.

- The stop lamp switch does not switch to ON and OFF.

Possible Cause

ACS00AEJ

- Harness or connectors
(Stop lamp switch, and unified meter and A/C amp circuit are open or shorted.)
(CAN communication line is open or shorted.)
- Stop lamp switch

DTC Confirmation Procedure

ACS00AEK

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
3. Start engine.
4. Start vehicle for at least 3 consecutive seconds.
5. If DTC is detected, check possible cause items.

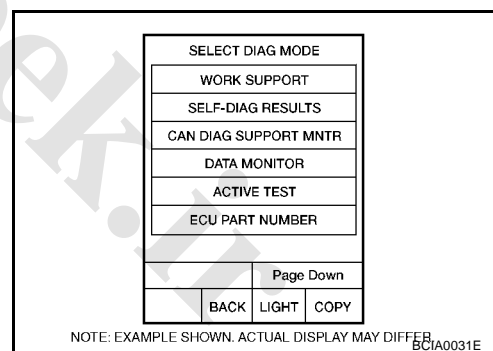

DTC P0705 PARK/NEUTRAL POSITION SWITCH

PFP:32006

Description

ACS00AEM

- The PNP switch includes 4 transmission position switches.
- TCM judges the selector lever position by the PNP switch signal.

Shift position	PNP switch 1	PNP switch 2	PNP switch 3	PNP switch 4	PNP switch 3 (monitor)
P	OFF	OFF	OFF	OFF	OFF
R	ON	OFF	OFF	ON	OFF
N	ON	ON	OFF	OFF	OFF
D	ON	ON	ON	ON	ON

CONSULT-II Reference Value

ACS00AEN

Remarks: Specification data are reference values.

Item name	Condition	Display value
INH SW3M	Selector lever in "D" position	ON
	Selector lever in "P", "R" and "N" positions	OFF
INH SW4	Selector lever in "R", "D" positions	ON
	Selector lever in "P", "N" positions	OFF
INH SW3	Selector lever in "D" position	ON
	Selector lever in "P", "R" and "N" positions	OFF
INH SW2	Selector lever in "N", "D" positions	ON
	Selector lever in "P", "R" positions	OFF
INH SW1	Selector lever in "R", "N" and "D" positions	ON
	Selector lever in "P" position	OFF

On Board Diagnosis Logic

ACS00AEO

Diagnostic trouble code "P0705 PNP SW/CIRC" with CONSULT-II is detected under the following conditions.

- When TCM does not receive the correct voltage signal from the PNP switches 1, 2, 3 and 4 based on the gear position.
- When the signal from monitor terminal of PNP switch 3 is different from PNP switch 3.

Possible Cause

ACS00AEP

- Harness or connectors
(PNP switches 1, 2, 3, 4 and TCM circuit is open or shorted.)
- PNP switches 1, 2, 3 and 4
- PNP switch 3 monitor terminal is open or shorted

DTC Confirmation Procedure

ACS00AEO

CAUTION:

Always drive vehicle at a safe speed.

NOTE:


If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

DTC P0705 PARK/NEUTRAL POSITION SWITCH

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Drive vehicle and maintain the following conditions for at least 2 consecutive seconds.
VEHICLE SPEED: More than 10 km/h (6 MPH)
ENG SPEED: More than 450 rpm
ACC PEDAL OPEN: More than 1.0/8
5. If DTC is detected, check possible cause items.

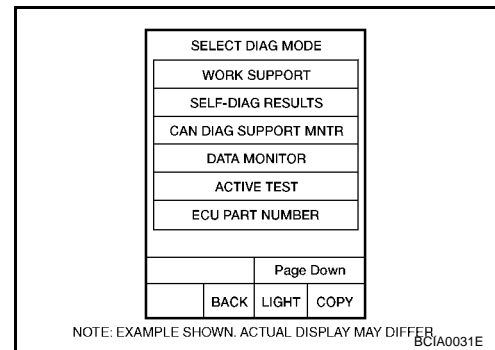

WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKT

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
27	BR/W	PNP switch 1	Selector lever in "R", "N" and "D" positions.	0 V
			Selector lever in "P" position.	Battery voltage
32	GR	PNP switch 3 (monitor)	Selector lever in "D" position.	0 V
			Selector lever in "P", "R" and "N" positions.	8.0 V - Battery voltage
34	P/B	PNP switch 2	Selector lever in "N", "D" positions.	0 V
			Selector lever in "P", "R" positions.	10.0 V - Battery voltage
35	P/L	PNP switch 3	Selector lever in "D" position.	0 V
			Selector lever in "P", "R" and "N" positions.	8.0 V - Battery voltage
36	G*1	PNP switch 4	Selector lever in "R", "D" positions.	0 V
	G/O*2		Selector lever in "P", "N" positions.	10.0 V - Battery voltage



*1: LHD models

*2: RHD models

Wiring Diagram — CVT — PNP/SW

CVT-PNP/SW-01


- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- L** : LHD MODELS
- R** : RHD MODELS

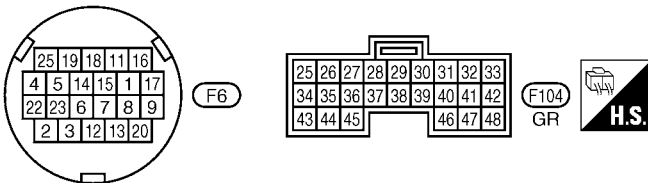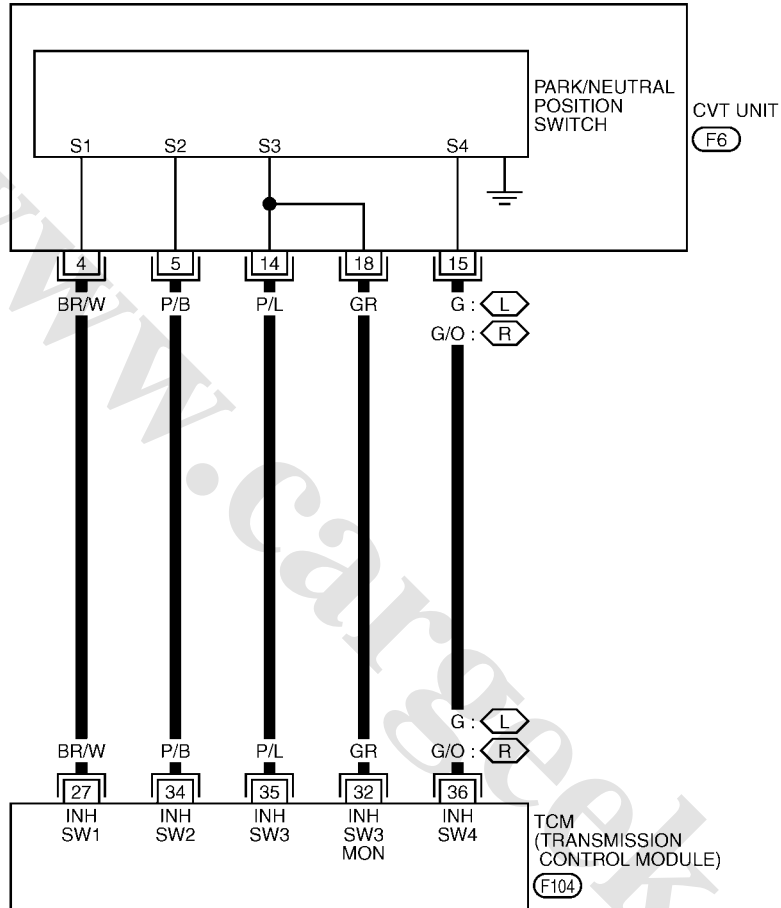

Component Inspection PNP SWITCH

1. Change selector lever to various positions to check the continuity between terminals on the PNP switch and ground.

PNP SW	Shift position	Connector	Terminal	Continuity
SW 1	"R", "N" and "D"	F6	4 - Ground	Yes
	"P"			No
SW 2	"N", "D"		5 - Ground	Yes
	"P", "R"			No
SW 3	"D"		14 - Ground	Yes
	"P", "R" and "N"			No
SW 4	"R", "D"		15 - Ground	Yes
	"P", "N"			No
SW 3 monitor	"D"		18 - Ground	Yes
	"P", "R" and "N"			No

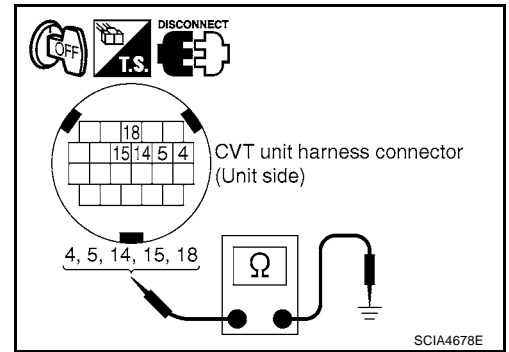

2. If NG, check continuity with control cable disconnected. (Refer to step 1 above.)
3. If OK, with the control cable disconnected, adjust the control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .
4. If NG, even when the control cable is disconnected, replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

PF3:31020

Description

ACS00AEU

The CVT fluid temperature sensor detects the CVT fluid temperature and sends a signal to the TCM.

CONSULT-II Reference Value

ACS00AEV

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ATF TEMP SEN	Cold [20°C (68°F)]	1.8 - 2.0 V
	Hot [80°C (176°F)]	0.6 - 1.0 V

On Board Diagnosis Logic

ACS00AEV

Diagnostic trouble code "P0710 ATF TEMP SEN/CIRC" with CONSULT-II is detected when TCM receives an excessively low or high voltage from the sensor.

Possible Cause

ACS00AEX

- Harness or connectors
(Sensor circuit is open or shorted.)
- CVT fluid temperature sensor

DTC Confirmation Procedure

ACS00AEV

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 10 minutes (Total).
VEHICLE SPEED: 10 km/h (6 MPH) or more
ENG SPEED: 450 rpm more than
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
4. If DTC is detected, check possible cause items.

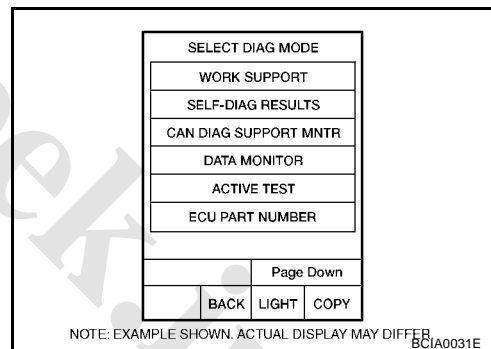

WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKU

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
42	W/R	Sensor ground	Always	0 V
47	V	CVT fluid temperature sensor	When CVT fluid temperature is 20°C (68°F).	2.0 V
			When CVT fluid temperature is 80°C (176°F).	1.0 V

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT

www.CarGeek.ir

Wiring Diagram — CVT — FTS




ACS00AEZ

CVT-FTS-01

A
B
C
D
E
F
G
H
I
J
K
L
M

CVT

— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC

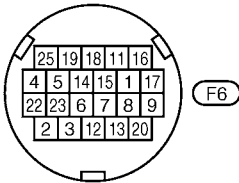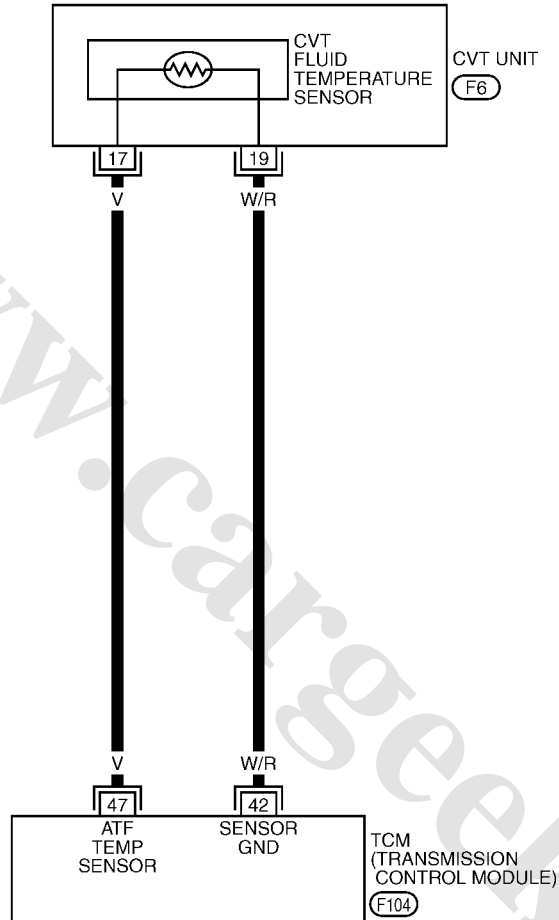

TCWA0247E

DTC P0710 CVT FLUID TEMPERATURE SENSOR CIRCUIT


Component Inspection CVT FLUID TEMPERATURE SENSOR

ACS00AF1

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminals.

Name	Connector	Terminal	Temperature °C (°F)	Resistance (Approx.)
CVT fluid temperature sensor	F6	17 - 19	20 (68)	6.5 kΩ
			80 (176)	0.9 kΩ

4. If NG, replace the transaxle assembly. Refer to [CVT-153](#). "[Removal and Installation](#)".

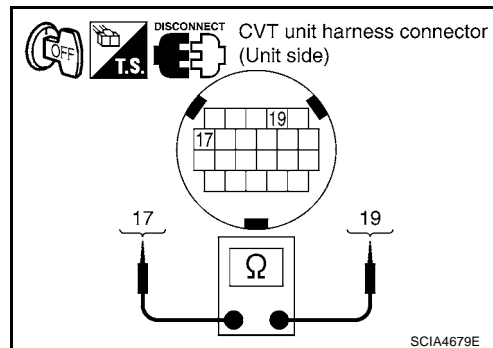

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

PF3:31935

Description

ACS00AF2

The input speed sensor (primary speed sensor) detects the primary pulley revolution speed and sends a signal to the TCM.

CONSULT-II Reference Value

ACS00AF3

Remarks: Specification data are reference values.

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.

On Board Diagnosis Logic

ACS00AF4

Diagnostic trouble code "P0715 INPUT SPD SEN/CIRC" with CONSULT-II is detected when TCM does not receive the proper signal from the sensor.

Possible Cause

ACS00AF5

- Harness or connectors (Sensor circuit is open or shorted.)
- Input speed sensor (Primary speed sensor)

DTC Confirmation Procedure

ACS00AF6

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.

2. Start engine and maintain the following conditions for at least 5 consecutive seconds.

VEHICLE SPEED: 10 km/h (6 MPH) or more

ACC PEDAL OPEN: More than 1.0/8

RANGE: "D" position


ENG SPEED: 450 rpm or more

Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.

3. If DTC is detected, check possible cause items.

WITH GST

Follow the procedure "WITH CONSULT-II".

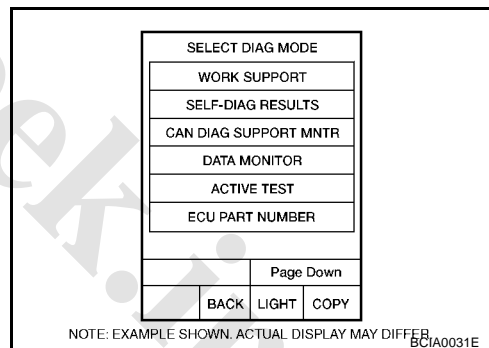



DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

Wiring Diagram — CVT — PRSCVT

ACS00AF7

CVT-PRSCVT-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

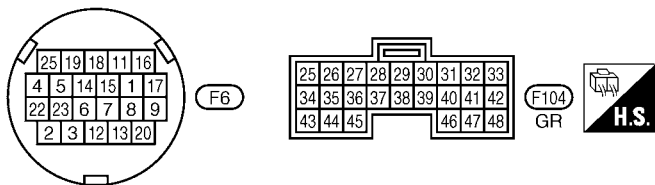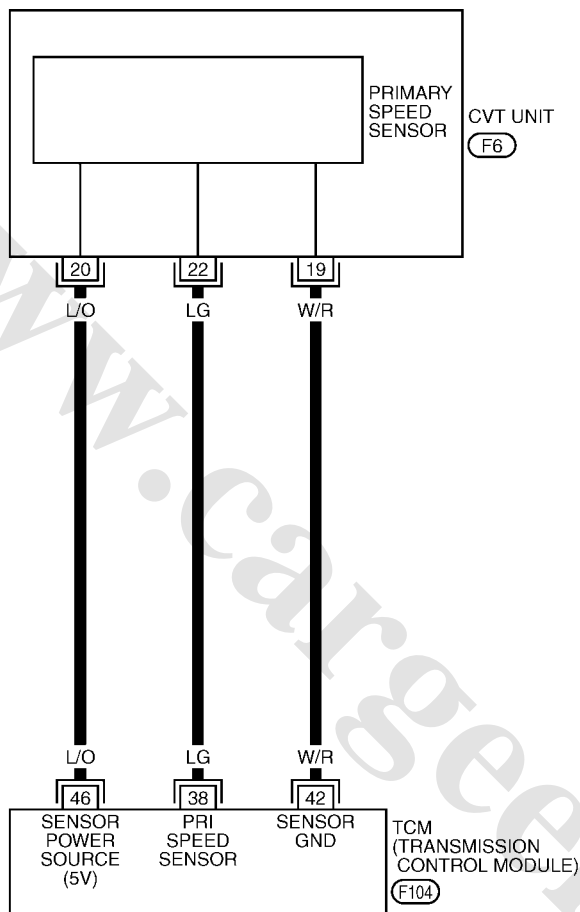




TCWA0254E

DTC P0715 INPUT SPEED SENSOR CIRCUIT (PRI SPEED SENSOR)

TCM Input/Output Signal Reference Values

ACS00AKV

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Data (Approx.)
38	LG	Input speed sensor (Primary speed sensor)		When driving ["D" position, 20 km/h (12 MPH)].	600 Hz
42	W/R	Sensor ground	Always		0 V
46	L/O	Sensor power		—	4.5 - 5.5 V
				—	0 V

A
B
CVT
D
E
F
G
H
I
J
K
L
M

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

PFP:31935

Description

ACS00AF9

The vehicle speed sensor CVT [output speed sensor (secondary speed sensor)] detects the revolution of the CVT output shaft and emits a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.

CONSULT-II Reference Value

ACS00AFA

Remarks: Specification data are reference values.

Item name	Condition	Display value
VSP SENSOR	During driving	Approximately matches the speedometer reading.

On Board Diagnosis Logic

ACS00AFB

Diagnostic trouble code "P0720 VEH SPD SEN/CIR AT" with CONSULT-II is detected TCM does not receive the proper signal from the sensor.

Possible Cause

ACS00AFC

- Harness or connectors (Sensor circuit is open or shorted.)
- Output speed sensor (Secondary speed sensor)

DTC Confirmation Procedure

ACS00AFD

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 12 consecutive seconds.
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. If DTC is detected, check possible cause items.

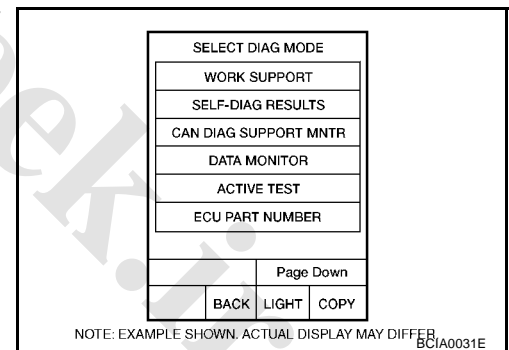


WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKW

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
29	G*1	Output speed sensor (Secondary speed sensor)	 When driving ["D" position, 20 km/h (12 MPH)].	300 Hz
	LG/R*2			
42	W/R	Sensor ground	Always	0 V

*1: LHD models

*2: RHD models






DTC P0720 VEHICLE SPEED SENSOR CVT (SECONDARY SPEED SENSOR)

Wiring Diagram — CVT — SESCVT

ACS00AFE

CVT-SESCVT-01

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- L** : LHD MODELS
- R** : RHD MODELS
- *1 7 : **L**
- 8 : **R**

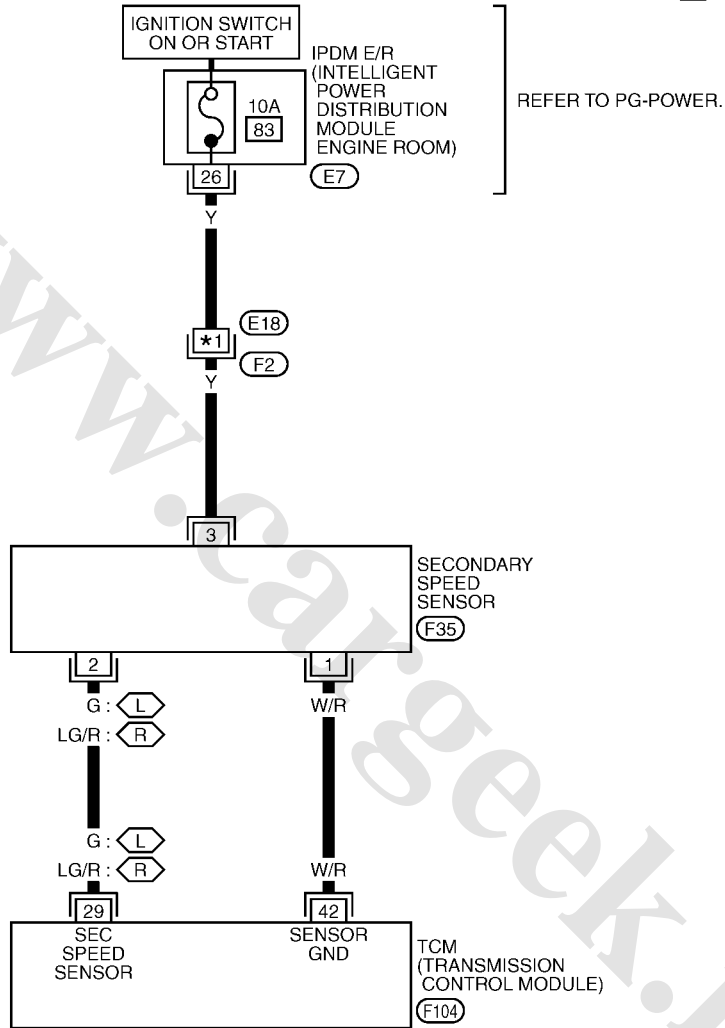

TCWB0139E

DTC P0725 ENGINE SPEED SIGNAL

PFP:24825

Description

ACS00AFG

The engine speed signal is sent from the ECM to the TCM.

CONSULT-II Reference Value

ACS00AFH

Remarks: Specification data are reference values.

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8

On Board Diagnosis Logic

ACS00AFI

Diagnostic trouble code "P0725 ENGINE SPEED SIG" with CONSULT-II is detected when TCM does not receive the engine speed signal (input by CAN communication) from ECM.

Possible Cause

ACS00AFJ

Harness or connectors
(The ECM to the TCM circuit is open or shorted.)
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

ACS00AFK

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds.
PRI SPEED SEN: More than 1000 rpm
3. If DTC is detected, check possible cause items.

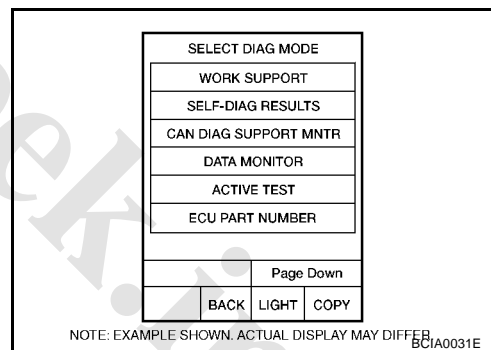

DTC P0730 BELT DAMAGE

PFP:31935

Description

ACS00AFM

TCM selects the gear ratio using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal. Then it changes the operating pressure of the primary pulley and the secondary pulley and changes the groove width of the pulley.

CONSULT-II Reference Value

ACS00AFN

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
GEAR RATIO	During driving	2.37 - 0.43

On Board Diagnosis Logic

ACS00AFO

- TCM calculates the actual gear ratio with input speed sensor (primary speed sensor) and output speed sensor (secondary speed sensor).
- Diagnostic trouble code "P0730 BELT DAMG" with CONSULT-II is detected, when TCM receives an unexpected gear ratio signal.

Possible Cause

ACS00AFP

Transaxle assembly

DTC Confirmation Procedure

ACS00AFQ

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
4. Start engine and maintain the following conditions for at least 30 consecutive seconds.
TEST START FROM 0 km/h (0 MPH)
CONSTANT ACCELERATION: Keep 30 sec or more
VEHICLE SPEED: 10 km/h (6 MPH) or more
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
ENG SPEED: 450 rpm or more
5. If DTC is detected, check possible cause items.

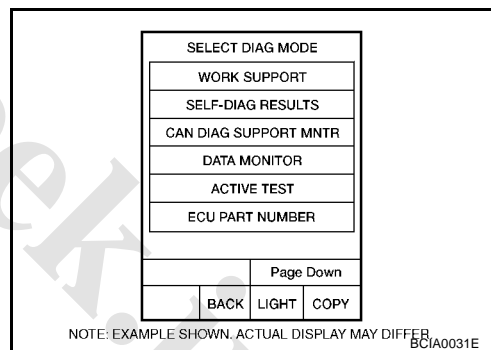

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE

PFP:31940

Description

ACS00AFS

- The torque converter clutch solenoid valve is activated by the TCM in response to signals sent from the vehicle speed and throttle position sensors. Lock-up piston operation will then be controlled.
- Lock-up operation, however, is prohibited when CVT fluid temperature is too low.
- When the accelerator pedal is depressed (less than 2/8) in lock-up condition, the engine speed should not change abruptly. If there is a big jump in engine speed, there is no lock-up.

CONSULT-II Reference Value

ACS00AFT

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ISOLT1	Lock-up OFF	0.0 A
	Lock-up ON	0.7 A

On Board Diagnosis Logic

ACS00AFU

Diagnostic trouble code "P0740 TCC SOLENOID/CIRC" with CONSULT-II is detected under the following conditions.

- TCM detects an improper voltage drop when it tries to operate the solenoid valve.

Possible Cause

ACS00AFV

- Torque converter clutch solenoid valve
- Harness or connectors
(Solenoid circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AFW


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II and wait at least 10 consecutive seconds.
3. If DTC is detected, check possible cause items.

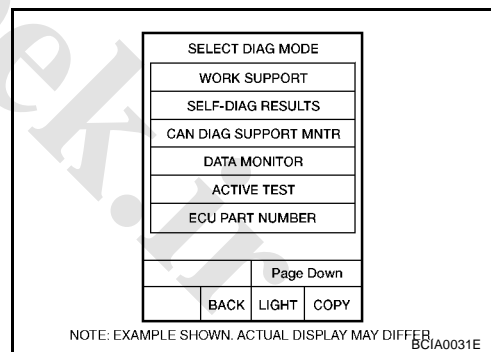


WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKX

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
3	L/W*1	Torque converter clutch solenoid valve	 When vehicle cruises in "D" position.	When CVT performs lock-up.	6.0 V
	G*2			When CVT does not perform lock-up.	1.0 V

*1: LHD models

*2: RHD models

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE




www.CarGeek.ir

Wiring Diagram — CVT — TCV

ACS00AFX

CVT-TCV-01

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- L** : LHD MODELS
- R** : RHD MODELS

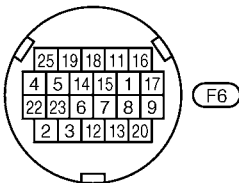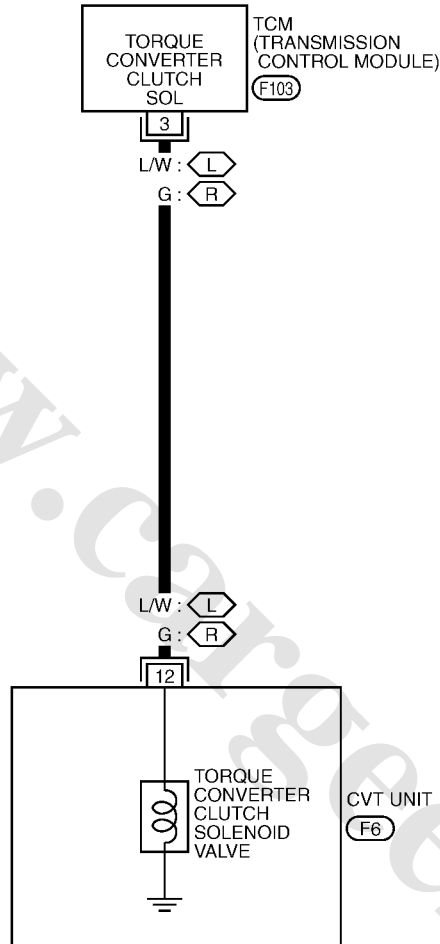

TCWB0140E

DTC P0740 TORQUE CONVERTER CLUTCH SOLENOID VALVE


Component Inspection

TORQUE CONVERTER CLUTCH SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid Valve	Connector	Terminal	Resistance (Approx.)
Torque converter clutch solenoid valve	F6	12 - Ground	3.0 - 9.0 Ω

4. If NG, replace the transaxle assembly. Refer to [CVT-153](#), "[Removal and Installation](#)".

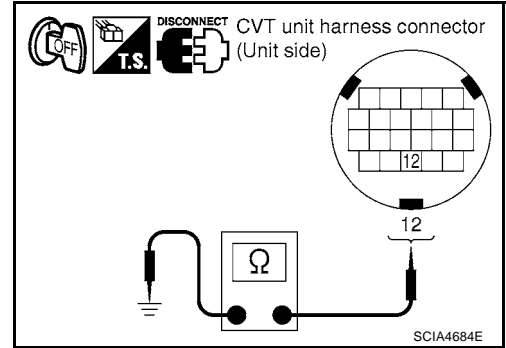

DTC P0744 A/T TCC S/V FUNCTION (LOCK-UP)

PFP:31940

Description

ACS00AG0

This malfunction is detected when the torque converter clutch does not lock-up as instructed by the TCM. This is not only caused by electrical malfunction (circuits open or shorted), but also by mechanical malfunction such as control valve sticking, improper solenoid valve operation, etc.

CONSULT-II Reference Value

ACS00AG1

Remarks: Specification data are reference values.

Item name	Condition	Display value
ENG SPEED SIG	Engine running	Closely matches the tachometer reading.
PRI SPEED SEN	During driving (lock-up ON)	Approximately matches the engine speed.

On Board Diagnosis Logic

ACS00AG2

Diagnostic trouble code "P0744 A/T TCC S/V FNCTN" with CONSULT-II is detected under the following conditions.

- When CVT cannot perform lock-up even if electrical circuit is good.
- When TCM compares difference value with slip revolution and detects an irregularity.

Possible Cause

ACS00AG3

- Torque converter clutch solenoid valve
- Hydraulic control circuit

DTC Confirmation Procedure

ACS00AG4

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II


1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following condition for at least 30 seconds.

ACC PEDAL OPEN: More than 1.0/8

RANGE: "D" position

[Vehicle speed: Constant speed of more than 40 km/h (25 MPH)]

4. If DTC is detected, check possible cause items.

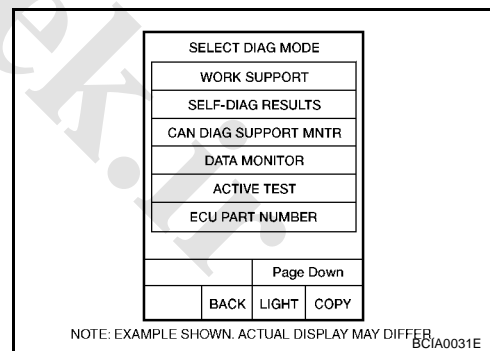

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0745 LINE PRESSURE SOLENOID VALVE

PDF:31940

Description

ACS00AG6

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

ACS00AG7

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ISOLT2	Release your foot from the accelerator pedal.	0.8 A
	Press the accelerator pedal all the way down.	0.0 A

On Board Diagnosis Logic

ACS00AG8

Diagnostic trouble code "P0745 L/PRESS SOL/CIRC" with CONSULT-II is detected under the following conditions.

- TCM detects an improper voltage drop when it tries to operate the solenoid valve.
- When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

ACS00AG9

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve A (Line pressure solenoid valve)

DTC Confirmation Procedure

ACS00AGA


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and wait at least 5 seconds.
3. If DTC is detected, check possible cause items.

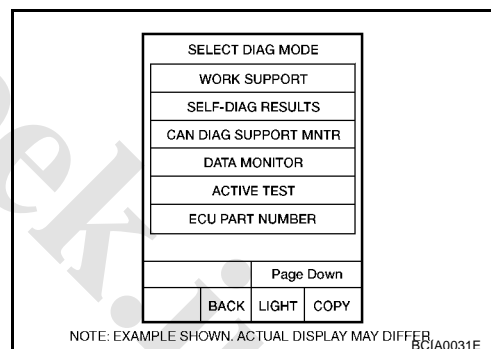


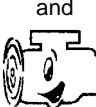
WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKY

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
1	R/Y	Pressure control solenoid valve A (Line pressure solenoid valve)	 and	Release your foot from the accelerator pedal.	5.0 - 7.0 V
				Press the accelerator pedal all the way down.	1.0 - 3.0 V

DTC P0745 LINE PRESSURE SOLENOID VALVE




www.CarGeek.ir

Wiring Diagram — CVT — LPSV

ACS00AGB

CVT-LPSV-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

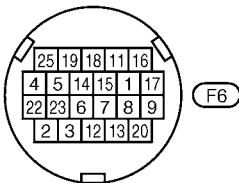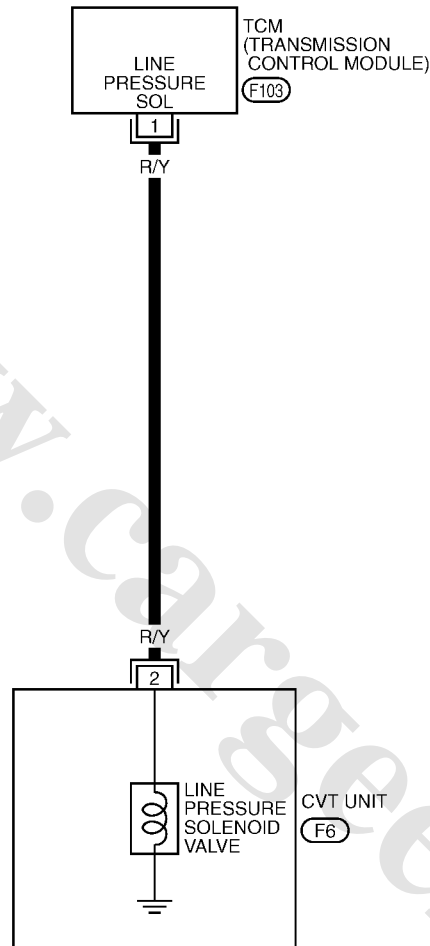

TCWA0249E

DTC P0745 LINE PRESSURE SOLENOID VALVE


Component Inspection

PRESSURE CONTROL SOLENOID VALVE A (LINE PRESSURE SOLENOID VALVE)

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Pressure control solenoid valve A (Line pressure solenoid valve)	F6	2 - Ground	3.0 - 9.0 Ω

4. If NG, replace the transaxle assembly. Refer to [CVT-153](#). "[Removal and Installation](#)".

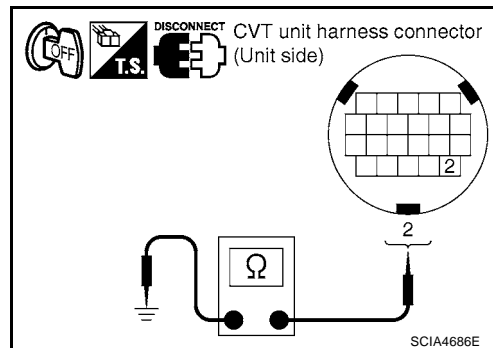

DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

www.CarGeek.ir

DTC P0746 PRESSURE CONTROL SOLENOID A PERFORMANCE (LINE PRESSURE SOLENOID VALVE)

PF0:31941

Description

ACS00AGE

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

ACS00AGF

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
PRI PRESS	"N" position idle	0.3 - 0.9 MPa

On Board Diagnosis Logic

ACS00AGG

Diagnostic trouble code "P0746 PRS CNT SOL/A FCTN" with CONSULT-II is detected under the following conditions.

- Unexpected gear ratio was detected in the LOW side due to excessively low line pressure.

Possible Cause

ACS00AGH

- Line pressure control system
- Output speed sensor (Secondary speed sensor)
- Input speed sensor (Primary speed sensor)

DTC Confirmation Procedure

ACS00AGI

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 10 consecutive seconds. Test start from 0 km/h (0 MPH).
ATF TEMP SEN: 1.0 - 2.0 V
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
VEHICLE SPEED: 10 km/h (6 MPH) More than
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. If DTC is detected, check possible cause items.

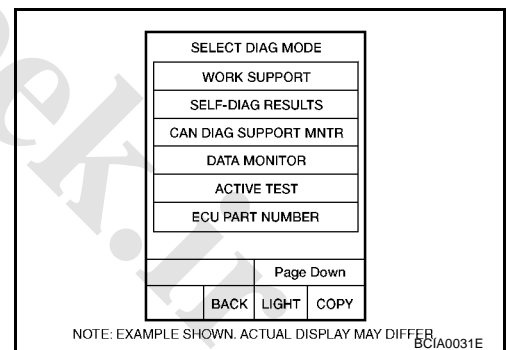

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

DTC P0776 PRESSURE CONTROL SOLENOID B PERFORMANCE (SEC PRESSURE SOLENOID VALVE)

PFP:31941

Description

ACS00AGK

The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

ACS00AGL

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
SEC PRESS	"N" position idle	0.5 - 0.9 MPa

On Board Diagnosis Logic

ACS00AGM

Diagnostic trouble code "P0776 PRS CNT SOL/B FCTN" with CONSULT-II is detected when secondary pressure is too high or too low compared with the commanded value while driving.

Possible Cause

ACS00AGN

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve system)
- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Line pressure control system

DTC Confirmation Procedure

ACS00AGO

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 30 consecutive seconds.
ATF TEMP SEN: 1.0 - 2.0 V
ACC PEDAL OPEN: More than 1.0/8
RANGE: "D" position
VEHICLE SPEED: 10 km/h (6 MPH) More than
Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.
3. If DTC is detected, check possible cause items.

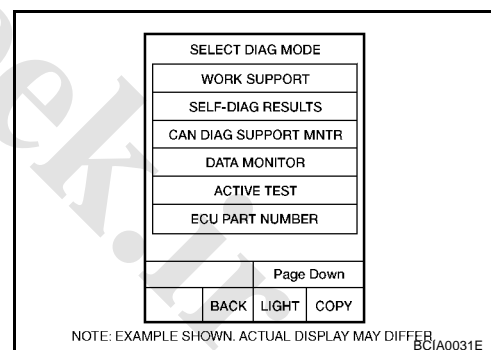

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

www.CarGeek.ir

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

PF3:31941

Description

ACS00AGQ

The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

ACS00AGR

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ISOLT3	Secondary pressure low - Secondary pressure high	0.8 - 0.0 A
SOLMON3	"N" position idle	0.6 - 0.7 A
	When stalled	0.4 - 0.6 A

On Board Diagnosis Logic

ACS00AGS

Diagnostic trouble code "P0778 PRS CNT SOL/B CIRC" with CONSULT-II is detected under the following conditions.

- TCM detects an improper voltage drop when it tries to operate the solenoid valve.
- When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

ACS00AGT

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve)

DTC Confirmation Procedure

ACS00AGU


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON.
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and wait at least 5 seconds.
4. If DTC is detected, check possible cause items.

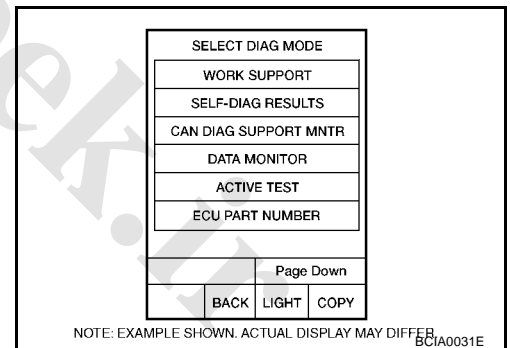



WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00AKZ

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
2	W/B	Pressure control solenoid valve B (Secondary pressure solenoid valve)	 and 	Release your foot from the accelerator pedal.	5.0 - 7.0 V
				Press the accelerator pedal all the way down.	3.0 - 4.0 V

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)




www.CarGeek.ir

Wiring Diagram — CVT — SECPSV

ACS00AGV

CVT-SECPSV-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

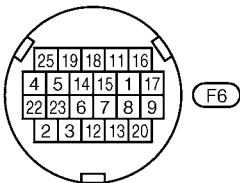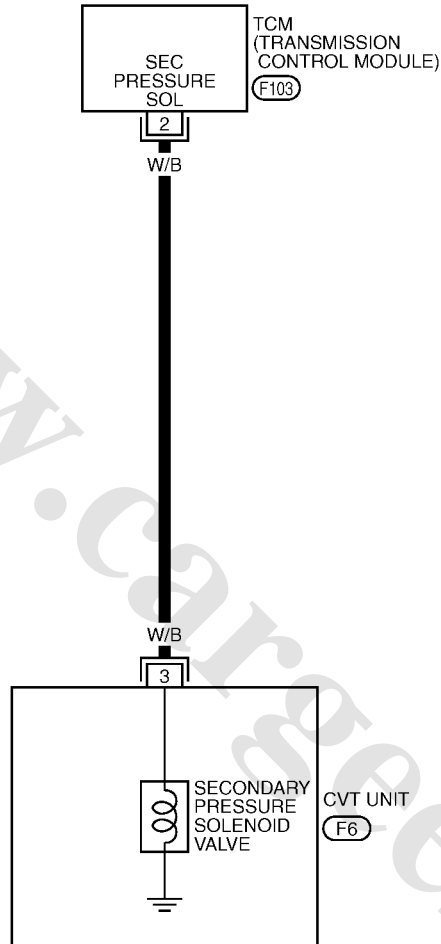

F103
W



TCWA0250E

DTC P0778 PRESSURE CONTROL SOLENOID B ELECTRICAL (SEC PRESSURE SOLENOID VALVE)

www.CarGeek.ir

Component Inspection


ACS00AGX

PRESSURE CONTROL SOLENOID VALVE B (SECONDARY PRESSURE SOLENOID VALVE)

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid Valve	Connector	Terminal	Resistance (Approx.)
Pressure control solenoid valve B (Secondary pressure solenoid valve)	F6	3 - Ground	3.0 - 9.0 Ω

4. If NG, replace the transaxle assembly. Refer to [CVT-153](#). "[Removal and Installation](#)".

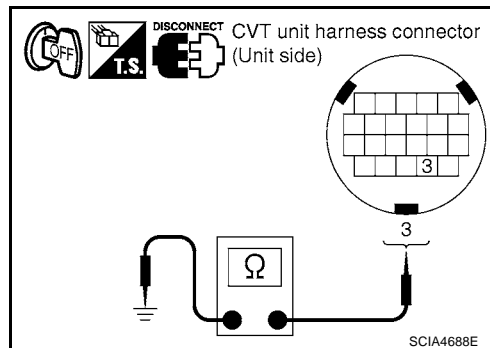

A
B
CVT
D
E
F
G
H
I
J
K
L
M

www.CarGeek.ir

DTC P0826 MANUAL MODE SWITCH CIRCUIT

PFP:34901

Description

ACS00AGY

Manual mode switch is installed in CVT control device. The manual mode switch sends shift up and shift down switch signals to TCM.

TCM sends the switch signals to unified meter and A/C amp via CAN communication line. Then manual mode switch position is indicated on the CVT position indicator. For inspection, refer to [CVT-117, "CVT INDICATOR CIRCUIT"](#).

CONSULT-II Reference Value

ACS00AGZ

Item name	Condition	Display value
MMODE	Manual shift gate position (neutral)	ON
	Other than the above	OFF
NON MMODE	Manual shift gate position (neutral, +side, -side)	OFF
	Other than the above	ON
UPLVR	Select lever: + side	ON
	Other than the above	OFF
DOWNLVR	Select lever: - side	ON
	Other than the above	OFF

On Board Diagnosis Logic

ACS00AH0

Diagnostic trouble code "P0826 MANUAL MODE SWITCH" with CONSULT-II is detected when TCM monitors Manual mode, Non manual mode, Up or Down switch signal, and then detects irregular with impossible input pattern for 1 second or more.

Possible Cause

ACS00AH1

- Harness or connectors
(These switches circuit is open or shorted.)
(TCM, and unified meter and A/C amp circuit are open or shorted.)
(CAN communication line is open or shorted.)
- Manual mode select switch (Built into CVT control device)
- Manual mode position select switch (Built into CVT control device)

DTC Confirmation Procedure

ACS00AH2

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine.
4. Move selector lever to "M" position.
5. Drive vehicle for at least 2 consecutive seconds.
6. If DTC is detected, check possible cause items.

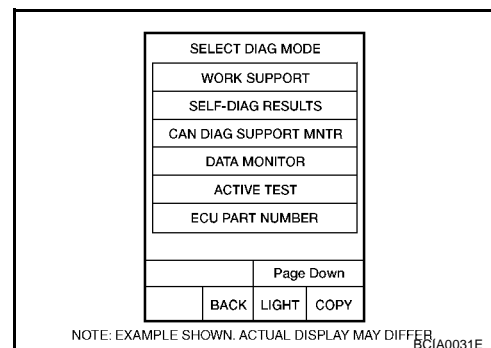


Wiring Diagram — CVT — MMSW






LHD models

CVT-MMSW-01

REFER TO PG-POWER.

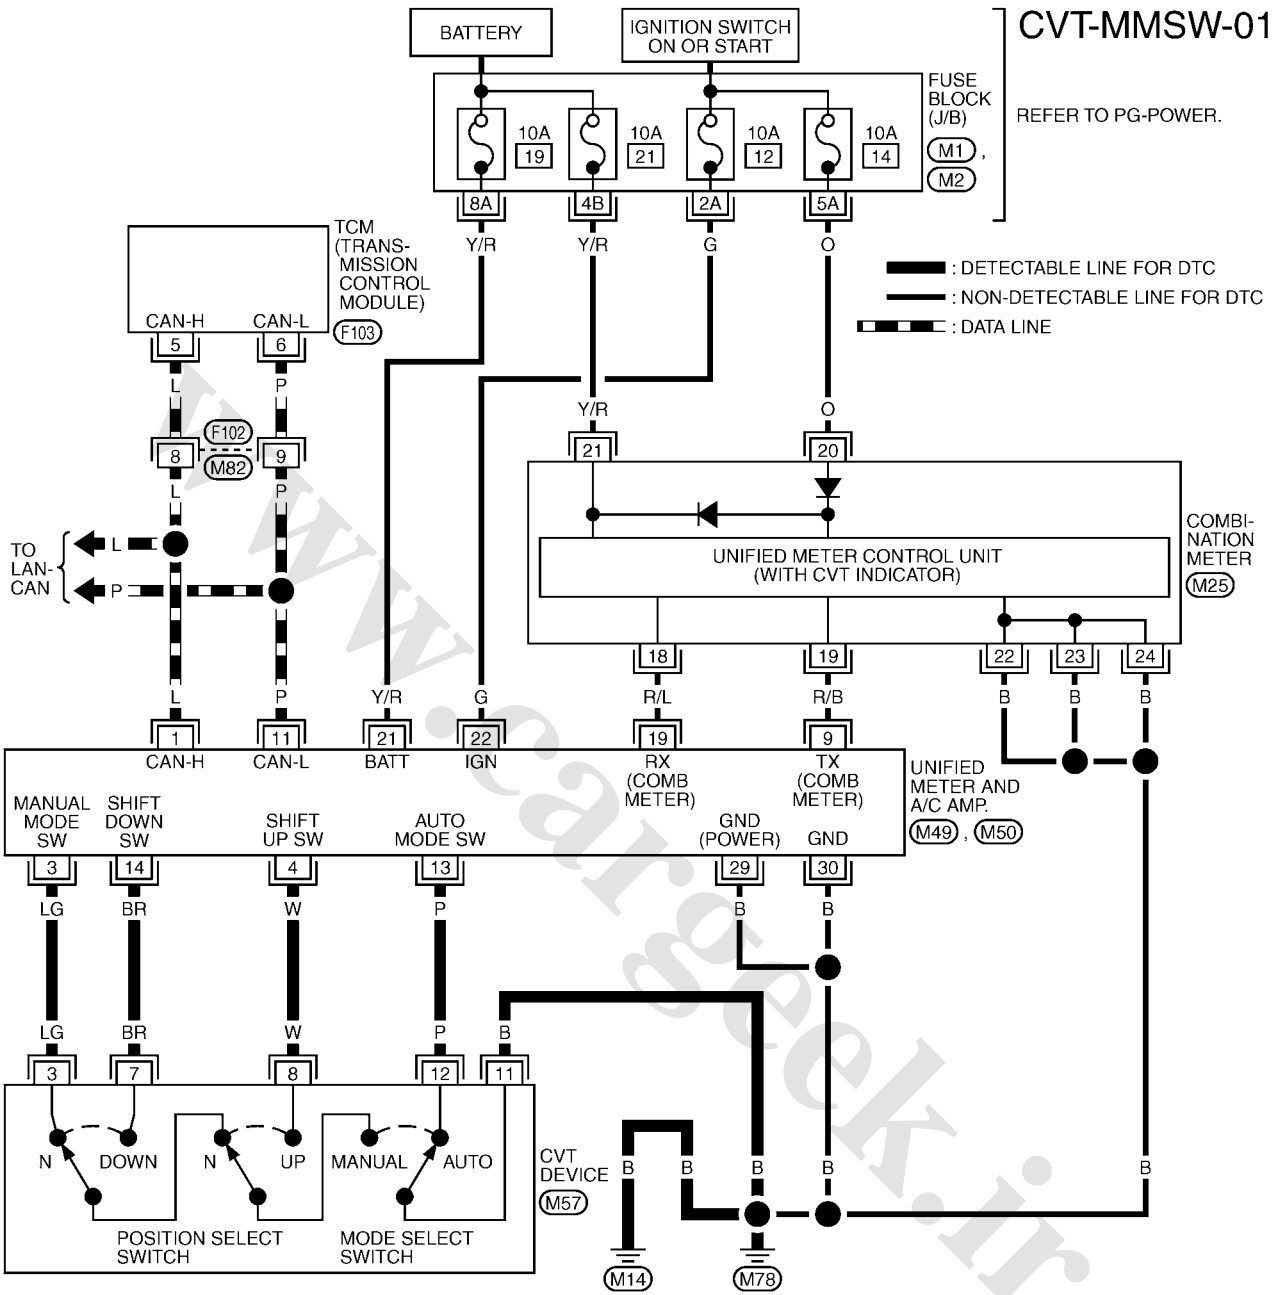

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC
 : DATA LINE







REFER TO THE FOLLOWING.

(M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

RHD models

CVT-MMSW-01

REFER TO PG-POWER.

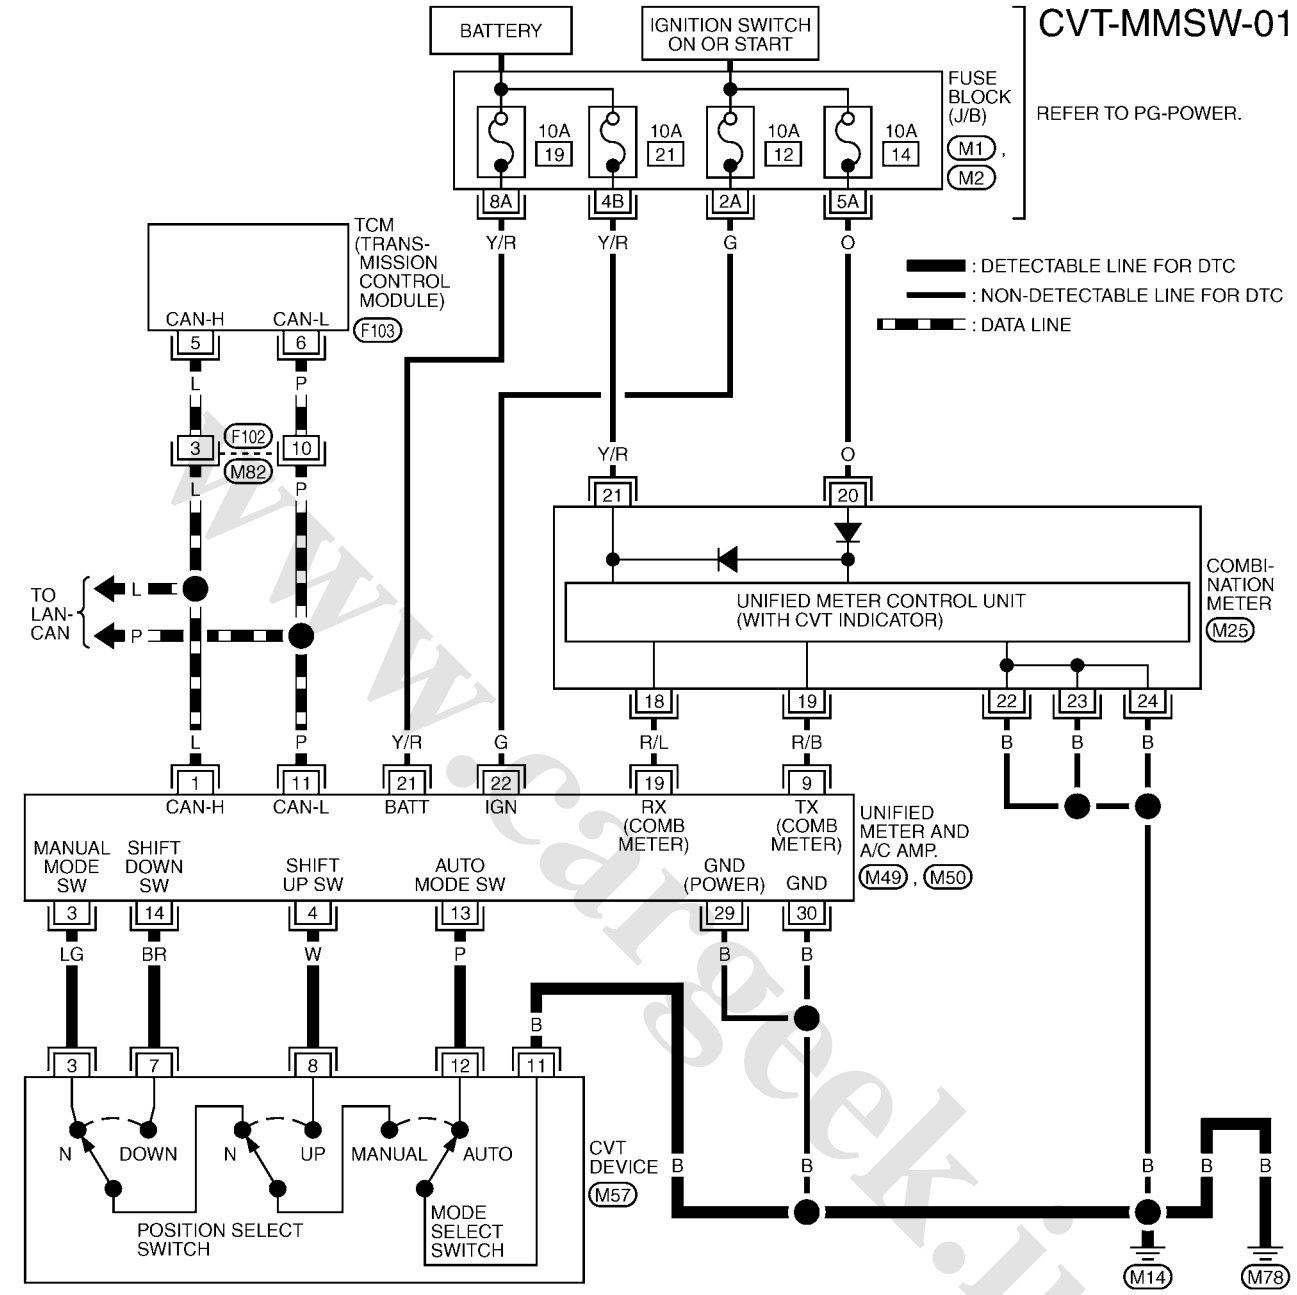

REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

DTC P0826 MANUAL MODE SWITCH CIRCUIT

TCM Input/Output Signal Reference Values

ACS00AL0

TCM terminal data are reference values, measured between each terminal and ground.


Terminal	Wire color	Item	Condition	Data (Approx.)
5	L	CAN-H	-	-
6	P	CAN-L	-	-

Component Inspection MANUAL MODE SWITCH

ACS00AH5

Check continuity between CVT device harness connector terminals.

Item	Position	Connector	Terminal	Continuity
Manual mode select switch	Auto	M57	12 - 11	Yes
	Manual		3 - 11	
Manual mode position select switch	Up		8 - 11	
	Down		7 - 11	

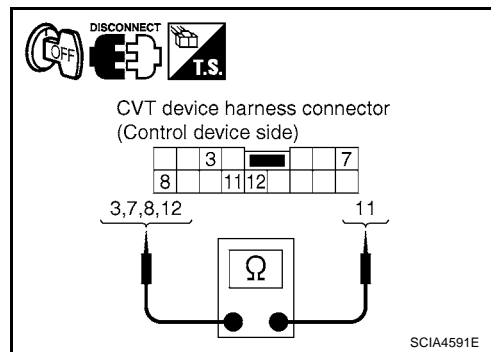

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

www.CarGeek.ir

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

PFP:31936

Description

ACS00AH6

The transmission fluid pressure sensor A (secondary pressure sensor) detects secondary pressure of CVT and sends TCM the signal.

CONSULT-II Reference Value

ACS00AH7

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
SEC HYDR SEN	"N" position idle	0.8 - 1.0 V
SEC PRESS		0.5 - 0.9 MPa

On Board Diagnosis Logic

ACS00AH8

Diagnostic trouble code "P0840 TR PRS SENS/A CIRC" with CONSULT-II is detected when TCM detects an improper voltage drop when it receives the sensor signal.

Possible Cause

ACS00AH9

- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Harness or connectors
(Switch circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AHA


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of line temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Start engine and wait for at least 5 consecutive seconds.
4. If DTC is detected, check possible cause items.

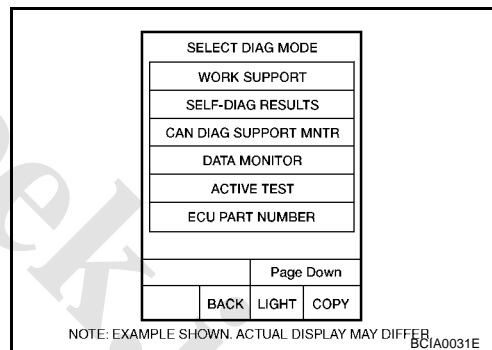

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)




www.CarGeek.ir

Wiring Diagram — CVT — SECPS

ACS00AHB

CVT-SECPS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

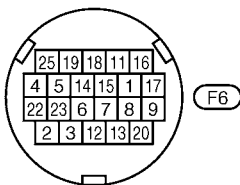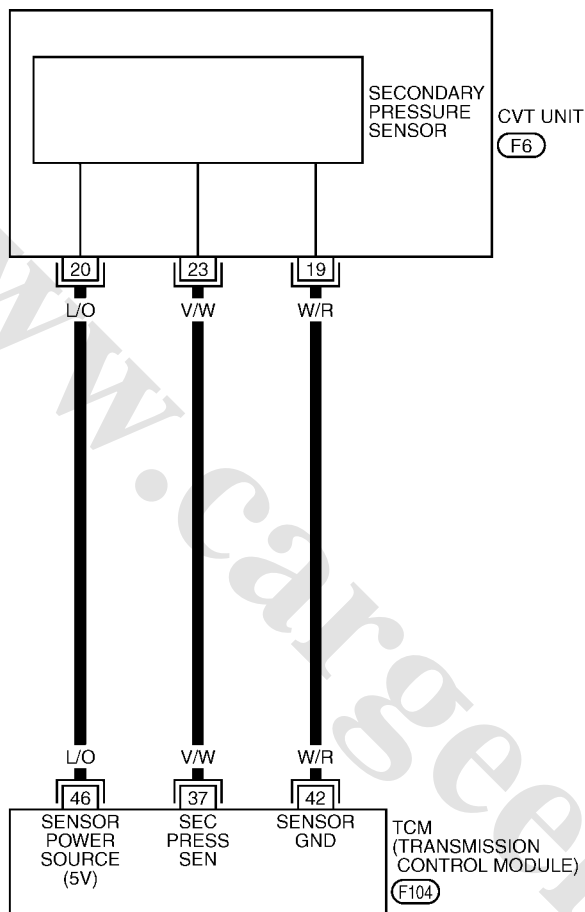

TCWA0253E





DTC P0840 TRANSMISSION FLUID PRESSURE SENSOR A CIRCUIT (SEC PRESSURE SENSOR)

www.CarGeek.ir

TCM Input/Output Signal Reference Values

ACS00AL1

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Data (Approx.)
37	V/W	Transmission fluid pressure sensor A (Secondary pressure sensor)	 and 	"N" position idle	0.8 V
42	W/R	Sensor ground	Always		0 V
46	L/O	Sensor power		—	4.5 - 5.5 V
				—	0 V

www.CarGeek.ir

DTC P0841 PRESSURE SENSOR FUNCTION

PFP:31936

Description

ACS00AHD

Using the engine load (throttle position), the primary pulley revolution speed, and the secondary pulley revolution speed as input signal, TCM changes the operating pressure of the primary pulley and the secondary pulley and changes the groove width of the pulley to control the gear ratio.

CONSULT-II Reference Value

ACS00AHE

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
PRI HYDR SEN	"N" position idle	0.7 - 3.5 V
SEC HYDR SEN		0.8 - 1.0 V

On Board Diagnosis Logic

ACS00AHF

Diagnostic trouble code "P0841 PRESS SEN/FNCTN" with CONSULT-II is detected when correlation between the values of the secondary pressure sensor and the primary pressure sensor is out of specification.

Possible Cause

ACS00AHG

- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Transmission fluid pressure sensor B (Primary pressure sensor)
- Harness or connectors
(Sensor circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AHH

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 12 consecutive seconds.
VEHICLE SPEED: 40 km/h (25 MPH) More than
RANGE: "D" position
3. If DTC is detected, check possible cause items.

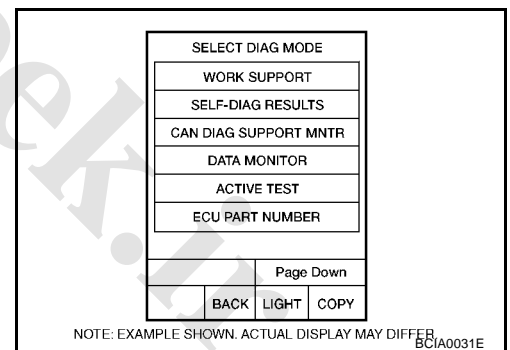

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)

PFP:31936

Description

ACS00AHJ

The primary pressure sensor detects primary pressure of CVT and sends TCM the signal.

CONSULT-II Reference Value

ACS00AHK

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
PRI HYDR SEN	"N" position idle	0.7 - 3.5 V

On Board Diagnosis Logic

ACS00AHL

Diagnostic trouble code "P0845 TR PRS SENS/B CIRC" with CONSULT-II is detected under the following conditions.

- When TCM detects an improper voltage drop when it receives the sensor signal.
- When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

ACS00AHM

- Transmission fluid pressure sensor B (Primary pressure sensor)
- Harness or connectors (Sensor circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AHN


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of line temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Start engine and wait for at least 5 consecutive seconds.
4. If DTC is detected, check possible cause items.

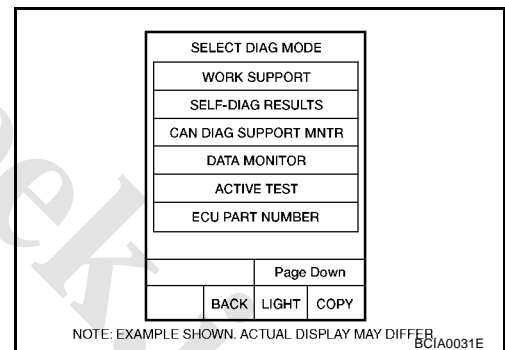

WITH GST

Follow the procedure "WITH CONSULT-II".

DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRI PRESSURE SENSOR)




www.CarGeek.ir

Wiring Diagram — CVT — PRIPS

ACS00AHO

CVT-PRIPS-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

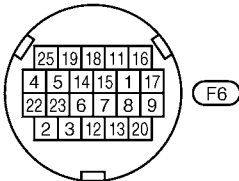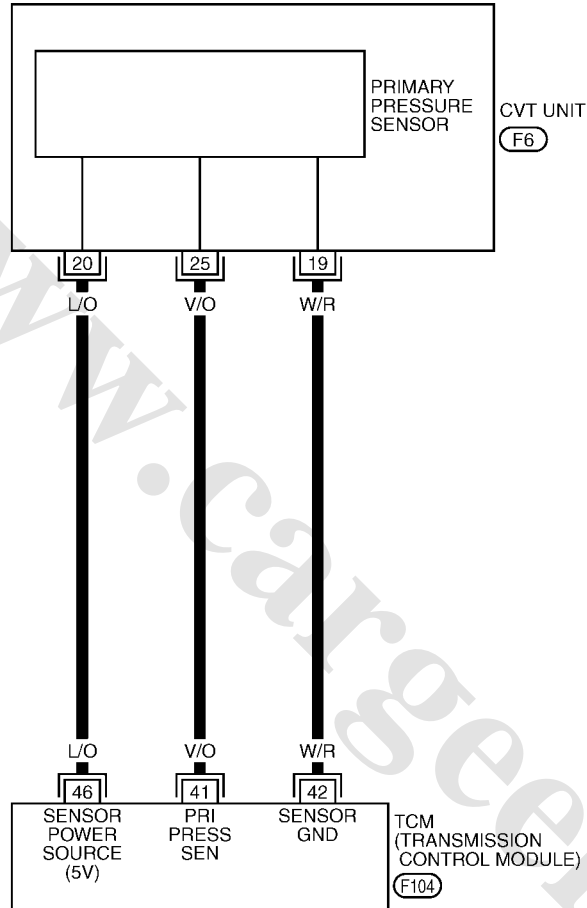

TCWA0255E





DTC P0845 TRANSMISSION FLUID PRESSURE SENSOR B CIRCUIT (PRIMARY PRESSURE SENSOR)

www.CarGeek.ir

TCM Input/Output Signal Reference Values

ACS00AL2

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
41	V/O	Transmission fluid pressure sensor B (Primary pressure sensor)	 and  "N" position idle	0.7 - 3.5 V
42	W/R	Sensor ground	Always	0 V
46	L/O	Sensor power	 —	4.5 - 5.5 V
			 —	0 V

www.CarGeek.ir

DTC P0868 SECONDARY PRESSURE DOWN

PPF:31941

Description

ACS00AHO

The pressure control solenoid valve B (secondary pressure solenoid valve) regulates the secondary pressure to suit the driving condition in response to a signal sent from the TCM.

CONSULT-II Reference Value

ACS00AHR

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
SEC PRESS	"N" position idle	0.5 - 0.9 MPa

On Board Diagnosis Logic

ACS00AHS

Diagnostic trouble code "P0868 SEC/PRESS DOWN" with CONSULT-II is detected when secondary fluid pressure is too low compared with the commanded value while driving.

Possible Cause

ACS00AHT

- Harness or connectors (Solenoid circuit is open or shorted.)
- Pressure control solenoid valve B (Secondary pressure solenoid valve) system
- Transmission fluid pressure sensor A (Secondary pressure sensor)
- Line pressure control system

DTC Confirmation Procedure

ACS00AHU

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

③ WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Start engine and maintain the following conditions for at least 10 consecutive seconds.
VEHICLE SPEED (accelerate slowly): 0 → 50 km/h (31 MPH)
ACC PEDAL OPEN: 0.5/8 - 1.0/8
RANGE: "D" position
4. If DTC is detected, check possible cause items.

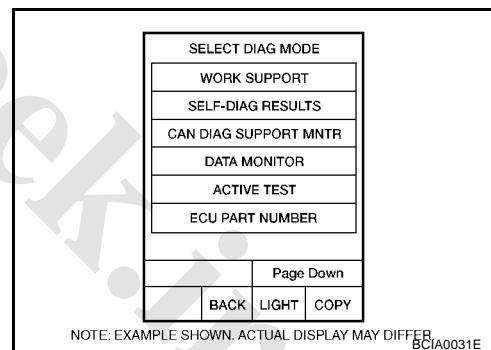

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

PFP:31036

Description

ACS00AHW

When the power supply to the TCM is cut OFF, for example because the battery is removed, and the self-diagnosis memory function stops, malfunction is detected.

NOTE:

Since "P1701 TCM-POWER SUPPLY" will be indicated when replacing TCM, perform diagnosis after erasing "SELF-DIAG RESULTS"

On Board Diagnosis Logic

ACS00AHX

- Diagnostic trouble code "P1701 TCM-POWER SUPPLY" with CONSULT-II is detected when TCM does not receive the voltage signal from the battery power supply.
- This is not a malfunction message. (Whenever shutting OFF a power supply to the TCM, this message appears on the screen.)

Possible Cause

ACS00AHY

Harness or connectors (Battery or ignition switch and TCM circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AHZ


NOTE:

If "DTC Confirmation Procedure" has been previously conducted, always turn ignition switch OFF and wait at least 10 seconds before conducting the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

- Turn ignition switch ON. (Do not start engine.)
- Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
- Wait for at least 2 consecutive seconds.
- If DTC is detected, check possible cause items.

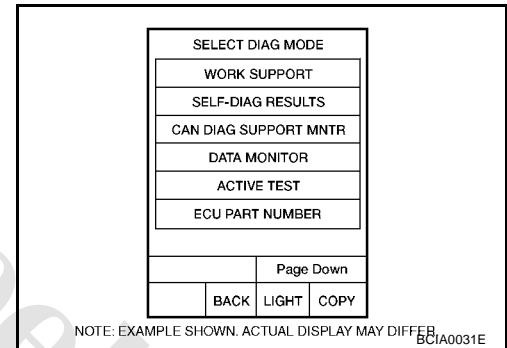

TCM Input/Output Signal Reference Values

ACS00AL3

TCM terminals data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)	
10	Y	Power supply		-	Battery voltage
				-	0 V
19	Y	Power supply		-	Battery voltage
				-	0 V
25	B	Ground	Always	0 V	
28	Y/R	Power supply (memory back-up)	Always	Battery voltage	
48	B	Ground	Always	0 V	




DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)

Wiring Diagram — CVT — POWER

ACS00A10




LHD models

CVT-POWER-01

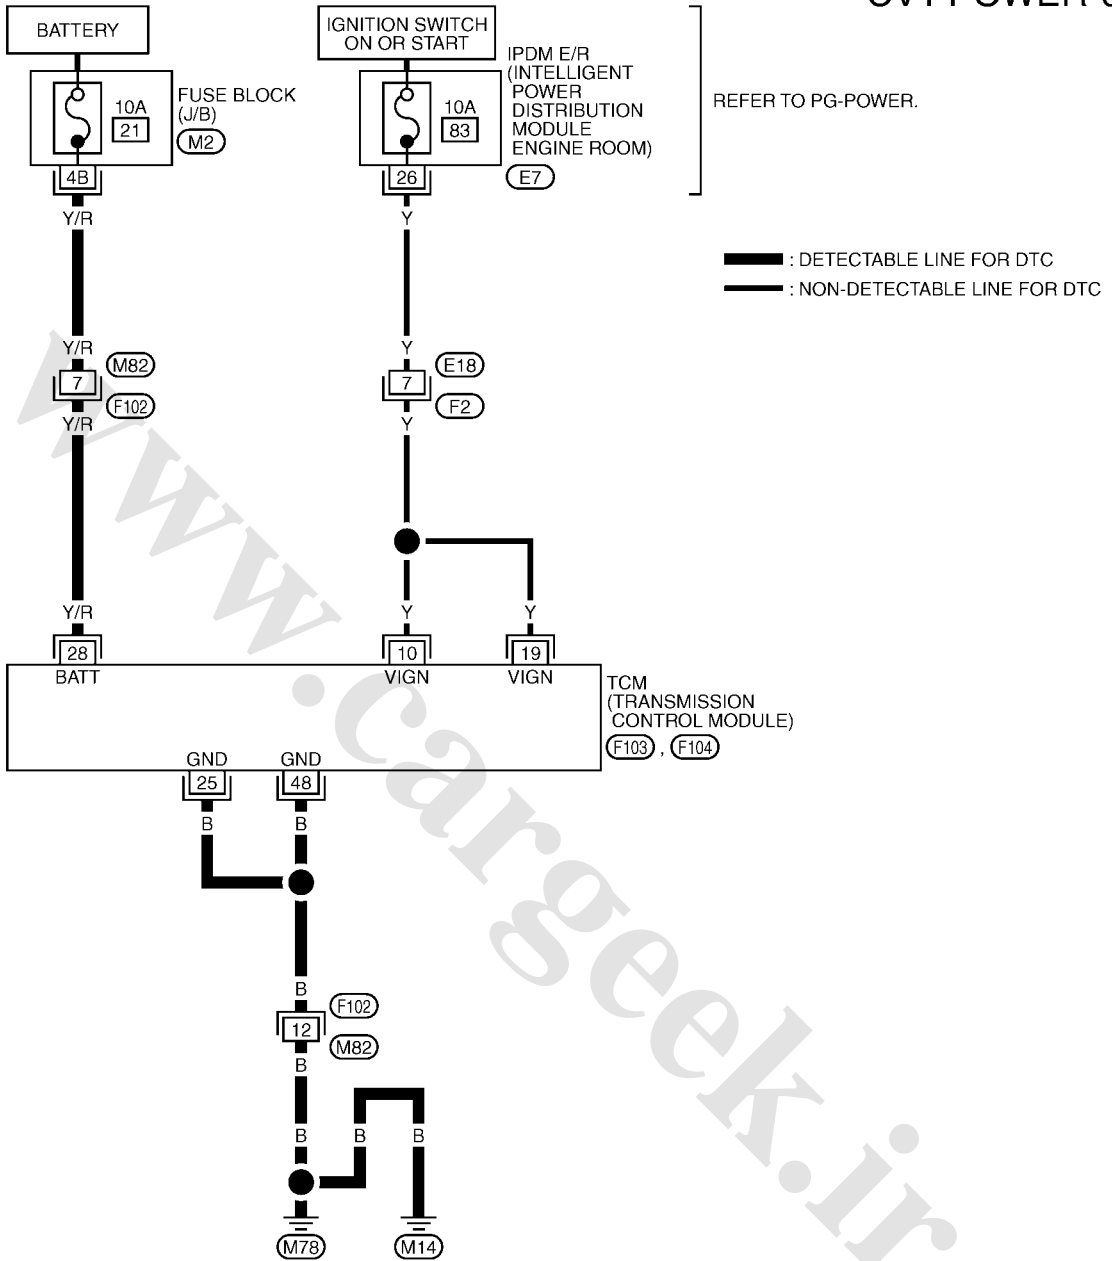

REFER TO THE FOLLOWING.

M2 - FUSE BLOCK-JUNCTION BOX (J/B)



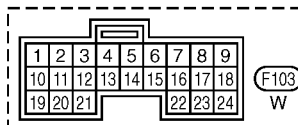



TCWB0143E

DTC P1701 TRANSMISSION CONTROL MODULE (POWER SUPPLY)



RHD models

CVT-POWER-01

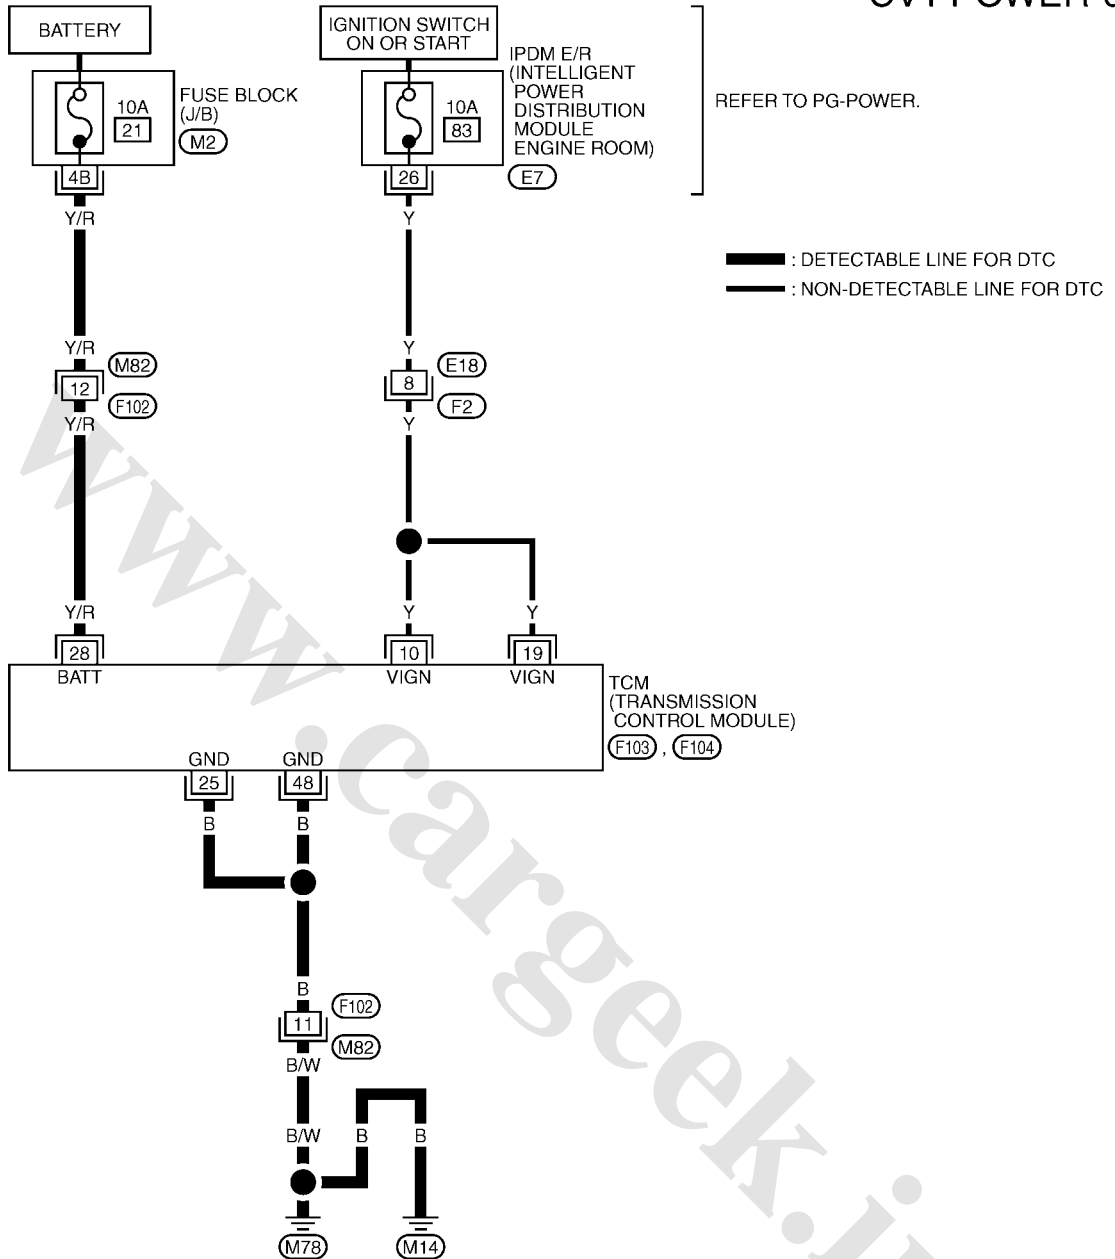

REFER TO THE FOLLOWING.

(M2) - FUSE BLOCK-JUNCTION BOX (J/B)

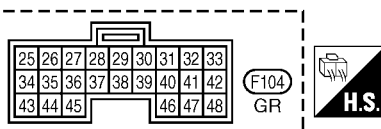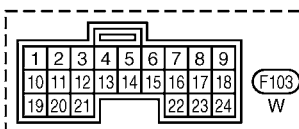

TCWB0391E

DTC P1705 THROTTLE POSITION SENSOR

DTC P1705 THROTTLE POSITION SENSOR

PF2:22620

Description

ACS00A/2

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends the signal to TCM with CAN communication.

CONSULT-II Reference Value

ACS00A/3

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
ACC PEDAL OPEN	Released accelerator pedal - Fully depressed accelerator pedal	0.0/8 - 8.0/8

On Board Diagnosis Logic

ACS00A/4

Diagnostic trouble code "P1705 TP SEN/CIRC A/T" with CONSULT-II is detected when TCM does not receive the proper accelerator pedal position signals (input by CAN communication) from ECM.

Possible Cause

ACS00A/5

- ECM
- Harness or connectors
(CAN communication line is open or shorted.)

DTC Confirmation Procedure

ACS00A/6


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Depress accelerator pedal fully and release it, then wait for 5 seconds.
4. If DTC is detected, check possible cause items.

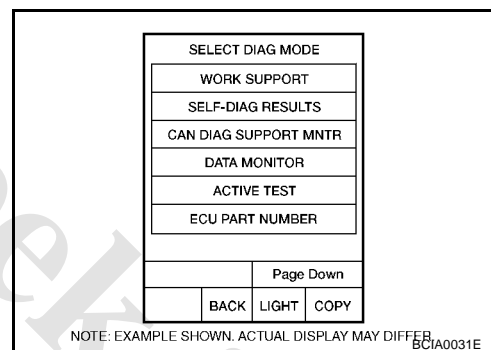

DTC P1722 ESTM VEHICLE SPEED SIGNAL

PFP:47660

Description

ACS00A/B

The vehicle speed signal is transmitted from ABS actuator and electric unit (control unit) to TCM by CAN communication line.

CONSULT-II Reference Value

ACS00A/9

Remarks: Specification data are reference values.

Item name	Condition	Display value
ESTM VSP SIG	During driving	Approximately matches the speedometer reading.
VEHICLE SPEED		

On Board Diagnosis Logic

ACS00A/A

Diagnostic trouble code "P1722 ESTM VEH SPD SIG" with CONSULT-II is detected when TCM does not receive the proper vehicle speed signal (input by CAN communication) from ABS actuator and electric unit (control unit).

Possible Cause

ACS00A/B

- Harness or connectors
(Sensor circuit is open or shorted.)
(CAN communication line is open or shorted.)
- ABS actuator and electric unit (control unit)

DTC Confirmation Procedure

ACS00A/C

CAUTION:

Always drive vehicle at a safe speed.

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.


WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.

ACC PEDAL OPEN: 1.0/8 or less

VEHICLE SPEED: 30 km/h (17 MPH) or more

4. If DTC is detected, check possible cause items.

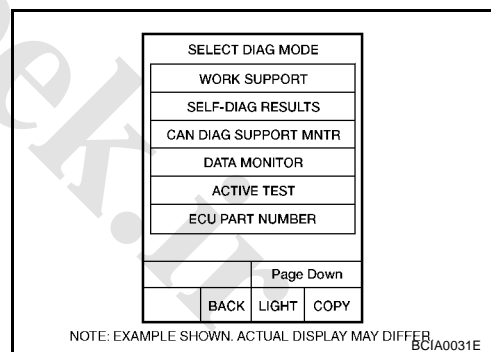

DTC P1723 CVT SPEED SENSOR FUNCTION

PFP:31907

Description

ACS00AIE

The vehicle speed sensor CVT [output speed sensor (secondary speed sensor)] detects the revolution of the idler gear parking pawl lock gear and generates a pulse signal. The pulse signal is sent to the TCM, which converts it into vehicle speed.

The input speed sensor (primary speed sensor) detects the primary pulley revolution speed and sends a signal to the TCM.

On Board Diagnosis Logic

ACS00AIF

Diagnostic trouble code "P1723 CVT SPD SEN/FNCTN" with CONSULT-II is detected when there is a great difference between the vehicle speed signal and the secondary speed sensor signal.

CAUTION:

One of the "P0720 VEH SPD SEN/CIR AT", the "P0715 INPUT SPD SEN/CIRC" or the "P0725 ENGINE SPEED SIG" is displayed with the DTC at the same time.

Possible Cause

ACS00AIG

- Harness or connectors (Sensor circuit is open or shorted.)
- Output speed sensor (Secondary speed sensor)
- Input speed sensor (Primary speed sensor)
- Engine speed signal system

DTC Confirmation Procedure

ACS00AIH

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
2. Start engine and maintain the following conditions for at least 5 consecutive seconds.
 - VEHICLE SPEED: 10 km/h (6 MPH) or more**
 - ACC PEDAL OPEN: More than 1.0/8**
 - RANGE: "D" position**
 - ENG SPEED: 450 rpm or more**
 - Driving location: Driving the vehicle uphill (increased engine load) will help maintain the driving conditions required for this test.**
3. If DTC is detected, check possible cause items.

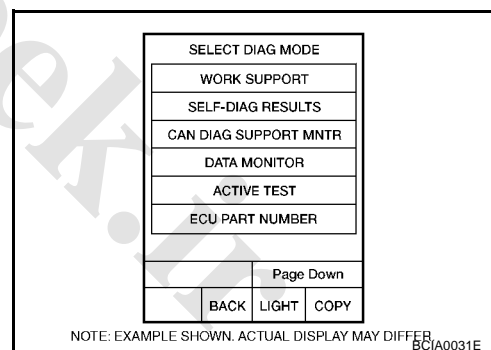

DTC P1726 ELECTRIC THROTTLE CONTROL SYSTEM

PFP:23710

Description

ACS00AJ

Electric throttle control actuator consists of throttle control motor, accelerator pedal position sensor, throttle position sensor etc. The actuator sends a signal to the ECM, and ECM sends the signal to TCM with CAN communication.

On Board Diagnosis Logic

ACS00AIK

Diagnostic trouble code "P1726 ELEC TH CONTROL" with CONSULT-II is detected when the electronically controlled throttle for ECM is malfunctioning.

Possible Cause

ACS00AIL

Harness or connectors
 (Sensor circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AIM


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and let it idle for 5 second.
4. If DTC is detected, check possible cause items.

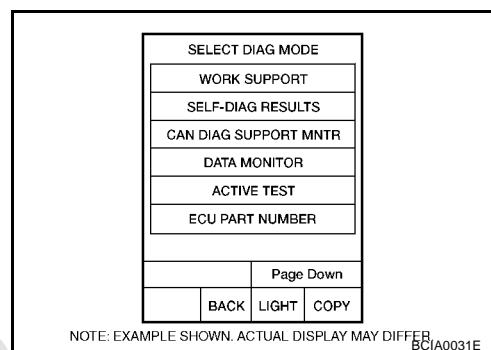

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

PFP:31941

Description

ACS00A10

- Lock-up select solenoid valve controls lock-up clutch pressure or forward clutch pressure (reverse brake pressure).
- When controlling lock-up clutch, the valve is turned OFF. When controlling forward clutch, it is turned ON.

CONSULT-II Reference Value

ACS00A1P

Item name	Condition	Display value
LUSEL SOL OUT	Selector lever in "P", "N" positions	ON
	Wait at least for 5 seconds with the selector lever in "R", "D" positions	OFF

On Board Diagnosis Logic

ACS00A1Q

Diagnostic trouble code "P1740 LU-SLCT SOL/CIRC" with CONSULT-II is detected under the following conditions.

- When TCM compares target value with monitor value and detects an irregularity.

Possible Cause

ACS00A1R

- Lock-up select solenoid valve
- Harness or connectors (Solenoid circuit is open or shorted.)

DTC Confirmation Procedure

ACS00A1S

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON. (Do not start engine.)
2. Select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.
3. Start engine and maintain the following conditions for at least 5 consecutive seconds.
RANGE: "D" position and "N" position (At each time, wait for 5 seconds.)
4. If DTC is detected, check possible cause items.

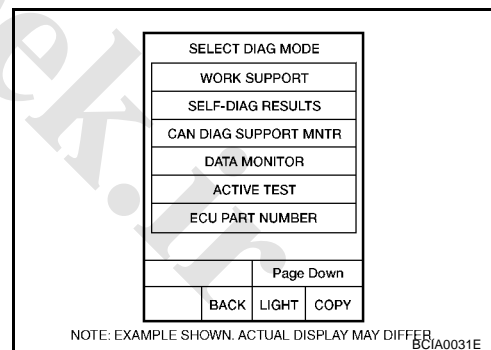


WITH GST

Follow the procedure "WITH CONSULT-II".

TCM Input/Output Signal Reference Values

ACS00A14

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition	Data (Approx.)
4	L/Y*1	Lock-up select solenoid valve	 Selector lever in "P", "N" positions	Battery voltage
	L*2		Wait at least for 5 seconds with the selector lever in "R", "D" positions	0 V

*1: LHD models

*2: RHD models

DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT



www.CarGeek.ir

Wiring Diagram — CVT — L/USSV

ACS00AIT

CVT-L/USSV-01

- : DETECTABLE LINE FOR DTC
- : NON-DETECTABLE LINE FOR DTC
- L** : LHD MODELS
- R** : RHD MODELS

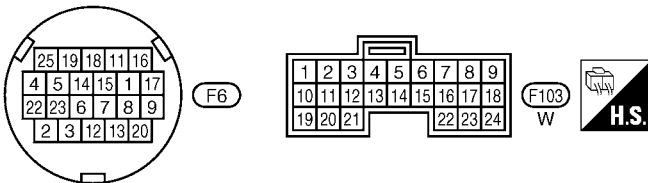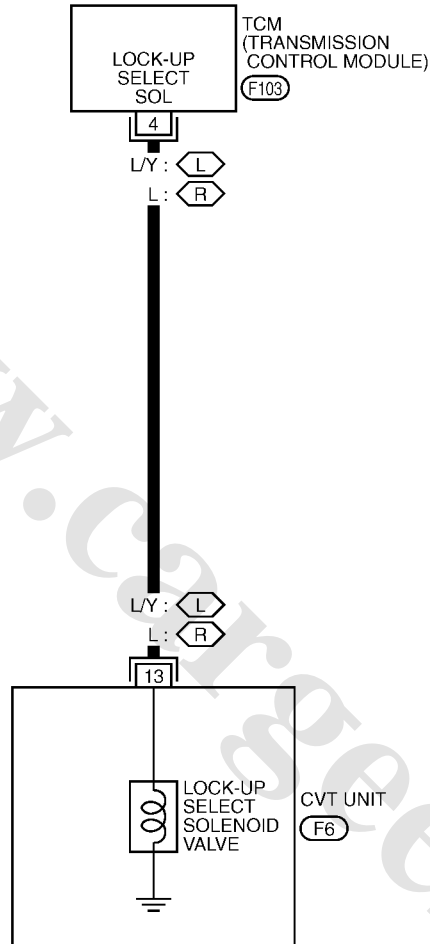

TCWB0145E


DTC P1740 LOCK-UP SELECT SOLENOID VALVE CIRCUIT

Component Inspection LOCK-UP SELECT SOLENOID VALVE

1. Turn ignition switch OFF.
2. Disconnect CVT unit harness connector.
3. Check resistance between CVT unit harness connector terminal and ground.

Solenoid valve	Connector	Terminal	Resistance (Approx.)
Lock-up select solenoid valve	F6	13 - Ground	6.0 - 19.0 Ω

4. If NG, replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .

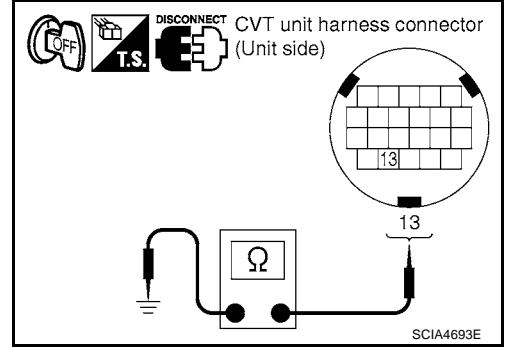

A
B
CVT
D
E
F
G
H
I
J
K
L
M

www.carseek.ir

DTC P1745 LINE PRESSURE CONTROL

PFP:31036

Description

ACS00A1W

The pressure control solenoid valve A (line pressure solenoid valve) regulates the oil pump discharge pressure to suit the driving condition in response to a signal sent from the TCM.

On Board Diagnosis Logic

ACS00A1X

Diagnostic trouble code "P1745 L/PRESS CONTROL" with CONSULT-II is detected when TCM detects the unexpected line pressure.

Possible Cause

ACS00A1Y

TCM

DTC Confirmation Procedure

ACS00A1Z

NOTE:

If "DTC Confirmation Procedure" has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch "ERASE" on "SELF-DIAG RESULTS" and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II


1. Turn ignition switch ON and select "DATA MONITOR" mode for "TRANSMISSION" with CONSULT-II.

2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.

ATF TEMP SEN: 1.0 - 2.0 V

If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)

3. If DTC is detected, check possible cause items.

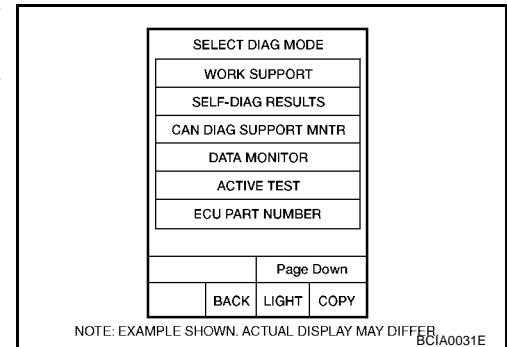

DTC P1777 STEP MOTOR - CIRCUIT

PPF:31020

Description

ACS00AJ1

The step motor changes the step with turning 4 coils ON/OFF according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.

CONSULT-II Reference Value

ACS00AJ2

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
STM STEP	During driving	-20 step – 190 step
SMCOIL A		Changes ON↔OFF.
SMCOIL B		
SMCOIL C		
SMCOIL D		

On Board Diagnosis Logic

ACS00AJ3

Diagnostic trouble code “P1777 STEP MOTR CIRC” with CONSULT-II is detected under the following conditions.

- When operating step motor ON and OFF, there is no proper change in the voltage of TCM terminal which corresponds to it.

Possible Cause

ACS00AJ4

- Step motor
- Harness or connectors
(Step motor circuit is open or shorted.)

DTC Confirmation Procedure

ACS00AJ5

CAUTION:

Always drive vehicle at a safe speed.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

- Turn ignition switch ON and select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
- Drive vehicle for at least 5 consecutive seconds.
- If DTC is detected, check possible cause items.

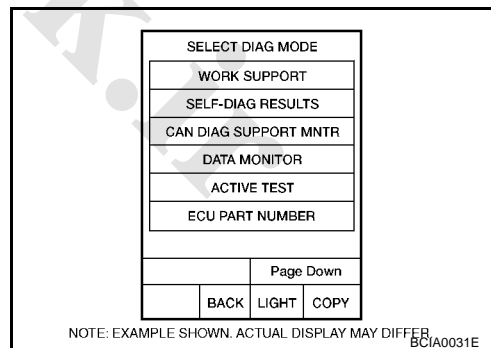

WITH GST




Follow the procedure “WITH CONSULT-II”.

Wiring Diagram — CVT — STM

ACS00AJ6

CVT-STM-01

: DETECTABLE LINE FOR DTC
 : NON-DETECTABLE LINE FOR DTC

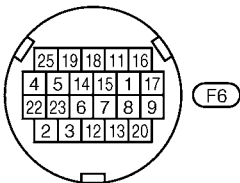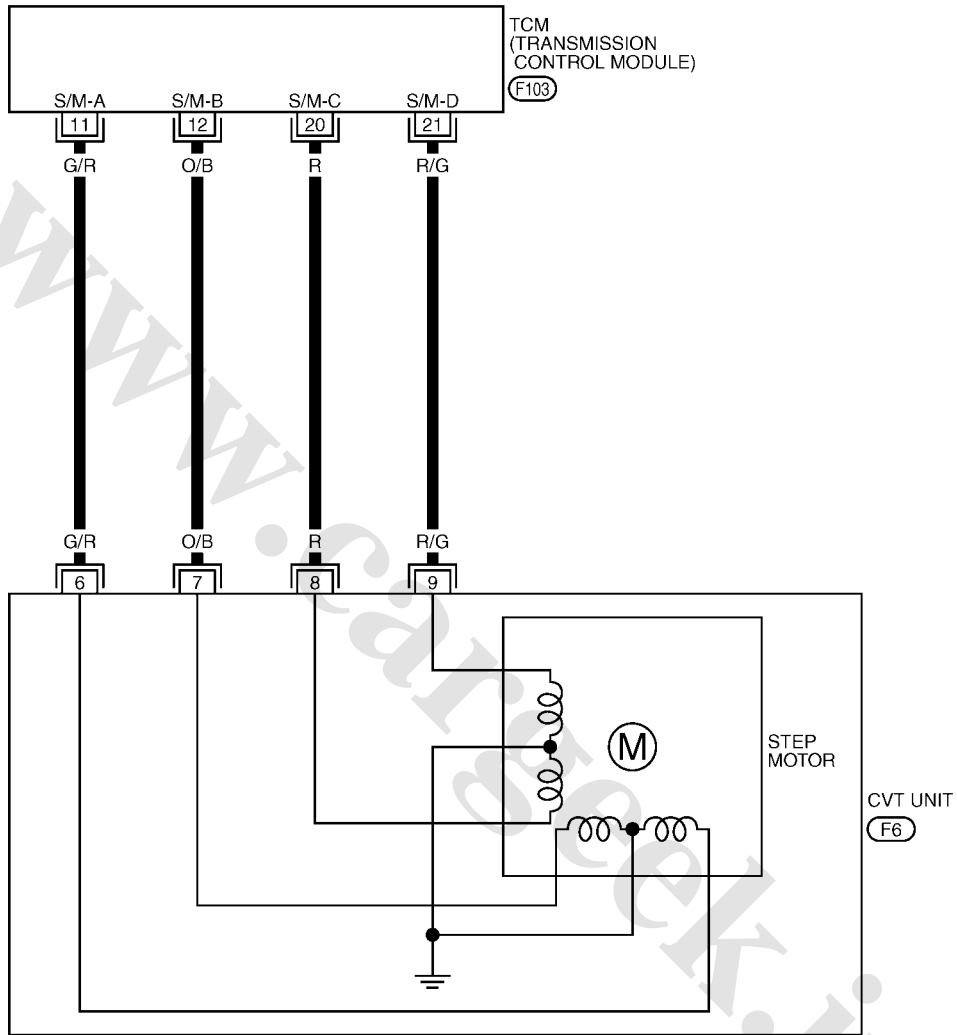

F103
W



TCWA0256E

TCM Input/Output Signal Reference Values

ACS00AL5

TCM terminals data are reference values.


Terminal	Wire color	Item	Condition	Data (Approx.)
11	G/R	Step motor A	Within 2 seconds after ignition switch ON, the time measurement by using the pulse width measurement function (Hi level) of CONSULT-II.*1 CAUTION: Connect the diagnosis data link cable to the vehicle diagnosis connector. *1: A circuit tester cannot be used to test this item.	30.0 msec
12	O/B	Step motor B		10.0 msec
20	R	Step motor C		30.0 msec
21	R/G	Step motor D		10.0 msec

Component Inspection STEP MOTOR

ACS00AJ8

- Turn ignition switch OFF.
- Disconnect CVT unit harness connector.
- Check resistance between CVT unit harness connector terminals and ground.

Name	Connector	Terminal	Resistance (Approx.)
Step motor	F6	6 - 7	30 Ω
		8 - 9	
		6 - Ground	15 Ω
		7 - Ground	
		8 - Ground	
		9 - Ground	

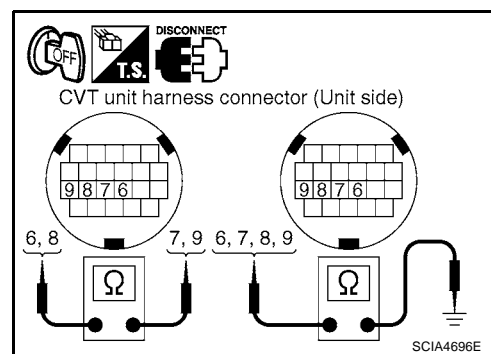

- If NG, replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#).

DTC P1778 STEP MOTOR - FUNCTION

PFP:31947

Description

ACS00AJ9

- The step motor's 4 aspects of ON/OFF change according to the signal from TCM. As a result, the flow of line pressure to primary pulley is changed and pulley ratio is controlled.
- This diagnosis item is detected when electrical system is OK, but mechanical system is NG.
- This diagnosis item is detected when the state of the changing the speed mechanism in unit does not operate normally.

CONSULT-II Reference Value

ACS00AJA

Remarks: Specification data are reference values.

Item name	Condition	Display value (Approx.)
STM STEP	During driving	-20 step – 190 step
GEAR RATIO		2.37 - 0.43

On Board Diagnosis Logic

ACS00AJB

Diagnostic trouble code “P1778 STEP MOTR/FNC” with CONSULT-II is detected under the following conditions.

- When not changing the pulley ratio according to the instruction of TCM.

Possible Cause

ACS00AJC

Step motor

DTC Confirmation Procedure

ACS00AJD

CAUTION:

- Always drive vehicle at a safe speed.
- Before starting “DTC Confirmation Procedure”, confirm “Hi” or “Mid” or “Low” fixation by “PRI SPEED” and “VEHICLE SPEED” on “DATA MONITOR MODE”.
- If hi-gear fixation occurred, check possible cause items.


NOTE:

If “DTC Confirmation Procedure” has been previously performed, always turn ignition switch OFF and wait at least 10 seconds before performing the next test.

After the repair, touch “ERASE” on “SELF-DIAG RESULTS” and then perform the following procedure to confirm the malfunction is eliminated.

WITH CONSULT-II

1. Turn ignition switch ON and select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
2. Make sure that output voltage of CVT fluid temperature sensor is within the range below.
ATF TEMP SEN: 1.0 - 2.0 V
If out of range, drive the vehicle to decrease the voltage (warm up the fluid) or stop engine to increase the voltage (cool down the fluid)
3. Select “DATA MONITOR” mode for “TRANSMISSION” with CONSULT-II.
4. Start engine and maintain the following conditions for at least 30 consecutive seconds.
TEST START FROM 0 km/h (0 MPH). CONSTANT ACCELERATION: Keep 30 sec or more.
VEHICLE SPEED: 10 km/h (6 MPH) or more. ACC PEDAL OPEN: More than 1.0/8.
RANGE: “D” position. ENG SPEED: 450 rpm or more.
5. If DTC is detected, check possible cause items.

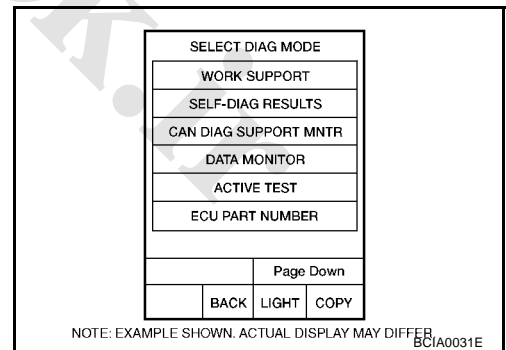

WITH GST

Follow the procedure “WITH CONSULT-II”.

CVT INDICATOR CIRCUIT

PFP:24810

Description

ACS00AJF

TCM sends the switch signals to unified meter and A/C amp via CAN communication line. Then manual mode switch position is indicated on the CVT indicator.

CONSULT-II Reference Value

ACS00AJG

Item name	Condition	Display value
M GEAR POS	During driving	1, 2, 3, 4, 5, 6

A
B
CVT
D
E
F
G
H
I
J
K
L
M





TROUBLE DIAGNOSIS FOR SYMPTOMS

Wiring Diagram — CVT — NONDTC

ACS00AJI



LHD models

CVT-NONDTC-01

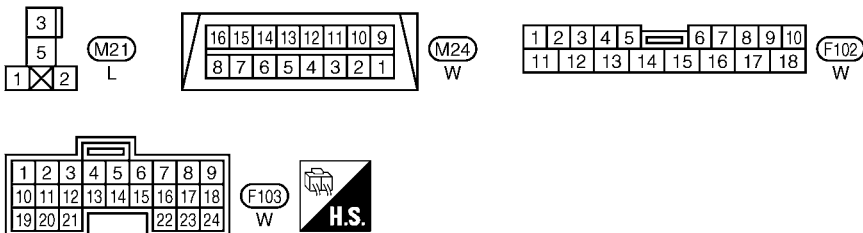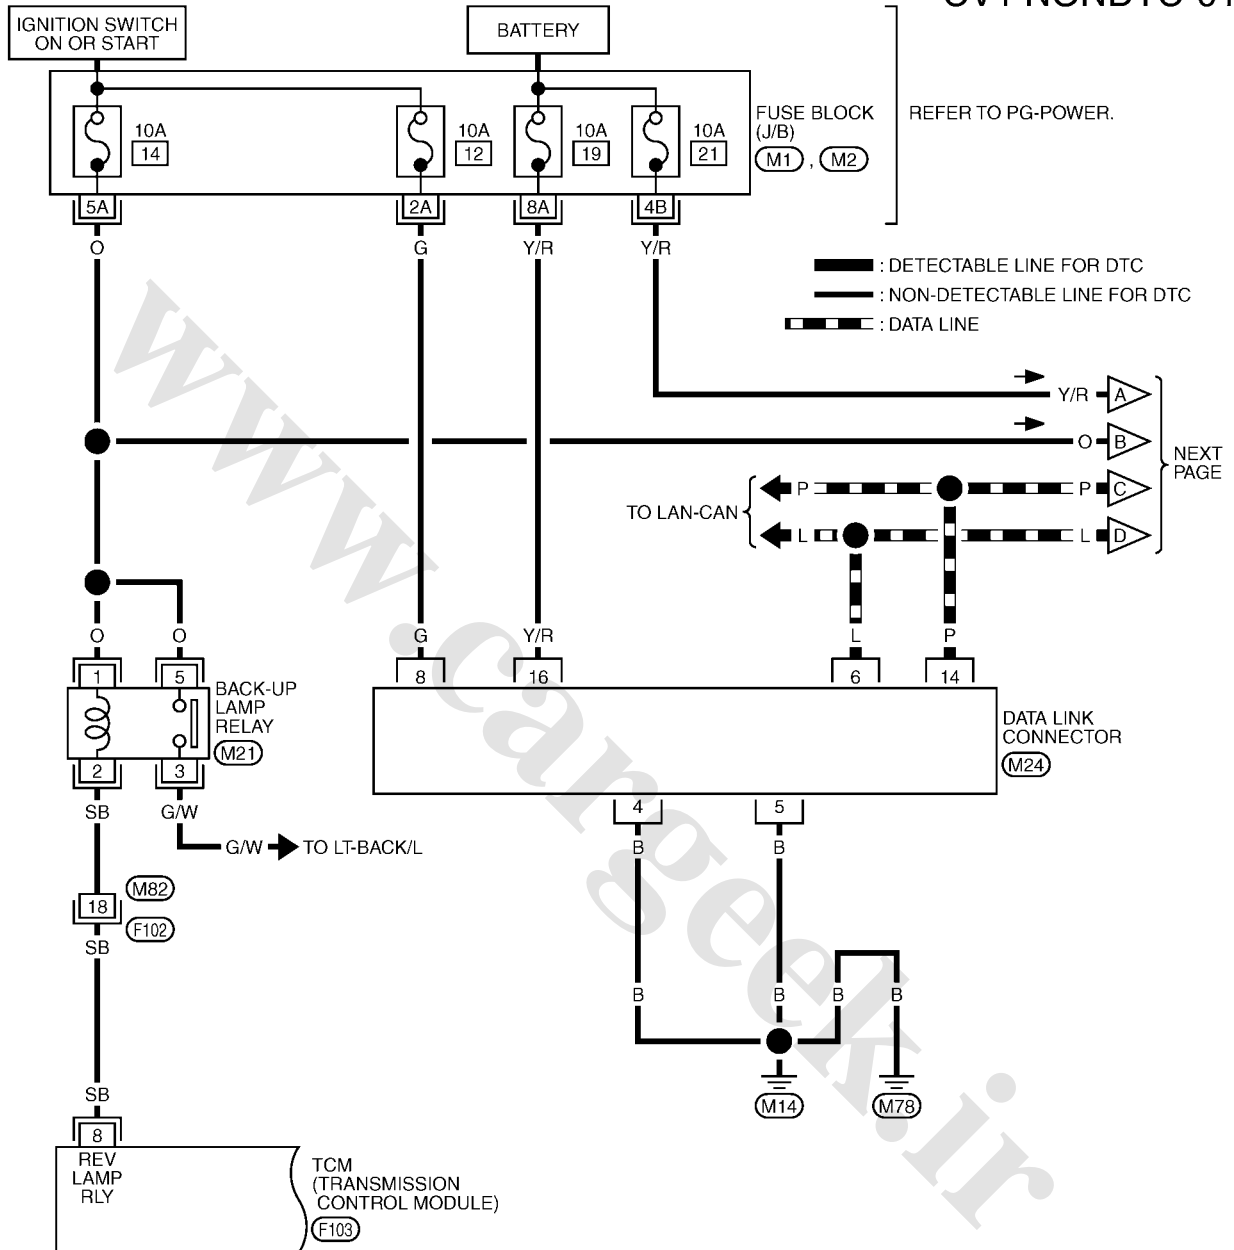


REFER TO THE FOLLOWING.
 (M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

— : DETECTABLE LINE FOR DTC
 — : NON-DETECTABLE LINE FOR DTC

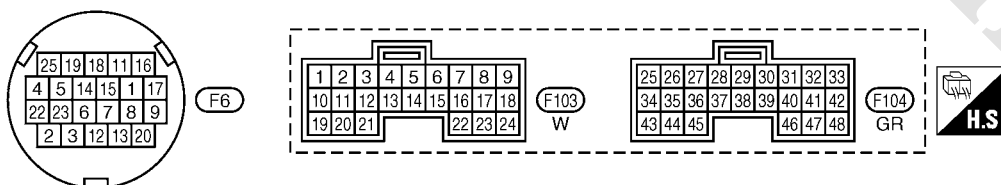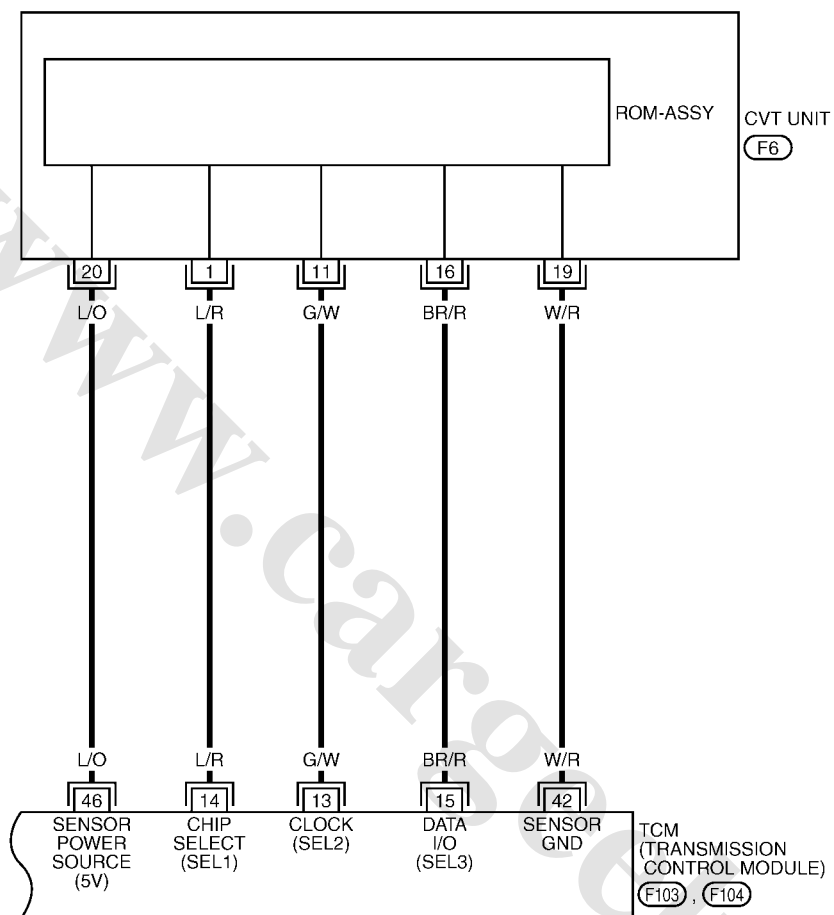


RHD models

CVT-NONDTC-01


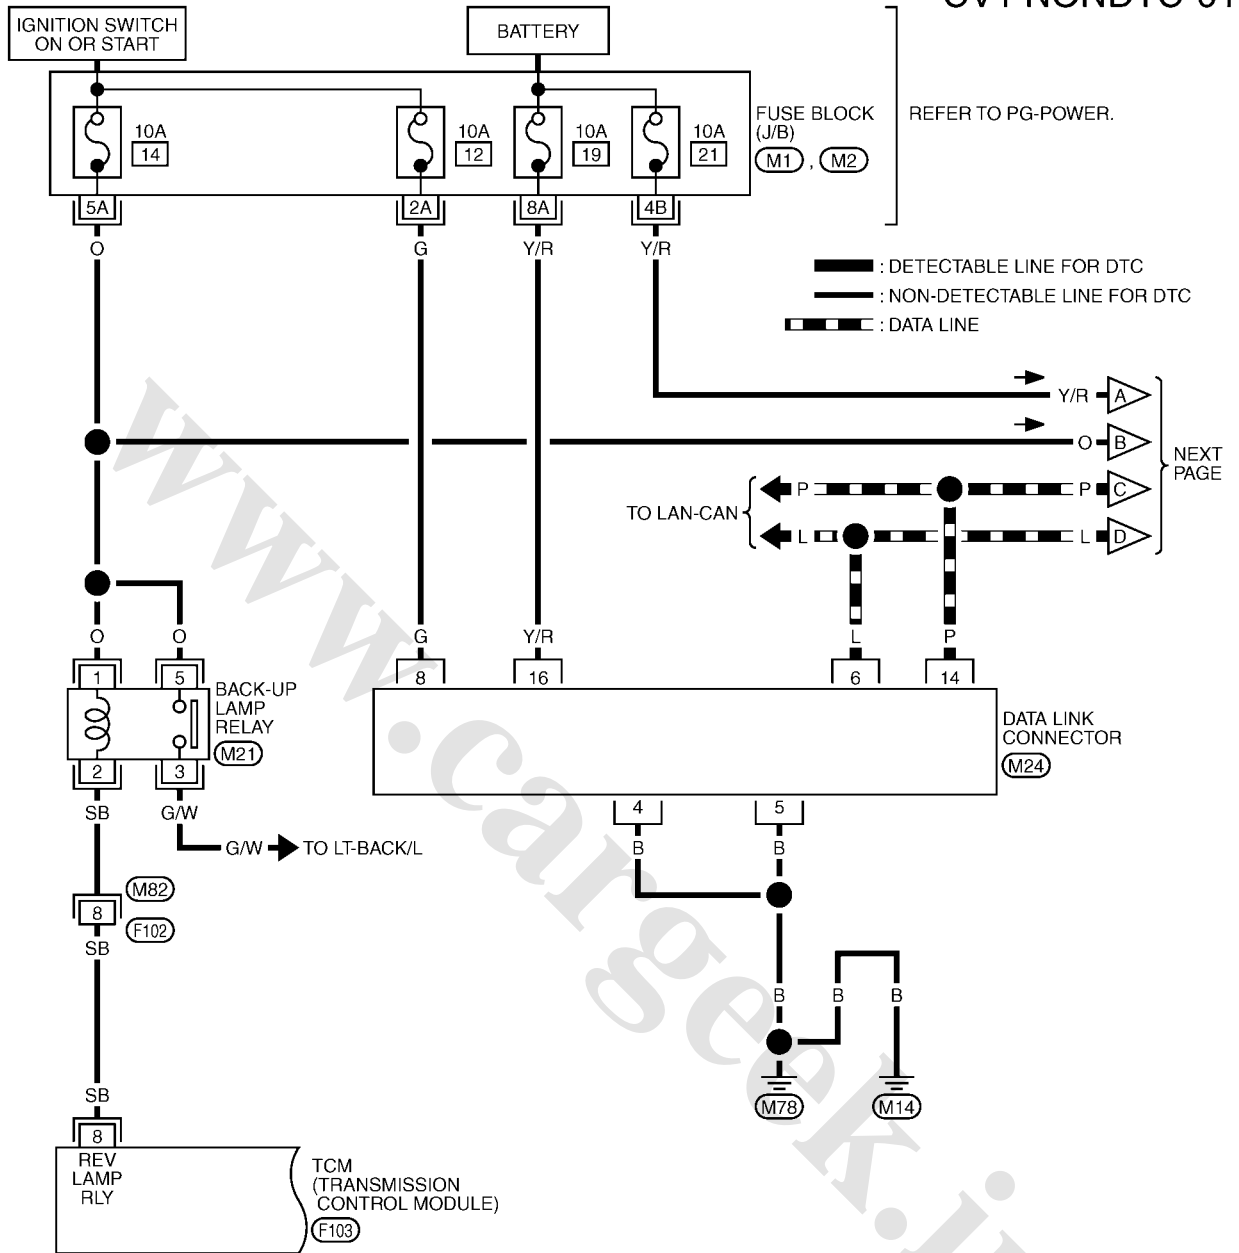


A
B
CVT
D
E
F
G
H
I
J
K
L
M

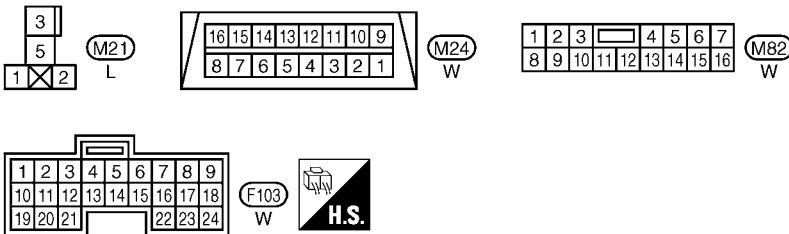

REFER TO THE FOLLOWING.
(M1), (M2) - FUSE BLOCK-JUNCTION BOX (J/B)

CVT-NONDTC-02


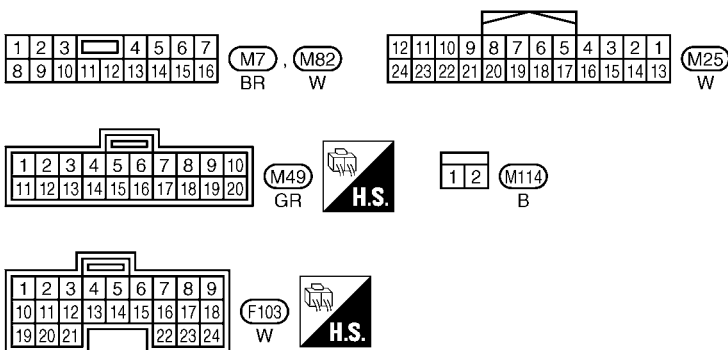
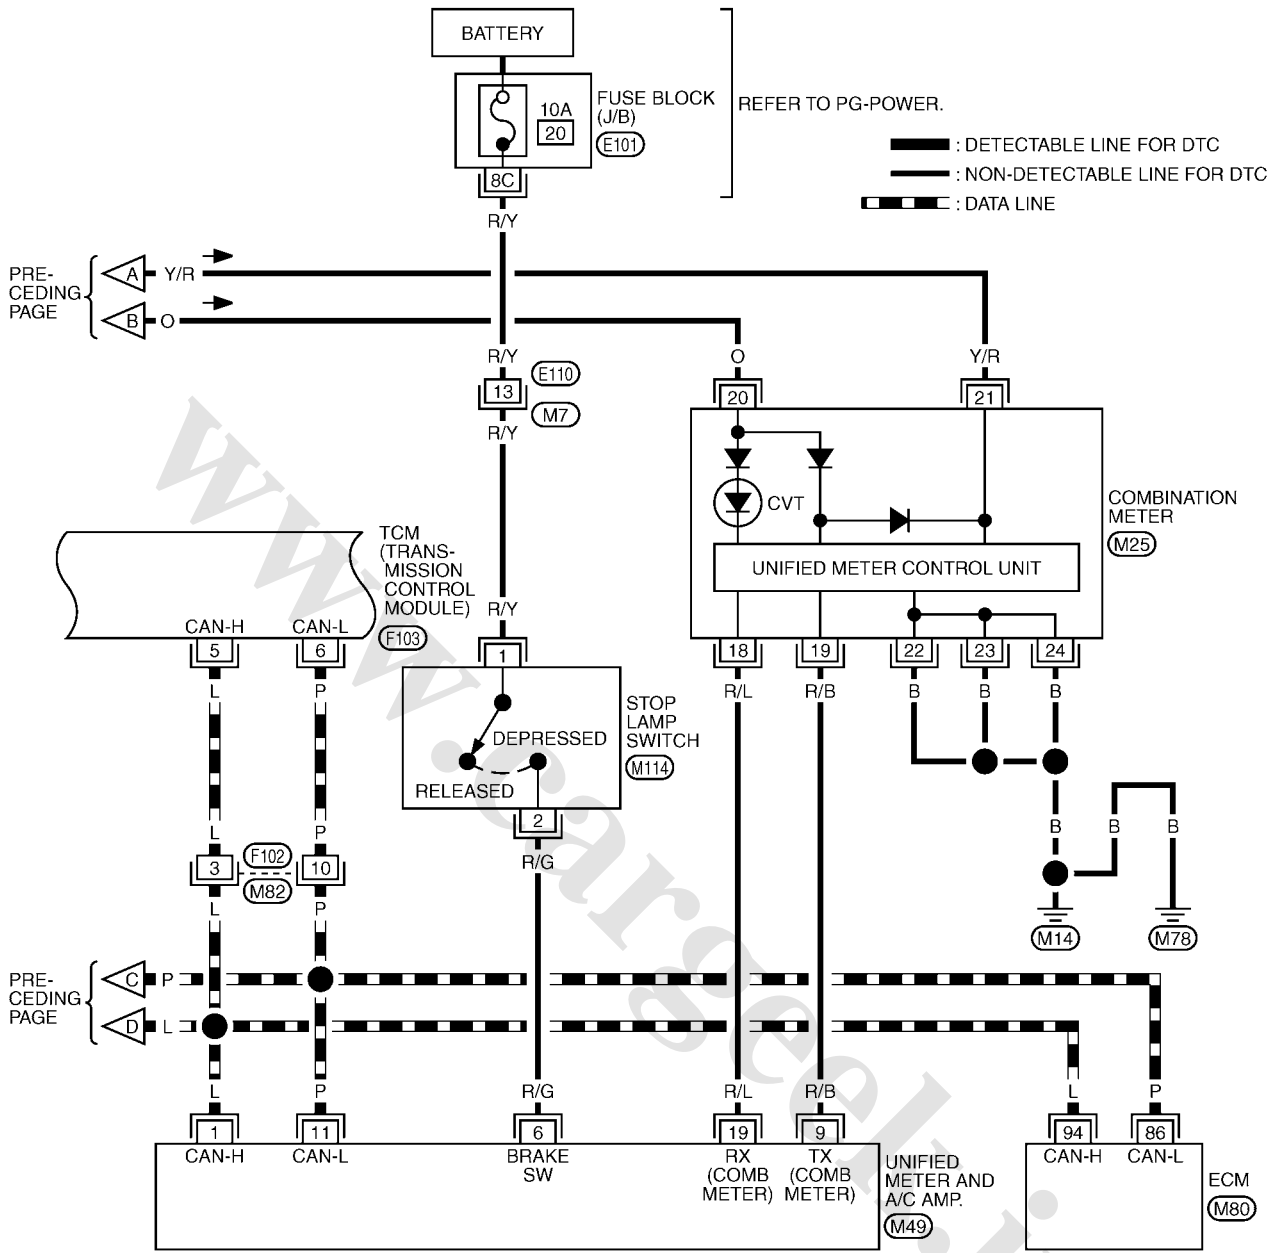


REFER TO THE FOLLOWING.
 (E101) - FUSE BLOCK-JUNCTION BOX (J/B)
 (M80) - ELECTRICAL UNITS

TCWB0392E




A
B
CVT
D
E
F
G
H
I
J
K
L
M

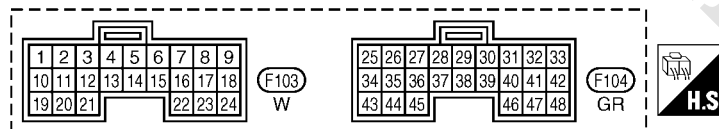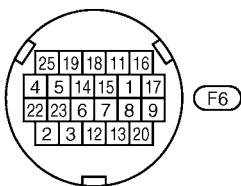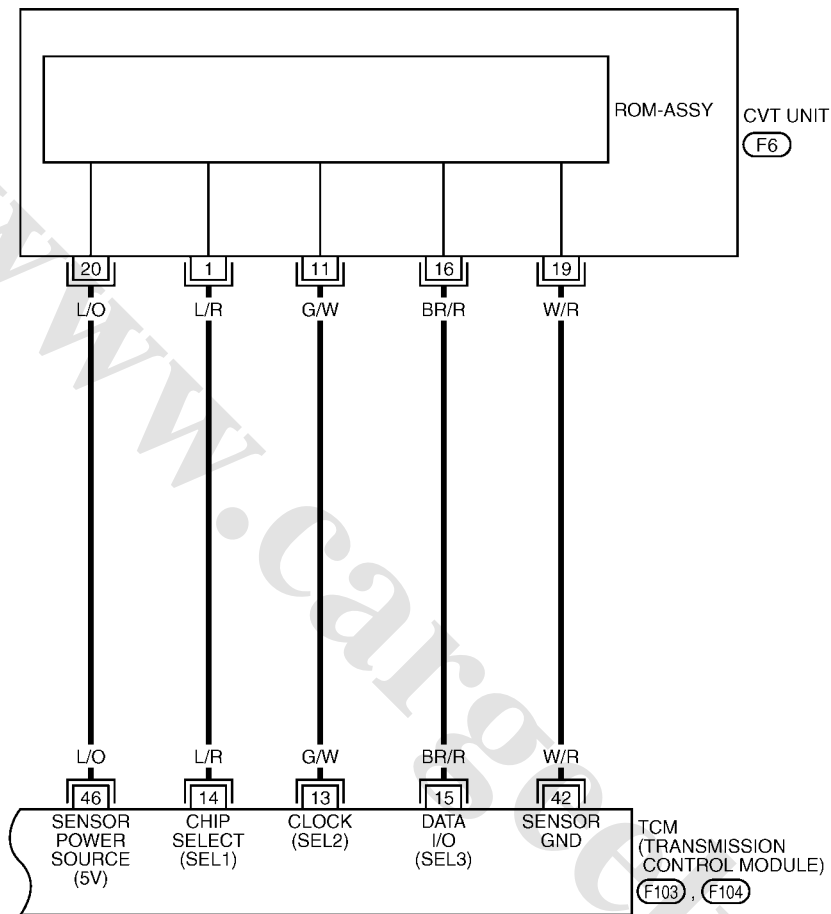— : DETECTABLE LINE FOR DTC
— : NON-DETECTABLE LINE FOR DTC



TROUBLE DIAGNOSIS FOR SYMPTOMS

TCM terminal data are reference values, measured between each terminal and ground.

Terminal	Wire color	Item	Condition		Data (Approx.)
5	L	CAN-H	—		—
6	P	CAN-L	—		—
8	SB	Back-up lamp relay		Selector lever in "R" position.	0 V
				Selector lever in other positions.	Battery voltage
13	G/W	ROM assembly	—		—
14	L/R	ROM assembly	—		—
15	BR/R	ROM assembly	—		—
42	W/R	Sensor ground	Always		0 V
46	L/O	Sensor power		—	4.5 - 5.5 V
				—	0 V

CVT Indicator Lamp Does Not Come On

SYMPTOM:

CVT indicator lamp does not come on for about 2 seconds when turning ignition switch to ON.

DIAGNOSTIC PROCEDURE

1. CHECK CAN COMMUNICATION LINE

Perform the self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#).

Is any malfunction of the "U1000 CAN COMM CIRCUIT" indicated in the results?

- YES >> Check CAN communication line. Refer to [CVT-59, "DTC U1000 CAN COMMUNICATION LINE"](#).
- NO >> GO TO 2.


2. CHECK TCM POWER SOURCE

1. Turn ignition switch ON.
2. Check voltage between TCM connector terminals and ground. Refer to [CVT-103, "Wiring Diagram — CVT — POWER"](#).

Name	Connector	Terminal	Voltage (Approx.)
Power supply	F103	10	Battery voltage
		19	

OK or NG

- OK >> GO TO 4.
- NG >> GO TO 3.

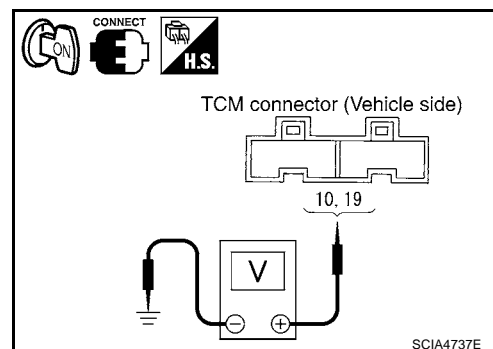

3. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness for short or open between ignition switch and TCM connector terminal 10, 19. Refer to [CVT-103, "Wiring Diagram — CVT — POWER"](#).
- 10 A fuse (No.83, located in the IPDM E/R). Refer to [CVT-103, "Wiring Diagram — CVT — POWER"](#).
- Ignition switch. Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#).

OK or NG

- OK >> GO TO 4.
- NG >> Repair or replace damaged parts.


4. CHECK TCM GROUND CIRCUIT

1. Turn ignition switch OFF.
2. Disconnect TCM connector.
3. Check continuity between TCM connector terminal and ground. Refer to [CVT-103, "Wiring Diagram — CVT — POWER"](#).

Name	Connector	Terminal	Continuity
Ground	F104	25	Yes
		48	

OK or NG

- OK >> GO TO 5.
- NG >> Repair open circuit or short to ground or short to power in harness or connectors.

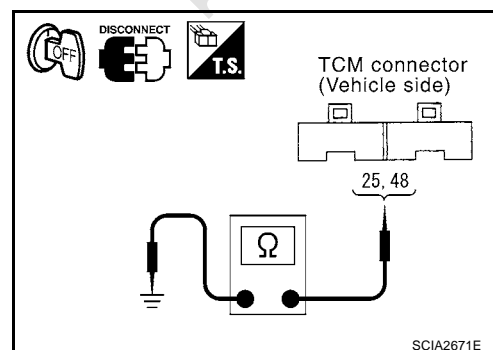

5. DETECT MALFUNCTIONING ITEM

Check the following.

- Harness and fuse for short or open between ignition switch and CVT indicator lamp
Refer to [PG-4, "POWER SUPPLY ROUTING CIRCUIT"](#) .

OK or NG

- OK >> GO TO 6.
NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again. Refer to [CVT-39, "Check Before Engine Is Started"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> GO TO 7.

7. CHECK COMBINATION METERS

Check combination meters.

- Refer to [DI-5, "COMBINATION METERS"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

Engine Cannot Be Started in "P" or "N" Position SYMPTOM:

ACS00AJK

- Engine cannot be started with selector lever in "P" or "N" position.
- Engine can be started with selector lever in "D", "M" or "R" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch circuit or start signal circuit?

- YES >> Check PNP switch circuit or start signal circuit. Refer to [CVT-64, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) or [CVT-61, "DTC P0615 START SIGNAL CIRCUIT"](#) .
NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK STARTING SYSTEM

Check starting system. Refer to [SC-4, "STARTING SYSTEM"](#) .

OK or NG

- OK >> **INSPECTION END**
NG >> Repair or replace damaged parts.

In "P" Position, Vehicle Moves Forward or Backward When Pushed

SYMPTOM:

Vehicle moves when it is pushed forward or backward with selector lever in "P" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch circuit?

- YES >> Check PNP switch circuit. Refer to [CVT-64, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK SYMPTOM

Check again. Refer to [CVT-39, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .

In "N" Position, Vehicle Moves

SYMPTOM:

Vehicle moves forward or backward when selecting "N" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Do the self-diagnostic results indicate PNP switch circuit?

- YES >> Check PNP switch circuit. Refer to [CVT-64, "DTC P0705 PARK/NEUTRAL POSITION SWITCH"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK SYMPTOM

Check again. Refer to [CVT-39, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 5.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

5. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .
 NG >> Repair or replace damaged parts.

Large Shock "N" → "R" Position

SYMPTOM:

There is large shock when shifting from "N" to "R" position.

ACS00A/JN

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
 NO >> GO TO 2.

2. CHECK ENGINE IDLE SPEED

Check engine idle speed. Refer to [EC-43, "Basic Inspection"](#) (TYPE 1*), [EC-293, "Basic Inspection"](#) (TYPE 2*).

*: Refer to [EC-9, "APPLICATION NOTICE"](#) .

OK or NG

- OK >> GO TO 3.
 NG >> Repair.

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
 NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-35, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
 NG >> Check the malfunctioning item. Refer to [CVT-36, "Judgement of Line Pressure Test"](#) .

5. CHECK SYMPTOM

Check again. Refer to [CVT-39, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
 NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .
 NG >> Repair or replace damaged parts.

Vehicle Does Not Creep Backward in "R" Position

SYMPTOM:

Vehicle does not creep backward when selecting "R" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-35, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-36, "Judgement of Line Pressure Test"](#) .

5. CHECK SYMPTOM

Check again. Refer to [CVT-39, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

Vehicle Does Not Creep Forward in "D" Position

SYMPTOM:

Vehicle does not creep forward when selecting "D" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-35, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-36, "Judgement of Line Pressure Test"](#) .

5. CHECK SYMPTOM

Check again. Refer to [CVT-39, "Check at Idle"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

CVT Does Not Shift

SYMPTOM:

CVT does not shift at the specified speed on "Cruise Test".

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-35, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-36, "Judgement of Line Pressure Test"](#) .

5. CHECK SYMPTOM

Check again. Refer to [CVT-41, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 6.

6. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.

Cannot Be Changed to Manual Mode

SYMPTOM:

Does not change to manual mode when manual shift gate is used.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK MANUAL MODE SWITCH

Check manual mode switch circuit. Refer to [CVT-90, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK SYMPTOM

Check again. Refer to [CVT-41, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 4.

4. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> **INSPECTION END**
- NG >> Repair or replace damaged parts.

CVT Does Not Shift in Manual Mode

SYMPTOM:

Speed does not change even if the selector lever is put in the manual shift gate position and the selector lever is operated to + side or to - side.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK MANUAL MODE SWITCH

Check manual mode switch circuit. Refer to [CVT-90, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"](#) .

OK or NG

- OK >> GO TO 3.
- NG >> Repair or replace damaged parts.

3. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

OK >> GO TO 4.

NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#).

4. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#).

OK or NG

OK >> GO TO 5.

NG >> Refill CVT fluid.

5. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-35, "LINE PRESSURE TEST"](#).

OK or NG

OK >> GO TO 6.

NG >> Check the malfunctioning item. Refer to [CVT-36, "Judgement of Line Pressure Test"](#).

6. CHECK SYMPTOM

Check again. Refer to [CVT-41, "Cruise Test"](#).

OK or NG

OK >> **INSPECTION END**

NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#).

2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#).

NG >> Repair or replace damaged parts.

A
B
CVT
D
E
F
G
H
I
J
K
L
M

Vehicle Does Not Decelerate by Engine Brake

SYMPTOM:

No engine brake is applied when the gear is shifted from the "M2" to "M1" position.

DIAGNOSTIC PROCEDURE

1. CHECK SELF-DIAGNOSTIC RESULTS

Perform self-diagnosis check. Refer to [CVT-50, "SELF-DIAGNOSTIC RESULT MODE"](#) .

Is any malfunction detected by self-diagnosis?

- YES >> Check the malfunctioning system. Refer to [CVT-50, "Display Items List"](#) .
- NO >> GO TO 2.

2. CHECK CONTROL CABLE

Check control cable. Refer to [CVT-137, "Checking of CVT Position"](#)

OK or NG

- OK >> GO TO 3.
- NG >> Adjust control cable. Refer to [CVT-137, "Adjustment of CVT Position"](#) .

3. CHECK CVT FLUID LEVEL

Check CVT fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#) .

OK or NG

- OK >> GO TO 4.
- NG >> Refill CVT fluid.

4. CHECK LINE PRESSURE

Check line pressure at idle. Refer to [CVT-35, "LINE PRESSURE TEST"](#) .

OK or NG

- OK >> GO TO 5.
- NG >> Check the malfunctioning item. Refer to [CVT-36, "Judgement of Line Pressure Test"](#) .

5. CHECK MANUAL MODE SWITCH

Check manual mode switch circuit. Refer to [CVT-90, "DTC P0826 MANUAL MODE SWITCH CIRCUIT"](#) .

OK or NG

- OK >> GO TO 6.
- NG >> Repair or replace damaged parts.

6. CHECK SYMPTOM

Check again. Refer to [CVT-41, "Cruise Test"](#) .

OK or NG

- OK >> **INSPECTION END**
- NG >> GO TO 7.

7. CHECK TCM

1. Check TCM input/output signals. Refer to [CVT-43, "TCM Input/Output Signal Reference Values"](#) .
2. If NG, re-check TCM pin terminals for damage or loose connection with harness connector.

OK or NG

- OK >> Replace the transaxle assembly. Refer to [CVT-153, "Removal and Installation"](#) .
- NG >> Repair or replace damaged parts.


SHIFT CONTROL SYSTEM

PFP:34901

**Removal and Installation
CONTROL DEVICE COMPONENTS**

ACS00AJU


A
B
CVT
D
E
F
G
H
I
J
K
L
M

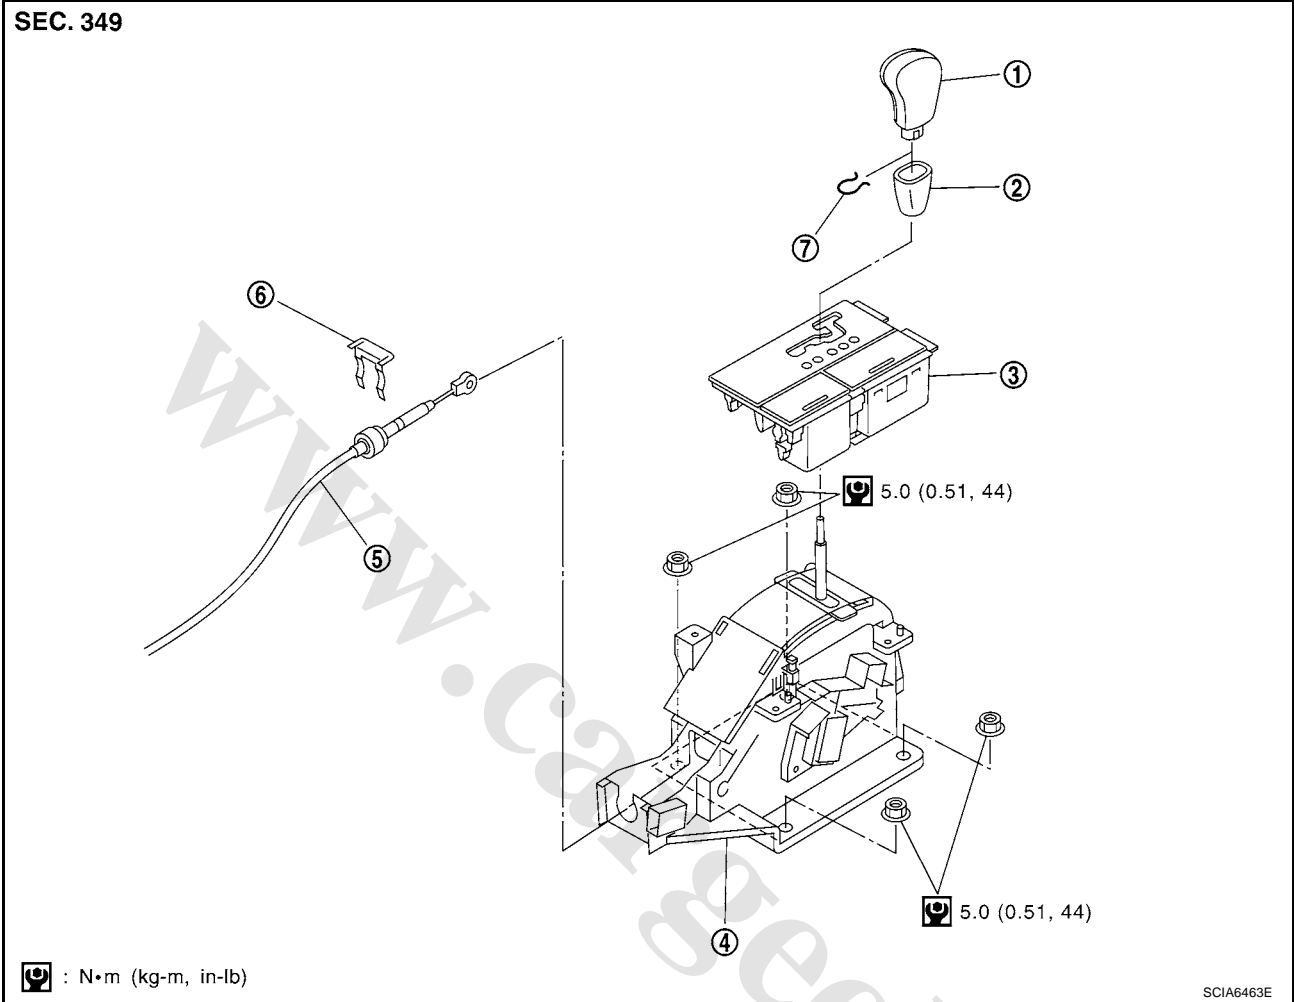

- | | | |
|----------------------------|------------------|-------------------------|
| 1. Selector lever knob | 2. Knob cover | 3. A/T console finisher |
| 4. Control device assembly | 5. Control cable | 6. Lock plate |
| 7. Lock pin | | |

CONTROL CABLE COMPONENTS

Refer to the figure below for control cable removal and installation procedure.

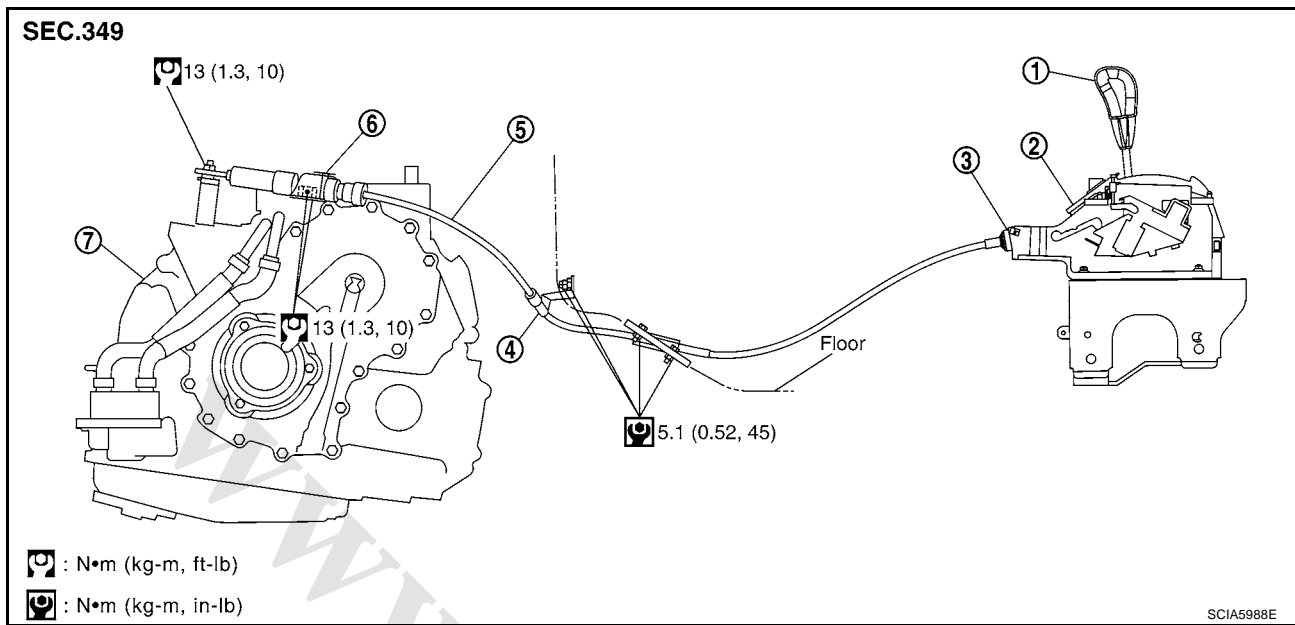


- | | | |
|------------------------|----------------------------|---------------|
| 1. Selector lever knob | 2. Control device assembly | 3. Lock plate |
| 4. Bracket | 5. Control cable | 6. Lock plate |
| 7. Transaxle assembly | | |

REMOVAL

Remove shift control system. Refer to the followings and the figure.


- The followings are the procedure for removing selector lever knob.
 - Remove knob cover below selector lever downward.
 - Pull lock pin out of selector lever knob.
 - Remove selector lever knob.

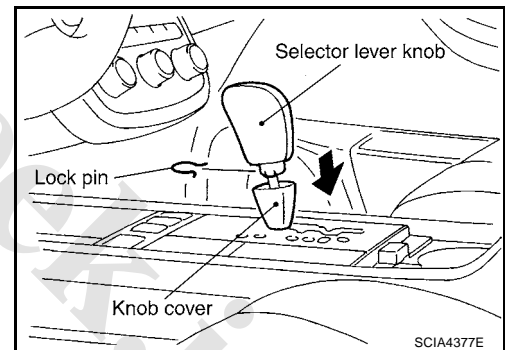

INSTALLATION

Note the following, and install in the reverse order of removal.

- The knurled surface of rib should be upward when installing the control cable to the control device assembly. And insert the control cable securely.
- After installation is completed, adjust and check CVT position. Refer to [CVT-137, "Adjustment of CVT Position"](#) and [CVT-137, "Checking of CVT Position"](#).

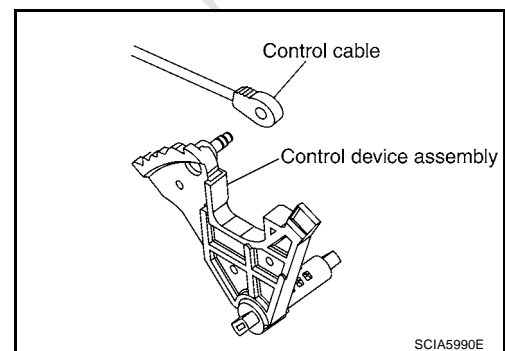

Adjustment of CVT Position

ACS00AKH

1. Place selector lever in "P" position.
2. Loosen control cable nut and place manual lever in "P" position.

CAUTION:

Turn wheels more than 1/4 rotations and apply the park lock.

3. Hold the control cable at the end. Push and pull it twice or three times, and then push it with a load of 9.8N (approximately 1 kg, 2.2 lb). Temporarily tighten the lock nut with the control cable loose.
4. Connect control cable on manual lever.

CAUTION:


No application of a force to the manual lever.

5. Tighten control cable nut.

CAUTION:

Fix the manual lever when tightening.


 : 13 N·m (1.3 kg·m, 10 ft·lb)

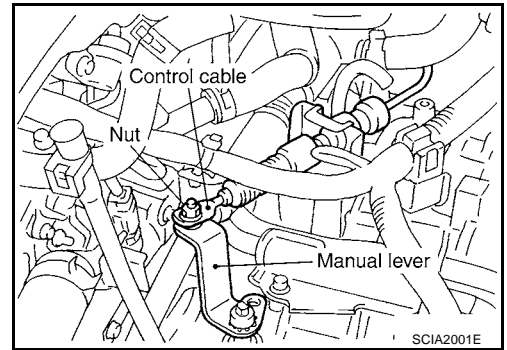

Checking of CVT Position

ACS00AKI

1. Place selector lever in "P" position, and turn ignition switch ON (engine stop).
2. Make sure selector lever can be shifted to other than "P" position when brake pedal is depressed. Also make sure selector lever can be shifted from "P" position only when brake pedal is depressed.
3. Move the selector lever and check for excessive effort, sticking, noise or rattle.
4. Confirm the selector lever stops at each position with the feel of engagement when it is moved through all the positions. Check whether or not the actual position the selector lever is in matches the position shown by the shift position indicator and the transaxle body.
5. The method of operating the lever to individual positions correctly should be as shown in the figure.
6. Confirm the back-up lamps illuminate only when lever is placed in the "R" position. Confirm the back-up lamps do not illuminate when the selector lever is pushed toward the "R" position side with the gear position remained in the "P" or "N" position.
7. Confirm the engine can only be started with the selector lever in the "P" and "N" positions.
8. Make sure transaxle is locked completely in "P" position.
9. When selector lever is set to manual shift gate, make sure manual mode is displayed on combination meter. Shift selector lever to "+" and "-" sides, and make sure set shift position changes.

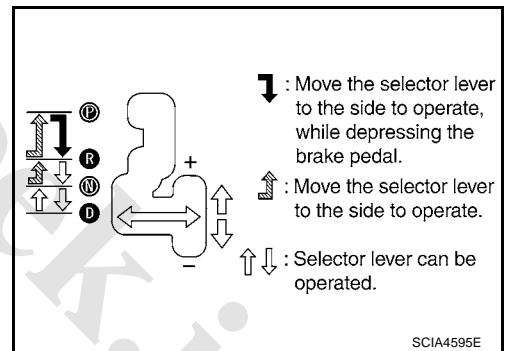


CVT SHIFT LOCK SYSTEM

PFP:00000

Shift Lock System Electrical Parts Location

ACS00AJY

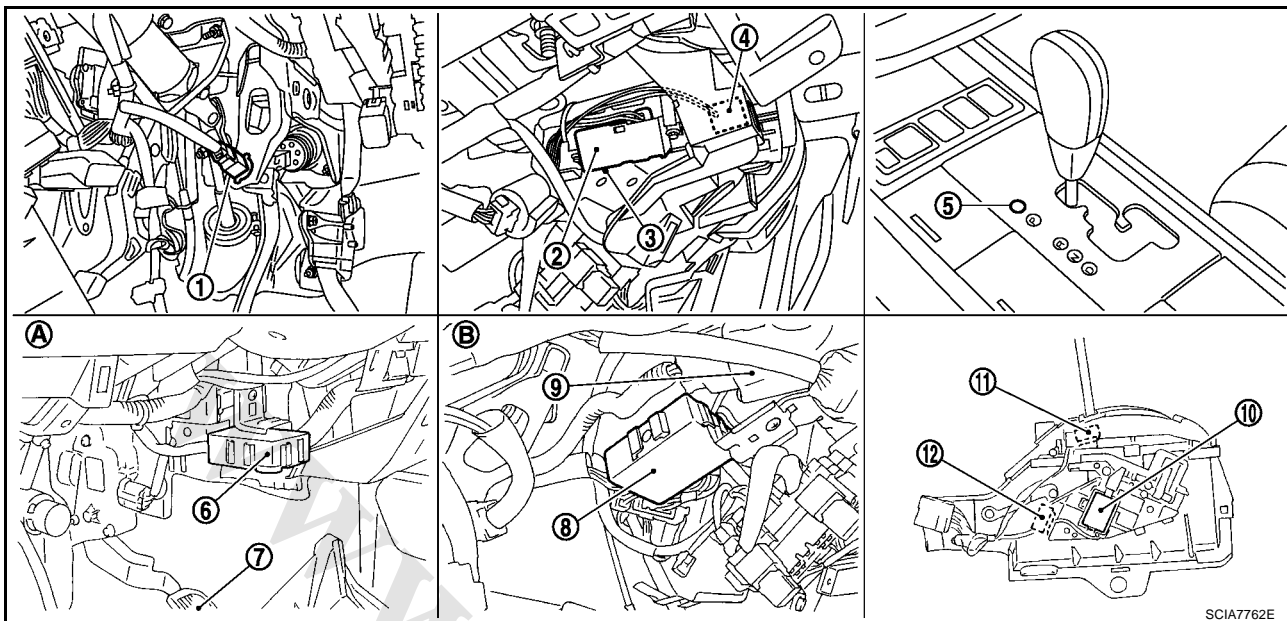

- | | | |
|-------------------------|------------------------------|------------------------------|
| 1. Stop lamp switch | 2. Key lock solenoid | 3. Emergency lever |
| 4. Key switch | 5. Shift lock release button | 6. Shift lock control unit |
| 7. Accelerator pedal | 8. Shift lock control unit | 9. Ignition switch |
| 10. Shift lock solenoid | 11. Detention switch (key) | 12. Detention switch (shift) |
| A. LHD models | B. RHD models | |






NOTE:

This emergency lever can be used when battery is off ignition key cannot be removed. In the situation like this, by operating this lever, ignition key can be removed.



Wiring Diagram — CVT — SHIFT

LHD models

CVT-SHIFT-01

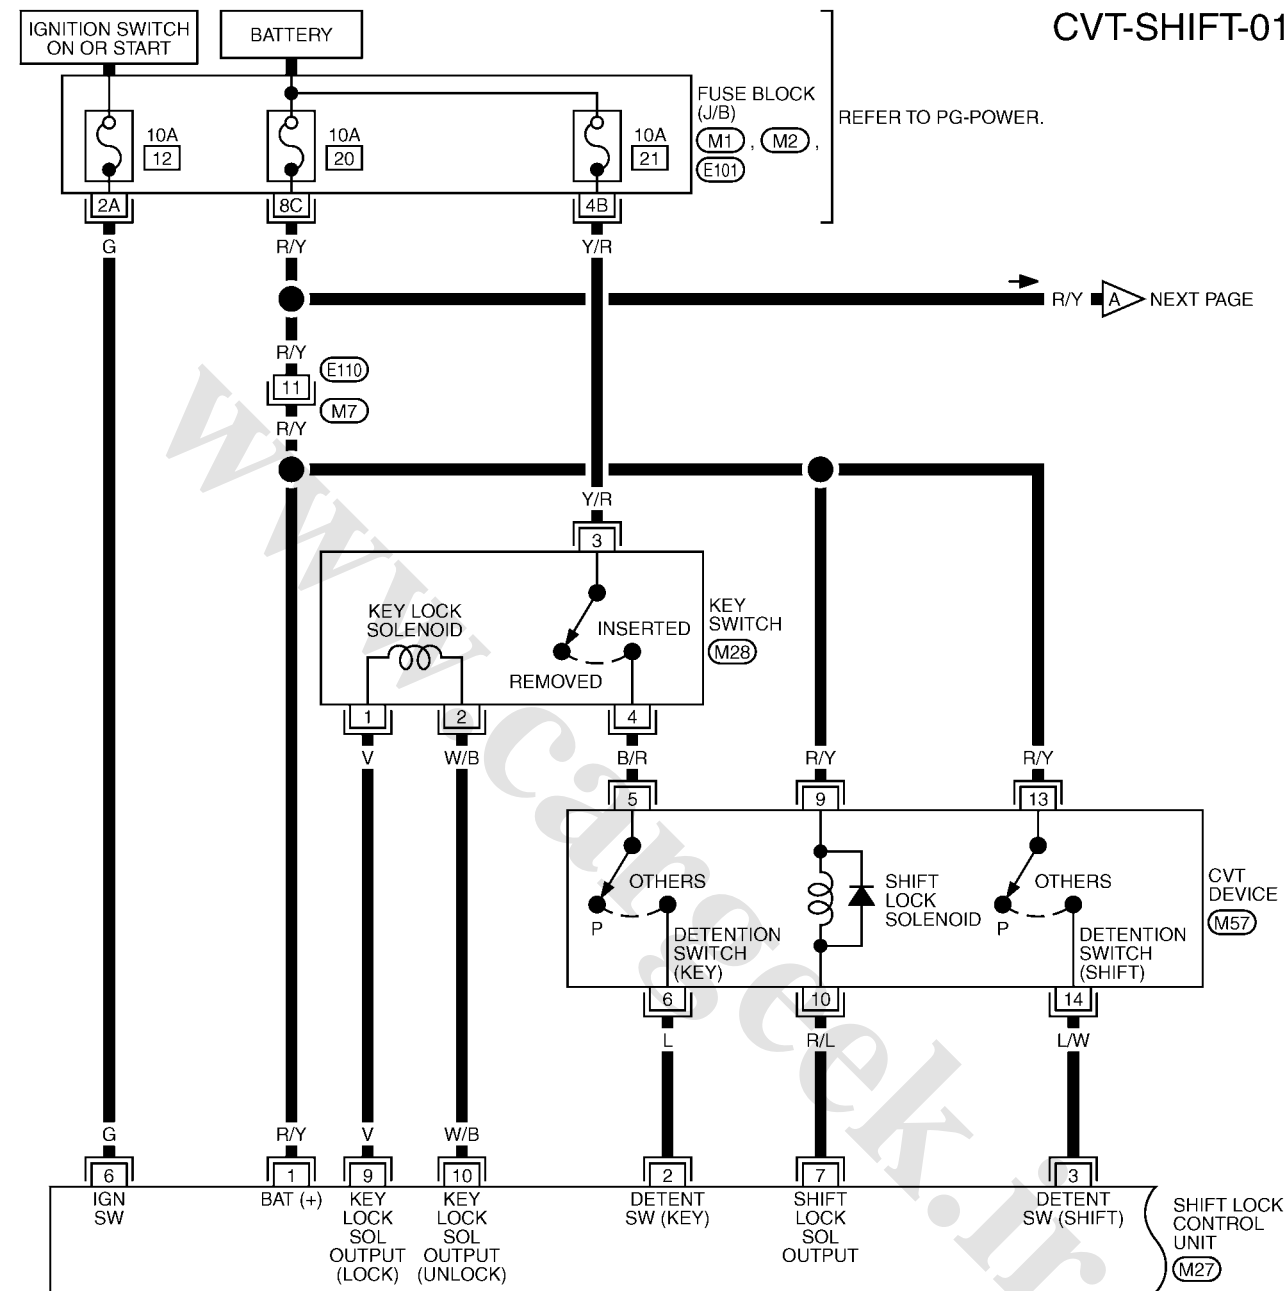


REFER TO THE FOLLOWING.
(M1), (M2), (E101) - FUSE BLOCK-JUNCTION BOX (J/B)

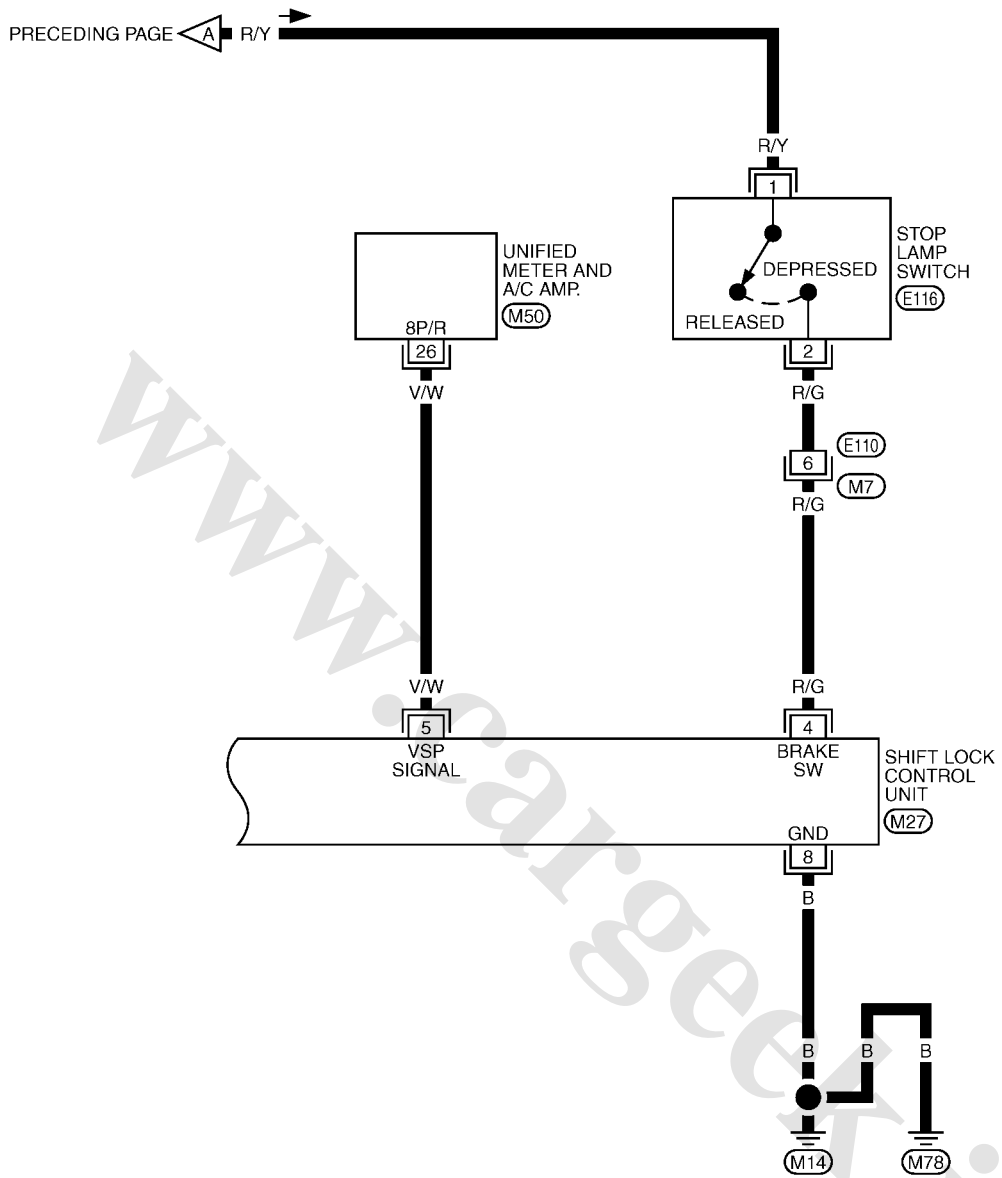

TCWA0166E

Shift Lock Control Unit Reference Values SHIFT LOCK HARNESS CONNECTOR TERMINALS LAYOUT

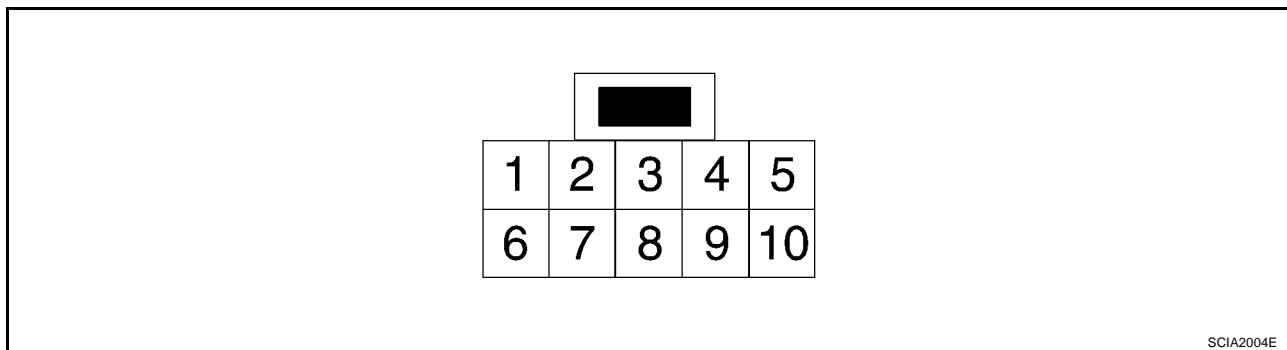

SHIFT LOCK CONTROL UNIT INSPECTION TABLE

Shift lock control unit terminal data are reference values, measured between each terminal and ground.

Terminal (Wire color)	Item	Condition	Judgement standard
1 (R/Y)	Power source	Always	Battery voltage
2 (L)	Detention switch (for key)	When selector lever is not in "P" position with key inserted.	Battery voltage
		When selector lever is in "P" position with key inserted.	Approx. 0 V
3 (L/W)	Detention switch (for shift)	When selector lever is not in "P" position.	Battery voltage
		When selector lever is in "P" position.	Approx. 0 V
4 (R/G)	Stop lamp switch	When brake pedal is depressed	Battery voltage
		When brake pedal is released	Approx. 0 V
5 (V/W)	Vehicle speed signal (8pulse signal)	Speed meter is operated	Refer to DI-23, "Terminals and Reference Value for Unified Meter and A/C Amp."
6 (G)	Ignition signal	Ignition switch: OFF	Approx. 0 V
		Ignition switch: ON	Battery voltage
7 (R/L)	Shift lock solenoid	<ul style="list-style-type: none"> ● When selector lever is in "P" position, brake pedal is depressed, and ignition switch is ON. ● When selector lever is not in "P" position, ignition switch is ON, and vehicle speed is 10 km/h (6 MPH) or less. ● For 3 minutes after selector lever is not in "P" position, vehicle speed is 10 km/h (6 MPH) or less, and ignition switch is ON → OFF. 	Approx. 0 V
		Except the above	Battery voltage
8 (B)	Ground	—	Approx. 0 V
9 (V)	Key lock solenoid	When selector lever is not "P" position.	Battery voltage for approx. 0.1 sec. (Note)
		When selector lever is in "P" position.	Approx. 0 V
10 (W/B)	Key unlock solenoid	When selector lever is in "P" position with ignition switch OFF.	Battery voltage for approx. 0.1 sec. (Note)
		When selector lever is not in "P" position with ignition switch OFF.	Approx. 0 V

NOTE:

Take care that the pointer swings only momentarily because the output time is so short. If the inspection is done with an oscilloscope, it should be observed that the power source voltage lasts for 3.5 to 10 ms.


Component Inspection SHIFT LOCK SOLENOID

Check operation by applying battery voltage to the CVT device harness connector.

CAUTION:

Be sure to apply the voltage of the correct polarity to the respective terminals. Otherwise, the part may be damaged.


Connector	Terminal
M57	9 (Battery voltage) - 10 (Ground)

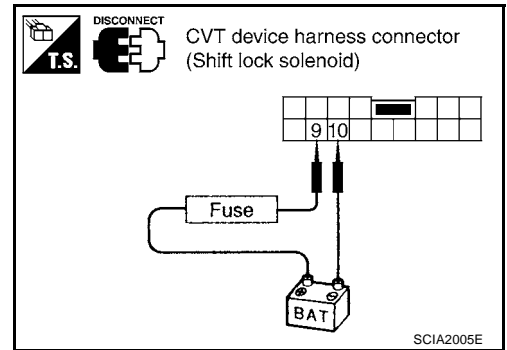

DETENTION SWITCH (FOR KEY)

Check continuity between terminals of the CVT device harness connector.


Condition	Connector	Terminal	Continuity
When selector lever is in "P" position.	M57	5 - 6	No
When selector lever is not in "P" position.			Yes

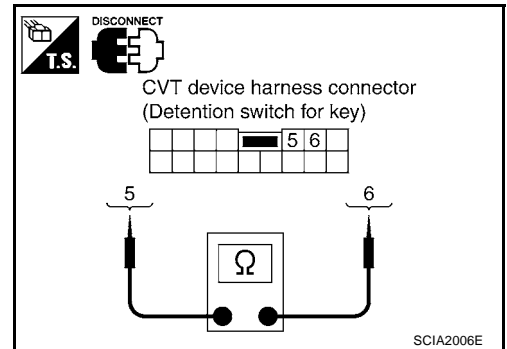

DETENTION SWITCH (FOR SHIFT)

Check continuity between terminals of the CVT device harness connector.

Condition	Connector	Terminal	Continuity
When selector lever is in "P" position.	M57	13 - 14	No
When selector lever is not in "P" position.			Yes

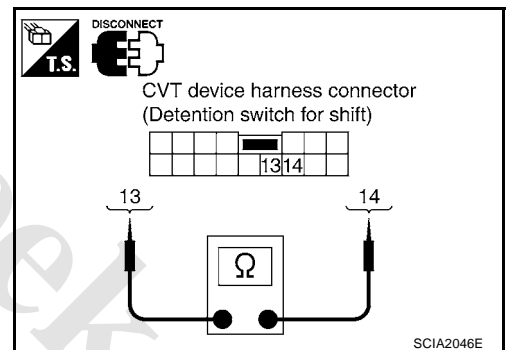

KEY LOCK SOLENOID


Key Lock

Check operation by applying battery voltage to key switch and key lock solenoid harness connector.

CAUTION:

Be careful not to cause burnout of the harness.

Connector	Terminal
M28	1 (Battery voltage) - 2 (Ground)

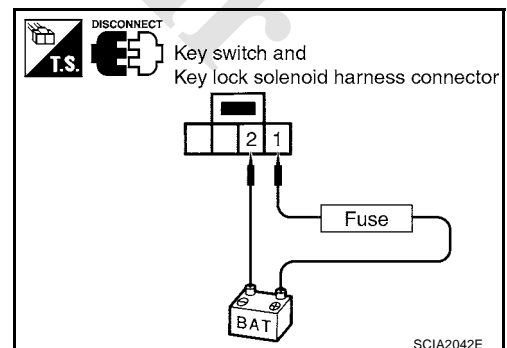


Key Unlock

Check operation by applying battery voltage to key switch and key lock solenoid harness connector.

CAUTION:

Be careful not to cause burnout of the harness.


Connector	Terminal
M28	2 (Battery voltage) - 1 (Ground)

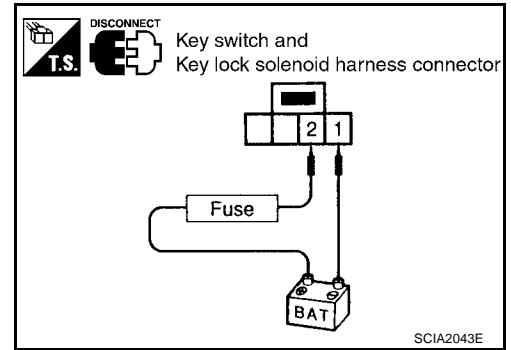

KEY SWITCH

Check continuity between terminals of the key switch and key lock solenoid harness connector.

Condition	Connector	Terminal	Continuity
Key inserted	M28	3 - 4	Yes
Key withdrawn			No

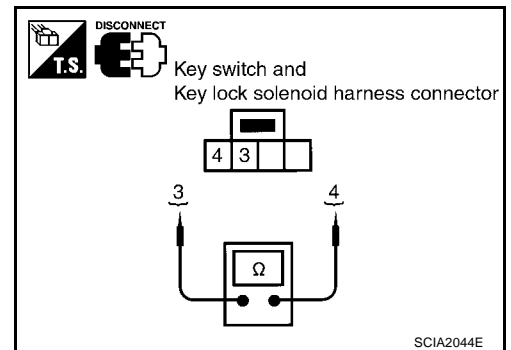


STOP LAMP SWITCH

Check continuity between terminals of the stop lamp switch harness connector.

Condition	Connector	Terminal	Continuity
When brake pedal is depressed	M114	1 - 2	Yes
When brake pedal is released			No

Check stop lamp switch after adjusting brake pedal.

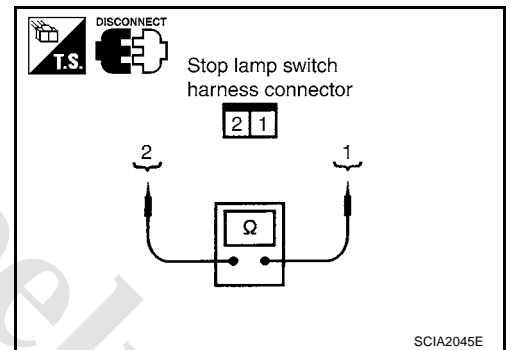


A
B
CVT
D
E
F
G
H
I
J
K
L
M

DIFFERENTIAL SIDE OIL SEAL

PFP:33111

Removal and Installation COMPONENTS

ACS00AK3

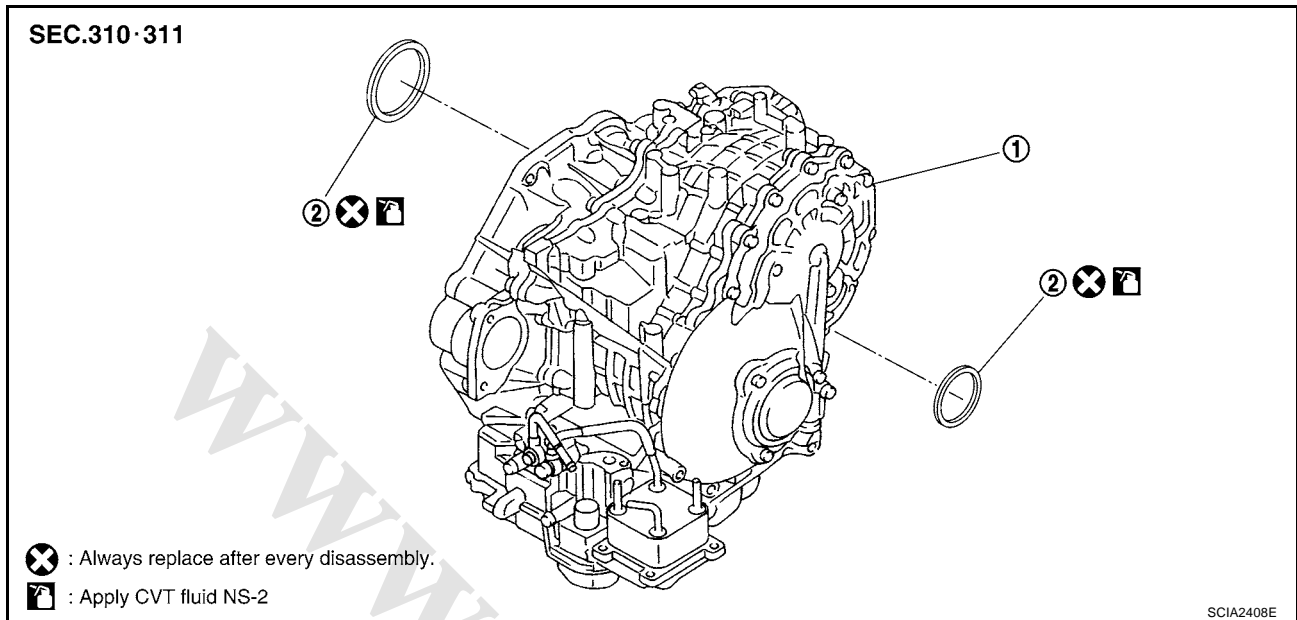

1. Transaxle assembly

2. Differential side oil seal

REMOVAL

Refer to the figure above for differential side oil seals removal procedure.

CAUTION:

Be careful not to scratch transaxle case.

DIFFERENTIAL SIDE OIL SEAL

INSTALLATION


- As shown below, use a drift to drive the differential side oil seal into the case until it is flush. Refer to dimensions A.

Unit: mm (in)

Dimensions A	0±0.5 (0±0.020)
--------------	-----------------


NOTE:

The differential side oil seal pulling direction is used as the reference.

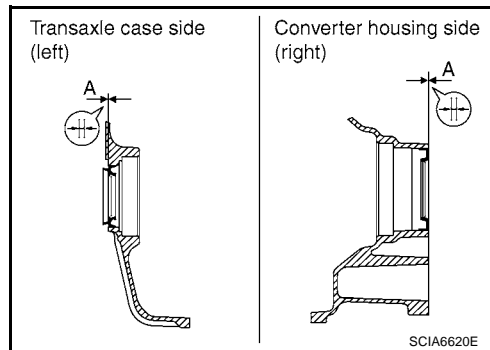

Drift to be used:

Location	Tool number: A
Transaxle case side (left)	ST33400001
Converter housing side (right)	KV40100621

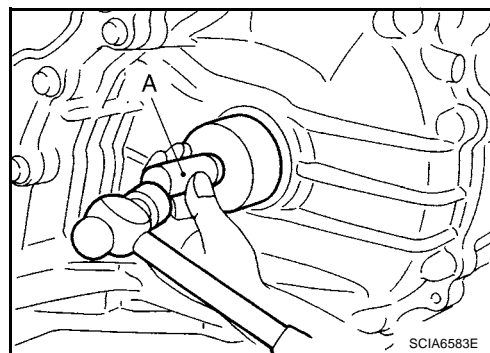

CAUTION:

- Do not reuse differential side oil seals.
- When installing differential side oil seals, apply NISSAN CVT Fluid NS-2.

- Reinstall any part removed.

CAUTION:

If lubricant leak has occurred, after finishing work, check fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#).


A
B
CVT
D
E
F
G
H
I
J
K
L
M

CVT FLUID COOLER SYSTEM

PFP:21600

CVT Fluid Cooler Removal and Installation (For South Africa) COMPONENTS

ACS00AK4

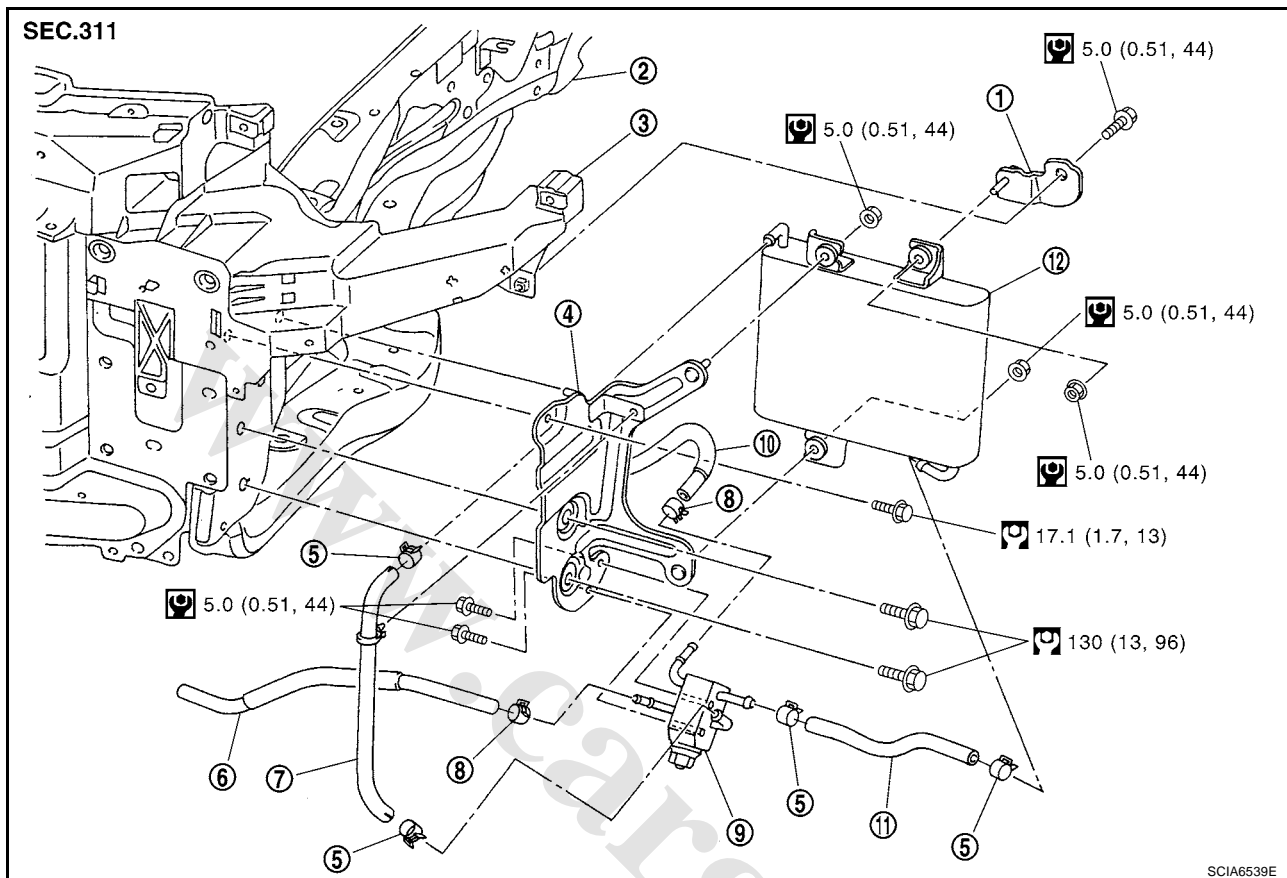

- | | | |
|--|-----------------------------------|--|
| 1. CVT fluid cooler bracket | 2. Side member | 3. Radiator core support (LH) |
| 4. CVT fluid cooler bracket | 5. Hose clamp | 6. CVT fluid cooler hose (radiator to CVT fluid cooler bypass valve) |
| 7. CVT fluid cooler hose (upper) | 8. Hose clamp | 9. CVT fluid cooler bypass valve |
| 10. CVT fluid cooler hose (CVT fluid cooler bypass valve to transaxle) | 11. CVT fluid cooler hose (lower) | 12. CVT fluid cooler |

Refer to GI section to make sure icons (symbol marks) in the figure. Refer to [GI-8. "Components"](#).


REMOVAL

Refer to the figure above for CVT fluid cooler removal procedure.


INSTALLATION

Note the following, and install in the reverse order of removal.


- Note the following instruction when inserting CVT fluid cooler hose (upper) into CVT fluid cooler.
 - When inserting CVT fluid cooler hose (upper) into CVT fluid cooler, insert it so as to fit the paint mark (A).
 - When inserting CVT fluid cooler hose (upper) into CVT fluid cooler, insert it with the paint mark (B) facing upward.
 - Install a pawl of hose clamp (1) with it facing upward.

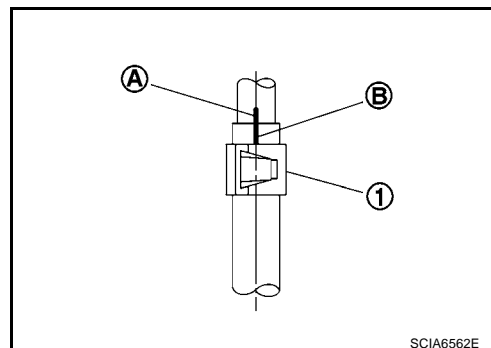


- Note the following instruction when inserting CVT fluid cooler hose (upper) into CVT fluid cooler bypass valve.
 - When inserting CVT fluid cooler hose (upper) into CVT fluid cooler bypass valve, insert it so as to fit the paint mark (A).
 - When inserting CVT fluid cooler hose (upper) into CVT fluid cooler, insert it with the paint mark (B) facing 45 degrees forward of the left side of the vehicle.
 - Install a pawl of hose clamp (1) with it facing 45 degrees forward of the left side of the vehicle.

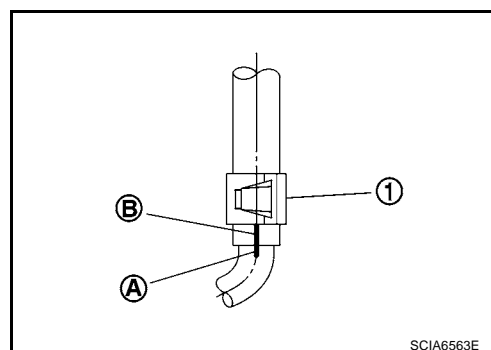

- Insert a clip (1) into bracket mounting hole, and fix CVT fluid cooler hose (upper) securely.

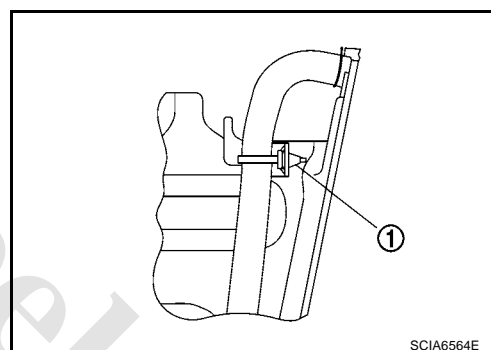


- Note the following instruction when inserting CVT fluid cooler hose (lower) into CVT fluid cooler.
 - When inserting CVT fluid cooler hose (lower) into CVT fluid cooler, insert it so as to fit the paint mark (A).
 - When inserting CVT fluid cooler hose (lower) into CVT fluid cooler, insert it with the paint mark (B) facing backward of the vehicle.
 - Install a pawl of hose clamp (1) with it facing backward of the vehicle.

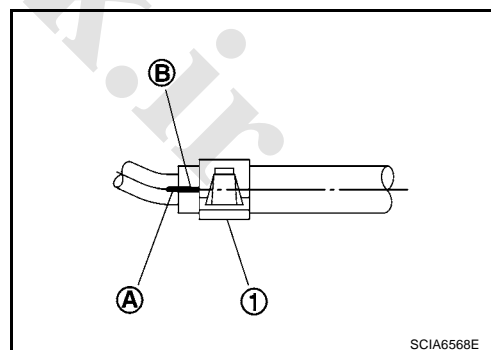


CVT FLUID COOLER SYSTEM

www.CarGeek.ir


- Note the following instruction when inserting CVT fluid cooler hose (lower) into CVT fluid cooler bypass valve.
 - When inserting CVT fluid cooler hose (lower) into CVT fluid cooler bypass valve, insert it so as to fit the paint mark (A).
 - When inserting CVT fluid cooler hose (lower) into CVT fluid cooler bypass valve, insert it with the paint mark (B) facing backward of the vehicle.
 - Install a pawl of hose clamp (1) with it facing backward of the vehicle.

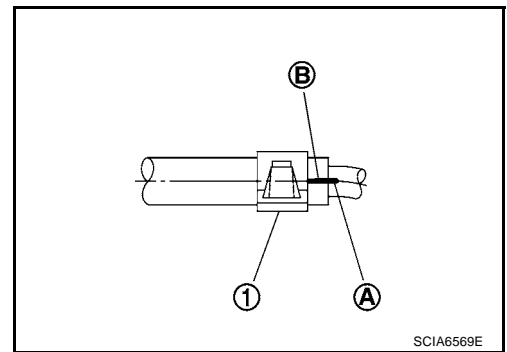

- Note the following instruction when inserting CVT fluid cooler hose (radiator to CVT fluid cooler bypass valve) into CVT fluid cooler bypass valve.
 - When inserting CVT fluid cooler hose (radiator to CVT fluid cooler bypass valve) into CVT fluid cooler bypass valve, insert it to the two-stage bulge.
 - When inserting CVT fluid cooler hose (radiator to CVT fluid cooler bypass valve) into CVT fluid cooler bypass valve, insert it with the paint mark (A) facing 45 degrees backward of the downside of the vehicle.
 - Install a pawl of hose clamp (1) with it facing 45 degrees backward of the downside of the vehicle.

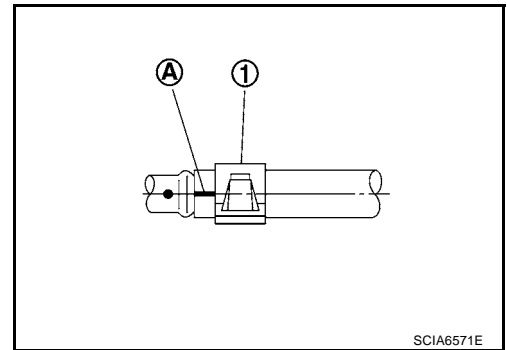


- Note the following instruction when inserting CVT fluid cooler hose (CVT fluid cooler bypass valve to transaxle) into CVT fluid cooler bypass valve.
 - When inserting CVT fluid cooler hose (CVT fluid cooler bypass valve to transaxle) into CVT fluid cooler bypass valve, insert it to the two-stage bulge.
 - When inserting CVT fluid cooler hose (CVT fluid cooler bypass valve to transaxle) into CVT fluid cooler bypass valve, insert it with the paint mark (A) facing 45 degrees leftward of the downside of the vehicle.
 - Install a pawl of hose clamp (1) with it facing 45 degrees leftward of the downside of the vehicle.
- Install hoses clamp on the position of 5 mm (0.20 in) from the edge of CVT fluid cooler hose.

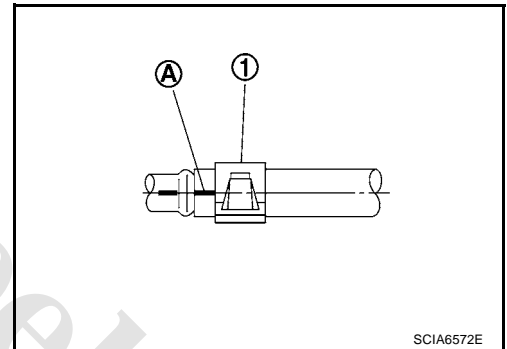


Distance A: 5 mm (0.20 in)

- After completing installation, check for fluid leakage and fluid level. Refer to [CVT-17, "Checking CVT Fluid"](#).

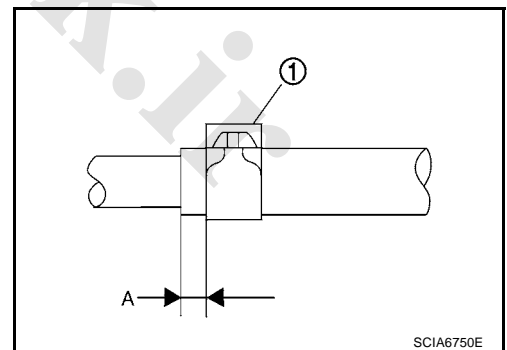

CVT Fluid Cooler Valve Removal and Installation COMPONENTS

A
B
CVT
D
E
F
G
H
I
J
K
L
M

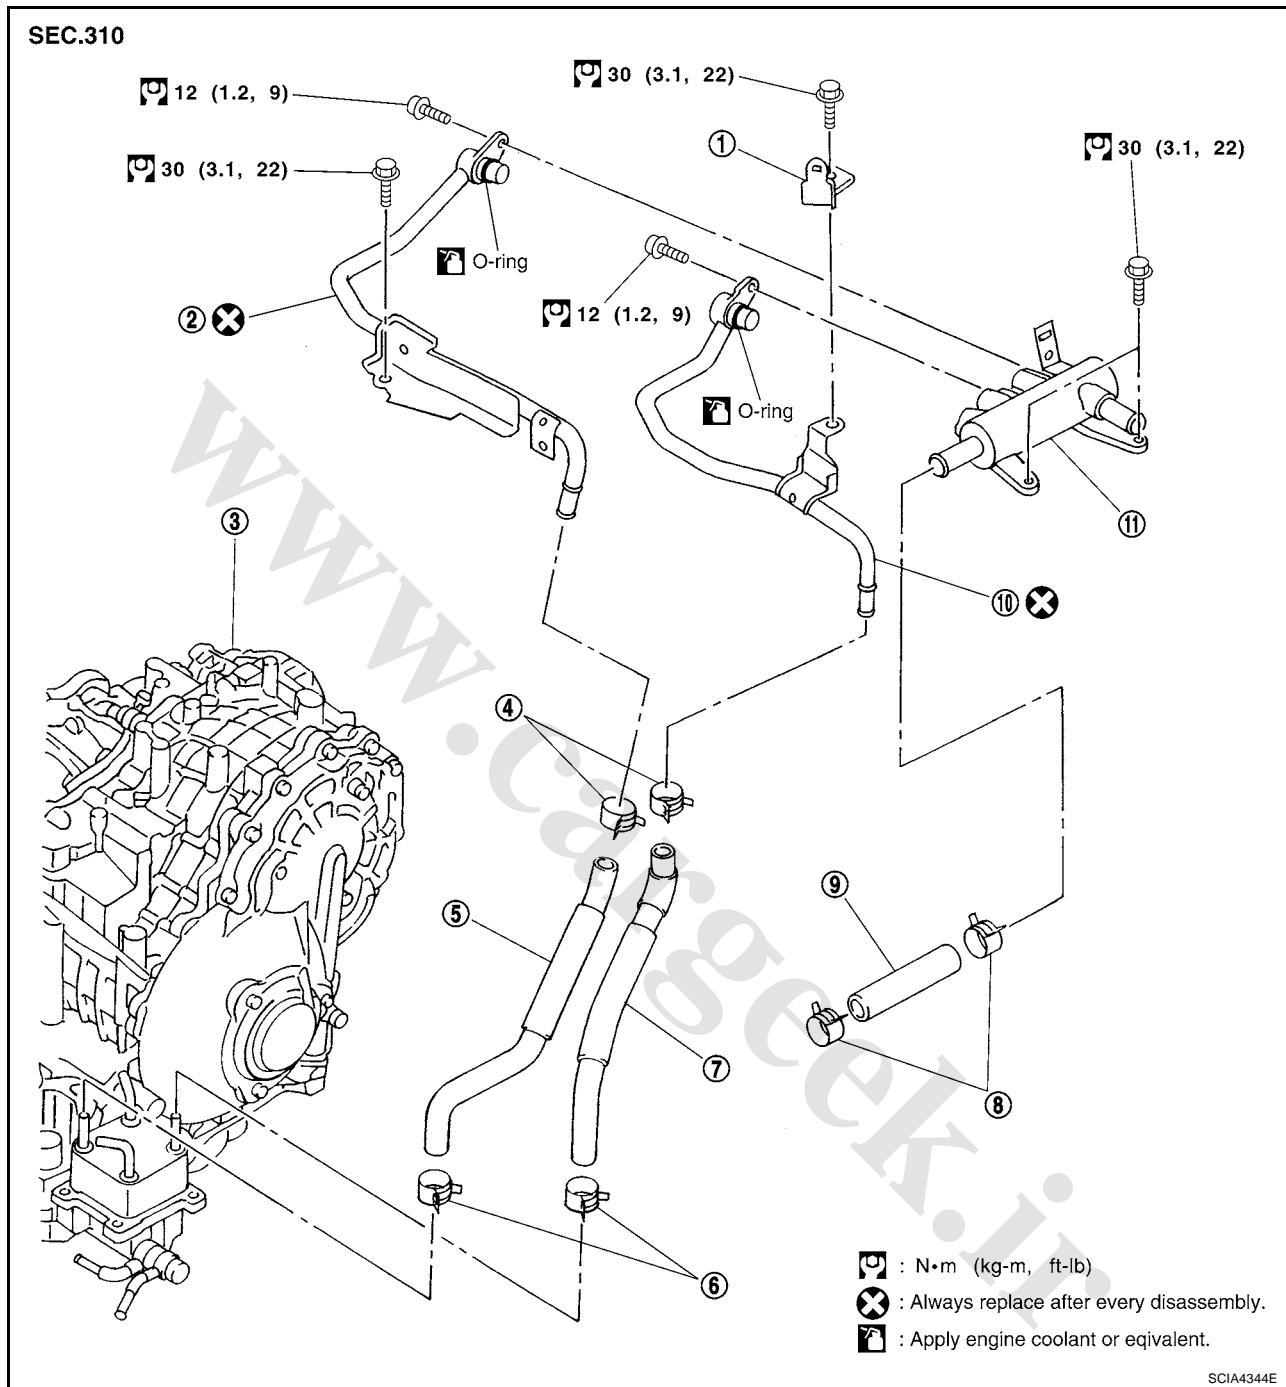

- | | | |
|---|---|-----------------------|
| 1. Harness bracket | 2. CVT fluid cooler inlet tube assembly | 3. Transaxle assembly |
| 4. Hose clamp | 5. Inlet water hose | 6. Hose clamp |
| 7. Outlet water hose | 8. Hose clamp | 9. Heater hose |
| 10. CVT fluid cooler outlet tube assembly | 11. CVT fluid cooler valve assembly | |

REMOVAL

Refer to the figure above for CVT fluid cooler valve removal procedure.

WARNING:

Never remove the radiator cap when the engine is hot. Serious burns could occur from high pressure engine coolant escaping from the radiator.

CAUTION:

Perform when the engine is cold.

INSTALLATION

Note the following, and install in the reverse order of removal.

- After completing installation, check for engine coolant leakage, engine coolant level, and the positions of CVT. Refer to [CVT-137, "Checking of CVT Position"](#).

CAUTION:

- Install hose clamp with tabs aligned with markings of CVT fluid cooler valve assembly and each hose.
- Do not reuse CVT fluid cooler inlet tube assembly and CVT fluid cooler outlet tube assembly.
- Apply LLC around O-ring when installing CVT fluid cooler inlet tube and CVT fluid cooler outlet tube assembly to CVT fluid cooler valve assembly.


COMPONENT INSPECTION

1. Make sure that CVT fluid cooler valve is fully opened at room temperature.


Standard

Dimension A from CVT fluid cooler valve port end to tip of valve shaft
(At room temperature):

Approx. 72.0 mm (2.835 in) or more

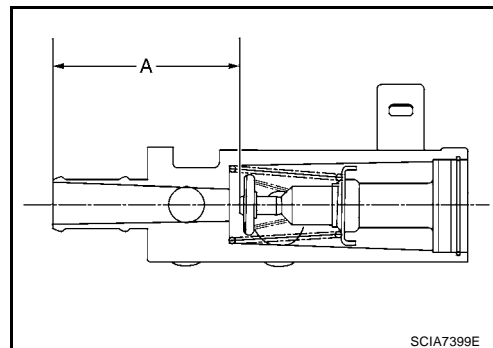

2. Put CVT fluid cooler valve into a water-filled container, and then heat it up to 82°C (180°F) or more for 10 minutes or more.

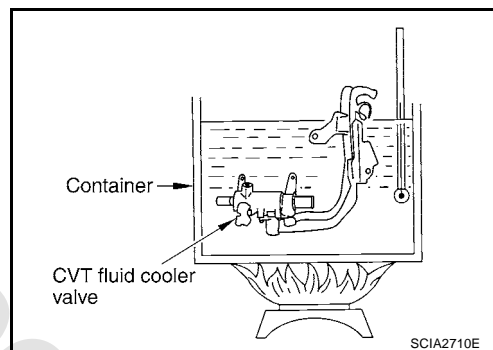


3. Make sure that CVT fluid cooler valve is fully closed.

Standard


Dimension A from CVT fluid cooler valve port end to tip of valve shaft
(When heating to 82°C (180°F) or more for 10 minutes or more):

Approx. 66.5 mm (2.618 in) or less

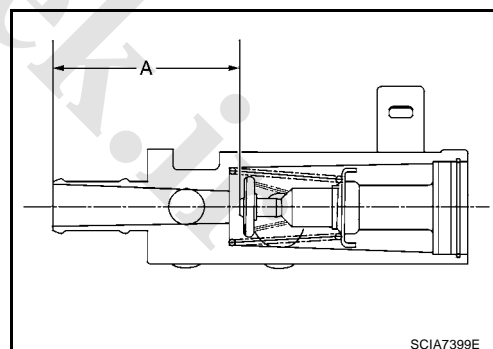

TRANSAXLE ASSEMBLY
Removal and Installation
COMPONENTS

ACS00AK7

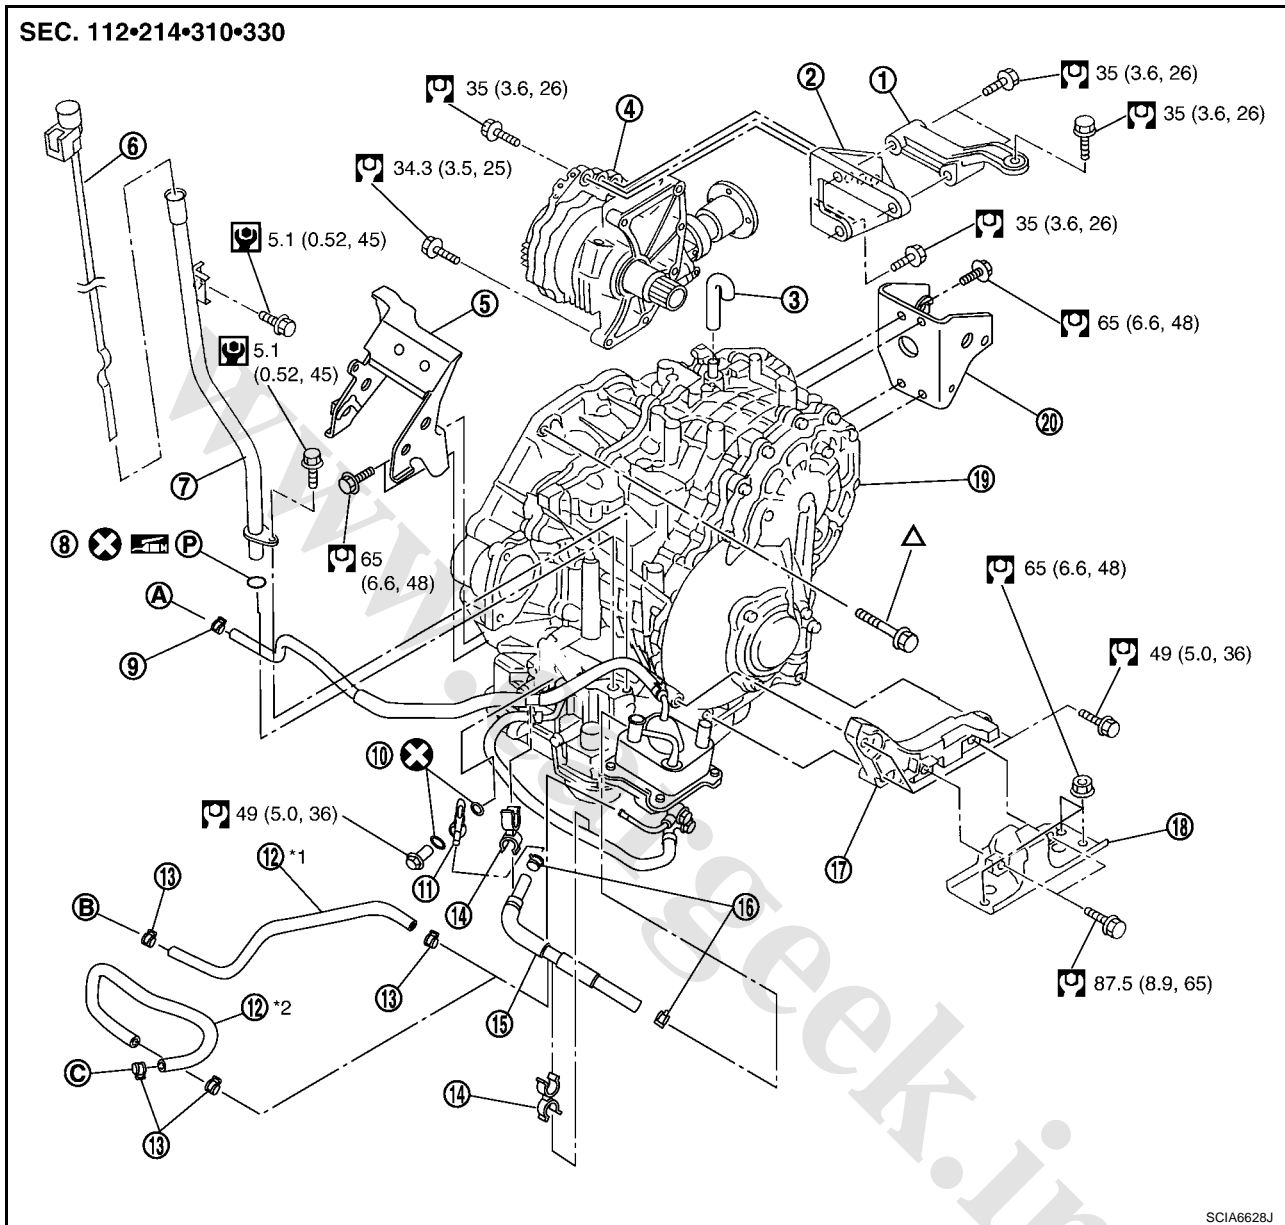

SCIA6628J

- | | | |
|----------------------------|----------------------------------|----------------------------------|
| 1. Rear gusset | 2. Transfer gusset | 3. Air breather hose |
| 4. Transfer assembly | 5. Front engine mounting bracket | 6. CVT fluid level gauge |
| 7. CVT fluid charging pipe | 8. O-ring | 9. Hose clamp |
| 10. Copper washer | 11. Fluid cooler tube | 12. CVT fluid cooler hose |
| 13. Hose clamp | 14. Clip | 15. CVT fluid cooler hose |
| 16. Hose clamp | 17. LH engine mounting bracket | 18. LH engine mounting insulator |
| 19. Transaxle assembly | 20. Rear engine mounting bracket | |

Refer to GI section to make sure icons (symbol marks) in the figure. Refer to [GI-8. "Components"](#) .

However, refer to the following symbols for others.

△ : For tightening torque, refer to [CVT-155. "INSTALLATION"](#) .

*1: Except For South Africa

*2: For South Africa

(A) : To radiator

(B) : From radiator


(C) : From CVT fluid cooler

REMOVAL

Remove transaxle assembly. Refer to the followings and the figure.

CAUTION:


- The transaxle assembly itself cannot be removed from the vehicle. Remove the transaxle assembly and engine assembly together from the vehicle.
 - The crankshaft should be rotated clockwise (viewed from the front of the engine) when rotating crankshaft and removing tightening nuts of drive plate and torque converter.
 - Be sure to replace the differential side oil seal with new one at the every removal of drive shaft. Refer to [CVT-146, "Removal and Installation"](#) .
 - Be sure to replace the differential side oil seal with new one (converter housing side only) at the every removal of transfer. Refer to [CVT-146, "Removal and Installation"](#) .
 - Refer to the followings when removing crankshaft position sensor.
 - Do not subject it to impact by dropping or hitting it.
 - Do not disassemble.
 - Do not allow metal filings, etc., to get on the sensor's front edge magnetic area.
 - Do not place in an area affected by magnetism.
 - The followings are the procedure for removing transaxle assembly from engine assembly.
1. Install slinger to transaxle assembly.

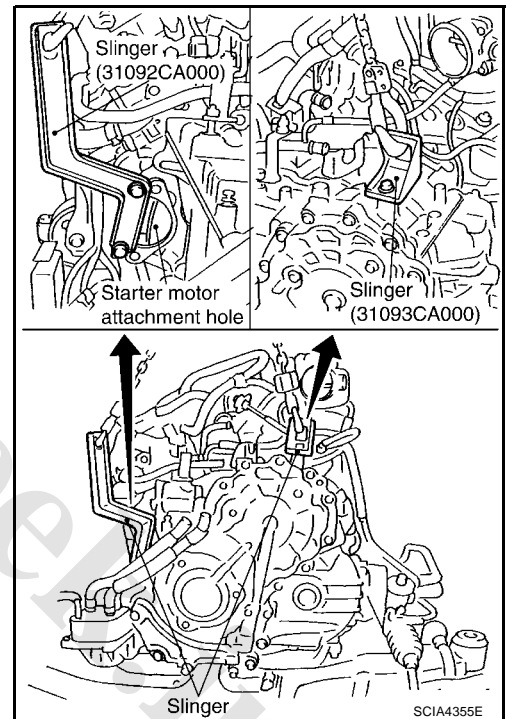

2. Remove transaxle assembly from engine assembly with a hoist.

CAUTION:

Secure torque converter to prevent it from dropping.

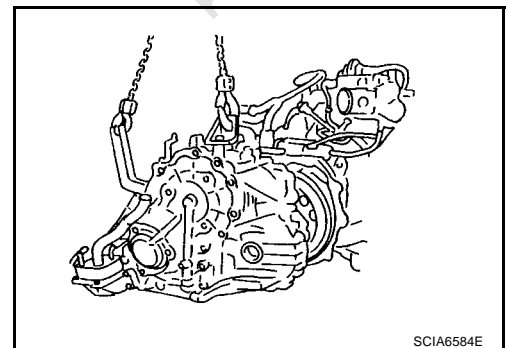


INSPECTION

Installation and Inspection of Torque Converter

- After inserting a torque converter to a transaxle, be sure to check distance "A" to ensure it is within the reference value limit.


Distance "A": 14.0 mm (0.55 in) or more

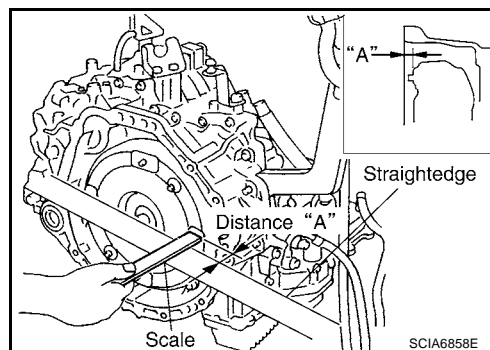


INSTALLATION

Note the following, and install in the reverse order of removal.


- Set and screw in the drive plate location guide onto the stud bolts for the torque converter locate.

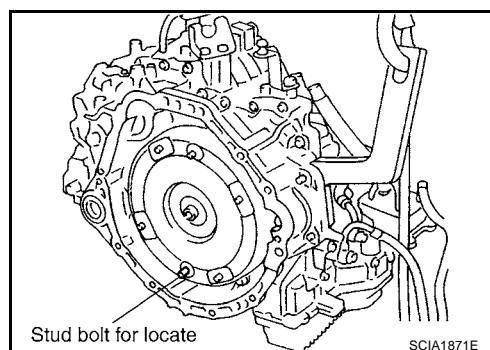

- Rotate the torque converter for the locate to go down.

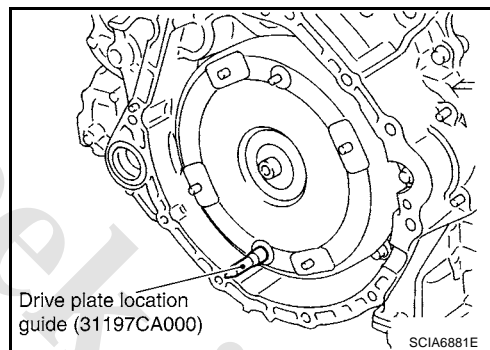


- Rotate the drive plate for the hole of the drive plate locate to go down.

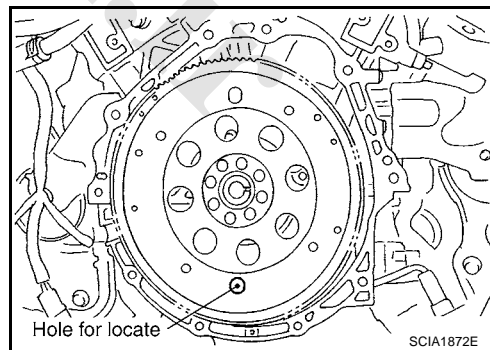


A
 B
 CVT
 D
 E
 F
 G
 H
 I
 J
 K
 L
 M

- Install transaxle assembly to engine assembly with a hoist.

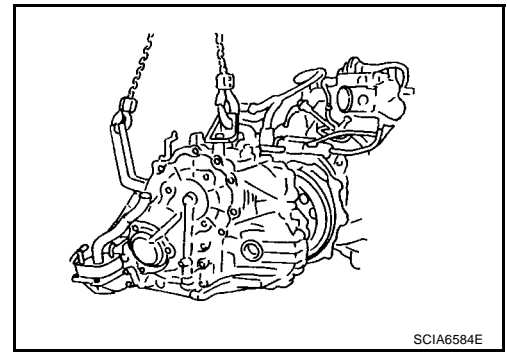


- When installing fluid cooler tube to transaxle assembly, assemble the part with the tube aligned with the rib.

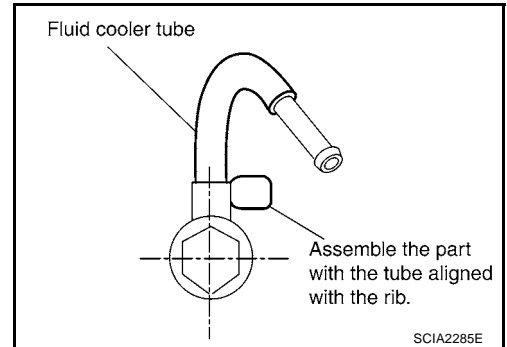

- When installing transaxle to the engine, attach the fixing bolts in accordance with the following standard.

Bolt No.	1	2	3	4
Number of bolts	1	2	2	4
Bolt length "ℓ"mm (in)	52 (2.05)	36 (1.42)	105 (4.13)	35 (1.38)
Tightening torque N-m (kg-m, ft-lb)	75 (7.7, 55)			47 (4.8, 35)

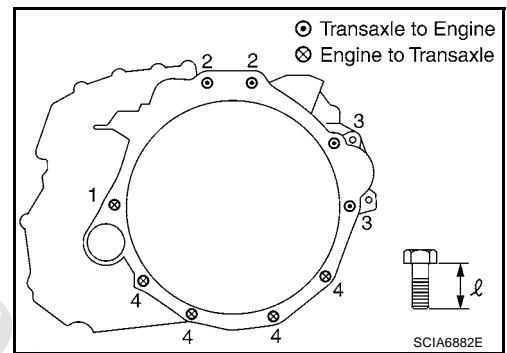


- Align the positions of tightening nuts for drive plate with those of the torque converter, and temporarily tighten the nuts. Then, tighten the nuts with the specified torque.

: 51 N-m (5.2 kg-m, 38 ft-lb)

CAUTION:

- Do not reuse O-ring and copper washers.
- When turning crankshaft, turn it clockwise as viewed from the front of the engine.
- When tightening the tightening nuts for the torque converter after fixing the crankshaft pulley bolts, be sure to confirm the tightening torque of the crankshaft pulley mounting bolts. Refer to [EM-40, "Tightening Torque"](#) .
- After converter is installed to drive plate, rotate crankshaft several turns and check to be sure that transaxle rotates freely without binding.
- Install crankshaft position sensor (POS). Refer to [EM-6, "OIL PAN AND OIL STRAINER"](#) .
- After completing installation, check for fluid leakage, fluid level, and the positions of CVT. Refer to [CVT-17, "Checking CVT Fluid"](#) , [CVT-137, "Adjustment of CVT Position"](#) , [CVT-137, "Checking of CVT Position"](#) .
- When replacing the CVT assembly, erase EEPROM in TCM. Refer to [CVT-12, "Precautions for TCM and CVT Assembly Replacement"](#) .

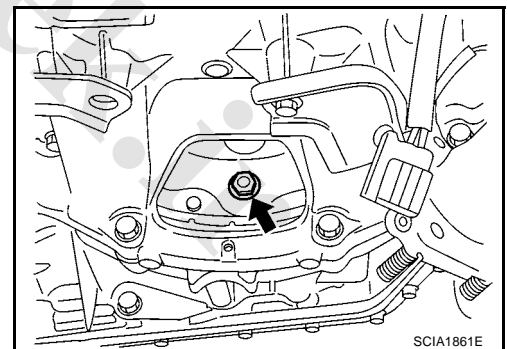

SERVICE DATA AND SPECIFICATIONS (SDS)

PPF:00030

General Specifications

ACS00AK8

Applied model		VQ35DE engine
		4WD
CVT model		RE0F09A
CVT assembly	Model code number	1XD16
Transmission gear ratio	D range	Variable
	Reverse	1.766
	Final drive	5.173
Recommended fluid		Genuine NISSAN CVT fluid NS-2*1
Fluid capacity		9.8 liter (8-5/8 Imp qt)

CAUTION:

- Use only Genuine NISSAN CVT fluid NS-2. Do not mix with other fluid.
- Using CVT fluid other than Genuine NISSAN CVT fluid NS-2 will deteriorate in driveability and CVT durability, and may damage the CVT, which is not covered by the warranty.

*1: Refer to [MA-12, "Fluids and Lubricants"](#).

Vehicle Speed at Which Gear Shifting Occurs

ACS00AK9

Numerical value data are reference values.

Engine type	Throttle position	Shift pattern	Engine speed (rpm)	
			At 40 km/h (25 MPH)	At 60 km/h (37 MPH)
VQ35DE	8/8	"D" position	2,800 - 4,300	3,900 - 5,300
	2/8	"D" position	1,200 - 2,000	1,300 - 2,100

CAUTION:

Lock-up clutch is engaged when vehicle speed is approximately 18 km/h (11 MPH) to 90 km/h (56 MPH).

Stall Speed

ACS00AKA

Stall speed	2,700 - 3,250 rpm
-------------	-------------------

Line Pressure

ACS00AKB

Engine	Engine speed	Line pressure kPa (bar, kg/cm ² , psi)
		"R", "D" positions
VQ35DE	At idle speed	750 (7.50, 7.65, 108.8)
	At stall speed	5,700 (57.00, 58.14, 826.5)* ¹

*¹: Reference values

Solenoid Valves

ACS00AKC

Name	Resistance (Approx.) (Ω)	Terminal
Pressure control solenoid valve B (Secondary pressure solenoid valve)	3.0 - 9.0	3
Pressure control solenoid valve A (Line pressure solenoid valve)		2
Torque converter clutch solenoid valve		12
Lock-up select solenoid valve	6.0 - 19.0	13

SERVICE DATA AND SPECIFICATIONS (SDS)

www.CarGeek.ir

CVT Fluid Temperature Sensor

ACS00AKD

Item name	Condition	CONSULT-II "DATA MONITOR" (Approx.) (V)	Resistance (Approx.) (kΩ)
ATF TEMP SEN	20°C (68°F)	1.8 - 2.0	6.5
	80°C (176°F)	0.6 - 1.0	0.9

Primary Speed Sensor

ACS00AKE

Name	Condition	Data (Approx.)
Primary speed sensor	When driving ["D" position, 20 km/h (12 MPH)].	600 Hz

Secondary Speed Sensor

ACS00AKF

Name	Condition	Data (Approx.)
Secondary speed sensor	When driving ["D" position, 20 km/h (12 MPH)].	300 Hz

Removal and Installation

ACS00AKG

Distance between end of converter housing and torque converter	14.0 mm (0.55 in) or more
--	---------------------------